

**R. F. SIGNAL GENERATOR
SET AN/URM-25B**

This copy is a reprint which includes current pages from change 1.

R. F. SIGNAL GENERATOR SET AN/URM-25B

CHANGE }
No. 1 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 19 November 1963

TM 11-5551B, 25 January 1954, is changed as follows:

Page 1-1. Add paragraphs 1.1 and 1.2 after paragraph 1.

1.1. Index of Publications

Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes or additional publications pertaining to the equipment. DA Pam 3104 is an index of current technical manuals, technical bulletins, Supply manuals (types 4, 6, 7, 8, and 9), supply bulletins, lubrication orders, and modification work orders available through publications supply channels. The index lists the individual parts (-10, -20, -35P, etc) and the latest changes to and revisions of each equipment publication.

1.2. Forms and Records

a Reports of Maintenance and Unsatisfactory Equipment. Use equipment forms and records in accordance with instructions in TM 38-750.

b Report of Damaged or Improper Shipment. Fill out and forward DD Form 6 (Report of Damaged or Improper Shipment) as prescribed in AR 700-58 (Army), NAVASANDA Publication 378 (Navy), and AFR 71-4 (Air Force).

c Reporting of Equipment Manual Improvements. The direct reporting by the individual user of errors, omissions, and recommendations for improving this manual is authorized and encouraged. DA Form 2028 (Recommended changes to DA technical manual parts lists or supply manual 7, 8, or 9) will be used for reporting these improvements. This form will be completed in triplicate using pencil, pen, or typewriter. The original and one copy will be forwarded direct to Commanding Officer, U. S. Army Electronics Material Support Agency, ATTN: SELMS-MP, Fort Monmouth, N. J. 07703. One information copy will be furnished to the individual's immediate supervisor (officer, noncommissioned officer, supervisor, etc).

Page 5-1. Delete paragraph 1 and substitute:

1. Scope of Maintenance

The maintenance duties assigned to the operator and organizational repairman of the equipment are listed below together with a reference to the paragraphs covering the specific maintenance functions.

- a Daily preventive maintenance checks and services (par. 1.3).
 - b Weekly preventive maintenance checks and services (par. 1.4).
 - c Monthly preventive maintenance checks and services (par. 1.5).
 - d Quarterly preventive maintenance checks and services (par. 1.6).
 - e Cleaning (par. 1.7).
 - f Touchup painting (par. 1.8).
 - g Routine check (table 5-1).
- Add paragraphs 1.1 through 1.8 after paragraph 1.

1.1. Preventive Maintenance

Preventive maintenance is the systematic care, servicing, and inspection of equipment to prevent the occurrence of trouble, to reduce downtime, and to assure that the equipment is serviceable.

a Systematic Care. The procedures given in paragraphs 1.3 through 1.7 cover routine systematic care and cleaning essential to proper upkeep and operation of the equipment.

b. Preventive Maintenance Checks and Services. The preventive maintenance checks and services charts (par. 1.3-1.6) outline functions to be performed at specific intervals. These checks and services are to maintain Army electronic equipment in a combat serviceable condition; that is, in good general (physical) condition and in good operating condition. To assist operators in maintaining combat serviceability, the charts indicate what to check, how to check, and what the normal conditions are; the references column lists the tables or manuals that contain detailed repair or

replacement procedures. If the defect cannot be remedied by performing the corrective actions listed, higher echelon maintenance or repair is required. Records and reports of these checks and services must be made in accordance with the requirements set forth in TM 38-750.

1.2. Preventive Maintenance Checks and Services Periods

Preventive maintenance checks and services of the

1.3. Daily Preventive Maintenance Checks and Services Chart

| Sequence No. | Item | Procedure | References |
|--------------|------------------------------|---|------------|
| 1 | Completeness | See that the equipment is complete | Table 1-1 |
| 2 | Exterior surface | Clean the exterior surfaces, including the panel, dial windows, and meter glass (par. 1.7). Check all glass and indicator lens for cracks. | |
| 3 | Connectors..... | Check the tightness of all connectors | |
| 4 | Controls and indicators..... | While making the operating checks (item 5), observe that the mechanical action of each knob, dial, and switch is smooth and free of external or internal binding, and that there is no excessive looseness. Also, check the meter for sticking or bent pointer. | |
| 5 | Operation | Operate the equipment according to table 5-1..... | |

1.4. Weekly Preventive Maintenance Checks and Services Chart

| Sequence No. | Item | Procedure | References |
|--------------|------------------------|---|------------|
| 1 | Cables..... | Inspect or, cables and wires for chafed, cracked, or frayed insulation. Replace connectors that are broken, arced, stripped, or worn excessively. | None |
| 2 | Handles and latch..... | Inspect handles and latches for looseness. Replace or tighten as necessary. | None |
| 3 | Metal surfaces | Inspect exposed metal surfaces for rust and corrosion. Touchup paint as required (par. 1.8). | None |

1.5. Monthly Preventive Maintenance Checks and Services Chart

| Sequence No. | Item | Procedure | References |
|--------------|--------------------------------|---|------------|
| 1 | Pluckout items..... | Inspect seating of pluckout items. Make certain that tube clamps grip tube bases tightly | None |
| 2 | Jacks | Inspect jacks for snug fit and good contact | None |
| 3 | Transformer terminals | Inspect the terminals on the power transformer. All nuts must be tight. There should be no evidence of dirt or corrosion. | None |
| 4 | Terminal blocks..... | Inspect terminal blocks for loose connections and cracked or broken insulation | None |
| 5 | Resistors and capacitors | Inspect the resistors and capacitors for cracks, blistering, or other detrimental defects | None |
| 6 | Gaskets and insulators | Inspect gaskets, insulators, bushings, and sleeves for cracks, chipping, and excessive wear. | None |
| 7 | Variable capacitors..... | Inspect variable capacitors for dirt, corrosion and deformed plates. | None |
| 8 | Interior | Clean interior of chassis and cabinet | None |

equipment are required daily, weekly, monthly and quarterly.

a Paragraph 1.3 specifies the checks and services that must be accomplished daily (or at least once each week if the equipment is maintained in standby condition).

b. Paragraphs 1.4, 1.5, and 1.6 specify additional checks and services that must be performed on a weekly, monthly, and quarterly basis, respectively.

1.6. Quarterly Preventive Maintenance Checks and Services Chart

| Sequence No. | Item | Procedure | References |
|--------------|---------------------|--|---------------------------|
| 1 | Publications | See that all publications are complete, serviceable, and current Check DA Pam 310-4 to determine if new applicable MWO's have been published. All urgent MWO's must be applied immediately. All normal MWO's must be scheduled. | DA Pam 310-4 TM 38-750 |
| 2 | Modifications | | |

1.7. Cleaning

Inspect the exterior of the equipment. The exterior surfaces should be clean, and free of dust, dirt, grease, and fungus.

- a Remove dust and loose dirt with a clean soft cloth.

Warning: Cleaning compound is flammable and its fumes are toxic. Provide adequate ventilation Do not use near a flame.

- b Remove grease, fungus, and ground-in dirt from the case; use a cloth dampened (not wet) with cleaning compound (Federal stock No. 7930-395-9542).

- c Remove dust or dirt from plugs and jacks with a brush.

Caution: Do not press on the dial windows or meter face (glass) when cleaning; the dial windows and meter may become damaged.

- d Clean the front panel, dial windows, meter, and control knobs; use a soft clean cloth. If necessary, dampen the cloth with water; mild soap may be used for more effective cleaning.

1.8. Touchup Painting Instructions

Remove rust and corrosion from metal surfaces by lightly sanding them with fine sandpaper. Brush two thin coats of paint on the bare metal to protect it from further corrosion. Refer to the applicable cleaning and refinishing practices specified in TM 9-213.

Page 7-0. Delete section 7 and substitute the following appendix:

APPENDIX REFERENCES

| | | | |
|--------------|--|------------|--|
| DA Pam 310-4 | Index of Technical Manuals, Technical Bulletins, Supply Manuals (types 4, 6, 7, and 9) Supply Bulletins, Lubrication Orders, and Modification Work | TM 9-213 | Painting Instructions for Field Use. |
| | | TM 11-5527 | Multimeters TS-352/U, TS-352A/U, and TS-352B/U. |
| | Orders. | TM 38-750 | The Army Equipment Record System and Procedures. |

By Order of the Secretary of the Army:

EARLE G. WHEELER,
General, United States Army,
Chief of Staff.

Official:

J. C. LAMBERT,
Major General, United States Army,
The Adjutant General.

Distribution:

Active Army:

| | |
|-----------------------|-------------------------------------|
| DASA (6) | Sig Dep (OS) (12) |
| USASA (2) | GENDEP (OS) (2) |
| CNGB (1) | Sig Sec, GENDEP (OS) (5) |
| CSigO (7) | USA Trans Tml Comd (1) |
| CofIT (1) | Army Tml (1) |
| CofEngrs (1) | USASCC (4) |
| TSG (1) | USAECDA (1) |
| Cofspt Svcs (1) | USACBRCA (2) |
| USAARMBD (2) | USACECDA (2) |
| USAIB (2) | USAMSCDA (1) |
| USARADB (2) | USAOCCA (1) |
| USAATBD (2) | USAQMCDA (1) |
| USAAESWBD (2) | USATCDA (1) |
| USAMC (5) | USAADCDA (1) |
| USCONARC (5) | USAARMCA (1) |
| ARADCOM (2) | USAAVNCA (1) |
| ARADCOM Rgn (2) | USAARTYCA (1) |
| OS Maj Comd (3) | USASWCDA (2) |
| OS Base Comd (2) | USAOSA (1) |
| LOGCOMD (2) | USA Elct Mat Agcy (25) |
| USAECOM (7) | USARSOUTHCOM Sig Agcy (1) |
| USAMICOM (4) | White House Army Comm Agcy (2) |
| MDW (1) | WRAMC (1) |
| Armies (2) | Army Pic Cen (2) |
| Corps (2) | USA Mob Spt Cen (1) |
| USA Corps (3) | USARPRDC (2) |
| 1st FA Mal Bde (2) | USA Sp Warfare Cen (2) |
| Instl (2) except | USACDEC (2) |
| Ft Monmouth (63) | Chicago Proc Dist (1) |
| Ft Lee (5) | AMS (1) |
| Ft Holabird (5) | APP (1) |
| USMA (2) | USA Engr RD Agcy (Pt Huachuca) (2) |
| Svc Colleges (2) | USA Engr RD Agcy (White Sands) (18) |
| Br Svc Sch (2) except | USAERDL (2) |
| ARADSCH (5) | USASATSA (2) |
| USATC FA (8) | POE (1) |
| USATC AD (2) | Sig Fld Maint Shops (3) |
| USATC Armor (2) | Yuma PG (2) |
| USATC Engr (2) | WSMR (5) |
| USATC Inf (3) | USARMIS: Venezuela (2) |
| USATC (2) | Paraguay, Ecuador (2) |
| Army Dep (2) except | JUSMMAT (2) |
| Lexington (12) | Edgewood Arsenal (5) |
| Sacramento (28) | Jefferson PG (2) |
| Tobyhanna (12) | USAEPG (2) |
| Ft Worth (8) | USAMTMSA (2) |
| Granite City (5) | MAAG Iran (2) |
| Columbus (5) | ARMIS (2) |
| Letterkenney (5) | GENMIS (2) |
| Utah (5) | KMAG (2) |

NG: State AG (3); Div (1).

USAR: None.

For explanation of abbreviations used, see AR 320-50.

R. F. SIGNAL GENERATOR SET AN/URM-25B

SECTION 1 - GENERAL DESCRIPTION

| Paragraph | Page |
|--|------|
| 1. Introduction | 1-1 |
| 2. Reference Data | 1-1 |
| 3. Detailed Description | 1-1 |
| 4. Electron Tube Complement | 1-2 |
| 5. Similarities Between Equipments | 1-3 |

SECTION 2 - THEORY OF OPERATION

| | |
|--|------|
| 1. General Description of Circuits | 2-0 |
| 2. Carrier Oscillator | 2-1 |
| 3. Buffer-Amplifier..... | 2-2 |
| 4. Modulation Oscillator | 2-3 |
| 5. Electron Tube Voltmeter | 2-4 |
| a. RF Diode | 2-4 |
| b. Modulation Diode | 2-5 |
| c. Voltmeter Bridge Circuit | 2-6 |
| d. Voltmeter Bridge Adjustments..... | 2-6 |
| 6. Variable RF Attenuator | |
| 7. Crystal Calibrator..... | 2-9 |
| 8. Terminating the Signal Generator | 2-9 |
| 9. (5:1) Fixed Attenuator CN-132/URM-25..... | 2-11 |
| 10. (10:1) Fixed Attenuator CN-136/URM-25 | 2-11 |
| 11. Antenna Simulator SM-35/URM-25 | 2-12 |
| 12. Test Lead CX-1363/U | 2-12 |
| 13. Power Supply PP-562A/URM-25 | 2-12 |
| 14. Incidental Frequency Modulation | 2-14 |

SECTION 3 - INSTALLATION

| | |
|----------------------|-----|
| 1. Unpacking | 3-0 |
| 2. Installation..... | 3-1 |
| 3. Adjustments | 3-1 |

SECTION 4 - OPERATION

| | |
|--|-----|
| 1. General | 4-0 |
| 2. Power Circuit | 4-1 |
| 3. Calibrating the Electron Tube Voltmeter | 4- |
| 4. Adjusting Carrier Frequency | 4-2 |
| 5. Crystal Calibrator | 4-2 |
| 6. Adjusting Output Voltage | 4-3 |
| 7. Internal Modulation | 4-4 |
| 8. External Modulation | 4-4 |
| 9. Coupling to the Receiver Under Test | 4-4 |
| a. x Mult RF Output Jack (J102) | 4-4 |
| b. x 20, 000 RF Output Jack (J101) | 4-4 |
| 10. Use of Antenna Simulator SM-35/URM-25..... | 4-5 |
| 12. Use of (10:1) Fixed Attenuator CN-1369-/URM-25..... | 4-6 |
| 13. Summary of Operation | 4-7 |

| Paragraph | Page |
|--|------|
| 14. General Instructions for Use | 4-7 |
| a. Details..... | 4-7 |
| b. Receiver Tests | 4-7 |
| c. Modulated Operation | 4-8 |
| d. Receiver Output..... | 4-8 |
| e. Receiver Overall Sensitivity | 4-8 |
| f. Standard Antenna Electrical Constants | 4-8 |
| g. Standard Levels | 4-8 |
| h. Voltmeter Used as an Output Meter | 4-8 |

SECTION 5 - PREVENTIVE MAINTENANCE

| | |
|--|-----|
| 1. Routine Maintenance Check Chart | 5-1 |
| 2. Fuse Failure | 5-1 |
| 3. Lubrication | 5-1 |

SECTION 6 - CORRECTIVE MAINTENANCE

| | |
|--|------|
| 1. General | 6-1 |
| 2. Principal Maintenance Problems..... | 6-1 |
| 3. Test Equipment for Making Repairs | 6-1 |
| 4. Removing the Signal Generator and Power Supply from the Cabinet..... | 6-1 |
| a. Removing the RF Signal Generator SG-44B/URM-25 from the Cabinet..... | 6-2 |
| b. Removing the Power Supply PP- 562A/URM-25 from the Cabinet | 6-2 |
| 5. Removal and Replacement of Parts..... | 6-2 |
| 6. Replacing RF Oscillator Circuit Components..... | 6-2 |
| 7. Replacing Buffer-Amplifier Circuit Compo- nents..... | 6-3 |
| 8. Readjustment of Frequency Calibration | 6-5 |
| a. When to Calibrate..... | 6-5 |
| b. Limitations of Crystal Calibrator V-108 for Frequency Recalibrator | 6-5 |
| c. Recommend Test Equipment for for Recalibration | 6-5 |
| 9. Frequency Calibration Procedure | 6-5 |
| a. General | 6-5 |
| b. Frequency Calibration Chart | 6-7 |
| c. Adjusting the RF Coils | 6-7 |
| 10. Calibrating the Electron Tube Voltmeter | 6-8 |
| a. General | 6-8 |
| b. Zero Adjustment | 6-8 |
| c. RF Output Voltage Calibration | 6-9 |
| d. Percentage Modulation Calibration..... | 6-9 |
| 11. Calibrating the Step Attenuator (E112)..... | 6-10 |
| 12. Trouble Shooting Charts..... | 6-10 |
| 13. Tube Operating Voltages and Currents..... | 6-10 |
| 14. Tube Socket Electrical Measurements | 6-10 |
| 15. Winding Data | 6-10 |
| 16. Exterior and Interior Views of Units | 6-11 |

SECTION 7-PARTS LIST

LIST OF ILLUSTRATIONS

SECTION 1 - GENERAL DESCRIPTION

| | |
|---|-----|
| 1-1 RF Signal Generator Set AN/URM-25B Complete Equipment..... | 1-0 |
|---|-----|

SECTION 2 - THEORY OF OPERATION

| | |
|---|-----|
| 2-1 RF Signal Generator SG-44B/URM-25, Functional Block Diagram..... | 2-0 |
|---|-----|

LIST OF ILLUSTRATIONS(Continued)

| Figure | Page | Figure | Page |
|---|------|--|------------|
| 2-2 Simplified Schematic Diagram of the Carrier Oscillator..... | 2-1 | 4-3 Correction Factor-Frequency Curve for Output Voltage on Band H | 4-4 |
| 2-3 Simplified Schematic Diagram of the Buffer. Amplifier | 2-2 | 4-4 Schematic Diagram of the Antenna Simulator SM-35/URM-25 with Input Impedance-Frequency Curve | 4-5 |
| 2-4 Simplified Schematic Diagram of the Modulation Oscillator..... | 2-4 | 4-5 Simplified Procedure for Operating the RF Signal Generator Set AN/URM-25B..... | 4-6 |
| 2-5 Simplified Schematic Diagram of the RF Diode..... | 2-5 | SECTION 6 - CORRECTIVE MAINTENANCE | |
| 2-6 Simplified Schematic Diagram of the Modulation Diode | 2-5 | 6-1 Failure Report, Sample Form..... | 6-0 |
| 2-7 Schematic Diagram of the Voltmeter Bridge Circuit | 2-6 | 6-2 Front Panel View for Removal of RF Signal Generator SG-44B/URM-25 from Cabinet | 6-2 |
| 2-8 Schematic Diagram of the Variable RF Attenuator | 2-7 | 6-3 Rear-Bottom View for Removal of Power Supply PP-562A/URM-25 from Cabinet | 6-2 |
| 2-9 Schematic Diagram of Crystal Calibrator..... | 2-8 | 6-4 RF Signal Generator SG-44B/URM-25 and Power Supply PP-562A/URM-25 Connected Outside Cabinet for Testing..... | 6-3 |
| 2-10 Impedance Adapter MX 1074/URM-25..... | 2-8 | 6-5 Interior View of Buffer-Amplifier with Tube Shelf and CARRIER RANGE Switch Removed | 6-3 |
| 2-11 Equivalent Circuit of X MULT RF OUTPUT (102) with Impedance Adapter Added | 2-8 | 6-6 Top and Bottom Views of Buffer-Amplifier Tube Shelf | 6-4 |
| 2-12 Method for Inserting Impedance Adapter MIX-1074/URM-25 at J102 | 2-10 | 6-7 Interior View of Carrier Oscillator Compartment | 6-6 |
| 2-13 Equivalent Circuit of X MULT RF OUTPUT (J102) with Series Matching Resistor Added..... | 2-10 | 6-8 Method for Calibrating the RP Signal Generator Set AN/URM-25B at Frequencies Below 100 Kilocycles | 6-7 |
| 2-14 Equivalent Circuit of X MULT RF OUTPUT (J102), with shunt resistor Added | 2-10 | 6-9 Rear View of RF Signal Generator SG-44B/URM-25 with Buffer-Amplifier Cover Plate Removed | 6-8 |
| 2-15 (5:1) Fixed Attenuator CN-132/URM-25, with Schematic Diagram Shown | 2-11 | 6-10 Percentage Modulation Chart..... | 6-9 |
| 2-16 Schematic Diagram of the Antenna Simulator SM-35/URM-25 with Input Impedance-Frequency Curve | 2-12 | 6-11 Signal Generator Voltage and Resistance Chart..... | 6-11 |
| 2-17 Test Lead CX-1363/U | 2-13 | 6-12 Bottom View of RF Signal Generator SG-44B/URM-25 | 6-19 |
| 2-18 Schematic Diagram of the Power Supply PP-562A/URM-25..... | 2-13 | 6-13 Interior View of Audio Compartment.. | 6-20 |
| 2-19 Frequency Spectrum with 400 Cycle 30% Modulation at 240 KC on Band D..... | 2-15 | 6-14 Bottom View of Audio Cover Plate | 6-21 |
| 2-20 Frequency Spectrum with 400 Cycle 30% Modulation at 660 KC on Band D..... | 2-15 | 6-15 Top View of RF Signal Generator SG-44B/URM-25..... | 6-22 |
| 2-21 Frequency Spectrum with 400 Cycle 30% Modulation at 16 MC on Band H..... | 2-15 | 6-16 Interior Views of the Step Attenuator (E112) with all Resistors Shown | 6-23 |
| 2-22 Frequency Spectrum with 400 Cycle 30% Modulation at 19 MC on Band G..... | 2-15 | 6-17 Top and Bottom Views of the Power Supply PP-562A/URM-25..... | 6-23 |
| SECTION 3 - INSTALLATION | | | |
| 3-1 RF Signal Generator Set AN/URM-25B Unpacking Procedure for Sets Shipped with Equipment Spares..... | 3-0 | 6-18 Interior View of Impedance Adapter MX-1074/URM-25 | 6-24 |
| 3-2 RF Signal Generator Set AN/URM-25B Outline Dimensional Drawing | 3-0 | 6-19 Interior View of Antenna Simulator SM-35/URM-25 | 6-24 |
| SECTION 4 - OPERATION | | | |
| 4-1 RF Signal Generator SG-44B/URM-25, Front Panel Diagram..... | 4-1 | 6-20 Interior View of (5:1) Fixed Attenuator CN-132/URM-25 | 6-24 |
| 4-2 Diagram Showing Vernier Reading of Frequency Scale | 4-3 | 6-21 Interior View of Test Lead CX-1363/U | 6-25 |
| | | 6-22 RF Cable Assemblies | 6-26 |
| | | 6-23 RF Signal Generator Set AN/URM-25B, Overall Schematic Diagram | 6-27, 6-28 |

SAFETY NOTICE

The attention of officers and operating personnel is directed to Chapter 67 of the Bureau of Ships Manual or superseding instructions on the subject of radio-safety precautions to be observed.

This equipment employs voltage which are dangerous and may be fatal if contacted by operating personnel. Extreme caution should be exercised when working with the equipment.

While every practicable safety precaution has been incorporated in this equipment, the following rules must be strictly observed:

KEEP AWAY FROM LIVE CIRCUITS:

Operating personnel must at all time observe all safety regulations. Do not change tubes or make adjustments inside equipment with high voltage supply on. Under certain conditions dangerous potentials may exist in circuits with power controls in the off position due to charges retained by capacitors. To avoid casualties

always remove power and discharge and ground circuits prior to touching them.

DON'T SERVICE OR ADJUST ALONE:

Under no circumstances should any person reach within or enter the enclosure for the purpose of servicing or adjusting the equipment without the immediate presence or assistance of another person capable of rendering aid.

DON'T TAMPER WITH INTERLOCKS:

Do not depend upon door switches or interlocks for protection but always shut down motor generators or other power equipment. Under no circumstances should any access gate, door, or safety interlock switch be removed, short-circuited, or tampered with in any way, by other than authorized maintenance personnel, nor should reliance be placed upon the interlock switches for removing voltages from the equipment.

RESUSCITATION

AN APPROVED POSTER ILLUSTRATING THE RULES FOR RESUSCITATION BY THE PRONE PRESSURE METHOD SHALL BE PROMINENTLY DISPLAYED IN EACH RADIO, RADAR, OR SONAR ENCLOSURE. POSTERS MAY BE OBTAINED UPON REQUEST TO THE BUREAU OF MEDICINE AND SURGERY.

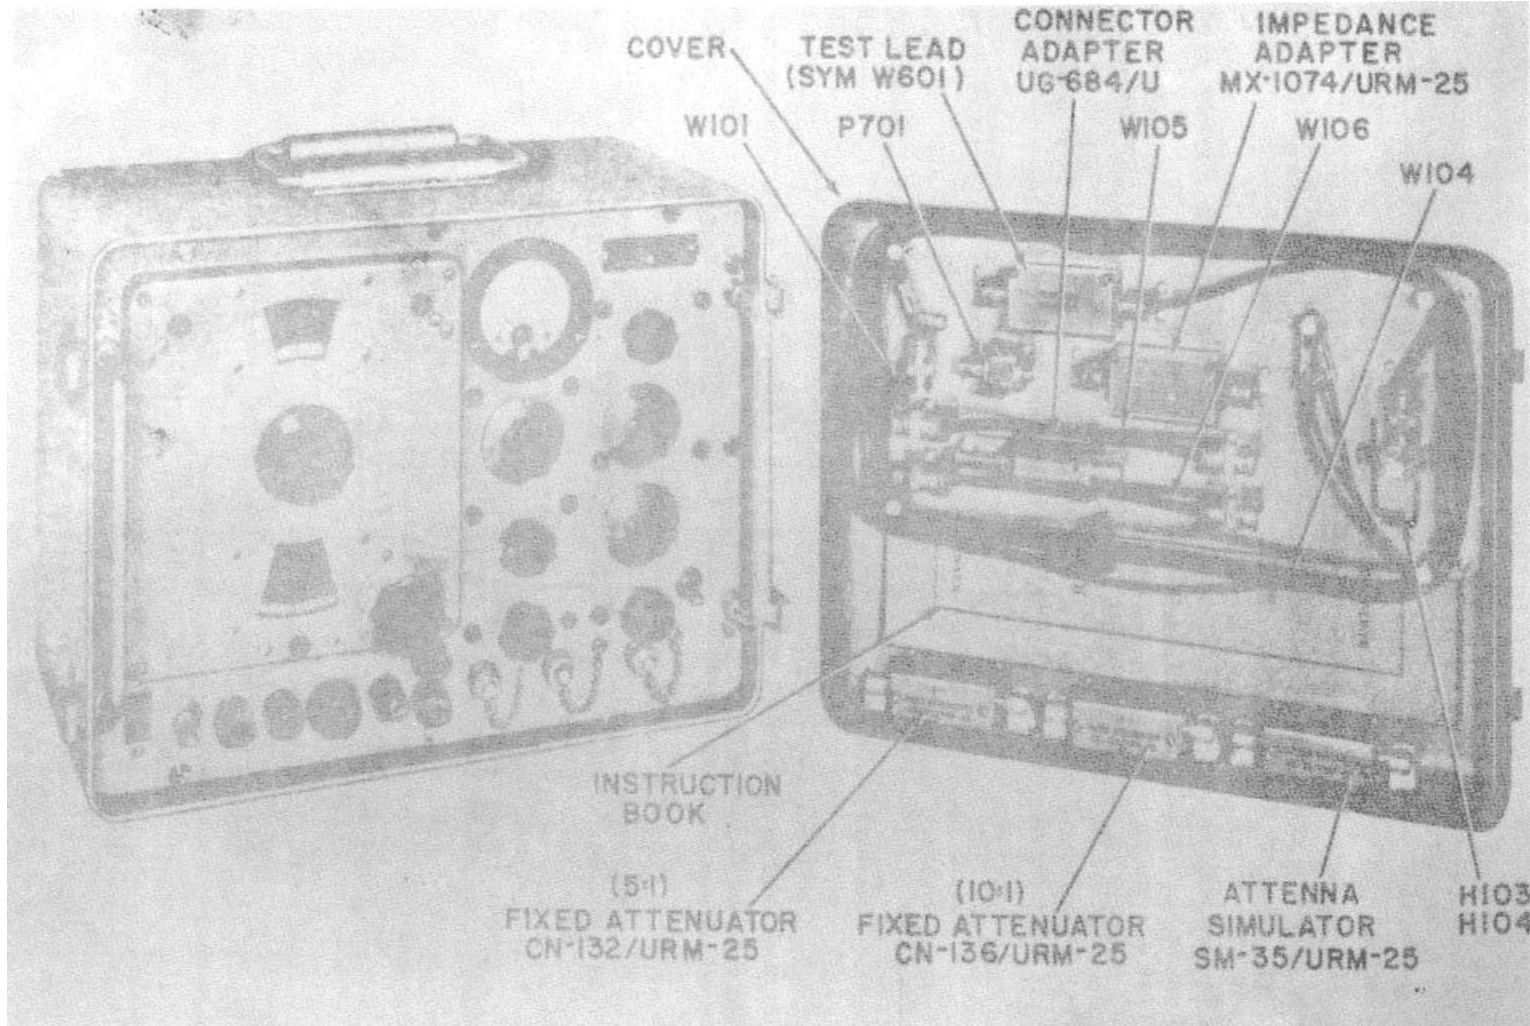


Figure 1-1. RF Signal Generator Set AN/URM-25B, Complete Equipment

**GENERAL
DESCRIPTION**

**Section 1
Paragraph 1**

**SECTION 1
GENERAL DESCRIPTION**

1. Introduction.

a. The RF Signal Generator Set AN/URM-25B is a test instrument for generating radio frequency signals, either modulated or unmodulated, over a continuous range of frequencies from 10 to 50, 000 kilocycles. It has been miniaturized physically without any loss of accuracy or applicability.

b. All units including the power supply, are incorporated in a single portable cabinet (See figure 1-1). The units supplied with their corresponding weights are shown in Table 1-1.

c. The AN/URM-25B operates from a source potential of approximately 103 to 126 volts, 50 to 1000 cycles, single phase AC. The equipment is so constructed and shielded that an approximately accurate known radio frequency voltage is obtainable at its output terminals in varying strength as indicated by a meter and associated multiplier indicator. The unit includes a self contained 1 mc crystal calibrator that is capable of establishing an accuracy within $\pm .05\%$ at frequencies above 1 mc.

d. The complete equipment consists of the following units:

- (1) RF Signal Generator SG-44B/URM-25
- (2) Power Supply PP-562A/URM-25
- (3) Impedance Adapter MX-1074/URM-25
- (4) Antenna Simulator SM-35/URM-25
- (5) (5:1) Fixed Attenuator CN-132/URM-25
- (6) (10:1) Fixed Attenuator CN-136/URM-25
- (7) Test Lead CX-1363/U
- (8) RF Cable Assembly CG-409A/U (4'0")
- (9) RF Cable Assembly CG-409A/U (7")-qty 2
- (10) Coaxial Adapter UG-201/U
- (11) AC Line Cable Assembly
- (12) Connector, Adapter UG-684/U

2. REFERENCE DATA

a. Nomenclature RF Signal Generator Set AN/URM-25B

b. Contract-NObsr 52099, 8 December 1950

c. Contractor-Federal Manufacturing & Engineering Corporation, 199 Steuben Street, Brooklyn 5, New York
d. Cognizant Naval Inspector - Inspector of Naval Material, New York, N. Y.

e. Number Of Packages Involved Per Complete Shipment-one package, consisting of one equipment and one carton of equipment spares.

f. Total Cubical Contents--see Table 1-1

g. Total Weight--see Table 1-1

h. Frequency Range - 10 kilocycles to 50, 000 kilocycles $\pm .5\%$; $\pm .05\%$ from 1 mc to 50 mc when calibrated against integral crystal.

i. Tuning Bands And Range Of Each Band--

- (1) Band A --10 to 27 kc
- (2) Band B 27 to 80 kc

(3) Band C-80 to 230 kc

(4) Band D 230 to 680 kc

(5) Band E -.68 to 2 mc

(6) Band F 2 to 8.3. mc

(7) Band G 8.3 to 18 mc

(8) Band H -18 to 50 mc

j. Types Of Modulation-

(1) Amplitude modulation -O to 80%, (indicated accuracy within $\pm 10\%$).

(2) Internal modulation frequencies

(a) 400 cycles per second $\pm 5\%$.

(3) External modulation frequency 100 to 15, 000 cycles per second.

k. Output Voltage (RF).

(1) C.1 to 100, 000 microvolts ($\pm 10C7()$) continuously variable (across a 53.5 ohm external load).

(2) Approximately 2 volts-adjustable (across a high load impedance).

l. Output Voltage (audio).

(1) Frequency-400 or 1000 cycles.

(2) Voltage to approx. 4 v (adjustable); across approx. 100, 000 ohms).

(3) Adjustment-voltage varied by front panel control.

(4) Voltage Calibration-proportional to reading of %

Modulation.

m. Output Impedance.

(1) 53.5 ohms at the X MULT RF OUTPUT jack (J-102).

(2) 500 ohms at the X 20, 000 RF OUTPUT jack (J-101).

(3) 0 to 90, 000 ohms at audio output jack J-103.

n. Power Supply PP-562A/URM-25.

(1) Power source requirements--115 volts AC ($1\pm 10\%$) 50 to 1000 cycles per second, single phase.

(2) Power consumption of equipment is approximately 45 watts.

3. DETAILED DESCRIPTION.

a. The rated frequency range is 10 kilocycles to 50, 000 kilocycles per second. This range is covered in eight bands by a band selector switch located on the front panel. Within each band the frequency is varied by means of a straight line frequency capacitor. Percentage frequency change is therefore proportional to capacitor dial rotation. The frequency generated can be read from a main frequency scale, which is geared to this variable capacitor.

b. The RF output is continuously variable from 0.1 to 100, 000 microvolts and is determined by a meter reading in association with a multiplier and external attenuator settings. An adjustable two volt, open circuit, output is also available.

c. The RF output may be either modulated or unmodulated. Modulation. is adjustable between 0 and 80 percent. An internal modulation source of either 400 or 1000

1 Section
Paragraph 3 c

cycles per second is provided. Provision is also made for external modulation.

d. A 1 mc crystal calibrator is incorporated in the set for purposes of frequency calibration and is effective between 1 mc and 50 mc. The frequency accuracy of the signal generator is within + .05% when calibrated against this integral calibrator.

e. An adjustable 400 or 1000 cycle audio voltage is made available at the EXT MOD IN jack. This voltage can be varied from 0 to approximately 4.0 volts by means of the

GENERAL DESCRIPTION

same control that adjusts % modulation. The audio output is proportional to the % modulation reading on the front panel meter. The details of operation and characteristics are discussed in other sections of the instruction book.

4. ELECTRON TUBE COMPLEMENT.

The quantities and types of electron tubes used with the AN/URM-25 B are listed in Table 1-3.

TABLE 1-1. EQUIPMENT SUPPLIED

| QUANTITY PER EQUIPMENT | NAME OF UNIT | NAVY TYPE OR A-N DESIGNATION | OVER-ALL DIMENSIONS (INCHES) | | | VOLUME (CU. IN.) | WEIGHT (LBS.) |
|------------------------|---------------------------------------|------------------------------|------------------------------|-------|--------|------------------|---------------|
| | | | HEIGHT | WIDTH | DEPTH | | |
| 1 | RF Signal Generator Set | AN/URM-25B | 10-1/4 | 13 | 10-1/4 | 1300 | 35 |
| 1 | a. RF Signal Generator | SG-44b/URM-25 | | | | | |
| 1 | b. Power Supply | PP-562A/URM-25 | | | | | |
| 1 | c. Impedance Adapter | MX-1074/URM-25 | | | | | |
| 1 | d. Antenna Simulator | SM-35/URM-25 | | | | | |
| 1 | e. (5:1) Fixed Attenuator | CN-132/URM-25 | | | | | |
| 1 | f. (10:1) Fixed Attenuator | CN-136/URM-25 | | | | | |
| 1 | g. Test Lead | CX-1363/U | | | | | |
| 1 | h. RF Cable Assembly (sym W104) | CG-409A/U (4'0") | | | | | |
| 1 | i. RF Cable Assembly (sym W105, W106) | CG-409A/U (7") | | | | | |
| 1 | j. AC Line Cable Assembly (sym W101) | | | | | | |
| 1 | k. Coaxial Adapter (sym P701) | UG-201/U | | | | | |
| 1 | l. Connector, Adapter | UG-684/U | | | | | |
| *1 | Equipment Spares Box | | 6 | 9 | 12 | 648 | 8 |

*Dimensions 3" x 4" x 8" for Marine Corps shipments

TABLE 1-2. SHIPPING DATA

| NUMBER OF BOXES | CONTENTS | | OVER-ALL DIMENSIONS (INCHES) | | | VOLUME (CU. IN.) | WEIGHT (LBS.) |
|-----------------|-------------------------|-------------|------------------------------|-------|-------|------------------|---------------|
| | NAME | DESIGNATION | HEIGHT | WIDTH | DEPTH | | |
| 1 | RF Signal Generator Set | AN/URM-25B | 17 | 20 | 17 | 5780 | 50 |
| *1 | Equipment Spares | | 7 | 10 | 13 | 910 | 10 |

*Dimensions 4" x 5" x 9" for Marine corps shipments.

TABLE 1-3. ELECTRON TUBE COMPLEMENT

| NUMBER REQUIRED | TUBE TYPE | SYMBOL DESIG. | FUNCTION | LOCATION |
|-----------------|------------|---------------|-----------------------|--------------------------------|
| 1 | 12AU7 | V101 | Voltmeter Bridge | Audio Compartment |
| 1 | 12AU7 | V102 | Modulation Oscillator | Audio Compartment |
| 1 | 6AL5 | V103 | Modulation Diode | Audio Compartment |
| 1 | 6J4 | V104 | Buffer-Amplifier | Buffer-Amplifier Compartment |
| 1 | 9006 | V105 | RF Diode | Buffer-Amplifier Compartment |
| 1 | 6J6 | V106 | Carrier Oscillator | Carrier Oscillator Compartment |
| 1 | 6BE6 | V-108 | Crystal Calibrator | Audio Compartment |
| 1 | 6X4 | V201 | B+ Rectifier | Power Supply |
| 1 | 0D3/VR-150 | V202 | B+ Regulator | Power Supply |
| | | | | PP-562A/URM-25 |
| | | | | PP-562A/URM-25 |

RF Signal Generator SG-44B/URM-25

**GENERAL
DESCRIPTION**

**1 Section
Paragraph 5**

5. SIMILARITIES BETWEEN EQUIPMENTS.

The AN/URM-25B is basically similar to the AN/URM-25 and AN/URM-25A except that a crystal calibrator has been incorporated for calibrating frequency. In addition, an adjustable 400 and 1000 cycle audio output is made available

at the front panel. Table 1-4 lists the basic differences between these models.

TABLE 1-4. BASIC DIFFERENCES IN AN/URM-25 SERIES EQUIPMENTS

| MODEL | LINE CORD | EXT MOD IN FILTER | FREQUENCY SCALE LAMP FILTER | CRYSTAL CALIBRATOR | RF PEAK ING COIL | POWER SUPPLY PP-562/URM- 25 | OTHER ITEM DIFFERENCES |
|-----------|----------------------------------|--|-----------------------------------|--|---|---|--|
| AN/URM-25 | CORD-FILTER CX-1595 URM-25 | Single section unshielded | none | none | one peaking coil for Band H (L - 114) | L-201, T-201 Non JAN types | |
| AN/URM-25 | Line cord Sym No. W-101 | Triple section shielded | Triple section shielded | none | one peaking coil for Band H (L - 114) | Rf by- passes C-205, C-206 added: L-201 T-201 JAN types | RF bypasses C- 147, C-148 added to line filter |
| AN/URM-25 | Line cord Sym No. W-101 | Triple section shielded in addition to an unshielded choke | Triple section shielded | V-108 (6BE6) crystal calibrator | two peaking coils (L- 121, L-122), effective from 16 mc to 50 mc | RF by- passes C-205, C-206, added; L-201, T-201 JAN types | C-108 (.5 mf) removed, Adapter Connector UG- 684/U added, C-149, C-156 E-131 and C- 118 added, C- 113 changed from 10, 000 mmf tp 6200 mmf, other wiring changes |

SECTION 2
THEORY OF OPERATION

1. GENERAL DESCRIPTION OF CIRCUITS.
(See figure 2-1).

a. The purpose of this section is to give the Electronics Technician a better understanding of the RF Signal Generator Set AN/URM-25B so that he can apply himself to the operation and maintenance problems that may arise.

b. The functional principal of the AN/URM-25B is similar to that of a radio frequency transmitter. This association will become more apparent as the technician reads and studies this section. A carrier oscillator (par. 2) generates a variable RF signal which is applied to the control grid of a buffer-amplifier (par. 3). A modulation oscillator (par. 4) generates an audio voltage (400 or 1000 cycles)

which is also applied to the control grid of the buffer-amplifier to grid modulate the RF signal. The modulated signal is then taken from the buffer.-amplifier and fed to a step attenuator circuit (par. 6) where the desired output amplitude is selected. An electron tube voltmeter, consisting of an RF diode, modulation diode and voltmeter bridge, is provided for measuring the carrier output and percentage modulation. Provision is also made for external modulation.

The output of the modulation oscillator is available. at the "EXT MOD IN-AUDIO OUT jack. A crystal calibrating circuit is also provided to calibrate RF frequency from 1 mc to 50 mc. When this calibrator is used, the frequency error can be made less than .05 at these frequencies.

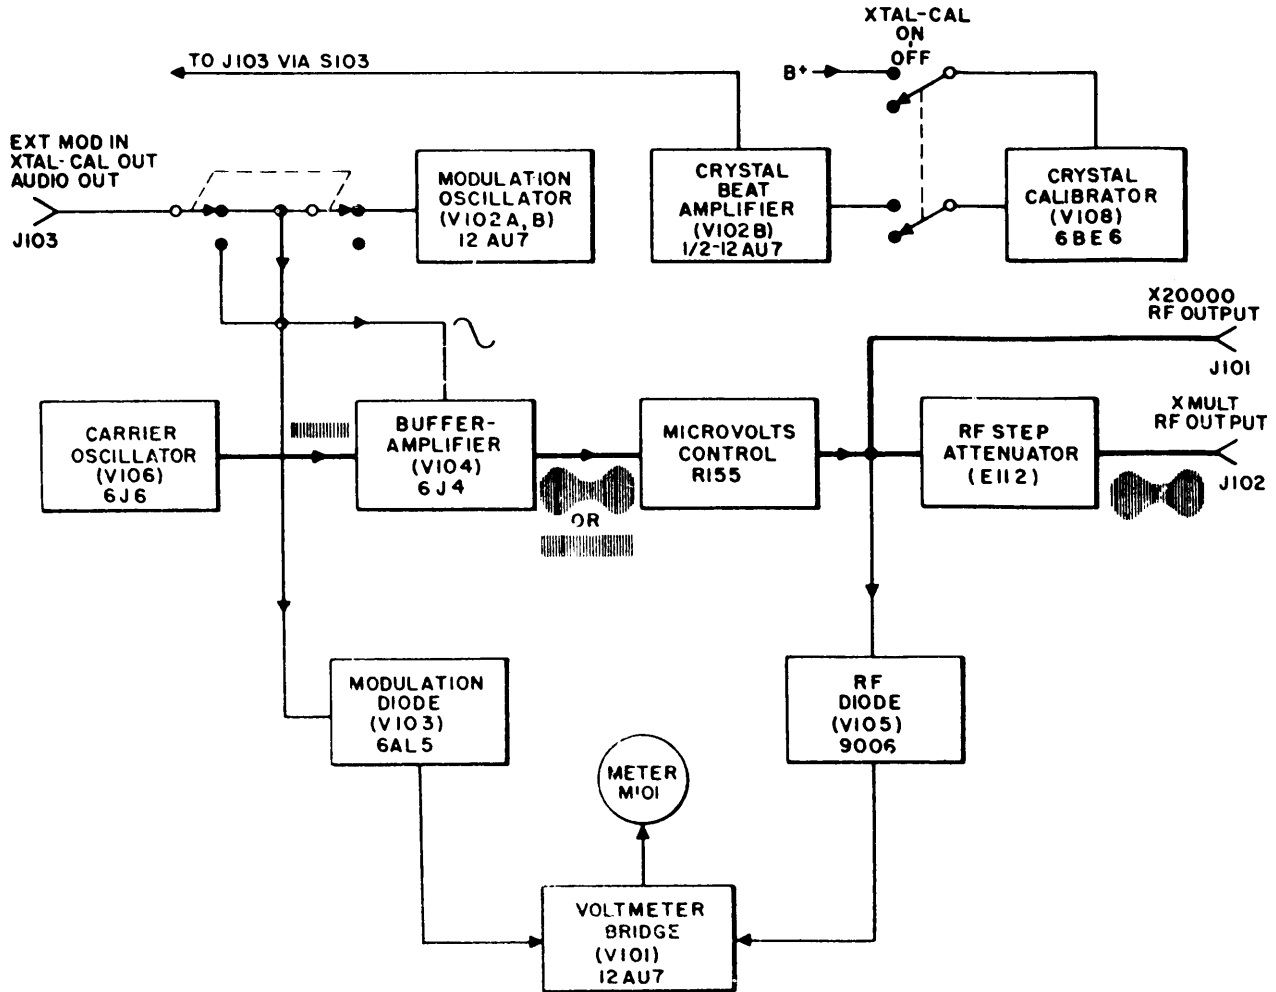


Figure 2-1. RF Signal Generator SG-44B/URM-25, Functional Block Diagram

THEORY OF OPERATION

c. A detailed analysis of the principle circuit assemblies is covered in this section under the following headings and paragraphs.

- (1) Carrier Oscillator..... Par. 2
- (2) Buffer-Amplifier Par. 3
- (3) Modulation Oscillator..... Par. 4
- (4) Electron Tube Voltmeter..... Par. 5
- (5) Variable RF Attenuator..... Par. 6
- (6) Crystal Calibrator Par. 7
- (7) Terminating the Signal Generator..... Par. 8
- (8) (5:1) Fixed Attenuator CN-132/URM-25 Par. 9
- (9) (10:1) Fixed Attenuator CN-136/URM-2 Par. 10
- (10) Antenna Simulator MX-1074/URM-25 .. Par. 11
- (11) Test Lead CX-1363/U Par. 12
- (12) Power Supply PP-562A/URM-25 Par. 13
- (13) Incidental Frequency Modulation Par. 14

2. CARRIER OSCILLATOR.

(See figure 2-2).

a. With the exception of plate choke L-103, filament choke L-104, capacitor C-122, and CARRIER CONTROL R-123, the carrier oscillator circuit is completely enclosed in a shielded compartment located on the left side of the signal generator unit. It is of the conventional Hartley type with adjustable high Q iron core inductances (L-105 through L-111) and trimmer capacitors (C-128 through C-134) provided for frequency ranges A through G. There is no trimmer capacitor or adjustable inductance provided for the highest frequency range (band H). The frequency accuracy will be within $\pm .05\%$, from 1 mc to 50 mc when checked against oscillator-mixer V-108. At lower frequencies, the accuracy is within $\pm .5\%$. This frequency check should be made by interpolation and does not require any iron core or trimmer adjustments. The method for maintenance calibration (using an external standard) is discussed in Section 6, par. 9.

b. The range of frequencies covered is from 10 kilocycles to 50 megacycles per second in 8 bands with an overlap of at least 3%7, . The desired band (A through H) is

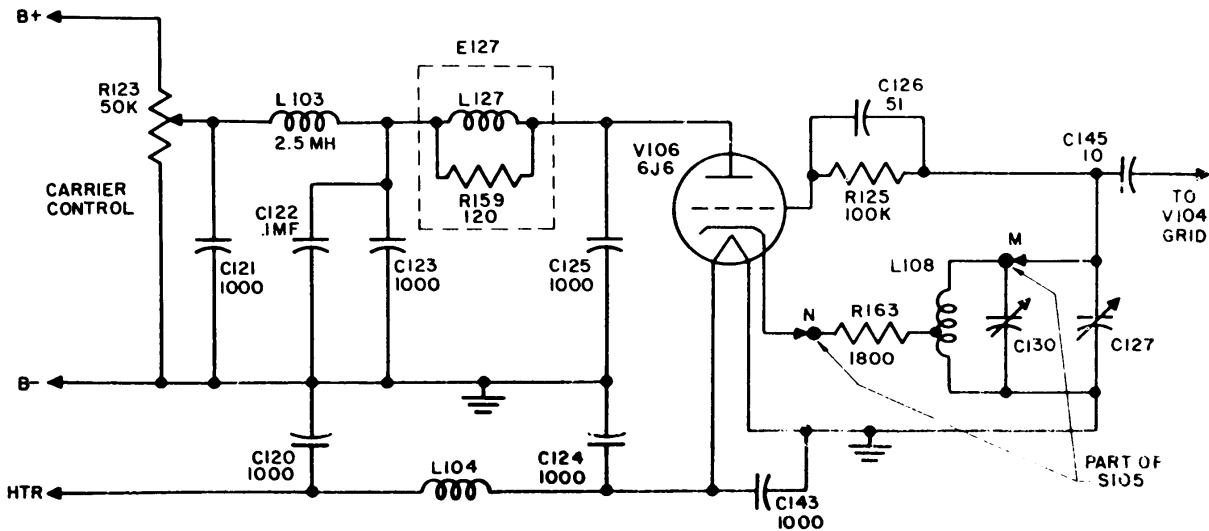


Figure 2-2. Simplified Schematic Diagram of the Carrier Oscillator
2-1

2 Section Paragraph 1c

selected by the FREQUENCY BAND SWITCH (S-105) (See figure 6-23). This switch is of the rotary selector, shorting type and serves three functions as follows:

- (1) Selects applicable "inductance-capacitance" combination.
- (2) Selects proper grid leak resistance and blocking capacitance combination for V-106.
- (3) Shorts to ground "inductance-capacitance" combinations not utilized at the selected frequency band.

The alternate shorting of "inductance-capacitance" combinations is necessary in eliminating stray inductance and capacitance at the frequency range selected.

c. The principal electrical features of the carrier oscillator are shown in the simplified schematic diagram, figure 2-2. For purposes of simplifying the circuit analysis, the mechanics of the FREQUENCY BAND SWITCH (S-105) have not been included in this figure. M and N represent the contact positions of the FREQUENCY BAND SWITCH (S-105) when set at band E. The details of the carrier oscillator are covered in the overall schematic diagram (figure 6-23) near the end of Section 6.

d. The oscillator tube (V-106) is a type 6J6 dual triode with both sections connected in parallel. The frequency of the oscillations is determined by the L-C constant of the resonant tank circuit. The main tuning capacitor (C-127) is of the straight line frequency type, designed to give a linear frequency change with rotation except at the extreme ends of the frequency range. All frequency bands, with the exception of the highest band (H), can be calibrated by adjustment of the associated trimmer capacitor and variable iron core inductance. If necessary, band H can be calibrated by varying the spacing between the turns of L-105. This is discussed in Section 6, par. 9.

Section 2
Paragraph 2 e

THEORY OF OPERATION

e. Bias for the oscillator tube (V-106) is provided by grid current which charges the grid blocking capacitor (C-126) through the cathode to grid resistance (R-125). The resistor (R-125) in parallel with the capacitor (C-126) allows this capacitor to discharge during the portion of the RF cycle when the grid is not positive with respect to the cathode. The net result is a bias on the grid which is proportional to the amplitude of the RF voltage across the grid tank circuit. When the FREQUENCY BAND SWITCH (S-105) is set for bands G or H, a 2200 ohm resistor (R124) shunts the 100, 00 ohm grid leak resistor (R-125) presenting an effective grid leak resistance of 2220 ohm for these bands. This is shown in the schematic diagram, figure 6-23 near the end of Section 6.

f. A parasitic suppressor (E-127) consisting of an inductance (L-113) wound around a resistor (R-159) serves to suppress spurious oscillations which are apt to be more pronounced at the highest frequency range (18 to 50 mc) of the signal generator. The filter network in the plate circuit, consisting of an inductance (L-103) and three capacitors (C-121, C-122, C-123) serves to eliminate stray RF currents from the oscillator compartment and interconnecting leads. Feedthru capacitor C-21 permits the entry of the lead from the CARRIER CONTROL (R-123) into the filter network also bypass stray RF currents along this lead.

g. The carrier amplitude is adjusted to the required value by means of the CARRIER CONTROL (R-123) which is a linear potentiometer that varies the voltage applied to the plate of the oscillator tube (V-106). A different V-106 cathode resistor (R158, R-160 R-162, R-163) is switched into the circuit for bands A, B, D and E to improve output voltage linearity of R-123 on these ranges.

h. In changing frequency bands, the main tuning capacitor (C-127) is shunted by the corresponding

inductance and trimmer capacitance and is connected between the grid leak resistor and ground. This tuning capacitor is geared to the frequency scale (N-101, see figure 4-1). The scale rotates through 180 degrees and is divided into eight frequency ranges, (bands A thru, H).

i. The FREQUENCY BAND SWITCH (S-105) has a scale mask (H-101) connected to it, so that only the frequency range or band selected can be viewed through the front panel of the signal generator. A more complete discussion of the frequency adjusting system is given in Section 4, par. 4.

3. BUFFER-AMPLIFIER.

(See figure 2-3).

a. The buffer-amplifier is an untuned RF amplifier inserted electrically and physically between the carrier oscillator and audio compartments and is completely enclosed in a shielded compartment. It consists of a triode type 6J4 (V-104) and associated circuit. This circuit serves the dual function of isolating the carrier oscillator from output terminal loading and introducing the amplitude modulation.

b. As a buffer stage, the buffer-amplifier makes the carrier oscillator independent of the setting of either the MICROVOLTS control (R-155) or MULTIPLIER (E-112-Step Attenuator), as well as independent of any load that may be presented to the output of the signal generator. (See figure 6-23).

c. Modulation is accomplished by introducing the audio voltage from the modulation oscillator (V-102) or from an external source to the grid of the buffer-amplifier tube (V-104). Due to the nature of the circuit, the amplitude of this audio voltage is directly correlated to the degree of modulation and adjustable by means of the %, MODULATION control (R-111). A portion of this audio voltage is also applied to the plate circuit of the

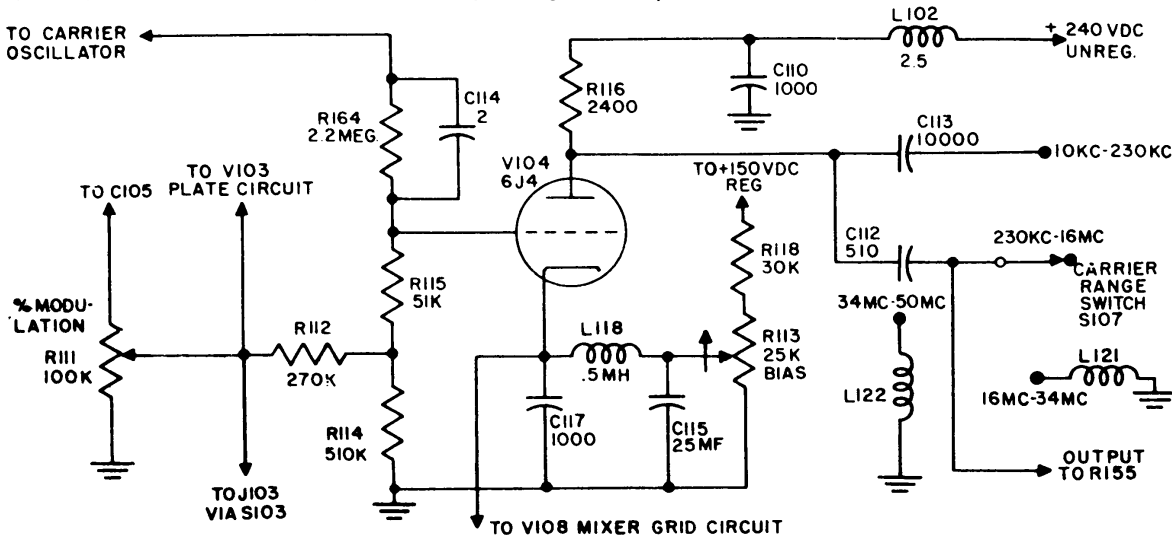


Figure 2-3. Simplified Schematic Diagram of the Buffer-Amplifier
2-2

THEORY OF OPERATION

modulation diode (V-105) where it is rectified and fed to the voltmeter bridge circuit for indication of % Modulation on M-101 (see Section 2, par. 5).

d. A decoupling network consisting of C-114 and R-164 serves to minimize the presence of incidental frequency modulation effects on the carrier oscillator circuit.

e. The plate supply voltage of V-104 is unregulated at +240 volts DC. The grid bias is preset b) adjustment of the cathode BIAS resistor (R-113) to introduce a DC grid voltage of approximately 2.8 volts. This voltage is critical and is selected to maintain a minimum of both carrier and audio distortion (see Table 6-4, par. 4).

f. The output of V-104 is coupled to the attenuator circuit through a network selected by the CARRIER RANGE switch (S-107). When operating the signal generator at frequency bands A thru C, this switch should be set to the "10 kc-230 kc" position. In this position, the RF output is taken from the plate of V-104 through two parallel capacitors (C-112, C-113) which offer a total capacitance of 6710 micro-microfarads. These capacitors present a low enough reactance to permit sufficient RF output at low carrier frequencies (below 230 kc). These low frequencies should not be modulated by audio signals above 1000 cycles to avoid the presence of appreciable audio in the output. More effective audio filtering is accomplished at higher RF frequencies, by switching S-107 to one of the other three positions where C-113 is eliminated. and the output coupling capacity is only 510 mmf.

g. CARRIER RANGE switch S-107 serves an additional function above 16 mc where one of two RF peaking coils is placed in parallel with the AC load of V-104. One coil (L-121) boosts the RF gain of V-104 between 16 mc and 34 mc, whereas the second coil (L-122) boosts the gain between 34 mc and 50 mc. The inductance of these coils compensates for the output capacity in the plate circuit of V-104. A single coil does not provide sufficient gain over this frequency range. By increasing the gain of V-104, RF distortion from 16 mc to 50 mc is kept at a minimum. In order to obtain full output without these coils, the grid RF signal of V-104 would have to be increased by advancing CARRIER CONTROL R-123 in a clockwise direction. This larger grid signal would result in increased RF distortion, Peaking coils are not necessary at lower frequencies where the gain of the Buffer-Amplifier circuit is sufficiently high to keep RF distortion at a minimum.

h. A small portion of the RF energy is tapped from cathode bypass C-117 and coupled to the grid of crystal oscillator-mixer V-108 via isolation resistor R-167 and blocking capacitor C-150. Although the cathode of V-104 is well by-passed, sufficient RF energy will be available at the grid of V-108 to crystal calibrate the signal generator. The crystal calibrator is discussed, in detail, in paragraph 7 of this section.

i. V-104 cathode RF choke L-118 is inserted to

Section 2 Paragraph 3 c

eliminate high frequency RF currents from audio bypass electrolytic C-115. This coil serves to minimize the radiations that might be set up in an electrolytic such as C-115 at higher frequencies of the signal generator.

4. MODULATION OSCILLATOR.

(See figure 2-4).

a. GENERAL-The modulation oscillator is contained in the audio compartment and is a standard Wien-bridge oscillator, utilizing a type 12AU7 dual triode (V-102). It is capable of generating an audio signal of either 400 or 1000 cycles, depending upon the position of the MOD SELECTOR switch (S-103). When this switch is in the "EXT" position, the oscillator section (V-102A) is inoperative and an external modulating voltage (100 to 10,000 cycles) may be applied to the EXT MOD IN jack (J-103). The external audio signal is fed via a three section filter (Z-101), RF choke (L-117) and MOD SELECTOR switch (S-103) to the grid circuit of buffer-amplifier V-104. The degree of modulation can be varied by % MODULATION control R-111. The filter and choke are shown in the overall schematic, Figure 6-23 near the end of Section 6.

b. AUDIO OUTPUT-When the MOD SELECTOR switch (S-103) is in the 400 or 1000 cycle position, the corresponding audio signal is applied to the grid of V-104 via % MODULATION control R-111. In these positions of S-103, the audio voltage will also be available at EXT MOD IN jack (J-103) for external applications. The audio voltage at J-103 can be varied by 700 Modulation control R-111. The impedance at J-103 is .high (depending upon position of R-111 arm), and the audio voltage available will be proportional to the % Modulation reading on M-101 when fed to a high impedance (approx. 100k) load. When a low impedance load is connected at J-103, the audio output at J-103 will decrease, but the meter reading will still be proportional to the audio output voltage. The maximum available open circuit audio voltage at J-103 will be approximately 4 volts. This voltage will be represented by a reading of "100" on the % MOD scale of the meter. To avoid audio frequency shifts that may occur in the extreme clockwise position of R-111, the % Modulation reading should never be advanced to an indication beyond "100". The operational procedure for obtaining audio output is discussed in Section 4, OPERATION. The complete circuit will be found in Figure 6-23 near the end of Section 6.

c. CRYSTAL CAL OUTPUT-Besides functioning as an internal and external audio source, the amplifier section (V-102B) of the modulation oscillator also serves as an amplifier for the audio beat of the crystal calibrator (V-108). When XTAL-CAL switch (S-106) is in the ON position, B+ is applied to V-108 and the beat output of the crystal calibrator (V-108) is fed to the grid of V-102B where it is amplified. When calibrating against the internal crystal (Y-101), the MOD SELECTOR switch (S-103) should be set to XTAL. This is the same as the EXT position of the switch. In this position, the crystal beat can be monitored at the EXT MOD IN jack (J-103) with a set of crystal earphones. Connector, Adapter UG684/U is provided to adapt BNC jack J-103 to a

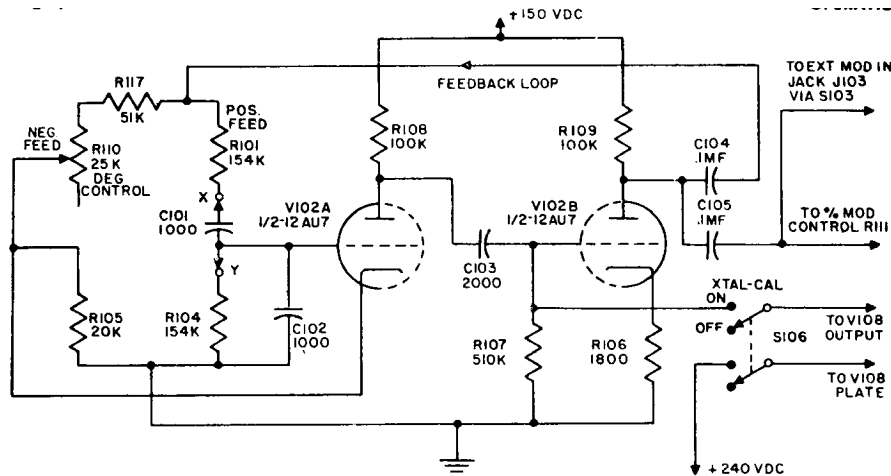


Figure 2-4. Simplified Schematic Diagram of the Modulation Oscillator

standard phone plug. High impedance crystal earphones must be used since the impedance at J-103 is high.

d. CIRCUIT ANALYSIS OF MODULATION OSCILLATOR.

(1) Tube section V-102B acts as an amplifier and inverter. Even without the Wien-bridge circuit, this system could oscillate since any signal that appears on the grid of V-102A is amplified and inverted by both V-102A and V-102B. The voltage fed back to the grid of V-102A then must reinforce the initial signal and cause oscillations to be set up and maintained. This type of system, however, would amplify voltages of a very wide range of frequencies. The bridge circuit is used to eliminate feedback voltages of all frequencies except the single frequency desired in the output. The bridge allows a voltage of only one frequency to be effective in the circuit because of the degeneration and phase shift provided. Oscillations can take place only at the frequency which permits the voltage across resistor R-104 (input signal to V-102A) to be in phase with the output voltage from V-102B, and for which the positive feedback voltage exceeds the negative feedback voltage. Voltages of any other frequency cause a phase shift between the output signal of V-102B and the input to V-102A. Undesired frequencies are thus attenuated by a high degree of degeneration so that the feedback voltage is insufficient to sustain oscillations at frequencies other than the desired frequency.

(2) The degenerative or negative feedback voltage is provided by the voltage divider network consisting of the cathode resistor (R-105), a potentiometer (R-110) and series resistor (R-117). Since there is no phase shift across this voltage divider, and since the resistances are practically constant for all frequencies, the amplitude of the negative feedback voltage is constant for all audio frequencies that may be present at the output of V-102B. The degeneration control potentiometer (R-110) is preset to sustain oscillation

at both 400 and 1000 cycles per second, with minimum distortion.

(3) Regeneration or positive feedback is provided by voltage divider consisting of two resistors (R-101, R-104) and two capacitors (C-101, C-102), when the MOD SELECTOR switch is set for 1000 cycle operation. At very high frequencies the reactance of C-102 is low and any positive feedback voltage applied to the grid of V-102A will be at a minimum. At very low frequencies, the reactance of C-101 will be high and the positive feedback voltage applied to the grid of V-102A will subsequently be low. It can also be shown that for maximum regeneration at the desired frequency, the voltage across resistor R-104 will be in phase with the output from V-102B when: $R-101 \times C-101 = R-104 \times C-102$.

5. ELECTRON TUBE VOLTMETER.

The electron tube voltmeter consists of three fundamental circuits, namely, the RF diode (V-105), the modulation diode (V-103) and the voltmeter bridge (V-101). The voltmeter bridge tube (V-101) and modulation diode (V-103) circuits are contained in the audio compartment; whereas the RF diode (V-105) circuit is located in the buffer-amplifier compartment. A meter (M-101) is provided on the front panel of the signal generator to give the appropriate voltage indication. This voltmeter circuit makes it possible to determine both the carrier output strength and percentage of modulation.

a. RF DIODE. (See figure 2-5).

(1) The RF diode (V-105) rectifies the carrier output signal of the buffer-amplifier (V-104) which is then applied to the voltmeter bridge (V-101) circuit. The strength of this RF signal is indicated on the meter (M-101).

(2) V-105 is a type 9006 tube. The RF voltage is taken from the plate circuit of the buffer-amplifier (V-104) and applied across V-105 through a T pad described in paragraph 6i of this section.

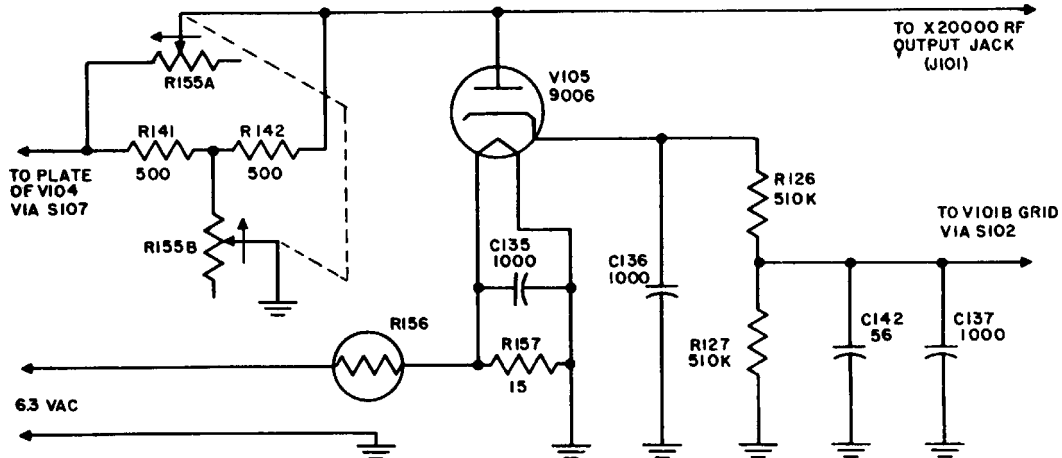


Figure 2-5. Simplified Schematic Diagram of the RF Diode

(3) The rectified RF signal appears across the cathode resistors R-126 and R-127. A 56 micromicrofarad capacitor (C-142) and a 1000 micromicrofarad capacitor (C-136) serve to bypass the RF energy from the voltmeter bridge circuit. An additional feedthru type RF bypass capacitor (C-137) permits the entry of the RF diode (V-105) output into the audio compartment. The bypass capacitor C-135 filters the RF energy from the filament lead to V-105. A part of the rectified RF signal voltage is taken across R-127 and applied to the grid of the bridge tube (V-101B) when the METER READS switch (S-102) is in the RF position. The RF voltage is read from the upper scale of the meter (M-101). This scale is calibrated from 0 to 100 microvolts. When the meter indicates 100 microvolts, two volts output, open circuit, is present at the X 20, 000 RF OUTPUT jack (J-101). When J-101 is terminated in its characteristic impedance (500 ohms) a meter reading of 100 microvolts represents an output of one volt. Similarly, if the output is taken from the X MULT RF OUTPUT jack (J-102), and this jack is terminated in its characteristic impedance (53.5 ohms), the voltage at J-102 is determined by multiplying the MULTIPLIER dial (I-104) setting by the meter reading. (See Section 2 par. 6 and par. 8).

(4) A ballast regulator lamp (R-156) connected in series with the filament of V-105 minimizes the effects of varying line voltage on the contact potential of the tube. This contact potential is an emission characteristic which is prevalent in diodes. Its static effects are eliminated by adjustment of the RF COMP control (R-128), a screwdriver adjustment located on the audio compartment (See figure 2-7). The filament shunt resistor (R-157) improves the regulation characteristics of the ballast lamp by decreasing the cold to hot resistance change of the ballast load.

b. MODULATION DIODE. (See figure 2-6).

(1) The modulation diode (V-103) is a type 6AL5 dual diode with only one tube section used. It rectifies the modulating voltage. This rectified voltage is then applied to the grid of the voltmeter bridge tube (V-101B) for determination of percentage modulation. The same voltmeter bridge is used for reading percentage modulation as is used for determining carrier output strength. The principal features of the modulation diode are shown in Figure 2-6.

(2) The percentage modulation of the carrier frequency is determined by the modulation voltage applied to the control grid of the buffer-amplifier (V-104). This modulation voltage is taken from the 100, 000 ohm % MODULATION potentiometer (R-111) and applied across the modulation diode (V-103) circuit where it is rectified. Resistors R-119 and R-121 serve as a voltage divider. A part of this rectified audio voltage is taken across R-121 and applied to V-101B when the METER READS switch (S-102) is in the v/o MOD position. Capacitor C-118 blocks the DC grid voltage of V-104 from V-103. Due to the modulation characteristic of the buffer-amplifier circuit, the degree of modulation is a function of audio voltage and independent of the carrier amplitude. This is true in such a grid modulating system when the RF signal amplitude is small with respect to the amplitude of the audio voltage. In this type of circuit, the degree of modulation is a function of the change in

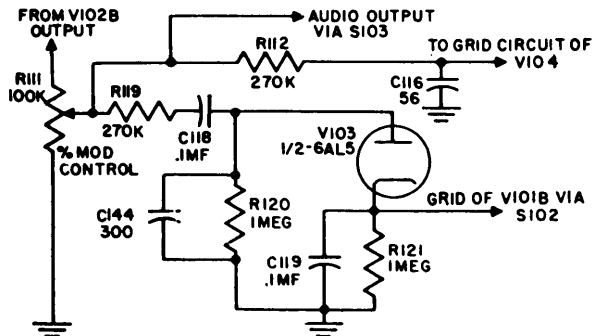


Figure 2-6. Simplified Schematic Diagram of the Modulation Diode

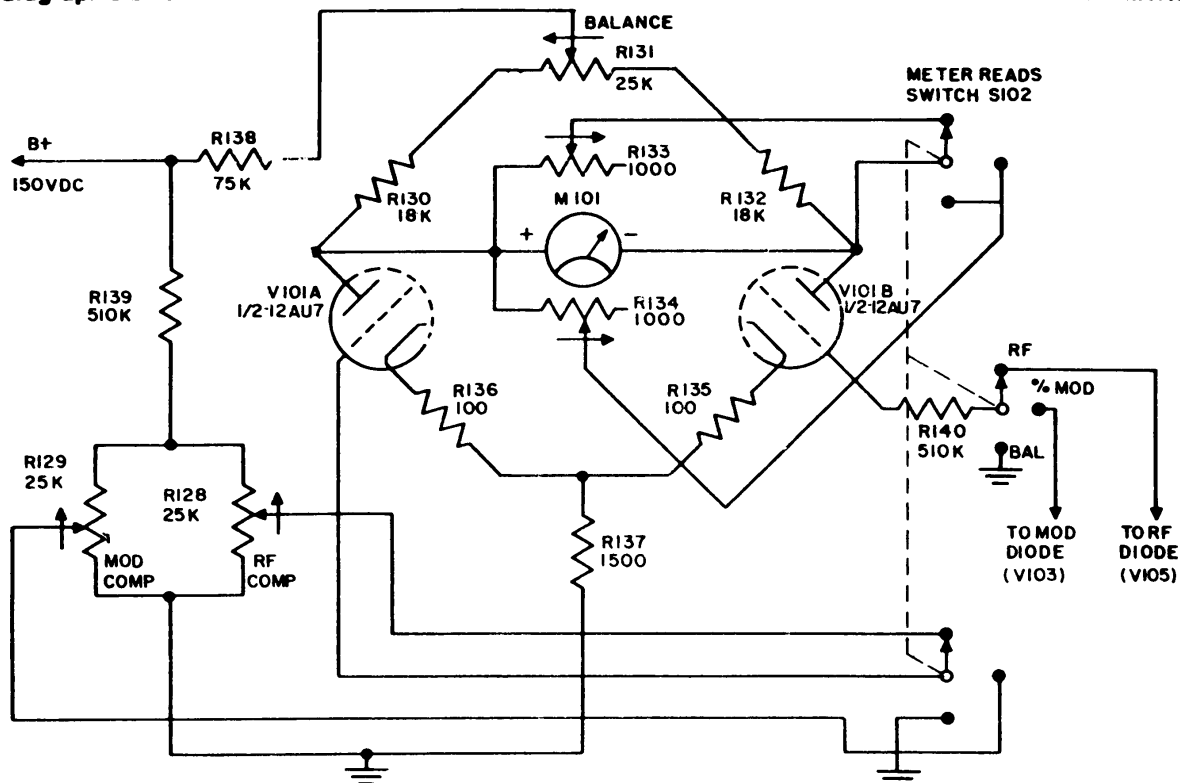


Figure 2-7. Schematic Diagram of the Voltmeter Bridge Circuit

gain of the modulating stage (buffer-amplifier) brought about by the audio voltage. This can be seen from an analysis of the Eg-Ip (grid voltage-plate current) curve of the tube. As the audio voltage on the grid swings up and down, the instantaneous operating point of the RF signal is changed. When this swing occurs over the nonlinear region of the Eg-Ip curve, the instantaneous gain of the tube, with respect to the RF signal, also changes. When this gain varies from zero to twice the gain at the quiescent point, 100% modulation will result. Similarly, degree of modulation will be 50%, when the gain varies from 1/2 to 1 1/2 times the gain at the quiescent point. The degree of modulation, therefore, depends only on the audio amplitude. A proportional part of this audio voltage is fed to the meter circuit and the percentage of modulation is read directly from the lower scale of M-101.

c. VOLTMETER BRIDGE CIRCUIT. (See figure 2-7).

(1) The voltmeter bridge (V-101) circuit provides a means for applying the rectified signals from either the RF or modulation diodes to the meter (M-101). The bridge circuit utilizes a tube type 12AU7 (V-101) dual triode and is located in the audio compartment. The principal electrical features of the voltmeter bridge circuit are shown in figure 2-7.

(2) The fundamental principle of the voltmeter bridge is that of a Wheatstone bridge in which the DC

plate resistances of the triode sections form two of the 2-6 arms. When the bridge is balanced, the DC plate resistances of both triode sections are equal and no current flows through the meter (M-101). The movement of this meter is such that 100 microamperes gives full scale deflection. Tube section V-101B is the "unbalancing" part of the bridge, its I/C plate resistance varying in accordance with the bias supplied by the rectified voltage from the RF diode (V-105) or modulation diode (V-103). The degree of unbalance is determined by the strength of the carrier signal or modulation voltage and is indicated by a reading on M-101

d. VOLTMETER BRIDGE ADJUSTMENTS.

(1) The RF COMP (R-128) and MOD COMP (R-129) controls are located on the audio compartment. They are provided to compensate for the contact potential of V-105 and V-103. This contact potential is due to the static emission present when the heated tube filaments create electrostatic fields in these diodes resulting in some flow of current. The effects of contact potential can be detected by first adjusting R-131 for zero meter reading with the METER READS switch (S-102) in the BAL position. Resistor R-131 varies the relative B+ voltage applied to the plates of both sections of V-101 until the bridge is balanced. With the MICROVOLTS control (R-155) and o/o MODULATION control (R-111) set fully counterclockwise M-101 should read zero in either the RF or % MOD positions of S-102. A

THEORY OF OPERATION

residual meter reading in either switch position indicates the presence of contact potential at the grid of V-101B. Adjustment of R-128 places a balancing potential on the grid of V-101A to compensate for this effect in the RF position of S-102. Resistor R-129 has a similar effect for the % MOD position of S-102.

(2) R-133 and R-134 are the meter sensitivity controls for the RF and % MODULATION scales of M-101. These potentiometers are adjusted whenever it is suspected that either meter range is incorrect. This procedure is discussed in Section 6 par. 10.

6. VARIABLE RF ATTENUATOR.

(See figure 2-8).

a. The RF attenuator circuit consists of a step attenuator (E-112) and dual potentiometer MICROVOLTS control (R-155), both located in the shielded buffer-amplifier compartment. Both controls vary the carrier voltage applied to the X MULT RF OUTPUT jack (J-102) but only the MICROVOLTS control (R-155) affects the voltage at the X 20, 000 RF OUTPUT jack (J-101). The value of the voltage at the X MULT RF OUTPUT jack (J-102) is determined by multiplying the meter (M-101) reading by the indicated position of the MULTIPLIER dial (1-104). The entire circuit is effectively resistive so that the attenuation introduced is substantially independent of frequency within the limits of the instrument. The output impedance of the attenuator system as taken from the X MULT RF jack (J-102) is constant at 53.5 ohms for any position of the attenuator MULTIPLIER dial (1-104). The attenuator (E-112) and associated circuit are shown, schematically in figure 2-8.

b. The X 20, 000 RF OUTPUT jack (J-101) voltage is taken from the dual potentiometer MICROVOLT control (R-155) and is not attenuated by the step attenuator (E-112). The voltage developed across this jack depends upon the setting of the CARRIER

**Section 2
Paragraph 5 a (3)**

CONTROL (R-123) and MICROVOLT control (R-155) and its output impedance is constant at 500 ohms. When this jack is terminated in its characteristic impedance (500 ohms), the output voltage is determined by multiplying the meter (M-101) reading by 10, 000. When it is not terminated (open circuited), the output voltage will be 20, 000 times the indicated reading on the meter (M-101).

c. Whenever the frequency of the signal generator is changed, reset the X 20, 000 RF OUTPUT jack (J-101) voltage for a meter (M-101) reading of "100," by rotating the MICROVOLT control (R-155) fully clockwise and then rotating the CARRIER CONTROL (R-123) in a clockwise direction until the meter reads "100." This represents two volts open circuit output from J-101 and one volt output when this jack is terminated in its characteristic impedance (500 ohms).

d. The step attenuator (E-112) attenuates the output from the X MULT RF OUTPUT jack (J-102) in steps of ten as indicated on the dial plate (1-104). The voltage at J-101 will not be affected by the position of this dial.

e. The useful output voltage from the X MULT RF OUTPUT jack (J-102) is always based on terminating this jack in its characteristic impedance (53.5 ohms); thus, when the output from J-102 is fed to a receiver under test, with the impedance properly matched, the reading on the signal generator meter will indicate the input voltage to the receiver under test. This is discussed more fully in section 2, paragraph 8, TERMINATING THE SIGNAL GENERATOR.

f. When the voltage from the X 20, 000 RF OUTPUT jack (J-101) is set at "100" on the meter, the maximum output from the X MULT RF OUTPUT jack (J-102), when correctly terminated (53.5 ohms) will be 0.1 volts. Within each step of the attenuator (E-112), the output from the X MULT RF OUTPUT jack (1-102) is varied

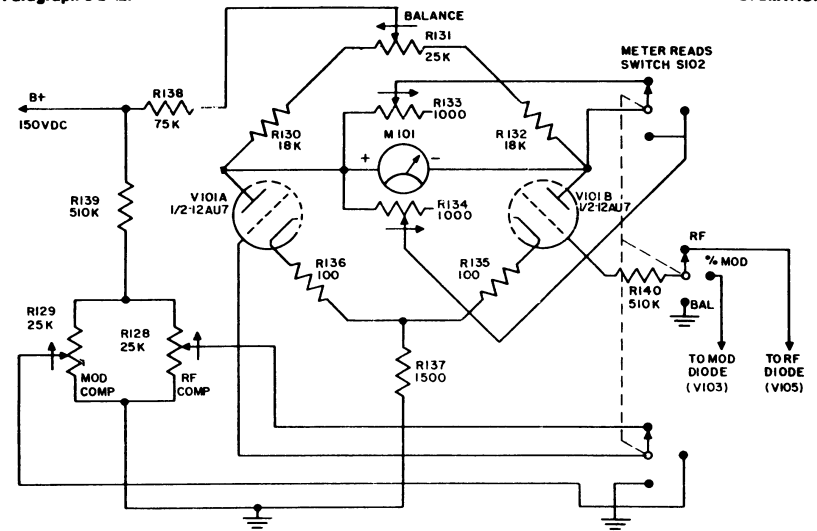


Figure 2-8. Schematic Diagram of the Variable RF Attenuator Circuit

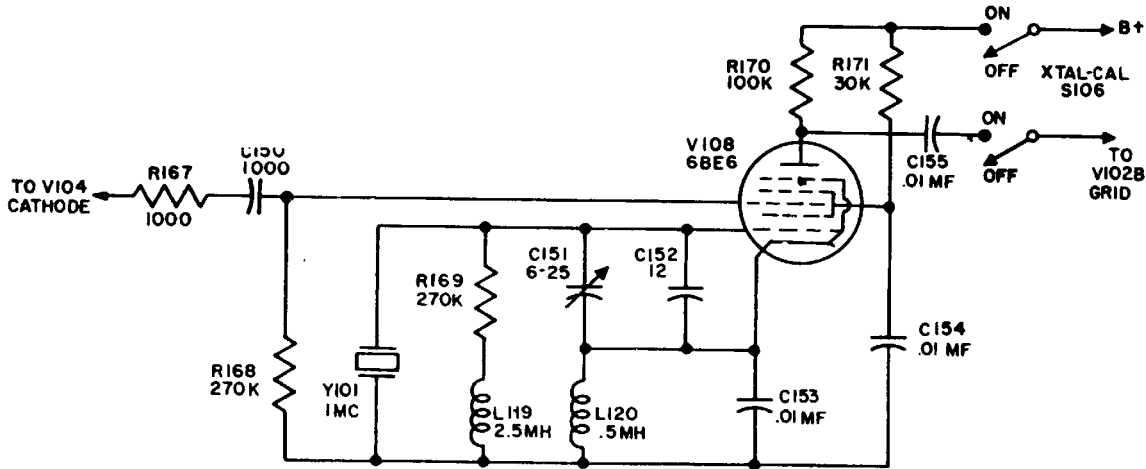


Figure 2-9. Schematic Diagram of Crystal Calibrator

by rotating R-155. The output voltage from this jack is determined in microvolts by multiplying the meter CM-101) reading by the corresponding position of the MULTIPLIER dial (I-104). Since the accuracy of all meters is expressed in terms of percentage error for full scale deflection, the technician should avoid using the meter calibrations below "20." Use the (5:1) FIXED ATTENUATOR CN-132/URM-25 whenever a meter voltage indication in this range is required. This attenuator is discussed more fully in paragraph 9 of this section.

g. For any particular carrier frequency, once the CARRIER CONTROL (R-123) has been rotated to give the required "100" meter indication, its setting should never be changed. The output from each attenuated step and from the X 20, 000 RF OUTPUT jack (J-101) is varied by adjusting the MICROVOLTS control (R-155). Whenever the generator frequency is changed, however, the CARRIER CONTROL must be reset to give the required "100" meter indication. This adjustment is made only after R-155 has again been rotated to the fully clockwise position.

h. When R-123 and R-155 have been adjusted to introduce a two volt signal (M-101 reads "100" and J-101 unterminated) to the step attenuator (E-112), the series voltage dropping resistor (R-143) reduces this voltage to 0.2 volts. The maximum output voltage available from the X MULT RF OUTPUT jack (.J-102) when this jack is terminated in 53.5 ohms, will, therefore,

be 0.1 volts. This will also be the maximum input voltage from this jack to a properly matched receiver under test. (See Section 2 par. 8). It is this voltage, under terminated conditions, that is actually indicated on M-101.

i. The MICROVOLTS control (R-155) is a two section potentiometer connected with two 500 ohm resistors (R-141, R-142) in the form of a T pad. It provides a smooth control of the voltage applied to the step attenuator, at the same time maintaining a constant impedance (500 ohms) across the output of the buffer-amplifier (V-104) and across the X 20, 000 RF OUTPUT jack (J-101).

j. The step attenuator (E-112) is a six section ladder resistive network and its output is attenuated in six steps. With the MICROVOLTS control (R-155) and the attenuator (E-112) in combination, any desired voltage

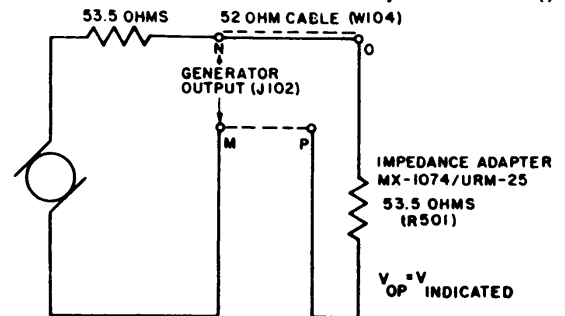


Figure 2-11. Equivalent Circuit of X MULT RF OUTPUT (J-102) with Impedance Adaptor MX-1074/URM-25 Added

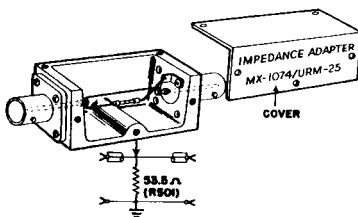


Figure 2-10. Impedance Adapter MX-1074/URM-25

THEORY OF OPERATION

between zero and 100, 000 microvolts can be obtained at the X MULT RF OUTPUT jack (J-102) when J-1C is terminated in its characteristic impedance (53.5 ohms). The input voltage to the receiver under test is thus determined by multiplying the meter (M-101) reading (upper scale) by the decimal multiplier indicated by the position of the MULTIPLIER dial (1-104). The lowest calibrated output voltage is 0.1 microvolts.

7. CRYSTAL CALIBRATOR.

See figure 2-9).

a. GENERAL-The RF Signal Generator Set AN/ URM-25B contains a crystal calibrator, incorporated in the audio compartment. This circuit provides crystal check points from 1 mc to 50 mc for purposes of interpolative calibration of the signal generator in this frequency range. The frequency accuracy of the crystal check points, at room temperature, and at the moment of checking is within $\pm .001\%$ or better. The overall frequency accuracy of the equipment (1 mc to 50 mc) when checked against the crystal calibrator, including all variations of operating conditions, is within $+ .050\%$. No provision is made for integral calibration below 1 mc where the accuracy is that of the direct reading frequency scale ($\pm .5\%$).

b. CIRCUIT ANALYSIS--(see figure 2-9). The crystal calibrator consists of a 1 mc crystal (Y-101) and an oscillator-mixer circuit utilizing a type 6BE6 pentagrid converter (V-108). A portion of the RF signal is fed from the cathode of buffer-amplifier V-1C4 to the mixer grid of V-108 via isolation resistor R-167 and coupling capacitor C-150. Although the cathode of V-104 is bypassed for RF, sufficient RF energy is available to operate the crystal calibrator. The oscillator section of V-108 is analogous to a Colpitts oscillator with 1 mc crystal Y-101 serving as the tuned circuit and the screen grid acting as the plate. Grid resistor R-169 is the grid leak DC return for the oscillator grid. Trimmer C-151 is provided for adjusting the 1 mc frequency of the oscillator against a primary standard. RF chokes L-119 and L-120 serve to increase the harmonic generation of the crystal oscillator and thereby extend the useful range of the calibrator to 50 mc. When XTAL-CAL switch S-106 is in the ON position, B+ is fed to the plate via plate load R-170 and to the screen via load resistor R-171. When calibrating, the output of V-108 will be the audio beat difference between the signal generator frequency and the crystal harmonic frequency. This audio beat is fed to the grid of V-102B via switch S-106. V-102B amplifies this beat and the resultant signal is fed to the EXT MOD IN jack J-103 when MOD SELECTOR switch S-103 is in the XTAL (EXT) position. Connector, Adapter UG-684/U is provided to adapt BNC type jack J-103 to a standard phone jack when monitoring for zero beat. Crystal earphones should be used when calibrating since the impedance at J-103 is high.

8. TERMINATING THE SIGNAL GENERATOR.

a. The termination principles herein discussed are

Section 2 Paragraph 6 j

based on the assumption that the load is essentially resistive in nature. This is true for most applications for which this equipment is used in the field. In cases where the load is not resistive, it will be necessary for the technician to interpret these principles with respect to the nature of the load.

b. A CG-409A/U (4'0") coaxial output cable assembly (W-104) consisting of a four foot length of RG58A/U cable and terminated at each end with a type UG-88/U connector is supplied with the signal generator. This cable is intended for use with the X MULT RF OUTPUT jack (J-102) and has a characteristic impedance of 52 ohms.

c. Cable W-104 has a capacitance of 28.5 mmf/ft or a total capacitance of 114 micromicrofarads for the entire four foot length. The resultant reactance would have no appreciable effect on the output of J-102 at frequencies below 1 mc and therefore, standing waves do-not introduce a termination problem at these frequencies.

d. At frequencies greater than one megacycle, the decrease in cable reactance begins to introduce a pronounced shunting effect on the 53.5 ohm generator terminal (J-102) impedance and it becomes necessary to correctly terminate the receiving end of W-104 in order to eliminate standing waves. There is no need to terminate the signal generator end of the cable since its characteristic impedance of 52 ohms is approximately the same as the characteristic impedance across J-102.

e. The characteristic impedance across the X 20, 000 RF OUTPUT jack (J-101) is 500 ohms and the cable assembly W-104 should not be used with this jack. An accessory seven inch CG-409A/U (7") cable assembly (W-105) consisting of RG58A/U cable and one UG-88/U connector at each end is provided for use with J-101. Since this cable is much shorter than the four foot cable assembly, the effects of a mismatch at the X 20, 000 RF OUTPUT jack (J-101) are negligible.

f. When the 52 ohm cable assembly (W-104) is plugged into the X MULT RF OUTPUT jack (J-102), and terminated properly (53.5 ohms -no standing waves will be present. An IMPEDANCE ADAPTER MX-1074/URM-25 consisting of a 53.5 ohm composition resistor (R-501) contained in a rectangular aluminum case (See figure 2-10) is supplied with the equipment. This unit has one UG-185/U connector at each end and is inserted between the receiver under test and the receiver end of cable W-104 when the receiver load impedance is at least ten times the generator output impedance (i.e. approximately 500 ohms).

It is apparent from figure 2-11 that the voltage appearing across this terminating resistor at points OP will be one half the open circuit voltage across the generator output at J-102 represented by points MN. However, since the meter (M-101) was calibrated with respect to a correctly terminated load, the reading on the meter will actually reflect the input voltage to the receiver under test.

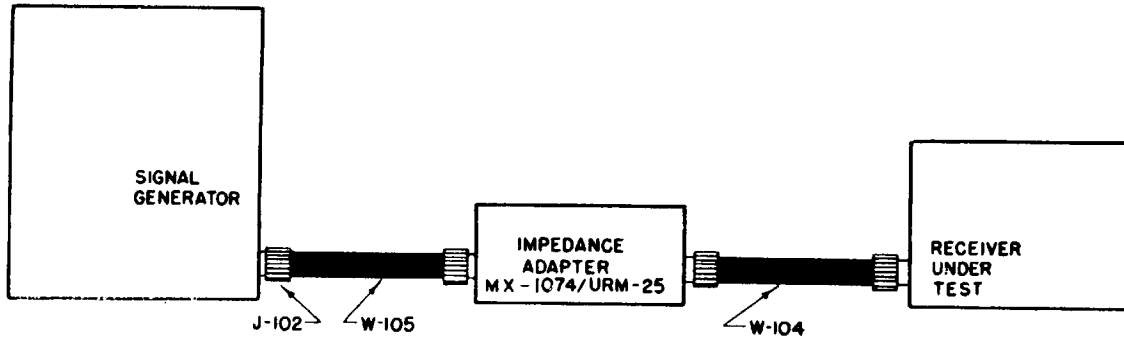


Figure 2-12. Method for Inserting Impedance Adapter MX-1074/URM-25 at J-102

Figure 2-12 illustrates the method for inserting the impedance adapter.

g. When the load impedance is less than 53.5 ohms, the impedance adapter cannot be used. In this case, a non-inductive composition resistor should be added in series with the input element at the receiver under test, so that the sum of the receiver input impedance and this receiver under test, so that this resistor will be 53.5 ohms (See figure 2-13). The total load impedance will then match the signal generator impedance at J-102 and standing waves will be minimized. The actual receiver input voltage can then be calculated from the formula indicated in figure 2-13. W/hen applying this procedure, it will probably be necessary to file down a larger standard resistor to get the precise value required. Use the Resistance Bridge ZM-4/U or equivalent to measure the resistance. For example; if the load impedance of the receiver (Z) is equal to 30 ohms, a series resistor (R) of 23.5 ohms must be added in series with the receiver. A meter (M-101) indication of 10, 000 microvolts will then represent an actual receiver input as follows:

$$E \text{ load} = \frac{Z}{53.5} \times M = \frac{30}{53.5} \times 10,000 = 5607 \text{ microvolts}$$

To minimize leakage and other losses this series resistance should be inserted as closely as possible to the input element of the receiver or instrument under test.

h. If the load impedance is considerably less than 500 ohms, but more than 53.5 ohms, the impedance adapter is replaced by a non-inductive composition resistor which shunts the load (see figure 2-14). The equivalent impedance of the shunt and load should equal the generator impedance (53.5 ohms). The receiver input voltage will then be equal to the meter indication. For example; if the receiver input impedance (Z) is 120 ohms, select the correct shunt resistor (R) as follows:

$$R = \frac{53.5 \times Z}{Z - 53.5} = \frac{53.5 \times 120}{120 - 53.5} = \frac{6420}{66.5}$$

$$R = 96.05 \text{ ohms}$$

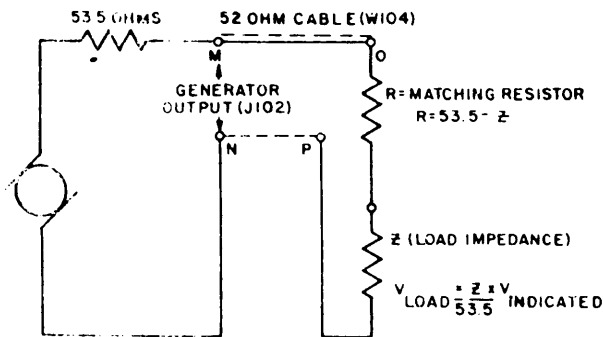


Figure 2-13. Equivalent Circuit of X MULT RF OUTPUT (J-102) with Series Matching Resistor Added

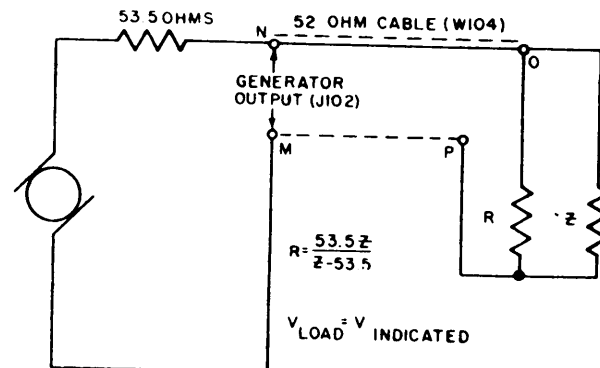


Figure 2-14. Equivalent Circuit of X MULT RF OUTPUT (J-102) with Shunt Resistor Added.

TABLE 2-1. METHODS FOR CORRECTLY TERMINATING THE SIGNAL GENERATOR AT J-102

| LOAD IMPEDANCE | METHOD | FIGURES | PARAGRAPH |
|-------------------------------------|----------------------------------|----------------|-----------|
| Less than 53.5 ohms | Series Resistor | 2-12 | 8g |
| 53.5 ohms to approximately 500 ohms | Parallel Resistor | 2-13 | 8h |
| 500 ohms or greater | Impedance Adapter MX-1074/URM-25 | 2-10;2-11;2-12 | 8f |

Section 2
Paragraph 8 h

It is apparent that the meter (M-101) indication will be the same as the actual input voltage to the receiver. If an accurate voltage indication is required, it will be necessary to file down a standard resistor until the desired value is obtained. Use the Resistance Bridge ZM-4/U or equivalent to determine when this value has been reached.

i. Table 2-1 shows the most desirable type of termination for any particular load impedance.

9. (5:1) FIXED ATTENUATOR CN-132/URM-25.

(See figure 2-15).

a. The (5:1) Fixed Attenuator CN-132/URM-25 consists of a two section rectangular aluminum case approximately 2" long x 1" high x 1" wide. A type UG-185/U connector is provided at each end to fit W-104 output cable CG-409A, /U (4'0"), and W-106 output cables CG-409A/U (7"). These cables are used as required(to make the necessary connections.

b. The schematic diagram and outline draping of the 5:1 fixed attenuator is shown in figure 2-15. It is designed to be used when the input impedance of the receiver under test is 53.5 ohms and consists of four resistors (R-303, R-304, R-, 05, R-306) connected in parallel to give an equivalent resistance of 22.3 ohms. These parallel resistors are then connected with two 35.6 ohms resistors to form a "T" network. It can readily be calculated that the output terminal voltage of this attenuator unit will be one fifth its input voltage when the CN-132/URM-25 is properly terminated in 53.5 ohms. It therefore follows that the voltage output from the fixed attenuator will be one fifth the voltage indicated by M-101.

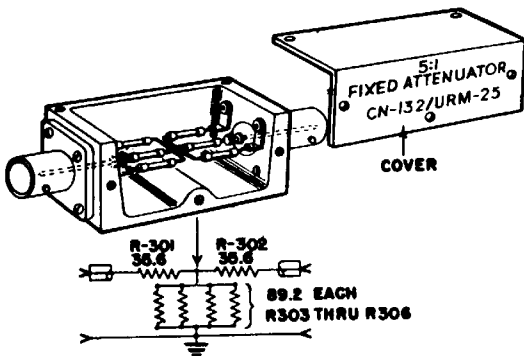


Figure 2-15. (5:1) Fixed Attenuator CN-132/URM-25 with Schematic Diagram Shown

c. The 5:1 fixed attenuator is designed for a 53.5 ohm terminating impedance and should be used in conjunction with the X MULT RF OUTPUT jack (J-102), never with the X 20, 000 RF OUTPUT jack (J-101).

THEORY OF OPERATION

d. Although this unit was designed primarily for use with a load impedance of 53.5 ohms, it may also be used when the receiver under test presents an impedance other than 53.5 ohms. In such case, it will be necessary to apply the terminating principles as outlined in paragraph 8 and in Table 2-1 of this section. For example;

(1) If the load impedance is 1000 ohms, connect one end of W-104 to J-102 on the signal generator. Connect the other end of W-104 to the fixed attenuator and terminate the fixed attenuator with the impedance adapter. This assembly is then connected to the load. A meter indication of 10i, 000 microvolts now reflects an actual load input voltage of 2000 microvolts.

(2) If the load impedance is 30 ohms do not use the impedance adapter. Insert a 23.5 ohm non-inductive resistor in series with the output of the fixed attenuator and then connect to the 30 ohm load. A meter indication of 10, 000 microvolts now represents an actual load voltage as follows:

$$E_{load} = \frac{Z}{53.5} \times \frac{M}{5} = \frac{30}{53.5} \times \frac{10,000}{5}$$

$$E_{load} = \frac{60,000}{53.5} = 1122 \text{ microvolts}$$

e. A coaxial adapter UG-201/U is also provided with the equipment to allow for adapting the output cables type BNC connectors (i.e. UG-88/U) to a type N connector found on many receivers.

10. (10:1) FIXED ATTENUATOR CN-136/URM-25.

a. The (10:1) Fixed Attenuator CN-136/URM-25 is physically identical to the (5:1) Fixed Attenuator CN-132/URM-25. It consists of four 43.2 ohm resistors (R-803 thru R-806) connected in parallel to give an equivalent resistance of 10.8 ohms. These parallel resistors are connected with two 43.8 ohm resistors (R-801, R-802) to form a "T" network. This unit is the same in principle as the 5:1 attenuator (see Section 2, par. 9) but introduces a voltage attenuation of 10:1 instead of 5:1 when terminated in 53.5 ohms.

b. This 10:1 fixed attenuator is provided for use at frequencies above 18 mc (band H) when extremely accurate low level signal generator outputs are required. This applies only to the last two steps (X.01, X.1) of the step attenuator (E-112), where the presence of some residual leakage voltage or faulty grounds might effect the output accuracy at these higher signal generator frequencies. For example; if it is desired to select an accurate 6 microvolt output at 30 mc, the MULTIPLIER dial (I-104) should be set at X1 with the output meter (M-101) adjusted for a reading of "60." Insert the 10:1 fixed attenuator at J-102 and terminate it in 53.5 ohms as

Section 2
Paragraph 10 b

THEORY OF OPERATION

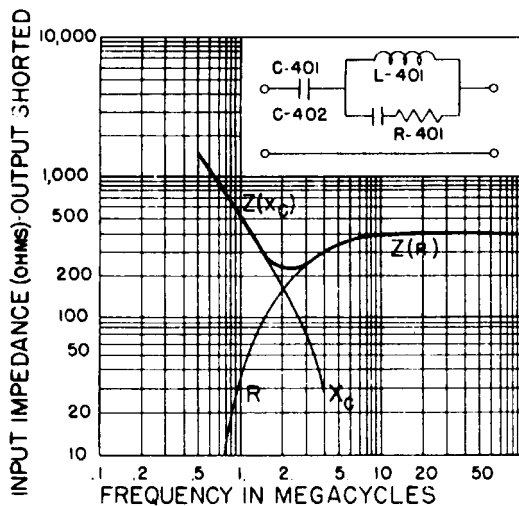


Figure 2-16. Schematic Diagram of the Antenna Simulator SM-35/URM-25 with Input Impedance-Frequency Curve as described in paragraph 8 of this section. The output across the 53.5 ohm load will then have an accurate value of 6 microvolts.

11. ANTENNA SIMULATOR SM-35/URM-25.

(See figure 2-16).

a. Antenna Simulator SM-35/URM-25 is contained in an aluminum case of the same type and physical dimensions as the impedance adapter and fixed attenuator units. One type UG-185/U connector is provided at each end for connecting to any one of output cables W-104, W-105, or W-106.

b. The circuit consists of a 200 micromicrofarad capacitor (C-401) in series with a series-parallel arrangement consisting of a 400 micromicrofarad capacitor (C-402), a 400 ohm resistor (R-401), and a 20 microhenry inductor (L-401). At frequencies above 2.5 megacycles, the antenna simulator unit acts like a pure resistance of from 220 ohms to 400 ohms. Below 1.6 megacycles, the circuit acts like a capacitance of 200 micromicrofarads in series with an inductance of 20 microhenries and a resistance of 15 ohms.

c. From the impedance curve (figure 2-16), it can be seen that the minimum impedance of the antenna simulator will be approximately 220 ohms. When using this unit, first connect one end of the Impedance Adapter MX-1074/URM-25 to the output cable (W-104) and plug the other end of W-104 into J-102 on the signal generator. Using the auxiliary cable (W-105), connect the antenna simulator to the impedance adapter. If necessary, the second auxiliary cable (W-106) may then be used to connect the antenna simulator to the receiver under test.

d. In using the antenna simulator, it should be realized that the significant voltage is the input and not output voltage of the antenna simulator. The reason for this is that the antenna simulator approximates a

standard antenna which forms a part of the overall sensitivity measurement of a receiver designed for use with it. For example; if the output frequency of the signal generator is 20 mc, it can be seen, from figure 2-16 that the series impedance of the antenna simulator will be approximately 400 ohms resistive. Make the necessary connections as indicated in paragraph 11c of this section. A meter indication of 10,000 microvolts represents an input voltage of 10,000 microvolts to the antenna simulator.

e. For accurate receiver output voltage indication, it should be remembered that the total load impedance represented by the antenna simulator in series with the load of the instrument under test should be at least 500 ohms. From figure 2-16, it is apparent that the accuracy will be sufficiently good at frequencies above 5mc. Below 5mc, the impedance falls off to approximately 220 ohms and the receiver input load should be sufficiently high (approximately 280 ohms or greater) to maintain the accuracy.

12. TEST LEAD CX-1363/U.

(See figure 2-17)

a. The Test Lead CX-1363/U should be used for making interstage receiver measurements. It consists of a 0.1 microfarad capacitor (C-601) in parallel with a 510 micromicrofarad capacitor (C-602) enclosed in an aluminum case similar to the antenna simulator and fixed attenuator units. One end of this case is terminated in a type UG-185/U connector. Two 18" long clip leads extend from the other end. The capacitor network is in series with the red lead, whereas the black lead is grounded to the case.

b. The capacitor network is inserted to protect the attenuator (E-112) of the signal generator from accidental test probing at points of B + potential and should always be used when making interstage receiver tests.

c. The reactance of the test lead capacitors should not normally affect the accuracy of the meter (M-101) voltage indication since, in most cases, the impedance at receiver interstage measurement points will be high. It must be realized, however, that when the CX-1363/U is used at test points of low impedance (below 400 ohms) the meter indication can no longer be depended upon to reflect the actual signal voltage applied.

13. POWER SUPPLY PP-562A/URM-25.

(See figure 2-18).

a. The power supply is an integral part of the RF Signal Generator Set AN/URM-25B and is completely contained in a separate sub-chassis located to the rear of the RF signal generator unit SG-44B/URM-25. It employs a full wave rectifier type 6x4 tube (V-201). The interconnecting power cable (W-102) is a two conductor cable with a two prong connector (P-101) on one end.

THEORY OF OPERATION

**Section 2
Paragraph 5 a (3)**

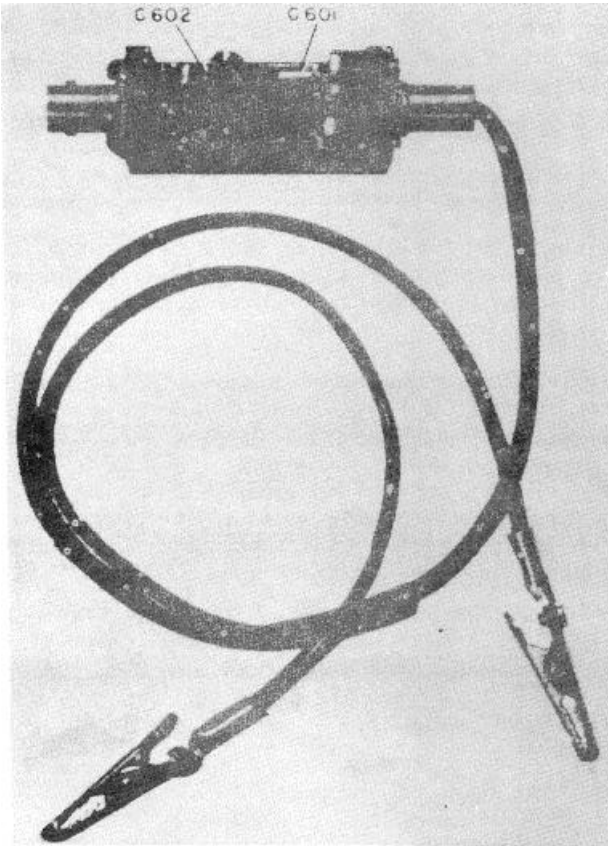


Figure 2-17. Test Lead CX-1363/U

The other end of this cable is soldered to the AC input fuses (F-101, F-102) located on the front panel of the signal generator. When the connector (P-101) is plugged into the power supply input power receptacle (J-201), this cable assembly (W-102) transfers AC power from the front panel to the rectifier sub-chassis. This interconnecting cable is connected in place and need not be installed prior to using the signal generator. A type OD₃ (V-202) regulator tube is used for maintaining a regulated 150 volt DC output to all tubes except the buffer-amplifier (V-104) and crystal calibrator V-108. The principal electrical features of the rectifier power unit are Section 2 Paragraph 13 shown in figure 2-18.

b. The power transformer (T-201) has a 450 volt center tapped high voltage secondary and a 6.3 volt filament secondary. It is so designed to permit satisfactory operation from a 115V ($\pm 10\%$), single phase AC source of from 50 to 1600 cycles per second. Each side of the input AC line is fused (F-101, F-102). An RF filter network consisting of two 1000 micromicrofarad capacitors (C-138, C-139) and two RF chokes (L-115, L-116) enclosed in a metal shield is mounted on the rear of the front panel of the RF Signal Generator SG-44B/URM-25 (see figure 6-12). This network by-passes stray RF currents from the power line.

c. The plate supply voltage derived from the high voltage secondary and rectifier tubes (points PQ on figure 2-18) is approximately 240 %volts DC and must be reduced to the required 150 volts DC regulated supply for all tubes except V-104 and V-108. This voltage drop is achieved by the DC series dropping network (L-201, R-201). A PI filter consisting of a choke (L-201) and three 4 microfarad capacitors (C-201, C-202, C-203) is provided as a ripple filter. The two 4 microfarad capacitors (C-202, C-203) are connected in parallel to increase the effective capacitance. A single 8 microfarad capacitor would introduce a problem of physical location. An additional .15 microfarad capacitor (C-204) is inserted in parallel with L-201 to form a 120 cycle resonant filter. This resonant filter lowers the 120 cycle power supply hum level.

d. In a regulator tube such as the OD₃ (V-202), the voltage across the tube (150vDC) remains constant over a fairly wide range of current (5 to 40 ma) through the tube. This property exists because the degree of ionization of the gas in the tube varies with the amount of current that the tube conducts. When a large current is passed, the gas is highly ionized and the internal impedance of the tube is low. When a small current is passed, the gas is ionized to a lesser degree and the internal impedance is high. Over the operating range of the tube, the product ($I \times R$) of the current through the tube and the internal impedance of the tube is practically constant. If the supply voltage (points PQ on figure 2-18) drops, the voltage across the glow tube (V-202)

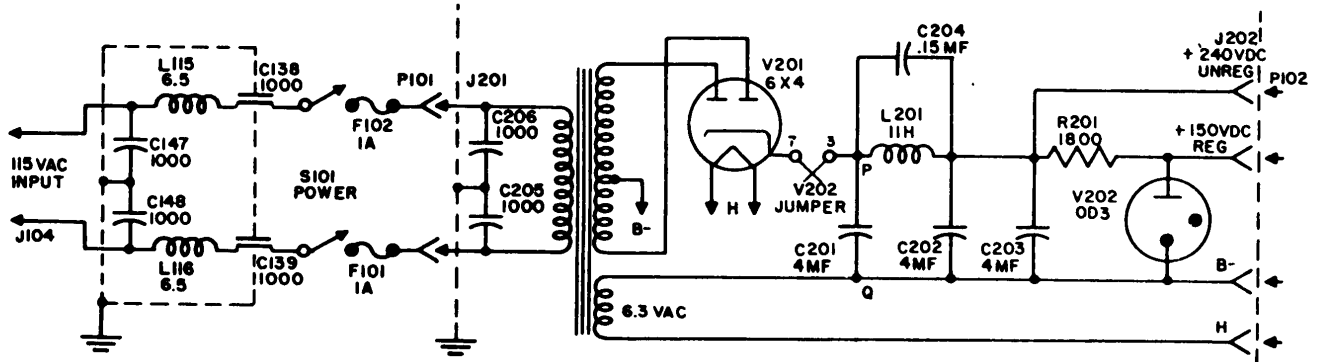


Figure 2-18. Schematic Diagram of the Power Supply PP-562A/URM-25.

Section 2
Paragraph 13 d

**THEORY OF
OPERATION**

would tend to drop. However, the gas in the glow tube deionizes slightly and less current passes through the tube. The current passing through the series DC dropping network (L-201, R-201) is also decreased by the amount of this current decrease in the glow tube. This would develop sufficiently smaller voltage drops across the series DC network to maintain the required stable 150 volts drop across the glow tube. A rise in supply voltage is similarly compensated for.

e. The regulator glow tube (V-202) also provides for a stable output voltage when the load impedance varies. If the load increased, more current would flow through the dropping network (L-201, R-201). This would tend to drop the 150vDC output voltage across the glow tube. Instead this voltage drop tendency slightly deionizes the glow tube resulting in an increase in its internal impedance. This increase in glow tube impedance, relative to the DC impedance of the series dropping network, again raises the power unit output voltage to the required 150vDC.

f. The 6.3 volt filament supply (one side B-) and the 150vDC output and 240vDC outputs are connected to the power unit output receptacle (J-202). These voltages are transferred to the signal generator sub-chassis through power cable W-103. The B-lead from J-202 is not grounded to the power supply chassis but is carried to a single ground point in the audio compartment. The power supply chassis, however, is grounded to the other units of the signal generator. The reason for this separate B-ground is to eliminate RF leakage due to ground voltage gradients. Whenever the power supply is tested separately from the signal generator, voltage measurements should, therefore, be

made between the test voltage point and B- not to the chassis.

14. INCIDENTAL FREQUENCY MODULATION.

a. Some incidental frequency modulation is present in the RF Signal Generator Set AN/URM-25B, as in other amplitude modulated type signal generators. Figures 2-19 through 2-22 were taken at the Naval Research Laboratories in Washington, D. C., and show the carrier and side bands of a previous model of this signal generator at the frequencies indicated when 30% modulated at 400 cycles. Figure 2-19 shows the carrier and a single pair of sidebands. This condition of low incidental FM is generally characteristic of the AN/URM-25B for most carrier frequencies at low degrees of modulation. As a slight degree of frequency modulation develops, the two side bands become unequal in amplitude. This is shown in Figures 2-20 and 2-21. With the presence of increasing degrees of incidental frequency modulation, additional side bands develop. This is represented in Figure 2-22.

b. For greatest accuracy in all amplitude modulated signal generators, sensitivity, selectivity, image ratio, AVC characteristics, and other receiver measurements (except audio response) should be made with an unmodulated carrier signal. This method is discussed in Section 4, par. 14b. When the technician uses a modulated carrier signal the degree of modulation should be kept as low and the audio frequency as high as will serve the purpose of the measurement. In addition, make use of the frequency band overlap by setting the signal generator at the low (maximum capacitance) end of the band wherever possible.

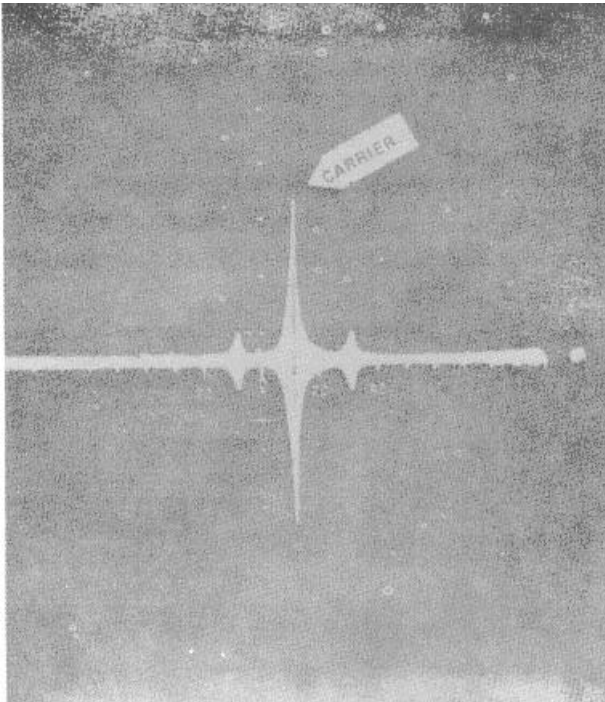


Figure 2-19. Frequency Spectrum with 400 Cycle 30 % Modulation at 240 kc on Band D

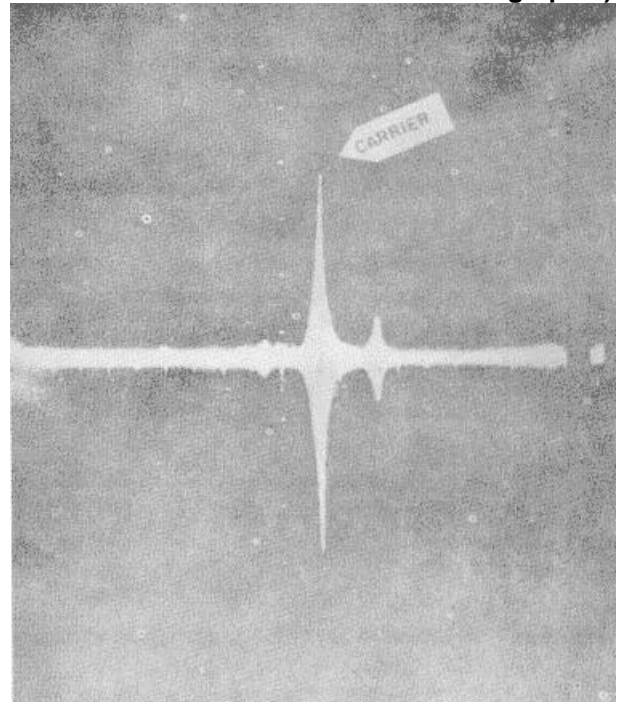


Figure 2-20. Frequency Spectrum with 400 Cycle 30% Modulation at 660 kc on Band D


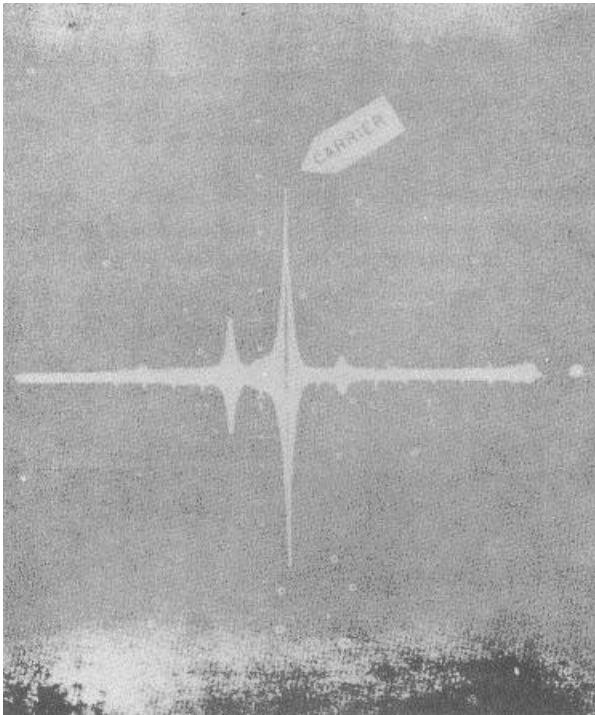


Figure 2-21. Frequency Spectrum with 400 Cycle 30% Modulation at 16 mc on Band H

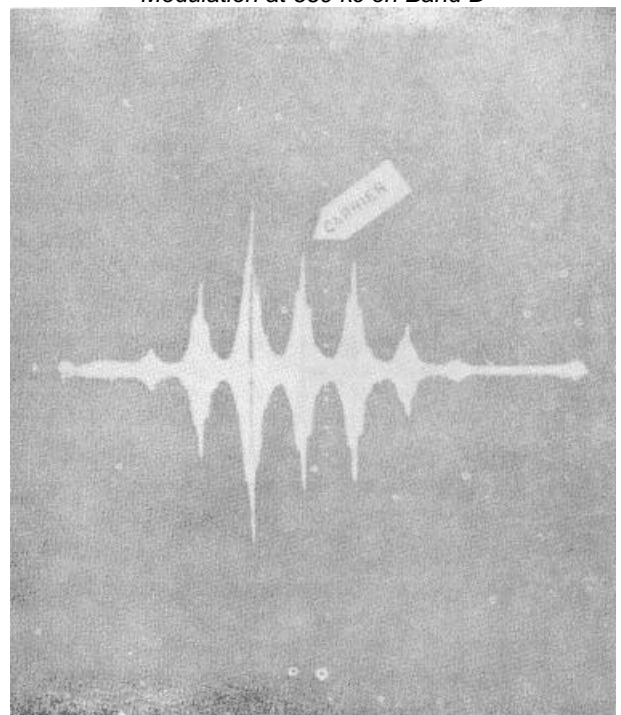

(NOTE: This is beyond specified range of Bond G)
Figure 2-22. Frequency Spectrum with 400 Cycle 30% Modulation at 19 mc on Band G

SECTION 3
INSTALLATION

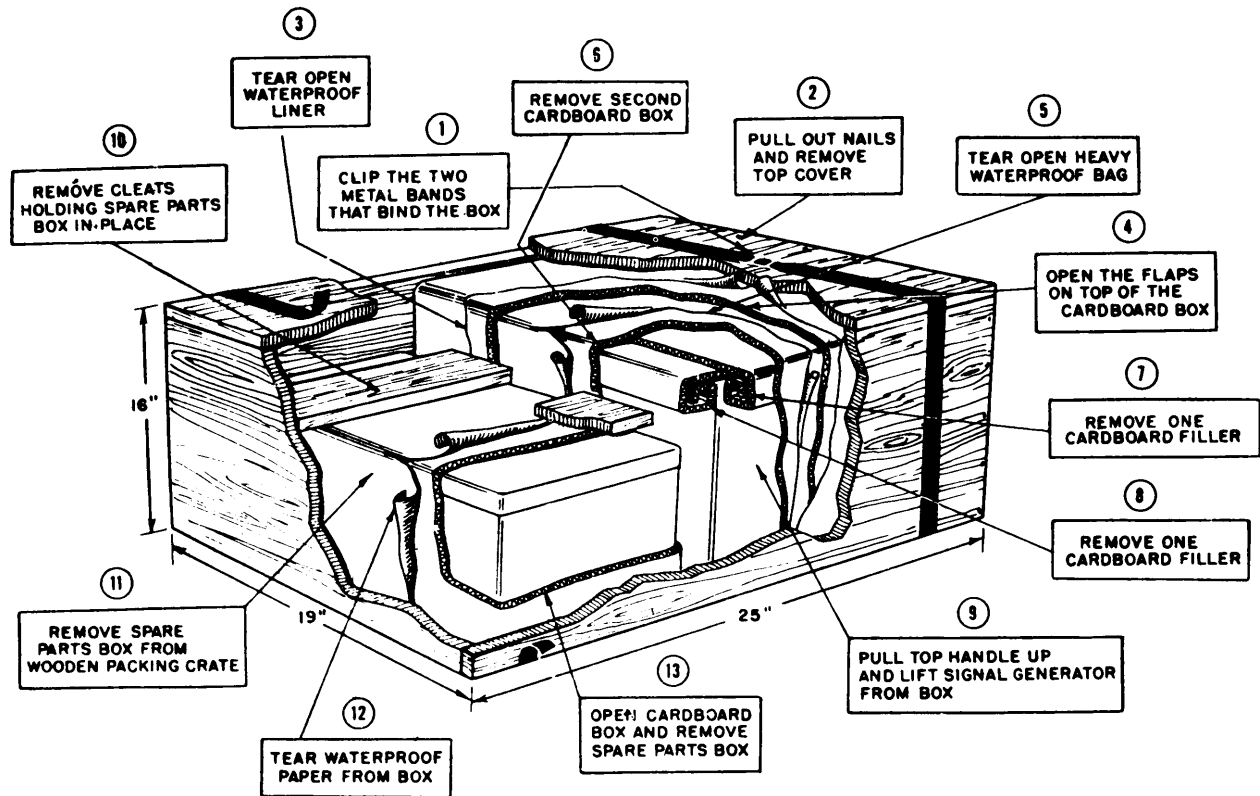


Figure 3-1. RF Signal Generator Set AN/URM-25B, Unpacking Procedure

1. UNPACKING

a. The AN/URM-25B is packed in a wooden box together with a set of equipment spares. Electron tubes are shipped in place. The signal generator with accessories, and the set of spares are, in turn, enclosed in separate, specially cushioned cardboard cartons. Exercise great care in removing these items (See figure 3-1).

b. The location of the accessories, in the signal generator carton, are as follows: (See Section 1, figure 1-1).

(1) Antenna Simulator SM-35/URM-25, (5:1) Fixed Attenuator CN-132/URM-25, (10:1) Fixed Attenuator CN-136/URM-25, Impedance Adapter MX-1074/URM-25, Test Lead CX-1363/U, Coaxial Adapter UG-201/U, Connector Adapter UG-684/U, and Instruction Book will be found on the inside of the panel cover. An aluminum plate with ferrule clips is provided for mounting these units.

(2) Power cable W-101 and output cables W-104, W-105, W-106 are also mounted on this aluminum plate.

c. Dimensions of the signal generator are shown in Figure 3-2.

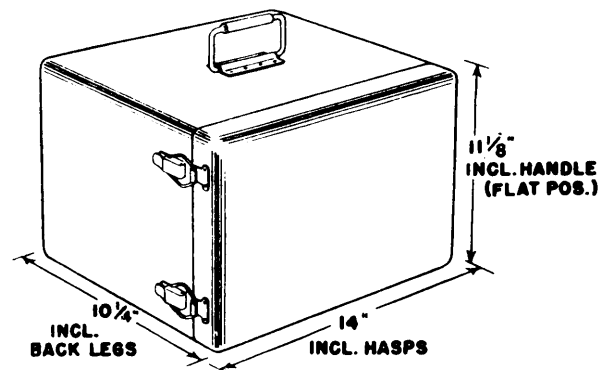


Figure 3-2. RF Signal Generator Set AN/URM-25B, Outline Dimensional Drawing

INSTALLATION

Section 3 Paragraph 2 a

2. INSTALLATION.

a. The AN/URM-25B is a portable signal generator and does not require permanent installation.

b. The equipment is intended to be operated with the panel in the vertical position. Rubber supporting feet are provided for the cabinet. These feet protect the finished surface and serve to insulate the cabinet from a grounded desk. This insulation precaution, however, is not normally required.

c. The following preliminary settings and checks are required prior to placing the equipment in operation (See figure 4-1).

- (1) Turn POWER switch (S-101) to OFF position
- (2) Turn CARRIER CONTROL E-101 to the fully counterclockwise position.
- (3) Plug power cable W-101 into power receptacle J-104
- (4) Insert other end of power cable W-101 into 115 volt AC source

3. ADJUSTMENTS.

a. All operating adjustments are described in Section 4 OPERATION

b. The following preliminary checks and adjustments may be required in zero setting the meter (M-101). All symbols designations in this paragraph refer to Section 4, figure 4-1.

(1) Turn CARRIER CONTROL E-101 and % MODULATION control E-104 to the fully counterclockwise positions.

(2) Turn the signal generator on by placing POWER switch S-101 to the ON position. (Allow a 15 minute warm-up period).

(3) Set METER READS dial I-105 first in the RF position and then in % MOD and BAL positions. Meter M-101 should read zero. in all positions.

(4) If the meter does not read zero, follow the meter calibration procedure outlined in Section 6, par. 10.

SECTION 4

OPERATION

1. GENERAL.

a. It is the purpose of the OPERATION section to instruct personnel in the proper use of the AN/URM 25B as a test instrument. To be thoroughly familiar with the method of operation, it is suggested that both , and this section be read and studied.

b. In the development of this section, an attempt has been made to present each step in the logical sequence

necessary to place the equipment in operation. If these steps are carefully adhered to, the operator will not only avoid damaging the signal generator but will be assured of a correct interpretation of the data as prescribed by the instrument. Table 4-1 is an operational summary of all front panel controls.

c. The essential details of operation and the necessary precautions to be taken are covered in this section under the following headings and paragraphs:

- (1) Power circuit Par. 2
- (2) Calibrating the Electron Tube Voltmeter..... Par. 3
- (3) Adjusting Carrier Frequency..... Par. 4
- (4) Crystal Calibrator..... Par. 5
- (5) Adjusting Output Voltage Par. 6
- (6) Internal Modulation Par. 7

- (7) External Modulation Par. 8
- (8) Coupling to the Receiver Under Test..... Par. 9
- (9) Use of Antenna Simulator SM-35/URM-25..... Par. 10
- (10) Use of (5:1) Fixed Attenuator CN-132/URM-25..... Par. 11
- (11) Use of (10:1) Fixed Attenuator CN-136/URM-25 Par. 12
- (12) Summary of Operation Par. 13
- (13) General Instructions for Use Par. 14

NOTE

All reference to symbol designations in this section apply to the front panel diagram Figure 4-1 unless otherwise specified. Primary reference is made to the symbol designation of the front panel knob (i.e. E-101) applicable to the specific circuit element (i.e. R-123). The association between the knob and circuit part is shown on Figure 4-1 by indicating the corresponding circuit element designation following the knob symbol (i.e. E-101 (R-123)).

TABLE 4-1. OPERATIONAL SUMMARY OF FRONT PANEL CONTROLS (See figure 4-1)

| SYM. NR. | PANEL CONTROL | FUNCTION |
|----------|-----------------------------------|--|
| E-101 | CARRIER CONTROL. | Set carrier level. |
| E-102 | CARRIER RANGE switch. | Set to indicated frequency range. |
| E-103 | MICROVOLTS control. | Adjust output. |
| E-104 | % MODULATION control. | Adjust percentage modulation. |
| E-10 | FREQUENCY BAND SWITCH knob. | Select desired frequency band (A thru H). |
| H-101 | Dial Mask. | Makes visible only frequency band selected. |
| I-103 | Main Tuning dial. | Selects desired frequency. |
| I-104 | MULTIPLIER dial. | Attenuates output from J-102 in steps of 10. |
| I-105 n | METER READS dial. | Select desired meter indication. |
| I-107 | MOD SELECTOR - XTAL SELECTOR dial | Select type of modulation or crystal beat output. |
| J-101 | RF OUTPUT X 20, 000 | .500 ohms, 2 volts open circuit RF output. |
| J-102 | RF OUTPUT X MULT. | 53.5 ohm step attenuator output. |
| J-103 | EXTERNAL MOD INPUT. | Input for external modulation, audio output, crystal beat output |
| N-102 | Frequency scale. | Indicates output frequency. |
| S-106 | XTAL CAL | Turns Crystal Calibrator ON or OFF. |

2. POWER CIRCUIT.

a. The CARRIER CONTROL knob (E-101) should be turned fully counterclockwise before turning the POWER switch (S-101) to the ON position.

b. Plug the power cable (W-101) into the power receptacle (J-104). Insert the other end of the power cable into the 115 volt AC source.

c. Turn the POWER switch (S-101) to the ON position. Line voltage is now applied through the interconnecting power cable (W-102) to the primary of the power transformer (T-201). This is shown schematically in Figure 6-23.

d. No other power switches are provided and the signal generator is now in operating condition. A minimum 15 minute warm up period should then be allowed prior to setting the generator for use. This period permits the instrument to reach a stable operating state.

3. CALIBRATING THE ELECTRON TUBE VOLTMETER.

NOTE

Meter M-101 is an hermetically sealed unit and the screw zero set adjustment has been covered with solder. Due to variations in the temper of the meter movement spring, M-101 may not always read zero (meter needle on first line to the left) before the signal generator is turned on. If this condition exists, apply a hot soldering iron to this screw and make the necessary zero setting before applying power to the signal generator.

a. Although the electron tube voltmeter is calibrated at the factory, physical agitation, changes in tube characteristics and environmental conditions may make it necessary to recalibrate the meter circuit before the signal

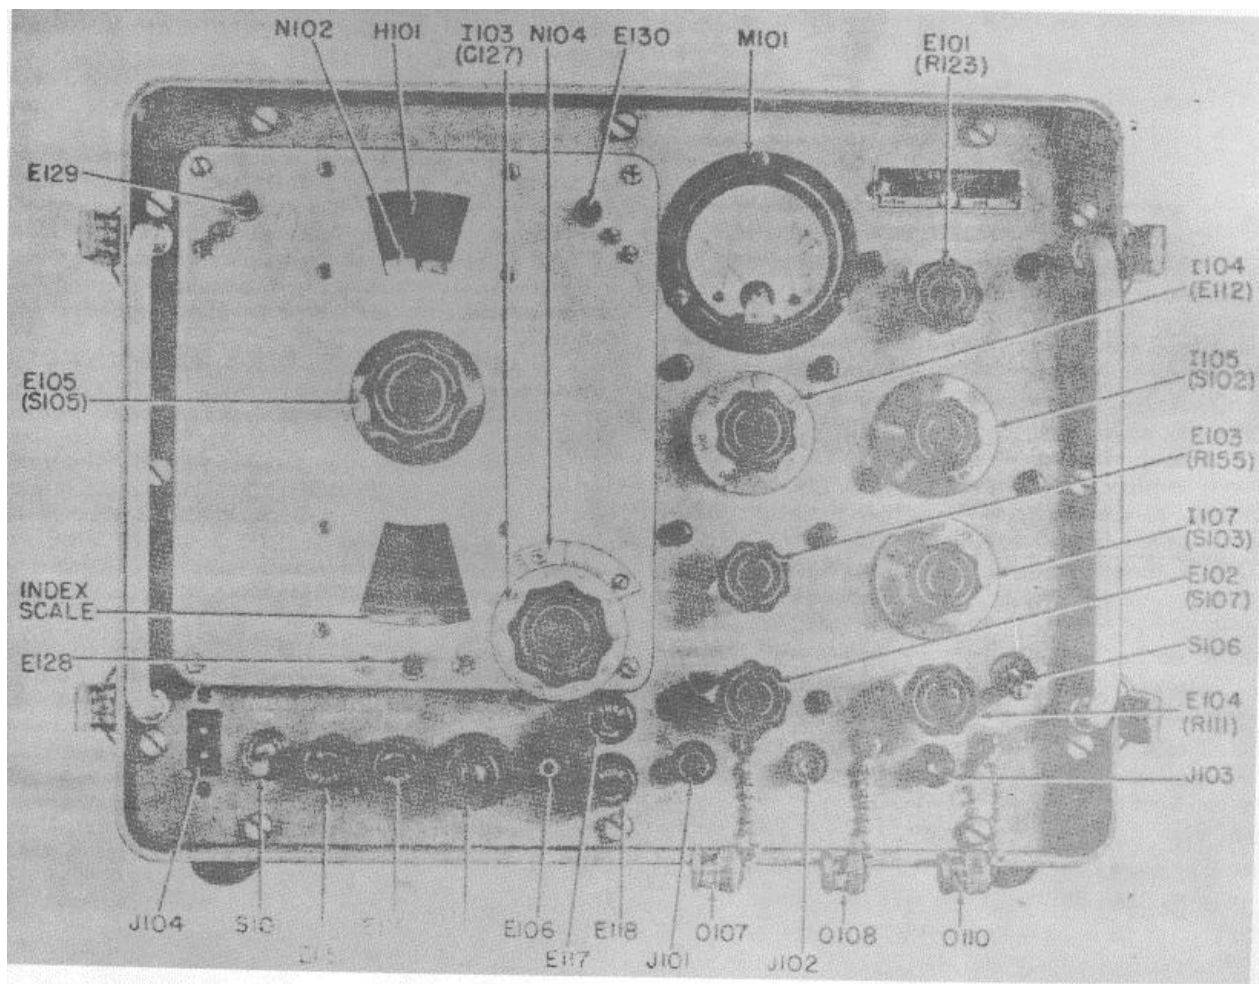


Figure 4-1. RF Signal Generator SG-448/URM-25, Front Panel Diagram

generator is used as a test instrument. Since this involves removing the signal generator sub-chassis from the cabinet (see Section 6, par. 4), non-technical personnel should not attempt to calibrate the instrument. For use by the Electronics Technician, a complete discussion of the method for calibrating the voltmeter is given in Section 6, par. 10. The following checks should be made to determine if calibration is necessary:

(1) Set the CARRIER CONTROL (E-101) and the % MODULATION control (E-104) fully counterclockwise.

(2) Turn the POWER switch (S-101) to ON. Allow a 15 minute warm-up period.

(3) The meter (M-101) should read zero in all three positions of the METER READS dial (I-105).

b. If the meter (M-101) does not read zero in all positions of METER READS dial (I-105), the technician should follow the calibrating procedure outlined in Section 6, par. 10.

4. ADJUSTING CARRIER FREQUENCY.

a. Whenever changing the frequency of the signal generator, be sure that the METER READS dial (I-105) is set to the RF position and the CARRIER CONTROL (E-101) is turned fully counterclockwise. The CARRIER RANGE knob (E-102) should be set to the corresponding frequency range selected.

NOTE

For greatest accuracy, always approach the selected frequency by rotating tuning dial I-103 in a counterclockwise direction. This eliminates errors due to gear assembly back-lash.

b. The desired frequency is set by selecting the applicable carrier oscillator L-C-R network with the FREQUENCY BAND switch (E-105) and turning the main frequency tuning dial (I-103). The frequency is then read from the frequency scale (N-102). If greater accuracy is required, this reading may be interpolated by utilizing the index scale of N-102, and the reading indicated on the tuning dial I-103 (see par. 5).

c. Eight frequency bands (A through H) are available and can be selected by E-105. A scale mask (H-101) is linked to this switch so that only the band scale selected will be made visible. Bands A through D will be made visible through the upper aperture whereas bands E through H will appear through the lower aperture.

d. The index scale is located at the bottom of the frequency scale (N-102) and is visible in all positions of the FREQUENCY BAND SWITCH (E-105). This scale is calibrated over a range of 180°.

e. The tuning dial (I-103) is calibrated from 0 to 100. One complete revolution of this dial will move the frequency scale (N-102) 100 divisions on the index scale. This index scale and tuning dial interpolation is discussed in paragraph 5 of this section.

f. The following procedure should be followed for selecting the operating frequency of the signal generator.

(1) Turn the CARRIER CONTROL (E-101) to the fully counterclockwise position.

(2) Set the FREQUENCY BAND SWITCH (E-105) to the desired frequency band.

(3) Turn the tuning dial (I-103) until the desired value on the frequency scale (N-102) coincides with the hair-line indicator.

g. A double hairline is provided for eliminating parallax frequency errors. The operator should read the frequency on a straight line of vision so that both hairlines appear to merge as a single line.

5. CRYSTAL CALIBRATOR.

a. GENERAL. An integral crystal calibrator (V-108) is provided for checking RF frequency of the signal generator between 1 mc and 50 mc. This calibrator should be used whenever it is desired to obtain an accuracy within $\pm 0.05\%$. For best results, closely follow the below procedure:

b. PROCEDURE.

(1) Set the signal generator to the approximate desired frequency (see par. 4f).

(2) Set MOD SELECTOR dial I-107 to EXT (XTAL).

(3) Connect a pair of high impedance earphones to EXT MOD IN jack J-103, using 7" cable W-105 and Connector, Adapter UG-684/U.

(4) Throw XTAL-CAL switch S-106 to ON position. A number of zero beats will be heard in the vicinity of the frequency selected.

(5) Select the nearest half megacycle beats (1 mc on band H) on either side of the desired signal and record the vernier dial (I-103) readings at these points. Always approach the frequency setting by rotating TUNING dial I-103 in a counter-clockwise direction.

(6) Set I-103 to the accurate frequency ($\pm 0.05\%$) by interpolating between the two calibration points (See example).

c. EXAMPLE OF FREQUENCY INTERPOLATION (See figure 4-2).

(1) Assume that it is necessary to obtain a signal at 34.3 mc $\pm 0.05\%$.

(2) Select the zero beat closest to 34 mc. This might indicate a reading slightly less than "600" on the index scale. From figure 4-2, we see that the arrow on N-104 points to somewhere between "93" and "94". We also see from this figure that the third line on N-104 lines up with a marker on I-103. The numerical setting at this crystal check point is therefore "593.3".

(3) Rotate TUNING dial I-103 counterclockwise, passing the 34 mc marking, until the next zero beat is heard. This will appear 1 mc away from the first check point. Let us assume that this will occur at a vernier reading of 614.5. This represents a vernier difference of 21.2 for a 1 mc spread. A setting of 34.3 therefore represents an advance of $.3 \times 21.2$ or 6.36 from the "593.3" setting.

(4) Set the vernier reading to $599.7 = (593.3 + 6.36)$. This represents a frequency of 34.3 mc $\pm 0.05\%$.

NOTE

At frequencies below band H, frequency check points at 1 mc, 0.5 mc and 0.25 mc may be available. To avoid confusion, check points less than 0.5 mc should never be used when calibrating. On band H, 0.5 mc check points will not be available and 1 mc intervals must be used.

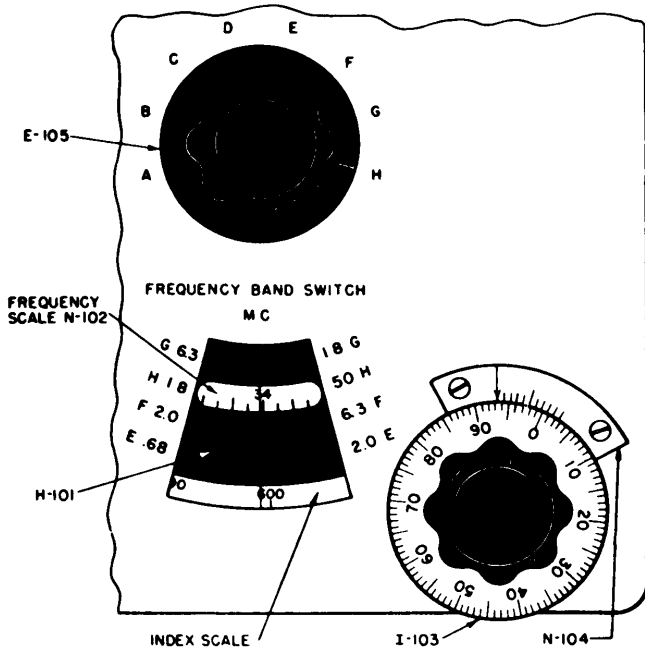


Figure 4-2. Diagram Showing Vernier Reading of Frequency Scale.

6. ADJUSTING OUTPUT VOLTAGE.

a. PRELIMINARY SETTINGS. Before adjusting the output voltage, the signal generator controls should be set in the following positions:

- (1) CARRIER CONTROL (E-101) fully counterclockwise.
- (2) METER READS dial (I-105) set at RF.
- (3) MOD SELECTOR dial (I-107) set at OFF.
- (4) CARRIER RANGE knob (E-102) to the appropriate position.
- (5) MICROVOLTS control (E-103) fully clockwise.

NOTE

Due to the nature of the signal generator voltmeter circuit, the presence of modulating voltage may introduce an error in the output voltage indication of M-101. For most accurate results, always select and read the RF output voltage before applying modulation.

b. ADJUSTMENTS.

- (1) Advance the CARRIER CONTROL in a clockwise direction until M-101 reads "100" on the upper (RF) scale. When using the X MULT RF OUTPUT

TABLE 4-2. METHODS FOR CORRECTLY TERMINATING THE SIGNAL GENERATOR AT J102

| TYPE OF INPUT | LOAD IMPEDANCE | CIRCUIT | ACCESSORY RESISTOR | VOLTAGE APPLIED TO LOAD IS: |
|---------------|--|----------------------|-------------------------------------|---|
| I | LESS THAN 53.5 OHMS. Z_1 | | $R_1 = 53.5 - Z_1$ | $V_{INDICATED} \times \frac{Z_1}{53.5}$ |
| II | FROM 53.5 OHMS TO APPROXIMATELY 500 OHMS. Z_2 | | $R_2 = \frac{53.5 Z_2}{Z_2 - 53.5}$ | $V_{INDICATED}$ |
| III | 500 OHMS OR MORE Z_3 | MX-1074 / URM-25 | IMPEDANCE ADAPTER | $V_{INDICATED}$ |

OPERATION

Section 4 Paragraph 6b(1)

(J-102), select the attenuation range with the MULTIPLIER dial (I-104) and adjust the MICROVOLTS control (E-103) for the desired output voltage. This voltage is determined in microvolts by multiplying the meter reading by the indicated position of I-104 when J-102 is terminated in its characteristic impedance of 53.5 ohms.

(2) Whenever changing frequency, readjust the CARRIER CONTROL (E-101) for a meter reading of "100" with the MICROVOLTS control (E-103) returned so the fully clockwise position. Select the desired output voltage by rotating the MICROVOLTS control. Do not use the CARRIER CONTROL for this purpose.

(3) To avoid leakage, the X RF OUTPUT jack (J-101) and the EXTERNAL MOD INPUT jack (J-103) should be covered by caps O-107 and O-110. Similarly, the X MULT RF OUTPUT jack (J-102) should be covered by cap O-108 when not in use.

c. VOLTAGE CORRECTION AT HIGH FREQUENCIES. Due to output jack reactance and increased RF distortion at frequencies above 30 mc, the actual output voltage at these frequencies is somewhat less than the voltage indicated by the meter. This can be adjusted by selecting the correction factor from Figure 4-3. Multiply this factor by the meter indication to get the actual output voltage.

For example; to correct an indicated output of 60 microvolts at 50 mc, multiply the correction factor at 50 mc (.85) by the meter indication (i.e. $.85 \times 60 = 51$). A meter indication of 60 mv at 50 mc thus represents an actual output of 51 microvolts.

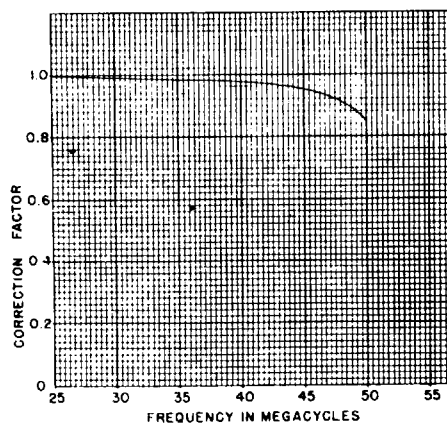


Figure 4-3. Correction Factor - Frequency Curve for Output Voltage on Band H

7. INTERNAL MODULATION AND AUDIO OUTPUT.

a. INTERNAL MODULATION.

(1) Set MOD SELECTOR dial I-107 to the 400 or 1000 cycle position.

(2) Set METER READS dial I-105 to % MOD position.

(3) Adjust % MODULATION knob E-104 until the meter reads the desired percent modulation.

b. AUDIO OUTPUT (400 or 1000 cycles).

(1) (1) Follow steps for internal modulation.

(2) Advance % MODULATION knob E-104 until meter reads "100" (with no load at J-103).

(3) Audio voltage is available at EXT MOD IN jack J-103.

(4) Connect load to I-103 and attenuate audio voltage with E-104 as required. Audio output is proportional to reading on M-101.

NOTE

The audio output impedance at EXT MOD IN jack J-103 is high. For maximum available audio output, J-103 should be connected to a high impedance load (approx. 100k). An impedance of less than 100k will load the audio circuit and greatly reduce the audio output. When the meter reads "100", approximately 4 volts open circuit, will be available at J-103.

8. EXTERNAL MODULATION.

a. Set MOD SELECTOR dial (I-107) to EXT.

b. Connect an external audio frequency source to the EXTERNAL MOD INPUT jack (J-103). Do not modulate with frequencies above 1000 cycles for frequency bands A, B, or C.

NOTE

Due to the nature of the signal generator voltmeter circuit, the presence of modulating voltage may introduce an error in the output voltage indication of M-101. For most accurate results, always select and read the RF output voltage before applying modulation.

9. COUPLING TO THE RECEIVER UNDER TEST.

a. X MULT RF OUTPUT JACK (J-102). The technician will find that the X MULT RF OUTPUT at J-102 is much more useful than the higher output at J-101 in making receiver measurements. For best results, the terminations principles outlined in Table 4-2 should be followed when using the 53.5 ohm output from J-102. Cables W-104, W-105 and W-106 are provided for making the necessary connections between units and should be used as required. Coaxial adapter UG-201/U is also supplied for use in adapting the BNC connectors on the signal generator cables to a type N connector found on man), receivers.

(1) Connect a common ground between the receiver under test and the signal generator using ground terminal G (E-106) or the ground connection in the output cable. At low RF levels it may be necessary to orient the ground connection to obtain best results.

(2) Table 4-2 lists the correct methods for terminating the signal generator at J-102. These methods apply to loads which are fundamentally resistive in nature. The application principles are discussed in Section 2, par. 8.

b. X 20,000 RF OUTPUT JACK (J-101). The impedance at this jack is a resistance of 500 ohms shunted by the capacitance of the jack (approximately 4 mmf). Below 8 megacycles, this jack shunt reactance has no appreciable effect on the voltage obtainable from J-101. At 40 megacycles, however, the reactance due to the shunt capacitance is only 1000 ohms and a 30% attenuation of signal voltage will be present at this frequency. In any event, a maximum 2 volts across a high impedance

load should be available at J-101 for all frequencies. It is reemphasized at this point that the termination methods outlined in Table 4-2 do not apply to this jack since the impedance at J-101 is 500 ohms. When using the X 20,000 RF output, the output voltage in microvolts is determined by multiplying the meter (M-101) reading by 20,000. This will be the actual voltage across a high impedance load (5000 ohms or more).

CAUTION

Care must be taken to prevent the introduction of voltages back into the attenuators or impedance adapter from the circuit under test. Currents greater than 20 milliamperes may burn out the resistances incorporated within these units. Always insert the Test Lead CX'1363/U whenever making point to point measurements in a receiver. This precaution is not necessary when using the antenna simulator since it contains a series capacitor.

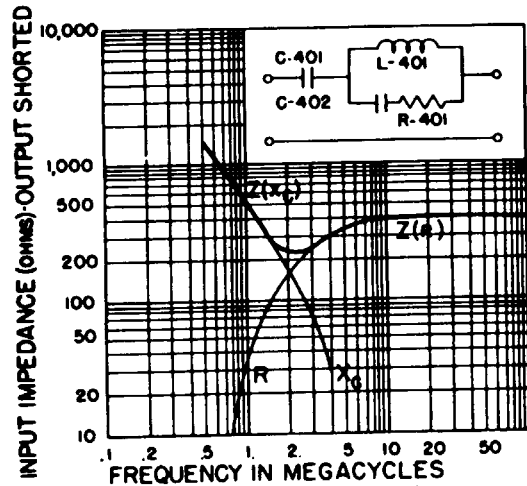


Figure 4-4. Schematic Diagram of the Antenna Simulator SM-35/URM-25 with Input Impedance-Frequency Curve

10. USE OF ANTENNA SIMULATOR SM 35/URM-25.
(See figure 4-4).

a. The Antenna Simulator SM-35/URM-25 is used when making overall measurements or tests on a receiver designed for use with a standard antenna (see Section 4, par. 14f). The antenna simulator merely approximates the conditions that would exist had we applied our signal to the antenna circuit of the receiver and, therefore, the significant voltage is the input voltage to the simulator and not the input voltage to the receiver.

b. Connect the output cable (W-104) to the X MULT RF OUTPUT jack (J-102) and terminate this cable with

the Impedance Adapter MX-1074/URM-25. Connect the antenna simulator to the impedance adapter with cable W-105 and to the receiver under test with cable W-106.

c. It can be seen from figure 4-4 that the minimum impedance of the antenna simulator will be approximately 220 ohms at 2 megacycles. This impedance becomes extremely high at lower frequencies and approaches 400 ohms at higher frequencies. In using the meter (M-101) of the signal generator it should be realized that a 20 percent maximum error may be introduced at 2 megacycles. If greater meter accuracy is required when using the antenna simulator, the actual impedance of this unit should be calculated from figure 4-4 at the frequency selected.

NOTE

Figure 4-4 in this section is the same as figure 2-16 in section 2 but has been repeated here to assist the operator in applying the procedures herein outlined for use of the antenna simulator.

11. USE OF (5:1) FIXED ATTENUATOR CN-132/URM-25.

a. The (5:1) Fixed Attenuator CN-132/URM-25 attenuates the output at J-102 in a ratio of 5:1 when terminated in 53.5 ohms. It is very useful when using the meter (M-101) at output levels below "20" where the instrument accuracy falls off. This applies to microvolt ranges below 20,000 mv, 2000 mv, 200 mv, 20 mv, 2 mv, or .2 mv as selected by the MULTIPLIER dial (I-104) and MICROVOLTS control (E-103). In these cases, insert the (5:1) fixed attenuator at the X MULT RF OUTPUT jack (J-102) and terminate it as outlined in Table 4-2 for the required 53.5 ohms. The terminated output voltage is 1/5 the voltage indicated by M-101. The actual load voltage, however, will be 1/5 the meter indication only when the load impedance is exactly 53.5 ohms or greater than 500 ohms. For example; if a signal generator output of 20,000 microvolts into a 600 ohm load is desired, insert the fixed attenuator as follows:

- (1) Connect the fixed attenuator to J-102 using cable W-104.
- (2) Terminate the (5:1) fixed attenuator with the impedance adapter.
- (3) Set the MULTIPLIER dial (I-104) to X 1000.
- (4) Set MICROVOLTS (F-103) and CARRIER (E-101) control for "100" meter reading.
- (5) The input to the load will be 20,000 microvolts.

b. If the load impedance is less than 53.5 ohms, it can be seen from Table 4-2 that the impedance adapter cannot be used, but the output from the (5:1) fixed attenuator must be fed to the load in series with the necessary resistor. The actual load voltage will then be something less than 1/5 the meter indication. For example; if a voltage of approximately 1200 microvolts with a load of 40 ohms is desired, insert a 13.5 ohm non-inductive resistor in series with the load and (5:1) fixed

attenuator. The meter setting should be:

$$V \text{ meter} = \frac{53.5}{Z} \times M \times 5 = \frac{53.5}{40} \times 1200 \times 5 = 150 \times 53.5 = \text{approx. } 8000 \text{ microvolts.}$$

12. USE OF (10:1) FIXED ATTENUATOR CN-36/URM-25.

a. The (10:1) Fixed Attenuator CN-432/URM-25 attenuates the output at J-102 in a ratio of 10:1 when terminated in 53.5 ohms. This unit can be used when a high degree of voltage accuracy is desired for low level outputs on band H. There is no need for using the 10:1 fixed attenuator on other bands or steps higher than X.1 on the MULTIPLIER dial (I-104).

Example (1) - Selecting an accurate output of 8 microvolts at 30 mc into a load of 500 ohms or greater.

(a) Set signal generator at 30 mc and MULTIPLIER dial (I-104) at X1 range.

(b) Adjust MICROVOLTS control (E-103) for reading of "80" on M-101.

(c) Insert the 10:1 fixed attenuator at J-102.

(d) Terminate 10:1 fixed attenuator with Impedance Adapter MX-1074/URM-25.

(e) Feed the output from the impedance adapter to the receiver under test.

(f) Input voltage to receive below 8 microvolts.

Example (2) Correcting a .8 microvolts output at 45 mc into a load of 500 ohms or greater:

(a) Set signal generator at 45 mc and MULTIPLIER dial (I-104) at X.1 range.

(b) Select meter correction factor for 45 mc from Figure 4-2 (i.e. .92).

(c) Multiply 80 by correction factor (i.e. 80 X .92 = 73.6).

(d) Adjust the MICROVOLTS control (E-103). for a reading of "80" on M-101. This represents an actual output of 7.36 microvolts at J-102.

(e) Insert the 10:1 fixed attenuator at J-102.

(f) Terminate the 10:1 fixed attenuator with the Impedance Adapter MX-1074/URM-25.

(g) Feed the output from the impedance adapter to the receiver under test.

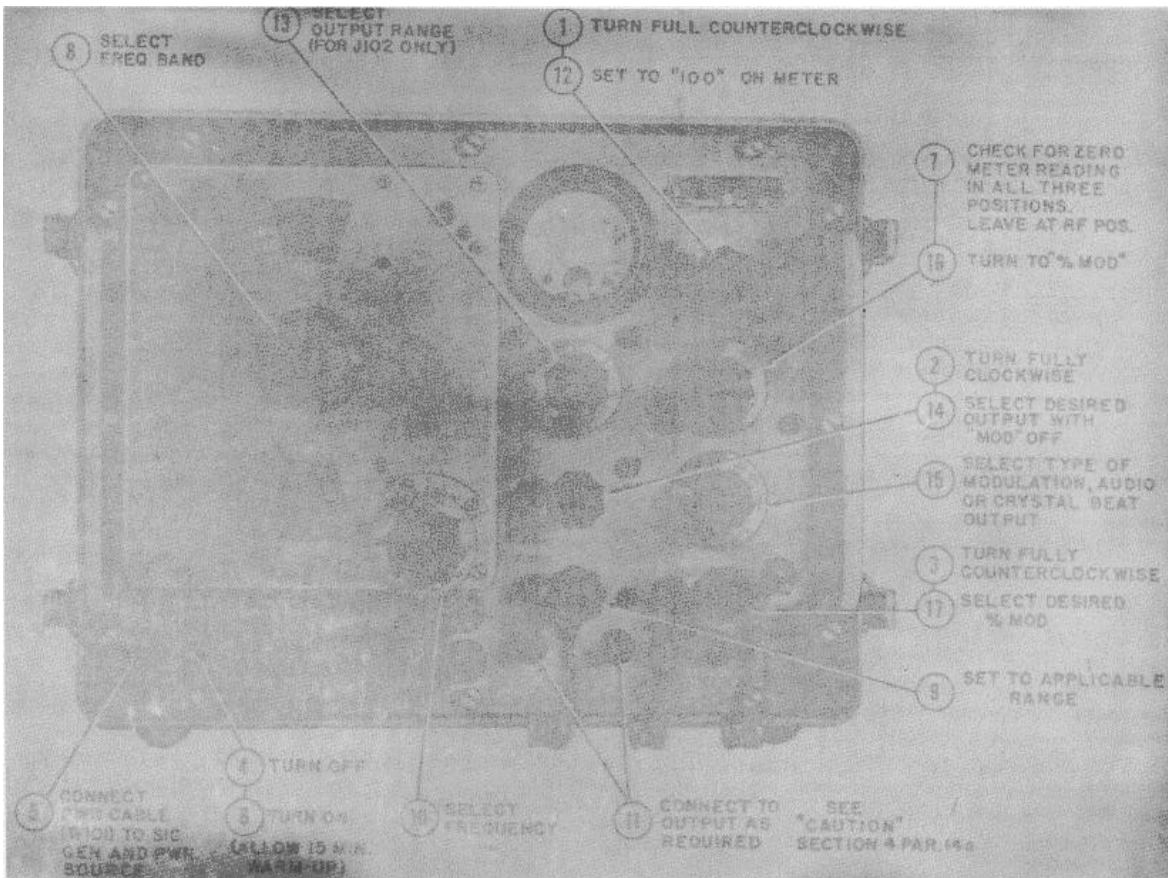


Figure 4-5. Simplified Procedure for Operating the RF Signal Generator Set AN/URM-258

(b) Input voltage to the receiver is now .736 microvolts.

13. SUMMARY OF OPERATION.

In using the AN/URM-25B as a test oscillator, it will not always be necessary to apply all the procedures outlined in this section. The technician will determine by use, the precision requirements of the equipment under test. Figure 4-5 is a simplified procedure summary for the operation of the signal generator.

14. GENERAL INSTRUCTIONS FOR USE.

a. DETAILS for additional details of proper signal testing techniques, the technician is referred to the basic equipment instruction book and also standard commercial texts. However, since most commercial test procedures refer to original broadcast type receivers which differ in principle and test values from standard Naval equipments, certain details of Naval values and methods are included herein.

CAUTION

Always use the Test Lead CX-1363/U when making point to point tests on a receiver. Failure to do so may result in burning out a resistor in the step attenuator (E-112) or in one of the accessory units.

b. RECEIVER TESTS.

(1) GENERAL. The presence of incidental frequency modulation in an A-M signal generator may introduce asymmetry in the apparent selectivity curve of the receiver being tested. This is particularly true for very sharply tuned circuits. The effects of frequency modulation have been kept at a minimum in the RF Signal Generator Set AN/URM-25B and should introduce no problem in receiver testing. For best results, however, the technician should perform all of the following receiver tests (except audio response) by using the unmodulated carrier signal. In order to eliminate the need for modulation, insert a high impedance DC voltmeter such as Multimeter ME-25/U or equal across the load of the second detector of the receiver. Adjustments can then be made with the meter response giving the necessary indication.

(2) SENSITIVITY. At high radio frequencies, antenna characteristics cannot easily be reproduced, and considerable care must be taken in making receiver sensitivity tests. The voltage available at the signal generator unit output jack (J-102) is always known, but not the voltage at the receiver input terminals a few feet away. This latter voltage is proportional to the signal generator output voltage, but it may be larger or smaller due to the characteristics and the termination of the "transmission line" between the instruments. (See Section 2, par. 8.).

(3) SELECTIVITY. The selectivity of a radio receiver is that characteristic which determines the extent to which the receiver is capable of distinguishing between the desired signal and disturbances of other frequencies.

Selectivity is expressed in the form of a curve that gives the signal strength required to produce a given receiver output at various frequencies, with the response at resonance taken as the reference. This selectivity curve is normally obtained by disabling the automatic volume control system of the receiver, setting the signal generator to the desired frequency, tuning the receiver to this frequency, and modulating the carrier signal 30 percent at 400 cycles. The carrier frequency output of the signal is then varied by progressively increasing amounts from the frequency to which the receiver is tuned, and the signal generator voltage increased as necessary to maintain a controlled receiver output. The unmodulated carrier method as described in paragraph 14 b(1) of this section can also be used. Unless otherwise specified, the normal output is usually taken as 6 milliwatts into 600 ohms.

(4) AUDIO RESPONSE. The audio response of a receiver shows the manner in which the electrical output at a dummy load depends upon the modulation frequency. In making this test connect an audio oscillator, such as the Navy Model LAJ Series, to the EXTERNAL MOD INPUT (J-103). Set the MOD SELECTOR switch (I-107) to EXT. Set the signal generator to the desired carrier frequency and tune the receiver under test to this signal. Adjust the signal generator until a convenient output is obtained. Observe the variation in receiver output as the modulation frequency of the signal generator is varied from 400 cycles, while keeping the degree of modulation constant at 30 percent. The results of an audio response test are expressed in the form of a curve with the ratio of actual output to 400 cycles output plotted vertically, and each corresponding audio frequency plotted horizontally. In making this test, care must be taken to avoid applying so great a signal to the receiver as to overload the output. In the event that the noise and hum level in the receiver output is appreciable, it will be necessary to supply a strong enough signal from the generator to override this interfering effect.

(5) MEASURING RECEIVER GAIN PER STAGE.

--The RF Signal Generator Set AN/URM-25B is also a useful device for measuring the gain of any particular receiver stage. This is accomplished by applying a signal to the input and output points of the stage in question and recording the signal generator voltage required, in either case, to give the same receiver output. The gain in db is then calculated by applying the formula: GAIN

$$(db) = 20 \log \frac{V_{out}}{V_{in}}$$

(6) RECEIVER ALIGNMENT. The alignment of the intermediate frequency amplifier system of a simple receiver is usually carried out by setting up the signal generator at the proper frequency and working step by step backward through the IF circuits from the second detector to the first detector.

CAUTION

Consult the particular receiver's instruction book for details of the method applicable to that receiver. This is particularly important for

wide band RF or IF amplifiers where over coupled, regenerative or stagger tuning is used. Be sure the aligning frequency is correct. Check with a heterodyne frequency meter such as Navy Model LM or LR series to obtain greater frequency accuracy than obtainable with the signal generator below 1 mc. Above 1 mc, the crystal calibrator in the AN/URM-25B can be used to obtain an accuracy within $\pm 0.05\%$.

Always apply the signal generator to the grid immediately preceding the circuit under adjustment and adjust the trimmers (or variable inductances) for maximum output. In carrying out this procedure, it will of course be necessary to reduce the output of the signal generator each time the signal is applied to the grid of a tube at lower power level. The next step is to align the radio frequency and oscillator circuits of the receiver. This is accomplished by setting the receiver dial near the high end of the band in question and applying a signal of the proper frequency from the generator to the antenna input terminals of the receiver. First adjust the RF stage shunt trimmer capacitors (or iron core inductances) for maximum receiver output and then adjust the oscillator shunt trimmer until the receiver output is maximum. The receiver dial and signal generator are then set at the low frequency end of the receiver dial and the oscillator series padder capacitor is adjusted for maximum output. Recheck the high frequency end of the band and repeat the above procedure as necessary.

(7) RECEIVER ALIGNMENT ABOVE 50 MEGACYCLES. --The RF Signal Generator Set AN/URM-25B can also be used for aligning receivers above 50 mc by using the second harmonic of the frequency selected. Although harmonic distortion has been kept to about 10%, this still allows approximately 10,000 microvolts of second harmonics to be introduced at the X MULT RF OUTPUT jack (J-102). It must be realized, that, when the second harmonic is used, the signal generator meter can no longer be used as an indication of output.

c. MODULATED OPERATION. In using the equipment with modulated output, it should be realized that three waves are emitted, one at the carrier frequency and two "side bands." While either pure or modulated CW signals can be obtained from the signal generator, considerable discretion must be used in employing the modulated method of receiver testing, based on the selectivity of the receiver and the frequency of test, since the carrier and both side bands must be received in true proportion in order to obtain accurate measurements.

d. RECEIVER OUTPUT. In aligning or testing a receiver, a voltmeter, or output meter should be connected across the output terminals, in parallel with the proper resistance output load.

e. RECEIVER OVERALL SENSITIVITY. Some radio receivers have an excess of sensitivity. such that at certain frequencies, the inherent noise level is sufficient to saturate the detector or audio tubes, if the sensitivity, volume or gain control is advanced too far.

Accordingly, all receivers are measured and rated for both CW and MCW sensitivity on the basis of the sensitivity, volume or gain control being adjusted so that not more than 60 microwatts of noise is present in the output with no input signal impressed. When measuring receiver overall sensitivities obtainable on the first step of the attenuator, it should be remembered that the output of the signal generator may not be attenuated equally at all frequencies to an absolute value of zero when the MULTIPLIER dial (I-104) is set at X.01 and the MICROVOLTS control (E-103) is set fully counterclockwise. The effects of stray or leakage disturbances caused by circulating currents in the case or between panel and case may be minimized by properly orienting the signal generator and using the (10:1) Fixed Attenuator CN-136/URM-25 (see Section 4, par. 12). Proper orientation of the generator with respect to the receiver will also limit the presence of undesired stray voltages. These stray effects can be ascertained by comparing the output of the receiver with the signal generator turned on and turned off.

f. STANDARD ANTENNA ELECTRICAL CONSTANTS. A standard antenna at low frequencies (below 1600 kilocycles) has essentially the same impedance as a series circuit of 20 microhenries, 200 micromicrofarads and 29 ohms. The resonant frequency is about 2500 kilocycles. The high frequency impedance is approximately 400 ohms resistive. The Antenna Simulator SM-35/URM-25 closely approximates the standard antenna (see Section 4, par. 10, also Section 2, par. 11).

g. STANDARD LEVELS. Standard levels are as follows:

- (1) Standard output level of reference 6 milliwatts.
- (2) Standard noise level -60 microwatts.

(3) Standard output load 600 ohms for low impedance output, or 20,000 ohms for high impedance output, unless special impedances are provided in the receivers and noted in their instruction books.

h. VOLTMETER USED AS AN OUTPUT METER. --In making measurements when a voltmeter is used as an output meter, the following approximate wattages correspond to the voltages at the load impedances noted:

- | | | |
|-----|---------------------------|---------------|
| (1) | 1.9 volts at 600 ohms | |
| | 11.0 volts at 20,000 ohms | 6 milliwatts |
| (2) | 0.19 volts at 600 ohms | |
| | 1.1 volts at 20,000 ohms | 60 microwatts |
| (3) | .77 volts at 600 ohms | |
| | 4.5 volts at 20,000 ohms | 1 milliwatts |

(4) For receivers provided with output meters having a zero level of 6 milliwatts 20 decibels equal 60 microwatts.

(5) For receivers provided with output meters having a zero level of 60 microwatts 20 decibels equal to 6 milliwatts.

**SECTION 5
PREVENTIVE MAINTENANCE**

1. ROUTINE MAINTENANCE CHECK CHART.

The construction of the RF Signal Generator Set AN/URM-25B is such that preventive maintenance measures will be limited. Periodic testing of the equipment to determine if it is in proper working order, should be performed in accordance with the step-by-step procedure given in Table 5-1 ROUTINE CHECK CHART. If the signal generator is used frequently (several times a week), these checks should be made prior to use, otherwise they should be made weekly. All symbol designations given in Table 5-1 refer to Front Panel Diagram, Figure 4-1 in Section 4 OPERATION unless otherwise specified.

NOTE

THE ATTENTION OF MAINTENANCE PERSONNEL IS INVITED TO THE REQUIREMENTS OF CHAPTER 67 OF THE BUREAU OF SHIPS MANUAL, OF THE LATEST ISSUE.

2. FUSE FAILURE.

Symptoms of fuse failure and fuse locations are given in Tables 5-2 and 5-3. Spare fuses are provided in the spare fuseholders (E-117, E-118) located on the front panel.

3. LUBRICATION.

No maintenance lubrication will be required by personnel using the signal generator.

CAUTION

Never replace a fuse with one of higher rating unless continued operation of the equipment is more important than probable damage. If a fuse burns out immediately after replacement, do not replace it a second time until the cause has been corrected.

TABLE 5-1. ROUTINE CHECK CHART

| WHAT TO CHECK | HOW TO CHECK | PRECAUTIONS AND REMARKS |
|-----------------------------|---|--|
| 1. Installation. | <p>Before connecting the power cable (W101) to the signal generator, make sure the equipment is properly set up in accordance with instructions given in Section 3 - INSTALLATION.</p> <ul style="list-style-type: none"> a. POWER switch (S-101) in OFF position. b. CARRIER CONTROL (E-101) fully counterclockwise. c. MICROVOLTS control (E-103) fully clockwise. | See that all cables and wires are in good condition and electrical connections properly made. |
| 2. Power Supply. | <p>Set controls as follows:</p> <ul style="list-style-type: none"> a. CARRIER CONTROL (E-101) fully counterclockwise. b. POWER switch (S-101) to ON position. | The indicator lamp (I-101) and frequency scale lamps (E-128 thru E-130) should light. If they do not, check front panel fuses (see table 5-3) and lamp. |
| 3. Voltmeter Check (M-101). | <ul style="list-style-type: none"> a. Throw POWER switch (S-101) to ON position. b. Allow 15 minutes warm up period. c. Set METER READS dial (I-105) to BAL position. d. Meter should read zero. | If the meter does not read zero in the BAL position R-131 requires adjustment (See Section 6, figure 6-9). This procedure is outlined in Section 6, par. 10. |

TABLE 5-2. SYMPTOMS OF FUSE FAILURE

| INDICATOR (I-101) AND SCALE (E-128 THRU E-130) LAMPS OF SIGNAL GENERATOR | ALL ELECTRON TUBES | METER M-101 | OPEN FUZE | VALUE (AMPS) | COMMENTS |
|---|-----------------------------------|------------------------|----------------------|-------------------------|--|
| None Light | Filaments Off | No Reading | F-101 | 1 | Check also power supply cables, connectors, etc. and the POWER switch (S-101). |
| None Light | Filaments OFF | No Reading | F-102 | 1 | |

TABLE 5-3. FUSE LOCATIONS

| SYMBOLS | LOCATION | PROTECTS | AMPS | VOLTS | NUMBER |
|----------------|---|---------------------------------------|-------------|--------------|---------------|
| F-101 | 1. Physically located in signal generator front panel fuse-holders (E-115 and E-116). See figure 4-1. | Primary of power transformer (T-201). | 1.0 | 250 | FUS-10 |
| F-102 | 2. Electrically located in primary of power transformer T-201. See figure 6-23. | | 1.0 | 250 | FUS-10 |

**SECTION 6
CORRECTIVE MAINTENANCE**

CAUTION

This section is written primarily for use by the Electronics Technician. A non-technical operator should make no attempt to apply the procedures herein prescribed. Failure to comply with this suggestion may result in considerably greater damage to the signal generator than had originally been incurred by some performance failure.

1. GENERAL.

a. The fundamental principle of the RF Signal Generator Set AN/URM-25B is similar to that of any radio frequency transmitter. A study of Section 2, THEORY OF OPERATION will make this analogy more obvious. Like any RF transmitter, the AN/URM-25B has an RF oscillator, RF amplifier and provision for modulation. If the technician will bear this in mind, it may simplify his trouble shooting procedures.

b. The first step in maintenance or repair is to definitely determine that a defective condition exists. If the equipment is not operated correctly, certain indications of trouble might be presented when there is actually nothing wrong with the equipment. The technician should be thoroughly familiar with Section 4 OPERATION of this book before attempting to analyze the indicated defect.

c. After a positive determination is made that the generator is defective, the first step in trouble shooting is to localize the trouble, that is, decide which circuit of the complete system is not functioning as it should. Once the analysis has been narrowed down to the defective circuit, it becomes a relatively simple process of making voltage and resistance checks to locate the faulty circuit part (i.e. resistor, capacitor, etc.). The same system should be followed as is used in trouble shooting a radio frequency transmitter.

2. PRINCIPAL MAINTENANCE PROBLEMS.

The chief parts of the signal generator which are subject to wear or deterioration are electronic tubes and the FREQUENCY BAND SWITCH (S-105). In addition, and as a result of aging or excessive temperature variations, the carrier oscillator inductances may vary slightly and require recalibration (See Table 6-1 FREQUENCY CALIBRATION DATA).

3. TEST EQUIPMENT FOR MAKING REPAIRS.

The technician may find a wide variation of applicable test equipment in making repairs on the RF Signal Generator Set AN/URM-25B. However, to achieve the best results in accordance with the characteristics of the signal generator, the following test equipments or their equivalents are recommended for use:

- a. Navy Model LM Series Crystal Calibrated Frequency Indicating Equipment (125 kc to 20 mc).
- b. Navy Model LR Series Combined Heterodyne Frequency Meter and Crystal Controlled Calibration Equipment (160 kc to 30 mc \pm .003%).
- c. Signal Generator TS-535/U (7 to 160 kc).
- d. Resistance Bridge ZM-4/U.
- e. Multimeter ME-25/U Series.
- f. Oscilloscope OS-8/U, Navy Model OBL or OBT Series Cathode Ray Oscilloscope.
- g. Multimeter TS-352/U, Navy Model OE Series Receiver Analyzing Equipment.

4. REMOVING THE SIGNAL GENERATOR AND POWER SUPPLY FROM THE CABINET.

a. REMOVING THE RF SIGNAL GENERATOR SG-44B/URM-25.-Since this is a precision instrument, great care should be taken in removing the RF Signal Generator SG-44B/URM-25 from the cabinet to make repairs. Before attempting to disassemble the unit, be sure that the equipment is disconnected from the power source. Adhere carefully to the following procedure:

- (1) Remove the power cable (W-101).
- (2) Loosen the twelve captive screws located around the outer edge of the panel (See figure 6-2).
- (3) Gently pull the generator chassis about eight inches from the cabinet, using the lifting handles provided on the front panel. The generator unit cannot be completely removed since the interconnecting power cable (W-102) and output power cable (W-103) are still connected to the power supply sub-chassis.
- (4) Remove the output power supply connector (P-102) and the AC input connector (P-101) from the

THIS PAGE MISSING NOT AVAILABLE FOR DIGITIZATION.

**Figure 6-1.
6-0**

power supply sub-chassis. The generator sub-assembly can now be removed. The power supply sub-chassis will remain in the cabinet.

b. REMOVING THE POWER SUPPLY PP-562A/URM-25.

(1) To remove the power supply, take out the four binding head screws located on the bottom of the cabinet. There are also four screws on the rear of the cabinet which must be removed. (See figure 6-3).

(2) With the signal generator and power supply sub-assemblies removed from the cabinet, the equipment can again be connected for use and testing by applying the following procedure (See figure 6-4).

(a) Insert interconnecting power cable plug (P-101) into the power supply input receptacle (J-201) and P-102 into J-202.

(b) Insert one end of the power cable (W-101) into the front panel input receptacle (J-104) and plug the other end into the AC source.

WARNING

Voltages up to 450v will be exposed when the signal generator is being tested outside the cabinet. Exercise great care in handling the instrument under these conditions.

5. REMOVAL AND REPLACEMENT OF PARTS.

a. Whenever repairs are made involving the removal or replacement of any component part, the part removed should be marked or tagged for identification and its exact position in the equipment carefully noted and recorded so that when the same or new part is replaced the equipment will be precisely as before.

NOTE: LOOSEN CAPTIVE SCREWS MARKED "X" TO REMOVE RF SIGNAL GENERATOR SG44B/URM-25 FROM CABINET

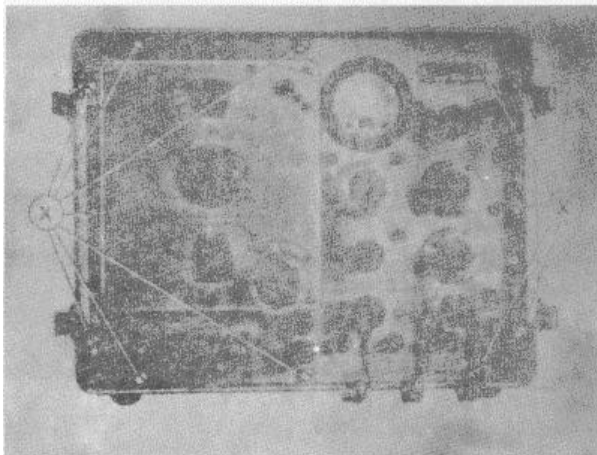


Figure 6-2. Front Panel View for Removal of RF Signal Generator SG-44B/URM-25 from Cabinet

This precaution is particularly necessary when replacing RF components, such as coils and capacitors. The location of these parts with respect to associated components will play an important role in the performance of the equipment.

b. Whenever any parts are replaced by new one, always use the identical type listed and described in Section 7 PARTS LIST, Table 7-4. If such parts cannot be obtained, substitute only similar parts with equivalent electrical and mechanical characteristics. If precision parts are not available and it is absolutely necessary to use the equipment, a temporary substitute of approximate value may be inserted. This is not recommended as a normal procedure and the exact replacement should be ordered. The unsatisfactory substitute should be removed as soon as the exact replacement is received.

6. REPLACING RF OSCILLATOR CIRCUIT COMPONENTS.

a. The RF oscillator frequency determining components L-105 through L-112 and C-127 through C-134 should not normally be replaced in the field unless the necessary calibrating instruments are available. These instruments include RF heterodyne frequency meters that cover from 10 kc to 30 mc with an accuracy of at least .05% (e.g. Navy Model LR and Signal Generator TS-535/U).

b. Changing the oscillator tube should not normally cause much error in calibration. However, when replacing the oscillator tube, the signal generator should be recalibrated as soon as the necessary test equipment is available (i.e. Navy Model LR and Signal Generator TS-535/U).

NOTE: TAKE OUT SCREWS MARKED "Y" TO REMOVE POWER SUPPLY PP-562A/URM-25 FROM CABINET

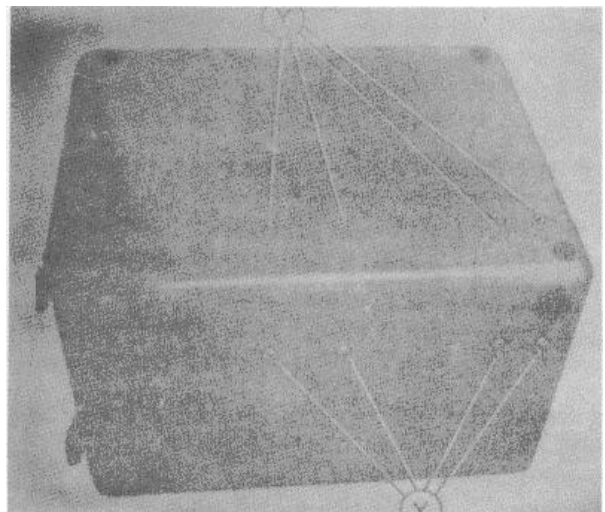


Figure 6-3. Rear-Bottom View for Removal of Power Supply PP-562A/URM-25 from Cabinet

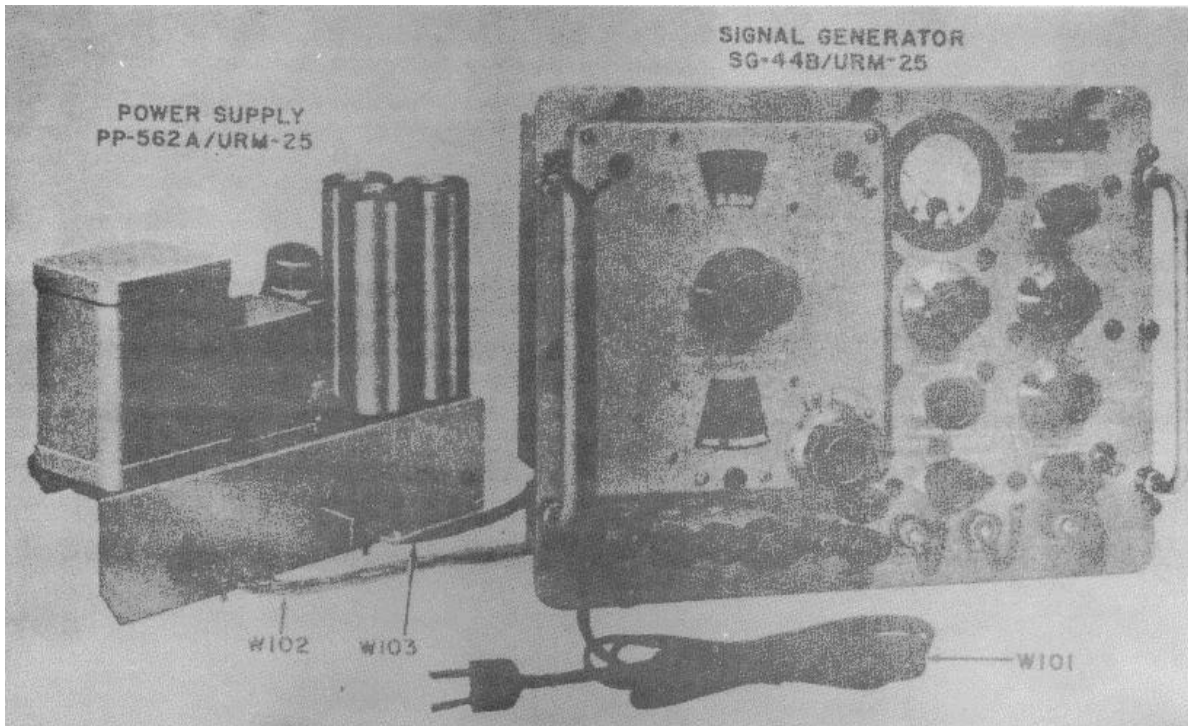


Figure 6-4. RF Signal Generator SG-44B/URM-25 and Power Supply PP 562A/URM-25 Connected Outside Cabinet for Testing

7. REPLACING BUFFER-AMPLIFIER CIRCUIT COMPONENTS. (See figures 6-5 and 6-6).

The buffer-amplifier compartment is located between the carrier oscillator and audio compartments. It contains the buffer-amplifier (V-104) and RF diode (V-105) circuits in addition to the step attenuator (E-112), MICROVOLTS control (R-155), and CARRIER RANGE switch (S-107). The RF diode, buffer-amplifier circuits and MICROVOLTS control are located on a separate shelf. It is sometimes necessary to remove this shelf when making repairs on the buffer-amplifier compartment. This removal should be accomplished in the following manner (See figures 6-5 and 6-6). Label all leads before unsoldering.

- a. Remove the buffer-amplifier compartment cover plate.
- b. Unsolder leads to the six feed thru capacitor (C-110, C-111, C-116, C-117, C-135, and C-137), and the lead to the step attenuator (E112).
- c. Unsolder lead to J-101 and lead to grid of V-104.
- d. Unsolder the leads going to the CARRIER RANGE switch (S-107).

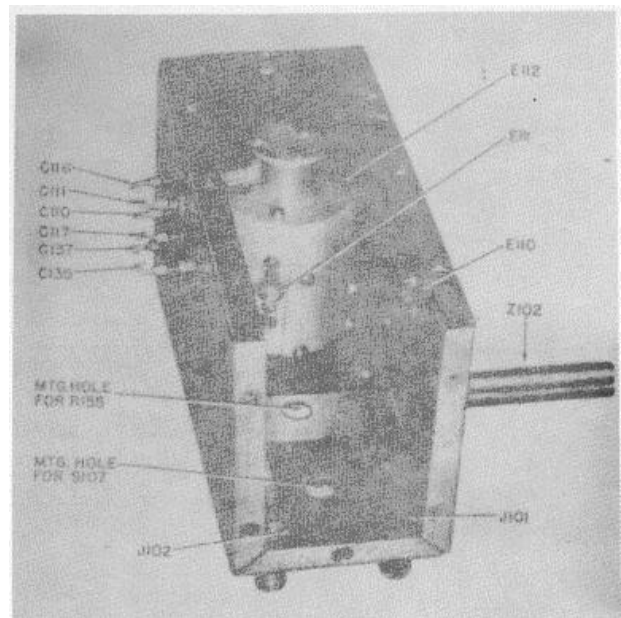


Figure 6-5. Interior View of Buffer Amplifier with Tube Shelf and CARRIER RANGE Switch (S-107) Removed

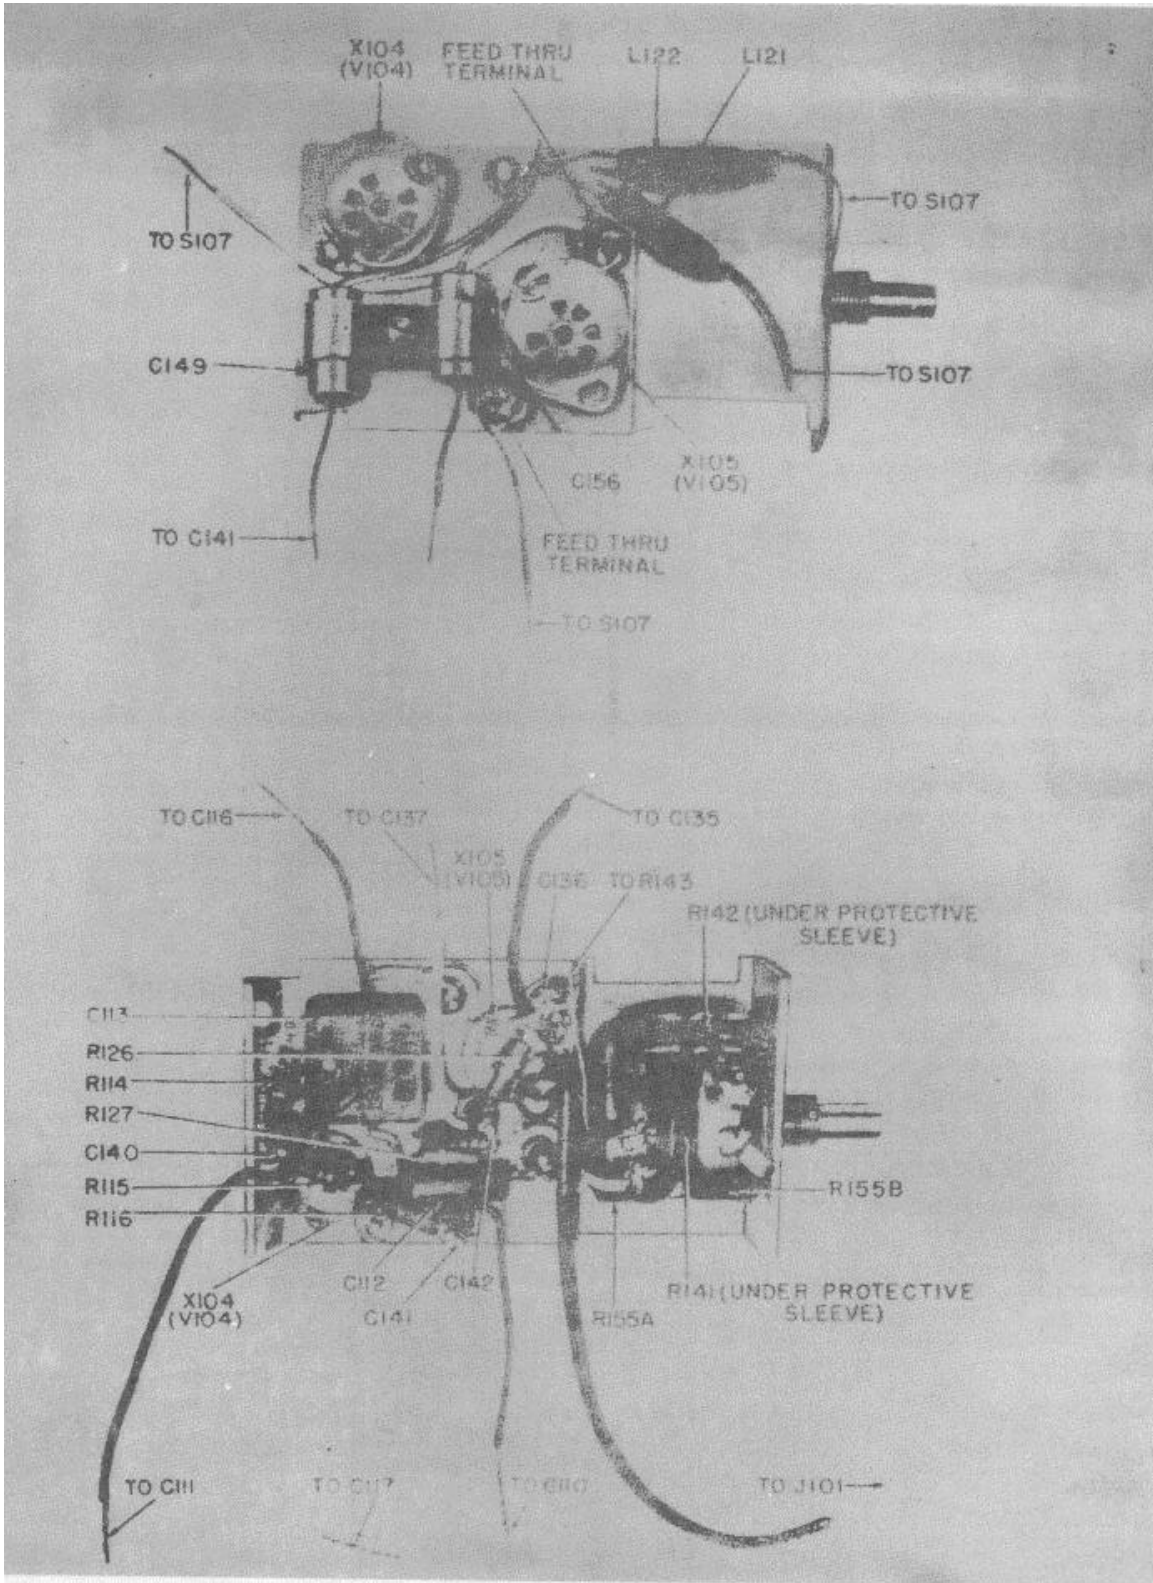


Figure 6-6. Top and Bottom Views of Buffer-Amplifier Tube Shelf

**CORRECTIVE
MAINTENANCE**

**Section 6
Paragraph 7a**

- e. Remove the MICROVOLTS control knob (E-103) and bushing nut.
- f. The buffer-amplifier RF diode shelf can now be removed.

8. READJUSTMENT OF FREQUENCY CALIBRATION.

(See figure 6-7)

a. **WHEN TO CALIBRATE.** The signal generator should be recalibrated whenever oscillator coils or capacitors are replaced, and whenever it's suspected that the frequency error is in excess of + 1%. This recalibration is accomplished by adjusting the applicable coils and trimmers as discussed in paragraph 9 of this section.

b. **LIMITATIONS OF CRYSTAL CALIBRATOR V-108 FOR FREQUENCY RECALIBRATION.** The use of the integral crystal calibrator for interpolative calibration was discussed in Section 4, paragraph 5. When used in this manner, the accuracy of the signal generator is increased from the rated $\pm 5\%$ to $\pm 0.05\%$ at frequencies above 1 mc. Since the crystal calibrator operates on the harmonic generation principle, it is limited as a recalibrating device when some circuit defect or replacement introduces a frequency error greater than 1%. For example, if for some reason, the frequency error at 50 mc is -2%, the frequency scale will read 50 mc when the actual frequency is 51 mc. Since zero beats occur at both 50 mc and 51 mc (1 mc apart), it will be difficult to determine which point corresponds to 50 mc. Similarly, at lower frequencies, (down to 1 mc), the combination of signal generator and crystal calibrator harmonics may introduce beats at intervals closer than .5 mc. Since the accuracy of the signal generator is better than $\pm 5\%$, there will be no problem in determining the applicable beat for interpolative calibration. When recalibrating the instrument because of errors greater than 1%, however, the instruments recommended in the following paragraph should be used to avoid any possible confusion.

c. **RECOMMENDED TEST EQUIPMENT FOR RECALIBRATING.**

- (1) Navy Model LR Frequency Meter (160 kc to 30 mc).
- (2) Signal Generator TS-535/U (7 to 160 kc).

NOTE

Figure 6-7 shows the locations of the trimmers and inductances that may require readjustment. Make sure that only the parts relevant to the frequency band being calibrated are adjusted. Follow the calibration procedure and do not turn screws indiscriminately.

9. FREQUENCY CALIBRATION PROCEDURE. (See figures 6-7 and table 6-1)

a. **GENERAL**

(1) When the frequency error of the signal generator is in excess of 1%, it will be necessary to recalibrate the instrument. In making the necessary adjustments, the RF Signal Generator SG-44B/URM-25 must first be removed from the cabinet. Interconnecting cables are of sufficient length as not to require the removal of the Power Supply PP-562A/URM-25 subchassis. Follow the procedure outlined in Section 6, par. 4, for removing the signal generator unit.

(2) Over the frequency range covered by Bands A through G (10 kc through approx. 18 mc), each oscillator coil has connected across it a trimmer capacitor for adjusting the total capacitance associated with it. Each corresponding coil also has a movable iron core by means of which the inductance of that coil can be adjusted to the required value. The recalibration process on these bands is therefore a simple matter of (a) adjusting the inductance for frequency calibration at the low-frequency end of the range, (b) adjusting the corresponding trimmer capacitor for a calibration point at the high end of the range, and (c) checking the center portion of the range selected.

(3) There is no trimmer capacitor or adjustable core for band H. If absolutely necessary, the inductance may be varied by adjusting the space between the coil (L-105) windings. This adjustment is made with the LR Frequency Meter at 30 mc (approximately mid scale on band H of the RF Signal Generator Set AN/URM-25B).

TABLE 6-1: FREQUENCY CALIBRATION DATA

| FREQUENCY RANGE | LOW END -- ADJUST INDUCT. | | HIGH END -- ADJUST CAP. | |
|-----------------|--------------------------------------|------|-------------------------|------|
| | FREQ. | COIL | FREQ. | COIL |
| A | 10 Kc | L111 | 20 Kc | C136 |
| B | 30 Kc | L110 | 80 Kc | C135 |
| C | 100 Kc | L109 | 200 Kc | C134 |
| D | 250 Kc | L108 | 650 Kc | C133 |
| E | 700 Kc | L107 | 2 Mc | C132 |
| F | 3 Mc | L106 | 6 Mc | C131 |
| G | 7 Mc | L105 | 18 Mc | C130 |
| H | MAKE CENTER BAND ADJUSTMENT AT 30 Mc | | | |

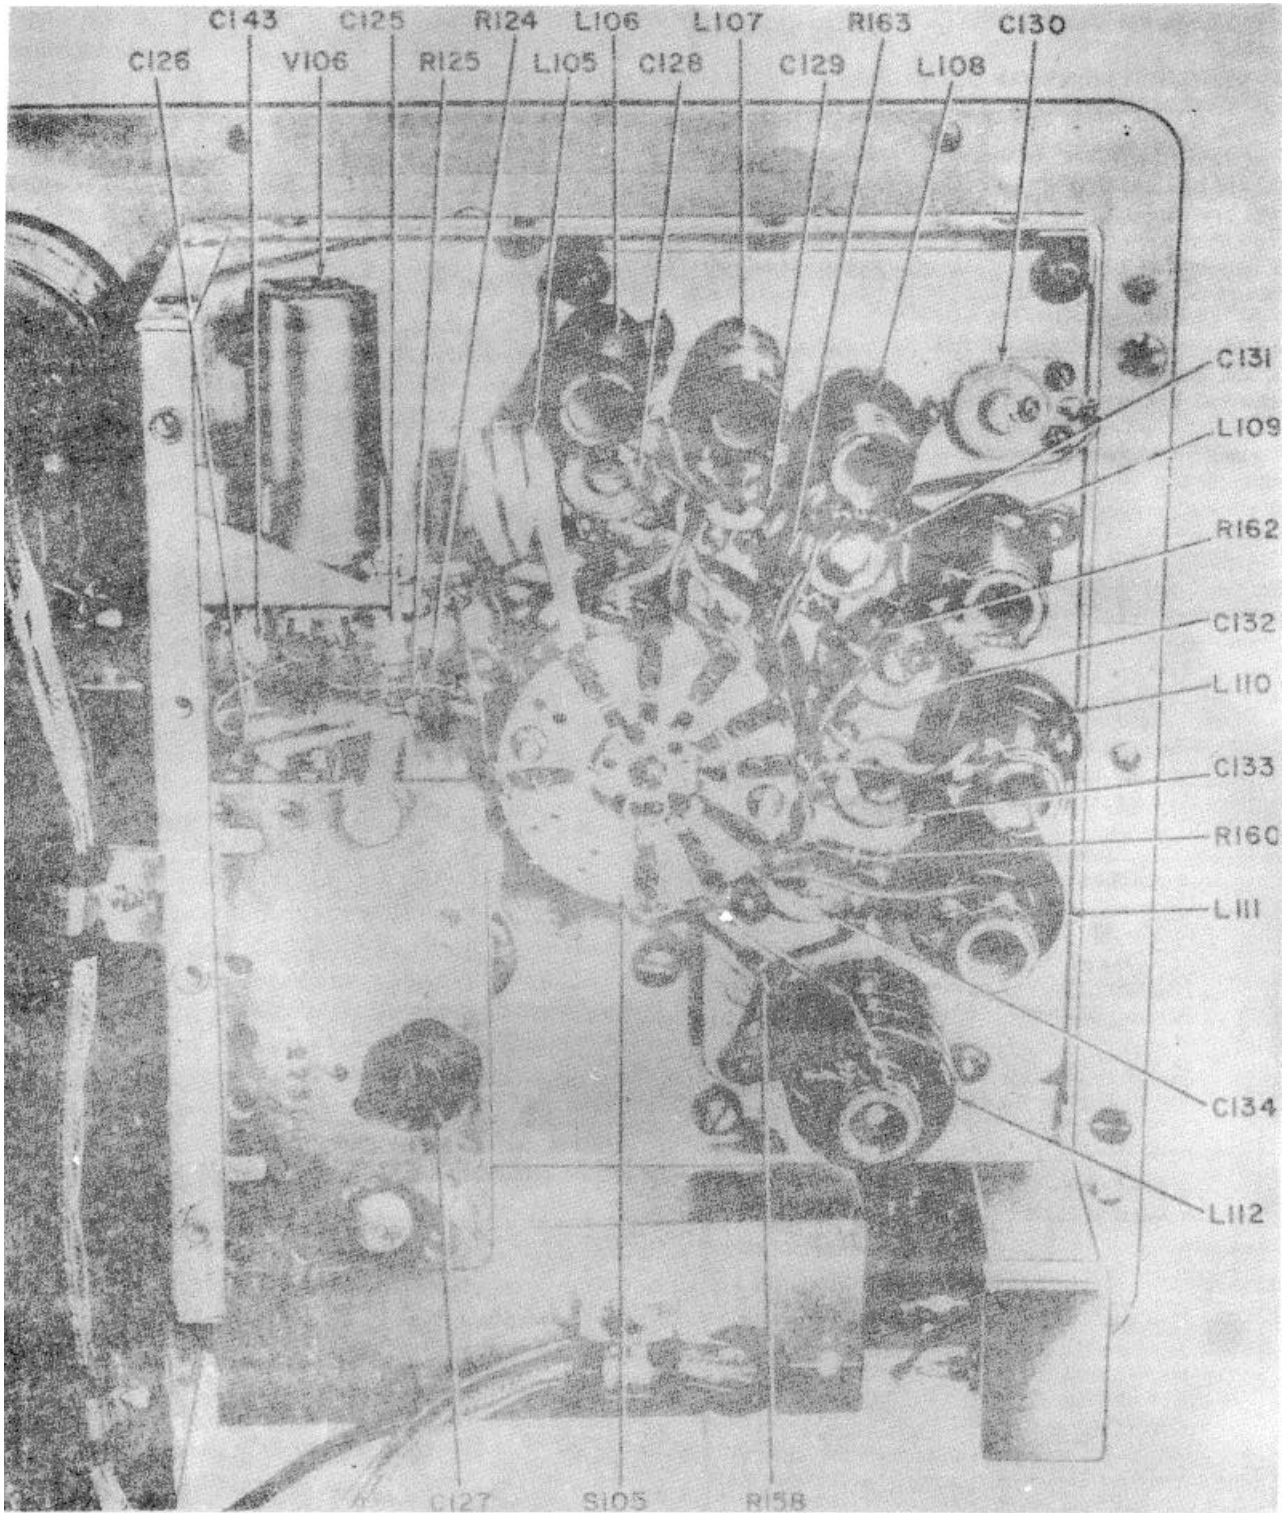


Figure 6-7. Interior View of Carrier Oscillator Compartment

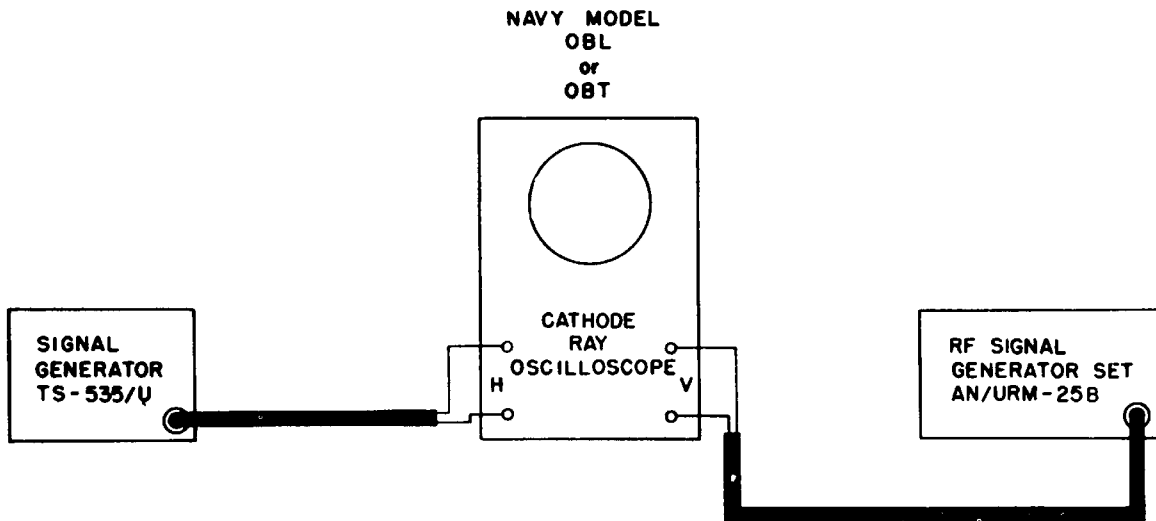


Figure 6-8. Method for Calibrating the RF Signal Generator Set AN/URM-25B at Frequencies Below 100 Kilocycles

(4) In using the heterodyne frequency meters referred to in paragraph 8 of this section, connect the output test cable (W-104) to the heterodyne frequency meter. Place a pair of earphones across the output of the frequency meter. Make the necessary capacitance and inductance adjustments while listening for a zero beat on the earphones.

(5) For calibrating frequency ranges below 100 kc, use the Signal Generator TS-535/U. Feed the output from the RF Signal Generator Set AN/URM-25B and Signal Generator TS-535/U to the horizontal and vertical inputs of an oscilloscope such as Oscilloscope OS-8/U, Navy Models OBL or OBT series (See figure 6-8). Adjust the frequency of the Signal Generator TS-535/U and the frequency of the RF Signal Generator Set AN/URM-25B to the same value. Be sure to calibrate the Signal Generator TS-535/U according to its instruction book before using it as a standard in this procedure.

NOTE

To make the necessary RF trimmer and coil adjustments, it will be necessary to remove the top shield plate from the carrier oscillator compartment. After the adjustment has been made, replace this plate and recheck calibrations. If the calibrations have been changed when this plate is replaced, readjust the applicable trimmer or core to compensate for this effect.

b. FREQUENCY CALIBRATION CHART. Table 6-1 is a chart for calibrating frequency and the necessary adjustment to be made on all bands. When calibrating frequency, follow the points and procedures therein contained.

c. ADJUSTING THE RF COILS. (See figure 6-7 and table 6-1)

(1) Identify the coil that must be readjusted (See figure 6-7).

(2) Set the main tuning dial (I-103) at the selected calibration point for the range in question.

(3) Note the original position of the core slot in the coil form. Move the core slightly in the required direction.

(a) Out or counterclockwise to reduce inductance and increase frequency.

(b) In or clockwise to increase inductance and reduce frequency.

(4) Replace the oscillator compartment shield and recheck the frequency scale for correction of calibration. (See note in par. 9a(5) of this section).

d. ADJUSTING THE TRIMMER CAPACITORS.

(1) Access to the trimmer capacitor is made by removing the oscillator compartment shield.

(2) Set the main tuning dial (I-103) at the required calibration point for the range in question.

CAUTION

After the necessary adjustments have been made, on the upper and lower ends of the band being calibrated, the corresponding calibrations should be correct throughout the frequency range. If not, the main tuning capacitor (C-127) may be defective. One common way that this variable capacitor becomes defective is through "plate bending." Never bend the plates of the main tuning capacitor (C-127) in attempting to make an adjustment.

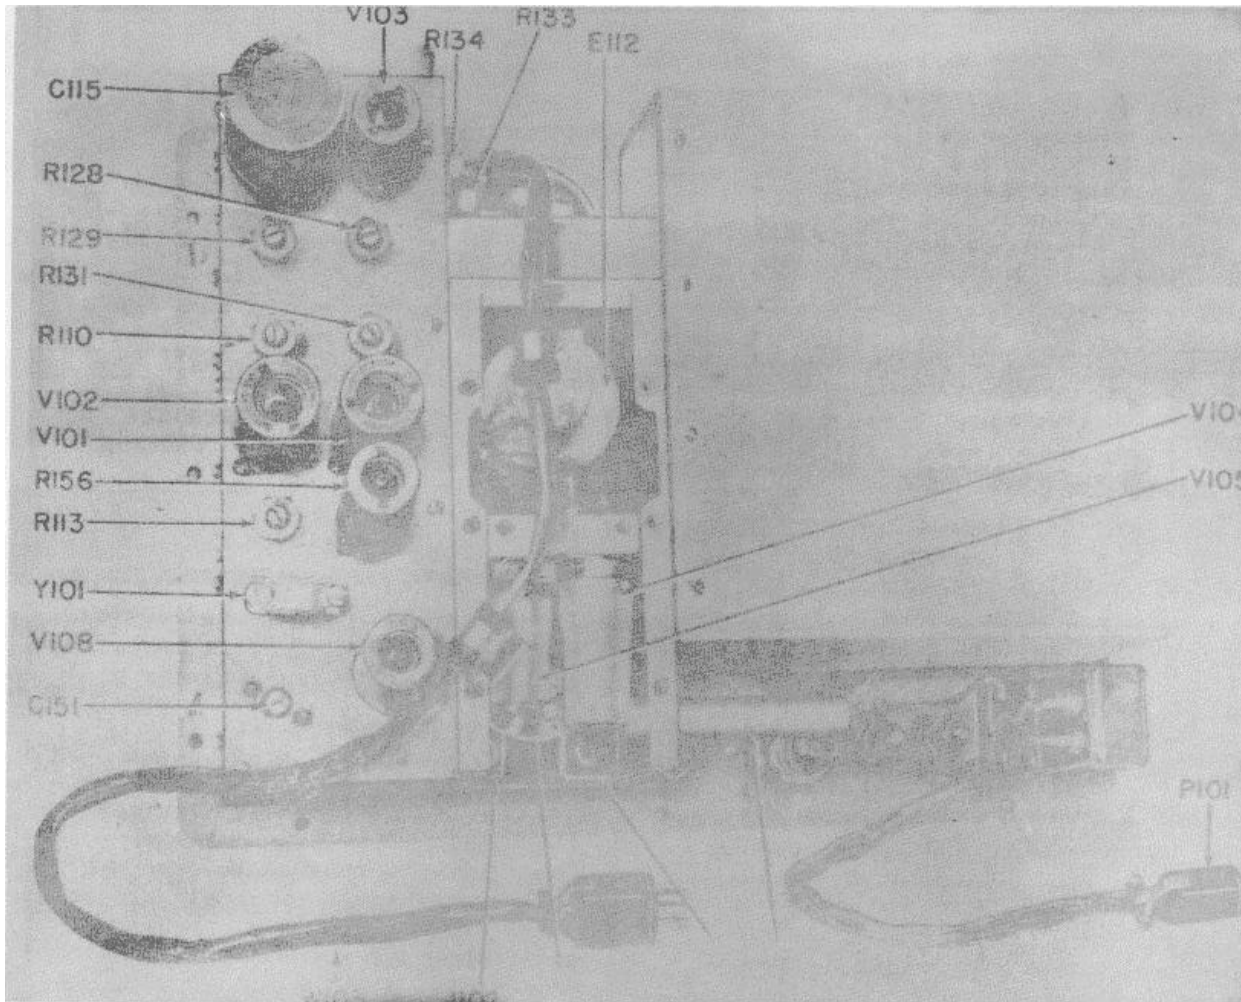


Figure 6-9. Rear View of RF Signal Generator SG-44 B/URM-25 with Buffer-Amplifier Cover Plate Removed

10. CALIBRATING THE ELECTRON TUBE VOLTMETER.

(See Figure 6-9)

a. GENERAL. In the course of operating the equipment, it may be discovered that the meter (M-101) does not indicate what it should. This can readily be determined by applying the procedures outlined in Section 5 Table 5-1 ROUTINE CHECK CHART and making the necessary adjustments outlined in this paragraph.

NOTE

All voltmeter adjustments (R-128, R-129, R-131 and R-134) are of the screwdriver type and are located in the audio compartment. Figure 6-9 identifies these controls.

b. ZERO ADJUSTMENT. Make this adjustment if the meter (M-101) does not read zero in all positions of the METER READS switch (S-102) when the CARRIER CONTROL (R-123) and %0 MODULATION control (R-111) are set fully counterclockwise.

(1) Set CARRIER CONTROL (R-123) and % MODULATION control (R-111) to the fully counterclockwise positions (zero carrier and zero modulation voltage).

(2) Set METER READS switch (S-102) to the BAL position.

(3) Adjust the BALANCE control (R-131) for zero meter reading. This potentiometer (R-131) varies the relative B4voltage applied to the plates of the bridge tube (V-101) until a balance is obtained in the two arms of the bridge; When both branches are thus balanced, no current flows through the meter (M-101) and it indicates zero.

(4) Set the METER READS switch (S-102) to the RF position. The output from the RF diode (V-105) is now applied to the grid of the bridge tube (V-105B). Since the CARRIER CONTROL (R-123) was set for zero signal output (fully counterclockwise), there should be no voltage applied to the grid of the tube (V-101B) and the meter (M-101) should still indicate zero. However, if a reading other than zero is reflected by the meter,

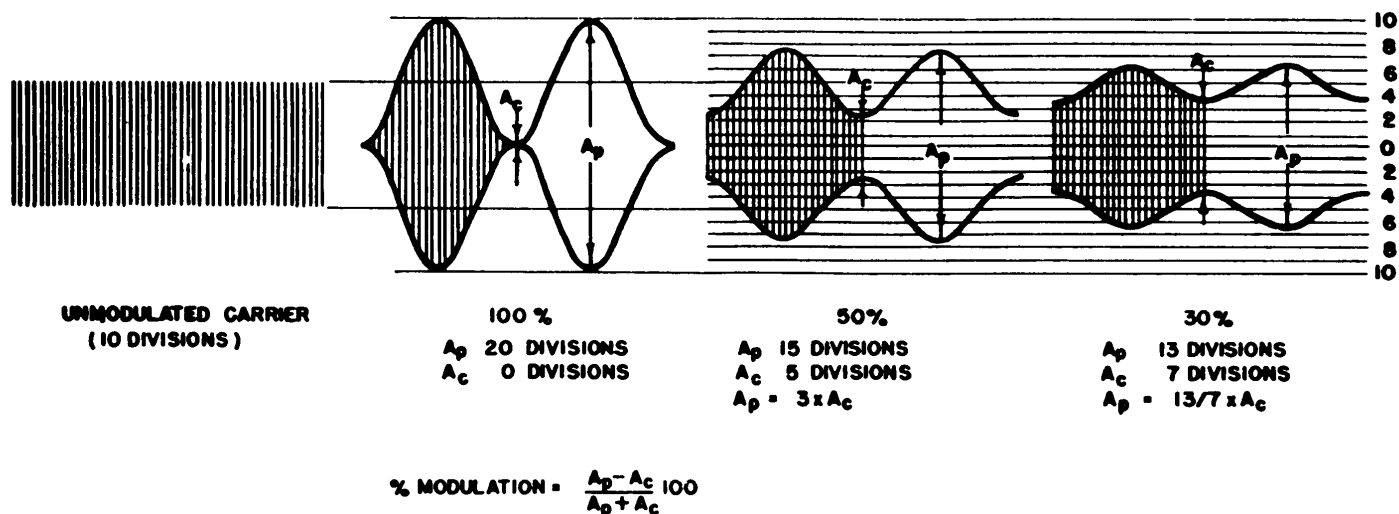


Figure 6-10. Percentage Modulation Chart

adjust the RF COMP control (R-128) until a zero meter reading is obtained. This adjustment compensates for the contact potential that may be present across the RF diode (V-105).

(5) Set the METER READS switch (S-102) to the N MOD position. The output from the modulation diode (V-103) is now applied to the bridge tube (V-101B). Since the % MODULATION control (R111) was set to the fully counterclockwise position, there should be no voltage applied to the grid of the bridge tube (V-101B). Here again, the contact potential of the modulation diode (V-103) may cause a reading other than zero to be indicated on the meter (M-101). Adjust the MOD COMP control (R-129) for zero meter reading.

c. RF OUTPUT VOLTAGE CALIBRATION (upper meter scale).

(1) Turn the MICROVOLTS control (R-155) to the fully clockwise position.

(2) Set the CARRIER CONTROL (R-123) to the fully counterclockwise position.

(3) Set METER READS switch (S-102) to the RF position.

(4) Turn MODSELECTOR switch (S-103) to OFF.

(5) Set frequency at 100 kc.

(6) Place an electronic voltmeter such as Multimeter ME-25/U or equal between one center contact of the X 20,000 RF OUTPUT jack (J-101) and ground.

(7) Rotate the CARRIER CONTROL (R-123) in a clockwise direction until 2.0 volts are indicated on the test meter. The signal generator meter (M-101) should read "100" on the upper scale. This represents 2.0 volts output when the X 20,000 RF OUTPUT jack (J-101) is open circuited.

(8) Adjust the RF Sens control (R-133) until the signal generator meter (M-101) reads "100" on the upper scale when the test meter reads 2.0 volts.

(9) To maintain a calibrated output voltage from the X MULT RF OUTPUT jack (J-102), when operating the signal generator, first rotate the CARRIER CONTROL potentiometer (R-123) to the fully counterclockwise position.

Turn the CARRIER CONTROL in a clockwise direction until the meter (M-101) reads "100." The output from this jack can now be varied by rotating the MICROVOLTS potentiometer (R-111) in a counterclockwise direction and by selecting the desired attenuation with the MULTIPLIER dial (I-104). Once the carrier level has been set at "100," the CARRIER CONTROL (R-123) should never be used to vary the output from the X MULT RF OUTPUT jack (J-102). Before changing frequency, the CARRIER CONTROL (R-123) should first be returned to the fully counterclockwise position and then advanced to the carrier level of "100," after the desired frequency has been selected.

d. PERCENTAGE MODULATION CALIBRATION (lower meter scale). (See figure 6-10)

(1) Set carrier frequency at 100 kc.

(2) Set METER READS switch (S-102) to the % MOD. position.

(3) Set MOD SELECTOR switch (S-103) for 400 cycles per second.

(4) Set CARRIER RANGE switch (S-107) to the "10 kc-230 kc" position.

(5) Feed the output from the X MULT RF OUTPUT jack (J-102) to the vertical input of a test oscilloscope.

(6) Place a graduated celluloid screen over the face of the oscilloscope.

(7) With the MULTIPLIER dial (I-104) and MICROVOLTS control (R-155), adjust the modulated signal amplitude to cover approximately 75 per cent of the face of the oscilloscope.

(8) Adjust the % MODULATION control (R-111) on the front panel until 50 percent modulation is indicated on the oscilloscope (See figure 6-10.)

(9) Adjust the Mod Sens control (R-134) until the

meter (M-101) also indicates 50 percent on the modulation scale (lower scale).

(10) Adjust the % MODULATION control (R-111) on the front panel until 30 percent modulation is indicated on the oscilloscope.

(11) Check the reading of the meter.

(12) If necessary, readjust R-134 until 30 percent and 50 percent readings are both as accurate as possible, favoring the 30 percent adjustment since this value is used most often.

11. CALIBRATING THE STEP ATTENUATOR (E-112).

a. The voltage attenuation of the step attenuator (E-112) should be checked whenever a resistor in this unit is replaced. Use the (10: 1) Fixed Attenuator CN-136/URM-25 and a radio receiver such as Navy Model RBA Series or equivalent for making this check as follows:

(1) Set the RF Signal Generator Set AN/URM-25B for 100 kc carrier frequency with 30% modulation at 400 cycles.

(2) Connect the (10:1) Fixed Attenuator CN-136/URM-25 to J-102 and terminate it with the Impedance Adapter MX-1074/URM-25.

(3) Connect the impedance adapter output to the RBA (or equivalent) receiver.

(4) Adjust the output of the signal generator for a reading of "100" on M-101.

(5) Set the MULTIPLIER dial (I-104) one range above the range in which the resistor was replaced.

(6) Connect a voltmeter such as the Multimeter ME-25/U series or equivalent across the output of the RBA receiver.

(7) Tune the receiver to the frequency (100 kc) of the signal generator and record a reference receiver output as indicated by the multimeter.

(8) Reset the MULTIPLIER dial (I-104) to the attenuation range in question (next lower range).

(9) Remove the (10:1) Fixed Attenuator CN-136/URM-25 and connect the signal generator output at J-102 to the Impedance Adapter MX-1074/URM-25.

(10) Advance the MICROVOLTS control (E-103) in a clockwise direction for a meter reading of "100."

(11) The receiver output should be the same now as was indicated in step 7 above. If it is not, the resistor on this range should be replaced.

NOTE

Use a very hot soldering iron when replacing resistors in the step attenuator (E-112). Apply the iron to the solder surface for a very short period of time. Too long a period of heating may cause the precision resistors to change in value.

b. Whenever it is suspected that the step attenuator j ratios are not correct, the procedures outlined in paragraph 11a above may be used as a check. A more complete analysis of step attenuator troubles is given in Table 6-4 CHART OF SUGGESTED TESTS FOR LOCATING THE SPECIFIC TROUBLE, paragraph 7.

12. TROUBLE SHOOTING CHARTS.

a. In employing any systematic method for trouble shooting, the methods and procedures followed by the technician will vary greatly. Any method employed is satisfactory as long as it will produce accurate results with the greatest expediency.

b. To assist the Electronics Technician in applying himself to the maintenance problems of the RF Signal Generator Set AN/URM-25B a trouble symptoms chart and two trouble shooting tables are listed near the end of this section. The first, Table 6-2 TROUBLE SYMPTOM CHART is a listing of some common trouble symptoms with suggested checks for locating the defect; the second, Table 6-3 GENERAL TEST PROCEDURES FOR LOCALIZING TROUBLE is a systematic procedure for determining the unit or component which is the source of trouble; the third, Table 6-4 SUGGESTED TESTS FOR LOCATING THE SPECIFIC TROUBLE gives some hints that may be applied in finding the specific part that may be defective.

13. TUBE OPERATING VOLTAGES AND CURRENTS.

Elect on tube operating voltages and currents under normal operating conditions are given in Table 6-5 TUBE OPERATING VOLTAGES AND CURRENTS, located near the end of this section. The measurements indicated in this table were made with the signal generator set for 100 kc operation and the METER READS switch (S-102) in the BAL position. Readings that vary with the position of the CARRIER CONTROL (R-123) are also indicated.

14. TUBE SOCKET ELECTRICAL MEASUREMENTS.

(a) As a further aid in maintenance work figure 6-11 SIGNAL GENERATOR VOLTAGE AND RESISTANCE CHART will be found near the end of this section. This chart lists diagrammatically, the voltage and resistances measured from all tube socket connections to ground.

(b) As is indicated by the footnotes to this chart, all measurements were made with 20,000 ohms per volt DC meter such as in the Navy Model OE Series Analyzing Equipment.


15. WINDING DATA.

Complete winding data for all wire-wound units (except resistors) in the AN/URM-25B is given in Table 6-7 WINDING DATA.

16. EXTERIOR AND INTERIOR VIEWS OF UNITS.

To assist the technician doing maintenance work in locating the positions of the various coils, capacitors, resistors, switches, etc., comprising the signal generator, there will be found at the back of this section additional photographic illustrations. They show every part of the RF Signal Generator

Set AN/URM-25B with the corresponding symbol designation indicated. These will facilitate the easy and quick identification of all parts. Table 6-8 CROSS REFERENCE BETWEEN SYMBOL NUMBER AND FIGURE LOCATION gives the figure in which these parts are identified.

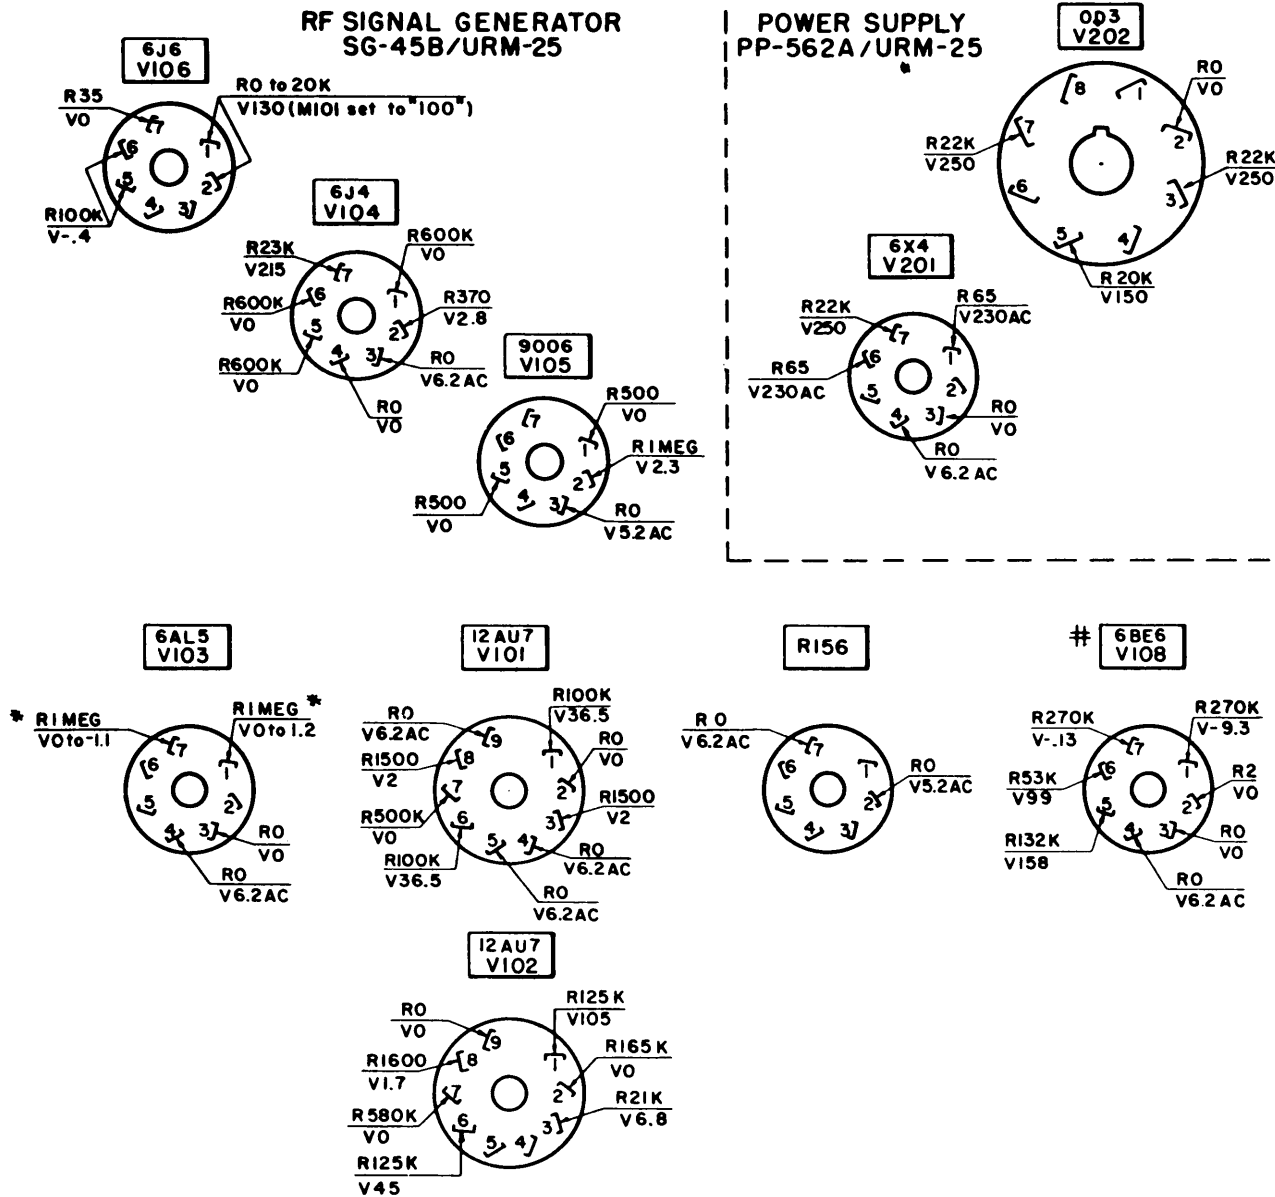

- NOTES:**
 All DC readings taken with a 20,000 ohms/volt meter
 All AC readings taken with a 1,000 ohms/volt meter
 Readings made with signal generator in following operating conditions:
 1. Carrier frequency 100 kc
 2. Meter set to full scale for RF
 3. S102 in BAL position
 4. S103 at 1000 cycles
 5. S106 (XTAL-CAL) OFF
 6. All voltage readings: DC unless followed by AC
 * Voltage depends on position of R111
 # Switch S106 (XTAL-CAL) "ON" for V108 voltage measurements

Figure 6-11. Signal Generator Voltage and Resistance Chart.

TABLE 6-2. TROUBLE SYMPTOM CHART

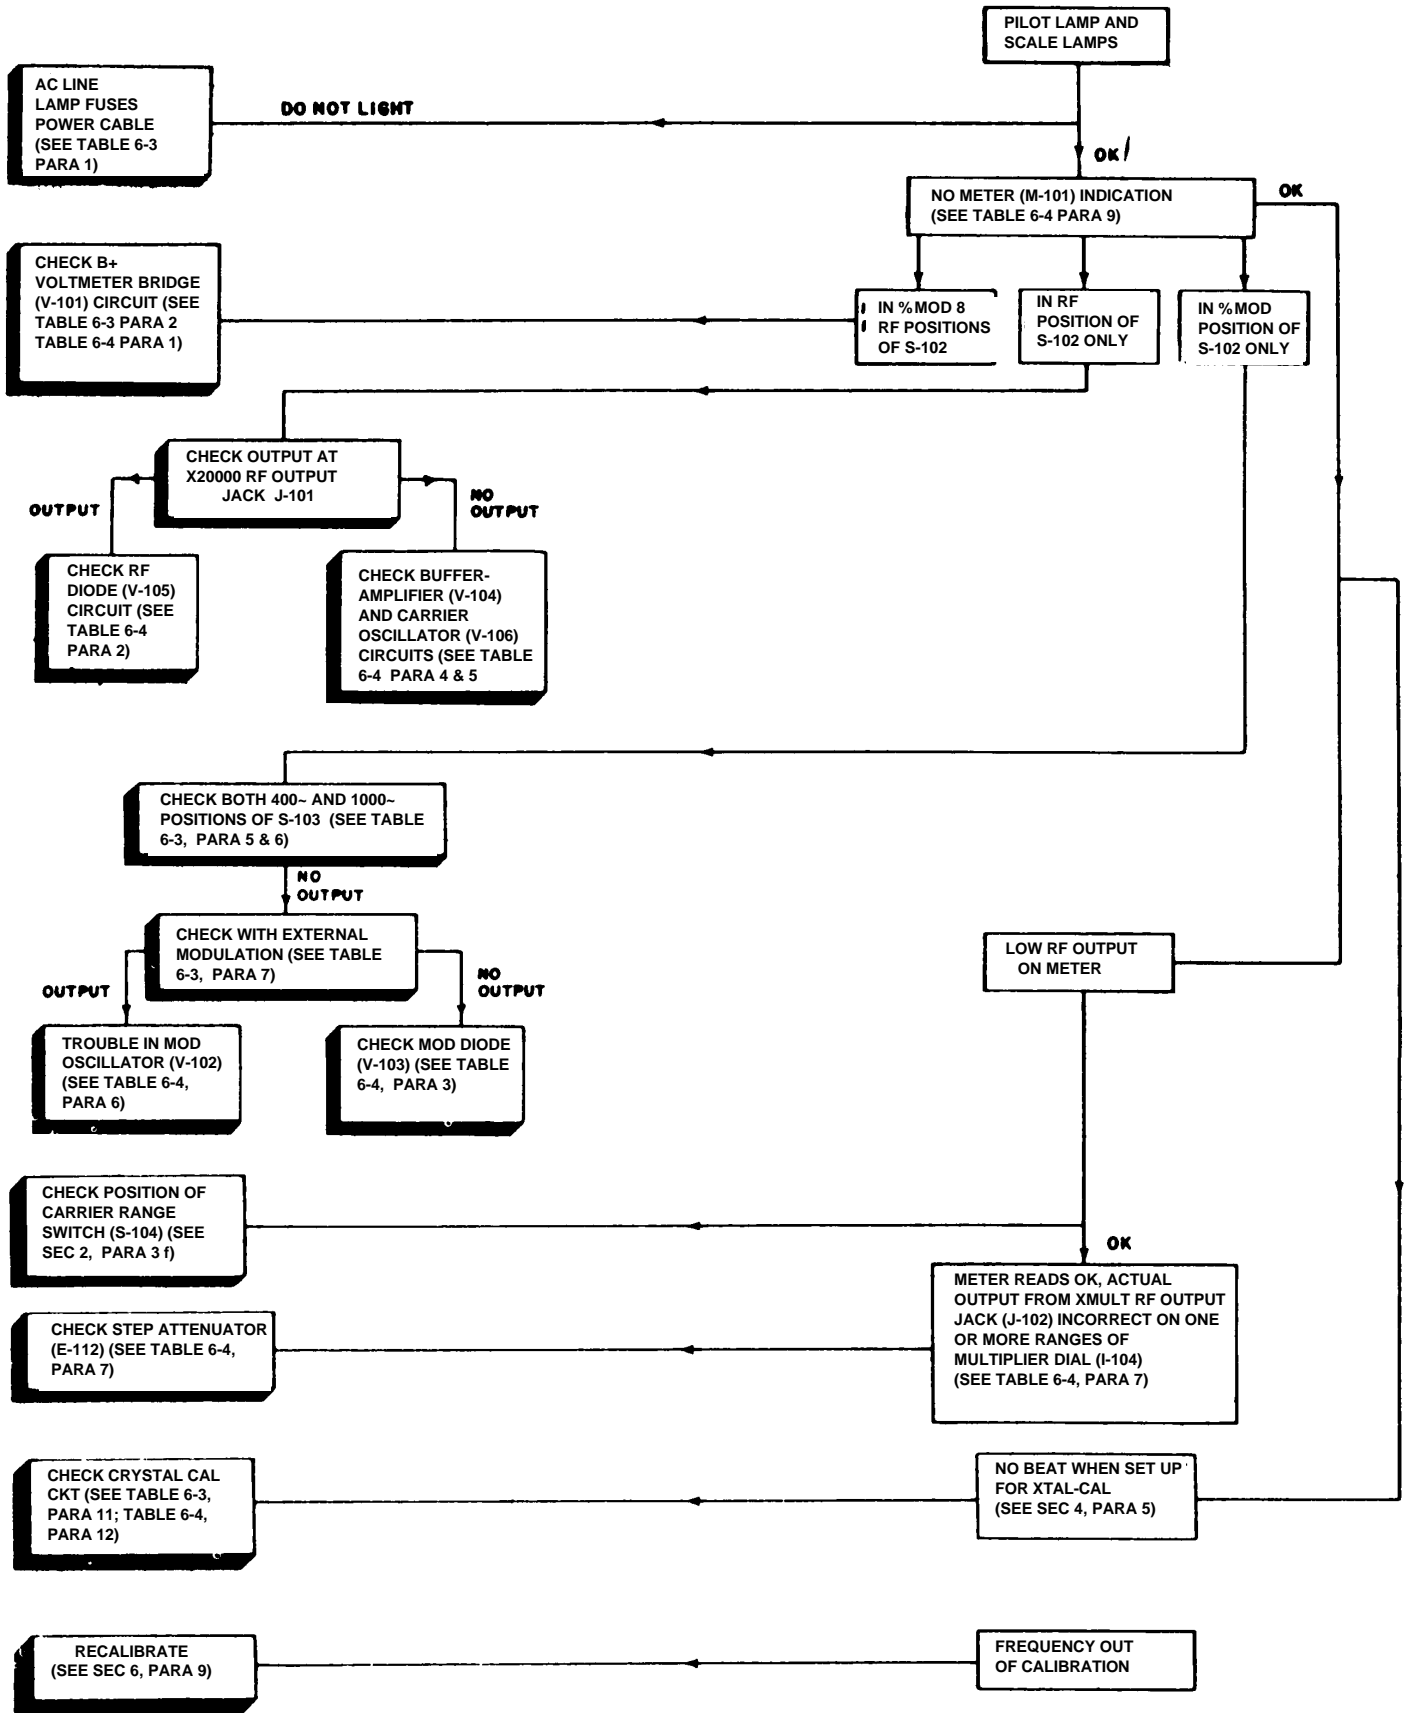


TABLE 6-3. CHART OF GENERAL TEST PROCEDURE FOR LOCALIZING TROUBLE

Note: The CARRIER (R-123) and % MODULATION (R-111) controls should always be turned fully counterclockwise before turning power on.

| LOCATION AND TYPE OF TROUBLE | SUGGESTED METHOD FOR LOCALIZING TROUBLE |
|---|--|
| POWER SUPPLY. (See par. 11 for additional check.) | Make sure the indicating lamp (I-101) or scale lamps (E-128 thru E-130) have been made to light, as evidence that the 115 volt supply mains, fuses, and at least a part of the power supply system, is in working order. If none of these lamps light, see Table 6-4, par. 8 on POWER SUPPLY. |
| VOLTMETER BRIDGE. (See par. 10 for additional checks.) | <ol style="list-style-type: none"> 1. Set the signal generator controls in the following position: <ol style="list-style-type: none"> a. POWER switch (S-101) OFF. b. MOD SELECTOR switch (S-103) OFF. c. METER READS switch (S-102) at RF. d. CARRIER RANGE switch (S-107) at applicable range. e. CARRIER CONTROL (R-123) in extreme counterclockwise position. f. % MODULATION control (R-111) in extreme counterclockwise position. g. FREQUENCY BAND SWITCH (S-105) set for any one of the eight ranges. |
| CARRIER OSCILLATOR, RF DIODE, BUFFER-AMPLIFIER. | <ol style="list-style-type: none"> 2. Turn the POWER switch (S-101) ON. The meter needle should be at the first line on the left. If it is not, see Table 6-4, par. 1 on VOLTMETER BRIDGE CIRCUIT TROUBLE. 3. Advance the CARRIER CONTROL (R-123) slowly in a clockwise direction. The meter needle should correspondingly move up scale. If it does, the voltmeter bridge, RF diode, carrier oscillator (at least one range) buffer-amplifier, and power supply are functioning. 4. Set the FREQUENCY BAND SWITCH (S-105) successively for each range to see if operation (as in Par. 3 above) is obtained for all ranges. If it is, the carrier oscillator and buffer-amplifier are probably functioning. Operation on some bands and not on others probably indicates a defect in the carrier oscillator (see Table 6-4, par. 5 on CARRIER OSCILLATOR), since the buffer- amplifier is untuned and should respond at all frequencies if it responds at one. 5. If, in Par. 3 and 4 above, the meter does not move up scale, turn the METER READS switch (S-102) to the % MOD position. Set MOD SELECTOR switch (S-103) to the 400 cycle position. Slowly advance the % MODULATION control (R-111) in a clockwise direction. If the meter now moves up scale, it indicates that there is trouble in the carrier oscillator, RF diode, or Buffer- amplifier circuits (see Table 6-4 Sections on CARRIER OSCILLATOR, RF DIODE, BUFFER- AMPLIFIER.) This also indicates that the modulation oscillator, modulation diode and voltmeter bridge circuits are functioning. |
| MODULATION OSCILLATOR. | <ol style="list-style-type: none"> 6. If the meter responds to the tests in par. 4, but not in par. 5 above, the trouble is in the modulation oscillator or modulation diode. 7. With the METER READS switch (S-102) in the % MOD position; MOD SELECTOR switch (S-103) at EXT, CARRIER RANGE switch (S-104) at applicable range, apply an external audio signal (1000 cycles) to the EXT MOD IN jack (J-103). Slowly advance the % MODULATION control (R-111) in a clockwise direction. If the meter now moves up scale, it indicates that the trouble is in the modulation oscillator. |
| MODULATION | <ol style="list-style-type: none"> 8. If the meter still does not respond to the % MODULATION control, feed the output signal DIODE. from the X MULT RF OUTPUT jack (J-102) to a test oscilloscope. Set the carrier frequency at 100 kc. Place the METER READS switch (S-102) in the RF position. Advance the CARRIER CONTROL (R-123) in a clockwise direction until a reading of "100" is obtained on the upper meter scale. With the external modulation applied as in par. 7 above, the modulated pattern should appear on the oscilloscope (see figure 6-10). If it does, the trouble was in the modulation diode circuit. |
| STEP ATTENUATOR (E-112) OR OUTPUT CABLES | <ol style="list-style-type: none"> 9. If the meter responds to the above tests in a satisfactory manner, but there is still no output voltage at the end of the output cable (W-104), the trouble is in the attenuator (E-112) or output test cable (see Table 6-4 Sections on STEP ATTENUATOR and OUTPUT CABLES). |

TABLE 6-3. CHART OF GENERAL TEST PROCEDURE FOR LOCALIZING TROUBLE- Continued

| LOCATION AND TYPE OF TROUBLE | SUGGESTED METHOD FOR LOCALIZING TROUBLE |
|------------------------------|--|
| VOLTMETER BRIDGE. | 10. If no meter response, whatsoever, is obtained, but it is determined that output voltage is available, the trouble is probably in the voltmeter bridge circuit (see Table 6-4, par. 1 on VOLTMETER BRIDGE). |
| POWER SUPPLY. | 11. If no meter response or output voltage is obtained from the foregoing tests, the trouble is probably in the power supply (see Table 6-4, par. 8 on POWER SUPPLY). |
| CRYSTAL CALIBRATOR. | 12. Turn MOD SELECTOR switch (S-103) to EXT and the XTAL-CAL switch (S-106) to ON. Connect a set of high impedance earphones to EXT MOD IN jack J-103 using 7" cable W-105 and Connector, Adapter UG-684/U. Tune signal generator to some even multiple of 1 mc and listen for zero beat. 13. If it is determined, from previous steps, that RF output is present at J-101 and if no zero beat is heard at J-103, then the crystal calibrator circuit (V-108) is defective. (See Table 6-4 par 12). |

TABLE 6-4. CHART OF SUGGESTED TESTS FOR LOCATING THE SPECIFIC TROUBLE

Note: The CARRIER (R-123) and % MODULATION (R-111) controls should always be turned fully counter clock-wise before turning power on.

| TYPE OF TROUBLE | SUGGESTED METHOD OF TEST AND REPAIR |
|---|---|
| <p>1. VOLTMETER BRIDGE CIRCUIT (V-101).</p> <p>a. INOPERATIVE.</p> | <p>If preliminary tests have indicated that the voltmeter bridge circuit (V-101) is inoperative, remove the RF signal Generator Unit SG-44B/URM-25 from the cabinet and proceed with the following tests (see Section 6, par. 4a).</p> <p>(1) Test voltage of bridge tube V-01 with the POWER switch (S-101) ON and METER READS switch (S-102) in BAL position. Heater Voltage -- 6.3v AC Plate Voltage (V-101A) -- 36.5v DC (± 5V) Plate Voltage (V-101B) -- 36.5v DC (± 5V) Grid Voltage (V-101B) -- 0 Grid Voltage (V-101B) -- 0 Cathode Voltage (V-101A) -- 2v DC Cathode Voltage (V-101B) -- 2v DC</p> <p style="text-align: center;">NOTE DC voltages measured from tube socket connections to ground with a 20,000 ohms per volt voltmeter.</p> <p>(2) If voltages are correct, disconnect power cable and make circuit continuity check with an ohmmeter until the defect is located (see figure 6-11).</p> |
| <p>b. METER (M-101) ZERO ADJUSTMENT</p> <p>the audio compartment)</p> <p>positions of the METER READS switch.</p> | <p>(1) Turn the POWER switch (S-101) to ON position. Both the CARRIER CONTROL (R-123) and the % MODULATION control (R-111) should be in the fully counterclockwise position. Apply the following procedure:</p> <p>(a) Set the METER READS switch (S-102) in the BAL position. The meter (M-101) should read zero. If it does not, adjust the BALANCE control (R-131) screw driver adjustment (located on the audio compartment) for zero reading.</p> <p>(b) Place METER READS switch (S-102) in the RF position. If the meter does not read zero, adjust the RF COMP control (R-128) screwdriver adjustment (located on the audio compartment) for zero reading.</p> <p>(c) Place METER READS switch (S-102) in the % MOD position. If the meter does not read zero, adjust the MOD COMP control (R-129) screwdriver adjustment (located on the audio compartment) for zero reading.</p> <p>(2) Repeat the procedure outlined in paragraphs a, b and c, above until the meter reads zero in all positions of the METER READS switch.</p> <p>(3) If unable to set meter to zero in all positions of the METER READS switch, one of the associated circuit parts is probably defective. Make continuity checks accordingly.</p> |

TABLE 6-4. CHART OF SUGGESTED TESTS FOR LOCATING THE SPECIFIC TROUBLE - Continued

| TYPE OF TROUBLE | SUGGESTED METHOD OF TEST AND REPAIR | | | | | | | | | | | | | | | | | | | | | |
|--|--|---------------------------------|--------------------------------|---------------------------------|--------|--------------|--------------|---|--------------|--------------|---|--------------|--------------|---|--------------|--------------|---|--------------|--------------|---|--------------|--------------|
| <p>2. RF DIODE INOPERATIVE (V-105).</p> | <p>a. The RF diode (V-105) rectifies the RF signal which is applied to the voltmeter bridge (V-101) circuit and read on the upper scale of the meter (M-101) when the METER READS switch (S-102) is in the RF position. If it is determined that this circuit is defective the first and simplest thing to do is to replace the tube (V-102). When doing this, it will be necessary to readjust the RF COMP control (R-128) for zero meter reading.</p> <p>b. If replacing the RF diode (V-105) does not alleviate the trouble, make continuity checks within the circuit.</p> | | | | | | | | | | | | | | | | | | | | | |
| <p>3. MODULATION DIODE INOPERATIVE (V-103).</p> <p>throughout the circuit.</p> | <p>a. The modulation diode (V-103) rectifies the modulation signal which is applied to the voltmeter bridge (V-101) circuit and read on the lower scale of the meter (M-101) when the METER READS switch (S-102) is in the % MOD position. If it is determined that this circuit is defective, the first and simplest thing to do is to replace the tube (V-103). When doing this it will be necessary to readjust the MOD COMP control (R-129) for zero meter reading.</p> <p>b. If replacing the modulation diode does not cure the trouble, make continuity checks</p> | | | | | | | | | | | | | | | | | | | | | |
| <p>4. BUFFER- AMPLIFIER INOPERATIVE (VA104)</p> | <p>a. If preliminary tests have indicated that the buffer-amplifier is inoperative, remove the signal generator from the cabinet and proceed with the following tests (see Section 6, par. 4).</p> <p>b. Test DC voltages with the tube (V-104) in the socket; M-101 set for "100" and MOD SELECTOR switch (S-103) OFF (see figure 6-11). Carrier frequency should be set to 100 kc. Heater Voltage - 6.3v AC Plate Voltage - 215, DC Cathode Voltage - 2.8vDC (Adjust to this value with R-1 13) Control Grid Voltage - 0</p> <p>DC measurements made from socket terminals to chassis with a 20,000 ohms per volt voltmeter.</p> <p>c. If the voltages are correct, but the buffer-amplifier is still inoperative, make a circuit continuity test with an ohmmeter until the defect is located.</p> <p style="text-align: center;">NOTE</p> <p style="text-align: center;">It is a good idea to check the tube with a tube checker even though voltage checks are correct. Change in tube characteristics (i.e. transconductance etc.) may not show up in voltage checks but may actually be the source of trouble.</p> | | | | | | | | | | | | | | | | | | | | | |
| <p>5. CARRIER OSCILLATOR (V-106).</p> <p>a. INOPERATIVE.</p> | <p>(1) If preliminary tests have indicated that the carrier oscillator is inoperative in all ranges, remove the signal generator from its cabinet and proceed with the following tests:</p> <p>(a). Set the POWER switch (S-101) in ON position and the frequency to 100 kc with the carrier oscillator tube (V-106) in its socket, test the tube voltages. Heater Voltage: 6.3v AC Plate Voltage: Varies between 0 and 150v DC depending on setting of CARRIER CONTROL (R-123). (Checking this may or may not cause circuit to stop oscillating.) Grid Voltage: 0 to -.5v DC (Varies with rotation of CARRIER CONTROL R-123). Cathode Voltage: 0.</p> <p>(b) Turn the POWER switch (S-101) to OFF position and make the following resistance checks from grid to ground and grid to cathode, setting the FREQUENCY BAND SWITCH (S-105) to each corresponding position:</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">SWITCH POSITION</th> <th style="text-align: center;">RESISTANCE (grid to ground)</th> <th style="text-align: center;">RESISTANCE (grid to cathode)</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">Band A</td> <td style="text-align: center;">100,000 ohms</td> <td style="text-align: center;">175,000 ohms</td> </tr> <tr> <td style="text-align: center;">B</td> <td style="text-align: center;">100,000 ohms</td> <td style="text-align: center;">118,000 ohms</td> </tr> <tr> <td style="text-align: center;">C</td> <td style="text-align: center;">100,000 ohms</td> <td style="text-align: center;">100,000 ohms</td> </tr> <tr> <td style="text-align: center;">D</td> <td style="text-align: center;">100,000 ohms</td> <td style="text-align: center;">104,700 ohms</td> </tr> <tr> <td style="text-align: center;">E</td> <td style="text-align: center;">100,000 ohms</td> <td style="text-align: center;">101,800 ohms</td> </tr> <tr> <td style="text-align: center;">F</td> <td style="text-align: center;">100,000 ohms</td> <td style="text-align: center;">100,000 ohms</td> </tr> </tbody> </table> | SWITCH POSITION | RESISTANCE (grid to ground) | RESISTANCE (grid to cathode) | Band A | 100,000 ohms | 175,000 ohms | B | 100,000 ohms | 118,000 ohms | C | 100,000 ohms | 100,000 ohms | D | 100,000 ohms | 104,700 ohms | E | 100,000 ohms | 101,800 ohms | F | 100,000 ohms | 100,000 ohms |
| SWITCH POSITION | RESISTANCE (grid to ground) | RESISTANCE (grid to cathode) | | | | | | | | | | | | | | | | | | | | |
| Band A | 100,000 ohms | 175,000 ohms | | | | | | | | | | | | | | | | | | | | |
| B | 100,000 ohms | 118,000 ohms | | | | | | | | | | | | | | | | | | | | |
| C | 100,000 ohms | 100,000 ohms | | | | | | | | | | | | | | | | | | | | |
| D | 100,000 ohms | 104,700 ohms | | | | | | | | | | | | | | | | | | | | |
| E | 100,000 ohms | 101,800 ohms | | | | | | | | | | | | | | | | | | | | |
| F | 100,000 ohms | 100,000 ohms | | | | | | | | | | | | | | | | | | | | |

TABLE 6-4. CHART OF SUGGESTED TESTS FOR LOCATING THE SPECIFIC TROUBLE - Continued

| TYPE OF TROUBLE | SUGGESTED METHOD OF TEST AND REPAIR |
|--|---|
| | <p style="text-align: center;">G 2,200 ohms 2,200 ohms H 2,200 ohms 2,200 ohms</p> <p>(c) If the ohmmeter reads "open" in any position of the FREQUENCY BAND SWITCH. either the corresponding coil, grid resistor or cathode resistor is open. Since Bands A through F have a common grid leak resistor, the exact open element can easily be determined.</p> <p>(d) If all voltage and continuity checks are correct, replace the tube and check results.</p> |
| <p>b. ERRATIC PERFORMANCE.</p> | <p>(1) Erratic performance of the carrier oscillator in a given band position is often difficult to trace. As a remedy, the following may be tried:</p> <p>(a) Substitute a new tube. (b) Check contacts of FREQUENCY BAND SWITCH (S-105). (c) Check for a dirty or faulty CARRIER CONTROL (R-123). (d) Make visual inspection of main tuning capacitor (C-127) for dirt, bent plates, etc.</p> <p>(2) Make visual inspection of the oscillator coil for the range in question.</p> |
| <p>c. EXCESSIVE VOLTAGE NEEDED ON CARRIER CONTROL (R-123).</p> | <p>(1) Often, defects in the resonant system (oscillator coils, capacitors and grid leak resistors) can be suspected if a greater than normal amount of plate voltage is necessary in order to develop the required voltage output.</p> <p>(2) Check normal voltages between the slider (center lug) of the CARRIER CONTROL (R-123) and ground, in the following manner. (The CARRIER CONTROL should be set in the fully counterclockwise position.)</p> <p>(a) POWER switch (S-101) ON. (b) CARRIER RANGE switch (S-107) to applicable range. (c) MOD SELECTOR switch (S-103) OFF. (d) METER READS switch (S-102) at RF. (e) Main tuning dial (1-103) set at beginning of all bands. (f) Oscillator plate voltages required for "100" meter leading.</p> <p>(1) Bands A through F -- less than 50v DC. (2) Band G and H -- less than 150v DC.</p> |
| <p>6. MODULATION OSCILLATOR.</p> <p>a. INOPERATIVE ON BOTH 400 AND 1000 CYCLES.</p> <p>b. INOPERATIVE ON ONLY ONE FREQUENCY (400 OR 1000 CYCLES).</p> <p>c. ERRATIC OPERATION OR PRESENCE OF AMPLITUDE DISTORTION.</p> | <p>(1) If it is indicated that the modulation oscillator is inoperative on both frequencies (400 and 1000 cycles) the probable defective part is some element common to both frequency position of the METER READS switch (S-102).</p> <p>(2) One possible trouble is too high a degree of degeneration. This degeneration is dependent upon the resistance ratio of (R-105 and R-110). Although the DEGEN control (R-110) is a locking type potentiometer, vibration may have changed its value. If its resistance is too small, the degeneration will be too great and oscillations will be inhibited. Sometimes increasing the resistance (R-110) will assist the oscillator in breaking into oscillation. If this is the case, set this resistor at the point where oscillations just begin.</p> <p>(3) If a spare tube is available, it is sometimes most expedient to replace the old tube. (4) If replacing the tube does not solve the problem continuity and voltage checks should be made. In making these voltage checks, refer to Table 6-5 TUBE OPERATING VOLTAGES AND CURRENTS.</p> <p>(1) If the modulation oscillator is inoperative on only one frequency, the solution is relatively simple. (2) The defective element is probably one of the bridge resistors (R-101, R-102, R-103, or R-104). (3) Make the necessary resistance checks.</p> <p>(1) If the locking device on the degeneration resistor (R-110) is loosened, mechanical vibration may cause a variation of resistance and hence degeneration. This may result in erratic operation or amplitude distortion. Check this control and tighten the locknut.</p> |

TABLE 6-4. CHART OF SUGGESTED TESTS FOR LOCATING THE SPECIFIC TROUBLE - Continued

| TYPE OF TROUBLE | SUGGESTED METHOD OF TEST AND REPAIR |
|--|--|
| <p>7. STEP ATTENUATOR (E-112).</p> <p>a. NO OUTPUT ON ALL STEPS</p> <p>b. NO OUTPUT ON ONE OR MORE, BUT NOT ALL STEPS.</p> <p>c. APPROXIMATELY ??? OR LESS INSTEAD OF 10:1 ATTENUATION BETWEEN TWO SUCCESSIVE STEPS.</p> <p>d. REPLACING STEP ATTENUATOR RESISTORS</p> | <p>(1) If there is output from J-101 but no output from J-102 in all steps of E-112, the 482 ohm resistor (R-143) is probably burned out.</p> <p>(2) Disconnect one lead of R-143 and check its resistance with an ohmmeter.</p> <p>(1) One of the step attenuator series resistors (R-144 through R-148) is probably burned out.</p> <p>(2) Check the series resistor preceding the step where there is no output. Always check these resistors with one lead disconnected to avoid shunting resistance paths.</p> <p>(1) One of the step attenuator shunt resistors (R-149 through R-154) is probably burned out.</p> <p>(2) Check the impedance of J-102 at the step attenuator position in question, using a multi-meter ME-25/U series or equivalent. If the shunt resistor is burned out, an impedance of about 250 ohms instead of 53.5 ohms will be present.</p> <p>(1) Recalibrate step attenuator ratios for range in which resistor was replaced, using the (10:1) Fixed Attenuator CN-136/URM-25 and a radio receiver such as Navy Model RBA series or equivalent. Follow the procedure outlined in Section 6, par.11.</p> <p style="text-align: center;">CAUTION</p> |
| | <p style="text-align: center;">Resistance measurements at J-102 should be made with a resistance bridge such as the type ZM-4/U or equivalent to avoid burning out one of the step attenuator resistors. If the Electronics Technician uses an ordinary ohmmeter great care must be exercised to see that this ohmmeter does not place a current in excess of 20 milliamperes through the attenuator circuit while testing.</p> |
| <p>8. POWER SUPPLY PP-562A/URM-25</p> <p>a. INOPERATIVE</p> <p>b. OVERHEATING.</p> <p>c. LOSS OF REGULATION.</p> | <p>(1) Check line fuses F-101 and F-102.</p> <p>(2) Check interconnecting cables W-102 and W-103 for continuity with an ohmmeter.</p> <p>(3) Check power transformer T-201.</p> <p>(4) If no B+, check rectifier tube V-201, filter choke L-201 and series resistor R-201.</p> <p>(1) Check short circuited turns on T-201.</p> <p>(2) Check for partial breakdown of C-201, C-202 and C-203. It is sometimes best to replace one or all of these capacitors, if it is suspected that one of them is defective. A voltage or ohmmeter check will not always identify this trouble.</p> <p>(1) Check with a variac or variable voltage source. Change the line voltage from 103v to 126v AC. The + 150v DC output should not change. This does not apply to the unregulated + 240v DC supply.-</p> <p>(2) Replace regulator V-202 if the B+ does not remain steady at 150v DC.</p> |
| <p>9. HUM MODULATION</p> | <p>a. Listen for power line hum (impressed on carrier frequency).</p> <p>b. Check for unshielded leads between signal generator and receiver. All leads between these units should be shielded.</p> <p>c. Check for mechanical vibrations of T-201. Tightly secure the transformer mounting.</p> |
| <p>10. ACCESSORY UNITS.</p> <p>a. IMPEDANCE ADAPTER MX-1074/URM-25</p> <p>b. ANTENNA SIMULATOR SM-35/URM-25</p> | <p>If it is suspected that any one of these accessory units is defective, a simple continuity check will readily indicate the source of trouble.</p> <p style="text-align: center;">CAUTION</p> <p>When making a resistance check on the Impedance Adapter MX-1074/URM-25 be sure the lowest ohmmeter resistance range is used. Ohmmeters with internal batteries larger than 1.5v may burn out the resistor in the impedance adapter. Where great accuracy is desired, resistance measurements should be made with the Resistance Bridge ZM-4/U or equivalent.</p> |

TABLE 6-4. CHART OF SUGGESTED TESTS FOR LOCATING THE SPECIFIC TROUBLE - Continued

| TYPE OF TROUBLE | SUGGESTED METHOD OF TEST AND REPAIR | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|--|---------------------------|---|---------------------------|---|-----|----------|----------|---|-----|---------|----------|---|-----|---|---|---|-----|--------|---------|---|-----|--------|---------|---------|-----|-------|--------|---------|-----|--------|-----------|---|
| <p>c. (5:1) FIXED ATTENUATOR CN-132/URM-25.</p> <p>d. (10:1) FIXED ATTENUATOR CN-136/URM-25.</p> <p>e. TEST LEAD CX-1363/U.</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>11. OUTPUT CABLES.</p> | <p>Check leakage resistance with a megger (high resistance ohmmeter).</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>12. CRYSTAL CALIBRATOR (V-108)</p> <p>d. INOPERATIVE</p> | <p>If the check in Table 6-3 under CRYSTAL CALIBRATOR indicates that this unit is defective, the following tests should be made to localize the trouble.</p> <p style="text-align: center;">NOTE</p> <p>The output beat of the Crystal Calibrator is amplified by V-102B of the modulation oscillator (V-102). Make sure that this audio oscillator is functioning (Table 4-3 under MODULATION OSCILLATOR) before deciding that the V-108 circuit is defective.</p> <p>(1) Replace crystal Y-101, then tube V-108 if available. These parts are the most common source of trouble in the crystal calibrator.</p> <p>(2) If a substitute tube and crystal are not available, check V-108 in a tube checker.</p> <p>(3) Make circuit continuity and voltage tests.</p> <p>Figure 6-11 indicates the normal socket to ground voltages and resistors for V-108. The following readings from socket pins to ground indicate that either the tube (6BE6) or crystal is defective. Measurements should be made with a 20,000 ohm/VDC and 1000 ohm/VAC meter.</p> <table border="1" data-bbox="462 945 1479 1224"> <thead> <tr> <th>PIN</th> <th>CORRECT</th> <th>CRYSTAL (Y-101) DEFECTIVE</th> <th>TUBE (V-108) DEFECTIVE (NOT CONDUCTING)</th> </tr> </thead> <tbody> <tr> <td>1--</td> <td>--9.3VDC</td> <td>--0.2VDC</td> <td>0</td> </tr> <tr> <td>2--</td> <td>0.02VDC</td> <td>0.02 VDC</td> <td>0</td> </tr> <tr> <td>3--</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>4--</td> <td>6.2VAC</td> <td>6.2 VAC</td> <td>0 if filaments are open;5.9 VAC if filaments are not open</td> </tr> <tr> <td>5--</td> <td>158VDC</td> <td>7.3 VDC</td> <td>240 VDC</td> </tr> <tr> <td>6--</td> <td>99VDC</td> <td>45 VDC</td> <td>240 VDC</td> </tr> <tr> <td>7--</td> <td>0.1VDC</td> <td>0.175 VDC</td> <td>0</td> </tr> </tbody> </table> | PIN | CORRECT | CRYSTAL (Y-101) DEFECTIVE | TUBE (V-108) DEFECTIVE (NOT CONDUCTING) | 1-- | --9.3VDC | --0.2VDC | 0 | 2-- | 0.02VDC | 0.02 VDC | 0 | 3-- | 0 | 0 | 0 | 4-- | 6.2VAC | 6.2 VAC | 0 if filaments are open;5.9 VAC if filaments are not open | 5-- | 158VDC | 7.3 VDC | 240 VDC | 6-- | 99VDC | 45 VDC | 240 VDC | 7-- | 0.1VDC | 0.175 VDC | 0 |
| PIN | CORRECT | CRYSTAL (Y-101) DEFECTIVE | TUBE (V-108) DEFECTIVE (NOT CONDUCTING) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1-- | --9.3VDC | --0.2VDC | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2-- | 0.02VDC | 0.02 VDC | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3-- | 0 | 0 | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4-- | 6.2VAC | 6.2 VAC | 0 if filaments are open;5.9 VAC if filaments are not open | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5-- | 158VDC | 7.3 VDC | 240 VDC | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6-- | 99VDC | 45 VDC | 240 VDC | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7-- | 0.1VDC | 0.175 VDC | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| <p>b. FREQUENCY CALIBRATION</p> | <p>(1) Provision is made for calibrating the 1 mc frequency of the crystal calibrator, if it is suspected that its accuracy has fallen off in excess of $\pm 0.05\%$. The calibration should be accomplished in the following manner.</p> <p>(a) Remove RF Signal Generator SG-44B/URM-25 (See par. 4a).</p> <p>(b) Connect the signal generator unit to Power Supply PP-562A/URM-25.</p> <p>(c) Tune a receiver such as Navy Model RBC series to the 5 mc signal of Navy station WWV.</p> <p>(d) Turn the signal generator on and CARRIER CONTROL fully counterclockwise.</p> <p>(e) Turn XTAL-CAL switch S-106 to ON and connect a lead from the X20,000 RF OUTPUT jack J-101 to the antenna input of the RBC. Sufficient crystal output will be available at J-101 to drive the receiver.</p> <p>(f) With the receiver tuned to WWV, adjust crystal trimmer C-151 (See figure 6-9) for zero beat (fifth harmonic of 1 mc crystal) against WWV. A set of earphones or speaker can be used for monitoring this beat.</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

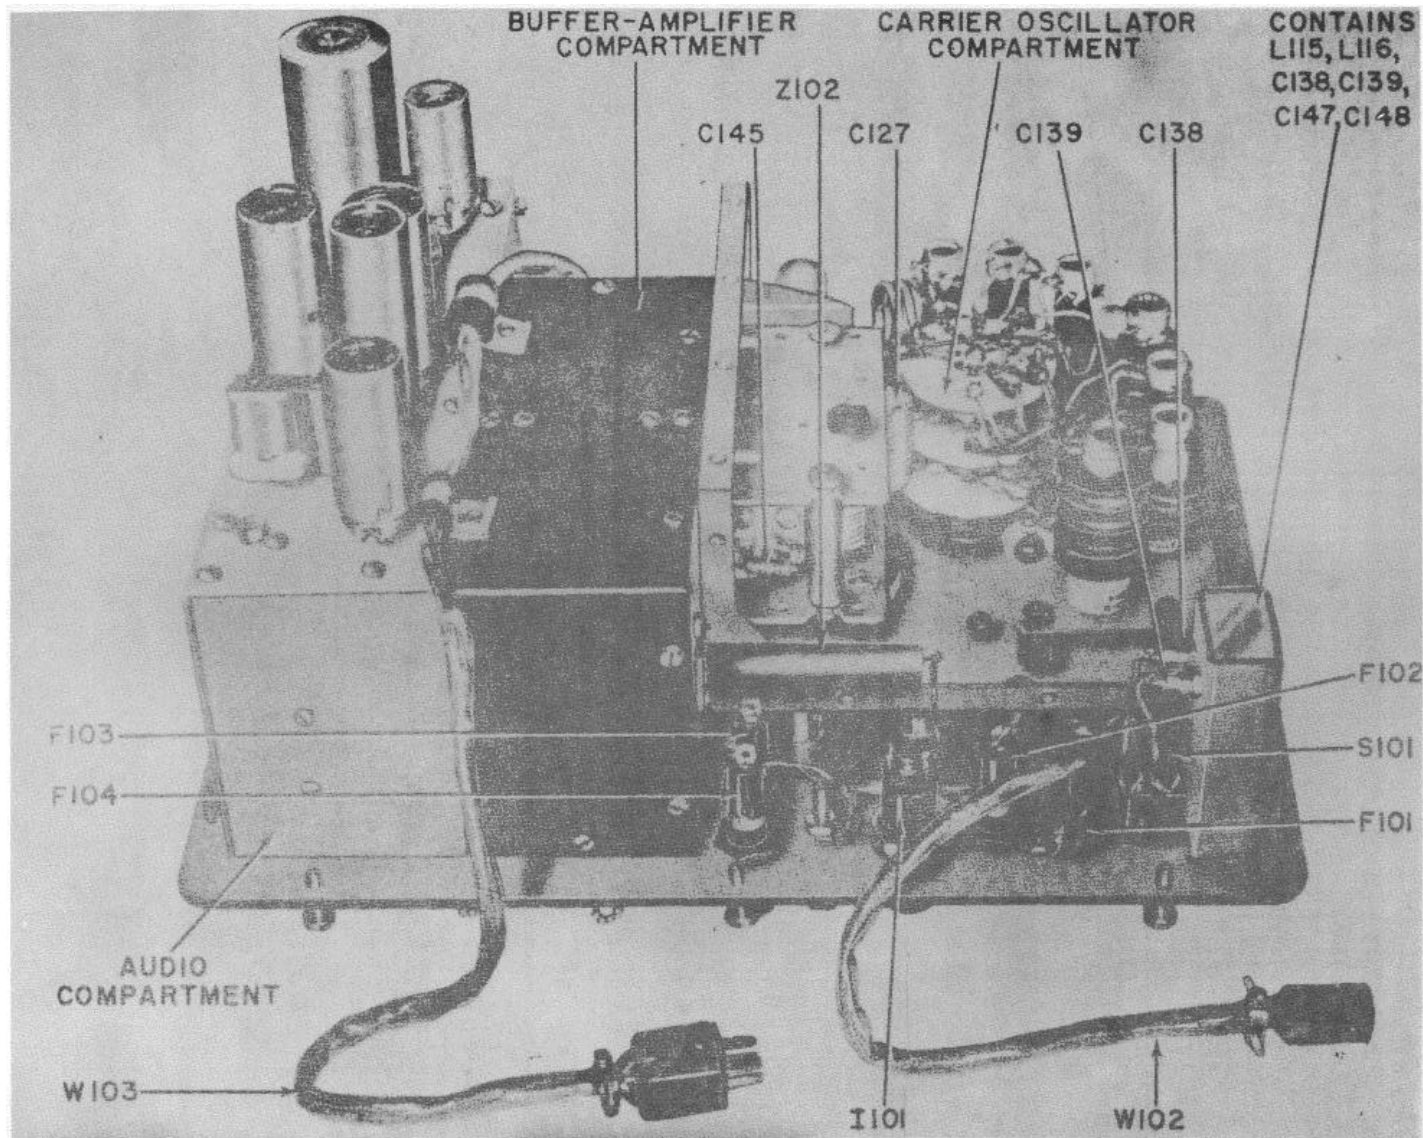


Figure 6-12. Bottom View of RF Signal Generator SG-448/URM-25

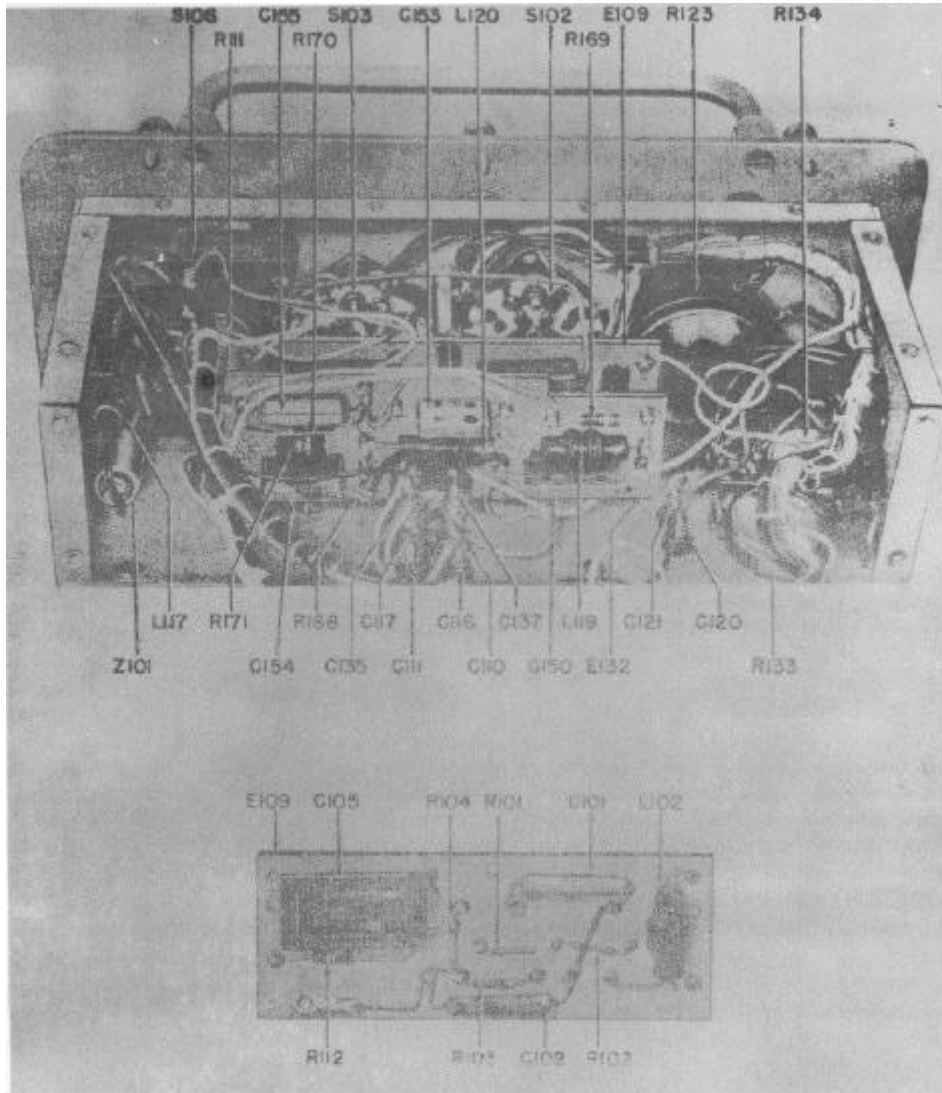


Figure 6-13. Interior View of Audio Compartment with Top View of Terminal Board E-109 shown.

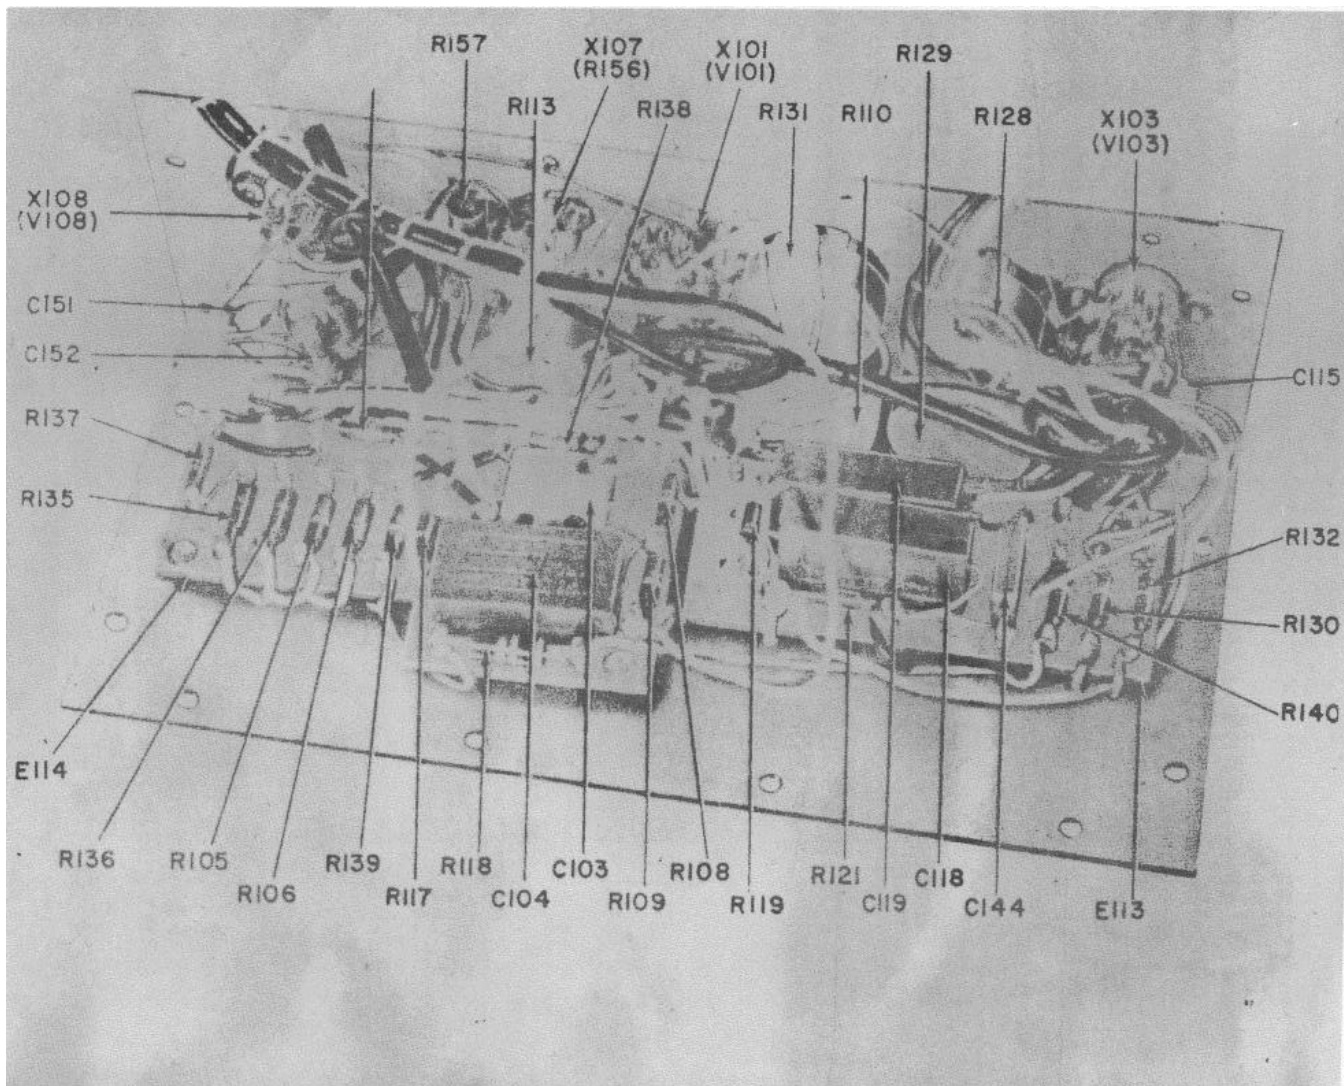


Figure 6-14. Bottom View of Audio Cover Plate.

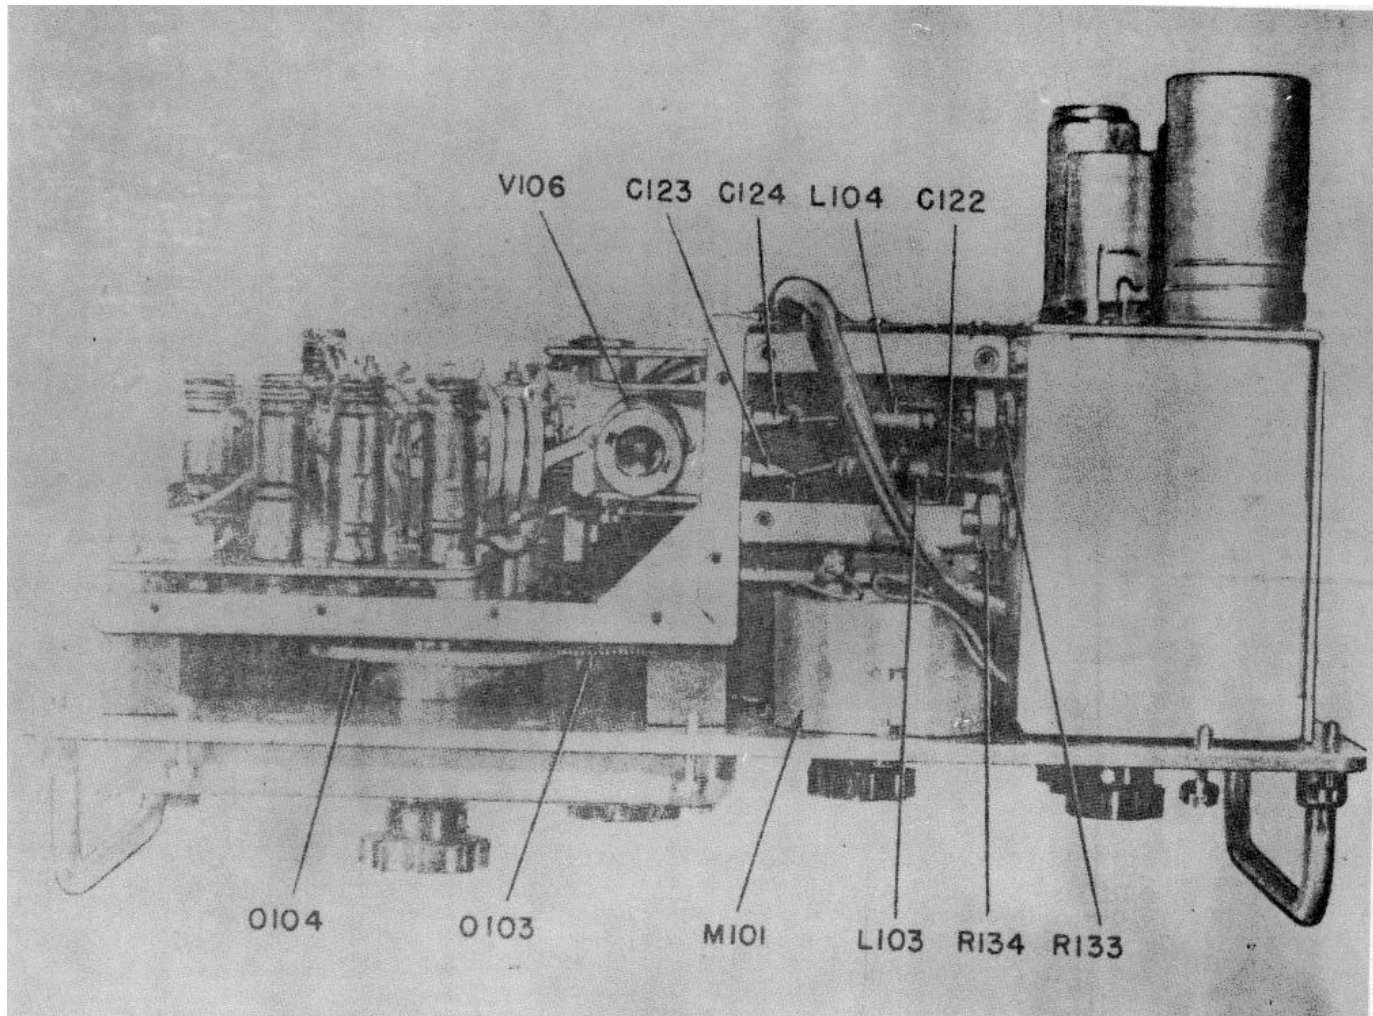


Figure 6-15. Top View of RF Signal Generator SG-448/URM-25.

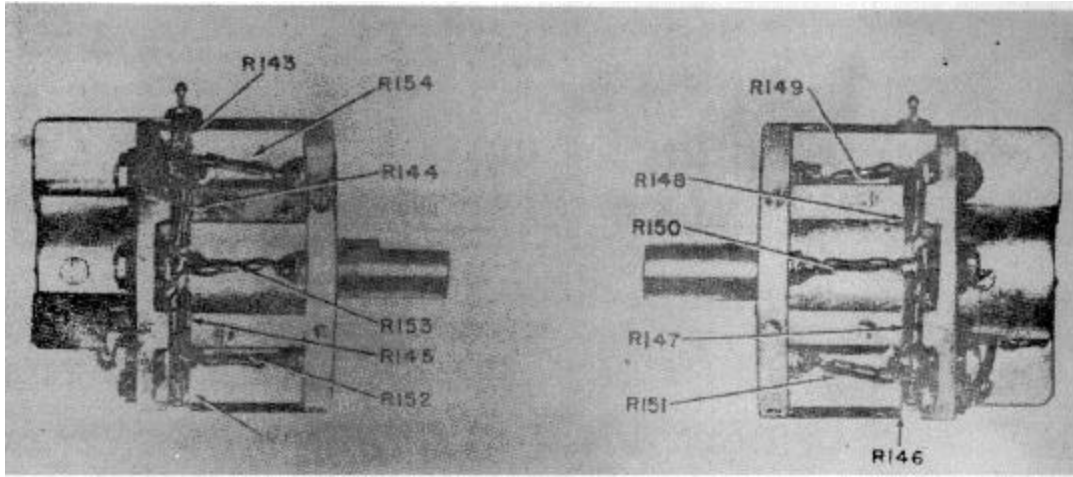


Figure 6-16. Interior Views of the Step Attenuator (E112) with All Resistors Shown.

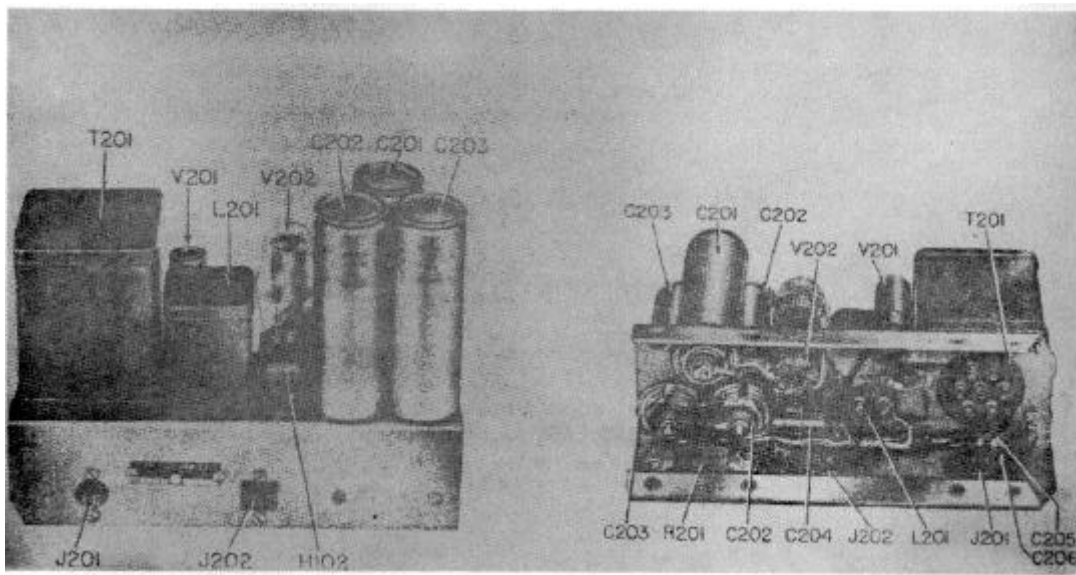


Figure 6-17. Top and Bottom Views of the Power Supply PP-562A/Urm-25.

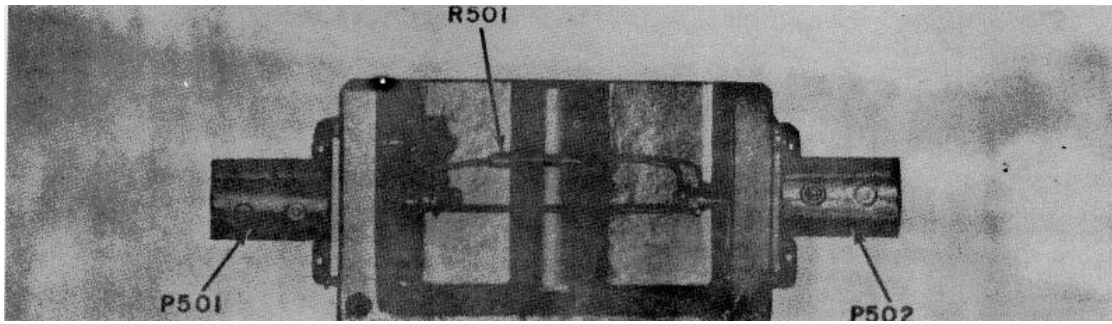


Figure 6-18. Interior View of Impedance Adapter MX-1074/URM-25.

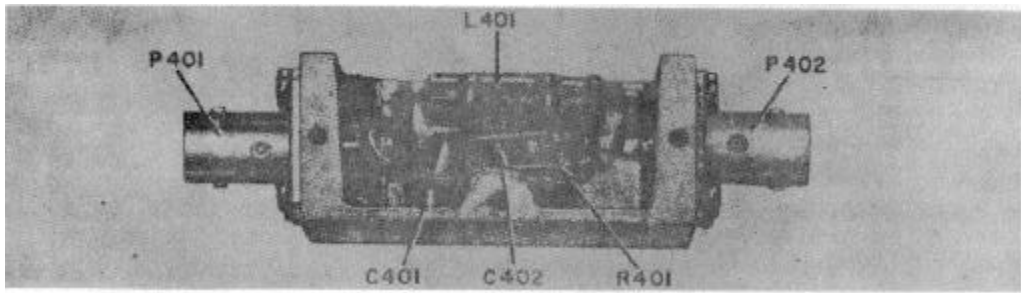


Figure 6-19. Interior View of Antenna Simulator SM-35/URM-25.

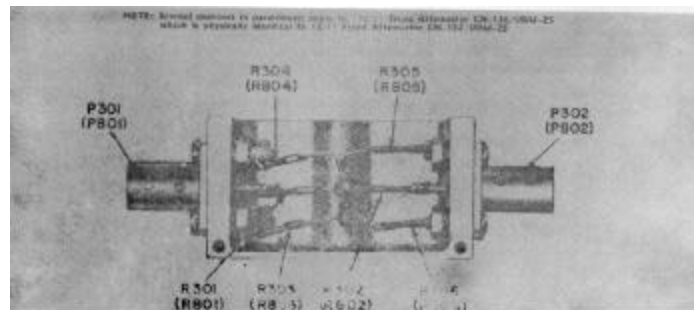


Figure 6-20. Interior View of (5:1) Fixed Attenuator CN-132/URM-25.

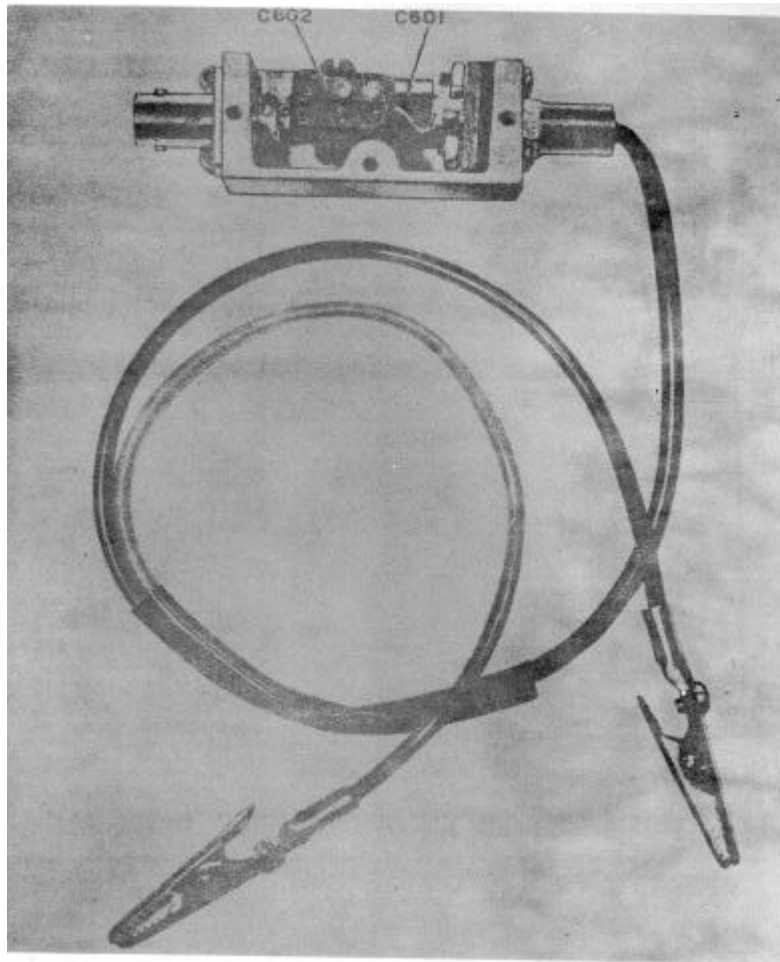


Figure 6-21. Interior View of Test Lead CX-1363/U

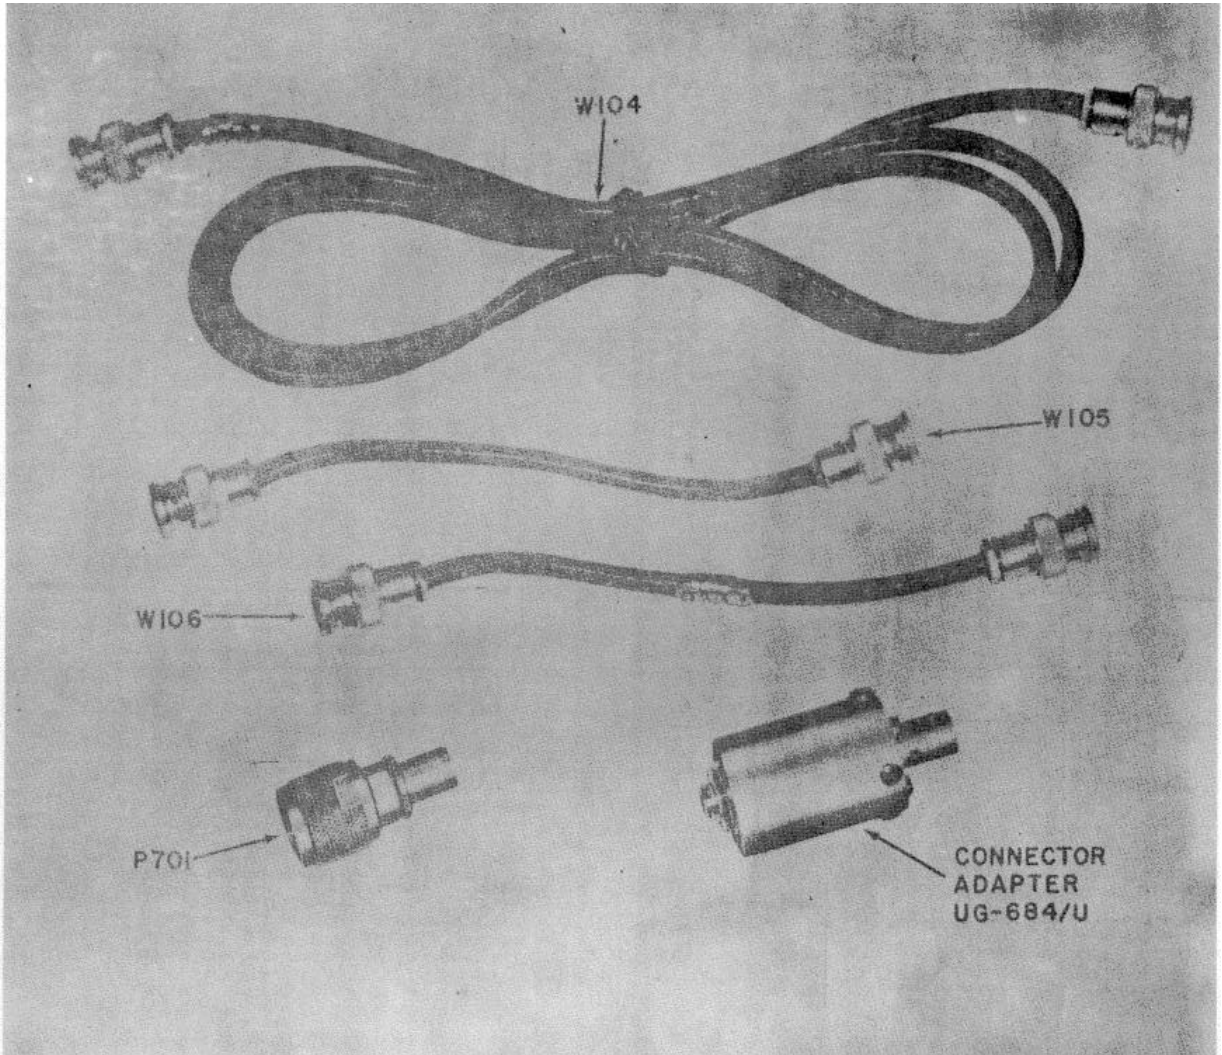


Figure 6-22. Connectors and Cable Assemblies.

**CORRECTIVE
MAINTENANCE**

SECTION 6

TABLE 6-5. TUBE OPERATING VOLTAGES AND CURRENTS

| SYMBOL NUMBER | TUBE TYPE | FUNCTION | PLATE P (E) | PLATE (MA) | SCREEN (E) | SCREEN (MA) | SUPP. (E) | CATH.(E) | GRID (E) | HEATHE R VAC |
|---------------|------------|-----------------------|-------------|------------|------------|-------------|-----------|----------|----------|--------------|
| V101A | 12AU7 | Voltmeter Bridge Tube | 36.5 | 1.3 | | | | 2 | 0 | 6.2 |
| V101B | 12AU7 | Voltmeter Bridge Tube | 36 5 | 1.3 | | | | 2 | 0 | 6.2 |
| V102A | 12AU7 | Modulation Oscillator | 105 | .3 | | | | 6.8 | 0 | 6.2 |
| V102B | 12AU7 | Modulation Oscillator | 45 | .8 | | | | 1.7 | 0 | 6.2 |
| V103 | 6AL5 | Modulation Diode | 0'to-1.1 | 0 to.001 | | | | 0 to 1.2 | | 6.2 |
| V104 | 6J6 | Buffer Amplifier | 215 | 1.0 | | | | 3.8 | 0 | 6.2 |
| V105 | 9006 | R.F. Diode | 0 | | | | | 2.3 | | 6.2 |
| V106 | 6J6 | Carrier Oscillator | 13 | app. 1 | | | | 0 | -.4 | 6.2 |
| V108 | 6BE6 | Crystal Calibrator | 158 | .9 | 99 | 4.3 | 0 | 0 | -9.3 | 6.2 |
| V201 | 6X4 | Rectifier | 230 VAC | | | | | 250 | -.3 | 6.2 |
| V202 | OD3/VR-150 | B+ Regulator | 150 | | | | | 0 | | 6.2 |

NOTE: All measurements made with a 20, 000 ohm/volt DC and 1000 ohm/volt AC meter with the Signal Generator set in the following operation condition:

1. CARRIER FREQUENCY - 100 kc.
2. METER READS 100 in RF position of S-102.
3. S-102 set to "BAL" 2
4. S-103 set to "1000 Cycles.
5. Bias control R- 113 set for 3.8v bias.
6. Power supply voltages should be checked when W-103 is connected to Signal Generator.
7. Oscillator grid.
8. Control grid.

TABLE 6-6. RATED TUBE CHARACTERISTICS

| TUBE-TYPE | FILA MENT VOLT AGE (V) | FILA MENT CURR ENT (A) | PLATE VOLTAGE (V) | SCREEN VOLTAGE (V) | PLATE CURRENT (MA) | SCREEN(MA) | A-C PLATE RESISTAN CE (OHMS) | VOLTAGE AMPLIFICATI ON FACTOR m | TRANSCON DUCTANCE (MICROMHOS) | | EMISSION | |
|----------------|-------------------------|------------------------|-------------------|--------------------|--------------------|----------------|------------------------------|---------------------------------|---------------------------------------|--------------------------|----------|-------------|
| | | | | | | | | | NORMAL | MINI- MUM | IS (MA) | TEST VOLT S |
| 12AU7- | ¹ 6.3 (12.6) | ¹ 3(.15) | 250 | 8.5 | | 14.5 | 7700 | 18.5 | 3100 | 1750 | 70 | 30 |
| 6AL5 | 6.3 | .3 | ² 150 | | | ³ 9 | ⁴ 300 | | | | 40 | 10 |
| 6J4 | 6.3 | .4 | 150 | 2 | | 20 | 5000 | 55 | 12000 | 9000 | 70 | 10 |
| 9006 | 6.3 | .15 | ⁵ 270 | | | ⁶ 5 | ⁴ 100 | | | | 13 | 20 |
| 6J6 | 6.3 | .45 | 15 | 10 | | 30 | 7100 | 38 | 5300 | 3450 | 40 | 10 |
| 6BE6 | 6.3 | .3 | 330 | | 110 | 4.1 | | | ⁸ 500 ⁹ 8000 | 280 ⁹ 5500 | 50 | 15 |
| 6X4 | 6.3 | .6 | ⁷ 650 | | | 70 | | | | | 140 | 50 |
| OD3/ VR-150 | | | 150 | | | 5 TO 40- | | | | | | |

NOTES:

1. 6.3v at .3A for parallel filaments; 12.6v at .15A for series 61.
2. A.C plate voltage per plate (RMS.)
3. D.C. output current per plate.
4. Minimum total effective late supply impedance.
5. A.C. plate voltage for typical rectifier operation.
6. D.C. output current.
7. A.C. plate to plate supply voltage (RMS.) for capacitor input.
8. Conversion transconductance.
9. Oscillator transconductance.

Table 6-7. WINDING DATA---Continued

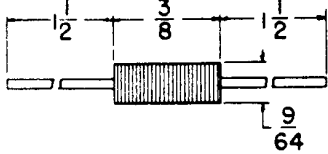
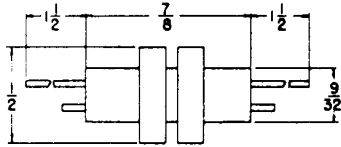
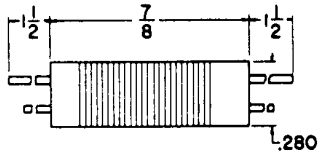

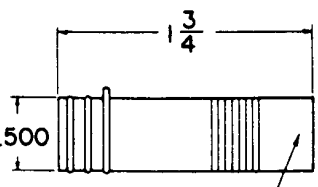
| DESIG- NATION SYMBOL | FED. MFG. & ENG. PART NO. | DIAGRAM | WINDING | WIRE SIZE | TURNS | DC RESISTANCE IN OHMS | IMPEDANCE RATIO | HIPOT A-C VOLTS | REMARKS |
|-------------------------------------|------------------------------------|---|---|--|----------------------|-----------------------------|--------------------|--------------------|--|
| E-127 | CHO-3B |  | Single | #36 Enameled copper wire | 38 Close wound | | | | Inductance: 2.7 microhenries \pm 10% at 9.7 megacycles. Current: 35 milliamperes. 1 coat HARVEL Varnish #612-C and bake. Coil form 120 ohm 1/2 watt resistor ALLEN BRADLEY Type EB-1211. |
| L-102, L-103, L-117, L-119 | CHO-1B |  | Universal wound 2 section | #38 Single nylon enameled copper wire | | 25 \pm 20% | | | Inductance: 2.5 millihenries \pm 5% at 1000 cycles. Capacity: 1.5 μ f \pm 50%. Current rating: 30 ma. 1 coat HARVEL Varnish #612-C and bake. Coil form STACKPOLE CARBON CO. #A-9456. |
| L-104 | CHO-4B |  | Single | #22 Enameled copper wire | 24 Close wound | | | | Inductance: 1.52 microhenries \pm 5% at 10 megacycles. Capacity: .65 μ f. Current: 1.5 amps max. 1 coat HARVEL Varnish #612-C and bake. Coil form STACKPOLE CARBON CO. #DR-3. |
| L-105 | 295-62A |  | Soft copper strip | 1/8 wide 1/16 thick | Approx. 3 | | | | |
| L-106 | 295-67C |  | Single layer space wound 22 turns per inch tap at 4 turns from RH end | #28 Double nylon covered copper wire | 8 | | | | Inductance: ground to grid, 1.32 mic h at 20 mc ground to tap, .412 mic h at 20 mc. Capacity: 2.1 μ f \pm 20%. 1 coat HARVEL Varnish #612-C and bake. |

TABLE 6-7. WINDING DATA

| DESIG-NATION SYMBOL | FED. MFG. & ENG. PART NO. | DIAGRAM | WINDING | WIRE SIZE | TURNS | DC RESISTANCE IN OHMS | IMPEDANCE RATIO | HIPOT A-C VOLTS | REMARKS |
|---------------------|---------------------------|---------|------------------------------|---|---|-----------------------|-----------------|-----------------|--|
| L-107 | 295-66C | | Single | #28 Double nylon covered copper wire | 28 Close wound tap at 12 turns from RH end | | | | Inductance: ground to grid, 12.3 mic h at 5 mc. Ground to tap, 2.52 mic h at 5 mc. Capacity: 2.8 μmf ± 20%. 1 coat HARVEL Varnish #612-C and bake. |
| L-108 | 295-44B | | Universal wound 1 section | #38 Quadruple nylon covered copper wire | | | | | Inductance: ground to grid, 120 mic h at 2 mc. Ground to tap, 25.7 mic h at 2 mc. Capacity: 3.2 to 3.4 μmf. 1 coat HARVEL Varnish #612-C and bake. |
| L-109 | 295-43B | | Universal wound 2 section | #38 Quadruple nylon covered copper wire | | | | | Inductance: grid to ground, 1.02 mil h at .5 mc. Ground to tap, .253 mil h at .5 mc. Capacity: 2.8 μmf ± 20%. 1 coat HARVEL Varnish #612-C and bake. |
| L-110 | 295-42B | | Universal wound 2 section | #38 Double nylon covered copper wire | | | | | Inductance: ground to grid, 9.3 mil h at 200 kc. Ground to tap, 1.57 mil h at 200 kc. Capacity: 5 μmf ± 20%. 1 coat HARVEL Varnish #612-C and bake. |
| L-111 | 295-41B | | Universal wound 3 section | #38 Single nylon enameled copper wire | | | | | Inductance: ground to grid, 72.5 mil h at 1 kc. Ground to tap, 13.9 mil h at 1 kc. Capacity: 4.9 μmf ± 20%. 1 coat HARVEL Varnish #612-C and bake. |

TABLE 6-7. WINDING DATA---Continued

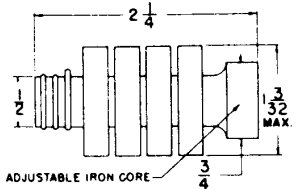
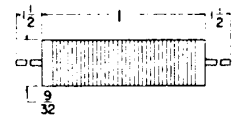
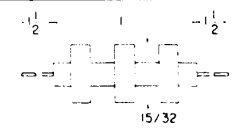
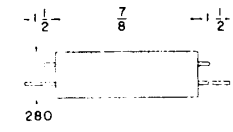
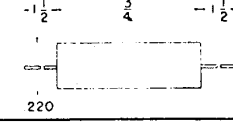

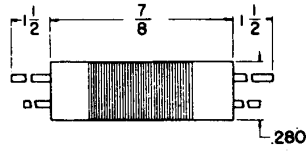
| DESIG- NATION SYMBOL | FED. MFG. & ENG. PART NO. | DIAGRAM | WINDING | WIRE SIZE | TURNS | DC RESISTANCE IN OHMS | IMPEDANCE RATIO | HIPOT A-C VOLTS | REMARKS |
|----------------------------|------------------------------------|---|---------------------------------|--|---|-----------------------------|--------------------|--------------------|--|
| L-112 | 295-69B |  | Universal wound 4 section | #38 Single nylon enameled copper wire | | | | | Inductance: Ground to grid, 570 mil h at 1 kc. Ground to tap, 92 mil h at 1 kc. Capacity: 4.2 μ f \pm 20%. 1 coat HARVEL Varnish #612-C and bake. |
| L-115, L-116 | CHO-7 |  | Single | | | | | | Inductance: 6.5 microhenries \pm 10%. Current: 1000 ma. OHMITE Type Z-50. |
| L-118, L-120 | CHO-15 |  | Universal wound 3 section | | | | | | Inductance: 0.5 mil. h \pm 20% at 1 mc. Current: 50 ma Q:25 (min.) DC Resistance: 15 ohms \pm 30% Coat with fungus proof varnish |
| L-121 | CHO-18 |  | Single | #22 Enameled copper wire | 21 Close wound | | | | Inductance: 1.30 microhenries \pm 5% at 10 mc. Capacity: 0.65 μ f. Coat with fungus proof varnish. |
| L-122 | CHO-17 |  | Single | #26 Enameled copper wire | 7; 6 Close wound, 1 space wound | | | | Inductance: 0.35 microhenries \pm 5% at 35 mc. Capacity: 0.5 μ f. Coat with fungus proof varnish. |
| L-201 | 295-7A |  | | | | 400 \pm 10% | | | Inductance: 11 henries min at 75 ma DC. |
| L-401 | 295-236 |  | Single | #32 Double silk covered copper wire | 38 | | | | Inductance: 20 μ f \pm 10% at 5 mc. Capacity: 1.4 μ f. Current: 100 ma max. 1 coat HARVEL Varnish #612-C and bake. |

TABLE 6-7. WINDING DATA----Continued

| DESIG- NATION SYMBOL | FED. MFG. & ENG. PART NO. | DIAGRAM | WINDING | WIRE SIZE | TURNS | DC RESISTANCE IN OHMS | IMPEDANCE RATIO | HIPOT A-C VOLTS | REMARKS |
|----------------------------|------------------------------------|---|---------|--------------|-------|-----------------------------|--------------------|--------------------|---|
| T-201 | 295-6A | <p>The diagram shows a transformer with a primary winding on the left connected between terminals A and B, labeled '115 V AC' and '50-1600'. The secondary winding is on the right with terminals P1, CT, P2, H2, and H1. It is labeled '225-0-225V AC', 'FULL LOAD', and '6.3 V-4A'.</p> | | | | | | | <p>225-0-225V AC. Full load 6.3v at 4A. Coil to be vacuum impregnated. To withstand 1500v RMS — 60 cps from HV windings to ground and from HV windings to all other windings. To withstand 500v RMS — 60 cps from pri windings to ground and from fil windings to ground. Laminations grounded.</p> |

TABLE 6-8. CROSS REFERENCE BETWEEN SYMBOL NUMBER AND FIGURE LOCATION

| SYMBOL NR. | FIGURE NR. | SYMBOL NR. | FIGURE NR. |
|-----------------------|-----------------------|-----------------------|--|
| C-101 | 6-13 | C-203 | 6-17 |
| C-102 | 6-13 | C-204, C-205, C-206 | 6-17 |
| C-103 | 6-14 | C-401 | 6-19 |
| C-104 | 6-14 | C-402 | 6-19 |
| C-105 | 6-13 | C-601 | 6-21 |
| C-106 | Not used | C-602 | 6-21 |
| C-107 | Not used | E-101 | 4-1 |
| C-108 | Not used | E-102 | 4-1 |
| C-109 | Not used | E-103 | 4-1 |
| C-110 | 6-5 | E-104 | 4-1 |
| C-111 | 6-5 | E-105 | 4-1 |
| C-112 | 6-6 | E-106 | 4-1 |
| C-113 | 6-6 | E-110 | 6-5 |
| C-114 | Not shown | E-111 | 6-5 |
| C-115 | 6-9 | E-112 | 6-5 |
| C-116 | 6-5 | E-126 | 4-1, 6-10 (Contained in 1-101) |
| C-117 | 6-5 | | |
| C-118 | 6-14 | E-128, E-129, E-130 | 4-1 |
| C-119 | 6-14 | E-132 | 6-13 |
| C-120 | 6-13 | F-101 thru F-104 | 4-1 (Contained in E-115 thru E-118) |
| C-121 | 6-13 | | |
| C-122 | 6-15 | H-101 | 4-1 |
| C-123 | 6-15 | H-103, H-104 | 4-1 |
| C-124 | 6-15 | H-105 | 6-6 |
| C-125 | 6-7 | H-106 | 6-12 |
| C-126 | 6-7 | I-101 | 4-1 |
| C-127 | 6-7 | I-102 | 4-1 |
| C-128 thru C-134 | 6-7 | I-103 | 4-1 |
| C-135 | 6-5 | I-104 | 4-1 |
| C-136 | 6-6 | I-105 | 4-1 |
| C-137 | 6-5 | I-106 | 4-1 |
| C-138 | 6-12 | J-102 | 4-1, 6-5 |
| C-139 | 6-12 | J-102 | 4-1, 6-5 |
| C-140 | 6-6 | J-103 | 4-1 |
| C-141 | 6-6 | J-104 | 4-1 |
| C-142 | 6-6 | J-201 | 6-17 |
| C-143 | 6-7 | J-202 | 6-17 |
| C-144 | 6-14 | J-301, J-302 | 6-21 |
| C-145 | 6-7 | J-401, J-402 | 6-19 |
| C-147, C-148 | 6-12 | J-501, J-502 | 6-18 |
| C-149 | 6-6 | J-601 | 6-21 |
| C-150 | 6-13 | L-101 | Not used |
| C-151 | 6-12 | L-102 | 6-13 |
| C-152 thru C-15 | 6-13 | L-103 | 6-15 |
| C-201 | 6-17 | L-104 | 6-15 |
| C-202 | 6-17 | L-105 thru L-112 | 6-7 |

**CORRECTIVE
MAINTENANCE**

SECTION 6

TABLE 6-8. CROSS REFERENCE BETWEEN SYMBOL NUMBER AND FIGURE LOCATION -Continued

| SYMBOL NR. | FIGURE NR. | SYMBOL NR. | FIGURE NR. |
|----------------------------|------------------------------------|-----------------------|-----------------------|
| L-117 | 6-13 | R-133 | 6-9 |
| L-118 | 6-6 | R-134 | 6-9 |
| L-119, L-120 | 6-13 | R-135 | 6-14 |
| L-121 | 6-9 | R-136 | 6-14 |
| L-201 | 6-17 | R-137 | 6-14 |
| L-401 | 6-9 | R-138 | 6-14 |
| M-101 | 4-1 | R-139 | 6-14 |
| N-104 | 4-1 | R-140 | 6-14 |
| O-103, O-104 | 6-15 | R-141 | 6-6 |
| O-107, O-108, O-109 | 4-1 | R-142 | 6-6 |
| P-101 | 6-12 | R-143 thru R-154 | 6-16 |
| P-102 | 6-12 | R-155A | 6-6 |
| P-103 thru P-108, P-701 | 6-22 (part of cable assemblies) | R-155B | 6-6 |
| R-101 | 6-13 | R-156 | 6-9 |
| R-102 | 6-13 | R-157 | 6-14 |
| R-103 | 6-13 | R-158 | 6-7 |
| R-104 | 6-13 | R-160, R-162, R-163 | 6-7 |
| R-105 | 6-14 | R-164 | Not shown |
| R-106 | 6-14 | R-167 thru R-171 | 6-1 |
| R-107 | 6-14 | R-201 | 6-17 |
| R-108 | 6-14 | R-301 thru R-306 | 6-20 |
| R-109 | 6-14 | R-401 | 6-19 |
| R-110 | 6-9 | R-501 | 6-18 |
| R-111 | 6-13 | S-101 | 4-1 |
| R-112 | 6-14 | S-102 | 6-13 |
| R-113 | 6-9 | S-103 | 6-13 |
| R-114 | 6-6 | S-104 | 6-9 |
| R-115 | 6-6 | S-105 | 6-7 |
| R-116 | 6-6 | T-201 | 6-17 |
| R-117 | Not used | V-101 | 6-9 |
| R-118 | 6-14 | V-102 | 6-9 |
| R-119 | 6-14 | V-103 | 6-9 |
| R-120 | Not shown | V-104, V-105 | 6-9 |
| R-121 | 6-14 | V-106 | 6-7 |
| R-122 | Not used | V-201 | 6-17 |
| R-123 | 6-13 | V-202 | 6-17 |
| R-124 | 6-7 | W-101 | 6-4 |
| R-125 | 6-7 | W-102 | 6-4 |
| R-126 | 6-6 | W-103 | 6-4 |
| R-127 | 6-6 | W-104 | 6-22 |
| R-128 | 6-9 | W-105 | 6-22 |
| R-129 | 6-9 | W-106 | 6-22 |
| R-130 | 6-14 | W-601 | 6-21 |
| R-131 | 6-9 | Z-101 | 6-13 |
| R-132 | 6-14 | Z-102 | 6-5, 6-9 |

**SECTION 7
PARTS LISTS****CAUTION**

Navy stock numbers in this parts list have been set in two lines because of the length of the stock numbers and the restricted column space. Be certain that the complete stock number is used when ordering parts.

Table 7-1 Weights and Dimensions of Spare Parts Boxes

Table 7-2 Shipping Weights and Dimensions of Spare
Parts Boxes

Table 7-3 List of Major Units

•Table 7-4 Combined Parts and Spare Parts List

Table 7-5 Cross Reference Parts List

Table 7-6 Applicable Color Codes and Miscellaneous
Data

Table 7-7 List of Manufacturers.

***Items marked with an asterisk in the Symbol No. Column of Table 7-4 can not be requisitioned from Supply. In the event of failure they should be repaired or new items fabricated.**

TABLE 7-1. WEIGHTS AND DIMENSIONS OF SPARE PARTS BOXES

| ACTIVITY | EQUIPMENT SPARES | | | | | STOCK SPARES | | | | |
|--------------|-----------------------------|-------|-------|----------------|--------------|-----------------------------|-------|-------|----------------|--------------|
| | Overall Dimensions (Inches) | | | VOLUME (CU IN) | weight (LBS) | Overall Dimensions (Inches) | | | VOLUME (CU IN) | weight (LBS) |
| | Height | Width | Depth | | | Height | Width | Depth | | |
| BUSHIPS | 6 | 12 | 9 | 648 | 8 | • | • | • | • | • |
| MARINE CORPS | 4 | 6 | 8 | 192 | 5 | • | • | • | • | • |

*Shipped in bulk quantities

TABLE 7-2. SHIPPING WEIGHTS AND DIMENSIONS OF SPARE PARTS BOXES

| ACTIVITY | EQUIPMENT SPARES | | | | | STOCK SPARES | | | | |
|--------------|-----------------------------|-------|-------|----------------|--------------|-----------------------------|-------|-------|----------------|--------------|
| | Overall Dimensions (Inches) | | | VOLUME (CU IN) | weight (LBS) | Overall Dimensions (Inches) | | | VOLUME (CU IN) | weight (LBS) |
| | Height | Width | Depth | | | Height | Width | Depth | | |
| BUSHIPS | 9 | 15 | 12 | 1620 | 13 | • | • | • | • | • |
| MARINE CORPS | 6 | 8 | 10 | 480 | 9 | • | • | • | • | • |

*Weight and dimensions determined as shipped

TABLE 7-3. LIST OF MAJOR UNITS

| SYMBOL GROUP | QUANTITY | NAME OF MAJOR UNIT | NAVY TYPE OR A-N DESIGNATION |
|----------------|----------|-------------------------|------------------------------|
| 101 to 199 | 1 | RF Signal Generator | SG-44B/URM-25 |
| 201 to 299 | 1 | Power Supply | PP-562A/URM-25 |
| 301 to 399 | 1 | (5:1) Fixed attenuator | CN-132/URA.-25 |
| 401 to 499 | 1 | Antenna Simulator | SM-35/URM-25 |
| 501 to 599 | 1 | Impedance Adapter | MX- 1074/URM-25 |
| 601 to 699 | 1 | Test Lead | CX-1363/U |
| 801 to 899 | 1 | (10:1) Fixed Attenuator | CN- 136/URII1-25 |
| 901 to 999 | 1 | Connector, Adapter | UG-64/U |
| P-701 | 1 | Coaxial Adapter | UG-201/U |
| W-101 | 1 | AC Line Cable Assembly | |
| W-104 | 1 | RF Cable Assembly | CG-409A/U(4'0") |
| W-105, W-106 2 | 2 | RF Cable Assembly | CG-409A/U(7") |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST-Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|-------------------|--|--|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| CAPACITORS | | | | | | | | |
| C-101 | CAPACITOR, fixed: mica dielectric; 1000 mmf - 2'7c; 500vdcw, characteristic ltr I); 1- 1/16 lg x 15/32" wd x 7/32" thk; molded low loss phenolic case; 2 axial wire leads; spec JAN-C-5. | V-102 bridge capacitor | CM25D102G | N16-C-31080-2522 | (13) Pt. # CM2SD102G | Pt. # CPM-603 | C101, C02 | 2 |
| C 102 | Same as C-101. V- 102 | bridge capacitor | | | | | | |
| C-103 | CAPACITOR, fixed: mica dielectric; 2000 mmf \pm 5%; 500vdcw; characteristic ltr B; 53/64" lg x 53/64" wd x 9/32" thk; molded phenolic case; 2 axial wire leads; spec JAN-C-5. | V-102 coupling capacitor | CM30B202J | N6-C-31797-5484 | (13) Pt. # CM30B202J | Pt. # CPM165 | C-103 | 1 |
| C.104 | CAPACITOR, fixed: paper dielectric; 100, -000 mmf \pm 20%7; 400vdcw; 1-15/32" ig x 49/64" wd x 13/32" thk; 2 axial wire leads; spec JAN-C-91. | V-102 couplings capacitor | CN43E104M | N16-C-45805-6260 | (26) Pt. # CN43E104M | Pt. # CPP-5 | C104, C105 C118, C119, C122 | 5 |
| C-105 | Same as C-104. | V-102 output coupling capacitor | | | | | | |
| C-106 | Not used. | | | | | | | |
| C-107 | Not used. | | | | | | | |
| C-108 | Not used. | | | | | | | |

7 Section

| 7 Section | | COMBINED PARTS AND REPAIR PARTS LIST | | | | | | |
|-----------|---|---|------------|------------------|-----------------------|---------------|---|----|
| C-109 | Not used. | | | | | | | |
| C-110 | CAPACITOR, fixed: ceramic dielectric; 1000 mmf + 20%; var temp coef; 500vdcw; 5/8" lg x 5/16" diam; 2 axial wire leads terminated in a 1/8" loop; one #12-28 x 11/32" lg axial screw for mtg; uninsulated. | V-104 plate RF bypass capacitor (feedthru) | | N16-C 18657-8801 | (16) Style 357 (HI-K) | Pt. # CPC-21 | C110, C111, C117, C120, C121, C123, C124, C135, C138, C139, C-146 | 11 |
| C-111 | Same as C-110. | V-104 heater RF bypass capacitor (feedthru) | | | | | | |
| C-112 | CAPACITOR, fixed: mica dielectric; 510 mmf - 5%; 500vdc; characteristic ltr D; 51/64" lg x 15/32" wd x 7/32" thk; molded phenolic case; 2 axial wire leads; spec JAN-C-5. | V-104 output coupling capacitor | CM20D511J | N16-C 30188-5006 | (13) Pt. # CM20D511J | Pt. # CPM-129 | C-112, C602 | 2 |
| C-113 | CAPACITOR, fixed: mica dielectric; 6, 200 mmf ± 5%; 500vdcw; characteristic ltr B; 53/64" lg x 53/64" wd x 11/32" thk, molded phenolic case; 2 axial wire leads; spec JAN-C-5. | V-104 output coupling capacitor | CM135B622J | N16-C-32905-4328 | (13) Pt. # CM35B622J | Pt. # CPM-177 | C113 | 1 |
| C-114 | CAPACITOR, fixed: ceramic dielectric; 2 mmf .25 mmf; neg temp coef zero (tol + 120-182 mmf/ mf/C); 500vdcw; .562" lg x .250" diam; 2 axial wire leads, insulated; spec JAN-C-20A. | V-106 output coupling capacitor | CC21CK020C | N16-C-15432-5867 | (16) Pt. # CC21CK020C | Pt. # CPC-184 | C114 | 1 |
| C-115 | CAPACITOR, fixed: electrolytic; single section; 25 mf; 150vdcw; working, temp range -40°C to 85°C; 2-1/4" lg x 1-3/8" diam; hermetically sealed metal can two solder lug term on bottom; both term insulated from can; one 7/8"-16 x 1/2' lg mtg bshg; spec JAN-C-62. | V-104 cathode bypass capacitor | CE41C250J | N16-C-19788-8925 | (1) Pt.# CE41C250J | Pt. # CPE-6 | C115 | 1 |
| C-116 | CAPACITOR, Fixed: ceramic dielectric; 56 mmf + 10%; neg temp coef 470 mmf/mf/°C; 1000vdcw ; 5/8" lg x 5/16" diam; 2 axial wire leads each terminated in a 1/8" lg loop; one #12-28 x 11/32" lg axial screw for mtg; uninsulated. | V-104 RF bypass capacitor (feedthru) | | N16-C-16672-4681 | (16) Type 357 | Pt. # CPC-15 | C116 C137 | 2 |
| C-117 | Same as C-110. | V-104 cathode bypass capacitor (feedthru) | | | | | | |
| C-118 | Same as C-104. | V-103 input coupling capacitor ' | | | | | | |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST-Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|-----------------------------|---|---|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| CAPACITORS—CONTINUED | | | | | | | | |
| C-119 | Same as C-104. | V-103 cathode bypass capacitor | | | | | | |
| C-120 | Same as C-110. | V-106 heater bypass capacitor (feedthru) | | | | | | |
| C-121 | Same as C-110. | V-106 plate circuit RF bypass capacitor (feedthru) | | | | | | |
| C-122 | Same as C-104. | V- 106 plate circuit RF bypass capacitor | | | | | | |
| C-123 | Same as C-110. | V-106 plate circuit RF bypass capacitor | | | | | | |
| C-124 | Same as C-110. | V-106 heater bypass capacitor (feedthru) | | | | | | |
| C-125 | CAPACITOR, fixed: ceramic dielectric; 1000 mmf \pm 20%; special temp coef; 500vdcw; .520" lg x .250" diam; one #3-48 x 11/32" lg axial screw terminal; one axial wire termi- nal .38" lg x .067" diam; uninsulated. | V-106 plate circuit bypass capacitor | 18659- | N16-C- Style 319 7701 | (16) CPC-82 (HI-K) | Pt. # C143 | C125, C136, | 3 |
| C-126 | CAPACITOR, fixed: ceramic dielectric; 51 mmf + 5%; neg temp coef 300 (\pm 500) mmf/mf/C; 500 vdcw; .812' lg x .250" diam; 2 axial wire leads; spec JAN-C-20A. | V-106 grid blocking capacitor | CC26SL510J | N16-C- 16596- 2514 | (16) Pt. # CC26SL510J | Pt. # CPC-164 | C126 1 | 1 |
| C-127 | CAPACITOR, variable: air dielectric; plate meshing type; single section; 12.7 mmf to 479.4 mmf; SLF; 29/32" lg x 2-29/32" h x 3-9/16" w; round metal shaft 1/4" diam x 3/8" lg; 27 silver plated plates, 180' clock. | Main tuning capacitor | | N16-C- 61910- 9901 | (25) #886716 (special) | Dwg # 295-47 | C127 | 1 |

7 Section

| | | | | | | | |
|-------|---|--|------------------|--------------------|-----------------|---|---|
| C-128 | wise rotation; two #10-32 front mtg holes on 1" mtg/, c and two #10-32 rear mtg holes on 1" mtg/c. CAPACITOR, variable: ceramic dielectric; compression type. single section; 2.5 mmf to 13 mmf; 500vdcw; .843" lg x .640" wd x 312" h less term; 2 solder lug term; two 120" diam holes on .437" mtg/c for mtg; screwdriver slot adj; ceramic base. t | Carrier Oscillator band G trimmer | N16-C-63960-2508 | (10) Type 822BZ | Pt. # CPT-3 | C128, C129 C130 C131 C132, C133 C134 | 7 |
| C-129 | Same as C-128. | Carrier Oscillator band F trimmer | | | | | |
| C-130 | Same as C-128. | Carrier Oscillator band E trimmer | | | | | |
| C-131 | Same as C-128. | Carrier Oscillator band D trimmer | | | | | |
| C-132 | Same as C-128. | Carrier Oscillator band C trimmer | | | | | |
| C-133 | Same as C-128. | Carrier Oscillator band B trimmer | | | | | |
| C-134 | Same as C-128. | Carrier Oscillator band A trimmer | | | | | |
| C-135 | Same as C-110. | V-105 heater bypass capacitor (feedthru) | | | | | |
| C-136 | Same as C-125. | V-105 cathode bypass capacitor | | | | | |
| C-137 | Same as C-116 | V-104 voltage divider bypass capacitor (feedthru) | | | | | |
| C-138 | Same as C-110. | 115 vAC line filter | | | | | |
| C-139 | Same as C-110. | 115 vAC line filter | | | | | |
| C-140 | CAPACITOR, fixed: ceramic dielectric; 2 mmf ± 10%; neg temp coef 330 (±500 mmf/mf/C; 500vdcw; .520- lg x .250' diam; one #3-48 x 11/32; lg axial screw term, one axial wire term .067" diam x .38' lg; uninsulated. | V-104 RF cathode bypass capacitor | N16-C-15431-5525 | (16) Style 319 | Pt. # CPC-51 | C140 | 1 |
| C-141 | CAPACITOR, fixed: ceramic dielectric; 56 mmf ± 10%; neg temp coef 330 (± 500) mmf/mf/C; 500vdcw; .520" lg x .250' | V-104 RF bypass capacitor | N6-C-16669-3500 | (16) Style 319 | Pt. # CPC-68 | C141, C142 | 2 |

COMBINED PARTS AND REPAIR PARTS LIST

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|----------------------------|--|--|-----------------------------------|--|--|---|--|-----------------------|
| CAPACITOR Continued | | | | | | | | |
| C-142 | diam; one S3-48 x 11/32" lg axial screw term, one axial wire term .38" lg x .067" diam; uninsulated. Same as C-141. | V-105 RF bypass capacitor | | | | | | |
| C-143 | Same as C-125. | V-106 heater bypass capacitor | | | | | | |
| C-144 | CAPACITOR, fixed: mica dielectric; 300 mmf + 5%; 500vdcw; characteristic ltr B; 51/64" lg x 15/32" wd x 7/32" thk; molded phenolic case; 2 axial wire leads; spec JAN-C-5 | V-103 shunt capacitor | CM20B301J | N16-C-29660-8996 | (13) Pt. # CM20B301J | Pt. # CPM-123 | C144 | 1 |
| C-145 | CAPACITOR, fixed: ceramic dielectric; 10 mmf ±.5 mmf; neg temp coef 330(±500-718) mmf/mf/C; .562" lg x .250" diam; 2 axial wire leads; insulated; spec JAN-C-20A. | V-106 output coupling capacitor | CC21SL100D | | (16) Pt. # CC21SL100D | Pt. # CPC-222 | C145 | 1 |
| C-146 | Same as C-110. | E-128, E-129, E- 130, feedthru | | | | | | |
| C-147 | CAPACITOR, fixed: mica dielectric; 1000 mmf 10%; 500vdcw; Characteristic ltr B; 1-1/16" lg x 15/32" wd x 7 32" thk; molded phenolic case; 2 axial wire leads; spec JAN-C-5. | P/0115 vAC Line Filter | CM25B102K | N16-C-31090-4472 | (13) Pt. # CM25B102K | Pt. # CPM-623 | C-147, C-148, C-150. C-205 C-206 | 5 |
| C-148 | Same as C-147 | P/o115 vAC Line Filter | | | | | | |
| C-149 | CAPACITOR, fixed: paper dielectric; 100, 000 mmf +- 10%; 400 vdcw; hermetically sealed metal can; 3/4" lg x 0.40" diam; axial wire term; one term internally grounded to case. | V-104 plate bypass capacitor | | | (38) Type XG-1816 | Pt. # CPP-203 | C-149, C-156 | 2 |
| C-151 | Same as C-147. | V-108 RF input coupling capacitor | | | | | | |
| C-151 | CAPACITOR, variable: ceramic dielectric; rotary type; single section; 6.0 mmf to 25.0 mmf; 500vdcw; 1.22" lg x 0.9375" wd x 0.703" h less term: two solder lug term; two #4-40 mtg holes on 0.656" mtg/c; screw driver slot adjustment: spec JAN-C-81. | Crystal calibrator V-108 trimmer capacitor | CV12A250 | N16-C-64041-4565 | (10) Type 823-DZ | Pt. # CPT-33 | C-151 | 1 |

7 Section

COMBINED PARTS AND REPAIR PARTS LIST

| | | | | | | | | |
|-------|---|--|--------------|------------------|-------------------------------|------------------|---------------------|---|
| C-152 | CAPACITOR, fixed: ceramic dielectric; 12 mmf ± 5%; zero temp coef; 500 vdcw; 0.562" lg x 0.250" diam; 2 axial wire leads; ceramic insulation; spec JAN-C-20A. | Crystal calibrator V-108 feedback capacitor | CC21CK120J | N16-C-15953-5399 | (16) Pt. # CC21CK120J | Pt. # CPC-223 | C-152 | 1 |
| C-153 | CAPACITOR, fixed: mica dielectric; 270 mmf ± 5%; 500 vdcw; characteristic ltr B; 51/64" lg x 15/32" wd x 7/32" thk; molded bakelite case; 2 axial wire leads; spec JAN-C-5. | Crystal calibrator V-108 feedback capacitor | CM20B271J | N16-C-29608-2196 | (13) Pt. # CM20B271J | Pt. # CPM-122 | C-153 | 1 |
| C-154 | CAPACITOR, fixed: paper dielectric; single section; 10,000 mmf ± 20%; 300 vdcw; molded bakelite case; 57/64" lg x 37/64" wd x 17/64" thk; 2 axial wire leads; spec JAN-C-91. | Crystal calibrator V-108 screen bypass | CN22A103M | | (13) CN22A103M | Pt. # CPP-21 | C-154 C-155 | 2 |
| C-155 | Same as C-154. | Crystal Calibrator V-108 output coupling capacitor | | | | | | |
| C-156 | Same as C-149. | V-104 cathode bypass capacitor | | | | | | |
| C-201 | CAPACITOR, fixed: paper dielectric; single section; 4 mf ± 10%; 60vdcw; hermetically sealed metal can; 4-1/2" lg x 1 -1/2" diam; one terminal internally grounded to case; one 3/4-16 x 1/2" lg mtg bshg; single screw term; spec JAN-C-25. | Power supply filter capacitor | CP40C2FF405K | N16-C-49958-5145 | (13) Pt. # CP40C2FF405K | Pt. # CPP-108 | C201, C202, C203 | 3 |
| C-202 | Same as C-201. | Power supply filter capacitor | | | | | | |
| C-203 | Same as C-201. | Power supply filter capacitor | | | | | | |
| C-204 | CAPACITOR, fixed: paper dielectric; single section; .15 mf ± 10%; 400vdcw; hermetically sealed tubular metal can; 15/32" diam x 1-1/16" lg; both term ins from case; viny. lite jacket; 2 axial wire leads. | Power supply 120 cycle resonant filter capacitor | | Type XFS-1856 | (38) CPP-257 | Pt. # | C204 | 1 |
| C-205 | Same as C-147 | Power Supply RF Bypass | | | | | | |
| C-206 | same as C-147 | Power Supply RF Bypass | | | | | | |
| C-401 | CAPACITOR, fixed: mica dielectric; 200 mmf ± 5%; 500, dcw; characteristic ltr D; 51/64" lg x 15/32" wd x 7/32" thk; molded low loss phenolic case; 2 axial wire leads; spec JAN-C-5. | Antenna simulator series capacitor | CM20D201J | N16-C-29265-3006 | (13) Pt. # CM200D201J | Pt. # CPM-19 | C-401 | 1 |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|---|--|---|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| C402 | CAPACITOR, fixed: mica dielectric; 390 mmf \pm 2%; characteristic ltr D; 500vdcw; 51/64" lg x 15/32" wd x 7/32" thk; molded low loss phenolic case; 2 axial wire leads; spec JAN-C-5. | Antenna simulator shunting capacitor | CM20D391G | N16-C-29893-2126 | (13) Pt. # CM20D391G | Pt. # CPM-604 | C402 | 1 |
| C-601 | CAPACITOR, fixed: paper dielectric; single section; 100, 000 mmf + 20-10/0; 400vdcw; tubular metal can; .400" diam x 13/16 lg; both term insulated from case; 2 axial wire leads. | B+ blocking capacitor part of W-601 | | | (38) Type XF-1816 | Pt. # CPP-253 | C601 | 1 |
| C-602 | Same as C-112 | W-601 inductance compensating | | | | | | |
| PANEL KNOBS AND MISCELLANEOUS ELECTRICAL ACCESSORIES | | | | | | | | |
| E-101 | KNOB: round; black bakelite; for 1/4" diam shaft; two gg-32 set screws; 1" diam x 5/8" lg overall with 5/8" white vinylite pointer; brass insert; shaft hole 7/16" deep. | CARRIER CONTROL (R-123) knob | | N16-K-700302-606 | (23) S-619-64-BB with 40275 pointer | Pt # KNB-106 | E101, E102, E103, E104 | 4 |
| E-102 | Same as E-101. | CARRIER RANGE (S-104) knob | | | | | | |
| E-103 | Same as E-101. | MICROVOLTS control (R-155) knob | | | | | | |
| E-104 | Same as E-101. | %MODULATION control (R-111) knob | | | | | | |
| E-105 | KNOB: round. skirted; black bakelite; for 1/4" diam shaft; two g10-32 set screws; 1-3/4" diam x 27/32" h; brass insert; shaft hole 41/64" deep; white mark on skirt. | FREQUENCY BAND SWITCH (S-103) knob | | N16-K-700374-431 | (23) S-381-64-L-BB | Pt. # KNB-103 | E105 | 1 |
| E-106 | POST, binding: screw type; 5/8" diam x 1-1/16" lg FMS; one g10-32 x 1" lg mtg stud threaded 3/4" black bakelite cap; hole for 512 wire; captive nut type cap with hole for 3/16" diam banana plug. | Front panel ground post | | N17-P-69135-6205 | (28) Pt. # DF-308BC (nickel plated stud) | Pt. # PBG-1 | E106 | 1 |
| E-107 | TERMINAL, stud (style 47): double ended cylindrical shape; brown PBE (LTS-E-4) phenolic; 1" lg x 9/64" OD overall including 2 axial silver pitted brass solder lug term; | Feedthru terminal for RF diode - buffer amplifier shelf | | N17-T-28244-2501 | (9) Pt. # X1795A | Pt. # TER-24 | E107, E108 | 2 |

**CORRECTIVE
MAINTENANCE**

SECTION 7

| | | | | | | | | |
|-------|--|---|-------------------|--|---------------------------|-------------------|--------------------------|---|
| E-108 | 3800 v RMS at 60 cyc breakdown voltage; one integral brass nickel pltd hex flange 3/8" wd across flats, one 1/4-28 x 1/4" lg brass nickel pltd mtg bshg for 1/4" diam hole in 3/16" thk panel; one 1/4-28 hex nut for mtg. Same as E-107. | | | | | | | |
| E-109 | BOARD, terminal: resistor capacitor mounting strip; 18 brass silver pltd solder lug term; non-uniform mtg centers between term brown xxx bakelite board; 4-9/16" lg x 1-5/8" wd x 3/32" thk less term and mtg studs; three mtg holes for #4 screws triangularly located on a 1-7/8" mtg radius, three 1-5/16" lg stainless steel standoff mtg studs. | Audio compartment resistor capacitor mounting strip | | | (17) Dwg #: 315-169 | Dwg # 315-169 | E109 | 1 |
| E-110 | INSULATOR, bushing: cylindrical shape; brown XXX bakelite; 15/32" lg overall; 5/8" OD flange x .245" diam hub x .063" diam hole; three .096" diam mtg holes spaced 120' on 7/32" radius. | Carrier Oscillator to buffer amplifier feedthru | N17-I-49969-8501 | | (17) Dwg # 295-120 | Dwg #: 295-120 | E110 | 1 |
| E-111 | INSULATOR, feedthru; double ended cylindrical shape; brown XXX bakelite; 45/64" lg overall including 2 axial brass silver pltd terminals; .372" OD, fits 1/4" diam x 1/8" thk panel hole. | Input terminal to step attenuator | N-17-T-28271-2501 | | (17) Dwg # 295-93 | Dwg # 295-93 | E111 | 1 |
| E-112 | ATTENUATOR, variable: balanced ladder net work; composition; input 53.5 ohms, output 53.5 ohms ± 3%; aluminum silver dipped case 2" diam x 2-3/8" lg overall; flatted metal shaft 3/8" diam x 3/4" lg; 0 to 100 db; 5 steps, 20 db per step, linear taper; 2 solder lug term; two #6-32 mtg holes spaced 1-5/16" C to C. | Step attenuator | N16-A-98018-1001 | | (17) Dwg # 295-81 | Dwg # 295-81 | E112 | 1 |
| E-113 | BOARD, terminal: resistor-capacitor mounting strip; 17 brass, silver pltd solder lug term; non-uniform mtg center between term brown xxx bakelite board; 3-9/16" lg x 1-1/2" wd x 3/32" thk excluding term; three 4-40 brass mtg inserts triangularly located on a 1-5/16" mtg radius. | Audio compartment resistor-capacitor mounting strip | | | (17) Dwg # 315-168 | Dwg # 315-168 | E113 | 1 |
| E-114 | BOARD, terminal: resistor-capacitor mtg strip; 26 brass, silver pltd solder lug term; non-uniform mtg centers between term; brown xxx bakelite board; 3-11/16" lg x 2-3/16" wd x 3/16" h brass mtg inserts triangularly located on a 1-5/8" mtg radius. | Audio compartment resistor-capacitor mounting strip | | | (17) Dwg # 315-181 | Dwg # 315-181 | E114 | 1 |
| E-115 | HOLDER, fuse; extractor post type; tor single 3AG cartridge fuse; black bakelite; 250 volts at 15 amp; 2-3/8" lg x 1 / 16" dinm overall; 1/2" - 24 x 1/2" lg threaded bake- g 8bdrl ite body for panel hole mtg; 3/32" hole 4D drilled through cap. | Holder for F-101 | N17-F-74267-5701 | | (8) type HKM-H | Pt. # HOF-4 | E115 E116, E117, E118 | 4 |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST-Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|---|---|--------------------------|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| PANEL KNOBS AND MISCELLANEOUS ELECTRICAL ACCESSORIES---CONTINUED | | | | | | | | |
| E-116 | Same as E-115. | Holder for F-102 | | | | | | |
| E-117 | Same as E-115. | Holder for F-103 | | | | | | |
| E-118 | Same as E-115 | Holder for F-104 | | | | | | |
| E-119 | SHIELD, electron tube: copper, nickel pltd; cylindrical, open top; twist lock mtg to socket saddle; 1-3/8" lg x .810" diam x .930" diam of flange piece; with compression spring; spec JAN-S-28A. | Tube shield for V-103 | TSFOT101 | N16-S- 34520- 3862 | (11) TSFOT101 | Pt. # SHT-1 | E119, E120 | 2 |
| E-120 | Same as E-119. | Tube shield for V-105 | | | | | | |
| E-121 | SHIELD, electron tube: copper nickel pltd; cylindrical open top; twist lock mtg to socket saddle; 1-3/4" lg x .810" diam x .930" diam of flange piece with compression spring; spec JAN-S-28A. | Tube shield for V-104 | TSFOT102 | N16-S- 34557 8350 | (11) TSFOT102 | Pt. # SHT-2 | E121, E125, E131 | 3 |
| E-122 | SHIELD, electron tube: copper nickel pltd; cylindrical open top; twist lock mtg to socket saddle; 2-1/4" lg x .810" diam x .930" diam of flange piece; with compression spring; spec JAN-S-28A. | Tube shield for R-157 | TSFOT103 | N16-S- 34607- 8400 | (11) TSFOT103 | Pt. # SHT-3 | E122, E201 | 2 |
| E-123 | SHIELD, electron tube: copper, nickel pltd, cylindrical, open top; twist lock mtd to socket saddle; 1-15/16" lg x .950" diam x 1.050 diam of flange piece; with compression spring; spec JAN-S-28A. | Tube shield for V-101 | TSFOT105 | N16-S 34576- 6513 | (11) TSFOT105 | Pt. # SHT-5 | E123, E124 | 2 |
| E-124 | Same as E-123. | Tube shield for V-102 | | | | | | |
| E-125 | Same as E-121. | Tube shield for V-106 | | | | | | |

7 Section

COMBINED PARTS AND REPAIR PARTS LIST

| | | | | | | | | |
|--------------|--|---|---------------------|------------------------------|---------------------------|---------------------|---------------------------|---|
| E-126 | LAMP, incandescent: 6-8v .15 amp; bulb T 3-1/4 clear; 1-1/8" lg overall; miniature bayonet base; tungsten filament; burn any position. | Panel indicator lamp | | 17-L-6297 | (29) No. 47 | Pt. # LAI-1 | E126 | 1 |
| E-127 | SUPPRESSOR, parasitic; resistor and coil type; .141" diam x 13/32" lg; 38 turns #36 AWG enameled copper wire wound on 120 ohm, 1/2 watt composition resistor; uncased; two axial wire leads. | V-106 plate parasitic suppressor | | N16S-89724-8801 | (17) Dwg # CHO-3B | Dwg/Pt. # CHO-3B | E127 | 1 |
| E-128 | (consists of L113 and R 159) LAMP, incandescent: 3v, 190 ma; bulb T-1-1/4 clear, 35/64" lg overall; special screw base; C-2R tungsten filament; burn any position. | Illuminates frequency scale | Navy Type TS-112 | 17-L-6543-100 | (36) Pt. # LM-32 | Pt. # LA1-3 | E128, E29, E130 | |
| E-129 | Same as E-128. | Illuminates frequency scale | | | | | | |
| E-130 | Same as E-128. | Illuminates frequency scale | | | | | | |
| E-131 | Same as E-121. | Tube shield for V-108 | | | | | | |
| E-132 | BOARD, terminal: resistor-capacitor mounting strip; 20 brass silver pltd solder lug term; brown xxx bakelite board; 4 9/16" lg x 1 5/8" wd x 3/32" thk less term and mtg studs; three mtg holes for #4 screws, triangularly located on a 1 5/16" radius; three 1 5/16" lg stainless steel mtg studs. | Crystal calibrator resistor-capacitor mtg strip | | | (17) Dwg. # 315-353 | dwg. # 315-353 | E132 | 1 |
| E-201 | Same as E-122. | Tube shield or V-201 | | | | | | |
| E-202 | Same as E-122. | Tube shield for V-202 | | | | | | |
| FUSES | | | | | | | | |
| F-101 | FUSE, cartridge: 1 amp; open in 1 hr at 135% load; rated continuous at 100% load; 250v; one time; glass body; ferrule term; 1-1/4" lg x 1, '4" diam o/a; term 5/16" lg x 1/4 diam; slow blowing. | Line fuse | N.T. 28053-1 | N-17-F 14310-380 (3Z2601.16) | (8) MDL-1 | Pt. # FUS-20 | F101, F102, F103, F104 | 4 |
| F-102 | Same as F-101. | Line fuse | | | | | | |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST--continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|--|--|------------------------------|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| FUSES -Continued | | | | | | | | |
| F-103 | Same as F-101. | Spare fuse I | | | | | | |
| F-104 | Same as F-101. | Spare fuse | | | | | | |
| HARDWARE AND MECHANICAL ACCESSORIES | | | | | | | | |
| H-101 | MASK. dial: for masking and uncovering ranges on the frequency scale; aluminum with black enamel finish; round; 5-1/2' diam x .040' thk; mounts by three .093" diam holes spaced 120' apart on .531' radius, 13/16" center hole for shaft bshg; six slots 1/4" w x 1-1/4' average length, located on four different radii. | Frequency scale (N-102) mask | | N16-M-16001-1002 | (17) Dwg. # 295-59 | Dwg. # 295-59B | H101 | 1 |
| H-102 | CLAMP: electron tube; round, closes to 1-1/8" diam; single mtg leg 3/4" h with oblong mtg hole 3/11(" wd x 5/16" lg, locking flange 1/8 wd, 1/4- from mtg hole center. | For securing V-202 | Navy type 49496 | N16-C-301009-628 | (7) Type 926A-14 | Pt. # | H102 CLA-4 | 1 |
| H-103 | WRENCH: double open end hex; 1/16" across flats; long arm 13/4" lg, short arm 1/2" lg; nitrides steel; 90° bend; for #6 Allen set screw. | #6 Allen set screw wrench | | G41-W-2445 (6R57400-6) | (11) | Pt. # WRE-1 | H-103 | 1 |
| H-104 | WRENCH: double open end hex; 5/64" across flats; long arm 21g, short arm 11/16" lg; nitrided steel; 90° bend; for #8 Allen set screw. | #8 Allen set screw wrench | | G41-W-2446 (6R57400) | (11) | Pt. # WRE 4 | H-104 | 1 |
| H-105 | CLAMP: capacitor; bronze, nickel pltd; 1.173" Lg x 0.375" wd x 0.390" h o/a; one 1/8" diam mtg hole; holds two 0.400" diam capacitors. | Mounts C-149 and C-150 | | | (17) Pt. # CLA-58 | Pt. # CLA-58 | H-105 | 1 |

7 Section

COMBINED PARTS AND REPAIR PARTS LIST

| | | | | | | | | |
|-------------------------------------|--|--|--|-----------------------------|--|-----------------------|-------|---|
| H-106 | CLAMP: crystal; bronze nickel pltd; I 1/16' IS x 23/64" wd x 3/32" h o/a; one /a" diam mtg hole; clamp for 19/32" lg x 21/64" wd crystal. z | Mounts crystal Y-101 | | | (17) Pt # CLA-59 | Pt # CLA 59 | H-106 | 1 |
| DIALS AND INDICATING DEVICES | | | | | | | | |
| 1-101 | LIGHT, indicator: without lens; for miniature bayonet base, T-3-1/4 bulb; enclosed shell; aluminum black nickel pltd mtg bushing; 1-9/16" lg x 7/8" wd overall for mtg in 11/16" diam mtg hole x approx 5/16" max panel thickness; horizontally mtd, replaceable from rear of panel; two solder lug term on opposite sides of socket base. | Indicator lamp (E-126) holder assembly | | N17-L-76664-6500 | (33) per Federal dwg./pt. # LGI-3-1 | Dwg./pt. # LGI-3-1 | I101 | 1 |
| 1-102 | LENS, indicator light: red; threaded type; 1/2" diam frosted glass disk lens; 13/16" diam bezel x 9/16"-24 outside thread; aluminum bezel; variable aperture lens adjustable from blackout to maximum light. | Indicator lens (mounts) in 1-101 | | N17-L-250627-770 LGI-3-2 | (33) per Federal dwg./pt. # | Dwg./pt. # LGI-3-2 | I102 | 1 |
| 1-103 | DIAL, frequency tuning: anodized aluminum dial plate and bakelite knob; round; 1-3/4" diam dial plate, 1-3/8" diam knob, brass insert 1/4" I.D.; two #10-32 holes for attachment to 1/4" diam shaft; dial plate marked in 100 equally spaced divisions. | Main tuning dial | | N16-D-46344-4722 | (17) Dwg. # 295-264 | Dwg. 295-264 | I103 | 1 |
| I-1-100 | DIAL, attenuator indicator: anodized aluminum dial plate and black bakelite knob; round; 1-5/8" diam dial plate, 1-1/8" diam knob; brass insert 1/4" ID; two #8-32 holes for attachment to 1/4" diam shaft; dial plate has two stops and is marked "MULTIPLIER, " .01, .1, 1, 10, 100, 1000. | MULTIPLIER dial | | N16-D-46339-5524 | (17) Dwg. # 295-270B | Dwg. # 295-270B | I104 | 1 |
| 1-105 | DIAL; meter selector: anodized aluminum dial plate and bakelite knob; 1-5/8" diam dial plate, 1" dial knob, brass insert 1/4" ID; two :8-32 holes for attachment to 1/4" diam shaft; dial plate marked "METER READS, " "BAL, " "% MOD, " "RF." Not used. | METER READS dial | | N16D-46338-9301 | (17) Dwg. # 295-266 | Dwg. # 295-266 | I110 | 1 |
| I-106 1-107 | DIAL; modulation selector: anodized aluminum dial plate and bakelite knob; 1-5/8" diam dial plate, 1" diam knob, brass insert 1/4- ID; two :8-32 holes for attachment to 1/4- diam shaft; dial plate marked "MOD 2 SELECTOR, " "XTAL SELECTOR, " "1000, " "400, " "EXT, XTAL., " "OFF." | MOD SELFCOR dial | | | (17) Dwg. #: 315-268 | Dwg. # 315-268 | I107 | 1 |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST--Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|---|---|--|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| CONNECTORS (JACKS AND RECEPTACLES) | | | | | | | | |
| J-101 | CONNECTOR, receptacle: 1 round coaxial female contact; straight; 1-1/16- lg x 3/8' diam with 11/16 square mtg Rflange; 52 ohms impedance; cylindrical brass silver pltd body, locking type; molded polystyrene insert; four :3-56 tapped holes on 1/2" x 1/2" mtg centers; spec JAN-C-17. | X 20, 000 RF OUTPUT jack | UG290/U | N17-C- 73108- 1267 | (20) Type # 2700 | Pt. # CON-15 | J101 | 1 |
| J-102 | CONNECTOR, receptacle: 1 round coaxial female contact; straight type; 11 / 16" lg x w 11/16wdx l-3/32" h; 52 ohms impedance; cylindrical brass silver plated body, locking type; molded polystyrene insert; cable opening approx 7/32" diam; four 53-56 tapped holes on 1/2" x 1/2" mtg/c; spec JAN-C-17. | X MULT RF OUTPUT jack | UG291/U | N17-C- 73108- 1262 | (20) Type # 5000 | Pt. # CON-19 | J102 | 1 |
| J-103 | Same as J-101. (Integral part of, and re placed with Z.-101. | EXTERNAL MOD INPUT jack | | | | | | |
| J-104 | CONNECTOR, receptacle: two round male contacts; straight -5/8" lg x 5/8wd x /8wd x 1/4 deep less contacts and tern; 7 amp at 125v; 7 amp at 125v; rectangular metal shell; molded bakelite insert; two .140" diam mtg holes on 1.250 mtg/c. | AC input receptacle on front panel | | N17-C- 73439- 4929 | (11) Pt. # 13056 | Dwg./pt. # CON-1 | J104 | 1 |
| J-201 | CONNECTOR, receptacle: 2 flat polarized blades; 21/32" diam x 1/2" lg less contacts: 45 volt 5 amps, 115v at 2 amps; cylindrical black bakelite body; flange type metal mtg bracket with two .152" diam mtg holes on 31/32- mtg/c. | AC input receptacle on power supply sub-chassis | | N17-C- 73425- 841 | (22) Code P-302-AB | Pt. # CON-8 | J201 | 1 |
| J, 202 | CONNECTOR, receptacle: 4 rectangular polarized female contacts, straight; 3/4" lg x 11/16- wd x 1/2" deep less contacts; 45v at 5 amp or IS0v at 1 amp; rectangular molded bakelite body; metal mounting bracket with two .152 diam mtg holes on a 1' mtg/c. | Power supply output receptacle | | N17-C- 73185- 1208 | (22) Code S-304-AB | Pt. # CON-9 | J202 | 1 |

CONNECTORS (JACKS AND RECEPTACLES) Continued

| | | | | | | | | |
|-------|--|--|--------------|---------------------------|-----------------|-------------|--|----|
| J-301 | CONNECTOR, receptacle: 1 round coaxial female contact; straight type; 1-1/16" lg x 3/8" diam with 3/4" square mtg flange; 52 ohms impedance; four .136 diam mtg holes on a 1/2" x 1" mtg/c; spec JAN-C-17. | Connector for (5:1) Fixed Attenuator CN-132/URM-25 | UG185/U | N17-C-73108-2028 | (20) Type4500 | Pt. # CON-5 | J301, J302, J401, J402, J501, J502, J601, J101, J802, J901 | 10 |
| J-302 | Same as J-301. | Connector for (5:1) Fixed O Attenuator CN-132/URM-25 | | | | | | |
| J-401 | Same as J-301. | Connector for Antenna Simulator SM-35/URM-25 | | | | | | |
| J-402 | Same as J-301. | Connector for Antenna Simulator SM-35/URM-25 | | | | | | |
| J-501 | Same as J-301. | Connector for Impedance Adapter MX-1074/URM-25 | | | | | | |
| J-502 | Same as J-301. | Connector for Impedance Adapter MX-1074/URM-25 | | | | | | |
| J-601 | Same as J-301. | Connector for W-601 | | | | | | |
| J-801 | Same as J-301. | Connector for (10:1) Fixed Attenuator CN-136/URM-25 | | | | | | |
| J-802 | Same as J-301. | Connector for (10:1) Fixed Attenuator CN-136/URM-25 | | | | | | |
| J-901 | Same as J-301. | BNC type connector, p/o Connector, Adapter UG-684/U | | | | | | |
| J-902 | JACK, telephone: for two cond, 1/4" diam phooe plug; 1-9/16" lg x 3/4" diam excluding term; J-IA contact arrangement; 3/s"-32 bshg; one nickel pltd washer and hex mtg llll nut; mtg hole 25/64" diam. | Phone jack; p/o Connector, Adapter UG-684/U | SIG-C JK-34A | N17-J-39248-4413 (2Z5534) | (7) Pt. # SC-IA | Pt. # JAT-1 | J-902 | 1 |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|------------------|---|--|-----------------------------------|--|---|---|-------------------------------------|-----------------------|
| INDUCTORS | | | | | | | | |
| L-101 L-102 | Not used COIL, RF: choke; single winding, 2 pie universal wound; unshielded; 2.5 MH ± 5% at 1000 cycles; 30 ma, 25 ohms + 200o de resistance 7/8" lg x 1/2" diam; phenolic form, air core: two 1-1/2" lg pigtail leads. | V-104 plate RF choke | | N16-C- 74661- 4082 | (19) per Federal dwg./pt.# CHO-1B | Dwg. /pt. # CHO- 1B | L102, L103 L117, L119 | 4 |
| L-103 L-104 | Same as L-102 COIL, RF: choke; single winding, single layer wound; unshielded; 24 turns 522 AWG enameled wires; .280" OD x 7/8" lg; solid phenolic form; two 1-1/2" lg axial pigtail leads. | V-106 plate RF choke V-106 filament choke | | | (19) per Federal dwg./pt. s CHO-4 | Dwg./pt. # CHO-4 | L104 | 1 |
| L-105 | COIL, RF: oscillator; single winding, single layer wound unshielded; three turns of 1/8 x1/ 16" silver plated copper strip; air core; 15/16- diam x 1/2" lg, tapped at two turns, mounts to circuit components by three .040" dia holes in body strip. n | Band H oscillator coil | | N16-C 71694 3418 | (19) per Federal dwg. # 295-62A | Dwg. # 295-62A | L105 | 1 |
| L-106 | COIL, RF: oscillator, single winding, single layer wound, unshielded; 8 turns of 128 double nylon covered copper wire, tapped at 4 turns; 1/2" diam x 2-1/2" lg; ceramic form, powdered iron core; adjustable iron core; screw driver adjustment; 1/ 14" /28 x 1/4" lg mtg bushing; three solder lug term at top; coated with varnish. | Band G oscillator coil | | N16-C- 76284 8840 | (19) per Federal dwg. # 315-67 Supersedes and interchangeable with dwg. # . 295-67 | Dwg. # 315-67 | L106 | 1 |

7 Section

| | | | | | | | |
|-------|---|------------------------|------------------|--|----------------|------|---|
| L-107 | COIL, RF: oscillator, single winding, single layer wound. unshielded; 28 turns of #28 double nylon covered copper wire, tapped at 12 turns; 1/2' diam x 2-1/4' lg; ceramic form, powdered iron core; adjustable iron core; screw driver adjustment at bottom of coil; 1/4"-28 x 1/4" lg mtg bushing; three solder lug term at top; coated with varnish. | Band F oscillator coil | N16-C-76433-888n | (19) per Federal dw. # 315-66 Supersedes and interchangeable with dvg. # 295-66 | Dwg. #: 315-66 | L107 | 1 |
| L-108 | COIL, RF: oscillator; single winding, universal wound; 1/2' diam x 2-1/4" lg; ceramic form, powdered iron core; adjustable iron core; screw driver adjustment at bottom coil; 1/4"-28 x 1/4' lg mtg bushing; three solder lug term at top. | Band E oscillator coil | N16-C-76662-8273 | (19) per Federal dwg. # 315-44 Supersedes and interchangeable with dvg. # 295-44 | Dwg. # 315-44 | L108 | 1 |
| L-109 | COIL, RF: oscillator; single winding; 2 pie universal wound; 1/2' diam x 2-1/4" lg; ceramic form; powdered iron core; adjustable iron core; screw driver adjustment at bottom of coil; 1/4"-28 x 1/4" lg mtg bushing; three solder iug term at top; coated with varnish. 295-43 | Band D oscillator coil | N16-C-76726-2801 | (19) per Federal dwg. # 315-43 Supersedes and interchangeable with dvg. # | Dwg. # 315-43 | L109 | 1 |
| L-110 | COIL, RF: oscillator; single winding, 2 pie universal wound; 1/2' diam x 2-1/4 lg; ceramic form, adjustable iron core; screw driver adjustment at bottom of coil; 1/4"-28 x 1/4' lg mtg bushing; three solder lug term at top; coated with varnish. | Band C oscillator coil | N16-C-76771-5846 | (19) per Federal dwg. #315-42 Supersedes and interchangeable with dvg. # 295-42 | Dwg. # 315-42 | L110 | 1 |
| L-111 | COIL, RF: oscillator, single winding; 3 pie universal wound; 1/2' diam x 2-1/4" lg; ceramic form, powdered iron core; adjustable iron core; screw driver adjustment at bottom of coil; 1/4"-28 x 1/4" lg mtg bushing; three solder lug term at top; coated with varnish. | Band B oscillator coil | N16-C-76818-5569 | (19) per Federal Dwg. # 315-41 Supersedes and interchangeable with dvg. # 295-41 | Dwg. #: 315-41 | L111 | 1 |
| L-112 | COIL, RF: oscillator; single winding; 4 pie universal wound; 3/4" diam x 2-3/4' lg; ceramic form, powdered iron core; adjustable iron core; screw driver adjustment at bottom of coil; 1/4"-28 x 1/4' lg mtg bushing; three solder lug term at top; coated with varnish. | Band A oscillator coil | N16-C-76858-9469 | (19) per Federal Dwg. #315-69 Supersedes and interchangeable with dvg. # 295-69 | Dwg.# 315-69 | L112 | 1 |
| L-113 | Part of E-127. Inductance element of E-127 . | | | | | | |
| L-114 | Not used. | | | | | | |

COMBINED PARTS AND REPAIR PARTS LIST

TABLE 7-4. COMBINED PARTS AND SPARE PARTS

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|------------------------------|---|---|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| INDUCTORS - Continued | | | | | | | | |
| L-115 | COIL, RF: choke; single winding; unshielded; 6.5 uh at 50 mc; 1" lg x 9/32" diam; phenolic form, air core; 2 axial wire leads. | RF line choke | | N16-C-73039-9400 | (35) Pt. # Z50 | Pt. # CHO-7 | L115, L116 | 2 |
| L-116 | Same as L115 | RF line choke | | | | | | |
| L-117 | Same as L-102. | EXT MOD IN jack J-103 low frequency RF choke | | | | | | |
| L-118 | COIL, RF: choke: single winding 3 pie universal wound; unshielded 0.5 millihenries at 50 mc; 1" lg x 15/32" diam; solid phenolic form; 2 axial wire leads. | V-104 cathode RF choke | | | (17) Pt. # CHO-15 | Pt. # CHO-15 | L-118 L-120 | 2 |
| L-119 | Same as L-102. | V-108 grid RF choke | | | | | | |
| L-120 | Same as L-118. | V-108 cathode RF choke | | | | | | |
| L-121 | COIL, RF: choke: single winding; single layer wound; unshielded; 1.3 uh at 10 mc 0.65 mmf dist capacitance; 7/8" lg x 0.280" diam; phenolic form, air core; 2 axial wire 1 leads. | 16 mc-34 mc peaking coil | | | (17) Pt. # CHO-18 | Pt. # CHO-18 | L-121 | 1 |
| L-122 | COIL, RF: choke; single winding; single layer wound; .35 uh at 35 mc, .6 mmf dist capacitance; .750" g x .220" diam; 2 axial wire leads. | 34mc-50mc peaking coil | | | (19) per Federal Pt. # CHO17 | Pt. # CHO-17 | L122 | 1 |
| L-201 | REACTOR: filter choke; 11 hy 75 ma; 400 ohms DC resistance; 500v RMS test; hermetically sealed metal case; 2-1/2" lg x 1-7/8" wd x 1-7/8" h; four # 6-32 mtg | Power supply filter | | | (39) per Federal dwg. # 307-7A | Dwg. # 307-7A | L-201 | 1 |

7 Section

COMBINED PARTS AND REPAIR PARTS LIST

| | | | | | | | | |
|---------------|---|--|--|------------------|----------------------------------|----------------|------------|---|
| L-401 | studs on 1-1/2" x 1-1/2" mtg/c; two solder lug term on bottom of case; spec MIL-T-27. COIL, RF: antenna simulator single winding, single layer wound; unshielded; 40 turns #32 AWG DSC copper wire; .280' diam x 7/18' lg; powdered iron core form; two 1-1/2" lg axial wire term. | P/O Antenna Simulator SM-35/URM-25 | | N16-C 73292-4516 | (17) Dwg #. 295-26 | Dwg # 295-236 | L401 | 1 |
| METERS | | | | | | | | |
| M-101 | METER multiscale: DC; range 0 to 100 microamps; hermetically sealed round metal flush mtg case; 2-3/16' barrel diam x 1-3/8" deep behind panel, 2-11/16' diam flange; meter accuracy ± 2%; 100 microamps full scale deflection, approx 10,000 ohms per volt sensitivity; calibrated for non magnetic panel; white background, black numerals, 21 scale divisions upper scale, 20 scale divisions lower scale; three 1/8' diam mtg holes on 1.22-R; two stud term #8-32 x 7/16" lg; two scales, upper scale marked 0 to 100 MICROVOLTS, lower scale marked 0 to 100% MODULATION. | RF output and % modulation meter | | N17-M 29400 5001 | (31) per Federal Dwg. # 295-261B | Dwg # 295-261B | M101 | 1 |
| SCALES | | | | | | | | |
| N-101 | PLATE, index: dial indicator; clear lucite; 2-3/4" lg x 1-1/16" wd x 1/16" thk overall; two .149' diam mtg holes on 2.375 mtg/c; black hairline engraved in the center and perpendicular to the long axis. | Hairline indicator for bands A thru D on frequency scale (N-102) | | N16-P-403561-116 | (17) Dwg. # 295-254 | Dwg. # 295-258 | N101, N103 | 2 |
| N-102 | SCALE: to read RF output frequency; round 6' diam x 1/16' thk; eight scales covering 180' each in two groups of four, top group in kilocycles covering 10 to 27 kc, 27 to 80 kc, 80 to 230 kc, 230 to 680 kc, bottom group in megacycles covering .68 mc to 2 mc, 2 mc to 6.3 mc, 6.3 mc to 18 mc, 18 mc to 50 mc, additional arbitrary scale marked 0 to 1000 covering 180' on bottom section, 3% scale overlap; 5/16' ID hole for shaft, three 1/8' holes spaced 120' on 1/4' R for mtg to flange. | Frequency scale | | N16-S-117101-335 | (17) Dwg # 295-57A | Dwg # 295-57A | N102 | 1 |
| N-103 | Same as N-101. | Hairline indicator for bands E thru H on frequency scale (N-102) | | | | | | |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST--Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|---------------------------|---|---|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| SCALES - Continued | | | | | | | | |
| N-104 | SCALE: arbitrary scale for interpolating frequency vernier dial; arc shape; aluminum; 1 5/8" lg x 5/16" wd x 3/32" thk; 10 scale divisions; two 5/32" diam mtg holes spaced 66° apart on .1031" radius. | Vernier for Tuning dial 1-103 | | | (17) Pt. # DIV-1 | Pt. # DIV-1 | N-104 | 1 |
| MECHANICAL PARTS | | | | | | | | |
| 0-101 | GEAR: spur; brass; tuning dial pinion; straight teeth; 24 teeth; 48 pitch .500' pitch diam; .5416" diam x 1/8" thk; concave face; 1/4" diam x 1-11/16 lg steel shaft integrally attached to center bore of gear. | Main tuning dial (1-104) pinion | | N16-G-431375-960 | (17) Dwg. # 295-18B | Dwg. # 295-18B | O101 | 1 |
| 0-102 | GEAR; spur; brass; frequency tuning; straight teeth; one two section split gear 96 teeth each section, one single section gear 24 teeth; all sections 48 pitch. split gear 2.000' pitch diameter, single section gear 500" diameter; split gear 2.0416" diam x 3/64" thk each section, single gear .5416" diam x 1/8" thk; straight face;. single gear integral part of 1/4' ID hub; split gear section held by tension spring, single gear on integral hub approx 7/32" from face of split gear. | Driven by O-101 | | N16-G-500001-230 | (17) Dwg. # 295-11 | Dwg. # 295-11 | O102 | 1 |
| 0103 | GEAR: spur; brass; tuning capacitor; straight teeth; split three section, 120 teeth each section; 48 pitch, 2.500' pitch diam each section; all sections 2.5416" diam, mtg on common 1/4' ID hub; straight fae; 7/8 diam x 1/4' h common hub; for attaching to 1/4" diam shaft; gear sections held by two tension springs. | Main tuning capacitor (C-127) gear, driven by 0-102 | | N16-G-50001-231 | (17) Dwg. # 295-25 | Dwg. # 295-25 | O103 | 1 |

7 Section

| | | | | | | | |
|-------|---|--|--|------------------------------------|----------------------|---------------------|---|
| O-104 | GEAR: spur; brass; drives frequency scale; straight teeth; 120 teeth; 48 pitch, 2.500' pitch diam 2.5416" diam x 1/4' ID of integral hub x 1/8' thk; straight face; 3/4' OD x 1/4' ID; mounts on 1/4' diam shaft; hub has three #4-40 holes on upper face | Frequency scale (N-102) drive gear, driven by O-103 | N16-G-433296-209 | (17) Dwg. # 295-54A | Dwg. # 295-54A | O104 | 1 |
| O-105 | RING, retainer: for securing gear on shaft; stainless steel; for securing to 3/16" shaft. | For securing O-102 to shaft | N16-R-651091-190 | (15) 3/16 series 2 | Pt. # RNG-1 | O105 | 1 |
| O-106 | RING, retainer: for securing gear on shaft; stainless steel; for securing to 1/4' shaft. bushing | For securing O-101 to panel | N16-R-651091-191 | (15) 1/4" series 2 | Pt. # RNG-2 | O106 | 1 |
| O-107 | CAP: for types UG-290/U and UG-291/U connectors; brass silver plated; round; approx 5/8" lg x 9/16" diam; twist lock mtg; approx 2" lg chain for securing to panel. | Protective cap for J-101 | Army-Navy type CW123/U N17-C-200964-601 | (20) Type 1500 | Dwg./pt. # CAC-2 | O107, 0108, O110 | 3 |
| O-108 | Same as O-107. | Protective cap for J- 102 | | | | | |
| O-109 | COUPLING, flexible: couple tuning capacitor to drive gear; nickel plated brass hubs and phosphor bronze flexible arms, ceramic insulation; 6000v breakdown; round; 13/16' lg x 1-1/4' diam overall; two #6-32 cadmium plated steel set screws for securing coupling to shaft. | Mechanically couples tuning capacity (C-127) to driving gear | N17-C-98378-4107 | (18) Code FC-46-S | Dwg./pt. # CUP-1A | O109 | 1 |
| O-110 | Same as O-107. | Protective cap for J-103 | | | | | |
| O-111 | CLIP: alligator; for test lead; copper, cad pl; 2" lg x 5/16' wd x 1/2" h overall; one screw connection; 5/16' max jaw opening. | Part of W-601 | N17-C-802556.975 | (37) Pt. # 60CS (cadmium pl) | Pt. # CLP-3. | O111 | 1 |
| O-112 | Same as O-111. | Part of W-601 | | | | | |
| O-113 | SPRING: helical compression - extension type; gear back lash spring; .020" diam stainless spring steel; 1/8' OD x 3/8" lg overall; approx 12 turns; looped ends. | Back-lash spring for O-102 | N17-S-46702-2301 | (17) Dwg. # 295-23 | Dwg. # 295-23 | O113, O114 O115 | 3 |
| O-114 | Same as O-113. | Back-lash spring for O-103 | | | | | |
| O-115 | Same as O-113. | Back-lash spring O-103 | N16-C-76662-8273 | (19) per Federal dwg. # | Dwg. # 295-44B | L108 | 1 |
| O-116 | BUMPER: cabinet bottom bumper; rubber; approx hemi-spherical shape; 7/8" OD x 1/2" h; one center hole for #10 flat head screw. | Cabinet bottom bumper | | (43) Pt. # 103 | Pt.# BMP-1 | O-116 | 4 |

COMBINED PARTS AND REPAIR PARTS LIST

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|-------------------------------------|--|---------------------|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| MECHANICAL PARTS - Continued | | | | | | | | |
| O-117 | BUMPER: cabinet rear bumper; rubber; round; 1/2" OD x 1/4" h; one center hole for #6 flat head screw. | Cabinet rear bumper | | | (5) Pt. # 1308 | Pt.# BMP-2 | O-117 | 4 |
| CONNECTORS (PLUGS) | | | | | | | | |
| P-101 | CONNECTOR, plug; 2 rectangular female polarized contacts; straight type; 21/32' diam x 15/16" lg less contacts and cable clamp; 5 amp 45v, 2 amp 115v; cylindrical black crystal finish metal body; molded black bakelite insert; cable opening 3/8" diam max; includes adjustable grip cable clamp. | Part of W-102 | | N17-C-71126-4813 | (22) Code S302 CCT | Dwg./pt.# CON-22 | P-101 | 1 |
| P-102 | CONNECTOR, plug; 4 flat polarized blades; straight type; 3/4' wd x 11/16' h x 15/16 lg less contacts and cable clamp; 5 amp 45v, 1 amp 150v; crystal finish rectangular black metal body; molded black bakelite insert; cable opening 3/8' diam max; includes adjustable grip cable clamp. | Part of W-103 | | N17-C-71480-2351 | (22) Code P304 CCT | Dwg./pt # CON-23 | P-102 | 1 |
| P-103 | CONNECTOR, plug: one round coaxial male contact; straight type; 31/32" lg x 27/64' diam overall; 52 ohms impedance; cylindrical brass, silver pltd, locking type body; molded polystyrene insert; cable opening approx 7/32' diam; spec JAN-C-17. O | Part of W-104 | UG-88/U | N17-G-71408-4241 | (20) Type 1200 | Pt. # CON-17 | P103, P104, P105, P106, | 6 |
| P-104 | Same as P-103. | Part of W-104 | | | | | | |
| P-105 | Same as P-103. | Part of W-105 | | | | | | |
| P-106 | Same as P-103. | Part of W-105 | | | | | | |

7 Section

COMBINED PARTS AND REPAIR PARTS LIST

| | | | | | | | | |
|-------|---|-----------------|------------------|---------------------|-------------------|-----------------|------|---|
| P-107 | Same as P-103. | Part of W-106 | | | | | | |
| P-108 | Same as P-103. | Part of W-106 | | | | | | |
| P-701 | CONNECTOR, adapter: male one end, female other end; coax male type N at ones coax female type BNC other end; straight type; adapts female type N to male type BNC connector; 3/4" diam x 1-9/16" lg over all; 52 ohms impedance; cylindrical, brass silver pltd; molded polystyrene insert; JAN-C-17. | Coaxial adapter | AN type UG-201/U | N17-C-67990 2447 | (20) Type 1400 | Pt. # CON-21 | P701 | 1 |

RESISTORS

| | | | | | | | | |
|-------|--|--|------------|-------------------|------------------------|-------------------|---|---|
| R-101 | RESISTOR, fixed: composition; 154, 000 ohms ± 1%; 1/4 W; characteristic F; 3/8' lg x 1/16" diam; uninsulated, 2 axial wire leads. | V-102 1000 cycle bridge resistor | | N16-R-73210-1101 | (32) Type CP-1/4 | Pt. # RES-1011 | R101, R104 | 2 |
| R-102 | RESISTOR, fixed: composition; 393, 000 ohms ±1%; 1/4 W; characteristic F; 3/8' lg x 1/16" diam; uninsulated; 2 axial wire leads. | V-102 400 cycle bridge resistor | | N16-R-73259-5801 | (32) Type CP-1/4 | Pt. # RES-012 | R102, R103 | 2 |
| R-103 | Same as R-102. | V-102 400 cycle bridge resistor | | | | | | |
| R-104 | Same as R-101. | V-102 1000 cycle bridge resistor | | | | | | |
| R-105 | RESISTOR, fixed: composition; 20, 000 ohms ±5%; 1/12 W; characteristic F; .468" lg x .249" diam; insulated; 2 axial wire leads; spec JAN-R-11. | V-102 cathode degeneration resistor | RC20BF203J | †N16-R-50362-0431 | (2) Pt. # EB2035 | Pt # RES-79 | R105 | 1 |
| R-106 | RESISTOR, fixed: composition; 1800 ohms ± 5%; 1/2 W; characteristic F; .468' lg x .249' diam; insulated; 2 axial wire leads; spec JAN-R-11. | V-102A cathode bias resistor | RC20BF182J | †N16-R-49984-0431 | (2) Pt. # EB1825 | Pt # RES-54 | R106, R163 R162 | 3 |
| R-107 | RESISTOR, fixed: composition; 510, 000 ohms ± 5%; 1/2 W; characteristic F; .486" lg x .249" diam; insulated; 2 axial wire leads; spec JAN-R- 11. | V-102B grid leak resistor | RC20BF514J | †Ni6-R-50839-0431 | (2) Pt. # EB5135 | Pt. # RES-113 | R107, R114, R126, R127, R39, R140 | 6 |
| R-108 | RESISTOR, fixed: composition; 100, 000 ohms ± 5%; 1/2 W; characteristic F; .468' lg x .249' diam; leads; spec JAN-R-11 . | V-102A plate load resistor | RC20BF104J | †N16-R-50632-0431 | (2) Pt. # EB1045 | Pt. # RES-96 | R108 R109 R125 | 3 |
| R-109 | Same R-108. | V-102B plate load resistor | | | | | | |

† For replacement specify maximum size of 9/64" diam. x 3/8" lg.

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST--Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|------------------------------|---|------------------------------------|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| RESISTORS - Continued | | | | | | | | |
| R-110 | RESISTOR, variable: composition; 25,000 ohms \pm 10%; 2 W; 3 solder lug terminals; metal case 1-1/16" diam x 9/16" deep; slotted metal shaft 1/4" diam x 5/8" lg FMS; JAN A taper; #3/8-32 x 1/2" lg mtg bshg; non turn device on 17/32" rad at 3 and 9 o'clock. RESISTOR, variable: composition; 100,000 ohms \pm 10%; 2 W; 3 solder lug terminals; metal case 1-1/16" diam x 9/16" deep; flatted metal shaft 1/4" diam by 3/4" FMS; JAN A taper; #3/8-32 x 1/4" lg mtg bshg. RESISTOR, fixed: composition; 270,000 ohms \pm 5%; 1/2 w; characteristic F; .468" lg x .249" diam; insulated; 2 axial wire leads; spec JAN-R-11 RESISTOR, variable: composition; 2500 ohms \pm 10%; 2 W; 70°C; three solder lug term; enclosed metal case 1-11/16" diam x 9/16" d; slotted metal shaft 5/8" lg x 1/4" diam; JAN A taper; contact arm insulated from case; without off position; normal shaft torque with locking device; #3/8-32 x 1/2 Same as R-107. RESISTOR, fixed: composition; 51,000 ohms \pm 5%; 1/2 W; characteristic F; .468 lg x 249" diam; insulated; 2 axial wire leads; spec JAN-R-111. | V-102 DEGEN control | | N16-R-87749-4560 | (2) Cat. # JLU-2531 | Pt. # RRV-1 | R110, R128 R129, R131 | 4 |
| R-111 | | % MODULA- TION control | | N16-R-88009-4164 | (2) Type JU1041 | Dwg. # 295-150 | R111 | |
| R-112 | | Audio series dropping resistor | RC20BF274J | †N16-R-50740-0431 | (2) Pt. # EB2745 | RES-106 | R112, R119, R168, R169 | 4 |
| R-113 | | BIAS control | V-104 | N16-R-87419-4350 | (2) Cat. # JLU2521 | Pt. # RRV-4 | R113 | |
| R-114 | | Part of V-i04 grid leak circuit | | | | | | |
| R-115 | Part of V-I04 grid leak circuit | RC20BF513J | †N16-R-50497-0431 | (2) Pt. # EB5135 | Pt. # RES-89 | R115, R117 | 2 | |

COMBINED PARTS AND REPAIR PARTS LIST

Section 7

| | | | | | | | | |
|-------|---|--|------------|-------------------|---|--------------------|---------------------|---|
| R-116 | RESISTOR, fixed: composition; 2400 ohms ±5%; 1/2 W; characteristic F; .468" lg x .249" diam; insulated; 2 axial wire leads; spec JAN-R-11 | V-104 plate load resistor | RC20BF242J | †N16-R-50020-0431 | (2) Pt. # EBR2425 | Pt. # | R116 RES-57 | 1 |
| R-117 | Same as R115. | V-104 degen resistor | | | | | | |
| R-118 | RESISTOR, fixed: composition; 30,000 ohms ±5%; 1 W; characteristic F; .750" lg x .280" diam; insulated; 2 axial wire leads; spec JAN-R-11. | V-104 voltage dropping resistor | RC30BF303J | N16-R-50407-0751 | (2) Pt. # GB-3035 | Pt. # RES-383 | R118 | 1 |
| R-119 | Same as R-112. | V-103 series dropping resistor | | | | | | |
| R-120 | RESISTOR, fixed: composition; 1 meg ± ±5%; 1/2 W; characteristic F; .468" lg x .249" diam; insulated; 2 axial wire leads; spec JAN-R-11. | V-103 shunt resistor | RC20BF105J | †N16-R-50974-0431 | (2) Pt. # EB1055 | Pt. # RES-120 | R120, R121 | 2 |
| R-121 | Same as R-120. | V-103 output resistor | | | | | | |
| R-122 | Not used. | CARRIER CONTROL | | N16-R-91568, 8175 | (12) per Federal Dwg. # 295-157A | Dwg. # 295-157A | R123 | 1 |
| R-123 | RESISTOR, variable: wire wound; 50,000 ohms ± 10%; 4w 40°C max continuous operating temp; 3 solder lug term; encl bake-lite case w/metal cover 1-21/32" diam x 15/16" lg; flatted metal shaft 1/4" diam x 3/4" lg FMS; JAN A taper; no off position; normal torque; mtg bushing 3/8-32 thd x 1/4" lg; non-turn device located on 17/32" rad at 9 o'clock. | V-106 bands G and H grid leak resistor | RC20BF222J | †N16-R-50011-0431 | (2) Pt. # EB2225 | Pt. # RES-56 | R124 | 1 |
| R-124 | RESISTOR, fixed: composition; 2200 ohms ±5%; 1/2 W; characteristic F; .468" lg x .249" diam; insulated; 2 axial wire leads spec JAN-R-11. | V-106 grid leak resistor | | | | | | |
| R-125 | Same as R-1108. | V-105 voltage divider resistor | | | | | | |
| R-126 | Same as R- 17. | V-105 voltage divider resistor | | | | | | |
| R-127 | Same as R-107. | RF COMP control | | | | | | |
| R-128 | Same as R-110. | MOD COMP control | | | | | | |
| R-129 | Same as R-110. | V-101A plate load resistor | RC20BF183J | †N16-R-50353-0431 | (2) Pt. # EB18335 | Pt. # RES-78 | R130, R132, R160 | 3 |
| R-130 | RESISTOR, fixed: composition; 18,000 ohms ±5%; 1/2 W; characteristic F; .486" lg x .249" diam; insulated; 2 axial wire leads; spec JAN-R-11. | | | | | | | |

† For replacement specify maximum size of 9/64" diam. x 3/8" lg.

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST-Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|------------------------------|--|--|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| RESISTORS - Continued | | | | | | | | |
| R-131 | Same as R-110. | V-101 BALANCE control | | | | | | |
| R-132 | Same as R-130. | V-101B plate load resistor | | | | | | |
| R-133 | RESISTOR, variable: composition 100 ohms ±10% ; 2 W; 3 solder lug terminals; metal case 1-1/16" diam x 9/16" d; slotted metal shaft 1/4" diam x 5/8" lg; JAN A taper; #3/8-32 x 1/2" lg mtg bshg; non-turn device on 17/32" rad at 3 and 9 o'clock. | RF SENS control | | N16-R- 87349- 4560 | (2) Cat. \$ JLU-1021 | Pt. # RRV-2 | R133, R134 | 2 |
| R-134 | Same as R-133. | MOD SENS control | | | | | | |
| R-135 | RESISTOR, fixed: composition; 100 ohms ±5%; 1/2 W; characteristic F; .368" lg x .249" diam; insulated; 2 axial wire leads; spec JAN-R-11. | V-101B cathode bias resistor | RC20BF101J | †N16-R- 49579- 0431 | (2) Pt. # EB1015 | Pt. # RES-25 | R135, R136 | 2 |
| R-136 | Same as R-135. | V101A cathode bias resistor | | | | | | |
| R-137 | RESISTOR, fixed: composition; 1500 ohms ±5%; 1/2 W; characteristic F; .468" lg x .249" diam; insulated; 2 axial wire leads; spec JAN-R-11. | V-101 cathode bias resistor | RC20BF152J | †N16-R- 49966- 0431 | (2) Pt. # EB1525 | Pt. # RES-52 | R137 | 1 |
| R-138 | RESISTOR, fixed: composition; 75,000 ohms ±5%; 1/2 W; characteristic F; .468" lg x .249" diam; insulated; 2 axial wire leads; spec JAN-R 11. | V-101 B+ dropping resistor | RC20BF753J | †N16-R- 50569 0431 | (2) Pt. # EB7535 | Pt. # RES-93 | R138, R158 | 2 |
| R-139 | Same as R-107. | Voltmeter bridle B+ voltage divider | | | | | | |
| R-140 | Same as R-107. | V-101B grid leak resistor | | | | | | |

COMBINED PARTS AND REPAIR PARTS LIST

Section 7

| | | | | | | | |
|-------|--|--|------------------|------------------------------------|--------------------|-----------------------------------|---|
| R-141 | RESISTOR, fixed: composition; 500 ohms ±1%; ¼ W; characteristic F; 3/8" lg x 1/16" diam; uninsulated; 2 axial wire leads. | Part of output impedance T pad Circuit | N16-R-72953-6911 | (32) RES-1004 | Pt. # | R141, R142 | 2 |
| R-142 | Same as R-141. | Part of output impedance T pad circuit | | | | | |
| R-143 | RESISTOR, fixed: composition; 482 ohms ±1%; 1/4 W; characteristic F; 3/8" lg x 1/16" diam; uninsulated; 2 axial wire leads. | Part of step attenuator E-112 | N16-R-72952-3901 | (32) Type CP-1/4 | Pt. # RES-1000 | R143 | 1 |
| R-144 | RESISTOR, fixed: composition; 531 ohms ±1%; 1/4 W; characteristic F; 3/8" lg x 1/16" diam; uninsulated; 2 axial wire leads. | Part of step attenuator E-112 | N16-R-72956-3876 | (32) Type CP-1/4 | Pt. # RES-1001 | R144, R145 R146, R147, R148 | |
| R-145 | Same as R-144. | Part of step attenuator E-112 | | | | | |
| R-146 | Same as R-144. | Part of step attenuator E-112 | | | | | |
| R-147 | Same as R-144. | Part of step attenuator E-112 | | | | | |
| R-148 | Same as R-144. | Part of step attenuator E-112 | | | | | |
| R-149 | RESISTOR, fixed: composition; 59 ohms ±1%; 1/4 W; characteristic F; 3/8" lg x 1/16" diam; uninsulated; 2 axial wire leads. | Part of step attenuator E-112 | N16-R-72865-7451 | (32) Type CP-1/4 | Pt. # RES-1002 | R149, R154 | 2 |
| R-150 | RESISTOR, fixed: composition; 65.6 ohms ±1%; characteristic F; 3/8" lg x 1/16" diam; uninsulated; 2 axial wire leads. | Part of step attenuator E-112 | N16-R-72872-9701 | (32) Type CP-1/4 | Pt. # RES-1003 | R150, R151 R152, R153 | 4 |
| R-151 | Same as R-150.. | Part of step attenuator (E-112) | | | | | |
| R-152 | Same as R-150. | Part of step attenuator (E-112) | | | | | |
| R-153 | Same as R-150. | Part of step attenuator (E-112) | | | | | |
| R-154 | Same as R-149. | Part of step attenuator (E-112) | | | | | |
| R-155 | RESISTOR, variable: composition; two section, one section 10,000 ohms ±10%, other section 250,000 ohms ±10%; 2 W at 70°C each section; two solder lug term on each section; 1-1/16" diam x 1-3/16" lg; enclosed case; flatted metal shaft ¼" diam x 13/16" lg; special taper each section; contact arm insulated from case; without off position; normal torque, without locking device; one #3/8-32 x 5/16" g mtg bshg. | MICROVOLTS control | N16-R-88915-7601 | (2) per Federal Dwg. # 295-138C | Dwg. # 295-138C | R155A, R155B | 1 |

† For replacement specify maximum size of 9/64" diam. x 3/8" lg.

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST-Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|------------------------------|---|---|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| RESISTORS - Continued | | | | | | | | |
| R-155A | Part of R-155 (250,000 ohm section). | Bridge section of | | | | | | |
| R-155B | Part of R-155 (20,000 ohm section). | MICROVOLTS control (R PAR5) | | | | | | |
| R-156 | TUBE, ballast: glass; .7 to 1.7 v, .460 to .505 ma; 2-5/16" lg x 3/4" diam bulb; 2-1/2" lg overall; 7 contact miniature base. | Shunt section of MICROVOLTS control (R-155) | | N16-R- 85001- 1676 | (4) Pt. # 5T1A | Dwg./pt. # RBR-2C | R156 | 1 |
| R-157 | RESISTOR, fixed: composition; 15 ohms ± 5%; 2 W; characteristic F; .750 lg x .370" diam; 2 axial wire leads; insulated; spec JAN-R-11. | V-105 heater regulator | RC42BF150J | N16-R- 49283- 101 | (2) Pt. # HB1505 | Pt. # RES-604 | R157 | 1 |
| R-158 | Same as R-138. | V-105 filament shunt resistor | | | | | | |
| R-159 | RESISTOR, fixed: composition; 120 ohms ± 5%; 1/2 W; characteristic F; .468" lg x .243" diam; insulated; 2 axial wire leads; spec JAN-R-11. | V-106 band A cathode resistor | RC20BF121J | †N16-R- 49597- 0431 | (2) Pt. # EB1215 | Pt. # RES-27 | R159 | 1 |
| R-160 | Same as R-130. | Part of E-127 | | | | | | |
| R-161 | RESISTOR, fixed: wire wound; 17 ohms ± 10%; 1-1/2 W; 3-3/5" lg x 5/32" diam; 2 axial wire leads; uninsulated. | V-106 band B cathode resistor | | | (17) Dwg. # 295-324 | Dwg. # 295-324 | R161,R165, R166 | 3 |
| R-162 | Same as R106 | E-128 series dropping resistor | | | | | | |
| R-162 | Same as R106 | V-106 band D cathode resistor | | | | | | |

COMBINED PARTS AND REPAIR PARTS LIST

Section 7

| | | | | | | | | | |
|-------|--|--|------------|-------------------|---------------------------|-------------------|------------------------|---|--|
| R-165 | Same as R-106. | V-106 band E cathode resistor | | | | | | | |
| R-164 | RESISTOR, fixed: composition; 2.2 megohms ±5%; 1/2 W; characteristic F; .468" lg x .249" diam; insulated; 2 axial wire leads; spec JAN-R-11. | V-106 output decoupler | RC20BF225J | N16-R-51064-0431 | (2) Pt. # EB2255 | Pt. # RES-128 | R164 | 1 | |
| R-165 | Same as R-161. | E-129 series dropping resistor | | | | | | | |
| R-166 | Same as R-161. | E-130 series dropping resistor | | | | | | | |
| R-167 | RESISTOR, fixed: composition; 1000 ohms ±5%; 1/2 w; characteristic F; .468" lg x .249" diam; insulated; 2 axial wire leads; | V-108 mixer grid isolation resistor | RC20BF102J | †N16-R-49921-0431 | (2) RC20BF102J | Pt. # RES-48 | R-167 | 1 | |
| R-168 | Same as R-112. | V-108 mixer grid leak resistor | | | | | | | |
| R-169 | Same as R-112. | V-108 oscillator grid leak resistor | | | | | | | |
| R-170 | Same as R-108. | V-108 plate load resistor | | | | | | | |
| R-171 | Same as R-118. | V-108 screen dropping resistor | | | | | | | |
| R-201 | RESISTOR, fixed: wire wound; 1800 ohms ±5%; 15 W at 25°C; 1-1/4" lg x 1-3/16" wd x 5/8" h; 2 solder lug term; integral mtg bracket with two 0.196" diam mtg holes on 2" mtg/c: spec JAN R-26A. | Power supply series dropping resistor | RW20G182 | N16-R-66094-8361 | (34) Pt. # RW20G182 | Pt. # RWF-9 | R201 | 1 | |
| R-301 | RESISTOR, fixed: composition; 35.6 ohms ±1%; 1/4 W; characteristic F; 3/8" lg x 1/16" diam; uninsulated; 2 axial wire leads. | Part of (5:1) Fixed Attenuator CN-132/URM-25 | | N16-R-72843-4301 | (22) Type CP-1/4 | Pt. # RES-1013 | R301, R302 | | |
| R-302 | Same as R-301. | Part of (5:1) Fixed Attenuator CN-132/URM-25 | | | | | | | |
| R-303 | RESISTOR, fixed: composition; 89.2 ohms ±1%; 1/4 W; characteristic F; 3/8" lg x 1/16" diam; uninsulated; 2 axial wire leads. | Part of (5:1) Fixed Attenuator CN-132/URM-25 | | N16-R-72890-6051 | (32) Type CP-1/4 | Pt. # RES-1014 | R303, R304, R305, R306 | | |
| R-304 | Same as R-303. | Part of (5:1) Fixed Attenuator CN-132/URM-25 | | | | | | | |
| R-305 | Same as R-305. | Part of (5:1) Fixed Attenuator CN-132/URM-25 | | | | | | | |

† For replacement specify maximum size of 9/64" diam. x 3/8" lg.

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST-Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|------------------------------|---|---|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| RESISTORS - Continued | | | | | | | | |
| R-506 | Same as R-303. | Part of (5:1) Fixed Attenuator CN-132/URM-25 | | | | | | |
| R401 | RESISTOR, fixed: composition; 400 ohms ±1%; 1/4 W; characteristic F; 3/8" lg x 1/16" diam; uninsulated moisture resistant; 2 axial wire leads. | Part of Antenna Simulator SM-35/URM-25 | | N16-R- 72943- 7721 | (32) Type CP-1/4 | Pt. # RES-1008 | R401 | 1 |
| R-501 | RESISTOR, fixed: composition; .53.5 ohms ±1%; 1/4 W; characteristic F; 3/8" lg x 1/16" diam; uninsulated; 2 axial wire leads. | Part of Impedance Adapter MX-1074/URM-25 | | N16-R- 72860- 7476 | (32) Type CP-1/4 | Pt. # RES-1005 | R501 | 1 |
| R-801 | RESISTOR, fixed: composition; 43.8 ohms ±1%; 1/4 W; characteristic F; 3/8" lg x 1/16" diam; uninsulated; 2 axial wire leads. | Part of (10:1) Fixed Attenuator CN-136/URM-25 | | N16-R- 72853- 2301 | (32) Type CP-1/4 | Pt. # RES-1006 | R801, R802 | 2 |
| R-802 | Same as R801. | Part of (10:1) Fixed Attenuator CN-136/URM-25 | | | | | | |
| R-803 | RESISTOR, fixed: composition; 43.2 ohms ±1%; 1/4 W; characteristic F; 3/8" lg x 1/16" diam; uninsulated; 2 axial wire leads. | Part of (10:1) Fixed Attenuator CN-136/URM-25 | | | | Pt. # RES-1007 | R803, R804 R805, R806 | 4 |
| R-804 | Same as R803. | Part of (10:1) Fixed Attenuator CN-136/URM-25 | | | | | | |
| R-805 | Same as R803. | Part of (10:1) Fixed Attenuator CN-136/URM-25 | | | | | | |
| R-806 | Same as R803. | Part of (10:1) Fixed Attenuator CN-136/URM-25 | | | | | | |

COMBINED PARTS AND REPAIR PARTS LIST

Section 7

| SWITCHES | | | | | | | | |
|--------------|--|------------------------|-------|------------------|--|-----------------|-----------|---|
| S-101 | SWITCH, toggle: DPST; 5 amps, 125v dc; phenolic body; 1-9/32" lg x 23/32" wd x 31/32" d; 11/16" lg bat type handle; normally open; solder lug term; single hole mtg bushing 15/32"-32, 15/32" lg; spec JAN-S-23. | POWER ON-OFF switch | ST22K | N17-S-73082-9028 | (14) Pt. # ST22K | Pt. # SWT-1 | S101 S106 | 2 |
| S-102 | SWITCH, rotary: 3 pole, 3 position; single section; silver alloy contacts; ceramic body; 1-7/8" diam x 29/32" d; shorting type solder lug terminals; single hole mtg bushing 3/8-32" x 1/4" lg; 1/4" diam flatted metal shaft 3/4" lg. | METER READS switch | | N17-S-62121-3441 | (24) Type HL (special) per Federal Dwg. # 295-171C | Dwg. # 295-171C | S102 | 1 |
| S-103 | SWITCH, rotary: 3 pole, 4 position; single section; silver alloy contacts; ceramic body; 1-7/8" diam x 31/32" d; shorting type; solder lug terminals; single hole mtg; bushing 3/8-32 x 1/4" lg, 1/4" diam flatted metal shaft 7/8" lg. | MOD SELECTOR switch | | N17-S-62206-1751 | (24) Type HL (special) per Federal Dwg. # 295-172A | Dwg. # 295-172A | S103 | 1 |
| S-104 | Not used. | | | | | | | |
| S-105 | SWITCH, rotary: 4 pole 8 position; three section, silver alloy contacts; ceramic body; 2-1/16" diam x 2-17/32" d; shorting type; solder lug term; single, hole mtg; bushing 3/8-32 x 1/4" lg, 1/4" dia flatted metal shaft 2" lg. | FREQUENCY BAND SWITCH | | N17-S-65463-8001 | (24) Type HC (special) per Federal Dwg. # 295-63B | Dwg. # 295-63B | S105 | 1 |
| S-106 | Same as S-101. | XTAL-CAL ON-OFF switch | | | | | | |
| S-107 | SWITCH, rotary: 1 pole 3 position; single section silver alloy contacts; ceramic body; 1-7/8" diam x 29/32" d, shorting type; solder lug term; single hole mtg; bushing 3/8-32 x 1/4" lg; 1/4" diam flatted metal shaft 3/4" lg. | CARRIER RANGE switch | | N17-S-59933 5241 | (24) Type HL (special) per Federal Dwg. # 315-137 | Dwg. # 315-137 | S107 | 1 |
| TRANSFORMERS | | | | | | | | |
| T-201 | TRANSFORMER, power: filament and plate type; 115v 50 to 1600 cyc, single ph; two output windings, secd #1-6.3v at 4 amp, secd #2-450v CT at 75 ma; 1500v RMS ins; vacuum impregnated, sealed in pitch; hermetically sealed rectangular case; 3-3/4" lg x 2-7/8" wd x 3" h less term; four 1/2" h standoff term on irregular mtg/c; four.#8-32 x 1/2" lg mtg bolts on 2-3/8" x 2-3/8" mtg/c; spec MIL-T-27 Grade 1 Class A. | Power transformer | | | (39) per Federal Dwg. # 307-6A | Dwg. # 307-6A | T-201 | 1 |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST-Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|-----------------------|--|---------------------------|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| ELECTRON TUBES | | | | | | | | |
| V-101 | TUBE, electron: dual triode. | Voltmeter bridge | JAN I-A 12AU7 | N16-T- 58241 | | | V101, V102 | 2 |
| V-102 | Same as V-101. | Modulation oscillator | | | | | | |
| V-103 | TUBE, electron: dual diode. | Modulation diode | JAN I-A 6AL5 | N16-T- 56195 | | | V103 | 1 |
| V-104 | TUBE, electron: triode. | Buffer-amplifier | JAN I-A 6J4 | N16-T- 56349 | | | V104 | 1 |
| V-105 | TUBE, electron: diode. | RF diode | JAN I-A 9006 | N16-T- 79006 | | | V105 | 1 |
| V-106 | TUBE, electron: dual triode. | Carrier oscillator | JAN I-A 6J6 | N16-T- 56360 | | | V106 | 1 |
| V-107 | Not used. | | | | | | | |
| V-108 | TUBE, electron: pentagrid converter. | Crystal calibrator | JAN I-A, 6BE6 | N16-T- 56211-50 | | | V108 | 1 |
| V-201 | TUBE, electron: dual diode. | Power supply rectifier | JAN I-A 6X4 | N16-T- 56840 | | | V201 | 1 |
| V-202 | TUBE, electron: gas regulator type. | B+ regulator | JAN I-A OD3/VR150 | N16-T- 53060 | | | V202 | 1 |
| W-101 | CABLE ASSEMBLY, power: type POSJ cable; two #18 AWG stranded conductors; 5 ft 10-1/4" lg, less terminations; one male two contact plug molded at one end, one female two contact plug molded at other end. | AC power line cable | | N17-C- 48225- 4590 | (6) Pt. # 1777 | Pt. # CAB-4 | W101 | 1 |

COMBINED PARTS AND REPAIR PARTS LIST

Section 7

| | | | | | | | | |
|------------------------------|--|--|------------------|------------------|---------------------------|-------------------|------------|---|
| W-102 * | CABLE ASSEMBLY, power: two #20 AWG stranded conductors, synthetic resin insulated, 3000v RMS test, skeleton braid, synthetic jacket; 2 ft lg, excluding terminations; Jones type S-302-CCT connector at one end, other end terminated in two 2" lg tinned leads. | Interconnecting AC power cable | | | (17) Dwg. # 295-240 | Dwg. # 295-240 | W102 | 1 |
| W-103 * | CABLE ASSEMBLY, power: three #20 AWG stranded conductors, synthetic resin insulated, 3000v RMS test, skeleton braid, synthetic jacket; 26" lg, excluding terminations; Jones type P-304 CCT connector at one end; other end terminated in one 2" lg and one 6-1/4" lg tinned leads and tinned braid for ground. | Power supply output power cable | | N17-C-48614-1071 | (17) Dwg. # 295-139 | Dwg. # 295-139 | W103 | 1 |
| W-104 * | CABLE ASSEMBLY, RF: JAN type RG-58A/U cable; 46" lg excluding terminations; 4 ft lg overall; one JAN type UG-88/U connector at each end. | RF output cable | CG-409A/U (4'0") | | (17) Dwg. # 315-243 | Dwg. # 315-243 | W104 | 1 |
| W-105 * | CABLE ASSEMBLY, RF: JAN type RG-58A/U cable, 5" lg excluding terminals; 7" lg overall; one JAN type UG-88/U connector at each end. | Accessory RF output cable | CG-409A/U (0'7") | | (17) Dwg. # 315-247 | Dwg. # 315-247 | W105 | 2 |
| W-106 * | Same as W-105. | Accessory RF output cable | | | | | | |
| W-601 | LEAD, test: one red lead JAN type SRIR-1(7)-20-C-2; one black lead JAN type SRIR-1(7)-20-C-0; 15-3/18" lg each wire less term; one end at each wire term in Mueller type 60 CS alligator clip, other end of red lead connected in series with a parallel combination consisting of one Gudeman type XF-1816 paper capacitor .1 mf and one JAN type CM20D511J capacitor, both capacitors contained in rectangular aluminum case, black lead grounded to case; aluminum capacitor case 3-1/8" lg x 1-1/8" wd x 7/8" h overall, one type UG-185/U connector at one end, 5/32" ID bushing at other end to permit entry of both leads, 1/4" OD vinylite jacks and over both leads extends 9" lg from bushing. | Accessory RF Output test lead with protective capacitor unit | CX-1363/U | | (17) Dwg. # 295-183 | Dwg. # 295-183 | W601 | 1 |
| ELECTRON TUBE SOCKETS | | | | | | | | |
| X-101 | SOCKET, tube: 9 contact miniature; brass saddle top mounting; two 1/8" mtg/c; round plastic body .940" diam less saddle x 5/8" h. | Tube socket for V-101 | TSE9T101 | N16-S-64063-6718 | (11) Pt. # TSE9T101 | Pt. # SKT-5 | X101, X102 | 2 |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST-Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|--|---|------------------------------------|-----------------------------------|--|--|---|-------------------------------------|-----------------------|
| ELECTRON TUBE SOCKETS - Continued | | | | | | | | |
| X-102 | including saddle, less contacts; phosphor bronze silver pltd contacts; without shock shield, with 1/8" diam center shield; with brass saddle for mtg socket and twist lock tube shield; spec JAN-S-28A. Same as X-101. | Tube socket for V-102 | | | | | | |
| X-103 | SOCKET, tube: 7 contact miniature, brass saddle top mounting; two 1/8" diam hole on 7/8" mtg/c; round plastic body .800" diam x 5/8" h including saddle less contacts; phosphor bronze silver pltd contacts; without shock shield, with 1/8" diam center shield, with brass saddle for mounting socket and for mounting twist lock tube shield; spec JAN-S-28A. | Tube socket for V-103 | TSE7101 | N16-S-62603-6692 | (11) Pt. # TSE7T101 | Pt. # SKT-3 | X103, X107 X201 | 3 |
| X-104 | SOCKET, tube: 7 contact miniature; brass saddle top mounting; two 1/8" diam holes on a 7/8" mtg/c; round ceramic body .800" diam x 3/4" h including saddle less contacts; beryllium copper-silver pltd contacts; without shock shield; with .156" OD center shield; with brass saddle for mounting socket and for mounting twist lock shield; spec JAN-S-28A. | Tube socket for V-104 | TSE7T102 (Supersedes S010C) | | (11) Pt. # TSE7T102 | Pt. # SKT-9 | X104, X105, X106, X108 | 4 |
| X-105 | Same as X-104. | Tube socket for V-105 | | | | | | |
| X-106 | Same as X-104. | Tube socket for V-106 | | | | | | |
| X-107 | Same as X-103. | Socket for R-156 ballast regulator | | | | | | |
| X-108 | Same as X-104. | V-108 tube socket | | | | | | |

COMBINED PARTS AND REPAIR PARTS LIST

Section 7

| | | | | | | | | |
|-----------------------------|--|--|---|------------------|---|---|-------|---|
| X-109 | SOCKET, crystal: copper, silver pltd; stea. tire insulation: 55/64" lg 3/8" wd x 3/8" h excluding term. | Socket for crystal Y-101 | | | (40) Pt. #9006 | Pt. # SKX-1 | X-109 | 1 |
| X-201 | Same as X-103. | Tube socket for V-201 | | | | | | |
| X-202 | SOCKET, tube: octal; one piece saddle mtg; two .156" diam holes on 1-1/2" mtg/c; round phenolic body 1-3/8" diam x 5/8" h excluding term; phosphor bronze silver pltd contacts ;spec JAN-S-28A. | Tube socket for V-202 | TSB8T101 | N16-S-63515-4151 | (11) Pt. # TSB8T101 | Pt. # SKT-4 | X202 | 1 |
| CRYSTAL | | | | | | | | |
| Y-101 | CRYSTAL UNIT, quartz: one quartz plate, nominal frequency 1 mc; two .05" diam contact pins spaced 0.486" C to C on bottom; rectangular metal body 3/4" lg x 11/32" wd x 25/32" h; not adjustable. | Crystal calibrator (V-108) Crystal | CR-18/U | (2X209-100) | (41) CR-18/U | Pt. # CUQ-3 | Y-101 | 1 |
| FILTERS | | | | | | | | |
| Z-101 | FILTER, Low pass: 1 mc cutoff; 3-5/8" lg x 3/4" wd x 3/4" h; tubular brass silver pltd; four #3-56 tapped holes on 1/2" x 1/2" mtg/c; one integral type UG-290/U connector at one end, one solder lug term at other. | External mod. Input RF Filter | | N16-F-44311-7191 | (17) Dwg. # 307-348 | Dwg. # 307-348 | Z-101 | 1 |
| Z-102 | FILTER, low pass: 1 mc cut-off; 2-7/8" lg x 3/4" wd x 3/4" h; tubular, brass silver pltd; four 0.116" diam holes on 0.531" x 0.531" mtg/c; two solder lug term. | RF Filter for E-128 thru E-130 | | N16-F-44311-7181 | (17) Dwg. # 307-345 | Dwg. # 307-345 | Z-102 | 1 |
| ACCESSORY COMPONENTS | | | | | | | | |
| | CONNECTOR, adapter: 1 round female coaxial contact one end, 1 phone jack other end; straight type; 1 13/16" lg x 1 1/16" diam o/a; cylindrical aluminum body, locking type; mounts when locked to JAN UG-88/U connector; marked Connector Adapter UG-684/U. ADAPTER, connector, (described under Sym No. P-701). ATTENUATOR, fixed: T network; carbon; input and output impedance 53.5 ohms ± 3%; 14 db attenuation when terminated in 53.5 ohms; enclosed rectangular aluminum case 2" lg x 1 3/16" wd x 7/8" h excluding term; mounts by one type UG-185/U connector at each end; marked (5:1) Fixed Attenuator CN-132/URM-25. | Adapter from BNC jack (JAN UG-88/U) to phone plug (JAN PJ-055) BNC to N adapter 5:1 Fixed Attenuator | A-N type UG-684/U AN type UG-201/U AN type CN-132/URM-25 | | (17) Pt. # ASB-2 (17) Dwg. # 295-226 | Pt. # ASB-2 Dwg. # 295-226 | | |

TABLE 7-4. COMBINED PARTS AND SPARE PARTS LIST-Continued

| SYMBOL DESIG. | NAME OF PART AND DESCRIPTION | FUNCTION | JAN. AND (NAVY TYPE) NO. | STANDARD NAVY AND (SIGNAL CORP.) STOCK NO. | MFGR. AND MFGR'S DESIG. NATION | CON- TRACTOR DRAW- ING AND PART NO. | ALL SYMBOL DESIG. INVOLVED | QUAN PER EQUIP. |
|--|---|--|--|--|--|---|-------------------------------------|-----------------------|
| ACCESSORY COMPONENTS -- Continued | | | | | | | | |
| | <p>ATTENUATOR: fixed: T network; carbon; input and output impedance 53.5 ohms ± 3% 20 db attenuation when terminated in 53.5 ohms; enclosed rectangular aluminum case 2" lg x 1 3/16" wd x 7/8" h excluding termination; mounts by one type UG-185/U connector at each end; marked (10:1) Fixed Attenuator CN-136/URM-25.</p> <p>LEAD, test: (described under Sym No. W-601).</p> <p>LOAD, dummy: consists of inductance L-401 capacitors C-401 and C-402 and resistor R-401; enclosed rectangular aluminum case 2" lg x 1 3/16" wd x 7/8" h excluding terminations; mounts by one type UG-185/U connector at each end; marked Antenna Simulator SM-35/URM-25.</p> <p>MATCHING UNIT, impedance: consists of one 53.5 ohm ± 1%, 1/4 w, composition resistor; enclosed rectangular aluminum case 2" lg x 1 3/16" wd x 7/8" h; mounts by one type UG-185/U connector at each end; marked Impedance Adapter MX-1074/URM-25.</p> | <p>10:1 Fixed Attenuator</p> <p>Output test lead with protective capacitor unit</p> <p>Dummy Antenna</p> <p>External 53.5 ohm termination unit</p> | <p>AN type CN-136/ URM-25</p> <p>AN type CX-1363/U</p> <p>AN type SM-35/URM- 25</p> <p>AN type MX-1074/ URM-25</p> | | <p>(17) Dwg. # 295-307</p> <p>(17) Dwg. # 295-233</p> <p>(17) Dwg. # 295-230</p> | <p>Dwg. # 295-307</p> <p>Dwg. # 295-233</p> <p>Dwg. # 295-230</p> | | <p>1</p> |

PARTS LIST

Section 7


TABLE 7-5. CROSS REFERENCE PARTS LIST

| JAN (OR AWS) | KEY SYMBOL | JAN (OR AWS) | KEY SYMBOL | STANDARD NAVY STOCK NO. | KEY SYMBOL | STANDARD NAVY STOCK NO. | KEY SYMBOL | STANDARD NAVY STOCK NO. | KEY SYMBOL |
|----------------|------------|------------------|-------------------|-------------------------|------------|-------------------------|------------|-------------------------|------------|
| CC21CK020C | C114 | UG-88/U | P103 | N16-A-98018-1001 | E112 | N16-K-700302-606 | E101 | N16-S-34607-8400 | E122 |
| CC21CK120J | C152 | UG-185/U | J301 | N16-C-11943-2485 | W-105 | N16-K-700374-431 | E105 | N16-S-89724-8801 | E127 |
| CC21S100D | C145 | UG-201/U | P701 | N16-C-11944-1750 | W-104 | N16-M-16001-1002 | H101 | N16-S-117101-335 | N102 |
| CC26SL510J | C126 | UG-290/U | J101 | N16-C-15431-5525 | C140 | N16-R-29253-7622 | L201 | N16-S-89924-7460 | E127 |
| CE41C250J | C115 | UG-291/U | J102 | N16-C-15432-5867 | C114 | N16-R-403561-116 | N101 | N16-T-53060 | V202 |
| CM20B271J | C153 | | | N16-C-15916-9005 | C145 | N16-R-49283-101 | R801 | N16-T-56349 | V104 |
| CM20B301J | C144 | | | N16-C-15953-5399 | C152 | N16-R-49579-0431 | R135 | N16-T-56360 | V106 |
| CM20D120G | C101 | | | N16-C-16596-2514 | C126 | N16-R-49597-0431 | R159 | N16-T-56840 | V201 |
| CM20D201J | C401 | | | N16-C-16669-3500 | C141 | N16-R-49921-0431 | R167 | N16-T-58241 | V101 |
| CM20D391G | C402 | | | N16-C-18657-8801 | C110 | N16-R-49966-0431 | R137 | N16-T-79006 | V105 |
| CM20D511J | C112 | | | N16-C-18659-7701 | C125 | N16-R-49984-0431 | R106 | N17-C-48225-4590 | W101 |
| CM25B102K | C147 | | | N16-C 19788-8925 | C115 | N16-R-50011-0431 | R124 | N17-C-98378-4107 | O109 |
| CM30B202K | C103 | | | N16-C-29265-3006 | C401 | N16-R-50020-0431 | R116 | N17-C-200964-601 | O107 |
| CM35B622J | C113 | | | N16-C-29608-2196 | C153 | N16-R-50128-0431 | R162 | N17-C-67990-2447 | P701 |
| CN22A103M | C154 | | | N16-C-29660-8996 | C144 | N16-R-50353-0431 | R130 | N17-C-71126-4813 | P101 |
| CN43E104M | C104 | | | N16-C-29893-2126 | C402 | N16-R-50362-0431 | R105 | N17-C-71408-4241 | P103 |
| CP40C2FF405K | C201 | | | N16-C-301069-628 | H102 | N16-R-50407-0751 | R118 | N17-C-71480-2351 | P102 |
| CV12A250 | C151 | | | N16-C-30188-5066 | C112 | N16-R-50497-0431 | R115 | N17-C-73108-1262 | J102 |
| RC20BF101J | R135 | | | N16-C-31080-2522 | C101 | N16-R-50569-0431 | R138 | N17-C-73108-1267 | J101 |
| RC20BF102J | R167 | | | N16-C-31090-4472 | C147 | N16-R-50632-0431 | R108 | N17-C-73108-2028 | J301 |
| RC20BF104J | R108 | | KEY SYMBOL | N16-C-32193-2484 | C103 | N16R-R-50740-0431 | R112 | N17-C-73185-1208 | J202 |
| RC20BF105J | R120 | NAVY TYPE | | N16-C-32905-4328 | C113 | N16-R-50839-0431 | R107 | N17-C-73425-8451 | J201 |
| RC20BF121J | R159 | | | N16-C-45773-5720 | C601 | N16-R-50974-0431 | R120 | N17-C-73439-4929 | J104 |
| RC20BF152J | R137 | | | N16-C-45805-6200 | C104 | N16-R-51064-0431 | R164 | N17-C-802556-975 | O111 |
| RC20BF182J | R106 | 28053-1 | F101 | N16-C-45963-8500 | C204 | N16-R-651091-190 | O105 | N17-F-14310-380 | F101 |
| RC20BF183J | R130 | 49496 | H102 | N16-C-49958-5145 | C201 | N16-R-651091-191 | O106 | N17-F-74267-5701 | E115 |
| RC20BF203J | R105 | | | N16-C-61910-9901 | C127 | N16-R-72860-7476 | R501 | N17-I-49969-8501 | E110 |
| RC20BF222J | R124 | | | N16-C-63960-2508 | C128 | N16-R-72865-7451 | R149 | N17-L-250627-770 | I-102 |
| RC20BF225J | R164 | | | N16-C-64041-4505 | C151 | N16-R-72872-9761 | R150 | N17-L-76664-6500 | I-101 |
| RC20BF242J | R116 | | | N16-C-71694-3418 | L105 | N16-R-72943-7721 | R401 | N17-M-29400-5001 | M101 |
| RC20BF274J | R112 | | | N16-C-72826-4658 | L104 | N16-R-72952-3901 | R143 | N17-P-69135-6205 | E106 |
| RC20BF472J | R162 | | | N16-C.73039-9400 | L115 | N16-R-72953-6911 | R141 | N17-S-46702-2301 | O113 |
| RC20BF513J | R115 | | | N16-C-73292-4516 | L401 | N16-R-72956-3876 | R144 | N17-S-59933-5241 | S104 |
| RC20BF514J | R107 | | KEY SYMBOL | N16-C-76284-8840 | L106 | N16-R-73210-1101 | R101 | N17-S-62121-3441 | S102 |
| RC20BF753J | R138 | | | N16-C-76433-8880 | L107 | N16-R-73259-5801 | R102 | N17-S-62206-1751 | S103 |
| RC30BF303J | R118 | | | N16-C-76662-8273 | L108 | N16-R-85001-1676 | R156 | N17-S-65463-8001 | S105 |
| RC42BF150J | R157 | | | N16-C-76726-2801 | L119 | N16-R-87349-4350 | R133 | N17-S-73082-9028 | S101 |
| RW20G182-ST22K | R201 | CG-409A/U(4'0") | W104 | N16-C-76771-5846 | L110 | N16-R-87419-4350 | R113 | G17-L-6297 | E126 |
| TSB8T101 | X202 | CG-409A/U(0'7") | W100 | N16-C-76818-5569 | L111 | N16-R-87749-4560 | R110 | G17-L-6543-100 | E128 |
| TSE7T101 | X103 | CR-18/U | Y101 | N16-C-76858-9469 | L112 | N16-R-88009-4164 | R111 | G41-W-2445 | H103 |
| TSE7T102 | X104 | CW-123/U | O107 | N16-D-46338-9301 | I105 | N16-R-88915-7601 | R155 | G41-W-2446 | H104 |
| TSE9T101 | X101 | | | N16-D-46339-5524 | I104 | N16-R-91568-8175 | R123 | | |
| TSF0T101 | E119 | | | N16-D-46344-4722 | I103 | N16-S-34520-3862 | E119 | | |
| TSF0T102 | E121 | | | N16-G-431375-960 | O101 | N16-S-34557-8350 | E121 | | |
| TSF0T103 | E122 | | | N16-G-433296-209 | O104 | N16-S-34596-6513 | E123 | | |
| TSF0T105 | E123 | | | N16-G-500001-230 | O102 | | | | |
| | | | | N16-G-500001-231 | O103 | | | | |


TABLE 7-6. APPLICABLE COLOR CODES AND MISCELLANEOUS DATA

CAPACITOR COLOR CODES


RMA 3-DOT COLOR CODE FOR MICA-DIELECTRIC CAPACITORS

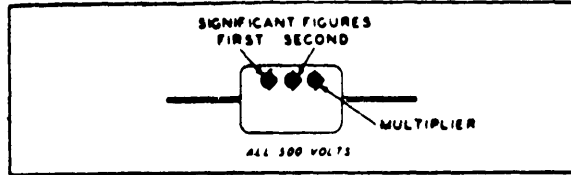


JAN 6-DOT COLOR CODE FOR PAPER-DIELECTRIC CAPACITORS

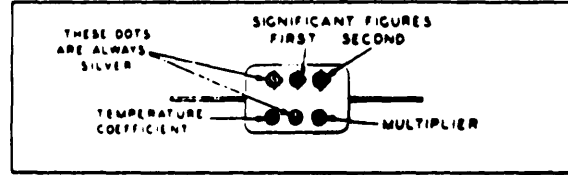


RMA 6-DOT COLOR CODE FOR MICA-DIELECTRIC CAPACITORS

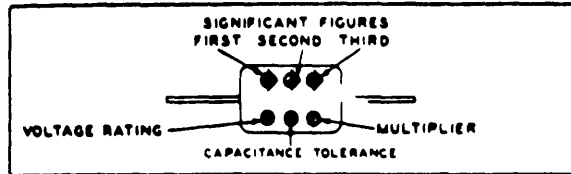



JAN 6-DOT COLOR CODE FOR MICA-DIELECTRIC CAPACITORS

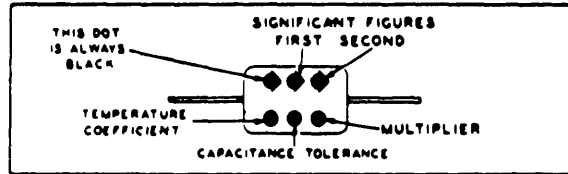

RMA COLOR CODE FOR TUBULAR CERAMIC-DIELECTRIC CAPACITORS

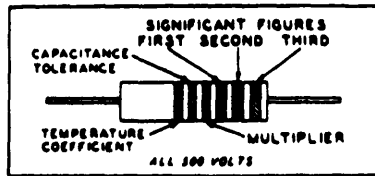

JAN COLOR CODE FOR FIXED CERAMIC-DIELECTRIC CAPACITORS

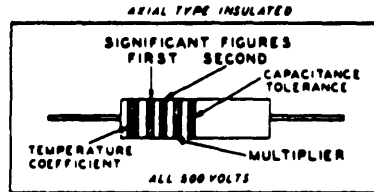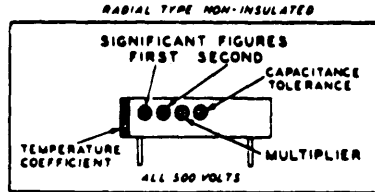


RMA: RADIO MANUFACTURERS ASSOCIATION
JAN: JOINT ARMY-NAVY


| RESISTORS | | | | CAPACITORS | | | | |
|-----------|------------|--------------------|----------|---------------------------------|-------------------------------|------------------------|----------------|-------------------------|
| TOLERANCE | MULTIPLIER | SIGNIFICANT FIGURE | COLOR | MULTIPLIER | | | VOLTAGE RATING | TEMPERATURE COEFFICIENT |
| | | | | RMA MICA AND CERAMIC-DIELECTRIC | JAN MICA AND PAPER-DIELECTRIC | JAN CERAMIC DIELECTRIC | | |
| | 1 | 0 | BLACK | 1 | 1 | 1 | | A |
| | 10 | 1 | BROWN | 10 | 10 | 10 | 100 | B |
| | 100 | 2 | RED | 100 | 100 | 100 | 200 | C |
| | 1000 | 3 | ORANGE | 1000 | 1000 | 1000 | 300 | D |
| | 10000 | 4 | YELLOW | 10000 | | | 400 | E |
| | 100000 | 5 | GREEN | 100000 | | | 500 | F |
| | 1000000 | 6 | BLUE | 1000000 | | | 600 | G |
| | 10000000 | 7 | VIOLET | 10000000 | | | 700 | |
| | 100000000 | 8 | GRAY | 100000000 | | 0.01 | 800 | |
| | 1000000000 | 9 | WHITE | 1000000000 | | 0.1 | 900 | |
| 5 | 0.1 | | GOLD | 0.1 | 0.1 | | 1000 | |
| 10 | 0.01 | | SILVER | 0.01 | 0.01 | | 2000 | |
| Ø | | | NO COLOR | | | | 500 | |

RESISTOR COLOR CODES

RMA COLOR CODE FOR FIXED COMPOSITION RESISTORS

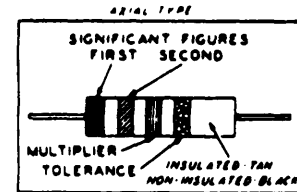


RADIAL TYPE

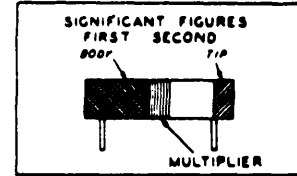

JAN COLOR CODE FOR FIXED COMPOSITION RESISTORS

AXIAL TYPE INSULATED

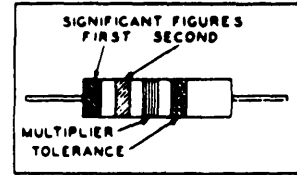

RADIAL TYPE NON-INSULATED

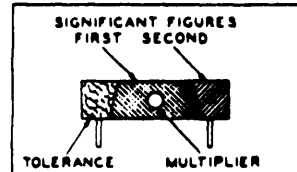


TABLE 7-7. LIST OF MANUFACTURERS

| ABBREVIATIONS | PREFIX | NAME | ADDRESS | ABBREVIATIONS | PREFIX | NAME | ADDRESS |
|---------------|--------|---|-------------------------|---------------|--------|------------------------------------|---------------------|
| 1 | CPH | Aerovox Corp., | New Bedford, Mass. | 22 | CJC | Jones, Howard B. | Chicago, Ill. |
| 2 | CBZ | Allen-Bradley Co. | Milwaukee, Wisc. | 23 | CAUP | Kurz-Kasch, Inc. | Dayton, Ohio |
| 5 | CPH | American Phenolic Corp. | Chicago, Ill. | 24 | COC | Oak Mfg. Co. | Chicago, Ill. |
| 4 | CAGK | Amperite Co. | New York, N. Y. | 25 | CRK | Radio Condenser Co. | Camden, N. J. |
| 5 | | Atlantic India Rubber Works | Chicago, Ill. | 26 | CSF | Sprague Specialties Co. | N. Adams, Mass. |
| 6 | CQG | Belden Mfg. | Chicago, Ill. | 27 | CSA | Stackpole Carbon Co. | St. Marys, Pa |
| 7 | CAIS | Birtcher Corp. | Los Angeles, Calif. | 28 | CABU | Superior Electric Co. | Bristol, Conn. |
| 8 | CFA | Bussman Mfg. Co. | St. Louis, Mo. | 29 | CHS | Sylvania Electric Products, Inc. | Emporium, Pa. |
| 9 | CAMQ | Cambridge Thermionic Corp. | Cambridge, Mass. | 30 | CUT | United Transformer Corp. | New York, N. Y. |
| 10 | CBN | Central Radio Lab. Div. of Globe Union | Milwaukee, Wisc. | 31 | CV | Weston Electrical Instrument Corp. | Newark, N. J. |
| 11 | CMG | Cinch Mfg. Co. | Chicago, Ill. | 32 | CBIQ | Wilkor Products | Cleveland, Ohio |
| 12 | CMC | Clarostat Mfg. Co. | Brooklyn, N. Y. | 33 | CAYZ | Dial Light Corp. | New York, N. Y. |
| 13 | CD | Cornell-Dubilier | South Plainfield, N. J. | 34 | CAO | Ward Leonard Co. | Mount Vernon, N. Y. |
| 14 | CAB | Cutler-Hammer, Inc. | Milwaukee, Wisc. | 35 | COM | Ohmite Mfg. Co. | Chicago, Ill. |
| 15 | | Eaton Mfg. Co., Stumping Division | Detroit, Mich. | 36 | | Herzog Miniature Lamp Works | New York, N. Y. |
| 16 | CER | Erie Resistor Corp. | Erie, Pa | 37 | CBIT | Mueller Electric Co. | Cleveland, Ohio |
| 17 | CFD | Federal Mfg. & Eng. Corp. | Brooklyn, N. Y. | 38 | CGF | Gudeman Co. | Chicago, Ill. |
| 18 | CHC | Hammerlund Mfg. Co. | New York, N. Y. | 39 | CFX | Freed Transformer Co. | New York, N. Y. |
| 19 | CBEJ | Harnett Electric Corp. | Port Washington, N. Y. | 40 | CEB | Eby, Hugh, Inc. | Philadelphia, Pa. |
| 20 | CARD | Industrial Products Co. | Danbury, Conn. | 41 | CUR | Reeves-Hoffman Corp. | New York, N. Y. |
| 21 | CIR | International Resistance Corp. | Philadelphia Pa. | 42 | CAYT | Allen Mfg. Co. | Hartford, Conn. |
| | | | | 43 | | Elastic Tip Co. | |

INDEX

| SUBJECT | FIGURE OR TABLE | PARAGRAPH | PAGE |
|--|--------------------|-------------|-----------|
| A | | | |
| Adjusting Carrier Frequency..... | | 4-4 | 4-2 |
| Adjusting Output Voltage..... | | 4-6 | 4-3 |
| Adjusting the RF Coils..... | | See RF | |
| Adjusting the Trimmer Capacitors..... | | See Trimmer | |
| Adjustments (Preliminary)..... | | 3-3 | 3-1 |
| Adjustments, Voltmeter Bridge..... | | 2-5d | 2-6 |
| Antenna Electrical Constants, Standard..... | | 4-14f | 4-8 |
| Antenna Simulator SM-35/URM-25..... | | 2-11 | 2-12 |
| Antenna Simulator SM-35/URM-25, Use of..... | | 4-10 | 4-5 |
| Attenuator CN-132/URM-25, (5:1) Fixed..... | | 2-9 | 2-11 |
| Use of..... | | 4-11 | 4-5 |
| With schematic diagram shown..... | 2-15 | | 2-11 |
| Attenuator CN-136/URM-25, (10:1) Fixed..... | | 2-10 | 2-11 |
| Use of..... | | 4-12 | 4-6 |
| Attenuator, Variable RF..... | | 2-6 | 2-7 |
| Audio Output..... | | 2-4b | 2-3 |
| Audio Response..... | | 4-14b(4) | 4-7 |
| B | | | |
| Buffer-Amplifier..... | | 2-3 | 2-2 |
| Buffer-Amplifier, Replacing Circuit Components..... | | 6- 7 | 6-3 |
| C | | | |
| Calibration Chart, Frequency..... | 6-1 | | 6-5 |
| Calibration Data, Frequency..... | 6-1 | | 6-5 |
| Calibration, Percentage Modulation..... | | 6-10d | 6-9 |
| Calibration Procedure, Frequency..... | | 6-9 | 6-5 |
| Calibration, Readjustment of Frequency..... | | 6-8 | 6-5 |
| Calibration, RF Output Voltage..... | | 6-10c | 6-9 |
| Calibrating the Electron Tube Voltmeter..... | | 4-3, 6-10 | 4-1, 6-8 |
| Calibrating the Step Attenuator..... | | 6-11 | 6-10 |
| Carrier Oscillator..... | | 2-2 | 2-1 |
| Chart of Suggested Tests for Locating the Specific Trouble..... | | See Tests | |
| Controls, Operational Summary of Front Panel..... | 4-1 | | 4-0 |
| Coupling to the Receiver Under Test..... | | 4-9 | 4-4 |
| Cross Reference Between Symbol Number and Figure Location..... | 6-8 | | 6-34 |
| Cross Reference Parts List..... | 7-5 | | 7-37 |
| Crystal Calibrator (Operation)..... | | 4-5 | 4-2 |
| Crystal Calibrator (Theory)..... | | 2-7 | 2-9 |
| Crystal Calibrator (Trouble Shooting)..... | 6-2, 6-3, | | 6-12 6-13 |
| D | | | |
| Detailed Description-General Description..... | | 1-3 | 1- 1 |
| Diagram: | | | |
| Antenna Simulator SM-35/URM-25 with Input Impedance- Frequency Curve..... | 2-16 | | 2-12 |
| Attenuator, RF Variable..... | 2-8 | | 2-7 |
| Buffer-Amplifier, Simplified Schematic..... | 2-3 | | 2-2 |
| Carrier Oscillator, Simplified Schematic..... | 2-2 | | 2-1 |
| Modulation Diode, Simplified Schematic..... | 2-6 | | 2-5 |
| Modulation Oscillator, Simplified Schematic..... | 2-4 | | 2-4 |
| Power Supply PP-5(2A/tJRM-25, Schematic..... | 2-18 | | 2-13 |
| RF Diode, Simplified Schematic..... | 2-5 | | 2-5 |

| SUBJECT | FIGURE OR TABLE | PARAGRAPH | PAGE |
|--|--------------------|--------------------------------------|-------|
| Voltmeter Bridge Circuit, Simplified Schematic | 2-7 | | 2-6 |
| RF Signal Generator SG-44B/URM-25, Functional Block | 2-1 | | 2-0 |
| E | | | |
| Electron Tube Complement..... | 1-3 | 1-4 | 1-2 |
| Electron Tube Voltmeter..... | | 2-5 | 2-4 |
| Electron Tube Voltmeter, Calibrating the | | See Calibrating | |
| Equipment Supplied..... | 1-1 | | 1-2 |
| Equivalent Circuit of X MULT RF OUTPUT (J102) with Impedance Adapter MX-1074/URM-25 Added | 2-11 | | 2-8 |
| Equivalent Circuit of X MULT RF OUTPUT (J102) with Series Matching Resistor Added..... | 2-13 | | 2-10 |
| Equivalent Circuit of X MULT RF OUTPUT (J102) with Shunt Resistor Added..... | 2-14 | | 2-10 |
| External Modulation | | See Modulation | |
| F | | | |
| Failure Report, Sample Form | 6-1 | | 6-0 |
| (5:1) Fixed Attenuator CN-132/URM-25 with Schematic Diagram Shown | | See Attenuator | |
| Frequency Calibration Chart..... | | See Calibration | |
| Frequency Calibration Data..... | | See Calibration | |
| Frequency Calibration Procedure | | See Calibration | |
| Frequency Range..... | | 1-2h | 1-1 |
| Fuse Failure, Indications of | 5-2 | | 5-3 |
| Fuse Locations | 5-3 | | 5-3 |
| G | | | |
| General Chart of Test Procedure..... | | See Test | |
| General Description of Circuits-Theory of Operation..... | | 2-1 | 2-0 |
| General Instructions for Use..... | | See Instructions | |
| Guarantee..... | | | ii |
| I | | | |
| Impedance Adapter MX-1074/URM-24 | | 2-8f | 2-9 |
| Impedance Adapter MX-1074/URM-25 ,(Diagram)..... | 2-10 | | 2-8 |
| Impedance Adapter MX-1074/URM.-25, Method for Inserting at J1022-12 | |2-10 | |
| Incidental Frequency Modulation..... | | See Modulation; Incidental Frequency | |
| Installation | | 3-2 | 3-1 |
| Installation Record..... | | | iv |
| Instructions for Use, General..... | | 4-14 | 4-7 |
| Internal Modulation | | See Modulation | |
| Introduction-General Description..... | | 1-1 | 1-1 |
| L | | | |
| List of Effective Pages..... | | | A |
| List of Illustrations..... | | | i, ii |
| List of Major Units..... | | See Major | |
| List of Manufacturers | 7-7 | | 7-39 |
| List of Tables | | | i |
| Lubrication..... | | 5-3 | 5-1 |

| SUBJECT | FIGURE OR TABLE | PARAGRAPH | PAGE |
|---|--------------------|---|------|
| M | | | |
| Maintenance Check Chart, Routine | 5-1 | | 5-1 |
| Major Units, List of | 7-3 | | 7-1 |
| Measuring Receiver Gain Per Stage | | See Receiver | |
| Method for Inserting Impedance Adapter MX-1074/URM-25 at J102 | | See Impedance Adapter MX-1074/URM-25, Method for Inserting at J102 | |
| Methods for Correctly Terminating the Signal Generator at J102 | | See Terminating | |
| Modulated Operation | | 4-14c | 4-8 |
| Modulation, External | | 4-8 | 4-4 |
| Modulation, Incidental Frequency | | 2-14 | 2-14 |
| Modulation, Internal | | 4-7 | 4-4 |
| Modulation, Types of | | 1-2j | 1-1 |
| Modulation Diode | | 2-5b | 2-5 |
| Modulation Oscillator | | 2-4 | 2-3 |
| O | | | |
| Operation, Summary of | | 4-13 | 4-7 |
| Operational Summary of Front Panel Controls | | See Controls | |
| Ordering Parts | | See Parts | |
| Outline Dimensional Drawing, RF Signal Generator Set AN/URM-25B | | See RF Signal Generator Set AN/URM-25B, Outline Dimensional Drawing | |
| P | | | |
| Parts, Ordering | | | iv |
| Parts, Removal and Replacement of | | 6-5 | 6-2 |
| Parts and Spare Parts List, Combined | 7-4 | | 7-2 |
| Percentage Modulation Calibration | | See Calibration | |
| Power Supply PP-562A/URM-25 | | 2-13 | 2-12 |
| Promulgating Letter | | | B |
| R | | | |
| Rated Tube Characteristics | | See Tube | |
| Readjustment of Frequency Calibration | | See Calibration | |
| Receiver Alignment | | 4-4b(6) | 4-7 |
| Receiver Alignment Above 50 Megacycles | | 4-14b(7) | 4-8 |
| Receiver Coupling | | See Coupling | |
| Receiver Gain Per Stage, Measuring | | 4-14b(5) | 4-7 |
| Receiver Output | | 4-14d | 4-8 |
| Receiver Overall Sensitivity | | 4-14e | 4-8 |
| Receiver Tests | | 4-14b | 4-7 |
| Record of Corrections Made | | | C |
| Removal and Replacement of Parts | | See Parts | |
| Removing the Signal Generator and Power Supply from the Cabinet | | 6-4 | 6-1 |
| Replacing Buffer-Amplifier Circuit Components | | See Buffer | |
| Replacing RF Oscillator Components | | See RF | |
| Report of Failure | | | iv |
| Resuscitation | | | v |
| RF Coils, Adjusting the | | 6-9c | 6-7 |
| RF Diode 2-5a | | 2-4 | |
| RF Oscillator, Replacing Circuit Components | | 6-6 | 6-2 |
| RF Output Voltage Calibration | | See Calibration | |
| RF Signal Generator Set AN/URM-25B, Complete Equipment | 1-1 | | 1-0 |

INDEX

| SUBJECT | FIGURE OR TABLE | PARAGRAPH | PAGE |
|---|--------------------|-----------------|------|
| RF Signal Generator SG-44B/URM-25, Functional Block Diagram | | See Diagram | |
| RF Signal Generator Set AN/URM-25B, Outline Dimensional Drawing.. | 3-2 | | 3-0 |
| RF Signal Generator Set AN/URM-25B, Unpacking Procedure for Sets Shipped with Equipment Spares | | See Unpacking | |
| Routine Maintenance Check Chart | | See Maintenance | |
| S | | | |
| Safety Notice | | | v |
| Schematic Diagram of the Antenna Simulator SM-35/URM-25 with Input Impedance-Frequency Curve | | See Diagram | |
| Selectivity | | 4-14b(3) | 4-7' |
| Sensitivity | | 4-14b(2) | 4-7 |
| Shipping Data | 1-2 | | 1-2 |
| Step Attenuator, Calibrating the | | See Calibrating | |
| Standard Antenna Electrical Constants | | See Antenna | |
| Summary of Operation..... | | See Operation | |
| T | | | |
| Table of Contents..... | | | i |
| Terminating the Signal Generator..... | | 2-8 | 2- 9 |
| Terminating the Signal Generator at)102, Methods for Correctly..... | 4-2 | | 4-3 |
| Test Equipment for Making Repairs..... | | 6-3 | 6-1 |
| Tests for Locating the Specific Trouble, Chart of Suggested | 6-4 | | 6-14 |
| Test Lead CX-1363/U..... | | 2-12 | 2-12 |
| Test Procedure for Localizing Trouble, Chart of General..... | 6-3 | | 6-13 |
| Trimmer Capacitors, Adjusting the | | 6-9d | 6-7 |
| Trouble Symptom Chart..... | 6-2 | | 6-12 |
| Tube Characteristics, Rated | 6-6 | | 6-29 |
| Tube Operating Voltages and Currents..... | | See Voltages | |
| Tube Socket Electrical Measurements..... | | 6-14 | 6-10 |
| Tuning Bands and Range of Each Band | | 1-2i | 1-1 |
| Types of Modulation..... | | See Modulation | |
| U | | | |
| Unpacking | | 3-1 | 3-0 |
| Unpacking Procedure, RF Signal Generator Set AN/URM-25B | 3-1 | | 3-0 |
| Use of (5:1) Fixed Attenuator CN-132/URM-25 | | See Attenuator | |
| Use of (10:1) Fixed Attenuator CN-136/URM-25 | | See Attenuator | |
| V | | | |
| Variable RF Attenuator..... | | See Attenuator | |
| Variable RF Attenuator, Schematic Diagram | | See Diagram | |
| Voltages and Currents, Tube Operating..... | | 6-13 | 6-10 |
| Voltage Correction at High Frequencies | | 4-6c | 4-4 |
| Voltmeter Bridge Adjustments | | See Adjustments | |
| Voltmeter Bridge Circuit | | 2-5c | 2-6 |
| Voltmeter Used as Output Meter | | 4-14h | 4-8 |
| W | | | |
| Winding Data..... | | 6-15 | 6-10 |
| Winding Data (Table)..... | 6-7 | | 6-30 |

[AG 413.44 (3 Nov 53)]

BY ORDER OF THE SECRETARY OF THE ARMY:

M. B. RIDGWAY,
General, United States Army,
Chief of Staff

OFFICIAL:

WM. E. BERGIN,
Major General, United State Army,
The Adjutant General.

DISTRIBUTION

None.

☆U.S. GOVERNMENT PRINTING OFFICE : 1994 O - 300-421 (82612)

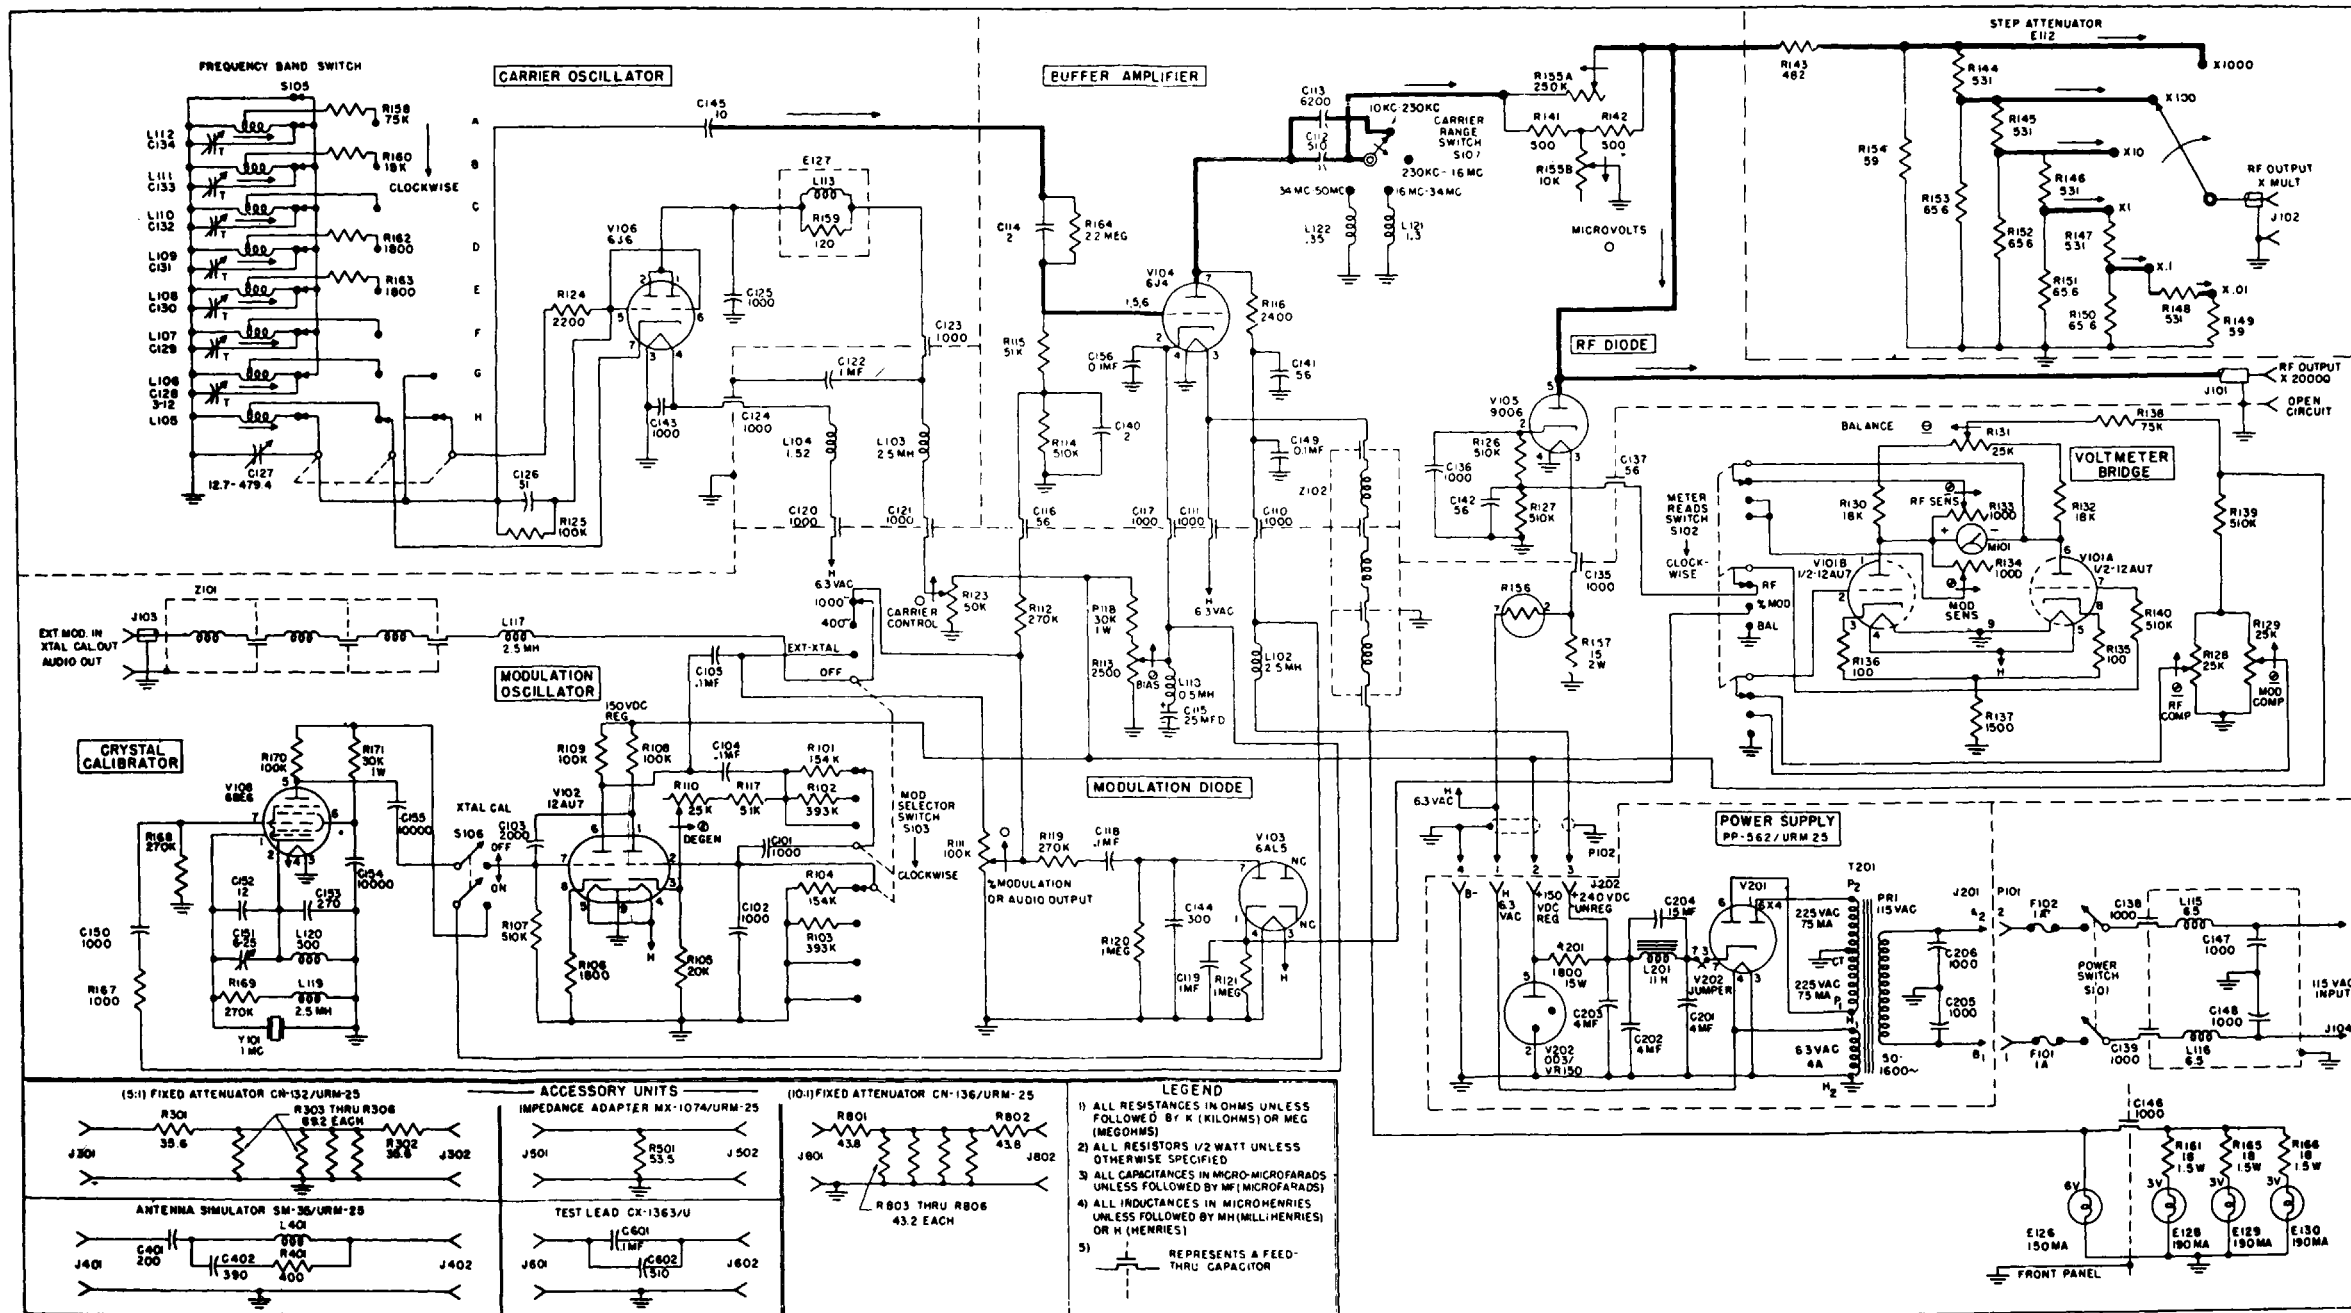


Figure 6-23. RF Signal Generator Set AN/URM-25B, Overall Schematic Diagram.

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS

SOMETHING WRONG WITH THIS PUBLICATION?



THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE

BE EXACT... PIN-POINT WHERE IT IS

| PAGE NO. | PARA-GRAPH | FIGURE NO. | TABLE NO. |
|----------|------------|------------|-----------|
|----------|------------|------------|-----------|

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 2028-2
1 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE.

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

PIN NO: 029333-000