


# Robust Control Toolbox™

## Reference

**R2014a**

*Gary Balas  
Richard Chiang  
Andy Packard  
Michael Safonov*

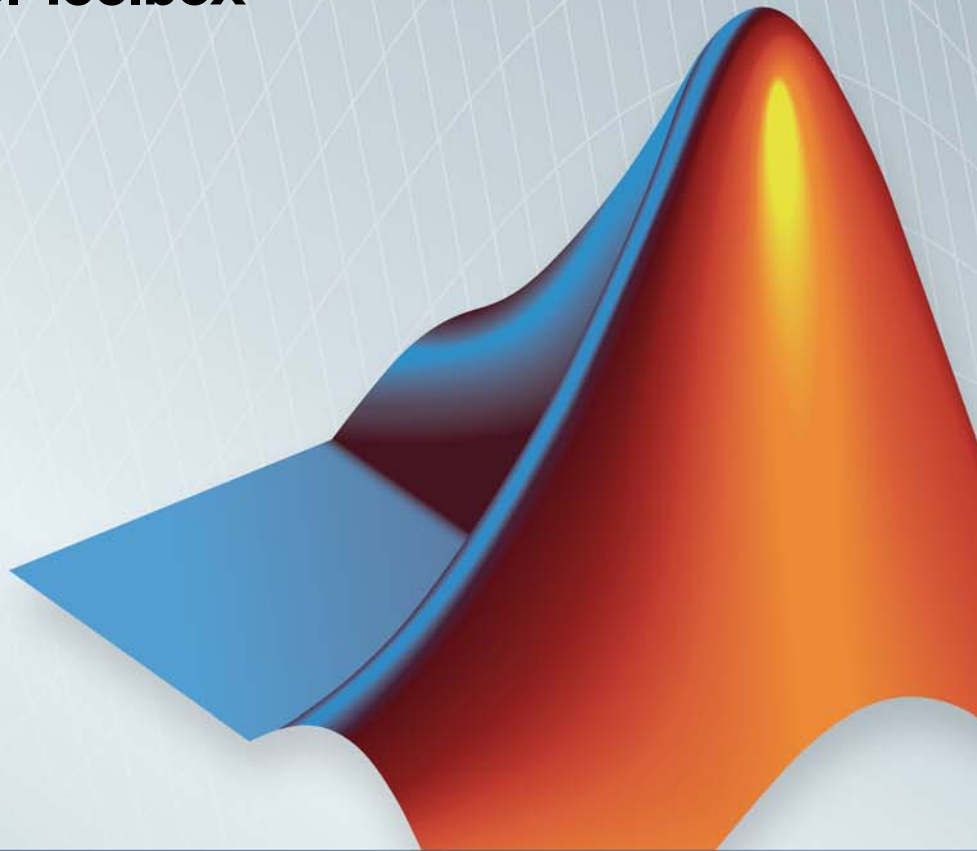

# MATLAB®

## How to Contact MathWorks



[www.mathworks.com](http://www.mathworks.com) Web  
[comp.soft-sys.matlab](mailto:comp.soft-sys.matlab) Newsgroup  
[www.mathworks.com/contact\\_TS.html](http://www.mathworks.com/contact_TS.html) Technical Support



[suggest@mathworks.com](mailto:suggest@mathworks.com) Product enhancement suggestions  
[bugs@mathworks.com](mailto:bugs@mathworks.com) Bug reports  
[doc@mathworks.com](mailto:doc@mathworks.com) Documentation error reports  
[service@mathworks.com](mailto:service@mathworks.com) Order status, license renewals, passcodes  
[info@mathworks.com](mailto:info@mathworks.com) Sales, pricing, and general information



508-647-7000 (Phone)



508-647-7001 (Fax)



The MathWorks, Inc.  
3 Apple Hill Drive  
Natick, MA 01760-2098

For contact information about worldwide offices, see the MathWorks Web site.

*Robust Control Toolbox™ Reference*

© COPYRIGHT 2005–2014 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

### Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See [www.mathworks.com/trademarks](http://www.mathworks.com/trademarks) for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

### Patents

MathWorks products are protected by one or more U.S. patents. Please see [www.mathworks.com/patents](http://www.mathworks.com/patents) for more information.

## Revision History

September 2005	First printing	New for Version 3.0.2 (Release 14SP3)
March 2006	Online only	Revised for Version 3.1 (Release 2006a)
September 2006	Online only	Revised for Version 3.1.1 (Release 2006b)
March 2007	Online only	Revised for Version 3.2 (Release 2007a)
September 2007	Online only	Revised for Version 3.3 (Release 2007b)
March 2008	Online only	Revised for Version 3.3.1 (Release 2008a)
October 2008	Online only	Revised for Version 3.3.2 (Release 2008b)
March 2009	Online only	Revised for Version 3.3.3 (Release 2009a)
September 2009	Online only	Revised for Version 3.4 (Release 2009b)
March 2010	Online only	Revised for Version 3.4.1 (Release 2010a)
September 2010	Online only	Revised for Version 3.5 (Release 2010b)
April 2011	Online only	Revised for Version 3.6 (Release 2011a)
September 2011	Online only	Revised for Version 4.0 (Release 2011b)
March 2012	Online only	Revised for Version 4.1 (Release 2012a)
September 2012	Online only	Revised for Version 4.2 (Release 2012b)
March 2013	Online only	Revised for Version 4.3 (Release 2013a)
September 2013	Online only	Revised for Version 5.0 (Release 2013b)
March 2014	Online only	Revised for Version 5.1 (Release 2014a)



**1** | Class Reference

**2** | Alphabetical List

**3** | Block Reference



# Class Reference

---

TuningGoal.Gain  
TuningGoal.LoopShape  
TuningGoal.LQG  
TuningGoal.Margins  
TuningGoal.MinLoopGain  
TuningGoal.MaxLoopGain  
TuningGoal.Overshoot  
TuningGoal.Poles  
TuningGoal.Rejection  
TuningGoal.Sensitivity  
TuningGoal.StableController  
TuningGoal.StepResp  
TuningGoal.Tracking  
TuningGoal.Variance  
TuningGoal.WeightedGain  
TuningGoal.WeightedVariance

# TuningGoal.Gain

---

**Purpose** Gain constraint for control system tuning

**Description** Use the `TuningGoal.Gain` object to specify a constraint that limits the gain from a specified input to a specified output. Use this requirement for control system tuning with tuning commands such as `systune` or `looptune`.

When you use a `TuningGoal.Gain` requirement, the software attempts to tune the system so that the gain from the specified input to the specified output does not exceed the specified value. By default, the constraint is applied with the loop closed. To apply the constraint to an open-loop response, use the `Openings` property of the `TuningGoal.Gain` object.

You can use a gain constraint to:

- Enforce a design requirement of disturbance rejection across a particular input/output pair, by constraining the gain to be less than 1
- Enforce a custom roll-off rate in a particular frequency band, by specifying a gain profile in that band

**Construction** `Req = TuningGoal.Gain(inputname,outputname,gainvalue)` creates a tuning requirement `Req`. This requirement constrains the gain from `inputname` to `outputname` to remain below the value `gainvalue`.

You can specify the `inputname` or `outputname` as cell arrays (vector-valued signals). If you do so, then the tuning requirement constrains the largest singular value of the transfer matrix from `inputname` to `outputname`. See `sigma` for more information about singular values.

`Req = TuningGoal.Gain(inputname,outputname,gainprofile)` specifies the maximum gain as a function of frequency. You can specify the target gain profile (maximum gain across the I/O pair) as a smooth transfer function. Alternatively, you can sketch a piecewise error profile using an `frd` model.



## Input Arguments

### **inputname**

Input signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as input signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink® model of a control system, then `inputname` can include:
  - Any model input.
  - Any linearization input point in the model.
  - Any signal identified as an analysis point or a loop-opening location in an `sITuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `sITuner` interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `system`, then `inputname` can include:
  - Any input of the control system model
  - Any loopswitch channel in the control system model


For example, if you are tuning a control system model, `T`, then `inputname` can be a string contained in `T.InputName`. Also, if `T` contains a `loopswitch` block with a switch channel `X`, then `inputname` can include `X`.

- If you are using the requirement to tune a controller model, `C0` for a plant `G0`, using `looptune`, then `inputname` can include:
  - Any input of `C0` or `G0`
  - Any loopswitch channel in `C0` or `G0`

# TuningGoal.Gain

---

If `inputname` is a `loopswitch` channel of a generalized model, the input signal for the requirement is the implied input associated with the switch:

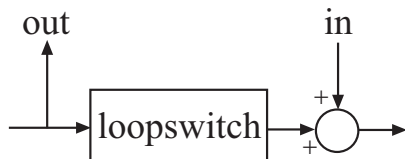

## **outputname**


Output signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as output signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `outputname` can include:
  - Any model output
  - Any linearization output point in the model
  - Any signal identified as an analysis point or a loop-opening location in an `sITuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `sITuner` interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `system`, then `outputname` can include:
  - Any output of the control system model
  - Any `loopswitch` channel in the control system model

For example, if you are tuning a control system model, `T`, then `outputname` can be a string contained in `T.OutputName`. Also, if `T` contains a `loopswitch` block with a switch channel `X`, then `outputname` can include `X`.

- If you are using the requirement to tune a controller model, C0, for a plant, G0, using looptune, then outputname can include:
  - Any output of C0 or G0
  - Any loopswitch channel in C0 or G0

If outputname is a loopswitch channel of a generalized model, the output signal for the requirement is the implied output associated with the switch:

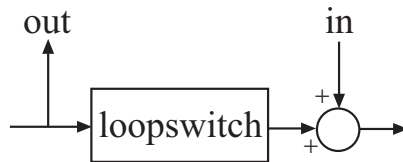

## gainvalue

Maximum gain (linear). The gain constraint Req specifies that the gain from inputname to outputname is less than gainvalue.

gainvalue is a scalar value. If the signals inputname or outputname are vector-valued signals, then gainvalue constrains the largest singular value of the transfer matrix from inputname to outputname. See sigma for more information about singular values.

## gainprofile

Gain profile as a function of frequency. The gain constraint Req specifies that the gain from inputname to outputname at a particular frequency is less than gainprofile. You can specify gainprofile as a smooth transfer function (tf, zpk, or ss model). Alternatively, you can sketch a piecewise gain profile using a frd model. When you do so, the software automatically maps the gain profile onto a zpk model. The magnitude of this zpk model approximates the desired gain profile. Use viewSpec(Req) to plot the magnitude of the zpk model.

# TuningGoal.Gain

---

gainprofile is a SISO transfer function. If inputname or outputname are cell arrays, gainprofile applies to all I/O pairs from inputname to outputname

## Properties

### Input

Input signal names, specified as a cell array of strings. These strings specify the names of the inputs of the transfer function that the tuning requirement constrains. The initial value of the Input property is set by the inputname input argument when you construct the requirement object.

### InputScaling

Input signal scaling, specified as a vector of positive real values.

Use this property to specify the relative amplitude of each entry in vector-valued input signals when the choice of units results in a mix of small and large signals. This information is used to scale the closed-loop transfer function from Input to Output when the tuning requirement is evaluated.

Suppose  $T(s)$  is the closed-loop transfer function from Input to Output. The requirement is evaluated for the scaled transfer function  $D_o^{-1}T(s)D_i$ .  $D_o$  and  $D_i$  are diagonal matrices with the OutputScaling and InputScaling values on the diagonal, respectively.

The default value, [ ] , means no scaling.

**Default:** [ ]

### Output

Output signal names, specified as a cell array of strings. These strings specify the names of the outputs of the transfer function that the tuning requirement constrains. The initial value of the Output property is set by the outputname input argument when you construct the requirement object.

### OutputScaling

Output signal scaling, specified as a vector of positive real values.

Use this property to specify the relative amplitude of each entry in vector-valued output signals when the choice of units results in a mix of small and large signals. This information is used to scale the closed-loop transfer function from Input to Output when the tuning requirement is evaluated.

Suppose  $T(s)$  is the closed-loop transfer function from Input to Output. The requirement is evaluated for the scaled transfer function  $D_o^{-1}T(s)D_i$ .  $D_o$  and  $D_i$  are diagonal matrices with the OutputScaling and InputScaling values on the diagonal, respectively.

The default value, [ ] , means no scaling.

**Default:** [ ]

## MaxGain

Maximum gain as a function of frequency, expressed as a SISO zpk model.

The software automatically maps the `gainvalue` or `gainprofile` input arguments to a zpk model. The magnitude of this zpk model approximates the desired gain profile, and is stored in the MaxGain property. Use `viewSpec(Req)` to plot the magnitude of MaxGain.

## Stabilize

Stability requirement on closed-loop dynamics, specified as 1 (true) or 0 (false).

By default, TuningGoal.Gain imposes a stability requirement on the closed-loop transfer function from the specified inputs to outputs, in addition to the gain requirement. If stability is not required or cannot be achieved, set Stabilize to false to remove the stability requirement. For example, if the gain constraint applies to an unstable open-loop transfer function, set Stabilize to false.

# TuningGoal.Gain

---

**Default:** 1(true)

## Focus

Frequency band in which tuning requirement is enforced, specified as a row vector of the form `[min,max]`.

Set the `Focus` property to limit enforcement of the requirement to a particular frequency band. Express this value in the frequency units of the control system model you are tuning (`rad/TimeUnit`). For example, suppose `Req` is a requirement that you want to apply only between 1 and 100 rad/s. To restrict the requirement to this band, use the following command:

```
Req.Focus = [1,100];
```

**Default:** `[0,Inf]` for continuous time; `[0,pi/Ts]` for discrete time, where `Ts` is the model sampling time.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB®, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, set `Openings` to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an `sITuner` interface.

**Default:** {}

## **Name**

Name of the requirement object, specified as a string.

For example, if `Req` is a requirement:

# TuningGoal.Gain

---

```
Req.Name = 'LoopReq';
```

```
Default: []
```

## Algorithms

When you tune a control system using a `TuningGoal` object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ , where  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the `TuningGoal.Gain` requirement,  $f(x)$  is given by:

$$f(x) = \left\| \frac{1}{\text{MaxGain}} D_o^{-1} T(s,x) D_i \right\|_{\infty}.$$

$T(s,x)$  is the closed-loop transfer function from Input to Output.  $D_o$  and  $D_i$  are diagonal matrices with the `OutputScaling` and `InputScaling` property values on the diagonal, respectively.  $\|\cdot\|_{\infty}$  denotes the  $H_{\infty}$  norm (see `norm`).

## Examples

### Disturbance rejection

Create a gain constraint that enforces a disturbance rejection requirement from a signal 'du' to a signal 'u'.

```
Req = TuningGoal.Gain('du','u',1);
```

This requirement specifies that the maximum gain of the response from 'du' to 'u' not exceed 1 (0 dB).

### Custom roll-off specification

Create a gain constraint that constrains the response from a signal 'du' to a signal 'u' to roll off at 20 dB/decade at frequencies greater than 1. The gain constraint also specifies disturbance rejection (maximum gain of 1) in the frequency range [0,1].

```
gmax = frd([1 1 0.01],[0 1 100]);
```




```
Req = TuningGoal.Gain('du','u',gmax);
```

These commands use a frd model to specify the gain profile as a function of frequency. The maximum gain of 1 dB at the frequency 1 rad/s, together with the maximum gain of 0.01 dB at the frequency 100 rad/s, specifies the desired rolloff of 20 dB/decade.

The software converts `gmax` into a smooth function of frequency that approximates the piecewise specified requirement. Display the error requirement using `viewSpec`.

```
viewSpec(Req)
```

# TuningGoal.Gain

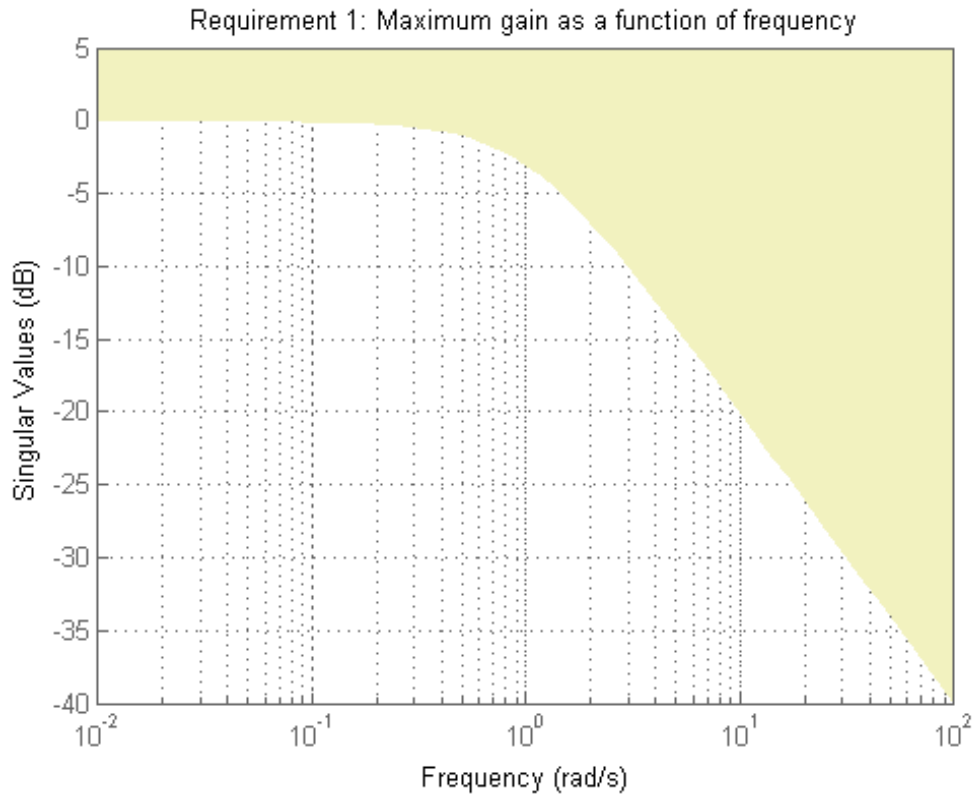

The yellow region indicates where the requirement is violated.

## **Disturbance rejection**

Create a gain constraint that enforces a disturbance rejection requirement from a signal 'du' to a signal 'u'.

```
Req = TuningGoal.Gain('du','u',1);
```

This requirement specifies that the maximum gain of the response from 'du' to 'u' not exceed 1 (0 dB).

## See Also

`looptune` | `viewSpec` | `sysune` | `sysune (for sITuner)` | `looptune (for sITuner)` | `TuningGoal.Tracking` | `TuningGoal.LoopShape` | `sITuner`

## How To

- “Frequency-Domain Specifications”
- “”
- “Multi-Loop PID Control of a Robot Arm”
- “MIMO Control of Diesel Engine”


# TuningGoal.LoopShape

---

**Purpose** Target loop shape for control system tuning

**Description** Use the `TuningGoal.LoopShape` object to specify a target *gain profile* (gain as a function of frequency) of an open-loop response. The `TuningGoal.LoopShape` requirement constrains the open-loop, point-to-point response ( $L$ ) at a specified location in your control system. Use this requirement for control system tuning with tuning commands, such as `systune` or `looptune`.

When you tune a control system, the target open-loop gain profile is converted into constraints on the inverse sensitivity function  $\text{inv}(S) = (I + L)$  and the complementary sensitivity function  $T = 1 - S$ . These constraints are illustrated for a representative tuned system in the following figure.

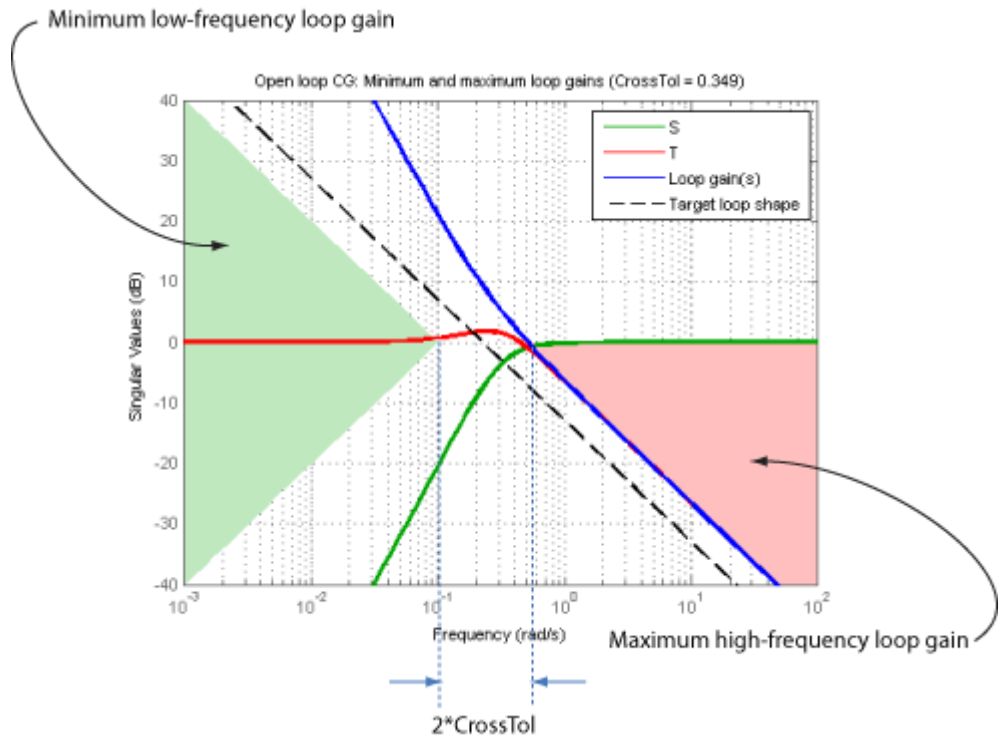

Where  $L$  is much greater than 1, a minimum gain constraint on  $\text{inv}(S)$  (green shaded region) is equivalent to a minimum gain constraint on  $L$ . Similarly, where  $L$  is much smaller than 1, a maximum gain constraint on  $T$  (red shaded region) is equivalent to a maximum gain constraint on  $L$ . The gap between these two constraints is twice the `CrossTol` parameter, which specifies the frequency band where the loop gain can cross 0 dB.

For multi-input, multi-output (MIMO) control systems, values in the gain profile greater than 1 are interpreted as minimum performance requirements. Such values are lower bounds on the smallest singular value of the open-loop response. Gain profile values less than one are interpreted as minimum roll-off requirements, which are upper bounds

# TuningGoal.LoopShape

---

on the largest singular value of the open-loop response. For more information about singular values, see `sigma`.

Use `TuningGoal.LoopShape` when the loop shape near crossover is simple or well understood (such as integral action). To specify only high gain or low gain constraints in certain frequency bands, use `TuningGoal.MinLoopGain` and `TuningGoal.MaxLoopGain`. When you do so, the software determines the best loop shape near crossover.

## Construction

`Req = TuningGoal.LoopShape(location,loopgain)` creates a tuning requirement for shaping the open-loop response measured at the specified location. The magnitude of the single-input, single-output (SISO) transfer function `loopgain` specifies the target open-loop gain profile. You can specify the target gain profile (maximum gain across the I/O pair) as a smooth transfer function or sketch a piecewise error profile using an `frd` model.

`Req = TuningGoal.LoopShape(location,loopgain,crosstol)` specifies a tolerance on the location of the crossover frequency. `crosstol` expresses the tolerance in decades. For example, `crosstol = 0.5` allows gain crossovers within half a decade on either side of the target crossover frequency specified by `loopgain`. When you omit `crosstol`, the tuning requirement uses a default value of 0.1 decades. You can increase `crosstol` when tuning MIMO control systems. Doing so allows more widely varying crossover frequencies for different loops in the system.

`Req = TuningGoal.LoopShape(location,wc)` specifies just the target gain crossover frequency. This syntax is equivalent to specifying a pure integrator loop shape, `loopgain = wc/s`.

`Req = TuningGoal.LoopShape(location,wcrange)` specifies a range for the target gain crossover frequency. The range is a vector of the form `wcrange = [wc1,wc2]`. This syntax is equivalent to using the geometric mean `sqrt(wc1*wc2)` as `wc` and setting `crosstol` to the half-width of `wcrange` in decades. Using a range instead of a single `wc` value increases the ability of the tuning algorithm to enforce the target loop shape for all loops in a MIMO control system.

## Input Arguments

### location

Location where the open-loop response shape to be constrained is measured, specified as a string or cell array of strings that identify one or more loop-opening locations in the control system to tune. What loop-opening locations are available depends on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, `location` contains the names of one or more feedback loops in the `Location` property of `loopswitch` blocks in the control system model. For example, the following code creates a PI loop with a loop switch marking the plant input 'u'.

```
S = loopswitch('u');  
G = tf(1,[1 2]);  
C = ltiblock.pid('C','pi');  
T = feedback(G*S*C,1);
```

You can use the string 'u' to refer to the sensitivity at the plant input.

- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, `location` contains the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case,

# TuningGoal.LoopShape

---

`location` contains the names of one or more of these analysis points.

The loop shape requirement applies to the point-to-point open-loop transfer function at the specified loop-opening location. That transfer function is the open-loop response obtained by injecting signals at the loop-opening location and measuring the return signals at the same point.

If `location` is a cell array of loop-opening locations, then the loop shape requirement applies to the MIMO open-loop transfer function.

## **loopgain**

Target open-loop gain profile as a function of frequency.

You can specify `loopgain` as a smooth SISO transfer function (`tf`, `zpk`, or `ss` model). Alternatively, you can sketch a piecewise gain profile using a `frd` model. When you do so, the software automatically maps your specified gain profile to a `zpk` model whose magnitude approximates the desired gain profile. Use `viewSpec(Req)` to plot the magnitude of that `zpk` model.

For multi-input, multi-output (MIMO) control systems, values in the gain profile greater than 1 are interpreted as minimum performance requirements. These values are lower bounds on the smallest singular value of  $L$ . Gain profile values less than one are interpreted as minimum roll-off requirements, which are upper bounds on the largest singular value of  $L$ . For more information about singular values, see `sigma`.

## **crosstol**

Tolerance in the location of crossover frequency, in decades. specified as a scalar value. For example, `crosstol = 0.5` allows gain crossovers within half a decade on either side of the target crossover frequency specified by `loopgain`. Increasing `crosstol` increases the ability of the tuning algorithm to enforce the target loop shape for all loops in a MIMO control system.



**Default:** 0.1

## **wc**

Target crossover frequency, specified as a positive scalar value. Express `wc` in units of `rad/TimeUnit`, where `TimeUnit` is the `TimeUnit` property of the control system model you are tuning.

## **wcrange**

Range for target crossover frequency, specified as a vector of the form `[wc1,wc2]`. Express `wc` in units of `rad/TimeUnit`, where `TimeUnit` is the `TimeUnit` property of the control system model you are tuning.

## **Properties**

### **Location**

Location at which the open-loop response shape to be constrained is measured, specified as a string or cell array of strings that identify one or more loop opening locations in the control system to tune.

The value of the `Location` property is set by the `location` input argument when you create the `TuningGoal.LoopShape` requirement.

### **LoopGain**

Target loop shape as a function of frequency, specified as a SISO zpk model.

The software automatically maps the input argument `loopgain` onto a zpk model. The magnitude of this zpk model approximates the desired gain profile. Use `viewSpec(Req)` to plot the magnitude of the zpk model `LoopGain`.

### **CrossTol**

Tolerance on gain crossover frequency, in decades.

The initial value of `CrossTol` is set by the `crosstol` input when you create the requirement object.

# TuningGoal.LoopShape

---

**Default:** 0.1

## LoopScaling

Toggle for automatically scaling loop signals, specified as 'on' or 'off'.

In multi-loop or MIMO control systems, the feedback channels are automatically rescaled to equalize the off-diagonal terms in the open-loop transfer function (loop interaction terms). Set `LoopScaling` to 'off' to disable such scaling and shape the unscaled open-loop response.

**Default:** 'on'

## Stabilize

Stability requirement on closed-loop dynamics, specified as 1 (true) or 0 (false).

When `Stabilize` is true, this requirement stabilizes the specified feedback loop, as well as imposing gain or loop-shape requirements. Set `Stabilize` to false if stability for the specified loop is not required or cannot be achieved.

**Default:** 1 (true)

## Focus

Frequency band in which tuning requirement is enforced, specified as a row vector of the form `[min,max]`.

Set the `Focus` property to limit enforcement of the requirement to a particular frequency band. Express this value in the frequency units of the control system model you are tuning (rad/TimeUnit). For example, suppose `Req` is a requirement that you want to apply only between 1 and 100 rad/s. To restrict the requirement to this band, use the following command:

```
Req.Focus = [1,100];
```

**Default:**  $[0, \text{Inf}]$  for continuous time;  $[0, \pi/T_s]$  for discrete time, where  $T_s$  is the model sampling time.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set

# TuningGoal.LoopShape

---

Openings to a cell array containing the names of one or more measurement or control signals.

- A *control signal* is a signal that is an output of the controller model and an input of the plant model.
- A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an sITuner interface, a loop-opening location can be any analysis point added to the interface using addPoint. In this case, set Openings to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an sITuner interface.

**Default:** {}

## Name

Name of the requirement object, specified as a string.

For example, if Req is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Algorithms

When you tune a control system using a TuningGoal object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ , where  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the TuningGoal.LoopShape requirement,  $f(x)$  is given by:

$$f(x) = \left\| \frac{W_S S}{W_T T} \right\|_{\infty}.$$

$S = D^{-1}[I - L(s,x)]^{-1}D$  is the scaled sensitivity function.

$L(s,x)$  is the open-loop response being shaped.

$D$  is an automatically-computed loop scaling factor. (If the `LoopScaling` property is set to 'off', then  $D = I$ .)


$T = S - I$  is the complementary sensitivity function.

$W_S$  and  $W_T$  are weighting functions derived from the specified loop shape.

## Examples

### Loop Shape and Crossover Tolerance

Create a target gain profile requirement for the following control system. Specify integral action, gain crossover at 1, and a roll-off requirement of 40 dB/decade.

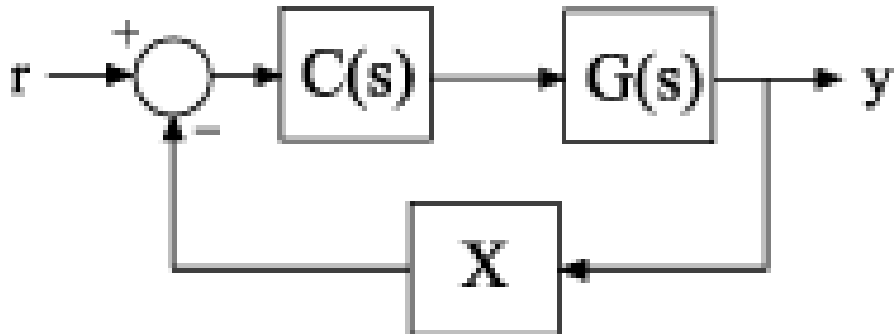

The requirement should apply to the open-loop response measured at the loopswitch block X. Specify a crossover tolerance of 0.5 decades.


```

LS = frd([100 1 0.0001],[0.01 1 100]);
Req = TuningGoal.LoopShape('X',LS,0.5);
  
```

# TuningGoal.LoopShape

The software converts LS into a smooth function of frequency that approximates the piecewise-specified requirement. Display the requirement using `viewSpec`.

```
viewSpec(Req)
```

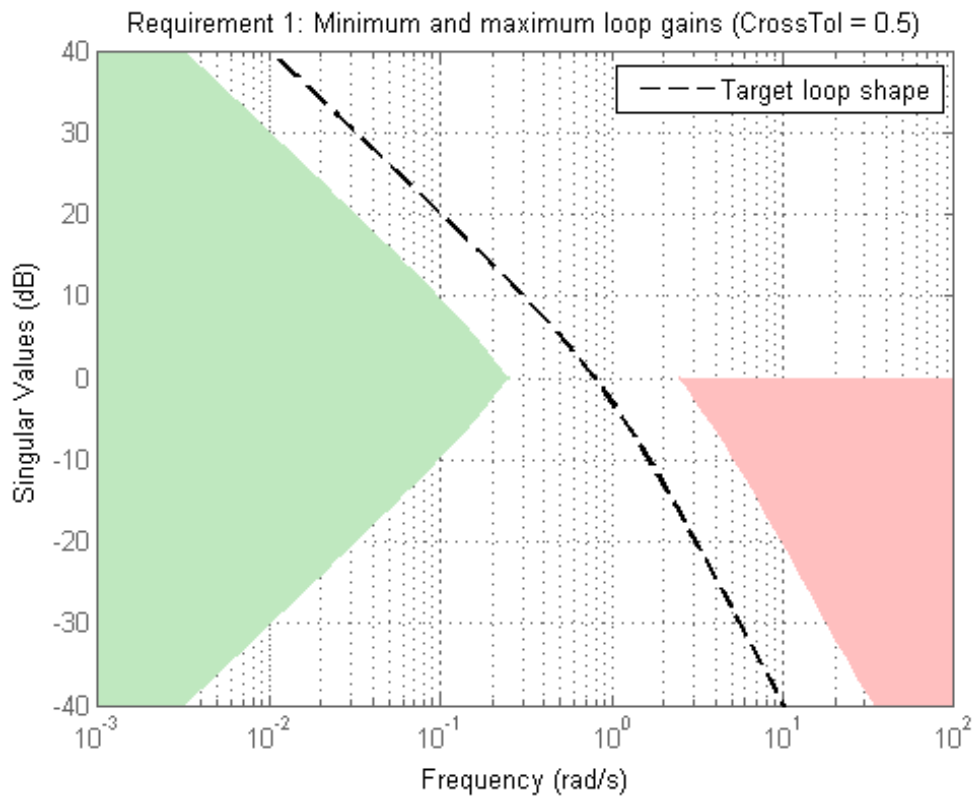


The green and red regions indicate the bounds for the inverse sensitivity,  $\text{inv}(S) = 1 - G \cdot C$ , and the complementary sensitivity,  $T = 1 - S$ , respectively. The gap between these regions at 0

dB gain reflects the specified crossover tolerance, which is half a decade to either side of the target loop crossover.

When you use `viewSpec(Req,CL)` to validate a tuned closed-loop model of this control system, CL, the tuned values of S and T are also plotted.

## Specify Different Loop Shapes for Multiple Loops

Create separate loop shape requirements for the inner and outer loops of the following control system.

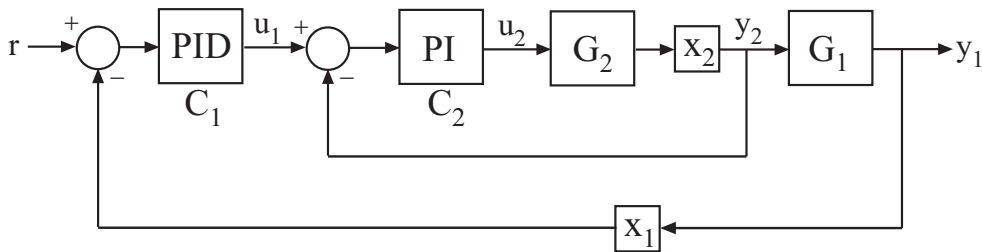

For the inner loop, specify a loop shape with integral action, gain crossover at 1, and a roll-off requirement of 40 dB/decade. Additionally, specify that this loop shape requirement should be enforced with the outer loop open.

```
LS2 = frd([100 1 0.0001],[0.01 1 100]);  
Req2 = TuningGoal.LoopShape('X2',LS2);  
Req2.Openings = 'X1';
```

Specifying 'X2' for the `location` indicates that Req2 applies to the point-to-point, open-loop transfer function at the loop opening location X2. Setting Req2.Openings indicates that the loop switch at X1 is open when Req2 is enforced.

By default, Req2 imposes a stability requirement on the inner loop as well as the loop shape requirement. In some control systems, however, inner-loop stability might not be required, or might be impossible to achieve. In that case, remove the stability requirement from Req2 as follows.

# TuningGoal.LoopShape

---

```
Req2.Stabilize = false;
```

For the outer loop, specify a loop shape with integral action, gain crossover at 0.1, and a roll-off requirement of 20 dB/decade.

```
LS1 = frd([10 1 0.01],[0.01 0.1 10]);  
Req1 = TuningGoal.LoopShape('X1',LS1);
```

Specifying 'X1' for the `location` indicates that `Req1` applies to the point-to-point, open-loop transfer function at the loop opening location X1. You do not have to set `Req1.Openings` because this loop shape is enforced with the inner loop closed.


You may need to tune the control system with both loop shaping requirements `Req1` and `Req2`. To do so, use both requirements as inputs to the tuning command. For example, suppose `CLO` is a tunable `genss` model of the closed-loop control system. In that case, the following command tunes the control system to both requirements.

```
[CL,fSoft] = systune(CLO,[Req1,Req2]);
```

## Loop Shape for Tuning Simulink Model

Create a loop-shape requirement for the feedback loop on 'q' in the following control system, which is the Simulink model `rct_airframe2`. Specify that the loop-shape requirement is enforced with the 'az' loop open.



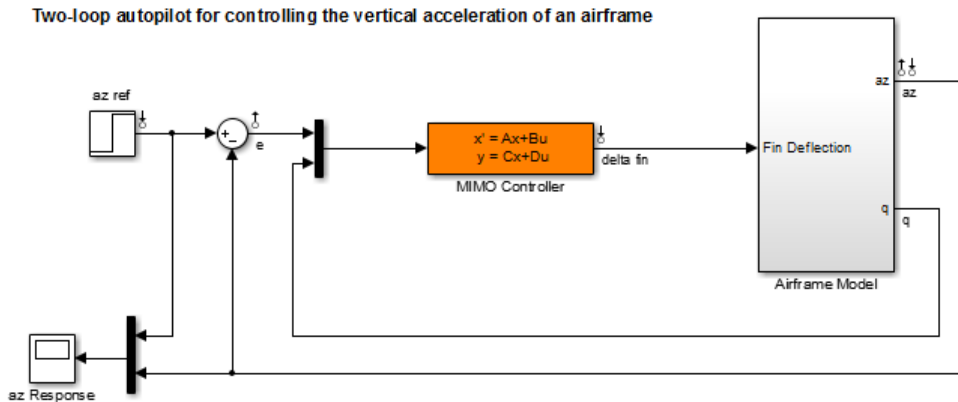

Open the model.

```
open_system('rct_airframe2')
```

Create a loop shape requirement that enforces integral action with a crossover a 2 rad/s for the 'q' loop. This loop shape corresponds to a loop shape of  $2/s$ .

```
s = tf('s');  
shape = 2/s;  
Req = TuningGoal.LoopShape('q',shape);
```

Specify the location at which to open an additional loop when enforcing the requirement.

```
Req.Openings = 'az';
```

To use this requirement to tune the Simulink model, create an sITuner interface to the model. Identify the block to tune in the interface.

```
ST0 = sITuner('rct_airframe2','MIMO Controller');
```

Designate both az and q as analysis points in the sITuner interface.

```
addPoint(ST0,{'az','q'});
```

# TuningGoal.LoopShape

---

This command makes `q` available as an analysis location. It also allows the tuning requirement to be enforced with the loop open at `az`.

You can now tune the model using `Req` and any other tuning requirements. For example:

```
[ST,fSoft] = systune(ST0,Req);
```


## **Loop Shape Requirement with Crossover Range**

Create a tuning requirement specifying that the open-loop response of loop identified by 'X' cross unity gain between 50 and 100 rad/s.

```
Req = TuningGoal.LoopShape('X',[50,100]);
```

Examine the resulting requirement to see the target loop shape.

```
viewSpec(Req)
```

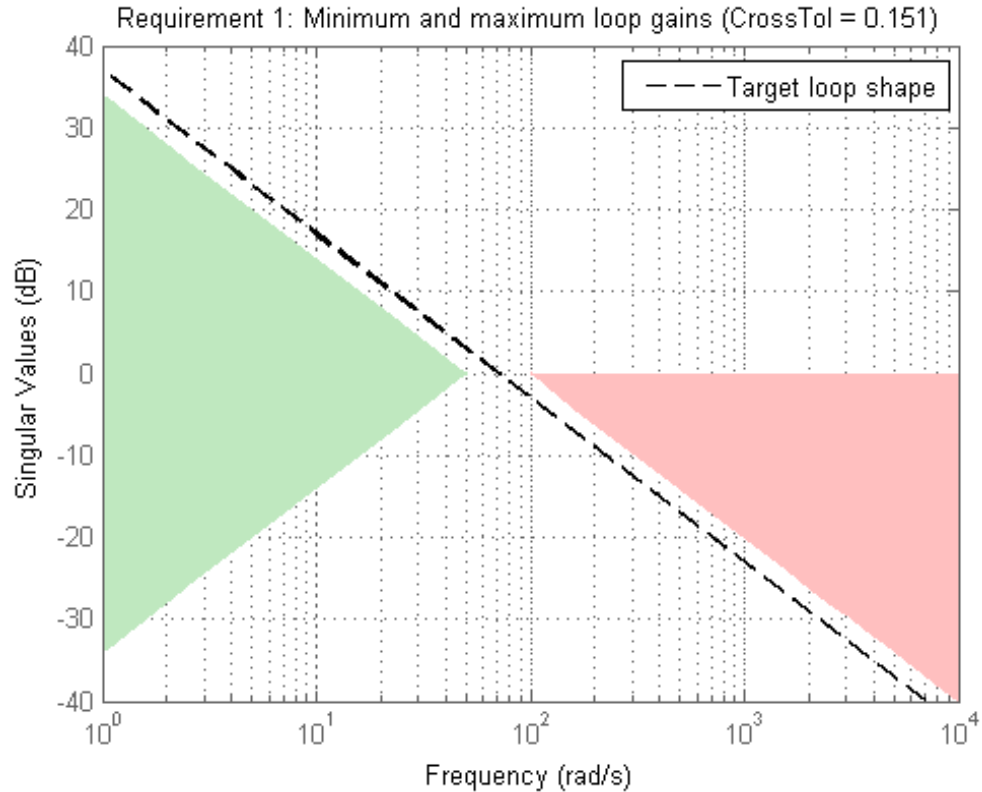

The plot shows that the requirement specifies an integral loop shape, with crossover around 70 rad/s, the geometrical mean of the range [50,100]. The gap at 0 dB between the minimum low-frequency gain (green region) and the maximum high-frequency gain (red region) reflects the allowed crossover range [50,100].

## See Also

looptune | systune | looptune (for sITuner) | systune (for sITuner) | TuningGoal.MinLoopGain | TuningGoal.MaxLoopGain | viewSpec | TuningGoal.Tracking | TuningGoal.Gain | sITuner | frd

# TuningGoal.LoopShape

---

## **How To**

- “Loop Shape and Stability Margin Specifications”
- “Tuning Multi-Loop Control Systems”
- “Tuning of a Digital Motion Control System”

## Purpose

Linear-Quadratic-Gaussian (LQG) goal for control system tuning

## Description

Use the `TuningGoal.LQG` object to specify a tuning requirement for quantifying control performance as an LQG cost. It is applicable to any control structure, not just the classical observer structure of optimal LQG control. You can use this requirement for control system tuning with tuning commands, such as `systemtune` or `looptune`.

The LQG cost is given by:

$$J = E(z(t)' QZ z(t)).$$

$z(t)$  is the system response to a white noise input vector  $w(t)$ . The covariance of  $w(t)$  is given by:

$$E(w(t)w(t)') = QW.$$

The vector  $w(t)$  typically consists of external inputs to the system such as noise, disturbances, or command. The vector  $z(t)$  includes all the system variables that characterize performance, such as control signals, system states, and outputs.  $E(x)$  denotes the expected value of the stochastic variable  $x$ .

The cost function  $J$  can also be written as an average over time:

$$J = \lim_{T \rightarrow \infty} E \left( \frac{1}{T} \int_0^T z(t)' QZ z(t) dt \right).$$

After you create a requirement object, you can further configure the tuning requirement by setting “Properties” on page 1-35 of the object.

## Construction

`Req = TuningGoal.LQG(wname, zname, QW, QZ)` creates an LQG requirement. The strings or cell arrays of strings `wname` and `zname` specify the signals making up  $w(t)$  and  $z(t)$ . The matrices `QW` and `QZ` specify the noise covariance and performance weight. These matrices must be symmetric nonnegative definite. Use scalar values for `QW` and `QZ` to specify multiples of the identity matrix.

## Input Arguments

### wname


Noise inputs,  $w(t)$ , specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as noise inputs for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then wname can include:
  - Any model input
  - Any linearization input point in the model
  - Any signal identified as a Controls, Measurements, Switches, or IOs signal in an sITuner interface associated with the Simulink model
- If you are using the requirement to tune a generalized state-space model (genss) of a control system using systune, then wname can include:
  - Any input of the control system model
  - Any loopswitch channel in the control system model

For example, if you are tuning a control system model, T, then wname can be a string contained in T.InputName. Also, if T contains a loopswitch block with a switch channel X, then wname can include X.

- If you are using the requirement to tune a controller model, C0 for a plant G0, using looptune, then wname can include:
  - Any input of C0 or G0
  - Any loopswitch channel in C0 or G0

If wname is a loopswitch channel of a generalized model, the noise input for the requirement is the implied input associated with the switch:

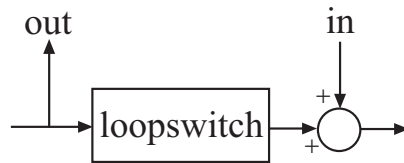

## **zname**


Performance outputs,  $z(t)$ , specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as performance outputs for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `zname` can include:
  - Any model output
  - Any linearization output point in the model
  - Any signal identified as a Controls, Measurements, Switches, or IOs signal in an `sITuner` interface associated with the Simulink model
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `system`, then `zname` can include:
  - Any output of the control system model
  - Any `loopswitch` channel in the control system model

For example, if you are tuning a control system model, `T`, then `zname` can be a string contained in `T.OutputName`. Also, if `T` contains a `loopswitch` block with a switch channel `X`, then `zname` can include `X`.
- If you are using the requirement to tune a controller model, `C0` for a plant `G0`, using `looptune`, then `zname` can include:
  - Any input of `C0` or `G0`

- Any loopswitch channel in C0 or G0

If `zname` is a loopswitch channel of a generalized model, the performance output for the requirement is the implied output associated with the switch:

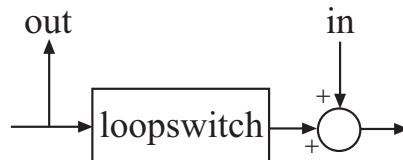

## QW

Covariance of the white noise input vector  $w(t)$ , specified as a scalar or a matrix. Use a scalar value to specify a multiple of the identity matrix. Otherwise specify a symmetric nonnegative definite matrix with as many rows as there are entries in the vector  $w(t)$ . A diagonal matrix means the entries of  $w(t)$  are uncorrelated.

The covariance of  $w(t)$  is given by:

$$E(w(t)w(t)') = QW.$$

When you are tuning a control system in discrete time, the LQG requirement assumes:

$$E(w[k]w[k]') = QW/T_s.$$

$T_s$  is the model sample time. This assumption ensures consistent results with tuning in the continuous-time domain. In this assumption,  $w[k]$  is discrete-time noise obtained by sampling continuous white noise  $w(t)$  with covariance  $QW$ . If in your system  $w[k]$  is a truly discrete process with known covariance  $QWd$ , use the value  $T_s * QWd$  for the QW value when creating the LQG goal.

**Default:**  $I$



## QZ

Performance weights, specified as a scalar or a matrix. Use a scalar value to specify a multiple of the identity matrix. Otherwise specify a symmetric nonnegative definite matrix. Use a diagonal matrix to independently scale or penalize the contribution of each variable in  $z$ .

The performance weights contribute to the cost function according to:

$$J = E(z(t)' QZ z(t)).$$

When you use the LQG requirement as a hard goal, the software tries to drive the cost function  $J < 1$ . When you use it as a soft goal, the cost function  $J$  is minimized subject to any hard goals and its value is contributed to the overall objective function. Therefore, select QZ values to properly scale the cost function so that driving it below 1 or minimizing it yields the performance you require.

**Default:**  $I$

## Properties

### Input

Noise input signal names, specified as a cell array of strings. These strings specify the names of the inputs of the transfer function that the tuning requirement constrains. The initial value of the Input property is set by the `wname` input argument when you construct the requirement object.

### Output

Performance output signal names, specified as a cell array of strings. These strings specify the names of the outputs of the transfer function that the tuning requirement constrains. The initial value of the Output property is set by the `zname` input argument when you construct the requirement object.

### NoiseCovariance

Covariance matrix of the noise inputs  $w(t)$ , specified as a matrix. The value of the `NoiseCovariance` property is set by the `WZ` input argument when you create the LQG requirement.

## PerformanceWeight

Weights for the performance signals  $z(t)$ , specified as a matrix. The value of the `PerformanceWeight` property is set by the `QZ` input argument when you create the LQG requirement.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening

locations listed in the `Location` property of a loopswitch block in the control system model.

- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, set `Openings` to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an `sITuner` interface.

**Default:** {}

## Name

Name of the requirement object, specified as a string.

For example, if `Req` is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Algorithms

When use a `TuningGoal` object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ .  $x$  is the vector of free (tunable) parameters in the control system. The

# TuningGoal.LQG

---

software then adjusts the parameter values to minimize  $f(x)$ , or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the `TuningGoal.LQG` requirement,  $f(x)$  is given by the cost function  $J$ :

$$J = E(z(t)' QZ z(t)).$$

When you use the LQG requirement as a hard goal, the software tries to drive the cost function  $J < 1$ . When you use it as a soft goal, the cost function  $J$  is minimized subject to any hard goals and its value is contributed to the overall objective function. Therefore, select `QZ` values to properly scale the cost function so that driving it below 1 or minimizing it yields the performance you require.

## See Also

`system` | `sITuner` | `system` (for `sITuner`) | `viewSpec` | `evalSpec` | `TuningGoal.WeightedVariance` | `TuningGoal.Variance`

## How To

- “Time-Domain Specifications”

## Purpose

Stability margin requirement for control system tuning

## Description

Use the `TuningGoal.Margins` requirement object to specify a tuning requirement for the gain and phase margins of a SISO or MIMO feedback loop. You can use this requirement for validating a tuned control system with `viewSpec`. You can also use the requirement for control system tuning with tuning commands such as `systemtune` or `looptune`.

After you create a requirement object, you can further configure the tuning requirement by setting “Properties” on page 1-41 of the object.

## Construction

`Req = TuningGoal.Margins(location, gainmargin, phasemargin)` creates a tuning requirement that specifies the minimum gain and phase margins at the specified loop-opening location.

### Input Arguments

#### location

Loop-opening locations at which the minimum gain and phase margins apply, specified as a string or cell array of strings. These strings identify one or more loop-opening locations in the control system to tune. What loop-opening locations are available depends on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, `location` contains the names of one or more feedback loops in the `Location` property of `loopswitch` blocks in the control system model. For example, the following code creates a PI loop with a loop switch marking the plant input 'u'.

```
S = loopswitch('u');  
G = tf(1,[1 2]);  
C = ltiblock.pid('C','pi');  
T = feedback(G*S*C,1);
```

# TuningGoal.Margins

---

You can use the string 'u' to refer to the sensitivity at the plant input.

- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, `location` contains the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, `location` contains the names of one or more of these analysis points.

The margin requirements apply to the point-to-point, open-loop transfer function at the specified loop-opening location. That transfer function is the open-loop response obtained by injecting signals at the loop-opening location, and measuring the return signals at the same point.

If `location` is a cell array of loop-opening locations, then the margin requirement applies to the MIMO open-loop transfer function.

## **gainmargin**

Required minimum gain margin for the feedback loop, specified as a scalar value in dB.

For MIMO feedback loops, the gain margin is based upon the notion of disk margins, which guarantee stability for concurrent gain and phase variations of  $\pm$ `gainmargin` and  $\pm$ `phasemargin` in all feedback channels. See `loopmargin` for more information about disk margins.

## **phasemargin**

Required minimum phase margin for the feedback loop, specified as a scalar value in degrees.

For MIMO feedback loops, the phase margin is based upon the notion of disk margins, which guarantee stability for concurrent gain and phase variations of  $\pm$ gainmargin and  $\pm$ phasemargin in all feedback channels. See loopmargin for more information about disk margins.

## **Properties**

### **Location**

Location at which the minimum gain and phase margins apply, specified as a string or cell-array of strings. These strings identify one or more loop-opening locations in the control system to tune.

The value of the Location property is set by the location input argument when you create the TuningGoal.Margins requirement.

### **GainMargin**

Required minimum gain margin for the feedback loop, specified as a scalar value in decibels (dB).

The value of the GainMargin property is set by the gainmargin input argument when you create the TuningGoal.Margins requirement.

### **PhaseMargin**

Required minimum phase margin for the feedback loop, specified as a scalar value in degrees.

The value of the PhaseMargin property is set by the phasemargin input argument when you create the TuningGoal.Margins requirement.

### **ScalingOrder**

Controls the order (number of states) of the scalings involved in computing MIMO stability margins. Static scalings (ScalingOrder = 0) are used by default. Increasing the order

# TuningGoal.Margins

---

may improve results at the expense of increased computations. Use `viewSpec` to assess the gap between optimized and actual margins. If this gap is too large, consider increasing the scaling order.

**Default:** 0 (static scaling)

## Focus

Frequency band in which tuning requirement is enforced, specified as a row vector of the form `[min,max]`.

Set the `Focus` property to limit enforcement of the requirement to a particular frequency band. For best results with stability margin requirements, pick a frequency band extending about one decade on each side of the gain crossover frequencies. For example, suppose `Req` is a `TuningGoal.Margins` requirement that you are using to tune a system with approximately 10 rad/s bandwidth. To limit the enforcement of the requirement, use the following command:

```
Req.Focus = [1,100];
```

**Default:** `[0,Inf]` for continuous time; `[0,pi/Ts]` for discrete time, where `Ts` is the model sampling time.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```



When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Name

Name of the requirement object, specified as a string.

For example, if `Req` is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.

# TuningGoal.Margins

---

- If you are tuning a Simulink model of a control system using an sITuner interface, a loop-opening location can be any analysis point added to the interface using addPoint. In this case, set Openings to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an sITuner interface.

**Default:** {}

## Algorithms

When you tune a control system using a TuningGoal object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ , where  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the TuningGoal.Margins requirement,  $f(x)$  is given by:

$$f(x) = \|2\alpha S - \alpha I\|_{\infty}.$$

$S = D^{-1}[I - L(s,x)]^{-1}D$  is the scaled sensitivity function.

$L(s,x)$  is the open-loop response being shaped.


$D$  is an automatically-computed loop scaling factor.

$\alpha$  is a scalar parameter computed from the specified gain and phase margin.

## Examples

### SISO Margin Requirement Evaluated with Additional Loop Opening

Create a margin requirement for the inner loop of the following control system. The requirement imposes a minimum gain margin of 5 dB and a minimum phase margin of 40 degrees

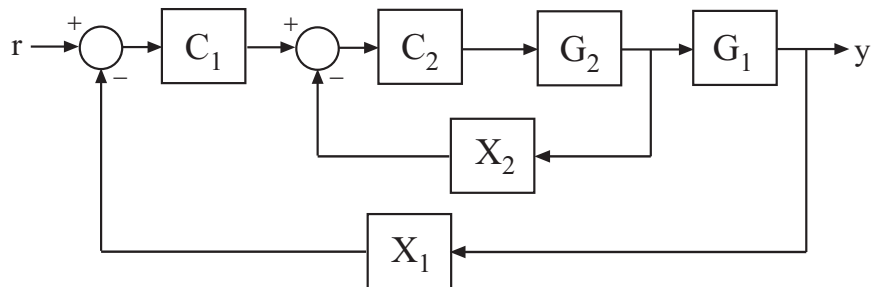

Create a model of the system. To do so, specify and connect the numeric plant models G1 and G2, and the tunable controllers C1 and C2. Also specify and connect the loopswitch blocks X1 and X2 that mark potential loop-opening locations.

```
G1 = tf(10,[1 10]);  
G2 = tf([1 2],[1 0.2 10]);  
C1 = ltiblock.pid('C','pi');  
C2 = ltiblock.gain('G',1);  
X1 = loopswitch('X1');  
X2 = loopswitch('X2');  
T = feedback(G1*feedback(G2*C2,X2)*C1,X1);
```

Create a tuning requirement object.

```
Req = TuningGoal.Margins('X2',5,40);
```

This requirement imposes the specified stability margins on the feedback loop identified by the loopswitch channel 'X2', which is the inner loop.

Specify that these margins are evaluated with the outer loop of the control system open.

```
Req.Openings = {'X1'};
```

# TuningGoal.Margins

---

Adding 'X1' to the `Openings` property of the tuning requirements object ensures that `systune` evaluates the requirement with the loop open at that location.

Use `systune` to tune the free parameters of `T` to meet the tuning requirement specified by `Req`. You can then use `viewSpec` to validate the tuned control system against the requirement.

## MIMO Margin Requirement in Frequency Band

Create a requirement that sets minimum gain and phase margins for the loop defined by three loop-opening locations in a control system to tune. Because this loop is defined by three loop-opening locations, it is a MIMO loop.

The requirement sets a minimum gain margin of 10 dB and a minimum phase margin of 40 degrees, within the band between 0.1 and 10 rad/s.

```
Req = TuningGoal.Margins({'r','theta','phi'},10,40);
```

The names 'r', 'theta', and 'phi' must specify valid loop-opening locations in the control system that you are tuning.

Limit the requirement to the frequency band between 0.1 and 10 rad/s.

```
Req.Focus = [0.1 10];
```

```
looptune | systune | systune (for sITuner) | looptune (for  
sITuner) | viewSpec | evalSpec
```

## How To

- “Loop Shape and Stability Margin Specifications”
- “Tuning Control Systems with SYSTUNE”
- “Digital Control of Power Stage Voltage”
- “Tuning of a Two-Loop Autopilot”
- “Fixed-Structure Autopilot for a Passenger Jet”

**Purpose**

Minimum loop gain constraint for control system tuning

**Description**


Use the `TuningGoal.MinLoopGain` object to enforce a minimum loop gain in a particular frequency band. Use this requirement with control system tuning commands such as `systune` or `looptune`.

This requirement imposes a minimum gain on the open-loop frequency response ( $L$ ) at a specified location in your control system. You specify the minimum open-loop gain as a function of frequency (a *minimum gain profile*). For MIMO feedback loops, the specified gain profile is interpreted as a lower bound on the smallest singular value of  $L$ .

When you tune a control system, the minimum gain profile is converted to a minimum gain constraint on the inverse of the sensitivity function,  $\text{inv}(S) = (I + L)$ .

The following figure shows a typical specified minimum gain profile (dashed line) and a resulting tuned loop gain,  $L$  (blue line). The green region represents gain profile values that are forbidden by this requirement. The figure shows that when  $L$  is much larger than 1, imposing a minimum gain on  $\text{inv}(S)$  is a good proxy for a minimum open-loop gain.

# TuningGoal.MinLoopGain

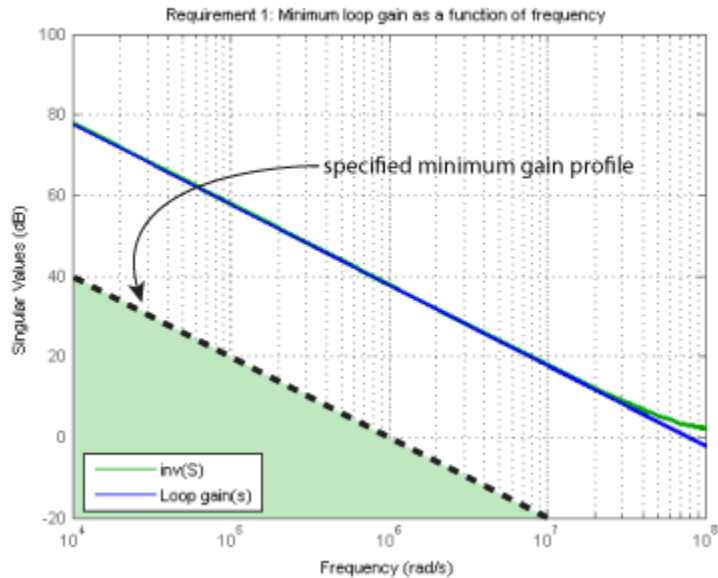

`TuningGoal.MinLoopGain` and `TuningGoal.MaxLoopGain` specify only low-gain or high-gain constraints in certain frequency bands. When you use these requirements, `systemtune` and `looptune` determine the best loop shape near crossover. When the loop shape near crossover is simple or well understood (such as integral action), you can use `TuningGoal.LoopShape` to specify that target loop shape.

## Construction

`Req = TuningGoal.MinLoopGain(location, loopgain)` creates a tuning requirement for boosting the gain of a SISO or MIMO feedback loop. The requirement specifies that the open-loop frequency response ( $L$ ) measured at the specified locations exceeds the minimum gain profile specified by `loopgain`.

You can specify the minimum gain profile as a smooth transfer function or sketch a piecewise error profile using an `frd` model. Only gain values greater than 1 are enforced.

For MIMO feedback loops, the specified gain profile is interpreted as a lower bound on the smallest singular value of  $L$ .

`Req = TuningGoal.MinLoopGain(location,fmin,gmin)` specifies a minimum gain profile of the form  $\text{loopgain} = K/s$  (integral action). The software chooses  $K$  such that the gain value is  $g_{\min}$  at the specified frequency,  $f_{\min}$ .

## Input Arguments

### location

Location at which the minimum open-loop gain is constrained, specified as a string or cell array of strings. These strings identify one or more loop-opening locations in the control system to tune. What loop-opening locations are available depends on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, `location` contains the names of one or more feedback loops in the `Location` property of `loopswitch` blocks in the control system model. For example, the following code creates a PI loop with a loop switch marking the plant input 'u'.

```
S = loopswitch('u');  
G = tf(1,[1 2]);  
C = ltiblock.pid('C','pi');  
T = feedback(G*S*C,1);
```

You can use the string 'u' to refer to the sensitivity at the plant input.

- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, `location` contains the names of one or more measurement or control signals.

# TuningGoal.MinLoopGain

---

- A *control signal* is a signal that is an output of the controller model and an input of the plant model.
- A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an sITuner interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, `location` contains the names of one or more of these analysis points.

If `location` is a cell array of loop-opening locations, then the minimum gain requirement applies to the resulting MIMO loop.

## **loopgain**

Minimum open-loop gain as a function of frequency.

You can specify `loopgain` as a smooth SISO transfer function (`tf`, `zpk`, or `ss` model). Alternatively, you can sketch a piecewise gain profile using a `frd` model. For example, the following `frd` model specifies a minimum gain of 100 (40 dB) below 0.1 rad/s, rolling off at a rate of  $-20$  dB/dec at higher frequencies.

```
loopgain = frd([100 100 10],[0 1e-1 1]);
```

When you use an `frd` model to specify `loopgain`, the software automatically maps your specified gain profile to a `zpk` model. The magnitude of this model approximates the desired gain profile. Use `viewSpec(Req)` to plot the magnitude of that `zpk` model.

Only gain values larger than 1 are enforced. For multi-input, multi-output (MIMO) feedback loops, the gain profile is interpreted as a lower bound on the smallest singular value of  $L$ . For more information about singular values, see `sigma`.

## **fmin**

Frequency of minimum gain `gmin`, specified as a scalar value in rad/s.



Use this argument to specify a minimum gain profile of the form  $\text{loopgain} = K/s$  (integral action). The software chooses  $K$  such that the gain value is  $\text{gmin}$  at the specified frequency,  $\text{fmin}$ .

## **gmin**

Value of minimum gain occurring at  $\text{fmin}$ , specified as a scalar absolute value.

Use this argument to specify a minimum gain profile of the form  $\text{loopgain} = K/s$  (integral action). The software chooses  $K$  such that the gain value is  $\text{gmin}$  at the specified frequency,  $\text{fmin}$ .

## **Properties**

### **Location**

Location at which minimum loop gain is constrained, specified as a string or cell array of strings. These strings identify one or more loop-opening locations in the control system to tune.

The value of the `Location` property is set by the `location` input argument when you create the `TuningGoal.Sensitivity` requirement.

### **MinGain**

Minimum open-loop gain as a function of frequency, specified as a SISO zpk model.

The software automatically maps the input argument `loopgain` onto a zpk model. The magnitude of this zpk model approximates the desired gain profile. Alternatively, if you use the `fmin` and `gmin` arguments to specify the gain profile, this property is set to  $K/s$ . The software chooses  $K$  such that the gain value is  $\text{gmin}$  at the specified frequency,  $\text{fmin}$ .

Use `viewSpec(Req)` to plot the magnitude of the open-loop minimum gain profile.

### **LoopScaling**

Toggle for automatically scaling loop signals, specified as 'on' or 'off'.

# TuningGoal.MinLoopGain

---

In multi-loop or MIMO control systems, the feedback channels are automatically rescaled to equalize the off-diagonal terms in the open-loop transfer function (loop interaction terms). Set `LoopScaling` to 'off' to disable such scaling and shape the unscaled open-loop response.

**Default:** 'on'

## Stabilize

Stability requirement on closed-loop dynamics, specified as 1 (true) or 0 (false).

When `Stabilize` is true, this requirement stabilizes the specified feedback loop, as well as imposing gain or loop-shape requirements. Set `Stabilize` to false if stability for the specified loop is not required or cannot be achieved.

**Default:** 1 (true)

## Focus

Frequency band in which tuning requirement is enforced, specified as a row vector of the form `[min,max]`.

Set the `Focus` property to limit enforcement of the requirement to a particular frequency band. Express this value in the frequency units of the control system model you are tuning (rad/TimeUnit). For example, suppose `Req` is a requirement that you want to apply only between 1 and 100 rad/s. To restrict the requirement to this band, use the following command:

```
Req.Focus = [1,100];
```

**Default:** `[0,Inf]` for continuous time; `[0,pi/Ts]` for discrete time, where `Ts` is the model sampling time.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.

# TuningGoal.MinLoopGain

---

- A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an sITuner interface, a loop-opening location can be any analysis point added to the interface using addPoint. In this case, set Openings to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an sITuner interface.

**Default:** {}

## Name

Name of the requirement object, specified as a string.

For example, if Req is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Algorithms

When you tune a control system using a TuningGoal object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ . Here,  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the TuningGoal.MinLoopGain requirement,  $f(x)$  is given by:

$$f(x) = \left\| W_S \left( D^{-1} S D \right) \right\|_{\infty}.$$

$W_S$  is the minimum loop gain profile, MaxGain.  $D$  is a diagonal scaling (for MIMO loops).  $S$  is the sensitivity function at Location.

Although  $S$  is a closed-loop transfer function, driving  $f(x) < 1$  is equivalent to enforcing a lower bound on the open-loop transfer function,  $L$ , in a frequency band where the gain of  $L$  is greater than 1. To see why, note that  $S = 1/(1 + L)$ . For SISO loops, when  $|L| \gg 1$ ,  $|S| \approx 1/|L|$ . Therefore, enforcing the open-loop minimum gain requirement,  $|L| > |W_s|$ , is roughly equivalent to enforcing  $|W_s S| < 1$ . For MIMO loops, similar reasoning applies, with  $\|S\| \approx 1/\sigma_{\min}(L)$ , where  $\sigma_{\min}$  is the smallest singular value.

For an example illustrating the constraint on  $S$ , see “Minimum Loop Gain as Constraint on Sensitivity Function” on page 1-58.

## Examples

### Minimum Loop Gain Requirement

Create a requirement that boosts the open-loop gain of a feedback loop to greater than a specified profile.


Suppose that you are tuning a control system that has a loop-opening location identified by `PILoop`. Specify that the open-loop gain measured at that location exceed a minimum gain of 10 (20 dB) below 0.1 rad/s, rolling off at a rate of -20 dB/dec at higher frequencies. Use an `frd` model to sketch this gain profile.

```
loopgain = frd([10 10 0.1],[0 1e-1 10]);  
Req = TuningGoal.MinLoopGain('PILoop',loopgain);
```

The software converts `loopgain` into a smooth function of frequency that approximates the piecewise-specified requirement. Display the requirement using `viewSpec`.

```
viewSpec(Req)
```

# TuningGoal.MinLoopGain

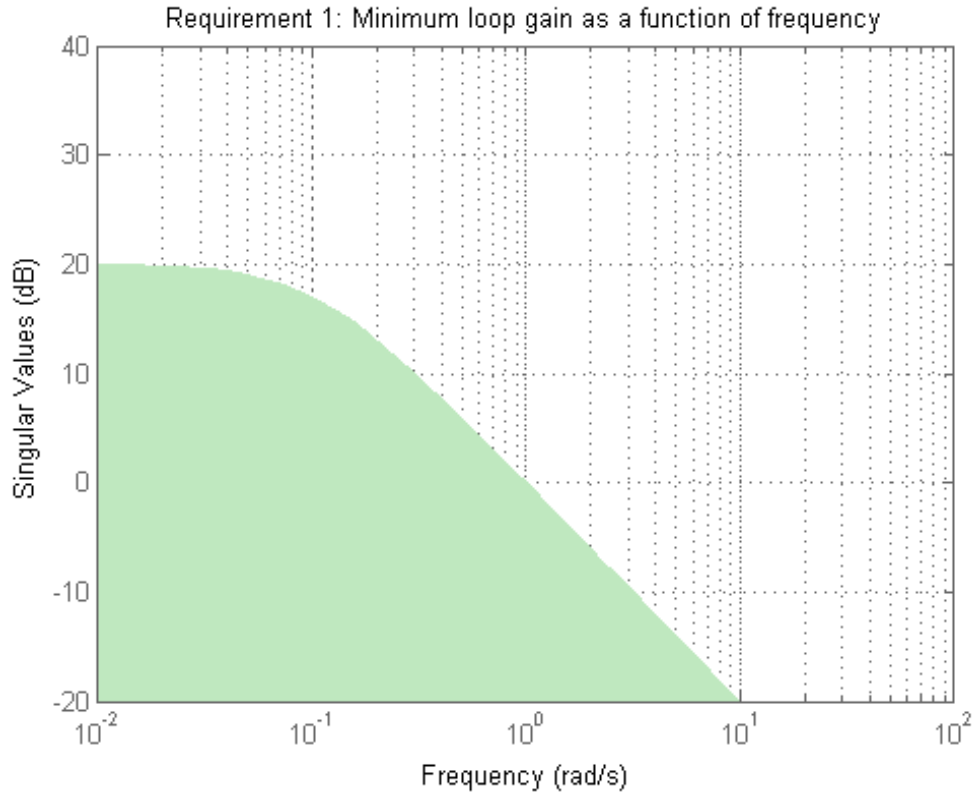


The green region indicates where the requirement is violated, except that gain values less than 1 are not enforced. Therefore, this requirement only specifies a minimum gain at frequencies below 1 rad/s.

You can use Req as an input to `looptune` or `systune` when tuning the control system.

## Integral Minimum Gain Specified as Gain Value at Single Frequency

Create a requirement that specifies a minimum loop gain profile of the form  $L = K / s$ . The gain profile attains the value of -20 dB (0.01) at 100 rad/s.

```
Req = TuningGoal.MinLoopGain('X',100,0.01);  
viewSpec(Req)
```

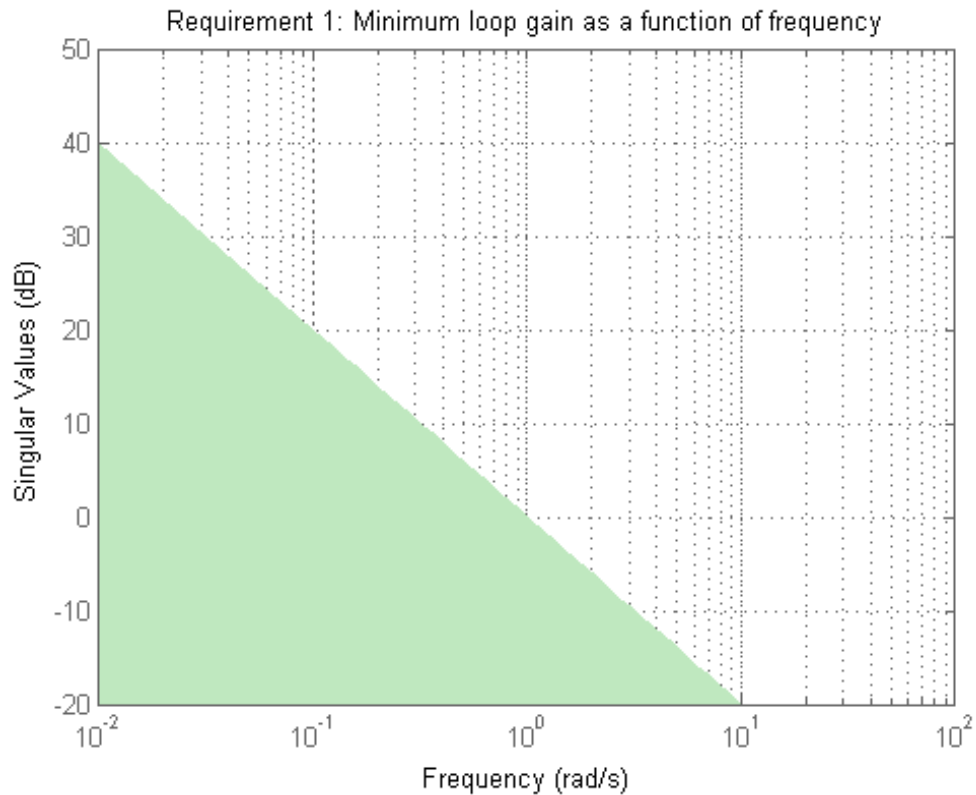


# TuningGoal.MinLoopGain

viewSpec confirms that the requirement is correctly specified. You can use this requirement to tune a control system that has a loop-opening location identified as 'X'. Since loop gain values less than 1 are ignored, this requirement specifies minimum gain only below 1 rad/s, with no restriction on loop gain at higher frequency.

## Minimum Loop Gain as Constraint on Sensitivity Function

Examine a minimum loop gain requirement against the tuned loop gain. A minimum loop gain requirement is converted to a constraint on the gain of the sensitivity function at the requirement location.

To see this relationship between the requirement and the sensitivity function, tune the following closed-loop system with loop openings at X1 and X2. The control system has tunable PID controllers C1 and C2.

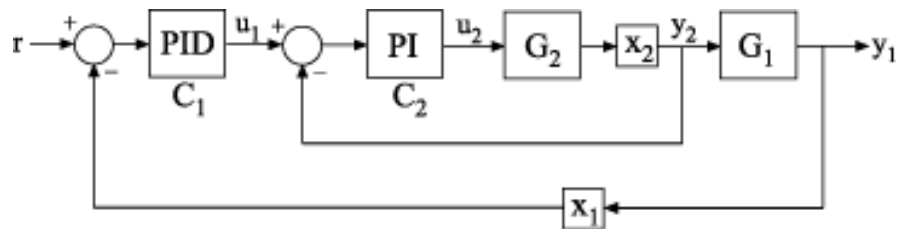

Create a model of the control system.

```
G2 = zpk([], -2, 3);
G1 = zpk([], [-1 -1 -1], 10);
C20 = ltiblock.pid('C2', 'pi');
C10 = ltiblock.pid('C1', 'pid');
X1 = loopswitch('X1');
X2 = loopswitch('X2');
InnerLoop = feedback(X2*G2*C20, 1);
CL0 = feedback(G1*InnerLoop*C10, X1);
CL0.InputName = 'r';
CL0.OutputName = 'y';
```



Specify some tuning requirements, including a minimum loop gain requirement. Tune the control system to these requirements.


```
Rtrack = TuningGoal.Tracking('r','y',10,0.01);  
Rreject = TuningGoal.Gain('X2','y',0.1);  
Rgain = TuningGoal.MinLoopGain('X2',100,10000);  
Rgain.Openings = 'X1';  
  
[CL,fSoft] = systune(CLO,[Rtrack,Rreject,Rgain]);
```

```
Final: Soft = 1.07, Hard = -Inf, Iterations = 80
```

Examine the TuningGoal.MinLoopGain requirement against the corresponding tuned response.

```
viewSpec(Rgain,CL)
```

# TuningGoal.MinLoopGain

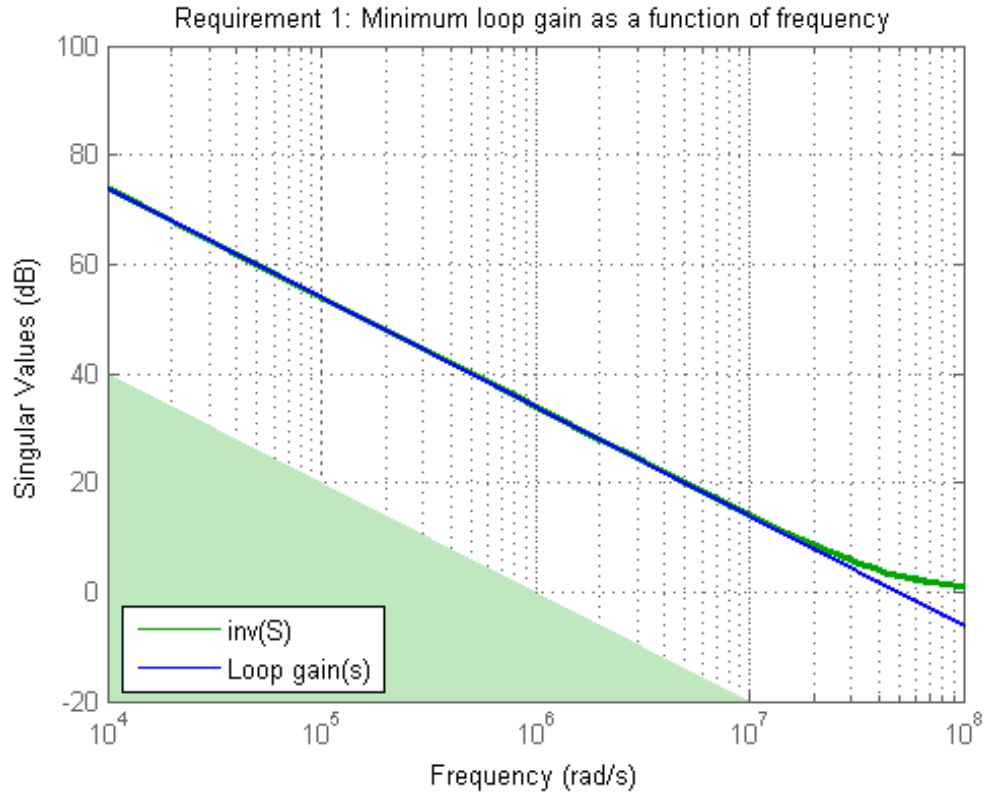


The plot shows the achieved loop gain for the loop at X2 (blue line). The plot also shows the inverse of the achieved sensitivity function,  $S$ , at the location X2 (green line). The inverse sensitivity function at this location is given by  $\text{inv}(S) = I+L$ . Here,  $L$  is the open-loop point-to-point loop transfer measured at X2.

The minimum loop gain requirement  $R_{\text{gain}}$  is constraint on  $\text{inv}(S)$ , represented in the plot by the green shaded region. The constraint on  $\text{inv}(S)$  can be thought of as a minimum gain constraint on  $L$  that

applies where the gain of  $L$  (or the smallest singular value of  $L$ , for MIMO loops) is greater than 1.

## Requirement without Stability Constraint on Inner Loop

Create a requirement that specifies a minimum loop gain of 20 dB (100) at 50 rad/s on the inner loop of the following control system.

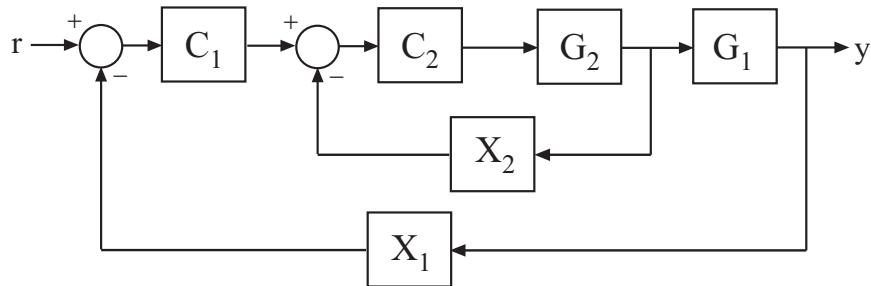

```
Req = TuningGoal.MinLoopGain('X2',50,100);
```

Configure the requirement to apply to the loop gain of the inner loop measured with the outer loop open.

```
Req.Openings = 'X2';
```

Setting `Req.Openings` tells the tuning algorithm to enforce this requirement with loops open at the specified location.

By default, tuning using `TuningGoal.MinLoopGain` imposes a stability requirement as well as the minimum loop gain requirement. Practically, in some control systems it is not possible to achieve a stable inner loop. When this occurs, remove the stability requirement for the inner loop by setting the `Stabilize` property to `false`.

```
Req.Stabilize = false;
```

The tuning algorithm still imposes a stability requirement on the overall tuned control system, but not on the inner loop alone.

# TuningGoal.MinLoopGain

---

## See Also

looptune | systune | systune (for sITuner) | looptune (for sITuner) | viewSpec | evalSpec | TuningGoal.Gain | TuningGoal.LoopShape | TuningGoal.MaxLoopGain | TuningGoal.Margins | sITuner | sigma

## How To

- “Loop Shape and Stability Margin Specifications”
- “PID Tuning for Setpoint Tracking vs. Disturbance Rejection”

**Purpose**

Maximum loop gain constraint for control system tuning

**Description**


Use the `TuningGoal.MaxLoopGain` object to enforce a maximum loop gain and desired roll-off in a particular frequency band. Use this requirement with control system tuning commands such as `systune` or `looptune`.

This requirement imposes a maximum gain on the open-loop frequency response ( $L$ ) at a specified location in your control system. You specify the maximum open-loop gain as a function of frequency (a maximum *gain profile*). For MIMO feedback loops, the specified gain profile is interpreted as an upper bound on the largest singular value of  $L$ .

When you tune a control system, the maximum gain profile is converted to a maximum gain constraint on the complementary sensitivity function,  $T = L/(I + L)$ .

The following figure shows a typical specified maximum gain profile (dashed line) and a resulting tuned loop gain,  $L$  (blue line). The pink region represents gain profile values that are forbidden by this requirement. The figure shows that when  $L$  is much smaller than 1, imposing a maximum gain on  $T$  is a good proxy for a maximum open-loop gain.

# TuningGoal.MaxLoopGain

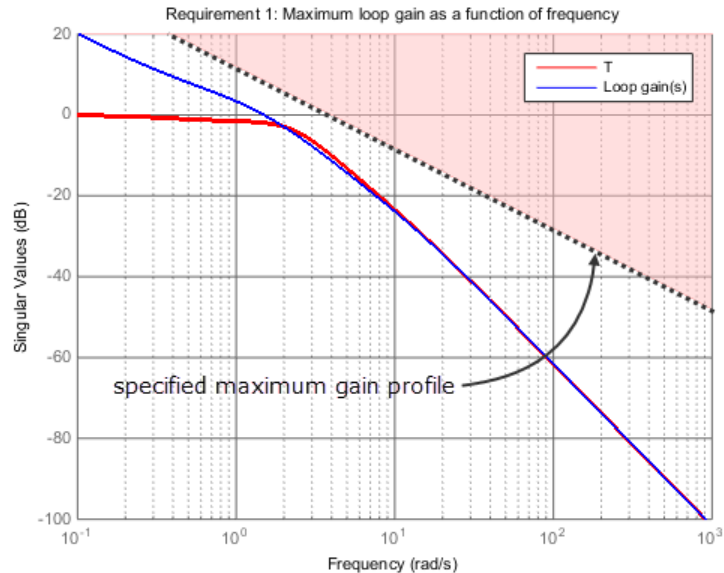

`TuningGoal.MaxLoopGain` and `TuningGoal.MinLoopGain` specify only high-gain or low-gain constraints in certain frequency bands. When you use these requirements, `systemtune` and `looptune` determine the best loop shape near crossover. When the loop shape near crossover is simple or well understood (such as integral action), you can use `TuningGoal.LoopShape` to specify that target loop shape.

## Construction

`Req = TuningGoal.MaxLoopGain(location, loopgain)` creates a tuning requirement for limiting the gain of a SISO or MIMO feedback loop. The requirement limits the open-loop frequency response measured at the specified locations to the maximum gain profile specified by `loopgain`. You can specify the maximum gain profile as a smooth transfer function or sketch a piecewise error profile using an `frd` model. Only gain values smaller than 1 are enforced.

`Req = TuningGoal.MaxLoopGain(location, fmax, gmax)` specifies a maximum gain profile of the form `loopgain = K/s` (integral action).

The software chooses  $K$  such that the gain value is  $g_{\max}$  at the specified frequency,  $f_{\max}$ .

## Input Arguments

### location

Location at which the maximum open-loop gain is constrained, specified as a string or cell array of strings. These strings identify one or more loop-opening locations in the control system to tune. What loop-opening locations are available depends on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, `location` contains the names of one or more feedback loops in the `Location` property of `loopswitch` blocks in the control system model. For example, the following code creates a PI loop with a loop switch marking the plant input 'u'.

```
S = loopswitch('u');  
G = tf(1,[1 2]);  
C = ltiblock.pid('C','pi');  
T = feedback(G*S*C,1);
```

You can use the string 'u' to refer to the sensitivity at the plant input.

- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, `location` contains the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.

# TuningGoal.MaxLoopGain

---

- If you are tuning a Simulink model of a control system using an sITuner interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, `location` contains the names of one or more of these analysis points.

If `location` is a cell array of loop-opening locations, then the maximum gain requirement applies to the resulting MIMO loop.


## **loopgain**

Maximum open-loop gain as a function of frequency.

You can specify `loopgain` as a smooth SISO transfer function (`tf`, `zpk`, or `ss` model). Alternatively, you can sketch a piecewise gain profile using a `frd` model. For example, the following `frd` model specifies a maximum gain of 1 (0 dB) at 1 rad/s, rolling off at a rate of  $-20$  dB/dec up to 10 rad/s, and a rate of  $-40$  dB/dec at higher frequencies.

```
loopgain = frd([1 1e-1 1e-3],[1 10 100]);  
bodemag(loopgain)
```



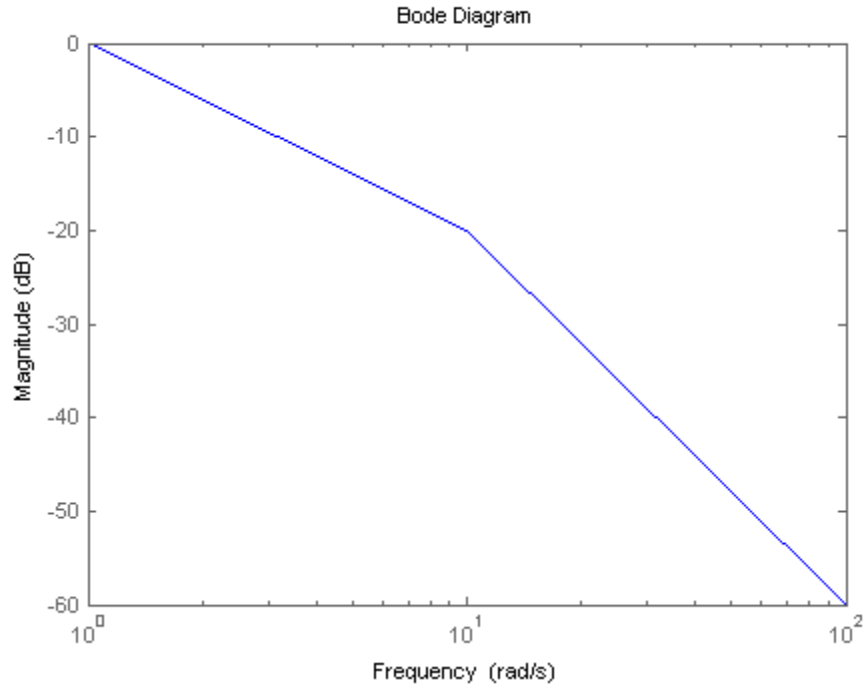

When you use an `frd` model to specify `loopgain`, the software automatically maps your specified gain profile to a `zpk` model. The magnitude of this model approximates the desired gain profile. Use `viewSpec(Req)` to plot the magnitude of that `zpk` model.

Only gain values smaller than 1 are enforced. For multi-input, multi-output (MIMO) feedback loops, the gain profile is interpreted as a minimum roll-off requirement, which is an upper bound on the largest singular value of  $L$ . For more information about singular values, see `sigma`.

### **fmax**

Frequency of maximum gain `gmax`, specified as a scalar value in rad/s.

# TuningGoal.MaxLoopGain

---

Use this argument to specify a maximum gain profile of the form  $\text{loopgain} = K/s$  (integral action). The software chooses  $K$  such that the gain value is  $\text{gmax}$  at the specified frequency,  $\text{fmax}$ .

## **gmax**

Value of maximum gain occurring at  $\text{fmax}$ , specified as a scalar absolute value.

Use this argument to specify a maximum gain profile of the form  $\text{loopgain} = K/s$  (integral action). The software chooses  $K$  such that the gain value is  $\text{gmax}$  at the specified frequency,  $\text{fmax}$ .

## **Properties**

### **Location**

Location at which maximum loop gain is constrained, specified as a string or cell array of strings. These strings identify one or more loop-opening locations in the control system to tune.

The value of the `Location` property is set by the `location` input argument when you create the `TuningGoal.Sensitivity` requirement.

### **MaxGain**

Maximum open-loop gain as a function of frequency, specified as a SISO zpk model.

The software automatically maps the input argument `loopgain` onto a zpk model. The magnitude of this zpk model approximates the desired gain profile. Alternatively, if you use the `fmax` and `gmax` arguments to specify the gain profile, this property is set to  $K/s$ . The software chooses  $K$  such that the gain value is  $\text{gmax}$  at the specified frequency,  $\text{fmax}$ .

Use `viewSpec(Req)` to plot the magnitude of the open-loop maximum gain profile.

### **LoopScaling**

Toggle for automatically scaling loop signals, specified as 'on' or 'off'.

In multi-loop or MIMO control systems, the feedback channels are automatically rescaled to equalize the off-diagonal terms in the open-loop transfer function (loop interaction terms). Set `LoopScaling` to 'off' to disable such scaling and shape the unscaled open-loop response.

**Default:** 'on'

## Stabilize

Stability requirement on closed-loop dynamics, specified as 1 (true) or 0 (false).

When `Stabilize` is true, this requirement stabilizes the specified feedback loop, as well as imposing gain or loop-shape requirements. Set `Stabilize` to false if stability for the specified loop is not required or cannot be achieved.

**Default:** 1 (true)

## Focus

Frequency band in which tuning requirement is enforced, specified as a row vector of the form `[min,max]`.

Set the `Focus` property to limit enforcement of the requirement to a particular frequency band. Express this value in the frequency units of the control system model you are tuning (rad/TimeUnit). For example, suppose `Req` is a requirement that you want to apply only between 1 and 100 rad/s. To restrict the requirement to this band, use the following command:

```
Req.Focus = [1,100];
```

**Default:** `[0,Inf]` for continuous time; `[0,pi/Ts]` for discrete time, where `Ts` is the model sampling time.

## Models

# TuningGoal.MaxLoopGain

---

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.

- A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an sITuner interface, a loop-opening location can be any analysis point added to the interface using addPoint. In this case, set Openings to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an sITuner interface.

**Default:** {}

## Name

Name of the requirement object, specified as a string.

For example, if Req is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Algorithms

When you tune a control system using a TuningGoal object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ . Here,  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the TuningGoal.MaxLoopGain requirement,  $f(x)$  is given by:

$$f(x) = \left\| W_T \left( D^{-1} T D \right) \right\|_{\infty}.$$

$W_T$  is the reciprocal of the maximum loop gain profile, MaxGain.  $D$  is a diagonal scaling (for MIMO loops).  $T$  is the complementary sensitivity function at Location.

# TuningGoal.MaxLoopGain

---

Although  $T$  is a closed-loop transfer function, driving  $f(x) < 1$  is equivalent to enforcing an upper bound on the open-loop transfer,  $L$ , in a frequency band where the gain of  $L$  is less than one. To see why, note that  $T = L/(I + L)$ . For SISO loops, when  $|L| \ll 1$ ,  $|T| \approx |L|$ . Therefore, enforcing the open-loop maximum gain requirement,  $|L| < 1/|W_T|$ , is roughly equivalent to enforcing  $|W_T T| < 1$ . For MIMO loops, similar reasoning applies, with  $\|T\| \approx \sigma_{\max}(L)$ , where  $\sigma_{\max}$  is the largest singular value.

## Examples

### Maximum Loop Gain Requirement


Create a requirement that limits the maximum open-loop gain of a feedback loop to a specified profile.

Suppose that you are tuning a control system that has a loop-opening location identified by `PILoop`. Limit the open-loop gain measured at that location to 1 (0 dB) at 1 rad/s, rolling off at a rate of -20 dB/dec up to 10 rad/s, and a rate of -40 dB/dec at higher frequencies. Use an `frd` model to sketch this gain profile.

```
loopgain = frd([1 1e-1 1e-3],[1 10 100]);  
Req = TuningGoal.MaxLoopGain('PILoop',loopgain);
```

The software converts `loopgain` into a smooth function of frequency that approximates the piecewise-specified requirement. Display the requirement using `viewSpec`.

```
viewSpec(Req)
```

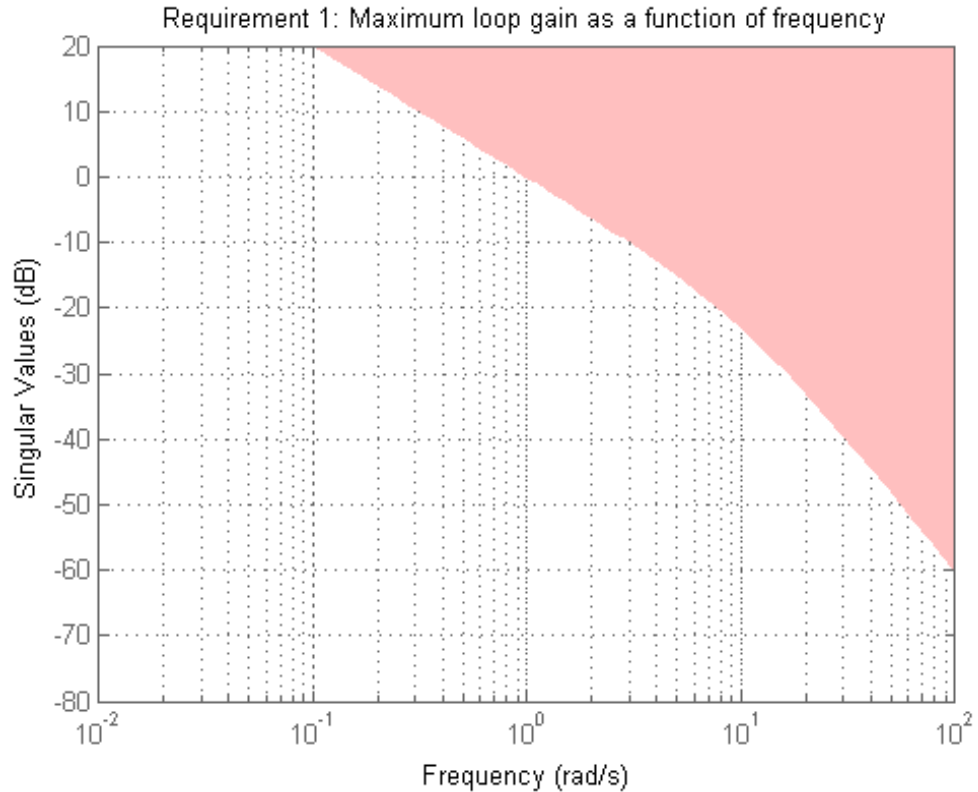

The yellow region indicates where the requirement is violated, except that gain values greater than 1 are not enforced. Therefore, this requirement only specifies minimum roll-off rates at frequencies above 1 rad/s.

You can use `Req` as an input to `looptune` or `systune` when tuning the control system.


# TuningGoal.MaxLoopGain

---

## Integral Loop Gain Specified as Gain Value at Single Frequency

Create a requirement that specifies a maximum loop gain of the form  $L = K / s$ . The maximum gain attains the value of -20 dB (0.01) at 100 rad/s.

```
Req = TuningGoal.MaxLoopGain('X',100,0.01);  
viewSpec(Req)
```

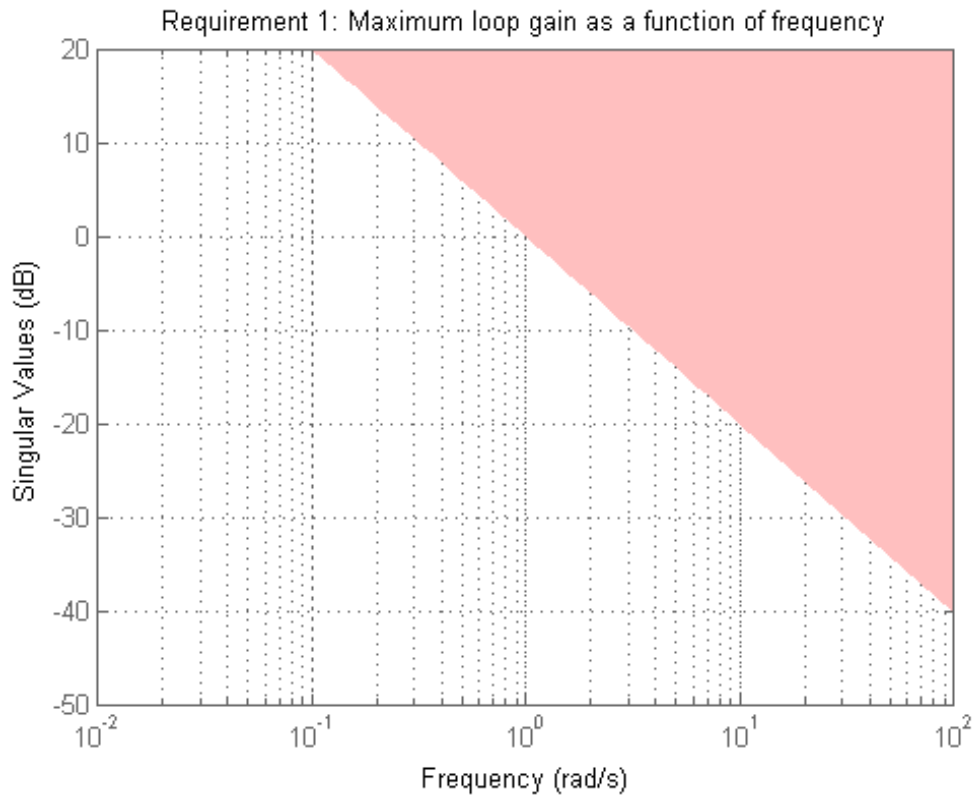




viewSpec confirms that the requirement is correctly specified. You can use this requirement to tune a control system that has a loop-opening location identified as 'X'. Since loop gain values greater than 1 are ignored, this requirement specifies a rolloff of 20 dB/decade above 1 rad/s, with no restriction on loop gain below that frequency.

## Requirement without Stability Constraint on Inner Loop

Create a requirement that specifies a maximum loop gain of  $-20$  dB (0.01) at 100 rad/s on the inner loop of the following control system.

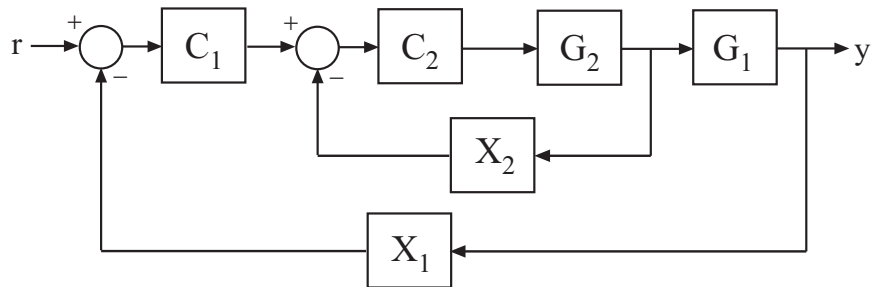

```
Req = TuningGoal.MaxLoopGain('X2',100,0.01);
```

Configure the requirement to apply to the loop gain of the inner loop measured with the outer loop open.

```
Req.Openings = 'X2';
```

Setting Req.Openings tells the tuning algorithm to enforce this requirement with loops open at the specified location.

By default, tuning using TuningGoal.MaxLoopGain imposes a stability requirement as well as the maximum loop gain requirement. Practically, in some control systems it is not possible to achieve a stable inner loop. When this occurs, remove the stability requirement for the inner loop by setting the Stabilize property to false.

```
Req.Stabilize = false;
```

# TuningGoal.MaxLoopGain

---

The tuning algorithm still imposes a stability requirement on the overall tuned control system, but not on the inner loop alone.

## See Also

`looptune` | `system` | `looptune` (for `sITuner`) | `system` (for `sITuner`) | `viewSpec` | `evalSpec` | `TuningGoal.Gain` | `TuningGoal.LoopShape` | `TuningGoal.MinLoopGain` | `TuningGoal.Margins` | `sITuner` | `sigma`

## How To

- “Loop Shape and Stability Margin Specifications”
- “PID Tuning for Setpoint Tracking vs. Disturbance Rejection”
- “MIMO Control of Diesel Engine”
- “Tuning of a Two-Loop Autopilot”

**Purpose** Overshoot constraint for control system tuning

**Description** Use the `TuningGoal.Overshoot` object to limit the overshoot in the step response from specified inputs to specified outputs of a control system. Use this requirement for control system tuning with tuning commands such as `systune` or `looptune`.

**Construction** `Req = TuningGoal.Overshoot(inputname,outputname,maxpercent)` creates a tuning requirement for limiting the overshoot in the step response between the specified signal locations. The scalar `maxpercent` specifies the maximum overshoot as a percentage.

When you use `TuningGoal.Overshoot` for tuning, the software maps overshoot constraints to peak gain constraints assuming second-order system characteristics. Therefore, the mapping is only approximate for higher-order systems. In addition, this requirement cannot reliably reduce the overshoot below 5%.

## Input Arguments

### **inputname**

Input signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as input signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `inputname` can include:
  - Any model input.
  - Any linearization input point in the model.
  - Any signal identified as an analysis point or a loop-opening location in an `sITuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `sITuner` interface.

# TuningGoal.Overshoot

---

- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `systune`, then `inputname` can include:


- Any input of the control system model
- Any loopswitch channel in the control system model

For example, if you are tuning a control system model, `T`, then `inputname` can be a string contained in `T.InputName`. Also, if `T` contains a loopswitch block with a switch channel `X`, then `inputname` can include `X`.

- If you are using the requirement to tune a controller model, `C0` for a plant `G0`, using `looptune`, then `inputname` can include:

- Any input of `C0` or `G0`
- Any loopswitch channel in `C0` or `G0`

If `inputname` is a loopswitch channel of a generalized model, the input signal for the requirement is the implied input associated with the switch:

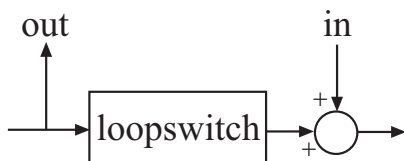

## **outputname**

Output signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as output signals for the tuning requirement are as follows.


- If you are using the requirement to tune a Simulink model of a control system, then `outputname` can include:
  - Any model output

- Any linearization output point in the model
- Any signal identified as an analysis point or a loop-opening location in an sITuner interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the sITuner interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `systune`, then `outputname` can include:
  - Any output of the control system model
  - Any loopswitch channel in the control system model

For example, if you are tuning a control system model, `T`, then `outputname` can be a string contained in `T.OutputName`. Also, if `T` contains a loopswitch block with a switch channel `X`, then `outputname` can include `X`.

- If you are using the requirement to tune a controller model, `C0`, for a plant, `G0`, using `looptune`, then `outputname` can include:
  - Any output of `C0` or `G0`
  - Any loopswitch channel in `C0` or `G0`

If `outputname` is a loopswitch channel of a generalized model, the output signal for the requirement is the implied output associated with the switch:

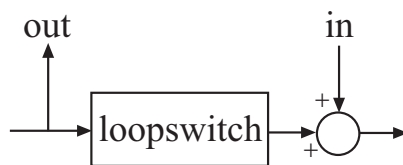

## **maxpercent**

Maximum percent overshoot, specified as a scalar value. For example, the following code specifies a maximum 5% overshoot in the step response from 'r' to 'y'.

# TuningGoal.Overshoot

---

```
Req = TuningGoal.Overshoot('r','y',5);
```

TuningGoal.OverShoot cannot reliably reduce the overshoot below 5%.

## Properties

### Input

Input signal names, specified as a cell array of strings. These strings specify the names of the inputs of the transfer function that the tuning requirement constrains. The initial value of the Input property is set by the `inputname` input argument when you construct the requirement object.

### InputScaling

Reference signal scaling, specified as a vector of positive real values.

For a MIMO tuning requirement, when the choice of units results in a mix of small and large signals in different channels of the response, use this property to specify the relative amplitude of each entry in the vector-valued step input. This information is used to scale the off-diagonal terms in the transfer function from reference to tracking error. This scaling ensures that cross-couplings are measured relative to the amplitude of each reference signal.

For example, suppose that `Req` is a requirement that signals `{'y1','y2'}` track reference signals `{'r1','r2'}`. Suppose further that you require the outputs to track the references with less than 10% cross-coupling. If `r1` and `r2` have comparable amplitudes, then it is sufficient to keep the gains from `r1` to `y2` and `r2` and `y1` below 0.1. However, if `r1` is 100 times larger than `r2`, the gain from `r1` to `y2` must be less than 0.001 to ensure that `r1` changes `y2` by less than 10% of the `r2` target. To ensure this result, set the `InputScaling` property as follows.

```
Req.InputScaling = [100,1];
```

This tells the software to take into account that the first reference signal is 100 times greater than the second reference signal.

The default value, [ ] , means no scaling.

**Default:** [ ]

## Output

Output signal names, specified as a cell array of strings. These strings specify the names of the outputs of the transfer function that the tuning requirement constrains. The initial value of the Output property is set by the `outputname` input argument when you construct the requirement object.

## MaxOvershoot

Maximum percent overshoot, specified as a scalar value. For example, the scalar value 5 means the overshoot should not exceed 5%. The initial value of the `MaxOvershoot` property is set by the `maxpercent` input argument when you construct the requirement object.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, set `Openings` to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an `sITuner` interface.

**Default:** `{}`

## Name

Name of the requirement object, specified as a string.



For example, if Req is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Examples

### Overshoot Constraint

Create a requirement that limits the overshoot of the step response from signals named 'r' to 'y' in a control system to 8 percent.

```
Req = TuningGoal.Overshoot('r','y',8);
```

You can use Req as an input to looptune or systune when tuning the control system.

Configure the requirement to apply only to the second model in a model array to tune. Also, configure the requirement to be evaluated with a loop open in the control system.

```
Req.Models = 2;  
Req.Openings = 'OuterLoop';
```

Setting the Models property restricts application of the requirement to the second model in an array, when you use the requirement to tune an array of control system models. Setting the Openings property specifies that requirement is evaluated with a loop opened at the location in the control system identified by 'OuterLoop'.

## See Also

looptune | systune | systune (for sITuner) | looptune (for sITuner) | viewSpec | evalSpec | TuningGoal.Gain | TuningGoal.Sensitivity | sITuner

## How To

- “Time-Domain Specifications”
- “Multi-Loop PID Control of a Robot Arm”

# TuningGoal.Poles

---

**Purpose** Constraint on control system dynamics

**Description** Use the `TuningGoal.Poles` object to specify a tuning requirement for constraining the closed-loop dynamics of a control system, specific feedback loops within the control system, or specific open-loop configurations. You can use this requirement for control system tuning with tuning commands, such as `sys tune` or `loop tune`. A `TuningGoal.Poles` requirement can ensure a minimum decay rate or minimum damping of the poles of the control system or loop. The requirement can also eliminate fast dynamics in the tuned system.

After you create a requirement object, you can further configure the tuning requirement by setting “Properties” on page 1-86 of the object.

**Construction** `Req = TuningGoal.Poles()` creates a default template for constraining the closed-loop pole locations. Modify the `MinDecay`, `MinDamping`, and `MaxFrequency` properties to shape the region where the closed-loop poles should lie. By default, the `TuningGoal.Poles` requirement imposes an implicit stability constraint on the specified loop. However, the default requirement does not impose a finite minimum decay rate or a finite maximum frequency for the poles. To change this behavior, set the `MinDecay` and `MaxFrequency` properties, respectively. (See “Properties” on page 1-86.)

`Req = TuningGoal.Poles(location)` constrains the poles of the sensitivity function measured at a specified location in the control system. (See `TuningGoal.Sensitivity` for details.) Use this syntax to narrow the scope of the requirement to a particular feedback loop.

If you want to constrain the poles of the system with one or more feedback loops opened, set the `Openings` property. To limit the enforcement of this requirement to poles having natural frequency within a specified frequency range, set the `Focus` property. (See “Properties” on page 1-86.)

## Input Arguments

### location

Location identifying the feedback loop whose sensitivity function is constrained, specified as a string or cell array of strings that identify one or more loop-opening locations in the control system to tune. What loop-opening locations are available depends on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, `location` contains the names of one or more feedback loops in the `Location` property of `loopswitch` blocks in the control system model. For example, the following code creates a PI loop with a loop switch marking the plant input 'u'.

```
S = loopswitch('u');  
G = tf(1,[1 2]);  
C = ltiblock.pid('C','pi');  
T = feedback(G*S*C,1);
```

You can use the string 'u' to refer to the sensitivity at the plant input.

- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, `location` contains the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, `location` contains the names of one or more of these analysis points.

# TuningGoal.Poles

---

If `location` is a cell array of loop-opening locations, then the sensitivity requirement applies to the MIMO loop.

## Properties

### Location

Location at which the sensitivity to disturbances is constrained, specified as a string or cell array of strings that identify one or more loop-opening locations in the control system to tune.

The value of the `Location` property is set by the `location` input argument when you create the `TuningGoal.Poles` requirement.

### MinDecay

Minimum decay rate of closed-loop poles of tuned system, specified as a positive scalar value. When you tune the control system using this requirement, closed-loop system poles that depend on the tunable parameters are constrained to satisfy  $\text{Re}(s) < -\text{MinDecay}$ . This constraint helps ensure stable dynamics in the tuned system.

By default, `MinDecay = 0`. In that case, the requirement imposes an implicit constraint on stability of the system poles.

Change the value of this property to set a finite minimum decay rate. For example, suppose `Req` is a `TuningGoal.Poles` requirement. Change the minimum decay rate to 0.001:

```
Req.MinDecay = 0.001;
```

This constraint only applies to poles with natural frequencies in the range specified by the `Focus` property.

**Default:** 0

### MinDamping

Minimum damping of closed-loop poles of tuned system, specified as a scalar value between 0 and 1. When you tune the control system using this requirement, closed-loop system poles that

depend on the tunable parameters are constrained to satisfy  $\text{Re}(s) < -\text{MinDamping} * |s|$ .

Change the value of this property to set a finite minimum damping. For example, suppose `Req` is a `TuningGoal.Poles` requirement. Change the minimum damping to 0.5:

```
Req.MinDamping = 0.5;
```

This constraint only applies to poles with natural frequencies in the range specified by the `Focus` property.

**Default:** 0

## MaxFrequency

Maximum natural frequency of poles of tuned system, specified as a positive scalar value in the units of the control system model you are tuning (`rad/TimeUnit`). When you tune the control system using this requirement, closed-loop system poles that depend on the tunable parameters are constrained to satisfy  $|s| < \text{MaxFrequency}$ . This constraint prevents fast dynamics in the control system.

Change the value of this property to a finite maximum frequency. For example, suppose `Req` is a `TuningGoal.Poles` requirement. Change the maximum frequency to 1000:

```
Req.MaxFrequency = 1000;
```

This constraint only applies to poles with natural frequencies in the range specified by the `Focus` property.

**Default:** `Inf`

## Focus

Frequency band in which tuning requirement is enforced, specified as a row vector of the form `[min,max]`.

# TuningGoal.Poles

---

Set the `Focus` property to limit enforcement of the requirement to a particular frequency band. Express this value in the frequency units of the control system model you are tuning (`rad/TimeUnit`). For example, suppose `Req` is a requirement that you want to apply only between 1 and 100 rad/s. To restrict the requirement to this band, use the following command:

```
Req.Focus = [1,100];
```

**Default:** `[0,Inf]` for continuous time; `[0,pi/Ts]` for discrete time, where `Ts` is the model sampling time.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** `NaN`

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, set `Openings` to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an `sITuner` interface.

**Default:** {}

## **Name**

Name of the requirement object, specified as a string.

For example, if `Req` is a requirement:

```
Req.Name = 'LoopReq';
```


**Default:** []

# TuningGoal.Poles

## Examples

### Constrain Closed-Loop Dynamics of Specified Loop of System to Tune

Create a requirement that constrains the inner loop of the following control system to be stable and free of fast dynamics. Specify that the constraint is evaluated with the outer loop open.

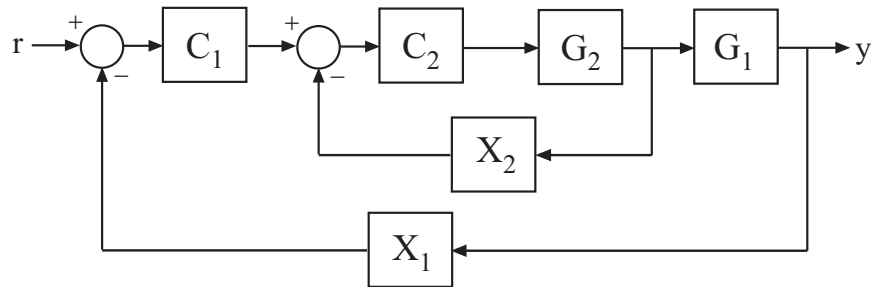

Create a model of the system. To do so, specify and connect the numeric plant models,  $G_1$  and  $G_2$ , and the tunable controllers  $C_1$  and  $C_2$ . Also, create and connect the loopswitch blocks,  $X_1$  and  $X_2$ , which mark potential loop-opening sites.

```
G1 = tf(10,[1 10]);  
G2 = tf([1 2],[1 0.2 10]);  
C1 = ltiblock.pid('C','pi');  
C2 = ltiblock.gain('G',1);  
X1 = loopswitch('X1');  
X2 = loopswitch('X2');  
T = feedback(G1*feedback(G2*C2,X2)*C1,X1);
```

Create a tuning requirement that constrains the dynamics of the closed-loop poles.

```
Req = TuningGoal.Poles();
```

Specify that the constraint on the tuned system poles is applied with the outer loop open. Further restrict the poles of the inner loop to the region  $\text{Re}(s) < -0.1$ ,  $|s| < 30$ .



```
Req.Openings = 'X1';  
Req.MinDecay = 0.1;  
Req.MaxFrequency = 30;
```

When you tune T using this requirement, the constraint applies only to the poles of the inner loop, evaluated with the outer loop open.

After you tune T, you can use `viewSpec` to validate the tuned control system against the requirement.

## Constrain Dynamics of Specified Feedback Loop

Create a requirement that constrains the inner loop of the system of the previous example to be stable and free of fast dynamics. Specify that the constraint is evaluated with the outer loop open.

Create a tuning requirement that constrains the dynamics of the inner feedback loop, the loop identified by X2.

```
Req = TuningGoal.Poles('X2');
```

Specify that the constraint on the tuned system poles is applied with the outer loop open. Further restrict the poles of the inner loop to the region  $\text{Re}(s) < -0.1$ ,  $|s| < 30$ .

```
Req.Openings = 'X1';  
Req.MinDecay = 0.1;  
Req.MaxFrequency = 30;
```

When you tune T using this requirement, the constraint applies only to the poles of the inner loop, evaluated with the outer loop open.

After you tune T, you can use `viewSpec` to validate the tuned control system against the requirement.


## Tips

- `TuningGoal.Poles` restricts the closed-loop dynamics of the tuned control system. To constrain the dynamics or ensure the stability of a single tunable component, use `TuningGoal.StableController`.

# TuningGoal.Poles

---

- The requirement only constrains dynamics that are in a feedback loop with the tuned elements of the control system. `TuningGoal.Poles` does not constrain dynamics that are independent of the tuned elements (such as weighting functions or open-loop dynamics). For example, consider the following control system, in which `C` is a tunable component.

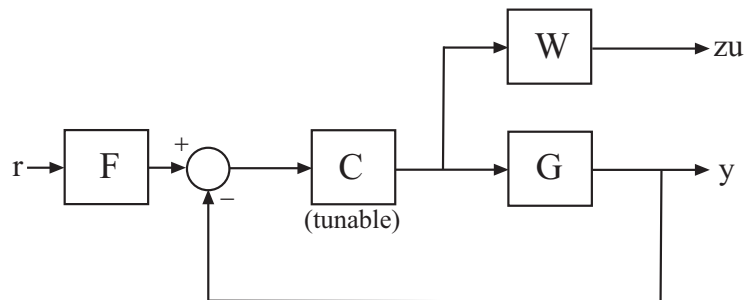

Tuning this control system with a `TuningGoal.Poles` requirement constrains the dynamics of the feedback loop containing  $G$  and  $C$ . However, the requirement does not constrain the dynamics of  $F$  or the weighting function,  $W$ .

## See Also

`looptune` | `systune` | `looptune` (for `slTuner`) | `systune` (for `slTuner`) | `viewSpec` | `evalSpec` | `ltiblock.tf` | `ltiblock.ss` | `TuningGoal.StableController`

## How To

- “System Dynamics Specifications”
- “Digital Control of Power Stage Voltage”
- “Multi-Loop Control of a Helicopter”

## Purpose

Disturbance rejection requirement for control system tuning

## Description

Use the `TuningGoal.Rejection` object to specify the minimum attenuation of a disturbance injected at a specified location in a control system. This requirement helps you tune control systems with tuning commands such as `systemtune` or `looptune`.

When you use a `TuningGoal.Rejection` requirement, the software attempts to tune the system so that the attenuation of a disturbance at the specified location exceeds the minimum attenuation factor you specify. This attenuation factor is the ratio between the open- and closed-loop sensitivities to the disturbance and is a function of frequency. You can achieve disturbance attenuation only inside the control bandwidth. The loop gain must be larger than one for the disturbance to be attenuated (attenuation factor  $> 1$ ).

## Construction

`Req = TuningGoal.Rejection(distloc,attfact)` creates a tuning requirement for rejecting a disturbance entering at `distloc`. This requirement constrains the minimum disturbance attenuation factor to the frequency-dependent value, `attfact`.

### Input Arguments

#### **distloc**

Disturbance location, specified as a string or a cell array of strings for vector-valued signals.

- If you are using the requirement to tune a Simulink model of a control system, then `distloc` can include any signal identified as an analysis point in an `sITuner` interface associated with the Simulink model. Use `addPoint` to identify such locations in the interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) with `systemtune` or `looptune`, then `inputname` can include any `loopswitch` channel in the model. For example, if you are tuning a control system model, `T`, that contains a `loopswitch` block with a switch channel named `X`,

# TuningGoal.Rejection

---

then `distloc` can include `X`. The disturbance location is the implied input associated with the switch:




## **attfact**

Attenuation factor as a function of frequency, specified as a numeric LTI model.

The `TuningGoal.Rejection` requirement constrains the minimum disturbance attenuation to the frequency-dependent value `attfact`. You can specify `attfact` as a smooth transfer function (`tf`, `zpk`, or `ss` model). Alternatively, you can specify a piecewise gain profile using a `frd` model. For example, the following code specifies an attenuation factor of 100 (40 dB) below 1 rad/s, gradually dropping to 1 (0 dB) past 10 rad/s, for a disturbance injected at `u`.

```
attfact = frd([100 100 1 1],[0 1 10 100]);  
Req = TuningGoal.Rejection('u',attfact);  
bodemag(attfact)
```

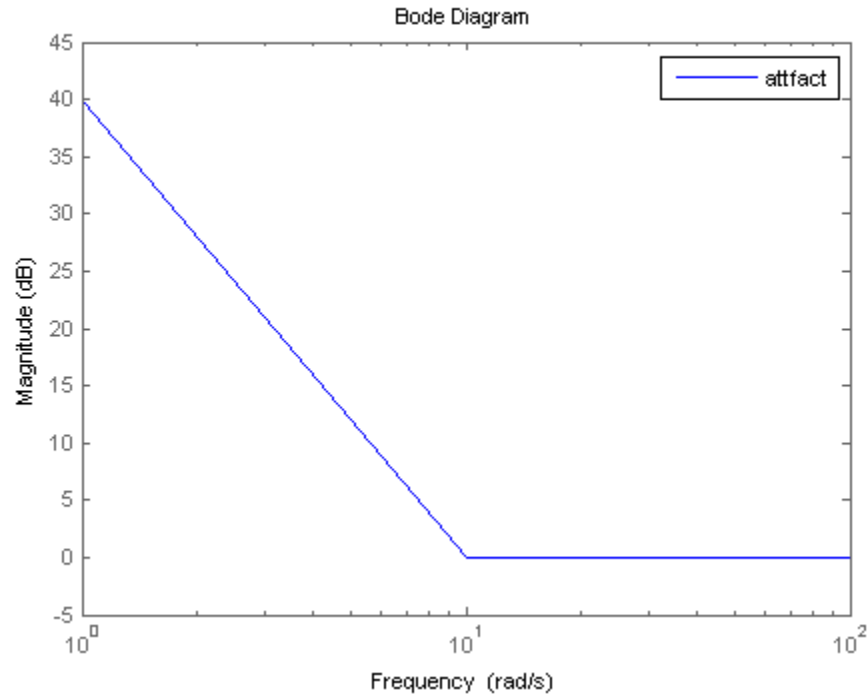

When you use an `frd` model to specify `attfact`, the gain profile is automatically mapped onto a `zpk` model. The magnitude of this `zpk` model approximates the desired gain profile. Use `viewSpec(Req)` to visualize the resulting attenuation profile.

## Properties

### **DisturbanceInput**

Disturbance location signal names, specified as a cell array of strings. The initial value of the `DisturbanceInput` property is set by the `distloc` input argument when you construct the requirement object.

### **MinAttenuation**

# TuningGoal.Rejection

---

Minimum disturbance attenuation as a function of frequency, expressed as a SISO zpk model.

The software automatically maps the `attfact` input argument to a zpk model. The magnitude of this zpk model approximates the desired attenuation factor and is stored in the `MinAttenuation` property. Use `viewSpec(Req)` to plot the magnitude of `MinAttenuation`.

## LoopScaling

Toggle for automatically scaling loop signals, specified as 'on' or 'off'.

For multiloop or MIMO disturbance rejection requirements, the feedback channels are automatically rescaled to equalize the off-diagonal (loop interaction) terms in the open-loop transfer function. Set `LoopScaling` to 'off' to disable such scaling and shape the unscaled open-loop response.

**Default:** 'on'

## Focus

Frequency band in which tuning requirement is enforced, specified as a row vector of the form `[min,max]`.

Set the `Focus` property to limit enforcement of the requirement to a particular frequency band. Express this value in the frequency units of the control system model you are tuning (`rad/TimeUnit`). For example, suppose `Req` is a requirement that you want to apply only between 1 and 100 rad/s. To restrict the requirement to this band, use the following command:

```
Req.Focus = [1,100];
```

**Default:** `[0,Inf]` for continuous time; `[0,pi/Ts]` for discrete time, where `Ts` is the model sampling time.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.

# TuningGoal.Rejection

---

- A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an sITuner interface, a loop-opening location can be any analysis point added to the interface using addPoint. In this case, set Openings to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an sITuner interface.

**Default:** {}

## Name

Name of the requirement object, specified as a string.

For example, if Req is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Algorithms

When you tune a control system using a TuningGoal object to specify a tuning requirement, the requirement is converted into a normalized scalar value  $f(x)$ . In this case,  $x$  is the vector of free (tunable) parameters in the control system. The parameter values are adjusted automatically to minimize  $f(x)$  or drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the TuningGoal.Rejection requirement,  $f(x)$  is given by:

$$f(x) = \max_{\omega \in \Omega} \|W(j\omega)S(j\omega, x)\|.$$

$W(j\omega)$  is the rational transfer function of the MinAttenuation property. This transfer function's magnitude approximates the minimum disturbance attenuation that you specify for the requirement.  $S(j\omega, x)$



is the closed-loop sensitivity function measured at the disturbance location.  $\Omega$  is the frequency interval over which the requirement is enforced, specified in the Focus property.

## Examples

### Constant Minimum Attenuation in Frequency Band

Create a tuning requirement that enforces a attenuation of at least a factor of 10 between 0 and 5 rad/s. The requirement applies to a disturbance entering a control system at a point identified as 'u'.

```
Req = TuningGoal.Rejection('u',10);  
Req.Name = 'Rejection spec';  
Req.Focus = [0 5]
```

### Frequency-Dependent Attenuation Profile

Create a tuning requirement that enforces an attenuation factor of at least 100 (40 dB) below 1 rad/s, gradually dropping to 1 (0 dB) past 10 rad/s. The requirement applies to a disturbance entering a control system at a point identified as 'u'.


```
attfact = frd([100 100 1 1],[0 1 10 100]);  
Req = TuningGoal.Rejection('u',attfact);
```

These commands use a `frd` model to specify the minimum attenuation profile as a function of frequency. The minimum attenuation of 100 below 1 rad/s, together with the minimum attenuation of 1 at the frequencies of 10 and 100 rad/s, specifies the desired rolloff of the requirement.

`attfact` is converted into a smooth function of frequency that approximates the piecewise specified requirement. Display the error requirement using `viewSpec`.

```
viewSpec(Req)
```

# TuningGoal.Rejection

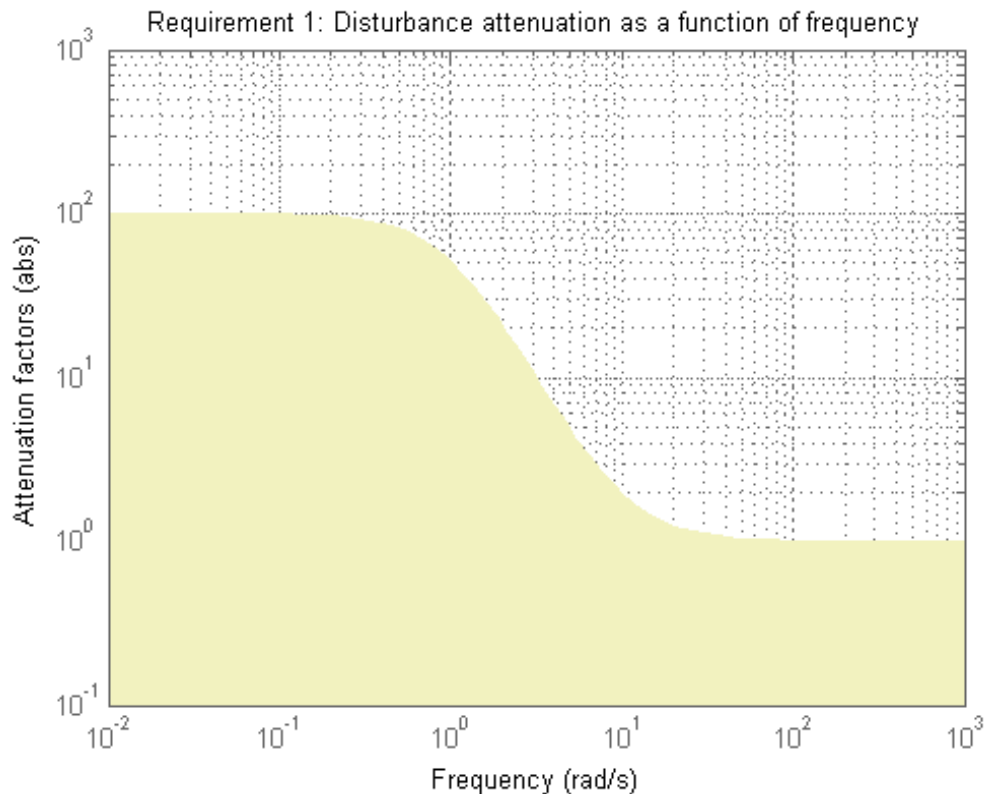

The yellow region indicates where the requirement is violated.

## See Also

[looptune](#) | [viewSpec](#) | [systune](#) | [systune \(for sITuner\)](#) | [looptune \(for sITuner\)](#) | [TuningGoal.Tracking](#) | [TuningGoal.LoopShape](#) | [sITuner](#)

## How To

- “Time-Domain Specifications”
- “Decoupling Controller for a Distillation Column”

- “Tuning of a Two-Loop Autopilot”

# TuningGoal.Sensitivity

---

**Purpose** Sensitivity requirement for control system tuning

**Description** Use the `TuningGoal.Sensitivity` object to limit the sensitivity of a feedback loop to disturbances. Constrain the sensitivity to be smaller than one at frequencies where you need good disturbance rejection. Use this requirement for control system tuning with tuning commands such as `systune` or `looptune`.

**Construction** `Req = TuningGoal.Sensitivity(location,maxsens)` creates a tuning requirement for limiting the sensitivity to disturbances entering a feedback loop at the specified location. `maxsens` specifies the maximum sensitivity as a function of frequency. You can specify the maximum sensitivity profile as a smooth transfer function or sketch a piecewise error profile using an `frd` model.

## Input Arguments

### **location**

Location at which the sensitivity to disturbances is constrained, specified as a string or cell array of strings that identify one or more loop-opening locations in the control system to tune. What loop-opening locations are available depends on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, `location` contains the names of one or more feedback loops in the `Location` property of `loopswitch` blocks in the control system model. For example, the following code creates a PI loop with a loop switch marking the plant input 'u'.

```
S = loopswitch('u');
G = tf(1,[1 2]);
C = ltiblock.pid('C','pi');
T = feedback(G*S*C,1);
```

You can use the string 'u' to refer to the sensitivity at the plant input.

- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, `location` contains the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, `location` contains the names of one or more of these analysis points.

If `location` is a cell array of loop-opening locations, then the sensitivity requirement applies to the MIMO loop.

## **maxsens**


Maximum sensitivity to disturbances as a function of frequency.

You can specify `maxsens` as a smooth SISO transfer function (`tf`, `zpk`, or `ss` model). Alternatively, you can sketch a piecewise gain profile using a `frd` model. For example, the following `frd` model specifies a maximum sensitivity of 0.01 (–40 dB) at 1 rad/s, increasing to 1 (0 dB) past 50 rad/s.

```
maxsens = frd([0.01 1 1],[1 50 100]);  
bodemag(maxsens)  
ylim([-45,5])
```

# TuningGoal.Sensitivity

---

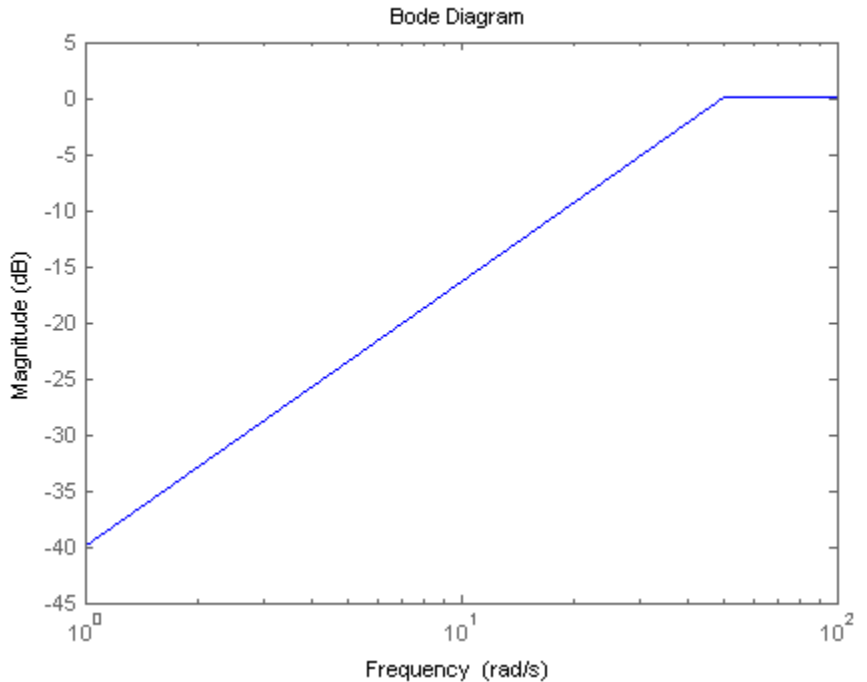

When you use an `frd` model to specify `maxsens`, the software automatically maps your specified gain profile to a `zpk` model whose magnitude approximates the desired gain profile. Use `viewSpec(Req)` to plot the magnitude of that `zpk` model.

## Properties

### Location

Location at which the sensitivity to disturbances is constrained, specified as a string or cell array of strings that identify one or more loop-opening locations in the control system to tune.

The value of the `Location` property is set by the `location` input argument when you create the `TuningGoal.Sensitivity` requirement.

## MaxSensitivity

Maximum sensitivity as a function of frequency, specified as a SISO zpk model.

The software automatically maps the input argument `maxsens` onto a zpk model. The magnitude of this zpk model approximates the desired gain profile. Use `viewSpec(Req)` to plot the magnitude of the zpk model `MaxSensitivity`.

## LoopScaling

Toggle for automatically scaling loop signals, specified as 'on' or 'off'.

In multi-loop or MIMO control systems, the feedback channels are automatically rescaled to equalize the off-diagonal terms in the open-loop transfer function (loop interaction terms). Set `LoopScaling` to 'off' to disable such scaling and shape the unscaled sensitivity function.

**Default:** 'on'

## Focus

Frequency band in which tuning requirement is enforced, specified as a row vector of the form `[min,max]`.

Set the `Focus` property to limit enforcement of the requirement to a particular frequency band. Express this value in the frequency units of the control system model you are tuning (`rad/TimeUnit`). For example, suppose `Req` is a requirement that you want to apply only between 1 and 100 rad/s. To restrict the requirement to this band, use the following command:

```
Req.Focus = [1,100];
```

**Default:** `[0,Inf]` for continuous time; `[0,pi/Ts]` for discrete time, where `Ts` is the model sampling time.

## Models

# TuningGoal.Sensitivity

---

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.



- A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an sITuner interface, a loop-opening location can be any analysis point added to the interface using addPoint. In this case, set Openings to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an sITuner interface.

**Default:** {}

## Name

Name of the requirement object, specified as a string.

For example, if Req is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Algorithms

When you tune a control system using a TuningGoal object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ , where  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the TuningGoal.Sensitivity requirement,  $f(x)$  is given by:

$$f(x) = \left\| \frac{1}{\text{MaxSensitivity}} S(s,x) \right\|_{\infty}.$$

$S(s,x)$  is the sensitivity function of the control system at location.


# TuningGoal.Sensitivity

---

## Examples

### Disturbance Sensitivity at Plant Input

Create a requirement that limits the sensitivity to disturbance at the plant input of the following control system. The control system contains a loopswitch block at the plant input, having a switch location identified by 'X'.

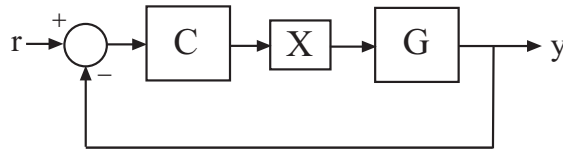


Specify a maximum sensitivity of 0.01 (-40 dB) at 1 rad/s, increasing to 1 (0 dB) past 10 rad/s. Use an `frd` model to sketch this target sensitivity.

```
maxsens = frd([0.01 1 1],[1 10 100]);  
Req = TuningGoal.Sensitivity('X',maxsens);
```

The software converts `maxsens` into a smooth function of frequency that approximates the piecewise-specified requirement. Display the requirement using `viewSpec`.

```
viewSpec(Req)
```

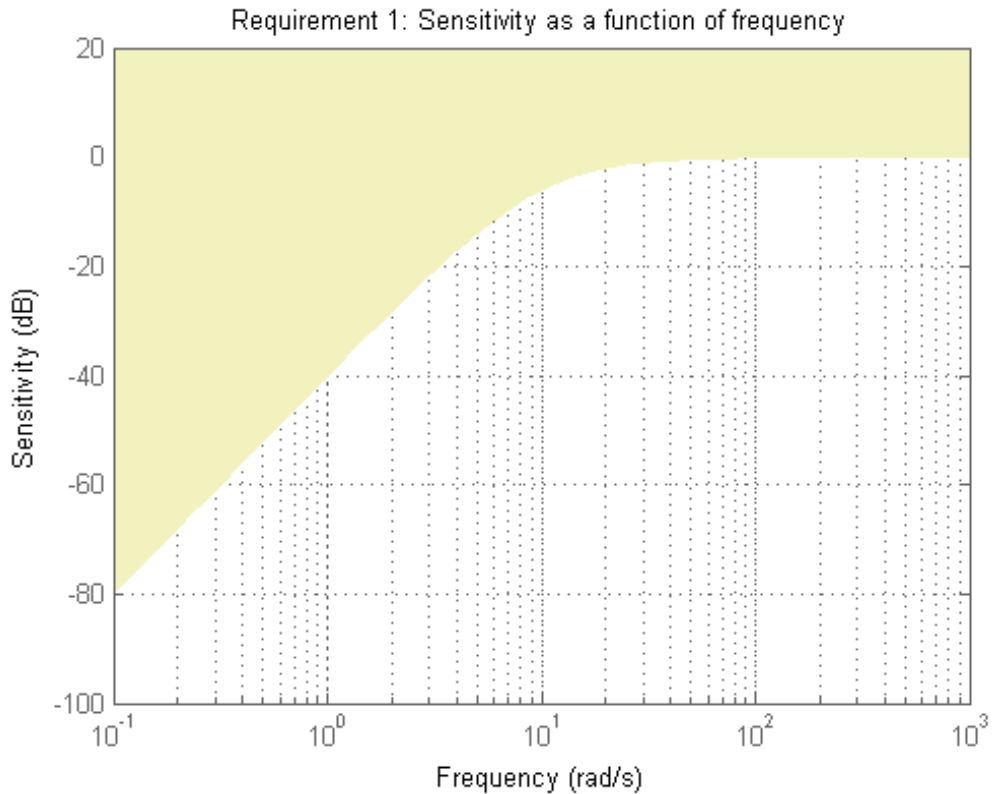

The yellow region indicates where the requirement is violated.

You can use Req as an input to `looptune` or `systune` when tuning the control system.

### **Requirement with Limited Frequency Range and Model Application**

Create a requirement that specifies a maximum sensitivity of 0.1 (10%) at frequencies below 5 rad/s. Configure the requirement to apply only to the second and third plant models.

# TuningGoal.Sensitivity

---

```
Req = TuningGoal.Sensitivity('u',0.1);  
Req.Focus = [0 5];  
Req.Models = [2 3];
```

You can use `Req` as an input to `looptune` or `systune` when tuning a control system that has a loop-opening location called 'u'. Setting the `Focus` property limits the application of the requirement to frequencies between 0 and 5 rad/s. Setting the `Models` property restricts application of the requirement to the second and third models in an array, when you use the requirement to tune an array of control system models.

## See Also

`looptune` | `systune` | `looptune` (for `sITuner`) | `systune` (for `sITuner`) | `viewSpec` | `evalSpec` | `TuningGoal.Gain` | `TuningGoal.LoopShape` | `TuningGoal.Rejection` | `TuningGoal.MinLoopGain` | `TuningGoal.MaxLoopGain` | `sITuner`

## How To

- “Frequency-Domain Specifications”

<b>Purpose</b>	Constraint on controller stability and fast dynamics for control system tuning
<b>Description</b>	<p>Use the <code>TuningGoal.StableController</code> requirement object to specify a tuning requirement that constrains the dynamics of a tunable component in a control system model. Use this requirement for constraining <code>ltiblock.tf</code> or <code>ltiblock.ss</code> components for control system tuning with tuning commands such as <code>systemune</code> or <code>looptune</code>. The <code>TuningGoal.StableController</code> requirement ensures that the tuned value of the tunable component is stable and free of fast dynamics.</p> <p>After you create a requirement object, you can further configure the tuning requirement by setting “Properties” on page 1-112 of the object.</p>
<b>Construction</b>	<p><code>Req = TuningGoal.StableController(blockID)</code> creates a tuning requirement. The tuning requirement specifies that the tunable component identified by <code>blockID</code> is stable and free of fast dynamics.</p> <p>By default, the <code>TuningGoal.StableController</code> requirement imposes an implicit stability constraint on the specified tunable component. However, the default requirement does not impose a finite minimum decay rate or a finite maximum frequency for poles in the tunable component. To change this behavior, set the <code>MinDecay</code> and <code>MaxFrequency</code> properties, respectively. (See “Properties” on page 1-112.)</p> <p>To limit the enforcement of this requirement to poles having natural frequency within a specified frequency range, set the <code>Focus</code> property. If you want to constrain the poles of the system with one or more feedback loops opened, set the <code>Openings</code> property. (See “Properties” on page 1-112.)</p>
	<b>Input Arguments</b>
	<b>blockID</b>
	Tunable component to constrain, specified as a string.
	The string <code>blockID</code> must correspond to the <code>Name</code> property of a Control Design Block in the control system you are tuning.

# TuningGoal.StableController

---

## Properties

### Block

Name of tunable component to constrain, specified as a string. The `blockID` input argument sets the value of `Block`.

### MinDecay

Minimum decay rate of poles of tunable component, specified as a positive scalar value in radians per second. When you tune the control system using this requirement, all poles of the tunable component are constrained to satisfy  $\text{Re}(s) < -\text{MinDecay}$ . This constraint helps ensure stable dynamics in the tunable component.

By default, `MinDecay = 0`. In that case, the requirement imposes an implicit constraint on stability of the tunable component.

Change the value of this property to set a finite minimum decay rate. For example, suppose `Req` is a `TuningGoal.StableController` requirement. Change the minimum decay rate to 0.001:

```
Req.MinDecay = 0.001;
```

This constraint only applies to poles with natural frequencies in the range specified by the `Focus` property.

**Default:** 0

### MaxFrequency

Maximum natural frequency of poles of tunable component, specified as a positive scalar value in radians per second. When you tune the control system using this requirement, all poles of the tunable component are constrained to satisfy  $|s| < \text{MaxFrequency}$ . This constraint prevents fast dynamics in the tunable component.

Change the value of this property to set a finite maximum frequency. For example, suppose `Req` is a `TuningGoal.StableController` requirement. Change the maximum frequency to 1000:

```
Req.MaxFrequency = 1000;
```

This constraint only applies to poles with natural frequencies in the range specified by the `Focus` property.

**Default:** `Inf`

## **Name**

Name of the requirement object, specified as a string.

For example, if `Req` is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** `[]`

## **Examples**

### **Constrain Dynamics of Tunable Transfer Function**

Create a tuning requirement that constrains the dynamics of a tunable transfer function block in a tuned control system.

For this example, suppose that you are tuning a control system that includes a compensator block parametrized as a second-order transfer function. Create a tuning requirement that restricts the poles of that transfer function to the region  $\text{Re}(s) < -0.1$ ,  $|s| < 30$ .

Create a tunable component that represents the compensator.

```
C = ltiblock.tf('Compensator',2,2);
```

This command creates a Control Design Block named 'Compensator' with two poles and two zeroes. You can construct a tunable control system model, `T`, by interconnecting this Control Design Block with other tunable and numeric LTI models. If you tune `T` using `systemtune`, the values of these poles and zeroes are unconstrained by default.

Create a tuning requirement to constrain the dynamics of the compensator block.

# TuningGoal.StableController

---

```
Req = TuningGoal.StableController('Compensator');
```

Set the minimum decay rate to 0.1 rad/s, and set the maximum frequency to 30 rad/s.

```
Req.MinDecay = 0.1;  
Req.MaxFrequency = 30;
```

If you tune  $T$  using `systemtune` and the tuning requirement `Req`, the poles of the compensator block are constrained satisfy these values.

After you tune  $T$ , you can use `viewSpec` to validate the tuned control system against the requirement.

## Tips

- `TuningGoal.StableController` restricts the dynamics of a single tunable component of the control system. To ensure the stability or restrict the overall dynamics of the tuned control system, use `TuningGoal.Poles`.

## See Also

`looptune` | `systemtune` | `systemtune` (for `slTuner`) | `looptune` (for `slTuner`) | `viewSpec` | `evalSpec` | `ltiblock.tf` | `ltiblock.ss` | `TuningGoal.Poles`

## How To

- “System Dynamics Specifications”
- “Models with Tunable Coefficients”



## Purpose

Step response requirement for control system tuning

## Description

Use the `TuningGoal.StepResp` object to specify a target step response from specified inputs to specified outputs of a control system. Use this requirement with control system tuning commands such as `systemtune` or `looptune`.

## Construction

`Req = TuningGoal.StepResp(inputname,outputname,refsys)` creates a tuning requirement that constrains the step response between the specified signal locations to match the step response of a stable reference system, `refsys`. The constraint is satisfied when the relative difference between the tuned and target responses falls within a tolerance specified by the `RelGap` property of the requirement (see “Properties” on page 1-119). `inputname` and `outputname` can describe a SISO or MIMO response of your control system. For MIMO responses, the number of inputs must equal the number of outputs.

`Req = TuningGoal.StepResp(inputname,outputname,tau)` specifies the desired step response as a first-order response with time constant `tau`:

$$\text{Req.ReferenceModel} = \frac{1/\tau}{s + 1/\tau}.$$

`Req = TuningGoal.StepResp(inputname,outputname,tau,overshoot)` specifies the desired step response as a second-order response with natural period `tau`, natural frequency `1/tau`, and percent overshoot `overshoot`:

$$\text{Req.ReferenceModel} = \frac{(1/\tau)^2}{s^2 + 2(\text{zeta}/\tau)s + (1/\tau)^2}.$$

The damping is given by `zeta = cos(atan2(pi, -log(overshoot/100)))`.

## Input Arguments

### inputname


Input signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as input signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `inputname` can include:
  - Any model input.
  - Any linearization input point in the model.
  - Any signal identified as an analysis point or a loop-opening location in an `sITuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `sITuner` interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `system`, then `inputname` can include:
  - Any input of the control system model
  - Any loopswitch channel in the control system model

For example, if you are tuning a control system model, `T`, then `inputname` can be a string contained in `T.InputName`. Also, if `T` contains a `loopswitch` block with a switch channel `X`, then `inputname` can include `X`.

- If you are using the requirement to tune a controller model, `C0` for a plant `G0`, using `looptune`, then `inputname` can include:
  - Any input of `C0` or `G0`
  - Any loopswitch channel in `C0` or `G0`

If `inputname` is a `loopswitch` channel of a generalized model, the input signal for the requirement is the implied input associated with the switch:

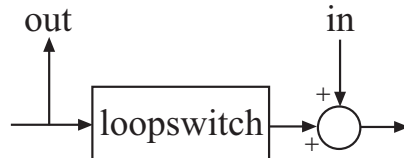

## **outputname**

Output signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as output signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `outputname` can include:
  - Any model output
  - Any linearization output point in the model
  - Any signal identified as an analysis point or a loop-opening location in an `sITuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `sITuner` interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `system`, then `outputname` can include:
  - Any output of the control system model
  - Any `loopswitch` channel in the control system model


For example, if you are tuning a control system model, `T`, then `outputname` can be a string contained in `T.OutputName`. Also, if `T` contains a `loopswitch` block with a switch channel `X`, then `outputname` can include `X`.

# TuningGoal.StepResp

---

- If you are using the requirement to tune a controller model, `C0`, for a plant, `G0`, using `looptune`, then `outputname` can include:
  - Any output of `C0` or `G0`
  - Any loopswitch channel in `C0` or `G0`

If `outputname` is a loopswitch channel of a generalized model, the output signal for the requirement is the implied output associated with the switch:

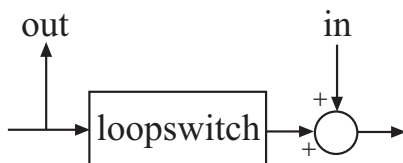

## **refsys**

Reference system for target step response, specified as a dynamic system model, such as a `tf`, `zpk`, or `ss` model. `refsys` must be stable and must have DC gain of 1 (zero steady-state error).

`refsys` can be continuous or discrete. If `refsys` is discrete, it can include time delays which are treated as poles at  $z = 0$ .

`refsys` can be MIMO, provided that it is square and that its DC singular value (`sigma`) is 1. If `refsys` is a MIMO model, then its number of inputs and outputs must match the dimensions of `inputname` and `outputname`.

For best results, `refsys` should also include intrinsic system characteristics such as non-minimum-phase zeros (undershoot).

## **tau**

Time constant or natural period of target step response, specified as a positive scalar.

If you use the syntax `Req = TuningGoal.StepResp(inputname,outputname,tau)` to specify a first-order target response, then `tau` is the time constant of the

response decay. In that case, the target is the step response of the system given by:

$$\text{Req.ReferenceModel} = \frac{1 / \tau}{s + 1 / \tau}.$$

If you use the syntax `Req = TuningGoal.StepResp(inputname,outputname,tau,overshoot)` to specify a second-order target response, then `tau` is the inverse of the natural frequency of the response. In that case, the target is the step response of the system given by:

$$\text{Req.ReferenceModel} = \frac{(1 / \tau)^2}{s^2 + 2(\zeta / \tau)s + (1 / \tau)^2}.$$

The damping of the system is given by  $\zeta = \cos(\text{atan2}(\pi, -\log(\text{overshoot}/100)))$ .

## overshoot

Percent overshoot of target step response, specified as a scalar value in the range (0,100).

## Properties

### Input

Input signal names, specified as a cell array of strings. These strings specify the names of the inputs of the transfer function that the tuning requirement constrains. The initial value of the `Input` property is set by the `inputname` input argument when you construct the requirement object.

### InputScaling

Reference signal scaling, specified as a vector of positive real values.

For a MIMO tuning requirement, when the choice of units results in a mix of small and large signals in different channels of the response, use this property to specify the relative amplitude of

each entry in the vector-valued step input. This information is used to scale the off-diagonal terms in the transfer function from reference to tracking error. This scaling ensures that cross-couplings are measured relative to the amplitude of each reference signal.

For example, suppose that `Req` is a requirement that signals `{'y1','y2'}` track reference signals `{'r1','r2'}`. Suppose further that you require the outputs to track the references with less than 10% cross-coupling. If `r1` and `r2` have comparable amplitudes, then it is sufficient to keep the gains from `r1` to `y2` and `r2` and `y1` below 0.1. However, if `r1` is 100 times larger than `r2`, the gain from `r1` to `y2` must be less than 0.001 to ensure that `r1` changes `y2` by less than 10% of the `r2` target. To ensure this result, set the `InputScaling` property as follows.

```
Req.InputScaling = [100,1];
```

This tells the software to take into account that the first reference signal is 100 times greater than the second reference signal.

The default value, `[]`, means no scaling.

**Default:** `[]`

## Output

Output signal names, specified as a cell array of strings. These strings specify the names of the outputs of the transfer function that the tuning requirement constrains. The initial value of the `Output` property is set by the `outputname` input argument when you construct the requirement object.

## ReferenceModel

Reference system for target step response, specified as a SISO or MIMO state-space (`ss`) model. When you use the requirement to tune a control system, the step response from `inputname` to `outputname` is tuned to match this target response to within the tolerance specified by the `RelGap` property.

If you use the `refsys` input argument to create the tuning requirement, then the value of `ReferenceModel` is `ss(refsys)`.

If you use the `tau` or `tau` and `overshoot` input arguments, then `ReferenceModel` is a state-space representation of the corresponding first-order or second-order transfer function.

`ReferenceModel` must be stable and have unit DC gain (zero steady-state error). For best results, `ReferenceModel` should also include intrinsic system characteristics such as non-minimum-phase zeros (undershoot).

## RelGap

Maximum relative matching error, specified as a positive scalar value. This property specifies the matching tolerance as the maximum relative gap between the target and actual step responses. The relative gap is defined as:

$$\text{gap} = \frac{\|y(t) - y_{ref}(t)\|_2}{\|1 - y_{ref}(t)\|_2}.$$

$y(t) - y_{ref}(t)$  is the response mismatch, and  $1 - y_{ref}(t)$  is the step-tracking error of the target model.  $\|\cdot\|_2$  denotes the signal energy (2-norm).

Increase the value of `RelGap` to loosen the matching tolerance.

**Default:** 0.1

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and

fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `s1Tuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, set



Openings to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an `sITuner` interface.

**Default:** {}

## Name

Name of the requirement object, specified as a string.

For example, if `Req` is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Algorithms

When you tune a control system using a `TuningGoal` object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ . Here,  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the `TuningGoal.StepResp` requirement,  $f(x)$  is given by:

$$f(x) = \frac{\left\| T(s,x) - \frac{1}{s} \text{ReferenceModel} \right\|_2}{\text{RelGap} \left\| \frac{1}{s} (\text{ReferenceModel} - I) \right\|_2}.$$

$T(s,x)$  is the closed-loop transfer function from Input to Output with parameter values  $x$ .  $\|\cdot\|_2$  denotes the  $H_2$  norm (see `norm`).

## Examples

### Step Response Requirement with Specified Tolerance

Create a requirement for the step response from a signal named 'r' to a signal named 'y'. Constrain the step response to match the transfer function  $H = 10/(s+10)$ , but allow 20% relative variation between the target the tuned responses.


```
H = tf(10,[1 10]);  
Req = TuningGoal.StepResp('r','y',H);
```

By default, this requirement allows a relative gap of 0.1 between the target and tuned responses. To change the relative gap to 20%, set the RelGap property of the requirement.

```
Req.RelGap = 0.2;
```

Examine the requirement.

```
viewSpec(Req);
```

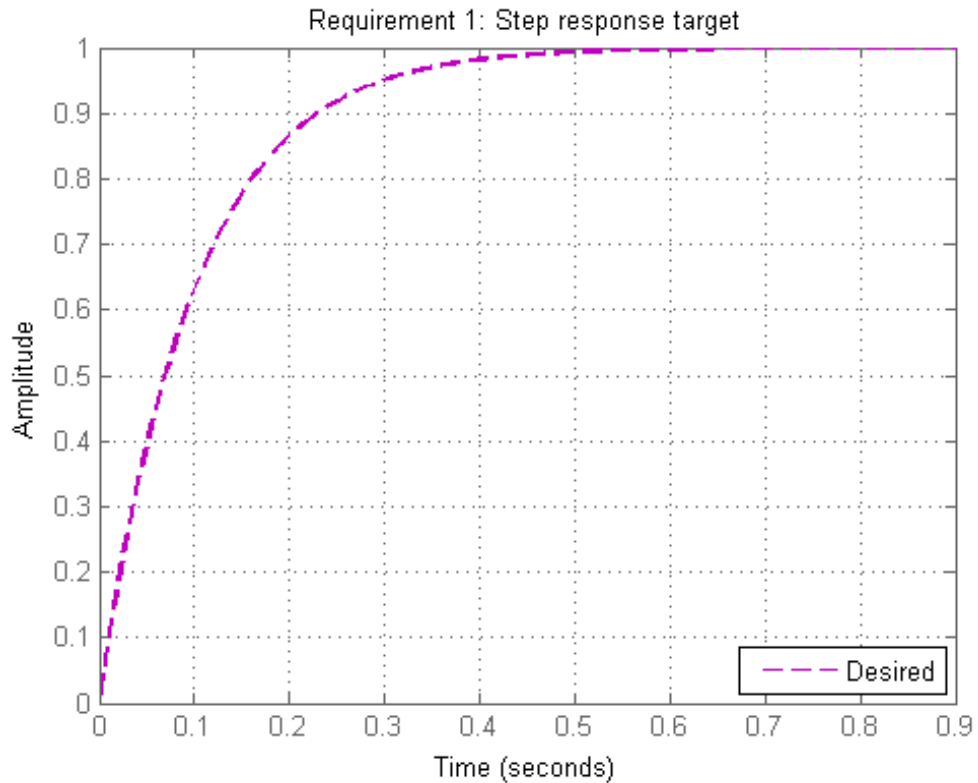

The dashed line shows the target step response specified by this requirement. You can use this requirement to tune a control system model, `T`, that contains valid input and output locations named `'r'` and `'y'`. If you do so, the command `viewSpec(Req,T)` plots the achieved step response from `'r'` to `'y'` for comparison to the target response.

# TuningGoal.StepResp

---

## First-Order Step Response With Known Time Constant

Create a requirement that specifies a first-order step response with time constant of 5 seconds. Create the requirement for the step response from a signal named 'r' to a signal named 'y'.

```
Req = TuningGoal.StepResp('r','y',5);
```

When you use this requirement to tune a control system model, T, the time constant 5 is taken to be expressed in the prevailing units of the control system. For example, if T is a `genss` model and the property `T.TimeUnit` is 'seconds', then this requirement specifies a target time constant of 5 seconds for the response from the input 'r' to the output 'y' of 'T'.

The specified time constant is converted into a reference state-space model stored in the `ReferenceModel` property of the requirement.

```
refsys = tf(Req.ReferenceModel)
```

```
refsys =
```


$$\frac{0.2}{s + 0.2}$$

Continuous-time transfer function.

As expected, `refsys` is a first-order model.

Examine the requirement. The `viewSpec` command displays the target response, which is the step response of the reference model.

```
viewSpec(Req);
```

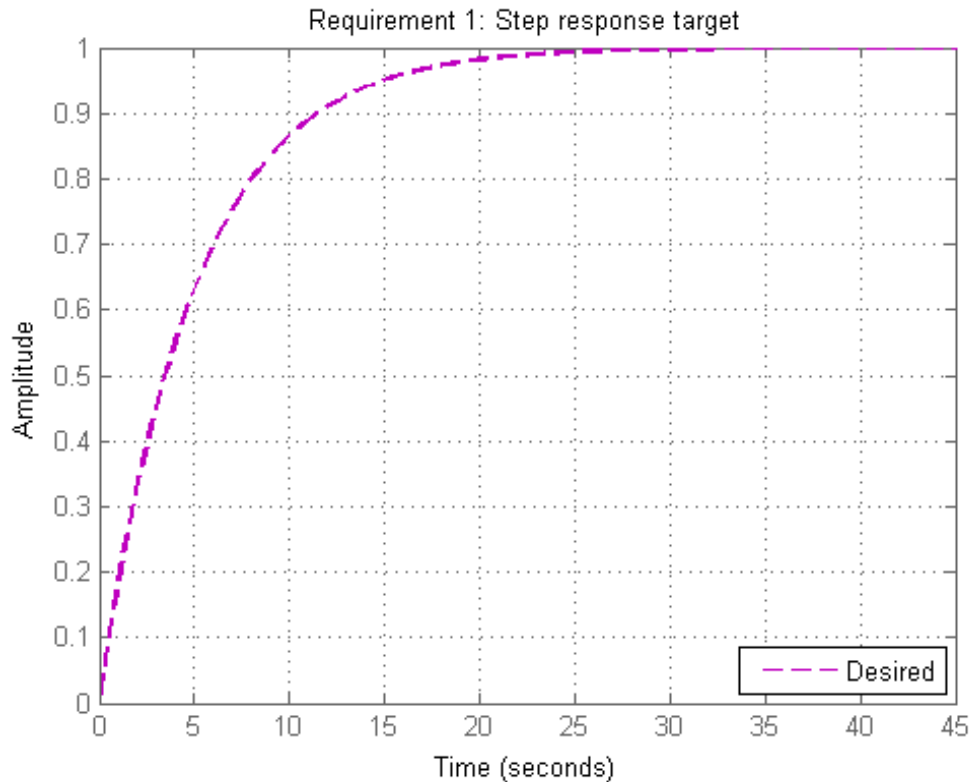

The dashed line shows the target step response specified by this requirement, a first-order response with a time constant of five seconds.

## Second-Order Step Response With Known Natural Period and Overshoot

Create a requirement that specifies a second-order step response with a natural period of 5 seconds, and a 10% overshoot. Create the requirement for the step response from a signal named 'r' to a signal named 'y'.

# TuningGoal.StepResp

---

```
Req = TuningGoal.StepResp('r','y',5,10);
```

When you use this requirement to tune a control system model,  $T$ , the natural period 5 is taken to be expressed in the prevailing units of the control system. For example, if  $T$  is a `genss` model and the property `T.TimeUnit` is 'seconds', then this requirement specifies a target natural period of 5 seconds for the response from the input 'r' to the output 'y' of 'T'.

The specified parameters of the response is converted into a reference state-space model stored in the `ReferenceModel` property of the requirement.

```
refsys = tf(Req.ReferenceModel)
```

```
refsys =
```


```
          0.04  
-----  
s^2 + 0.2365 s + 0.04
```

Continuous-time transfer function.

As expected, `refsys` is a second-order model.

Examine the requirement. The `viewSpec` command displays the target response, which is the step response of the reference model.

```
viewSpec(Req);
```

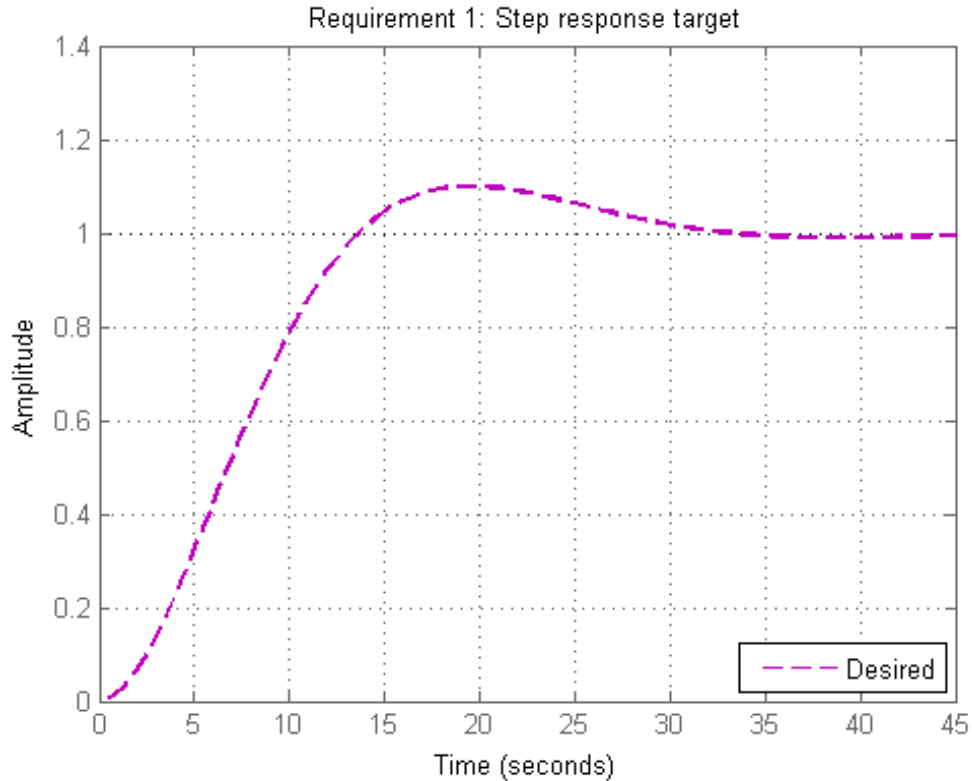

The dashed line shows the target step response specified by this requirement, a second-order response with 10% overshoot and a natural period of five seconds.

### **Requirement with Limited Model Application and Additional Loop Openings**

Create a requirement that specifies a first-order step response with time constant of 5 seconds. Set the `Models` and `Openings` properties to further configure the requirement's applicability.

# TuningGoal.StepResp

---

```
Req = TuningGoal.StepResp('r','y',5);  
Req.Models = [2 3];  
Req.Openings = 'OuterLoop'
```

When tuning a control system that has an input 'r', an output 'y', and an optional loop-opening location 'OuterLoop', you can use Req as an input to looptune or systune. Setting the Openings property specifies that the step response from 'r' to 'y' is measured with the loop opened at 'OuterLoop'. When tuning an array of control system models, setting the Models property restricts how the requirement is applied. In this example, the requirement applies only to the second and third models in an array.

## See Also

looptune | systune | looptune (for sITuner) | systune (for sITuner) | viewSpec | evalSpec | TuningGoal.Tracking | TuningGoal.Overshoot

## How To

- “Time-Domain Specifications”
- “PID Tuning for Setpoint Tracking vs. Disturbance Rejection”



**Purpose**

Tracking requirement for control system tuning

**Description**


Use the `TuningGoal.Tracking` object to specify a frequency-domain tracking requirement between specified inputs and outputs. This requirement specifies the maximum relative error (gain from reference input to tracking error) as a function of frequency. Use this requirement for control system tuning with tuning commands such as `sys tune` or `looptune`.

You can specify the maximum error profile directly by providing a transfer function. Alternatively, you can specify a target DC error, peak error, and response time. These parameters are converted to the following transfer function that describes the maximum frequency-domain tracking error:

$$\text{MaxError} = \frac{(\text{PeakError})s + \omega_c (\text{DCError})}{s + \omega_c}.$$

Here,  $\omega_c$  is  $2/(\text{response time})$ . The following plot illustrates these relationships for an example set of values.

# TuningGoal.Tracking

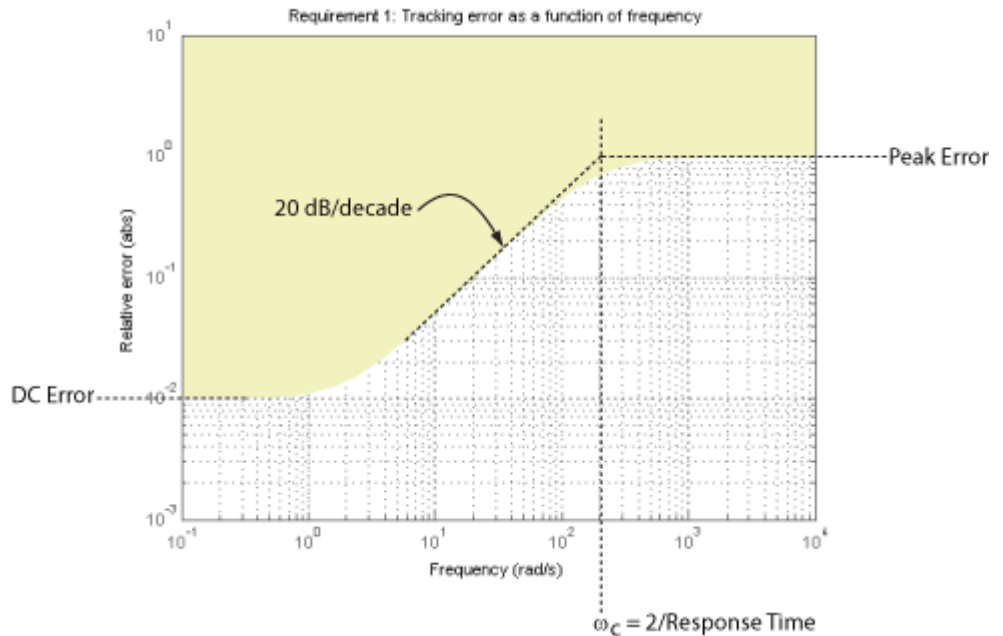

## Construction

Req =  
 TuningGoal.Tracking(inputname,outputname,responsetime,dcerror,peakerror) creates a tuning requirement Req that constrains the tracking performance from inputname to outputname in the frequency domain. This tuning requirement specifies a maximum error profile as a function of frequency given by:

$$\text{MaxError} = \frac{(\text{PeakError})s + \omega_c (\text{DCError})}{s + \omega_c}$$

The tracking bandwidth  $\omega_c = 2/\text{responsetime}$ . The maximum relative steady-state error is given by dcerror, and peakerror gives the peak relative error across all frequencies.

You can specify a MIMO tracking requirement by specifying signal names or a cell array of multiple signal names for `inputname` or `outputname`. For MIMO tracking requirements, use the `InputScaling` property to help limit cross-coupling. See “Properties” on page 1-136.

`Req = TuningGoal.Tracking(inputname,outputname,maxerror)` specifies the maximum relative error as a function of frequency. You can specify the target error profile (maximum gain from reference signal to tracking error signal) as a smooth transfer function. Alternatively, you can sketch a piecewise error profile using an `frd` model.

## Input Arguments

### `inputname`

Input signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as input signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `inputname` can include:
  - Any model input.
  - Any linearization input point in the model.
  - Any signal identified as an analysis point or a loop-opening location in an `slTuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `slTuner` interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `systune`, then `inputname` can include:
  - Any input of the control system model
  - Any loopswitch channel in the control system model

For example, if you are tuning a control system model, `T`, then `inputname` can be a string contained in `T.InputName`. Also, if


# TuningGoal.Tracking

---

T contains a loopswitch block with a switch channel X, then `inputname` can include X.

- If you are using the requirement to tune a controller model, C0 for a plant G0, using `looptune`, then `inputname` can include:
  - Any input of C0 or G0
  - Any loopswitch channel in C0 or G0

If `inputname` is a loopswitch channel of a generalized model, the input signal for the requirement is the implied input associated with the switch:

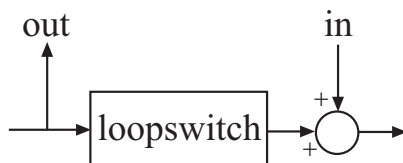

## **outputname**

Output signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as output signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `outputname` can include:
  - Any model output
  - Any linearization output point in the model
  - Any signal identified as an analysis point or a loop-opening location in an `sITuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `sITuner` interface.

- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `systune`, then `outputname` can include:


- Any output of the control system model
- Any loopswitch channel in the control system model

For example, if you are tuning a control system model, `T`, then `outputname` can be a string contained in `T.OutputName`. Also, if `T` contains a loopswitch block with a switch channel `X`, then `outputname` can include `X`.

- If you are using the requirement to tune a controller model, `C0`, for a plant, `G0`, using `looptune`, then `outputname` can include:

- Any output of `C0` or `G0`
- Any loopswitch channel in `C0` or `G0`

If `outputname` is a loopswitch channel of a generalized model, the output signal for the requirement is the implied output associated with the switch:

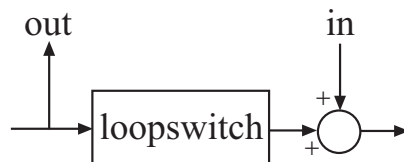

## **responsetime**

Target response time, specified as a positive scalar value. The tracking bandwidth is given by  $\omega_c = 2/\text{responsetime}$ . Express the target response time in the time units of the models to be tuned. For example, when tuning a model `T`, if `T.TimeUnit` is 'minutes', then express the target response time in minutes.

## **dcerror**

# TuningGoal.Tracking

---

Maximum steady-state fractional tracking error, specified as a positive scalar value. For example, `dcerror = 0.01` sets a maximum steady-state error of 1%.

If `inputname` or `outputname` are vector-valued, `dcerror` applies to all I/O pairs from `inputname` to `outputname`.

**Default:** 0.001

## **peakerror**

Maximum fractional tracking error across all frequencies, specified as a positive scalar value. For example, `peakerror = 0.1` sets a maximum steady-state error of 10%.

**Default:** 1

## **maxerror**

Target tracking error profile as a function of frequency, specified as a SISO numeric LTI model.

`maxerror` is the maximum gain from reference signal to tracking error signal. You can specify `maxerror` as a smooth transfer function (`tf`, `zpk`, or `ss` model). Alternatively, you can sketch a piecewise error profile using a `frd` model. When you do so, the software automatically maps the error profile to a `zpk` model. The magnitude of the `zpk` model approximates the desired error profile. Use `show(Req)` to plot the magnitude of the `zpk` model.

`maxerror` must be a SISO LTI model. If `inputname` or `outputname` are cell arrays, `maxerror` applies to all I/O pairs from `inputname` to `outputname`.

## **Properties**

### **Input**

Reference signal names. String or cell array of strings specifying the names of the signals to be tracked, populated by the `inputname` argument.

## InputScaling

Reference signal scaling, specified as a vector of positive real values.

For a MIMO tuning requirement, when the choice of units results in a mix of small and large signals in different channels of the response, use this property to specify the relative amplitude of each entry in the vector-valued step input. This information is used to scale the off-diagonal terms in the transfer function from reference to tracking error. This scaling ensures that cross-couplings are measured relative to the amplitude of each reference signal.

For example, suppose that `Req` is a requirement that signals `{'y1', 'y2'}` track reference signals `{'r1', 'r2'}`. Suppose further that you require the outputs to track the references with less than 10% cross-coupling. If `r1` and `r2` have comparable amplitudes, then it is sufficient to keep the gains from `r1` to `y2` and `r2` and `y1` below 0.1. However, if `r1` is 100 times larger than `r2`, the gain from `r1` to `y2` must be less than 0.001 to ensure that `r1` changes `y2` by less than 10% of the `r2` target. To ensure this result, set the `InputScaling` property as follows.

```
Req.InputScaling = [100,1];
```

This tells the software to take into account that the first reference signal is 100 times greater than the second reference signal.

The default value, `[]`, means no scaling.

**Default:** `[]`

## Output

Output signal names. String or cell array of strings specifying the names of the signals that must track the reference signals, populated by the `outputname` argument.

## MaxError

# TuningGoal.Tracking

---

Maximum error as a function of frequency, expressed as a SISO zpk model. This property stores the maximum tracking error as a function of frequency (maximum gain from reference signal to tracking error signal).

If you use the syntax `Req = TuningGoal.Tracking(inputname,outputname,maxerror)`, then the `MaxError` property is the zpk equivalent or approximation of the LTI model you supplied as the `maxerror` input argument.

If you use the syntax `Req = TuningGoal.Tracking(inputname,outputname,resptime,dcerror,peakerror)`, then the `MaxError` is a zpk transfer function given by:

$$\text{MaxError} = \frac{(\text{PeakError})s + \omega_c (\text{DCError})}{s + \omega_c}.$$

`MaxError` is a SISO LTI model. If `inputname` or `outputname` are cell arrays, `MaxError` applies to all I/O pairs from `inputname` to `outputname`.

Use `show(Req)` to plot the magnitude of `MaxError`.

## Focus

Frequency band in which tuning requirement is enforced, specified as a row vector of the form `[min,max]`.

Set the `Focus` property to limit enforcement of the requirement to a particular frequency band. Express this value in the frequency units of the control system model you are tuning (`rad/TimeUnit`). For example, suppose `Req` is a requirement that you want to apply only between 1 and 100 rad/s. To restrict the requirement to this band, use the following command:

```
Req.Focus = [1,100];
```

**Default:** `[0,Inf]` for continuous time; `[0,pi/Ts]` for discrete time, where `Ts` is the model sampling time.



## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.

# TuningGoal.Tracking

---

- A *control signal* is a signal that is an output of the controller model and an input of the plant model.
- A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an sITuner interface, a loop-opening location can be any analysis point added to the interface using addPoint. In this case, set Openings to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an sITuner interface.

**Default:** {}

## Name

Name of the requirement object, specified as a string.

For example, if Req is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Algorithms

When you tune a control system using a TuningGoal object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ , where  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the TuningGoal.Tracking requirement,  $f(x)$  is given by:

$$f(x) = \left\| \frac{1}{\text{MaxError}} (T(s, x) - I) \right\|_{\infty}.$$

$T(s,x)$  is the closed-loop transfer function from Input to Output.  $\|\cdot\|_{\infty}$  denotes the  $H_{\infty}$  norm (see norm).

## Examples

### Tracking Requirement With Response Time and Maximum Steady-State Tracking Error

Create a tracking requirement specifying that a signal 'theta' track a signal 'theta\_ref'. The required response time is 2, in the time units of the control system you are tuning. The maximum steady-state error is 0.1%.

```
Req = TuningGoal.Tracking('theta_ref','theta',2,0.001);
```

Since peakerror is unspecified, this requirement uses the default value, 1.

### Tracking Requirement With Maximum Tracking Error as a Function of Frequency

Create a tracking requirement specifying that a signal 'theta' track a signal 'theta\_ref'. The maximum relative error is 0.01 (1%) in the frequency range [0,1]. The relative error increases to 1 (100%) at the frequency 100.


Use a frd model model to specify the error profile as a function of frequency.

```
err = frd([0.01 0.01 1],[0 1 100]);  
Req = TuningGoal.Tracking('theta_ref','theta',err);
```

The software converts err into a smooth function of frequency that approximates the piecewise specified requirement. Display the error requirement using viewSpec.

```
viewSpec(Req)
```

# TuningGoal.Tracking

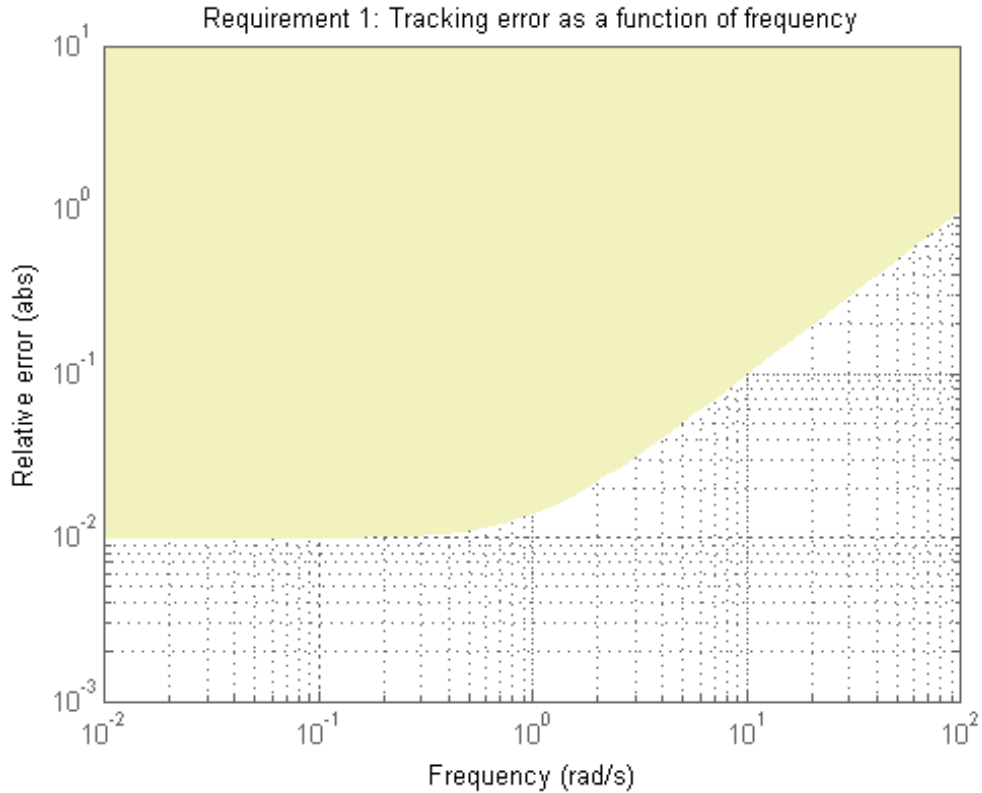

The yellow region indicates where the requirement is violated.

## See Also

`looptune` | `system` | `system` (for `sITuner`) | `looptune` (for `sITuner`) | `viewSpec` | `evalSpec` | `TuningGoal.Gain` | `TuningGoal.LoopShape` | `sITuner`

## How To

- “Time-Domain Specifications”
- “Tuning Control Systems with SYSTUNE”

- “Tuning Control Systems in Simulink”
- “PID Tuning for Setpoint Tracking vs. Disturbance Rejection”
- “Decoupling Controller for a Distillation Column”
- “Digital Control of Power Stage Voltage”
- “Tuning of a Two-Loop Autopilot”

# TuningGoal.Variance

---

## Purpose

Noise amplification constraint for control system tuning

## Description

Use the `TuningGoal.Variance` object to specify a tuning requirement that limits the noise amplification from specified inputs to outputs. The noise amplification is defined as either:

- The square root of the output variance, for a unit-variance white-noise input
- The root-mean-square of the output, for a unit-variance white-noise input
- The  $H_2$  norm of the transfer function from the specified inputs to outputs, which equals the total energy of the impulse response

These definitions are different interpretations of the same quantity. `TuningGoal.Variance` imposes the same limit on these quantities.

You can use the `TuningGoal.Variance` requirement for control system tuning with tuning commands, such as `sys tune` or `looptune`. Specifying this requirement allows you to tune the system response to white-noise inputs. For stochastic inputs with a nonuniform spectrum (colored noise), use `TuningGoal.WeightedVariance` instead.

After you create a requirement object, you can further configure the tuning requirement by setting “Properties” on page 1-148 of the object.

## Construction

`Req = TuningGoal.Variance(inputname,outputname,maxamp)` creates a tuning requirement. This tuning requirement limits the noise amplification of the transfer function from `inputname` to `outputname` to the scalar value `maxamp`.

When you tune a control system in discrete time, this requirement assumes that the physical plant and noise process are continuous. To ensure that continuous-time and discrete-time tuning give consistent results, `maxamp` is interpreted as a constraint on the continuous-time  $H_2$  norm. If the plant and noise processes are truly discrete and you

want to constrain the discrete-time  $H_2$  norm instead, multiply `maxamp` by  $\sqrt{T_s}$ .  $T_s$  is the sampling time of the model you are tuning.

## Input Arguments

### **inputname**

Input signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as input signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `inputname` can include:
  - Any model input.
  - Any linearization input point in the model.
  - Any signal identified as an analysis point or a loop-opening location in an `slTuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `slTuner` interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `systune`, then `inputname` can include:
  - Any input of the control system model
  - Any loopswitch channel in the control system model

For example, if you are tuning a control system model, `T`, then `inputname` can be a string contained in `T.InputName`. Also, if `T` contains a loopswitch block with a switch channel `X`, then `inputname` can include `X`.


- If you are using the requirement to tune a controller model, `C0` for a plant `G0`, using `looptune`, then `inputname` can include:
  - Any input of `C0` or `G0`

# TuningGoal.Variance

---

- Any loopswitch channel in C0 or G0

If `inputname` is a loopswitch channel of a generalized model, the input signal for the requirement is the implied input associated with the switch:

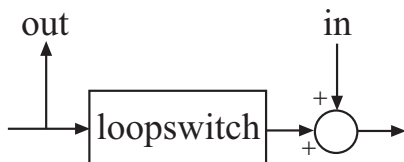

## **outputname**

Output signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as output signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `outputname` can include:
  - Any model output
  - Any linearization output point in the model
  - Any signal identified as an analysis point or a loop-opening location in an `sITuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `sITuner` interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `system`, then `outputname` can include:
  - Any output of the control system model
  - Any loopswitch channel in the control system model


For example, if you are tuning a control system model, `T`, then `outputname` can be a string contained in `T.OutputName`. Also,



if T contains a loopswitch block with a switch channel X, then outputname can include X.

- If you are using the requirement to tune a controller model, C0, for a plant, G0, using looptune, then outputname can include:
  - Any output of C0 or G0
  - Any loopswitch channel in C0 or G0

If outputname is a loopswitch channel of a generalized model, the output signal for the requirement is the implied output associated with the switch:

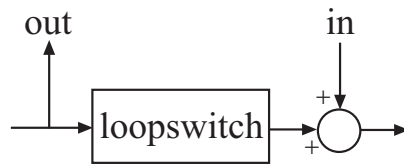

## maxamp

Maximum noise amplification from inputname to outputname, specified as a positive scalar value. This value specifies the maximum value of the output variance at the signals specified in outputname, for unit-variance white noise signal at inputname. This value corresponds to the maximum  $H_2$  norm from inputname to outputname.

When you tune a control system in discrete time, this requirement assumes that the physical plant and noise process are continuous, and interprets maxamp as a bound on the continuous-time  $H_2$  norm. This ensures that continuous-time and discrete-time tuning give consistent results. If the plant and noise processes are truly discrete, and you want to bound the discrete-time  $H_2$  norm

instead, specify the value  $\text{maxamp}/\sqrt{T_s}$ .  $T_s$  is the sampling time of the model you are tuning.

# TuningGoal.Variance

---

## Properties

### Input

Input signal names, specified as a cell array of strings. These strings specify the names of the inputs of the transfer function that the tuning requirement constrains. The initial value of the Input property is set by the `inputname` input argument when you construct the requirement object.

### InputScaling

Input signal scaling, specified as a vector of positive real values.

Use this property to specify the relative amplitude of each entry in vector-valued input signals when the choice of units results in a mix of small and large signals. This information is used to scale the closed-loop transfer function from Input to Output when the tuning requirement is evaluated.

Suppose  $T(s)$  is the closed-loop transfer function from Input to Output. The requirement is evaluated for the scaled transfer function  $D_o^{-1}T(s)D_i$ ;  $D_o$  and  $D_i$  are diagonal matrices with the OutputScaling and InputScaling values on the diagonal, respectively.

The default value, `[]`, means no scaling.

**Default:** `[]`

### Output

Output signal names, specified as a cell array of strings. These strings specify the names of the outputs of the transfer function that the tuning requirement constrains. The initial value of the Output property is set by the `outputname` input argument when you construct the requirement object.

### OutputScaling

Output signal scaling, specified as a vector of positive real values.

Use this property to specify the relative amplitude of each entry in vector-valued output signals when the choice of units results in

a mix of small and large signals. This information is used to scale the closed-loop transfer function from Input to Output when the tuning requirement is evaluated.

Suppose  $T(s)$  is the closed-loop transfer function from Input to Output. The requirement is evaluated for the scaled transfer function  $D_o^{-1}T(s)D_i$ .  $D_o$  and  $D_i$  are diagonal matrices with the OutputScaling and InputScaling values on the diagonal, respectively.

The default value, [ ] , means no scaling.

**Default:** [ ]

## MaxAmplification

Maximum noise amplification, specified as a positive scalar value. This property specifies the maximum value of the output variance at the signals specified in Output, for unit-variance white noise signal at Input. This value corresponds to the maximum  $H_2$  norm from Input to Output. The initial value of MaxAmplification is set by the maxamp input argument when you construct the requirement.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the Models property when tuning an array of control system models with systune, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, Req, to the second, third, and fourth models in a model array passed to systune. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When Models = NaN, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, set `Openings` to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an `sITuner` interface.

**Default:** {}

## Name

Name of the requirement object, specified as a string.

For example, if Req is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Algorithms

When you tune a control system using a `TuningGoal` object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ . The vector  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the `TuningGoal.Variance` requirement,  $f(x)$  is given by:

$$f(x) = \left\| \frac{1}{\text{MaxAmplification}} T(s, x) \right\|_2.$$

$T(s, x)$  is the closed-loop transfer function from Input to Output.  $\|\cdot\|_2$  denotes the  $H_2$  norm (see `norm`).

For tuning discrete-time control systems,  $f(x)$  is given by:

$$f(x) = \left\| \frac{1}{\text{MaxAmplification} \sqrt{T_s}} T(z, x) \right\|_2.$$


$T_s$  is the sampling time of the discrete-time transfer function  $T(z, x)$ .

## Examples

### Constrain Noise Amplification Evaluated with a Loop Opening

Create a requirement that constrains the amplification of the variance from the switch X2 to the output y of the following control system, measured with the outer loop open.

# TuningGoal.Variance

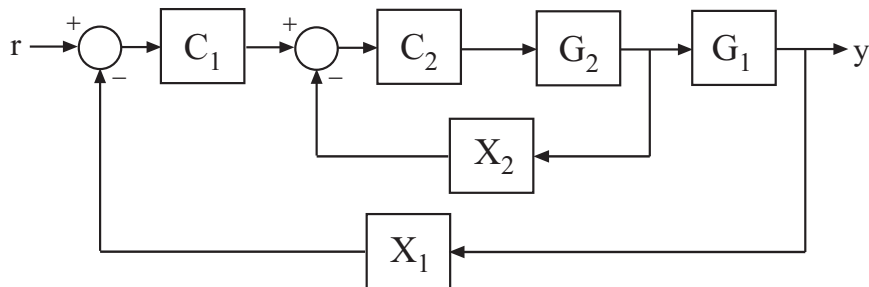

Create a model of the system. To do so, specify and connect the numeric plant models G1 and G2, and the tunable controllers C1 and C2. Also specify and connect the loopswitch blocks X1 and X2 that mark potential loop-opening sites.

```
G1 = tf(10,[1 10]);  
G2 = tf([1 2],[1 0.2 10]);  
C1 = ltiblock.pid('C','pi');  
C2 = ltiblock.gain('G',1);  
X1 = loopswitch('X1');  
X2 = loopswitch('X2');  
T = feedback(G1*feedback(G2*C2,X2)*C1,X1);
```

Create a tuning requirement that constrains the noise amplification from the implicit input associated with the switch, X2, to the output y.

```
Req = TuningGoal.Variance('X2','y',0.1);
```

This constraint limits the amplification to a factor of 0.1.

Specify that the transfer function from X2 to y is evaluated with the outer loop open when tuning to this constraint.

```
Req.Openings = {'X1'};
```

Use `systemtune` to tune the free parameters of T to meet the tuning requirement specified by Req. You can then validate the tuned control system against the requirement using `viewSpec(Req,T,Info)`.

## See Also

looptune | systune | looptune (for sITuner) | systune (for sITuner) | sITuner | viewSpec | evalSpec | norm | TuningGoal.WeightedVariance

## How To

- “Frequency-Domain Specifications”
- “Active Vibration Control in Three-Story Building”
- “Fault-Tolerant Control of a Passenger Jet”

# TuningGoal.WeightedGain

---

**Purpose** Frequency-weighted gain constraint for control system tuning

**Description** Use the `TuningGoal.WeightedGain` object to specify a tuning requirement that limits the weighted gain from specified inputs to outputs. The weighted gain is the maximum across frequency of the gain from input to output, multiplied by weighting functions that you specify. You can use the `TuningGoal.WeightedGain` requirement for control system tuning with tuning commands such as `systeme` or `looptune`.

After you create a requirement object, you can further configure the tuning requirement by setting “Properties” on page 1-157 of the object.

**Construction** `Req = TuningGoal.WeightedGain(inputname,outputname,WL,WR)` creates a tuning requirement. This tuning requirement specifies that the closed-loop transfer function,  $H(s)$ , from the specified input to output meets the requirement:

$$\| |W_L(s)H(s)W_R(s)| |_{\infty} < 1.$$

The notation  $\| | \cdot | |_{\infty}$  denotes the maximum gain across frequency (the  $H_{\infty}$  norm).

## Input Arguments

### **inputname**


Input signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as input signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `inputname` can include:
  - Any model input.
  - Any linearization input point in the model.



- Any signal identified as an analysis point or a loop-opening location in an sITuner interface associated with the Simulink model. Use addPoint and addOpening to add analysis points and loop openings to the sITuner interface.
  - If you are using the requirement to tune a generalized state-space model (genss) of a control system using systune, then inputname can include:
    - Any input of the control system model
    - Any loopswitch channel in the control system model
- For example, if you are tuning a control system model, T, then inputname can be a string contained in T.InputName. Also, if T contains a loopswitch block with a switch channel X, then inputname can include X.
- If you are using the requirement to tune a controller model, C0 for a plant G0, using looptune, then inputname can include:
    - Any input of C0 or G0
    - Any loopswitch channel in C0 or G0

If inputname is a loopswitch channel of a generalized model, the input signal for the requirement is the implied input associated with the switch:

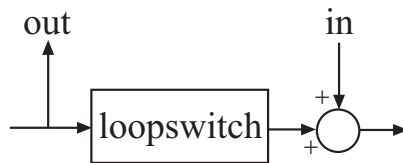

## outputname


Output signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as output signals for the tuning requirement are as follows.

# TuningGoal.WeightedGain

---

- If you are using the requirement to tune a Simulink model of a control system, then `outputname` can include:
    - Any model output
    - Any linearization output point in the model
    - Any signal identified as an analysis point or a loop-opening location in an `sITuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `sITuner` interface.
  - If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `systeme`, then `outputname` can include:
    - Any output of the control system model
    - Any loopswitch channel in the control system model
- For example, if you are tuning a control system model, `T`, then `outputname` can be a string contained in `T.OutputName`. Also, if `T` contains a `loopswitch` block with a switch channel `X`, then `outputname` can include `X`.
- If you are using the requirement to tune a controller model, `C0`, for a plant, `G0`, using `looptune`, then `outputname` can include:
    - Any output of `C0` or `G0`
    - Any loopswitch channel in `C0` or `G0`

If `outputname` is a loopswitch channel of a generalized model, the output signal for the requirement is the implied output associated with the switch:

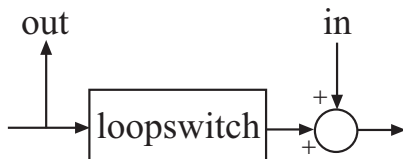

## WL,WR

Frequency-weighting functions, specified as scalars or as SISO or MIMO numeric LTI models.

The functions WL and WR provide the weights for the tuning requirement. The tuning requirement ensures that the gain  $H(s)$  from the specified input to output satisfies the inequality:

$$\| |WL(s)H(s)WR(s)| |_{\infty} < 1.$$

WL provides the weighting for the output channels of  $H(s)$ , and WR provides the weighting for the input channels. You can specify scalar weights or frequency-dependent weighting. To specify a frequency-dependent weighting, use a numeric LTI model. For example:

```
WL = tf(1,[1 0.01]);  
WR = 10;
```

If you specify MIMO weighting functions, then `inputname` and `outputname` must be vector signals. The dimensions of the vector signals must be such that the dimensions of  $H(s)$  are commensurate with the dimensions of WL and WR. For example, if you specify `WR = diag([1 10])`, then `inputname` must include two signals. Scalar values, however, automatically expand to any input or output dimension.

A value of `WL = []` or `WR = []` is interpreted as the identity.

## Properties

### Input

Input signal names, specified as a cell array of strings. These strings specify the names of the inputs of the transfer function that the tuning requirement constrains. The initial value of the Input property is set by the `inputname` input argument when you construct the requirement object.

### Output

# TuningGoal.WeightedGain

---

Output signal names, specified as a cell array of strings. These strings specify the names of the outputs of the transfer function that the tuning requirement constrains. The initial value of the Output property is set by the `outputname` input argument when you construct the requirement object.

## **WL**

Frequency-weighting function for the output channels of the transfer function  $H(s)$  to constrain, specified as a scalar, or as a SISO or MIMO numeric LTI model. The initial value of the WL property is set by the WL input argument when you construct the requirement object.

## **WR**

Frequency-weighting function for the input channels of the transfer function to constrain, specified as a scalar or as a SISO or MIMO numeric LTI model. The initial value of the WR property is set by the WR input argument when you construct the requirement object.

## **Stabilize**

Stability requirement on closed-loop dynamics, specified as 1 (true) or 0 (false).

By default, `TuningGoal.Gain` imposes a stability requirement on the closed-loop transfer function from the specified inputs to outputs, in addition to the gain requirement. If stability is not required or cannot be achieved, set `Stabilize` to `false` to remove the stability requirement. For example, if the gain constraint applies to an unstable open-loop transfer function, set `Stabilize` to `false`.

**Default:** 1(true)

## **Focus**

Frequency band in which tuning requirement is enforced, specified as a row vector of the form `[min,max]`.

Set the `Focus` property to limit enforcement of the requirement to a particular frequency band. Express this value in the frequency units of the control system model you are tuning (`rad/TimeUnit`). For example, suppose `Req` is a requirement that you want to apply only between 1 and 100 rad/s. To restrict the requirement to this band, use the following command:

```
Req.Focus = [1,100];
```

**Default:** `[0,Inf]` for continuous time; `[0,pi/Ts]` for discrete time, where `Ts` is the model sampling time.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** `NaN`

## Name

Name of the requirement object, specified as a string.

For example, if `Req` is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** `[]`

# TuningGoal.WeightedGain

---

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.
- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, set `Openings` to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an `sITuner` interface.

**Default:** `{}`

## Algorithms

When you tune a control system using a `TuningGoal` object to specify a tuning requirement, the software converts the requirement into a

normalized scalar value  $f(x)$ .  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.

For the `TuningGoal.WeightedGain` requirement,  $f(x)$  is given by:

$$f(x) = \|W_L T(s, x) W_R\|_{\infty}.$$

$T(s, x)$  is the closed-loop transfer function from Input to Output.  $\|\cdot\|_{\infty}$  denotes the  $H_{\infty}$  norm (see `norm`).

## Examples

### Constrain Weighted Gain of Closed-Loop System

Create a tuning goal requirement that constrains the gain of a closed-loop SISO system from its input,  $r$ , to its output,  $y$ . Weight the gain at its input by a factor of 10 and at its output by the frequency-dependent weight  $1/(s + 0.01)$ .

```
WL = tf(1,[1 0.01]);  
WR = 10;  
Req = TuningGoal.WeightedGain('r','y',WL,WR);
```


You can use the requirement `Req` with `sysstune` to tune the free parameters of any control system model that has an input signal named 'r' and an output signal named 'y'.

You can then use `viewSpec` to validate the tuned control system against the requirement.

### Constrain Weighted Gain Evaluated with a Loop Opening

Create a requirement that constrains the gain of the outer loop of the following control system, evaluated with the inner loop open.

# TuningGoal.WeightedGain

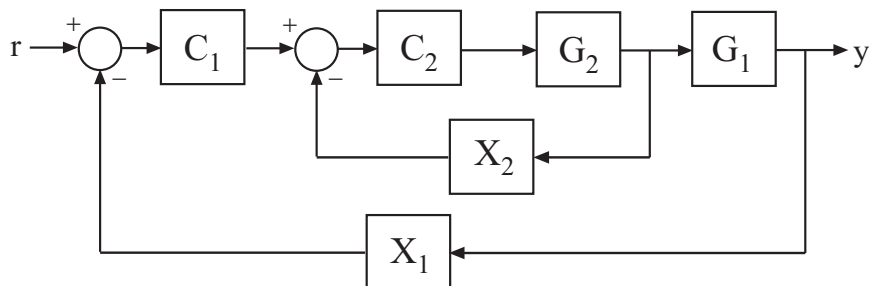

Create a model of the system. To do so, specify and connect the numeric plant models, G1 and G2, the tunable controllers C1 and C2. Also, create and connect the loopswitch blocks, X1 and X2, that mark potential loop-opening sites.

```
G1 = tf(10,[1 10]);  
G2 = tf([1 2],[1 0.2 10]);  
C1 = ltiblock.pid('C','pi');  
C2 = ltiblock.gain('G',1);  
X1 = loopswitch('X1');  
X2 = loopswitch('X2');  
T = feedback(G1*feedback(G2*C2,X2)*C1,X1);
```

Create a tuning requirement that constrains the gain of this system from  $r$  to  $y$ . Weight the gain at the output by  $s/(s + 0.5)$ .

```
WL = tf([1 0],[1 0.5]);  
Req = TuningGoal.WeightedGain('r','y',WL,[]);
```

This requirement is equivalent to  $\text{Req} = \text{TuningGoal.Gain}('r','y',1/\text{WL})$ . However, for MIMO systems, you can use `TuningGoal.WeightedGain` to create channel-specific weightings that cannot be expressed as `TuningGoal.Gain` requirements.

Specify that the transfer function from  $r$  to  $y$  be evaluated with the outer loop open for the purpose of tuning to this constraint.

```
Req.Openings = 'X1';
```



By default, tuning using `TuningGoal.WeightedGain` imposes a stability requirement as well as the gain requirement. Practically, in some control systems it is not possible to achieve a stable inner loop. When this occurs, remove the stability requirement for the inner loop by setting the `Stabilize` property to `false`.

```
Req.Stabilize = false;
```

The tuning algorithm still imposes a stability requirement on the overall tuned control system, but not on the inner loop alone.

Use `sysTune` to tune the free parameters of `T` to meet the tuning requirement specified by `Req`. You can then validate the tuned control system against the requirement using the command `viewSpec(Req,T,Info)`.

## See Also

`looptune` | `sysTune` | `looptune` (for `sITuner`) | `sysTune` (for `sITuner`) | `sITuner` | `viewSpec` | `evalSpec`

## How To

- “Frequency-Domain Specifications”

# TuningGoal.WeightedVariance

---

**Purpose** Frequency-weighted  $H_2$  norm constraint for control system tuning

**Description** Use the `TuningGoal.WeightedVariance` object to specify a tuning requirement that limits the weighted  $H_2$  norm of the transfer function from specified inputs to outputs. The  $H_2$  norm measures:

- The total energy of the impulse response, for deterministic inputs to the transfer function.
- The square root of the output variance for a unit-variance white-noise input, for stochastic inputs to the transfer function. Equivalently, the  $H_2$  norm measures the root-mean-square of the output for such input.

You can use the `TuningGoal.WeightedVariance` requirement for control system tuning with tuning commands, such as `sys tune` or `looptune`. By specifying this requirement, you can tune the system response to stochastic inputs with a nonuniform spectrum such as colored noise or wind gusts. You can also use `TuningGoal.WeightedVariance` to specify LQG-like performance objectives.

After you create a requirement object, you can further configure the tuning requirement by setting “Properties” on page 1-168 of the object.

**Construction** `Req = TuningGoal.Variance(inputname,outputname,WL,WR)` creates a tuning requirement `Req`. This tuning requirement specifies that the closed-loop transfer function  $H(s)$  from the specified input to output meets the requirement:

$$\|W_L(s)H(s)W_R(s)\|_2 < 1.$$

The notation  $\|\cdot\|_2$  denotes the  $H_2$  norm.

When you are tuning a discrete-time system, `Req` imposes the following constraint:

$$\frac{1}{\sqrt{T_s}} \|W_L(z)T(z,x)W_R(z)\|_2 < 1.$$

The  $H_2$  norm is scaled by the square root of the sampling time  $T_s$  to ensure consistent results with tuning in continuous time. To constrain the true discrete-time  $H_2$  norm, multiply either  $W_L$  or  $W_R$  by  $\sqrt{T_s}$ .

## Input Arguments

### inputname

Input signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as input signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `inputname` can include:
  - Any model input.
  - Any linearization input point in the model.
  - Any signal identified as an analysis point or a loop-opening location in an `sITuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `sITuner` interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `systune`, then `inputname` can include:
  - Any input of the control system model
  - Any loopswitch channel in the control system model

For example, if you are tuning a control system model, `T`, then `inputname` can be a string contained in `T.InputName`. Also, if `T` contains a `loopswitch` block with a switch channel `X`, then `inputname` can include `X`.


- If you are using the requirement to tune a controller model, `C0` for a plant `G0`, using `looptune`, then `inputname` can include:
  - Any input of `C0` or `G0`

# TuningGoal.WeightedVariance

---

- Any loopswitch channel in C0 or G0

If `inputname` is a loopswitch channel of a generalized model, the input signal for the requirement is the implied input associated with the switch:

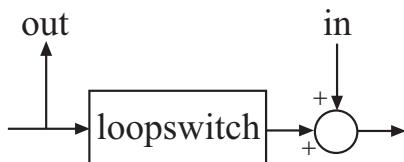

## **outputname**

Output signal for requirement, specified as a string or a cell array of strings for vector-valued signals. The signals available to designate as output signals for the tuning requirement are as follows.

- If you are using the requirement to tune a Simulink model of a control system, then `outputname` can include:
  - Any model output
  - Any linearization output point in the model
  - Any signal identified as an analysis point or a loop-opening location in an `sITuner` interface associated with the Simulink model. Use `addPoint` and `addOpening` to add analysis points and loop openings to the `sITuner` interface.
- If you are using the requirement to tune a generalized state-space model (`genss`) of a control system using `system`, then `outputname` can include:
  - Any output of the control system model
  - Any loopswitch channel in the control system model

For example, if you are tuning a control system model, `T`, then `outputname` can be a string contained in `T.OutputName`. Also,

if T contains a loopswitch block with a switch channel X, then outputname can include X.

- If you are using the requirement to tune a controller model, C0, for a plant, G0, using looptune, then outputname can include:
  - Any output of C0 or G0
  - Any loopswitch channel in C0 or G0

If outputname is a loopswitch channel of a generalized model, the output signal for the requirement is the implied output associated with the switch:



## WL,WR

Frequency-weighting functions, specified as scalars or as SISO or MIMO numeric LTI models.

The functions WL and WR provide the weights for the tuning requirement. The tuning requirement ensures that the gain  $H(s)$  from the specified input to output satisfies the inequality:

$$\| |W_L(s)H(s)W_R(s)| \|_2 < 1.$$

WL provides the weighting for the output channels of  $H(s)$ , and WR provides the weighting for the input channels. You can specify scalar weights or frequency-dependent weighting. To specify a frequency-dependent weighting, use a numeric LTI model. For example:

```
WL = tf(1,[1 0.01]);  
WR = 10;
```

# TuningGoal.WeightedVariance

---

If you specify MIMO weighting functions, then `inputname` and `outputname` must be vector signals. The dimensions of the vector signals must be such that the dimensions of  $H(s)$  are commensurate with the dimensions of `WL` and `WR`. For example, if you specify `WR = diag([1 10])`, then `inputname` must include two signals. Scalar values, however, automatically expand to any input or output dimension.

When you are tuning a discrete-time system, `WL` and `WR` must be either scalars or discrete-time models having the same sampling time (`Ts`) as the model you are tuning.

A value of `WL = []` or `WR = []` is interpreted as the identity.

## Properties

### Input

Input signal names, specified as a cell array of strings. These strings specify the names of the inputs of the transfer function that the tuning requirement constrains. The initial value of the `Input` property is set by the `inputname` input argument when you construct the requirement object.

### Output

Output signal names, specified as a cell array of strings. These strings specify the names of the outputs of the transfer function that the tuning requirement constrains. The initial value of the `Output` property is set by the `outputname` input argument when you construct the requirement object.

### WL

Frequency-weighting function for the output channels of the transfer function  $H(s)$  to constrain, specified as a scalar, or as a SISO or MIMO numeric LTI model. The initial value of the `WL` property is set by the `WL` input argument when you construct the requirement object.

### WR

Frequency-weighting function for the input channels of the transfer function to constrain, specified as a scalar or as a SISO or MIMO numeric LTI model. The initial value of the `WR` property is set by the `WR` input argument when you construct the requirement object.

## Models

Models to which the tuning requirement applies, specified as a vector of indices.

Use the `Models` property when tuning an array of control system models with `systune`, to enforce a tuning requirement for a subset of models in the array. For example, suppose you want to apply the tuning requirement, `Req`, to the second, third, and fourth models in a model array passed to `systune`. To restrict enforcement of the requirement, use the following command:

```
Req.Models = 2:4;
```

When `Models = NaN`, the tuning requirement applies to all models.

**Default:** NaN

## Openings

Feedback loops to open when evaluating the requirement, specified as a cell array of strings that identify loop-opening locations. The available loop-opening locations depend on what kind of system you are tuning:

- If you are tuning a control system specified as a `genss` model in MATLAB, a loop-opening location can be any feedback channel in a `loopswitch` block in the model. In this case, set `Openings` to a cell array containing the names of one or more loop-opening locations listed in the `Location` property of a `loopswitch` block in the control system model.

# TuningGoal.WeightedVariance

---

- If you are using `looptune` to tune a system that includes a plant model and controller model, a loop-opening location can be any control or measurement signal. In this case, set `Openings` to a cell array containing the names of one or more measurement or control signals.
  - A *control signal* is a signal that is an output of the controller model and an input of the plant model.
  - A *measurement signal* is a signal that is an output of the plant model and an input of the controller model.
- If you are tuning a Simulink model of a control system using an `sITuner` interface, a loop-opening location can be any analysis point added to the interface using `addPoint`. In this case, set `Openings` to a cell array containing the names of one or more of these analysis points.

All feedback loops are closed by default, except where there is a permanent loop-opening defined in an `sITuner` interface.

**Default:** {}

## Name

Name of the requirement object, specified as a string.

For example, if `Req` is a requirement:

```
Req.Name = 'LoopReq';
```

**Default:** []

## Algorithms

When you tune a control system using a `TuningGoal` object to specify a tuning requirement, the software converts the requirement into a normalized scalar value  $f(x)$ .  $x$  is the vector of free (tunable) parameters in the control system. The software then adjusts the parameter values to minimize  $f(x)$  or to drive  $f(x)$  below 1 if the tuning requirement is a hard constraint.



For the `TuningGoal.WeightedVariance` requirement,  $f(x)$  is given by:

$$f(x) = \|W_L T(s, x) W_R\|_2.$$

$T(s, x)$  is the closed-loop transfer function from Input to Output.  $\|\cdot\|_2$  denotes the  $H_2$  norm (see `norm`).

For tuning discrete-time control systems,  $f(x)$  is given by:

$$f(x) = \frac{1}{\sqrt{T_s}} \|W_L(z) T(z, x) W_R(z)\|_2.$$

$T_s$  is the sampling time of the discrete-time transfer function  $T(z, x)$ .

## Examples

### Weighted Constraint on $H_2$ Norm

Create a constraint for a transfer function with one input,  $r$ , and two outputs,  $e$  and  $y$ , that limits the  $H_2$  norm as follows:

$$\left\| \begin{array}{c} \frac{1}{s+0.001} T_{re} \\ \frac{s}{0.001s+1} T_{ry} \end{array} \right\|_2 < 1.$$

$T_{re}$  is the closed-loop transfer function from  $r$  to  $e$ , and  $T_{ry}$  is the closed-loop transfer function from  $r$  to  $y$ .

```
s = tf('s');  
WL = blkdiag(1/(s+0.001), s/(0.001*s+1));  
Req = TuningGoal.WeightedVariance('r', {'e', 'y'}, WL, []);
```

## See Also

`system` | `looptune` | `system` (for `slTuner`) | `looptune` (for `slTuner`) | `TuningGoal.Gain` | `TuningGoal.LoopShape` | `slTuner` | `norm` | `TuningGoal.Variance`

## How To

- “Frequency-Domain Specifications”

# TuningGoal.WeightedVariance

---

- “Fault-Tolerant Control of a Passenger Jet”

# Alphabetical List

---

# actual2normalized

---

**Purpose** Transform actual values to normalized values

**Syntax**

```
NDIST = actual2normalized(A,V)
NV = actual2normalized(uElement,AV)
NDIST = actual2normalized(A,V)
[NV,ndist] = actual2normalized(uElement,AV)
```

**Description** `NV = actual2normalized(uElement,AV)` transforms the values `AV` of the uncertain element `uElement` into normalized values `NV`. If `AV` is the nominal value of `uElement`, `NV` is 0. Otherwise, `AV` values inside the uncertainty range of `uElement` map to the unit ball  $||NV|| \leq 1$ , and values outside the uncertainty range map to  $||NV|| > 1$ . The argument `AV` can contain a single value or an array of values. `NV` has the same dimensions as `AV`.

`[NV,ndist] = actual2normalized(uElement,AV)` also returns the normalized distance `ndist` between the values `AV` and the nominal value of `uElement`. This distance is the norm of `NV`. Therefore, `ndist`  $\leq 1$  for values inside the uncertainty range of `uElement`, and `ndist`  $> 1$  for values outside the range. If `AV` is an array of values, then `ndist` is an array of normalized distances.

The robustness margins computed in `robuststab` and `robustperf` serve as bounds for the normalized distances in `ndist`. For example, if an uncertain system has a stability margin of 1.4, this system is stable for all uncertain element values whose normalized distance from the nominal is less than 1.4.

## **Examples**      **Uncertain Real Parameter with Symmetric Range**

For uncertain real parameters whose range is symmetric about their nominal value, the normalized distance is intuitive, scaling linearly with the numerical difference from the uncertain real parameter's nominal value.

Create uncertain real parameters with a range that is symmetric about the nominal value, where each end point is 1 unit from the nominal. Points that lie inside the range are less than 1 unit from the nominal,

while points that lie outside the range are greater than 1 unit from the nominal.

```
a = ureal('a',3,'range',[1 5]);  
NV = actual2normalized(a,[1 3 5])
```

```
NV =
```

```
-1.0000      0      1.0000
```

```
NV = actual2normalized(a,[2 4])
```

```
NV =
```

```
-0.5000      0.5000
```

```
NV = actual2normalized(a,[0 6])
```


```
NV =
```

```
-1.5000      1.5000
```

Plot the normalized values and normalized distance for several values.

```
values = linspace(-3,9,250);  
[nv,ndist] = actual2normalized(a,values);  
plot(values,nv,'r.',values,ndist,'b-')
```

# actual2normalized

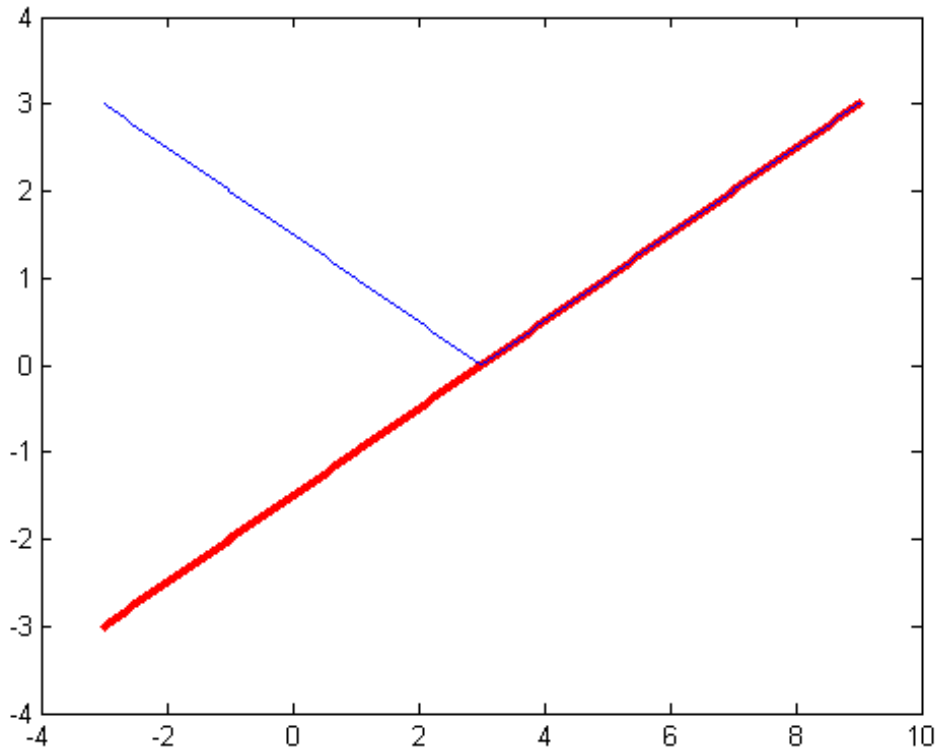

## Uncertain Real Parameter with Nonsymmetric Range

Create a nonsymmetric parameter. The end points are 1 normalized unit from nominal, and the nominal is 0 normalized units from nominal. Moreover, points inside the range are less than 1 unit from nominal, and points outside the range are greater than 1 unit from nominal. However, the relationship between the normalized distance and numerical difference is nonlinear.

```
au = ureal('ua',4,'range',[1 5]);
```

```
NV = actual2normalized(au,[1 4 5])
```

```
NV =
```

```
    -1     0     1
```

```
NV = actual2normalized(au,[2 4.5])
```

```
NV =
```

```
   -0.8000    0.4000
```

```
NV = actual2normalized(au,[0 6])
```

```
NV =
```

```
   -1.1429    4.0000
```


Graph the relationship between actual and normalized values. The relationship is very nonlinear.

```
AV = linspace(-5,6,250);
```

```
NV = actual2normalized(au,AV);
```

```
plot(NV,AV,0,au.NominalValue,'ro',-1,au.Range(1),'bo',1,au.Range(2),'k  
grid, xlabel('Normalized Values'), ylabel('Actual Values')
```

# actual2normalized

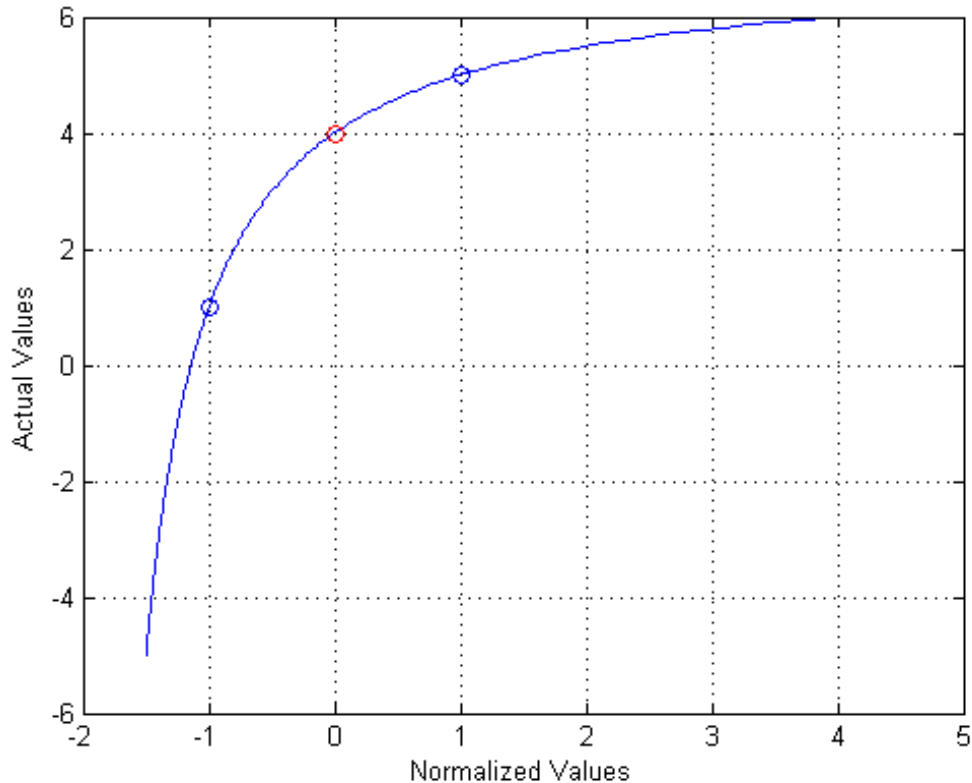

The red circle shows the nominal value (normalized value = 0). The blue circles show the values at the edges of the uncertainty range (normalized values = -1, 1).

## Algorithms

For details on the normalize distance, see “Normalizing Functions for Uncertain Elements” in the *Robust Control Toolbox™ User’s Guide*.

## See Also

`normalized2actual` | `robuststab` | `robustperf`



**Purpose** Convert affine parameter-dependent models to polytopic models

**Syntax** `polysys = aff2pol(affsys)`

**Description** `aff2pol` derives a polytopic representation `polysys` of the *affine* parameter-dependent system

$$E(p)\dot{x} = A(p)x + B(p)u \tag{2-1}$$

$$y = C(p)x + D(p)u \tag{2-2}$$

where  $p = (p_1, \dots, p_n)$  is a vector of uncertain or time-varying real parameters taking values in a box or a polytope. The description `affsys` of this system should be specified with `psys`.

The vertex systems of `polysys` are the instances of Equation 2-1 and Equation 2-2 at the vertices  $p_{ex}$  of the parameter range, i.e., the SYSTEM matrices

$$\begin{pmatrix} A(p_{ex}) + jE(p_{ex}) & B(p_{ex}) \\ C(p_{ex}) & D(p_{ex}) \end{pmatrix}$$

for all corners  $p_{ex}$  of the parameter box or all vertices  $p_{ex}$  of the polytope of parameter values.

**See Also** `psys` | `pvec` | `uss`

**Purpose** State-space or transfer function plant augmentation for use in weighted mixed-sensitivity  $H_\infty$  and  $H_2$  loopshaping design

**Syntax**  $P = \text{AUGW}(G, W1, W2, W3)$

**Description**  $P = \text{AUGW}(G, W1, W2, W3)$  computes a state-space model of an augmented LTI plant  $P(s)$  with weighting functions  $W_1(s)$ ,  $W_2(s)$ , and  $W_3(s)$  penalizing the error signal, control signal and output signal respectively (see block diagram) so that the closed-loop transfer function matrix is the weighted mixed sensitivity

$$Ty_1u_1 \square \begin{bmatrix} W_1S \\ W_2R \\ W_3T \end{bmatrix}$$


where  $S$ ,  $R$  and  $T$  are given by

$$S = (I + GK)^{-1}$$

$$R = K(I + GK)^{-1}$$

$$T = GK(I + GK)^{-1}$$

The LTI systems  $S$  and  $T$  are called the *sensitivity* and *complementary sensitivity*, respectively.

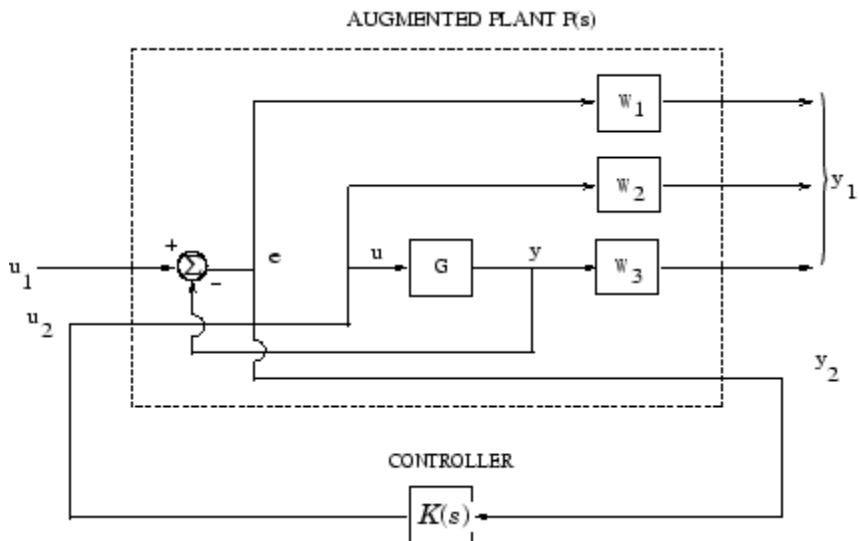

**Plant Augmentation**

For dimensional compatibility, each of the three weights  $W_1$ ,  $W_2$  and  $W_3$  must be either empty, a scalar (SISO) or have respective input dimensions  $N_y$ ,  $N_u$ , and  $N_y$  where  $G$  is  $N_y$ -by- $N_u$ . If one of the weights is not needed, you may simply assign an empty matrix  $[]$ ; e.g.,  $P = \text{AUGW}(G, W1, [], W3)$  is  $P(s)$  as in the “Algorithms” on page 2-9 section below, but without the second row (without the row containing  $W2$ ).

**Algorithms**

The augmented plant  $P(s)$  produced by is

$$P(s) = \left[ \begin{array}{c|c} W_1 & -W_1 G \\ 0 & W_2 \\ 0 & W_3 G \\ \hline I & -G \end{array} \right]$$

Partitioning is embedded via  $P = \text{mktito}(P, NY, NU)$ , which sets the InputGroup and OutputGroup properties of  $P$  as follows


```
[r,c]=size(P);
```

```
P.InputGroup = struct('U1',1:c-NU,'U2',c-NU+1:c);  
P.OutputGroup = struct('Y1',1:r-NY,'Y2',r-NY+1:r);
```

## Examples

### Create Augmented Plant for H-Infinity Synthesis

```
s = zpk('s');  
G = (s-1)/(s+1);  
W1 = 0.1*(s+100)/(100*s+1);  
W2 = 0.1;  
W3 = [];  
P = augw(G,W1,W2,W3);  
  
[K,CL,GAM] = hinfsyn(P);  
[K2,CL2,GAM2] = h2syn(P);  
  
L = G*K;  
S = inv(1+L);  
T = 1-S;  
  
sigma(S,'k',GAM/W1,'k-.',T,'r',GAM*G/W2,'r-.')  
legend('S = 1/(1+L)', 'GAM/W1', 'T=L/(1+L)', 'GAM*G/W2', 2)
```

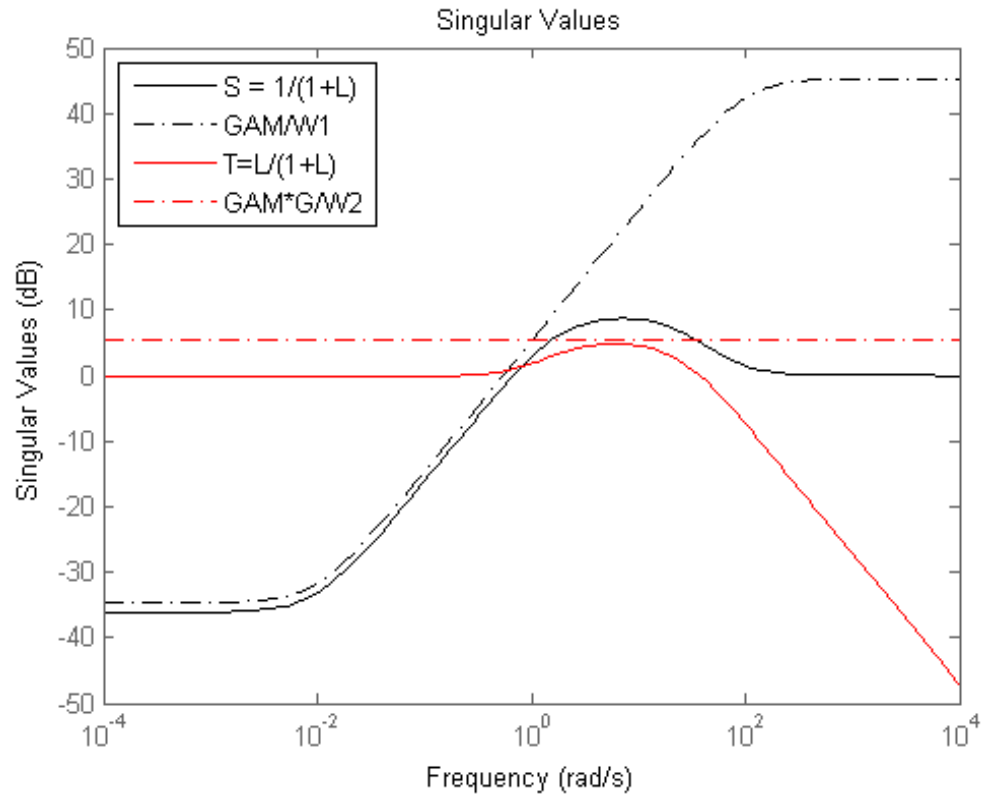

### Limitations

The transfer functions  $G$ ,  $W_1$ ,  $W_2$  and  $W_3$  must be proper, i.e., bounded as  $s \rightarrow \infty$  or, in the discrete-time case, as  $z \rightarrow \infty$ . Additionally,  $W_1$ ,  $W_2$  and  $W_3$  should be stable. The plant  $G$  should be stabilizable and detectable; else,  $P$  will not be stabilizable by any  $K$ .

### See Also

h2syn | hinfsyn | mixsyn | mktito

# balancmr

---

**Purpose** Balanced model truncation via square root method

**Syntax**

```
GRED = balancmr(G)
GRED = balancmr(G,order)
[GRED,redinfo] = balancmr(G,key1,value1,...)
[GRED,redinfo] = balancmr(G,order,key1,value1,...)
```

**Description** `balancmr` returns a reduced order model `GRED` of `G` and a struct array `redinfo` containing the error bound of the reduced model and Hankel singular values of the original system.

The error bound is computed based on Hankel singular values of `G`. For a stable system these values indicate the respective state energy of the system. Hence, reduced order can be directly determined by examining the system Hankel singular values,  $\sigma_i$ .

With only one input argument `G`, the function will show a Hankel singular value plot of the original model and prompt for model order number to reduce.

This method guarantees an error bound on the infinity norm of the *additive error*  $\|G - GRED\|_\infty$  for well-conditioned model reduced problems [1]:

$$\|G - Gred\|_\infty \leq 2 \sum_{k=1}^n \sigma_k$$

This table describes input arguments for `balancmr`.

Argument	Description
G	LTI model to be reduced. Without any other inputs, <code>balancmr</code> will plot the Hankel singular values of <code>G</code> and prompt for reduced order
ORDER	(Optional) Integer for the desired order of the reduced model, or optionally a vector packed with desired orders for batch runs

A batch run of a serial of different reduced order models can be generated by specifying `order = x:y`, or a vector of positive integers. By default, all the anti-stable part of a system is kept, because from control stability point of view, getting rid of unstable state(s) is dangerous to model a system.

'*MaxError*' can be specified in the same fashion as an alternative for 'Order'. In this case, reduced order will be determined when the sum of the tails of the Hankel singular values reaches the '*MaxError*'.

This table lists the input arguments 'key' and its 'value'.

Argument	Value	Description
' <i>MaxError</i> '	Real number or vector of different errors	Reduce to achieve $H_\infty$ error. When present, ' <i>MaxError</i> ' overrides ORDER input.
' <i>Weights</i> '	{Wout,Win} cell array	Optimal 1-by-2 cell array of LTI weights Wout (output) and Win (input). Defaults are both identity. Weights must be invertible.
' <i>Display</i> '	'on' or 'off'	Display Hankel singular plots (default 'off').
' <i>Order</i> '	Integer, vector or cell array	Order of reduced model. Use only if not specified as 2nd argument.

Weights on the original model input and/or output can make the model reduction algorithm focus on some frequency range of interests. But weights have to be stable, minimum phase and invertible.

This table describes output arguments.

Argument	Description
GRED	LTI reduced order model. Becomes multidimensional array when input is a serial of different model order array
REDINFO	A STRUCT array with three fields: <ul style="list-style-type: none"> <li>• REDINFO.ErrorBound (bound on <math>\  G-GRED \ _{\infty}</math>)</li> <li>• REDINFO.StabSV (Hankel SV of stable part of G)</li> <li>• REDINFO.UnstabSV (Hankel SV of unstable part of G)</li> </ul>

G can be stable or unstable, continuous or discrete.

## Algorithms

Given a state space  $(A,B,C,D)$  of a system and  $k$ , the desired reduced order, the following steps will produce a similarity transformation to truncate the original state-space system to the  $k^{th}$  order reduced model.

- 1 Find the SVD of the controllability and observability grammians

$$P = U_p \Sigma_p V_p^T$$

$$Q = U_q \Sigma_q V_q^T$$

- 2 Find the square root of the grammians (left/right eigenvectors)

$$L_p = U_p \Sigma_p^{1/2}$$

$$L_o = U_q \Sigma_q^{1/2}$$

- 3 Find the SVD of  $(L_o^T L_p)$

$$L_o^T L_p = U \Sigma V^T$$

- 4 Then the left and right transformation for the final  $k^{th}$  order reduced model is



$$S_{L,BIG} = L_o U(:,1:k) \Sigma(1;k,1:k)^{-1/2}$$

$$S_{R,BIG} = L_p V(:,1:k) \Sigma(1;k,1:k)^{-1/2}$$

5 Finally,

$$\begin{bmatrix} \hat{A} & \hat{B} \\ \hat{C} & \hat{D} \end{bmatrix} = \begin{bmatrix} S_{L,BIG}^T A S_{R,BIG} & S_{L,BIG}^T B \\ C S_{R,BIG} & D \end{bmatrix}$$

The proof of the square root balance truncation algorithm can be found in [2].

## Examples

Given a continuous or discrete, stable or unstable system, G, the following commands can get a set of reduced order models based on your selections:

```
rng(1234, 'twister');
G = rss(30,5,4);
[g1, redinfo1] = balancmr(G); % display Hankel SV plot
                        % and prompt for order (try 15:20)
[g2, redinfo2] = balancmr(G,20);
[g3, redinfo3] = balancmr(G,[10:2:18]);
[g4, redinfo4] = balancmr(G,'MaxError',[0.01, 0.05]);
for i = 1:4
    figure(i); eval(['sigma(G,g' num2str(i) ');']);
end
```

## References

- [1] Glover, K., "All Optimal Hankel Norm Approximation of Linear Multivariable Systems, and Their  $L_\mu$ -error Bounds," *Int. J. Control*, Vol. 39, No. 6, 1984, p. 1145-1193
- [2] Safonov, M.G., and R.Y. Chiang, "A Schur Method for Balanced Model Reduction," *IEEE Trans. on Automat. Contr.*, Vol. 34, No. 7, July 1989, p. 729-733

# balancmr

---

## See Also

reduce | schurmr | hankelmr | bstmr | ncfmr | hankelsv

**Purpose** Multivariable bilinear transform of frequency ( $s$  or  $z$ )

**Syntax** `GT = bilin(G,VERS,METHOD,AUG)`

**Description** bilin computes the effect on a system of the frequency-variable substitution,

$$s = \frac{\alpha z + \delta}{\gamma z + \beta}$$

The variable VERS denotes the transformation direction:

VERS= 1, forward transform ( $s \rightarrow z$ ) or ( $s \rightarrow \tilde{s}$ ).

VERS=-1, reverse transform ( $z \rightarrow s$ ) or ( $s \rightarrow \tilde{s}$ ).

This transformation maps lines and circles to circles and lines in the complex plane. People often use this transformation to do sampled-data control system design [1] or, in general, to do shifting of  $j\omega$  modes [2], [3], [4].

Bilin computes several state-space bilinear transformations such as backward rectangular, etc., based on the METHOD you select

**Bilinear Transform Types**

Method	Type of bilinear transform
'BwdRec'	backward rectangular:  $s = \frac{z-1}{Tz}$ AUG = T, the sampling period.
'FwdRec'	forward rectangular:  $s = \frac{z-1}{T}$

## Bilinear Transform Types (Continued)

Method	Type of bilinear transform
	AUG = $T$ , the sampling period.
'S_Tust'	shifted Tustin: $s = \frac{2}{T} \left( \frac{z-1}{\frac{z}{h}+1} \right)$ AUG = $[T h]$ , is the “shift” coefficient.
'S_ftjw'	shifted $j\omega$ -axis, bilinear pole-shifting, continuous-time to continuous-time: $s = \frac{\tilde{s} + p_1}{1 + \tilde{s} / p_2}$ AUG = $[p_2 p_1]$ .
'G_Bilin'	METHOD = 'G_Bilin', general bilinear, continuous-time to continuous-time: $s = \frac{\alpha \tilde{s} + \delta}{\gamma \tilde{s} + \beta}$ AUG = $[\alpha \beta \gamma \delta]$ .

### Examples

#### Tustin Continuous $s$ -Plane to Discrete $z$ -Plane Transforms

Consider the following continuous-time plant (sampled at 20 Hz):


$$A = \begin{bmatrix} -1 & 1 \\ 0 & -2 \end{bmatrix}, B = \begin{bmatrix} 1 & 0 \\ 1 & 1 \end{bmatrix}, C = \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix}, D = \begin{bmatrix} 0 & 0 \\ 0 & 0 \end{bmatrix}; T_s = 0.05$$

Following is an example of four common “continuous to discrete” bilin transformations for the sampled plant:

```
A = [-1 1; 0 -2];
B = [1 0; 1 1];
C = [1 0; 0 1];
D = [0 0; 0 0];
sys = ss(A,B,C,D);           % ANALOG
Ts = 0.05; % sampling time
syst = c2d(sys,Ts,'tustin'); % Tustin
syp = c2d(sys,Ts,'prewarp',40); % Pre-warped Tustin
sysb = bilin(sys,1,'BwdRec',Ts); % Backward Rectangular
sysf = bilin(sys,1,'FwdRec',Ts); % Forward Rectangular
```

Plot the response of the continuous-time plant and the transformed discrete-time plants.

```
w = logspace(-2,3,50); % frequencies to plot
sigma(sys,syst,syp,sysb,sysf,w);
legend('sys','syst','syp','sysb','sysf','Location','SouthWest')
```

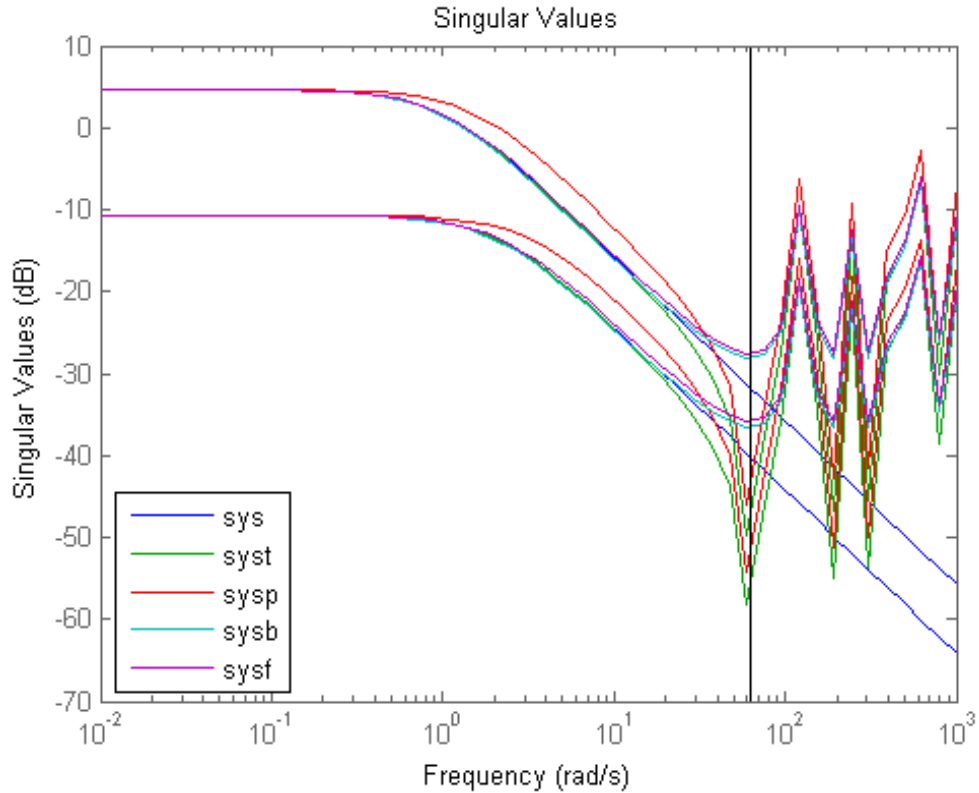

**Bilinear continuous to continuous pole-shifting**

Design an H mixed-sensitivity controller for the ACC Benchmark plant

$$G(s) = \frac{1}{s^2(s^2 + 2)}$$

such that all closed-loop poles lie inside a circle in the left half of the s-plane whose diameter lies on between points [p1,p2]=[-12,-2]:


```

p1=-12; p2=-2; s=zpk('s');
G=ss(1/(s^2*(s^2+2))); % original unshifted plant
Gt=bilin(G,1,'Sft_jw',[p1 p2]); % bilinear pole shifted plant Gt
Kt=mixsyn(Gt,1,[],1); % bilinear pole shifted controller
K =bilin(Kt,-1,'Sft_jw',[p1 p2]); % final controller K

```

As shown in the following figure, closed-loop poles are placed in the left circle [p1 p2]. The shifted plant, which has its non-stable poles shifted to the inside the right circle, is

$$G_t(s) = 4.765 \times 10^{-5} \frac{(s-12)^4}{(s-2)^2(s^2 - 4.274s + 5.918)}$$

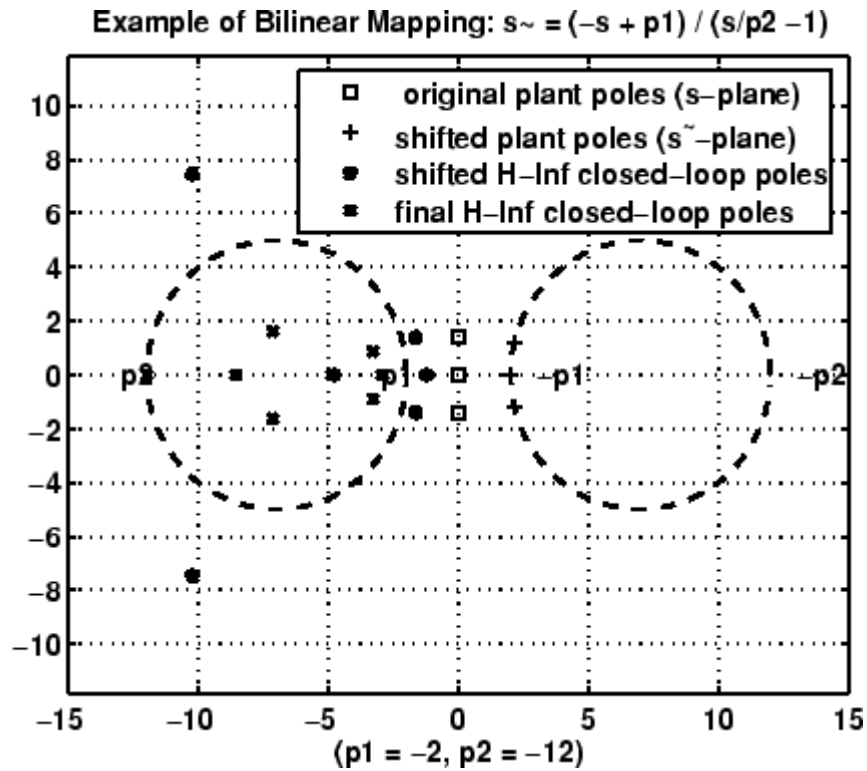

's\_ftjw' final closed-loop poles are inside the left [p1,p2] circle

### Algorithms

bilin employs the state-space formulae in [3]:

$$\begin{bmatrix} A_b & B_b \\ C_b & D_b \end{bmatrix} = \begin{bmatrix} (\beta A - \delta I)(\alpha I + \gamma A)^{-1} & (\alpha\beta - \gamma\delta)(\alpha I - \gamma A)^{-1} B \\ C(\alpha I - \gamma A)^{-1} & D + \gamma C(\alpha I - \gamma A)^{-1} B \end{bmatrix}$$

### References

[1] Franklin, G.F., and J.D. Powell, *Digital Control of Dynamics System*, Addison-Wesley, 1980.



[2] Safonov, M.G., R.Y. Chiang, and H. Flashner, " $H_\infty$  Control Synthesis for a Large Space Structure," *AIAA J. Guidance, Control and Dynamics*, 14, 3, p. 513-520, May/June 1991.

[3] Safonov, M.G., "Imaginary-Axis Zeros in Multivariable  $H_\infty$  Optimal Control", in R.F. Curtain (editor), *Modelling, Robustness and Sensitivity Reduction in Control Systems*, p. 71-81, Springer-Varlet, Berlin, 1987.

[4] Chiang, R.Y., and M.G. Safonov, " $H_\infty$  Synthesis using a Bilinear Pole Shifting Transform," *AIAA, J. Guidance, Control and Dynamics*, vol. 15, no. 5, p. 1111-1117, September-October 1992.

**See Also**

c2d | d2c | sectf

**Purpose** Balanced stochastic model truncation (BST) via Schur method

**Syntax**

```
GRED = bstmr(G)
GRED = bstmr(G,order)
[GRED,redinfo] = bstmr(G,key1,value1,...)
[GRED,redinfo] = bstmr(G,order,key1,value1,...)
```

**Description** `bstmr` returns a reduced order model `GRED` of `G` and a struct array `redinfo` containing the error bound of the reduced model and Hankel singular values of the *phase matrix* of the original system [2].

The error bound is computed based on Hankel singular values of the phase matrix of `G`. For a stable system these values indicate the respective state energy of the system. Hence, reduced order can be directly determined by examining these values.

With only one input argument `G`, the function will show a Hankel singular value plot of the phase matrix of `G` and prompt for model order number to reduce.

This method guarantees an error bound on the infinity norm of the *multiplicative*  $\|G^{-1}(G - GRED)\|_{\infty}$  or *relative error*  $\|G^{-1}(G - GRED)\|_{\infty}$  for well-conditioned model reduction problems [1]:

$$\|G^{-1}(G - Gred)\|_{\infty} \leq \prod_{k=1}^n \left(1 + 2\sigma_k(\sqrt{1 + \sigma_k^2} + \sigma_k)\right) - 1$$

This table describes input arguments for `bstmr`.

Argument	Description
G	LTI model to be reduced (without any other inputs will plot its Hankel singular values and prompt for reduced order)
ORDER	(Optional) an integer for the desired order of the reduced model, or a vector of desired orders for batch runs

A batch run of a serial of different reduced order models can be generated by specifying `order = x:y`, or a vector of integers. By default, all the anti-stable part of a system is kept, because from control stability point of view, getting rid of unstable state(s) is dangerous to model a system.

'*MaxError*' can be specified in the same fashion as an alternative for 'ORDER'. In this case, reduced order will be determined when the accumulated product of Hankel singular values shown in the above equation reaches the '*MaxError*'.

Argument	Value	Description
' <i>MaxError</i> '	Real number or vector of different errors	Reduce to achieve $H_\infty$ error. When present, ' <i>MaxError</i> ' overrides ORDER input.
' <i>Display</i> '	'on' or 'off'	Display Hankel singular plots (default 'off').
' <i>Order</i> '	Integer, vector or cell array	Order of reduced model. Use only if not specified as 2nd argument.

This table describes output arguments.

Argument	Description
GRED	LTI reduced order model. Become multi-dimension array when input is a serial of different model order array.
REDINFO	A STRUCT array with three fields: <ul style="list-style-type: none"> <li>REDINFO.ErrorBound (bound on <math>\ G^{-1}(G-GRED)\ _\infty</math>)</li> <li>REDINFO.StabSV (Hankel SV of stable part of G)</li> </ul>

Argument	Description
	<ul style="list-style-type: none"> <li>• REDINFO.UnstabSV (Hankel SV of unstable part of G)</li> </ul>

G can be stable or unstable, continuous or discrete.

## Algorithms

Given a state space  $(A, B, C, D)$  of a system and  $k$ , the desired reduced order, the following steps will produce a similarity transformation to truncate the original state-space system to the  $k^{\text{th}}$  order reduced model.

- 1 Find the controllability grammian  $P$  and observability grammian  $Q$  of the left *spectral factor*  $\Phi = \Gamma(\sigma)\Gamma^*(-\sigma) = \Omega^*(-\sigma)\Omega(\sigma)$  by solving the following Lyapunov and Riccati equations

$$AP + PA^T + BB^T = 0$$

$$B_W = PC^T + BD^T$$

$$QA + A^T Q + (QB_W - C^T)(-DD^T)(QB_W - C^T)^T = 0$$

- 2 Find the Schur decomposition for  $PQ$  in both ascending and descending order, respectively,

$$V_A^T P Q V_A = \begin{bmatrix} \lambda_1 & \cdots & \cdots \\ 0 & \cdots & \cdots \\ 0 & 0 & \lambda_n \end{bmatrix}$$

$$V_D^T P Q V_D = \begin{bmatrix} \lambda_n & \cdots & \cdots \\ 0 & \cdots & \cdots \\ 0 & 0 & \lambda_1 \end{bmatrix}$$

- 3 Find the left/right orthonormal eigen-bases of  $PQ$  associated with the  $k^{\text{th}}$  big Hankel singular values of the all-pass *phase matrix*  $(W^*(s))^{-1}G(s)$ .

$k$ 

$$V_A = [V_{R,SMALL}, \overbrace{V_{L,BIG}}^k]$$

$$V_D = [\overbrace{V_{R,BIG}}^k, V_{L,SMALL}]$$

**4** Find the SVD of  $(V_{L,BIG}^T V_{R,BIG}) = U \Sigma \varsigma^T$

**5** Form the left/right transformation for the final  $k^{th}$  order reduced model

$$S_{L,BIG} = V_{L,BIG} U \Sigma(1:k, 1:k)^{-1/2}$$

$$S_{R,BIG} = V_{R,BIG} V \Sigma(1:k, 1:k)^{-1/2}$$

**6** Finally,

$$\left[ \begin{array}{c|c} \hat{A} & \hat{B} \\ \hline \hat{C} & \hat{D} \end{array} \right] = \left[ \begin{array}{c|c} S_{L,BIG}^T A S_{R,BIG} & S_{L,BIG}^T B \\ \hline C S_{R,BIG} & D \end{array} \right]$$

The proof of the Schur BST algorithm can be found in [1].

---

**Note** The BST model reduction theory requires that the original model  $D$  matrix be full rank, for otherwise the Riccati solver fails. For any problem with strictly proper model, you can shift the  $j\omega$ -axis via `bilin` such that BST/REM approximation can be achieved up to a particular frequency range of interests. Alternatively, you can attach a small but full rank  $D$  matrix to the original problem but remove the  $D$  matrix of the reduced order model afterwards. As long as the size of  $D$  matrix is insignificant inside the control bandwidth, the reduced order model should be fairly close to the true model. By default, the `bstmr` program will assign a full rank  $D$  matrix scaled by 0.001 of the minimum eigenvalue of the original model, if its  $D$  matrix is not full rank to begin with. This serves the purpose for most problems if user does not want to go through the trouble of model pretransformation.

---

## Examples

Given a continuous or discrete, stable or unstable system, `G`, the following commands can get a set of reduced order models based on your selections:

```
rng(1234, 'twister');
G = rss(30,5,4); G.d = zeros(5,4);
[g1, redinfo1] = bstmr(G); % display Hankel SV plot
                        % and prompt for order (try 15:20)
[g2, redinfo2] = bstmr(G,20);
[g3, redinfo3] = bstmr(G,[10:2:18]);
[g4, redinfo4] = bstmr(G,'MaxError',[0.01, 0.05]);
for i = 1:4
    figure(i); eval(['sigma(G,g' num2str(i) ' ');']);
end
```

## References

- [1] Zhou, K., "Frequency-weighted model reduction with  $L_\infty$  error bounds," *Syst. Contr. Lett.*, Vol. 21, 115-125, 1993.
- [2] Safonov, M.G., and R.Y. Chiang, "Model Reduction for Robust Control: A Schur Relative Error Method," *International J. of Adaptive Control and Signal Processing*, Vol. 2, p. 259-272, 1988.

**See Also**

reduce | balancmr | hankelmr | schurmr | ncfmr | hankelsv

# complexify

---

<b>Purpose</b>	Replace ureal atoms by summations of ureal and ucomplex (or ultidyn) atoms
<b>Syntax</b>	<pre>MC = complexify(M,alpha) MC = complexify(M,alpha,'ultidyn')</pre>
<b>Description</b>	<p>The command <code>complexify</code> replaces ureal atoms with sums of ureal and ucomplex atoms using <code>usubs</code>. Optionally, the sum can consist of a ureal and ultidyn atom.</p> <p><code>complexify</code> is used to improve the conditioning of robust stability calculations (<code>robuststab</code>) for situations when there are predominantly ureal uncertain elements.</p> <p><code>MC = complexify(M,alpha)</code> results in each ureal atom in <code>MC</code> having the same <code>Name</code> and <code>NominalValue</code> as the corresponding ureal atom in <code>M</code>. If <code>Range</code> is the range of one ureal atom from <code>M</code>, then the range of the corresponding ureal atom in <code>MC</code> is</p> $[\text{Range}(1)+\alpha*\text{diff}(\text{Range})/2 \quad \text{Range}(2)-\alpha*\text{diff}(\text{Range})/2]$ <p>The net effect is that the same real range is covered with a real and complex uncertainty. The real parameter range is reduced by equal amounts at each end, and <code>alpha</code> represents (in a relative sense) the reduction in the total range. The ucomplex atom will add this reduction in range back into <code>MC</code>, but as a ball with real and imaginary parts.</p> <p>The ucomplex atom has <code>NominalValue</code> of 0, and <code>Radius</code> equal to <math>\alpha*\text{diff}(\text{Range})</math>. Its name is the name of the original ureal atom, appended with the characters <code>'_cmpxfy'</code>.</p> <p><code>MC = complexify(M,alpha,'ultidyn')</code> is the same, except that gain-bounded ultidyn atoms are used instead of ucomplex atoms. The ultidyn atom has its <code>Bound</code> equal to <math>\alpha*\text{diff}(\text{Range})</math>.</p>

## Examples

### Complexified Uncertain Parameter

To illustrate complexification, create a uncertain real parameter, cast it to an uncertain matrix, and apply a 10% complexification.




```
a = umat(ureal('a',2.25,'Range',[1.5 3]));  
b = complexify(a,.1);  
as = usample(a,200);  
bs = usample(b,4000);
```

Make a scatter plot of the values that the complexified matrix (scalar) can take, as well as the values of the original uncertain real parameter.

```
plot(real(bs(:)),imag(bs(:)),'.',real(as(:)),imag(as(:)),'r.')  
axis([1 3.5 -0.2 0.2])
```

# complexify

---

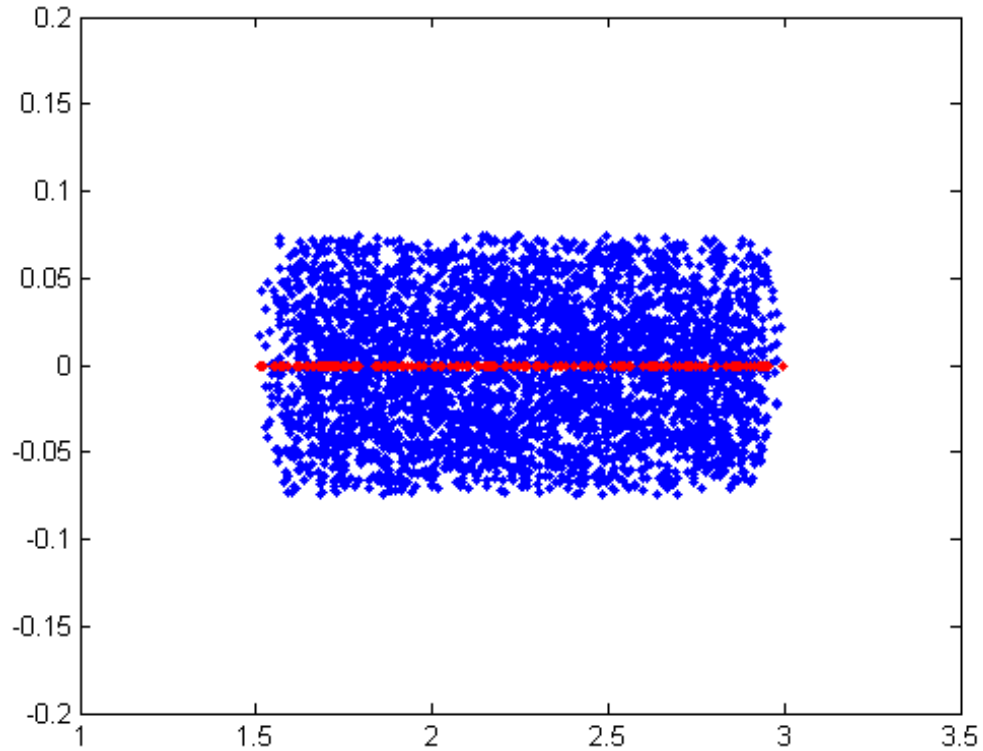

## See Also

`icomplexify` | `robuststab`

## Related Examples

- Getting Reliable Estimates of Robustness Margins

**Purpose** Approximately solve constant-matrix, upper bound  $\mu$ -synthesis problem

**Syntax**

```
[QOPT,BND] = cmsclsyn(R,U,V,BlockStructure);
[QOPT,BND] = cmsclsyn(R,U,V,BlockStructure,opt);
[QOPT,BND] = cmsclsyn(R,U,V,BlockStructure,opt,qinit);
[QOPT,BND] = cmsclsyn(R,U,V,BlockStructure,opt,'random',N)
```

**Description** cmsclsyn approximately solves the constant-matrix, upper bound  $\mu$ -synthesis problem by minimization,

$$\min_{Q \in \mathbb{C}^{r \times t}} \mu_{\Delta}(R + UQV)$$

for given matrices  $R \in \mathbb{C}^{n \times m}$ ,  $U \in \mathbb{C}^{n \times r}$ ,  $V \in \mathbb{C}^{t \times m}$ , and a set  $\Delta \subset \mathbb{C}^{m \times n}$ . This applies to constant matrix data in  $R$ ,  $U$ , and  $V$ .

[QOPT,BND] = cmsclsyn(R,U,V,BlockStructure) minimizes, by choice of  $Q$ . QOPT is the optimum value of  $Q$ , the upper bound of  $\text{mussv}(R+U*Q*V, \text{BLK})$ , BND. The matrices  $R$ ,  $U$  and  $V$  are constant matrices of the appropriate dimension. BlockStructure is a matrix specifying the perturbation blockstructure as defined for mussv.

[QOPT,BND] = cmsclsyn(R,U,V,BlockStructure,OPT) uses the options specified by OPT in the calls to mussv. See mussv for more information. The default value for OPT is 'cUsW'.

[QOPT,BND] = cmsclsyn(R,U,V,BlockStructure,OPT,QINIT) initializes the iterative computation from  $Q = \text{QINIT}$ . Because of the nonconvexity of the overall problem, different starting points often yield different final answers. If QINIT is an N-D array, then the iterative computation is performed multiple times - the  $i$ 'th optimization is initialized at  $Q = \text{QINIT}(:, :, i)$ . The output arguments are associated with the best solution obtained in this brute force approach.

[QOPT,BND] = cmsclsyn(R,U,V,BlockStructure,OPT,'random',N) initializes the iterative computation from N random instances of QINIT. If NCU is the number of columns of  $U$ , and NRV is the number of rows of  $V$ , then the approximation to solving the constant matrix  $\mu$  synthesis problem is two-fold: only the upper bound for  $\mu$  is minimized, and the

minimization is not convex, hence the optimum is generally not found. If  $U$  is full column rank, or  $V$  is full row rank, then the problem can (and is) cast as a convex problem, [Packard, Zhou, Pandey and Becker], and the global optimizer (for the upper bound for  $\mu$ ) is calculated.

## Algorithms

The `cmsclsyn` algorithm is iterative, alternatively holding  $Q$  fixed, and computing the `mussv` upper bound, followed by holding the upper bound multipliers fixed, and minimizing the bound implied by choice of  $Q$ . If  $U$  or  $V$  is square and invertible, then the optimization is reformulated (exactly) as a linear matrix inequality, and solved directly, without resorting to the iteration.

## References

Packard, A.K., K. Zhou, P. Pandey, and G. Becker, "A collection of robust control problems leading to LMI's," *30th IEEE Conference on Decision and Control*, Brighton, UK, 1991, p. 1245–1250.

## See Also

`dksyn` | `hinfsv` | `mussv` | `robuststab` | `robustperf`

**Purpose** Open Control System Tuner

**Syntax**  
`controlSystemTuner`  
`controlSystemTuner(CL)`  
`controlSystemTuner(md1)`  
`controlSystemTuner(ST)`

**Description** `controlSystemTuner` opens the Control System Tuner app. This app lets you to tune any control system architecture to meet your design goals. You can tune multiple fixed-order, fixed-structure control elements distributed over one or more feedback loops. You can tune control systems modeled in MATLAB or in Simulink (requires Simulink Control Design™ software). When invoked without input arguments, Control System Tuner opens to for tuning the default single-loop feedback control system architecture.

`controlSystemTuner(CL)` opens the app for tuning the control architecture specified in the `genss` model `CL`.

`controlSystemTuner(md1)` opens the app for tuning blocks in a Simulink model.

`controlSystemTuner(ST)` opens the app for tuning a Simulink model associated with an `sITuner` interface, `ST`. Control System Tuner takes information such as analysis points and operating points from `ST`.

**Input Arguments**

**CL - Control system to tune**  
generalized state-space (`genss`) model

Control system to tune, specified as a generalized state-space `genss` model. If your control architecture does not match Control System Tuner's predefined control architecture, create a generalized state-space (`genss`) model with tunable components representing your controller elements. Build the `genss` model from fixed-value LTI models and tunable Control Design Blocks. For more information, see "Building Tunable Models".

## **mdl - Control system to tune**

Simulink model

Control system to tune, specified as a Simulink model.

If you have Simulink Control Design software, model an arbitrary control system architecture in a Simulink model and tune the model in Control System Tuner.

## **ST - Interface to Simulink model of control system to tune**

s1Tuner interface

Interface to a Simulink model of the control system to tune, specified as an s1Tuner interface. Use an s1Tuner interface to preconfigure analysis points, operating points for linearization, and other aspects of the tuning session. When you use the syntax `controlSystemTuner(ST)` to open Control System Tuner, the app takes this configuration from the s1Tuner interface.

### **See Also**

s1Tuner

### **Related Examples**

- “Specify Control Architecture in Control System Tuner”

### **Concepts**

- “Tuning with Control System Tuner”

<b>Purpose</b>	Coprime stability margin of plant-controller feedback loop
<b>Syntax</b>	[MARG,FREQ] = cpmargin(P,C) [MARG,FREQ] = cpmargin(P,C,TOL)
<b>Description</b>	<p>[MARG,FREQ] = cpmargin(P,C) calculates the normalized coprime factor/gap metric robust stability of the multivariable feedback loop consisting of C in negative feedback with P. C should only be the compensator in the feedback path, not any reference channels, if it is a two degree-of-freedom (2-Dof) architecture. The output MARG contains upper and lower bound for the normalized coprime factor/gap metric robust stability margin. FREQ is the frequency associated with the upper bound.</p> <p>[MARG,FREQ] = cpmargin(P,C,TOL) specifies a relative accuracy TOL for calculating the normalized coprime factor/gap metric robust stability margin. (TOL=1e-3 by default).</p>
<b>See Also</b>	gapmetric   wcmargin

# dcgainmr

---

**Purpose** Reduced order model

**Syntax** `[sysr,syse,gain] = dcgainmr(sys,ord)`

**Description** `[sysr,syse,gain] = dcgainmr(sys,ord)` returns a reduced order model of a continuous-time LTI system `SYS` by truncating modes with least DC gain.

Specify your LTI continuous-time system in `sys`. The order is specified in `ord`.

This function returns:

- `sysr`—The reduced order models (a multidimensional array if `sys` is an LTI array)
- `syse`—The difference between `sys` and `sysr` (`syse=sys-sysr`)
- `gain`—The g-factors (dc-gains)

The DC gain of a complex mode

$$(1/(s+p))*c*b'$$

is defined as

$$\text{norm}(b)*\text{norm}(c)/\text{abs}(p)$$

**See Also** `reduce`



**Purpose** Quadratic decay rate of polytopic or affine P-systems

**Syntax** [drate,P] = decay(ps,options)

**Description** For affine parameter-dependent systems

$$E(p)\dot{x} = A(p)x, p(t) = (p_1(t), \dots, p_n(t))$$

or polytopic systems

$$E(t)\dot{x} = A(t)x, (A, E) \in \text{Co}\{(A_1, E_1), \dots, (A_n, E_n)\}, t\dot{x} = A(t)x, (A, E) \in \text{Co}\{(A_1, E_1), \dots, (A_n, E_n)\},$$

decay returns the quadratic decay rate drate, i.e., the smallest  $\alpha \in R$  such that

$$A^TQE + EQA^T < \alpha Q$$

holds for some Lyapunov matrix  $Q > 0$  and all possible values of  $(A, E)$ . Two control parameters can be reset via options(1) and options(2):

- If options(1)=0 (default), decay runs in fast mode, using the least expensive sufficient conditions. Set options(1)=1 to use the least conservative conditions.
- options(2) is a bound on the condition number of the Lyapunov matrix P. The default is 109.

**See Also** quadstab | pd1stab | psys

# decinfo

---

**Purpose** Describe how entries of matrix variable  $X$  relate to decision variables

**Syntax**  
`decinfo(lmisys)`  
`decX = decinfo(lmisys,X)`

**Description** The function `decinfo` expresses the entries of a matrix variable  $X$  in terms of the decision variables  $x_1, \dots, x_N$ . Recall that the decision variables are the free scalar variables of the problem, or equivalently, the free entries of all matrix variables described in `lmisys`. Each entry of  $X$  is either a hard zero, some decision variable  $x_n$ , or its opposite  $-x_n$ .

If  $X$  is the identifier of  $X$  supplied by `lmivar`, the command

```
decX = decinfo(lmisys,X)
```

returns an integer matrix `decX` of the same dimensions as  $X$  whose  $(i, j)$  entry is

- 0 if  $X(i, j)$  is a hard zero
- $n$  if  $X(i, j) = x_n$  (the  $n$ -th decision variable)
- $-n$  if  $X(i, j) = -x_n$

`decX` clarifies the structure of  $X$  as well as its entry-wise dependence on  $x_1, \dots, x_N$ . This is useful to specify matrix variables with atypical structures (see `lmivar`).

`decinfo` can also be used in interactive mode by invoking it with a single argument. It then prompts the user for a matrix variable and displays in return the decision variable content of this variable.

## Examples

### Example 1

Consider an LMI with two matrix variables  $X$  and  $Y$  with structure:

- $X = x I_3$  with  $x$  scalar
- $Y$  rectangular of size 2-by-1

If these variables are defined by

```

setlmis([])
X = lmivar(1,[3 0])
Y = lmivar(2,[2 1])
:
:
lmis = getlmis

```

the decision variables in  $X$  and  $Y$  are given by

```
dX = decinfo(lmis,X)
```

```

dX =
 1  0  0
 0  1  0
 0  0  1

```

```
dY = decinfo(lmis,Y)
```

```

dY =
 2
 3

```

This indicates a total of three decision variables  $x_1, x_2, x_3$  that are related to the entries of  $X$  and  $Y$  by

$$X = \begin{pmatrix} x_1 & 0 & 0 \\ 0 & x_1 & 0 \\ 0 & 0 & x_1 \end{pmatrix}, Y = \begin{pmatrix} x_2 \\ x_3 \end{pmatrix}$$

Note that the number of decision variables corresponds to the number of free entries in  $X$  and  $Y$  when taking structure into account.

### Example 2

Suppose that the matrix variable  $X$  is symmetric block diagonal with one 2-by-2 full block and one 2-by-2 scalar block, and is declared by

```
setlmis([])
```

```
X = lmivar(1,[2 1;2 0])
:
lmis = getlmis
```

The decision variable distribution in  $X$  can be visualized interactively as follows:

```
decinfo(lmis)
```

There are 4 decision variables labeled x1 to x4 in this problem.

Matrix variable  $X_k$  of interest (enter k between 1 and 1, or 0 to quit):

```
?> 1
```

The decision variables involved in  $X_1$  are among  $\{-x_1, \dots, x_4\}$ .

Their entry-wise distribution in  $X_1$  is as follows

(0,j>0,-j<0 stand for 0,xj,-xj, respectively):

```
X1 :
```

```
1 2 0 0
2 3 0 0
0 0 4 0
0 0 0 4
```

```
*****
```

Matrix variable  $X_k$  of interest (enter k between 1 and 1, or 0 to quit):

```
?> 0
```

## See Also

[lmivar](#) | [mat2dec](#) | [dec2mat](#)

---

<b>Purpose</b>	Total number of decision variables in system of LMIs
<b>Syntax</b>	<code>ndec = decnbr(lmisys)</code>
<b>Description</b>	The function <code>decnbr</code> returns the number <code>ndec</code> of decision variables (free scalar variables) in the LMI problem described in <code>lmisys</code> . In other words, <code>ndec</code> is the length of the vector of decision variables.
<b>Examples</b>	<p>For an LMI system <code>lmis</code> with two matrix variables <math>X</math> and <math>Y</math> such that</p> <ul style="list-style-type: none"><li>• <math>X</math> is symmetric block diagonal with one 2-by-2 full block, and one 2-by-2 scalar block</li><li>• <math>Y</math> is 2-by-3 rectangular,</li></ul> <p>the number of decision variables is</p> <pre>ndec = decnbr(LMIs)</pre> <pre>ndec =       10</pre> <p>This is exactly the number of free entries in <math>X</math> and <math>Y</math> when taking structure into account (see <code>decinfo</code> for more details).</p>
<b>See Also</b>	<code>dec2mat</code>   <code>decinfo</code>   <code>mat2dec</code>

# dec2mat

---

**Purpose** Given values of decision variables, derive corresponding values of matrix variables

**Syntax** `valX = dec2mat(lmisys,decvvars,X)`

**Description** Given a value `decvvars` of the vector of decision variables, `dec2mat` computes the corresponding value `valX` of the matrix variable with identifier `X`. This identifier is returned by `lmivar` when declaring the matrix variable.

Recall that the decision variables are all free scalar variables in the LMI problem and correspond to the free entries of the matrix variables  $X_1, \dots, X_K$ . Since LMI solvers return a feasible or optimal value of the vector of decision variables, `dec2mat` is useful to derive the corresponding feasible or optimal values of the matrix variables.

**Examples** See the description of `feasp`.

**See Also** `mat2dec` | `decnbr` | `decinfo`

---

<b>Purpose</b>	Help specify $c^T x$ objectives for mincx solver
<b>Syntax</b>	$[V1, \dots, Vk] = \text{defcx}(\text{lmisys}, n, X1, \dots, Xk)$
<b>Description</b>	<p>defcx is useful to derive the <math>c</math> vector needed by mincx when the objective is expressed in terms of the matrix variables.</p> <p>Given the identifiers <math>X1, \dots, Xk</math> of the matrix variables involved in this objective, defcx returns the values <math>V1, \dots, Vk</math> of these variables when the <math>n</math>-th decision variable is set to one and all others to zero.</p>
<b>See Also</b>	mincx   decinfo

**Purpose** Remove LMI from system of LMIs

**Syntax** `newsys = dellmi(lmisys,n)`

**Description** `dellmi` deletes the  $n$ -th LMI from the system of LMIs described in `lmisys`. The updated system is returned in `newsys`.

The ranking  $n$  is relative to the order in which the LMIs were declared and corresponds to the identifier returned by `newlmi`. Since this ranking is not modified by deletions, it is safer to refer to the remaining LMIs by their identifiers. Finally, matrix variables that only appeared in the deleted LMI are removed from the problem.

**Examples** Suppose that the three LMIs

$$A_1^T X_1 + X_1 A_1 + Q_1 < 0$$

$$A_2^T X_2 + X_2 A_2 + Q_2 < 0$$

$$A_3^T X_3 + X_3 A_3 + Q_3 < 0$$

have been declared in this order, labeled LMI1, LMI2, LMI3 with `newlmi`, and stored in `lmisys`. To delete the second LMI, type

```
lmis = dellmi(lmisys,LMI2)
```

`lmis` now describes the system of LMIs

$$A_1^T X_1 + X_1 A_1 + Q_1 < 0$$

$$A_3^T X_3 + X_3 A_3 + Q_3 < 0$$

and the second variable  $X_2$  has been removed from the problem since it no longer appears in the system.

To further delete LMI3 from the system, type

```
lmis = dellmi(lmis,LMI3)
```



or equivalently

```
lmi = dellmi(lmi,3)
```

Note that the system has retained its original ranking after the first deletion.

**See Also**

`newlmi` | `lmiedit` | `lmiinfo`

# delmvar

---

**Purpose** Remove one matrix variable from LMI problem

**Syntax** `newsys = delmvar(lmisys,X)`

**Description** `delmvar` removes the matrix variable  $X$  with identifier  $X$  from the list of variables defined in `lmisys`. The identifier  $X$  should be the second argument returned by `lmivar` when declaring  $X$ . All terms involving  $X$  are automatically removed from the list of LMI terms. The description of the resulting system of LMIs is returned in `newsys`.

**Examples** Consider the LMI

$$0 < \begin{pmatrix} A^T Y + B^T Y A + Q & C X + D \\ X^T C^T + D^T & -(X + X^T) \end{pmatrix}$$

involving two variables  $X$  and  $Y$  with identifiers  $X$  and  $Y$ . To delete the variable  $X$ , type

```
lmisys = delmvar(lmisys,X)
```

Now `lmisys` describes the LMI

$$0 < \begin{pmatrix} A^T Y B + B^T Y A + Q & D \\ D^T & 0 \end{pmatrix}$$

with only one variable  $Y$ . Note that  $Y$  is still identified by the label  $Y$ .

**See Also** `lmivar` | `setmvar` | `lmiinfo`

---

<b>Purpose</b>	Diagonalize vector of uncertain matrices and systems
<b>Syntax</b>	<code>v = diag(x)</code>
<b>Description</b>	If <code>x</code> is a vector of uncertain system models or matrices, <code>diag(x)</code> puts <code>x</code> on the main diagonal. If <code>x</code> is a matrix of uncertain system models or matrices, <code>diag(x)</code> is the main diagonal of <code>x</code> . <code>diag(diag(x))</code> is a diagonal matrix of uncertain system models or matrices.
<b>Examples</b>	<p>The statement produces a diagonal system <code>mxg</code> of size 4-by-4. Given multivariable system <code>xx</code>, a vector of the diagonal elements of <code>xxg</code> is found using <code>diag</code>.</p> <pre>x = rss(3,4,1); xg = frd(x,logspace(-2,2,80)); size(xg)</pre> <p>FRD model with 4 output(s) and 1 input(s), at 80 frequency point(s).</p> <pre>mxg = diag(xg); size(mxg)</pre> <p>FRD model with 4 output(s) and 4 input(s), at 80 frequency point(s).</p> <pre>xxg = [xg(1:2,1) xg(3:4,1)]; m = diag(xxg); size(m)</pre> <p>FRD model with 2 output(s) and 1 input(s), at 80 frequency point(s).</p>
<b>See Also</b>	<code>append</code>

**Purpose** Robust controller design using  $\mu$ -synthesis

**Syntax**

```
[k,clp,bnd] = dksyn(p,nmeas,ncont)
[k,clp,bnd] = dksyn(p,nmeas,ncont,opt)
[k,clp,bnd,dkinfo] = dksyn(p,nmeas,ncont,...)
[k,clp,bnd,dkinfo] = dksyn(p,nmeas,ncont,prevdkinfo,opt)
[...] = dksyn(p)
```

**Description** `[k,clp,bnd] = dksyn(p,nmeas,ncont)` synthesizes a robust controller  $k$  for the uncertain open-loop plant model  $p$  via the D-K or D-G-K algorithm for  $\mu$ -synthesis.  $p$  is an uncertain state-space `uss` model. The last `nmeas` outputs and `ncont` inputs of  $p$  are assumed to be the measurement and control channels.  $k$  is the controller, `clp` is the closed-loop model and `bnd` is the robust closed-loop performance bound.  $p$ ,  $k$ , `clp`, and `bnd` are related as follows:

```
clp = lft(p,k);
bnd1 = robustperf(clp);
bnd = 1/bnd.LowerBound
```

`[k,clp,bnd] = dksyn(p,nmeas,ncont,opt)` specifies user-defined options `opt` for the D-K or D-K-G algorithm. Use `dksynOptions` to create `opt`.

`[k,clp,bnd,dkinfo] = dksyn(p,nmeas,ncont,...)` returns a log of the algorithm execution in `dkinfo`. `dkinfo` is an  $N$ -by-1 cell array where  $N$  is the total number of iterations performed. The  $i$ th cell contains a structure with the following fields:

Field	Description
K	Controller at $i$ th iteration, a <code>ss</code> object
Bnds	Robust performance bound on the closed-loop system ( <code>double</code> )
DL	Left D-scale, an <code>ss</code> object

Field	Description
DR	Right D-scale, an ss object
GM	Offset G-scale, an ss object
GR	Right G-scale, an ss object
GFC	Center G-scale, an ss object
MussvBnds	Upper and lower $\mu$ bounds, an frd object
MussvInfo	Structure returned from mussv at each iteration.

`[k,clp,bnd,dkinfo] = dksyn(p,nmeas,ncont,prevdkinfo,opt)` allows you to use information from a previous `dksyn` iteration. `prevdkinfo` is a structure from a previous attempt at designing a robust controller using `dksyn`. `prevdkinfo` is used when the `dksyn` starting iteration is not 1 (`opt.StartingIterationNumber = 1`) to determine the correct D-scalings to initiate the iteration procedure.

`[...] = dksyn(p)` takes `p` as a `uss` object that has two-input/two-output partitioning as defined by `mktito`.

## Examples

The following statements create a robust performance control design for an unstable, uncertain single-input/single-output plant model. The

nominal plant model,  $G$ , is an unstable first order system  $\frac{s}{s-1}$ .

```
G = tf(1,[1 -1]);
```


The model itself is uncertain. At low frequency, below 2 rad/s, it can vary up to 25% from its nominal value. Around 2 rad/s the percentage variation starts to increase and reaches 400% at approximately 32 rad/s. The percentage model uncertainty is represented by the weight `Wu` which corresponds to the frequency variation of the model uncertainty and the uncertain LTI dynamic object `InputUnc`.

```
Wu = 0.25*tf([1/2 1],[1/32 1]);
InputUnc = ultidyn('InputUnc',[1 1]);
```

The uncertain plant model  $G_{pert}$  represents the model of the physical system to be controlled.

$$G_{pert} = G \cdot (1 + InputUnc \cdot W_u);$$

The robust stability objective is to synthesize a stabilizing LTI controller for all the plant models parameterized by the uncertain plant model,  $G_{pert}$ . The performance objective is defined as a weighted sensitivity minimization problem. The control interconnection structure is shown in the following figure.

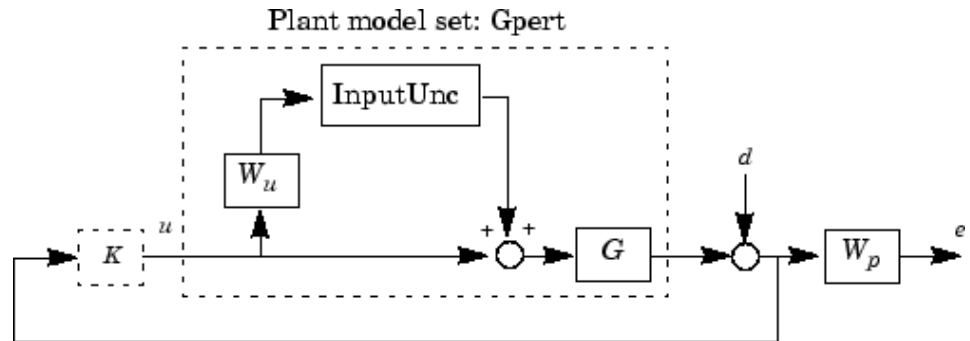

The sensitivity function,  $S$ , is defined as


$$S = \frac{1}{1 + PK}$$

where  $P$  is the plant model and  $K$  is the controller. A weighted sensitivity minimization problem selects a weight  $W_p$ , which corresponds to the *inverse* of the desired sensitivity function of the closed-loop system as a function of frequency. Hence the product of the sensitivity weight  $W_p$  and actual closed-loop sensitivity function is less than 1 across all frequencies. The sensitivity weight  $W_p$  has a gain of 100 at low frequency, begins to decrease at 0.006 rad/s, and reaches a minimum magnitude of 0.25 after 2.4 rad/s.

$$W_p = \text{tf}([1/4 \ 0.6], [1 \ 0.006]);$$

The defined sensitivity weight  $W_p$  implies that the desired disturbance rejection should be at least 100:1 disturbance rejection at DC, rise slowly between 0.006 and 2.4 rad/s, and allow the disturbance rejection to increase above the open-loop level, 0.25, at high frequency.

When the plant model is uncertain, the closed-loop performance objective is to achieve the desired sensitivity function for all plant models defined by the uncertain plant model,  $G_{pert}$ . The performance objective for an uncertain system is a robust performance objective. A block diagram of this uncertain closed-loop system illustrating the performance objective (closed-loop transfer function from  $d \rightarrow e$ ) is shown.

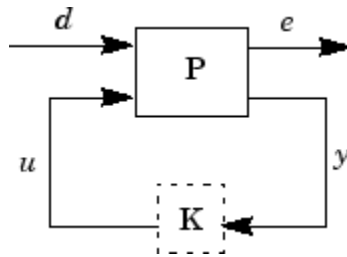

From the definition of the robust performance control objective, the weighted, uncertain control design interconnection model, which includes the robustness and performance objectives, can be constructed and is denoted by  $P$ . The robustness and performance weights are selected such that if the robust performance structure singular value,  $bnd$ , of the closed-loop uncertain system,  $clp$ , is less than 1 then the performance objectives have been achieved for all the plant models in the model set.

You can form the uncertain transfer matrix  $P$  from  $[d; u]$  to  $[e; y]$  using the following commands.

```
P = [Wp; 1 ]*[1 Gpert];
[K,clp,bnd] = dksyn(P,1,1);
bnd
```

bnd =

0.6819

The controller  $K$  achieves a robust performance  $\mu$  value bnd of 0.6819. Therefore you have achieved the robust performance objectives for the given problem.

You can use the `robustperf` command to analyze the closed-loop robust performance of `clp`.

```
[rpmarg,rpmargunc,report,info] = robustperf(clp);
```

Enter `disp(report)` to display the report.

## Algorithms

`dksyn` synthesizes a robust controller via D-K iteration. The D-K iteration procedure is an approximation to  $\mu$ -synthesis control design. The objective of  $\mu$ -synthesis is to minimize the structure singular value  $\mu$  of the corresponding robust performance problem associated with the uncertain system  $p$ . The uncertain system  $p$  is an open-loop interconnection containing known components including the nominal plant model, uncertain parameters, `ucomplex`, and unmodeled LTI dynamics, `ultidyn`, and performance and uncertainty weighting functions. You use weighting functions to include magnitude and frequency shaping information in the optimization. The control objective is to synthesize a stabilizing controller  $k$  that minimizes the robust performance  $\mu$  value, which corresponds to `bnd`.

The D-K iteration procedure involves a sequence of minimizations, first over the controller variable  $K$  (holding the  $D$  variable associated with the scaled  $\mu$  upper bound fixed), and then over the  $D$  variable (holding the controller  $K$  variable fixed). The D-K iteration procedure is not guaranteed to converge to the minimum  $\mu$  value, but often works well in practice.

`dksyn` automates the D-K iteration procedure and the options object `dksynOptions` allows you to customize its behavior. Internally, the algorithm works with the generalized scaled plant model  $P$ , which is extracted from a `uss` object using the command `lftdata`.



The following is a list of what occurs during a single, complete step of the D-K iteration.

- 1** (In the first iteration, this step is skipped.) The  $\mu$  calculation (from the previous step) provides a frequency-dependent scaling matrix,  $D_f$ . The fitting procedure fits these scalings with rational, stable transfer function matrices. After fitting, plots of

$$\bar{\sigma}(\hat{D}_f(j\omega)F_L(P,K)(j\omega)D_f^{-1}(j\omega))$$

and

$$\bar{\sigma}(\hat{D}_f(j\omega)F_L(P,K)(j\omega)\hat{D}_f^{-1}(j\omega))$$

are shown for comparison.

(In the first iteration, this step is skipped.) The rational  $\hat{D}$  is absorbed into the open-loop interconnection for the next controller synthesis. Using either the previous frequency-dependent  $D$ 's or the just-fit rational  $\hat{D}$ , an estimate of an appropriate value for the  $H_\infty$  norm is made. This is simply a conservative value of the scaled closed-loop  $H_\infty$  norm, using the most recent controller and either a frequency sweep (using the frequency-dependent  $D$ 's) or a state-space calculation (with the rational  $D$ 's).

- 2** (The first iteration begins at this point.) A controller is designed using  $H_\infty$  synthesis on the scaled open-loop interconnection. If you set the `DisplayWhileAutoIter` field in `dksynOptions` to 'on', the following information is displayed:
  - a** The progress of the  $\gamma$ -iteration is displayed.
  - b** The singular values of the closed-loop frequency response are plotted.

- c You are given the option to change the frequency range. If you change it, all relevant frequency responses are automatically recomputed.
  - d You are given the option to rerun the  $H_\infty$  synthesis with a set of modified parameters if you set the `AutoIter` field in `dksynOptions` to 'off'. This is convenient if, for instance, the bisection tolerance was too large, or if `maximum gamma` value was too small.
- 3 The structured singular value of the closed-loop system is calculated and plotted.
  - 4 An iteration summary is displayed, showing all the controller order, as well as the peak value of  $\mu$  of the closed-loop frequency responses.
  - 5 The choice of stopping or performing another iteration is given.

Subsequent iterations proceed along the same lines without the need to reenter the iteration number. A summary at the end of each iteration is updated to reflect data from all previous iterations. This often provides valuable information about the progress of the robust controller synthesis procedure.

## Interactive Fitting of D-Scalings

Setting the `AutoIter` field in `dksynOptions` to 'off' requires that you interactively fit the  $D$ -scales each iteration. During step 2 of the D-K iteration procedure, you are prompted to enter your choice of options for fitting the  $D$ -scaling data. You press return after, the following is a list of your options.

```
Enter Choice (return for list):
Choices:
nd          Move to Next D-Scaling
nb          Move to Next D-Block

i           Increment Fit Order
d           Decrement Fit Order
apf        Auto-PreFit
```

```

mx 3      Change Max-Order to 3
at 1.01   Change Auto-PreFit tol to 1.01
0         Fit with zeroth order
2         Fit with second order
n         Fit with n'th order
e         Exit with Current Fittings
s         See Status

```

- `nd` and `nb` allow you to move from one  $D$ -scale data to another. `nd` moves to the next scaling, whereas `nb` moves to the next scaling block. For scalar  $D$ -scalings, these are identical operations, but for problems with full  $D$ -scalings, (perturbations of the form  $\delta I$ ) they are different. In the (1,2) subplot window, the title displays the  $D$ -scaling block number, the row/column of the scaling that is currently being fitted, and the order of the current fit (with `d` for data when no fit exists).
- You can increment or decrement the order of the current fit (by 1) using `i` and `d`.
- `apf` automatically fits each  $D$ -scaling data. The default maximum state order of individual  $D$ -scaling is 5. The `mx` variable allows you to change the maximum  $D$ -scaling state order used in the automatic prefitting routine. `mx` must be a positive, nonzero integer. `at` allows you to define how close the rational, scaled  $\mu$  upper bound is to approximate the actual  $\mu$  upper bound in a norm sense. Setting `at` to 1 would require an exact fit of the  $D$ -scale data, and is not allowed. Allowable values for `at` are greater than 1. This setting plays a role (mildly unpredictable, unfortunately) in determining where in the  $(D,K)$  space the D-K iteration converges.
- Entering a positive integer at the prompt will fit the current  $D$ -scale data with that state order rational transfer function.
- `e` exits the  $D$ -scale fitting to continue the D-K iteration.
- The variable `s` displays a status of the current and fits.

## Limitations

There are two shortcomings of the D-K iteration control design procedure:

- Calculation of the structured singular value  $\mu\Delta(\cdot)$  is approximated by its upper bound. This is not a serious problem because the value of  $\mu$  and its upper bound are often close.
- The D-K iteration is not guaranteed to converge to a global, or even local minimum. This is a serious problem, and represents the biggest limitation of the design procedure.

In spite of these drawbacks, the D-K iteration control design technique appears to work well on many engineering problems. It has been applied to a number of real-world applications with success. These applications include vibration suppression for flexible structures, flight control, chemical process control problems, and acoustic reverberation suppression in enclosures.

## References

- [1] Balas, G.J., and J.C. Doyle, "Robust control of flexible modes in the controller crossover region," *AIAA Journal of Guidance, Dynamics and Control*, Vol. 17, no. 2, March-April, 1994, p. 370-377.
- [2] Balas, G.J., A.K. Packard, and J.T. Harduvel, "Application of  $\mu$ -synthesis techniques to momentum management and attitude control of the space station," *AIAA Guidance, Navigation and Control Conference*, New Orleans, August 1991.
- [3] Doyle, J.C., K. Lenz, and A. Packard, "Design examples using  $\mu$ -synthesis: Space shuttle lateral axis FCS during reentry," *NATO ASI Series, Modelling, Robustness, and Sensitivity Reduction in Control Systems*, vol. 34, Springer-Verlag, Berlin 1987.
- [4] Packard, A., J. Doyle, and G. Balas, "Linear, multivariable robust control with a  $\mu$  perspective," *ASME Journal of Dynamic Systems, Measurement and Control*, 50th Anniversary Issue, Vol. 115, no. 2b, June 1993, p. 310-319.
- [5] Stein, G., and J. Doyle, "Beyond singular values and loopshapes," *AIAA Journal of Guidance and Control*, Vol. 14, No. 1, January, 1991, p. 5-16.

**Tutorials**

Control of Spring-Mass-Damper Using Mixed  $\mu$ -Synthesis

**See Also**

`dksynOptions` | `h2syn` | `hinfsv` | `mktito` | `mussv` | `robuststab` |  
`robustperf` | `wcgain` | `wcsens` | `wcmargin`

# dksynOptions

---

**Purpose** Set options for dksyn

**Syntax**  
`opt = dksynOptions`  
`opt = dksynOptions(Name,Value)`

**Description** `opt = dksynOptions` returns the default options for dksyn.  
`opt = dksynOptions(Name,Value)` returns an option set with additional options specified by one or more `Name,Value` pair arguments.

## Input Arguments

### Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name,Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

`dksynOptions` takes the following `Name` arguments:

#### 'FrequencyVector'

Frequencies for mu-analysis, specified as a vector. When empty, `dksyn` automatically chooses the frequency range and number of points.

**Default:** []

#### 'InitialController'

Controller for initializing first iteration, specified as a state-space (ss) model.

**Default:** []

#### 'Autolter'

Automated mu-synthesis mode, specified as one of the strings 'on' or 'off'. When automated mu-synthesis mode is off, `dksyn` performs an

interactive D-K iteration procedure. You are prompted to fit the D-scale data and provide input on the control design process.

**Default:** 'on'

### **'DisplayWhileAutolter'**

Status of display in automated mu-synthesis mode, specified as one of the strings 'off' or 'on'. When the display is on, and automated mu-synthesis mode is active, dksyn displays the iteration progress during the synthesis computation.

**Default:** 'off'

### **'StartingIterationNumber'**

Iteration number for initiating iteration procedure, specified as a positive integer. Use this option when you provide the `prevdkinfo` argument to `dksyn` to use information from a previous `dksyn` calculation. In this case, specify the starting iteration number from which to resume the iteration procedure.

**Default:** 1

### **'NumberOfAutolterations'**

Number of iterations to perform in automatic mu-synthesis mode, specified as a positive integer.

**Default:** 10

### **'MixedMU'**

Flag indicating whether to perform mixed real/complex mu-synthesis when real parameters are present, specified as one of the strings 'off' or 'on'. Mixed mu-synthesis accounts for uncertain real parameters directly in the synthesis process. Setting 'MixedMU' to 'on' when you have uncertain real parameters can result in improved robust performance of the synthesized controller.

**Default:** 'off'

## 'AutoScalingOrder'

State order for fitting  $D$ -scaling and  $G$ -scaling data for real/complex mu-synthesis, specified as a vector of the form [dorder, gorder].

**Default:** [5 2] (5th-order  $D$ -scalings and 2nd-order  $G$ -scalings)

## 'AutoIterSmartTerminate'

Automatic termination mode, specified as one of the strings 'on' or 'off'. When `AutoIterSmartTerminate` is 'on', the iteration procedure terminates based on the progress of the design iteration. Set the tolerance for automatic termination using `AutoIterSmartTerminateTol`.

In automatic termination mode, the iteration procedure terminates when a stopping criterion is satisfied. The stopping criterion involves the objective value (peak value, across frequency, of the upper bound for  $\mu$ ) in the current iteration, denoted  $v_0$ . The stopping criterion also involves the objective value in the previous two iterations, denoted  $v_{-1}$  and  $v_{-2}$ . The stopping criterion is satisfied for lack of progress if:

$$|v_0 - v_{-1}| < \text{AutoIterSmartTerminateTol} * v_0,$$

and

$$|v_{-1} - v_{-2}| < \text{AutoIterSmartTerminateTol} * v_0.$$

The stopping criteria is also satisfied for an undesirable significant increase in the objective value if:

$$v_0 > v_{-1} + 20 * \text{AutoIterSmartTerminateTol} * v_0.$$

**Default:** 'on'

## 'AutoIterSmartTerminateTol'



Tolerance for AutoIterSmartTerminate mode.

**Default:** 0.005

## Output Arguments

### **options**

Option set containing the specified options for the dksyn command.

## Examples

### **Create Options Set for dksyn**

Create an options set for a dksyn run using a logarithmic distribution of frequency points for analysis and performing 24 iterations.

```
options = dksynOptions('FrequencyVector',logspace(-2,3,80),...  
                      'NumberOfAutoIterations',24);
```

Alternatively, use dot notation to set the values of options.

```
options = dksynOptions;  
options.FrequencyVector = logspace(-2,3,80);  
options.NumberOfAutoIterations = 24;
```

## See Also

| dksyn

# dmplot

---

**Purpose** Interpret disk gain and phase margins

**Syntax**

```
dmplot
dmplot(diskgm)
[dgm,dpm] = dmplot
```

**Description** `dmplot` plots disk gain margin (`dgm`) and disk phase margin (`dpm`). Both margins are derived from the largest disk that

- Contains the critical point  $(-1,0)$
- Does not intersect the Nyquist plot of the open-loop response  $L$

`diskgm` is the radius of this disk and a lower bound on the classical gain margin.

`dmplot(diskgm)` plots the maximum allowable phase variation as a function of the actual gain variation for a given disk gain margin `diskgm` (the maximum gain variation being `diskgm`). The closed-loop system is guaranteed to remain stable for all combined gain/phase variations inside the plotted ellipse.

`[dgm,dpm] = dmplot` returns the data used to plot the gain/phase variation ellipse.

## Examples

When you call `dmplot` (without an argument), the resulting plot shows a comparison of a disk margin analysis with the classical notations of gain and phase margins. The Nyquist plot is of the loop transfer function  $L(s)$

$$L(s) = \frac{\frac{s}{30} + 1}{(s+1)(s^2 + 1.6s + 16)}$$


`dmplot`

This figure shows a comparison of a disk margin analysis with the classical notations of gain and phase margins.

The Nyquist plot is of the loop transfer function

$$L = 4(s/30 + 1)/((s+1)*(s^2 + 1.6s + 16))$$

- The Nyquist plot of L corresponds to the blue line
- The unit disk corresponds to the dotted red line
- GM and PM indicate the location of the classical gain and phase margins for the system L.
- DGM and DPM correspond to the disk gain and phase margins. The disk margins provide a lower bound on classical gain and phase margins.
- The disk margin circle corresponds to the dashed black line. The disk margin corresponds to the largest disk centered at  $(GMD + 1/GMD)/2$  that just touches the loop transfer function L. This location is indicated by the red dot.

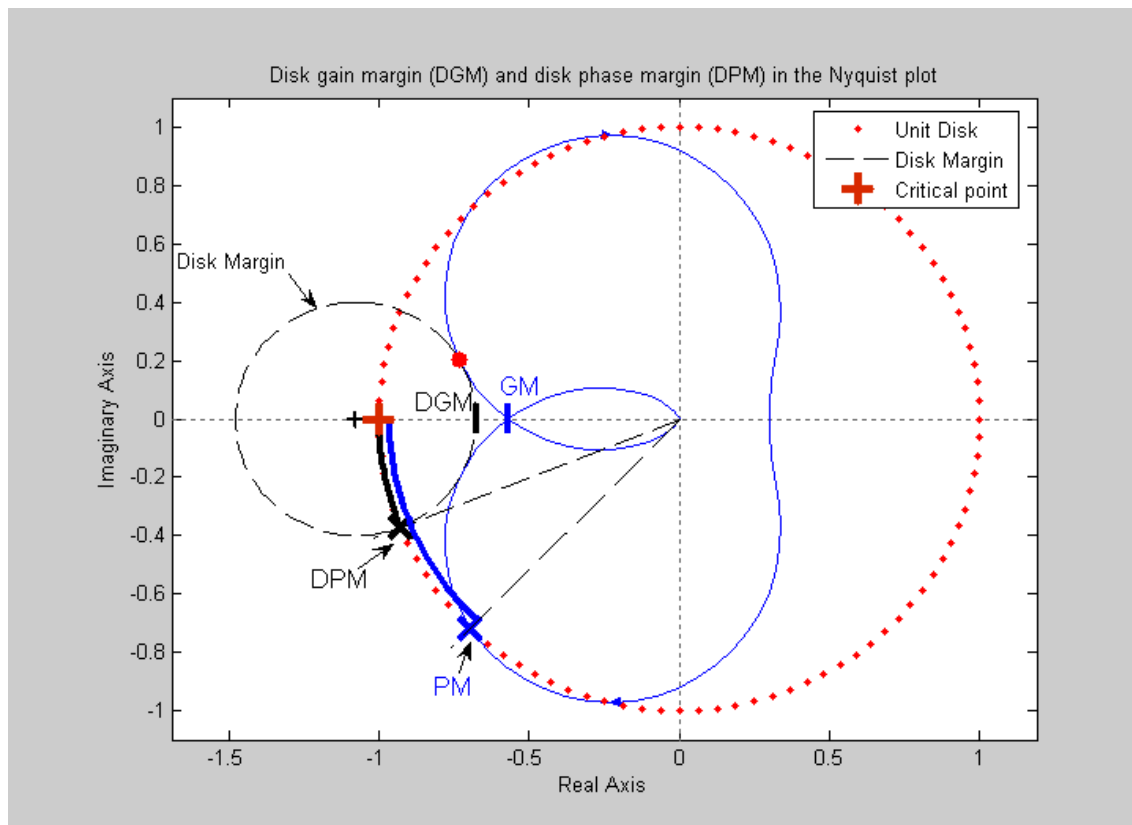


- The Nyquist plot of  $L$  corresponds to the blue line.
- The unit disk corresponds to the dotted red line.
- GM and PM indicate the location of the classical gain and phase margins for the system  $L$ .
- DGM and DPM correspond to the disk gain and phase margins, respectively. The disk margins provide a lower bound on classical gain and phase margins.

- The disk margin circle, represented by the dashed black line, corresponds to the largest disk centered at  $(\text{DGM} + 1/\text{DGM})/2$  that just touches the loop transfer function  $L$ . This location is indicated by the red dot.

The  $x$ -axis corresponds to the gain variation, in dB, and the  $y$ -axis corresponds to the phase variation allowable, in degrees. For a disk gain margin corresponding to 3 dB (1.414), the closed-loop system is stable for all phase and gain variations inside the blue ellipse. For example, the closed-loop system can simultaneously tolerate  $\pm 2$  dB gain variation and  $\pm 14$  deg phase variations.

```
dmpplot(1.414)
```

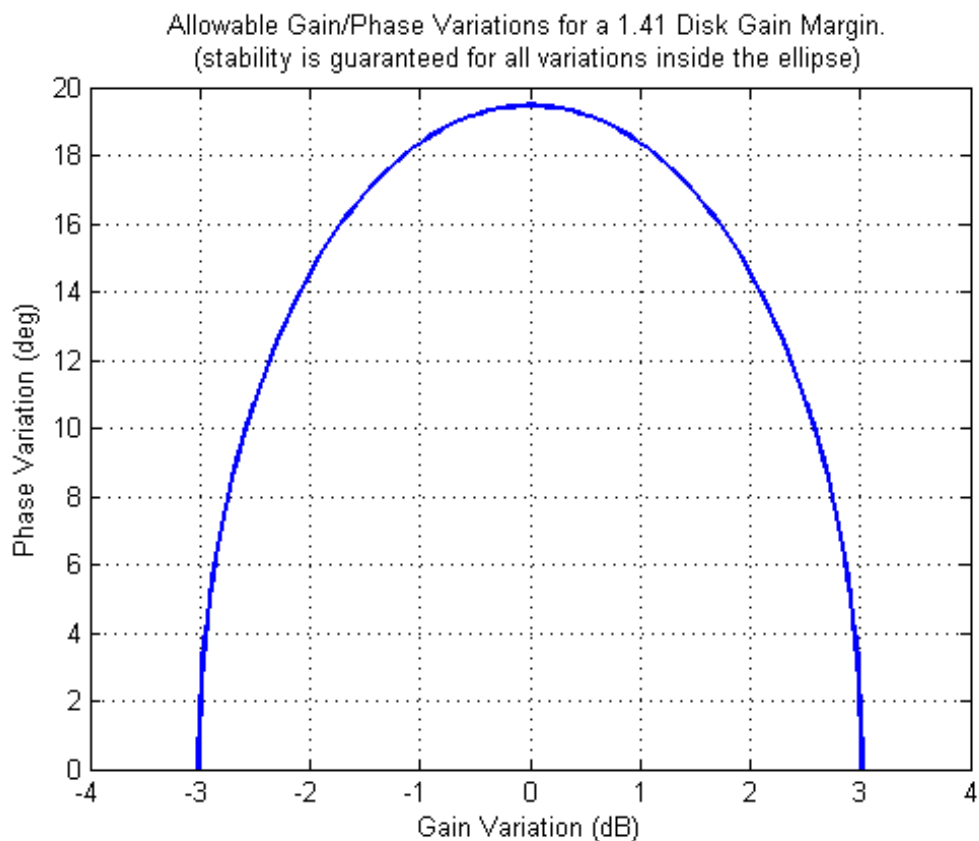

## References

Barrett, M.F., Conservatism with robustness tests for linear feedback control systems, Ph.D. Thesis. Control Science and Dynamical Systems, University of Minnesota, 1980.

Blight, J.D., R.L. Dailey, and Gangsass, D., "Practical control law design for aircraft using multivariable techniques," *International Journal of Control*, Vol. 59, No. 1, 1994, 93-137.

Bates, D., and I. Postlethwaite, *Robust Multivariable Control of Aerospace Systems*, Delft University Press, Delft, The Netherlands, ISBN: 90-407-2317-6, 2002.

**See Also**

wmargin

# drawmag

---

**Purpose** Mouse-based tool for sketching and fitting

**Syntax** `[sysout,pts] = drawmag(data)`  
`[sysout,pts] = drawmag(data,init_pts)`

**Description** drawmag interactively uses the mouse in the plot window to create pts (the frd object) and sysout (a stable minimum-phase ss object), which approximately fits the frequency response (magnitude) in pts.

Input arguments:

`data` Either a frequency response object that is plotted as a reference, or a constant matrix of the form  $[x_{min} \ x_{max} \ y_{min} \ y_{max}]$  specifying the plot window on the data.

`init_pts` Optional frd objects of initial set of points

Output arguments:

`sysout` Stable, minimum-phase ss object that approximately fits, in magnitude, the pts data.

`pts` Frequency response of points.

While drawmag is running, all interaction with the program is through the mouse and/or the keyboard. The mouse, if there is one, must be in the plot window. The program recognizes several commands:

- Clicking the mouse button adds a point at the cross-hairs. If the cross-hairs are outside the plotting window, the points are plotted when the fitting, windowing, or replotting mode is invoked. Typing a is the same as clicking the mouse button.
- Typing r removes the point with frequency nearest that of the cross-hairs.
- Typing any integer between 0 and 9 fits the existing points with a transfer function of that order. The fitting routine approximately



minimizes the maximum error in a log sense. The new fit is displayed along with the points, and the most recent previous fit, if it exists.

- Typing `w` uses the cross-hair location as the initial point in creating a window. Moving the cross-hairs and clicking the mouse or pressing any key then gives a second point at the new cross-hair location. These two points define a new window on the data, which is immediately replotted. This is useful in fine tuning parts of the data. You can call windowing repeatedly.
- Typing `p` simply replots the data using a window that covers all the current data points as well as whatever was specified in `in`. Typically used after windowing to view all the data.
- Typing `k` invokes the keyboard using the `keyboard` command. Be cautious when using this option to avoid unintended changes to variables.

**See Also**

`ginput` | `loglog`

# evallmi

---

**Purpose** Given particular instance of decision variables, evaluate all variable terms in system of LMIs

**Syntax** `evalsys = evallmi(lmisys,decvars)`

**Description** `evallmi` evaluates all LMI constraints for a particular instance `decvars` of the vector of decision variables. Recall that `decvars` fully determines the values of the matrix variables  $X_1, \dots, X_K$ . The “evaluation” consists of replacing all terms involving  $X_1, \dots, X_K$  by their matrix value. The output `evalsys` is an LMI system containing only constant terms.

The function `evallmi` is useful for validation of the LMI solvers’ output. The vector returned by these solvers can be fed directly to `evallmi` to evaluate all variable terms. The matrix values of the left and right sides of each LMI are then returned by `showlmi`.

**Observation** `evallmi` is meant to operate on the output of the LMI solvers. To evaluate all LMIs for particular instances of the matrix variables  $X_1, \dots, X_K$ , first form the corresponding decision vector  $x$  with `mat2dec` and then call `evallmi` with  $x$  as input.

**Examples** Consider the feasibility problem of finding  $X > 0$  such that

$$A^T X A - X + I < 0$$

where

$$A = \begin{pmatrix} 0.5 & -0.2 \\ 0.1 & -0.7 \end{pmatrix}.$$

This LMI system is defined by:

```
setlmis([])
X = lmivar(1,[2 1])      % full symmetric X

lmiterm([1 1 1 X],A',A)  % LMI #1: A'*X*A
lmiterm([1 1 1 X],[-1,1] % LMI #1: -X
```

```

lmiterm([1 1 1 0],1)      % LMI #1: I
lmiterm([-2 1 1 X],1,1)  % LMI #2: X
lmis = getlmis

```

To compute a solution `xfeas`, call `feasp` by

```
[tmin,xfeas] = feasp(lmis)
```

The result is

```

tmin =
    -4.7117e+00

xfeas' =
    1.1029e+02    -1.1519e+01    1.1942e+02

```

The LMI constraints are therefore feasible since `tmin < 0`. The solution `X` corresponding to the feasible decision vector `xfeas` would be given by `X = dec2mat(lmis,xfeas,X)`.

To check that `xfeas` is indeed feasible, evaluate all LMI constraints by typing

```
evals = evallmi(lmis,xfeas)
```

The left and right sides of the first and second LMIs are then given by

```

[lhs1,rhs1] = showlmi(evals,1)
[lhs2,rhs2] = showlmi(evals,2)

```

and the test

```

eig(lhs1-rhs1)
ans =
    -8.2229e+01
    -5.8163e+01

```

confirms that the first LMI constraint is satisfied by `xfeas`.

# evalmi

---

## **See Also**

`showlmi` | `setmvar` | `dec2mat` | `mat2dec`

---

<b>Purpose</b>	Evaluate tuning requirements for tuned control system
<b>Syntax</b>	<code>[Hspec, fval] = evalSpec(Req, T)</code> <code>[Hspec, fval] = evalSpec(Req, T, Info)</code>
<b>Description</b>	<p><code>[Hspec, fval] = evalSpec(Req, T)</code> returns the normalized value, <code>fval</code>, of a tuning requirement evaluated for a tuned control system <code>T</code>. The <code>evalSpec</code> command also returns the transfer function, <code>Hspec</code>, used to compute this value.</p> <p><code>[Hspec, fval] = evalSpec(Req, T, Info)</code> uses the <code>Info</code> structure returned by <code>system</code> for correct scaling of MIMO open-loop requirements, such as loop shapes and stability margins.</p>
<b>Input Arguments</b>	<p><b>Req - Tuning requirement to evaluate</b> TuningGoal requirement object   vector of TuningGoal objects</p> <p>Tuning requirement to evaluate, specified as a TuningGoal requirement object or vector of TuningGoal objects. TuningGoal requirement objects include:</p> <ul style="list-style-type: none"><li>• TuningGoal.Tracking</li><li>• TuningGoal.Gain</li><li>• TuningGoal.WeightedGain</li><li>• TuningGoal.Variance</li><li>• TuningGoal.WeightedVariance</li><li>• TuningGoal.LoopShape</li><li>• TuningGoal.Margins</li><li>• TuningGoal.Poles</li><li>• TuningGoal.StableController</li></ul> <p><b>T - Tuned control system</b> generalized state-space model   sITuner interface object</p>

Tuned control system, specified as a generalized state-space (`genss`) model or an `sITuner` interface to a Simulink model. `T` is typically the result of using the tuning requirement to tune control system parameters with `systune`.

**Example:** `[T,fSoft,gHard,Info] = systune(T0,SoftReq,HardReq)`, where `T0` is a tunable `genss` model

**Example:** `[T,fSoft,gHard,Info] = systune(ST0,SoftReq,HardReq)`, where `ST0` is a `sITuner` interface object

### **Info - System information**

data structure returned by `systune`

System information, specified as the data structure returned by `systune` when you use that command to tune a control system. Use `Info` when validating tuned MIMO systems. Doing so ensures that `viewSpec` correctly scales open-loop requirements such as loop shapes and stability margins.

## **Output Arguments**

### **Hspec - transfer function associated with requirement**

State-space model

Transfer function associated with the tuning requirement, returned as a state-space (`ss`) model. `evalSpec` uses `Hspec` to compute the evaluated requirement, `fval`.

For example, suppose `Req` is a `TuningGoal` gain requirement that limits the gain,  $H(s)$ , between some specified input and output to the gain profile,  $w(s)$ . In that case, `Hspec` is given by:

$$Hspec(s) = \frac{1}{w(s)} H(s).$$

`fval` is the peak gain of `Hspec`. If  $H(s)$  satisfies the tuning requirement, `fval`  $\leq 1$ .

### **fval - Normalized value of tuning requirement**


positive scalar

Normalized value of tuning requirement, returned as a positive scalar. The normalized value is a measure of how closely the requirement is met in the tuned system. The tuning requirement is satisfied if  $fval < 1$ . For information about how each type of `TuningGoal` requirement is converted into a normalized value, see the `TuningGoal` requirement objects.

## Examples Evaluate Requirements for Tuned System

Tune a control system with `systemtune`, and evaluate the tuning requirements with `evalSpec`.

Create tracking, roll-off, stability margin, and disturbance rejection requirements for tuning the following control system.

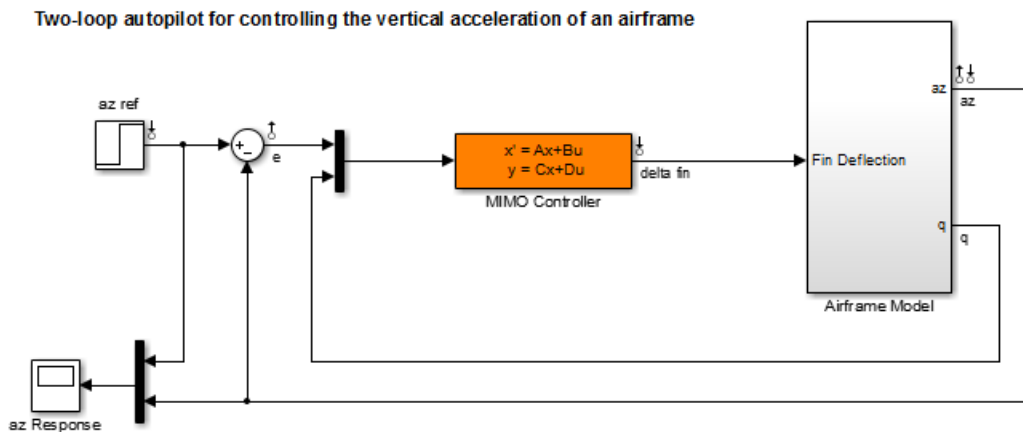

```
Req1 = TuningGoal.Tracking('az ref','az',1);
Req2 = TuningGoal.Gain('delta fin','delta fin',tf(25,[1 0]));
Req3 = TuningGoal.Margins('delta fin',7,45);
MaxGain = frd([2 200 200],[0.02 2 200]);
Req4 = TuningGoal.Gain('delta fin','az',MaxGain);
```

Tune the model using these tuning requirements.

```
open_system('rct_airframe2')

ST0 = sITuner('rct_airframe2','MIMO Controller');
addPoint(ST0,'delta fin');

rng('default');
[ST1,fSoft,~,Info] = systune(ST0,[Req1,Req2,Req3,Req4]);

Final: Soft = 1.15, Hard = -Inf, Iterations = 72
```

ST1 is a tuned version of the sITuner interface to the control system. ST1 contains the tuned values of the tunable parameters of the MIMO controller in the model.

Evaluate the margin requirement for the tuned system.

```
[hspec,fval] = evalSpec(Req3,ST1,Info);
fval

fval =

    0.5434
```

The normalized value of the requirement is below 1, indicating that the tuned system satisfies the margin requirement. For more information about how the normalized value of this requirement is calculated, see the `TuningGoal.Margins` reference page.

Evaluate the tracking requirement for the tuned system.

```
[hspec,fval] = evalSpec(Req1,ST1,Info);
fval

fval =

    1.1460
```



The tracking requirement is nearly met, but the value exceeds 1, indicating a small violation. To further assess the violation, you can use `viewSpec` to examine the requirement against the tuned control system as a function of frequency.

**See Also**

`system` | `genss` | `viewSpec` | `system` (for `slTuner`) | `slTuner` | `TuningGoal.Tracking` | `TuningGoal.Sensitivity` | `TuningGoal.Overshoot` | `TuningGoal.MinLoopGain` | `TuningGoal.MaxLoopGain` | `TuningGoal.Gain` | `TuningGoal.Margins` | `TuningGoal.WeightedGain` | `TuningGoal.Variance` | `TuningGoal.WeightedVariance` | `TuningGoal.LoopShape` | `TuningGoal.Poles` | `TuningGoal.StableController`

**Concepts**

- “Generalized Models”

**Purpose** Compute solution to given system of LMIs

**Syntax** `[tmin,xfeas] = feasp(lmisys,options,target)`

**Description** The function `feasp` computes a solution `xfeas` (if any) of the system of LMIs described by `lmisys`. The vector `xfeas` is a particular value of the decision variables for which all LMIs are satisfied.

Given the LMI system

$$N^T LxN \leq M^T R(x)M, \quad (2-3)$$

`xfeas` is computed by solving the auxiliary convex program:

Minimize  $t$  subject to  $N^T L(x)N - M^T R(x)M \leq tI$ .

The global minimum of this program is the scalar value `tmin` returned as first output argument by `feasp`. The LMI constraints are feasible if  $tmin \leq 0$  and strictly feasible if  $tmin < 0$ . If the problem is feasible but not strictly feasible, `tmin` is positive and very small. Some post-analysis may then be required to decide whether `xfeas` is close enough to feasible.

The optional argument `target` sets a target value for `tmin`. The optimization code terminates as soon as a value of  $t$  below this target is reached. The default value is `target = 0`.

Note that `xfeas` is a solution in terms of the decision variables and not in terms of the matrix variables of the problem. Use `dec2mat` to derive feasible values of the matrix variables from `xfeas`.

## Control Parameters

The optional argument `options` gives access to certain control parameters for the optimization algorithm. This five-entry vector is organized as follows:

- `options(1)` is not used.
- `options(2)` sets the maximum number of iterations allowed to be performed by the optimization procedure (100 by default).

- `options(3)` resets the *feasibility radius*. Setting `options(3)` to a value  $R > 0$  further constrains the decision vector  $x = (x_1, \dots, x_N)$  to lie within the ball

$$\sum_{i=1}^N x_i^2 < R^2$$

In other words, the Euclidean norm of `xfeas` should not exceed  $R$ . The feasibility radius is a simple means of controlling the magnitude of solutions. Upon termination, `feasp` displays the *f-radius saturation*, that is, the norm of the solution as a percentage of the feasibility radius  $R$ .

The default value is  $R = 109$ . Setting `options(3)` to a negative value activates the “flexible bound” mode. In this mode, the feasibility radius is initially set to 108, and increased if necessary during the course of optimization

- `options(4)` helps speed up termination. When set to an integer value  $J > 0$ , the code terminates if  $t$  did not decrease by more than one percent in relative terms during the last  $J$  iterations. The default value is 10. This parameter trades off speed vs. accuracy. If set to a small value ( $< 10$ ), the code terminates quickly but without guarantee of accuracy. On the contrary, a large value results in natural convergence at the expense of a possibly large number of iterations.
- `options(5) = 1` turns off the trace of execution of the optimization procedure. Resetting `options(5)` to zero (default value) turns it back on.

Setting `option(i)` to zero is equivalent to setting the corresponding control parameter to its default value. Consequently, there is no need to redefine the entire vector when changing just one control parameter. To set the maximum number of iterations to 10, for instance, it suffices to type

```
options=zeros(1,5)      % default value for all parameters
options(2)=10
```

## Memory Problems

When the least-squares problem solved at each iteration becomes ill conditioned, the `feasp` solver switches from Cholesky-based to QR-based linear algebra (see “Memory Problems” on page 2-275 for details). Since the QR mode typically requires much more memory, MATLAB may run out of memory and display the message

```
??? Error using ==> feaslsv
Out of memory. Type HELP MEMORY for your options.
```

You should then ask your system manager to increase your swap space or, if no additional swap space is available, set `options(4) = 1`. This will prevent switching to QR and `feasp` will terminate when Cholesky fails due to numerical instabilities.

## Examples

Consider the problem of finding  $P > I$  such that

$$A_1^T P + P A_1 < 0 \tag{2-4}$$

$$A_2^T P + P A_2 < 0 \tag{2-5}$$

$$A_3^T P + P A_3 < 0 \tag{2-6}$$

with data

$$A_1 = \begin{pmatrix} -1 & 2 \\ 1 & -3 \end{pmatrix}, A_2 = \begin{pmatrix} -0.8 & 1.5 \\ 1.3 & -2.7 \end{pmatrix}, A_3 = \begin{pmatrix} -1.4 & 0.9 \\ 0.7 & -2.0 \end{pmatrix}$$

This problem arises when studying the quadratic stability of the polytope of matrices  $\text{Co}\{A_1, A_2, A_3\}$ .

To assess feasibility with `feasp`, first enter the LMIs Equation 2-4 -Equation 2-6:

```
setlmis([])
p = lmivar(1,[2 1])

lmiterm([1 1 1 p],1,a1,'s')    % LMI #1
```

```

lmiterm([2 1 1 p],1,a2,'s')      % LMI #2
lmiterm([3 1 1 p],1,a3,'s')      % LMI #3
lmiterm([-4 1 1 p],1,1)          % LMI #4: P
lmiterm([4 1 1 0],1)             % LMI #4: I
lmis = getlmis

```

Then call `feasp` to find a feasible decision vector:

```
[tmin,xffeas] = feasp(lmis)
```

This returns `tmin = -3.1363`. Hence Equation 2-4 - Equation 2-6 is feasible and the dynamical system  $\dot{x} = A(t)x$  is quadratically stable for  $A(t) \in \text{Co}\{A_1, A_2, A_3\}$ .

To obtain a Lyapunov matrix  $P$  proving the quadratic stability, type

```
P = dec2mat(lmis,xffeas,p)
```

This returns

$$P = \begin{pmatrix} 270.8 & 126.4 \\ 126.4 & 155.1 \end{pmatrix}$$

It is possible to add further constraints on this feasibility problem. For instance, you can bound the Frobenius norm of  $P$  by 10 while asking `tmin` to be less than or equal to  $-1$ . This is done by

```
[tmin,xffeas] = feasp(lmis,[0,0,10,0,0],-1)
```

The third entry 10 of `options` sets the feasibility radius to 10 while the third argument  $-1$  sets the target value for `tmin`. This yields `tmin = -1.1745` and a matrix  $P$  with largest eigenvalue  $\lambda_{\max}(P) = 9.6912$ .

## References

The feasibility solver `feasp` is based on Nesterov and Nemirovski's Projective Method described in:

Nesterov, Y., and A. Nemirovski, *Interior Point Polynomial Methods in Convex Programming: Theory and Applications*, SIAM, Philadelphia, 1994.

Nemirovski, A., and P. Gahinet, “The Projective Method for Solving Linear Matrix Inequalities,” *Proc. Amer. Contr. Conf.*, 1994, Baltimore, Maryland, p. 840–844.

The optimization is performed by the C-MEX file `feaslv.mex`.

## See Also

`mincx` | `gevp` | `dec2mat`

**Purpose**

Fit frequency response data with state-space model

**Syntax**

```
B = fitfrd(A,N)
B = fitfrd(A,N,RD)
B = fitfrd(A,N,RD,WT)
```

**Description**

`B = fitfrd(A,N)` is a state-space object with state dimension  $N$ , where  $A$  is an `frd` object and  $N$  is a nonnegative integer. The frequency response of  $B$  closely matches the  $D$ -scale frequency response data in  $A$ .

$A$  must have either 1 row or 1 column, although it need not be 1-by-1.  $B$  will be the same size as  $A$ . In all cases,  $N$  should be a nonnegative scalar.

`B = fitfrd(A,N,RD)` forces the relative degree of  $B$  to be  $RD$ .  $RD$  must be a nonnegative integer. The default value for  $RD$  is 0. If  $A$  is a row (or column) then  $RD$  can be a vector of the same size as well, specifying the relative degree of each entry of  $B$ . If  $RD$  is a scalar, then it specifies the relative degree for all entries of  $B$ . You can specify the default value for  $RD$  by setting  $RD$  to an empty matrix.


`B = fitfrd(A,N,RD,WT)` uses the magnitude of  $WT$  to weight the optimization fit criteria.  $WT$  can be a `double`, `ss` or `frd`. If  $WT$  is a scalar, then it is used to weight all entries of the error criteria  $(A-B)$ . If  $WT$  is a vector, it must be the same size as  $A$ , and each individual entry of  $WT$  acts as a weighting function on the corresponding entry of  $(A-B)$ .

**Examples****Fit  $D$ -scale Data**

Use the `fitfrd` command to fit  $D$ -scale data.

Create  $D$ -scale frequency response data from a fifth-order system.

```
sys = tf([1 2 2],[1 2.5 1.5])*tf(1,[1 0.1]);
sys = sys*tf([1 3.75 3.5],[1 2.5 13]);
omeg = logspace(-1,1);
sysg = frd(sys,omeg);
bode(sysg,'r-');
```

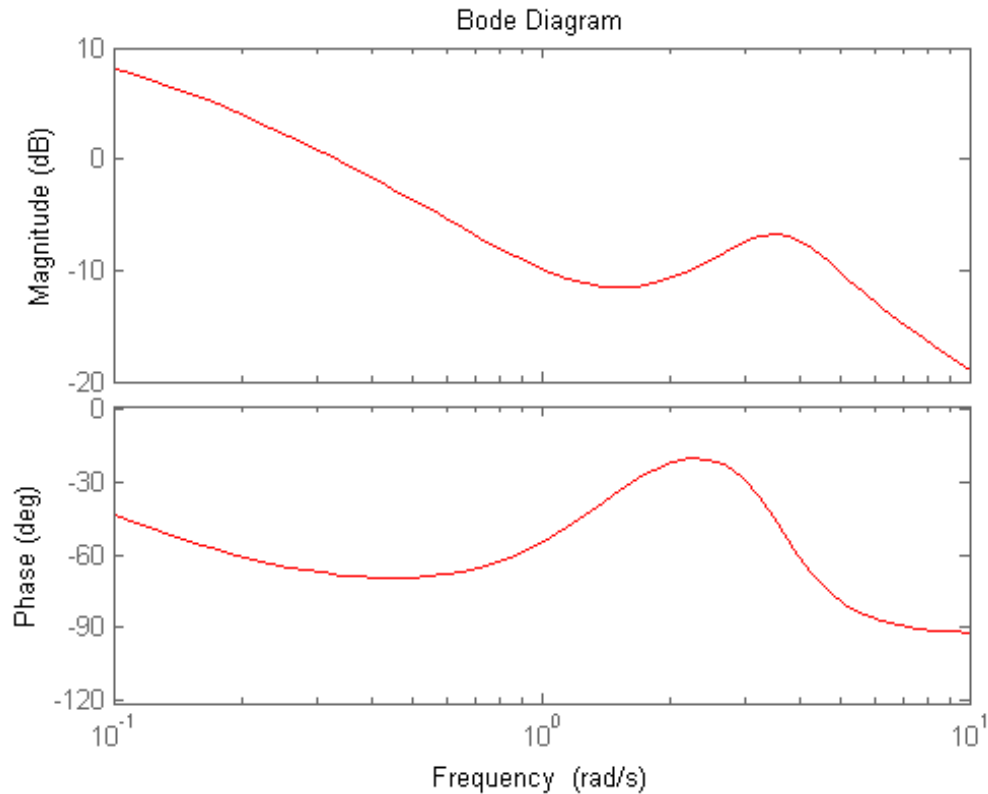

You can try to fit the frequency response *D*-scale data `sysg` with a first-order system, `b1`. Similarly, you can fit the *D*-scale data with a third-order system, `b3`.

```
b1 = fitfrd(sysg,1);  
b3 = fitfrd(sysg,3);
```


Compare the original *D*-scale data `sysg` with the frequency responses of the first and third-order models calculated by `fitfrd`.



```

b1g = frd(b1,omeg);
b3g = frd(b3,omeg);
bode(sysg,'r-',b1g,'k:',b3g,'b-.')
legend('5th order system','1st order fit','3rd order fit','Location',

```

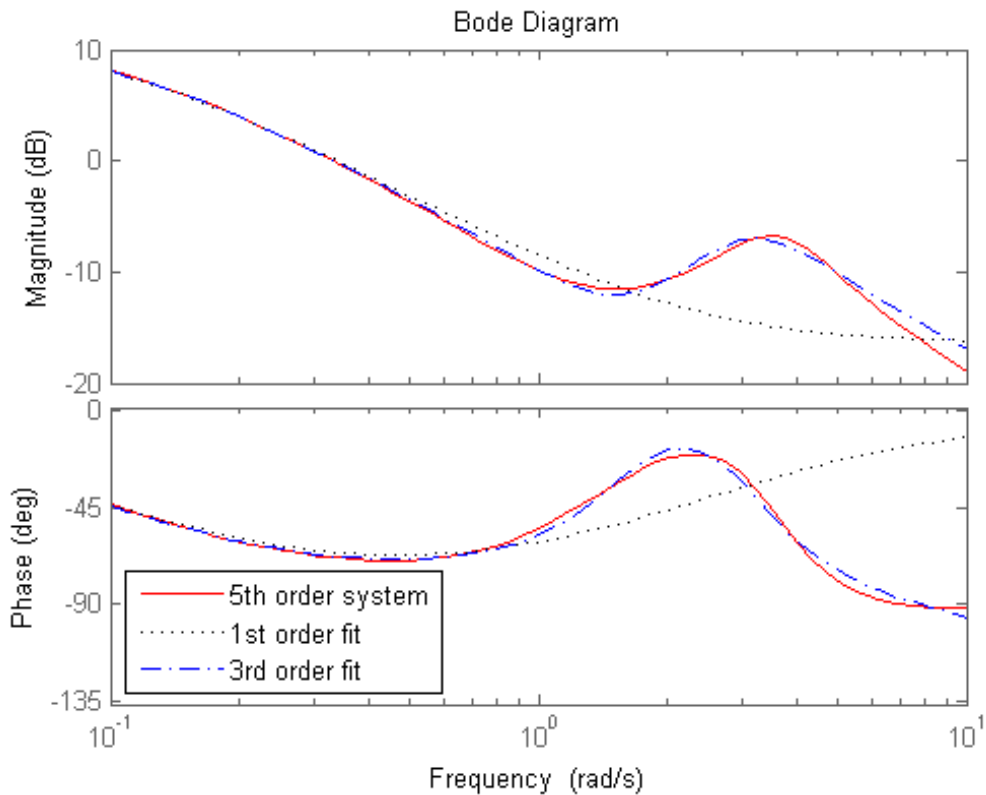

### Limitations

Numerical conditioning problems arise if the state order of the fit  $N$  is selected to be higher than required by the dynamics of  $A$ .

### See Also

fitmagfrd

# fitmagfrd

---

## Purpose

Fit frequency response magnitude data with minimum-phase state-space model using log-Chebyshev magnitude design

## Syntax

```
B = fitmagfrd(A,N)
B = fitmagfrd(A,N,RD)
B = fitmagfrd(A,N,RD,WT)
B = fitmagfrd(A,N,RD,WT,C)
```

## Description

`B = fitmagfrd(A,N)` is a stable, minimum-phase `ss` object, with state-dimension `N`, whose frequency response magnitude closely matches the magnitude data in `A`. `A` is a 1-by-1 `frd` object, and `N` is a nonnegative integer.

`B = fitmagfrd(A,N,RD)` forces the relative degree of `B` to be `RD`. `RD` must be a nonnegative integer whose default value is 0. You can specify the default value for `RD` by setting `RD` to an empty matrix.

`B = fitmagfrd(A,N,RD,WT)` uses the magnitude of `WT` to weight the optimization fit criteria. `WT` can be a `double`, `ss` or `frd`. If `WT` is a scalar, then it is used to weight all entries of the error criteria (`A-B`). If `WT` is a vector, it must be the same size as `A`, and each individual entry of `WT` acts as a weighting function on the corresponding entry of (`A-B`). The default value for `WT` is 1, and you can specify it by setting `WT` to an empty matrix.

`B = fitmagfrd(A,N,RD,WT,C)` enforces additional magnitude constraints on `B`, specified by the values of `C.LowerBound` and `C.UpperBound`. These can be empty, `double` or `frd` (with `C.Frequency` equal to `A.Frequency`). If `C.LowerBound` is non-empty, then the magnitude of `B` is constrained to lie above `C.LowerBound`. No lower bound is enforced at frequencies where `C.LowerBound` is equal to `-inf`. Similarly, the `UpperBound` field can be used to specify an upper bound on the magnitude of `B`. If `C` is a `double` or `frd` (with `C.Frequency` equal to `A.Frequency`), then the upper and lower bound constraints on `B` are taken directly from `A` as:

- if  $C(w) == -1$ , then enforce  $\text{abs}(B(w)) \leq \text{abs}(A(w))$
- if  $C(w) == 1$ , then enforce  $\text{abs}(B(w)) \geq \text{abs}(A(w))$
- if  $C(w) == 0$ , then no additional constraint

where  $w$  denotes the frequency.

## Examples


### Fit Frequency Response Data With Stable Minimum-Phase State-Space Model

Create frequency response magnitude data from a fifth-order system.

```
sys = tf([1 2 2],[1 2.5 1.5])*tf(1,[1 0.1]);  
sys = sys*tf([1 3.75 3.5],[1 2.5 13]);  
omega = logspace(-1,1);  
sysg = abs(frd(sys,omega));  
bodemag(sysg, 'r');
```


## fitmagfrd

---

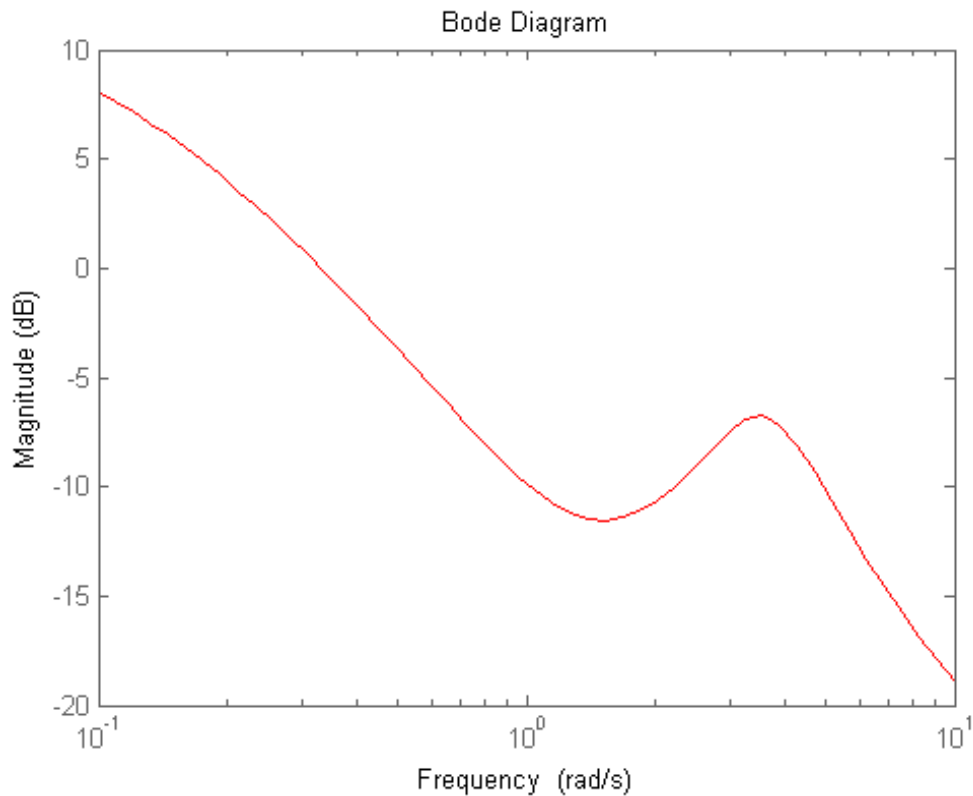

Fit the magnitude data with a minimum-phase, stable third-order system.

```
ord = 3;  
b1 = fitmagfrd(sysg,ord);  
b1g = frd(b1,omega);  
bodemag(sysg,'r',b1g,'k:');  
legend('Data','3rd order fit');
```

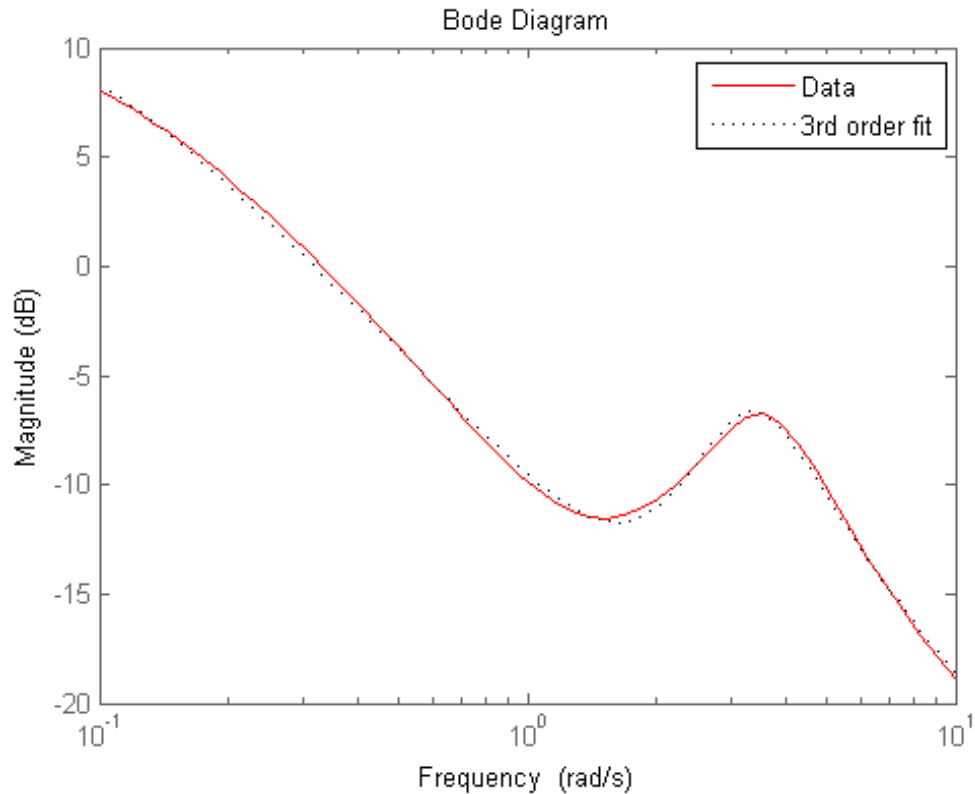

Fit the magnitude data with a third-order system constrained to lie below and above the given data.


```

C2.UpperBound = sysg;
C2.LowerBound = [];
b2 = fitmagfrd(sysg,ord,[],[],C2);
b2g = frd(b2,omega);
C3.UpperBound = [];
C3.LowerBound =sysg;
b3 = fitmagfrd(sysg,ord,[],[],C3);

```

# fitmagfrd


```
b3g = frd(b3,omega);  
bodemag(sysg,'r',b1g,'k:',b2g,'b-.',b3g,'m--')  
legend('Data','3rd order fit','3rd order fit, below data',...  
      '3rd order fit, above data')
```

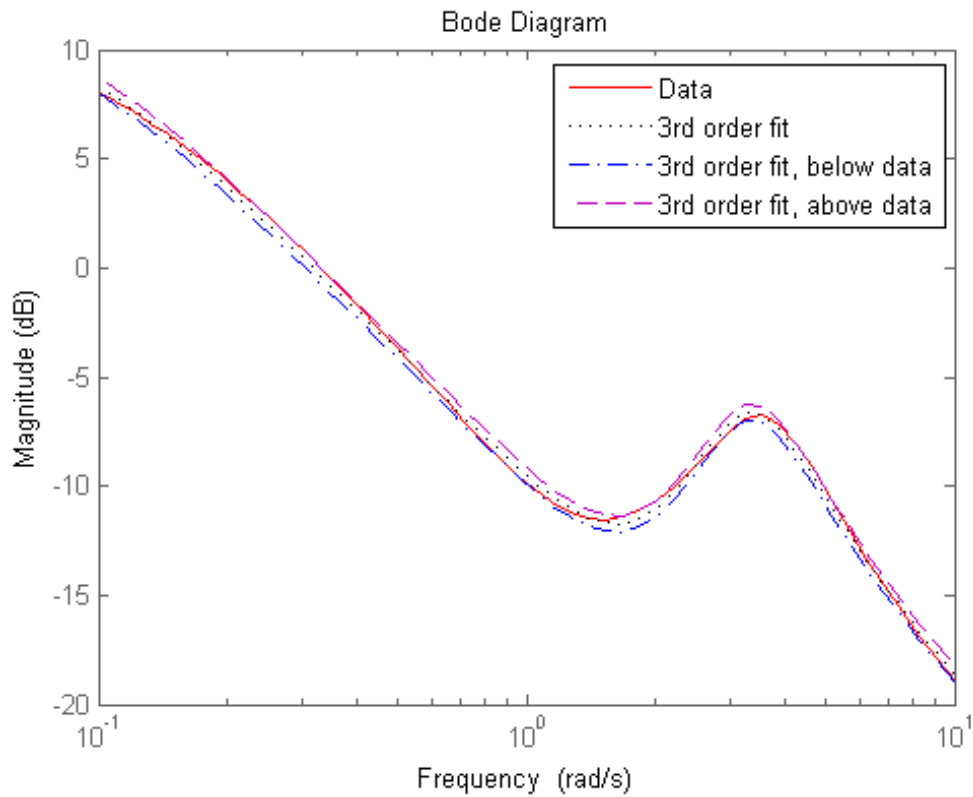

Fit the magnitude data with a second-order system constrained to lie below and above the given data.

```
ord = 2;  
C2.UpperBound = sysg;
```

```
C2.LowerBound = [];  
b2 = fitmagfrd(sysg,ord,[],sysg,C2);  
b2g = frd(b2,omega);  
C3.UpperBound = [];  
C3.LowerBound = sysg;  
b3 = fitmagfrd(sysg,ord,[],sysg,C3);  
b3g = frd(b3,omega);  
bgp = fitfrd(genphase(sysg),ord);  
bgpg = frd(bgp,omega);  
bodemag(sysg,'r',b1g,'k:',b2g,'b-.',b3g,'m--',bgpg,'r--')  
legend('Data','3rd order fit','2d order fit, below data',...  
      '2nd order fit, above data','bgpg')
```

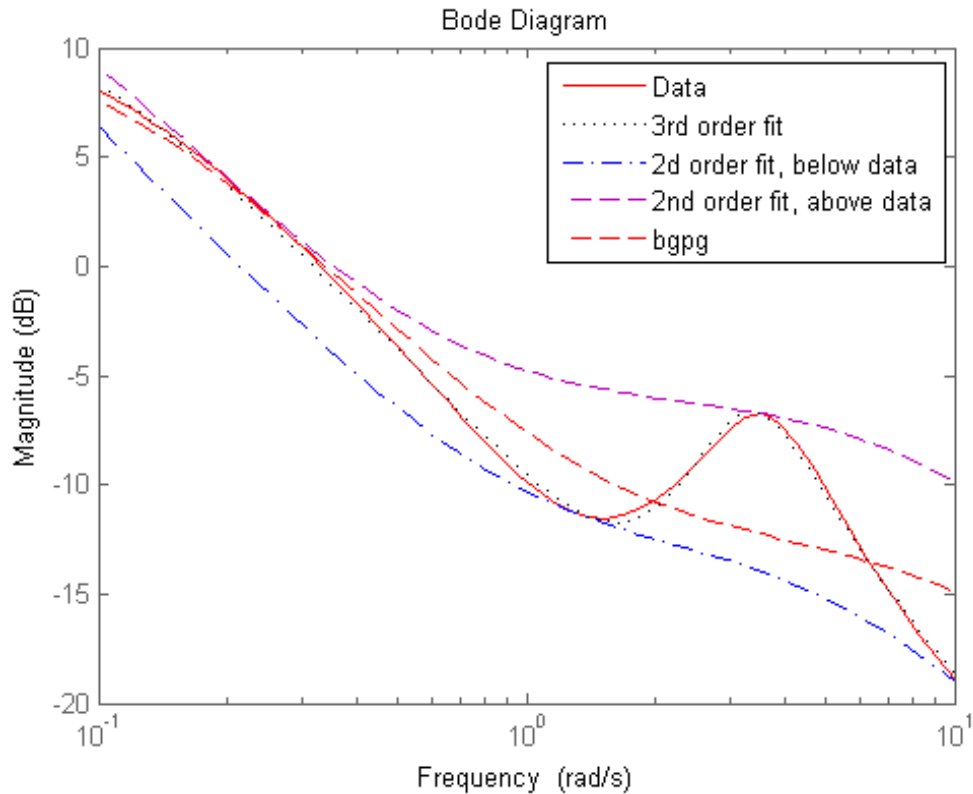

## Algorithms

fitmagfrd uses a version of log-Chebyshev magnitude design, solving

$$\min f \quad \text{subject to (at every frequency point in A):}$$

$$|d|^2 / (1 + f/WT) < |n|^2 / A^2 < |d|^2 * (1 + f/WT)$$

plus additional constraints imposed with C. n, d denote the numerator and denominator, respectively, and B = n/d. n and d have orders (N-RD) and N, respectively. The problem is solved using linear programming for fixed f and bisection to minimize f. An alternate approximate



method, which cannot enforce the constraints defined by  $C$ , is  $B = \text{fitfrd}(\text{genphase}(A), N, RD, WT)$ .

**Limitations**

This input `frd` object must be either a scalar 1-by-1 object or, a row, or column vector.

**References**

Oppenheim, A.V., and R.W. Schaffer, *Digital Signal Processing*, Prentice Hall, New Jersey, 1975, p. 513.

Boyd, S. and Vandenberghe, L., *Convex Optimization*, Cambridge University Press, 2004.

**See Also**

`fitfrd`

**Purpose** Create tunable gain surface for gain scheduling

**Syntax** `K = gainsurf(name,K0init,F1,...,FM)`

**Description** In gain-scheduled controllers, each controller gain,  $K(\sigma)$ , is a function of the scheduling variables,  $\sigma$ . For tuning purposes, it is convenient to parameterize  $K(\sigma)$  as a smooth *gain surface* of the form:

$$K(\sigma) = K_0 + K_1 F_1(\sigma) + \dots + K_M F_M(\sigma).$$

$F_1(\sigma), \dots, F_M(\sigma)$  are user-selected basis functions.  $K_0, \dots, K_M$  are the coefficients to be tuned. You can use terms in a generic polynomial expansion as basis functions. Or, when you have a priori knowledge of the expected shape of  $K(\sigma)$ , you can use more specific functions. You can then use `systemtune`, to tune the coefficients  $K_0, \dots, K_M$ , subject to your design requirements.

`K = gainsurf(name,K0init,F1,...,FM)` constructs a tunable model of the gain surface  $K(\sigma) = K_0 + K_1 F_1(\sigma) + \dots + K_M F_M(\sigma)$ , sampled at a discrete set of  $\sigma$  values (the *design points*). The arrays `F1, ..., FM` contain the values of the basis functions  $F_1(\sigma), \dots, F_M(\sigma)$  at those design points. The gain surface model, `K`, depends on the tunable coefficients  $K_0, \dots, K_M$ . You can combine `K` with other static or dynamic elements to construct a closed-loop model of your gain-scheduled control system. Then, use `systemtune` to tune  $K_0, \dots, K_M$  so that the closed-loop system meets your design requirements at the selected design points.

## Input Arguments

**name - Identifying label for the tunable gain**

string


Identifying label for the tunable gain surface, specified as a string. The tunable coefficients of the gain surface are assigned names based on this identifying label. For example, suppose you create a gain surface using the name `Kp`. The tunable coefficients are `realp` blocks in the resulting `genmat`. These blocks have names `Kp_0`, `Kp_1`, ..., `Kp_M`.

Additionally, you can use this label to refer to the gain surface. For example, you can extract tuned coefficient values from a control system model,  $M$ , that depends on the gain surface using  $[K_0, K_1, \dots, K_M] = \text{gainsurfdata}(M, 'Kname')$ .

### **K0init** - Initial value of $K_0$

scalar | array


Initial value of the tunable coefficient  $K_0$ , specified as a scalar or an array. The dimensions of  $K_0\text{init}$  determine the I/O dimensions of the gain surface. For example, if the gain surface represents a two-input, two-output gain, you can set  $K_0\text{init} = \text{zeros}(2)$ . Doing so automatically sets the I/O dimensions of the other terms in the gain surface.

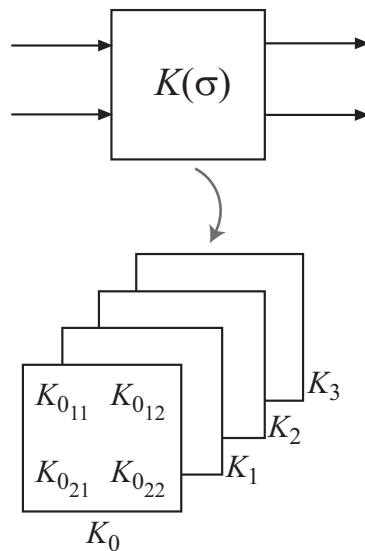

### **F1,...,FM** - Values of the basis functions at sample values of scheduling variables

numeric arrays

Function values describing the dependence of the gain surface on the scheduling variables, specified as numeric arrays. Each  $F_j(\sigma)$  in the expansion of the gain surface is a scalar-valued function. The corresponding input argument,  $F_j$ , is a numeric array containing the values of  $F_j(\sigma)$  at the corresponding scheduling variable values. For instance, in the following illustration,  $F_j(\sigma)$  is a function of two scheduling variables. The corresponding matrix  $FJ$  contains the values of  $F_j(\sigma)$  sampled over a 2-D grid of  $(\sigma_1, \sigma_2)$  values.

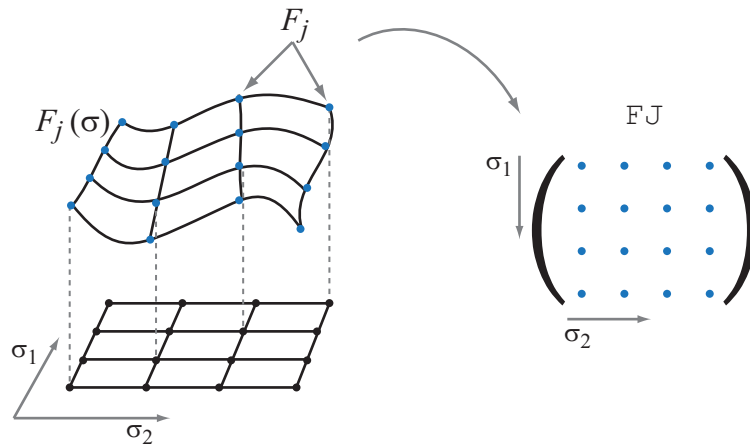

To construct the arguments  $F_1, \dots, F_M$  when your sampling grid is regular, evaluate each  $F_j(\sigma)$  over that grid. For example, consider a gain that depends on two scheduling variables,  $\alpha$  and  $\beta$ :

$$K(\alpha, \beta) = K_0 + K_1\alpha\beta + K_2\alpha + K_3\beta.$$

For this gain,  $F_1 = \alpha\beta$ ,  $F_2 = \alpha$ , and  $F_3 = \beta$ . To create the input argument  $F_1$ , you first create a grid of  $\alpha$  and  $\beta$  values that spans the operating range of these variables. Then, you compute the values of  $F_1$  over that grid.

```
[alpha,beta] = ndgrid(0:1:10,50:5:100);
F1 = alpha.*beta;
```

You can improve performance of the tuning algorithm by specifying the function values in terms of normalized scheduling variables that fall in the range  $[-1,1]$ . To do this, subtract the mean value from each variable grid and divide by the variable's half-range. For example:

```
alphaN = (alpha-5)/5;
betaN = (beta-75)/25;
F1 = alphaN.*betaN;
```

In this example the values of  $\alpha$  and  $\beta$  are regularly spaced. However, regular grid spacing is not required. Suppose your sampling values are arbitrary  $(\alpha, \beta)$  pairs. In this case,  $\alpha$  and  $\beta$  are specified as vectors, where  $(\alpha(i), \beta(i))$  represents one sample point. Each  $F_j$  is also a vector:

$$F_j = [F_j(\alpha_1, \beta_1), F_j(\alpha_2, \beta_2), \dots, F_j(\alpha_N, \beta_N)].$$

For an example, see “Gain Surface Over Nonregular Grid” on page 2-106.

## Output Arguments

### K - Tunable gain surface

generalized matrix

Tunable gain surface, returned as an array of generalized matrices (genmat).

The dimensions of each generalized matrix in the array (the I/O dimensions of the gain surface) are determined by the dimensions of `K0init`. The dimensions of the array itself are determined by the sampling grid used to specify the basis functions. Thus, each entry in the array represents the gain at the corresponding scheduling variable value.

The gain surface depends on the tunable coefficients  $K_0, \dots, K_M$ . Each coefficient is modeled as a `realp` block of the same size as `K`. For instance, if the gain surface models a scalar gain, then each coefficient is a scalar `realp` block. If the gain surface models a 2-by-3 gain matrix, then each coefficient is a 2-by-3 `realp` block.

## Examples

### Tunable Gain With One Independent Variable

Create a scalar gain  $K$  that varies as a quadratic function of a single scheduling variable,  $t$ :

$$K(t) = K_0 + K_1t + K_2t^2.$$

This gain surface can represent a gain that varies with time. The coefficients  $K_0$ ,  $K_1$ , and  $K_2$  are the tunable parameters of this time-varying gain.

To represent the tunable gain surface  $K(t)$  in MATLAB, first choose a vector of  $t$  values in the range of interest for your problem. Then, obtain the values of each basis function in the expansion of  $K(t)$ , at those  $t$  values.

```
t = 0:5:40;  
F1 = t;  
F2 = t.^2;
```

Create a tunable model of the gain surface  $K(t)$ , sampled at the  $t$  values.

```
K = gainsurf('K',1,F1,F2)
```

```
K =
```

```
1x9 array of generalized matrices with 1 rows, 1 columns, and the following properties:  
K_0: Scalar parameter, 1 occurrences.  
K_1: Scalar parameter, 1 occurrences.  
K_2: Scalar parameter, 1 occurrences.
```

Type "double(K)" to see the current value, "get(K)" to see all properties


$K$  is an array of generalized matrices. Each element in  $K$  describes  $K(t)$  for a particular value of  $t$ , and depends on the tunable coefficients  $K_0$ ,  $K_1$ , and  $K_2$ . For example, the first element,  $K(:, :, 1)$ , is  $K(0) = K_0 + K_1*0 + K_2*0^2 = K_0$ . The second element,  $K(:, :, 2)$ , is  $K(5) = K_0 + K_1*5 + K_2*5^2 = K_0$ , and so on.

Associate the independent variable values with the corresponding values of `K`.

```
K.SamplingGrid = struct('time',t);
```

The `SamplingGrid` property keeps track of the scheduling variable values associated with each entry in `K`. This association is convenient for tracing results back to independent variable values. For instance, you can use `view(K)` to inspect the tuned values of the gain surface after tuning. When you do so, `view` takes the axis range and labels from the entries in `SamplingGrid`. For this example, instead of tuning, manually set the values of the tunable blocks to non-zero values. View the resulting gain as a function of time.

```
values = struct('K_0',1,'K_1',-1,'K_2',0.1);  
view(setBlockValue(K,values))
```

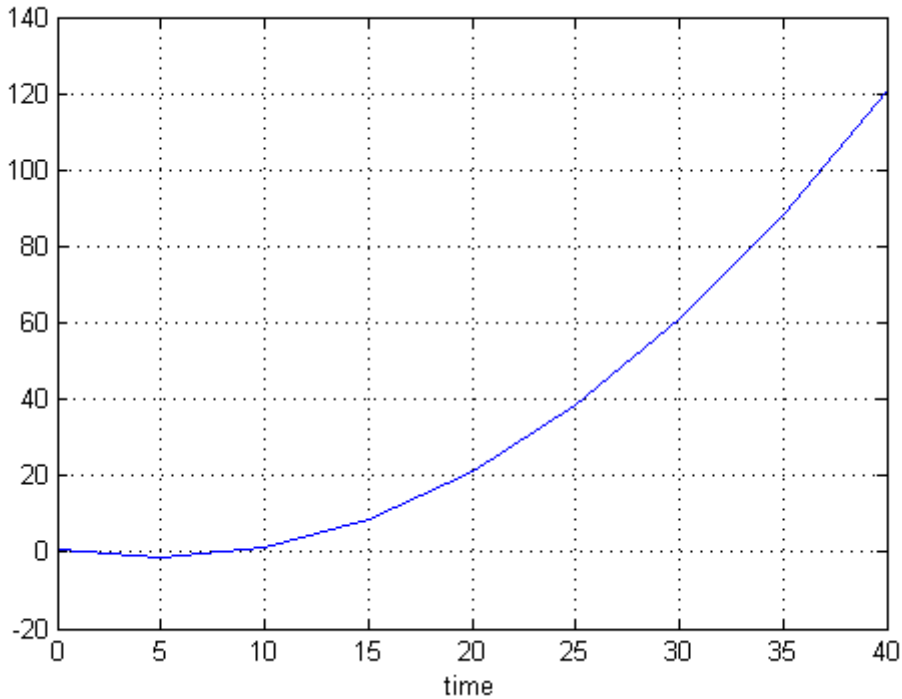

You can use  $K$  as a tunable gain to design a gain-scheduled controller. Use `systemtune` to tune the coefficients  $K_0$ ,  $K_1$ , and  $K_2$  at the sample times  $t = 0, 5, \dots, 40$ .

### Tunable Gain With Two Independent Variables

This example shows how to model a scalar gain  $K$  with a bilinear dependence on two scheduling variables,  $\alpha$  and  $V$ , as follows:

$$K(\alpha_N, V_N) = K_0 + K_1\alpha_N + K_2V_N + K_3\alpha_NV_N.$$



For this example,  $\alpha$  is an angle of incidence that ranges from 0 to 15 degrees, and  $V$  is a speed that ranges from 300 to 600 m/s. The coefficients  $K_0, \dots, K_3$  are the tunable parameters of this variable gain.

Create a grid of design points,  $(\alpha, V)$ , that are linearly spaced in  $\alpha$  and  $V$ . These design points are where you will tune the gain surface coefficients.

```
[alpha,V] = ndgrid(0:5:15,300:100:600);
```

These arrays, `alpha` and `V`, represent the independent variation of the two scheduling variables, each across its full range.

When you tune the gain surface coefficients with `systemtune`, you might obtain better solver performance by normalizing the scheduling variables to fall within the interval  $[-1,1]$ . Scale the  $\alpha$  and  $V$  grid to fall within this range.

```
alphaN = alpha/15;
VN = (V-450)/150;
```

Create the tunable gain surface sampled at the grid of  $(\alpha_N, V_N)$  values:

$$K(\alpha_N, V_N) = K_0 + K_1\alpha_N + K_2V_N + K_3\alpha_NV_N.$$

In this expansion, the basis functions are:

$$\begin{aligned} F_1(\alpha_N, V_N) &= \alpha_N \\ F_2(\alpha_N, V_N) &= V_N \\ F_3(\alpha_N, V_N) &= \alpha_NV_N. \end{aligned}$$

Specify the values of the basis functions over the  $(\alpha_N, V_N)$ .

```
F1 = alphaN;
F2 = VN;
F3 = alphaN.*VN;
```

```
K = gainsurf('K',1,F1,F2,F3)
```

```
K =
```

```
4x4 array of generalized matrices with 1 rows, 1 columns, and the following properties:  
K_0: Scalar parameter, 1 occurrences.  
K_1: Scalar parameter, 1 occurrences.  
K_2: Scalar parameter, 1 occurrences.  
K_3: Scalar parameter, 1 occurrences.
```

```
Type "double(K)" to see the current value, "get(K)" to see all properties.
```


K is an array of generalized matrices. Each element in K corresponds to  $K(a_N, V_N)$  for a particular  $(a_N, V_N)$  pair, and depends on the tunable coefficients  $K_0, \dots, K_3$ .

Associate the independent variable values with the corresponding values of K.

```
K.SamplingGrid = struct('alpha',alpha,'V',V);
```

The `SamplingGrid` property keeps track of the scheduling variable values associated with each entry in K. This association is convenient for tracing results back to independent variable values. For instance, you can use `view(K)` to inspect the tuned values of the gain surface after tuning. When you do so, `view` takes the axis range and labels from the entries in `SamplingGrid`. For this example, instead of tuning, manually set the values of the tunable blocks to non-zero values. View the resulting gain surface as a function of the scheduling variables.

```
values = struct('K_0',1,'K_1',-1,'K_2',0.1,'K_3',-0.2);  
Ktuned = setBlockValue(K,values);  
view(Ktuned)
```

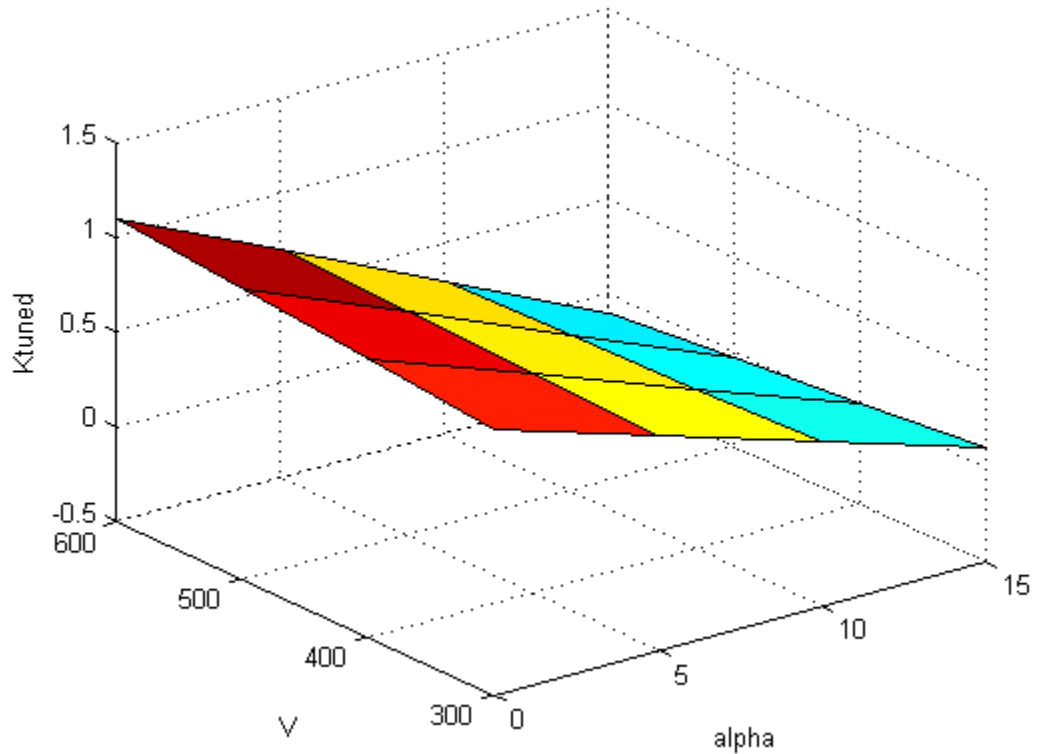

The variable names and values that you specified in the `SamplingGrid` property are used to scale and label the axes.

You can use  $K$  as a tunable gain to build a control system with gain-scheduled tunable components. For example, use  $K$  to create a gain-scheduled low-pass filter.

```
F = tf(K,[1 K]);
```

You can use gain surfaces as arguments to model creation commands like `tf` the same way you would use numeric arguments. The resulting filter is a generalized state-space (`genss`) model array that depends on the four coefficients of the gain surface.

Use model interconnection commands (such as `connect` and `feedback`) to combine `F` with an array of plant models sampled at the same values of  $\alpha$  and  $V$ . You can then use `systemtune` to tune the gain-scheduled controller to meet your design requirements. Because you normalized the scheduling variables to model the tunable gain, you must adjust the coefficient values in the implementation of your tuned controller.

## Gain Surface Over Nonregular Grid

Create a gain surface sampled at scheduling variable values that do not form a regular grid in the operating domain. The gain surface varies as a bilinear function of variables  $\alpha$  and  $\beta$ :

$$K(\alpha, \beta) = K_0 + K_1\alpha + K_2\beta + K_3\alpha\beta.$$


The values of interest of the scheduling variables are the following  $(\alpha, \beta)$  pairs.

$$(\alpha, \beta) = \begin{cases} (-1.0, 0.0) \\ (-1.5, 1.0) \\ (-2.5, 0.5) \\ (-4.0, 0.0) \end{cases}.$$

The basis functions of the expansion of  $K$  are:

- $F_1 = \alpha$
- $F_2 = \beta$
- $F_3 = \alpha\beta$

Instead of a regular grid of  $(\alpha, \beta)$  values, here the gain surface is sampled at irregularly spaced points on  $(\alpha, \beta)$ -space.

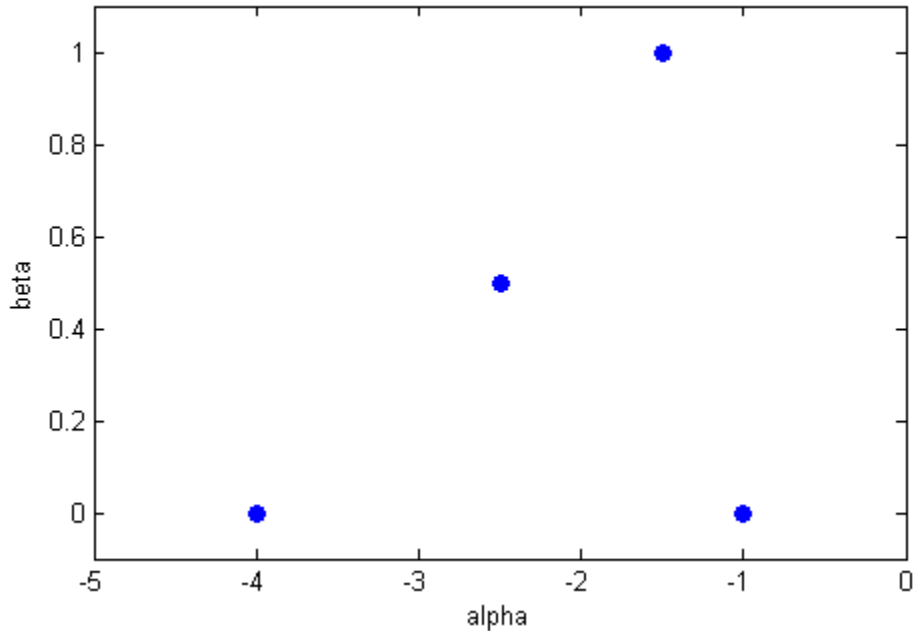

Specify the  $(\alpha, \beta)$  sample values as vectors. Evaluate the basis functions at these sample points.

```
alpha = [-1.0; -1.5; -2.5; -4.0];  
beta = [0.0; 1.0; 0.5; 0.0];  
F1 = alpha;  
F2 = beta;  
F3 = alpha.*beta;
```

Create the tunable model of the gain surface using these sampled function values.

```
K = gainsurf('K', 1, F1, F2, F3)
```

```
K =
```

```
4x1 array of generalized matrices with 1 rows, 1 columns, and the following properties:  
K_0: Scalar parameter, 1 occurrences.  
K_1: Scalar parameter, 1 occurrences.  
K_2: Scalar parameter, 1 occurrences.  
K_3: Scalar parameter, 1 occurrences.
```

Type "double(K)" to see the current value, "get(K)" to see all properties

The gain surface is represented by a 4-by-1 array of generalized matrices. Because  $K$  is a scalar gain, each element in the array is 1-by-1. Each element in the array represents  $K(a,\beta)$  for the corresponding  $(a,\beta)$  sample. Each of these elements depends on the tunable parameters  $K_0, \dots, K_3$ .

Use the `SamplingGrid` property to associate the  $a$  and  $\beta$  values with the corresponding entries in  $K$ .

```
SG = struct('alpha',alpha,'beta',beta);  
K.SamplingGrid = SG;
```

## See Also

## Functions

`genmatndgridgainsurfdataview` `(genmat)systeme`

## Related Examples

- “Gain-Scheduled PID Controller”
- “Tuning of Gain-Scheduled Three-Loop Autopilot”
- Gain Scheduled Control Of a Chemical Reactor

## Concepts

- “Gain-Scheduled Control Systems”
- “Parametric Gain Surfaces”

**Purpose**

Get values of gain surface coefficients

**Syntax**

[K0,K1,...,KM] = gainsurfddata(K)  
 [K0,K1,...,KM] = gainsurfddata(M,Kname)

**Description**

[K0,K1,...,KM] = gainsurfddata(K) returns the current values of the coefficients of a gain surface, K. K is of the form:

$$K(\sigma) = K_0 + K_1 F_1(\sigma) + \dots + K_M F_M(\sigma).$$

Typically, you create K using `gainsurf`.

[K0,K1,...,KM] = gainsurfddata(M,Kname) returns the coefficients of a gain surface having name `Kname` that is incorporated into a control system model, M. You can use this syntax to extract tuned coefficient values after using `systune` to tune M.

**Input Arguments****K - Gain surface**

gain surface (genmat array created with `gainsurf`)

Gain surface from which to extract coefficients, specified as a generalized matrix (genmat) array created using `gainsurf`.

**M - Control system model**

generalized state-space model (genss) | genss model array

Control system model from which to extract tunable coefficients, specified as a genss model or array of genss models. M must depend on a gain surface that has the name `Kname`. Typically, you create that gain surface using `gainsurf`, incorporate it into M, and tune the coefficients with `systune`. Then you can use `gainsurfddata(M,Kname)` to extract the tuned values of the coefficients associated with that gain surface.

**Kname - Name of gain surface**

string

Name of a gain surface that the control system model  $M$  depends on, specified as a string. The value of this string is the `Name` property of a `genmat` that represents a gain surface. For example, suppose you create a tunable gain surface,  $Kc$ , and combine it with a numeric LTI model array, `sysarr`:

```
K = gainsurf('Kc',1,F1,F2,F3);  
M = feedback(sysarr*K,1);
```

$M$  is an array of tunable control system models that depend on the gain surface. The following code extracts the values of the coefficients associated with this gain surface.

```
[Kc0,Kc1,Kc2,Kc3] = gainsurfdata(M,'Kc');
```

## Output Arguments

### $K_0, K_1, \dots, K_M$ - Current values of tunable coefficients

numeric scalar | numeric array

Current values of the tunable coefficients of the gain surface, returned as numeric values. The gain surface  $K$  or  $K_{Name}$  has the form:

$$K(\sigma) = K_0 + K_1 F_1(\sigma) + \dots + K_M F_M(\sigma).$$

- If the gain surface represents a scalar gain, then the current values are scalars.
- If the gain surface represents a MIMO gain, then the current values are arrays of the same dimensions as the I/O dimensions of the gain surface.

## Examples

### Get Current Values of Gain Surface Coefficients

Extract the current coefficient values from a tunable gain surface  $K = K_0 + K_1 a + K_2 a^2$ .

For this example, create a tunable gain surface and extract the initial values of its coefficients. Generally, `gainsurfdata` is useful for extracting tuned coefficient values after control system tuning with `systeme`.



Create the tunable gain surface.

```
alpha = 0:10:100;  
F1 = alpha;  
F2 = alpha.^2;  
K = gainsurf('K',1,F1,F2)
```

K =

```
1x11 array of generalized matrices with 1 rows, 1 columns, and the t  
K_0: Scalar parameter, 1 occurrences.  
K_1: Scalar parameter, 1 occurrences.  
K_2: Scalar parameter, 1 occurrences.
```

Type "double(K)" to see the current value, "get(K)" to see all properties.

K is a generalized matrix (genmat) with tunable coefficients K\_0, K\_1, K\_2.

Extract the current values of the tunable coefficients.

```
[K0,K1,K2] = gainsurfddata(K)
```

K0 =

```
1
```

K1 =

```
0
```

K2 =

```
0
```

You specify the initial value of  $K_0$  with the `K0init` input argument to `gainsurf`. The output of `gainsurfddata` shows that `gainsurf` automatically assigns initial values of 0 to the remaining coefficients.

## Get Coefficient Values from Control System Model

Extract current coefficient values from a generalized model of a control system that depends on a tunable gain surface.

For this example, create a control system model and extract the initial values of its coefficients. Generally, `gainsurfddata` is useful for extracting tuned coefficient values after control system tuning with `systune`.

Create an array of plant models in which each plant is sampled at a different value of a scheduling parameter,  $\alpha$ .

```
alpha = (0:10:100)';
G = zpk(zeros(1,1,11));
for ii = 1:11
    G(:,:,ii) = zpk([],-1+0.01*alpha(ii),1);
end
```

Create a tunable PI controller with gains that depend the same scheduling parameter.

```
F1 = alpha;
F2 = alpha.^2;
Kp = gainsurf('Kp',1,F1,F2);
Ki = gainsurf('Ki',0.1,F1,F2);
C = pid(Kp,Ki);
```

Combine the plant model with the tunable controller to build a closed-loop control system model array.

```
M = feedback(G*C,1)
```

```
M =
```

```
11x1 array of generalized continuous-time state-space models.
```

```
Each model has 1 outputs, 1 inputs, 2 states, and the following blo  
Ki_0: Scalar parameter, 1 occurrences.  
Ki_1: Scalar parameter, 1 occurrences.  
Ki_2: Scalar parameter, 1 occurrences.  
Kp_0: Scalar parameter, 1 occurrences.  
Kp_1: Scalar parameter, 1 occurrences.  
Kp_2: Scalar parameter, 1 occurrences.
```

Type "ss(M)" to see the current value, "get(M)" to see all properties.

This array of tunable closed-loop models, M, depends on the coefficients that parametrize the PI gains in terms of the scheduling variable  $\alpha$ .

Extract the initial values of the tunable coefficients.

```
[Kp0,Kp1,Kp2] = gainsurfddata(M,'Kp');  
[Ki0,Ki1,Ki2] = gainsurfddata(M,'Ki');
```

M depends on the gain surfaces that are assigned the names Kp and Ki. Therefore, gainsurfddata finds and returns the initial values of the coefficients associated with those gain surfaces.

Similarly, use gainsurfddata to extract the tuned values of the coefficients after using systune to tune M against a set of design requirements.

## See Also

## Functions

gainsurfdgenmatgenssystune

## Related Examples

- “Tuning of Gain-Scheduled Three-Loop Autopilot”

## Concepts

- “Gain-Scheduled Control Systems”
- “Parametric Gain Surfaces”

# gapmetric

---

**Purpose** Compute upper bounds on Vinnicombe gap and nugap distances between two systems

**Syntax**  
`[gap,nugap] = gapmetric(p0,p1)`  
`[gap,nugap] = gapmetric(p0,p1,tol)`

**Description** `[gap,nugap] = gapmetric(p0,p1)` calculates upper bounds on the gap and nugap (Vinnicombe) metric between systems `p0` and `p1`. The gap and nugap values lie between 0 and 1. A small value (relative to 1) implies that any controller that stabilizes `p0` will likely stabilize `p1`, and, moreover, that the closed-loop gains of the two closed-loop systems will be similar. A gap or nugap of 0 implies that `p0` equals `p1`, and a value of 1 implies that the plants are far apart. The input and output dimensions of `p0` and `p1` must be the same.

`[gap,nugap] = gapmetric(p0,p1,tol)` specifies a relative accuracy for calculating the gap metric and nugap metric. The default value for `tol` is 0.001. The computed answers are guaranteed to satisfy

$\text{gap-tol} < \text{gapexact}(p0,p1) \leq \text{gap}$

## Examples **Compute gap and nugap Metrics for Stable and Unstable Plant Models**

Create two plant models. One plant is unstable, first-order, with transfer function  $1/(s - 0.001)$ . The other plant is stable and first-order with transfer function  $1/(s + 0.001)$ .

```
p1 = tf(1,[1 -0.001]);  
p2 = tf(1,[1 0.001]);
```

Despite the fact that one plant is unstable and the other is stable, these plants are close in the gap and nugap metrics.

```
[g,ng] = gapmetric(p1,p2)
```

```
g =
```


0.0029

ng =

0.0020

Intuitively, this result is obvious, because, for instance, the feedback controller  $K = 1$  stabilizes both plants and renders the closed-loop systems nearly identical.

```
K = 1;
H1 = loopsens(p1,K);
H2 = loopsens(p2,K);
subplot(2,2,1); bode(H1.Si, '-',H2.Si, '--');
subplot(2,2,2); bode(H1.Ti, '-',H2.Ti, '--');
subplot(2,2,3); bode(H1.PSi, '-',H2.PSi, '--');
subplot(2,2,4); bode(H1.CSo, '-',H2.CSo, '--');
```

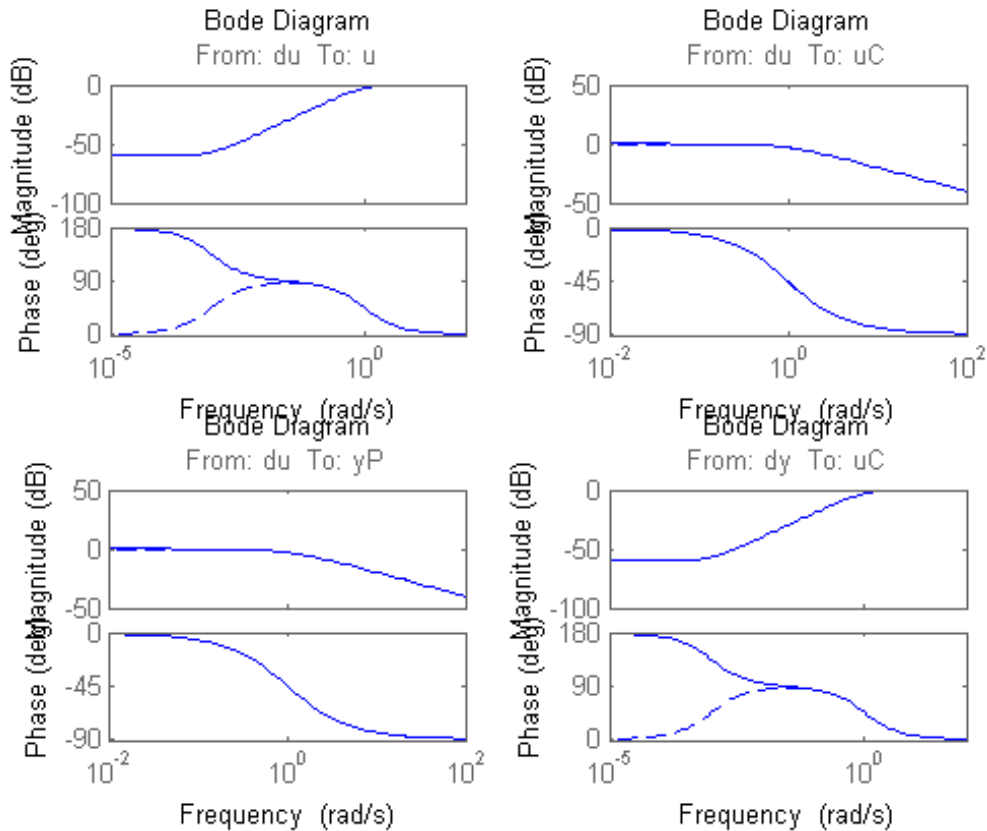

Next, consider two stable plant models that differ by a first-order system. One plant is the transfer function  $50/(s+50)$  and the other plant is the transfer function  $50/(s+50) * 8/(s+8)$ .

```
p3 = tf([50],[1 50]);
p4 = tf([8],[1 8])*p3;
```

Although the two systems have similar high-frequency dynamics and the same unity gain at low frequency, the plants are modestly far apart in the gap and nugap metrics.

```
[g,ng] = gapmetric(p3,p4)
```

```
g =
```

```
0.6156
```

```
ng =
```

```
0.6147
```

## Algorithms

gap and nugap compute the gap and v gap metrics between two LTI objects. Both quantities give a numerical value  $\delta(p_0, p_1)$  between 0 and 1 for the distance between a nominal system  $p_0$  ( $G_0$ ) and a perturbed system  $p_1$  ( $G_1$ ). The gap metric was introduced into the control literature by Zames and El-Sakkary 1980, and exploited by Georgiou and Smith 1990. The v gap metric was derived by Vinnicombe 1993. For both of these metrics the following robust performance result holds from Qui and Davidson 1992, and Vinnicombe 1993

$$\arcsin b(G_1, K_1) \geq \arcsin b(G_0, K_0) - \arcsin \delta(G_0, G_1) - \arcsin \delta(K_0, K_1)$$

where

$$b(G, K) = \left\| \begin{bmatrix} I \\ K \end{bmatrix} (I - GK)^{-1} \begin{bmatrix} G & I \end{bmatrix} \right\|_{\infty}^{-1}$$

The interpretation of this result is that if a nominal plant  $G_0$  is stabilized by controller  $K_0$ , with “stability margin”  $b(G_0, K_0)$ , then the stability margin when  $G_0$  is perturbed to  $G_1$  and  $K_0$  is perturbed to  $K_1$  is degraded by no more than the above formula. Note that  $1/b(G, K)$  is also the signal gain from disturbances on the plant input and output to the input and output of the controller. The v gap is always less than or equal to the gap, so its predictions using the above robustness result are tighter.

To make use of the gap metrics in robust design, weighting functions need to be introduced. In the above robustness result,  $G$  needs to be replaced by  $W_2GW_1$  and  $K$  by  $W_1^{-1}KW_2^{-1}$  (similarly for  $G_0$ ,  $G_1$ ,  $K_0$  and  $K_1$ ). This makes the weighting functions compatible with the weighting structure in the  $H_\infty$  loop shaping control design procedure (see `loopsyn` and `ncfsyn` for more details).

The computation of the gap amounts to solving 2-block  $H_\infty$  problems (Georgiou, Smith 1988). The particular method used here for solving the  $H_\infty$  problems is based on Green et al., 1990. The computation of the `nugap` uses the method of Vinnicombe, 1993.

## References

- Georgiou, T.T., "On the computation of the gap metric," *Systems Control Letters*, Vol. 11, 1988, p. 253-257
- Georgiou, T.T., and M. Smith, "Optimal robustness in the gap metric," *IEEE Transactions on Automatic Control*, Vol. 35, 1990, p. 673-686
- Green, M., K. Glover, D. Limebeer, and J.C. Doyle, "A J-spectral factorization approach to  $H_\infty$  control," *SIAM J. of Control and Opt.*, 28(6), 1990, p. 1350-1371
- Qiu, L., and E.J. Davison, "Feedback stability under simultaneous gap metric uncertainties in plant and controller," *Systems Control Letters*, Vol. 18-1, 1992 p. 9-22
- Vinnicombe, G., "Measuring Robustness of Feedback Systems," PhD Dissertation, Department of Engineering, University of Cambridge, 1993.
- Zames, G., and El-Sakkary, "Unstable systems and feedback: The gap metric," *Proceedings of the Allerton Conference*, October 1980, p. 380-385

## See Also

`loopsyn` | `ncfsyn` | `robuststab` | `wcsens` | `wcmargin`



- Purpose** Fit single-input/single-output magnitude data with real, rational, minimum-phase transfer function
- Syntax** `resp = genphase(d)`
- Description** `genphase` uses the complex-cepstrum algorithm to generate a complex frequency response `resp` whose magnitude is equal to the real, positive response `d`, but whose phase corresponds to a stable, minimum-phase function. The input, `d`, and output, `resp`, are `frd` objects.
- References** Oppenheim, A.V., and R.W. Schaffer, *Digital Signal Processing*, Prentice Hall, New Jersey, 1975, p. 513.
- See Also** `fitfrd` | `fitmagfrd`

# getlmi

---

**Purpose** Internal description of LMI system

**Syntax** `lmysys = getlmi`

**Description** After completing the description of a given LMI system with `lmivar` and `lmiterm`, its internal representation `lmysys` is obtained with the command

```
lmysys = getlmi
```

This MATLAB representation of the LMI system can be forwarded to the LMI solvers or any other LMI-Lab function for subsequent processing.

**See Also** `setlmi` | `lmivar` | `lmiterm` | `newlmi`

**Purpose** Generalized eigenvalue minimization under LMI constraints

**Syntax** `[lopt,xopt] = gevp(lmisys,nlfc,options,linit,xinit,target)`

**Description** `gevp` solves the generalized eigenvalue minimization problem of minimizing  $\lambda$ , subject to:

$$C(x) < D(x) \quad (2-7)$$

$$0 < B(x) \quad (2-8)$$

$$A(x) < \lambda B(x) \quad (2-9)$$

where  $C(x) < D(x)$  and  $A(x) < \lambda B(x)$  denote systems of LMIs. Provided that Equation 2-7 and Equation 2-8 are jointly feasible, `gevp` returns the global minimum `lopt` and the minimizing value `xopt` of the vector of decision variables  $x$ . The corresponding optimal values of the matrix variables are obtained with `dec2mat`.

The argument `lmisys` describes the system of LMIs Equation 2-7 to Equation 2-9 for  $\lambda = 1$ . The LMIs involving  $\lambda$  are called the *linear-fractional constraints* while Equation 2-7 and Equation 2-8 are regular LMI constraints. The number of linear-fractional constraints Equation 2-9 is specified by `nlfc`. All other input arguments are optional. If an initial feasible pair  $(\lambda_0, x_0)$  is available, it can be passed to `gevp` by setting `linit` to  $\lambda_0$  and `xinit` to  $x_0$ . Note that `xinit` should be of length `decnbr(lmisys)` (the number of decision variables). The initial point is ignored when infeasible. Finally, the last argument `target` sets some target value for  $\lambda$ . The code terminates as soon as it has found a feasible pair  $(\lambda, x)$  with  $\lambda \leq \text{target}$ .

**Caution** When setting up your `gevp` problem, be cautious to

- Always specify the linear-fractional constraints Equation 2-9 *last* in the LMI system. `gevp` systematically assumes that the last `nlfc` LMI constraints are linear fractional.

- Add the constraint  $B(x) > 0$  or any other LMI constraint that enforces it (see Remark below). This positivity constraint is required for regularity and good formulation of the optimization problem.

## Control Parameters

The optional argument `options` lets you access control parameters of the optimization code. In `gevp`, this is a five-entry vector organized as follows:

- `options(1)` sets the desired relative accuracy on the optimal value `lopt` (default =  $10^{-2}$ ).
- `options(2)` sets the maximum number of iterations allowed to be performed by the optimization procedure (100 by default).
- `options(3)` sets the feasibility radius. Its purpose and usage are the same as for `feasp`.
- `options(4)` helps speed up termination. If set to an integer value  $J > 0$ , the code terminates when the progress in  $\lambda$  over the last  $J$  iterations falls below the desired relative accuracy. Progress means the amount by which  $\lambda$  decreases. The default value is 5 iterations.
- `options(5) = 1` turns off the trace of execution of the optimization procedure. Resetting `options(5)` to zero (default value) turns it back on.

Setting `option(i)` to zero is equivalent to setting the corresponding control parameter to its default value.

## Examples

Given

$$A1 = \begin{pmatrix} -1 & 2 \\ 1 & -3 \end{pmatrix}, A2 = \begin{pmatrix} -0.8 & 1.5 \\ 1.3 & -2.7 \end{pmatrix}, A3 = \begin{pmatrix} -1.4 & 0.9 \\ 0.7 & -2.0 \end{pmatrix},$$

consider the problem of finding a single Lyapunov function  $V(x) = x^T P x$  that proves stability of

$$\dot{x} = A_i x \quad (i = 1, 2, 3)$$

and maximizes the decay rate  $\frac{dV(x)}{dt}$ . This is equivalent to minimizing  $\alpha$  subject to

$$I < P \quad (2-10)$$

$$A_1^T P + P A_1 < \alpha P \quad (2-11)$$

$$A_2^T P + P A_2 < \alpha P \quad (2-12)$$

$$A_3^T P + P A_3 < \alpha P \quad (2-13)$$

To set up this problem for `gevp`, first specify the LMIs Equation 2-11 to Equation 2-13 with  $\alpha = 1$ :

```
setlmis([]);
p = lmivar(1,[2 1])

lmiterm([1 1 1 0],1) % P > I : I
lmiterm([ 1 1 1 p],1,1) % P > I : P
lmiterm([2 1 1 p],1,a1,'s') % LFC # 1 (lhs)
lmiterm([ 2 1 1 p],1,1) % LFC # 1 (rhs)
lmiterm([3 1 1 p],1,a2,'s') % LFC # 2 (lhs)
lmiterm([ 3 1 1 p],1,1) % LFC # 2 (rhs)
lmiterm([4 1 1 p],1,a3,'s') % LFC # 3 (lhs)
lmiterm([ 4 1 1 p],1,1) % LFC # 3 (rhs)
lmis = getlmis
```

Note that the linear fractional constraints are defined last as required. To minimize  $\alpha$  subject to Equation 2-11 to Equation 2-13, call `gevp` by

```
[alpha,popt]=gevp(lmis,3)
```

This returns `alpha = -0.122` as the optimal value (the largest decay rate is therefore 0.122). This value is achieved for:

$$P = \begin{pmatrix} 5.58 & -8.35 \\ -8.35 & 18.64 \end{pmatrix}$$

## Tips

Generalized eigenvalue minimization problems involve standard LMI constraints Equation 2-7 and linear fractional constraints Equation 2-9. For well-posedness, the positive definiteness of  $B(x)$  must be enforced by adding the constraint  $B(x) > 0$  to the problem. Although this could be done automatically from inside the code, this is not desirable for efficiency reasons. For instance, the set of constraints Equation 2-8 may reduce to a single constraint as in the example above. In this case, the single extra LMI “ $P > I$ ” is enough to enforce positivity of *all* linear-fractional right sides. It is therefore left to the user to devise the least costly way of enforcing this positivity requirement.

## References

The solver `gevp` is based on Nesterov and Nemirovski’s Projective Method described in

Nesterov, Y., and A. Nemirovski, *Interior Point Polynomial Methods in Convex Programming: Theory and Applications*, SIAM, Philadelphia, 1994.

The optimization is performed by the C MEX-file `fpds.mex`.

## See Also

`dec2mat` | `decnbr` | `feasp` | `mincx`

**Purpose**

Grid ureal parameters uniformly over their range

**Syntax**

```
B = gridureal(A,N)
[B,SampleValues] = gridureal(A,N)
[B,SampleValues] = gridureal(A,NAMES,N)
[B,SampleValues] = gridureal(A,NAMES1,N1,NAMES2,N2,...)
```

**Description**

`B = gridureal(A,N)` substitutes  $N$  uniformly-spaced samples of the uncertain real parameters in  $A$ . The samples are chosen to cut “diagonally” across the cube of real parameter uncertainty space. The array  $B$  has size equal to `[size(A) N]`. For example, suppose  $A$  has 3 uncertain real parameters, say  $X$ ,  $Y$  and  $Z$ . Let  $(x_1, x_2, \dots, x_N)$  denote  $N$  uniform samples of  $X$  across its range. Similar for  $Y$  and  $Z$ . Then sample  $A$  at the points  $(x_1, y_1, z_1)$ ,  $(x_2, y_2, z_2)$ , and  $(x_N, y_N, z_N)$  to obtain the result  $B$ .

If  $A$  depends on additional uncertain objects, then  $B$  will be an uncertain object.

`[B,SampleValues] = gridureal(A,N)` additionally returns the specific sampled values (as a structure whose fieldnames are the names of  $A$ 's uncertain elements) of the uncertain reals. Hence,  $B$  is the same as `usubs(A,SampleValues)`.

`[B,SampleValues] = gridureal(A,NAMES,N)` samples only the uncertain reals listed in the `NAMES` variable (cell, or char array). Any entries of `NAMES` that are not elements of  $A$  are simply ignored. Note that `gridureal(A, fieldnames(A.Uncertainty),N)` is the same as `gridureal(A,N)`.

`[B,SampleValues] = gridureal(A,NAMES1,N1,NAMES2,N2,...)` takes  $N_1$  samples of the uncertain real parameters listed in `NAMES1`, and  $N_2$  samples of the uncertain real parameters listed in `NAMES2` and so on. `size(B)` will equal `[size(A) N1 N2 ...]`.

## Examples

### Grid Open-Loop and Closed-Loop Responses of Uncertain System

Create two uncertain real parameters  $\gamma$  and  $\tau$ . The nominal value of  $\gamma$  is 4 and its range is 3 to 5. The nominal value of  $\tau$  is 0.5 and its value can vary by  $\pm 30$  percent.

```
gamma = ureal('gamma',4);  
tau = ureal('tau',.5,'Percentage',30);
```


These uncertain parameters are used to construct an uncertain transfer function  $p$ . An integral controller,  $c$ , is synthesized for the plant  $p$  based on the nominal values of  $\gamma$  and  $\tau$ . The uncertain closed-loop system  $clp$  is formed.

```
p = tf(gamma,[tau 1]);  
KI = 1/(2*tau.Nominal*gamma.Nominal);  
c = tf(KI,[1 0]);  
clp = feedback(p*c,1);
```

The figure below shows the open-loop unit step response (top plot) and closed-loop response (bottom plot) for a grid of 20 values of  $\gamma$  and  $\tau$ .

```
subplot(2,1,1); step(gridureal(p,20),6)  
title('Open-loop plant step responses')  
subplot(2,1,2); step(gridureal(clp,20),6)
```



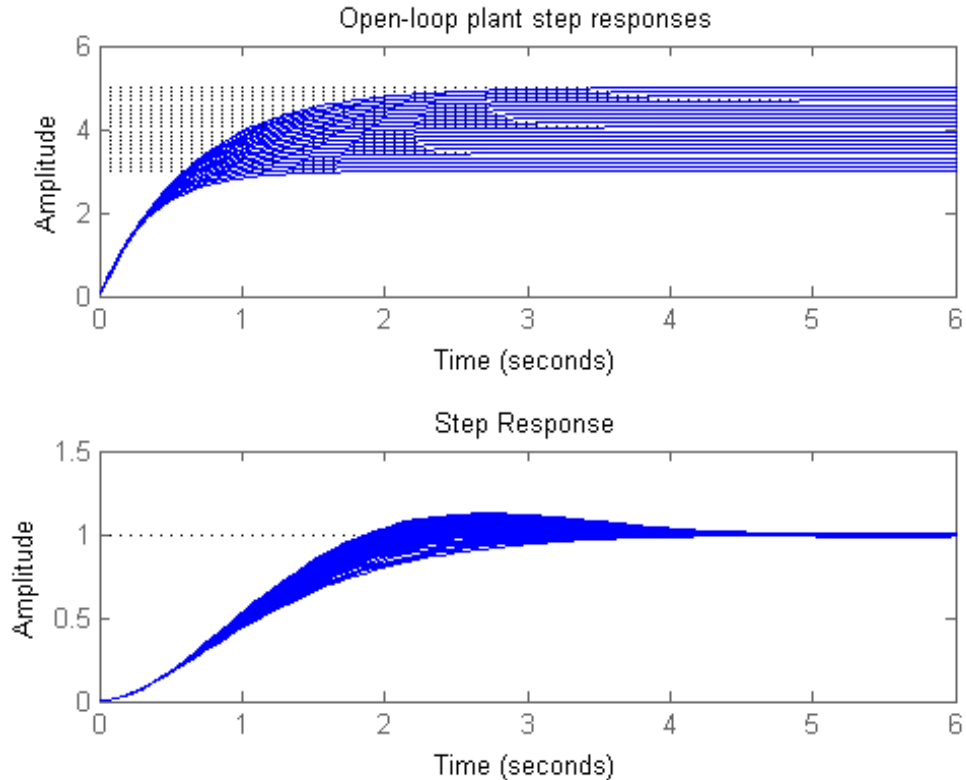

The plot illustrates the low-frequency closed-loop insensitivity achieved by the PI control system.

### **Grid Over Multi-Dimensional Parameter Spaces**

This example illustrates the different options in gridding high-dimensional (e.g.,  $n$  greater than 2) parameter spaces.

Construct an uncertain matrix,  $m$ , from four uncertain real parameters,  $a$ ,  $b$ ,  $c$ , and  $d$ , each making up the individual entries in  $m$ .

# gridureal

---

```
a = ureal('a',1);
b = ureal('b',2);
c = ureal('c',3);
d = ureal('d',4);
m = [a b;c d];
```

First, grid the (a,b) space at five places, and the (c,d) space at three places.

```
m1 = gridureal(m,{'a';'b'},5,{'c';'d'},3);
```

gridureal evaluates the uncertain matrix `m` at these 15 grid points, resulting in the numerical matrix `m1`.


Next, grid the (a,b,c,d) space at 15 places.

```
m2 = gridureal(m,{'a';'b';'c';'d'},15);
```

gridureal samples the uncertain matrix `m` at these 15 points, resulting in the numerical matrix `m2`.

The (2,1) entry of `m` is just the uncertain real parameter `c`. Plot the histograms of the (2,1) entry of both `m1` and `m2`. The (2,1) entry of `m1` only takes on three distinct values, while the (2,1) entry of `m2` takes on 15 distinct values uniformly through its range.

```
subplot(2,1,1)
hist(squeeze(m1(2,1,:)))
title('2,1 entry of m1')
subplot(2,1,2)
hist(squeeze(m2(2,1,:)))
title('2,1 entry of m2')
```

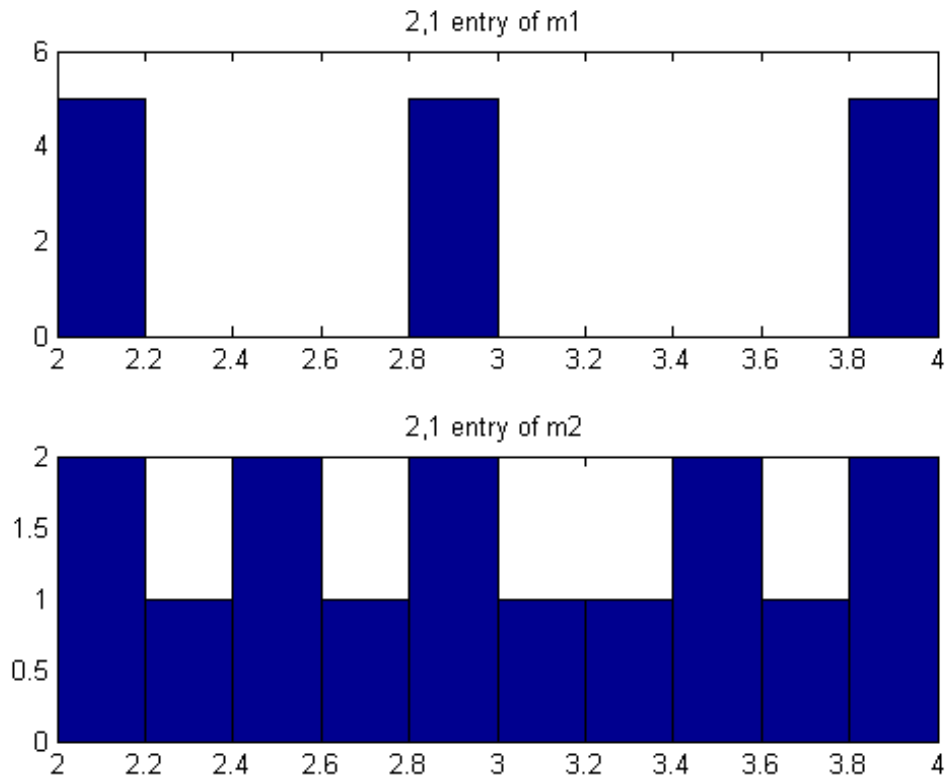

**See Also** `usample` | `usubs`

## Purpose


Mixed  $H_2/H_\infty$  synthesis with pole placement constraints

## Syntax

`[gopt,h2opt,K,R,S] = hinfmix(P,r,obj,region,dkbnd,tol)`

## Description

h2hinfosyn performs multi-objective output-feedback synthesis. The control problem is sketched in this figure.

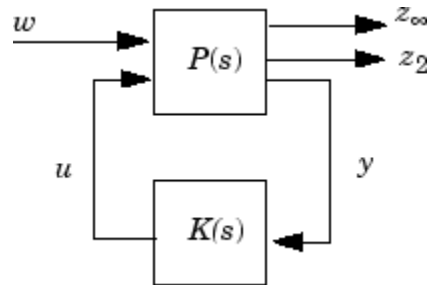

If  $T_\infty(s)$  and  $T_2(s)$  denote the closed-loop transfer functions from  $w$  to  $z_\infty$  and  $z_2$ , respectively, hinfmix computes a suboptimal solution of the following synthesis problem:

Design an LTI controller  $K(s)$  that minimizes the mixed  $H_2/H_\infty$  criterion

$$\alpha \|T_\infty\|_\infty^2 + \beta \|T_2\|_2^2$$

subject to

- $\|T_\infty\|_\infty < \gamma_0$
- $\|T_2\|_2 < \nu_0$
- The closed-loop poles lie in some prescribed LMI region  $D$ .

Recall that  $\|\cdot\|_\infty$  and  $\|\cdot\|_2$  denote the  $H_\infty$  norm (RMS gain) and  $H_2$  norm of transfer functions.

$P$  is any SS, TF, or ZPK LTI representation of the plant  $P(s)$ , and  $r$  is a three-entry vector listing the lengths of  $z_2$ ,  $y$ , and  $u$ . Note that  $z_\infty$  and/or  $z_2$  can be empty. The four-entry vector  $obj = [\gamma_0, \nu_0, \alpha, \beta]$  specifies

the  $H_2/H_\infty$  constraints and trade-off criterion, and the remaining input arguments are optional:

- `region` specifies the LMI region for pole placement (the default `region = []` is the open left-half plane). Use `lmireg` to interactively build the LMI region description `region`
- `dkbnd` is a user-specified bound on the norm of the controller feedthrough matrix  $D_K$ . The default value is 100. To make the controller  $K(s)$  strictly proper, set `dkbnd = 0`.
- `tol` is the required relative accuracy on the optimal value of the trade-off criterion (the default is  $10^{-2}$ ).

The function `h2hinfsyn` returns guaranteed  $H_\infty$  and  $H_2$  performances `gopt` and `h2opt` as well as the SYSTEM matrix `K` of the LMI-optimal controller. You can also access the optimal values of the LMI variables  $R$ ,  $S$  via the extra output arguments `R` and `S`.

A variety of mixed and unmixed problems can be solved with `hinfmix`. In particular, you can use `hinfmix` to perform pure pole placement by setting `obj = [0 0 0 0]`. Note that both  $z_\infty$  and  $z_2$  can be empty in such case.

## References

Chilali, M., and P. Gahinet, “ $H_\infty$  Design with Pole Placement Constraints: An LMI Approach,” *IEEE Trans. Aut. Contr.*, 41 (1995), pp. 358–367.

Scherer, C., “Mixed  $H_2/H$ -infinity Control,” *Trends in Control: A European Perspective*, Springer-Verlag (1995), pp.173–216.

## See Also

`lmireg` | `msfsyn`

**Purpose**  $H_2$  control synthesis for LTI plant

**Syntax** `[K,CL,GAM,INFO]=H2SYN(P,NMEAS,NCON)`


**Description** h2syn computes a stabilizing  $H_2$  optimal lti/ss controller K for a partitioned LTI plant P. The controller, K, stabilizes the plant P and has the same number

$$P = \left[ \begin{array}{c|cc} A & B_1 & B_2 \\ \hline C_1 & D_{11} & D_{12} \\ C_2 & D_{21} & D_{22} \end{array} \right]$$

of states as P. The LTI system P is partitioned where inputs to  $B_1$  are the disturbances, inputs to  $B_2$  are the control inputs, output of  $C_1$  are the errors to be kept small, and outputs of  $C_2$  are the output measurements provided to the controller.  $B_2$  has column size (NCON) and  $C_2$  has row size (NMEAS).

If P is constructed with mktito, you can omit NMEAS and NCON from the arguments.

The closed-loop system is returned in CL and the achieved  $H_2$  cost  $\gamma$  in GAM. INFO is a struct array that returns additional information about the design.

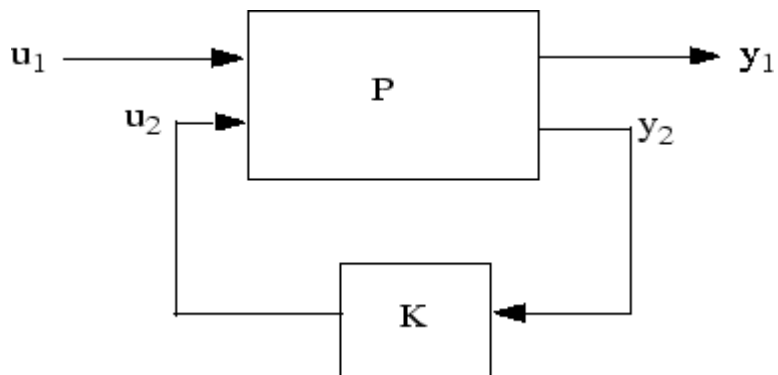

**H<sub>2</sub> control system**  $CL = \text{lft}(P, K) = T_{y_1 u_1}$ .

Output Arguments	Description
K	LTI controller
CL = lft(P, K)	LTI closed-loop system $T_{y_1 u_1}$
GAM = norm(CL)	$H_2$ optimal cost $\gamma = \ T_{y_1 u_1}\ _2$
INFO	Additional output information

Additional output — structure array INFO containing possible additional information depending on METHOD)

INFO.NORMS	Norms of four different quantities, full information control cost (FI), output estimation cost (OEF), direct feedback cost (DFL) and full control cost (FC). NORMS = [FI OEF DFL FC];
INFO.KFI	Full-information gain matrix (constant feedback) $u_2(t) = K_{FI}x(t)$
INFO.GFI	Full-information closed-loop system GFI=ss(A-B2*KFI,B1,C1-D12*KFI,D11)
INFO.HAMX	X Hamiltonian matrix (state-feedback)
INFO.HAMY	Y Hamiltonian matrix (Kalman filter)

## Examples

**Example 1:** Stabilize 4-by-5 unstable plant with three states, NMEAS=2, NCON=2.

```
rng(0,'twister');  
P = rss(3,4,5)';  
[K,CL,GAM] = h2syn(P,2,1);  
open_loop_poles = pole(P)  
closed_loop_poles = pole(CL)
```

```
open_loop_poles =
```

```
    0.2593  
   15.9497  
   20.7994
```

```
closed_loop_poles =
```

```
  -26.8951  
  -22.4817  
  -20.6965  
  -17.6041
```



-0.8694  
-2.6697

**Example 2:** Mixed-Sensitivity  $H_2$  loop-shaping. Here the goal is to shape the sigma plots of sensitivity  $S = (I + GK)^{-1}$  and complementary sensitivity  $T = GK(I + GK)^{-1}$ , by choosing a stabilizing  $K$  that minimizes the  $H_2$  norm of

$$T_{y,u_1} = \begin{bmatrix} W_1 S \\ (W_2 / G) T \\ W_3 T \end{bmatrix}$$

where  $G(s) = \frac{s-1}{s-2}$ ,  $W_1 = \frac{0.1(s+1000)}{100s+1}$ ,  $W_2 = 0.1$ , no  $W_3$ .

```
s=zpk('s');
G=10*(s-1)/(s+1)^2;
W1=0.1*(s+1000)/(100*s+1); W2=0.1; W3=[];
P=ss(G,W1,W2,W3);
[K,CL,GAM]=h2syn(P);
L=G*K; S=inv(1+L); T=1-S;
sigma(L,'k-.','s','r',T,'g')
```

## Algorithms

The  $H_2$  optimal control theory has its roots in the frequency domain interpretation the cost function associated with time-domain state-space LQG control theory [1]. The equations and corresponding nomenclature used here are taken from the Doyle *et al.*, 1989 [2]-[3].

h2syn solves the  $H_2$  optimal control problem by observing that it is equivalent to a conventional Linear-Quadratic Gaussian (LQG) optimal control problem. For simplicity, we shall describe the details of algorithm only for the continuous-time case, in which case the cost function  $J_{LQG}$  satisfies

$$\begin{aligned}
 J_{LQG} &= \lim_{T \rightarrow \infty} E \left\{ \frac{1}{T} \int_0^T y_1^T y_1 dt \right\} \\
 &= \lim_{T \rightarrow \infty} E \left\{ \frac{1}{T} \int_0^T \begin{bmatrix} x^T & u_2^T \end{bmatrix} \begin{bmatrix} Q & N_c \\ N_c^T & R \end{bmatrix} \begin{bmatrix} x \\ u_2 \end{bmatrix} dt \right\} \\
 &= \lim_{T \rightarrow \infty} E \left\{ \frac{1}{T} \int_0^T \begin{bmatrix} x^T & u_2^T \end{bmatrix} \begin{bmatrix} C_1^T \\ D_{12}^T \end{bmatrix} \begin{bmatrix} C_1 & D_{12} \end{bmatrix} \begin{bmatrix} x \\ u_2 \end{bmatrix} dt \right\}
 \end{aligned}$$

with plant noise  $u_1$  channel of intensity  $I$ , passing through the matrix  $[B_1; 0; D_{12}]$  to produce equivalent white correlated with plant  $\xi$  and white measurement noise  $\theta$  having joint correlation function

$$\begin{aligned}
 E \left\{ \begin{bmatrix} \xi(t) \\ \theta(t) \end{bmatrix} \begin{bmatrix} \xi(\tau) & \theta(\tau) \end{bmatrix}^T \right\} &= \begin{bmatrix} \Xi & N_f \\ N_f^T & \Theta \end{bmatrix} \delta(t - \tau) \\
 &= \begin{bmatrix} B_1 \\ D_{21} \end{bmatrix} \begin{bmatrix} B_1^T & D_{21}^T \end{bmatrix} \delta(t - \tau)
 \end{aligned}$$

The  $H_2$  optimal controller  $K(s)$  is thus realizable in the usual LQG manner as a full-state feedback  $K_{FI}$  and a Kalman filter with residual gain matrix  $K_{FC}$ .

## 1 Kalman Filter

$$\begin{aligned}
 \hat{\dot{x}} &= A\hat{x} + B_2 u_2 + K_{FC}(y_2 - C_2 \hat{x} - D_{22} u_2) \\
 K_{FC} &= (Y C_2^T + N_f) \Theta^{-1} = (Y C_2^T + B_1 D_{21}^T) (D_{21} D_{21}^T)^{-1}
 \end{aligned}$$

where  $Y = Y^T \geq 0$  solves the Kalman filter Riccati equation

$$Y A^T + A Y - (Y C_2^T + N_f) \Theta^{-1} (C_2 Y + N_f^T) + \Xi = 0$$

## 2 Full-State Feedback

$$u_2 = K_{FI} \hat{x}$$

$$K_{FI} = R^{-1} (B_2^T X + N_c^T) = D_{12}^T D_{12}^{-1} (B_2^T X + D_{12}^T C_1)$$

where  $X = X^T \geq 0$  solves the state-feedback Riccati equation

$$A^T X + XA - (XB_2 + N_c) R^{-1} (B_2^T X + N_c^T) + Q = 0$$

The final *positive*-feedback  $H_2$  optimal controller  $u_2 = K(s)y_2$  has a familiar closed-form

$$K(s) := \left[ \begin{array}{c|c} A - K_{FC}C_2 - B_2K_{FI} + K_{FC}D_{22}K_{FI} & K_f \\ \hline -K_{FI} & 0 \end{array} \right]$$

h2syn implements the continuous optimal  $H_2$  control design computations using the formulae described in the Doyle, *et al.* [2]; for discrete-time plants, h2syn uses the same controller formula, except that the corresponding discrete time Riccati solutions (dare) are substituted for  $X$  and  $Y$ . A Hamiltonian is formed and solved via a Riccati equation. In the continuous-time case, the optimal  $H_2$ -norm is infinite when the plant  $D_{11}$  matrix associated with the input disturbances and output errors is *non-zero*; in this case, the optimal  $H_2$  controller returned by h2syn is computed by first setting  $D_{11}$  to zero.

### 3 Optimal Cost GAM

The full information (FI) cost is given by the equation

$$\left( \text{trace} (B_1' X_2 B_1) \right)^{\frac{1}{2}} . \text{ The output estimation cost (OEF) is given by}$$

$$\left( \text{trace} (F_2 Y_2 F_2') \right)^{\frac{1}{2}} , \text{ where } F_2 = -(B_2' X_2 + D_{12}' C_1) . \text{ The disturbance}$$

$$\text{feedforward cost (DFL) is } \left( \text{trace} (L_2' X_2 L_2) \right)^{\frac{1}{2}} , \text{ where } L_2 \text{ is defined}$$

by  $-(Y_2 C_2' + B_1 D_{21}')$  and the full control cost (FC) is given by

$(\text{trace}(C_1 Y_2 C_1'))^{\frac{1}{2}}$ .  $X_2$  and  $Y_2$  are the solutions to the  $X$  and  $Y$  Riccati equations, respectively. For continuous-time plants with zero feedthrough term ( $D_{11} = 0$ ), and for all discrete-time plants, the optimal  $H_2$  cost  $\gamma = \|T_{y_1 u_1}\|_2$  is

$$\text{GAM} = \sqrt{(\text{FI}^2 + \text{OEF}^2 + \text{trace}(D_{11} D_{11}'))};$$

otherwise,  $\text{GAM} = \text{Inf}$ .

## Limitations

- $(A, B_2, C_2)$  must be *stabilizable and detectable*.
- $D_{12}$  must have full column rank and  $D_{21}$  must have full row rank

## References

- [1] Safonov, M.G., A.J. Laub, and G. Hartmann, "Feedback Properties of Multivariable Systems: The Role and Use of Return Difference Matrix," *IEEE Trans. of Automat. Contr.*, AC-26, pp. 47-65, 1981.
- [2] Doyle, J.C., K. Glover, P. Khargonekar, and B. Francis, "State-space solutions to standard  $H_2$  and  $H_\infty$  control problems," *IEEE Transactions on Automatic Control*, vol. 34, no. 8, pp. 831-847, August 1989.
- [3] Glover, K., and J.C. Doyle, "State-space formulae for all stabilizing controllers that satisfy an  $H_\infty$  norm bound and relations to risk sensitivity," *Systems and Control Letters*, 1988. vol. 11, pp. 167-172, August 1989.

## See Also

augw | hinfsv

**Purpose** Hankel minimum degree approximation (MDA) without balancing

**Syntax**

```
GRED = hankelmr(G)
GRED = hankelmr(G,order)
[GRED,redinfo] = hankelmr(G,key1,value1,...)
[GRED,redinfo] = hankelmr(G,order,key1,value1,...)
```

**Description** `hankelmr` returns a reduced order model `GRED` of `G` and a struct array `redinfo` containing the error bound of the reduced model and Hankel singular values of the original system.

The error bound is computed based on Hankel singular values of `G`. For a stable system Hankel singular values indicate the respective state energy of the system. Hence, reduced order can be directly determined by examining the system Hankel SV's,  $\sigma_i$ .

With only one input argument `G`, the function will show a Hankel singular value plot of the original model and prompt for model order number to reduce.

This method guarantees an error bound on the infinity norm of the *additive error*  $\|G - GRED\|_{\infty}$  for well-conditioned model reduced problems [1]:

$$\|G - Gred\|_{\infty} \leq 2 \sum_{k=1}^n \sigma_k$$

---

**Note** It seems this method is similar to the additive model reduction routines `balancmr` and `schurmr`, but actually it can produce more reliable reduced order model when the desired reduced model has nearly controllable and/or observable states (has Hankel singular values close to machine accuracy). `hankelmr` will then select an optimal reduced system to satisfy the error bound criterion regardless the order one might naively select at the beginning.

---

This table describes input arguments for hankelmr.

Argument	Description
G	LTI model to be reduced (without any other inputs will plot its Hankel singular values and prompt for reduced order)
ORDER	(Optional) an integer for the desired order of the reduced model, or optionally a vector packed with desired orders for batch runs

A batch run of a serial of different reduced order models can be generated by specifying `order = x:y`, or a vector of integers. By default, all the anti-stable part of a system is kept, because from control stability point of view, getting rid of unstable state(s) is dangerous to model a system.

'*MaxError*' can be specified in the same fashion as an alternative for 'ORDER'. In this case, reduced order will be determined when the sum of the tails of the Hankel sv's reaches the '*MaxError*'.

Argument	Value	Description
' <i>MaxError</i> '	Real number or vector of different errors	Reduce to achieve $H_\infty$ error.  When present, ' <i>MaxError</i> ' overrides ORDER input.
' <i>Weights</i> '	{Wout,Win} cell array	Optimal 1x2 cell array of LTI weights Wout (output) and Win (input). Default for both is identity. Weights must be invertible.

Argument	Value	Description
'Display'	'on' or 'off'	Display Hankel singular plots (default 'off').
'Order'	Integer, vector or cell array	Order of reduced model. Use only if not specified as 2nd argument.

Weights on the original model input and/or output can make the model reduction algorithm focus on some frequency range of interests. But weights have to be stable, minimum phase and invertible.

This table describes output arguments.

Argument	Description
GRED	LTI reduced order model. Become multi-dimensional array when input is a serial of different model order array.
REDINFO	A STRUCT array with 4 fields: <ul style="list-style-type: none"> <li>• REDINFO.ErrorBound (bound on <math>\ G-GRED\ _{\infty}</math>)</li> <li>• REDINFO.StabSV (Hankel SV of stable part of G)</li> <li>• REDINFO.UnstabSV (Hankel SV of unstable part of G)</li> <li>• REDINFO.Ganticausal (Anti-causal part of Hankel MDA)</li> </ul>

G can be stable or unstable, continuous or discrete.

---

**Note** If `size(GRED)` is not equal to the order you specified. The optimal Hankel MDA algorithm has selected the best Minimum Degree Approximate it can find within the allowable machine accuracy.

---

## Algorithms

Given a state-space  $(A, B, C, D)$  of a system and  $k$ , the desired reduced order, the following steps will produce a similarity transformation to truncate the original state-space system to the  $k^{\text{th}}$  order reduced model.

- 1 Find the controllability and observability grammians  $P$  and  $Q$ .
- 2 Form the descriptor

$$E = QP - \rho^2 I$$

where  $\sigma_k > \rho \geq \sigma_{k+1}$ , and descriptor state-space

Take SVD of descriptor  $E$  and partition the result into  $k^{\text{th}}$  order truncation form

$$\left[ \begin{array}{c|c} Es - \bar{A} & \bar{B} \\ \hline \bar{C} & \bar{D} \end{array} \right] = \left[ \begin{array}{c|c} \rho^2 A^T + QAP & QB \\ \hline CP & D \end{array} \right]$$

$$E = [U_{E1}, U_{E2}] \left[ \begin{array}{c|c} \Sigma_E 0 & 0 \\ \hline 0 & 0 \end{array} \right] \begin{bmatrix} V_{E1}^T \\ V_{E2}^T \end{bmatrix}$$

- 3 Apply the transformation to the descriptor state-space system above we have

$$\begin{bmatrix} A_{11} & A_{12} \\ A_{21} & A_{22} \end{bmatrix} = \begin{bmatrix} U_{E1}^T \\ U_{E2}^T \end{bmatrix} (\rho^2 A^T + QAP) \begin{bmatrix} V_{E1} & V_{E2} \end{bmatrix}$$

$$\begin{bmatrix} B_1 \\ B_2 \end{bmatrix} = \begin{bmatrix} U_{E1}^T \\ U_{E2}^T \end{bmatrix} \begin{bmatrix} QB & -C^T \end{bmatrix}$$

$$\begin{bmatrix} C_1 & C_2 \end{bmatrix} = \begin{bmatrix} CP \\ -\rho B^T \end{bmatrix} \begin{bmatrix} V_{E1} & V_{E2} \end{bmatrix}$$

$$D_1 = D$$



4 Form the equivalent state-space model.

$$\begin{bmatrix} \tilde{A} & \tilde{B} \\ \tilde{C} & \tilde{D} \end{bmatrix} = \begin{bmatrix} \Sigma_E^{-1}(A_{11} - A_{12}A_{22} & A_{21}) & \Sigma_E^{-1}(B_1 - A_{12}A_{22} & B_2) \\ C_1 - C_2A_{22}^\dagger A_{21} & D_1 - C_2A_{22}^\dagger B_2 \end{bmatrix}$$

The final  $k^{th}$  order Hankel MDA is the stable part of the above state-space realization. Its anticausal part is stored in `redinfo.Ganticausal`.

The proof of the Hankel MDA algorithm can be found in [2]. The error system between the original system  $G$  and the *Zerth Order Hankel MDA*  $G_0$  is an all-pass function [1].

## Examples

Given a continuous or discrete, stable or unstable system,  $G$ , the following commands can get a set of reduced order models based on your selections:

```
rng(1234, 'twister');
G = rss(30,5,4);
[g1, redinfo1] = hankelmr(G); % display Hankel SV plot
    % and prompt for order (try 15:20)
[g2, redinfo2] = hankelmr(G,20);
[g3, redinfo3] = hankelmr(G,[10:2:18]);
[g4, redinfo4] = hankelmr(G,'MaxError',[0.01, 0.05]);
for i = 1:4
    figure(i); eval(['sigma(G,g' num2str(i) ');']);
end
```


Singular Value Bode Plot of  $G$  (30-state, 5 outputs, 4 inputs) on page 2-144 shows a singular value Bode plot of a random system  $G$  with 20 states, 5 output and 4 inputs. The error system between  $G$  and its *Zerth order Hankel MDA* has its infinity norm equals to an all pass function, as shown in All-Pass Error System Between  $G$  and Zerth Order  $G$  Anticausal on page 2-145.

# hankelmr


The *Zeroth order Hankel MDA* and its error system sigma plot are obtained via commands

```
[g0,redinfo0] = hankelmr(G,0);  
sigma(G-redinfo0.Ganticausal)
```

This interesting all-pass property is unique in Hankel MDA model reduction.

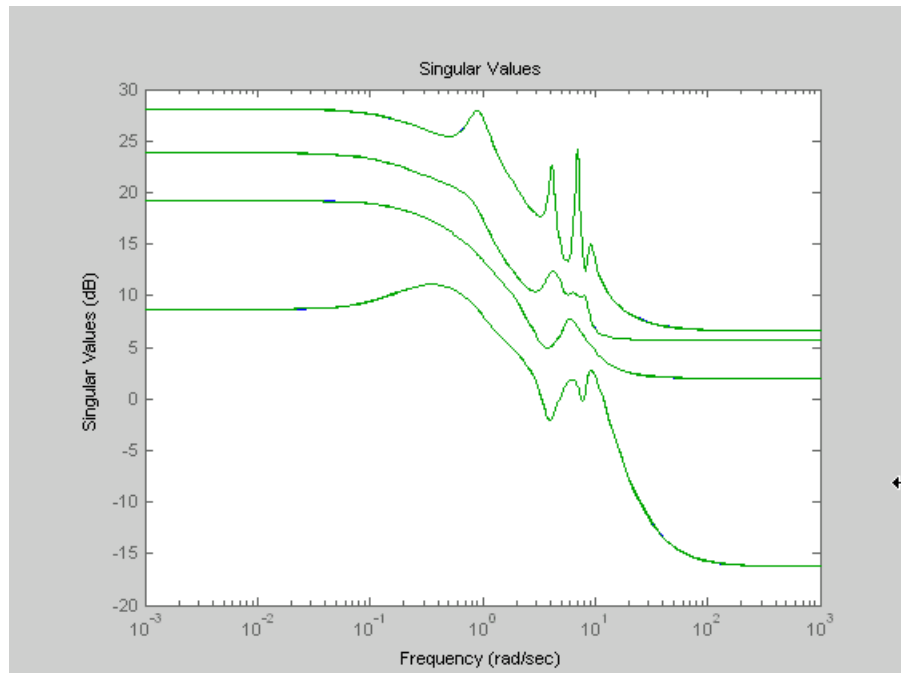

**Singular Value Bode Plot of G (30-state, 5 outputs, 4 inputs)**

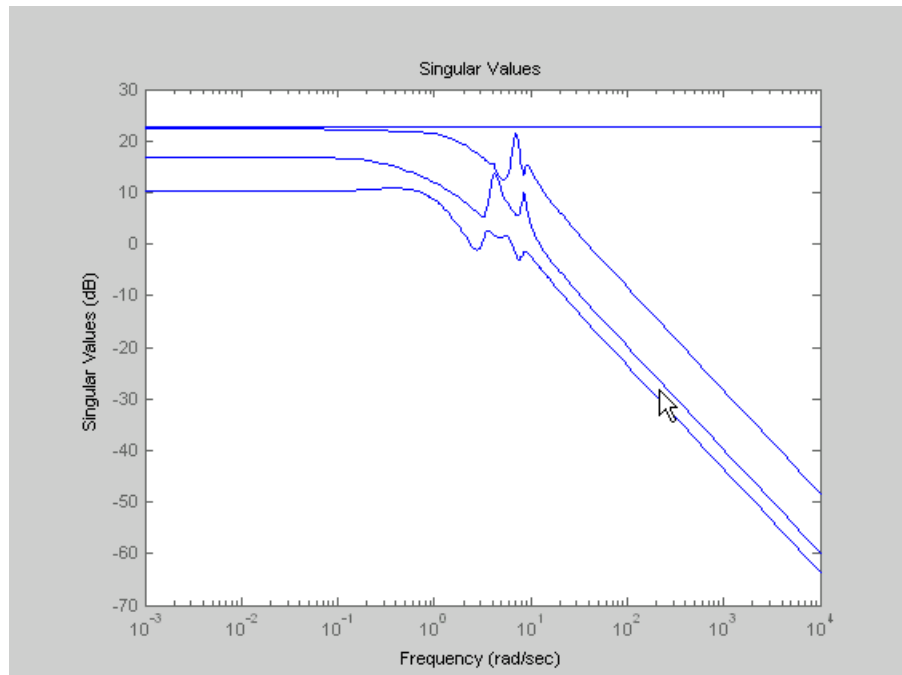

### All-Pass Error System Between G and Zeroth Order G Anticausal

## References

- [1] Glover, K., "All Optimal Hankel Norm Approximation of Linear Multivariable Systems, and Their  $L_\infty$ -error Bounds," *Int. J. Control*, vol. 39, no. 6, pp. 1145-1193, 1984.
- [2] Safonov, M.G., R.Y. Chiang, and D.J.N. Limebeer, "Optimal Hankel Model Reduction for Nonminimal Systems," *IEEE Trans. on Automat. Contr.*, vol. 35, no. 4, April 1990, pp. 496-502.

## See Also

reduce | balancmr | schurmr | bstmr | ncfmr | hankelsv

# hankelsv


---

**Purpose** Compute Hankel singular values for stable/unstable or continuous/discrete system

**Syntax**  
`hankelsv(G)`  
`hankelsv(G,ErrorType,style)`  
`[sv_stab,sv_unstab]=hankelsv(G,ErrorType,style)`

**Description** `[sv_stab,sv_unstab]=hankelsv(G,ErrorType,style)` returns a column vector `SV_STAB` containing the Hankel singular values of the stable part of `G` and `SV_UNSTAB` of anti-stable part (if it exists). The Hankel SV's of anti-stable part `ss(a,b,c,d)` is computed internally via `ss(-a,-b,c,d)`. Discrete model is converted to continuous one via the bilinear transform.

`hankelsv(G)` with no output arguments draws a bar graph of the Hankel singular values such as the following:

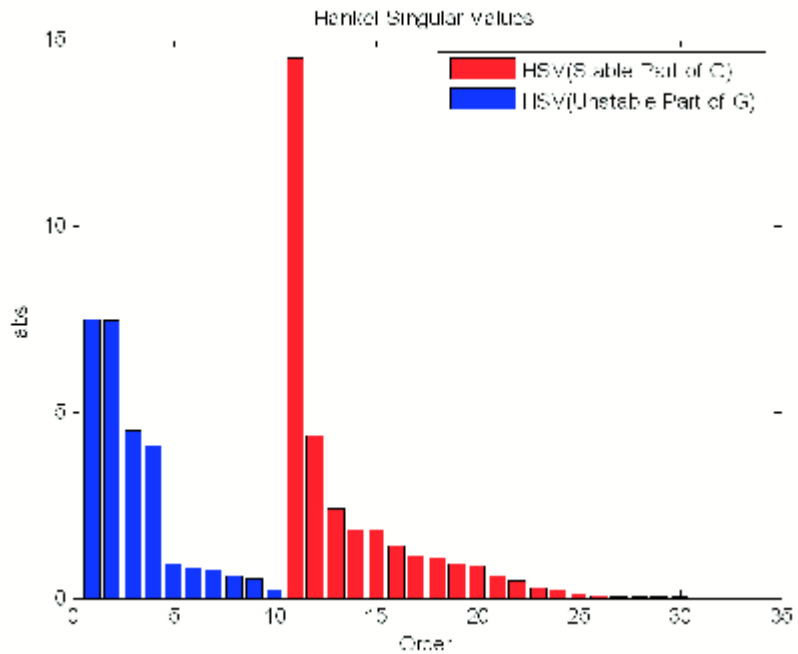

This table describes optional input arguments for `hankelsvd`.

Argument	Value	Description
ERRORTYPE	'add'	Regular Hankel SV's of G
	'mult'	Hankel SV's of phase matrix
	'ncf'	Hankel SV's of coprime factors
STYLE	'abs'	Absolute value
	'log'	logarithm scale

## Algorithms

For ErrorType = 'add', `hankelsv` implements the numerically robust square root method to compute the Hankel singular values [1]. Its algorithm goes as follows:

Given a stable model  $G$ , with controllability and observability grammians  $P$  and  $Q$ , compute the SVD of  $P$  and  $Q$ :

```
[Up,Sp,Vp] = svd(P);  
[Uq,Sq,Vq] = svd(Q);
```

Then form the square roots of the grammians:

```
Lr = Up*diag(sqrt(diag(Sp)));  
Lo = Uq*diag(sqrt(diag(Sq)));
```

The Hankel singular values are simply:

```
 $\sigma_H = \text{svd}(Lo' * Lr);$ 
```

This method not only takes the advantages of robust SVD algorithm, but also ensure the computations stay well within the “square root” of the machine accuracy.

For `ErrorType = 'mult'`, `hankelsv` computes the Hankel singular value of the phase matrix of  $G$  [2].

For `ErrorType = 'ncf'`, `hankelsv` computes the Hankel singular value of the normalized coprime factor pair of the model [3].

## References

- [1] Safonov, M.G., and R.Y. Chiang, “A Schur Method for Balanced Model Reduction,” *IEEE Trans. on Automat. Contr.*, vol. AC-2, no. 7, July 1989, pp. 729-733.
- [2] Safonov, M.G., and R.Y. Chiang, “Model Reduction for Robust Control: A Schur Relative Error Method,” *International J. of Adaptive Control and Signal Processing*, Vol. 2, pp. 259-272, 1988.
- [3] Vidyasagar, M., *Control System Synthesis - A Factorization Approach*. London: The MIT Press, 1985.

## See Also

`reduce` | `balancmr` | `schurmr` | `bstmr` | `ncfmr` | `hankelmr`

**Purpose** Synthesis of gain-scheduled  $H_\infty$  controllers

**Syntax** `[gopt,pdK,R,S] = hinfgs(pdP,r,gmin,tol,tolred)`

**Description** Given an affine parameter-dependent plant


$$P \begin{cases} \dot{x} = A(p)x + B_1(p)w + B_2u \\ z = C_1(p)x + D_{11}(p)w + D_{12}u \\ y = C_2x + D_{21}w + D_{22}u \end{cases}$$

where the time-varying parameter vector  $p(t)$  ranges in a box and is measured in real time, `hinfgs` seeks an affine parameter-dependent controller

$$K \begin{cases} \dot{\zeta} = A_K(p)\zeta + B_K(p)y \\ u = C_K(p)\zeta + D_K(P)y \end{cases}$$

scheduled by the measurements of  $p(t)$  and such that

- $K$  stabilizes the closed-loop system

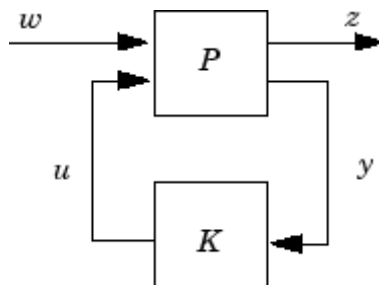

for all admissible parameter trajectories  $p(t)$

- $K$  minimizes the closed-loop quadratic  $H_\infty$  performance from  $w$  to  $z$ .

The description `pdP` of the parameter-dependent plant  $P$  is specified with `psys` and the vector `r` gives the number of controller inputs and

outputs (set  $r=[p2, m2]$  if  $y \in R^{p2}$  and  $u \in R^{m2}$ ). Note that `hinfgs` also accepts the polytopic model of  $P$  returned, e.g., by `aff2pol`.

`hinfgs` returns the optimal closed-loop quadratic performance `gopt` and a polytopic description of the gain-scheduled controller `pdK`. To test if a closed-loop quadratic performance  $\gamma$  is achievable, set the third input `gmin` to  $\gamma$ . The arguments `tol` and `tolred` control the required relative accuracy on `gopt` and the threshold for order reduction. Finally, `hinfgs` also returns solutions  $R, S$  of the characteristic LMI system.

## Controller Implementation

The gain-scheduled controller `pdK` is parametrized by  $p(t)$  and

characterized by the values  $K_{\Pi j}$  of  $\begin{pmatrix} A_K(p) & B_K(p) \\ C_K(p) & D_K(p) \end{pmatrix}$  at the corners  $^3_j$  of the parameter box. The command

```
Kj = psinfo(pdK, 'sys', j)
```

returns the  $j$ -th vertex controller  $K_{\Pi j}$  while

```
pv = psinfo(pdP, 'par')  
vertx = polydec(pv)  
Pj = vertx(:, j)
```

gives the corresponding corner  $^3_j$  of the parameter box (`pv` is the parameter vector description).

The controller scheduling should be performed as follows. Given the measurements  $p(t)$  of the parameters at time  $t$ ,

- 1 Express  $p(t)$  as a convex combination of the  $^3_j$ :

$$p(t) = \alpha_1^3_1 + \dots + \alpha_N^3_N, \alpha_j \geq 0, \sum_{i=1}^N \alpha_j = 1$$

This convex decomposition is computed by `polydec`.



- 2 Compute the controller state-space matrices at time  $t$  as the convex combination of the vertex controllers  $K_{\Pi_j}$ :

$$\begin{pmatrix} A_K(t) & B_K(t) \\ C_K(t) & D_K(t) \end{pmatrix} = \sum_{i=1}^N \alpha_j K_{\Pi_i}.$$

- 3 Use  $A_K(t)$ ,  $B_K(t)$ ,  $C_K(t)$ ,  $D_K(t)$  to update the controller state-space equations.

## References

Apkarian, P., P. Gahinet, and G. Becker, “Self-Scheduled  $H_\infty$  Control of Linear Parameter-Varying Systems,” *Automatica*, 31 (1995), pp. 1251–1261.

Becker, G., Packard, P., “Robust Performance of Linear-Parametrically Varying Systems Using Parametrically-Dependent Linear Feedback,” *Systems and Control Letters*, 23 (1994), pp. 205–215.

Packard, A., “Gain Scheduling via Linear Fractional Transformations,” *Syst. Contr. Letters*, 22 (1994), pp. 79–92.

## See Also

psys | pvec | pdsimul | polydec

# hinfnorm

---

**Purpose**  $H_\infty$  norm of dynamic system

**Syntax**  
`ninf = hinfnorm(sys)`  
`ninf = hinfnorm(sys,tol)`  
`[ninf,fpeak] = hinfnorm( __ )`

**Description** `ninf = hinfnorm(sys)` returns the  $H_\infty$  in absolute units of the dynamic system model, `sys`.

- If `sys` is a stable SISO system, then the  $H_\infty$  norm is the peak gain, the largest value of the frequency response magnitude.
- If `sys` is a stable MIMO system, then the  $H_\infty$  norm is the largest singular value across frequencies.
- If `sys` is an unstable system, then the  $H_\infty$  norm is defined as `Inf`.
- If `sys` is a model that has tunable or uncertain parameters, then `hinfnorm` evaluates the  $H_\infty$  norm at the current or nominal value of `sys`.
- If `sys` is a model array, then `hinfnorm` returns an array of the same size as `sys`, where `ninf(k) = hinfnorm(sys(:, :, k))`.

For stable systems, `hinfnorm(sys)` is the same as `getPeakGain(sys)`.

`ninf = hinfnorm(sys,tol)` returns the  $H_\infty$  norm of `sys` with relative accuracy `tol`.

`[ninf,fpeak] = hinfnorm( __ )` also returns the frequency, `fpeak`, at which the peak gain or largest singular value occurs. You can use this syntax with any of the input arguments in previous syntaxes. If `sys` is unstable, then `fpeak = Inf`.

**Input Arguments** **sys - Input dynamic system**  
dynamic system model | model array

Input dynamic system, specified as any dynamic system model or model array. `sys` can be SISO or MIMO.

## Output Arguments

### **tol** - Relative accuracy

0.01 (default) | positive real scalar

Relative accuracy of the peak gain, specified as a positive real scalar value. `hinfnorm` calculates `ninf` such that the fractional difference between `ninf` and the true  $H_\infty$  norm of `sys` is no greater than `tol`.

### **ninf** - $H_\infty$ norm of dynamic system

Inf | scalar | array

$H_\infty$  norm of `sys`, returned as `Inf`, a scalar value, or an array.

- If `sys` is a single stable model, then `ninf` is a scalar value.
- If `sys` is a single unstable model, then `ninf` is `Inf`.
- If `sys` is a model array, then `ninf` is an array of the same size as `sys`, where `ninf(k) = hinfnorm(sys(:, :, k))`.

### **fpeak** - Frequency of peak gain or largest singular value

Inf | nonnegative real scalar | array

Frequency at which the peak gain or largest singular value occurs, returned as `Inf`, a nonnegative real scalar value, or an array. The frequency is expressed in units of `rad/TimeUnit`, relative to the `TimeUnit` property of `sys`.

- If `sys` is a single stable model, then `fpeak` is a scalar.
- If `sys` is a single unstable model, then `fpeak` is `Inf`.
- If `sys` is a model array, then `fpeak` is an array of the same size as `sys`. In this case, `fpeak(k)` is the peak gain or largest singular value frequency of the  $k$ th model in the array.

## Examples

### Norm of MIMO System

Compute the  $H_\infty$  norm of the following 2-input, 2-output dynamic system and the frequency at which the peak singular value occurs.

# hinfnorm

---

$$G(s) = \begin{bmatrix} 0 & \frac{3s}{s^2 + s + 10} \\ \frac{s+1}{s+5} & \frac{2}{s+6} \end{bmatrix}.$$

```
G = [0 tf([3 0],[1 1 10]);tf([1 1],[1 5]),tf(2,[1 6])];  
[ninf,fpeak] = hinfnorm(G)
```

```
ninf =
```


```
3.0150
```

```
fpeak =
```

```
3.1623
```

The  $H_\infty$  norm of a MIMO system is its maximum singular value. Plot the singular values of  $G$  and compare the result from `hinfnorm`.

```
sigma(G),grid
```

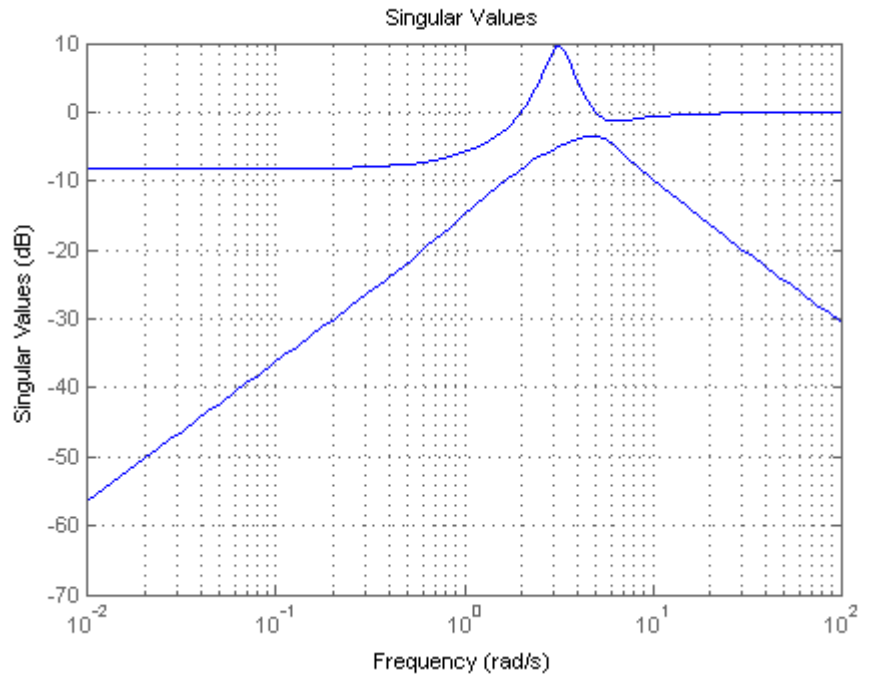

The values `ninf` and `fpeak` are consistent with the singular value plot, which displays the values in dB.

**See Also**

`getPeakGain` | `freqresp` | `sigma`

# hinfstruct

---

**Purpose**  $H_\infty$  tuning of fixed-structure controllers


**Syntax**  
CL = hinfstruct(CLO)  
[CL,gamma,info] = hinfstruct(CLO)  
[CL,gamma,info] = hinfstruct(CLO,options)  
[C,gamma,info] = hinfstruct(P,C0,options)

**Description** CL = hinfstruct(CLO) tunes the free parameters of the tunable genss model CLO. This tuning minimizes the  $H_\infty$  norm of the closed-loop transfer function modeled by CLO. The model CLO represents a closed-loop control system that includes tunable components such as controllers or filters. CLO can also include weighting functions that capture design requirements.

[CL,gamma,info] = hinfstruct(CLO) returns gamma (the minimum  $H_\infty$  norm) and a data structure info with additional information about each optimization run.

[CL,gamma,info] = hinfstruct(CLO,options) allows you to specify additional options for the optimizer using hinfstructOptions.

[C,gamma,info] = hinfstruct(P,C0,options) tunes the parametric controller blocks C0. This tuning minimizes the  $H_\infty$  norm of the closed-loop system CLO = lft(P,C0). To use this syntax, express your control system and design requirements as a Standard Form model, as in the following illustration:

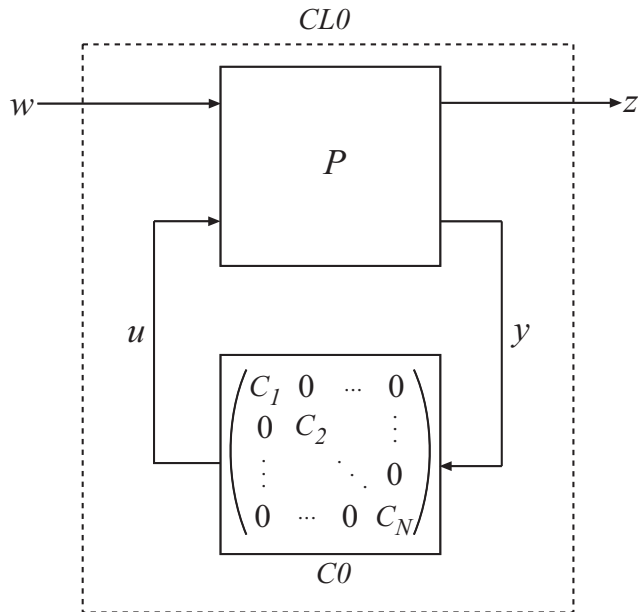

$P$  is a numeric LTI model that includes the fixed elements of the control architecture.  $P$  can also include weighting functions that capture design requirements.  $CO$  can be a single tunable component (for example, a Control Design Block or a `genss` model) or a cell array of multiple tunable components.  $C$  is a parametric model or array of parametric models of the same types as  $CO$ .

### Tips

- `hinfstruct` is related to `hinfsyn`, which also uses  $H_\infty$  techniques to design a controller for a MIMO plant. However, unlike `hinfstruct`, `hinfsyn` imposes no restriction on the structure and order of the controller. For that reason, `hinfsyn` always returns a smaller `gamma` than `hinfstruct`. You can therefore use `hinfsyn` to obtain a lower bound on the best achievable performance.

## Input Arguments

### **CLO**

Generalized state-space (`genss`) model describing the weighted closed-loop transfer function of a control system. `hinfstruct` minimizes the  $H_\infty$  norm of `CLO`.

`CLO` includes both the fixed and tunable components of the control system in a single `genss` model. The tunable components of the control system are represented as Control Design Blocks, and are stored in the `CLO.Blocks` property of the `genss` model.

### **P**

Numeric LTI model representing the fixed elements of the control architecture to be tuned. `P` can also include weighting functions that capture design requirements. You can obtain `P` in two ways:

- In MATLAB, model the fixed elements of your control system as numeric LTI models. Then, use block-diagram building functions (such as `connect` and `feedback`) to build `P` from the modeled components. Also include any weighting functions that represent your design requirements.
- If you have a Simulink model of your control system and have Simulink Control Design, use `linlft` to obtain a linear model of the fixed elements of your control system. The `linlft` command linearizes your Simulink model, excluding specified Simulink blocks (the blocks that represent the controller elements you want to tune). If you are using weighting functions to represent your design requirements, connect them in series with the linear model of your plant to obtain `P`.

### **CO**

Single tunable component or cell array of tunable components of the control structure.

Each entry in `CO` represents one tunable element of your control architecture, such as a PID controller, a gain block, or a fixed-order



transfer function. The entries of **C0** can be Control Design Blocks or **genss** models.

For more information and examples of creating tunable models, see “Models with Tunable Coefficients” in the *Control System Toolbox™ User’s Guide*.

### **options**

Set of options for **hinfstruct**. Use **hinfstructOptions** to define options. For information about the available options, see the **hinfstructOptions** reference page.

## **Output Arguments**

### **CL**

Tuned version of the generalized state-space (**genss**) model **CL0**.

The **hinfstruct** command tunes the free parameters of **CL0** to achieve a minimum  $H_\infty$  norm. **CL.Blocks** contains the same types of Control Design Blocks as **CL0.Blocks**, except that in **CL**, the parameters have tuned values.

To access the tuned parameter values, use **getValue**. You can also access them directly in **CL.Blocks**.

### **C**

Tuned versions of the parametric models **C0**.

When **C0** is a single parametric model, **C** is a parametric model of the same type, with tuned parameter values.

When **C0** is a cell array of parametric models, **C** is also a cell array. The entries in **C** are parametric models of the same type as the corresponding entries in **C0**.

### **gamma**

Best achieved value for the closed-loop  $H_\infty$  norm.

In some cases, `hinfstruct` performs more than one minimization run (when the `hinfstructOptions` option `RandomStarts` > 0). In such cases, `gamma` is the smallest  $H_\infty$  norm of all runs.

## info

Data structure array containing results from each optimization run. The fields of `info` are:

- `Objective` — Minimum  $H_\infty$  norm value for each run.  
When `RandomStarts` = 0, `Objective` = `gamma`.
- `Iterations` — Number of iterations before convergence for each run.
- `TunedBlocks` — Tuned control design blocks for each run.  
`TunedBlocks` differs from `C` in that `C` contains only the result from the best run. When `RandomStarts` = 0, `TunedBlocks` = `C`.

## Algorithms

`hinfstruct` uses specialized nonsmooth optimization techniques to enforce closed-loop stability and minimize the  $H_\infty$  norm as a function of the tunable parameters. These techniques are based on the work in [1].

`hinfstruct` computes the  $H_\infty$  norm using the algorithm of [2] and structure-preserving eigensolvers from the SLICOT library. For more information about the SLICOT library, see <http://slicot.org>.

## References

- [1] P. Apkarian and D. Noll, "Nonsmooth H-infinity Synthesis," *IEEE Transactions on Automatic Control*, Vol. 51, Number 1, 2006, pp. 71-86.
- [2] Bruisma, N.A. and M. Steinbuch, "A Fast Algorithm to Compute the  $H_\infty$ -Norm of a Transfer Function Matrix," *System Control Letters*, 14 (1990), pp. 287-293.

## See Also

`hinfstructOptions` | `hinfsyn` | `ltiblock.gain` | `ltiblock.pid` | `ltiblock.ss` | `ltiblock.tf` | `getValue` | `genss`

## **Related Examples**

- “Build Tunable Closed-Loop Model for Tuning with hinfstruct”
- Loop Shaping Design with HINFSTRUCT
- Decoupling Controller for a Distillation Column
- Fixed-Structure Autopilot for a Passenger Jet

## **Concepts**

- “What Is hinfstruct?”
- “Formulating Design Requirements as H-Infinity Constraints”
- “Structured H-Infinity Synthesis Workflow”
- “Models with Tunable Coefficients”

# hinfstructOptions

---

**Purpose** Set options for hinfstruct

**Syntax** `options = hinfstructOptions`  
`options = hinfstructOptions(Name,Value)`

**Description** `options = hinfstructOptions` returns the default option set for the `hinfstruct` command.  
`options = hinfstructOptions(Name,Value)` creates an option set with the options specified by one or more `Name,Value` pair arguments.

## Input Arguments

### Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name,Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

`hinfstructOptions` takes the following `Name` arguments:

#### 'Display'

String determining the amount of information to display during `hinfstruct` optimization runs.

`Display` takes the following values:

- 'off' — `hinfstruct` runs in silent mode, displaying no information during or after the run.
- 'iter' — display optimization progress after each iteration. The display includes the value of the closed-loop  $H_\infty$  norm after each iteration. The display also includes a `Progress` value indicating the percent change in the  $H_\infty$  norm from the previous iteration.
- 'final' — display a one-line summary at the end of each optimization run. The display includes the minimized value of the closed-loop  $H_\infty$  norm and the number of iterations for each run.

**Default:** 'final'

## **'MaxIter'**

Maximum number of iterations in each optimization run.

**Default:** 300

## **'RandomStart'**

Number of additional optimizations starting from random values of the free parameters in the controller.

If `RandomStart = 0`, `hinfstruct` performs a single optimization run starting from the initial values of the tunable parameters. Setting `RandomStart = N > 0` runs  $N$  additional optimizations starting from  $N$  randomly generated parameter values.

`hinfstruct` finds a local minimum of the gain minimization problem. To increase the likelihood of finding parameter values that meet your design requirements, set `RandomStart > 0`. You can then use the best design that results from the multiple optimization runs.

Use with `UseParallel = true` to distribute independent optimization runs among MATLAB workers (requires Parallel Computing Toolbox™ software).

**Default:** 0

## **'UseParallel'**

Parallel processing flag.

Set to `true` to enable parallel processing by distributing randomized starts among workers in a parallel pool. If there is an available parallel pool, then the software performs independent optimization runs concurrently among workers in that pool. If no parallel pool is available, one of the following occurs:

# hinfstructOptions

---

- If **Automatically create a parallel pool** is selected in your Parallel Computing Toolbox preferences, then the software starts a parallel pool using the settings in those preferences.
- If **Automatically create a parallel pool** is not selected in your preferences, then the software performs the optimization runs successively, without parallel processing.

If **Automatically create a parallel pool** is not selected in your preferences, you can manually start a parallel pool using `parpool` before running the tuning command.

Using parallel processing requires Parallel Computing Toolbox software.

**Default:** false

## 'TargetGain'

Target  $H_\infty$  norm.

The `hinfstruct` optimization stops when the  $H_\infty$  norm (peak closed-loop gain) falls below the specified `TargetGain` value.

Set `TargetGain = 0` to optimize controller performance by minimizing the peak closed-loop gain. Set `TargetGain = Inf` to just stabilize the closed-loop system.

**Default:** 0

## 'TolGain'

Relative tolerance for termination. The optimization terminates when the  $H_\infty$  norm decreases by less than `TolGain` over 10 consecutive iterations. Increasing `TolGain` speeds up termination, and decreasing `TolGain` yields tighter final values.

**Default:** 0.001

## 'MaxFrequency'

Maximum closed-loop natural frequency.

Setting `MaxFrequency` constrains the closed-loop poles to satisfy  $|p| < \text{MaxFrequency}$ .

To let `hinfstruct` choose the closed-loop poles automatically based upon the system's open-loop dynamics, set `MaxFrequency = Inf`. To prevent unwanted fast dynamics or high-gain control, set `MaxFrequency` to a finite value.

Specify `MaxFrequency` in units of `1/TimeUnit`, relative to the `TimeUnit` property of the system you are tuning.

**Default:** `Inf`

## 'MinDecay'

Minimum decay rate for closed-loop poles

Constrains the closed-loop poles to satisfy  $\text{Re}(p) < -\text{MinDecay}$ . Increase this value to improve the stability of closed-loop poles that do not affect the closed-loop gain due to pole/zero cancellations.

Specify `MinDecay` in units of `1/TimeUnit`, relative to the `TimeUnit` property of the system you are tuning.

**Default:** `1e-7`

## Output Arguments

### **options**

Option set containing the specified options for the `hinfstruct` command.

## Examples

### **Create Options Set for hinfstruct**

Create an options set for a `hinfstruct` run using three random restarts and a stability offset of 0.001. Also, configure the `hinfstruct` run to stop as soon as the closed-loop gain is smaller than 1.

```
options = hinfstructOptions('TargetGain',1,...  
                            'RandomStart',3,'StableOffset',1e-3);
```

# hinfstructOptions

---

Alternatively, use dot notation to set the values of options.

```
options = hinfstructOptions;  
options.TargetGain = 1;  
options.RandomStart = 3;  
options.StableOffset = 1e-3;
```

## Configure Option Set for Parallel Optimization Runs

Configure an option set for a `hinfstruct` run using 20 random restarts. Execute these independent optimization runs concurrently on multiple workers in a parallel pool.

If you have the Parallel Computing Toolbox software installed, you can use parallel computing to speed up `hinfstruct` tuning of fixed-structure control systems. When you run multiple randomized `hinfstruct` optimization starts, parallel computing speeds up tuning by distributing the optimization runs among workers.

If **Automatically create a parallel pool** is not selected in your Parallel Computing Toolbox preferences, manually start a parallel pool using `parpool`. For example:

```
parpool;
```

If **Automatically create a parallel pool** is selected in your preferences, you do not need to manually start a pool.

Create an `hinfstructOptions` set that specifies 20 random restarts to run in parallel.

```
options = hinfstructOptions('RandomStart',20,'UseParallel',true);
```

Setting `UseParallel` to `true` enables parallel processing by distributing the randomized starts among available workers in the parallel pool.

Use the `hinfstructOptions` set when you call `hinfstruct`. For example, suppose you have already created a tunable closed loop model



CLO. In this case, the following command uses parallel computing to tune CLO.

```
[CL,gamma,info] = hinfstruct(CLO,options);
```

## See Also

[hinfstruct](#)

# hinfosyn

**Purpose** Compute  $H_\infty$  optimal controller for LTI plant


**Syntax**  
[K,CL,GAM,INFO] = hinfosyn(P)  
[K,CL,GAM,INFO] = hinfosyn(P,NMEAS,NCON)  
[K,CL,GAM,INFO] = hinfosyn(P,NMEAS,NCON,KEY1,VALUE1,KEY2,VALUE2,...)

**Description** hinfosyn computes a stabilizing  $H_\infty$  optimal lti/ss controller K for a partitioned lti plant P.

$$P = \left[ \begin{array}{c|cc} A & B_1 & B_2 \\ \hline C_1 & D_{11} & D_{12} \\ C_2 & D_{21} & D_{22} \end{array} \right]$$

The controller, K, stabilizes the P and has the same number of states as P. The system P is partitioned where inputs to  $B_1$  are the disturbances, inputs to  $B_2$  are the control inputs, output of  $C_1$  are the errors to be kept small, and outputs of  $C_2$  are the output measurements provided to the controller.  $B_2$  has column size (NCON) and  $C_2$  has row size (NMEAS). The optional KEY and VALUE inputs determine tolerance, solution method and so forth.

The closed-loop system is returned in CL. This closed-loop system is given by  $CL = \text{lft}(P,K)$  as in the following diagram.

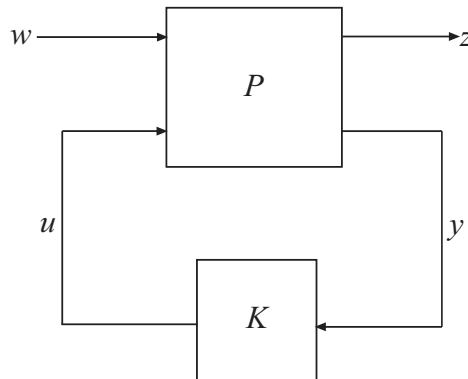

The achieved  $H_\infty$  cost  $\gamma$  is returned as GAM. The struct array INFO contains additional information about the design.

## Optional Input Arguments

Property	Value	Description
'GMAX'	real	Initial upper bound on GAM (default=Inf)
'GMIN'	real	Initial lower bound on GAM (default=0)
'TOLGAM'	real	Relative error tolerance for GAM (default=.01)
'S0'	real	Frequency S0 at which entropy is evaluated, only applies to METHOD 'maxe' (default=Inf)
'METHOD'	'ric'	Standard 2-Riccati solution (default)
	'lmi'	LMI solution
	'maxe'	Maximum entropy solution
'DISPLAY'	'off'	No command window display, or command window displays synthesis progress information (default)
	'on'	

When DISPLAY='on', the hinfsyn program displays several variables indicating the progress of the algorithm. For each  $\gamma$  value being tested, the minimum magnitude, real part of the eigenvalues of the  $X$  and  $Y$  Hamiltonian matrices are displayed along with the minimum eigenvalue of  $X_\infty$  and  $Y_\infty$ , which are the solutions to the  $X$  and  $Y$  Riccati equations, respectively. The maximum eigenvalue of  $X_\infty Y_\infty$ , scaled by  $\gamma^{-2}$ , is also displayed. A # sign is placed to the right of the condition that failed in the printout.

Output Arguments	Description
K	lft controller
CL= lft(P,K)	lft closed-loop system $T_{y_1 u_1}$
GAM = norm(CL, Inf)	$H_\infty$ cost $\gamma = \ T_{y_1 u_1}\ _\infty$
INFO	Additional output information

Additional output — structure array **INFO** containing possible additional information depending on **METHOD**)

INFO.AS	All solutions controller, lft two-port LFT
INFO.KFI	Full information gain matrix (constant feedback $u_2(t) = K_{FI} \begin{bmatrix} x(t) \\ u_1(t) \end{bmatrix}$
INFO.KFC	Full control gain matrix (constant output-injection; $K_{FC}$ is the dual of $K_{FI}$ )
INFO.GAMFI	$H_\infty$ cost for full information $K_{FI}$
INFO.GAMFC	$H_\infty$ cost for full control $K_{FC}$

## Algorithms

The default 'ric' method uses the two-Riccati formulae ([1],[2]) with loopshifting [3]. In the case of the 'lmi' method, hifsyn employs the LMI technique ([4],[5],[6]). With 'METHOD' 'maxe', K returns the max entropy  $H_\infty$  controller that minimize an entropy integral relating to the point s0; i.e.,

$$\text{Entropy} = \frac{\gamma^2}{2\pi} \int_{-\infty}^{\infty} \ln \left| \det I - \gamma^{-2} T_{y_1 u_1}(j\omega)' T_{y_1 u_1}(j\omega) \right| \left[ \frac{s_0^2}{s_0^2 + \omega^2} \right] d\omega$$

where  $T_{y_1 u_1}$  is the closed-loop transfer function CL. With all methods, hifsyn uses a standard  $\gamma$ -iteration technique to determine the optimal value of  $\gamma$ . Starting with high and low estimates of  $\gamma$ . The  $\gamma$ -iteration is a *bisection algorithm* that iterates on the value of  $\gamma$  in an effort to approach the optimal  $H_\infty$  control design. The stopping criterion for the bisection algorithm requires the relative difference between the last  $\gamma$  value that failed and the last  $\gamma$  value that passed be less than TOLGAM (default = .01)

At each value of  $\gamma$ , the algorithm employed requires tests to determine whether a solution exists for a given  $\gamma$  value. In the case of the 'ric' method, the conditions checked for the existence of a solution are:

- $H$  and  $J$  Hamiltonian matrices (which are formed from the state-space data of  $P$  and the  $\gamma$  level) must have no imaginary-axis eigenvalues.
- the stabilizing Riccati solutions  $X_\infty$  and  $Y_\infty$  associated with the Hamiltonian matrices must exist and be positive, semi-definite.
- spectral radius of  $(X_\infty, Y_\infty)$  must be less than or equal to  $\gamma^2$ .

When, DISPLAY is 'on', the hifsyn program displays several variables, which indicate which of the above conditions are satisfied for each  $\gamma$  value being tested. In the case of the default 'ric' method, the display includes the current value of  $\gamma$  being tested, real part of the eigenvalues of the  $X$  and  $Y$  Hamiltonian matrices along with the minimum eigenvalue of  $X_\infty$  and  $Y_\infty$ , which are the solutions to the  $X$  and  $Y$  Riccati equations, respectively. The maximum eigenvalue of  $X_\infty Y_\infty$ , scaled by  $\gamma^{-2}$ , is also displayed. A # sign is placed to the right of the condition that failed in the printout. A similar display is produced with method 'lmi'

The algorithm works best when the following conditions are satisfied by the plant:

$D_{12}$  and  $D_{21}$  have full rank.

$\begin{bmatrix} A - j\omega I & B_2 \\ C_1 & D_{12} \end{bmatrix}$  has full column rank for all  $\omega \in R$ .

$\begin{bmatrix} A - j\omega I & B_1 \\ C_2 & D_{21} \end{bmatrix}$  has full row rank for all  $\omega \in R$ .

When the above rank conditions do not hold, the controller may have undesirable properties: If  $D_{12}$  and  $D_{21}$  are not full rank, the  $H_\infty$  controller  $K$  may have large high-frequency gain. If either of the latter two rank conditions does not hold at some frequency  $\omega$ , the controller may have very lightly damped poles near that frequency  $\omega$ .


In general, the solution to the infinity-norm optimal control problem is non-unique. The controller returned by `hinfsyn` is only one particular solution,  $K$ . When the 'ric' method is selected, the `INFO.AS` field of `INFO` contains the all- solution controller parameterization  $K_{AS}$ . All solutions to the infinity-norm control problem are parameterized by a free stable contraction map  $Q$ , which is constrained by  $\|Q\|_\infty < 1$ . In other words, the solutions include every stabilizing controller  $K(s)$  that makes

$$\|T_{y_1 u_1}\|_\infty \square \sup_{\omega} \sigma_{\max}(T_{y_1 u_1}(j\omega)) < \gamma.$$

These controllers are given by:

$$K = \text{lft}(\text{INFO.AS}, Q)$$

where  $Q$  is a stable LTI system satisfying  $\text{norm}(Q, \text{Inf}) < 1$ .

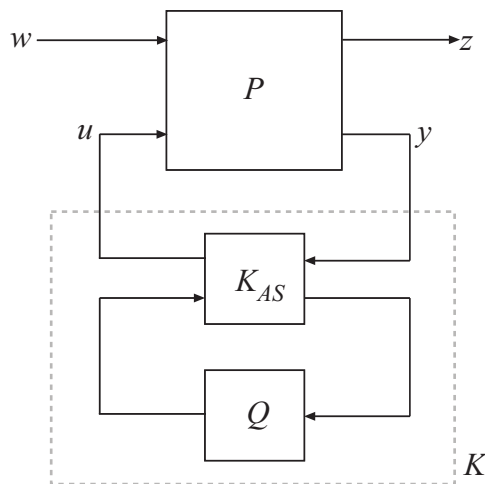

An important use of the infinity-norm control theory is for direct shaping of closed-loop singular value Bode plots of control systems. In such cases, the system  $P$  is typically the plant augmented with suitable loop-shaping filters — see `mixsyn`.

## Examples

Following are three simple problems solved via `hinfsyn`.

**Example 1:** A random 4-by-5 plant with 3-states, `NMEAS=2`, `NCON=2`

```
rng(0, 'twister');
P = rss(3,4,5);
[K,CL,GAM] = hinfsyn(P,2,2);
```

The optimal  $H_\infty$  cost in this case is `GAM = 1.3940`. You verify

that  $\|T_{y_1 u_1}\|_\infty \square \sup_{\omega} \sigma_{\max}(T_{y_1 u_1}(j\omega)) < \gamma$  with a sigma plot

```
sigma(CL, ss(GAM));
```

**Example 2:** Mixed-Sensitivity

```
G(s) = \frac{s-1}{s-1}, W_1 = \frac{0.1(s+1000)}{100s+1}, W_2 = 0.1, \text{ no } W_3.
s=zpk('s');
G=(s-1)/(s+1);
W1=0.1*(s+100)/(100*s+1); W2=0.1; W3=[];
P=augw(G,W1,W2,W3);
[K,CL,GAM]=hinfsyn(P);
sigma(CL,ss(GAM));
```

In this case,  $GAM = 0.1854 = -14.6386$  db

**Example 3:** Mixed sensitivity with  $W_1$  removed.

```
s=zpk('s');
G=(s-1)/(s+1);
W1=[]; W2=0.1; W3=[];
P=augw(G,W1,W2,W3);
[K,CL,GAM]=hinfsyn(P);
```

In this case,  $GAM=0$ ,  $K=0$ , and  $CL=K*(1+G*K)=0$ .

## Limitation

The plant must be stabilizable from the control inputs  $u$  and detectable from the measurement output  $y$ :

- $(A, B_2)$  must be stabilizable and  $(C_2, A)$  must be detectable.

Otherwise, hinfsyn returns an error.

## References

- [1] Glover, K., and J.C. Doyle, "State-space formulae for all stabilizing controllers that satisfy an  $H_\infty$  norm bound and relations to risk sensitivity," *Systems & Control Letters*, vol. 11, no. 8, pp. 167–172, 1988.
- [2] Doyle, J.C., K. Glover, P. Khargonekar, and B. Francis, "State-space solutions to standard  $H_2$  and  $H_\infty$  control problems," *IEEE Transactions on Automatic Control*, vol. 34, no. 8, pp. 831–847, August 1989



[3] Safonov, M.G., D.J.N. Limebeer, and R.Y. Chiang, “Simplifying the  $H_\infty$  Theory via Loop Shifting, Matrix Pencil and Descriptor Concepts”, *Int. J. Contr.*, vol. 50, no. 6, pp. 2467-2488, 1989.

[4] Packard, A., K. Zhou, P. Pandey, J. Leonhardson, and G. Balas, “Optimal, constant I/O similarity scaling for full-information and state-feedback problems,” *Systems & Control Letters*, vol. 19, no. 4, pp. 271–280, 1992.

[5] Gahinet, P., and P. Apkarian, “A linear matrix inequality approach to  $H_\infty$ -control,” *Int J. Robust and Nonlinear Control*, vol. 4, no. 4, pp. 421–448, 1994.

[6] Iwasaki, T., and R.E. Skelton, “All controllers for the general  $H_\infty$ -control problem: LMI existence conditions and state space formulas,” *Automatica*, vol. 30, no. 8, pp. 1307–1317, 1994.

**See Also**

augw | h2syn | hinfstruct | loopsyn | mktito | ncfsyn

# icomplexify

---

**Purpose**            Helper function for complexify

**Syntax**            `DeltaR = icomplexify(DeltaCR)`

**Description**        `icomplexify` works on structures to extract a real value from a pair of related fields.

`DeltaR = icomplexify(DeltaCR)` affects field pairs of `DeltaCR` named `'foo'` and `'foo_cmpxfy'` where `'foo'` can be any field name. `DeltaR` is the same as `DeltaCR` except that the fields `'foo_cmpxfy'` are removed. `complexify`, by default, complexifies the real uncertainty with `ucomplex` atoms, though optionally `ultidyn` atoms can be used. If a `ucomplex` uncertainty was used to complexify the uncertain system, the real parts of `'foo_cmpxfy'` are added to the real parts of `'foo'`. If a `ultidyn` uncertainty was used to complexify the uncertain system, only the real parts of `'foo'` are returned.

**See Also**            `complexify` | `robuststab`


**Purpose** Create empty iconnect (interconnection) objects

**Syntax** H = iconnect

**Description** Interconnection objects (class iconnect) are an alternative to sysic, and are used to build complex interconnections of uncertain matrices and systems.

An iconnect object has 3 fields to be set by the user, Input, Output and Equation. Input and Output are icsignal objects, while Equation is a cell-array of equality constraints (using equate) on icsignal objects. Once these are specified, then the System property is the input/output model, implied by the constraints in Equation, relating the variables defined in Input and Output.

**Examples** iconnect can be used to create the transfer matrix M as described in the following figure.

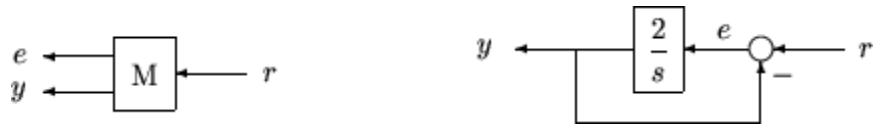

Create three scalar icsignal: r, e and y. Create an empty iconnect object, M. Define the output of the interconnection to be [e; y], and the input to be r. Define two constraints among the variables: e = r-y, and y = (2/s) e. Get the transfer function representation of the relationship between the input (r) and the output [e; y].

```

r = icsignal(1);
e = icsignal(1);
y = icsignal(1);
M = iconnect;
M.Input = r;
M.Output = [e;y];
M.Equation{1} = equate(e,r-y);
M.Equation{2} = equate(y,tf(2,[1 0])*e);
tf(M.System)

```

The transfer functions from input to outputs are

$$\text{\#1: } \frac{s}{s + 2}$$

$$\text{\#2: } \frac{2}{s + 2}$$

By not explicitly introducing  $e$ , this can be done more concisely with only one equality constraint.

```
r = icsignal(1);
y = icsignal(1);
N = iconnect;
N.Input = r;
N.Output = [r-y;y];
N.Equation{1} = equate(y,tf(2,[1 0])*(r-y));
tf(N.System)
```

You have created the same transfer functions from input to outputs.

$$\text{\#1: } \frac{s}{s + 2}$$

$$\text{\#2: } \frac{2}{s + 2}$$

You can also specify uncertain, multivariable interconnections using `iconnect`. Consider two uncertain motor/generator constraints among 4 variables  $[V;I;T;W]$ ,  $V-R*I-K*W=0$ , and  $T=K*I$ . Find the uncertain  $2 \times 2$  matrix  $B$  so that  $[V;T] = B*[W;I]$ .


```
R = ureal('R',1,'Percentage',[-10 40]);
```

```


K = ureal('K',2e-3,'Percentage',[-30 30]);
V = icsignal(1);
I = icsignal(1);
T = icsignal(1);
W = icsignal(1);
M = iconnect;
M.Input = [W;I];
M.Output = [V;T];
M.Equation{1} = equate(V-R*I-K*W,iczero(1));
M.Equation{2} = equate(T,K*I);
B = M.System
UMAT: 2 Rows, 2 Columns
    K: real, nominal = 0.002, variability = [-30 30]%, 2 occurrences
    R: real, nominal = 1, variability = [-10 40]%, 1 occurrence
B.NominalValue
ans =
    0.0020    1.0000
         0    0.0020

```

A simple system interconnection, identical to the system illustrated in the sysic reference pages. Consider a three-input, two-output state-space matrix  $T$ ,

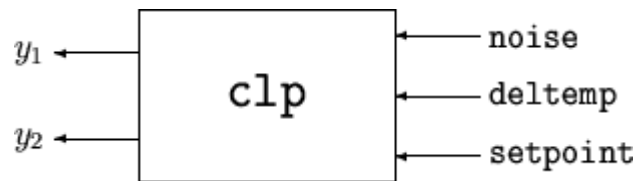

which has internal structure

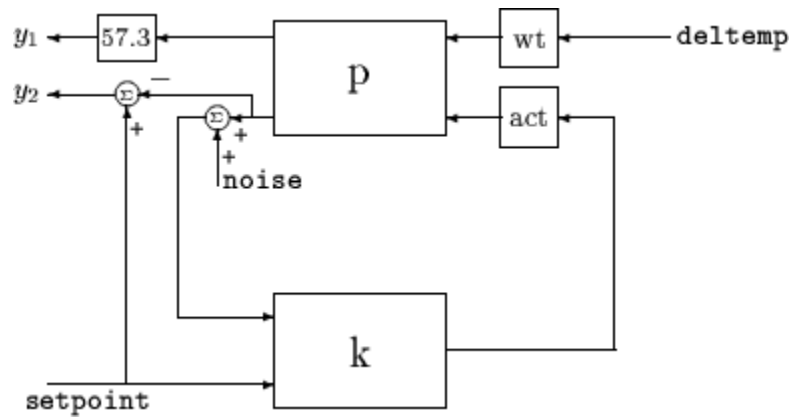

```
P = rss(3,2,2);
K = rss(1,1,2);
A = rss(1,1,1);
W = rss(1,1,1);
M = iconnect;
noise = icsignal(1);
deltemp = icsignal(1);
setpoint = icsignal(1);
yp = icsignal(2);
rad2deg = 57.3
rad2deg =
    57.3000
M.Equation{1} = equate(yp,P*[W*deltemp;A*K*[noise+yp(2);setpoint]]);
M.Input = [noise;deltemp;setpoint];
M.Output = [rad2deg*yp(1);setpoint-yp(2)];
T = M.System;
size(T)
State-space model with 2 outputs, 3 inputs, and 6 states.
```

## Algorithms

Each equation represents an equality constraint among the variables. You choose the input and output variables, and the `imp2exp` function makes the implicit relationship between them explicit.

**Limitations**

The syntax for `iconnect` objects and `icsignals` is very flexible. Without care, you can build inefficient (i.e., nonminimal) representations where the state dimension of the interconnection is greater than the sum of the state dimensions of the components. This is in contrast to `sysic`. In `sysic`, the syntax used to specify inputs to systems (the `input_to_ListedSubSystemName` variable) forces you to include each subsystem of the interconnection only once in the equations. Hence, interconnections formed with `sysic` are componentwise minimal. That is, the state dimension of the interconnection equals the sum of the state dimensions of the components.

**See Also**

`icsignal` | `sysic`

# icsignal

---

**Purpose** Create icsignal object of specified dimension

**Syntax** `v = icsignal(n);`  
`v = icsignal(n, 'name')`

**Description** `icsignal` creates an `icsignal` object, which is a symbolic column vector. The `icsignal` object is used with `iconnect` objects to specify signal constraints described by the interconnection of components.

`v = icsignal(n)` creates an `icsignal` object of vector length `n`. The value of `n` must be a nonnegative integer. `icsignal` objects are symbolic column vectors, used in conjunction with `iconnect` (interconnection) objects to specify the signal constraints described by an interconnection of components.

`v = icsignal(n, name)` creates an `icsignal` object of dimension `n`, with internal name identifier given by the character string argument `name`.

**See Also** `iconnect` | `sysic`



**Purpose**

System realization via Hankel singular value decomposition

**Syntax**

```
[a,b,c,d,totbnd,hsv] = imp2ss(y)
[a,b,c,d,totbnd,hsv] = imp2ss(y,ts,nu,ny,tol)
[ss,totbnd,hsv] = imp2ss(imp)
[ss,totbnd,hsv] = imp2ss(imp,tol)
```

**Description**

The function `imp2ss` produces an approximate state-space realization of a given impulse response

```
imp=mksys(y,t,nu,ny,'imp');
```

using the Hankel SVD method proposed by S. Kung [2]. A continuous-time realization is computed via the inverse Tustin transform (using `bilin`) if  $t$  is positive; otherwise a discrete-time realization is returned. In the SISO case the variable  $y$  is the impulse response vector; in the MIMO case  $y$  is an  $N+1$ -column matrix containing  $N+1$  time samples of the matrix-valued impulse response  $H_0, \dots, H_N$  of an  $nu$ -input,  $ny$ -output system stored row-wise:

$$y = [H_0(:)'; H_1(:)'; H_2(:)'; \dots ; H_N(:)']$$

The variable  $tol$  bounds the  $H_\infty$  norm of the error between the approximate realization  $(a, b, c, d)$  and an exact realization of  $y$ ; the order, say  $n$ , of the realization  $(a, b, c, d)$  is determined by the infinity norm error bound specified by the input variable  $tol$ . The inputs  $ts$ ,  $nu$ ,  $ny$ ,  $tol$  are optional; if not present they default to the values  $ts = 0$ ,  $nu = 1$ ,  $ny = (\text{number of rows of } y)/nu$ ,  $tol = 0.01\bar{\sigma}_1$ . The output  $hsv = [\bar{\sigma}_1, \bar{\sigma}_2, \dots]'$  returns the singular values (arranged in descending order of magnitude) of the Hankel matrix:

$$\Gamma = \begin{bmatrix} H_1 & H_2 & H_3 & \dots & H_N \\ H_2 & H_3 & H_4 & \dots & 0 \\ H_3 & H_4 & H_5 & \dots & 0 \\ \vdots & \vdots & \vdots & \ddots & \vdots \\ H_N & 0 & \dots & \dots & 0s \end{bmatrix}$$

Denoting by  $G_N$  a high-order exact realization of  $y$ , the low-order approximate model  $G$  enjoys the  $H_\infty$  norm bound

$$\|G - G_N\|_\infty \leq \text{totbnd}$$

where

$$\text{totbnd} = 2 \sum_{i=n+1}^N \bar{\sigma}_i.$$

## Algorithms

The realization  $(a, b, c, d)$  is computed using the Hankel SVD procedure proposed by Kung [2] as a method for approximately implementing the classical Hankel factorization realization algorithm. Kung's SVD realization procedure was subsequently shown to be equivalent to doing balanced truncation (`balmr`) on an exact state-space realization of the finite impulse response  $\{y(1), \dots, y(N)\}$  [3]. The infinity norm error bound for discrete balanced truncation was later derived by Al-Saggaf and Franklin [1]. The algorithm is as follows:

- 1** Form the Hankel matrix  $\Gamma$  from the data  $y$ .
- 2** Perform SVD on the Hankel matrix

$$\Gamma = U \Sigma V^* = [U_1 U_2] \begin{bmatrix} \Sigma_1 & 0 \\ 0 & \Sigma_2 \end{bmatrix} \begin{bmatrix} V^*_1 \\ V^*_2 \end{bmatrix} = U_1 \Sigma_1 V^*_1$$

where  $\Sigma_1$  has dimension  $n \times n$  and the entries of  $\Sigma_2$  are nearly zero.  $U_1$  and  $V_1$  have  $ny$  and  $nu$  columns, respectively.

**3** Partition the matrices  $U_1$  and  $V_1$  into three matrix blocks:

$$U_1 = \begin{bmatrix} U_{11} \\ U_{12} \\ U_{13} \end{bmatrix} \begin{bmatrix} V_{11} \\ V_{12} \\ V_{13} \end{bmatrix}$$

where  $U_{11}, U_{13} \in C^{ny \times n}$  and  $V_{11}, V_{13} \in C^{nu \times n}$ .

**4** A discrete state-space realization is computed as

$$\begin{aligned} A &= \Sigma_1^{-\frac{1}{2}} \bar{U} \Sigma_1^{-\frac{1}{2}} \\ B &= \Sigma_1^{-\frac{1}{2}} V_{*11} \\ C &= U_{11} \Sigma_1^{-\frac{1}{2}} \\ D &= H_0 \end{aligned}$$

where

$$\bar{U} = \begin{bmatrix} U_{11} \\ U_{12} \end{bmatrix} \begin{bmatrix} U_{12} \\ U_{13} \end{bmatrix}$$

**5** If the sampling time  $t$  is greater than zero, then the realization is converted to continuous time via the inverse of the Tustin transform

$$s = \frac{2z-1}{tz+1}.$$

Otherwise, this step is omitted and the discrete-time realization calculated in Step 4 is returned.

## References

- [1] Al-Saggaf, U.M., and G.F. Franklin, "An Error Bound for a Discrete Reduced Order Model of a Linear Multivariable System," *IEEE Trans. on Autom. Contr.*, AC-32, 1987, p. 815-819.

[2] Kung, S.Y., "A New Identification and Model Reduction Algorithm via Singular Value Decompositions," *Proc. Twelfth Asilomar Conf. on Circuits, Systems and Computers*, November 6-8, 1978, p. 705-714.

[3] Silverman, L.M., and M. Bettayeb, "Optimal Approximation of Linear Systems," *Proc. American Control Conf.*, San Francisco, CA, 1980.

<b>Purpose</b>	True for parameter-dependent systems
<b>Syntax</b>	<code>bool = ispsys(sys)</code>
<b>Description</b>	<code>bool = ispsys(sys)</code> returns 1 if <code>sys</code> is a polytopic or parameter-dependent system.
<b>See Also</b>	<code>psys</code>   <code>psinfo</code>

# isuncertain

---

**Purpose** Check whether argument is uncertain class type

**Syntax** B = isuncertain(A)

**Description** Returns true if input argument is uncertain, false otherwise. Uncertain classes are umat, ufrd, uss, ureal, ultidyn, ucomplex, ucomplexm, and udyn.

**Examples** In this example, you verify the correct operation of isuncertain on double, ureal, ss, and uss objects.

```
isuncertain(rand(3,4))
ans =
    0
isuncertain(ureal('p',4))
ans =
    1
isuncertain(rss(4,3,2))
ans =
    0
isuncertain(rss(4,3,2)*[ureal('p1',4) 6;0 1])
ans =
    1
```

**Limitations** isuncertain only checks the class of the input argument, and does not actually verify that the input argument is truly uncertain. Create a umat by *lifting* a constant (i.e., not-uncertain) matrix to the umat class.

```
A = umat([2 3;4 5;6 7]);
```

Note that although A is in class umat, it is not actually uncertain. Nevertheless, based on class, the result of isuncertain(A) is true.

```
isuncertain(A)
ans =
    1
```

The result of `simplify(A)` is a double, and hence not uncertain.

```
isuncertain(simplify(A))
```

```
ans =
```

```
    0
```

# lftdata

---


**Purpose** Decompose uncertain objects into fixed normalized and fixed uncertain parts

**Syntax**

```
[M,Delta] = lftdata(A);  
[M,Delta] = lftdata(A,List);  
[M,Delta,Blkstruct] = lftdata(A);  
[M,Delta,Blkstruct,Normunc] = lftdata(A);
```

**Description** `lftdata` decomposes an uncertain object into a fixed certain part and a normalized uncertain part. `lftdata` can also partially decompose an uncertain object into an uncertain part and a normalized uncertain part. Uncertain objects (`umat`, `ufrd`, `uss`) are represented as certain (i.e., not-uncertain) objects in feedback with block-diagonal concatenations of uncertain elements.

`[M,Delta] = lftdata(A)` separates the uncertain object `A` into a certain object `M` and a normalized uncertain matrix `Delta` such that `A` is equal to `lft(Delta,M)`, as shown below.

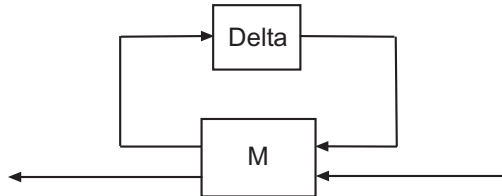

If `A` is a `umat`, then `M` will be `double`; if `A` is a `uss`, then `M` will be `ss`; if `A` is a `ufrd`, then `M` will be `frd`. In all cases, `Delta` is a `umat`.

`[M,Delta] = lftdata(A,List)` separates the uncertain object `A` into an uncertain object `M`, in feedback with a normalized uncertain matrix `Delta`. `List` is a cell (or char) array of names of uncertain elements of `A` that make up `Delta`. All other uncertainty in `A` remains in `M`.

`lftdata(A,fieldnames(A.Uncertainty))` is the same as `lftdata(A)`.

`[M,DELTA,BLKSTRUCT] = lftdata(A)` returns an  $N$ -by-1 structure array `BLKSTRUCT`, where `BLKSTRUCT(i)` describes the  $i$ -th normalized



uncertain element. This uncertainty description can be passed directly to the low-level structured singular value analysis function `mussv`.

`[M,DELTA,BLKSTRUCT,NORMUNC] = lftdata(A)` returns the cell array `NORMUNC` of normalized uncertain elements. Each normalized element has the string 'Normalized' appended to its original name to avoid confusion. Note that `lft(blkdiag(NORMUNC{:}),M)` is equivalent to `A`.

## Examples

Create an uncertain matrix `A` with 3 uncertain parameters `p1`, `p2` and `p3`. You can decompose `A` into its certain, `M`, and normalized uncertain parts, `Delta`.

```
p1 = ureal('p1',-3,'perc',40);
p2 = ucomplex('p2',2);
A = [p1 p1+p2;1 p2];
[M,Delta] = lftdata(A);
```

You can inspect the difference between the original uncertain matrix, `A`, and the result formed by combining the two results from the decomposition.

```
simplify(A-lft(Delta,M))
ans =
     0     0
     0     0

M
M =
     0     0  1.0954  1.0954
     0     0     0  1.0000
  1.0954  1.0000 -3.0000 -1.0000
     0  1.0000  1.0000  2.0000
```

You can check the worst-case norm of the uncertain part using `wcnorm`. Compare samples of the uncertain part `A` with the uncertain matrix `A`.

```
wcn = wcnorm(Delta)
wcn =
  lbound: 1.0000
```

```
        ubound: 1.0001
usample(Delta,5)
ans(:,:,1) =
    0.8012          0
         0    0.2499 + 0.6946i
ans(:,:,2) =
    0.4919          0
         0    0.2863 + 0.6033i
ans(:,:,3) =
   -0.1040          0
         0    0.7322 - 0.3752i
ans(:,:,4) =
    0.8296          0
         0    0.6831 + 0.1124i
ans(:,:,5) =
    0.6886          0
         0    0.0838 + 0.3562i
```

## Uncertain Systems

Create an uncertain matrix A with 2 uncertain real parameters v1 and v2 and create an uncertain system G using A as the dynamic matrix and simple matrices for the input and output.

```
A = [ureal('p1',-3,'perc',40) 1;1 ureal('p2',-2)];
sys = ss(A,[1;0],[0 1],0);
sys.InputGroup.ActualIn = 1;
sys.OutputGroup.ActualOut = 1;
```

You can decompose G into a certain system, Msys, and a normalized uncertain matrix, Delta. You can see from Msys that it is certain and that the input and output groups have been adjusted.

```
[Msys,Delta] = lftdata(sys);
Msys
a =
```

	x1	x2
x1	-3	1
x2	1	-2

b =

	u1	u2	u3
x1	1.095	0	1
x2	0	1	0

c =

	x1	x2
y1	1.095	0
y2	0	1
y3	0	1

d =

	u1	u2	u3
y1	0	0	0
y2	0	0	0
y3	0	0	0

Input groups:

Name	Channels
ActualIn	3
p1_NC	1
p2_NC	2

Output groups:

Name	Channels
ActualOut	3
p1_NC	1
p2_NC	2

Continuous-time model.

You can compute the norm on samples of the difference between the original uncertain matrix and the result formed by combining Msys and Delta.

```
norm(usample(sys-lft(Delta,Msys),'p1',4,'p2',3),'inf')
ans =
     0     0     0
     0     0     0
     0     0     0
     0     0     0
```

## Partial Decomposition

Create an uncertain matrix A and derive an uncertain matrix B using an implicit-to-explicit conversion, `imp2exp`. Note that B has 2 uncertain parameters R and K. You can decompose B into certain, M, and normalized uncertain parts, Delta.

```
R = ureal('R',1,'Percentage',[-10 40]);
K = ureal('K',2e-3,'Percentage',[-30 30]);
A = [1 -R 0 -K;0 -K 1 0];
Yidx = [1 3];
Uidx = [4 2];
B = imp2exp(A,Yidx,Uidx);
[M,Delta] = lftdata(B);
```

The same operation can be performed by defining the uncertain parameters, K and R, to be extracted.

```
[MK,DeltaR] = lftdata(B,'R');
MK
UMAT: 3 Rows, 3 Columns
  K: real, nominal = 0.002, variability = [-30 30]%, 2 occurrences
[MR,DeltaK] = lftdata(B,'K');
MR
UMAT: 4 Rows, 4 Columns
  R: real, nominal = 1, variability = [-10 40]%, 1 occurrence
```

```

simplify(B-lft(Delta,M))
ans =
     0     0
     0     0
simplify(B-lft(DeltaR,MK))
ans =
     0     0
     0     0
simplify(B-lft(DeltaK,MR))
ans =
     0     0
     0     0

```

Sample and inspect the uncertain part as well as the difference between the original uncertain matrix and the sampled matrix. You can see the result formed by combining the two results from the decomposition.

```

[Mall,Deltaall] = lftdata(B,{'K';'R'});
simplify(Mall)-M
ans =
     0     0     0     0     0
     0     0     0     0     0
     0     0     0     0     0
     0     0     0     0     0
     0     0     0     0     0

```

## See Also

[lft](#) | [ssdata](#)

# lmiedit

---

**Purpose** Specify or display systems of LMIs as MATLAB expressions

**Syntax** `lmiedit`

**Description** `lmiedit` is a graphical user interface for the symbolic specification of LMI problems. Typing `lmiedit` calls up a window with two editable text areas and various buttons. To specify an LMI system,

- 1** Give it a name (top of the window).
- 2** Declare each matrix variable (name and structure) in the upper half of the window. The structure is characterized by its type (S for symmetric block diagonal, R for unstructured, and G for other structures) and by an additional structure matrix similar to the second input argument of `lmivar`. Please use one line per matrix variable in the text editing areas.
- 3** Specify the LMIs as MATLAB expressions in the lower half of the window. An LMI can stretch over several lines. However, do not specify more than one LMI per line.

Once the LMI system is fully specified, you can perform the following operations by pressing the corresponding button:

- Visualize the sequence of `lmivar/lmiterm` commands needed to describe this LMI system (`view commands` buttons)
- Conversely, display the symbolic expression of the LMI system produced by a particular sequence of `lmivar/lmiterm` commands (click the `describe...` buttons)
- Save the symbolic description of the LMI system as a MATLAB string (`save` button). This description can be reloaded later on by pressing the `load` button
- Read a sequence of `lmivar/lmiterm` commands from a file (`read` button). The matrix expression of the LMI system specified by these commands is then displayed by clicking on `describe the LMIs...`

- Write in a file the sequence of `lmivar/lmiterm` commands needed to specify a particular LMI system (`write` button)
- Generate the internal representation of the LMI system by pressing `create`. The result is written in a MATLAB variable with the same name as the LMI system

## Tips

Editable text areas have built-in scrolling capabilities. To activate the scroll mode, click in the text area, maintain the mouse button down, and move the mouse up or down. The scroll mode is only active when all visible lines have been used.

## See Also

`lmivar` | `lmiterm` | `newlmi` | `lmiinfo`

# lmiinfo

---

**Purpose** Information about variables and term content of LMIs

**Syntax** `lmiinfo`

**Description** `lmiinfo` provides qualitative information about the system of LMIs `lmisys`. This includes the type and structure of the matrix variables, the number of diagonal blocks in the inner factors, and the term content of each block.

`lmiinfo` is an interactive facility where the user seeks specific pieces of information. General LMIs are displayed as

$$N' * L(x) * N < M' * R(x) * M$$

where  $N, M$  denote the outer factors and  $L, R$  the left and right inner factors. If the outer factors are missing, the LMI is simply written as

$$L(x) < R(x)$$

If its right side is zero, it is displayed as

$$N' * L(x) * N < 0$$

Information on the block structure and term content of  $L(x)$  and  $R(x)$  is also available. The term content of a block is symbolically displayed as

$$C1 + A1 * X2 * B1 + B1' * X2 * A1' + a2 * X1 + x3 * Q1$$

with the following conventions:

- $X1, X2, X3$  denote the problem variables. Upper-case  $X$  indicates matrix variables while lower-case  $x$  indicates scalar variables. The labels 1,2,3 refer to the first, second, and third matrix variable in the order of declaration.
- $Cj$  refers to constant terms. Special cases are  $I$  and  $-I$  ( $I$  = identity matrix).



- $A_j$ ,  $B_j$  denote the left and right coefficients of variable terms. Lower-case letters such as  $a_2$  indicate a scalar coefficient.
- $Q_j$  is used exclusively with scalar variables as in  $x_3 * Q_1$ .

The index  $j$  in  $A_j$ ,  $B_j$ ,  $C_j$ ,  $Q_j$  is a dummy label. Hence  $C_1$  may appear in several blocks or several LMIs without implying any connection between the corresponding constant terms. Exceptions to this rule are the notations  $A_1 * X_2 * A_1'$  and  $A_1 * X_2 * B_1 + B_1' * X_2' * A_1'$  which indicate symmetric terms and symmetric pairs in diagonal blocks.

## Examples

Consider the LMI

$$0 \begin{pmatrix} -2X + A^T Y B + B^T Y^T A + I & X C \\ C^T X & -z I \end{pmatrix}$$

where the matrix variables are  $X$  of Type 1,  $Y$  of Type 2, and  $z$  scalar. If this LMI is described in `lmis`, information about  $X$  and the LMI block structure can be obtained as follows:

```
lmiinfo(lmis)
```

```
LMI ORACLE
```

```
-----
```

```
This is a system of 1 LMI with 3 variable matrices
```

```
Do you want information on
```

```
(v) matrix variables      (l) LMIs      (q) quit
```

```
?> v
```

```
Which variable matrix (enter its index k between 1 and 3) ? 1
```

```
X1 is a 2x2 symmetric block diagonal matrix
its (1,1)-block is a full block of size 2
```

```
-----
```

This is a system of 1 LMI with 3 variable matrices  
Do you want information on  
    (v) matrix variables    (l) LMIs    (q) quit

?> l

Which LMI (enter its number k between 1 and 1) ? 1

    This LMI is of the form  
         $0 < R(x)$   
where the inner factor(s) has 2 diagonal block(s)

Do you want info on the right inner factor ?

    (w) whole factor    (b) only one block  
    (o) other LMI    (t) back to top level

?> w

Info about the right inner factor

    block (1,1) :  $I + a1*X1 + A2*X2*B2 + B2'*X2'*A2'$

    block (2,1) :  $A3*X1$

    block (2,2) :  $x3*A4$

    (w) whole factor    (b) only one block  
    (o) other LMI    (t) back to top level

-----

This is a system of 1 LMI with 3 variable matrices

Do you want information on

(v) matrix variables      (l) LMIs      (q) quit

?> q

It has been a pleasure serving you!

Note that the prompt symbol is ?> and that answers are either indices or letters. All blocks can be displayed at once with option (w), or you can prompt for specific blocks with option (b).

**Tips**

lmiinfo does not provide access to the numerical value of LMI coefficients.

**See Also**

decinfo | lminbr | matnbr | decnbr

# **lminbr**

---

**Purpose** Return number of LMIs in LMI system

**Syntax** `k = lminbr(lmisys)`

**Description** `lminbr` returns the number `k` of linear matrix inequalities in the LMI problem described in `lmisys`.

**See Also** `lmiinfo` | `matnbr`

**Purpose** Specify LMI regions for pole placement

**Syntax**  
`region = lmireg`  
`region = lmireg(reg1,reg2,...)`

**Description** `lmireg` is an interactive facility to specify the LMI regions involved in multi-objective  $H_\infty$  synthesis with pole placement constraints (see `msfsyn`). Recall that an LMI region is any convex subset  $D$  of the complex plane that can be characterized by an LMI in  $z$  and  $z^*$ , i.e.,

$$D = \{z \in C : L + Mz + M^T \bar{z} < 0\}$$

for some fixed real matrices  $M$  and  $L = L^T$ . This class of regions encompasses half planes, strips, conic sectors, disks, ellipses, and any intersection of the above.

Calling `lmireg` without argument starts an interactive query/answer session where you can specify the region of your choice. The matrix `region = [L, M]` is returned upon termination. This matrix description of the LMI region can be passed directly to `msfsyn` for synthesis purposes.

The function `lmireg` can also be used to intersect previously defined LMI regions `reg1, reg2, ...`. The output region is then the  $[L, M]$  description of the intersection of these regions.

**See Also** `msfsyn`

# lmiterm

---

**Purpose** Specify term content of LMIs

**Syntax** `lmiterm(termID,A,B,flag)`

**Description** `lmiterm` specifies the term content of an LMI one term at a time. Recall that *LMI term* refers to the elementary additive terms involved in the block-matrix expression of the LMI. Before using `lmiterm`, the LMI description must be initialized with `setlmis` and the matrix variables must be declared with `lmivar`. Each `lmiterm` command adds one extra term to the LMI system currently described.

LMI terms are one of the following entities:

- outer factors
- constant terms (fixed matrices)
- variable terms  $AXB$  or  $AX^TB$  where  $X$  is a matrix variable and  $A$  and  $B$  are given matrices called the term coefficients.

When describing an LMI with several blocks, remember to specify **only the terms in the blocks on or below the diagonal** (or equivalently, only the terms in blocks on or above the diagonal). For instance, specify the blocks (1,1), (2,1), and (2,2) in a two-block LMI.

In the calling of `lmiterm`, `termID` is a four-entry vector of integers specifying the term location and the matrix variable involved.

$$\text{termID}(1) = \begin{cases} +p \\ -p \end{cases}$$

where positive  $p$  is for terms on the *left-side* of the  $p$ -th LMI and negative  $p$  is for terms on the *right-side* of the  $p$ -th LMI.

Recall that, by convention, the left side always refers to the smaller side of the LMI. The index  $p$  is relative to the order of declaration and corresponds to the identifier returned by `newlmi`.

$$\text{termID}(2:3) = \begin{cases} [0,0] & \text{for outer factors} \\ [i,j] & \text{for terms in the } (i,j)\text{-th block of the left or right inner factor} \end{cases}$$

$$\text{termID}(4) = \begin{cases} 0 & \text{for outer factors} \\ x & \text{for variable terms } AXB \\ -x & \text{for variable terms } AX^T B \end{cases}$$

where  $x$  is the identifier of the matrix variable  $X$  as returned by `lmivar`.

The arguments  $A$  and  $B$  contain the numerical data and are set according to:

Type of Term	A	B
outer factor $N$	matrix value of $N$	omit
constant term $C$	matrix value of $C$	omit
variable term $AXB$ or $AX^T B$	matrix value of $A$ (1 if $A$ is absent)	matrix value of $B$ (1 if $B$ is absent)

Note that identity outer factors and zero constant terms need not be specified.

The extra argument `flag` is optional and concerns only conjugated expressions of the form

$$(AXB) + (AXB^T) = AXB + B^T X^{(T)} A^T$$

in *diagonal blocks*. Setting `flag = 's'` allows you to specify such expressions with a single `lmiterm` command. For instance,

```
lmiterm([1 1 1 X],A,1,'s')
```

adds the symmetrized expression  $AX + X^T A^T$  to the (1,1) block of the first LMI and summarizes the two commands

```
lmiterm([1 1 1 X],A,1)
```

# lmiterm

```
lmiterm([1 1 1 X],1,A')
```

Aside from being convenient, this shortcut also results in a more efficient representation of the LMI.

## Examples

Consider the LMI

$$\begin{pmatrix} 2AX_2A^T - x_3E + DD^T & B^T X_1 \\ X_1^T B & -I \end{pmatrix} < M^T \begin{pmatrix} CX_1C^T + CX_1^T C^T & 0 \\ 0 & -fX_2 \end{pmatrix} M$$

where  $X_1$ ,  $X_2$  are matrix variables of Types 2 and 1, respectively, and  $x_3$  is a scalar variable (Type 1).

After initializing the LMI description with `setlmis` and declaring the matrix variables with `lmivar`, the terms on the left side of this LMI are specified by:

```
lmiterm([1 1 1 X2],2*A,A') % 2*A*X2*A'  
lmiterm([1 1 1 x3],-1,E) % -x3*E  
lmiterm([1 1 1 0],D*D') % D*D'  
lmiterm([1 2 1 -X1],1,B) % X1'*B  
lmiterm([1 2 2 0],-1) % -I
```

Here  $X_1$ ,  $X_2$ ,  $X_3$  should be the variable identifiers returned by `lmivar`.

Similarly, the term content of the right side is specified by:

```
lmiterm([-1 0 0 0],M) % outer factor M  
lmiterm([-1 1 1 X1],C,C','s') % C*X1*C'+C*X1'*C'  
lmiterm([-1 2 2 X2],-f,1) % -f*X2
```

Note that  $CX_1C^T + CX_1^T C^T$  is specified by a single `lmiterm` command with the flag 's' to ensure proper symmetrization.

## See Also

`setlmis` | `lmivar` | `getlmis` | `lmiedit` | `newlmi`



**Purpose** Specify matrix variables in LMI problem

**Syntax**

```
X = lmivar(type,struct)
[X,n,sX] = lmivar(type,struct)
```

**Description** `lmivar` defines a new matrix variable  $X$  in the LMI system currently described. The optional output  $X$  is an identifier that can be used for subsequent reference to this new variable.

The first argument `type` selects among available types of variables and the second argument `struct` gives further information on the structure of  $X$  depending on its type. Available variable types include:

**type=1:** Symmetric matrices with a block-diagonal structure. Each diagonal block is either full (arbitrary symmetric matrix), scalar (a multiple of the identity matrix), or identically zero.

If  $X$  has  $R$  diagonal blocks, `struct` is an  $R$ -by-2 matrix where

- `struct(r,1)` is the size of the  $r$ -th block
- `struct(r,2)` is the type of the  $r$ -th block (1 for full, 0 for scalar, -1 for zero block).

**type=2:** Full  $m$ -by- $n$  rectangular matrix. Set `struct = [m,n]` in this case.

**type=3:** Other structures. With Type 3, each entry of  $X$  is specified as zero or  $\pm x$  where  $x_n$  is the  $n$ -th decision variable.

Accordingly, `struct` is a matrix of the same dimensions as  $X$  such that

- `struct(i,j)=0` if  $X(i,j)$  is a hard zero
- `struct(i,j)=n` if  $X(i,j) = x_n$
- `struct(i,j)= -n` if  $X(i,j) = -x_n$

Sophisticated matrix variable structures can be defined with Type 3. To specify a variable  $X$  of Type 3, first identify how many *free independent entries* are involved in  $X$ . These constitute the set of decision variables associated with  $X$ . If the problem already involves  $n$  decision variables, label the new free variables as  $x_{n+1}, \dots, x_{n+p}$ . The structure of  $X$  is then

defined in terms of  $x_{n+1}, \dots, x_{n+p}$  as indicated above. To help specify matrix variables of Type 3, `lmivar` optionally returns two extra outputs: (1) the total number  $n$  of scalar decision variables used so far and (2) a matrix `sX` showing the entry-wise dependence of  $X$  on the decision variables  $x_1, \dots, x_n$ .

## Examples

### Example 1

Consider an LMI system with three matrix variables  $X_1, X_2, X_3$  such that

- $X_1$  is a 3-by-3 symmetric matrix (unstructured),
- $X_2$  is a 2-by-4 rectangular matrix (unstructured),
- $X_3 =$

$$\begin{pmatrix} \Delta & 0 & 0 \\ 0 & \delta_1 & 0 \\ 0 & 0 & \delta_2 I_2 \end{pmatrix}$$

where  $\Delta$  is an arbitrary 5-by-5 symmetric matrix,  $\delta_1$  and  $\delta_2$  are scalars, and  $I_2$  denotes the identity matrix of size 2.

These three variables are defined by

```
setlmis([])
X1 = lmivar(1,[3 1])           % Type 1
X2 = lmivar(2,[2 4])           % Type 2 of dim. 2x4
X3 = lmivar(1,[5 1;1 0;2 0])  % Type 1
```

The last command defines  $X_3$  as a variable of Type 1 with one full block of size 5 and two scalar blocks of sizes 1 and 2, respectively.

### Example 2

Combined with the extra outputs  $n$  and `sX` of `lmivar`, Type 3 allows you to specify fairly complex matrix variable structures. For instance, consider a matrix variable  $X$  with structure

$$X = \begin{pmatrix} X_1 & 0 \\ 0 & X_2 \end{pmatrix}$$

where  $X_1$  and  $X_2$  are 2-by-3 and 3-by-2 rectangular matrices, respectively. You can specify this structure as follows:

- 1 Define the rectangular variables  $X_1$  and  $X_2$  by

```
setlmis([])
[X1,n,sX1] = lmivar(2,[2 3])
[X2,n,sX2] = lmivar(2,[3 2])
```

The outputs `sX1` and `sX2` give the decision variable content of  $X_1$  and  $X_2$ :

`sX1`

```
sX1 =
     1     2     3
     4     5     6
```

`sX2`

```
sX2 =
     7     8
     9    10
    11    12
```

For instance, `sX2(1,1)=7` means that the (1,1) entry of  $X_2$  is the seventh decision variable.

- 2 Use Type 3 to specify the matrix variable  $X$  and define its structure in terms of those of  $X_1$  and  $X_2$ :

```
[X,n,sX] = lmivar(3,[sX1,zeros(2);zeros(3),sX2])
```

The resulting variable  $X$  has the prescribed structure as confirmed by

# lmivar

---

sX

sX =

1	2	3	0	0
4	5	6	0	0
0	0	0	7	8
0	0	0	9	10
0	0	0	11	12

## See Also

setlmis | lmiterm | getlmis | lmiedit | skewdec | delmvar |  
setmvar

**Purpose** Stability margin analysis of LTI and Simulink feedback loops

**Syntax**

```
[cm,dm,mm] = loopmargin(L)
[m1,m2] = loopmargin(L,MFLAG)
[cmi,dmi,mmi,cmo,dmo,mmo,mmio] = loopmargin(P,C)
[m1,m2,m3] = loopmargin(P,C,MFLAG)
```

**Description** `[cm,dm,mm] = loopmargin(L)` analyzes the multivariable feedback loop consisting of the loop transfer matrix  $L$  (size  $N$ -by- $N$ ) in negative feedback with an  $N$ -by- $N$  identity matrix.

`cm`, or classical gain and phase margins, is an  $N$ -by-1 structure corresponding to loop-at-a-time gain and phase margins for each channel (See `allmargin` for details on the fields of `cm`.)

`dm` is an  $N$ -by-1 structure corresponding to loop-at-a-time disk gain and phase margins for each channel. The disk margin for the  $i$ -th feedback channel defines a circular region centered on the negative real axis at the average GainMargin (GM), e.g.  $(GM_{low} + GM_{high})/2$ , such that  $L(i, i)$  does not enter that region. Gain and phase disk margin bounds are derived from the radius of the circle, calculated based on the balanced sensitivity function.

`mm`, or multiloop disk margin, is a structure corresponding to simultaneous, independent, variations in the individual channels of loop transfer matrix  $L$ . `mm` calculates the largest region such that for all gain and phase variations, occurring independently in each channel, lie inside the region, that the closed-loop system is stable. Note that `mm` is a single structure, independent of because the number of channels, variations in all channels are handled simultaneously. As in the case for disk margin, the guaranteed bounds are calculated based on a balanced sensitivity function.


If  $L$  is a `ss`/`tf`/`zpk` object, the frequency range and number of frequency points used to calculate `dm` and `mm` margins are chosen automatically.

Output arguments can be limited to only those requested using an optional character string argument. `[m1,m2] = loopmargin(L, 'm,c')`

# loopmargin

returns the multi-loop diskmargin ('m') in m1, and the classical margins ('c') in m2. Use 'd' to specify the disk margin. This optional second argument may be any combination, in any order, of the 3 characters 'c', 'd' and 'm'.

[cmi,dmi,mmi,cmo,dmo,mmo,mmio] = (P,C) analyzes the multivariable feedback loop consisting of the controller C in negative feedback with the plant, P. C should only be the compensator in the feedback path, without reference channels, if it is a 2-Dof architecture. That is, if the closed-loop system has a 2-Dof architecture the reference channel of the controller should be eliminated, resulting in a 1-Dof architecture, as shown.

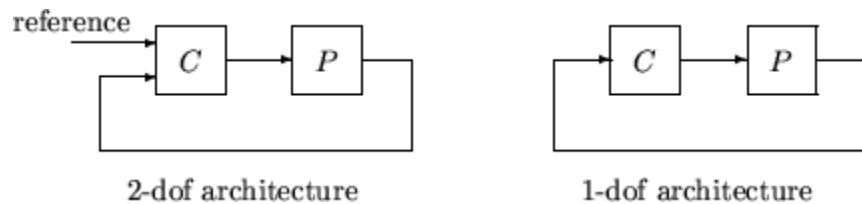

cmi,dmi and mmi structures correspond to the classical loop-at-a-time gain and phase margins, disk margins and multiloop channel margins at the plant input respectively. The structures cmo, dmo and mmo have the same fields as described for cmi, dmi and mmi though they correspond to the plant outputs. mmio, or multi-input/multi-output margins, is a structure corresponding to simultaneous, independent, variations in all the individual input and output channels of the feedback loops. mmio has the same fields as mmi and mmo.

If the closed-loop system is an ss/tf/zpk, the frequency range and number of points used to calculate cm, dm and mm margins are chosen automatically.

Output arguments can be limited to only those requested using an optional character string argument. [m1,m2,m3] = (L,'mo,ci,mm') returns the multi-loop diskmargin at the plant output ('mo') in m1, the classical margins at the plant input ('ci') in m2, and the disk margins for simultaneous, independent variations in all input and output channels ('mm') in m3. This optional third argument may be

any combination, in any order, of the 7 character pairs 'ci', 'di', 'mi', 'co', 'do', 'mo', and 'mm'.

## Usage with Simulink

`[cm, dm, mm] = loopmargin(Model, Blocks, Ports)` does a multi-loop stability margin analysis using Simulink Control Design software. `Model` specifies the name of the Simulink diagram for analysis. The margin analysis points are defined at the output ports (`Ports`) of blocks (`Blocks`) within the model. `Blocks` is a cell array of full block path names and `Ports` is a vector of the same dimension as `Blocks`. If all `Blocks` have a single output port, then `Ports` would be a vector of ones with the same length as `Blocks`.

Three types of stability margins are computed: loop-at-a-time classical gain and phase margins (`cm`), loop-at-a-time disk margins (`dm`) and a multi-loop disk margin (`mm`).

`[cm, dm, mm] = loopmargin(Model, Blocks, Ports, OP)` uses the operating point object `OP` to create linearized systems from the Simulink `Model`.

`[cm, dm, mm, info] = loopmargin(Model, Blocks, Ports, OP)` returns `info` in addition to the margins. `info` is a structure with fields `OperatingPoint`, `LinearizationIO` and `SignalNames` corresponding to the analysis.

Margin output arguments can be limited to only those requested using an optional character string argument. `INFO` is always the last output. For example, `[mm, cm, info] = loopmargin(Model, Blocks, Ports, 'm, c')` returns the multi-loop diskmargin ('m') in `mm`, the classical margins ('c') in `cm`, and the `info` structure.

## Basic Syntax

`[cm, dm, mm] = loopmargin(L)` `cm` is calculated using the `allmargin` command and has the same fields as `allmargin`. The `cm` is a structure with the following fields:

# loopmargin

Field	Description
GMFrequency	All -180 deg crossover frequencies (in radians-per-second)
GainMargin	Corresponding gain margins ( $GM = 1/L$ where L is the gain at crossover)
PhaseMargin	Corresponding phase margins (in degrees)
PMFrequency	All 0 dB crossover frequencies (in radians-per-second)
DelayMargin	Delay margins (in seconds for continuous-time systems, and multiples of the sample time for discrete-time systems)
Stable	1 if nominal closed loop is stable, 0 otherwise. If L is a frd or ufrd object, the Stable flag is set to NaN.

dm, or Disk Margin, is a structure with the following fields

Field	Description
GainMargin	Smallest gain variation (GM) such that a disk centered at the point $-(GM(1) + GM(2))/2$ would just touch the loop transfer function
PhaseMargin	Smallest phase variation, in degrees, corresponding to the disk described in the GainMargin field (degrees)
Frequency	Associated with GainMargin/PhaseMargin fields (in radians-per-second)

mm is a structure with the following fields.




Field	Description
GainMargin	Guaranteed bound on simultaneous, independent, gain variations allowed in all plant channels
PhaseMargin	Guaranteed bound on simultaneous, independent, phase variations allowed in all plant channels (degrees)
Frequency	Associated with GainMargin/PhaseMargin fields (in radians-per-second)

## Examples

### MIMO Loop-at-a-Time Margins

This example is designed to illustrate that loop-at-a-time margins (gain, phase, and/or distance to  $-1$ ) can be inaccurate measures of multivariable robustness margins. You will see that margins of the individual loops can be very sensitive to small perturbations within other loops.

The nominal closed-loop system considered here is as follows

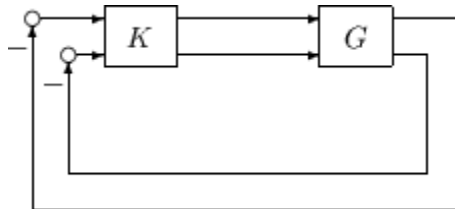

$G$  and  $K$  are 2-by-2 multiinput/multioutput (MIMO) systems, defined as

$$G = \frac{1}{s^2 + \alpha^2} \begin{bmatrix} s - \alpha^2 & \alpha(s+1) \\ -\alpha(s+1) & s - \alpha^2 \end{bmatrix}, \quad K = I_2$$

Set  $\alpha = 10$ , construct  $G$  in state-space form, and compute its frequency response.

$$a = [0 \ 10; -10 \ 0];$$

# loopmargin

---

```
b = eye(2);
c = [1 8; -10 1];
d = zeros(2,2);
G = ss(a,b,c,d);
K = [1 -2; 0 1];
[cmi,dmi,mmi,cmo,dmo,mmo,mmio] = loopmargin(G,K);
```

First consider the margins at the input to the plant. The first input channel has infinite gain margin and 90 degrees of phase margin based on the results from the `allmargin` command, `smi(1)`. The disk margin analysis, `dmi`, of the first channel provides similar results.

```
cmi(1)
ans =
    GMFrequency: [1x0 double]
    GainMargin: [1x0 double]
    PMFrequency: 21
    PhaseMargin: 90
    DMFrequency: 21
    DelayMargin: 0.0748
    Stable: 1
dmi(1)
ans =
    GainMargin: [0 Inf]
    PhaseMargin: [-90 90]
    Frequency: 1.1168
```

The second input channel has a gain margin of 2.105 and infinite phase margin based on the single-loop analysis, `cmi(2)`. The disk margin analysis, `dmi(2)`, which allows for simultaneous gain and phase variations a loop-at-a-time results in maximum gain margin variations of 0.475 and 2.105 and phase margin variations of +/- 39.18 degs.

```
cmi(2)
ans =
    GMFrequency: 0
    GainMargin: 2.1053
```

```
PMFrequency: [1x0 double]
PhaseMargin: [1x0 double]
DMFrequency: [1x0 double]
DelayMargin: [1x0 double]
    Stable: 1
dmi(2)
ans =
    GainMargin: [0.4749 2.1056]
    PhaseMargin: [-39.1912 39.1912]
    Frequency: 0.0200
```


The multiple margin analysis of the plant inputs corresponds to allowing simultaneous, independent gain and phase margin variations in each channel. Allowing independent variation of the input channels further reduces the tolerance of the closed-loop system to variations at the input to the plant. The multivariable margin analysis, `mmi`, leads to a maximum allowable gain margin variation of 0.728 and 1.373 and phase margin variations of  $\pm 17.87$  deg. Hence even though the first channel had infinite gain margin and 90 degrees of phase margin, allowing variation in both input channels leads to a factor of two reduction in the gain and phase margin.

```
mmi
mmi =
    GainMargin: [0.7283 1.3730]
    PhaseMargin: [-17.8659 17.8659]
    Frequency: 9.5238e-004
```

The guaranteed region of phase and gain variations for the closed-loop system can be illustrated graphically. The disk margin analysis, `dmi(2)`, indicates the closed-loop system will remain stable for simultaneous gain variations of 0.475 and 2.105 ( $\pm 6.465$  dB) and phase margin variations of  $\pm 39.18$  deg in the second input channel. This is denoted by the region associated with the large ellipse in the following figure. The multivariable margin analysis at the input to the plant, `mmi`, indicates that the closed-loop system will be stable for independent, simultaneous, gain margin variation up to 0.728 and 1.373 ( $\pm 2.753$  dB)

# loopmargin

and phase margin variations up to  $\pm 17.87$  deg (the dark ellipse region) in both input channels.

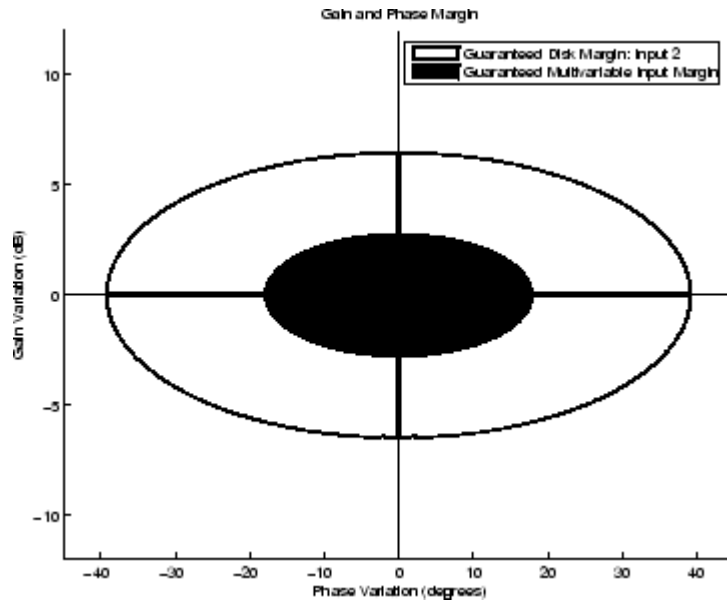

The output channels have single-loop margins of infinite gain and 90 deg phase variation. The output multivariable margin analysis, `mimo`, leads to a maximum allowable gain margin variation of 0.607 and 1.649 and phase margin variations of  $\pm 27.53$  degs. Hence even though both output channels had infinite gain margin and 90 degrees of phase margin, simultaneous variations in both channels significantly reduce the margins at the plant outputs.


```
mimo
mimo =
    GainMargin: [0.6065 1.6489]
    PhaseMargin: [-27.5293 27.5293]
    Frequency: 0.2287
```

If all the input and output channels are allowed to vary independently, `mmio`, the gain margin variations allowed are 0.827 and 1.210 and phase margin variations allowed are +/- 10.84 deg.

```
mmio
mmio =
    GainMargin: [0.8267 1.2097]
    PhaseMargin: [-10.8402 10.8402]
    Frequency: 0.2287
```

## Algorithms


Two well-known loop robustness measures are based on the sensitivity function  $S=(I-L)^{-1}$  and the complementary sensitivity function  $T=L(I-L)^{-1}$  where  $L$  is the loop gain matrix associated with the input or output loops broken simultaneously. In the following figure,  $S$  is the transfer matrix from summing junction input  $u$  to summing junction output  $e$ .  $T$  is the transfer matrix from  $u$  to  $y$ . If signals  $e$  and  $y$  are summed, the transfer matrix from  $u$  to  $e+y$  is given by  $(I+L) \cdot (I-L)^{-1}$ , the balanced sensitivity function. It can be shown (Dailey, 1991, Blight, Daily and Gangass, 1994) that each broken-loop gain can be perturbed by the complex gain  $(1+\Delta)(1-\Delta)$  where  $|\Delta| < 1/\mu(S+T)$  or  $|\Delta| < 1/\sigma_{max}(S+T)$  at each frequency without causing instability at that frequency. The peak value of  $\mu(S+T)$  or  $\sigma_{max}(S+T)$  gives a robustness guarantee for all frequencies, and for  $\mu(S+T)$  the guarantee is nonconservative (Blight, Daily and Gangass, 1994).

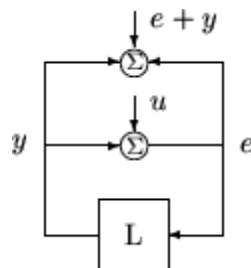

$$\begin{aligned}
 e &= (I - L)^{-1}u &= Su \\
 y &= L(I - L)^{-1}u &= Tu \\
 e + y &= (I + L) \cdot (I - L)^{-1}u &= (S + T)u
 \end{aligned}$$

This figure shows a comparison of a disk margin analysis with the classical notations of gain and phase margins.

# loopmargin

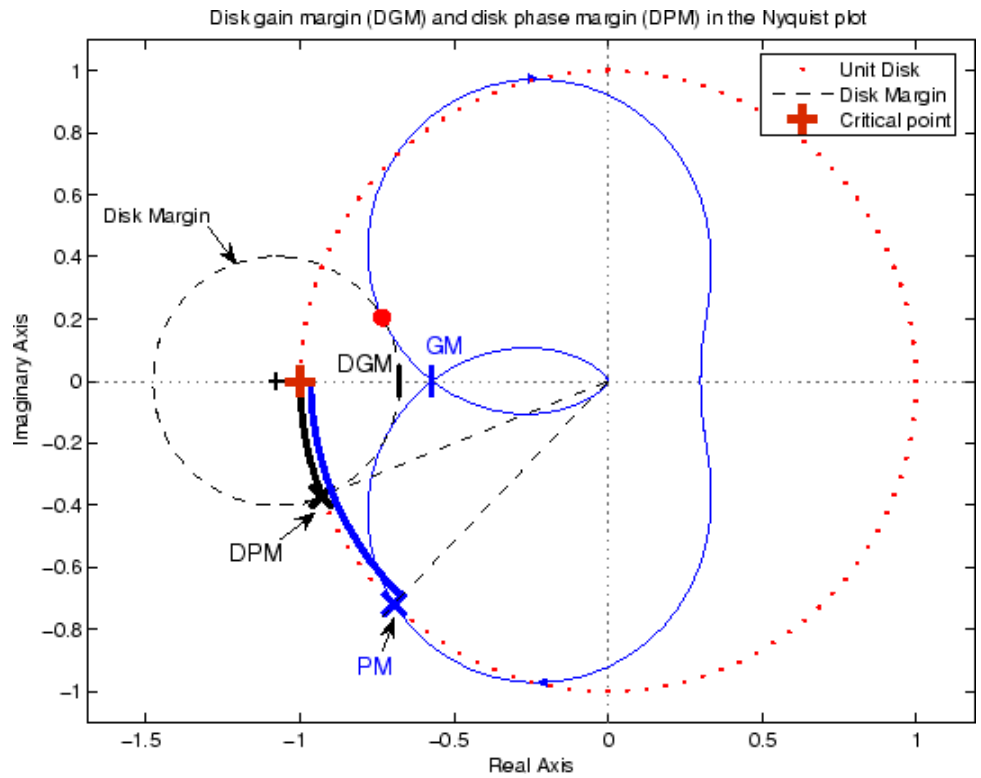

The Nyquist plot is of the loop transfer function  $L(s)$

$$L(s) = \frac{\frac{s}{30} + 1}{(s+1)(s^2 + 1.6s + 16)}$$

- The Nyquist plot of  $L$  corresponds to the blue line.
- The unit disk corresponds to the dotted red line.
- GM and PM indicate the location of the classical gain and phase margins for the system  $L$ .

- DGM and DPM correspond to the disk gain and phase margins. The disk margins provide a lower bound on classical gain and phase margins.
- The disk margin circle corresponds to the dashed black line. The disk margin corresponds to the largest disk centered at  $(\text{GMD} + 1/\text{GMD})/2$  that just touches the loop transfer function  $L$ . This location is indicated by the red dot.

The disk margin and multiple channel margins calculation involve the balanced sensitivity function  $S+T$ . For a given peak value of  $\mu(S+T)$ , any simultaneous phase and gain variations applied to each loop independently will not destabilize the system if the perturbations remain inside the corresponding circle or disk. This corresponds to the disk margin calculation to find  $\text{dmi}$  and  $\text{dmo}$ .

Similarly, the multiple channel margins calculation involves the balanced sensitivity function  $S+T$ . Instead of calculating  $\mu(S+T)$  a single loop at a time, all the channels are included in the analysis. A  $\mu$ -analysis problem is formulated with each channel perturbed by an independent, complex perturbation. The peak  $\mu(S+T)$  value guarantees that any simultaneous, independent phase and gain variations applied to each loop simultaneously will not destabilize the system if they remain inside the corresponding circle or disk of size  $\mu(S+T)$ .

## References

Barrett, M.F., Conservatism with robustness tests for linear feedback control systems, Ph.D. Thesis, Control Science and Dynamical Systems, University of Minnesota, 1980.

Blight, J.D., R.L. Dailey, and D. Gangsass, "Practical control law design for aircraft using multivariable techniques," *International Journal of Control*, Vol. 59, No. 1, 1994, pp. 93-137.

Bates, D., and I. Postlethwaite, "Robust Multivariable Control of Aerospace Systems," *Delft University Press*, Delft, The Netherlands, ISBN: 90-407-2317-6, 2002.

## See Also


`allmargin` | `bode` | `loopsens` | `mussv` | `robuststab` | `wcgain` | `wcsens` | `wcmargin`

# loopsens

**Purpose** Sensitivity functions of plant-controller feedback loop

**Syntax** `loops = loopsens(P,C)`

**Description** `loops = loopsens(P,C)` creates a struct, `loops`, whose fields contain the multivariable sensitivity, complementary and open-loop transfer functions. The closed-loop system consists of the controller `C` in negative feedback with the plant `P`. `C` should only be the compensator in the feedback path, not any reference channels, if it is a 2-Dof controller as seen in the figure below. The plant and compensator `P` and `C` can be constant matrices, `double`, `lti` objects, `frd/ss/tf/zpk`, or uncertain objects `umat/ufrd/uss`.

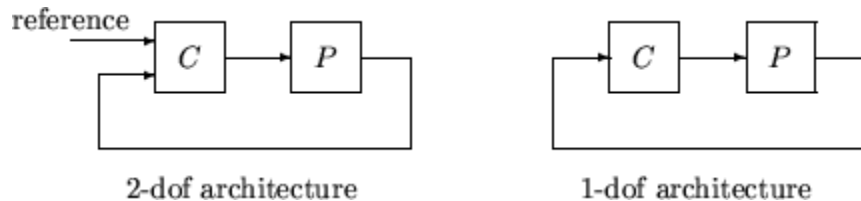


The `loops` returned variable is a structure with fields:

Field	Description
Poles	Closed-loop poles. NaN for <code>frd/ufrd</code> objects
Stable	1 if nominal closed loop is stable, 0 otherwise. NaN for <code>frd/ufrd</code> objects
Si	Input-to-plant sensitivity function
Ti	Input-to-plant complementary sensitivity function
Li	Input-to-plant loop transfer function
So	Output-to-plant sensitivity function
To	Output-to-plant complementary sensitivity function
Lo	Output-to-plant loop transfer function



Field	Description
PSi	Plant times input-to-plant sensitivity function
CSo	Compensator times output-to-plant sensitivity function

The multivariable closed-loop interconnection structure, shown below, defines the input/output sensitivity, complementary sensitivity, and loop transfer functions.

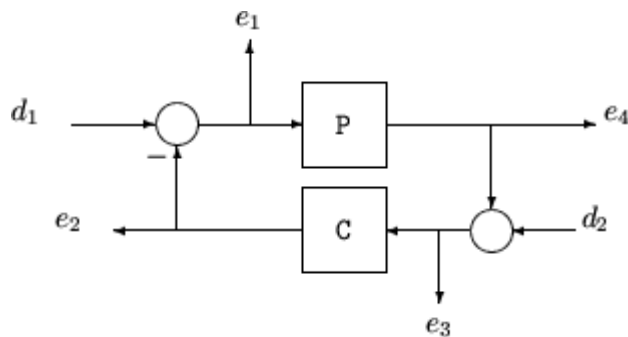

Description	Equation
Input sensitivity ( $TF_{e_1 \leftarrow d_1}$ )	$(I + CP)^{-1}$
Input complementary sensitivity ( $TF_{e_2 \leftarrow d_1}$ )	$CP(I + CP)^{-1}$
Output sensitivity ( $TF_{e_3 \leftarrow d_2}$ )	$(I + PC)^{-1}$
Output complementary sensitivity ( $-TF_{e_4 \leftarrow d_2}$ )	$PC(I + PC)^{-1}$
Input loop transfer function	$CP$
Output loop transfer function	$PC$

## Examples


### Single Input, Single Output (SISO) Loop Sensitivities

Consider PI controller for a dominantly 1st-order plant, with the closed-loop bandwidth of 2.5 rads/sec. Since the problem is SISO, all gains are the same at input and output.

```
gamma = 2; tau = 1.5; taufast = 0.1;
P = tf(gamma,[tau 1])*tf(1,[taufast 1]);
taucpl = 0.4;
xicpl = 0.8;
wnclp = 1/(taucpl*xicpl);
KP = (2*xicpl*wnclp*tau - 1)/gamma;
KI = wnclp^2*tau/gamma;
C = tf([KP KI],[1 0]);
```


Form the closed-loop (and open-loop) systems with `loopsens`, and plot Bode plots using the gains at the plant input.

```
loops = loopsens(P,C);
bode(loops.Si, 'r', loops.Ti, 'b', loops.Li, 'g')
```

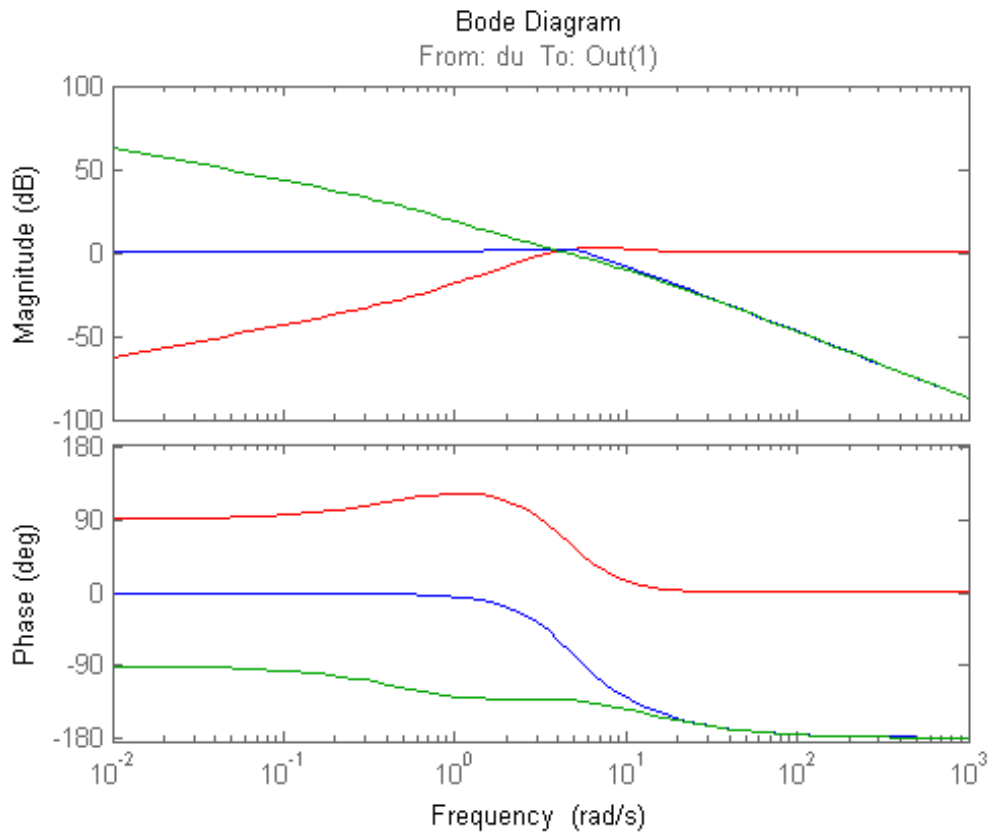

Finally, compare the open-loop plant gain to the closed-loop value of  $PSi$ .

```
bodemag(P, 'r', loops.PSi, 'b')
```

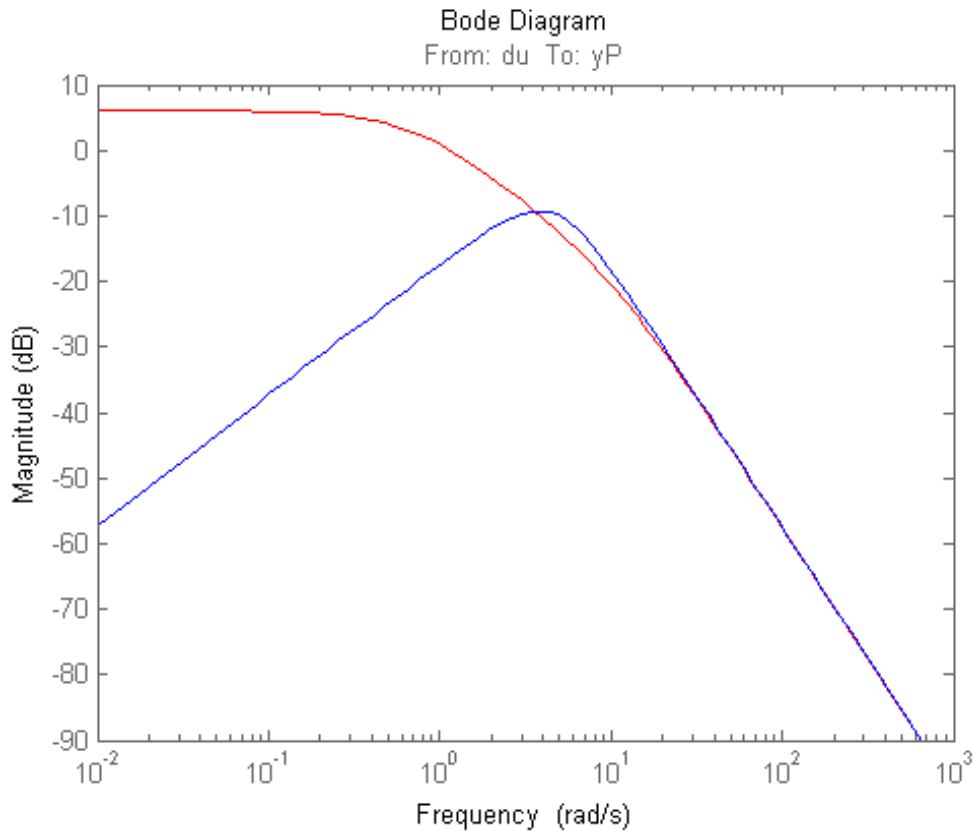

## Multi Input, Multi Output (MIMO) Loop Sensitivities


Consider an integral controller for a constant-gain, 2-input, 2-output plant. For purposes of illustration, the controller is designed via inversion, with different bandwidths in each rotated channel.

```
P = ss([2 3;-1 1]);  
BW = diag([2 5]);  
[U,S,V] = svd(P.d); % get SVD of Plant Gain  
Csvd = V*inv(S)*BW*tf(1,[1 0])*U'; % inversion based on SVD
```

```

loops = loopsens(P,Csvd);
bode(loops.So, 'g', loops.To, 'r.', logspace(-1,3,120))
title('Output Sensitivity (green), Output Complementary Sensitivity (red)')

```

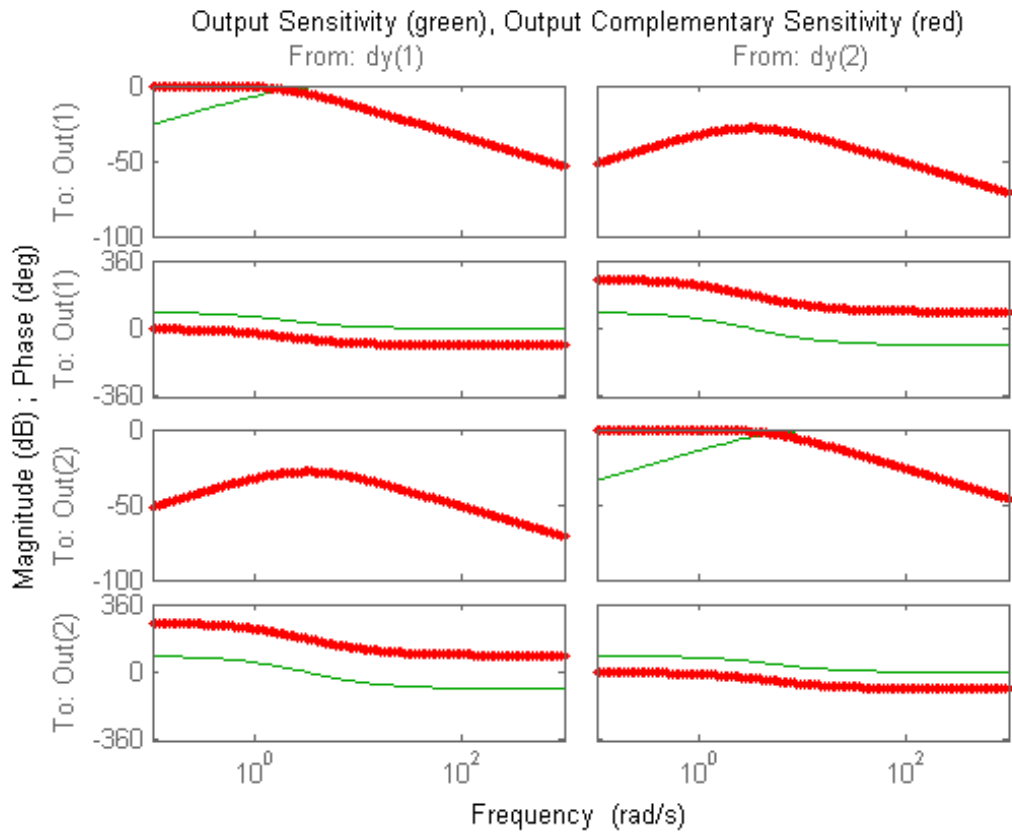

## See Also

[loopmargin](#) | [robuststab](#) | [wcsens](#) | [wcmargin](#)

# loopsyn

**Purpose**  $H_\infty$  optimal controller synthesis for LTI plant

**Syntax**  
 $[K, CL, GAM, INFO] = \text{loopsyn}(G, G_d)$   
 $[K, CL, GAM, INFO] = \text{loopsyn}(G, G_d, RANGE)$

**Description**  $\text{loopsyn}$  is an  $H_\infty$  optimal method for loopshaping control synthesis. It computes a stabilizing  $H_\infty$  controller  $K$  for plant  $G$  to shape the sigma plot of the loop transfer function  $GK$  to have desired loop shape  $G_d$  with accuracy  $\gamma = \text{GAM}$  in the sense that if  $\omega_0$  is the 0 db crossover frequency of the sigma plot of  $G_d(j\omega)$ , then, roughly,

$$\underline{\sigma}(G(j\omega)K(j\omega)) \geq \frac{1}{\gamma} \underline{\sigma}(G_d(j\omega)) \text{ for all } \omega > \omega_0 \quad (2-14)$$

$$\underline{\sigma}(G(j\omega)K(j\omega)) \leq \gamma \underline{\sigma}(G_d(j\omega)) \text{ for all } \omega > \omega_0 \quad (2-15)$$

The STRUCT array **INFO** returns additional design information, including a MIMO stable min-phase shaping pre-filter  $W$ , the shaped plant  $G_s = GW$ , the controller for the shaped plant  $K_s = WK$ , as well as the frequency range  $\{\omega_{\min}, \omega_{\max}\}$  over which the loop shaping is achieved

Input Argument	Description
G	LTI plant
Gd	Desired loop-shape (LTI model)
RANGE	(optional, default $\{0, \text{Inf}\}$ ) Desired frequency range for loop-shaping, a 1-by-2 cell array $\{\omega_{\min}, \omega_{\max}\}$ ; $\omega_{\max}$ should be at least ten times $\omega_{\min}$

Output Argument	Description
K	LTI controller
CL= G*K/(I+GK)	LTI closed-loop system
GAM	Loop-shaping accuracy ( $GAM \geq 1$ , with $GAM=1$ being perfect fit)
INFO	Additional output information
INFO.W	LTI pre-filter $W$ satisfying $\sigma(G_d) = \sigma(GW)$ for all $\omega$ ; $W$ is always minimum-phase.
INFO.Gs	LTI shaped plant: $G_s = GW$ .
INFO.Ks	LTI controller for the shaped plant: $K_s = WK$ .
INFO.range	$\{\omega_{\min}, \omega_{\max}\}$ cell-array containing the approximate frequency range over which loop-shaping could be accurately achieved to with accuracy $G$ . The output INFO.range is either the same as or a subset of the input range.

## Algorithms

Using the GCD formula of Le and Safonov [1], loopsyn first computes a stable-minimum-phase loop-shaping, squaring-down prefilter  $W$  such that the shaped plant  $G_s = GW$  is square, and the desired shape  $G_d$  is achieved with good accuracy in the frequency range  $\{\omega_{\min}, \omega_{\max}\}$  by the shaped plant; i.e.,

$$\sigma(G_d) \approx \sigma(G_s) \text{ for all } \omega \in \{\omega_{\min}, \omega_{\max}\}.$$

Then, loopsyn uses the Glover-McFarlane [2] normalized-coprime-factor control synthesis theory to compute an optimal “loop-shaping” controller for the shaped plant via  $K_s = \text{ncfsyn}(G_s)$ , and returns  $K = W * K_s$ .

If the plant  $G$  is a continuous time LTI and

- 1  $G$  has a full-rank  $D$ -matrix, and
- 2 no finite zeros on the  $j\omega$ -axis, and
- 3  $\{\omega_{\min}, \omega_{\max}\} = [0, \infty]$ ,

then  $GW$  theoretically achieves a perfect accuracy fit  $\sigma(G_d) = \sigma(GW)$  for all frequency  $\omega$ . Otherwise, `loopsyn` uses a bilinear pole-shifting bilinear transform [3] of the form

```
Gshifted=bilin(G, -1, 'S_Tust', [ $\omega_{\min}$ ,  $\omega_{\max}$ ]),
```

which results in a perfect fit for transformed `Gshifted` and an approximate fit over the smaller frequency range  $[\omega_{\min}, \omega_{\max}]$  for the original unshifted  $G$  provided that  $\omega_{\max} \gg \omega_{\min}$ . For best results, you should choose  $\omega_{\max}$  to be at least 100 times greater than  $\omega_{\min}$ . In some cases, the computation of the optimal  $W$  for `Gshifted` may be singular or ill-conditioned for the range  $[\omega_{\min}, \omega_{\max}]$ , as when `Gshifted` has undamped zeros or, in the continuous-time case only, `Gshifted` has a  $D$ -matrix that is rank-deficient); in such cases, `loopsyn` automatically reduces the frequency range further, and returns the reduced range  $[\omega_{\min}, \omega_{\max}]$  as a cell array in the output `INFO.range`={ $\omega_{\min}, \omega_{\max}$ }


## Examples

### Optimal loopsyn Loop-Shaping Control

Calculate the optimal `loopsyn` loop shaping control for a 5-state, 4-output, 5-input plant with a full-rank nonminimum-phase zero at  $s = 10$ .

```
rng(0, 'twister');  
s = tf('s');  
w0 = 5;  
Gd = 5/s; % desired bandwidth w0=5  
G = ((s-10)/(s+100))*rss(3,4,5); % 4-by-5 non-min-phase plant  
[K, CL, GAM, INFO] = loopsyn(G, Gd);  
sigma(G*K, 'r', Gd*GAM, 'k-', Gd/GAM, 'k-', {.1, 100}) % plot result  
legend('G*K', 'Gd*GAM', 'Gd/GAM')
```



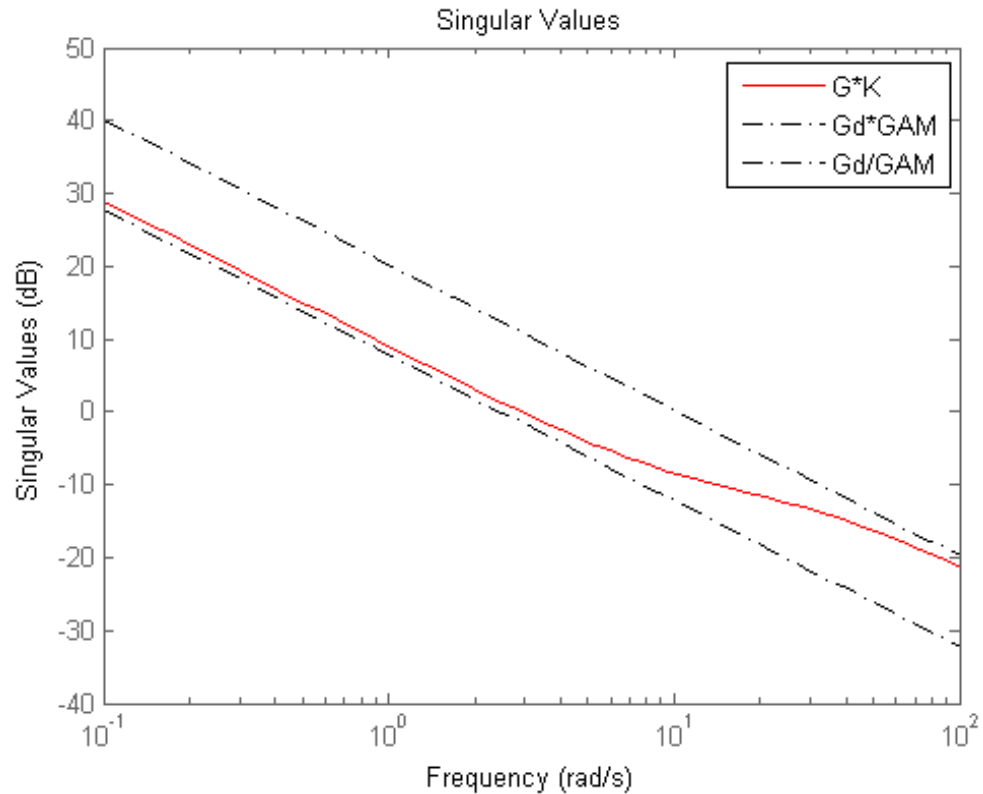

This plot shows that the controller  $K$  optimally fits  $\sigma(G^*K)$ . The controller falls between  $\sigma(Gd) + GAM$  and  $\sigma(Gd) - GAM$  (expressed in dB). In this example,  $GAM = 2.0423 = 6.2026$  dB.

### Limitations

The plant  $G$  must be stabilizable and detectable, must have at least as many inputs as outputs, and must be full rank; i.e.,

- $\text{size}(G,2) \geq \text{size}(G,1)$
- $\text{rank}(\text{freqresp}(G,w)) = \text{size}(G,1)$  for some frequency  $w$ .

The order of the controller  $K$  can be large. Generically, when  $G_d$  is given as a SISO LTI, then the order  $N_K$  of the controller  $K$  satisfies

$$\begin{aligned} N_K &= N_{G_s} + N_W \\ &= N_y N_{G_d} + N_{RHP} + N_W \\ &= N_y N_{G_d} + N_{RHP} + N_G \end{aligned}$$

where

- $N_y$  denotes the number of outputs of the plant  $G$ .
- $N_{RHP}$  denotes the total number of nonstable poles and nonminimum-phase zeros of the plant  $G$ , including those on the stability boundary and at infinity.
- $N_G$ ,  $N_{G_s}$ ,  $N_{G_d}$  and  $N_W$  denote the respective orders of  $G$ ,  $G_s$ ,  $G_d$  and  $W$ .

Model reduction can help reduce the order of  $K$ — see `reduce` and `ncfmr`.

## References

[1] Le, V.X., and M.G. Safonov. Rational matrix GCD's and the design of squaring-down compensators—a state space theory. *IEEE Trans. Autom. Control*, AC-36(3):384–392, March 1992.

[2] Glover, K., and D. McFarlane. Robust stabilization of normalized coprime factor plant descriptions with  $H_\infty$ -bounded uncertainty. *IEEE Trans. Autom. Control*, AC-34(8):821–830, August 1992.

[3] Chiang, R.Y., and M.G. Safonov.  $H_\infty$  synthesis using a bilinear pole-shifting transform. *AIAA J. Guidance, Control and Dynamics*, 15(5):1111–1115, September–October 1992.

## See Also

`mixsyn` | `ncfsyn`

## How To


- Loop Shaping of HIMAT Pitch Axis Controller

**Purpose** Tune fixed-structure feedback loops

**Syntax**

```
[G,C,gam] = looptune(G0,C0,wc)
[G,C,gam] = looptune(G0,C0,wc,Req1,...,ReqN)
[G,C,gam] = looptune(...,options)
[G,C,gam,info] = looptune(...)
```

**Description** `[G,C,gam] = looptune(G0,C0,wc)` tunes the feedback loop

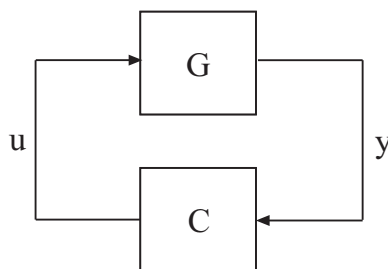

to meet the following default requirements:

- Bandwidth — Gain crossover for each loop falls in the frequency interval  $wc$
- Performance — Integral action at frequencies below  $wc$
- Robustness — Adequate stability margins and gain roll-off at frequencies above  $wc$

The tunable `genss` model `C0` specifies the controller structure, parameters, and initial values. The model `G0` specifies the plant. `G0` can be a Numeric LTI model, or, for co-tuning the plant and controller, a tunable `genss` model. The sensor signals `y` (measurements) and actuator signals `u` (controls) define the boundary between plant and controller.

---

**Note** For tuning Simulink models with `sysstune`, use `sITuner` to create an interface to your Simulink model. You can then tune the control system with `looptune` for `sITuner` (requires Simulink Control Design).

---

`[G,C,gam] = looptune(GO,C0,wc,Req1,...,ReqN)` tunes the feedback loop to meet additional design requirements specified in one or more tuning goal objects `Req1,...,ReqN`. Omit `wc` to use the requirements specified in `Req1,...,ReqN` instead of an explicit target crossover frequency and the default performance and robustness requirements.

`[G,C,gam] = looptune(...,options)` specifies further options, including target gain margin, target phase margin, and computational options for the tuning algorithm.

`[G,C,gam,info] = looptune(...)` returns a structure `info` with additional information about the tuned result. Use `info` with the `loopview` command to visualize tuning constraints and validate the tuned design.

## Input Arguments

### **GO**

Numeric LTI model or tunable `genss` model representing plant in control system to tune.

The plant is the portion of your control system whose outputs are sensor signals (measurements) and whose inputs are actuator signals (controls). Use `connect` to build `GO` from individual numeric or tunable components.

### **C0**

Generalized LTI model representing controller. `C0` specifies the controller structure, parameters, and initial values.

The controller is the portion of your control system that receives sensor signals (measurements) as inputs and produces actuator signals (controls) as outputs. Use Control Design Blocks and Generalized LTI

models to represent tunable components of the controller. Use `connect` to build `CO` from individual numeric or tunable components.

## **wc**

Vector specifying target crossover region `[wcmin,wcmax]`. The `looptune` command attempts to tune all loops in the control system so that the open-loop gain crosses 0 dB within the target crossover region.

A scalar `wc` specifies the target crossover region `[wc/2,2*wc]`.

## **Req1,...,ReqN**

One or more `TuningGoal` objects specifying design requirements, such as `TuningGoal.Tracking`, `TuningGoal.Gain`, or `TuningGoal.LoopShape`.

## **options**

Set of options for `looptune` algorithm, specified using `looptuneOptions`. See `looptuneOptions` for information about the available options, including target gain margin and phase margin.

## **Output Arguments**

### **G**

Tuned plant.

If `G0` is a Numeric LTI model, `G` is the same as `G0`.

If `G0` is a tunable `genss` model, `G` is a `genss` model with Control Design Blocks of the same number and types as `G0`. The current value of `G` is the tuned plant.

### **C**

Tuned controller. `C` is a `genss` model with Control Design Blocks of the same number and types as `CO`. The current value of `C` is the tuned controller.

### **gam**

Parameter indicating degree of success at meeting all tuning constraints. A value of `gam <= 1` indicates that all requirements are satisfied. `gam >> 1` indicates failure to meet at least one requirement. Use `loopview` to visualize the tuned result and identify the unsatisfied requirement.

For best results, use the `RandomStart` option in `looptuneOptions` to obtain several minimization runs. Setting `RandomStart` to an integer `N > 0` causes `looptune` to run the optimization `N` additional times, beginning from parameter values it chooses randomly. You can examine `gam` for each run to help identify an optimization result that meets your design requirements.

## **info**

Data for validating tuning results, returned as a structure. To use the data in `info`, use the command `loopview(G,C,info)` to visualize tuning constraints and validate the tuned design.

`info` contains the following tuning data:

## **Di,Do**

Optimal input and output scalings, returned as state-space models. The scaled plant is given by  $Do \backslash G * Di$ .

## **Specs**

Design requirements that `looptune` constructs for its call to `systune` for tuning (see “Algorithms” on page 2-238), returned as a vector of `TuningGoal` requirement objects.


## **Runs**

Detailed information about each optimization run performed by `systune` when called by `looptune` for tuning (see “Algorithms” on page 2-238), returned as a data structure.

The contents of `Runs` are the info output of the call to `systune`. For information about the fields of `Runs`, see the info output argument description on the `systune` reference page.

## Examples

Tune the control system of the following illustration, to achieve crossover between 0.1 and 1 rad/min.

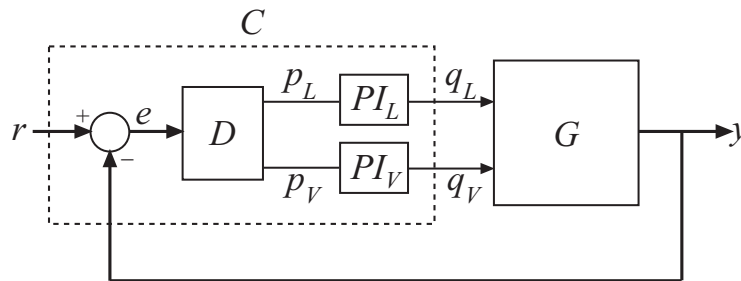

The 2-by-2 plant  $G$  is represented by:

$$G(s) = \frac{1}{75s+1} \begin{bmatrix} 87.8 & -86.4 \\ 108.2 & -109.6 \end{bmatrix}.$$

The fixed-structure controller,  $C$ , includes three components: the 2-by-2 decoupling matrix  $D$  and two PI controllers  $PI_L$  and  $PI_V$ . The signals  $r$ ,  $y$ , and  $e$  are vector-valued signals of dimension 2.

Build a numeric model that represents the plant and a tunable model that represents the controller. Name all inputs and outputs as in the diagram, so that `looptune` knows how to interconnect the plant and controller via the control and measurement signals.

```
s = tf('s');
G = 1/(75*s+1)*[87.8 -86.4; 108.2 -109.6];
G.InputName = {'qL','qV'};
G.OutputName = 'y';

D = ltiblock.gain('Decoupler',eye(2));
D.InputName = 'e';
```

```
D.OutputName = {'pL','pV'};
PI_L = ltiblock.pid('PI_L','pi');
PI_L.InputName = 'pL';
PI_L.OutputName = 'qL';
PI_V = ltiblock.pid('PI_V','pi');
PI_V.InputName = 'pV';
PI_V.OutputName = 'qV';
sum1 = sumblk('e = r - y',2);
CO = connect(PI_L,PI_V,D,sum1,{'r','y'},{'qL','qV'});

wc = [0.1,1];
[G,C,gam,info] = looptune(G,CO,wc);
```

C is the tuned controller, in this case a `genss` model with the same block types as CO.

You can examine the tuned result using `loopview`.

## Algorithms

`looptune` automatically converts target bandwidth, performance requirements, and additional design requirements into weighting functions that express the requirements as an  $H_\infty$  optimization problem. `looptune` then uses `systeme` to optimize tunable parameters to minimize the  $H_\infty$  norm. For more information about the optimization algorithms, see [1].

`looptune` computes the  $H_\infty$  norm using the algorithm of [2] and structure-preserving eigensolvers from the SLICOT library. For more information about the SLICOT library, see <http://slicot.org>.

## References

- [1] P. Apkarian and D. Noll, "Nonsmooth H-infinity Synthesis." *IEEE Transactions on Automatic Control*, Vol. 51, Number 1, 2006, pp. 71–86.
- [2] Bruisma, N.A. and M. Steinbuch, "A Fast Algorithm to Compute the  $H_\infty$ -Norm of a Transfer Function Matrix," *System Control Letters*, 14 (1990), pp. 287-293.

## Alternatives

For tuning Simulink models with `looptune`, see `sITuner` and `looptune` (requires Simulink Control Design).



## See Also

`TuningGoal.Tracking` | `sITuner` | `system` | `looptune` (for `sITuner`) | `TuningGoal.Gain` | `TuningGoal.LoopShape` | `hinfstruct` | `looptuneOptions` | `loopview` | `loopmargin` | `genss` | `connect`

## Tutorials

- “Tune MIMO Control System for Specified Bandwidth”
- “Tuning Feedback Loops with LOOPTUNE”
- “Decoupling Controller for a Distillation Column”

# looptuneOptions

---

**Purpose** Set options for looptune

**Syntax** options = looptuneOptions  
options = looptuneOptions(Name,Value)

**Description** options = looptuneOptions returns the default option set for the looptune command.  
options = looptuneOptions(Name,Value) creates an option set with the options specified by one or more Name,Value pair arguments.

## Input Arguments

### Name-Value Pair Arguments

Specify optional comma-separated pairs of Name,Value arguments. Name is the argument name and Value is the corresponding value. Name must appear inside single quotes (' '). You can specify several name and value pair arguments in any order as Name1,Value1,...,NameN,ValueN.

looptuneOptions takes the following Name arguments:

#### 'GainMargin'

Target gain margin in decibels. GainMargin specifies the required gain margin for the tuned control system. For MIMO control systems, the gain margin is the multiloop disk margin. See loopmargin for the definition of the multiloop disk margin.

**Default:** 7.6 dB

#### 'PhaseMargin'

Target phase margin in degrees. PhaseMargin specifies the required phase margin for the tuned control system. For MIMO control systems, the phase margin is the multiloop disk margin. See loopmargin for the definition of the multiloop disk margin.

**Default:** 45 degrees

## **'Display'**

String determining the amount of information to display during looptune runs.

Display takes the following values:

- 'off' — Run in silent mode, displaying no information during or after the run.
- 'iter' — Display optimization progress after each iteration. The display includes the value of the objective parameter `gam` after each iteration. The display also includes a `Progress` value, indicating the percent change in `gam` from the previous iteration.
- 'final' — Display a one-line summary at the end of each optimization run. The display includes the minimized value of `gam` and the number of iterations for each run.

**Default:** 'final'

## **'MaxIter'**

Maximum number of iterations in each optimization run.

**Default:** 300

## **'RandomStart'**

Number of additional optimizations starting from random values of the free parameters in the controller.

If `RandomStart = 0`, looptune performs a single optimization run starting from the initial values of the tunable parameters. Setting `RandomStart = N > 0` runs  $N$  additional optimizations starting from  $N$  randomly generated parameter values.

looptune tunes by finding a local minimum of a gain minimization problem. To increase the likelihood of finding parameter values that meet your design requirements, set `RandomStart > 0`. You can then use the best design that results from the multiple optimization runs.

# looptuneOptions

---

Use with `UseParallel = true` to distribute independent optimization runs among MATLAB workers (requires Parallel Computing Toolbox software).

**Default:** 0

## 'UseParallel'

Parallel processing flag.

Set to `true` to enable parallel processing by distributing randomized starts among workers in a parallel pool. If there is an available parallel pool, then the software performs independent optimization runs concurrently among workers in that pool. If no parallel pool is available, one of the following occurs:

- If **Automatically create a parallel pool** is selected in your Parallel Computing Toolbox preferences, then the software starts a parallel pool using the settings in those preferences.
- If **Automatically create a parallel pool** is not selected in your preferences, then the software performs the optimization runs successively, without parallel processing.

If **Automatically create a parallel pool** is not selected in your preferences, you can manually start a parallel pool using `parpool` before running the tuning command.

Using parallel processing requires Parallel Computing Toolbox software.

**Default:** false

## 'TargetGain'

Target value for the objective parameter `gam`.

The `looptune` command converts your design requirements into normalized gain constraints. The command then tunes the free parameters of the control system to drive the objective parameter `gam` below 1 to enforce all requirements.

The default `TargetGain = 1` ensures that the optimization stops as soon as `gam` falls below 1. Set `TargetGain` to a smaller or larger value to continue the optimization or start sooner, respectively.

**Default:** 1

## **'TolGain'**

Relative tolerance for termination.

The optimization terminates when the objective parameter `gam` decreases by less than `TolGain` over 10 consecutive iterations. Increasing `TolGain` speeds up termination, and decreasing `TolGain` yields tighter final values.

**Default:** 0.001

## **'MaxFrequency'**

Maximum closed-loop natural frequency.

Setting `MaxFrequency` constrains the closed-loop poles to satisfy  $|\rho| < \text{MaxFrequency}$ .

To allow `looptune` to choose the closed-loop poles automatically, based upon the system's open-loop dynamics, set `MaxFrequency = Inf`. To prevent unwanted fast dynamics or high-gain control, set `MaxFrequency` to a finite value.

Specify `MaxFrequency` in units of `1/TimeUnit`, relative to the `TimeUnit` property of the system you are tuning.

**Default:** Inf

## **'MinDecay'**

Minimum decay rate for closed-loop poles

Constrains the closed-loop poles to satisfy  $\text{Re}(p) < -\text{MinDecay}$ . Increase this value to improve the stability of closed-loop poles that do not affect the closed-loop gain due to pole/zero cancellations.

# looptuneOptions

---

Specify MinDecay in units of 1/TimeUnit, relative to the TimeUnit property of the system you are tuning.

**Default:** 1e-7

## Output Arguments

### **options**

Option set containing the specified options for the looptune command.

## Examples

### **Create Options Set for looptune**

Create an options set for a looptune run using three random restarts. Also, set the target gain and phase margins to 6 dB and 50 degrees, respectively, and limit the closed-loop pole magnitude to 100.

```
options = looptuneOptions('RandomStart',3,'GainMargin',6,...  
                          'PhaseMargin',50,'SpecRadius',100);
```

Alternatively, use dot notation to set the values of options.

```
options = looptuneOptions;  
options.RandomStart = 3;  
options.GainMargin = 6;  
options.PhaseMargin = 50;  
options.SpecRadius = 100;
```

### **Configure Option Set for Parallel Optimization Runs**

Configure an option set for a looptune run using 20 random restarts. Execute these independent optimization runs concurrently on multiple workers in a parallel pool.

If you have the Parallel Computing Toolbox software installed, you can use parallel computing to speed up looptune tuning of fixed-structure control systems. When you run multiple randomized looptune optimization starts, parallel computing speeds up tuning by distributing the optimization runs among workers.

If **Automatically create a parallel pool** is not selected in your Parallel Computing Toolbox preferences, manually start a parallel pool using `parpool`. For example:

```
parpool;
```

If **Automatically create a parallel pool** is selected in your preferences, you do not need to manually start a pool.

Create a `looptuneOptions` set that specifies 20 random restarts to run in parallel.

```
options = looptuneOptions('RandomStart',20,'UseParallel',true);
```

Setting `UseParallel` to `true` enables parallel processing by distributing the randomized starts among available workers in the parallel pool.

Use the `looptuneOptions` set when you call `looptune`. For example, suppose you have already created a plant model `G0` and tunable controller `C0`. In this case, the following command uses parallel computing to tune the control system of `G0` and `C0` to the target `crossoverwc`.

```
[G,C,gamma] = looptune(G0,C0,wc,options);
```

## See Also

| `looptune` | `looptune` (for `sITuner`) | `loopmargin`

# looptuneSetup

---

**Purpose** Convert tuning setup for looptune to tuning setup for systune

**Syntax** `[T0,SoftReqs,HardReqs,sysopt] = looptuneSetup(looptuneInputs)`

**Description** `[T0,SoftReqs,HardReqs,sysopt] = looptuneSetup(looptuneInputs)` converts a tuning setup for looptune into an equivalent tuning setup for systune. The argument `looptuneInputs` is a sequence of input arguments for looptune that specifies the tuning setup. For example,

```
[T0,SoftReqs,HardReqs,sysopt] = looptuneSetup(G0,C0,wc,Req1,Req2,loopopt)
```

generates a set of arguments such that `looptune(G0,C0,wc,Req1,Req2,loopopt)` and `systune(T0,SoftReqs,HardReqs,sysopt)` produce the same results.

Use this command to take advantage of additional flexibility that `systune` offers relative to `looptune`. For example, `looptune` requires that you tune all channels of a MIMO feedback loop to the same target bandwidth. Converting to `systune` allows you to specify different crossover frequencies and loop shapes for each loop in your control system. Also, `looptune` treats all tuning requirements as soft requirements, optimizing them but not requiring that any constraint be exactly met. Converting to `systune` allows you to enforce some tuning requirements as hard constraints, while treating others as soft requirements.

You can also use this command to probe into the tuning requirements used by `looptune`.

---

**Note** When tuning Simulink models through an `sITuner` interface, use `looptuneSetup` for `sITuner` (requires Simulink Control Design).

---



## Input Arguments

### **looptuneInputs - Plant, controller, and requirement inputs to looptune**

valid looptune input sequence


Plant, controller, and requirement inputs to looptune, specified as a valid looptune input sequence. For more information about the arguments in a valid looptune input sequence, see the looptune reference page.

## Output Arguments

### **T0 - Closed-loop control system model**

generalized state-space model

Closed-loop control system model for tuning with systune, returned as a generalized state-space genss model. To compute T0, the plant, G0, and the controller, C0, are combined in the feedback configuration of the following illustration.

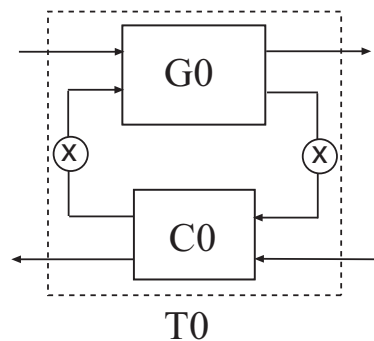

The connections between C0 and G0 are determined by matching signals using the InputName and OutputName properties of the two models. In general, the signal lines in the diagram can represent vector-valued signals. loopswitch switches, indicated by X in the diagram, are inserted between the controller and the plant. This allows definition of open-loop and closed-loop requirements on signals injected or measured at the plant inputs or outputs. For example, the bandwidth wc is converted into a TuningGoal.LoopShape requirement that imposes the desired crossover on the open-loop signal measured at the plant input.

For more information on the structure of closed-loop control system models for tuning with `systemtune`, see the `systemtune` reference page.

## **SoftReqs - Soft tuning requirements**

vector of `TuningGoal` requirement objects

Soft tuning requirements for tuning with `systemtune`, specified as a vector of `TuningGoal` requirement objects.

`looptune` expresses most of its implicit tuning requirements as soft tuning requirements. For example, a specified target loop bandwidth is expressed as a `TuningGoal.LoopShape` requirement with integral gain profile and crossover at the target frequency. Additionally, `looptune` treats all of the explicit requirements you specify (`Req1`, . . . `ReqN`) as soft requirements. `SoftReqs` contains all of these tuning requirements.

## **HardReqs - Hard tuning requirements**

vector of `TuningGoal` requirement objects

Hard tuning requirements (constraints) for tuning with `systemtune`, specified as a vector of `TuningGoal` requirement objects.

Because `looptune` treats most tuning requirements as soft requirements, `HardReqs` is usually empty. However, if you change the default `MaxFrequency` option of the `looptuneOptions` set, `loopopt`, then this requirement appears as a hard `TuningGoal.Poles` constraint.

## **sysopt - Algorithm options for systemtune tuning**

`systemtuneOptions` options set

Algorithm options for `systemtune` tuning, specified as a `systemtuneOptions` options set.

Some of the options in the `looptuneOptions` set, `loopopt`, are expressed as hard or soft requirements that are returned in `HardReqs` and `SoftReqs`. Other options correspond to options in the `systemtuneOptions` set.

## Examples

### Convert looptune Problem into systune Problem

Convert a set of looptune inputs into an equivalent set of inputs for systune.

Suppose you have a numeric plant model, `G0`, and a tunable controller model, `C0`. Suppose also that you used `looptune` to tune the feedback loop between `G0` and `C0` to within a bandwidth of `wc = [wmin,wmax]`. Convert these variables into a form that allows you to use `systune` for further tuning.

```
[T0,SoftReqs,HardReqs,sysopt] = looptuneSetup(C0,G0,wc);
```

The command returns the closed-loop system and tuning requirements for the equivalent `systune` command, `systune(CLO,SoftReqs,HardReqs,sysopt)`. The arrays `SoftReqs` and `HardReqs` contain the tuning requirements implicitly imposed by `looptune`. These requirements enforce the target bandwidth and default stability margins of `looptune`.

If you used additional tuning requirements when tuning the system with `looptune`, add them to the input list of `looptuneSetup`. For example, suppose you used a `TuningGoal.Tracking` requirement, `Req1`, and a `TuningGoal.Rejection` requirement, `Req2`. Suppose also that you set algorithm options for `looptune` using `looptuneOptions`. Incorporate these requirements and options into the equivalent `systune` command.


```
[T0,SoftReqs,HardReqs,sysopt] = looptuneSetup(C0,G0,wc,Req1,Req2,loopopt);
```

The resulting arguments allow you to construct an equivalent tuning problem for `systune`. In particular, `[~,C] = looptune(C0,G0,wc,Req1,Req2,loopopt)` yields the same result as the following commands.

```
T = systune(T0,SoftReqs,HardReqs,sysopt);  
C = setBlockValue(C0,T);
```

## Convert Distillation Column Problem for Tuning With systune

Set up the following control system for tuning with looptune. Then convert the setup to a systune problem and examine the results. These results reflect the structure of the control system model that looptune tunes. The results also reflect the tuning requirements implicitly enforced when tuning with looptune.

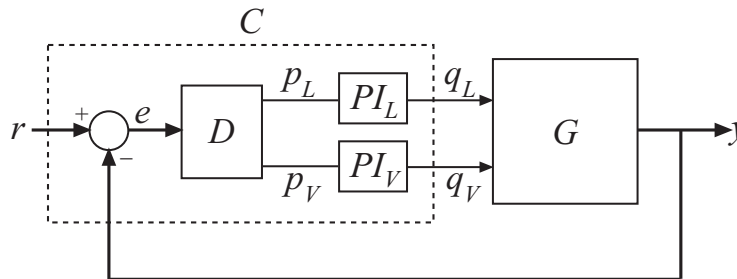

For this example, the 2-by-2 plant  $G$  is represented by:

$$G(s) = \frac{1}{75s+1} \begin{bmatrix} 87.8 & -86.4 \\ 108.2 & -109.6 \end{bmatrix}.$$

The fixed-structure controller,  $C$ , includes three components: the 2-by-2 decoupling matrix  $D$  and two PI controllers  $PI\_L$  and  $PI\_V$ . The signals  $r$ ,  $y$ , and  $e$  are vector-valued signals of dimension 2.

Build a numeric model that represents the plant and a tunable model that represents the controller. Name all inputs and outputs as in the diagram, so that looptune and looptuneSetup knows how to interconnect the plant and controller via the control and measurement signals.

```
s = tf('s');
G = 1/(75*s+1)*[87.8 -86.4; 108.2 -109.6];
G.InputName = {'qL', 'qV'};
G.OutputName = {'y'};
```

```
D = ltiblock.gain('Decoupler',eye(2));
D.InputName = 'e';
D.OutputName = {'pL','pV'};
PI_L = ltiblock.pid('PI_L','pi');
PI_L.InputName = 'pL';
PI_L.OutputName = 'qL';
PI_V = ltiblock.pid('PI_V','pi');
PI_V.InputName = 'pV';
PI_V.OutputName = 'qV';
sum1 = sumblk('e = r - y',2);
CO = connect(PI_L,PI_V,D,sum1,{'r','y'},{'qL','qV'});
```

This system is now ready for tuning with `looptune`, using tuning goals that you specify. For example, specify a target bandwidth range. Create a tuning requirement that imposes reference tracking in both channels of the system, and a disturbance rejection requirement.

```
wc = [0.1,0.5];
TR = TuningGoal.Tracking('r','y',15);
DR = TuningGoal.Rejection({'qL','qV'},1/s);
DR.Focus = [0 0.1];
```

```
[G,C,gam,info] = looptune(G,CO,wc,TR,DR);
```

```
Final: Peak gain = 1, Iterations = 51
```

`looptune` successfully tunes the system to these requirements. However, you might want to switch to `systune` to take advantage of additional flexibility in configuring your problem. For example, instead of tuning both channels to a loop bandwidth inside `wc`, you might want to specify different crossover frequencies for each loop. Or, you might want to enforce the tuning requirements `TR` and `DR` as hard constraints, and add other requirements as soft requirements.

Convert the `looptune` input arguments to a set of input arguments for `systune`.

```
[T0,SoftReqs,HardReqs,sysopt] = looptuneSetup(G,CO,wc,TR,DR);
```

# looptuneSetup

---

This command returns a set of arguments you can feed to `system` for equivalent results to tuning with `looptune`. In other words, the following command is equivalent to the `looptune` command.

```
[T, fsoft, ghard, info] = system(T0, SoftReqs, HardReqs, sysopt);
```

```
Final: Peak gain = 1, Iterations = 51
```

Examine the arguments returned by `looptuneSetup`.


T0

T0 =

```
Generalized continuous-time state-space model with 0 outputs, 2 inputs,  
Decoupler: Parametric 2x2 gain, 1 occurrences.  
LSU_: Open/closed switch, 2 channels, 1 occurrences.  
LSY_: Open/closed switch, 2 channels, 1 occurrences.  
PI_L: Parametric PID controller, 1 occurrences.  
PI_V: Parametric PID controller, 1 occurrences.
```

Type `"ss(T0)"` to see the current value, `"get(T0)"` to see all properties,

The software constructs the closed-loop control system for `system` by connecting the plant and controller at their control and measurement signals, inserting and inserting a two-channel loopswitch at the connection locations.

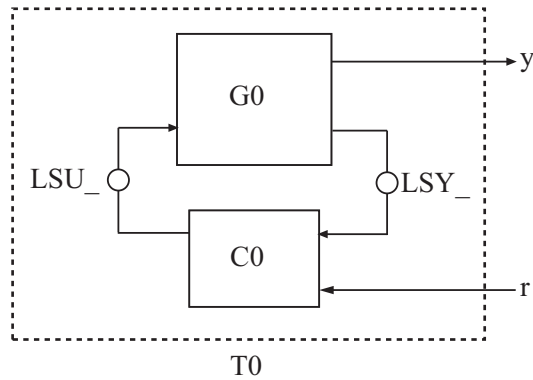

When tuning the control system of this example with `looptune`, all requirements are treated as soft requirements. Therefore, `HardReqs` is empty. `SoftReqs` is an array of `TuningGoal` requirements. These requirements together enforce the bandwidth and margins of the `looptune` command, plus the additional requirements that you specified.

`SoftReqs`

```
SoftReqs =
```

```
    5x1 heterogeneous LoopGeneric (LoopShape, Tracking, Rejection, ...)
```

```
    Models
    Openings
    Name
```

Examine the first entry in `SoftReqs`.

```
SoftReqs(1)
```

```
ans =
```

```
    LoopShape with properties:
```

# looptuneSetup


---

```
Location: {2x1 cell}
LoopGain: [1x1 zpk]
CrossTol: 0.3495
LoopScaling: 'on'
Focus: [0 Inf]
Models: NaN
Openings: {0x1 cell}
Name: 'Open loop CG'
```

`looptuneSetup` expresses the target crossover frequency range `wc` as a `TuningGoal.LoopShape` requirement. This requirement constrains the open-loop gain profile to the loop shape stored in the `LoopGain` property, with a crossover frequency and crossover tolerance (`CrossTol`) determined by `wc`. Examine this loop shape.

```
bodemag(SoftReqs(1).LoopGain,logspace(-2,0)),grid
```



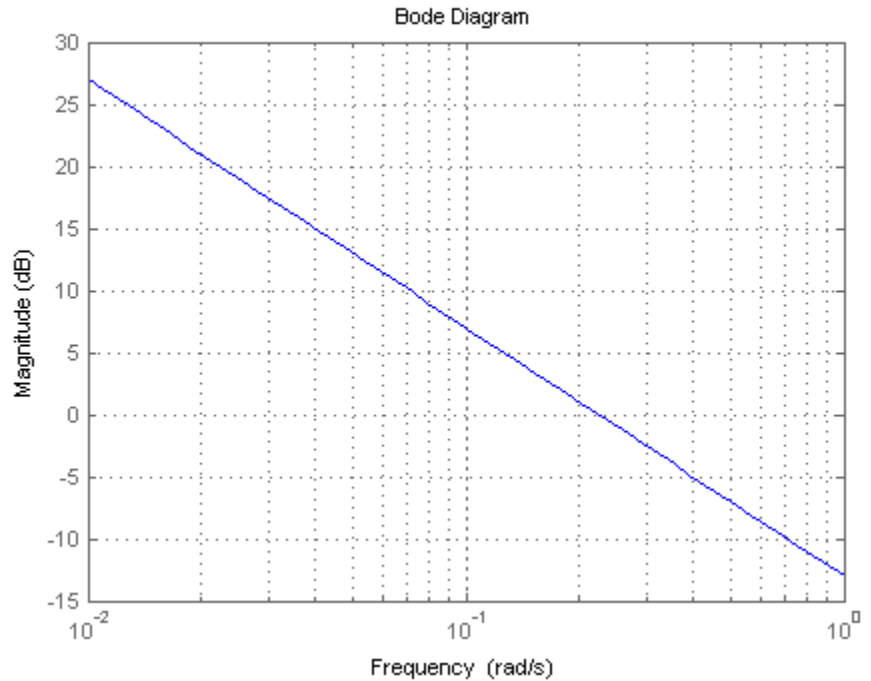

The target crossover is expressed as an integrator gain profile with a crossover between 0.1 and 0.5 rad/s, as specified by `wc`. If you want to specify a different loop shape, you can alter this `TuningGoal.LoopShape` requirement before providing it to `stune`.

`looptune` also tunes to default stability margins that you can change using `looptuneOptions`. For `stune`, stability margins are specified using `TuningGoal.Margins` requirements. Here, `looptuneSetup` has expressed the default stability margins of `looptune` as soft `TuningGoal.Margins` requirements. For example, examine the fourth entry in `SoftReqs`.

```
SoftReqs(4)
```

# looptuneSetup

---

```
ans =  
  
  Margins with properties:  
  
    Location: {2x1 cell}  
  GainMargin: 7.6000  
PhaseMargin: 45  
    Focus: [0 Inf]  
    Models: NaN  
  Openings: {0x1 cell}  
    Name: 'Margins at plant inputs'
```

The last entry in `SoftReqs` is a similar `TuningGoal.Margins` requirement constraining the margins at the plant outputs. `looptune` enforces these margins as soft requirements. If you want to convert them to hard constraints, pass them to `systune` in the input vector `HardReqs` instead of the input vector `SoftReqs`.

## Alternatives

When tuning Simulink using an `sITuner`, interface, convert a `looptune` problem to `systune` using `looptuneSetup` for `sITuner`.


## See Also

`looptune` | `systune` | `looptuneOptions` | `systuneOptions` | `genss` | `sITuner` | `looptuneSetup` (for `sITuner`)

**Purpose** Graphically analyze MIMO feedback loops

**Syntax** `loopview(G,C)`  
`loopview(G,C,info)`

**Description** `loopview(G,C)` plots characteristics of the following positive-feedback, multi-input, multi-output (MIMO) feedback loop with plant **G** and controller **C**.

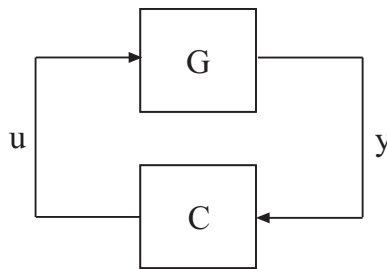

Use `loopview` to analyze the performance of a tuned control system you obtain using `looptune`.

---

**Note** If you are tuning a Simulink model with `looptune` through an `sITuner` interface, analyze the performance of your control system using `loopview` for `sITuner` (requires Simulink Control Design).

---

`loopview` plots the singular values of:

- Open-loop frequency responses  $G \cdot C$  and  $C \cdot G$
- Sensitivity function  $S = \text{inv}(1 - G \cdot C)$  and complementary sensitivity  $T = 1 - S$
- Maximum (target), actual (tuned), and normalized MIMO stability margins. `loopview` plots the multi-loop disk margin (see

loopmargin). Use this plot to verify that the stability margins of the tuned system do not significantly exceed the target value.

For more information about singular values, see `sigma`.

`loopview(G,C,info)` uses the `info` structure returned by `looptune`. This syntax also plots the target and tuned values of tuning constraints imposed on the system. Additional plots include:

- Singular values of the maximum allowed `S` and `T`. The curve marked `S/T Max` shows the maximum allowed `S` on the low-frequency side of the plot, and the maximum allowed `T` on the high-frequency side. These curves are the constraints that `looptune` imposes on `S` and `T` to enforce the target crossover range `wc`.
- Target and tuned values of constraints imposed by any tuning goal requirements you used with `looptune`.

Use `loopview` with the `info` structure to assist in troubleshooting when tuning fails to meet all requirements.

## Input Arguments

### **G**

Numeric LTI model or tunable `genss` model representing the plant in a control system. The plant is the portion of a control system whose outputs are sensor signals (measurements), and whose inputs are actuator signals (controls).

You can obtain `G` as an output argument from `looptune` when you tune your control system.

### **C**

`genss` model representing the controller in a control system. The controller is the portion of your control system that receives sensor signals (measurements) as inputs and produces actuator signals (controls) as outputs.

You can obtain `C` as an output argument from `looptune` when you tune your control system.

**info**

info structure returned by looptune during control system tuning.

**Examples****Examine Performance of Tuned Controller**

Tune a control system, and use loopview to examine the performance of the tuned controller.

```
s = tf('s');
G = 1/(75*s+1)*[87.8 -86.4; 108.2 -109.6];
G.InputName = {'qL','qV'};
G.OutputName = 'y';

D = ltiblock.gain('Decoupler',eye(2));
PI_L = ltiblock.pid('PI_L','pi');
PI_L.OutputName = 'qL';
PI_V = ltiblock.pid('PI_V','pi');
PI_V.OutputName = 'qV';


sum = sumblk('e = r - y',2);
CO = (blkdiag(PI_L,PI_V)*D)*sum;

wc = [0.1,1];
options = looptuneOptions('RandomStart',5);
[G,C,gam,info] = looptune(-G,CO,wc,options);

loopview(G,C,info)

Final: Peak gain = 0.859, Iterations = 24
Achieved target gain value TargetGain=1.
```

# loopview

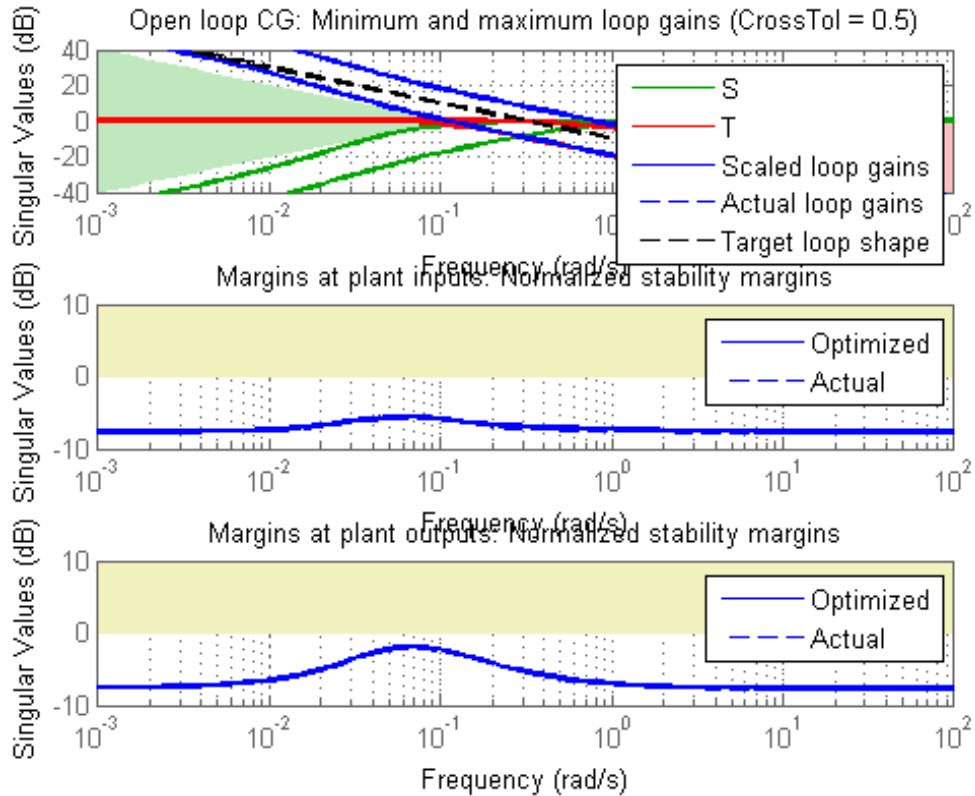

The first plot shows that the open-loop gain crossovers fall close to the specified interval  $[0.1, 1]$ . This plot also includes the tuned values of the sensitivity function  $S = \text{inv}(1 - G \cdot C)$  and complementary sensitivity  $T = 1 - S$ . These curves reflect the constraints that `looptune` imposes on  $S$  and  $T$  to enforce the target crossover range  $w_c$ .

The second and third plots show that the MIMO stability margins of the tuned system fall well within the target range.

**Alternatives**

For analyzing Simulink models tuned with `looptune` through an `sITuner` interface, use `loopview` for `sITuner` (requires Simulink Control Design).

**See Also**

`looptune` | `sITuner` | `looptune` (for `sITuner`) | `loopview` (for `sITuner`)

**Tutorials**

- “Tune MIMO Control System for Specified Bandwidth”
- “Decoupling Controller for a Distillation Column”

# ltiarray2uss

---

## Purpose

Compute uncertain system bounding given LTI ss array

---

**Note** ltiarray2uss will be removed in a future release. Use ucover instead.

---

## Syntax

```
usys = ltiarray2uss(P,Parray,ord)
[usys,wt] = ltiarray2uss(P,Parray,ord)
[usys,wt,diffdata] = ltiarray2uss(P,Parray,ord)
[usys,wt,diffdata] = ltiarray2uss(P,Parray,ord,'InputMult')
[usys,wt,diffdata] =
ltiarray2uss(P,Parray,ord,'OutputMult')
[usys,wt,diffdata] = ltiarray2uss(P,Parray,ord,'Additive')
```

## Description

The command ltiarray2uss, calculates an uncertain system usys with nominal value P, and whose range of behavior includes the given array of systems, Parray.

usys = ltiarray2uss(P,Parray,ord), usys is formulated as an input multiplicative uncertainty model,

$usys = P * (I + wt * \text{ultidyn}('IMult', [size(P,2) \ size(P,2)]))$ , where wt is a stable scalar system, whose magnitude overbounds the relative difference,  $(P - Parray) / P$ . The state order of the weighting function used to bound the multiplicative difference between P and Parray is ord. Both P and Parray must be in the classes ss/tf/zpk/frd. If P is an frd then usys will be a ufrd object, otherwise usys will be a uss object. The ultidyn atom is named based on the variable name of Parray in the calling workspace.

[usys,wt] = ltiarray2uss(P,Parray,ord), returns the weight wt used to bound the infinity norm of  $((P - Parray) / P)$ .



`[usys,wt] = ltiarray2uss(P,Parray,ord,'OutputMult')`, uses multiplicative uncertainty at the plant output (as opposed to input multiplicative uncertainty). The formula for usys is

$$\text{usys} = (I + \text{wt} * \text{ultidyn}(\text{'Name'}, [\text{size}(P,1) \text{ size}(P,1)])) * P).$$

`[usys,wt] = ltiarray2uss(P,Parray,ord,'Additive')`, uses additive uncertainty.

`usys = P + wt*ultidyn('Name',[size(P,1) size(P,2)])`. wt is a frequency domain overbound of the infinity norm of  $(Parray - P)$ .

`[usys,wt] = ltiarray2uss(P,Parray,ord,'InputMult')`, uses multiplicative uncertainty at the plant input (this is the default). The formula for usys is  $\text{usys} = P * (I + \text{wt} * \text{ultidyn}(\text{'Name'}, [\text{size}(P,2) \text{ size}(P,2)]))$ .


`[usys,wt,diffdata] = ltiarray2uss(P,Parray,ord,type)` returns the norm of the difference (absolute difference for additive, and relative difference for multiplicative uncertainty) between the nominal model P and Parray. wt satisfies  $\text{diffdata}(w\_i) < |\text{wt}(w\_i)|$  at all frequency points.

## Examples

### Uncertain System Bounding an LTI Array

Consider a third order transfer function with an uncertain gain, filter time constant and a lightly damped flexible mode. This model is used to represent a physical system from which frequency response data is acquired.


```
gain = ureal('gain',10,'Perc',20);
tau = ureal('tau',.6,'Range',[.42 .9]);
wn = 40;
zeta = 0.1;
usys = tf(gain,[tau 1])*tf(wn^2,[1 2*zeta*wn wn^2]);
sysnom = usys.NominalValue;
parray = usample(usys,30);
om = logspace(-1,2,80);
parrayg = frd(parray,om);
bode(parrayg)
```

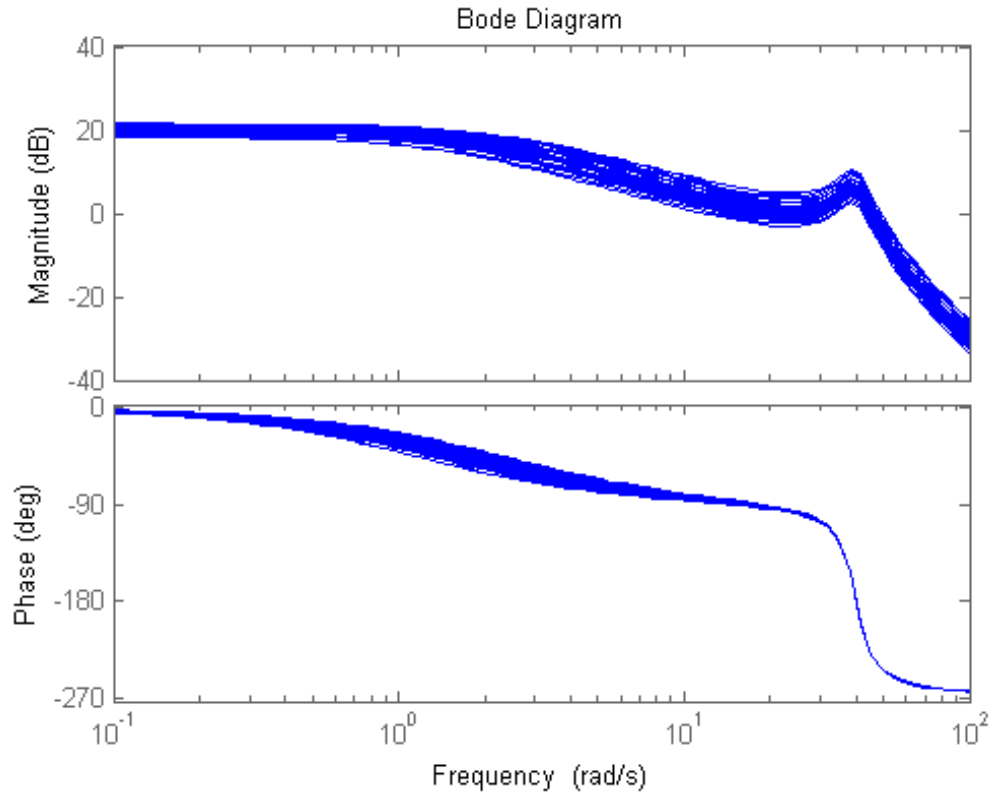

The frequency response data in `parray` represents 30 experiments performed on the system. The command `ltiarray2uss` is used to generate an uncertain model, `umod`, based on the frequency response data. Initially an input multiplicative uncertain model is used to characterize the collection of 30 frequency responses. First and second order input multiplicative uncertainty weight are calculated from the data.

```
[umodIn1,wtIn1,diffdataIn] = ltiarray2uss(sysnom,parrayg,1);
```


```
[umodIn2,wtIn2,diffdataIn] = ltiarray2uss(sysnom,parrayg,2);
bodemag(wtIn1,'b-',wtIn2,'g+',diffdataIn,'r.',om)
title('Input Multiplicative Uncertainty Model Using ltiarray2uss')
legend('1st order','2nd order','difference','Location','SouthEast')
```

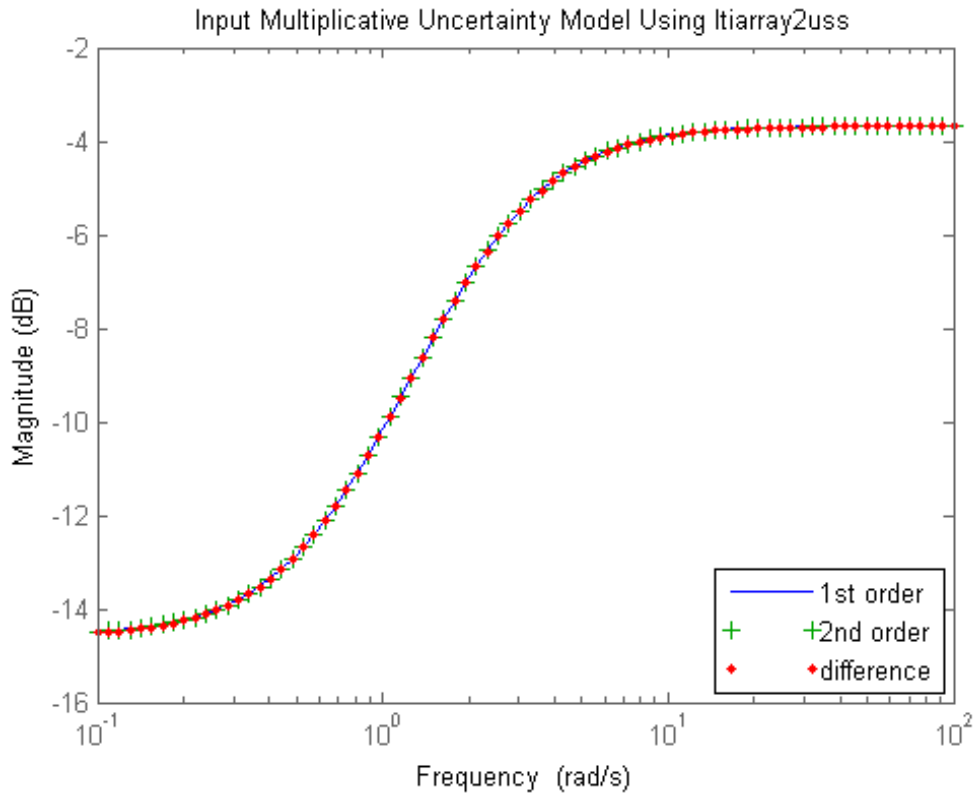

Alternatively, an additive uncertain model is used to characterize the collection of 30 frequency responses.

```
[umodAdd1,wtAdd1,diffdataAdd] = ltiarray2uss(sysnom,parrayg,1,'Additiv
[umodAdd2,wtAdd2,diffdataAdd] = ltiarray2uss(sysnom,parrayg,2,'Additiv
```

```
bodemag(wtAdd1,'b-',wtAdd2,'g+',diffdataAdd,'r.',om)
title('Additive Uncertainty Model Using ltiarray2uss')
legend('1st order','2nd order','difference')
```

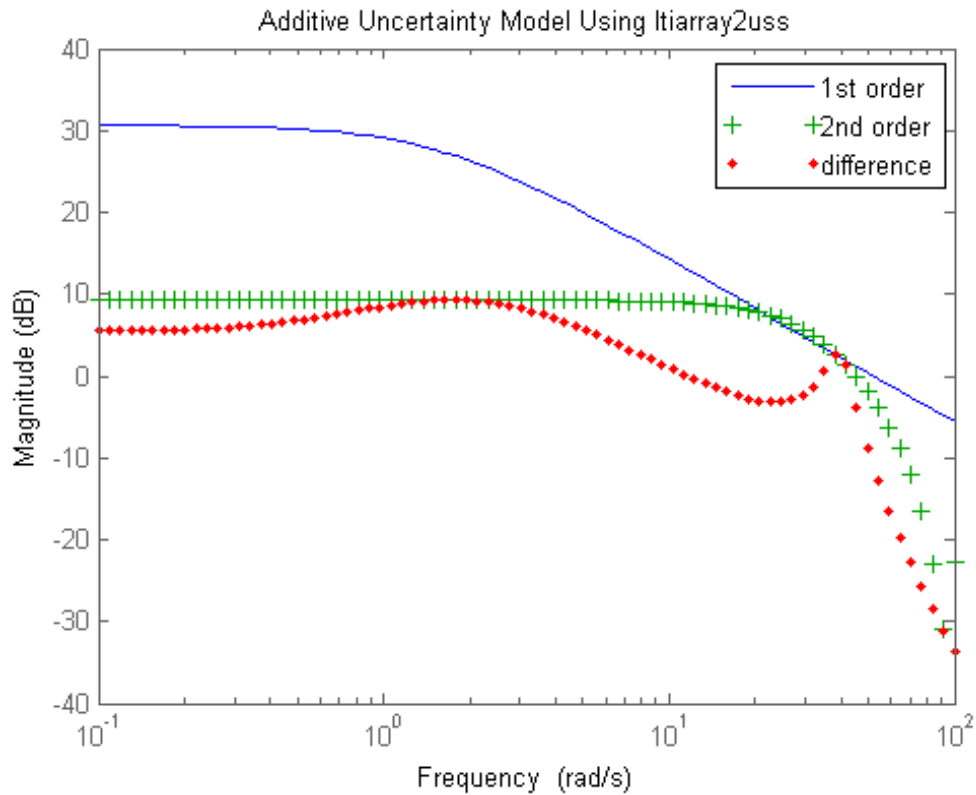

**See Also** [fitmagfrd](#) | [ultidyn](#) | [uss](#)

**Tutorials**

- [First-Cut Robust Design](#)

**Purpose** LQG loop transfer-function recovery (LTR) control synthesis

**Syntax**

```
[K,SVL,W1] = ltrysyn(G,F,XI,THETA,RHO)
[K,SVL,W1] = ltrysyn(G,F,XI,THETA,RHO,W)
[K,SVL,W1] = ltrysyn(G,F,XI,THETA,RHO,OPT)
[K,SVL,W1] = ltrysyn(G,F,XI,THETA,RHO,W,OPT)
```

**Description**

[K,SVL,W1] = ltrysyn(G,F,XI,TH,RHO) computes a reconstructed-state output-feedback controller K for LTI plant G so that K\*G asymptotically recovers plant-input full-state feedback loop transfer function  $L(s) = F(Is-A)^{-1}B+D$ ; that is, at any frequency  $w>0$ ,  $\max(\sigma(K*G-L, w)) \rightarrow 0$  as  $\rho \rightarrow \infty$ , where  $L = ss(A,B,F,D)$  is the LTI full-state feedback loop transfer function.

[K,SVL,W1] = ltrysyn(G,F1,Q,R,RHO,'OUTPUT') computes the solution to the 'dual' problem of filter loop recovery for LTI plant G where F is a Kalman filter gain matrix. In this case, the recovery is at the plant output, and  $\max(\sigma(G*K-L, w)) \rightarrow 0$  as  $\rho \rightarrow \infty$ , where L1 denotes the LTI filter loop feedback loop transfer function  $L1 = ss(A,F,C,D)$ .

Only the LTI controller K for the final value RHO(end) is returned.

Inputs	
G	LTI plant
F	LQ full-state-feedback gain matrix
XI	plant noise intensity, or, if OPT='OUTPUT' state-cost matrix XI=Q,
THETA	sensor noise intensity or, if OPT='OUTPUT' control-cost matrix THETA=R,
RHO	vector containing a set of recovery gains
W	(optional) vector of frequencies (to be used for plots); if input W is not supplied, then a reasonable default is used

Outputs	
K	$K(s)$ — LTI LTR (loop-transfer-recovery) output-feedback, for the last element of RHO (i.e., RHO(end))
SVL	sigma plot data for the recovered loop transfer function if G is MIMO or, for SISO G only, Nyquist loci SVL = [re(1:nr) im(1:nr)]
W1	frequencies for SVL plots, same as W when present

## Algorithms


For each value in the vector RHO, [K,SVL,W1] = ltrsyn(G,F,XI,THETA,RHO) computes the full-state-feedback (default OPT='INPUT') LTR controller

$$K(s) = \left[ K_c (Is - A + BK_c + K_f C - K_f D K_c)^{-1} K_f \right]$$

where  $K_c = F$  and  $K_f = \text{lqr}(A', C', XI + RHO(i) * B * B', THETA)$ . The “fictitious noise” term  $RHO(i) * B * B'$  results in loop-transfer recovery as  $RHO(i) \rightarrow \infty$ . The Kalman filter gain is

$$K_f = \Sigma C^T \Theta^{-1} \text{ where } \Sigma \text{ satisfies the Kalman filter Riccati equation } 0 = \Sigma A^T + A \Sigma - \Sigma C^T \Theta^{-1} C \Sigma + \Xi + \rho B B^T. \text{ See [1] for further details.}$$

Similarly for the 'dual' problem of filter loop recovery case, [K,SVL,W1] = ltrsyn(G,F,Q,R,RHO,'OUTPUT') computes a filter loop recovery controller of the same form, but with  $K_f = F$  is being the input filter gain matrix and the control gain matrix  $K_c$  computed as  $K_c = \text{lqr}(A, B, Q + RHO(i) * C' * C, R)$ .

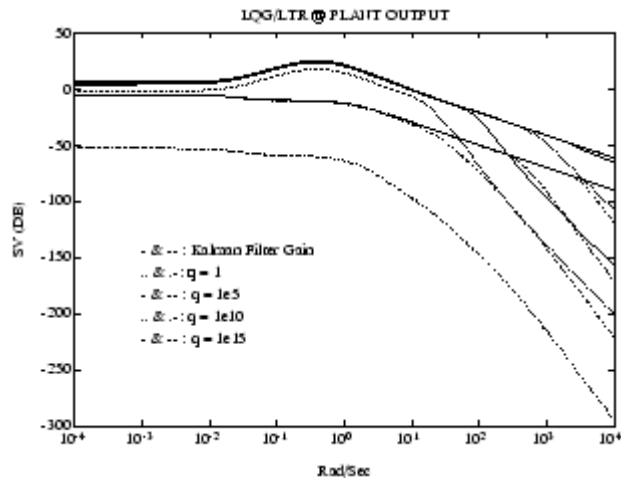

**Example of LQG/LTR at Plant Output.**

## Examples

```
s=tf('s');G=ss(1e4/((s+1)*(s+10)*(s+100)));[A,B,C,D]=ssdata(G);
F=lqr(A,B,C'*C,eye(size(B,2)));
L=ss(A,B,F,0'*F*B);
XI=100*C'*C; THETA=eye(size(C,1));
RHO=[1e3,1e6,1e9,1e12];W=logspace(-2,2);
nyquist(L,'k-.');hold;
[K,SVL,W1]=ltrysyn(G,F,XI,THETA,RHO,W);
```

See also `ltrdemo`

## Limitations

The `ltrysyn` procedure may fail for non-minimum phase plants. For full-state LTR (default `OPT='INPUT'`), the plant should not have fewer outputs than inputs. Conversely for filter LTR (when `OPT='OUTPUT'`), the plant should not have fewer inputs than outputs. The plant must be strictly proper, i.e., the  $D$ -matrix of the plant should be all zeros. `ltrysyn` is only for continuous time plants ( $T_s=0$ )

## References

[1] Doyle, J., and G. Stein, "Multivariable Feedback Design: Concepts for a Classical/Modern Synthesis," *IEEE Trans. on Automat. Contr.*, AC-26, pp. 4-16, 1981.

# lrsyn

---

## **See Also**

h2syn | hinfsyn | lqg | loopsyn | ncfsyn



<b>Purpose</b>	Number of matrix variables in system of LMIs
<b>Syntax</b>	<code>K = matnbr(lmisys)</code>
<b>Description</b>	<code>matnbr</code> returns the number <code>K</code> of matrix variables in the LMI problem described by <code>lmisys</code> .
<b>See Also</b>	<code>decnbr</code>   <code>lmiinfo</code>   <code>decinfo</code>

**Purpose** Extract vector of decision variables from matrix variable values

**Syntax** `decvec = mat2dec(lmisys,X1,X2,X3,...)`

**Description** Given an LMI system `lmisys` with matrix variables  $X_1, \dots, X_K$  and given values  $X1, \dots, Xk$  of  $X_1, \dots, X_K$ , `mat2dec` returns the corresponding value `decvec` of the vector of decision variables. Recall that the decision variables are the independent entries of the matrices  $X_1, \dots, X_K$  and constitute the free scalar variables in the LMI problem.

This function is useful, for example, to initialize the LMI solvers `mincx` or `gevp`. Given an initial guess for  $X_1, \dots, X_K$ , `mat2dec` forms the corresponding vector of decision variables `xinit`.

An error occurs if the dimensions and structure of  $X1, \dots, Xk$  are inconsistent with the description of  $X_1, \dots, X_K$  in `lmisys`.

**Examples** Consider an LMI system with two matrix variables  $X$  and  $Y$  such that

- $X$  is a symmetric block diagonal with one 2-by-2 full block and one 2-by-2 scalar block.
- $Y$  is a 2-by-3 rectangular matrix.

Particular instances of  $X$  and  $Y$  are

$$X_0 = \begin{pmatrix} 1 & 3 & 0 & 0 \\ 3 & -1 & 0 & 0 \\ 0 & 0 & 5 & 0 \\ 0 & 0 & 0 & 5 \end{pmatrix}, \quad Y_0 = \begin{pmatrix} 1 & 2 & 3 \\ 4 & 5 & 6 \end{pmatrix}$$

and the corresponding vector of decision variables is given by

```
decv = mat2dec(lmisys,X0,Y0)
```

```
decv'
```

```
ans =
```

```
1      3      -1      5      1      2      3      4      5      6
```

Note that `decv` is of length 10 since  $Y$  has 6 free entries while  $X$  has 4 independent entries due to its structure. Use `decinfo` to obtain more information about the decision variable distribution in  $X$  and  $Y$ .

**See Also**

`dec2mat` | `decinfo` | `decnbr`

**Purpose** Minimize linear objective under LMI constraints

**Syntax** `[copt,xopt] = mincx(lmisys,c,options,xinit,target)`

**Description** The function `mincx` solves the convex program

$$\text{minimize } c^T x \text{ subject to } N^T L(x) N \leq M^T R(x) M \quad (2-16)$$

where  $x$  denotes the vector of scalar decision variables.

The system of LMIs is described by `lmisys`. The vector `c` must be of the same length as  $x$ . This length corresponds to the number of decision variables returned by the function `decnbr`. For linear objectives expressed in terms of the matrix variables, the adequate `c` vector is easily derived with `defcx`.

The function `mincx` returns the global minimum `copt` for the objective  $c^T x$ , as well as the minimizing value `xopt` of the vector of decision variables. The corresponding values of the matrix variables is derived from `xopt` with `dec2mat`.

The remaining arguments are optional. The vector `xinit` is an initial guess of the minimizer `xopt`. It is ignored when infeasible, but may speed up computations otherwise. Note that `xinit` should be of the same length as `c`. As for `target`, it sets some target for the objective value. The code terminates as soon as this target is achieved, that is, as soon as some feasible  $x$  such that  $c^T x \leq \text{target}$  is found. Set `options` to `[]` to use `xinit` and `target` with the default options.

## Control Parameters

The optional argument `options` gives access to certain control parameters of the optimization code. In `mincx`, this is a five-entry vector organized as follows:

- `options(1)` sets the desired relative accuracy on the optimal value `lopt` (default = 10<sup>-2</sup>).
- `options(2)` sets the maximum number of iterations allowed to be performed by the optimization procedure (100 by default).

- `options(3)` sets the feasibility radius. Its purpose and usage are as for `feasp`.
- `options(4)` helps speed up termination. If set to an integer value  $J > 0$ , the code terminates when the objective  $c^T x$  has not decreased by more than the desired relative accuracy during the last  $J$  iterations.
- `options(5) = 1` turns off the trace of execution of the optimization procedure. Resetting `options(5)` to zero (default value) turns it back on.

Setting `option(i)` to zero is equivalent to setting the corresponding control parameter to its default value. See `feasp` for more detail.

## Tip for Speed-Up

In LMI optimization, the computational overhead per iteration mostly comes from solving a least-squares problem of the form

$$\min_x \|Ax - b\|$$

where  $x$  is the vector of decision variables. Two methods are used to solve this problem: Cholesky factorization of  $A^T A$  (default), and QR factorization of  $A$  when the normal equation becomes ill conditioned (when close to the solution typically). The message

```
* switching to QR
```

is displayed when the solver has to switch to the QR mode.

Since QR factorization is incrementally more expensive in most problems, it is sometimes desirable to prevent switching to QR. This is done by setting `options(4) = 1`. While not guaranteed to produce the optimal value, this generally achieves a good trade-off between speed and accuracy.

## Memory Problems

QR-based linear algebra (see above) is not only expensive in terms of computational overhead, but also in terms of memory requirement. As a result, the amount of memory required by QR may exceed your swap

space for large problems with numerous LMI constraints. In such case, MATLAB issues the error

```
??? Error using ==> pds  
Out of memory. Type HELP MEMORY for your options.
```

You should then ask your system manager to increase your swap space or, if no additional swap space is available, set `options(4) = 1`. This will prevent switching to QR and mincx will terminate when Cholesky fails due to numerical instabilities.

## References

The solver mincx implements Nesterov and Nemirovski's Projective Method as described in

Nesterov, Yu, and A. Nemirovski, *Interior Point Polynomial Methods in Convex Programming: Theory and Applications*, SIAM, Philadelphia, 1994.

Nemirovski, A., and P. Gahinet, "The Projective Method for Solving Linear Matrix Inequalities," *Proc. Amer. Contr. Conf.*, 1994, Baltimore, Maryland, pp. 840-844.

The optimization is performed by the C-MEX file `pds.mex`.

## See Also

`defcx` | `mincx` | `dec2mat` | `decnbr` | `feasp` | `gevp`

**Purpose**

$H_\infty$  mixed-sensitivity synthesis method for robust control loopshaping design

**Syntax**

`[K,CL,GAM,INFO]=mixsyn(G,W1,W2,W3)`

`[K,CL,GAM,INFO]=mixsyn(G,W1,W2,W3,KEY1,VALUE1,KEY2,VALUE2,...)`

**Description**

`[K,CL,GAM,INFO]=mixsyn(G,W1,W2,W3)` computes a controller  $K$  that minimizes the  $H_\infty$  norm of the closed-loop transfer function the weighted mixed sensitivity


$$T_{y1u1} \square \begin{bmatrix} W_1 S \\ W_2 R \\ W_3 T \end{bmatrix}$$

where  $S$  and  $T$  are called the *sensitivity* and *complementary sensitivity*, respectively and  $S$ ,  $R$  and  $T$  are given by

$$S = (I + GK)^{-1}$$

$$R = K(I + GK)^{-1}$$

$$T = GK(I + GK)^{-1}$$

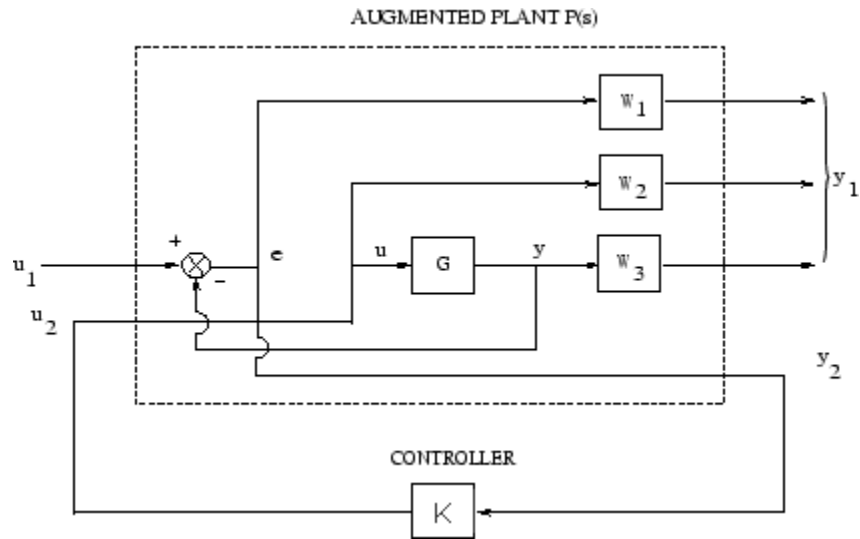

**Closed-loop transfer function  $T_{y_1 u_1}$  for mixed sensitivity mixsyn.**

The returned values of  $S$ ,  $R$ , and  $T$  satisfy the following loop shaping inequalities:

$$\bar{\sigma}(S(j\omega)) \leq \gamma \underline{\sigma}(W_1^{-1}(j\omega))$$

$$\bar{\sigma}(R(j\omega)) \leq \gamma \underline{\sigma}(W_2^{-1}(j\omega))$$

$$\bar{\sigma}(T(j\omega)) \leq \gamma \underline{\sigma}(W_3^{-1}(j\omega))$$

where  $\gamma = \text{GAM}$ . Thus,  $W_1$ ,  $W_3$  determine the shapes of sensitivity  $S$  and complementary sensitivity  $T$ . Typically, you would choose  $W_1$  to be small inside the desired control bandwidth to achieve good disturbance attenuation (i.e., performance), and choose  $W_3$  to be small outside the control bandwidth, which helps to ensure good stability margin (i.e., robustness).

For dimensional compatibility, each of the three weights  $W_1$ ,  $W_2$  and  $W_3$  must be either empty, scalar (SISO) or have respective input dimensions  $N_y$ ,  $N_u$ , and  $N_y$  where  $G$  is  $N_y$ -by- $N_u$ . If one of the weights is not needed,



you may simply assign an empty matrix []; e.g.,  $P = \text{AUGW}(G, W1, [], W3)$  is SYS but without the second row (without the row containing W2).

## Algorithms

`[K,CL,GAM,INFO]=mixsyn(G,W1,W2,W3,KEY1,VALUE1,KEY2,VALUE2,...)`

is equivalent to

`[K,CL,GAM,INFO]=...  
hinfsyn(augw(G,W1,W2,W3),KEY1,VALUE1,KEY2,VALUE2,...)`.


mixsyn accepts all the same key value pairs as hinfsyn.

## Examples

### Loop Shaping with mixsyn

This example shows the use of mixsyn for sensitivity and complementary sensitivity loop shaping.

```
s = zpk('s');
G = (s-1)/(s+1)^2;
W1 = 0.1*(s+100)/(100*s+1);
W2 = 0.1;
[K,CL,GAM] = mixsyn(G,W1,W2,[]);
L = G*K;
S = inv(1+L);
T = 1-S;
sigma(S,'g',T,'r',GAM/W1,'g-.',GAM*G/ss(W2),'r-.')
legend('S','T','GAM/W1','GAM*G/ss(W2)','Location','SouthWest')
```

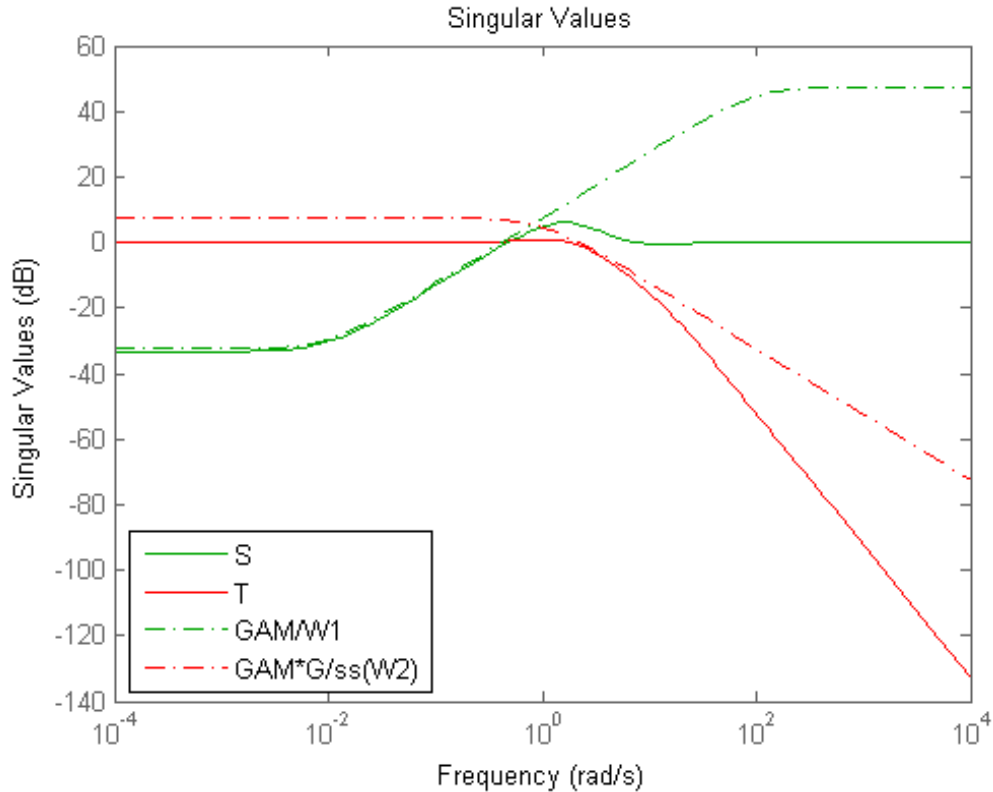

The `mixsyn` command shapes the singular values of  $S$  and  $T$  to conform to  $GAM/W1$  and  $GAM*G/W2$ , respectively.

## Limitations

The transfer functions  $G$ ,  $W_1$ ,  $W_2$  and  $W_3$  must be proper, i.e., bounded as  $s \rightarrow \infty$  or, in the discrete-time case, as  $z \rightarrow \infty$ . Additionally,  $W_1$ ,  $W_2$  and  $W_3$  should be stable. The plant  $G$  should be stabilizable and detectable; else,  $P$  will not be stabilizable by any  $K$ .

## See Also

`augw` | `hinfsyn`

**Purpose** Generate Bessel, Butterworth, Chebyshev, or RC filter

**Syntax**

```
sys = mkfilter(fc,ord,type)
sys = mkfilter(fc,ord,type,psbndr)
```

**Description** `sys = mkfilter(fc,ord,type)` returns a single-input, single-output analog low pass filter `sys` as an `ss` object. The cutoff frequency (Hertz) is `fc` and the filter order is `ord`, a positive integer. The string variable `type` specifies the type of filter and can be one of the following

String variable	Description
'butterw'	Butterworth filter
'cheby'	Chebyshev filter
'bessel'	Bessel filter
'rc'	Series of resistor/capacitor filters


The dc gain of each filter (except even-order Chebyshev) is set to unity.

`sys = mkfilter(fc,ord,type,psbndr)` contains the input argument `psbndr` that specifies the Chebyshev passband ripple (in dB). At the cutoff frequency, the magnitude is `-psbndr` dB. For even-order Chebyshev filters the DC gain is also `-psbndr` dB.

## Examples **Generate Filters**

Generate several different types of filters and compare their frequency responses.

```
butw = mkfilter(2,4,'butterw');
cheb = mkfilter(4,4,'cheby',0.5);
rc = mkfilter(1,4,'rc');
bode(butw,'-',cheb,'--',rc,'-.')
legend('Butterworth','Chebyshev','RC filter')
```

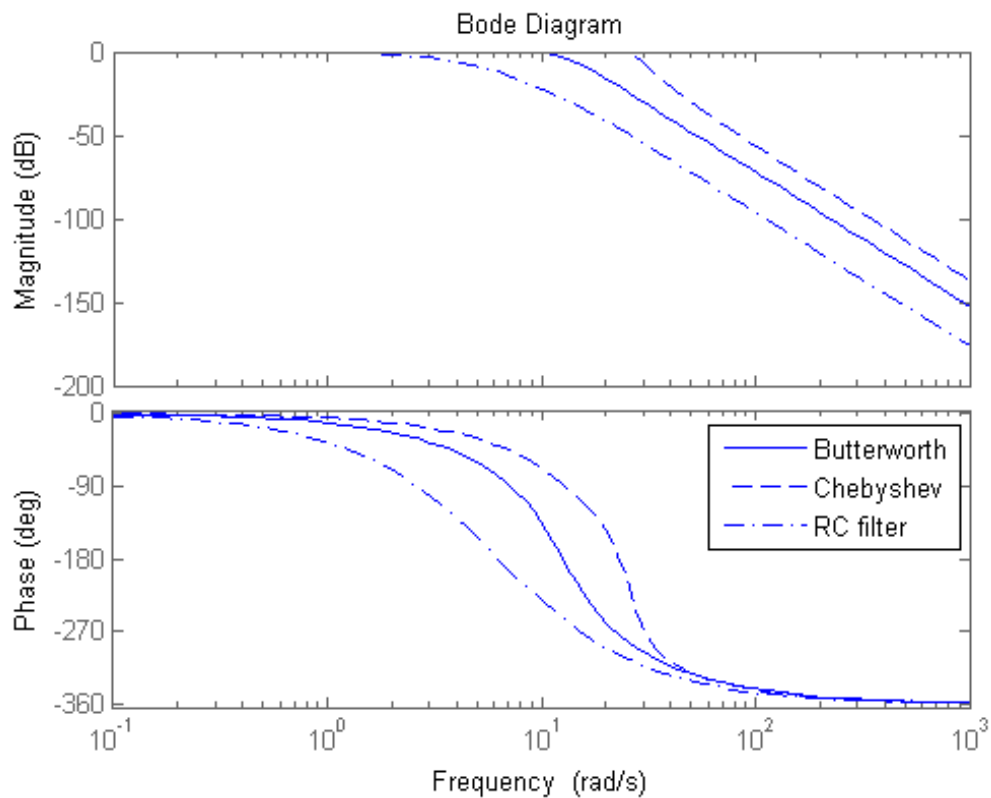

## Limitations

The Bessel filters are calculated using the recursive polynomial formula. This is poorly conditioned for high order filters (order > 8).

## See Also

augw


**Purpose** Partition LTI system into two-input/two-output system

**Syntax** `SYS=mktito(SYS,NMEAS,NCONT)`

**Description** `SYS=mktito(SYS,NMEAS,NCONT)` adds TITO (two-input/two-output) partitioning to LTI system `SYS`, assigning `OutputGroup` and `InputGroup` properties such that

$$NMEAS = \dim(y_2)$$

$$NCONT = \dim(u_2)$$

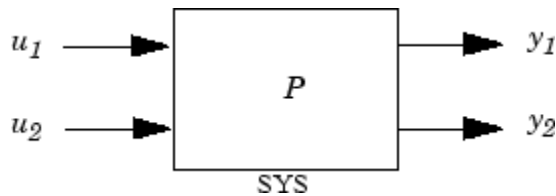

Any preexisting `OutputGroup` or `InputGroup` properties of `SYS` are overwritten. TITO partitioning simplifies syntax for control synthesis functions like `hinfsyn` and `h2syn`.

## Algorithms

```
[r,c]=size(SYS);
set(SYS,'InputGroup', struct('U1',1:c-NCONT,'U2',c-NCONT+1:c));
set(SYS,'OutputGroup',struct('Y1',1:r-NMEAS,'Y2',r-NMEAS+1:r));
```

## Examples

You can type

```
P=rss(2,4,5); P=mktito(P,2,2);
disp(P.OutputGroup); disp(P.InputGroup);
```

to create a 4-by-5 LTI system `P` with `OutputGroup` and `InputGroup` properties

```
U1: [1 2 3]
U2: [4 5]
Y1: [1 2]
```

Y2: [3 4]

## **See Also**

augw | hinfosyn | h2syn | sdhinfosyn

**Purpose** Modal form realization and projection

**Syntax** `[G1,G2] = modreal(G,cut)`

**Description** `[G1,G2] = modreal(G,cut)` returns a set of state-space LTI objects G1 and G2 in modal form given a state-space G and the model size of G1, cut.

The modal form realization has its A matrix in block diagonal form with either 1x1 or 2x2 blocks. The real eigenvalues will be put in 1x1 blocks and complex eigenvalues will be put in 2x2 blocks. These diagonal blocks are ordered in ascending order based on eigenvalue magnitudes.

The complex eigenvalue  $a+bj$  is appearing as 2x2 block

$$\begin{bmatrix} a & b \\ -b & a \end{bmatrix}$$

This table describes input arguments for `modreal`.

Argument	Description
G	LTI model to be reduced.
cut	(Optional) an integer to split the realization. Without it, a complete modal form realization is returned

This table lists output arguments.

Argument	Description
G1,G2	LTI models in modal form

G can be stable or unstable.  $G_1 = (A_1, B_1, C_1, D_1)$ ,  $G_2 = (A_2, B_2, C_2, D_2)$  and  $D_1 = D + C_2(-A_2)^{-1}B_2$  is calculated such that the system DC gain is preserved.

**Algorithms** Using a real eigen structure decomposition `reig` and ordering the eigenvectors in ascending order according to their eigenvalue magnitudes, we can form a similarity transformation out of these

ordered real eigenvectors such that the resulting systems G1 and/or G2 are in block diagonal modal form.

---

**Note** This routine is extremely useful when model has  $j\omega$ -axis singularities, e.g., rigid body dynamics. It has been incorporated inside Hankel based model reduction routines - `hankelmr`, `balancmr`, `bstmr`, and `schurmr` to isolate those  $j\omega$ -axis poles from the actual model reduction process.

---

## Examples

Given a continuous stable or unstable system, G, the following commands can get a set of modal form realizations depending on the split index -- cut:

```
rng(1234, 'twister');
G = rss(50,2,2);
[G1,G2] = modreal(G,2); % cut = 2 for two rigid body modes
G1.d = zeros(2,2); % remove the DC gain of the system from G1
sigma(G,G1,G2)
```

## See Also

`reduce` | `balancmr` | `schurmr` | `bstmr` | `ncfmr` | `hankelmr` | `hankelsv`



**Purpose** Multi-model/multi-objective state-feedback synthesis

**Syntax** `[gopt,h2opt,K,Pc1,X] = msfsyn(P,r,obj,region,tol)`

**Description** Given an LTI plant P with state-space equations

$$\begin{cases} \dot{x} = Ax + B_1w + B_2u \\ z_\infty = C_1x + D_{11}w + D_{12}u \\ z_2 = C_2x + D_{22}u \end{cases}$$

msfsyn computes a state-feedback control  $u = Kx$  that

- Maintains the RMS gain ( $H_\infty$  norm) of the closed-loop transfer function  $T_\infty$  from  $w$  to  $z_\infty$  below some prescribed value  $\gamma_0 > 0$
- Maintains the  $H_2$  norm of the closed-loop transfer function  $T_2$  from  $w$  to  $z_2$  below some prescribed value  $\nu_0 > 0$
- Minimizes an  $H_2/H_\infty$  trade-off criterion of the form

$$\alpha \|T_\infty\|_\infty^2 + \beta \|T_2\|_2^2$$

- Places the closed-loop poles inside the LMI region specified by `region` (see `lmireg` for the specification of such regions). The default is the open left-half plane.

Set `r = size(d22)` and `obj = [ $\gamma_0$ ,  $\nu_0$ ,  $\alpha$ ,  $\beta$ ]` to specify the problem dimensions and the design parameters  $\gamma_0$ ,  $\nu_0$ ,  $\alpha$ , and  $\beta$ . You can perform pure pole placement by setting `obj = [0 0 0 0]`. Note also that  $z_\infty$  or  $z_2$  can be empty.

On output, `gopt` and `h2opt` are the guaranteed  $H_\infty$  and  $H_2$  performances, `K` is the optimal state-feedback gain, `Pc1` the closed-loop transfer

function from  $w$  to  $\begin{pmatrix} z_\infty \\ z_2 \end{pmatrix}$ , and `X` the corresponding Lyapunov matrix.

The function `msfsyn` is also applicable to multi-model problems where `P` is a polytopic model of the plant:

$$\begin{cases} \dot{x} = A(t)x + B_1(t)w + B_2(t)u \\ z_\infty = C_1(t)x + D_{11}(t)w + D_{12}(t)u \\ z_2 = C_2(t)x + D_{22}(t)u \end{cases}$$

with time-varying state-space matrices ranging in the polytope

$$\begin{pmatrix} A(t) & B_1(t) & B_2(t) \\ C_1(t) & D_{11}(t) & D_{12}(t) \\ C_2(t) & 0 & D_{22}(t) \end{pmatrix} \in \text{Co} \left\{ \begin{pmatrix} A_k & B_k & C_k \\ C_{1k} & D_{11k} & D_{12k} \\ C_{2k} & 0 & D_{22k} \end{pmatrix} : k = 1, \dots, K \right\}$$

In this context, `msfsyn` seeks a state-feedback gain that robustly enforces the specifications over the entire polytope of plants. Note that polytopic plants should be defined with `psys` and that the closed-loop system `Pcl` is itself polytopic in such problems. Affine parameter-dependent plants are also accepted and automatically converted to polytopic models.

## See Also

`lmireg` | `psys`

**Purpose** Compute bounds on structured singular value ( $\mu$ )

**Syntax**

```

bounds = mussv(M,BlockStructure)
[ bounds,muinfo] = mussv(M,BlockStructure)
[ bounds,muinfo] = mussv(M,BlockStructure,Options)
[ubound,q] = mussv(M,F,BlockStructure)
[ubound,q] = mussv(M,F,BlockStructure,'s')
```

**Description** `bounds = mussv(M,BlockStructure)` calculates upper and lower bounds on the structured singular value, or  $\mu$ , for a given block structure. `M` is a `double`, or `frd` object. If `M` is an `N-D` array (with  $N \geq 3$ ), then the computation is performed pointwise along the third and higher array dimensions. If `M` is a `frd` object, the computations are performed pointwise in frequency (as well as any array dimensions).

`BlockStructure` is a matrix specifying the perturbation block structure. `BlockStructure` has 2 columns, and as many rows as uncertainty blocks in the perturbation structure. The  $i$ -th row of `BlockStructure` defines the dimensions of the  $i$ 'th perturbation block.

- If `BlockStructure(i,:) = [-r 0]`, then the  $i$ -th block is an  $r$ -by- $r$  repeated, diagonal real scalar perturbation;
- if `BlockStructure(i,:) = [r 0]`, then the  $i$ -th block is an  $r$ -by- $r$  repeated, diagonal complex scalar perturbation;
- if `BlockStructure(i,:) = [r c]`, then the  $i$ -th block is an  $r$ -by- $c$  complex full-block perturbation.
- If `BlockStructure` is omitted, its default is `ones(size(M,1),2)`, which implies a perturbation structure of all 1-by-1 complex blocks. In this case, if `size(M,1)` does not equal `size(M,2)`, an error results.

If `M` is a two-dimensional matrix, then `bounds` is a 1-by-2 array containing an upper (first column) and lower (second column) bound of the structured singular value of `M`. For all matrices `Delta` with block-diagonal structure defined by `BlockStructure` and with norm less than `1/bounds(1)` (upper bound), the matrix `I - M*Delta` is not singular. Moreover, there is a matrix `DeltaS` with block-diagonal structure defined by `BlockStructure` and with norm equal to

1/bounds(2) (lower bound), for which the matrix  $I - M \cdot \Delta S$  is singular.

The format used in the 3rd output argument from `lftdata` is also acceptable for describing the block structure.

If `M` is an `frd`, the computations are always performed pointwise in frequency. The output argument `bounds` is a 1-by-2 `frd` of upper and lower bounds at each frequency. Note that `bounds.Frequency` equals `M.Frequency`.

If `M` is an N-D array (either `double` or `frd`), the upper and lower bounds are computed pointwise along the 3rd and higher array dimensions (as well as pointwise in frequency, for `frd`). For example, suppose that `size(M)` is  $r \times c \times d_1 \times \dots \times d_F$ . Then `size(bounds)` is  $1 \times 2 \times d_1 \times \dots \times d_F$ . Using single index notation, `bounds(1,1,i)` is the upper bound for the structured singular value of  $M(:, :, i)$ , and `bounds(1,2,i)` is the lower bound for the structured singular value of  $M(:, :, i)$ . Here, any `i` between 1 and  $d_1 \cdot d_2 \cdot \dots \cdot d_F$  (the product of the  $d_k$ ) would be valid.

`bounds = mussv(M,BlockStructure,Options)` specifies computation options. `Options` is a character string, containing any combination of the following characters:

Option	Meaning
'a'	Upper bound to greatest accuracy, using LMI solver
'an'	Same as 'a', but without automatic prescaling
'd'	Display warnings
'f'	Fast upper bound (typically not as tight as the default)

Option	Meaning
'gN'	<p>Use gain-based lower bound method multiple times. The value of <math>N</math> sets the number of times, according to <math>10+N*10</math>. For example, 'g6' uses gain-based lower bound 70 times. Larger numbers typically give better lower bounds.</p> <p>If all uncertainty blocks described by blk are real, then the default is 'g1'. If at least one uncertainty block is complex, then mussv uses power iteration lower bound by default.</p>
'p'	<p>Use power iteration method to compute lower bound. When at least one of the uncertainty blocks described by blk is complex, then 'p' is the default lower bound method.</p>
'i'	<p>Reinitialize lower bound computation at each new matrix (only relevant if M is ND array or frd)</p>
'mN'	<p>Randomly reinitialize lower bound iteration multiple times. <math>N</math> is an integer between 1 and 9. For example, 'm7' randomly reinitializes the lower bound iteration 7 times. Larger numbers typically give better lower bounds.</p>
'o'	<p>Run “old” algorithms, from version 3.1.1 and before. Included to allow exact replication of earlier calculations.</p>
's'	<p>Suppress progress information (silent).</p>
'U'	<p>Upper-bound “only” (lower bound uses a fast/cheap algorithm).</p>
'x'	<p>Decrease iterations in lower bound computation (faster but not as tight as default). Use 'U' for an even faster lower bound.</p>

[bounds,muinfo] = mussv(M,BlockStructure) returns muinfo, a structure containing more detailed information. The information within

`muinfo` must be extracted using `mussvextract`. See `mussvextract` for more details.

### Generalized Structured Singular Value

`ubound = mussv(M,F,BlockStructure)` calculates an upper bound on the generalized structured singular value (generalized  $\mu$ ) for a given block structure. `M` is a `double` or `frd` object. `M` and `BlockStructure` are as before. `F` is an additional (`double` or `frd`).

`ubound = mussv(M,F,BlockStructure, 's')` adds an option to run silently. Other options are ignored for generalized  $\mu$  problems.

Note that in generalized structured singular value computations, only an upper bound is calculated. `ubound` is an upper bound of the generalized structured singular value of the pair  $(M,F)$ , with respect to the block-diagonal uncertainty described by `BlockStructure`. Consequently `ubound` is 1-by-1 (with additional array dependence, depending on `M` and `F`). For all matrices `Delta` with block-diagonal structure defined by `BlockStructure` and  $\text{norm} < 1/\text{ubound}$ , the matrix  $[I - \text{Delta} * M; F]$  is guaranteed not to lose column rank. This is verified by the matrix `Q`, which satisfies `mussv(M+Q*F,BlockStructure, 'a') <= ubound`.

## Examples

See `mussvextract` for a detailed example of the structured singular value.

A simple example for generalized structured singular value can be done with random complex matrices, illustrating the relationship between the upper bound for  $\mu$  and generalized  $\mu$ , as well as the fact that the upper bound for generalized  $\mu$  comes from an optimized  $\mu$  upper bound.

`M` is a complex 5-by-5 matrix and `F` is a complex 2-by-5 matrix. The block structure `BlockStructure` is an uncertain real parameter  $\delta_1$ , an uncertain real parameter  $\delta_2$ , an uncertain complex parameter  $\delta_3$  and a twice-repeated uncertain complex parameter  $\delta_4$ .

```
rng(929, 'twister')
M = randn(5,5) + sqrt(-1)*randn(5,5);
F = randn(2,5) + sqrt(-1)*randn(2,5);
BlockStructure = [-1 0; -1 0; 1 1; 2 0];
```

```
[ubound,Q] = mussv(M,F,BlockStructure);
bounds = mussv(M,BlockStructure);
optbounds = mussv(M+Q*F,BlockStructure);
```

The quantities `optbounds(1)` and `ubound` should be extremely close, and significantly lower than `bounds(1)` and `bounds(2)`.

```
[optbounds(1) ubound]
```

```
ans =
```

```
2.2070    2.1749
```

```
[bounds(1) bounds(2)]
```

```
ans =
```

```
4.4049    4.1960
```

## Algorithms

The lower bound is computed using a power method, Young and Doyle, 1990, and Packard *et al.* 1988, and the upper bound is computed using the balanced/AMI technique, Young *et al.*, 1992, for computing the upper bound from Fan *et al.*, 1991.

Peter Young and Matt Newlin wrote the original function.

The lower-bound power algorithm is from Young and Doyle, 1990, and Packard *et al.* 1988.

The upper-bound is an implementation of the bound from Fan *et al.*, 1991, and is described in detail in Young *et al.*, 1992. In the upper bound computation, the matrix is first balanced using either a variation of Osborne's method (Osborne, 1960) generalized to handle *repeated scalar* and *full* blocks, or a Perron approach. This generates the standard upper bound for the associated complex  $\mu$  problem. The Perron eigenvector method is based on an idea of Safonov, (Safonov, 1982). It gives the exact computation of  $\mu$  for positive matrices with

scalar blocks, but is comparable to Osborne on general matrices. Both the Perron and Osborne methods have been modified to handle *repeated scalar* and *full* blocks. Perron is faster for small matrices but has a growth rate of  $n^3$ , compared with less than  $n^2$  for Osborne. This is partly due to the MATLAB implementation, which greatly favors Perron. The default is to use Perron for simple block structures and Osborne for more complicated block structures. A sequence of improvements to the upper bound is then made based on various equivalent forms of the upper bound. A number of descent techniques are used that exploit the structure of the problem, concluding with general purpose LMI optimization (Boyd *et al.*), 1993, to obtain the final answer.

The optimal choice of  $Q$  (to minimize the upper bound) in the generalized  $\mu$  problem is solved by reformulating the optimization into a semidefinite program (Packard *et al.*, 1991).

## References

- [1] Boyd, S. and L. El Ghaoui, "Methods of centers for minimizing generalized eigenvalues," *Linear Algebra and Its Applications*, Vol. 188–189, 1993, pp. 63–111.
- [2] Fan, M., A. Tits, and J. Doyle, "Robustness in the presence of mixed parametric uncertainty and unmodeled dynamics," *IEEE Transactions on Automatic Control*, Vol. AC–36, 1991, pp. 25–38.
- [3] Osborne, E., "On preconditioning of matrices," *Journal of Associated Computer Machines*, Vol. 7, 1960, pp. 338–345.
- [4] Packard, A.K., M. Fan and J. Doyle, "A power method for the structured singular value," *Proc. of 1988 IEEE Conference on Control and Decision*, December 1988, pp. 2132–2137.
- [5] Safonov, M., "Stability margins for diagonally perturbed multivariable feedback systems," *IEEE Proc.*, Vol. 129, Part D, 1992, pp. 251–256.



[6] Young, P. and J. Doyle, “Computation of with real and complex uncertainties,” *Proceedings of the 29th IEEE Conference on Decision and Control*, 1990, pp. 1230–1235.

[7] Young, P., M. Newlin, and J. Doyle, “Practical computation of the mixed problem,” *Proceedings of the American Control Conference*, 1992, pp. 2190–2194.

**See Also**

mussvextract | robuststab | robustperf | wcgain | wcsens | wcmargin

**Purpose** Extract muinfo structure returned by mussv

**Syntax** [VDelta,VSigma,VLmi] = mussvextract(muinfo)

**Description** A structured singular value computation of the form

[bounds,muinfo] = mussv(M,BlockStructure)

returns detailed information in the structure muinfo. mussvextract is used to extract the compressed information within muinfo into a readable form.

The most general call to mussvextract extracts three usable quantities: VDelta, VSigma, and VLmi. VDelta is used to verify the lower bound. VSigma is used to verify the Newlin/Young upper bound and has fields DLeft, DRight, GLeft, GMiddle, and GRight. VLmi is used to verify the LMI upper bound and has fields Dr, Dc, Grc, and Gcr. The relation/interpretation of these quantities with the numerical results in bounds is described below.

## Upper Bound Information

The upper bound is based on a proof that  $\det(I - M \cdot \Delta)$  is nonzero for all block-structured matrices  $\Delta$  with norm smaller than  $1/\text{bounds}(1)$ . The Newlin/Young method consists of finding a scalar  $\beta$  and matrices  $D$  and  $G$ , consistent with BlockStructure, such that

$$\bar{\sigma} \left( (I + G_L^2)^{-\frac{1}{4}} \left( \frac{D_L M D_R^{-1}}{\beta} - j G_M \right) (I + G_R^2)^{-\frac{1}{4}} \right) \leq 1$$

Here  $D_L$ ,  $D_R$ ,  $G_L$ ,  $G_M$  and  $G_R$  correspond to the DLeft, DRight, GLeft, GMiddle and GRight fields respectively.

Because some uncertainty blocks and M need not be square, the matrices  $D$  and  $G$  have a few different manifestations. In fact, in the formula above, there are a left and right  $D$  and  $G$ , as well as a middle  $G$ . Any such  $\beta$  is an upper bound of  $\text{mussv}(M, \text{BlockStructure})$ .

It is true that if `BlockStructure` consists only of complex blocks, then all  $G$  matrices will be zero, and the expression above simplifies to

$$\bar{\sigma}(D_L M D_R^{-1}) \leq \beta.$$

The LMI method consists of finding a scalar  $\beta$  and matrices  $D$  and  $G$ , consistent with `BlockStructure`, such that

$$M'D_r M - \beta^2 D_c + j(G_{cr} M - M'G_{rc}) \leq 0$$

is negative semidefinite. Again,  $D$  and  $G$  have a few different manifestations to match the row and column dimensions of  $M$ . Any such  $\beta$  is an upper bound of `mussv(M,BlockStructure)`. If `BlockStructure` consists only of complex blocks, then all  $G$  matrices will be zero, and negative semidefiniteness of  $M'D_r M - \beta^2 D_c$  is sufficient to derive an upper bound.

### Lower Bound Information

The lower bound of `mussv(M,BlockStructure)` is based on finding a “small” (hopefully the smallest) block-structured matrix `VDelta` that causes `det(I - M*VDelta)` to equal 0. Equivalently, the matrix `M*VDelta` has an eigenvalue equal to 1. It will always be true that the lower bound (`bounds(2)`) will be the reciprocal of `norm(VDelta)`.

## Examples

Suppose  $M$  is a 4-by-4 complex matrix. Take the block structure to be two 1-by-1 complex blocks and one 2-by-2 complex block.

```
rng(0, 'twister')
M = randn(4,4) + sqrt(-1)*randn(4,4);
BlockStructure = [1 1;1 1;2 2];
```

You can calculate bounds on the structured singular value using the `mussv` command and extract the scaling matrices using `mussvextract`.

```
[bounds,muinfo] = mussv(M,BlockStructure);
[VDelta,VSigma,VLmi] = mussvextract(muinfo);
```

You can first verify the Newlin/Young upper bound with the information extracted from `muinfo`. The corresponding scalings are `Dl` and `Dr`.

```
Dl = VSigma.DLeft
```

```
Dl =
```

```
    1.0000    0    0    0
         0    0.7437    0    0
         0    0    1.0393    0
         0    0    0    1.0393
```

```
Dr = VSigma.DRight
```

```
Dr =
```

```
    1.0000    0    0    0
         0    0.7437    0    0
         0    0    1.0393    0
         0    0    0    1.0393
```

```
[norm(Dl*M/Dr) bounds(1)]
```

```
ans =
```

```
    6.2950    6.2950
```

You can first verify the LMI upper bound with the information extracted from `muinfo`. The corresponding scalings are `Dr` and `Dc`.

```
Dr = VLmi.Dr;
```

```
Dc = VLmi.Dc;
```

```
eig(M'*Dr*M - bounds(1)^2*Dc)
```

```
ans =
    -0.0000 - 0.0000i
   -17.7242 - 0.0000i
   -33.8550 + 0.0000i
   -41.2013 - 0.0000i
```

Note that VDelta matches the structure defined by BlockStructure, and the norm of VDelta agrees with the lower bound,

VDelta

VDelta =

```
    0.1301 - 0.0922i    0    0    0
         0          -0.0121 - 0.1590i    0    0
         0           0          -0.0496 - 0.0708i    0.1272 - 0.0000i
         0           0           0.0166 - 0.0163i    0.0076 + 0.0000i
```

[norm(VDelta) 1/bounds(2)]

```
ans =
    0.1595    0.1595
```

and that M\*VDelta has an eigenvalue exactly at 1.

eig(M\*VDelta)

```
ans =
    1.0000 - 0.0000i
   -0.2501 - 0.1109i
    0.0000 + 0.0000i
   -0.3022 + 0.2535i
```

Keep the matrix the same, but change `BlockStructure` to be a 2-by-2 repeated, real scalar block and two complex 1-by-1 blocks. Run `mussv` with the 'C' option to tighten the upper bound.

```
BlockStructure2 = [-2 0; 1 0; 1 0];  
[bounds2,muinfo2] = mussv(M,BlockStructure2,'C');
```

You can compare the computed bounds. Note that `bounds2` should be smaller than `bounds`, because the uncertainty set defined by `BlockStructure2` is a proper subset of that defined by `BlockStructure`.

```
[bounds; bounds2]
```

```
ans =
```

```
    6.2950    6.2704  
    5.1840    5.1750
```

You can extract the  $D$ ,  $G$  and  $\Delta$  from `muinfo2` using `mussvextract`.

```
[VDelta2,VSigma2,VLmi2] = mussvextract(muinfo2);
```

As before, you can first verify the Newlin/Young upper bound with the information extracted from `muinfo`. The corresponding scalings are  $D_l$ ,  $D_r$ ,  $G_l$ ,  $G_m$  and  $G_r$ .

```
Dl = VSigma2.DLeft;  
Dr = VSigma2.DRight;  
Gl = VSigma2.GLeft;  
Gm = VSigma2.GMiddle;  
Gr = VSigma2.GRight;  
dmd = Dl*M/Dr/bounds2(1) - sqrt(-1)*Gm;  
SL = (eye(4)+Gl*Gl)^-0.25;  
SR = (eye(4)+Gr*Gr)^-0.25;  
norm(SL*dmd*SR)
```

```
ans =
```

1.0000

You can first verify the LMI upper bound with the information extracted from `muinfo`. The corresponding scalings are `Dr`, `Dc`, `Grc` and `Gcr`.

```
Dr = VLmi2.Dr;
Dc = VLmi2.Dc;
Grc = VLmi2.Grc;
Gcr = VLmi2.Gcr;
eig(M'*Dr*M - bounds(1)^2 *Dc + j*(Gcr*M-M'*Grc))
```

ans =

```
-69.9757 + 0.0000i
-11.2139 - 0.0000i
-19.2766 - 0.0000i
-40.2869 - 0.0000i
```

`VDelta2` matches the structure defined by `BlockStructure`, and the norm of `VDelta2` agrees with the lower bound,

`VDelta2`

`VDelta2 =`

```
0.1932          0          0          0
      0      0.1932          0          0
      0          0      -0.1781 - 0.0750i  0
      0          0          0          0.0941 + 0.0000i
```

`[norm(VDelta2) 1/bounds2(2)]`

ans =

```
0.1932    0.1932
```

and that `M*VDelta2` has an eigenvalue exactly at 1.

## mussvextract

---

```
eig(M*VDelta2)
```

```
ans =
```

```
1.0000 + 0.0000i  
-0.4328 + 0.1586i  
0.1220 - 0.2648i  
-0.3688 - 0.3219i
```

### See Also

mussv



**Purpose** Calculate normalized coprime stability margin of plant-controller feedback loop


**Syntax**

```
[marg,freq] = ncfmargin(P,C)
[marg,freq] = ncfmargin(P,C,sign)
[marg,freq] = ncfmargin(P,C,sign,tol)
```

**Description** [marg,freq] = ncfmargin(P,C) returns the normalized coprime stability margin (also called the gap metric stability margin) of the multivariable feedback loop consisting of a controller, C, in negative feedback with a plant, P. This margin, marg, is achieved at the frequency freq. The normalized coprime stability margin is defined as:

$$\left\| \begin{bmatrix} I \\ C \end{bmatrix} (I - PC)^{-1} \begin{bmatrix} P & I \end{bmatrix} \right\|_{\infty}^{-1}.$$

The calculation assumes the feedback structure of the following diagram:

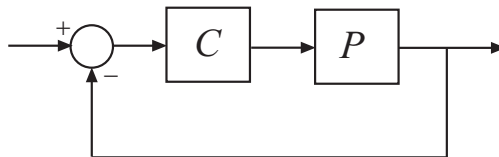


The normalized coprime robust stability margin is an indication of robustness to unstructured perturbations. The value of the margin lies between 0 and 1. Values greater than 0.3 generally indicate good robustness margins.

[marg,freq] = ncfmargin(P,C,sign) specifies the sign of the feedback connection assumed for the margin calculation. The default value, sign = -1, specifies negative feedback. Setting sign = +1 assumes a positive feedback connection for the margin calculation, as in the following diagram:

# ncfmargin

---

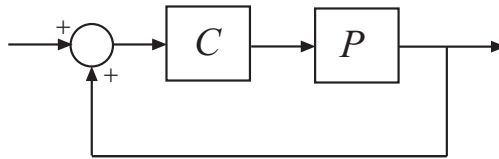

`[marg,freq] = ncfmargin(P,C,sign,tol)` calculates the normalized coprime factor metric with the specified relative accuracy. `tol` is a scalar value between  $10^{-5}$  and  $10^{-2}$ . The default value is `tol = 0.001` (0.1% accuracy).

## Examples

Consider an unstable first-order plant, `p`, stabilized by high-gain and low-gain controllers, `cL` and `cH`.

```
p = tf(4,[1 -0.001]);  
cL = 1;  
cH = 10;
```

Compute the stability margin of the closed-loop system with the low-gain controller.

```
[margL,~] = ncfmargin(p,cL)
```

```
margL =
```

```
0.7069
```

Similarly, compute the stability margin of the closed-loop system with the high-gain controller.

```
[margH,~] = ncfmargin(p,cH)
```

```
margH =
```

```
0.0995
```

The closed-loop systems with low-gain and high-gain controllers have normalized coprime stability margins of about 0.71 and 0.1,

respectively. This result indicates that the closed-loop system with low-gain controller is more robust to unstructured perturbations than the system with the high-gain controller.

To observe this difference in robustness, construct an uncertain plant, `punc`, that has an additional 11% unmodeled dynamics compared to the nominal plant.

```
punc = p + ultidyn('uncstruc',[1 1],'Bound',0.11);
```

Calculate the robust stability of the closed-loop systems formed by the uncertain plant and each controller.

```
[stabmargL,duL,reportL] = robuststab(feedback(punc,cL));
reportL
[stabmargH,duH,reportH] = robuststab(feedback(punc,cH));
reportH
```

```
reportL =
```

```
Uncertain system is robustly stable to modeled uncertainty.
```

```
-- It can tolerate up to 909% of the modeled uncertainty.
```

```
-- A destabilizing combination of 909% of the modeled uncertainty was found.
```

```
-- This combination causes an instability at 2e+03 rad/seconds.
```

```
-- Sensitivity with respect to the uncertain element is:
```

```
    'uncstruc' is 100%. Increasing 'uncstruc' by 25% leads to a 25% decrease in the mar
```

```
reportH =
```

```
Uncertain system is not robustly stable to modeled uncertainty.
```

```
-- It can tolerate up to 90.9% of the modeled uncertainty.
```

```
-- A destabilizing combination of 90.9% of the modeled uncertainty was found.
```

```
-- This combination causes an instability at 2e+04 rad/seconds.
```

```
-- Sensitivity with respect to the uncertain element is:
```

```
    'uncstruc' is 100%. Increasing 'uncstruc' by 25% leads to a 25% decrease in the mar
```

As expected, the robust stability analysis shows that the closed-loop system with low-gain controller is more robustly stable in the presence of the unmodeled LTI dynamics. In fact, this closed-loop system can tolerate 909% (or  $9.09 \times 11\%$ ) of the unmodeled dynamics. In contrast, closed-loop system with the high-gain controller is not robustly stable. That closed-loop system can only tolerate 90.9% (or  $0.909 \times 11\%$ ) of the unmodeled dynamics.

## Algorithms

The computation of the normalized coprime stability margin amounts to solving 2-block  $H_\infty$  problems. [1] The function, `ncfmargin`, is based on [2].

## References

- [1] Georgiou, T.T., "On the computation of the gap metric," *Systems & Control Letters*, Vol. 11, No. 4, 1988, pp. 253-257.
- [2] Green, M., Glover, K., D. Limebeer, and J.C. Doyle, "A J-spectral factorization approach to  $H_\infty$  control," *SIAM Journal on Control and Optimization*, Vol. 28, No. 6, 1990, pp. 1350-1371.

## See Also

`ncfsyn` | `loopmargin` | `gapmetric` | `wcmargin`

**Purpose**

Balanced model truncation for normalized coprime factors

**Syntax**

```
GRED = ncfmr(G)
GRED = ncfmr(G,order)
[GRED,redinfo] = ncfmr(G,key1,value1,...)
[GRED,redinfo] = ncfmr(G,order,key1,value1,...)
```

**Description**

ncfmr returns a reduced order model GRED formed by a set of balanced normalized coprime factors and a struct array redinfo containing the left and right coprime factors of G and their coprime Hankel singular values.

Hankel singular values of coprime factors of such a stable system indicate the respective “state energy” of the system. Hence, reduced order can be directly determined by examining the system Hankel SV’s.

With only one input argument G, the function will show a Hankel singular value plot of the original model and prompt for model order number to reduce.

The *left and right normalized coprime factors* are defined as [1]

- *Left Coprime Factorization:*  $G = M_l^{-1}(s)N_l(s)$

- *Right Coprime Factorization:*  $G = N_r(s)M_r^{-1}(s)$

where there exist stable  $U_r(s)$ ,  $V_r(s)$ ,  $U_l(s)$  and  $V_l(s)$  such that

$$U_r N_r + V_r M_r = I$$

$$N_l U_l + M_l V_l = I$$

The left/right coprime factors are stable, hence implies  $M_r(s)$  should contain as RHP-zeros all the RHP-poles of  $G(s)$ . The coprimeness also implies that there should be no common RHP-zeros in  $N_r(s)$  and

$M_r(s)$ , i.e., when forming  $G = N_r(s)M_r^{-1}(s)$ , there should be no pole-zero cancellations.

This table describes input arguments for ncmfr.

Argument	Description
G	LTI model to be reduced (without any other inputs will plot its Hankel singular values and prompt for reduced order)
ORDER	(Optional) Integer for the desired order of the reduced model, or optionally a vector packed with desired orders for batch runs

A batch run of a serial of different reduced order models can be generated by specifying `order = x:y`, or a vector of integers. By default, all the anti-stable part of a system is kept, because from control stability point of view, getting rid of unstable state(s) is dangerous to model a system. The `ncfmr` method allows the original model to have  $j\omega$ -axis singularities.

'*MaxError*' can be specified in the same fashion as an alternative for 'ORDER'. In this case, reduced order will be determined when the sum of the tails of the Hankel singular values reaches the '*MaxError*'.

Argument	Value	Description
' <i>MaxError</i> '	A real number or a vector of different errors	Reduce to achieve $H_\infty$ error. When present, ' <i>MaxError</i> ' overrides ORDER input.
' <i>Display</i> '	' <i>on</i> ' or ' <i>off</i> '	Display Hankel singular plots (default ' <i>off</i> ').
' <i>Order</i> '	integer, vector or cell array	Order of reduced model. Use only if not specified as 2nd argument.

Weights on the original model input and/or output can make the model reduction algorithm focus on some frequency range of interests. But weights have to be stable, minimum phase, and invertible.

This table describes output arguments.

Argument	Description
GRED	LTI reduced order model, that becomes multi-dimensional array when input is a serial of different model order array.
REDINFO	A STRUCT array with 3 fields: <ul style="list-style-type: none"> <li>• REDINFO.GL (left coprime factor)</li> <li>• REDINFO.GR (right coprime factor)</li> <li>• REDINFO.hsv (Hankel singular values)</li> </ul>

$G$  can be stable or unstable, continuous or discrete.

## Algorithms

Given a state space  $(A, B, C, D)$  of a system and  $k$ , the desired reduced order, the following steps will produce a similarity transformation to truncate the original state-space system to the  $k^{th}$  order reduced model.

- 1 Find the normalized coprime factors of  $G$  by solving Hamiltonian described in [1].

$$G_l = [N_l \quad M_l]$$

$$G_r = \begin{bmatrix} N_r \\ M_r \end{bmatrix}$$

- 2 Perform  $k^{th}$  order square root balanced model truncation on  $G_l$  (or  $G_r$ ) [2].

- 3 The reduced model GRED is:

$$\left[ \begin{array}{c|c} \hat{A} & \hat{B} \\ \hline \hat{C} & \hat{D} \end{array} \right] = \left[ \begin{array}{c|c} A_c - B_m C_l & B_n - B_m D_l \\ \hline C_l & D_l \end{array} \right]$$

where

$$N_l := (A_c, B_n, C_c, D_n)$$

$$M_l := (A_c, B_m, C_c, D_m)$$

$$C_l = (D_m)^{-1} C_c$$

$$D_l = (D_m)^{-1} D_n$$

## Examples

Given a continuous or discrete, stable or unstable system, G, the following commands can get a set of reduced order models based on your selections:

```
rng(1234, 'twister');
G = rss(30,5,4); G.d = zeros(5,4);
[g1, redinfo1] = ncfmr(G); % display Hankel SV plot
                        % and prompt for order (try 15:20)
[g2, redinfo2] = ncfmr(G,20);
[g3, redinfo3] = ncfmr(G,[10:2:18]);
[g4, redinfo4] = ncfmr(G,'MaxError',[0.01, 0.05]);
for i = 1:4
    figure(i); eval(['sigma(G,g' num2str(i) ' ');]);
end
```

## References

- [1] M. Vidyasagar. *Control System Synthesis - A Factorization Approach*. London: The MIT Press, 1985.
- [2] M. G. Safonov and R. Y. Chiang, "A Schur Method for Balanced Model Reduction," *IEEE Trans. on Automat. Contr.*, vol. AC-2, no. 7, July 1989, pp. 729-733.

## See Also

reduce | balancmr | schurmr | bstmr | hankelmr | hankelsv



**Purpose**

Loop shaping design using Glover-McFarlane method

**Syntax**

```
[K,CL,GAM,INFO]=ncfsyn(G)
[K,CL,GAM,INFO]=ncfsyn(G,W1)
[K,CL,GAM,INFO]=ncfsyn(G,W1,W2)
[K,CL,GAM,INFO]=ncfsyn(G,W1,W2,'ref')
```

**Description**

ncfsyn is a method for designing controllers that uses a combination of loop shaping and robust stabilization as proposed in McFarlane and Glover [1]-[2]. The first step is for you to select a pre- and post-compensator  $W_1$  and  $W_2$ , so that the gain of the 'shaped plant'  $G_s := W_2 G W_1$  is sufficiently high at frequencies where good disturbance attenuation is required and is sufficiently low at frequencies where good robust stability is required. The second step is to use ncfsyn to compute an optimal *positive* feedback controllers  $K$ .

The optimal  $K_s$  has the property that the sigma plot of the shaped loop

$$L_s = W_2 * G * W_1 * K_s$$

matches the target loop shape  $G_s$  optimally, roughly to within plus or minus  $20 * \log_{10}(\text{GAM})$  db. The number margin  $\text{GAM} = 1 / \text{ncfmargin}(G_s, K)$  and is always greater than 1. GAM gives a good indication of robustness of stability to a wide class of unstructured plant variations, with values in the range  $1 < \text{GAM} < 3$  corresponding to satisfactory stability margins for most typical control system designs.

`[K,CL,GAM,INFO]=ncfsyn(G,W1,W2,'ref')` computes the Glover-McFarlane  $H_\infty$  normalized coprime factor loop-shaping controller  $K$ , with a reference command, for lti plant  $G$ , weights  $W1$  and  $W2$  if the 'ref' option is included. The closed-loop system  $CL$  represents the transfer matrix from the reference and disturbance to the feedback error and output of  $W1$ .

**Algorithms**

$K = W_2 * K_s * W_1$ , where  $K_s = K_\infty$  is an optimal  $H_\infty$  controller that simultaneously minimizes the two  $H_\infty$  cost functions

$$\gamma := \min_K \left\| \begin{bmatrix} I \\ K \end{bmatrix} (I - G_s K)^{-1} [G_s, I] \right\|_{\infty}$$

$$\gamma := \min_K \left\| \begin{bmatrix} I \\ G_s \end{bmatrix} (I - K G_s)^{-1} [K, I] \right\|_{\infty}$$

Roughly speaking, this means for most plants that

$$\sigma(W_2 G W_1 K_{\infty}), \text{ db} = \sigma(W_2 G W_1), \text{ db} \pm \gamma, \text{ db}$$

$$\sigma(K_{\infty} W_2 G W_1), \text{ db} = \sigma(W_2 G W_1), \text{ db} \pm \gamma, \text{ db},$$

so you can use the weights  $W_1$  and  $W_2$  for loopshaping. For a more precise bounds on loopshaping accuracy, see Theorem 16.12 of Zhou and Glover.

Theory ensures that if  $G_s = NM^{-1}$  is a normalized coprime factorization (NCF) of the weighted plant model  $G_s$  satisfying

$$G_s = N(j\omega) * N(j\omega) + M(j\omega) * M(j\omega) = I,$$

then the control system will remain robustly stable for any perturbation  $\tilde{G}_s$  to the weighted plant model  $G_s$  that can be written

$$\tilde{G}_s = (N + \Delta_1)(M + \Delta_2)^{-1}$$

for some stable pair  $\Delta_1, \Delta_2$  satisfying

$$\left\| \begin{bmatrix} \Delta_1 \\ \Delta_2 \end{bmatrix} \right\|_{\infty} < \text{MARG} := 1 / \text{GAM}$$

The closed-loop  $H_{\infty}$ -norm objective has the standard signal gain interpretation. Finally it can be shown that the controller,  $K_{\infty}$ , does not substantially affect the loop shape in frequencies where the gain of  $W_2 G W_1$  is either high or low, and will guarantee satisfactory stability

margins in the frequency region of gain cross-over. In the regulator set-up, the final controller to be implemented is  $K=W_1K_\infty W_2$ .

### Input Arguments

G	LTI plant to be controlled
W1,W2	Stable minimum-phase LTI weights, either SISO or MIMO. Default is $W_1=I, W_2=I$
'ref'	Reference input to controller. Default is no reference input is included.

### Output Arguments

K	LTI controller $K= W_1 * K_s * W_2$
CL	$\begin{bmatrix} I \\ K_\infty \end{bmatrix} (I - W_2 G W_1 K_\infty)^{-1} [W_2 G W_1, I]$ , LTI $H_\infty$ optimal closed loop
GAM	$H_\infty$ optimal cost $\frac{1}{b(W_2 G W_1, K_\infty)} = \text{hinfnorm}(CL) \geq 1$
INFO	Structure array containing additional information

Additional output INFO fields

INFO.emax	nugap robustness $\text{emax}=1/\text{GAM}=\text{ncfmargin}(G_s, -K_s)=b(W_2 G W_1, K_\infty)$
INFO.Gs	'shaped plant' $G_s=W_2 * G * W_1$
INFO.Ks	$K_s = K[[\text{BULLET}]] = \text{NCFSYN}(G_s) = \text{NCFSYN}(W_2 * G * W_1)$

[MARG,FREQ] = ncfmargin(G,K,TOL) calculates the normalized coprime factor/gap metric robust stability margin assuming *negative* feedback.

$$\text{MARG} = b(G, -K) = 1 / \left\| \begin{bmatrix} I \\ -K \end{bmatrix} (I + GK)^{-1} [G, I] \right\|_{\infty}$$

where G and K are LTI plant and controller, and TOL (default=.001) is the tolerance used to compute the  $H_{\infty}$  norm. FREQ is the peak frequency. That is, the frequency at which the infinity norm is reached to within TOL.

## Algorithms


See McFarlane and Glover [1]–[2] for details.

## Examples

### Loop Shaping With ncfsyn

The following code shows how ncfsyn can be used for loop-shaping.

```
s = zpk('s');
G = (s-1)/(s+1)^2;
W1 = 0.5/s;
[K,CL,GAM] = ncfsyn(G,W1);
sigma(G*K, 'r', G*W1, 'r-.', G*W1*GAM, 'k-.', G*W1/GAM, 'k-.')
```

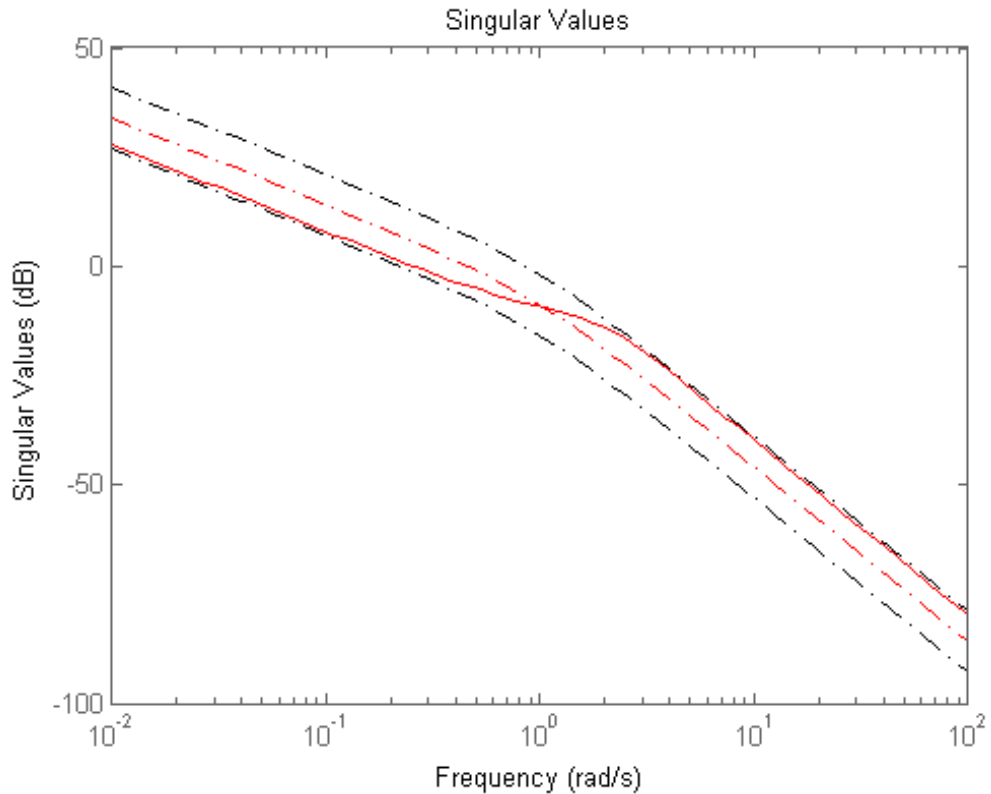

The singular value plot of the achieved loop  $G^*K$  is equal to that of the target loop  $G^*W1$  to within plus or minus  $GAM$  (in dB).

## References

[1] McFarlane, D.C., and K. Glover, Robust Controller Design using Normalised Coprime Factor Plant Descriptions, Springer Verlag, *Lecture Notes in Control and Information Sciences*, vol. 138, 1989.

[2] McFarlane, D.C., and K. Glover, "A Loop Shaping Design Procedure using Synthesis," *IEEE Transactions on Automatic Control*, vol. 37, no. 6, pp. 759–769, June 1992.

[3] Vinnicombe, G., "Measuring Robustness of Feedback Systems," PhD dissertation, Department of Engineering, University of Cambridge, 1993.

[4] Zhou, K., and J.C. Doyle, *Essentials of Robust Control*. NY: Prentice-Hall, 1998.

## See Also

`gapmetric` | `hinfsyn` | `loopsyn` | `ncfmargin`

**Purpose** Attach identifying tag to LMIs

**Syntax** tag = newlmi

**Description** newlmi adds a new LMI to the LMI system currently described and returns an identifier tag for this LMI. This identifier can be used in lmiterm, showlmi, or dellmi commands to refer to the newly declared LMI. Tagging LMIs is *optional* and only meant to facilitate code development and readability.

Identifiers can be given mnemonic names to help keep track of the various LMIs. Their value is simply the ranking of each LMI in the system (in the order of declaration). They prove useful when some LMIs are deleted from the LMI system. In such cases, the identifiers are the safest means of referring to the remaining LMIs.

**See Also** setlmis | lmivar | lmiterm | getlmis | lmiedit | dellmi

# normalized2actual

---

**Purpose** Convert value for atom in normalized coordinates to corresponding actual value

**Syntax** `avalue = normalized2actual(A,NV)`

**Description** Converts a normalized value NV of a atom to its corresponding actual (unnormalized) value.

If NV is an array of values, then `avalue` will be an array of the same dimension.

**Examples** Create uncertain real parameters with a range that is symmetric about the nominal value, where each endpoint is 1 unit from the nominal. Points that lie inside the range are less than 1 unit from the nominal, while points that lie outside the range are greater than 1 unit from the nominal.

```
a = ureal('a',3,'range',[1 5]);
actual2normalized(a,[1 3 5])
ans =
    -1.0000    -0.0000     1.0000
normalized2actual(a,[-1 1])
ans =
     1.0000     5.0000
normalized2actual(a,[-1.5 1.5])
ans =
     0.0000     6.0000
```

**See Also** `actual2normalized` | `robuststab` | `robustperf`



**Purpose** Assess robust stability of polytopic or parameter-dependent system

**Syntax** [tau,Q0,Q1,...] = pdlstab(pds,options)

**Description** pdlstab uses parameter-dependent Lyapunov functions to establish the stability of uncertain state-space models over some parameter range or polytope of systems. Only sufficient conditions for the existence of such Lyapunov functions are available in general. Nevertheless, the resulting robust stability tests are always less conservative than quadratic stability tests when the parameters are either time-invariant or slowly varying.

For an affine parameter-dependent system

$$E(p)x' = A(p)x + B(p)u$$

$$y = C(p)x + D(p)u$$

with  $p = (p_1, \dots, p_n) \in R^n$ , pdlstab seeks a Lyapunov function of the form

$$V(x,p) = x^T Q(p) x, \quad Q(p) = Q_0 + p_1 Q_1 + \dots + p_n Q_n$$

such that  $dV(x,p)/dt < 0$  along all admissible parameter trajectories.

The system description pds is specified with psys and contains information about the range of values and rate of variation of each parameter  $p_i$ .

For a *time-invariant* polytopic system

$$Ex' = Ax + Bu$$

$$y = Cx + Du$$

with

$$\begin{pmatrix} A + jE & B \\ C & D \end{pmatrix} = \sum_{i=1}^n \alpha_i \begin{pmatrix} A + jE_i & B_i \\ C_i & D_i \end{pmatrix}, \quad \alpha_i \geq 0, \quad \sum_{i=1}^n \alpha_i = 1 \quad (2-17)$$

pdlstab seeks a Lyapunov function of the form

$$V(x, \alpha) = x^T Q(\alpha) x, \quad Q(\alpha) = \alpha_1 Q_1 + \dots + \alpha_n Q_n$$

such that  $dV(x, \alpha)/dt < 0$  for all polytopic decompositions of the form Equation 2-17.

Several options and control parameters are accessible through the optional argument `options`:

- Setting `options(1)=0` tests robust stability (default)
- When `options(2)=0`, `pdlstab` uses simplified sufficient conditions for faster running times. Set `options(2)=1` to use the least conservative conditions

## Tips

For affine parameter-dependent systems with *time-invariant* parameters, there is equivalence between the robust stability of

$$E(p)\dot{x} = A(p)x \quad (2-18)$$

and that of the dual system

$$E(p)^T \dot{z} = A(p)^T z \quad (2-19)$$

However, the second system may admit an affine parameter-dependent Lyapunov function while the first does not.

In such case, `pdlstab` automatically restarts and tests stability on the dual system Equation 2-19 when it fails on Equation 2-18.

## See Also

`quadstab`

<b>Purpose</b>	Time response of parameter-dependent system along given parameter trajectory
<b>Syntax</b>	<pre>pdsimul(pds, 'traj', tf, 'ut', xi, options) [t,x,y] = pdsimul(pds, pv, 'traj', tf, 'ut', xi, options)</pre>
<b>Description</b>	<p>pdsimul simulates the time response of an affine parameter-dependent system</p> $E(p)x' = A(p)x + B(p)u$ $y = C(p)x + D(p)u$ <p>along a parameter trajectory <math>p(t)</math> and for an input signal <math>u(t)</math>. The parameter trajectory and input signals are specified by two time functions <math>p=\text{traj}(t)</math> and <math>u=\text{ut}(t)</math>. If 'ut' is omitted, the response to a step input is computed by default.</p> <p>The affine system pds is specified with psys. The function pdsimul also accepts the polytopic representation of such systems as returned by aff2pol(pds) or hinfgs. The final time and initial state vector can be reset through tf and xi (their respective default values are 5 seconds and 0). Finally, options gives access to the parameters controlling the ODE integration (type help gear for details).</p> <p>When invoked without output arguments, pdsimul plots the output trajectories <math>y(t)</math>. Otherwise, it returns the vector of integration time points t as well as the state and output trajectories x,y.</p>
<b>See Also</b>	psys   pvec

# polydec

---

**Purpose** Compute polytopic coordinates with respect to box corners

**Syntax**  
`vertx = polydec(PV)`  
`[C,vertx] = polydec(PV,P)`

**Description** `vertx = polydec(PV)` takes an uncertain parameter vector `PV` taking values ranging in a box, and returns the corners or vertices of the box as columns of the matrix `vertx`.

`[C,vertx] = polydec(PV,P)` takes an uncertain parameter vector `PV` and a value `P` of the parameter vector `PV`, and returns the convex decomposition `C` of `P` over the set `VERTX` of box corners:

$$P = c_1 \text{VERTX}(:,1) + \dots + c_n \text{VERTX}(:,n)$$
$$c_j \geq 0, \quad c_1 + \dots + c_n = 1$$

The list `vertx` of corners can be obtained directly by typing

```
vertx = polydec(PV)
```

**See Also** `pvec` | `pvinfos` | `aff2pol` | `hinfo`

---

<b>Purpose</b>	Perform Popov robust stability test
<b>Syntax</b>	<code>[t,P,S,N] = popov(sys,delta,flag)</code>
<b>Description</b>	<p>popov uses the Popov criterion to test the robust stability of dynamical systems with possibly nonlinear and/or time-varying uncertainty. The uncertain system must be described as the interconnection of a nominal LTI system <code>sys</code> and some uncertainty <code>delta</code>.</p> <p>The command</p> <pre>[t,P,S,N] = popov(sys,delta)</pre> <p>tests the robust stability of this interconnection. Robust stability is guaranteed if <math>t &lt; 0</math>. Then <code>P</code> determines the quadratic part <math>x^T P x</math> of the Lyapunov function and <code>D</code> and <code>S</code> are the Popov multipliers.</p> <p>If the uncertainty <code>delta</code> contains real parameter blocks, the conservatism of the Popov criterion can be reduced by first performing a simple loop transformation. To use this refined test, call <code>popov</code> with the syntax</p> <pre>[t,P,S,N] = popov(sys,delta,1)</pre>
<b>See Also</b>	<code>quadstab</code>   <code>pd1stab</code>

**Purpose** Inquire about polytopic or parameter-dependent systems created with `psys`

**Syntax**

```
psinfo(ps)
[type,k,ns,ni,no] = psinfo(ps)
pv = psinfo(ps,'par')
sk = psinfo(ps,'sys',k)
sys = psinfo(ps,'eval',p)
```

**Description** `psinfo` is a multi-usage function for queries about a polytopic or parameter-dependent system `ps` created with `psys`. It performs the following operations depending on the calling sequence:

- `psinfo(ps)` displays the type of system (affine or polytopic); the number `k` of `SYSTEM` matrices involved in its definition; and the numbers of `ns`, `ni`, `no` of states, inputs, and outputs of the system. This information can be optionally stored in `MATLAB` variables by providing output arguments.
- `pv = psinfo(ps,'par')` returns the parameter vector description (for parameter-dependent systems only).
- `sk = psinfo(ps,'sys',k)` returns the  $k$ -th `SYSTEM` matrix involved in the definition of `ps`. The ranking `k` is relative to the list of systems `syslist` used in `psys`.
- `sys = psinfo(ps,'eval',p)` instantiates the system for a given vector `p` of parameter values or polytopic coordinates.

For *affine parameter-dependent* systems defined by the `SYSTEM` matrices  $S_0, S_1, \dots, S_n$ , the entries of `p` should be real parameter values  $p_1, \dots, p_n$  and the result is the LTI system of `SYSTEM` matrix

$$S(p) = S_0 + p_1 S_1 + \dots + p_n S_n$$

For *polytopic* systems with `SYSTEM` matrix ranging in

$$\text{Co}\{S_1, \dots, S_n\},$$

the entries of  $\mathbf{p}$  should be polytopic coordinates  $p_1, \dots, p_n$  satisfying  $p_j \geq 0$  and the result is the interpolated LTI system of SYSTEM matrix

$$S = \frac{p_1 S_1 + \dots + p_n S_n}{p_1 + \dots + p_n}$$

**See Also**

psys

**Purpose** Specify polytopic or parameter-dependent linear systems

**Syntax**  
`pols = psys(syslist)`  
`affs = psys(pv, syslist)`

**Description** `psys` specifies state-space models where the state-space matrices can be uncertain, time-varying, or parameter-dependent.

`psys` supports two types of uncertain state-space models:

- *Polytopic* systems

$$E(t) \dot{x} = A(t)x + B(t)u$$

$$y = C(t)x + D(t)u$$

whose SYSTEM matrix takes values in a fixed polytope:

$$\underbrace{\begin{bmatrix} A(t) + jE(t) & B(t) \\ C(t) & D(t) \end{bmatrix}}_{S(t)} \in \text{Co} \left\{ \underbrace{\begin{bmatrix} A_1 + jE_1 & B_1 \\ C_1 & D_1 \end{bmatrix}}_{S_1}, \dots, \underbrace{\begin{bmatrix} A_k + jE_k & B_k \\ C_k & D_k \end{bmatrix}}_{S_k} \right\}$$

where  $S_1, \dots, S_k$  are given “vertex” systems and

$$\text{Co}\{S_1, \dots, S_k\} = \left\{ \sum_{i=1}^k \alpha_i S_i : \alpha_i \geq 0, \sum_{i=1}^k \alpha_i = 1 \right\}$$

denotes the convex hull of  $S_1, \dots, S_k$  (polytope of matrices with vertices  $S_1, \dots, S_k$ )

- *Affine parameter-dependent* systems

$$E(p)\dot{x} = A(p)x + B(p)u$$

$$y = C(p)x + D(p)u$$



where  $A(\cdot); B(\cdot), \dots, E(\cdot)$  are fixed affine functions of some vector  $p = (p_1, \dots, p_n)$  of real parameters, i.e.,

$$\underbrace{\begin{bmatrix} A(p) + jE(p) & B(p) \\ C(p) & D(p) \end{bmatrix}}_{S(p)} = \underbrace{\begin{bmatrix} A_0 + jE_0 & B_0 \\ C_0 & D_0 \end{bmatrix}}_{S_0} + p_1 \underbrace{\begin{bmatrix} A_1 + jE_1 & B_1 \\ C_1 & D_1 \end{bmatrix}}_{S_1} + \dots + p_n \underbrace{\begin{bmatrix} A_n + jE_n & B_n \\ C_n & D_n \end{bmatrix}}_{S_n}$$

where  $S_0, S_1, \dots, S_n$  are given SYSTEM matrices. The parameters  $p_i$  can be time-varying or constant but uncertain.

The argument `syslist` lists the SYSTEM matrices  $S_i$  characterizing the polytopic value set or parameter dependence. In addition, the description `pv` of the parameter vector (range of values and rate of variation) is required for affine parameter-dependent models (see `pvec` for details). Thus, a polytopic model with vertex systems  $S_1, \dots, S_4$  is created by

```
pol1s = psys([s1,s2,s3,s4])
```

while an affine parameter-dependent model with 4 real parameters is defined by

```
affs = psys(pv,[s0,s1,s2,s3,s4])
```

The output is a structured matrix storing all the relevant information.

**See Also**

`psinfo` | `pvec` | `aff2pol`

**Purpose** Specify range and rate of variation of uncertain or time-varying parameters

**Syntax**  
`pv = pvec('box', range, rates)`  
`pv = pvec('pol', vertices)`

**Description** `pvec` is used in conjunction with `psys` to specify parameter-dependent systems. Such systems are parametrized by a vector  $p = (p_1, \dots, p_n)$  of uncertain or time-varying real parameters  $p_i$ . The function `pvec` defines the range of values and the rates of variation of these parameters.

The type 'box' corresponds to independent parameters ranging in intervals

$$\underline{p}_j \leq p_j \leq \bar{p}_j$$

The parameter vector  $p$  then takes values in a hyperrectangle of  $R^n$  called the parameter box. The second argument `range` is an  $n$ -by-2

matrix that stacks up the extremal values  $\underline{p}_j$  and  $\bar{p}_j$  of each  $p_j$ . If the third argument `rates` is omitted, all parameters are assumed time-invariant. Otherwise, `rates` is also an  $n$ -by-2 matrix and its  $j$ -th

row specifies lower and upper bounds  $\underline{v}_j$  and  $\bar{v}_j$  on  $\frac{dp_j}{dt}$ :

$$\underline{v}_j \leq \frac{dp_j}{dt} \leq \bar{v}_j$$

Set  $\underline{v}_j = -\text{Inf}$  and  $\bar{v}_j = \text{Inf}$  if  $p_j(t)$  can vary arbitrarily fast or discontinuously.

The type 'pol' corresponds to parameter vectors  $p$  ranging in a polytope of the parameter space  $R^n$ . This polytope is defined by a set of vertices  $V_1, \dots, V_n$  corresponding to "extremal" values of the vector  $p$ . Such parameter vectors are declared by the command

`pv = pvec('pol', [v1, v2, . . . , vn])`

where the second argument is the concatenation of the vectors  $v_1, \dots, v_n$ .

The output argument `pv` is a structured matrix storing the parameter vector description. Use `pvinfos` to read the contents of `pv`.

## Examples

Consider a problem with two time-invariant parameters

$$p_1 \in [-1, 2], p_2 \in [20, 50]$$

The corresponding parameter vector  $p = (p_1, p_2)$  is specified by


```
pv = pvec('box', [-1 2; 20 50])
```

Alternatively, this vector can be regarded as taking values in the rectangle drawn in the following figure. The four corners of this rectangle are the four vectors

$$v_1 = \begin{pmatrix} -1 \\ 20 \end{pmatrix}, v_2 = \begin{pmatrix} -1 \\ 50 \end{pmatrix}, v_3 = \begin{pmatrix} 2 \\ 20 \end{pmatrix}, v_4 = \begin{pmatrix} 2 \\ 50 \end{pmatrix}$$

Hence, you could also specify  $p$  by

```
pv = pvec('pol', [v1, v2, v3, v4])
```

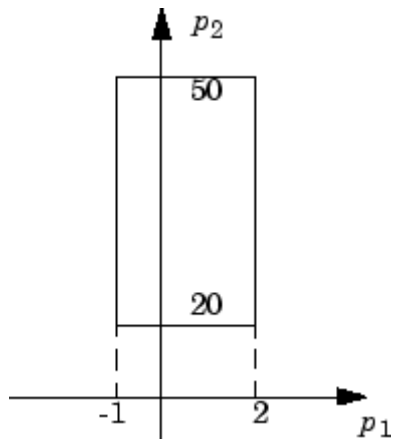

**Parameter box**

**See Also**

`pvinfos` | `psys`

**Purpose** Describe parameter vector specified with pvec

**Syntax**

```
[typ,k,nv] = pvinfos(pv)
[pmin,pmax,dpmin,dpmax] = pvinfos(pv,'par',j)
vj = pvinfos(pv,'par',j)
p = pvinfos(pv,'eval',c)
```

**Description** pvec retrieves information about a vector  $p = (p_1, \dots, p_n)$  of real parameters declared with pvec and stored in pv. The command pvinfos(pv) displays the type of parameter vector ('box' or 'pol'), the number  $n$  of scalar parameters, and for the type 'pol', the number of vertices used to specify the parameter range.

For the type 'box':

```
[pmin,pmax,dpmin,dpmax] = pvinfos(pv,'par',j)
```

returns the bounds on the value and rate of variations of the  $j$ -th real parameter  $p_j$ . Specifically,

$$p_{\min} \leq p_j(t) \leq p_{\max}, dp_{\min} \leq \frac{dp_j}{dt} \leq dp_{\max}$$

For the type 'pol':

```
pvinfos(pv,'par',j)
```

returns the  $j$ -th vertex of the polytope of  $R^n$  in which  $p$  ranges, while

```
pvinfos(pv,'eval',c)
```

returns the value of the parameter vector  $p$  given its barycentric coordinates  $c$  with respect to the polytope vertices  $(V_1, \dots, V_k)$ . The vector  $c$  must be of length  $k$  and have nonnegative entries. The corresponding value of  $p$  is then given by

$$p = \frac{\sum_{i=1}^k c_i V_i}{\sum_{i=1}^k c_i}$$

## See Also

pvec | psys

**Purpose** Compute quadratic  $H_\infty$  performance of polytopic or parameter-dependent system

**Syntax** [perf,P] = quadperf(ps,g,options)

**Description** The RMS gain of the time-varying system

$$E(t)\dot{x} = A(t)x + B(t)u, \quad y = C(t)x + D(t)u \quad (2-20)$$

is the smallest  $\gamma > 0$  such that

$$\|y\|_{L_2} \leq \gamma \|u\|_{L_2} \quad (2-21)$$

for all input  $u(t)$  with bounded energy. A sufficient condition for Equation 2-21 is the existence of a quadratic Lyapunov function

$$V(x) = x^T P x, \quad P > 0$$

such that

$$\forall u \in L_2, \quad \frac{dV}{dt} + y^T y - \gamma^2 u^T u < 0$$

Minimizing  $\gamma$  over such quadratic Lyapunov functions yields the quadratic  $H_\infty$  performance, an upper bound on the true RMS gain.

The command

[perf,P] = quadperf(ps)

computes the quadratic  $H_\infty$  performance perf when Equation 2-20 is a polytopic or affine parameter-dependent system ps (see psys). The Lyapunov matrix  $P$  yielding the performance perf is returned in P.

The optional input options gives access to the following task and control parameters:

# quadperf

---

- If `options(1)=1`, `perf` is the largest portion of the parameter box where the quadratic RMS gain remains smaller than the positive value `g` (for affine parameter-dependent systems only). The default value is 0.
- If `options(2)=1`, `quadperf` uses the least conservative quadratic performance test. The default is `options(2)=0` (fast mode)
- `options(3)` is a user-specified upper bound on the condition number of  $P$  (the default is 109).

## See Also

`quadstab` | `psys`



**Purpose** Quadratic stability of polytopic or affine parameter-dependent systems

**Syntax** `[tau,P] = quadstab(ps,options)`

**Description** For affine parameter-dependent systems

$$E(p)x' = A(p)x, p(t) = (p_1(t), \dots, p_n(t))$$

or polytopic systems

$$E(t)x' = A(t)x, (A, E) \in \text{Co}\{(A_1, E_1), \dots, (A_n, E_n)\},$$

quadstab seeks a fixed Lyapunov function  $V(x) = x^T P x$  with  $P > 0$  that establishes quadratic stability. The affine or polytopic model is described by ps (see psys).

The task performed by quadstab is selected by options(1):

- if options(1)=0 (default), quadstab assesses quadratic stability by solving the LMI problem

Minimize  $\tau$  over  $Q = Q^T$  such that

$$A^T Q E + E Q A^T < \tau I \text{ for all admissible values of } (A, E)$$

$$Q > I$$

The global minimum of this problem is returned in tau and the system is quadratically stable if tau < 0.

- if options(1)=1, quadstab computes the largest portion of the specified parameter range where quadratic stability holds (only available for affine models). Specifically, if each parameter  $p_i$  varies in the interval

$$p_i \in [p_{i0} - \delta_i, p_{i0} + \delta_i],$$

quadstab computes the largest  $\Theta > 0$  such that quadratic stability holds over the parameter box

# quadstab

---

$$p_i \in [p_{i0} - \Theta\delta_i, p_{i0} + \Theta\delta_i]$$

This “quadratic stability margin” is returned in `tau` and `ps` is quadratically stable if `tau`  $\geq$  1.

Given the solution  $Q_{\text{opt}}$  of the LMI optimization, the Lyapunov matrix  $P$  is given by  $P = Q_{\text{opt}}^{-1}$ . This matrix is returned in `P`.

Other control parameters can be accessed through `options(2)` and `options(3)`:

- if `options(2)=0` (default), `quadstab` runs in fast mode, using the least expensive sufficient conditions. Set `options(2)=1` to use the least conservative conditions
- `options(3)` is a bound on the condition number of the Lyapunov matrix  $P$ . The default is  $10^9$ .

## See Also

`pdlstab` | `decay` | `quadperf` | `psys`

**Purpose** Generate random uncertain atom objects

**Syntax**

```
A = randatom(Type)
A = randatom(Type,sz)
A = randatom
```

**Description**

`A = randatom(Type)` generates a 1-by-1 type uncertain object. Valid values for `Type` include 'ureal', 'ultidyn', 'ucomplex', and 'ucomplexm'.

`A = randatom(Type,sz)` generates an `sz(1)`-by-`sz(2)` uncertain object. Valid values for `Type` include 'ultidyn' or 'ucomplexm'. If `Type` is set to 'ureal' or 'ucomplex', the size variable is ignored and `A` is a 1-by-1 uncertain object.

`A = randatom`, where `randatom` has no input arguments, results in a 1-by-1 uncertain object. The class of this object is randomly selected between 'ureal', 'ultidyn' and 'ucomplex'.

In general, both `rand` and `randn` are used internally. You can control the result of `randatom` by setting seeds for both random number generators before calling the function.

**Examples**

The following statement creates the `ureal` uncertain object `xr`. Note that your display can differ because a random seed is used.

```
xr = randatom('ureal')
```

```
xr =
```

```
Uncertain real parameter "MMGXC" with nominal value 5.34 and variability [-2.99,1.92].
```

The following statement creates the variable `ultidyn` uncertain object `xlti` with three inputs and four outputs. You will get the results shown below if you set the random variable seed to 29.

```
rng(29,'twister');
xlti = randatom('ultidyn',[4 3])
```

# randatom

---

xlti =

Uncertain LTI dynamics "LOSWT" with 4 outputs, 3 inputs, and gain less than 0.293.

## See Also

rand | randn | randumat | randuss | ucomplex | ucomplexm | ultidyn

**Purpose** Generate random uncertain umat objects

**Syntax** `um = randumat(ny,nu)`  
`um = randumat`

**Description** `um = randumat(ny,nu)` generates an uncertain matrix of size `ny-by-nu`. `randumat` randomly selects from uncertain atoms of type `'ureal'`, `'ultidyn'`, and `'ucomplex'`.

`um = randumat` results in a 1-by-1 `umat` uncertain object, including up to four uncertain objects.

**Examples** The following statement creates the `umat` uncertain object `x1` of size 2-by-3. Note that your result can differ because a random seed is used.

```
x1 = randumat(2,3)
```

```
x1 =
```

```
Uncertain matrix with 2 rows and 3 columns.
```

```
The uncertainty consists of the following blocks:
```

```
AWYRT: Uncertain real, nominal = 7.09, variability = [-7.84,16.4]%, 2 occurrences
```

```
HRRED: Uncertain complex, nominal = 3.14+5.47i, radius = 1.92, 1 occurrences
```

```
VSIYA: Uncertain real, nominal = -4.05, variability = [-1.53,3.83], 3 occurrences
```

```
YZEZY: Uncertain complex, nominal = -6.54-2.17i, variability = 24%, 1 occurrences
```

Type `"x1.NominalValue"` to see the nominal value, `"get(x1)"` to see all properties, and `"x1.Uncertainty"` to interact with the uncertain elements.

The following statement creates the `umat` uncertain object `x2` of size 4-by-2 with the seed 91.

```
rng(91,'twister');
x2 = randumat(4,2)
```

```
x2 =
```

# randumat

---

Uncertain matrix with 4 rows and 2 columns.

The uncertainty consists of the following blocks:

YQZBI: Uncertain complex, nominal = 3.61+1.88i, radius = 1.42, 1 occurrences

Type "x2.NominalValue" to see the nominal value, "get(x2)" to see all properties, and "x2.Uncertainty" to interact with the uncertain elements.

## See Also

rand | randn | randatom | randuss | ucomplex | ultidyn

**Purpose**

Generate stable, random uss objects

**Syntax**

```
usys = randuss(n)
usys = randuss(n,p)
usys = randuss(n,p,m)
usys = randuss(n,p,m,Ts)
usys = randuss
```

**Description**

`usys = randuss(n)` generates an *n*th order single-input/single-output uncertain continuous-time system. `randuss` randomly selects from uncertain atoms of type 'ureal', 'ultidyn', and 'ucomplex'.

`usys = randuss(n,p)` generates an *n*th order single-input uncertain continuous-time system with *p* outputs.

`usys = randuss(n,p,m)` generates an *n*th order uncertain continuous-time system with *p* outputs and *m* inputs.

`usys = randuss(n,p,m,Ts)` generates an *n*th order uncertain discrete-time system with *p* outputs and *m* inputs. The sample time is *Ts*.

`usys = randuss` (without arguments) results in a 1-by-1 uncertain continuous-time uss object with up to four uncertain objects.

In general, both `rand` and `randn` are used internally. You can control the result of `randuss` by setting seeds for both random number generators before calling the function.

**Examples**

The statement creates a fifth order, continuous-time uncertain system `s1` of size 2-by-3. Note your display can differ because a random seed is used.

```
s1 = randuss(5,2,3)
USS: 5 States, 2 Outputs, 3 Inputs, Continuous System
  CTPQV: 1x1 LTI, max. gain = 2.2, 1 occurrence
  IGDHN: real, nominal = -4.03, variability =
[-3.74667 22.7816]%, 1 occurrence
  MLGCD: complex, nominal = 8.36+3.09i, +/- 7.07%, 1 occurrence
```

# randuss

---

OEDJK: complex, nominal =  $-0.346-0.296i$ , radius = 0.895,  
1 occurrence

## See Also

rand | randn | randatom | randumat | ucomplex | ultidyn



**Purpose** Simplified access to Hankel singular value based model reduction functions

**Syntax**

```
GRED = reduce(G)
GRED = reduce(G,order)
[GRED,redinfo] = reduce(G,'key1','value1',...)
[GRED,redinfo] = reduce(G,order,'key1','value1',...)
```

**Description** reduce returns a reduced order model GRED of G and a struct array redinfo containing the error bound of the reduced model, Hankel singular values of the original system and some other relevant model reduction information.

An error bound is a measure of how close GRED is to G and is computed based on either *additive error*,  $\|G - GRED\|_{\infty}$ , *multiplicative error*,  $\|G^{-1}(G - GRED)\|_{\infty}$ , or *nugap error* (ref.: ncfmr) [1],[4],[5].

Hankel singular values of a stable system indicate the respective state energy of the system. Hence, reduced order can be directly determined by examining the system Hankel SV's. Model reduction routines, which based on Hankel singular values are grouped by their error bound types. In many cases, the additive error method `GRED=reduce(G,ORDER)` is adequate to provide a good reduced order model. But for systems with lightly damped poles and/or zeros, a multiplicative error method (namely, `GRED=reduce(G,ORDER,'ErrorType','mult')`) that minimizes the relative error between G and GRED tends to produce a better fit.

This table describes input arguments for reduce.

Argument	Description
G	LTI model to be reduced (without any other inputs will plot its Hankel singular values and prompt for reduced order).
ORDER	(Optional) Integer for the desired order of the reduced model, or optionally a vector packed with desired orders for batch runs.

# reduce

A batch run of a serial of different reduced order models can be generated by specifying `order = x:y`, or a vector of integers. By default, all the anti-stable part of a physical system is kept, because from control stability point of view, getting rid of unstable state(s) is dangerous to model a system.

'*MaxError*' can be specified in the same fashion as an alternative for 'ORDER' after an '*ErrorType*' is selected. In this case, reduced order will be determined when the sum of the tails of the Hankel SV's reaches the '*MaxError*'.

Argument	Value	Description
'Algorithm'	'balance'	Default for 'add' (balancmr)
	'schur'	Option for 'add' (schurmr)
	'hankel'	Option for 'add' (hankelmr)
	'bst'	Default for 'mult' (bstmr)
	'ncf'	Default for 'ncf' (ncfmr)
'ErrorType'	'add'	Additive error (default)
	'mult'	Multiplicative error at model output
	'ncf'	NCF nugap error
'MaxError'	A real number or a vector of different errors	Reduce to achieve $H_{\infty}$ error. When present, ' <i>MaxError</i> ' overrides ORDER input.
'Weights'	{Wout,Win} cell array	Optimal 1x2 cell array of LTI weights Wout (output) and Win (input); default is both identity; used only with ' <i>ErrorType</i> ', 'add'. Weights must be invertible.

Argument	Value	Description
'Display'	'on' or 'off'	Display Hankel singular plots (default 'off').
'Order'	Integer, vector or cell array	Order of reduced model. Use only if not specified as 2nd argument.

Weights on the original model input and/or output can make the model reduction algorithm focus on some frequency range of interests. But weights have to be stable, minimum phase and invertible.

This table describes output arguments.

Argument	Description
GRED	LTI reduced order model. Becomes multi-dimensional array when input is a serial of different model order array.
REDINFO	<p>A STRUCT array with 3 fields:</p> <ul style="list-style-type: none"> <li>• REDINFO.ErrorBound</li> <li>• REDINFO.StabSV</li> <li>• REDINFO.UnstabSV</li> </ul> <p>For 'hanke1' algorithm, STRUCT array becomes:</p> <ul style="list-style-type: none"> <li>• REDINFO.ErrorBound</li> <li>• REDINFO.StabSV</li> <li>• REDINFO.UnstabSV</li> <li>• REDINFO.Ganticausal</li> </ul> <p>For 'ncf' option, STRUCT array becomes:</p> <ul style="list-style-type: none"> <li>• REDINFO.GL</li> <li>• REDINFO.GR</li> </ul>

# reduce

Argument	Description
	<ul style="list-style-type: none"><li>• REDINFO.hsv</li></ul>

G can be stable or unstable. G and GRED can be either continuous or discrete.

A successful model reduction with a well-conditioned original model G will ensure that the reduced model GRED satisfies the infinity norm error bound.

## Examples

Given a continuous or discrete, stable or unstable system, G, the following commands can get a set of reduced order models based on your selections:

```
rng(1234,'twister');
G = rss(30,5,4);
[g1, redinfo1] = reduce(G); % display Hankel SV plot
                        % and prompt for order
[g2, redinfo2] = reduce(G,20); % default to balancmr
[g3, redinfo3] = reduce(G,[10:2:18],'algorithm','schur'); % select schurm
[g4, redinfo] = reduce(G,'ErrorType','mult','MaxError',[0.01, 0.05]);

[g5, redinfo5] = reduce(G,'ErrorType','add','algorithm','hankel', ...
                        'maxerror',[0.01]);
for i = 1:5
    figure(i); eval(['sigma(G,g' num2str(i) ');']);
end
```

## References

- [1] K. Glover, "All Optimal Hankel Norm Approximation of Linear Multivariable Systems, and Their  $L_\infty$ - error Bounds," *Int. J. Control*, vol. 39, no. 6, pp. 1145-1193, 1984.
- [2] M. G. Safonov and R. Y. Chiang, "A Schur Method for Balanced Model Reduction," *IEEE Trans. on Automat. Contr.*, vol. AC-2, no. 7, July 1989, pp. 729-733.

- [3] M. G. Safonov, R. Y. Chiang and D. J. N. Limebeer, "Optimal Hankel Model Reduction for Nonminimal Systems," *IEEE Trans. on Automat. Contr.*, vol. 35, No. 4, April, 1990, pp. 496-502.
- [4] M. G. Safonov and R. Y. Chiang, "Model Reduction for Robust Control: A Schur Relative-Error Method," *International Journal of Adaptive Control and Signal Processing*, vol. 2, pp. 259-272, 1988.
- [5] K. Zhou, "Frequency weighted L $_{\infty}$  error bounds," *Syst. Contr. Lett.*, Vol. 21, 115-125, 1993.

**See Also**

balancmr | schurmr | bstmr | ncfmr | hankelmr | hankelsv

# repmat

---

**Purpose** Replicate and tile array

**Syntax** `B = repmat(A,M,N)`

**Description** `B = repmat(A,M,N)` creates a large matrix `B` consisting of an `M`-by-`N` tiling of copies of `A`.

`B = repmat(A,[M N])` accomplishes the same result as `repmat(A,M,N)`.

`B = repmat(A,[M N P ...])` tiles the array `A` to produce an `M`-by-`N`-by-`P`-by-... block array. `A` can be `N`-D.

`repmat(A,M,N)` for scalar `A` is commonly used to produce an `M`-by-`N` matrix filled with values of `A`.

**Examples** Simple examples of using `repmat` are

```
repmat(randumat(2,2),2,3)
repmat(ureal('A',6),[4 2])
```

**Purpose**

Options object for use with `robuststab` and `robustperf`

---

**Note** `robopt` will be removed in a future version. Use `robuststabOptions` or `robustperfOptions` instead.

---

# robustperf

---

**Purpose** Robust performance margin of uncertain multivariable system

**Syntax**  
`perfmarg = robustperf(usys)`  
`[perfmarg,wcu,report,info] = robustperf(usys)`  
`[perfmarg,wcu,report,info] = robustperf(usys,opt)`

**Description** The performance of a nominally stable uncertain system model will generally degrade for specific values of its uncertain elements. `robustperf`, largely included for historical purposes, computes the robust performance margin, which is one measure of the level of degradation brought on by the modeled uncertainty.

As with other *uncertain-system* analysis tools, only bounds on the performance margin are computed. The exact robust performance margin is guaranteed to lie between these upper and lower bounds.

The computation used in `robustperf` is a frequency-domain calculation. Coupled with stability of the nominal system, this frequency domain calculation determines robust performance of `usys`. If the input system `usys` is a `ufrd`, then the analysis is performed on the frequency grid within the `ufrd`. Note that the stability of the nominal system is not verified by the computation. If the input system `sys` is a `uss`, then the stability of the nominal system is first checked, an appropriate frequency grid is generated (automatically), and the analysis performed on that frequency grid. In all discussion that follows,  $N$  denotes the number of points in the frequency grid.

## Basic Syntax

Suppose `usys` is a `ufrd` or `uss` with  $M$  uncertain elements. The results of

```
[perfmarg,perfmargunc,Report] = robustperf(usys)
```

are such that `perfmarg` is a structure with the following fields:



Field	Description
LowerBound	Lower bound on robust performance margin, positive scalar.
UpperBound	Upper bound on robust performance margin, positive scalar.
CriticalFrequency	The value of frequency at which the performance degradation curve crosses the $y = 1/x$ curve. See “Generalized Robustness Analysis”.

`perfmargin` is a struct of values of uncertain elements associated with the intersection of the performance degradation curve and the  $y = 1/x$  curve. See “Generalized Robustness Analysis”. There are  $M$  field names, which are the names of uncertain elements of `usys`.

`Report` is a text description of the robust performance analysis results.

If `usys` is an array of uncertain models, the outputs are struct arrays whose entries correspond to each model in the array.

## Examples

Create a plant with a nominal model of an integrator, and include additive unmodeled dynamics uncertainty of a level of 0.4 (this corresponds to 100% model uncertainty at 2.5 rad/s).

```
P = tf(1,[1 0]) + ultidyn('delta',[1 1],'bound',0.4);
```

Design a “proportional” controller  $K$  that puts the nominal closed-loop bandwidth at 0.8 rad/s. Roll off  $K$  at a frequency 25 times the nominal closed-loop bandwidth. Form the closed-loop sensitivity function.

```
BW = 0.8;
K = tf(BW,[1/(25*BW) 1]);
S = feedback(1,P*K);
```

Assess the performance margin of the closed-loop sensitivity function. Because the nominal gain of the sensitivity function is 1, and the performance degradation curve is monotonically increasing (see

“Generalized Robustness Analysis”), the performance margin should be less than 1.

```
[perfmargin,punc] = robustperf(S);
perfmargin
perfmargin =
    UpperBound: 7.4305e-001
    LowerBound: 7.4305e-001
    CriticalFrequency: 5.3096e+000
```

You can verify that the upper bound of the performance margin corresponds to a point on or above the  $y=1/x$  curve. First, compute the normalized size of the value of the uncertain element, and check that this agrees with the upper bound.

```
nsize = actual2normalized(S.Uncertainty.delta, punc.delta)
nsize =
perfmargin.UpperBound
ans =
    7.4305e-001
```

Compute the system gain with that value substituted, and verify that the product of the normalized size and the system gain is greater than or equal to 1.

```
gain = norm(usubs(S,punc),inf,.00001);
nsize*gain
ans =
    1.0000e+000
```

Finally, as a sanity check, verify that the robust performance margin is less than the robust stability margin.

```
[stabmargin] = robuststab(S);
stabmargin
stabmargin =
    UpperBound: 3.1251e+000
    LowerBound: 3.1251e+000
```

DestabilizingFrequency: 4.0862e+000

While the robust stability margin is easy to describe (poles migrating from stable region into unstable region), describing the robust performance margin is less elementary. See the diagrams and figures in “Generalized Robustness Analysis”. Rather than finding values for uncertain elements that lead to instability, the analysis finds values of uncertain elements “corresponding to the intersection point of the performance degradation curve with a  $y=1/x$  hyperbola.” This characterization, mentioned above in the description of `perfmarg.CriticalFrequency` and `perfmargunc`, is used often in the descriptions below.

### Basic Syntax with Fourth Output Argument

A fourth output argument yields more specialized information, including sensitivities and frequency-by-frequency information.

```
[perfmarg,perfmargunc,Report,Info] = robustperf(usys)
```

In addition to the first 3 output arguments, described previously, `Info` is a structure with the following fields:

Field	Description
Sensitivity	A struct with $M$ fields, field names are names of uncertain elements of <code>usys</code> . Values of fields are positive and contain the local sensitivity of the overall Stability Margin to that element’s uncertainty range. For instance, a value of 25 indicates that if the uncertainty range is enlarged by 8%, then the stability margin should drop by about 2% (25% of 8). If the <code>Sensitivity</code> property of the <code>robustperfOptions</code> object is 'off', the values are set to NaN.
Frequency	$N$ -by-1 frequency vector associated with analysis.
BadUncertainValues	$N$ -by-1 struct array containing the worst uncertain element values at each frequency.

Field	Description
MussvBnds	A 1-by-2 frd, with upper and lower bounds from mussv. The (1,1) entry is the $\mu$ -upper bound (corresponds to perfmarg.LowerBound) and the (1,2) entry is the $\mu$ -lower bound (for perfmarg.UpperBound).
MussvInfo	Structure of compressed data from mussv.

## Specifying Additional Options

Use `robustperfOptions` to specify additional options for the `robustperf` computation. For example, you can control what is displayed during the computation, turn the sensitivity computation on or off, set the step size in the sensitivity computation, or control the option argument used in the underlying call to `mussv`. For example, you can turn the display on and turn off the sensitivity by executing

```
opt = robustperfOptions('Sensitivity','off','Display','on');  
[PerfMarg, Destabunc, Report, Info] = robustperf(usys, opt)
```

See the `robustperfOptions` reference page for more information about available options.

## Algorithms

A rigorous robust performance analysis consists of two steps:

- 1 Verify that the nominal system is stable.
- 2 Robust performance analysis on an augmented system.

The algorithm in `robustperf` follows this in spirit, with the following limitations:

- If `usys` is a `uss` object, then `robustperf` explicitly checks the stability of the nominal value. However, if `usys` is a `ufrd` model, `robustperf` instead assumes that the nominal value is stable, and does not perform this check.

- The exact performance margin is guaranteed to be no larger than `UpperBound` (some uncertain elements associated with this magnitude cause instability – one instance is returned in the structure `perfmargunc`). The instability created by `perfmargunc` occurs at the frequency value in `CriticalFrequency`.
- Similarly, the exact performance margin is guaranteed to be no smaller than `LowerBound`.

## Limitations

Because the calculation is carried out with a frequency gridding, it is possible (likely) that the true critical frequency is missing from the frequency vector used in the analysis. This is similar to the problem in `robuststab`. However, in comparing to `robuststab`, the problem in `robustperf` is less acute. The robust performance margin, considered a function of problem data and frequency, is typically a continuous function (unlike the robust stability margin, described in *Getting Reliable Estimates of Robustness Margins*). Hence, in robust performance margin calculations, increasing the density of the frequency grid will always increase the accuracy of the answers, and in the limit, answers arbitrarily close to the actual answers are obtainable with finite frequency grids.

## See Also

`mussv` | `norm` | `robustperfOptions` | `robuststab` |  
`actual2normalized` | `wcgain` | `wcsens` | `wcmargin`

# robustperfOptions

---

## Purpose

Option set for robustperf

## Syntax

```
options = robustperfOptions  
options = robustperfOptions(Name,Value,...)
```

## Description

`options = robustperfOptions` returns the default option set for the `robustperf` command.

`options = robustperfOptions(Name,Value,...)` creates an option set with the options specified by one or more `Name,Value` pair arguments.

## Input Arguments

### Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name,Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes ( ' ' ). You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

`robustperfOptions` takes the following `Name` arguments:

### 'Display'

String specifying whether `robustperf` displays progress of `mussv` computations.

- 'off' — Do not display progress.
- 'on' — Display progress. This setting overrides the silent ( 's' ) option in the `Mussv` string.

**Default:** 'off'

### 'Sensitivity'

String specifying whether `robustperf` computes the sensitivity of the performance margin with respect to each individual uncertain element. This element-by-element sensitivity provides an indication of which

elements the performance margin is most sensitive to. Turning off the element-by-element sensitivity calculation speeds up `robustperf`.

- 'on' — Compute the sensitivity for each uncertain element.
- 'off' — Do not compute the sensitivity for each uncertain element.

**Default:** 'on'

## 'VaryUncertainty'

Percentage variation of uncertainty for computing sensitivity. The sensitivity estimate uses a finite difference calculation.

**Default:** 25

## 'Mussv'

Option string for the `mussv` calculation that `robustperf` performs. See `mussv` for the available options.

**Default:** '' (default behavior of `mussv`)

## Output Arguments

### **options**

Option set containing the specified options for the `robustperf` command.

## Examples

Create an options set for a `robustperf` calculation that displays the progress of the `mussv` calculation. Also, turn off the element-by-element sensitivity calculation.

```
options = robustperfOptions('Display','on','Sensitivity','off');
```

Alternatively, use dot notation to set the values of options.

```
options = robustperfOptions;  
options.Display = 'on';  
options.Sensitivity = 'off';
```

# robustperfOptions

---

## See Also

`robustperf`



---

<b>Purpose</b>	Calculate robust stability margins of uncertain multivariable system
<b>Syntax</b>	<pre>[stabmarg,destabunc,report,info] = robuststab(sys) [stabmarg,destabunc,report,info] = robuststab(sys,opt)</pre>
<b>Description</b>	<p>A nominally stable uncertain system is generally unstable for specific values of its uncertain elements. Determining the values of the uncertain elements closest to their nominal values for which instability occurs is a <i>robust stability</i> calculation.</p> <p>If the uncertain system is stable for all values of uncertain elements within their allowable ranges (ranges for <code>ureal</code>, norm bound or positive-real constraint for <code>ultidyn</code>, radius for <code>ucomplex</code>, weighted ball for <code>ucomplexm</code>), the uncertain system is <i>robustly stable</i>. Conversely, if there is a combination of element values that cause instability, and all lie within their allowable ranges, then the uncertain system is not robustly stable.</p> <p><code>robuststab</code> computes the margin of stability robustness for an uncertain system. A stability robustness margin greater than 1 means that the uncertain system is stable for all values of its modeled uncertainty. A stability robustness margin less than 1 implies that certain allowable values of the uncertain elements, within their specified ranges, lead to instability.</p> <p>Numerically, a margin of 0.5 (for example) implies two things: the uncertain system remains stable for all values of uncertain elements that are less than 0.5 normalized units away from their nominal values and, there is a collection of uncertain elements that are less than or equal to 0.5 normalized units away from their nominal values that results in instability. Similarly, a margin of 1.3 implies that the uncertain system remains stable for all values of uncertain elements up to 30% outside their modeled uncertain ranges. See <code>actual2normalized</code> for converting between actual and normalized deviations from the nominal value of an uncertain element.</p> <p>As with other <i>uncertain-system</i> analysis tools, only bounds on the exact stability margin are computed. The exact robust stability margin is guaranteed to lie in between these upper and lower bounds.</p>

The computation used in `robuststab` is a frequency-domain calculation, which determines whether poles can migrate (due to variability of the uncertain atoms) across the stability boundary (imaginary axis for continuous-time, unit circle for discrete-time). Coupled with stability of the nominal system, determining that no migration occurs constitutes robust stability. If the input system `sys` is a `ufrd`, then the analysis is performed on the frequency grid within the `ufrd`. Note that the stability of the nominal system is not verified by the computation. If the input system `sys` is a `uss`, then the stability of the nominal system is first checked, an appropriate frequency grid is generated (automatically), and the analysis performed on that frequency grid. In all discussion that follows,  $N$  denotes the number of points in the frequency grid.

## Basic Syntax

Suppose `sys` is a `ufrd` or `uss` with  $M$  uncertain elements. The results of

```
[stabmarg,destabunc,Report] = robuststab(sys)
```

are that `stabmarg` is a structure with the following fields

Field	Description
LowerBound	Lower bound on stability margin, positive scalar. If greater than 1, then the uncertain system is guaranteed stable for all values of the modeled uncertainty. If the nominal value of the uncertain system is unstable, then <code>stabmarg.UpperBound</code> and <code>stabmarg.LowerBound</code> both equal 0.
UpperBound	Upper bound on stability margin, positive scalar. If less than 1, the uncertain system is not stable for all values of the modeled uncertainty.
DestabilizingFrequency	The critical value of frequency at which instability occurs, with uncertain elements closest to their nominal values. At a particular value of uncertain elements (see <code>destabunc</code> below), the poles migrate across the stability boundary (imaginary-axis in continuous-time systems, unit-disk in discrete-time systems) at the frequency given by <code>DestabilizingFrequency</code> .

`destabunc` is a structure of values of uncertain elements, closest to nominal, that cause instability. There are  $M$  field names, which are the names of uncertain elements of `sys`. The value of each field is the corresponding value of the uncertain element, such that when jointly combined, lead to instability. The command `pole(usubs(sys,destabunc))` shows the instability. If  $A$  is an uncertain element of `sys`, then

```
actual2normalized(destabunc.A,sys.Uncertainty.A)
```

will be less than or equal to `UpperBound`, and for at least one uncertain element of `sys`, this normalized distance will be equal to `UpperBound`, proving that `UpperBound` is indeed an upper bound on the robust stability margin.

`Report` is a text description of the arguments returned by `robuststab`.

If `sys` is an array of uncertain models, the outputs are struct arrays whose entries correspond to each model in the array.

## Examples

Construct a feedback loop with a second-order plant and a PID controller with approximate differentiation. The second-order plant has frequency-dependent uncertainty, in the form of additive unmodeled dynamics, introduced with an `ultidyn` object and a shaping filter.

`robuststab` is used to compute the stability margins of the closed-loop system with respect to the plant model uncertainty.

```
P = tf(4,[1 .8 4]);
delta = ultidyn('delta',[1 1],'SampleStateDim',5);
Pu = P + 0.25*tf([1],[.15 1])*delta;
C = tf([1 1],[.1 1]) + tf(2,[1 0]);
S = feedback(1,Pu*C);
[stabmarg,destabunc,report,info] = robuststab(S);
```

You can view the `stabmarg` variable.

```
stabmarg
stabmarg =
```

```
UpperBound: 0.8181
LowerBound: 0.8181
DestabilizingFrequency: 9.1321
```

As the margin is less than 1, the closed-loop system is not stable for plant models covered by the uncertain model `Pu`. There is a specific plant within the uncertain behavior modeled by `Pu` (actually about 82% of the modeled uncertainty) that leads to closed-loop instability, with the poles migrating across the stability boundary at 9.1 rads/s.

The report variable is specific, giving a plain-language version of the conclusion.

```
report
report =
Uncertain System is NOT robustly stable to modeled uncertainty.
-- It can tolerate up to 81.8% of modeled uncertainty.
-- A destabilizing combination of 81.8% the modeled uncertainty
exists, causing an instability at 9.13 rad/s.
-- Sensitivity with respect to uncertain element ...
'delta' is 100%. Increasing 'delta' by 25% leads to a
25% decrease in the margin.
```

Because the problem has only one uncertain element, the stability margin is completely determined by this element, and hence the margin exhibits 100% sensitivity to this uncertain element.

You can verify that the destabilizing value of `delta` is indeed about 0.82 normalized units from its nominal value.

```
actual2normalized(S.Uncertainty.delta,destabunc.delta)
ans =
    0.8181
```

Use `usubs` to substitute the specific value into the closed-loop system. Verify that there is a closed-loop pole near `j9.1`, and plot the unit-step response of the nominal closed-loop system, as well as the unstable closed-loop system.

```

Sbad = usubs(S,destabunc);
pole(Sbad)
ans =
    1.0e+002 *
    -3.2318
    -0.2539
    -0.0000 + 0.0913i
    -0.0000 - 0.0913i
    -0.0203 + 0.0211i
    -0.0203 - 0.0211i
    -0.0106 + 0.0116i
    -0.0106 - 0.0116i
step(S.NominalValue,'r--',Sbad,'g',4);

```

Finally, as an ad-hoc test, set the gain bound on the uncertain `delta` to 0.81 (slightly less than the stability margin). Sample the closed-loop system at 100 values, and compute the poles of all these systems.

```

S.Uncertainty.delta.Bound = 0.81;
S100 = usample(S,100);
p100 = pole(S100);
max(real(p100(:)))
ans =
    -6.4647e-007

```

As expected, all poles have negative real parts.

### Basic Syntax with Fourth Output Argument

A fourth output argument yields more specialized information, including sensitivities and frequency-by-frequency information.

```
[StabMarg, Destabunc, Report, Info] = robuststab(sys)
```

In addition to the first 3 output arguments, described previously, `Info` is a structure with the following fields

Field	Description
Sensitivity	A struct with $M$ fields, Field names are names of uncertain elements of <code>sys</code> . Values of fields are positive, each the local sensitivity of the overall stability margin to that element's uncertainty range. For instance, a value of 25 indicates that if the uncertainty range is enlarged by 8%, then the stability margin should drop by about 2% (25% of 8). If the <code>Sensitivity</code> property of the <code>robuststabOptions</code> object is 'off', the values are set to NaN.
Frequency	$N$ -by-1 frequency vector associated with analysis.
BadUncertainValues	$N$ -by-1 struct array containing the destabilizing uncertain element values at each frequency.
MussvBnds	A 1-by-2 frd, with upper and lower bounds from <code>mussv</code> . The (1,1) entry is the $\mu$ -upper bound (corresponds to <code>stabmarg.LowerBound</code> ) and the (1,2) entry is the $\mu$ -lower bound (for <code>stabmarg.UpperBound</code> ).
MussvInfo	Structure of compressed data from <code>mussv</code> .

## Specifying Additional Options

Use `robuststabOptions` to specify additional options for the `robuststab` computation. For example, you can control what is displayed during the computation, turning the sensitivity computation on or off, set the step-size in the sensitivity computation, or control the option argument used in the underlying call to `mussv`. For instance, you can turn the display on, and the sensitivity calculation off by executing

```
opt = robuststabOptions('Sensitivity','off','Display','on');  
[StabMarg, Destabunc, Report, Info] = robuststab(sys, opt)
```

See the `robuststabOptions` reference page for more information about available options.

## Algorithms

A rigorous robust stability analysis consists of two steps:

- 1 Verify that the nominal system is stable;
- 2 Verify that no poles cross the stability boundary as the uncertain elements vary within their ranges.

Because the stability boundary is also associated with the frequency response, the second step can be interpreted (and carried out) as a frequency domain calculation. This amounts to a classical  $\mu$ -analysis problem.

The algorithm in `robuststab` follows this in spirit, with the following limitations.

- If `sys` is a `uss` object, then the first requirement of stability of nominal value is explicitly checked within `robuststab`. However, if `sys` is an `ufrd`, then the verification of nominal stability from the nominal frequency response data is not performed, and is instead assumed.
- In the second step (monitoring the stability boundary for the migration of poles), rather than check all points on stability boundary, the algorithm only detects migration of poles across the stability boundary at the frequencies in `info.Frequency`.

See “Limitations” on page 2-366 for information about issues related to migration detection.

The exact stability margin is guaranteed to be no larger than `UpperBound` (some uncertain elements associated with this magnitude cause instability – one instance is returned in the structure `destabunc`). The instability created by `destabunc` occurs at the frequency value in `DestabilizingFrequency`.

Similarly, the exact stability margin is guaranteed to be no smaller than `LowerBound`. In other words, for all modeled uncertainty with magnitude up to `LowerBound`, the system is guaranteed stable. These bounds are derived using the upper bound for the structured singular value, which is essentially optimally-scaled, small-gain theorem analysis.

## Limitations

Under most conditions, the robust stability margin at each frequency is a continuous function of the problem data at that frequency. Because the problem data, in turn, is a continuous function of frequency, it follows that finite frequency grids are usually adequate in correctly assessing robust stability bounds, assuming the frequency grid is dense enough.

Nevertheless, there are simple examples that violate this. In some problems, the migration of poles from stable to unstable *only* occurs at a finite collection of specific frequencies (generally unknown to you). Any frequency grid that excludes these critical frequencies (and almost every grid will exclude them) will result in undetected migration and misleading results, namely stability margins of  $\infty$ .

See Getting Reliable Estimates of Robustness Margins for more information about circumventing the problem in an engineering-relevant fashion.

## See Also

`loopmargin` | `mussv` | `robuststabOptions` | `robustperf` | `wcgain` | `wcsens` | `wcmargin`



<b>Purpose</b>	Option set for robuststab
<b>Syntax</b>	<code>options = robuststabOptions</code> <code>options = robuststabOptions(Name,Value,...)</code>
<b>Description</b>	<code>options = robuststabOptions</code> returns the default option set for the <code>robuststab</code> command. <code>options = robuststabOptions(Name,Value,...)</code> creates an option set with the options specified by one or more <code>Name,Value</code> pair arguments.
<b>Input Arguments</b>	<b>Name-Value Pair Arguments</b> Specify optional comma-separated pairs of <code>Name,Value</code> arguments. <code>Name</code> is the argument name and <code>Value</code> is the corresponding value. <code>Name</code> must appear inside single quotes ( ' ' ). You can specify several name and value pair arguments in any order as <code>Name1,Value1,...,NameN,ValueN</code> . <code>robuststabOptions</code> takes the following <code>Name</code> arguments: <b>'Display'</b> String specifying whether <code>robuststab</code> displays progress of <code>mussv</code> computations. <ul style="list-style-type: none"><li>• 'off' — Do not display progress.</li><li>• 'on' — Display progress. This setting overrides the silent ('s') option in the <code>Mussv</code> string.</li></ul> <p style="text-align: center;"><b>Default:</b> 'off'</p> <b>'Sensitivity'</b> String specifying whether <code>robuststab</code> computes the sensitivity of the stability margin with respect to each individual uncertain element. This element-by-element sensitivity provides an indication of which

# robuststabOptions

---

elements the stability margin is most sensitive to. Turning off the element-by-element sensitivity calculation speeds up `robuststab`.

- 'on' — Compute the sensitivity for each uncertain element.
- 'off' — Do not compute the sensitivity for each uncertain element.

**Default:** 'on'

## 'VaryUncertainty'

Percentage variation of uncertainty for computing sensitivity. The sensitivity estimate uses a finite difference calculation.

**Default:** 25

## 'Mussv'

Option string for the `mussv` calculation that `robustperf` performs. See `mussv` for the available options.

**Default:** '' (default behavior of `mussv`)

## Output Arguments

### **options**

Option set containing the specified options for the `robuststab` command.

## Examples

Create an options set for a `robuststab` calculation that displays the progress of the `mussv` calculation. Also, turn off the element-by-element sensitivity calculation.

```
options = robuststabOptions('Display','on','Sensitivity','off');
```

Alternatively, use dot notation to set the values of `options`.

```
options = robuststabOptions;  
options.Display = 'on';  
options.Sensitivity = 'off';
```

**See Also**     `robuststab`

# schurmr

**Purpose** Balanced model truncation via Schur method

**Syntax**  
GRED = schurmr(G)  
GRED = schurmr(G,order)  
[GRED,redinfo] = schurmr(G,key1,value1,...)  
[GRED,redinfo] = schurmr(G,order,key1,value1,...)

**Description** schurmr returns a reduced order model GRED of G and a struct array redinfo containing the error bound of the reduced model and Hankel singular values of the original system.

The error bound is computed based on Hankel singular values of G. For a stable system Hankel singular values indicate the respective state energy of the system. Hence, reduced order can be directly determined by examining the system Hankel SV's,  $\sigma_i$ .

With only one input argument G, the function will show a Hankel singular value plot of the original model and prompt for model order number to reduce.

This method guarantees an error bound on the infinity norm of the *additive error*  $\|G - GRED\|_\infty$  for well-conditioned model reduced problems [1]:

$$\|G - Gred\|_\infty \leq 2 \sum_{k=1}^n \sigma_k$$

This table describes input arguments for schurmr.

Argument	Description
G	LTI model to be reduced (without any other inputs will plot its Hankel singular values and prompt for reduced order).
ORDER	(Optional) an integer for the desired order of the reduced model, or optionally a vector packed with desired orders for batch runs

A batch run of a serial of different reduced order models can be generated by specifying `order = x:y`, or a vector of integers. By default, all the anti-stable part of a system is kept, because from control stability point of view, getting rid of unstable state(s) is dangerous to model a system.

'*MaxError*' can be specified in the same fashion as an alternative for '*ORDER*'. In this case, reduced order will be determined when the sum of the tails of the Hankel sv's reaches the '*MaxError*'.

Argument	Value	Description
' <i>MaxError</i> '	A real number or a vector of different errors	Reduce to achieve $H_\infty$ error. When present, ' <i>MaxError</i> ' overrides <i>ORDER</i> input.
' <i>Weights</i> '	{ <i>Wout</i> , <i>Win</i> } cell array	Optimal 1x2 cell array of LTI weights <i>Wout</i> (output) and <i>Win</i> (input); default is both identity; <i>Weights</i> must be invertible.
' <i>Display</i> '	' <i>on</i> ' or ' <i>off</i> '	Display Hankel singular plots (default ' <i>off</i> ').
' <i>Order</i> '	Integer, vector or cell array	Order of reduced model. Use only if not specified as 2nd argument.

Weights on the original model input and/or output can make the model reduction algorithm focus on some frequency range of interests. But weights have to be stable, minimum phase and invertible.

This table describes output arguments.

Argument	Description
GRED	LTI reduced order model. Becomes multi-dimensional array when input is a serial of different model order array.
REDINFO	A STRUCT array with 3 fields: <ul style="list-style-type: none"> <li>• REDINFO.ErrorBound</li> <li>• REDINFO.StabSV</li> <li>• REDINFO.UnstabSV</li> </ul>

G can be stable or unstable. G and GRED can be either continuous or discrete.

## Algorithms

Given a state space  $(A,B,C,D)$  of a system and  $k$ , the desired reduced order, the following steps will produce a similarity transformation to truncate the original state-space system to the  $k^{th}$  order reduced model [16].

- 1 Find the controllability and observability grammians  $P$  and  $Q$ .
- 2 Find the Schur decomposition for  $PQ$  in both ascending and descending order, respectively,

$$V_A^T P Q V_A = \begin{bmatrix} \lambda_1 & \dots & \dots \\ 0 & \dots & \dots \\ 0 & 0 & \lambda_n \end{bmatrix}$$

$$V_D^T P Q V_D = \begin{bmatrix} \lambda_n & \dots & \dots \\ 0 & \dots & \dots \\ 0 & 0 & \lambda_1 \end{bmatrix}$$

- 3 Find the left/right orthonormal eigen-bases of  $PQ$  associated with the  $k^{th}$  big Hankel singular values.

$$V_A = [V_{R,SMALL}, \overbrace{V_{L,BIG}}]$$

- 4 Find the SVD of  $(V_{L,BIG}^T V_{R,BIG}) = U \Sigma V^T$

$$V_D = [\overbrace{V_{R,BIG}}, V_{L,SMALL}]$$

- 5 Form the left/right transformation for the final  $k^{th}$  order reduced model

$$S_{L,BIG} = V_{L,BIG} U \Sigma(1:k, 1:k)^{-1/2}$$

$$S_{R,BIG} = V_{R,BIG} V \Sigma(1:k, 1:k)^{-1/2}$$

- 6 Finally,

$$\left[ \begin{array}{c|c} \hat{A} & \hat{B} \\ \hline \hat{C} & \hat{D} \end{array} \right] = \left[ \begin{array}{c|c} S_{L,BIG}^T A S_{R,BIG} & S_{L,BIG}^T B \\ \hline C S_{R,BIG} & D \end{array} \right]$$

The proof of the Schur balance truncation algorithm can be found in [2].

## Examples

Given a continuous or discrete, stable or unstable system, G, the following commands can get a set of reduced order models based on your selections:

```
rng(1234, 'twister');
G = rss(30,5,4);
[g1, redinfo1] = schurmr(G); % display Hankel SV plot
                        % and prompt for order (try 15:20)
[g2, redinfo2] = schurmr(G,20);
[g3, redinfo3] = schurmr(G,[10:2:18]);
[g4, redinfo4] = schurmr(G,'MaxError',[0.01, 0.05]);
for i = 1:4
    figure(i); eval(['sigma(G,g' num2str(i) ');']);
```

end

## References

[1] K. Glover, "All Optimal Hankel Norm Approximation of Linear Multivariable Systems, and Their  $L_\infty$ - error Bounds," *Int. J. Control*, vol. 39, no. 6, pp. 1145-1193, 1984.

[2] M. G. Safonov and R. Y. Chiang, "A Schur Method for Balanced Model Reduction," *IEEE Trans. on Automat. Contr.*, vol. 34, no. 7, July 1989, pp. 729-733.

## See Also

reduce | balancmr | bstmr | ncfmr | hankelmr | hankelsv




**Purpose** Compute  $L_2$  norm of continuous-time system in feedback with discrete-time system

**Syntax**

```
[gaml,gamu] = sdhinfnorm(sdsys,k)
[gaml,gamu] = sdhinfnorm(sdsys,k,delay)
[gaml,gamu] = sdhinfnorm(sdsys,k,delay,tol)
```

**Description** `[gaml,gamu] = sdhinfnorm(sdsys,k)` computes the  $L_2$  induced norm of a continuous-time LTI plant, `sdsys`, in feedback with a discrete-time controller, `k`, connected through an ideal sampler and a zero-order hold (see figure below). `sdsys` must be strictly proper, such that the constant feedback gain must be zero. The outputs, `gamu` and `gaml`, are upper and lower bounds on the induced  $L_2$  norm of the sampled-data closed-loop system.

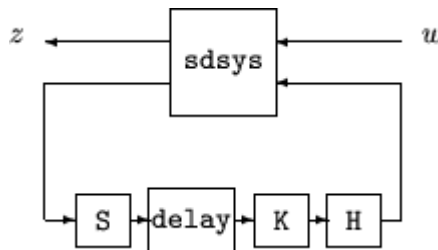

`[gaml,gamu] = sdhinfnorm(sdsys,k,h,delay)` includes the input argument `delay`. `delay` is a nonnegative integer associated with the number of computational delays of the controller. The default value of the delay is 0.

`[gaml,gamu] = sdhinfnorm(sdsys,k,h,delay,tol)` includes the input argument, `tol`, which defines the difference between upper and lower bounds when search terminates. The default value of `tol` is 0.001.

**Examples** Consider an open-loop, continuous-time transfer function  $p = 30/s(s+30)$  and a continuous-time controller  $k = 4/(s+4)$ . The closed-loop continuous-time system has a peak magnitude across frequency of 1.

```
p = ss(tf(30,[1 30])*tf([1],[1 0]));
k = ss(tf(4,[1 4]));
cl = feedback(p,k);
norm(cl,'inf')
ans =
     1
```

Initially the controller is to be implemented at a sample rate of 1.5 Hz. The sample-data norm of the closed-loop system with the discrete-time controller is 1.0.

```
kd = c2d(k,0.75,'zoh');
[gu,gl] = sdhinfnorm([1; 1]*p*[1 1],-kd);
[gu gl]
ans =
    3.7908    3.7929
```

Because of the large difference in norm between the continuous-time and sampled-data closed-loop system, the sample rate of the controller is increased from 1.5 Hz to 5 Hz. The sample-data norm of the new closed-loop system is 3.79.

```
kd = c2d(k,0.2,'zoh');
[gu,gl] = sdhinfnorm([1; 1]*p*[1 1],-kd);
[gu gl]
ans =
    1.0044    1.0049
```

## Algorithms

`sdhinfnorm` uses variations of the formulas described in the Bamieh and Pearson paper to obtain an equivalent discrete-time system. (These variations are done to improve the numerical conditioning of the algorithms.) A preliminary step is to determine whether the norm of the continuous-time system over one sampling period without control is less than the given value. This requires a search and is, computationally, a relatively expensive step.

## References

Bamieh, B.A., and J.B. Pearson, "A General Framework for Linear Periodic Systems with Applications to Sampled-Data Control," *IEEE Transactions on Automatic Control*, Vol. AC-37, 1992, pp. 418-435.

## See Also

gapmetric | hinfsyn | norm | sdhinfsyn | sdlsim

# sdhinfosyn

**Purpose** Compute  $H_\infty$  controller for sampled-data system


**Syntax**  
[K,GAM]=sdhinfosyn(P,NMEAS,NCON)  
[K,GAM]=sdhinfosyn(P,NMEAS,NCON, KEY1,VALUE1,KEY2,VALUE2,...)

**Description** sdhinfosyn controls a continuous-time LTI system  $P$  with a discrete-time controller  $K$ . The continuous-time LTI plant  $P$  has a state-space realization partitioned as follows:

$$P = \left[ \begin{array}{c|cc} A & B_1 & B_2 \\ \hline C_1 & 0 & 0 \\ C_2 & 0 & 0 \end{array} \right]$$

where the continuous-time disturbance inputs enter through  $B_1$ , the outputs from the controller are held constant between sampling instants and enter through  $B_2$ , the continuous-time errors (to be kept small) correspond to the  $C_1$  partition, and the output measurements that are sampled by the controller correspond to the  $C_2$  partition.  $B_2$  has column size ncon and  $C_2$  has row size nmeas. Note that the  $D$  matrix must be zero.

sdhinfosyn synthesizes a discrete-time LTI controller  $K$  to achieve a given norm (if possible) or find the minimum possible norm to within tolerance TOLGAM.

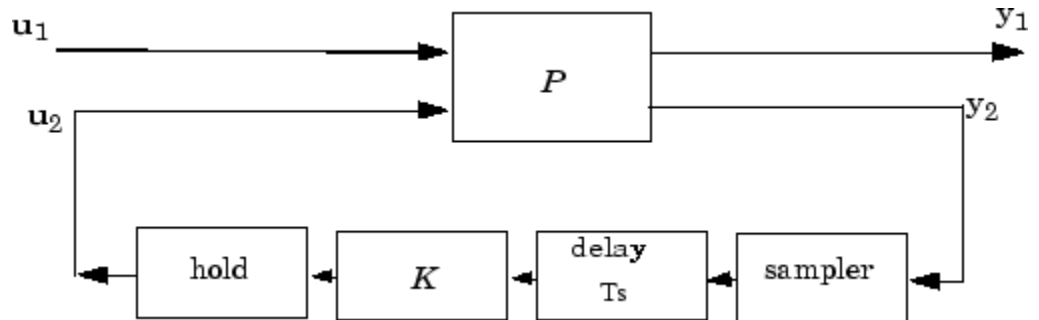

Similar to hifsyn, the function sdhifsyn employs a  $\gamma$  iteration. Given a high and low value of  $\gamma$ , GMAX and GMIN, the bisection method is used to iterate on the value of  $\gamma$  in an effort to approach the optimal  $H_\infty$  control design. If GMAX = GMIN, only one  $\gamma$  value is tested. The stopping criterion for the bisection algorithm requires that the relative difference between the last  $\gamma$  value that failed and the last  $\gamma$  value that passed be less than TOLGAM.

Input arguments

- P                    LTI plant
- NMEAS            Number of measurements output to controller
- NCON              Number of control inputs

Optional input arguments (KEY, VALUE) pairs are similar to hifsyn, but with additional KEY values 'Ts' and 'DELAY'.

KEY	VALUE	Meaning
'GMAX'	real	Initial upper bound on GAM (default=Inf)
'GMIN'	real	Initial lower bound on GAM (default=0)
'TOLGAM'	real	Relative error tolerance for GAM (default=.01)
'Ts'	real	(Default=1) sampling period of the controller to be designed
'DELAY'	integer	(Default=0) a nonnegative integer giving the number of sample periods delay for the control computation
'DISPLAY'	'off' 'on'	(Default) no command window display, or the command window displays synthesis progress information

Output arguments

K	$H_\infty$ controller
GAM	Final $\gamma$ value of $H_\infty$ cost achieved

## Algorithms

sdhifsyn uses a variation of the formulas described in the Bamieh and Pearson paper [1] to obtain an equivalent discrete-time system. (This is done to improve the numerical conditioning of the algorithms.) A preliminary step is to determine whether the norm of the continuous-time system over one sampling period without control is less than the given  $\gamma$ -value. This requires a search and is computationally a relatively expensive step.

## References

[1] Bamieh, B.A., and J.B. Pearson, "A General Framework for Linear Periodic Systems with Applications to Sampled-Data Control," *IEEE Transactions on Automatic Control*, Vol. AC-37, 1992, pp. 418-435.

## See Also

norm | hifsyn | sdhifnorm

**Purpose**

Time response of sampled-data feedback system

**Syntax**

```
sdlsim(p,k,w,t,tf)
sdlsim(p,k,w,t,tf,x0,z0)
sdlsim(p,k,w,t,tf,x0,z0,int)
[vt,yt,ut,t] = sdlsim(p,k,w,t,tf)
[vt,yt,ut,t] = sdlsim(p,k,w,t,tf,x0,z0,int)
```

**Description**

`sdlsim(p,k,w,t,tf)` plots the time response of the hybrid feedback system. `lft(p,k)`, is forced by the continuous input signal described by `w` and `t` (values and times, as in `lsim`). `p` must be a continuous-time LTI system, and `k` must be discrete-time LTI system with a specified sampling time (the unspecified sampling time `-1` is not allowed). The final time is specified with `tf`.

`sdlsim(p,k,w,t,tf,x0,z0)` specifies the initial state vector `x0` of `p`, and `z0` of `k`, at time `t(1)`.

`sdlsim(p,k,w,t,tf,x0,z0,int)` specifies the continuous-time integration step size `int`. `sdlsim` forces `int = (k.Ts)/N` where `N > 4` is an integer. If any of these optional arguments is omitted, or passed as empty matrices, then default values are used. The default value for `x0` and `z0` is zero. Nonzero initial conditions are allowed for `p` (and/or `k`) only if `p` (and/or `k`) is an `ss` object.

If `p` and/or `k` is an LTI array with consistent array dimensions, then the time simulation is performed pointwise across the array dimensions.

`[vt,yt,ut,t] = sdlsim(p,k,w,t,tf)` computes the continuous-time response of the hybrid feedback system `lft(p,k)` forced by the continuous input signal defined by `w` and `t` (values and times, as in `lsim`). `p` must be a continuous-time system, and `k` must be discrete-time, with a specified sampling time (the unspecified sampling time `-1` is not allowed). The final time is specified with `tf`. The outputs `vt`, `yt` and `ut` are 2-by-1 cell arrays: in each the first entry is a time vector, and the second entry is the signal values. Stored in this manner, the signal `vt` is plotted by using one of the following commands:

```
plot(vt{1},vt{2})
```

```
plot(vt{:})
```

Signals  $y_t$  and  $u_t$  are respectively the input to  $k$  and output of  $k$ .

If  $p$  and/or  $k$  are LTI arrays with consistent array dimensions, then the time simulation is performed pointwise across the array dimensions. The outputs are 2-by-1-by-array dimension cell arrays. All responses can be plotted simultaneously, for example, `plot(vt)`.

```
[vt,yt,ut,t] = sdlsim(p,k,w,t,tf,x0,z0,int)
```

 The optional arguments are `int` (integration step size), `x0` (initial condition for  $p$ ), and `z0` (initial condition for  $k$ ). `sdlsim` forces `int = (k.Ts)/N`, where  $N > 4$  is an integer. If any of these arguments is omitted, or passed as empty matrices, then default values are used. The default value for `x0` and `z0` is zero. Nonzero initial conditions are allowed for  $p$  (and/or  $k$ ) only if  $p$  (and/or  $k$ ) is an `ss` object.

## Examples

### Time Response of Continuous Plant with Discrete Controller

To illustrate the use of `sdlsim`, consider the application of a discrete controller to a plant with an integrator and near integrator. A continuous plant and a discrete controller are created. A sample-and-hold equivalent of the plant is formed and the discrete closed-loop system is calculated. Simulating this gives the system response at the sample points. `sdlsim` is then used to calculate the intersample behavior.

```
P = tf(1,[1, 1e-5,0]);  
T = 1.0/20;  
C = ss([-1.5 T/4; -2/T -.5],[.5 2;1/T 1/T],...  
      [-1/T^2 -1.5/T], [1/T^2 0],T);  
Pd = c2d(P,T,'zoh');
```

The closed-loop digital system is now set up. You can use `sysic` to construct the interconnected feedback system.

```
systemnames = 'Pd C';  
inputvar = '[ref]';  
outputvar = '[Pd]';
```




```
input_to_Pd = '[C]';  
input_to_C = '[ref ; Pd]';  
sysoutname = 'dclp';  
cleanup_sysic = 'yes';  
sysic;
```

Use `step` to simulate the digital step response.

```
[yd,td] = step(dclp,20*T);
```


Set up the continuous interconnection and calculate the sampled data response with `sdlsim`.

```
M = [0,1;1,0;0,1]*blkdiag(1,P);  
t = [0:.01:1]';  
u = ones(size(t));  
y1 = sdlsim(M,C,u,t);  
plot(td,yd,'r*',y1{:},'b-')  
axis([0,1,0,1.5])  
xlabel('Time: seconds')  
title('Step response: discrete (*) and continuous')
```

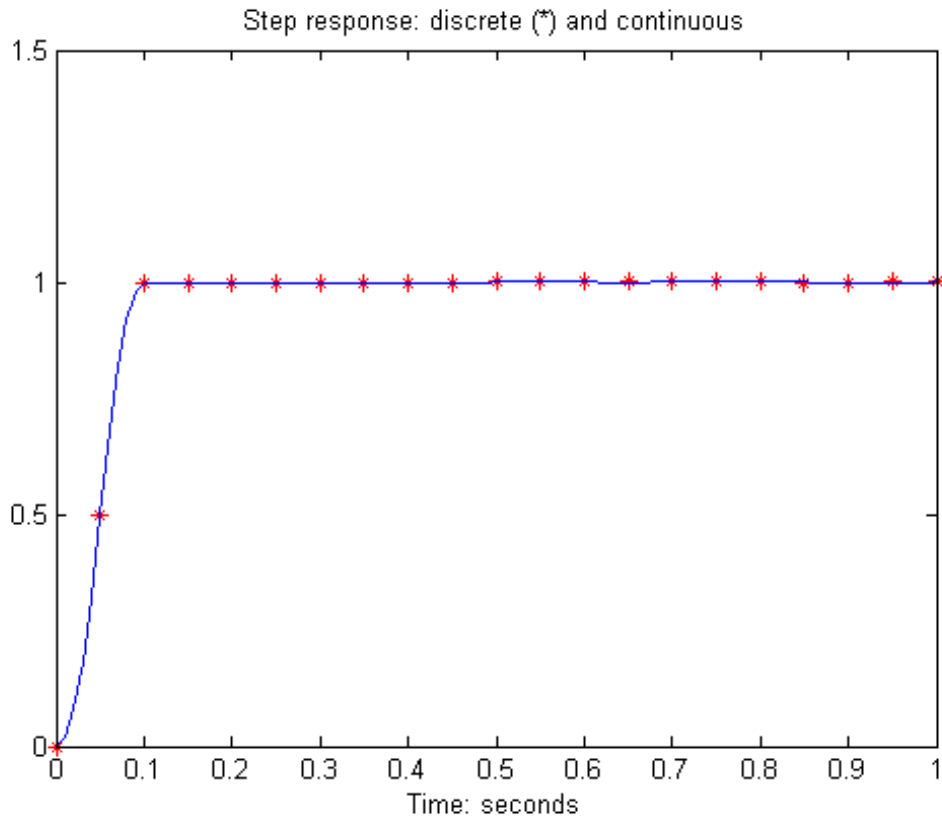

You can see the effect of a nonzero initial condition in the continuous-time system. Note how examining the system at only the sample points will underestimate the amplitude of the overshoot.

```
y2 = sdlsim(M,C,u,t,1,0,[0.25;0]);  
plot(td,yd,'r*',y1{:},'b-',y2{:},'g--')  
axis([0,1,0,1.5])  
xlabel('Time: seconds')  
title('Step response: nonzero initial condition')
```

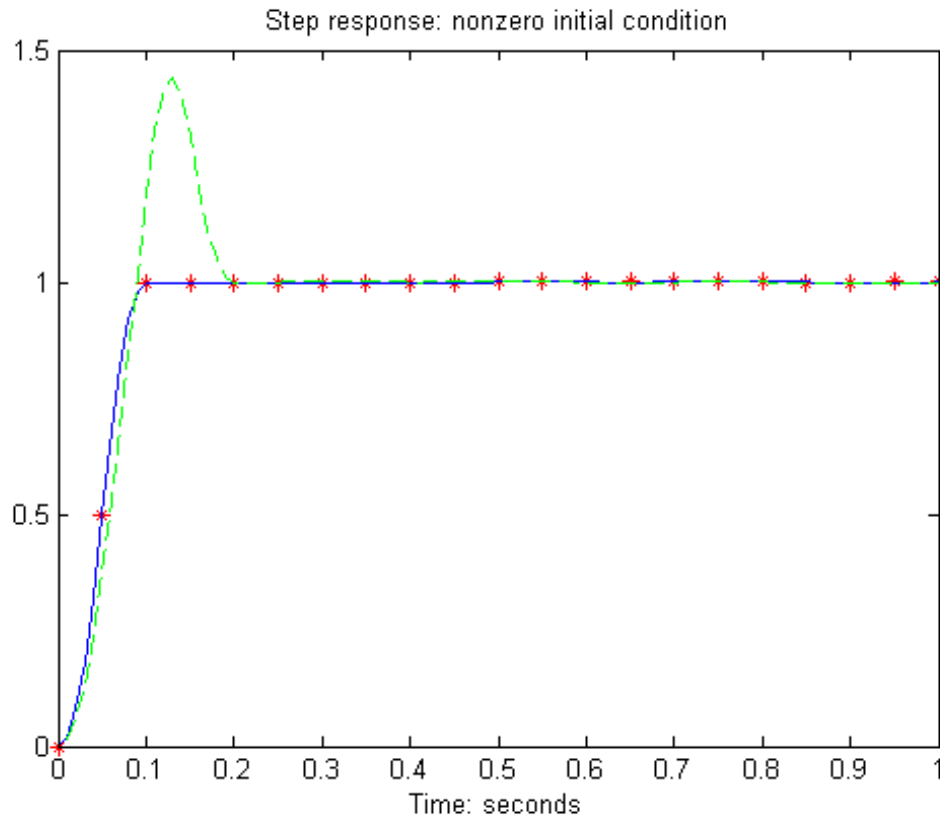


Finally, you can examine the effect of a sinusoidal disturbance at the continuous-time plant output. This controller is not designed to reject such a disturbance and the system does not contain antialiasing filters. Simulating the effect of antialiasing filters is easily accomplished by including them in the continuous interconnection structure.

```
M2 = [0,1,1;1,0,0;0,1,1]*blkdiag(1,1,P);  
t = [0:.001:1]';  
dist = 0.1*sin(41*t);  
u = ones(size(t));
```

# sdlsim

```
[y3,meas,act] = sdlsim(M2,C,[u dist],t,1);  
plot(y3{:},'-' ,t,dist,'b--',t,u,'g-.')  
xlabel('Time: seconds')  
title('Step response: disturbance (dashed) and output (solid)')
```

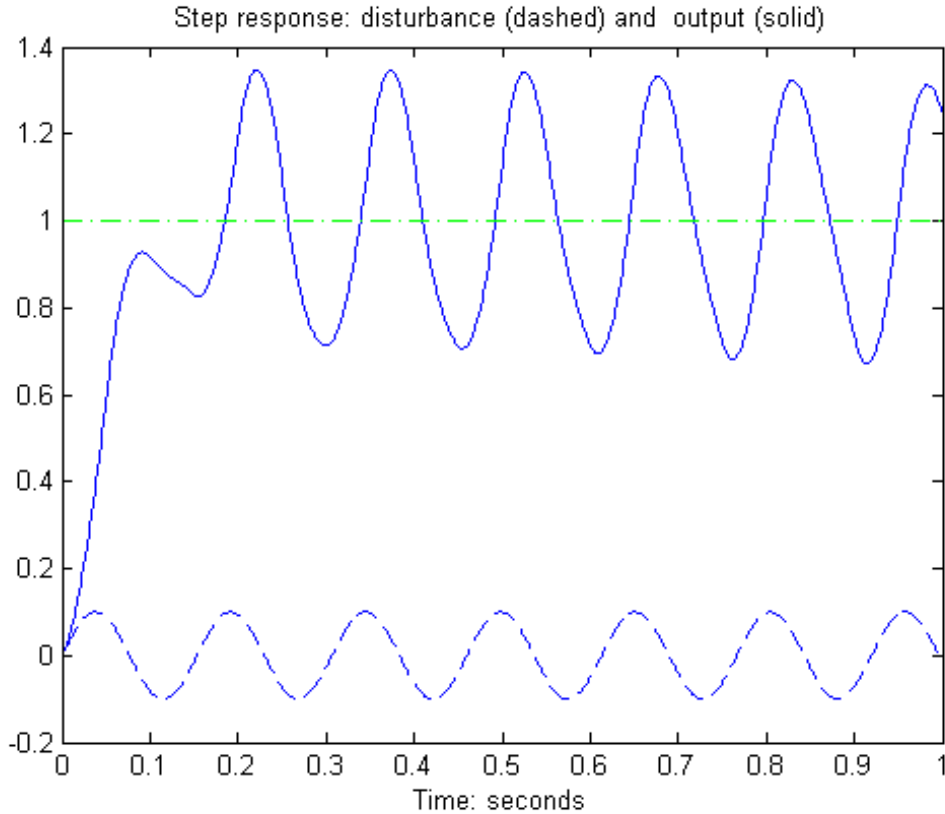

## Algorithms

sdlsim oversamples the continuous-time,  $N$  times the sample rate of the controller  $k$ .

## See Also

gapmetric | hinfsyn | norm | sdhinfnorm | sdhinfosyn | sysic


**Purpose** State-space sector bilinear transformation

**Syntax**  $[G, T] = \text{sectf}(F, \text{SECF}, \text{SECG})$

**Description**  $[G, T] = \text{sectf}(F, \text{SECF}, \text{SECG})$  computes a linear fractional transform  $T$  such that the system  $\text{lft}(F, K)$  is in sector  $\text{SECF}$  if and only if the system  $\text{lft}(G, K)$  is in sector  $\text{SECG}$  where

$$G = \text{lft}(T, F, NU, NY)$$

where  $NU$  and  $NY$  are the dimensions of  $u_{T_2}$  and  $y_{T_2}$ , respectively—see the following figure.

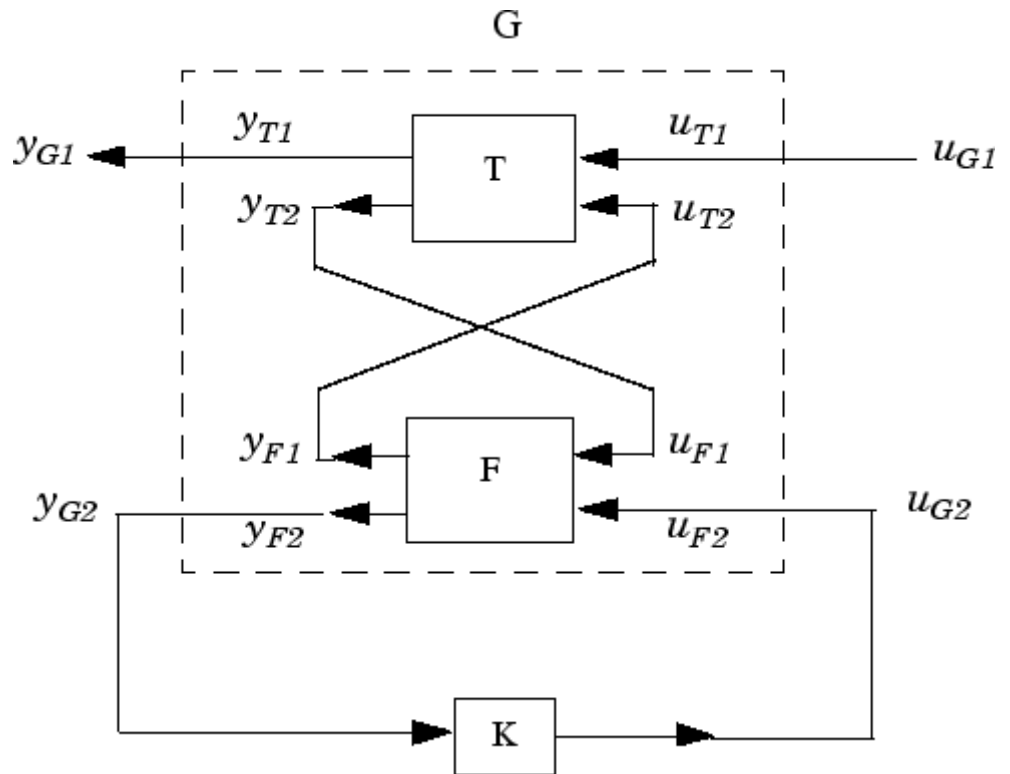

**Sector transform**  $G = \text{lft}(T, F, NU, NY)$ .

`sectf` are used to transform general conic-sector control system performance specifications into equivalent  $H_\infty$ -norm performance specifications.

Input Arguments		
F	LTI state-space plant	
SECG, SECF:	Conic Sector:	

Input Arguments		
	$[-1, 1]$ or $[-1; 1]$	$\ y\ ^2 \leq \ u\ ^2$
	$[0, \text{Inf}]$ or $[0; \text{Inf}]$	$0 \leq \text{Re}[y * u]$
	$[A, B]$ or $[A; B]$	$0 \geq \text{Re}[(y - Au) * (y - Bu)]$
	$[a, b]$ or $[a; b]$	$0 \geq \text{Re}[(y - \text{diag}(a)u) * (y - \text{diag}(b)u)]$
	S	$0 \geq \text{Re}[(S_{11}u + S_{12}y) * (S_{21}u + S_{22}y)]$
	S	$0 \geq \text{Re}[(S_{11}u + S_{12}y) * (S_{21}u + S_{22}y)]$

where A,B are scalars in  $[-\infty, \infty]$  or square matrices; a, b are vectors; S=[S11 S12;S21,S22] is a square matrix whose blocks S11, S12, S21, S22 are either scalars or square matrices; S is a two-port system S=mksys(a,b1,b2,...,'tss') with transfer function

$$S(s) = \begin{bmatrix} S_{11}(s) & S_{12}(s) \\ S_{21}(s) & S_{22}(s) \end{bmatrix}$$

Output Arguments	Description
G	Transformed plant $G(s)=\text{lftf}(T, F)$
T	LFT sector transform, maps conic sector SECF into conic sector SECG


Output Variables	
G	The transformed plant $G(s) = \text{lft}(T, F)$ :
T	The linear fractional transformation $T(s) = T$

## Examples

The statement  $G(j\omega)$  inside sector $[-1, 1]$  is equivalent to the  $H_\infty$  inequality

$$\sup_{\omega} \bar{\sigma}(G(j\omega)) = \|G\|_\infty \leq 1$$

Given a two-port open-loop plant  $P(s) := P$ , the command `P1 = sectf(P, [0, Inf], [-1, 1])` computes a transformed  $P_1(s) := P1$  such that if  $\text{lft}(G, K)$  is inside sector $[-1, 1]$  if and only if  $\text{lft}(F, K)$  is inside sector $[0, \infty]$ . In other words,  $\text{norm}(\text{lft}(G, K), \text{inf}) < 1$  if and only if  $\text{lft}(F, K)$  is strictly positive real. See Example of Sector Transform on page 2-391.

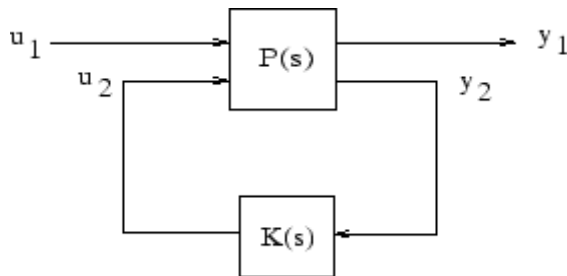

### Sector Transform Block Diagram

Here is a simple example of the sector transform.

$$P(s) = \frac{1}{s+1} \in \text{sector}[-1, 1] \rightarrow P_1(s) = \frac{s+2}{2} \in \text{sector}[0, \infty].$$

You can compute this by simply executing the following commands:


```
P = ss(tf(1,[1 1]));
```



```
P1 = sectf(P, [-1,1],[0,Inf]);
```

The Nyquist plots for this transformation are depicted in Example of Sector Transform on page 2-391. The condition  $P_1(s)$  inside  $[0, \infty]$  implies that  $P_1(s)$  is stable and  $P_1(j\omega)$  is *positive real*, i.e.,

$$P_1^*(j\omega) + P_1(j\omega) \geq 0 \quad \forall \omega$$

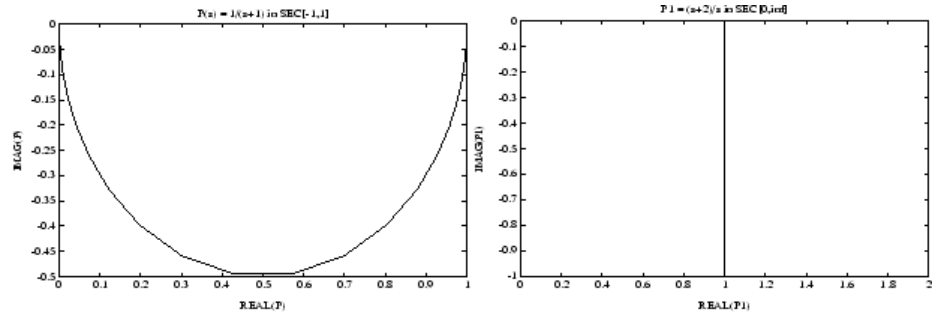

**Example of Sector Transform**

## Algorithms

sectf uses the generalization of the sector concept of [3] described by [1]. First the sector input data Sf= SECF and Sg=SECG is converted to two-port state-space form; non-dynamical sectors are handled with empty  $a$ ,  $b1$ ,  $b2$ ,  $c1$ ,  $c2$  matrices. Next the equation

$$S_g(s) \begin{bmatrix} u_{g_1} \\ y_{g_1} \end{bmatrix} = S_f(s) \begin{bmatrix} u_{f_1} \\ y_{f_1} \end{bmatrix}$$

is solved for the two-port transfer function  $T(s)$  from  $u_{g_1}, y_{f_1}$  to  $u_{f_1}, y_{g_1}$ . Finally, the function lftf is used to compute  $G(s)$  as  $G = \text{lftf}(T, F)$ .

## Limitations

A well-posed conic sector must have  $\det(B-A) \neq 0$  or

$$\det \begin{pmatrix} s_{11} & s_{12} \\ s_{21} & s_{22} \end{pmatrix} \neq 0.$$

Also, you must have  $\dim(u_{F1}) = \dim(y_{F1})$  since sectors are only defined for square systems.

**References**

[1] Safonov, M.G., *Stability and Robustness of Multivariable Feedback Systems*. Cambridge, MA: MIT Press, 1980.

[2] Safonov, M.G., E.A. Jonckheere, M. Verma and D.J.N. Limebeer, "Synthesis of Positive Real Multivariable Feedback Systems," *Int. J. Control*, vol. 45, no. 3, pp. 817-842, 1987.

[3] Zames, G., "On the Input-Output Stability of Time-Varying Nonlinear Feedback Systems  $\geq$ — Part I: Conditions Using Concepts of Loop Gain, Conicity, and Positivity," *IEEE Trans. on Automat. Contr.*, AC-11, pp. 228-238, 1966.

**See Also**

lft | hinfsyn

---

<b>Purpose</b>	Initialize description of LMI system
<b>Syntax</b>	<code>setlmi(lmi0)</code>
<b>Description</b>	<p>Before starting the description of a new LMI system with <code>lmivar</code> and <code>lmiterm</code>, type</p> <pre>setlmi([])</pre> <p>to initialize its internal representation.</p> <p>To add on to an existing LMI system, use the syntax</p> <pre>setlmi(lmi0)</pre> <p>where <code>lmi0</code> is the internal representation of this LMI system. Subsequent <code>lmivar</code> and <code>lmiterm</code> commands will then add new variables and terms to the initial LMI system <code>lmi0</code>.</p>
<b>See Also</b>	<code>getlmi</code>   <code>lmivar</code>   <code>lmiterm</code>   <code>newlmi</code>

# setmvar

---

**Purpose** Instantiate matrix variable and evaluate all LMI terms involving this matrix variable

**Syntax** `mnewsys = setmvar(lmisys,X,Xval)`

**Description** `setmvar` sets the matrix variable  $X$  with identifier  $X$  to the value  $Xval$ . All terms involving  $X$  are evaluated, the constant terms are updated accordingly, and  $X$  is removed from the list of matrix variables. A description of the resulting LMI system is returned in `newsys`.

The integer  $X$  is the identifier returned by `lmivar` when  $X$  is declared. Instantiating  $X$  with `setmvar` does not alter the identifiers of the remaining matrix variables.

The function `setmvar` is useful to freeze certain matrix variables and optimize with respect to the remaining ones. It saves time by avoiding partial or complete redefinition of the set of LMI constraints.

**Examples** Consider the system

$$\dot{x} = Ax + Bu$$

and the problem of finding a stabilizing state-feedback law  $u = Kx$  where  $K$  is an unknown matrix.

By the Lyapunov Theorem, this is equivalent to finding  $P > 0$  and  $K$  such that

$$(A + BK)P + P(A + BK^T) + I < 0.$$

With the change of variable  $Y := KP$ , this condition reduces to the LMI

$$AP + PA^T + BY + Y^T B^T + I < 0.$$

This LMI is entered by the commands

```
n = size(A,1)           % number of states
```

```

ncon = size(B,2)           % number of inputs

setlmis([])
P = lmivar(1,[n 1])       % P full symmetric
Y = lmivar(2,[ncon n])   % Y rectangular

lmiterm([1 1 1 P],A,1,'s') % AP+PA'
lmiterm([1 1 1 Y],B,1,'s') % BY+Y'B'
lmiterm([1 1 1 0],1)     % I
lmis = getlmis

```

To find out whether this problem has a solution  $K$  for the particular Lyapunov matrix  $P = I$ , set  $P$  to  $I$  by typing

```
news = setmvar(lmis,P,1)
```

The resulting LMI system `news` has only one variable  $Y = K$ . Its feasibility is assessed by calling `feasp`:

```
[tmin,xfeas] = feasp(news)
Y = dec2mat(news,xfeas,Y)
```

The computed  $Y$  is feasible whenever `tmin < 0`.

## See Also

`evallmi` | `delmvar`

# showlmi

---

**Purpose** Return left and right sides of LMI after evaluation of all variable terms

**Syntax** `[lhs,rhs] = showlmi(evalsys,n)`

**Description** For given values of the decision variables, the function `evallmi` evaluates all variable terms in a system of LMIs. The left and right sides of the  $n$ -th LMI are then constant matrices that can be displayed with `showlmi`. If `evalsys` is the output of `evallmi`, the values `lhs` and `rhs` of these left and right sides are given by

```
[lhs,rhs] = showlmi(evalsys,n)
```

An error is issued if `evalsys` still contains variable terms.

**Examples** See the description of `evallmi`.

**See Also** `evallmi` | `setmvar`

**Purpose** Simplify representation of uncertain object

**Syntax**

```
B = simplify(A)
B = simplify(A, 'full')
B = simplify(A, 'basic')
B = simplify(A, 'class')
```

**Description** `B = simplify(A)` performs model-reduction-like techniques to detect and eliminate redundant copies of uncertain elements. Depending on the result, the class of `B` may be lower than `A`. The `AutoSimplify` property of each uncertain element in `A` governs what reduction methods are used. After reduction, any uncertain element which does not actually affect the result is deleted from the representation.

`B = simplify(A, 'full')` overrides all uncertain element's `AutoSimplify` property, and uses 'full' reduction techniques.

`B = simplify(A, 'basic')` overrides all uncertain element's `AutoSimplify` property, and uses 'basic' reduction techniques.

`B = simplify(A, 'class')` does not perform reduction. However, any uncertain elements in `A` with zero occurrences are eliminated, and the class of `B` may be lower than the class of `A`.

**Examples** Create a simple umat with a single uncertain real parameter. Select specific elements, note that result remains in class umat. Simplify those same elements, and note that class changes.

```
p1 = ureal('p1',3,'Range',[2 5]);
L = [2 p1];
L(1)
UMAT: 1 Rows, 1 Columns
L(2)
UMAT: 1 Rows, 1 Columns
    p1: real, nominal = 3, range = [2 5], 1 occurrence
simplify(L(1))
ans =
    2
```

```
simplify(L(2))
Uncertain Real Parameter: Name p1, NominalValue 3, Range [2 5]

Create four uncertain real parameters, with a default value of
AutoSimplify('basic'), and define a high order polynomial [1].

m = ureal('m',125000,'Range',[100000 150000]);
xcg = ureal('xcg',.23,'Range',[.15 .31]);
zcg = ureal('zcg',.105,'Range',[0 .21]);
va = ureal('va',80,'Range',[70 90]);
cw = simplify(m/(va*va)*va,'full')
UMAT: 1 Rows, 1 Columns
    m: real, nominal = 1.25e+005, range = [100000 150000],
    1 occurrence
    va: real, nominal = 80, range = [70 90], 1 occurrence
cw = m/va;
fac2 = .16726*xcg*cw*cw*zcg - .17230*xcg*xcg*cw ...
        -3.9*xcg*cw*zcg - .28*xcg*xcg*cw*cw*zcg ...
        -.07*xcg*xcg*zcg + .29*xcg*xcg*cw*zcg ...
        + 4.9*xcg*cw - 2.7*xcg*cw*cw ...
        +.58*cw*cw - 0.25*xcg*xcg - 1.34*cw ...
        +100.1*xcg -14.1*zcg - 1.91*cw*cw*zcg ...
        +1.12*xcg*zcg + 24.6*cw*zcg ...
        +.45*xcg*xcg*cw*cw - 46.85
UMAT: 1 Rows, 1 Columns
    m: real, nominal = 1.25e+005, range = [100000 150000],
    18 occurrences
    va: real, nominal = 80, range = [70 90], 8 occurrences
    xcg: real, nominal = 0.23, range = [0.15 0.31], 18 occurrences
    zcg: real, nominal = 0.105, range = [0 0.21], 1 occurrence
```

The result of the high-order polynomial is an inefficient representation involving 18 copies of  $m$ , 8 copies of  $va$ , 18 copies of  $xcg$  and 1 copy of  $zcg$ . Simplify the expression, using the 'full' simplification algorithm

```
fac2s = simplify(fac2,'full')
UMAT: 1 Rows, 1 Columns
```



```

    m: real, nominal = 1.25e+005, range = [100000 150000],
4 occurrences
    va: real, nominal = 80, range = [70 90], 4 occurrences
    xcg: real, nominal = 0.23, range = [0.15 0.31], 2 occurrences
    zcg: real, nominal = 0.105, range = [0 0.21], 1 occurrence

```

which results in a much more economical representation.

Alternatively, change the AutoSimplify property of each parameter to 'full' before forming the polynomial.

```

m.AutoSimplify = 'full';
xcg.AutoSimplify = 'full';
zcg.AutoSimplify = 'full';
va.AutoSimplify = 'full';

```

You can form the polynomial, which immediately gives a low order representation.

```

cw = m/va;
fac2f = .16726*xcg*cw*cw*zcg - .17230*xcg*xcg*cw ...
        -3.9*xcg*cw*zcg - .28*xcg*xcg*cw*cw*zcg ...
        -.07*xcg*xcg*zcg + .29*xcg*xcg*cw*zcg ...
        + 4.9*xcg*cw - 2.7*xcg*cw*cw ...
        +.58*cw*cw - 0.25*xcg*xcg - 1.34*cw ...
        +100.1*xcg -14.1*zcg - 1.91*cw*cw*zcg ...
        +1.12*xcg*zcg + 24.6*cw*zcg ...
        +.45*xcg*xcg*cw*cw - 46.85
UMAT: 1 Rows, 1 Columns
    m: real, nominal = 1.25e+005, range = [100000 150000],
4 occurrences
    va: real, nominal = 80, range = [70 90], 4 occurrences
    xcg: real, nominal = 0.23, range = [0.15 0.31], 2 occurrences
    zcg: real, nominal = 0.105, range = [0 0.21], 1 occurrence

```

Create two real parameters, da and dx, and a 2-by-3 matrix, ABmat, involving polynomial expressions in the two real parameters .

```
da = ureal('da',0,'Range',[-1 1]);
dx = ureal('dx',0,'Range',[-1 1]);
a11 = -.32 + da*(.8089 + da*(-.987 + 3.39*da)) + .15*dx;
a12 = .934 + da*(.0474 - .302*da);
a21 = -1.15 + da*(4.39 + da*(21.97 - 561*da*da)) ...
      + dx*(9.65 - da*(55.7 + da*177));
a22 = -.66 + da*(1.2 - da*2.27) + dx*(2.66 - 5.1*da);
b1 = -0.00071 + da*(0.00175 - da*.00308) + .0011*dx;
b2 = -0.031 + da*(.078 + da*(-.464 + 1.37*da)) + .0072*dx;
ABmat = [a11 a12 b1;a21 a22 b2]
UMAT: 2 Rows, 3 Columns
  da: real, nominal = 0, range = [-1 1], 19 occurrences
  dx: real, nominal = 0, range = [-1 1], 2 occurrences
```

Use 'full' simplification to reduce the complexity of the description.

```
ABmatsimp = simplify(ABmat,'full')
UMAT: 2 Rows, 3 Columns
  da: real, nominal = 0, range = [-1 1], 7 occurrences
  dx: real, nominal = 0, range = [-1 1], 2 occurrences
```

Alternatively, you can set the parameter's AutoSimplify property to 'full'.

```
da.AutoSimplify = 'full';
dx.AutoSimplify = 'full';
```

Now you can rebuild the matrix

```
a11 = -.32 + da*(.8089 + da*(-.987 + 3.39*da)) + .15*dx;
a12 = .934 + da*(.0474 - .302*da);
a21 = -1.15 + da*(4.39 + da*(21.97 - 561*da*da)) ...
      + dx*(9.65 - da*(55.7 + da*177));
a22 = -.66 + da*(1.2 - da*2.27) + dx*(2.66 - 5.1*da);
b1 = -0.00071 + da*(0.00175 - da*.00308) + .0011*dx;
b2 = -0.031 + da*(.078 + da*(-.464 + 1.37*da)) + .0072*dx;
ABmatFull = [a11 a12 b1;a21 a22 b2]
```

UMAT: 2 Rows, 3 Columns

da: real, nominal = 0, range = [-1 1], 7 occurrences

dx: real, nominal = 0, range = [-1 1], 2 occurrences

## Algorithms

simplify uses heuristics along with one-dimensional model reduction algorithms to partially reduce the dimensionality of the representation of an uncertain matrix or system.

## Limitations

Multidimensional model reduction and realization theory are only partially complete theories. The heuristics used by simplify are that - heuristics. The order in which expressions involving uncertain elements are built up, eg., distributing across addition and multiplication, can affect the details of the representation (i.e., the number of occurrences of a ureal in an uncertain matrix). It is possible that simplify's naive methods cannot completely resolve these differences, so one may be forced to work with "nonminimal" representations of uncertain systems.

## References

- [1] Varga, A. and G. Looye, "Symbolic and numerical software tools for LFT-based low order uncertainty modeling," *IEEE International Symposium on Computer Aided Control System Design*, 1999, pp. 5-11.
- [2] Belcastro, C.M., K.B. Lim and E.A. Morelli, "Computer aided uncertainty modeling for nonlinear parameter-dependent systems Part II: F-16 example," *IEEE International Symposium on Computer Aided Control System Design*, 1999, pp. 17-23.

## See Also

umat | uss | ucomplex | ureal | uss

# skewdec

---

**Purpose** Form skew-symmetric matrix

**Syntax** `x = skewdec(m,n)`

**Description** `skewdec(m,n)` forms the m-by-m skew-symmetric matrix

$$\begin{bmatrix} 0 & -(n-1) & -(n-2) & \dots \\ (n+1) & 0 & -(n-3) & \dots \\ (n+2) & (n+3) & 0 & \dots \\ \dots & \dots & \dots & \dots \\ \dots & \dots & \dots & \dots \end{bmatrix}$$

This function is useful to define skew-symmetric matrix variables. In this case, set n to the number of decision variables already used.

**See Also** `decinfo` | `lmivar`

<b>Purpose</b>	Slow and fast modes decomposition
<b>Syntax</b>	<code>[G1,G2] = slowfast(G,ns)</code>
<b>Description</b>	<p>slowfast computes the slow and fast modes decompositions of a system <math>G(s)</math> such that</p> $G(s) = [G_1(s)] + [G_2(s)]$ <p><math>G(s)</math> contains the <math>N</math> slowest modes (modes with the smallest absolute value) of <math>G</math>.</p> <p><math>[G_1(s)] := (A_{11}, B_1, C_1, D_1)</math> denotes the slow part of <math>G(s)</math>. The slow poles have low frequency and magnitude values.</p> <p><math>[G_2(s)] := (A_{22}, B_2, C_2, D_2)</math> denotes the fast part. The fast poles have high frequency and magnitude values.</p> <p>The variable <code>ns</code> denotes the index where the modes will be split.</p> <p>Use <code>freqsep</code> to separate slow and fast modes at a specified cutoff frequency instead of a specified number of modes.</p>
<b>References</b>	M.G. Safonov, E.A. Jonckheere, M. Verma and D.J.N. Limebeer, "Synthesis of Positive Real Multivariable Feedback Systems", <i>Int. J. Control</i> , vol. 45, no. 3, pp. 817-842, 1987.
<b>See Also</b>	<code>schur</code>   <code>modreal</code>   <code>freqsep</code>

# squeeze

---

**Purpose** Remove singleton dimensions for `umat` objects

**Syntax** `B = squeeze(A)`

**Description** `B = squeeze(A)` returns an array `B` with the same elements as `A` but with all the singleton dimensions removed. A singleton is a dimension such that `size(A,dim)==1`. 2-D arrays are unaffected by `squeeze` so that row vectors remain rows.

**See Also** `permute` | `reshape`

---

<b>Purpose</b>	Scale state/uncertainty while preserving uncertain input/output map of uncertain system
<b>Syntax</b>	<pre>usysout = ssbal(usys) usysout = ssbal(usys,wc) usysout = ssbal(usys,wc,FSflag) usysout = ssbal(usys,wc,FSflag,BLTflag)</pre>
<b>Description</b>	<p><code>usysout = ssbal(usys)</code> yields a system whose input/output and uncertain properties are the same as <code>usys</code>, a <code>uss</code> object. The numerical conditioning of <code>usysout</code> is usually better than that of <code>usys</code>, improving the accuracy of additional computations performed with <code>usysout</code>. <code>usysout</code> is a <code>uss</code> object. The balancing algorithm uses <code>mussv</code> to balance the constant uncertain state-space matrices in discrete time. If <code>usys</code> is a continuous-time uncertain system, the uncertain state-space is mapped by using a bilinear transformation into discrete time for balancing.</p> <p><code>usysout = ssbal(usys,wc)</code> defines the critical frequency <code>wc</code> for the bilinear prewarp transformation from continuous time to discrete time. The default value of <code>wc</code> is 1 when the nominal uncertain system is stable and <math>1.25 \cdot \text{mxeig}</math> when it is unstable. <code>mxeig</code> corresponds to the value of the real, most positive pole of <code>usys</code>.</p> <p><code>usysout = ssbal(usys,wc,FSflag)</code> sets the scaling flag <code>FSflag</code> to handle repeated uncertain parameters. Setting <code>FSflag=1</code> uses full matrix scalings to balance the repeated uncertain parameter blocks. <code>FSflag=0</code>, the default, uses a single, positive scalar to balance the repeated uncertain parameter blocks.</p> <p><code>usysout = ssbal(usys,wc,FSflag,BLTflag)</code> sets the bilinear transformation flag, <code>BLTflag</code>. By default, <code>BLTflag=1</code> and transforms the continuous-time system <code>usys</code> to a discrete-time system for balancing. <code>BLTflag=0</code> results in balancing the continuous-time state-space data from <code>usys</code>. Note that if <code>usys</code> is a discrete-time system, no bilinear transformation is performed.</p> <p><code>ssbal</code> does not work on an array of uncertain systems. An error message is generated to alert you to this.</p>

## Examples

Consider a two-input, two-output, two-state uncertain system with two real parameter uncertainties, p1 and p2.

```
p2=ureal('p2',-17,'Range',[-19 -11]);
p1=ureal('p1',3.2,'Percentage',0.43);
A = [-12 p1;.001 p2];
B = [120 -809;503 24];
C = [.034 .0076; .00019 2];
usys = ss(A,B,C,zeros(2,2))
USS: 2 States, 2 Outputs, 2 Inputs, Continuous System
  p1: real, nominal = 3.2, variability = [-0.43 0.43]%, 1 occurrence
  p2: real, nominal = -17, range = [-19 -11], 1 occurrence
usys.NominalValue
a =
      x1    x2
x1   -12    3.2
x2   0.001  -17

b =
      u1    u2
x1   120  -809
x2   503    24

c =
      x1    x2
y1   0.034  0.0076
y2  0.00019    2

d =
      u1    u2
y1    0    0
y2    0    0

Continuous-time model.
ssbal is used to balance the uncertain system usys.

usysout = ssbal(usys)
```



```
USS: 2 States, 2 Outputs, 2 Inputs, Continuous System
  p1: real, nominal = 3.2, variability = [-0.43 0.43]%,
1 occurrence
  p2: real, nominal = -17, range = [-19 -11], 1 occurrence
```

```
usysout.NominalValue
```

```
a =
      x1      x2
x1    -12    0.3302
x2  0.009692   -17
```

```
b =
      u1      u2
x1  0.7802  -5.26
x2  31.7    1.512
```

```
c =
      x1      x2
y1   5.229  0.1206
y2  0.02922  31.74
```

```
d =
      u1  u2
y1    0  0
y2    0  0
```

```
Continuous-time model.
```

## See Also

```
canon | c2d | d2c | mussv | mussvextract | ss2ss
```

**Purpose** Construct array by stacking uncertain matrices, models, or arrays

**Syntax**  
`umatout = stack(arraydim,umat1,umat2,...)`  
`usysout = stack(arraydim,usys1,usys2,...)`

**Description** `stack` constructs an uncertain array by stacking uncertain matrices, models, or arrays along array dimensions of an uncertain array.

`umatout = stack(arraydim,umat1,umat2,...)` produces an array of uncertain matrices, `umatout`, by stacking (concatenating) the `umat` matrices (or `umat` arrays) `umat1,umat2,...` along the array dimension `arraydim`. All models must have the same number of columns and rows. The column/row dimensions are not counted in the array dimensions.

`umatout = stack(arraydim,usys1,usys2,...)` produces an array of uncertain models, `ufrd` or `uss`, or `usysout`, by stacking (concatenating) the `ufrd` or `uss` matrices (or `ufrd` or `uss` arrays) `usys1,usys2,...` along the array dimension `arraydim`. All models must have the same number of columns and rows (the same input/output dimensions). Note that the input/output dimensions are not considered for arrays.

**Examples** Consider `usys1` and `usys2`, two single-input/single-output `uss` models:

```
zeta = ureal('zeta',1,'Range',[0.4 4]);  
wn = ureal('wn',0.5,'Range',[0.3 0.7]);  
P1 = tf(1,[1 2*zeta*wn wn^2]);  
P2 = tf(zeta,[1 10]);
```

You can stack along the first dimension to produce a 2-by-1 `uss` array.

```
stack(1,P1,P1)  
USS: 2 States, 1 Output, 1 Input, Continuous System [array, 2 x 1]  
    wn: real, nominal = 0.5, range = [0.3 0.7], 3 occurrences  
    zeta: real, nominal = 1, range = [0.4 4], 1 occurrence
```

You can stack along the second dimension to produce a 1-by-2 `uss` array.

```
stack(2,P1,P2) % produces a 1-by-2 USS array.
```

---

```
USS: 2 States, 1 Output, 1 Input, Continuous System [array, 1 x 2]
    wn: real, nominal = 0.5, range = [0.3 0.7], 3 occurrences
    zeta: real, nominal = 1, range = [0.4 4], 1 occurrence
```

You can stack along the third dimension to produce a 1-by-1-by-2 `uss` array.

```
stack(3,P1,P2) % produces a 1-by-1-by-2 USS array.
USS: 2 States, 1 Output, 1 Input, Continuous System
[array, 1 x 1 x 2]
    wn: real, nominal = 0.5, range = [0.3 0.7], 3 occurrences
    zeta: real, nominal = 1, range = [0.4 4], 1 occurrence
```

**See Also**

`append` | `blkdiag` | `horzcat` | `vertcat`

# symdec

---

**Purpose** Form symmetric matrix

**Syntax** `x = symdec(m,n)`

**Description** `symdec(m,n)` forms an m-by-m symmetric matrix of the form

$$\begin{bmatrix} (n+1) & (n+2) & (n+4) & \dots \\ (n+2) & (n+3) & (n+5) & \dots \\ (n+4) & (n+5) & (n+6) & \dots \\ \dots & \dots & \dots & \dots \\ \dots & \dots & \dots & \dots \end{bmatrix}$$

This function is useful to define symmetric matrix variables. `n` is the number of decision variables.

**See Also** `decinfo`

---


<b>Purpose</b>	Build interconnections of certain and uncertain matrices and systems
<b>Syntax</b>	<code>sysout = sysic</code>
<b>Description</b>	<p><code>sysic</code> requires that 3 variables with fixed names be present in the calling workspace: <code>systemnames</code>, <code>inputvar</code> and <code>outputvar</code>.</p> <p><code>systemnames</code> is a char containing the names of the subsystems (<code>double</code>, <code>tf</code>, <code>zpk</code>, <code>ss</code>, <code>uss</code>, <code>frd</code>, <code>ufrd</code>, etc) that make up the interconnection. The names must be separated by spaces with no additional punctuation. Each named variable must exist in the calling workspace.</p> <p><code>inputvar</code> is a char, defining the names of the external inputs to the interconnection. The names are separated by semicolons, and the entire list is enclosed in square brackets [ ]. Inputs can be scalar or multivariate. For instance, a 3-component (x, y, z) force input can be specified with 3 separate names, <code>Fx</code>, <code>Fy</code>, <code>Fz</code>. Alternatively, a single name with a defined integer dimension can be specified, as in <code>F{3}</code>. The order of names in <code>inputvar</code> determines the order of inputs in the interconnection.</p> <p><code>outputvar</code> is a char, describing the outputs of the interconnection. Outputs do not have names—they are simply linear combinations of individual subsystem's outputs and external inputs. Semicolons delineate separate components of the interconnections outputs. Between semicolons, signals can be added and subtracted, and multiplied by scalars. For multivariable subsystems, arguments within parentheses specify which subsystem outputs are to be used and in what order. For instance, <code>plant(2:4, 1, 9:11)</code> specifies outputs 2, 3, 4, 1, 9, 10, 11 from the subsystem <code>plant</code>. If a subsystem is listed in <code>outputvar</code> without arguments, then all outputs from that subsystem are used.</p> <p><code>sysic</code> also requires that for every subsystem name listed in <code>systemnames</code>, a corresponding variable, <code>input_to_ListedSubSystemName</code> must exist in the calling workspace. This variable is similar to <code>outputvar</code> – it defines the input signals to this particular subsystem as linear combinations of individual subsystem's outputs and external inputs.</p>

`sysout = sysic` will perform the interconnection described by the variables above, using the subsystem data in the names found in `systemnames`. The resulting interconnection is returned in the output argument, listed above as `sysout`.


After running `sysic` the variables `systemnames`, `inputvar`, `outputvar` and all of the `input_to_ListedSubSystemName` will exist in the workspace. Setting the optional variable `cleanupsysic` to 'yes' will cause these variables to be removed from the workspace after `sysic` has formed the interconnection.

## Examples

A simple system interconnection, identical to the system illustrated in the `iconnect` description. Consider a three-input, two-output LTI matrix  $T$ ,

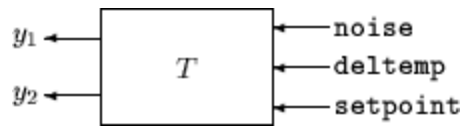

which has internal structure

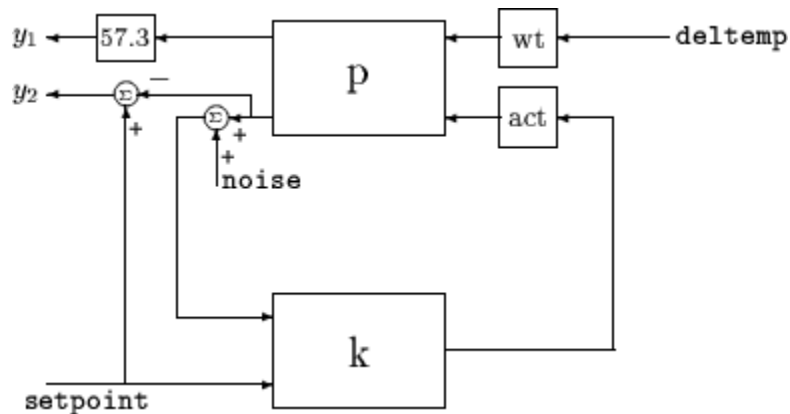

```
P = rss(3,2,2);
K = rss(1,1,2);
```

```
A = rss(1,1,1);
W = rss(1,1,1);
systemnames = 'W A K P';
inputvar = '[noise;deltemp;setpoint]';
outputvar = '[57.3*P(1);setpoint-P(2)]';
input_to_W = '[deltemp]';
input_to_A = '[K]';
input_to_K = '[P(2)+noise;setpoint]';
input_to_P = '[W;A]';
cleanup_sysic = `yes`;
T = sysic;
exist(`inputvar`)
```

## Limitations

The syntax of `sysic` is limited, and for the most part is restricted to what is shown here. The `iconnect` interconnection object can also be used to define complex interconnections, and has a more flexible syntax.

Within `sysic`, error-checking routines monitor the consistency and availability of the subsystems and their inputs. These routines provide a basic level of error detection to aid the user in debugging.

## See Also

`iconnect`

**Purpose** Tune fixed-structure control systems

**Syntax**

```
[CL,fSoft] = sysstune(CLO,SoftReqs)
[CL,fSoft,gHard] = sysstune(CLO,SoftReqs,HardReqs)
[CL,fSoft,gHard] = sysstune(CLO,SoftReqs,HardReqs,options)
[CL,fSoft,gHard,info] = sysstune( ___ )
```

**Description** [CL,fSoft] = sysstune(CLO,SoftReqs) tunes the free parameters of the control system model, CLO, to best meet the soft tuning requirements. The best achieved soft constraint values are returned as fSoft.

---

**Note** For tuning Simulink models with sysstune, use s1Tuner to create an interface to your Simulink model. You can then tune the control system with sysstune for s1Tuner (requires Simulink Control Design).

---

[CL,fSoft,gHard] = sysstune(CLO,SoftReqs,HardReqs) tunes the control system to best meet the soft tuning requirements subject to satisfying the hard tuning requirements (constraints). It returns the best achieved values for the soft and hard constraints.

[CL,fSoft,gHard] = sysstune(CLO,SoftReqs,HardReqs,options) specifies options for the optimization.

[CL,fSoft,gHard,info] = sysstune( \_\_\_ ) also returns detailed information about each optimization run. All input arguments described for the previous syntaxes also apply here.

## Input Arguments

**CLO - Control system to tune**  
generalized state-space model | model array

Control system to tune, specified as a generalized state-space (genss) model or array of models with tunable parameters. To construct CLO:



- 1 Parameterize the tunable elements of your control system. You can use predefined structures, such as `ltiblock.pid`, `ltiblock.gain`, and `ltiblock.tf`. Alternatively, you can create your own structure from elementary tunable parameters (`realp`).
- 2 Build a closed-loop model of the overall control system as an interconnection of fixed and tunable components. To do so Use model interconnection commands such as `feedback` and `connect`. Use `loopswitch` blocks to mark optional loop-opening locations for specifying and assessing open-loop requirements.

Specify an array of tunable gens models that have the same tunable parameters for robust tuning of a controller against a set of plant models.

### **SoftReqs - Soft tuning requirements (objectives)**

vector of `TuningGoal` requirement objects

Soft tuning requirements (objectives) for tuning the control system, specified as a vector of `TuningGoal` requirement objects, such as `TuningGoal.Tracking`, `TuningGoal.StepResp`, or `TuningGoal.Margins`

`systeme` tunes the tunable parameters of the control system to minimize the soft tuning requirements. This tuning is subject to satisfying the hard tuning requirements (if any).

### **HardReqs - Hard tuning requirements (constraints)**

[ ] (default) | vector of `TuningGoal` requirement objects

Hard tuning requirements (constraints) for tuning the control system, specified as a vector of `TuningGoal` requirement objects, such as `TuningGoal.Tracking`, `TuningGoal.StepResp`, or `TuningGoal.Margins`.

`systeme` converts each hard tuning requirement to a normalized scalar value. `systeme` then optimizes the free parameters minimize those normalized values. A hard requirement is satisfied if the normalized value is less than 1.

## Output Arguments

### **options - Options for tuning algorithm**

`systemeOptions` object

Options for the tuning algorithm, specified as an options set you create with `systemeOptions`. Available options include:

- Number of additional optimizations to run. Each optimization starts from random initial values of the free parameters.
- Tolerance for terminating the optimization.
- Flag for using parallel processing.

### **CL - Tuned control system**

generalized state-space model

Tuned control system, returned as a generalized state-space (`genss`) model. This model has the same number and type of tunable elements (Control Design Blocks) as `CL0`. The current values of these elements are the tuned parameters. Use `getBlockValue` or `showTunable` to access values of the tuned elements.

If you provide an array of control system models to tune as the input argument, `CL0`, `systeme` tunes the parameters of all the models simultaneously. In this case, `CL` is an array of tuned `genss` models. For more information, see “Tune Controller Against Set of Plant Models”.

### **fSoft - Best achieved soft constraint values**

vector

Best achieved soft constraint values, returned as a vector. `systeme` converts the soft requirements to a function of the free parameters of the control system. The command then tunes the parameters to minimize that function subject to the hard constraints. (See “Algorithms” on page 2-431.) `fSoft` contains the best achieved value for each of the soft constraints. These values appear in `fSoft` in the same order that the constraints are specified in `SoftReqs`. `fSoft` values are meaningful only when the hard constraints are satisfied.

### **gHard - Best achieved hard constraint values**

vector

Best achieved hard constraint values, returned as a vector. `systeme` converts the hard requirements to a function of the free parameters of the control system. The command then tunes the parameters to drive those values below 1. (See “Algorithms” on page 2-431.) `gHard` contains the best achieved value for each of the hard constraints. These values appear in `gHard` in the same order that the constraints are specified in `HardReqs`. If all values are less than 1, then the hard constraints are satisfied.

### **info - Detailed information about optimization runs**

structure

Detailed information about each optimization run, returned as a data structure. In addition to examining detailed results of the optimization, you can use `info` as an input to `viewSpec` when validating a tuned MIMO system. `info` contains scaling data that `viewSpec` needs for correct evaluation of MIMO open-loop requirements such as loop shapes and stability margins.

The fields of `info` are:

#### **Run - Run number**

scalar

Run number, returned as a scalar. If you use the `RandomStart` option of `systemeOptions` to perform multiple optimization runs, `info` is a struct array, and `info.Run` is the index.

#### **Iterations - Total number of iterations**

scalar

Total number of iterations performed during run, returned as a scalar. This value is the number of iterations performed in each run before the optimization terminates.

#### **fBest - Best overall soft constraint value**

scalar

Best overall soft constraint value, returned as a scalar. `systeme` converts the soft requirements to a function of the free parameters of the control system. The command then tunes the parameters to minimize that function subject to the hard constraints. (See “Algorithms” on page 2-431.) `info.fBest` is the maximum soft constraint value at the final iteration. This value is meaningful only when the hard constraints are satisfied.

### **gBest - Best overall hard constraint value**

scalar

Best overall hard constraint value, returned as a scalar. `systeme` converts the hard requirements to a function of the free parameters of the control system. The command then tunes the parameters to drive those values below 1. (See “Algorithms” on page 2-431.) `info.gBest` is the maximum hard constraint value at the final iteration. This value must be less than 1 for the hard constraints to be satisfied.

### **fSoft - Individual soft constraint values**

vector

Individual soft constraint values, returned as a vector. `systeme` converts each soft requirement to a normalized value that is a function of the free parameters of the control system. The command then tunes the parameters to minimize that value subject to the hard constraints. (See “Algorithms” on page 2-431.) `info.fSoft` contains the individual values of the soft constraints at the end of each run. These values appear in `fSoft` in the same order that the constraints are specified in `SoftReqs`.

### **gHard - Individual hard constraint values**

vector

Individual hard constraint values, returned as a vector. `systeme` converts each hard requirement to a normalized value that is a function of the free parameters of the control system. The command then tunes the parameters to minimize those values. A hard requirement is satisfied if its value is less than 1. (See “Algorithms” on page 2-431.) `info.gHard` contains the individual values of the hard constraints at

the end of each run. These values appear in `gHard` in the same order that the constraints are specified in `HardReqs`.

### **MinDecay - Minimum decay rate of closed-loop poles**

vector

Minimum decay rate of closed-loop poles, returned as a vector.

By default, closed-loop pole locations of the tuned system are constrained to satisfy  $\text{Re}(p) < -10^{-7}$ . Use the `MinDecay` option of `systuneOptions` to change this constraint.

### **Blocks - Tuned values of tunable blocks and parameters**

structure

Tuned values of tunable blocks and parameters in the tuned control system, `CL`, returned as a structure. You can also use `getBlockValue` or `showBlockValue` to access the tuned parameter values.

### **LoopScaling - Optimal diagonal scaling for MIMO tuning requirements**

state-space model

Optimal diagonal scaling for evaluating MIMO tuning requirements, returned as a state-space model.

When applied to multiloop control systems, `TuningGoal.LoopShape` and `TuningGoal.Margins` can be sensitive to the scaling of the loop transfer functions to which they apply. This sensitivity can lead to poor optimization results. `systune` automatically corrects scaling issues and returns the optimal diagonal scaling matrix `d` as a state-space model in `info.LoopScaling`.


The loop channels associated with each diagonal entry of `D` are listed in `info.LoopScaling.InputName`. The scaled loop transfer is  $D \backslash L * D$ , where `L` is the open-loop transfer measured at the locations `info.LoopScaling.InputName`.

## Examples

### Tune Control System to Soft Requirements

Tune a cascaded control system to meet requirements of reference tracking and disturbance rejection.

The cascaded control system of the following illustration includes two tunable controllers, the PI controller for the inner loop,  $C_2$ , and the PID controller for the outer loop,  $C_1$ .

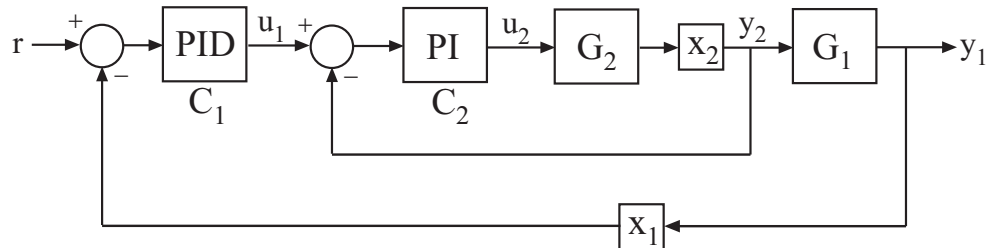

$x_1$  and  $x_2$  mark optional loop opening locations, where loops can be opened or signals injected for the purpose of specifying requirements for tuning the system.

Tune the free parameters of this control system to meet the following requirements:

- The output signal,  $y_1$ , tracks the reference signal,  $r$ , with a response time of 10 seconds and a steady-state error of 1%.
- A disturbance injected at  $x_2$  is suppressed at  $y_1$  by a factor of 10.

Create tunable Control Design Blocks to represent the controllers, and numeric LTI models to represent the plants. Also, create switch blocks to represent the loop opening locations.

```
G2 = zpk([], -2, 3);
G1 = zpk([], [-1 -1 -1], 10);

C20 = ltiblock.pid('C2', 'pi');
C10 = ltiblock.pid('C1', 'pid');

X1 = loopswitch('X1');
```

```
X2 = loopswitch('X2');
```

The loopswitch blocks represent optional loop-opening locations that are closed by default. You can also use these locations to specify input or output signals for tuning requirements.

Connect these components to build a model of the entire closed-loop control system.

```
InnerLoop = feedback(X2*G2*C20,1);
CLO = feedback(G1*InnerLoop*C10,X1);
CLO.InputName = 'r';
CLO.OutputName = 'y';
```

CLO is a tunable genss model. Specifying names for the input and output channels allows you to identify them when you specify tuning requirements for the system.

Specify tuning requirements for reference tracking and disturbance rejection.

```
Rtrack = TuningGoal.Tracking('r','y',10,0.01);
Rreject = TuningGoal.Gain('X2','y',0.1);
```

The TuningGoal.Tracking requirement specifies that the signal at 'y' track the signal at 'r' with a response time of 10 seconds and a tracking error of 1%.

The TuningGoal.Gain requirement limits the gain from the implicit input associated with the loopswitch block, X2, to 'y'. Limiting this gain to a value less than 1 ensures that a disturbance injected at X2 is suppressed at the output.

Tune the control system.

```
[CL,fSoft] = systune(CLO,[Rtrack,Rreject]);
```

```
Final: Soft = 1.24, Hard = -Inf, Iterations = 109
```


`systeme` converts each tuning requirement into a normalized scalar value,  $f$ . The command adjusts the tunable parameters of `CL0` to minimize the  $f$  values. For each requirement, the requirement is satisfied if  $f < 1$  and violated if  $f > 1$ . `fSoft` is the vector of minimized  $f$  values. The largest of the minimized  $f$  values is displayed as `Soft`.

The output model `CL` is the tuned version of `CL0`. `CL` contains the same Control Design Blocks as `CL0`, with current values equal to the tuned parameter values.

Validate that the tuned control system meets the tracking requirement by examining the step response from 'r' to 'y'.

```
stepplot(CL)
```




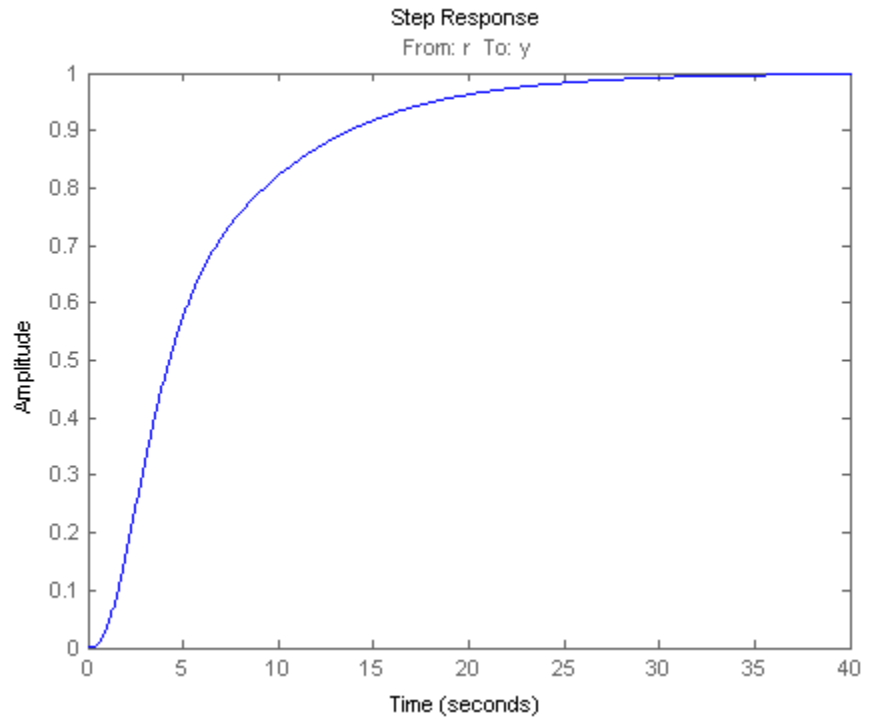

The step plot shows that in the tuned control system, CL, the output tracks the input with approximately the desired response time.

Validate the tuned system against the disturbance rejection requirement by examining the closed-loop response to a signal injected at X2.


```
CLdist = getIOTransfer(CL, 'X2', 'y');
stepplot(CLdist);
```

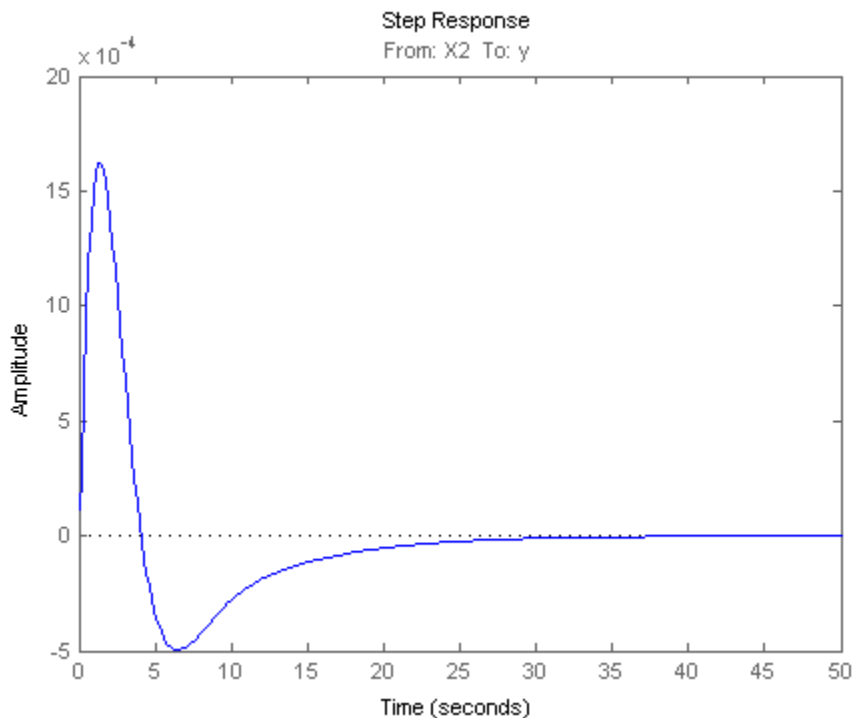

`getIOTransfer` extracts the closed-loop response from the specified inputs to outputs. In general, `getIOTransfer` and `getLoopTransfer` are useful for validating a control system tuned with `systeme`.

You can also use `viewSpec` to compare the responses of the tuned control system directly against the tuning requirements, `Rtrack` and `Rreject`.


```
viewSpec([Rtrack,Rreject],CL)
```

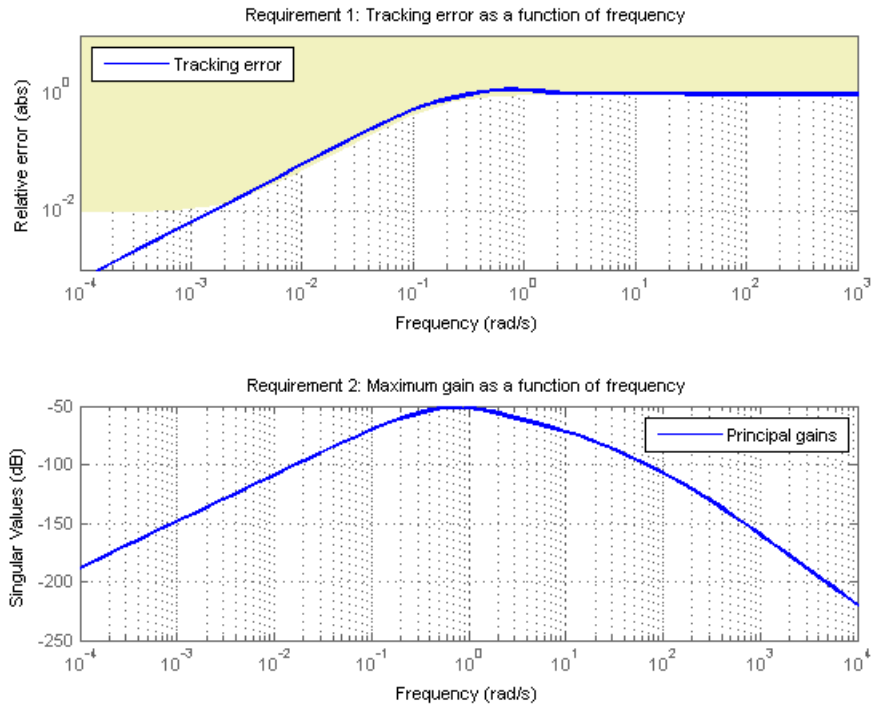

### Tune Control System to Both Hard and Soft Requirements

Tune a cascaded control system to meet requirements of reference tracking and disturbance rejection. These requirements are subject to a hard constraint on the stability margins of the inner and outer loops.

The cascaded control system of the following illustration includes two tunable controllers, the PI controller for the inner loop,  $C_2$ , and the PID controller for the outer loop,  $C_1$ .

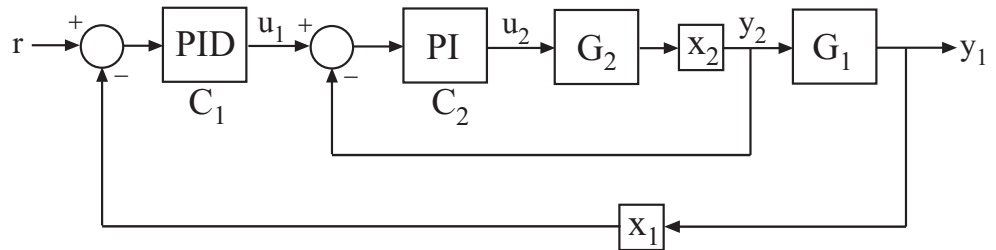

$x_1$  and  $x_2$  mark optional loop opening locations. These locations indicate where you can open loops or inject signals for the purpose of specifying requirements for tuning the system.

Tune the free parameters of this control system to meet the following requirements:

- The output signal,  $y_1$ , tracks the reference signal at  $r$  with a response time of 10 seconds and a steady-state error of 1%.
- A disturbance injected at  $x_2$  is suppressed at the output,  $y_1$ , by a factor of 10.

Impose these tuning requirements subject to hard constraints on the stability margins of both loops.

Create tunable Control Design Blocks to represent the controllers and numeric LTI models to represent the plants. Also, create switch blocks to represent the loop opening locations.

```
G2 = zpke([], -2, 3);
G1 = zpke([], [-1 -1 -1], 10);

C20 = ltiblock.pid('C2', 'pi');
C10 = ltiblock.pid('C1', 'pid');

X1 = loopswitch('X1');
X2 = loopswitch('X2');
```

The loopswitch blocks represent optional loop-opening locations that are closed by default. You can also use these locations to specify input or output signals for tuning requirements.

Connect these components to build a model of the entire closed-loop control system.

```
InnerLoop = feedback(X2*G2*C20,1);
CLO = feedback(G1*InnerLoop*C10,X1);
CLO.InputName = 'r';
CLO.OutputName = 'y';
```

CLO is a tunable `genss` model. Specifying names for the input and output channels allows you to identify them when you specify tuning requirements for the system.

Specify tuning requirements for reference tracking and disturbance rejection.

```
Rtrack = TuningGoal.Tracking('r','y',10,0.01);
Rreject = TuningGoal.Gain('X2','y',0.1);
```

The `TuningGoal.Tracking` requirement specifies that the signal at 'y' tracks the signal at 'r' with a response time of 10 seconds and a tracking error of 1%.

The `TuningGoal.Gain` requirement limits the gain from the implicit input associated with the loopswitch block X2 to the output, 'y'. Limiting this gain to a value less than 1 ensures that a disturbance injected at X2 is suppressed at the output.

Specify tuning requirements for the gain and phase margins.

```
RmargOut = TuningGoal.Margins('X1',18,60);
RmargIn = TuningGoal.Margins('X2',18,60);
RmargIn.Openings = 'X1';
```

`RmargOut` imposes a minimum gain margin of 18 dB and a minimum phase margin of 60 degrees. Specifying X1 imposes that requirement on

the outer loop. Similarly, `RmargIn` imposes the same requirements on the inner loop, identified by `X2`. To ensure that the inner loop margins are evaluated with the outer loop open, include the outer loop-opening location, `X1`, in `RmargIn.Openings`.

Tune the control system to meet the soft requirements of tracking and disturbance rejection, subject to the hard constraints of the stability margins.

```
SoftReqs = [Rtrack,Rreject];  
HardReqs = [RmargIn,RmargOut];  
[CL,fSoft,gHard] = systune(CLO,SoftReqs,HardReqs);
```



```
Final: Soft = 1.71, Hard = 0.9998, Iterations = 208
```

`systune` converts each tuning requirement into a normalized scalar value,  $f$  for the soft constraints and  $g$  for the hard constraints. The command adjusts the tunable parameters of `CLO` to minimize the  $f$  values, subject to the constraint that each  $g < 1$ .

The displayed value `Hard` is the largest of the minimized  $g$  values in `gHard`. This value is less than 1, indicating that both the hard constraints are satisfied.

Validate the tuned control system against the stability margin requirements.


```
viewSpec(HardReqs,CL)
```

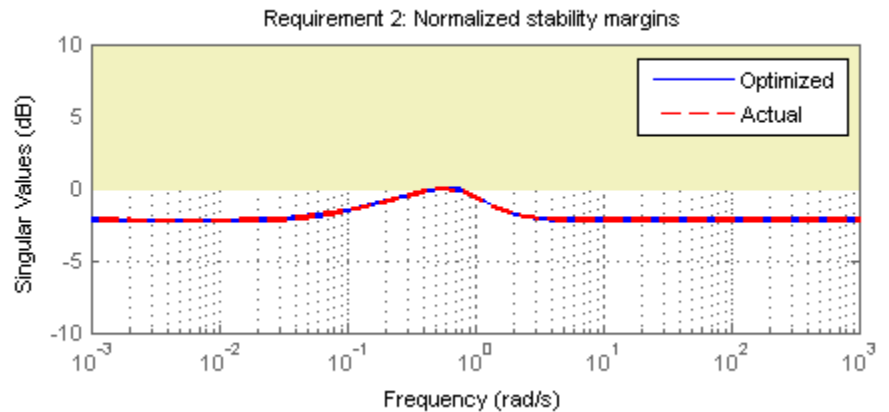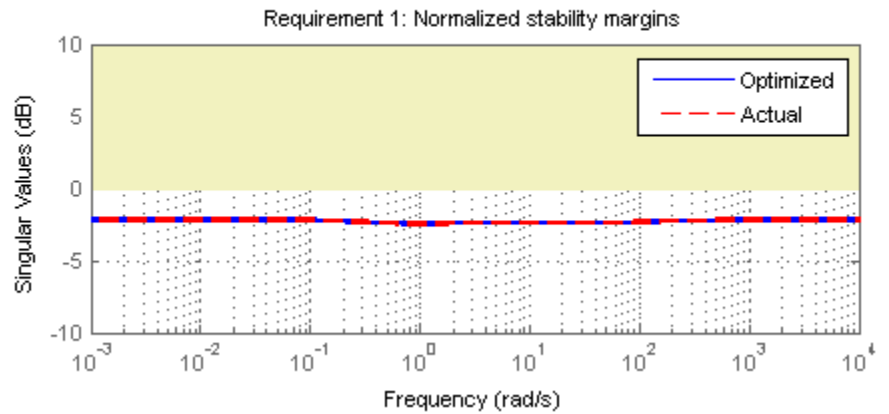

The viewSpec plot confirms that the stability margin requirements for both loops are satisfied by the tuned control system at all frequencies. The red lines represent the actual stability margins of the tuned system. The blue lines represent the margin used in the optimization calculation, which is an upper bound on the actual margin.

Examine whether the tuned control system meets the tracking requirement by examining the step response from 'r' to 'y'.

```
stepplot(CL)
```

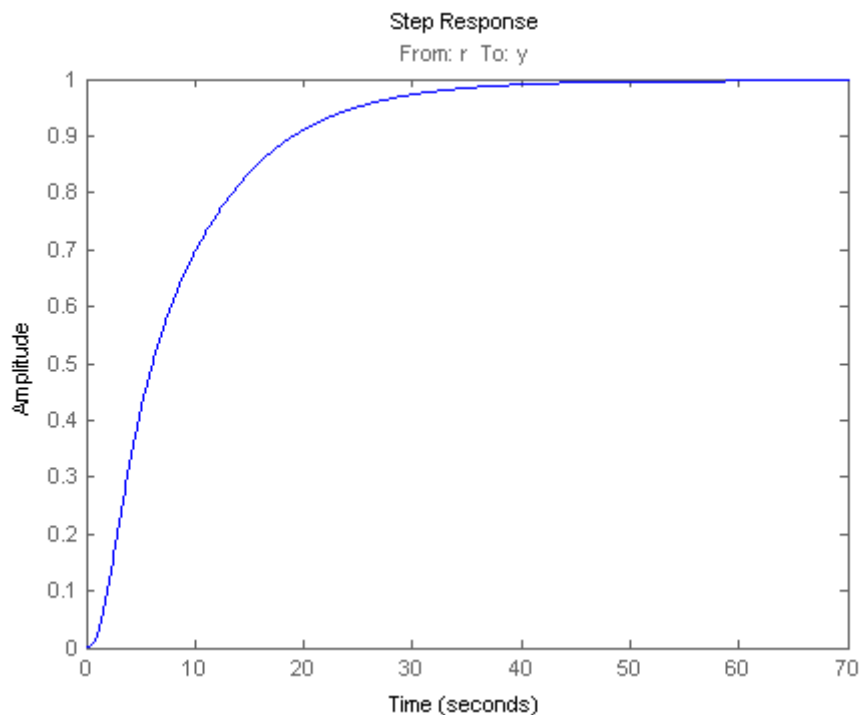

The step plot shows that in the tuned control system, CL, the output tracks the input but the response is somewhat slower than desired. Thus, the tuned control system cannot meet the soft requirement of a fast response time subject to the hard constraints of the stability margins. To achieve the desired performance, you may need to relax one of your requirements or convert one or more hard constraints to soft constraints.



## Algorithms

$x$  is the vector of tunable parameters in the control system to tune. `systune` converts each soft and hard tuning requirement `SoftReqs(i)` and `HardReqs(j)` into normalized values  $f_i(x)$  and  $g_j(x)$ , respectively. `systune` then solves the minimization problem:

Minimize  $\max_i f_i(x)$  subject to  $\max_j g_j(x) < 1$ , for  $x_{\min} < x < x_{\max}$ .

$x_{\min}$  and  $x_{\max}$  are the minimum and maximum values of the free parameters of the control system.

`systune` returns the control system with parameters tuned to the values that best solve the minimization problem. `systune` also returns the best achieved values of  $f_i(x)$  and  $g_j(x)$ , as `fSoft` and `gHard` respectively.

For information about the functions  $f_i(x)$  and  $g_j(x)$  for each type of constraint, see the reference pages for each `TuningGoal` requirement object.

`systune` uses the nonsmooth optimization algorithms described in [1].

`systune` computes the  $H_\infty$  norm using the algorithm of [2] and structure-preserving eigensolvers from the SLICOT library. For more information about the SLICOT library, see <http://slicot.org>.

## References

[1] Apkarian, P. and D. Noll, "Nonsmooth H-infinity Synthesis." *IEEE Transactions on Automatic Control*, Vol. 51, No. 1, (2006), pp. 71–86.

[2] Bruisma, N.A. and M. Steinbuch, "A Fast Algorithm to Compute the  $H_\infty$ -Norm of a Transfer Function Matrix," *System Control Letters*, Vol. 14, No. 4 (1990), pp. 287–293.

## See Also

`systuneOptions` | `viewSpec` | `genss` | `s1Tuner` | `systune` (for `s1Tuner`) | `looptune` | `looptune` (for `s1Tuner`) | `loopswitch` | `TuningGoal.Tracking` | `TuningGoal.Gain` | `TuningGoal.Margins`

## **Related Examples**

- “Tuning Control Systems with SYSTUNE”
- “Building Tunable Models”

## **Concepts**

- “Programmatic Control System Tuning”
- “Generalized Models”

## Purpose

Set options for systune

## Syntax

```
options = systuneOptions  
options = systuneOptions(Name,Value)
```

## Description

`options = systuneOptions` returns the default option set for the `systune` command.

`options = systuneOptions(Name,Value)` creates an option set with the options specified by one or more `Name,Value` pair arguments.

## Input Arguments

### Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name,Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

`systuneOptions` takes the following `Name` arguments:

### 'Display'

Amount of information to display during `systune` runs.

`Display` takes the following values:

- 'final' — Display a one-line summary at the end of each optimization run. The display includes the best achieved values for the soft and hard constraints, `fSoft` and `gHard`. The display also includes the number of iterations for each run.
- 'sub' — Display the result of each optimization subproblem.

When you designate some design goals as hard goals, the software divides the optimization into subproblems. First, the software attempts to satisfy the hard goals. Then, it attempts to minimize the soft goals, subject to remaining in a parameter-space region in which the hard goals are satisfied. When you select 'sub', the report includes the results of each of these subproblems.

- 'iter' — Display optimization progress after each iteration. The display includes the value after each iteration of the objective parameter being minimized. The objective parameter is whichever is larger of the hard constraints or the scaled soft constraints. The display also includes a progress value that indicates the percent change in the constraints from the previous iteration.
- 'off' — Run in silent mode, displaying no information during or after the run.

**Default:** 'final'

### **'MaxIter'**

Maximum number of iterations in each optimization run, when the run does not converge to within tolerance.

**Default:** 300

### **'RandomStart'**

Number of additional optimizations starting from random values of the free parameters in the controller.

If `RandomStart = 0`, `systeme` performs a single optimization run starting from the initial values of the tunable parameters. Setting `RandomStart = N > 0` runs  $N$  additional optimizations starting from  $N$  randomly generated parameter values.

`systeme` tunes by finding a local minimum of a gain minimization problem. To increase the likelihood of finding parameter values that meet your design requirements, set `RandomStart > 0`. You can then use the best design that results from the multiple optimization runs.

Use with `UseParallel = true` to distribute independent optimization runs among MATLAB workers (requires Parallel Computing Toolbox software).

**Default:** 0

## **'UseParallel'**

Parallel processing flag.

Set to `true` to enable parallel processing by distributing randomized starts among workers in a parallel pool. If there is an available parallel pool, then the software performs independent optimization runs concurrently among workers in that pool. If no parallel pool is available, one of the following occurs:

- If **Automatically create a parallel pool** is selected in your Parallel Computing Toolbox preferences, then the software starts a parallel pool using the settings in those preferences.
- If **Automatically create a parallel pool** is not selected in your preferences, then the software performs the optimization runs successively, without parallel processing.

If **Automatically create a parallel pool** is not selected in your preferences, you can manually start a parallel pool using `parpool` before running the tuning command.

Using parallel processing requires Parallel Computing Toolbox software.

**Default:** `false`

## **'SoftTarget'**

Target value for soft constraints.

The optimization stops when the largest soft constraint value falls below the specified `SoftTarget` value. The default value `SoftTarget = 0` minimizes the soft constraints subject to satisfying the hard constraints.

**Default:** `0`

## **'SoftTol'**

Relative tolerance for termination.

The optimization terminates when the relative decrease in the soft constraint value decreases by less than `SoftTol` over 10 consecutive iterations. Increasing `SoftTol` speeds up termination, and decreasing `SoftTol` yields tighter final values.

**Default:** 0.001

## 'SoftScale'

A priori estimate of best soft constraint value.

For problems that mix soft and hard constraints, providing a rough estimate of the optimal value of the soft constraints (subject to the hard constraints) helps to speed up the optimization.

**Default:** 1

## 'MinDecay'

Minimum decay rate for closed-loop poles.

Constrains all closed-loop pole locations  $|p|$  to satisfy  $\text{Re}(p) < -\text{MinDecay}$ . Adjust the minimum value if the optimization cannot meet the default minimum value, or if the default minimum value conflicts with other requirements. For specifying other constraints on the closed-loop pole locations, use `TuningGoal.Poles`.

**Default:** 1e-7

## Output Arguments

### **options**

Option set containing the specified options for the `systeme` command.

## Examples

### **Create Options Set for `systeme`**

Create an options set for a `systeme` run using five random restarts. Also, set the display level to show the progress of each iteration, and increase the relative tolerance of the soft constraint value to 0.01.

```
options = systemeOptions('RandomStart',5,'Display','iter',...
```

```
'SoftTol',0.01);
```

Alternatively, use dot notation to set the values of options.

```
options = systemeOptions;  
options.RandomStart = 5;  
options.Display = 'iter';  
options.SoftTol = 0.01;
```

## Configure Option Set for Parallel Optimization Runs

Configure an option set for a `systeme` run using 20 random restarts. Execute these independent optimization runs concurrently on multiple workers in a parallel pool.

If you have the Parallel Computing Toolbox software installed, you can use parallel computing to speed up `systeme` tuning of fixed-structure control systems. When you run multiple randomized `systeme` optimization starts, parallel computing speeds up tuning by distributing the optimization runs among workers.

If **Automatically create a parallel pool** is not selected in your Parallel Computing Toolbox preferences, manually start a parallel pool using `parpool`. For example:

```
parpool;
```

If **Automatically create a parallel pool** is selected in your preferences, you do not need to manually start a pool.

Create a `systemeOptions` set that specifies 20 random restarts to run in parallel.

```
options = systemeOptions('RandomStart',20,'UseParallel',true);
```

Setting `UseParallel` to `true` enables parallel processing by distributing the randomized starts among available workers in the parallel pool.

# systemOptions

---

Use the `systemOptions` set when you call `system`. For example, suppose you have already created a tunable control system model, `CLO`. For tuning this system, you have created vectors `SoftReqs` and `HardReqs` of `TuningGoal` requirements objects. These vectors represent your soft and hard constraints, respectively. In that case, the following command uses parallel computing to tune the control system of `CLO`.

```
[CL, fSoft, gHard] = system(CLO, SoftReqs, HardReqs, options);
```

## See Also

| `system` | `system` (for `sITuner`)



## Purpose

Create uncertain complex parameter

## Syntax

```
A = ucomplex('NAME',nominalvalue)
A = ucomplex('NAME',nominalvalue,'Property1',Value1,...
             'Property2',Value2,...)
```

## Description

An uncertain complex parameter is used to represent a complex number whose value is uncertain. Uncertain complex parameters have a name (the Name property), and a nominal value (the NominalValue property).

The uncertainty (potential deviation from the nominal value) is described in two different manners:

- Radius (radius of disc centered at NominalValue)
- Percentage (disc size is percentage of magnitude of NominalValue)

The Mode property determines which description remains invariant if the NominalValue is changed (the other is derived). The default Mode is 'Radius' and the default radius is 1.

Property/Value pairs can also be specified at creation. For instance,

```
B = ucomplex('B',6-j,'Percentage',25)
```

sets the nominal value to  $6 - j$ , the percentage uncertainty to 25 and, implicitly, the Mode to 'Percentage'.

## Examples

### Sample Uncertain Complex Parameter

Compute 400 random samples of an uncertain complex parameter and visualize them in a plot.

Create an uncertain complex parameter with internal name A.

```
A = ucomplex('A',4+3*j)
```


```
A =
```

Uncertain complex parameter "A" with nominal value  $4+3i$  and radius 1.

The uncertain parameter's possible values are a complex disc of radius 1, centered at  $4 + 3j$ . The value of `A.percentage` is 20 (radius is 1/5 of the magnitude of the nominal value).

You can visualize the uncertain complex parameter by sampling and plotting the data.

```
sa = usample(A,400);
w = linspace(0,2*pi,200);
circ = sin(w) + j*cos(w);
rc = real(A.NominalValue+circ);
ic = imag(A.NominalValue+circ);
plot(real(sa(:)),imag(sa(:)), 'o',rc,ic,'k-')
xlim([2.5 5.5])
ylim([1.5 4.5])
axis equal
```

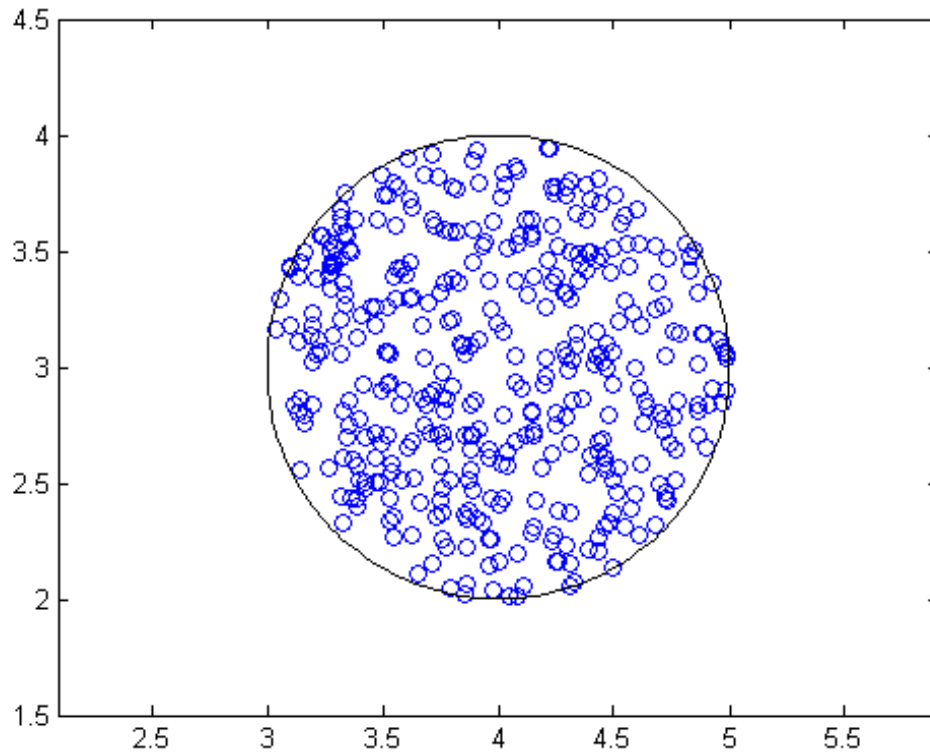

**See Also** [get](#) | [umat](#) | [ucomplexm](#) | [ultidyn](#) | [ureal](#)

# ucomplexm

---

**Purpose** Create uncertain complex matrix

**Syntax**

```
M = ucomplexm('Name',NominalValue)
M = ucomplexm('Name',NominalValue,'WL',WLvalue,'WR',WRvalue)
M = ucomplexm('Name',NominalValue,'Property',Value)
```

**Description** `M = ucomplexm('Name',NominalValue)` creates an uncertain complex matrix representing a ball of complex-valued matrices, centered at a `NominalValue` and named `Name`.

`M = ucomplexm('Name',NominalValue,'WL',WLvalue,'WR',WRvalue)` creates an uncertain complex matrix with weights `WL` and `WR`. Specifically, the values represented by `M` are all matrices `H` that satisfy  $\text{norm}(\text{inv}(M.WL) * (H - M.NominalValue) * \text{inv}(M.WR)) \leq 1$ . `WL` and `WR` are square, invertible, and weighting matrices that quantify the size and shape of the ball of matrices represented by this object. The default values for `WL` and `WR` are identity matrices of appropriate dimensions.

Trailing `Property/Value` pairs are allowed, as in

```
M = ucomplexm('NAME',nominalvalue,'P1',V1,'P2',V2,...)
```

The property `AutoSimplify` controls how expressions involving the uncertain matrix are simplified. Its default value is `'basic'`, which means elementary methods of simplification are applied as operations are completed. Other values for `AutoSimplify` are `'off'`, no simplification performed, and `'full'` which applies model-reduction-like techniques to the uncertain object.

## Examples **Sample an Uncertain Complex Matrix**

Create a `ucomplexm` with the name `F`, nominal value `[1 2 3; 4 5 6]`, and weighting matrices `WL = diag([.1 .3])`, `WR = diag([.4 .8 1.2])`.

```
F = ucomplexm('F',[1 2 3;4 5 6],'WL',diag([.1 .3]),...
             'WR',diag([.4 .8 1.2]))
```

```
F =
```

```
Uncertain complex matrix "F" with 2 rows and 3 columns.
```

Sample the difference between the uncertain matrix and its nominal value at 80 points, yielding a 2-by-3-by-80 matrix `typicaldev`.

```
typicaldev = usample(F - F.NominalValue,80);
```


Plot histograms of the deviations in the (1,1) entry and the (2,3) entry of the complex matrix.

The absolute values of the (1,1) entry and the (2,3) entry are shown by histogram plots. Typical deviations in the (1,1) entry should be about 10 times smaller than the typical deviations in the (2,3) entry.

```
subplot(2,1,1);  
td11 = squeeze(typicaldev(1,1,:));  
hist(abs(td11));  
xlim([0 .25])  
title('Sampled F(1,1) - F(1,1).NominalValue')  
subplot(2,1,2);  
td23 = squeeze(typicaldev(2,3,:));  
hist(abs(td23));  
title('Sampled F(2,3) - F(2,3).NominalValue')
```

# ucomplexm

---

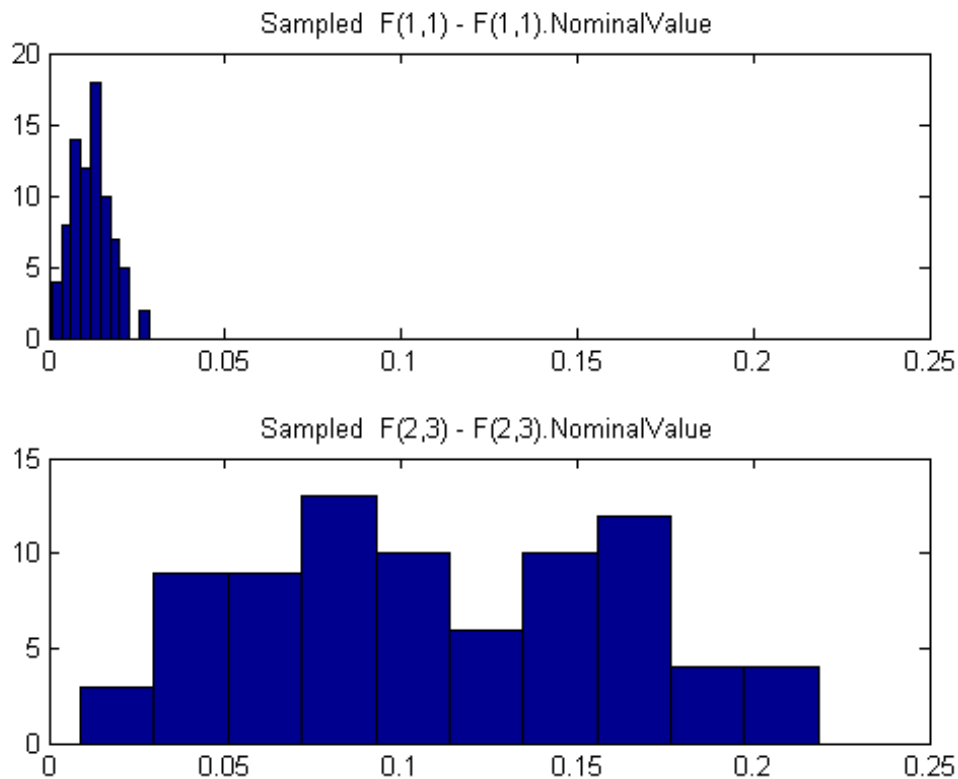

**See Also**     `get` | `umat` | `ucomplex` | `ultidyn` | `ureal`

**Purpose**

Fit an uncertain model to set of LTI responses

**Syntax**

```
usys = ucover(Parray,Pnom,ord)
usys = ucover(Parray,Pnom,ord1,ord2,utype)
[usys,info] = ucover(Parray,...)
[usys_new,info_new] = ucover(Pnom,info,ord1_new,ord2_new)
```

**Description**

`usys = ucover(Parray,Pnom,ord)` returns an uncertain model `usys` with nominal value `Pnom` and whose range of behaviors includes all responses in the LTI array `Parray`. The uncertain model structure is of the form  $usys = Pnom(1 + W(s)\Delta(s))$ , where

- $\Delta$  is an ultidyn object that represents uncertain dynamics with unit peak gain.
- $W$  is a stable, minimum-phase shaping filter that adjusts the amount of uncertainty at each frequency.

`ord` is the number of states (order) of  $W$ . `Pnom` and `Parray` can be `ss`, `tf`, `zpk`, or `zpk` models. `usys` is of class `ufrd` when `Pnom` is an `frd` model and is an `uss` model otherwise.

`usys = ucover(Parray,Pnom,ord1,ord2,utype)` specifies the order `ord1` and `ord2` of each diagonal entry of  $W1$  and  $W2$ , where  $W1$  and  $W2$  are diagonal, stable, minimum-phase shaping filters. `utype` specifies the uncertain model structure, as described in “Uncertain Model Structures” on page 2-446, and can be `'InputMult'` (default), `'OutputMult'` or `'Additive'`. `ord1` and `ord2` can be:

- `[]`, which implies that the corresponding filter is 1.
- Scalar, which implies that the corresponding filter is scalar-valued.
- Vectors with as many entries as diagonal entries in  $W1$  and  $W2$ .

`[usys,info] = ucover(Parray,...)` returns a structure `info` that contains optimization information. `info.W1opt` and `Info.W2opt` contain the values of  $W1$  and  $W2$  computed on a frequency grid and `info.W1` and `info.W2` contain the fitted shaping filters  $W1$  and  $W2$ .


`[usys_new,info_new] = ucover(Pnom,info,ord1_new,ord2_new)`  
improves the fit using initial filter values in `info` and new orders `ord1_new` and `ord2_new` of  $W_1$  and  $W_2$ . This syntax speeds up command execution by reusing previously computed information. Use this syntax when you are changing filter orders in an iterative workflow.

## Definitions

### Uncertain Model Structures

When fitting the responses of LTI models in `Parray`, the gaps between `Parray` and the nominal response `Pnom` of the uncertain model are modeled as uncertainty on the system dynamics. To model the frequency distribution of these unmodeled dynamics, `ucover` measures the gap between `Pnom` and `Parray` at each frequency and selects a shaping filter  $W$  whose magnitude approximates the maximum gap between `Pnom` and `Parray`. The following figure shows the relative gap between the nominal response and six LTI responses, enveloped using a second-order shaping filter.



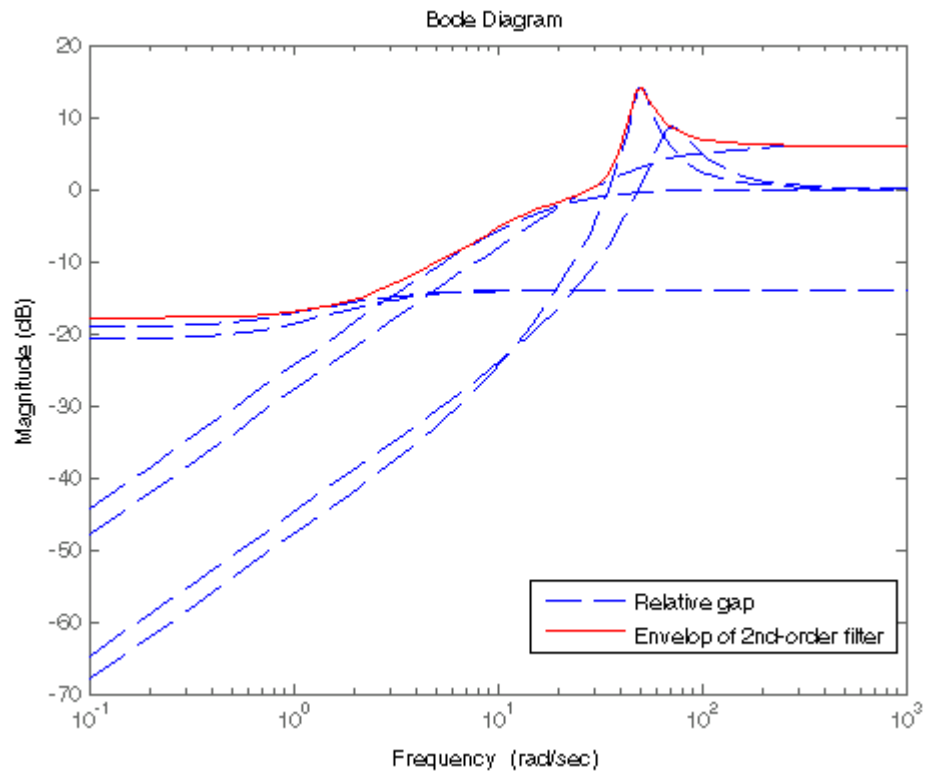

The software then sets the uncertainty to  $W \cdot \Delta$ , where  $\Delta$  is an ultidyn object that represents unit-gain uncertain dynamics. This ensures that the amount of uncertainty at each frequency is specified by the magnitude of  $W$  and therefore closely tracks the gap between  $Pnom$  and  $Parray$ .

There are three possible uncertainty model structures:

- Input Multiplicative of the form  $usys = Pnom \times (I + W_1 \times \Delta \times W_2)$ .
- Output Multiplicative of the form  $usys = (I + W1 \times \Delta \times W2) \times Pnom$ .
- Additive of the form  $usys = Pnom + W1 \times \Delta \times W_2$ .

Use additive uncertainty to model the absolute gaps between Pnom and Parray, and multiplicative uncertainty to model relative gaps.

---

**Note** For SISO models, input and output multiplicative uncertainty are equivalent. For MIMO systems with more outputs than inputs, the input multiplicative structure may be too restrictive and not adequately cover the range of models.

---

The model structure  $usys = Pnom \times (I + W \times \Delta)$  that you obtain using `usys = ucover(Parray,Pnom,ord)`, corresponds to  $W_1 = W \times I$  and  $W_2 = 1$ .

## Examples

### Fit Uncertain Model to Array of LTI Responses

Fit an uncertain model to an array of LTI responses. The responses might be, for example, the results of multiple runs of acquisition of frequency response data from a physical system.

For the purpose of this example, generate the frequency response data by creating an array of LTI models and sampling the frequency response of those models.


```
Pnom = tf(2,[1 -2]);
p1 = Pnom*tf(1,[.06 1]);
p2 = Pnom*tf([-0.02 1],[.02 1]);
p3 = Pnom*tf(50^2,[1 2*.1*50 50^2]);
array = stack(1,p1,p2,p3);
Parray = frd(array,logspace(-1,3,60));
```

The frequency response data in Parray represents three separate data acquisition experiments on the system.

Plot relative errors between the nominal plant response and the three models in the LTI array.

```
relerr = (Pnom-Parray)/Pnom;
```

bodemag(reIerr)

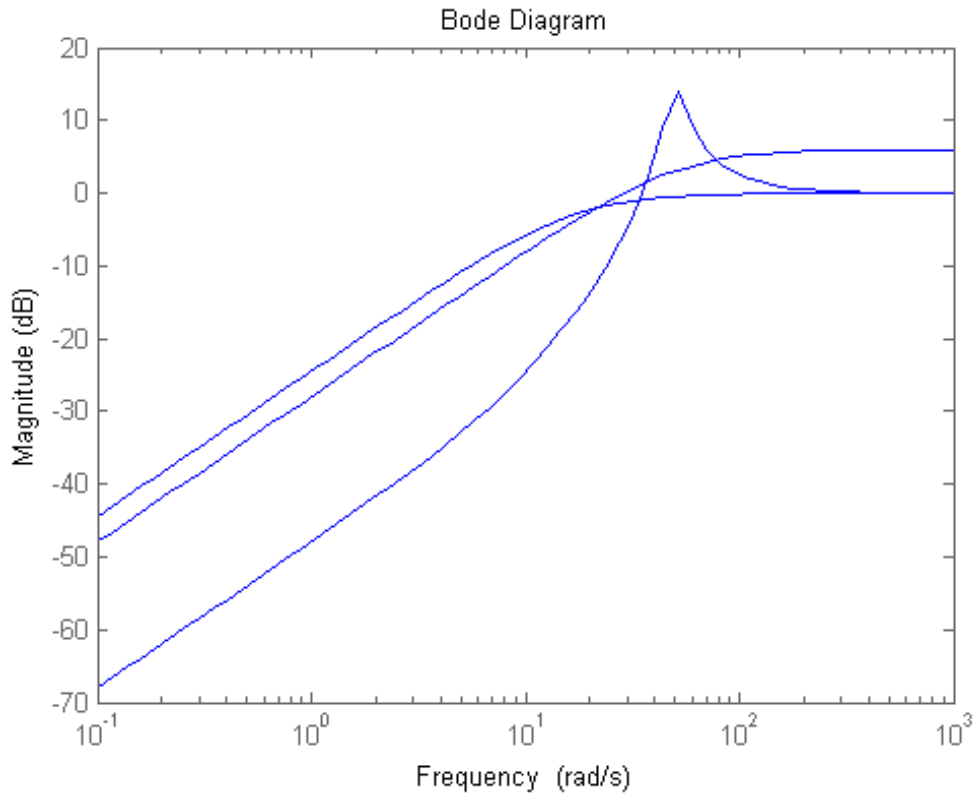


If you use a multiplicative uncertainty model structure, the magnitude of the shaping filter should fit the maximum relative errors at each frequency.

Try a 1st-order shaping filter to fit the maximum relative errors.

```
[P,Info] = ucover(Parray,Pnom,1);
```

Plot the response to see how well the shaping filter fits the relative errors.

```
bodemag(reIerr, 'b--', Info.W1, 'r', {0.1, 1000});
```

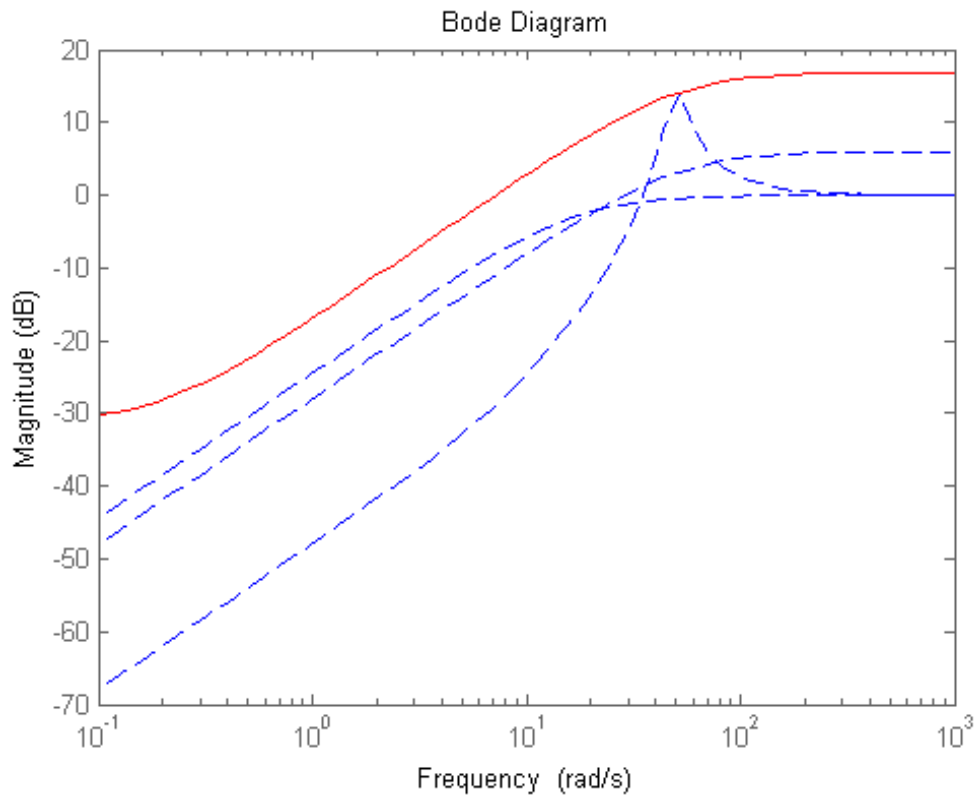


The plot shows that the filter W1 is too conservative and exceeds the maximum relative error at most frequencies. To obtain a tighter fit, rerun the function using a 4th-order filter.

```
[P,Info] = ucover(Parray,Pnom,4);
```

Evaluate the fit by plotting the Bode magnitude plot.

```
bodemag(reIerr, 'b--', Info.W1, 'r', {0.1, 1000});
```

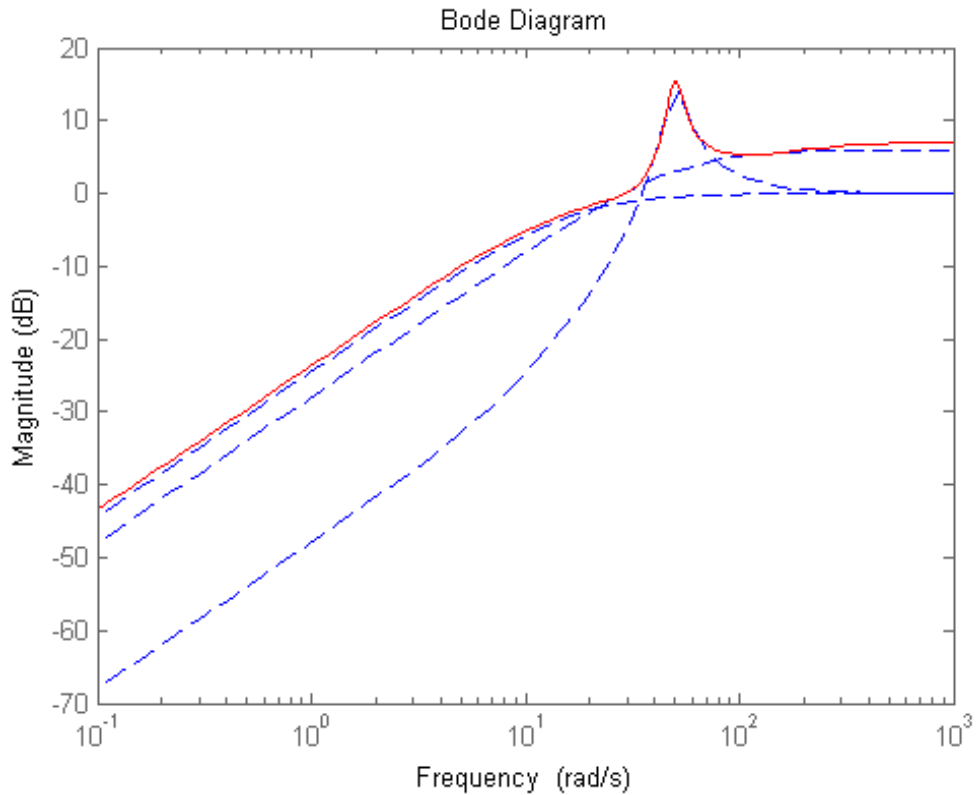

This plot shows that for the 4th-order filter, the magnitude of  $W_1$  closely matches the minimum uncertainty amount.

**Algorithms**

The ucover command designs the minimum-phase shaping filters  $W_1$  and  $W_2$  in two steps:

- 1 Computes the optimal values of  $W_1$  and  $W_2$  on a frequency grid.
- 2 Fits  $W_1$  and  $W_2$  values with the dynamic filters of the specified orders using the `fitmagfrd` command.

## Tutorials

- Modeling a Family of Responses as an Uncertain System
- Simultaneous Stabilization Using Robust Control
- First-Cut Robust Design

## See Also

`ss` | `tf` | `zpk` | `frd` | `usample`

**Purpose** Create unstructured uncertain dynamic system object

**Syntax** `n = udyn('name',iosize);`

**Description** `n = udyn('name',iosize)` creates an unstructured uncertain dynamic system class, with input/output dimension specified by `iosize`. This object represents the class of completely unknown multivariable, time-varying nonlinear systems.

For practical purposes, these uncertain elements represent noncommuting symbolic variables (placeholders). All algebraic operations, such as addition, subtraction, and multiplication (i.e., cascade) operate properly, and substitution (with `usubs`) is allowed.

The analysis tools (e.g., `robuststab`) do not currently handle these types of uncertain elements. Therefore, these elements do not provide a significant amount of usability, and their role in the toolbox is small.

**Examples** You can create a 2-by-3 `udyn` element and check its size and properties.

```
N = udyn('N',[2 3])
Uncertain Dynamic System: Name N, size 2x3
size(N)
ans =
     2     3
get(N)
      Name: 'N'
      NominalValue: [2x3 double]
      AutoSimplify: 'basic'
```

**See Also** `ureal` | `ultidyn` | `ucomplex` | `ucomplexm`

# ufind

---

**Purpose** Find uncertain variables in Simulink model

**Syntax**

```
uvars = ufind('mdl')  
[uvars,pathinfo] = ufind('mdl')  
uvars = ufind(usys_1,usys_2,...)
```

**Description** `uvars = ufind('mdl')` finds Uncertain State Space blocks in the Simulink model `mdl`. It returns a structure `uvars` that contains all uncertain variables associated with the Uncertain State Space blocks. Each uncertain variable is a `ureal` or `ultidyn` object and is listed by name in `uvars`.

`[uvars,pathinfo] = ufind('mdl')` returns a cell array `pathinfo` that contains paths to the Uncertain State Space blocks and the corresponding uncertain variables in the block. The first column of `pathinfo` lists the block paths through the model hierarchy and the second column lists the uncertain variables associated with the block. Use `pathinfo` to verify that all Uncertain State Space blocks in the model `mdl` have been identified.

`uvars = ufind(usys_1,usys_2,...)` collects all uncertain variables referenced by the uncertain model `usys_n`. `usys_n` can be `uss` or `ufrd` models. Use this syntax as an alternative to querying the model itself, when you know the uncertain models that the Uncertain State Space blocks use.

`ufind` can find Uncertain State Space blocks inside Masked Subsystems, Library Links, and Model References but not inside Accelerated Model References. `ufind` errors out if the same uncertain variable name has different definitions in the model. For example, if your model contains two Uncertain State Space blocks where the uncertain system variables define the same uncertain variable 'unc\_par' as `ultidyn('unc_par',[1 1])` and `ureal('unc_par',5)`, such an error occurs.


**Examples** Find all Uncertain State Space blocks and uncertain variables in a Simulink model:



1 Open the Simulink model.

```
open_system('usim_model')
```

The model, as shown in the following figure, contains three Uncertain State Space blocks named Unmodeled Plant Dynamics, Plant, and Sensor Gain. These blocks depend on three uncertain variables named input\_unc, unc\_pole and sensor\_gain.

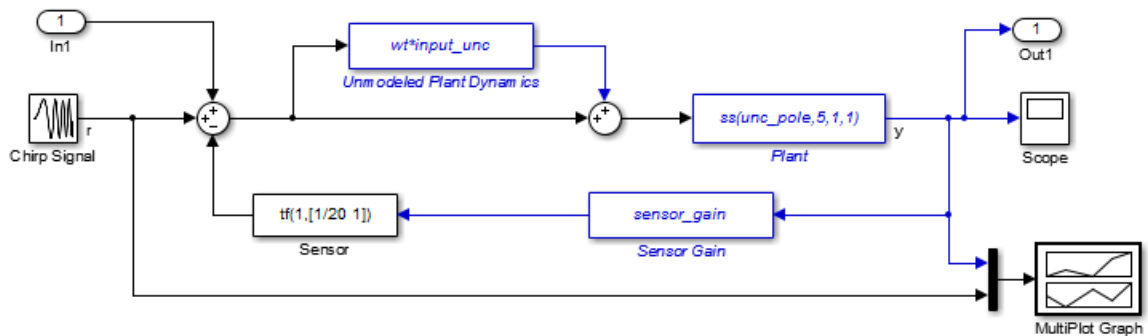

2 Use ufind to find all Uncertain State Space blocks and uncertain variables in the model.

```
[uvars,pathinfo] = ufind('usim_model')
```

3 Type uvars to view the structure uvars. MATLAB returns the following result:

```
uvars =  
  
    input_unc: [1x1 ultidyn]  
    sensor_gain: [1x1 ureal]  
    unc_pole: [1x1 ureal]
```

Each uncertain variable is a ureal or ultidyn object and is listed by name in uvars.

**4** View the Uncertain State Space block paths and uncertain variables.

- a** Type `pathinfo(:,1)` to view paths of the Uncertain State Space blocks in the model. MATLAB returns the following result:

```
ans =  
  
    'usim_model/Plant'  
    'usim_model/Sensor Gain'  
    'usim_model/Unmodeled Plant Dynamics'
```

- b** Type `pathinfo(:,2)` to view the uncertain variables referenced by each Uncertain State Space block. MATLAB returns the following results:

```
ans =  
  
    'unc_pole'  
    'sensor_gain'  
    'input_unc'
```

## Tutorials

“Vary Uncertainty Values Using Individual Uncertain State Space Blocks”

“Vary Uncertainty Values Across Multiple Uncertain State Space Blocks”

Robustness Analysis in Simulink

## How To

“Simulate Uncertainty Effects”

## See Also

`usample` | Uncertain State Space

**Purpose**

Uncertain frequency response data model

**Syntax**

```

usysfrd =ufrd(usys,frequency)
usysfrd =ufrd(usys,frequency,'Units',units)
usysfrd =ufrd(sysfrd)
usys =ufrd(response,frequency)
usys =ufrd(response,frequency,Ts)
usys =ufrd(response,frequency,RefSys)
usys =ufrd(response,frequency,'Units',units,Ts)
usys =ufrd(response,frequency,'Units',units,Ts,RefSys)
ufrd_sys =ufrd(M,freqs)
ufrd_sys =ufrd(M,freqs,frequents)
ufrd_sys =ufrd(M,freqs,frequents,timeunits)
usysfrd =ufrd(usys,frequency,'Units',units)
usysfrd =ufrd(usys,frequency,'Units',units,'P1',V1,'P2',V2,...)
usys =ufrd(response,frequency)
usysfrd =ufrd(sysfrd)

```

**Description**

Uncertain frequency response data models (`ufrd`) arise when combining numeric `frd` models with uncertain models such as `ureal`, `ultidyn`, or `uss`. A `ufrd` model keeps track of how the uncertain elements affect the frequency response. Use `ufrd` for robust stability and worst-case performance analysis.

There are three ways to construct a `ufrd` model:

- 1 Combine numeric `frd` models with uncertain models using model arithmetic. For example:

```

sys = frd(rand(100,1),logspace(-2,2,100));
k = ureal('k',1);
D = ultidyn('Delta',[1 1]);
ufrd_sys = k*sys*(1+0.1*D)

```

`ufrd_sys` is a `ufrd` model with uncertain elements `k` and `D`.

- 2 `ufrd_sys = ufrd(M,freqs)` converts the dynamic system model or static model `M` to `ufrd`. If `M` contains Control Design Blocks that do

not represent uncertainty, these blocks are replaced by their current value. (To preserve both tunable and uncertain Control Design Blocks, use `genfrd` instead.)

Use `ufrd_sys = ufrd(M, freqs, frequits)` to specify the frequency units of the frequencies in `freqs` with the string `frequits`. Use `ufrd_sys = ufrd(M, freqs, frequits, timeunits)` to specify the time unit of `ufrd_sys` when `M` is a static model.

- 3 Use `frd` to construct a `ufrd` model from an uncertain matrix (`umat`) representing uncertain frequency response data. For example:

```
a = ureal('delta',1,'percent',50);
freq = logspace(-2,2,100);
RespData = rand(1,1,100) * a;
usys = frd(RespData,freq,0.1)
```

## Examples

Compute the uncertain frequency response of an uncertain system (`uss` model) with both parametric uncertainty (`ureal`) and unmodeled dynamics uncertainty (`ultidyn`).

```
p1 = ureal('p1',5,'Range',[2 6]);
p2 = ureal('p2',3,'Plusminus',0.4);
p3 = ultidyn('p3',[1 1]);
Wt = makeweight(.15,30,10);
A = [-p1 0;p2 -p1];
B = [0;p2];
C = [1 1];
usys = uss(A,B,C,0)*(1+Wt*p3);
```

```
usysfrd = ufrd(usys,logspace(-2,2,60));
```

Plot 20 random samples and the nominal value of the uncertain frequency response.

```
bode(usysfrd,'r',usysfrd.NominalValue,'b+')
```

## See Also

`frd` | `ss` | `uss` | `genfrd`

**How To**

- “Control Design Blocks”

# ulinearize

---

## Purpose

Linearize Simulink model with Uncertain State Space block

## Syntax

```
ulin = ulinearize('sys',io)
ulin = ulinearize('sys',op,io)
ulin = ulinearize('sys',op,io,options)
ulin = ulinearize('sys',op)
ulin_block = ulinearize('sys',op,'blockname')
[ulin,op] = ulinearize('sys',snapshottimes,...);
ulin = ulinearize('sys','StateOrder',stateorder)
```

## Description

`ulin = ulinearize('sys',io)` linearizes the Simulink model `sys` that contains Uncertain State Space blocks and returns a linear time-invariant uncertain system `ulin`. `ulin` is an `uss` object. `io` is an I/O object that specifies linearization I/O points in the model. Use `getlinio` or `linio` to create `io`. The linearization occurs at the operating point specified in the model.

`ulin=ulinearize('sys',io,op)` linearizes the model at the operating point specified in the operating point object `op`. Use `operpoint` or `findop` to create `op`. Both `op` and `io` are associated with the same model `sys`.

`ulin=ulinearize('sys',io,op,options)` takes a linearization options object `options` that contains several options for linearization and returns linear time-invariant uncertain system `ulin`. Use `linearizeOptions` to create `options`.

`ulin=ulinearize('sys',op)` linearizes the model `sys` at the operating point specified in the operating point object `op`. The software uses root-level inport and outport blocks in `sys` as I/O points for linearization.

`ulin_block=ulinearize('sys',op,'blockname',...)` takes the name of a block `blockname` in the model `sys` and returns a linear time-invariant uncertain system `ulin_block`. You can also specify a fourth argument `options` to provide options for the linearization.

`[ulin,op] = ulinearize('sys',snapshottimes,...)` creates operating points for linearization by simulating the model and taking snapshots of the system's states and inputs at times specified in the

vector `snapshottimes`. `ulin` is a set of linear time-invariant uncertain systems and `op` is the set of operating point objects used in linearization. You can also specify I/O object for linearization, or a block name. If you do not specify an I/O object or block name, the linearization uses root-level inport and outport blocks in the model. You can also supply an additional argument, `options`, to provide options for linearization.

`ulin = ulinearize('sys', 'StateOrder', stateorder)` creates a linear-time-invariant uncertain system `ulin`, whose states are in a specified order. Specify the state order in the cell array `stateorder` by entering the names of the blocks containing states in the model. For all blocks, you can enter block names as the full block path. For continuous blocks, you can alternatively enter block names as the user-defined unique state name.

## Examples

Compute uncertain linearization of a Simulink model containing Uncertain State Space blocks:

```
% Define uncertain variables and uncertain system variables
% to use in Uncertain State Space blocks.
unc_pole = ureal('unc_pole', -5, 'Range', [-10 -4]);
plant = ss(unc_pole, 5, 1, 0);
wt = makeweight(0.25, 130, 2.5);
input_unc = ultidyn('input_unc', [1 1]);
sensor_pole = ureal('sensor_pole', -20, 'Range', [-30 -10]);
sensor = tf(1, [1/(-sensor_pole) 1]);

% Open Simulink model. The model contains three Uncertain State
% Space blocks named Unmodeled Plant Dynamics, Uncertain Plant and
% Uncertain Sensor, and linearization I/O points.
open_system('rct_ulinearize_uss')

% Obtain linearization I/O points.
mdl = 'rct_ulinearize_uss';
io = getlinio(mdl);

% Compute the uncertain linearization of the model.
```

# ulinearize

---

```
ulin = ulinearize mdl,io  
% MATLAB returns an uss object with 5 states.
```

## Tutorials

“Linearize Block to Uncertain Model”

Linearization of Simulink Models with Uncertainty

## How To

“Obtain Uncertain State-Space Model from Simulink Model”

## See Also

[ureal](#) | [udyn](#) | [ultidyn](#) | [uss](#)



**Purpose**

Create uncertain linear time-invariant object

**Syntax**

```
H = ultidyn('Name',iosize)
H = ultidyn('Name',iosize,'Property1',Value1,'Property2',Value2,...)
```

**Description**

`H = ultidyn('Name',iosize)` creates an uncertain linear, time-invariant objects are used to represent unknown dynamic objects whose only known attributes are bounds on their frequency response. Uncertain linear, time-invariant objects have a name (the `Name` property), and an input/output size (`ioSize` property).

The property `Type` is `'GainBounded'` (default) or `'PositiveReal'`, and describes in what form the knowledge about the object's frequency response is specified.

- If `Type` is `'GainBounded'`, then the knowledge is an upper bound on the magnitude (i.e., absolute value), namely  $\text{abs}(H) \leq \text{Bound}$  at all frequencies. The matrix generalization of this is  $\|H\| \leq \text{Bound}$ .
- If `Type` is `'PositiveReal'` then the knowledge is a lower bound on the real part, namely  $\text{Real}(H) \geq \text{Bound}$  at all frequencies. The matrix generalization of this is  $H+H' \geq 2*\text{Bound}$

The property `Bound` is a real, scalar that quantifies the bound on the frequency response of the uncertain object as described above.

Trailing `Property/Value` pairs are allowed in the construction.

```
H=ultidyn('name',iosize,'Property1',Value1,'Property2',Value2,...)
```

The property `SampleStateDim` is a positive integer, defining the state dimension of random samples of the uncertain object when sampled with `usample`. The default value is 1.

The property `AutoSimplify` controls how expressions involving the uncertain matrix are simplified. Its default value is `'basic'`, which means elementary methods of simplification are applied as operations are completed. Other values for `AutoSimplify` are `'off'`, no simplification performed, and `'full'` which applies model-reduction-like techniques to the uncertain object.

## Examples

### MIMO Uncertain Dynamics

Create an `ultidyn` object with internal name 'H', dimensions 2-by-3, norm bounded by 7.

```
H = ultidyn('H',[2 3],'Bound',7)
Uncertain GainBounded LTI Dynamics: Name H, 2x3, Gain Bound = 7
```

### Nyquist Plot of Uncertain Dynamics

Create a scalar `ultidyn` object with an internal name 'B', whose frequency response has a real part greater than 2.5.


```
B = ultidyn('B',[1 1],'Type','PositiveReal','Bound',2.5)
```

```
B =
```

```
Uncertain LTI dynamics "B" with 1 outputs, 1 inputs, and positive real
```

Change the `SampleStateDim` to 5, and plot the Nyquist plot of 30 random samples.

```
B.SampleStateDim = 5;
nyquist(usample(B,30))
```

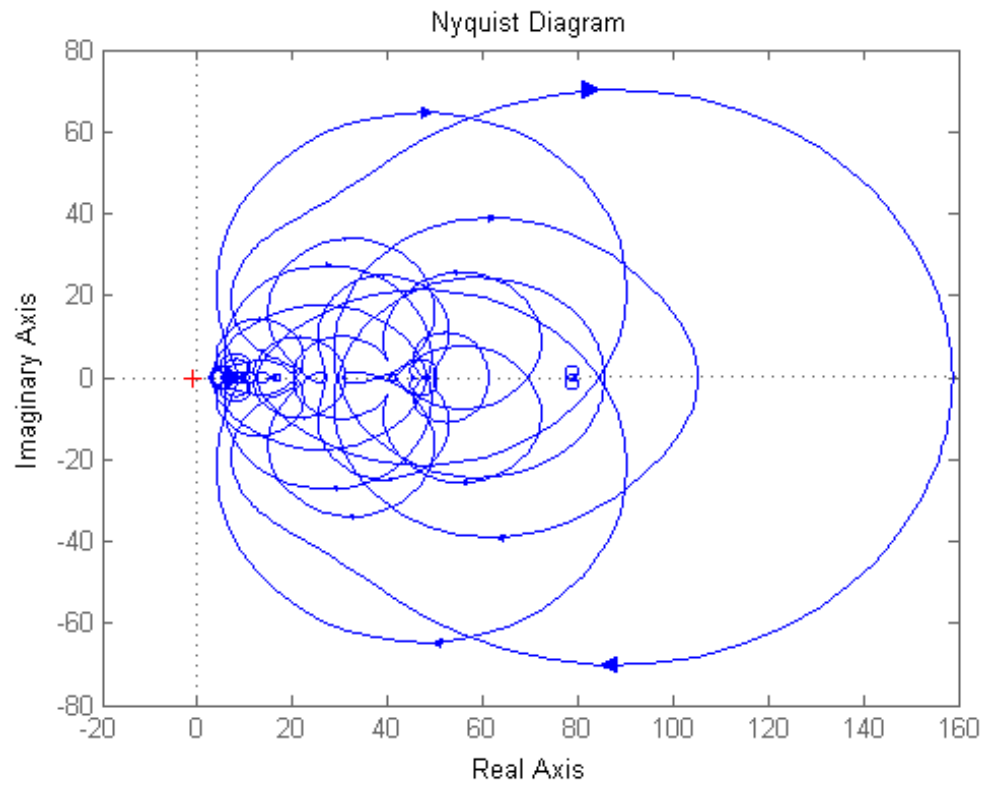

**See Also** `get` | `ureal` | `uss`

# umat

---

**Purpose** Create uncertain matrix

**Syntax**  
`h = umat(M)`  
`M = umat(A)`

**Description** Uncertain matrices are rational expressions involving uncertain elements of type `ureal`, `ucomplex`, or `ucomplexm`. Use uncertain matrices for worst-case gain analysis and for building uncertain state-space (`uss`) models.

Create uncertain matrices by creating uncertain elements and combining them using arithmetic and matrix operations. For example:

```
p = ureal('p',1);  
M = [0 p; 1 p^2]
```

creates a 2-by-2 uncertain matrix (a `umat` object) with the uncertain parameter `p`.

The syntax `M = umat(A)` converts the double array `A` to a `umat` object with no uncertainty.

Most standard matrix manipulations are valid on uncertain matrices, including addition, multiplication, inverse, horizontal and vertical concatenation. Specific rows/columns of an uncertain matrix can be referenced and assigned also.

If `M` is a `umat`, then `M.NominalValue` is the result obtained by replacing each uncertain element in `M` with its own nominal value.

If `M` is a `umat`, then `M.Uncertainty` is an object describing all the uncertain elements in `M`. All element can be referenced and their properties modified with this `Uncertainty` gateway. For instance, if `B` is an uncertain real parameter in `M`, then `M.Uncertainty.B` accesses the uncertain element `B` in `M`.

**Examples** Create 3 uncertain elements and then a 3-by-2 `umat`.

```
a = ureal('a',5,'Range',[2 6]);  
b = ucomplex('b',1+j,'Radius',0.5);
```

```
c = ureal('c',3,'Plusminus',0.4);
M = [a b;b*a 7;c-a b^2]
```

M is an uncertain matrix (umat object) with the uncertain parameters a, b, and c.

View the properties of M with get

```
get(M)
```

The nominal value of M is the result when all atoms are replaced by their nominal values.

```
M.NominalValue
```

```
ans =
    5.0000          1.0000 + 1.0000i
    5.0000 + 5.0000i    7.0000
   -2.0000              0 + 2.0000i
```

Change the nominal value of a within M to 4. The nominal value of M reflects this change.

```
M.Uncertainty.a.NominalValue = 4;
```

```
M.NominalValue
```

```
ans =
    4.0000          1.0000 + 1.0000i
    4.0000 + 4.0000i    7.0000
   -1.0000              0 + 2.0000i
```

Get a random sample of M, obtained by taking random samples of the uncertain atoms within M.

```
usample(M)
```

```
ans =
    2.0072          0.8647 + 1.3854i
    1.7358 + 2.7808i    7.0000
```

# umat

---

1.3829                      -1.1715 + 2.3960i

Select the 1st and 3rd rows, and the 2nd column of M. The result is a 2-by-1 umat, whose dependence is only on b.

M([1 3],2)

## See Also

ureal | ultidyn | ucomplex | ucomplexm | usample

**Purpose** Plot multiple frequency response objects and doubles on same graph

**Syntax**

```

uplot(G1)
uplot(G1,G2)
uplot(G1,Xdata,Ydata)
uplot(G1,Xdata,Ydata,...)
uplot(G1,linetype)
uplot(G1,linetype,G2,...)
uplot(G1,linetype,Xdata,Ydata,linetype)
uplot(type,G1,linetype,Xdata,Ydata,linetype)
H = uplot(G1)
H = uplot(G1,G2)
H = uplot(G1,Xdata,Ydata)
H = uplot(G1,Xdata,Ydata,...)
H = uplot(G1,linetype)
H = uplot(G1,linetype,G2,...)
H = uplot(G1,linetype,Xdata,Ydata,linetype)

```

**Description** uplot plots double and frd objects. The syntax is the same as the MATLAB plot command except that all data is contained in frd objects, and the axes are specified by type.

The (optional) type argument must be one of

Type	Description
'iv,d'	Data versus independent variable (default)
'iv,m'	Magnitude versus independent variable
'iv,lm'	log(magnitude) versus independent variable
'iv,p'	Phase versus independent variable
'liv,m'	Magnitude versus log(independent variable)
'liv,d'	Data versus log(independent variable)
'liv,m'	Magnitude versus log(independent variable)
'liv,lm'	log(magnitude) versus log(independent variable)

Type	Description
'liv,p'	Phase versus log(independent variable)
'r,i'	Real versus imaginary (parametrize by independent variable)
'nyq'	Real versus imaginary (parametrize by independent variable)
'nic'	Nicholas plot
'bode'	Bode magnitude and phase plot

The remaining arguments of `uplot` take the same form as the MATLAB `plot` command. Line types (for example, '+', 'g-.', or '\*r') can be optionally specified after any frequency response argument.

There is a subtle distinction between constants and `frd` objects with only one independent variable. A constant is treated as such across all frequencies, and consequently shows up as a line on any graph with the independent variable as an axis. A `frd` object with only one frequency point always shows up as a point. You might need to specify one of the more obvious point types in order to see it (e.g., '+', 'x', etc.).

## Examples

### Plot Multiple Frequency Responses

Create two SISO second-order systems, and calculate their frequency responses over different frequency ranges.

```
a1 = [-1,1;-1,-0.5];
b1 = [0;2]; c1 = [1,0]; d1 = 0;
sys1 = ss(a1,b1,c1,d1);
a2 = [-.1,1;-1,-0.05];
b2 = [1;1]; c2 = [-0.5,0]; d2 = 0.1;
sys2 = ss(a2,b2,c2,d2);
omega = logspace(-2,2,100);
sys1g = frd(sys1,omega);
omega2 = [ [0.05:0.1:1.5] [1.6:.5:20] [0.9:0.01:1.1] ];
omega2 = sort(omega2);
sys2g = frd(sys2,omega2);
```




Create an frd object with a single frequency.

```
sys3 = rss(1,1,1);  
rspot = frd(sys3,2);
```

The following plot uses the `plot_type` specification 'liv,lm'.

```
uplot('liv,lm',sys1g,'b-.',rspot,'r*- ',sys2g);  
xlabel('log independent variable')  
ylabel('log magnitude')  
title('axis specification: liv,lm')
```

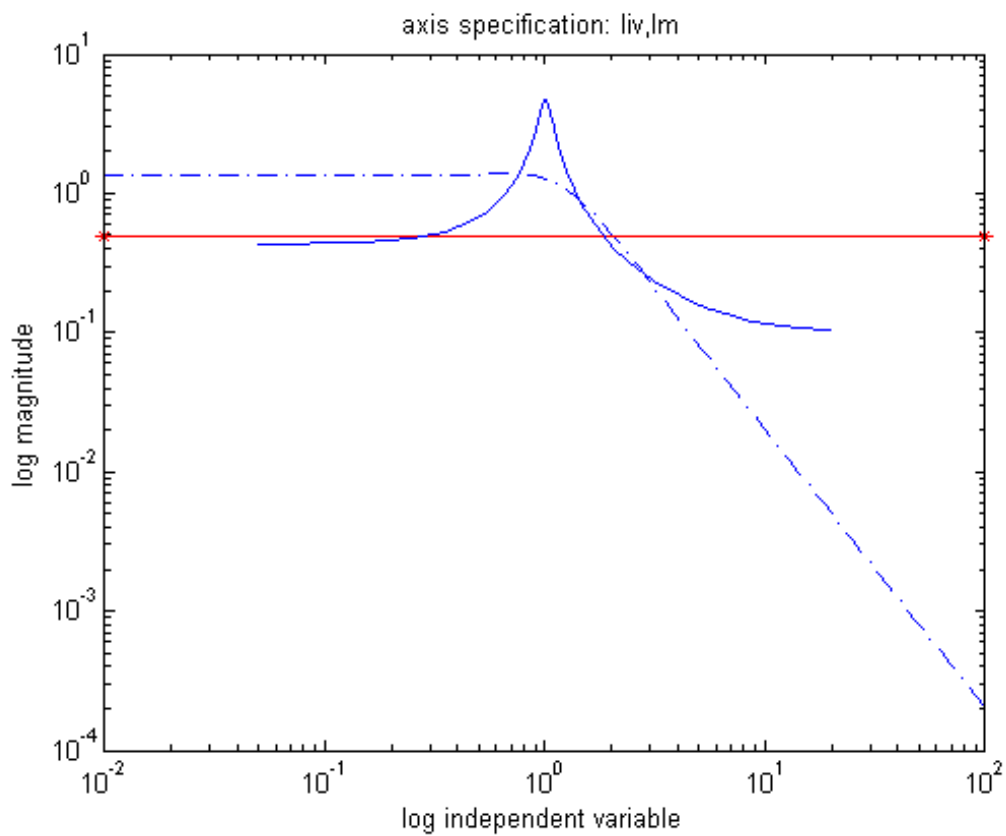

## See Also

[bode](#) | [plot](#) | [nichols](#) | [nyquist](#) | [semilogx](#) | [semilogy](#) | [sigma](#)

**Purpose**

Create uncertain real parameter

**Syntax**

```
p = ureal('name',nominalvalue)
p = ureal('name',nominalvalue,'Property1',Value1,...
'Property2',Value2,...)
```

**Description**

An uncertain real parameter is used to represent a real number whose value is uncertain. Uncertain real parameters have a name (the `Name` property), and a nominal value (`NominalValue` property).

The uncertainty (potential deviation from `NominalValue`) is described (equivalently) in 3 different properties:

- `PlusMinus`: the additive deviation from `NominalValue`
- `Range`: the interval containing `NominalValue`
- `Percentage`: the percentage deviation from `NominalValue`

The `Mode` property specifies which one of these three descriptions remains unchanged if the `NominalValue` is changed (the other two descriptions are derived). The possible values for the `Mode` property are `'Range'`, `'Percentage'` and `'PlusMinus'`.

The default `Mode` is `'PlusMinus'`, and `[-1 1]` is the default value for the `'PlusMinus'` property. The range of uncertainty need not be symmetric about `NominalValue`.

The property `AutoSimplify` controls how expressions involving the uncertain matrix are simplified. Its default value is `'basic'`, which means elementary methods of simplification are applied as operations are completed. Other values for `AutoSimplify` are `'off'`, no simplification performed, and `'full'`, which applies model-reduction-like techniques to the uncertain object.

**Examples****Example 1**

Create an uncertain real parameter and use `get` to display the properties and their values. Create uncertain real parameter object `a` with the internal name `'a'` and nominal value 5.

```
a = ureal('a',5)
Uncertain Real Parameter: Name a, NominalValue 5, variability = [-1 1]
get(a)
    Name: 'a'
    NominalValue: 5
    Mode: 'PlusMinus'
    Range: [4 6]
    PlusMinus: [-1 1]
    Percentage: [-20 20]
    AutoSimplify: 'basic'
```

Note that the Mode is 'PlusMinus', and that the value of PlusMinus is indeed [-1 1]. As expected, the range description of uncertainty is [4 6], while the percentage description of uncertainty is [-20 20].

Set the range to [3 9]. This leaves Mode and NominalValue unchanged, but all three descriptions of uncertainty have been modified.

```
a.Range = [3 9];
get(a)
    Name: 'a'
    NominalValue: 5
    Mode: 'PlusMinus'
    Range: [3 9]
    PlusMinus: [-2 4]
    Percentage: [-40 80]
    AutoSimplify: 'basic'
```

## Example 2

Property/Value pairs can also be specified at creation.

```
b = ureal('b',6,'Percentage',[-30 40],'AutoSimplify','full');
get(b)
    Name: 'b'
    NominalValue: 6
    Mode: 'Percentage'
    Range: [4.2000 8.4000]
```

```
PlusMinus: [-1.8000 2.4000]
Percentage: [-30.0000 40.0000]
AutoSimplify: 'full'
```

Note that Mode is automatically set to 'Percentage'.

### Example 3

Specify the uncertainty in terms of percentage, but force Mode to 'Range'.

```
c = ureal('c',4,'Mode','Range','Percentage',25);
get(c)
    Name: 'c'
NominalValue: 4
    Mode: 'Range'
    Range: [3 5]
    PlusMinus: [-1 1]
    Percentage: [-25 25]
AutoSimplify: 'basic'
```

### See Also

[ucomplex](#) | [umat](#) | [uss](#)

**Purpose** Generate random samples of uncertain object

**Syntax**

```
B = usample(A);  
B = usample(A,N)  
[B,SampleValues] = usample(A,N)  
[B,SampleValues] = usample(A,Names,N)  
[B,SampleValues] = usample(A,Names1,N1,Names2,N2,...)  
[B,SampleValues] = usample(A,N,Wmax)  
[B,SampleValues] = usample(A,Names,N,Wmax)
```

**Description** `B = usample(A)` substitutes a random sample of the uncertain objects in `A`, returning a certain (i.e., not uncertain) array of size `[size(A)]`.

`B = usample(A,N)` substitutes `N` random samples of the uncertain objects in `A`, returning a certain (i.e., not uncertain) array of size `[size(A) N]`.

`[B,SampleValues] = usample(A,N)` additionally returns the specific sampled values (as a `Struct` whose field names are the names of `A`'s uncertain elements) of the uncertain elements. Hence, `B` is the same as `usubs(A,SampleValues)`.

`[B,SampleValues] = usample(A,Names,N)` samples only the uncertain elements listed in the `Names` variable (cell, or char array). If `Names` does not include all the uncertain objects in `A`, then `B` will be an uncertain object. Any entries of `Names` that are not elements of `A` are simply ignored. Note that `usample(A,fieldnames(A.Uncertainty),N)` is the same as `usample(A,N)`.

`[B,SampleValues] = usample(A,Names1,N1,Names2,N2,...)` takes `N1` samples of the uncertain elements listed in `Names1`, and `N2` samples of the uncertain elements listed in `Names2`, and so on. `size(B)` will equal `[size(A) N1 N2 ...]`.

The scalar parameter `Wmax` in

```
[B,SampleValues] = usample(A,N,Wmax)  
[B,SampleValues] = usample(A,Names,N,Wmax)  
[B,SampleValues] = usample(A,Names,N,Wmax)
```

affects how `ultidyn` elements within `A` are sampled, restricting the poles of the samples. If `A` is a continuous-time `uss` or `ufrd`, then the poles of sampled `GainBounded` `ultidyn` elements in `SampleValues` will each have magnitude  $\leq$  `BW`. If `A` is a discrete-time, then sampled `GainBounded` `ultidyn` elements are obtained by Tustin transformation, using  $BW / (2 \cdot TS)$  as the (continuous) pole magnitude bound. In this case, `BW` should be  $< 1$ . If the `ultidyn` type is `PositiveReal`, then the samples are obtained by bilinearly transforming (see “Normalizing Functions for Uncertain Elements”) the `GainBounded` elements described above.

## Examples

### Sample Real Parameter

Create a real uncertain parameter, sample it, and plot a histogram of the sampled values.

```
A = ureal('A',5);
Asample = usample(A,500);
```

Examine the size of the parameter and the sample array.

```
size(A)
```

```
Uncertain real scalar.
```

```
size(Asample)
```

```
ans =
```

```
1 1 500
```

`A` is a scalar parameter. The dimensions of `Asample` reflect that `A` is a 1-by-1 parameter. Examine the data type of `Asample`.

```
class(Asample)
```

## uss/usample

---

```
ans =
```


```
double
```

The samples of the scalar parameter are numerical values.

Plot the histogram of sampled values.

```
hist(Asample(:))
```



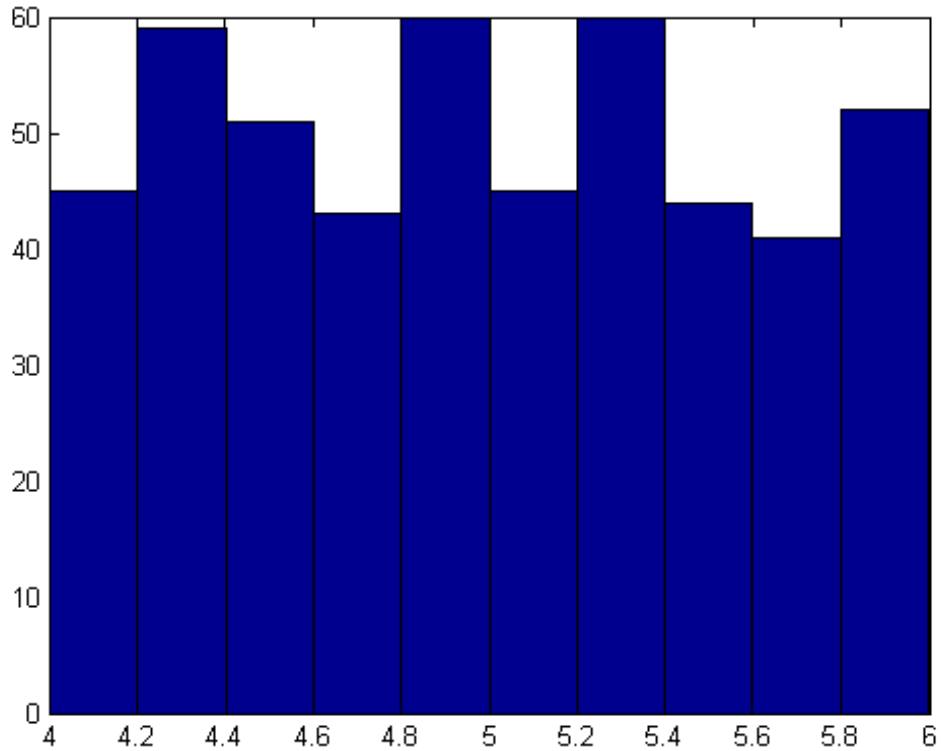

### Sample Responses of Uncertain Control System Model

This example illustrates how to sample the open and closed-loop response of an uncertain plant model for Monte Carlo analysis.

Create two uncertain real parameters and an uncertain plant.

```
gamma = ureal('gamma',4);  
tau = ureal('tau',.5,'Percentage',30);  
P = tf(gamma,[tau 1]);
```

Create an integral controller based on the nominal values of plant uncertainties.

```
KI = 1/(2*tau.Nominal*gamma.Nominal);  
C = tf(KI,[1 0]);
```

Now create an uncertain closed-loop system.

```
CLP = feedback(P*C,1);
```

Sample the plant at 20 values, distributed uniformly about the tau and gamma parameter cube.

```
[Psample1D,Values1D] = usample(P,20);  
size(Psample1D)
```

20x1 array of state-space models.  
Each model has 1 outputs, 1 inputs, and 1 states.

This sampling returns an array of 20 state-space models, each representing the closed-loop system within the uncertainty.


Now sample the plant at 10 values of tau and 15 values of gamma.

```
[Psample2D,Values2D] = usample(P,'tau',10,'gamma',15);  
size(Psample2D)
```

10x15 array of state-space models.  
Each model has 1 outputs, 1 inputs, and 1 states.


Plot the step responses of the 1-D sampled plant.

```
subplot(2,1,1);  
step(Psample1D)
```

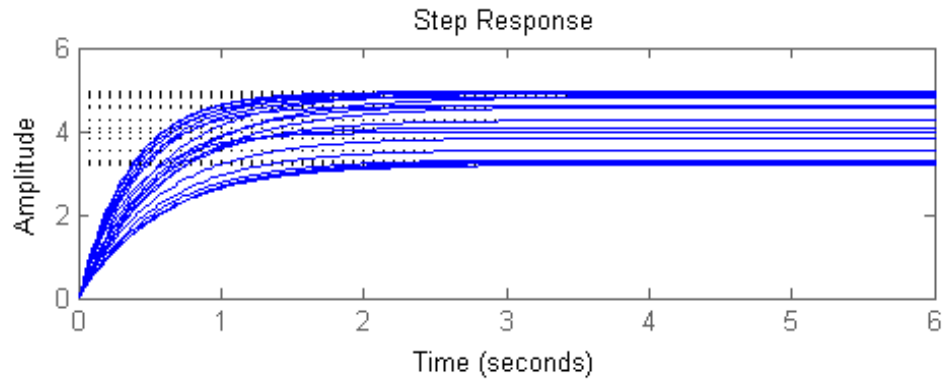

Evaluate the uncertain closed-loop model at the same values using `usubs`, and plot the step response.

```
subplot(2,1,2);  
step(usubs(CLP,Values1D))
```

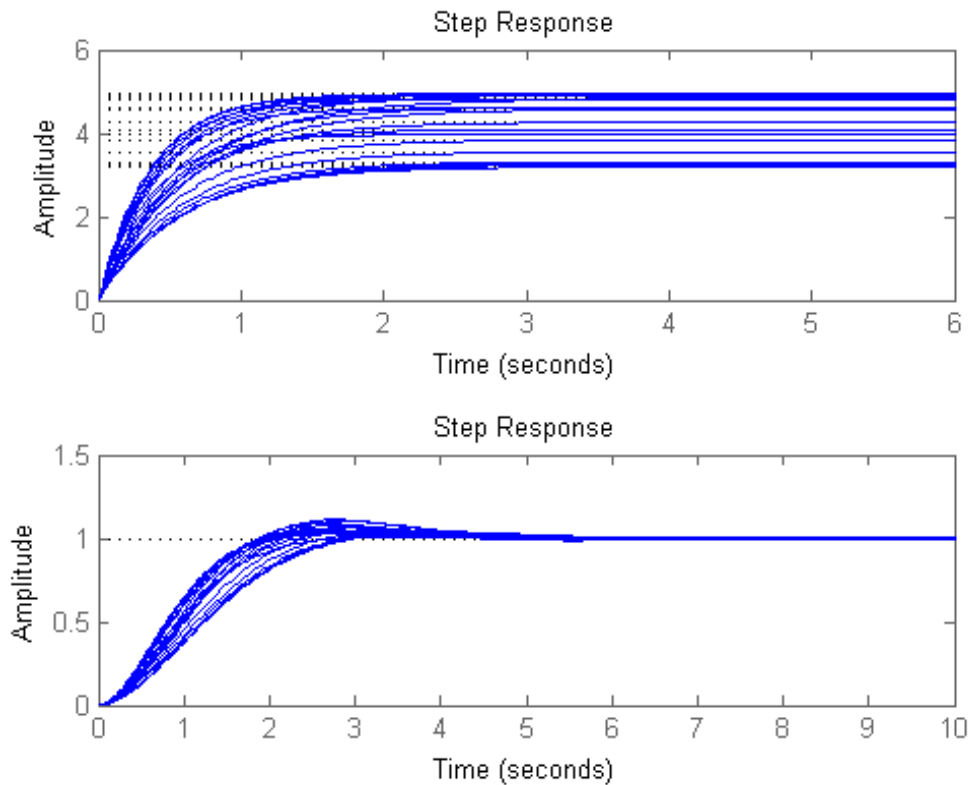

## Restrict Pole Locations in Sampled Uncertain Dynamics

To see the effect of limiting the bandwidth of sampled models with  $W_{max}$ , create two `ultidyn` objects.


```
A = ultidyn('A',[1 1]);  
B = ultidyn('B',[1 1]);
```

Sample 10 instances of each, using a bandwidth limit of 1 rad/sec on A, and 20 rad/sec on B.

```
Npts = 10;  
As = usample(A,Npts,1);  
Bs = usample(B,Npts,20);
```

Plot 10-second step responses, for the two sample sets.

```
step(As, 'r', Bs, 'b--', 10)
```

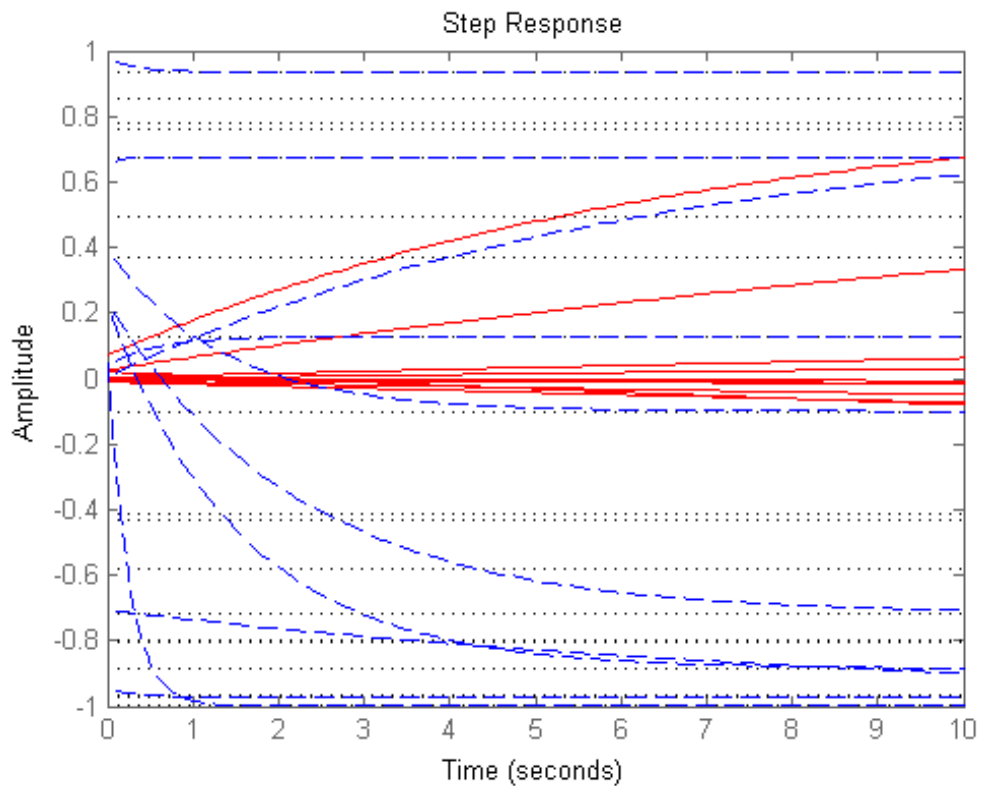

The lower bandwidth limit on the samples of A results in generally slower step responses for those samples.

## uss/usample

---

### **See Also**

usample | usubs | ufind | ureal | ucomplex | ultidyn | umat |  
ufrd | uss

**Purpose** Generate random samples of uncertain variables

**Syntax**

```

samples = usample(uvars,N)
samples = usample(uvars)
samples = usample(uvars,N,Wmax)

```

**Description** `samples = usample(uvars,N)` generates  $N$  random samples of the uncertain variables in `uvars`. `uvars` is a structure that lists uncertain variables (`ureal`, `ucomplex` or `ultidyn`) by name. You can automatically obtain `uvars` for a Simulink model that contains Uncertain State Space blocks using `ufind`. `samples` is an  $N$ -by-1 structure array whose field names and values are the names and sample values of the uncertain variables. Use this syntax, together with `ufind`, to generate random samples for uncertain variables in Simulink models.

`samples = usample(uvars)` is equivalent to `usample(uvars,1)`.

`samples = usample(uvars,N,Wmax)` specifies constraints, as described in `uss/usample`, for sampling uncertain variables of type `ultidyn` in `uvars`.

## Examples **Example 1**

Generate random samples of uncertain variables:

```
% Create a structure that contains uncertain variables a and % b.
uvars = struct('a',ureal('a',5),'b',ultidyn('b',[2 3],'Bound',7))
```

```
% Use usample to generate random values of a and b.
samples = usample(uvars)
```


### Sample Uncertain Variables in a Simulink® Model

Generate random samples of uncertain variables in a Simulink® model.

Open the model.

```
open_system('usim_model')
```

# usample

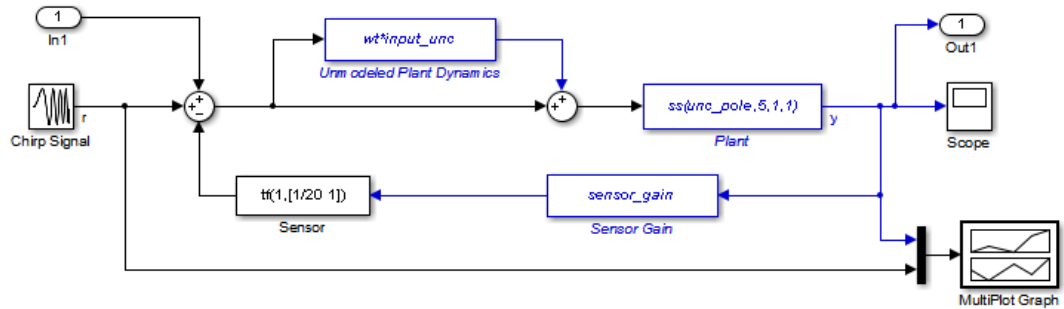

This model uses Uncertain State Space (USS) blocks to capture three sources of uncertainty: unmodeled plant dynamics (`input_unc`), variability in the plant pole location (`unc_pole`), and poorly known value of the sensor gain (`sensor_gain`).

To see how this uncertainty affects the closed-loop response, double-click to randomly sample the uncertainty and re-simulate the model. See the companion demo for more information on robustness analysis in Simulink.

Double click here to generate new values for the uncertain variables.


Double click here to see companion demo.

The model contains three Uncertain State Space blocks named Unmodeled Plant Dynamics, Plant, and Sensor Gain. These blocks depend on three uncertain variables named `input_unc`, `unc_pole`, and `sensor_gain`.

Use `ufind` to find all Uncertain State Space blocks and uncertain variables in the model.

```
uvars = ufind('usim_model');
```




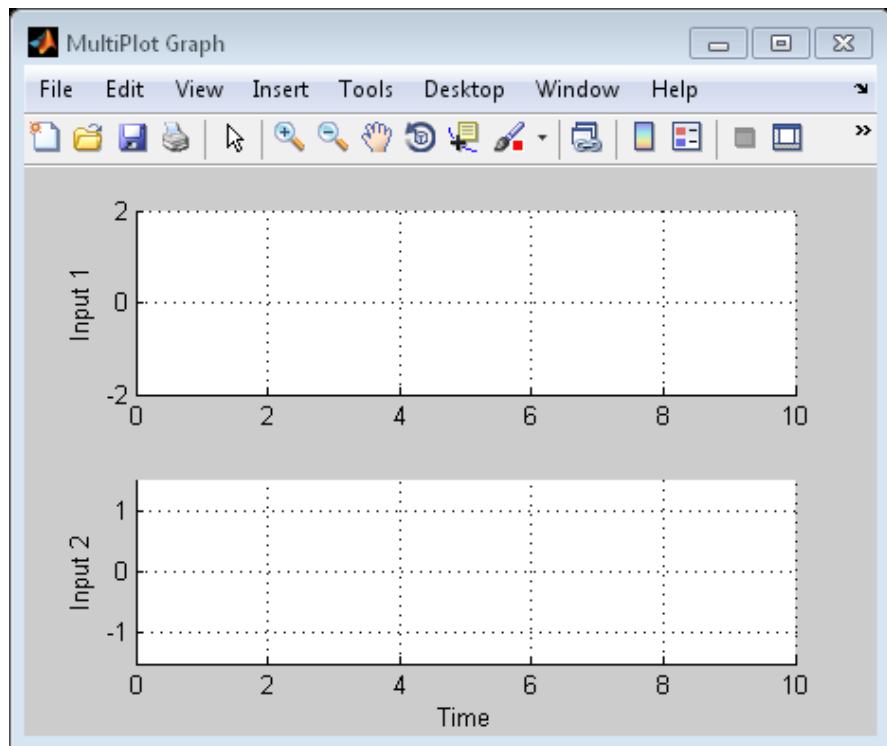

Use `usample` to generate random samples of `input_unc`, `unc_pole`, and `sensor_gain`. Simulate the closed-loop response for each of these random samples.

```
for i=1:10;  
    uval = usample(uvars);  
    sim('usim_model',10);  
end
```

# usample

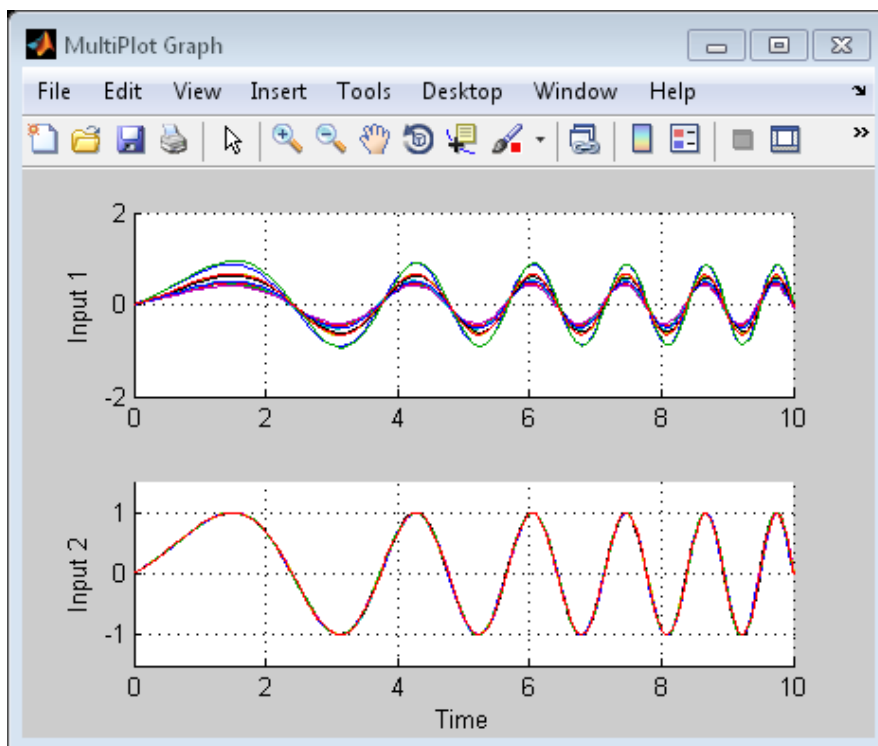

The MultiPlot Graph block displays the simulated responses.

## Tutorials

“Vary Uncertainty Values Using Individual Uncertain State Space Blocks”

“Vary Uncertainty Values Across Multiple Uncertain State Space Blocks”

Robustness Analysis in Simulink

## How To

“Simulate Uncertainty Effects”

## See Also

[ufind](#) | [usubs](#) | [ureal](#) | [ucomplex](#) | [ultidyn](#) | [umat](#) | [ufrd](#) | [uss](#)

**Purpose** Helper function for USS System blocks to set "User-defined Uncertainty" field or state of "Uncertainty value" menu

---

**Note** `usimfill` will be removed in a future release. Use `ufind` instead.

---

**Syntax**

```
usimfill(ModelName, str)
usimfill(ModelName, 'Uncertainty value', 'Nominal')
usimfill(ModelName, 'Uncertainty value', 'User defined')
```

**Description** The command `usimfill` allows simple control of some parameters of all USS System blocks in a Simulink model.

`usimfill(ModelName, str)` pushes the string in `str` into the `Uncertainty value` name field of all USS System blocks in the Simulink model specified by `ModelName`.

`usimfill(ModelName, 'Uncertainty value', 'Nominal')` sets the `Uncertainty value` pulldown menu to `Nominal` for all USS System blocks in the Simulink model specified by `ModelName`. Only a limited number of characters are needed to make this specification, so `usimfill(ModelName, 'U', 'N')` accomplishes the same effect.

`usimfill(ModelName, 'Uncertainty value', 'User defined')` sets the `Uncertainty value` pulldown menu to `User defined` for all USS System blocks in the Simulink model specified by `ModelName`. Only a limited number of characters are needed to make this specification, so `usimfill(ModelName, 'U', 'U')` accomplishes the same effect.

**Examples** See Robustness Analysis in Simulink for a more detailed example of how to use `usimfill`.

Open the model file associated with the example.

```
open_system('usim_model');
unc_pole = ureal('unc_pole', -5, 'Range', [-10 -4]);
plant = ss(unc_pole, 5, 1, 1);
input_unc = ultidyn('input_unc', [1 1]);
```

```
wt = makeweight(0.25,130,2.5);  
sensor_gain = ureal('sensor_gain',1,'Range',[0.1 2]);
```

This has three USS System blocks. They are plant with a ureal atom named `unc_pole`; `input_unc` which is a `ultidyn` object, and `sensor_gain` which is a ureal atom.

Run `usimfill` on the model, filling in the field with the string `'newData'`.

```
usimfill('usim_model','newData');
```

View all of the dialog boxes, and see that the string `'newData'` has been entered.

Run `usimfill` on the model, changing the Uncertainty Selection to Nominal.

```
usimfill('usim_model','Uncertainty value','Nominal');
```

Similarly run `usimfill` on the model, changing the Uncertainty Selection to User Specified Uncertainty.

```
usimfill('usim_model','Uncertainty value','User defined');
```

Now generate a random sample of the uncertain atoms, and run the simulation

```
newData = usimsamp('usim_model',120);  
sim('usim_model');
```

## See Also

`usample` | `usiminfo` | `usimsamp` | `usubs`

**Purpose** Find USS System blocks within specified Simulink model and check for consistency

---

**Note** usiminfo will be removed in a future release. Use ufind instead.

---

**Syntax** [cflags,allupaths,allunames,upaths,unames,csumchar]  
= usiminfo(sname, silent)

**Description** The command usiminfo returns information regarding the locations of all USS System blocks within a Simulink model and determines if these compatibility conditions are satisfied. It is possible to have uncertain objects of the same name through out a Simulink model. The helper functions usimsamp and usimfill assume that these are the same uncertainty. Hence uncertain objects of the same name should have the same object properties and Uncertainty value in the USS System pull-down menu. usiminfo provides information about the uncertainty in the Simulink diagram sname.

The following describes the input and outputs arguments of usiminfo:

Input Arguments	Description
sname	Simulink diagram name
silent	Display inconsistencies between uncertain atoms, when not empty. Default is empty.

Output Arguments	Description
cflag	Compatibility flag set to 1 if all uncertainties are consistent, set to 0 if an uncertainty definition(s) is consistent and set to -1 if common uncertainties in different blocks have different Uncertainty value.
allupaths	Path names of USS System blocks in the model (cell).

# usiminfo

---

<b>Output Arguments</b>	<b>Description</b>
allunames	Uncertainties names in Simulink model (cell).
upaths	Path names associated with each allunames entry (cell).
unames	Uncertainty names associated with each allupaths entry (cell).
csumchar	Character array with description of uncertainties and their associated block path names. Empty if there is a conflict with unames.

## See Also

usample | usimfill | usimsamp | usubs

**Purpose** Generate random instance of all uncertain atoms present in all USS System blocks of Simulink model

---

**Note** usimsamp will be removed in a future release. Use usample instead.

---

**Syntax**

```
sample = usimsamp(ModelName)
sample = usimsamp(ModelName,BW)
```

**Description** The command usimsamp samples a Simulink model. Note that if the model contains any USS System blocks, then the model can be interpreted as an uncertain Simulink model. The sample generated by usimsamp is a scalar structure, with fieldnames corresponding to the uncertain atoms within all of the USS System blocks, and the values are specific random samples of the atoms.

For ultidyn atoms, the magnitude of the sampled poles can be limited using an optional second bandwidth argument, BW. See usample for more information on this parameter.

**Examples** See Robustness Analysis in Simulink for a more detailed example of how to use usimsamp.

Open the model file associated with the example.

```
open_system('usim_model');
```

This has 3 USS System blocks. They are plant with a ureal atom named unc\_pole; input\_unc which is a ultidyn object, and sensor\_gain which is a ureal atom.

Run usimsamp on the model, yielding a structure as described above.

```
unc_pole = ureal('unc_pole',-5,'Range',[-10 -4]);
plant = ss(unc_pole,5,1,1);
input_unc = ultidyn('input_unc',[1 1]);
```

# usimsamp

---

```
wt = makeweight(0.25,130,2.5);
sensor_gain = ureal('sensor_gain',1,'Range',[0.1 2]);
data = usimsamp('usim_model')
data =
    input_unc: [1x1 ss]
    sensor_gain: 0.9935
    unc_pole: -4.1308
```

## See Also

[usample](#) | [usimfill](#) | [usiminfo](#) | [usubs](#)



**Purpose** Specify uncertain state-space models or convert LTI model to uncertain state-space model

**Syntax**

```

usys = uss(a,b,c,d)
usys = uss(a,b,c,d,Ts)
usys = uss(d)
usys = uss(a,b,c,d,Property,Value,...)
usys = uss(a,b,c,d,Ts,Property,Value,...)
usys = uss(sys)

```

**Description** `uss` creates uncertain state-space models (`uss` objects) or to convert LTI models to the `uss` class.

`usys = uss(a,b,c,d)` creates a continuous-time uncertain state-space object. The matrices `a`, `b`, `c` and `d` can be `umat` and/or `double` and/or uncertain atoms. These are the 4 matrices associated with the linear differential equation model to describe the system.

`usys = uss(a,b,c,d,Ts)` creates a discrete-time uncertain state-space object with sampling time `Ts`.

`usys = uss(d)` specifies a static gain matrix and is equivalent to `usys = uss([],[],[],d)`.

Any of these syntaxes can be followed by property name/property value pairs.

`usys = uss(a,b,c,d,'P1',V1,'P2',V2,...)` set the properties `P1`, `P2`, ... to the values `V1`, `V2`, ...

`usys = uss(sys)` converts an arbitrary `ss`, `tf` or `zpk` model `sys` to an uncertain state-space object without uncertainties. Both `usys.NominalValue` and `simplify(usys,'class')` are the same as `ss(sys)`.

**Examples** You can first create two uncertain atoms and use them to create two uncertain matrices. These four matrices can be packed together to form a 1-output, 1-input, 2-state continuous-time uncertain state-space system.

```
p1 = ureal('p1',5,'Range',[2 6]);
p2 = ureal('p2',3,'Plusminus',0.4);
A = [-p1 0;p2 -p1];
B = [0;p2];
C = [1 1];
usys = uss(A,B,C,0);
```

In the second example, you can convert a not-uncertain `tf` model to an uncertain state-space model without uncertainties. You can verify the equality of the nominal value of the `usys` object and simplified representation to the original system.

```
G = tf([1 2 3],[1 2 3 4]);
usys = uss(G)
USS: 3 States, 1 Output, 1 Input, Continuous System
isequal(usys.NominalValue,ss(G))
ans =
    1
isequal(simplify(usys,'class'),ss(G))
ans =
    1
```

**See Also**`frd | ss`

**Purpose** Substitute given values for uncertain elements of uncertain objects

**Syntax**

```

B = usubs(M,atomname1,value1,atomname2,value2,...)
B = usubs(M,{atomname1;atomname2;...},{value1;value2;...})
B = usubs(M,StrucArray)
B = usubs(M,atomname1,value1,atomname2,value2,...)
B = usubs(M,ElementName1,value1,ElementName2,value2,...)
B = usubs(M,S)
B = usubs(M,...,'-once')
B = usubs(M,...,'-batch')
```

**Description** Use `usubs` to substitute a specific value for an uncertain element of an uncertain model object. The value can itself be uncertain. It needs to be the correct size, but otherwise can be of any class, and can be an array. Hence, the result can be of any class. In this manner, uncertain elements act as symbolic placeholders, for which specific values (which can also contain other placeholders too) can be substituted.

`B = usubs(M,ElementName1,value1,ElementName2,value2,...)` sets the elements in `M`, identified by `ElementName1`, `ElementName2`, etc., to the values in `value1`, `value2`, etc. respectively.

Any value can also be the string `'NominalValue'` or `'Random'` (or only partially specified) in which case the nominal value, or a random instance of the atom is used.

`B = usubs(M,S)` instantiates the uncertain elements of `M` to the values specified in the structure `S`. The field names of `S` are the names of the uncertain elements to replace. The values are the corresponding replacement values. To provide several replacement values, make `S` a struct array, where each struct contains one set of replacement values. A structure such as `S` typically comes from robustness analysis commands such as `robuststab`, `usample`, or `wcgain`.

`B = usubs(M,...,'-once')` performs vectorized substitution in the uncertain model array `M`. Each uncertain element is replaced by a single value, but this value may change across the model array. To specify different substitute values for each model in the array `M`, use:

- A cell array for each `valueN` that causes the uncertain element `ElementNameN` in `M(:, :, k)` to be replaced by `valueN(k)`. For example, if `M` is a 2-by-3 array, then a 2-by-3 cell array `value1` replaces `ElementName1` of the model `M(:, :, k)` with the corresponding `value1(k)`.
- A struct array `S` that specifies one set of substitute values `S(k)` for each model `M(:, :, k)`.

Numeric array formats are also accepted for `value1, value2, ...`. For example, `value1` can be a 2-by-3 array of LTI models, a numeric array of size `[size(name1) 2 3]`, or a 2-by-3 matrix when the uncertain element `name1` is scalar-valued. The array sizes of `M, S, value1, value2, ...` must agree along non-singleton dimensions. Scalar expansion takes place along singleton dimensions.

Vectorized substitution (`'-once'`) is the default for model arrays when no substitution method is specified.

`B = usubs(M, ..., '-batch')` performs batch substitution in the uncertain model array `M`. Each uncertain element is replaced by an array of values, and the same values are used for all models in `M`. In batch substitution, `B` is a model array of size `[size(M) VS]`, where `VS` is the size of the array of substitute values.

## Examples

### Evaluate Uncertain Matrix for Multiple Values of Uncertain Parameters

Evaluate an uncertain matrix at several different values of the uncertain parameters of the matrix.

Create an uncertain matrix with two uncertain parameters.

```
a = ureal('a',5);  
b = ureal('b',-3);  
M = [a b];
```

Evaluate the matrix at four different combinations of values for the uncertain parameters `a` and `b`.

```
B = usubs(M, 'a', [1;2;3;4], 'b', [10;11;12;13]);
```

This command evaluates M for the four different (a,b) combinations (1,10), (2,11), and so on. Therefore, B is a 1-by-2-by-4 array of numeric values containing the four evaluated values of M.

### Evaluate Uncertain Matrix over Grid of Uncertain Parameters

Evaluate an uncertain matrix over a 3-by-4 grid of values of the uncertain parameters of the matrix.

Create a 2-by-2 uncertain matrix with two uncertain parameters.

```
a = ureal('a',5);
b = ureal('b',-3);
M = [a b;0 a*b];
```

Build arrays of values for the uncertain parameters.

```
aval = [1;2;3;4];
bval = [10;20;30];
[as,bs] = ndgrid(aval,bval);
```

This command builds two 4-by-3 grids of values.

Evaluate M over the parameter grids A and B.

```
B = usubs(M, 'a', as, 'b', bs);
```

This command evaluates M for each four different combination of values (A(k),B(k)) B is a 2-by-2-by-4-by-3 array of numeric values, which is a 4-by-3 array of values of M, i.e., M evaluated over the parameter grids.

### Instantiate Uncertain Parameter by Batch Substitution of Parameter for Array of Values

Evaluate an array of uncertain models, substituting an array of values for an uncertain parameter.

Create a 1-by-2 uncertain matrix with two uncertain parameters.

```
a = ureal('a',5);  
b = ureal('b',-3);  
M = [a b];
```

Replace a by each of the values 1, 2, 3, and 4.

```
Ma = usubs(M, 'a', [1;2;3;4]);
```

This command returns a 4-by-1 array of 1-by-2 uncertain matrices that contain one uncertain parameter b.

For each model in the array Ma, evaluate b at 10, 20, and 30.

```
B = usubs(Ma, 'b', [10;20;30], '-batch');
```

The '-batch' flag causes usubs to evaluate each model in the array at all three values of b. Thus B is a 4-by-3 array of M values.

The '-batch' syntax here yields the same result as the parameter grid approach used in the previous example:

```
aval = [1;2;3;4];  
bval = [10;20;30];  
[as,bs] = ndgrid(aval,bval);  
B = usubs(M, 'a', as, 'b', bs);
```

## **Instantiate Uncertain Parameter Using Different Value for Each Entry in Array**

Evaluate an array of uncertain models, substituting a different value for the uncertain parameter in each entry in the array.

Create a 1-by-2 uncertain matrix with two uncertain parameters.

```
a = ureal('a',5);  
b = ureal('b',-3);  
M = [a b];
```

Replace a by each of the values 1, 2, 3, and 4.

```
Ma = usubs(M, 'a', [1;2;3;4]);
```

This command returns a 4-by-1 array of 1-by-2 uncertain matrices that contain one uncertain parameter `b`.

For each model in the array `Ma`, evaluate `b`. Use `b = 10` for the first entry in the array, `b = 20` for the second entry, and so on.

```
B = usubs(Ma, 'b', {10;20;30;40}, '-once');
```

The `'-once'` flag causes `usubs` to evaluate the first model in the array using the first specified value for `b`, the second model for the second specified value, etc.

### **Replace Uncertain Parameters with Values Returned by `usample`**

Replace the uncertain parameters in an uncertain models by values specified in struct array form, as returned by `usample`.

This is useful, for example, when you have multiple uncertain models that use the same set of parameters, and you want to evaluate all models at the same parameter values.

Create two uncertain matrices that have the same uncertain parameters, `a` and `b`.

```
a = ureal('a',5);  
b = ureal('b',-3);  
M1 = [a b];  
M2 = [a b;0 a*b];
```

Generate some random samples of `M1`.

```
[M1rand,samples] = usample(M1,5);
```

`M1rand` is an array of five values of `M1`, evaluated at randomly generated values of `a` and `b`. These `a` and `b` values are returned in the struct array `samples`.

Examine the struct array `samples`.

```
samples
```

```
samples =
```

```
5x1 struct array with fields:
```

```
    a
```

```
    b
```

The field names of `samples` correspond to the uncertain parameters of `M1`. The values are the parameter values used to generate `M1rand`. Because `M2` has the same parameters, you can use this structure to evaluate `M2` at the same set of values.

```
M2rand = usubs(M2,samples);
```

This command returns a 1-by-5 array of instantiations of `M2`.

## See Also

```
gridureal | usample | simplify
```



<b>Purpose</b>	View tuning requirements; validate design against requirements
<b>Syntax</b>	<code>viewSpec(Req)</code> <code>viewSpec(Req,T)</code> <code>viewSpec(Req,T,Info)</code>
<b>Description</b>	<p><code>viewSpec(Req)</code> displays a graphical view of a <code>TuningGoal</code> tuning requirement or vector of tuning requirements.</p> <p><code>viewSpec(Req,T)</code> plots the performance of a tuned control system against the tuning requirement.</p> <p><code>viewSpec(Req,T,Info)</code> uses the <code>Info</code> structure returned by <code>systeme</code> for correct scaling of MIMO open-loop requirements, such as loop shapes and stability margins.</p>
<b>Input Arguments</b>	<p><b>Req - Tuning requirement to view or validate</b> <code>TuningGoal</code> requirement object   vector of <code>TuningGoal</code> objects</p> <p>Tuning requirement to view or validate, specified as a <code>TuningGoal</code> requirement object or vector of <code>TuningGoal</code> objects. <code>TuningGoal</code> requirement objects include:</p> <ul style="list-style-type: none"><li>• <code>TuningGoal.Tracking</code></li><li>• <code>TuningGoal.Gain</code></li><li>• <code>TuningGoal.WeightedGain</code></li><li>• <code>TuningGoal.Variance</code></li><li>• <code>TuningGoal.WeightedVariance</code></li><li>• <code>TuningGoal.LoopShape</code></li><li>• <code>TuningGoal.Margins</code></li><li>• <code>TuningGoal.Poles</code></li><li>• <code>TuningGoal.StableController</code></li></ul>

## **T - Tuned control system**

generalized state-space model | sITuner interface object

Tuned control system, specified as a generalized state-space (genss) model or an sITuner interface to a Simulink model.

The control system, T, is typically the result of using the tuning requirement to tune control system parameters with systune.

**Example:** [T,fSoft,gHard,Info] = systune(T0,SoftReq,HardReq), where T0 is a tunable genss model

**Example:** [T,fSoft,gHard,Info] = systune(ST0,SoftReq,HardReq), where ST0 is a sITuner interface object

## **Info - System information**

data structure returned by systune

System information, specified as the data structure returned by systune when you use that command to tune a control system. Use Info when validating tuned MIMO systems, to ensure that viewSpec correctly scales open-loop requirements such as loop shapes and stability margins.

## **Examples**

### **Visualize Tuning Requirement as Function of Frequency**


Create a tuning requirement that constrains the response from a signal, 'd', to another signal, 'y', to roll off at 20 dB/decade at frequencies greater than 1. The requirement also imposes disturbance rejection (maximum gain of 1) in the frequency range [0,1].

```
gmax = frd([1 1 0.01],[0 1 100]);  
Req = TuningGoal.MaxGain('du','u',gmax);
```

When you use a frequency response data (frd) model to sketch the bounds of a gain constraint or loop shape, the tuning requirement interpolates the constraint. This interpolation converts the constraint to a smooth function of frequency.

Examine the interpolated gain constraint using viewSpec.

```
viewSpec(Req)
```

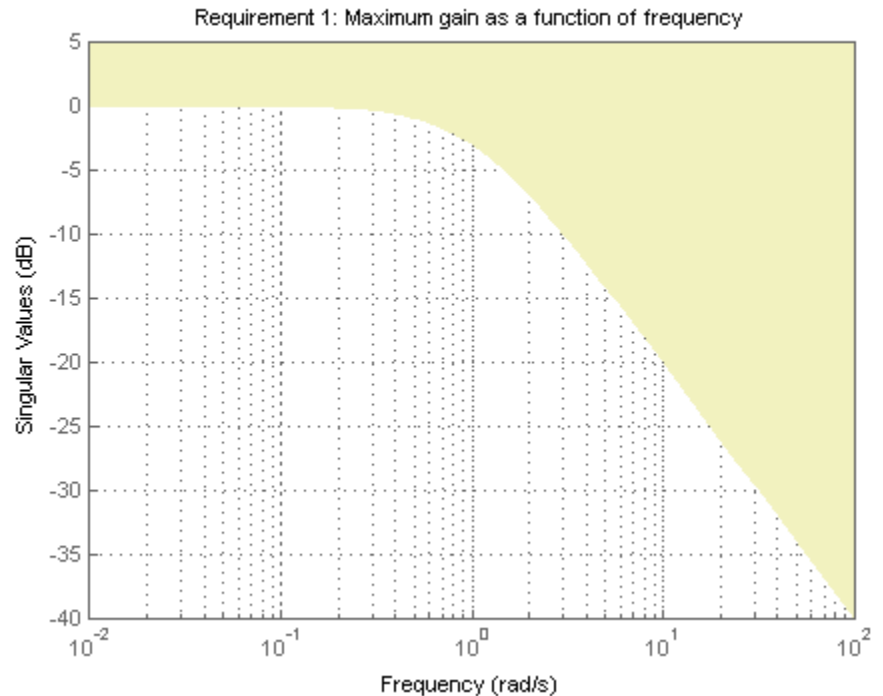

The yellow region represents gain values that violate the tuning requirement.

### Validate Tuning Result Against Requirements


Validate a control system tuned with `systemtune` to determine whether small violations of tuning requirements are acceptable.

When you tune a control system using tuning commands such as `systemtune`, use `viewSpec` to compare the tuned result against the tuning

requirements. Doing so can help you determine whether the tuned system comes sufficiently close to meeting your soft requirements.

Create tracking, roll-off, stability margin, and disturbance rejection requirements for tuning the following control system.

Two-loop autopilot for controlling the vertical acceleration of an airframe

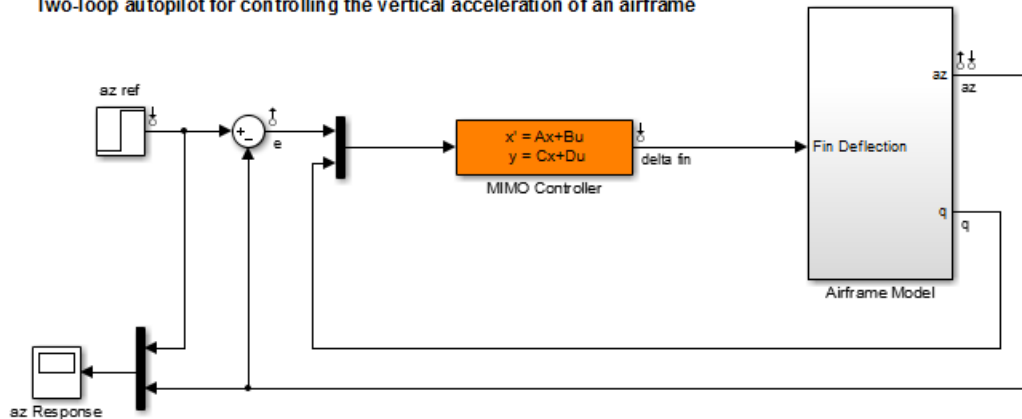

```
Req1 = TuningGoal.Tracking('az ref','az',1);
Req2 = TuningGoal.Gain('delta fin','delta fin',tf(25,[1 0]));
Req3 = TuningGoal.Margins('delta fin',7,45);
MaxGain = frd([2 200 200],[0.02 2 200]);
Req4 = TuningGoal.Gain('delta fin','az',MaxGain);
```

Tune the model using these tuning requirements.

```
open_system('rct_airframe2')
```

```
ST0 = sITuner('rct_airframe2','MIMO Controller');
addControl(ST0,'delta fin');
```


```
rng('default');
[ST1,fSoft,~,Info] = systune(ST0,[Req1,Req2,Req3,Req4]);
```

```
Final: Soft = 1.15, Hard = -Inf, Iterations = 72
```

ST1 is a tuned version of the sITuner interface to the control system. ST1 contains the tuned values of the tunable parameters of the MIMO controller in the model.

Verify that the tuned system satisfies the margin requirement.

```
viewSpec(Req3,ST1,Info)
```

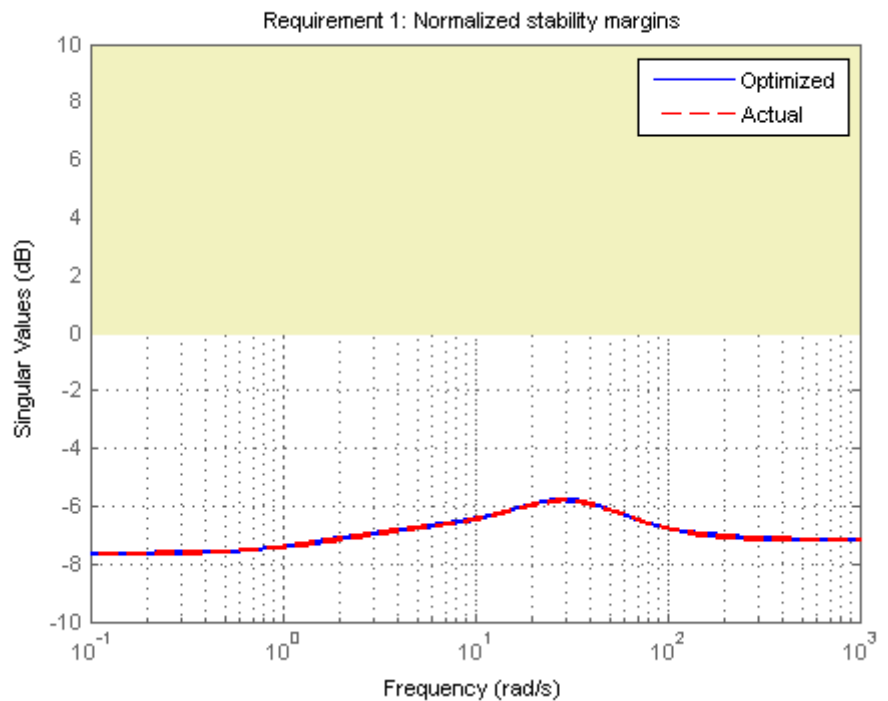



The yellow region denotes margins that do not satisfy the requirement. The red plot represents the actual stability margin of the tuned system, ST1. The blue plot represents the margin used in the optimization calculation, which is an upper bound on the actual margin. For ST1, the plot indicates that the margin requirement is satisfied at all frequencies.

## viewSpec

---

Validate the tracking and disturbance rejection requirements in the frequency domain.

```
viewSpec([Req1,Req4],ST1,Info)
```

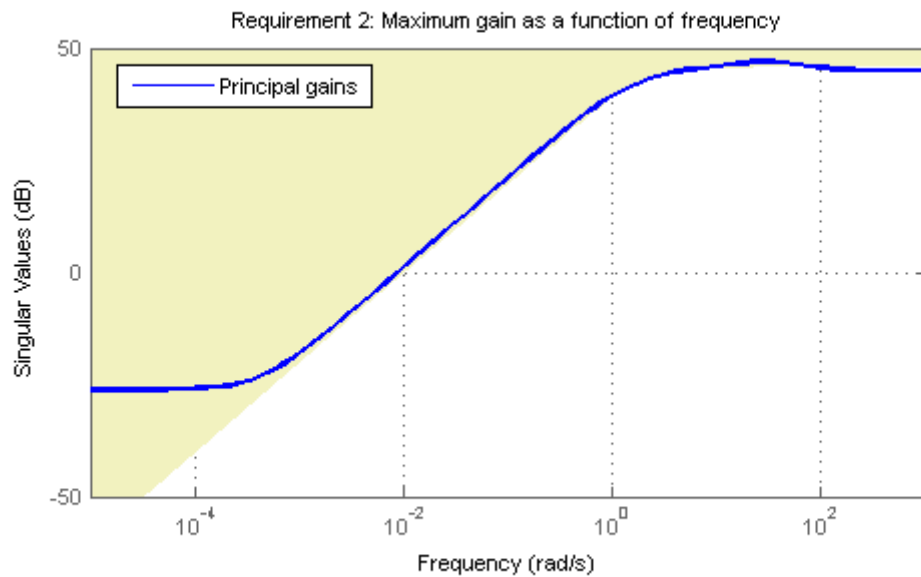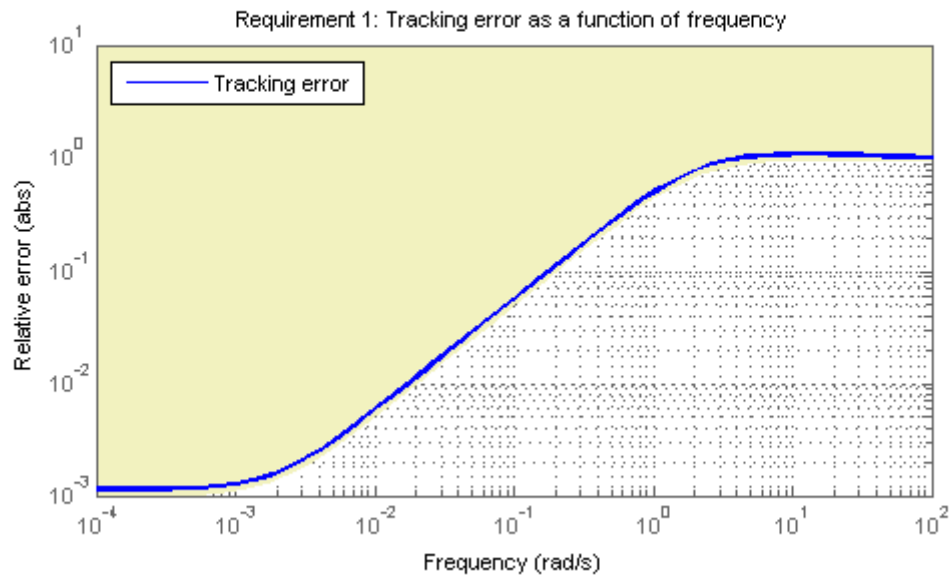

When you provide a vector of requirements, `viewSpec` puts all the requirements into a single figure window.

The first plot shows that the tuned system very nearly meets the tracking requirement. The slight violation suggests that setpoint tracking will perform close to expectations.

The second plot shows that the disturbance rejection levels off in violation of the requirement at very low frequencies. A small bump near 35 rad/s suggests possible damped oscillations at this frequency.

Use `step` and `getIOTransfer` to examine setpoint tracking and disturbance rejection in the time domain.

## See Also

`sysTune` | `genss` | `evalSpec` | `sysTune` (for `sITuner`) | `sITuner` | `TuningGoal.Tracking` | `TuningGoal.Gain` | `TuningGoal.Sensitivity` | `TuningGoal.Overshoot` | `TuningGoal.MinLoopGain` | `TuningGoal.MaxLoopGain` | `TuningGoal.Margins` | `TuningGoal.WeightedGain` | `TuningGoal.Variance` | `TuningGoal.WeightedVariance` | `TuningGoal.LoopShape` | `TuningGoal.Poles` | `TuningGoal.StableController`

## Concepts

- “Generalized Models”



**Purpose**

Calculate bounds on worst-case gain of uncertain system


**Syntax**

```
[wcg,wcu,info] = wcgain(sys)
[wcg,wcu,info] = wcgain(sys,opts)
```

**Description**


The gain of an uncertain system generally depends on the values of its uncertain elements. Here “gain” refers to the frequency response magnitude. (For multi-input, multi-output systems, the “gain” refers to the maximum singular value of the frequency response matrix.) Determining the maximum gain over all allowable values of the uncertain elements is referred to as a *worst-case gain* analysis. This maximum gain is called the *worst-case gain*.

The following figure shows the frequency response magnitude of many samples of an uncertain system model.

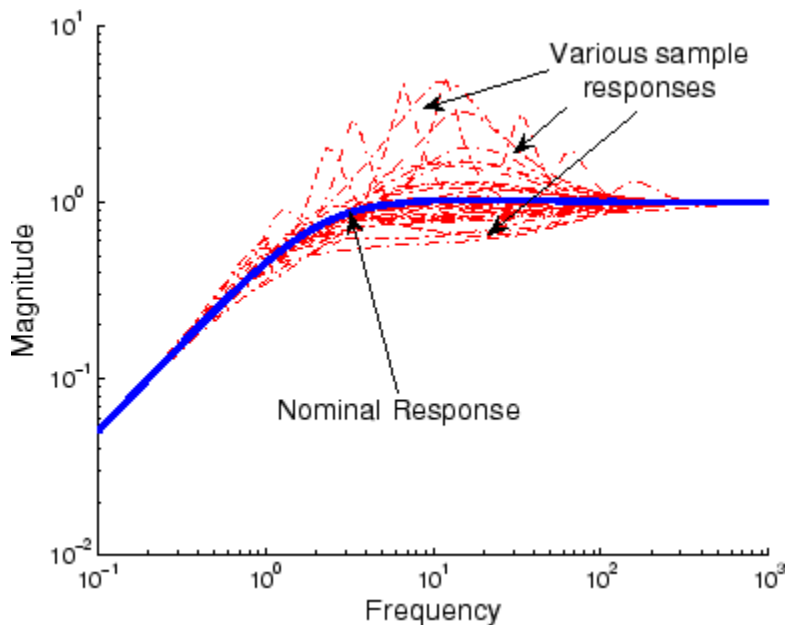


wcgain can perform two types of analysis on uncertain systems.

- A *max-over-frequency* worst-case gain analysis yields the frequency-dependent curve of maximum gain, shown in the figure below.

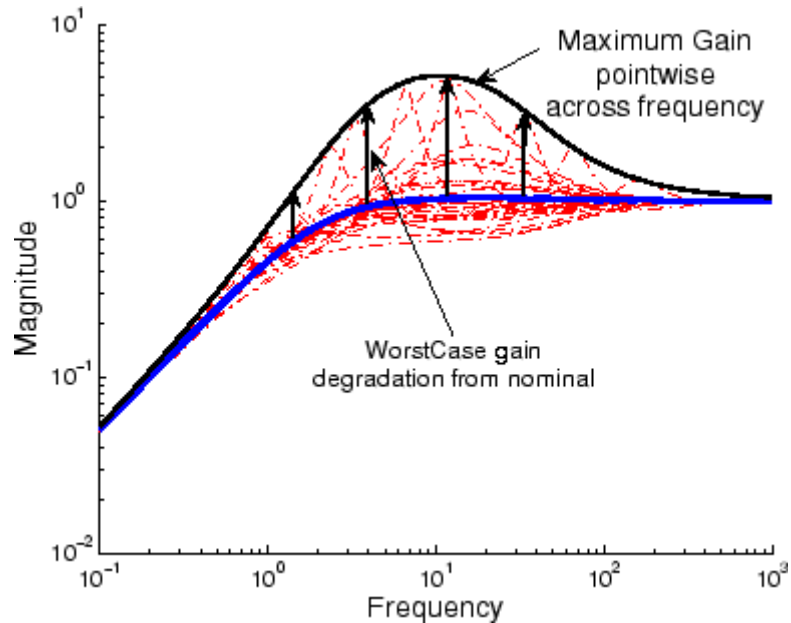

This plot shows the maximum frequency-response magnitude at each frequency due to the uncertain elements within the model.

- A *peak-over-frequency* worst-case gain analysis only aims to compute the largest value of the frequency-response magnitude across all frequencies. During such an analysis, large frequency ranges can be quickly eliminated from consideration, thus reducing the computation time.

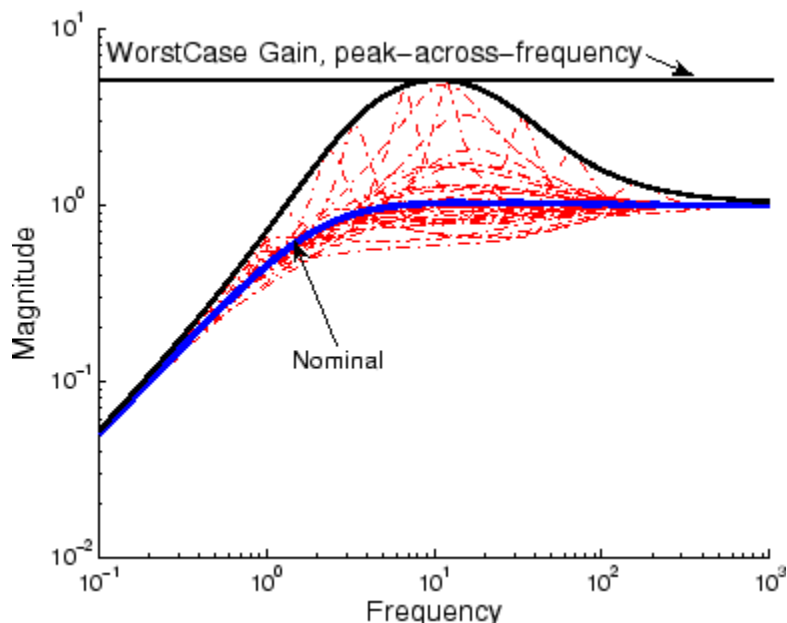

The default analysis performed by `wcgain` is *max-over-frequency*. You can control which analysis is performed by using the `MaxOverFrequency` option in the `wcgainOptions` options set.

Likewise, for arrays of uncertain models, the default `wcgain` analysis is *max-over-array*. This means that `wcgain` computes the worst-case gain over all models in the array. To compute the worst-case gain for each model separately, set the `MaxOverArray` option in the `wcgainOptions` options set to 'off'.

As with other *uncertain-system* analysis tools, only bounds on the worst-case gain are computed. The exact value of the worst-case gain is guaranteed to lie between these upper and lower bounds.

The computation used in `wcgain` is a frequency-domain calculation. If the input system `sys` is an uncertain frequency response object (`ufrd`), then the analysis is performed on the frequency grid within the `ufrd`. If the input system `sys` is an uncertain state-space object (`uss`), then

an appropriate frequency grid is generated (automatically), and the analysis performed on that frequency grid. In all descriptions below,  $N$  denotes the number of points in the frequency grid.

## Basic Syntax

Suppose `sys` is an `ufrd` or `uss` with  $M$  uncertain elements. Calculate the worst-case gain of `sys`.

```
[wcg,wcu] = wcgain(sys)
```

`wcg` is a structure with the following fields

Field	Description
LowerBound	Lower bound on worst-case gain, positive scalar.
UpperBound	Upper bound on worst-case gain, positive scalar. If the nominal value of the uncertain system is unstable, then <code>maxgain.LowerBound</code> and <code>maxgain.UpperBound</code> equal $\infty$ .
CriticalFrequency	The critical value of frequency at which maximum gain occurs (this is associated with <code>maxgain.LowerBound</code> ).

`wcu` is a structure containing values of uncertain elements that yield the worst-case uncertainty. There are  $M$  field names, which are the names of uncertain elements of `sys`. The value of each field is the corresponding value of the uncertain element, such that when combined lead to the gain value in `maxgain.LowerBound`. The command

```
norm(usubs(sys,maxgainunc),'inf')
```

shows the gain.

**Examples****Worst-Case Performance of Closed-Loop Uncertain System**

To examine the worst-case performance of an uncertain control system, create a plant with nominal model of an integrator, and include additive unmodeled dynamics uncertainty of a level of 0.4 (this corresponds to 100% model uncertainty at 2.5 rad/s). Then design a proportional controller K1 that puts the nominal closed-loop bandwidth at 0.8 rad/s. Roll off K1 at a frequency 25 times the nominal closed-loop bandwidth. Repeat the design for a controller K2 that puts the nominal closed-loop bandwidth at 2.0 rad/s. In each case, form the closed-loop sensitivity function.

```
P = tf(1,[1 0]) + ultidyn('delta',[1 1],'bound',0.4);
BW1 = 0.8;
K1 = tf(BW1,[1/(25*BW1) 1]);
S1 = feedback(1,P*K1);
BW2 = 2.0;
K2 = tf(BW2,[1/(25*BW2) 1]);
S2 = feedback(1,P*K2);
```

Assess the worst-case gain of the closed-loop sensitivity functions.

```
[maxgain1,wcunc1] = wcgain(S1);
[maxgain2,wcunc2] = wcgain(S2);
```

```
maxgain1, maxgain2
```

```
maxgain1 =
```

```
LowerBound: 1.5069
UpperBound: 1.5071
CriticalFrequency: 5.0420
```


```
maxgain2 =
```

```
LowerBound: 5.1032
```

```
UpperBound: 5.1032  
CriticalFrequency: 10.8022
```

The `maxgain` variables indicate that controller K1 achieves better worst-case performance than K2. Plot Bode magnitude plots of the nominal closed-loop sensitivity functions, as well as the worst instances, using `usubs` to replace the uncertain element with the worst value returned by `wcgain`.

```
bodemag(S1.Nom, 'r--', usubs(S1, wcunc1), 'r', S2.Nom, 'b--', ...  
        usubs(S2, wcunc2), 'b')  
legend('Nominal S1', 'Worst Case S1', 'Nominal S2', 'Worst Case S2', ...  
       'Location', 'SouthEast')
```

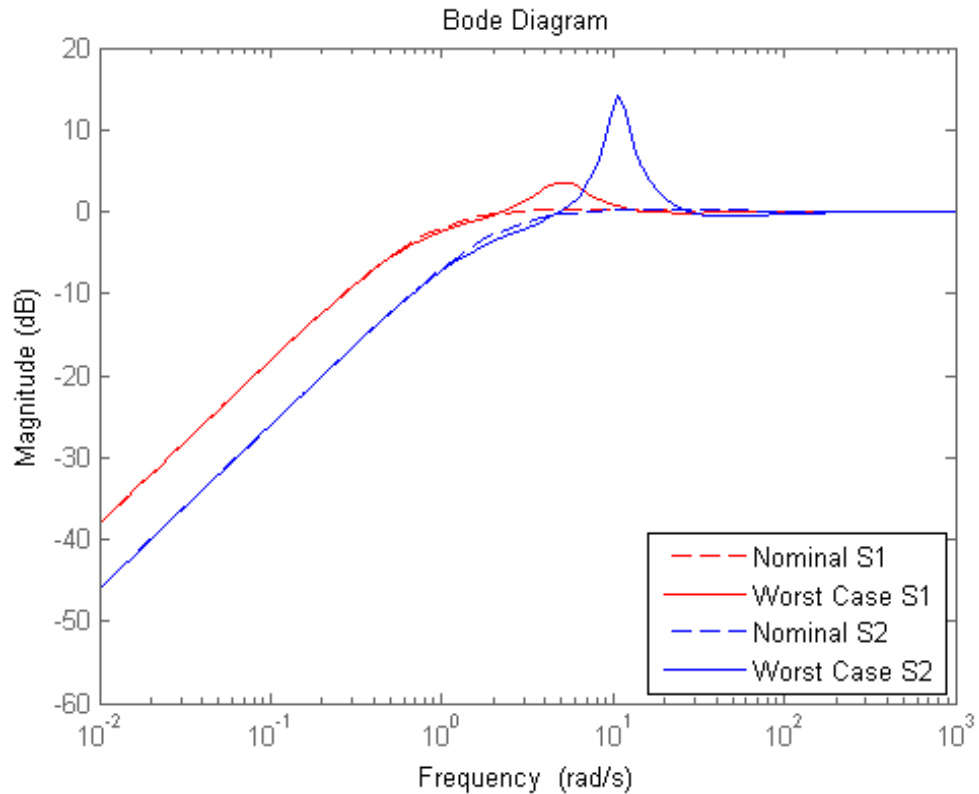

Although the nominal closed-loop sensitivity resulting from K2 is superior to that with K1, the worst-case behavior is much worse.

### Basic Syntax with Third Output Argument

A third output argument yields more specialized information, including sensitivities of the worst-case gain to the uncertain element's ranges and frequency-by-frequency information.

```
[wcg,wcu,info] = wcgain(sys)
```

The third output argument `info` is a structure with the following fields

Field	Description
Sensitivity	A struct with $M$ fields. Field names are names of uncertain elements of <code>sys</code> . Values of fields are positive numbers, each entry indicating the local sensitivity of the worst-case gain in <code>maxgain.LowerBound</code> to all the individual uncertain element's uncertainty ranges. For instance, a value of 25 indicates that if the uncertainty range is enlarged by 8%, then the worst-case gain should increase by about 2%. If the <code>Sensitivity</code> property of the <code>wcgainOptions</code> object is 'off', the values are NaN.
Frequency	$N$ -by-1 frequency vector associated with analysis.
BadUncertainValues	Structure of worst-case uncertainty values.
ArrayIndex	1-by-1 scalar matrix whose value is 1. In more complicated situations (described later) the value of this field is dependent on the input data.

## Specifying Additional Options

Use `wcgainOptions` to specify additional options for the worst-case gain computation. For example, you can turn the sensitivity computation on or off, set the step-size in the sensitivity computation, adjust the stopping criteria, or control behavior across frequency and array dimensions. For instance, you can turn the sensitivity calculation off as follows:

```
opt = wcgainOptions('Sensitivity','off');  
[maxgain,maxgainunc,info] = wcgain(sys,opt)
```

To compute the worst-case gain as a function of frequency, set the `MaxOverFrequency` option to 'off'.

For a model array `sys`, set the `MaxOverFrequency` option to 'off' to compute the worst-case gain for each individual model in the array.

See the `wcgainOptions` reference page for more information about available options for `wcgain`.



## Behavior on Non-Uncertain Systems

wcgain can also be used on not-uncertain systems (e.g., `ss` and `frd`). If `sys` is a single `ss` or `frd`, then the worst-case gain is simply the gain of the system (identical to `norm(sys, 'inf')`). However, if `sys` has array dimensions, then the possible combinations of “peak-over” and “max-over” can be used to customize the computation.

## Algorithms

The worst-case gain is guaranteed to be at least as large as `LowerBound` (some value of allowable uncertain elements yield this gain – one instance is returned in the structure `maxgainunc`. The frequency at which the gain in `LowerBound` occurs is in `CriticalFrequency`. Lower bounds for `wcgain` are computed using a power iteration on `ultidyn`, `ucomplex` and `ucomplexm` uncertain atoms, (holding uncertain real parameters fixed) and a coordinate aligned search on the uncertain real parameters (while holding the complex blocks fixed).

Similarly, the worst-case gain is guaranteed to be no larger than `UpperBound`. In other words, for all allowable modeled uncertainty, the gain is provably less than or equal to `UpperBound`. These bounds are derived using the upper bound for the structured singular value, which is essentially optimally-scaled, small-gain theorem analysis. Upper bounds are obtained by solving a semidefinite program. `wcgain` uses branch and bound on the uncertain real parameters to tighten the lower and upper bounds.

## Limitations

Because the calculation is carried out with a frequency grid, it is possible (likely) that the true critical frequency is missing from the frequency vector used in the analysis. This is similar to the problem in `robuststab`. However, compared with `robuststab`, the problem in `wcgain` is less acute. Thought of as a function of problem data and frequency, the worst-case gain is a continuous function (unlike the robust stability margin, which in special cases is not; see *Getting Reliable Estimates of Robustness Margins*). Hence, in worst-case gain calculations, increasing the density of the frequency grid will always increase the accuracy of the answers and in the limit, answers arbitrarily close to the actual answers are obtainable with finite frequency grids.

# wcgain

---

**Alternatives** Use `wcgainplot` to plot the worst-case gain of an uncertain system.

**See Also** `mussv` | `norm` | `robuststab` | `wcgainOptions` | `wcsens` | `wcmargin` | `wcgainplot` | `robustperf`

## Purpose

Option set for `wcgain`, `wcgainplot`, `wcnorm`, or `wcsens`

## Syntax

```
opt = wcgainOptions
opt = wcgainOptions(Name,Value,...)
```

## Description

`opt = wcgainOptions` returns the default option set for a `wcgain` calculation. The commands `wcgainplot`, `wcnorm`, and `wcsens` also use `wcgain` to compute their results. Use a `wcgainOptions` options set to control options for those calculations.

`opt = wcgainOptions(Name,Value,...)` creates an option set with the options specified by one or more `Name,Value` pair arguments.

## Input Arguments

### Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name,Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

### 'Sensitivity'

Determines whether to compute the sensitivity of worst-case gain with respect to each individual uncertain element.

`Sensitivity` is a string that takes the following values:

- 'on' — `wcgain` computes the sensitivity of the worst-case gain with respect to each individual uncertain element. This provides an indication of which elements are most problematic.
- 'off' — `wcgain` does not compute the sensitivity of the worst-case gain with respect to each individual uncertain element.

**Default:** 'on'

### 'VaryUncertainty'

# wcgainOptions

---

Percentage variation of uncertainty for sensitivity calculations. The sensitivity estimate uses a finite difference calculation.

**Default:** 25

## **'LowerBoundOnly'**

Determines whether only the lower bound is computed.

LowerBoundOnly is a string that takes the following values:

- 'on' — wcgain only computes a lower bound on the worst-case gain
- 'off' — wcgain computes lower and upper bounds on the worst-case gain

**Default:** 'off'

## **'MaxOverFrequency'**

MaxOverFrequency is a string that takes the following values:

- 'on' — wcgain computes the worst-case  $H_\infty$  norm (peak gain over frequency)
- 'off' — wcgain computes the worst-case gain at each frequency point

**Default:** 'on'

## **'MaxOverArray'**

For uncertain model arrays, determines if worst-case gain is calculated over entire array or individually for all models in array.

MaxOverArray is a string that takes the following values:

- 'on' — wcgain computes the worst-case gain over all models
- 'off' — wcgain computes the worst-case gain for each model individually

**Default:** 'on'

## **'AbsTol'**

Absolute tolerance on computed bound.

The algorithm terminates if  $\text{UpperBound} - \text{LowerBound} \leq \max(\text{AbsTol}, \text{RelTol} * \text{UpperBound})$ .

Relaxing tolerance speeds up the computation.

**Default:** 0.02

## **'RelTol'**

Relative tolerance on computed bound.

The algorithm terminates if  $\text{UpperBound} - \text{LowerBound} \leq \max(\text{AbsTol}, \text{RelTol} * \text{UpperBound})$ .

**Default:** 0.05

## **'AbsMax'**

Absolute threshold for lower bound.

The algorithm terminates if  $\text{LowerBound} \geq \text{AbsMax} + \text{RelMax} * \text{NominalGain}$ .

Specify `AbsMax` and `RelMax` to terminate when the lower bound is large enough compared to the nominal gain.

**Default:** 5

## **'RelMax'**

Relative threshold for lower bound.

The algorithm terminates if  $\text{LowerBound} \geq \text{AbsMax} + \text{RelMax} * \text{NominalGain}$ .

# wcgainOptions

---

Specify `AbsMax` and `RelMax` to terminate when the lower bound is large enough compared to the nominal gain.

**Default:** 20

## **'NSearch'**

Number of lower bound searches at each frequency

**Default:** 2

## **Output Arguments**

### **opt**

Option set containing the specified options for `wcgain`.

## **Examples**

Create an options set for `wcgain` with only the lower bound being calculated and 5 lower bound searches at each frequency.

```
opt = wcgainOptions('LowerBoundOnly','on','Nsearch',5)
```

Alternatively, use dot notation to set the values of `opt`.

```
opt = wcgainOptions;  
opt.LowerBound = 'on';  
opt.NSearch = 5;
```

## **See Also**

`wcgain` | `wcgainplot` | `wcnorm` | `wcsens`

## Purpose

Graphical worst-case gain analysis

## Syntax

```
wcgainplot(sys)
wcgainplot(sys,w)
wcgainplot(sys,...,options)
```

## Description

`wcgainplot(sys)` plots the nominal and worst-case gains of the uncertain system `sys` as a function of frequency. For multi-input, multi-output (MIMO) systems, gain refers to the largest singular value of the frequency response matrix. (See `sigma` for more information about singular values.) The plot includes:

- Nominal — nominal gain of `sys`
- Worst — the response falling within the uncertainty of `sys` that has the highest peak gain
- Worst-case gain (lower bound) — the lowest worst-case gain at each frequency
- Worst-case gain (upper bound) — the highest gain within the uncertainty at each frequency
- Sampled Uncertainty — 20 responses randomly sampled from `sys`

`wcgainplot(sys,w)` focuses the plot on the frequencies specified by `w`.

- If `w` is a cell array `{wmin,wmax}`, `wcgainplot` plots the worst-case gains in the range `{wmin,wmax}`.
- If `w` is an array of frequencies, `wcgainplot` plots the worst-case gains at each frequency in the array.

`wcgainplot(sys,...,options)` uses the options set `options` to specify additional options for the computation of the worst-case gains. Use `wcgainOptions` to create the options set.

## Input Arguments

**sys**

Uncertain dynamic system.

## **w**

Frequencies of worst-case gain plots. Specify frequencies in radians/TimeUnit, where TimeUnit is the time unit of sys.

- If w is a cell array {wmin,wmax}, wcgainplot plots the worst-case gains in the range {wmin,wmax}.
- If w is an array of frequencies, wcgainplot plots the worst-case gains at each frequency in the array.

## **options**

Options set specifying additional options for the computation of the worst-case gains. Use wcgainOptions to create the options set.

## **Examples**

### **Plot Worst-Case Gain of Uncertain System**


Plot the worst-case gain of the following system:

$$sys = \frac{s^2 + 3s}{s^2 + 2s + a}.$$

The uncertain parameter  $a = 2 \pm 1$ . Plot the worst-case gain between 0.1 and 100 rad/s.

```
a = ureal('a',2);  
sys = tf([1 3 0],[1 2 a]);  
wcgainplot(sys,{.1 100})
```



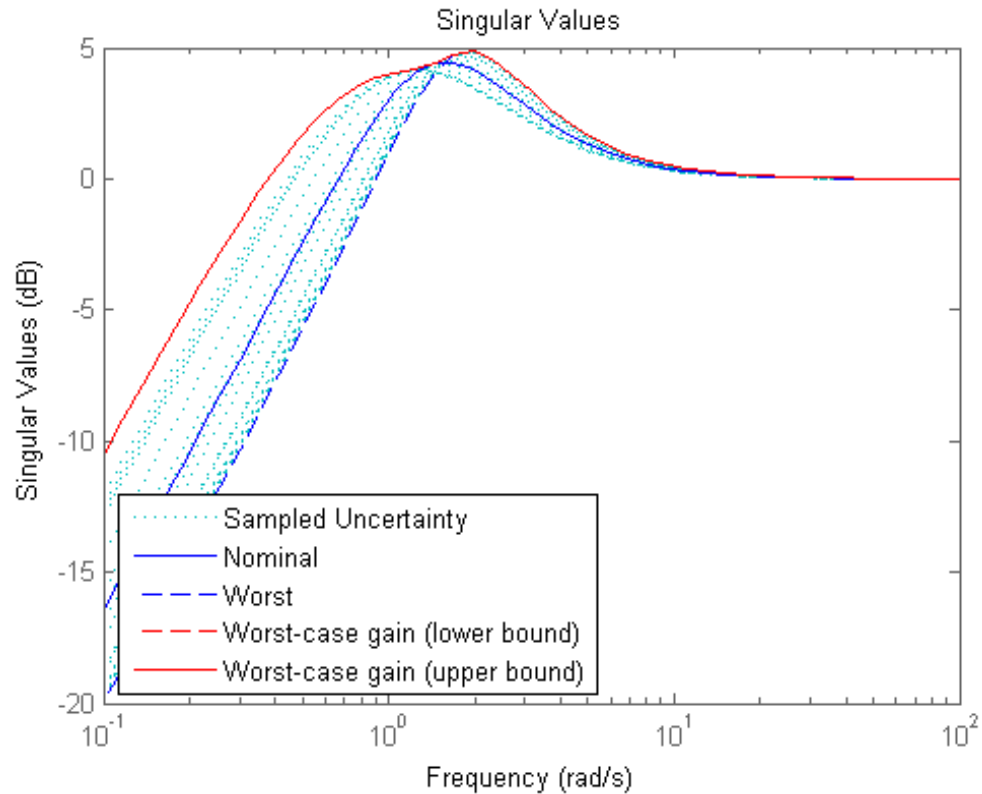

The Worst curve identifies the single response within the uncertainty that yields the highest gain at any frequency. The Worst-case gain (upper bound) curve is the envelope produced by finding the highest gain within the uncertainty at each frequency.

## Algorithms

wcgainplot uses `wcgain` to compute the worst-case gains. Use the `options` argument to `wcgainplot` to set options for the `wcgain` algorithm.

wcgainplot uses `usample` to compute the Sampled Uncertainty curves.

# wcgainplot

---

## See Also

[wcgain](#) | [wcgainOptions](#) | [usample](#) | [sigma](#)

**Purpose**

Options object for use with `wcgain`, `wcsens`, and `wcmargin`

---

**Note** `wcgopt` will be removed in a future version. Use `wcgainOptions` or `wcmarginOptions` instead.

---

# wcmargin

---

**Purpose** Worst-case disk stability margins of uncertain feedback loops

**Syntax**

```
wcmarg = wcmargin(L)
wcmargi = wcmargin(p,c)
[wcmargi,wcmargo] = wcmargin(p,c)
wcmargi = wcmargin(p,c,opt)
[wcmargi,wcmargo] = wcmargin(p,c,opt)
```

**Description** Classical gain and phase margins define the allowable loop-at-a-time variations in the nominal system gain and phase for which the feedback loop retains stability.

An alternative to classical gain and phase margins is the disk margin. The *disk margin* is the largest region for each channel such that for all gain and phase variations inside the region the nominal closed-loop system is stable. See the `dmplot` and `loopmargin` reference pages to learn more about the algorithm.

Consider a system with uncertain elements. It is of interest to determine the margin of each individual channel in the presence of uncertainty. These margins are called worst-case margins. Worst-case margin, `wcmargin` calculates the largest disk margin such that for values of the uncertainty and all gain and phase variations inside the disk, the closed-loop system is stable. The worst-case gain and phase margin bounds are defined based on the balanced sensitivity function. Hence, results from the worst-case margin calculation imply that the closed-loop system is stable for a given uncertainty set and would remain stable in the presence of an additional gain and phase margin variation in the specified input/output channel.


`wcmargL = wcmargin(L)` calculates the combined worst-case input and output loop-at-a-time gain/phase margins of the feedback loop consisting of the loop transfer matrix `L` in negative feedback with an identity matrix. `L` must be an uncertain system, `uss` or `ufrd` object. If `L` is a `uss` object, the frequency range and number of points used to calculate `wcmargL` are chosen automatically. Note that in this case, the worst-case margins at the input and output are equal because an

identity matrix is used in feedback. `wcmarg` is a NU-by-1 structure with the following fields:


Field	Description
GainMargin	Guaranteed bound on worst-case, single-loop gain margin at plant inputs. Loop-at-a-time analysis.
PhaseMargin	Loop-at-a-time worst-case phase margin at plant inputs. Units are degrees.
Frequency	Frequency associated with the worst-case margin (rad/s).
Sensitivity	Struct with M fields. Field names are names of uncertain elements of P and C. Values of fields are positive numbers, which each entry indicating the local sensitivity of the worst-case margins to all the individual uncertain element's uncertainty ranges. For instance, a value of 50 indicates that if the uncertainty range is enlarged by 8%, then the worst-case gain should increase by about 4%. If the Sensitivity property of the <code>wcmarginOptions</code> object is 'off', the values are NaN.

`[wcmargi,wcmargo] = wcmargin(P,C)` calculates the combined worst-case input and output loop-at-a-time gain/phase margins of the feedback loop consisting of C in negative feedback with P. C should only be the compensator in the feedback path, without reference channels, if it is a 2-Dof architecture. That is, if the closed-loop system has a 2-Dof architecture the reference channel of the controller should be eliminated resulting in a 1-Dof architecture as shown in the following figure. Either P or C must be an uncertain system, `uss` or `ufrd`, or an uncertain matrix, `umat`. If P and C are `ss/tf/zpk` or `uss` objects, the frequency range and number of points used to calculate `wcmargi` and `wcmargo` are chosen automatically.

# wcmargin

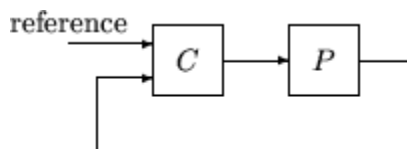

2-dof architecture

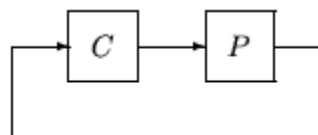

1-dof architecture

## Basic Syntax

```
[wcmargi,wcmargo] = wcmargin(L)  
[wcmargi,wcmargo] = wcmargin(P,C)
```

wcmargi and wcmargo are structures corresponding to the loop-at-a-time worst-case, single-loop gain and phase margin of the channel. For the single-loop transfer matrix  $L$  of size  $N$ -by- $N$ , wcmargi is a  $N$ -by-1 structure. For the case with two input arguments, the plant model  $P$  will have  $N_Y$  outputs and  $N_U$  inputs and hence the controller  $C$  must have  $N_U$  outputs and  $N_Y$  inputs. wcmargi is a  $N_U$ -by-1 structure with the following fields:

Field	Description
GainMargin	Guaranteed bound on worst-case, single-loop gain margin at plant inputs. Loop-at-a-time analysis.
PhaseMargin	Loop-at-a-time worst-case phase margin at plant inputs. Units are degrees.

Field	Description
Frequency	Frequency associated with the worst-case margin (rad/s).
Sensitivity	Struct with $M$ fields. Field names are names of uncertain elements of $P$ and $C$ . Values of fields are positive numbers, which each entry indicating the local sensitivity of the worst-case margins to all the individual uncertain element's uncertainty ranges. For instance, a value of 50 indicates that if the uncertainty range is enlarged by 8%, then the worst-case gain should increase by about 4%. If the Sensitivity property of the wcmarginOptions object is 'off', the values are NaN.

wcmargo is an  $N$ -by-1 structure for the single loop transfer matrix input and wcmargo is an  $N_Y$ -by-1 structure when the plant and controller are input. In both these cases, wcmargo has the same fields as wcmargi. The worst-case bound on the gain and phase margins are calculated based on a balanced sensitivity function.

```
[wcmargi,wcmargo] = wcmargin(L,opt) and
```

```
[wcmargi,wcmargo] = wcmargin(p,c,opt) specify options described in opt. (See wcmarginOptions for more details on the options for wcmargin.)
```


The sensitivity of the worst-case margin calculations to the individual uncertain elements is selected using the options object `opt`. To compute sensitivities, create a `wcmarginOptions` options object, and set the `Sensitivity` property to 'on'.

## Examples

### MIMO Loop-at-a-Time Margins

This example is designed to illustrate that loop-at-a-time margins (gain, phase, and/or distance to  $-1$ ) can be inaccurate measures of multivariable robustness margins. Margins of the individual loops can be very sensitive to small perturbations within other loops.

The nominal closed-loop system considered here is shown as follows.

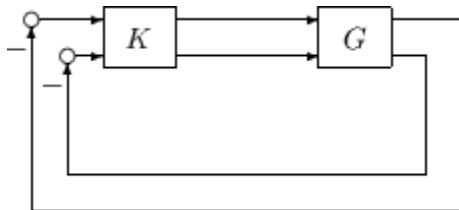

$G$  and  $K$  are 2-by-2 multi-input/multi-output (MIMO) systems, defined as

$$G := \frac{1}{s^2 + \alpha^2} \begin{bmatrix} s - \alpha^2 & \alpha(s+1) \\ -\alpha(s+1) & s - \alpha^2 \end{bmatrix}, K = I_2$$

Set  $\alpha := 10$ , construct the nominal model  $G$  in state-space form, and compute its frequency response.

```
a = [0 10; -10 0];
b = eye(2);
c = [1 8; -10 1];
d = zeros(2,2);
G = ss(a,b,c,d);
K = [1 -2; 0 1];
```

The nominal plant was analyzed previously using the command. Based on experimental data, the gain of the first input channel,  $b(1,1)$ , is found to vary between 0.97 and 1.06. The following statement generates the updated uncertain model.

```
ingain1 = ureal('ingain1',1,'Range',[0.97 1.06]);
b = [ingain1 0; 0 1];
Gunc = ss(a,b,c,d);
```

Because of differences between measured data and the plant model an 8% unmodeled dynamic uncertainty is added to the plant outputs.



```
unmod = ultidyn('unmod',[2 2],'Bound',0.08);
Gmod = (eye(2)+unmod)*Gunc;
Gmodg = ufrd(Gmod,logspace(-1,3,60));
```

You can use the command `wcmargin` to determine the worst-case gain and phase margins in the presences of the uncertainty.

```
[wcmi,wcmo] = wcmargin(Gmodg,K);
```

The worst-case analysis corresponds to maximum allowable disk margin for all possible defined uncertainty ranges. The worst-case single-loop margin analysis performed using `wcmargin` results in a maximum allowable gain margin variation of 1.31 and phase margin variations of  $\pm 15.6$  degs in the second input channel in the presence of the uncertainties 'unmod' and 'ingain1'. `wcmi(1)`

```
ans =
    GainMargin: [0.3613 2.7681]
    PhaseMargin: [-50.2745 50.2745]
    Frequency: 0.1000
    Sensitivity: [1x1 struct]
wcmi(2)
ans =
    GainMargin: [0.7585 1.3185]
    PhaseMargin: [-15.6426 15.6426]
    Frequency: 0.1000
    Sensitivity: [1x1 struct]
```

Hence even though the second channel had infinite gain margin and 90 degrees of phase margin, allowing variation in both uncertainties, 'unmod' and 'ingain1' leads to a dramatic reduction in the gain and phase margin.

You can display the sensitivity of the worst-case margin in the second input channel to 'unmod' and 'ingain1' as follows:

```
wcmi(2).Sensitivity
ans =
```

```
ingain1: 12.1865
unmod: 290.4557
```

The results indicate that the worst-case margins are not very sensitive to the gain variation in the first input channel, 'ingain1', but very sensitive to the LTI dynamic uncertainty at the output of the plant.

The worst-case single-loop margin at the output results in a maximum allowable gain margin variation of 1.46 and phase margin variation of  $\pm 21.3$  degs in the second output channel in the presence of the uncertainties 'unmod' and 'ingain1'.

```
wcmo(1)
ans =
    GainMargin: [0.2521 3.9664]
    PhaseMargin: [-61.6995 61.6995]
    Frequency: 0.1000
    Sensitivity: [1x1 struct]
wcmo(2)
ans =
    GainMargin: [0.6835 1.4632]
    PhaseMargin: [-21.2984 21.2984]
    Frequency: 0.1000
    Sensitivity: [1x1 struct]
```

You can display the sensitivity of the worst-case margin in the second output channel to 'unmod' and 'ingain1' as follows:

```
wcmo(2).Sensitivity
ans =
    ingain1: 16.3435
    unmod: 392.1320
```

The results are similar to the worst-case margins at the input. However, the worst-case margins at the second output channel are even more sensitive to the LTI dynamic uncertainty than the input channel margins.

## See Also

`dmpplot` | `loopsens` | `robuststab` | `usubs` | `wcgain` | `wcmarginOptions`  
| `wcsens`

# wcmarginOptions

---

**Purpose** Option set for wcmargin

**Syntax**  
opt = wcmarginOptions  
opt = wcmarginOptions(Name,Value,...)

**Description** opt = wcmarginOptions returns the default option set for wcmargin.  
opt = wcmarginOptions(Name,Value,...) creates an option set with the options specified by one or more Name,Value pair arguments.

## Input Arguments

### Name-Value Pair Arguments

Specify optional comma-separated pairs of Name,Value arguments. Name is the argument name and Value is the corresponding value. Name must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as Name1,Value1,...,NameN,ValueN.

### 'Sensitivity'

Determines whether to compute the sensitivity of worst-case gain with respect to each individual uncertain element.

Sensitivity is a string that takes the following values:

- 'on' — Sensitivity of the worst-case gain is computed with respect to each individual uncertain element. This provides an indication of which elements are most problematic.
- 'off' — wcmargin does not compute the sensitivity of the worst-case gain with respect to each individual uncertain element.

**Default:** 'off'

### 'AbsTol'

Absolute tolerance on computed worst-case margin bounds.

The algorithm terminates if  $\text{UpperBound} - \text{LowerBound} \leq \max(\text{AbsTol}, \text{RelTol} * \text{UpperBound})$

**Default:** 0.02

## **'RelTol'**

Relative tolerance on computed worst-case margin bounds.

The algorithm terminates if  $\text{UpperBound} - \text{LowerBound} \leq \max(\text{AbsTol}, \text{RelTol} * \text{UpperBound})$

**Default:** 0.05

## **Output Arguments**

### **opt**

Option set containing the specified options for wcmargin.

## **Examples**

Create an options set for wcmargin with an 0.01 and 0.03 as the absolute and relative tolerances on the worst-case margin bounds, respectively.

```
opt = wcmarginOptions('AbsTol',0.01,'RelTol',0.03);
```

Alternatively, use dot notation to set the values of opt.

```
opt = wcmarginOptions;  
opt.AbsTol = 0.01;  
opt.RelTol = 0.03;
```

## **See Also**

wcmargin | wcgainOptions

**Purpose** Worst-case norm of uncertain matrix

**Syntax**

```
maxnorm = wcnorm(m)
[maxnorm,wcu] = wcnorm(m)
[maxnorm,wcu] = wcnorm(m,opts)
[maxnorm,wcu,info] = wcnorm(m)
[maxnorm,wcu,info] = wcnorm(m,opts)
```

**Description** The norm of an uncertain matrix generally depends on the values of its uncertain elements. Determining the maximum norm over all allowable values of the uncertain elements is referred to as a *worst-case norm* analysis. The maximum norm is called the *worst-case norm*.

As with other *uncertain-system* analysis tools, only bounds on the worst-case norm are computed. The exact value of the worst-case norm is guaranteed to lie between these upper and lower bounds.

### Basic syntax

Suppose `mat` is a `umat` or a `uss` with  $M$  uncertain elements. The results of

```
[maxnorm,maxnormunc] = wcnorm(mat)
```

`maxnorm` is a structure with the following fields.

Field	Description
LowerBound	Lower bound on worst-case norm, positive scalar.
UpperBound	Upper bound on worst-case norm, positive scalar.

`maxnormunc` is a structure that includes values of uncertain elements and maximizes the matrix norm. There are  $M$  field names, which are the names of uncertain elements of `mat`. The value of each field is the corresponding value of the uncertain element, such that when jointly combined, lead to the norm value in `maxnorm.LowerBound`. The following command shows the norm:

```
norm(usubs(mat,maxnormunc))
```

### Basic syntax with third output argument

A third output argument provides information about sensitivities of the worst-case norm to the uncertain elements ranges.

```
[maxnorm,maxnormunc,info] = wcgain(mat)
```

The third output argument `info` is a structure with the following fields:

Field	Description
Sensitivity	A struct with $M$ fields. Fieldnames are names of uncertain elements of <code>sys</code> . Field values are positive numbers, each entry indicating the local sensitivity of the worst-case norm in <code>maxnorm.LowerBound</code> to all of the individual uncertain elements uncertainty ranges. For instance, a value of 25 indicates that if the uncertainty range is increased by 8%, then the worst-case norm should increase by about 2%. If the <code>Sensitivity</code> property of the <code>wcgainOptions</code> object is 'off', the values are NaN.
ArrayIndex	1-by-1 scalar matrix with the value of 1. In more complicated situations (described later) the value of this field depends on the input data.

### Examples

You can construct an uncertain matrix and compute the worst-case norm of the matrix, as well as its inverse. Your objective is to accurately estimate the worst-case, or the largest, value of the condition number of the matrix.

```
a=ureal('a',5,'Range',[4 6]);
b=ureal('b',2,'Range',[1 3]);
b=ureal('b',3,'Range',[2 10]);
c=ureal('c',9,'Range',[8 11]);
d=ureal('d',1,'Range',[0 2]);
M = [a b;c d];
```

```
Mi = inv(M);
[maxnormM] = wcnorm(M)
maxnormM =
    LowerBound: 14.7199
    UpperBound: 14.7327
[maxnormMi] = wcnorm(Mi)
maxnormMi =
    LowerBound: 2.5963
    UpperBound: 2.5979
```

The condition number of  $M$  must be less than the product of the two upper bounds for all values of the uncertain elements making up  $M$ . Conversely, the largest value of  $M$  condition number must be at least equal to the condition number of the nominal value of  $M$ . Compute these crude bounds on the worst-case value of the condition number.

```
condUpperBound = maxnormM.UpperBound*maxnormMi.UpperBound;
condLowerBound = cond(M.NominalValue);
[condLowerBound condUpperBound]
ans =
    5.0757    38.2743
```

How can you get a more accurate estimate? Recall that the condition number of an  $n \times m$  matrix  $M$  can be expressed as an optimization, where a free norm-bounded matrix  $\Delta$  tries to align the gains of  $M$  and  $M^{-1}$

$$\kappa(M) = \max_{\substack{\Delta \in \mathcal{C}^{m \times m} \\ \sigma_{\max}(\Delta) \leq 1}} (\sigma_{\max}(M\Delta M^{-1}))$$

If  $M$  is itself uncertain, then the worst-case condition number involves further maximization over the possible values of  $M$ . Therefore, you can compute the worst-case condition number of an uncertain matrix by using a `ucomplexm` uncertain element, and then by using `wcnorm` to carry out the maximization.

Create a 2-by-2 `ucomplexm` object, with nominal value equal to zero.



```
Delta = ucomplexm('Delta',zeros(2,2));
```

The range of values represented by `Delta` includes 2-by-2 matrices with the maximum singular value less than or equal to 1.

You can create the expression involving `M`, `Delta` and `inv(M)`.

```
H = M*Delta*Mi;
```

Finally, consider the stopping criteria and call `wcnorm`. One stopping criteria for `wcnorm(H)` is based on the norm of the nominal value of `H`. During the computation, if `wcnorm` determines that the worst-case norm is at least

```
ABadThreshold+MBadThreshold*norm(N.NominalValue)
```

then the calculation is terminated. In our case, since `H.NominalValue` equals 0, the stopping criteria is governed by `ABadThreshold`. The default value of `ABadThreshold` is 5. To keep `wcnorm` from prematurely stopping, set `ABadThreshold` to 38 (based on our crude upper bound above).

```
opt = wcgopt('ABadThreshold',38);
[maxKappa,wcu,info] = wcnorm(H,opt);
maxKappa
maxKappa =
    LowerBound: 26.9629
    UpperBound: 27.9926
```

You can verify that `wcu` makes the condition number as large as `maxKappa.LowerBound`.

```
cond(usubs(M,wcu))
ans =
    26.9629
```

## Algorithms

See `wcgain`

## wcnorm

---

### **See Also**

`norm` | `wcgain` | `wcgainOptions`

**Purpose** Calculate worst-case sensitivity and complementary sensitivity functions of plant-controller feedback loop


**Syntax**

```

wcst = wcsens(L)
wcst = wcsens(L,type)
wcst = wcsens(L,opt)
wcst = wcsens(L,type,scaling)
wcst = wcsens(L,type,scaling,opt)
wcst = wcsens(P,C)
wcst = wcsens(P,C,type)
wcst = wcsens(P,C,opt)
wcst = wcsens(P,C,type,scaling)
wcst = wcsens(P,C,type,scaling,opt)

```

**Description** The sensitivity function,  $S = (I + L)^{-1}$ , and the complementary sensitivity function,  $T = L(I + L)^{-1}$ , where  $L$  is the loop gain matrix associated with the input,  $CP$ , or output,  $PC$ , are two transfer functions related to the robustness and performance of the closed-loop system. The multivariable closed-loop interconnection structure, shown below, defines the input/output sensitivity, complementary sensitivity and loop transfer functions.

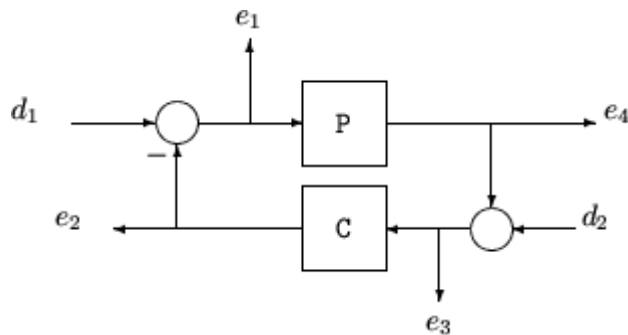

Description	Equation
Input sensitivity ( $TF_{e1 \leftarrow d1}$ )	$(I + CP)^{-1}$
Input complementary sensitivity ( $TF_{e2 \leftarrow d1}$ )	$CP(I + CP)^{-1}$
Output sensitivity ( $TF_{e3 \leftarrow d2}$ )	$(I + CP)^{-1}$
Output complementary sensitivity ( $-TF_{e4 \leftarrow d}$ )	$PC(I + PC)^{-1}$
Input loop transfer function	$CP$
Output loop transfer function	$PC$

`wcst = wcsens(L)` calculates the worst-case sensitivity and complementary sensitivity functions for the loop transfer matrix `L` in feedback in negative feedback with an identity matrix. If `L` is a `uss` object, the frequency range and number of points are chosen automatically.

`wcst = wcsens(P,C)` calculates the worst-case sensitivity and complementary sensitivity functions for the feedback loop `C` in negative feedback with `P`. `C` should only be the compensator in the feedback path, not any reference channels, if it is a 2-dof architecture (see `loopsens`). If `P` and `C` are `ss`/`tf`/`zpk` or `uss` objects, the frequency range and number of points are chosen automatically. `wcst` is a structure with the following substructures:

**Fields of `wcst`**

Field	Description
<code>Si</code>	Worst-case input-to-plant sensitivity function
<code>Ti</code>	Worst-case input-to-plant complementary sensitivity function
<code>So</code>	Worst-case output-to-plant sensitivity function
<code>To</code>	Worst-case output-to-plant complementary sensitivity function

**Fields of wcst (Continued)**

Field	Description
PSi	Worst-case plant times input-to-plant sensitivity function
CSo	Worst-case compensator times output-to-plant sensitivity function
Stable	1 if nominal closed loop is stable, 0 otherwise. NaN for frd/ufrd objects.

Each sensitivity substructure is a structures with five fields MaximumGain, BadUncertainValues, System, BadSystem, Sensitivity derived from the outputs of wcgain.

**Fields of Si, So, Ti, To, PSi, CSo**

Field	Description
MaximumGain	struct with fields LowerBound, UpperBound and CriticalFrequency. LowerBound and UpperBound are bounds on the unweighted maximum gain of the uncertain sensitivity function. CriticalFrequency is the frequency at which the maximum gain occurs.
BadUncertainValues	Struct, containing values of uncertain elements which maximize the sensitivity gain. There are $M$ fluidness, which are the names of uncertain elements of sensitivity function. The value of each field is the corresponding value of the uncertain element, such that when jointly combined, lead to the gain value in MaximumGain.LowerBound.
System	Uncertain sensitivity function (ufrd or uss).

## Fields of Si, So, Ti, To, PSi, CSo (Continued)

Field	Description
BadSystem	Worst-case system based on the uncertain object values in BadUncertainValues. BadSystem is defined as <code>BadSystem=usubs(System, BadUncertainValues)</code> .
Sensitivity	Struct with M fields, fieldnames are names of uncertain elements of system. Values of fields are positive numbers, each entry indicating the local sensitivity of the maximum gain to all of the individual uncertain elements uncertainty ranges. For instance, a value of 50 indicates that if the uncertainty range is enlarged by 8%, then the maximum gain should increase by about 4%. If the 'Sensitivity' property of the <code>wcgopt</code> object is 'off', the values are NaN.

`wcst = wcsens(L,type)` and `wcst = wcsens(P,C,type)` allows selection of individual Sensitivity and Complementary Sensitivity functions, `type`, as 'Si', 'Ti', 'So', 'To', 'PSi', 'CSo' corresponding to the sensitivity and complementary sensitivity functions. Setting `type` to 'S' or 'T' selects all sensitivity functions ('Si', 'So', 'PSi', 'CSo') or all complementary sensitivity functions ('Ti', 'To'). Similarly, setting `type` to 'Input' or 'Output' selects all input Sensitivity functions ('Si', 'Ti', 'PSi') or all output sensitivity functions ('So', 'To', 'CSo'). 'All' selects all six Sensitivity functions for analysis (default). `type` may also be a cell containing a collection of strings, i.e. 'Si', 'To', as well as a comma separated list.

`wcst = wcsens(L,type,scaling)` and `wcst = wcsens(P,C,type,scaling)` adds a scaling to the worst-case sensitivity analysis. `scaling` is either the character strings 'Absolute' (default), 'Relative' or a `ss/TF/zpk/frd` object. The default scaling 'Absolute' calculates bounds on the maximum gain of the uncertain sensitivity function. The 'Relative' scaling finds bounds on the maximum relative gain of the uncertain sensitivity function. That is, the maximum relative gain is the largest ratio of the worst-case gain and the nominal gain evaluated at each frequency point in the

analysis, Similarly if `scaling` is a `ss/tf/zpk/frd` object, bounds on the maximum scaled gain of the uncertain sensitivity function are found. If `scaling` is `'Relative'` or a `ss/tf/zpk/frd` object, the worst-case analysis peaks over frequency. If `scaling` is an object, its input/output dimensions should be 1-by-1 or dimensions compatible with `P` and `C`. `type` and `scaling` can also be combined in a cell array, e.g.

```
wcst = wcsens(P,C,{'Ti','So'},'Abs','Si','Rel','PSi',wt)
```

```
wcst = wcsens(P,C,opt) or wcst =  
wcsens(P,C,type,scaling,opt)
```

specifies options for the worst-case gain calculation as defined by `opt`. (See `wcgopt` for more details on the options for `wcsens`.)

The sensitivity of the worst-case sensitivity calculations to the individual uncertain components can be determined using the options object `opt`. To compute the sensitivities to the individual uncertain components, create a `wcgopt` options object, and set the `Sensitivity` property to `'on'`.

```
opt = wcgopt('Sensitivity','on');  
wcst = wcsens(P,C,opt)
```

## Examples

The following constructs a feedback loop with a first order plant and a proportional-integral controller. The time constant is uncertain and the model also includes an multiplicative uncertainty. The nominal (input) sensitivity function has a peak of 1.09 at  $\omega = 1.55$  rad/sec. Since the plant and controller are single-input / single-output, the input/output sensitivity functions are the same.

```
delta = ultidyn('delta',[1 1]);  
tau = ureal('tau',5,'range',[4 6]);  
P = tf(1,[tau 1])*(1+0.25*delta);  
C=tf([4 4],[1 0]);  
looptransfer = loopsens(P,C);  
Snom = looptransfer.Si.NominalValue;  
norm(Snom,inf)  
ans =
```

1.0864

wcsens is then used to compute the worst-case sensitivity function as the uncertainty ranges over its possible values. More information about the fields in `wcst.Si` can be found in the `wcgain` help. The `badsystem` field of `wcst.Si` contains the worst case sensitivity function. This worst case sensitivity has a peak of 1.52 at  $\omega = 1.02$  rad/sec. The `maxgainunc` field of `wcst.Si` contains the perturbation that corresponds to this worst case sensitivity function.

```
wcst = wcsens(P,C)
wcst =
    Si: [1x1 struct]
    Ti: [1x1 struct]
    So: [1x1 struct]
    To: [1x1 struct]
    PSi: [1x1 struct]
    CSo: [1x1 struct]
    Stable: 1
Swc = wcst.Si.BadSystem;
omega = logspace(-1,1,50);
bodemag(Snom, '-', Swc, '- . ', omega);
legend('Nominal Sensitivity', 'Worst-Case Sensitivity', ...
    'Location', 'SouthEast')
norm(Swc, inf)
ans =
    1.5075
```

For multi-input/multi-output systems the various input/output sensitivity functions will, in general, be different.

## References

J. Shin, G.J. Balas, and A.K. Packard, "Worst case analysis of the X-38 crew return vehicle flight control system," *AIAA Journal of Guidance, Dynamics and Control*, vol. 24, no. 2, March-April 2001, pp. 261-269.

## See Also

`loopsens` | `robuststab` | `usubs` | `wcgain` | `wcgopt` | `wcmargin`



# Block Reference

---

MultiPlot Graph  
Uncertain State Space  
USS System


# MultiPlot Graph

---

## Purpose

Plot multiple signals

## Description

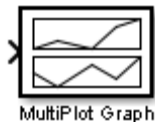


The MultiPlot Graph block displays signals in a MATLAB figure.

If the input signal is a vector, then each component of the vector is plotted in a separate axes. Lines are added to the axes in subsequent simulations. The most recent data is plotted in red. Older plots cycle through seven different colors. The block acts as a “hold-on, subplotter.”

There are two buttons in the toolbar menu. The eraser button clears the data from all axes. The export button saves all the visible plot data to the MATLAB workspace in a variable named by the dialog box entry **Variable for Export to Workspace**. The format is a struct array, following the behavior of a `To Workspace` block, using the “Structure, With Time” save format.

The MultiPlot Graph block can be used in conjunction with the Uncertain State Space block to visualize Monte Carlo and worst-case simulation time responses.

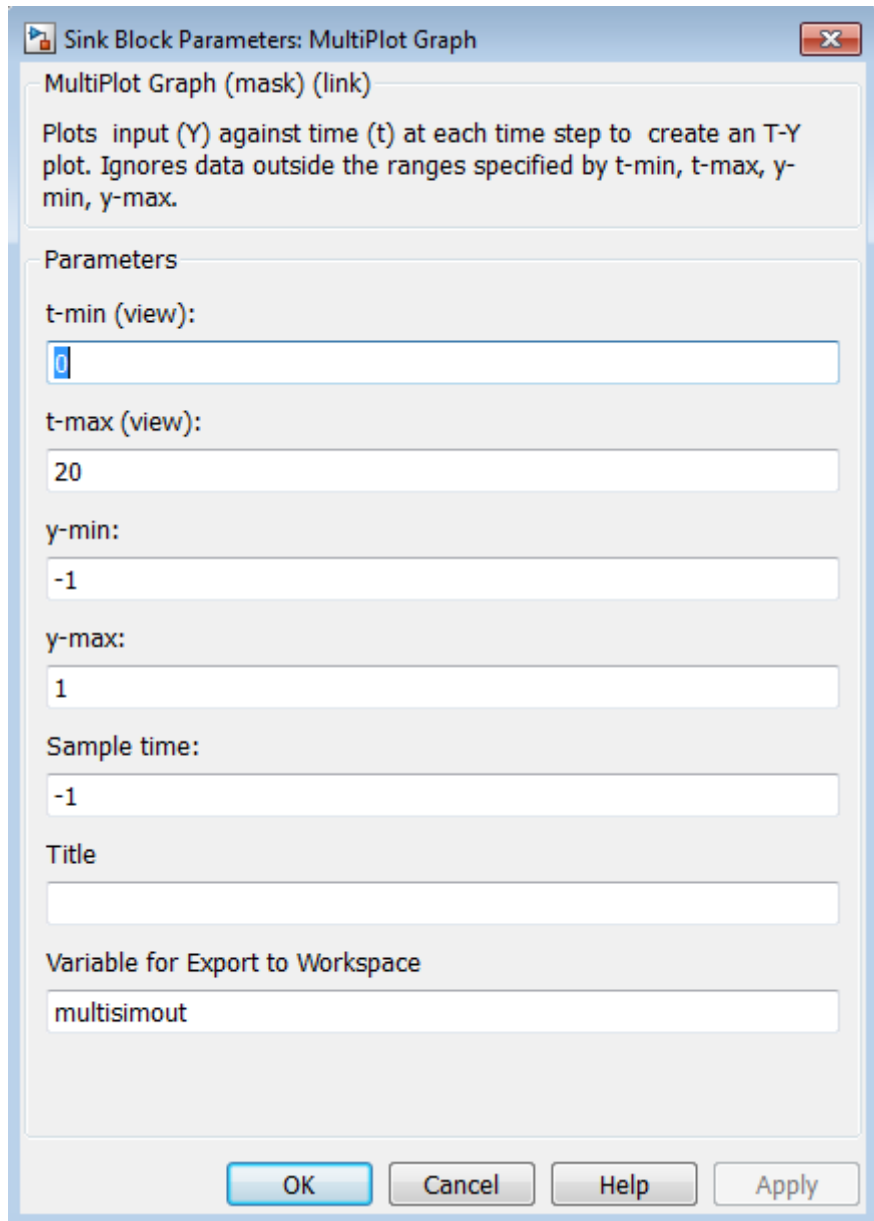

Sink Block Parameters: MultiPlot Graph

MultiPlot Graph (mask) (link)

Plots input (Y) against time (t) at each time step to create an T-Y plot. Ignores data outside the ranges specified by t-min, t-max, y-min, y-max.

Parameters

t-min (view):

t-max (view):

y-min:

y-max:

Sample time:

Title

Variable for Export to Workspace

OK Cancel Help Apply

**Dialog  
Box**

# MultiPlot Graph

---

## **Parameters**

### **t-min, t-max**

The parameter entries t-min and t-max are the minimum and maximum x-axis limits. t-min and t-max may be vectors corresponding to each subplot.

### **y-min, y-max**

The parameter entries y-min and y-max are the minimum and maximum y-axis limits and similarly may be vector quantities.

### **Sample time**

Sample time corresponds to the sample time at which to collect points.

### **Title**

 
Specifies the title of the multiplot figure.

### **Variable for Export to Workspace**

Variable name of the MATLAB object to contain all the visible plot data exported to the MATLAB workspace. The format is a struct array, following the behavior of a To Workspace block, using the "Structure, With Time" save format.


**Purpose** Specify uncertain system in Simulink

## Description



The Uncertain State Space block lets you model parametric and dynamic uncertainty in Simulink. The block accepts uncertain state space (uss) models or any model that can be converted to uss, such as `umat`, `ureal` and `ultidyn` objects.

# Uncertain State Space

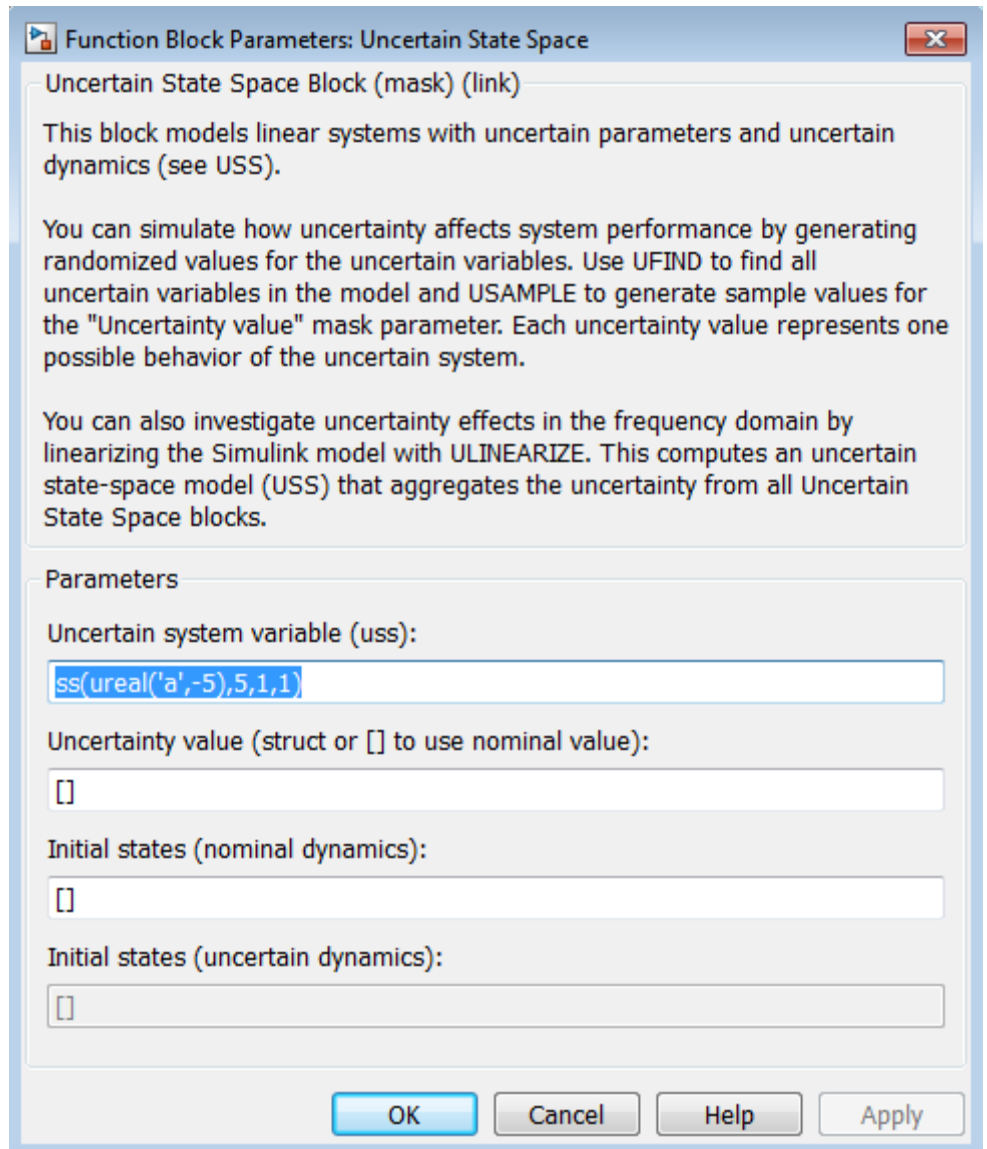

## Dialog Box

## Parameters **Uncertain system variable (uss)**

Linear state-space model with uncertainty (uss object). Specify an uss object using one of the following:

- Function or expression that evaluates to an uss object. For example:
  - `ss(ureal('a', -5), 5, 1, 1)`
  - `wt*input_unc`, where `input_unc` is an `ultidyn` object and `wt` and `input_unc` are defined in the MATLAB workspace.
- Variable name, defined in the MATLAB workspace. For example, `unc_sys`, where you define `unc_sys = ss(ureal('a', -5), 5, 1, 1)` in the workspace. This returns an uss object.
- Model type that can be converted to an uss object. For example:
  - LTI models (`tf`, `zpk` and `ss`)
  - Uncertain matrix (`umat`)
  - Uncertain real parameters (`ureal`)
  - Uncertain dynamics (`ultidyn`).

## **Uncertainty value (struct or [] to use nominal value)**

Values of uncertain variables. The uss object that you enter in the **Uncertain system variable (uss)** field depends on uncertain variables (`ureal` or `ultidyn` object). Use this field to specify the values of these uncertain variables to use for simulation or linearization. Specify the value as one of the following:

# Uncertain State Space

---

Value	Description
[ ]	Use nominal values.
Structure	Use user-defined values. For example, <code>struct('a',1)</code> specifies a value of 1 for the uncertain variable <code>a</code> .  Use <code>ufind</code> and <code>usample</code> to generate randomized values of uncertain variables for Monte Carlo simulation. For more information, see “Vary Uncertainty Values Using Individual Uncertain State Space Blocks” and “Vary Uncertainty Values Across Multiple Uncertain State Space Blocks” in the <i>Robust Control Toolbox User’s Guide</i> .

## Initial states (nominal dynamics)

If the nominal value of the uncertain state variable, `unc_sys.NominalValue` where `unc_sys` is the uncertain system variable specified in the **Uncertain system variable** field, has states, specify the initial condition for these states. The value defaults to zero.

## Initial states (uncertain dynamics)

If the uncertain system contains some dynamic uncertainty (`ultidyn`), specify the initial state of these dynamics. The value defaults to zero.

## See Also

`ufind`, `usample`, `ulinearize`, `uss`, `umat`, `ureal`, `ultidyn`

## Tutorials

Robustness Analysis in Simulink

Linearization of Simulink Models with Uncertainty

## How To

“Simulate Uncertainty Effects”

“Computing Uncertain State-Space Models from Simulink Models”



**Purpose** Import uncertain systems into Simulink

---

**Note** USS System block will be removed in a future release. Use Uncertain State Space block instead.

---

**Description** The USS System block accepts USS and UMAT containing `ureal` and `ultidyn` uncertain objects, as well as `ureal` and `ultidyn` objects. An instance of the uncertain system is used in the simulation or linearization. Internally, USS models are converted to their state space equivalent for evaluation.

**Parameters** **USS system variable**

The uncertain object (`USS`, `UMAT`, `ureal`, or `ultidyn`) is entered in the USS system variable.

**Initial states (nominal dynamics)**

If the nominal value for the USS system variable has states, then the initial condition for these states is entered in `Initial states (nominal dynamics)`.

**Uncertainty value**

The values for the uncertain elements are controlled by the `Uncertainty value` menu. If `Nominal` is selected, then the nominal value of the uncertain object is used. If you select `User defined`, then you must enter a MATLAB structure in the `User-defined uncertainty (struct)` dialog box. The field names of the structure should correspond to the names of the uncertain atoms within the USS system variable, while the values of the fields are the values used for the uncertain objects (using the command `usubs`). If some of these values are `SS` objects, then these states are referred to as uncertainty states.

The order of the uncertainty states is determined by the order of atoms in the `Uncertainty` property of the USS system variable. The state dimension is determined by the actual data in the `User-defined`

uncertainty structure. Any extra fields in the User-defined uncertainty structure are ignored.

## **User-defined uncertainty (struct)**

If User defined is selected from the Uncertainty value pop-up menu, then the structure data entered in User-defined uncertainty (struct) must contain fields corresponding to every uncertain atom of the USS system variable. Extra fields are ignored. `usimsamp` generates a random instance of each atom in a Simulink model. It returns a structure, suitable for entry in User-defined uncertainty (struct).

## **Initial states (uncertain dynamics)**

The initial condition for the uncertainty states is entered in Initial states (uncertain dynamics).