


# Simulink®

## Reference

R2014a

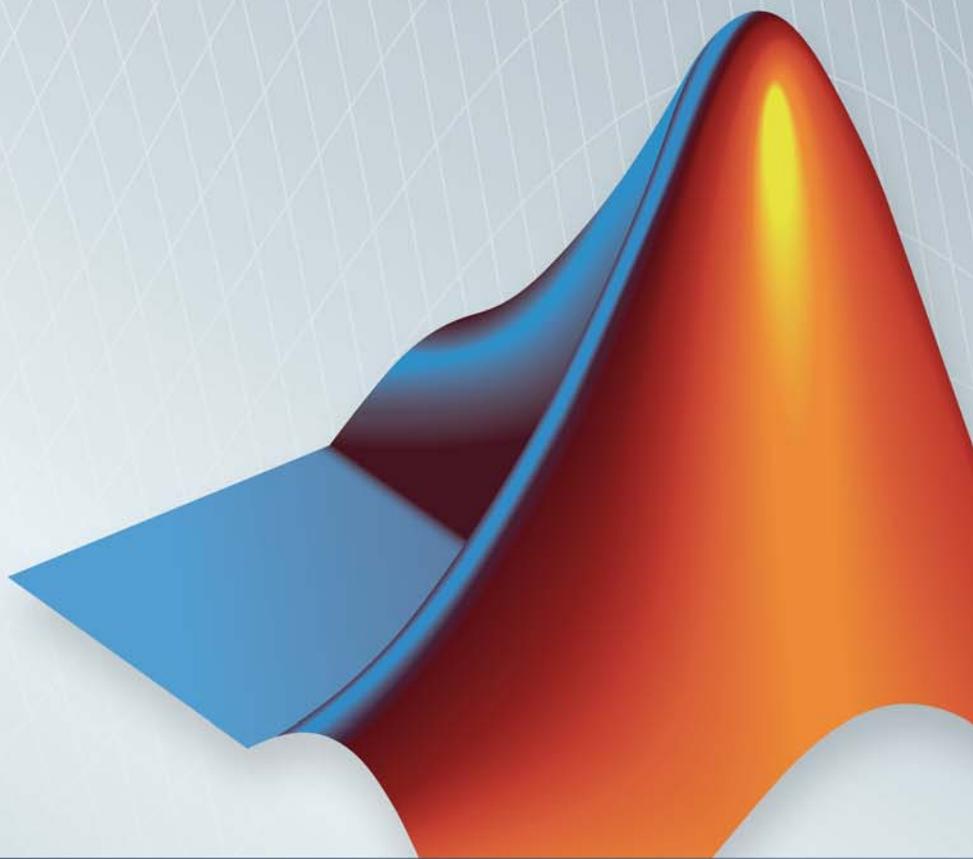

# MATLAB® & SIMULINK®



## How to Contact MathWorks



[www.mathworks.com](http://www.mathworks.com) Web  
[comp.soft-sys.matlab](mailto:comp.soft-sys.matlab) Newsgroup  
[www.mathworks.com/contact\\_TS.html](http://www.mathworks.com/contact_TS.html) Technical Support



[suggest@mathworks.com](mailto:suggest@mathworks.com) Product enhancement suggestions  
[bugs@mathworks.com](mailto:bugs@mathworks.com) Bug reports  
[doc@mathworks.com](mailto:doc@mathworks.com) Documentation error reports  
[service@mathworks.com](mailto:service@mathworks.com) Order status, license renewals, passcodes  
[info@mathworks.com](mailto:info@mathworks.com) Sales, pricing, and general information



508-647-7000 (Phone)



508-647-7001 (Fax)



The MathWorks, Inc.  
3 Apple Hill Drive  
Natick, MA 01760-2098

For contact information about worldwide offices, see the MathWorks Web site.

*Simulink*<sup>®</sup> Reference

© COPYRIGHT 2002–2014 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

### Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See [www.mathworks.com/trademarks](http://www.mathworks.com/trademarks) for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

### Patents

MathWorks products are protected by one or more U.S. patents. Please see [www.mathworks.com/patents](http://www.mathworks.com/patents) for more information.

## Revision History

July 2002	Online only	Revised for Simulink 5 (Release 13)
April 2003	Online only	Revised for Simulink 5.1 (Release 13SP1)
April 2004	Online only	Revised for Simulink 5.1.1 (Release 13SP1+)
June 2004	Online only	Revised for Simulink 6 (Release 14)
October 2004	Online only	Revised for Simulink 6.1 (Release 14SP1)
March 2005	Online only	Revised for Simulink 6.2 (Release 14SP2)
September 2005	Online only	Revised for Simulink 6.3 (Release 14SP3)
March 2006	Online only	Revised for Simulink 6.4 (Release 2006a)
September 2006	Online only	Revised for Simulink 6.5 (Release 2006b)
March 2007	Online only	Revised for Simulink 6.6 (Release 2007a)
September 2007	Online only	Revised for Simulink 7.0 (Release 2007b)
March 2008	Online only	Revised for Simulink 7.1 (Release 2008a)
October 2008	Online only	Revised for Simulink 7.2 (Release 2008b)
March 2009	Online only	Revised for Simulink 7.3 (Release 2009a)
September 2009	Online only	Revised for Simulink 7.4 (Release 2009b)
March 2010	Online only	Revised for Simulink 7.5 (Release 2010a)
September 2010	Online only	Revised for Simulink 7.6 (Release 2010b)
April 2011	Online only	Revised for Simulink 7.7 (Release 2011a)
September 2011	Online only	Revised for Simulink 7.8 (Release 2011b)
March 2012	Online only	Revised for Simulink 7.9 (Release 2012a)
September 2012	Online only	Revised for Simulink 8.0 (Release 2012b)
March 2013	Online only	Revised for Simulink 8.1 (Release 2013a)
September 2013	Online only	Revised for Simulink 8.2 (Release 2013b)
March 2014	Online only	Revised for Simulink 8.3 (Release 2014a)



**1** | **Blocks — Alphabetical List**

**2** | **Functions — Alphabetical List**

**3** | **Apps — Alphabetical List**

**4** | **Mask Icon Drawing Commands**

**5** | **Simulink Debugger Commands**

**6** | **Simulink Classes**

**7** | **Model and Block Parameters**

Model Parameters ..... 7-2

About Model Parameters .....	7-2
Examples of Setting Model Parameters .....	7-99
<b>Common Block Properties .....</b>	<b>7-100</b>
About Common Block Properties .....	7-100
Examples of Setting Block Properties .....	7-111
<b>Block-Specific Parameters .....</b>	<b>7-113</b>
<b>Mask Parameters .....</b>	<b>7-265</b>
About Mask Parameters .....	7-265

## Simulink Identifier

### 8

<b>Simulink Identifier .....</b>	<b>8-2</b>
----------------------------------	------------

## Model Advisor Checks

### 9

<b>Simulink Checks .....</b>	<b>9-2</b>
Simulink Check Overview .....	9-5
Identify unconnected lines, input ports, and output ports .....	9-7
Check root model Inport block specifications .....	9-8
Check optimization settings .....	9-9
Check for parameter tunability information ignored for referenced models .....	9-12
Check for implicit signal resolution .....	9-13
Check for optimal bus virtuality .....	9-14
Check for Discrete-Time Integrator blocks with initial condition uncertainty .....	9-15
Identify disabled library links .....	9-16
Identify parameterized library links .....	9-17
Identify unresolved library links .....	9-18

Identify model reference variants and variant subsystems that override variant choice .....	<b>9-19</b>
Identify configurable subsystem blocks for converting to variant subsystem blocks .....	<b>9-20</b>
Check usage of function-call connections .....	<b>9-20</b>
Check signal logging save format .....	<b>9-21</b>
Check Data Store Memory blocks for multitasking, strong typing, and shadowing issues .....	<b>9-23</b>
Check if read/write diagnostics are enabled for data store blocks .....	<b>9-25</b>
Check data store block sample times for modeling errors ..	<b>9-27</b>
Check for potential ordering issues involving data store access .....	<b>9-28</b>
Check for partial structure parameter usage with bus signals .....	<b>9-30</b>
Check for calls to slDataTypeAndScale .....	<b>9-32</b>
Check bus usage .....	<b>9-34</b>
Check for potentially delayed function-call subsystem return values .....	<b>9-36</b>
Identify block output signals with continuous sample time and non-floating point data type .....	<b>9-37</b>
Check usage of Merge blocks .....	<b>9-38</b>
Check consistency of initialization parameters for Outport and Merge blocks .....	<b>9-39</b>
Check for non-continuous signals driving derivative ports .....	<b>9-57</b>
Runtime diagnostics for S-functions .....	<b>9-59</b>
Check file for foreign characters .....	<b>9-61</b>
Check model for known block upgrade issues .....	<b>9-66</b>
Check model for known block upgrade issues requiring compile time information .....	<b>9-67</b>
Check that the model is saved in SLX format .....	<b>9-70</b>
Check Model History properties .....	<b>9-72</b>
Check for Mux blocks used to create bus signals .....	<b>9-73</b>
Check model and local libraries for legacy Aerospace Blockset blocks .....	<b>9-74</b>
Check and update masked blocks in library to use promoted parameters .....	<b>9-75</b>
Check and update mask image display commands with unnecessary imread() function calls .....	<b>9-75</b>
Identify masked blocks that specify tabs in mask dialog using MaskTabNames parameter .....	<b>9-77</b>
Identify questionable operations for strict single-precision design .....	<b>9-78</b>

Check get_param calls for block CompiledSampleTime ...	9-79
Check Rapid Accelerator signal logging .....	9-81
Check for root outputs with constant sample time .....	9-82
Analyze model hierarchy and continue upgrade sequence .....	9-83

## Model Reference Conversion Advisor

### 10

<b>Model Reference Conversion Advisor .....</b>	<b>10-2</b>
Check Conversion Input Parameters .....	10-3

## Performance Advisor Checks

### 11

<b>Simulink Performance Advisor Checks .....</b>	<b>11-2</b>
Simulink Performance Advisor Check Overview .....	11-2
Baseline .....	11-3
Checks that Require Update Diagram .....	11-3
Checks that Require Simulation to Run .....	11-3
Check Simulation Modes Settings .....	11-3
Check Compiler Optimization Settings .....	11-4
Create baseline .....	11-4
Identify resource-intensive diagnostic settings .....	11-4
Check optimization settings .....	11-5
Identify inefficient lookup table blocks .....	11-5
Check MATLAB System block simulation mode .....	11-5
Identify Interpreted MATLAB Function blocks .....	11-6
Check MATLAB Function block debug settings .....	11-7
Check Stateflow block debug settings .....	11-7
Identify simulation target settings .....	11-7
Check model reference rebuild setting .....	11-8
Check model reference parallel build .....	11-8
Check Delay block circular buffer setting .....	11-10
Check solver type selection .....	11-10
Select simulation mode .....	11-12
Select compiler optimizations on or off .....	11-13

Final Validation ..... 11-13

**Simulink Limits**

---

**12**

Maximum Size Limits of Simulink Models ..... 12-2



# Blocks — Alphabetical List

---

# Abs

**Purpose** Output absolute value of input

**Library** Math Operations

**Description** The Abs block outputs the absolute value of the input.



For signed-integer data types, the absolute value of the most negative value is not representable by the data type. In this case, the **Saturate on integer overflow** check box controls the behavior of the block:

If you...	The block...	And...
Select this check box	Saturates to the most positive value of the integer data type	<ul style="list-style-type: none"><li>• For 8-bit signed integers, -128 maps to 127.</li><li>• For 16-bit signed integers, -32768 maps to 32767.</li><li>• For 32-bit signed integers, -2147483648 maps to 2147483647.</li></ul>
Do not select this check box	Wraps to the most negative value of the integer data type	<ul style="list-style-type: none"><li>• For 8-bit signed integers, -128 remains -128.</li><li>• For 16-bit signed integers, -32768 remains -32768.</li><li>• For 32-bit signed integers, -2147483648 remains -2147483648.</li></ul>

The Abs block supports zero-crossing detection. However, when you select **Enable zero-crossing detection** on the dialog box, the block does not report the simulation minimum or maximum in the Fixed-Point Tool. If you want to use the Fixed-Point Tool to analyze a model, disable zero-crossing detection for all Abs blocks in the model first.

## Data Type Support


The Abs block accepts real signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

The block also accepts complex floating-point inputs. For more information, see “Data Types Supported by Simulink®” in the Simulink documentation.

## Parameters and Dialog Box

The **Main** pane of the Abs block dialog box appears as follows:

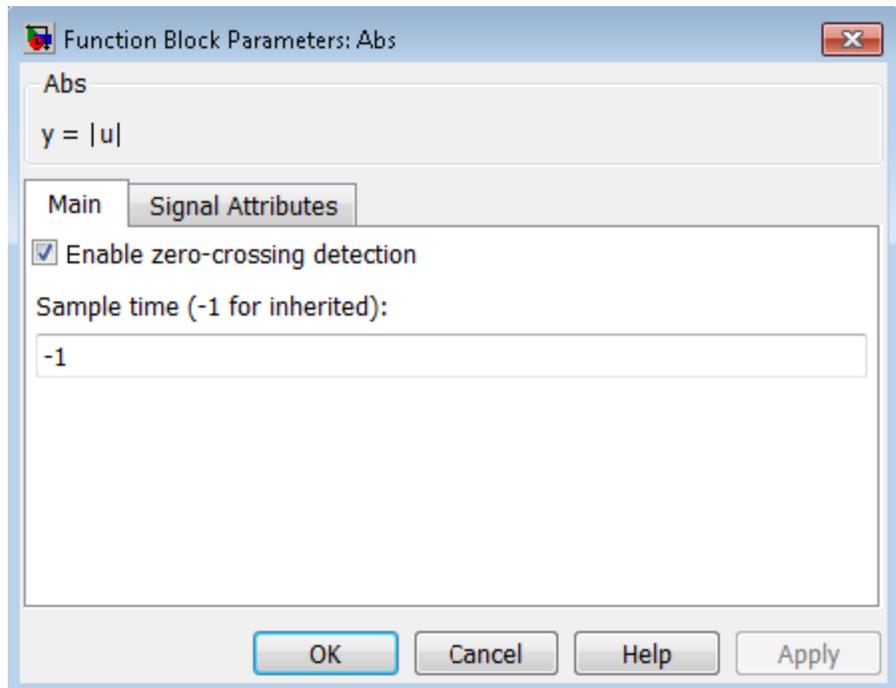


**Enable zero-crossing detection**

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

**Sample time (-1 for inherited)**

Enter the time interval between sample time hits or specify another appropriate sample time such as continuous. By default, the block inherits its sample time based upon its context within the model. For more information, see “Sample Time”.

The **Signal Attributes** pane of the Abs block dialog box appears as follows:

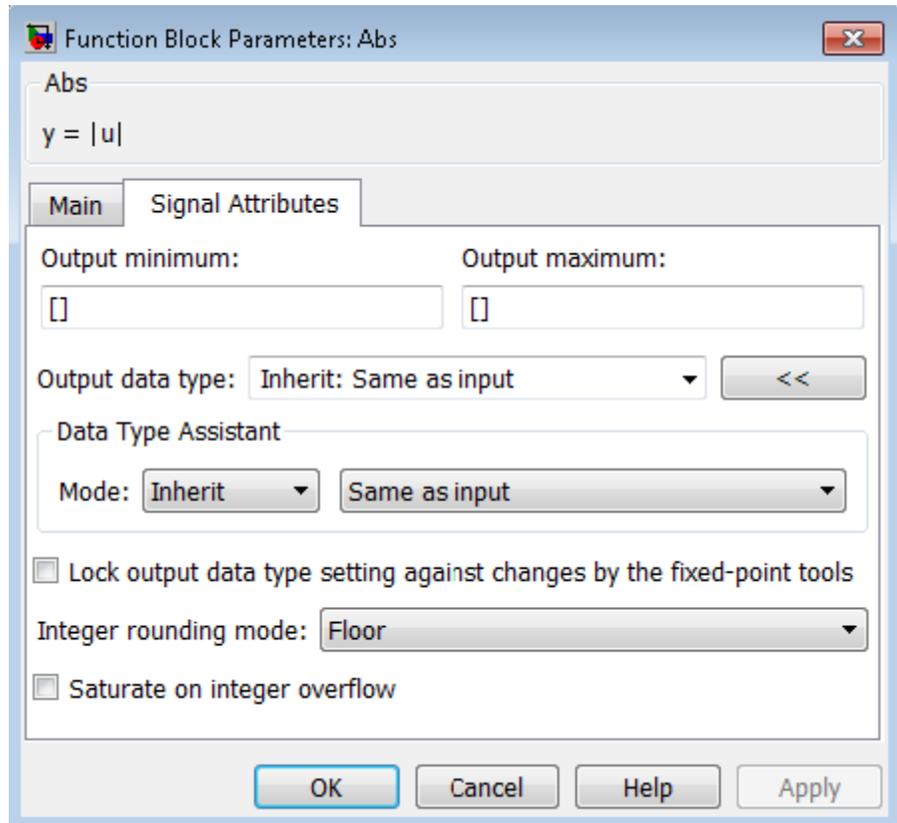

### Output minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output maximum

Specify the maximum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” in *Simulink User’s Guide* for more information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer™ documentation.

### Saturate on integer overflow

Action	Reason for Taking This Action	What Happens	Example
Select this check box.	Your model has possible overflow and you want explicit saturation protection in the generated code.	Overflows saturate to the maximum value that the data type can represent.	The number 130 does not fit in a signed 8-bit integer and saturates to 127.
Do not select this check box.	You want to optimize efficiency of your generated code.	Overflows wrap to the appropriate value that is representable by the data type.	The number 130 does not fit in a signed 8-bit integer and wraps to -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.


### Examples

#### Usage as an Input to a MinMax Block

The `sldemo_hardstop` model shows how you can use the Abs block as an input to the MinMax block.


# Abs

In the `sldemo_hardstop` model, the Abs block is in the Friction Model subsystem.

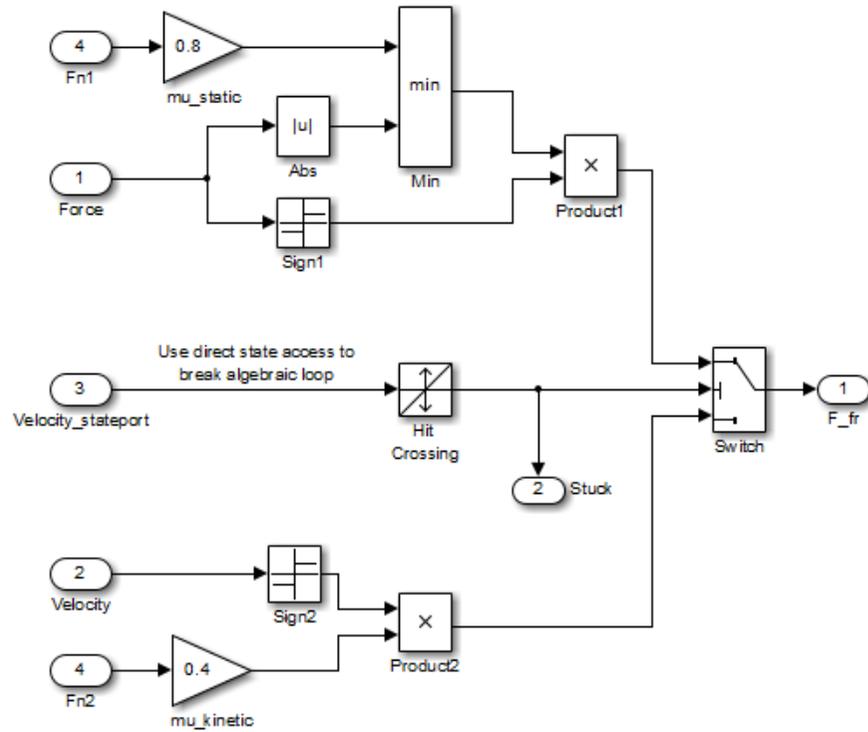

## Usage as an Input to a Switch Block

The `sldemo_zeroxing` model shows how you can use the Abs block as an input to the Switch block.

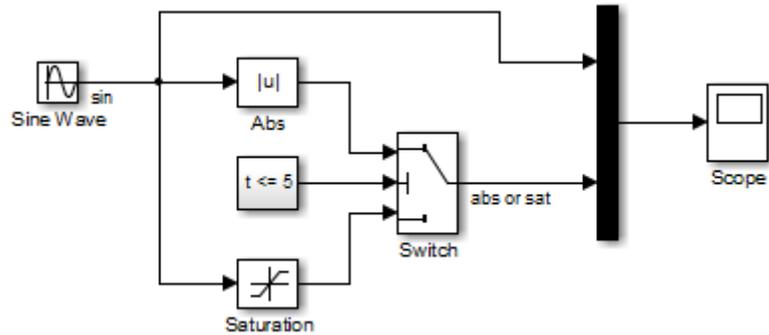

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	Yes, if enabled


# Action Port

---

**Purpose** Implement Action subsystems used in if and switch control flow statements

**Library** Ports & Subsystems

**Description** Action Port blocks implement action subsystems used in if and switch control flow statements. The If Action Subsystem and the Switch Case Action Subsystem blocks each contain an Action Port block.

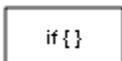


## Convert a Subsystem into an Action Subsystem

Use an Action Port block to convert a subsystem that has no control ports (such as an enable port, trigger port, or a function-call port) into an action subsystem.

- 1** Open the subsystem you want to convert.
- 2** Drag an If Action Subsystem or a Switch Case Action Subsystem block from the Ports & Subsystems library into your subsystem.
- 3** Open the action subsystem and copy the Action Port block.
- 4** Go up a level to your subsystem and paste the Action Port block.
- 5** Delete the action subsystem you dragged into your model.

The subsystem icon in your model will change to include an Action port. The resulting action subsystem is atomic and executes in response to the conditional outputs of an If or Switch Case block. The diagram shows an if-else control flow statement using action subsystems connected to an If block.

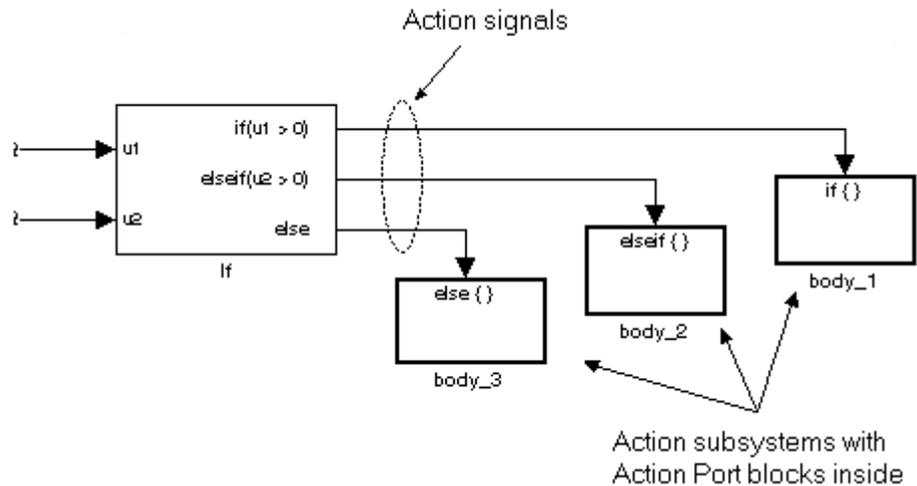

When you connect an If or Switch Case block to an action subsystem, the action port label on the subsystem icon changes to match the output port of the driving block (i.e. `if{ }`, `else{ }`, `elseif{ }`, `case{ }`, or `default{ }`).

---

**Note** All blocks in an action subsystem must run at the same rate as the driving If or Switch Case block, or should have their sample time set to -1 (inherited).


---

## Data Type Support

Action Port blocks do not have data inputs or outputs.

# Action Port

## Parameters and Dialog Box

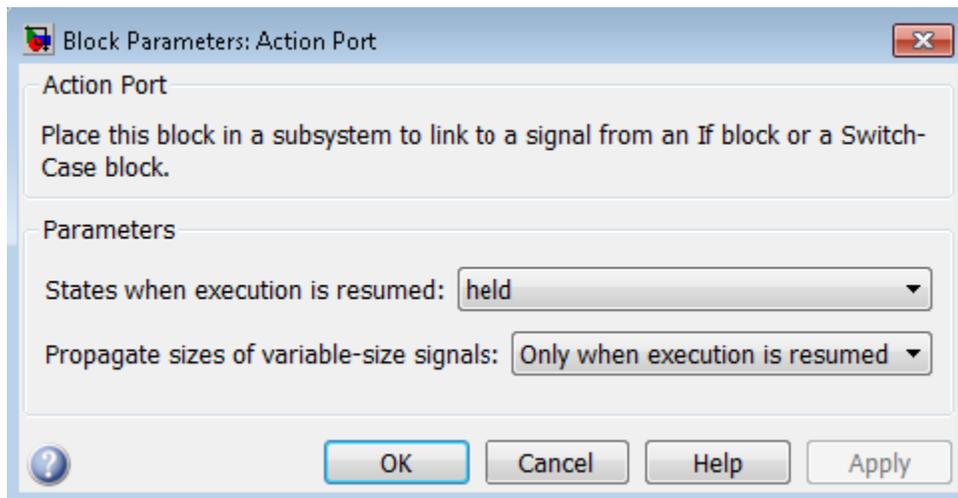

- “States when execution is resumed” on page 1-12
- “Propagate sizes of variable-size signals” on page 1-14

### States when execution is resumed

Specify how to handle internal states when a subsystem with an Action Port block reenables.

#### Settings

**Default:** held


held

When the subsystem reenables, retains the states of the Action subsystem with their previous values. Retains the previous values of states between calls even if calling other member Action subsystems of an if-else or switch control flow statement.

reset

Reinitializes the states of the Action subsystem to initial values when the subsystem reenables.

Reenablement of a subsystem occurs when called and the condition of the call is true after having been previously false. In the following example, the Action Port blocks for both Action subsystems A and B have the **States when execution is resumed** parameter set to reset.

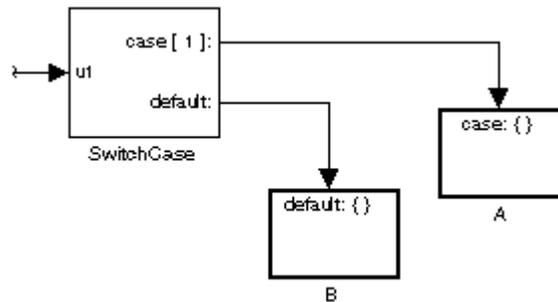

If case[1] is true, call Action subsystem A. This result implies that the default condition is false. When later calling B for the default condition, its states are reset. In the same way, Action subsystem A states are reset when calling A right after calling Action subsystem B.

Repeated calls to the Action subsystem of a case does not reset its states. If calling A again right after a previous call to A, this action does not reset the states of A. This behavior is because the condition of case[1] was not previously false. The same applies to B.

## Command-Line Information

**Parameter:** InitializeStates

**Type:** string

**Value:** 'held' | 'reset' |

**Default:** 'held'

# Action Port

---

## Propagate sizes of variable-size signals

Specify when to propagate a variable-size signal.

### Settings

**Default:** Only when execution is resumed

Only when execution is resumed

Propagates variable-size signals only when reenabling the subsystem containing the Action Port block.

During execution

Propagates variable-size signals at each time step.

### Command-Line Information

**Parameter:** PropagateVarSize

**Type:** string

**Value:** 'Only when execution is resumed' | 'During execution'

**Default:** 'Only when execution is resumed'

## Characteristics

Sample Time	Inherited from driving If or Switch Case block
-------------	--


## See Also

If, If Action Subsystem, Switch Case, and Switch Case Action Subsystem blocks for examples using Action Port blocks

**Purpose** Constrain input signal to zero

**Library** Math Operations

## Description

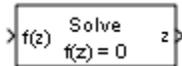


The Algebraic Constraint block constrains the input signal  $f(z)$  to zero and outputs an algebraic state  $z$ . The block outputs the value that produces a zero at the input. The output must affect the input through a direct feedback path, that is, the feedback path contains only blocks with direct feedthrough. For example, you can specify algebraic equations for index 1 differential-algebraic systems (DAEs).

**Algorithm** The Algebraic Constraint block uses a dogleg trust-region algorithm to solve algebraic loops [1], [2].

**Data Type Support** The Algebraic Constraint block accepts and outputs real values of type double.

# Algebraic Constraint

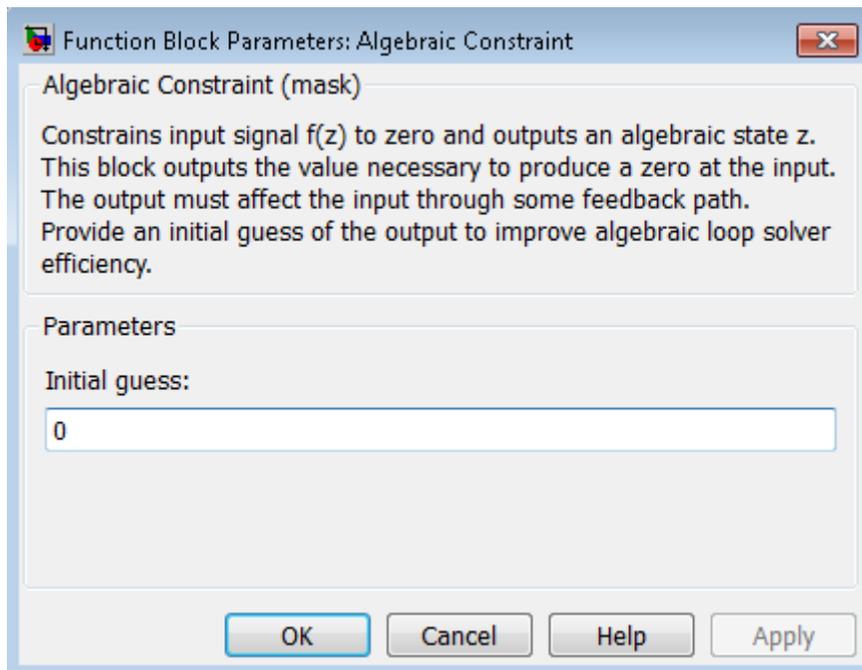

## Parameters and Dialog Box

### Initial guess

An initial guess for the solution value. The default is 0.


## Example

By default, the **Initial guess** parameter is zero. You can improve the efficiency of the algebraic-loop solver by providing an **Initial guess** for the algebraic state  $z$  that is close to the solution value.

For example, the following model solves these equations:

$$\begin{aligned}z_2 + z_1 &= 1 \\z_2 - z_1 &= 1\end{aligned}$$

The solution is  $z_2 = 1$ ,  $z_1 = 0$ , as the Display blocks show.

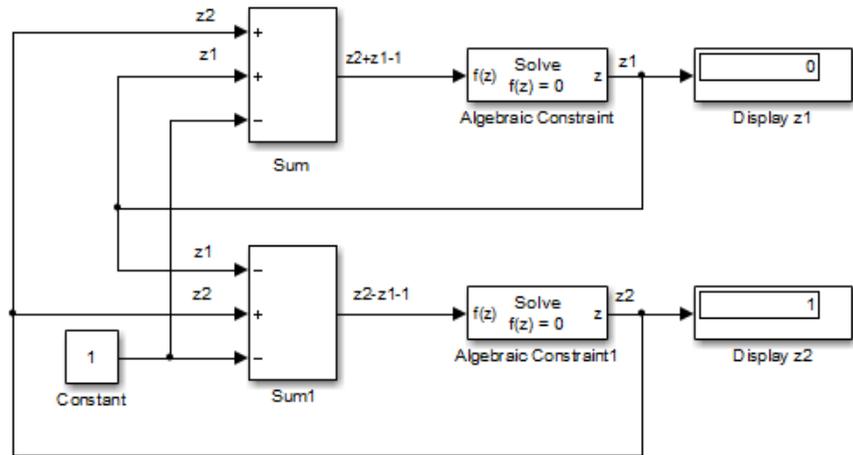

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block
Scalar Expansion	No
Dimensionalized	Yes
Zero-Crossing Detection	No

## References

- [1] Garbow, B. S., K. E. Hillstom, and J. J. Moré. *User Guide for MINPACK-1*. Argonne, IL: Argonne National Laboratory, 1980.
- [2] Rabinowitz, P. H. *Numerical Methods for Nonlinear Algebraic Equations*. New York, NY: Gordon and Breach, 1970.

# Assertion

---

**Purpose** Check whether signal is zero

**Library** Model Verification

**Description** The Assertion block checks whether any of the elements of the input signal is zero. If all elements are nonzero, the block does nothing. If any element is zero, the block halts the simulation, by default, and displays an error message. Use the block parameter dialog box to:



- Specify that the block should display an error message when the assertion fails but allow the simulation to continue.
- Specify a MATLAB® expression to evaluate when the assertion fails.
- Enable or disable the assertion.

You can also use the **Model Verification block enabling** setting on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box to enable or disable all Assertion blocks in a model.

The Assertion block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.


---

**Note** For information about how Simulink Coder™ generated code handles Model Verification blocks, see “Debug”.

---

**Data Type Support** The Assertion block accepts input signals of any dimensions and any numeric data type that Simulink supports, including fixed-point data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

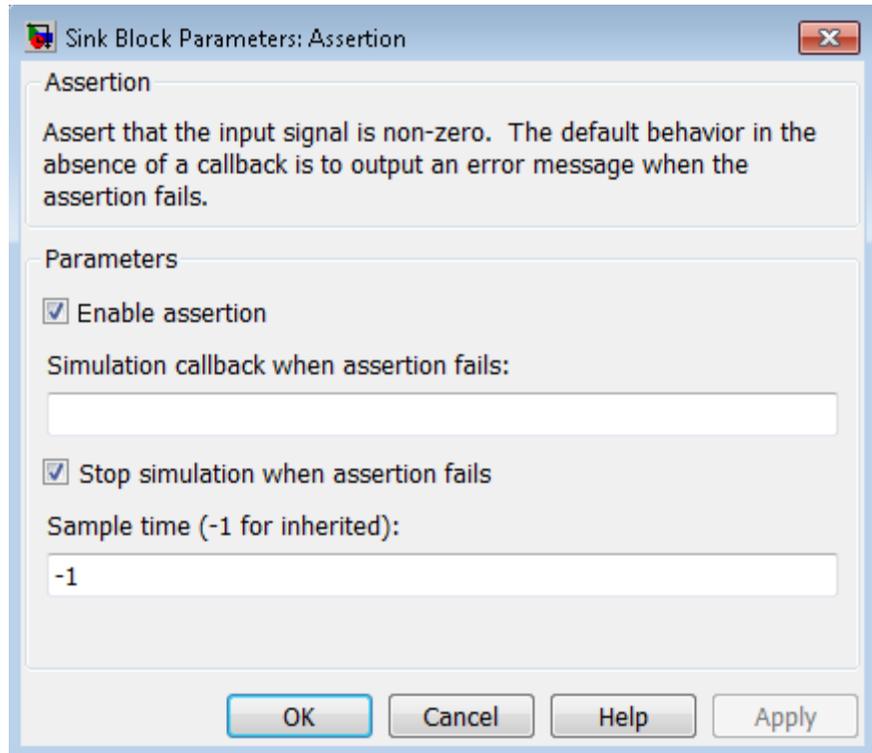

## Parameters and Dialog Box

### Enable assertion

Clearing this check box disables the Assertion block, that is, causes the model to behave as if the Assertion block did not exist. The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box lets you enable or disable all Assertion blocks in a model regardless of the setting of this option.

# Assertion

---

## Simulation callback when assertion fails

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

## Stop simulation when assertion fails

Selecting this check box causes the Assertion block to halt the simulation when the block input is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

## Sample time (-1 for inherited)

Enter the time interval between sample time hits or specify another appropriate sample time such as continuous. By default, the block inherits its sample time based upon its context within the model. For more information, see “Sample Time”.

## Characteristics

Direct Feedthrough	No
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Assign values to specified elements of signal

**Library** Math Operations

## Description



The Assignment block assigns values to specified elements of the signal. You can specify the indices of the elements to be assigned values either by entering the indices in the block's dialog box or by connecting an external indices source or sources to the block. The signal at the block's data port, labeled U, specifies values to be assigned to Y. The block replaces the specified elements of Y with elements from the data signal.

Based on the value you enter for the **Number of output dimensions** parameter, a table of index options is displayed. Each row of the table corresponds to one of the output dimensions in **Number of output dimensions**. For each dimension, you can define the elements of the signal to work with. Specify a vector signal as a 1-D signal and a matrix signal as a 2-D signal. When you configure the Assignment block for multidimensional signal operations, the block icon changes.

For example, assume a 5-D signal with a one-based index mode. The table in the Assignment block dialog changes to include one row for each dimension. If you define each dimension with the following entries:

- 1  
**Index Option**, select Assign all
- 2  
**Index Option**, select Index vector (dialog)  
**Index**, enter [1 3 5]

# Assignment

---

- 3  
**Index Option**, select Starting index (dialog)  
**Index**, enter 4
- 4  
**Index Option**, select Starting index (port)
- 5  
**Index Option**, select Index vector (port)

The assigned values will be  $Y(1:end,[1\ 3\ 5],4:3+size(U,3),Idx4:Idx4+size(U,4)-1,Idx5)=U$ , where  $Idx4$  and  $Idx5$  are the input ports for dimensions 4 and 5.

The Assignment block's data port is labeled U. The rest of this section refers to the data port as U to simplify the explanation of the block's usage.


When using the Assignment block in Normal mode, Simulink initializes block outputs to zero even if the model does not explicitly initialize them. In Accelerator mode, Simulink converts the model into an S-Function. This involves code generation. The code generated may not do implicit initialization of block outputs. In such cases, you must explicitly initialize the model outputs.

You can use the block to assign values to vector, matrix, or multidimensional signals.

You can use an array of buses as an input signal to an Assignment block. For details about defining and using an array of buses, see "Combine Buses into an Array of Buses".

## Iterated Assignment

You can use the Assignment block to assign values computed in a For or While Iterator loop to successive elements of a vector, matrix, or multidimensional signal in a single time step. For example, the following model uses a For Iterator block to create a vector signal each of whose elements equals  $3*i$  where  $i$  is the index of the element.

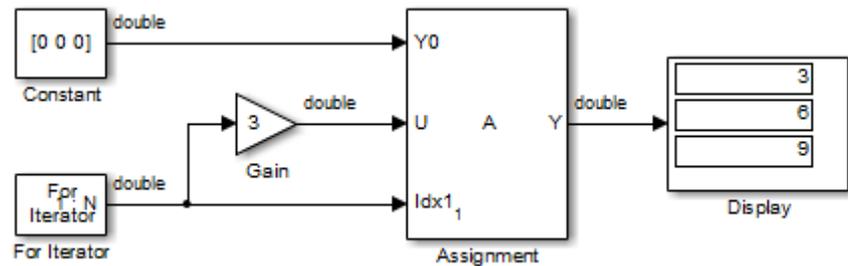


Iterated assignment uses an iterator (For or While) block to generate indices for the Assignment block. On the first iteration of an iterated assignment, the Assignment block copies the first input (Y0) to the output (Y) and assigns the second input (U) to the output  $Y(E_1)$ . On successive iterations, the Assignment block assigns the current value of U to  $Y(E_i)$ , that is, without first copying Y0 to Y. These actions occur in a single time step.

## Data Type Support

The data and initialization ports of the Assignment block accept signals of any data type that Simulink supports, including fixed-point and enumerated data types. The external indices port accepts any built-in data type, except Boolean data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Assignment

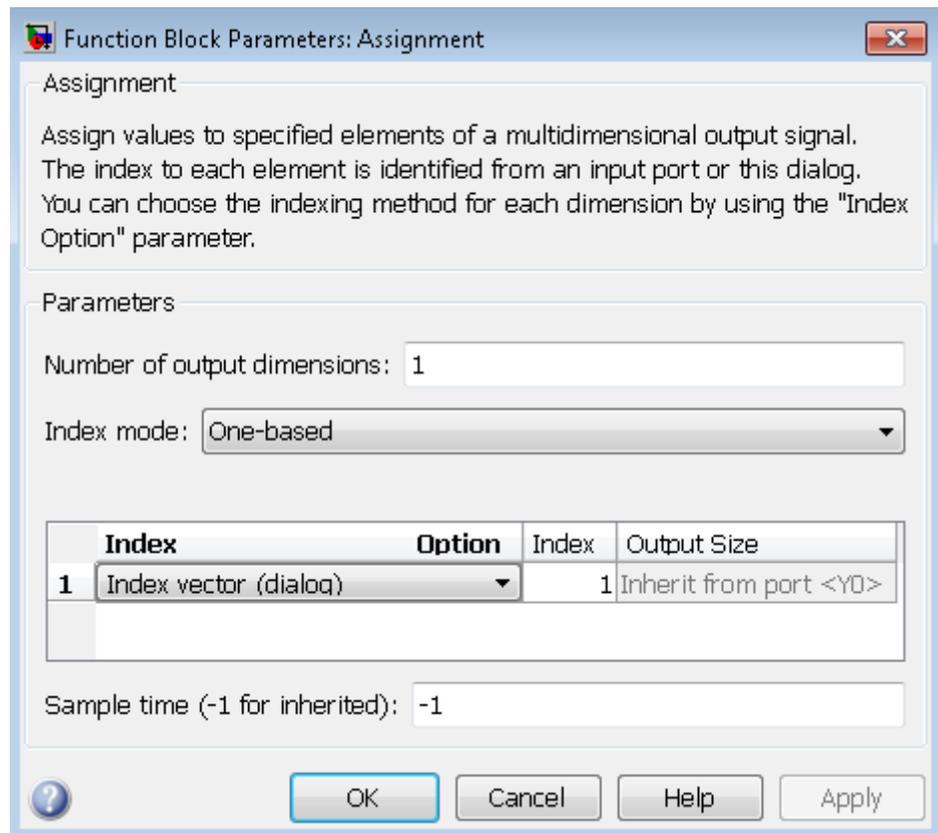

## Parameters and Dialog Box

### Number of output dimensions

Enter the number of dimensions of the output signal.

### Index mode

Select the indexing mode: One-based or Zero-based. If One-based is selected, an index of 1 specifies the first element of the input vector, 2, the second element, and so on. If Zero-based is selected, an index of 0 specifies the first element of the input vector, 1, the second element, and so on.

## Index Option

Define, by dimension, how the elements of the signal are to be indexed. From the list, select:

- Assign all

This is the default. All elements are assigned.

- Index vector (dialog)

Enables the **Index** column. Enter the indices of elements.

- Index vector (port)

Disables the **Index** column. The index port defines the indices of elements.

- Starting index (dialog)

Enables the **Index** column. Enter the starting index of the range of elements to be assigned values.

- Starting index (port)

Disables the **Index** column. The index port defines the starting index of the range of elements to be assigned values.

If you choose **Index vector (port)** or **Starting index (port)** for any dimension in the table, you can specify the value for the **Initialize output (Y)** parameter to be one of the following:

- Initialize using input port <Y0>
- Specify size for each dimension in table

Otherwise, Y0 always initializes output port Y.

The **Index** and **Output Size** columns are displayed as relevant.

## Index

If the **Index Option** is **Index vector (dialog)**, enter the index of each element you are interested in.

If the **Index Option** is `Starting index` (dialog), enter the starting index of the range of elements to be selected. The number of elements from the starting point is determined by the size of this dimension at U.

## **Output Size**

Enter the width of the block output signal. If you select `Specify size for each dimension in table` for the **Initialize output (Y)** parameter, this column is enabled.

## **Initialize output (Y)**

Specify how to initialize the output signal. The **Initialize output** parameter appears when you set **Index Option** to `Index vector (port)` or `Starting index (port)`.

- Initialize using input port <Y0>

The signal at the input port Y0 initializes the output.

- Specify size for each dimension in table

The block requires you to specify the width of the block's output signal in the **Output Size** parameter. If the output has unassigned elements, the value of those elements is undefined.

## **Action if any output element is not assigned**

Specify whether to produce a warning or error if you have not assigned all output elements. Options include:

- Error
- Warning
- None

## **Sample time (-1 for inherited)**

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See "Specify Sample Time" in the Simulink documentation.

<b>Characteristics</b>	Direct Feedthrough	Yes
	Sample Time	Specified in the <b>Sample time</b> parameter
	Scalar Expansion	Yes
	Dimensionalized	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	No

# Backlash


**Purpose** Model behavior of system with play

**Library** Discontinuities

## Description



The Backlash block implements a system in which a change in input causes an equal change in output. However, when the input changes direction, an initial change in input has no effect on the output. The amount of side-to-side play in the system is referred to as the *deadband*. The deadband is centered about the output. This figure shows the block's initial state, with the default deadband width of 1 and initial output of 0.

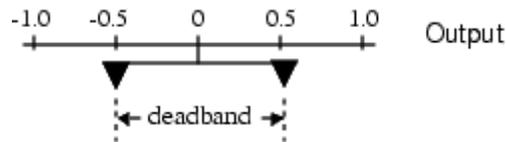

A system with play can be in one of three modes:


- Disengaged — In this mode, the input does not drive the output and the output remains constant.
- Engaged in a positive direction — In this mode, the input is increasing (has a positive slope) and the output is equal to the input *minus* half the deadband width.
- Engaged in a negative direction — In this mode, the input is decreasing (has a negative slope) and the output is equal to the input *plus* half the deadband width.

If the initial input is outside the deadband, the **Initial output** parameter value determines whether the block is engaged in a positive or negative direction, and the output at the start of the simulation is the input plus or minus half the deadband width.


For example, the Backlash block can be used to model the meshing of two gears. The input and output are both shafts with a gear on one end, and the output shaft is driven by the input shaft. Extra space

between the gear teeth introduces *play*. The width of this spacing is the **Deadband width** parameter. If the system is disengaged initially, the output (the position of the driven gear) is defined by the **Initial output** parameter.


The following figures illustrate the block's operation when the initial input is within the deadband. The first figure shows the relationship between the input and the output while the system is in disengaged mode (and the default parameter values are not changed).

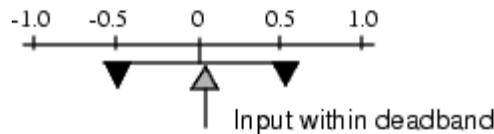

The next figure shows the state of the block when the input has reached the end of the deadband and engaged the output. The output remains at its previous value.

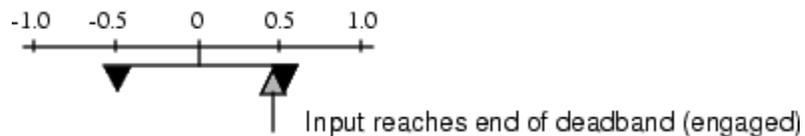

The final figure shows how a change in input affects the output while they are engaged.

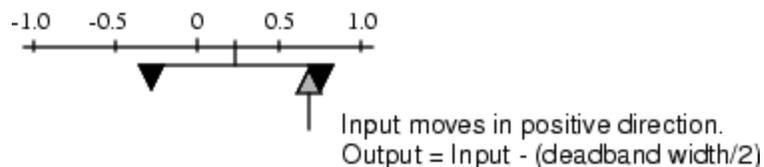

If the input reverses its direction, it disengages from the output. The output remains constant until the input either reaches the opposite end of the deadband or reverses its direction again and engages at the same end of the deadband. Now, as before, movement in the input causes equal movement in the output.

# Backlash


---

For example, if the deadband width is 2 and the initial output is 5, the output,  $y$ , at the start of the simulation is as follows:

- 5 if the input,  $u$ , is between 4 and 6
- $u + 1$  if  $u < 4$
- $u - 1$  if  $u > 6$

## Data Type Support

The Backlash block accepts and outputs real values of `single`, `double`, and built-in integer data types.

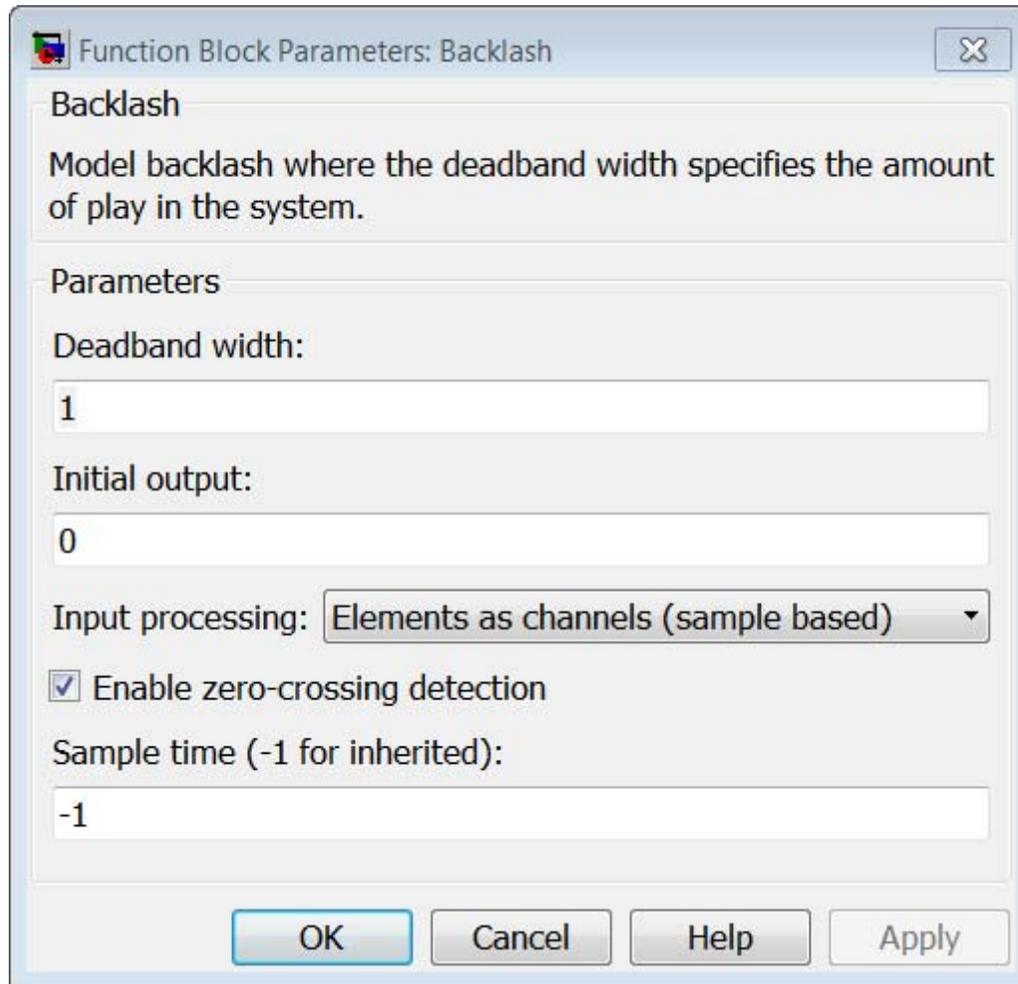

## Parameters and Dialog Box

### Deadband width

Specify the width of the deadband. The default is 1.

## Initial output

Specify the initial output value. The default value is 0. This parameter is tunable. Simulink does not allow the initial output of this block to be `inf` or `NaN`.

## Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- **Elements as channels (sample based)** — Treat each element of the input as a separate channel (sample-based processing).
- **Columns as channels (frame based)** — Treat each column of the input as a separate channel (frame-based processing).

---

**Note** Frame-based processing requires a DSP System Toolbox™ license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based

signals for the input  $u$ . All other input signals must be sample based.

Input Signal $u$	Input Processing Mode	Block Works?
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

### **Enable zero-crossing detection**

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.


### **Sample time (-1 for inherited)**

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation.


# Backlash

## Examples

The following model shows the effect of a sine wave passing through a Backlash block.

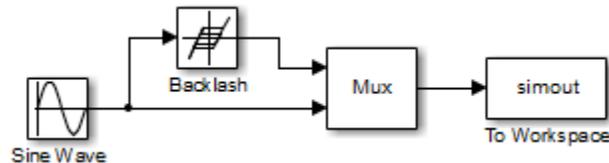

The Backlash block uses default parameter values: the deadband width is 1 and the initial output is 0. The following plot shows that the Backlash block output is zero until the input reaches the end of the deadband (at 0.5). Now the input and output are engaged and the output moves as the input does until the input changes direction (at 1.0). When the input reaches 0, it again engages the output at the opposite end of the deadband.

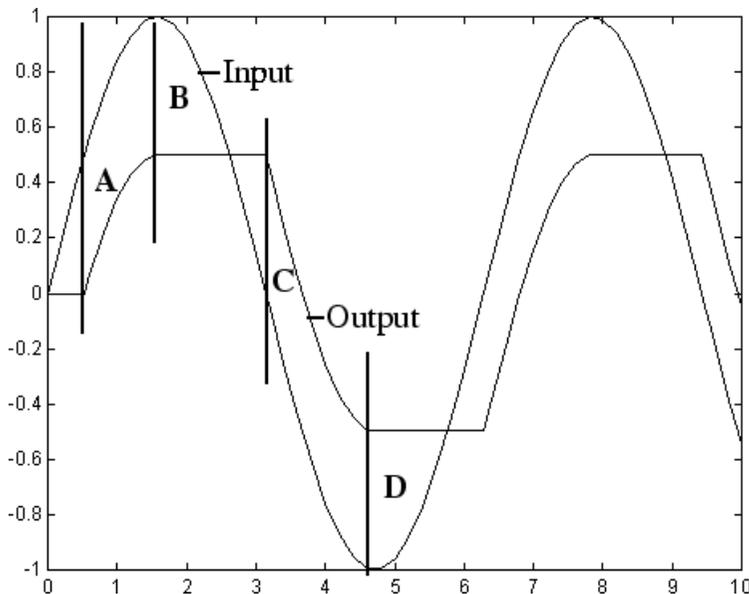

**A** Input engages in positive direction. Change in input causes equal change in output.

**B** Input disengages. Change in input does not affect output.

**C** Input engages in negative direction. Change in input causes equal change in output.

**D** Input disengages. Change in input does not affect output.

<b>Characteristics</b>	Direct Feedthrough	Yes
	Sample Time	Specified in the <b>Sample time</b> parameter
	Scalar Expansion	Yes
	Dimensionalized	Yes
	Zero-Crossing Detection	Yes, if enabled

# Unresolved Link


---

## Purpose


Indicate unresolved reference to library block

## Description

This block indicates an unresolved reference to a library block (see “Create a Linked Block”). You can use this block’s parameter dialog box to fix the reference to point to the actual location of the library block.

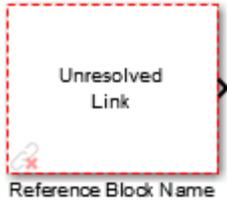

## Parameters and Dialog Box

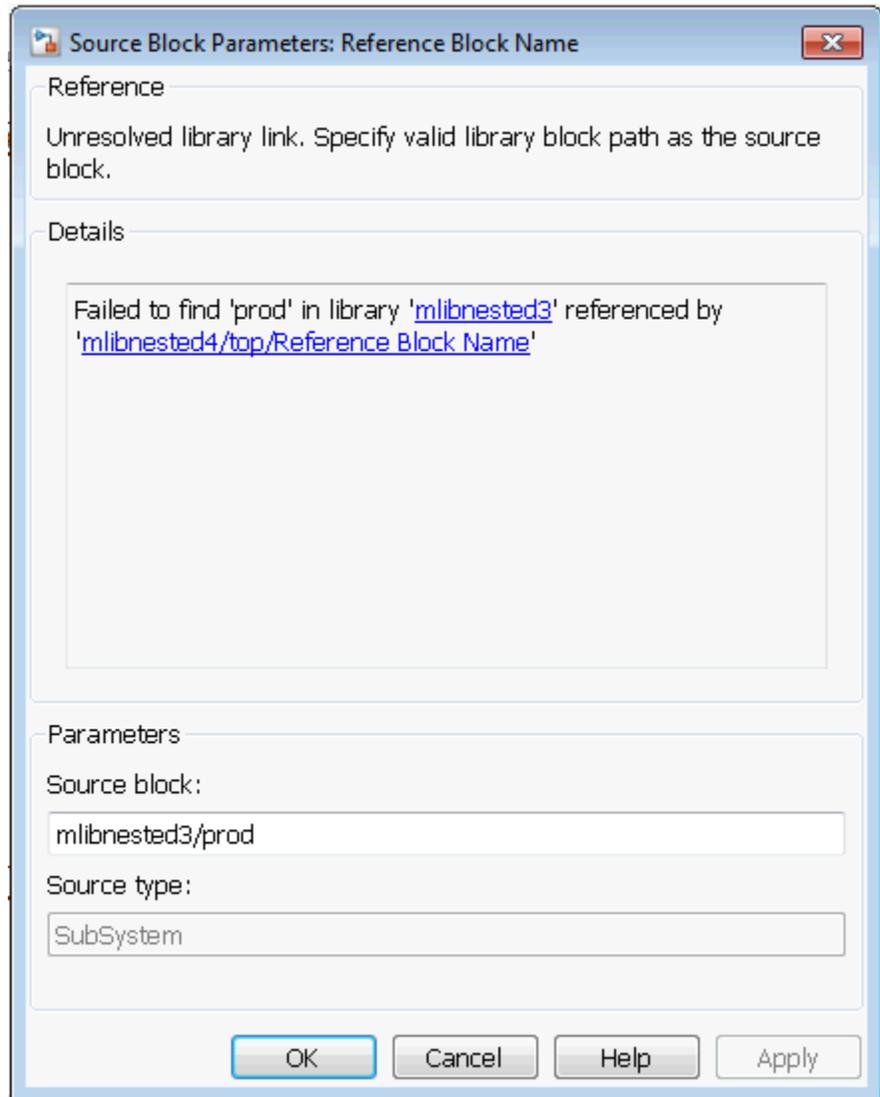

# Unresolved Link

---

## Details

Description of the cause of the unresolved link. You can customize this description to include URLs as follows:

```
set_param(library1, 'libraryinfo', 'https://www.mathworks.com');
```

Here, `library1` is the name of the library for which you want to change the description, and `libraryinfo` is the property that provides the description of the unresolved link.

## Source block

Path of the library block that this link represents. To fix a bad link, edit this field to reflect the actual path of the library block. Then select Apply or OK to apply the fix and close the dialog box.

## Source type

Type of library block that this link represents.

**Purpose** Introduce white noise into continuous system

**Library** Sources

**Description** **Simulation of White Noise**



The Band-Limited White Noise block generates normally distributed random numbers that are suitable for use in continuous or hybrid systems.

Theoretically, continuous white noise has a correlation time of 0, a flat power spectral density (PSD), and a total energy of infinity. In practice, physical systems are never disturbed by white noise, although white noise is a useful theoretical approximation when the noise disturbance has a correlation time that is very small relative to the natural bandwidth of the system.

In Simulink software, you can simulate the effect of white noise by using a random sequence with a correlation time much smaller than the shortest time constant of the system. The Band-Limited White Noise block produces such a sequence. The correlation time of the noise is the sample rate of the block. For accurate simulations, use a correlation time much smaller than the fastest dynamics of the system. You can get good results by specifying

$$tc \approx \frac{1}{100} \frac{2\pi}{f_{max}},$$

where  $f_{max}$  is the bandwidth of the system in rad/sec.

### Comparison with the Random Number Block

The primary difference between this block and the Random Number block is that the Band-Limited White Noise block produces output at a specific sample rate. This rate is related to the correlation time of the noise.

# Band-Limited White Noise

---

## Usage with the Averaging Power Spectral Density Block

The Band-Limited White Noise block specifies a two-sided spectrum, where the units are Hz. The Averaging Power Spectral Density block specifies a one-sided spectrum, where the units are the square of the magnitude per unit radial frequency:  $\text{Mag}^2/(\text{rad}/\text{sec})$ . When you feed the output of a Band-Limited White Noise block into an Averaging Power Spectral Density block, the average PSD value is  $\pi$  times smaller than the **Noise power** of the Band-Limited White Noise block. This difference is the result of converting the units of one block to the units of the other:  $1/(1/2)(2\pi) = 1/\pi$ , where:


- $1/2$  is the factor for converting from a two-sided to one-sided spectrum
- $2\pi$  is the factor for converting from Hz to rad/sec

## Algorithm

To produce the correct intensity of this noise, the covariance of the noise is scaled to reflect the implicit conversion from a continuous PSD to a discrete noise covariance. The appropriate scale factor is  $1/tc$ , where  $tc$  is the correlation time of the noise. This scaling ensures that the response of a continuous system to the approximate white noise has the same covariance as the system would have to true white noise. Because of this scaling, the covariance of the signal from the Band-Limited White Noise block is not the same as the **Noise power** (intensity) parameter. This parameter is actually the height of the PSD of the white noise. This block approximates the covariance of white noise as the **Noise power** divided by  $tc$ .

## Data Type Support

The Band-Limited White Noise block outputs real values of type double.

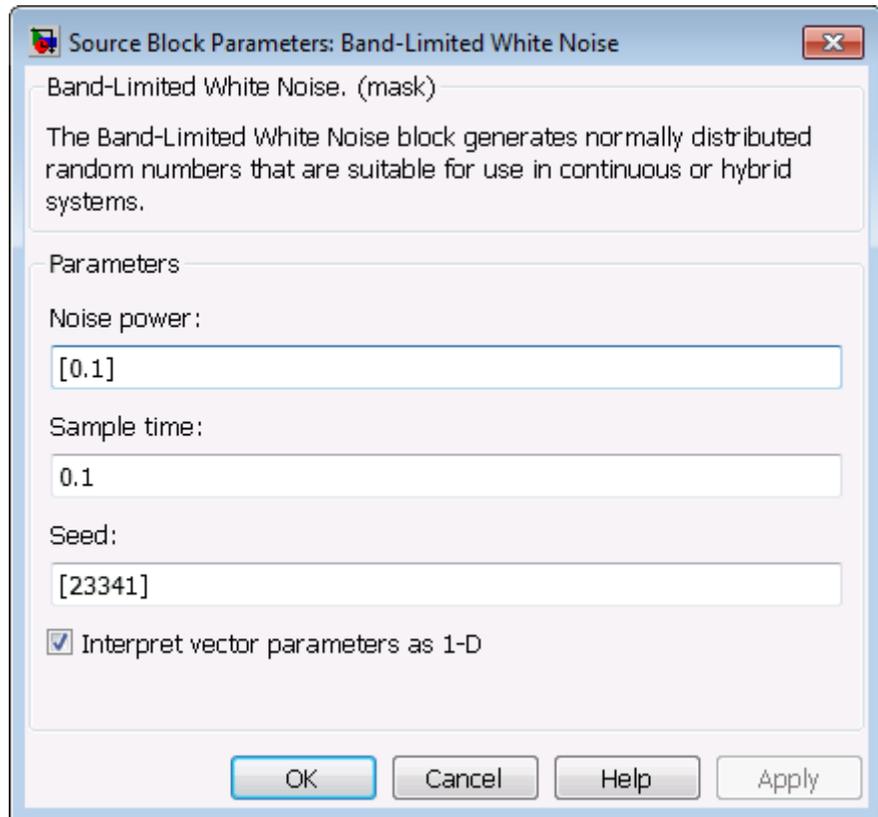

## Parameters and Dialog Box

### Noise power

Specify the height of the PSD of the white noise. The default value is 0.1.

### Sample time

Specify the correlation time of the noise. The default value is 0.1. For more information, see “Specify Sample Time” in the Simulink documentation.

# Band-Limited White Noise

---

## Seed

Specify the starting seed for the random number generator. The default value is 23341.

## Interpret vector parameters as 1-D

Select to output a 1-D array when the block parameters are vectors. Otherwise, output a 2-D array one of whose dimensions is 1. See “Determining the Output Dimensions of Source Blocks” in the Simulink documentation.

## Examples

The following Simulink examples show how to use the Band-Limited White Noise block:

- `slexAircraftExample`
- `sldemo_radar_eml`

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of the <b>Noise power</b> and <b>Seed</b> parameters and output
Dimensionalized	Yes
Multidimensionalized	No
Zero-Crossing Detection	No


## See Also

Random Number

**Purpose** Add bias to input

**Library** Math Operations

**Description** The Bias block adds a bias, or offset, to the input signal according to

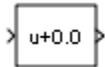

$$Y = U + bias,$$

where  $U$  is the block input and  $Y$  is the output.


**Data Type Support**

The Bias block accepts and outputs real or complex values of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Bias

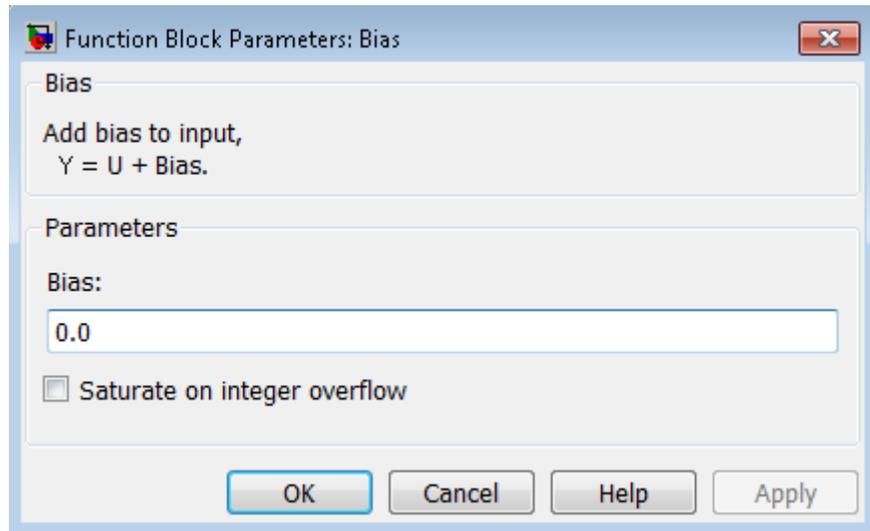

## Parameters and Dialog Box

### Bias

Specify the value of the offset to add to the input signal.

### Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box selected, the block output saturates at 127. Similarly, the

<b>Action</b>	<b>Reasons for Taking This Action</b>	<b>What Happens for Overflows</b>	<b>Example</b>
			block output saturates at a minimum output value of -128.
Do not select this check box.	<p>You want to optimize efficiency of your generated code.</p> <p>You want to avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.</p>	Overflows wrap to the appropriate value that is representable by the data type.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value as <code>int8</code> , which can produce an unintended result. For example, a block result of 130 (binary 1000 0010) expressed as <code>int8</code> , is -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

**Characteristics**

Direct Feedthrough	Yes
Sample Time	Inherited from the driving block

# Bias

---

Scalar Expansion	Yes
States	0
Dimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Set specified bit of stored integer to zero


**Library** Logic and Bit Operations

**Description** The Bit Clear block sets the specified bit, given by its index, of the stored integer to zero. Scaling is ignored.



You can specify the bit to be set to zero with the **Index of bit** parameter, where bit zero is the least significant bit.

**Data Type Support** The Bit Clear block supports Simulink integer, fixed-point, and Boolean data types. The block does not support true floating-point data types or enumerated data types.

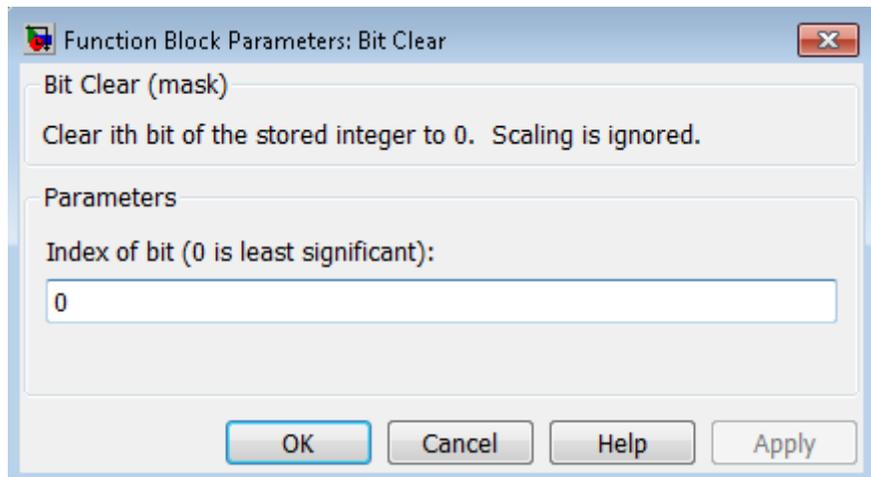

## Parameters and Dialog Box

### Index of bit

Index of bit where bit 0 is the least significant bit.

# Bit Clear

---

## Examples

If the Bit Clear block is turned on for bit 2, bit 2 is set to 0. A vector of constants  $2.^{[0\ 1\ 2\ 3\ 4]}$  is represented in binary as [00001 00010 00100 01000 10000]. With bit 2 set to 0, the result is [00001 00010 00000 01000 10000], which is represented in decimal as [1 2 0 8 16].

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes


## See Also

Bit Set

**Purpose** Concatenates up to 128 input words into a single output

**Library** HDL Coder / HDL Operations

## Description

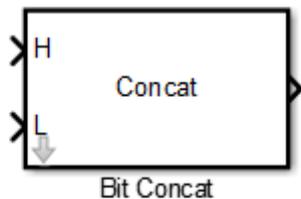

The Bit Concat block concatenates up to 128 input words into a single output. The input port labeled L designates the lowest-order input word; the port labeled H designates the highest-order input word. The right-left ordering of words in the output follows the low-high ordering of input signals.


The operation of the block depends on the number and dimensions of the inputs, as follows:

- Single input: The input can be a scalar or a vector. When the input is a vector, the coder concatenates the individual vector elements together.
- Two inputs: Inputs can be any combination of scalar and vector. When one input is scalar and the other is a vector, the coder performs scalar expansion. Each vector element is concatenated with the scalar, and the output has the same dimension as the vector. When both inputs are vectors, they must have the same size.

# Bit Concat

- Three or more inputs (up to a maximum of 128 inputs): Inputs must be uniformly scalar or vector. All vector inputs must have the same size.

## Dialog Box and Parameters

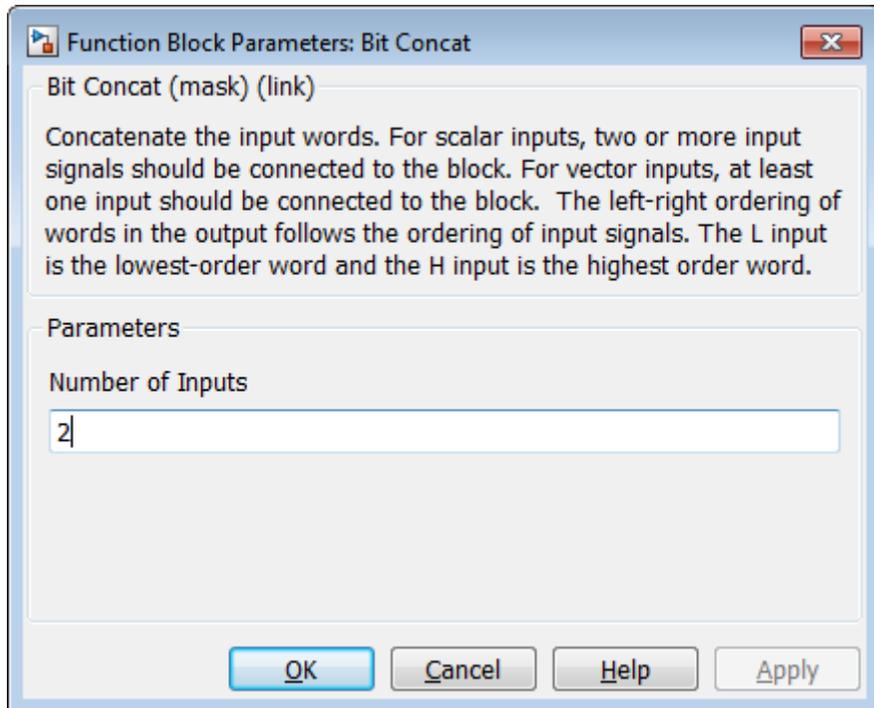

**Number of Inputs:** Enter an integer specifying the number of input signals. The number of input ports displayed on the block updates when **Number of Inputs** changes.

- Default: 2
- Minimum: 1
- Maximum: 128

---

## Caution

Make sure that the **Number of Inputs** is equal to the number of signals you connect to the block. If unconnected inputs are present on the block, an error will occur at code generation time.

---

## Ports

The block has up to 128 input ports, with H representing the highest-order input word, and L representing the lowest-order input word. The maximum concatenated output word size is 128 bits.

## Supported Data Types

- Input: Fixed-point, integer (signed or unsigned), Boolean
- Output: Unsigned fixed-point or integer

## See Also

[Bit Reduce](#) | [Bit Rotate](#) | [Bit Shift](#) | [Bit Slice](#)


# Bit Reduce

---

**Purpose** Performs a selected bit reduction operation (AND, OR, or XOR) on all the bits of the input signal, reducing it to a single-bit result.


**Library** HDL Coder / HDL Operations

## Description

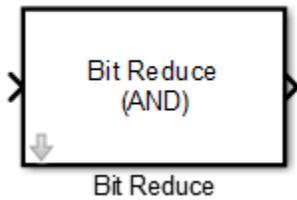

The Bit Reduce block performs a selected bit reduction operation (AND, OR, or XOR) on all the bits of the input signal, reducing it to a single-bit result.

## Dialog Box and Parameters

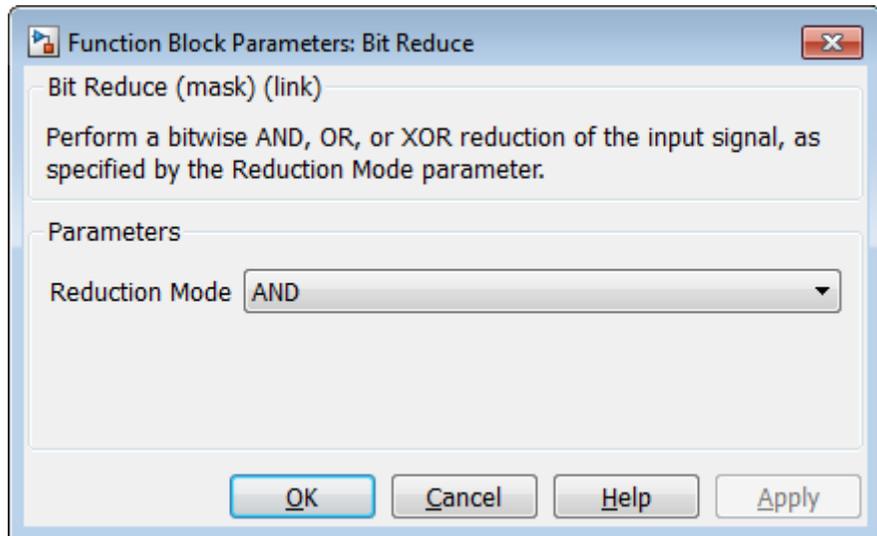

### Reduction Mode

Default: AND

Specifies the reduction operation, as follows:

- AND: Perform a bitwise AND reduction of the input signal.
- OR: Perform a bitwise OR reduction of the input signal.
- XOR: Perform a bitwise XOR reduction of the input signal.

### Ports

The block has the following ports:

Input

- Supported data types: Fixed-point, integer (signed or unsigned), Boolean
- Minimum bit width: 2
- Maximum bit width: 128

# Bit Reduce

---

Output

Supported data type: `ufix1`


## See Also

[Bit Concat](#) | [Bit Rotate](#) | [Bit Shift](#) | [Bit Slice](#)

**Purpose** Rotates the input signal left or right by the specified number of bit positions

**Library** HDL Coder / HDL Operations


## Description

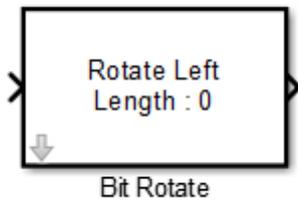

The Bit Rotate block rotates the input signal left or right by the specified number of bit positions.

# Bit Rotate

## Dialog Box and Parameters

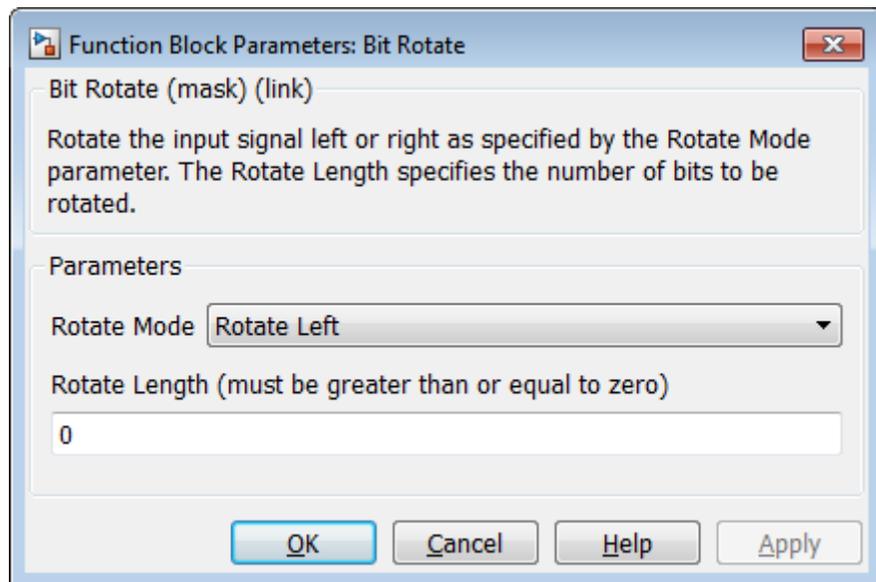

**Rotate Mode:** Specifies direction of rotation, either left or right.

Default: Rotate Left

**Rotate Length:** Specifies the number of bits to be rotated. **Rotate Length** must be greater than or equal to zero.

Default: 0

### Ports

The block has the following ports:

Input

- Supported data types: Fixed-point, integer (signed or unsigned), Boolean
- Minimum bit width: 2
- Maximum bit width: 128

## Output

Has the same data type as the input signal.

## See Also

[Bit Concat](#) | [Bit Reduce](#) | [Bit Shift](#) | [Bit Slice](#)

# Bit Set

**Purpose** Set specified bit of stored integer to one


**Library** Logic and Bit Operations

**Description** The Bit Set block sets the specified bit of the stored integer to one. Scaling is ignored.



You can specify the bit to be set to one with the **Index of bit** parameter, where bit zero is the least significant bit.

**Data Type Support** The Bit Set block supports Simulink integer, fixed-point, and Boolean data types. The block does not support true floating-point data types or enumerated data types.

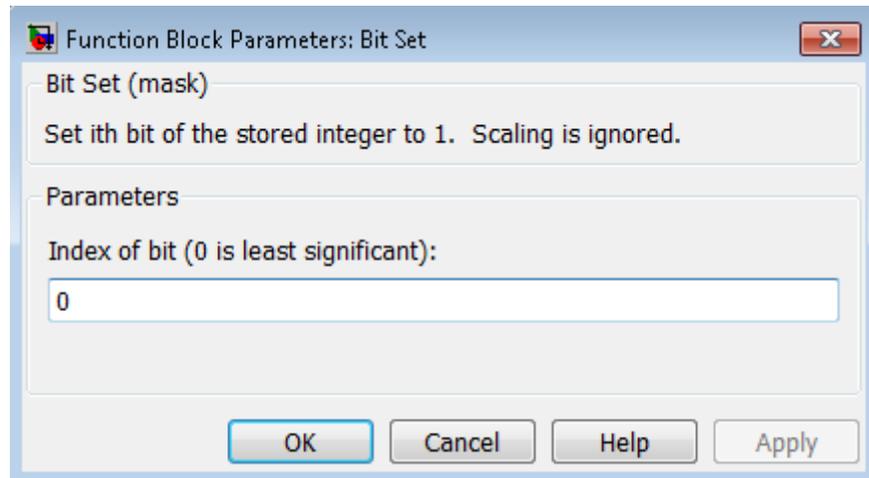

## Parameters and Dialog Box

**Index of bit**  
Index of bit where bit 0 is the least significant bit.

## Examples

If the Bit Set block is turned on for bit 2, bit 2 is set to 1. A vector of constants  $2.^{[0\ 1\ 2\ 3\ 4]}$  is represented in binary as [00001 00010 00100 01000 10000]. With bit 2 set to 1, the result is [00101 00110 00100 01100 10100], which is represented in decimal as [5 6 4 12 20].

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes

## See Also

Bit Clear


# Bit Shift

---

**Purpose** Performs a logical or arithmetic shift on the input signal


**Library** HDL Coder / HDL Operations

## Description

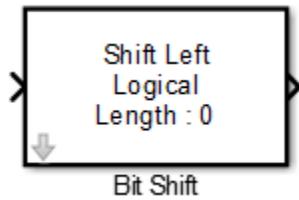

The Bit Shift block performs a logical or arithmetic shift on the input signal.

## Dialog Box and Parameters

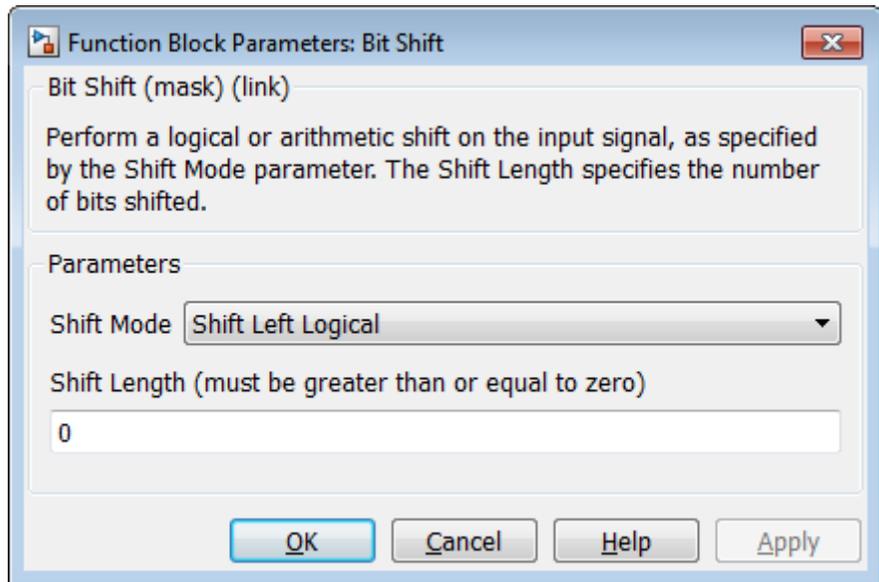

### Shift Mode

Default: Shift Left Logical

Specifies the type and direction of shift, as follows:

- Shift Left Logical
- Shift Right Logical
- Shift Right Arithmetic

### Shift Length

Default: 0

Specifies the number of bits to be shifted. **Shift Length** must be greater than or equal to zero.

## Ports

The block has the following ports:

# Bit Shift

---

## Input

- Supported data types: Fixed-point, integer (signed or unsigned), Boolean
- Minimum bit width: 2
- Maximum bit width: 128

## Output

Has the same data type and bit width as the input signal.


## See Also

[Bit Concat](#) | [Bit Reduce](#) | [Bit Rotate](#) | [Bit Slice](#)

**Purpose** Returns a field of consecutive bits from the input signal

**Library** HDL Coder / HDL Operations


## Description

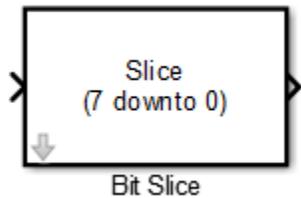

The Bit Slice block returns a field of consecutive bits from the input signal. The lower and upper boundaries of the bit field are specified by zero-based indices entered in the **LSB Position** and **MSB Position** parameters.

# Bit Slice

## Dialog Box and Parameters

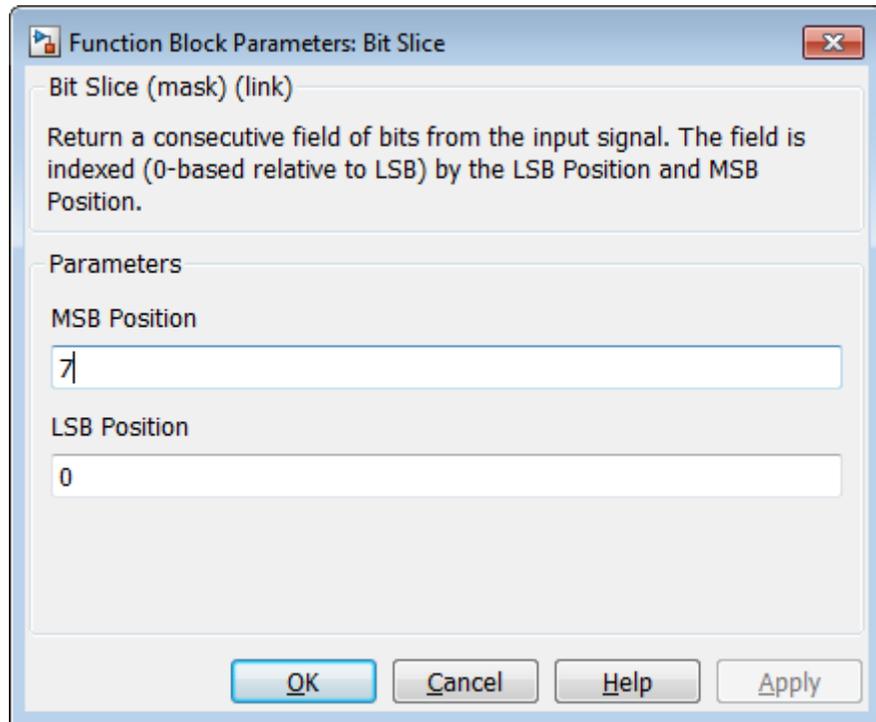

### MSB Position

Default: 7

Specifies the bit position (zero-based) of the most significant bit (MSB) of the field to be extracted.

For an input word size **WS**, **LSB Position** and **MSB Position** should satisfy the following constraints:

$$WS > \text{MSB Position} \geq \text{LSB Position} \geq 0;$$

The word length of the output is computed as  $(\text{MSB Position} - \text{LSB Position}) + 1$ .

### LSB Position

Default: 0

Specifies the bit position (zero-based) of the least significant bit (LSB) of the field to be extracted.

## Ports

The block has the following ports:

Input

- Supported data types: Fixed-point, integer (signed or unsigned), Boolean
- Maximum bit width: 128

Output

Supported data types: unsigned fixed-point or unsigned integer.

## See Also

[Bit Concat](#) | [Bit Reduce](#) | [Bit Rotate](#) | [Bit Shift](#)

# Bitwise Operator

**Purpose** Specified bitwise operation on inputs

**Library** Logic and Bit Operations

**Description** **Bitwise Operations**



The Bitwise Operator block performs the bitwise operation that you specify on one or more operands. Unlike logic operations of the Logical Operator block, bitwise operations treat the operands as a vector of bits rather than a single value.

You can select one of the following bitwise operations:

Bitwise Operation	Description
AND	TRUE if the corresponding bits are all TRUE
OR	TRUE if at least one of the corresponding bits is TRUE
NAND	TRUE if at least one of the corresponding bits is FALSE
NOR	TRUE if no corresponding bits are TRUE
XOR	TRUE if an odd number of corresponding bits are TRUE
NOT	TRUE if the input is FALSE (available only for single input)

## Restrictions on Block Operations

The Bitwise Operator block does not support shift operations. For shift operations, use the Shift Arithmetic block.

When configured as a multi-input XOR gate, this block performs modulo-2 addition according to the IEEE<sup>®</sup> Standard for Logic Elements.

## Behavior of Inputs and Outputs

The output data type, which the block inherits from the driving block, must represent zero exactly. Data types that satisfy this condition include signed and unsigned integer data types.

The size of the block output depends on the number of inputs, the vector size, and the operator you select:

- The NOT operator accepts only one input, which can be a scalar or a vector. If the input is a vector, the output is a vector of the same size containing the bitwise logical complements of the input vector elements.
- For a single vector input, the block applies the operation (except the NOT operator) to all elements of the vector.
  - If you do not specify a bit mask, the output is a scalar.
  - If you do specify a bit mask, the output is a vector.
- For two or more inputs, the block performs the operation between all of the inputs. If the inputs are vectors, the block performs the operation between corresponding elements of the vectors to produce a vector output.

## Bit Mask Behavior

Block behavior changes depending on whether you use a bit mask.

# Bitwise Operator

If the Use bit mask check box is...	The block accepts...	And you specify...	By using...
Selected	One input	<b>Bit Mask</b>	Any valid MATLAB expression, such as $2^5+2^2+2^0$ for the bit mask 00100101
Not selected	Multiple inputs, all having the same base data type	<b>Number of input ports</b>	Any positive integer greater than 1

**Tip** You can also use strings to specify a hexadecimal bit mask such as {'FE73', '12AC'}.

## Bit Set and Bit Clear Operations

You can use the bit mask to set or clear a bit on the input.

To perform a...	Set the Operator parameter to...	And create a bit mask with...
Bit set	OR	A 1 for each corresponding input bit that you want to set to 1
Bit clear	AND	A 0 for each corresponding input bit that you want to set to 0

Suppose you want to set the fourth bit of an 8-bit input vector. The bit mask would be 00010000, which you can specify as  $2^4$  for the **Bit Mask** parameter. To clear the bit, the bit mask would be 11101111, which you can specify as  $2^7+2^6+2^5+2^3+2^2+2^1+2^0$  for the **Bit Mask** parameter.


## Data Type Support

The Bitwise Operator block supports the following data types:

- Built-in integer
- Fixed point
- Boolean

The block does not support floating-point data types or enumerated data types. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Bitwise Operator

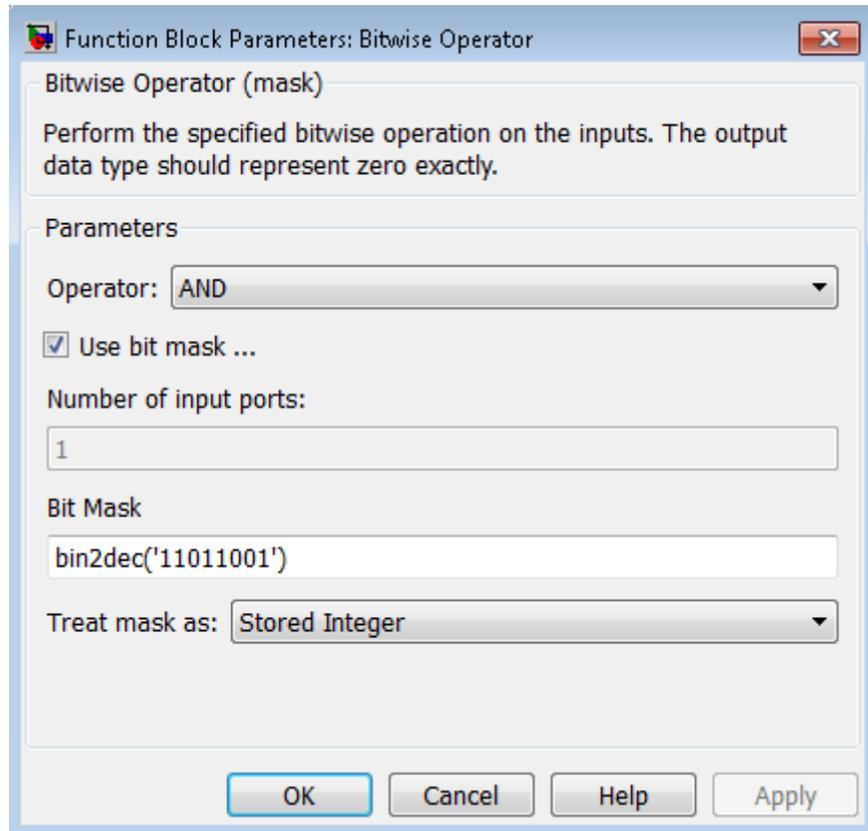

## Parameters and Dialog Box

### Operator

Specify the bitwise logical operator for the block operands.

### Use bit mask

Select to use the bit mask. Clearing this check box enables **Number of input ports** and disables **Bit Mask** and **Treat mask as**.

### Number of input ports

Specify the number of inputs. The default value is 1.

## Bit Mask

Specify the bit mask to associate with a single input. This parameter is available only when you select **Use bit mask**.

---

**Tip** Do not use a mask greater than 53 bits. Otherwise, an error message appears during simulation.

---

## Treat mask as


Specify whether to treat the mask as a real-world value or a stored integer. This parameter is available only when you select **Use bit mask**.

The encoding scheme is  $V = SQ + B$ , as described in “Scaling” in the Fixed-Point Designer documentation. Real World Value treats the mask as  $V$ . Stored Integer treats the mask as  $Q$ .

## Examples

### Unsigned Inputs for the Bitwise Operator Block

The following model shows how the Bitwise Operator block works for unsigned inputs.

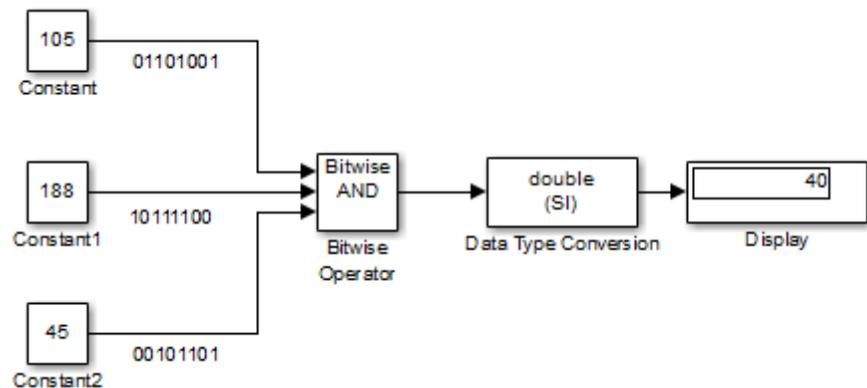


# Bitwise Operator

Each Constant block outputs an 8-bit unsigned integer (uint8). To determine the binary value of each Constant block output, use the dec2bin function. The results for all logic operations appear in the next table.

Operation	Binary Value	Decimal Value
AND	00101000	40
OR	11111101	253
NAND	11010111	215
NOR	00000010	2
XOR	11111000	248
NOT	N/A	N/A

## Signed Inputs for the Bitwise Operator Block

The following model shows how the Bitwise Operator block works for signed inputs.

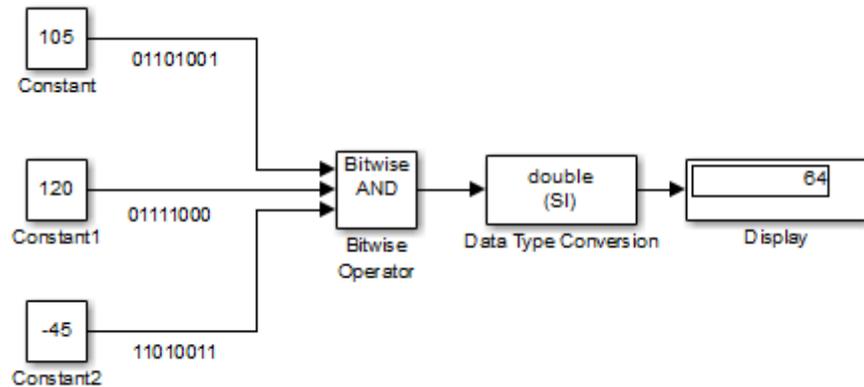

Each Constant block outputs an 8-bit signed integer (int8). To determine the binary value of each Constant block output, use the

dec2bin function. The results for all logic operations appear in the next table.

Operation	Binary Value	Decimal Value
AND	01000000	64
OR	11111011	-5
NAND	10111111	-65
NOR	00000100	4
XOR	11000010	-62
NOT	N/A	N/A

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from the driving block
Scalar Expansion	Yes, of inputs
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Logical Operator

# Block Support Table

---

**Purpose** View data type support for Simulink blocks

**Library** Model-Wide Utilities

## Description



The Block Support Table block helps you access a table that lists the data types that Simulink blocks support. Double-click the block to view the table.

**Data Type Support** Not applicable

**Parameters and Dialog Box** Not applicable

**Characteristics** Not applicable

**Alternatives** To access the information in the Block Support Table, you can enter `showblockdatatypetable` at the MATLAB command prompt.

**Purpose** Replace specified bus elements

**Library** Signal Routing

**Description** The Bus Assignment block assigns signals connected to its Assignment input ports (:=) to specified elements of the bus connected to its Bus input port, replacing the signals previously assigned to those elements. The change does not affect the signals themselves, it affects only the composition of the bus. Signals not replaced are unaffected by the replacement of other signals. For information about buses, see:

- “Composite Signals”
- “Create and Access a Bus”

Connect the bus to be changed to the first input port. Use the block parameters dialog box to specify the bus elements to be replaced. The block displays an assignment input port for each such element. The signal connected to the assignment port must have the same structure, data type, and numeric type as the bus element to which it corresponds.

You cannot use the Bus Assignment block to replace a bus that is nested within another bus. No element selected in the dialog box for replacement can be a bus, and no signal connected to an Assignment port can be a bus.

All signals in a nonvirtual bus must have the same sample time, even if the elements of the associated bus object specify inherited sample times. Any bus operation that would result in a nonvirtual bus that violates this requirement generates an error. All buses and signals input to a Bus Assignment block that modifies a nonvirtual bus must therefore have the same sample time. You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus, to allow the signal or bus to be included in a nonvirtual bus. See “Virtual and Nonvirtual Buses” for more information.

By default, Simulink implicitly converts a non-bus signal to a bus signal to support connecting the signal to a Bus Assignment or Bus Selector block. To prevent Simulink from performing that conversion, in the

# Bus Assignment

---

**Model Configuration Parameters > Diagnostics > Connectivity** pane, set the “Non-bus signals treated as bus signals” diagnostic to warning or error.

By default, Simulink repairs broken selections in the Bus Assignment and Bus Selector block parameters dialog boxes that are due to upstream bus hierarchy changes. Simulink generates a warning to highlight that it made changes. To prevent Simulink from making these repairs automatically, in the **Model Configuration Parameters > Diagnostics > Connectivity** pane, set the “Repair bus selections” diagnostic to Error without repair.

For information about using this block in a library block, see “Buses and Libraries”.

The following limitations apply to working with arrays of buses, when using the Bus Assignment block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

- You cannot connect an array of buses signal to a Bus Assignment block. To work with an array of buses signal, first use a Selector block to select the index for the bus element that you want to use with the Bus Assignment block. Then use that selected bus element with the Bus Assignment block.
- You cannot assign into a sub-bus that is an array of buses.


## Data Type Support

The bus input port of the Bus Assignment block accepts and outputs real or complex values of any data type that Simulink supports, including fixed-point and enumerated data types. The assignment input ports accept the same data types as the bus elements to which they correspond.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

The Bus Assignment dialog box appears as follows:

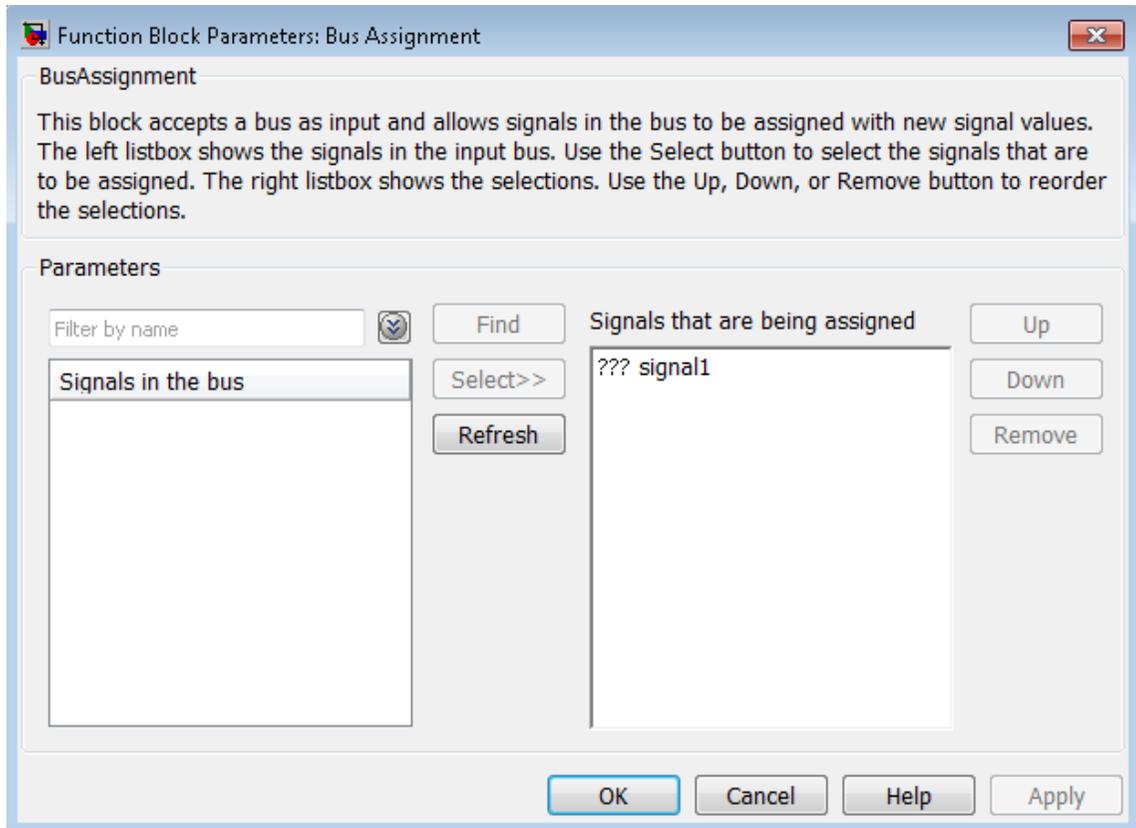

### Signals in the bus

Displays the names of the signals contained by the bus at the block's Bus input port. Click any item in the list to select it. To find the source of the selected signal, click the adjacent **F**ind button. Simulink opens the subsystem containing the signal source and

# Bus Assignment

---

highlights the source's icon. Use the **Select>>** button to move the currently selected signal into the adjacent list of signals to be assigned values (see **Signals that are being assigned** below). To refresh the display (e.g., to reflect modifications to the bus connected to the block), click the adjacent **Refresh** button.

## Signals that are being assigned

Lists the names of bus elements to be assigned values. This block displays an assignment input port for each bus element in this list. The label of the corresponding input port contains the name of the element. You can order the signals by using the **Up**, **Down**, and **Remove** buttons. Port connectivity is maintained when the signal order is changed.

Three question marks (???) before the name of a bus element indicate that the input bus no longer contains an element of that name, for example, because the bus has changed since the last time you refreshed the Bus Assignment block's input and bus element assignment lists. You can fix the problem either by modifying the bus to include a signal of the specified name or by removing the name from the list of bus elements to be assigned values.

## Enable regular expression

To display this parameter, select the **Options** button on the right-hand side of the **Filter by name** edit box (.


Enables the use of MATLAB regular expressions for filtering signal names. For example, entering **t\$** in the **Filter by name** edit box displays all signals whose names end with a lowercase **t** (and their immediate parents). For details, see “Regular Expressions”.

The default is **On**. If you disable use of MATLAB regular expressions for filtering signal names, filtering treats the text you enter in the **Filter by name** edit box as a literal string.

## Show filtered results as a flat list

To display this parameter, select the **Options** button on the right-hand side of the **Filter by name** edit box (🔍).

Uses a flat list format to display the list of filtered signals, based on the search text in the **Filter by name** edit box. The flat list format uses dot notation to reflect the hierarchy of bus signals. The following is an example of a flat list format for a filtered set of nested bus signals.

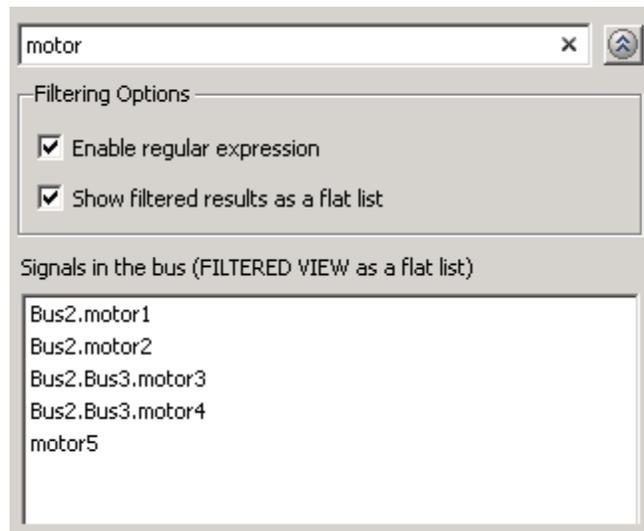

The default is Off, which displays the filtered list using a tree format.

## Characteristics

Multidimensionalized	Yes
Virtual	Yes, if the input bus is virtual For more information, see “Virtual Blocks” in the Simulink documentation.

# Bus Assignment

---

## See Also

- “Composite Signals”
- “Create and Access a Bus”
- Bus Creator
- Bus Selector
- Bus to Vector
- Simulink.Bus
- Simulink.Bus.cellToObject
- Simulink.Bus.createObject
- Simulink.BusElement
- Simulink.Bus.objectToCell
- Simulink.Bus.save

**Purpose** Create signal bus

**Library** Signal Routing

## Description



The Bus Creator block combines a set of signals into a bus. To bundle a group of signals with a Bus Creator block, set the block parameter **Number of inputs** to the number of signals in the group. The block displays the number of ports that you specify. Connect to the resulting input ports those signals that you want to group.

The signals in the bus are ordered from the top input port to the bottom input port. See “How to Rotate a Block” in for a description of the port order for various block orientations.

You can connect any type of signal to the inputs, including other bus signals. To ungroup the signals, connect the output port of the block to a Bus Selector block port.

---

**Note** Simulink hides the name of a Bus Creator block when you copy it from the Simulink library to a model.

---

For information about using this block in a library block, see “Buses and Libraries”.

You can use an array of buses as an input signal to a Bus Creator block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

## Signal Naming

The Bus Creator block assigns a name to each signal on the bus that it creates. This allows you to refer to signals by name when you are searching for their sources (see “Browse Bus Signals” on page 1-84) or selecting signals for connection to other blocks.

The block offers two bus signal naming options. You can specify that:


# Bus Creator

- Each signal on the bus inherits the name of the signal connected to the bus (the default).

Inputs to a Bus Creator block must have unique names. If there are duplicate names, the Bus Creator block appends (signal#) to all input signal names, where # is the input port index.


- Each input signal must have a specific name.

To specify that bus signals inherit their names from input ports, select **Inherit bus signal names from input ports** from the list box on the Block Parameters dialog box. The names of the inherited bus signals appear in the **Signals in the bus** list box. For example, suppose that you have the following model:

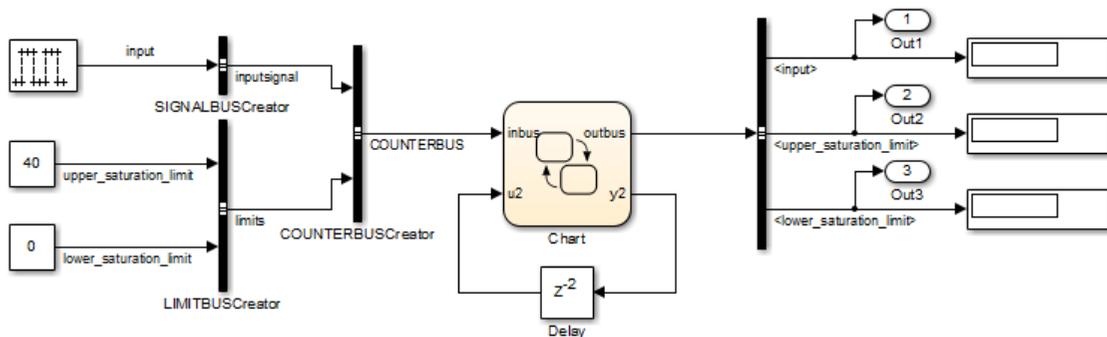

Copyright 2006-2011 The MathWorks, Inc.

In the dialog box for LIMITBUSCreator, the signals `upper_saturation_limit` and `lower_saturation_limit` appear in the **Signals in the bus** list box:

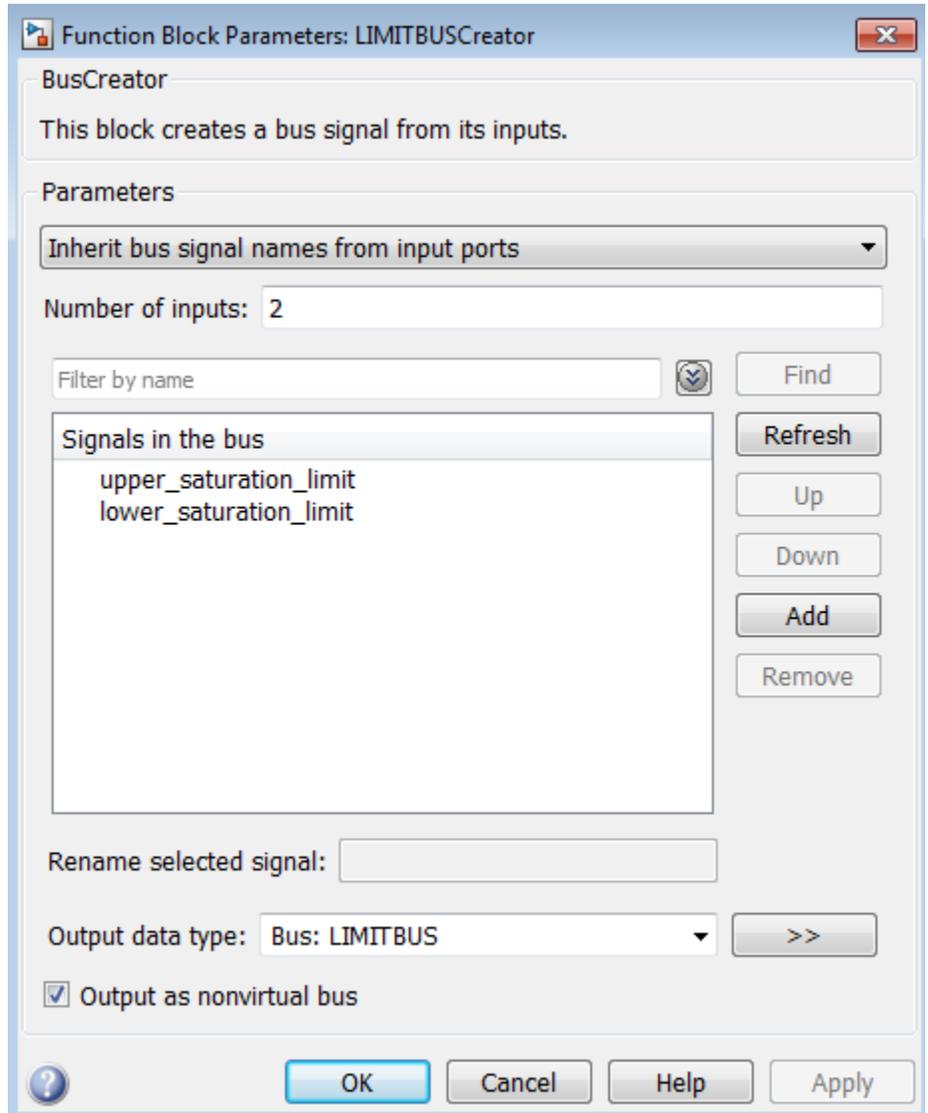

The Bus Creator block generates names for bus signals whose corresponding inputs do not have names. The names are of the form `signaln`, where `n` is the number of the port to which the input signal is connected.

You can change the name of any signal by editing its name on the block diagram or in the Signal Properties dialog box. If you change the signal name using either approach while the Bus Creator block dialog box is open, to see the updated name in the dialog box, click the **Refresh** button next to the **Signals in the bus** list.

To specify that the bus inputs must have specific names, select **Require input signal names to match signals below** from the list box in the block parameter dialog box. The block parameter dialog box displays the names of the signals currently connected to its inputs, or a generated name (for example, `signal2`) for an anonymous input. Then you can use the parameter dialog box to change the required names of the block inputs.

To change the required signal name, select the signal in the **Signals in the bus** list. The name of the selected signal appears in the **Rename selected signal** field. Edit the name in the field and click **Apply** or **OK**.

## Browse Bus Signals

The **Signals in the bus** list on a Bus Creator Block Parameters dialog box displays a list of the signals entering the block. An arrow next to a signal indicates that the signal is itself a bus. To display the contents of the bus, click the arrow. In this way, you can view all signals entering the block, including those entering via buses.

To find the source of any signal entering the block, select the signal in the **Signals in the bus** list and click the adjacent **Find** button. Simulink opens the subsystem containing the signal source, if necessary, and highlights the source's icon.

## Reorder, Add, or Remove Signals

To rearrange the signals that the Bus Creator block includes in the bus signal that it produces, use buttons such as **Add**.

You can select multiple contiguous signals in the **Signals in the bus** list to reorder or remove. You cannot rearrange leaf signals within a bus. For example, you can move bus signal Bus1 up or down in the list, but you cannot reorder any of the bus elements of Bus1.

After you click a button, click **Apply**.


## **Data Type Support**

The Bus Creator block accepts and outputs real or complex values of any data type supported by Simulink, including fixed-point and enumerated data types, as well as bus objects.

For a discussion on the data types supported by Simulink, refer to “Data Types Supported by Simulink”.

If you change elements or the order of elements in the Bus Creator and the incoming bus is a nonvirtual bus, Simulink reports any inconsistency errors at compile time, not at edit time.

# Bus Creator

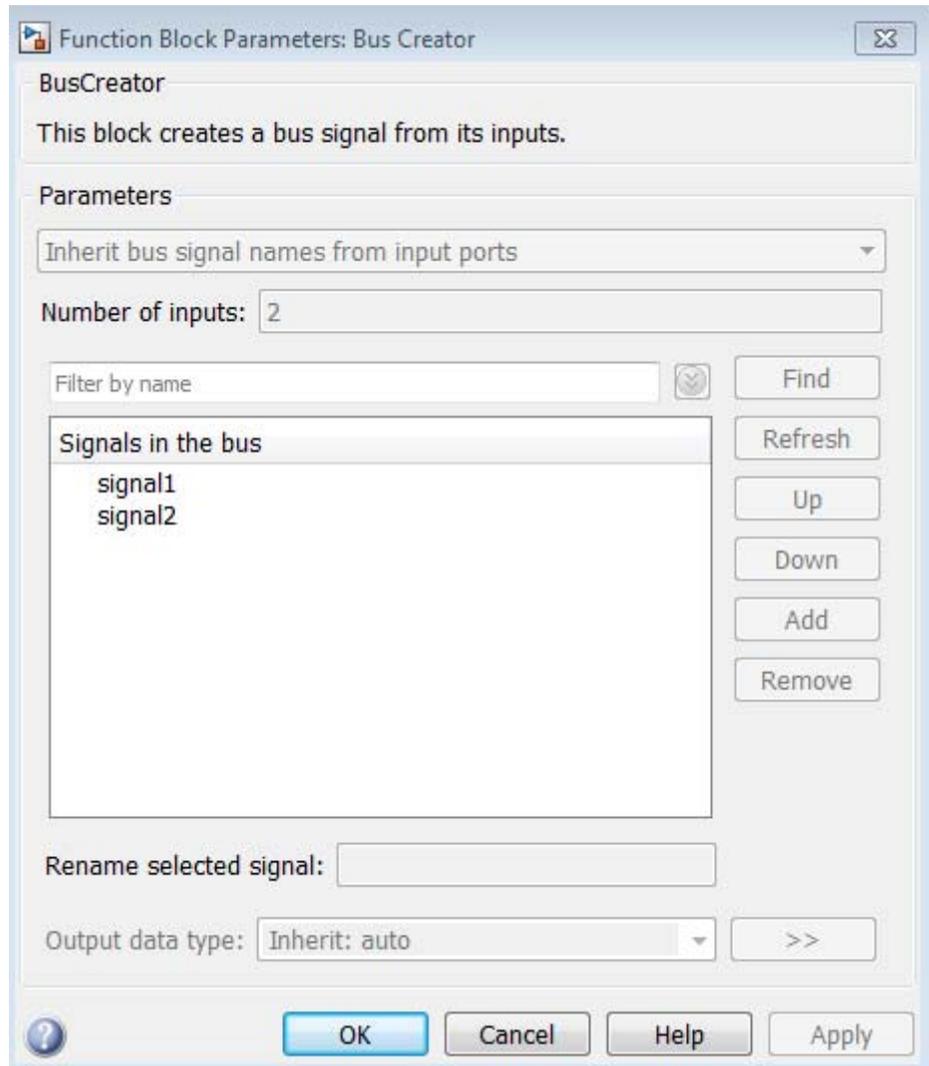

## Parameters and Dialog Box

- “Signal naming options” on page 1-88
- “Number of inputs” on page 1-89

- “Signals in bus” on page 1-90
- “Enable regular expression” on page 1-104
- “Show filtered results as a flat list” on page 1-105
- “Rename selected signal” on page 1-94
- “Output data type” on page 1-95
- “Show data type assistant” on page 1-1727
- “Mode” on page 1-97
- “Output as nonvirtual bus” on page 1-98

## Signal naming options

Assign input signal names to the corresponding bus signals.

### Settings

**Default:** Inherit bus signal names from input ports

Inherit bus signal names from input ports

Assign input signal names to the corresponding bus signals.

Require input signal names to match signals below

Inputs must have the names listed in the **Signals in bus** list.

### Dependencies

Selecting Require input signal names to match signals below enables **Rename selected signal**.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Number of inputs**

Specify the number of input ports on this block.

### **Settings**

**Default:** 2

To bundle a group of signals, enter the number of signals in the group.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Signals in bus

Show the signals in the output bus.

### Settings

When you modify the **Number of inputs** parameter, click **Refresh** to update the list of signals.

### Tips

- An arrow next to a signal name indicates that the signal is itself a bus. Click the arrow to display the subsidiary bus signals.
- Click the **Refresh** button to update the list after editing the name of an input signal.
- Click the **Find** button to highlight the source of the currently selected signal.
- To rearrange signals in the bus, see “Reorder, Add, or Remove Signals” on page 1-84.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Enable regular expression

Enable the use of MATLAB regular expressions for filtering signal names. For example, entering `t$` in the **Filter by name** edit box displays all signals whose names end with a lowercase `t` (and their immediate parents). For details, see “Regular Expressions”.

### Settings

**Default:** On



On

Allow use of MATLAB regular expressions for filtering signal names.



Off


Disable use of MATLAB regular expressions for filtering signal names. Filtering treats the text you enter in the **Filter by name** edit box as a literal string.

### Dependencies

Selecting the **Options** button on the right-hand side of the **Filter by name** edit box () enables this parameter.

## Show filtered results as a flat list

Uses a flat list format to display the list of filtered signals, based on the search text in the **Filter by name** edit box. The flat list format uses dot notation to reflect the hierarchy of bus signals. The following is an example of a flat list format for a filtered set of nested bus signals.

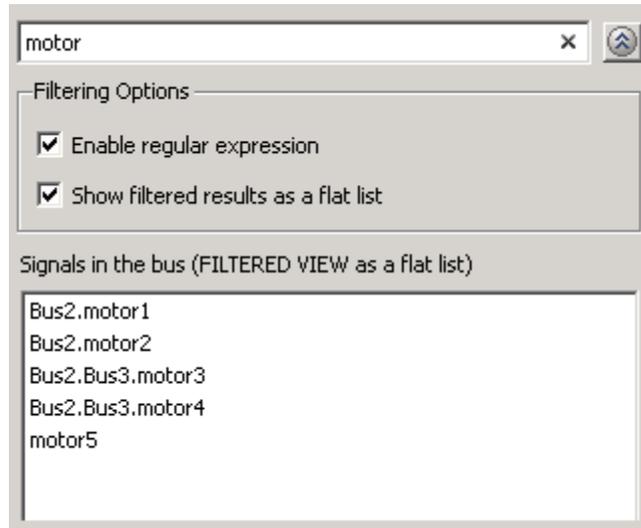

## Settings

**Default:** Off



Display the filtered list of signals using a flat list format, indicating bus hierarchies with dot notation instead of using a tree format.



Display filtered bus hierarchies using a tree format.

## Dependencies

Selecting the **Options** button on the right-hand side of the **Filter by name** edit box () enables this parameter.

## **Rename selected signal**

List the name of the signal currently selected in the **Signals in the bus** list when you select the **Require input signal names to match signals below** option.

### **Settings**

**Default:** ''

Edit this field to change the name of the currently selected signal. See “Signal Names” for guidelines for signal names.

### **Dependencies**

Selecting **Require input signal names to match signals below** for **Parameters** and **signal1** or **signal2** for **Signals in the bus** enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Output data type

Specify the output data type of the external input.

### Settings

**Default:** Inherit: auto

Inherit: auto

A rule that inherits a data type

Bus: <object name>

Data type is a bus object.

### Tip

Determine whether you want the Bus Creator block to output a virtual or nonvirtual bus.

- For a virtual bus, use the **Output data type** parameter default (Inherit: auto) or set the parameter to specify a bus object using Bus: <object name>.
- For a nonvirtual bus, set the **Output data type** parameter to specify a bus object using Bus: <object name> and click **Output as nonvirtual bus**.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

## Mode

Select the category of data to specify.

## Settings

**Default:** Inherit

### Inherit

Inheritance rule for data types. Selecting **Inherit** enables a second menu/text box to the right.

### Bus

Bus object. Selecting **Bus** enables a **Bus object** parameter to the right, where you enter the name of a bus object that you want to use to define the structure of the bus. If you need to create or change a bus object, click **Edit** to the right of the **Bus object** field to open the Simulink Bus Editor. For details about the Bus Editor, see “Manage Bus Objects with the Bus Editor”.

### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

Do not specify a bus object as the expression.

## Tips

At the beginning of a simulation or when you update the model diagram, Simulink checks whether the signals connected to this Bus Creator block have the specified structure. If not, Simulink displays an error message.

## Dependency

Clicking the **Show data type assistant** button enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## See Also

See “Specify Data Types Using Data Type Assistant”.

## Output as nonvirtual bus

Output a nonvirtual bus.

### Settings

**Default:** Off



On

Output a nonvirtual bus.



Off

Output a virtual bus.

### Tips

- Select this option if you want code generated from this model to use a C structure to define the structure of the bus signal output by this block.
- All signals in a nonvirtual bus must have the same sample time, even if the elements of the associated bus object specify inherited sample times. Any bus operation that would result in a nonvirtual bus that violates this requirement generates an error. Therefore, if you select this option all signals entering the Bus Creator block must have the same sample time. You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus, to allow the signal or bus to be included in a nonvirtual bus.

### Dependencies

The following **Data type** values enable this parameter:

- Bus: <object name>
- <data type expression> that specifies a bus object

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Examples

For an example of how the Bus Creator block works, see the `sldemo_househeat` model.

## Characteristics

Multidimensionalized	Yes
Virtual	Yes, if the output bus is virtual For more information, see “Virtual Blocks” in the Simulink documentation.

## See Also

- “Composite Signals”
- “Create and Access a Bus”
- Bus Assignment
- Bus Selector
- Bus to Vector
- `Simulink.Bus`
- `Simulink.Bus.cellToObject`
- `Simulink.Bus.createObject`
- `Simulink.BusElement`
- `Simulink.Bus.objectToCell`
- `Simulink.Bus.save`

# Bus Selector

---

**Purpose** Select signals from incoming bus

**Library** Signal Routing

**Description** The Bus Selector block outputs a specified subset of the elements of the bus at its input. The block can output the specified elements as separate signals or as a new bus. For information about buses, see:



- “Composite Signals”
- “Create and Access a Bus”

When the block outputs separate elements, it outputs each element from a separate port from top to bottom of the block. See “How to Rotate a Block” for a description of the port order for various block orientations.

---

**Note** Simulink software hides the name of a Bus Selector block when you copy it from the Simulink library to a model.

---

By default, Simulink implicitly converts a non-bus signal to a bus signal to support connecting the signal to a Bus Assignment or Bus Selector block. To prevent Simulink from performing that conversion, in the **Model Configuration Parameters > Diagnostics > Connectivity** pane, set the “Non-bus signals treated as bus signals” diagnostic to warning or error.

For information about using this block in a library block, see “Buses and Libraries”.

## Reorder or Remove Signals

To reorder the selected signals that the Bus Selector block includes in the bus signal that it produces, click **Up** or **Down**.

You can select multiple contiguous signals in the **Signals in the bus** list to remove or reorder.

You cannot rearrange leaf signals within a bus. For example, you can move bus signal `Bus1` up or down in the list, but you cannot reorder any of the bus elements of `Bus1`.

After you click a button, click **Apply**.

## Array of Buses Support

The following limitations apply to working with arrays of buses, when using the Bus Selector block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

- You cannot connect an array of buses signal to a Bus Selector block. To work with an array of buses signal, first use a Selector block to select the index for the bus element that you want to use with the Bus Selector block. Then use that selected bus element with the Bus Selector block.
- You cannot assign into a sub-bus that is an array of buses.

## Data Type Support


A Bus Selector block accepts and outputs real or complex values of any data type supported by Simulink software, including fixed-point and enumerated data types.

For a discussion on the data types supported by Simulink software, see “Data Types Supported by Simulink” in the “Working with Data” chapter of the Simulink documentation.

## Parameters and Dialog Box

The Bus Selector dialog box appears as follows:

# Bus Selector

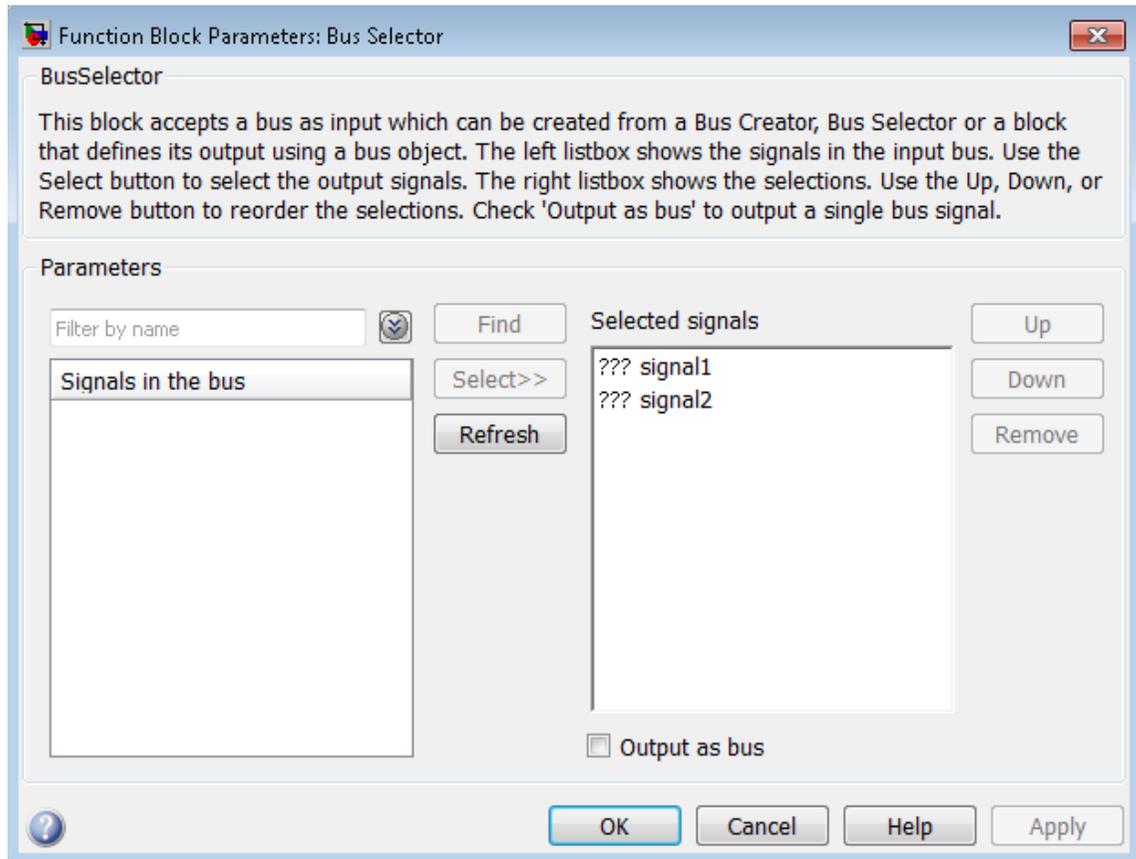

## Signals in the bus

Shows the signals in the input bus.

### Settings

To refresh the display to reflect modifications to the bus connected to the block, click **Refresh**.

### Tips

- Use **Select>>** to select signals to output.
- To find the source of any signal entering the block, select the signal in the list and click **Find**. The Simulink software opens the subsystem containing the signal source, and highlights the source's icon.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Bus Selector

---

## Enable regular expression

Enable the use of MATLAB regular expressions for filtering signal names. For example, entering `t$` in the **Filter by name** edit box displays all signals whose names end with a lowercase `t` (and their immediate parents). For details, see “Regular Expressions”.

### Settings

**Default:** On



On

Allow use of MATLAB regular expressions for filtering signal names.



Off


Disable use of MATLAB regular expressions for filtering signal names. Filtering treats the text you enter in the **Filter by name** edit box as a literal string.

### Dependencies

Selecting the **Options** button on the right-hand side of the **Filter by name** edit box () enables this parameter.

## Show filtered results as a flat list

Uses a flat list format to display the list of filtered signals, based on the search text in the **Filter by name** edit box. The flat list format uses dot notation to reflect the hierarchy of bus signals. The following is an example of a flat list format for a filtered set of nested bus signals.

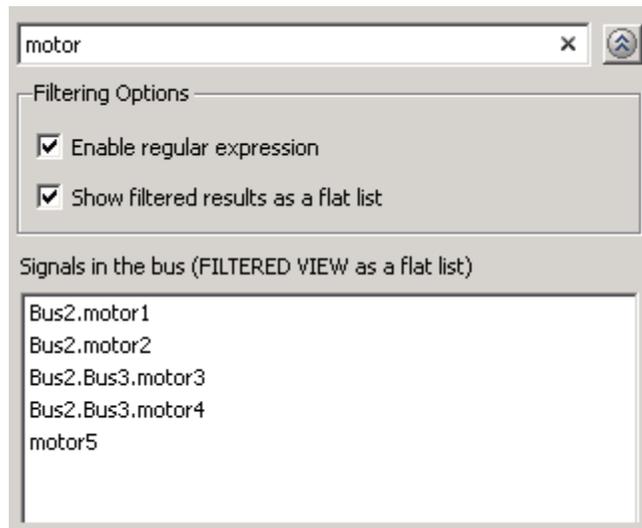

## Settings

**Default:** Off

On

Display the filtered list of signals using a flat list format, indicating bus hierarchies with dot notation instead of using a tree format.

Off

Display filtered bus hierarchies using a tree format.

# Bus Selector

---

## Dependencies

Selecting the **Options** button on the right-hand side of the **Filter by name** edit box () enables this parameter.

## **Selected signals**

Shows the signals to be output.

### **Settings**

**Default:** signal1,signal2

You can change the list by using the **Up**, **Down**, and **Remove** buttons.

### **Tips**

- Port connectivity is maintained when the signal order is changed.
- If an output signal listed in the **Selected signals** list box is not an input to the Bus Selector block, the signal name is preceded by three question marks (???).

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Bus Selector

---

## Output as bus

Output the selected elements as a bus.

### Settings

**Default:** Off



On

Output the selected elements as a bus.



Off

Output the selected elements as standalone signals, each from an output port that is labeled with the corresponding element's name.

### Tips

- The output bus is virtual. To produce nonvirtual bus output, insert a Signal Conversion block after the Bus Selector block. Set the Signal Conversion block **Output** parameter to `Nonvirtual bus` and **Data type** parameter to use a `Simulink.Bus` bus object. For an example, see the Signal Conversion documentation.
- If the **Selected signals** list box includes only one signal and you enable **Output as bus**, then:
  - If the selected signal is a non-bus signal, it is treated as a non-bus signal (it is not wrapped in a bus).
  - If the selected signal is a bus signal, then the output is that bus signal.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Examples

For an example of how the Bus Selector block works, see the `sldemo_fuelsys` model. The Bus Selector block appears in the following subsystems:

- `fuel_rate_control/airflow_calc`

- `fuel_rate_control/validate_sample_time`

## Characteristics

Multidimensionalized	Yes
Virtual	Yes, if the input bus is virtual For more information, see “Virtual Blocks” in the Simulink documentation.

## See Also

- “Composite Signals”
- “Create and Access a Bus”
- Bus Assignment
- Bus Creator
- Bus to Vector
- Signal Conversion
- `Simulink.Bus`
- `Simulink.Bus.cellToObject`
- `Simulink.Bus.createObject`
- `Simulink.BusElement`
- `Simulink.Bus.objectToCell`
- `Simulink.Bus.save`


# Bus to Vector

---

**Purpose** Convert virtual bus to vector

**Library** Signal Attributes

## Description

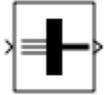

The Bus to Vector block converts a virtual bus signal to a vector signal. The input bus signal must consist of scalar, 1-D, or either row or column vectors having the same data type, signal type, and sampling mode. If the input bus contains row or column vectors, this block outputs a row or column vector, respectively; otherwise, it outputs a 1-D array.

Use the Bus to Vector block only to replace an implicit bus-to-vector conversion with an equivalent explicit conversion. See “Correct Buses Used as Muxes”.

---


**Note** Simulink hides the name of a Bus to Vector block when you copy it from the Simulink library to a model.

---

## Data Type Support

The Bus to Vector block accepts and outputs real or complex values of any data type that Simulink supports, including fixed-point and enumerated data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

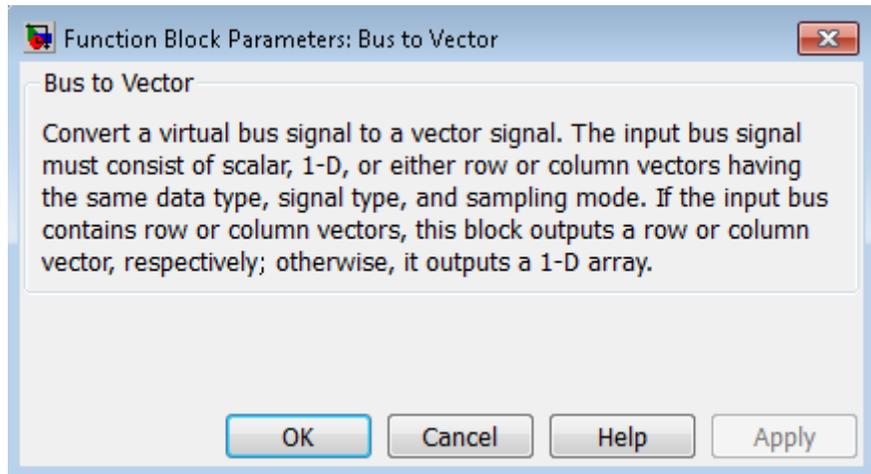

## Parameters and Dialog Box

This block has no user-accessible parameters.

## Characteristics

Multidimensionalized	Yes
----------------------	-----

## See Also

- “Composite Signals”
- “Create and Access a Bus”
- Avoiding Mux/Bus Mixtures
- Bus Assignment
- Bus Creator
- Bus Selector
- Simulink.BlockDiagram.addBusToVector
- Simulink.Bus
- Simulink.Bus.cellToObject
- Simulink.Bus.createObject

# Bus to Vector

---

- `Simulink.BusElement`
- `Simulink.Bus.objectToCell`
- `Simulink.Bus.save`


## Purpose

Check that absolute value of difference between successive samples of discrete signal is less than upper bound

## Library

Model Verification

## Description

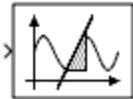

The Check Discrete Gradient block checks each signal element at its input to determine whether the absolute value of the difference between successive samples of the element is less than an upper bound. Use the block parameter dialog box to specify the value of the upper bound (1 by default). If the verification condition is true, the block does nothing. Otherwise, the block halts the simulation, by default, and displays an error in the Diagnostic Viewer.

The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box lets you enable or disable all model verification blocks, including Check Discrete Gradient blocks, in a model.

The Check Discrete Gradient block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.

---

**Note** For information about how Simulink Coder generated code handles Model Verification blocks, see “Debug”.


---

## Data Type Support

The Check Discrete Gradient block accepts `single`, `double`, `int8`, `int16`, and `int32` input signals of any dimensions. This block also supports fixed-point data types.

# Check Discrete Gradient

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

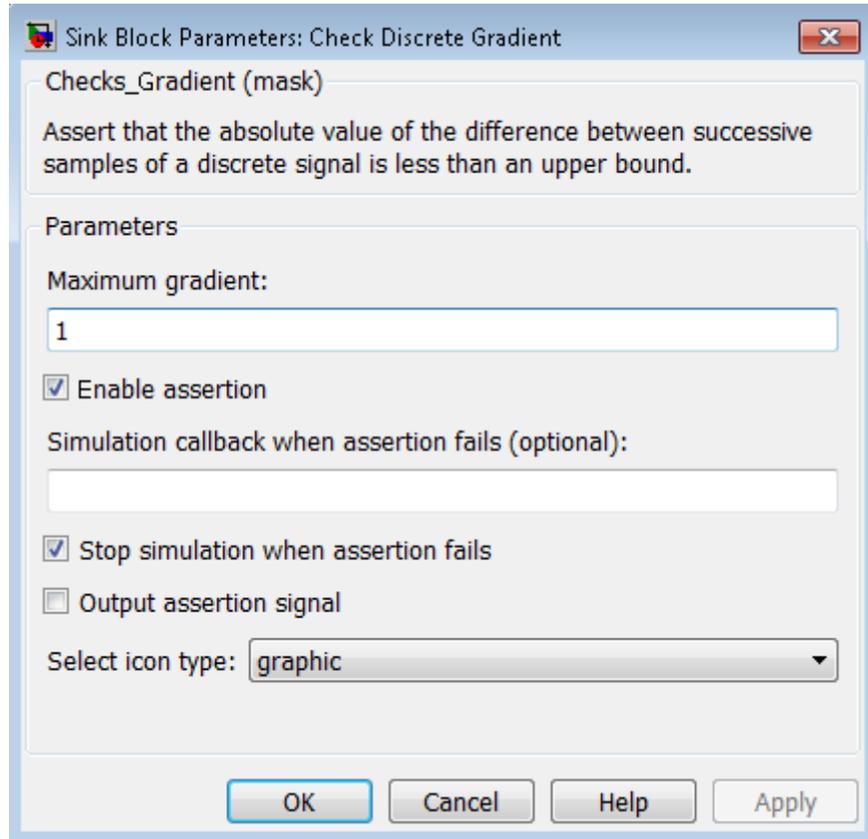

## Parameters and Dialog Box

### Maximum gradient

Specify the upper bound on the gradient of the discrete input signal.

### Enable assertion

Clearing this check box disables the Check Discrete Gradient block, that is, causes the model to behave as if the block did

not exist. The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box allows you to enable or disable all model verification blocks in a model, including Check Discrete Gradient blocks, regardless of the setting of this option.

### **Simulation callback when assertion fails**

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

### **Stop simulation when assertion fails**

Selecting this check box causes the Check Discrete Gradient block to halt the simulation when the block's output is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

### **Output assertion signal**

Selecting this check box causes the Check Discrete Gradient block to output a Boolean signal that is true (1) at each time step if the assertion succeeds and false (0) if the assertion fails. The data type of the output signal is `Boolean` if you have selected the **Implement logic signals as Boolean data** check box on the **Optimization** pane of the Configuration Parameters dialog box. Otherwise the data type of the output signal is `double`.

### **Select icon type**

Specify the type of icon used to display this block in a block diagram: either `graphic` or `text`. The `graphic` option displays a graphical representation of the assertion condition on the icon. The `text` option displays a mathematical expression that represents the assertion condition. If the icon is too small to display the expression, the text icon displays an exclamation point. To see the expression, enlarge the block.

# Check Discrete Gradient


---

<b>Characteristics</b>	Direct Feedthrough	No
	Sample Time	Inherited from the driving block
	Scalar Expansion	No
	Dimensionalized	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	No

**Purpose** Check that gap of possibly varying width occurs in range of signal's amplitudes

**Library** Model Verification

## Description

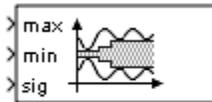

The Check Dynamic Gap block checks that a gap of possibly varying width occurs in the range of a signal's amplitudes. The test signal is the signal connected to the input labeled *sig*. The inputs labeled *min* and *max* specify the lower and upper bounds of the dynamic gap, respectively. If the verification condition is true, the block does nothing. If not, the block halts the simulation, by default, and displays an error message.

The Check Dynamic Gap block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.

---

**Note** For information about how Simulink Coder generated code handles Model Verification blocks, see “Debug”.


---

# Check Dynamic Gap

## Data Type Support

The Check Dynamic Gap block accepts input signals of any dimensions and of any numeric data type that Simulink supports. All three input signals must have the same dimension and data type. If the inputs are nonscalar, the block checks each element of the input test signal to the corresponding elements of the reference signals.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

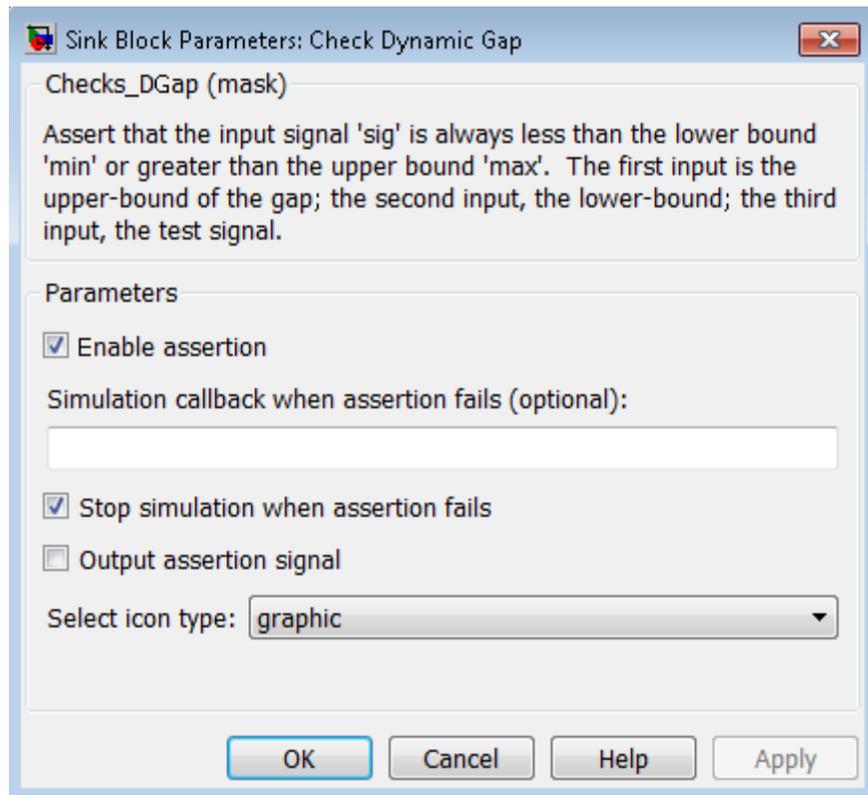

## Parameters and Dialog Box

### Enable assertion

Clearing this check box disables the Check Dynamic Gap block, that is, causes the model to behave as if the block did not

exist. The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box allows you to enable or disable all model verification blocks in a model, including Check Dynamic Gap blocks, regardless of the setting of this option.

### **Simulation callback when assertion fails**

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

### **Stop simulation when assertion fails**

Selecting this check box causes the Check Dynamic Gap block to halt the simulation when the block's output is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

### **Output assertion signal**

Selecting this check box causes the Check Dynamic Gap block to output a Boolean signal that is true (1) at each time step if the assertion succeeds and false (0) if the assertion fails. The data type of the output signal is `Boolean` if you have selected the **Implement logic signals as Boolean data** check box on the **Optimization** pane of the Configuration Parameters dialog box. Otherwise the data type of the output signal is `double`.

### **Select icon type**

Specify the type of icon used to display this block in a block diagram: either `graphic` or `text`. The `graphic` option displays a graphical representation of the assertion condition on the icon. The `text` option displays a mathematical expression that represents the assertion condition. If the icon is too small to display the expression, the text icon displays an exclamation point. To see the expression, enlarge the block.

## Check Dynamic Gap


---

<b>Characteristics</b>	Direct Feedthrough	No
	Sample Time	Inherited from driving block
	Scalar Expansion	No
	Dimensionalized	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	No

**Purpose** Check that one signal is always less than another signal

**Library** Model Verification

## Description

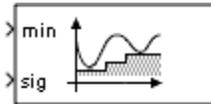

The Check Dynamic Lower Bound block checks that the amplitude of a reference signal is less than the amplitude of a test signal at the current time step. The test signal is the signal connected to the input labeled *sig*. If the verification condition is true, the block does nothing. If not, the block halts the simulation, by default, and displays an error message.

The Check Dynamic Lower Bound block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.

---

**Note** For information about how Simulink Coder generated code handles Model Verification blocks, see “Debug”.

---


## Data Type Support

The Check Dynamic Lower Bound block accepts input signals of any numeric data type that Simulink supports. The test and the reference signals must have the same dimensions and data type. If the inputs are

# Check Dynamic Lower Bound

nonscalar, the block checks each element of the input test signal to the corresponding elements of the reference signal.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

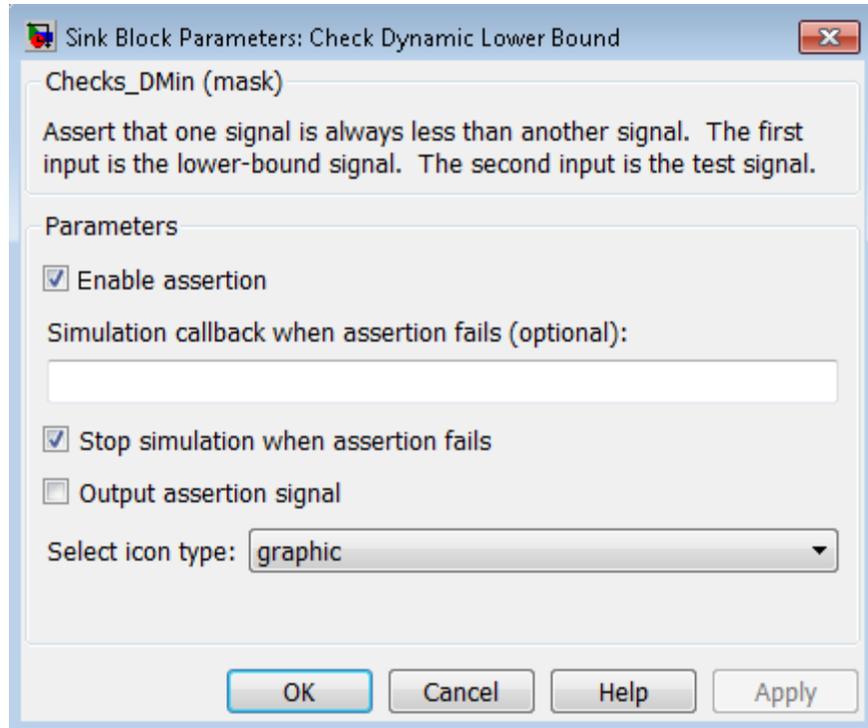

## Parameters and Dialog Box

### Enable assertion

Clearing this check box disables the Check Dynamic Lower Bound block, that is, causes the model to behave as if the block did not exist. The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box allows you to enable or disable all model verification blocks, including Check Dynamic

# Check Dynamic Lower Bound

Lower Bound blocks, in a model regardless of the setting of this option.

## Simulation callback when assertion fails

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

## Stop simulation when assertion fails

Selecting this check box causes the Check Dynamic Lower Bound block to halt the simulation when the block's output is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

## Output assertion signal

Selecting this check box causes the Check Dynamic Lower Bound block to output a Boolean signal that is true (1) at each time step if the assertion succeeds and false (0) if the assertion fails. The data type of the output signal is `Boolean` if you have selected the **Implement logic signals as Boolean data** check box on the **Optimization** pane of the Configuration Parameters dialog box. Otherwise the data type of the output signal is `double`.

## Select icon type

Specify the type of icon used to display this block in a block diagram: either `graphic` or `text`. The `graphic` option displays a graphical representation of the assertion condition on the icon. The `text` option displays a mathematical expression that represents the assertion condition. If the icon is too small to display the expression, the text icon displays an exclamation point. To see the expression, enlarge the block.

## Characteristics

Direct Feedthrough	No
Sample Time	Inherited from driving block

## Check Dynamic Lower Bound


---

Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Check that signal falls inside range of amplitudes that varies from time step to time step

**Library** Model Verification

## Description

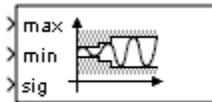

The Check Dynamic Range block checks that a test signal falls inside a range of amplitudes at each time step. The width of the range can vary from time step to time step. The input labeled *sig* is the test signal. The inputs labeled *min* and *max* are the lower and upper bounds of the valid range at the current time step. If the verification condition is true, the block does nothing. If not, the block halts the simulation, by default, and displays an error message.

The Check Dynamic Range block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.

---

**Note** For information about how Simulink Coder generated code handles Model Verification blocks, see “Debug”.


---

# Check Dynamic Range

## Data Type Support

The Check Dynamic Range block accepts input signals of any dimensions and of any numeric data type that Simulink supports. All three input signals must have the same dimension and data type. If the inputs are nonscalar, the block checks each element of the input test signal to the corresponding elements of the reference signals.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

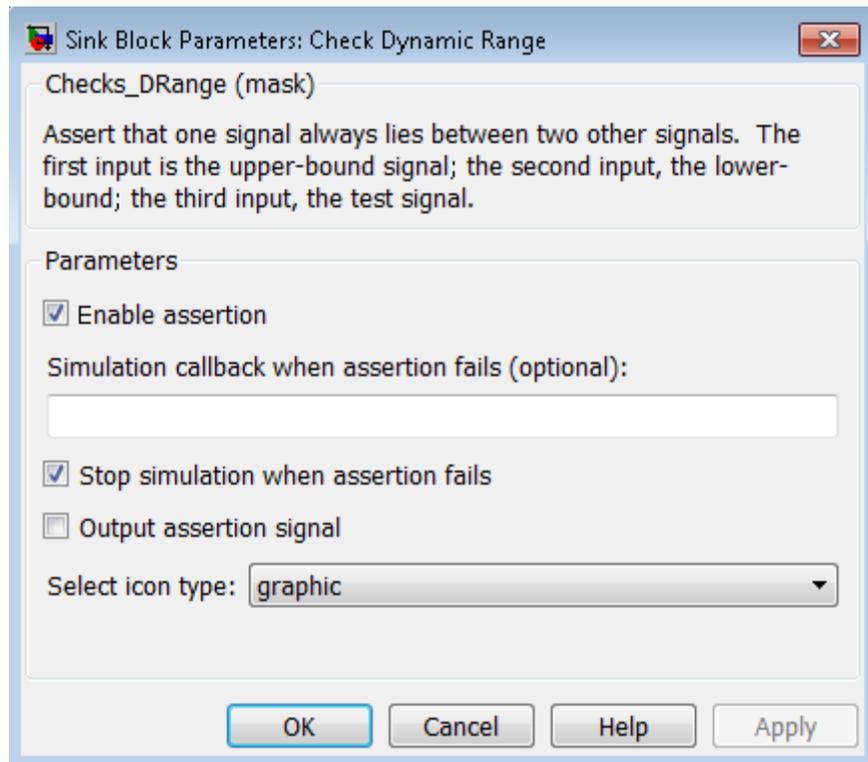

## Parameters and Dialog Box

### Enable assertion

Clearing this check box disables the Check Dynamic Range block, that is, causes the model to behave as if the block did not exist. The **Model Verification block enabling** setting

under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box allows you to enable or disable all model verification blocks in a model, including Check Dynamic Range blocks, regardless of the setting of this option.

## **Simulation callback when assertion fails**

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

## **Stop simulation when assertion fails**

Selecting this check box causes the Check Dynamic Range block to halt the simulation when the block's output is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

## **Output assertion signal**

Selecting this check box causes the Check Dynamic Range block to output a Boolean signal that is true (1) at each time step if the assertion succeeds and false (0) if the assertion fails. The data type of the output signal is `Boolean` if you selected the **Implement logic signals as Boolean data** check box on the **Optimization** pane of the Configuration Parameters dialog box. Otherwise the data type of the output signal is `double`.

## **Select icon type**

Specify the type of icon used to display this block in a block diagram: either `graphic` or `text`. The `graphic` option displays a graphical representation of the assertion condition on the icon. The `text` option displays a mathematical expression that represents the assertion condition. If the icon is too small to display the expression, the text icon displays an exclamation point. To see the expression, enlarge the block.

# Check Dynamic Range


---

<b>Characteristics</b>	Direct Feedthrough	No
	Sample Time	Inherited from driving block
	Scalar Expansion	No
	Dimensionalized	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	No

**Purpose** Check that one signal is always greater than another signal

**Library** Model Verification

## Description

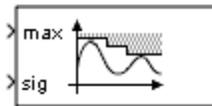

The Check Dynamic Upper Bound block checks that the amplitude of a reference signal is greater than the amplitude of a test signal at the current time step. The test signal is the signal connected to the input labeled *sig*. If the verification condition is true, the block does nothing. If not, the block halts the simulation, by default, and displays an error message.

The Check Dynamic Upper Bound block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error-checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.

---

**Note** For information about how Simulink Coder generated code handles Model Verification blocks, see “Debug”.

---


## Data Type Support

The Check Dynamic Upper Bound block accepts input signals of any dimensions and of any numeric data type that Simulink supports. The test and the reference signals must have the same dimensions and data

# Check Dynamic Upper Bound

type. If the inputs are nonscalar, the block compares each element of the input test signal to the corresponding elements of the reference signal.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

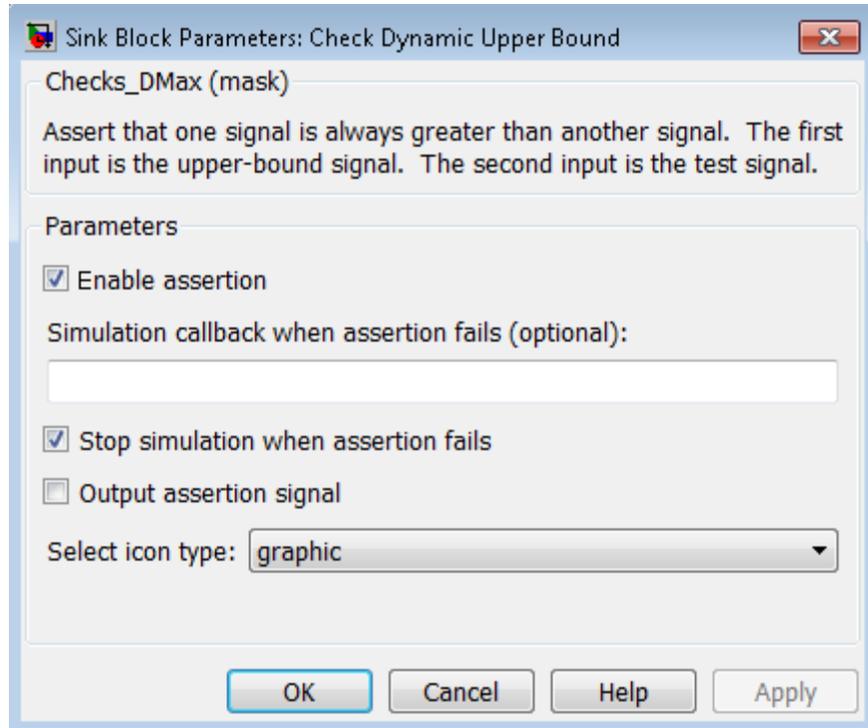

## Parameters and Dialog Box

### Enable assertion

Clearing this check box disables the Check Dynamic Upper Bound block, that is, causes the model to behave as if the block did not exist. The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box allows you to enable or disable all model verification blocks, including Check Dynamic

# Check Dynamic Upper Bound

Upper Bound blocks, in a model regardless of the setting of this option.

## Simulation callback when assertion fails

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

## Stop simulation when assertion fails

Selecting this check box causes the Check Dynamic Upper Bound block to halt the simulation when the block's output is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

## Output assertion signal

Selecting this check box causes the Check Dynamic Upper Bound block to output a Boolean signal that is true (1) at each time step if the assertion succeeds and false (0) if the assertion fails. The data type of the output signal is `Boolean` if you have selected the **Implement logic signals as Boolean data** check box on the **Optimization** pane of the Configuration Parameters dialog box. Otherwise the data type of the output signal is `double`.

## Select icon type

Specify the type of icon used to display this block in a block diagram: either `graphic` or `text`. The `graphic` option displays a graphical representation of the assertion condition on the icon. The `text` option displays a mathematical expression that represents the assertion condition. If the icon is too small to display the expression, the text icon displays an exclamation point. To see the expression, enlarge the block.

## Characteristics

Direct Feedthrough	No
Sample Time	Inherited from driving block

## Check Dynamic Upper Bound

---

Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## Purpose

Check that input signal has specified resolution

## Library

Model Verification

## Description



The Check Input Resolution block checks whether the input signal has a specified scalar or vector resolution (see Resolution). If the resolution is a scalar, the input signal must be a multiple of the resolution within a  $10e-3$  tolerance. If the resolution is a vector, the input signal must equal an element of the resolution vector. If the verification condition is true, the block does nothing. If not, the block halts the simulation, by default, and displays an error message.

The Check Input Resolution block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.

---

**Note** For information about how Simulink Coder generated code handles Model Verification blocks, see “Debug”.


---

## Data Type Support

The Check Input Resolution block accepts input signals of data type `double` and of any dimension. If the input signal is nonscalar, the block checks the resolution of each element of the input test signal.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Check Input Resolution

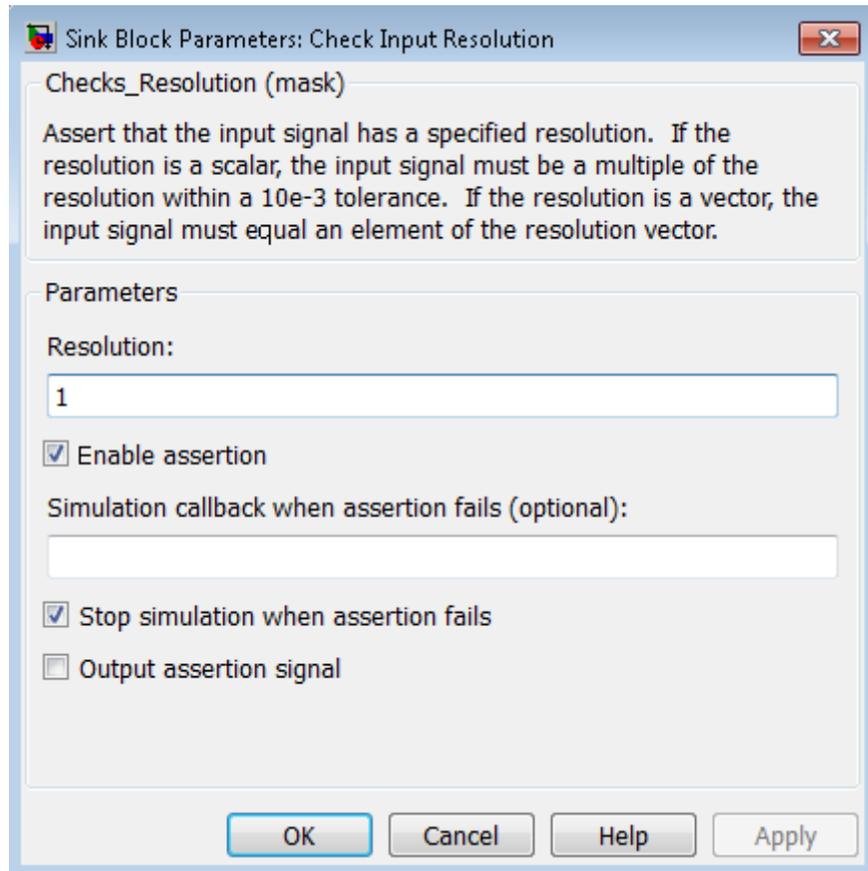

## Parameters and Dialog Box

### Resolution

Specify the resolution that the input signal must have.

### Enable assertion

Clearing this check box disables the Check Input Resolution block, that is, causes the model to behave as if the block did not exist. The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box allows you to enable or

disable all model verification blocks in a model, including Check Input Resolution blocks, regardless of the setting of this option.

### Simulation callback when assertion fails

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

### Stop simulation when assertion fails

Selecting this check box causes the Check Input Resolution block to halt the simulation when the block's output is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

### Output assertion signal

Selecting this check box causes the Check Input Resolution block to output a Boolean signal that is true (1) at each time step if the assertion succeeds and false (0) if the assertion fails. The data type of the output signal is `Boolean` if you have selected the **Implement logic signals as Boolean data** check box on the **Optimization** pane of the Configuration Parameters dialog box. Otherwise the data type of the output signal is `double`.

## Characteristics

Direct Feedthrough	No
Sample Time	Inherited from driving block
Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No


# Check Static Gap

---

**Purpose** Check that gap exists in signal's range of amplitudes

**Library** Model Verification

## Description

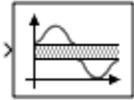

The Check Static Gap block checks that each element of the input signal is less than (or optionally equal to) a static lower bound or greater than (or optionally equal to) a static upper bound at the current time step. If the verification condition is true, the block does nothing. If not, the block halts the simulation, by default, and displays an error message.

The Check Static Gap block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.

---


**Note** For information about how Simulink Coder generated code handles Model Verification blocks, see “Debug”.

---

## Data Type Support

The Check Static Gap block accepts input signals of any dimensions and of any numeric data type that Simulink supports.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

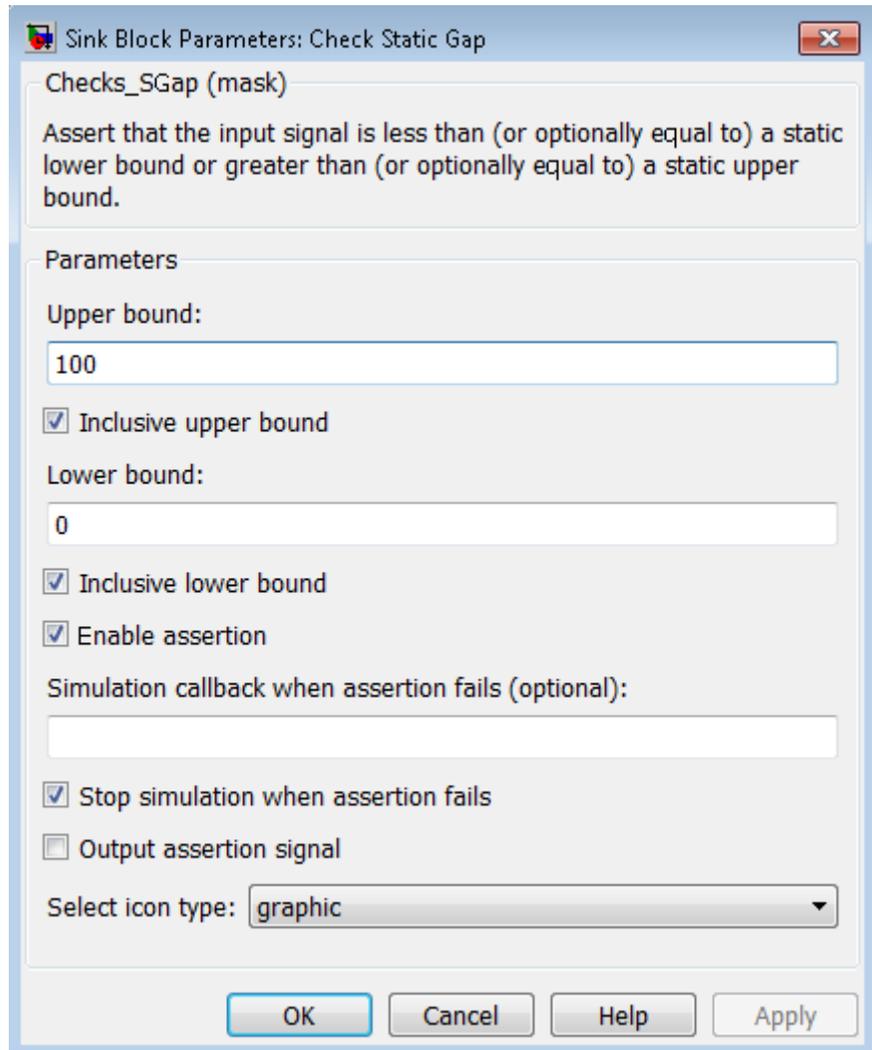

## Parameters and Dialog Box

### Upper bound

Specify the upper bound of the gap in the input signal's range of amplitudes.

# Check Static Gap

---

## **Inclusive upper bound**

Selecting this check box specifies that the gap includes the upper bound.

## **Lower bound**

Specify the lower bound of the gap in the input signal's range of amplitudes.

## **Inclusive lower bound**

Selecting this check box specifies that the gap includes the lower bound.

## **Enable assertion**

Clearing this check box disables the Check Static Gap block, that is, causes the model to behave as if the block did not exist. The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box allows you to enable or disable all model verification blocks in a model, including Check Static Gap blocks, regardless of the setting of this option.

## **Simulation callback when assertion fails**

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

## **Stop simulation when assertion fails**

Selecting this check box causes the Check Static Gap block to halt the simulation when the block's output is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

## **Output assertion signal**

Selecting this check box causes the Check Static Gap block to output a Boolean signal that is true (1) at each time step if the assertion succeeds and false (0) if the assertion fails. The data type of the output signal is `Boolean` if you have selected the **Implement logic signals as Boolean data** check box on the

**Optimization** pane of the Configuration Parameters dialog box. Otherwise the data type of the output signal is double.

### Select icon type

Specify the type of icon used to display this block in a block diagram: either **graphic** or **text**. The **graphic** option displays a graphical representation of the assertion condition on the icon. The **text** option displays a mathematical expression that represents the assertion condition. If the icon is too small to display the expression, the text icon displays an exclamation point. To see the expression, enlarge the block.

### Characteristics

Direct Feedthrough	No
Sample Time	Inherited from the driving block
Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No


# Check Static Lower Bound

---

**Purpose** Check that signal is greater than (or optionally equal to) static lower bound

**Library** Model Verification

**Description** The Check Static Lower Bound block checks that each element of the input signal is greater than (or optionally equal to) a specified lower bound at the current time step. Use the block parameter dialog box to specify the value of the lower bound and whether the lower bound is inclusive. If the verification condition is true, the block does nothing. If not, the block halts the simulation, by default, and displays an error message.

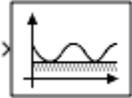


The Check Static Lower Bound block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.

---

**Note** For information about how Simulink Coder generated code handles Model Verification blocks, see “Debug”.

---

**Data Type Support** The Check Static Lower Bound block accepts input signals of any dimensions and of any numeric data type that Simulink supports. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

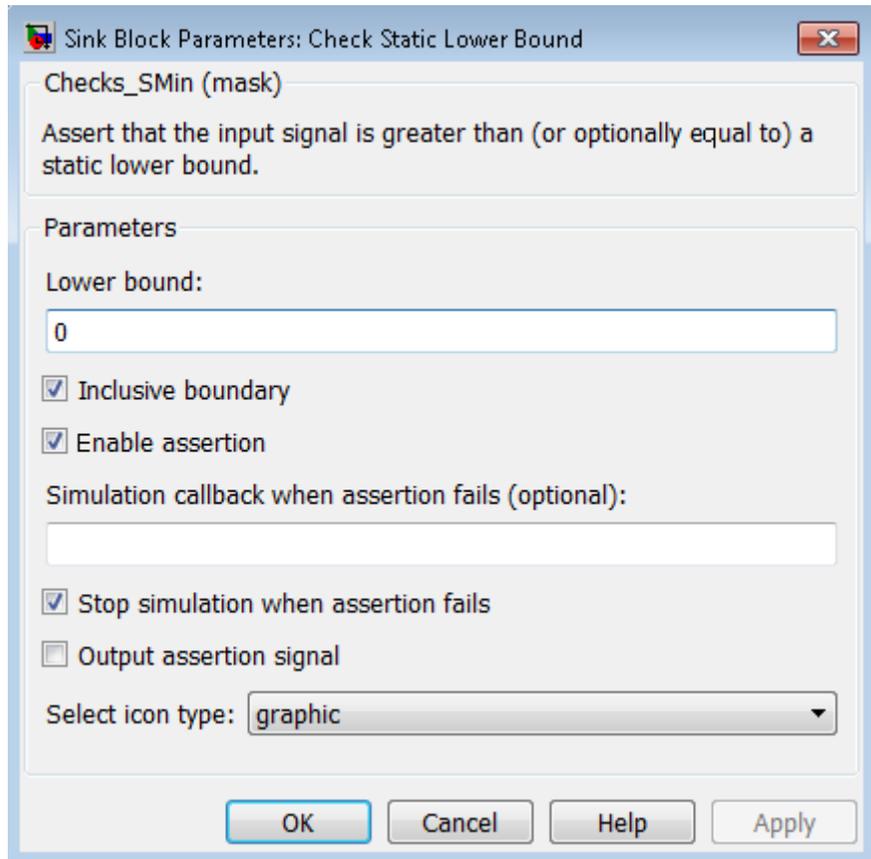

## Parameters and Dialog Box

### Lower bound

Specify the lower bound on the range of amplitudes that the input signal can have.

### Inclusive boundary

Selecting this check box makes the range of valid input amplitudes include the lower bound.

# Check Static Lower Bound

---

## Enable assertion

Clearing this check box disables the Check Static Lower Bound block, that is, causes the model to behave as if the block did not exist. The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box allows you to enable or disable all model verification blocks in a model, including Check Static Lower Bound blocks, regardless of the setting of this option.

## Simulation callback when assertion fails

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

## Stop simulation when assertion fails

Selecting this check box causes the Check Static Lower Bound block to halt the simulation when the block's output is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

## Output assertion signal

Selecting this check box causes the Check Static Lower Bound block to output a Boolean signal that is true (1) at each time step if the assertion succeeds and false (0) if the assertion fails. The data type of the output signal is `Boolean` if you have selected the **Implement logic signals as Boolean data** check box on the **Optimization** pane of the Configuration Parameters dialog box. Otherwise the data type of the output signal is `double`.

## Select icon type

Specify the type of icon used to display this block in a block diagram: either `graphic` or `text`. The `graphic` option displays a graphical representation of the assertion condition on the icon. The `text` option displays a mathematical expression that represents the assertion condition. If the icon is too small to display the expression, the text icon displays an exclamation point. To see the expression, enlarge the block.

<b>Characteristics</b>	Direct Feedthrough	No
	Sample Time	Inherited from driving block
	Scalar Expansion	No
	Dimensionalized	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	No

# Check Static Range

---


## Purpose

Check that signal falls inside fixed range of amplitudes

## Library

Model Verification

## Description

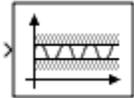

The Check Static Range block checks that each element of the input signal falls inside the same range of amplitudes at each time step. Use the block parameter dialog box to specify the upper and lower bounds of the valid amplitude range and whether the range includes the bounds. If the verification condition is true, the block does nothing. If not, the block halts the simulation, by default, and displays an error message.

The Check Static Range block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.

---


**Note** For information about how Simulink Coder generated code handles Model Verification blocks, see “Debug”.

---

## Data Type Support

The Check Static Range block accepts input signals of any dimensions and of any numeric data type that Simulink supports.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

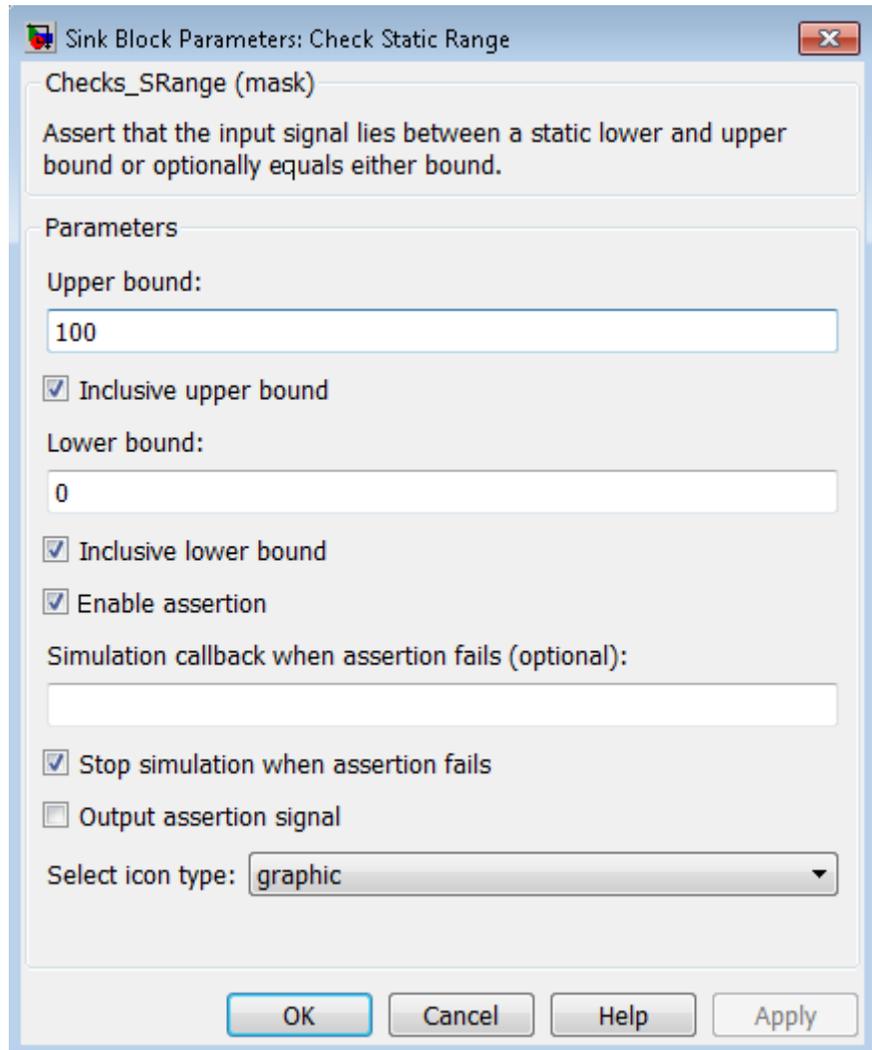

## Parameters and Dialog Box

### Upper bound

Specify the upper bound of the range of valid input signal amplitudes.

# Check Static Range

---

## **Inclusive upper bound**

Selecting this check box specifies that the valid signal range includes the upper bound.

## **Lower bound**

Specify the lower bound of the range of valid input signal amplitudes.

## **Inclusive lower bound**

Selecting this check box specifies that the valid signal range includes the lower bound.

## **Enable assertion**

Clearing this check box disables the Check Static Range block, that is, causes the model to behave as if the block did not exist. The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box allows you to enable or disable all model verification blocks in a model, including Check Static Range blocks, regardless of the setting of this option.

## **Simulation callback when assertion fails**

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

## **Stop simulation when assertion fails**

Selecting this check box causes the Check Static Range block to halt the simulation when the block's output is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

## **Output assertion signal**

Selecting this check box causes the Check Static Range block to output a Boolean signal that is true (1) at each time step if the assertion succeeds and false (0) if the assertion fails. The data type of the output signal is `Boolean` if you have selected the **Implement logic signals as Boolean data** check box on the

**Optimization** pane of the Configuration Parameters dialog box. Otherwise the data type of the output signal is double.


## Select icon type

Specify the type of icon used to display this block in a block diagram: either **graphic** or **text**. The **graphic** option displays a graphical representation of the assertion condition on the icon. The **text** option displays a mathematical expression that represents the assertion condition. If the icon is too small to display the expression, the text icon displays an exclamation point. To see the expression, enlarge the block.

## Examples

The `sldemo_fuelsys` model shows how you can use the Check Static Range block to verify that the sample time is consistent throughout the model.

The Check Static Range block appears in the `sldemo_fuelsys/fuel_rate_control/validate_sample_time` subsystem.

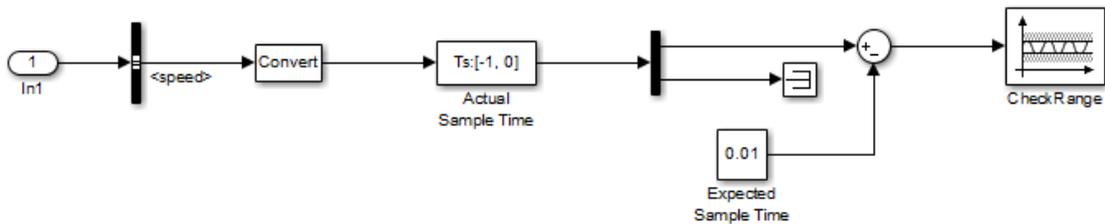

## Characteristics

Direct Feedthrough	No
Sample Time	Inherited from the driving block
Scalar Expansion	No
Dimensionalized	Yes

## Check Static Range


---

Multidimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Check that signal is less than (or optionally equal to) static upper bound

**Library** Model Verification

## Description

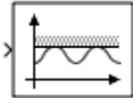

The Check Static Upper Bound block checks that each element of the input signal is less than (or optionally equal to) a specified upper bound at the current time step. Use the block parameter dialog box to specify the value of the upper bound and whether the bound is inclusive. If the verification condition is true, the block does nothing. If not, the block halts the simulation, by default, and displays an error message.

The Check Static Upper Bound block and its companion blocks in the Model Verification library are intended to facilitate creation of self-validating models. For example, you can use model verification blocks to test that signals do not exceed specified limits during simulation. When you are satisfied that a model is correct, you can turn error checking off by disabling the verification blocks. You do not have to physically remove them from the model. If you need to modify a model, you can temporarily turn the verification blocks back on to ensure that your changes do not break the model.

---

**Note** For information about how Simulink Coder generated code handles Model Verification blocks, see “Debug”.


---

## Data Type Support

The Check Static Upper Bound block accepts input signals of any dimensions and of any numeric data type that Simulink supports.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Check Static Upper Bound

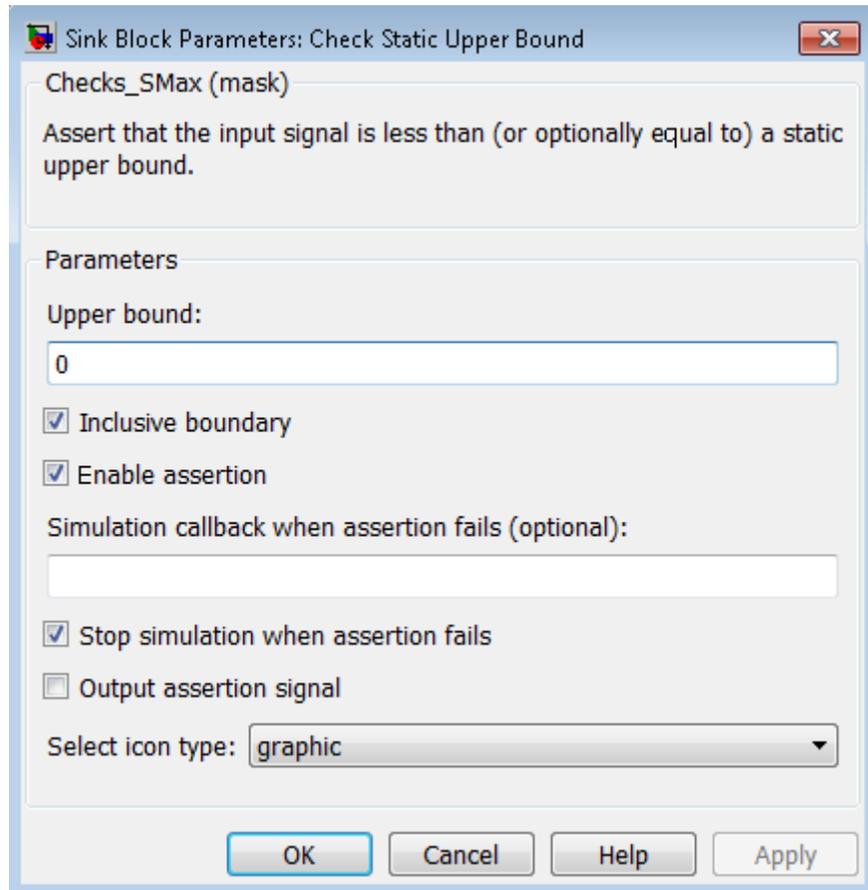

## Parameters and Dialog Box

### Upper bound

Specify the upper bound on the range of amplitudes that the input signal can have.

### Inclusive boundary

Selecting this check box makes the range of valid input amplitudes include the upper bound.

## Enable assertion

Clearing this check box disables the Check Static Upper Bound block, that is, causes the model to behave as if the block did not exist. The **Model Verification block enabling** setting under **Debugging** on the **Data Validity** diagnostics pane of the Configuration Parameters dialog box allows you to enable or disable all model verification blocks in a model, including Check Static Upper Bound blocks, regardless of the setting of this option.

## Simulation callback when assertion fails

Specify a MATLAB expression to evaluate when the assertion fails. Because the expression is evaluated in the MATLAB workspace, define all variables used in the expression in that workspace.

## Stop simulation when assertion fails

Selecting this check box causes the Check Static Upper Bound block to halt the simulation when the block's output is zero and display an error in the Diagnostic Viewer. Otherwise, the block displays a warning message in the MATLAB Command Window and continues the simulation.

## Output assertion signal

Selecting this check box causes the Check Static Upper Bound block to output a Boolean signal that is true (1) at each time step if the assertion succeeds and false (0) if the assertion fails. The data type of the output signal is `Boolean` if you have selected the **Implement logic signals as Boolean data** check box on the **Optimization** pane of the Configuration Parameters dialog box. Otherwise the data type of the output signal is `double`.

## Select icon type

Specify the type of icon used to display this block in a block diagram: either `graphic` or `text`. The `graphic` option displays a graphical representation of the assertion condition on the icon. The `text` option displays a mathematical expression that represents the assertion condition. If the icon is too small to display the expression, the text icon displays an exclamation point. To see the expression, enlarge the block.

# Check Static Upper Bound

---

<b>Characteristics</b>	Direct Feedthrough	No
	Sample Time	Inherited from driving block
	Scalar Expansion	No
	Dimensionalized	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	No

**Purpose** Generate sine wave with increasing frequency

**Library** Sources

## Description



The Chirp Signal block generates a sine wave whose frequency increases at a linear rate with time. You can use this block for spectral analysis of nonlinear systems. The block generates a scalar or vector output.

The parameters, **Initial frequency**, **Target time**, and **Frequency at target time**, determine the block's output. You can specify any or all of these variables as scalars or arrays. All the parameters specified as arrays must have the same dimensions. The block expands scalar parameters to have the same dimensions as the array parameters. The block output has the same dimensions as the parameters unless you select the **Interpret vector parameters as 1-D** check box. If you select this check box and the parameters are row or column vectors, the block outputs a vector (1-D array) signal.

The following limitations apply to the Chirp Signal block:

- The start time of the simulation must be 0. To confirm this value, go to the **Solver** pane in the Configuration Parameters dialog box and view the **Start time** field.
- Suppose that you use a Chirp Signal block in an enabled subsystem. Whenever the subsystem is enabled, the block output matches what would appear if the subsystem were enabled throughout the simulation.


## Data Type Support

The Chirp Signal block outputs a real-valued signal of type `double`.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Chirp Signal

## Parameters and Dialog Box

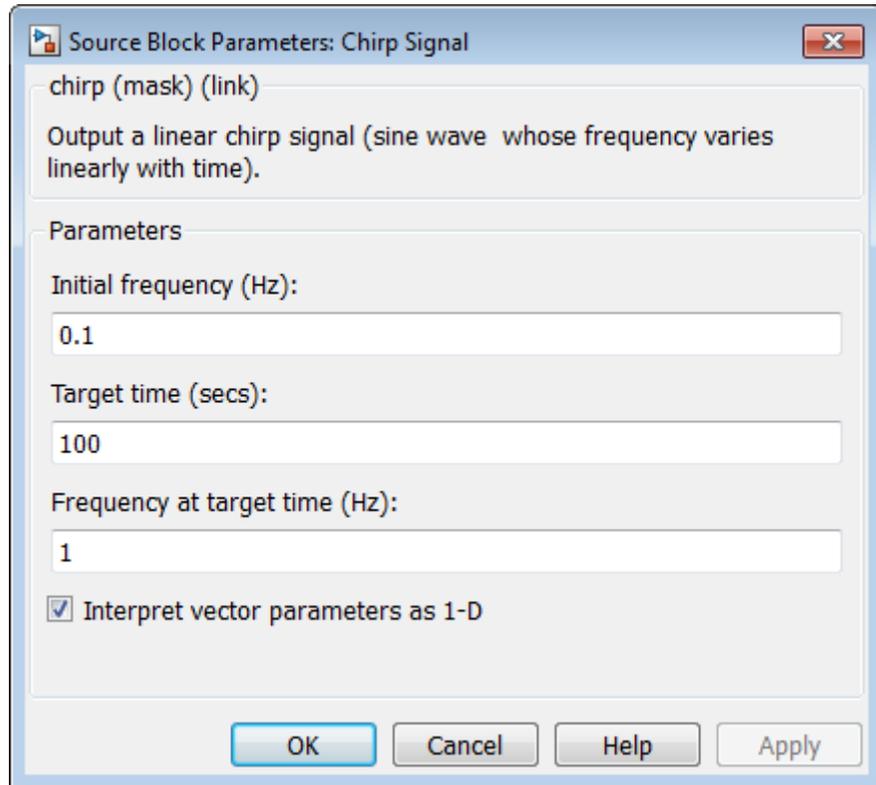

### Initial frequency

The initial frequency of the signal, specified as a scalar or matrix value. The default is 0.1 Hz.

### Target time

The time at which the frequency reaches the **Frequency at target time** parameter value, a scalar or matrix value. The frequency continues to change at the same rate after this time. The default is 100 seconds.

## Frequency at target time

The frequency of the signal at the target time, a scalar or matrix value. The default is 1 Hz.

## Interpret vector parameters as 1-D

If selected, column or row matrix values for the **Initial frequency**, **Target time**, and **Frequency at target time** parameters result in a vector output whose elements are the elements of the row or column. For more information, see “Determining the Output Dimensions of Source Blocks” in the Simulink documentation.

## Characteristics

Sample Time	Continuous
Scalar Expansion	Yes, of parameters
Dimensionalized	Yes
Zero-Crossing Detection	No

# Clock

---

**Purpose** Display and provide simulation time

**Library** Sources


**Description** The Clock block outputs the current simulation time at each simulation step. This block is useful for other blocks that need the simulation time.



When you need the current time within a discrete system, use the Digital Clock block.

**Data Type Support** The Clock block outputs a real-valued signal of type double.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

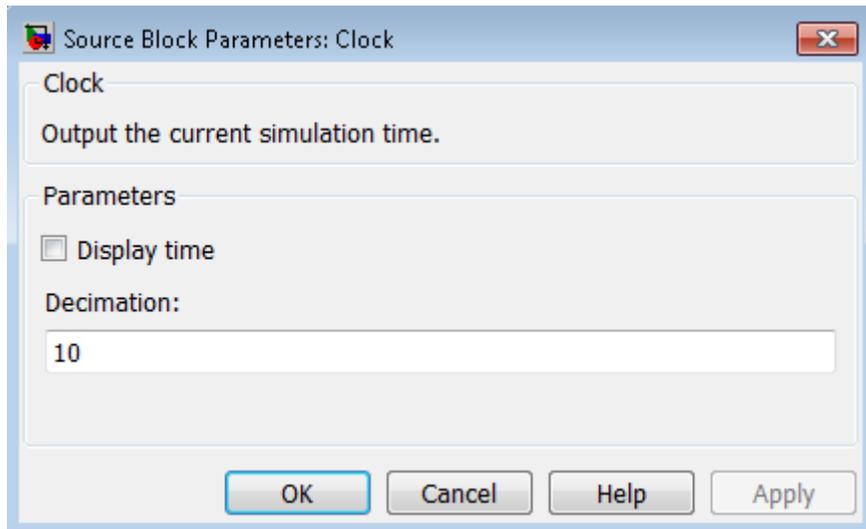

## Parameters and Dialog Box

**Display time**  
Select this check box to display the current simulation time inside the Clock block icon.

## Decimation

Specify a positive integer for the interval at which Simulink updates the Clock icon when you select **Display time**.

Suppose that the decimation is 1000. For a fixed integration step of 1 millisecond, the Clock icon updates at 1 second, 2 seconds, and so on.

## Examples

The following Simulink examples show how to use the Clock block:

- `sldemo_tonegen_fixpt`
- `penddemo`

## Characteristics

Sample Time	Continuous
Scalar Expansion	N/A
Dimensionalized	No
Zero-Crossing Detection	No

## See Also

Digital Clock

# Combinatorial Logic

---

**Purpose** Implement truth table

**Library** Logic and Bit Operations

## Description



The Combinatorial Logic block implements a standard truth table for modeling programmable logic arrays (PLAs), logic circuits, decision tables, and other Boolean expressions. You can use this block in conjunction with Memory blocks to implement finite-state machines or flip-flops.

You specify a matrix that defines all possible block outputs as the **Truth table** parameter. Each row of the matrix contains the output for a different combination of input elements. You must specify outputs for every combination of inputs. The number of columns is the number of block outputs.

The relationship between the number of inputs and the number of rows is:


$$\text{number of rows} = 2^{\text{(number of inputs)}}$$

Simulink returns a row of the matrix by computing the row's index from the input vector elements. Simulink computes the index by building a binary number where input vector elements having zero values are 0 and elements having nonzero values are 1, then adding 1 to the result. For an input vector,  $u$ , of  $m$  elements:

$$\text{row index} = 1 + u(m) * 2^0 + u(m-1) * 2^1 + \dots + u(1) * 2^{m-1}$$

### Two-Input AND Logic

This example builds a two-input AND function, which returns 1 when both input elements are 1, and 0 otherwise. To implement this function, specify the **Truth table** parameter value as [0; 0; 0; 1]. The portion of the model that provides the inputs to and the output from the Combinatorial Logic block might look like this:

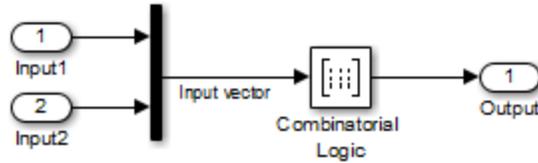

The following table indicates the combination of inputs that generate each output. The input signal labeled “Input 1” corresponds to the column in the table labeled Input 1. Similarly, the input signal “Input 2” corresponds to the column with the same name. The combination of these values determines the row of the Output column of the table that is passed as block output.

For example, if the input vector is [1 0], the input references the third row:

$$(2^{1*1} + 1)$$


The output value is 0.

Row	Input 1	Input 2	Output
1	0	0	0
2	0	1	0
3	1	0	0
4	1	1	1

## Circuit Logic

This sample circuit has three inputs: the two bits (**a** and **b**) to be summed and a carry-in bit (**c**). It has two outputs: the carry-out bit (**c'**) and the sum bit (**s**).

# Combinatorial Logic

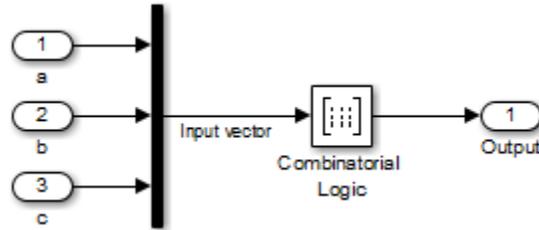

The truth table and corresponding outputs for each combination of input values for this circuit appear in the following table.

Inputs			Outputs	
a	b	c	c'	s
0	0	0	0	0
0	0	1	0	1
0	1	0	0	1
0	1	1	1	0
1	0	0	0	1
1	0	1	1	0
1	1	0	1	0
1	1	1	1	1

To implement this adder with the Combinatorial Logic block, you enter the 8-by-2 matrix formed by columns **c'** and **s** as the **Truth table** parameter.

You can also implement sequential circuits (that is, circuits with states) with the Combinatorial Logic block by including an additional input for the state of the block and feeding the output of the block back into this state input.

## Data Type Support


The type of signals accepted by a Combinatorial Logic block depends on whether you selected the Boolean logic signals option (see “Implement logic signals as Boolean data (vs. double)”). If this option is enabled, the block accepts real signals of type **Boolean** or **double**. The **Truth table** parameter can have Boolean values (0 or 1) of any data type, including fixed-point data types. If the table contains non-Boolean values, the data type of the table must be **double**.

The type of the output is the same as that of the input except that the block outputs **double** if the input is **Boolean** and the truth table contains non-Boolean values.

If Boolean compatibility mode is disabled, the Combinatorial Logic block accepts only signals of type **Boolean**. The block outputs **double** if the truth table contains non-Boolean values of type **double**. Otherwise, the output is **Boolean**.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Combinatorial Logic

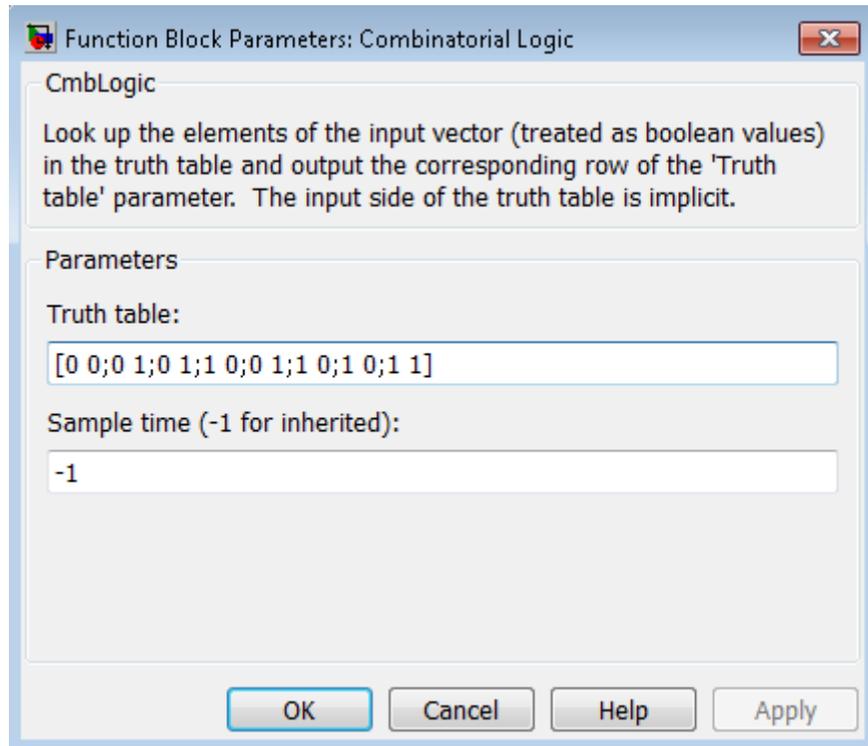

## Parameters and Dialog Box

### Truth table

Specify the matrix of outputs. Each column corresponds to an element of the output vector and each row corresponds to a row of the truth table.

### Sample time (-1 for inherited)


Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation.

## Examples

### Usage with the Memory Block to Implement a Finite-State Machine

The `sldemo_clutch` model shows how you can use the Combinatorial Logic block with the Memory block to implement a finite-state machine.


The finite-state machine appears in the Friction Mode Logic/Lockup FSM subsystem.

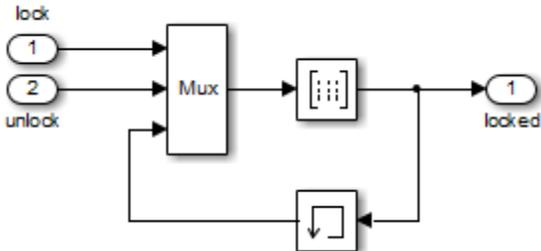

# Combinatorial Logic

## Usage with a Stateflow® Chart to Implement a Finite-State Machine

The powerwindow model shows how you can use two Combinatorial Logic blocks as inputs to a Stateflow chart to implement a finite-state machine.

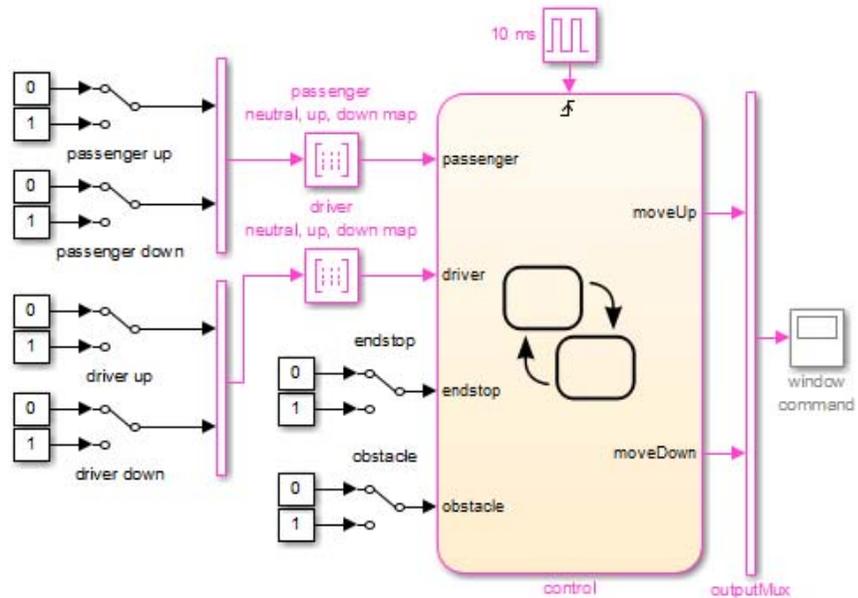

### Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from the driving block
Scalar Expansion	No
Dimensionalized	Yes, the output width is the number of columns of the <b>Truth table</b> parameter
Zero-Crossing Detection	No

## Purpose

Determine how signal compares to specified constant

## Library

Logic and Bit Operations

## Description



The Compare To Constant block compares an input signal to a constant. Specify the constant in the **Constant value** parameter. Specify how the input is compared to the constant value with the **Operator** parameter. The **Operator** parameter can have the following values:

- == — Determine whether the input is equal to the specified constant.
- ~= — Determine whether the input is not equal to the specified constant.
- < — Determine whether the input is less than the specified constant.
- <= — Determine whether the input is less than or equal to the specified constant.
- > — Determine whether the input is greater than the specified constant.
- >= — Determine whether the input is greater than or equal to the specified constant.


The output is 0 if the comparison is false, and 1 if it is true.

## Data Type Support

The Compare To Constant block accepts inputs of any data type that Simulink supports, including fixed-point and enumerated data types. The block first converts its **Constant value** parameter to the input data type, and then performs the specified operation. The block output is `uint8` or `boolean` as specified by the **Output data type** parameter.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Compare To Constant

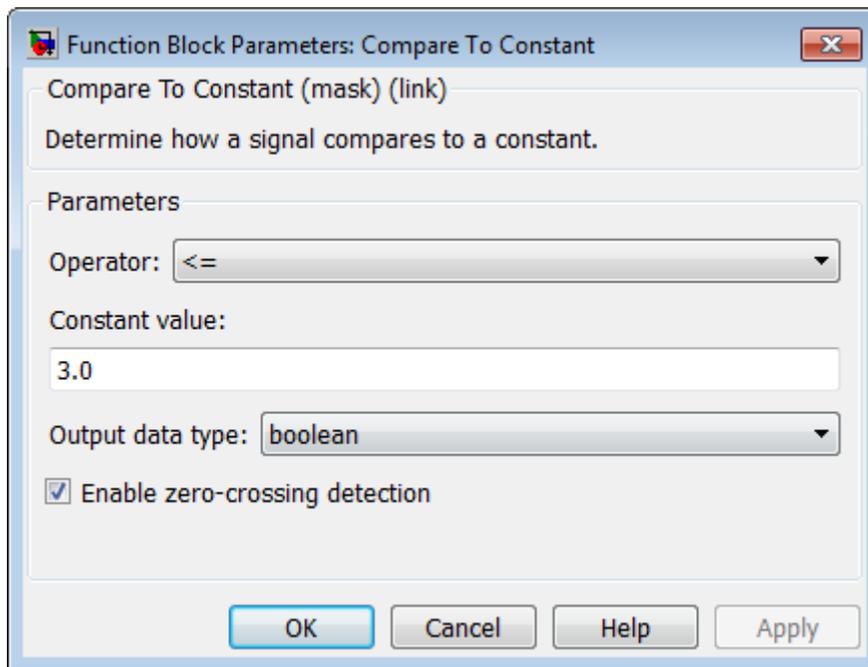

## Parameters and Dialog Box

### Operator

Specify how the input is compared to the constant value, as discussed in Description.

### Constant value

Specify the constant value to which the input is compared.

### Output data type

Specify the data type of the output, boolean or uint8.

### Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

<b>Characteristics</b>	Direct Feedthrough	Yes
	Scalar Expansion	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	Yes, if enabled.

**See Also**      Compare To Zero

# Compare To Zero

---

**Purpose** Determine how signal compares to zero

**Library** Logic and Bit Operations

**Description** The Compare To Zero block compares an input signal to zero. Specify how the input is compared to zero with the **Operator** parameter. The **Operator** parameter can have the following values:



- == — Determine whether the input is equal to zero.
- ~= — Determine whether the input is not equal to zero.
- < — Determine whether the input is less than zero.
- <= — Determine whether the input is less than or equal to zero.
- > — Determine whether the input is greater than zero.
- >= — Determine whether the input is greater than or equal to zero.

The output is 0 if the comparison is false, and 1 if it is true.


**Data Type Support** The Compare To Zero block accepts inputs of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

The block output is `uint8` or `boolean`, depending on your selection for the **Output data type** parameter. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

**Tip** If the input data type cannot represent zero, parameter overflow occurs. To detect this overflow, go to the **Diagnostics > Data Validity** pane of the Configuration Parameters dialog box and set **Parameters > Detect overflow** to warning or error.

In this case, the block compares the input signal to the *ground value* of the input data type. For example, if you have an input signal of type `fixdt(0,8,2^0,10)`, the input data type can represent unsigned 8-bit integers from 10 to 265 due to a bias of 10. The ground value is 10, instead of 0.

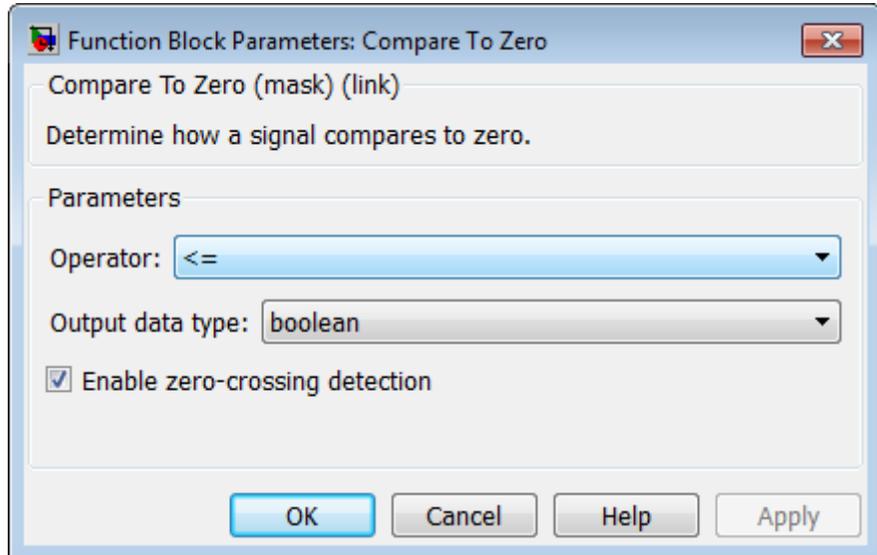

## Parameters and Dialog Box

### Operator

Specify how the input is compared to zero, as discussed in Description.

### Output data type

Specify the data type of the output, boolean or uint8.

# Compare To Zero

---

## Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

<b>Characteristics</b>	Direct Feedthrough	Yes
	Scalar Expansion	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	Yes, if enabled.

**See Also** Compare To Constant

# Complex to Magnitude-Angle

---

**Purpose** Compute magnitude and/or phase angle of complex signal

**Library** Math Operations


## Description



The Complex to Magnitude-Angle block accepts a complex-valued signal of type `double` or `single`. It outputs the magnitude and/or phase angle of the input signal, depending on the setting of the **Output** parameter. The outputs are real values of the same data type as the block input. The input can be an array of complex signals, in which case the output signals are also arrays. The magnitude signal array contains the magnitudes of the corresponding complex input elements. The angle output similarly contains the angles of the input elements.

**Data Type Support** See the preceding description.

# Complex to Magnitude-Angle

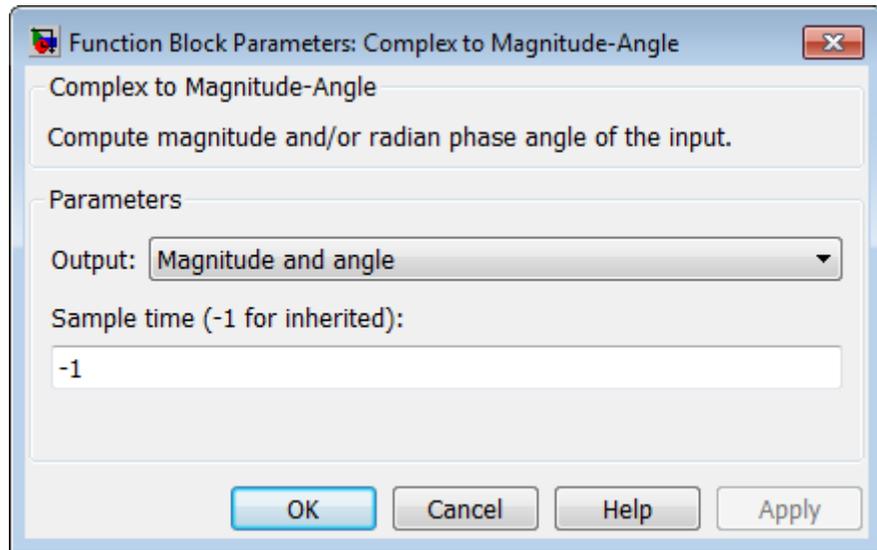

## Parameters and Dialog Box

### Output

Determines the output of this block. Choose from the following values: **Magnitude and angle** (outputs the input signal's magnitude and phase angle in radians), **Magnitude** (outputs the input's magnitude), **Angle** (outputs the input's phase angle in radians).

### Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. For more information, see "Specify Sample Time" in the Simulink documentation.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified by the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	Yes

## Complex to Magnitude-Angle

---

Multidimensionalized	Yes
Zero-Crossing Detection	No

# Complex to Real-Imag

---

**Purpose** Output real and imaginary parts of complex input signal

**Library** Math Operations


## Description



The Complex to Real-Imag block accepts a complex-valued signal of any data type that Simulink supports, including fixed-point data types. It outputs the real and/or imaginary part of the input signal, depending on the setting of the **Output** parameter. The real outputs are of the same data type as the complex input. The input can be an array (vector or matrix) of complex signals, in which case the output signals are arrays of the same dimensions. The real array contains the real parts of the corresponding complex input elements. The imaginary output similarly contains the imaginary parts of the input elements.

## Data Type Support

See the preceding description. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

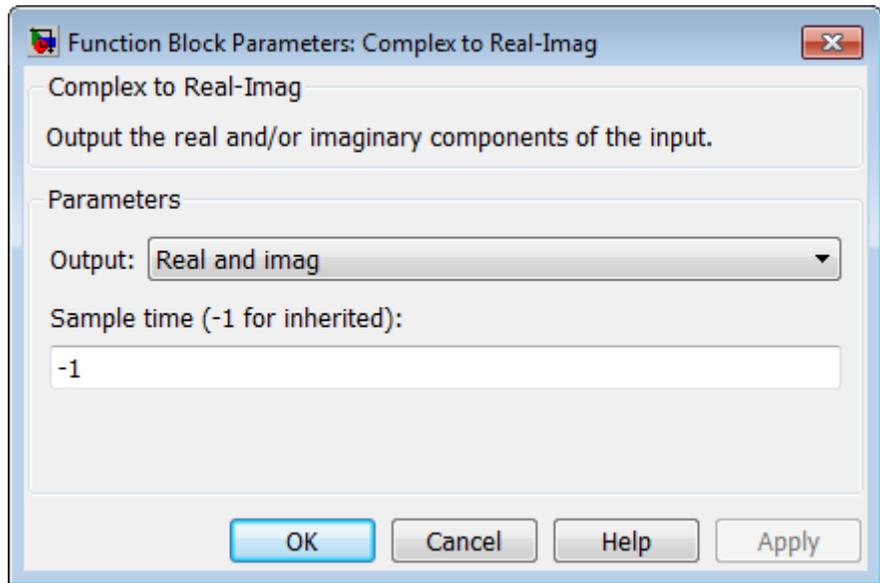

## Parameters and Dialog Box

### Output

Determines the output of this block. Choose from the following values: **Real and imag** (outputs the input signal's real and imaginary parts), **Real** (outputs the input's real part), **Imag** (outputs the input's imaginary part).

### Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. For more information, see "Specify Sample Time" in the Simulink documentation.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified by the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	Yes

## Complex to Real-Imag

---

Multidimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Represent any block selected from user-specified library of blocks

**Library** Ports & Subsystems

## Description



The Configurable Subsystem block represents one of a set of blocks contained in a specified library of blocks. The block's context menu lets you choose which block the configurable subsystem represents.

Configurable Subsystem blocks simplify creation of models that represent families of designs. For example, suppose that you want to model an automobile that offers a choice of engines. To model such a design, you would first create a library of models of the engine types available with the car. You would then use a Configurable Subsystem block in your car model to represent the choice of engines. To model a particular variant of the basic car design, a user need only choose the engine type, using the configurable engine block's dialog.

To create a configurable subsystem in a model, you must first create a library containing a master configurable subsystem and the blocks that it represents. You can then create configurable instances of the master subsystem by dragging copies of the master subsystem from the library and dropping them into models.

You can add any type of block to a master configurable subsystem library. Simulink derives the port names for the configurable subsystem by making a unique list from the port names of all the choices. However, Simulink uses default port names for non-subsystem block choices.

Note that you cannot break library links in a configurable subsystem because Simulink uses those links to reconfigure the subsystem when you choose a new configuration. Breaking links would be useful only if

# Configurable Subsystem

---

you do not intend to reconfigure the subsystem. In this case, you can replace the configurable subsystem with a nonconfigurable subsystem that implements the permanent configuration.

## Creating a Master Configurable Subsystem

To create a master configurable subsystem:

- 1** Create a library of blocks representing the various configurations of the configurable subsystem.
- 2** Save the library.
- 3** Create an instance of the Configurable Subsystem block in the library.

To do this, drag a copy of the Configurable Subsystem block from the Simulink Ports & Subsystems library into the library you created in the previous step.

- 4** Display the Configurable Subsystem block dialog by double-clicking it. The dialog displays a list of the other blocks in the library.
- 5** Under **List of block choices** in the dialog box, select the blocks that represent the various configurations of the configurable subsystems you are creating.
- 6** Click the **OK** button to apply the changes and close the dialog box.
- 7** Select **Block Choice** from the Configurable Subsystem block's context menu.

The context menu displays a submenu listing the blocks that the subsystem can represent.

- 8** Select the block that you want the subsystem to represent by default.
- 9** Save the library.

---

**Note** If you add or remove blocks from a library, you must recreate any Configurable Subsystem blocks that use the library.

---

If you modify a library block that is the default block choice for a configurable subsystem, the change does not immediately propagate to the configurable subsystem. To propagate this change, do one of the following:

- Change the default block choice to another block in the subsystem, then change the default block choice back to the original block.
- Recreate the configurable subsystem block, including the selection of the updated block as the default block choice.

## Creating an Instance of a Configurable Subsystem

To create an instance of a configurable subsystem in a model:

- 1 Open the library containing the master configurable subsystem.
- 2 Drag a copy of the master into the model.
- 3 Select **Block Choice** from the copy's context menu.
- 4 Select the block that you want the configurable subsystem to represent.

The instance of the configurable system displays the icon and parameter dialog box of the block that it represents.

## Setting Instance Block Parameters

As with other blocks, you can use the parameter dialog box of a configurable subsystem instance to set the instance's parameters interactively and the `set_param` command to set the parameters from the MATLAB command line or in a MATLAB file. If you use `set_param`, you must specify the full path name of the configurable subsystem's current block choice as the first argument of `set_param`, for example:

# Configurable Subsystem

---

```
curr_choice = get_param('mymod/myconffigsys', 'BlockChoice');  
curr_choice = ['mymod/myconffigsys/' curr_choice];  
set_param(curr_choice, 'MaskValues', ...);
```


## Mapping I/O Ports

A configurable subsystem displays a set of input and output ports corresponding to input and output ports in the selected library. Simulink uses the following rules to map library ports to Configurable Subsystem block ports:

- Map each uniquely named input/output port in the library to a separate input/output port of the same name on the Configurable Subsystem block.
- Map all identically named input/output ports in the library to the same input/output ports on the Configurable Subsystem block.
- Terminate any input/output port not used by the currently selected library block with a Terminator/Ground block.

This mapping allows a user to change the library block represented by a Configurable Subsystem block without having to rewire connections to the Configurable Subsystem block.

For example, suppose that a library contains two blocks A and B and that block A has input ports labeled a, b, and c and an output port labeled d and that block B has input ports labeled a and b and an output port labeled e. A Configurable Subsystem block based on this library would have three input ports labeled a, b, and c, respectively, and two output ports labeled d and e, respectively, as illustrated in the following figure.

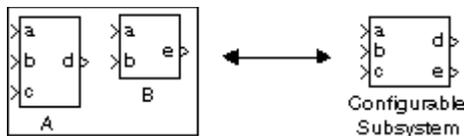

In this example, port a on the Configurable Subsystem block connects to port a of the selected library block no matter which block is selected. On the other hand, port c on the Configurable Subsystem block functions only if library block A is selected. Otherwise, it simply terminates.

---

**Note** A Configurable Subsystem block does not provide ports that correspond to non-I/O ports, such as the trigger and enable ports on triggered and enabled subsystems. Thus, you cannot use a Configurable Subsystem block directly to represent blocks that have such ports. You can do so indirectly, however, by wrapping such blocks in subsystem blocks that have input or output ports connected to the non-I/O ports.

---

## Convert to Variant Subsystem

Right-click a configurable subsystem and select **Subsystems and Model Reference > Convert Subsystem To > Variant Subsystem**.

Simulink copies the block choices of the configurable subsystem to a new variant subsystem and adds the appropriate number of inports and outports to the variant subsystem. The current block choice of the configurable subsystem is made the active variant selection.


See Variant Subsystem for more information on variant choices.

## Data Type Support

The Configurable Subsystem block accepts and outputs signals of the same types that are accepted or output by the block that it currently represents. The data types can be any that Simulink supports, including fixed-point data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Configurable Subsystem

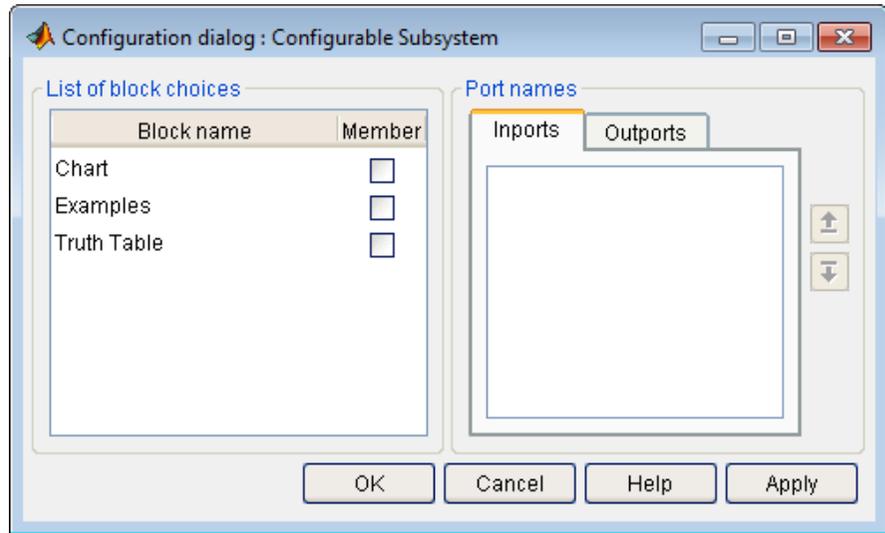

## Parameters and Dialog Box

### List of block choices

Select the blocks you want to include as members of the configurable subsystem. You can include user-defined subsystems as blocks.

### Port names

Lists of input and output ports of member blocks. In the case of multiports, you can rearrange selected port positions by clicking the **Up** and **Down** buttons.

**Characteristics** A Configurable Subsystem block has the characteristics of the block that it currently represents. Double-clicking the block opens the dialog box for the block that it currently represents.

**Purpose**

Generate constant value

**Library**

Sources

**Description**

The Constant block generates a real or complex constant value.

The block generates scalar, vector, or matrix output, depending on:



- The dimensionality of the **Constant value** parameter
- The setting of the **Interpret vector parameters as 1-D** parameter

Also, the block can generate either a sample-based or frame-based signal, depending on the setting of the **Sampling mode**.

The output of the block has the same dimensions and elements as the **Constant value** parameter. If you specify for this parameter a vector that you want the block to interpret as a vector, select the **Interpret vector parameters as 1-D** parameter. Otherwise, if you specify a vector for the **Constant value** parameter, the block treats that vector as a matrix.

**Data Type Support**

By default, the Constant block outputs a signal whose data type and complexity are the same as those of the **Constant value** parameter. However, you can specify the output to be any data type that Simulink supports, including fixed-point and enumerated data types. The Enumerated Constant block can be more convenient than the Constant block for outputting a constant enumerated value. You can also use a bus object as the output data type, which can help to simplify a model (see “Bus Support” on page 1-205 for details).

# Constant

---

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum and maximum values for bus data on the block. Simulink ignores these settings. Instead, set the minimum and maximum values for bus elements of the bus object specified as the data type. The values should be finite real double scalar.


For information on the Minimum and Maximum properties of a bus element, see `Simulink.BusElement`.

---

For more information about data type support, see “Data Types Supported by Simulink” in the Simulink documentation.


## Parameters and Dialog Box

The **Main** pane of the Constant block dialog box appears as follows:

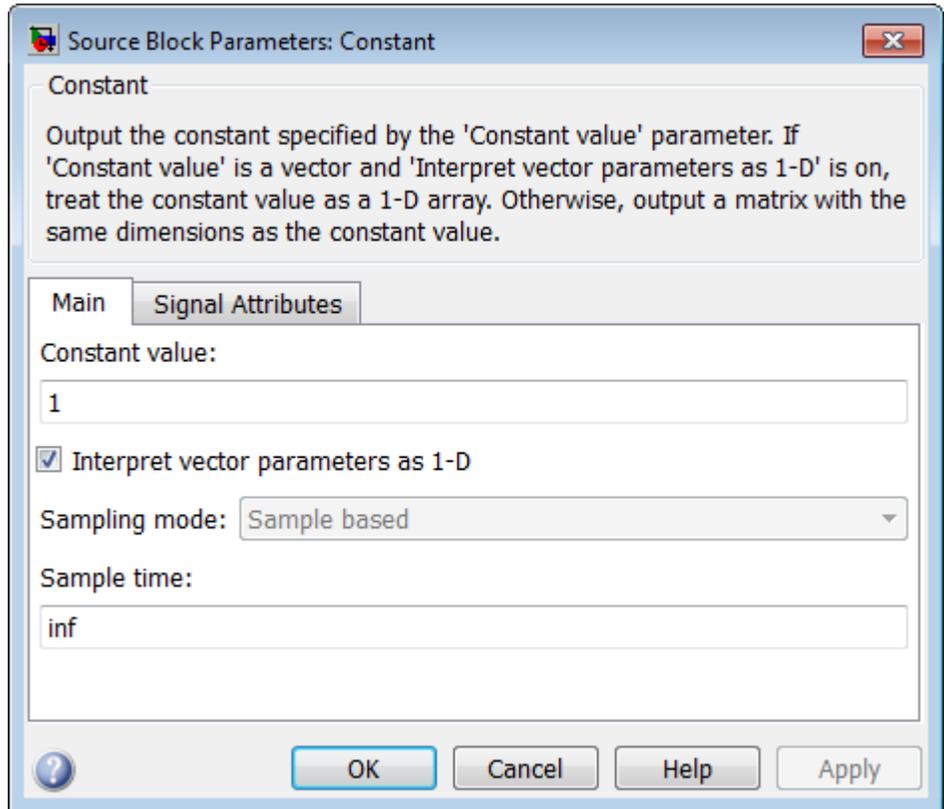

The **Signal Attributes** pane of the Constant block dialog appears as follows:

# Constant

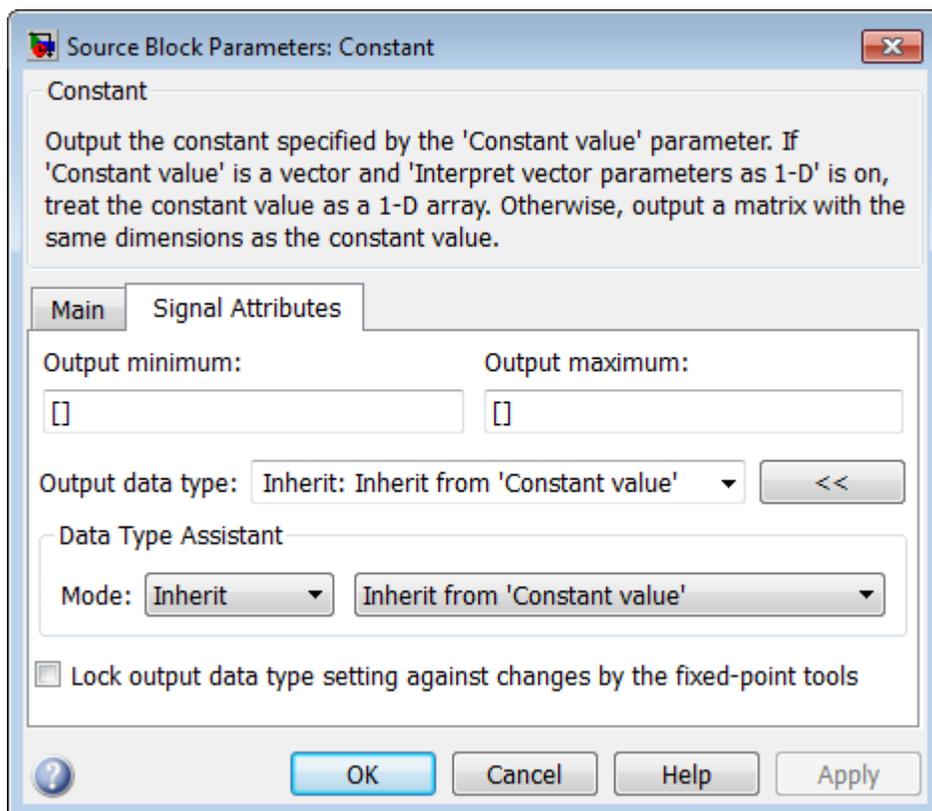

## Constant value

Specify the constant value output of the block.

### Settings

**Default:** 1

**Minimum:** value from the **Output minimum** parameter

**Maximum:** value from the **Output maximum** parameter

- You can enter any expression that MATLAB evaluates as a matrix, including the Boolean keywords `true` and `false`.
- If you set the **Output data type** to be a bus object, you can specify either:
  - A full MATLAB structure corresponding to the bus object
  - 0 to indicate a structure corresponding to the ground value of the bus objectFor details, see “Bus Support” on page 1-205.
- For non-bus data types, Simulink converts this parameter from its value data type to the specified output data type offline, using round toward nearest and saturation.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Interpret vector parameters as 1-D

Select this check box to output a vector of length N if the **Constant value** parameter evaluates to an N-element row or column vector.

### Settings

**Default:** On



On

Outputs a vector of length N if the **Constant value** parameter evaluates to an N-element row or column vector. For example, the block outputs a matrix of dimension 1-by-N or N-by-1.



Off

Does not output a vector of length N if the **Constant value** parameter evaluates to an N-element row or column vector.

If you clear this check box, you can interact with the **Sampling mode** parameter.

### Dependencies

This parameter enables **Sampling mode**.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Sampling mode

Specify whether the output signal is `Sample based` or `Frame based`.

### Settings

**Default:** `Sample based`

`Sample based`

The output signal is sample-based.

`Frame based`

The output signal is frame-based.

### Tip

If you specify the **Data type** to be a bus object, do not specify a frame-based sampling mode.

### Dependencies

- Frame-based processing requires a DSP System Toolbox license.  
For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.
- Clearing **Interpret vector parameters as 1-D** enables this parameter.
- Selecting `Sample based` enables the following parameter:
  - **Sample time**
- Selecting `Frame based` enables the following parameter:
  - **Frame period**

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Sample time

Specify the interval between times that the Constant block output can change during simulation (for example, due to tuning the **Constant value** parameter).

## Settings

**Default:** `inf`

This setting indicates that the block output can never change. This setting speeds simulation and generated code by avoiding the need to recompute the block output.

See “Specify Sample Time” in the online documentation for more information.

## Dependency

**Sampling mode** enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### Output minimum

Lower value of the output range that Simulink checks.

#### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the minimum to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output minimum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

#### Command-Line Information

**Parameter:** OutMin

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

## Output maximum

Upper value of the output range that Simulink checks.

### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the maximum value to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output maximum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

### Command-Line Information

**Parameter:** OutMax

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## Output data type

Specify the output data type.

### Settings

**Default:** Inherit: Inherit from 'Constant value'

# Constant

---

Inherit: Inherit from 'Constant value'  
Use data type of **Constant value**.

Inherit: Inherit via back propagation  
Use data type of the driving block.

double  
Output data type is double.

single  
Output data type is single.

int8  
Output data type is int8.

uint8  
Output data type is uint8.

int16  
Output data type is int16.

uint16  
Output data type is uint16.

int32  
Output data type is int32.

uint32  
Output data type is uint32.

boolean  
Output data type is boolean.

fixdt(1,16)  
Output data type is fixed point fixdt(1,16).

fixdt(1,16,0)  
Output data type is fixed point fixdt(1,16,0).

fixdt(1,16,2<sup>0</sup>,0)  
Output data type is fixed point fixdt(1,16,2<sup>0</sup>,0).

Enum: <class name>  
Use an enumerated data type, for example, Enum: BasicColors.

Bus: <object name>

Data type is a bus object.

<data type expression>

Data type is data type object, for example `Simulink.NumericType`.

Do not specify a bus object as the expression.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specify Block Output Data Types” for more information.

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

## Mode

Select the category of data to specify.

## Settings

**Default:** Inherit

### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit from 'Constant value' (default)
- Inherit via back propagation

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32
- boolean

### Fixed point

Fixed-point data types.

### Enumerated

Enumerated data types. Selecting **Enumerated** enables a second menu/text box to the right, where you can enter the class name.

## Bus

Bus object. Selecting **Bus** enables a **Bus object** parameter to the right, where you enter the name of a bus object that you want to use to define the structure of the bus. If you need to create or change a bus object, click **Edit** to the right of the **Bus object** field to open the Simulink Bus Editor. For details about the Bus Editor, see “Manage Bus Objects with the Bus Editor”.

## Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

Do not specify a bus object as the expression.

## Frame period

Specify the interval between frames that the Constant block output can change during simulation (for example, due to tuning the **Constant value** parameter).

### Settings

**Default:** inf

### Dependency

**Sampling mode** enables this parameter.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### Dependency

Clicking the **Show data type assistant** button enables this parameter.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### See Also

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is Built in or Fixed point.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Slope**

Specify slope for the fixed-point data type.

### **Settings**

**Default:**  $2^0$

Specify any positive real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Bias**

Specify bias for the fixed-point data type.

### **Settings**

**Default:** 0

Specify any real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

### Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

#### Settings

**Default:** Off



On

Locks the output data type setting for this block.



Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

#### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

#### See Also

For more information, see “Use Lock Output Data Type Setting”.

## Bus Support

### Using Bus Objects as the Output Data Type

The Constant block supports nonvirtual buses as the output data type. If you use a bus object as the data type, set **Constant value** to 0 or a MATLAB structure that matches the bus object.

### Using Structures for the Constant Value

The structure you specify must contain a value for every element of the bus represented by the bus object.

You can use the `Simulink.Bus.createMATLABStruct` to create a full structure that corresponds to a bus.

You can use `Simulink.Bus.createObject` to create a bus object from a MATLAB structure.

## Sampling Mode


Do not specify a frame-based sampling mode if you specify the **Data type** to be a bus object.

## Example of Using a Bus Object for a Constant Block

The following example illustrates how using a bus object as an output data type for a Constant block can help to simplify a model.


**1** Open the `busic_example` model and update it.

This model uses six Constant blocks. For details about the model, see “Examples of Partial Structures”.

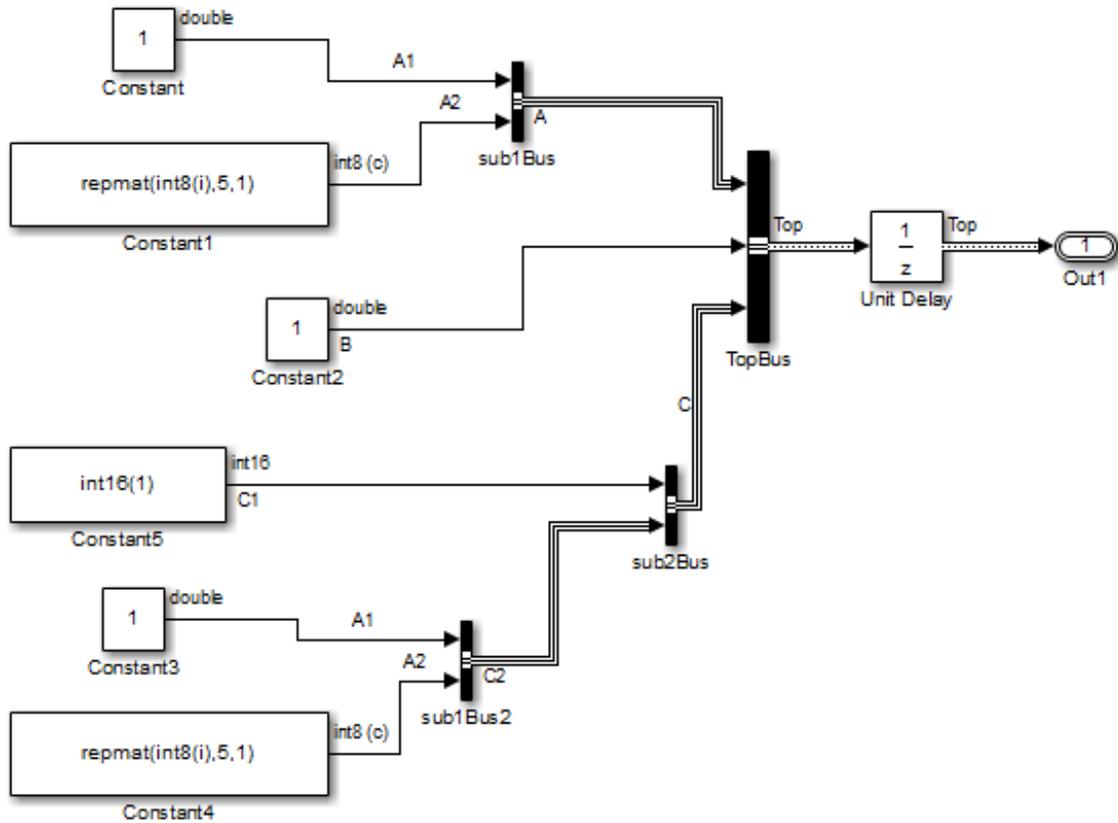

- 2 Open the `constantbus_example` model and update it. This model uses one Constant block that replaces the six Constant blocks in the `basic_example` model.

# Constant

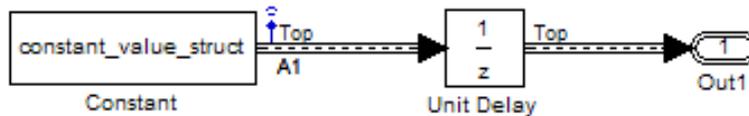

- 3 Simulate the `constantbus_example` model. To verify that the output from the Constant block reflects the values from `constant_value_struct`, perform the next two steps.
- 4 At the MATLAB command line, examine the `constant_value_struct` structure that the Constant block uses for its **Constant value** parameter.

```
constant_value_struct
```

```
constant_value_struct =
```

```
A: [1x1 struct]  
B: 5  
C: [1x1 struct]
```

- 5 Examine the logged data in the `logouts` variable, focusing on the B element of the A1 bus signal. The `constant_value_struct` structure sets the B element to 5.

```
logouts.A1.B.Data
```

## Setting Configuration Parameters to Support Using a Bus Object Data Type

To enable the use of a bus object as an output data type, before you start a simulation, set the following diagnostics as indicated:

- In the **Diagnostics > Connectivity** pane of the Configuration Parameters dialog box, set “**Mux blocks used to create bus signals**” to error.
- In the **Diagnostics > Data Validity** pane of the Configuration Parameters dialog box, set “**Underspecified initialization detection**” to simplified.

The documentation for these diagnostics explains how to convert your model to handle error messages the diagnostics generate.

## Arrays of Buses Not Supported

You cannot use an array of buses with a Constant block.

## Examples

The following Simulink examples show how to use the Constant block:

- `sldemo_auto_climatecontrol`
- `sldemo_boiler`
- `sldemo_bounce`

## Characteristics

Direct Feedthrough	N/A
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Enumerated Constant

# Coulomb and Viscous Friction

---

**Purpose** Model discontinuity at zero, with linear gain elsewhere

**Library** Discontinuities

**Description** The Coulomb and Viscous Friction block models Coulomb (static) and viscous (dynamic) friction. The block models a discontinuity at zero and a linear gain otherwise.



The block output matches the MATLAB result for:

$$y = \text{sign}(x) .* (\text{Gain} .* \text{abs}(x) + \text{Offset})$$

where  $y$  is the output,  $x$  is the input, **Gain** is the signal gain for nonzero input values, and **Offset** is the Coulomb friction.

The block accepts one input and generates one output. The input can be a scalar, vector, or matrix with real and complex elements.

- For a scalar input, **Gain** and **Offset** can have dimensions that differ from the input. The output is a scalar, vector, or matrix depending on the dimensions of **Gain** and **Offset**.
- For a vector or matrix input, **Gain** and **Offset** must be scalar or have the same dimensions as the input. The output is a vector or matrix of the same dimensions as the input.


## Data Type Support

The Coulomb and Viscous Friction block supports real inputs of the following data types:

- Floating point
- Built-in integer
- Fixed point

The block supports complex inputs only for floating-point data types, `double` and `single`. The output uses the same data type as the input.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

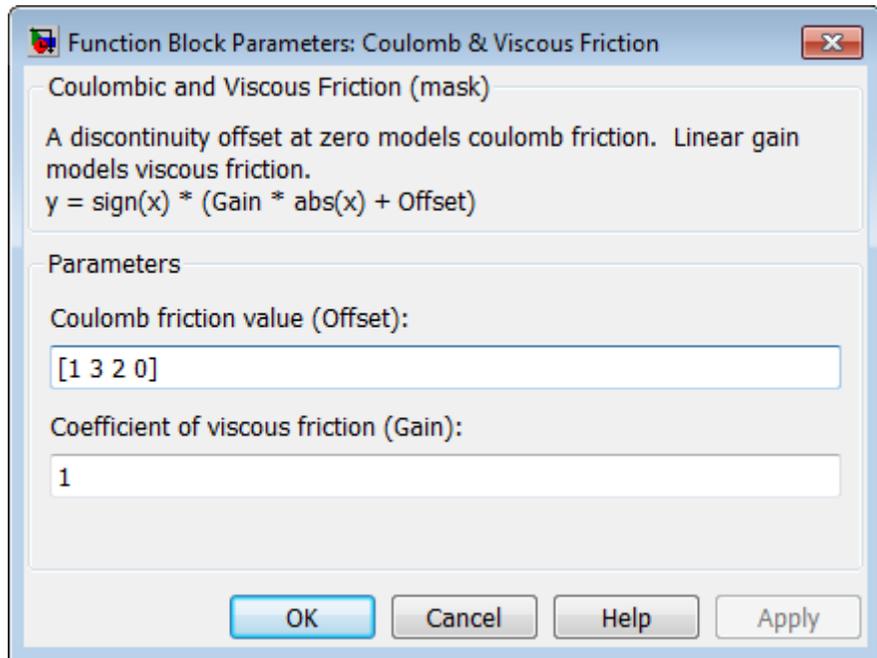

## Parameters and Dialog Box

### Coulomb friction value

Specify the offset that applies to all input values.

### Coefficient of viscous friction


Specify the signal gain for nonzero input values.

# Coulomb and Viscous Friction

## Examples

### Scalar Input


Suppose that you have the following model:

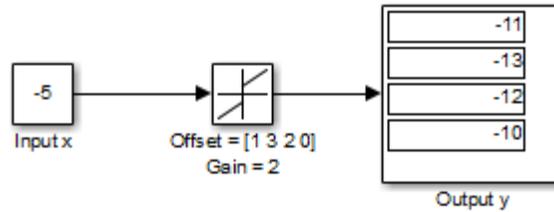

In this model, block input  $x$  and Gain are scalar values, but Offset is a vector. Therefore, the block uses element-wise scalar expansion to compute the output.

### Vector Input

Suppose that you have the following model:

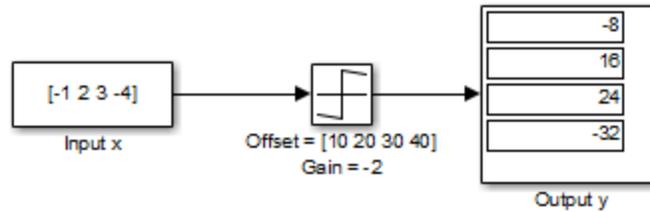

In this model, vector dimensions for block input  $x$  and Offset are the same.

## Matrix Input

Suppose that you have the following model:



In this model, matrix dimensions for block input x and Offset are the same.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from the driving block
Scalar Expansion	Yes
Dimensionalized	Yes
Multidimensionalized	No
Zero-Crossing Detection	Yes

# Counter Free-Running

---

**Purpose** Count up and overflow back to zero after reaching maximum value for specified number of bits


**Library** Sources

**Description** The Counter Free-Running block counts up until reaching the maximum value,  $2^{Nbits} - 1$ , where  $Nbits$  is the number of bits. Then the counter overflows to zero and begins counting up again.



After overflow, the counter always initializes to zero. However, if you select the global doubles override, the Counter Free-Running block does not wrap back to zero.

**Data Type Support** The Counter Free-Running block outputs an unsigned integer. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

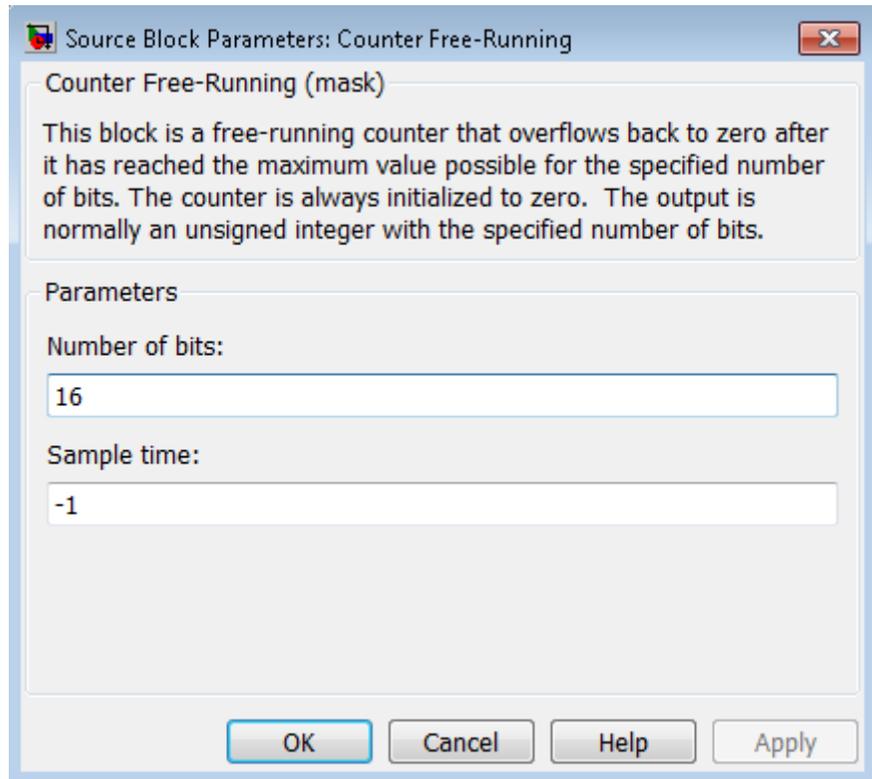

## Parameters and Dialog Box

### Number of Bits

Specify the number of bits.

When you use...	Such as...	The block counts up to...	Which is...
A positive integer	8	$2^8 - 1$	255
An unsigned integer expression	<code>uint8(8)</code>	<code>uint8(2<sup>uint8(8)</sup> - 1)</code>	254

# Counter Free-Running


## Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation.

## Examples

### Bit Specification Using a Positive Integer

Suppose that you have the following model:

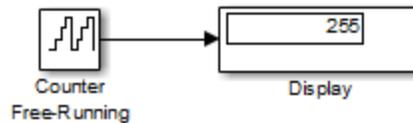

The block parameters are:

Parameter	Setting
Number of Bits	8
Sample time	-1

The solver options for the model are:

Parameter	Setting
Stop time	255
Type	Fixed-step
Solver	discrete (no continuous states)
Fixed-step size	1


At  $t = 255$ , the counter reaches the maximum value:

$$2^8 - 1$$

If you change the stop time of the simulation to 256, the counter wraps to zero.

## Bit Specification Using an Unsigned Integer Expression

Suppose that you have the following model:

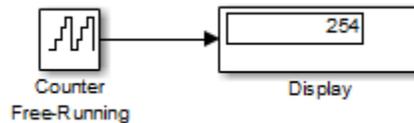

The block parameters are:

Parameter	Setting
Number of Bits	uint8(8)
Sample time	-1

The solver options for the model are:

Parameter	Setting
Stop time	254
Type	Fixed-step
Solver	discrete (no continuous states)
Fixed-step size	1

At  $t = 254$ , the counter reaches the maximum value:

$$\text{uint8}(2^{\text{uint8}(8)} - 1)$$

If you change the stop time of the simulation to 255, the counter wraps to zero.

# Counter Free-Running

---

<b>Characteristics</b>	Sample Time	Specified in the <b>Sample time</b> parameter
	Scalar Expansion	No
	Zero-Crossing Detection	No

**See Also** Counter Limited

**Purpose** Count up and wrap back to zero after outputting specified upper limit

**Library** Sources

## Description



The Counter Limited block counts up until the specified upper limit is reached. Then the counter wraps back to zero, and restarts counting up. The counter always initializes to zero.

You can specify the upper limit with the **Upper limit** parameter.

You can specify the sample time with the **Sample time** parameter. A **Sample time** of -1 means that the sample time is inherited.


The output is an unsigned integer of 8, 16, or 32 bits, with the smallest number of bits needed to represent the upper limit.

## Data Type Support

The Counter Limited block outputs an unsigned integer.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Counter Limited

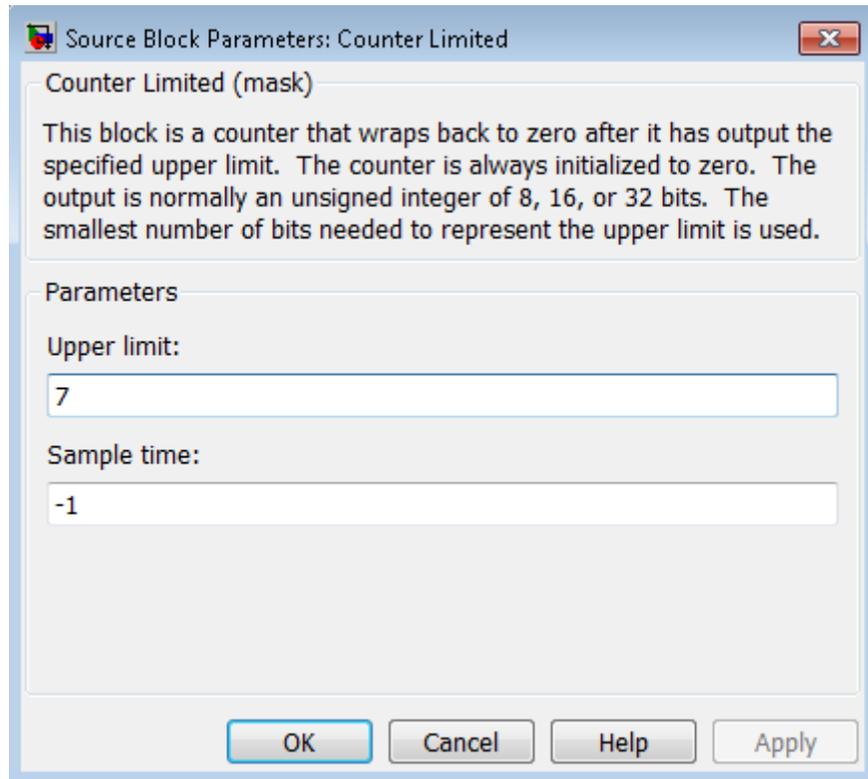

## Parameters and Dialog Box

### Upper limit

Specify the upper limit.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See "Specify Sample Time" in the Simulink documentation.

## Examples

The following Simulink examples show how to use the Counter Limited block:

- `sldemo_tonegen_fixpt`

<b>Characteristics</b>	Sample Time	Specified in the <b>Sample time</b> parameter
	Scalar Expansion	No

**See Also** Counter Free-Running

# Data Store Memory

---

**Purpose** Define data store

**Library** Signal Routing

**Description** The Data Store Memory block defines and initializes a named shared data store, which is a memory region usable by Data Store Read and Data Store Write blocks that specify the same data store name.



The location of the Data Store Memory block that defines a data store determines which Data Store Read and Data Store Write blocks can access the data store:

- If the Data Store Memory block is in the *top-level system*, Data Store Read and Data Store Write blocks anywhere in the model can access the data store.
- If the Data Store Memory block is in a *subsystem*, Data Store Read and Data Store Write blocks in the same subsystem or in any subsystem below it in the model hierarchy can access the data store.

Data Store Read or Data Store Write blocks cannot access a Data Store Memory block that is either in a model that contains a Model block or in a referenced model.

Do not include a Data Store Memory block in a subsystem that a For Each Subsystem block represents.

Use the **Initial value** parameter to initialize the data store. Specify a scalar value or an array of values in the **Initial value** parameter. The dimensions of the array determine the dimensionality of the data store. Any data written to the data store must have the dimensions designated by the **Initial value** parameter. Otherwise, an error occurs.

Obtaining correct results from data stores requires ensuring that data store reads and writes occur in the expected order. For details, see:

- “Order Data Store Access”
- “Data Store Diagnostics”

- “Log Data Stores”

You can use `Simulink.Signal` objects in addition to, or instead of, Data Store Memory blocks to define data stores. A data store defined in the *base* workspace with a signal object is a *global* data store. Global data stores are accessible to every model, including all referenced models. See “Data Stores” for more information.

## Data Type Support

The Data Store Memory block stores real or complex signals of any data type that Simulink supports, including fixed-point, bus object, and enumerated data types.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum and maximum values for bus data on the block. Simulink ignores these settings. Instead, set the minimum and maximum values for bus elements of the bus object specified as the data type. The values should be finite real double scalar.

For information on the Minimum and Maximum properties of a bus element, see `Simulink.BusElement`.

---


For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

You can use arrays of buses with a Data Store Memory block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

# Data Store Memory

## Parameters and Dialog Box

The **Main** pane of the Data Store Memory block dialog box appears as follows:

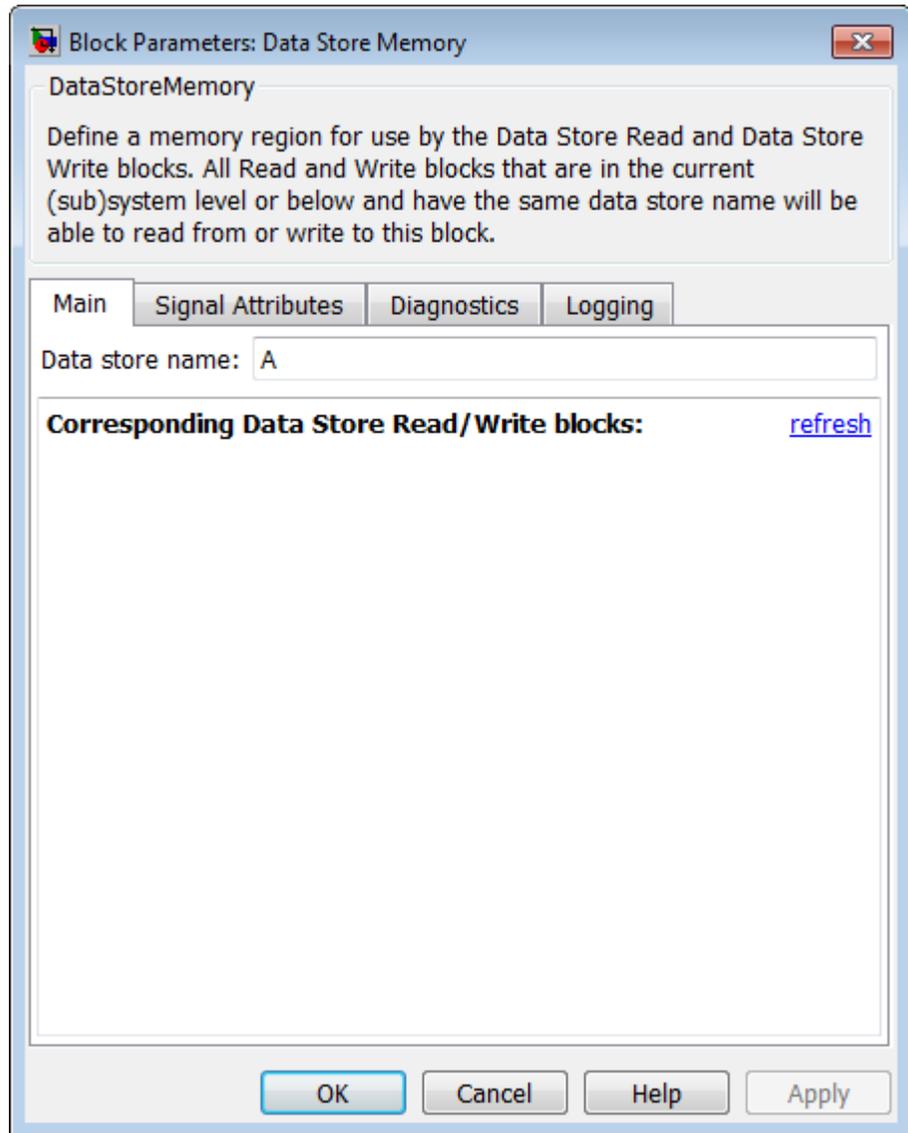

## **Data store name**


Specify a name for the data store you are defining with this block. Data Store Read and Data Store Write blocks with the same name can read from, and write to, the data store initialized by this block. The name can represent a Data Store Memory block or a sign object defined to be a data store.

## **Corresponding Data Store Read/Write blocks**

List all the Data Store Read and Data Store Write blocks that have the same data store name as the current block, and that are in the current system or in any subsystem below it in the model hierarchy. Double-click a block in this list to highlight the block and bring it to the foreground.

The **Signal Attributes** pane of the Data Store Memory block dialog box appears as follows:

# Data Store Memory

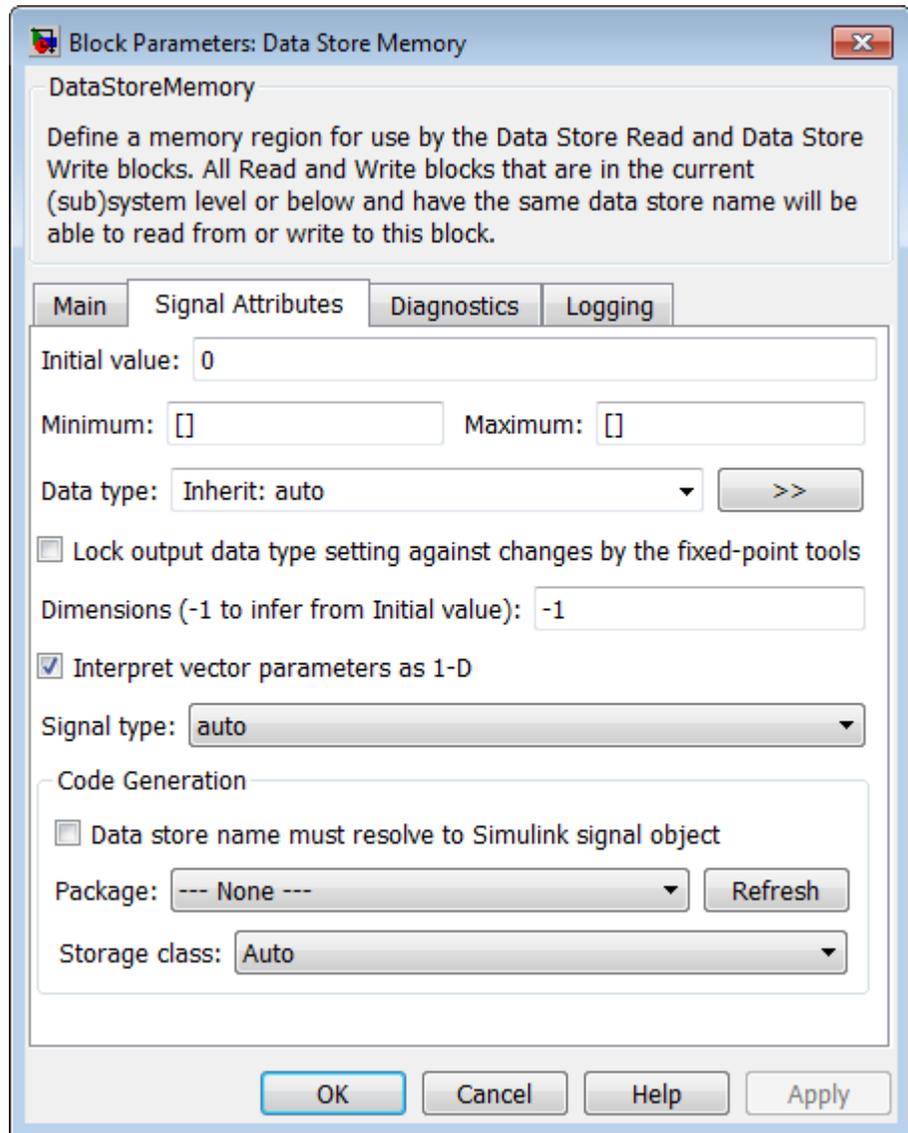

## Initial value

Specify the initial value or values of the data store. The dimensions of this value determine the dimensions of data that may be written to the data store. The **Minimum** parameter specifies the minimum value for this parameter, and the **Maximum** parameter specifies the maximum value.

Initial value dimensions must match the dimensions that you specify in the **Signal Attributes > Dimensions** parameter, unless the initial value is a MATLAB structure.

## Minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum property of a bus element, see `Simulink.BusElement`.

---

Simulink uses the minimum value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Maximum

Specify the maximum value that the block should output. The default value is [] (unspecified). This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum property of a bus element, see `Simulink.BusElement`.

---

Simulink uses the maximum value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Data type

Specify the output data type. You can set it to:

- A rule that inherits a data type (for example, `Inherit: auto`)
- The name of a built-in data type (for example, `single`)
- The name of a data type object (for example, a `Simulink.NumericType` object)
- An expression that evaluates to a data type (for example, `fixdt(1,16,0)`). Do not specify a bus object as the data type in an expression; use `Bus: <object name>` to specify a bus data type.
- `Bus: <object name>`; enter the name of a bus object that you want to use to define the structure of the bus. The bus must be a nonvirtual bus. If you need to create or change a bus object, click the **Show data type assistant** button and then click the **Edit** button to the right of the **Bus object** field to open the Simulink Bus Editor. For details about the Bus Editor, see “Manage Bus Objects with the Bus Editor”

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Data type** parameter.

See “Specify Block Output Data Types”.

### **Lock output data type setting against changes by the fixed-point tools**

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

### **Signal type**

Specify the numeric type, real or complex, of the values in the data store.

### **Dimensions (-1 to infer from Initial value)**

Specify dimensions that match the dimensions of the **Initial value** dimensions, unless you specify a MATLAB structure for the initial value. For example, if you use a MATLAB structure for the initial value, then you need to specify dimensions to initialize an array of buses with this MATLAB structure.

### **Interpret vector parameters as 1-D**

If you enable this option and specify the **Initial value** parameter as a column or row matrix, Simulink initializes the data store to a 1-D array whose elements are equal to the elements of the row or column vector. See “Determining the Output Dimensions of Source Blocks”.

### **Data store must resolve to Simulink signal object**

Specify that Simulink software, when compiling the model, searches the model and base workspace for a `Simulink.Signal` object having the same name, as described in “Symbol Resolution”. If Simulink does not find such an object, the compilation stops, with an error. Otherwise, Simulink compares the attributes of the signal object to the corresponding attributes of the Data Store Memory block. If the block and the object attributes are

# Data Store Memory

---

inconsistent, Simulink halts model compilation and displays an error.

## **Package**

Select a package that defines the custom storage class you want to apply. If you have defined any packages of your own, click **Refresh**. This action adds all user-defined packages on your search path to the package list.

## **Storage class**


Select a custom storage class for the signal object. When no **Package** is selected, setting this parameter to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables **Storage type qualifier**.

## **Storage type qualifier**

Specify the Simulink Coder storage type qualifier.

See “States” in the Simulink Coder documentation for more information.

The **Diagnostics** pane of the Data Store Memory block dialog box appears as follows:

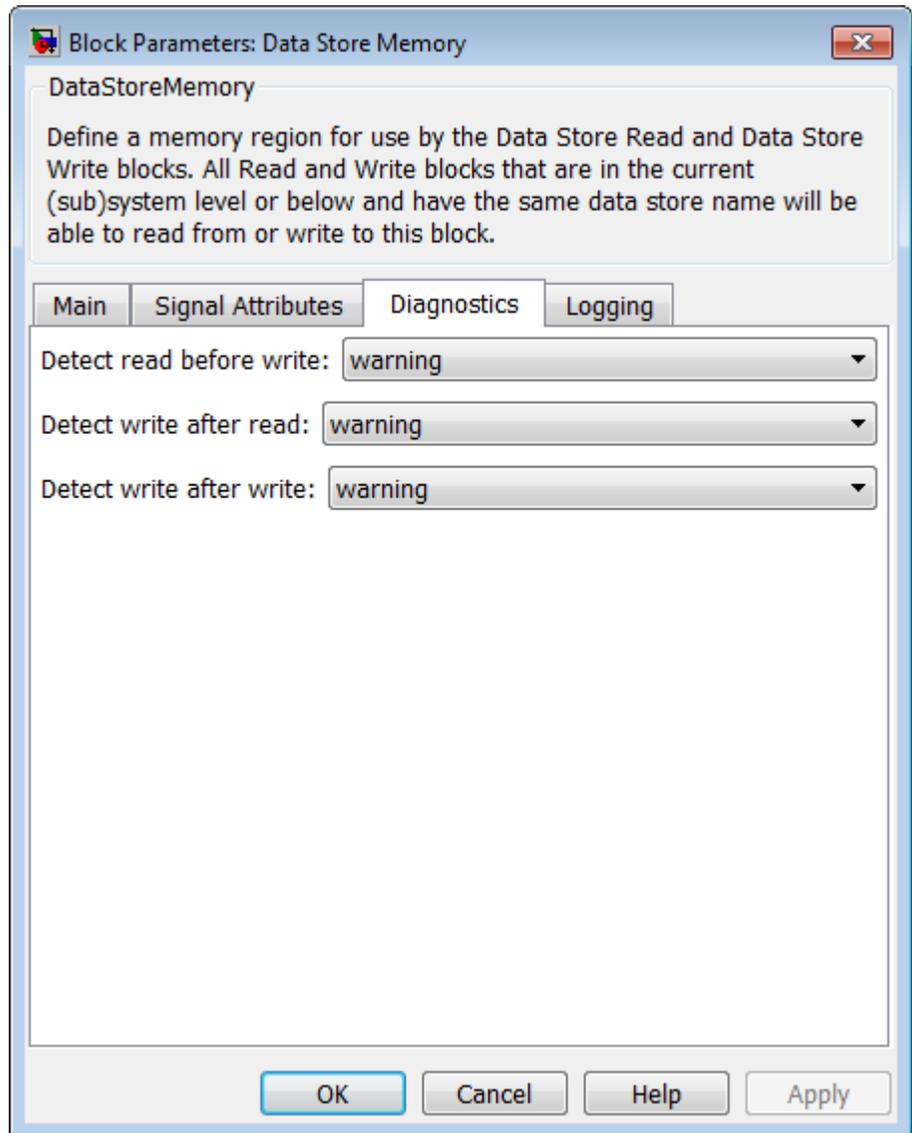

## **Detect read before write**

Select the diagnostic action to take if the model attempts to read data from a data store to which it has not written data in this time step. See also the “Detect read before write” diagnostic in the **Data Store Memory Block** section of the **Model Configuration Parameters > Diagnostics > Data Validity** pane.

**Default:** warning

none

Take no action.

warning

Display a warning.

error

Terminate the simulation and display an error message.

## **Detect write after read**

Select the diagnostic action to take if the model attempts to write data to the data store after previously reading data from it in the current time step. See also the “Detect write after read” diagnostic in the **Data Store Memory Block** section of the **Model Configuration Parameters > Diagnostics > Data Validity** pane.

**Default:** warning

none

Take no action.

warning

Display a warning.

error

Terminate the simulation and display an error message.

## Detect write after write

Select the diagnostic action to take if the model attempts to write data to the data store twice in succession in the current time step. See also the “Detect write after write” diagnostic in the **Data Store Memory Block** section of the **Model Configuration Parameters > Diagnostics > Data Validity** pane.

**Default:** warning

none

Take no action.

warning


Display a warning.

error

Terminate the simulation and display an error message.

The **Logging** pane of the Data Store Memory block dialog box appears as follows:

# Data Store Memory

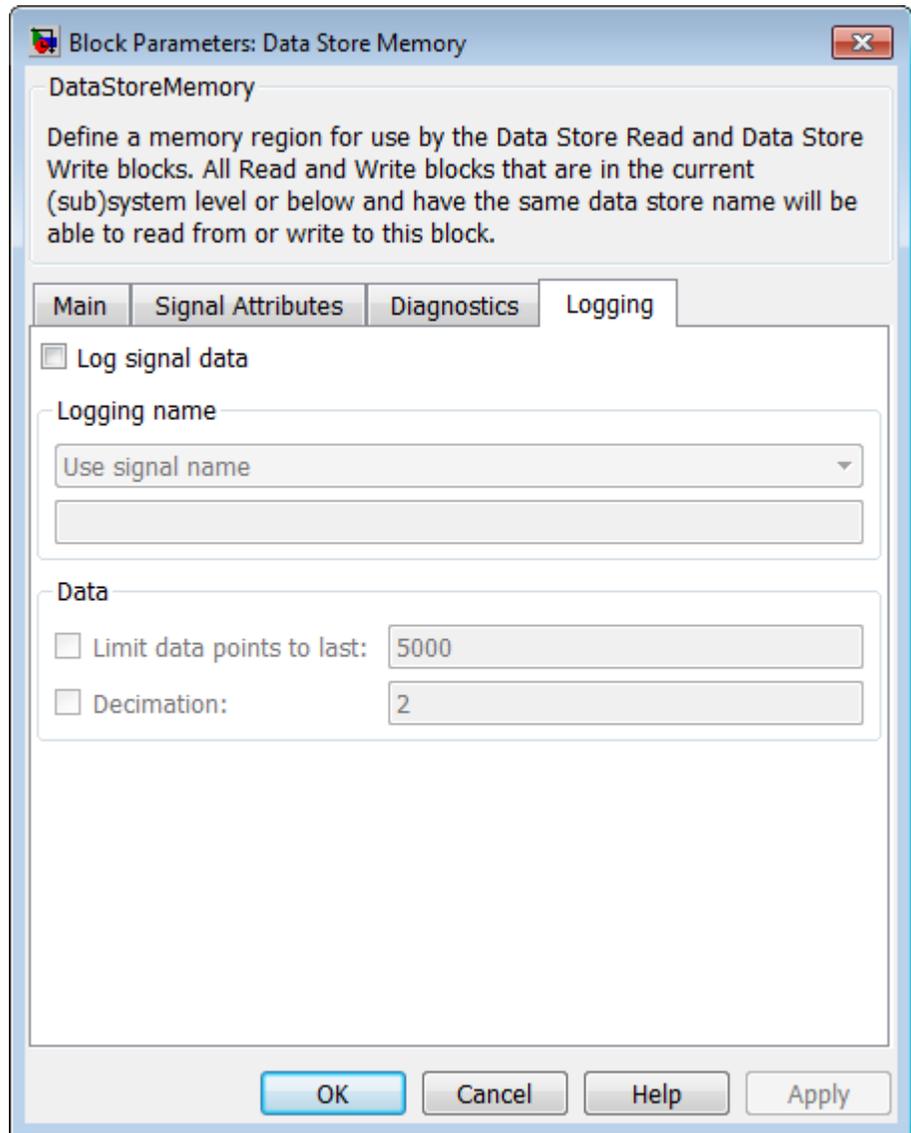

## Log signal data

Select this option to save the values of this signal to the MATLAB workspace during simulation. See “Signal Logging” for details.

## Logging name

Use this pair of controls, consisting of a list box and an edit field, to specify the name associated with logged signal data.

Simulink uses the signal name as its logging name by default. To specify a custom logging name, select **Custom** from the list box and enter the custom name in the adjacent edit field.

## Data

Use this group of controls to limit the amount of data that Simulink logs for this signal.

- **Limit data points to last:** Discard all but the last N data points, where N is the number that you enter in the adjacent edit field.
- **Decimation:** Log every Nth data point, where N is the number that you enter in the adjacent edit field. For example, suppose that your model uses a fixed-step solver with a step size of 0.1 s. If you select this option and accept the default decimation value (2), Simulink records data points for this signal at times 0.0, 0.2, 0.4, and so on.

For more information, see “Log Data Stores”

## Characteristics

Sample Time	N/A
Dimensionalized	Yes
Multidimensionalized	Yes

## See Also

- “Data Stores”
- “Access Data Stores with Simulink Blocks”
- Data Store Read

# Data Store Memory

---

- Data Store Write
- “Log Data Stores”

**Purpose** Read data from data store

**Library** Signal Routing

**Description** The Data Store Read block copies data from the named data store to its output. More than one Data Store Read block can read from the same data store.



The data store from which the data is read is determined by the location of the Data Store Memory block or signal object that defines the data store. For more information, see “Data Stores” and Data Store Memory.

Obtaining correct results from data stores requires ensuring that data store reads and writes occur in the expected order. See “Order Data Store Access” and “Data Store Diagnostics” for details.

**Data Type Support** The Data Store Read block can output a real or complex signal of any data type that Simulink supports, including fixed-point, bus object, and enumerated data types.


For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

You can use arrays of buses with a Data Store Read block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

# Data Store Read

## Parameters and Dialog Box

The **Parameters** pane of the Data Store Read block dialog box appears as follows:

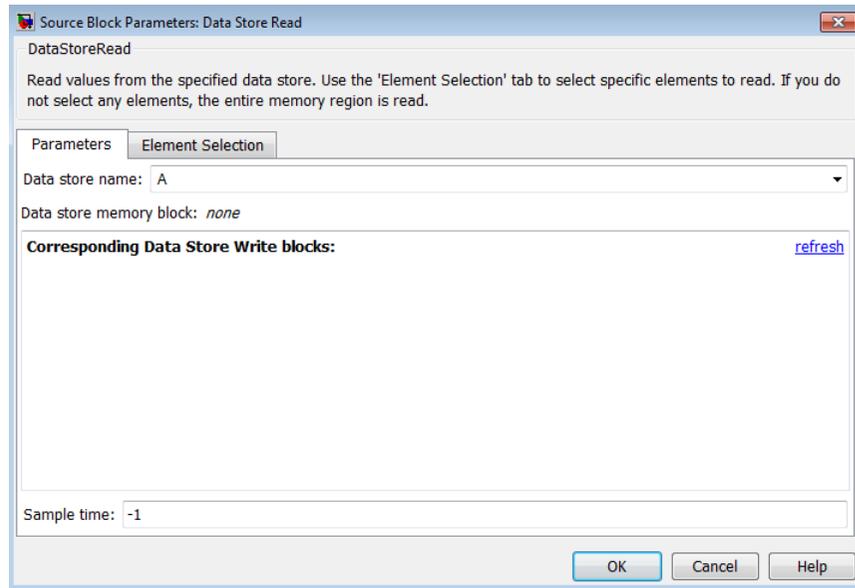

### Data store name

Specifies the name of the data store from which this block reads data. The adjacent pull-down list lists the names of Data Store Memory blocks that exist at the same level in the model as the Data Store Read block or at higher levels. The pull-down list also includes all `Simulink.Signal` objects in the base and model workspaces. To change the name, select a name from the pull-down list or enter the name directly in the edit field.

When Simulink software compiles the model containing this block, Simulink software searches the model upwards from this block's level for a Data Store Memory block having the specified data store name. If Simulink software does not find such a block, it searches the model workspace and the MATLAB workspace for

a `Simulink.Signal` object having the same name. See “Symbol Resolution” for more information about the search path.

If Simulink software finds the signal object, it creates a hidden Data Store Memory block at the model’s root level having the properties specified by the signal object and an initial value of 0. If Simulink software finds neither the Data Store Memory block nor the signal object, it halts the compilation and displays an error.

### **Data store memory block**

This field lists the Data Store Memory block that initialized the store from which this block reads.

### **Data store write blocks**


This parameter lists all the Data Store Write blocks with the same data store name as this block that are in the same (sub)system or in any subsystem below it in the model hierarchy. Double-click any entry on this list to highlight the block and bring it to the foreground.

### **Sample time**

The sample time, which controls when the block reads from the data store. A value of -1 indicates that the sample time is inherited. See “Specify Sample Time” for more information.

The **Element Selection** pane of the Data Store Read block dialog box appears as follows:

# Data Store Read

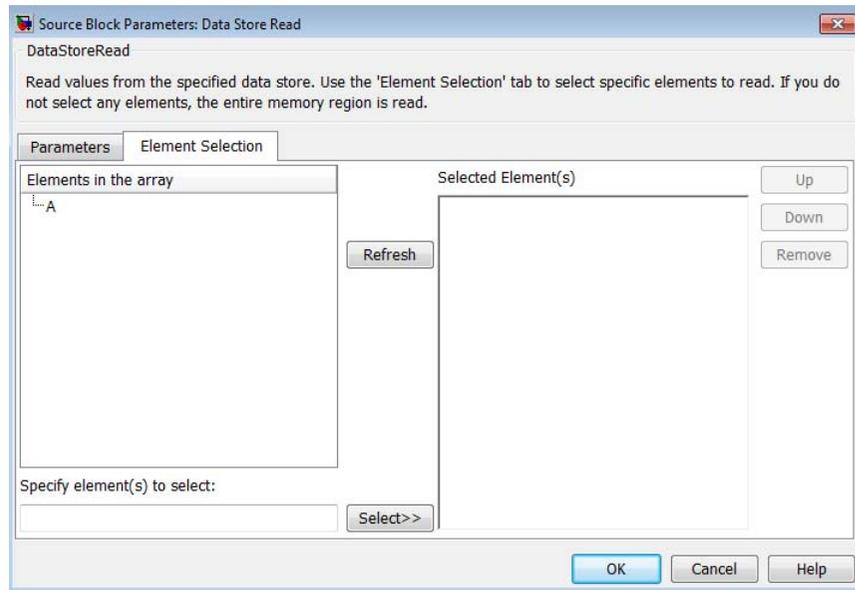

Use the **Element Selection** pane to select a subset of the bus or matrix elements defined for the associated data store. The Data Store Read block icon reflects the elements that you specify. For details, see “Accessing Specific Bus and Matrix Elements”.

**Elements in the array** or **Signals in the bus** (Prompt is specific to the type of data.)

For bus signals, lists the elements in the associated data store. The list displays the maximum dimensions for each element, in parentheses.

For data stores with a bus data type, you can expand the tree to view the bus elements. For data stores with arrays, you can read the whole data store, or you can specify one or more elements of the whole data store.

You can select an element and then use one of the following approaches:

- Click **Select>>** to display that element (and all its subelements) in the **Selected element(s)** list.
- Use the **Specify element(s) to select** edit box to specify the bus or matrix elements that you want to select for reading. Then click **Select>>**.

To refresh the display to reflect modifications to the bus or matrix used in the data store, click **Refresh**.

### Specify element(s) to select

Enter a MATLAB expression to define the specific element that you want to read. For example, for a data store named DSM that has maximum dimensions of [3,5], you could enter expressions such as DSM(2, 4) or DSM([1 3], 2) in the edit box and then click **Select>>**.

To apply the element selection, click **OK**.

### Selected Element(s)

Displays the elements that you select. The Data Store Read block icon displays a port for each element that you specify.

To change the order of bus or matrix elements in the list, select the element in the list and click **Up** or **Down**. Changing the order of the elements in the list changes the order of the ports. To remove an element, click **Remove**.

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Dimensionalized	Yes
Multidimensionalized	Yes

## See Also

- “Data Stores”
- “Access Data Stores with Simulink Blocks”
- Data Store Memory

# Data Store Read

---

- Data Store Write

**Purpose** Write data to data store

**Library** Signal Routing

## Description



The Data Store Write block copies the value at its input to the named data store. Each write operation performed by a Data Store Write block writes over the data store, replacing the previous contents.

The data store to which this block writes is determined by the location of the Data Store Memory block or signal object that defines the data store. For more information, see “Data Stores” and Data Store Memory. The size of the data store is set by the signal object or the Data Store Memory block that defines and initializes the data store. Each Data Store Write block that writes to that data store must write the same amount of data.

More than one Data Store Write block can write to the same data store. However, if two Data Store Write blocks attempt to write to the same data store during the same simulation step, results are unpredictable.

Obtaining correct results from data stores requires ensuring that data store reads and writes occur in the expected order. For details, see “Order Data Store Access” and “Data Store Diagnostics”.

You can log the values of a local or global data store data variable for all the steps in a simulation. For details, see “Log Data Stores”.

## Data Type Support

The Data Store Write block accepts a real or complex signal of any data type that Simulink supports, including fixed-point, bus object, and enumerated data types.


For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

You can use an array of buses with a Data Store Write block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

# Data Store Write

## Parameters and Dialog Box

The **Parameters** pane of the Data Store Write block dialog box appears as follows:

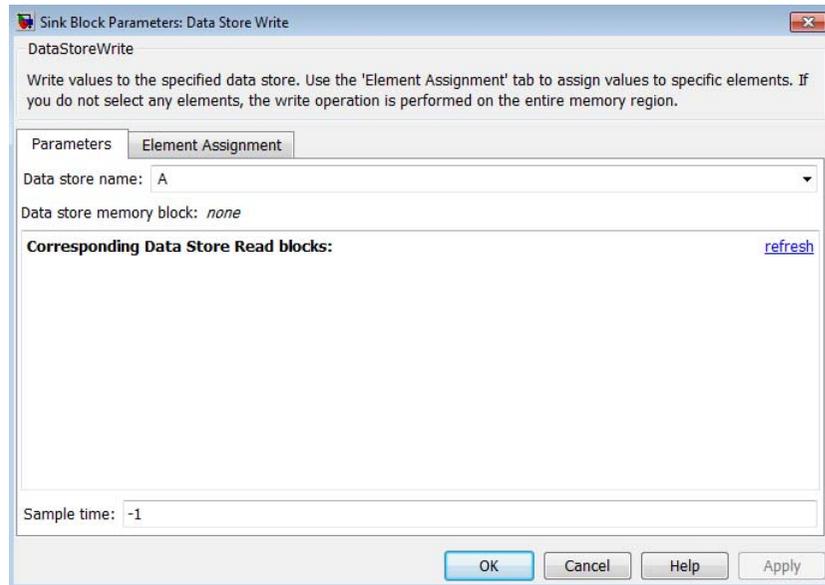

### Data store name

Specifies the name of the data store to which this block writes data. The adjacent pull-down list lists the names of Data Store Memory blocks that exist at the same level in the model as the Data Store Write block or at higher levels. The pull-down list also includes all `Simulink.Signal` objects in the base and model workspaces. To change the name, select a name from the pull-down list or enter the name directly in the edit field.

When Simulink software compiles the model containing this block, Simulink software searches the model upwards from this block's level for a Data Store Memory block having the specified data store name. If Simulink does not find such a block, it searches the model workspace and the MATLAB workspace for a `Simulink.Signal` object having the same name. If Simulink

software finds neither the Data Store Memory block nor the signal object, it halts the compilation and displays an error. See “Symbol Resolution” for more information about the search path.

If Simulink finds a signal object, it creates a hidden Data Store Memory block at the model’s root level having the properties specified by the signal object and an initial value set to a matrix of zeros. The dimensions of that matrix are inherited from the **Dimensions** property of the signal object.

### **Data store memory block**

This field lists the Data Store Memory block that initialized the store to which this block writes.

### **Data store read blocks**


This parameter lists all the Data Store Read blocks with the same data store name as this block that are in the same (sub)system or in any subsystem below it in the model hierarchy. Double-click any entry on this list to highlight the block and bring it to the foreground.

### **Sample time**

Specify the sample time that controls when the block writes to the data store. A value of -1 indicates that the sample time is inherited. See “Specify Sample Time” for more information.

The **Element Assignment** pane of the Data Store Write block dialog box appears as follows:

# Data Store Write

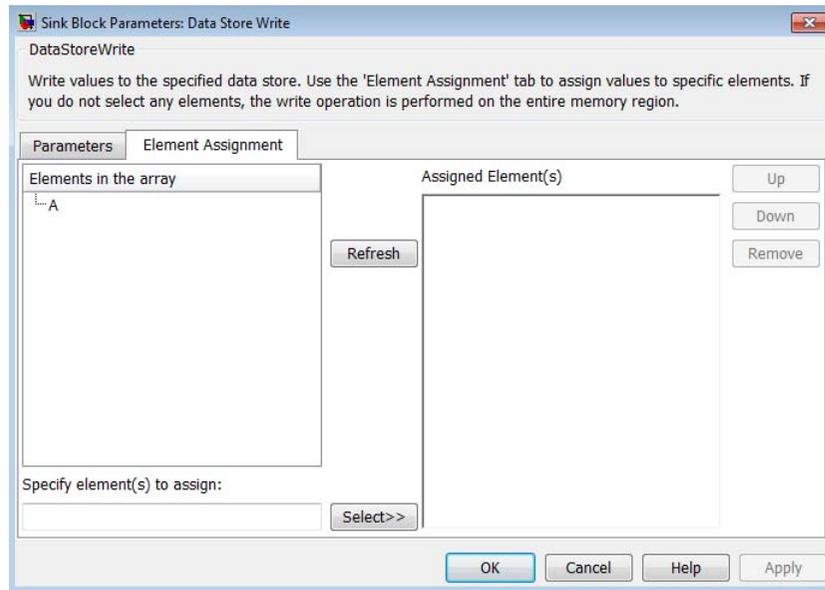

Use the **Element Assignment** pane to assign a subset of the bus or matrix elements defined for writing to the associated data store. The Data Store Write block icon reflects the elements that you specify. For details, see “Accessing Specific Bus and Matrix Elements”.

**Elements in the array** or **Signals in the bus** (Prompt is specific to the type of data.)

For bus signals, lists the elements in the associated data store. The list displays the maximum dimensions for each element, in parentheses.

For data stores with a bus data type, you can expand the tree to view the bus elements. For data stores with arrays, you can write the whole data store, or you can assign one or more elements to the whole data store.

You can select an element and then use one of the following approaches:

- Click **Select>>** to display that element (and all its subelements) in the **Assigned element(s)** list.
- Use the **Specify element(s) to assign** edit box to specify the bus or matrix elements that you want to select for reading. Then click **Select>>**.

To refresh the display to reflect modifications to the bus or matrix used in the data store, click **Refresh**.

### Specify element(s) to assign

Enter a MATLAB expression to define the specific element that you want to write. For example, for a data store named DSM that has maximum dimensions of [3,5], you could enter expressions such as DSM(2, 4) or DSM([1 3], 2) in the edit box. Then click **Select>>**.

To apply the element selection, click **OK**.

### Assigned Element(s)

Displays the elements that you selected for assignment. The Data Store Write block icon displays a port for each element that you specify.

To change the order of bus or matrix elements in the list, select the element in the list and click **Up** or **Down**. Changing the order of the elements in the list changes the order of the ports. To remove an element, click **Remove**.

### Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Dimensionalized	Yes
Multidimensionalized	Yes

### See Also

- “Data Stores”
- “Access Data Stores with Simulink Blocks”

# Data Store Write

---

- Data Store Memory
- Data Store Read
- “Log Data Stores”

**Purpose** Convert input signal to specified data type

**Library** Signal Attributes



**Description** The Data Type Conversion block converts an input signal of any Simulink data type to the data type you specify for the **Output data type** parameter. The input can be any real- or complex-valued signal. If the input is real, the output is real. If the input is complex, the output is complex.

---

**Note** This block requires that you specify the data type and scaling for the conversion. If you want to inherit the data type or scaling from an input signal, use the Data Type Conversion Inherited block.

---

The **Input and output to have equal** parameter controls how the block handles the input in the context of fixed point data representation. For more information, see “Fixed-Point Numbers”.

- Select **Real World Value (RWV)** to treat the input as  $V = SQ + B$ , where  $S$  is the slope and  $B$  is the bias.  $V$  is used to produce  $Q = (V - B)/S$ , which is stored in the output.
- Select **Stored Integer (SI)** to treat the input as a stored integer,  $Q$ . The value of  $Q$  is directly used to produce the output. In this mode, the input and output are identical, except that the input is a raw integer lacking proper scaling information. Selecting **Stored Integer** might be useful in the following cases:
  - Generating code for a fixed-point processor

# Data Type Conversion

---

The resulting code uses only integers and does not use floating-point operations.

- Partitioning your model based on hardware characteristics

For example, part of your model might involve simulating hardware that produces integers as output.

For more information on scaling of fixed point numbers, see “Scaling”.

## Casting Enumerated Signals

Use a Data Type Conversion block to cast enumerated signals as follows.

- 1 To cast a signal of enumerated type to a signal of any numeric type

The underlying integers of all enumerated values input to the Data Type Conversion block should be within the range of the numeric type; otherwise, an error occurs during simulation.

- 2 To cast a signal of any integer type to a signal of enumerated type

The value input to the Data Type Conversion block should match the underlying value of an enumerated value; otherwise, an error occurs during simulation.

You can enable the block’s **Saturate on integer overflow** parameter so that Simulink uses the default value of the enumerated type when the value input to the block does not match the underlying value of an enumerated value. See “Type Casting for Enumerations”.

You cannot use a Data Type Conversion block in the following cases.

- To cast a non-integer numeric signal to an enumerated signal
- To cast a complex signal to an enumerated signal, regardless of the data types of the complex signal’s real and imaginary parts.


See “About Simulink Enumerations” for information on working with enumerated types.

## **Data Type Support**

The Data Type Conversion block handles any data type that Simulink supports, including fixed-point and enumerated data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Data Type Conversion

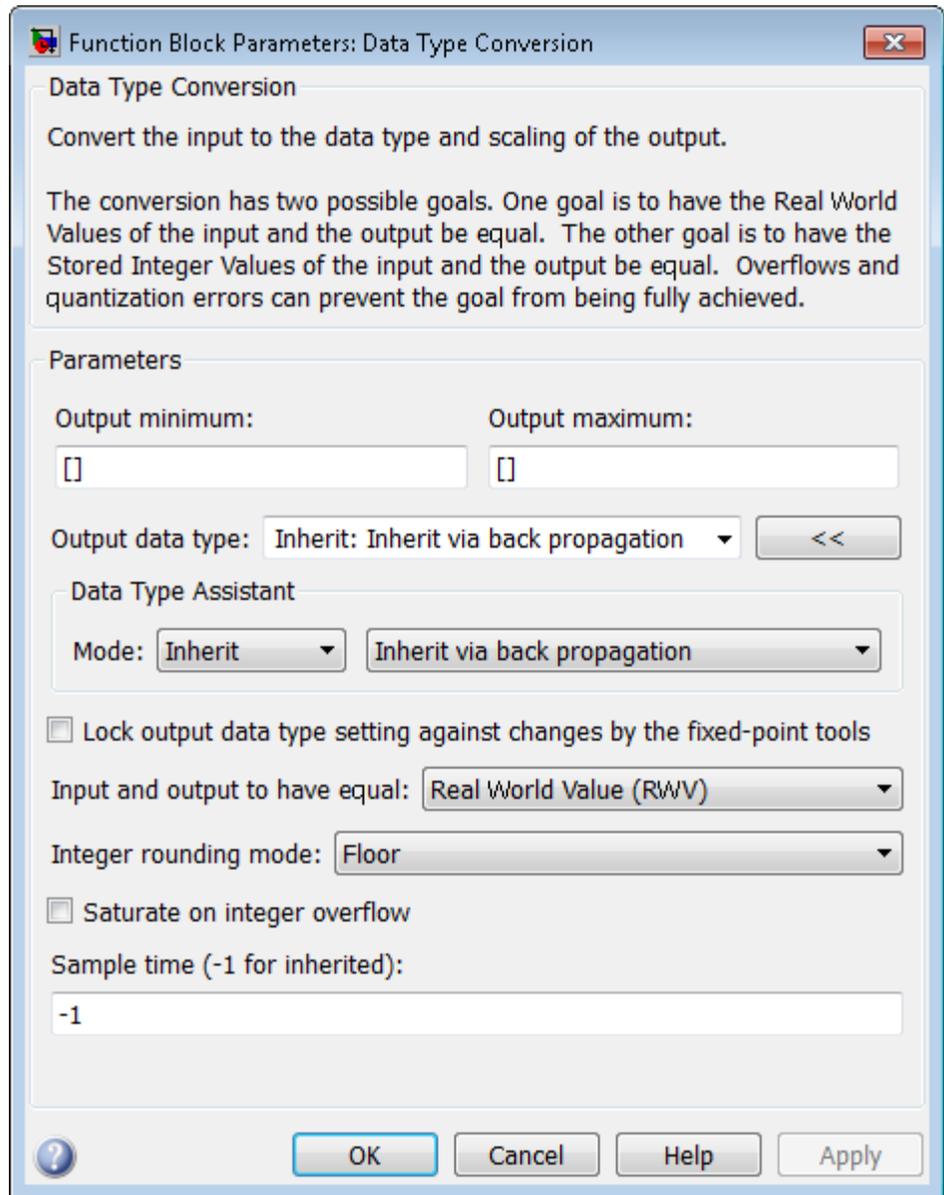

## Parameters and Dialog Box

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

# Data Type Conversion

---

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off



Locks the output data type setting for this block.



Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

## **Input and output to have equal**

Specify which type of input and output should be equal, in the context of fixed point data representation.

### **Settings**

**Default:** Real World Value (RWV)

Real World Value (RWV)

Specifies the goal of making the Real World Value (RWV) of the input equal to the Real World Value (RWV) of the output.

Stored Integer (SI)

Specifies the goal of making the Stored Integer (SI) value of the input equal to the Stored Integer (SI) value of the output.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Data Type Conversion

---

## Integer rounding mode

Specify the rounding mode for fixed-point operations.

### Settings

**Default:** Floor

#### Ceiling

Rounds both positive and negative numbers toward positive infinity. Equivalent to the MATLAB `ceil` function.

#### Convergent

Rounds number to the nearest representable value. If a tie occurs, rounds to the nearest even integer. Equivalent to the Fixed-Point Designer `convergent` function.

#### Floor

Rounds both positive and negative numbers toward negative infinity. Equivalent to the MATLAB `floor` function.

#### Nearest

Rounds number to the nearest representable value. If a tie occurs, rounds toward positive infinity. Equivalent to the Fixed-Point Designer `nearest` function.

#### Round

Rounds number to the nearest representable value. If a tie occurs, rounds positive numbers toward positive infinity and rounds negative numbers toward negative infinity. Equivalent to the Fixed-Point Designer `round` function.

#### Simplest

Automatically chooses between round toward floor and round toward zero to generate rounding code that is as efficient as possible.

#### Zero

Rounds number toward zero. Equivalent to the MATLAB `fix` function.

## Command-Line Information

**Parameter:** RndMeth

**Type:** string

**Value:** 'Ceiling' | 'Convergent' | 'Floor' | 'Nearest' |  
'Round' | 'Simplest' | 'Zero'

**Default:** 'Floor'

## See Also

For more information, see “Rounding” in the Fixed-Point Designer documentation.

# Data Type Conversion

---

## Saturate on integer overflow

Specify whether overflows saturate.

### Settings

**Default:** Off



On

Overflows saturate to either the minimum or maximum value that the data type can represent.

For example, an overflow associated with a signed 8-bit integer can saturate to -128 or 127.



Off

Overflows wrap to the appropriate value that is representable by the data type.

For example, the number 130 does not fit in a signed 8-bit integer and wraps to -126.

### Tips

- Consider selecting this check box when your model has possible overflow and you want explicit saturation protection in the generated code.
- Consider clearing this check box when you want to optimize efficiency of your generated code.

Clearing this check box also helps you avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.

- When you select this check box, saturation applies to every internal operation on the block, not just the output or result.
- In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Command-Line Information

**Parameter:** SaturateOnIntegerOverflow

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Data Type Conversion

---

## **Sample time (-1 for inherited)**

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### **Settings**

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Output minimum

Lower value of the output range that Simulink checks.

### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the minimum to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output minimum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

## Command-Line Information

**Parameter:** OutMin

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

# Data Type Conversion

---

## Output maximum

Upper value of the output range that Simulink checks.

### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the maximum value to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output maximum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

### Command-Line Information

**Parameter:** OutMax

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

## Output data type

Specify the output data type.

## Settings

**Default:** Inherit: Inherit via back propagation

**Inherit:** Inherit via back propagation  
Use data type of the driving block.

**double**

Output data type is double.

**single**

Output data type is single.

**int8**

Output data type is int8.

**uint8**

Output data type is uint8.

**int16**

Output data type is int16.

**uint16**

Output data type is uint16.

**int32**

Output data type is int32.

**uint32**

Output data type is uint32.

**boolean**

Output data type is boolean. The Data Type Conversion block converts real, nonzero numeric values (including NaN and Inf) to boolean true (1).

**fixdt(1,16,0)**

Output data type is fixed point fixdt(1,16,0).

**fixdt(1,16,2<sup>0</sup>,0)**

Output data type is fixed point fixdt(1,16,2<sup>0</sup>,0).

# Data Type Conversion

---

Enum: <class name>

Use an enumerated data type, for example, Enum: BasicColors.

<data type expression>

Use a data type object, for example, Simulink.NumericType.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

For more information, see “Specify Block Output Data Types”.

## Mode

Select the category of data to specify.

### Settings

**Default:** Inherit

#### Inherit

Inheritance rules for data types. Selecting **Inherit** enables **Inherit via back propagation**.

#### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32
- boolean

#### Fixed point

Fixed-point data types.

#### Enumerated

Enumerated data types. Selecting **Enumerated** enables a second menu/text box to the right, where you can enter the class name.

#### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

# Data Type Conversion

---

## **Dependency**

Clicking the **Show data type assistant** button enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is `Built in` or `Fixed point`.

# Data Type Conversion

---

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > Fixed point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Data Type Conversion

---

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

## Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

## Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

## See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Data Type Conversion

---

## Slope

Specify slope for the fixed-point data type.

### Settings

**Default:**  $2^0$

Specify any positive real number.

### Dependencies

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## Bias

Specify bias for the fixed-point data type.

### Settings

**Default:** 0

Specify any real number.

### Dependencies

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### See Also


For more information, see “Specifying a Fixed-Point Data Type”.

## Examples

### Real World Values Versus Stored Integers

The following model uses the Data Type Conversion block to explain the difference between a real-world value and a stored integer. Consider these two fixed-point block diagrams:

# Data Type Conversion

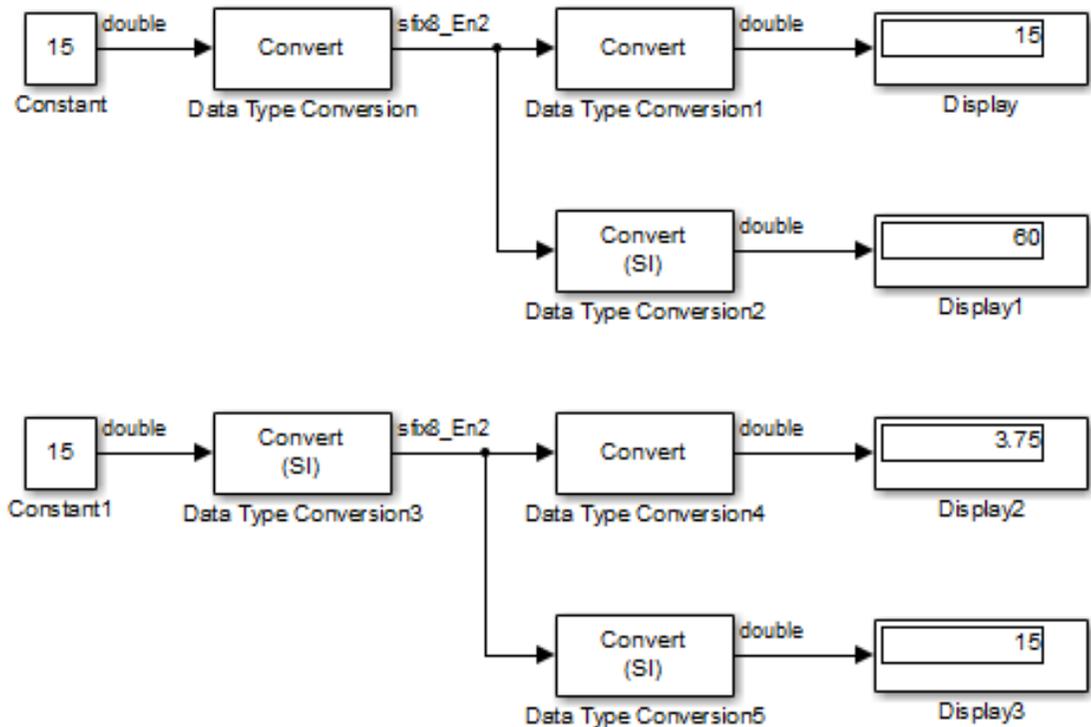

In the top block diagram, the Data Type Conversion block treats the input as a real-world value, and maps that value to an 8-bit signed generalized fixed-point data type with a scaling of  $2^{-2}$  (i.e., binary point scaling with slope =  $2^{-2}$  and bias = 0). When the value is then output from the Data Type Conversion1 block as a real-world value, the scaling and data type information is retained and the output value is 001111.00, or 15. When the value is output from the Data Type Conversion2 block as a stored integer, the scaling and data type information is not retained and the stored integer is interpreted as 00111100, or 60.


In the bottom block diagram, the Data Type Conversion3 block treats the input as a stored integer, and the data type and scaling information

# Data Type Conversion

is not applied. When the value is then output from the Data Type Conversion4 block as a real-world value, the scaling and data type information is applied to the stored integer (Slope =  $2^{-2}$  and Bias = 0), and the output value is 000011.11, or 3.75. When the value is output from the Data Type Conversion5 block as a stored integer, you get back the original input value of 15.

## Real World Values and Stored Integers in Summations

The following model shows how a summation operation applies to real-world values and stored integers, and how the generated code handles scaling information.

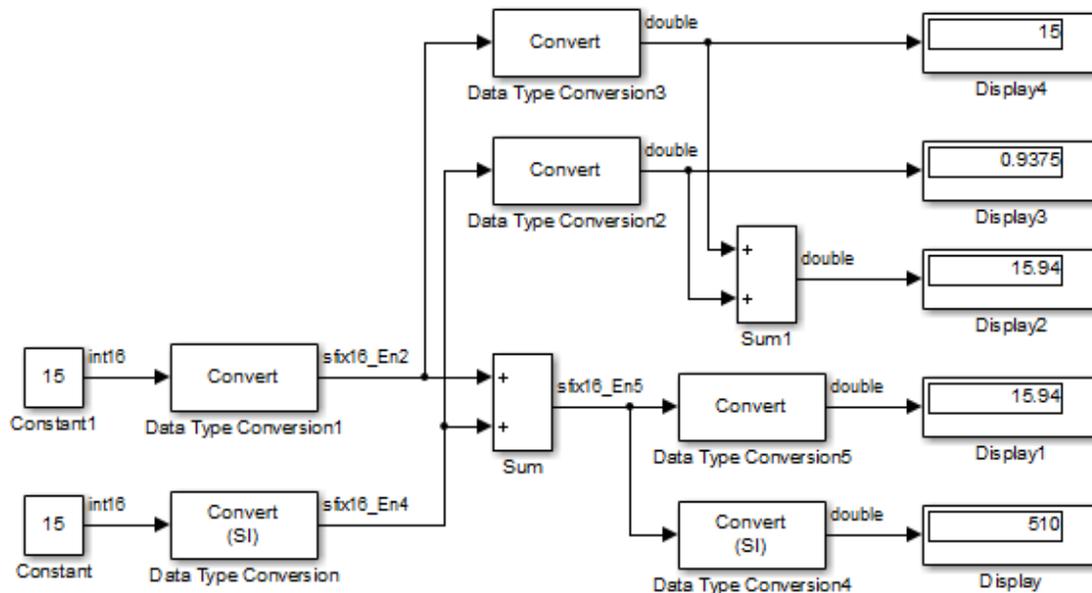

Note that the summation operation produces the correct result when the Data Type Conversion (2 or 5) block outputs a real-world value. This is because the specified scaling information is applied to the stored integer value. However, when the Data Type Conversion4 block outputs

a stored integer value, then the summation operation produces an unexpected result due to the absence of scaling information.

If you generate code for the above model, then the code captures the appropriate scaling information. The code for the Sum block is shown below. The inputs to this block are tagged with the specified scaling information so that the necessary shifts are performed for the summation operation.

```
/* Sum Block: <Root>/Sum
 *
 * y = u0 + u1
 *
 * Input0 Data Type: Fixed Point S16 2^-2
 * Input1 Data Type: Fixed Point S16 2^-4
 * Output0 Data Type: Fixed Point S16 2^-5
 *
 * Round Mode: Floor
 * Saturation Mode: Wrap
 *
 */
sum = ((in1) << 3);
sum += ((in2) << 1);
```

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block
Scalar Expansion	N/A
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Data Type Conversion Inherited

# Data Type Conversion Inherited

---

**Purpose** Convert from one data type to another using inherited data type and scaling

**Library** Signal Attributes

## Description



The Data Type Conversion Inherited block forces dissimilar data types to be the same. The first input is used as the reference signal and the second input is converted to the reference type by inheriting the data type and scaling information. (See “How to Rotate a Block” in the Simulink documentation for a description of the port order for various block orientations.) Either input undergoes scalar expansion such that the output has the same width as the widest input.

Inheriting the data type and scaling provides these advantages:

- It makes reusing existing models easier.
- It allows you to create new fixed-point models with less effort since you can avoid the detail of specifying the associated parameters.


## Data Type Support

The Data Type Conversion Inherited block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

# Data Type Conversion Inherited

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

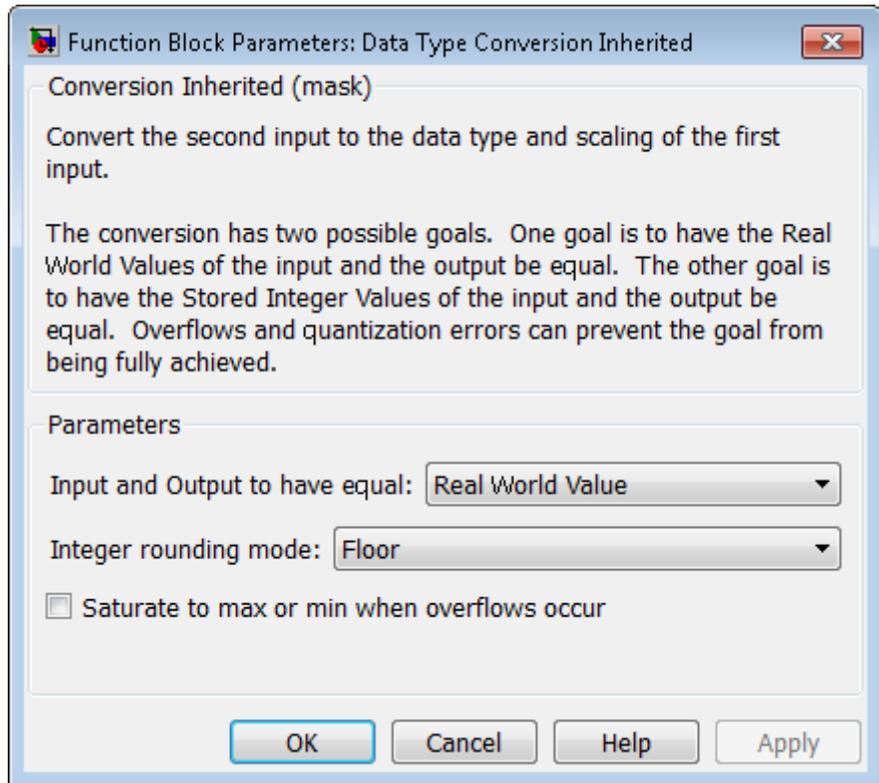

## Parameters and Dialog Box

### Input and Output to have equal

Specify whether the Real World Value (RWV) or the Stored Integer (SI) of the input and output should be the same. Refer to Description in the Data Type Conversion block reference page for more information about these choices.

# Data Type Conversion Inherited

---

## **Integer rounding mode**

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## **Saturate to max or min when overflows occur**

Select to have overflows saturate to the maximum or minimum value that the data type can represent. Otherwise, overflows wrap.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## **Characteristics**

Direct Feedthrough	Yes
--------------------	-----

## **See Also**

Data Type Conversion

**Purpose** Force all inputs to same data type

**Library** Signal Attributes

## Description



The Data Type Duplicate block forces all inputs to have exactly the same data type. Other attributes of input signals, such as dimension, complexity, and sample time, are completely independent.

You can use the Data Type Duplicate block to check for consistency of data types among blocks. If all signals do not have the same data type, the block returns an error message.

The Data Type Duplicate block is typically used such that one signal to the block controls the data type for all other blocks. The other blocks are set to inherit their data types via back propagation.

The block is also used in a user created library. These library blocks can be placed in any model, and the data type for all library blocks are configured according to the usage in the model. To create a library block with more complex data type rules than duplication, use the Data Type Propagation block.


## Data Type Support

The Data Type Duplicate block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Data Type Duplicate

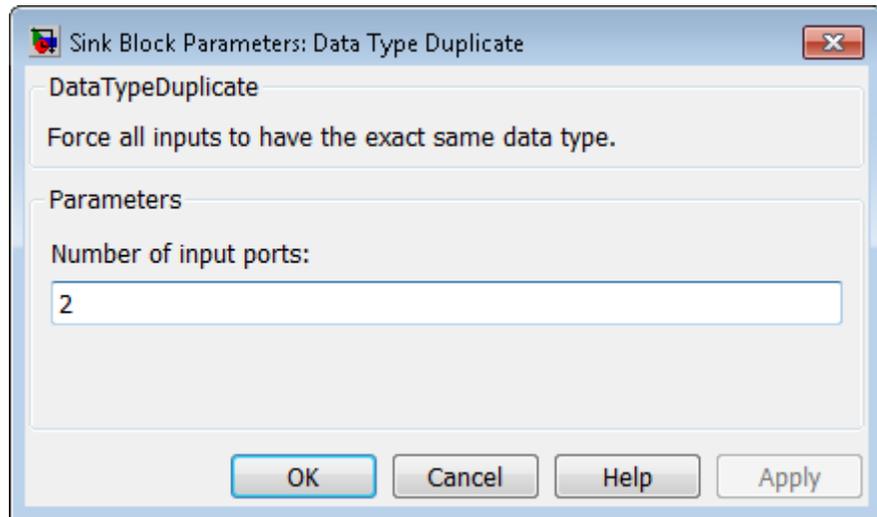

## Parameters and Dialog Box

**Number of input ports**  
Specify the number of inputs to this block.

## Characteristics

Sample Time	Inherited from the driving block
Scalar Expansion	Yes
States	0
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Data Type Propagation

**Purpose** Set data type and scaling of propagated signal based on information from reference signals

**Library** Signal Attributes

## Description



The Data Type Propagation block allows you to control the data type and scaling of signals in your model. You can use this block in conjunction with fixed-point blocks that have their **Output data type** parameter configured to **Inherit: Inherit via back propagation**.

The block has three inputs: Ref1 and Ref2 are the reference inputs, while the Prop input back propagates the data type and scaling information gathered from the reference inputs. This information is then passed on to other fixed-point blocks.

The block provides you with many choices for propagating data type and scaling information. For example, you can:

- Use the number of bits from the Ref1 reference signal, or use the number of bits from widest reference signal.
- Use the range from the Ref2 reference signal, or use the range of the reference signal with the greatest range.
- Use a bias of zero, regardless of the biases used by the reference signals.
- Use the precision of the reference signal with the least precision.

You specify how data type information is propagated with the **Propagated data type** parameter list. If the parameter list is configured as **Specify via dialog**, then you manually specify the data type via the **Propagated data type** edit field. If the parameter list is configured as **Inherit via propagation rule**, then you must use the parameters described in “Parameters and Dialog Box” on page 1-284.

You specify how scaling information is propagated with the **Propagated scaling** parameter list. If the parameter list is configured as **Specify via dialog**, then you manually specify the scaling via the **Propagated scaling** edit field. If the parameter list is configured as **Inherit via**

# Data Type Propagation

---

propagation rule, then you must use the parameters described in “Parameters and Dialog Box” on page 1-284.

After you use the information from the reference signals, you can apply a second level of adjustments to the data type and scaling by using individual multiplicative and additive adjustments. This flexibility has a variety of uses. For example, if you are targeting a DSP, then you can configure the block so that the number of bits associated with a MAC (multiply and accumulate) operation is twice as wide as the input signal, and has a certain number of guard bits added to it.

The Data Type Propagation block also provides a mechanism to force the computed number of bits to a useful value. For example, if you are targeting a 16-bit micro, then the target C compiler is likely to support sizes of only 8 bits, 16 bits, and 32 bits. The block will force these three choices to be used. For example, suppose the block computes a data type size of 24 bits. Since 24 bits is not directly usable by the target chip, the signal is forced up to 32 bits, which is natively supported.

There is also a method for dealing with floating-point reference signals. This makes it easier to create designs that are easily retargeted from fixed-point chips to floating-point chips or vice versa.

The Data Type Propagation block allows you to set up libraries of useful subsystems that will be properly configured based on the connected signals. Without this data type propagation process, a subsystem that you use from a library will almost certainly not work as desired with most integer or fixed-point signals, and manual intervention to configure the data type and scaling would be required. This block can eliminate the manual intervention in many situations.

## Precedence Rules

The precedence of the dialog box parameters decreases from top to bottom. Additionally:

- Double-precision reference inputs have precedence over all other data types.

- Single-precision reference inputs have precedence over integer and fixed-point data types.
- Multiplicative adjustments are carried out before additive adjustments.
- The number of bits is determined before the precision or positive range is inherited from the reference inputs.

## Data Type Support

The Data Type Propagation block accepts signals of the following data types:


- Floating-point
- Built-in integer
- Fixed-point
- Boolean

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Data Type Propagation

## Parameters and Dialog Box

The **Propagated type** pane of the Data Type Propagation block dialog box appears as follows:

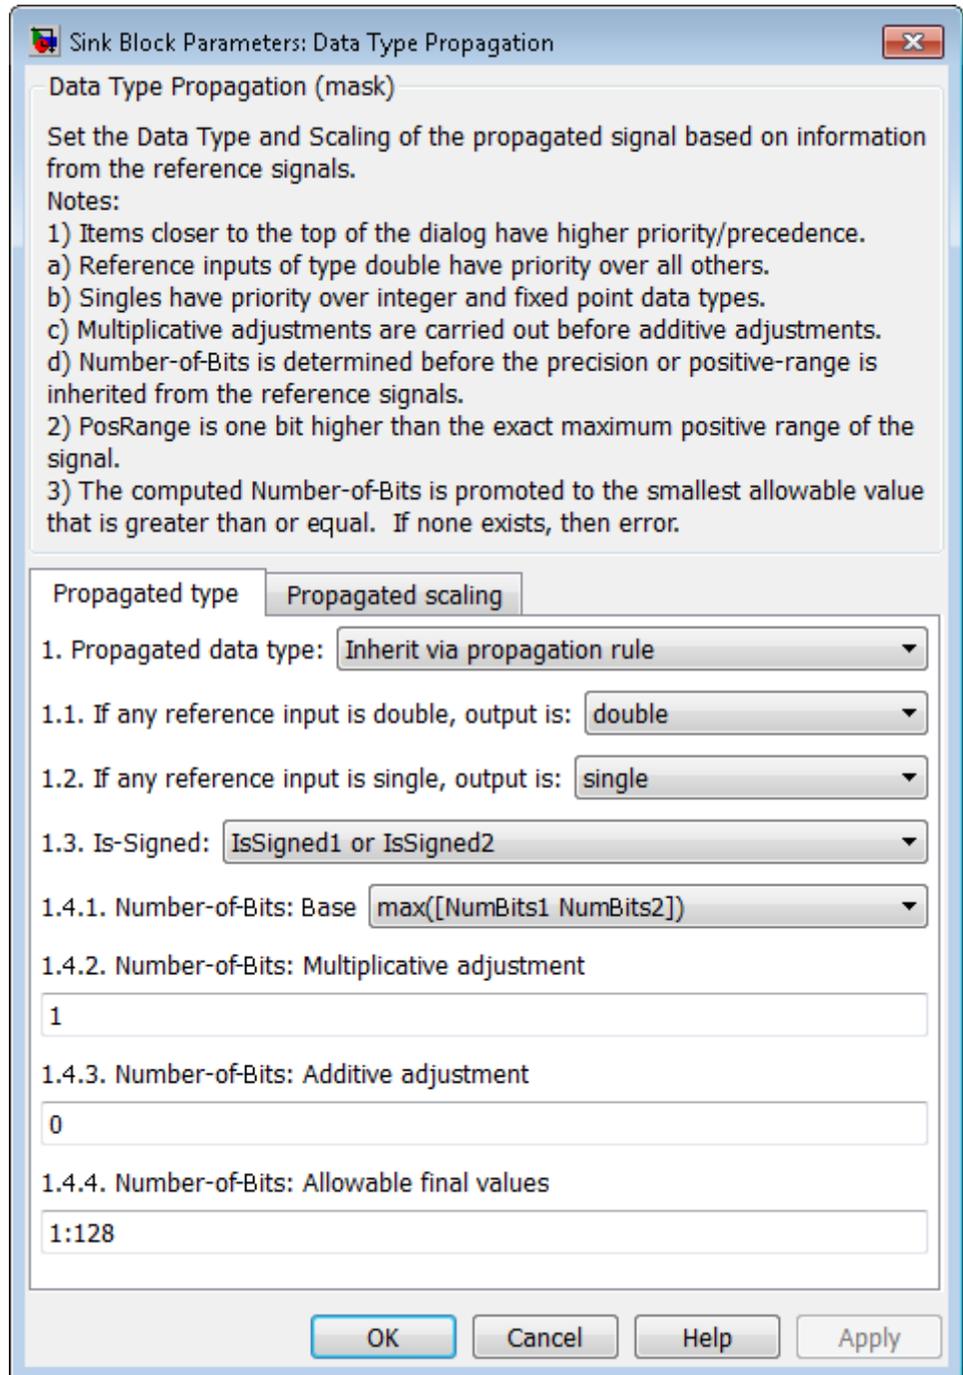

## If any reference input is double, output is

Specify single or double. This parameter makes it easier to create designs that are easily retargeted from fixed-point chips to floating-point chips or vice versa.

This parameter is visible only when you set **Propagated data type** to **Inherit** via propagation rule.

## If any reference input is single, output is

Specify single or double. This parameter makes it easier to create designs that are easily retargeted from fixed-point chips to floating-point chips or visa versa.

This parameter is visible only when you set **Propagated data type** to **Inherit** via propagation rule.

## Is-Signed

Specify the sign of Prop as one of the following values:

Parameter Value	Description
IsSigned1	Prop is a signed data type if Ref1 is a signed data type.
IsSigned2	Prop is a signed data type if Ref2 is a signed data type.
IsSigned1 or IsSigned2	Prop is a signed data type if either Ref1 or Ref2 are signed data types.
TRUE	Ref1 and Ref2 are ignored, and Prop is always a signed data type.
FALSE	Ref1 and Ref2 are ignored, and Prop is always an unsigned data type.

For example, if the Ref1 signal is `ufix(16)`, the Ref2 signal is `sfix(16)`, and the **Is-Signed** parameter is `IsSigned1` or `IsSigned2`, then Prop is forced to be a signed data type.

# Data Type Propagation

---

This parameter is visible only when you set **Propagated data type** to **Inherit** via propagation rule.

## Number-of-bits: Base

Specify the number of bits used by Prop for the base data type as one of the following values:

Parameter Value	Description
NumBits1	The number of bits for Prop is given by the number of bits for Ref1.
NumBits2	The number of bits for Prop is given by the number of bits for Ref2.
$\max(\text{NumBits1}, \text{NumBits2})$	The number of bits for Prop is given by the reference signal with largest number of bits.
$\min(\text{NumBits1}, \text{NumBits2})$	The number of bits for Prop is given by the reference signal with smallest number of bits.
$\text{NumBits1} + \text{NumBits2}$	The number of bits for Prop is given by the sum of the reference signal bits.

For more information about the base data type, refer to *Targeting an Embedded Processor in the Simulink Fixed Point™* documentation.

This parameter is visible only when you set **Propagated data type** to **Inherit** via propagation rule.

## Number-of-bits: Multiplicative adjustment

Specify the number of bits used by Prop by including a multiplicative adjustment that uses a data type of **double**. For example, suppose you want to guarantee that the number of bits associated with a multiply and accumulate (MAC) operation is twice as wide as the input signal. To do this, you configure this parameter to the value 2.

This parameter is visible only when you set **Propagated data type** to **Inherit** via propagation rule.

### **Number-of-bits: Additive adjustment**

Specify the number of bits used by Prop by including an additive adjustment that uses a data type of **double**. For example, if you are performing multiple additions during a MAC operation, the result might overflow. To prevent overflow, you can associate guard bits with the propagated data type. To associate four guard bits, you specify the value 4.

This parameter is visible only when you set **Propagated data type** to **Inherit** via propagation rule.


### **Number-of-bits: Allowable final values**

Force the computed number of bits used by Prop to a useful value. For example, if you are targeting a processor that supports only 8, 16, and 32 bits, then you configure this parameter to [8, 16, 32]. The block always propagates the smallest specified value that fits. If you want to allow all fixed-point data types, you would specify the value 1:128.

This parameter is visible only when you set **Propagated data type** to **Inherit** via propagation rule.

The **Propagated scaling** pane of the Data Type Propagation block dialog box appears as follows:

# Data Type Propagation

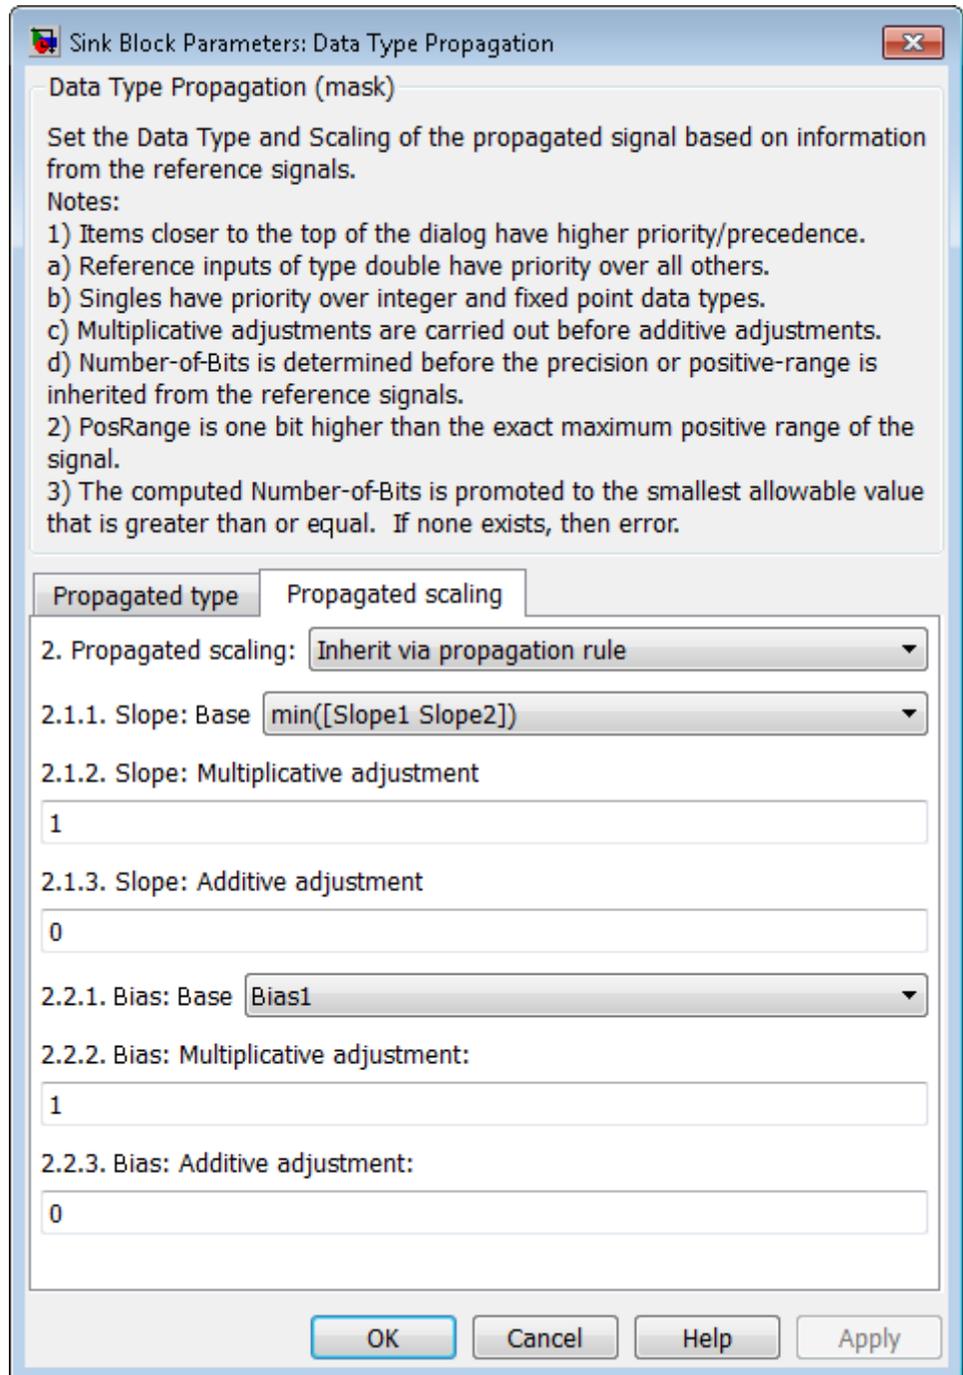

## Propagated scaling

Use the parameter list to propagate the scaling via the dialog box, inherit the scaling from the reference signals, or calculate the scaling to obtain best precision.

## Propagated scaling (Slope or [Slope Bias])

Specify the scaling as either a slope or a slope and bias.

This parameter is visible only when you set **Propagated scaling** to **Specify** via dialog.

## Values used to determine best precision scaling

Specify any values to be used to constrain the precision, such as the upper and lower limits on the propagated input. Based on the data type, the scaling will automatically be selected such that these values can be represented with no overflow error and minimum quantization error.

This parameter is visible only when you set **Propagated scaling** to **Obtain** via best precision.

## Slope: Base

Specify the slope used by Prop for the base data type as one of the following values:

Parameter Value	Description
Slope1	The slope of Prop is given by the slope of Ref1.
Slope2	The slope of Prop is given by the slope of Ref2.
max([Slope1 Slope2])	The slope of Prop is given by the maximum slope of the reference signals.
min([Slope1 Slope2])	The slope of Prop is given by the minimum slope of the reference signals.

# Data Type Propagation

---

Parameter Value	Description
$Slope1 * Slope2$	The slope of Prop is given by the product of the reference signal slopes.
$Slope1 / Slope2$	The slope of Prop is given by the ratio of the Ref1 slope to the Ref2 slope.
PosRange1	The range of Prop is given by the range of Ref1.
PosRange2	The range of Prop is given by the range of Ref2.
$\max([PosRange1, PosRange2])$	The range of Prop is given by the maximum range of the reference signals.
$\min([PosRange1, PosRange2])$	The range of Prop is given by the minimum range of the reference signals.
$PosRange1 * PosRange2$	The range of Prop is given by the product of the reference signal ranges.
$PosRange1 / PosRange2$	The range of Prop is given by the ratio of the Ref1 range to the Ref2 range.

You control the precision of Prop with Slope1 and Slope2, and you control the range of Prop with PosRange1 and PosRange2. Additionally, PosRange1 and PosRange2 are one bit higher than the maximum positive range of the associated reference signal.

This parameter is visible only when you set **Propagated scaling** to Inherit via propagation rule.

## **Slope: Multiplicative adjustment**

Specify the slope used by Prop by including a multiplicative adjustment that uses a data type of double. For example, if you want 3 bits of additional precision (with a corresponding decrease in range), the multiplicative adjustment is  $2^{-3}$ .

This parameter is visible only when you set **Propagated scaling** to **Inherit** via propagation rule.

### **Slope: Additive adjustment**

Specify the slope used by Prop by including an additive adjustment that uses a data type of **double**. An additive slope adjustment is often not needed. The most likely use is to set the multiplicative adjustment to 0, and set the additive adjustment to force the final slope to a specified value.

This parameter is visible only when you set **Propagated scaling** to **Inherit** via propagation rule.

### **Bias: Base**

Specify the bias used by Prop for the base data type. The parameter values are described as follows:

<b>Parameter Value</b>	<b>Description</b>
Bias1	The bias of Prop is given by the bias of Ref1.
Bias2	The bias of Prop is given by the bias of Ref2.
max([Bias1 Bias2])	The bias of Prop is given by the maximum bias of the reference signals.
min([Bias1 Bias2])	The bias of Prop is given by the minimum bias of the reference signals.
Bias1*Bias2	The bias of Prop is given by the product of the reference signal biases.
Bias1/Bias2	The bias of Prop is given by the ratio of the Ref1 bias to the Ref2 bias.
Bias1+Bias2	The bias of Prop is given by the sum of the reference biases.
Bias1-Bias2	The bias of Prop is given by the difference of the reference biases.

# Data Type Propagation

---

This parameter is visible only when you set **Propagated scaling** to **Inherit** via propagation rule.

**Bias: Multiplicative adjustment**

Specify the bias used by Prop by including a multiplicative adjustment that uses a data type of double.

This parameter is visible only when you set **Propagated scaling** to **Inherit** via propagation rule.

**Bias: Additive adjustment**

Specify the bias used by Prop by including an additive adjustment that uses a data type of double.

If you want to guarantee that the bias associated with Prop is zero, you should configure both the multiplicative adjustment and the additive adjustment to 0.

This parameter is visible only when you set **Propagated scaling** to **Inherit** via propagation rule.

**Characteristics**

Direct Feedthrough	Yes
Scalar Expansion	Yes
Zero-Crossing Detection	No

**See Also**

Data Type Duplicate

**Purpose** Remove scaling and map to built in integer

**Library** Signal Attributes

## Description




The Scaling Strip block strips the scaling off a fixed point signal. It maps the input data type to the smallest built in data type that has enough data bits to hold the input. The stored integer value of the input is the value of the output. The output always has nominal scaling (slope = 1.0 and bias = 0.0), so the output does not make a distinction between real world value and stored integer value.

## Data Type Support

The Data Type Scaling Strip block accepts signals of any numeric data type that Simulink supports, including fixed-point data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Data Type Scaling Strip

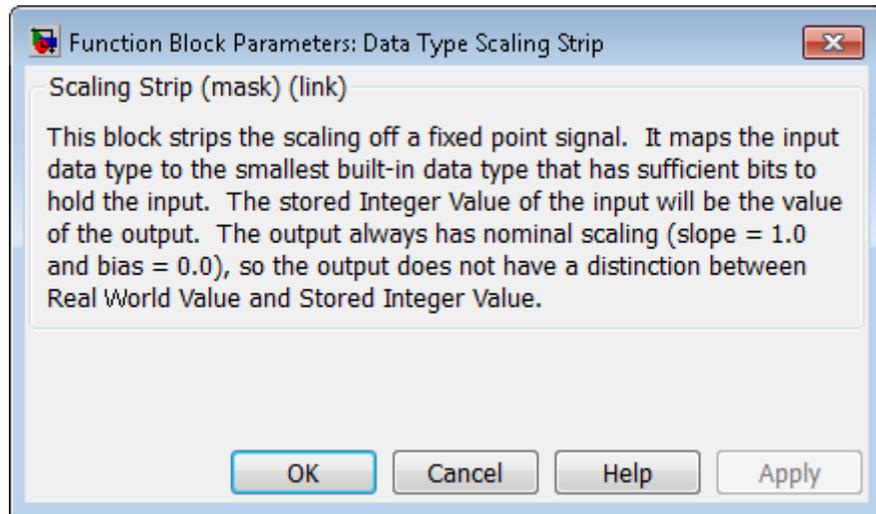

## Parameters and Dialog Box

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Provide region of zero output

**Library** Discontinuities

## Description



The Dead Zone block generates zero output within a specified region, called its dead zone. You specify the lower limit (LL) and upper limit (UL) of the dead zone as the **Start of dead zone** and **End of dead zone** parameters, respectively. The block output depends on the input (U) and the values for the lower and upper limits:

Input	Output
$U \geq LL$ and $U \leq UL$	Zero
$U > UL$	$U - UL$
$U < LL$	$U - LL$


## Data Type Support

The Dead Zone block accepts and outputs real signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Dead Zone

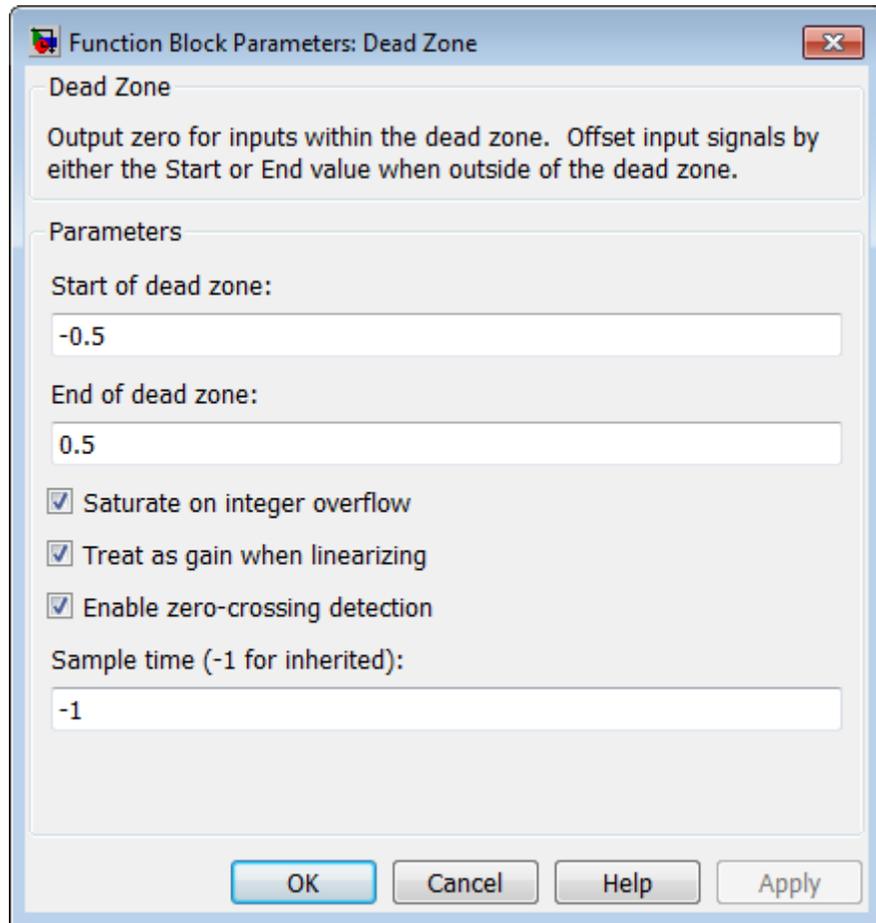

## Parameters and Dialog Box

### Start of dead zone

Specify the lower limit of the dead zone. The default is -0.5.

### End of dead zone

Specify the upper limit of the dead zone. The default is 0.5.

## Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box selected, the block output saturates at 127. Similarly, the block output saturates at a minimum output value of -128.
Do not select this check box.	<p>You want to optimize efficiency of your generated code.</p> <p>You want to avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.</p>	Overflows wrap to the appropriate value that is representable by the data type.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value as <code>int8</code> , which can produce an unintended result. For example, a block result of 130 (binary 1000 0010)

# Dead Zone

Action	Reasons for Taking This Action	What Happens for Overflows	Example
			expressed as int8, is -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

### **Treat as gain when linearizing**

The linearization commands in Simulink software treat this block as a gain in state space. Select this check box to cause the commands to treat the gain as 1; otherwise, the commands treat the gain as 0.

### **Enable zero-crossing detection**


Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

### **Sample time (-1 for inherited)**


Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See Specifying Sample Time in the Simulink documentation.

## Examples

The following model uses lower and upper limits of -0.5 and 0.5, with a sine wave as input.

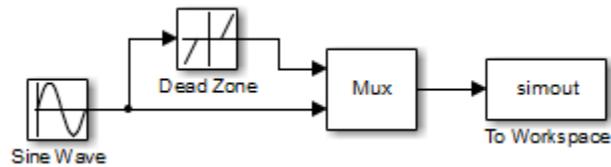

This plot shows the effect of the Dead Zone block on the sine wave. When the input sine wave is between  $-0.5$  and  $0.5$ , the output is zero.

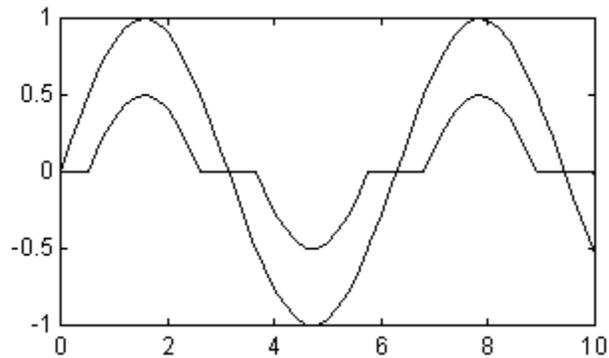

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of parameters
Dimensionalized	Yes
Zero-Crossing Detection	Yes, if enabled

## See Also

Dead Zone Dynamic

# Dead Zone Dynamic

---

**Purpose** Set inputs within bounds to zero

**Library** Discontinuities

## Description



The Dead Zone Dynamic block dynamically bounds the range of the input signal, providing a region of zero output. The bounds change according to the upper and lower limit input signals where

- The input within the bounds is set to zero.
- The input below the lower limit is shifted down by the lower limit.
- The input above the upper limit is shifted down by the upper limit.


The input for the upper limit is the up port, and the input for the lower limit is the lo port.

## Data Type Support

The Dead Zone Dynamic block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

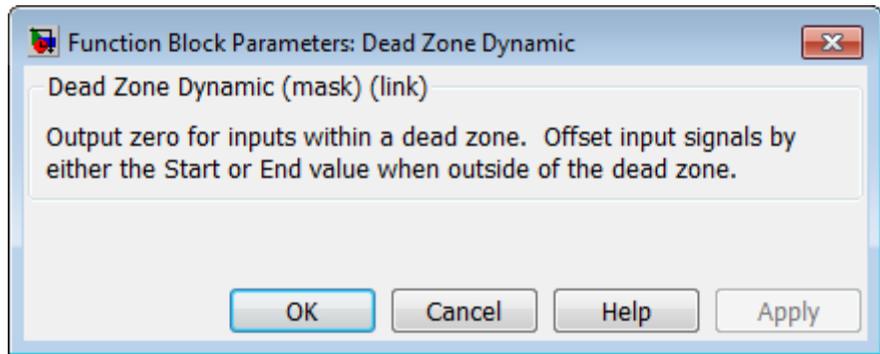

## Parameters and Dialog Box

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes

## See Also

Dead Zone

# Decrement Real World

---

## Purpose

Decrease real world value of signal by one

## Library

Additional Math & Discrete / Additional Math: Increment - Decrement

## Description

The Decrement Real World block decreases the real world value of the signal by one. Overflows always wrap.




## Data Type Support

The Decrement Real World block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

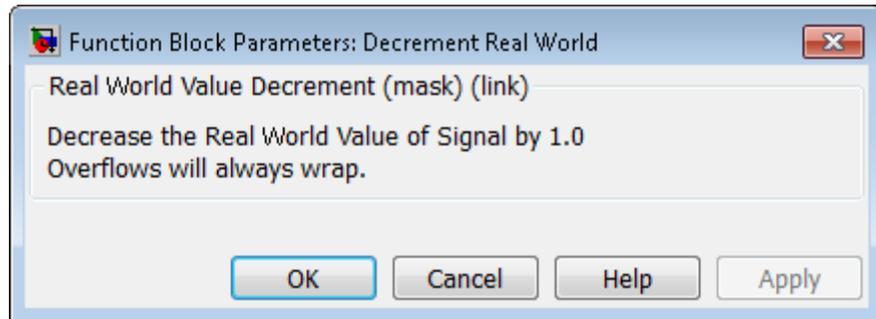

<b>Characteristics</b>	Direct Feedthrough	Yes
	Scalar Expansion	No
	Multidimensionalized	No
	Zero-Crossing Detection	No

**See Also** Decrement Stored Integer, Decrement Time To Zero, Decrement To Zero, Increment Real World

# Decrement Stored Integer

---

## Purpose

Decrease stored integer value of signal by one

## Library

Additional Math & Discrete / Additional Math: Increment - Decrement

## Description

The Decrement Stored Integer block decreases the stored integer value of a signal by one.



Floating-point signals also decrease by one, and overflows always wrap.


## Data Type Support

The Decrement Stored Integer block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

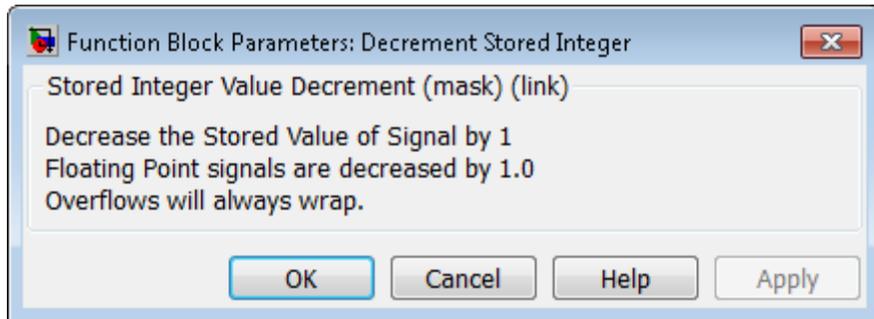

# Decrement Stored Integer

---

<b>Characteristics</b>	Direct Feedthrough	Yes
	Scalar Expansion	No
	Multidimensionalized	No
	Zero-Crossing Detection	No

## **See Also**

Decrement Real World, Decrement Time To Zero, Decrement To Zero, Increment Stored Integer


# Decrement Time To Zero

---

**Purpose** Decrease real-world value of signal by sample time, but only to zero

**Library** Additional Math & Discrete / Additional Math: Increment - Decrement

## Description

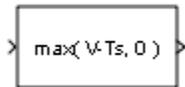


The Decrement Time To Zero block decreases the real-world value of the signal by the sample time,  $T_s$ . The output never goes below zero. This block works only with fixed sample rates and does not work inside a triggered subsystem.

## Data Type Support

The Decrement Time To Zero block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

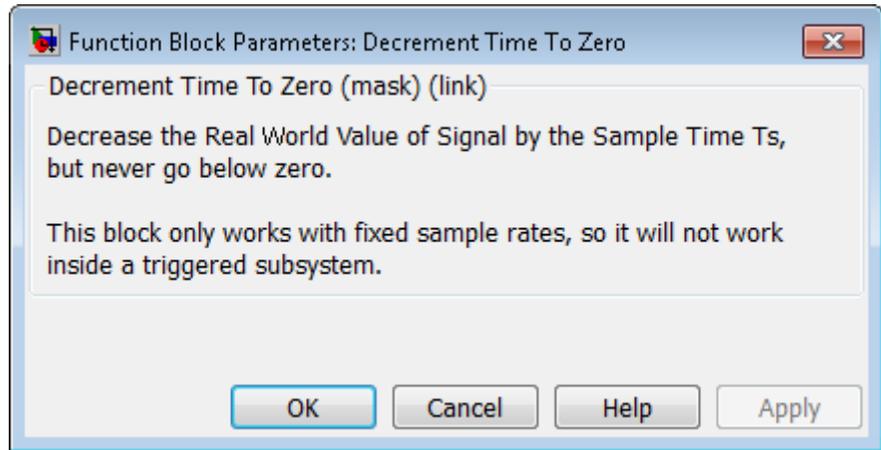

## Parameters and Dialog Box

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	No
Multidimensionalized	No
Zero-Crossing Detection	No

## See Also

Decrement Real World, Decrement Stored Integer, Decrement To Zero


# Decrement To Zero

---

**Purpose** Decrease real-world value of signal by one, but only to zero

**Library** Additional Math & Discrete / Additional Math: Increment - Decrement

## Description

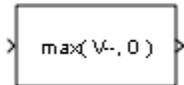


The Decrement To Zero block decreases the real-world value of the signal by one. The output never goes below zero.

## Data Type Support

The Decrement To Zero block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

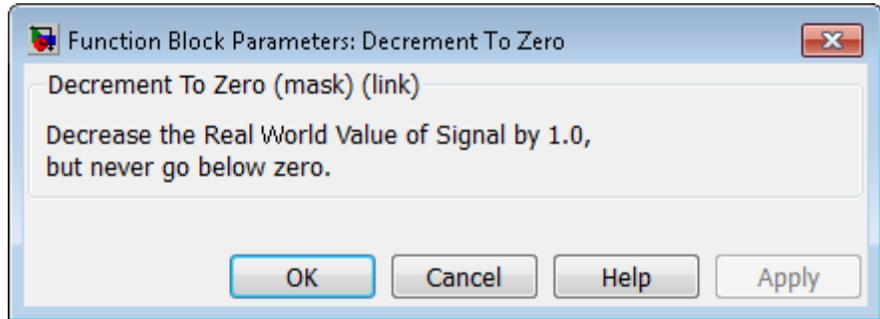

## Parameters and Dialog Box

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	No
Multidimensionalized	No
Zero-Crossing Detection	No

## See Also

Decrement Real World, Decrement Stored Integer, Decrement Time To Zero

# Delay

---

**Purpose** Delay input signal by fixed or variable sample periods

**Library** Discrete

**Description** **Supported Block Operations**



The Delay block supports:

- Variable delay length
- Specification of the initial condition from an input port
- Resetting the state to the initial condition with an external reset signal
- State storage
- Using a circular buffer instead of an array buffer for state storage





The Delay block delays an input  $u$  according to the **Delay length** parameter, which you specify on the dialog box, or a delay length that a signal supplies to the  $d$  input port. The initial block output depends on the **Initial condition** parameter, which you specify on the dialog box, or an initial condition that a signal supplies to the  $x0$  input port. Whether or not the block output resets to the initial condition depends on the **External reset** parameter, which you specify on the dialog box.

The following dimensional requirements apply:

- **Delay length** and **External reset** must be scalar.
- **Initial condition** can be scalar or nonscalar.
- For frame-based processing, signal dimensions of the data input port  $u$  cannot be larger than two.

## Block Icon Appearance

The icon changes depending on the number of block inputs.

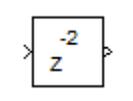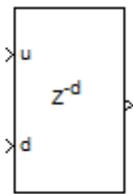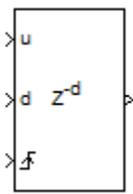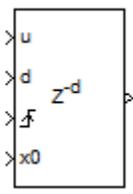Icon	Number of Inputs
	One: <ul style="list-style-type: none"> <li>• Input signal to delay, <math>u</math></li> </ul>
	Two: <ul style="list-style-type: none"> <li>• Input signal to delay, <math>u</math></li> <li>• Delay length, <math>d</math></li> </ul>
	Three: <ul style="list-style-type: none"> <li>• Input signal to delay, <math>u</math></li> <li>• Delay length, <math>d</math></li> <li>• External reset</li> </ul>
	Four: <ul style="list-style-type: none"> <li>• Input signal to delay, <math>u</math></li> <li>• Delay length, <math>d</math></li> <li>• External reset</li> <li>• Initial condition, <math>x_0</math></li> </ul>

## Data Type Support

The block supports input signals of the following data types:

Input Signal	Supported Data Types
u	<ul style="list-style-type: none"><li>• Floating point</li><li>• Built-in integer</li><li>• Fixed point</li><li>• Boolean</li><li>• Enumerated</li></ul>
d	<ul style="list-style-type: none"><li>• Floating point</li><li>• Fixed-point integer</li><li>• Built-in integer</li></ul>
x0	<ul style="list-style-type: none"><li>• Floating point</li><li>• Built-in integer</li><li>• Fixed point</li><li>• Boolean</li><li>• Enumerated</li></ul>

When u is Boolean, x0 must be Boolean. When u uses an enumerated type, x0 must use the same enumerated type. Otherwise, x0 can use a floating-point, built-in integer, or fixed-point data type that fits in the data type of u. For example, when u uses int32, x0 can use int8 but not double.

The data type of the output signal is the same as the input signal u.

When you specify **Delay length** and **Initial condition** on the dialog box, you can use the following data types for those parameters:


<b>Parameter</b>	<b>Supported Data Types</b>
<b>Delay length</b>	<ul style="list-style-type: none"><li>• Floating point</li><li>• Fixed-point integer</li><li>• Built-in integer</li></ul>
<b>Initial condition</b>	<ul style="list-style-type: none"><li>• Floating point</li><li>• Built-in integer</li><li>• Fixed point</li><li>• Boolean</li><li>• Enumerated</li></ul>

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Delay

## Parameters and Dialog Box

The **Main** pane of the Delay block dialog box appears as follows:

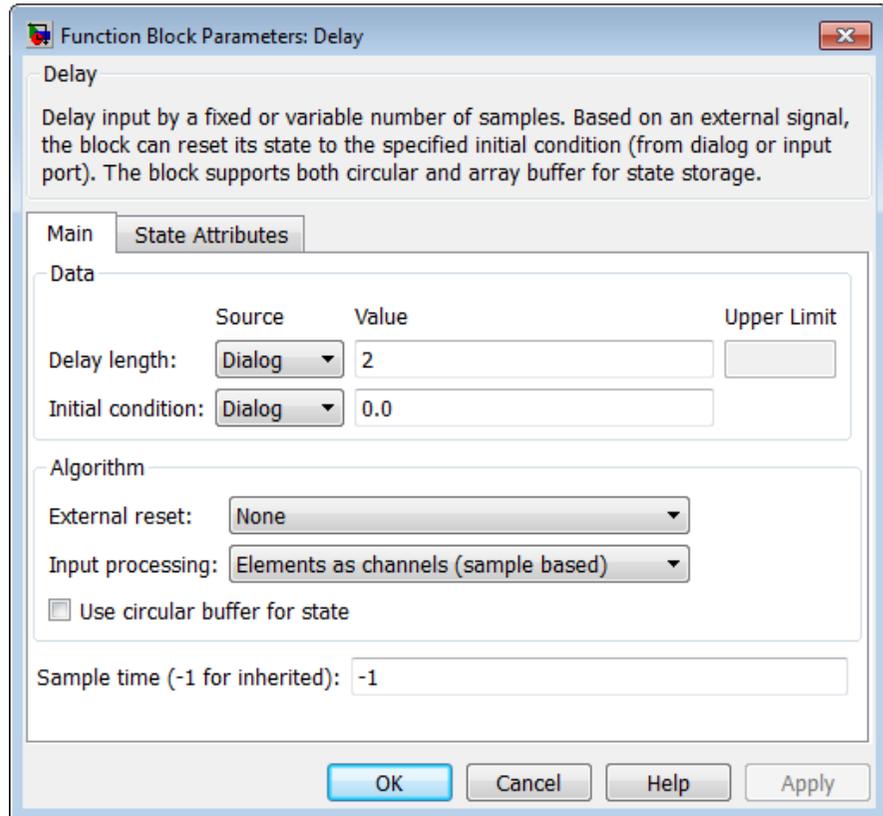

### Delay length

Specify whether to enter the delay length directly on the dialog box (fixed delay) or to inherit the delay from an input port (variable delay).

- If you set **Source** to Dialog, enter the delay length in the edit field under **Value**.

- If you set **Source** to **Input port**, verify that an upstream signal supplies a delay length for the **d** input port. You can also specify its maximum value by specifying the parameter **Upper limit**.

Specify the scalar delay length as a real, positive integer. An out-of-range or non-integer value in the dialog box (fixed delay) returns an error. An out-of-range value from an input port (variable delay) casts it into the range. A non-integer value from an input port (variable delay) truncates it to the integer.

### **Initial condition**

Specify whether to enter the initial condition directly on the dialog box or to inherit the initial condition from an input port.

- If you set **Source** to **Dialog**, enter the initial condition in the edit field under **Value**.
- If you set **Source** to **Input port**, verify that an upstream signal supplies an initial condition for the **x0** input port.

Simulink converts offline the data type of **Initial condition** to the data type of the input signal **u** using a round-to-nearest operation and saturation.

---

**Note** When **State name must resolve to Simulink signal object** is selected on the **State Attributes** pane, the block copies the initial value of the signal object to the **Initial condition** parameter. However, when the source for **Initial condition** is **Input port**, the block ignores the initial value of the signal object.

---

### **External reset**

Specify the trigger event to use to reset the states to the initial conditions.

<b>Reset Mode</b>	<b>Behavior</b>
None	No reset.
Rising	Reset on a rising edge.
Falling	Reset on a falling edge.
Either	Reset on either a rising or falling edge.
Level	Reset in either of these cases: <ul style="list-style-type: none"><li>• when there is a nonzero at the current time step</li><li>• when the time step value changes from nonzero at the previous time step to zero at the current time step</li></ul>
Level hold	Reset when nonzero at the current time step.

The reset signal must be a scalar of type `single`, `double`, `boolean`, or `integer`. Fixed point data types, except for `ufix1`, are not supported.

### **Input processing**

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- **Elements as channels (sample based)** — Treat each element of the input as a separate channel (sample-based processing).
- **Columns as channels (frame based)** — Treat each column of the input as a separate channel (frame-based processing).

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

Input Signal <i>u</i>	Input Processing Mode	Block Works?
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

## **Use circular buffer for state**

Select to use a circular buffer for storing the state in simulation and code generation. Otherwise, an array buffer stores the state.

Using a circular buffer can improve execution speed when the delay length is large. For an array buffer, the number of copy operations increases as the delay length goes up. For a circular buffer, the number of copy operations is constant for increasing delay length.

If one of the following conditions is true, an array buffer always stores the state because a circular buffer does not improve execution speed:

- For sample-based signals, the delay length is 1.
- For frame-based signals, the delay length is no larger than the frame size.

## **Prevent direct feedthrough by increasing delay length to lower limit**

Select to increase the delay length from zero to the lower limit for the **Input processing** mode:

- For sample-based signals, increase the minimum delay length to 1.
- For frame-based signals, increase the minimum delay length to the frame length.

Selecting this check box prevents direct feedthrough from the input port, *u*, to the output port. However, this check box cannot prevent direct feedthrough from the initial condition port, *x0*, to the output port.

This check box is available when you set **Delay length: Source** to Input port.

### Remove protection against out-of-range delay length in generated code

Select to remove code that checks for out-of-range delay length.

Check Box	Result	When to Use
Selected	Generated code does not include conditional statements to check for out-of-range delay length.	For code efficiency
Cleared	Generated code includes conditional statements to check for out-of-range delay length.	For safety-critical applications

This check box is available when you set **Delay length: Source** to Input port.

### Diagnostic for out-of-range delay length

Specify whether to produce a warning or error when the input  $d$  is less than the lower limit or greater than the **Delay length: Upper limit**. The lower limit depends on the setting for **Prevent direct feedthrough by increasing delay length to lower limit**.

- If the check box is cleared, the lower limit is zero.
- If the check box is selected, the lower limit is 1 for sample-based signals and frame length for frame-based signals.

Options for the diagnostic include:

- None — No warning or error appears.

# Delay

---

- **Warning** — Display a warning in the MATLAB Command Window and continue the simulation.
- **Error** — Stop the simulation and display an error in the Diagnostic Viewer.

This parameter is available when you set **Delay length: Source** to **Input port**.

## Sample time (-1 for inherited)


Specify the time interval between samples. To inherit the sample time, set this parameter to -1. This block supports discrete sample time, but not continuous sample time.

As described in “Specify Sample Time”, you can specify a discrete sample time as [*Tsampling*, *Toffset*], where *Tsampling* is the sampling period and *Toffset* is the initial time offset. If *Tstart* is the simulation start time and *n* is the delay length, the Delay block output is as follows.

Simulation Time Range	Block Output
$(Tstart)$ to $(Tstart + Toffset)$	Zero
$(Tstart + Toffset)$ to $(Tstart + Toffset + n * Tsampling)$	Initial condition
After $(Tstart + Toffset + n * Tsampling)$	Input signal

If the Delay block inherits or specifies a nonzero value for *Toffset*, the Delay block outputs zero at *Tstart*. Otherwise, the Delay block outputs the initial condition at *Tstart*.

The **State Attributes** pane of the Delay block dialog box appears as follows:

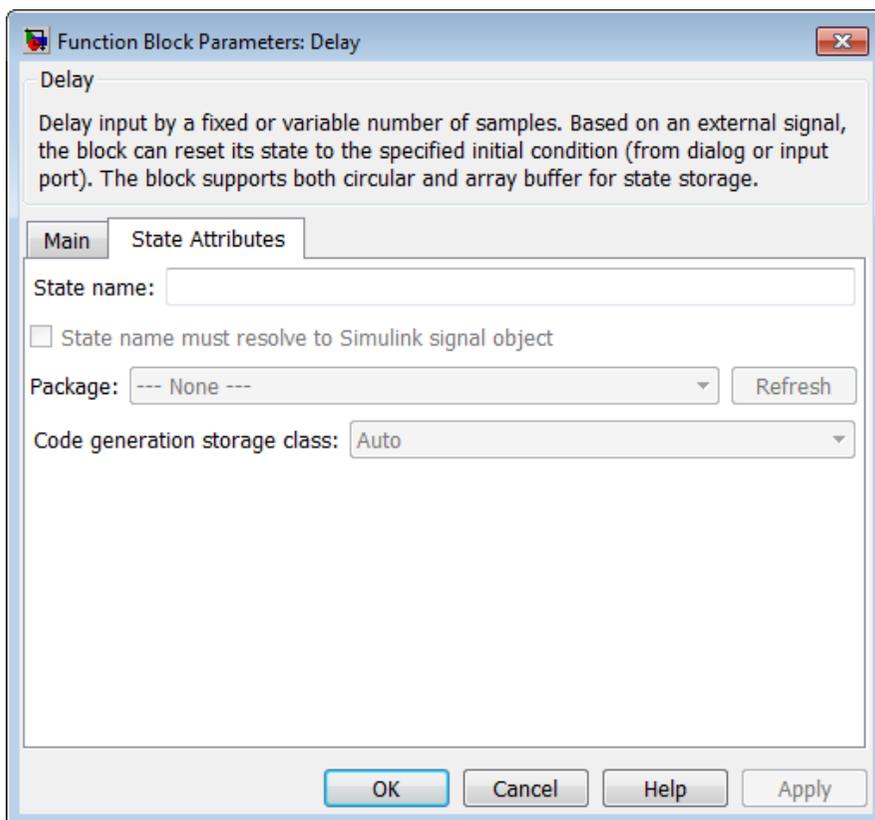

## State name

Use this parameter to assign a unique name to the block state. The default is ' '. When this field is blank, no name is assigned. When using this parameter, remember these considerations:

- A valid identifier starts with an alphabetic or underscore character, followed by alphanumeric or underscore characters.
- The state name applies only to the selected block.

This parameter enables **State name must resolve to Simulink signal object** when you click **Apply**.

For more information, see “States” in the Simulink Coder documentation.

### **State name must resolve to Simulink signal object**

Select this check box to require that the state name resolve to a Simulink signal object. This check box is cleared by default.

**State name** enables this parameter.

Selecting this check box disables **Code generation storage class**.

### **Package**

Select a package that defines the custom storage class you want to apply. If you have defined any packages of your own, click **Refresh**. This action adds all user-defined packages on your search path to the package list.

### **Code generation storage class**

Select custom storage class for state.

**Default:** Auto

#### **Auto**

Auto is the appropriate storage class for states that you do not need to interface to external code.

#### **SimulinkGlobal**

*model\_P* initializes the state to its corresponding value in the workspace.

#### **ExportedGlobal**

State is stored in a global variable

#### **ImportedExtern**

*model\_private.h* declares the state as an extern variable.

**ImportedExternPointer**

*model\_private.h* declares the state as an extern pointer.

**Default**

A non-editable placeholder storage class is created.

**BitField**

A struct declaration is created that embeds Boolean data.

**Volatile**

Volatile type qualifier is used in state declaration.

**ExportToFile**

Header (.h) file containing global variable declarations is generated with user-specified name.

**ImportFromFile**

Predefined header (.h) files containing global variable declarations are included.

**FileScope**

A static qualifier is generated in front of the state declaration to make the state visible only to the current file.

**Struct**

A struct declaration is created to encapsulate parameter or signal object data.

**StructVolatile**

Volatile type qualifier is used in struct declaration.

**GetSet**

Supports specialized function calls to read and write memory.

**State name** enables this parameter.

The list of valid storage classes differs based on the **Package** selection.

Setting this parameter to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables **Code generation storage type qualifier**.

## Code generation storage type qualifier

Specify a Simulink Coder storage type qualifier. The default is `'`. When this field is blank, no qualifier is assigned.

The Simulink Coder product does not check this string for errors. Thus, whatever value you enter appears automatically in the variable declaration.

Setting **Code generation storage class** to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables this parameter.

## Variable-Size Support

The Delay block provides the following support for variable-size signals:

- The data input port `u` accepts variable-size signals. The other input ports do not accept variable-size signals.
- The output port has the same signal dimensions as the data input port `u` for variable-size inputs.

The rules that apply to variable-size signals depend on the input processing mode of the Delay block.

Input Processing Mode	Rules for Variable-Size Signal Support
Elements as channels (sample based)	<ul style="list-style-type: none"><li>• The signal dimensions change only during state reset when the block is enabled.</li><li>• The initial condition must be scalar.</li></ul>
Columns as channels (frame based)	<ul style="list-style-type: none"><li>• No support</li></ul>

Input Processing Mode	Rules for Variable-Size Signal Support
Inherited (where input is a sample-based signal)	<ul style="list-style-type: none"> <li>• The signal dimensions change only during state reset when the block is enabled.</li> <li>• The initial condition must be scalar.</li> </ul>
Inherited (where input is a frame-based signal)	<ul style="list-style-type: none"> <li>• The channel size changes only during state reset when the block is enabled.</li> <li>• The initial condition must be scalar.</li> <li>• The frame size must be constant.</li> </ul>

## Bus Support

The Delay block provides the following support for bus signals:

- The data input port `u` accepts virtual and nonvirtual bus signals. The other input ports do not accept bus signals.
- The output port has the same bus type as the data input port `u` for bus inputs.
- Buses work with:
  - Sample-based and frame-based processing
  - Fixed and variable delay length
  - Array and circular buffers

To use a bus signal as the input to a Delay block, you must specify the initial condition on the dialog box. In other words, the initial condition cannot come from the input port `x0`. Support for virtual and nonvirtual buses depends on the initial condition that you specify and whether the **State name** parameter is empty or not.

# Delay


---

Initial Condition	State Name	
	Empty	Not Empty
Zero	Virtual and nonvirtual bus support	Nonvirtual bus support only
Nonzero scalar	Virtual and nonvirtual bus support	No bus support
Nonscalar	No bus support	No bus support
Structure	Virtual and nonvirtual bus support	Nonvirtual bus support only
Partial structure	Virtual and nonvirtual bus support	Nonvirtual bus support only


## Examples

### Variable-Size Signals for Sample-Based Processing

This model shows how the Delay block supports variable-size signals for sample-based processing.

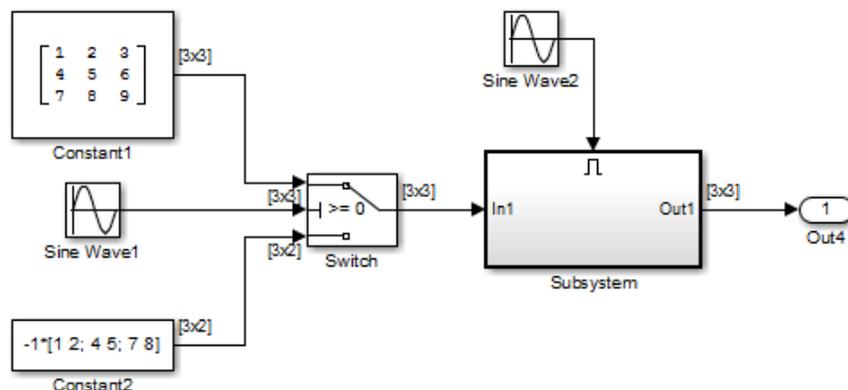

The Switch block controls whether the input signal to the enabled subsystem is a 3-by-3 or 3-by-2 matrix. The Delay block appears inside the enabled subsystem.

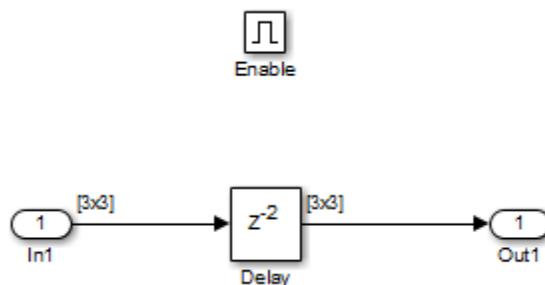


The model follows the rules for variable-size signals when the Delay block uses sample-based processing.

# Delay

Rule	How the Model Follows the Rule
The signal dimensions change only during state reset when the block is enabled.	The Enable block sets <b>Propagate sizes of variable-size signals</b> to Only when enabling.
The initial condition must be scalar.	The Delay block sets <b>Initial condition</b> to 0.0, a scalar value.

## Bus Signals for Frame-Based Processing

This model shows how the Delay block supports bus signals for frame-based processing.

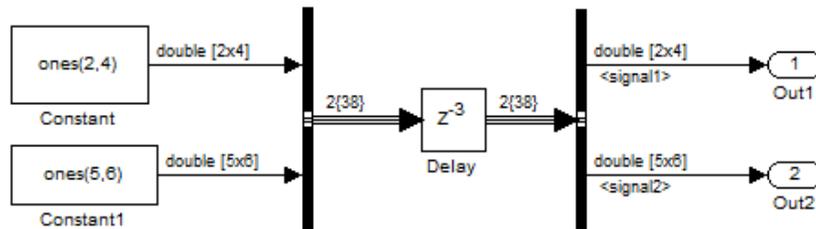

Each Constant block supplies an input signal to the Bus Creator block, which outputs a two-dimensional bus signal. After the Delay block delays the bus signal by three sample periods, the Bus Selector block separates the bus back into the two original signals.

The model follows the rules for bus signals when the Delay block uses frame-based processing.

Rule	How the Model Follows the Rule
For the initial condition, set the value on the dialog box.	The Delay block sets <b>Initial condition</b> to 0, a scalar value.
For frame-based processing, signal dimensions of the data input port u cannot be larger than two. (This rule applies to all inputs for the port u, not just bus signals.)	The bus input to the Delay block has two dimensions.

## Characteristics

Direct Feedthrough	Yes, when you clear <b>Prevent direct feedthrough by increasing delay length to lower limit</b>
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of the input u when <b>Initial condition</b> is nonscalar and sample-based processing applies
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

- Resetable Delay
- Variable Integer Delay

# Demux

---

**Purpose** Extract and output elements of vector signal

**Library** Signal Routing

## Description



The Demux block extracts the components of an input signal and outputs the components as separate signals. The output signals are ordered from top to bottom output port. See “How to Rotate a Block” for a description of the port order for various block orientations. To avoid adding clutter to a model, Simulink hides the name of a Demux block when you copy it from the Simulink library to a model. See “Mux Signals” for information about creating and decomposing vectors.

The **Number of outputs** parameter allows you to specify the number and, optionally, the dimensionality of each output port. If you do not specify the dimensionality of the outputs, the block determines the dimensionality of the outputs for you.

The Demux block operates in either vector mode or bus selection mode, depending on whether you selected the **Bus selection mode** parameter. The two modes differ in the types of signals they accept. Vector mode accepts only a vector-like signal, that is, either a scalar (one-element array), vector (1-D array), or a column or row vector (one row or one column 2-D array). Bus selection mode accepts only a bus signal.

---

**Note** MathWorks discourages enabling **Bus selection mode** and using a Demux block to extract elements of a bus signal. Muxes and buses should not be intermixed in new models. See “Prevent Bus and Mux Mixtures” for more information.

---

The **Number of outputs** parameter determines the number and dimensionality of the block outputs, depending on the mode in which the block operates.

### Specifying the Number of Outputs in Vector Mode

In vector mode, the value of the parameter can be a scalar specifying the number of outputs or a vector whose elements specify the widths of

the block's output ports. The block determines the size of its outputs from the size of the input signal and the value of the **Number of outputs** parameter.


The following table summarizes how the block determines the outputs for an input vector of width  $n$ .

Parameter Value	Block outputs...	Comments
$p = n$	$p$ scalar signals	For example, if the input is a three-element vector and you specify three outputs, the block outputs three scalar signals.
$p > n$	Error	
$p < n$ $n \bmod p = 0$	$p$ vector signals each having $n/p$ elements	If the input is a six-element vector and you specify three outputs, the block outputs three two-element vectors.
$p < n$ $n \bmod p = m$	$m$ vector signals each having $(n/p)+1$ elements and $p-m$ signals having $n/p$ elements	If the input is a five-element vector and you specify three outputs, the block outputs two two-element vector signals and one scalar signal.
$[p_1 \ p_2 \ \dots \ p_m]$ $p_1+p_2+\dots+p_m=n$ $p_i > 0$	$m$ vector signals having widths $p_1, p_2, \dots, p_m$	If the input is a five-element vector and you specify [3, 2] as the output, the block outputs three of the input elements on one port and the other two elements on the other port.

# Demux

Parameter Value	Block outputs...	Comments
$[p_1 \ p_2 \ \dots \ p_m]$ $p_1 + p_2 + \dots + p_m = n$ some or all $p_i = -1$	m vector signals	If $p_i$ is greater than zero, the corresponding output has width $p_i$ . If $p_i$ is -1, the width of the corresponding output is dynamically sized.
$[p_1 \ p_2 \ \dots \ p_m]$ $p_1 + p_2 + \dots + p_m \neq n$ $p_i = > 0$	Error	


Note that you can specify the number of outputs as fewer than the number of input elements, in which case the block distributes the elements as evenly as possible over the outputs as illustrated in the following example:

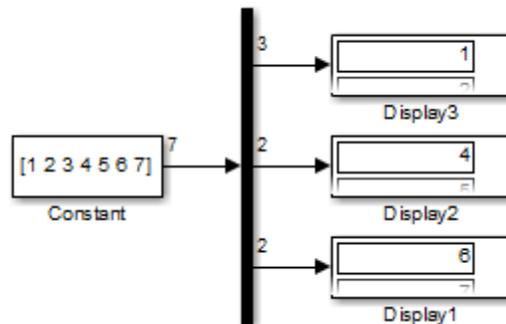

You can use -1 in a vector expression to indicate that the block should dynamically size the corresponding port. For example, the expression [-1, 3 -1] causes the block to output three signals where the second signal always has three elements. The sizes of the first and third signals depend on the size of the input signal.

If a vector expression comprises positive values and -1 values, the block assigns as many elements as needed to the ports with positive values

and distributes the remain elements as evenly as possible over the ports with  $-1$  values. For example, suppose that the block input is seven elements wide and you specify the output as  $[-1, 3 -1]$ . In this case, the block outputs two elements on the first port, three elements on the second, and two elements on the third.

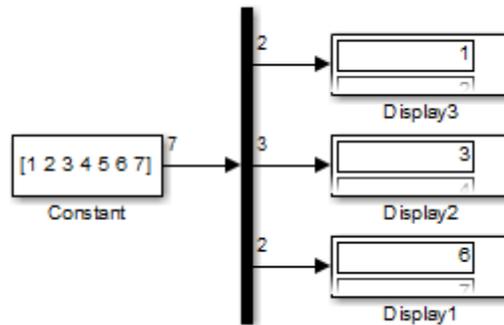


### Specifying the Number of Outputs in Bus Selection Mode

In bus selection mode, the value of the **Number of outputs** parameter can be a:

- Scalar specifying the number of output ports

The specified value must equal the number of input signals. For example, if the input bus comprises two signals and the value of this parameter is a scalar, the value must equal 2.

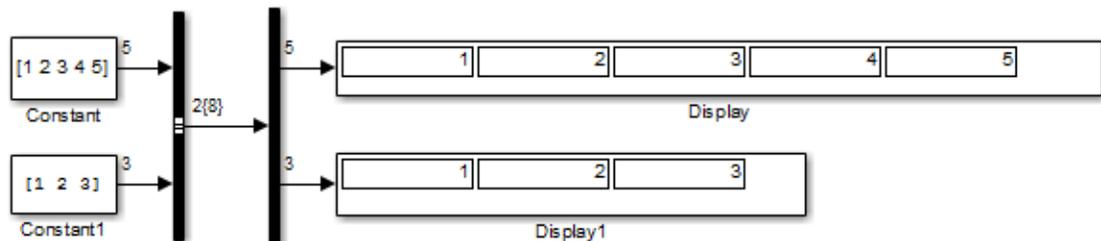


# Demux

- Vector each of whose elements specifies the number of signals to output on the corresponding port

For example, if the input bus contains five signals, you can specify the output as  $[3, 2]$ , in which case the block outputs three of the input signals on one port and the other two signals on a second port.

- Cell array each of whose elements is a cell array of vectors specifying the dimensions of the signals output by the corresponding port

The cell array format constrains the Demux block to accept only signals of specified dimensions. For example, the cell array  $\{\{[2\ 2], 3\} \{1\}\}$  tells the block to accept only a bus signal comprising a 2-by-2 matrix, a three-element vector, and a scalar signal. You can use the value  $-1$  in a cell array expression to let the block determine the dimensionality of a particular output based on the input. For example, the following diagram uses the cell array expression  $\{\{1\}, \{1, 1\}\}$  to specify the output of the leftmost Demux block.

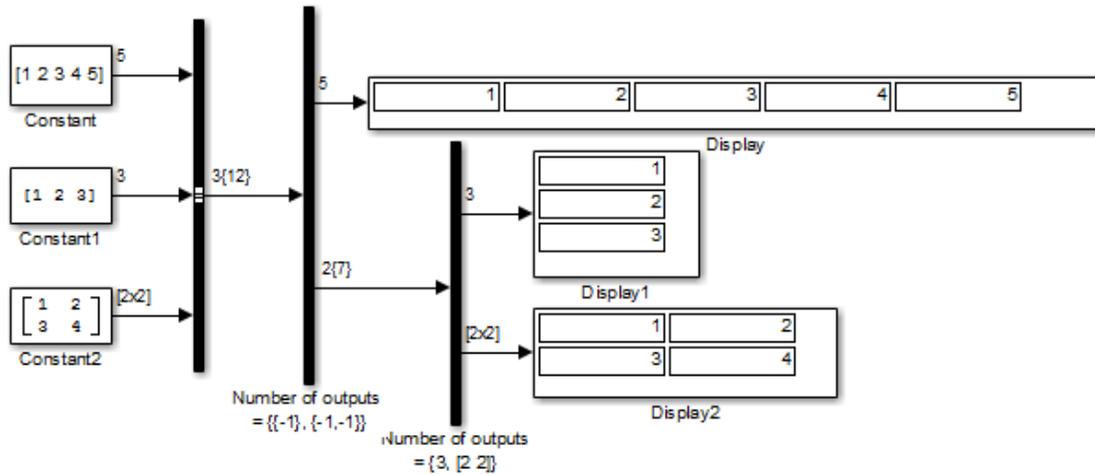

In bus selection mode, if you specify the dimensionality of an output port (that is, specify any value other than  $-1$ ), the corresponding input element must match the specified dimensionality.

---

**Note** MathWorks discourages enabling **Bus selection mode** and using a Demux block to extract elements of a bus signal. Muxes and buses should not be intermixed in new models. See “Prevent Bus and Mux Mixtures” for more information.


---

## Data Type Support

The Demux block accepts and outputs complex or real signals of any data type that Simulink supports, including fixed-point and enumerated data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Demux

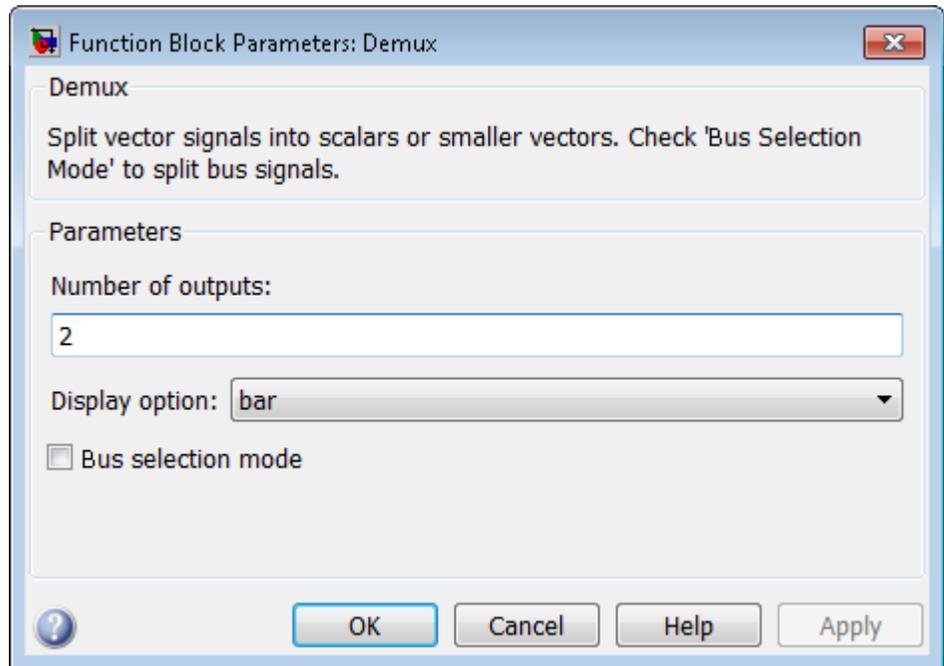

## Parameters and Dialog Box

## **Number of outputs**

Specify the number and dimensions of outputs.

### **Settings**

**Default:** 2

This block interprets this parameter depending on the **Bus selection mode** parameter. See the block description for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See the Demux block reference page for more information.

## Display option


Select options to display the Demux block. The options are

### Settings

**Default:** bar

bar

Display the icon as a solid bar of the block's foreground color.

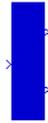

none

Display the icon as a box containing the block's type name.



## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### See Also

See the Demux block reference page for more information.

**Bus selection mode**

Enable bus selection mode.

**Settings**

**Default:** Off

On  
Enable bus selection mode.

Off  
Disable bus selection mode.

**Tips**

MathWorks discourages enabling **Bus selection mode** and using a Demux block to extract elements of a bus signal. Muxes and buses should not be intermixed in new models. See “Prevent Bus and Mux Mixtures” for more information.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**Characteristics**

Virtual	Yes For more information, see “Virtual Blocks” in the Simulink documentation.
---------	--

**See Also**

Mux

# Derivative

---

**Purpose** Output time derivative of input

**Library** Continuous

**Description** The Derivative block approximates the derivative of the input signal  $u$  with respect to the simulation time  $t$ . You obtain the approximation of



$$\frac{du}{dt},$$

by computing a numerical difference  $\Delta u/\Delta t$ , where  $\Delta u$  is the change in input value and  $\Delta t$  is the change in time since the previous simulation (major) time step.

This block accepts one input and generates one output. The initial output for the block is zero.

The precise relationship between the input and output of this block is:

$$y(t) = \frac{\Delta u}{\Delta t} = \frac{u(t) - u(T_{previous})}{t - T_{previous}} \Big|_{t > T_{previous}},$$

where  $t$  is the current simulation time and  $T_{previous}$  is the time of the last output time of the simulation. The latter is the same as the time of the last major time step.

The Derivative block output might be very sensitive to the dynamics of the entire model. The accuracy of the output signal depends on the size of the time steps taken in the simulation. Smaller steps allow a smoother and more accurate output curve from this block. However, unlike with blocks that have continuous states, the solver does not take smaller steps when the input to this block changes rapidly. Depending on the dynamics of the driving signal and model, the output signal of this block might contain unexpected fluctuations. These fluctuations are primarily due to the driving signal output and solver step size.

Because of these sensitivities, structure your models to use integrators (such as Integrator blocks) instead of Derivative blocks. Integrator blocks have states that allow solvers to adjust step size and improve accuracy of the simulation. See “Circuit Model” for an example of choosing the best-form mathematical model to avoid using Derivative blocks in your models,

If you must use the Derivative block with a variable step solver, set the solver maximum step size settings to a value such that the Derivative block can generate answers with adequate accuracy. To determine this value, you might need to repeatedly run the simulation using different solver settings.

When the input to this block is a discrete signal, the continuous derivative of the input exhibits an impulse when the value of the input changes. Otherwise, it is 0. Alternatively, you can define the discrete derivative of a discrete signal using the difference of the last two values of the signal, as follows:

$$y(k) = \frac{1}{\Delta t}(u(k) - u(k-1))$$

Taking the  $z$ -transform of this equation results in:

$$\frac{Y(z)}{u(z)} = \frac{1 - z^{-1}}{\Delta t} = \frac{z - 1}{\Delta t \cdot z}$$

The Discrete Derivative block models this behavior. Use this block instead of the Derivative block to approximate the discrete-time derivative of a discrete signal.

## Improved Linearization with Transfer Fcn Blocks

The Laplace domain transfer function for the operation of differentiation is:

$$\frac{Y(s)}{X(s)} = s$$

# Derivative


---

This equation is not a proper transfer function, nor does it have a state-space representation. As such, the Simulink software linearizes this block as an effective gain of 0 unless you explicitly specify that a proper first-order transfer function should be used to approximate the linear behavior of this block (see “Coefficient  $c$  in the transfer function approximation  $s/(c*s + 1)$  used for linearization” on page 1-344).

To improve linearization, you can also try to incorporate the derivative term in other blocks. For example, if you have a Derivative block in series with a Transfer Fcn block, try using a single Transfer Fcn block of the form

$$\frac{s}{s+a}$$


For example, you can replace the first set of blocks in this figure with the blocks below them.

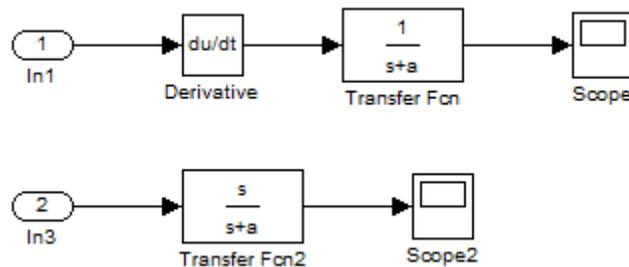

## Data Type Support

The Derivative block accepts and outputs a real signal of type double. For more information, see “Data Types Supported by Simulink”.

## Parameters and Dialog Box

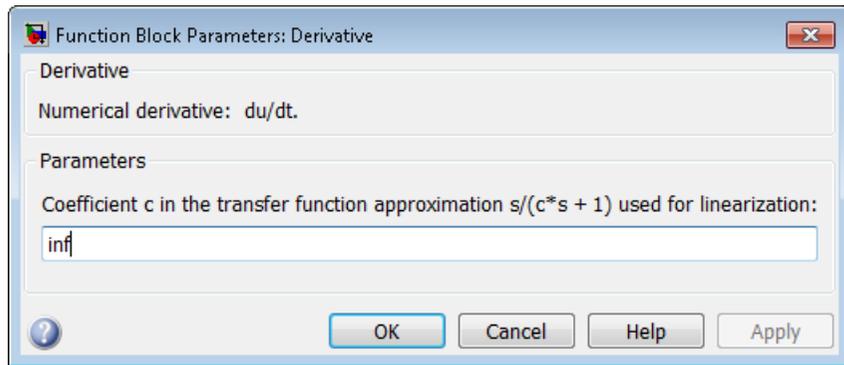

# Derivative

---

## Coefficient $c$ in the transfer function approximation $s/(c*s + 1)$ used for linearization

Specify the time constant  $c$  to approximate the linearization of your system.

### Settings

**Default:** `inf`

- The exact linearization of the Derivative block is difficult, because the dynamic equation for the block is  $y = \dot{u}$ , which you cannot represent as a state-space system. However, you can approximate the linearization by adding a pole to the Derivative to create a transfer function  $s/(c*s + 1)$ . The addition of a pole filters the signal before differentiating it, which removes the effect of noise.
- The default value `inf` corresponds to a linearization of 0.

### Tips

- A best practice is to change the value of  $c$  to  $\frac{1}{f_b}$ , where  $f_b$  is the break frequency for the filter.
- **Coefficient  $c$  in the transfer function approximation  $s/(c*s+1)$  used for linearization** must be a finite positive value. This value must be nonzero.

### Command-Line Information

**Parameter:** `CoefficientIntFapproximation`

**Type:** `string`

**Value:** `'inf'`

**Default:** `'inf'`

## Characteristics

Direct Feedthrough	Yes
Sample Time	Continuous
Scalar Expansion	N/A

Dimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Discrete Derivative


# Detect Change

---

**Purpose** Detect change in signal value

**Library** Logic and Bit Operations

**Description** The Detect Change block determines if an input does not equal its previous value.

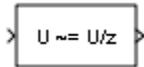


- The output is true (equal to 1) when the input signal does not equal its previous value.
- The output is false (equal to 0) when the input signal equals its previous value.

## Data Type Support

The Detect Change block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

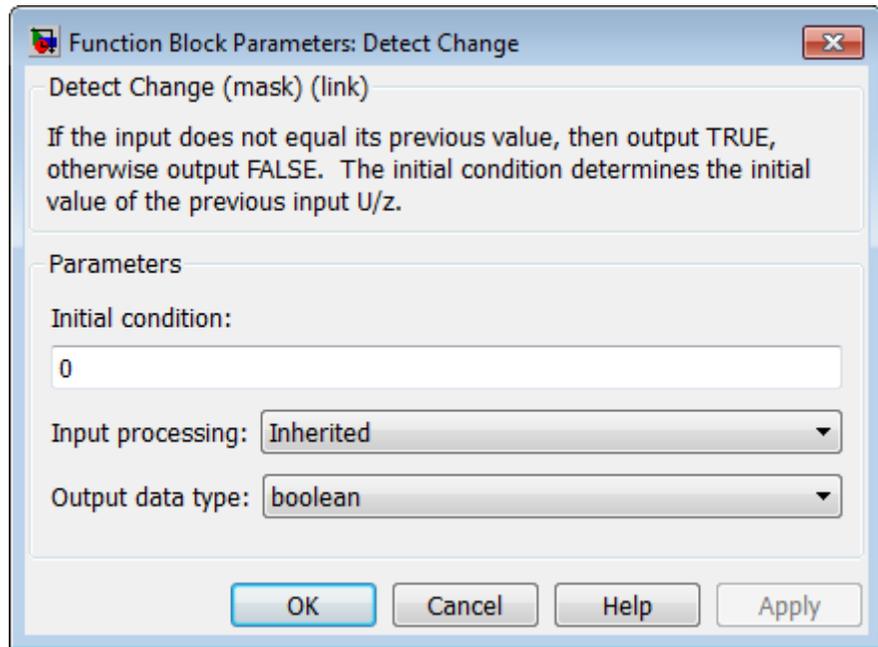

## Parameters and Dialog Box

### Initial condition

Set the initial condition for the previous input U/z.

### Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- Elements as channels (sample based) — Treat each element of the input as a separate channel (sample-based processing).
- Columns as channels (frame based) — Treat each column of the input as a separate channel (frame-based processing).

# Detect Change

---

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

<b>Input Signal <i>u</i></b>	<b>Input Processing Mode</b>	<b>Block Works?</b>
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

## Output data type

Set the output data type to `boolean` or `uint8`.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes

## See Also

Detect Decrease, Detect Fall Negative, Detect Fall Nonpositive, Detect Increase, Detect Rise Nonnegative, Detect Rise Positive


# Detect Decrease

---

**Purpose** Detect decrease in signal value

**Library** Logic and Bit Operations

**Description** The Detect Decrease block determines if an input is strictly less than its previous value.

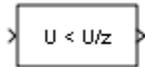


- The output is true (equal to 1) when the input signal is less than its previous value.
- The output is false (equal to 0) when the input signal is greater than or equal to its previous value.

## Data Type Support

The Detect Decrease block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

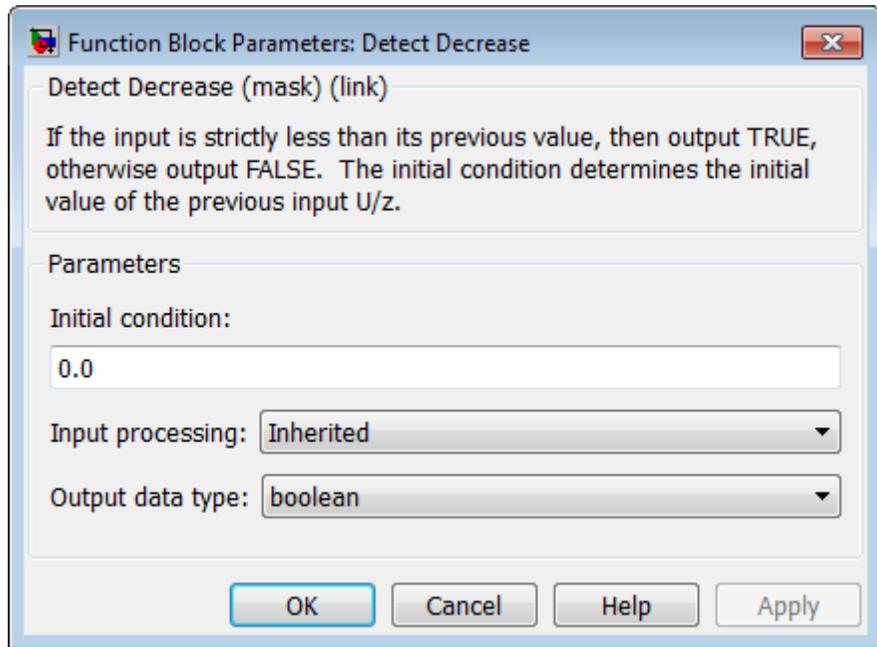

## Parameters and Dialog Box

### Initial condition

Set the initial condition for the previous input  $U/z$ .

### Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- Elements as channels (sample based) — Treat each element of the input as a separate channel (sample-based processing).
- Columns as channels (frame based) — Treat each column of the input as a separate channel (frame-based processing).

# Detect Decrease

---

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

<b>Input Signal <i>u</i></b>	<b>Input Processing Mode</b>	<b>Block Works?</b>
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

### Output data type

Set the output data type to `boolean` or `uint8`.

### Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes

### See Also

Detect Change, Detect Fall Negative, Detect Fall Nonpositive, Detect Increase, Detect Rise Nonnegative, Detect Rise Positive


# Detect Fall Negative

---

**Purpose** Detect falling edge when signal value decreases to strictly negative value, and its previous value was nonnegative

**Library** Logic and Bit Operations

**Description** The Detect Fall Negative block determines if the input is less than zero, and its previous value was greater than or equal to zero.

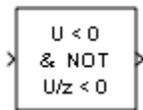


- The output is true (equal to 1) when the input signal is less than zero, and its previous value was greater than or equal to zero.
- The output is false (equal to 0) when the input signal is greater than or equal to zero, or if the input signal is negative, its previous value was also negative.

**Data Type Support** The Detect Fall Negative block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

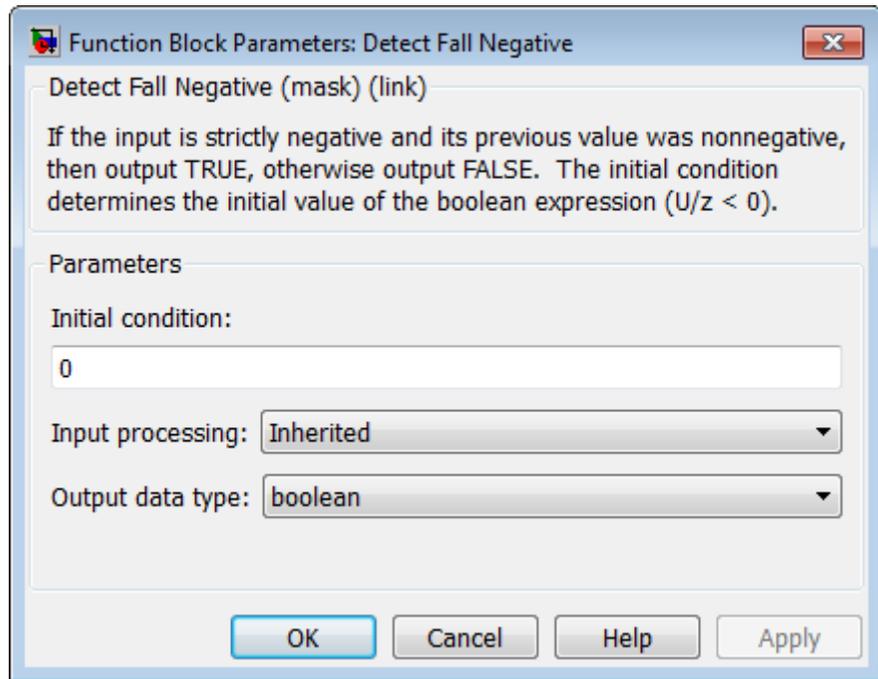

### Initial condition

Set the initial condition of the Boolean expression  $U/z < 0$ .

### Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- Elements as channels (sample based) — Treat each element of the input as a separate channel (sample-based processing).
- Columns as channels (frame based) — Treat each column of the input as a separate channel (frame-based processing).

# Detect Fall Negative

---

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

<b>Input Signal <i>u</i></b>	<b>Input Processing Mode</b>	<b>Block Works?</b>
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

## Output data type

Set the output data type to `boolean` or `uint8`.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes

## See Also

Detect Change, Detect Decrease, Detect Fall Nonpositive, Detect Increase, Detect Rise Nonnegative, Detect Rise Positive

# Detect Fall Nonpositive

---

## Purpose


Detect falling edge when signal value decreases to nonpositive value, and its previous value was strictly positive

## Library

Logic and Bit Operations

## Description

The Detect Fall Nonpositive block determines if the input is less than or equal to zero, and its previous value was greater than zero.

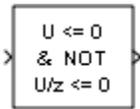

- The output is true (equal to 1) when the input signal is less than or equal to zero, and its previous value was greater than zero.
- The output is false (equal to 0) when the input signal is greater than zero, or if it is nonpositive, its previous value was also nonpositive.


## Data Type Support

The Detect Fall Nonpositive block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

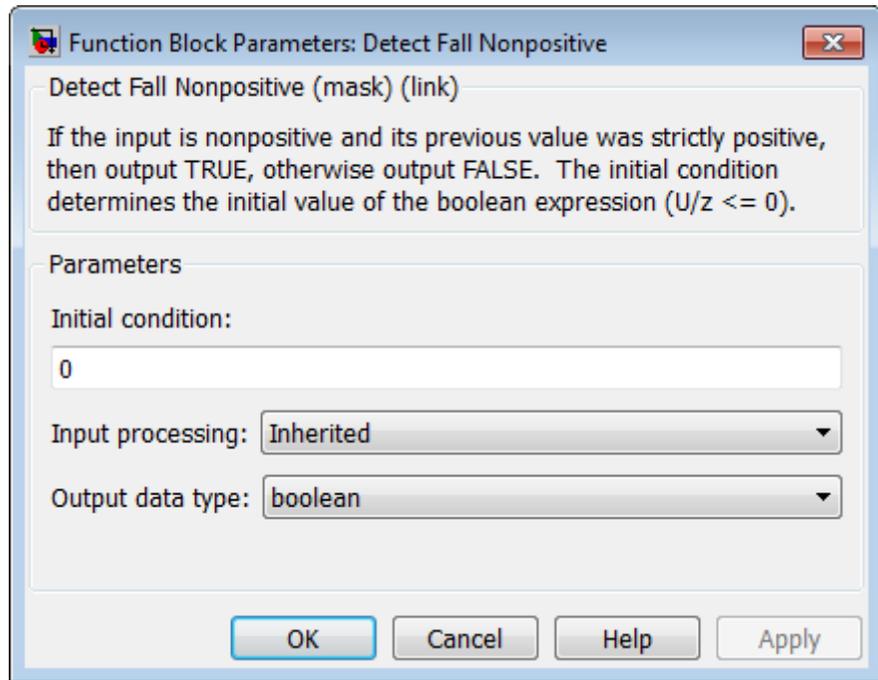

### Initial condition

Set the initial condition of the Boolean expression  $U/z \leq 0$ .

### Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- Elements as channels (sample based) — Treat each element of the input as a separate channel (sample-based processing).
- Columns as channels (frame based) — Treat each column of the input as a separate channel (frame-based processing).

# Detect Fall Nonpositive

---

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

<b>Input Signal <i>u</i></b>	<b>Input Processing Mode</b>	<b>Block Works?</b>
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

## Output data type

Set the output data type to `boolean` or `uint8`.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes

## See Also

Detect Change, Detect Decrease, Detect Fall Negative, Detect Increase, Detect Rise Nonnegative, Detect Rise Positive


# Detect Increase

---

**Purpose** Detect increase in signal value

**Library** Logic and Bit Operations

**Description** The Detect Increase block determines if an input is strictly greater than its previous value.

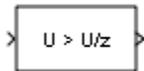


- The output is true (equal to 1) when the input signal is greater than its previous value.
- The output is false (equal to 0) when the input signal is less than or equal to its previous value.

## Data Type Support

The Detect Increase block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

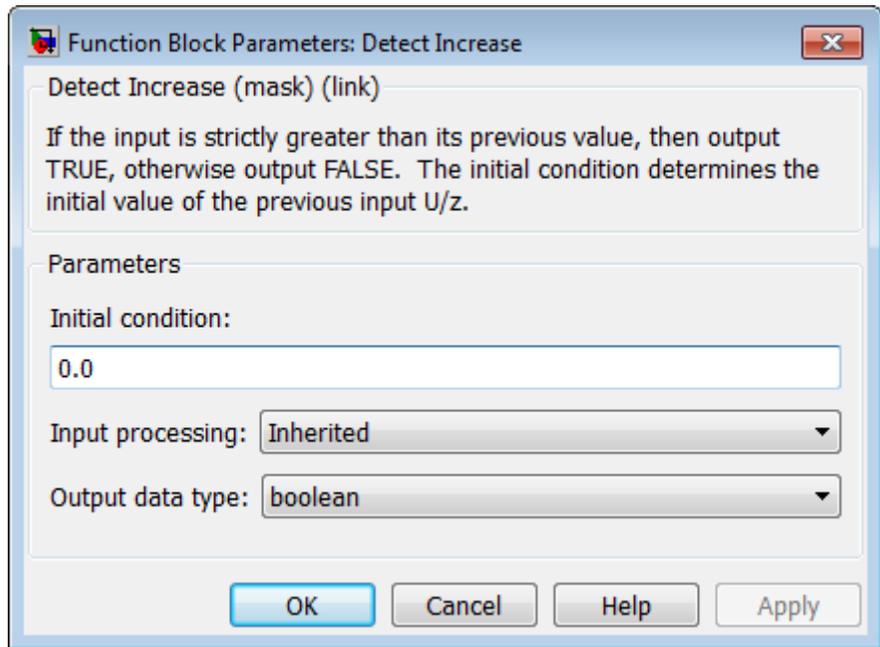

## Parameters and Dialog Box

### Initial condition

Set the initial condition for the previous input  $U/z$ .

### Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- Elements as channels (sample based) — Treat each element of the input as a separate channel (sample-based processing).
- Columns as channels (frame based) — Treat each column of the input as a separate channel (frame-based processing).

# Detect Increase

---

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

<b>Input Signal <i>u</i></b>	<b>Input Processing Mode</b>	<b>Block Works?</b>
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

## Output data type

Set the output data type to `boolean` or `uint8`.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes

## See Also

Detect Change, Detect Decrease, Detect Fall Negative, Detect Fall Nonpositive, Detect Rise Nonnegative, Detect Rise Positive

# Detect Rise Nonnegative

---

## Purpose


Detect rising edge when signal value increases to nonnegative value, and its previous value was strictly negative

## Library

Logic and Bit Operations

## Description

The Detect Rise Nonnegative block determines if the input is greater than or equal to zero, and its previous value was less than zero.

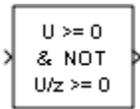


- The output is true (equal to 1) when the input signal is greater than or equal to zero, and its previous value was less than zero.
- The output is false (equal to 0) when the input signal is less than zero, or if the input signal is nonnegative, its previous value was also nonnegative.

## Data Type Support

The Detect Rise Nonnegative block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

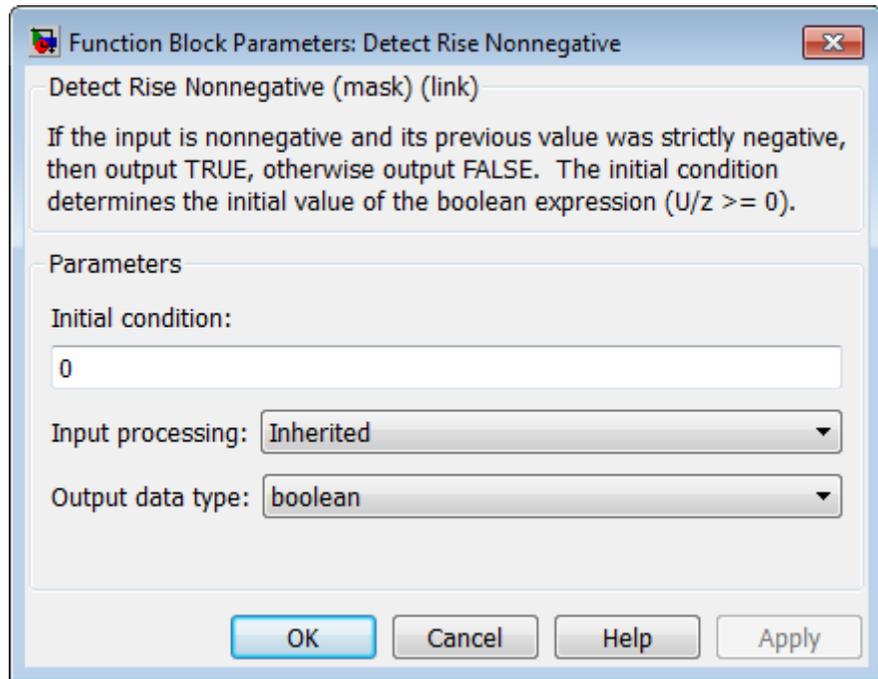

## Parameters and Dialog Box

### Initial condition

Set the initial condition of the Boolean expression  $U/z \geq 0$ .

### Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- Elements as channels (sample based) — Treat each element of the input as a separate channel (sample-based processing).
- Columns as channels (frame based) — Treat each column of the input as a separate channel (frame-based processing).

# Detect Rise Nonnegative

---

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

<b>Input Signal <i>u</i></b>	<b>Input Processing Mode</b>	<b>Block Works?</b>
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

## Output data type

Set the output data type to `boolean` or `uint8`.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes

## See Also

Detect Change, Detect Decrease, Detect Fall Negative, Detect Fall Nonpositive, Detect Increase, Detect Rise Positive

# Detect Rise Positive

---

## Purpose


Detect rising edge when signal value increases to strictly positive value, and its previous value was nonpositive

## Library

Logic and Bit Operations

## Description

The Detect Rise Positive block determines if the input is strictly positive, and its previous value was nonpositive.

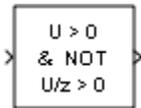

- The output is true (equal to 1) when the input signal is greater than zero, and the previous value was less than or equal to zero.
- The output is false (equal to 0) when the input is negative or zero, or if the input is positive, the previous value was also positive.


## Data Type Support

The Detect Rise Positive block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

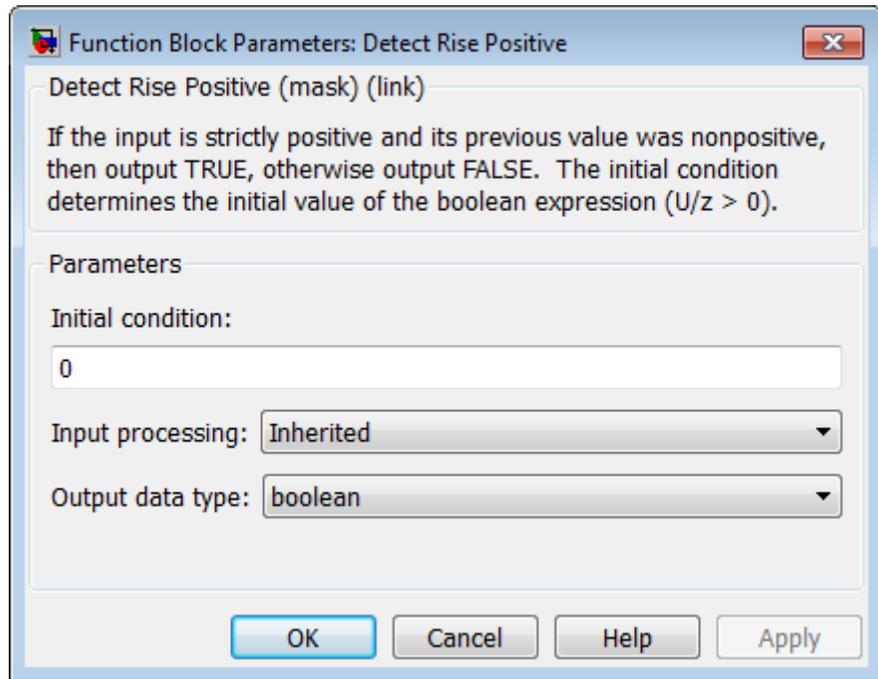

### Initial condition

Set the initial condition of the Boolean expression  $U/z > 0$ .

### Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- Elements as channels (sample based) — Treat each element of the input as a separate channel (sample-based processing).
- Columns as channels (frame based) — Treat each column of the input as a separate channel (frame-based processing).

# Detect Rise Positive

---

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

<b>Input Signal <i>u</i></b>	<b>Input Processing Mode</b>	<b>Block Works?</b>
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

**Output data type**

Set the output data type to boolean or uint8.

**Characteristics**

Direct Feedthrough	Yes
Scalar Expansion	Yes

**See Also**

Detect Change, Detect Decrease, Detect Fall Negative, Detect Fall Nonpositive, Detect Increase, Detect Rise Nonnegative


# Difference

---

**Purpose** Calculate change in signal over one time step

**Library** Discrete


**Description** The Difference block outputs the current input value minus the previous input value.

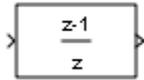

**Data Type Support** The Difference block accepts signals of any numeric data type that Simulink supports, including fixed-point data types. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

The **Main** pane of the Difference block dialog box appears as follows:

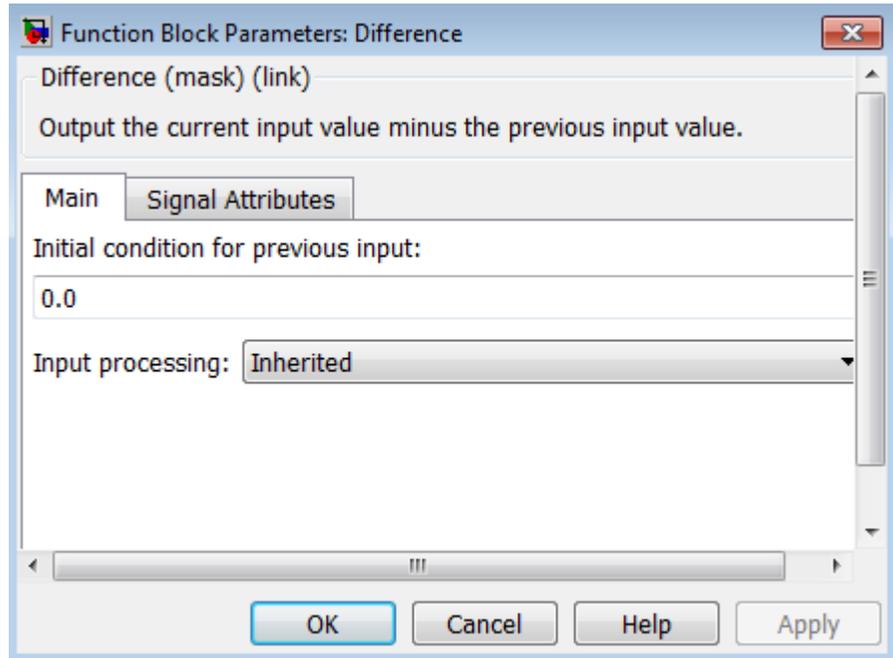

### Initial condition for previous input

Set the initial condition for the previous input.

### Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- **Elements as channels (sample based)** — Treat each element of the input as a separate channel (sample-based processing).
- **Columns as channels (frame based)** — Treat each column of the input as a separate channel (frame-based processing).

# Difference

---

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.


---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

<b>Input Signal <i>u</i></b>	<b>Input Processing Mode</b>	<b>Block Works?</b>
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

The **Signal Attributes** pane of the Difference block dialog box appears as follows:

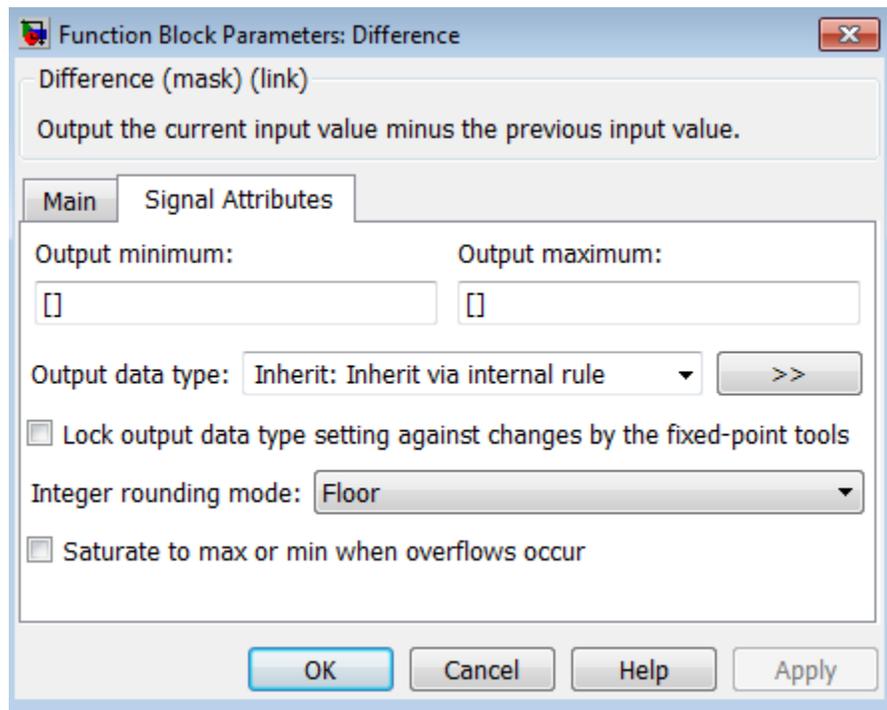

## Output minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output maximum


Specify the maximum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

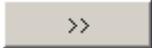Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” in the *Simulink User’s Guide* for more information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## **Saturate to max or min when overflows occur**

Select to have overflows saturate to the maximum or minimum value that the data type can represent. Otherwise, overflows wrap.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## **Characteristics**

Direct Feedthrough	Yes
Scalar Expansion	Yes, of inputs and gain


# Digital Clock

---

**Purpose** Output simulation time at specified sampling interval

**Library** Sources


**Description** The Digital Clock block outputs the simulation time only at the specified sampling interval. At other times, the block holds the output at the previous value. To control the precision of this block, set the **Sample time** parameter in the block dialog box.

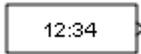

Use this block rather than the Clock block (which outputs continuous time) when you need the current simulation time within a discrete system.

**Data Type Support** The Digital Clock block outputs a real signal of type `double`. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

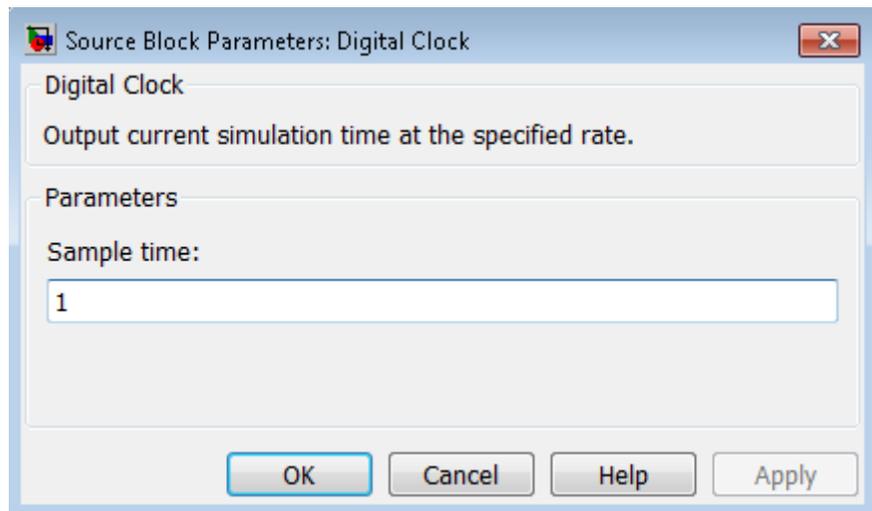

### Sample time

Specify the sampling interval. The default value is 1 second. For more information, see [Specifying Sample Time](#) in the Simulink documentation.

Do not specify a continuous sample time, either 0 or [0,0]. Also, avoid specifying -1 (inheriting the sample time) because this block is a source.


## Examples

In the following model, the Scope block shows the output of a Digital Clock block with a **Sample time** of 0.2.



The Digital Clock block outputs the simulation time every 0.2 seconds. Otherwise, the block holds the output at the previous value.

# Digital Clock

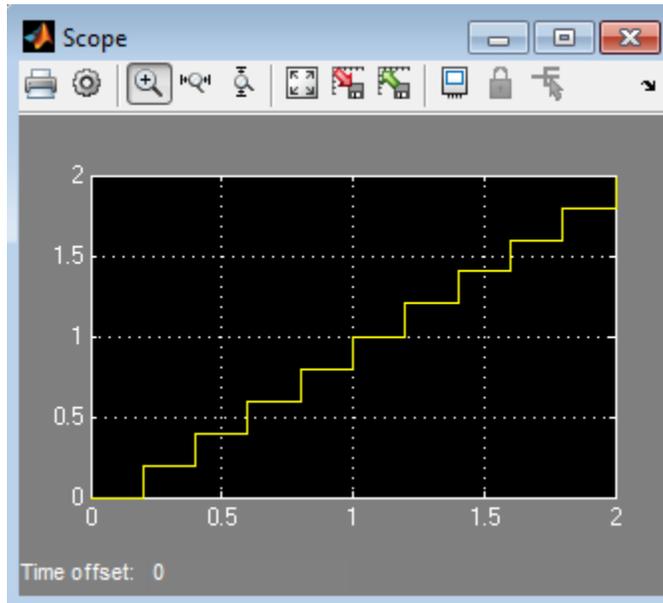

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	No
Multidimensionalized	No
Zero-Crossing Detection	No

## See Also

Clock


## Purpose

Index into N-dimensional table to retrieve element, column, or 2-D matrix

## Library

Lookup Tables

## Description

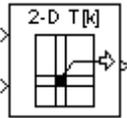


## Block Inputs and Outputs

The Direct Lookup Table (n-D) block uses inputs as zero-based indices into an  $n$ -dimensional table. The number of inputs varies with the shape of the output: an element, column, or 2-D matrix.

You define a set of output values as the **Table data** parameter. The first input specifies the zero-based index to the table dimension that is *one higher* than the output dimensionality. The next input specifies the zero-based index to the next table dimension, and so on.

Output Shape	Output Dimensionality	Table Dimension That Maps to the First Input
Element	0	1
Column	1	2
Matrix	2	3

Suppose that you want to select a column of values from a 4-D table:

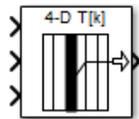

The following mapping of block input port to table dimension applies:












This input port...	Is the index for this table dimension...
1	2
2	3
3	4

# Direct Lookup Table (n-D)

## Changes in Block Icon Appearance












Depending on parameters you set, the block icon changes appearance. For table dimensions higher than 4, the icon matches the 4-D version but shows the exact number of dimensions in the top text.

When you use the **Table data** parameter, you see the following icons:

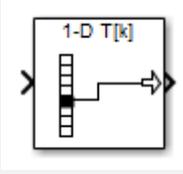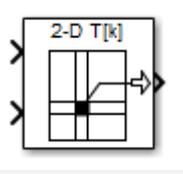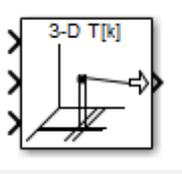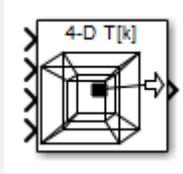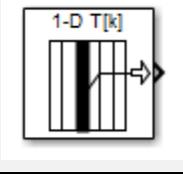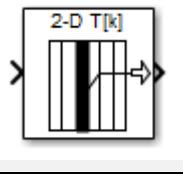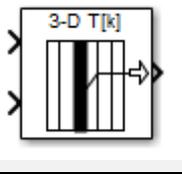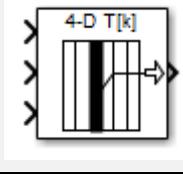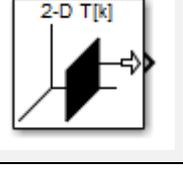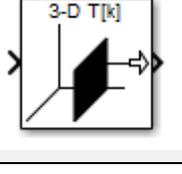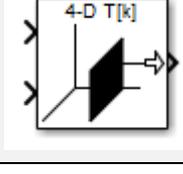Object That Inputs Select from the Table	Number of Table Dimensions			
	1	2	3	4
Element				
Column				
2-D Matrix	Not applicable			

# Direct Lookup Table (n-D)

When you use the table input port, you see the following icons:

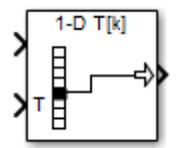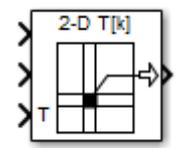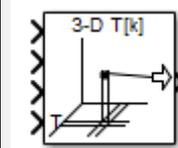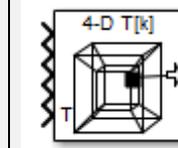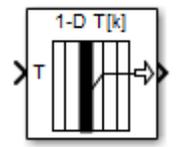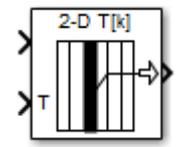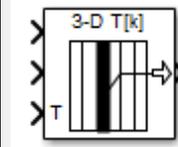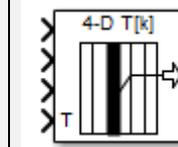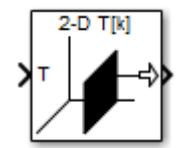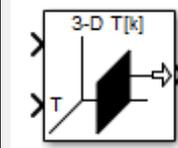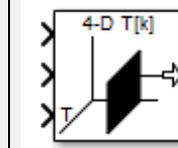Object That Inputs Select from the Table	Number of Table Dimensions			
	1	2	3	4
Element				
Column				
2-D Matrix	Not applicable			

# Direct Lookup Table (n-D)

## Data Type Support

The Direct Lookup Table (n-D) block accepts input signals of different data types.


Type of Input Port	Data Types Supported
Index port	<ul style="list-style-type: none"><li>• Floating point</li><li>• Built-in integer</li><li>• Boolean</li><li>• Enumerated data types</li></ul>
Table port (with the label T)	<ul style="list-style-type: none"><li>• Floating point</li><li>• Built-in integer</li><li>• Fixed point</li><li>• Boolean</li><li>• Enumerated data types</li></ul>

The output data type is the same as the table data type. Inputs for indexing must be real, but table data can be complex.

When the table data is...	The block inherits the output type from...
Not an input	The <b>Table data type</b> parameter
An input	The table input port

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

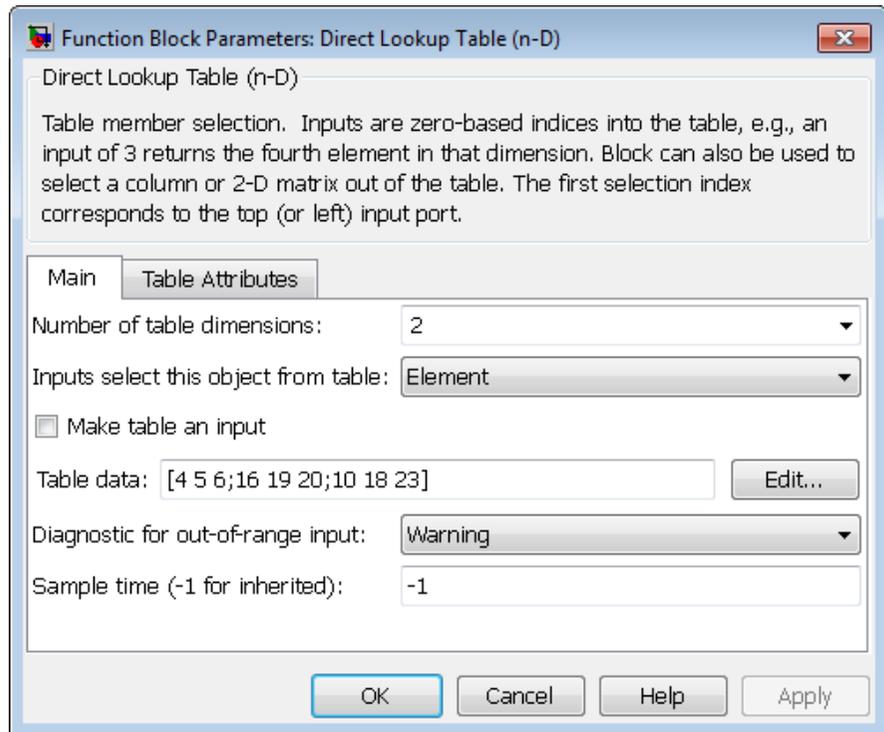

- “Main tab” on page 1-387
- “Table Attributes tab” on page 1-390

### Main tab

#### Number of table dimensions

Specify the number of dimensions that the **Table data** parameter must have. This value determines the number of independent variables for the table and the number of inputs to the block.

# Direct Lookup Table (n-D)

To specify...	Do this...
1, 2, 3, or 4	Select the value from the drop-down list.
A higher number of table dimensions	Enter a positive integer directly in the field.  The maximum number of table dimensions that this block supports is 30.

## Inputs select this object from table

Specify whether the output data is a single element, a column, or a 2-D matrix. The number of input ports for indexing depends on your selection.

Selection	Number of Input Ports for Indexing
Element	Number of table dimensions
Column	Number of table dimensions – 1
2-D Matrix	Number of table dimensions – 2

This numbering matches MATLAB indexing. For example, if you have a 4-D table of data, follow these guidelines:

To access...	Specify...	As in...
An element	Four indices	<code>array(1,2,3,4)</code>
A column	Three indices	<code>array(:,2,3,4)</code>
A 2-D matrix	Two indices	<code>array(:, :, 3,4)</code>

## Make table an input

Select this check box to force the Direct Lookup Table (n-D) block to ignore the **Table data** parameter. Instead, a new input port appears with T next to it. Use this port to input table data.

## Table data

Specify the table of output values. The matrix size must match the dimensions of the **Number of table dimensions** parameter. The **Table data** field is available only if you clear the **Make table an input** check box.

---

**Tip** During block diagram editing, you can leave the **Table data** field empty. But for simulation, you must match the number of dimensions in **Table data** to the **Number of table dimensions**. For details on how to construct multidimensional MATLAB arrays, see “Multidimensional Arrays” in the MATLAB documentation.

---

Click **Edit** to open the Lookup Table Editor. For more information, see “Edit Existing LookupTables” in the Simulink documentation.

## Diagnostic for out-of-range input

Specify whether to show a warning or error when an index is out of range with respect to the table dimension. Options include:

- None — do not display any warning or error message
- Warning — display a warning message in the MATLAB Command Window and continue the simulation
- Error — halt the simulation and display an error in the Diagnostic Viewer

When you select None or Warning, the block clamps out-of-range indices to fit table dimensions. For example, if the specified index is 5.3 and the maximum index for that table dimension is 4, the block clamps the index to 4.

## Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation for more information.

# Direct Lookup Table (n-D)

---

## Table Attributes tab

---

**Note** The parameters in the **Table Attributes** pane are not available if you select **Make table an input**. In this case, the block inherits all table attributes from the input port with the label  $T$ .

---

### Table minimum

Specify the minimum value for table data. The default value is [ ] (unspecified).

### Table maximum

Specify the maximum value for table data. The default value is [ ] (unspecified).

### Table data type

Specify the table data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit from 'Table data'`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Table data type** parameter.


### Lock data type settings against changes by the fixed-point tools

Select to lock all data type settings of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Lock the Output Data Type Setting” in the Fixed-Point Designer documentation.

## Examples

### When Table Data Is Not an Input

Suppose that you have the following model:

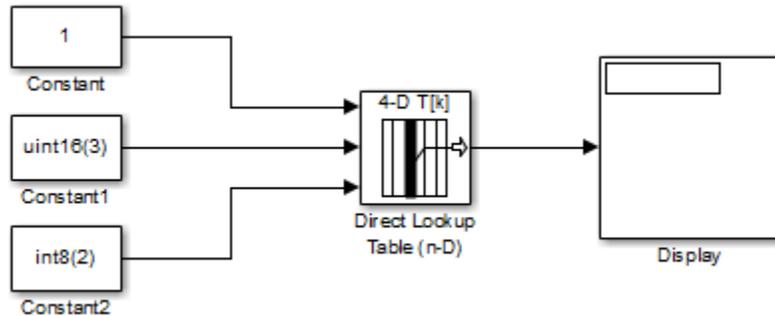

The Direct Lookup Table (n-D) block parameters are:


Block Parameter	Value
Number of table dimensions	4
Inputs select this object from table	Column
Make table an input	off
Table data	a
Diagnostic for out-of-range input	Warning
Sample time	1
Table minimum	[]
Table maximum	[]
Table data type	int16
Lock data type settings against changes by the fixed-point tools	off

# Direct Lookup Table (n-D)

In this example, `a` is a 4-D array of linearly increasing values that you define with the following model preload function:

```
a = reshape(1:2800, [4 5 20 7]);
```

When you run the model, you get the following results:

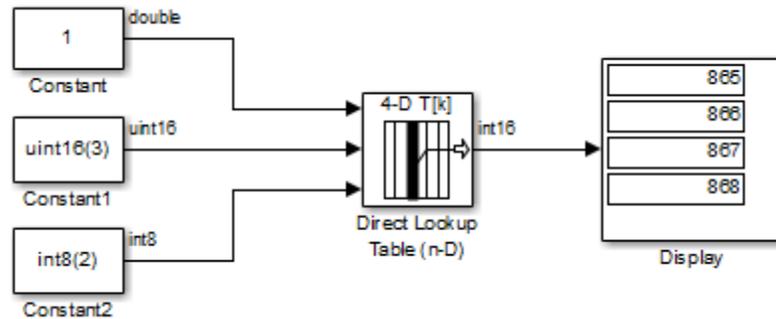


Because the Direct Lookup Table (n-D) block uses zero-based indexing, the output is:

```
a(:,2,4,3)
```

The output has the same data type as the table: `int16`.

## When Table Data Is an Input

Suppose that you have the following model:

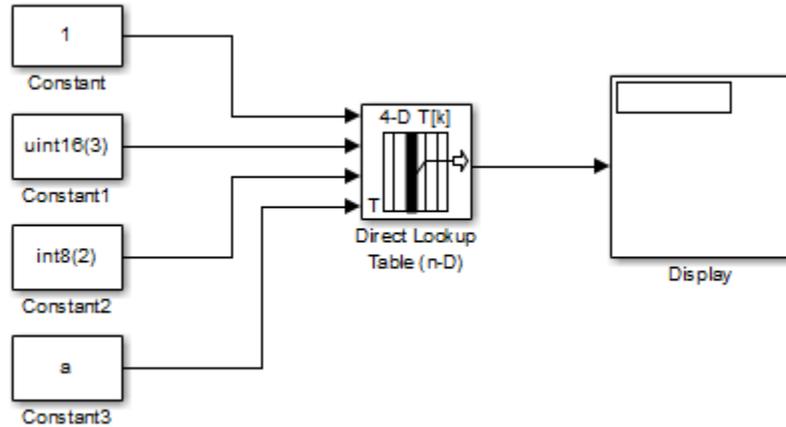

The Direct Lookup Table (n-D) block parameters are:

Block Parameter	Value
Number of table dimensions	4
Inputs select this object from table	Column
Make table an input	on
Diagnostic for out-of-range input	Warning
Sample time	1

# Direct Lookup Table (n-D)


The key parameters of the Constant3 block are:

Block Parameter	Value
Constant value	a
Output data type	fixdt(1,16,2)

In this example, a is a 4-D array of linearly increasing values that you define with the following model preload function:

```
a = reshape(1:2800, [4 5 20 7]);
```

When you run the model, you get the following results:

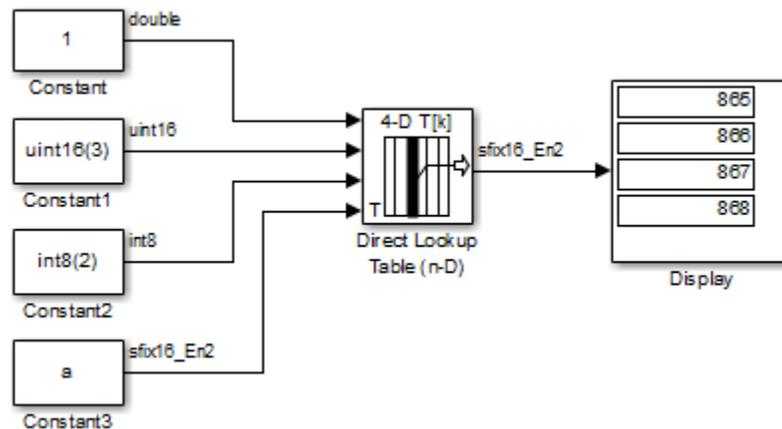

The Constant3 block feeds the 4-D array to the Direct Lookup Table (n-D) block, using the fixed-point data type `fixdt(1,16,2)`. Because the Direct Lookup Table (n-D) block uses zero-based indexing, the output is:

```
a(:,2,4,3)
```

The output has the same data type as the table: `fixdt(1,16,2)`.

<b>Characteristics</b>	Direct Feedthrough	Yes
	Sample Time	Specified in the <b>Sample time</b> parameter
	Scalar Expansion	For scalar lookups only (not when returning a column or a 2-D matrix from the table)
	Dimensionalized	For scalar lookups only (not when returning a column or a 2-D matrix from the table)
	Multidimensionalized	Yes
	Zero-Crossing Detection	No

**See Also**      n-D Lookup Table


# Discrete Derivative

---

**Purpose** Compute discrete-time derivative

**Library** Discrete

**Description** The Discrete Derivative block computes an optionally scaled discrete time derivative as follows

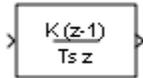

$$y(t_n) = \frac{Ku(t_n)}{T_s} - \frac{Ku(t_{n-1})}{T_s}$$

where  $u(t_n)$  and  $y(t_n)$  are the block's input and output at the current time step, respectively,  $u(t_{n-1})$  is the block's input at the previous time step,  $K$  is a scaling factor, and  $T_s$  is the simulation's discrete step size, which must be fixed.

## Guidelines for Usage in Triggered Subsystems

When you use the Discrete Derivative block in triggered subsystems, follow these guidelines:

- When the **Sample time type** parameter of the trigger port is triggered, verify that your model does not trigger the subsystem at the first time step.

If your model triggers the subsystem at the first time step, the Discrete Derivative block generates a divide-by-zero warning message. This behavior occurs because the time step at  $t = 0$  is zero.

- When the **Sample time type** parameter of the trigger port is periodic, your model can trigger the subsystem at any time step.


## Data Type Support

The Discrete Derivative block supports all numeric Simulink data types, including fixed-point data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

The **Main** pane of the Discrete Derivative block dialog box appears as follows:

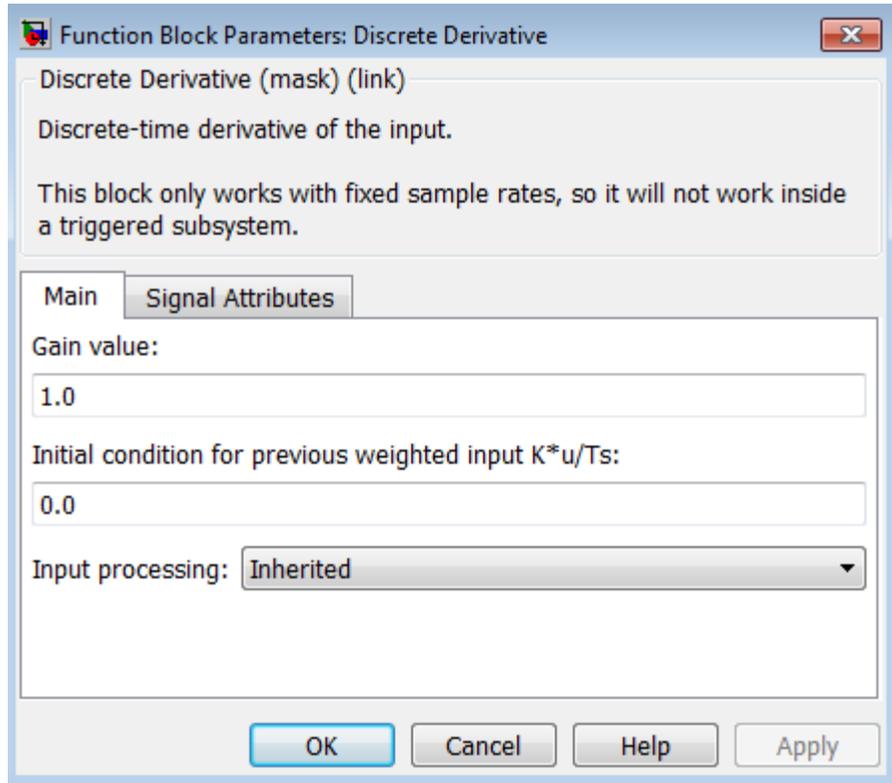

### Gain value

Scaling factor used to weight the block's input at the current time step.

### Initial condition for previous weighted input $K \cdot u / T_s$

Set the initial condition for the previous scaled input.

## Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- **Elements as channels (sample based)** — Treat each element of the input as a separate channel (sample-based processing).
- **Columns as channels (frame based)** — Treat each column of the input as a separate channel (frame-based processing).

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

---


Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

Input Signal $u$	Input Processing Mode	Block Works?
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

The **Signal Attributes** pane of the Discrete Derivative block dialog box appears as follows:

# Discrete Derivative

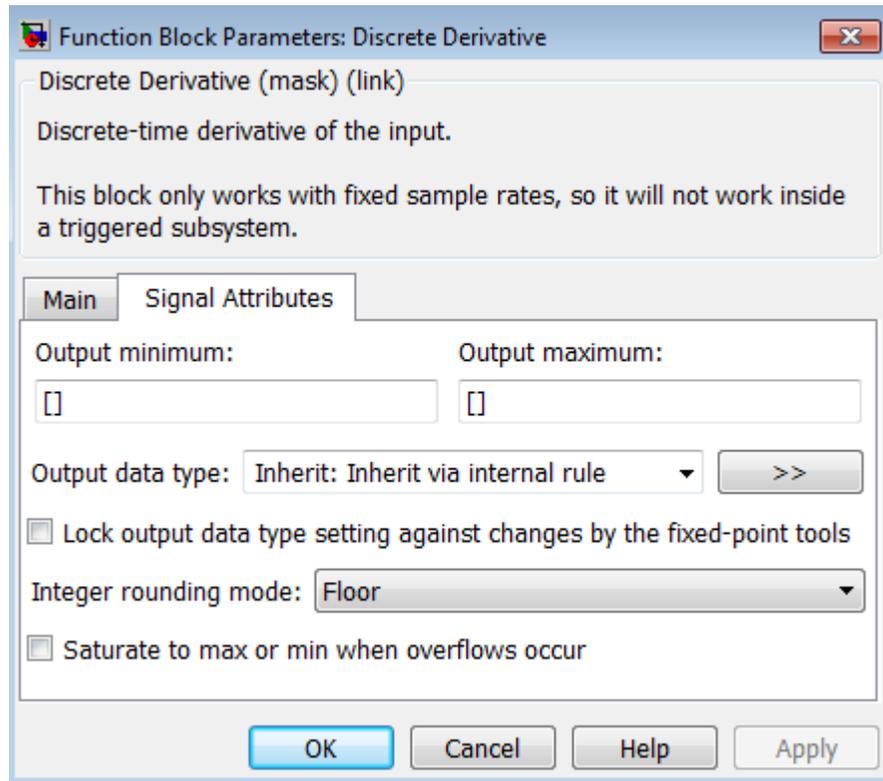

## Output minimum

Specify the minimum value that the block should output. The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output maximum

Specify the maximum value that the block should output. The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” in *Simulink User’s Guide* for more information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate to max or min when overflows occur

Select to have overflows saturate to the maximum or minimum value that the data type can represent. Otherwise, overflows wrap.

# Discrete Derivative

---

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.


<b>Characteristics</b>	Direct Feedthrough	Yes
	Scalar Expansion	Yes, of inputs and gain

**See Also**      Derivative

**Purpose** Model Infinite Impulse Response (IIR) filters

**Library** Discrete

## Description

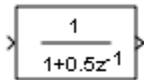

The Discrete Filter block independently filters each channel of the input signal with the specified digital IIR filter. You can specify the filter structure as one of | Direct form I | Direct form I transposed | Direct form II | Direct form II transposed. The block implements static filters with fixed coefficients. You can tune the coefficients of these static filters.

This block filters each channel of the input signal independently over time. The **Input processing** parameter allows you to specify how the block treats each element of the input. You can specify treating input elements as an independent channel (sample-based processing), or treating each column of the input as an independent channel (frame-based processing). To perform frame-based processing, you must have a DSP System Toolbox license.

The output dimensions equal those of the input, except when you specify a matrix of filter taps for the **Numerator coefficients** parameter. When you do so, the output dimensions depend on the number of different sets of filter taps you specify.

Use the **Numerator coefficients** parameter to specify the coefficients of the discrete filter numerator polynomial. Use the **Denominator coefficients** parameter to specify the coefficients of the denominator polynomial of the function. The **Denominator coefficients** parameter must be a vector of coefficients.

Specify the coefficients of the numerator and denominator polynomials in ascending powers of  $z^{-1}$ . The Discrete Filter block lets you use polynomials in  $z^{-1}$  (the delay operator) to represent a discrete system. This method is the one that signal processing engineers typically use. Conversely, the Discrete Transfer Fcn block lets you use polynomials in  $z$  to represent a discrete system. This method is the one that control engineers typically use. When the numerator and denominator polynomials have the same length, the two methods are identical.

# Discrete Filter

## Specifying Initial States

In **Dialog parameters** and **Input port(s)** modes, the block initializes the internal filter states to zero by default, which is equivalent to assuming past inputs and outputs are zero. You can optionally use the **Initial states** parameter to specify nonzero initial states for the filter delays.

To determine the number of initial state values you must specify, and how to specify them, see the following table on Valid Initial States and Number of Delay Elements (Filter States) on page 1-406. The **Initial states** parameter can take one of four forms as described in the following table.

### Valid Initial States

Initial state	Examples	Description
Scalar	5 Each delay element for each channel is set to 5.	The block initializes all delay elements in the filter to the scalar value.
Vector (for applying the same delay elements to each channel)	For a filter with two delay elements: $[d_1 \ d_2]$ The delay elements for all channels are d1 and d2.	Each vector element specifies a unique initial condition for a corresponding delay element. The block applies the same vector of initial conditions to each channel of the input signal. The vector length must equal the number of delay elements in the filter (specified in the table Number of Delay Elements (Filter States) on page 1-406).

## Valid Initial States (Continued)

Initial state	Examples	Description
Vector or matrix (for applying different delay elements to each channel)	<p>For a 3-channel input signal and a filter with two delay elements:</p> $[d_1 \ d_2 \ D_1 \ D_2 \ d_1 \ d_2] \text{ or}$ $\begin{bmatrix} d_1 & D_1 & d_1 \\ d_2 & D_2 & d_2 \end{bmatrix}$ <ul style="list-style-type: none"> <li>• The delay elements for channel 1 are <math>d_1</math> and <math>d_2</math>.</li> <li>• The delay elements for channel 2 are <math>D_1</math> and <math>D_2</math>.</li> <li>• The delay elements for channel 3 are <math>d_1</math> and <math>d_2</math>.</li> </ul>	<p>Each vector or matrix element specifies a unique initial condition for a corresponding delay element in a corresponding channel:</p> <ul style="list-style-type: none"> <li>• The vector length must be equal to the product of the number of input channels and the number of delay elements in the filter (specified in the table Number of Delay Elements (Filter States) on page 1-406).</li> <li>• The matrix must have the same number of rows as the number of delay elements in the filter (specified in the table Number of Delay Elements (Filter States) on page 1-406), and must have one column for each channel of the input signal.</li> </ul>
Empty matrix	<p>[ ]</p> <p>Each delay element for each channel is set to 0.</p>	<p>The empty matrix, [ ], is equivalent to setting the <b>Initial conditions</b> parameter to the scalar value 0.</p>

The number of delay elements (filter states) per input channel depends on the filter structure, as indicated in the following table.

# Discrete Filter

## Number of Delay Elements (Filter States)

Filter Structure	Number of Delay Elements per Channel
Direct form I Direct form I transposed	<ul style="list-style-type: none"> <li>• number of zeros - 1</li> <li>• number of poles - 1</li> </ul>
Direct form II Direct form II transposed	max(number of zeros, number of poles)-1

The following tables describe the valid initial states for different sizes of input and different number of channels. These tables provide this information according to whether you set the **Input processing** parameter to frame based or sample based.

## Frame-Based Processing

Input	Number of Channels	Valid Initial States (Dialog Box)	Valid Initial States (Input Port)
<ul style="list-style-type: none"> <li>• Column vector (<math>K</math>-by-1)</li> <li>• Unoriented vector (<math>K</math>)</li> </ul>	1	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Column vector (<math>M</math>-by-1)</li> <li>• Row vector (1-by-<math>M</math>)</li> </ul>	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Column vector (<math>M</math>-by-1)</li> </ul>
<ul style="list-style-type: none"> <li>• Row vector (1-by-<math>N</math>)</li> <li>• Matrix (<math>K</math>-by-<math>N</math>)</li> </ul>	$N$	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Column vector (<math>M</math>-by-1)</li> <li>• Row vector (1-by-<math>M</math>)</li> </ul>	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Matrix (<math>M</math>-by-<math>N</math>)</li> </ul>

## Frame-Based Processing (Continued)

Input	Number of Channels	Valid Initial States (Dialog Box)	Valid Initial States (Input Port)
		<ul style="list-style-type: none"> <li>Matrix (<math>M</math>-by-<math>N</math>)</li> </ul>	

## Sample-Based Processing

Input	Number of Channels	Valid Initial States (Dialog Box)	Valid Initial States (Input Port)
<ul style="list-style-type: none"> <li>Scalar</li> </ul>	1	<ul style="list-style-type: none"> <li>Scalar</li> <li>Column vector (<math>M</math>-by-1)</li> <li>Row vector (1-by-<math>M</math>)</li> </ul>	<ul style="list-style-type: none"> <li>Scalar</li> <li>Column vector (<math>M</math>-by-1)</li> <li>Row vector (1-by-<math>M</math>)</li> </ul>
<ul style="list-style-type: none"> <li>Row vector (1-by-<math>N</math>)</li> <li>Column vector (<math>N</math>-by-1)</li> <li>Unoriented vector (<math>N</math>)</li> </ul>	$N$	<ul style="list-style-type: none"> <li>Scalar</li> <li>Column vector (<math>M</math>-by-1)</li> <li>Row vector (1-by-<math>M</math>)</li> <li>Matrix (<math>M</math>-by-<math>N</math>)</li> </ul>	<ul style="list-style-type: none"> <li>Scalar</li> </ul>
<ul style="list-style-type: none"> <li>Matrix (<math>K</math>-by-<math>N</math>)</li> </ul>	$K \times N$	<ul style="list-style-type: none"> <li>Scalar</li> <li>Column vector (<math>M</math>-by-1)</li> </ul>	<ul style="list-style-type: none"> <li>Scalar</li> </ul>

# Discrete Filter

## Sample-Based Processing (Continued)


Input	Number of Channels	Valid Initial States (Dialog Box)	Valid Initial States (Input Port)
		<ul style="list-style-type: none"><li>• Row vector (1-by-<math>M</math>)</li><li>• Matrix (<math>M</math>-by-<math>(K \times N)</math>)</li></ul>	

When the **Initial states** is a scalar, the block initializes all filter states to the same scalar value. Enter 0 to initialize all states to zero. When the **Initial states** is a vector or a matrix, each vector or matrix element specifies a unique initial state. This unique state corresponds to a delay element in a corresponding channel:

- The vector length must equal the number of delay elements in the filter,  $M = \max(\text{number of zeros, number of poles})$ .
- The matrix must have the same number of rows as the number of delay elements in the filter,  $M = \max(\text{number of zeros, number of poles})$ . The matrix must also have one column for each channel of the input signal.

The following example shows the relationship between the initial filter output and the initial input and state. Given an initial input  $u_1$ , the first output  $y_1$  is related to the initial state  $[x_1, x_2]$  and initial input by:

$$y_1 = b_1 \left[ \frac{(u_1 - a_2 x_1 - a_3 x_2)}{a_1} \right] + b_2 x_1 + b_3 x_2$$

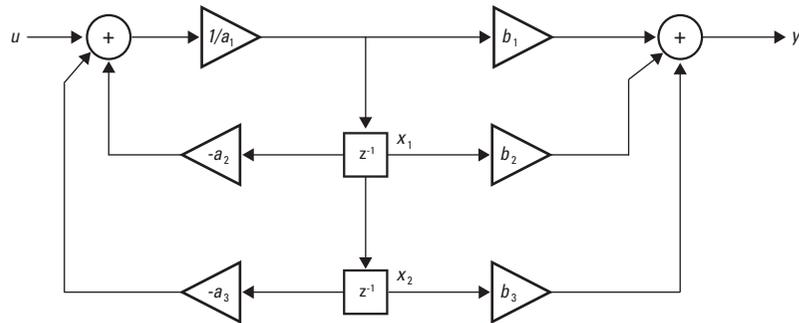

To see an example of how to set initial conditions as a vector:

- Click on the model `ex_discretefilter_nonzero_ic`, or type it at the MATLAB command prompt.
- Double-click on the Discrete Filter block, and set the parameters. The following shows how to set the initial conditions of the Discrete Filter block to  $[1 \ 2]$ .

# Discrete Filter

Function Block Parameters: Discrete Filter

Discrete Filter

Independently filter each channel of the input over time using a discrete IIR filter. Specify the numerator and denominator coefficients in ascending order of powers of  $1/z$ .

A DSP System Toolbox license is required to use a filter structure other than Direct form II.

Main | Data Types | State Attributes

Filter structure: Direct form II

Data

	Source	Value
Numerator:	Dialog	[0.29 0.59 0.29]
Denominator:	Dialog	[1 0 0.17]
Initial states:	Dialog	[1 2]

External reset: None


Input processing: Elements as channels (sample based)

Optimize by skipping divide by leading denominator coefficient (a0)

Sample time (-1 for inherited): -1


OK Cancel Help Apply

- Simulate the model, by left-clicking the green simulation icon.

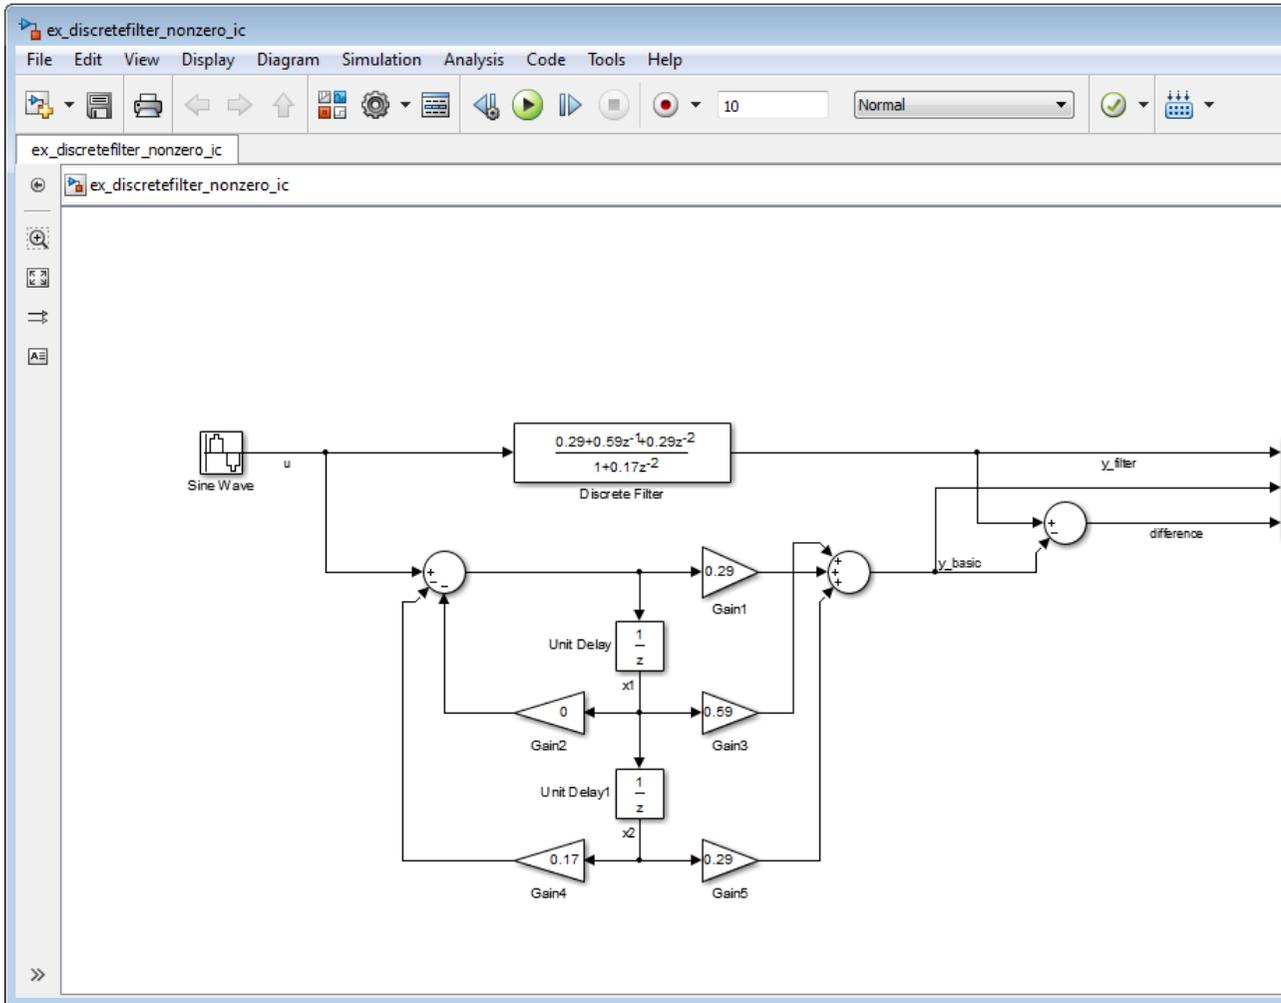

- Double-click the scope. You can see that the difference between the signal filtered by the Discrete Filter block, and the signal from the filter's building blocks, is zero.

# Discrete Filter

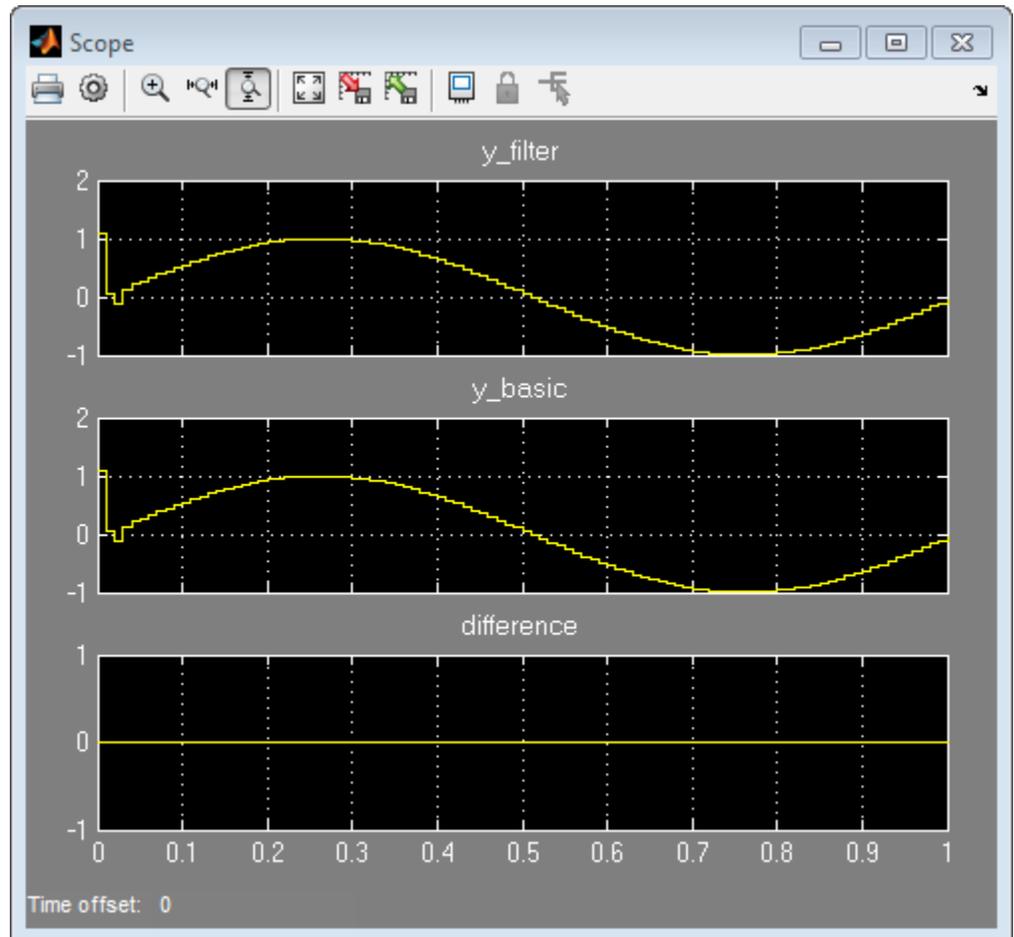


This demonstrates that you can enter the initial conditions of the Discrete Filter block as a vector of  $[1 \ 2]$ . You can also set the initial condition of the first Unit Delay to 1 and the second Unit Delay to 2. The resulting outputs are the same.

## Data Type Support

The Discrete Filter block accepts and outputs real and complex signals of any signed numeric data type that Simulink supports. The block supports the same types for the numerator and denominator coefficients.


Numerator and denominator coefficients must have the same complexity. They can have different word lengths and fraction lengths.

The following diagrams show the filter structure and the data types used within the Discrete Filter block for fixed-point signals.

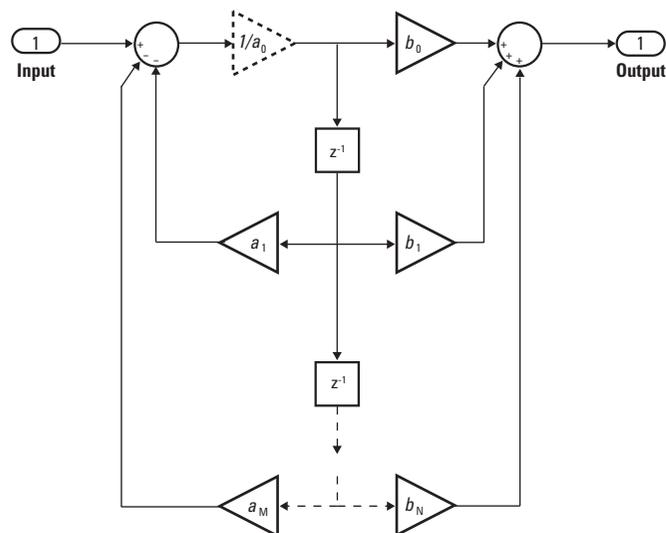

The block omits the dashed divide when you select the **Optimize by skipping divide by leading denominator coefficient (a0)** parameter.

# Discrete Filter

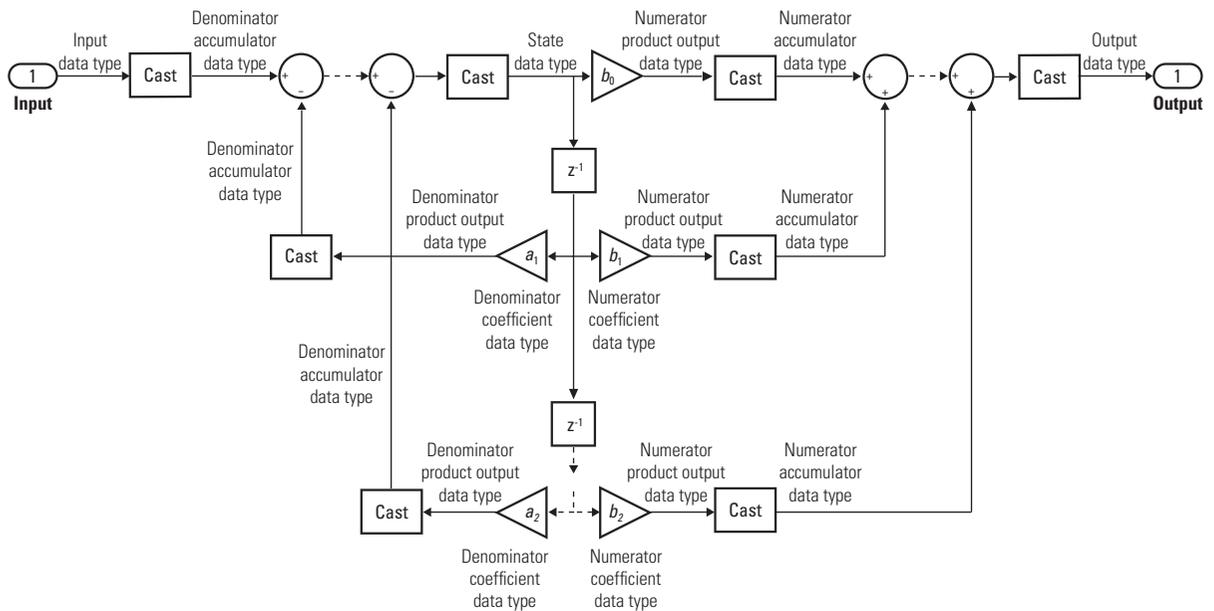

## Parameters and Dialog Box

The Main pane of the Discrete Filter block dialog box appears as follows.

Function Block Parameters: Discrete Filter

### Discrete Filter

Independently filter each channel of the input over time using a discrete IIR filter. Specify the numerator and denominator coefficients in ascending order of powers of  $1/z$ .

Main | **Data Types** | State Attributes

Data

	Source	Value
Numerator:	Dialog	[1]
Denominator:	Dialog	[1 0.5]
Initial states:	Dialog	0

Algorithm

External reset: None

Input processing: Elements as channels (sample based)

Optimize by skipping divide by leading denominator coefficient (a0)

Sample time (-1 for inherited): 1

OK Cancel Help

# Discrete Filter

---

## Numerator

Numerator coefficients of the discrete filter. To specify the coefficients, set the **Source** to Dialog. Then, enter the coefficients in **Value** as descending powers of  $z$ . Use a row vector to specify the coefficients for a single numerator polynomial.

## Denominator

Denominator coefficients of the discrete filter. To specify the coefficients, set the **Source** to Dialog. Then, enter the coefficients in **Value** as descending powers of  $z$ . Use a row vector to specify the coefficients for a single denominator polynomial.

## Initial states

If the **Source** is Dialog, then, in **Value**, specify the initial states of the filter states. To learn how to specify initial states, see “Specifying Initial States” on page 1-404.

If the **Source** is Input port, then you do not need to specify **Value**.

## External reset

Specify the trigger event to use to reset the states to the initial conditions.

Reset Mode	Behavior
None	No reset.
Rising	Reset on a rising edge.
Falling	Reset on a falling edge.
Either	Reset on either a rising or falling edge.

Reset Mode	Behavior
Level	Reset in either of these cases: <ul style="list-style-type: none"><li>• when there is a nonzero at the current time step</li><li>• when the time step value changes from nonzero at the previous time step to zero at the current time step</li></ul>
Level hold	Reset when nonzero at the current time step.

The reset signal must be a scalar of type `single`, `double`, `boolean`, or `integer`. Fixed point data types, except for `ufix1`, are not supported.

### Input processing

Specify whether the block performs sample- or frame-based processing.

- **Elements as channels (sample based)** — Process each element of the input as an independent channel.
- **Columns as channels (frame based)** — Process each column of the input as an independent channel.

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

# Discrete Filter

---

## **Optimize by skipping divide by leading denominator coefficient (a0)**

Select when the leading denominator coefficient,  $a_0$ , equals 1. This parameter optimizes your code.


When you select this check box, the block does not perform a divide-by- $a_0$  either in simulation or in the generated code. An error occurs if  $a_0$  is not equal to one.

When you clear this check box, the block is fully tunable during simulation. It performs a divide-by- $a_0$  in both simulation and code generation.

## **Sample time**

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in “How Simulink Works” in the *Simulink User’s Guide*.

The **Data Types** pane of the Discrete Filter block dialog box appears as follows.

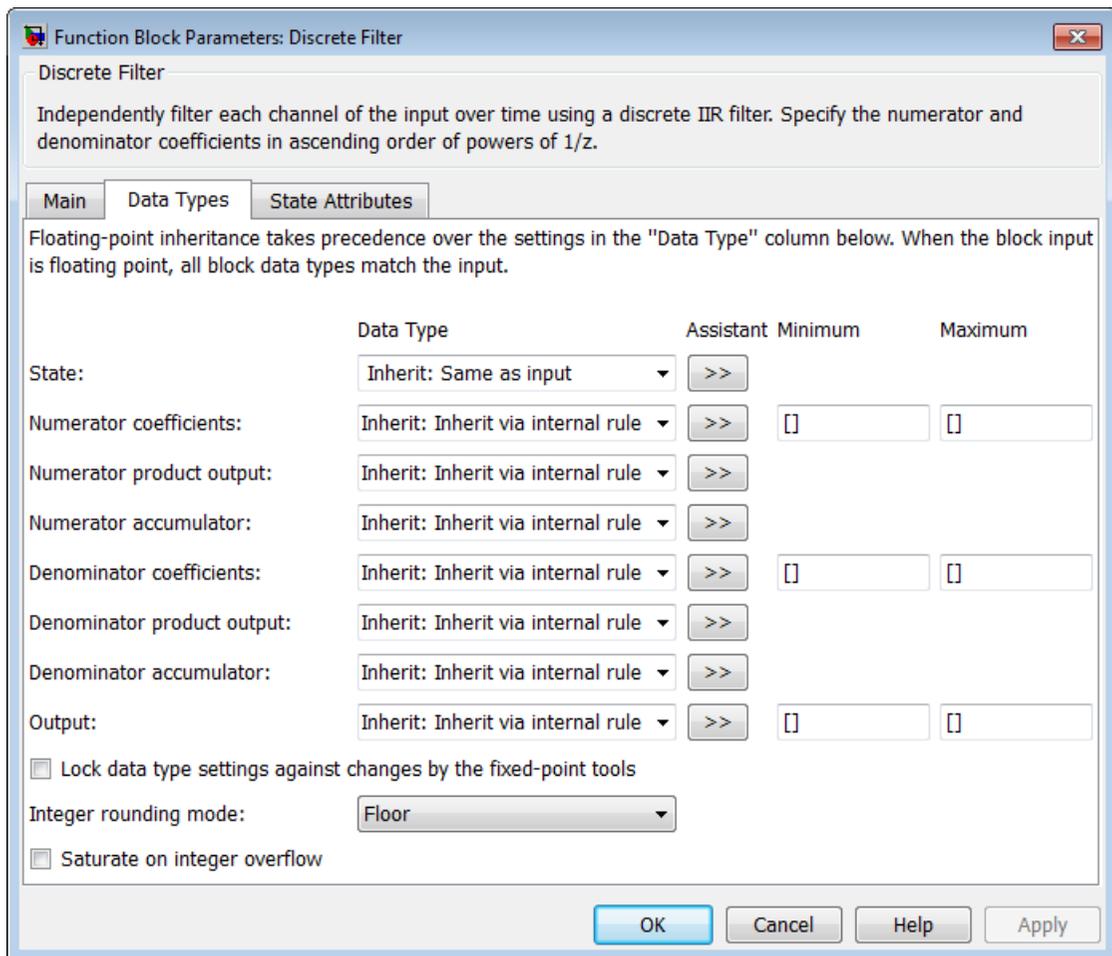

## State


Specify the state data type. You can set this parameter to:

- A rule that inherits a data type, for example, `Inherit: Same as input`
- A built-in integer, for example, `int8`

# Discrete Filter

---

- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

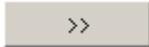
Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **State** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

## Numerator coefficients

Specify the numerator coefficient data type. You can set this parameter to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in integer, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

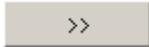Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Numerator coefficients** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

## Numerator coefficient minimum

Specify the minimum value that a numerator coefficient can have. The default value is `[]` (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

### **Numerator coefficient maximum**


Specify the maximum value that a numerator coefficient can have. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

### **Numerator product output**

Specify the product output data type for the numerator coefficients. You can set this parameter to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

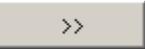Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Numerator product output** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

### **Numerator accumulator**

Specify the accumulator data type for the numerator coefficients. You can set this parameter to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`

# Discrete Filter

---

- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Numerator accumulator** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

## Denominator coefficients

Specify the denominator coefficient data type. You can set this parameter to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in integer, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Denominator coefficients** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

## Denominator coefficient minimum

Specify the minimum value that a denominator coefficient can have. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

## Denominator coefficient maximum

Specify the maximum value that a denominator coefficient can have. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

## Denominator product output

Specify the product output data type for the denominator coefficients. You can set this parameter to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`


Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Denominator product output** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

## Denominator accumulator

Specify the accumulator data type for the denominator coefficients. You can set this parameter to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

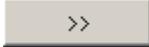
Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Denominator accumulator** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

## Output

Specify the output data type. You can set this parameter to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

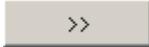Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output** parameter.

See “Specify Block Output Data Types” for more information.

## **Output minimum**

Specify the minimum value that the block can output. The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## **Output maximum**

Specify the maximum value that the block can output. The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## **Lock data type settings against changes by the fixed-point tools**

Select to lock all data type settings of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Lock the Output Data Type Setting” in the Fixed-Point Designer documentation.

## **Integer rounding mode**

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

# Discrete Filter

## Saturate on integer overflow


Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box selected, the block output saturates at 127. Similarly, the block output saturates at a minimum output value of -128.
Do not select this check box.	<p>You want to optimize efficiency of your generated code.</p> <p>You want to avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.</p>	Overflows wrap to the appropriate value that is representable by the data type.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value as <code>int8</code> , which can produce an unintended result. For example, a block result of 130 (binary 1000 0010)

Action	Reasons for Taking This Action	What Happens for Overflows	Example
			expressed as int8, is -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

The **State Attributes** pane of the Discrete Filter block dialog box appears as follows.

# Discrete Filter

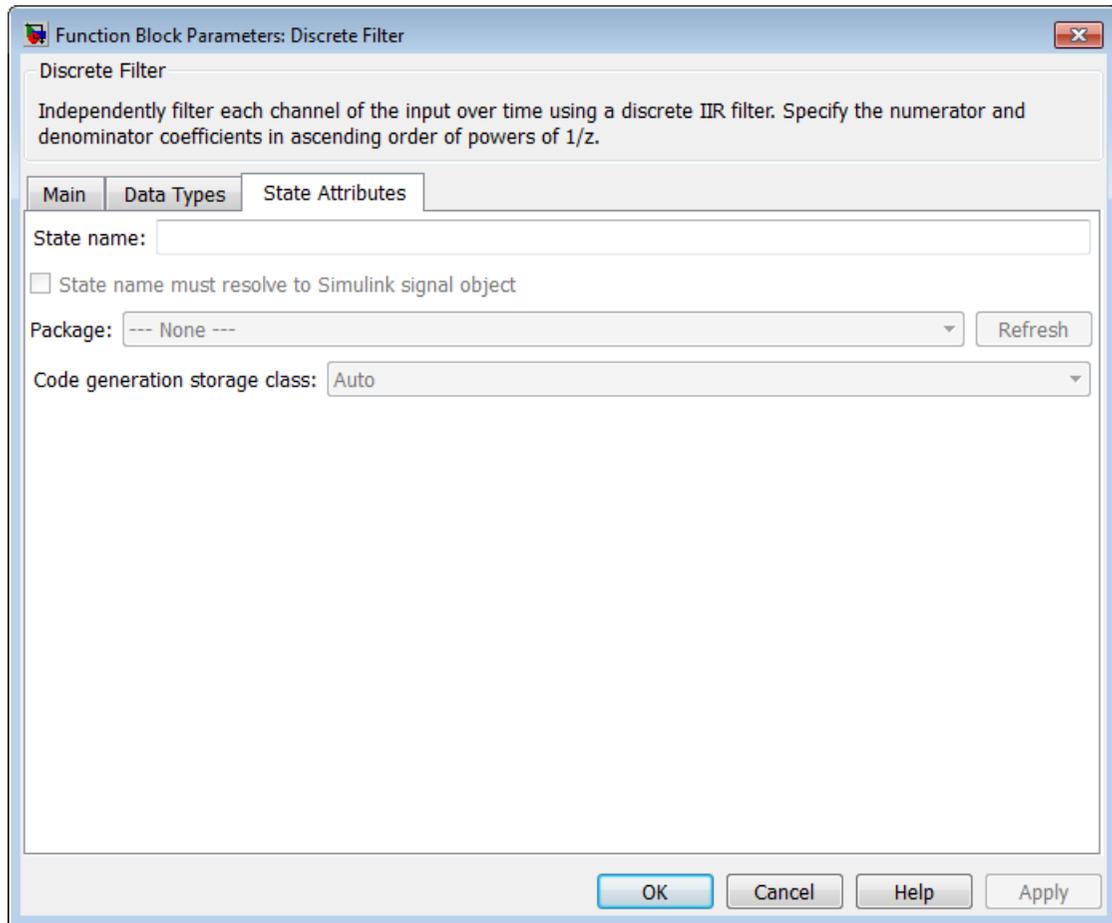

## State name

Use this parameter to assign a unique name to the block state. The default is ' '. When this field is blank, no name is assigned. When using this parameter, remember these considerations:

- A valid identifier starts with an alphabetic or underscore character, followed by alphanumeric or underscore characters.

- The state name applies only to the selected block.

This parameter enables **State name must resolve to Simulink signal object** when you click **Apply**.

For more information, see “States” in the Simulink Coder documentation.

### **State name must resolve to Simulink signal object**

Select this check box to require that the state name resolve to a Simulink signal object. This check box is cleared by default.

**State name** enables this parameter.

Selecting this check box disables **Code generation storage class**.

### **Package**

Select a package that defines the custom storage class you want to apply. If you have defined any packages of your own, click **Refresh**. This action adds all user-defined packages on your search path to the package list.

### **Code generation storage class**

Select custom storage class for state.

**Default:** Auto

#### **Auto**

Auto is the appropriate storage class for states that you do not need to interface to external code.

#### **SimulinkGlobal**

*model\_P* initializes the state to its corresponding value in the workspace.

#### **ExportedGlobal**

State is stored in a global variable

# Discrete Filter

---

## ImportedExtern

*model\_private.h* declares the state as an extern variable.

## ImportedExternPointer

*model\_private.h* declares the state as an extern pointer.

## Default

A non-editable placeholder storage class is created.

## BitField

A struct declaration is created that embeds Boolean data.

## Volatile

Volatile type qualifier is used in state declaration.

## ExportToFile

Header (.h) file containing global variable declarations is generated with user-specified name.

## ImportFromFile

Predefined header (.h) files containing global variable declarations are included.

## FileScope

A static qualifier is generated in front of the state declaration to make the state visible only to the current file.

## Struct

A struct declaration is created to encapsulate parameter or signal object data.

## StructVolatile

Volatile type qualifier is used in struct declaration.

## GetSet

Supports specialized function calls to read and write memory.

**State name** enables this parameter.

The list of valid storage classes differs based on the **Package** selection.

Setting this parameter to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables **Code generation storage type qualifier**.

### Code generation storage type qualifier

Specify a Simulink Coder storage type qualifier. The default is `'`. When this field is blank, no qualifier is assigned.

The Simulink Coder product does not check this string for errors. Thus, whatever value you enter appears automatically in the variable declaration.

Setting **Code generation storage class** to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables this parameter.

During simulation, the block uses the following values:

- The initial value of the signal object to which the state name resolves
- Minimum and maximum values of the signal object

For more information, see “States” in the Simulink Coder documentation.

## Characteristics

Direct Feedthrough	Only when the leading numerator coefficient does not equal zero
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of initial states
States	See “Specifying Initial States” on page 1-404
Dimensionalized	Yes
Zero-Crossing Detection	No


# Discrete Filter

## Filter Structure Diagrams

The diagrams in the following sections show the filter structures supported by the Digital Filter block. They also show the data types used in the filter structures for fixed-point signals. You can set the coefficient, output, accumulator, product output, and state data types shown in these diagrams in the block dialog.

- “IIR direct form I” on page 1-432
- “IIR direct form I transposed” on page 1-435
- “IIR direct form II” on page 1-438
- “IIR direct form II transposed” on page 1-440


### IIR direct form I

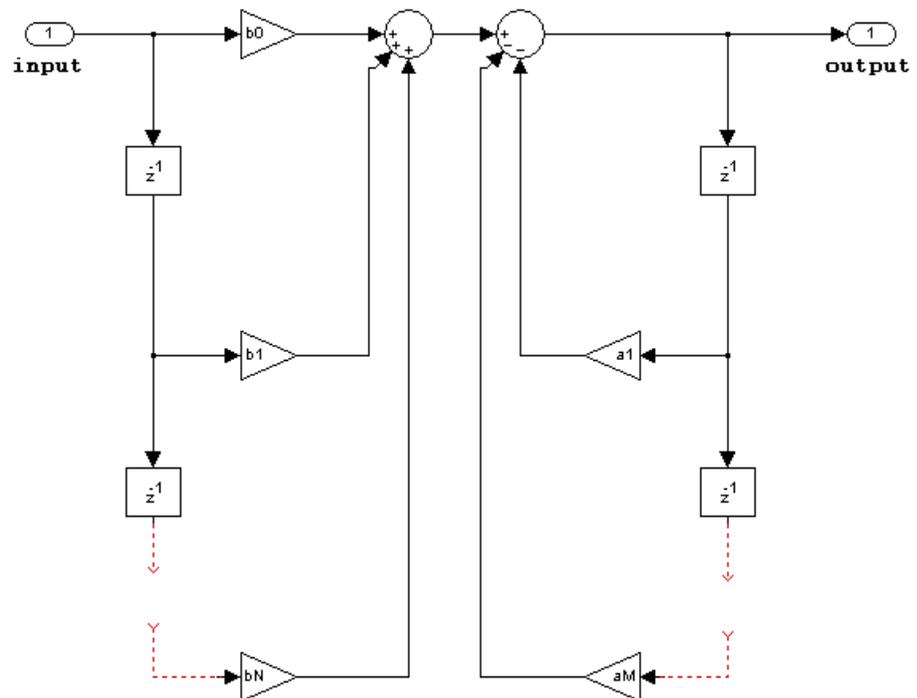


The following constraints are applicable when processing a fixed-point signal with this filter structure:

- Inputs can be real or complex.
- Numerator and denominator coefficients can be real or complex.
- Numerator and denominator coefficients must have the same complexity characteristics.
  - When the numerator and denominator coefficients are specified using input ports and have different complexities from each other, you get an error.
  - When the numerator and denominator coefficients are specified in the dialog box and have different complexities from each other, the block does not error. Instead, it processes the filter as if two sets of complex coefficients are provided. The real-valued coefficient set is treated as if it is a complex vector with zero-valued imaginary parts.
- Numerator and denominator coefficients must have the same word length. They can have different fraction lengths.
- The State data type cannot be specified on the block mask for this structure. Doing so is not possible because the input and output states have the same data types as the input and output buffers.

# Discrete Filter

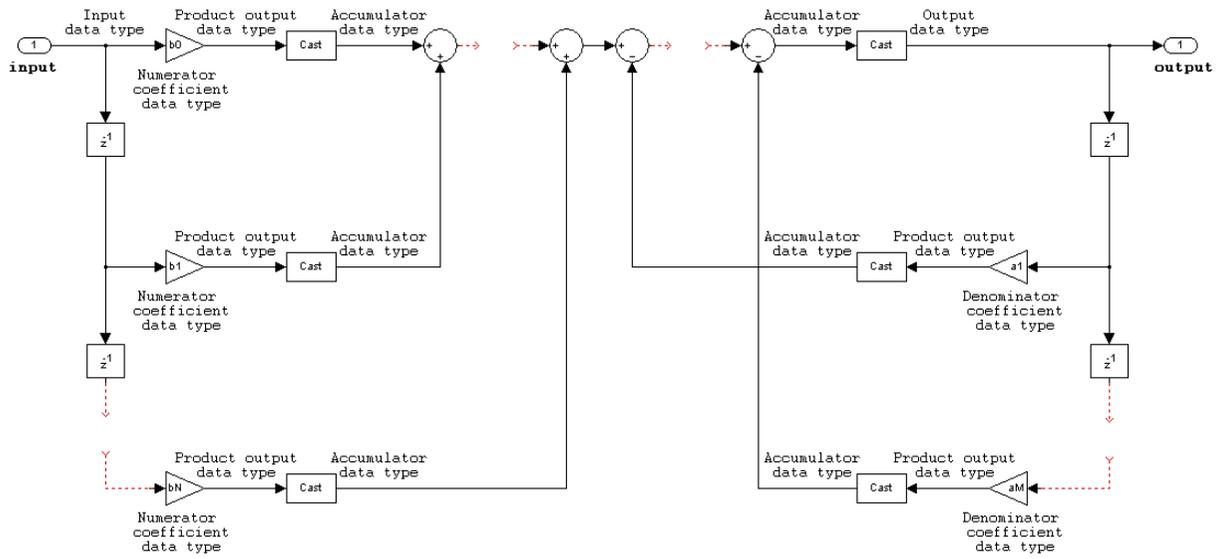

## IIR direct form I transposed

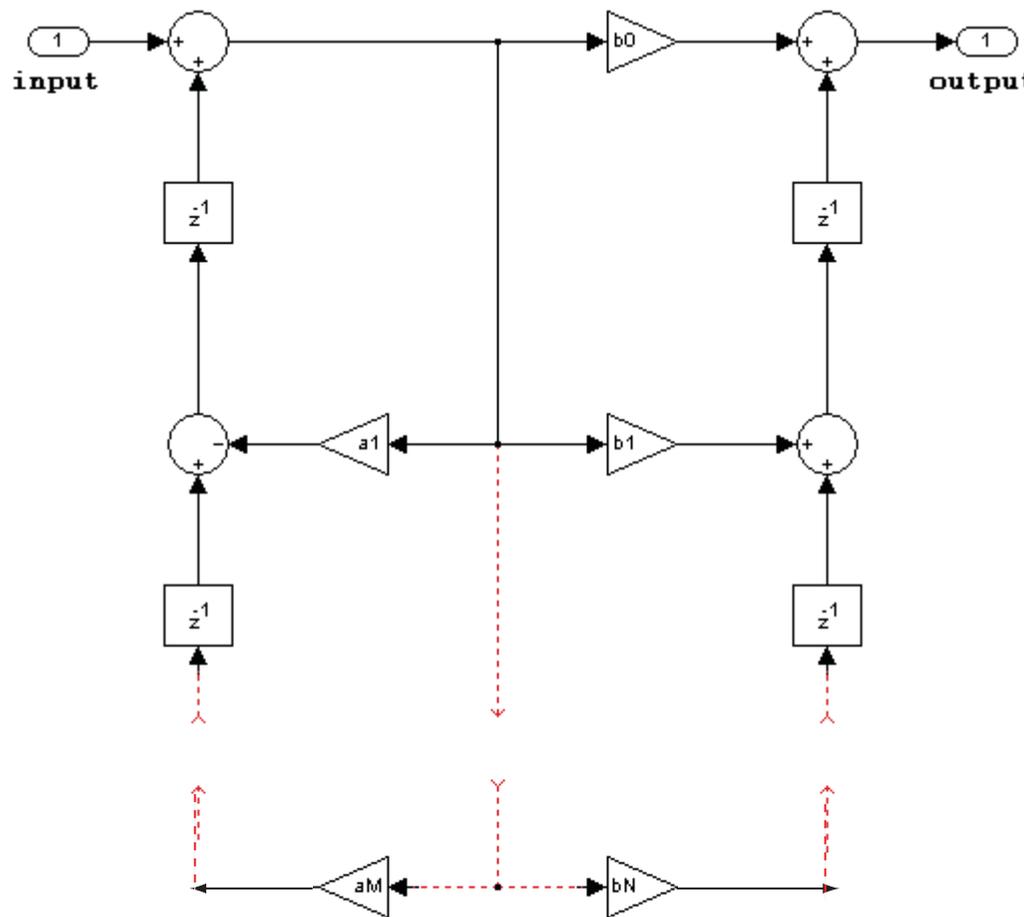

# Discrete Filter

---


The following constraints are applicable when processing a fixed-point signal with this filter structure:

- Inputs can be real or complex.
- Numerator and denominator coefficients can be real or complex.
- Numerator and denominator coefficients must have the same complexity characteristics.
  - When the numerator and denominator coefficients are specified using input ports and have different complexities from each other, you get an error.
  - When the numerator and denominator coefficients are specified in the dialog box and have different complexities from each other, the block does not error. Instead, it processes the filter as if two sets of complex coefficients are provided. The real-valued coefficient set is treated as if it is a complex vector with zero-valued imaginary parts.
- States are complex when either the input or the coefficients are complex.
- Numerator and denominator coefficients must have the same word length. They can have different fraction lengths.



# Discrete Filter

## IIR direct form II

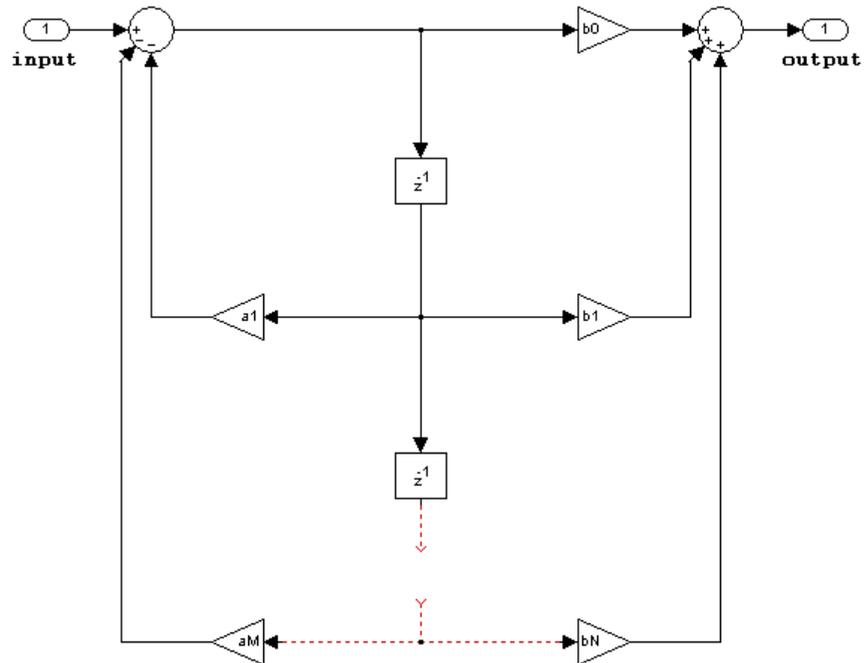


The following constraints are applicable when processing a fixed-point signal with this filter structure:

- Inputs can be real or complex.
- Numerator and denominator coefficients can be real or complex.
- Numerator and denominator coefficients must have the same complexity characteristics.
  - When the numerator and denominator coefficients are specified using input ports and have different complexities from each other, you get an error.



# Discrete Filter

## IIR direct form II transposed

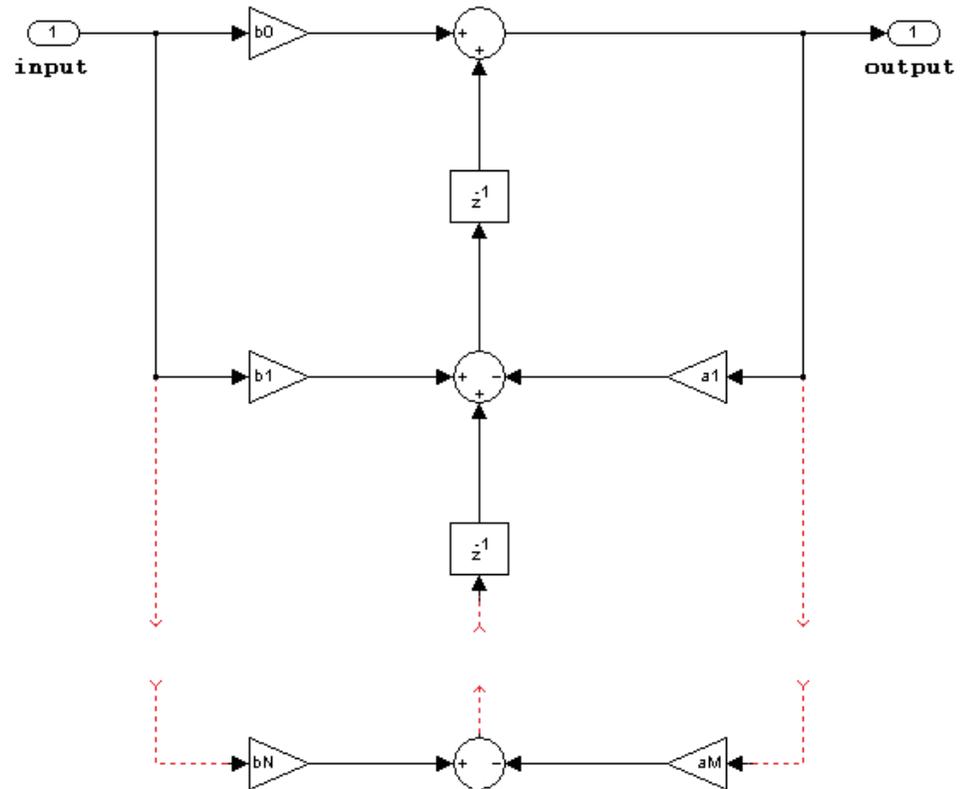

The following constraints are applicable when processing a fixed-point signal with this filter structure:

- Inputs can be real or complex.

- Numerator and denominator coefficients can be real or complex.
- Numerator and denominator coefficients must have the same complexity characteristics.
  - When the numerator and denominator coefficients are specified using input ports and have different complexities from each other, you get an error.
  - When the numerator and denominator coefficients are specified in the dialog box and have different complexities from each other, the block does not error. Instead, it processes the filter as if two sets of complex coefficients are provided. The real-valued coefficient set is treated as if it is a complex vector with zero-valued imaginary parts.
- States are complex when either the inputs or the coefficients are complex.
- Numerator and denominator coefficients must have the same word length. They can have different fraction lengths.



## Supported Data Types

- Double-precision floating point
- Single-precision floating point
- Fixed point (signed only)
- 8-, 16-, and 32-bit signed integers

## See Also

Allpole Filter	DSP System Toolbox
Digital Filter Design	DSP System Toolbox
Digital Filter	DSP System Toolbox
Discrete FIR Filter	Simulink
Filter Realization Wizard	DSP System Toolbox
<code>dsp.IIRFilter</code>	DSP System Toolbox
<code>dsp.AllpoleFilter</code>	DSP System Toolbox
<code>fdatool</code>	DSP System Toolbox
<code>fvtool</code>	Signal Processing Toolbox


# Discrete FIR Filter

---

**Purpose** Model FIR filters

**Library** Discrete

## Description

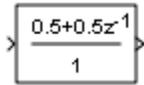

The Discrete FIR Filter block independently filters each channel of the input signal with the specified digital FIR filter. The block can implement static filters with fixed coefficients, as well as time-varying filters with coefficients that change over time. You can tune the coefficients of a static filter during simulation.

This block filters each channel of the input signal independently over time. The **Input processing** parameter allows you to specify whether the block treats each element of the input as an independent channel (sample-based processing), or each column of the input as an independent channel (frame-based processing). To perform frame-based processing, you must have a DSP System Toolbox license.

The output dimensions equal those of the input, except when you specify a matrix of filter taps for the **Coefficients** parameter. When you do so, the output dimensions depend on the number of different sets of filter taps you specify.

The outputs of this block numerically match the outputs of the DSP System Toolbox Digital Filter Design block and of the Signal Processing Toolbox™ `dfilt` object.

This block supports the Simulink state logging feature. See “States” in the *Simulink User’s Guide* for more information.

## Filter Structure Support

You can change the filter structure implemented with the Discrete FIR Filter block by selecting one of the following from the **Filter structure** parameter:

- Direct form
- Direct form symmetric
- Direct form antisymmetric

- Direct form transposed
- Lattice MA

You must have an available DSP System Toolbox license to run a model with any of these filter structures other than direct form.

## Specifying Initial States

The Discrete FIR Filter block initializes the internal filter states to zero by default, which has the same effect as assuming that past inputs and outputs are zero. You can optionally use the **Initial states** parameter to specify nonzero initial conditions for the filter delays.

To determine the number of initial states you must specify and how to specify them, see the table on valid initial states. The **Initial states** parameter can take one of the forms described in the next table.

### Valid Initial States

Initial Condition	Description
Scalar	The block initializes all delay elements in the filter to the scalar value.
Vector or matrix (for applying different delay elements to each channel)	<p>Each vector or matrix element specifies a unique initial condition for a corresponding delay element in a corresponding channel:</p> <ul style="list-style-type: none"> <li>• The vector length equal the product of the number of input channels and the number of delay elements in the filter, <code>#_of_filter_coeffs-1</code> (or <code>#_of_reflection_coeffs</code> for Lattice MA).</li> <li>• The matrix must have the same number of rows as the number of delay elements in the filter, <code>#_of_filter_coeffs-1</code> (<code>#_of_reflection_coeffs</code> for Lattice MA), and must have one column for each channel of the input signal.</li> </ul>

# Discrete FIR Filter


## Data Type Support

The Discrete FIR Filter block accepts and outputs real and complex signals of any numeric data type supported by Simulink. The block supports the same types for the coefficients.


The following diagrams show the filter structure and the data types used within the Discrete FIR Filter block for fixed-point signals.

### Direct Form

You cannot specify the state data type on the block mask for this structure because the input states have the same data types as the input.

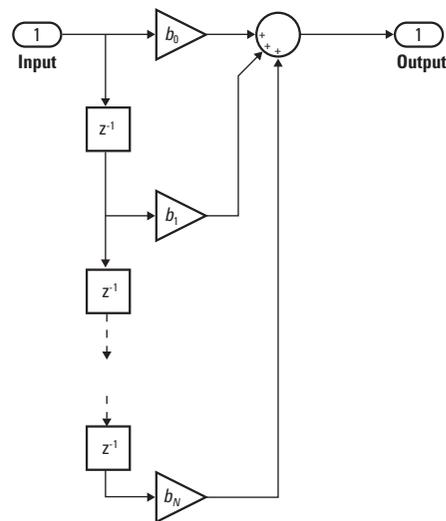

# Discrete FIR Filter

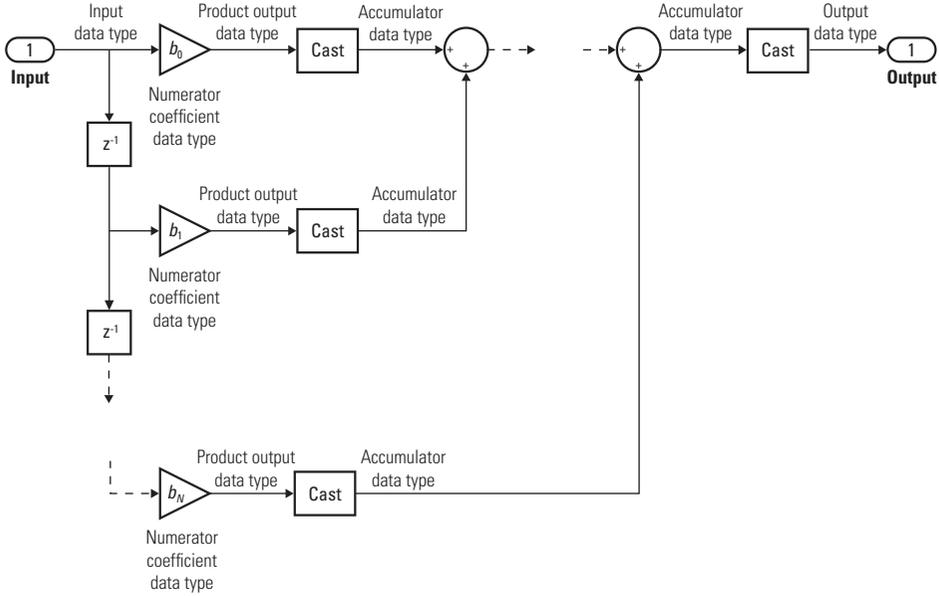


# Discrete FIR Filter


## Direct Form Symmetric

You cannot specify the state data type on the block mask for this structure because the input states have the same data types as the input.

It is assumed that the filter coefficients are symmetric. The block only uses the first half of the coefficients for filtering.

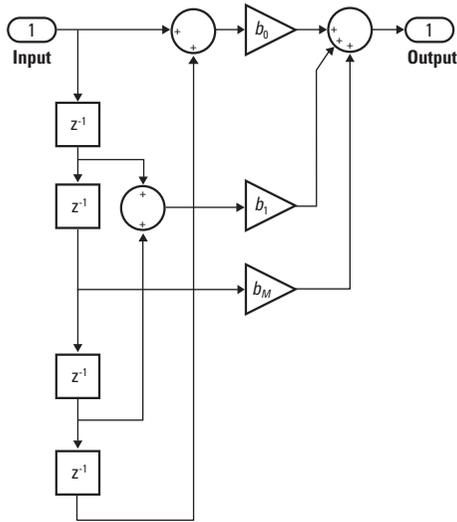


Even Order - Type I

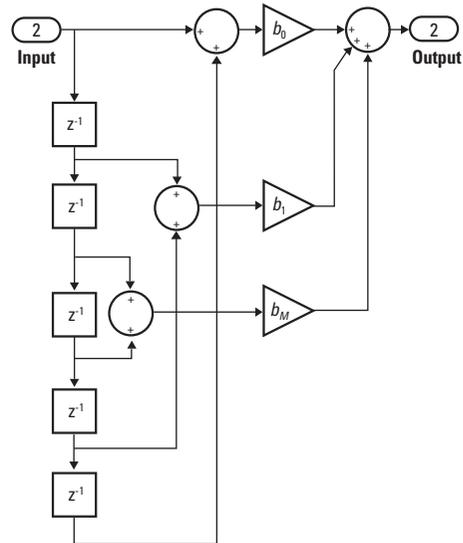


Odd Order - Type II

# Discrete FIR Filter

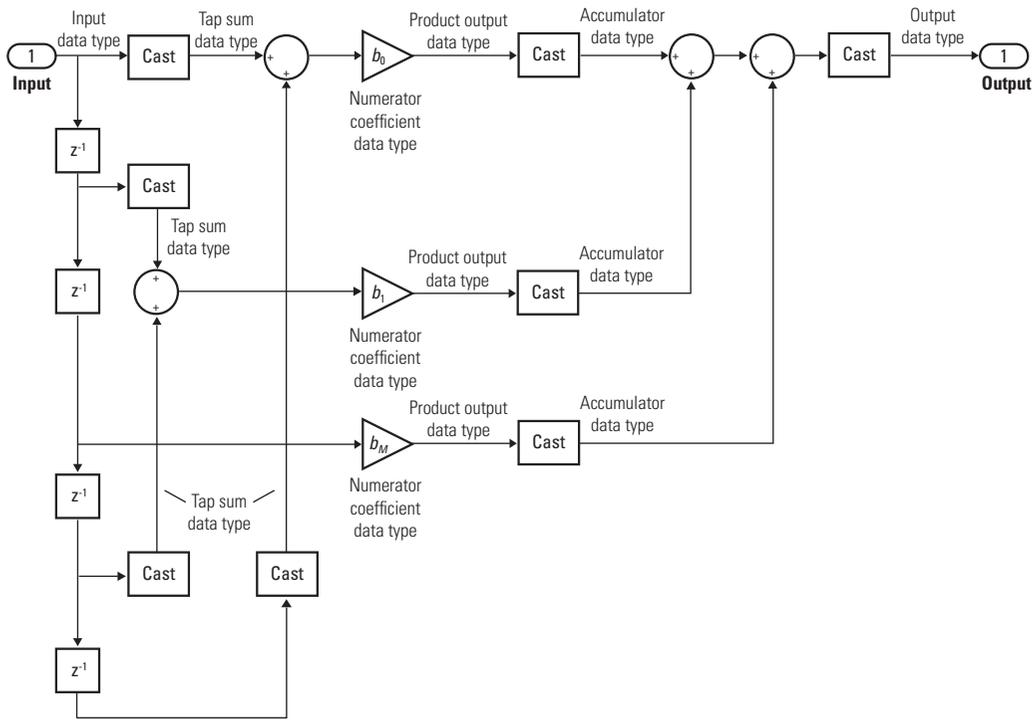

Even Order - Type I

# Discrete FIR Filter

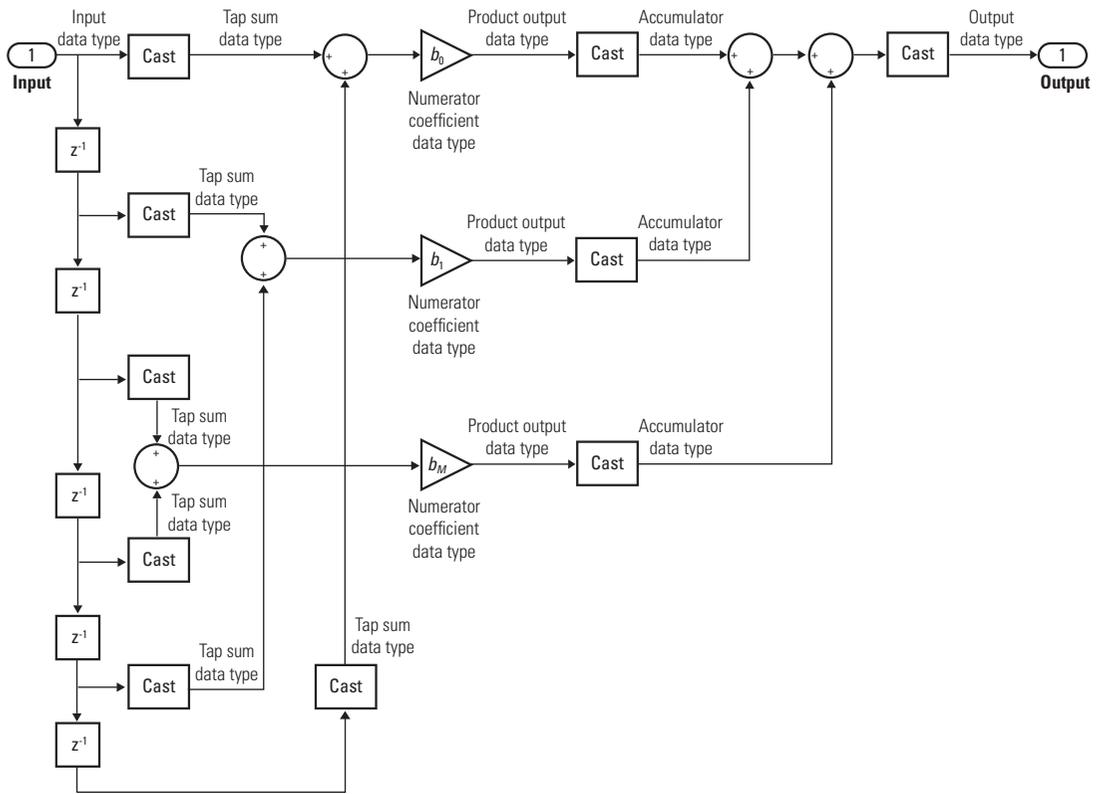


Odd Order - Type II


## Direct Form Antisymmetric

You cannot specify the state data type on the block mask for this structure because the input states have the same data types as the input.

It is assumed that the filter coefficients are antisymmetric. The block only uses the first half of the coefficients for filtering.

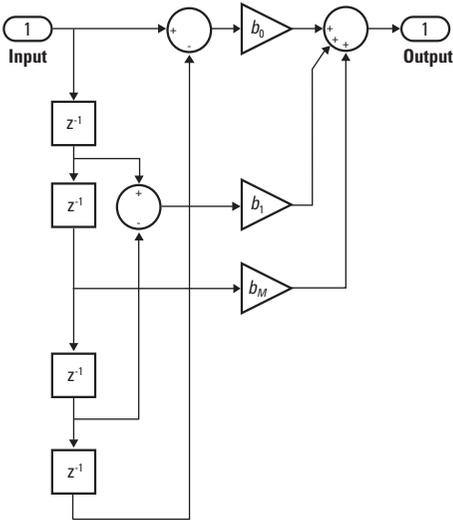


Even Order - Type III

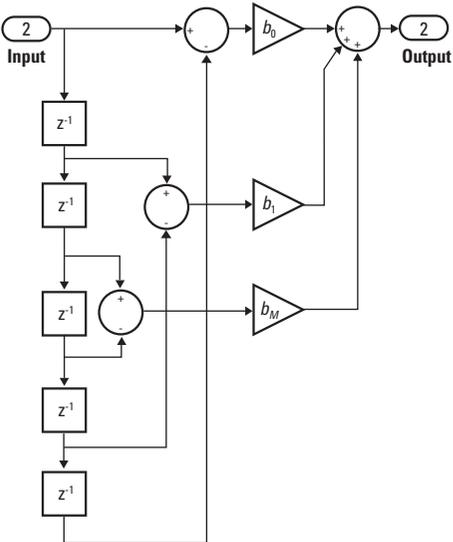


Odd Order - Type IV

# Discrete FIR Filter

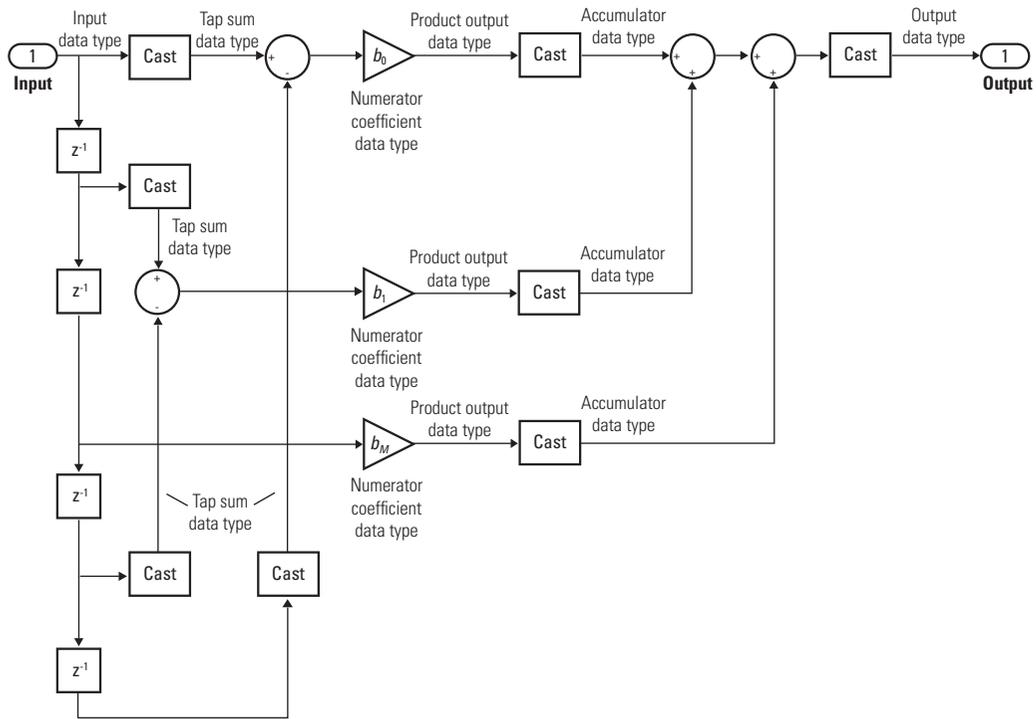

Even Order - Type III

# Discrete FIR Filter

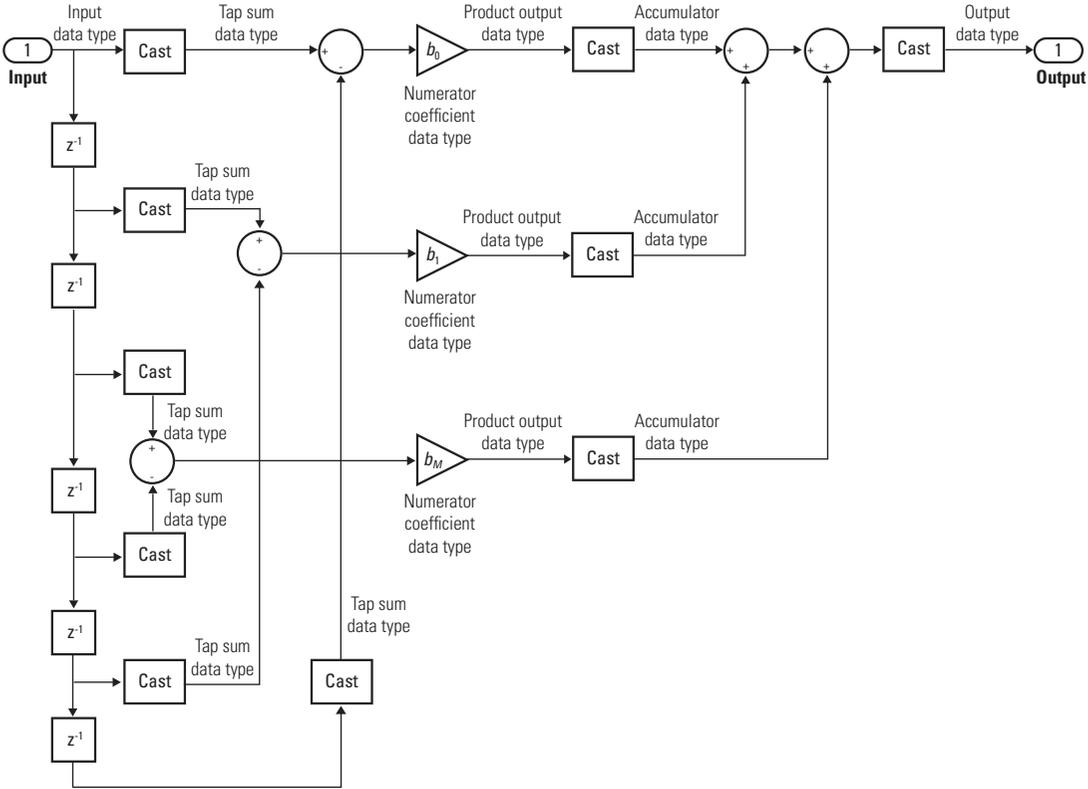



Odd Order - Type IV

# Discrete FIR Filter

## Direct Form Transposed

States are complex when either the inputs or the coefficients are complex.

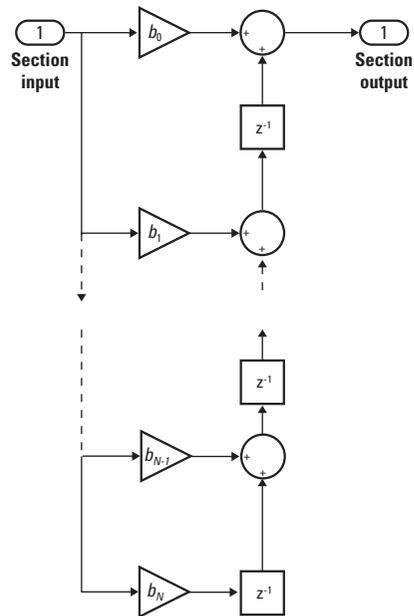


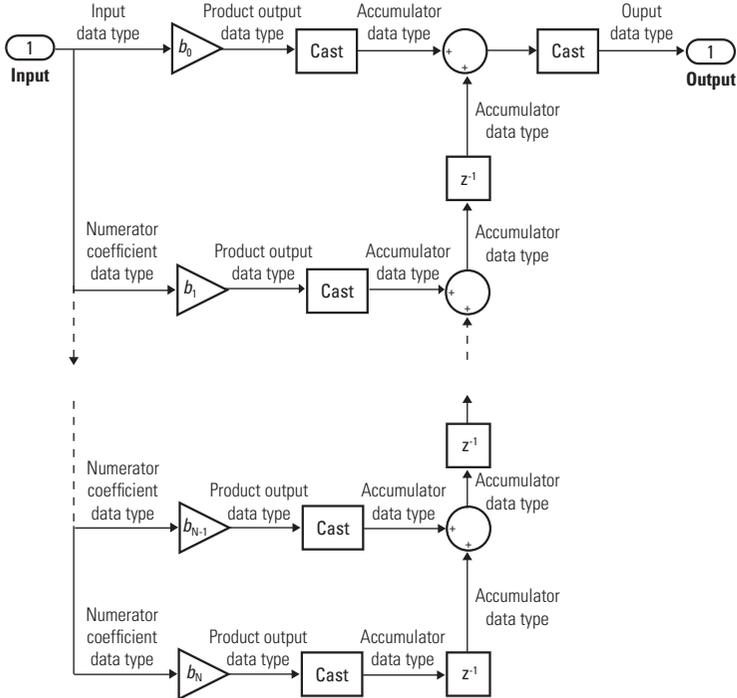



## Parameters and Dialog Box

The **Main** pane of the Discrete FIR Filter block dialog box appears as follows.

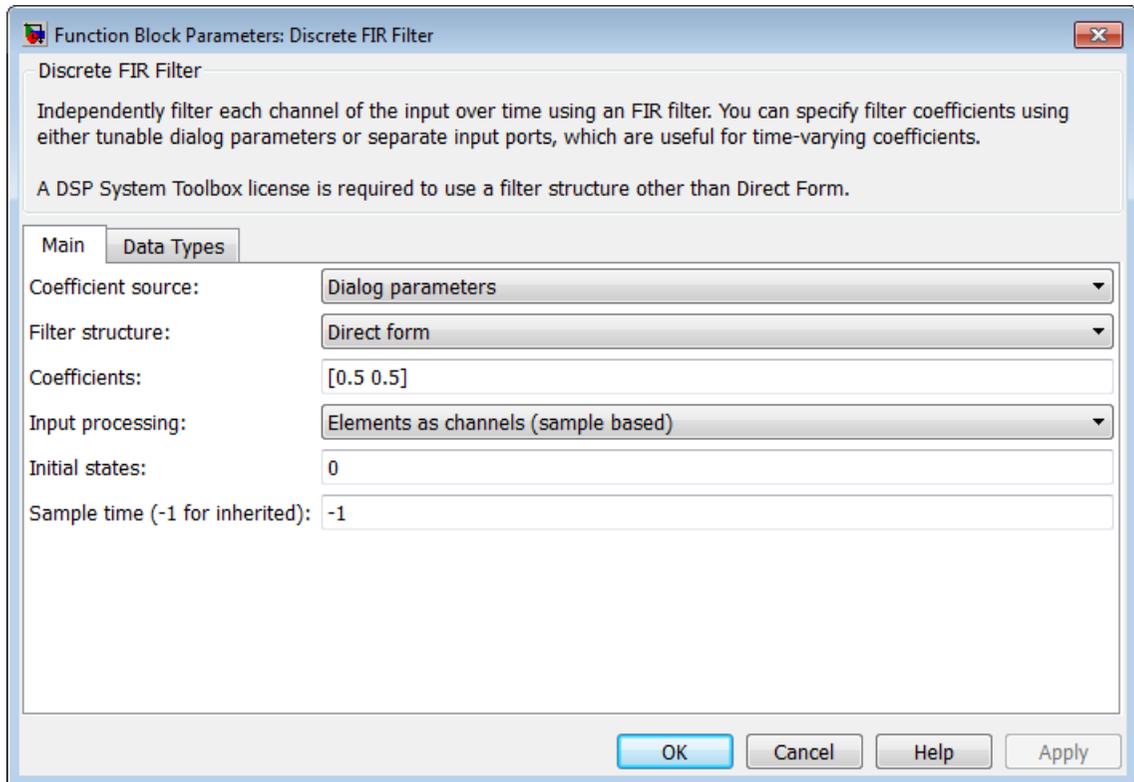

### Coefficient source

Select whether you want to specify the filter coefficients on the block mask or through an input port.

# Discrete FIR Filter

---

## Filter structure

Select the filter structure you want the block to implement. You must have an available DSP System Toolbox license to run a model with a Discrete FIR Filter block that implements any filter structure other than direct form.

## Coefficients

Specify the vector coefficients of the filter's transfer function. Filter coefficients must be specified as a row vector. When you specify a row vector of filter taps, the block applies a single filter to the input. To apply multiple filters to the same input, specify a matrix of coefficients, where each row represents a different set of filter taps. This parameter is visible only when **Coefficient source** is set to `Dialog parameters`. For multiple filter, **Filter structure** must be `Direct form`, and the input must be a scalar.

## Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- **Elements as channels (sample based)** — Treat each element of the input as an independent channel (sample-based processing).
- **Columns as channels (frame based)** — Treat each column of the input as an independent channel (frame-based processing).

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---


## Initial states

Specify the initial conditions of the filter states. To learn how to specify initial states, see “Specifying Initial States” on page 1-445.

## Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in “How Simulink Works” in the *Simulink User’s Guide*.

The **Data Types** pane of the Discrete FIR Filter block dialog box appears as follows.

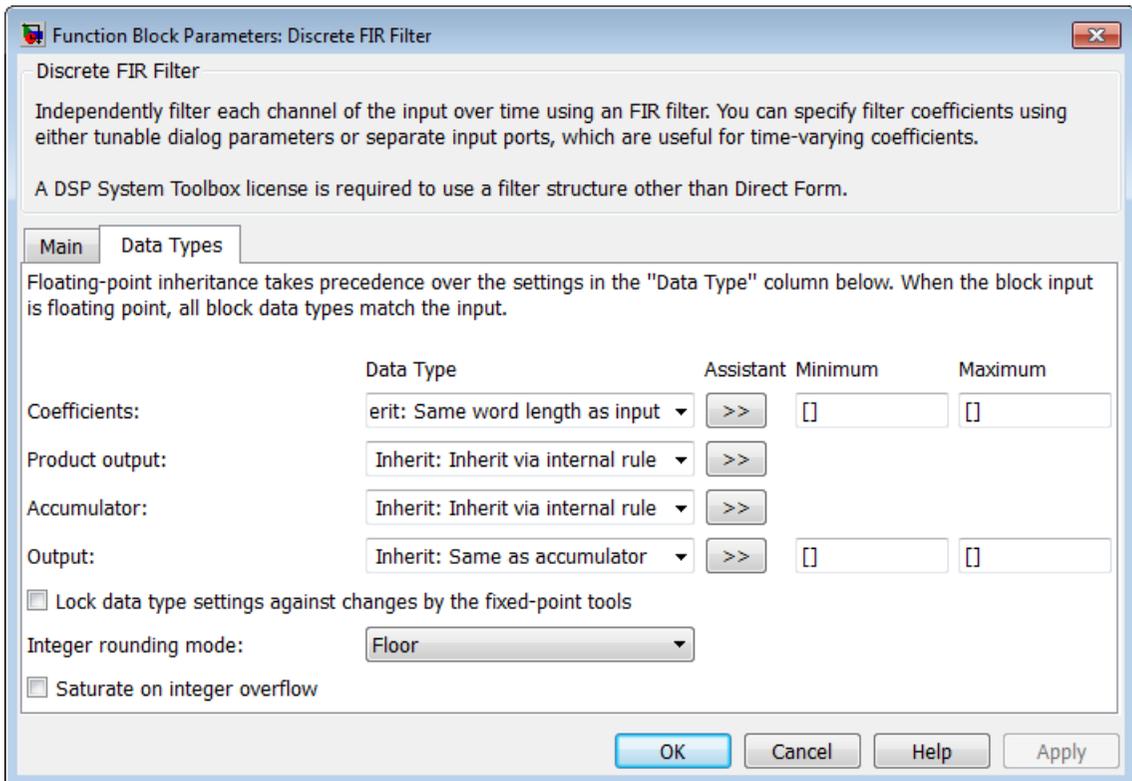

## Tap sum

Specify the tap sum data type of a direct form symmetric or direct form antisymmetric filter, which is the data type the filter uses

# Discrete FIR Filter

---

when it sums the inputs prior to multiplication by the coefficients. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in integer, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

This parameter is only visible when the selected filter structure is either `Direct form symmetric` or `Direct form antisymmetric`.

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Tap sum** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

## Coefficients

Specify the coefficient data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Same word length as input`
- A built-in integer, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Coefficients** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

### **Coefficients minimum**

Specify the minimum value that a filter coefficient should have. The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

### **Coefficients maximum**

Specify the maximum value that a filter coefficient should have. The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

### **Product output**

Specify the product output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

# Discrete FIR Filter

---

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Product output** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

## Accumulator

Specify the accumulator data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Accumulator** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

## State

Specify the state data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Same as accumulator`
- A built-in integer, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

This parameter is only visible when the selected filter structure is Lattice MA.

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **State** parameter.

See “Specify Data Types Using Data Type Assistant” for more information.

## Output

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Same as accumulator`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output** parameter.

See “Specify Block Output Data Types” in the *Simulink User’s Guide* for more information.

## Output minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

# Discrete FIR Filter

---

## Output maximum

Specify the maximum value that the block should output. The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Lock data type settings against changes by the fixed-point tools

Select to lock all data type settings of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Lock the Output Data Type Setting” in the Fixed-Point Designer documentation.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box selected, the block output saturates at 127. Similarly, the block output saturates

Action	Reasons for Taking This Action	What Happens for Overflows	Example
			at a minimum output value of -128.
Do not select this check box.	<p>You want to optimize efficiency of your generated code.</p> <p>You want to avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.</p>	Overflows wrap to the appropriate value that is representable by the data type.	<p>The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value as <code>int8</code>, which can produce an unintended result. For example, a block result of 130 (binary 1000 0010) expressed as <code>int8</code>, is -126.</p>

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of initial states

# Discrete FIR Filter

---

States	See "Specifying Initial States" on page 1-445
Dimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Implement discrete state-space system

**Library** Discrete

## Description

$$\begin{cases} y(n) = Cx(n) + Du(n) \\ x(n+1) = Ax(n) + Bu(n) \end{cases}$$


### Block Behavior for Non-Empty Matrices

The Discrete State-Space block implements the system described by

$$\begin{aligned} x(n+1) &= Ax(n) + Bu(n) \\ y(n) &= Cx(n) + Du(n), \end{aligned}$$

where  $u$  is the input,  $x$  is the state, and  $y$  is the output. The matrix coefficients must have these characteristics, as illustrated in the following diagram:

- **A** must be an  $n$ -by- $n$  matrix, where  $n$  is the number of states.
- **B** must be an  $n$ -by- $m$  matrix, where  $m$  is the number of inputs.
- **C** must be an  $r$ -by- $n$  matrix, where  $r$  is the number of outputs.
- **D** must be an  $r$ -by- $m$  matrix.

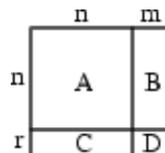

The block accepts one input and generates one output. The width of the input vector is the number of columns in the **B** and **D** matrices. The width of the output vector is the number of rows in the **C** and **D**

# Discrete State-Space

---

matrices. To define the initial state vector, use the **Initial conditions** parameter.

To specify a vector or matrix of zeros for **A**, **B**, **C**, **D**, or **Initial conditions**, use the `zeros` function.

## Block Behavior for Empty Matrices


When the matrices **A**, **B**, and **C** are empty (for example, `[]`), the functionality of the block becomes  $y(n) = Du(n)$ . If the **Initial conditions** vector is also empty, the block uses an initial state vector of zeros.

## Data Type Support

The Discrete State Space block accepts and outputs a real signal of type `single` or `double`. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

The **Main** tab of the Discrete State-Space block dialog box appears as follows:

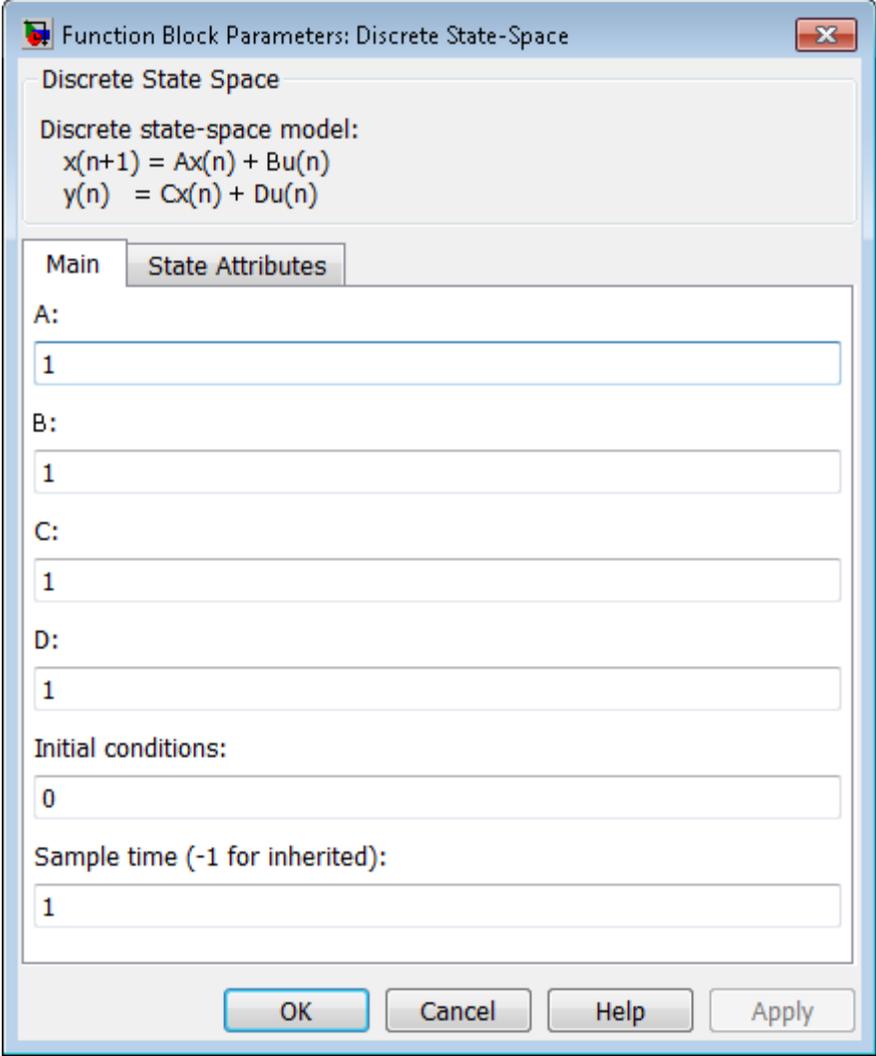

The dialog box is titled "Function Block Parameters: Discrete State-Space" and contains the following fields and controls:

- Discrete State Space** (Section Header)
- Discrete state-space model:
  - $x(n+1) = Ax(n) + Bu(n)$
  - $y(n) = Cx(n) + Du(n)$
- Main** (Selected Tab) | State Attributes
- A:**
- B:**
- C:**
- D:**
- Initial conditions:**
- Sample time (-1 for inherited):**
- Buttons: **OK**, **Cancel**, **Help**, **Apply**

# Discrete State-Space

---

## **A, B, C, D**

Specify the matrix coefficients, as defined in the Description section.


## **Initial conditions**

Specify the initial state vector. The default value is 0. Simulink does not allow the initial states of this block to be `inf` or `NaN`.

## **Sample time (-1 for inherited)**

Specify the time interval between samples. See “Specify Sample Time” in the Simulink documentation.

The **State Attributes** tab of the Discrete State-Space block dialog box appears as follows:

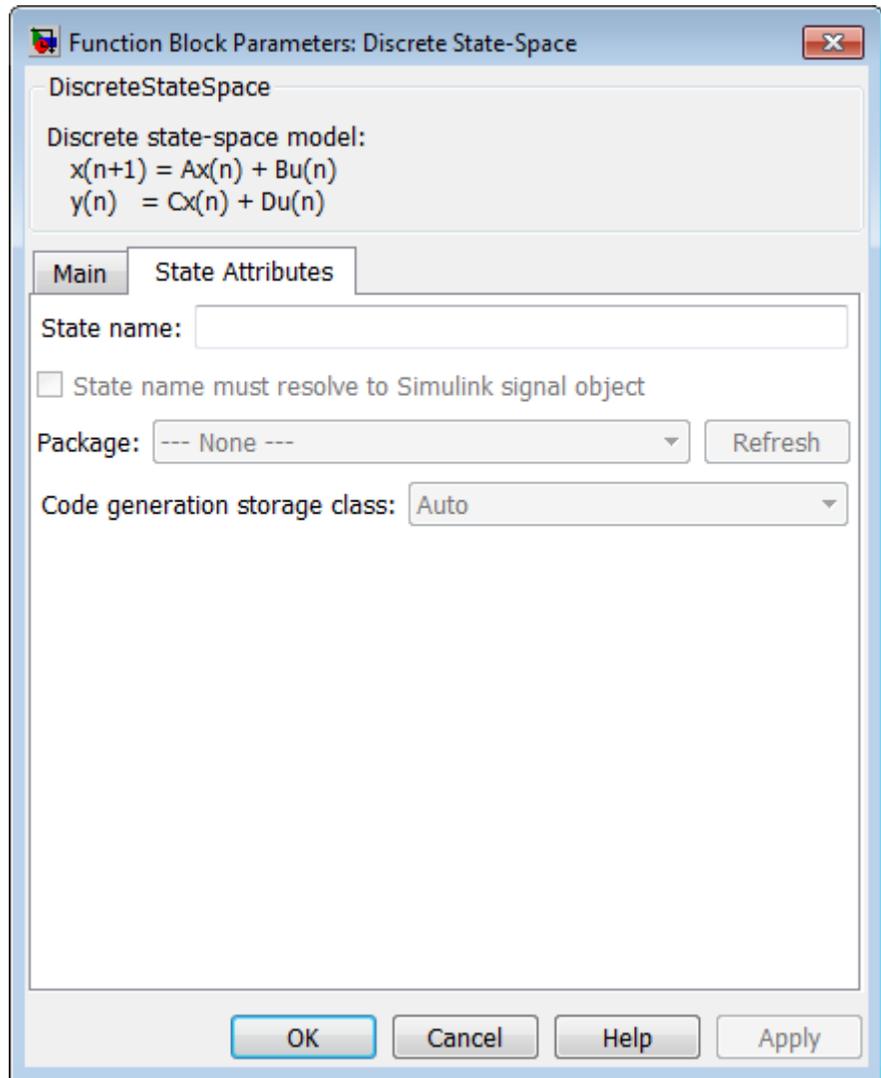

# Discrete State-Space

---

## State name

Use this parameter to assign a unique name to the block state. The default is ' '. When this field is blank, no name is assigned. When using this parameter, remember these considerations:

- A valid identifier starts with an alphabetic or underscore character, followed by alphanumeric or underscore characters.
- The state name applies only to the selected block.

This parameter enables **State name must resolve to Simulink signal object** when you click **Apply**.

For more information, see “States” in the Simulink Coder documentation.

## State name must resolve to Simulink signal object

Select this check box to require that the state name resolve to a Simulink signal object. This check box is cleared by default.

**State name** enables this parameter.

Selecting this check box disables **Code generation storage class**.

## Package

Select a package that defines the custom storage class you want to apply. If you have defined any packages of your own, click **Refresh**. This action adds all user-defined packages on your search path to the package list.

## Code generation storage class

Select custom storage class for state.

**Default:** Auto

Auto

Auto is the appropriate storage class for states that you do not need to interface to external code.

## SimulinkGlobal

*model\_P* initializes the state to its corresponding value in the workspace.

## ExportedGlobal

State is stored in a global variable

## ImportedExtern

*model\_private.h* declares the state as an extern variable.

## ImportedExternPointer

*model\_private.h* declares the state as an extern pointer.

## Default

A non-editable placeholder storage class is created.

## BitField

A struct declaration is created that embeds Boolean data.

## Volatile

Volatile type qualifier is used in state declaration.

## ExportToFile

Header (.h) file containing global variable declarations is generated with user-specified name.

## ImportFromFile

Predefined header (.h) files containing global variable declarations are included.

## FileScope

A static qualifier is generated in front of the state declaration to make the state visible only to the current file.

## Struct

A struct declaration is created to encapsulate parameter or signal object data.

## StructVolatile

Volatile type qualifier is used in struct declaration.

## GetSet

Supports specialized function calls to read and write memory.

**State name** enables this parameter.

The list of valid storage classes differs based on the **Package** selection.

Setting this parameter to ExportedGlobal, ImportedExtern, or ImportedExternPointer enables **Code generation storage type qualifier**.

### **Code generation storage type qualifier**

Specify a Simulink Coder storage type qualifier. The default is ' '. When this field is blank, no qualifier is assigned.

The Simulink Coder product does not check this string for errors. Thus, whatever value you enter appears automatically in the variable declaration.

Setting **Code generation storage class** to ExportedGlobal, ImportedExtern, or ImportedExternPointer enables this parameter.

During simulation, the block uses the following values:

- The initial value of the signal object to which the state name is resolved
- Min and Max values of the signal object

For more information, see “States” in the Simulink Coder documentation.

<b>Characteristics</b>	Direct Feedthrough	Only if $D \neq 0$
	Sample Time	Specified in the <b>Sample time</b> parameter
	Scalar Expansion	Yes, of the initial conditions
	States	Determined by the size of $A$
	Dimensionalized	Yes
	Zero-Crossing Detection	No

# Discrete-Time Integrator

---

**Purpose** Perform discrete-time integration or accumulation of signal

**Library** Discrete

**Description** **Capabilities of the Discrete-Time Integrator Block**



You can use the Discrete-Time Integrator block in place of the Integrator block to create a purely discrete system. With the Discrete-Time Integrator block, you can:

- Define initial conditions on the block dialog box or as input to the block.
- Define an input gain (K) value.
- Output the block state.
- Define upper and lower limits on the integral.
- Reset the state depending on an additional reset input.

### Output Equations

The block starts from the first time step,  $n = 0$ , with either initial output  $y(0) = IC$  or initial state  $x(0) = IC$ , depending on the **Initial condition setting** parameter value.

For a given step  $n > 0$  with simulation time  $t(n)$ , Simulink updates output  $y(n)$  as follows:

- Forward Euler method:

$$y(n) = y(n-1) + K*[t(n)-t(n-1)]*u(n-1)$$

- Backward Euler method:

$$y(n) = y(n-1) + K*[t(n)-t(n-1)]*u(n)$$

- Trapezoidal method:

$$y(n) = y(n-1) + K*[t(n)-t(n-1)]*[u(n)+u(n-1)]/2$$

Simulink automatically selects a state-space realization of these output equations depending on the block sample time, which can be explicit or triggered. When using explicit sample time,  $t(n) - t(n-1)$  reduces to the sample time  $T$  for all  $n > 0$ . For more information on these methods, see “Integration and Accumulation Methods” on page 1-477.

## Integration and Accumulation Methods

The block can integrate or accumulate using the forward Euler, backward Euler, and trapezoidal methods. Assume that  $u$  is the input,  $y$  is the output, and  $x$  is the state. For a given step  $n$ , Simulink updates  $y(n)$  and  $x(n+1)$ . In integration mode,  $T$  is the block sample time (delta  $T$  in the case of triggered sample time). In accumulation mode,  $T = 1$ . The block sample time determines when the output is computed but not the output value.  $K$  is the gain value. Values clip according to upper or lower limits.

- Forward Euler method (default), also known as forward rectangular, or left-hand approximation

For this method, the software approximates  $1/s$  as  $T/(z-1)$ . The expressions for the output of the block at step  $n$  are:

$$\begin{aligned}x(n+1) &= x(n) + K*T*u(n) \\ y(n) &= x(n)\end{aligned}$$

The block uses the following steps to compute the output:

$$\begin{aligned}\text{Step 0: } y(0) &= IC \text{ (clip if necessary)} \\ x(1) &= y(0) + K*T*u(0)\end{aligned}$$

$$\begin{aligned}\text{Step 1: } y(1) &= x(1) \\ x(2) &= x(1) + K*T*u(1)\end{aligned}$$

$$\begin{aligned}\text{Step } n: y(n) &= x(n) \\ x(n+1) &= x(n) + K*T*u(n) \text{ (clip if necessary)}\end{aligned}$$

Using this method, input port 1 does not have direct feedthrough.

# Discrete-Time Integrator

---

- Backward Euler method, also known as backward rectangular or right-hand approximation

For this method, the software approximates  $1/s$  as  $Tz/(z-1)$ . The resulting expression for the output of the block at step  $n$  is

$$y(n) = y(n-1) + K^*T*u(n).$$

Let  $x(n) = y(n-1)$ . The block uses these steps to compute the output.

If the parameter **Initial condition setting** is set to Output:

$$\begin{aligned} \text{Step 0: } y(0) &= \text{IC (clipped if necessary)} \\ x(1) &= y(0) \end{aligned}$$

If the parameter **Initial condition setting** is set to State (most efficient):

$$\begin{aligned} \text{Step 0: } x(0) &= \text{IC (clipped if necessary)} \\ x(1) &= y(0) = x(0) + K^*T*u(0) \end{aligned}$$

$$\begin{aligned} \text{Step 1: } y(1) &= x(1) + K^*T*u(1) \\ x(2) &= y(1) \end{aligned}$$

$$\begin{aligned} \text{Step } n: y(n) &= x(n) + K^*T*u(n) \\ x(n+1) &= y(n) \end{aligned}$$

Using this method, input port 1 has direct feedthrough.

- Trapezoidal method

For this method, the software approximates  $1/s$  as

$$T/2*(z+1)/(z-1).$$

When  $T$  is fixed (equal to the sampling period), the expressions to compute the output are:

$$\begin{aligned} x(n) &= y(n-1) + K^*T/2 * u(n-1) \\ y(n) &= x(n) + K^*T/2*u(n) \end{aligned}$$

If the **Initial condition setting** parameter is set to Output:

$$\begin{aligned}\text{Step 0: } y(0) &= \text{IC (clipped if necessary)} \\ x(1) &= y(0) + K \cdot T / 2 \cdot u(0)\end{aligned}$$

If the **Initial condition setting** parameter is set to State (most efficient):

$$\begin{aligned}\text{Step 0: } x(0) &= \text{IC (clipped if necessary)} \\ y(0) &= x(0) + K \cdot T / 2 \cdot u(0) \\ x(1) &= y(0) + K \cdot T / 2 \cdot u(0)\end{aligned}$$

$$\begin{aligned}\text{Step 1: } y(1) &= x(1) + K \cdot T / 2 \cdot u(1) \\ x(2) &= y(1) + K \cdot T / 2 \cdot u(1)\end{aligned}$$

$$\begin{aligned}\text{Step n: } y(n) &= x(n) + K \cdot T / 2 \cdot u(n) \\ x(n+1) &= y(n) + K \cdot T / 2 \cdot u(n)\end{aligned}$$

Here,  $x(n+1)$  is the best estimate of the next output. It is not the same as the state, in that  $x(n)$  is not equal to  $y(n)$ .

If  $T$  is variable (for example, obtained from the triggering times), the block uses these steps to compute the output.

If the **Initial condition setting** parameter is set to Output:

$$\begin{aligned}\text{Step 0: } y(0) &= \text{IC (clipped if necessary)} \\ x(1) &= y(0)\end{aligned}$$

If the **Initial condition setting** parameter is set to State (most efficient):

$$\begin{aligned}\text{Step 0: } x(0) &= \text{IC (clipped if necessary)} \\ x(1) &= y(0) = x(0) + K \cdot T / 2 \cdot u(0)\end{aligned}$$

$$\begin{aligned}\text{Step 1: } y(1) &= x(1) + T / 2 \cdot (u(1) + u(0)) \\ x(2) &= y(1)\end{aligned}$$

$$\text{Step n: } y(n) = x(n) + T / 2 \cdot (u(n) + u(n-1))$$

# Discrete-Time Integrator

---


$$x(n+1) = y(n)$$

Using this method, input port 1 has direct feedthrough.

## Define Initial Conditions

You can define the initial conditions as a parameter on the block dialog box or input them from an external signal:

- To define the initial conditions as a block parameter, set the **Initial condition source** parameter to **internal** and enter the value in the **Initial condition** text box.
- To provide the initial conditions from an external source, set the **Initial condition source** parameter to **external**. An additional input port appears on the block.

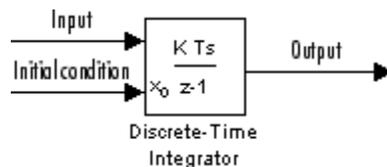


## When to Use the State Port

Use the state port instead of the output port:

- When the output of the block is fed back into the block through the reset port or the initial condition port, causing an algebraic loop. For an example, see the `sldemo_bounce_two_integrators` model.
- When you want to pass the state from one conditionally executed subsystem to another, which can cause timing problems. For an example, see the `sldemo_clutch` model.

You can work around these problems by passing the state through the state port rather than the output port. Simulink generates the state at a slightly different time from the output, which protects your model from these problems. To output the block state, select the **Show state port** check box. The state port appears on the top of the block

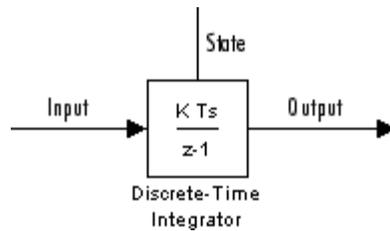


## Limit the Integral

To keep the output within certain levels, select the **Limit output** check box and enter the limits in the corresponding text box. Doing so causes the block to function as a limited integrator. When the output reaches the limits, the integral action turns off to prevent integral windup. During a simulation, you can change the limits but you cannot change whether the output is limited. The table shows how the block determines output.

Integral	Output
Less than or equal to the <b>Lower saturation limit</b> and the input is negative	Held at the <b>Lower saturation limit</b>
Between the <b>Lower saturation limit</b> and the <b>Upper saturation limit</b>	The integral
Greater than or equal to the <b>Upper saturation limit</b> and the input is positive	Held at the <b>Upper saturation limit</b>

To generate a signal that indicates when the state is being limited, select the **Show saturation port** check box. A new saturation port appears below the block output port:

# Discrete-Time Integrator

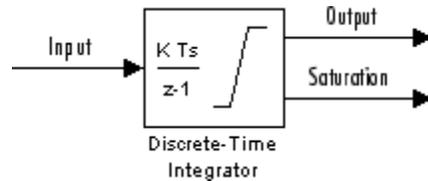


The signal has one of three values:

- 1 indicates that the upper limit is being applied.
- 0 indicates that the integral is not limited.
- -1 indicates that the lower limit is being applied.

## Reset the State

The block can reset its state to the initial condition you specify, based on an external signal. To cause the block to reset its state, select one of the **External reset** parameter options. A trigger port appears that indicates the trigger type:

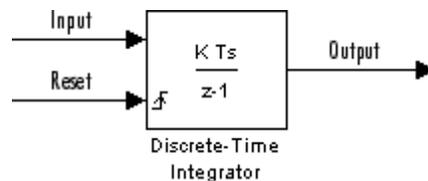


The reset port has direct feedthrough. If the block output feeds back into this port, either directly or through a series of blocks with direct feedthrough, an algebraic loop results. To resolve this loop, feed the output of the block state port into the reset port instead. To access the block state, select the **Show state port** check box.

## Reset Trigger Types


The **External reset** parameter lets you determine the attribute of the reset signal that triggers the reset. The trigger options include:

# Discrete-Time Integrator

- **rising** – Resets the state when the reset signal has a rising edge. For example, this figure shows the effect that a rising reset trigger has on backward Euler integration.

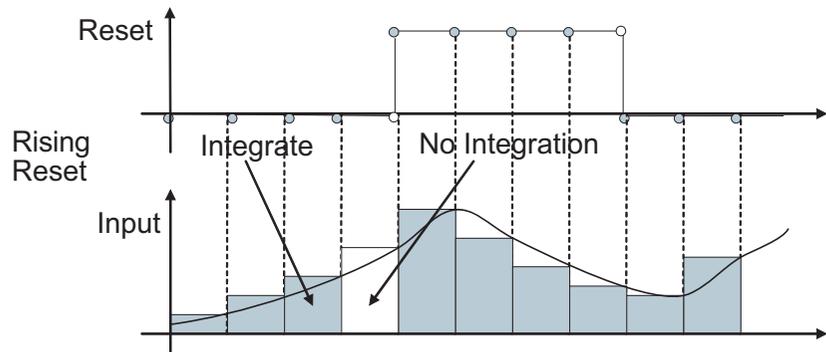


- **falling** – Resets the state when the reset signal has a falling edge. For example, this figure shows the effect that a falling reset trigger has on backward Euler integration.

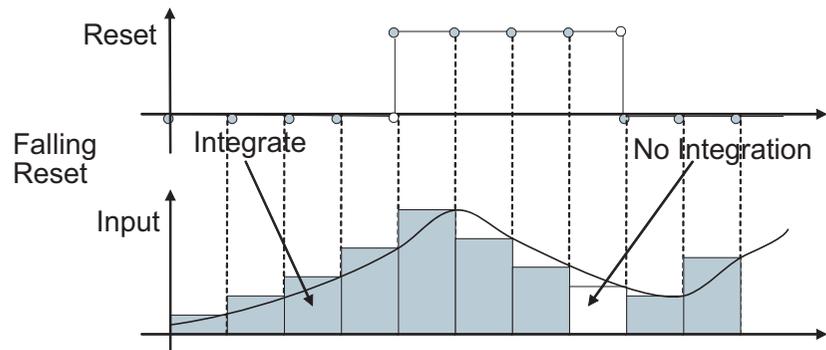


- **either** – Resets the state when the reset signal rises or falls. For example, the following figure shows the effect that an either reset trigger has on backward Euler integration.


# Discrete-Time Integrator

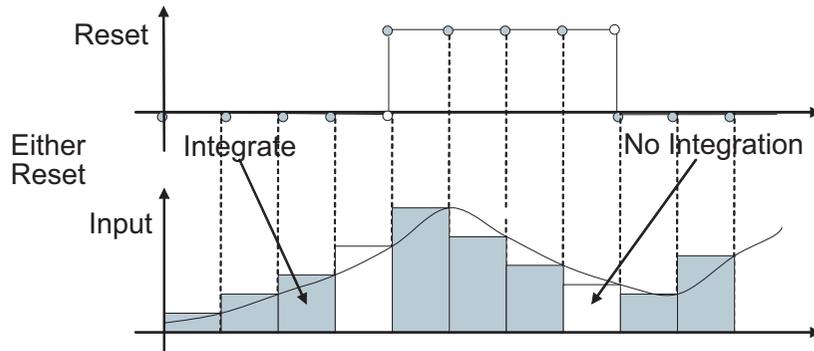

- `level` – Resets and holds the output to the initial condition while the reset signal is nonzero. For example, this figure shows the effect that a level reset trigger has on backward Euler integration.

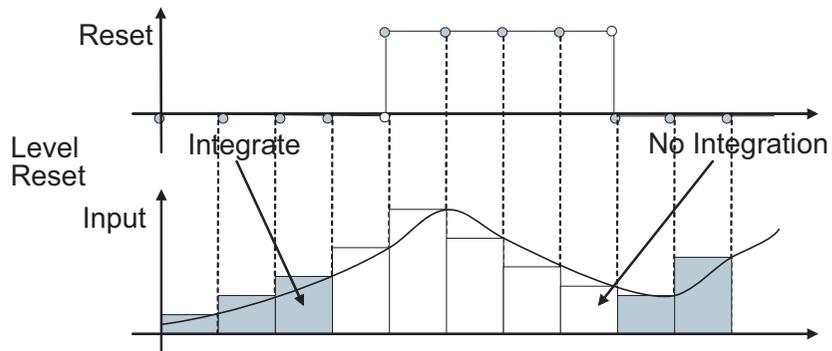

- `sampled level` – Resets the output to the initial condition when the reset signal is nonzero. For example, this figure shows the effect that a sampled level reset trigger has on backward Euler integration.

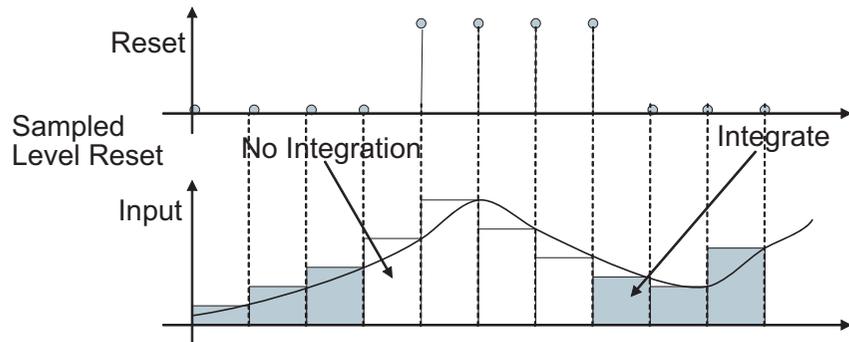

---

**Note** The sampled level reset option requires fewer computations, making it more efficient than the level reset option. However, the sampled level reset option can introduce a discontinuity when integration resumes.

---

## Behavior When Using Simplified Initialization Mode

Simplified initialization mode is enabled when you set **Configuration Parameters > Diagnostics > Data Validity > Underspecified initialization detection** is set to **Simplified**. If you use simplified initialization mode, the behavior of the Discrete-Time Integrator block differs from classic initialization mode. The new initialization behavior is more robust and provides more consistent behavior in these cases:

- In algebraic loops
- On enable and disable
- When comparing results using triggered sample time against explicit sample time, where the block is triggered at the same rate as the explicit sample time

# Discrete-Time Integrator

---

Simplified initialization mode enables easier conversion from Continuous-Time Integrator blocks to Discrete-Time Integrator blocks, because the initial conditions have the same meaning for both blocks.

For more information on classic and simplified initialization modes, see “Underspecified initialization detection”.

## **Enable and Disable Behavior in Simplified Initialization Mode**

When you use simplified initialization mode, the enable and disable behavior of the block is simplified as follows:

At disable time  $t_d$ :

$$y(t_d) = y(t_d - 1)$$

At enable time  $t_e$ :

- If parent subsystem resets on enable and **Initial condition setting** is set to **Output**:


$$y(t_e) = IC$$

- If parent subsystem resets on enable and **Initial condition setting** is set to **State** (most efficient):

$$x(t_e) = IC$$

- In all other cases (see following figure):

$$y(t_e) = y(t_d)$$

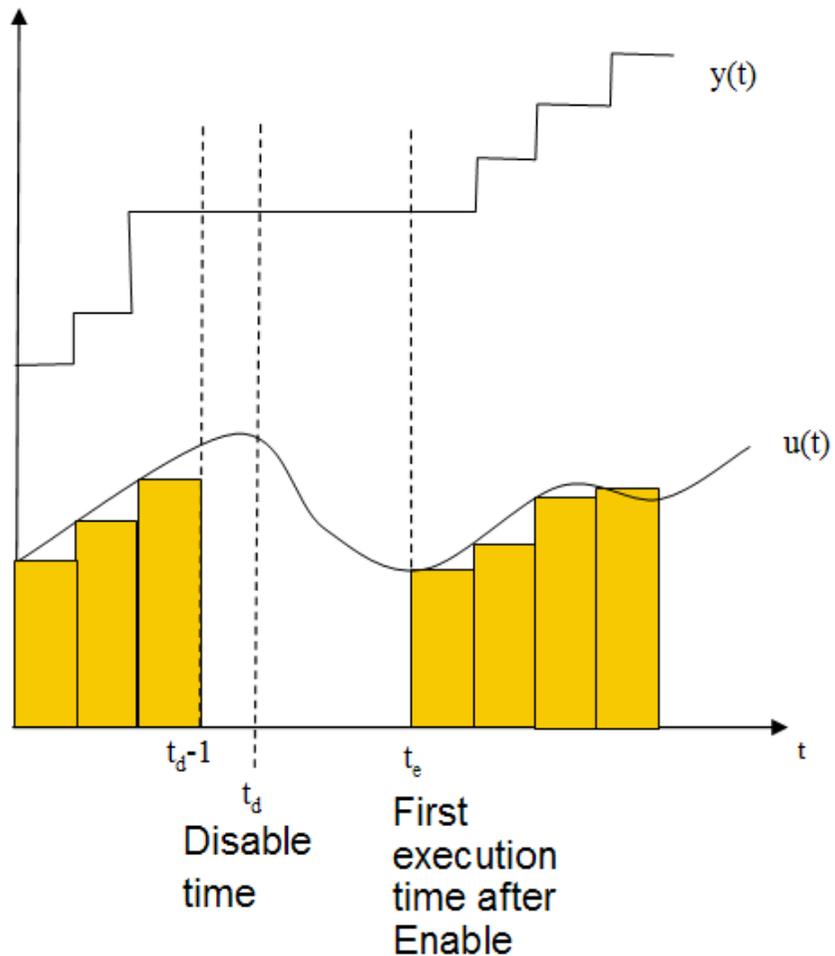

## Iterator Subsystems

When using simplified initialization mode, you cannot place the Discrete-Time Integrator block in an Iterator Subsystem.

In simplified initialization mode, Iterator subsystems do not maintain elapsed time. Thus, if a Discrete-Time Integrator block, which needs

# Discrete-Time Integrator

---

elapsed time, is placed inside an Iterator Subsystem block, Simulink reports an error.

## Triggered Subsystems and Function-Call Subsystems

Simulink does not support model simulation when all the following conditions are true:

- A Discrete-Time Integrator block is placed within a triggered subsystem or a function-call subsystem.
- The block's **Initial condition setting** parameter is set to State (most efficient).
- Simplified initialization mode is enabled.

## Behavior When Used in an Enabled Subsystem Inside a Function-Call Subsystem

Suppose that you have a function-call subsystem that contains an enabled subsystem, which contains a Discrete-Time Integrator block. The following behavior applies.

Integrator Method	Sample Time Type of Function-Call Trigger Port	Value of delta T When Function-Call Subsystem Executes for the First Time After Enabled	Reason for Behavior
Forward Euler	Triggered	t tstart	When the function-call subsystem executes for the first time, the integrator algorithm uses tstart as the

# Discrete-Time Integrator

Integrator Method	Sample Time Type of Function-Call Trigger Port	Value of $\Delta T$ When Function-Call Subsystem Executes for the First Time After Enabled	Reason for Behavior
			previous simulation time.
Backward Euler and Trapezoidal	Triggered	$t_{\text{previous}}$	When the function-call subsystem executes for the first time, the integrator algorithm uses $t_{\text{previous}}$ as the previous simulation time.
Forward Euler, Backward Euler, and Trapezoidal	Periodic	Sample time of the function-call generator	In periodic mode, the Discrete-Time Integrator block uses sample time of the function-call generator for $\Delta T$ .


## Data Type Support

The Discrete-Time Integrator block accepts real signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Discrete-Time Integrator

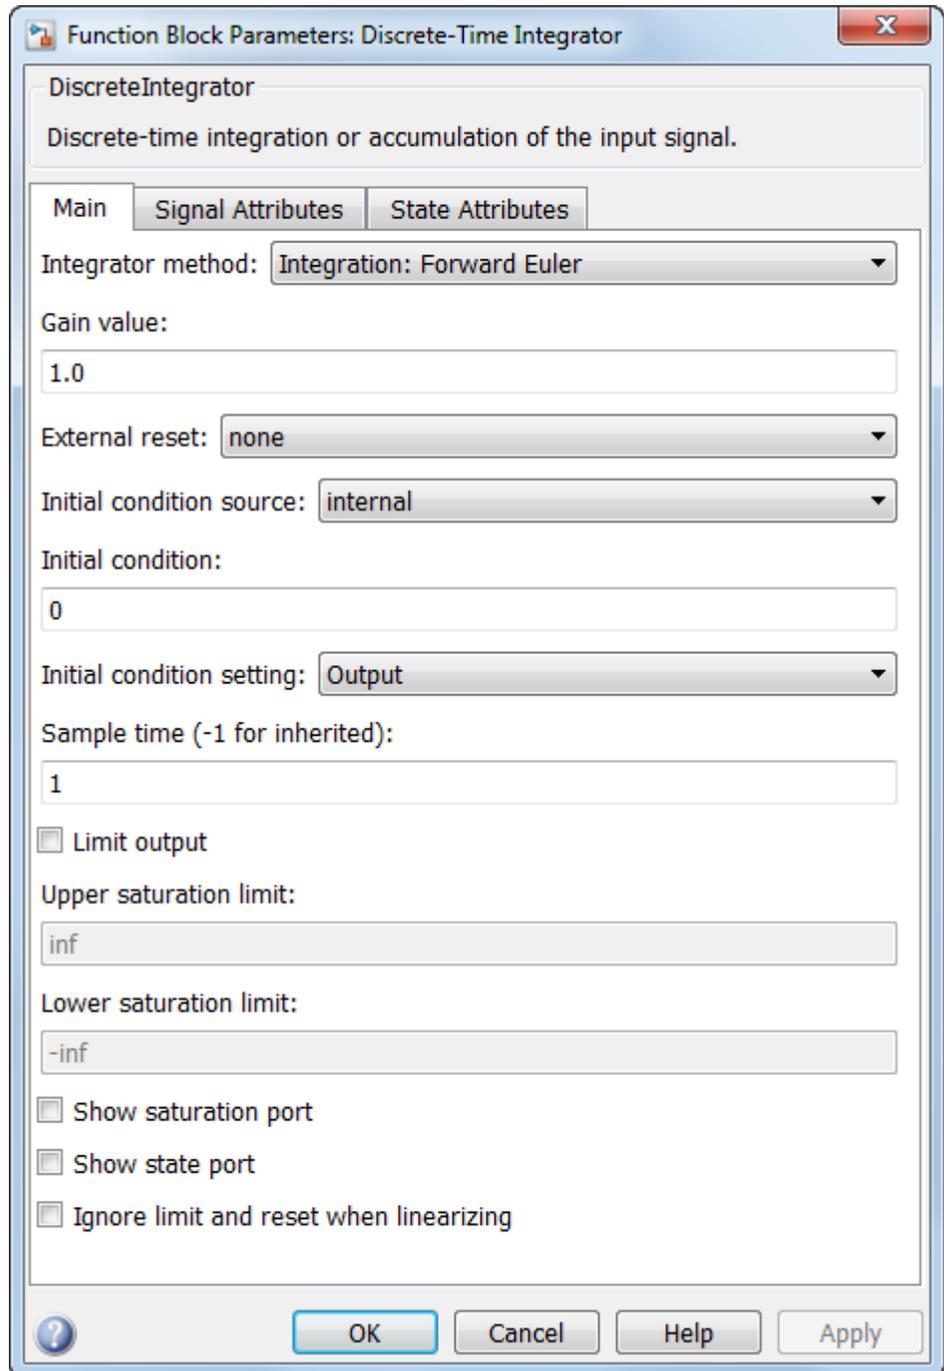

During simulation, the block uses the following values:

- The initial value of the signal object to which the state name is

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

# Discrete-Time Integrator

---

## Integrator method

Specify the integration or accumulation method.

### Settings

**Default:** Integration: Forward Euler

Integration: Forward Euler  
Integrator method is Forward Euler.

Integration: Backward Euler  
Integrator method is Backward Euler.

Integration: Trapezoidal  
Integrator method is Trapezoidal.

Accumulation: Forward Euler  
Accumulation method is Forward Euler.

Accumulation: Backward Euler  
Accumulation method is Backward Euler.

Accumulation: Trapezoidal  
Accumulation method is Trapezoidal.

### Command-Line Information

**Parameter:** IntegratorMethod

**Type:** string

**Value:** 'Integration: Forward Euler' | 'Integration: Backward Euler' | 'Integration: Trapezoidal' | 'Accumulation: Forward Euler' | 'Accumulation: Backward Euler' | 'Accumulation: Trapezoidal'

**Default:** 'Integration: Forward Euler'

## Gain value

Specify a scalar, vector, or matrix by which to multiply the integrator input. Each element of the gain must be a positive real number.

## Settings

**Default:** 1.0

- Specifying a value other than 1.0 (the default) is semantically equivalent to connecting a Gain block to the input of the integrator.
- Valid entries include:
  - `double(1.0)`
  - `single(1.0)`
  - `[1.1 2.2 3.3 4.4]`
  - `[1.1 2.2; 3.3 4.4]`
- Using this parameter to specify the input gain eliminates a multiplication operation in the generated code. However, this parameter must be nontunable to realize this benefit. If the **Model Configuration Parameters** dialog box declares this parameter as tunable, Simulink Coder generates a warning during code generation. If you want to tune the input gain, set this parameter to 1.0 and use an external Gain block to specify the input gain.

## Command-Line Information

**Parameter:** gainval

**Type:** string

**Value:** '1.0'

**Default:** '1.0'

# Discrete-Time Integrator

---

## External reset

Reset the states to their initial conditions when a trigger event occurs in the reset signal.

## Settings

**Default:** none

none

Do not reset the state to initial conditions.

rising

Reset the state when the reset signal has a rising edge.

falling

Reset the state when the reset signal has a falling edge.

either

Reset the state when the reset signal rises or falls.

level

Reset and holds the output to the initial condition while the reset signal is nonzero.

sampled level

Reset the output to the initial condition when the reset signal is nonzero.

## Command-Line Information

**Parameter:** ExternalReset

**Type:** string

**Value:** 'none' | 'rising' | 'falling' | 'either' | 'level' | 'sampled level'

**Default:** 'none'

## Initial condition source

Get the initial conditions of the states.

### Settings

**Default:** internal

internal

Get the initial conditions of the states from the **Initial condition** parameter.

external

Get the initial conditions of the states from an external block.

### Tips

Simulink software does not allow the initial condition of this block to be inf or NaN.

### Dependencies

Selecting internal enables the **Initial condition** parameter.

Selecting external disables the **Initial condition** parameter.

### Command-Line Information

**Parameter:** InitialConditionSource

**Type:** string

**Value:** 'internal' | 'external'

**Default:** 'internal'

# Discrete-Time Integrator

---

## Initial condition

Specify the states' initial conditions.

### Settings

**Default:** 0

**Minimum:** value of **Output minimum** parameter

**Maximum:** value of **Output maximum** parameter

### Tips

Simulink software does not allow the initial condition of this block to be inf or NaN.

### Dependencies

Setting **Initial condition source** to internal enables this parameter.

Setting **Initial condition source** to external disables this parameter.

### Command-Line Information

**Parameter:** InitialCondition

**Type:** scalar or vector

**Value:** '0'

**Default:** '0'

## Initial condition setting

Specify whether to apply the **Initial condition** parameter to the block state or output. This initial condition is also used as the reset value. This parameter was named **Use initial condition as initial and reset value for** in Simulink before R2014a.

## Settings

**Default:** Output

State (most efficient)

Set the following initial conditions:

$$x(0) = IC$$

At reset:

$$x(n) = IC$$

Output

Set the following initial conditions:

$$y(0) = IC$$

At reset:

$$y(n) = IC$$

Compatibility

Use this option to maintain compatibility with Simulink models created before R2014a. You cannot select this option for Discrete-Time Integrator blocks in Simulink models but you can select it for Discrete-Time Integrator blocks in a library.

Prior to R2014a, the option `State (most efficient)` was known as `State only (most efficient)`. The option `Output` was known as `State and output`. The behavior of the block with the option `Compatibility` is as follows.

# Discrete-Time Integrator

---

- If **Configuration Parameters > Diagnostics > Data Validity > Underspecified initialization detection** is set to **Classic**, the **Initial condition setting** parameter behaves as **State** (most efficient).
- If **Configuration Parameters > Diagnostics > Data Validity > Underspecified initialization detection** is set to **Simplified**, the **Initial condition setting** parameter behaves as **Output**.

## Command-Line Information

**Parameter:** InitialConditionSetting

**Type:** string

**Value:** 'State (most efficient)' | 'Output' | 'Compatibility'

**Default:** 'Output'

## Sample time (-1 for inherited)

Enter the discrete interval between sample time hits.

### Settings

**Default:** 1

By default, the block uses a discrete sample time of 1. To set a different sample time, enter another discrete value, such as 0.1.

See also “Specify Sample Time” in the online documentation for more information.

### Tips

- Do not specify a sample time of 0. This value specifies a continuous sample time, which the Discrete-Time Integrator block does not support.
- Do not specify a sample time of `inf` or `NaN` because these values are not discrete.
- If you specify -1 to inherit the sample time from an upstream block, verify that the upstream block uses a discrete sample time. For example, the Discrete-Time Integrator block cannot inherit a sample time of 0.

### Command-Line Information

**Parameter:** SampleTime

**Type:** string

**Value:** '1'

**Default:** '1'

# Discrete-Time Integrator

---

## Limit output

Limit the block's output to a value between the **Lower saturation limit** and **Upper saturation limit** parameters.

## Settings

Default: Off



On

Limit the block's output to a value between the **Lower saturation limit** and **Upper saturation limit** parameters.



Off

Do not limit the block's output to a value between the **Lower saturation limit** and **Upper saturation limit** parameters.

## Dependencies

This parameter enables **Upper saturation limit**.

This parameter enables **Lower saturation limit**.

## Command-Line Information

Parameter: LimitOutput

Type: string

Value: 'off' | 'on'

Default: 'off'

## **Upper saturation limit**

Specify the upper limit for the integral.

### **Settings**

**Default:** `inf`

**Minimum:** value of **Output minimum** parameter

**Maximum:** value of **Output maximum** parameter

### **Dependencies**

**Limit output** enables this parameter.

### **Command-Line Information**

**Parameter:** `UpperSaturationLimit`

**Type:** scalar or vector

**Value:** `'inf'`

**Default:** `'inf'`

# Discrete-Time Integrator

---

## **Lower saturation limit**

Specify the lower limit for the integral.

### **Settings**

**Default:** `-inf`

**Minimum:** value of **Output minimum** parameter

**Maximum:** value of **Output maximum** parameter

### **Dependencies**

**Limit output** enables this parameter.

### **Command-Line Information**

**Parameter:** `LowerSaturationLimit`

**Type:** scalar or vector

**Value:** `'-inf'`

**Default:** `'-inf'`

## Show saturation port

Add a saturation output port to the block.

### Settings

**Default:** Off



On

Add a saturation output port to the block.



Off

Do not add a saturation output port to the block.

### Command-Line Information

**Parameter:** ShowSaturationPort

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Discrete-Time Integrator

---

## Show state port

Add an output port to the block for the block's state.

### Settings

**Default:** Off



On

Add an output port to the block for the block's state.



Off

Do not add an output port to the block for the block's state.

### Command-Line Information

**Parameter:** ShowStatePort

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## Ignore limit and reset when linearizing

Cause Simulink linearization commands to treat this block as not resettable and as having no limits on its output, regardless of the settings of the block reset and output limitation options.

### Settings

**Default:** Off

On

Cause Simulink linearization commands to treat this block as not resettable and as having no limits on its output, regardless of the settings of the block reset and output limitation options.

Off

Do not cause Simulink linearization commands to treat this block as not resettable and as having no limits on its output, regardless of the settings of the block reset and output limitation options.

### Tips

Ignoring the limit and resetting allows you to linearize a model around an operating point. This point may cause the integrator to reset or saturate.

### Command-Line Information

**Parameter:** IgnoreLimit

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Discrete-Time Integrator

---

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off



On

Locks the output data type setting for this block.



Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations.

### Settings

**Default:** Floor

#### Ceiling

Rounds both positive and negative numbers toward positive infinity. Equivalent to the MATLAB `ceil` function.

#### Convergent

Rounds number to the nearest representable value. If a tie occurs, rounds to the nearest even integer. Equivalent to the Fixed-Point Designer convergent function.

#### Floor

Rounds both positive and negative numbers toward negative infinity. Equivalent to the MATLAB `floor` function.

#### Nearest

Rounds number to the nearest representable value. If a tie occurs, rounds toward positive infinity. Equivalent to the Fixed-Point Designer nearest function.

#### Round

Rounds number to the nearest representable value. If a tie occurs, rounds positive numbers toward positive infinity and rounds negative numbers toward negative infinity. Equivalent to the Fixed-Point Designer round function.

#### Simplest

Automatically chooses between round toward floor and round toward zero to generate rounding code that is as efficient as possible.

#### Zero

Rounds number toward zero. Equivalent to the MATLAB `fix` function.

# Discrete-Time Integrator

---

## Command-Line Information

**Parameter:** RndMeth

**Type:** string

**Value:** 'Ceiling' | 'Convergent' | 'Floor' | 'Nearest' |  
'Round' | 'Simplest' | 'Zero'

**Default:** 'Floor'

## See Also

For more information, see “Rounding” in the Fixed-Point Designer documentation.

## Saturate on integer overflow

Specify whether overflows saturate.

### Settings

**Default:** Off



On

Overflows saturate to either the minimum or maximum value that the data type can represent.

For example, an overflow associated with a signed 8-bit integer can saturate to -128 or 127.



Off

Overflows wrap to the appropriate value that is representable by the data type.

For example, the number 130 does not fit in a signed 8-bit integer and wraps to -126.

### Tips

- Consider selecting this check box when your model has possible overflow and you want explicit saturation protection in the generated code.
- Consider clearing this check box when you want to optimize efficiency of your generated code.

Clearing this check box also helps you avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.

- When you select this check box, saturation applies to every internal operation on the block, not just the output or result.
- In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

# Discrete-Time Integrator

---

## Command-Line Information

**Parameter:** SaturateOnIntegerOverflow

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## State name

Use this parameter to assign a unique name to each state.

## Settings

Default: ' '

- If left blank, no name is assigned.

## Tips

- A valid identifier starts with an alphabetic or underscore character, followed by alphanumeric or underscore characters.
- The state name applies only to the selected block.

## Dependency

This parameter enables **State name must resolve to Simulink signal object** when you click the **Apply** button.

For more information, see “States” in the Simulink Coder documentation.

## Command-Line Information

**Parameter:** StateIdentifier

**Type:** string

**Value:** ' '

**Default:** ' '

# Discrete-Time Integrator

---

## State name must resolve to Simulink signal object

Require that state name resolve to Simulink signal object.

### Settings

Default: Off



On

Require that state name resolve to Simulink signal object.



Off

Do not require that state name resolve to Simulink signal object.

### Dependencies

**State name** enables this parameter.

Selecting this check box disables **Code generation storage class**.

### Command-Line Information

**Parameter:** StateMustResolveToSignalObject

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## Package

Select a package that defines the custom storage class you want to apply.

## Settings

**Default:** ---None---

---None---

Sets internal storage class attributes.

mpt

Applies the built-in mpt package.

Simulink

Applies the built-in Simulink package.

## Dependencies

If you have defined any packages of your own, click **Refresh**. This action adds all user-defined packages on your search path to the package list.

# Discrete-Time Integrator

---

## Code generation storage class

Select state storage class.

### Settings

**Default:** Auto

Auto

Auto is the appropriate storage class for states that you do not need to interface to external code.

ExportedGlobal

State is stored in a global variable

ImportedExtern

*model\_private.h* declares the state as an extern variable.

ImportedExternPointer

*model\_private.h* declares the state as an extern pointer.

### Dependencies

**State name** enables this parameter.

Setting this parameter to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables **Code generation storage type qualifier**.

### Command-Line Information

Command-Line Information

**Parameter:** StateStorageClass

**Type:** string

**Value:** 'Auto' | 'ExportedGlobal' | 'ImportedExtern' | 'ImportedExternPointer'

**Default:** 'Auto'

## Code generation storage class

Select custom storage class for state.

### Settings

**Default:** Auto

#### Auto

Auto is the appropriate storage class for states that you do not need to interface to external code.

#### SimulinkGlobal

*model\_P* initializes the state to its corresponding value in the workspace.

#### ExportedGlobal

State is stored in a global variable

#### ImportedExtern

*model\_private.h* declares the state as an extern variable.

#### ImportedExternPointer

*model\_private.h* declares the state as an extern pointer.

#### Default

A non-editable placeholder storage class is created.

#### BitField

A struct declaration is created that embeds Boolean data.

#### Volatile

Volatile type qualifier is used in state declaration.

#### ExportToFile

Header (.h) file containing global variable declarations is generated with user-specified name.

#### ImportFromFile

Predefined header (.h) files containing global variable declarations are included.

# Discrete-Time Integrator

---

## FileScope

A static qualifier is generated in front of the state declaration to make the state visible only to the current file.

## Struct

A struct declaration is created to encapsulate parameter or signal object data.

## StructVolatile

Volatile type qualifier is used in struct declaration.

## GetSet

Supports specialized function calls to read and write memory.

## Dependencies

**State name** enables this parameter.

The list of valid storage classes differs based on the **Package** selection.

Setting this parameter to ExportedGlobal, ImportedExtern, or ImportedExternPointer enables **Code generation storage type qualifier**.

## See Also

“State Storage Classes” in the Simulink Coder documentation.

## **Code generation storage type qualifier**

Specify the Simulink Coder storage type qualifier.

### **Settings**

**Default:** ' '

If left blank, no qualifier is assigned.

### **Dependency**

Setting **Code generation storage class** to ExportedGlobal, ImportedExtern, or ImportedExternPointer enables this parameter.

### **Command-Line Information**

**Parameter:** RTWStateStorageTypeQualifier

**Type:** string

**Value:** ' '

**Default:** ' '

# Discrete-Time Integrator

---

## Output minimum

Lower value of the output range that Simulink checks.

## Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the minimum to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output minimum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

## Command-Line Information

**Parameter:** OutMin

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

## Output maximum

Upper value of the output range that Simulink checks.

## Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the maximum value to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output maximum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

## Command-Line Information

**Parameter:** OutMax

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

# Discrete-Time Integrator

---

## Output data type

Specify the output data type.

### Settings

**Default:** Inherit: Inherit via internal rule

Inherit: Inherit via internal rule

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.
- To specify your own inheritance rule, use `Inherit: Inherit via back propagation` and then use a Data Type Propagation block. Examples of how to use this block are available in the Signal Attributes library Data Type Propagation Examples block.

Inherit: Inherit via back propagation

Use data type of the driving block.

`double`

Output data type is double.

`single`

Output data type is single.

`int8`

Output data type is int8.

`uint8`  
Output data type is `uint8`.

`int16`  
Output data type is `int16`.

`uint16`  
Output data type is `uint16`.

`int32`  
Output data type is `int32`.

`uint32`  
Output data type is `uint32`.

`fixdt(1,16,0)`  
Output data type is fixed point `fixdt(1,16,0)`.

`fixdt(1,16,2^0,0)`  
Output data type is fixed point `fixdt(1,16,2^0,0)`.

`<data type expression>`  
Use a data type object, for example, `Simulink.NumericType`.

## Command-Line Information

**Parameter:** `OutDataTypeStr`

**Type:** `string`

**Value:** `'Inherit: Inherit via internal rule' | 'Inherit: Inherit via back propagation' | 'double' | 'single' | 'int8' | 'uint8' | 'int16' | 'uint16' | 'int32' | 'uint32' | 'fixdt(1,16,0)' | 'fixdt(1,16,2^0,0)'`

**Default:** `'Inherit: Inherit via internal rule'`

## See Also

For more information, see “Specify Block Output Data Types”.

# Discrete-Time Integrator

---

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Inherit

### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit via internal rule (default)
- Inherit via back propagation

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

### Fixed point

Fixed-point data types.

### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

## Dependency

Clicking the **Show data type assistant** button enables this parameter.

## Command-Line Information

**Parameter:** OutDataTypeStr

**Type:** string

**Value:** 'Inherit: Inherit via internal rule' | 'Inherit: Inherit via back propagation' | 'double' | 'single' | 'int8' | 'uint8' | 'int16' | 'uint16' | 'int32' | 'uint32' | 'fixdt(1,16,0)' | 'fixdt(1,16,2^0,0)'

**Default:** 'Inherit: Inherit via internal rule'

## See Also

See “Specify Data Types Using Data Type Assistant”.

# Discrete-Time Integrator

---

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is Built in or Fixed point.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > Fixed point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Discrete-Time Integrator

---

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

# Discrete-Time Integrator

---

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Slope**

Specify slope for the fixed-point data type.

### **Settings**

**Default:**  $2^0$

Specify any positive real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Bias**

Specify bias for the fixed-point data type.

### **Settings**

**Default:** 0

Specify any real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.


### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Discrete-Time Integrator

## Examples

The `sldemo_fuelsys` model uses a Discrete-Time Integrator block in the `fuel_rate_control/airflow_calc` subsystem. This block uses the Forward Euler integration method.

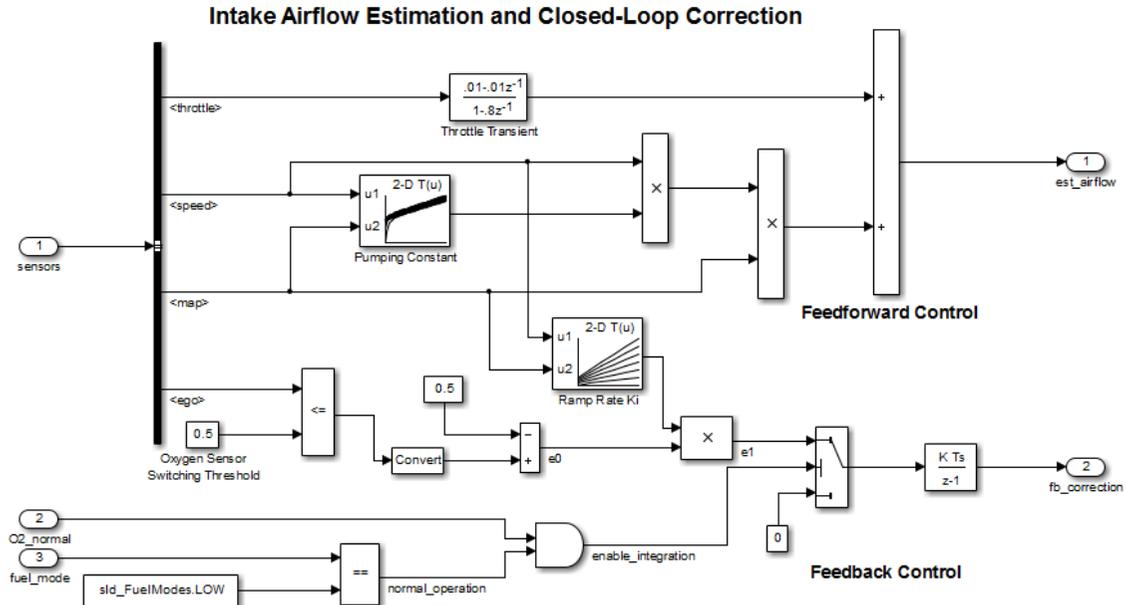

When the Switch block feeds a nonzero value into the Discrete-Time Integrator block, integration occurs. Otherwise, integration does not occur.

## Characteristics

Direct Feedthrough	Yes, of the reset and external initial condition source ports. The input has direct feedthrough for every integration method except Forward Euler and accumulation Forward Euler.
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of parameters

States	Inherited from driving block and parameter
Dimensionalized	Yes
Multidimensionalized	No
Zero-Crossing Detection	No

**See Also**


Integrator

# Discrete Transfer Fcn

**Purpose** Implement discrete transfer function

**Library** Discrete

**Description** The Discrete Transfer Fcn block implements the  $z$ -transform transfer function:

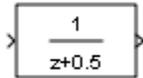

$$H(z) = \frac{num(z)}{den(z)} = \frac{num_0 z^m + num_1 z^{m-1} + \dots + num_m}{den_0 z^n + den_1 z^{n-1} + \dots + den_n}$$

where  $m+1$  and  $n+1$  are the number of numerator and denominator coefficients, respectively.  $num$  and  $den$  contain the coefficients of the numerator and denominator in descending powers of  $z$ .  $num$  can be a vector or matrix,  $den$  must be a vector, and you specify both as parameters on the block dialog box. The order of the denominator must be greater than or equal to the order of the numerator.

Specify the coefficients of the numerator and denominator polynomials in descending powers of  $z$ . This block lets you use polynomials in  $z$  to represent a discrete system, a method that control engineers typically use. Conversely, the Discrete Filter block lets you use polynomials in  $z^{-1}$  (the delay operator) to represent a discrete system, a method that signal processing engineers typically use. The two methods are identical when the numerator and denominator polynomials have the same length.

The Discrete Transfer Fcn block applies the  $z$ -transform transfer function to each independent channel of the input. The **Input processing** parameter allows you to specify whether the block treats each element of the input as an individual channel (sample-based processing), or each column of the input as an individual channel (frame-based processing). To perform frame-based processing, you must have a DSP System Toolbox license.

## Specifying Initial States

Use the **Initial states** parameter to specify initial filter states. To determine the number of initial states you must specify and how to specify them, see the following tables.

## Frame-Based Processing

Input	Number of Channels	Valid Initial States (Dialog Box)	Valid Initial States (Input Port)
<ul style="list-style-type: none"> <li>• Column vector (<math>K</math>-by-1)</li> <li>• Unoriented vector (<math>K</math>)</li> </ul>	1	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Column vector (<math>M</math>-by-1)</li> <li>• Row vector (1-by-<math>M</math>)</li> </ul>	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Column vector (<math>M</math>-by-1)</li> </ul>
<ul style="list-style-type: none"> <li>• Row vector (1-by-<math>N</math>)</li> <li>• Matrix (<math>K</math>-by-<math>N</math>)</li> </ul>	$N$	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Column vector (<math>M</math>-by-1)</li> <li>• Row vector (1-by-<math>M</math>)</li> <li>• Matrix (<math>M</math>-by-<math>N</math>)</li> </ul>	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Matrix (<math>M</math>-by-<math>N</math>)</li> </ul>

## Sample-Based Processing

Input	Number of Channels	Valid Initial States (Dialog Box)	Valid Initial States (Input Port)
<ul style="list-style-type: none"> <li>• Scalar</li> </ul>	1	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Column vector (<math>M</math>-by-1)</li> </ul>	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Column vector (<math>M</math>-by-1)</li> </ul>

# Discrete Transfer Fcn

## Sample-Based Processing (Continued)

Input	Number of Channels	Valid Initial States (Dialog Box)	Valid Initial States (Input Port)
		<ul style="list-style-type: none"> <li>• Row vector (1-by-<math>M</math>)</li> </ul>	<ul style="list-style-type: none"> <li>• Row vector (1-by-<math>M</math>)</li> </ul>
<ul style="list-style-type: none"> <li>• Row vector (1-by-<math>N</math>)</li> <li>• Column vector (<math>N</math>-by-1)</li> <li>• Unoriented vector (<math>N</math>)</li> </ul>	$N$	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Column vector (<math>M</math>-by-1)</li> <li>• Row vector (1-by-<math>M</math>)</li> <li>• Matrix (<math>M</math>-by-<math>N</math>)</li> </ul>	<ul style="list-style-type: none"> <li>• Scalar</li> </ul>
<ul style="list-style-type: none"> <li>• Matrix (<math>K</math>-by-<math>N</math>)</li> </ul>	$K \times N$	<ul style="list-style-type: none"> <li>• Scalar</li> <li>• Column vector (<math>M</math>-by-1)</li> <li>• Row vector (1-by-<math>M</math>)</li> <li>• Matrix (<math>M</math>-by-<math>(K \times N)</math>)</li> </ul>	<ul style="list-style-type: none"> <li>• Scalar</li> </ul>

When the **Initial states** is a scalar, the block initializes all filter states to the same scalar value. Enter 0 to initialize all states to zero. When the **Initial states** is a vector or a matrix, each vector or matrix element specifies a unique initial state for a corresponding delay element in a corresponding channel:

- The vector length must equal the number of delay elements in the filter,  $M = \max(\text{number of zeros}, \text{number of poles})$ .


- The matrix must have the same number of rows as the number of delay elements in the filter,  $M = \max(\text{number of zeros, number of poles})$ . The matrix must also have one column for each channel of the input signal.

The following example shows the relationship between the initial filter output and the initial input and state. Given an initial input  $u_1$ , the first output  $y_1$  is related to the initial state  $[x_1, x_2]$  and initial input by:

$$y_1 = 4x_1$$

$$x_2 = 1/2(u_1 - 3x_1)$$

# Discrete Transfer Fcn

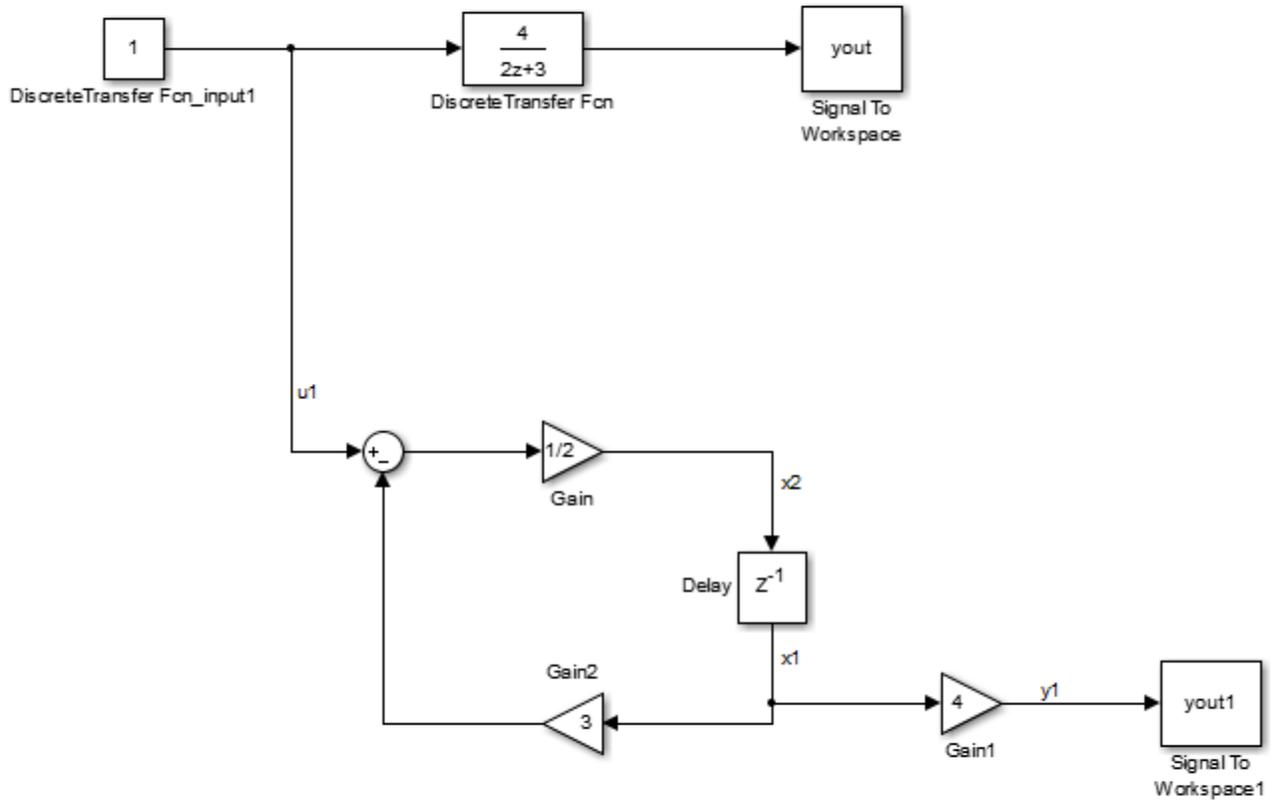


## Data Type Support

The Discrete Transfer Function block accepts and outputs real and complex signals of any signed numeric data type that Simulink supports. The block supports the same types for the numerator and denominator coefficients.

Numerator and denominator coefficients must have the same complexity. They can have different word lengths and fraction lengths.


States are complex when either the input or the coefficients are complex.

The following diagrams show the filter structure and the data types that the block uses for floating-point and fixed-point signals.

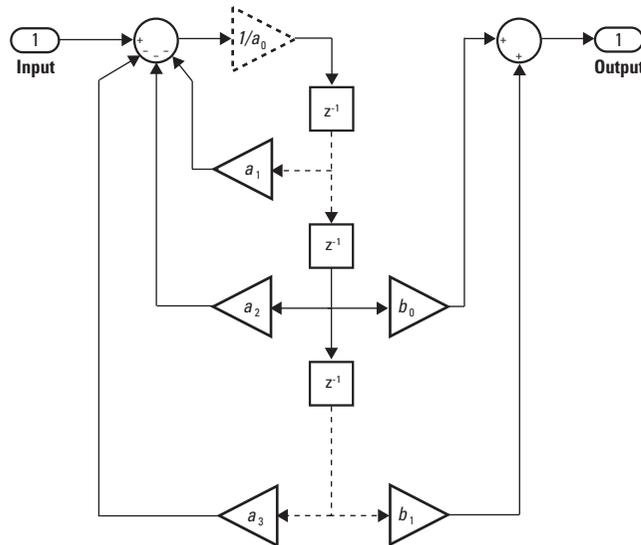

The block omits the dashed divide when you select the **Optimize by skipping divide by leading denominator coefficient (a0)** parameter.

# Discrete Transfer Fcn

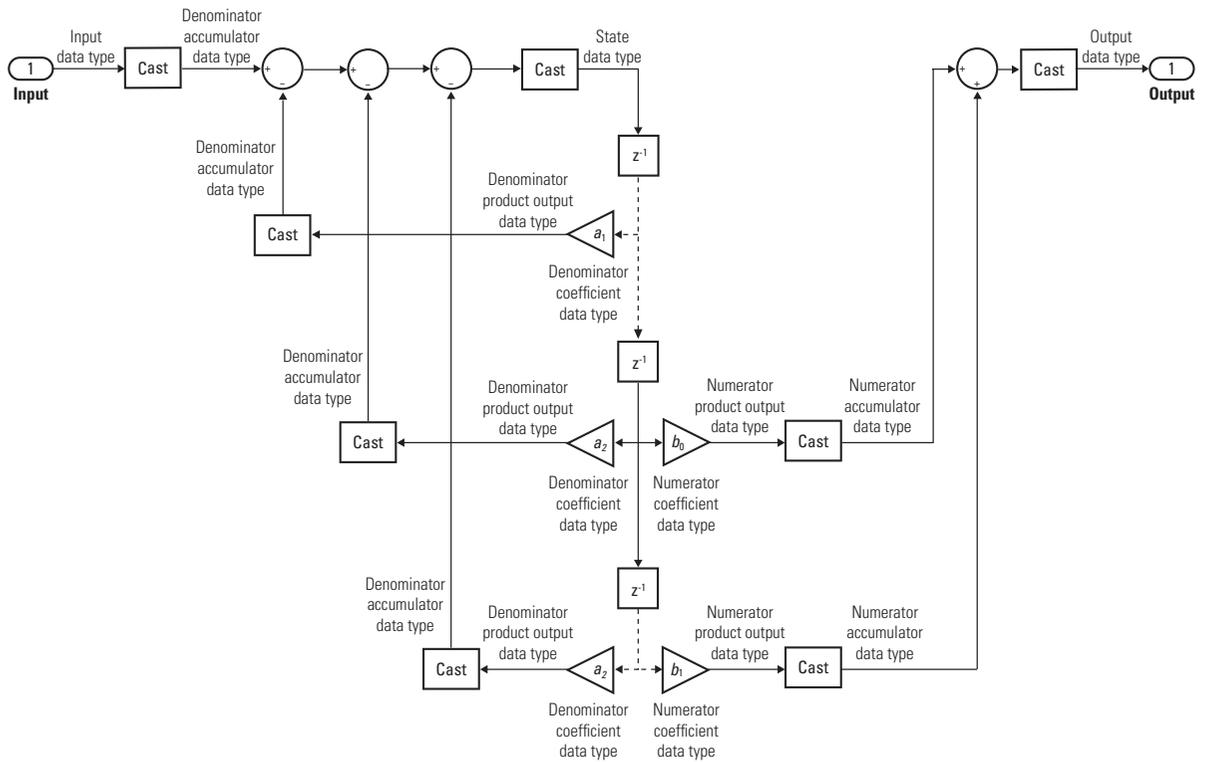

## Parameters and Dialog Box

The **Main** pane of the Discrete Transfer Fcn block dialog box appears as follows.

Function Block Parameters: Discrete Transfer Fcn

Discrete Transfer Fcn

Implement a z-transform transfer function. Specify the numerator and denominator coefficients in descending powers of z. The order of the denominator must be greater than or equal to the order of the numerator.

Main | Data Types | State Attributes

Data

	Source	Value
Numerator:	Dialog	[1]
Denominator:	Dialog	[1 0.5]
Initial states:	Dialog	0

Algorithm

External reset: None

Input processing: Elements as channels (sample based)

Optimize by skipping divide by leading denominator coefficient (a0)

Sample time (-1 for inherited): 1

OK Cancel Help Apply

## Numerator

Numerator coefficients of the discrete transfer function. To specify the coefficients, set the **Source** to **Dialog**. Then enter the coefficients in **Value** as descending powers of z. Use a row vector to specify the coefficients for a single numerator polynomial. Use a matrix to specify coefficients for multiple filters to be applied to the same input. Each matrix row represents a set of filter taps.

# Discrete Transfer Fcn

---

## Denominator

Denominator coefficients of the discrete transfer function. To specify the coefficients, set the **Source** to **Dialog**. Then, enter the coefficients in **Value** as descending powers of  $z$ . Use a row vector to specify the coefficients for a single denominator polynomial.

Use a matrix to specify coefficients for multiple filters to be applied to the same input. Each matrix row represents a set of filter taps.

## Initial states

If the **Source** is **Dialog**, then, in **Value**, specify the initial states of the filter states. To learn how to specify initial states, see “Specifying Initial States” on page 1-532.

If the **Source** is **Input port**, then there is nothing to be specified for **Value**.

## External reset

Specify the trigger event to use to reset the states to the initial conditions.

Reset Mode	Behavior
None	No reset.
Rising	Reset on a rising edge.
Falling	Reset on a falling edge.
Either	Reset on either a rising or falling edge.
Level	Reset in either of these cases: <ul style="list-style-type: none"><li>• when there is a nonzero at the current time step</li><li>• when the time step value changes from nonzero at the previous time step to zero at the current time step</li></ul>
Level hold	Reset when nonzero at the current time step.

The reset signal must be a scalar of type `single`, `double`, `boolean`, or `integer`. Fixed point data types, except for `ufix1`, are not supported.

## Input processing

Specify whether the block performs sample- or frame-based processing.

- **Elements as channels (sample based)** — Process each element of the input as an independent channel.
- **Columns as channels (frame based)** — Process each column of the input as an independent channel.

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

## Optimize by skipping divide by leading denominator coefficient (a0)

Select when the leading denominator coefficient,  $a_0$ , equals one. This parameter optimizes your code.

When you select this check box, the block does not perform a divide-by- $a_0$  either in simulation or in the generated code. An error occurs if  $a_0$  is not equal to one.


When you clear this check box, the block is fully tunable during simulation, and performs a divide-by- $a_0$  in both simulation and code generation.

## Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to `-1`. See “Specify Sample Time” in “How Simulink Works” in the *Simulink User’s Guide*.

# Discrete Transfer Fcn


The **Data Types** pane of the Discrete Transfer Function block dialog box appears as follows.

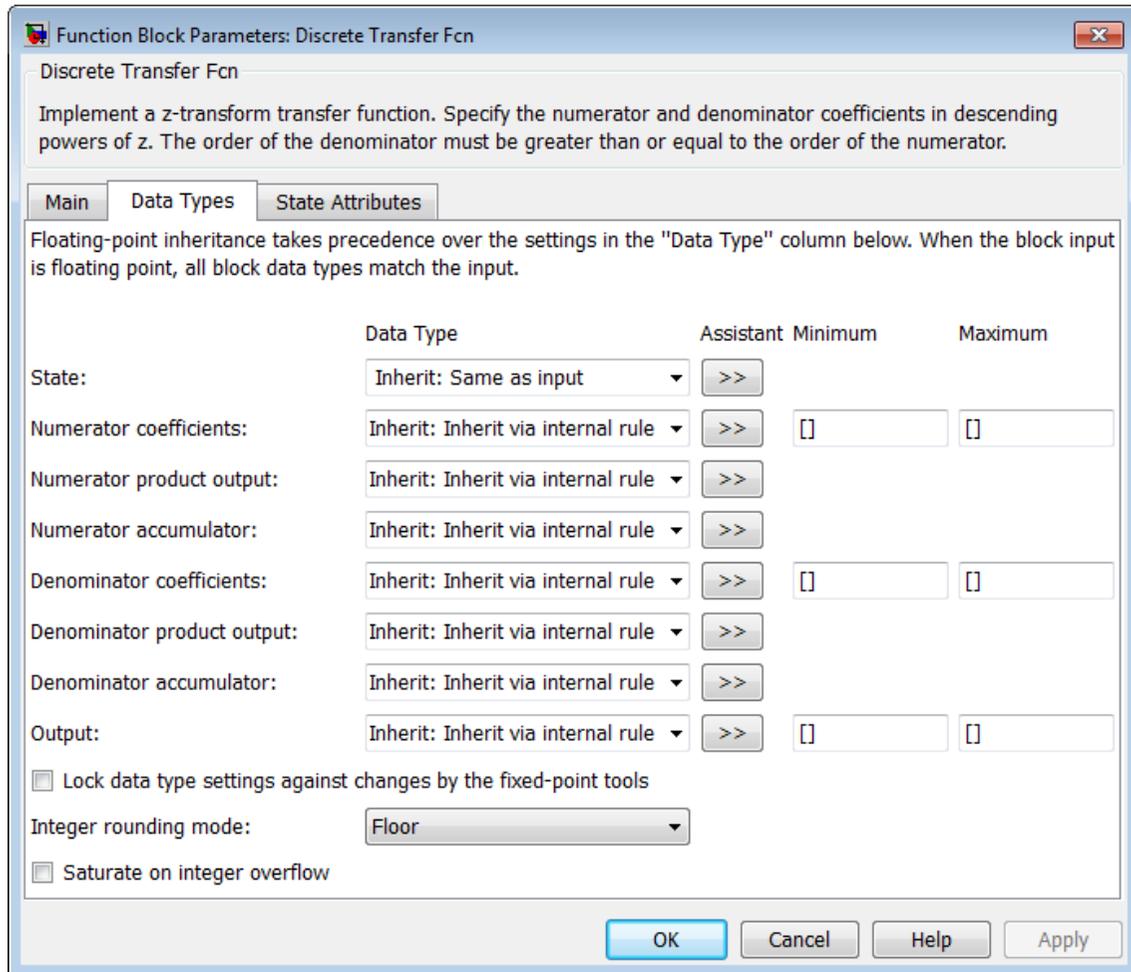

## State

Specify the state data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Same as input`
- A built-in integer, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

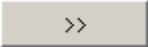Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **State** parameter.

See “Specify Data Types Using Data Type Assistant” in the *Simulink User’s Guide* for more information.

## **Numerator coefficients**

Specify the numerator coefficient data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in integer, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Numerator coefficients** parameter.

See “Specify Data Types Using Data Type Assistant” in the *Simulink User’s Guide* for more information.

# Discrete Transfer Fcn

---

## Numerator coefficient minimum

Specify the minimum value that a numerator coefficient can have. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

## Numerator coefficient maximum

Specify the maximum value that a numerator coefficient can have. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

## Numerator product output

Specify the product output data type for the numerator coefficients. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Numerator product output** parameter.

See “Specify Data Types Using Data Type Assistant” in the *Simulink User’s Guide* for more information.

## Numerator accumulator

Specify the accumulator data type for the numerator coefficients.

You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Numerator accumulator** parameter.

See “Specify Data Types Using Data Type Assistant” in the *Simulink User’s Guide* for more information.

## Denominator coefficients

Specify the denominator coefficient data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in integer, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Denominator coefficients** parameter.

# Discrete Transfer Fcn

---

See “Specify Data Types Using Data Type Assistant” in the *Simulink User’s Guide* for more information.

## Denominator coefficient minimum

Specify the minimum value that a denominator coefficient can have. The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

## Denominator coefficient maximum

Specify the maximum value that a denominator coefficient can have. The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

## Denominator product output

Specify the product output data type for the denominator coefficients. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Denominator product output** parameter.

See “Specify Data Types Using Data Type Assistant” in the *Simulink User’s Guide* for more information.

## Denominator accumulator

Specify the accumulator data type for the denominator coefficients. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`


Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Denominator accumulator** parameter.

See “Specify Data Types Using Data Type Assistant” in the *Simulink User’s Guide* for more information.

## Output

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- A built-in data type, for example, `int8`
- A data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

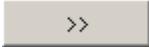Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output** parameter.

# Discrete Transfer Fcn

---

See “Specify Block Output Data Types” in the *Simulink User’s Guide* for more information.

## Output minimum

Specify the minimum value that the block can output. The default value is [] (unspecified). Simulink uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output maximum

Specify the maximum value that the block can output. The default value is [] (unspecified). Simulink uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Lock data type settings against changes by the fixed-point tools

Select to lock all data type settings of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Lock the Output Data Type Setting” in the Fixed-Point Designer documentation.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate on integer overflow


Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value

Action	Reasons for Taking This Action	What Happens for Overflows	Example
			causes overflow of the 8-bit integer. With the check box selected, the block output saturates at 127. Similarly, the block output saturates at a minimum output value of -128.
Do not select this check box.	<p>You want to optimize efficiency of your generated code.</p> <p>You want to avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.</p>	Overflows wrap to the appropriate value that is representable by the data type.	<p>The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value as <code>int8</code>, which can produce an unintended result. For example, a block result of 130 (binary 1000 0010) expressed as <code>int8</code>, is -126.</p>

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

# Discrete Transfer Fcn

The **State Attributes** pane of the Discrete Filter block dialog box appears as follows.

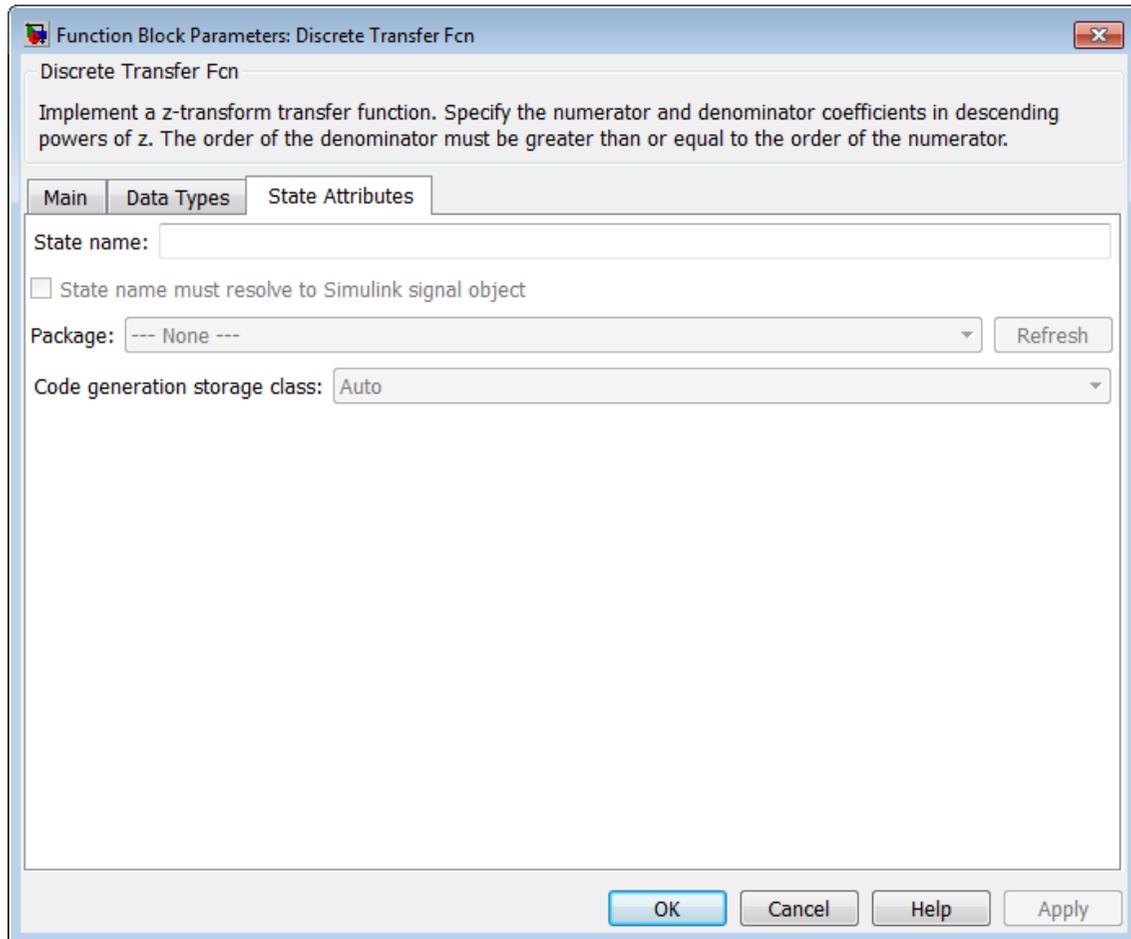

## State name

Use this parameter to assign a unique name to the block state. The default is ' '. When this field is blank, no name is assigned. When using this parameter, remember these considerations:

- A valid identifier starts with an alphabetic or underscore character, followed by alphanumeric or underscore characters.
- The state name applies only to the selected block.

This parameter enables **State name must resolve to Simulink signal object** when you click **Apply**.

For more information, see “States” in the Simulink Coder documentation.

## State name must resolve to Simulink signal object

Select this check box to require that the state name resolve to a Simulink signal object. This check box is cleared by default.

**State name** enables this parameter.

Selecting this check box disables **Code generation storage class**.

## Package

Select a package that defines the custom storage class you want to apply. If you have defined any packages of your own, click **Refresh**. This action adds all user-defined packages on your search path to the package list.

## Code generation storage class

Select custom storage class for state.

**Default:** Auto

### Auto

Auto is the appropriate storage class for states that you do not need to interface to external code.

# Discrete Transfer Fcn

---

## SimulinkGlobal

*model\_P* initializes the state to its corresponding value in the workspace.

## ExportedGlobal

State is stored in a global variable

## ImportedExtern

*model\_private.h* declares the state as an extern variable.

## ImportedExternPointer

*model\_private.h* declares the state as an extern pointer.

## Default

A non-editable placeholder storage class is created.

## BitField

A struct declaration is created that embeds Boolean data.

## Volatile

Volatile type qualifier is used in state declaration.

## ExportToFile

Header (.h) file containing global variable declarations is generated with user-specified name.

## ImportFromFile

Predefined header (.h) files containing global variable declarations are included.

## FileScope

A static qualifier is generated in front of the state declaration to make the state visible only to the current file.

## Struct

A struct declaration is created to encapsulate parameter or signal object data.

## StructVolatile

Volatile type qualifier is used in struct declaration.

## GetSet

Supports specialized function calls to read and write memory.

**State name** enables this parameter.

The list of valid storage classes differs based on the **Package** selection.

Setting this parameter to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables **Code generation storage type qualifier**.

### **Code generation storage type qualifier**

Specify a Simulink Coder storage type qualifier. The default is ' '. When this field is blank, no qualifier is assigned.

The Simulink Coder product does not check this string for errors. Thus, whatever value you enter appears automatically in the variable declaration.

Setting **Code generation storage class** to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables this parameter.

During simulation, the block uses the following values:

- The initial value of the signal object to which the state name resolves
- Minimum and maximum values of the signal object

For more information, see “States” in the Simulink Coder documentation.

# Discrete Transfer Fcn

---


## Characteristics

Direct Feedthrough	Only when the leading numerator coefficient is not equal to zero and the numerator order equals the denominator order
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of initial states
States	See “Specifying Initial States” on page 1-532
Dimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Model system defined by zeros and poles of discrete transfer function

**Library** Discrete

**Description** The Discrete Zero-Pole block models a discrete system defined by the zeros, poles, and gain of a  $z$ -domain transfer function. This block assumes that the transfer function has the following form:

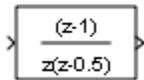


$$H(z) = K \frac{Z(z)}{P(z)} = K \frac{(z - Z_1)(z - Z_2) \dots (z - Z_m)}{(z - P_1)(z - P_2) \dots (z - P_n)},$$

where  $Z$  represents the zeros vector,  $P$  the poles vector, and  $K$  the gain. The number of poles must be greater than or equal to the number of zeros ( $n \geq m$ ). If the poles and zeros are complex, they must be complex conjugate pairs.

The block displays the transfer function depending on how the parameters are specified. See [Zero-Pole](#) for more information.

**Data Type Support** The Discrete Zero-Pole block accepts and outputs real signals of type `double` and `single`. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Discrete Zero-Pole

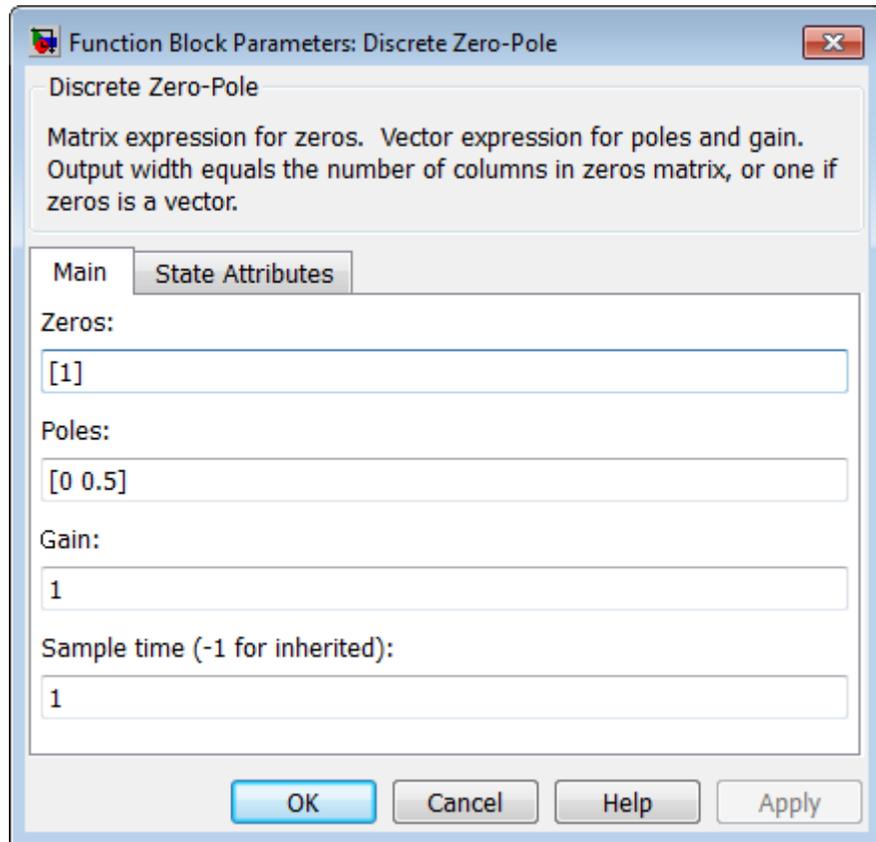

## Parameters and Dialog Box

### Zeros

Specify the matrix of zeros. The default is [1].

### Poles

Specify the vector of poles. The default is [0 0.5].


### Gain

Specify the gain. The default is 1.

## Sample time

Specify the time interval between samples. See Specifying Sample Time in the “How Simulink Works” chapter of the Simulink documentation.

The **State Attributes** pane of the Discrete Zero-Pole block dialog box appears as follows:

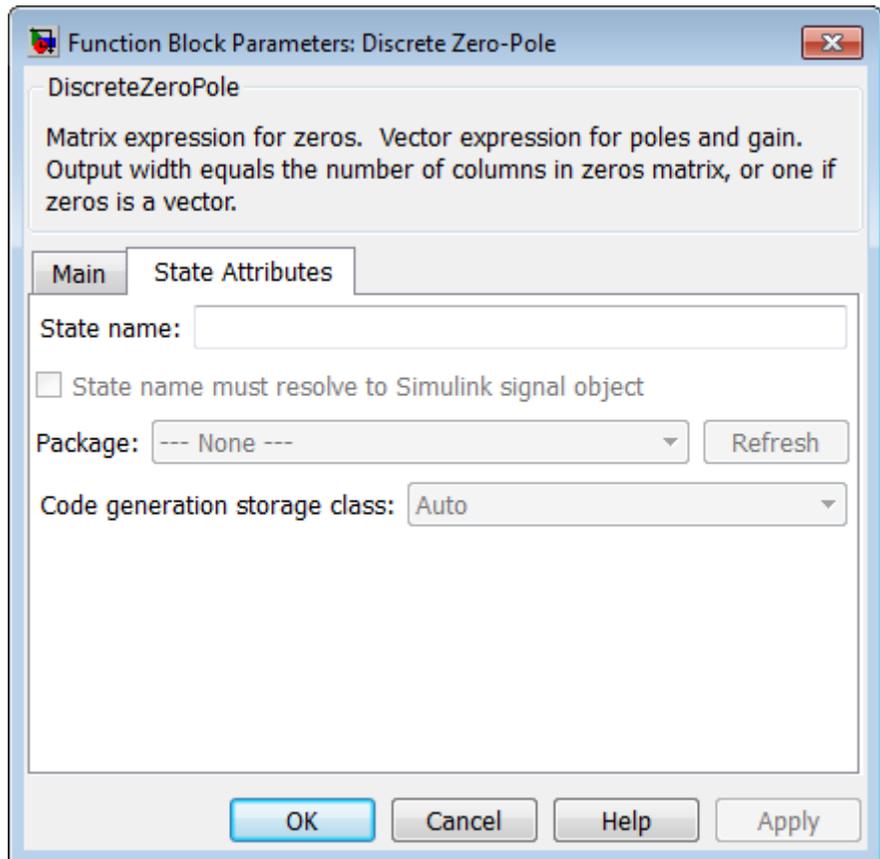

# Discrete Zero-Pole

---

## State name

Use this parameter to assign a unique name to the block state. The default is ' '. When this field is blank, no name is assigned. When using this parameter, remember these considerations:

- A valid identifier starts with an alphabetic or underscore character, followed by alphanumeric or underscore characters.
- The state name applies only to the selected block.

This parameter enables **State name must resolve to Simulink signal object** when you click **Apply**.

For more information, see “States” in the Simulink Coder documentation.

## State name must resolve to Simulink signal object

Select this check box to require that the state name resolve to a Simulink signal object. This check box is cleared by default.

**State name** enables this parameter.

Selecting this check box disables **Code generation storage class**.

## Package

Select a package that defines the custom storage class you want to apply. If you have defined any packages of your own, click **Refresh**. This action adds all user-defined packages on your search path to the package list.

## Code generation storage class

Select custom storage class for state.

**Default:** Auto

Auto

Auto is the appropriate storage class for states that you do not need to interface to external code.

## SimulinkGlobal

*model\_P* initializes the state to its corresponding value in the workspace.

## ExportedGlobal

State is stored in a global variable

## ImportedExtern

*model\_private.h* declares the state as an extern variable.

## ImportedExternPointer

*model\_private.h* declares the state as an extern pointer.

## Default

A non-editable placeholder storage class is created.

## BitField

A struct declaration is created that embeds Boolean data.

## Volatile

Volatile type qualifier is used in state declaration.

## ExportToFile

Header (.h) file containing global variable declarations is generated with user-specified name.

## ImportFromFile

Predefined header (.h) files containing global variable declarations are included.

## FileScope

A static qualifier is generated in front of the state declaration to make the state visible only to the current file.

## Struct

A struct declaration is created to encapsulate parameter or signal object data.

## StructVolatile

Volatile type qualifier is used in struct declaration.

## GetSet

Supports specialized function calls to read and write memory.

**State name** enables this parameter.

The list of valid storage classes differs based on the **Package** selection.

Setting this parameter to ExportedGlobal, ImportedExtern, or ImportedExternPointer enables **Code generation storage type qualifier**.

### **Code generation storage type qualifier**

Specify a Simulink Coder storage type qualifier. The default is ' '. When this field is blank, no qualifier is assigned.

The Simulink Coder product does not check this string for errors. Thus, whatever value you enter appears automatically in the variable declaration.

Setting **Code generation storage class** to ExportedGlobal, ImportedExtern, or ImportedExternPointer enables this parameter.

During simulation, the block uses the following values:

- The initial value of the signal object to which the state name is resolved
- Min and Max values of the signal object

For more information, see “States” in the Simulink Coder documentation.

## Characteristics

Direct Feedthrough	Yes, if the number of zeros and poles are equal
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
States	Length of <b>Poles</b> vector
Dimensionalized	No
Zero Crossing	No

# Display

---

**Purpose** Show value of input

**Library** Sinks

## Description



## Format Options

You control the display format using the **Format** parameter:

If you select...	The block displays...
short	A 5-digit scaled value with fixed decimal point
long	A 15-digit scaled value with fixed decimal point
short_e	A 5-digit value with a floating decimal point
long_e	A 16-digit value with a floating decimal point
bank	A value in fixed dollars and cents format (but with no \$ or commas)
hex (Stored Integer)	The stored integer value of a fixed-point input in hexadecimal format
binary (Stored Integer)	The stored integer value of a fixed-point input in binary format

If you select...	The block displays...
decimal (Stored Integer)	The stored integer value of a fixed-point input in decimal format
octal (Stored Integer)	The stored integer value of a fixed-point input in octal format

If the input to a Display block has an enumerated data type (see “About Simulink Enumerations” and “Define Simulink Enumerations”):

- The block displays enumerated values, not the values of underlying integers.
- Setting **Format** to any of the Stored Integer settings causes an error.

## Display Abbreviations

The following abbreviations appear on the Display block to help you identify the format of the value.

When you see...	The value that appears is...
(SI)	The stored integer value  <b>Note</b> (SI) does not appear when the signal is of an integer data type.
hex	In hexadecimal format
bin	In binary format
oct	In octal format

## Frequency of Data Display

The amount of data that appears and the time steps at which the data appears depend on the **Decimation** block parameter and the `SampleTime` property:

- The **Decimation** parameter enables you to display data at every  $n$ th sample, where  $n$  is the decimation factor. The default decimation, 1, displays data at every time step.

---

**Note** The Display block updates its display at the initial time, even when the **Decimation** value is greater than one.

---

- The `SampleTime` property, which you can set with `set_param`, enables you to specify a sampling interval at which to display points. This property is useful when you are using a variable-step solver where the interval between time steps is not the same. The default sample time, -1, causes the block to ignore the sampling interval when determining the points to display.

## Resizing Options

If the block input is an array, you can resize the block to show more than just the first element. You can resize the block vertically or horizontally, and the block adds display fields in the appropriate direction. A black triangle indicates that the block is not displaying all input array elements.

The Display block shows the first 200 elements of a vector signal and the first 20 rows and 10 columns of a matrix signal.

## Floating Display

To use the block as a floating display, select the **Floating display** check box. The block input port disappears and the block displays the value of the signal on a selected line.

If you select **Floating display**:

- Turn off signal storage reuse for your model. See “Signal storage reuse” in the Simulink documentation for more information.
- Do not connect a multidimensional signal to a floating display. Otherwise, you get a simulation error because the block does not support multidimensional signals.

## **Data Type Support**


The Display block accepts real or complex signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Display

## Parameters and Dialog Box

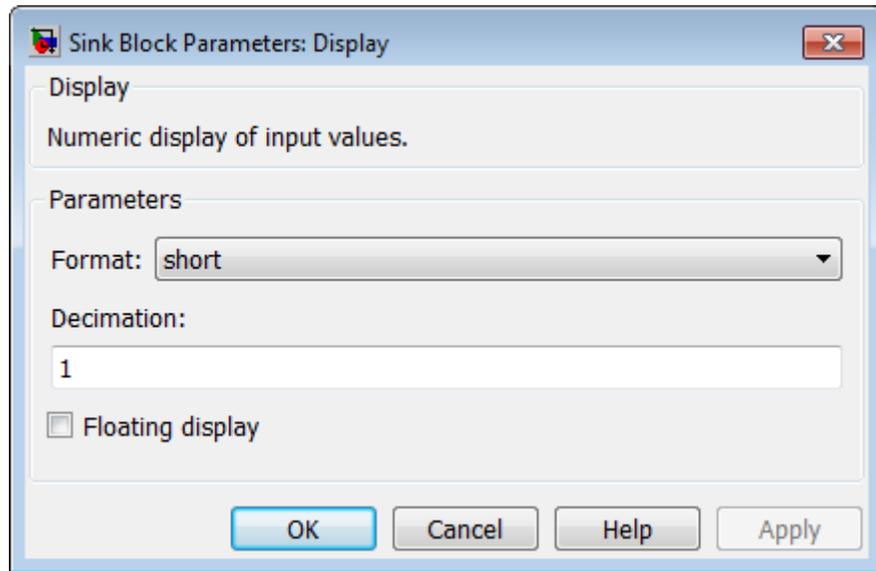

### Format

Specify the format of the data that appears, as discussed in “Format Options” on page 1-562. The default is short.

### Decimation


Specify how often to display data, as discussed in “Frequency of Data Display” on page 1-564. The default is 1.

### Floating display

Select to use the block as a floating display, as discussed in “Floating Display” on page 1-564.

## Examples

The `sldemo_auto_climatecontrol` model shows how you can use the Display block.

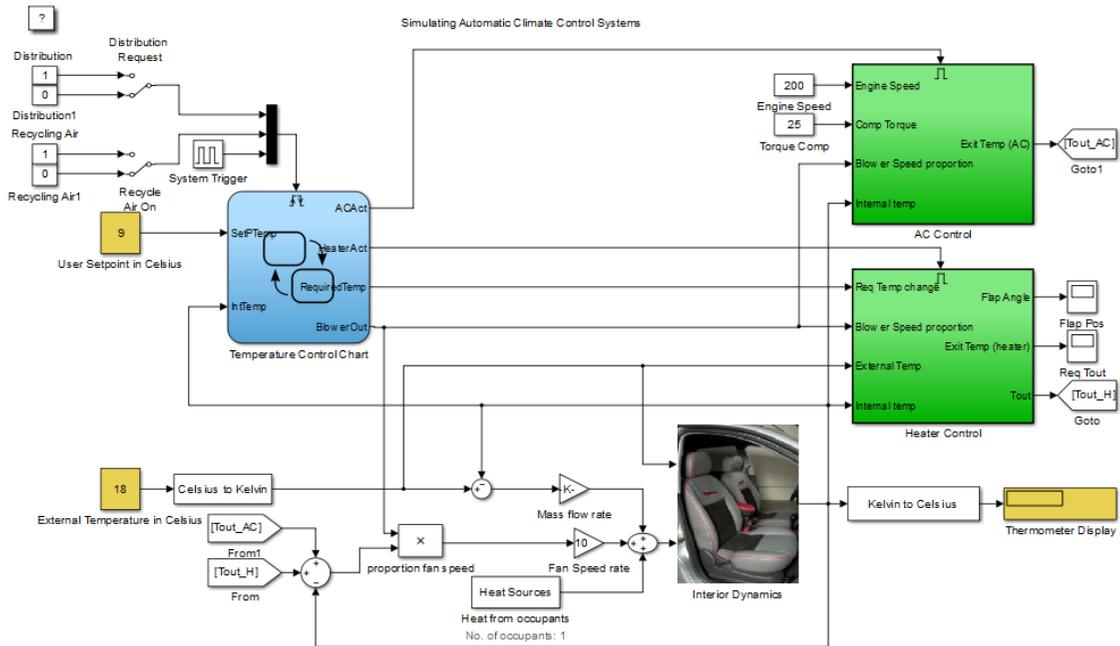

## Characteristics

Sample Time	Use <code>set_param</code> to specify the <code>SampleTime</code> property
Dimensionalized	Yes
Multidimensionalized	No
Zero-Crossing Detection	No

## See Also

Scope

# Divide

---

**Purpose** Divide one input by another

**Library** Math Operations

**Description** **Supported Block Operations**



The Divide block outputs the result of dividing its first input by its second. The inputs can be scalars, a scalar and a nonscalar, or two nonscalars that have the same dimensions. The Divide block is functionally a Product block that has two block parameter values preset:

- **Multiplication:** Element-wise (.\*)
- **Number of Inputs:** \*/

Setting non-default values for either of those parameters can change a Divide block to be functionally equivalent to a Product block or a Product of Elements block. See the documentation of those two blocks for more information.

## Expected Differences Between Simulation and Code Generation

If any of the Divide block inputs contains a NaN or inf value, or if the block generates NaN or inf during execution, you might see different results when you compare the block simulation results with the generated code. This difference is due to the nonfinite NaN or inf values. In such cases, inspect your model configuration and eliminate the conditions that produce NaN or inf.

## Code Optimizations

The Simulink Coder build process provides efficient code for matrix inverse and division operations. The following summary describes the benefits and when each benefit is available:

<b>Benefit</b>	<b>Small matrices (2-by-2 to 5-by-5)</b>	<b>Medium matrices (6-by-6 to 20-by-20)</b>	<b>Large matrices (larger than 20-by-20)</b>
Faster code execution time, compared to R2011a and earlier releases	Yes	No	Yes
Reduced ROM and RAM usage, compared to R2011a and earlier releases	Yes, for real values	Yes, for real values	Yes, for real values
Reuse of variables	Yes	Yes	Yes
Dead code elimination	Yes	Yes	Yes
Constant folding	Yes	Yes	Yes
Expression folding	Yes	Yes	Yes
Consistency with MATLAB Coder results	Yes	Yes	Yes

For blocks that have three or more inputs of different dimensions, the code might include an extra buffer to store temporary variables for intermediate results.


# Divide

## Parameters and Dialog Box

The Divide block has the same parameters and dialog box as the Product block. If all you need is to divide two inputs to create an output, you can use the Divide block with default parameter values. If you need additional capabilities, see the Product block documentation, which also describes the capabilities of the Divide block's "Signal Attributes Pane" on page 1-1356.

## Examples

The following examples show the output of the Divide block for some typical inputs using default block parameter values.

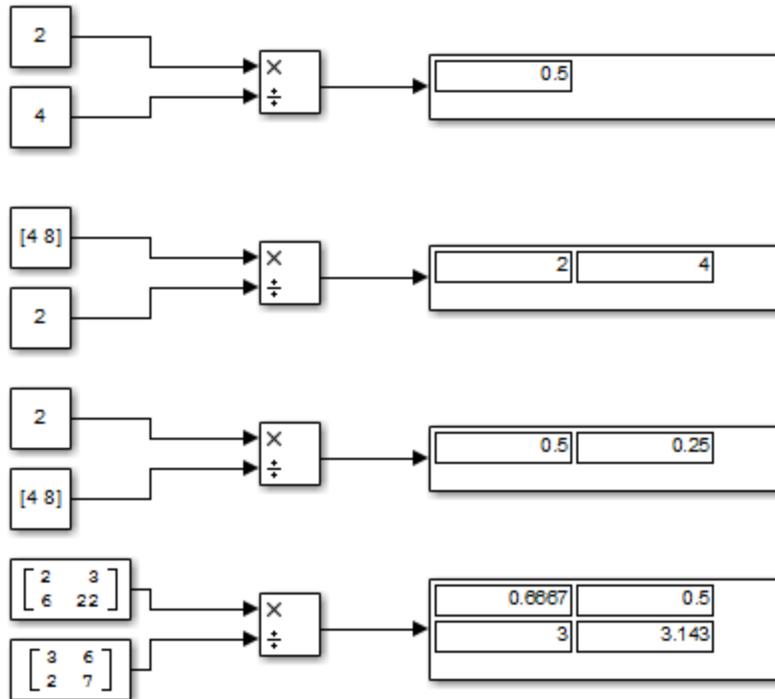

**Purpose**

Create text that documents model and save text with model

**Library**

Model-Wide Utilities

**Description**

The DocBlock allows you to create and edit text that documents a model, and save that text with the model. Double-clicking an instance of the block creates a temporary file containing the text associated with this block and opens the file in an editor. Use the editor to modify the text and save the file. Simulink software stores the contents of the saved file in the model file.

The DocBlock supports HTML, Rich Text Format (RTF), and ASCII text document types. The default editors for these different document types are

- HTML — Microsoft® Word (if available). Otherwise, the DocBlock opens HTML documents using the editor specified on the **Editor/Debugger Preferences** pane of the Preferences dialog box.
- RTF — Microsoft Word (if available). Otherwise, the DocBlock opens RTF documents using the editor specified on the **Editor/Debugger Preferences** pane of the Preferences dialog box.
- Text — The DocBlock opens text documents using the editor specified on the **Editor/Debugger Preferences** pane of the Preferences dialog box.


Use the docblock command to change the default editors.

**Data Type Support**

Not applicable.

## Parameters and Dialog Box

Double-clicking an instance of the DocBlock opens an editor. To access the DocBlock parameter dialog box, select the block in the Model Editor and then select **Mask Parameters** from either the **Edit** menu or the block's context menu.

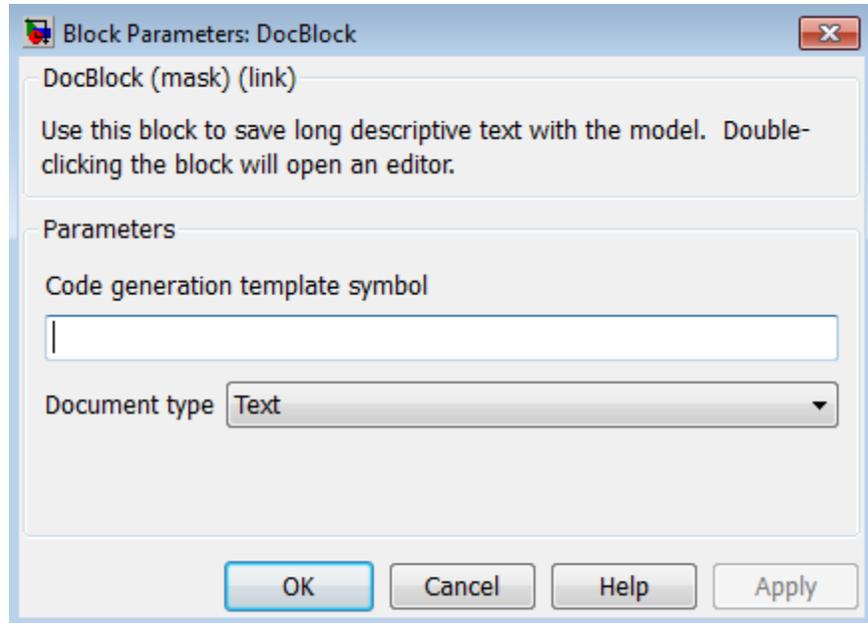

**Code generation template symbol** (Embedded Coder® license required)

Enter a template symbol name in this field. Embedded Coder software uses this symbol to add comments to the code generated from the model. For more information, see “Add Global Comments”.

### **Document type**

Select the type of document associated with the DocBlock. The options are:

- Text (the default)

- RTF
- HTML

---

**Note** If you are using a DocBlock to add comments to your code during code generation, ensure that you set the **Document Type** as **Text**. If you set the **Document Type** as RTF or HTML, your comments will not appear in the code.

---

**Characteristics** Not applicable

# Dot Product

**Purpose** Generate dot product of two vectors

**Library** Math Operations

**Description** The Dot Product block generates the dot product of the vectors at its inputs. The scalar output,  $y$ , is equal to the MATLAB operation



$$y = \text{sum}(\text{conj}(u1) .* u2)$$

where  $u1$  and  $u2$  represent the vectors at the block's top and bottom inputs, respectively. (See "How to Rotate a Block" in the Simulink documentation for a description of the port order for various block orientations.) The inputs can be vectors, column vectors (single-column matrices), or scalars. If both inputs are vectors or column vectors, they must be the same length. If  $u1$  and  $u2$  are both column vectors, the block outputs the equivalent of the MATLAB expression  $u1' * u2$ .

The elements of the input vectors can be real- or complex-valued signals. The signal type (complex or real) of the output depends on the signal types of the inputs.

Input 1	Input 2	Output
real	real	real
real	complex	complex
complex	real	complex
complex	complex	complex

To perform element-by-element multiplication without summing, use the Product block.


## Data Type Support

The Dot Product block accepts and outputs signals of any numeric data type that Simulink supports, including fixed-point data types.

For more information, see "Data Types Supported by Simulink".


## Parameters and Dialog Box

The **Main** pane of the Dot Product block dialog box appears as follows:

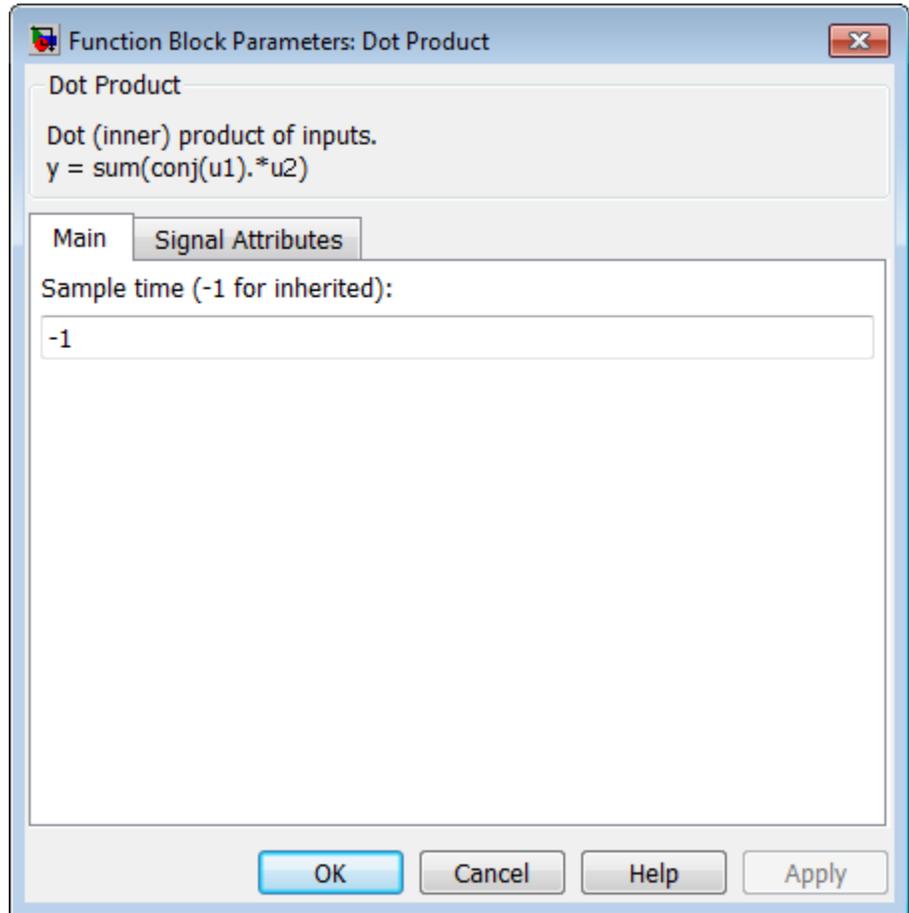

The **Signal Attributes** pane of the Dot Product block dialog box appears as follows:

# Dot Product

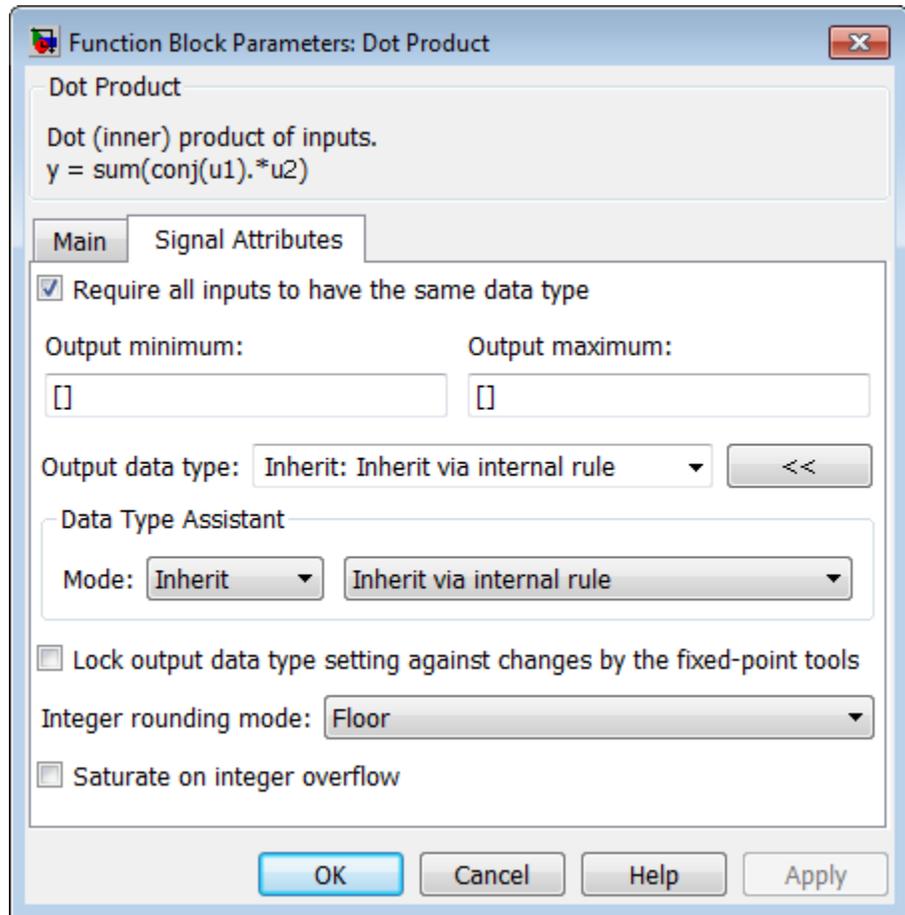

## Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation for more information.

## Require all inputs to have same data type

Select to require all inputs to have the same data type.

## Output minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output maximum

Specify the maximum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” for more information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box selected, the block output saturates at 127. Similarly, the block output saturates at a minimum output value of -128.
Do not select this check box.	You want to optimize efficiency of your generated code. You want to avoid overspecifying how a block handles	Overflows wrap to the appropriate value that is representable by the data type.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than

Action	Reasons for Taking This Action	What Happens for Overflows	Example
	out-of-range signals. For more information, see “Checking for Signal Range Errors”.		this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value as int8, which can produce an unintended result. For example, a block result of 130 (binary 1000 0010) expressed as int8, is -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
States	0
Dimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Product

# Dual Port RAM

---

**Purpose** Dual port RAM with two output ports

**Library** HDL Coder / HDL Operations

## Description




The Dual Port RAM block models a RAM that supports simultaneous read and write accesses, and has both a read data output port and write data output port. You can use this block to generate HDL code that maps to RAM in most FPGAs.

If you do not need to use the write output data, `wr_dout`, you can achieve better RAM inference with synthesis tools by using the Simple Dual Port RAM.

### Read-During-Write Behavior

During a write, new data appears at the output of the write port (`wr_dout`) of the Dual Port RAM block. If a read operation is performed at the same address at the read port, old data is read at the output (`rd_dout`).

## Dialog Box and Parameters

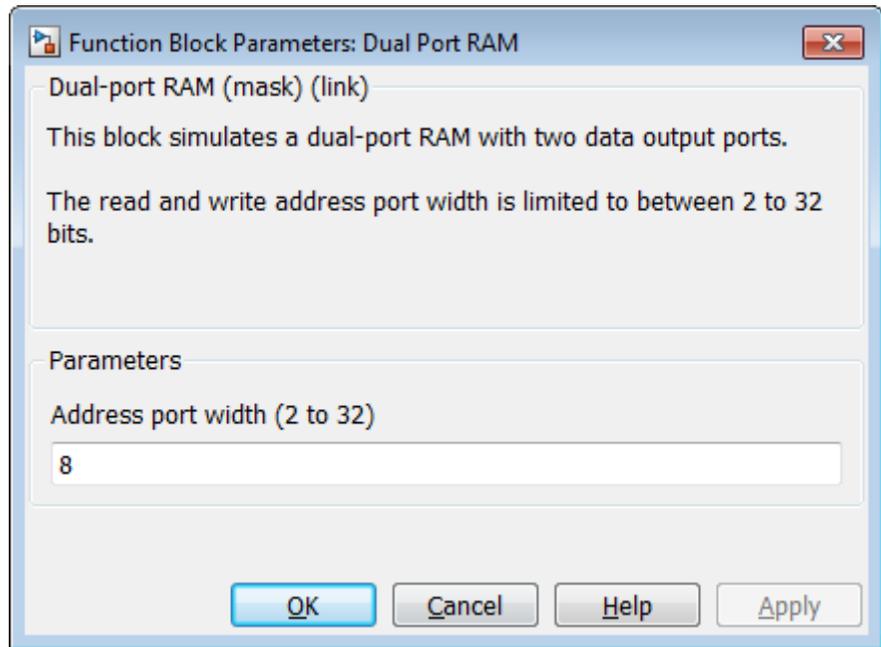

### Address port width

Address bit width. Minimum bit width is 2, and maximum bit width is 32.

Default: 8

## Ports

The block has the following ports:

`wr_din`

Write data input. The data can be of any width, and inherits its width and data type from the input signal.

Data type: scalar fixed point, integer, or complex

`wr_addr`

Write address.

# Dual Port RAM

---

Data type: scalar unsigned integer (`uintN`) or unsigned fixed point (`ufixN`) with a fraction length of 0

`wr_en`  
Write enable.

Data type: Boolean

`rd_addr`  
Read address.

Data type: scalar unsigned integer (`uintN`) or unsigned fixed point (`ufixN`) with a fraction length of 0

`wr_dout`  
Output data from write address, `wr_addr`.

`rd_dout`  
Output data from read address, `rd_addr`.


## See Also

[Simple Dual Port RAM](#) | [Dual Rate Dual Port RAM](#) | [Single Port RAM](#)

**Purpose** Dual Port RAM that supports two rates

**Library** HDL Coder / HDL Operations

## Description

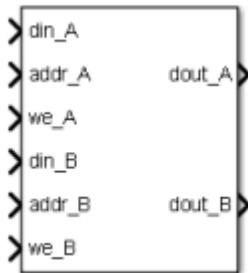

Dual Rate Dual Port RAM

The Dual Rate Dual Port RAM block models a RAM that supports simultaneous read and write accesses to different addresses at two clock rates. Port A of the RAM can run at one rate, and port B can run at different rate.

In high-performance hardware applications, you can use this block to access the RAM twice per clock cycle. If you generate HDL code, this block maps to a dual-clock dual-port RAM in most FPGAs.

### Simultaneous Access

You can access different addresses from ports A and B simultaneously. You can also read the same address from ports A and B simultaneously.


However, do not access an address from one RAM port while it is being written from the other RAM port. During simulation, if you access an address from one RAM port at the same time as you write that address from the other RAM port, the software generates an assertion.

# Dual Rate Dual Port RAM

## Dialog Box and Parameters

### Read-During-Write Behavior

The RAM has write-first behavior. When you write to the RAM, the new write data is immediately available at the output port.

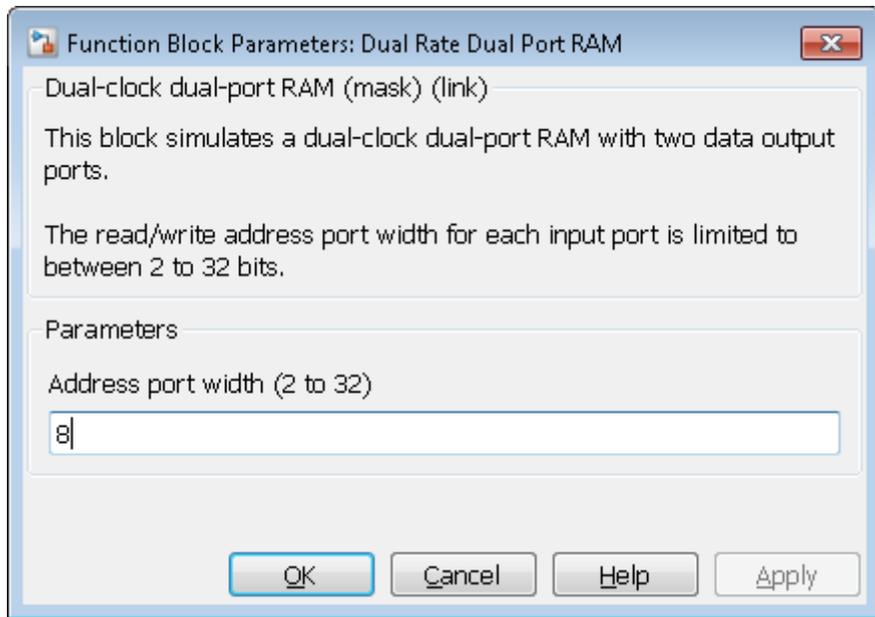

### Address port width

Address bit width. Minimum bit width is 2, and maximum bit width is 32. The default value is 8 bits.

### Ports

The block has the following ports:

`din_A`

Write data input for RAM port A. The data can be of any width, and inherits its width and data type from the input signal.

Data type: scalar fixed point, integer, or complex

`addr_A`

Write address for RAM port A.

Data type: scalar unsigned integer (`uintN`) or unsigned fixed point (`ufixN`) with a fraction length of 0

`we_A`

Write enable for RAM port A. Set `we_A` to `true` for a write access, or `false` for a read access.

Data type: Boolean

`din_B`

Write data input for RAM port B. The data can be of any width, and inherits its width and data type from the input signal.

Data type: scalar fixed point, integer, or complex

`addr_B`

Write address for RAM port B.

Data type: scalar unsigned integer (`uintN`) or unsigned fixed point (`ufixN`) with a fraction length of 0

`we_B`

Write enable for RAM port B. Set `we_B` to `true` for a write access, or `false` for a read access.

Data type: Boolean

`dout_A`

Output data from RAM port A address, `addr_A`.

`dout_B`

Output data from RAM port B address, `addr_B`.

## See Also

Dual Port RAM | HDL FIFO | Simple Dual Port RAM | Single Port RAM

# Enable

---

**Purpose** Add enabling port to system

**Library** Ports & Subsystems

**Description** Adding an Enable block to a subsystem or at the root level of a model makes it an enabled system. A subsystem can contain no more than one Enable block. An enabled system executes while the input received at the Enable port is greater than zero.



At the start of a simulation, Simulink software initializes the states of blocks inside an enabled system to their initial conditions.

If you use an enable port for a root-level model:


- For multi-rate enabled models, set the solver to single-tasking.
- If the enabled model has a fixed-step size, at least one block in that model must run at that fixed-step size rate.

The Enable block supports signal label propagation.

**Data Type Support** The Enable block accepts signals of supported Simulink numeric data types, including fixed-point data types. For more information, see “Data Types Supported by Simulink”.


## Parameters and Dialog Box

The **Main** pane of the Enable block dialog box appears as follows:

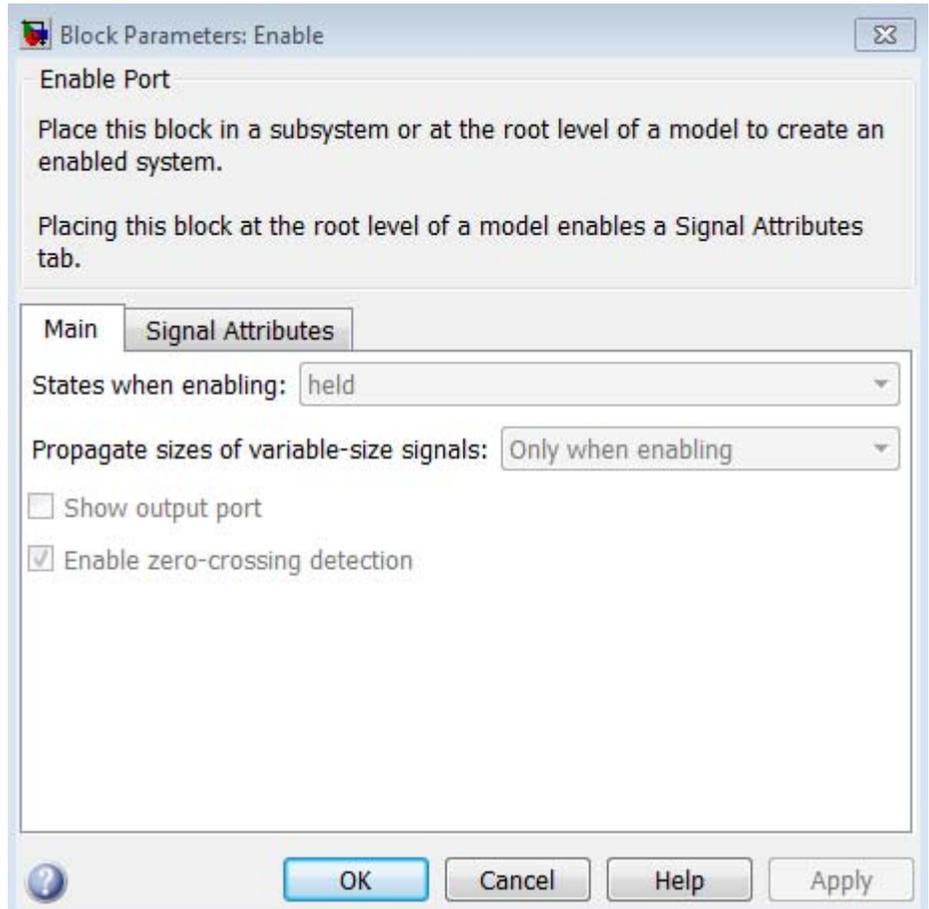

Placing the Enable block at the root of a model enables the **Signal Attributes** pane:

# Enable

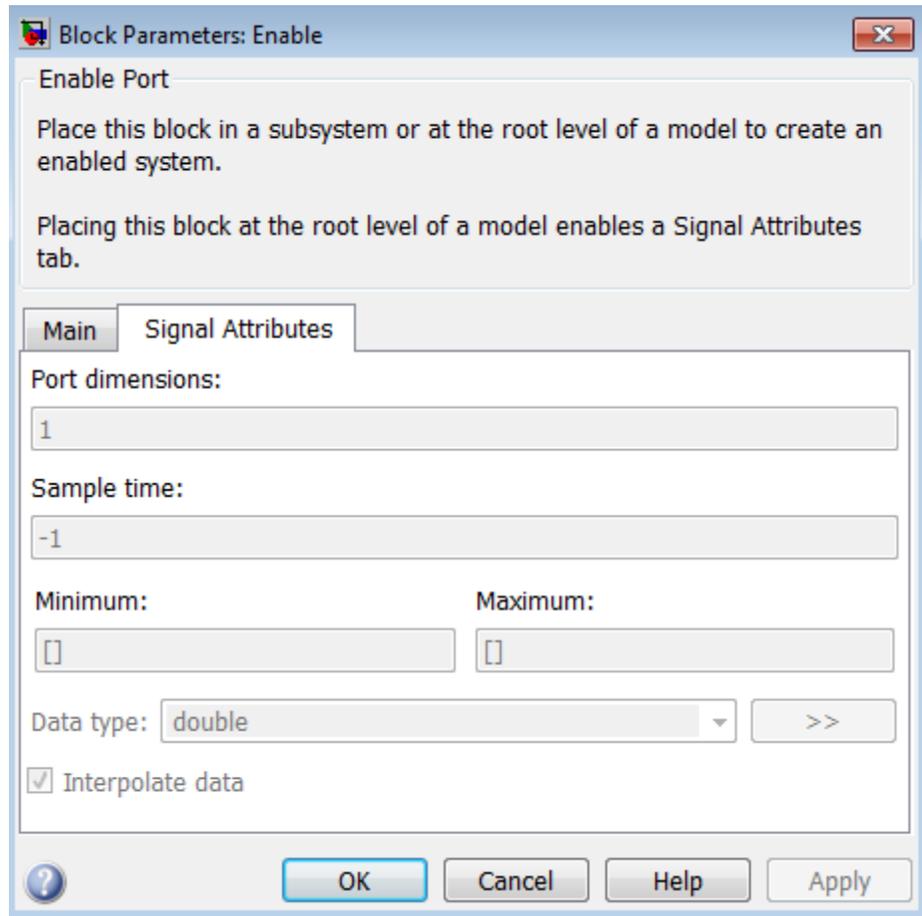

- “States when enabling” on page 1-590
- “Propagate sizes of variable-size signals” on page 1-591
- “Show output port” on page 1-592
- “Enable zero-crossing detection” on page 1-593
- “Port dimensions” on page 1-594

- “Sample time” on page 1-595
- “Minimum” on page 1-1969
- “Maximum” on page 1-1970
- “Data type” on page 1-598
- “Show data type assistant” on page 1-1727
- “Mode” on page 1-601
- “Interpolate data” on page 1-603

# Enable

---

## States when enabling

At the instant when an enabled system is being disabled, specify what happens to the states of blocks in the enabled system.

### Settings

**Default:** held

held

Holds the states at their previous values.

reset

Resets the states to their initial conditions (zero if not defined).

### Command-Line Information

**Parameter:** StatesWhenEnabling

**Type:** string

**Value:** 'held' | 'reset'

**Default:** 'held'

## **Propagate sizes of variable-size signals**

Specify when to propagate a variable-size signal.

### **Settings**

**Default:** Only when enabling

Only when enabling

Propagates variable-size signals only when reenabling the system containing the Enable Port block. When you select this option, sample time must be periodic.

During execution

Propagates variable-size signals at each time step.

### **Command-Line Information**

**Parameter:** PropagateVarSize

**Type:** string

**Value:** 'Only when enabling' | 'During execution'

**Default:** 'Only when enabling'

# Enable

---

## Show output port

Select this check box to output the enabling signal.

### Settings

Default: On



On

Shows the Enable block output port and outputs the enabling signal. Selecting this option allows the system to process the enabling signal.



Off

Removes the output port from the Enable block.

### Command-Line Information

**Parameter:** ShowOutputPort

**Type:** string

**Value:** 'on' | 'off'

**Default:** 'on'

## Enable zero-crossing detection

Select this check box to enable zero-crossing detection.

### Settings

**Default:** On

On  
Detect zero crossings.

Off  
Do not detect zero crossings.

### Command-Line Information

**Parameter:** ZeroCross

**Type:** string

**Value:** 'on' | 'off'

**Default:** 'on'

# Enable

---

## Port dimensions

Specify the dimensions of the input signal to the block.

## Settings

**Default:** 1

Valid values are:

n	Vector signal of width n accepted
[m n]	Matrix signal having m rows and n columns accepted

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Sample time**

Specify the time interval between samples.

## **Settings**

**Default:** -1

See “Specify Sample Time” in the online documentation for more information.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Minimum

Specify the minimum value that the block should output.

### Settings

**Default:** [] (unspecified)

This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum property of a bus element, see `Simulink.BusElement`.

---

Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

---

## Maximum

Specify the maximum value that the block should output.

### Settings

**Default:** [] (unspecified)

This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum property of a bus element, see `Simulink.BusElement`.

---

Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Data type

Specify the output data type of the external input.

### Settings

**Default:** double

double

Data type is double.

single

Data type is single.

int8

Data type is int8.

uint8

Data type is uint8.

int16

Data type is int16.

uint16

Data type is uint16.

int32

Data type is int32.

uint32

Data type is uint32.

boolean

Data type is boolean.

fixdt(1,16,0)

Data type is fixed point fixdt(1,16,0).

fixdt(1,16,2<sup>0</sup>,0)

Data type is fixed point fixdt(1,16,2<sup>0</sup>,0).

<data type expression>

The name of a data type object, for example  
Simulink.NumericType

Do not specify a bus object as the expression.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Enable

---

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** double

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32
- boolean

### Fixed point

Fixed-point data types.

### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

Do not specify a bus object as the expression.

## **Dependency**

Clicking the **Show data type assistant** button enables this parameter.

# Enable

---

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specify Data Types Using Data Type Assistant”.

## Interpolate data

Cause the block to interpolate or extrapolate output at time steps for which no corresponding workspace data exists when loading data from the workspace.

### Settings

**Default:** On

On

Cause the block to interpolate or extrapolate output at time steps for which no corresponding workspace data exists when loading data from the workspace.

Off

Do not cause the block to interpolate or extrapolate output at time steps for which no corresponding workspace data exists when loading data from the workspace.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Characteristics

Sample Time	Determined by the signal at the enable port
Dimensionalized	Yes
Virtual	Yes, if not connected directly to an Output block  For more information, see “Virtual Blocks” in the Simulink documentation.
Zero-Crossing Detection	Yes, if enabled


# Enabled and Triggered Subsystem

---

**Purpose** Represent subsystem whose execution is enabled and triggered by external input

**Library** Ports & Subsystems

## Description

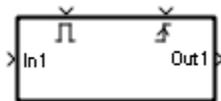

This block is a Subsystem block that is preconfigured to serve as the starting point for creating an enabled and triggered subsystem. For more information, see “Create a Triggered and Enabled Subsystem” in the online Simulink help.

<b>Purpose</b>	Represent subsystem whose execution is enabled by external input
<b>Library</b>	Ports & Subsystems
<b>Description</b>	This block is a Subsystem block that is preconfigured to serve as the starting point for creating an enabled subsystem. For more information, see “Create an Enabled Subsystem” in the “Creating a Model” chapter of the Simulink documentation.


# Enumerated Constant

---

<b>Purpose</b>	Generate enumerated constant value
<b>Library</b>	Sources
<b>Description</b>	The Enumerated Constant block outputs a scalar, array, or matrix of enumerated values. You can also use the Constant block to output enumerated values, but it provides block parameters that do not apply to enumerated types, such as <b>Output minimum</b> and <b>Output maximum</b> . When you need a block that outputs only constant enumerated values, preferably use Enumerated Constant rather than Constant. For more information, see “About Simulink Enumerations”.
<b>Data Type Support</b>	The Enumerated Constant block supports only enumerated data types. Use the Constant block to output constant data of other types. For more information, see “Data Types Supported by Simulink”.

## Parameters and Dialog Box

The Enumerated Constant block dialog box initially appears as follows:

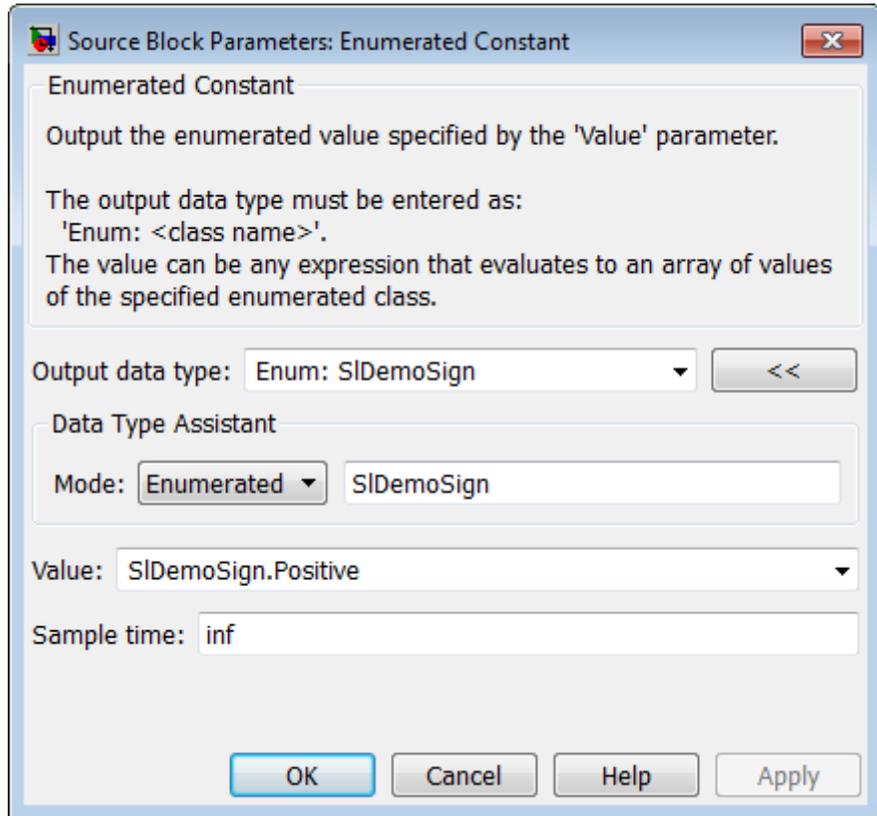

### Output data type

The **Output data type** field specifies the enumerated type from which you want the block to output one or more values. The initial value, Enum: S1DemoSign, is a dummy enumerated type that prevents a newly cloned block from causing an error. To specify the desired enumerated type, select it from the pulldown or enter Enum: *ClassName* in the **Output data type** field, where *ClassName* is the name of the MATLAB class that defines the type.

# Enumerated Constant

---

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Value

The **Value** field specifies the value(s) that the block outputs. The output of the block has the same dimensions and elements as the **Value** parameter. The initial value, `SlDemoSign.Positive`, is a dummy enumerated value that prevents a newly cloned block from causing an error.

To specify the desired enumerated value(s), select from the pulldown or enter any MATLAB expression that evaluates to the desired result, including an expression that uses tunable parameters. All values specified must be of the type indicated by the **Output data type**. To specify an array that includes every value in the enumerated type, use the `enumeration` function.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Sample time

Specify the interval between times that the Constant block output can change during simulation (for example, due to tuning the **Constant value** parameter).

## Settings

**Default:** `inf`

This setting indicates that the block output can never change. This setting speeds simulation and generated code by avoiding the need to recompute the block output. See “Specify Sample Time” for more information.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

<b>Characteristics</b>	Direct Feedthrough	N/A
	Sample Time	Specified in the <b>Sample time</b> parameter
	Scalar Expansion	No
	Dimensionalized	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	No

# Environment Controller

---


## Purpose

Create branches of block diagram that apply only to simulation or only to code generation

## Library

Signal Routing

## Description

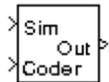

This block outputs the signal at its Sim port only if the model that contains it is being simulated. It outputs the signal at its Coder port only if code is being generated from the model. This option enables you to create branches of a block diagram that apply only to simulation or code generation. The table below describes various scenarios where either the Sim or Coder port applies.

Scenario	Output
Normal mode simulation	Sim
Accelerator mode simulation	Sim
Rapid Accelerator mode simulation	Sim
Simulation of a referenced model (Normal or Accelerator modes)	Sim
Simulation of a referenced model (Processor-in-the-loop (PIL) mode)	Coder (uses the same code generated for a referenced model)
External mode simulation	Coder
Standard code generation	Coder
Code generation of a referenced model	Coder

Simulink Coder software does not generate code for blocks connected to the Sim port if these conditions hold:

- You select the **Inline parameters** check box on the **Optimization > Signals and Parameters** pane of the Configuration Parameters dialog box.
- The blocks connected to the Sim port do not have external signals.
- The Sim port input path does not contain a MATLAB S-function or an Interpreted MATLAB Function block.

If you enable block reduction optimization, Simulink eliminates blocks in the branch connected to the Coder port when compiling the model for simulation. For information about block reduction, see “Block reduction” in the online Simulink documentation.

---

**Note** Simulink Coder code generation eliminates the blocks connected to the Sim branch only if the Sim branch has the same signal dimensions as the Coder branch. Regardless of whether it eliminates the Sim branch, Simulink Coder uses the sample times on the Sim branch as well as the Coder branch to determine the fundamental sample time of the generated code and might, in some cases, generate sample-time handling code that applies only to sample times specified on the Sim branch.

---


## Data Type Support

The Environment Controller block accepts signals of any data type that Simulink supports. The output uses the same data type as the input.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Environment Controller

---

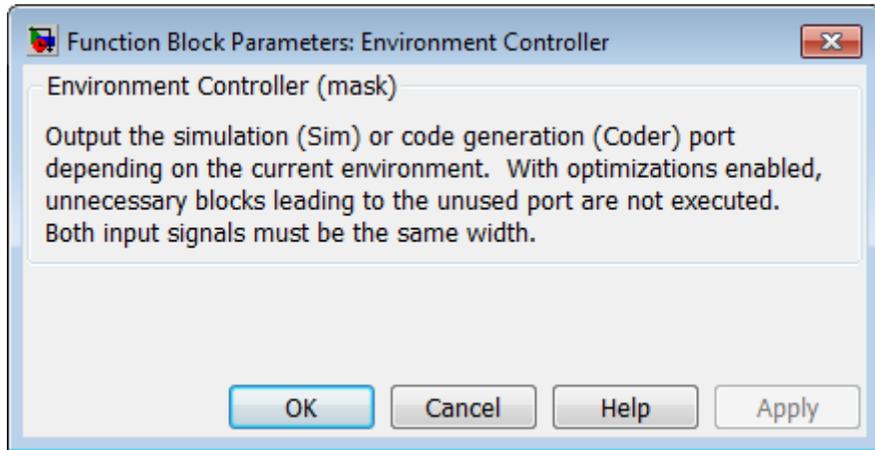

## Parameters and Dialog Box

## Characteristics

Multidimensionalized	Yes
----------------------	-----

**Purpose** Output selection of contiguous bits from input signal

**Library** Logic and Bit Operations

## Description



The Extract Bits block allows you to output a contiguous selection of bits from the stored integer value of the input signal. Use the **Bits to extract** parameter to define the method for selecting the output bits.

- Select **Upper half** to output the half of the input bits that contain the most significant bit. If there is an odd number of bits in the input signal, the number of output bits is given by the equation

$$\text{number of output bits} = \text{ceil}(\text{number of input bits}/2)$$

- Select **Lower half** to output the half of the input bits that contain the least significant bit. If there is an odd number of bits in the input signal, the number of output bits is given by the equation

$$\text{number of output bits} = \text{ceil}(\text{number of input bits}/2)$$

- Select **Range starting with most significant bit** to output a certain number of the most significant bits of the input signal. Specify the number of most significant bits to output in the **Number of bits** parameter.
- Select **Range ending with least significant bit** to output a certain number of the least significant bits of the input signal. Specify the number of least significant bits to output in the **Number of bits** parameter.

# Extract Bits

---

- Select **Range of bits** to indicate a series of contiguous bits of the input to output in the **Bit indices** parameter. You indicate the range in [start end] format, and the indices of the input bits are labeled contiguously starting at 0 for the least significant bit.

## Data Type Support

The Extract Bits block accepts inputs of any numeric data type that Simulink supports, including fixed-point data types. Floating-point inputs are passed through the block unchanged. Boolean inputs are treated as uint8 signals.


---

**Note** Performing bit operations on a signed integer is difficult. You can avoid difficulty by converting the data type of your input signals to unsigned integer types.

---

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

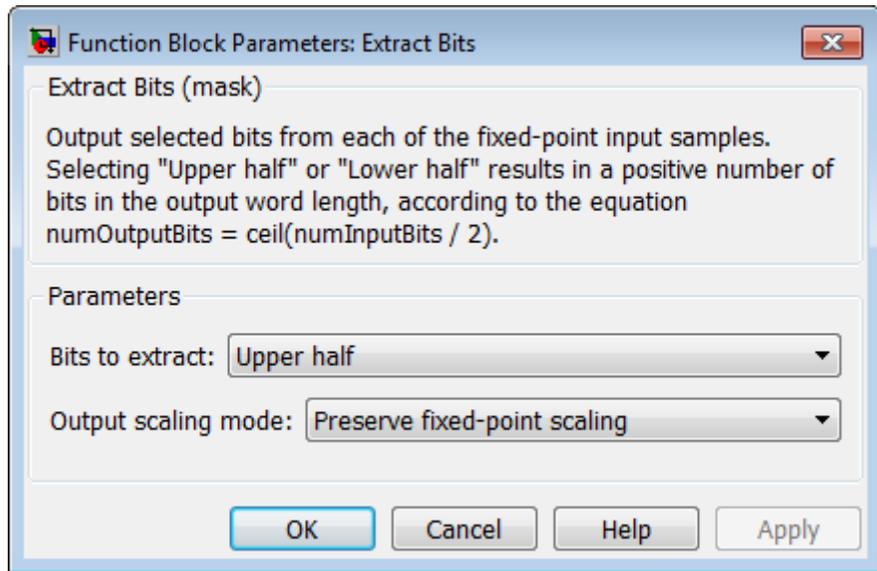

### Bits to extract

Select the method for extracting bits from the input signal.

### Number of bits

(Not shown on dialog above.) Select the number of bits to output from the input signal. Signed integer data types can have no less than two bits in them. Unsigned data integer types can be as short as a single bit.

This parameter is only visible if you select Range starting with most significant bit or Range ending with least significant bit for the **Bits to extract** parameter.

### Bit indices

(Not shown on dialog above.) Specify a contiguous range of bits of the input signal to output. Specify the range in [start end] format. The indices are assigned to the input bits starting with 0 at the least significant bit.

# Extract Bits

---

This parameter is only visible if you select **Range of bits** for the **Bits to extract** parameter.

## Output scaling mode

Select the scaling mode to use on the output bits selection:

- When you select **Preserve fixed-point scaling**, the fixed-point scaling of the input is used to determine the output scaling during the data type conversion.
- When you select **Treat bit field as an integer**, the fixed-point scaling of the input is ignored, and only the stored integer is used to compute the output data type.

## Example

Consider an input signal that is represented in binary by 110111001:

- If you select **Upper half** for the **Bits to extract** parameter, the output is 11011 in binary.
- If you select **Lower half** for the **Bits to extract** parameter, the output is 11001 in binary.
- If you select **Range starting with most significant bit** for the **Bits to extract** parameter, and specify 3 for the **Number of bits** parameter, the output is 110 in binary.
- If you select **Range ending with least significant bit** for the **Bits to extract** parameter, and specify 8 for the **Number of bits** parameter, the output is 10111001 in binary.
- If you select **Range of bits** for the **Bits to extract** parameter, and specify [4 7] for the **Bit indices** parameter, the output is 1011 in binary.

## Characteristics


Direct Feedthrough	Yes
Sample Time	Inherited
Scalar Expansion	N/A

States	None
Dimensionalized	Inherited
Multidimensionalized	Yes
Zero Crossing	No

**Purpose** Apply specified expression to input

**Library** User-Defined Functions

**Description** The Fcn block applies the specified mathematical expression to its input. The expression can include one or more of these components:

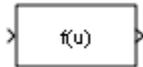

- $u$  — The input to the block. If  $u$  is a vector,  $u(i)$  represents the  $i$ th element of the vector;  $u(1)$  or  $u$  alone represents the first element.
- Numeric constants.
- Arithmetic operators (+ - \* / ^).
- Relational operators (== != > < >= <=) — The expression returns 1 if the relation is true; otherwise, it returns 0.
- Logical operators (&& || !) — The expression returns 1 if the relation is true; otherwise, it returns 0.
- Parentheses.
- Mathematical functions — `abs`, `acos`, `asin`, `atan`, `atan2`, `ceil`, `cos`, `cosh`, `exp`, `fabs`, `floor`, `hypot`, `ln`, `log`, `log10`, `pow`, `power`, `rem`, `sgn`, `sin`, `sinh`, `sqrt`, `tan`, and `tanh`.

---

**Note** The Fcn block does not support `round` and `fix`. Use the Rounding Function block to apply these rounding modes.

---

- Workspace variables — Variable names that are not recognized in the preceding list of items are passed to MATLAB for evaluation. Matrix or vector elements must be specifically referenced (e.g.,  $A(1,1)$  instead of  $A$  for the first element in the matrix).

The Fcn block observes the following rules of operator precedence:

**1** ( )

**2** ^

**3** + - (unary)

**4** !

**5** \* /

**6** + -

**7** > < <= >=

**8** == !=

**9** &&

**10** ||

The expression differs from a MATLAB expression in that the expression cannot perform matrix computations. Also, this block does not support the colon operator (:).

Block input can be a scalar or vector. The output is always a scalar. For vector output, consider using the Math Function block. If a block input is a vector and the function operates on input elements individually (for example, the `sin` function), the block operates on only the first vector element.

### Limitations

The Fcn block has the following limitations:

- You cannot tune the expression during simulation in Normal or Accelerator mode (see “How Acceleration Modes Work”), or in generated code. The Fcn block doesn’t support tunable parameters if **Inline Parameters** is turned on. To implement tunable expressions,


tune the expression outside the Fcn block. For example, use the Relational Operator block to evaluate the expression outside.

- The Fcn block does not support custom storage classes. See “Custom Storage Classes” in the Embedded Coder documentation.

## Data Type Support

The Fcn block accepts and outputs signals of type `single` or `double`.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

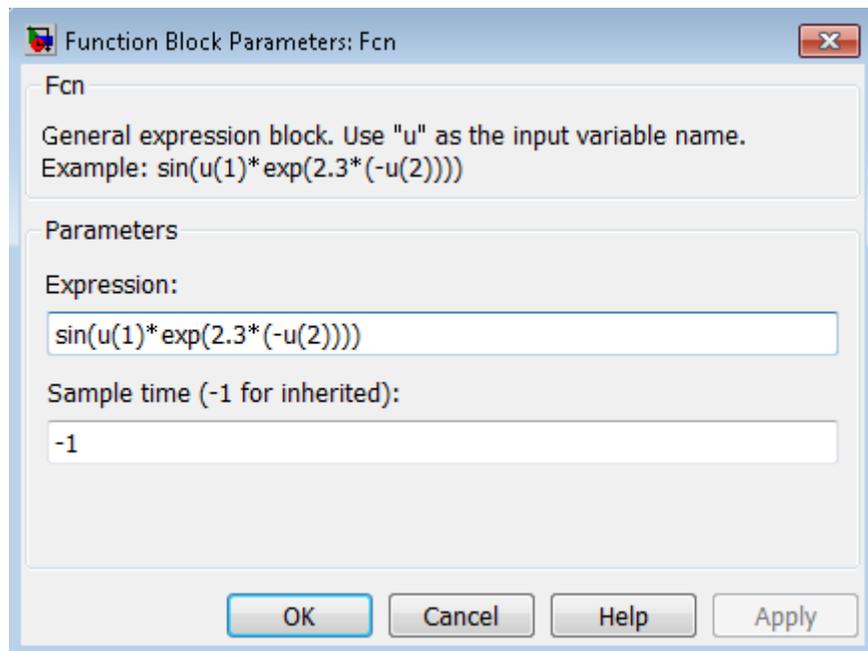

## Parameters and Dialog Box

### Expression

Specify the mathematical expression to apply to the input. Expression components are listed above. The expression must be mathematically well-formed (uses matched parentheses, proper

number of function arguments, and so on). The expression has restrictions on tunability (see “Limitations” on page 1-619)

**Sample time (-1 for inherited)**

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

**Examples**

The following example models show how to use the Fcn block:

- sldemo\_absbrake
- sldemo\_enginewc (Throttle & Manifold/Throttle subsystem)

**Characteristics**

Direct Feedthrough	Yes
Sample Time	Inherited from the driving block
Scalar Expansion	No
Dimensionalized	No
Multidimensionalized	No
Zero-Crossing Detection	No

# Find

---

**Purpose** Find nonzero elements in array

**Library** Math Operations

**Description** The Find block locates all nonzero elements of the input signal and returns the linear indices of those elements. If the input is a multidimensional signal, the Find block can also return the subscripts of the nonzero input elements. In both cases, you can show an output port with the nonzero input values.




**Data Type Support** The Find block accepts and outputs real values of any numeric data type that Simulink supports.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.


## Parameters and Dialog Box

The **Main** pane of the Find block dialog box appears as follows:

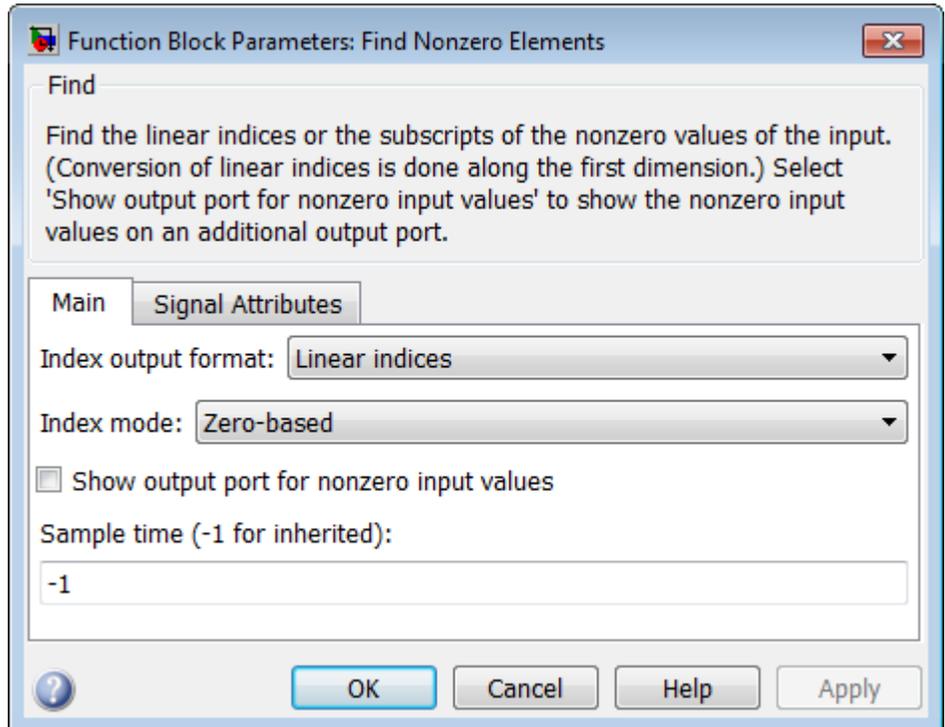

The **Signal Attributes** pane of the Find block dialog appears as follows:

# Find

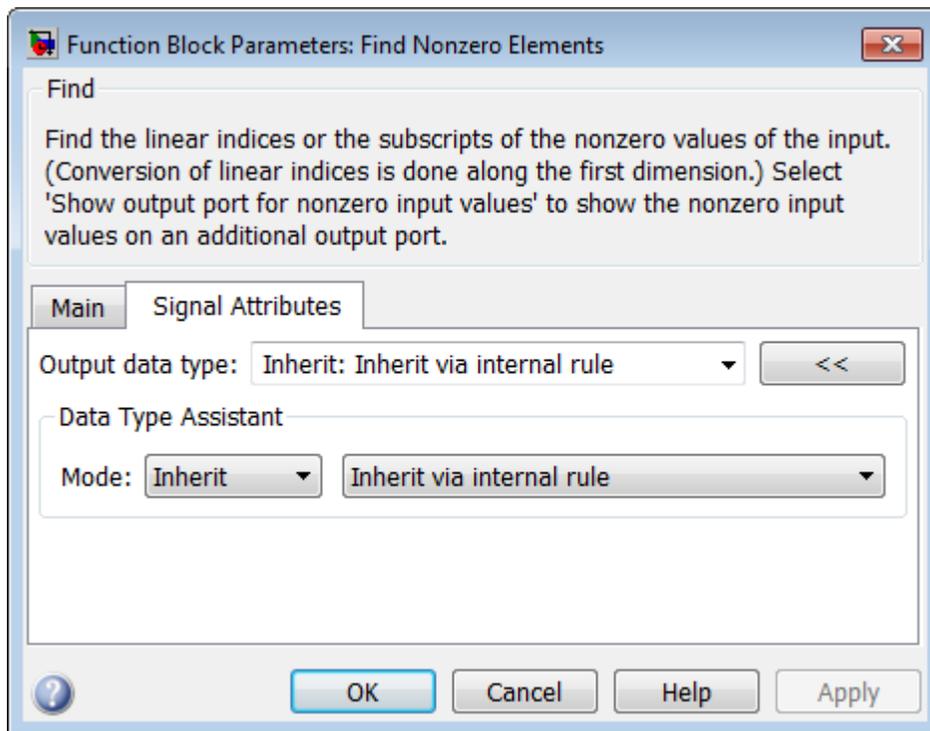

- “Index output format” on page 1-627
- “Number of input dimensions” on page 1-628
- “Index mode” on page 1-629
- “Show output port for nonzero input values” on page 1-630
- “Sample time (-1 for inherited)” on page 1-631
- “Output data type” on page 1-632
- “Mode” on page 1-634
- “Data type override” on page 1-1975
- “Signedness” on page 1-637

- “Word length” on page 1-638
- “Scaling” on page 1-639

# Find

---

## Index output format

Select the output format for the indices of the nonzero input values.

### Settings

**Default:** Linear indices

#### Linear indices

Provides the element indices of any dimension signal in a vector form. For one dimension (vector) signals, indices correspond to the position of nonzero values within the vector. For signals with more than one dimension, the conversion of subscripts to indices is along the first dimension. You do not need to know the signal dimension of the input signal.

#### Subscripts

Provides the element indices of a two-dimension or larger signal in a subscript form. Because the block shows an output port for each dimension, this option requires you to know the number of dimensions for the input signal.

### Dependencies

Selecting Subscripts from the **Index output format** list enables the **Number of input dimensions** parameter.

### Command-Line Information

**Parameter:** IndexOutputFormat

**Type:** string

**Value:** Linear indices | Subscripts

**Default:** Linear indices

## **Number of input dimensions**

Specify the number of dimensions for the input signal.

### **Settings**

**Default:** 1

**Minimum:** 1

**Maximum:** 32

### **Dependencies**

Selecting Subscripts from the **Index output format** list enables this parameter.

### **Command-Line Information**

**Parameter:** NumberOfInputDimensions

**Type:** int

**Value:** positive integer value

**Default:** 1

## **Index mode**

Specify the indexing mode.

## **Settings**

**Default:** Zero-based

### Zero-based

An index of 0 specifies the first element of the input vector. An index of 1 specifies the second element, and so on.

### One-based

An index of 1 specifies the first element of the input vector. An index of 2, specifies the second element , and so on.

## **Command-Line Information**

**Parameter:** IndexMode

**Type:** string

**Value:** Zero-based | One-based

**Default:** Zero-based

## Show output port for nonzero input values

Show or hide the output port for nonzero input values.

### Settings

**Default:** Off



On

Display the output port for nonzero input values. The additional output port provides the values of the nonzero input elements.



Off

Hide the output port for nonzero input values.

### Command-Line Information

**Parameter:** ShowOutputPortForNonzeroInputValues

**Type:** string

**Value:** 'on' | 'off'

**Default:** 'off'

**Sample time (-1 for inherited)**

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the “How Simulink Works” chapter of the Simulink documentation.

**Command-Line Information**

**Parameter:** SampleTime

**Type:** string

**Value:** -1 (for inherited) | positive number

**Default:** -1

## Output data type

Specify the output data type.

### Settings

**Default:** Inherit: Inherit via internal rule

Inherit: Inherit via internal rule  
Output data type is defined by the target.

int8  
Output data type is int8.

uint8  
Output data type is uint8.

int16  
Output data type is int16.


uint16  
Output data type is uint16.

int32  
Output data type is int32.

uint32  
Output data type is uint32.

fixdt(1,16)  
Output data type is fixed point, fixdt(1,16).

<data type expression>  
Use a data type object, for example, Simulink.NumericType.

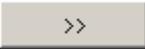Click the **Show data type assistant** button  to display additional parameters for the **Output data type** parameter.

### Command-Line Information

**Parameter:** OutDataTypeStr

**Type:** string

---

**Value:** 'Inherit: Inherit via internal rule' | 'int8'  
| 'uint8' | 'int16' | 'uint16' | 'int32' | 'uint32' |  
'fixdt(1,16)' | '<data type expression>'

**Default:** 'Inherit: Inherit via internal rule'

**See Also**

“Specify Block Output Data Types”, “Specify Data Types Using Data Type Assistant”

## Mode

Select the category of data to specify.

### Settings

**Default:** Inherit

#### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second list of the possible values:

- **Inherit via internal rule** (Discrete-Time Integrator, Gain, Product, Sum, Switch block default)

#### Built in

Built-in data types. Selecting **Built in** enables a second list of the possible values:

- int8
- uint8
- int16
- uint16
- int32
- uint32

#### Fixed point

Fixed-point data types.

#### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second text box, where you can enter the expression.

## Dependencies

Clicking the **Show data type assistant** button enables this parameter.

Selecting **Fixed point** from the **Mode** list enables the following parameters:

- **Signed**

- **Scaling**
- **Word length**

**See Also**

“Specify Data Types Using Data Type Assistant”

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is Built in or Fixed point.

**Signedness**

Specify whether the fixed-point data is signed or unsigned.

**Settings**

**Default:** Signed

Signed

Specifies the fixed-point data as signed.

Unsigned

Specifies the fixed-point data as unsigned.

**Dependency**

Selecting Fixed point from the **Mode** list enables this parameter.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

Large word sizes represent large values with greater precision than small word sizes.

### **Dependency**

Selecting **Fixed point** from the **Mode** list enables this parameter.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Integer

Integer

Specifies a binary point location for fixed-point data and sets the fraction length to 0.

The **Scaling** list has only one item for you to select.

### Dependency

Selecting **Fixed point** from the **Mode** list enables this parameter.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

# First-Order Hold

---


**Purpose** Implement first-order sample-and-hold

**Library** Discrete


**Description** The First-Order Hold block implements a first-order sample-and-hold that operates at the specified sampling interval. This block has little value in practical applications and is included primarily for academic purposes.



This figure compares the output from a Sine Wave block and a First-Order Hold block.

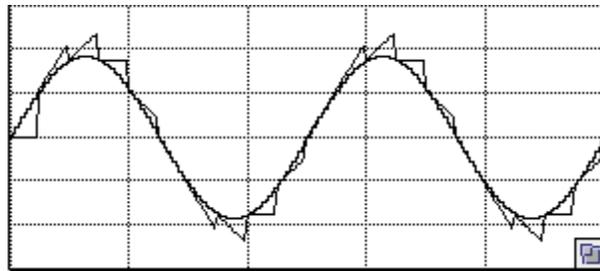

**Data Type Support** The First-Order Hold block accepts and outputs signals of type double. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

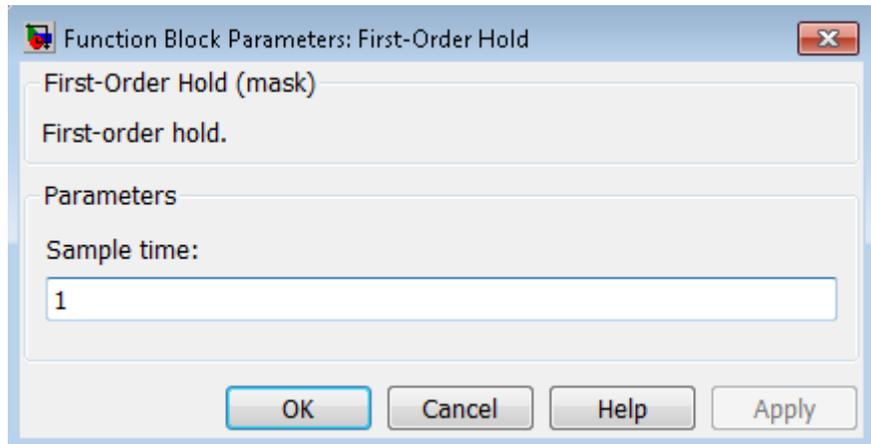

## Parameters and Dialog Box

### Sample time

The time interval between samples. See “Specify Sample Time” in the online documentation for more information.

## Characteristics

Direct Feedthrough	No
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
States	1 continuous and 1 discrete per input element
Dimensionalized	Yes
Zero Crossing	No

## See Also

Zero-Order Hold


# Fixed-Point State-Space

---

**Purpose** Implement discrete-time state space

**Library** Additional Math & Discrete / Additional Discrete

## Description

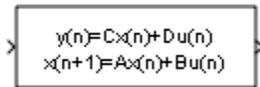
$$\begin{aligned} y(n) &= Cx(n) + Du(n) \\ x(n+1) &= Ax(n) + Bu(n) \end{aligned}$$

The Fixed-Point State-Space block implements the system described by

$$y(n) = Cx(n) + Du(n)$$

$$x(n+1) = Ax(n) + Bu(n)$$

where  $u$  is the input,  $x$  is the state, and  $y$  is the output. Both equations have the same data type.

The matrices A, B, C and D have the following characteristics:

- A must be an n-by-n matrix, where n is the number of states.
- B must be an n-by-m matrix, where m is the number of inputs.
- C must be an r-by-n matrix, where r is the number of outputs.
- D must be an r-by-m matrix.

In addition:

- The state  $x$  must be an n-by-1 vector.
- The input  $u$  must be an m-by-1 vector.
- The output  $y$  must be an r-by-1 vector.

The block accepts one input and generates one output. The block determines the input vector width by the number of columns in the B and D matrices. Similarly, the block determines the output vector width by the number of rows in the C and D matrices.

## Data Type Support

The Fixed-Point State-Space block accepts signals of the following data types:


- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Fixed-Point State-Space

## Parameters and Dialog Box

The **Main** pane of the Fixed-Point State-Space block dialog box appears as follows:

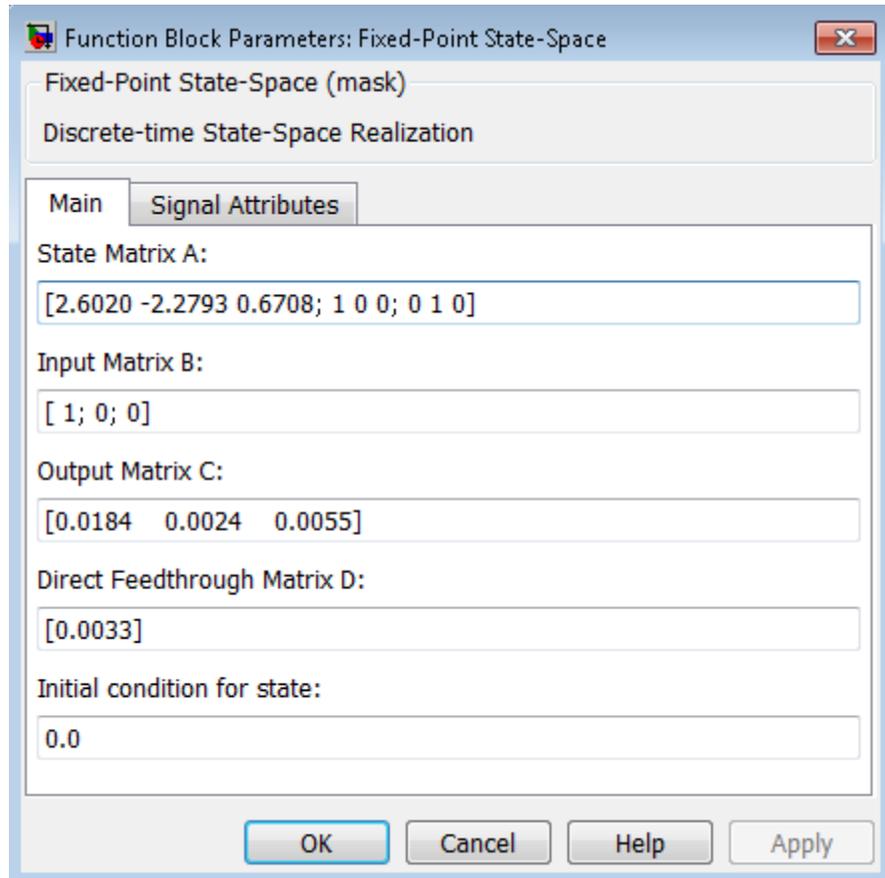

### State Matrix A

Specify the matrix of states.

### Input Matrix B

Specify the column vector of inputs.

**Output Matrix C**

Specify the column vector of outputs.

**Direct Feedthrough Matrix D**


Specify the matrix for direct feedthrough.

**Initial condition for state**

Specify the initial condition for the state.

The **Signal Attributes** pane of the Fixed-Point State-Space block dialog box appears as follows:

# Fixed-Point State-Space

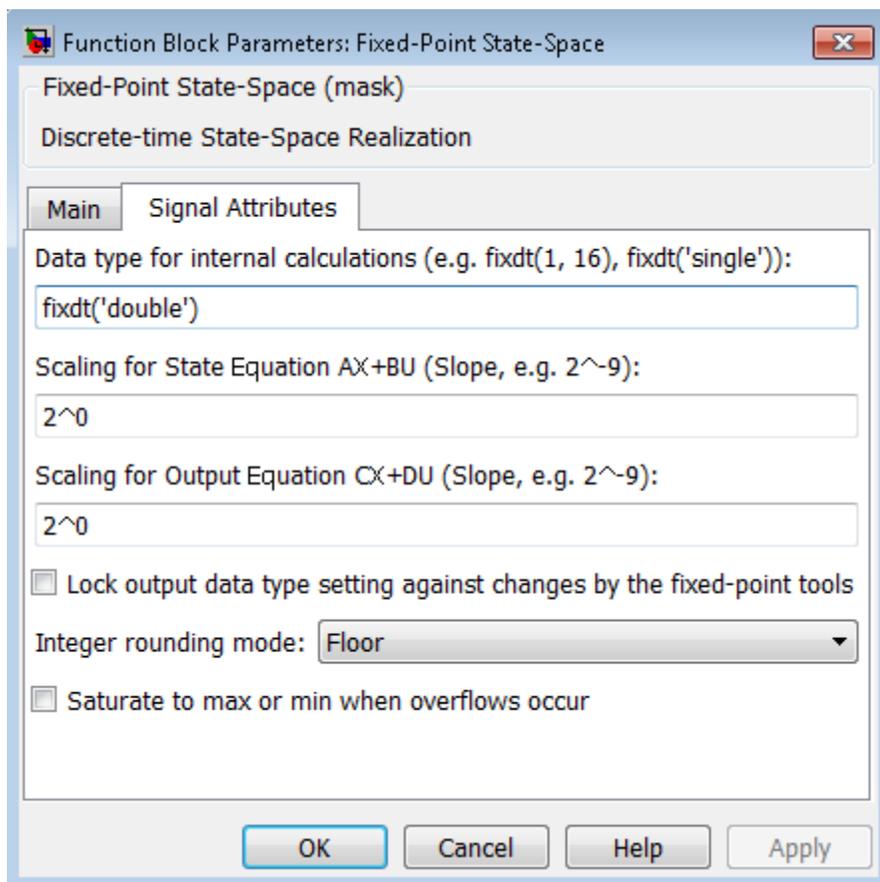

## **Data type for internal calculations**

Specify the data type for internal calculations.

## **Scaling for State Equation $AX+BU$**

Specify the scaling for state equations.

## **Scaling for Output Equation $CX+DU$**

Specify the scaling for output equations.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate to max or min when overflows occur

Select to have overflows saturate to the maximum or minimum value that the data type can represent. Otherwise, overflows wrap.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes, of initial conditions
Multidimensionalized	No
Zero-Crossing Detection	No

## See Also

Discrete State-Space

# For Each

---


## Purpose

Enable blocks inside For Each Subsystem to process elements or subarrays of input signal independently

## Library

Ports & Subsystems


## Description

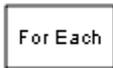


The For Each block serves as a control block for the For Each Subsystem block. Specifically, the For Each block enables the blocks inside the For Each Subsystem to process elements or subarrays of the input signals independently. Each block inside this subsystem that has states maintains a separate set of states for each element or subarray it processes. As the set of blocks in the subsystem process the elements (or subarrays), the subsystem concatenates the results to form output signals.

Using the For Each block, you specify how to decompose each input signal to the subsystem into elements or subarrays by setting the integer values of the “Partition Dimension” on page 1-655 and the “Partition Width” on page 1-656. Similarly, you define the dimension along which to concatenate the results by specifying the “Concatenation Dimension” on page 1-658.

As an illustration, consider an input signal A of the form:

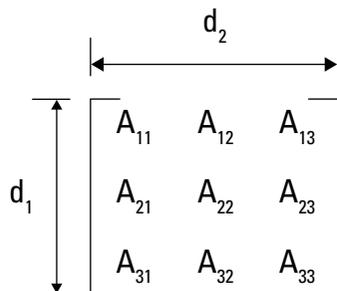

The labels  $d_1$  and  $d_2$ , respectively define dimension 1 and dimension 2. If you retain the default setting of 1 for both the partition dimension and the partition width, then Simulink slices perpendicular to partition dimension  $d_1$  at a width equal to the partition width, one element.

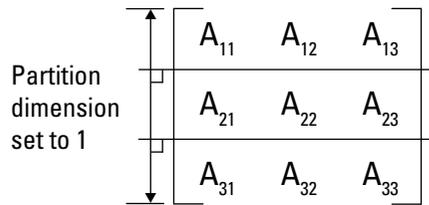

Input signal A decomposes into the following three row vectors:

$$\begin{bmatrix} A_{11} & A_{12} & A_{13} \end{bmatrix}$$

$$\begin{bmatrix} A_{21} & A_{22} & A_{23} \end{bmatrix}$$


$$\begin{bmatrix} A_{31} & A_{32} & A_{33} \end{bmatrix}$$

If instead you specify  $d_2$  as the partition dimension by entering the value 2, Simulink slices perpendicular to  $d_2$  to form three column vectors:

$$\begin{bmatrix} A_{11} \\ A_{21} \\ A_{31} \end{bmatrix} \quad \begin{bmatrix} A_{12} \\ A_{22} \\ A_{32} \end{bmatrix} \quad \begin{bmatrix} A_{13} \\ A_{23} \\ A_{33} \end{bmatrix}$$

In either case, the results generated by the block for each subarray stack along the concatenation dimension,  $d_1$  ( $y$ -axis). Whereas, if you specify  $d_2$  by setting the concatenation dimension to 2, the results concatenate along the  $d_2$  direction ( $x$ -axis). Thus if the process generates row vectors, then the concatenated result is a row vector.

# For Each

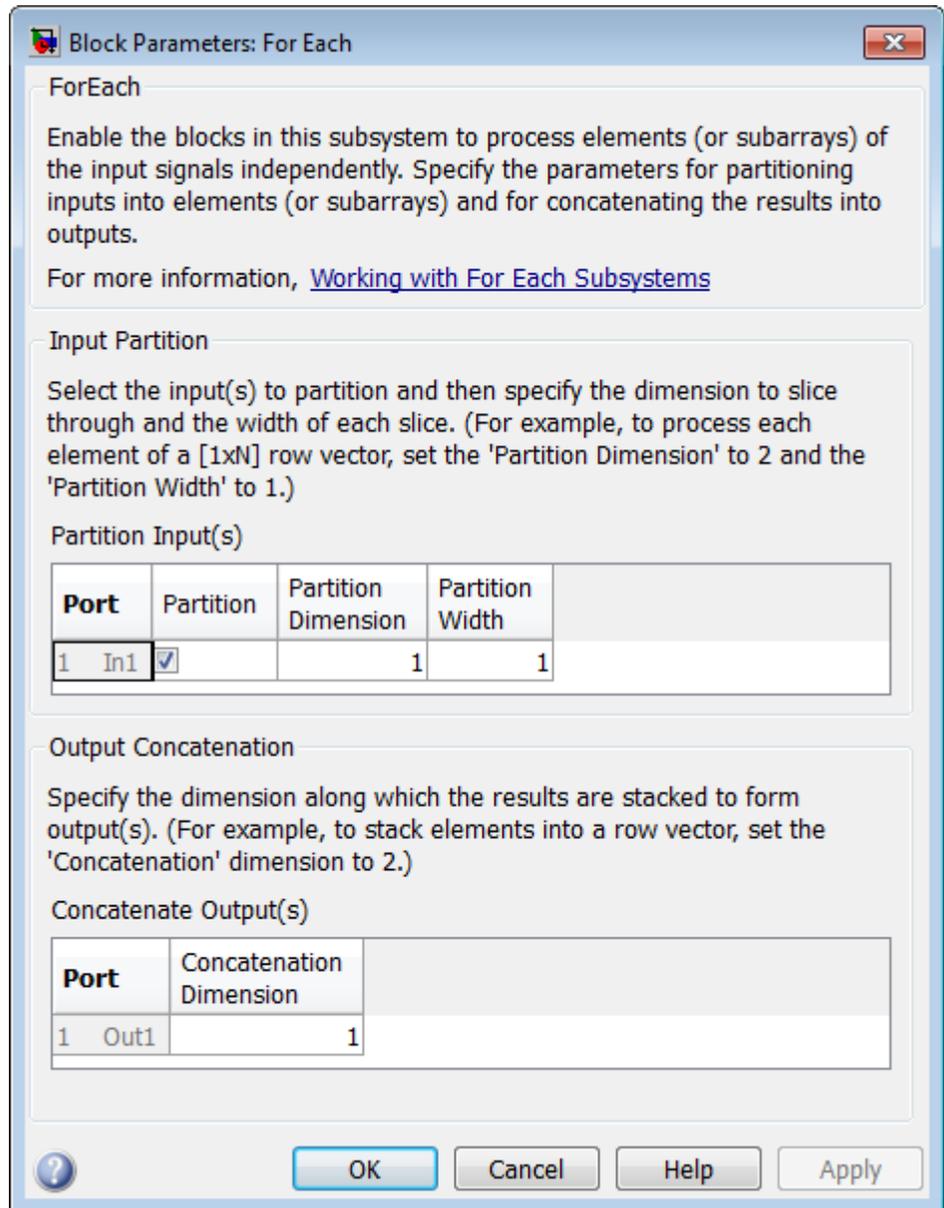

## Parameters and Dialog Box

- “Partition Input(s)” on page 1-652
- “Port” on page 1-653

- “Partition” on page 1-654
- “Partition Dimension” on page 1-655
- “Partition Width” on page 1-656
- “Concatenate Output(s)” on page 1-657
- “Port” on page 1-657
- “Concatenation Dimension” on page 1-658

# For Each

---

## **Partition Input(s)**

Use this table to select each input signal that you need to partition and to specify the corresponding **Partition Dimension** and **Partition Width** parameters.

**Port**

The **Port** column displays the input index and the name of the input port connected to the For Each Subsystem block.

**Tip**

You can have any number of ports.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# For Each

---

## **Partition**

Select the check box beside each input signal that you want to partition into subarrays or elements.

### **Settings**

**Default:** Off



On

Enables the partitioning of the input signal.



Off

Disables the partitioning of the input signal.

### **Dependencies**

Selecting this check box enables the **Partition Dimension** and **Partition Width** parameters.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Partition Dimension**

Specify the dimension through which to slice the input signal array. The resulting slices are perpendicular to the dimension that you specify. The slices also partition the array into subarrays or elements, as appropriate.

### **Settings**

**Default:** 1

**Minimum:** 1

### **Tip**

Specify the corresponding width of each slice by setting the **Partition Width** parameter for a given input port.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# For Each

---

## **Partition Width**

Specify the width of each partition slice of the input signal.

### **Settings**

**Default:** 1

**Minimum:** 1

### **Tips**

- The default width of 1 represents a width of one element.
- Specify this parameter with the **Partition Dimension** parameter to define fully how to create the partitioned signal.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Concatenate Output(s)**

For each output port, specify the dimension along which to stack (concatenate) the For Each Subsystem results.

## **Port**

The **Port** column displays the output index and the name of the output port connected to the For Each Subsystem block.

## **Tip**

You can have any number of ports.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# For Each

---

## Concatenation Dimension

Specify the dimension along which to stack the results of the For Each Subsystem.

### Settings

**Default:** 1

**Minimum:** 1

### Tips


- If you specify the default, the results stack in the  $d_1$  direction. Thus if the block generates column vectors, the concatenation process results in a single column vector.
- If you specify 2, the results stack in the  $d_2$  direction. Thus if the block generates row vectors, the concatenation process results in a single row vector.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.


## Examples

The following model demonstrates the partitioning of an input signal by a For Each block. Each row of this 2-by-3 input array contains three integers that represent the  $(x, y, z)$ -coordinates of a point. The goal is to translate each of these points based on a new origin at  $(-20, -10, -5)$  and to display the results.

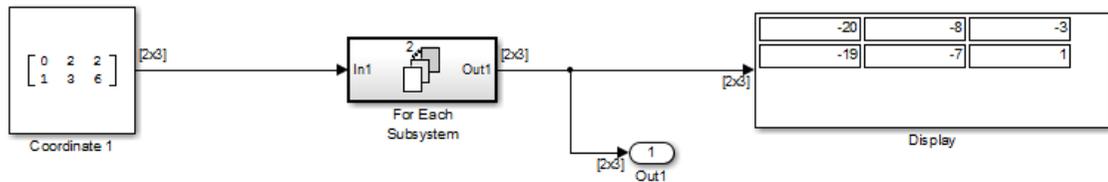

By placing the process of summing an input signal and the new origin inside of a For Each Subsystem, you can operate on each set of coordinates by partitioning the input signal into two row vectors. To accomplish such partitioning, use the default settings of 1 for both the partition dimension and the partition width. If you also use the default concatenation dimension of 1, each new set of coordinates stacks in the  $d_1$  direction, making your display a 2-by-3 array.

Alternatively, if you specify a concatenation dimension of 2, then you get a single row vector because each set of results stacks in the  $d_2$  direction.

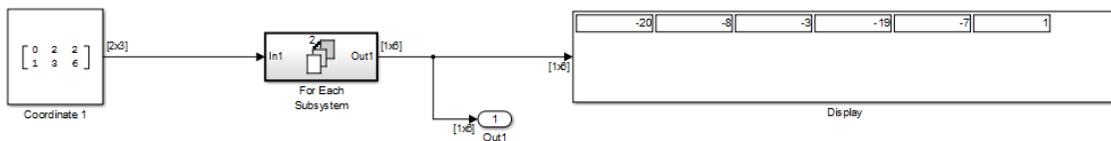

This example shows how to partition an input signal. To learn how the For Each block and subsystem handle a model with states, see the For Each Subsystem documentation.

## See Also

For Each Subsystem

# For Each Subsystem

---

**Purpose** Repeatedly perform algorithm on each element or subarray of input signal and concatenate results

**Library** Ports & Subsystems

## Description



The For Each Subsystem block is useful in modeling scenarios where you need to repeat the same algorithm for individual elements (or subarrays) of an input signal. The set of blocks within the subsystem represents the algorithm applied to a single element (or subarray) of the original signal. The For Each block inside the subsystem allows you to configure the decomposition of the subsystem inputs into elements (or subarrays), and to configure the concatenation of the individual results into output signals.

Inside this subsystem, each block that has states maintains separate sets of states for each element or subarray that it processes. Consequently, the operation of this subsystem is similar in behavior to copying the contents of the subsystem for each element in the original input signal and then processing each element using its respective copy of the subsystem.

An additional benefit of the For Each Subsystem is that, for certain models, it improves the code reuse in Simulink Coder generated code. Consider a model containing two reusable Atomic Subsystems with the same scalar algorithm applied to each element of the signal. If the input signal dimensions of these subsystems are different, Simulink Coder generated code includes two distinct functions. You can replace these two subsystems with two identical For Each Subsystems that are configured to process each element of their respective inputs using the same algorithm. For this case, Simulink Coder generated code

consists of a single function parameterized by the number of input signal elements. This function is invoked twice — once for each unique instance of the For Each Subsystem in the model. For each of these cases, the input signal elements have different values.

## Limitations

The For Each Subsystem block has these limitations, which you can work around.

Limitation	Workaround
You cannot log any signals in the subsystem.	Pull the signal outside the subsystem using an output port for logging.
You cannot log the states of the blocks in the model in array format. Also, you cannot log the states of the blocks in the subsystem, even if you are using structure format.	Save and restore the simulation state (SimState).
Reusable code is generated for two For Each Subsystems with identical contents if their input and output signals are vectors (1-D or 2-D row or column vector). For n-D input and output signals, reusable code is generated only when the dimension along which the signal is partitioned is the highest dimension.	Permute the signal dimensions to transform the partition dimension and the concatenation dimension to the highest nonsingleton dimension for n-D signals.

The For Each Subsystem block does not support the following features:

- You cannot include the following blocks or S-functions inside a For Each Subsystem:

# For Each Subsystem

---

- Data Store Memory, Data Store Read, or Data Store Write blocks inside the subsystem
- The From Workspace block if the input is a Structure with Time that has an empty time field.
- The To Workspace and To File data saving blocks
- Model Reference block with simulation mode set to 'Normal'
- Shadow Inports
- ERT S-functions

For a complete list of the blocks that support the For Each Subsystem, type `showblockdatatypetable` at the MATLAB command line.

- You cannot use the following kinds of signals:
  - Test-pointed signals or signals with an external storage class inside the system
  - Frame signals on subsystem input and output boundaries
  - Variable-size signals
  - Function-call signals crossing the boundaries of the subsystem
- Creation of a linearization point inside the subsystem
- Setting the initial state of blocks inside the model if the format of the data is in either of the following formats:
  - Array
  - Structure that includes data for a block inside of the For Each subsystem
- Propagating the Jacobian flag for the blocks inside the subsystem. You can check this condition in MATLAB using `J.Mi.BlockAnalyticFlags.jacobian`, where J is the Jacobian object. To verify the correctness of the Jacobian of the For Each Subsystem, perform the following steps

- Look at the tag of the For Each Subsystem Jacobian. If it is “not\_supported”, then the Jacobian is incorrect.
- Move each block out of the For Each Subsystem and calculate its Jacobian. If any block is “not\_supported” or has a warning tag, the For Each Subsystem Jacobian is incorrect.
- You cannot perform the following kinds of code generation:
  - Generation of a Simulink Coder S-function target
  - Simulink Coder code generation under both of the following conditions:
    - A Stateflow or MATLAB Function block resides in the subsystem.
    - This block tries to access global data outside the subsystem, such as Data Store Memory blocks or Simulink.Signal objects of ExportedGlobal storage class.
  - HDL code generation
  - PLC code generation

## S-Function Support

The For Each Subsystem block supports both C-MEX S-functions and Level-2 MATLAB S-functions, provided that the S-function supports multiple execution instances using one of the following techniques:

- A C-MEX S-function must declare `ssSupportsMultipleExecInstances(S, true)` in the `mdlSetWorkWidths` method.
- A Level-2 MATLAB S-function must declare `'block.SupportsMultipleExecInstances = true'` in the `Setup` method.

If you use the above specifications:

- Do not cache run-time data, such as `DWork` and Block I/O, using global or persistent variables or within the `userdata` of the S-function.

# For Each Subsystem

---

- Every S-function execution method from mdlStart up to mdlTerminate is called once for each element processed by the S-function, when it is in a For Each Subsystem. Consequently, you need to be careful not to free the same memory on repeated calls to mdlTerminate. For example, consider a C-MEX S-function that allocates memory for a run-time parameter within mdlSetWorkWidths. The memory only needs to be freed once in mdlTerminate. As a solution, set the pointer to be empty after the first call to mdlTerminate.

## Data Type Support

The For Each Subsystem block accepts real or complex signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated


For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Examples of Working with For Each Subsystems


### Example of Simplifying a Model

The following model uses an FIR filter to independently process each element of the input sine wave signal, in an identical manner. The model uses Selector blocks and three identical subsystems: Subsystem, Subsystem1, and Subsystem2. A Vector Concatenate block concatenates the resulting vectors. This repetitive process is graphically complex and difficult to maintain. Also, adding another element to the signal requires a significant rework of the model.

## Repetition of a Scalar Algorithm to Achieve Vectorized Processing

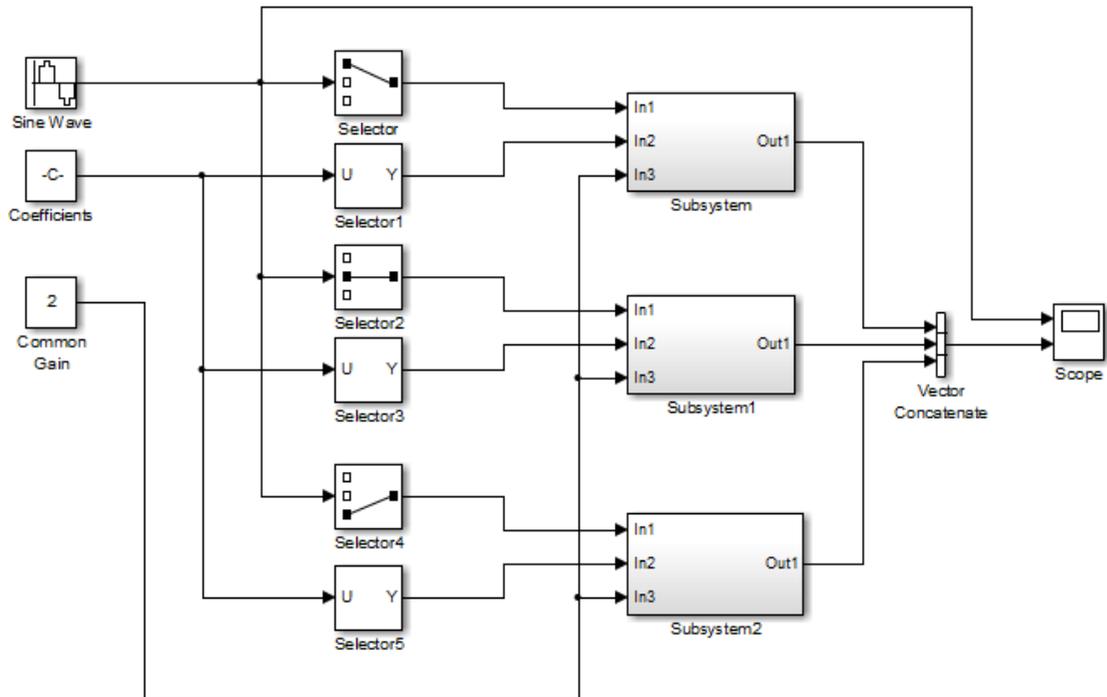

Each subsystem contains an identical FIR filter that accepts a different set of input coefficients. For example, Subsystem2 contains the following blocks:

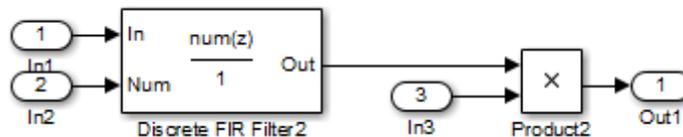


# For Each Subsystem

---


You can simplify this model by replacing the repetitive operations with a single For Each Subsystem block.

## For Each Subsystem: Vectorizing a Scalar Algorithm

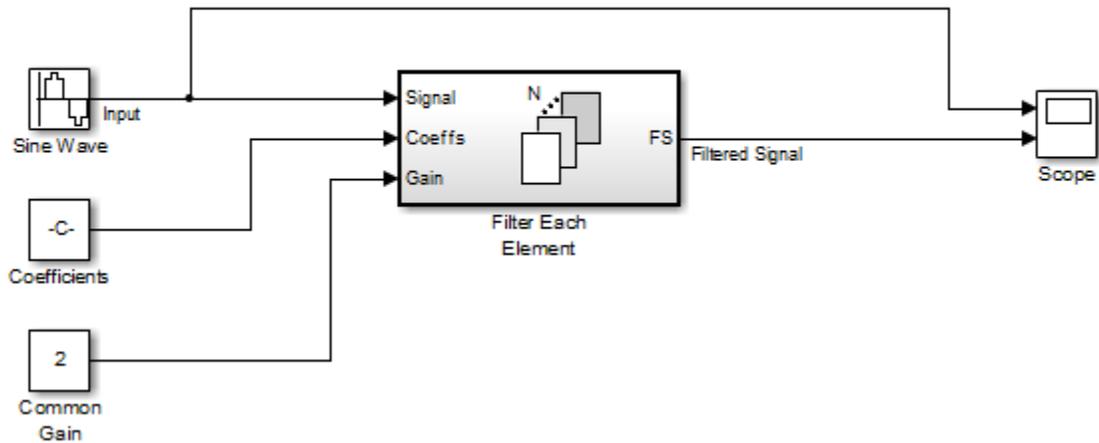


This subsystem contains a For Each block and a model representing the identical algorithm of the three subsystems that it replaces. The For Each block specifies how to partition the input signal into individual elements and how to concatenate the processed signals to form output signals. Also, every block that has state maintains a separate set of states for each input element processed during a given execution step.

# For Each Subsystem

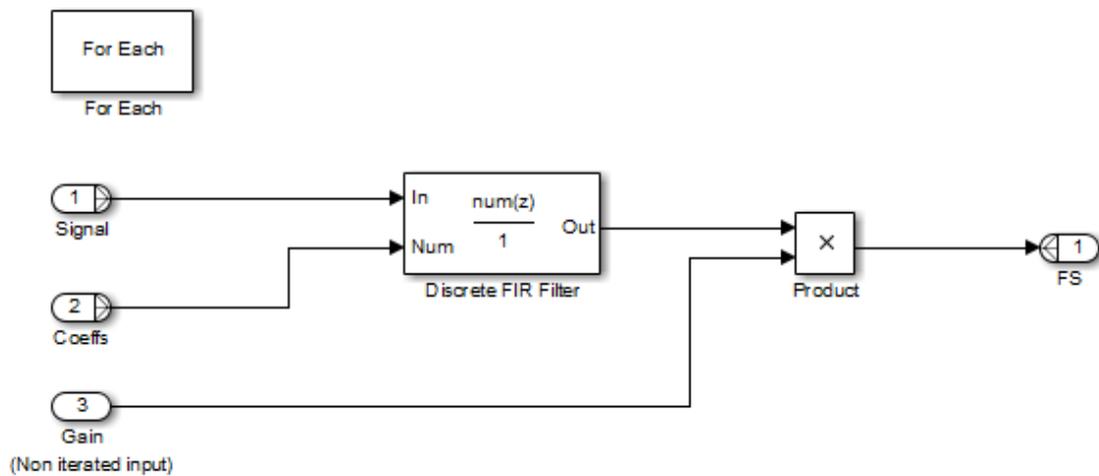


For this example, both the input signal and the input coefficients are selected for partitioning. The partition dimension and the partition width are both set to 1 for both inputs.

# For Each Subsystem

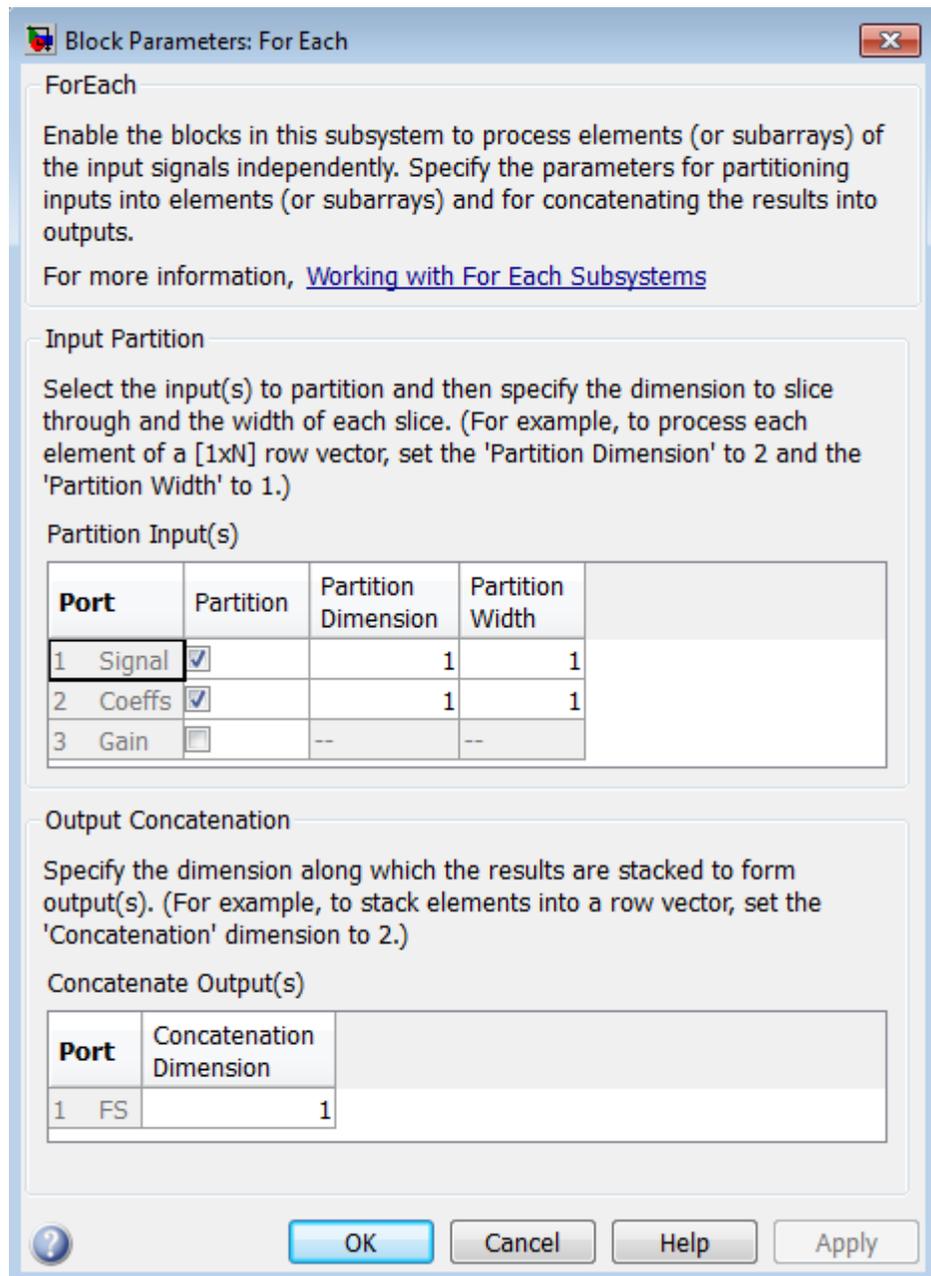

Therefore, the For Each block slices the input signals into horizontal partitions of width 1. The input signal of coefficients transforms from a single array,

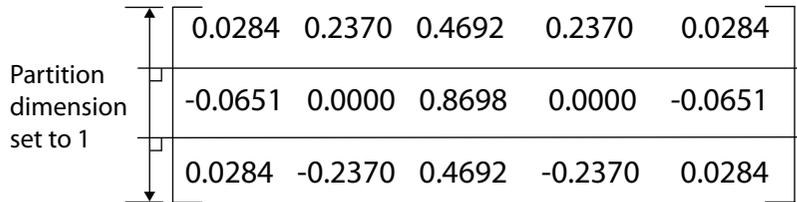

into three signals,




To match the output signal dimension to the input signal dimension, set the concatenation dimension equal to the partition dimension. (The output signal dimension and the input signal dimension do not have to match, but matching them makes it easier to compare the input and output.)

## Example of Improved Code Reuse


The purpose of this example is to show how code reuse can be improved when you have two or more identical For Each Subsystems. Consider the following model, `rtwdemo_foreachreuse`.

# For Each Subsystem

Reusing Functions with Different Input Sizes

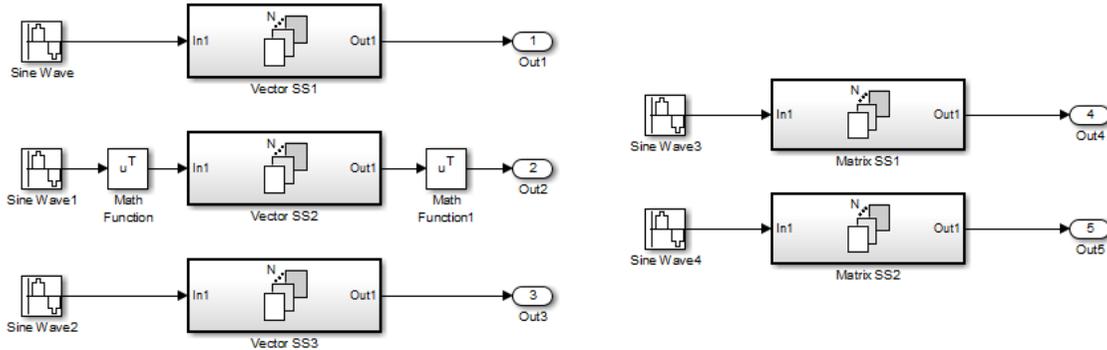

The intent is for the three subsystems — Vector SS1, Vector SS2, and Vector SS3 — to apply the same processing to each scalar element of the vector signal at their respective input. Because these three subsystems perform the same processing, it is desirable for them to produce a single shared Output (and Update) function for all three subsystems in the code generated for this model. For example, the Vector SS3 subsystem contains the following blocks:

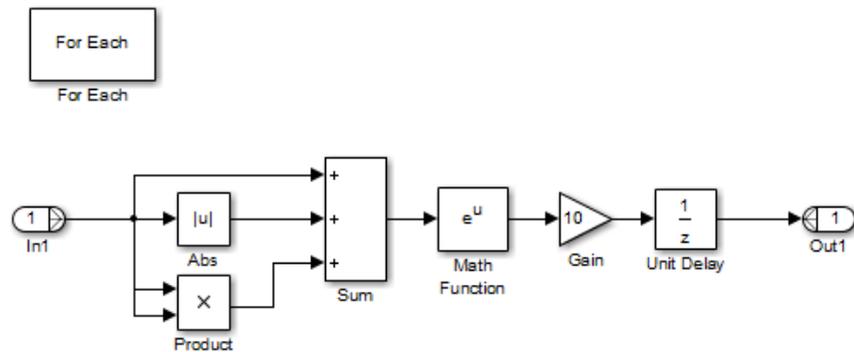

To generate a single shared function for the three subsystems, the configuration of the partitioning they perform on their input signals

must be identical. For Vector SS1 and Vector SS3, this configuration is straightforward because you can set the partition dimension and width to 1. However, in order for Vector SS2 to also partition its input signal along dimension 1, you must insert a Math Function block to transpose the 1-by-8 row vector into an 8-by-1 column vector. You can subsequently convert the output of the subsystem back to a 1-by-8 row vector using a second Math Function block set to the transpose operator.

If you use the **Build** button on the **Code Generation** pane of the Configuration Parameters dialog to generate code, the resulting code uses a single Output function. This function is shared by all three For Each Subsystem instances.

```
/*
 * Output and update for iterator system:
 *   '<Root>/Vector SS1'
 *   '<Root>/Vector SS2'
 *   '<Root>/Vector SS3'
 */
void VectorProcessing(int32_T NumIters, const real_T rtu_In1[],
                    real_T rty_Out1[],
                    rtDW_VectorProcessing *localDW)
```

The functions has an input parameter NumIters that indicates the number of independent scalars which each For Each Subsystem is to process. This function is called three times with the parameter NumIters set to 10, 8, and 7 respectively.

The remaining two subsystems in this model show how reusable code can also be generated for matrix signals that are processed using the For Each Subsystem. Once again, a **Build** provides code reuse of a single function.

## Characteristics

Sample Time	Inherited from the driving block
Scalar Expansion	No

# For Each Subsystem

---

Dimensionalized	Yes
Multidimensionalized	Yes

**See Also**

For Each

**Purpose** Repeatedly execute contents of subsystem at current time step until iteration variable exceeds specified iteration limit

**Library** Ports & Subsystems

## Description




The For Iterator block, when placed in a subsystem, repeatedly executes the contents of the subsystem at the current time step until an iteration variable exceeds a specified iteration limit. You can use this block to implement the block diagram equivalent of a `for` loop in the C programming language.

The output of a For Iterator subsystem can not be a function-call signal. Simulink software will display an error message if the simulation is run or the diagram updated.

The block's parameter dialog allows you to specify the maximum value of the iteration variable or an external source for the maximum value and an optional external source for the next value of the iteration variable. If you do not specify an external source for the next value of the iteration variable, the next value is determined by incrementing the current value:

$$i_{n+1} = i_n + 1$$


Suppose that you have the following model:

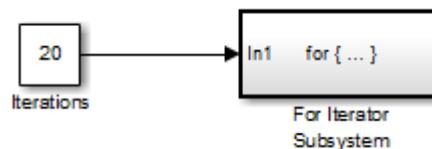


# For Iterator

---

Over 20 iterations, the For Iterator block increments a value by 10 at each time step:

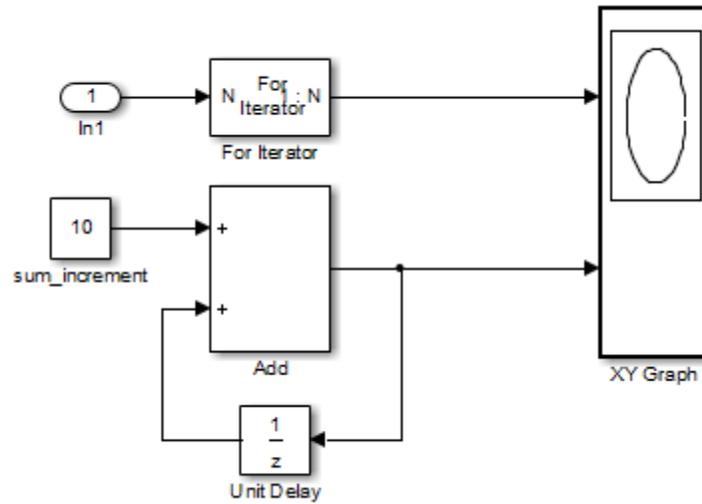

The following figure shows the result.

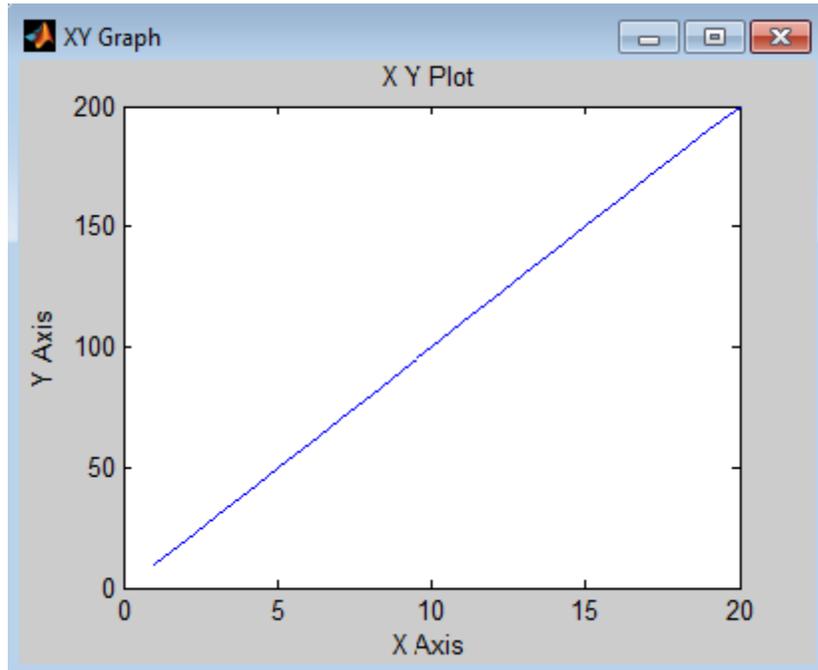

The For Iterator subsystem in this example is equivalent to the following C code.

```
sum = 0;
iterations = 20;
sum_increment = 10;
for (i = 0; i < iterations; i++) {
    sum = sum + sum_increment;
}
```

---

**Note** Placing a For Iterator block in a subsystem makes it an atomic subsystem if it is not already an atomic subsystem.

---

## Data Type Support

The following rules apply to the data type of the number of iterations (N) input port:


- The input port accepts data of mixed numeric types.
- If the input port value is noninteger, it is first truncated to an integer.
- Internally, the input value is cast to an integer of the type specified for the iteration variable output port.
- If no output port is specified, the input port value is cast to type `int32`.
- If the input port value exceeds the maximum value of the output port's type, it is truncated to that maximum value.

Data output for the iterator value can be selected as `double`, `int32`, `int16`, or `int8` in the block parameters dialog box.

The following rules apply to the iteration variable input port:

- It can appear only if the iteration variable output port is enabled.
- The data type of the iteration variable input port is the same as the data type of the iteration variable output port.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

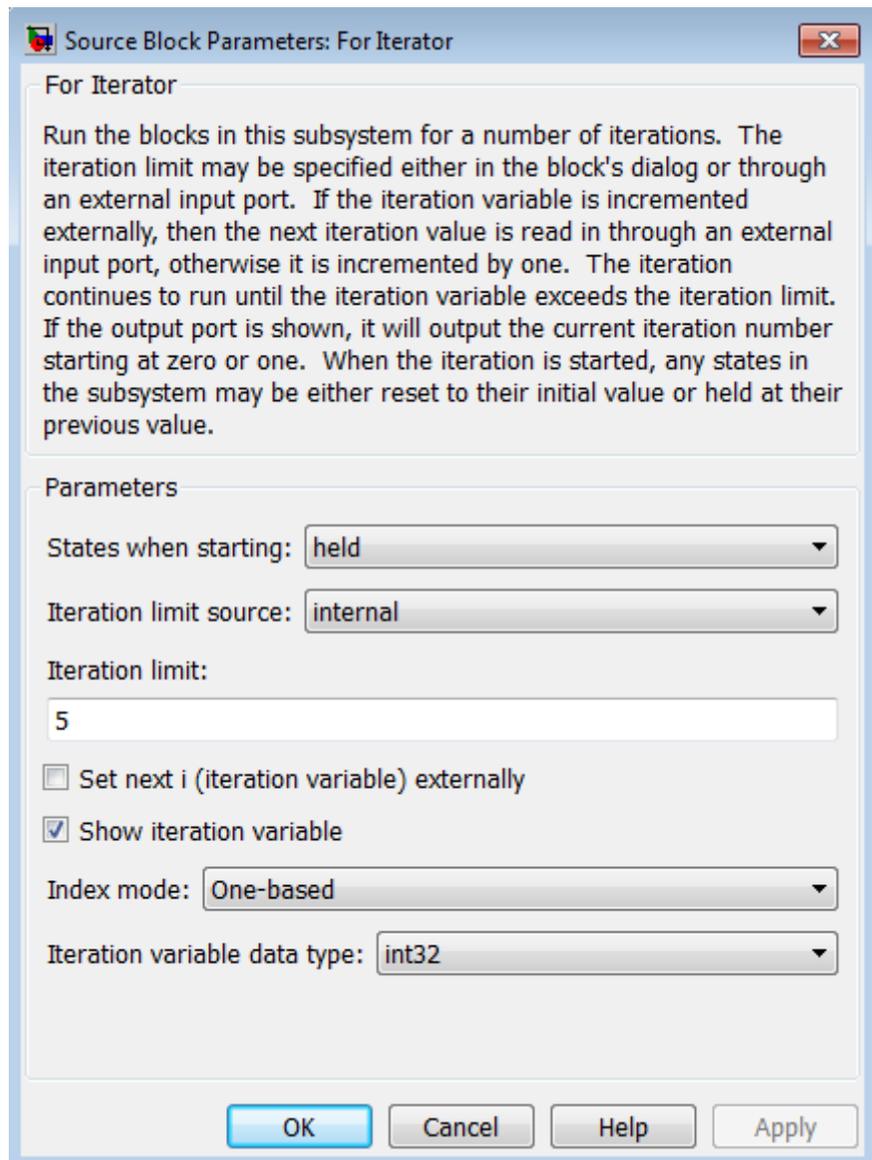

## Parameters

## and Dialog Box

### States when starting

Set this field to `reset` if you want the states of the For subsystem to be reinitialized before the first iteration at each time step. Otherwise, set this field to `held` (the default) to make sure that these subsystem states retain their values from the last iteration at the previous time step.

### Iteration limit source

If you set this field to `internal`, the value of the **Iteration limit** field determines the number of iterations. If you set this field to `external`, the signal at the For Iterator block's N port determines the number of iterations. The iteration limit source must reside outside the For Iterator subsystem.

### Iteration limit

Set the number of iterations by specifying a number or a named constant. This field appears only if you selected `internal` for the **Iteration limit source** field. This parameter supports storage classes. You can define the named constant in the base workspace of the Model Explorer as a `Simulink.Parameter` object of the built-in storage class `Define (custom)` type. For more information, see “Apply Custom Storage Classes to Parameters” in the Embedded Coder documentation.

### Set next i (iteration variable) externally

This option can be selected only if you select the **Show iteration variable** option. If you select this option, the For Iterator block displays an additional input for connecting an external iteration variable source. The value of the input at the current iteration is used as the value of the iteration variable at the next iteration.

### Show iteration variable

If you select this check box, the For Iterator block outputs its iteration value.

### Index mode

If you set this field to `Zero-based`, the iteration number starts at zero. If you set this field to `One-based`, the iteration number starts at one.

## Iteration variable data type

Set the type for the iteration value output from the iteration number port to double, int32, int16, or int8.

## Characteristics

Direct Feedthrough	No
Sample Time	Inherited from driving blocks
Scalar Expansion	No
Dimensionalized	No
Zero Crossing	No


# For Iterator Subsystem

---

**Purpose** Represent subsystem that executes repeatedly during simulation time step

**Library** Ports & Subsystems

## Description

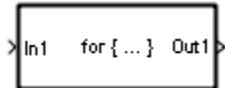

The For Iterator Subsystem block is a Subsystem block that is preconfigured to serve as a starting point for creating a subsystem that executes repeatedly during a simulation time step.

For more information, see the For Iterator block in the online Simulink block reference and “Use Control Flow Logic” in the Simulink documentation.

When using simplified initialization mode, you cannot place any block needing elapsed time within an Iterator Subsystem. In simplified initialization mode, Iterator subsystems do not maintain elapsed time, so Simulink will report an error if any such block (such as the Discrete-Time Integrator block) is placed within the subsystem. For more information on simplified initialization modes, see “Underspecified initialization detection”.


**Purpose** Accept input from Goto block

**Library** Signal Routing

**Description** The From block accepts a signal from a corresponding Goto block, then passes it as output. The data type of the output is the same as that of the input from the Goto block. From and Goto blocks allow you to pass a signal from one block to another without actually connecting them. To associate a Goto block with a From block, enter the Goto block's tag in the **Goto Tag** parameter.

A From block can receive its signal from only one Goto block, although a Goto block can pass its signal to more than one From block.

This figure shows that using a Goto block and a From block is equivalent to connecting the blocks to which those blocks are connected. In the model at the left, Block1 passes a signal to Block2. That model is equivalent to the model at the right, which connects Block1 to the Goto block, passes that signal to the From block, then on to Block2.

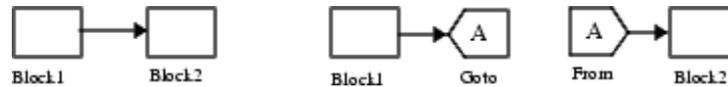

The visibility of a Goto block tag determines the From blocks that can receive its signal. For more information, see Goto and Goto Tag Visibility. The block indicates the visibility of the Goto block tag:

- A local tag name is enclosed in brackets ( []).
- A scoped tag name is enclosed in braces ( {} ).
- A global tag name appears without additional characters.


The From block supports signal label propagation.

# From

## Data Type Support

The From block outputs real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

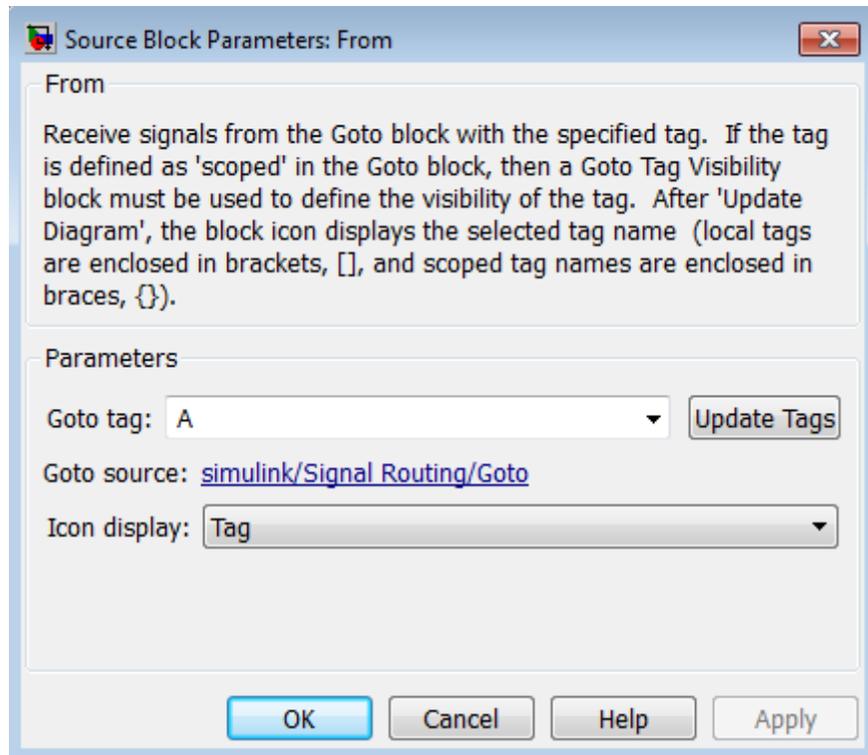

## Parameters and Dialog Box

### Goto Tag

The tag of the Goto block that forwards its signal to this From block. To change the tag, select a new tag from this control's drop-down list. The drop-down list displays the Goto tags that the From block can currently see. An item labeled <More Tags...> appears at the end of the list the first time you display the list in a Simulink session. Selecting this item causes the block to update

the tags list to include the tags of Goto blocks residing in library subsystems referenced by the model containing this From block. Simulink software displays a progress bar while building the list of library tags. Simulink software saves the updated tags list for the duration of the Simulink session or until the next time you select the adjacent **Update Tags** button. You need to update the tags list again in the current session only if the libraries referenced by the model have changed since the last time you updated the list.

**Update Tags**

Updates the list of tags visible to this From block, including tags residing in libraries referenced by the model containing this From block.

**Goto Source**

Path of the Goto block connected to this From block. Clicking the path displays and highlights the Goto block.

**Icon Display**

Specifies the text to display on the From block’s icon. The options are the block’s tag, the name of the signal that the block represents, or both the tag and the signal name.

**Examples**

The following models show how to use the From block:

- sldemo\_auto\_climatecontrol
- sldemo\_hardstop

**Characteristics**

Sample Time	Inherited from the block driving the Goto block
Dimensionalized	Yes
Multidimensionalized	Yes

## From

---

Virtual	Yes For more information, see “Virtual Blocks” in the Simulink documentation.
Zero-Crossing Detection	No

### See Also

Goto

**Purpose** Read data from MAT-file

**Library** Sources

**Description** The From File block reads data from a MAT-file and outputs the data as a signal. The data is a sequence of samples. Each sample consists of a time stamp and an associated data value.



The From File block icon shows the name of the MAT-file that supplies the data.

You can have multiple From File blocks that read from the same MAT-file.

During the current simulation, the From File block cannot read data from a MAT-file that is being written to by a To File block.

### Version 7.3 MAT-Files

For a *Version 7.3* MAT-file, the From File block incrementally reads data from the MAT-file during simulation. The **Sample time** parameter specifies the sample time that the From File block uses to read data from a MAT-file. For details, see “Parameters and Dialog Box”.

The time stamps in the file must be monotonically nondecreasing.

For each simulation time hit for which the MAT-file contains no matching time stamp, Simulink software interpolates or extrapolates to obtain the needed data using the method that you select. For details, see “Simulation Time Hits That Have No Corresponding MAT-File Time Stamps.”

When the From File block reads data from a MAT-file, that data must be stored in one of two formats:

- MATLAB timeseries object
- Array

Use array format only for vector, double, noncomplex signals. To load a bus signal, use a MATLAB structure that matches the bus hierarchy, where each leaf of the structure is a MATLAB `timeseries` object.

The MATLAB `timeseries` format supports the following simulation and code generation modes:

- Normal
- Accelerator
- Rapid Accelerator
- Rapid simulation target (RSim)
- Model Reference Accelerator

MATLAB `timeseries` format data can have:

- Any dimensionality and complexity
- Any built-in data type, including `Boolean`
- A fixed-point data type with a word length of up to 32 bits
- An enumerated data type

The array format for stored data is a matrix containing two or more rows. The matrix in the MAT-file must have the following form:

$$\begin{bmatrix} t_1 & t_2 & \dots & t_{final} \\ u1_1 & u1_2 & \dots & u1_{final} \\ \dots & & & \\ un_1 & un_2 & \dots & un_{final} \end{bmatrix}$$

The first element of each column contains a time stamp. The remainder of the column contains data for the corresponding output values. Each element must be a double and cannot include a NaN.

For data stored using the array format, the width of the From File output depends on the number of rows in the matrix. Given a matrix containing  $m$  rows, the block outputs a vector of length  $m-1$ .

### Version 7.0 and Earlier Version MAT-Files

For *Version 7.0* or an earlier version of a MAT-file, the From File block reads only array-format data. The complete, uncompressed data from a MAT-file loads into memory at the start of the simulation.

If you have a Version 7.0 or earlier version MAT-file that you want to use with the From File block, consider converting the file to a Version 7.3 MAT-file. Use a Version 7.3 MAT-file if you want the From File block to incrementally read the data during simulation or you want to use MATLAB timeseries data. For example, to convert a Version 7.0 file named `my_data_file.mat` that contains the variable `var`, at the MATLAB command line, enter:

```
load('my_data_file.mat')
save('my_data_file.mat', 'var', '-v7.3')
```

### Simulation Time Hits That Have No Corresponding MAT-File Time Stamps

If the simulation time hit does not have a corresponding MAT-file time stamp, then the From File block output depends on:

- The location of the simulation time hit relative to the time stamps in the MAT-file
- The interpolation or extrapolation methods that you select
- The data type of the MAT-file data

For details about interpolation and extrapolation options, see the descriptions of the following parameters in “Parameters and Dialog Box”:

- **Data extrapolation before first data point**
- **Data interpolation within time range**

# From File

---

- **Data extrapolation after last data point**

Sometimes the MAT-file includes duplicate time stamps (two or more data values that have the same time stamp). In such cases, the From File block action depends on the location of the simulation time hit, relative to the duplicate time stamps in the MAT-file.

For example, suppose the MAT-file contains the following data, with three data points having a time stamp value of 2:

```
time stamps:    0 1 2 2 2 3 4
data values:    2 3 6 4 9 1 5
```

The following table describes the From File block output.

<b>Simulation Time, Relative to Duplicate Time Stamp Values in MAT-File</b>	<b>From File Block Action</b>
Before the duplicate time stamps	Performs the same actions as when the time stamps are distinct, using the first of the duplicate time stamp values as the basis for interpolation. (In this example, that time stamp value is 6.)
At or after the duplicate time stamps	Performs the same actions as when the times stamps are distinct, using the last of the duplicate time stamp values as the basis for interpolation. (In this example, that time stamp value is 9.)

## **Using Data Saved by a To File Block**

The From File block reads data written by a To File block without any modifications to the data or other special provisions.

## Using Bus Data

The From File block supports loading nonvirtual bus signals.

The data must be in a MATLAB structure that matches the bus hierarchy. Each leaf of the structure must be a MATLAB timeseries object.

The data can underspecify the bus signal, but cannot overspecify the bus signal. The structure cannot have any elements that do not have corresponding signals in the bus.

The structure does not require data for every element in the bus hierarchy, but the structure must have data for at least one of the signals in the bus. For signals that do not specify data, the From File block outputs the ground values. If any data read by the From File block has variable dimensions, then you must specify data for all complex bus signals.

## Code Generation Requirements

For a From File block, simulating in Accelerator, Rapid Accelerator, or model reference Accelerator mode or building an RSim target behaves the same way, and has the same requirements, as simulating in Normal mode.

For a From File block, generating code that involves building ERT or GRT targets, or using SIL or PIL simulation modes, requires that:

- The MAT-file contains a non-empty finite real matrix with at least two rows.
  - The matrix must have a data type of `double`.
  - The matrix does not have any NaN elements.
- The From File block parameters dialog box has the following settings:
  - Set the **Data extrapolation before first data point** and **Data extrapolation after last data point** parameters to `Linear extrapolation`.

# From File


---

- Set the **Data interpolation within time range** parameter to Linear interpolation
- Clear the **Enable zero-crossing detection** parameter.

## Data Type Support

The From File block can read real or complex signal data of any data type that Simulink supports, except that fixed-point data cannot have a word length that exceeds 32 bits.

The From File block supports reading nonvirtual bus signals.

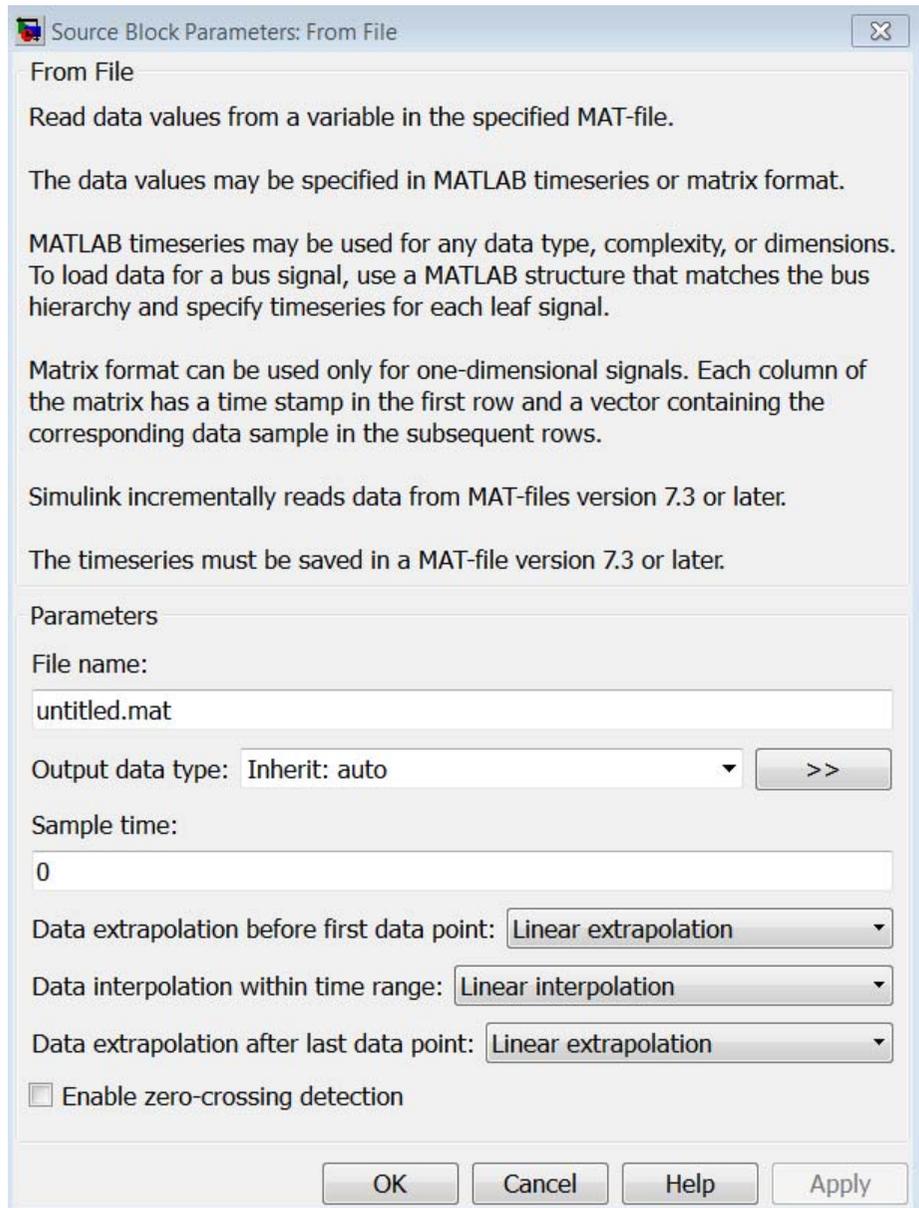

## Parameters and Dialog Box

### File name

The path or file name of the MAT-file that contains the data used as input. On UNIX<sup>®</sup> systems, the path name can start with a tilde

(~) character signifying your home folder. The default file name is `untitled.mat`. If you specify a file name without path information, Simulink reads the file in the MATLAB working folder. (To determine the working folder, type `pwd` at the MATLAB command line.) If Simulink cannot find the specified file name in the working folder, it displays an error message.

## Output data type

The data type for the data that the From File block loads. For non-bus types, you can use `Inherit: auto` to skip any data type verification. If you specify an output data type, then the From File block verifies that the data in the file matches the data type that you specified. For more information, see “Specify Block Output Data Types”.

If you set **Output data type** to be a bus object, the bus object must be available when you compile the model. For each signal in a bus, the From File block verifies that the data type, dimension, and complexity of the data matches the data type, dimension, and complexity that the bus object defines for the signal.

- `Inherit: auto` — Default
- `double`
- `single`
- `int8`
- `uint8`
- `int16`
- `uint16`
- `int32`
- `uint32`
- `boolean`
- `fixdt(1,16,0)` — Data type is fixed-point (1,16,0).
- `fixdt(1,16,2^0,0)` — Data type is fixed-point (1,16,2<sup>0</sup>,0).

- Enum: `<class_name>` — Data type is enumerated.
- Bus: `<bus_object>` — Data type is a bus object. For details, see the “Using Bus Data” section.
- `<data type expression>` — The name of a data type object, for example `Simulink.NumericType`. Do not specify a bus object as the expression.

## >> (Show data type assistant)

Displays the **Data Type Assistant**, to help you to set the **Output data type** parameter.

## Mode

The category of data to specify. For more information, see “Specify Block Output Data Types”.

- **Inherit** — Inheritance rule for data types. Selecting **Inherit** enables a second menu/text box to the right. (Default)
- **Built in** — Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:
  - **double** — Default
  - **single**
  - **int8**
  - **uint8**
  - **int16**
  - **uint16**
  - **int32**
  - **uint32**
  - **boolean**
  - **Fixed point** — Fixed-point data types

- **Enumerated** — Enumerated data types. Selecting **Enumerated** enables a second menu/text box to the right, where you can enter the class name.
- **Bus** — Bus object. Selecting **Bus** enables a **Bus object** parameter to the right, where you enter the name of a bus object that you want to use to define the structure of the bus. If you need to create or change a bus object, click **Edit** to the right of the **Bus object** field to open the Simulink Bus Editor. For details, see “Manage Bus Objects with the Bus Editor”.
- **Expression** — Expression that evaluates to a data type. Selecting **Expression** enables a second menu/text box to the right, where you enter the expression. Do not specify a bus object as the expression.

## Sample time

The sample period and offset of the data read from the file.

The From File block reads data from a MAT-file using a sample time that:

- You specify for the From File block
- The From File block inherits from the blocks into which the From File block feeds data

The default is 0, which specifies a continuous sample time. The MAT-file is read at the base (fastest) rate of the model. For details, see “Specify Sample Time”.

## Data extrapolation before first data point

Extrapolation method that Simulink uses for a simulation time hit that is before the first time stamp in the MAT-file. Choose one of the following extrapolation methods.

Method	Description
Linear extrapolation	<p>(Default)</p> <p>If the MAT-file contains only one sample, then the From File block outputs the corresponding data value.</p> <p>If the MAT-file contains more than one sample, then the From File block linearly extrapolates using the first two samples:</p> <ul style="list-style-type: none"> <li>• For <code>double</code> data, linearly extrapolates the value using the first two samples</li> <li>• For <code>Boolean</code> data, outputs the first data value</li> <li>• For a built-in data type other than <code>double</code> or <code>Boolean</code>, upcasts the data to <code>double</code>, performs linear extrapolation (as described above for <code>double</code> data), and then downcasts the extrapolated data value to the original data type</li> </ul> <p>You cannot use the <code>Linear extrapolation</code> option with enumerated (<code>enum</code>) data. All signals in a bus use the same extrapolation setting, so if any signal in a bus uses <code>enum</code> data, then you cannot use the <code>Linear extrapolation</code> option.</p>
Hold first value	Uses the first data value in the file
Ground value	<p>Uses a value that depends on the data type of MAT-file sample data values:</p> <ul style="list-style-type: none"> <li>• Fixed-point data types — uses the ground value</li> <li>• Numeric types other than fixed-point — uses 0</li> </ul>

Method	Description
	<ul style="list-style-type: none"><li>• Boolean — uses false</li><li>• Enumerated data types — uses default value</li></ul>

## Data interpolation within time range

The interpolation method that Simulink uses for a simulation time hit between two time stamps in the MAT-file. Choose one of the following interpolation methods.

Method	Description
Linear interpolation	<p>(Default)</p> <p>The From File block interpolates using the two corresponding MAT-file samples:</p> <ul style="list-style-type: none"><li>• For double data, linearly interpolates the value using the two corresponding samples</li><li>• For a built-in data type other than double or Boolean, upcasts the data to double, performs linear interpolation (as described above for double data), and then downcasts the interpolated value to the original data type</li></ul> <p>You cannot use the Linear interpolation option with enumerated (enum) data. All signals in a bus use the same interpolation setting, so if any signal in a bus uses enum data, then you cannot use the Linear interpolation option.</p>
Zero order hold	Uses the data from the first of the two samples

## Data extrapolation after last data point

The extrapolation method that Simulink uses for a simulation time hit that is after the last time stamp in the MAT-file. Choose one of the following extrapolation methods.

Method	Description
Linear extrapolation	<p>(Default)</p> <p>If the MAT-file contains only one sample, then the From File block outputs the corresponding data value.</p> <p>If the MAT-file contains more than one sample, then the From File block linearly extrapolates using data values of the last two samples:</p> <ul style="list-style-type: none"> <li>• For <code>double</code> data, extrapolates the value using the last two samples</li> <li>• For <code>Boolean</code> data, outputs the last data value</li> <li>• For a built-in data type other than <code>double</code> or <code>Boolean</code>, upcasts the data to <code>double</code>, performs linear extrapolation (as described above for <code>double</code> data), and then downcasts the extrapolated value to the original data type</li> </ul> <p>You cannot use the <code>Linear extrapolation</code> option with enumerated (<code>enum</code>) data. All signals in a bus use the same extrapolation setting, so if any signal in a bus uses <code>enum</code> data, then you cannot use the <code>Linear extrapolation</code> option.</p>
Hold last value	Uses the last data value in the file
Ground value	Uses a value that depends on the data type of MAT-file sample data values:

Method	Description
	<ul style="list-style-type: none"><li>• Fixed-point data types — uses the ground value</li><li>• Numeric types other than fixed-point — uses 0</li><li>• Boolean — uses false</li><li>• Enumerated data types — uses default value</li></ul>

## Enable zero-crossing detection

Select to enable zero-crossing detection.

For details, see “Zero-Crossing Detection”, as well as the discussion below.

Simulink uses a technique known as zero-crossing detection to accurately locate a discontinuity, without resorting to excessively small time steps. This section uses “zero-crossing” to represent discontinuities.

For the From File block, zero-crossing detection can only occur at sample points in the file. To determine whether zero crossing occurs, the From File block examines only the time stamps within the sample points.

If the input array contains duplicate time stamps (more than one entry for the same time stamp), Simulink detects a zero crossing at that time stamp. For example, suppose the input array has this data:

```
time:    0 1 2 2 3
signal:  2 3 4 5 6
```

At time 2, there is a zero crossing from the input signal discontinuity.

For data with nonduplicate time stamps, zero-crossing detection depends on the settings of the following parameters:

- **Data extrapolation before first data point**

- **Data interpolation within time range**
- **Data extrapolation after last data point**


The From File block applies the following rules when determining when zero-crossing occurs for the first time stamp, for time stamps between the first and last time stamp, and for the last time stamp.

<b>Time Stamp</b>	<b>When Zero-Crossing Detection Occurs</b>
First	<b>Data extrapolation before first data point</b> is set to Ground value.
Between first and last	<b>Data interpolation within time range</b> is set to Zero-order hold.
Last	One or both of these settings occur: <ul style="list-style-type: none"> <li>• <b>Data extrapolation after last data point</b> is set to Ground value.</li> <li>• <b>Data interpolation within time range</b> is set to Zero-order hold.</li> </ul>

The following figure illustrates zero-crossing detection for data accessed by a From File block that has the following settings:


- **Data extrapolation before first data point** — Linear extrapolation
- **Data interpolation within time range** (for internal points) — Zero order hold
- **Data extrapolation after last data point** — Linear extrapolation

# From File

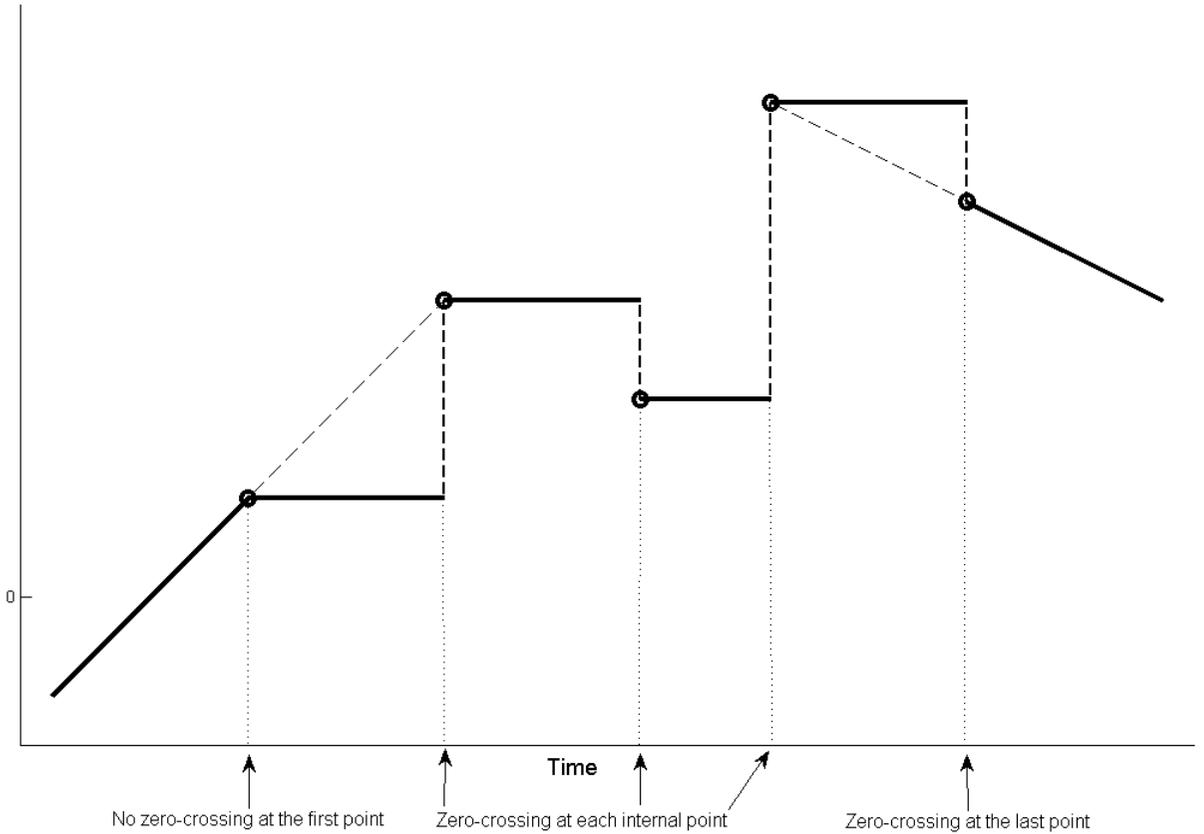

The following figure is another illustration of zero-crossing detection for data accessed by a From File block. The block has the following settings for the time stamps (points):

- **Data extrapolation before first data point** — Hold first value
- **Data interpolation within time range** — Zero order hold
- **Data extrapolation after last data point** — Hold last value

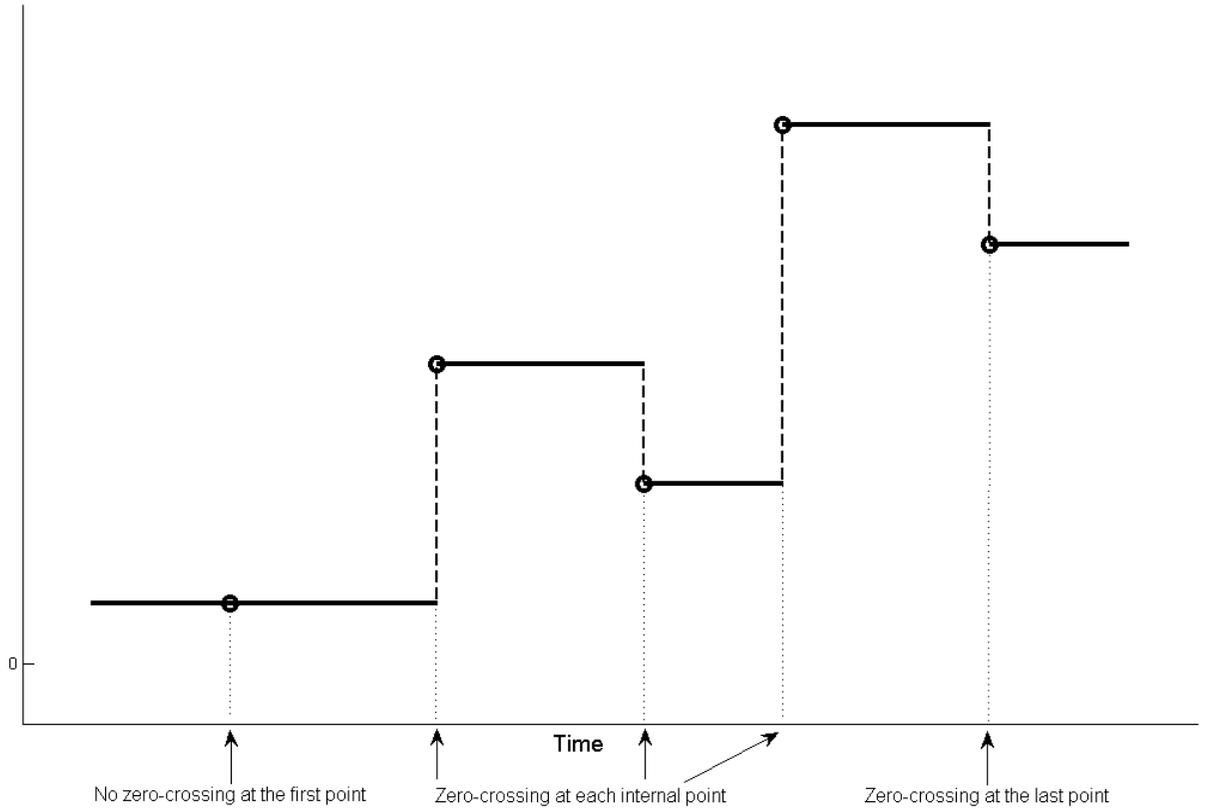

**Characteristics**

Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	Yes
Zero Crossing	Yes, if enabled

## From File

---

### **See Also**

“Import Data”, From Workspace, To File, To Workspace

**Purpose** Read data from workspace

**Library** Sources

**Description** The From Workspace block reads data from a workspace and outputs the data as a signal.



The From Workspace icon displays the expression specified in the **Data** parameter. For details about how Simulink software evaluates this expression, see “Symbol Resolution”.

## Specifying the Workspace Data

In the **Data** parameter of the block, enter a MATLAB expression that specifies the workspace data. The expression must evaluate to one of the following:

- A MATLAB `timeseries` object
- A structure of MATLAB `timeseries` objects
- An array or structure containing an array of simulation times and corresponding signal values

The format of a MATLAB `timeseries` object, matrix, or structure loaded (imported) by a From Workspace block is the same as that used to load root-level input port data from the workspace.

- To load any non-bus data from the workspace, use a MATLAB `timeseries` object or a structure with time. For guidelines on choosing time vectors for discrete systems, see “Techniques for Importing Signal Data”.
- To load bus data, use a structure of MATLAB `timeseries` objects. For details, see “Import Structures of `timeseries` Objects for Buses”.

## Using Data Saved by a To File Block

You can use the From Workspace block to load MATLAB `timeseries` object data that was saved by a To File block, without making any changes to the data.

To use the From Workspace block to load Array format data, before the From Workspace block loads the data that a To File block saved, transpose the array data. The data saved by the To File block contains consecutive time stamps at the beginnings of columns, followed by the corresponding data. The transposed data contains consecutive time stamps at the beginning of rows, followed by the corresponding data. To provide the required format, use MATLAB `load` and `transpose` commands with the MAT-file (see “Reshaping a Matrix”). To avoid having to transpose the data again later, resave the transposed data for future use.

## Using Data Saved by a To Workspace Block

To use the From Workspace block to load data exported by a To Workspace block in a previous simulation for use in a later simulation, save the To Workspace block data in either `Timeseries` or `Structure` with `Time` format. For details, see “Techniques for Importing Signal Data”.

## Loading Variable-Size Signals

You can use a To Workspace block (with `Structure` or `Structure With Time` format) or a root Outport block to log variable-size signals. You can then use the To Workspace variable with the From Workspace block.

Alternatively, you can create a MATLAB structure to contain variable-size signal data. For each `values` field in the structure, include a `valueDimensions` field that specifies the run-time dimensions for the signal. For details, see Simulink Models Using Variable-Size Signals.

## Interpolating Missing Data Values

If you select the **Interpolate data** option, the block uses linear Lagrangian interpolation to compute data values for time steps that occur between time steps for which the workspace supplies data.

For variable-size signals, clear **Interpolate data**.

## Specifying Output After Final Data

Combine the settings of the **Form output after final data value by** and **Interpolate data** parameters to determine the block output after the last time step for which workspace data is available. For details, see the **Form output after final data value by** parameter.

## Detecting Zero Crossings

The **Enable zero-crossing detection** parameter applies only if the sample time is continuous (0).

If you select the **Enable zero-crossing detection** parameter, and if the input array contains more than one entry for the same time step, Simulink detects a zero crossing at that time step.

For bus signals, Simulink detects zero crossings across all leaf bus elements.


## Data Type Support

The From Workspace block accepts data from the workspace and outputs real or complex signals of any type supported by Simulink, including fixed-point and enumerated data types.

The From Workspace block also accepts a bus object as a data type. To load bus data, use a structure of MATLAB `timeseries` objects. For details, see “Import Structures of timeseries Objects for Buses”.

Real signals of type `double` can be in any format that the From Workspace block supports. For complex signals and real signals of a data type other than `double`, use any format except `Array`.

# From Workspace

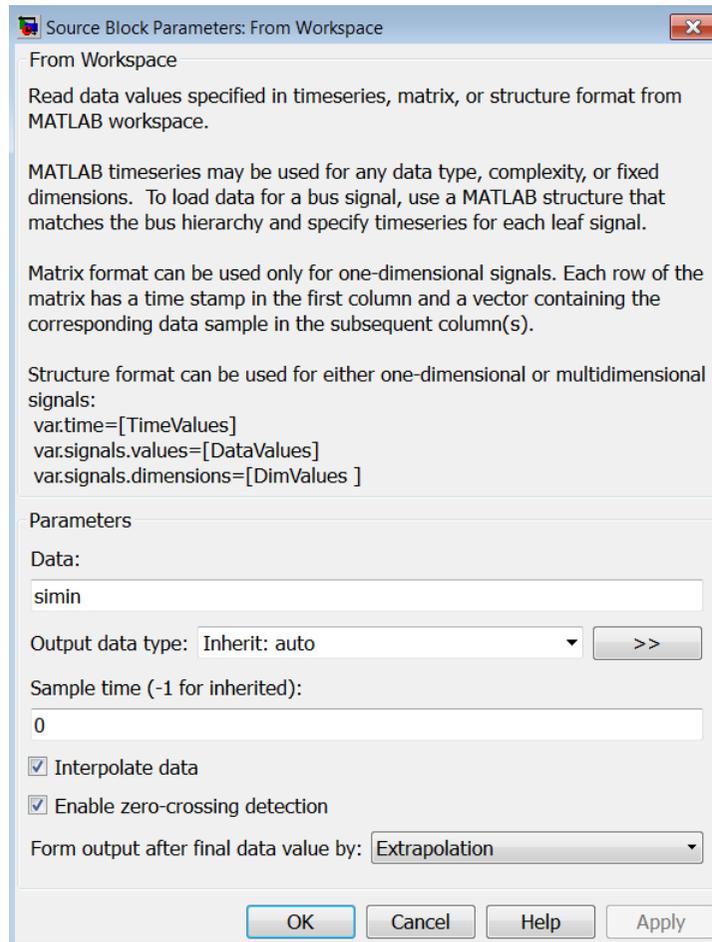

## Parameters and Dialog Box

### Data

A MATLAB expression that evaluates to one of the following:

- A MATLAB timeseries object
- A structure of MATLAB timeseries objects

To load bus data, use a structure of MATLAB timeseries objects. For details, see “Import Structures of timeseries Objects for Buses”.

- A two-dimensional matrix:
  - The first element of each matrix row is a time stamp.
  - The rest of each row is a scalar or vector of signal values.

The leftmost element of each row is the time stamp of the value(s) in the rest of the row.

- A structure, with or without time, which contains:
  - An array or matrix named `signals.values`, which contains scalars or vectors of signal values.
  - An array named `signals.dimensions`, which contains the dimensions of the signals.
  - Optionally, a vector named `time`, which contains time stamps.

The *n*'th `time` element is the time stamp of the *n*'th `signals.values` element. For details, see “Techniques for Importing Signal Data”.

For example, suppose that the workspace contains a column vector of times named `T` and a column vector of corresponding signal values named `U`. Entering the expression `[ T U ]` for this parameter yields the required input array. If the required array or structure already exists in the workspace, enter the name of the structure or matrix in this field.

## Output data type

The required data type for the data for the workspace variable that the From Workspace block loads. For non-bus types, you can use `Inherit: auto` to skip any data type verification. For more information, see “Specify Block Output Data Types”.

To load bus data, use a structure of MATLAB timeseries objects. For details, see “Import Structures of timeseries Objects for Buses”.

- `Inherit: auto` — Default.

- `double`
- `single`
- `int8`
- `uint8`
- `int16`
- `uint16`
- `int32`
- `uint32`
- `boolean`
- `fixdt(1,16,0)` — Data type is fixed-point (1,16,0).
- `fixdt(1,16,2^0,0)` — Data type is fixed-point (1,16,2<sup>0</sup>,0).
- Enum: `<class_name>` — Data type is enumerated, for example, Enum: `Basic Colors`.
- Bus: `<bus_object>` — Data type is a bus object.
- `<data type expression>` — The name of a data type object, for example `Simulink.NumericType`. Do not specify a bus object as the expression.

## **>> (Show data type assistant)**

Displays the **Data Type Assistant**, to help you to set the **Output data type** parameter.

### **Mode**

The category of data to specify. For more information, see “Specify Block Output Data Types”.

- `Inherit` — Inheritance rule for data types. Selecting `Inherit` enables a second menu/text box to the right. (Default)
- `Built in` — Built-in data types. Selecting `Built in` enables a second menu/text box to the right. Select one of the following choices:

- `double` — Default
- `single`
- `int8`
- `uint8`
- `int16`
- `uint16`
- `int32`
- `uint32`
- `boolean`
- `Fixed point` — Fixed-point data types
- `Enumerated` — Enumerated data types. Selecting `Enumerated` enables a second menu/text box to the right, where you can enter the class name.
- `Bus` — Bus object. Selecting `Bus` enables a **Bus object** parameter to the right, where you enter the name of a bus object that you want to use to define the structure of the bus. If you need to create or change a bus object, click **Edit** (to the right of the **Bus object** field) to open the Simulink Bus Editor. For details, see “Manage Bus Objects with the Bus Editor”.
- `Expression` — Expression that evaluates to a data type. Selecting `Expression` enables a second menu/text box to the right, where you enter the expression. Do not specify a bus object as the expression.

## Sample time

Sample rate of data from the workspace. For details, see “Specify Sample Time”.

## Interpolate data

Select this option to have the block linearly interpolate at time steps for which no corresponding workspace data exists. Otherwise, the current output equals the output at the most recent time for which data exists.

# From Workspace

---

If you select this option, the block linearly interpolates a missing data point from the two known data points between which it falls. For example, suppose the block reads the following time series from the workspace:

```
time:      1   2   3   4
signal:    253 254 ?  256
```

The block would output:

```
time:      1   2   3   4
signal:    253 254 255 256
```

If you clear the **Interpolate data** option, the block uses the most recent data value supplied from the workspace to provide any missing data values. For example, the result of the incomplete set of signal values shown above would be:

```
time:      1   2   3   4
signal:    253 254 254 256
```

**Integer data** — If the input data type is an integer type and an interpolated data point exceeds the data type's range, the block sets the missing data point to be the maximum value that the data type can represent. Similarly, if the interpolated or extrapolated value is less than the minimum value that the data type can represent, the block sets the missing data point to the minimum value that the data type can represent. For example, suppose that the data type is `uint8` and the value interpolated for a missing data point is 256.

```
time:      1   2   3   4
signal:    253 254 255 ?
```

In this case, the block sets the value of the missing point to 255, the largest value that can be represented by the `uint8` data type:

```
time:      1   2   3   4
signal:    253 254 255 255
```

**Boolean data** — If the input data is boolean, the block uses the value of the nearest workspace data point as the value of missing data point when determining missing data points that fall between the first and last known points. For example, suppose the workspace supplies values at time steps 1 and 4 but not at 2 and 3:

```
time:    1 2 3 4
signal:  1 ? ? 0
```

In this case, the block would use the value of data point 1 as the value of data point 2 and the value of data point 4 as the value of data point 3:

```
time:    1 2 3 4
signal:  1 1 0 0
```

The block uses the value of the last known data point as the value of time steps that occur after the last known data point.

Combine the settings of the **Interpolate data** and **Form output after final data value by** parameters to determine the block output after the last time step for which workspace data is available. For details, see the **Form output after final data value by** parameter.

## Enable zero-crossing detection

If you select the **Enable zero-crossing detection** parameter, then when the input array contains more than one entry for the same time step, Simulink detects a zero crossing at that time step. For example, suppose the input array has this data:

```
time:    0 1 2 2 3
signal:  2 3 4 5 6
```

At time 2, there is a zero crossing from input signal discontinuity. For more information, see “Zero-Crossing Detection”.

For bus signals, Simulink detects zero crossings across all leaf bus elements.

# From Workspace


---

## Form output after final data value by

Combine the settings of the **Form output after final data value by** and **Interpolate data** parameters to determine the block output after the last time step for which workspace data is available. The following table describes the block output based on the values of the two options:

Setting for Form Output After Final Data Value By	Setting for Interpolate Data	Block Output After Final Data
Extrapolation	On	Extrapolated from final data value
	Off	Error
Setting to zero	On	Zero
	Off	Zero
Holding final value	On	Final value from workspace
	Off	Final value from workspace
Cyclic repetition	On	Error
	Off	Repeated from workspace if the workspace data is in structure-without-time format. Error otherwise.

For example, if **Form output after final data value by** is **Extrapolation** and **Interpolate data** is selected, the block uses the last two known data points to extrapolate data points that occur after the last known point. Consider the following model.

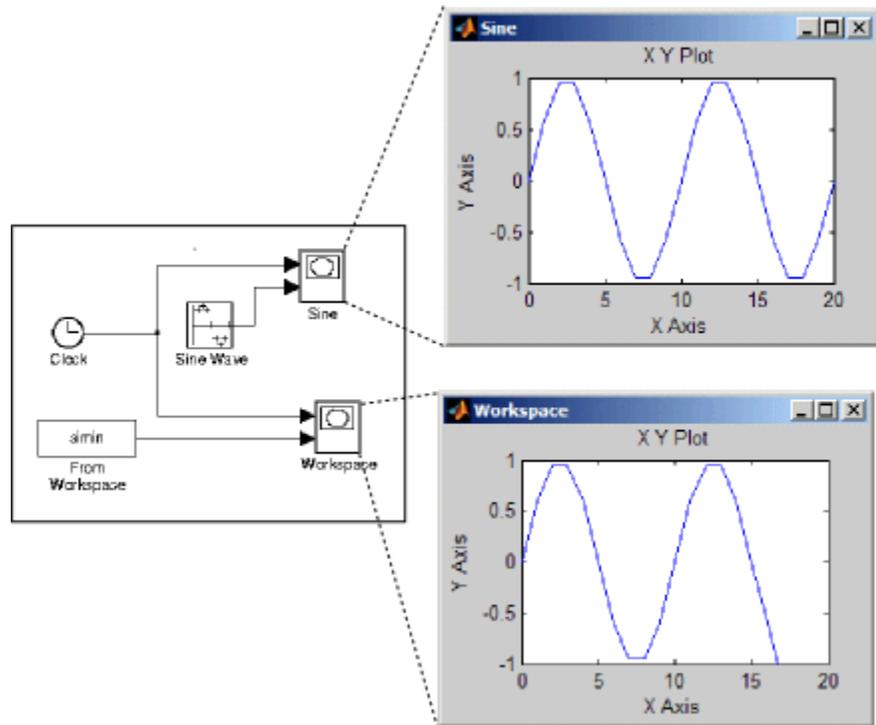

In this model, the From Workspace block reads data from the workspace consisting of the output of the Simulink Sine block sampled at one-second intervals. The workspace contains the first 16 samples of the output. The top and bottom X-Y plots display the output of the Sine Wave and From Workspace blocks, respectively, from 0 to 20 seconds. The straight line in the output of the From Workspace block reflects the block's linear extrapolation of missing data points at the end of the simulation.

## Examples

The From Workspace block allows you to read 1-D and 2-D signals into Simulink.

# From Workspace

---

## Reading 1-D Signals in Array Format


Create two signals  $x$  and  $y$  with a time vector  $t$ , and then import the values into Simulink with an array.

- 1 In the MATLAB Command Window, enter

```
t = [0:0.2:10]';  
x = sin(t);  
y = 10*sin(t);
```

The time vector must be a column vector.

- 2 Add a **From Workspace** block to your model.
- 3 Double-click the block to open the block parameters dialog. In the **Data** field, enter the array  $[t,x,y]$ ,

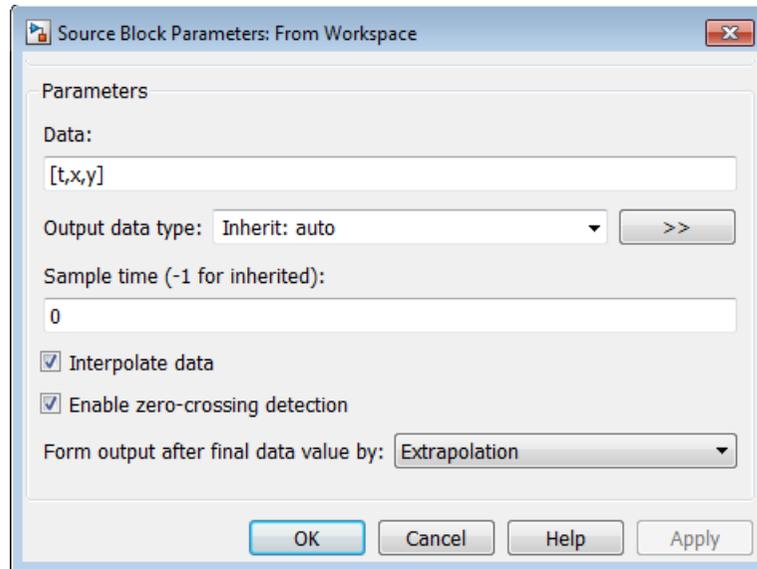

## Reading 1-D Signals in Structure Format

Create two signals `x` and `y` with a time vector `t`, and then import the values into Simulink with a structure.


- 1 In the MATLAB Command Window, enter

```
t = [0:0.2:10]';  
x = sin(t);  
y = 10*sin(t);  
wave.time = t;  
wave.signals.values = [x,y];  
wave.signals.dimensions =2;
```

The time vector must be a column vector. The `signals.dimensions` field for a 1-D signal is a scalar corresponding to the number of signals or number of columns in the `signals.values` field. Each column in the `signals.values` field corresponds to a signal

- 2 Add a **From Workspace** block to your model.
- 3 Double-click the block to open the block parameters dialog. In the **Data** field, enter the structure name.

# From Workspace

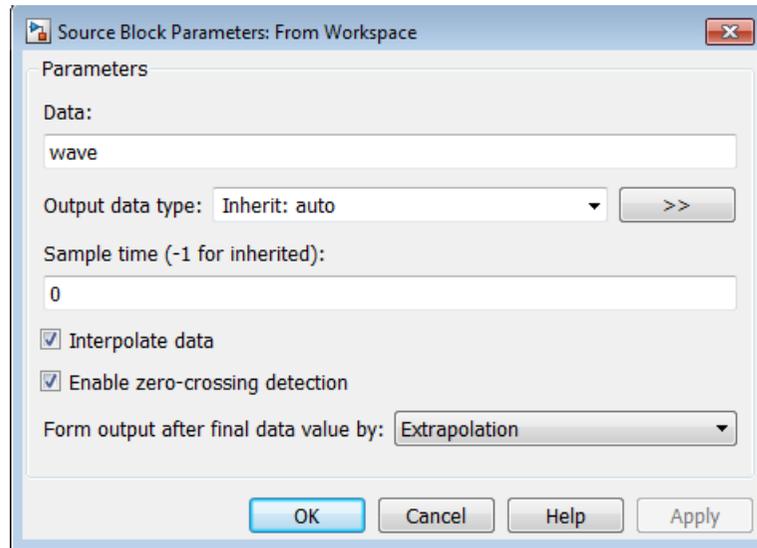


## Using Sample Time from Model

If you do not have a time vector, you can define the sample time in your model.

- 1 In the MATLAB Command Window, enter

```
wave.time = [];
```

- 2 Double-click the **From Workspace** block to open the block parameters dialog. In the **Sample time** field, enter a time interval. For example, enter 0.2. Clear the **Interpolate data** check box. **From the Form output after final data value by**, select either Setting to zero, Holding final value, or Cyclic repetition. Do not select Extrapolation.

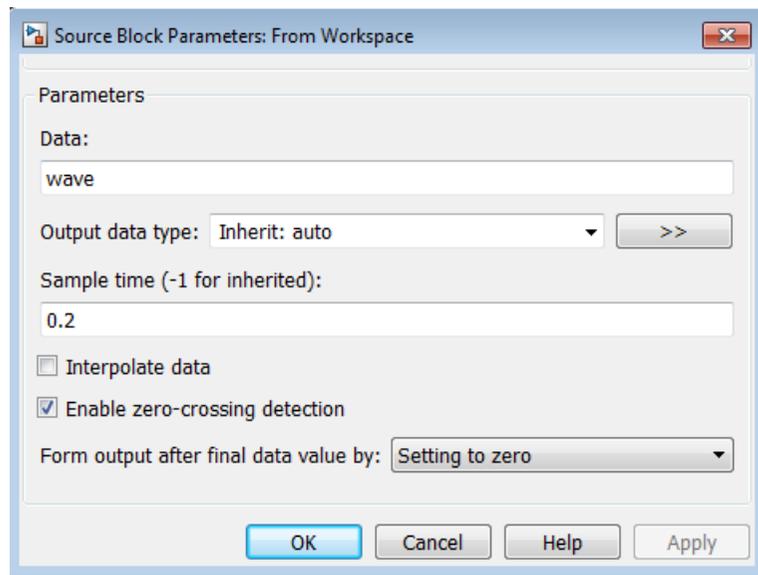

## Reading 2-D Signals in Structure Format

To load 2-D signals from the MATLAB workspace into Simulink, you must have the signals in a structure format. This example creates a 10-by-10 matrix (2-D signal) using the `magic` function, and then creates a 3-D matrix by adding a time vector.

**1** In the MATLAB Command Window, enter


```
t1 = [0:0.2:10]';  
m = magic(10);  
M = repmat(m,[1 1 length(t1)]);  
data.time=t1;  
data.signals.values = M;  
data.signals.dimensions=[10 10];
```

The time vector must be a column vector. The `signals.values` field is a 3-D matrix where the third dimension is the signal values at a specific time. The `signals.dimensions` field is a two element

# From Workspace

vector where the first element is the number of rows and the second element is the number of columns in the `signals.values` field.

- 2 Double-click the **From Workspace** block to open the block parameters dialog. In the **Data** field, enter the name of the structure.

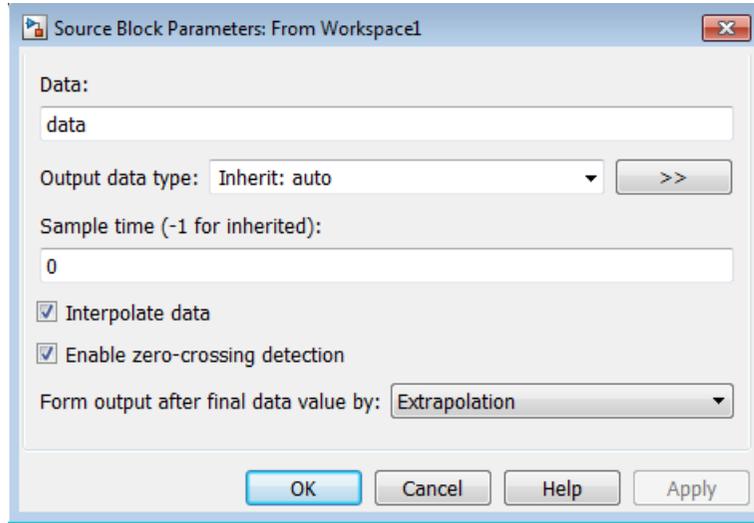

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	Yes, if enabled.

## See Also

“Import Data”, “Import Data for an Input Test Case”, From File, To File, To Workspace

# Function-Call Feedback Latch

## Purpose

Break feedback loop involving data signals between function-call blocks

## Library

Ports & Subsystems


## Description

Use the Function-Call Feedback Latch block to break a feedback loop of data signals between one or more function-call blocks. Specifically, break a loop formed in one of the following ways.



- **When function-call blocks connect to branches of the same function-call signal**


Place the Function-Call Feedback Latch block on the feedback signal between the branched blocks. As a result, the latch block delays the signal at the input of the destination function-call block, and the destination function-call block executes prior to the source function-call block of the latch block.

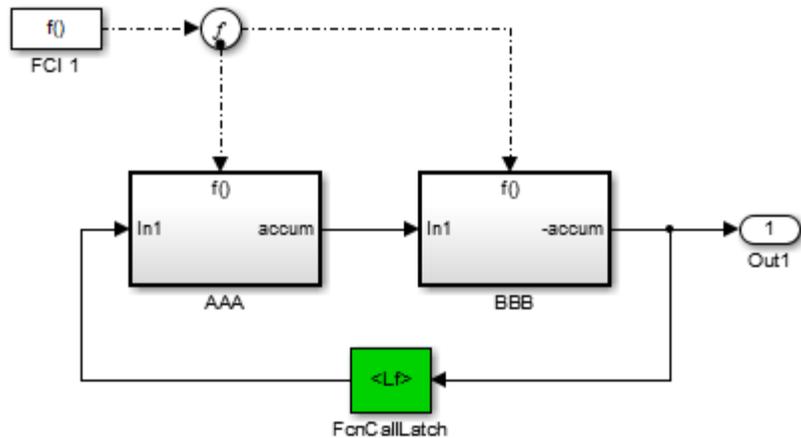

- **When the loop involves parent and child function-call blocks, where the child initiator is inside the parent**

# Function-Call Feedback Latch

Place the Function-Call Feedback Latch block on the feedback signal between the child and the parent. This arrangement prevents the signal value, read by the parent (FCSS1), from changing during execution of the child. In other words, the parent reads the value from the previous execution of the child (FCSS2).

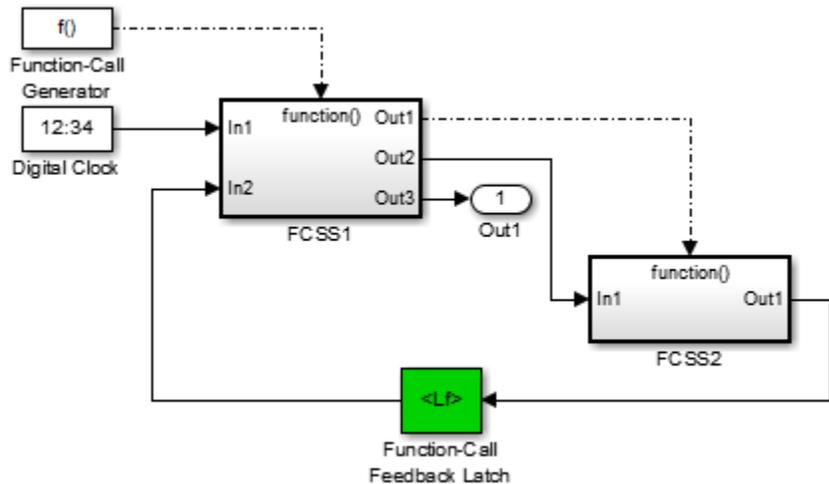

Using the latch block is equivalent to selecting the **Latch input for function-call feedback signals** check box on the Inport block in the destination function-call subsystem. However, an advantage of the latch block over the dialog parameter is that one can design the destination function-call subsystem (or model) in a modular fashion and then use it either in or out of the context of loops.

The Function-Call Feedback Latch block is better suited than the Unit Delay or Memory blocks in breaking function-call feedback loops for the following reasons:

- The latch block delays the feedback signal for exactly one execution of the source function-call block. This behavior is different from the Unit Delay or Memory blocks for cases where the function-call subsystem blocks may execute multiple times in a given simulation step.
- Unlike the Unit Delay or Memory blocks, the latch block may be used to break loops involving asynchronous function-call subsystems.
- The latch block can result in better performance, in terms of memory optimization, for generated code.

## Data Type Support

The Function-Call Feedback Latch block accepts real or complex signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

In addition, the latch block accepts bus signals provided that they do not contain any variable-sized signals.

This block does not accept:

- Function-call signals
- Action signals
- Variable-sized signals


For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Function-Call Feedback Latch

---

## Parameters and Dialog Box


The Function-Call Feedback Latch block dialog box appears as follows:

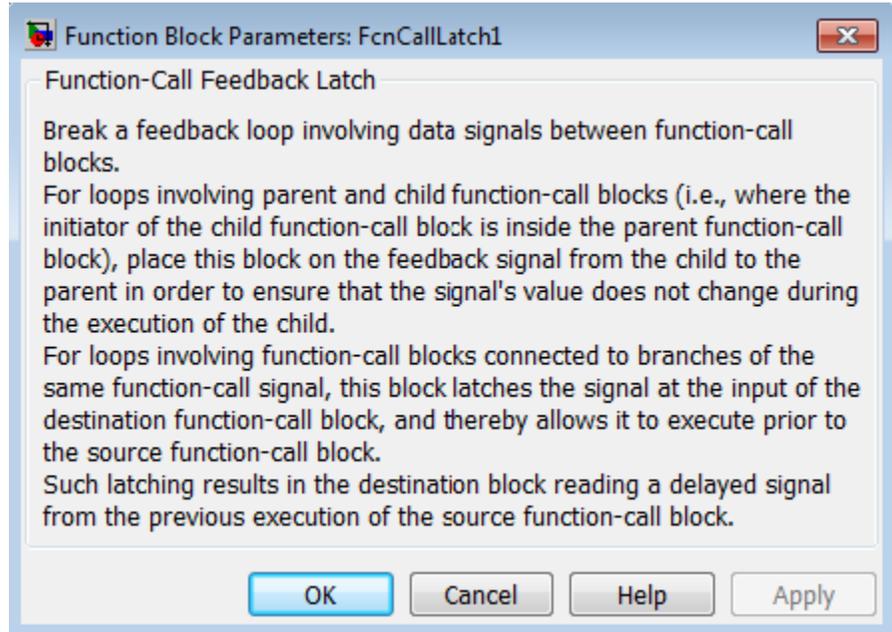

## Examples


In the following model, a single function-call subsystem output serves as its own input.

# Function-Call Feedback Latch

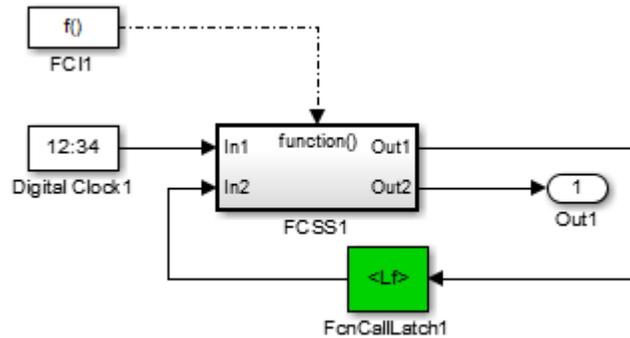

A more complex case occurs when a merged signal serves as the input to a function-call subsystem. Latching is necessary if one of the signals entering the Merge block forms a feedback loop with the function-call subsystem. In this example, one of the output signals from FCSS2 combines with the output of an Enabled Subsystem block and then feeds back into an inport of FCSS2.

# Function-Call Feedback Latch

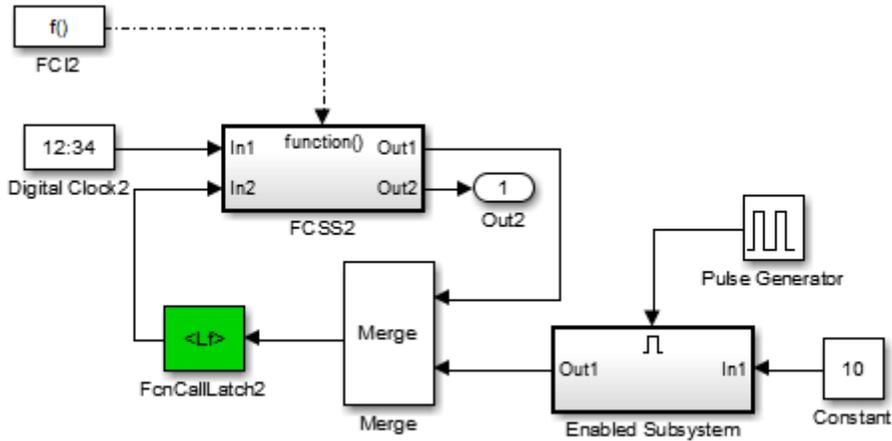

## Characteristics

Direct Feedthrough	No
Sample Time	Inherited from the driving block
Scalar Expansion	Yes
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Function-Call Subsystem block

**Purpose** Execute function-call subsystem specified number of times at specified rate

**Library** Ports & Subsystems

## Description



The Function-Call Generator block executes a function-call subsystem (for example, a Stateflow chart acting as a function-call subsystem) at the rate that you specify with the **Sample time** parameter. To iteratively execute each function-call block connected to this block multiple times at each time step, use the 'Number of Iterations' parameter.


To execute multiple function-call subsystems or models in a prescribed order, use the Function-Call Generator block in conjunction with a Function-Call Split block. For an example, see the Function-Call Split block documentation.

## Data Type Support

The Function-Call Generator block outputs a signal of type `fcn_call`.

# Function-Call Generator

---

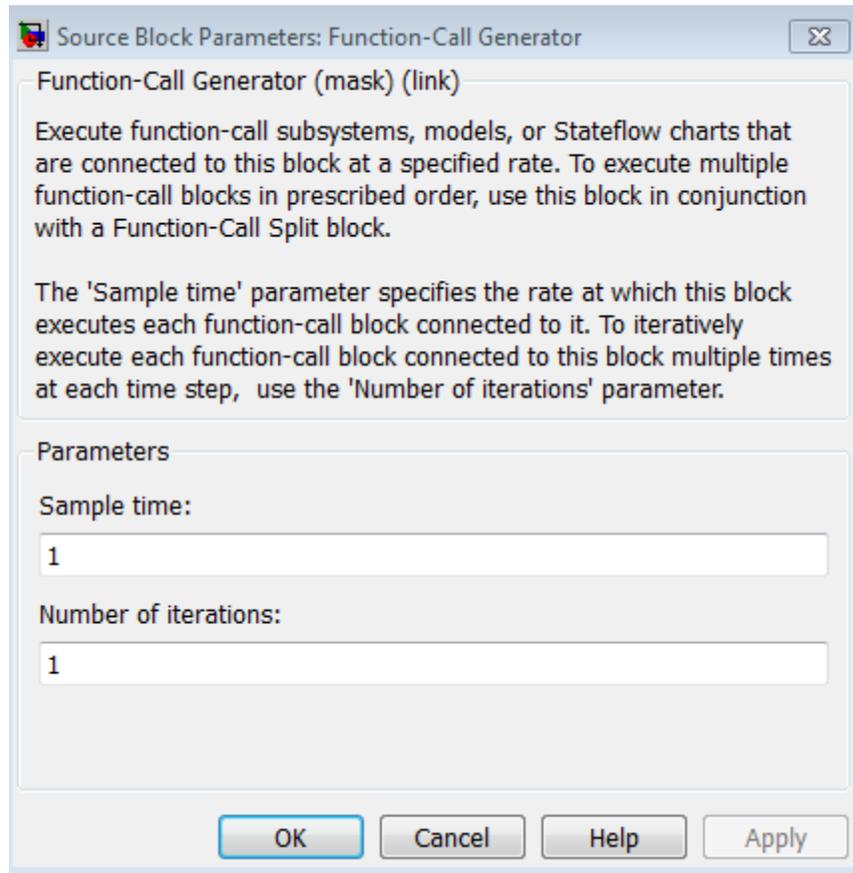

## Parameters and Dialog Box

### Sample time

Specify the time interval between samples. See “Specify Sample Time” in the online documentation for more information.

### Number of iterations

Number of times to execute the block per time step. The value of this parameter can be a vector where each element of the vector specifies a number of times to execute a function-call subsystem. The total number of times that a function-call subsystem executes

per time step equals the sum of the values of the elements of the generator signal entering its control port.

Suppose that you specify the number of iterations to be [2 2] and connect the output of this block to the control port of a function-call subsystem. In this case, the function-call subsystem executes four times at each time step.

## Characteristics

Direct Feedthrough	No
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	Yes
Zero-Crossing Detection	No

# Function-Call Split

---

**Purpose** Provide junction for splitting function-call signal

**Library** Ports & Subsystems

**Description** The Function-Call Split block allows a function-call signal to be branched and connected to several function-call subsystems and models.



Several Function-Call Split blocks may be cascaded one after another to create multiple branches for a function-call signal. An advantage of the Function-Call Split block is that in some cases, using this block eliminates the need for the initiator block to create multiple function-call signals for invoking a set of function-call subsystems or models.

Function-call subsystems or models connected to the output port of the Function-Call Split block marked with a dot execute before the subsystems or models connected to the other output port. If any data dependencies between these subsystems (or between models) do not support the specified execution order, then an error occurs. This implies that an error will always occur when you create a data-dependency loop involving function-call subsystems or models connected to branches of the same function-call signal. To eliminate this error, consider turning on the **Latch input for feedback signals of function-call subsystem outputs** on one or more Inport blocks of the function-call subsystems (or models) involved in the loop. Setting this option to on has the effect of delaying the corresponding input signal, thereby eliminating the data-dependency loop.

In order for a model to contain Function-Call Split blocks, you must set the following diagnostic to error: **Model Configuration Parameters > Diagnostics > Connectivity > Invalid function-call connection.**

If you turn on the model option **Format > Block Displays > Sorted Order**, then the execution order of function-call subsystems connected to branches of a given function-call signal displays on the blocks. Each subsystem has an execution order of the form S:B#{C}. Here, # is a number that ranges from 0 to one less than the total number of subsystems (or models) connected to branches of a given signal. The subsystems execute in ascending order based on this number.

The Function-Call Split block supports signal label propagation.

## Limitations

The Function-Call Split block has these limitations:

Limitations
All function-call subsystems and models connected to a given function-call signal must reside within the same nonvirtual layer of the model hierarchy.
Branched function-call subsystems (or models) and their children cannot be connected directly back to the initiator.
Function-call subsystems and models connected to branches of a function-call signal cannot have multiple (muxed) initiators.
A Function-call split block cannot have its input from a signal with multiple function-call elements.

## Data Type Support


The Function-Call Split block accepts periodic and asynchronous function-call signals only.

# Function-Call Split

---


## Parameters and Dialog Box

The Function-Call Split block dialog box appears as follows:

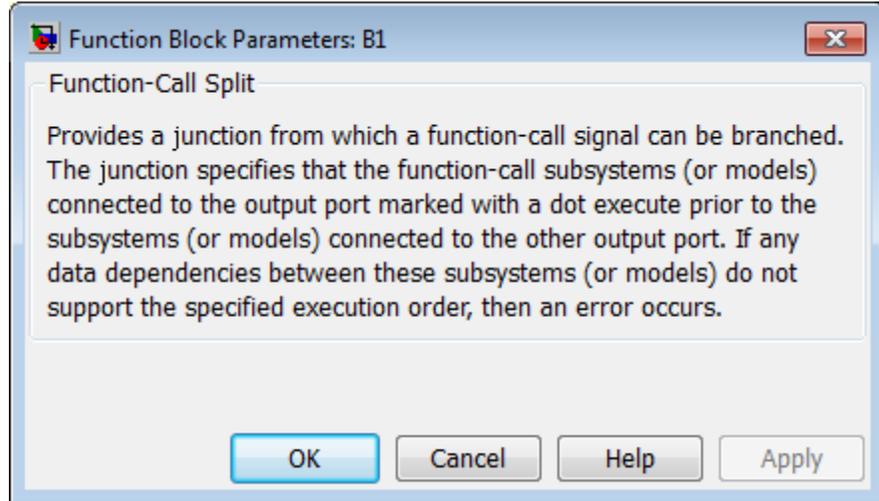

## Examples

The following model shows how to apply the **Latch input for feedback signals of function-call subsystem outputs** parameter to work around a data-dependency error caused by using a Function-Call Split block. By turning this parameter on in the f1 subsystem Inport block, the Function-Call Split block ignores the data dependency of signal b and thus breaks the loop of data dependencies between subsystems f1 and g1. The model thus achieves the desired behavior of consistently calling f1 to execute before g1. For a given execution step, subsystem f1 uses the g1 output computed at the previous execution step.

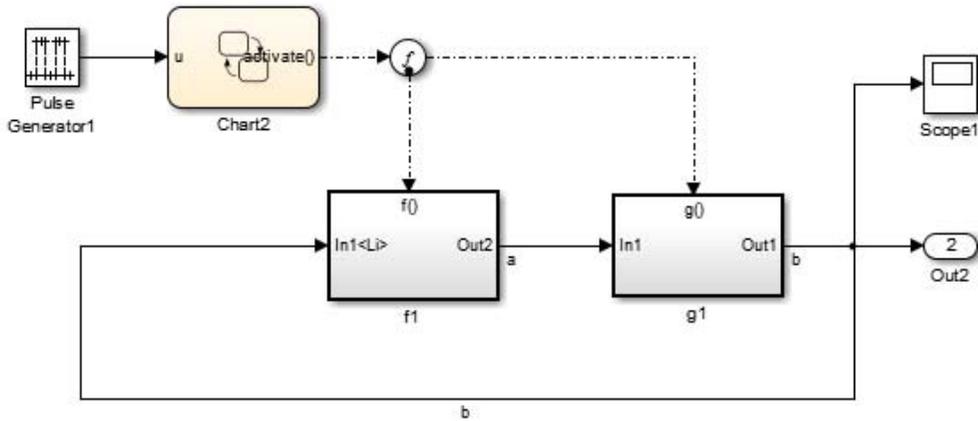

## Characteristics

Sample Time	Inherited from the block driving the function-call split
Scalar Expansion	No
Dimensionalized	No
Multidimensionalized	No
Virtual	Yes

## See Also

Function-Call Subsystem | Function-Call Generator


# Function-Call Subsystem

---

**Purpose** Represent subsystem that can be invoked as function by another block

**Library** Ports & Subsystems

## Description

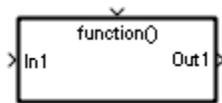

The Function-Call Subsystem block is a Subsystem block that is preconfigured to serve as a starting point for creating a function-call subsystem. For more information, see “Create a Function-Call Subsystem” in the “Creating a Model” chapter of the Simulink documentation.

**Purpose** Multiply input by constant

**Library** Math Operations

**Description** The Gain block multiplies the input by a constant value (gain). The input and the gain can each be a scalar, vector, or matrix.

You specify the value of the gain in the **Gain** parameter. The **Multiplication** parameter lets you specify element-wise or matrix multiplication. For matrix multiplication, this parameter also lets you indicate the order of the multiplicands.

The gain is converted from doubles to the data specified in the block mask offline using round-to-nearest and saturation. The input and gain are then multiplied, and the result is converted to the output data type using the specified rounding and overflow modes.


**Data Type Support** The Gain block accepts a real or complex scalar, vector, or matrix of any numeric data type that Simulink supports. The Gain block supports fixed-point data types. If the input of the Gain block is real and the gain is complex, the output is complex.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.


# Gain

## Parameters and Dialog Box

The **Main** pane of the Gain block dialog box appears as follows:

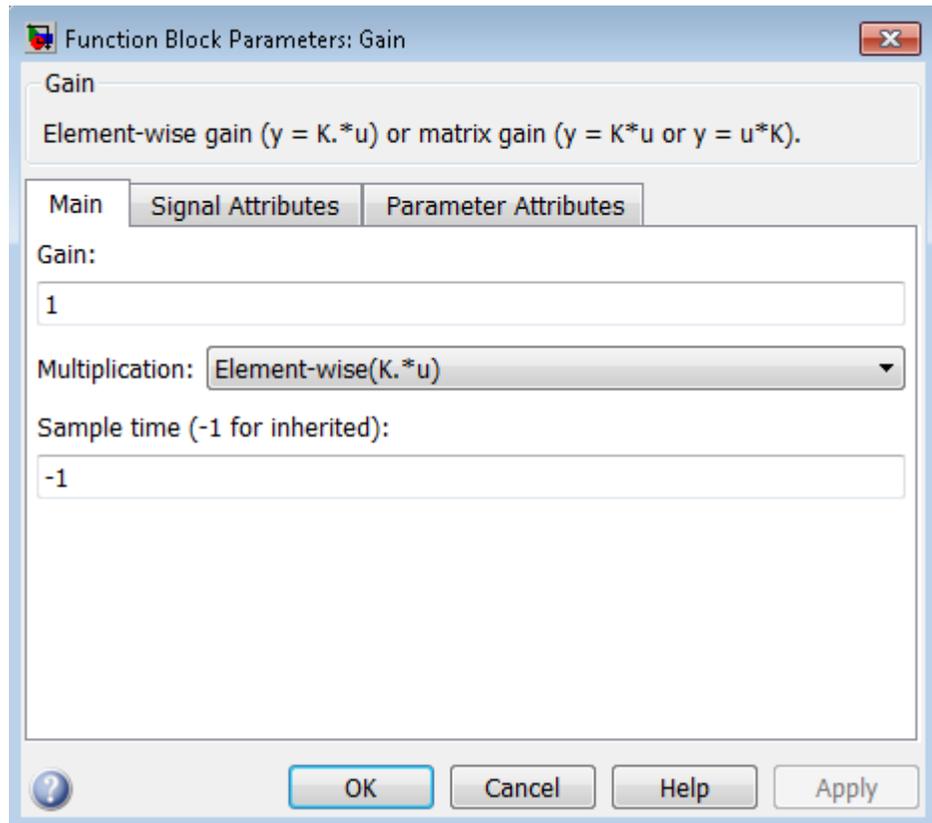


The **Signal Attributes** pane of the Gain block dialog box appears as follows:

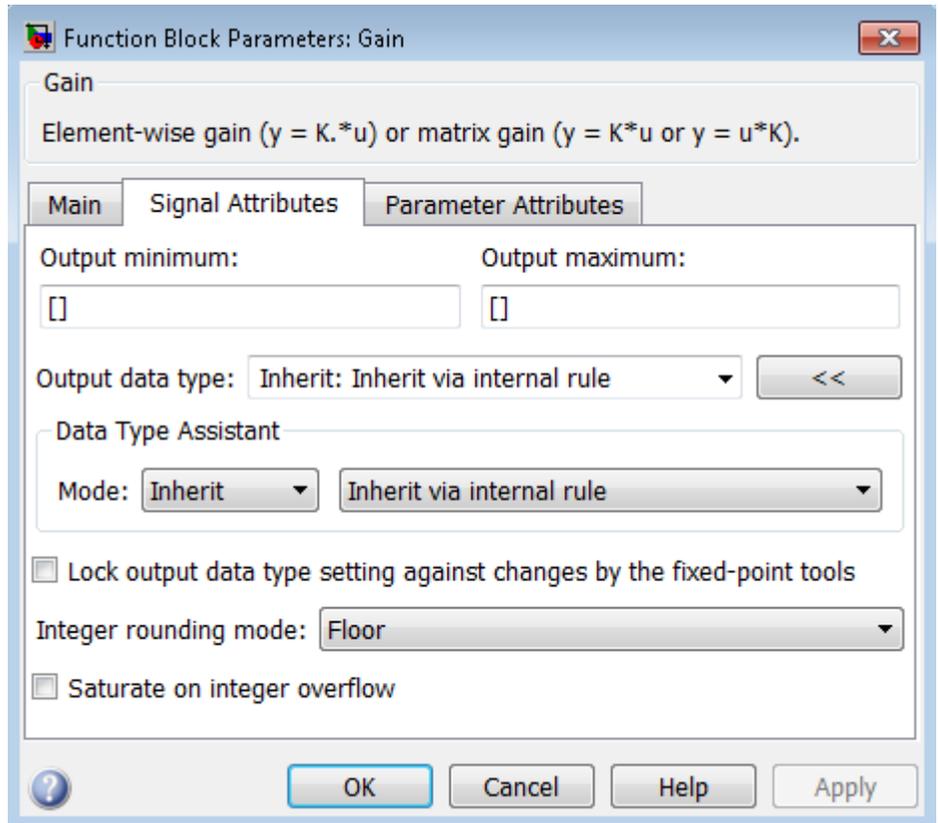

# Gain

The **Parameter Attributes** pane of the Gain block dialog box appears as follows:

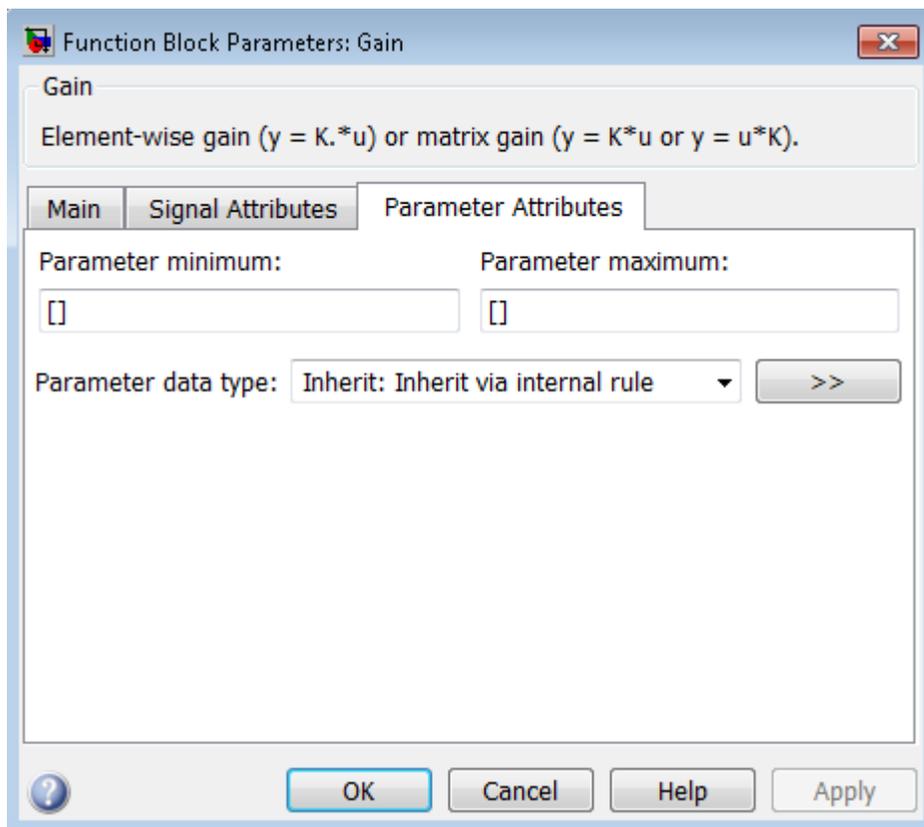

## Gain

Specify the value by which to multiply the input.

### Settings

**Default:** 1

**Minimum:** value of **Parameter minimum** parameter

**Maximum:** value of **Parameter maximum** parameter

The gain can be a scalar, vector, or matrix.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Multiplication

Specify the multiplication mode.

### Settings

**Default:** Element-wise( $K.*u$ )

Element-wise( $K.*u$ )

Each element of the input is multiplied by each element of the gain. The block performs expansions, if necessary, so that the input and gain have the same dimensions.

Matrix( $K*u$ )

The input and gain are matrix multiplied with the input as the second operand.

Matrix( $u*K$ )

The input and gain are matrix multiplied with the input as the first operand.

Matrix( $K*u$ ) ( $u$  vector)

The input and gain are matrix multiplied with the input as the second operand. This mode is identical to Matrix( $K*u$ ), except for how dimensions are determined.

Suppose that  $K$  is an  $m$ -by- $n$  matrix. Matrix( $K*u$ ) ( $u$  vector) sets the input to a vector of length  $n$  and the output to a vector of length  $m$ . In contrast, Matrix( $K*u$ ) uses propagation to determine dimensions for the input and output. For an  $m$ -by- $n$  gain matrix, the input can propagate to an  $n$ -by- $q$  matrix, and the output becomes an  $m$ -by- $q$  matrix.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**Sample time (-1 for inherited)**

Specify the time interval between samples.

**Settings**

**Default:** -1

To inherit the sample time, set this parameter to -1.

See “Specify Sample Time” in the online documentation for more information.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Output minimum

Lower value of the output range that Simulink checks.

### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the minimum to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output minimum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

### Command-Line Information

**Parameter:** OutMin

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

---

### Output maximum

Upper value of the output range that Simulink checks.

#### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the maximum value to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output maximum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

### Command-Line Information

**Parameter:** OutMax

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

## Output data type

Specify the output data type.

### Settings

**Default:** `Inherit: Inherit via internal rule`

`Inherit: Inherit via internal rule`

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. For example, if the block multiplies an input of type `int8` by a gain of `int16` and ASIC/FPGA is specified as the targeted hardware type, the output data type is `sfixed24`. If Unspecified (assume 32-bit Generic), i.e., a generic 32-bit microprocessor, is specified as the target hardware, the output data type is `int32`. If none of the word lengths provided by the target microprocessor can accommodate the output range, Simulink software displays an error in the Diagnostic Viewer.

It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use the simple choice of `Inherit: Same as input`.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.
- To specify your own inheritance rule, use `Inherit: Inherit via back propagation` and then use a Data Type Propagation block. Examples of how to use this block are available in the Signal Attributes library Data Type Propagation Examples block.

Inherit: Inherit via back propagation  
Use data type of the driving block.

Inherit: Same as input  
Use data type of input signal.

double  
Output data type is double.

single  
Output data type is single.

int8  
Output data type is int8.

uint8  
Output data type is uint8.

int16  
Output data type is int16.

uint16  
Output data type is uint16.

int32  
Output data type is int32.

uint32  
Output data type is uint32.

fixdt(1,16,0)  
Output data type is fixed point fixdt(1,16,0).

fixdt(1,16,2<sup>0</sup>,0)  
Output data type is fixed point fixdt(1,16,2<sup>0</sup>,0).

<data type expression>  
Use a data type object, for example, Simulink.NumericType.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Gain

---

**See Also**

See “Specify Block Output Data Types” for more information.

**Mode**

Select the category of data to specify.

**Settings**

**Default:** Inherit

**Inherit**

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit via internal rule (default)
- Inherit via back propagation
- Same as input

**Built in**

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

**Fixed point**

Fixed-point data types.

**Expression**

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

**Dependency**

Clicking the **Show data type assistant** button enables this parameter.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**See Also**

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

#### Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

#### Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is `Built in` or `Fixed point`.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

**Word length**

Specify the bit size of the word that holds the quantized integer.

**Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

**Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

**See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Binary point

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### See Also

See “Specifying a Fixed-Point Data Type”.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Slope**

Specify slope for the fixed-point data type.

### **Settings**

**Default:**  $2^0$

Specify any positive real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Bias**

Specify bias for the fixed-point data type.

### **Settings**

**Default:** 0

Specify any real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

### Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

#### Settings

**Default:** Off



On

Locks the output data type setting for this block.



Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

#### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

#### See Also

For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations.

### Settings

**Default:** Floor

#### Ceiling

Rounds both positive and negative numbers toward positive infinity. Equivalent to the MATLAB `ceil` function.

#### Convergent

Rounds number to the nearest representable value. If a tie occurs, rounds to the nearest even integer. Equivalent to the Fixed-Point Designer `convergent` function.

#### Floor

Rounds both positive and negative numbers toward negative infinity. Equivalent to the MATLAB `floor` function.

#### Nearest

Rounds number to the nearest representable value. If a tie occurs, rounds toward positive infinity. Equivalent to the Fixed-Point Designer `nearest` function.

#### Round

Rounds number to the nearest representable value. If a tie occurs, rounds positive numbers toward positive infinity and rounds negative numbers toward negative infinity. Equivalent to the Fixed-Point Designer `round` function.

#### Simplest

Automatically chooses between round toward floor and round toward zero to generate rounding code that is as efficient as possible.

#### Zero

Rounds number toward zero. Equivalent to the MATLAB `fix` function.

## **Command-Line Information**

**Parameter:** RndMeth

**Type:** string

**Value:** 'Ceiling' | 'Convergent' | 'Floor' | 'Nearest' |  
'Round' | 'Simplest' | 'Zero'

**Default:** 'Floor'

## **See Also**

For more information, see “Rounding” in the Fixed-Point Designer documentation.

## Saturate on integer overflow

Specify whether overflows saturate.

### Settings

**Default:** Off



On

Overflows saturate to either the minimum or maximum value that the data type can represent.

For example, an overflow associated with a signed 8-bit integer can saturate to -128 or 127.



Off

Overflows wrap to the appropriate value that is representable by the data type.

For example, the number 130 does not fit in a signed 8-bit integer and wraps to -126.

### Tips

- Consider selecting this check box when your model has possible overflow and you want explicit saturation protection in the generated code.
- Consider clearing this check box when you want to optimize efficiency of your generated code.

Clearing this check box also helps you avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.

- When you select this check box, saturation applies to every internal operation on the block, not just the output or result.
- In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## **Command-Line Information**

**Parameter:** SaturateOnIntegerOverflow

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## **Parameter minimum**

Specify the minimum value of the gain.

## **Settings**

**Default:** [ ]

The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Parameter maximum

Specify the maximum value of the gain.

### Settings

**Default:** [ ]

The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Automatic scaling of fixed-point data types

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Gain

---

## Parameter data type

Specify the data type of the **Gain** parameter.

### Settings

**Default:** Inherit: Inherit via internal rule

Inherit: Inherit via internal rule

Use an internal rule to inherit the data type.

Inherit: Same as input

Use data type of sole input signal.

Inherit: Inherit from 'Gain'

Use data type of the **Gain** value. For example:

If you set Gain to...	The parameter data type inherits...
2	double
single(2)	single
int8(2)	int8

double

Data type is double.

single

Data type is single.

int8

Data type is int8.

uint8

Data type is uint8.

int16

Data type is int16.

uint16

Data type is uint16.

int32

Data type is int32.

`uint32`

Data type is `uint32`.

`fixdt(1,16)`

Data type is `fixdt(1,16)`.

`fixdt(1,16,0)`

Data type is `fixdt(1,16,0)`.

`fixdt(1,16,2^0,0)`

Data type is `fixdt(1,16,2^0,0)`.

`<data type expression>`

Use a data type object, for example, `Simulink.NumericType`.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Inherit

### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit via internal rule (default)
- Same as input
- Inherit from 'Gain'

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

### Fixed point

Fixed-point data types.

### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

**Dependency**

Clicking the **Show data type assistant** button enables this parameter.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**See Also**

See “Specify Data Types Using Data Type Assistant” in the Simulink documentation.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

## Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

## Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

## See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## Examples

The following Simulink examples show how to use the Gain block:

- `sldemo_bounce`

- sldemo\_tonegen\_fixpt
- sldemo\_hardstop
- sldemo\_enginewc

**Characteristics**

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of input and <b>Gain</b> parameter for <b>Element-wise (K.*u)</b> multiplication
Dimensionalized	Yes
Multidimensionalized	Yes, only if the <b>Multiplication</b> parameter specifies <b>Element-wise (K.*u)</b>
Zero-Crossing Detection	No

**Purpose** Pass block input to From blocks

**Library** Signal Routing

## Description



The Goto block passes its input to its corresponding From blocks. The input can be a real- or complex-valued signal or vector of any data type. From and Goto blocks allow you to pass a signal from one block to another without actually connecting them.

A Goto block can pass its input signal to more than one From block, although a From block can receive a signal from only one Goto block. The input to that Goto block is passed to the From blocks associated with it as though the blocks were physically connected. Goto blocks and From blocks are matched by the use of Goto tags.

The **Tag Visibility** parameter determines whether the location of From blocks that access the signal is limited:

- **local**, the default, means that From and Goto blocks using the same tag must be in the same subsystem. A local tag name is enclosed in brackets (`[]`).
- **scoped** means that From and Goto blocks using the same tag must be in the same subsystem or at any level in the model hierarchy below the Goto Tag Visibility block that does not entail crossing a nonvirtual subsystem boundary, i.e., the boundary of an atomic, conditionally executed, or function-call subsystem or a model reference. A scoped tag name is enclosed in braces (`{}`).
- **global** means that From and Goto blocks using the same tag can be anywhere in the model except in locations that span nonvirtual subsystem boundaries.

The rule that From-Goto block connections cannot cross nonvirtual subsystem boundaries has the following exception. A Goto block connected to a state port in one conditionally executed subsystem is visible to a From block inside another conditionally executed subsystem. For more information about conditionally executed subsystems, see “Conditional Execution Behavior”.

---

**Note** A scoped Goto block in a masked system is visible only in that subsystem and in the nonvirtual subsystems it contains. Simulink generates an error if you run or update a diagram that has a Goto Tag Visibility block at a higher level in the block diagram than the corresponding scoped Goto block in the masked subsystem.

---

Use local tags when the Goto and From blocks using the same tag name reside in the same subsystem. You must use global or scoped tags when the Goto and From blocks using the same tag name reside in different subsystems. When you define a tag as global, all uses of that tag access the same signal. A tag defined as scoped can be used in more than one place in the model.

The Goto block supports signal label propagation.

## Data Type Support

The Goto block accepts real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Goto



## Parameters and Dialog Box

### Goto Tag

The Goto block identifier. This parameter identifies the Goto block whose scope is defined in this block.

**Tag Visibility**

The scope of the Goto block tag: `local`, `scoped`, or `global`. The default is `local`.

**Corresponding From blocks**

List of the From blocks connected to this Goto block.

Double-clicking any entry in this list displays and highlights the corresponding From block.

**Icon Display**

Specifies the text to display on the block's icon. The options are the block's tag, the name of the signal that the block represents, or both the tag and the signal name.

**Examples**

The following models show how to use the Goto block:

- `sldemo_auto_climatecontrol`
- `sldemo_hardstop`

**Characteristics**

Sample Time	Inherited from driving block
Dimensionalized	Yes
Multidimensionalized	Yes
Virtual	Yes For more information, see "Virtual Blocks" in the Simulink documentation.
Zero-Crossing Detection	No

**See Also**

From

# Goto Tag Visibility

---

**Purpose** Define scope of Goto block tag


**Library** Signal Routing

**Description** The Goto Tag Visibility block defines the accessibility of Goto block tags that have **scoped** visibility. The tag specified as the **Goto tag** parameter is accessible by From blocks in the same subsystem that contains the Goto Tag Visibility block and in subsystems below it in the model hierarchy.



A Goto Tag Visibility block is required for Goto blocks whose **Tag Visibility** parameter value is **scoped**. No Goto Tag Visibility block is needed if the tag visibility is either **local** or **global**. The block shows the tag name enclosed in braces (`{}`).

**Data Type Support** Not applicable.

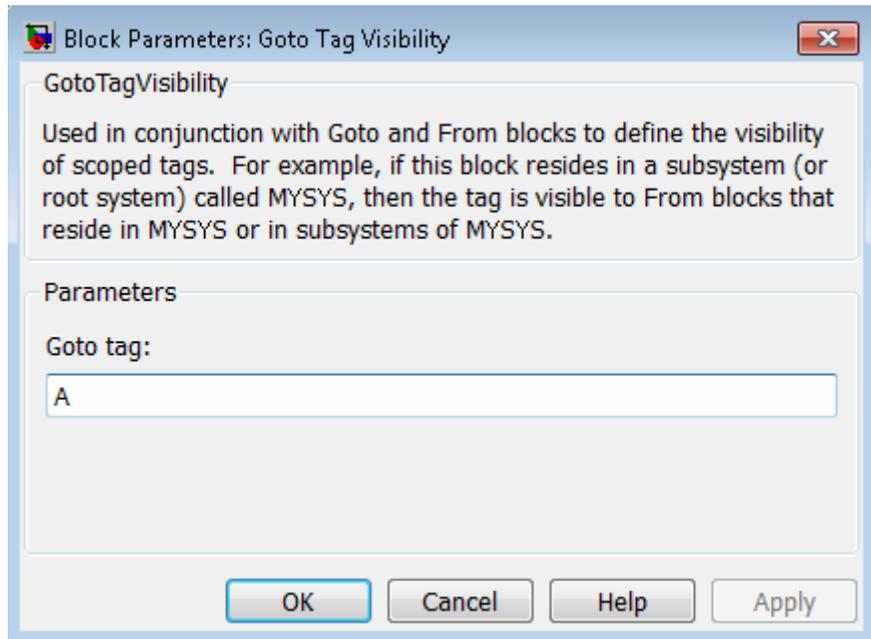

## Parameters and Dialog Box

### Goto tag

The Goto block tag whose visibility is defined by the location of this block.

## Characteristics

Sample Time	N/A
Dimensionalized	N/A
Virtual	Yes  For more information, see “Virtual Blocks” in the Simulink documentation.

# Ground

**Purpose** Ground unconnected input port


**Library** Sources

## Description



The Ground block connects to blocks whose input ports do not connect to other blocks. If you run a simulation with blocks having unconnected input ports, Simulink issues warnings. Using a Ground block to ground those unconnected blocks can prevent these warnings.

The Ground block outputs a signal of the same data type as the port to which it connects. For example, consider the following model:

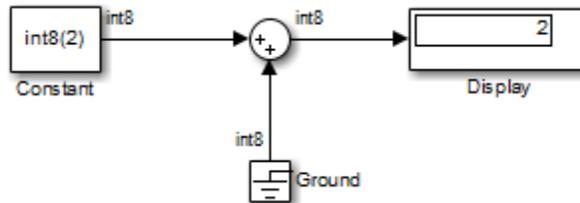

In this example, the output of the Constant block determines the data type (`int8`) of the port to which the Ground block is connected. That port determines the output data type of the Ground block.

The Ground block outputs a signal with zero value. When the output data type cannot represent zero exactly, the Ground block outputs a nonzero value that is the closest possible value to zero. This behavior applies only to fixed-point data types with nonzero bias. The following expressions are examples of fixed-point data types that cannot represent zero:

- `fixdt(0, 8, 1, 1)` — an unsigned 8-bit type with slope of 1 and bias of 1
- `fixdt(1, 8, 6, 3)` — a signed 8-bit type with slope of 6 and bias of 3


If the output is an enumerated data type, the Ground block outputs the default value of the enumeration. This behavior applies whether or not:

- The enumeration can represent zero.
- The default value of the enumeration is zero.

If the enumerated type does not have a default value, the Ground block outputs the first enumeration value in the type definition.

## Data Type Support

The Ground block supports all data types that Simulink supports, including fixed-point and enumerated data types. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

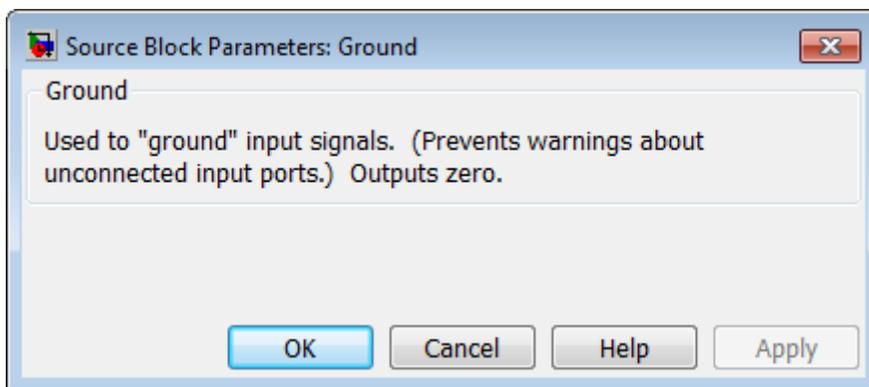

## Parameters and Dialog Box

## Examples

The following Simulink examples show how to use the Ground block:

- sldemo\_doublebounce

## Characteristics

Sample Time	Constant (inf)
Dimensionalized	Yes

# Ground


---

Multidimensionalized	Yes
Virtual	Yes For more information, see “Virtual Blocks” in the Simulink documentation.

**Purpose** Free-running or count-limited hardware counter

**Library** HDL Coder / HDL Operations

## Description

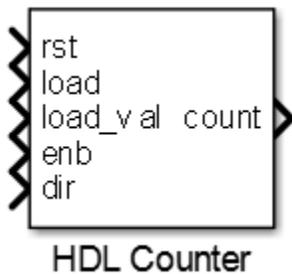

The HDL Counter block models a free-running or count-limited hardware counter that supports signed and unsigned integer and fixed-point data types.

The counter emits its value for the current sample time.

### Control Ports

By default, the counter does not have input ports. Optionally, you can add control ports that enable, disable, load, or reset the counter, or set the direction of the counter.

The following table shows the priority of the control signals, and shows how the counter value is set in relation to the control signals.

Local reset, rst	Load trigger, load	Count enable, enb	Count direction, dir	Next Counter Value
1	–	–	–	initial value
0	1	–	–	load_val value

# HDL Counter

---

Local reset, rst	Load trigger, load	Count enable, enb	Count direction, dir	Next Counter Value
0	0	0	–	current value
0	0	1	1	current value + step value
0	0	1	0	current value - step value

## Count direction

The **Step value** parameter and optional count direction port, **dir**, interact to determine the actual count direction.

dir Signal Value	Step Value Sign	Actual Count Direction
1	+ (positive)	Up
1	- (negative)	Down
0	+ (positive)	Down
0	- (negative)	Up

## Dialog Box and Parameters

Source Block Parameters: HDL Counter

HDL Counter (mask) (link)  
Counter for HDL code generation.

Parameters

Counter type: Free running

Initial value:  
0

Step value:  
1

Count to value:  
100

Count from: Initial value

Count from value:  
0

Local reset port

Load ports

Count enable port

Count direction port

Counter output data is: Unsigned

Word length:  
8

Fraction length:  
0

Sample time:  
1

OK Cancel Help Apply

# HDL Counter

---

## Counter type

Counter behavior.

- **Free running:** The counter continues to increment or decrement by the **Step value** until reset.
- **Count limited:** The counter increments or decrements by the **Step value** until it is exactly equal to the **Count to value**.

Default: Free running

## Initial value

Counter value after reset.

Default: 0

## Step value

Value added to counter at each sample time.

Default: 1

## Count to value

When the count is exactly equal to **Count to value**, the count restarts at the **Initial value**. This option is enabled in Count limited mode.

Default: 100

## Count from

Specifies the parameter that sets the start value after rollover. When set to **Specify**, the **Count from value** parameter is the start value after rollover.

Default: Initial value

## Count from value

Counter value after rollover when **Count from** is set to **Specify**.

Default: 0

**Local reset port**

Creates a local reset port, `rst`.

Default: cleared

**Load ports**

Creates a load data port, `load_val`, and load trigger port, `load`.

Default: cleared

**Count enable port**

Creates a count enable port, `enb`.

Default: cleared

**Count direction port**

Creates a count direction port, `dir`.

Default: cleared

**Counter output data is**

Output data type signedness.

Default: Unsigned

**Word length**

Bit width, including sign bit, for an integer counter; word length for a fixed-point data type counter.

Default: 8

Minimum: 1 if **Output data type** is Unsigned; 2 if **Output data type** is Signed.

Maximum: 125

**Fraction length**

Fixed-point data type fraction length.

Default: 0

## Sample time

Sample time.

This parameter is disabled, and the block inherits its sample time from the input ports, when one or more of the following parameters are enabled:

- **Local reset port**
- **Load ports**
- **Count enable port**
- **Count direction port**

Default: 1

## Ports

The block has the following ports:

**rst**

Resets the counter value. Active-high.

This port is available when you select the **Local reset port** parameter.

Data type: Boolean

**load**

Sets the counter to the load value, `load_val`. Active-high.

This port is available when you select the **Load ports** parameter.

Data type: Boolean

**load\_val**

Data value to load.

This port is available when you select **Load ports**.

Data type: Same as count.

enb

Enables counter operation. Active-high.

This port is available when you select **Count enable port**.

Data type: Boolean

dir

Count direction. This port interacts with **Step value** to determine count direction.

- **1: Step value** is added to the current counter value to compute the next value.
- **0: Step value** is subtracted from the current counter value to compute the next value.

This port is available when you select **Count direction port**.

Data type: Boolean

count

Counter value.

Data type: Determined automatically based on **Counter output data is**, **Word length**, and **Fraction length**.


# HDL FIFO

---

**Purpose** Stores a sequence of input samples in a first in, first out (FIFO) register


**Library** HDL Coder / HDL Operations

## Description

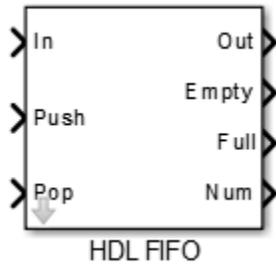

The HDL FIFO block models stores a sequence of input samples in a first in, first out (FIFO) register.

## Dialog Box and Parameters

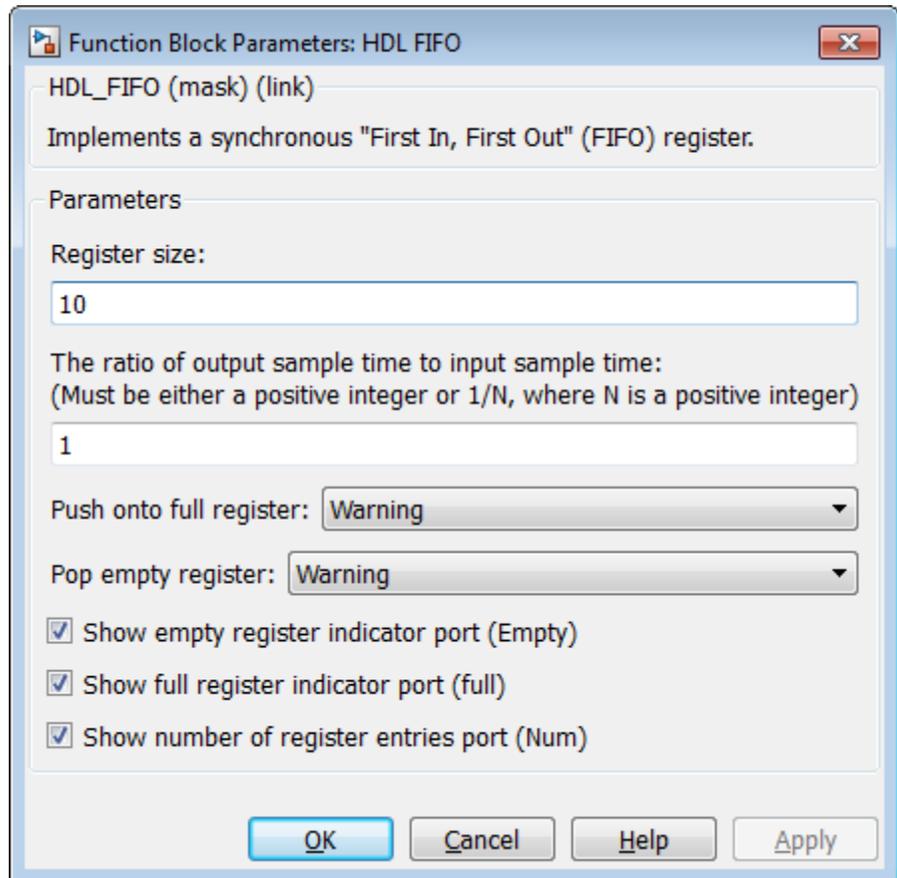

- **Register size:** Specify the number of entries that the FIFO register can hold.  
Default: 10
- **The ratio of output sample time to input sample time:** Inputs (In, Push) and outputs (Out, Pop) can run at different sample times. Enter the ratio of output sample time to input sample time. The value must be a positive integer or 1/N, where N is a positive integer.

For example:

- If you enter 2, the output sample time is twice the input sample time, meaning the outputs run slower.
- If you enter 1/2, the output sample time is half the input sample time, meaning the outputs run faster.

The Full, Empty, and Num signals run at the faster rate.

Default: 1

- **Push onto full register:** Response (Ignore, Error, or Warning) to a trigger received at the Push port when the register is full.

Default: Warning

- **Pop empty register:** Response (Ignore, Error, or Warning) to a trigger received at the Pop port when the register is empty.

Default: Warning

- **Show empty register indicator port (Empty):** Enable the Empty output port, which is high (1) when the FIFO register is empty, and low (0) otherwise.
- **Show full register indicator port (Full):** Enable the Full output port, which is high (1) when the FIFO register is full, and low (0) otherwise.
- **Show number of register entries port (Num):** Enable the Num output port, which tracks the number of entries currently on the queue.

## Ports

The block has the following ports:

In

Data input signal.

Push

Control signal. When this port receives a value of 1, the block pushes the input at the In port onto the end of the FIFO register.

## Pop

Control signal. When this port receives a value of 1, the block pops the first element off the FIFO register and holds the Out port at that value.

## Out

Data output signal.

## Empty

The block asserts this signal when the FIFO register is empty. This port is optional.

## Full

The block asserts this signal when the FIFO register is full. This port is optional.

## Num

Current number of data values in the FIFO register. This port is optional.

If two or more of the control input ports are triggered in the same time step, the operations execute in the following order:

**1** Pop

**2** Push

**See Also** Dual Rate Dual Port RAM

# Hit Crossing

---

**Purpose** Detect crossing point

**Library** Discontinuities

**Description** The Hit Crossing block detects when the input reaches the **Hit crossing offset** parameter value in the direction specified by the **Hit crossing direction** property.




The block accepts one input of type `double`. If you select the **Show output port** check box, the block output indicates when the crossing occurs. If the input signal is exactly the value of the offset value after the hit crossing is detected, the block continues to output a value of 1. If the input signals at two adjacent points bracket the offset value (but neither value is exactly equal to the offset), the block outputs a value of 1 at the second time step. If the **Show output port** check box is *not* selected, the block ensures that the simulation finds the crossing point but does not generate output. If the input signal is constant and equal to the offset value, the block outputs 1 only if the **Hit crossing direction** property is set to `either`.

When the block's **Hit crossing direction** property is set to `either`, the block serves as an "Almost Equal" block, useful in working around limitations in finite mathematics and computer precision. Used for these reasons, this block might be more convenient than adding logic to your model to detect this condition.

When the block's **Hit crossing direction** property is set to `either` and the model uses a fixed-step solver, the block has the following behavior. If the output signal is 1, the block sets the output signal to 0 at the next time step, unless the input signal equals the offset value.

**Data Type Support** The Hit Crossing block outputs a signal of type `Boolean` if Boolean logic signals are enabled (see "Implement logic signals as Boolean data (vs. double)"). Otherwise, the block outputs a signal of type `double`.

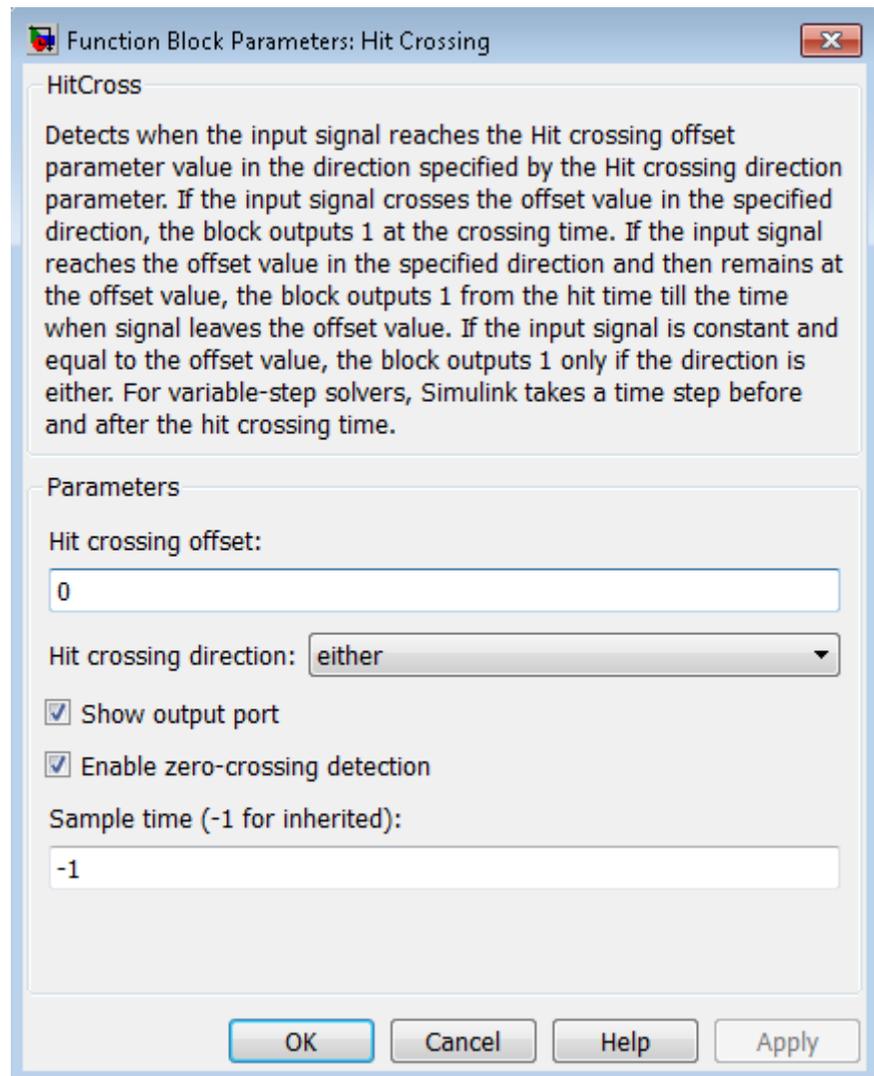

## Parameters

# Hit Crossing

---

## and Dialog Box

### **Hit crossing offset**

The value whose crossing is to be detected.

### **Hit crossing direction**

The direction from which the input signal approaches the hit crossing offset for a crossing to be detected.

### **Show output port**

If selected, draw an output port.

### **Enable zero-crossing detection**

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.


### **Sample time (-1 for inherited)**

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

## **Examples**


The `sldemo_hardstop` and `sldemo_clutch` models show how you can use the Hit Crossing block.

In the `sldemo_hardstop` model, the Hit Crossing block is in the Friction Model subsystem.

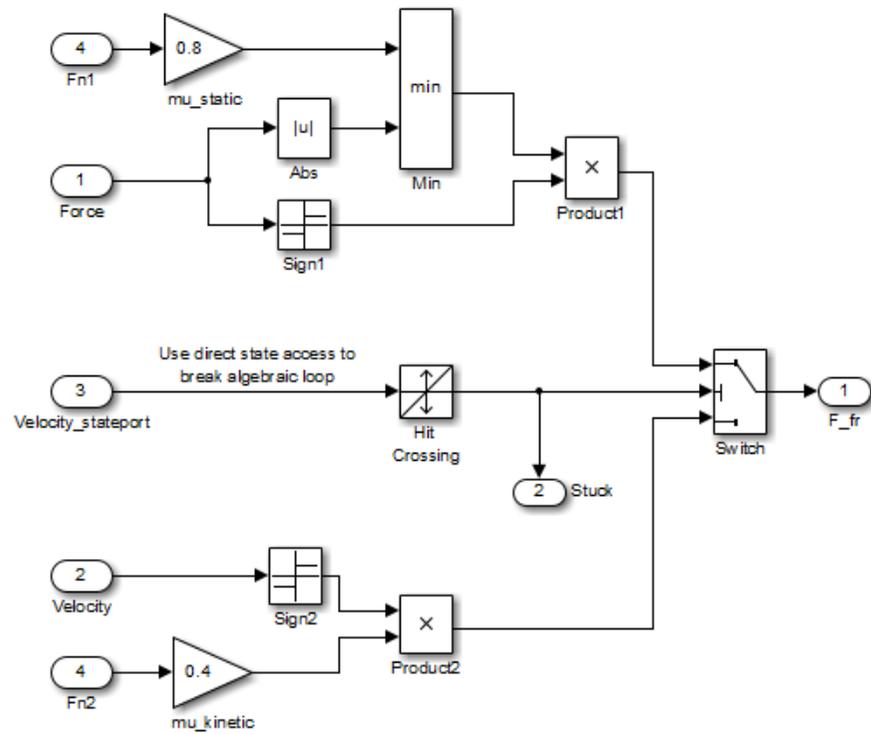

# Hit Crossing

In the `sldemo_clutch` model, the Hit Crossing block is in the Friction Mode Logic/Lockup Detection subsystem.

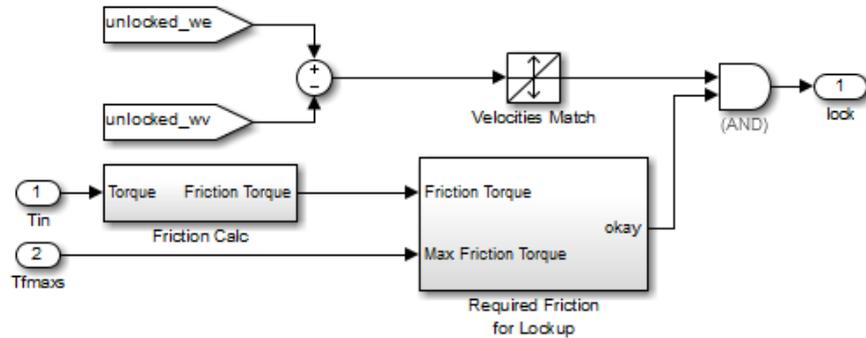


## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block
Scalar Expansion	Yes
Dimensionalized	Yes
Zero-Crossing Detection	Yes, if enabled.

**Purpose** Set initial value of signal

**Library** Signal Attributes

**Description**

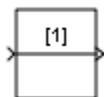

The IC block sets the initial condition of the signal at its input port, for example, the value of the signal at the simulation start time ( $t_{\text{start}}$ ). The block does this by outputting the specified initial condition when you start the simulation, regardless of the actual value of the input signal. Thereafter, the block outputs the actual value of the input signal.

---

**Note** If an IC block inherits or specifies a nonzero sample time offset ( $t_{\text{offset}}$ ), the IC block outputs its initial value at time  $t$ ,

$$t = n * t_{\text{period}} + t_{\text{offset}}$$

where  $n$  is the smallest integer such that  $t \geq t_{\text{start}}$ .


That is, the IC block outputs its initial value the first time blocks with sample time  $[t_{\text{period}}, t_{\text{offset}}]$  execute, which can be after  $t_{\text{start}}$ .

---

The IC block is useful for providing an initial guess for the algebraic state variables in a loop. For more information, see “Algebraic Loops”.

**Data Type Support**

The IC block accepts and outputs signals of any Simulink built-in and fixed-point data type. The **Initial value** parameter accepts any built-in data type that Simulink supports. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

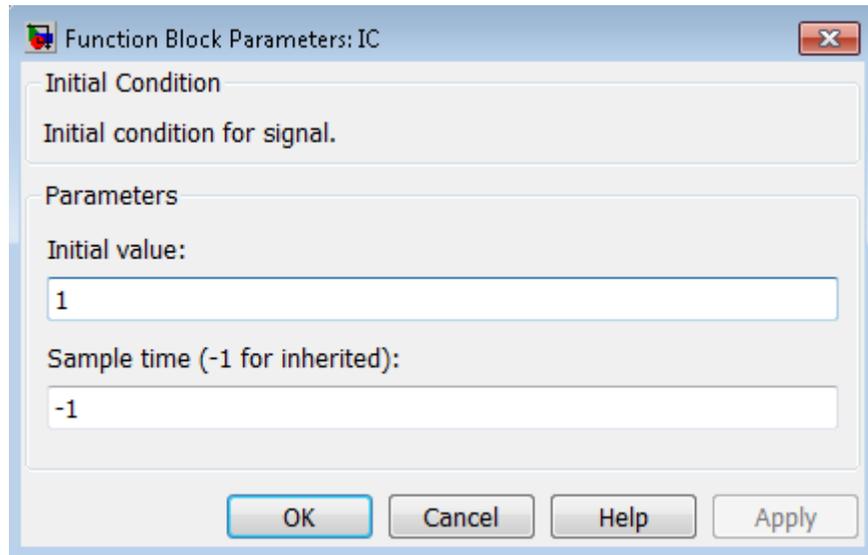

## Parameters and Dialog Box

### Initial value

Specify the initial value for the input signal.

### Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

## Examples

The following examples show how to use the IC block:

- sldemo\_bounce
- sldemo\_hardstop
- sldemo\_enginewc

**Characteristics**


Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of <b>Initial value</b> parameter only
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

# If

**Purpose** Model if-else control flow


**Library** Ports & Subsystems

## Description

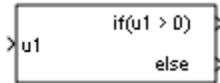

The If block, along with the If Action Subsystem block containing an Action Port, implements standard C-like if-else logic.

The following shows a completed if-else control flow statement.

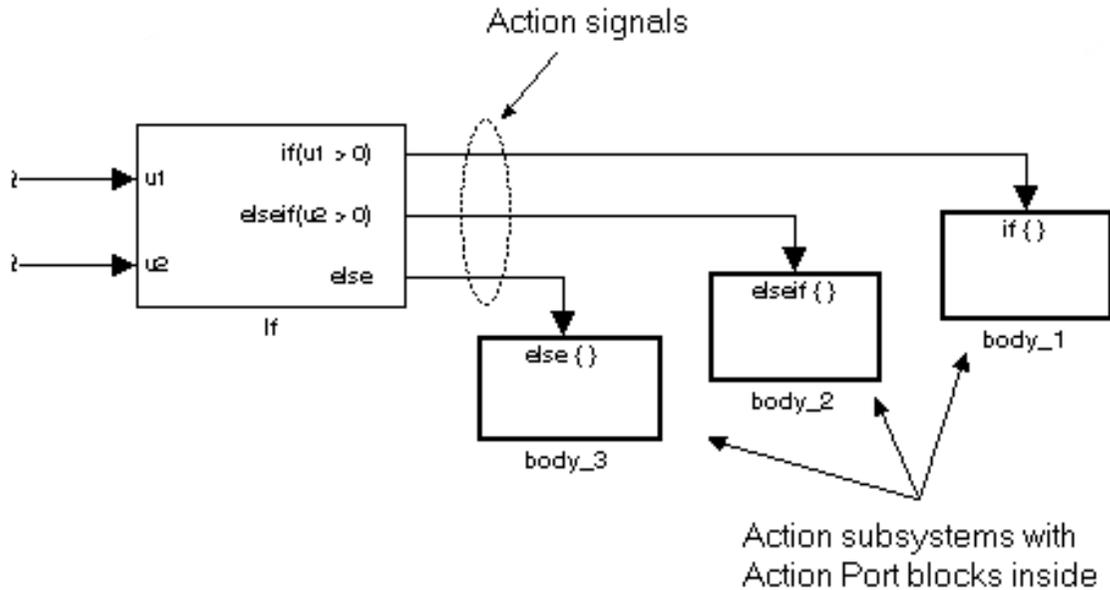

In this example, the inputs to the If block determine the values of conditions represented as output ports. Each output port is attached to an If Action Subsystem, named `body_1`, `body_2`, and `body_3`. The conditions are evaluated top down starting with the `if` condition. If a condition is true, its If Action Subsystem is executed and the If block does not evaluate any remaining conditions.

The preceding `if-else` control flow statement can be represented by the following pseudocode.

```
if (u1 > 0) {
    body_1;
}
else if (u2 > 0){
    body_2;
}
else {
    body_3;
}
```

You construct a Simulink `if-else` control flow statement like the preceding example as follows:

- 1 Place an If block in the current system.
- 2 Open the dialog of the If block and enter as follows:
  - Enter the **Number of inputs** field with the required number of inputs necessary to define conditions for the `if-else` control flow statement.  
  
Elements of vector inputs can be accessed for conditions using (row, column) arguments. For example, you can specify the fifth element of the vector `u2` in the condition `u2(5) > 0` in an **If expression** or **Elseif expressions** field.
  - Enter the expression for the if condition of the `if-else` control flow statement in the **If expression** field.

This creates an if output port for the If block with a label of the form `if(condition)`. This is the only required If Action signal output for an If block.

- Enter expressions for any elseif conditions of the `if-else` control flow statement in the **Elseif expressions** field.

Use a comma to separate one condition from another. Entering these conditions creates an output port for the If block for each condition, with a label of the form `elseif(condition)`. elseif ports are optional and not required for operation of the If block.

- Check the **Show else condition** check box to create an else output port.

The else port is optional and not required for the operation of the If block.

- 3** Create If Action subsystems to connect to each of the if, else, and elseif ports.

These consist of a subsystem with an Action Port block. When you place an Action Port block inside each subsystem, an input port named Action is added to the subsystem.

- 4** Connect each if, else, and elseif port of the If block to the Action port of an If Action subsystem.

When you make the connection, the icon for the If Action block is renamed to the type of the condition that it attaches to.

---

**Note** During simulation of an `if-else` control flow statement, the Action signal lines from the If block to the If Action subsystems turn from solid to dashed.

---

- 5** In each If Action Subsystem, enter the Simulink blocks appropriate to the body to be executed for the condition it handles.

---

**Note** All blocks in an If Action Subsystem must run at the same rate as the driving If block. You can achieve this by setting each block's sample time parameter to be either inherited (-1) or the same value as the If block's sample time.

---

### Limitations


The If block has the following limitations:

- You cannot tune an if or elseif expression during simulation in Normal or Accelerator mode (see “How Acceleration Modes Work”), or in generated code. The If block doesn't support tunable parameters if **Inline Parameters** is turned on. To implement tunable if/else expressions, tune the expression outside the If block. For example, use the Relational operator block to evaluate the expression outside or add the tunable parameter as an input to the If block.
- The If block does not support custom storage classes. See “Custom Storage Classes” in the Embedded Coder documentation.
- The **If expression** and **Elseif expressions** cannot accept certain operators, such as +, -, \*, and /. See If Expression and Elseif Expressions in “Parameters and Dialog Box” on page 1-798

### Data Type Support

Inputs  $u_1, u_2, \dots, u_n$  can be scalars or vectors of any built-in Simulink data type and must all be of the same data type. The inputs cannot be of any user-defined type, such as an enumerated type. Outputs from the if, else, and elseif ports are Action signals to If Action subsystems that you create by using Action Port blocks and subsystems.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

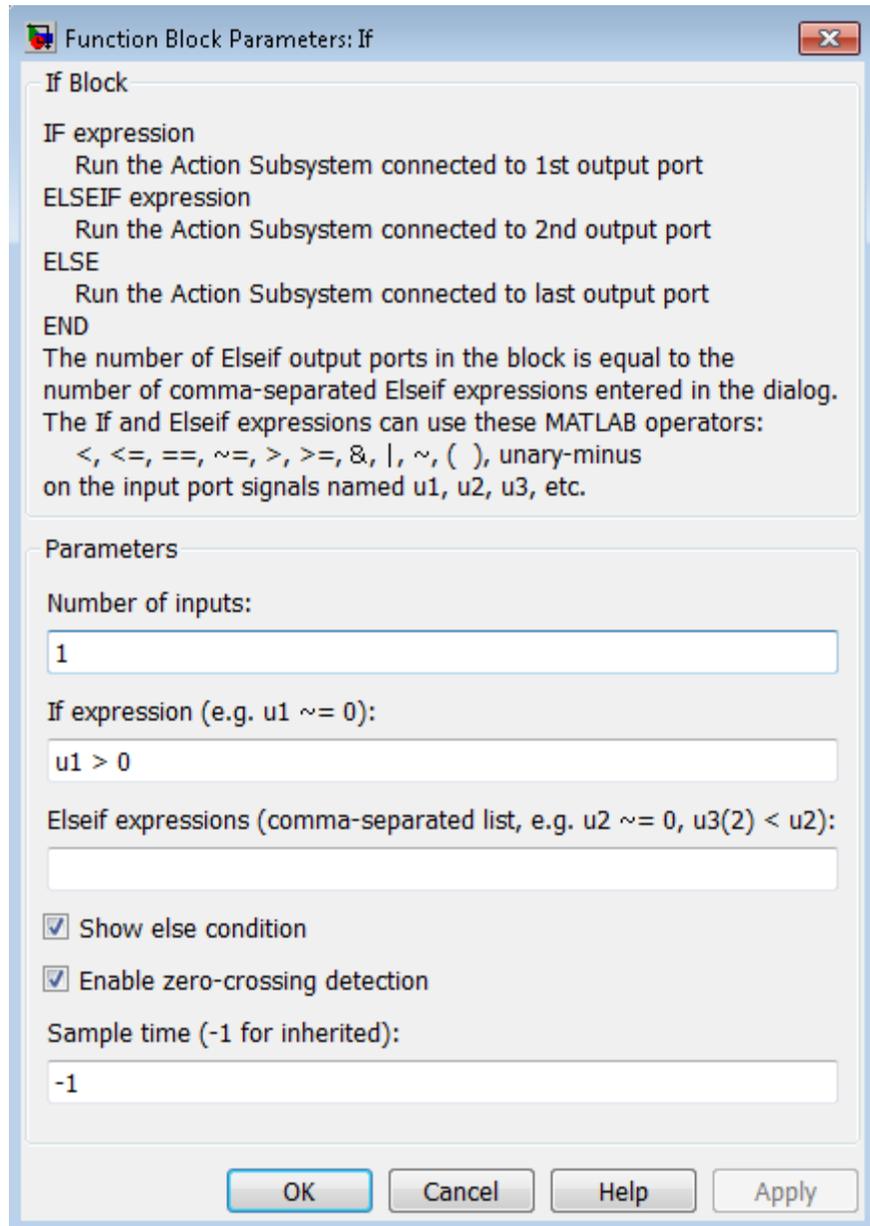

## Parameters and Dialog Box

### Number of inputs

Specify the number of inputs to the If block. These appear as data input ports labeled with a 'u' character followed by a number, 1, 2, . . . , n, where n equals the number of inputs that you specify.

---

### If expression

Specify the condition for the if output port. This condition appears on the If block adjacent to the if output port. The **If expression** can include only the operators <, <=, ==, ~=, >, >=, &, |, ~, (), unary-minus, and cannot include operators such as +, -, \*, /, and ^. The If Action Subsystem attached to the if port executes if its condition is true. The expression must not contain data type expressions, for example, `int8(6)`, and must not reference workspace variables whose data type is other than double or single.

---

**Note** There are limitations to the tunability of the **If expression**. See “Limitations” on page 1-797 for more information.

---

### Elseif expressions

Specify a string list of **elseif** conditions delimited by commas. These conditions appear below the if port and above the **else** port when you select the **Show else condition** check box. **Elseif expressions** can include only the operators <, <=, ==, ~=, >, >=, &, |, ~, (), unary-minus, and cannot include operators such as +, -, \*, /, and ^. The If Action Subsystem attached to an **elseif** port executes if its condition is true and all of the if and **elseif** conditions are false. The expression must not contain data type expressions, for example, `int8(6)`, and must not reference workspace variables whose data type is other than double or single.

---

**Note** There are limitations to the tunability of **Elseif expressions**. See “Limitations” on page 1-797 for more information.

---

# If

## Show else condition

If you select this check box, an `else` port is created. The If Action subsystem attached to the `else` port executes if the `if` port and all the `elseif` ports are false.

## Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.


## Sample time

Specify the sample time of the input signal. See “Specify Sample Time” in the online documentation for more information.

## Examples

The If block does not directly support fixed-point data types. However, you can use the Compare To Constant block to work around this limitation.

For example, consider the following floating-point model:

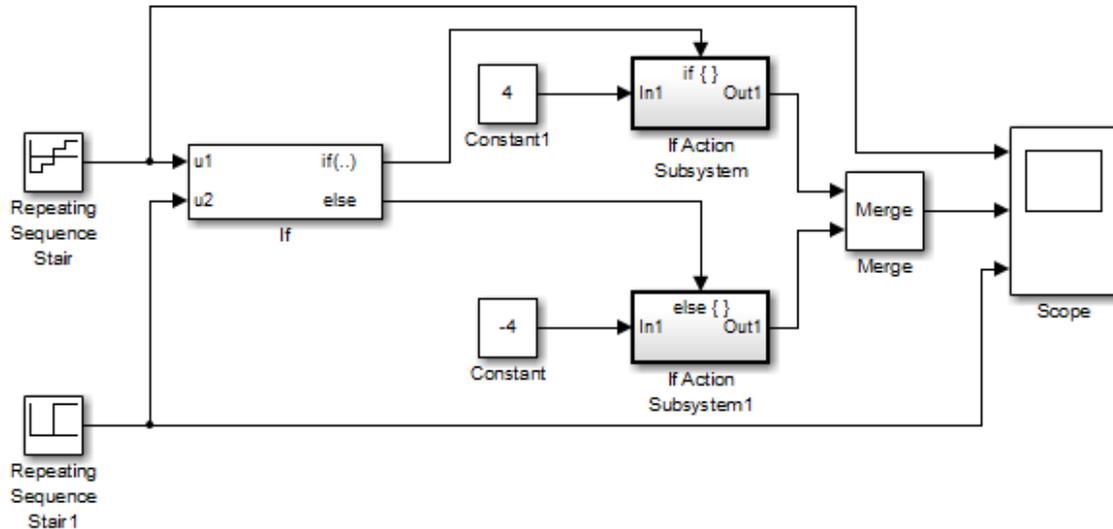


In this model, the If Action subsystems use their default configurations. The block and simulation parameters for the model are set to their default values except as follows:


<b>Block or Dialog Box</b>	<b>Parameter</b>	<b>Setting</b>
Configuration Parameters — Solver pane	<b>Start time</b>	0.0
	<b>Stop time</b>	1.0
	<b>Type</b>	Fixed-step
	<b>Solver</b>	discrete (no continuous states)
	<b>Fixed-step size</b>	0.1
Repeating Sequence Stair	<b>Vector of output values</b>	<code>[-2 -1 1 2].'</code>
Repeating Sequence Stair1	<b>Vector of output values</b>	<code>[0 0 0 0 1 1 1 1].'</code>
If	<b>Number of inputs</b>	2
	<b>If expression</b>	<code>(u1 &gt; 0)   (u2 &gt; 0.5)</code>
	<b>Show else condition</b>	selected
Constant	<b>Constant value</b>	-4
Constant1	<b>Constant value</b>	4
Scope	<b>Number of axes</b>	3
	<b>Time range</b>	1

# If

For this model, if input  $u_1$  is greater than 0 or input  $u_2$  is greater than 0.5, the output is 4. Otherwise, the output is  $-4$ . The Scope block shows the output,  $u_1$ , and  $u_2$ :

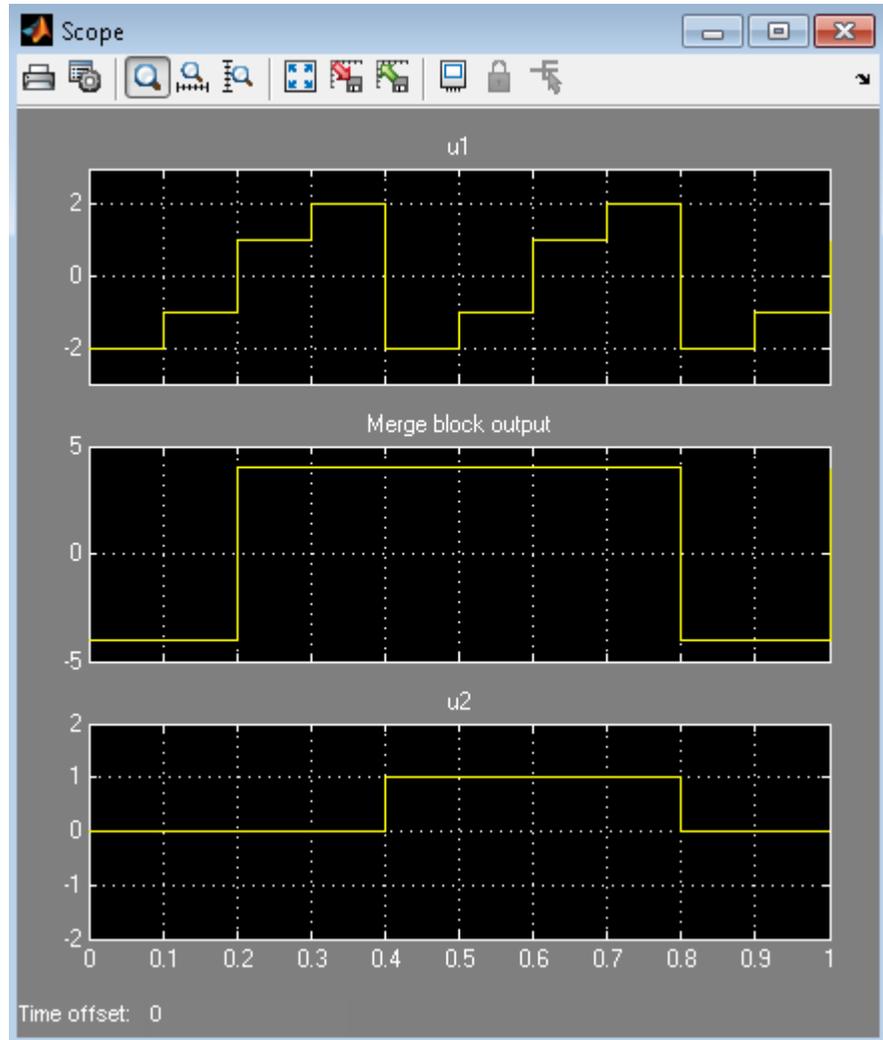

You can implement this block diagram as a model with fixed-point data types:

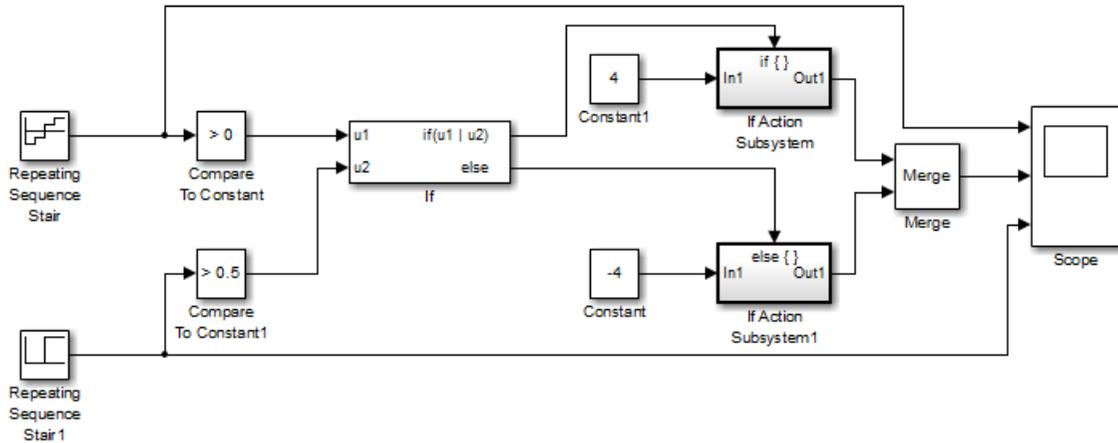

The Repeating Sequence Stair blocks now output fixed-point data types.

The Compare To Constant blocks implement two parts of the **If expression** that is used in the If block in the floating-point version of the model,  $(u1 > 0)$  and  $(u2 > 0.5)$ . The OR operation,  $(u1 | u2)$ , can still be implemented inside the If block. For a fixed-point model, the expression must be partially implemented outside of the If block as it is here.

The block and simulation parameters for the fixed-point model are the same as for the floating-point model with the following exceptions and additions:

Block	Parameter	Setting
Compare To Constant	Operator	>
	Constant value	0

# If

<b>Block</b>	<b>Parameter</b>	<b>Setting</b>
	<b>Output data type mode</b>	Boolean
	<b>Enable zero-crossing detection</b>	off
Compare To Constant1	<b>Operator</b>	>
	<b>Constant value</b>	0.5
	<b>Output data type mode</b>	Boolean
	<b>Enable zero-crossing detection</b>	off
If	<b>Number of inputs</b>	2
	<b>If expression</b>	u1   u2


## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block
Scalar Expansion	No
Dimensionalized	Yes
Zero-Crossing Detection	Yes, if enabled

**Purpose** Represent subsystem whose execution is triggered by If block

**Library** Ports & Subsystems

## Description

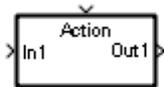

The If Action Subsystem block is a Subsystem block that is preconfigured to serve as a starting point for creating a subsystem whose execution is triggered by an If block.

---

**Note** All blocks in an If Action Subsystem must run at the same rate as the driving If block. You can achieve this by setting each block's sample time parameter to be either inherited (-1) or the same value as the If block's sample time.

---

For more information, see “Create an Action Subsystem”, If block and Modeling with Control Flow Blocks in the “Creating a Model” chapter of the Simulink documentation.

# Increment Real World

---

**Purpose** Increase real world value of signal by one

**Library** Additional Math & Discrete / Additional Math: Increment - Decrement


**Description** The Increment Real World block increases the real world value of the signal by one. Overflows always wrap.

**Data Type Support** The Increment Real World block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

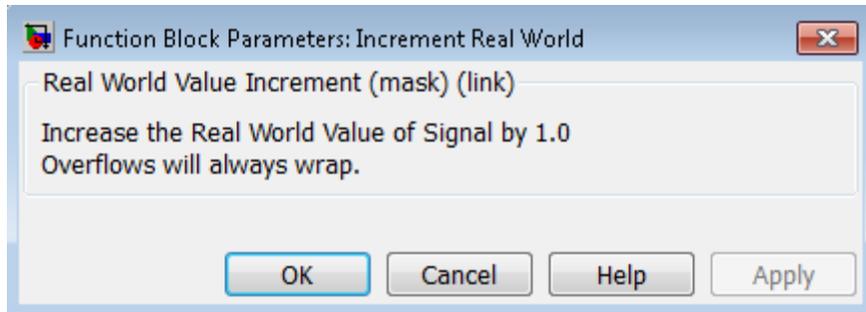

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	No

Multidimensionalized	No
Zero-Crossing Detection	No

**See Also**

Decrement Real World, Increment Stored Integer

# Increment Stored Integer

---

## Purpose

Increase stored integer value of signal by one

## Library

Additional Math & Discrete / Additional Math: Increment - Decrement

## Description

The Increment Stored Integer block increases the stored integer value of a signal by one.



Floating-point signals also increase by one, and overflows always wrap.


## Data Type Support

The Increment Stored Integer block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

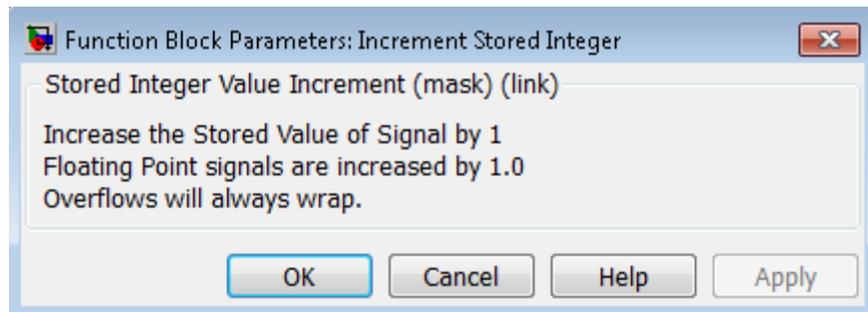

# Increment Stored Integer

---

<b>Characteristics</b>	Direct Feedthrough	Yes
	Scalar Expansion	No
	Multidimensionalized	No
	Zero-Crossing Detection	No

**See Also**      Decrement Stored Integer, Increment Real World

# Index Vector

---

**Purpose** Switch output between different inputs based on value of first input

**Library** Signal Routing

**Description** The Index Vector block is an implementation of the Multiport Switch block. See Multiport Switch for more information.



**Purpose**

Create input port for subsystem or external input

**Library**

Ports & Subsystems, Sources

**Description**

Inport blocks are the links from outside a system into the system.

Simulink software assigns Inport block port numbers according to these rules:

- It automatically numbers the Inport blocks within a top-level system or subsystem sequentially, starting with 1.
- If you add an Inport block, the label is the next available number.
- If you delete an Inport block, other port numbers are automatically renumbered to ensure that the Inport blocks are in sequence and that no numbers are omitted.
- If you copy an Inport block into a system, its port number is *not* renumbered unless its current number conflicts with an Inport block already in the system. If the copied Inport block port number is not in sequence, renumber the block. Otherwise, you get an error message when you run the simulation or update the block diagram.

You can specify the dimensions of the input to the Inport block using the **Port dimensions** parameter. Entering a value of -1 lets Simulink determine the port dimension.

The **Sample time** parameter is the rate at which the signal is coming into the system. A value of -1 causes the block to inherit its sample time from the block driving it. You might need to set this parameter for:

- Inport blocks in a top-level system.
- Models with blocks where Simulink cannot determine the sample time, but these blocks drive Inport blocks.

For more information, see “Specify Sample Time”.

## Inport Blocks in a Top-Level System

Inport blocks in a top-level system have two uses:

- To supply external inputs from the workspace, use the Configuration Parameters dialog box (see “Techniques for Importing Signal Data”) or the `ut` argument of the `sim` command (see `sim`) to specify the inputs. If no external outputs are supplied, then the default output is the ground value.
- To provide a means for perturbation of the model by the `linmod` and `trim` analysis functions, use Inport blocks to inject inputs into the system.

## Inport Blocks in a Subsystem

Inport blocks in a subsystem represent inputs to the subsystem. A signal arriving at an input port on a Subsystem block flows out of the associated Inport block in that subsystem. The Inport block associated with an input port on a Subsystem block is the block whose **Port number** parameter matches the relative position of the input port on the Subsystem block. For example, the Inport block whose **Port number** parameter is 1 gets its signal from the block connected to the topmost port on the Subsystem block.

If you renumber the **Port number** of an Inport block, the block becomes connected to a different input port, although the block continues to receive its signal from the same block outside the subsystem.

The Inport block name appears in the Subsystem icon as a port label. To suppress display of the label, select the Inport block and choose **Format > Hide Name**.

Inport blocks inside a subsystem support signal label propagation, but root-level Inport blocks do not.

You can use a subsystem inport to supply fixed-point data in a structure or any other format.

## Creating Duplicate Inports

You can create any number of duplicates of an Inport block. The duplicates are graphical representations of the original intended to simplify block diagrams by eliminating unnecessary lines. The duplicate has the same port number, properties, and output as the original. Changing properties of a duplicate changes properties of the original and vice versa.

To create a duplicate of an Inport block:

- 1** In the block diagram, select the block that you want to duplicate.
- 2** In the Model Editor menu bar, select **Edit > Copy**.
- 3** In the block diagram, place your cursor where you want to place the duplicate.
- 4** Select **Edit > Paste Duplicate Inport**.

## Connecting Buses to Root Level Inports

If you want a root level Inport of a model to produce a bus signal, you must set the **Data type** parameter to the name of a bus object that defines the bus that the Inport produces. For more information, see “Bus Objects”.

## Data Type Support

The Inport block accepts complex or real signals of any data type that Simulink supports, including fixed-point and enumerated data types. The Inport block also accepts a bus object as a data type.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum and maximum values for bus data on the block. Simulink ignores these settings. Instead, set the minimum and maximum values for bus elements of the bus object specified as the data type. The values should be finite real double scalar.


For information on the Minimum and Maximum properties of a bus element, see `Simulink.BusElement`.

---

For more information, see “Data Types Supported by Simulink”.

The numeric and data types of the block output are the same as those of its input. You can specify the signal type, data type, and sampling mode of an external input to a root-level Inport block using the **Signal type**, **Data type**, and **Sampling mode** parameters.

The elements of a signal array connected to a root-level Inport block must be of the same numeric and data types. Signal elements connected to a subsystem input port can be of differing numeric and data types, except in the following circumstance: If the subsystem contains an Enable, Trigger, or Atomic Subsystem block and the input port, or an element of the input port, connects directly to an output port, the input elements must be of the same type. For example, consider the following enabled subsystem:

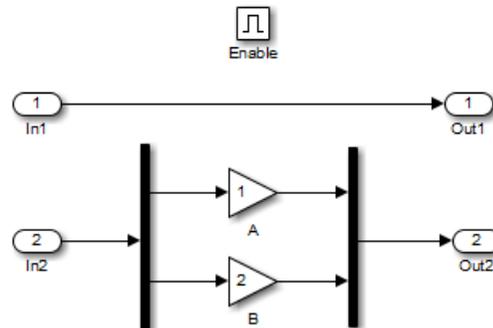


In this example, the elements of a signal vector connected to In1 must be of the same type. The elements connected to In2, however, can be of differing types.

# Inport


## Parameters and Dialog Box

The **Main** pane of the Inport block dialog box appears as follows:

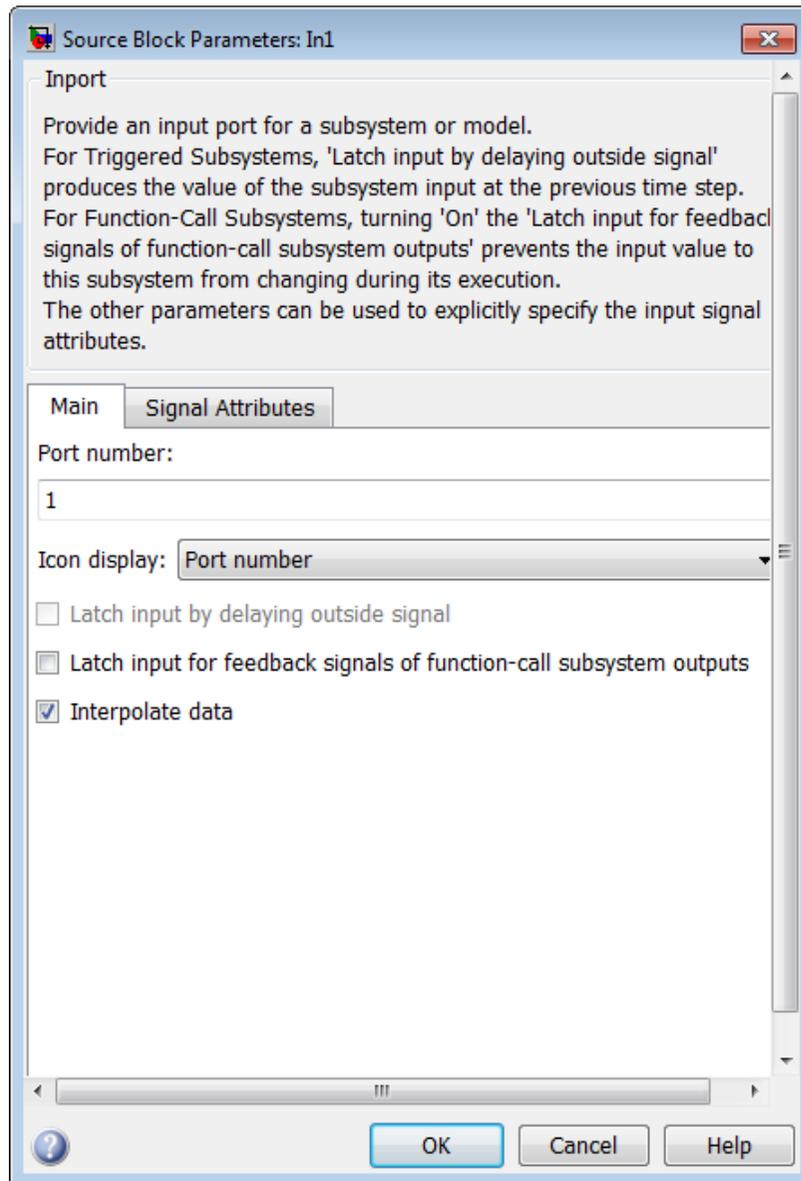

The **Signal Attributes** pane of the Inport block dialog box appears as follows:

# Inport

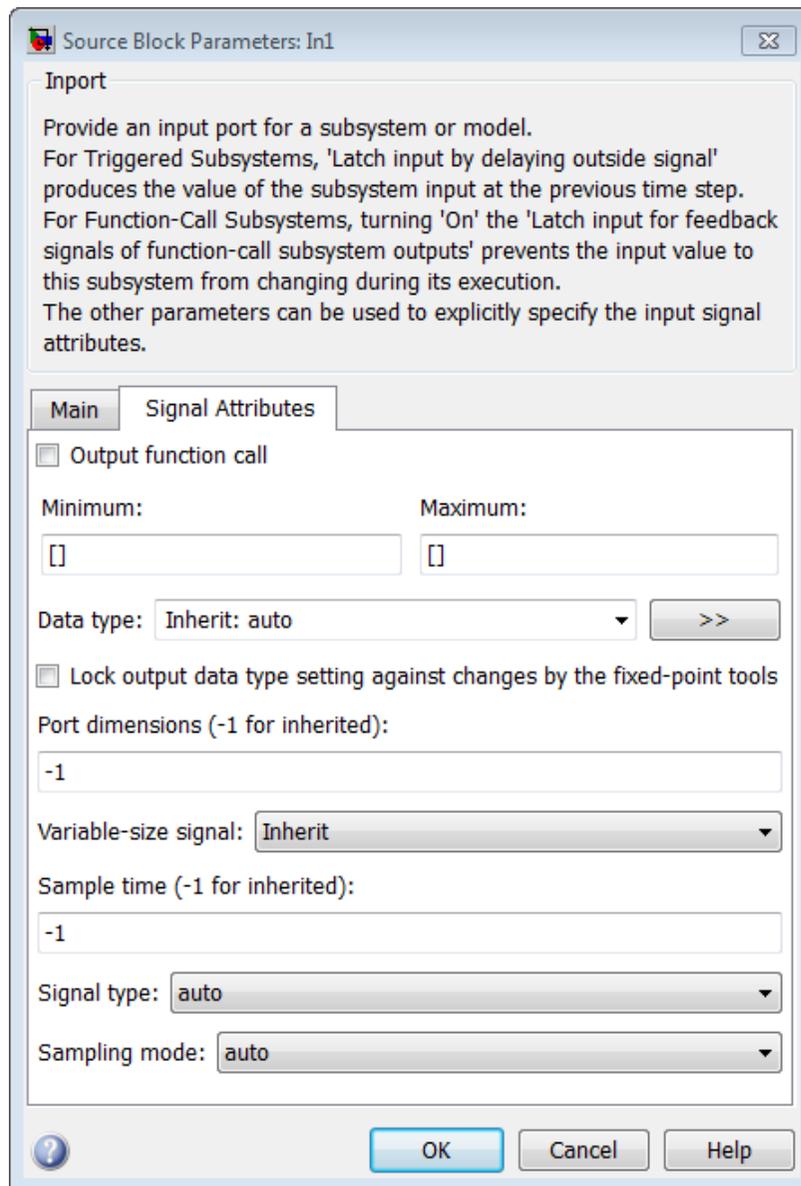

- “Package” on page 1-2027
- “Icon display” on page 1-1129
- “Latch input by delaying outside signal” on page 1-823
- “Latch input for feedback signals of function-call subsystem outputs” on page 1-824
- “Interpolate data” on page 1-826
- “Output function call” on page 1-828
- “Minimum” on page 1-1969
- “Maximum” on page 1-1970
- “Data type” on page 1-831
- “Show data type assistant” on page 1-1727
- “Mode” on page 1-834
- “Data type override” on page 1-1975
- “Signedness” on page 1-1976
- “Word length” on page 1-1979
- “Scaling” on page 1-1789
- “Fraction length” on page 1-1980
- “Slope” on page 1-1981
- “Bias” on page 1-1981
- “Output as nonvirtual bus” on page 1-842
- “Lock output data type setting against changes by the fixed-point tools” on page 1-1774
- “Port dimensions (-1 for inherited)” on page 1-843
- “Variable-size signal” on page 1-845
- “Sample time (-1 for inherited)” on page 1-2024

# Inport

---

- “Signal type” on page 1-848
- “Sampling mode” on page 1-849

**Port number**

Specify the port number of the block.

**Settings**

**Default:** 1

This parameter controls the order in which the port that corresponds to the block appears on the parent subsystem or model block.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Icon display**

Specify the information to be displayed on the icon of this input port.

### **Settings**

**Default:** Port number

Signal name

Display the name of the signal connected to this port (or signals if the input is a bus).

Port number

Display port number of this port.

Port number and signal name

Display both the port number and the names of the signals connected to this port.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Latch input by delaying outside signal

Output the value of the input signal at the previous time step.

### Settings

**Default:** Off

On


Output the value of the input signal at the previous time step.

Off

Do not output the value of the input signal at the previous time step.

### Tips

- This option applies only to triggered subsystems and is enabled only if the Inport block resides in a triggered subsystem.
- Selecting this check box enables Simulink to resolve data dependencies among triggered subsystems that are part of a loop.
- Type `s1_subsys_semantics` at the MATLAB prompt for examples using latched inputs with triggered subsystems.
- The Inport block indicates that this option is selected by displaying `<Lo>`.

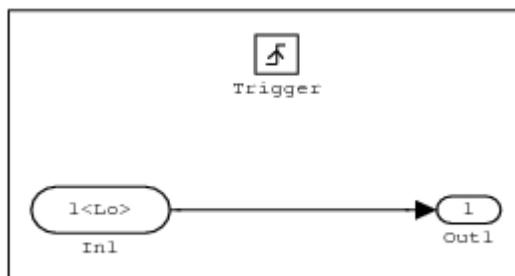

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Latch input for feedback signals of function-call subsystem outputs

Latch the value of the input to this subsystem and prevent this value from changing during the execution of the subsystem. For a single function call that is branched to invoke multiple function-call subsystems, this option allows you to break a loop formed by a signal fed back from one of these function-call subsystems into the other. A second functionality of this option is to prevent any change to the values of a feedback signal from a function-call subsystem that is invoked during the execution of this subsystem.

### Settings

**Default:** Off



On

Latch the input value.




Off

Do not latch the input value.

### Tips

- This parameter applies only to function-call subsystems and is enabled only if the Inport block resides in a function-call subsystem.
- This parameter ensures that the subsystem inputs, including those generated within the subsystem's context, do not change during execution of the subsystem.
- The Inport block indicates that this option is selected by displaying `<Li>`.

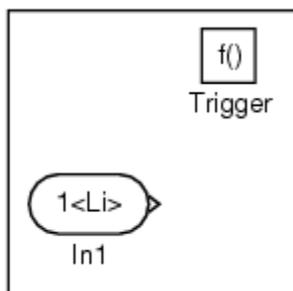

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Interpolate data

When loading data from the workspace, cause the block to linearly interpolate and extrapolate output at time steps for which no corresponding data exists.

To load discrete signal data from the workspace, in the Inport block dialog box:

- 1 Set the **Sample time** parameter to a discrete value, such as 2.
- 2 Clear the **Interpolate data** parameter.

Specifying the discrete sample time causes the simulation to have hit times exactly at those instances when the discrete data is sampled. You only need to specify the data values, not time values.

Turning interpolation off avoids unexpected data values at other simulation time points as a result of double precision arithmetic processing. For more information, see “Import Data to Test a Discrete Algorithm”.

### Settings

**Default:** On



On

When loading data from the workspace, cause the block to linearly interpolate and extrapolate output at time steps for which no corresponding data exists.



Off

When loading data from the workspace, do not cause the block to linearly interpolate or extrapolate output at time steps for which no corresponding data exists. Simulink uses the following interpolation and extrapolation:

- For time steps between the first specified data point and the last specified data point — zero-order hold

- For time steps before the first specified data point and after the last specified data point — ground value

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Output function call

Specify that the input signal is outputting a function-call trigger signal.

### Settings

**Default:** Off



On

Input signal is a function-call trigger signal.



Off

Input signal is not a function-call trigger signal.

### Tips

- Select this option if it is necessary for a current model to accept a function-call trigger signal when referenced in the top model.
- This feature is limited to an asynchronous function call.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Minimum

Specify the minimum value that the block should output.

### Settings

**Default:** [] (unspecified)

This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum property of a bus element, see `Simulink.BusElement`.

---

Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Maximum**

Specify the maximum value that the block should output.

### **Settings**

**Default:** [] (unspecified)

This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum property of a bus element, see `Simulink.BusElement`.

---

Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Data type

Specify the output data type of the external input.

### Settings

**Default:** Inherit: auto

Inherit: auto

A rule that inherits a data type

double

Data type is double.

single

Data type is single.

int8

Data type is int8.

uint8

Data type is uint8.

int16

Data type is int16.

uint16

Data type is uint16.

int32

Data type is int32.

uint32

Data type is uint32.

boolean

Data type is boolean.

fixdt(1,16,0)

Data type is fixed point fixdt(1,16,0).

fixdt(1,16,2^0,0)

Data type is fixed point fixdt(1,16,2^0,0).

Enum: <class name>  
Data type is enumerated, for example, Enum: Basic Colors.

Bus: <object name>  
Data type is a bus object.

<data type expression>  
The name of a data type object, for example  
Simulink.NumericType

Do not specify a bus object as the expression.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

## Mode

Select the category of data to specify.

## Settings

**Default:** Inherit

### Inherit

Inheritance rule for data types. Selecting `Inherit` enables a second menu/text box to the right.

### Built in

Built-in data types. Selecting `Built in` enables a second menu/text box to the right. Select one of the following choices:

- `double` (default)
- `single`
- `int8`
- `uint8`
- `int16`
- `uint16`
- `int32`
- `uint32`
- `boolean`

### Fixed point

Fixed-point data types.

### Enumerated

Enumerated data types. Selecting `Enumerated` enables a second menu/text box to the right, where you can enter the class name.

### Bus

Bus object. Selecting `Bus` enables a **Bus object** parameter to the right, where you enter the name of a bus object that you want to use to define the structure of the bus. If you need to create or

change a bus object, click **Edit** to the right of the **Bus object** field to open the Simulink Bus Editor. For details about the Bus Editor, see “Manage Bus Objects with the Bus Editor”.

## Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

Do not specify a bus object as the expression.

## Dependency

Clicking the **Show data type assistant** button enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## See Also

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is Built in or Fixed point.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Slope**

Specify slope for the fixed-point data type.

### **Settings**

**Default:**  $2^0$

Specify any positive real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Bias**

Specify bias for the fixed-point data type.

### **Settings**

**Default:** 0

Specify any real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Output as nonvirtual bus

Output a nonvirtual bus.

### Settings

**Default:** Off



On

Output a nonvirtual bus.



Off

Output a virtual bus.

### Tips

- Select this option if you want code generated from this model to use a C structure to define the structure of the bus signal output by this block.
- All signals in a nonvirtual bus must have the same sample time, even if the elements of the associated bus object specify inherited sample times. Any bus operation that would result in a nonvirtual bus that violates this requirement generates an error. Therefore, if you select this option all signals in the bus must have the same sample time. You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus, to allow the signal or bus to be included in a nonvirtual bus.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off

On

Locks the output data type setting for this block.

Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

### Port dimensions (-1 for inherited)

Specify the dimensions of the input signal to the block.

### Settings

**Default:** -1

Valid values are:

-1	Dimensions are inherited from input signal
n	Vector signal of width n accepted
[m n]	Matrix signal having m rows and n columns accepted

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Variable-size signal

Specify the type of signals allowed into this port.

### Settings

**Default:** Inherit

Inherit

Allow variable-size and fixed-size signals.

No

Do not allow variable-size signals.

Yes

Allow only variable-size signals.

### Dependencies

When the signal at this port is a variable-size signal, the **Port dimensions** parameter specifies the maximum dimensions of the signal.

### Command-Line Information

**Parameter:** VarSizeSig

**Type:** string

**Value:** 'Inherit' | 'No' | 'Yes'

**Default:** 'Inherit'

**Sample time (-1 for inherited)**

Specify the time interval between samples.

**Settings**

**Default:** -1

To inherit the sample time, set this parameter to -1.

See “Specify Sample Time” in the online documentation for more information.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.



## **Signal type**

Specify the numeric type of the external input.

### **Settings**

**Default:** auto

auto

Accept either `real` or `complex` as the numeric type.

`real`

Specify the numeric type as a real number.

`complex`

Specify the numeric type as a complex number.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Sampling mode

Specify whether the output signal is `Sample based` or `Frame based`.

### Settings

**Default:** `auto`

`auto`

Accept any sampling mode.

`Sample based`

The output signal is sample-based.

`Frame based`

The output signal is frame-based.

### Dependency

Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Dimensionalized	Yes
Multidimensionalized	Yes

# Inport

---

Virtual	Yes, if the block does <i>not</i> reside in a conditionally-executed or atomic subsystem and does <i>not</i> connect directly to an Outport block  For more information, see “Virtual Blocks” in the Simulink documentation.
Zero-Crossing Detection	No

## See Also

Outport

Asynchronous Task Specification

**Purpose** Integrate signal

**Library** Continuous

**Description** The Integrator block outputs the value of the integral of its input signal with respect to time.



The Integrator Limited block is identical to the Integrator block with the exception that the output of the block is limited based on the upper and lower saturation limits. See “Limiting the Integral” on page 1-853 for details.

Simulink treats the Integrator block as a dynamic system with one state. The block dynamics are given by:

$$\begin{cases} \dot{x}(t) = u(t) \\ y(t) = x(t) \end{cases} \quad x(t_0) = x_0$$

where:

- $u$  is the block input.
- $y$  is the block output.
- $x$  is the block state.
- $x_0$  is the initial condition of  $x$ .

While these equations define an exact relationship in continuous time, Simulink uses numerical approximation methods to evaluate them with finite precision. Simulink can use a number of different numerical integration methods to compute the Integrator block’s output, each with advantages in particular applications. Use the **Solver** pane of the Configuration Parameters dialog box (see “Solver Pane”) to select the technique best suited to your application.

The selected solver computes the output of the Integrator block at the current time step, using the current input value and the value of the state at the previous time step. To support this computational model, the Integrator block saves its output at the current time step for use

# Integrator, Integrator Limited

---

by the solver to compute its output at the next time step. The block also provides the solver with an initial condition for use in computing the block's initial state at the beginning of a simulation. The default value of the initial condition is 0. Use the block parameter dialog box to specify another value for the initial condition or create an initial value input port on the block.

Use the parameter dialog box to:


- Define upper and lower limits on the integral
- Create an input that resets the block's output (state) to its initial value, depending on how the input changes
- Create an optional state output so that the value of the block's output can trigger a block reset

Use the Discrete-Time Integrator block to create a purely discrete system.

## Defining Initial Conditions

You can define the initial conditions as a parameter on the block dialog box or input them from an external signal:

- To define the initial conditions as a block parameter, specify the **Initial condition source** parameter as **internal** and enter the value in the **Initial condition** field.
- To provide the initial conditions from an external source, specify the **Initial condition source** parameter as **external**. An additional input port appears under the block input.

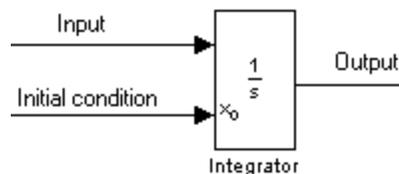

---

**Note** If the integrator limits its output (see “Limiting the Integral” on page 1-853), the initial condition must fall inside the integrator’s saturation limits. If the initial condition is outside the block saturation limits, the block displays an error message.


---

## Limiting the Integral

To prevent the output from exceeding specifiable levels, select the **Limit output** check box and enter the limits in the appropriate parameter fields. This action causes the block to function as a limited integrator. When the output reaches the limits, the integral action is turned off to prevent integral wind up. During a simulation, you can change the limits but you cannot change whether the output is limited. The block determines output as follows:

- When the integral is less than or equal to the **Lower saturation limit**, the output is held at the **Lower saturation limit**.
- When the integral is between the **Lower saturation limit** and the **Upper saturation limit**, the output is the integral.
- When the integral is greater than or equal to the **Upper saturation limit**, the output is held at the **Upper saturation limit**.

To generate a signal that indicates when the state is being limited, select the **Show saturation port** check box. A saturation port appears below the block output port.

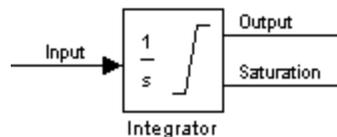

The signal has one of three values:

- 1 indicates that the upper limit is being applied.
- 0 indicates that the integral is not limited.

# Integrator, Integrator Limited

---

- -1 indicates that the lower limit is being applied.

When you select this check box, the block has three zero crossings: one to detect when it enters the upper saturation limit, one to detect when it enters the lower saturation limit, and one to detect when it leaves saturation.


---

**Note** For the Integrator Limited block, by default, **Limit output** is selected, **Upper saturation limit** is set to 1, and **Lower saturation limit** is set to 0.

---

## Resetting the State

The block can reset its state to the specified initial condition based on an external signal. To cause the block to reset its state, select one of the **External reset** choices. A trigger port appears below the block's input port and indicates the trigger type.

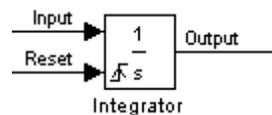

- Select **rising** to reset the state when the reset signal rises from a zero to a positive value or from a negative to a positive value.
- Select **falling** to reset the state when the reset signal falls from a positive value to zero or from a positive to a negative value.
- Select **either** to reset the state when the reset signal changes from a zero to a nonzero value or changes sign.
- Select **level** to reset the state when the reset signal is nonzero at the current time step or changes from nonzero at the previous time step to zero at the current time step.
- Select **level hold** to reset the state when the reset signal is nonzero at the current time step.

The reset port has direct feedthrough. If the block output feeds back into this port, either directly or through a series of blocks with direct feedthrough, an algebraic loop results (see “Algebraic Loops”). Use the Integrator block’s state port to feed back the block’s output without creating an algebraic loop.


---

**Note** To be compliant with the Motor Industry Software Reliability Association (MISRA<sup>®</sup>) software standard, your model must use Boolean signals to drive the external reset ports of Integrator blocks.

---

## About the State Port

Selecting the **Show state port** check box on the Integrator block’s parameter dialog box causes an additional output port, the state port, to appear at the top of the Integrator block.

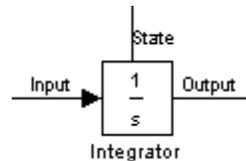

The output of the state port is the same as the output of the block’s standard output port except for the following case. If the block is reset in the current time step, the output of the state port is the value that would have appeared at the block’s standard output if the block had not been reset. The state port’s output appears earlier in the time step than the output of the Integrator block’s output port. Use the state port to avoid creating algebraic loops in these modeling scenarios:

- Self-resetting integrators (see “Creating Self-Resetting Integrators” on page 1-856)
- Handing off a state from one enabled subsystem to another (see “Handing Off States Between Enabled Subsystems” on page 1-858)

# Integrator, Integrator Limited

---


---

**Note** When updating a model, Simulink checks that the state port applies to one of these two scenarios. If not, an error message appears. Also, you cannot log the output of this port in a referenced model that executes in Accelerator mode. If logging is enabled for the port, Simulink generates a "signal not found" warning during execution of the referenced model.

---


## Creating Self-Resetting Integrators

The Integrator block's state port helps you avoid an algebraic loop when creating an integrator that resets itself based on the value of its output. Consider, for example, the following model.

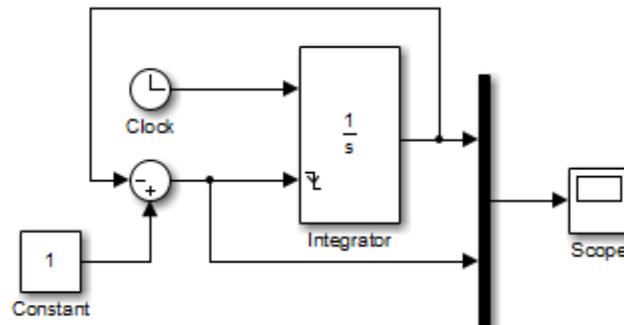

This model tries to create a self-resetting integrator by feeding the integrator's output, subtracted from 1, back into the integrator's reset port. However, the model creates an algebraic loop. To compute the integrator block's output, Simulink software needs to know the value of the block's reset signal, and vice versa. Because the two values are mutually dependent, Simulink software cannot determine either. Therefore, an error message appears if you try to simulate or update this model.

The following model uses the integrator's state port to avoid the algebraic loop.

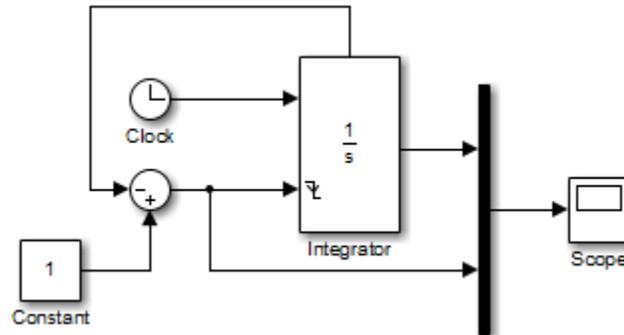


In this version, the value of the reset signal depends on the value of the state port. The value of the state port is available earlier in the current time step than the value of the integrator block's output port. Therefore, Simulink can determine whether the block needs to be reset before computing the block's output, thereby avoiding the algebraic loop.


# Integrator, Integrator Limited

## Handing Off States Between Enabled Subsystems

The state port helps you avoid an algebraic loop when passing a state between two enabled subsystems. Consider, for example, the following model.

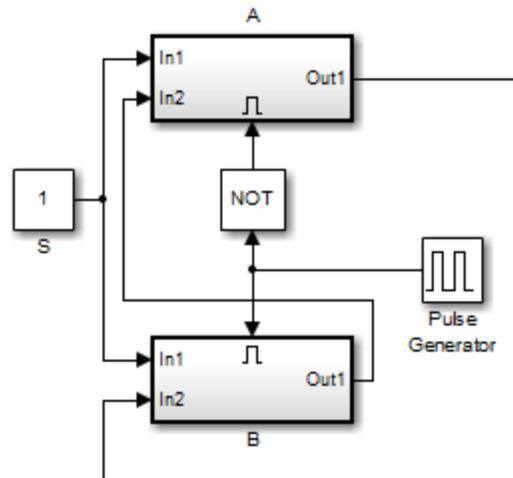


The enabled subsystems, A and B, contain the following blocks:

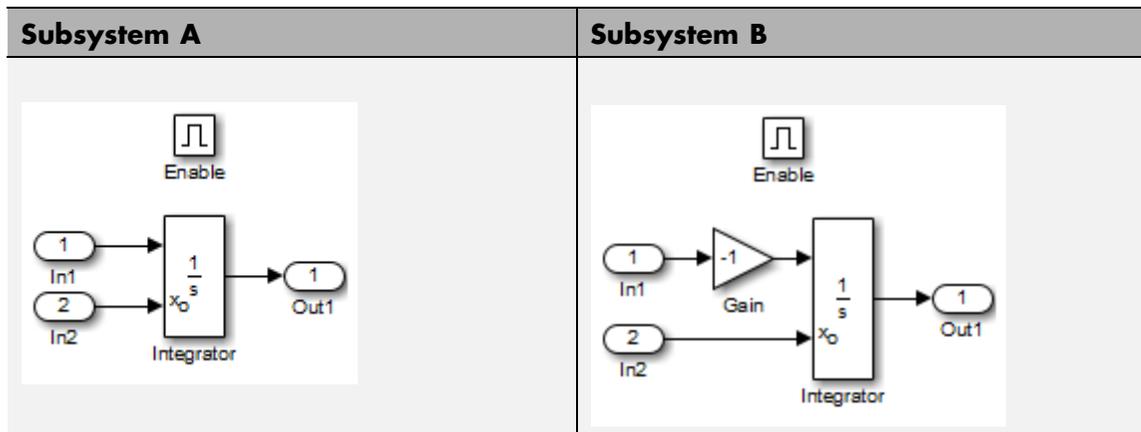

In this model, a constant input signal drives two enabled subsystems that integrate the signal. A pulse generator generates an enabling signal that causes execution to alternate between the two subsystems. The enable port of each subsystem is set to reset, which causes the subsystem to reset its integrator when it becomes active. Resetting the integrator causes the integrator to read the value of its initial condition port. The initial condition port of the integrator in each subsystem is connected to the output port of the integrator in the other subsystem.


This connection is intended to enable continuous integration of the input signal as execution alternates between two subsystems. However, the connection creates an algebraic loop. To compute the output of A, Simulink needs to know the output of B, and vice versa. Because the outputs are mutually dependent, Simulink cannot compute the output values. Therefore, an error message appears if you try to simulate or update this model.

The following version of the same model uses the integrator state port to avoid creating an algebraic loop when handing off the state.

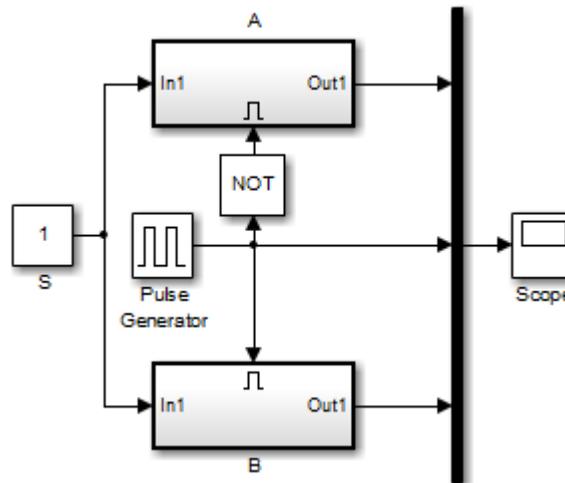

# Integrator, Integrator Limited

The enabled subsystems, A and B, contain the following blocks:

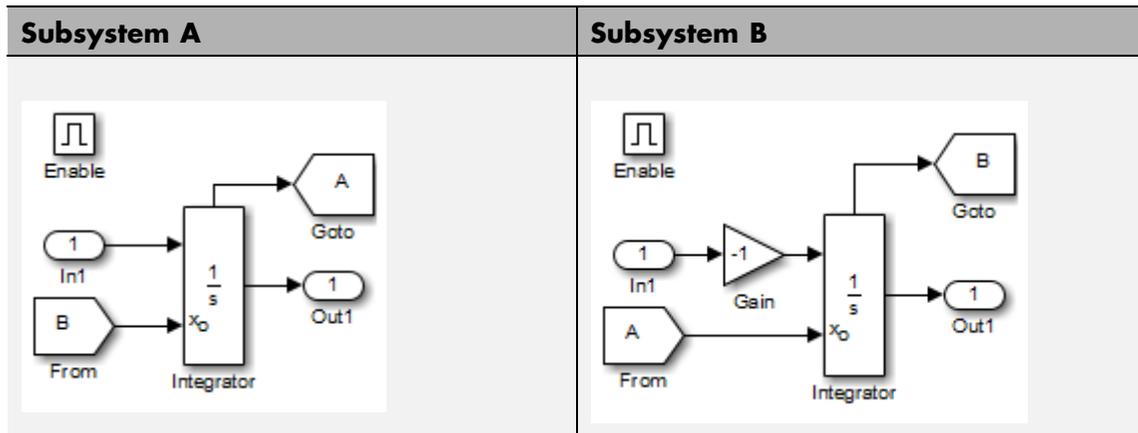

In this model, the initial condition of the integrator in A depends on the value of the state port of the integrator in B, and vice versa. The values of the state ports are updated earlier in the simulation time step than the values of the integrator output ports. Therefore, Simulink can compute the initial condition of either integrator without knowing the final output value of the other integrator. For another example of using the state port to hand off states between conditionally executed subsystems, see the `sldemo_clutch` model.

---

**Note** Simulink does not permit three or more enabled subsystems to hand off a model state. If Simulink detects that a model is handing off a state among more than two enabled subsystems, it generates an error.

---


## Specifying the Absolute Tolerance for the Block Outputs

By default Simulink software uses the absolute tolerance value specified in the Configuration Parameters dialog box (see “Specifying Error Tolerances for Variable-Step Solvers”) to compute the output of the Integrator block. If this value does not provide sufficient error control, specify a more appropriate value in the **Absolute tolerance**

field of the Integrator block dialog box. The value that you specify is used to compute all the block outputs.

## Selecting All Options


When you select all options, the block icon looks like this.

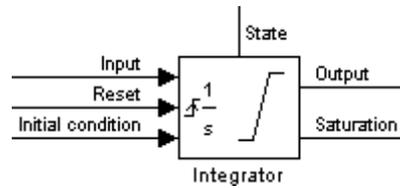

## Data Type Support

The Integrator block accepts and outputs signals of type double on its data ports. The external reset port accepts signals of type double or Boolean.

# Integrator, Integrator Limited

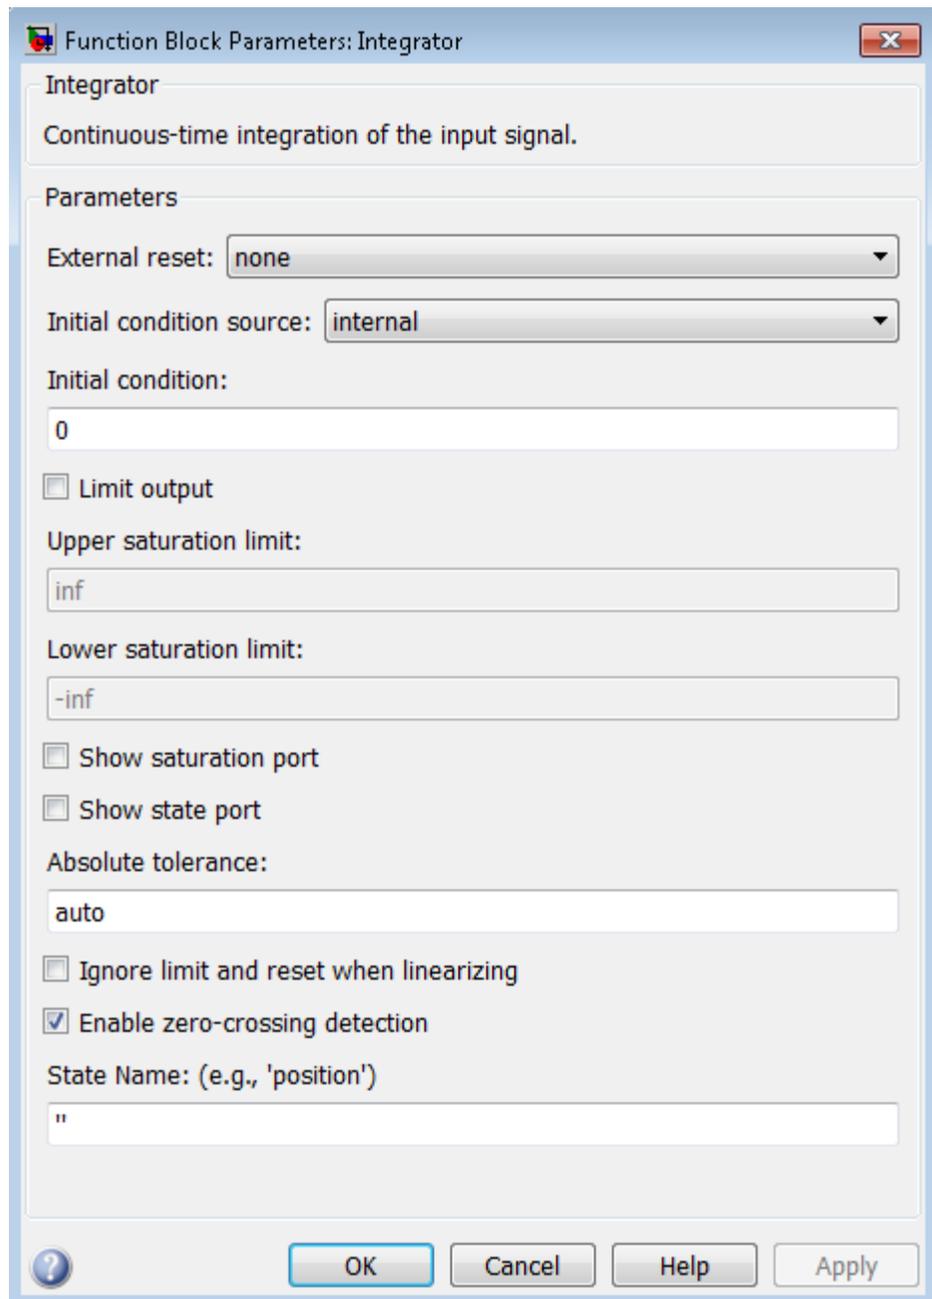

Function Block Parameters: Integrator

Integrator

Continuous-time integration of the input signal.

Parameters

External reset: none

Initial condition source: internal

Initial condition:

0

Limit output

Upper saturation limit:

inf

Lower saturation limit:

-inf

Show saturation port

Show state port

Absolute tolerance:

auto

Ignore limit and reset when linearizing

Enable zero-crossing detection

State Name: (e.g., 'position')

"

OK Cancel Help Apply

## External reset

Reset the states to their initial conditions when a trigger event occurs in the reset signal.

### Settings

**Default:** none

none

Do not reset the state to initial conditions.

rising

Reset the state when the reset signal rises from a zero to a positive value or from a negative to a positive value.

falling

Reset the state when the reset signal falls from a positive value to zero or from a positive to a negative value.

either

Reset the state when the reset signal changes from a zero to a nonzero value or changes sign.

level

Reset the state when the reset signal is nonzero at the current time step or changes from nonzero at the previous time step to zero at the current time step.

level hold

Reset the state when the reset signal is nonzero at the current time step.

## Command-Line Information

**Parameter:** ExternalReset

**Type:** string

**Value:** 'none' | 'rising' | 'falling' | 'either' | 'level' | 'level hold'

**Default:** 'none'

## **Initial condition source**

Get the initial conditions of the states.

### **Settings**

**Default:** internal

internal

Get the initial conditions of the states from the **Initial condition** parameter.

external

Get the initial conditions of the states from an external block.

### **Tips**

Simulink software does not allow the initial condition of this block to be inf or NaN.

### **Dependencies**

Selecting internal enables the **Initial condition** parameter.

Selecting external disables the **Initial condition** parameter.

### **Command-Line Information**

**Parameter:** InitialConditionSource

**Type:** string

**Value:** 'internal' | 'external'

**Default:** 'internal'

## **Initial condition**

Specify the states' initial conditions.

### **Settings**

**Default:** 0

### **Tips**

Simulink software does not allow the initial condition of this block to be inf or NaN.

### **Dependencies**

Setting **Initial condition source** to internal enables this parameter.

Setting **Initial condition source** to external disables this parameter.

### **Command-Line Information**

**Parameter:** InitialCondition

**Type:** scalar or vector

**Value:** '0'

**Default:** '0'

# Integrator, Integrator Limited

---

## Limit output

Limit the block's output to a value between the **Lower saturation limit** and **Upper saturation limit** parameters.

### Settings

**Default:** Off



On

Limit the block's output to a value between the **Lower saturation limit** and **Upper saturation limit** parameters.



Off

Do not limit the block's output to a value between the **Lower saturation limit** and **Upper saturation limit** parameters.

### Dependencies

This parameter enables **Upper saturation limit**.

This parameter enables **Lower saturation limit**.

### Command-Line Information

**Parameter:** LimitOutput

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## **Upper saturation limit**

Specify the upper limit for the integral.

### **Settings**

**Default:** `inf`

**Minimum:** value of **Output minimum** parameter

**Maximum:** value of **Output maximum** parameter

### **Dependencies**

**Limit output** enables this parameter.

### **Command-Line Information**

**Parameter:** `UpperSaturationLimit`

**Type:** scalar or vector

**Value:** `'inf'`

**Default:** `'inf'`

# Integrator, Integrator Limited

---

## **Lower saturation limit**

Specify the lower limit for the integral.

### **Settings**

**Default:** `-inf`

**Minimum:** value of **Output minimum** parameter

**Maximum:** value of **Output maximum** parameter

### **Dependencies**

**Limit output** enables this parameter.

### **Command-Line Information**

**Parameter:** `LowerSaturationLimit`

**Type:** scalar or vector

**Value:** `'-inf'`

**Default:** `'-inf'`

## Show saturation port

Add a saturation output port to the block.

### Settings

**Default:** Off



On

Add a saturation output port to the block.



Off

Do not add a saturation output port to the block.

### Command-Line Information

**Parameter:** ShowSaturationPort

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## Show state port

Add an output port to the block for the block's state.

### Settings

**Default:** Off



On

Add an output port to the block for the block's state.



Off

Do not add an output port to the block for the block's state.

### Command-Line Information

**Parameter:** ShowStatePort

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## **Absolute tolerance**

Specify the absolute tolerance for computing block states.

### **Settings**

**Default:** auto

- You can enter auto, -1, a positive real scalar or vector.
- If you enter auto or -1, then Simulink uses the absolute tolerance value in the Configuration Parameters dialog box (see “Solver Pane”) to compute block states.
- If you enter a real scalar, then that value overrides the absolute tolerance in the Configuration Parameters dialog box for computing all block states.
- If you enter a real vector, then the dimension of that vector must match the dimension of the continuous states in the block. These values override the absolute tolerance in the Configuration Parameters dialog box.

### **Command-Line Information**

**Parameter:** AbsoluteTolerance

**Type:** string, scalar, or vector

**Value:** 'auto' | '-1' | any positive real scalar or vector

**Default:** 'auto'

# Integrator, Integrator Limited

---

## Ignore limit and reset when linearizing

Cause Simulink linearization commands to treat this block as unresettable and as having no limits on its output, regardless of the settings of the block's reset and output limitation options.

### Settings

**Default:** Off



On

Cause Simulink linearization commands to treat this block as unresettable and as having no limits on its output, regardless of the settings of the block's reset and output limitation options.



Off

Do not cause Simulink linearization commands to treat this block as unresettable and as having no limits on its output, regardless of the settings of the block's reset and output limitation options.

### Tip

Use this check box to linearize a model around an operating point that causes the integrator to reset or saturate.

### Command-Line Information

**Parameter:** IgnoreLimit

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

### Settings

**Default:** On

On

Use zero crossings to detect and take a time step at any of the following events: reset, entering or leaving an upper saturation state, entering or leaving a lower saturation state.

Off

Do not use zero crossings to detect and take a time step at any of the following events: reset, entering or leaving an upper saturation state, entering or leaving a lower saturation state.

If you select this check box, **Limit output**, and zero-crossing detection for the model as a whole, the Integrator block uses zero crossings as described.

### Command-Line Information

**Parameter:** ZeroCross

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'on'

# **Integrator, Integrator Limited**

---

## State Name (e.g., 'position')

Assign a unique name to each state.

### Settings

**Default:** ' '

If this field is blank, no name assignment occurs.

### Tips

- To assign a name to a single state, enter the name between quotes, for example, 'velocity'.
- To assign names to multiple states, enter a comma-delimited list surrounded by braces, for example, {'a', 'b', 'c'}. Each name must be unique.
- The state names apply only to the selected block.
- The number of states must divide evenly among the number of state names.
- You can specify fewer names than states, but you cannot specify more names than states.

For example, you can specify two names in a system with four states. The first name applies to the first two states and the second name to the last two states.

- To assign state names with a variable in the MATLAB workspace, enter the variable without quotes. A variable can be a string, cell array, or structure.

### Command-Line Information

**Parameter:** ContinuousStateAttributes

**Type:** string

**Value:** ' ' | user-defined

**Default:** ' '

## Examples

The following example models show how to use the Integrator block:

- sldemo\_hardstop

# Integrator, Integrator Limited

---

- sldemo\_suspn
- sldemo\_wheelspeed\_absbrake

## Characteristics

Direct Feedthrough	Yes, of the reset and external initial condition source ports
Sample Time	Continuous
Scalar Expansion	Yes, of parameters
States	Inherited from driving block or parameter
Dimensionalized	Yes
Multidimensionalized	No
Zero-Crossing Detection	Yes, if enabled and you select the <b>Limit output</b> check box, one for detecting reset, one each to detect upper and lower saturation limits, and one when leaving saturation


## See Also

Discrete-Time Integrator

**Purpose** Use precalculated index and fraction values to accelerate approximation of N-dimensional function

**Library** Lookup Tables

**Description** **How This Block Works with a Prelookup Block**

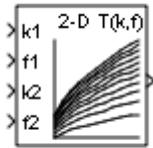

The Interpolation Using Prelookup block works best with the Prelookup block. The Prelookup block calculates the index and interval fraction that specify how its input value  $u$  relates to the breakpoint data set. You feed the resulting index and fraction values into an Interpolation Using Prelookup block to interpolate an  $n$ -dimensional table. These two blocks have distributed algorithms. When combined together, they perform the same operation as the integrated algorithm in the  $n$ -D Lookup Table block. However, the Prelookup and Interpolation Using Prelookup blocks offer greater flexibility that can provide more efficient simulation and code generation. For more information, see “Efficiency of Performance” in the Simulink documentation.

**Supported Block Operations**

To use the Interpolation Using Prelookup block, you specify a set of table data values directly on the dialog box or feed values into the  $T$  input port. Typically, these table values correspond to the breakpoint data sets specified in Prelookup blocks. The Interpolation Using Prelookup block generates output by looking up or estimating table values based on index and interval fraction values fed from Prelookup blocks. Labels for the index and interval fraction appear as  $k$  and  $f$  on the Interpolation Using Prelookup block icon.

# Interpolation Using Prelookup

When inputs for index and interval fraction...	The Interpolation Using Prelookup block...
Map to values in breakpoint data sets	Outputs the table value at the intersection of the row, column, and higher dimension breakpoints
Do not map to values in breakpoint data sets, but are within range	Interpolates appropriate table values, using the <b>Interpolation method</b> you select
Do not map to values in breakpoint data sets, and are out of range	Extrapolates the output value, using the <b>Extrapolation method</b> you select

## How The Block Interpolates a Subset of Table Data

You can use the **Number of sub-table selection dimensions** parameter to specify that interpolation occur only on a subset of the table data. To activate this interpolation mode, set this parameter to a positive integer. This value defines the number of dimensions to select, starting from the highest dimension of table data. Therefore, the value must be less than or equal to the **Number of table dimensions**.

Suppose that you have 3-D table data in your Interpolation Using Prelookup block. The following behavior applies.

Number of Selection Dimensions	Action by the Block	Block Appearance
0	Interpolates the entire table and does not activate subtable selection	Does not change
1	Interpolates the first two dimensions and	Displays an input port with the label <code>sel1</code> that

# Interpolation Using Prelookup

Number of Selection Dimensions	Action by the Block	Block Appearance
	selects the third dimension	you use to select and interpolate 2-D tables
2	Interpolates the first dimension and selects the second and third dimensions	Displays two input ports with the labels <code>sel1</code> and <code>sel2</code> that you use to select and interpolate 1-D tables

Subtable selection uses zero-based indexing. For an example of interpolating a subset of table data, type `sldemo_bpcheck` at the MATLAB command prompt.


## Data Type Support

The Interpolation Using Prelookup block accepts real signals of any numeric data type supported by Simulink software, except `Boolean`. The Interpolation Using Prelookup block supports fixed-point data types for signals, table data, and intermediate results.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Interpolation Using Prelookup

## Parameters and Dialog Box

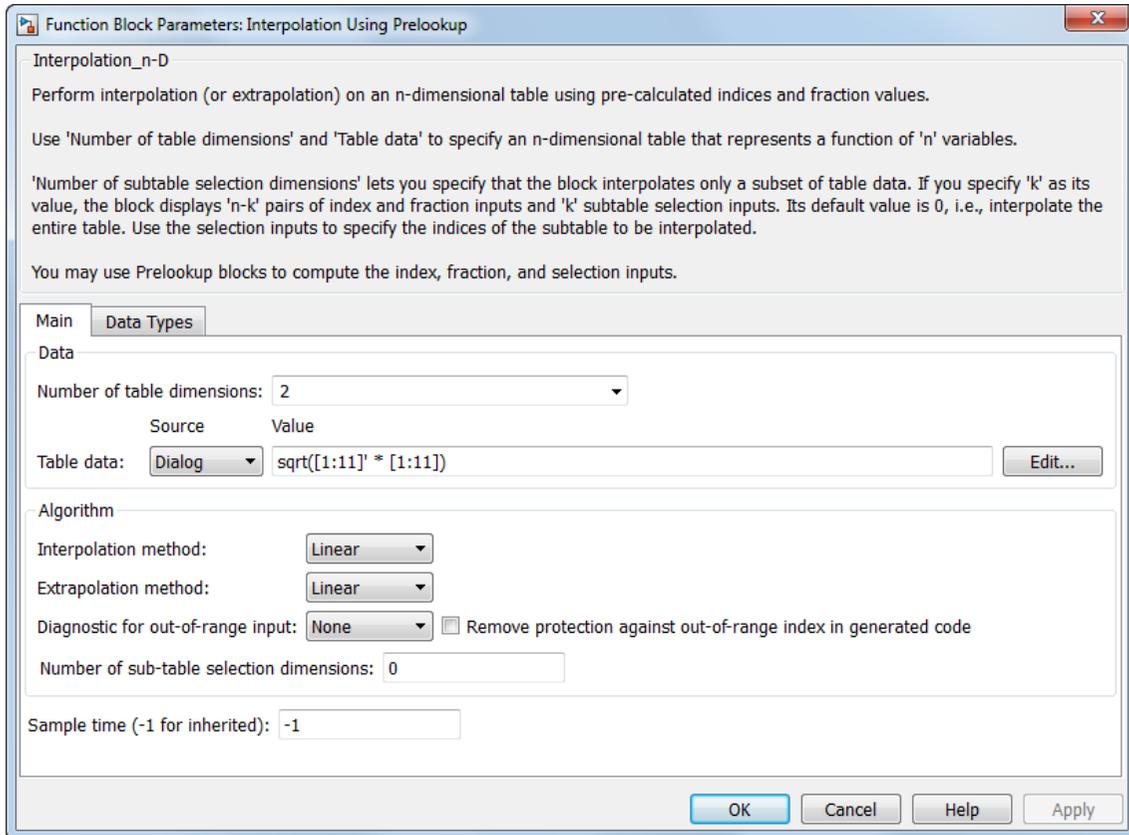

- “Main tab” on page 1-881
- “Data Types tab” on page 1-885

## Main tab

### Number of table dimensions

Specify the number of dimensions that the table data must have. This value defines the number of independent variables for the table. Enter an integer between 1 and 30 into this field.

### Table data

Specify whether to enter table data directly on the dialog box or to inherit the data from an input port.

- If you set **Source** to **Dialog**, enter table data in the edit field under **Value**. The size of the table data must match the **Number of table dimensions**. For this option, you specify table attributes on the **Data Types** pane.
- If you set **Source** to **Input port**, verify that an upstream signal supplies table data to the T input port. The size of the table data must match the **Number of table dimensions**. For this option, your block inherits table attributes from the T input port.

During block diagram editing, you can enter an empty matrix (specified as `[]`) or an undefined workspace variable in the edit field under **Value**. Use this behavior to postpone specifying a correctly dimensioned matrix for the table data and continue editing the block diagram. For information about how to construct multidimensional arrays in MATLAB, see “Multidimensional Arrays” in the MATLAB documentation.

Click the **Edit** button to open the Lookup Table Editor (see “Edit Existing LookupTables” in the Simulink documentation).

### Interpolation method

Select **Flat** or **Linear**. See “Interpolation Methods” in the Simulink documentation for more information.

# Interpolation Using Prelookup

---

## Extrapolation method

Select **Clip** or **Linear**. See “Extrapolation Methods” in the Simulink documentation for more information. The **Extrapolation method** parameter is visible only when you select **Linear** as the **Interpolation method** parameter.

The Interpolation Using Prelookup block does not support **Linear** extrapolation when the input or output signals specify integer or fixed-point data types.

## Valid index input may reach last index

Specify how block inputs for index (**k**) and interval fraction (**f**) access the last elements of  $n$ -dimensional table data. Index values are zero-based.

Check Box	Block Behavior
Selected	Returns the value of the last element in a dimension of its table when: <ul style="list-style-type: none"><li>• <b>k</b> indexes the last table element in the corresponding dimension</li><li>• <b>f</b> is 0</li></ul>
Cleared	Returns the value of the last element in a dimension of its table when: <ul style="list-style-type: none"><li>• <b>k</b> indexes the next-to-last table element in the corresponding dimension</li><li>• <b>f</b> is 1</li></ul>

This check box is visible only when:

- **Interpolation method** is **Linear**.
- **Extrapolation method** is **Clip**.

---

**Tip** When you select **Valid index input may reach last index** for an Interpolation Using Prelookup block, you must also select **Use last breakpoint for input at or above upper limit** for all Prelookup blocks that feed it. This action allows the blocks to use the same indexing convention when accessing the last elements of their breakpoint and table data sets.

---

## Diagnostic for out-of-range input

Specify whether to produce a warning or error when the input  $k$  or  $f$  is out of range. Options include:

- None — no warning or error
- Warning — display a warning in the MATLAB Command Window and continue the simulation
- Error — halt the simulation and display an error in the Diagnostic Viewer

## Remove protection against out-of-range index in generated code

Specify whether or not to include code that checks for out-of-range index inputs.

Check Box	Result	When to Use
Selected	Generated code does not include conditional statements to check for out-of-range index inputs.	For code efficiency
Cleared	Generated code includes conditional statements to check for out-of-range index inputs.	For safety-critical applications

# Interpolation Using Prelookup

---

Depending on your application, you can run the following Model Advisor checks to verify the usage of this check box:

- **By Product > Embedded Coder > Identify lookup table blocks that generate expensive out-of-range checking code**
- **By Product > Simulink Verification and Validation > Modeling Standards > DO-178C/DO-331 Checks > Check usage of lookup table blocks**

For more information about the Model Advisor, see “Consult the Model Advisor” in the Simulink documentation.

This check box has no effect on generated code when one of the following is true:

- The Prelookup block feeds index values to the Interpolation Using Prelookup block.

Because index values from the Prelookup block are always valid, no check code is necessary.

- The data type of the input  $k$  restricts the data to valid index values.

For example, unsigned integer data types guarantee nonnegative index values. Therefore, unsigned input values of  $k$  do not require check code for negative values.

## **Number of sub-table selection dimensions**

Specify the number of dimensions of the subtable that the block uses to compute the output. Follow these rules:

- To enable subtable selection, enter a positive integer.

This integer must be less than or equal to the **Number of table dimensions**.

- To disable subtable selection, enter 0 to interpolate the entire table.

For more information, see “How The Block Interpolates a Subset of Table Data” on page 1-878.

## Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation for more information.

## Data Types tab

---

**Note** The parameters for table attributes (data type, minimum, and maximum) are not available when you set **Source** to **Input port**. In this case, the block inherits all table attributes from the T input port.

---

## Table data > Data Type

Specify the table data type. You can set it to:

- A rule that inherits a data type, for example, **Inherit: Same as output**
- The name of a built-in data type, for example, **single**
- The name of a data type object, for example, a **Simulink.NumericType** object
- An expression that evaluates to a data type, for example, **fixdt(1,16,0)**

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the table data type.

# Interpolation Using Prelookup

---

---

**Tip** Specify a table data type different from the output data type for these cases:

- Lower memory requirement for storing table data that uses a smaller type than the output signal
  - Sharing of prescaled table data between two Interpolation Using Prelookup blocks with different output data types
  - Sharing of custom storage table data in Simulink Coder generated code for blocks with different output data types
- 

## Table data > Minimum

Specify the minimum value for table data. The default value is [] (unspecified).

## Table data > Maximum

Specify the maximum value for table data. The default value is [] (unspecified).

## Intermediate results > Data Type

Specify the intermediate results data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Same as output`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the intermediate results data type.

---

**Tip** Use this parameter to specify higher precision for internal computations than for table data or output data.

---

## Output > Data Type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the output data type.

See “Specify Block Output Data Types” in the *Simulink User’s Guide* for more information.

## Output > Minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output > Maximum

Specify the maximum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

# Interpolation Using Prelookup

---

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Internal rule priority

Specify the internal rule for intermediate calculations. Select **Speed** for faster calculations. If you do, a loss of accuracy might occur, usually up to 2 bits.

## Lock data type settings against changes by the fixed-point tools

Select to lock all data type settings of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Lock the Output Data Type Setting” in the Fixed-Point Designer documentation.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding” in the Fixed-Point Designer documentation.

Block parameters always round to the nearest representable value. To control the rounding of a block parameter, enter an expression using a MATLAB rounding function in the mask field.

## Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the

# Interpolation Using Prelookup


Action	Reasons for Taking This Action	What Happens for Overflows	Example
			check box selected, the block output saturates at 127. Similarly, the block output saturates at a minimum output value of -128.
Do not select this check box.	<p>You want to optimize efficiency of your generated code.</p> <p>You want to avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.</p>	Overflows wrap to the appropriate value that is representable by the data type.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value as <code>int8</code> , which can produce an unintended result. For example, a block result of 130 (binary 1000 0010) expressed as <code>int8</code> , is -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

# Interpolation Using Prelookup

## Examples

In the following model, a Constant block feeds the table data values to the T input port of the Interpolation Using Prelookup block.

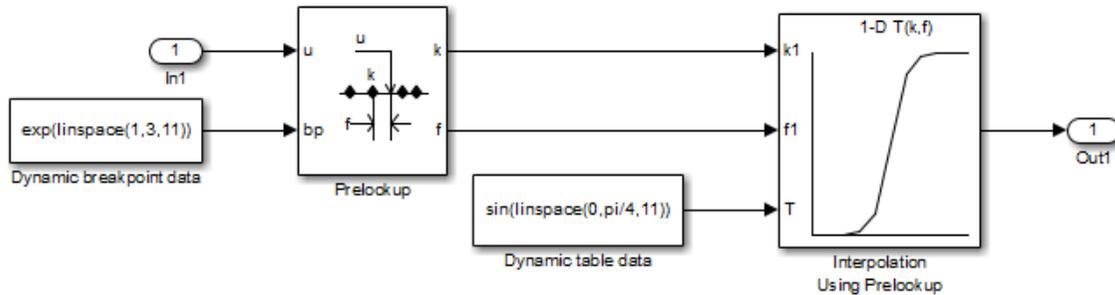

The Interpolation Using Prelookup block inherits the following table attributes from the T input port:

Table Attribute	Value
Minimum	-Inf
Maximum	Inf
Data type	single

Similarly, a Constant block feeds the breakpoint data set to the bp input port of the Prelookup block, which inherits the following breakpoint attributes:

Breakpoint Attribute	Value
Minimum	-Inf
Maximum	Inf
Data type	single

Simulink uses double-precision, floating-point data to perform the computations in this model. However, the model stores the breakpoint and table data as single-precision, floating-point data. Using a

lower-precision data type to store breakpoint and table data reduces the memory requirement.

For other examples, see “Prelookup and Interpolation Blocks” in the Simulink documentation.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Dimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Prelookup


# Interpreted MATLAB Function

---

**Purpose** Apply MATLAB function or expression to input

**Library** User-Defined Functions

## Description

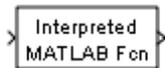

The Interpreted MATLAB Function block applies the specified MATLAB function or expression to the input. The output of the function must match the output dimensions of the block or an error occurs.

Some valid expressions for this block are:

```
sin
atan2(u(1), u(2))
u(1)^u(2)
```


---

**Note** This block is slower than the Fcn block because it calls the MATLAB parser during each integration step. Consider using built-in blocks (such as the Fcn block or the Math Function block) instead. Alternatively, you can write the function as a MATLAB S-function or MEX-file S-function, then access it using the S-Function block.

---

## Data Type Support

The Interpreted MATLAB Function block accepts one real or complex input of type `double` and generates real or complex output of type `double`, depending on the setting of the **Output signal type** parameter.

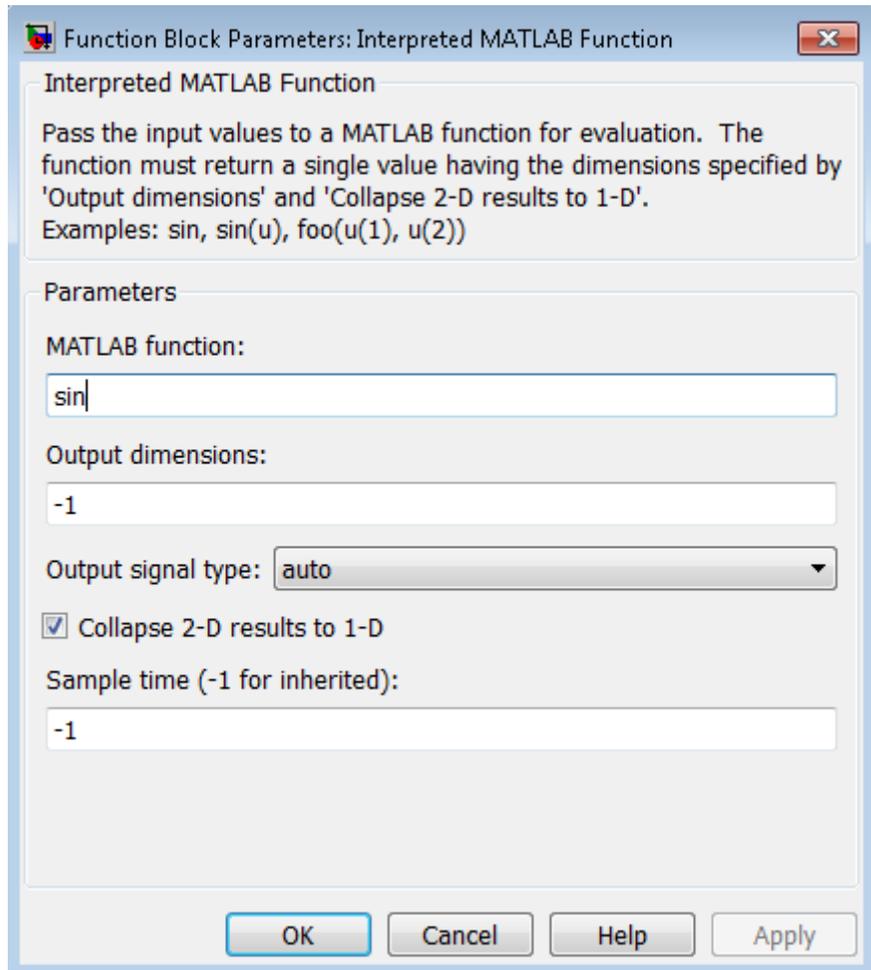

## Parameters and Dialog Box

### MATLAB function

Specify the function or expression. If you specify a function only, it is not necessary to include the input argument in parentheses.

# Interpreted MATLAB Function

---

## Output dimensions

Specify the dimensions of the signal output by this block. If the output dimensions are to be the same as the dimensions of the input signal, specify `-1`. Otherwise, enter the dimensions of the output signal, for example, `2` for a two-element vector. In either case, the output dimensions must match the dimensions of the value returned by the function or expression in the **MATLAB function** field.

## Output signal type

Specify the output signal type of the block as `real`, `complex`, or `auto`. A value of `auto` sets the output type to be the same as the type of the input signal.

## Collapse 2-D results to 1-D

Select this check box to output a 2-D array as a 1-D array containing the 2-D array's elements in column-major order.

## Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to `-1`. See "Specify Sample Time" in the online documentation for more information.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from the driving block
Scalar Expansion	N/A
Dimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Determine if signal is in specified interval

**Library** Logic and Bit Operations

## Description



The Interval Test block outputs TRUE if the input is between the values specified by the **Lower limit** and **Upper limit** parameters. The block outputs FALSE if the input is outside those values. The output of the block when the input is equal to the **Lower limit** or the **Upper limit** is determined by whether the boxes next to **Interval closed on left** and **Interval closed on right** are selected in the dialog box.

## Data Type Support


The Interval Test block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

In this case, the **Upper limit** and **Lower limit** values must be of the same enumerated type.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Interval Test

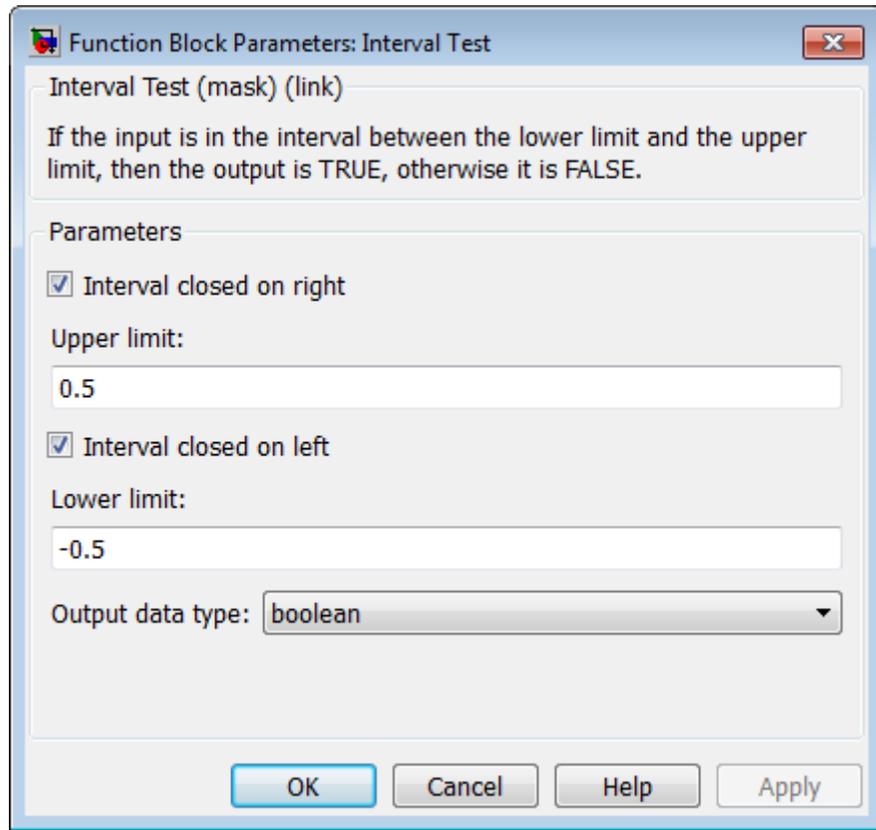

## Parameters and Dialog Box

### Interval closed on right

When you select this check box, the **Upper limit** is included in the interval for which the block outputs TRUE.

### Upper limit

The upper limit of the interval for which the block outputs TRUE.

### Interval closed on left

When you select this check box, the **Lower limit** is included in the interval for which the block outputs TRUE.

**Lower limit**

The lower limit of the interval for which the block outputs TRUE.

**Output data type**

Select the output data type: `boolean` or `uint8`.

**Characteristics**

Direct Feedthrough	Yes
Scalar Expansion	Yes
Zero-Crossing Detection	No

**See Also**

Interval Test Dynamic

# Interval Test Dynamic

---

**Purpose** Determine if signal is in specified interval

**Library** Logic and Bit Operations

**Description** The Interval Test Dynamic block outputs TRUE if the input is between the values of the external signals up and lo. The block outputs FALSE if the input is outside those values. The output of the block when the input is equal to the signal up or the signal lo is determined by whether the boxes next to **Interval closed on left** and **Interval closed on right** are selected in the dialog box.




**Data Type Support** The Interval Test Dynamic block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

In this case, all inputs must be of the same enumerated type.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

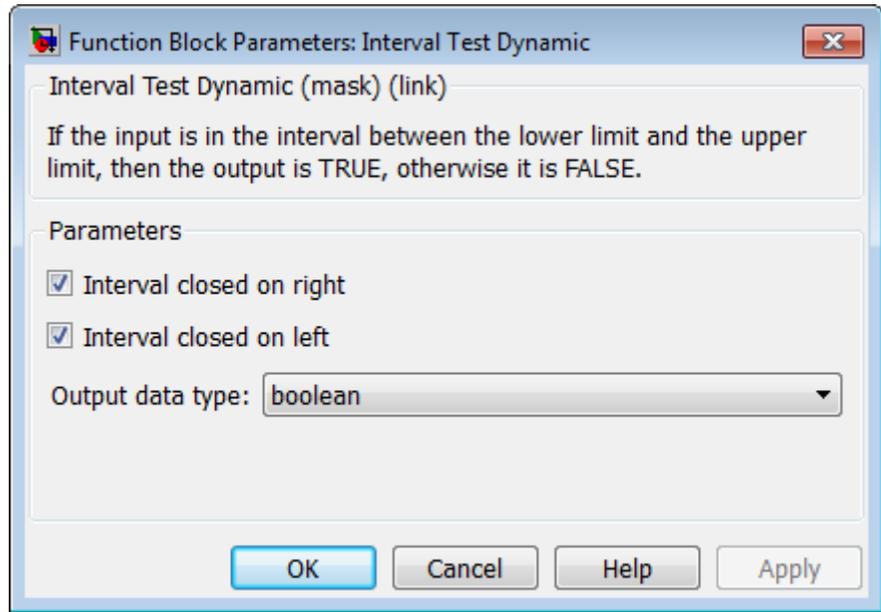

## Parameters and Dialog Box

### Interval closed on right

When you select this check box, the value of the signal connected to the block's "up" input port is included in the interval for which the block outputs TRUE.

### Interval closed on left

When you select this check box, the value of the signal connected to the block's "lo" input port is included in the interval for which the block outputs TRUE.

### Output data type

Select the output data type: boolean or uint8.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes
Zero-Crossing Detection	No

# Interval Test Dynamic

---

## **See Also**

Interval Test

**Purpose** Use Level-2 MATLAB S-function in model

**Library** User-Defined Functions

## Description



This block allows you to use a Level-2 MATLAB S-function (see “Write Level-2 MATLAB S-Functions”) in a model. To do this, create an instance of this block in the model. Then enter the name of the Level-2 MATLAB S-function in the **S-function name** field of the block’s parameter dialog box.

---

**Note** Use the S-Function block to include a Level-1 MATLAB S-function in a block.

---


If the Level-2 MATLAB S-function defines any additional parameters, you can enter them in the **Parameters** field of the block’s parameter dialog box. Enter the parameters as MATLAB expressions that evaluate to their values in the order defined by the MATLAB S-function. Use commas to separate each expression.

If a model includes a Level-2 MATLAB S-Function block, and an error occurs in the S-function, the Level-2 MATLAB S-Function block displays MATLAB stack trace information for the error in a dialog box. Click **OK** to close the dialog box.

## Data Type Support

Depends on the MATLAB file that defines the behavior of a particular instance of this block.

# Level-2 MATLAB S-Function

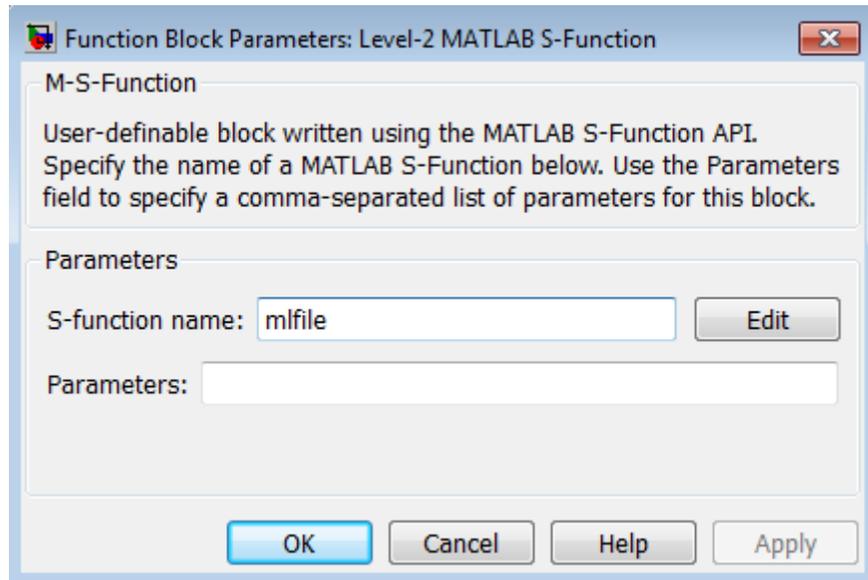

## Parameters and Dialog Box

### S-function name

Specify the name of a MATLAB function that defines the behavior of this block. The MATLAB function must follow the Level-2 standard for writing MATLAB S-functions (see “Write Level-2 MATLAB S-Functions” for details).

### Parameters

Specify values of the parameters of this block.

## Characteristics

Direct Feedthrough	Depends on the MATLAB S-function
Sample Time	Depends on the MATLAB S-function
Scalar Expansion	Depends on the MATLAB S-function
Dimensionalized	Depends on the MATLAB S-function
Multidimensionalized	Yes
Zero Crossing	No

**Purpose** Perform specified logical operation on input

**Library** Logic and Bit Operations

**Description** The Logical Operator block performs the specified logical operation on its inputs. An input value is TRUE (1) if it is nonzero and FALSE (0) if it is zero.




You select the Boolean operation connecting the inputs with the **Operator** parameter list. If you select **rectangular** as the **Icon shape** property, the block updates to display the name of the selected operator. The supported operations are given below.

Operation	Description
AND	TRUE if all inputs are TRUE
OR	TRUE if at least one input is TRUE
NAND	TRUE if at least one input is FALSE
NOR	TRUE when no inputs are TRUE
XOR	TRUE if an odd number of inputs are TRUE
NXOR	TRUE if an even number of inputs are TRUE
NOT	TRUE if the input is FALSE

If you select **distinctive** as the **Icon shape**, the block's appearance indicates its function. Simulink software displays a distinctive shape for the selected operator, conforming to the IEEE Standard Graphic Symbols for Logic Functions:

# Logical Operator

---

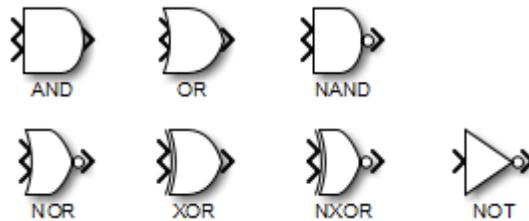

The number of input ports is specified with the **Number of input ports** parameter. The output type is specified with the **Output data type** parameter. An output value is 1 if TRUE and 0 if FALSE.

---

**Note** The output data type should represent zero exactly. Data types that satisfy this condition include signed and unsigned integers, and any floating-point data type.

---

The size of the output depends on input vector size and the selected operator:

- If the block has more than one input, any nonscalar inputs must have the same dimensions. For example, if any input is a 2-by-2 array, all other nonscalar inputs must also be 2-by-2 arrays.

Scalar inputs are expanded to have the same dimensions as the nonscalar inputs.

If the block has more than one input, the output has the same dimensions as the inputs (after scalar expansion) and each output element is the result of applying the specified logical operation to the corresponding input elements. For example, if the specified operation is AND and the inputs are 2-by-2 arrays, the output is a 2-by-2 array whose top left element is the result of applying AND to the top left elements of the inputs, etc.

- For a single vector input, the block applies the operation (except the NOT operator) to all elements of the vector. The output is always a scalar.
- The NOT operator accepts only one input, which can be a scalar or a vector. If the input is a vector, the output is a vector of the same size containing the logical complements of the input vector elements.

When configured as a multi-input XOR gate, this block performs an addition- modulo-two operation as mandated by the IEEE Standard for Logic Elements.

## Data Type Support


The Logical Operator block accepts real signals of any numeric data type that Simulink supports, including fixed-point data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.


# Logical Operator

## Parameters and Dialog Box

The **Main** pane of the Logical Operator block dialog box appears as follows:

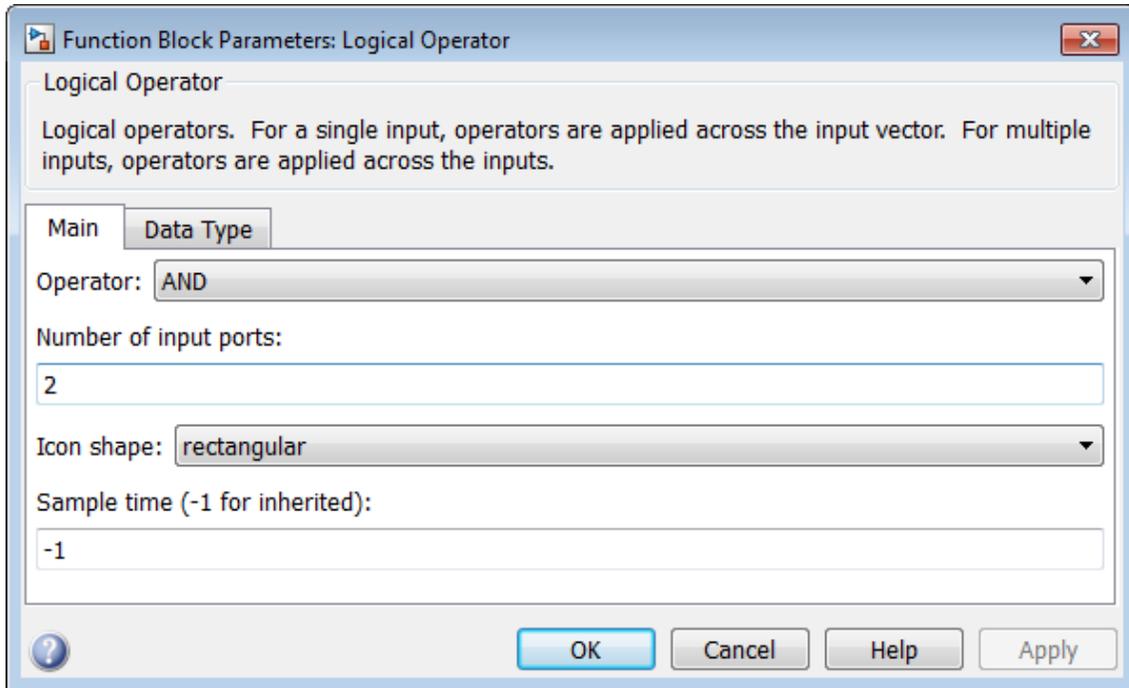

The **Data Type** pane of the Logical Operator block dialog box appears as follows:

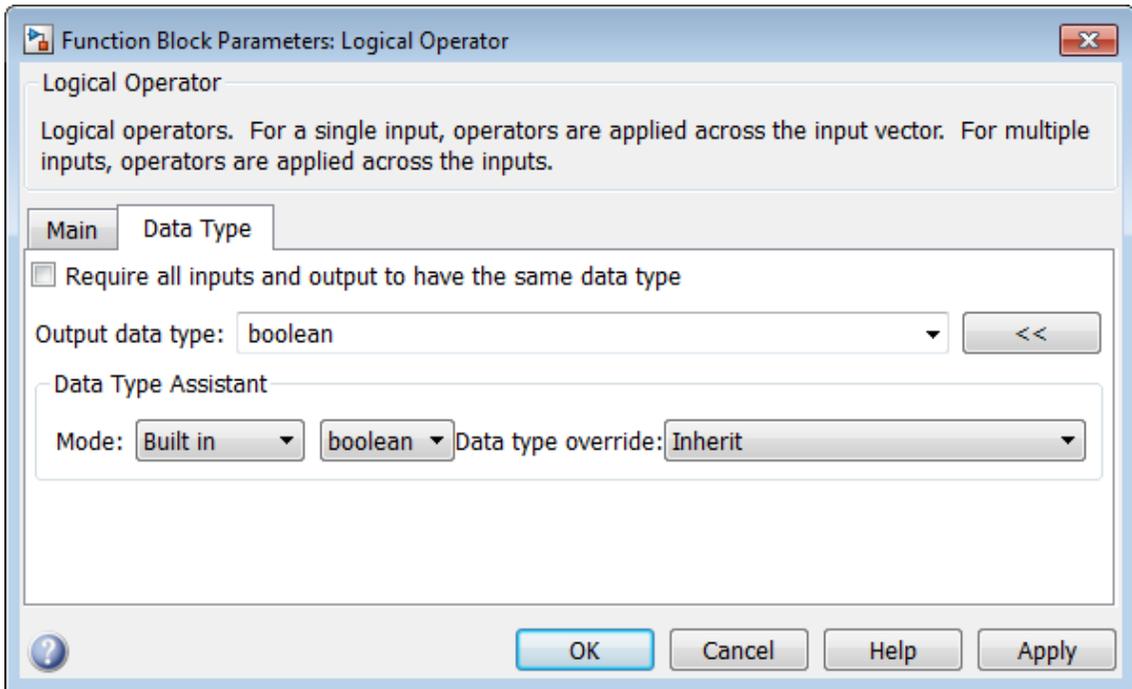

# Logical Operator

---

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

## Operator

Select logical operator to apply to block inputs.

### Settings

**Default:** AND

AND

TRUE if all inputs are TRUE

OR

TRUE if at least one input is TRUE

NAND

TRUE if at least one input is FALSE

NOR

TRUE when no inputs are TRUE

XOR

TRUE if an odd number of inputs are TRUE

NXOR

TRUE if an even number of inputs are TRUE

NOT

TRUE if the input is FALSE

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Logical Operator

---

## **Number of input ports**

Specify number of block inputs.

## **Settings**

**Default:** 2

- The value must be appropriate for the selected operator.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Icon shape**

Specify shape of the block icon.

## **Settings**

**Default:** rectangular

rectangular

Result in a rectangular block that displays the name of the selected operator.

distinctive

Use the graphic symbol for the selected operator as specified by the IEEE standard.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Logical Operator

---

## **Sample time (-1 for inherited)**

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### **Settings**

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Require all inputs and output to have the same data type**

Require all inputs and the output to have the same data type.

### **Settings**

**Default:** Off



On

Require all inputs and the output to have the same data type.



Off

Do not require all inputs and the output to have the same data type.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Logical Operator

---

## Output data type

Specify the output data type.

### Settings

**Default:** boolean

**Inherit:** Logical (see Configuration Parameters: Optimization)

Uses the **Implement logic signals as Boolean data** configuration parameter (see “Implement logic signals as Boolean data (vs. double)”) to specify the output data type.

---

**Note** This option supports models created before the `boolean` option was available. Use one of the other options, preferably `boolean`, for new models.

---

`boolean`

Specifies output data type is `boolean`.

`fixdt(1,16)`

Specifies output data type is `fixdt(1,16)`.

`<data type expression>`

Uses the name of a data type object, for example, `Simulink.NumericType`.

---

**Tip** To enter a built-in data type (`double`, `single`, `int8`, `uint8`, `int16`, `uint16`, `int32`, or `uint32`), enclose the expression in single quotes. For example, enter `'double'` instead of `double`.

---

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Built in

Inherit

Specifies inheritance rules for data types. Selecting Inherit enables Logical (see Configuration Parameters: Optimization).

Built in

Specifies built-in data types. Selecting Built in enables boolean.

Fixed point

Specifies fixed-point data types.

Expression

Specifies expressions that evaluate to data types.

## **Dependency**

Clicking the **Show data type assistant** button enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is Built in or Fixed point.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > Fixed point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Logical Operator

---

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

## Settings

**Default:** Integer

Integer

Specify integer. This setting has the same result as specifying a binary point location and setting fraction length to 0.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## See Also


See “Specifying a Fixed-Point Data Type”.

# Logical Operator

## Examples

### Logical Operator Block: AND Operator

In the `sldemo_fuelsys` model, the `fuel_rate_control/airflow_calc` subsystem uses a Logical Operator block as an AND operator:

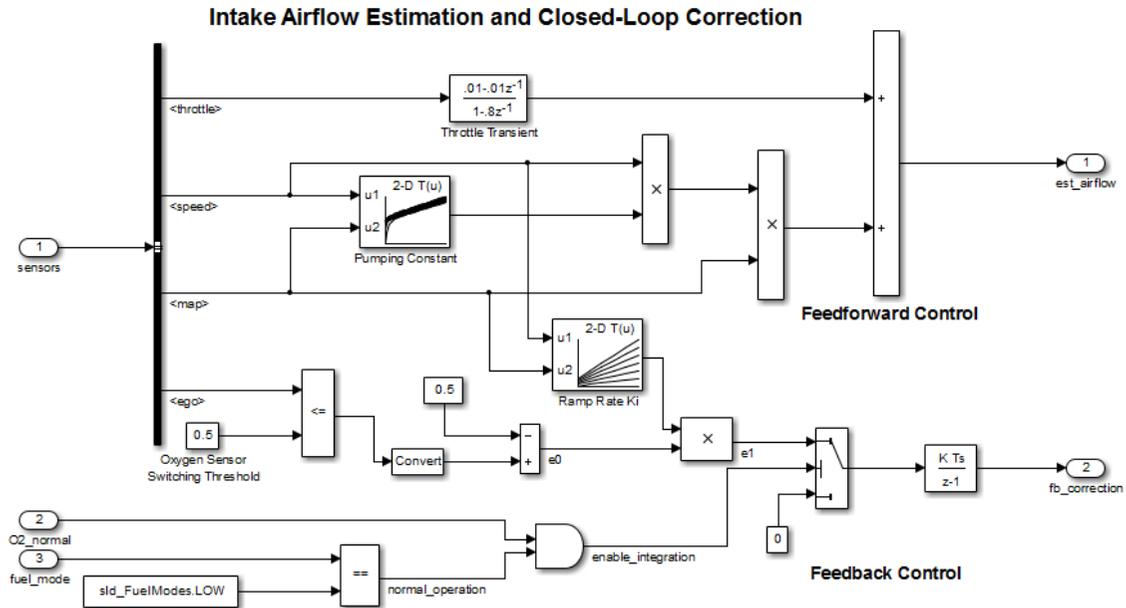

The output of the Logical Operator block (the `enable_integration` signal) feeds into the control port of a Switch block that activates feedback control.


When the Logical Operator block output is...	Feedback control...
1	Occurs
0	Does not occur

## Logical Operator Block: OR Operator

In the sldemo\_hardstop model, the Logical Operator block appears as an OR operator:



### Friction Model with Hard Stops

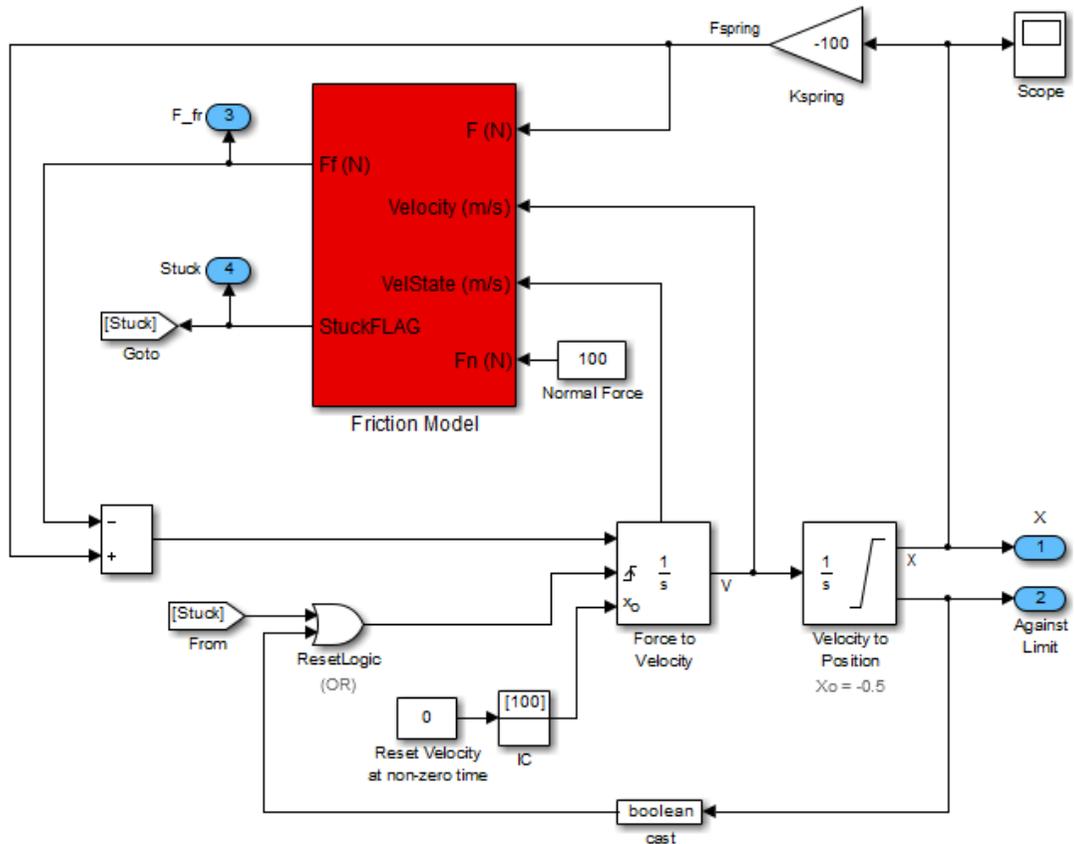

# Logical Operator

---

The output of the Logical Operator block feeds into the trigger port of an Integrator block to control whether velocity resets to the initial condition.


<b>When the Logical Operator block output changes...</b>	<b>The Integrator block...</b>
From 0 to 1	Resets the velocity
From 1 to 0	Does not reset velocity

## Logical Operator Block: NOT Operator

In the `sldemo_clutch` model, the Logical Operator block appears as a NOT operator:



### Building a Clutch Lock-Up Model An Example of Enabled Subsystems

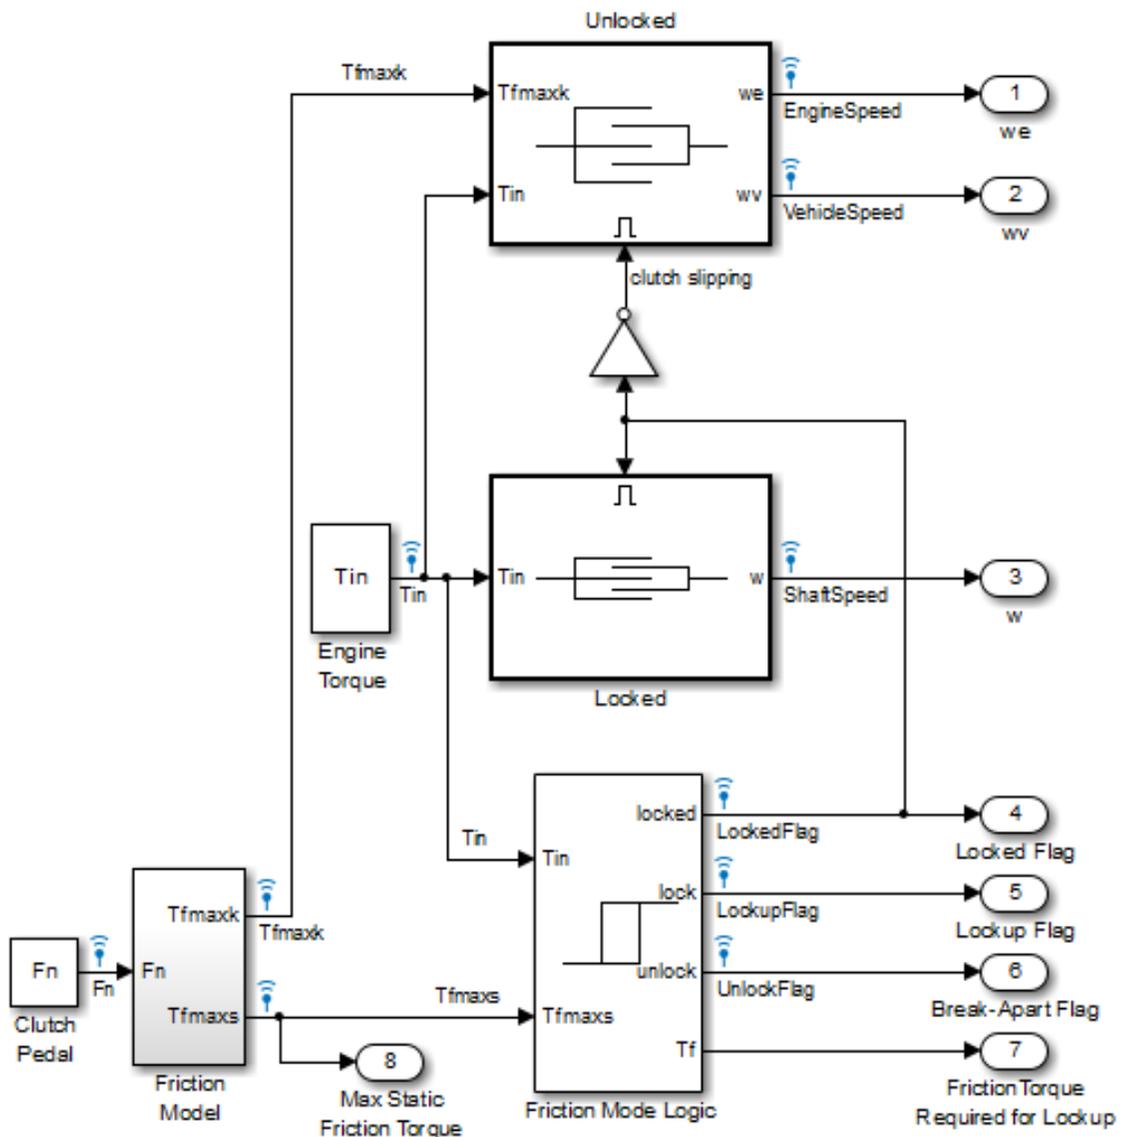

# Logical Operator

---

The output of the Logical Operator block (the clutch slipping signal) feeds into the trigger port of an enabled subsystem.

When the Logical Operator block outputs...	The Unlocked subsystem is...
1	Enabled
0	Disabled


## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of inputs
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Approximate one-dimensional function

**Library** Lookup Tables

**Description** The 1-D Lookup Table block is a one-dimensional version of the n-D Lookup Table block.

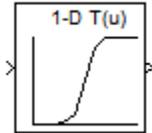

## 2-D Lookup Table

---

<b>Purpose</b>	Approximate two-dimensional function
<b>Library</b>	Lookup Tables
<b>Description</b>	The 2-D Lookup Table block is a two-dimensional version of the n-D Lookup Table block.

**Purpose** Approximate N-dimensional function

**Library** Lookup Tables


**Description** **Supported Block Operations**

The n-D Lookup Table block evaluates a sampled representation of a function in N variables

$$y = F(x_1, x_2, x_3, \dots, x_N)$$

where the function  $F$  can be empirical. The block maps inputs to an output value by looking up or interpolating a table of values you define with block parameters. The block supports flat (constant), linear, and cubic-spline interpolation methods. You can apply these methods to a table of any dimension from 1 through 30.

In the following block, the first input identifies the first dimension (row) breakpoints, the second input identifies the second dimension (column) breakpoints, and so on.

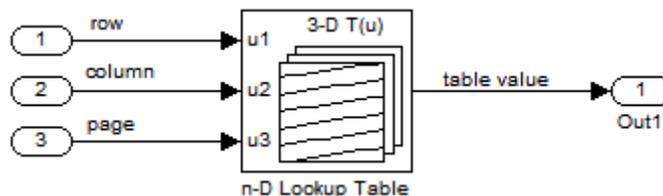

See “How to Rotate a Block” in the Simulink documentation for a description of the port order for various block orientations.

**Specification of Breakpoint and Table Data**

The following block parameters define the breakpoint and table data.

# n-D Lookup Table

---

Block Parameter	Purpose
Number of table dimensions	Specifies the number of dimensions of your lookup table.
Breakpoints	Specifies a breakpoint vector that corresponds to each dimension of your lookup table.
Table data	Defines the associated set of output values.

---

**Tip** Evenly spaced breakpoints can make the generated code division-free. For more information, see `fixpt_evenspace_cleanup` in the Simulink documentation and “Identify questionable fixed-point operations” in the Simulink Coder documentation.

---

## How the Block Generates Output

The n-D Lookup Table block generates output by looking up or estimating table values based on the input values:

When block inputs...	The n-D Lookup Table block...
Match the values of indices in breakpoint data sets	Outputs the table value at the intersection of the row, column, and higher dimension breakpoints
Do not match the values of indices in breakpoint data sets, but are within range	Interpolates appropriate table values, using the <b>Interpolation method</b> you select
Do not match the values of indices in breakpoint data sets, and are out of range	Extrapolates the output value, using the <b>Extrapolation method</b> you select

## Other Blocks That Perform Equivalent Operations

You can use the Interpolation Using Prelookup block with the Prelookup block to perform the equivalent operation of one n-D Lookup Table block. This combination of blocks offers greater flexibility that can result in more efficient simulation performance for linear interpolations.

When the lookup operation is an array access that does not require interpolation, use the Direct Lookup Table (n-D) block. For example, if you have an integer value  $k$  and you want the  $k$ th element of a table,  $y = \text{table}(k)$ , interpolation is unnecessary.

## Data Type Support

The n-D Lookup Table block supports all numeric data types that Simulink supports, including fixed-point data types. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.


For cubic spline interpolation and linear extrapolation modes, the following parameters must use the same floating-point type:

- Table data
- Breakpoints
- Fraction
- Intermediate results
- Output

Inputs for indexing must be real, but table data can be complex.

# n-D Lookup Table

## Parameters and Dialog Box

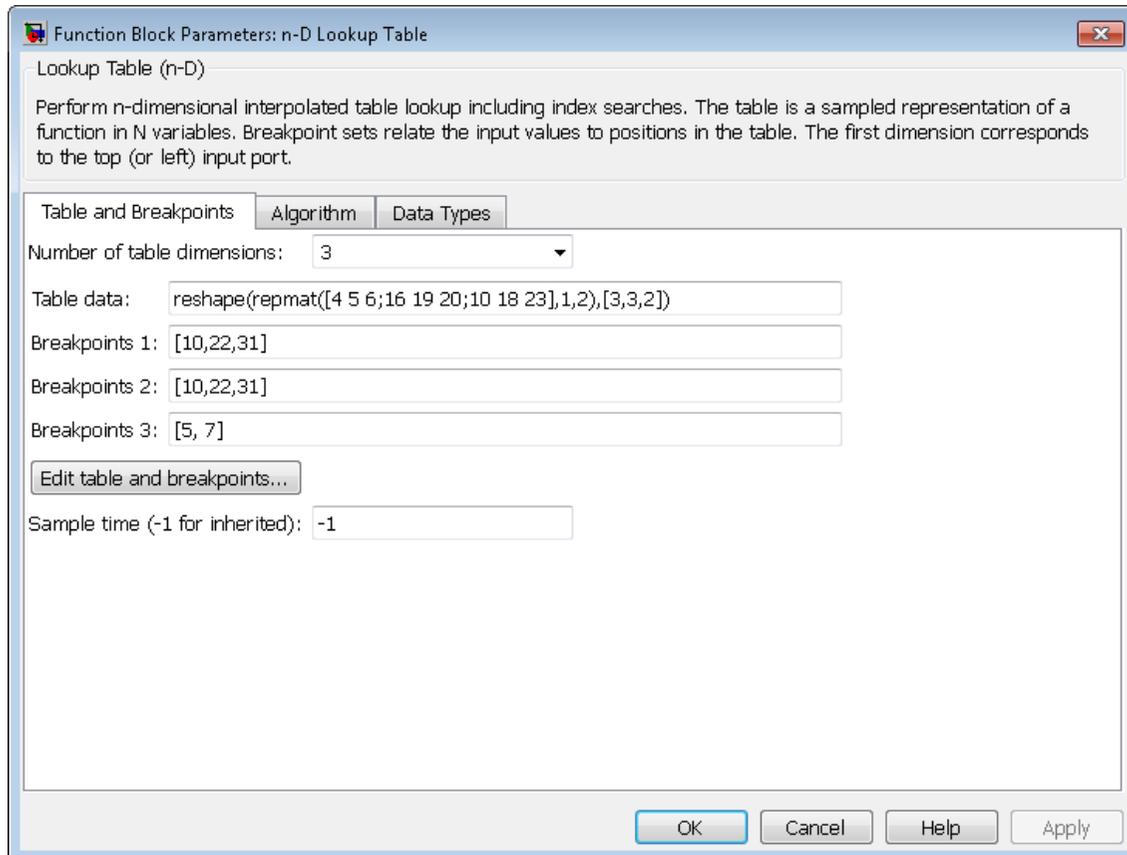

- “Table and Breakpoints tab” on page 1-931
- “Algorithm tab” on page 1-932
- “Data Types tab” on page 1-936

## Table and Breakpoints tab

### Number of table dimensions

Enter the number of dimensions of the lookup table by specifying an integer from 1 to 30. This parameter determines:

- The number of independent variables for the table and the number of block inputs
- The number of breakpoint sets to specify

### Table data

Enter the table of output values.

During simulation, the matrix size must match the dimensions defined by the **Number of table dimensions** parameter. However, during block diagram editing, you can enter an empty matrix (specified as `[]`) or an undefined workspace variable. This technique lets you postpone specifying a correctly dimensioned matrix for the table data and continue editing the block diagram. For information about how to construct multidimensional arrays in MATLAB, see “Multidimensional Arrays” in the MATLAB online documentation.

### Breakpoints

In each **Breakpoints** row, enter the breakpoint set that corresponds to each dimension of table data. For each dimension, specify breakpoints as a 1-by-n or n-by-1 vector whose values are strictly monotonically increasing.

### Edit table and breakpoints

Click this button to open the Lookup Table Editor. For more information, see “Edit Existing LookupTables” in the Simulink documentation.

### Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation.

# n-D Lookup Table

---

## Algorithm tab

### Interpolation method

Select **Flat**, **Linear**, or **Cubic spline**. See “Interpolation Methods” in the Simulink documentation for more information.

If you select **Cubic spline**, the block supports only scalar signals. The other interpolation methods support nonscalar signals.

### Extrapolation method

Select **Clip**, **Linear**, or **Cubic spline**. See “Extrapolation Methods” in the Simulink documentation for more information.

To select **Cubic spline** for **Extrapolation method**, you must also select **Cubic spline** for **Interpolation method**.


### Use last table value for inputs at or above last breakpoint

Using this check box, specify the indexing convention that the block uses to address the last element of a breakpoint set and its corresponding table value. This check box is relevant if the input is larger than the last element of the breakpoint data. This parameter is visible only when:

- **Interpolation method** is **Linear**.
- **Extrapolation method** is **Clip**.

Check Box	Block Uses Index Of The...	Interval Fraction
Selected	Last element of breakpoint data on the <b>Table and Breakpoints</b> tab	0
Cleared	Next-to-last element of breakpoint data on the <b>Table and Breakpoints</b> tab	1

Given an input  $u$  within range of a breakpoint set  $bp$ , the interval fraction  $f$ , in the range  $0 \leq f \leq 1$ , is computed as shown below.

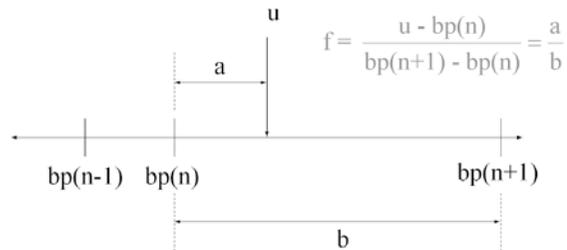

Suppose the breakpoint set is [1 4 5] and input  $u$  is 5.5. If you select this check box, the index is that of the last element (5) and the interval fraction is 0. If you clear this checkbox, the index is that of the next-to-last element (4) and the interval fraction is 1.

### Diagnostic for out-of-range input

Specify whether to produce a warning or error when the input is out of range. Options include:

- None — no warning or error
- Warning — display a warning in the MATLAB Command Window and continue the simulation
- Error — halt the simulation and display an error in the Diagnostic Viewer

### Remove protection against out-of-range input in generated code

Specify whether or not to include code that checks for out-of-range breakpoint input values.

# n-D Lookup Table

Check Box	Result	When to Use
Selected	Generated code does not include conditional statements to check for out-of-range breakpoint inputs.	For code efficiency
Cleared	Generated code includes conditional statements to check for out-of-range breakpoint inputs.	For safety-critical applications

Depending on your application, you can run the following Model Advisor checks to verify the usage of this check box:

- **By Product > Embedded Coder > Identify lookup table blocks that generate expensive out-of-range checking code**
- **By Product > Simulink Verification and Validation > Modeling Standards > DO-178C/DO-331 Checks > Check usage of lookup table blocks**

For more information about the Model Advisor, see “Consult the Model Advisor” in the Simulink documentation.

## Index search method

Select Evenly spaced points, Linear search, or Binary search. Each search method has speed advantages in different circumstances:

- For evenly spaced breakpoint sets (for example, 10, 20, 30, and so on), you achieve optimal speed by selecting Evenly spaced points to calculate table indices.

This algorithm uses only the first two breakpoints of a set to determine the offset and spacing of the remaining points.

- For unevenly spaced breakpoint sets, follow these guidelines:
  - If input signals do not vary much between time steps, selecting **Linear search** with **Begin index search using previous index result** produces the best performance.
  - If input signals jump more than one or two table intervals per time step, selecting **Binary search** produces the best performance.

A suboptimal choice of index search method can lead to slow performance of models that rely heavily on lookup tables.

---

**Note** The generated code stores only the first breakpoint, the spacing, and the number of breakpoints when:

- The breakpoint data is not tunable.
  - The index search method is **Evenly spaced points**.
- 

### **Begin index search using previous index result**

Select this check box when you want the block to start its search using the index found at the previous time step. For inputs that change slowly with respect to the interval size, enabling this option can improve performance. Otherwise, the linear search and binary search methods can take longer, especially for large breakpoint sets.

### **Use one input port for all input data**

Select this check box to use only one input port that expects a signal that is N elements wide for an N-dimensional table. This option is useful for removing line clutter on a block diagram with many lookup tables.

# n-D Lookup Table

---

---

**Note** When you select this check box, one input port with the label `u` appears on the block.

---

## Support tunable table size in code generation

Select this check box to enable tunable table size in the generated code. This option enables you to change the size and values of the lookup table and breakpoint data without regenerating or recompiling the code.

If you set **Interpolation method** to `Cubic spline`, this check box is not available.

## Maximum indices for each dimension

Specify the maximum index values for each table dimension using zero-based indexing. You can specify a scalar or vector of positive integer values using the following data types:

- Built-in floating-point types: `double` and `single`
- Built-in integer types: `int8`, `int16`, `int32`, `uint8`, `uint16`, and `uint32`

Here are some examples of valid specifications:

- `[4 6]` for a 5-by-7 table
- `[int8(2) int16(5) int32(9)]` for a 3-by-6-by-10 table

This parameter is available when you select **Support tunable table size in code generation**.

## Data Types tab

---


**Note** The dialog box can expand to show additional data type options. Up to 30 breakpoint data type specifications can appear.

---

## Table data > Data Type

Specify the table data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Same as output`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

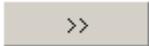Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the table data type.

---

**Tip** Specify a table data type different from the output data type for these cases:

- Lower memory requirement for storing table data that uses a smaller type than the output signal
  - Sharing of prescaled table data between two n-D Lookup Table blocks with different output data types
  - Sharing of custom storage table data in the generated code for blocks with different output data types
- 

## Table data > Minimum

Specify the minimum value for table data. The default value is [] (unspecified).

## Table data > Maximum

Specify the maximum value for table data. The default value is [] (unspecified).

## Breakpoints > Data Type

Specify the data type for a set of breakpoint data. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Same as corresponding input`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the breakpoint data type.

See “Specify Data Types Using Data Type Assistant” in the Simulink documentation for more information.

---

**Tip** Specify a breakpoint data type different from the corresponding input data type for these cases:

- Lower memory requirement for storing breakpoint data that uses a smaller type than the input signal
  - Sharing of prescaled breakpoint data between two n-D Lookup Table blocks with different input data types
  - Sharing of custom storage breakpoint data in the generated code for blocks with different input data types
- 

## Breakpoints > Minimum

Specify the minimum value that a set of breakpoint data can have. The default value is `[]` (unspecified).

## Breakpoints > Maximum

Specify the maximum value that a set of breakpoint data can have. The default value is [] (unspecified).

## Fraction > Data Type

Specify the fraction data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via internal rule`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the fraction data type.

See “Specify Data Types Using Data Type Assistant” in the Simulink documentation for more information.

## Intermediate results > Data Type

Specify the intermediate results data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Same as output`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

# n-D Lookup Table

---

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the intermediate results data type.

---

**Tip** Use this parameter to specify higher (or lower) precision for internal computations than for table data or output data.

---

## Output > Data Type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the output data type.

See “Specify Block Output Data Types” for more information.

## Output > Minimum

Specify the minimum value that the block outputs. The default value is `[]` (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## **Output > Maximum**

Specify the maximum value that the block outputs. The default value is [ ] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## **Internal rule priority**

Specify the internal rule for intermediate calculations. Select **Speed** for faster calculations. If you do, a loss of accuracy might occur, usually up to 2 bits.

## **Require all inputs to have the same data type**

Select to require all inputs to have the same data type.

## **Lock data type settings against changes by the fixed-point tools**

Select to lock all data type settings of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Fixed-Point Tool” and “Preparation for Fixed-Point Conversion” in the Fixed-Point Designer documentation.

## **Integer rounding mode**

Specify the rounding mode for fixed-point lookup table calculations that occur during simulation or execution of code generated from the model. For more information, see “Rounding” in the Fixed-Point Designer documentation.

This option does not affect rounding of values of block parameters. Simulink rounds such values to the nearest representable integer value. To control the rounding of a block parameter, enter an expression using a MATLAB rounding function into the edit field on the block dialog box.

# n-D Lookup Table

## Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	An overflow associated with a signed 8-bit integer can saturate to -128 or 127.
Do not select this check box.	You want to optimize efficiency of your generated code. You want to avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.	Overflows wrap to the appropriate value that is representable by the data type.	The number 130 does not fit in a signed 8-bit integer and wraps to -126.

---

**Tip** If you save your model as version R2009a or earlier, this check box setting has no effect and no saturation code appears. This behavior preserves backward compatibility.

---

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Examples

### Interpolation and Extrapolation Behavior

For an example that illustrates linear interpolation and extrapolation methods of this block, see “Create a Logarithm Lookup Table” in the Simulink documentation.

For an example of entering breakpoint and table data, see “Entering Data in a Block Parameter Dialog Box” in the Simulink documentation.

### Tunable Table Size in the Generated Code

Suppose that you have a lookup table and want to make the size tunable in the generated code. Assume that:

- You define a `Simulink.Parameter` structure in the preload function of your model:

```
p = Simulink.Parameter;  
p.Value.MaxIdx = [2 2];  
p.Value.BP1 = [1 2 3];  
p.Value.BP2 = [1 4 16];  
p.Value.Table = [4 5 6; 16 19 20; 10 18 23];  
p.DataType = 'Bus: slLookupTable';  
p.CoderInfo.StorageClass = 'ExportedGlobal';  
  
% Create bus object slBus1 from MATLAB structure  
Simulink.Bus.createObject(p.Value);  
slLookupTable = slBus1;  
slLookupTable.Elements(1).DataType = 'uint32';
```

- The following block parameters apply in the n-D Lookup Table block dialog box:

Parameter	Value
Number of table dimensions	2
Table data	p.Table
Breakpoints 1	p.BP1

# n-D Lookup Table

---

Parameter	Value
Breakpoints 2	p.BP2
Support tunable table size in code generation	on
Maximum indices for each dimension	p.MaxIdx

The generated *model\_types.h* header file contains a type definition that looks something like this:

```
typedef struct {
    uint32_T MaxIdx[2];
    real_T BP1[3];
    real_T BP2[3];
    real_T Table[9];
} s1LookupTable;
```

The generated *model.c* file contains code that looks something like this:

```
/* Exported block parameters */
s1LookupTable p = {
    { 2U, 2U },

    { 1.0, 2.0, 3.0 },

    { 1.0, 4.0, 16.0 },

    { 4.0, 16.0, 10.0, 5.0, 19.0, 18.0, 6.0, 20.0, 23.0 }
};

/* More code */

/* Model output function */
static void ex_lut_nd_tunable_table_output(int_T tid)
{
```

```

/* Lookup_n-D: '<Root>/n-D Lookup Table' incorporates:
 * Inport: '<Root>/In1'
 * Inport: '<Root>/In2'
 */
Y = look2_bin1cpw(U1, U2, p.BP1, p.BP2, p.Table, ...
p.MaxIdx, p.MaxIdx[0] + 1U);

/* Outport: '<Root>/Out1' */
ex_lut_nd_tunable_table_Y.Out1 = Y;

/* tid is required for a uniform function interface.
 * Argument tid is not used in the function. */
UNUSED_PARAMETER(tid);
}

```

The highlighted line of code specifies a tunable table size for the lookup table. You can change the size and values of the lookup table and breakpoint data without regenerating or recompiling the code.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Dimensionalized	Yes, if you do not select Cubic spline for <b>Interpolation method</b>
Zero-Crossing Detection	No

## See Also

Prelookup, Interpolation Using Prelookup

# Lookup Table Dynamic

---

**Purpose** Approximate one-dimensional function using dynamic table

**Library** Lookup Tables

**Description** **How This Block Differs from Other Lookup Table Blocks**



The Lookup Table Dynamic block computes an approximation of a function  $y = f(x)$  using `xdat` and `ydat` vectors. The lookup method can use interpolation, extrapolation, or the original values of the input.

Using the Lookup Table Dynamic block, you can change the table data without stopping the simulation. For example, you can incorporate new table data if the physical system you are simulating changes.

## Inputs for Breakpoint and Table Data

The `xdat` vector is the breakpoint data, which must be *strictly monotonically increasing*. The value of the next element in the vector must be greater than the value of the preceding element after conversion to a fixed-point data type. Due to quantization, `xdat` can be strictly monotonic for a floating-point data type, but not after conversion to a fixed-point data type.

The `ydat` vector is the table data, which is an evaluation of the function at the breakpoint values.

---

**Note** The inputs to `xdat` and `ydat` cannot be scalar (one-element array) values. If you provide a scalar value to either of these inputs, you see an error upon simulation. Provide a 1-by-n vector to both the `xdat` and `ydat` inputs.

---

## Lookup Table Definition

You define the lookup table by feeding `xdat` and `ydat` as 1-by-n vectors to the block. To reduce ROM usage in the generated code for this block, you can use different data types for `xdat` and `ydat`. However, these restrictions apply:

- The xdat breakpoint data and the x input vector must have the same sign, bias, and fractional slope. Also, the precision and range for x must be greater than or equal to the precision and range for xdat.
- The ydat table data and the y output vector must have the same sign, bias, and fractional slope.

---

**Tip** Breakpoints with even spacing can make Simulink Coder generated code division-free. For more information, see `fixpt_evenspace_cleanup` in the Simulink documentation and “Identify questionable fixed-point operations” in the Simulink Coder documentation.

---

## How the Block Generates Output

The block uses the input values to generate output using the method you select for **Lookup Method**:

Lookup Method	Block Action
Interpolation-Extrapolation	<p>Performs linear interpolation and extrapolation of the inputs.</p> <ul style="list-style-type: none"><li>• If the input matches a breakpoint, the output is the corresponding element in the table data.</li><li>• If the input does not match a breakpoint, the block performs linear interpolation between two elements of the table to determine the output. If the input falls outside the range of breakpoint values, the block extrapolates using the first two or last two points.</li></ul>

# Lookup Table Dynamic

---

Lookup Method	Block Action
	<hr/> <b>Note</b> If you select this lookup method, Simulink Coder software cannot generate code for this block. <hr/>
Interpolation-Use End Values (default)	Performs linear interpolation but does not extrapolate outside the end points of the breakpoint data. Instead, the block uses the end values.
Use Input Nearest	Finds the element in <code>xdat</code> nearest the current input. The corresponding element in <code>ydat</code> is the output.
Use Input Below	Finds the element in <code>xdat</code> nearest and below the current input. The corresponding element in <code>ydat</code> is the output. If there is no element in <code>xdat</code> below the current input, the block finds the nearest element.
Use Input Above	Finds the element in <code>xdat</code> nearest and above the current input. The corresponding element in <code>ydat</code> is the output. If there is no element in <code>xdat</code> above the current input, the block finds the nearest element.

---

**Note** The Use Input Nearest, Use Input Below, and Use Input Above methods perform the same action when the input `x` matches a breakpoint value.

---

Some continuous solvers subdivide the simulation time span into major and minor time steps. A minor time step is a subdivision of the major time step. The solver produces a result at each major time step and uses results at minor time steps to improve the accuracy of the result at the major time step. For continuous solvers, the output of the Lookup Table

Dynamic block can appear like a stair step because the signal is fixed in minor time step to avoid incorrect results. For more information about the effect of solvers on block output, see “Solvers” in the Simulink documentation.

## Data Type Support


The Lookup Table Dynamic block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Lookup Table Dynamic

## Parameters and Dialog Box

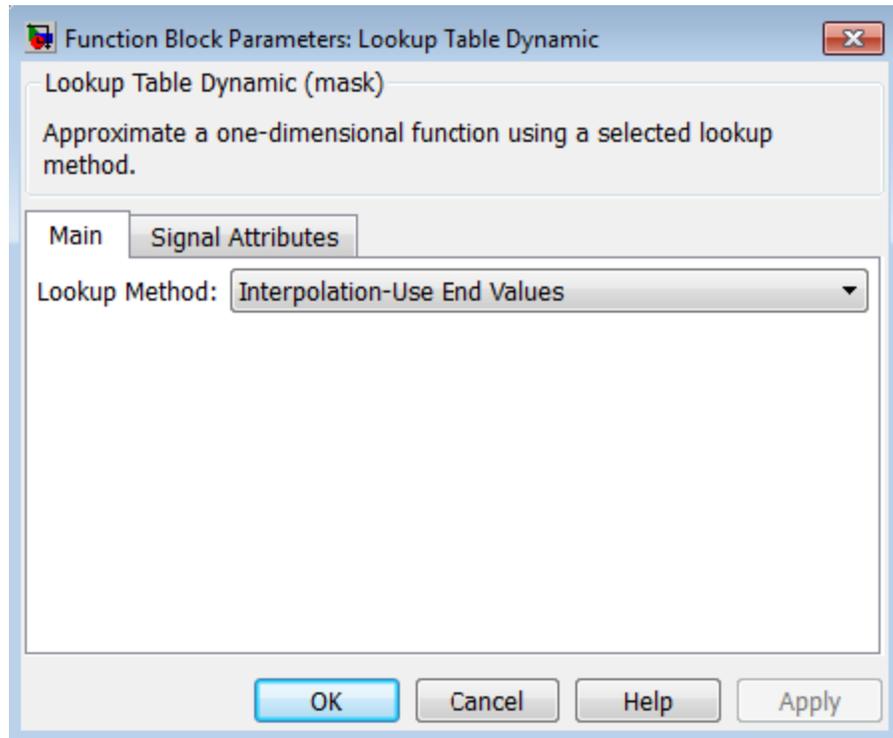

- “Main tab” on page 1-950
- “Signal Attributes tab” on page 1-950

### Main tab

#### Lookup Method

Specify the lookup method. For details, see “How the Block Generates Output” on page 1-947.

### Signal Attributes tab

#### Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt('double')`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” for more information.

### **Lock output data type setting against changes by the fixed-point tools**

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

### **Integer rounding mode**

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

### **Saturate to max or min when overflows occur**

Select to have overflows saturate to the maximum or minimum value that the data type can represent. Otherwise, overflows wrap.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

# Lookup Table Dynamic

---

## Examples

For an example of...	See...
Breakpoint and table data entry	“Entering Data Using Inports of the Lookup Table Dynamic Block”
Block output for different lookup methods	“Example Output for Lookup Methods”

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	No
Zero-Crossing Detection	No

## See Also

n-D Lookup Table

**Purpose** Convert magnitude and/or a phase angle signal to complex signal

**Library** Math Operations

**Description** **Supported Operations**



The Magnitude-Angle to Complex block converts magnitude and phase angle inputs to a complex output. The angle input must be in radians.

The block supports the following combinations of input dimensions when there are two block inputs:

- Two inputs of equal dimensions
- One scalar input and the other an n-dimensional array

If the block input is an array, the output is an array of complex signals. The elements of a magnitude input vector map to the magnitudes of the corresponding complex output elements. Similarly, the elements of an angle input vector map to the angles of the corresponding complex output elements. If one input is a scalar, it maps to the corresponding component (magnitude or angle) of all the complex output signals.

### Effect of Out-of-Range Input on CORDIC Approximations

If you use the CORDIC approximation method (see “Definitions” on page 1-954), the block input for phase angle has the following restrictions:

- For signed fixed-point types, the input angle must fall within the range  $[-2\pi, 2\pi)$  radians.
- For unsigned fixed-point types, the input angle must fall within the range  $[0, 2\pi)$  radians.

# Magnitude-Angle to Complex

---

The following table summarizes what happens for an out-of-range input:

Block Usage	Effect of Out-of-Range Input
Simulation	An error appears.
Generated code	Undefined behavior occurs.
Accelerator modes	

Ensure that you use an in-range input for the Magnitude-Angle to Complex block when you use the CORDIC approximation. Avoid relying on undefined behavior for generated code or Accelerator modes.

## Definitions

### CORDIC

CORDIC is an acronym for COordinate Rotation DIGital Computer. The Givens rotation-based CORDIC algorithm is one of the most hardware-efficient algorithms available because it requires only iterative shift-add operations (see References). The CORDIC algorithm eliminates the need for explicit multipliers. Using CORDIC, you can calculate various functions, such as sine, cosine, arc sine, arc cosine, arc tangent, and vector magnitude. You can also use this algorithm for divide, square root, hyperbolic, and logarithmic functions.

Increasing the number of CORDIC iterations can produce more accurate results, but doing so also increases the expense of the computation and adds latency.

## Data Type Support

The block accepts real input signals of the following data types:

- Floating point
- Fixed point (only when **Approximation method** is CORDIC)

The following restrictions also apply:


- If one input uses a floating-point type, the other input must use the same data type. For example, both signals must be `double` or `single`.

# Magnitude-Angle to Complex

- If one input uses a fixed-point type, the other input must also use a fixed-point type.

## Parameters and Dialog Box

The dialog box for this block appears as follows:

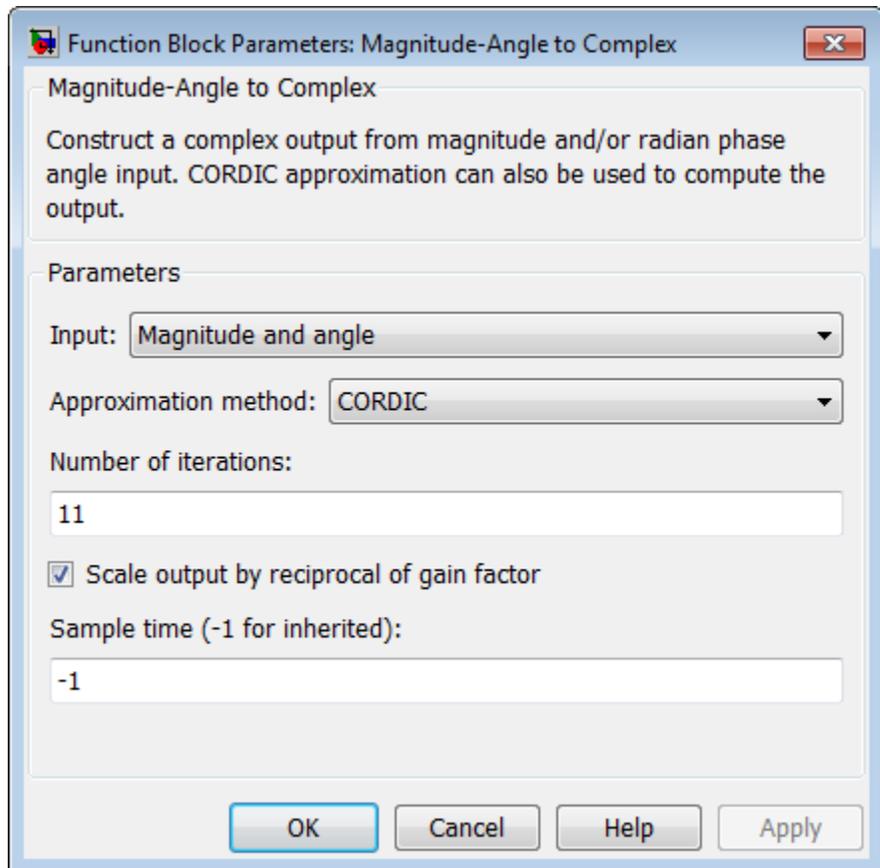

### Input

Specify the kind of input: a magnitude input, an angle input, or both.

# Magnitude-Angle to Complex

## Angle (Magnitude)

Input	What to Specify
Magnitude	The constant phase angle of the output signal in radians
Angle	The constant magnitude of the output signal

This parameter is not available when **Input** is Magnitude and angle.

## Approximation method

Specify the type of approximation for computing output.

Approximation Method	Data Types Supported	When to Use This Method
None (default)	Floating point	You want to use the default Taylor series algorithm.
CORDIC	Floating point and fixed point	You want a fast, approximate calculation.

When you use the CORDIC approximation, follow these guidelines:

- For signed fixed-point types, the input angle must fall within the range  $[-2\pi, 2\pi)$  radians.
- For unsigned fixed-point types, the input angle must fall within the range  $[0, 2\pi)$  radians.

# Magnitude-Angle to Complex

The block uses the following data type propagation rules:

Data Type of Magnitude Input	Approximation Method	Data Type of Complex Output
Floating point	None or CORDIC	Same as input
Signed, fixed point	CORDIC	$\text{fixdt}(1, WL + 2, FL)$ where $WL$ and $FL$ are the word length and fraction length of the magnitude
Unsigned, fixed point	CORDIC	$\text{fixdt}(1, WL + 3, FL)$ where $WL$ and $FL$ are the word length and fraction length of the magnitude

## Number of iterations

Specify the number of iterations to perform the CORDIC algorithm. The default value is 11.

Data Type of Block Inputs	Value You Can Specify
Floating point	A positive integer
Fixed point	A positive integer that does not exceed the word length of the magnitude input or the word length of the phase angle input, whichever value is smaller

Entering a value that is not a positive integer causes an error.

This parameter is available when you set **Approximation method** to CORDIC.

# Magnitude-Angle to Complex

---

## Scale output by reciprocal of gain factor

Select this check box to scale the real and imaginary parts of the complex output by a factor of  $(1/\text{CORDIC gain})$ . This value depends on the number of iterations you specify. As the number of iterations goes up, the value approaches 1.647.

This check box is selected by default, which leads to a more numerically accurate result for the complex output,  $X + iY$ . However, scaling the output adds two extra multiplication operations, one for  $X$  and one for  $Y$ .

This parameter is available when you set **Approximation method** to CORDIC.

## Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified by the <b>Sample time</b> parameter
Scalar Expansion	Yes, of the input when the function requires two inputs
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## References

[1] Volder, JE. “The CORDIC Trigonometric Computing Technique.” *IRE Transactions on Electronic Computers*. Vol. EC-8, September 1959, pp. 330–334.

[2] Andraka, R. “A survey of CORDIC algorithm for FPGA based computers.” *Proceedings of the 1998 ACM/SIGDA sixth international*

*symposium on Field programmable gate arrays*. Feb. 22–24, 1998, pp. 191–200.

[3] Walther, J.S. “A Unified Algorithm for Elementary Functions.” Hewlett-Packard Company, Palo Alto. Spring Joint Computer Conference, 1971, pp. 379–386. (from the collection of the Computer History Museum). [www.computer.org/csdl/proceedings/afips/1971/5077/00/50770379.pdf](http://www.computer.org/csdl/proceedings/afips/1971/5077/00/50770379.pdf)

[4] Schelin, Charles W. “Calculator Function Approximation.” *The American Mathematical Monthly*. Vol. 90, No. 5, May 1983, pp. 317–325.

## See Also

Complex to Magnitude-Angle

# Manual Switch

---

**Purpose** Switch between two inputs


**Library** Signal Routing

**Description** The Manual Switch block is a toggle switch that selects one of its two inputs to pass through to the output. To toggle between inputs, double-click the block. The block propagates the selected input to the output, while the block discards the unselected input. You can interactively control the signal flow by setting the switch before you start the simulation or by changing the switch while the simulation is executing. The Manual Switch block retains its current state when you save the model.



**Data Type Support** The Manual Switch block accepts real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

**Parameters and Dialog Box** Double-clicking the Manual Switch block toggles the input. To open the block dialog box, right-click the block and select **Block Parameters**.

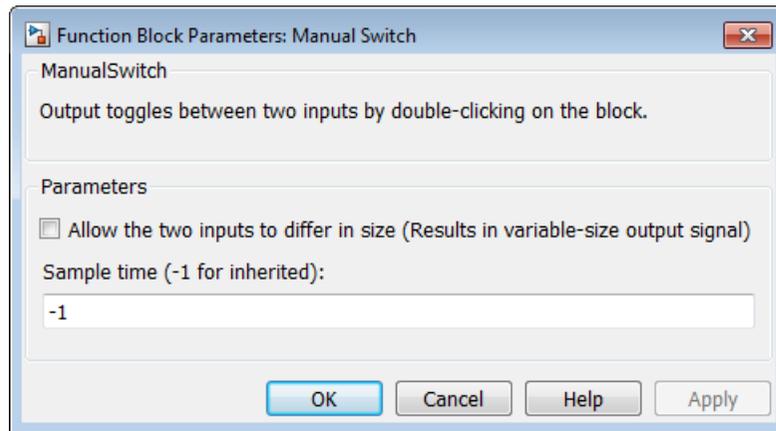

- “Allow the two inputs to differ in size” on page 1-962

- “Sample time (-1 for inherited)” on page 1-2024

# Manual Switch

---

## Allow the two inputs to differ in size

Select this check box to allow input signals with different sizes.

### Settings

**Default:** Off



On

Block allows input signals with different sizes, and propagates the input signal size to the output signal.



Off

Block expands scalar inputs to have the same dimensions as nonscalar inputs. For more information, see “Scalar Expansion of Inputs and Parameters”.

### Command-Line Information

**Parameter:** varsize

**Type:** string

**Value:** 'on' | 'off'

**Default:** 'off'

## Sample time (-1 for inherited)

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### Settings

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Examples

The following models show how to use the Manual Switch block:

- `sldemo_auto_climatecontrol`
- `sldemo_fuelsys`
- `sldemo_doublebounce`

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

# Math Function

**Purpose** Perform mathematical function

**Library** Math Operations

**Description** The Math Function block performs numerous common mathematical functions.



---

**Tip** To perform square root calculations, use the Sqrt block.

---

You can select one of the following functions from the **Function** parameter list.

Function	Description	Mathematical Expression	MATLAB Equivalent
exp	Exponential	$e^u$	exp
log	Natural logarithm	$\ln u$	log
10^u	Power of base 10	$10^u$	10.^u (see power)
log10	Common (base 10) logarithm	$\log u$	log10
magnitude^2	Complex modulus	$ u ^2$	(abs(u)).^2 (see abs and power)
square	Power 2	$u^2$	u.^2 (see power)
pow	Power	$u^v$	power
conj	Complex conjugate		conj
reciprocal	Reciprocal	$1/u$	1./u (see rdivide)
hypot	Square root of sum squares	$(u^2+v^2)^{0.5}$	hypot

Function	Description	Mathematical Expression	MATLAB Equivalent
rem	Remainder after division	—	rem
mod	Modulus after division	—	mod
transpose	Transpose	$u^T$	<code>u.'</code> (see “Array vs. Matrix Operations”)
hermitian	Complex conjugate transpose	$u^H$	<code>u'</code> (see “Array vs. Matrix Operations”)

The block output is the result of the operation of the function on the input or inputs. The functions support the following types of operations.

Function	Scalar Operations	Element-Wise Vector and Matrix Operations	Vector and Matrix Operations
exp	yes	yes	—
log	yes	yes	—
$10^u$	yes	yes	—
log10	yes	yes	—
magnitude <sup>2</sup>	yes	yes	—
square	yes	yes	—
pow	yes	yes	—
conj	yes	yes	—
reciprocal	yes	yes	—

# Math Function

---

Function	Scalar Operations	Element-Wise Vector and Matrix Operations	Vector and Matrix Operations
hypot	yes, on two inputs	yes, on two inputs (two vectors or two matrices of the same size, a scalar and a vector, or a scalar and a matrix)	—
rem	yes, on two inputs	yes, on two inputs (two vectors or two matrices of the same size, a scalar and a vector, or a scalar and a matrix)	—
mod	yes, on two inputs	yes, on two inputs (two vectors or two matrices of the same size, a scalar and a vector, or a scalar and a matrix)	—
transpose	yes	—	yes
hermitian	yes	—	yes

The name of the function appears on the block. The appropriate number of input ports appears automatically.

---

**Tip** Use the Math Function block instead of the Fcn block when you want vector or matrix output, because the Fcn block produces only scalar output.

---

## Data Type Support

The following table shows the input data types that each function of the block can support.

Function	single	double	boolean	built-in integer	fixed point
exp	yes	yes	—	—	—
log	yes	yes	—	—	—
10 <sup>u</sup>	yes	yes	—	—	—
log10	yes	yes	—	—	—
magnitude <sup>2</sup>	yes	yes	—	yes	yes
square	yes	yes	—	yes	yes
pow	yes	yes	—	—	—
conj	yes	yes	—	yes	yes
reciprocal	yes	yes	—	yes	yes
hypot	yes	yes	—	—	—
rem	yes	yes	—	yes	—
mod	yes	yes	—	yes	—
transpose	yes	yes	yes	yes	yes
hermitian	yes	yes	—	yes	yes


All supported modes accept both real and complex inputs, except for **reciprocal**, which does not accept complex fixed-point inputs.

The block output is real or complex, depending on what you select for **Output signal type**.

# Math Function

## Parameters and Dialog Box

The **Main** pane of the Math Function block dialog box appears as follows:

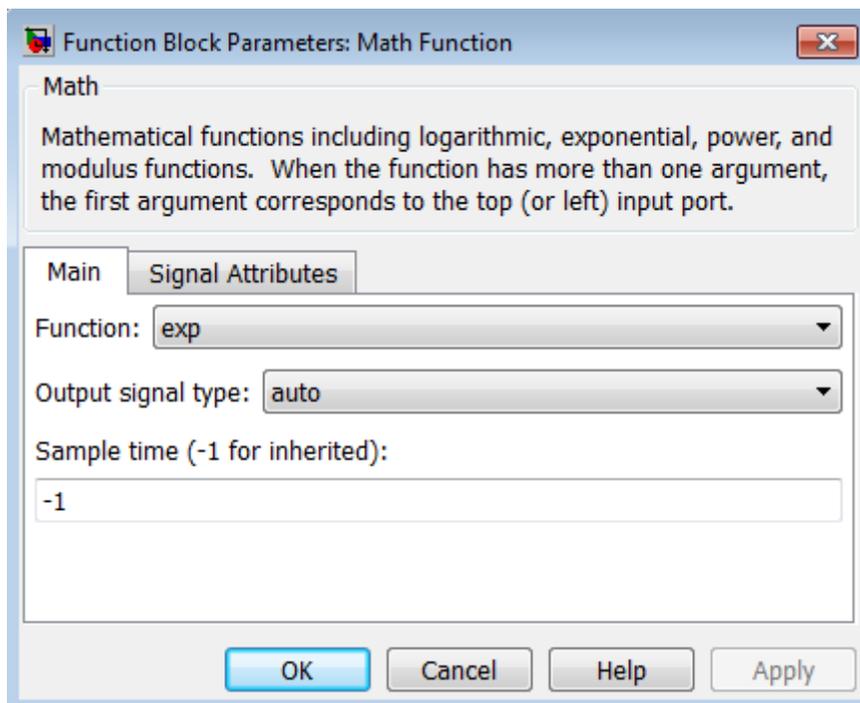

### Function

Specify the mathematical function. See Description for more information about the options for this parameter.

### Output signal type

Specify the output signal type of the Math Function block as auto, real, or complex.

Function	Input Signal Type	Output Signal Type		
		Auto	Real	Complex
exp, log, 10u, log10, square, pow, reciprocal, conjugate, transpose, hermitian	real	real	real	complex
	complex	complex	error	complex
magnitude squared	real	real	real	complex
	complex	real	real	complex
hypot, rem, mod	real	real	real	complex
	complex	error	error	error


### Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

The **Signal Attributes** pane of the Math Function block dialog box appears as follows:

# Math Function

---

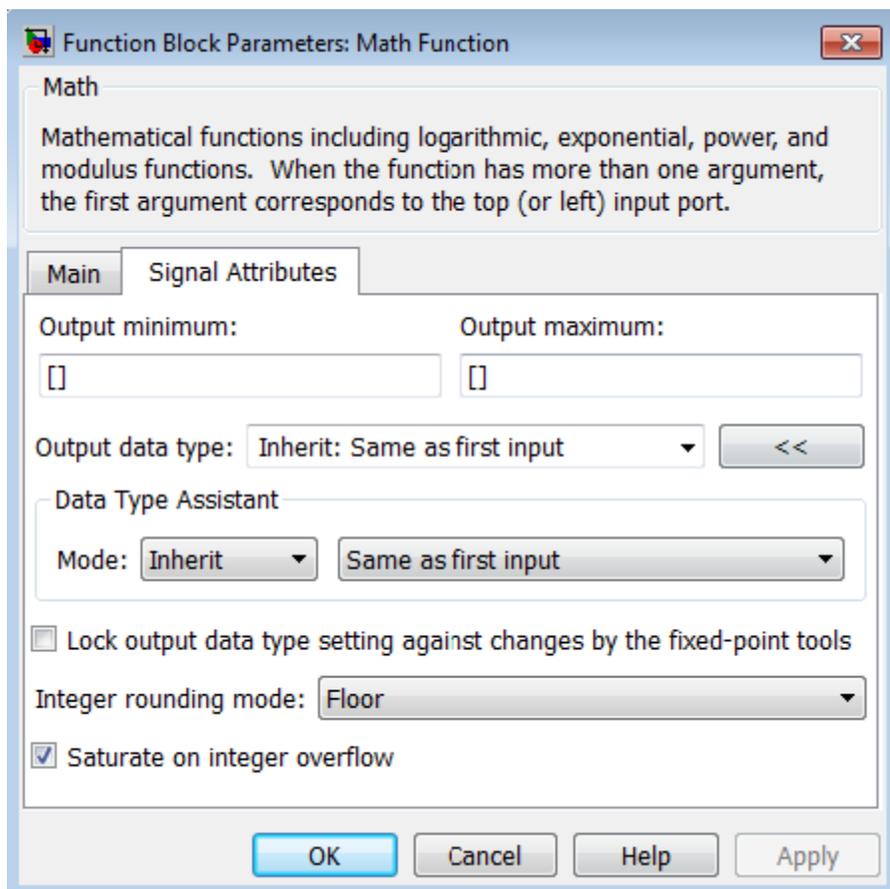

---

**Note** Some parameters on this pane are available only when the function you select in the **Function** parameter supports fixed-point data types.

---

## Output minimum

Specify the minimum value that the block can output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output maximum

Specify the maximum value that the block can output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” in *Simulink User’s Guide* for more information.

# Math Function

---

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box selected, the block output saturates at 127. Similarly, the block output saturates at a minimum output value of -128.
Do not select this check box.	You want to optimize efficiency of your generated code. You want to avoid overspecifying how a block handles	Overflows wrap to the appropriate value that is representable by the data type.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than

Action	Reasons for Taking This Action	What Happens for Overflows	Example
	out-of-range signals. For more information, see “Checking for Signal Range Errors”.		this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value as <code>int8</code> , which can produce an unintended result. For example, a block result of 130 (binary 1000 0010) expressed as <code>int8</code> , is -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of the input when the function requires two inputs
Dimensionalized	Yes
Multidimensionalized	Yes, for all functions except hermitian and transpose
Zero-Crossing Detection	No

# Math Function

---

## **See Also**

Sqrt, Trigonometric Function


## Purpose

Include MATLAB code in models that generate embeddable C code

## Library

User-Defined Functions

## Description

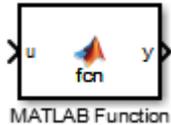

With a MATLAB Function block, you can write a MATLAB function for use in a Simulink model. The MATLAB function you create executes for simulation and generates code for a Simulink Coder target. If you are new to the Simulink and MATLAB products, see “What Is a MATLAB Function Block?” and “Create Model That Uses MATLAB Function Block” for an overview.

Double-clicking the MATLAB Function block opens its editor, where you write the MATLAB function, as in this example:


```
1 function [mean,stdev] = stats(vals)
2 % #codegen
3
4 % calculates a statistical mean and a standard
5 % deviation for the values in vals.
6
7 - len = length(vals);
8 - mean = avg(vals,len);
9 - stdev = sqrt(sum((vals-avg(vals,len)).^2)/len);
10 - coder.extrinsic('plot');
11 - plot(vals,'-+');
12 |
13 function mean = avg(array,size)
14 - mean = sum(array)/size;
```

To learn more about this editor, see “MATLAB Function Block Editor”.

You specify input and output data to the MATLAB Function block in the function header as arguments and return values. The argument and return values of the preceding example function correspond to the inputs and outputs of the block in the model:

# MATLAB Function

---

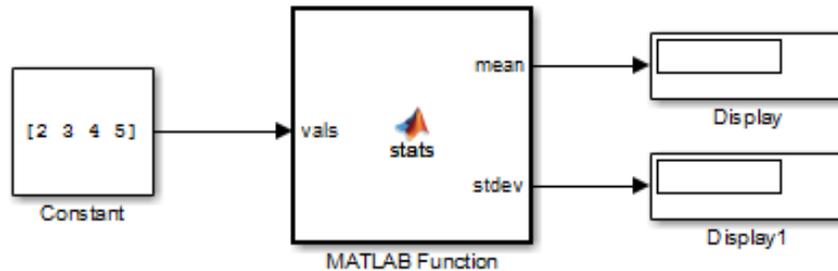

You can also define data, input triggers, and function call outputs using the Ports and Data Manager, which you access from the MATLAB Function Block Editor by selecting **Edit Data**. See “Ports and Data Manager”.

The MATLAB Function block generates efficient embeddable code based on an analysis that determines the size, class, and complexity of each variable. This analysis imposes the following restrictions:

- The first assignment to a variable defines its, size, class, and complexity.  
See “Best Practices for Defining Variables for C/C++ Code Generation”.
- You cannot reassign variable properties after the initial assignment except when using variable-size data or reusing variables in the code for different purposes.

See “Reassignment of Variable Properties”.

In addition to language restrictions, the MATLAB Function block supports a subset of the functions available in MATLAB. A list of supported functions is given in “Functions and Objects Supported for C and C++ Code Generation — Alphabetical List”. These functions include functions in common categories, such as:

- Arithmetic operators like `plus`, `minus`, and `power`. For more information, see “Array vs. Matrix Operations”.
- Matrix operations like `size`, and `length`
- Advanced matrix operations like `lu`, `inv`, `svd`, and `chol`
- Trigonometric functions like `sin`, `cos`, `sinh`, and `cosh`

See “Functions and Objects Supported for C and C++ Code Generation — Categorical List” for a complete list of function categories.

---

**Note** Although the code for this block attempts to produce exactly the same results as MATLAB, differences might occur due to rounding errors. These numerical differences, which might be a few `eps` initially, can magnify after repeated operations. Reliance on the behavior of `nan` is not recommended. Different C compilers can yield different results for the same computation.

---

To support visualization of data, the MATLAB Function block supports calls to MATLAB functions for simulation only. See “Call MATLAB Functions” to understand some of the limitations of this capability, and how it integrates with code analysis for this block. If these function calls do not directly affect any of the Simulink inputs or outputs, the calls do not appear in Simulink Coder generated code.

In the Ports and Data Manager, you can declare a block input to be a Simulink parameter instead of a port. The MATLAB Function block also supports inheritance of types and size for inputs, outputs, and parameters. You can also specify these properties explicitly. See “Type Function Arguments”, “Size Function Arguments”, and “Add Parameter Arguments” for descriptions of variables that you use in MATLAB Function blocks.

Recursive calls are not allowed in MATLAB Function blocks.

# MATLAB Function

---

## Data Type Support

The MATLAB Function block accepts inputs of any type that Simulink supports, including fixed-point and enumerated types. For more information, see “Data Types Supported by Simulink”.

Data types supported by MATLAB but not supported by Simulink may not be passed between the Simulink model and the function within the MATLAB Function block. These types may be used within the MATLAB Function block.

For more information on fixed-point support for this block, refer to “Fixed-Point Data Types with MATLAB Function Block” and “MATLAB Function Block with Data Type Override”.

The MATLAB Function block supports Simulink frames. For more information, see “Sample- and Frame-Based Concepts”.

## Parameters and Dialog Box

The block dialog box for a MATLAB Function block is identical to the dialog box for a Subsystem block. See the reference page for the Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem blocks for information about each block parameter.

## Examples

The following models shows how to use the MATLAB Function block:

- `sldemo_radar_eml`
- `sldemo_eml_galaxy`


## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

<b>Purpose</b>	Include System object in model
<b>Library</b>	User-Defined Functions
<b>Description</b>	<p>The MATLAB System block brings existing System objects (based on <code>matlab.System</code>) into Simulink. It also enables you to use System object authoring APIs to develop new blocks for Simulink.</p> <p>For interpreted execution, the model simulates the block using the MATLAB execution engine.</p> <p>For code generation, the model simulates the block using code generation (using the subset of MATLAB® code supported for code generation). The MATLAB System block supports only a subset of the functions available in MATLAB. See “Functions and Objects Supported for C and C++ Code Generation — Alphabetical List” for a complete list of functions. These functions include those in common categories, such as:</p> <ul style="list-style-type: none"><li>• “Array vs. Matrix Operations”, like <code>plus</code>, <code>minus</code>, and <code>power</code></li><li>• Matrix operations, like <code>size</code> and <code>length</code></li><li>• Advanced matrix operations, like <code>lu</code>, <code>inv</code>, <code>svd</code>, and <code>chol</code></li><li>• Trigonometric functions, like <code>sin</code>, <code>cos</code>, <code>sinh</code>, and <code>cosh</code></li></ul> <p><b>System Objects</b></p> <p>To use the MATLAB System block, you must first have a new System object™ or use an existing one. For more information, see “System Object Integration”.</p>
<b>Data Type Support</b>	<p>The MATLAB System block accepts inputs of any type that Simulink supports, including enumerated types. For more information, see “Data Types Supported by Simulink”.</p> <p>For information on fixed-point support for this block, see “Code Acceleration and Code Generation from MATLAB”.</p>

The MATLAB System block supports Simulink frames. For more information, see “Sample- and Frame-Based Concepts”.

## Parameters and Dialog Box

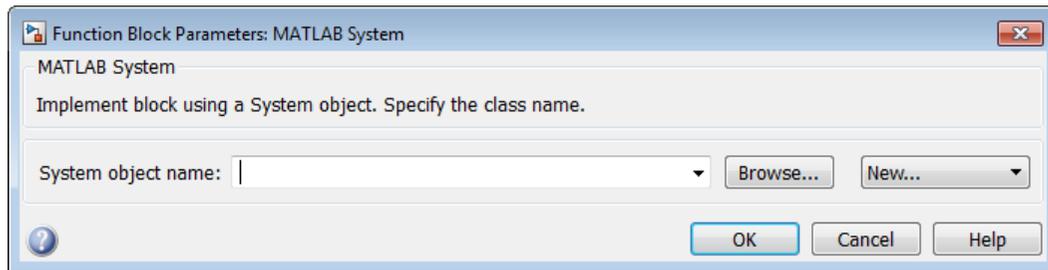

### System object name

Specify the full name of the user-defined System object class without the file extension. This entry is case sensitive. The class name must exist on the MATLAB path.

You can specify a System object name in one of these ways:

- Enter the name in the text box.
- Click the list arrow attached to the text box. If valid System objects exist in the current folder, the names appear in the list. Select a System object from this list.
- Browse to a folder that contains a valid System object. If the folder is not on your MATLAB path, the software prompts you to add it.

If you need to create a System object, you can create one from a template by clicking **New...**

Select one of these options.

- **Basic**

Starts MATLAB Editor and displays a template for a simple System object using the fewest System object methods.

- **Advanced**

Starts MATLAB Editor and displays a template for a more advanced System object using most of the System object methods.

- **Block Extension**

Starts MATLAB Editor and displays a file that contains utilities for customizing the block for Simulink. This is the same file available in MATLAB when you select **New... > System Object > Simulink Extension**.

After you save the System object, you can enter the name in the **System object name** text box.

### **Settings**

**Default:** None

### **Tips**

Use the full name of the user-defined System object class name. The block does not accept a MATLAB variable that you have assigned to a System object class name.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **Simulate using**

Select the simulation mode.

### **Settings**

**Default:** Code generation

### **Code generation**

On the first model run, simulate and generate code for MATLAB System block using only MATLAB functions supported for

# MATLAB System

---

code generation. If the structure of the block does not change, subsequent model runs do not regenerate the code.

## Interpreted execution

Simulate model using all supported MATLAB functions. Choosing this option can slow simulation performance.

## Dependency

After you assign a valid System object class name to the block, the next time you open the block dialog box, the parameter is visible. This parameter appears for every MATLAB System block. You cannot remove it.

- If the block has no tabs, this parameter appears at the bottom of the dialog box.
- If the block has multiple tabs, this parameter appears at the bottom of the first tab of the dialog box.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

MATLAB Function

## Concepts

- “What Is the MATLAB System Block?”
- “What Are System Objects?”

**Purpose** Output input from previous time step

**Library** Discrete

## Description



The Memory block holds and delays its input by one integration time step. This block accepts continuous and discrete signals. The block accepts one input and generates one output. Each signal can be scalar or vector. If the input is a vector, the block holds and delays all elements of the vector by the same time step.

You specify the block output for the first time step using the **Initial condition** parameter. Careful selection of this parameter can minimize unwanted output behavior. However, you cannot specify the sample time. This block's sample time depends on the type of solver used, or you can specify to inherit it. The **Inherit sample time** parameter determines whether sample time is inherited or based on the solver.

---

**Tip** Avoid using the Memory block when both these conditions are true:

- Your model uses the variable-step solver ode15s or ode113.
  - The input to the block changes during simulation.
- 

When the Memory block inherits a discrete sample time, the block is analogous to the Unit Delay block. However, the Memory block does not support state logging. If logging the final state is necessary, use a Unit Delay block instead.

## Comparison with Similar Blocks

### Blocks with Similar Functionality

The Unit Delay, Memory, and Zero-Order Hold blocks provide similar functionality but have different capabilities. Also, the purpose of each block is different. The sections that follow highlight some of these differences.

## Recommended Usage for Each Block

Block	Purpose of the Block	Reference Examples
Unit Delay	Implement a delay using a discrete sample time that you specify. Ideally, the block accepts and outputs signals with a discrete sample time.	<ul style="list-style-type: none"><li>• <code>sldemo_enginewc</code> (Compression subsystem)</li></ul>
Memory	Implement a delay by one integration time step. Ideally, the block accepts continuous (or fixed in minor time step) signals and outputs a signal that is fixed in minor time step.	<ul style="list-style-type: none"><li>• <code>sldemo_bounce</code></li><li>• <code>sldemo_clutch</code> (Friction Mode Logic/Lockup FSM subsystem)</li></ul>
Zero-Order Hold	Convert an input signal with a continuous sample time to an output signal with a discrete sample time.	<ul style="list-style-type: none"><li>• <code>sldemo_radar_em1</code></li><li>• <code>aero_dap3dof</code></li></ul>

## Overview of Block Capabilities

Capability	Block		
	Unit Delay	Memory	Zero-Order Hold
Specification of initial condition	Yes	Yes	No, because the block output at time $t = 0$ must match the input value.
Specification of sample time	Yes	No, because the block can only inherit sample time (from the driving block or the solver used for the entire model).	Yes
Support for frame-based signals	Yes	No	Yes
Support for state logging	Yes	No	No


## Effect of Solver Specification on Block Output

When you specify a discrete sample time in the dialog box for a Unit Delay or Zero-Order Hold block, the block output can differ depending on the solver specification for the model.

# Memory


---

Suppose that you have a model with Unit Delay and Zero-Order Hold blocks, which both use a discrete sample time of 1:

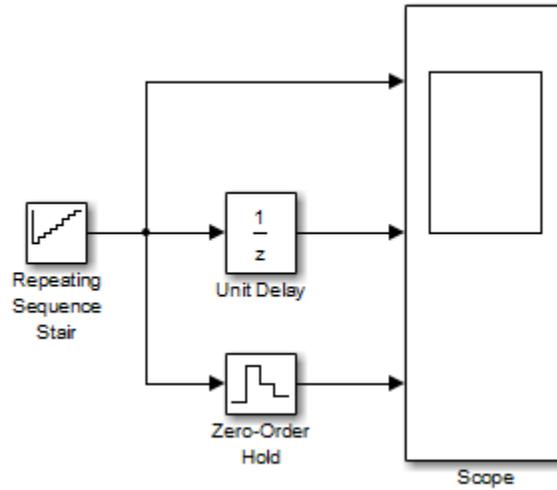


The Repeating Sequence Stair block uses a continuous sample time of 0 to provide input signals to the Unit Delay and Zero-Order Hold blocks.

If the model uses a fixed-step solver with a step size of 1, the scope shows the following simulation results:

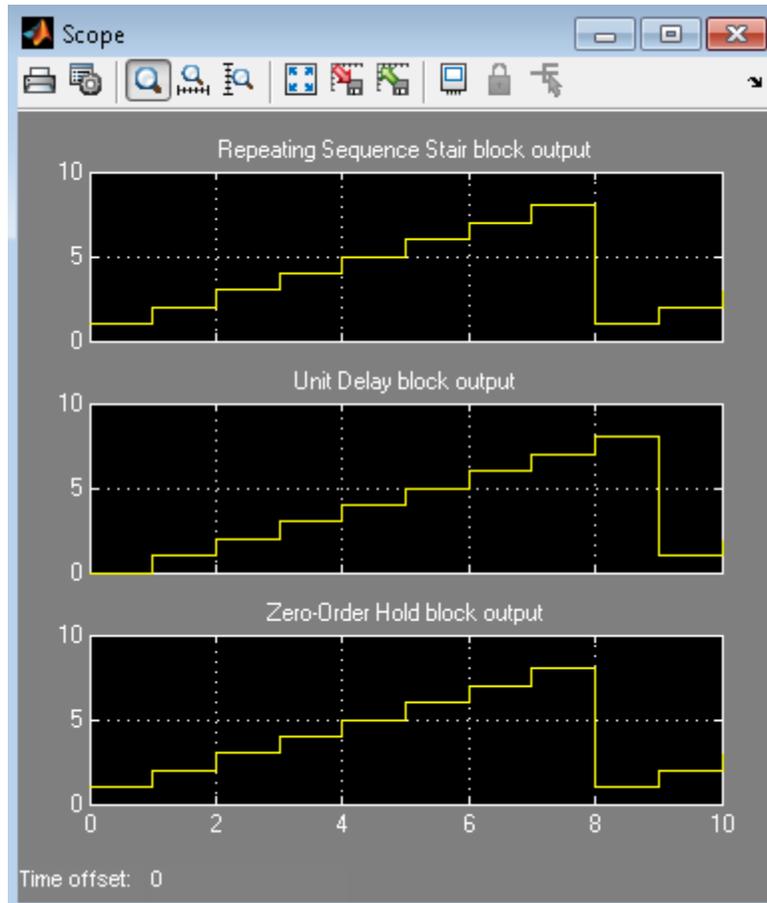

# Memory

If the model uses a variable-step solver, the scope shows the following simulation results:

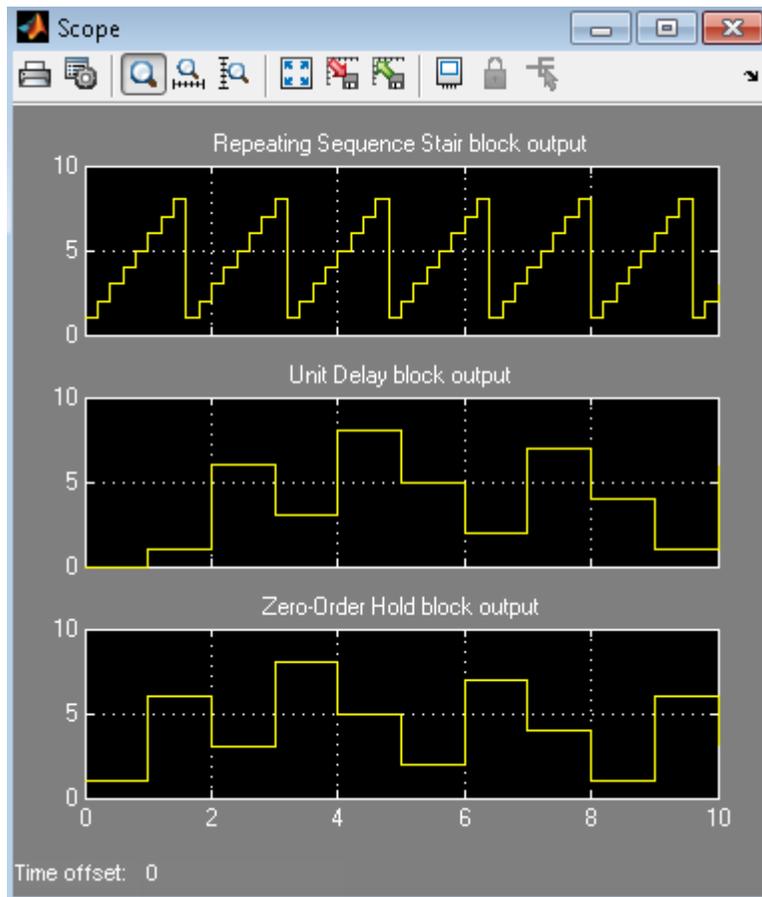

The Zero-Order Hold block takes the input value of the Repeating Sequence Stair block at  $t = 0, 1, 2, \dots, 9$  and holds each input value for a sample period (1 second). The Unit Delay block applies the same 1-second hold to each input value of the Repeating Sequence Stair block, but also delays each value by a sample period. The **Initial conditions**

parameter specifies the output for the Unit Delay block during the first sample period. For more information about sample time, see “What Is Sample Time?” and “Specify Sample Time”.

Solver specification for a model also affects the behavior of the Memory block. For details, see “Examples of Memory Block Usage” on page 1-995.


## Data Type Support

The Memory block accepts real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

The **Main** pane of the Memory block dialog box appears as follows:

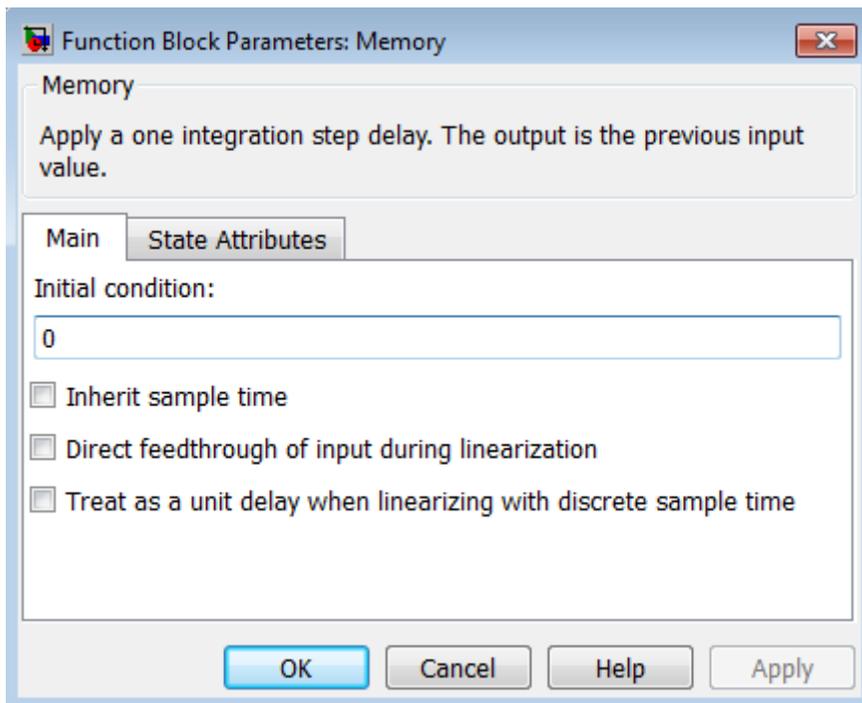

## Initial condition

Specify the output at the initial integration step. This value must be 0 when you do not use a built-in input data type. Simulink does not allow the initial output of this block to be `inf` or `NaN`.

## Inherit sample time

Select to inherit the sample time from the driving block:

- If the driving block has a discrete sample time, the block inherits the sample time.
- If the driving block has a continuous sample time, selecting this checkbox has no effect. The sample time depends on the type of solver used for simulating the model.

When this check box is cleared, the block sample time depends on the type of solver used for simulating the model:

- If the solver is a variable-step solver, the block sample time is continuous but fixed in minor time step: `[0, 1]`.
- If the solver is a fixed-step solver, the `[0, 1]` sample time converts to the solver step size after sample-time propagation.

## Direct feedthrough of input during linearization

Select to output the input during linearization and trim. This selection sets the block mode to direct feedthrough.

Selecting this check box can cause a change in the ordering of states in the model when using the functions `linmod`, `dlinmod`, or `trim`. To extract this new state ordering, use the following commands.

First compile the model using the following command, where `model` is the name of the Simulink model.

```
[sizes, x0, x_str] = model([],[],[], 'lincompile');
```

Next, terminate the compilation with the following command.


```
model([],[],[], 'term');
```

The output argument, `x_str`, which is a cell array of the states in the Simulink model, contains the new state ordering. When passing a vector of states as input to the `linmod`, `dlinmod`, or `trim` functions, the state vector must use this new state ordering.

### **Treat as a unit delay when linearizing with discrete sample time**

Select to linearize the Memory block to a unit delay when the Memory block is driven by a signal with a discrete sample time.

The **State Attributes** pane of the Memory block dialog box appears as follows:

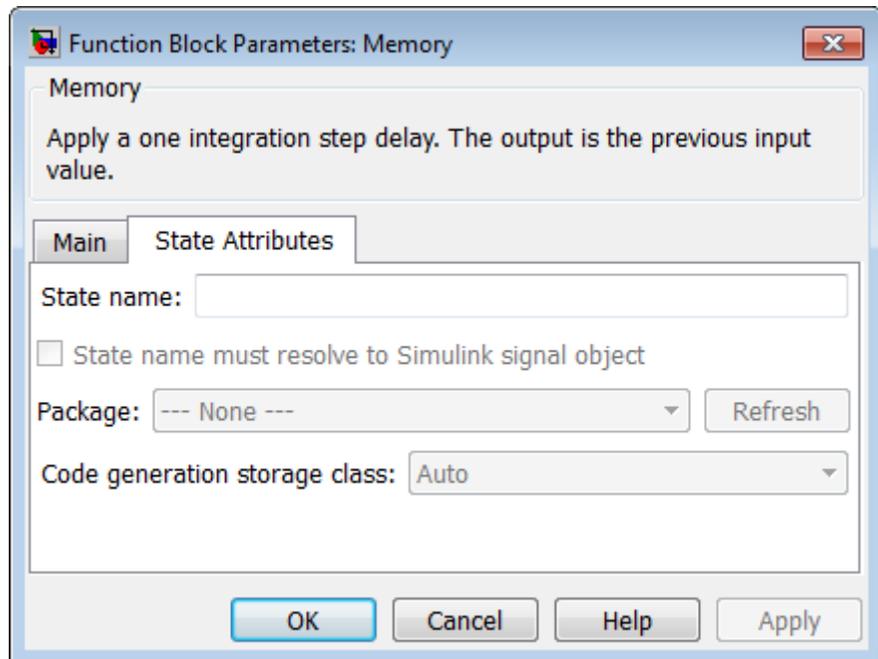

## State name

Use this parameter to assign a unique name to the block state. The default is ' '. When this field is blank, no name is assigned. When using this parameter, remember these considerations:

- A valid identifier starts with an alphabetic or underscore character, followed by alphanumeric or underscore characters.
- The state name applies only to the selected block.

This parameter enables **State name must resolve to Simulink signal object** when you click **Apply**.

For more information, see “States” in the Simulink Coder documentation.

## State name must resolve to Simulink signal object

Select this check box to require that the state name resolve to a Simulink signal object. This check box is cleared by default.

**State name** enables this parameter.

Selecting this check box disables **Code generation storage class**.

## Package

Select a package that defines the custom storage class you want to apply. If you have defined any packages of your own, click **Refresh**. This action adds all user-defined packages on your search path to the package list.

## Code generation storage class

Select custom storage class for state.

**Default:** Auto

Auto

Auto is the appropriate storage class for states that you do not need to interface to external code.

- SimulinkGlobal**  
*model\_P* initializes the state to its corresponding value in the workspace.
- ExportedGlobal**  
State is stored in a global variable
- ImportedExtern**  
*model\_private.h* declares the state as an extern variable.
- ImportedExternPointer**  
*model\_private.h* declares the state as an extern pointer.
- Default**  
A non-editable placeholder storage class is created.
- BitField**  
A struct declaration is created that embeds Boolean data.
- Volatile**  
Volatile type qualifier is used in state declaration.
- ExportToFile**  
Header (.h) file containing global variable declarations is generated with user-specified name.
- ImportFromFile**  
Predefined header (.h) files containing global variable declarations are included.
- FileScope**  
A static qualifier is generated in front of the state declaration to make the state visible only to the current file.
- Struct**  
A struct declaration is created to encapsulate parameter or signal object data.
- StructVolatile**  
Volatile type qualifier is used in struct declaration.

## GetSet

Supports specialized function calls to read and write memory.

**State name** enables this parameter.

The list of valid storage classes differs based on the **Package** selection.

Setting this parameter to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables **Code generation storage type qualifier**.

### **Code generation storage type qualifier**

Specify a Simulink Coder storage type qualifier. The default is `'`. When this field is blank, no qualifier is assigned.

The Simulink Coder product does not check this string for errors. Thus, whatever value you enter appears automatically in the variable declaration.

Setting **Code generation storage class** to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables this parameter.

During simulation, the block uses the following values:


- The initial value of the signal object to which the state name is resolved
- Min and Max values of the signal object

See “States” in the Simulink Coder documentation for more information.

## Examples of Memory Block Usage

### Usage with the Clock Block

The following model shows how to display the step size in a simulation. The Sum block subtracts the time at the previous step, which the Memory block generates, from the current time, which the Clock block generates.

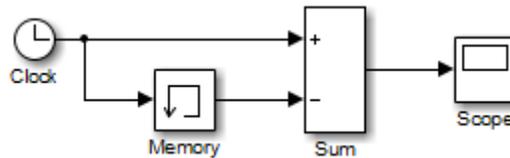


Because **Inherit sample time** is not selected for the Memory block, the block sample time depends on the type of solver for simulating the model. In this case, the model uses a fixed-step solver. Therefore, the sample time of the Memory block is the solver step size, or 1.

If you replace the Memory block with a Unit Delay block, you get the same results. The Unit Delay block inherits a discrete sample time of 1.


# Memory

## Usage with the Second-Order Integrator Block

The `sldemo_bounce` model shows how a bouncing ball reacts after being tossed into the air. The **dx** port of the Second-Order Integrator block and the Memory block capture the velocity of the ball just before it hits the ground.

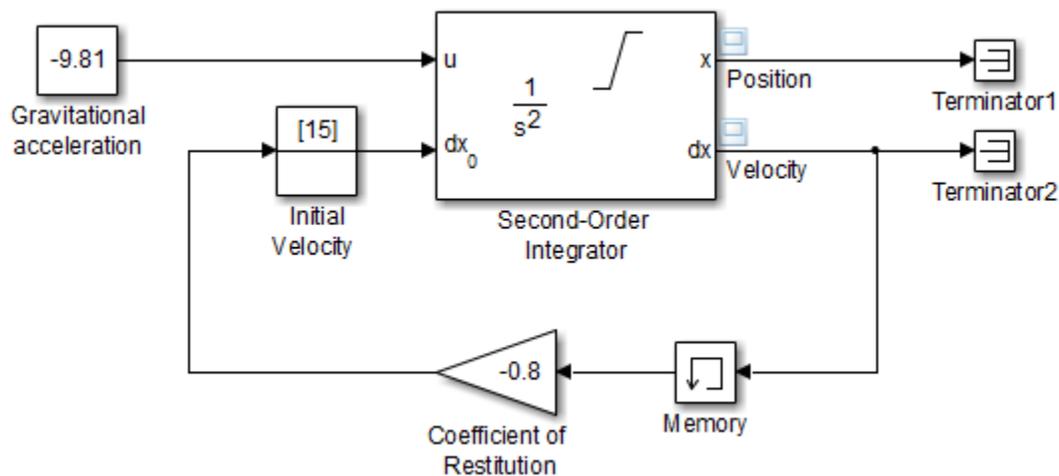


Because **Inherit sample time** is not selected for the Memory block, the block sample time depends on the type of solver for simulating the model. In this case, the model uses a variable-step (`ode23`) solver. Therefore, the sample time of the Memory block is continuous but fixed in minor time step: `[0, 1]`. When you run the model, you get the following results:

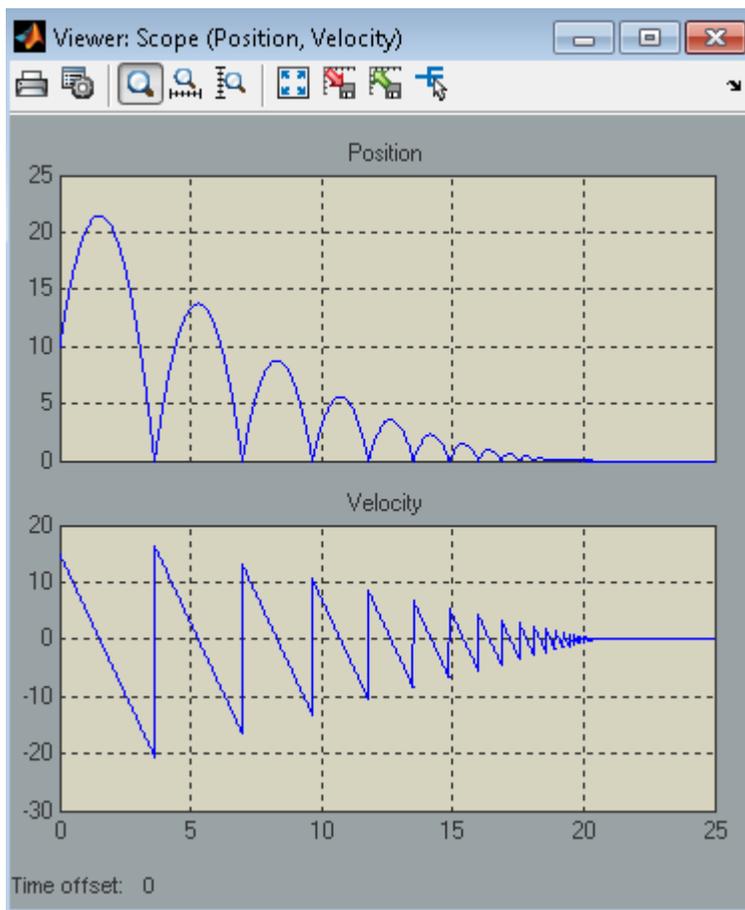

If you replace the Memory block with a Unit Delay block, you get the same results. However, a warning also appears due to the discrete Unit Delay block inheriting a continuous sample time.

## Usage with the Combinatorial Logic Block

The `sldemo_clutch` model shows how you can use the Memory block with the Combinatorial Logic block to implement a finite-state machine. This construct appears in the Friction Mode Logic/Lockup FSM subsystem.

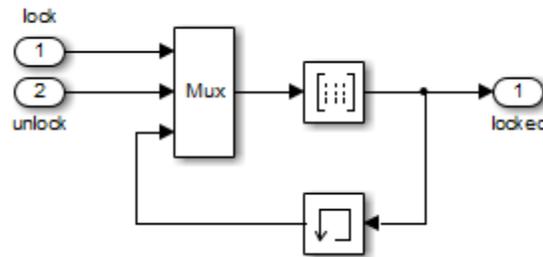

Because **Inherit sample time** is not selected for the Memory block, the block sample time depends on the type of solver for simulating the model. In this case, the model uses a variable-step (`ode23`) solver. Therefore, the sample time of the Memory block is continuous but fixed in minor time step: `[0, 1]`.

## Bus Support

The Memory block is a bus-capable block. The input can be a virtual or nonvirtual bus signal subject to the following restrictions:

- **Initial condition** must be zero, a nonzero scalar, or a finite numeric structure.
- If **Initial condition** is zero or a structure, and you specify a **State name**, the input cannot be a virtual bus.
- If **Initial condition** is a nonzero scalar, you cannot specify a **State name**.

For information about specifying an initial condition structure, see “Specify Initial Conditions for Bus Signals”.

All signals in a nonvirtual bus input to a Memory block must have the same sample time, even if the elements of the associated bus object specify inherited sample times. You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus. See “Nonvirtual Bus Sample Times” and Bus-Capable Blocks for more information.

You can use an array of buses as an input signal to a Memory block. Only the **Initial condition** parameter (which may be, but does not have to be, a structure) is scalar-expanded to match the dimensions of the array of buses. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

## Characteristics

Bus-capable	Yes, with restrictions as noted above
Direct Feedthrough	No, except when you select <b>Direct feedthrough of input during linearization</b>
Sample Time	Depends on the type of solver used. If you select the <b>Inherit sample time</b> check box, the block inherits sample time from the driving block.
Scalar Expansion	Yes, of the <b>Initial condition</b> parameter
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Unit Delay, Zero-Order Hold


# Merge

---

**Purpose** Combine multiple signals into single signal

**Library** Signal Routing

## Description

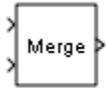

The Merge block combines its inputs into a single output line whose value at any time is equal to the most recently computed output of its driving blocks. You can specify any number of inputs by setting the block's **Number of inputs** parameter.

Use Merge blocks only to interleave input signals that update at different times into a combined signal in which the interleaved values retain their separate identities and times. To combine signals that update at the same time into an array or matrix signal, use a Concatenate block.

Merge blocks assume that all driving signals share the same signal memory. The shared signal memory should be accessed only in mutually exclusive fashion. Therefore, always use alternately executing subsystems to drive Merge blocks. See “Creating Alternately Executing Subsystems” for an example.

All signals that connect to a Merge block, or exist anywhere in a network of Merge blocks, are functionally the same signal, and are therefore subject to the restriction that a given signal can have at most one associated signal object. See `Simulink.Signal` for more information.

## Guidelines for Using the Merge Block

When you use the Merge block, follow these guidelines:

- Always use conditionally-executed subsystems to drive Merge blocks.
- Write your control logic to ensure that at most one of the driving conditionally-executed subsystems executes at any time step.
- Do not connect more than one input of a Merge block to the same conditionally-executed subsystem.
- Always connect a Merge block to at least two input signals.
- Ensure that all input signals have the same sample time.


- Always set the **Initial output** parameter of the Merge block, unless the output port of the Merge block connects to another Merge block.
- Do not branch a signal that inputs to a Merge block, if you use the default setting of **Classic** for the **Model Configuration Parameters > Diagnostics > Underspecified initialization detection** parameter. See the last example in “Merge Block Usage” on page 1-1001 for additional usage guidelines relating to branched signals.
- For all conditionally-executed subsystem Outport blocks that drive Merge blocks, set the **Output when disabled** parameter to held.

### Merge Block Usage

For each input of a Merge block, the topmost non-atomic and nonvirtual source must be a conditionally-executed subsystem that is not an Iterator Subsystem.


You can use the Model Advisor to check Merge block usage in your model. For more information, see “Check usage of Merge blocks” on page 9-38.

The following schematic shows valid Merge block usage, merging signals from two conditionally-executed subsystems.

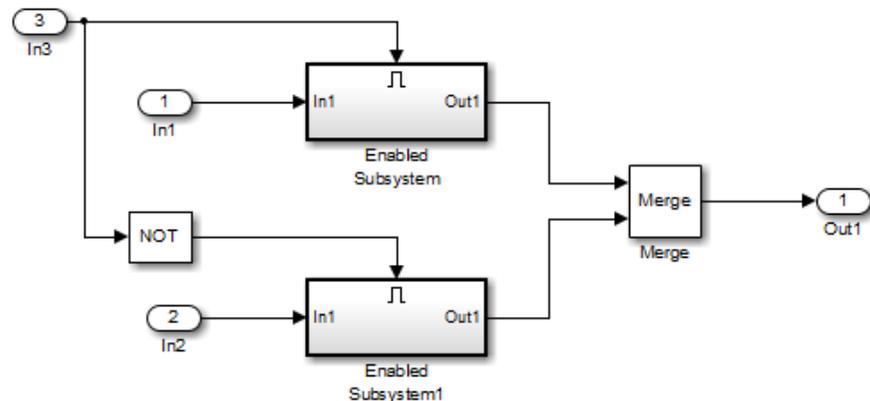


# Merge


The following example is also a valid Merge block usage, where the topmost nonatomic, nonvirtual source is a conditionally executed subsystem.

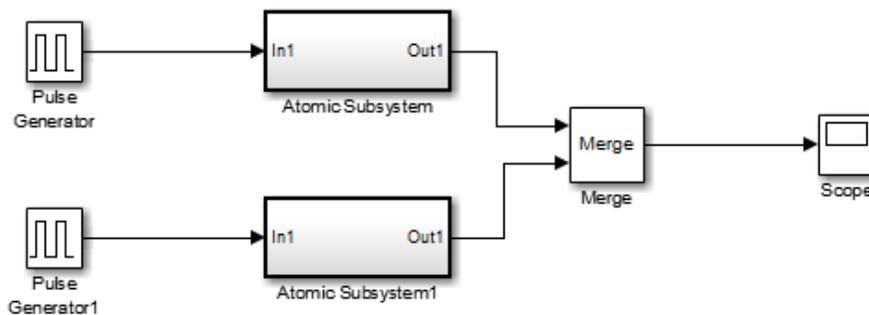


Each Atomic Subsystem block contains an enabled subsystem.

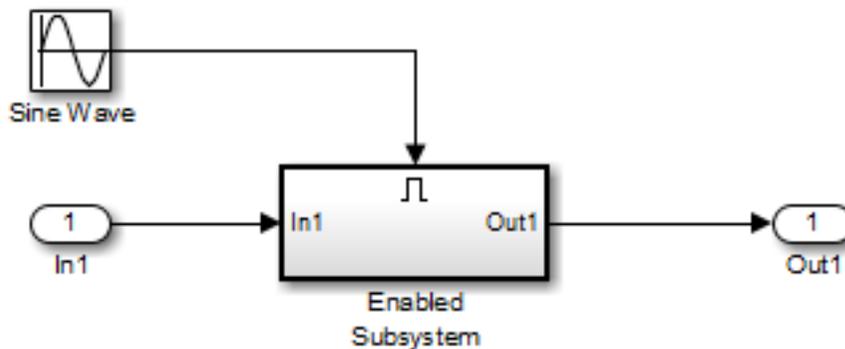

You can also use multiple Merge blocks at different levels of the model hierarchy. The following example contains a Merge block at the model root.

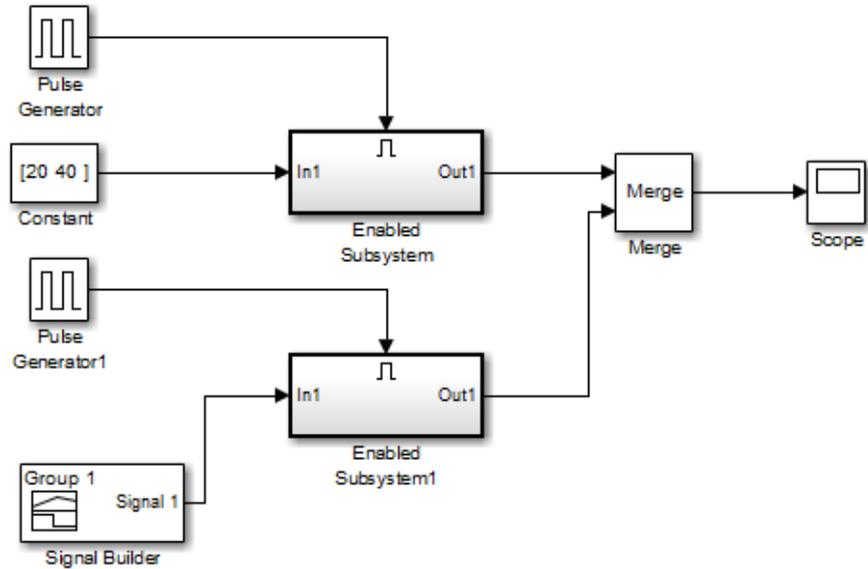


A Merge block is also located inside the Enabled Subsystem block, one level down.

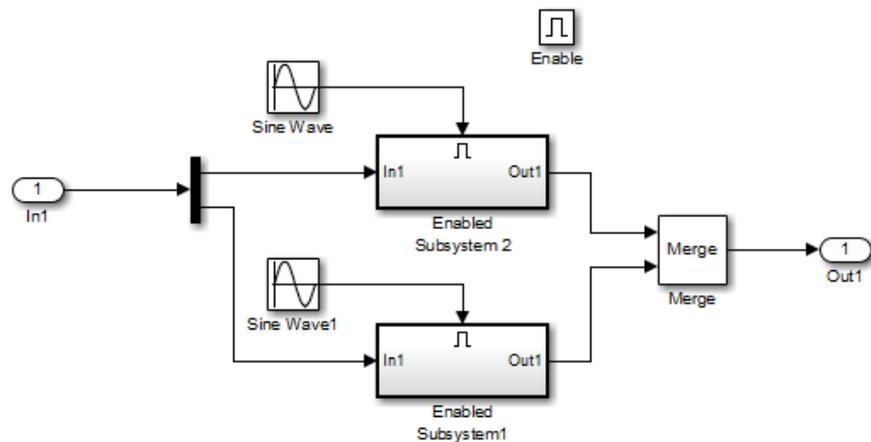


# Merge


A Merge block *cannot* connect to a Sine Wave block because a Sine Wave block is not a conditionally-executed subsystem.

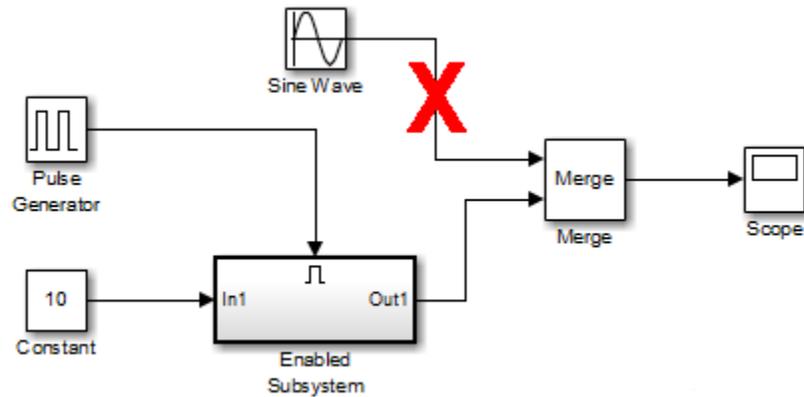

A Merge block *cannot* connect to a For Iterator Subsystem.

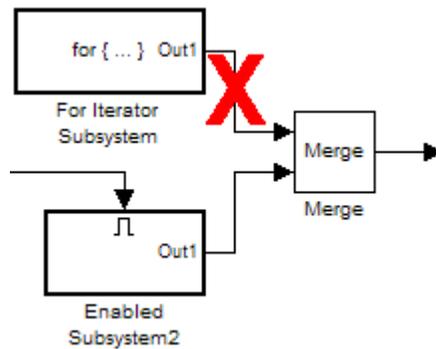



A Merge block *cannot* connect to a branched signal.

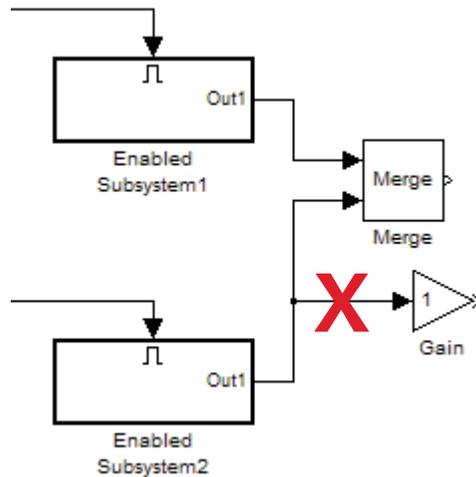

In the following model, the referenced model has a signal that branches. The subsystem `Subsys1` includes a `Model` block that references `referenced_model`. It includes a block that inputs to a block in the referenced model and also inputs to the `Merge` block that is outside of the referenced model.


# Merge

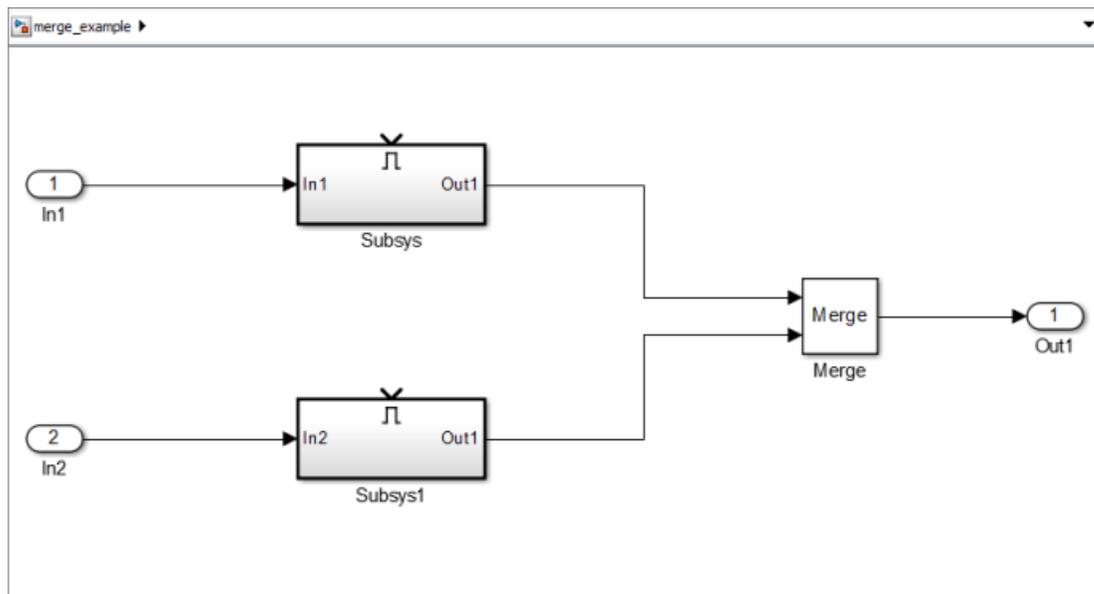

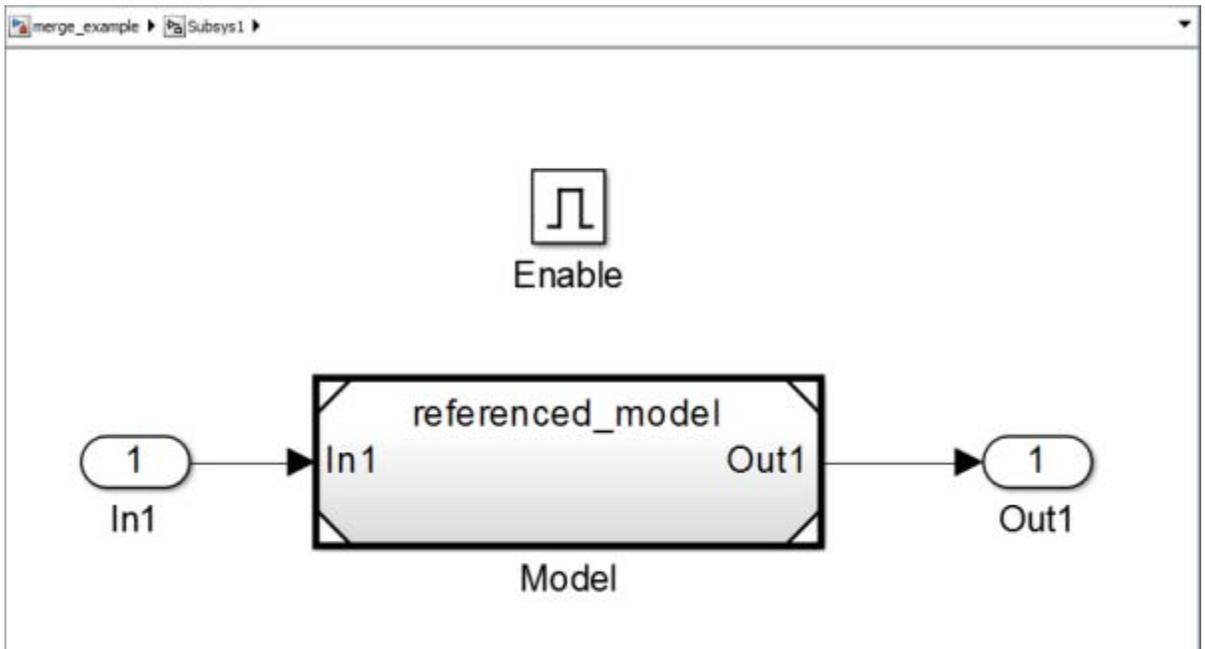


The referenced model includes a signal that incorrectly branches to a Gain block and to the Out1 Output block, which connects to the Merge block that is outside of the referenced model.

# Merge

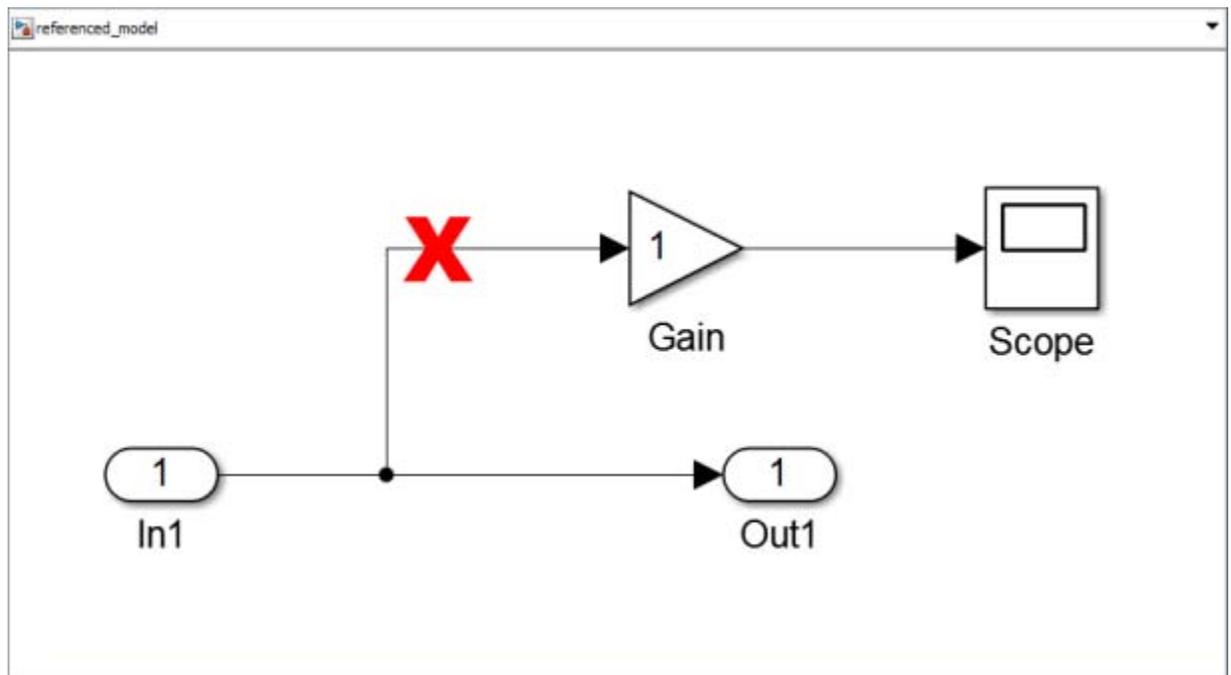


The following example also shows a branched signal in a subsystem that connects to a Merge block, which is *not allowed* if you use the default setting of Classic for the **Model Configuration Parameters > Diagnostics > Underspecified initialization detection** parameter.

If you set the **Underspecified initialization detection** parameter to Simplified, then the following example does *not* generate an error. For more information on simplified initialization mode, see “Underspecified initialization detection”.

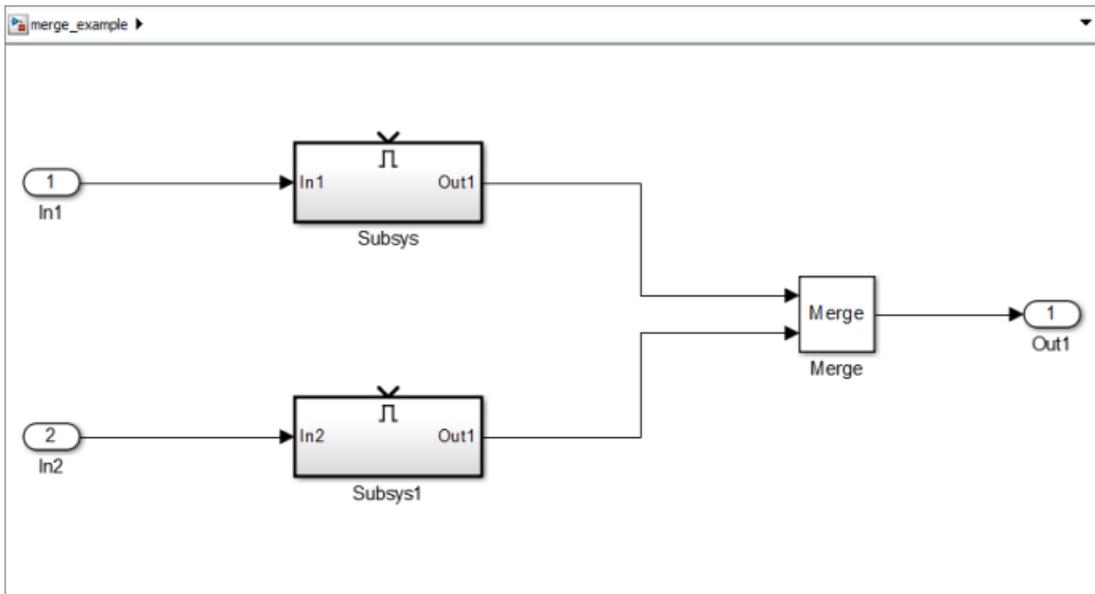

# Merge

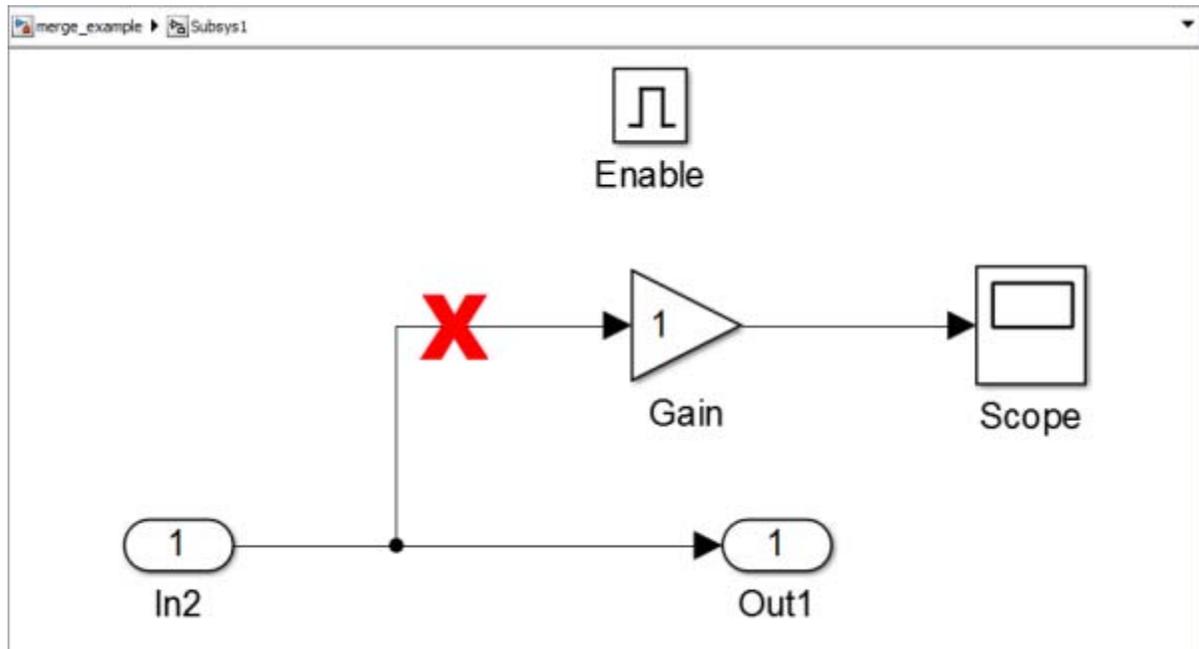

## Initial Output Value

You can specify an initial output value for the Merge block by setting the **Initial output** parameter.

If you do not specify an initial output value, the block's initial output depends on the initialization mode and the driving blocks. In Simplified initialization mode, for an unspecified (empty matrix [ ]) value of **Initial output**, the block uses the default initial value of the output data type. For information on the default initial value, see "Initializing Signal Values". In Classic initialization mode, for an unspecified (empty matrix [ ]) value of **Initial output**, the initial output of the block equals the most recently evaluated initial output of the driving blocks. Since the initialization ordering for these sources may vary, initialization may be inconsistent for the simulation and the code generation of a model. For example, the following model can produce inconsistent initialization:

- The model contains a Merge block with two inputs: one driven by a Stateflow chart and the other driven by a conditionally executed subsystem (such as an Enabled Subsystem).
- The Merge block **Initial output** parameter is unspecified (that is, specified as empty matrix ([ ])) and the model uses Classic initialization mode.
- The Stateflow chart initializes the output being merged to `val1`.
- The conditionally executed subsystem initializes the output being merged to different value `val2`.
- Both the Stateflow chart and the conditionally executed subsystem do not execute at the first time step.

Because the initialization ordering may vary, the output of the Merge block at the first time step is `val1` if the Stateflow chart initializes last and `val2` if the conditionally executed subsystem initializes last. The initialization ordering is different for simulation and code generation.

To address this issue, use one of the following approaches:

- Set the **Initial output** parameter of the Merge block, unless the output port of the Merge block connects to another Merge block.
- Turn on simplified initialization mode: set the **Model Configuration Parameters > Diagnostics > Data Validity > Underspecified initialization detection** parameter to **Simplified**.

To use the **Simplified** initialization setting, specify the **Initial output** value for all *root* Merge blocks. A root Merge block is any Merge block with an output port that does not connect to another Merge block.

To upgrade your model to simplified initialization mode, use the Model Advisor **Check consistency of initialization parameters for Outport and Merge blocks** check.

For more information on simplified initialization mode, see “Underspecified initialization detection”.


# Merge

---

## Single-Input Merge

Single-input merge is not supported. Each Merge block must have at least two inputs.

Use Merge blocks only for signals that require merging. If you were previously connecting a Merge block input to a Mux block, use a multi-input Merge block instead.

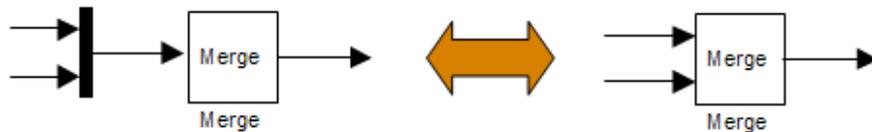

## Input Dimensions and Merge Offsets


The Merge block accepts only inputs of equal dimensions and outputs a signal of the same dimensions as the inputs, unless you select the **Allow unequal port widths** parameter.

If you select **Allow unequal port widths**, the block accepts scalars and vectors (but not matrices) having differing numbers of elements. Further, the block allows you to specify an offset for each input signal relative to the beginning of the output signal. The width of the output signal is

$$\max(w_1+o_1, w_2+o_2, \dots, w_n+o_n)$$

where  $w_1, \dots, w_n$  are the widths of the input signals and  $o_1, \dots, o_n$  are the offsets for the input signals.

Suppose that you have the following block diagram:

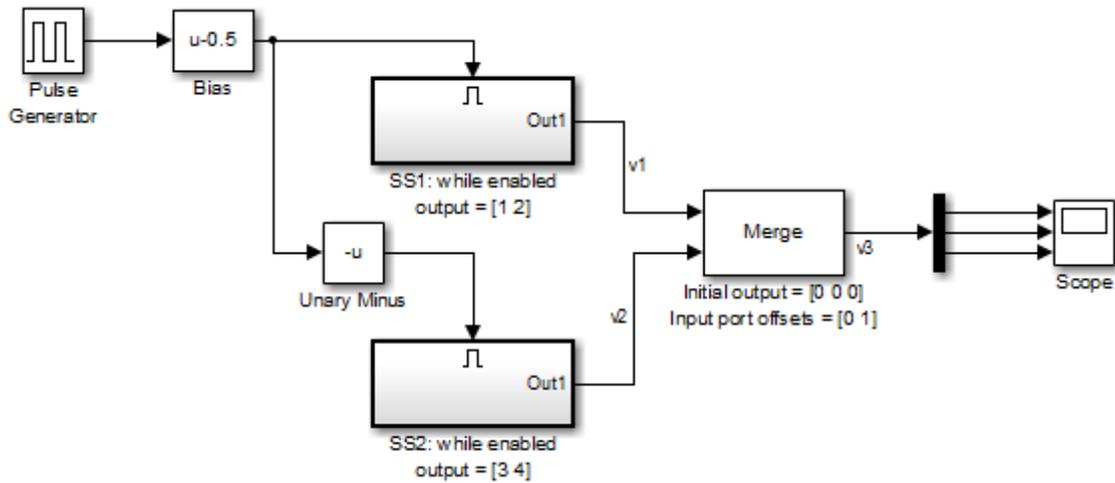


The Merge block has the following output width:

$$\max(2+0, 2+1)=3$$

# Merge


In this example, the offset of  $v1$  is 0 and the offset of  $v2$  is 1. The Merge block maps the elements of  $v1$  to the first two elements of  $v3$  and the elements of  $v2$  to the last two elements of  $v3$ . Only the second element of  $v3$  is effectively merged, as shown in the scope output:

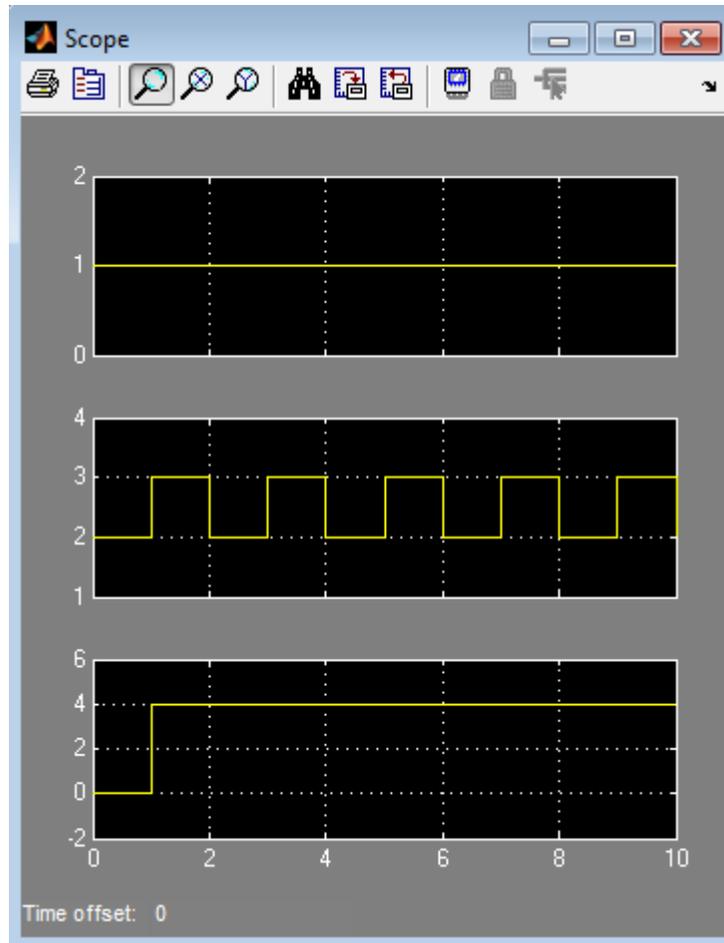

If you use Simplified Initialization Mode, you must clear the **Allow unequal port widths** check box. The input port offsets for all input signals must be zero.

# Merge

Consider using Merge blocks only for signal elements that require true merging. Other elements can be combined with merged elements using the Concatenate block, as shown in the following example.

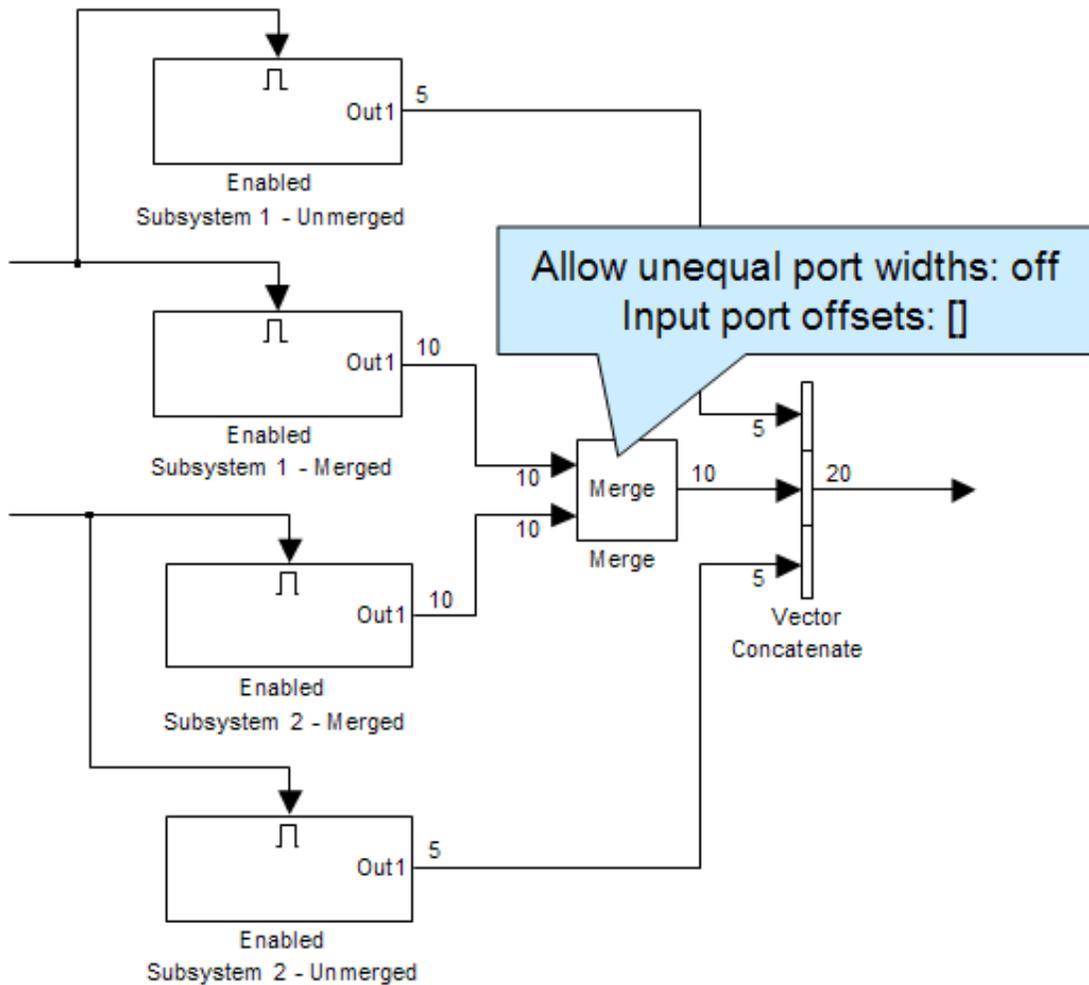


For more information on simplified initialization mode, see “Underspecified initialization detection”.

## Combining or Reordering of Input Signals

A Merge block does not accept input signals whose elements have been reordered or partially selected. In addition, you should not connect input signals to the Merge block that have been combined outside of a conditionally-executed subsystem.


For example, in the following block diagram, the Merge block does not accept the output of the first Selector block because the Selector block interchanges the first and last elements of the vector signal. Similarly, the Merge block does not accept the output of the second Selector block because the Selector block selects only the first three elements.

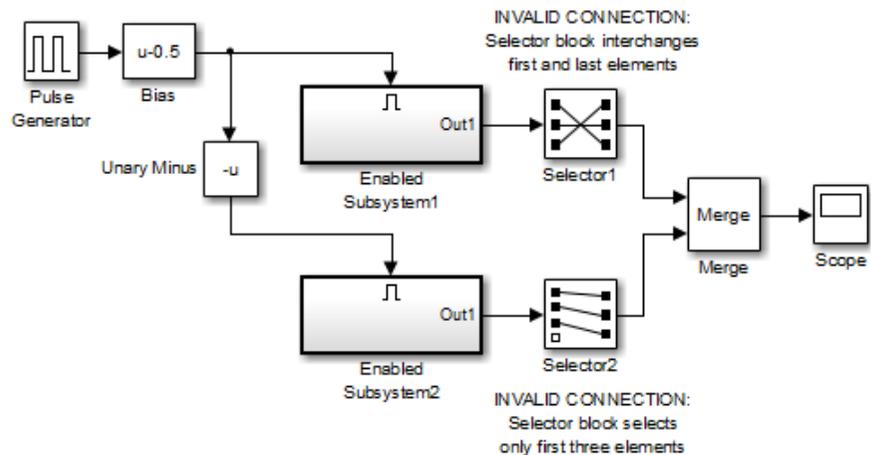


# Merge

---



If you use simplified initialization mode, the following arrangement is *not allowed* because two signals are being combined outside of a conditionally-executed subsystem.

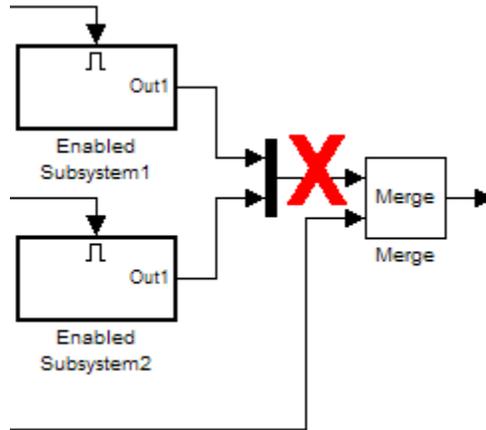

You can, however, combine or reorder Merge block input signals within a conditionally-executed subsystem. For example, the following model is valid.

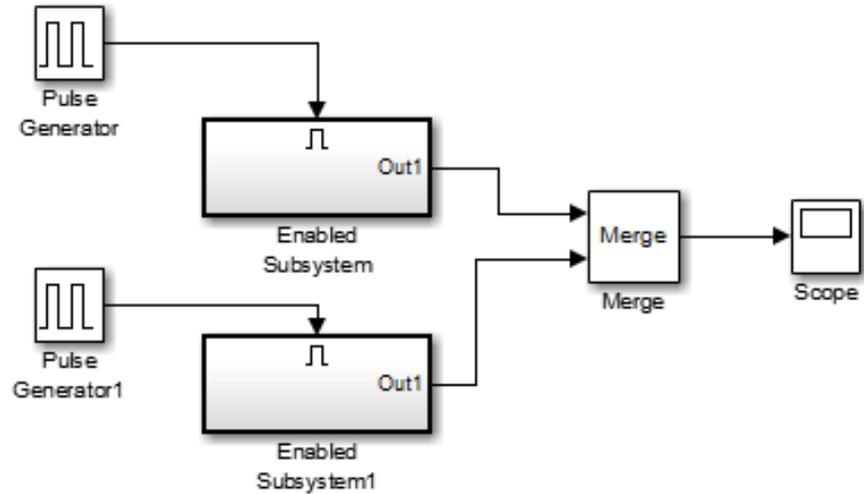

Each Enabled Subsystem contains the following blocks.

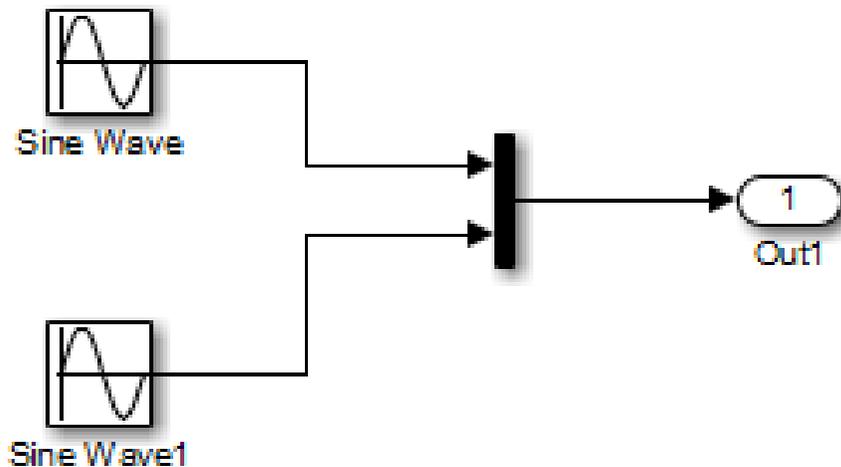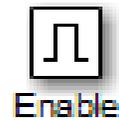

## **Conditionally-Executed Subsystem Output Reset**

The Outputs of conditionally-executed subsystems being merged should not reset when disabled. This action can cause multiple subsystems to update the Merge block at the same time. Specifically, the disabled subsystem updates the Merge block by resetting its output, while the enabled subsystem updates the Merge block by computing its output.


To prevent this behavior, set the Output block parameter **Output when disabled** to `held` for each conditionally-executed subsystem being merged.

---

**Note** If you are using Simplified Initialization Mode, you *must* set the Output block parameter **Output when disabled** to `held`.

---

Instead of resetting the subsystem output when it is disabled, add an additional subsystem for the default case, and use control logic to run this subsystem if nothing else runs. For example, see the following block layout:

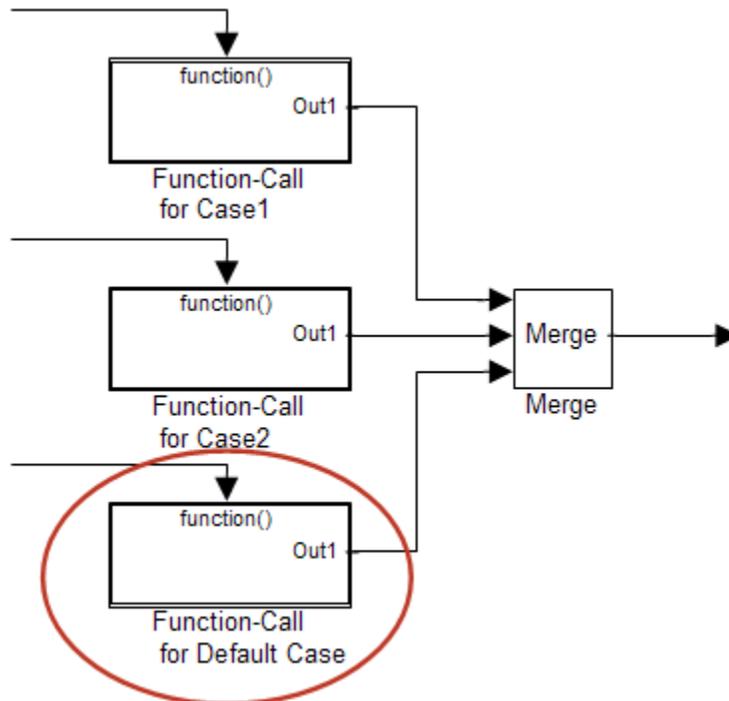

For more information on simplified initialization mode, see “Underspecified initialization detection”.

## Merging S-Function Outputs

The Merge block can merge a signal from an S-Function block only if the memory used to store the S-Function block’s output is reusable. Simulink software displays an error message if you attempt to update or simulate a model that connects a nonreusable port of an S-Function

# Merge


---

block to a Merge block. See `ssSetOutputPortOptimOpts` for more information.

## Data Type Support

The Merge block accepts real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types. All inputs must be of the same data type and numeric type.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

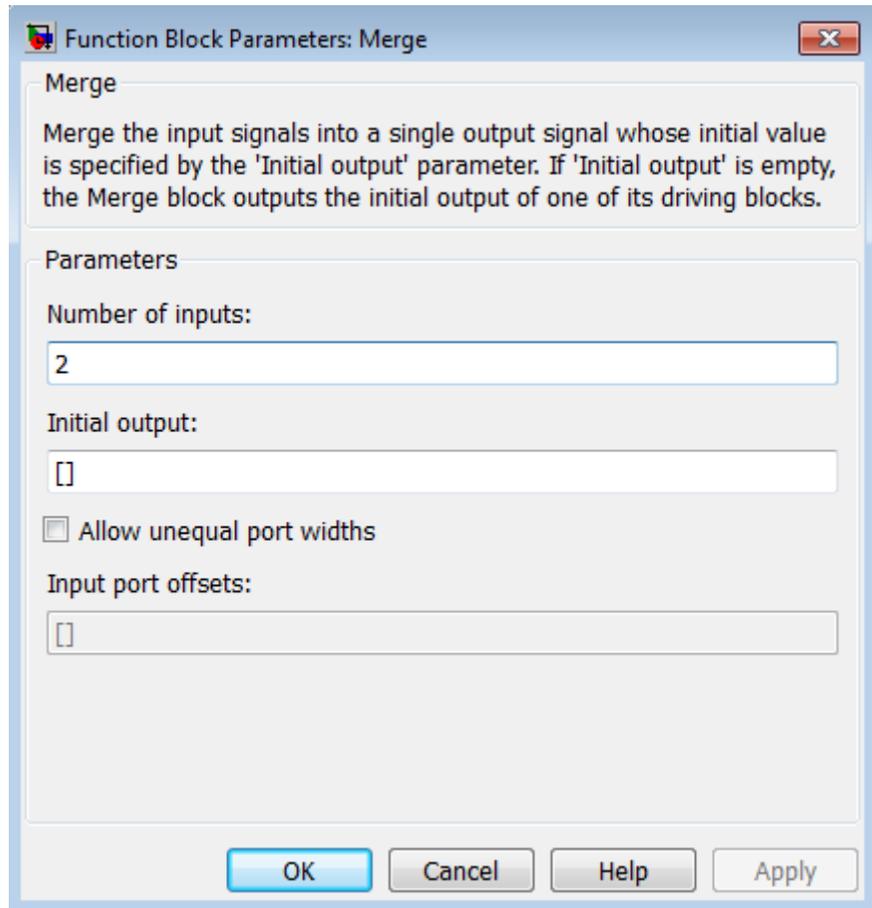

## Parameters and Dialog Box

### Number of inputs

Specify the number of input ports to merge.

### Initial output

Specify the initial value of output For more information, see Initial Output Value on page 1010.

## Bus Support

### Allow unequal port widths

Select this check box to allow the block to accept inputs having different numbers of elements.

### Input port offsets

Enter a vector to specify the offset of each input signal relative to the beginning of the output signal.

The Merge block is a bus-capable block. The inputs can be virtual or nonvirtual bus signals subject to the following restrictions:

- The number of inputs must be greater than one.
- **Initial output** must be zero, a nonzero scalar, or a finite numeric structure.
- **Allow unequal port widths** must be disabled.
- All inputs to the merge must be buses and must be equivalent (same hierarchy with identical names and attributes for all elements).

For information about specifying an initial condition structure, see “Specify Initial Conditions for Bus Signals”.

All signals in a nonvirtual bus input to a Merge block must have the same sample time, even if the elements of the associated bus object specify inherited sample times. You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus. See “Composite Signals” and Bus-Capable Blocks for more information.

You can use an array of buses as an input signal to a Merge block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”. Using an array of buses with a Merge block involves these limitations:

- **Allow unequal port widths** — Clear this parameter.
- **Number of inputs** — Set to a value of 2 or greater.

- **Initial condition** — Only this parameter (which might be, but does not have to be, a structure) is scalar-expanded to match the dimensions of the array of buses.

**Characteristics**

Bus-capable	Yes, with restrictions as noted above
Direct Feedthrough	Yes
Sample Time	Inherited from the driving block
Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

# MinMax

---

**Purpose** Output minimum or maximum input value

**Library** Math Operations

## Description



The MinMax block outputs either the minimum or the maximum element or elements of the inputs. You can choose the function to apply by selecting one of the choices from the **Function** parameter list.

If the block has one input port, the input must be a scalar or a vector. The block outputs a scalar equal to the minimum or maximum element of the input vector.

If the block has multiple input ports, all nonscalar inputs must have the same dimensions. The block expands any scalar inputs to have the same dimensions as the nonscalar inputs. The block outputs a signal having the same dimensions as the input. Each output element equals the minimum or maximum of the corresponding input elements.

The MinMax block ignores any input value that is NaN, except when every input value is NaN. When all input values are NaN, the output is NaN, either as a scalar or the value of each output vector element.

## Data Type Support


The MinMax block accepts and outputs real signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

The **Main** pane of the MinMax block dialog box appears as follows:

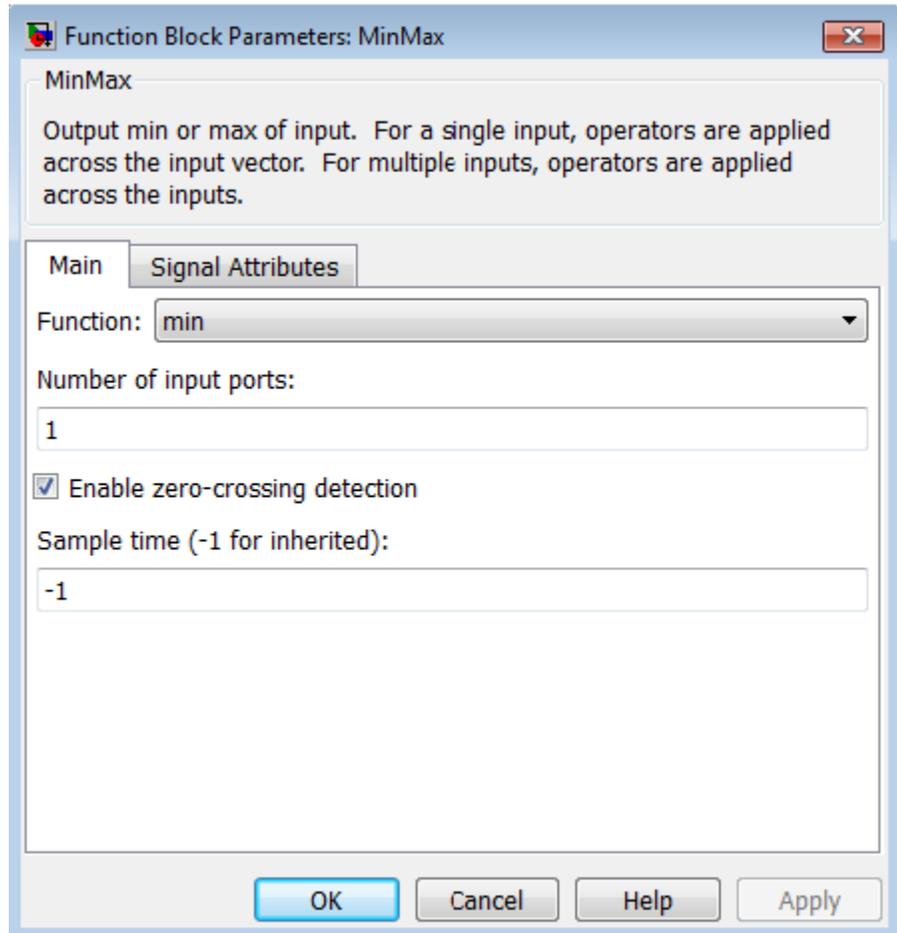

### Function

Specify whether to apply the function min or max to the input.

### Number of input ports

Specify the number of inputs to the block.


**Enable zero-crossing detection**

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

**Sample time (-1 for inherited)**

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

The **Signal Attributes** pane of the MinMax block dialog box appears as follows:

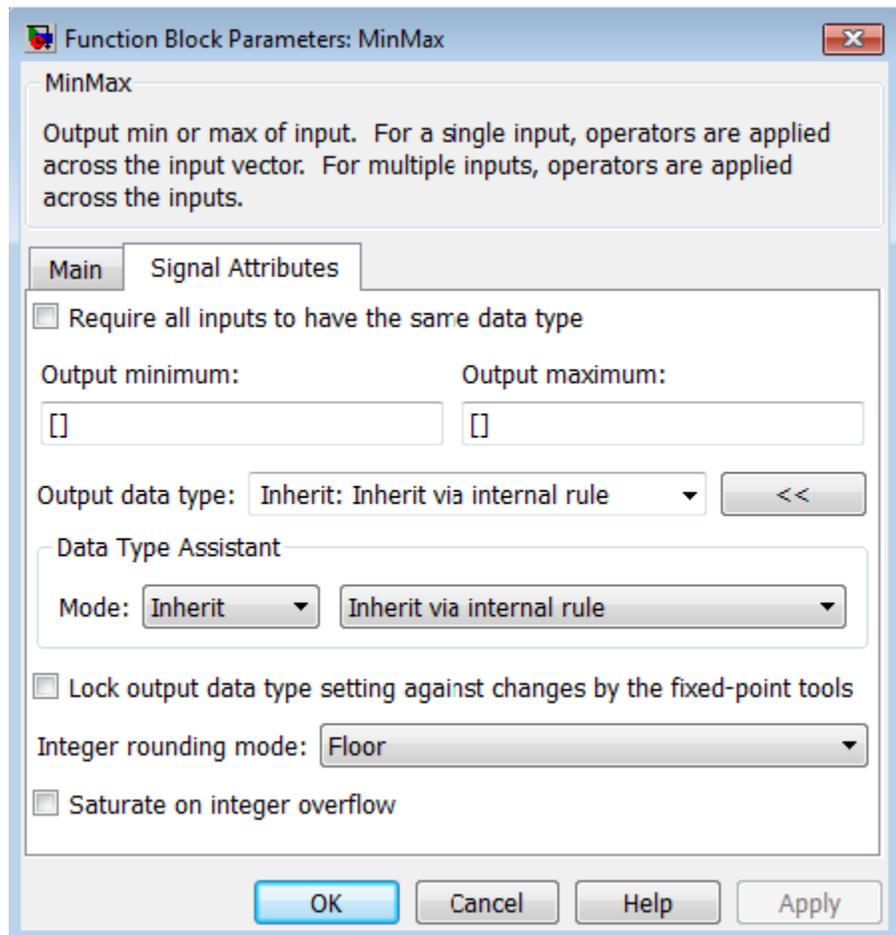**Require all inputs to have the same data type**

Select this check box to require that all inputs have the same data type.

## Output minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output maximum

Specify the maximum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” in the *Simulink User’s Guide* for more information.

### Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

### Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

### Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box selected, the block output saturates at 127. Similarly, the block output saturates at a minimum output value of -128.
Do not select this check box.	You want to optimize efficiency of your generated code.  You want to avoid overspecifying how a block handles	Overflows wrap to the appropriate value that is representable by the data type.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than

# MinMax


Action	Reasons for Taking This Action	What Happens for Overflows	Example
	out-of-range signals. For more information, see “Checking for Signal Range Errors”.		this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value as <code>int8</code> , which can produce an unintended result. For example, a block result of 130 (binary 1000 0010) expressed as <code>int8</code> , is -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.


## Examples

The `sldemo_fuelsys` model shows how to use the MinMax block.

In the Engine Gas Dynamics/Throttle & Manifold/Throttle subsystem, the MinMax block uses the min operator:

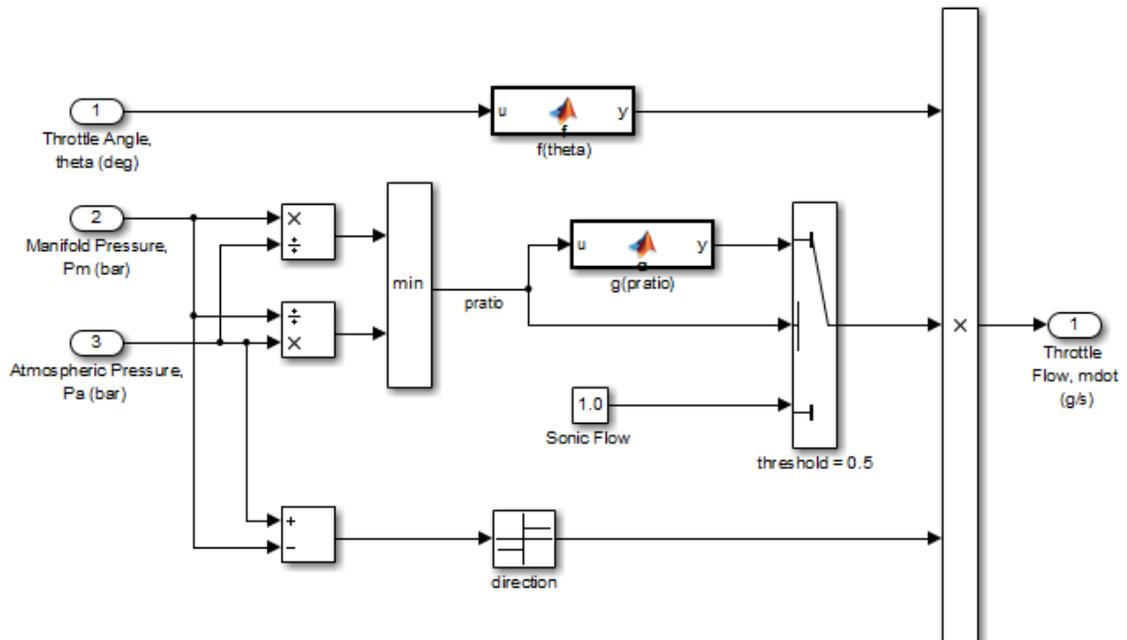

In the Engine Gas Dynamics/Mixing & Combustion subsystem, the MinMax block uses the max operator:

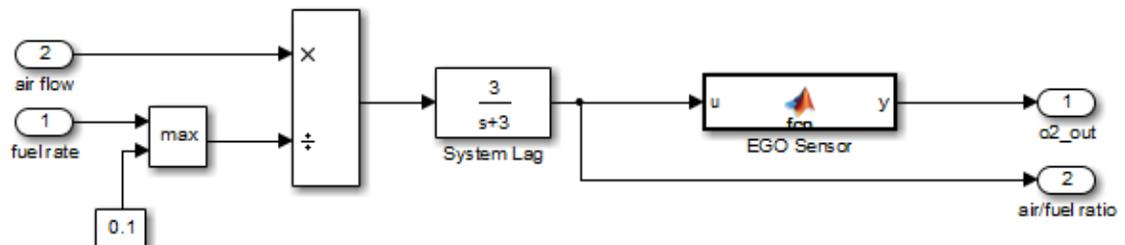

# MinMax

---


<b>Characteristics</b>	Direct Feedthrough	Yes
	Sample Time	Specified in the <b>Sample time</b> parameter
	Scalar Expansion	Yes, of the inputs
	Dimensionalized	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	Yes, if enabled

**See Also**      MinMax Running Resettable

**Purpose** Determine minimum or maximum of signal over time

**Library** Math Operations

## Description

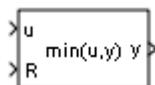

The MinMax Running Resettable block outputs the minimum or maximum of all past inputs  $u$ . You specify whether the block outputs the minimum or the maximum with the **Function** parameter.

The block can reset its state based on an external reset signal  $R$ . When the reset signal  $R$  is `TRUE`, the block resets the output to the value of the **Initial condition** parameter.


The input can be a scalar, vector, or matrix signal. If you specify a scalar **Initial condition** parameter, the block expands the parameter to have the same dimensions as a nonscalar input. The block outputs a signal having the same dimensions as the input. Each output element equals the running minimum or maximum of the corresponding input elements.

## Data Type Support

The MinMax Running Resettable block accepts and outputs real signals of any numeric data type that Simulink supports, except `Boolean`. The MinMax Running Resettable block supports fixed-point data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# MinMax Running Resettable

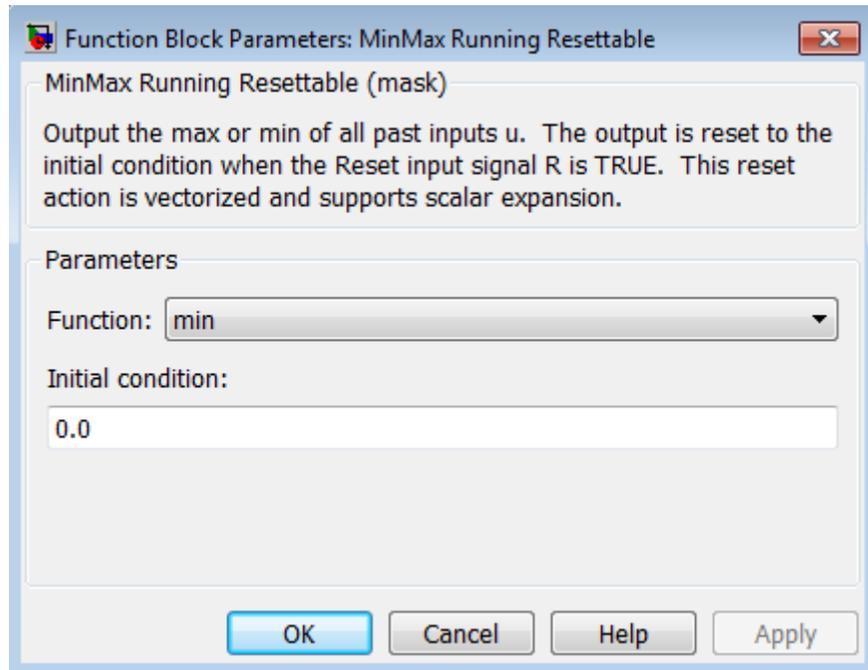

## Parameters and Dialog Box

### Function

Specify whether the block outputs the minimum or the maximum.

### Initial condition

Specify initial condition.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes


## See Also

MinMax

**Purpose** Include model as block in another model

**Library** Ports & Subsystems

## Description

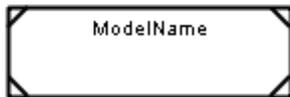

The Model block allows you to include a model as a block in another model. The included model is called a *referenced model*, and the model containing it (via the Model block) is called the *parent model*.

The Model block displays input ports and output ports corresponding to the top-level input and output ports of the referenced model. Using these ports allow you to connect the referenced model to other blocks in the parent model. See “Model Reference” for more information.

A Model block can specify the referenced model:

- Statically, as a Model block parameter value, which must name the model literally
- Dynamically, depending on base workspace values

A Model Variants block is a Model block with variants enabled. The Model block parameter dialog box contains the **Enable Variants** button by default. If you click the **Enable Variants** button, the Model Variants block parameter dialog opens. The Model Variants block parameter dialog contains the **Disable Variants** button by default. Therefore, you can use either the Model block or the Model Variants block for implementing model variants. For more information about how to specify a referenced model for multiple specifications, see “Set Up Model Variants”.

# Model, Model Variants

---

By default, the contents of a referenced model are user-visible, but you can hide the contents as described in “Protected Model”.


A signal that connects to a Model block is functionally the same signal outside and inside the block. A given signal can have at most one associated signal object, so the signal connected to the Model block cannot have a signal object in both the parent and the referenced models. For more information, see `Simulink.Signal`.

The Model block supports signal label propagation. For details specific to model referencing and model variants, see:

- “Processing for Referenced Models”
- “Processing for Variants and Configurable Subsystems”

## **Data Type Support**

Determined by the root-level inputs and outputs of the model referenced by the Model block.

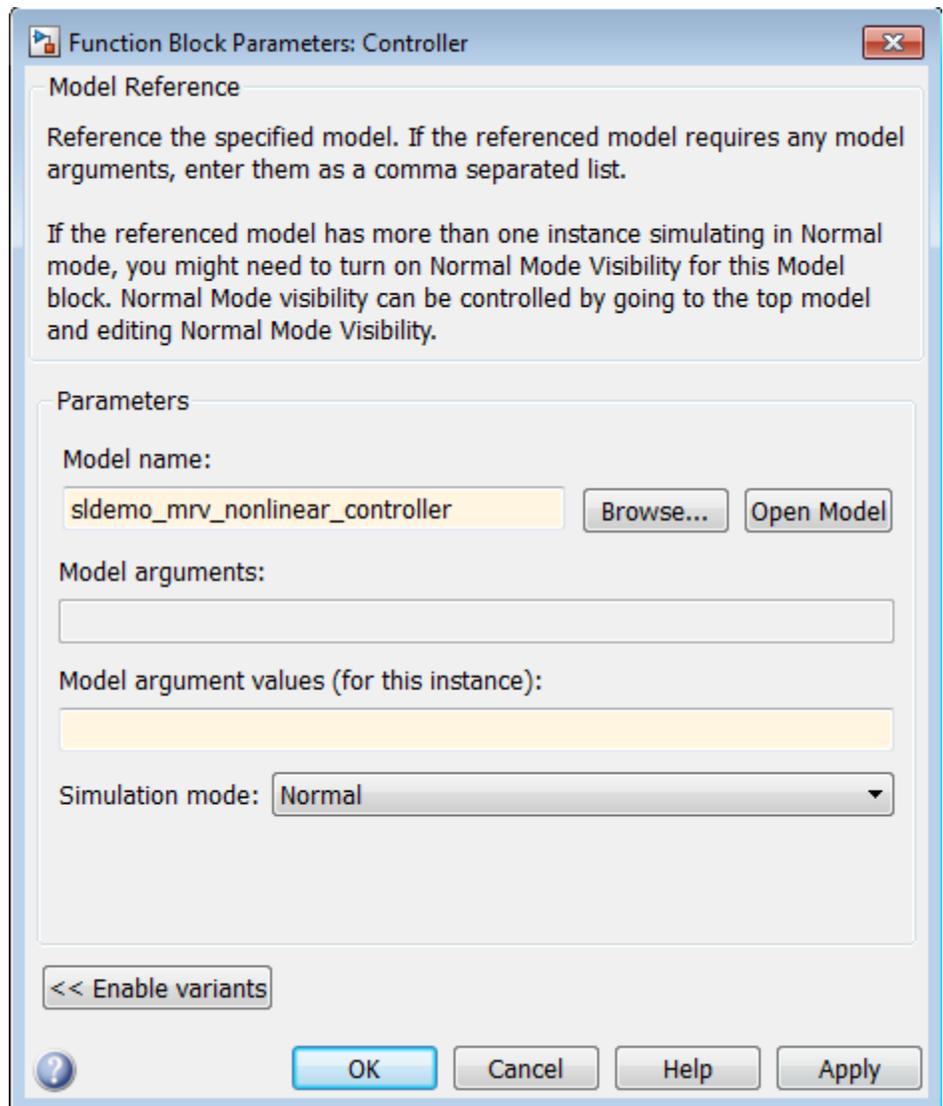

## Parameters and Dialog Box

- “Model name” on page 1-1041
- “Model arguments” on page 1-1042

# Model, Model Variants

---

- “Model argument values (for this instance)” on page 1-1043
- “Simulation mode” on page 1-1044
- “Enable variants” on page 1-1046
- “Variant choices” on page 1-1048
- “Variant control” on page 1-1051
- “Condition (read only)” on page 1-1052
- “Model name” on page 1-1053
- “Model name” on page 1-1054
- “Model arguments” on page 1-1055
- “Model argument values (for this instance)” on page 1-1056
- “Simulation mode” on page 1-1057
- “Override variant conditions and use following variant” on page 1-1059
- “Variant” on page 1-1060
- “Generate preprocessor conditionals” on page 1-1061
- “Disable variants” on page 1-1061

## Model name

Name of the model this block references.

### Settings

**Default:** <Enter Model Name>

The value must be a valid MATLAB identifier.

The extension, for example, .SLX, is optional.

### Tips

- To navigate to the model that you want to reference from this block, use the **Browse** button to the right of the **Model name** parameter.
- To confirm that the model you specify is the one you intended, you can use the **Open Model** button to the right of the **Model name** parameter.

### Command-Line Information

**Parameter:** ModelNameDialog

**Type:** string

**Value:** Any valid value

**Default:** The name of the referenced model exactly as you typed it in, with any surrounding white space removed. When you set ModelNameDialog programmatically or from the dialog, Simulink automatically sets the values of ModelName and ModelFile based on the value of ModelNameDialog.

# Model, Model Variants

---

## **Model arguments**

Display model arguments accepted by the model referenced by this block.

Declaring a variable to be a model argument allows each instance of the model to use a different value for that variable.

## **Settings**

**Default:** ''

This is a read-only parameter that displays model arguments for the model referenced by this block. To create model arguments, refer to “Using Model Arguments”.

## **Model argument values (for this instance)**

Specify values to be passed as model arguments to the model referenced by this block each time the simulation invokes the model.

You can enter the values as literal values, variable names, MATLAB expressions, and Simulink parameter objects. Any symbols used resolve to values as described in “Symbol Resolution Process”. All values must be numeric (including objects with numeric values).

### **Settings**

Enter the values in this parameter as a comma-separated list in the same order as the corresponding argument names in the **Model arguments** field.

### **Command-Line Information**

**Parameter:** ParameterArgumentValues

**Type:** string

**Value:** Any valid value

**Default:** ''

# Model, Model Variants

---

## Simulation mode

Set the simulation mode for the model referenced by this block. This setting specifies whether to simulate the model by generating and executing code or by interpreting the model in Simulink.

## Settings

**Default:** Accelerator

### Accelerator

Creates a MEX-file for the sub model, then executes the sub model by running the S-function.

### Normal

Executes the sub model interpretively, as if the sub model were an atomic subsystem implemented directly within the parent model.

### Software-in-the-loop (SIL)

This option requires the Embedded Coder software. Generates production code using model reference target for the sub model. This code is compiled for, and executed on, the host platform.

### Processor-in-the-loop (PIL)

This option requires the Embedded Coder software. Generates production code using model reference target for the sub model. This code is compiled for, and executed on, the target platform. A documented target connectivity API supports exchange of data between the host and target at each time step during the PIL simulation.

## Command-Line Information

**Parameter:** SimulationMode

**Type:** string

**Value:** 'Accelerator' | 'Normal' | 'Software-in-the-loop (SIL)' | 'Processor-in-the-loop (PIL)'

**Default:** 'Accelerator'

## See Also

- “Using Model Arguments”
- “Choosing a Simulation Mode”

- “Overview of the Target Connectivity API”
- “Numerical Equivalence Testing”

# Model, Model Variants

## Enable variants

Enables variants and opens the Model Variants block parameter dialog box, which is hidden by default. The Model Variants block parameter dialog is the default block parameter dialog for the Model Variants block.


## Settings

**Default:** Disabled

## Dependencies

This button enables the Model Variants Sections, which include: **Variant choices** table, **Model parameters for the chosen variant in table** section, parameters to override variants, and a **Code generation** section.

The following example shows the Model variants options from the example model `sldemo_md1ref_variants`.

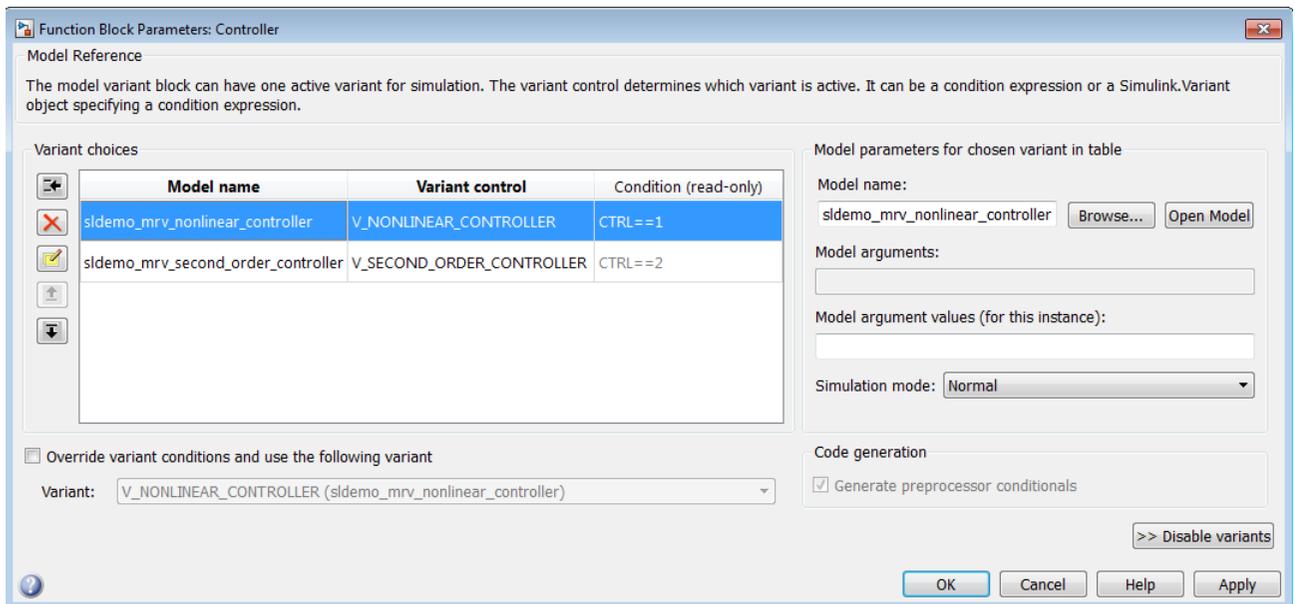

**See Also**

“Set Up Model Variants”

# Model, Model Variants

---

## Variant choices

Displays a table of variant choices, associated model names, variant controls, and conditions. The variant control can be a boolean condition expression, or a `Simulink.Variant` object representing a boolean condition expression. If you want to generate code for your model, you must define the control variables as `Simulink.Parameter` objects.

### Settings

**Default:** The table has a row for each variant object in the base workspace. The **Variant choices** table includes the **Model name**, its associated **Variant control**, and **Condition (read-only)** columns.

Use the **Add a new variant** button to add a new row to the table. See the description of the **Model name**, **Variant control**, and **Condition (read-only)** table columns for information about how to set values for table rows.

### Tips

You can use buttons to the left of the **Variant choices** table to modify the table.

Function	Button
<b>Add a new variant:</b> Add a new, empty row below the currently selected row	
<b>Delete selected variant:</b> Delete the currently selected row. (Models and objects are not affected.)	
<b>Create/Edit selected variant object:</b> Creates a <code>Simulink.Variant</code> object in the base workspace and opens the <code>Simulink.Variant</code> object parameter dialog in order to specify the variant <b>Condition</b> . This button will only be enabled for valid <code>Simulink.Variant</code> objects.	

Function	Button
<b>Move variant up:</b> Move the currently selected row up one slot in the table	
<b>Move variant down:</b> Move the currently selected row down one slot in the table	

## Dependency

**Enable variants** enables this parameter.

## Command-Line Information

**Parameter:** Variants

**Type:** array

**Value:** array of variant structures where each element specifies one variant. The structure fields are:

- `variant.Name` (string) — The variant control can be a boolean condition expression, or a `Simulink.Variant` object representing a boolean condition expression. If you want to generate code for your model, you must define the control variables as `Simulink.Parameter` objects.
- `variant.ModelName` (string) — The name of the referenced model associated with the specified variant control in the Model block.
- `variant.ParameterArgumentNames` (string) — Read-only string containing the names of the model arguments for which the Model block must supply values.
- `variant.ParameterArgumentValues` (string) — The values to supply for the model arguments when this variant is the active variant.
- `variant.SimulationMode` (string) — The execution mode to use when this variant is the active variant.
  - Possible values are 'Accelerator' | 'Normal' | 'Software-in-the-loop (SIL)' | 'Processor-in-the-loop (PIL)'

# Model, Model Variants

---

## **See Also**

“Configure the Model Variants Block”

## Variant control

Displays the variant controls in the base workspace. The variant control can be a boolean condition expression, or a `Simulink.Variant` object representing a boolean condition expression. If you want to generate code for your model, you must define the control variables as `Simulink.Parameter` objects.

### Settings

**Default:** Variant1

To enter a variant control name, double-click **Variant control** column in a new row and enter the variant control expression.

### Dependency

**Enable variants** enables this parameter.

### Command-Line Information

**Structure field:** Represented by the `variant.Name` field in the `Variants` parameter structure

**Type:** string

**Value:** Variant control associated with the variant.

**Default:** ''

### See Also

- `Simulink.Variant`

# Model, Model Variants

---

## Condition (read only)

Display the condition for the `Simulink.Variant` object.

### Settings

This read-only field displays the condition for the associated model variant in the base workspace. Click the **Edit selected variant object** button to specify the condition for the selected variant object.

### Tips

The variant condition must be a Boolean expression that references at least one base workspace variable or parameter. For example, `FUEL == 2 && EMIS == 1`. Do not surround the condition with parentheses or single quotes. The expression can include:

- MATLAB variables defined in the base workspace
- Simulink parameter objects defined in the base workspace
- Scalar variables
- Enumerated values
- Operators `==`, `~=`, `&&`, `||`, `~`
- Parentheses for grouping

### Dependency

**Enable variants** enables this parameter.

### See Also

“Configure the Model Variants Block”

## Model name

Display or enter the name of the model associated with the variant control in the **Variant choices** table.

### Settings

**Default:** ''

Double-click the table cell to enter a model name. The name must be a valid MATLAB identifier.

The extension, for example, .SLX, is optional.

### Tips

You can type the model name into the table, or you can use the **Model parameters for chosen variant in table** controls to find and open models:

- To navigate to the model that you want to reference for the selected variant in the table, click the **Browse** button to the right of the **Model name** edit box.
- To confirm that the model you specify is the one you intended, click the **Open Model** button to the right of the **Model name** edit box.

## Dependency

**Enable variants** enables this parameter.

### Command-Line Information

**Structure field:** represented by the `variant.ModelName` field in the `Variants` parameter structure

**Type:** string

**Value:** any valid value

**Default:** name of the referenced model exactly as you typed it, with any surrounding white space removed. When you set the model name programmatically or using the GUI, Simulink automatically sets the values of `ModelName` and `ModelFile` based on the value of `ModelNameDialog`.

### See Also

“Set Up Model Variants”

# Model, Model Variants

---

## Model name

Display or enter the name of the model associated with the selected variant object in the **Variant choices** table.

### Settings

**Default:** ''

Must be a valid MATLAB identifier.

The extension, for example, .SLX, is optional.

### Tips

You can type the model name in either the table cell or the **Model name** edit box for the selected variant in the table. Use the controls to find and open models as follows:

- To navigate to the model that you want to reference from this block, use the **Browse** button to the right of the **Model name** parameter.
- To confirm that the model you specify is the one you intended, you can use the **Open Model** button to the right of the **Model name** parameter.

### Dependency

**Enable variants** enables this parameter.

### Command-Line Information

**Structure field:** represented by the `variant.ModelName` field in the `Variants` parameter structure

**Type:** string

**Value:** any valid value

**Default:** name of the referenced model exactly as you typed it, with any surrounding white space removed. When you set the model name programmatically or using the dialog, Simulink automatically sets the values of `ModelName` and `ModelFile` based on the value of `ModelNameDialog`.

### See Also

“Set Up Model Variants”

## Model arguments

Display model arguments for the variant control highlighted in the **Variant choices** table.

Declaring a variable to be a model argument allows each instance of the model to use a different value for that variable.

### Settings

**Default:** ''

This is a read-only parameter that displays model arguments for the variant control highlighted in the **Variant choices** table. To create model arguments, refer to “Using Model Arguments”.

### Dependency

**Enable variants** enables this parameter.

### Command-Line Information

**Structure field:** Represented by the `variant.ParameterArgumentNames` field in the `Variants` parameter structure `OneArgName`

**Type:** string

**Value:** Enter model arguments as a comma separated list

**Default:** ''

### See Also

- “Using Model Arguments”
- “Set Up Model Variants”

# Model, Model Variants

---

## **Model argument values (for this instance)**

Specify values to be passed as model arguments for the model variant control highlighted in the **Variant choices** table, each time the simulation invokes the model.

### **Settings**

Enter the values in this parameter as a comma-separated list in the same order as the corresponding argument names in the **Model arguments** field.

### **Dependency**

**Enable variants** enables this parameter.

### **Command-Line Information**

**Structure field:** Represented by the `variant.ParameterArgumentValues` field in the `Variants` parameter `structureOneArgName`

**Type:** string

**Value:** Any valid value

**Default:** ''

### **See Also**

- “Using Model Arguments”
- “Set Up Model Variants”

## Simulation mode

Set the simulation mode for the model variant control highlighted in the **Variant choices** table. This setting specifies whether to simulate the model by generating and executing code or by interpreting the model in Simulink.

### Settings

**Default:** Accelerator

#### Accelerator

Creates a MEX-file for the sub model and then executes the sub model by running the S-function.

#### Normal

Executes the sub model interpretively, as if the sub model were an atomic subsystem implemented directly within the parent model.

#### Software-in-the-loop (SIL)

This option requires the Embedded Coder software. Generates production code using model reference target for the sub model. This code is compiled for, and executed on, the host platform.

#### Processor-in-the-loop (PIL)

This option requires the Embedded Coder software. Generate production code using model reference target for the sub model. This code is compiled for, and executed on, the target platform. A documented target connectivity API supports exchange of data between the host and target at each time step during the PIL simulation.

### Dependency

**Enable variants** enables this parameter.

### Command-Line Information

**Structure field:** Represented by the variant.SimulationMode field in the Variants parameter structure

**Type:** string

**Value:** 'Accelerator' | 'Normal' | 'Software-in-the-loop (SIL)' | 'Processor-in-the-loop (PIL)'

# Model, Model Variants

---

Default: 'Accelerator'

## **See Also**

- “Using Model Arguments”
- “Choosing a Simulation Mode”
- “Numerical Equivalence Testing”
- “Set Up Model Variants”

## Override variant conditions and use following variant

Specify whether to override the variant conditions and make the specified **Variant** parameter the active variant.

### Settings

**Default:** Off



On

Override the variant conditions and set the active variant to the value of the **Variant** .



Off

Determine the active variant by the value of the variant conditions.

### Tip

Both this GUI parameter and the **Variant** GUI parameter (following) use the same API parameter, `OverrideUsingVariant`.

### Dependencies

**Enable variants** enables this parameter.

This parameter enables variants.

### Command-Line Information

**Parameter:** `OverrideUsingVariant`

**Type:** string

**Value:** '' if no overriding variant control is specified.

**Default:** ''

### See Also

“Create, Export, and Reuse Variant Controls”

# Model, Model Variants

---

## Variant

Specify the variant control associated with the model to use if you select **Override variant conditions and use the following variant**.

### Settings

**Default:** ''

Must be a valid non empty or non commented name.

### Tips

- You can use the **Variant** drop down to view a list of all variant controls currently available and their associated models.
- Both this GUI parameter and the **Override variant conditions and use following variant** GUI parameter (above) use the same API parameter, `OverrideUsingVariant`.

### Dependencies

**Enable variants** and **Override variant conditions and use the following variant** enable this parameter.

### Command-Line Information

**Parameter:** `OverrideUsingVariant`

**Type:** string (read-only)

**Value:** Variant control

### See Also

- “Create, Export, and Reuse Variant Controls”
- `Simulink.Variant`

## Generate preprocessor conditionals

Control preprocessor conditionals. This check box is relevant only to code generation, and has no effect on the behavior of a model in Simulink. See “Generate Preprocessor Conditionals for Variant Systems” for more information.

### Settings

**Default:** Disabled

### Dependencies

- The check box is available for generating only ERT targets.
- **Override variant conditions and use following variant** is cleared ('off')
- **Model Configuration Parameters > Optimization > Inline parameters** is selected ('on')
- **Model Configuration Parameters > Code Generation > Interface > Generate preprocessor conditionals** is set to Use local settings.

### Command-Line Information

**Parameter:** GeneratePreprocessorConditionals

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

“Variant Systems”

### Disable variants

Disable model reference variants and hide the Model Variants Section. The block retains any information you have entered and approved by clicking **Apply** or **OK**.

### Command-Line Information

**Parameter:** Variant

**Type:** string

**Value:** 'off' | 'on'

# Model, Model Variants

---

## Navigating a Model Block

**Default:** 'off'

- Double-clicking the prototype Model block in the **Ports & Subsystems** library opens its Block Parameters dialog box for inspection, but does not allow you to specify parameter values.
- Double-clicking an unresolved Model block opens its Block Parameters dialog box. You can resolve the block by specifying a **Model name**.
- Double-clicking a resolved Model block opens the model that the block references. You can also open the model by choosing **Open Model** from the **Context** or **Edit** menu.

To display the Block Parameters dialog box for a resolved Model block, choose **Model Reference Parameters** from the **Context** or **Edit** menu.

## Model Blocks and Direct Feed through

When a Model block is part of a cycle, and the block is a direct feed through block, an algebraic loop can result. An algebraic loop in a model is not necessarily an error, but it may not give the expected results.

- “Algebraic Loops” for information about direct feed through and algebraic loops.
- “Highlighting Algebraic Loops Using the Algebraic Loop Diagnostic” for information about seeing algebraic loops graphically.
- “Display Algebraic Loop Information” for information about tracing algebraic loops in the debugger.
- The “Diagnostics Pane: Solver” pane “Algebraic loop” option for information on detecting algebraic loops automatically.

### Direct Model Block Feed through Caused by Sub model Structure

A Model block may be a direct feed through block due to the structure of the referenced model. Where direct feed through results from sub model structure, and causes an unwanted algebraic loop, you can:

- Automatically eliminate the algebraic loop using techniques described in:
  - “Minimize algebraic loop”
  - “Minimize algebraic loop occurrences”
  - “How Simulink Eliminates Artificial Algebraic Loops”
- Manually insert one or more Unit Delay blocks as needed to break the algebraic loop.

## **Direct Model Block Feed through Caused by Model Configuration**

Embedded Real Time (ert ) based targets provide the option **Model Configuration Parameters > Code Generation > Interface > Single output/update function**. This option controls whether generated code has separate output and update functions, or a combined output/update function. See:

- “Entry-Point Functions and Scheduling” for information about separate and combined output and update functions.
- “Single output/update function” for information about specifying whether code has separate or combined functions.

When **Single output/update function** is enabled (default), a Model block has a combined output/update function. The function makes the block a direct feed through block for all inports, regardless of the structure of the referenced model. Where an unwanted algebraic loop results, you can:

- Disable **Single output/update function**. The code for the Model block then has separate output and update functions, eliminating the direct feed through and hence the algebraic loop.
- Automatically eliminate the algebraic loop using techniques described in:
  - “Minimize algebraic loop”

# Model, Model Variants

---

- “Minimize algebraic loop occurrences”
- “How Simulink Eliminates Artificial Algebraic Loops”
- Manually insert one or more Unit Delay blocks as needed to break the algebraic loop.

## Characteristics

Direct Feed through	If “Single output/update function” is enabled (default), a Model block is a direct feed through block regardless of the structure of the referenced model.  If “Single output/update function” is disabled, a Model block may or may not be a direct feed through block, depending on the structure of the referenced model.
Scalar Expansion	Depends on model referenced by this block.
Multi dimensional	Yes

## Requirements, Limitations, and Tips for Model Variants

A Model Variants block and its referenced models must satisfy the requirements in “Simulink Model Referencing Requirements” and “Model Referencing Limitations”. You can nest Model Variants blocks to any level.

---

**Note** For information on requirements and limitations that apply to *code generation* see “Limitations on Generating Code for Variants”.

---

### Tips

- A Model Variants block can log only those signals that the referenced model specifies as logged. If a model is a variant model, or contains

a variant model, then you can either log all logged signals or log no logged signals. The Signal Logging Selector configuration for the model must be in one of these states:

- The Logging Mode is set to Log all signals as specified in model.
- The Logging Mode is set to **Override signals** and the check box for the model block is either checked () or empty (). The check box cannot be filled ().

For more information about logging referenced models, see “Models with Model Referencing: Overriding Signal Logging Settings”.

To enable logging programmatically, use the `DefaultDataLogging` parameter.

- You can enable or suppress warning messages about mismatches between a Model Variants block and its referenced model by setting diagnostics on the **Diagnostics Pane: Model Referencing**.
- During model compilation, Simulink evaluates variant objects before calling the `InitFcn` callback. Therefore, do not modify the condition of the variant object in the `InitFcn` callback.
- Each variant must have an associated variant control specified in the **Variant control** column. The variant control can be a boolean condition expression, or a `Simulink.Variant` object representing a boolean condition expression. If you want to generate code for your model, you must define the variant controls as `Simulink.Parameter` objects.

## See Also

- “Model Reference”
- “Set Up Model Variants”

# Model Info

---

**Purpose** Display model properties and text in model


**Library** Model-Wide Utilities

**Description** The Model Info block displays model properties and text about a model on the mask of the block. Use the Model Info block dialog box to specify the content and format of the text that the block displays. You can select model properties to display on the block. In the text displayed on the block mask, Simulink replaces the property name with the current value of the property in the model.



**Data Type Support** Not applicable.

## Parameters and Dialog Box

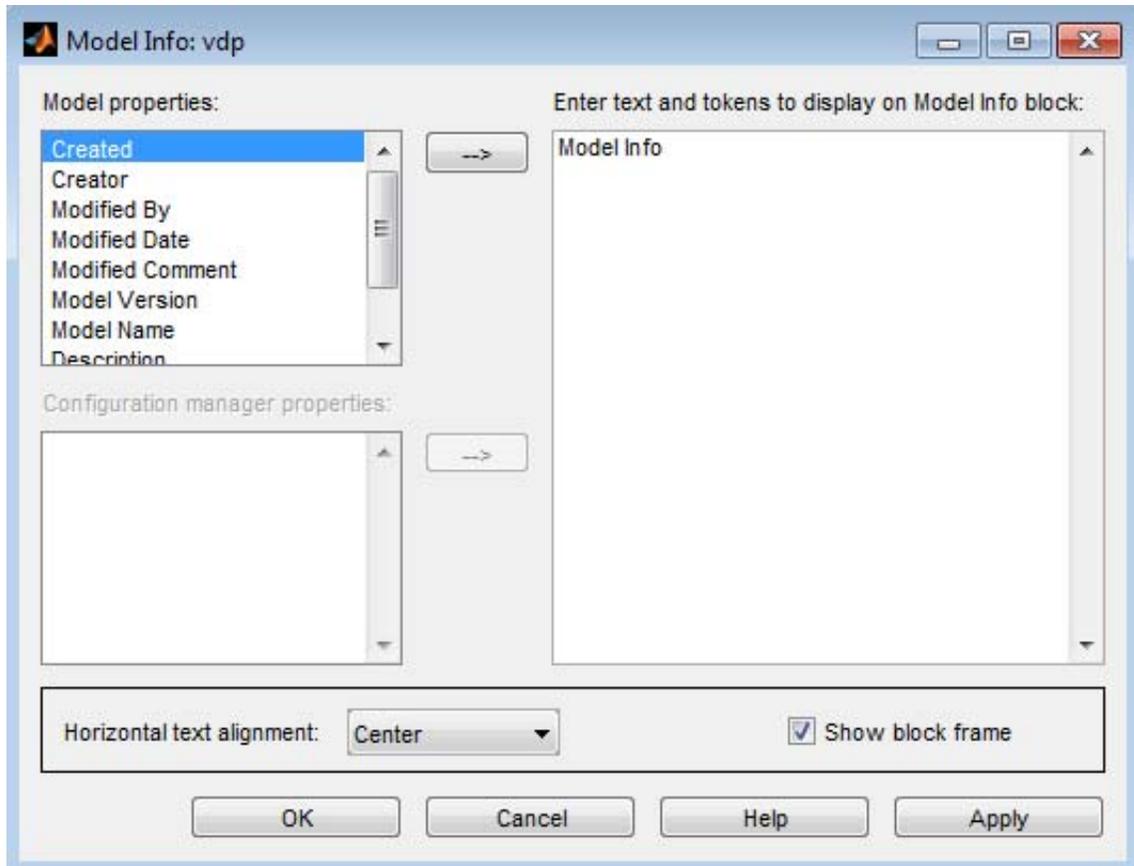

### Specify Text and Properties to Display

Use the **Enter text and tokens to display on Model Info block** edit box to specify the text and properties to display.

# Model Info

---

- In the edit box, enter any text you want to display on the block mask. Edit the default text `Model Info`.
- To display a model property on the block mask, select a property in the **Model properties** list and click the right arrow button.

The block adds a token of the form `%<modelpropertyname>` to the edit box. In the text the block mask displays, Simulink will replace the token with the value of the property.

- 1** For example, if you select `Model Version` in the **Model properties** list and click the right arrow button, then the token

```
%<ModelVersion>
```

appears in the right edit box.

- 2** You could add some explanatory text before the model property, e.g. `Model version is:`.
- 3** When you click **Apply** or **OK**, Simulink displays your new text and the current value of the model property on the block mask in the Model Editor like this example:

```
Model version is:  
1.6
```

See “Version Information Properties” for descriptions of the model properties.

---

## Caution

Using third-party source control tool keyword expansion within model properties tokens might corrupt your model files when you submit them. See “Register Model Files with Source Control Tools”.

---

If you save your model in SLX format, third-party tools cannot perform keyword substitution. Any information in the model file from such third-party tool keyword substitution is cached when you first save

the MDL file as SLX, and is never updated again. The Model Info block shows stale information from then on, so remove third-party tool keyword substitution from Model Info blocks to ensure up-to-date displays.

## Configuration Manager Properties

The **Configuration manager properties** field is enabled only if you previously specified an external configuration manager for this model on the MATLAB **Preferences** dialog box for the model. The field lists version control information maintained by the external system that you can include in the Model Info block. To include an item from the list, select it and then click the adjacent arrow button.

---

**Note** The selected item does not appear in the Model Info block until you check the model in or out of the repository maintained by the configuration manager and you have closed and reopened the model.

---

If you save your model in SLX format, keyword substitution of version information is not available and you cannot add new configuration manager properties in the Model Info block. For existing Configuration manager properties, the block detects the problem, removes stale version information and instead displays: “Not available in SLX model file format”.

For a more flexible interface to source control tools, use Simulink Project instead of the Model Info block. See “Source Control in Simulink Project”.


# Multiport Switch

---

**Purpose** Choose between multiple block inputs

**Library** Signal Routing

**Description** **Types of Block Inputs**

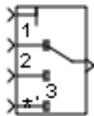

The Multiport Switch block chooses among several inputs. The first input is the *control input*, while the others are *data inputs*. The value of the control input determines which data input passes to the output port.

---

**Note** This block is the same as the Index Vector block. If you set **Number of data ports** to 1, you get the Index Vector block.

---

When you set **Data port for default case** to Additional data port, an extra data port with a \* label appears below the other data inputs. For more information, see “How the Block Handles an Out-of-Range Control Input” on page 1-1072.

## Rules That Determine the Block Output

You specify the number of data inputs with **Number of data ports**. Data inputs can be scalar or vector.

- If you specify only one data input and that input is a vector, the block behaves as an *index selector*, and not as a multiport switch. The block output is the input vector element whose index matches the control input.
- If you specify more than one data input, the block behaves as a multiport switch. The block output is the data input that corresponds to the value of the control input. If at least one of the data inputs is a vector, the block output is a vector. In this case, the block expands any scalar inputs to vectors.
- If the data inputs are scalar, the output is a scalar.

## How the Block Interprets the Control Input

The following table summarizes how the block interprets the control input and passes data to the output.

Control Input	Truncation	Setting for Data Port Order	Block Behavior During Simulation	
			The specified data input passes to the output based on...	And an out-of-range error occurs when...
Integer value	None	Zero-based contiguous	Zero-based indexing	The control input is less than 0 or greater than the number of data inputs minus one
		One-based contiguous	One-based indexing	The control input is less than 1 or greater than the number of data inputs
		Specify indices	Indices you specify	The control input does not correspond to any specified data port index
Not an integer value	The block truncates the value to an integer by rounding to floor.	Zero-based contiguous	Zero-based indexing	The truncated control input is less than 0 or greater than the number of data inputs minus one
		One-based contiguous	One-based indexing	The truncated control input is less than 1 or greater than the number of data inputs
		Specify indices	Indices you specify	The truncated control input does not correspond to any

# Multiport Switch



Control Input	Truncation	Setting for Data Port Order	Block Behavior During Simulation	
			The specified data input passes to the output based on...	And an out-of-range error occurs when...
				specified data port index

## How the Block Handles an Out-of-Range Control Input

For a control input with an integer value, the input is out of range when the value does not match any data port indices. For a control input that is not an integer value, the input is out of range when the *truncated* value does not match any data port indices. In both cases, the block behavior depends on your settings for **Data port for default case** and **Diagnostic for default case**.

### Behavior for Simulation



The following behavior applies only to simulation for your model.

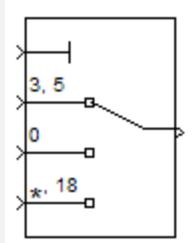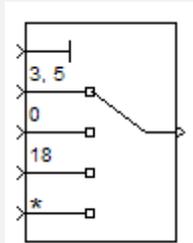Data port for default case	Diagnostic for default case		
	None	Warning	Error
Last data port 	Use the last data port and do not report any warning or error.	Use the last data port and report a warning.	Report an error and stop simulation.
Additional data port 	Use the additional data port with a * label and do not report any warning or error.	Use the additional data port with a * label and report a warning.	Report an error and stop simulation.

### Behavior for Code Generation

The following behavior applies to code generation for your model.

# Multiport Switch

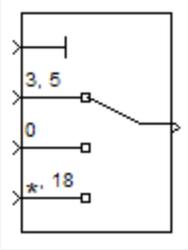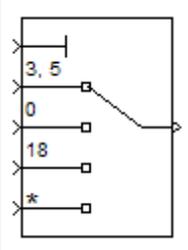Data port for default case	Diagnostic for default case		
	None	Warning	Error
Last data port 	Use the last data port.	Use the last data port.	Use the last data port.
Additional data port 	Use the additional data port with a * label.	Use the additional data port with a * label.	Use the additional data port with a * label.

## Guidelines on Setting Parameters for Enumerated Control Port

When the control port on the Multiport Switch block is of enumerated type, follow these guidelines:

Scenario	What to Do	Rationale
The enumerated type contains a value that represents invalid, out-of-range, or uninitialized values.	<ul style="list-style-type: none"><li>• Set <b>Data port order</b> to Specify indices.</li><li>• Set <b>Data port indices</b> to use this value for the last data port.</li><li>• Set <b>Data port for default case</b> to Last data port.</li></ul>	This block configuration handles invalid values that the enumerated type explicitly represents.
The enumerated type contains only valid enumerated values. However, a data input port can get invalid values of enumerated type.	<ul style="list-style-type: none"><li>• Set <b>Data port for default case</b> to Additional data port.</li></ul>	This block configuration handles invalid values that the enumerated type does not explicitly represent.
The enumerated type contains only valid enumerated values. Data input ports can never get invalid values	<ul style="list-style-type: none"><li>• Set <b>Data port for default case</b> to Last data port.</li><li>• Set <b>Diagnostic for default case</b> to None.</li></ul>	This block configuration avoids unnecessary diagnostic action.

# Multiport Switch

---

Scenario	What to Do	Rationale
of enumerated type.		
The block does not have a data input port for every value of the enumerated type.	<ul style="list-style-type: none"><li>• Set <b>Data port for default case</b> to Additional data port.</li></ul>	This block configuration handles enumerated values that do not have a data input port, along with invalid values.

## Data Type Support


The control signal can be of any data type that Simulink supports, including fixed-point and enumerated types. If the control signal is numeric, it cannot be complex. If the control signal is an enumerated signal, the block uses the value of the underlying integer to select a data port. If the underlying integer does not correspond to a data port, an error occurs.

The data signals can be of any data type that Simulink supports. If any data signal is of an enumerated type, all others must be of the same enumerated type.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.


## Parameters and Dialog Box

The **Main** pane of the Multiport Switch block dialog box appears as follows:

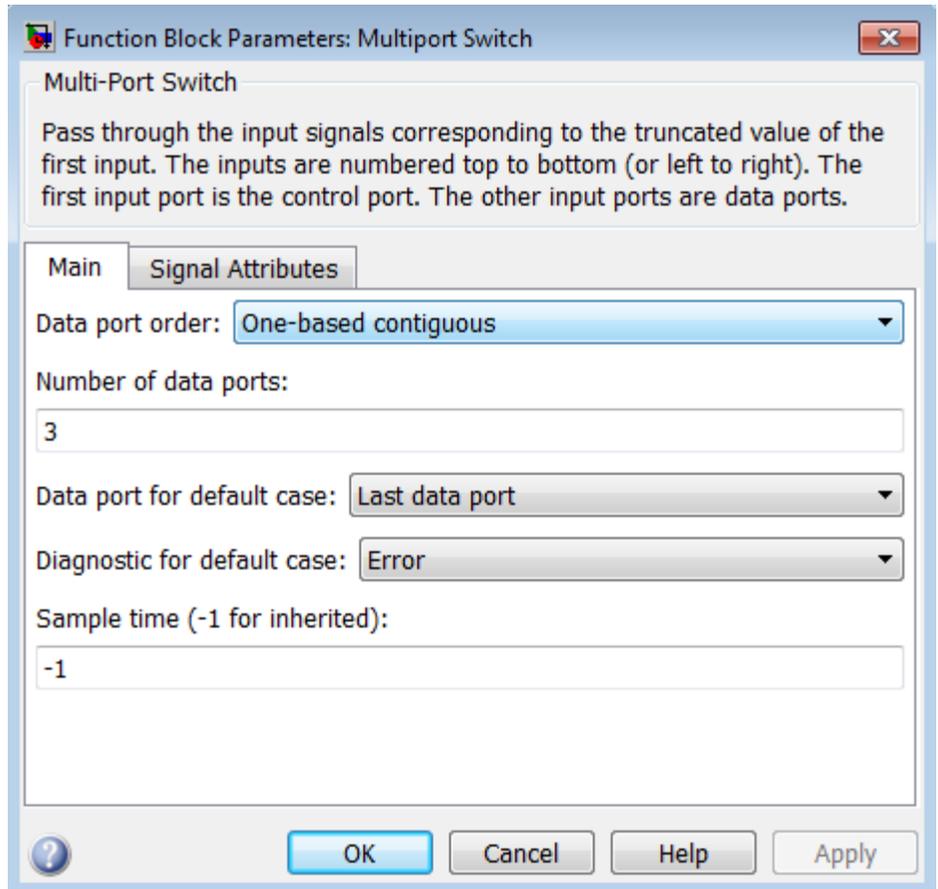

The **Signal Attributes** pane of the Multiport Switch block dialog box appears as follows:

# Multiport Switch

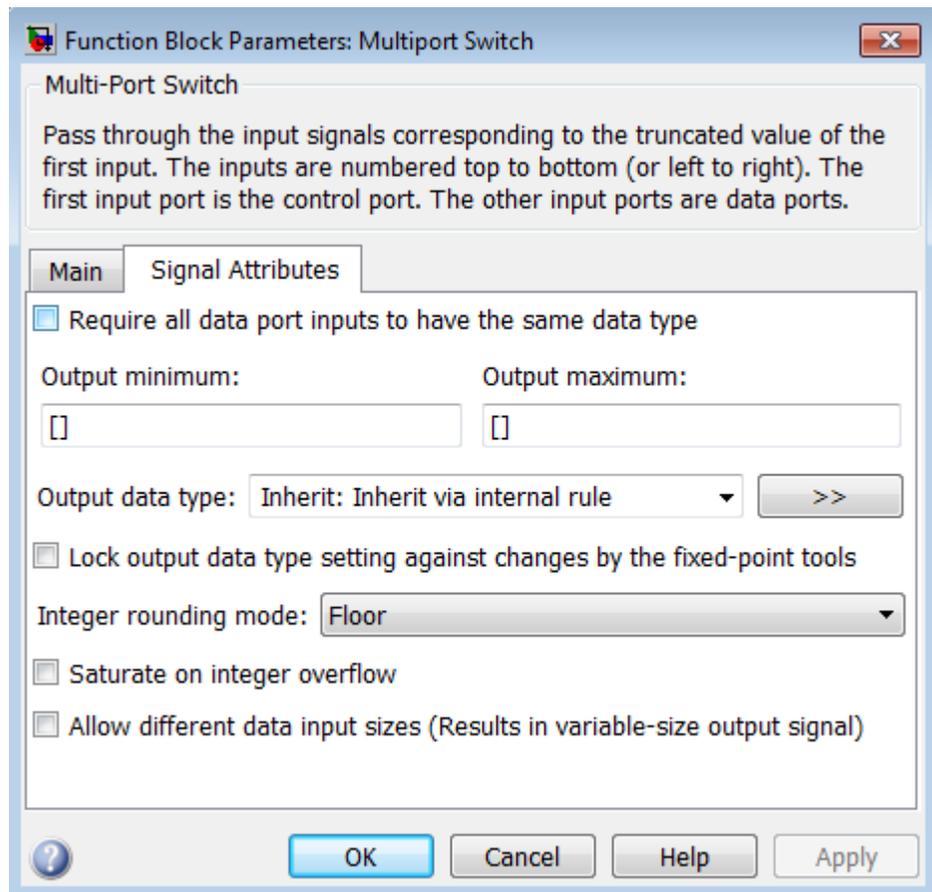

- “Data port order” on page 1-1080
- “Number of data ports” on page 1-1082
- “Data port indices” on page 1-1083
- “Data port for default case” on page 1-1085
- “Diagnostic for default case” on page 1-1086

- “Sample time (-1 for inherited)” on page 1-2024
- “Require all data port inputs to have the same data type” on page 1-1088
- “Lock output data type setting against changes by the fixed-point tools” on page 1-1774
- “Integer rounding mode” on page 1-1775
- “Saturate on integer overflow” on page 1-1777
- “Allow different data input sizes” on page 1-1094
- “Output minimum” on page 1-1095
- “Output maximum” on page 1-1096
- “Output data type” on page 1-1097
- “Mode” on page 1-1099
- “Data type override” on page 1-1975
- “Signedness” on page 1-1102
- “Word length” on page 1-1103
- “Scaling” on page 1-1789
- “Fraction length” on page 1-1105
- “Slope” on page 1-1106
- “Bias” on page 1-1107

# Multiport Switch

---

## Data port order

Specify the type of ordering for your data input ports.

### Settings

**Default:** One-based contiguous (for Multiport Switch block),  
Zero-based contiguous (for Index Vector block)

#### Zero-based contiguous

Block uses zero-based indexing for ordering contiguous data ports.

#### One-based contiguous

Block uses one-based indexing for ordering contiguous data ports.

#### Specify indices

Block uses noncontiguous indexing for ordering data ports.

### Tips

- When the control port is of enumerated type, select **Specify indices**.
- If you select **Zero-based contiguous** or **One-based contiguous**, verify that the control port is not of enumerated type. This configuration is deprecated and produces an error. You can run `slupdate` on your model to replace each Multiport Switch block of this configuration with a block that explicitly specifies data port indices.
- Avoid situations where the block contains unused data ports for simulation or code generation. When the control port is of fixed-point or built-in data type, verify that all data port indices are representable with that type. Otherwise, the following block behavior occurs:

<b>If the block has unused data ports and data port order is...</b>	<b>You get...</b>
Zero-based contiguous or One-based contiguous	A warning
Specify indices	An error

## **Dependencies**

Selecting Zero-based contiguous or One-based contiguous enables the **Number of data ports** parameter.

Selecting Specify indices enables the **Data port indices** parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Multiport Switch

---

## **Number of data ports**

Specify the number of data input ports to the block.

## **Settings**

**Default:** 3 (for Multiport Switch block), 1 (for Index Vector block)

The block icon changes to match the number of data input ports you specify.

## **Dependency**

Selecting Zero-based contiguous or One-based contiguous for **Data port order** enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Data port indices

Specify an array of indices for your data ports.

### Settings

**Default:** {1,2,3}

The block icon changes to match the data port indices you specify.

### Tips

- To specify an array of indices that correspond to all values of an enumerated type, enter `enumeration('type_name')` for this parameter. Do not include braces.

For example, `enumeration('MyColors')` is a valid entry.

- To enter specific values of an enumerated type, use the `type_name.enumerated_name` format. Do not enter the underlying integer value.

For example, `{MyColors.Red, MyColors.Green, MyColors.Blue}` is a valid entry.

- To indicate that more than one value maps to a data port, use brackets.

For example, the following entries are both valid:

- `{MyColors.Red, MyColors.Green, [MyColors.Blue, MyColors.Yellow]}`
- `{[3,5],0,18}`

- If the control port is of fixed-point or built-in data type, the values for **Data port indices** must be representable with that type. Otherwise, an error appears at compile time to alert you to unused data ports.
- If the control port is of enumerated data type, the values for **Data port indices** must be enumerated values of that type.
- If **Data port indices** contains values of enumerated type, the control port must be of that data type.

# Multiport Switch

---

## **Dependency**

Selecting Specify indices for **Data port order** enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Data port for default case

Specify whether to use the last data port for out-of-range inputs, or to use an additional port.

### Settings

**Default:** Last data port

#### Last data port

Block uses the last data port for output when the control port value does not match any data port indices.

#### Additional data port

Block uses an additional data port for output when the control port value does not match any data port indices.

### Tip

If you set this parameter to `Additional data port` and **Number of data ports** is 3, the number of input ports on the block is 5. The first input is the control port, the next three inputs are data ports, and the fifth input is the default port for out-of-range inputs.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Multiport Switch

---

## Diagnostic for default case

Specify the diagnostic action to take when the control port value does not match any data port indices.

### Settings

**Default:** Error

None

Do not show any warning or error message.

Warning

Show a warning message in the MATLAB Command Window and continue the simulation.

Error

Stop simulation and display an error in the Diagnostic Viewer. In this case, the **Data port for default case** is used only for code generation and not simulation.

For more information, see “How the Block Handles an Out-of-Range Control Input” on page 1-1072.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Sample time (-1 for inherited)**

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### **Settings**

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Multiport Switch

---

## **Require all data port inputs to have the same data type**

Specify allowed data types.

### **Settings**

**Default:** Off



On

Requires all data port inputs to have the same data type.



Off

Allows data port inputs to have different data types.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off



On

Locks the output data type setting for this block.



Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

# Multiport Switch

---

## Integer rounding mode

Specify the rounding mode for fixed-point operations.

### Settings

**Default:** Floor

#### Ceiling

Rounds both positive and negative numbers toward positive infinity. Equivalent to the MATLAB `ceil` function.

#### Convergent

Rounds number to the nearest representable value. If a tie occurs, rounds to the nearest even integer. Equivalent to the Fixed-Point Designer `convergent` function.

#### Floor

Rounds both positive and negative numbers toward negative infinity. Equivalent to the MATLAB `floor` function.

#### Nearest

Rounds number to the nearest representable value. If a tie occurs, rounds toward positive infinity. Equivalent to the Fixed-Point Designer `nearest` function.

#### Round

Rounds number to the nearest representable value. If a tie occurs, rounds positive numbers toward positive infinity and rounds negative numbers toward negative infinity. Equivalent to the Fixed-Point Designer `round` function.

#### Simplest

Automatically chooses between round toward floor and round toward zero to generate rounding code that is as efficient as possible.

#### Zero

Rounds number toward zero. Equivalent to the MATLAB `fix` function.

## Command-Line Information

**Parameter:** RndMeth

**Type:** string

**Value:** 'Ceiling' | 'Convergent' | 'Floor' | 'Nearest' |  
'Round' | 'Simplest' | 'Zero'

**Default:** 'Floor'

## See Also

For more information, see “Rounding” in the Fixed-Point Designer documentation.

# Multipoint Switch

---

## Saturate on integer overflow

Specify whether overflows saturate.

### Settings

**Default:** Off



On

Overflows saturate to either the minimum or maximum value that the data type can represent.

For example, an overflow associated with a signed 8-bit integer can saturate to -128 or 127.



Off

Overflows wrap to the appropriate value that is representable by the data type.

For example, the number 130 does not fit in a signed 8-bit integer and wraps to -126.

### Tips

- Consider selecting this check box when your model has possible overflow and you want explicit saturation protection in the generated code.
- Consider clearing this check box when you want to optimize efficiency of your generated code.

Clearing this check box also helps you avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.

- When you select this check box, saturation applies to every internal operation on the block, not just the output or result.
- In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Command-Line Information

**Parameter:** SaturateOnIntegerOverflow

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Multiport Switch

---

## **Allow different data input sizes**

Select this check box to allow input signals with different sizes.

### **Settings**

**Default:** Off



On

Allows input signals with different sizes, and propagate the input signal size to the output signal.



Off

Requires that input signals be the same size.

### **Command-Line Information**

**Parameter:** AllowDiffInputSize

**Type:** string

**Value:** 'on' | 'off'

**Default:** 'off'

## **Output minimum**

Specify the minimum value that the block outputs.

## **Settings**

**Default:** []

The default value is [] (unspecified).

Simulink uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## **Tip**

This number must be a finite real double scalar value.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Multiport Switch

---

## **Output maximum**

Specify the maximum value the block outputs.

### **Settings**

**Default:** []

The default value is [] (unspecified).

Simulink uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### **Tip**

This number must be a finite real double scalar value.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Output data type

Specify the output data type.

### Settings

**Default:** `Inherit: Inherit via internal rule`

`Inherit: Inherit via internal rule`

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.
- To specify your own inheritance rule, use `Inherit: Inherit via back propagation` and then use a Data Type Propagation block. Examples of how to use this block are available in the Signal Attributes library Data Type Propagation Examples block.

`Inherit: Inherit via back propagation`

Uses the data type of the driving block.

`double`

Specifies output data type double.

`single`

Specifies output data type single.

`int8`

Specifies output data type int8.

# Multiport Switch

---

`uint8`

Specifies output data type `uint8`.

`int16`

Specifies output data type `int16`.

`uint16`

Specifies output data type `uint16`.

`int32`

Specifies output data type `int32`.

`uint32`

Specifies output data type `uint32`.

`fixdt(1,16,0)`

Specifies output data type fixed point `fixdt(1,16,0)`.

`fixdt(1,16,2^0,0)`

Specifies output data type fixed point `fixdt(1,16,2^0,0)`.

`<data type expression>`

Uses a data type object, for example, `Simulink.NumericType`.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Mode

Select the category of data to specify.

## Settings

**Default:** Inherit

### Inherit

Specifies inheritance rules for data types. Selecting **Inherit** enables a list of possible values:

- Inherit via internal rule (default)
- Inherit via back propagation

### Built in

Specifies built-in data types. Selecting **Built in** enables a list of possible values:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

### Fixed point

Specifies fixed-point data types.

### Expression

Specifies expressions that evaluate to data types. Selecting **Expression** enables you to enter an expression.

## Dependency

Clicking the **Show data type assistant** button enables this parameter.

# Multiport Switch

---

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is `Built in` or `Fixed point`.

# Multiport Switch

---

## **Signedness**

Specify fixed-point data as signed or unsigned.

## **Settings**

**Default:** Signed

Signed

Specifies the fixed-point data as signed.

Unsigned

Specifies the fixed-point data as unsigned.

## **Dependency**

Selecting **Mode** > **Fixed point** enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type”.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

Large word sizes represent large values with greater precision than small word sizes.

### **Dependency**

Selecting **Mode** > **Fixed point** enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type”.

# Multiport Switch

---

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

## Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

## Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

## See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependency**

Selecting **Scaling** > Binary point enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type”.

# Multiport Switch

---

## **Slope**

Specify slope for the fixed-point data type.

## **Settings**

**Default:** 2<sup>0</sup>

Specify any positive real number.

## **Dependency**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type”.

## **Bias**

Specify bias for the fixed-point data type.

## **Settings**

**Default:** 0

Specify any real number.

## **Dependency**

Selecting **Scaling** > Slope and bias enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type”.

## **Bus Support**

The Multiport Switch block is a bus-capable block. The data inputs can be virtual or nonvirtual bus signals subject to the following restrictions:

- All the buses must be equivalent (same hierarchy with identical names and attributes for all elements).
- All signals in a nonvirtual bus input to a Multiport Switch block must have the same sample time. This requirement holds even when the elements of the associated bus object specify inherited sample times.


You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus. See “Composite Signals” and “Bus-Capable Blocks” for more information.

You can use an array of buses as an input signal to a Multiport Switch block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”. When you use an array of buses with a Multiport Switch block, set **Number of data ports** to a value of 2 or greater.

# Multiport Switch

## Examples Zero-Based Indexing for Data Ports

The `sf_aircontrol` model uses a Multiport Switch block in the Physical Plant subsystem. This block uses zero-based indexing for contiguous ordering of three data ports.

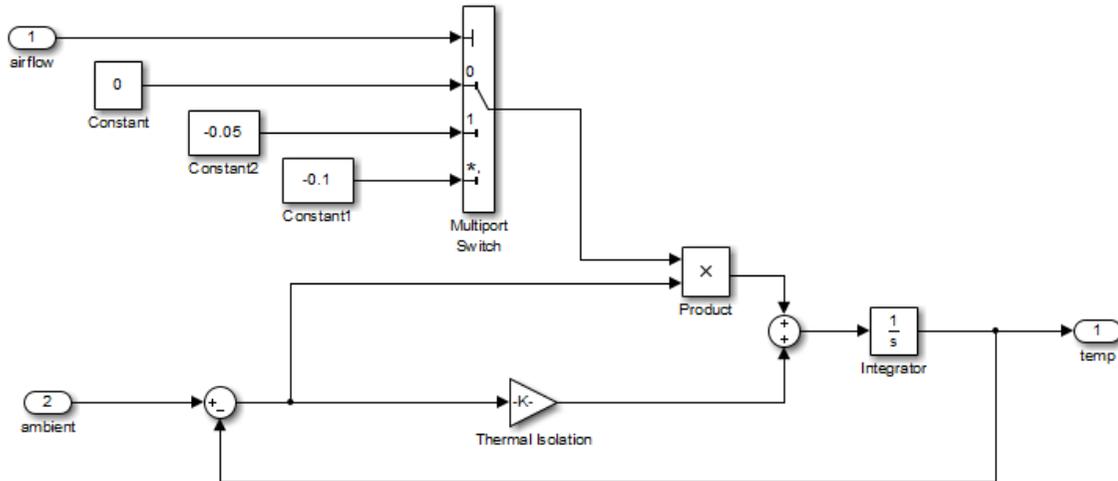


The indices are visible on the data port labels. You do not have to open the block dialog box to determine whether the data ports use zero-based or one-based indexing.

When you set **Data port for default case** to Last data port, the last data port includes a \* on the label. The comma after the \* indicates that the data port index has a value. This port corresponds to the default case, which applies when the control input does not match the data port indices 0, 1, or 2. In this case, the Multiport Switch block outputs a value of -0.1.

## One-Based Indexing for Data Ports

The `sf_semantics_hotel_checkin` model uses a Multiport Switch block. This block uses one-based indexing for contiguous ordering of three data ports.

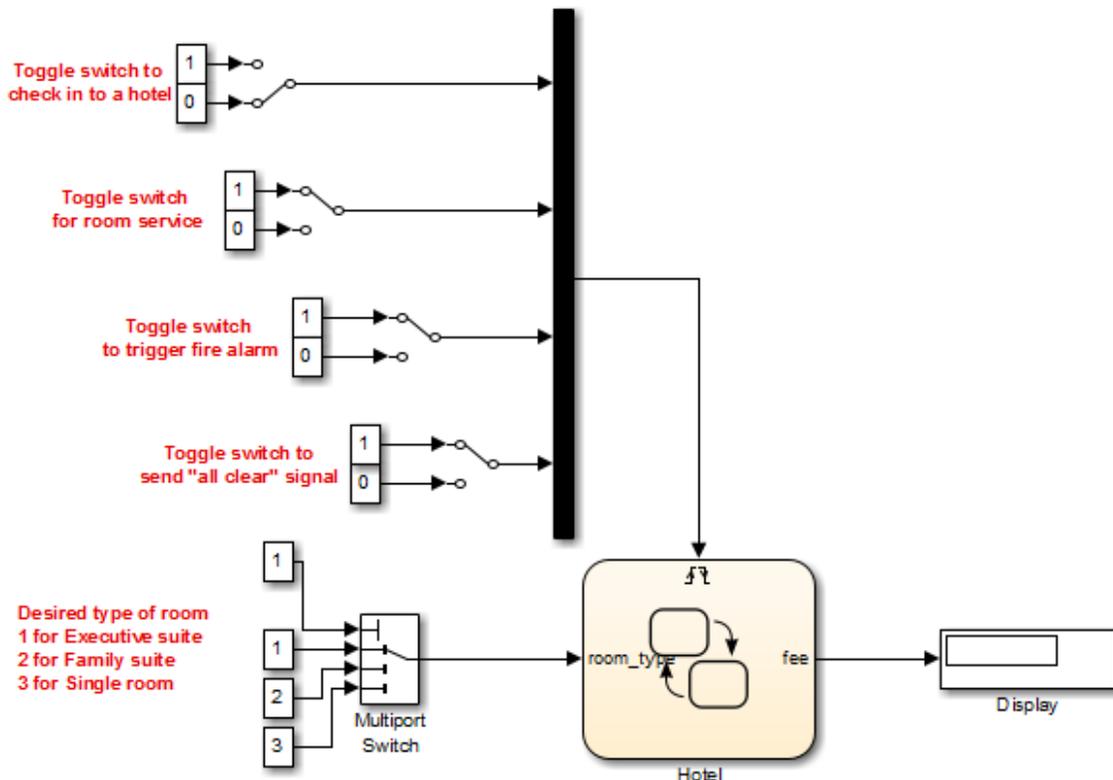


If you increase the size of the block icon, the indices are visible on the data port labels. You do not have to open the block dialog box to determine whether the data ports use zero-based or one-based indexing.

# Multiport Switch

## Enumerated Names for Data Port Indices


The `sldemo_fuelsys` model uses a Multiport Switch block in the `fuel_rate_control/fuel_calc/feedforward_fuel_rate` subsystem. This block uses the enumerated type `sld_FuelModes` to specify three data port indices: LOW, RICH, and DISABLED.

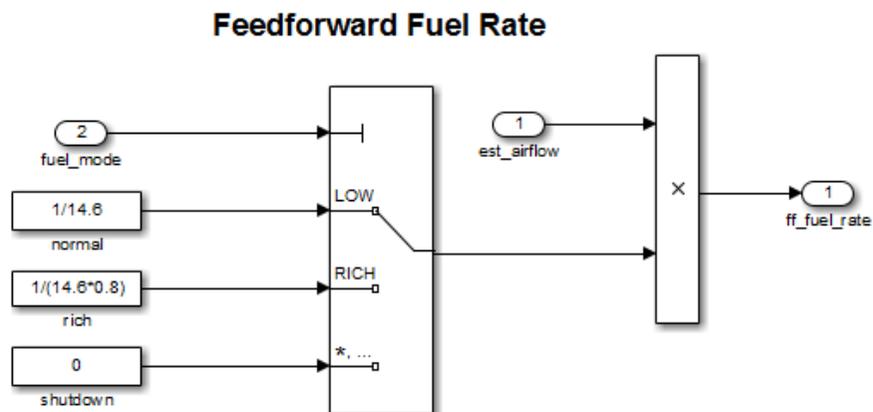

When you set **Data port for default case** to Last data port, the last data port includes a \* on the label. The comma and ellipsis after the \* indicate that the data port index has a value. This port corresponds to the default case, which applies when the control input does not match the data port indices LOW, RICH, or DISABLED. In this case, the Multiport Switch block outputs a value of 0.

## Noncontiguous Values for Data Port Indices

The following model uses a Multiport Switch block that specifies noncontiguous integer values for data ports.

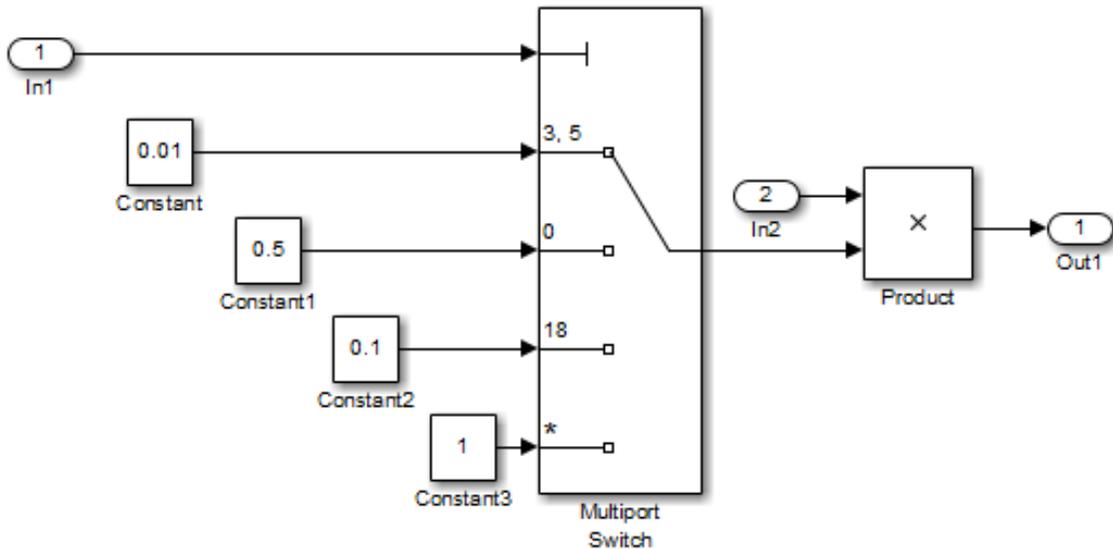



The values of the indices are visible on the data port labels. You do not have to open the block dialog box to determine which value maps to each data port.

When you set **Data port for default case** to Additional data port, an extra port with a \* label appears. This port corresponds to the default case, which applies when the control input does not match the data port indices 3, 5, 0, or 18. In this case, the Multiport Switch block outputs a value of 1.

# Multiport Switch

## Behavior for an Index Vector Block

The following model uses two Index Vector blocks that specify zero-based and one-based indexing, respectively.

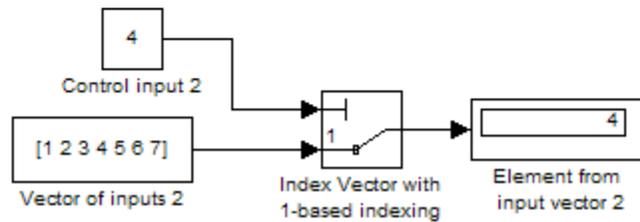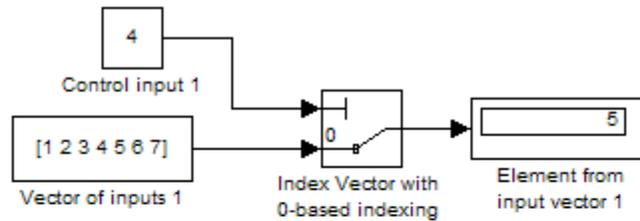

If the value of the control input is not an integer, the block truncates the value by rounding to floor. For more information, see “How the Block Interprets the Control Input” on page 1-1071.

## Characteristics

Bus-capable	Yes, with restrictions
Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Dimensionalized	Yes

Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Switch

**Purpose** Combine several input signals into vector

**Library** Signal Routing

**Description**



The Mux block combines its inputs into a single vector output. An input can be a scalar or vector signal. All inputs must be of the same data type and numeric type. The elements of the vector output signal take their order from the top to bottom, or left to right, input port signals. See “How to Rotate a Block” for a description of the port order for various block orientations. To avoid adding clutter to a model, Simulink hides the name of a Mux block when you copy it from the Simulink library to a model. See “Mux Signals” for information about creating and decomposing vectors.

---

**Note** The Mux block allows you to connect signals of differing data and numeric types and matrix signals to its inputs. In this case, the Mux block acts like a Bus Creator block and outputs a bus signal rather than a vector. MathWorks discourages using Mux blocks to create bus signals, and might not support this practice in future releases. See “Prevent Bus and Mux Mixtures” for more information.

---

Use the **Number of inputs** parameter to specify input signal names and sizes as well as the number of inputs. You can use one of the following formats:

Format	Block Behavior
Scalar	<p>Specifies the number of inputs to the Mux block.</p> <p>When you use this format, the block accepts scalar or vector signals of any size. Simulink assigns each input the name <code>signalN</code>, where N is the input port number.</p>
Vector	<p>The length of the vector specifies the number of inputs. Each element specifies the size of the corresponding input.</p> <p>A positive value specifies that the corresponding port can accept only vectors of that size. For example, <code>[2 3]</code> specifies two input ports of sizes 2 and 3, respectively. If an input signal width does not match the expected width, an error message appears. A value of -1 specifies that the corresponding port can accept scalars or vectors of any size.</p>

<b>Format</b>	<b>Block Behavior</b>
Cell array	<p>The length of the cell array specifies the number of inputs. The value of each cell specifies the size of the corresponding input.</p> <p>A scalar value N specifies a vector of size N. A value of -1 means that the corresponding port can accept scalar or vector signals of any size.</p>
Signal name list	<p>You can enter a list of signal names separated by commas. Simulink assigns each name to the corresponding port and signal. For example, if you enter <code>position, velocity</code>, the Mux block will have two inputs, named <code>position</code> and <code>velocity</code>.</p>

Simulink provides several techniques for combining signals into a composite signal. For a comparison of techniques, see “Techniques for Combining Signals”. MathWorks encourages using Vector Concatenate blocks rather than Mux blocks to combine vectors. The primary exception is the creation of a vector of function calls, which requires a Mux block. In future releases, Mux blocks might have no unique capabilities and might be deprecated.

---

## Tip

---


To create a composite signal, in which the constituent signals retain their identities and can have different data types, use a Bus Creator block rather than a Mux block. Although you can use a Mux block to

create a composite signal, MathWorks discourages this practice. See “Prevent Bus and Mux Mixtures” for more information.

## Data Type Support

The Mux block accepts real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

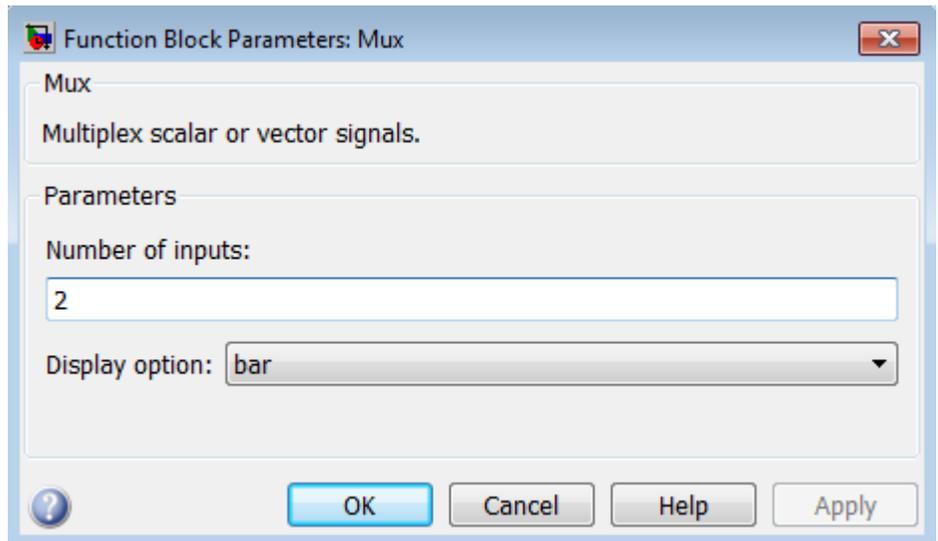

## Parameters and Dialog Box

## **Number of inputs**

Specify number and size of inputs.

## **Settings**

**Default:** 2

You can enter a comma-separated list of signal names for this parameter field.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**Display option**

Specify the appearance of the block in the model.

**Settings**

**Default:** bar

bar

Displays the block in a solid foreground color

none

Mux appears inside the block

signals


Displays signal names next to each port

**Command-Line Information**


See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Examples

The `sf_car` model uses a Mux block to combine two signals for input to a Scope block:

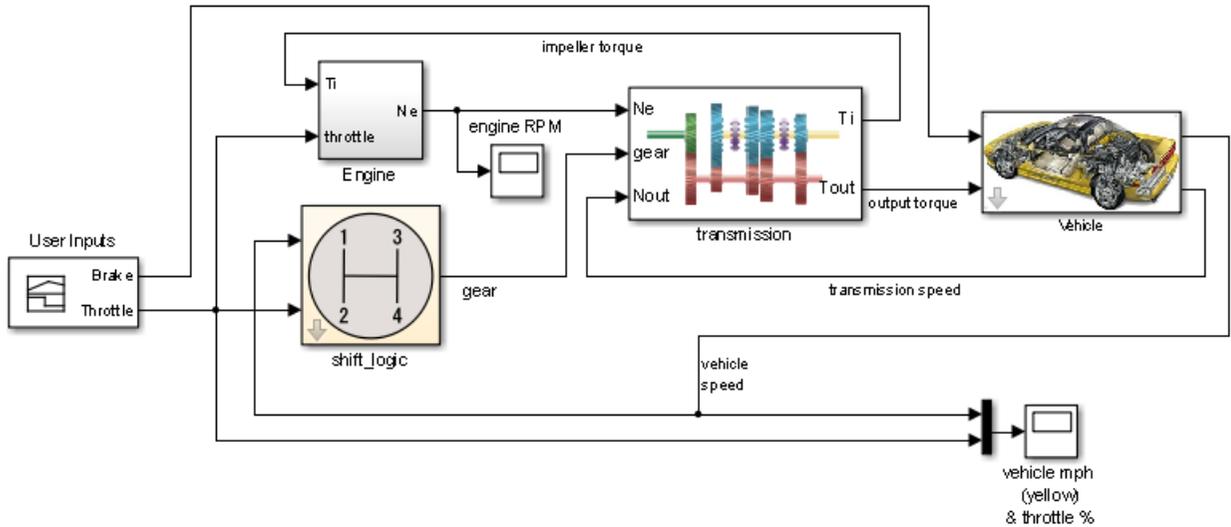

The `sf_aircontrol` model uses a Mux block to combine two signals for input to a Stateflow chart:

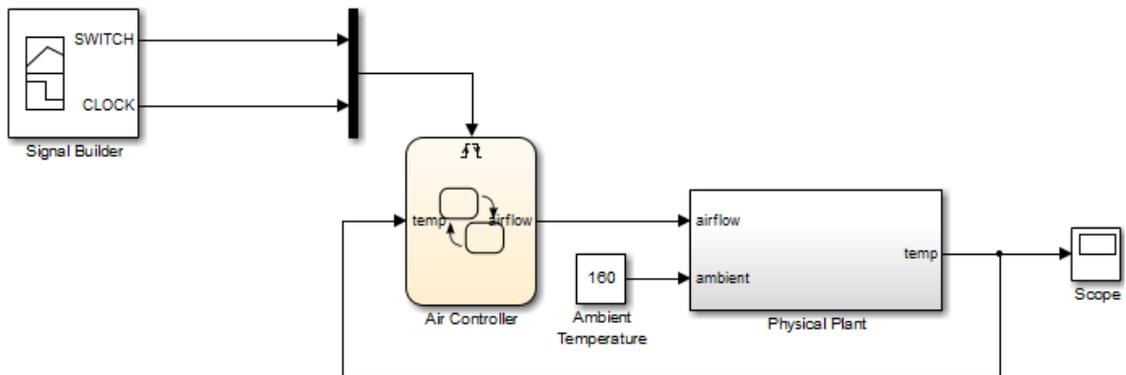

The following models also show how to use the Mux block:

- sldemo\_auto\_climatecontrol
- sldemo\_suspn
- sldemo\_zeroxing
- penddemo

**Characteristics**

Virtual	Yes For more information, see “Virtual Blocks” in the Simulink documentation.
---------	--

**See Also**

Demux

# Output

---

**Purpose** Create output port for subsystem or external output

**Library** Ports & Subsystems, Sinks

**Description** Output blocks are the links from a system to a destination outside the system.



Simulink software assigns Output block port numbers according to these rules:

- It automatically numbers the Output blocks within a top-level system or subsystem sequentially, starting with 1.
- If you add an Output block, it is assigned the next available number.
- If you delete an Output block, other port numbers are automatically renumbered to ensure that the Output blocks are in sequence and that no numbers are omitted.

## Output Blocks in a Subsystem

Output blocks in a subsystem represent outputs from the subsystem. A signal arriving at an Output block in a subsystem flows out of the associated output port on that Subsystem block. The Output block associated with an output port on a Subsystem block is the block whose **Port number** parameter matches the relative position of the output port on the Subsystem block. For example, the Output block whose **Port number** parameter is 1 sends its signal to the block connected to the topmost output port on the Subsystem block.

If you renumber the **Port number** of an Output block, the block becomes connected to a different output port, although the block continues to send the signal to the same block outside the subsystem.

When you create a subsystem by selecting existing blocks, if more than one Output block is included in the grouped blocks, Simulink software automatically renumbers the ports on the blocks.

The Output block name appears in the Subsystem icon as a port label. To suppress display of the label, click the Output block and select **Format > Hide Name**.

## Initializing Output Blocks in Conditionally Executed Contexts

To set initial conditions for an Output block in a conditionally executed subsystem, use one of these approaches.

- Inherit initial values from input signals for the subsystem.
- Explicitly specify initial values

For details, see “Specify or Inherit Conditional Subsystem Initial Values”.

---

**Note** If the conditional subsystem is driving a Merge block in the same model, you do not need to specify an Initial Condition (IC) for the subsystem’s Output block. For more information, see “Underspecified initialization detection” .

---

## Root-level Output Block in a Model Hierarchy

Output blocks at the root-level of a model hierarchy have two uses: to supply external outputs to the base MATLAB workspace, which you can do by using either the **Model Configuration Parameters** dialog box or the `sim` command, and to provide a means for analysis functions to obtain output from the system.

- To supply external outputs to the workspace, use the Configuration Parameters dialog box (see Exporting Output Data to the MATLAB Workspace) or the `sim` command (see `sim`). For example, if a system has more than one Output block and the save format is array, the following command

```
[t,x,y] = sim(...);
```

writes `y` as a matrix, with each column containing data for a different Output block. The column order matches the order of the port numbers for the Output blocks.

If you specify more than one variable name after the second (state) argument, data from each Output block is written to a different variable. For example, if the system has two Output blocks, to save data from Output block 1 to `speed` and the data from Output block 2 to `dist`, you could specify this command:

```
[t,x,speed,dist] = sim(...);
```

- To provide a means for the `linmod` and `trim` analysis functions to obtain output from the system (see “Linearizing Models”)

## Connecting Buses to Root-level Outputs

A root-level Output of a model can accept a virtual bus only if all elements of the bus have the same data type. The Output block automatically unifies the bus to a vector having the same number of elements as the bus, and outputs that vector.

If you want a root-level Output of a model to accept a bus signal that contains mixed types, you must set the Output block **Data type** parameter to use a bus object name for the Bus: `<object name>` or `<data type expression>` option, to define the type of bus that the Output produces. If the bus signal is virtual, it will be converted to nonvirtual, as described in “Automatic Bus Conversion”. See “Bus Objects” more information.

## Data Type Support

The Output block accepts real or complex signals of any data type that Simulink supports. An Output block can also accept fixed-point and enumerated data types when the block is not a root-level output port. The complexity and data type of the block output are the same as those of its input. The Output block also accepts a bus object as a data type.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum and maximum values for bus data on the block. Simulink ignores these settings. Instead, set the minimum and maximum values for bus elements of the bus object specified as the data type. The values should be finite real double scalar.

For information on the Minimum and Maximum properties of a bus element, see `Simulink.BusElement`.

---

For more information, see “Data Types Supported by Simulink”.


The elements of a signal array connected to an Output block can be of differing complexity and data types except in the following circumstance: If the output port is in a conditionally executed subsystem and the initial output is specified, all elements of an input array must be of the same complexity and data types.

Typical Simulink data type conversion rules apply to an output port’s **Initial output** parameter. If the initial output value is in the range of the block’s output data type, Simulink software converts the initial output to the output data type. If the specified initial output is out of the range of the output data type, Simulink software halts the simulation and signals an error.

# Output

## Parameters and Dialog Box

The **Main** pane of the Output block dialog, when present in a conditionally executed subsystem, box appears as follows:

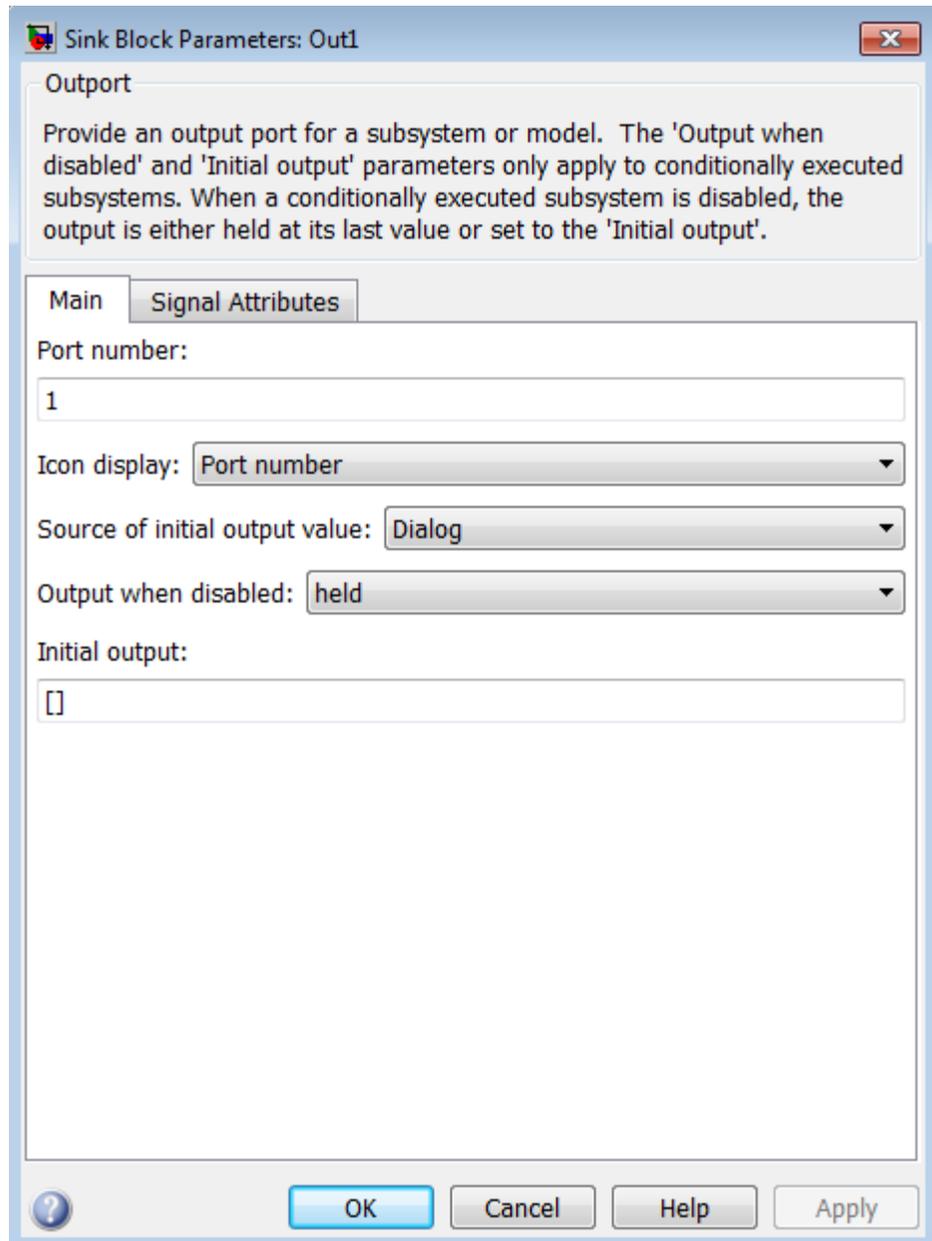

- “Package” on page 1-2027
- “Icon display” on page 1-1129
- “Source of initial output value” on page 1-1130
- “Output when disabled” on page 1-1131
- “Initial output” on page 1-1132
- “Minimum” on page 1-1969
- “Maximum” on page 1-1970
- “Data type” on page 1-1134
- “Show data type assistant” on page 1-1727
- “Mode” on page 1-1137
- “Data type override” on page 1-1975
- “Signedness” on page 1-1976
- “Word length” on page 1-1979
- “Scaling” on page 1-1789
- “Fraction length” on page 1-1980
- “Slope” on page 1-1981
- “Bias” on page 1-1981
- “Lock output data type setting against changes by the fixed-point tools” on page 1-1774
- “Output as nonvirtual bus in parent model” on page 1-1145
- “Port dimensions (-1 for inherited)” on page 1-1147
- “Variable-size signal” on page 1-1148
- “Sample time (-1 for inherited)” on page 1-2024
- “Signal type” on page 1-1151
- “Sampling mode” on page 1-1152

## **Port number**

Specify the port number of the block.

## **Settings**

**Default:** 1

This parameter controls the order in which the port that corresponds to the block appears on the parent subsystem or model block.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Icon display**

Specify the information to be displayed on the icon of this input port.

### **Settings**

**Default:** Port number

Signal name

Display the name of the signal connected to this port (or signals if the input is a bus).

Port number

Display port number of this port.

Port number and signal name

Display both the port number and the names of the signals connected to this port.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Source of initial output value

Select the source of the initial output value of the block.

### Settings

**Default:** Dialog

#### Dialog

The initial output value is specified by the **Initial output** parameter on the dialog.

#### Input signal

The initial output value is inherited from the input signal. See “Setting Initial Conditions for an Enabled Subsystem”.

### Tips

- If you are using classic initialization mode, selecting `Input signal` will cause an error. To inherit the initial output value from the input signal, set this parameter to `Dialog` and specify `[]` (empty matrix) for the **Initial output** value. For more information, see “Specify or Inherit Conditional Subsystem Initial Values”.

### Dependencies

This parameter is enabled when the Outport resides in an Conditional Subsystem.

Selecting `Dialog` enables the following parameters:

- **Output when disabled**
- **Initial output**

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Output when disabled

Specify what happens to the block output when the subsystem is disabled.

### Settings

**Default:** held

held

Output is held when the subsystem is disabled.

reset

Output is reset to the value given by **Initial output** when the subsystem is disabled.

### Tips

- When connecting the output of a conditional subsystem to a Merge block, set this parameter to held. Setting it to reset will return an error.

### Dependencies

- Selecting Dialog in **Source of initial output value** enables this parameter.
- This parameter is enabled when the Output resides in an Conditional Subsystem.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Initial output

For conditionally executed subsystems, specify the block output before the subsystem executes and while it is disabled.

### Settings

**Default:** []

Simulink software does not allow the initial output of this block to be `inf` or `NaN`.

### Tips

- Specify [] (empty matrix) to inherit the initial output value from the input signal. For more information, see “Setting Initial Conditions for an Enabled Subsystem”.
- For information about specifying an initial condition structure, see “Specify Initial Conditions for Bus Signals”

### Dependencies

- Selecting Dialog in **Source of initial output value** enables this parameter.
- This parameter is enabled when the Outport resides in an Conditional Subsystem.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Minimum

Specify the minimum value that the block should output.

### Settings

**Default:** [] (unspecified)

This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum property of a bus element, see `Simulink.BusElement`.

---

Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Maximum

Specify the maximum value that the block should output.

### Settings

**Default:** [] (unspecified)

This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum property of a bus element, see `Simulink.BusElement`.

---

Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### Data type

Specify the output data type of the external input.

### Settings

**Default:** Inherit: auto

Inherit: auto

A rule that inherits a data type

double

Data type is double.

single

Data type is single.

`int8`  
Data type is `int8`.

`uint8`  
Data type is `uint8`.

`int16`  
Data type is `int16`.

`uint16`  
Data type is `uint16`.

`int32`  
Data type is `int32`.

`uint32`  
Data type is `uint32`.

`boolean`  
Data type is `boolean`.

`fixdt(1,16,0)`  
Data type is fixed point `fixdt(1,16,0)`.

`fixdt(1,16,2^0,0)`  
Data type is fixed point `fixdt(1,16,2^0,0)`.

`Enum: <class name>`  
Data type is enumerated, for example, `Enum: BasicColors`.

`Bus: <object name>`  
Data type is a bus object.

`<data type expression>`  
The name of a data type object, for example  
`Simulink.NumericType`

Do not specify a bus object as the expression.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

## Mode

Select the category of data to specify.

## Settings

**Default:** Inherit

### Inherit

Inheritance rule for data types. Selecting **Inherit** enables a second menu/text box to the right.

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32
- boolean

### Fixed point

Fixed-point data types.

### Enumerated

Enumerated data types. Selecting **Enumerated** enables a second menu/text box to the right, where you can enter the class name.

### Bus

Bus object. Selecting **Bus** enables a **Bus object** parameter to the right, where you enter the name of a bus object that you want to use to define the structure of the bus. If you need to create or

change a bus object, click **Edit** to the right of the **Bus object** field to open the Simulink Bus Editor. For details about the Bus Editor, see “Manage Bus Objects with the Bus Editor”.

## Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

Do not specify a bus object as the expression.

## Dependency

Clicking the **Show data type assistant** button enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## See Also

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is `Built in` or `Fixed point`.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > Fixed point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Slope**

Specify slope for the fixed-point data type.

### **Settings**

**Default:** 2<sup>0</sup>

Specify any positive real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Bias**

Specify bias for the fixed-point data type.

### **Settings**

**Default:** 0

Specify any real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off

On

Locks the output data type setting for this block.

Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

## Output as nonvirtual bus in parent model

Select this parameter if you want the bus emerging in the parent model to be nonvirtual. The bus that is input to the port can be virtual or nonvirtual, regardless of the setting of **Output as nonvirtual bus in parent model**.

### Settings

**Default:** Off

On

Select this parameter if you want the bus emerging in the parent model to be nonvirtual.



Off

Clear this parameter if you want the bus emerging in the parent model to be virtual.

### **Tips**

All signals in a nonvirtual bus must have the same sample time, even if the elements of the associated bus object specify inherited sample times. Any bus operation that would result in a nonvirtual bus that violates this requirement generates an error. Therefore, if you select this option all signals in the bus must have the same sample time. You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus, to allow the signal or bus to be included in a nonvirtual bus.

### **Dependency**

via **bus object** enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Port dimensions (-1 for inherited)

Specify the dimensions that a signal must have in order to be connected to this Output block.

### Settings

**Default:** -1

Valid values are:

-1	A signal of any dimensions can be connected to this port.
N	The signal connected to this port must be a vector of size N.
[R C]	The signal connected to this port must be a matrix having R rows and C columns.

### Dependency

Clearing **via bus object** enables this parameter.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Variable-size signal

Specify the type of signals allowed out of this port.

### Settings

**Default:** Inherit

Inherit

Allow variable-size and fixed-size signals.

No

Do not allow variable-size signals.

Yes

Allow only variable-size signals.

### Dependencies

When the signal at this port is a variable-size signal, the **Port dimensions** parameter specifies the maximum dimensions of the signal.

### Command-Line Information

**Parameter:** VarSizeSig

**Type:** string

**Value:** 'Inherit' | 'No' | 'Yes'

**Default:** 'Inherit'

## **Sample time (-1 for inherited)**

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### **Settings**

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Output

---

## Signal type

Specify the numeric type of the signal output by this block.

### Settings

**Default:** auto

auto

Output the numeric type of the signal that is connected to its input.

real

Output a real-valued signal. The signal connected to this block must be real. If it is not, Simulink software displays an error if you try to update the diagram or simulate the model that contains this block.

complex

Output a complex signal. The signal connected to this block must be complex. If it is not, Simulink software displays an error if you try to update the diagram or simulate the model that contains this block.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Sampling mode**

Specify the sampling mode (Sample based or Frame based) that the input signal must match.

### **Settings**

**Default:** auto

auto

Accept any sampling mode.

Sample based

The output signal is sample-based.

Frame based

The output signal is frame-based.

### **Dependency**

Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Characteristics

Sample Time	Inherited from the driving block
Dimensionalized	Yes
Multidimensionalized	Yes
Virtual	Yes, when the block resides in a subsystem block and not at the root level of a model  For more information, see “Virtual Blocks” in the Simulink documentation.
Zero-Crossing Detection	No

## See Also

Inport

# Permute Dimensions

---

**Purpose** Rearrange dimensions of multidimensional array dimensions

**Library** Math Operations


**Description** The block reorders the elements of the input signal so that they are in the order you specify in the **Order** parameter.



**Data Type Support** This block accepts signals of any data type that Simulink supports, including fixed-point and enumerated data types. Output must be the same data type as the input.

You can use an array of buses as an input signal to a Permute Dimensions block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

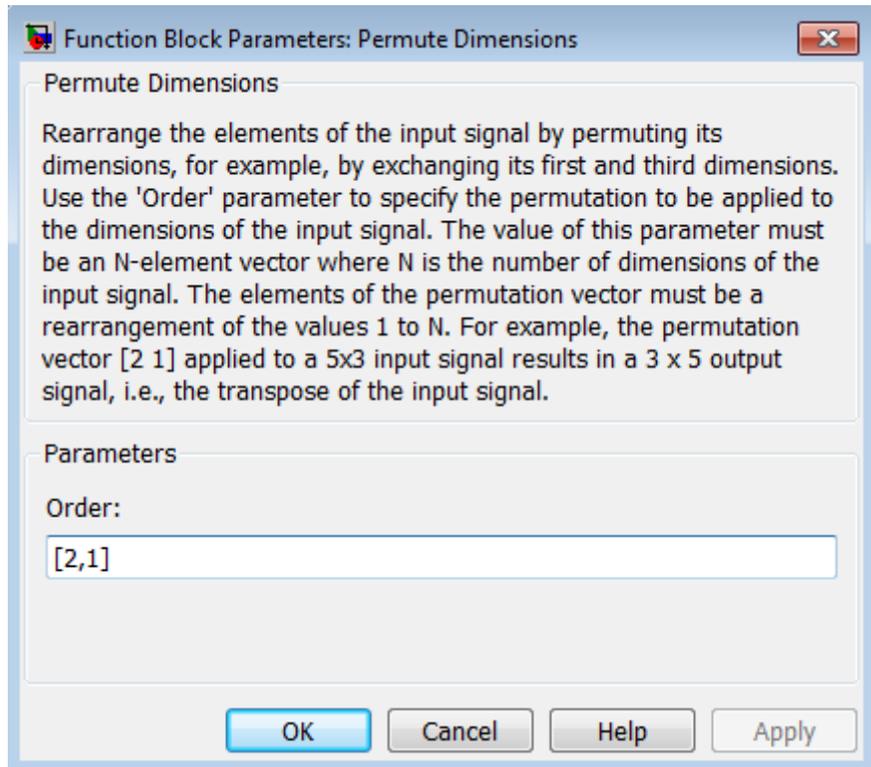

## Parameters and Dialog Box

### Order

Specify the permutation order to apply to the dimensions of the input signal. This parameter is a vector of elements, where the number of elements in the vector is the number of dimensions of the input signal.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block
Scalar Expansion	No

# Permute Dimensions

---

Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Math Function (transpose), permute (in the MATLAB reference documentation)


## Purpose

Simulate continuous- or discrete-time PID controllers

## Library

Continuous, Discrete

## Description

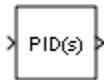

Implement a continuous- or discrete-time controller (PID, PI, PD, P, or I) in your Simulink model. PID controller gains are tunable either manually or automatically. Automatic tuning requires Simulink Control Design™ software (PID Tuner or SISO Design Tool).


The PID Controller block output is a weighted sum of the input signal, the integral of the input signal, and the derivative of the input signal. The weights are the proportional, integral, and derivative gain parameters. A first-order pole filters the derivative action.

Configurable options in the PID Controller block include:

- Controller type (PID, PI, PD, P, or I)
- Controller form (Parallel or Ideal)
- Time domain (continuous or discrete)
- Initial conditions and reset trigger
- Output saturation limits and built-in anti-windup mechanism
- Signal tracking for bumpless control transfer and multiloop control

In one common implementation, the PID Controller block operates in the feedforward path of the feedback loop:

# Discrete PID Controller

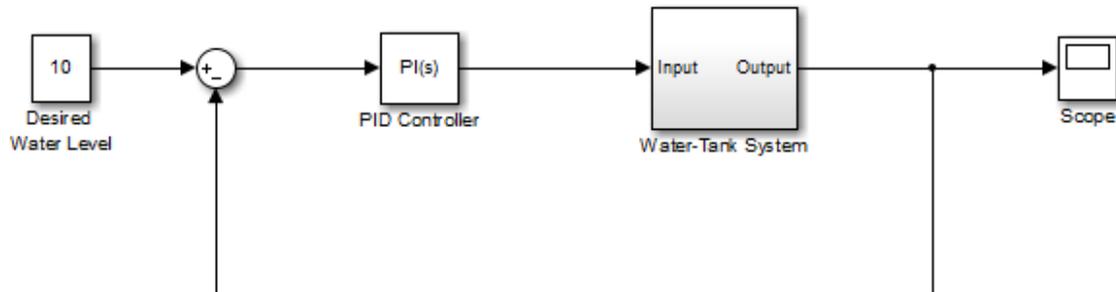

The input of the block is typically an error signal, which is the difference between a reference signal and the system output. For a two-input block that permits setpoint weighting, see the PID Controller (2 DOF) block reference page.

You can generate code to implement your controller using any Simulink data type, including fixed-point data types. (Code generation requires Simulink Coder software; fixed-point implementation requires the Fixed-Point Designer product.)

For examples illustrating some applications of the PID Controller block, see the following Simulink examples:

- Anti-Windup Control Using a PID Controller
- Bumpless Control Transfer Between Manual and PID Control

## Data Type Support

The PID Controller block accepts real signals of any numeric data type that Simulink software supports, including fixed-point data types. See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Parameters

The following table summarizes the PID Controller block parameters, accessible on the block parameter dialog box.

# Discrete PID Controller

<b>Task</b>	<b>Parameters</b>
Choose controller form and type.	<ul style="list-style-type: none"><li>• <b>Controller Form</b> in Main tab</li><li>• <b>Controller</b></li></ul>
Choose discrete or continuous time.	<ul style="list-style-type: none"><li>• <b>Time-domain</b></li><li>• <b>Sample time</b></li></ul>
Choose an integration method (discrete time).	<ul style="list-style-type: none"><li>• <b>Integrator method</b></li><li>• <b>Filter method</b></li></ul>
Set and tune controller gains.	<ul style="list-style-type: none"><li>• <b>Proportional (P)</b> in Main tab</li><li>• <b>Integral (I)</b> in Main tab</li><li>• <b>Derivative (D)</b> in Main tab</li><li>• <b>Filter coefficient (N)</b> in Main tab</li></ul>
Set integrator and filter initial conditions.	<ul style="list-style-type: none"><li>• <b>Initial conditions Source</b> in Main tab</li><li>• <b>Integrator Initial condition</b> in Main tab</li><li>• <b>Filter Initial condition</b> in Main tab</li><li>• <b>External reset</b> in Main tab</li><li>• <b>Ignore reset when linearizing</b> in Main tab</li></ul>
Limit block output.	<ul style="list-style-type: none"><li>• <b>Limit output</b> in PID Advanced tab</li><li>• <b>Lower saturation limit</b> in PID Advanced tab</li><li>• <b>Upper saturation limit</b> in PID Advanced tab</li><li>• <b>Ignore saturation when linearizing</b> in PID Advanced tab</li></ul>

# Discrete PID Controller

Task	Parameters
Configure anti-windup mechanism (when you limit block output).	<ul style="list-style-type: none"><li>• <b>Anti-windup method</b> in PID Advanced tab</li><li>• <b>Back-calculation gain (Kb)</b> in PID Advanced tab</li></ul>
Enable signal tracking.	<ul style="list-style-type: none"><li>• <b>Enable tracking mode</b> in PID Advanced tab</li><li>• <b>Tracking gain (Kt)</b> in PID Advanced tab</li></ul>
Configure data types.	<ul style="list-style-type: none"><li>• <b>Parameter data type</b> in Data Type Attributes tab</li><li>• <b>Product output data type</b> in Data Type Attributes tab</li><li>• <b>Summation output data type</b> in Data Type Attributes tab</li><li>• <b>Accumulator data type</b> in Data Type Attributes tab</li><li>• <b>Integrator output data type</b> in Data Type Attributes tab</li><li>• <b>Filter output data type</b> in Data Type Attributes tab</li><li>• <b>Saturation output data type</b> in Data Type Attributes tab</li><li>• <b>Lock output data type setting against changes by the fixed-point tools</b> in Data Type Attributes tab</li><li>• <b>Saturate on integer overflow</b> in Data Type Attributes tab</li></ul>

Task	Parameters
	<ul style="list-style-type: none"><li>• <b>Integer rounding mode</b> in Data Type Attributes tab</li></ul>
Configure block for code generation.	<ul style="list-style-type: none"><li>• <b>State name</b> in State Attributes tab</li><li>• <b>State name must resolve to Simulink signal object</b> in State Attributes tab</li><li>• <b>Code generation storage class</b> in State Attributes tab</li><li>• <b>Code generation storage type qualifier</b> in State Attributes tab</li></ul>

# Discrete PID Controller

---

## Controller form

Select the controller form.

## Settings

### Parallel (Default)

Selects a controller form in which the output is the sum of the proportional, integral, and derivative actions, weighted according to the independent gain parameters **P**, **I**, and **D**. The filter coefficient **N** sets the location of the pole in the derivative filter. For a continuous-time parallel PID controller, the transfer function is:

$$C_{par}(s) = \left[ P + I \left( \frac{1}{s} \right) + D \left( \frac{Ns}{s + N} \right) \right]$$

For a discrete-time parallel PID controller, the transfer function takes the form:

$$C_{par}(z) = P + Ia(z) + D \left[ \frac{N}{1 + Nb(z)} \right]$$


where the **Integrator method** determines  $a(z)$  and the **Filter method** determines  $b(z)$  (for sampling time  $T_s$ ):

# Discrete PID Controller

	<b>Forward Euler method</b>	<b>Backward Euler method</b>	<b>Trapezoidal method</b>
$a(z)$ (determined by Integrator method)	$\frac{T_s}{z-1}$	$\frac{T_s z}{z-1}$	$\frac{T_s}{2} \frac{z+1}{z-1}$
$b(z)$ (determined by Filter method)	$\frac{T_s}{z-1}$	$\frac{T_s z}{z-1}$	$\frac{T_s}{2} \frac{z+1}{z-1}$

The controller transfer function for the current settings is displayed in the block dialog box.

# Discrete PID Controller

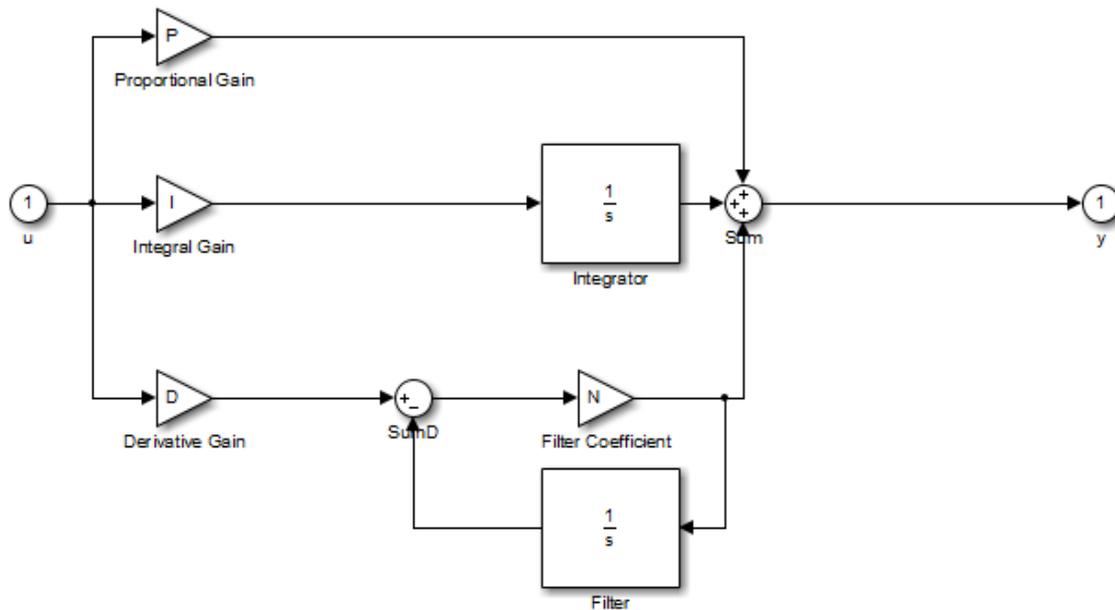

## Parallel PID Controller

### Ideal

Selects a controller form in which the proportional gain  $P$  acts on the sum of all actions. The transfer functions are the same as for the parallel form, except that  $P$  multiplies all terms. For a continuous-time ideal PID controller, the transfer function is:


$$C_{id}(s) = P \left[ 1 + I \left( \frac{1}{s} \right) + D \left( \frac{Ns}{s + N} \right) \right]$$

For a discrete-time ideal PID controller the transfer function is:

$$C_{id}(z) = P \left[ 1 + Ia(z) + D \frac{N}{1 + Nb(z)} \right]$$

# Discrete PID Controller

where the **Integrator method** determines  $a(z)$  and the **Filter method** determines  $b(z)$  as described previously for the parallel controller form.

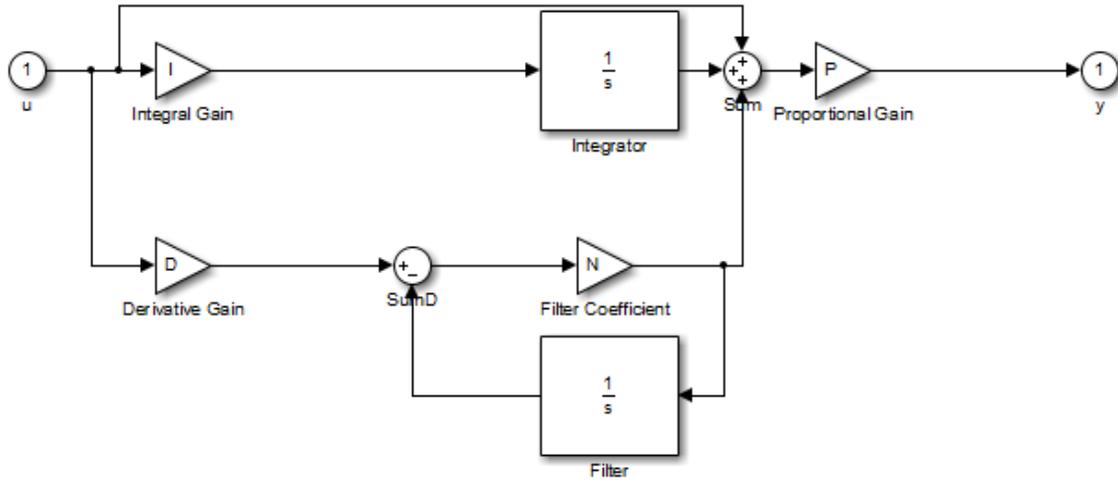

**Ideal PID Controller**

# Discrete PID Controller

---

## **Controller**

Specify the controller type.

## **Settings**

PID (Default)

Implements a controller with proportional, integral, and derivative action.

PI

Implements a controller with proportional and integral action.

PD

Implements a controller with proportional and derivative action.

P

Implements a controller with proportional action.



I

Implements a controller with integral action.

The controller transfer function for the current settings is displayed in the block dialog box.

## Time-domain

Select continuous or discrete time domain. The appearance of the block changes to reflect your selection.

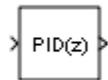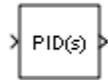

## Settings

Continuous-time (Default)

Selects the continuous-time representation.

Discrete-time

Selects the discrete-time representation. Selecting Discrete-time also allows you to specify the:

- **Sample time**, which is the discrete interval between samples.
- Discrete integration methods for the integrator and the derivative filter using the **Integrator method** and **Filter method** menus.

# Discrete PID Controller

---

## Integrator method

(Available only when you set **Time-domain** to `Discrete-time`.)  
Specify the method used to compute the integrator output. For more information about discrete-time integration methods, see the `Discrete-Time Integrator` block reference page.

### Settings

#### Forward Euler (Default)

Selects the Forward Rectangular (left-hand) approximation.

- This method is best for small sampling times, where the Nyquist limit is large compared to the bandwidth of the controller. For larger sampling times, the Forward Euler method can result in instability, even when discretizing a system that is stable in continuous time.

#### Backward Euler

Selects the Backward Rectangular (right-hand) approximation.

- If you are generating code using Simulink Coder software or the Fixed-Point Designer product and you activate the Back-calculation **Anti-windup method**, this integration method can cause algebraic loops in your controller. Algebraic loops can lead to slower performance of generated code. For more information about algebraic loops in Simulink models, see “Algebraic Loops” in the Simulink documentation.
- An advantage of the Backward Euler method is that discretizing a stable continuous-time system using this method always yields a stable discrete-time result.

#### Trapezoidal

Selects the Bilinear approximation.

- If you are generating code using Simulink Coder software or the Fixed-Point Designer product and you activate the Back-calculation **Anti-windup method**, this integration method can cause algebraic loops in your controller. Algebraic loops can lead to slower performance of generated code. For

more information about algebraic loops in Simulink models, see “Algebraic Loops” in the Simulink documentation.

- An advantage of the Trapezoidal method is that discretizing a stable continuous-time system using this method always yields a stable discrete-time result. Of all available integration methods, the Trapezoidal method yields the closest match between frequency-domain properties of the discretized system and the corresponding continuous-time system.

# Discrete PID Controller

---

## Filter method

(Available only when you set **Time-domain** to **Discrete-time**.)  
Specify the method used to compute the derivative filter output. For more information about discrete-time integration methods, see the Discrete-Time Integrator block reference page.

### Settings

#### Forward Euler (Default)

Selects the Forward Rectangular (left-hand) approximation.

- This method is best for small sampling times, where the Nyquist limit is large compared to the bandwidth of the controller. For larger sampling times, the Forward Euler method can result in instability, even when discretizing a system that is stable in continuous time.

#### Backward Euler

Selects the Backward Rectangular (right-hand) approximation.

- If you are generating code using Simulink Coder software or the Fixed-Point Designer product, this filter method can cause algebraic loops in your controller. Algebraic loops can lead to slower performance of generated code. For more information about algebraic loops in Simulink models, see “Algebraic Loops” in the Simulink documentation.
- An advantage of the Backward Euler method is that discretizing a stable continuous-time system using this method always yields a stable discrete-time result. Any filter parameter value  $N > 0$  yields a stable result with this method.

#### Trapezoidal

Selects the Bilinear approximation.

- If you are generating code using Simulink Coder software or the Fixed-Point Designer product, this filter method can cause algebraic loops in your controller. Algebraic loops can lead to slower performance of generated code. For more information about algebraic loops in Simulink models, see “Algebraic Loops” in the Simulink documentation.

- An advantage of the Trapezoidal method is that discretizing a stable continuous-time system using this method always yields a stable discrete-time result. Any filter parameter value  $N > 0$  yields a stable result with this method. Of all available filter methods, the Trapezoidal method yields the closest match between frequency-domain properties of the discretized system and the corresponding continuous-time system.

# Discrete PID Controller

---

## **Sample time (-1 for inherited)**

(Available only when you set **Time-domain** to Discrete-time.) Specify the discrete interval between samples.

### **Settings**

**Default:** 1

By default, the block uses a discrete sample time of 1. To specify a different sample time, enter another discrete value, such as 0.1.

If you specify a value of -1, the PID Controller block inherits the sample time from the upstream block. Do not enter a value of 0; to implement a continuous-time controller, select the **Time-domain** Continuous-time.

See “Specify Sample Time” in the online documentation for more information.

## **Proportional (P)**

(Available for PID, PD, PI, and P controllers.) Specify the proportional gain  $P$ .

**Default:** 1

Enter a finite, real gain value into the **Proportional (P)** field. Use either scalar or vector gain values. For a **Parallel PID Controller form**, the proportional action is independent of the integral and derivative actions. For an **Ideal PID Controller form**, the proportional action acts on the integral and derivative actions. See “Controller form” on page 1-1162 for more information about the role of  $P$  in the controller transfer function.

When you have Simulink Control Design software installed, you can automatically tune the controller gains using the PID Tuner or the SISO Design Tool. See “Choosing a Compensator Design Approach”.

# Discrete PID Controller

---

## **Integral (I)**

(Available for PID, PI, and I controllers.) Specify the integral gain  $I$ .

**Default:** 1

Enter a finite, real gain value into the **Integral (I)** field. Use either scalar or vector gain values.

When you have Simulink Control Design software installed, you can automatically tune the controller gains using the PID Tuner or the SISO Design Tool. See “Choosing a Compensator Design Approach”.

## **Derivative (D)**

(Available for PID and PD controllers.) Specify the derivative gain  $D$ .

**Default:** 0


Enter a finite, real gain value into the **Derivative (D)** field. Use either scalar or vector gain values.

When you have Simulink Control Design software installed, you can automatically tune the controller gains using the PID Tuner or the SISO Design Tool. See “Choosing a Compensator Design Approach”.

# Discrete PID Controller

## Filter coefficient (N)

(Available for PID and PD controllers.) Specify the filter coefficient N, which determines the pole location of the filter in the derivative action:

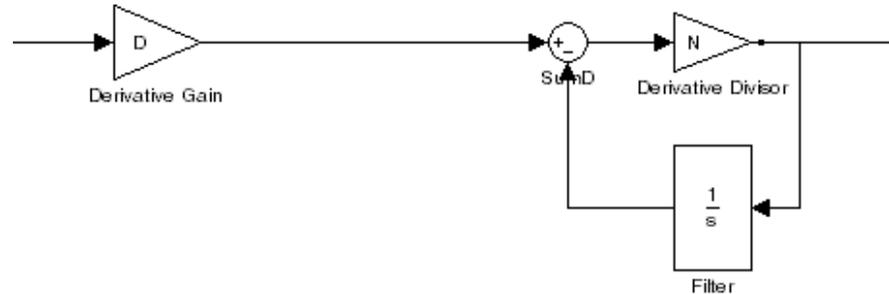

The filter pole falls at  $s = -N$  in the Continuous-time **Time-domain**. For Discrete-time, the location of the pole depends on which **Filter method** you select (for sampling time  $T_s$ ):

- Forward Euler:

$$z_{pole} = 1 - NT_s$$

- Backward Euler:

$$z_{pole} = \frac{1}{1 + NT_s}$$

- Trapezoidal:

$$z_{pole} = \frac{1 - NT_s/2}{1 + NT_s/2}$$

**Default:** 100.

Enter a finite, real gain value into the **Filter Coefficient (N)** field. Use either scalar or vector gain values. Note that the PID controller block does not support  $N = \text{inf}$  (ideal unfiltered derivative).

When you have Simulink Control Design software installed, you can automatically tune the controller gains using the PID Tuner or the SISO Design Tool. See “Choosing a Compensator Design Approach”. Automatic tuning requires  $N > 0$ .

# Discrete PID Controller

---

## Initial conditions Source

(Only available for controllers with integral or derivative action.) Select the source of the integrator and filter initial conditions. Simulink uses initial conditions to initialize the integrator and filter output at the start of a simulation or at a specified trigger event (See “External reset” on page 1-1181). The integrator and filter initial conditions in turn determine the initial block output.


## Settings

internal (Default)

Specifies the integrator and filter initial conditions explicitly using the **Integrator Initial condition** and **Filter Initial condition** parameters.

external

Specifies the integrator and filter initial conditions externally. An additional input port appears under the block input for each initial condition:  $I_0$  for the integrator and  $D_0$  for the filter:

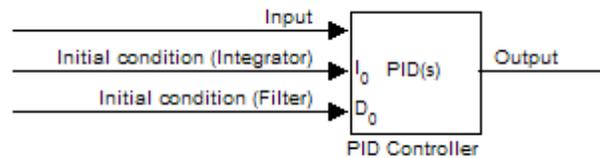

## **Integrator Initial condition**

(Available only when **Initial conditions Source** is `internal` and the controller includes integral action.) Specify the integrator initial value. Simulink uses the initial condition to initialize the integrator output at the start of a simulation or at a specified trigger event (see “External reset” on page 1-1181). The integrator initial condition, together with the filter initial condition, determines the initial output of the PID controller block.

**Default:** 0

Simulink does not permit the integrator initial condition to be `inf` or `NaN`.

# Discrete PID Controller

---

## **Filter Initial condition**


(Available only when **Initial conditions Source** is **internal** and the controller includes integral action.) Specify the filter initial value. Simulink uses the initial condition to initialize the filter output at the start of a simulation or at a specified trigger event (see “External reset” on page 1-1181). The filter initial condition, together with the integrator initial condition, determines the initial output of the PID controller block.

**Default:** 0


Simulink does not permit the filter initial condition to be `inf` or `NaN`.

## External reset

Select the trigger event that resets the integrator and filter outputs to the initial conditions you specify in the **Integrator Initial condition** and **Filter Initial condition** fields. Selecting any option other than none enables a reset input on the block for the external reset signal, as shown:

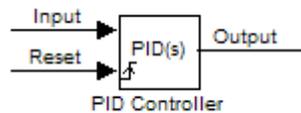

Or, if the **Initial conditions Source** is External,

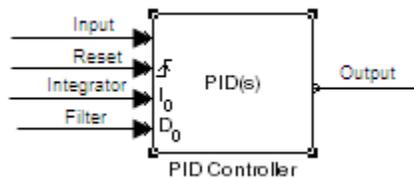

The reset signal must be a scalar of type `single`, `double`, `boolean`, or `integer`. Fixed point data types, except for `ufix1`, are not supported.

---

**Note** To be compliant with the Motor Industry Software Reliability Association (MISRA) software standard, your model must use Boolean signals to drive the external reset ports of the PID controller block.

---

## Settings

none (Default)

Does not reset the integrator and filter outputs to initial conditions.

# Discrete PID Controller

---

rising

Resets the outputs when the reset signal has a rising edge.

falling

Resets the outputs when the reset signal has a falling edge.

either

Resets the outputs when the reset signal either rises or falls.

level

Resets and holds the outputs to the initial conditions while the reset signal is nonzero.

## Ignore reset when linearizing

Force Simulink linearization commands to ignore any reset mechanism that you have chosen with the **External reset** menu. Ignoring reset states allows you to linearize a model around an operating point even if that operating point causes the PID Controller block to reset.

### Settings

- Off (Default)  
Simulink linearization commands do not ignore states corresponding to the reset mechanism.
- On  
Simulink linearization commands ignore states corresponding to the reset mechanism.

# Discrete PID Controller

---

## Enable zero-crossing detection

Enable zero-crossing detection in continuous-time models upon reset and upon entering or leaving a saturation state.

Zero-crossing detection can accurately locate signal discontinuities without resorting to excessively small time steps that can lead to lengthy simulation times. If you select **Limit output** or activate an **External reset** in your PID Controller block, activating zero-crossing detection can reduce computation time in your simulation. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

### Settings

- On (Default)  
Uses zero-crossing detection at any of the following events: reset; entering or leaving an upper saturation state; and entering or leaving a lower saturation state.
- Off  
Does not use zero-crossing detection.

Enabling zero-crossing detection for the PID Controller block also enables zero-crossing detection for all under-mask blocks that include the zero-crossing detection feature.

## Limit output

Limit the block output to values you specify as the **Lower saturation limit** and **Upper saturation limit** parameters.

Activating this option limits the block output internally to the block, obviating the need for a separate Saturation block after the controller in your Simulink model. It also allows you to activate the block's built-in anti-windup mechanism (see "Anti-windup method" on page 1-1188).

### Settings

Off (Default)

Does not limit the block output, which equals the weighted sum of the proportional, integral, and derivative actions.

On

Limits the block output to the **Lower saturation limit** or the **Upper saturation limit** whenever the weighted sum exceeds those limits. Allows you to select an **Anti-windup method**.

# Discrete PID Controller

---

## **Lower saturation limit**

(Available only when you select the **Limit output** check box.) Specify the lower limit for the block output. The block output is held at the **Lower saturation limit** whenever the weighted sum of the proportional, integral, and derivative actions goes below that value.

**Default:** -inf

## **Upper saturation limit**

(Available only when you select the **Limit output** check box.) Specify the upper limit for the block output. The block output is held at the **Upper saturation limit** whenever the weighted sum of the proportional, integral, and derivative actions exceeds that value.

**Default:** inf

# Discrete PID Controller

---

## Anti-windup method

(Available only when you select the **Limit output** option and the controller includes integral action.) Select an anti-windup mechanism to discharge the integrator when the block is saturated, which occurs when the sum of the block components exceeds the output limits.

When you select the **Limit output** check box and the weighted sum of the controller components exceeds the specified output limits, the block output holds at the specified limit. However, the integrator output can continue to grow (integrator wind-up), increasing the difference between the block output and the sum of the block components. Without a mechanism to prevent integrator wind-up, two results are possible:

- If the sign of the input signal never changes, the integrator continues to integrate until it overflows. The overflow value is the maximum or minimum value for the data type of the integrator output.
- If the sign of the input signal changes once the weighted sum has grown beyond the output limits, it can take a long time to discharge the integrator and return the weighted sum within the block saturation limit.

In both cases, controller performance can suffer. To combat the effects of wind-up without an anti-windup mechanism, it may be necessary to detune the controller (for example, by reducing the controller gains), resulting in a sluggish controller. Activating an anti-windup mechanism can improve controller performance.

## Settings


none (Default)

Does not use an anti-windup mechanism. This setting may cause the block's internal signals to be unbounded even if the output appears to be bounded by the saturation limits. This can result in slow recovery from saturation or unexpected overflows.

back-calculation

Discharges the integrator when the block output saturates using the integral-gain feedback loop:

# Discrete PID Controller

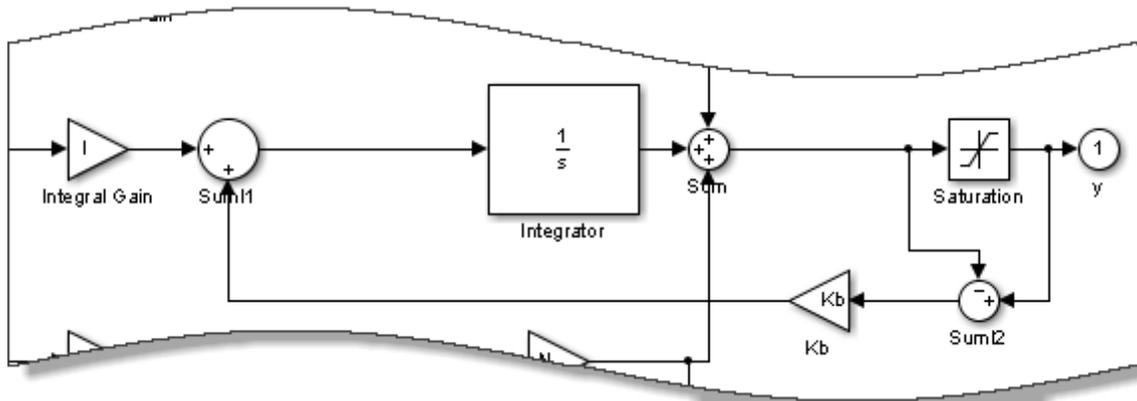


You can also specify a value for the **Back-calculation coefficient (Kb)**.

## clamping

Stops integration when the sum of the block components exceeds the output limits and the integrator output and block input have the same sign. Resumes integration when the sum of the block components exceeds the output limits and the integrator output and block input have opposite sign. The integrator portion of the block is:

# Discrete PID Controller

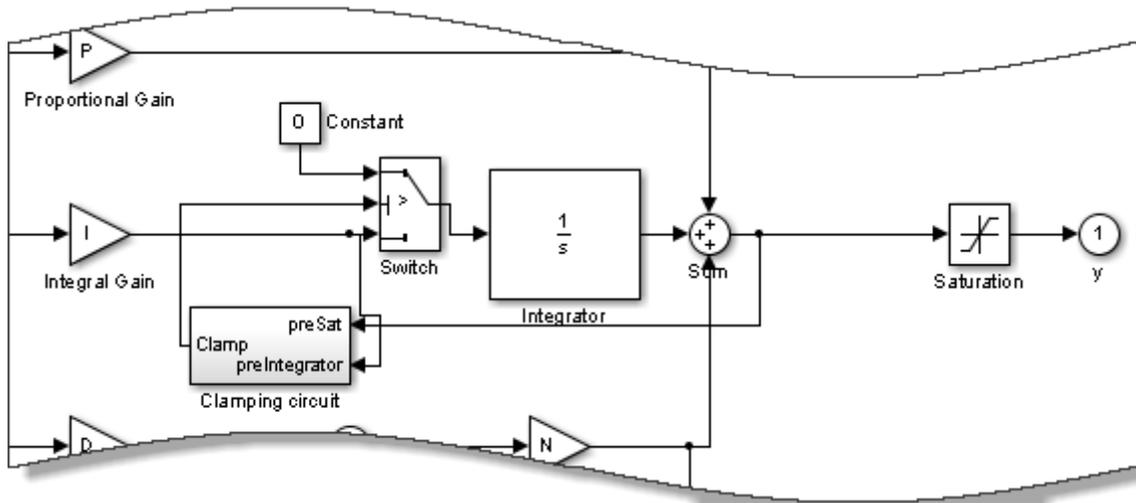

The clamping circuit implements the logic necessary to determine whether integration continues.

## **Back-calculation gain (Kb)**

(Available only when the back-calculation **Anti-windup method** is active.) Specify the gain coefficient of the anti-windup feedback loop.

The back-calculation anti-windup method discharges the integrator on block saturation using a feedback loop having gain coefficient Kb.

**Default:** 1

# Discrete PID Controller

---

## Ignore saturation when linearizing

Force Simulink linearization commands ignore PID Controller block output limits. Ignoring output limits allows you to linearize a model around an operating point even if that operating point causes the PID Controller block to exceed the output limits.

### Settings


- On (Default)  
Simulink linearization commands ignore states corresponding to saturation.
- Off  
Simulink linearization commands do not ignore states corresponding to saturation.

## **Enable tracking mode**

(Available for any controller with integral action.) Activate signal tracking, which lets the output of the PID Controller block follow a tracking signal. Provide the tracking signal to the block at the TR port, which becomes active when you select **Enable tracking mode**.

When signal tracking is active, the difference between the tracked signal and the block output is fed back to the integrator input with a gain  $K_t$ . The structure is illustrated for a PI controller:


# Discrete PID Controller

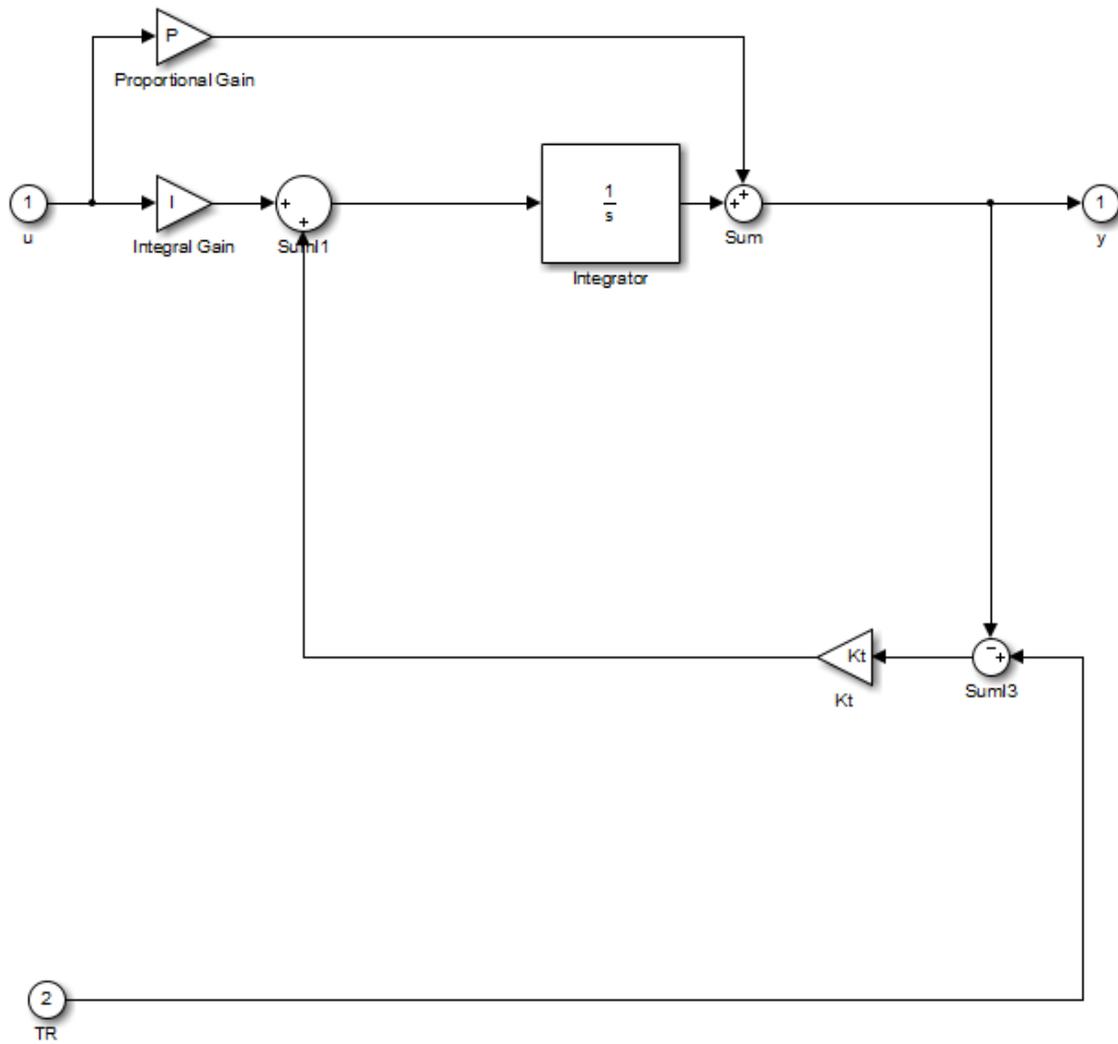

You can also specify the **Tracking coefficient (Kt)**.

## Bumpless control transfer


Use signal tracking, for example, to achieve bumpless control transfer in systems that switch between two controllers. You can make one controller track the output of the other controller by connecting the TR port to the signal you want to track. For example:

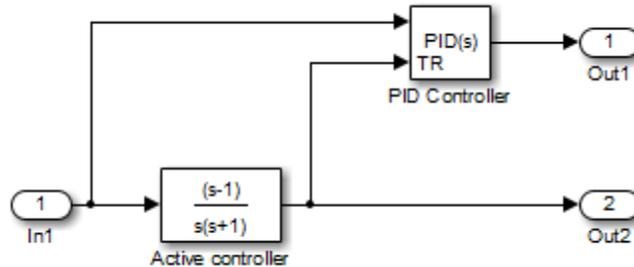

In this example, the outputs Out1 and Out2 can drive a controlled system (not shown) through a switch that transfers control between the “Active controller” block and the PID Controller block. The signal tracking feature of the PID Controller block provides smooth operation upon transfer of control from one controller to another, ensuring that the two controllers have the same output at the time of transfer.


## Multiloop control

Use signal tracking to prevent block wind-up in multiloop control approaches, as this example illustrates:

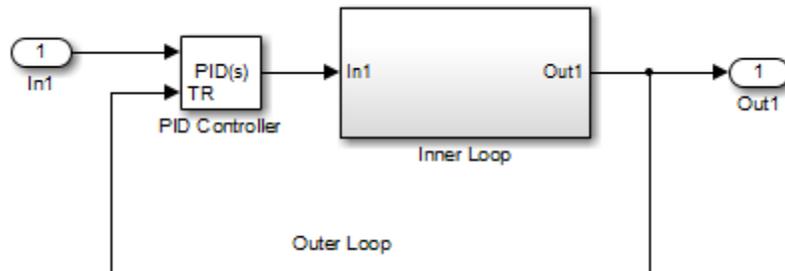

# Discrete PID Controller

The inner-loop subsystem contains the following blocks:

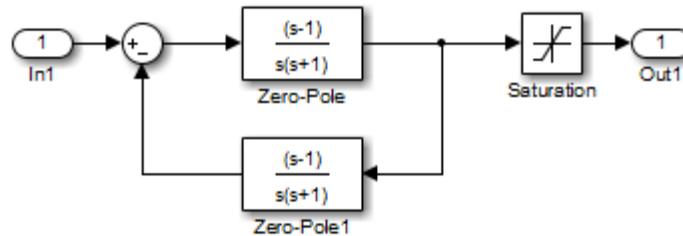

In this example, the inner loop has an effective gain of 1 when it does not saturate. Without signal tracking, the inner loop winds up in saturation. Signal tracking ensures that the PID Controller output does not exceed the saturated output of the inner loop.

## Settings

- Off (Default)  
Disables signal tracking and removes TR block input.
- On  
Enables signal tracking and activates TR input.

## **Tracking gain (Kt)**

(Available only when you select **Enable tracking mode**.) Specify Kt, which is the gain of the signal tracking feedback loop.

**Default:** 1

# Discrete PID Controller

---

## Parameter data type

Select the data type of the gain parameters **P**, **I**, **D**, **N**, **Kb**, and **Kt**.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Settings

Inherit: `Inherit via internal rule` (Default)

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use the simple choice of `Inherit: Same as input`.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.
- To specify your own inheritance rule, use `Inherit: Inherit via back propagation` and then use a Data Type Propagation block. Examples of how to use this block are available in the Signal Attributes library Data Type Propagation Examples block.

Inherit: `Inherit via back propagation`

Use data type of the driving block.

Inherit: `Same as input`

Use data type of input signal.

`double`

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2<sup>0</sup>,0)

<data type expression>

Name of a data type object. For example, Simulink.NumericType.

# Discrete PID Controller

---

## Product output data type

Select the product output data type of the gain parameters **P**, **I**, **D**, **N**, **Kb**, and **Kt** .

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Settings

**Inherit:** `Inherit via internal rule` (Default)

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use the simple choice of **Inherit:** `Same as input`.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.
- To specify your own inheritance rule, use **Inherit:** `Inherit via back propagation` and then use a Data Type Propagation block. Examples of how to use this block are available in the Signal Attributes library Data Type Propagation Examples block.

**Inherit:** `Inherit via back propagation`  
Use data type of the driving block.

**Inherit:** `Same as input`  
Use data type of input signal.

`double`

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2<sup>0</sup>,0)

<data type expression>

Name of a data type object. For example, Simulink.NumericType.

# Discrete PID Controller

---

## Summation output data type

Select the summation output data type of the sums **Sum**, **Sum D**, **Sum I1**, **SumI2**, and **SumI3**, which are sums computed internally within the block. To see where Simulink computes each of these sums, right-click the PID Controller block in your model and select **Look Under Mask**:

- **Sum** is the weighted sum of the proportional, derivative, and integral signals.
- **SumD** is the sum in the derivative filter feedback loop.
- **SumI1** is the sum of the block input signal (weighted by the integral gain I) and **SumI2**. **SumI1** is computed only when **Limit output** and **Anti-windup method** back-calculation are active.
- **SumI2** is the difference between the weighted sum **Sum** and the limited block output. **SumI2** is computed only when **Limit output** and **Anti-windup method** back-calculation are active.
- **SumI3** is the difference between the block output and the signal at the block's tracking input. **SumI3** is computed only when you select the **Enable tracking mode** box.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Settings

Inherit: `Inherit via internal rule (Default)`

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use the simple choice of `Inherit: Same as first input`.

- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.

---

**Note** The accumulator internal rule favors greater numerical accuracy, possibly at the cost of less efficient generated code. To get the same accuracy for the output, set the output data type to `Inherit: Same as accumulator`.

---

`Inherit: Inherit via back propagation`  
Use data type of the driving block.

`Inherit: Same as first input`  
Use data type of first input signal.

`Inherit: Same as accumulator`  
Use the same data type as the corresponding accumulator.

`double`

`single`

`int8`

`uint8`

`int16`

`uint16`

`int32`

`uint32`

`fixdt(1,16)`

`fixdt(1,16,0)`

`fixdt(1,16,2^0,0)`

`<data type expression>`

Name of a data type object. For example, `Simulink.NumericType`.

# Discrete PID Controller

---

## Accumulator data type

Specify the accumulator data type.

### Settings

**Default:** `Inherit`: `Inherit via internal rule`

`Inherit`: `Inherit via internal rule`

Use internal rule to determine accumulator data type.

`Inherit`: `Same as first input`

Use data type of first input signal.

`double`

Accumulator data type is `double`.

`single`

Accumulator data type is `single`.

`int8`

Accumulator data type is `int8`.

`uint8`

Accumulator data type is `uint8`.

`int16`

Accumulator data type is `int16`.

`uint16`

Accumulator data type is `uint16`.

`int32`

Accumulator data type is `int32`.

`uint32`

Accumulator data type is `uint32`.

`fixdt(1,16,0)`

Accumulator data type is fixed point `fixdt(1,16,0)`.

`fixdt(1,16,2^0,0)`

Accumulator data type is fixed point `fixdt(1,16,2^0,0)`.

<data type expression>

The name of a data type object, for example

Simulink.NumericType

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

For more information, see “Specify Data Types Using Data Type Assistant”.

# Discrete PID Controller

---

## Integrator output data type

Select the data type of the integrator output.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Settings

**Inherit:** Inherit via internal rule (Default)

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use **Inherit:** Inherit via back propagation.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.

**Inherit:** Inherit via back propagation

Use data type of the driving block.

double

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2<sup>0</sup>,0)

<data type expression>

Name of a data type object. For example, Simulink.NumericType.

# Discrete PID Controller

---

## Filter output data type

Select the data type of the filter output.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Settings

**Inherit:** Inherit via internal rule (Default)

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use **Inherit:** Inherit via back propagation.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.

**Inherit:** Inherit via back propagation

Use data type of the driving block.

double

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2<sup>0</sup>,0)

<data type expression>

Name of a data type object. For example, Simulink.NumericType.

# Discrete PID Controller

---

## Saturation output data type

Select the saturation output data type.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Settings

Inherit: Same as input (Default)

Use data type of input signal.

Inherit: Inherit via back propagation

Use data type of the driving block.

double

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2^0,0)

<data type expression>

Name of a data type object. For example, `Simulink.NumericType`.

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Inherit

### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit via internal rule (default)
- Inherit via back propagation
- Same as first input
- Same as accumulator

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

### Fixed point

Fixed-point data types.

# Discrete PID Controller

---

## Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

## Dependency

Clicking the **Show data type assistant** button enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## See Also

See “Specify Data Types Using Data Type Assistant”.

## Mode

Select the category of data to specify.

## Settings

**Default:** Inherit

### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit via back propagation
- Same as input (default)

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

### Fixed point

Fixed-point data types.

### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

# Discrete PID Controller

---

## **Dependency**

Clicking the **Show data type assistant** button enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specify Data Types Using Data Type Assistant”.

## Mode

Select the category of accumulator data to specify

### Settings

**Default:** Inherit

#### Inherit

Specifies inheritance rules for data types. Selecting **Inherit** enables a list of possible values:

- Inherit via internal rule (default)
- Same as first input

#### Built in

Specifies built-in data types. Selecting **Built in** enables a list of possible values:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

#### Fixed point

Specifies fixed-point data types.

#### Expression

Specifies expressions that evaluate to data types. Selecting **Expression** enables you to enter an expression.

## Dependency

Clicking the **Show data type assistant** button for the accumulator data type enables this parameter.

# Discrete PID Controller

---

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is `Built in` or `Fixed point`.

# Discrete PID Controller

---

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

## **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

## **Dependencies**

Selecting **Mode** > Fixed point enables this parameter.

## **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Signedness**

Specify whether you want the fixed-point data to be signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data to be signed.

Unsigned

Specify the fixed-point data to be unsigned.

### **Dependencies**

Selecting **Mode** > Fixed point for the accumulator data type enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

# Discrete PID Controller

---

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

## Settings

**Default:** Best precision, Binary point, Integer

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values. This option appears for some blocks.

Integer

Specify integer. This setting has the same result as specifying a binary point location and setting fraction length to 0. This option appears for some blocks.

## Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Discrete PID Controller

---

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

## Settings

**Default:** Binary point

Binary point  
Specify binary point location.

Slope and bias  
Enter slope and bias.

## Dependencies

Selecting **Mode** > Fixed point for the accumulator data type enables this parameter.

Selecting Binary point enables:

- **Fraction length**

Selecting Slope and bias enables:

- **Slope**
- **Bias**

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## See Also

See “Specifying a Fixed-Point Data Type” for more information.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Discrete PID Controller

---

## **Word length**

Specify the bit size of the word that will hold the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

Large word sizes represent large values with greater precision than small word sizes.

### **Dependencies**

Selecting **Mode** > **Fixed** point for the accumulator data type enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Discrete PID Controller

---

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point for the accumulator data type enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

## **Slope**

Specify slope for the fixed-point data type.

### **Settings**

**Default:**  $2^0$

Specify any positive real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Discrete PID Controller

---

## **Slope**

Specify slope for the fixed-point data type.

## **Settings**

**Default:** 2<sup>0</sup>

Specify any positive real number.

## **Dependencies**

Selecting **Scaling** > Slope and bias for the accumulator data type enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

**Bias**

Specify bias for the fixed-point data type.

**Settings**

**Default:** 0

Specify any real number.

**Dependencies**

Selecting **Scaling** > Slope and bias enables this parameter.

**See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Discrete PID Controller

---

## **Bias**

Specify bias for the fixed-point data type.

## **Settings**

**Default:** 0

Specify any real number.

## **Dependencies**

Selecting **Scaling** > Slope and bias for the accumulator data type enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off



On

Locks the output data type setting for this block.



Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

# Discrete PID Controller

---

## Saturate on integer overflow

Specify whether overflows saturate.

### Settings

**Default:** Off



On

Overflows saturate to either the minimum or maximum value that the data type can represent.

For example, an overflow associated with a signed 8-bit integer can saturate to -128 or 127.



Off

Overflows wrap to the appropriate value that is representable by the data type.

For example, the number 130 does not fit in a signed 8-bit integer and wraps to -126.

### Tips

- Consider selecting this check box when your model has possible overflow and you want explicit saturation protection in the generated code.
- Consider clearing this check box when you want to optimize efficiency of your generated code.

Clearing this check box also helps you avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.

- When you select this check box, saturation applies to every internal operation on the block, not just the output or result.
- In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Command-Line Information

**Parameter:** SaturateOnIntegerOverflow

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Discrete PID Controller

---

## Integer rounding mode

Specify the rounding mode for fixed-point operations.

### Settings

**Default:** Floor

#### Ceiling

Rounds both positive and negative numbers toward positive infinity. Equivalent to the MATLAB `ceil` function.

#### Convergent

Rounds number to the nearest representable value. If a tie occurs, rounds to the nearest even integer. Equivalent to the Fixed-Point Designer `convergent` function.

#### Floor

Rounds both positive and negative numbers toward negative infinity. Equivalent to the MATLAB `floor` function.

#### Nearest

Rounds number to the nearest representable value. If a tie occurs, rounds toward positive infinity. Equivalent to the Fixed-Point Designer `nearest` function.

#### Round

Rounds number to the nearest representable value. If a tie occurs, rounds positive numbers toward positive infinity and rounds negative numbers toward negative infinity. Equivalent to the Fixed-Point Designer `round` function.

#### Simplest

Automatically chooses between round toward floor and round toward zero to generate rounding code that is as efficient as possible.

#### Zero

Rounds number toward zero. Equivalent to the MATLAB `fix` function.

## Command-Line Information

**Parameter:** RndMeth

**Type:** string

**Value:** 'Ceiling' | 'Convergent' | 'Floor' | 'Nearest' |  
'Round' | 'Simplest' | 'Zero'

**Default:** 'Floor'

## **See Also**

For more information, see “Rounding” in the Fixed-Point Designer documentation.

# Discrete PID Controller

---

## State name

Assign unique name to each state. The state names apply only to the selected block.

To assign a name to a single state, enter the name between quotes; for example, 'velocity'.

To assign names to multiple states, enter a comma-delimited list surrounded by braces; for example, {'a', 'b', 'c'}. Each name must be unique. To assign state names with a variable that has been defined in the MATLAB workspace, enter the variable without quotes. The variable can be a string, cell, or structure.

## Settings

**Default:** ' ' (no name)

## State name must resolve to Simulink signal object

Require that state name resolve to Simulink signal object.

### Settings

**Default:** Off



On

Require that state name resolve to Simulink signal object.



Off

Do not require that state name resolve to Simulink signal object.

### Dependencies

**State name** enables this parameter.

Selecting this check box disables **Code generation storage class**.

### Command-Line Information

**Parameter:** StateMustResolveToSignalObject

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Discrete PID Controller

---

## Code generation storage class

Select state storage class.

### Settings

**Default:** Auto

Auto

Auto is the appropriate storage class for states that you do not need to interface to external code.

ExportedGlobal

State is stored in a global variable

ImportedExtern

*model\_private.h* declares the state as an extern variable.

ImportedExternPointer

*model\_private.h* declares the state as an extern pointer.

### Dependencies

**State name** enables this parameter.

Setting this parameter to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables **Code generation storage type qualifier**.

### Command-Line Information

Command-Line Information

**Parameter:** StateStorageClass

**Type:** string

**Value:** 'Auto' | 'ExportedGlobal' | 'ImportedExtern' | 'ImportedExternPointer'

**Default:** 'Auto'

## Code generation storage type qualifier

Specify the Simulink Coder storage type qualifier.

### Settings

**Default:** ' '

If left blank, no qualifier is assigned.

### Dependency

Setting **Code generation storage class** to ExportedGlobal, ImportedExtern, or ImportedExternPointer enables this parameter.

### Command-Line Information

**Parameter:** RTWStateStorageTypeQualifier

**Type:** string

**Value:** ' '

**Default:** ' '

## Characteristics

Direct Feedthrough	The following ports support direct feedthrough: <ul style="list-style-type: none"> <li>Reset port</li> <li>Integrator and filter initial condition port</li> <li>Input port, for every integration method except Forward Euler</li> </ul>
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Supported for gain parameters <b>P</b> , <b>I</b> , and <b>D</b> and for filter coefficient <b>N</b>
States	Inherited from driving block and parameters
Dimensionalized	Yes
Zero-Crossing Detection	Yes (in continuous-time domain)

# Discrete PID Controller

---

## **See Also**

PID Controller (2 DOF), Gain, Integrator, Discrete-Time Integrator, Derivative, Discrete Derivative.

**Purpose** Simulate continuous- or discrete-time two-degree-of-freedom PID controllers

**Library** Continuous, Discrete

**Description** Implement a continuous- or discrete-time two-degree-of-freedom controller (PID, PI, or PD) in your Simulink model. The PID Controller (2DOF) block allows you to implement setpoint weighting in your controller to achieve both smooth setpoint tracking and good disturbance rejection.




The PID Controller (2DOF) block generates an output signal based on the difference between a reference signal and a measured system output. The block computes a weighted difference signal for each of the proportional, integral, and derivative actions according to the setpoint weights you specify. The block output is the sum of the proportional, integral, and derivative actions on the respective difference signals, where each action is weighted according to the gain parameters. A first-order pole filters the derivative action. Controller gains are tunable either manually or automatically. Automatic tuning requires Simulink Control Design software (PID Tuner or SISO Design Tool).

Configurable options in the PID Controller (2DOF) block include:

- Controller type (PID, PI, or PD)
- Controller form (Parallel or Ideal)
- Time domain (continuous or discrete)
- Initial conditions and reset trigger
- Output saturation limits and built-in anti-windup mechanism
- Signal tracking for bumpless control transfer and multiloop control

In one common implementation, the PID Controller (2DOF) block operates in the feedforward path of the feedback loop. The block receives a reference signal at the **Ref** input and a measured system output at the other input. For example:

# Discrete PID Controller (2 DOF)

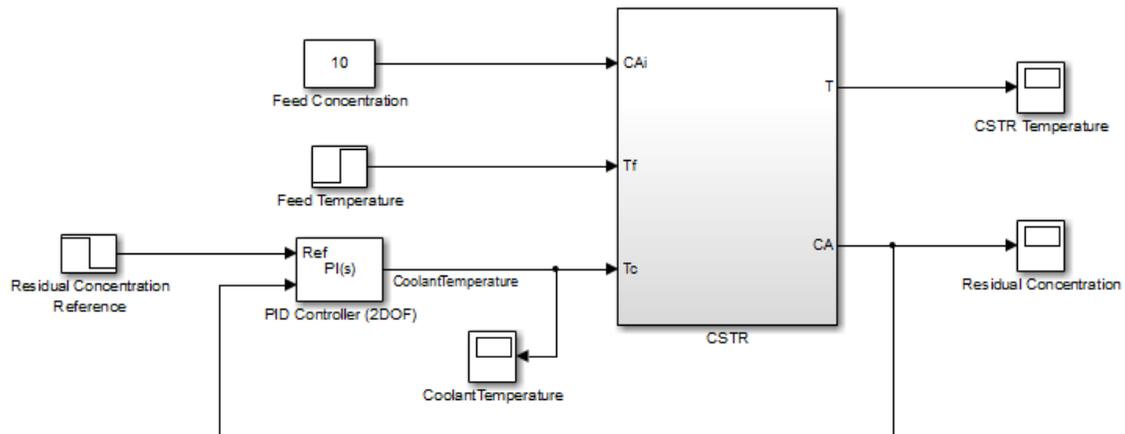

For a single-input block that accepts an error signal (a difference between a setpoint and a system output), see the Discrete PID Controller block reference page.

You can generate code to implement your controller using any Simulink data type, including fixed-point data types. (Code generation requires Simulink Coder software; fixed-point implementation requires the Fixed-Point Designer product.)

For an example illustrating an application of the PID Controller (2 DOF) block, see the Simulink example Two Degree-of-Freedom PID Control for Setpoint Tracking.

## Data Type Support

The PID Controller (2DOF) block accepts real signals of any numeric data type that Simulink software supports, including fixed-point data types. See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Parameters

The following table summarizes the PID Controller (2DOF) block parameters, accessible via the block parameter dialog box.

# Discrete PID Controller (2 DOF)

<b>Task</b>	<b>Parameters</b>
Choose controller form and type.	<ul style="list-style-type: none"><li>• <b>Controller Form</b> in Main tab</li><li>• <b>Controller</b></li></ul>
Choose discrete or continuous time.	<ul style="list-style-type: none"><li>• <b>Time-domain</b></li><li>• <b>Sample time</b></li></ul>
Choose an integration method (discrete time).	<ul style="list-style-type: none"><li>• <b>Integrator method</b></li><li>• <b>Filter method</b></li></ul>
Set and tune controller gains.	<ul style="list-style-type: none"><li>• <b>Proportional (P)</b> in Main tab</li><li>• <b>Integral (I)</b> in Main tab</li><li>• <b>Derivative (D)</b> in Main tab</li><li>• <b>Filter coefficient (N)</b> in Main tab</li><li>• <b>Setpoint weight (b)</b> in Main tab</li><li>• <b>Setpoint weight (c)</b> in Main tab</li></ul>
Set integrator and filter initial conditions.	<ul style="list-style-type: none"><li>• <b>Initial conditions Source</b> in Main tab</li><li>• <b>Integrator Initial condition</b> in Main tab</li><li>• <b>Filter Initial condition</b> in Main tab</li><li>• <b>External reset</b> in Main tab</li><li>• <b>Ignore reset when linearizing</b> in Main tab</li></ul>

# Discrete PID Controller (2 DOF)

Task	Parameters
Limit block output.	<ul style="list-style-type: none"><li>• <b>Limit output</b> in PID Advanced tab</li><li>• <b>Lower saturation limit</b> in PID Advanced tab</li><li>• <b>Upper saturation limit</b> in PID Advanced tab</li><li>• <b>Ignore saturation when linearizing</b> in PID Advanced tab</li></ul>
Configure anti-windup mechanism (when you limit block output).	<ul style="list-style-type: none"><li>• <b>Anti-windup method</b> in PID Advanced tab</li><li>• <b>Back-calculation gain (Kb)</b> in PID Advanced tab</li></ul>
Enable signal tracking.	<ul style="list-style-type: none"><li>• <b>Enable tracking mode</b> in PID Advanced tab</li><li>• <b>Tracking gain (Kt)</b> in PID Advanced tab</li></ul>
Configure data types.	<ul style="list-style-type: none"><li>• <b>Parameter data type</b> in Data Type Attributes tab</li><li>• <b>Product output data type</b> in Data Type Attributes tab</li><li>• <b>Summation output data type</b> in Data Type Attributes tab</li><li>• <b>Accumulator data type</b> in Data Type Attributes tab</li><li>• <b>Integrator output data type</b> in Data Type Attributes tab</li><li>• <b>Filter output data type</b> in Data Type Attributes tab</li></ul>

# Discrete PID Controller (2 DOF)

Task	Parameters
	<ul style="list-style-type: none"><li>• <b>Saturation output data type</b> in Data Type Attributes tab</li><li>• <b>Lock output data type setting against changes by the fixed-point tools</b> in Data Type Attributes tab</li><li>• <b>Saturate on integer overflow</b> in Data Type Attributes tab</li><li>• <b>Integer rounding mode</b> in Data Type Attributes tab</li></ul>
Configure block for code generation.	<ul style="list-style-type: none"><li>• <b>State name</b> in State Attributes tab</li><li>• <b>State name must resolve to Simulink signal object</b> in State Attributes tab</li><li>• <b>Code generation storage class</b> in State Attributes tab</li><li>• <b>Code generation storage type qualifier</b> in State Attributes tab</li></ul>

# Discrete PID Controller (2 DOF)

## Controller form


Select the controller form.

## Settings

Parallel (Default)


Selects a controller form in which the proportional, integral, and derivative gains **P**, **I**, and **D** operate independently. The filter coefficient **N** sets the location of the pole in the derivative filter.

Parallel two-degree-of-freedom PID controller, where input 1 receives a reference signal and input 2 receives feedback from the measured system output:

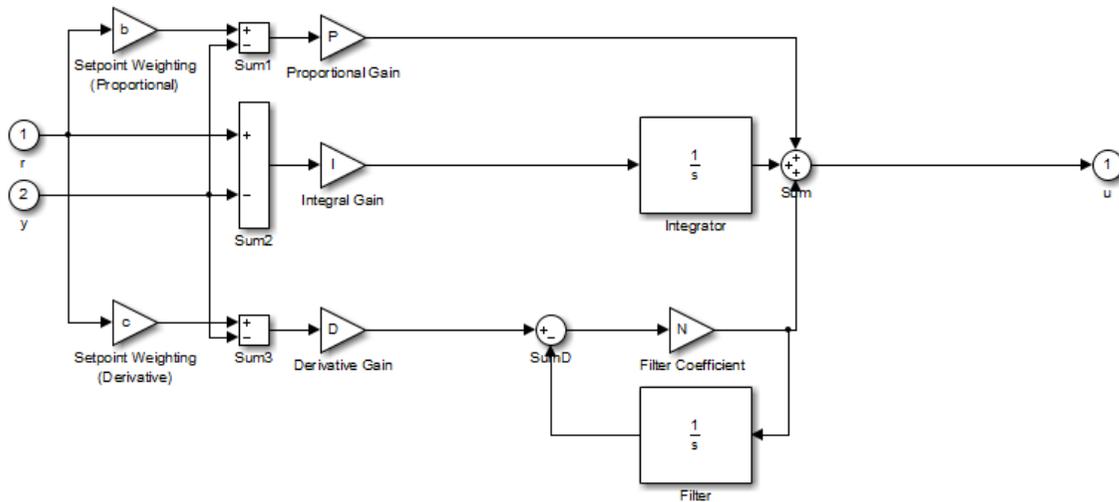

The parallel two-degree-of-freedom PID controller can be equivalently modeled by the following block diagram:

# Discrete PID Controller (2 DOF)

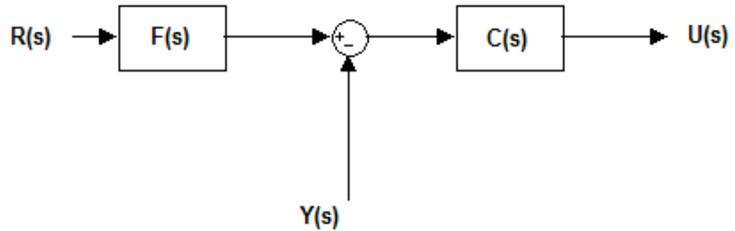


$R(s)$  represents the reference signal and  $Y(s)$  represents the feedback from measured system output. In this model,  $C(s)$  is a single degree-of-freedom controller, and  $F(s)$  acts as a prefilter on the reference signal. For a parallel two-degree-of-freedom PID controller in the Continuous-time **Time-domain**, the transfer functions  $F(s)$  and  $C(s)$  are:

$$F_{par}(s) = \frac{(bP + cDN)s^2 + (bPN + I)s + IN}{(P + DN)s^2 + (PN + I)s + IN}$$
$$C_{par}(s) = \frac{(P + DN)s^2 + (PN + I)s + IN}{s(s + N)}$$

where  $b$  and  $c$  are the **Setpoint weight** parameters.

Alternatively, the parallel two-degree-of-freedom PID controller can be modeled by the following block diagram:

# Discrete PID Controller (2 DOF)

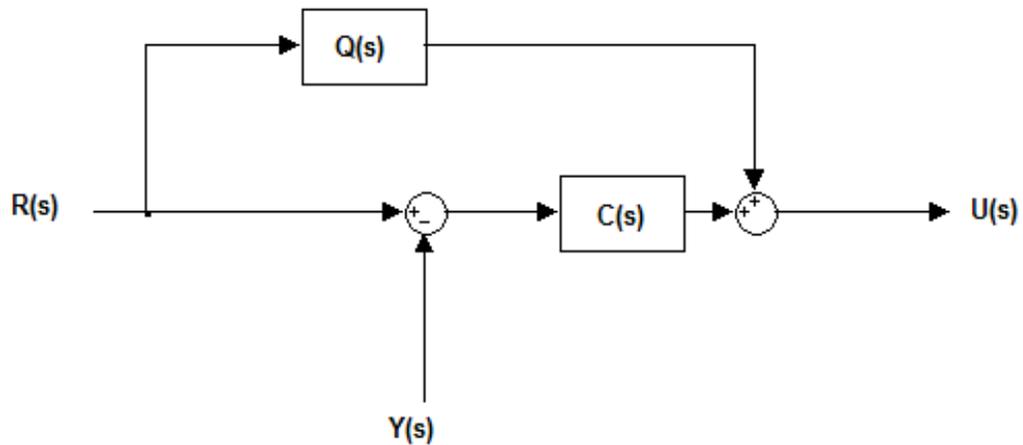

$R(s)$ ,  $Y(s)$ , and  $C(s)$  are as discussed previously. In this realization,  $Q(s)$  acts as feed-forward conditioning on the reference signal  $R(s)$ . For a parallel PID controller in the Continuous-time **Time-domain**, the transfer function  $Q(s)$  is:


$$Q_{par}(s) = \frac{((b-1)P + (c-1)DN)s + (b-1)PN}{s + N}$$

## Ideal

Selects a controller form in which the proportional gain  $P$  acts on the sum of all actions.

Ideal two-degree-of-freedom PID controller, where input 1 receives a reference signal and input 2 receives feedback from the measured system output:

# Discrete PID Controller (2 DOF)

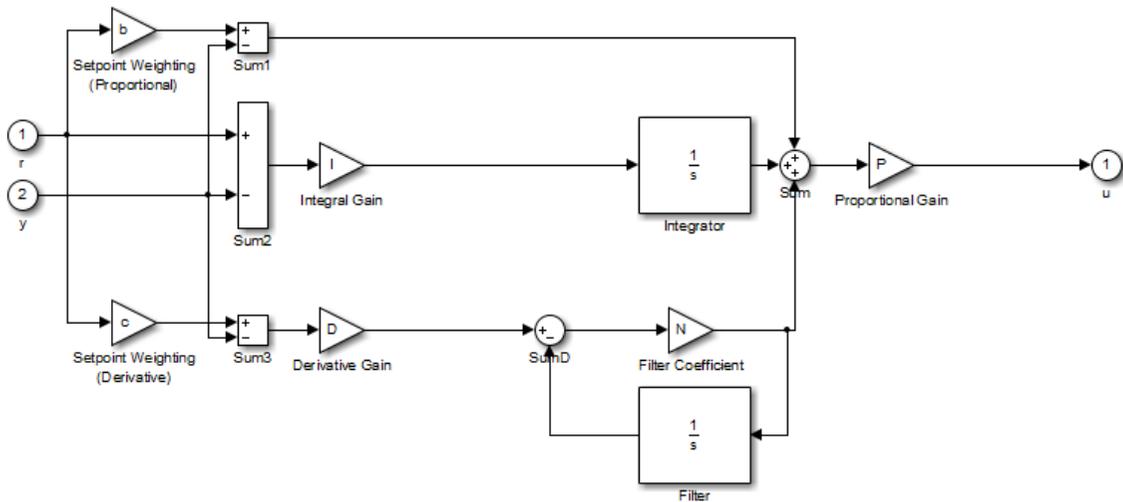

Similarly to the parallel controller form discussed previously, the ideal two-degree-of-freedom PID controller can be modeled as a single degree-of-freedom controller  $C(s)$  with a prefilter  $F(s)$ . For an ideal two-degree-of-freedom PID controller in the Continuous-time **Time-domain**, the transfer functions  $F(s)$  and  $C(s)$  are:

$$F_{id}(s) = \frac{(b + cDN)s^2 + (bN + I)s + IN}{(1 + DN)s^2 + (N + I)s + IN}$$

$$C_{id}(s) = P \frac{(1 + DN)s^2 + (N + I)s + IN}{s(s + N)}$$

where  $b$  and  $c$  are the **Setpoint weight** parameters.

Alternatively, modeling the ideal two-degree-of-freedom PID controller as a one-degree-of-freedom controller  $C(s)$  with

## Discrete PID Controller (2 DOF)

---

feed-forward conditioning  $Q(s)$  on the reference signal gives, in continuous-time:

$$Q_{id}(s) = P \frac{((b-1) + (c-1)DN)s + (b-1)N}{s + N}$$

The controller transfer function for the current settings is displayed in the block dialog box.

## **Controller**

Specify the controller type.

### **Settings**

PID (Default)

Implements a controller with proportional, integral, and derivative action.

PI

Implements a controller with proportional and integral action.

PD

Implements a controller with proportional and derivative action.



The controller transfer function for the current settings is displayed in the block dialog box.

# Discrete PID Controller (2 DOF)

---

## Time-domain

Select continuous or discrete time domain. The appearance of the block changes to reflect your selection.

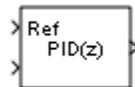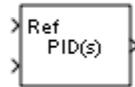

## Settings

Continuous-time (Default)

Selects the continuous-time representation.

Discrete-time

Selects the discrete-time representation. Selecting Discrete-time also allows you to specify the:

- **Sample time**, which is the discrete interval between samples.
- Discrete integration methods for the integrator and the derivative filter using the **Integrator method** and **Filter method** menus.

## Integrator method

(Available only when you set **Time-domain** to Discrete-time.)  
Specify the method used to compute the integrator output. For more information about discrete-time integration methods, see the Discrete-Time Integrator block reference page.

### Settings

#### Forward Euler (Default)

Selects the Forward Rectangular (left-hand) approximation.

- This method is best for small sampling times, where the Nyquist limit is large compared to the bandwidth of the controller. For larger sampling times, the Forward Euler method can result in instability, even when discretizing a system that is stable in continuous time.

#### Backward Euler

Selects the Backward Rectangular (right-hand) approximation.

- If you are generating code using Simulink Coder software or the Fixed-Point Designer product and you activate the Back-calculation **Anti-windup method**, this integration method can cause algebraic loops in your controller. Algebraic loops can lead to slower performance of generated code. For more information about algebraic loops in Simulink models, see “Algebraic Loops” in the Simulink documentation.
- An advantage of the Backward Euler method is that discretizing a stable continuous-time system using this method always yields a stable discrete-time result.

#### Trapezoidal

Selects the Bilinear approximation.

- If you are generating code using Simulink Coder software or the Fixed-Point Designer product and you activate the Back-calculation **Anti-windup method**, this integration method can cause algebraic loops in your controller. Algebraic loops can lead to slower performance of generated code. For

## Discrete PID Controller (2 DOF)

---

more information about algebraic loops in Simulink models, see “Algebraic Loops” in the Simulink documentation.

- An advantage of the Trapezoidal method is that discretizing a stable continuous-time system using this method always yields a stable discrete-time result. Of all available integration methods, the Trapezoidal method yields the closest match between frequency-domain properties of the discretized system and the corresponding continuous-time system.

## Filter method

(Available only when you set **Time-domain** to Discrete-time.)  
Specify the method used to compute the derivative filter output. For more information about discrete-time integration methods, see the Discrete-Time Integrator block reference page.

### Settings

#### Forward Euler (Default)

Selects the Forward Rectangular (left-hand) approximation.

- This method is best for small sampling times, where the Nyquist limit is large compared to the bandwidth of the controller. For larger sampling times, the Forward Euler method can result in instability, even when discretizing a system that is stable in continuous time.

#### Backward Euler

Selects the Backward Rectangular (right-hand) approximation.

- If you are generating code using Simulink Coder software or the Fixed-Point Designer product, this filter method can cause algebraic loops in your controller. Algebraic loops can lead to slower performance of generated code. For more information about algebraic loops in Simulink models, see “Algebraic Loops” in the Simulink documentation.
- An advantage of the Backward Euler method is that discretizing a stable continuous-time system using this method always yields a stable discrete-time result. Any filter parameter value  $N > 0$  yields a stable result with this method.

#### Trapezoidal

Selects the Bilinear approximation.

- If you are generating code using Simulink Coder software or the Fixed-Point Designer product, this filter method can cause algebraic loops in your controller. Algebraic loops can lead to slower performance of generated code. For more information about algebraic loops in Simulink models, see “Algebraic Loops” in the Simulink documentation.

## Discrete PID Controller (2 DOF)

---

- An advantage of the Trapezoidal method is that discretizing a stable continuous-time system using this method always yields a stable discrete-time result. Any filter parameter value  $N > 0$  yields a stable result with this method. Of all available filter methods, the Trapezoidal method yields the closest match between frequency-domain properties of the discretized system and the corresponding continuous-time system.

## Sample time (-1 for inherited)

(Available only when you set **Time-domain** to Discrete-time.) Specify the discrete interval between samples.

### Settings

**Default:** 1

By default, the block uses a discrete sample time of 1. To specify a different sample time, enter another discrete value, such as 0.1.

If you specify a value of  $-1$ , the PID Controller (2DOF) block inherits the sample time from upstream blocks. Do not enter a value of 0; to implement a continuous-time controller, select the **Time-domain** Continuous-time.

See “Specify Sample Time” in the online documentation for more information.

# Discrete PID Controller (2 DOF)

---

## **Proportional (P)**

Specify the proportional gain P.

**Default:** 1

Enter a finite, real gain value into the **Proportional (P)** field. Use either scalar or vector gain values. For a **parallel PID Controller form**, the proportional action is independent of the integral and derivative actions. For an **ideal PID Controller form**, the proportional action acts on the integral and derivative actions. See “Controller form” on page 1-1246 for more information about the role of P in the controller transfer function.

When you have Simulink Control Design software installed, you can automatically tune the controller gains using the PID Tuner or the SISO Design Tool. See “Choosing a Compensator Design Approach”.

## **Integral (I)**

(Available for PID and PI controllers.) Specify the integral gain  $I$ .

**Default:** 1

Enter a finite, real gain value into the **Integral (I)** field. Use either scalar or vector gain values.

When you have Simulink Control Design software installed, you can automatically tune the controller gains using the PID Tuner or the SISO Design Tool. See “Choosing a Compensator Design Approach”.

# Discrete PID Controller (2 DOF)

---

## **Derivative (D)**

(Available for PID and PD controllers.) Specify the derivative gain  $D$ .

**Default:** 0


Enter a finite, real gain value into the **Derivative (D)** field. Use either scalar or vector gain values.

When you have Simulink Control Design software installed, you can automatically tune the controller gains using the PID Tuner or the SISO Design Tool. See “Choosing a Compensator Design Approach”.

## Filter coefficient (N)

Specifies the filter coefficient of the controller.

(Available for PID and PD controllers.) Specify the filter coefficient N, which determines the pole location of the filter in the derivative action:

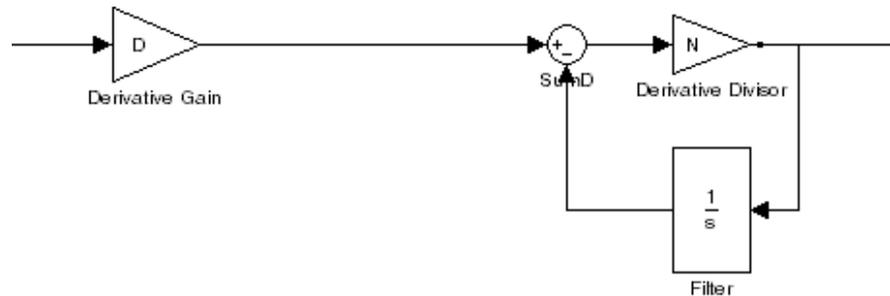

The filter pole falls at  $s = -N$  in the Continuous-time **Time-domain**. For Discrete-time, the location of the pole depends on which **Filter method** you select (for sampling time  $T_s$ ):

- Forward Euler:

$$z_{pole} = 1 - NT_s$$

- Backward Euler:

$$z_{pole} = \frac{1}{1 + NT_s}$$

- Trapezoidal:

$$z_{pole} = \frac{1 - NT_s/2}{1 + NT_s/2}$$

**Default:** 100.

## Discrete PID Controller (2 DOF)

---

Enter a finite, real gain value into the **Filter Coefficient (N)** field. Use either scalar or vector gain values. Note that the PID controller (2DOF) block does not support  $N = \text{inf}$  (ideal unfiltered derivative).

When you have Simulink Control Design software installed, you can automatically tune the controller gains using the PID Tuner or the SISO Design Tool. See “Choosing a Compensator Design Approach”. Automatic tuning requires  $N > 0$ .


## Setpoint weight (b)

Specify the proportional setpoint weight b.

**Default:** 1


Enter the proportional setpoint weight value into the **Setpoint weight (b)** field. Setting  $b = 0$  eliminates the proportional action on the reference signal, which can reduce overshoot in the system response to step changes in the setpoint.

The following diagrams show the role of **Setpoint weight (b)** in Parallel and Ideal PID controllers. See “Controller form” on page 1-1246 for a discussion of the corresponding transfer functions.

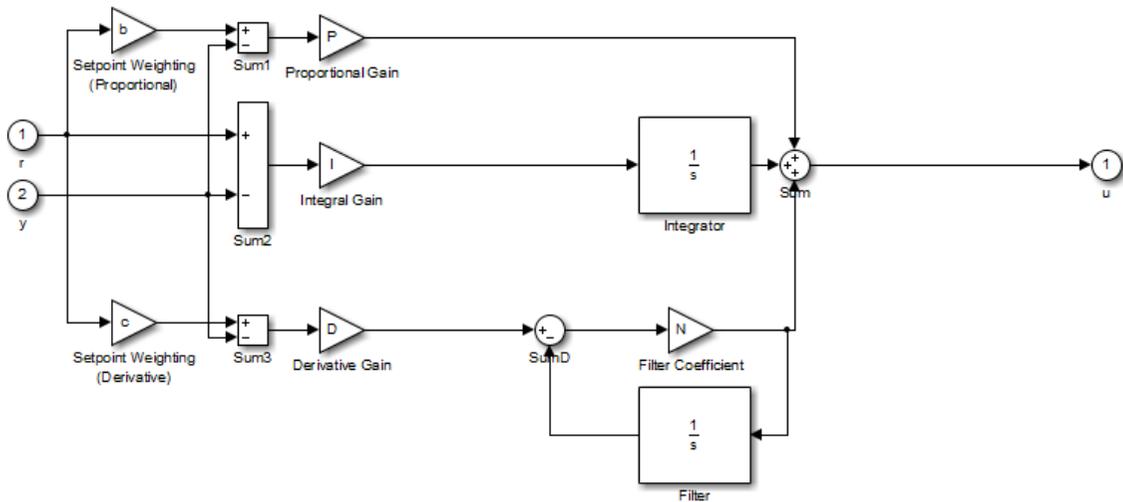

**Parallel Two-Degree-of-Freedom PID Controller**

# Discrete PID Controller (2 DOF)

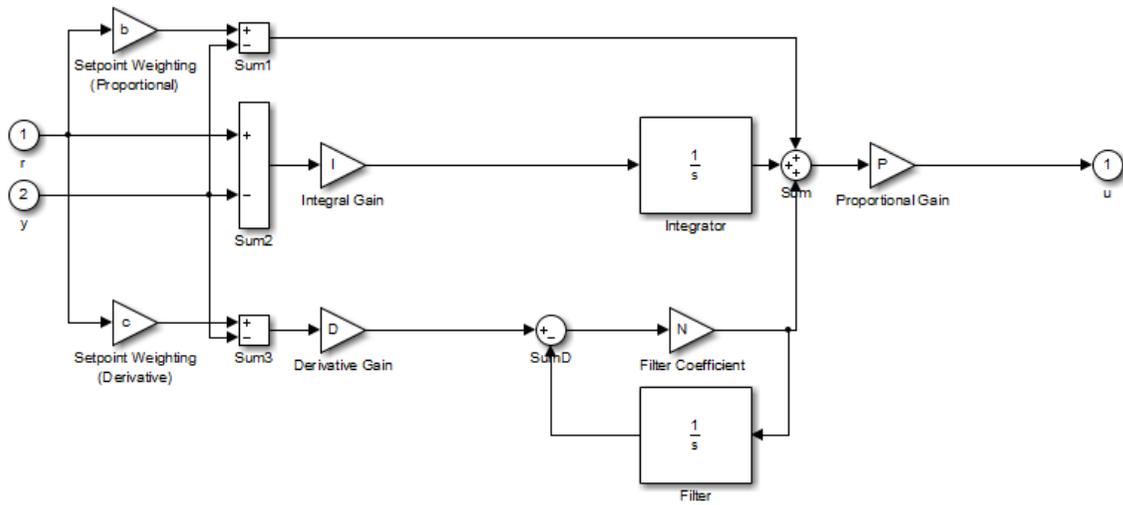


**Ideal Two-Degree-of-Freedom PID Controller**

## Setpoint weight (c)

(Available for PID and PD controllers.) Specify the derivative setpoint weight  $c$ .


Enter the derivative setpoint weight value into the **Setpoint weight (c)** field. To implement a controller that achieves both effective disturbance rejection and smooth setpoint tracking without excessive transient response, set  $c = 0$ . Setting  $c = 0$  yields a controller with derivative action on the measured system response but not on the reference input.

The following diagrams show the role of **Setpoint weight (c)** in Parallel and Ideal PID controllers. See “Controller form” on page 1-1246 for a discussion of the corresponding transfer functions.

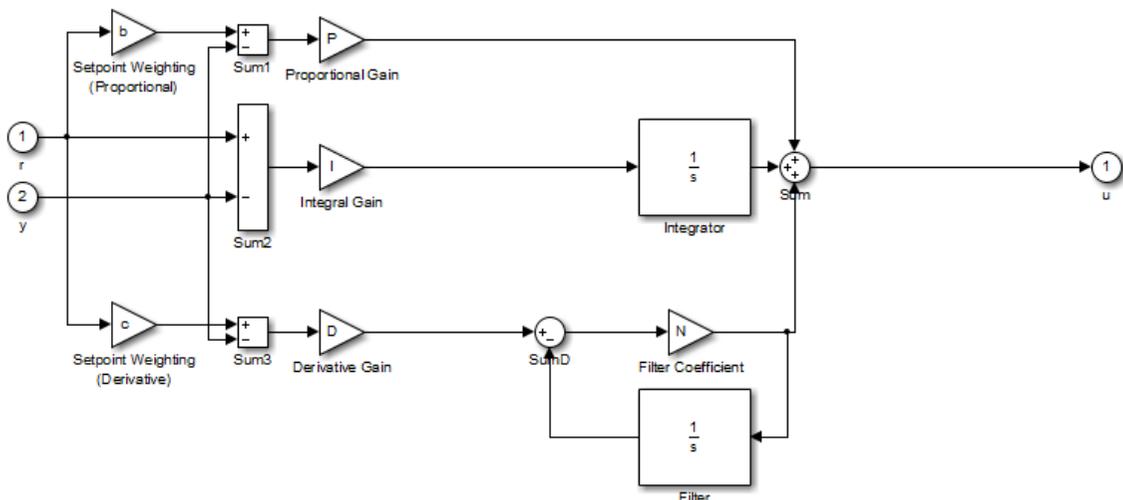

**Parallel Two-Degree-of-Freedom PID Controller**

# Discrete PID Controller (2 DOF)

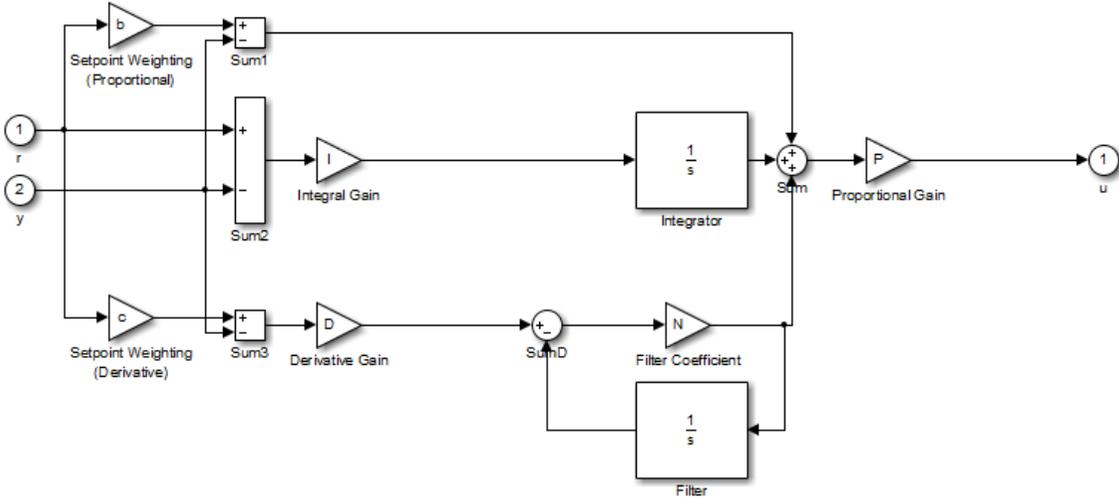

**Ideal Two-Degree-of-Freedom PID Controller**

## Initial conditions Source

Select the source of the integrator and filter initial conditions. Simulink uses initial conditions to initialize the integrator and filter output at the start of a simulation or at a specified trigger event (see “External reset” on page 1-1270). The integrator and filter initial conditions in turn determine the initial block output.


## Settings

internal (Default)

Specifies the integrator and filter initial conditions explicitly using the **Integrator Initial condition** and **Filter Initial condition** parameters.

external

Specifies the integrator and filter initial conditions externally. An additional input port appears under the block inputs for each initial condition:  $I_0$  for the integrator and  $D_0$  for the filter:

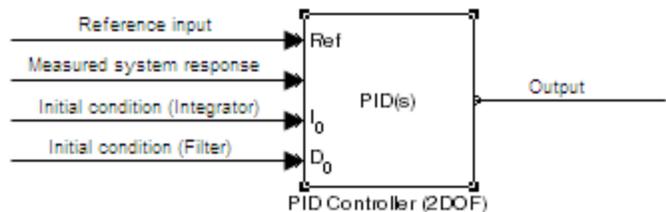

# Discrete PID Controller (2 DOF)

---

## **Integrator Initial condition**

(Available only when **Initial conditions Source** is `internal` and the controller includes integral action.) Specify the integrator initial value. Simulink uses the initial condition to initialize the integrator output at the start of a simulation or at a specified trigger event (see “External reset” on page 1-1270). The integrator initial condition, together with the filter initial condition, determines the initial output of the PID Controller (2DOF) block.

**Default:** 0

Simulink does not permit the integrator initial condition to be `inf` or `NaN`.

## Filter Initial condition

(Available only when **Initial conditions Source** is `internal` and the controller includes integral action.) Specify the filter initial value. Simulink uses the initial condition to initialize the filter output at the start of a simulation or at a specified trigger event (see “External reset” on page 1-1270). The filter initial condition, together with the integrator initial condition, determines the initial output of the PID Controller (2DOF) block.

**Default:** 0


Simulink does not permit the filter initial condition to be `inf` or `NaN`.

# Discrete PID Controller (2 DOF)


---

## External reset

Select the trigger event that resets the integrator and filter outputs to the initial conditions you specify in the **Integrator Initial condition** and **Filter Initial condition** fields. Selecting any option other than none enables a reset input on the block for the external reset signal, as shown:

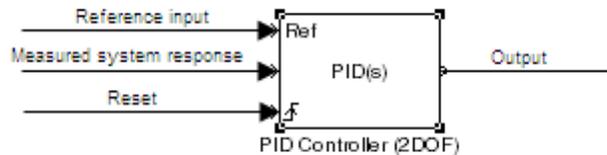

Or, if the **Initial conditions Source** is External:

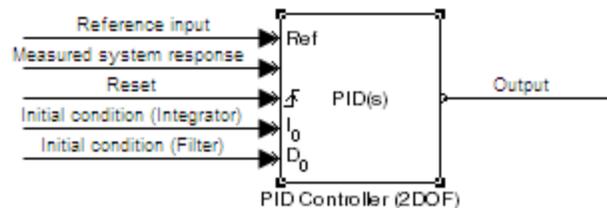

The reset signal must be a scalar of type single, double, boolean, or integer. Fixed point data types, except for ufix1, are not supported.

---

**Note** To be compliant with the Motor Industry Software Reliability Association (MISRA) software standard, your model must use Boolean signals to drive the external reset ports of the PID controller (2DOF) block.

---

## Settings

none (Default)

Does not reset the integrator and filter outputs to initial conditions.

rising

Resets the outputs when the reset signal has a rising edge.

falling

Resets the outputs when the reset signal has a falling edge.

either

Resets the outputs when the reset signal either rises or falls.

level

Resets and holds the outputs to the initial conditions while the reset signal is nonzero.

# Discrete PID Controller (2 DOF)

---

## Ignore reset when linearizing

Force Simulink linearization commands to ignore any reset mechanism that you have chosen with the **External reset** menu. Ignoring reset states allows you to linearize a model around an operating point even if that operating point causes the PID Controller (2DOF) block to reset.

### Settings

- Off (Default)  
Simulink linearization commands do not ignore states corresponding to the reset mechanism.
- On  
Simulink linearization commands ignore states corresponding to the reset mechanism.

## Enable zero-crossing detection

Enable zero-crossing detection in continuous-time models upon reset and upon entering or leaving a saturation state.

Zero-crossing detection can accurately locate signal discontinuities without resorting to excessively small time steps that can lead to lengthy simulation times. If you select **Limit output** or activate an **External reset** in your PID Controller (2DOF) block, activating zero-crossing detection can reduce computation time in your simulation. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

### Settings

On (Default)

Uses zero-crossing detection at any of the following events: reset; entering or leaving an upper saturation state; and entering or leaving a lower saturation state.

Off

Does not use zero-crossing detection.

Enabling zero-crossing detection for the PID Controller (2DOF) block also enables zero-crossing detection for all under-mask blocks that include the zero-crossing detection feature.

# Discrete PID Controller (2 DOF)

---

## Limit output

Limit the block output to values you specify as the **Lower saturation limit** and **Upper saturation limit** parameters.

Activating this option limits the block output internally to the block, obviating the need for a separate Saturation block after the controller in your Simulink model. It also allows you to activate the built-in anti-windup mechanism (see “Anti-windup method” on page 1-1277).

## Settings

Off (Default)

Does not limit the block output, which is the weighted sum of the proportional, integral, and derivative actions.

On

Limits the block output to the **Lower saturation limit** or the **Upper saturation limit** whenever the weighted sum exceeds those limits. Allows you to select an **Anti-windup method**.

## **Lower saturation limit**

(Available only when you select the **Limit Output** box.) Specify the lower limit for the block output. The block output is held at the **Lower saturation limit** whenever the weighted sum of the proportional, integral, and derivative actions goes below that value.

**Default:** -inf

# Discrete PID Controller (2 DOF)

---

## **Upper saturation limit**

(Available only when you select the **Limit Output** box.) Specify the upper limit for the block output. The block output is held at the **Upper saturation limit** whenever the weighted sum of the proportional, integral, and derivative actions exceeds that value.

**Default:** inf

## Anti-windup method

(Available only when you select the **Limit Output** option and the controller includes integral action.) Select an anti-windup mechanism to discharge the integrator when the block is saturated, which occurs when the sum of the block components exceeds the output limits.

When you select the **Limit output** check box and the weighted sum of the controller components exceeds the specified output limits, the block output holds at the specified limit. However, the integrator output can continue to grow (integrator wind-up), increasing the difference between the block output and the sum of the block components. Without a mechanism to prevent integrator wind-up, two results are possible:

- If the sign of the input signal never changes, the integrator continues to integrate until it overflows. The overflow value is the maximum or minimum value for the data type of the integrator output.
- If the sign of the input signal changes once the weighted sum has grown beyond the output limits, it can take a long time to discharge the integrator and return the weighted sum within the block saturation limit.

In both cases, controller performance can suffer. To combat the effects of wind-up without an anti-windup mechanism, it may be necessary to detune the controller (for example, by reducing the controller gains), resulting in a sluggish controller. Activating an anti-windup mechanism can improve controller performance.

## Settings


none (Default)

Does not use an anti-windup mechanism. This setting can cause the block's internal signals to be unbounded even if the output appears to be bounded by the saturation limits. This can result in slow recovery from saturation or unexpected overflows.

back-calculation

Discharges the integrator when the block output saturates using the integral-gain feedback loop:

# Discrete PID Controller (2 DOF)

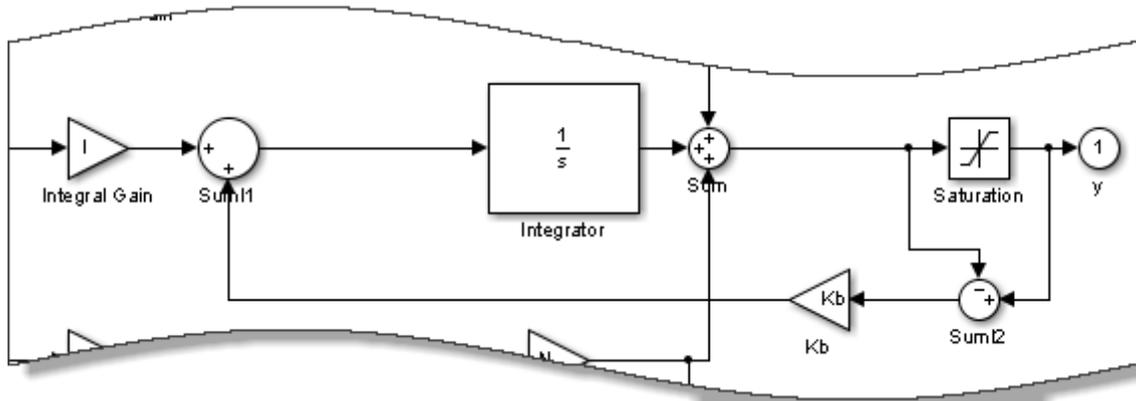


You can also specify a value for the **Back-calculation coefficient (Kb)**.

## clamping

Stops integration when the sum of the block components exceeds the output limits and the integrator output and block input have the same sign. Resumes integration when the sum of the block components exceeds the output limits and the integrator output and block input have opposite sign. The integrator portion of the block is:

# Discrete PID Controller (2 DOF)

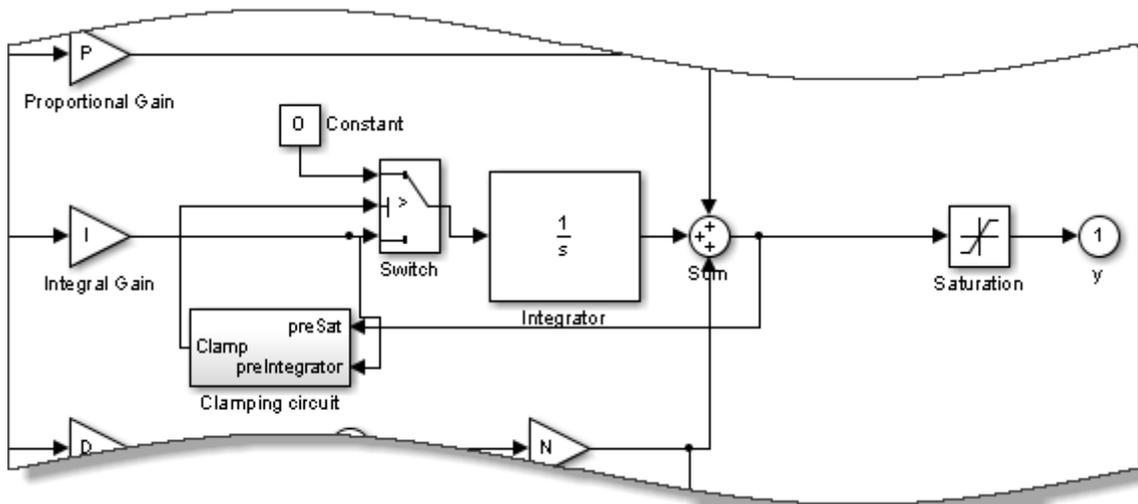

The clamping circuit implements the logic necessary to determine whether integration continues.

# Discrete PID Controller (2 DOF)

---

## **Back-calculation gain (Kb)**

(Available only when the back-calculation **Anti-windup method** is active.) Specify the gain coefficient of the anti-windup feedback loop.

The back-calculation anti-windup method discharges the integrator on block saturation using a feedback loop having gain coefficient Kb.

**Default:** 1

## Ignore saturation when linearizing

Force Simulink linearization commands ignore PID Controller (2DOF) block output limits. Ignoring output limits allows you to linearize a model around an operating point even if that operating point causes the PID Controller (2DOF) block to exceed the output limits.

### Settings

- On (Default)  
Simulink linearization commands ignore states corresponding to saturation.
- Off  
Simulink linearization commands do not ignore states corresponding to saturation.

# Discrete PID Controller (2 DOF)

---

## Enable tracking mode

(Available for any controller with integral action.) Activate signal tracking, which lets the output of the PID Controller (2DOF) block follow a tracking signal. Provide the tracking signal to the block at the TR port, which becomes active when you select **Enable tracking mode**.

When signal tracking is active, the difference between the tracked signal and the block output is fed back to the integrator input with a gain  $K_t$ . You can also specify the value of the **Tracking coefficient ( $K_t$ )**.

For information about using tracking mode to implement bumpless control transfer scenarios and multiloop controllers, see “Enable tracking mode” on page 1-1193 in the PID Controller reference page.

## Settings

- Off (Default)  
Disables signal tracking and removes TR block input.
- On  
Enables signal tracking and activates TR input.

## **Tracking gain (Kt)**

(Available only when you select **Enable tracking mode**.) Specify Kt, which is the gain of the signal tracking feedback loop.

**Default:** 1

# Discrete PID Controller (2 DOF)

---

## Parameter data type

Select the data type of the gain parameters **P**, **I**, **D**, **N**, **Kb**, and **Kt** and the setpoint weighting parameters **b** and **c**.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Settings

Inherit: `Inherit via internal rule` (Default)

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use the simple choice of `Inherit: Same as input`.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.
- To specify your own inheritance rule, use `Inherit: Inherit via back propagation` and then use a Data Type Propagation block. Examples of how to use this block are available in the Signal Attributes library Data Type Propagation Examples block.

`Inherit: Inherit via back propagation`  
Use data type of the driving block.

`Inherit: Same as input`  
Use data type of input signal.

`double`

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2<sup>0</sup>,0)

<data type expression>

Name of a data type object. For example, Simulink.NumericType.

# Discrete PID Controller (2 DOF)

---

## Product output data type

Select the product output data type of the gain parameters **P**, **I**, **D**, **N**, **Kb**, and **Kt** and the setpoint weighting parameters **b** and **c**.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Settings

Inherit: `Inherit via internal rule` (Default)

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use the simple choice of `Inherit: Same as input`.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.
- To specify your own inheritance rule, use `Inherit: Inherit via back propagation` and then use a Data Type Propagation block. Examples of how to use this block are available in the Signal Attributes library Data Type Propagation Examples block.

`Inherit: Inherit via back propagation`  
Use data type of the driving block.

`Inherit: Same as input`  
Use data type of input signal.

`double`

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2<sup>0</sup>,0)

<data type expression>

Name of a data type object. For example, Simulink.NumericType.

# Discrete PID Controller (2 DOF)

---

## Summation output data type

Select the summation output data type of the sums **Sum**, **Sum1**, **Sum2**, **Sum3**, **Sum D**, **Sum I1**, **SumI2**, and **SumI3**, which are sums computed internally within the block. To see where Simulink computes each of these sums, right-click the PID Controller (2DOF) block in your model and select **Look Under Mask**:

- **Sum** is the weighted sum of the proportional, derivative, and integral signals.
- **Sum1** is the difference between the reference input weighted by **b** and the measured system response.
- **Sum2** is the difference between the reference input weighted by **c** and the measured system response.
- **Sum3** is the difference between the unweighted reference input and the measured system response.
- **SumD** is the sum in the derivative filter feedback loop.
- **SumI1** is the sum of the block input signal (weighted by the integral gain **I**) and **SumI2**. **SumI1** is computed only when **Limit output** and **Anti-windup method** back-calculation are active.
- **SumI2** is the difference between the weighted sum **Sum** and the limited block output. **SumI2** is computed only when **Limit output** and **Anti-windup method** back-calculation are active.
- **SumI3** is the difference between the block output and the signal at the block's tracking input. **SumI3** is computed only when you select the **Enable tracking mode** box.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Settings

Inherit: Inherit via internal rule (Default)

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account

the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use the simple choice of `Inherit: Same as first input`.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.

---

**Note** The accumulator internal rule favors greater numerical accuracy, possibly at the cost of less efficient generated code. To get the same accuracy for the output, set the output data type to `Inherit: Same as accumulator`.

---

`Inherit: Inherit via back propagation`  
Use data type of the driving block.

`Inherit: Same as first input`  
Use data type of first input signal.

`Inherit: Same as accumulator`  
Use the same data type as the corresponding accumulator.

# Discrete PID Controller (2 DOF)

---

double

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2<sup>0</sup>,0)

<data type expression>

Name of a data type object. For example, Simulink.NumericType.

## Accumulator data type

Specify the accumulator data type.

### Settings

**Default:** Inherit: Inherit via internal rule

Inherit: Inherit via internal rule

Use internal rule to determine accumulator data type.

Inherit: Same as first input

Use data type of first input signal.

double

Accumulator data type is double.

single

Accumulator data type is single.

int8

Accumulator data type is int8.

uint8

Accumulator data type is uint8.

int16

Accumulator data type is int16.

uint16

Accumulator data type is uint16.

int32

Accumulator data type is int32.

uint32

Accumulator data type is uint32.

fixdt(1,16,0)

Accumulator data type is fixed point fixdt(1,16,0).

fixdt(1,16,2<sup>0</sup>,0)

Accumulator data type is fixed point fixdt(1,16,2<sup>0</sup>,0).

# Discrete PID Controller (2 DOF)

---

<data type expression>

The name of a data type object, for example

Simulink.NumericType

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

For more information, see “Specify Data Types Using Data Type Assistant”.

## Integrator output data type

Select the data type of the integrator output.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

### Settings

**Inherit:** Inherit via internal rule (Default)

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use **Inherit:** Inherit via back propagation.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.

**Inherit:** Inherit via back propagation

Use data type of the driving block.

# Discrete PID Controller (2 DOF)

---

double

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2<sup>0</sup>,0)

<data type expression>

Name of a data type object. For example, Simulink.NumericType.

## Filter output data type

Select the data type of the filter output.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

## Settings

**Inherit:** Inherit via internal rule (Default)

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use **Inherit:** Inherit via back propagation.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.

**Inherit:** Inherit via back propagation

Use data type of the driving block.

# Discrete PID Controller (2 DOF)

---

double

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2<sup>0</sup>,0)

<data type expression>

Name of a data type object. For example, Simulink.NumericType.

## Saturation output data type

Select the saturation output data type.

See “Data Types Supported by Simulink” in the Simulink documentation for more information.

### Settings

Inherit: Same as input (Default)

Use data type of input signal.

Inherit: Inherit via back propagation

Use data type of the driving block.

double

single

int8

uint8

int16

uint16

int32

uint32

fixdt(1,16)

fixdt(1,16,0)

fixdt(1,16,2<sup>0</sup>,0)

<data type expression>

Name of a data type object. For example, Simulink.NumericType.

# Discrete PID Controller (2 DOF)

---

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Inherit

### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit via internal rule (default)
- Inherit via back propagation
- Same as first input
- Same as accumulator

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

### Fixed point

Fixed-point data types.

## Expression

Expressions that evaluate to data types. Selecting Expression enables a second menu/text box to the right, where you can enter the expression.

## Dependency

Clicking the **Show data type assistant** button enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## See Also

See “Specify Data Types Using Data Type Assistant”.

# Discrete PID Controller (2 DOF)

---

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Inherit

### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit via back propagation
- Same as input (default)

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

### Fixed point

Fixed-point data types.

### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

**Dependency**

Clicking the **Show data type assistant** button enables this parameter.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**See Also**

See “Specify Data Types Using Data Type Assistant”.

# Discrete PID Controller (2 DOF)

---

## Mode

Select the category of accumulator data to specify

## Settings

**Default:** Inherit

### Inherit

Specifies inheritance rules for data types. Selecting **Inherit** enables a list of possible values:

- Inherit via internal rule (default)
- Same as first input

### Built in

Specifies built-in data types. Selecting **Built in** enables a list of possible values:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

### Fixed point

Specifies fixed-point data types.

### Expression

Specifies expressions that evaluate to data types. Selecting **Expression** enables you to enter an expression.

## Dependency

Clicking the **Show data type assistant** button for the accumulator data type enables this parameter.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**See Also**

See “Specify Data Types Using Data Type Assistant”.

# Discrete PID Controller (2 DOF)

---

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is Built in or Fixed point.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > Fixed point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Discrete PID Controller (2 DOF)

---

## **Signedness**

Specify whether you want the fixed-point data to be signed or unsigned.

## **Settings**

**Default:** Signed

Signed

Specify the fixed-point data to be signed.

Unsigned

Specify the fixed-point data to be unsigned.

## **Dependencies**

Selecting **Mode** > Fixed point for the accumulator data type enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Best precision, Binary point, Integer

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values. This option appears for some blocks.

Integer

Specify integer. This setting has the same result as specifying a binary point location and setting fraction length to 0. This option appears for some blocks.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Discrete PID Controller (2 DOF)

---

## **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Binary point

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

### Dependencies

Selecting **Mode** > Fixed point for the accumulator data type enables this parameter.

Selecting Binary point enables:

- **Fraction length**

Selecting Slope and bias enables:

- **Slope**
- **Bias**

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### See Also

See “Specifying a Fixed-Point Data Type” for more information.

# Discrete PID Controller (2 DOF)

---

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Word length**

Specify the bit size of the word that will hold the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

Large word sizes represent large values with greater precision than small word sizes.

### **Dependencies**

Selecting **Mode** > **Fixed** point for the accumulator data type enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

# Discrete PID Controller (2 DOF)

---

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point for the accumulator data type enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

# Discrete PID Controller (2 DOF)

---

## **Slope**

Specify slope for the fixed-point data type.

## **Settings**

**Default:**  $2^0$

Specify any positive real number.

## **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

## **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Slope**

Specify slope for the fixed-point data type.

### **Settings**

**Default:**  $2^0$

Specify any positive real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** for the accumulator data type enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

# Discrete PID Controller (2 DOF)

---

## **Bias**

Specify bias for the fixed-point data type.

## **Settings**

**Default:** 0

Specify any real number.

## **Dependencies**

Selecting **Scaling** > Slope and bias enables this parameter.

## **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Bias**

Specify bias for the fixed-point data type.

## **Settings**

**Default:** 0

Specify any real number.

## **Dependencies**

Selecting **Scaling** > Slope and bias for the accumulator data type enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

# Discrete PID Controller (2 DOF)

---

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off

On

Locks the output data type setting for this block.

Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

## Saturate on integer overflow

Specify whether overflows saturate.

### Settings

Default: Off

On

Overflows saturate to either the minimum or maximum value that the data type can represent.

For example, an overflow associated with a signed 8-bit integer can saturate to -128 or 127.

Off

Overflows wrap to the appropriate value that is representable by the data type.

For example, the number 130 does not fit in a signed 8-bit integer and wraps to -126.

### Tips

- Consider selecting this check box when your model has possible overflow and you want explicit saturation protection in the generated code.
- Consider clearing this check box when you want to optimize efficiency of your generated code.

Clearing this check box also helps you avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.

- When you select this check box, saturation applies to every internal operation on the block, not just the output or result.
- In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

# Discrete PID Controller (2 DOF)

---

## Command-Line Information

**Parameter:** SaturateOnIntegerOverflow

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## Integer rounding mode

Specify the rounding mode for fixed-point operations.

### Settings

**Default:** Floor

#### Ceiling

Rounds both positive and negative numbers toward positive infinity. Equivalent to the MATLAB `ceil` function.

#### Convergent

Rounds number to the nearest representable value. If a tie occurs, rounds to the nearest even integer. Equivalent to the Fixed-Point Designer `convergent` function.

#### Floor

Rounds both positive and negative numbers toward negative infinity. Equivalent to the MATLAB `floor` function.

#### Nearest

Rounds number to the nearest representable value. If a tie occurs, rounds toward positive infinity. Equivalent to the Fixed-Point Designer `nearest` function.

#### Round

Rounds number to the nearest representable value. If a tie occurs, rounds positive numbers toward positive infinity and rounds negative numbers toward negative infinity. Equivalent to the Fixed-Point Designer `round` function.

#### Simplest

Automatically chooses between round toward floor and round toward zero to generate rounding code that is as efficient as possible.

#### Zero

Rounds number toward zero. Equivalent to the MATLAB `fix` function.

## Command-Line Information

**Parameter:** `RndMeth`

# Discrete PID Controller (2 DOF)

---

**Type:** string

**Value:** 'Ceiling' | 'Convergent' | 'Floor' | 'Nearest' |  
'Round' | 'Simplest' | 'Zero'

**Default:** 'Floor'

## **See Also**

For more information, see “Rounding” in the Fixed-Point Designer documentation.

## State name

Assign unique name to each state. The state names apply only to the selected block.

To assign a name to a single state, enter the name between quotes; for example, 'velocity'.

To assign names to multiple states, enter a comma-delimited list surrounded by braces; for example, {'a', 'b', 'c'}. Each name must be unique. To assign state names with a variable that has been defined in the MATLAB workspace, enter the variable without quotes. The variable can be a string, cell, or structure.

## Settings

**Default:** ' ' (no name)

## State name must resolve to Simulink signal object

Require that state name resolve to Simulink signal object.

## Settings

**Default:** Off



On

Require that state name resolve to Simulink signal object.



Off

Do not require that state name resolve to Simulink signal object.

## Dependencies

**State name** enables this parameter.

Selecting this check box disables **Code generation storage class**.

## Command-Line Information

**Parameter:** StateMustResolveToSignalObject

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Discrete PID Controller (2 DOF)

---

## Code generation storage class

Select state storage class.

### Settings

**Default:** Auto

Auto

Auto is the appropriate storage class for states that you do not need to interface to external code.

ExportedGlobal

State is stored in a global variable

ImportedExtern

*model\_private.h* declares the state as an extern variable.

ImportedExternPointer

*model\_private.h* declares the state as an extern pointer.

### Dependencies

**State name** enables this parameter.

Setting this parameter to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables **Code generation storage type qualifier**.

### Command-Line Information

Command-Line Information

**Parameter:** StateStorageClass

**Type:** string

**Value:** 'Auto' | 'ExportedGlobal' | 'ImportedExtern' | 'ImportedExternPointer'

**Default:** 'Auto'

# Discrete PID Controller (2 DOF)

## Code generation storage type qualifier

Specify the Simulink Coder storage type qualifier.

### Settings

Default: ' '

If left blank, no qualifier is assigned.

### Dependency

Setting **Code generation storage class** to ExportedGlobal, ImportedExtern, or ImportedExternPointer enables this parameter.

### Command-Line Information

**Parameter:** RTWStateStorageTypeQualifier

**Type:** string

**Value:** ' '

**Default:** ' '

## Characteristics

Direct Feedthrough	The following ports support direct feedthrough: <ul style="list-style-type: none"><li>• Reset port</li><li>• Integrator and filter initial condition port</li><li>• Input port, for every integration method except Forward Euler</li></ul>
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Supported for gain parameters <b>P</b> , <b>I</b> , and <b>D</b> for filter coefficient <b>N</b> , and for setpoint weights <b>b</b> and <b>c</b>
States	Inherited from driving block and parameters

# Discrete PID Controller (2 DOF)

---

Dimensionalized	Yes
Zero-Crossing Detection	Yes (in continuous-time domain)

## See Also

PID Controller, Gain, Integrator, Discrete-Time Integrator, Derivative, Discrete Derivative.

## Purpose


Perform evaluation of polynomial coefficients on input values

## Library

Math Operations

## Description

You define a set of polynomial coefficients in the form that the MATLAB `polyval` command accepts. The block evaluates  $P(u)$  at each time step for the input  $u$ . The inputs and coefficients must be real.

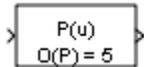


## Data Type Support

The Polynomial block accepts real signals of type `double` or `single`. The **Polynomial coefficients** parameter must be of the same type as the inputs. The output data type is the same as the input data type.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Polynomial

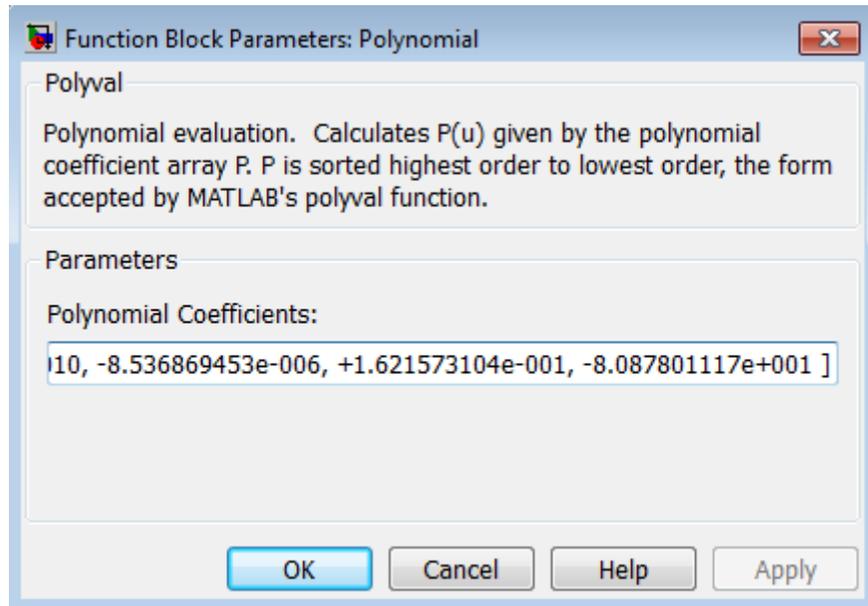

## Parameters and Dialog Box


### Polynomial coefficients

Specify polynomial coefficients in MATLAB polyval form. The first coefficient corresponds to  $x^N$  and the remaining coefficients correspond to decreasing orders of  $x$ . The last coefficient represents the constant for the polynomial. See polyval in the MATLAB documentation for more information.

## Examples

The `sldemo_boiler` model shows how to use the Polynomial block.

In the Boiler Plant model/digital thermometer subsystem, the Polynomial block models a first-order polynomial using the coefficients `[0.05 0.75]`:

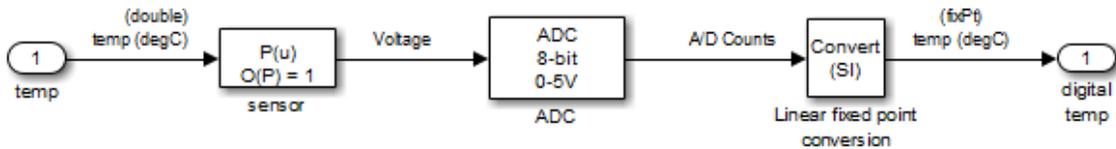

This subsystem models a digital thermometer composed of a simple temperature sensor and an ADC. The transfer function of the sensor is:  

$$V = .05 * T + 0.75$$
 for T in degrees C.

The conversion block inverts the combined transfer function of the sensor and ADC so that the output is an `sfixed(8)` code representing T in degrees C.

## Characteristics


Direct Feedthrough	Yes
Sample Time	Inherited from the driving block
Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	No
Zero-Crossing Detection	No

# Prelookup

**Purpose** Compute index and fraction for Interpolation Using Prelookup block

**Library** Lookup Tables

**Description** **How This Block Works with an Interpolation Using Prelookup Block**

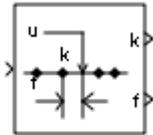

The Prelookup block works best with the Interpolation Using Prelookup block. The Prelookup block calculates the index and interval fraction that specify how its input value  $u$  relates to the breakpoint data set. You feed the resulting index and fraction values into an Interpolation Using Prelookup block to interpolate an  $n$ -dimensional table. These two blocks have distributed algorithms. When combined together, they perform the same operation as the integrated algorithm in the  $n$ -D Lookup Table block. However, the Prelookup and Interpolation Using Prelookup blocks offer greater flexibility that can provide more efficient simulation and code generation. For more information, see “Efficiency of Performance” in the *Simulink User’s Guide*.

## Supported Block Operations

To use the Prelookup block, you specify a set of breakpoint values directly on the dialog box or feed values into the `bp` input port. Typically, this breakpoint data set corresponds to one dimension of the table data in an Interpolation Using Prelookup block. The Prelookup block generates a pair of outputs for each input value  $u$  by calculating:

- The index of the breakpoint set element that is less than or equal to  $u$  and forms an interval containing  $u$
- The interval fraction in the range  $0 \leq f < 1$ , which represents the normalized position of  $u$  on the breakpoint interval between the index and the next index value for in-range input

For example, if the breakpoint data set is `[ 0 5 10 20 50 100 ]` and the input value  $u$  is 55, the index is 4 and the fractional value is 0.1. Labels for the index and interval fraction appear as `k` and `f` on the Prelookup block icon. The index value is zero-based.

The interval fraction can be negative or greater than 1 for out-of-range input. See the documentation for the **Extrapolation method** block parameter for more information.


## Data Type Support

The Prelookup block accepts real signals of any numeric data type that Simulink supports, except **Boolean**. The Prelookup block supports fixed-point data types for signals and breakpoint data.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Prelookup

## Parameters and Dialog Box

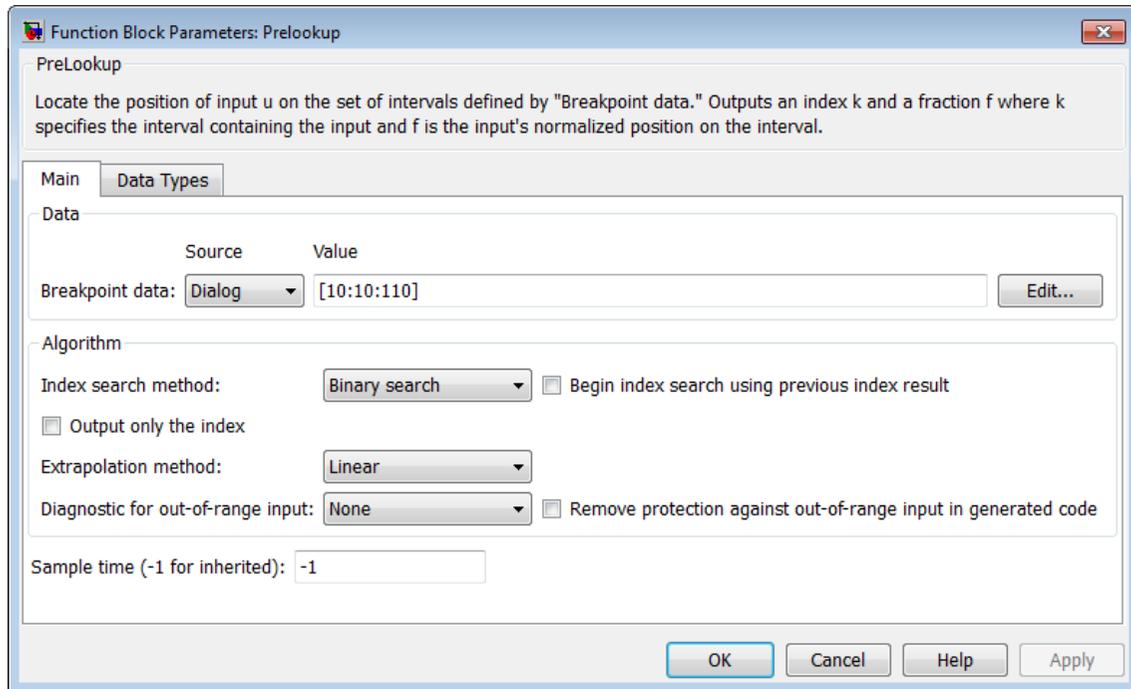

- “Main tab” on page 1-1332
- “Data Types tab” on page 1-1338

### Main tab

#### Breakpoint data

Specify whether to enter breakpoint data directly on the dialog box or to inherit the data from an input port.

- If you set **Source** to **Dialog**, enter breakpoint data in the edit field under **Value**. Each breakpoint data set must be a strictly monotonically increasing vector that contains two or more elements. For this option, you specify breakpoint attributes on the **Data Types** pane.
- If you set **Source** to **Input port**, verify that an upstream signal supplies breakpoint data to the bp input port. Each breakpoint data set must be a strictly monotonically increasing vector that contains two or more elements. For this option, your block inherits breakpoint attributes from the bp input port.

Click the **Edit** button to open the Lookup Table Editor (see “Edit Existing LookupTables” in the Simulink documentation).

---

**Tip** To learn how to define evenly spaced breakpoints, see “Formulation of Evenly Spaced Breakpoints” in the Simulink documentation.

---

## Index search method

Select **Evenly spaced points**, **Linear search**, or **Binary search**. Each search method has speed advantages in different situations:

- For evenly spaced breakpoint sets (for example, 10, 20, 30, and so on), you achieve optimal speed by selecting **Evenly spaced points** to calculate table indices.

This algorithm uses only the first two breakpoints of a set to determine the offset and spacing of the remaining points.

- For unevenly spaced breakpoint sets, follow these guidelines:
  - If input values for  $u$  do not vary much between time steps, selecting **Linear search** with **Begin index search using previous index result** produces the best performance.

# Prelookup

---

- If input values for  $u$  jump more than one or two table intervals per time step, selecting **Binary search** produces the best performance.

A suboptimal choice of index search method can lead to slow performance of models that rely heavily on lookup tables.

---

**Tip** The generated code stores only the first breakpoint, the spacing, and the number of breakpoints when:

- The breakpoint data is not tunable.
  - The index search method is **Evenly spaced points**.
- 

## **Begin index search using previous index result**

Select this check box when you want the block to start its search using the index found at the previous time step. For input values of  $u$  that change slowly with respect to the interval size, enabling this option can improve performance. Otherwise, the linear search and binary search methods can take longer, especially for large breakpoint sets.

## **Output only the index**

Select this check box when you want the block to output only the resulting index value, without the interval fraction.

Typical applications include:

- Feeding a **Direct Lookup Table (n-D)** block, with no interpolation on the interval
- Feeding selection ports of a subtable selection for an **Interpolation Using Prelookup** block
- Performing nonlinear quantizations

## Extrapolation method

Specify how to handle out-of-range values for the block input  $u$ .

Options include:

- Clip

Block Input	Block Outputs
Less than the first breakpoint	<ul style="list-style-type: none"> <li>• Index of the first breakpoint (for example, 0)</li> <li>– Interval fraction of 0</li> </ul>
Greater than the last breakpoint	<ul style="list-style-type: none"> <li>• Index of the next-to-last breakpoint</li> <li>– Interval fraction of 1</li> </ul>

Suppose the range is [1 2 3] and you select this option. If  $u$  is 0.5, the index is 0 and the interval fraction is 0. If  $u$  is 3.5, the index is 1 and the interval fraction is 1.

- Linear

Block Input	Block Outputs
Less than the first breakpoint	<ul style="list-style-type: none"> <li>• Index of the first breakpoint (for example, 0)</li> <li>– Interval fraction that represents the linear distance from <math>u</math> to the first breakpoint</li> </ul>
Greater than the last breakpoint	<ul style="list-style-type: none"> <li>• Index of the next-to-last breakpoint</li> <li>– Interval fraction that represents the linear distance from the next-to-last breakpoint to <math>u</math></li> </ul>

# Prelookup

---

Suppose the range is [1 2 3] and you select this option. If  $u$  is 0.5, the index is 0 and the interval fraction is -0.5. If  $u$  is 3.5, the index is 1 and the interval fraction is 1.5.

---

**Tip** The Prelookup block supports linear extrapolation only when all of these conditions apply:

- The input  $u$ , breakpoint data, and fraction output use floating-point data types.
  - The index uses a built-in integer data type.
- 

## Use last breakpoint for input at or above upper limit

Specify how to index input values of  $u$  that are greater than or equal to the last breakpoint. The index value is zero-based. When input equals the last breakpoint, block outputs differ as follows:

Check Box	Block Outputs
Selected	<ul style="list-style-type: none"><li>• Index of the last element in the breakpoint data set</li><li>• Interval fraction of 0</li></ul>
Cleared	<ul style="list-style-type: none"><li>• Index of the next-to-last breakpoint</li><li>• Interval fraction of 1</li></ul>

This check box is visible only when:

- **Output only the index** is cleared.
- **Extrapolation method** is Clip.

However, when **Output only the index** is selected and **Extrapolation method** is Clip, the block behaves as if this check box is selected even though it is invisible.

---

**Tip** When you select **Use last breakpoint for input at or above upper limit** for a Prelookup block, you must also select **Valid index input may reach last index** for the Interpolation Using Prelookup block to which it connects. This action allows the blocks to use the same indexing convention when accessing the last elements of their breakpoint and table data sets.

---

### Diagnostic for out-of-range input

Specify whether to produce a warning or error when the input  $u$  is out of range. Options include:

- None — no warning or error
- Warning — display a warning in the MATLAB Command Window and continue the simulation
- Error — halt the simulation and display an error in the Diagnostic Viewer

### Remove protection against out-of-range input in generated code

Specify whether or not to include code that checks for out-of-range breakpoint inputs.

Check Box	Result	When to Use
Selected	Generated code does not include conditional statements to check for out-of-range breakpoint inputs.	For code efficiency
Cleared	Generated code includes conditional statements to check for out-of-range breakpoint inputs.	For safety-critical applications

Depending on your application, you can run the following Model Advisor checks to verify the usage of this check box:

- **By Product > Embedded Coder > Identify lookup table blocks that generate expensive out-of-range checking code**
- **By Product > Simulink Verification and Validation > Modeling Standards > DO-178C/DO-331 Checks > Check usage of lookup table blocks**

For more information about the Model Advisor, see “Consult the Model Advisor” in the Simulink documentation.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink User’s Guide for more information.

### Data Types tab

---

**Note** The parameters for breakpoint attributes (data type, minimum, and maximum) are not available when you set **Source** to **Input port**. In this case, the block inherits all breakpoint attributes from the **bp** input port.

---

### Breakpoint > Data Type

Specify the breakpoint data type. You can set it to:

- A rule that inherits a data type, for example, **Inherit: Same as input**
- The name of a built-in data type, for example, **single**
- The name of a data type object, for example, a **Simulink.NumericType** object
- An expression that evaluates to a data type, for example, **fixdt(1,16,0)**

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the breakpoint data type.

See “Specify Data Types Using Data Type Assistant” in the *Simulink User’s Guide* for more information.

---

**Tip** Specify a breakpoint data type different from the data type of input *u* for these cases:

- Lower memory requirement for storing breakpoint data that uses a smaller type than the input signal *u*
  - Sharing of prescaled breakpoint data between two Prelookup blocks with different data types for input *u*
  - Sharing of custom storage breakpoint data in the generated code for blocks with different data types for input *u*
- 

### **Breakpoint > Minimum**

Specify the minimum value that the breakpoint data can have. The default value is [ ] (unspecified).

### **Breakpoint > Maximum**

Specify the maximum value that the breakpoint data can have. The default value is [ ] (unspecified).

### **Index > Data Type**

Specify a data type that can index all elements in the breakpoint data set. You can:

- Select a built-in integer data type from the list.
- Specify an integer data type using a fixed-point representation.

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the index data type.

See “Specify Data Types Using Data Type Assistant” in the *Simulink User’s Guide* for more information.

## **Fraction > Data Type**

Specify the data type of the interval fraction. You can:

- Select a built-in data type from the list.
- Specify data type inheritance through an internal rule.
- Specify a fixed-point data type using the [Slope Bias] or binary-point-only scaling representation.
  - If you use the [Slope Bias] representation, the scaling must be trivial — that is, the slope is 1 and the bias is 0.
  - If you use the binary-point-only representation, the fixed power-of-two exponent must be less than or equal to zero.

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the fraction data type.

See “Specify Data Types Using Data Type Assistant” in the *Simulink User’s Guide* for more information.

## **Lock output data type setting against changes by the fixed-point tools**

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.


## **Integer rounding mode**

Specify the rounding mode for fixed-point operations. For more information, see “Rounding” in the Simulink Fixed Point documentation.

Block parameters always round to the nearest representable value. To control the rounding of a block parameter, enter an expression using a MATLAB rounding function into the mask field.

## Examples

In the following model, a Constant block feeds the breakpoint data set to the bp input port of the Prelookup block.

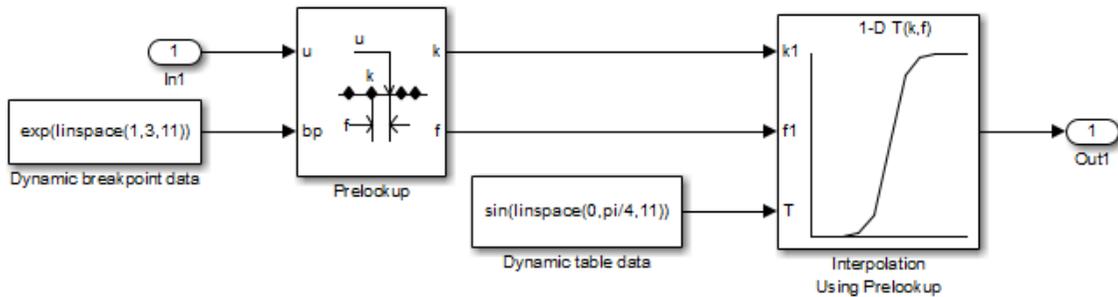

The Prelookup block inherits the following breakpoint attributes from the bp input port:

Breakpoint Attribute	Value
Minimum	-Inf
Maximum	Inf
Data type	single

Similarly, a Constant block feeds the table data values to the T input port of the Interpolation Using Prelookup block, which inherits the following table attributes:

# Prelookup

---

Table Attribute	Value
Minimum	-Inf
Maximum	Inf
Data type	single

Simulink uses double-precision, floating-point data to perform the computations in this model. However, the model stores the breakpoint and table data as single-precision, floating-point data. Using a lower-precision data type to store breakpoint and table data reduces the memory requirement.

For other examples, see “Prelookup and Interpolation Blocks” in the Simulink documentation.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Dimensionalized	Yes
Zero-Crossing Detection	No


## See Also

Interpolation Using Prelookup

**Purpose** Output signal attributes, including width, dimensionality, sample time, and complex signal flag

**Library** Signal Attributes

## Description

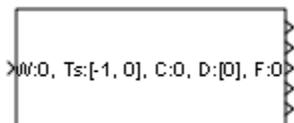

The Probe block outputs selected information about the signal on its input. The block can output the input signal's width, dimensionality, sample time, and a flag indicating whether the input is a complex-valued signal. The block has one input port. The number of output ports depends on the information that you select for probing, that is, signal dimensionality, sample time, and/or complex signal flag. Each probed value is output as a separate signal on a separate output port. The block accepts real or complex-valued signals of any built-in data type. It outputs signals of type `double`. During simulation, the block icon displays the probed data.

## Data Type Support

The Probe block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated (input only)
- Bus object

# Probe


---

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

You can use an array of buses as an input signal to a Probe block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

## Parameters and Dialog Box

The **Main** pane of the Probe block dialog box appears as follows:

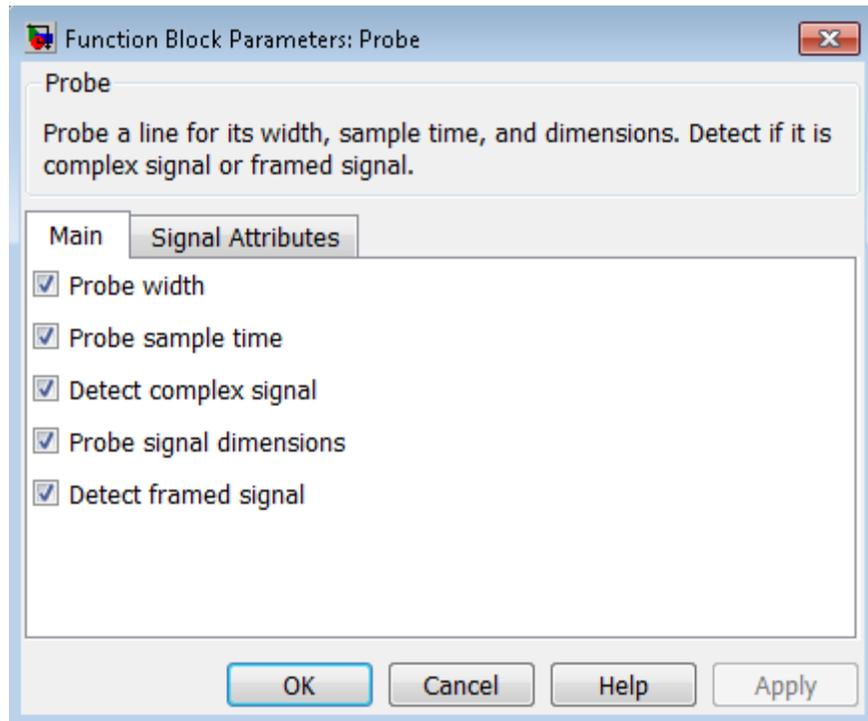

### Probe width

Select to output the width, or number of elements, of the probed signal.

**Probe sample time**

Select to output the sample time of the probed signal. The output is a two-element vector that specifies the period and offset of the sample time, respectively. See “Specify Sample Time” for more information.

**Detect complex signal**

Select to output 1 if the probed signal is complex; otherwise, 0.

**Probe signal dimensions**

Select to output the dimensions of the probed signal.


**Detect framed signal**

Select to output 1 if the probed signal is framed; otherwise, 0.

The **Signal Attributes** pane of the Probe block dialog box appears as follows:

# Probe

---

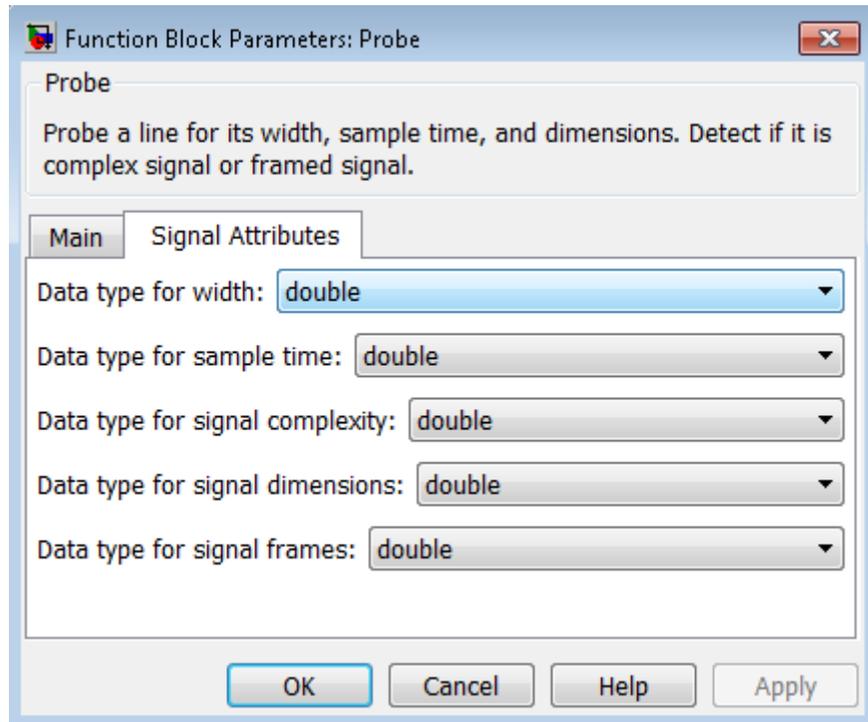

---

**Note** The Probe block ignores the **Data type override** setting of the Fixed-Point Tool.

---

### **Data type for width**

Select the output data type for the width information.

### **Data type for sample time**

Select the output data type for the sample time information.

### **Data type for signal complexity**

Select the output data type for the complexity information.

## Data type for signal dimensions

Select the output data type for the dimensions information.

## Data type for signal frames

Select the output data type for the frames information.

---


**Note** For **Data type for width**, **Data type for sample time**, and **Data type for signal dimensions**, the Boolean data type is not supported. Furthermore, if you select Same as input in any of these drop-down lists, and the block's input signal data type is Boolean, when you simulate your model, you see an error.

---

## Examples

The `sldemo_fuelsys` model shows how you can use the Probe block.

In the `fuel_rate_control/validate_sample_time` subsystem, the Probe block determines the sample time of the input signal to verify that it matches the assumed value of the design:

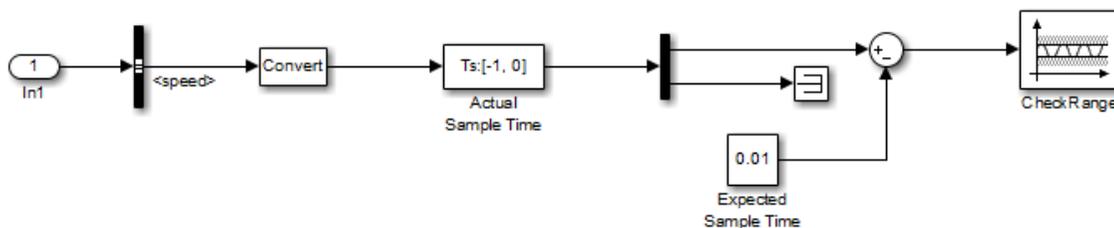

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block
Scalar Expansion	Yes
Dimensionalized	Yes

# Probe

---

Multidimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Multiply and divide scalars and nonscalars or multiply and invert matrices

**Library** Math Operations

**Description** **Default Product Block Use**



By default, the Product block outputs the result of multiplying two inputs: two scalars, a scalar and a nonscalar, or two nonscalars that have the same dimensions. The default parameter values that specify this behavior are:




- **Multiplication:** `Element-wise(.*)`
- **Number of inputs:** 2

Setting non-default values for either of these parameters can change a Product block to function as a Divide block or a Product of Elements block. See the documentation of those two blocks for more information.

If all you need is to multiply two inputs to create an output, you can use the Product block with default parameter values. If you need additional capabilities, see “Product Block Capabilities” on page 1-1350.

The following table shows the output of the Product block for example inputs using default block parameter values.

# Product

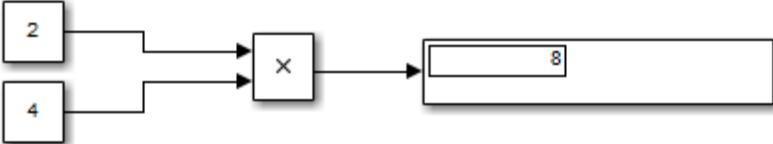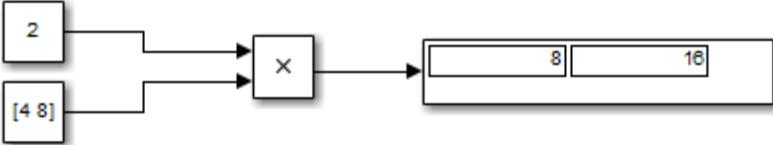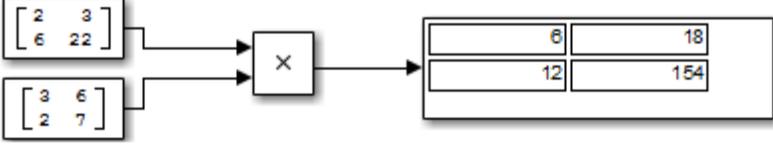Inputs and Behavior	Example
<p><b>Scalar X Scalar</b></p> <p>Output the product of the two inputs.</p>	
<p><b>Scalar X Nonscalar</b></p> <p>Output a nonscalar having the same dimensions as the input nonscalar. Each element of the output nonscalar is the product of the input scalar and the corresponding element of the input nonscalar.</p>	
<p><b>Nonscalar X Nonscalar</b></p> <p>Output a nonscalar having the same dimensions as the inputs. Each element of the output is the product of corresponding elements of the inputs.</p>	

## Product Block Capabilities

The Product block, the Divide block, and the Product of Elements block are actually the same underlying block with different default values for the **Number of inputs** parameter. All three blocks can therefore provide the same capabilities. The Product block (or the Divide block or Product of Elements block if appropriately configured) can:

- Numerically multiply and divide any number of scalar, vector, or matrix inputs

- Perform matrix multiplication and division on any number of matrix inputs

The Product block performs scalar or matrix multiplication, depending on the value of the **Multiplication** parameter. The block accepts one or more inputs, depending on the **Number of inputs** parameter. The **Number of inputs** parameter also specifies the operation to perform on each input.

The Product block can input any combination of scalars, vectors, and matrices for which the operation to perform has a mathematically defined result. The block performs the specified operations on the inputs, then outputs the result.

The Product block has two modes: *Element-wise mode*, which processes nonscalar inputs element by element, and *Matrix mode*, which processes nonscalar inputs as matrices. The next two sections describe these two modes.




### Element-wise Mode



When the value of the **Multiplication** parameter is `Element-wise (.*)`, the Product block is in *Element-wise mode*, in which it operates on the individual numeric elements of any nonscalar inputs. The MATLAB equivalent is the `.*` operator. In element-wise mode, the Product block can perform a variety of multiplication, division, and arithmetic inversion operations.

The value of the **Number of inputs** parameter controls both how many inputs exist and whether each is multiplied or divided to form the output. When the Product block in Element-wise mode has only one input, it is functionally equivalent to a Product of Elements block. When the block has multiple inputs, any nonscalar inputs must have identical dimensions, and the block outputs a nonscalar with those dimensions. To calculate the output, the block first expands any scalar input to a nonscalar that has the same dimensions as the nonscalar inputs.

This table shows the output of the Product block for example inputs, using the indicated values for the **Number of inputs** parameter.

# Product

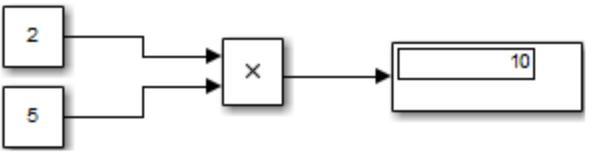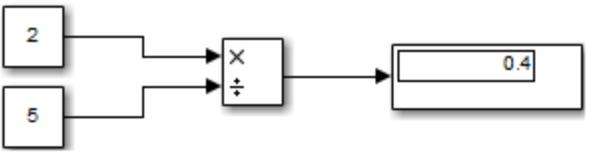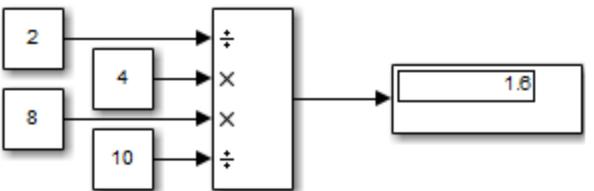Parameter Values	Examples
Number of inputs: 2	 <p>A diagram illustrating a multiplication operation. Two input boxes containing the numbers 2 and 5 are connected to a central block with a multiplication symbol (X). An arrow points from this block to an output box containing the number 10.</p>
Number of inputs: */	 <p>A diagram illustrating a division operation. Two input boxes containing the numbers 2 and 5 are connected to a central block with a division symbol (X over a horizontal line with a dot below). An arrow points from this block to an output box containing the number 0.4.</p>
Number of inputs: /**/	 <p>A diagram illustrating a complex operation. Four input boxes containing the numbers 2, 4, 8, and 10 are connected to a central block. The block contains a sequence of symbols: a division symbol (X over a horizontal line with a dot below), a multiplication symbol (X), another multiplication symbol (X), and a final division symbol (X over a horizontal line with a dot below). An arrow points from this block to an output box containing the number 1.8.</p>

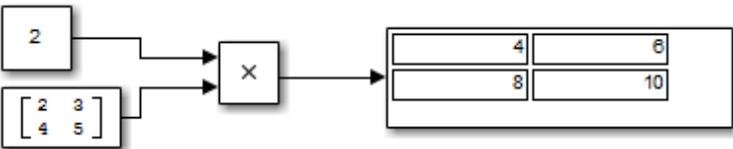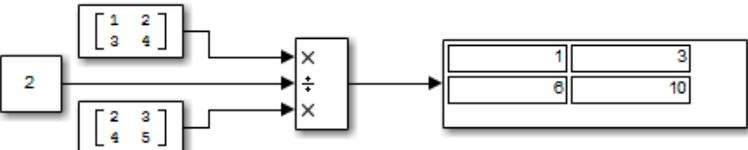Parameter Values	Examples
Number of inputs: **	
Number of inputs: */*	

### Matrix Mode

When the value of the **Multiplication** parameter is `Matrix(*)`, the Product block is in *Matrix mode*, in which it processes nonscalar inputs as matrices. The MATLAB equivalent is the `*` operator. In Matrix mode, the Product block can invert a single square matrix, or multiply and divide any number of matrices that have dimensions for which the result is mathematically defined.

The value of the **Number of inputs** parameter controls both how many inputs exist and whether each input matrix is multiplied or divided to form the output. The syntax of **Number of inputs** is the same as in Element-wise mode. The difference between the modes is in the type of multiplication and division that occur.

### Expected Differences Between Simulation and Code Generation

For element-wise operations on complex floating-point inputs, simulation and code generation results might differ in near-overflow cases. Although **complex numbers** is selected and **non-finite numbers** is not selected on the **Code Generation > Interface** pane

of the Configuration Parameters dialog box, the code generator does not emit special case code for intermediate overflows. This method improves the efficiency of embedded operations for the general case that does not include extreme values. If the inputs might include extreme values, please manage these cases explicitly.

The generated code might not produce the exact same pattern of NaN and inf values as simulation when these values are mathematically meaningless. For example, if the simulation output contains a NaN, output from the generated code also contains a NaN, but not necessarily in the same place.

## Data Type Support


The Product block accepts real or complex signals of any numeric data type that Simulink supports, including fixed-point data types. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

The Product block does not support numeric division for complex signals with `boolean` or fixed-point data types. For other types, the block accepts complex signals as divisors only when the input and output signals all specify the same built-in data type. In this case, however, the block ignores its specified rounding mode.

The Product block accepts multidimensional signals when operating in Element-wise mode, but not when operating in Matrix mode. See “Signal Dimensions”, “Element-wise Mode” on page 1-1351, and “Matrix Mode” on page 1-1353 for more information.

## Parameters and Dialog Box

The **Main** pane of the Product block dialog box appears as follows:

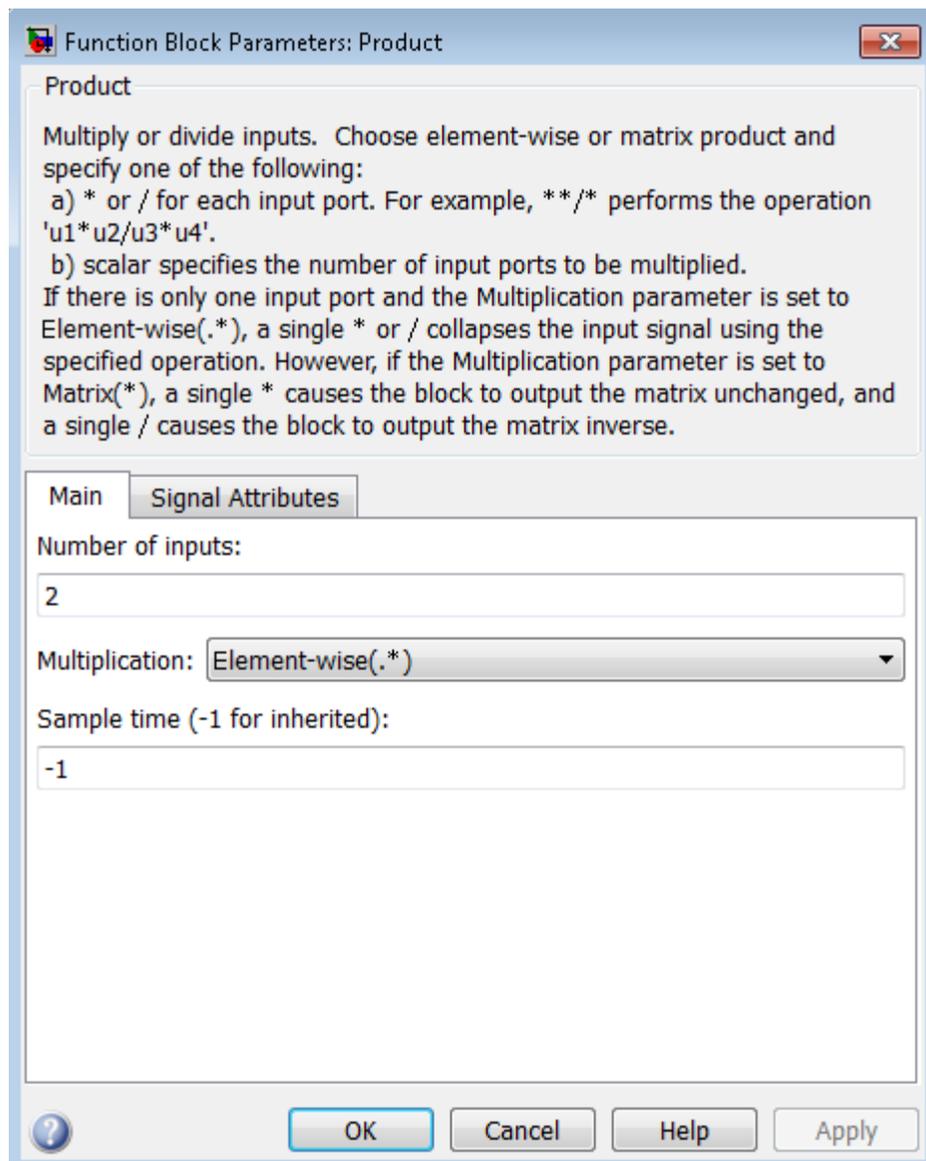


# Product

---

## **Signal Attributes Pane**

The **Signal Attributes** pane of the Product block dialog box appears as follows:

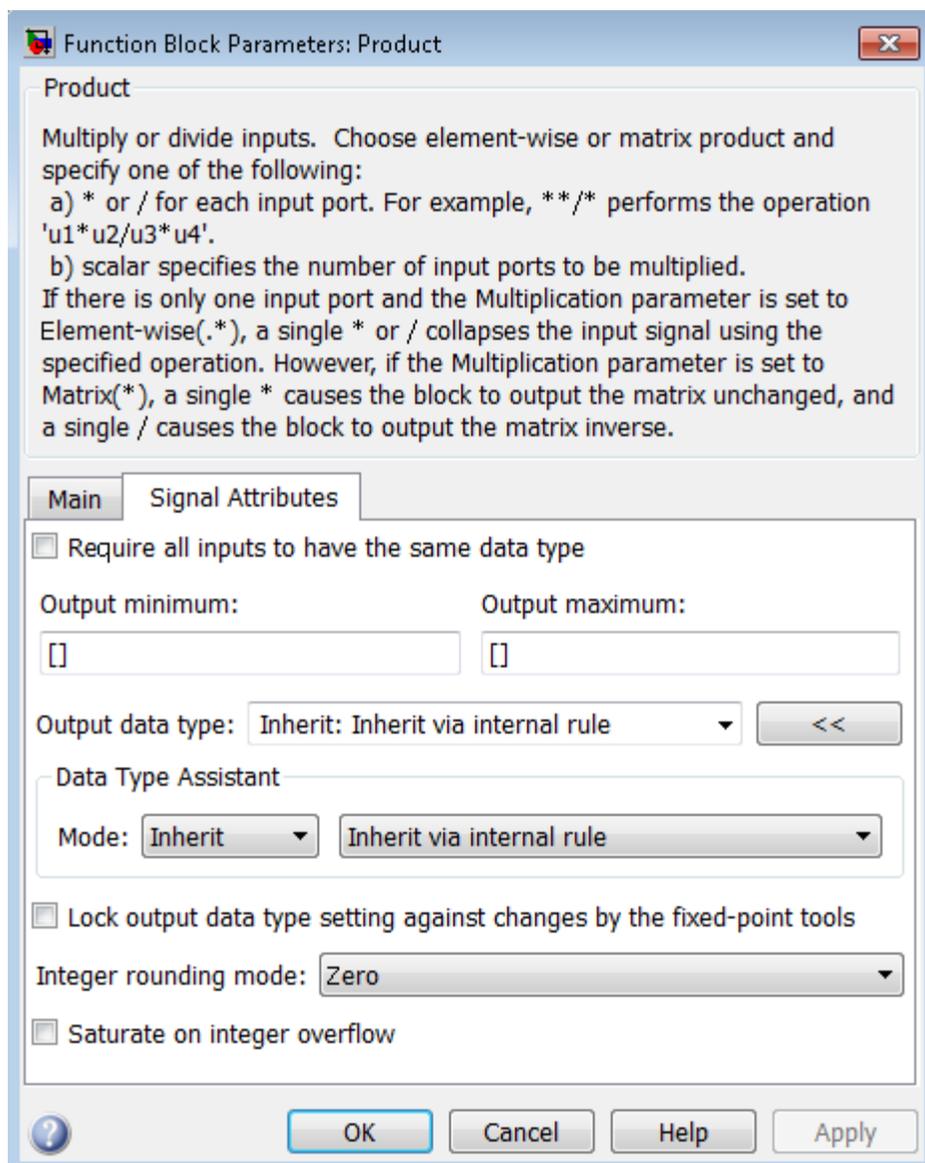

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

## Number of inputs

Control two properties of the Product block:

- The number of input ports on the block
- Whether each input is multiplied or divided into the output

## Settings

**Default:**2

- **1 or \* or /**

Has one input. In Element-wise mode, the input is processed as described for the Product of Elements block. In Matrix mode, if the parameter value is 1 or \* the block outputs the input value. If the value is / the input must be a square matrix (including a scalar as a degenerate case) and the block outputs the matrix inverse. See “Element-wise Mode” on page 1-1351 and “Matrix Mode” on page 1-1353 for more information.

- **An integer value > 1**

Has number of inputs given by the integer value. The inputs are multiplied together in Element-wise mode or Matrix mode, as specified by the **Multiplication** parameter. See “Element-wise Mode” on page 1-1351 and “Matrix Mode” on page 1-1353 for more information.

- **An unquoted string of two or more \* and / characters**

Has the number of inputs given by the length of the string. Each input that corresponds to a \* character is multiplied into the output. Each input that corresponds to a / character is divided into the output. The operations occur in Element-wise mode or Matrix mode, as specified by the **Multiplication** parameter. See “Element-wise Mode” on page 1-1351 and “Matrix Mode” on page 1-1353 for more information.

# Product

---

## **Dependency**

Setting **Number of inputs** to \* and selecting **Element-wise(.\*)** for **Multiplication** enable the following parameter:

- **Multiply over**

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Multiplication

Specify whether the Product block operates in Element-wise mode or Matrix mode.

### Settings

**Default:** Element-wise(.\*)

Element-wise(.\*)

Operate in Element-wise mode.

Matrix(\*)

Operate in Matrix mode.

### Dependency

Selecting Element-wise(.\*) and setting **Number of inputs** to \* enable the following parameter:

- **Multiply over**

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Multiply over**

Affect multiplication on matrix input.

### **Settings**

**Default:** All dimensions

All dimensions

Output a scalar that is product of all elements of the matrix, or the product of their inverses, depending on the value of **Number of inputs**.

Specified dimension

Output a vector, the composition of which depends on the value of the **Dimension** parameter.

### **Dependencies**

- Enable this parameter by selecting **Element-wise(.\*)** for **Multiplication** and setting **Number of inputs** to \* or 1 or /.
- Setting this parameter to **Specified dimension** enables the **Dimension** parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Dimension

Affect multiplication on matrix input.

### Settings

**Default:** 1

**Minimum:** 1

**Maximum:** 2

1

Output a vector that contains an element for each column of the input matrix.

2

Output a vector that contains an element for each row of the input matrix.

### Tips

Each element of the output vector contains the product of all elements in the corresponding column or row of the input matrix, or the product of the inverses of those elements, depending on the value of **Number of inputs**:

- 1 or \*

Multiply the values of the column or row elements

- /

Multiply the inverses of the column or row elements

### Dependency

Enable this parameter by selecting `Specified dimension` for **Multiply over**.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Sample time (-1 for inherited)**

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### **Settings**

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Require all inputs to have the same data type**

Require that all inputs have the same data type.

### **Settings**

**Default:** Off



On

Require that all inputs have the same data type.



Off

Do not require that all inputs have the same data type.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off



On

Locks the output data type setting for this block.



Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations.

### Settings

**Default:** Floor

#### Ceiling

Rounds both positive and negative numbers toward positive infinity. Equivalent to the MATLAB `ceil` function.

#### Convergent

Rounds number to the nearest representable value. If a tie occurs, rounds to the nearest even integer. Equivalent to the Fixed-Point Designer convergent function.

#### Floor

Rounds both positive and negative numbers toward negative infinity. Equivalent to the MATLAB `floor` function.

#### Nearest

Rounds number to the nearest representable value. If a tie occurs, rounds toward positive infinity. Equivalent to the Fixed-Point Designer nearest function.

#### Round

Rounds number to the nearest representable value. If a tie occurs, rounds positive numbers toward positive infinity and rounds negative numbers toward negative infinity. Equivalent to the Fixed-Point Designer round function.

#### Simplest

Automatically chooses between round toward floor and round toward zero to generate rounding code that is as efficient as possible.

#### Zero

Rounds number toward zero. Equivalent to the MATLAB `fix` function.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

For more information, see “Rounding”.

## Saturate on integer overflow

Specify whether overflows saturate.

### Settings

**Default:** Off

On

Overflows saturate to either the minimum or maximum value that the data type can represent.

For example, an overflow associated with a signed 8-bit integer can saturate to -128 or 127.

Off

Overflows wrap to the appropriate value that is representable by the data type.

For example, the number 130 does not fit in a signed 8-bit integer and wraps to -126.

### Tips

- Consider selecting this check box when your model has possible overflow and you want explicit saturation protection in the generated code.
- Consider clearing this check box when you want to optimize efficiency of your generated code.

Clearing this check box also helps you avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.

- When you select this check box, saturation applies to every internal operation on the block, not just the output or result.
- In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## **Command-Line Information**

**Parameter:** SaturateOnIntegerOverflow

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## Output minimum

Lower value of the output range that Simulink checks.

### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the minimum to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output minimum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

### Command-Line Information

**Parameter:** OutMin

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

## Output maximum

Upper value of the output range that Simulink checks.

### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the maximum value to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output maximum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

### Command-Line Information

**Parameter:** OutMax

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

## Output data type

Specify the output data type.

### Settings

**Default:** Inherit: Inherit via internal rule

**Inherit:** Inherit via internal rule

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use the simple choice of **Inherit: Same as first input**.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.
- To specify your own inheritance rule, use **Inherit: Inherit via back propagation** and then use a Data Type Propagation block. Examples of how to use this block are available in the Signal Attributes library Data Type Propagation Examples block.

**Inherit:** Inherit via back propagation  
Use data type of the driving block.

**Inherit:** Same as first input  
Use data type of the first input signal.

**double**  
Output data type is double.

**single**  
Output data type is single.

`int8`  
Output data type is `int8`.

`uint8`  
Output data type is `uint8`.

`int16`  
Output data type is `int16`.

`uint16`  
Output data type is `uint16`.

`int32`  
Output data type is `int32`.

`uint32`  
Output data type is `uint32`.

`fixdt(1,16,0)`  
Output data type is fixed point `fixdt(1,16,0)`.

`fixdt(1,16,2^0,0)`  
Output data type is fixed point `fixdt(1,16,2^0,0)`.

`<data type expression>`  
Use a data type object, for example, `Simulink.NumericType`.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

For more information, see “Specify Block Output Data Types”.

## **Mode**

Select the category of data to specify.

### **Settings**

**Default:** Inherit

#### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit via internal rule (default)
- Inherit via back propagation
- Same as first input

#### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

#### Fixed point

Fixed-point data types.

#### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

**Dependency**

Clicking the **Show data type assistant** button enables this parameter.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**See Also**

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is `Built in` or `Fixed point`.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Slope

Specify slope for the fixed-point data type.

### Settings

**Default:** 2<sup>0</sup>

Specify any positive real number.

### Dependencies

Selecting **Scaling** > Slope and bias enables this parameter.

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## Bias

Specify bias for the fixed-point data type.

### Settings

**Default:** 0

Specify any real number.

### Dependencies

Selecting **Scaling** > Slope and bias enables this parameter.

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Dimensionalized	Yes
Multidimensionalized	Yes, only when the <b>Multiplication</b> parameter specifies <code>Element-wise(.*)</code>
Zero-Crossing Detection	No

## See Also

- Divide
- Dot Product
- Product of Elements

# Product of Elements

---

**Purpose** Copy or invert one scalar input, or collapse one nonscalar input

**Library** Math Operations

**Description** The Product of Elements block inputs one scalar, vector, or matrix. You can use the block to:



- Copy a scalar input unchanged
- Invert a scalar input (divide 1 by it)
- Collapse a vector or matrix to a scalar by multiplying together all elements or taking successive inverses of the elements
- Collapse a matrix to a vector by multiplying together the elements of each row or column or taking successive inverses of the elements of each row or column

The Product of Elements block is functionally a Product block that has two preset parameter values:

- **Multiplication:** `Element-wise(.*)`
- **Number of inputs:** `*`

Setting non-default values for either of those parameters can change a Product of Elements block to be functionally equivalent to a Product block or a Divide block. See the documentation of those two blocks for more information.


**Algorithm** The Product of Elements block uses the following algorithms to perform element-wise operations on inputs of floating-point, built-in integer, and fixed-point types:

Input	Element-Wise Operation	Algorithm
Real scalar, $u$	Multiplication	$y = u$
	Division	$y = 1/u$

# Product of Elements

Input	Element-Wise Operation	Algorithm
Real vector or matrix, with elements $u_1, u_2, u_3, \dots, u_N$	Multiplication	$y = u_1 * u_2 * u_3 * \dots * u_N$
	Division	$y = (((1/u_1)/u_2)/u_3) \dots /u_N$
Complex scalar, $u$	Multiplication	$y = u$
	Division	$y = 1/u$
Complex vector or matrix, with elements $u_1, u_2, u_3, \dots, u_N$	Multiplication	$y = u_1 * u_2 * u_3 * \dots * u_N$
	Division	$y = (((1/u_1)/u_2)/u_3) \dots /u_N$

If the specified dimension for element-wise multiplication or division is a row or column of a matrix, the algorithm applies to that row or column. For example, consider the following model:

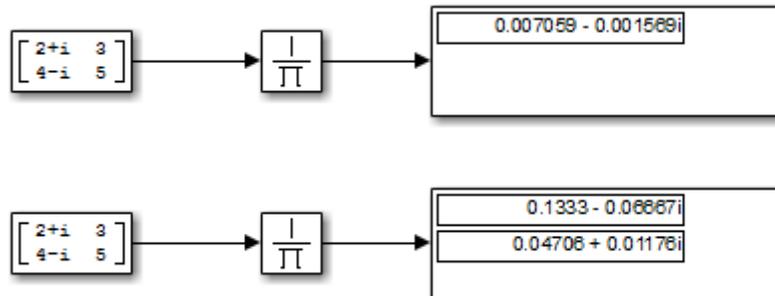

The top Product of Elements block collapses the matrix input to a scalar by taking successive inverses of the four elements:

- $y = (((1/2+i)/3)/4-i)/5$

# Product of Elements


---

The bottom Product of Elements block collapses the matrix input to a vector by taking successive inverses along the second dimension:

- $y(1) = ((1/2+i)/3)$
- $y(2) = ((1/4-i)/5)$

## Parameters and Dialog Box

The Product of Elements block has the same parameters and dialog box as the Product block, plus the parameter **Multiply over**, which has the default value All dimensions:

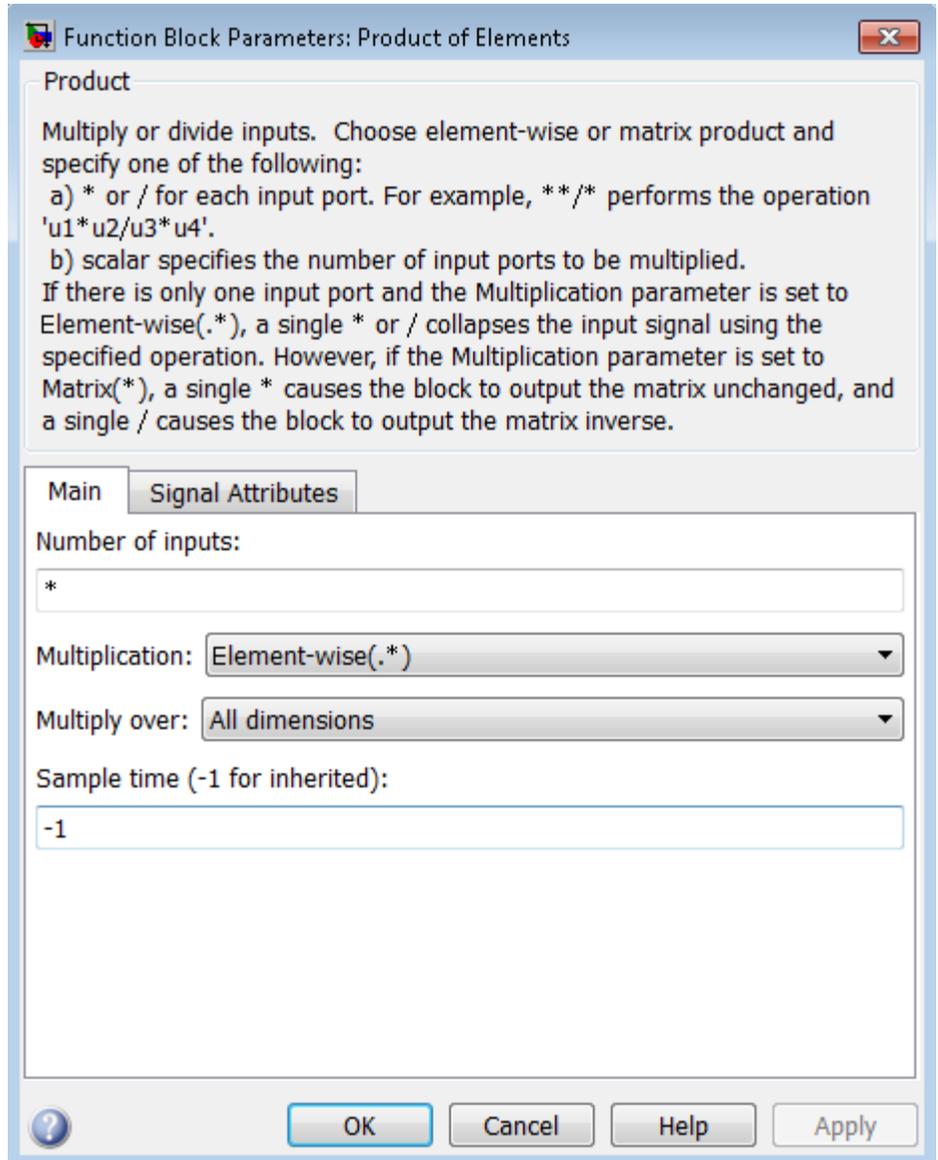


# Product of Elements

If you set **Multiply over** to Specified dimension, the **Dimension** parameter appears.

To copy, invert, or collapse one input to create an output, you can use the Product of Elements block with default values for all parameters except **Number of inputs**, **Multiply over**, and **Dimension**. These values can require change. For other capabilities, see the Product block documentation, which also describes the “Signal Attributes Pane” on page 1-1356 of the Product of Elements block.

## Number of inputs

This parameter is the same as in the Product block, but the value must be \* (the default), 1, or / to achieve the behavior of a Product of Elements block.

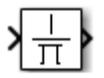Parameter Value	Block Behavior	Block Icon
* or 1	<ul style="list-style-type: none"><li>• Copies a scalar input unchanged</li><li>• Collapses a vector input to a scalar by multiplying all elements together</li><li>• Collapses a matrix input to a scalar or vector by multiplying elements together based on the <b>Multiply over</b> parameter</li></ul> <p>For more information, see “Algorithm” on page 1-1384.</p>	
/	<ul style="list-style-type: none"><li>• Outputs the arithmetic inverse of a scalar input</li><li>• Collapses a vector input to a scalar by taking successive inverses of the elements</li><li>• Collapses a matrix input to a scalar or vector by taking successive inverses of elements based on the <b>Multiply over</b> parameter</li></ul> <p>For more information, see “Algorithm” on page 1-1384.</p>	

## Multiply over

This parameter appears only when **Multiplication** is **Element-wise (.\*)** and **Number of inputs** is **\***, **1**, or **/**. The parameter affects only a matrix input. The possible values are:

- **All dimensions** — The block outputs a scalar that is the product of all matrix elements, or the result of taking successive inverses of the elements, depending on the value of **Number of inputs**.
- **Specified dimension** — The block outputs a vector, in which the composition depends on the value of the **Dimension** parameter.

## Dimension

This parameter appears only when the **Multiply over** parameter appears and is set to **Specified dimension**. The parameter affects only a matrix input, and must be **1** for a scalar or vector input. The possible values are:

- **1** — Output a vector that contains an element for each column of the input matrix.
- **2** — Output a vector that contains an element for each row of the input matrix.

Each element of the output vector contains the product of all elements in the corresponding column or row of the input matrix, or the result of taking successive inverses of those elements. The output vector depends on the value of **Number of inputs**:

- **\* or 1**

Multiply the values of the column or row elements.

- **/**

Take successive inverses of the column or row elements. For more information, see “Algorithm” on page 1-1384.



# Product of Elements

## Examples

This table shows the output of the Product of Elements block for example inputs using default block parameter values, except as shown in the table.

Parameter Values	Examples
<b>Multiplication:</b> Element-wise(.*) <b>Number of inputs:</b> *	
<b>Multiplication:</b> Element-wise(./) <b>Number of inputs:</b> /	
<b>Multiplication:</b> Element-wise(.*) <b>Number of inputs:</b> *	
<b>Multiplication:</b> Element-wise(.*) <b>Number of inputs:</b> * <b>Multiply over:</b> All dimensions	

# Product of Elements

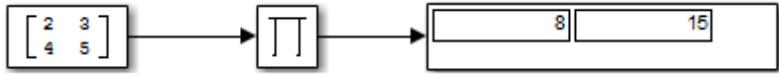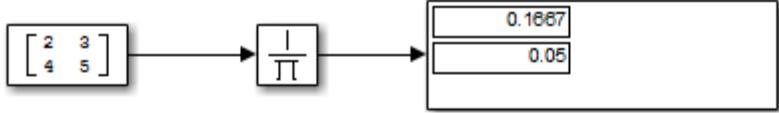Parameter Values	Examples
<p><b>Multiplication:</b> Element-wise (.*)</p> <p><b>Number of inputs:</b> *</p> <p><b>Multiply over:</b> Specified dimension</p> <p><b>Dimension:</b> 1</p>	 <p>The diagram illustrates element-wise multiplication of a 2x2 matrix by its elements. The input matrix is <math>\begin{bmatrix} 2 &amp; 3 \\ 4 &amp; 5 \end{bmatrix}</math>. This is followed by a multiplication operation symbol (two vertical bars). The resulting output matrix is <math>\begin{bmatrix} 8 &amp; 15 \\ 20 &amp; 25 \end{bmatrix}</math>.</p>
<p><b>Multiplication:</b> Element-wise (.*)</p> <p><b>Number of inputs:</b> /</p> <p><b>Multiply over:</b> Specified dimension</p> <p><b>Dimension:</b> 2</p>	 <p>The diagram illustrates element-wise multiplication of a 2x2 matrix by its inverse. The input matrix is <math>\begin{bmatrix} 2 &amp; 3 \\ 4 &amp; 5 \end{bmatrix}</math>. This is followed by a multiplication operation symbol with a vertical bar over it (representing the inverse). The resulting output matrix is <math>\begin{bmatrix} 0.1667 &amp; 0.05 \\ 0.125 &amp; 0.2 \end{bmatrix}</math>.</p>


# Pulse Generator

---

**Purpose** Generate square wave pulses at regular intervals

**Library** Sources

**Description** The Pulse Generator block generates square wave pulses at regular intervals. The block's waveform parameters, **Amplitude**, **Pulse Width**, **Period**, and **Phase delay**, determine the shape of the output waveform. The following diagram shows how each parameter affects the waveform.

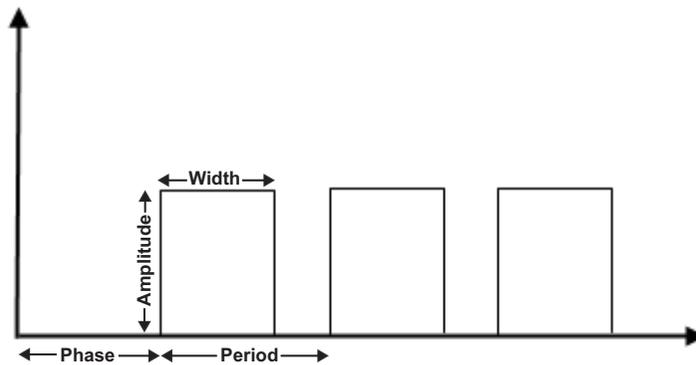

The Pulse Generator can emit scalar, vector, or matrix signals of any real data type. To cause the block to emit a scalar signal, use scalars to specify the waveform parameters. To cause the block to emit a vector or matrix signal, use vectors or matrices, respectively, to specify the waveform parameters. Each element of the waveform parameters affects the corresponding element of the output signal. For example, the first element of a vector amplitude parameter determines the amplitude of the first element of a vector output pulse. All the waveform parameters must have the same dimensions after scalar expansion. The data type of the output is the same as the data type of the **Amplitude** parameter.

Use the **Pulse type** parameter to specify whether the block's output is time-based or sample-based. If you select **sample-based**, the block

computes its outputs at fixed intervals that you specify. If you select **time-based**, Simulink software computes the block's outputs only at times when the output actually changes. This choice can result in fewer computations for computing the block's output over the simulation time period.

A time-based configuration using parameters **Pulse Width** and **Period** that results in a constant output signal is not supported. Simulink returns an error if these parameters satisfy either of the following conditions:

$$Period * \frac{PulseWidth}{100} = 0$$

$$Period * \frac{PulseWidth}{100} = Period$$

Depending on the pulse's waveform characteristics, the intervals between changes in the block's output can vary. For this reason, a time-based Pulse Generator block has a variable sample time. Simulink software uses brown as the sample time color of such blocks (see "View Sample Time Information" for more information).

Simulink software cannot use a fixed-step solver to compute the output of a time-based pulse generator. If you specify a fixed-step solver for models that contain time-based pulse generators, Simulink software computes a fixed sample time for the time-based pulse generators. Then the time-based pulse generators simulate as sample-based.

# Pulse Generator

---

---

**Tip** If you use a fixed-step solver and the **Pulse type** is time-based, you must choose the step size such that the period, phase delay, and pulse width (in seconds) are integer multiples of the step size. For example, suppose that the period is 4 seconds, the pulse width is 75% (i.e., 3 s), and the phase delay is 1 s. In this case, the computed sample time is 1 s. Therefore, you must choose a fixed-step size that is 1 or that divides 1 exactly (e.g., 0.25). You can guarantee this by setting the fixed-step solver's step size to auto on the **Solver** pane of the Configuration Parameters dialog box.


---

If you select time-based as the block's pulse type, you must specify the pulse's phase delay and period in units of seconds. If you specify sample-based, you must specify the block's sample time in seconds, using the **Sample time** parameter, then specify the block's phase delay and period as integer multiples of the sample time. For example, suppose that you specify a sample time of 0.5 second and want the pulse to repeat every two seconds. In this case, you would specify 4 as the value of the block's **Period** parameter.

## Data Type Support

The Pulse Generator block outputs real signals of any numeric data type that Simulink supports, including fixed-point data types. The data type of the output signal is the same as that of the **Amplitude** parameter.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

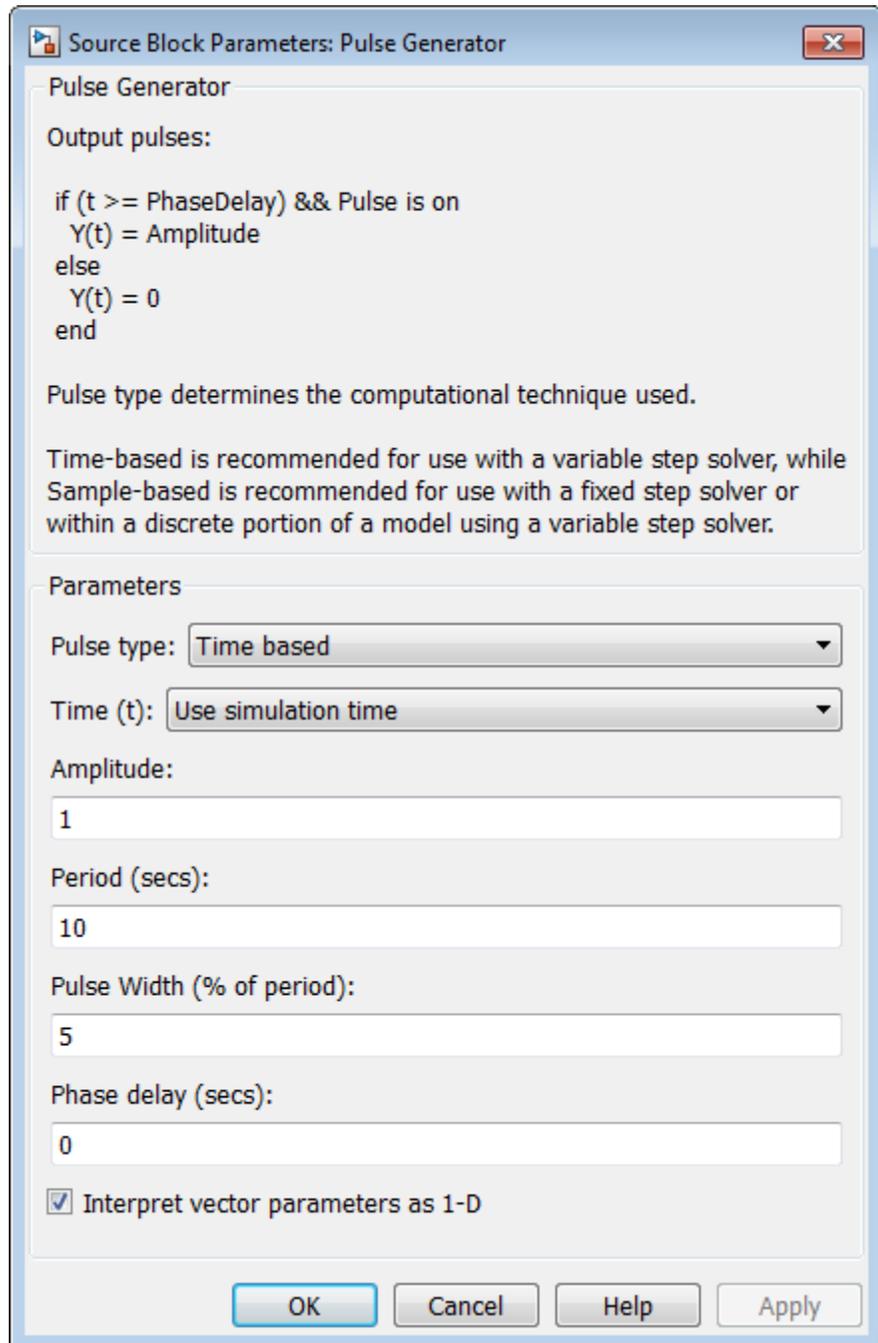

## Parameters and Dialog Box

### Pulse type

The pulse type for this block: time-based or sample-based. The default is time-based.

# Pulse Generator

---

- If you select `Use simulation time`, the block generates an output pulse where the time variable equals the simulation time.
- If you select `Use external signal`, the block generates an output pulse where the time variable equals the value from the input port, which can differ from the simulation time.

## **Amplitude**

The pulse amplitude. The default is 1.

## **Period**

The pulse period specified in seconds if the pulse type is time-based or as number of sample times if the pulse type is sample-based. The default is 10 seconds.

## **Pulse Width**

The duty cycle specified as the percentage of the pulse period that the signal is on if time-based or as number of sample times if sample-based. The default is 5 percent.

## **Phase delay**

The delay before the pulse is generated specified in seconds if the pulse type is time-based or as number of sample times if the pulse type is sample-based. The default is 0 seconds.

## **Sample time**

The length of the sample time for this block in seconds. This parameter appears only if the block's pulse type is sample-based. See "Specify Sample Time" in the Simulink User's Guide for more information.

## **Interpret vector parameters as 1-D**

If you select this check box and the other parameters are one-row or one-column matrices, after scalar expansion, the block outputs a 1-D signal (vector). Otherwise the output dimensionality is the same as that of the other parameters. See "Determining the Output Dimensions of Source Blocks" in the "Working with Signals" chapter of the Simulink User's Guide.

## Examples

The following Simulink examples show how to use the Pulse Generator block:

- `sldemo_auto_climatecontrol`
- `sldemo_boiler`

## Characteristics

Sample Time	Inherited
Scalar Expansion	Yes, of parameters
Dimensionalized	Yes
Zero-Crossing Detection	No

# Quantizer

---

**Purpose** Discretize input at specified interval

**Library** Discontinuities


**Description** The Quantizer block passes its input signal through a stair-step function so that many neighboring points on the input axis are mapped to one point on the output axis. The effect is to quantize a smooth signal into a stair-step output. The output is computed using the round-to-nearest method, which produces an output that is symmetric about zero.



$$y = q * \text{round}(u/q)$$

where  $y$  is the output,  $u$  the input, and  $q$  the **Quantization interval** parameter.

**Data Type Support** The Quantizer block accepts and outputs real or complex signals of type `single` or `double`. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

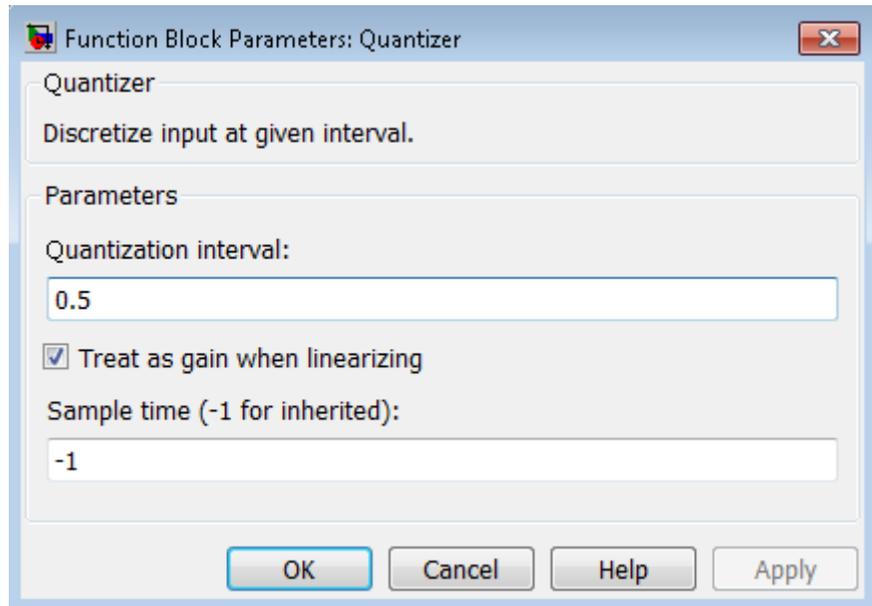

## Parameters and Dialog Box

### Quantization interval

The interval around which the output is quantized. Permissible output values for the Quantizer block are  $n \cdot q$ , where  $n$  is an integer and  $q$  the **Quantization interval**. The default is 0.5.

### Treat as gain when linearizing

Simulink software by default treats the Quantizer block as unity gain when linearizing. This setting corresponds to the large-signal linearization case. If you clear this check box, the linearization routines assume the small-signal case and set the gain to zero.

### Sample time (-1 for inherited)


Specify the sample time of this Output block. See “Specify Sample Time” in the online documentation for information on specifying sample times. The output of this block changes at the specified rate to reflect the value of its input.

# Quantizer

## Examples

The `sldemo_boiler` model shows how you can use the Quantizer block.

The Quantizer block appears in the Boiler Plant model/digital thermometer/ADC subsystem.

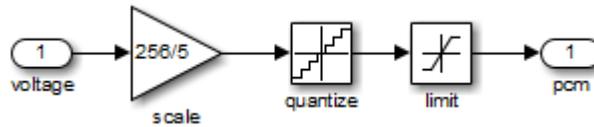

The ADC subsystem digitizes the input analog voltage by:

- Multiplying the analog voltage by 256/5 with the Gain block
- Rounding the value to integer floor with the Quantizer block
- Limiting the output to a maximum of 255 (the largest unsigned 8-bit integer value) with the Saturation block

For more information, see “Explore the Fixed-Point "Bang-Bang Control" Model” in the Stateflow documentation.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block
Scalar Expansion	Yes, of parameter
Dimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Generate constantly increasing or decreasing signal

**Library** Sources

**Description**




The Ramp block generates a signal that starts at a specified time and value and changes by a specified rate. The block's **Slope**, **Start time**, and **Initial output** parameters determine the characteristics of the output signal. All must have the same dimensions after scalar expansion.

**Data Type Support**

The Ramp block outputs signals of type `double`. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Ramp

## Parameters and Dialog Box

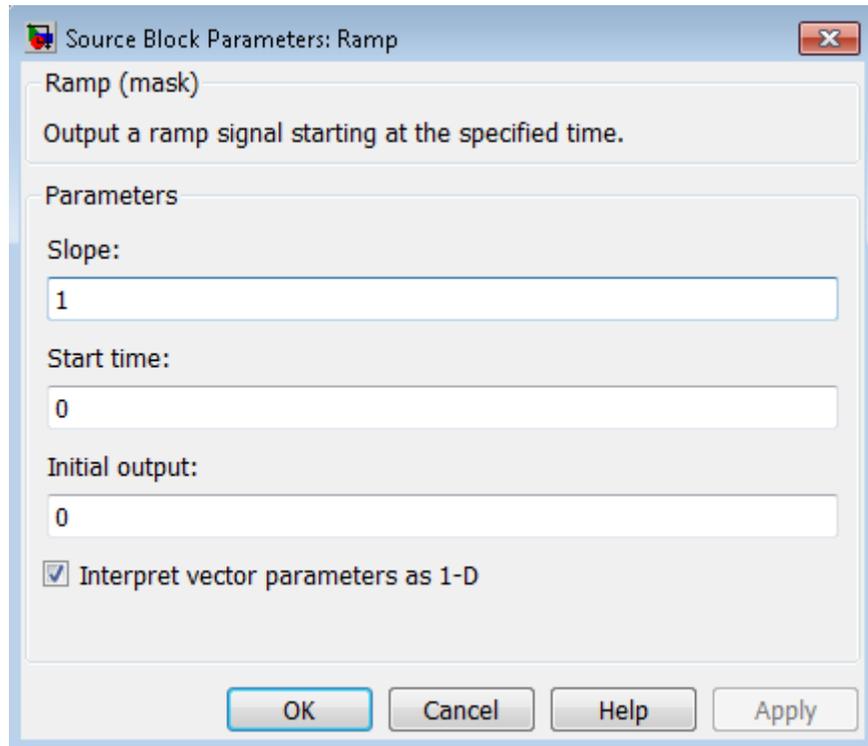

### Slope

Specify the rate of change of the generated signal. The default is 1.

### Start time

Specify the time at which the block begins generating the signal. The default is 0.

### Initial output

Specify the initial value of the output signal. The default is 0.

### Interpret vector parameters as 1-D

If you select this option and the other parameters are one-row or one-column matrices, after scalar expansion, the block outputs a 1-D signal (vector). Otherwise, the output dimensionality is

the same as that of the other parameters. See “Determining the Output Dimensions of Source Blocks” in the Simulink documentation.

## Examples

The following Simulink examples show how to use the Ramp block:

- `sldemo_VariableTransportDelay_pipe`

## Characteristics

Sample Time	Inherited from driven block
Scalar Expansion	Yes
Dimensionalized	Yes
Zero-Crossing Detection	Yes

# Random Number

---

**Purpose** Generate normally distributed random numbers

**Library** Sources

**Description** The Random Number block generates normally distributed random numbers. To generate uniformly distributed random numbers, use the Uniform Random Number block.




You can generate a repeatable sequence using any Random Number block with the same nonnegative seed and parameters. The seed resets to the specified value each time a simulation starts. By default, the block produces a sequence that has a mean of 0 and a variance of 1. To generate a vector of random numbers with the same mean and variance, specify the **Seed** parameter as a vector.

Avoid integrating a random signal, because solvers must integrate relatively smooth signals. Instead, use the Band-Limited White Noise block.

The numeric parameters of this block must have the same dimensions after scalar expansion. If you select the **Interpret vector parameters as 1-D** check box and the numeric parameters are row or column vectors after scalar expansion, the block outputs a 1-D signal. If you clear the **Interpret vector parameters as 1-D** check box, the block outputs a signal of the same dimensionality as the parameters.

**Data Type Support** The Random Number block outputs a real signal of type `double`. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

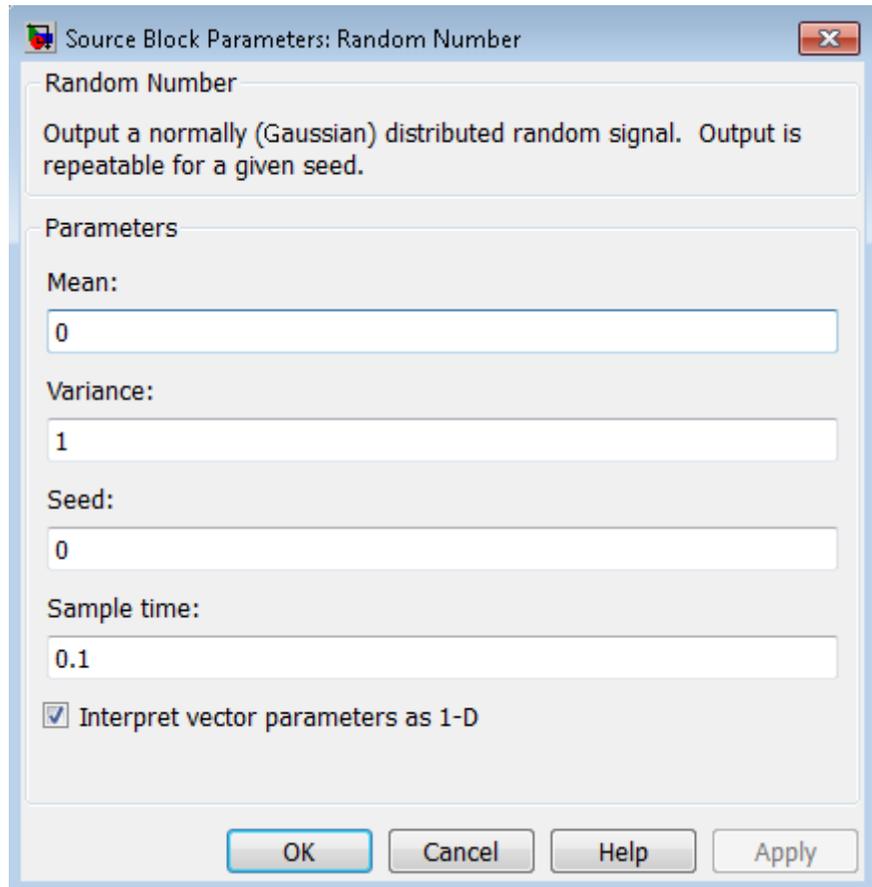

## Parameters and Dialog Box

### Mean

Specify the mean of the random numbers. The default is 0.

### Variance

Specify the variance of the random numbers. The default is 1.

### Seed

Specify the starting seed for the random number generator. The default is 0.

# Random Number

---

The seed must be 0 or a positive integer. Output is repeatable for a given seed.

## Sample time

Specify the time interval between samples. The default is 0.1, which matches the default sample time of the Band-Limited White Noise block. See “Specify Sample Time” in the Simulink documentation for more information.

## Interpret vector parameters as 1-D

If you select this check box and the other parameters are row or column vectors after scalar expansion, the block outputs a 1-D signal. Otherwise, the block outputs a signal of the same dimensionality as the other parameters. For more information, see “Determining the Output Dimensions of Source Blocks” in the Simulink documentation.

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of parameters
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No
Algorithm	mcg16807, multiplicative congruential generator

The generator algorithm is identical to the one used in MATLAB Version 4.0 by the `rand` and `randn` functions. For details on the mcg16807 algorithm, see “Choosing a Random Number Generator” in the MATLAB documentation.

To use other algorithms supported by MATLAB in a Simulink model, generate a stream of random numbers in MATLAB, and store the output as a `.mat` file. Use this `.mat` file as the random number input for your simulation. For more information, see “Creating and Controlling

a Random Number Stream”. To create multiple independent streams using MATLAB, see “Multiple streams”.

---

**Note** Using multiple seeds to generate multiple parallel independent streams for a generator algorithm is not recommended for the `mcg16807` algorithm. Instead, use the method described above.

---

**See Also** [Uniform Random Number](#)

# Rate Limiter

---

**Purpose** Limit rate of change of signal

**Library** Discontinuities

**Description** The Rate Limiter block limits the first derivative of the signal passing through it. The output changes no faster than the specified limit. The derivative is calculated using this equation:



$$rate = \frac{u(i) - y(i-1)}{t(i) - t(i-1)}$$

$u(i)$  and  $t(i)$  are the current block input and time, and  $y(i-1)$  and  $t(i-1)$  are the output and time at the previous step. The output is determined by comparing  $rate$  to the **Rising slew rate** and **Falling slew rate** parameters:

- If  $rate$  is greater than the **Rising slew rate** parameter ( $R$ ), the output is calculated as

$$y(i) = \Delta t \cdot R + y(i-1).$$

- If  $rate$  is less than the **Falling slew rate** parameter ( $F$ ), the output is calculated as

$$y(i) = \Delta t \cdot F + y(i-1).$$

- If  $rate$  is between the bounds of  $R$  and  $F$ , the change in output is equal to the change in input:

$$y(i) = u(i)$$

When the block is running in continuous mode (for example, **Sample time mode** is inherited and **Sample time** of the driving block is zero), the **Initial condition** is ignored. The block output at  $t = 0$  is equal to the initial input:

$$y(0) = u(0)$$

When the block is running in discrete mode (for example, **Sample time mode** is inherited and **Sample time** of the driving block is nonzero), the **Initial condition** is preserved:

$$y(-1) = I_c$$

where  $I_c$  is the initial condition. The block output at  $t = 0$  is calculated as if  $rate$  is outside the bounds of  $R$  and  $F$ . For  $t = 0$ ,  $rate$  is calculated as follows:

$$rate = \frac{u(0) - y(-1)}{sampletime}$$

---

**Note** You cannot use a Rate Limiter block inside a Triggered Subsystem. Use the Rate Limiter Dynamic block instead.

---


## Data Type Support

The Rate Limiter block accepts and outputs signals of any numeric data type that Simulink supports, except `Boolean`. The Rate Limiter block supports fixed-point data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Rate Limiter

---

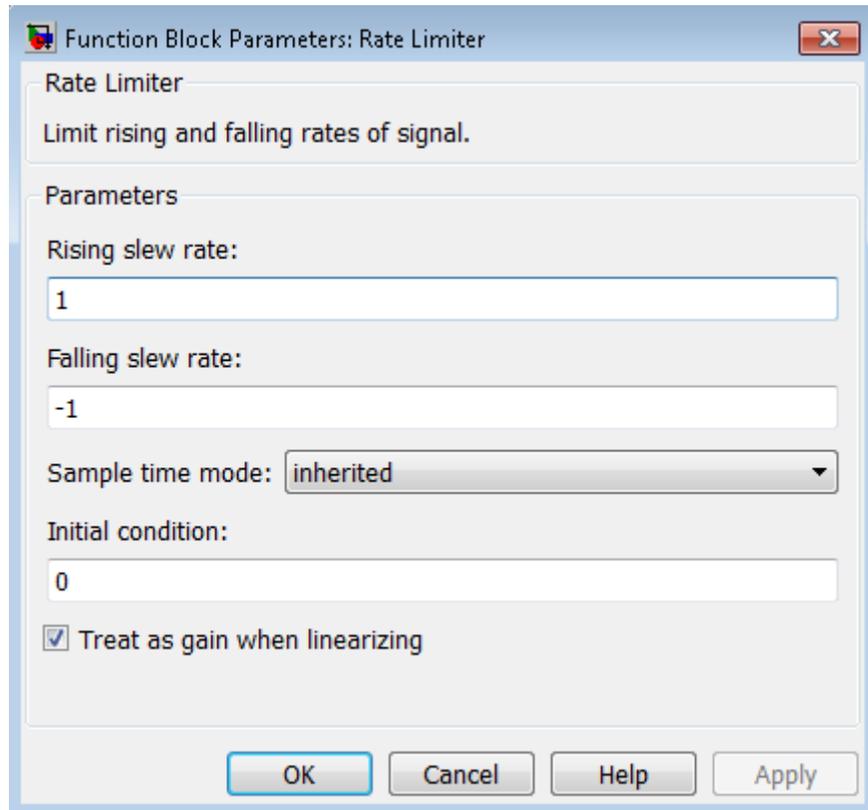

## Parameters and Dialog Box

### Rising slew rate

Specify the limit of the derivative of an increasing input signal. This parameter is tunable for fixed-point inputs.

### Falling slew rate

Specify the limit of the derivative of a decreasing input signal. This parameter is tunable for fixed-point inputs.

### Sample time mode

Specify the sample time mode, continuous or inherited from the driving block.

## Initial condition

Set the initial output of the simulation. Simulink software does not allow you to set the initial condition of this block to `inf` or `NaN`.

## Treat as gain when linearizing

Linearization commands in Simulink software treat this block as a gain in state space. Select this check box to cause the linearization commands to treat the gain as 1; otherwise, the commands treat the gain as 0.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Continuous or inherited (specified in the <b>Sample time mode</b> parameter)
Scalar Expansion	Yes, of input and parameters
Dimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Rate Limiter Dynamic


# Rate Limiter Dynamic

---

**Purpose** Limit rising and falling rates of signal

**Library** Discontinuities

## Description

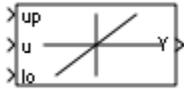

The Rate Limiter Dynamic block limits the rising and falling rates of the signal.

- The external signal `up` sets the upper limit on the rising rate of the signal.
- The external signal `lo` sets the lower limit on the falling rate of the signal.

Follow these guidelines when using the Rate Limiter Dynamic block:

- Ensure that the data types of `up` and `lo` are the same as the data type of the input signal `u`.

When the lower limit uses a signed type and the input signal uses an unsigned type, the output signal keeps increasing regardless of the input and the limits.

- Use a fixed-step solver to simulate models that contain this block.

Because the Rate Limiter Dynamic block does not support continuous sample time, simulation with a variable-step solver causes an error.

## Data Type Support


The Rate Limiter Dynamic block accepts input signals of the following data types:

- Floating point

- Built-in integer
- Fixed point

The data type of the output signal  $Y$  matches the data type of the input signal  $u$ .

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

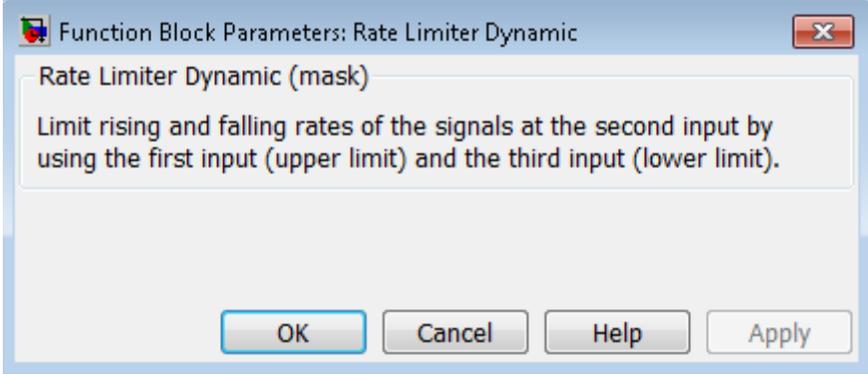

**Parameters and Dialog Box**

**Characteristics**

Direct Feedthrough	Yes
Scalar Expansion	Yes

**See Also**


Rate Limiter

# Rate Transition

**Purpose** Handle transfer of data between blocks operating at different rates

**Library** Signal Attributes

**Description** **Transition Handling Options**

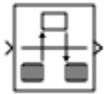

The Rate Transition block transfers data from the output of a block operating at one rate to the input of a block operating at a different rate. Use the block parameters to trade data integrity and deterministic transfer for faster response or lower memory requirements. To learn about data integrity and deterministic data transfer, see “Data Transfer Problems” in the Simulink Coder documentation.

Transition Handling Options	Block Parameter Settings
<ul style="list-style-type: none"><li>• Data integrity</li><li>• Deterministic data transfer</li><li>• Maximum latency</li></ul>	Select: <ul style="list-style-type: none"><li>• <b>Ensure data integrity during data transfer</b></li><li>• <b>Ensure deterministic data transfer</b></li></ul>
<ul style="list-style-type: none"><li>• Data integrity</li><li>• Nondeterministic data transfer</li><li>• Minimum latency</li><li>• Higher memory requirements</li></ul>	Select: <ul style="list-style-type: none"><li>• <b>Ensure data integrity during data transfer</b></li></ul> Clear: <ul style="list-style-type: none"><li>• <b>Ensure deterministic data transfer</b></li></ul>
<ul style="list-style-type: none"><li>• Potential loss of data integrity</li><li>• Nondeterministic data transfer</li><li>• Minimum latency</li><li>• Lower memory requirements</li></ul>	Clear: <ul style="list-style-type: none"><li>• <b>Ensure data integrity during data transfer</b></li><li>• <b>Ensure deterministic data transfer</b></li></ul>

## Dependencies

The behavior of the Rate Transition block depends on:

- Sample times of the ports to which the block connects (see “Effects of Synchronous Sample Times” on page 1-1416 and “Effects of Asynchronous Sample Times” on page 1-1418)
- Priorities of the tasks for the source and destination sample times (see “Sample time properties” in the Simulink documentation)
- Whether the model specifies a fixed- or variable-step solver (see “Solvers” in the Simulink documentation)


## Block Labels

When you update your diagram, a label appears on the Rate Transition block to indicate simulation behavior.

Label	Block Behavior
ZOH	Acts as a zero-order hold
1/z	Acts as a unit delay
Buf	Copies input to output under semaphore control
Db_buf	Copies input to output using double buffers
Copy	Unprotected copy of input to output
NoOp	Does nothing
Mixed	Expands to multiple blocks with different behaviors

# Rate Transition

The block behavior label shows the method that ensures safe transfer of data between tasks operating at different rates. You can use the sample-time colors feature (see “View Sample Time Information” in the Simulink documentation) to display the relative rates that the block bridges. Consider, for example, the following model:

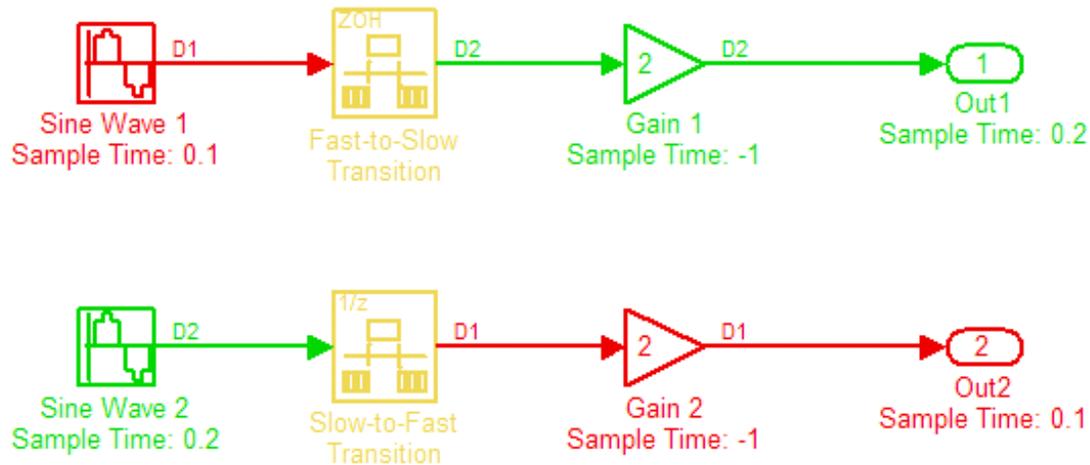

Sample-time colors and the block behavior label show that the Rate Transition block at the top of the diagram acts as a zero-order hold in a fast-to-slow transition and the bottom Rate Transition block acts as a unit delay in a slow-to-fast transition.

For more information, see “Handle Rate Transitions” in the Simulink Coder documentation.

## Effects of Synchronous Sample Times

The following table summarizes how each label appears if the sample times of the input and output ports ( $inTs$  and  $outTs$ ) are periodic, or synchronous.

Block Settings		Block Label		
Rate Transition	Conditions for Rate Transition Block	With Data Integrity and Determinism	With Only Data Integrity	Without Data Integrity or Determinism
inTs = outTs (Equal)	inTsOffset < outTsOffset	None (error)	Buf	Copy or NoOp (see note that follows the table)
	inTsOffset = outTsOffset	Copy or NoOp (see note that follows the table)	Copy or NoOp (see note that follows the table)	
	inTsOffset > outTsOffset	None (error)	Db_buf	
inTs < outTs (Fast to slow)	inTs = outTs / N inTsOffset, outTsOffset = 0	ZOH	Buf	
	inTs = outTs / N inTsOffset ≤ outTsOffset	None (error)		
	inTs = outTs / N inTsOffset > outTsOffset	None (error)	Db_buf	
	inTs ≠ outTs / N	None (error)		
inTs > outTs (Slow to fast)	inTs = outTs * N inTsOffset, outTsOffset = 0	1/z	Db_buf	
	inTs = outTs * N inTsOffset ≤ outTsOffset	None (error)		
	inTs = outTs * N inTsOffset > outTsOffset	None (error)		
	inTs ≠ outTs * N	None (error)		
	inTs ≠ outTs * N	None (error)		

**KEY**

# Rate Transition

Block Settings		Block Label		
Rate Transition	Conditions for Rate Transition Block	With Data Integrity and Determinism	With Only Data Integrity	Without Data Integrity or Determinism

- inTs, outTs: Sample times of input and output ports, respectively
- inTsOffset, outTsOffset: Sample time offsets of input and output ports, respectively
- N: Integer value > 1

When you select **Block reduction** in the **Optimization** pane of the Configuration Parameters dialog box, Copy reduces to NoOp. No code generation occurs for a Rate Transition block with a NoOp label. To prevent a block from being reduced when block reduction is on, add a test point to the block output (see “Test Points” in the Simulink documentation).

## Effects of Asynchronous Sample Times

The following table summarizes how each label appears if the sample time of the input or output port (inTs or outTs) is not periodic, or asynchronous.

Block Settings	Block Label		
	With Data Integrity and Determinism	With Only Data Integrity	Without Data Integrity or Determinism
inTs = outTs	Copy	Copy	Copy
inTs ≠ outTs	None (error)	Db_buf	

### KEY

- inTs, outTs: Sample times of input and output ports, respectively


## Data Type Support

The Rate Transition block accepts most signals that Simulink supports, including fixed-point and enumerated data types. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

However, do not use the Rate Transition block with frame-based signals. For rate transitions with such signals, use one of these blocks from the DSP System Toolbox instead:

- Buffer
- Unbuffer
- CIC Decimation
- CIC Interpolation
- FIR Decimation
- FIR Interpolation
- Downsample
- Upsample

# Rate Transition

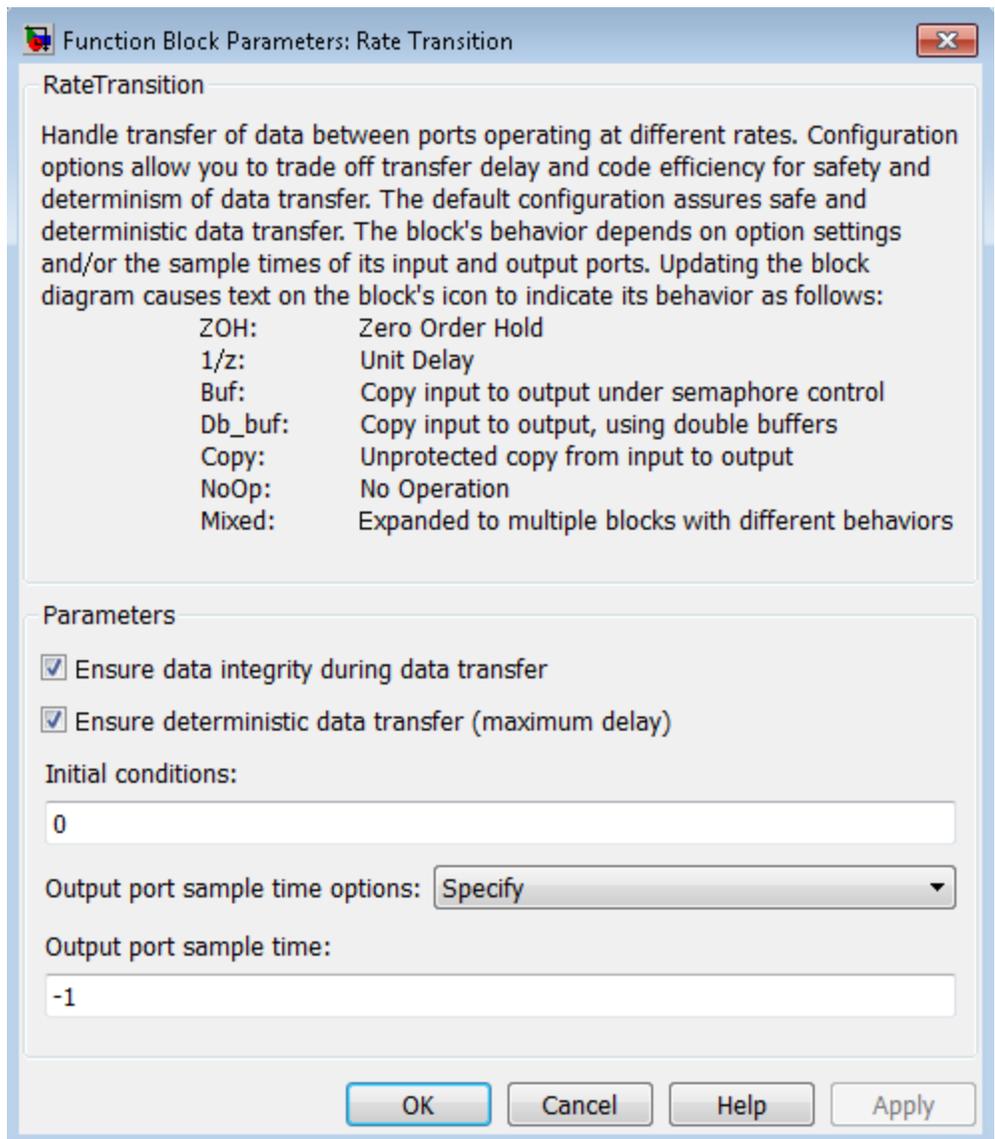

Function Block Parameters: Rate Transition

RateTransition

Handle transfer of data between ports operating at different rates. Configuration options allow you to trade off transfer delay and code efficiency for safety and determinism of data transfer. The default configuration assures safe and deterministic data transfer. The block's behavior depends on option settings and/or the sample times of its input and output ports. Updating the block diagram causes text on the block's icon to indicate its behavior as follows:

ZOH:	Zero Order Hold
1/z:	Unit Delay
Buf:	Copy input to output under semaphore control
Db_buf:	Copy input to output, using double buffers
Copy:	Unprotected copy from input to output
NoOp:	No Operation
Mixed:	Expanded to multiple blocks with different behaviors

Parameters

Ensure data integrity during data transfer

Ensure deterministic data transfer (maximum delay)

Initial conditions:

0

Output port sample time options: Specify

Output port sample time:

-1

OK Cancel Help Apply

## Parameters

## and Dialog Box

### **Ensure data integrity during data transfer**

Selecting this check box results in generated code that ensures data integrity when the block transfers data. If you select this check box and the transfer is nondeterministic (see **Ensure deterministic data transfer** below), depending on the priority of input rate and output rate, the generated code uses a proper algorithm using single or multiple buffers to protect data integrity during data transfer.

Otherwise, the Rate Transition block is either reduced or generates code using a copy operation to effect the data transfer. This unprotected mode consumes less memory. But the copy operation is also interruptible, which can lead to loss of data integrity during data transfers. Select this check box if you want the generated code to operate with maximum responsiveness (i.e., nondeterministically) and data integrity. For more information, see “Rate Transition Block Options” in the Simulink Coder documentation.

### **Ensure deterministic data transfer (maximum delay)**

Selecting this check box results in generated code that transfers data at the sample rate of the slower block, that is, deterministically. If you do not select this check box, data transfers occur as soon as new data is available from the source block and the receiving block is ready to receive the data. You avoid transfer delays, thus ensuring that the system operates with maximum responsiveness. However, transfers can occur unpredictably, which is undesirable in some applications. For more information, see “Rate Transition Block Options” in the Simulink Coder documentation.

### **Initial conditions**

This parameter applies only to slow-to-fast transitions. It specifies the initial output of the Rate Transition block at the beginning of a transition when there is no output from the slow block connected to the input of the Rate Transition block. Simulink does not allow the initial output of this block to be Inf or NaN.

# Rate Transition

---

## Output port sample time options

Specifies a mode for setting the output port sample time. The options are:

- **Specify** — Allows you to use the **Output port sample time** parameter to specify the output rate to which the Rate Transition block converts its input rate.
- **Inherit** — Specifies that the Rate Transition block inherits an output rate from the block to which the output port is connected.
- **Multiple of input port sample time** — Allows you to use the **Sample time multiple (>0)** parameter to specify the Rate Transition block output rate as a multiple of its input rate.

If you specify **Inherit** and all blocks connected to the output port also inherit sample time, the fastest sample time in the model applies.

## Output port sample time

This parameter is visible when you set **Output port sample time options** to **Specify**. Enter a value that specifies the output rate to which the block converts its input rate. The default value (-1) specifies that the Rate Transition block inherits the output rate from the block to which the output port is connected. See “Specify Sample Time” in the Simulink documentation for information on how to specify the output rate.

## Sample time multiple (>0)

This parameter is visible when you set **Output port sample time options** to **Multiple of input port sample time**. Enter a positive value that specifies the output rate as a multiple of the input port sample time. The default value (1) specifies that the output rate is the same as the input rate. A value of 0.5 specifies that the output rate is half of the input rate, while a value of 2 specifies that the output rate is twice the input rate.

## Bus Support

The Rate Transition block is a bus-capable block. The input can be a virtual or nonvirtual bus signal, with the restriction that **Initial conditions** must be zero, a nonzero scalar, or a finite numeric structure. For information about specifying an initial condition structure, see “Specify Initial Conditions for Bus Signals”.

All signals in a nonvirtual bus input to a Rate Transition block must have the same sample time, even if the elements of the associated bus object specify inherited sample times. You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus. See “Composite Signals” and “Bus-Capable Blocks” in the Simulink documentation for more information.

You can use an array of buses as an input signal to a Rate Transition block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

## Characteristics

Bus-capable	Yes, with restrictions as noted above.
Direct Feedthrough	No, for slow-to-fast transitions for which you select the <b>Ensure data integrity during data transfer</b> check box. Yes, otherwise.
Sample Time	This block supports discrete-to-discrete transitions.
Scalar Expansion	Yes, of input.
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

# Real-Imag to Complex

---

**Purpose** Convert real and/or imaginary inputs to complex signal

**Library** Math Operations

**Description** The Real-Imag to Complex block converts real and/or imaginary inputs to a complex-valued output signal.




The inputs can both be arrays (vectors or matrices) of equal dimensions, or one input can be an array and the other a scalar. If the block has an array input, the output is a complex array of the same dimensions. The elements of the real input map to the real parts of the corresponding complex output elements. The imaginary input similarly maps to the imaginary parts of the complex output signals. If one input is a scalar, it maps to the corresponding component (real or imaginary) of all the complex output signals.

**Data Type Support** The block accepts input signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

Complex fixed-point signals must have trivial slope and zero bias. For more information about support for fixed-point data types, see “Scaling” in the Fixed-Point Designer documentation.

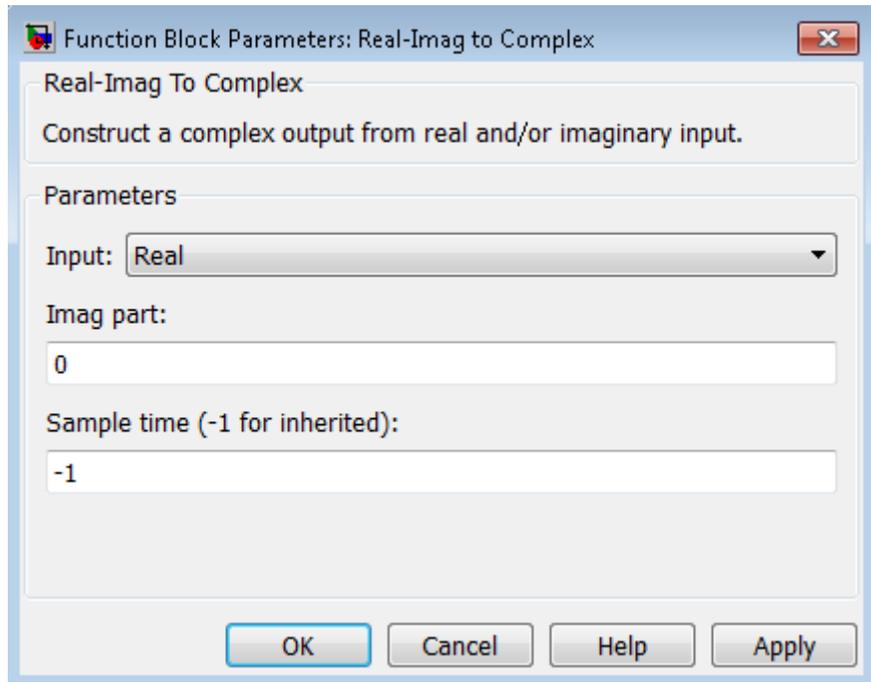

## Parameters and Dialog Box

### Input

Specify the kind of input: a real input, an imaginary input, or both.

### Real (Imag) part

This parameter appears only when you set **Input** to **Real** or **Imag**. If the input is a real-part signal, this parameter specifies the constant imaginary part of the output signal. If the input is the imaginary part, this parameter specifies the constant real part of the output signal. The title of this parameter changes to reflect its usage.

# Real-Imag to Complex

---

## Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block
Scalar Expansion	Yes, of the input when the function requires two inputs
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Complex to Real-Imag

**Purpose** Perform specified relational operation on inputs

**Library** Logic and Bit Operations

**Description** **Two-Input Mode**



By default, the Relational Operator block compares two inputs using the **Relational operator** parameter that you specify. The first input corresponds to the top input port and the second input to the bottom input port. (See “How to Rotate a Block” in the Simulink documentation for a description of the port order for various block orientations.)

You can specify one of the following operations in two-input mode:

Operation	Description
==	TRUE if the first input is equal to the second input
~=	TRUE if the first input is not equal to the second input
<	TRUE if the first input is less than the second input
<=	TRUE if the first input is less than or equal to the second input
>=	TRUE if the first input is greater than or equal to the second input
>	TRUE if the first input is greater than the second input

# Relational Operator

---

You can specify inputs as scalars, arrays, or a combination of a scalar and an array.

For...	The output is...
Scalar inputs	A scalar
Array inputs	An array of the same dimensions, where each element is the result of an element-by-element comparison of the input arrays
Mixed scalar and array inputs	An array, where each element is the result of a comparison between the scalar and the corresponding array element

The input with the smaller positive range is converted to the data type of the other input offline using round-to-nearest and saturation. This conversion occurs before the comparison.

You can specify the output data type using the **Output data type** parameter. The output equals 1 for TRUE and 0 for FALSE.

---

**Tip** Select an output data type that represents zero exactly. Data types that satisfy this condition include signed and unsigned integers and any floating-point data type.

---

## One-Input Mode

When you select one of the following operations for **Relational operator**, the block switches to one-input mode.

Operation	Description
isInf	TRUE if the input is Inf
isNaN	TRUE if the input is NaN
isFinite	TRUE if the input is finite

For an input that is not floating point, the block produces the following output.

Data Type	Operation	Block Output
<ul style="list-style-type: none"> <li>Fixed point</li> </ul>	isInf	FALSE
	isNaN	FALSE
<ul style="list-style-type: none"> <li>Boolean</li> <li>Built-in integer</li> </ul>	isFinite	TRUE

## Rules for Data Type Propagation

The following rules apply for data type propagation when your block has one or more input ports with unspecified data types.

When the block is in...	And...	The block uses...
Two-input mode	Both input ports have unspecified data types	double as the default data type for both inputs
	One input port has an unspecified data type	The data type from the specified input port as the default data type of the other port
One-input mode	The input port has an unspecified data type	double as the default data type for the input

## Data Type Support

The Relational Operator block accepts real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types. For two-input mode, one input can be real and the other complex when the operator is == or ~=. Complex inputs work only for ==, ~=, isInf, isNaN, and isFinite.


# Relational Operator

---

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.


## Parameters and Dialog Box

The **Main** pane of the Relational Operator block dialog box appears as follows:

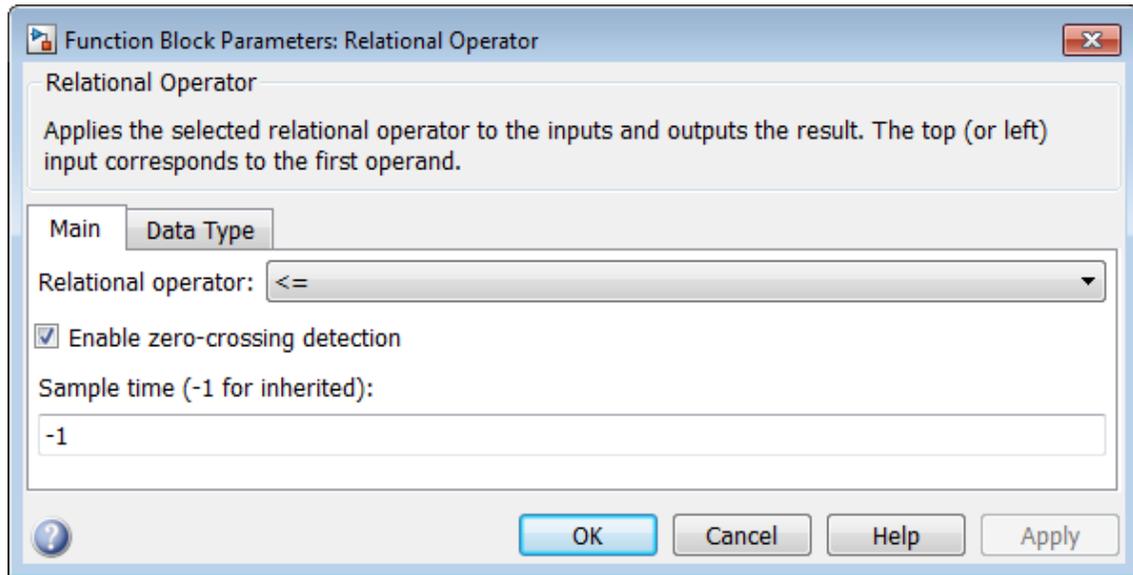

# Relational Operator

The **Data Type** pane of the Relational Operator block dialog box appears as follows:

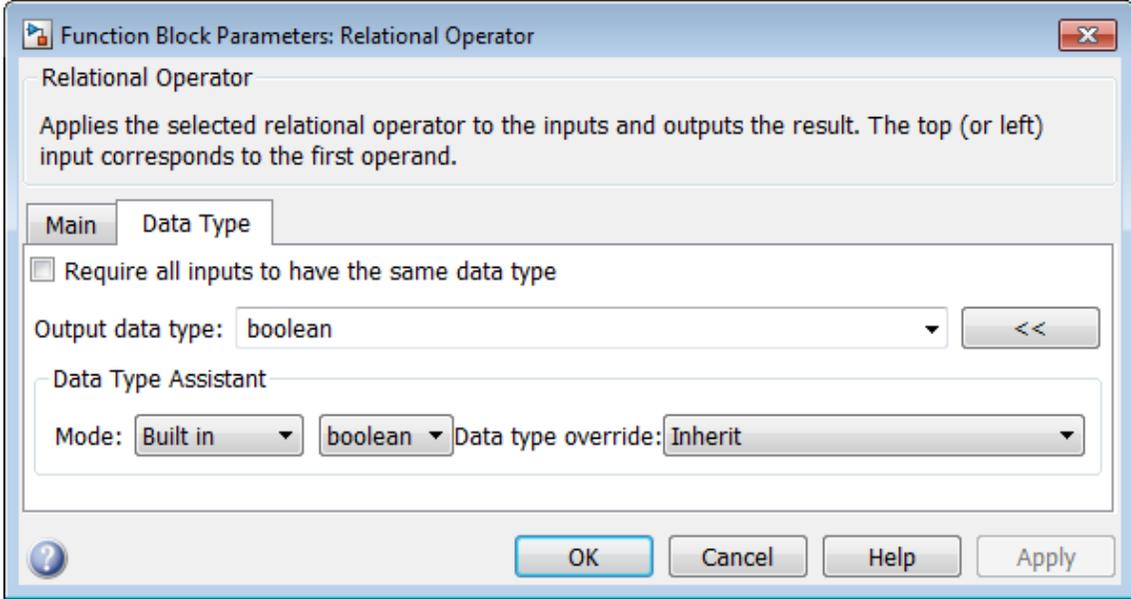

# Relational Operator

---

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

## Relational operator

Specify the operation for comparing two inputs or determining the signal type of one input.

### Settings

**Default:** <=

==

TRUE if the first input is equal to the second input

~=

TRUE if the first input is not equal to the second input

<

TRUE if the first input is less than the second input

<=

TRUE if the first input is less than or equal to the second input

>=

TRUE if the first input is greater than or equal to the second input

>

TRUE if the first input is greater than the second input

isInf

TRUE if the input is Inf

isNaN

TRUE if the input is NaN

isFinite

TRUE if the input is finite

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Relational Operator

---

## Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

### Settings

**Default:** On

On  
Enable zero-crossing detection.

Off  
Do not enable zero-crossing detection.

### Command-Line Information

**Parameter:** ZeroCross

**Type:** string

**Value:** 'on' | 'off'

**Default:** 'on'

## **Sample time (-1 for inherited)**

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### **Settings**

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Relational Operator

---

## Require all inputs to have the same data type

Require that all inputs have the same data type.

### Settings

**Default:** Off



On

Require that all inputs have the same data type.



Off

Do not require that all inputs have the same data type.

### Dependency

This check box is not available when you select `isInf`, `isNaN`, or `isFinite` for **Relational operator**, because the block is in one-input mode.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Output data type

Specify the output data type.

### Settings

**Default:** boolean

**Inherit:** Logical (see Configuration Parameters: Optimization)

Uses the **Implement logic signals as Boolean data** configuration parameter (see “Implement logic signals as Boolean data (vs. double)”) to specify the output data type.

---

**Note** This option supports models created before the `boolean` option was available. Use one of the other options, preferably `boolean`, for new models.

---

`boolean`

Specifies output data type is `boolean`.

`fixdt(1,16)`

Specifies output data type is `fixdt(1,16)`.

`<data type expression>`

Uses the name of a data type object, for example, `Simulink.NumericType`.

---

**Tip** To enter a built-in data type (`double`, `single`, `int8`, `uint8`, `int16`, `uint16`, `int32`, or `uint32`), enclose the expression in single quotes. For example, enter `'double'` instead of `double`.

---

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Relational Operator

---

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Built in

Inherit

Specifies inheritance rules for data types. Selecting `Inherit` enables `Logical` (see `Configuration Parameters: Optimization`).

Built in

Specifies built-in data types. Selecting `Built in` enables `boolean`.

Fixed point

Specifies fixed-point data types.

Expression

Specifies expressions that evaluate to data types.

## **Dependency**

Clicking the **Show data type assistant** button enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is `Built in` or `Fixed point`.

# Relational Operator

---

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

## **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

## **Dependencies**

Selecting **Mode** > Fixed point enables this parameter.

## **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > *Fixed point* enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Relational Operator

---

## **Scaling**

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

## **Settings**

**Default:** Integer

Integer

Specify integer. This setting has the same result as specifying a binary point location and setting fraction length to 0.

## **Command-Line Information**


See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type”.

## Examples

In the `sldemo_fuelsys` model, the `fuel_rate_control/airflow_calc` subsystem uses two Relational Operator blocks:

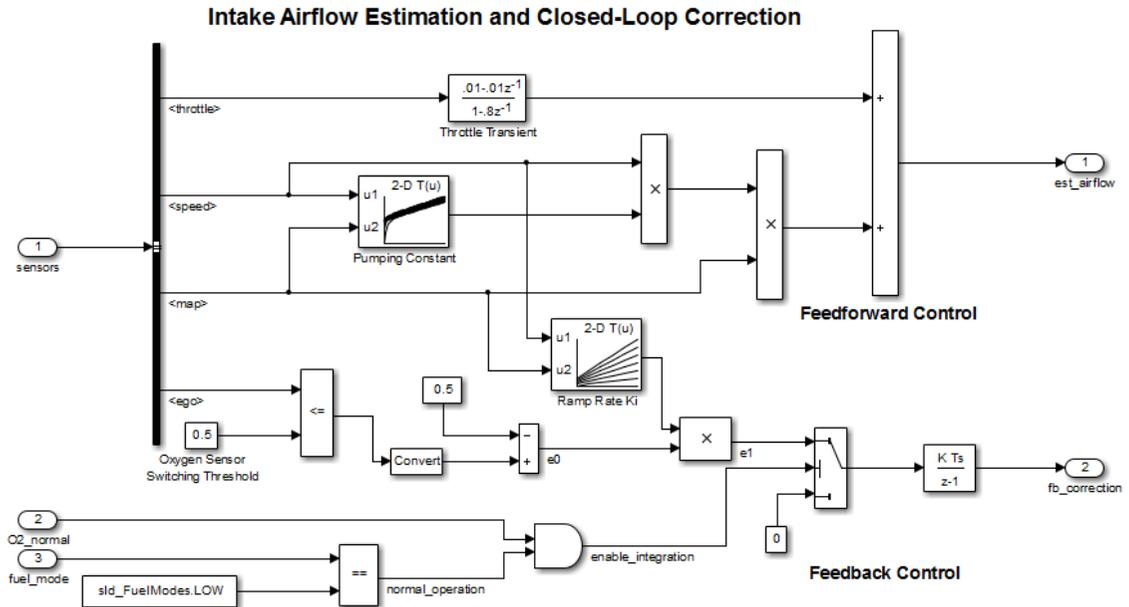

Both Relational Operator blocks operate in two-input mode.

The block that uses this operator...	Compares...
<code>&lt;=&gt;</code>	The value of the oxygen sensor to the threshold value, 0.5
<code>==</code>	The value of the fuel mode to the ideal value, <code>sld_FuelModes.LOW</code>

# Relational Operator

---

<b>Characteristics</b>	Direct Feedthrough	Yes
	Sample Time	Specified in the <b>Sample time</b> parameter
	Scalar Expansion	Yes, of inputs
	Dimensionalized	Yes
	Multidimensionalized	Yes
	Zero-Crossing Detection	Yes, if enabled

**Purpose** Switch output between two constants

**Library** Discontinuities

## Description



The Relay block allows its output to switch between two specified values. When the relay is on, it remains on until the input drops below the value of the **Switch off point** parameter. When the relay is off, it remains off until the input exceeds the value of the **Switch on point** parameter. The block accepts one input and generates one output.

The **Switch on point** value must be greater than or equal to the **Switch off point**. Specifying a **Switch on point** value greater than the **Switch off point** models hysteresis, whereas specifying equal values models a switch with a threshold at that value.

---

**Note** When the initial input falls *between* the **Switch off point** and **Switch on point** values, the initial output is the value when the relay is off.

---

## Data Type Support

The Relay block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated (output only)

If **Output when on** or **Output when off** is an enumerated value, both must be of the same enumerated type as the output.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Relay

---

## **Parameters and Dialog Box**

The **Main** pane of the Relay block dialog box appears as follows:

Function Block Parameters: Relay

Relay

Output the specified 'on' or 'off' value by comparing the input to the specified thresholds. The on/off state of the relay is not affected by input between the upper and lower limits.

Main Signal Attributes

Switch on point:  
eps

Switch off point:  
eps

Output when on:  
1

Output when off:  
0

Input processing: Elements as channels (sample based)

Enable zero-crossing detection

Sample time (-1 for inherited):  
-1

OK Cancel Help Apply

**Switch on point**

The “on” threshold for the relay. The **Switch on point** parameter is converted to the input data type offline using round-to-nearest and saturation.

**Switch off point**

The “off” threshold for the relay. The **Switch off point** parameter is converted to the input data type offline using round-to-nearest and saturation.

**Output when on**

The output when the relay is on.

**Output when off**

The output when the relay is off.

**Input processing**

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- **Elements as channels (sample based)** — Treat each element of the input as a separate channel (sample-based processing).
- **Columns as channels (frame based)** — Treat each column of the input as a separate channel (frame-based processing).

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input *u*. All other input signals must be sample based.

Input Signal <i>u</i>	Input Processing Mode	Block Works?
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

### Enable zero-crossing detection


Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

### Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation for more information.

# Relay

The **Signal Attributes** pane of the Relay block dialog box appears as follows:

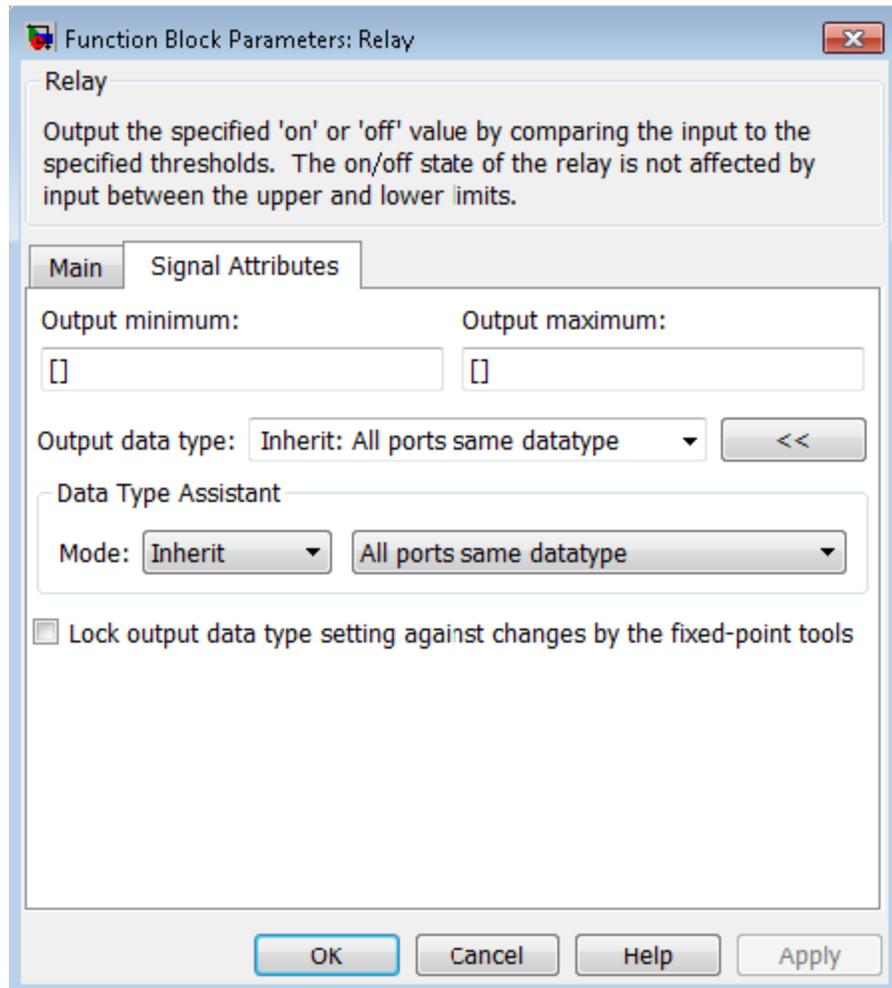

### Output minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### Output maximum

Specify the maximum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`
- An enumerated data type, for example, `Enum:BasicColors`

In this case, **Output when on** and **Output when off** must be of the same enumerated type.

# Relay

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.


See “Specify Block Output Data Types” in *Simulink User’s Guide* for more information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

## Examples

The `sldemo_househeat` model shows how you can use the Relay block. The Relay block appears in the Thermostat subsystem.

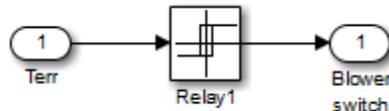

The thermostat allows fluctuations of 5 degrees Fahrenheit above or below the desired room temperature. If air temperature drops below 65 degrees Fahrenheit, the thermostat turns on the heater. The Relay block outputs a value of 1 to turn on the heater and a value of 0 to turn off the heater.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Dimensionalized	Yes

Multidimensionalized	No
Zero-Crossing Detection	Yes, if enabled

# Repeating Sequence

---

**Purpose** Generate arbitrarily shaped periodic signal

**Library** Sources


**Description** The Repeating Sequence block outputs a periodic scalar signal having a waveform that you specify using the **Time values** and **Output values** parameters. The **Time values** parameter specifies a vector of output times. The **Output values** parameter specifies a vector of signal amplitudes at the corresponding output times. Together, the two parameters specify a sampling of the output waveform at points measured from the beginning of the interval over which the waveform repeats (the period of the signal).



By default, both parameters are [0 2]. These default settings specify a sawtooth waveform that repeats every 2 seconds from the start of the simulation and has a maximum amplitude of 2.

**Algorithm** The block sets the input period as the difference between the first and last value of the **Time values** parameter. The output at any time  $t$  is the output at time  $t = t - n \cdot \text{period}$ , where  $n$  is an integer. The sequence repeats at  $t = n \cdot \text{period}$ . The block uses linear interpolation to compute the value of the waveform between the output times that you specify.

In the following model, the Repeating Sequence block defines **Time values** as [0:0.1:0.5] and **Output values** as [0 15 25 09 13 17]. The stop time of the simulation is 0.7 second.

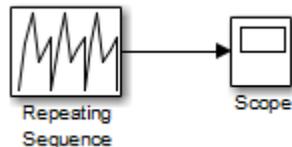


For the Repeating Sequence block:

- The input period is 0.5.

# Repeating Sequence

- The output at any time  $t$  is the output at time  $t = t - 0.5n$ , where  $n = 0, 1, 2$ , and so on.
- The sequence repeats at  $t = 0.5n$ , where  $n = 0, 1, 2$ , and so on.

When you run the model, you get the following results:

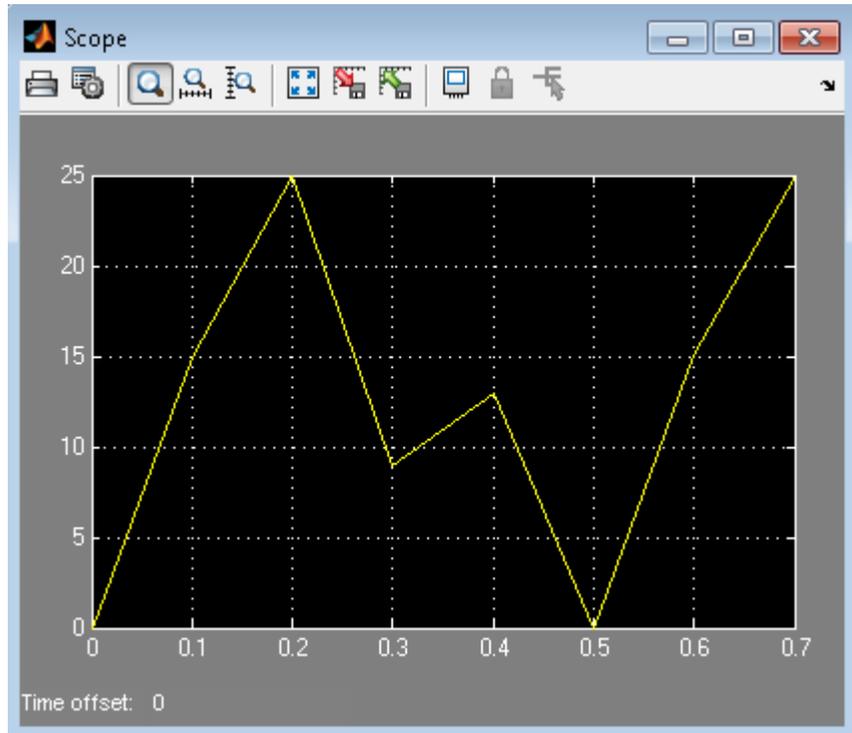

At  $t = 0.5$ , the expected output is equal to the output at  $t = 0$ , which is 0. Therefore, the last value in the **Output values** vector [0 15 25 09 13 17] does not appear.


# Repeating Sequence

---

## Data Type Support

The Repeating Sequence block outputs real signals of type double.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

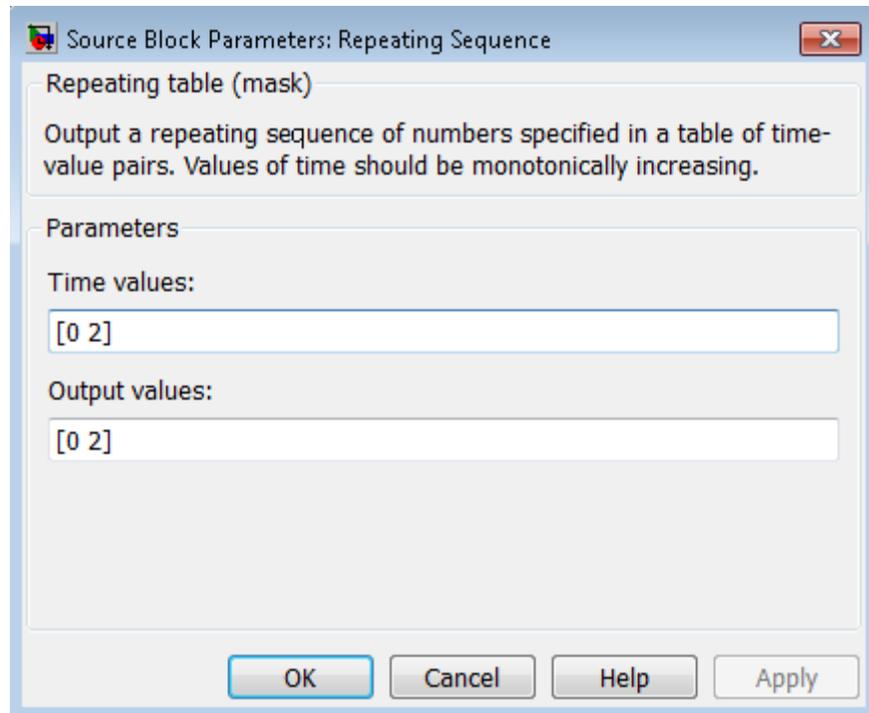

## Parameters and Dialog Box

### Time values

Specify a vector of strictly monotonically increasing time values. The default is [0 2].

### Output values

Specify a vector of output values. Each element corresponds to the time value in the same column. The default is [0 2].

## Examples

The following Simulink examples show how to use the Repeating Sequence block:

- `sldemo_fuelsys`
- `sldemo_hydrod`
- `sldemo_VariableTransportDelay`

## Characteristics

Sample Time	Continuous
Scalar Expansion	No
Dimensionalized	No
Zero-Crossing Detection	No

## See Also

Repeating Sequence Interpolated, Repeating Sequence Stair

# Repeating Sequence Interpolated

---

**Purpose** Output discrete-time sequence and repeat, interpolating between data points

**Library** Sources

**Description** The Repeating Sequence Interpolated block outputs a discrete-time sequence and then repeats it. Between data points, the block uses the method you specify for the **Lookup Method** parameter to determine the output.



**Data Type Support** The Repeating Sequence Interpolated block outputs signals of the following data types:


- Floating point
- Built-in integer
- Fixed point
- Boolean

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Repeating Sequence Interpolated

## Parameters and Dialog Box

The **Main** pane of the Repeating Sequence Interpolated block dialog box appears as follows:

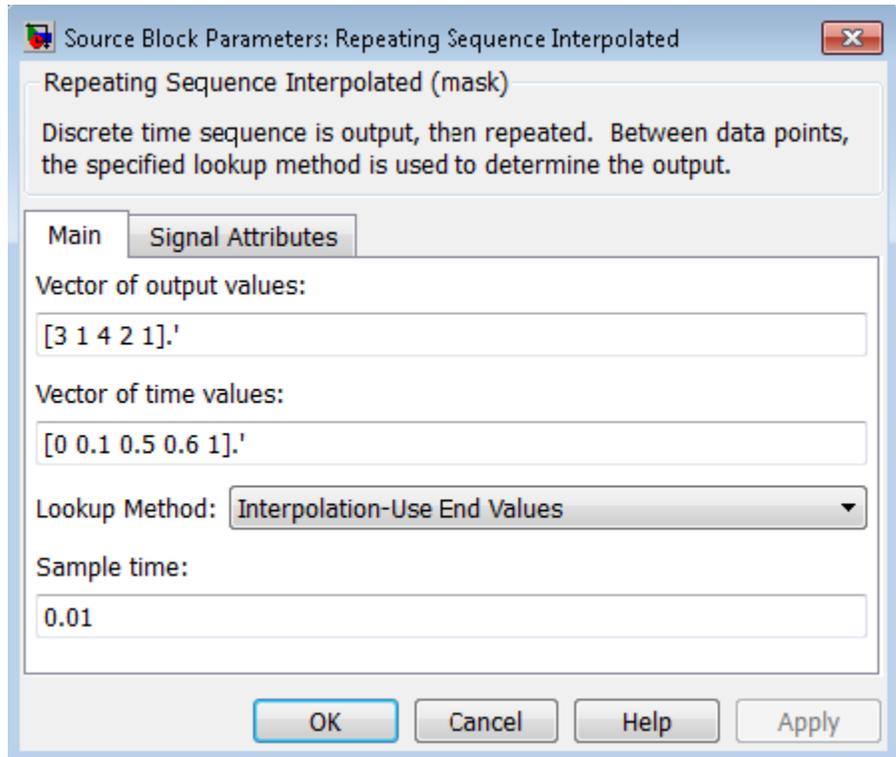

### Vector of output values

Specify the column vector containing output values of the discrete time sequence.

### Vector of time values

Specify the column vector containing time values. The time values must be strictly increasing, and the vector must have the same size as the vector of output values.

# Repeating Sequence Interpolated


## Lookup Method

Specify the lookup method to determine the output between data points.

## Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” for more information.

The **Signal Attributes** pane of the Repeating Sequence Interpolated block dialog box appears as follows:

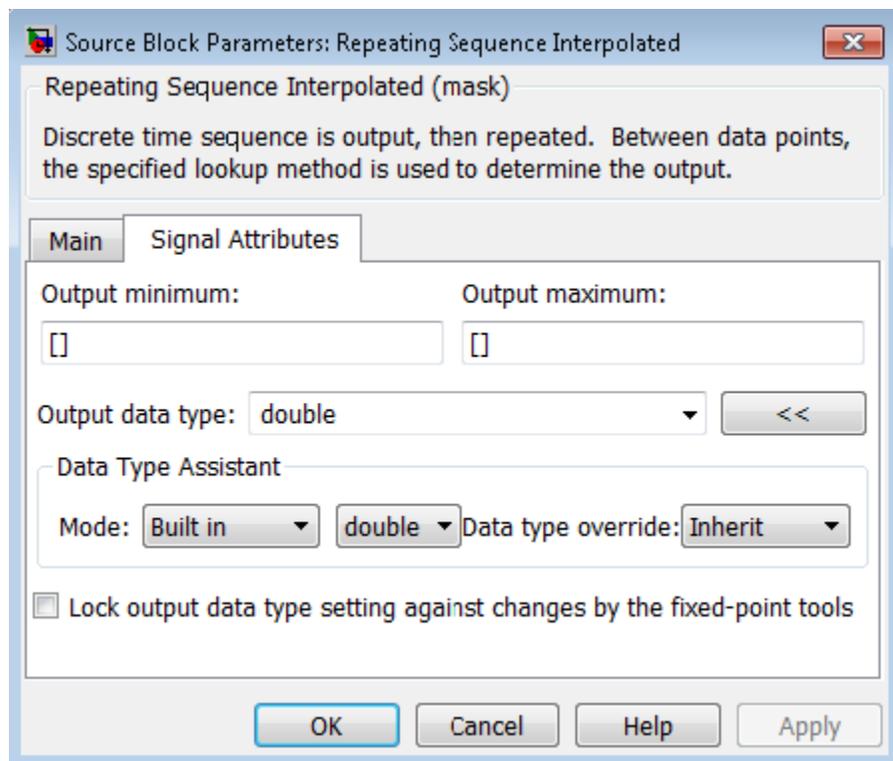

## Output minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output maximum


Specify the maximum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

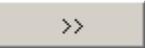Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” for more information.

# Repeating Sequence Interpolated

---

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

### Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

### See Also


Repeating Sequence, Repeating Sequence Stair

# Repeating Sequence Stair

**Purpose** Output and repeat discrete time sequence

**Library** Sources

**Description** The Repeating Sequence Stair block outputs and repeats a stair sequence that you specify with the **Vector of output values** parameter. For example, you can specify the vector as  $[3 \ 1 \ 2 \ 4 \ 1]'$ , which produces the following stair sequence:

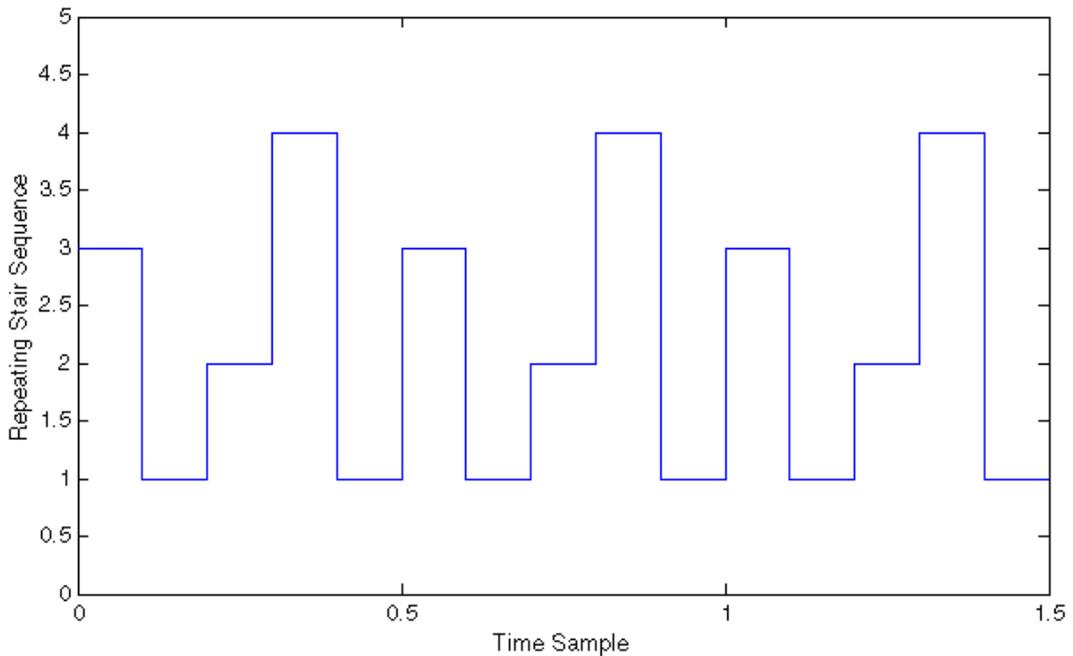

# Repeating Sequence Stair

---

## **Data Type Support**


The Repeating Sequence Stair block outputs signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

The **Main** pane of the Repeating Sequence Stair block dialog box appears as follows:

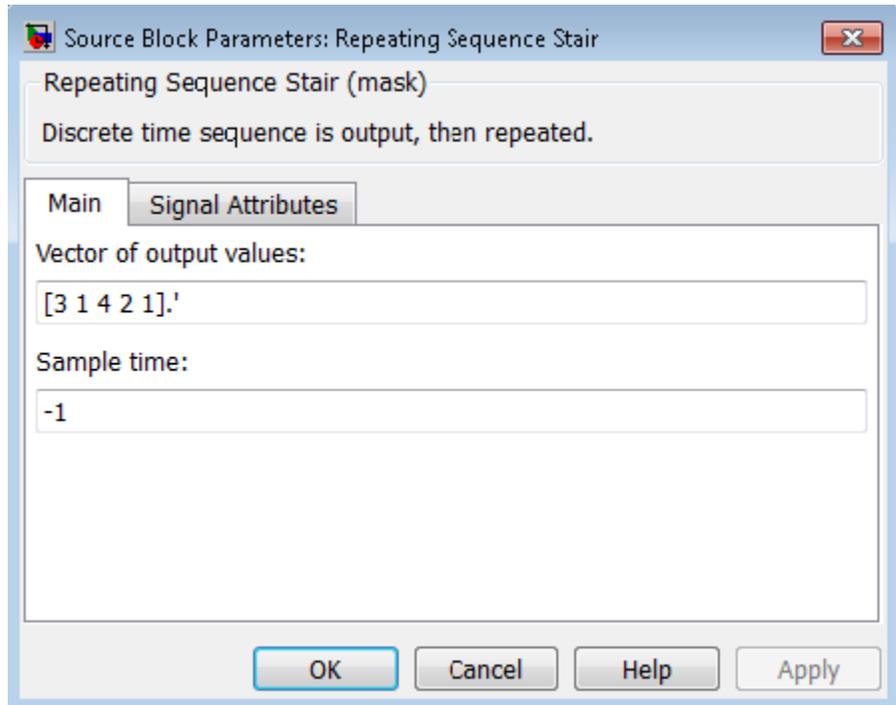

### Vector of output values


Specify the vector containing values of the repeating stair sequence.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” for more information.

The **Signal Attributes** pane of the Repeating Sequence Stair block dialog box appears as follows:

# Repeating Sequence Stair

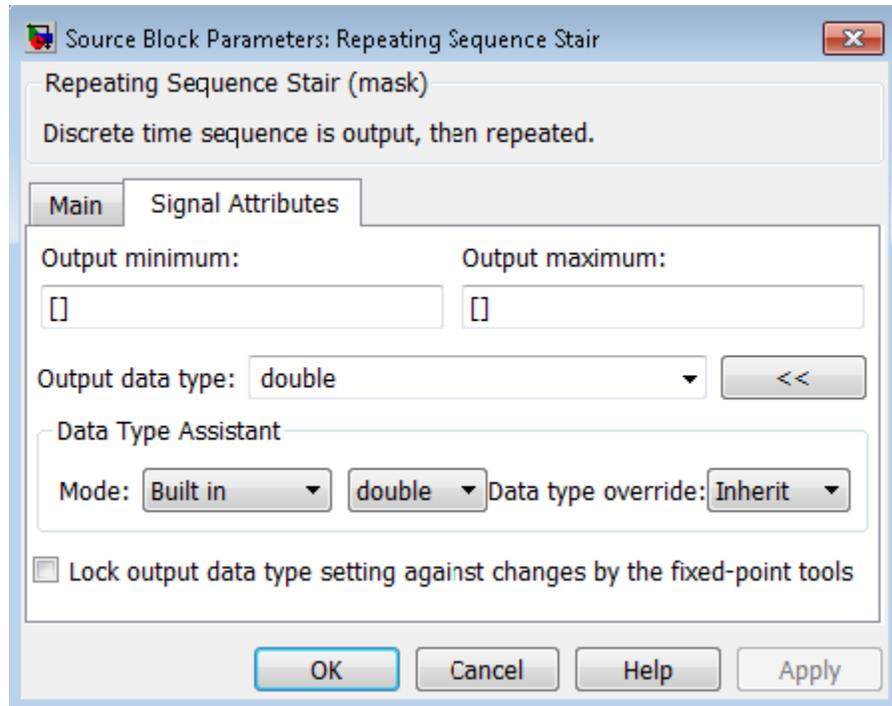

## Output minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output maximum


Specify the maximum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Parameter range checking (see “Check Parameter Values”)
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Inherit via back propagation`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

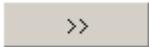Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” in the *Simulink User’s Guide* for more information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
Zero-Crossing Detection	No

# Repeating Sequence Stair

---

## **See Also**

Repeating Sequence, Repeating Sequence Interpolated


## Purpose

Delay input signal by variable sample period and reset with external signal


## Library

Discrete

## Description

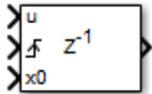

The Resettable Delay block is a variant of the Delay block that has the source of the initial condition set to Input port and the external reset algorithm set to Rising, by default.

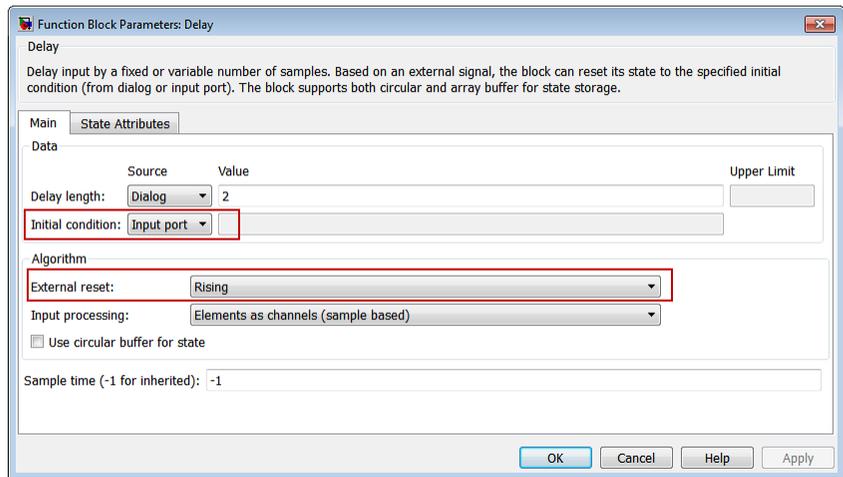

## See Also

- Delay
- Variable Integer Delay

# Reshape

**Purpose** Change dimensionality of signal

**Library** Math Operations

## Description



The Reshape block changes the dimensionality of the input signal to a dimensionality that you specify, using the block's **Output dimensionality** parameter. For example, you can use the block to change an N-element vector to a 1-by-N or N-by-1 matrix signal, and vice versa.

The **Output dimensionality** parameter lets you select any of the following output options.

Output Dimensionality	Description
1-D array	Converts a multidimensional array to a vector (1-D array) array signal. The output vector consists of the first column of the input matrix followed by the second column, etc. (This option leaves a vector input unchanged.)
Column vector	Converts a vector, matrix, or multidimensional input signal to a column matrix, i.e., an M-by-1 matrix, where M is the number of elements in the input signal. For matrices, the conversion is done in column-major order. For multidimensional arrays, the conversion is done along the first dimension.

<b>Output Dimensionality</b>	<b>Description</b>
Row vector	Converts a vector, matrix, or multidimensional input signal to a row matrix, i.e., a 1-by-N matrix where N is the number of elements in the input signal. For matrices, the conversion is done in column-major order. For multidimensional arrays, the conversion is done along the first dimension.
Customize	Converts the input signal to an output signal whose dimensions you specify, using the <b>Output dimensions</b> parameter. The value of the <b>Output dimensions</b> parameter can be a one- or multi-element vector. A value of [N] outputs a vector of size N. A value of [M N] outputs an M-by-N matrix. The number of elements of the input signal must match the number of elements specified by the <b>Output dimensions</b> parameter. For multidimensional arrays, the conversion is done along the first dimension.
Derive from reference input port	Creates a second input port, Ref, on the block. Derives the dimensions of the output signal from the dimensions of the signal input to the Ref input port. Selecting this option disables the <b>Output dimensions</b> parameter. When you select this parameter, the input signals for both inport ports, U and Ref, must have the same sampling mode (sample-based or frame-based).

# Reshape


---

## **Data Type Support**

The Reshape block accepts and outputs signals of any data type that Simulink supports, including fixed-point and enumerated data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

You can use an array of buses as an input signal to a Reshape block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

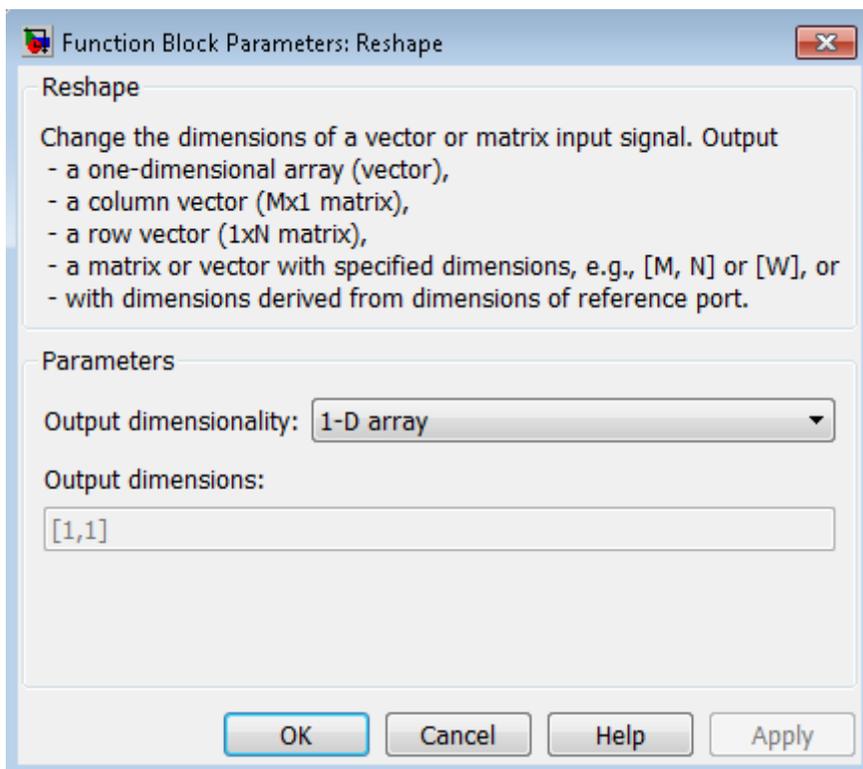

## Parameters and Dialog Box

### Output dimensionality

Specify the dimensionality of the output signal.

### Output dimensions

Specify a custom output dimensionality. This parameter is available only when you set **Output dimensionality** to Customize.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block

# Reshape

---

Scalar Expansion	N/A
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Apply rounding function to signal

**Library** Math Operations

**Description** The Rounding Function block applies a rounding function to the input signal to produce the output signal.



You can select one of the following rounding functions from the **Function** list:

- **floor**  
Rounds each element of the input signal to the nearest integer value towards minus infinity.
- **ceil**  
Rounds each element of the input signal to the nearest integer towards positive infinity.
- **round**  
Rounds each element of the input signal to the nearest integer.
- **fix**  
Rounds each element of the input signal to the nearest integer towards zero.

The name of the selected function appears on the block.

The input signal can be a scalar, vector, or matrix signal having real- or complex-valued elements of type `double`. The output signal has the same dimensions, data type, and numeric type as the input. Each element of the output signal is the result of applying the selected rounding function to the corresponding element of the input signal.

# Rounding Function

---

---

**Tip** Use the Rounding Function block instead of the Fcn block when you want vector or matrix output, because the Fcn block produces only scalar output.


Also, the Rounding Function block provides two more rounding modes. The Fcn block supports `floor` and `ceil`, but does not support `round` and `fix`.

---

## Data Type Support

The Rounding Function block accepts and outputs real signals of type `double` or `single`.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

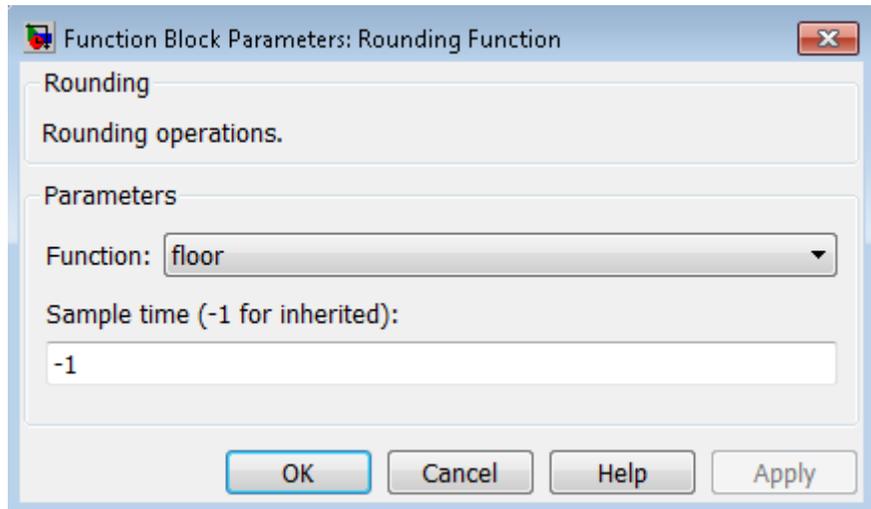

## Parameters and Dialog Box

### Function

Specify the rounding function.

### Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	N/A
Dimensionalized	Yes
Multidimensionalized	No
Zero-Crossing Detection	No

# Saturation

**Purpose** Limit range of signal

**Library** Discontinuities

**Description** The Saturation block imposes upper and lower limits on an input signal.



When the input is...	Where...	The block output is the...
Within the range specified by the <b>Lower limit</b> and <b>Upper limit</b> parameters	$\text{Lower limit} \leq \text{Input value} \leq \text{Upper limit}$	Input value
Less than the <b>Lower limit</b> parameter	$\text{Input value} < \text{Lower limit}$	Lower limit
Greater than the <b>Upper limit</b> parameter	$\text{Input value} > \text{Upper limit}$	Upper limit

When the **Lower limit** and **Upper limit** parameters have the same value, the block output is that value.

## Data Type Support


The Saturation block accepts real signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.


## Parameters and Dialog Box

The **Main** pane of the Saturation block dialog box appears as follows:

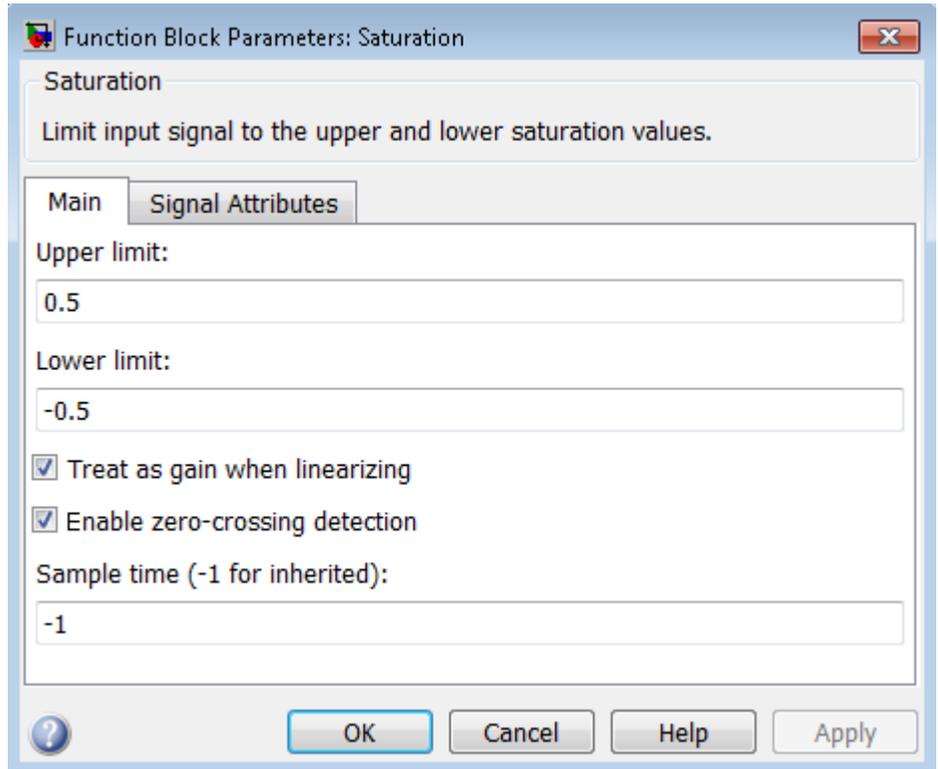

# Saturation

The **Signal Attributes** pane of the Saturation block dialog box appears as follows:

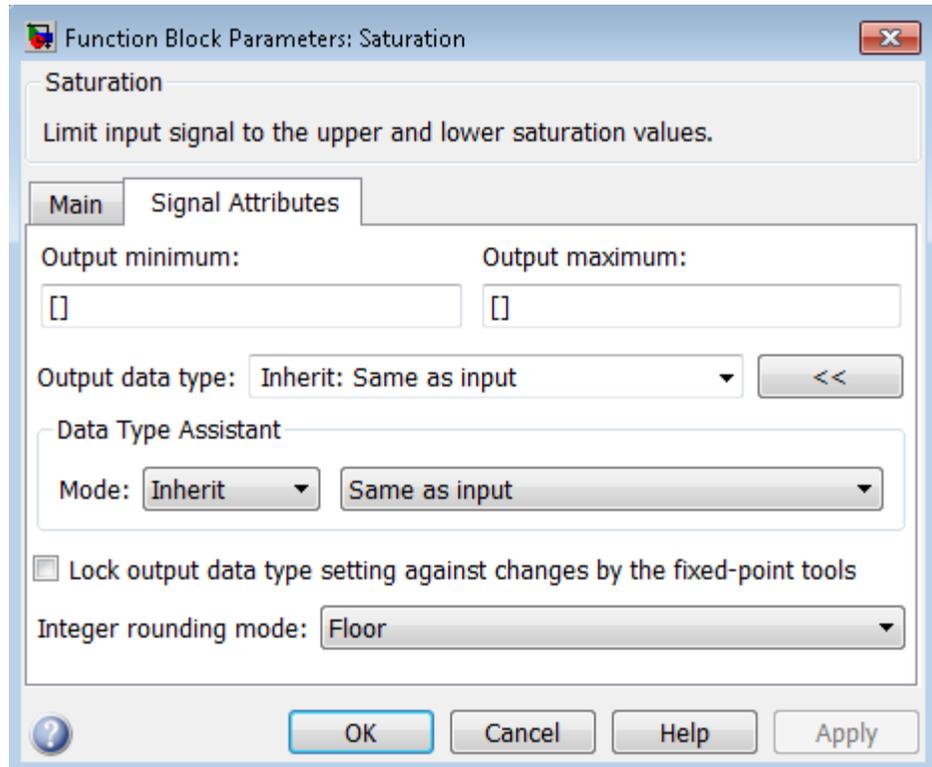

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

# Saturation

---

## Upper limit

Specify the upper bound on the input signal.

### Settings

**Default:** 0.5

**Minimum:** value from the **Output minimum** parameter

**Maximum:** value from the **Output maximum** parameter

### Tip

- When the input signal to the Saturation block is above this value, the output of the block is clipped to this value.
- The **Upper limit** parameter is converted to the output data type offline using round-to-nearest and saturation.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Lower limit

Specify the lower bound on the input signal.

### Settings

**Default:** -0.5

**Minimum:** value from the **Output minimum** parameter

**Maximum:** value from the **Output maximum** parameter

### Tips

- When the input signal to the Saturation block is below this value, the output of the block is clipped to this value.
- The **Lower limit** parameter is converted to the output data type offline using round-to-nearest and saturation.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Saturation

---

## Treat as gain when linearizing

Select this parameter to cause the linearization commands to treat the gain as 1

### Settings

**Default:** On



On

Select to cause the linearization commands to treat the gain as 1.



Off

Clear to cause the linearization commands to treat the gain as 0.

### Tips

Linearization commands in Simulink software treat this block as a gain in state space.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

### Settings

**Default:** On



On

Enable zero-crossing detection.



Off

Do not enable zero-crossing detection.

### Command-Line Information

**Parameter:** ZeroCross

**Type:** string

**Value:** 'on' | 'off'

**Default:** 'on'

## **Sample time (-1 for inherited)**

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### **Settings**

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off



On

Locks the output data type setting for this block.



Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations.

### Settings

**Default:** Floor

#### Ceiling

Rounds both positive and negative numbers toward positive infinity. Equivalent to the MATLAB `ceil` function.

#### Convergent

Rounds number to the nearest representable value. If a tie occurs, rounds to the nearest even integer. Equivalent to the Fixed-Point Designer `convergent` function.

#### Floor

Rounds both positive and negative numbers toward negative infinity. Equivalent to the MATLAB `floor` function.

#### Nearest

Rounds number to the nearest representable value. If a tie occurs, rounds toward positive infinity. Equivalent to the Fixed-Point Designer `nearest` function.

#### Round

Rounds number to the nearest representable value. If a tie occurs, rounds positive numbers toward positive infinity and rounds negative numbers toward negative infinity. Equivalent to the Fixed-Point Designer `round` function.

#### Simplest

Automatically chooses between round toward floor and round toward zero to generate rounding code that is as efficient as possible.

#### Zero

Rounds number toward zero. Equivalent to the MATLAB `fix` function.

## Command-Line Information

**Parameter:** RndMeth

**Type:** string

**Value:** 'Ceiling' | 'Convergent' | 'Floor' | 'Nearest' |  
'Round' | 'Simplest' | 'Zero'

**Default:** 'Floor'

## See Also

For more information, see “Rounding” in the Fixed-Point Designer documentation.

# Saturation

---

## Output minimum

Lower value of the output range that Simulink checks.

### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the minimum to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output minimum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

### Command-Line Information

**Parameter:** OutMin

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

## Output maximum

Upper value of the output range that Simulink checks.

### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the maximum value to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output maximum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

## Command-Line Information

**Parameter:** OutMax

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

# Saturation

---

## **Output data type**

Specify the output data type.

### **Settings**

**Default:** Inherit: Same as input

Inherit: Inherit via back propagation  
Use data type of the driving block.

Inherit: Same as input  
Use data type of input signal.

double  
Output data type is double.

single  
Output data type is single.

int8  
Output data type is int8.

uint8  
Output data type is uint8.

int16  
Output data type is int16.

uint16  
Output data type is uint16.

int32  
Output data type is int32.

uint32  
Output data type is uint32.

fixdt(1,16,0)  
Output data type is fixed point fixdt(1,16,0).

fixdt(1,16,2<sup>0</sup>,0)  
Output data type is fixed point fixdt(1,16,2<sup>0</sup>,0).

<data type expression>

Use a data type object, for example, `Simulink.NumericType`.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

For more information, see “Specify Block Output Data Types”.

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Inherit

### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit via back propagation
- Same as input (default)

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

### Fixed point

Fixed-point data types.

### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

**Dependency**

Clicking the **Show data type assistant** button enables this parameter.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**See Also**

See “Specify Data Types Using Data Type Assistant”.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Saturation

---

## Slope

Specify slope for the fixed-point data type.

### Settings

**Default:**  $2^0$

Specify any positive real number.

### Dependencies

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## Bias

Specify bias for the fixed-point data type.

### Settings

**Default:** 0

Specify any real number.

### Dependencies

Selecting **Scaling** > **Slope** and **bias** enables this parameter.


### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## Examples

The `sldemo_boiler` model shows how you can use the Saturation block.

The Saturation block appears in the `Boiler Plant model/digital thermometer/ADC` subsystem.

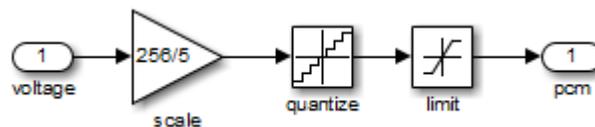

The ADC subsystem digitizes the input analog voltage by:

- Multiplying the analog voltage by 256/5 with the Gain block

- Rounding the value to integer floor with the Quantizer block
- Limiting the output to a maximum of 255 (the largest unsigned 8-bit integer value) with the Saturation block

For more information, see “Explore the Fixed-Point “Bang-Bang Control” Model” in the Stateflow documentation.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of parameters and input
Dimensionalized	Yes
Zero-Crossing Detection	Yes, if enabled.

## See Also

Saturation Dynamic

# Saturation Dynamic

---

**Purpose** Bound range of input

**Library** Discontinuities

## Description



The Saturation Dynamic block bounds the range of an input signal to upper and lower saturation values. An input signal outside of these limits saturates to one of the bounds where:

- The input below the lower limit is set to the lower limit.
- The input above the upper limit is set to the upper limit.

The input for the upper limit is the up port, and the input for the lower limit is the lo port.

## Data Type Support

The Saturation Dynamic block accepts signals of the following data types:


- Floating point
- Built-in integer
- Fixed point
- Boolean

---

**Tip** Although this block accepts Boolean signals, avoid this usage.

---

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

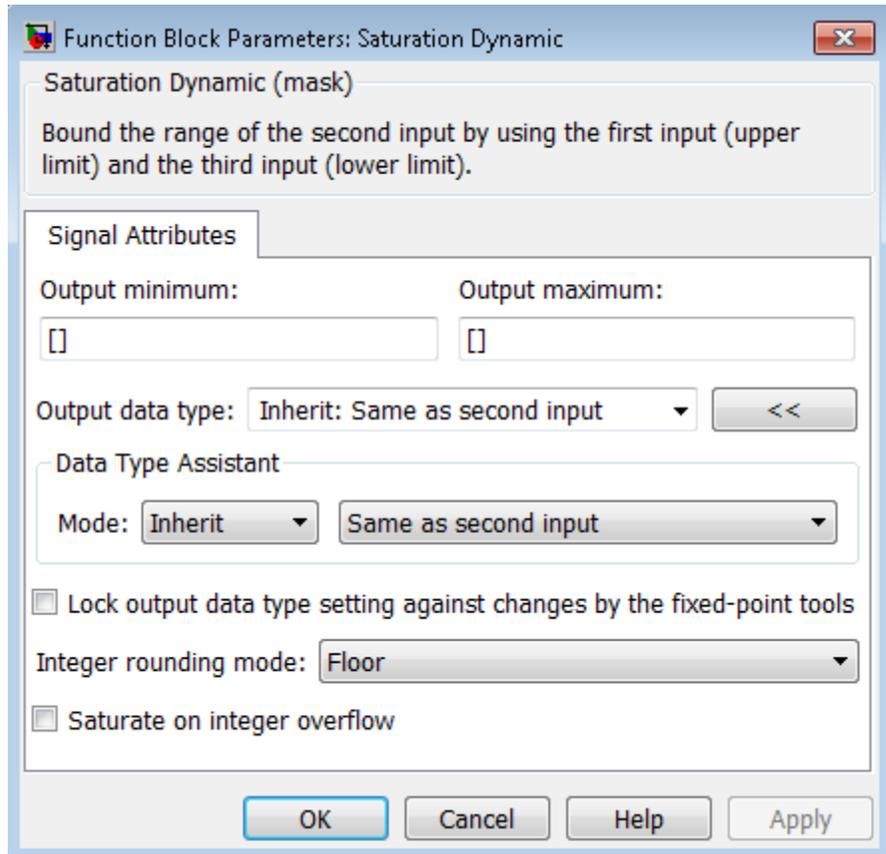

## Parameters and Dialog Box

### Output minimum

Specify the minimum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)

# Saturation Dynamic

---

- Automatic scaling of fixed-point data types

## Output maximum

Specify the maximum value that the block should output. The default value is [] (unspecified). Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output data type

Specify the output data type. You can set it to:

- A rule that inherits a data type, for example, `Inherit: Same as second input`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” in the *Simulink User’s Guide* for more information.

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box selected, the block output saturates at 127. Similarly, the block output saturates at a minimum output value of -128.
Do not select this check box.	<p>You want to optimize efficiency of your generated code.</p> <p>You want to avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.</p>	Overflows wrap to the appropriate value that is representable by the data type.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value

# Saturation Dynamic

---

Action	Reasons for Taking This Action	What Happens for Overflows	Example
			as int8, which can produce an unintended result. For example, a block result of 130 (binary 1000 0010) expressed as int8, is -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

Characteristics	Direct Feedthrough	Yes
	Scalar Expansion	Yes

**See Also**      Saturation

**Purpose** Display signals generated during simulation

**Library** Sinks

**Description** The Scope block displays inputs signals with respect to simulation time.



- **Scope window** — If a Scope window is closed at the start of a simulation, scope data is still written to the connected Scope. As a result, if you open a Scope after a simulation, the Scope window displays the input signal or signals.
- **Plotting signals** — If the input signal is continuous, the Scope draws a point-to-point plot. If the signal is discrete, the Scope draws a stair-step plot.
- **Time step values** — The Scope block only displays major time step values. The scope displays additional interpolated points between major time steps if specified by the refine parameter.
- **Multiple y-axes (graphs)** — A Scope window can display multiple y-axes (graphs) with one graph per input port. All of the y-axes have a common time range on the x-axis. The Scope block allows you to adjust the amount of time and the range of input values displayed. You can modify the Scope parameter values during a simulation.
- **Data type support** — The Scope block accepts real (not complex) signals of any data type that Simulink supports, including fixed-point and enumerated data types. The Scope block also accepts homogeneous vectors. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

---

**Note** A Scope block is not the same as a Scope Viewer. For information about Scope Viewers, see “Signal Viewer Tasks”

---

# Scope and Floating Scope

---

---

**Note** If you want to display internal data from a library block that you create, do not use a Scope block inside the library block. Instead, provide your library block with output ports, and then connect the ports to a Scope block external to the library block.

---

## Scope Parameters

Use scope parameters to change axis (graph) settings, data logging options, and figure color and style.

---

**Note** Changing Scope dialog parameters using `set_param` may put the Scope in an undefined state.

---


- 1 On the **Scope** window toolbar, click the Parameters button



- 2 Edit the scope parameters.
- 3 Click the **Apply** or **OK** button. The values you entered or selected apply to the next simulation.

## General Pane

Set the axis parameters, time range, tick labels, and decimation or sample time.

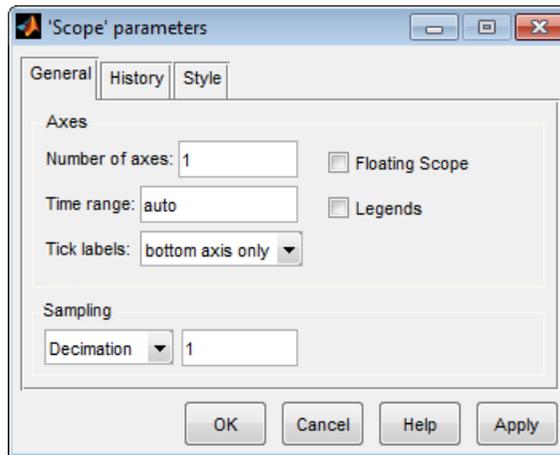

## Number of axes

Number of  $y$ -axes (graphs) and input ports on the Scope block. With the exception of the Floating Scope, there is no limit to the number of  $y$ -axes a Scope window can contain. All axes share the same time base ( $x$ -axis), but have independent  $y$ -axes.

## Time range

Range of  $x$ -axis in Scope window. Do not enter a variable name in this field. Enter either,

- A number — Each screen displays an amount of time data corresponding to the length of the range
- auto — Sets the  $x$ -axis to the duration of the simulation

## Tick labels

Specify how to display labels on the tick marks. The options are:

- all — Place tick labels on the outside of the  $x$ -axes and  $y$ -axes
- inside — Place tick labels inside all axes (available only on scope viewers)
- bottom-axis only — Place tick labels only on the  $x$ -axes
- none — Do not label ticks

# Scope and Floating Scope

---

## Sampling

Specify the number of data points to plot. Select either,

- **Decimation** — Plot signal data for every Nth time step. Entering 1 plots every time step.
- **Sample time** — Plot signal data for each time step at a specified time interval. This parameter is useful when you are using a variable-step solver where the interval between time steps might not be the same.

After you make a selection, enter a number in the data field.


## Floating scope

Changes a Scope block into a Floating Scope block.

## Legends

Displays a legend of signal names with color and style.

## History Pane

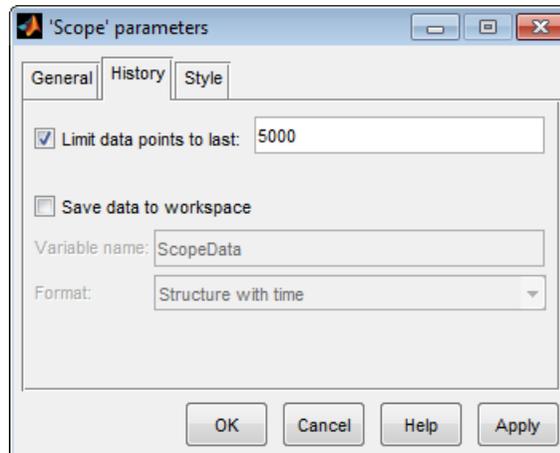

Use this pane to control the amount of data a Scope collects during a simulation and where to save the data.

## Limit data points to last

Specify the number of data points a Scope collects. If you select this option, enter a value in the data field. The Scope relies on its data history for zooming and auto-scaling operations. If the number of data points is limited to 1,000 and the simulation generates 2,000 data points, only the last 1,000 are available for regenerating the display.

---

**Note** If you do not select the **Limit data points to last** check box, the memory consumed by MATLAB steadily increases as the simulation stores the entire simulation history. The result may be an out of memory error.

For simulations with a small time step, check the memory in your system. If the available memory is limited, select **Decimation** from the **Sampling** drop down list and enter a value greater than 1. This reduces the number of points a simulation stores.

For simulations with the **Stop time** set to **inf**, always select the **Limit data points to last** check box and enter a value.

---

## Save data to workspace

Select this option to save collected data to the MATLAB workspace. If you select this option, the **Variable name** and **Format** fields become active. Simulink logs fixed-point data as double.

---

**Note** Data logging for a Floating Scope is not available. When using a Floating Scope, **Save data to workspace** is disabled.

---

## Variable name

Enter a valid MATLAB variable name. The name must be unique among all data logging variables in your model. Other data

# Scope and Floating Scope


logging variables include those defined on other Scope blocks, To Workspace blocks, and simulation return variables such as time, states, and outputs.

## Format

Select one of three formats to save data:

- Array — Use for a Scope with one set of axes.
- Structure — Use for Scopes with more than one set of axes and when you do not want to save time data.
- Structure with time — Use when you want to save time data.

## Style Pane

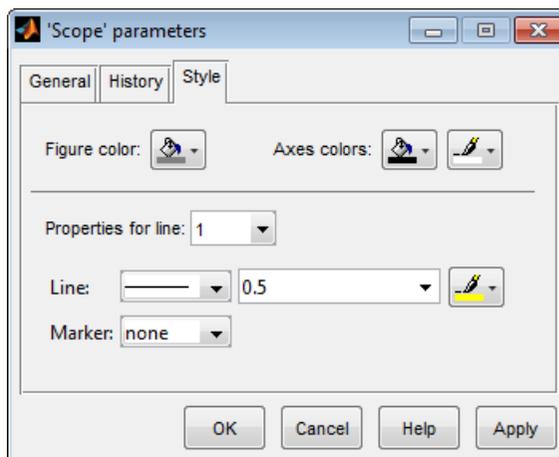

### Figure color

Select the background color for the Scope window.

### Axes colors

Select the background color for axes (graphs) with the first color pallet. Select the grid and label color with the second pallet.

### Properties for line

For graphs with more than one line, select a line number.

## Line

Select line style, width, and color.

The Scope block displays one input per axes. When displaying a vector or matrix of signals on the same axis, the Scope block assigns colors to each signal, in this order: yellow, magenta, cyan, red, green, and dark blue. If there are more than six signals, the Scope block recycles through the colors a second time.

## Marker


Select the marker style.

## Scope Zooming


To zoom in on data in both the x and y directions, select the left most **Zoom** toolbar button, and then define the zoom region with a bounded box. When you release the mouse button, the Scope displays the data in that area. You can also click a point in the area you want to zoom in on.

This figure shows a zoomed region before you release the mouse button.

# Scope and Floating Scope

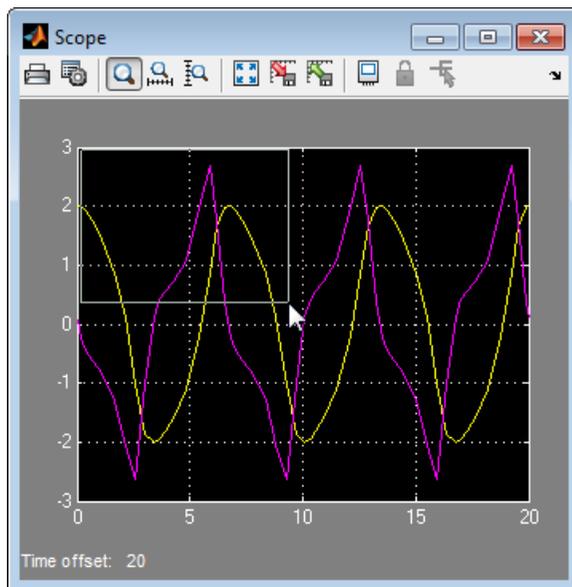

To zoom in on data in just the  $x$  direction, click the middle **Zoom** toolbar button. Define the zoom region by positioning the pointer at one end of the region, pressing and holding down the mouse button, then moving the pointer to the other end of the region. This figure shows the Scope after you define the zoom region, but before you release the mouse button.

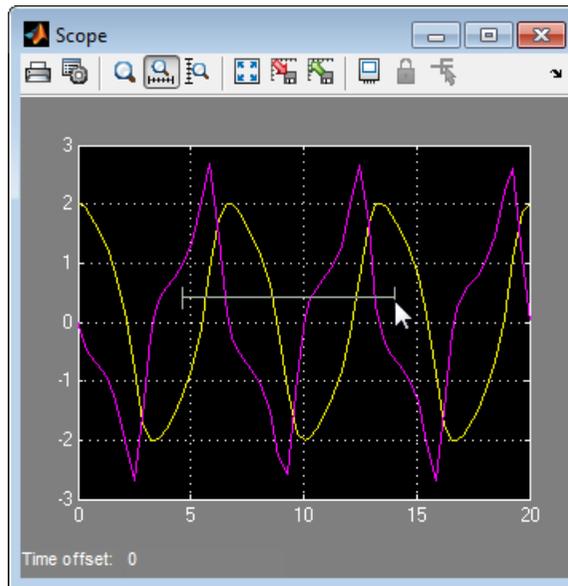

When you release the mouse button, the Scope displays the magnified region.

Zooming in the y direction works in the same way, except that you click the right most **Zoom** toolbar button before defining the zoom region.

---

**Note** Since Floating Scope does not buffer the data it displays, you cannot zoom the contents. Simulink disables (grays) the **Zoom** button on the toolbar of a Floating Scope.

---

## Autoscaling the Scope Axes

User the **Autoscale** button to view the minimum and maximum points of your signals.

# Scope and Floating Scope

---



If you click the **Autoscale** button while a simulation is running, the axes are autoscaled based on the data that appears on the current screen, and the autoscale limits are saved as the defaults. Then next simulation you run also uses the new axes limits.

---

**Note** Since the Floating Scope does not buffer the data it displays, you cannot autoscale the contents. Simulink disables the **Autoscale** button on the toolbar of a Floating Scope.

---

## Saving and Restoring the Axes Settings

Use the **Save current axes setting** toolbar button to store the current *x-axis* and *y-axis* settings.



If you select the Save current axes settings button, the block specifies its current *y*-limits as the values of the **Y-min** and **Y-max** parameters (see “Y-Axis Limits” on page 1-1517). Similarly, the block specifies its current *x*-axis limits as the value of the **Time range** parameter (see “General Pane” on page 1-1508).

Use the **Restore saved axes settings** button to restore the saved axis settings.



## Floating Scope

You can change a Scope block to a Floating Scope block from the toolbar.



To add signals to a Floating Scope, click the Signal Selector button , and then select signals from your model. For more information, see “Signal Selector”.

---

**Tip** Before using a Floating Scope in a simulation, clear the **Signal storage reuse** check box in the **Optimization > Signals and Parameters** pane of the Configuration Parameters dialog box. For more information, see “Optimization Pane: Signals and Parameters”.

---

## Y-Axis Limits

Set *y*-axis limits by right-clicking an axis (graph) and selecting **Axes Properties**. The following dialog box opens.

# Scope and Floating Scope

---



## Y-min

Enter the minimum value for the  $y$ -axis.

## Y-max

Enter the maximum value for the  $y$ -axis.

## Title

Enter the title of the plot. You can include a signal label in the title by typing %<SignalLabel> as part of the title string (%<SignalLabel> is replaced by the signal label).


---

**Note** You cannot add a title to a Floating Scope window.

---

## Time Offset

This figure shows the Scope block displaying the output of the vdp model. The simulation runs for 40 seconds. This scope shows the final 20 seconds of the simulation. The **Time offset** field displays the time corresponding to 0 on the horizontal axis. Therefore, you have to add the offset to the fixed time range values on the  $x$ -axis to get the actual time.

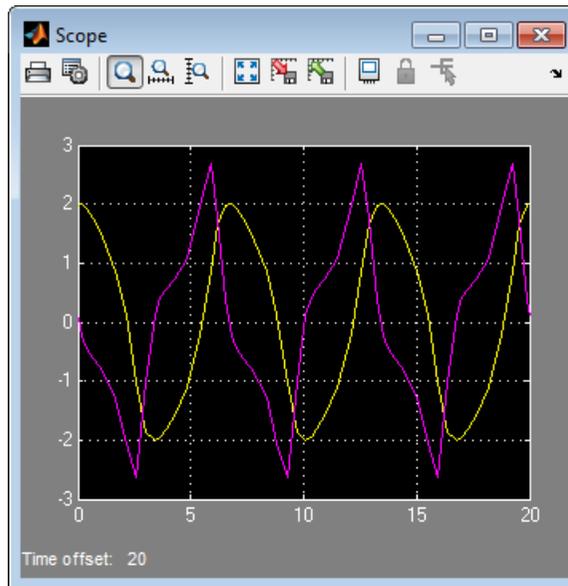

## Creating a MATLAB Figure from Scope Block Data

If you need more drawing tools than provided with the Scope window, you can save scope data to the MATLAB workspace, replot the scope data in a Figure window, and then use the Plotting Tools.

- 1 On the Scope window toolbar, click the Parameters button, and then select the **History** tab.
- 2 Select the **Save data to workspace** check box, and in the **Variable name** field, enter a valid MATLAB variable name. For example, enter  
`ScopeData`
- 3 From the **Format** list, select Structure with time. Click **OK** or **Apply**.
- 4 Run a simulation.

# Scope and Floating Scope

---

5 In the MATLAB Command Window, type:

```
plot(ScopeData.time,ScopeData.signals.values)
```

A Figure window opens with a plot of the scope data.

6 Edit the plot. See “Plots and Plotting Tools” in the MATLAB documentation.

## Characteristics


Sample Time	Inherited from driving block or you can set
States	0
Multidimensionalized	Yes

# Second-Order Integrator, Second-Order Integrator Limited

**Purpose** Integrate input signal twice

**Library** Continuous

**Description** The Second-Order Integrator block and the Second-Order Integrator Limited block solve the second-order initial value problem:

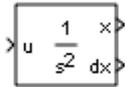

$$\frac{d^2x}{dt^2} = u,$$

$$\left. \frac{dx}{dt} \right|_{t=0} = dx_o,$$

$$x|_{t=0} = x_o,$$

where  $u$  is the input to the system. The block is therefore a dynamic system with two continuous states:  $x$  and  $dx/dt$ .

---

**Note** These two states have a mathematical relationship, namely, that  $dx/dt$  is the derivative of  $x$ . In order to satisfy this relationship throughout the simulation, Simulink places various constraints on the block parameters and behavior.

---

The Second-Order Integrator Limited block is identical to the Second-Order Integrator block with the exception that it defaults to limiting the states based on the specified upper and lower limits. For more information, see “Limiting the States” on page 1-1523.

Simulink software can use a number of different numerical integration methods to compute the outputs of the block. Each has advantages for specific applications. Use the **Solver** pane of the Configuration Parameters dialog box to select the technique best suited to your application. (For more information, see “Choose a Solver”.) The selected solver computes the states of the Second-Order Integrator block at the current time step using the current input value.

# Second-Order Integrator, Second-Order Integrator Limited

---

Use the block parameter dialog box to:

- Specify whether the source of each state initial condition is internal or external
- Specify a value for the state initial conditions
- Define upper and lower limits on either or both states
- Specify absolute tolerances for each state
- Specify names for both states
- Choose an external reset condition
- Enable zero-crossing detection
- Reinitialize  $dx/dt$  when  $x$  reaches saturation
- Specify that Simulink disregard the state limits and external reset for linearization operations

## Defining Initial Conditions


You can define the initial conditions of each state individually as a parameter on the block dialog box or input one or both of them from an external signal.

- To define the initial conditions of state  $x$  as a block parameter, use the **Initial condition source  $x$**  drop-down menu to select **internal** and enter the value in the **Initial condition  $x$**  field.
- To provide the initial conditions from an external source for state  $x$ , specify the **Initial condition source  $x$**  parameter as **external**. An additional input port appears on the block.
- To define the initial conditions of state  $dx/dt$  as a block parameter, use the **Initial condition source  $dx/dt$**  drop-down menu to select **internal** and enter the value in the **Initial condition  $dx/dt$**  field.
- To provide the initial conditions from an external source for state  $dx/dt$ , specify **Initial condition source  $dx/dt$**  as **external**. An additional input port appears on the block.

# Second-Order Integrator, Second-Order Integrator Limited

---

If you choose to use an external source for both state initial conditions, your block appears as follows.

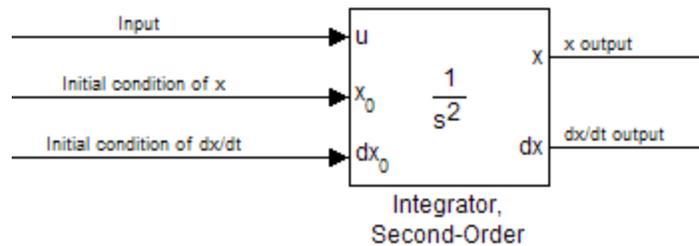

---

## Note

- Simulink does not allow initial condition values of `inf` or `NaN`.
- If you limit state  $x$  or state  $dx/dt$  by specifying saturation limits (see “Limiting the States” on page 1-1523) and one or more initial conditions are outside the corresponding limits, then the respective states are initialized to the closest valid value and a set of consistent initial conditions is calculated.

---


## Limiting the States

When modeling a second-order system, you may need to limit the block states. For example, the motion of a piston within a cylinder is governed by Newton’s Second Law and has constraints on the piston position ( $x$ ). With the Second-Order Integrator block, you can limit the states  $x$  and  $dx/dt$  independent of each other. You can even change the limits during simulation; however, you cannot change whether or not the states are limited. An important rule to follow is that an upper limit must be strictly greater than its corresponding lower limit.

# Second-Order Integrator, Second-Order Integrator Limited

---

The block appearance changes when you limit one or both states. Shown below is the appearance of the block with both states limited.

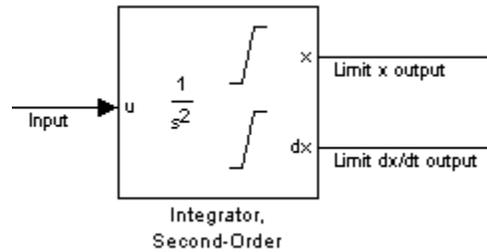


For each state, you can use the block parameter dialog box to set appropriate saturation limits.

## Limiting $x$ only

If you use the Second-Order Integrator Limited block, both states are limited by default. But you can also manually limit state  $x$  on the Second-Order Integrator block by selecting **Limit  $x$**  and entering the limits in the appropriate parameter fields.

# Second-Order Integrator, Second-Order Integrator Limited

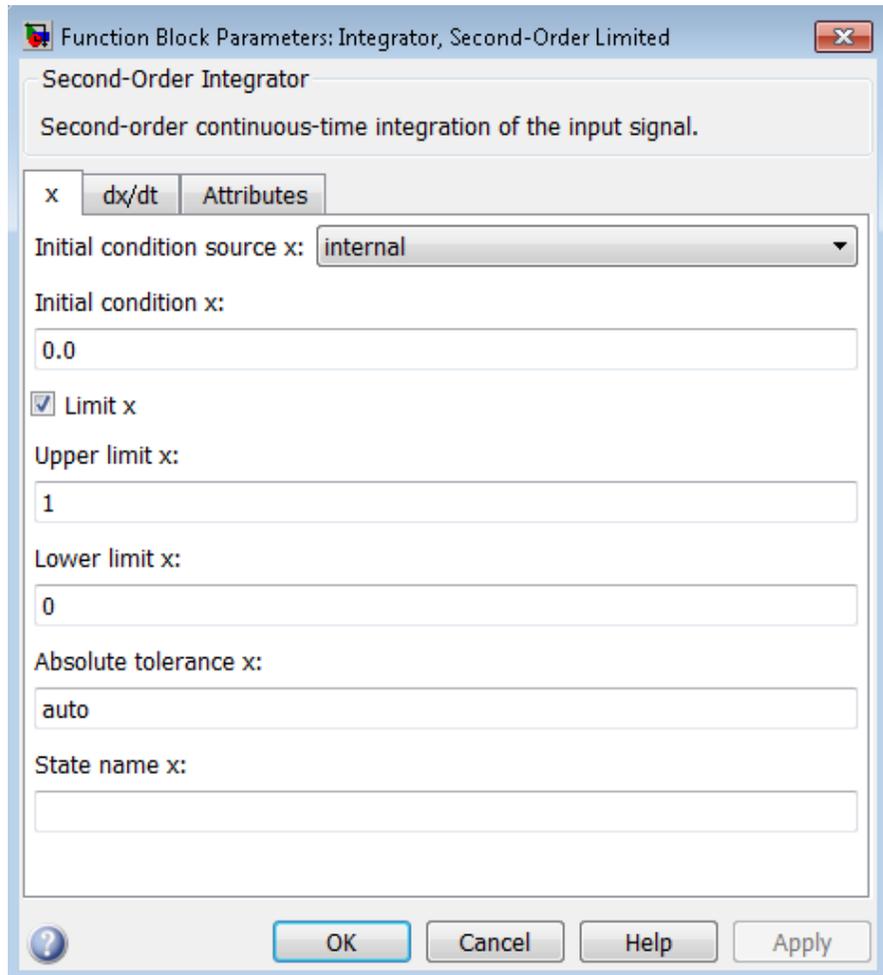

The block then determines the values of the states as follows:

- When  $x$  is less than or equal to its lower limit, the value of  $x$  is held at its lower limit and  $dx/dt$  is set to zero.

# Second-Order Integrator, Second-Order Integrator Limited

---


- When  $x$  is in between its lower and upper limits, both states follow the trajectory given by the second-order ODE.
- When  $x$  is greater than or equal to its upper limit, the value of  $x$  is held at its upper limit and  $dx/dt$  is set to zero.

You can choose to reinitialize  $dx/dt$  to a new value at the time when  $x$  reaches saturation. See “Reinitializing  $dx/dt$  when  $x$  reaches saturation” on page 1-1530

## Limiting $dx/dt$ only

As with state  $x$ , state  $dx/dt$  is set as limited by default on the **dx/dt** pane of the Second-Order Integrator Limited parameter dialog box. You can manually set this parameter, **Limit dx/dt**, on the Second-Order Integrator block. In either case, you must enter the appropriate limits for  $dx/dt$ .

# Second-Order Integrator, Second-Order Integrator Limited

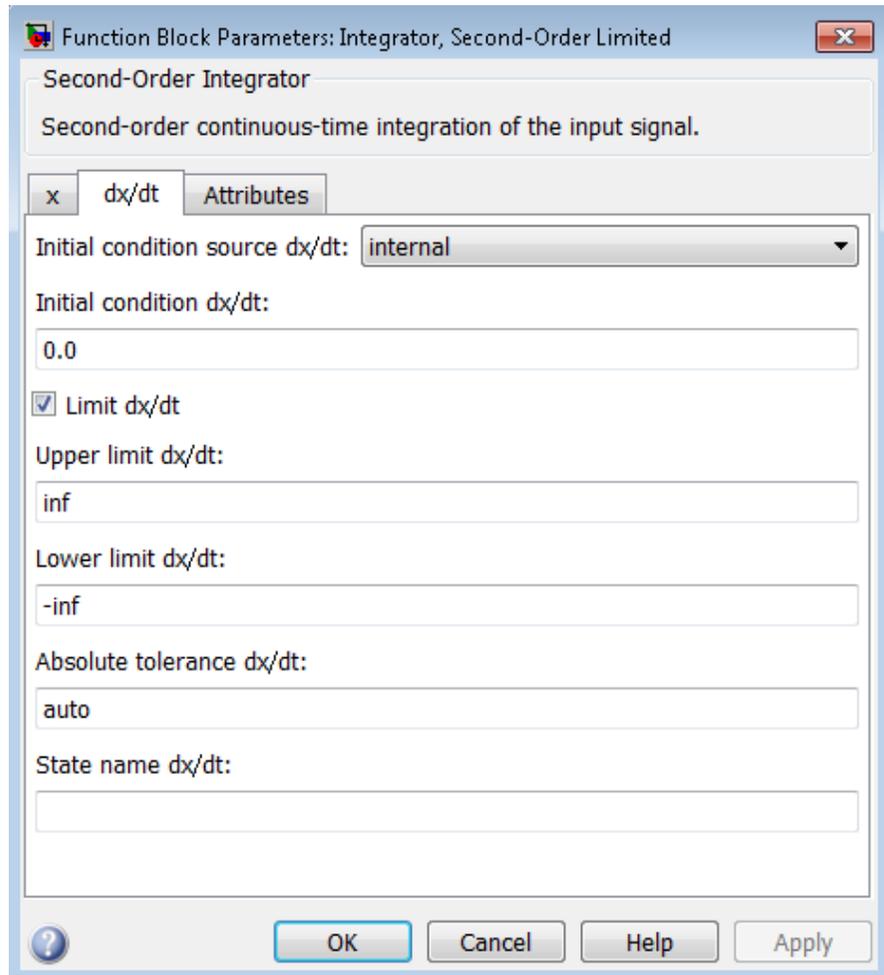

If you limit only the state  $dx/dt$ , then the block determines the values of  $dx/dt$  as follows:

- When  $dx/dt$  is less than or equal to its lower limit, the value of  $dx/dt$  is held at its lower limit.

# Second-Order Integrator, Second-Order Integrator Limited

---

- When  $dx/dt$  is in between its lower and upper limits, both states follow the trajectory given by the second-order ODE.
- When  $dx/dt$  is greater than or equal to its upper limit, the value of  $dx/dt$  is held at its upper limit.

When state  $dx/dt$  is held at its upper or lower limit, the value of  $x$  is governed by the first-order initial value problem:

$$\frac{dx}{dt} = L,$$
$$x(t_L) = x_L,$$

where  $L$  is the  $dx/dt$  limit (upper or lower),  $t_L$  is the time when  $dx/dt$  reaches this limit, and  $x_L$  is the value of state  $x$  at that time.

## Limiting Both States

When you limit both states, Simulink maintains mathematical consistency of the states by limiting the allowable values of the upper and lower limits for  $dx/dt$ . Such limitations are necessary to satisfy the following constraints:

- When  $x$  is at its saturation limits, the value of  $dx/dt$  must be zero.
- In order for  $x$  to leave the upper limit, the value of  $dx/dt$  must be strictly negative.
- In order for  $x$  to leave its lower limit, the value of  $dx/dt$  must be strictly positive.

Consequently, for such cases, the upper limit of  $dx/dt$  must be strictly positive and the lower limit of  $dx/dt$  must be strictly negative.

When both states are limited, the block determines the states as follows:

- Whenever  $x$  reaches its limits, the resulting behavior is the same as that described in “Limiting  $x$  only”.


# Second-Order Integrator, Second-Order Integrator Limited

- Whenever  $dx/dt$  reaches one of its limits, the resulting behavior is the same as that described in “Limiting  $dx/dt$  only” — including the computation of  $x$  using a first-order ODE when  $dx/dt$  is held at one of its limits. In such cases, when  $x$  reaches one of its limits, it is held at that limit and  $dx/dt$  is set to zero.
- Whenever both reach their respective limits simultaneously, the state  $x$  behavior overrides  $dx/dt$  behavior to maintain consistency of the states.

When you limit both states, you can choose to reinitialize  $dx/dt$  at the time when state  $x$  reaches saturation. If the reinitialized value is outside specified limits on  $dx/dt$ , then  $dx/dt$  is reinitialized to the closest valid value and a consistent set of initial conditions is calculated. See “Reinitializing  $dx/dt$  when  $x$  reaches saturation” on page 1-1530

## Resetting the State

The block can reset its states to the specified initial conditions based on an external signal. To cause the block to reset its states, select one of the **External reset** choices on the **Attributes** pane. A trigger port appears on the block below its input port and indicates the trigger type.

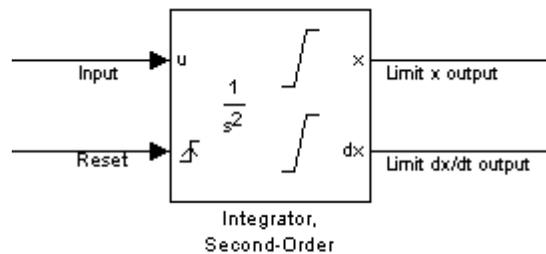

- Select **rising** to reset the states when the reset signal rises from zero to a positive value, from a negative to a positive value, or a negative value to zero.

# Second-Order Integrator, Second-Order Integrator Limited

---

- Select **falling** to reset the states when the reset signal falls from a positive value to zero, from a positive to a negative value, or from zero to negative.
- Select **either** to reset the states when the reset signal changes from zero to a nonzero value or changes sign.

The reset port has direct feedthrough. If the block output feeds back into this port, either directly or through a series of blocks with direct feedthrough, an algebraic loop results (see “Algebraic Loops”).

## Enabling Zero-Crossing Detection

This parameter controls whether zero-crossing detection is enabled for this block. By default, the **Enable zero-crossing detection** parameter is selected on the **Attributes** pane. However, this parameter is only in affect if the **Zero-crossing control**, on the **Solver** pane of the Configuration Parameters dialog, is set to **Use local settings**. For more information, see “Zero-Crossing Detection”.

## Reinitializing $dx/dt$ when $x$ reaches saturation

For certain modeling applications,  $dx/dt$  must be reinitialized when state  $x$  reaches its limits in order to pull  $x$  out of saturation immediately. You can achieve this by selecting **Reinitialize  $dx/dt$  when  $x$  reaches saturation** on the **Attributes** pane.

If this option is on, then at the instant when  $x$  reaches saturation, Simulink checks whether the current value of the  $dx/dt$  initial condition (parameter or signal) allows the state  $x$  to leave saturation immediately. If so, Simulink reinitializes state  $dx/dt$  with the value of the initial condition (parameter or signal) at that instant. If not, Simulink ignores this parameter at the current instant and sets  $dx/dt$  to zero to make the block states consistent.

This parameter only applies at the time when  $x$  actually reaches saturation limit. It does not apply at any future time when  $x$  is being held at saturation.

Refer to the sections on limiting the states for more information. For an example, see the `sldemo_bounce` example.

## Disregarding State Limits and External Reset for Linearization

For cases where you simplify your model by linearizing it, you can have Simulink disregard the limits of the states and the external reset by selecting **Ignore state limits and the reset for linearization**.

## Specifying the Absolute Tolerance for the Block Outputs

By default Simulink software uses the absolute tolerance value specified in the Configuration Parameters dialog box (see “Specifying Error Tolerances for Variable-Step Solvers”) to compute the output of the integrator blocks. If this value does not provide sufficient error control, specify a more appropriate value for state  $x$  in the **Absolute tolerance  $x$**  field and for state  $dx/dt$  in the **Absolute tolerance  $dx/dt$**  field of the parameter dialog box. Simulink uses the values that you specify to compute the state values of the block.

## Specifying the Display of the Output Ports

You can control whether or not to display the  $x$  or the  $dx/dt$  output port using the ShowOutput parameter. You can display one output port or both; however, you must select at least one.

## Specifying the State Names


You can specify the name of  $x$  states and  $dx/dt$  states using the StateNameX and StateNameDXDT parameters. However, you must specify names for either both or neither; you cannot specify names for just  $x$  or just  $dx/dt$ . Both state names must have identical type and length. Furthermore, the number of names must evenly divide the number of states.

## Selecting All Options

When you select all options, the block icon looks like this.

# Second-Order Integrator, Second-Order Integrator Limited

---

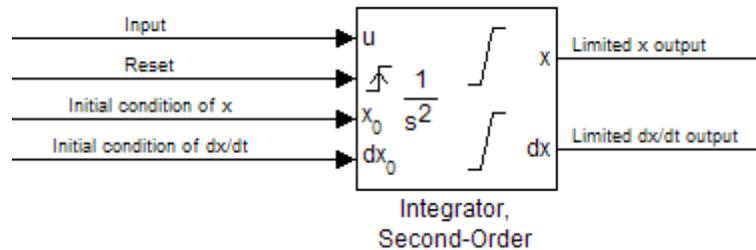

## Data Type Support


The Integrator block accepts and outputs signals of type `double` on its data ports. The external reset port accepts signals of type `double` or `Boolean`.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Second-Order Integrator, Second-Order Integrator Limited


## Parameters and Dialog Box

The **x** pane of the Second-Order Integrator block dialog box appears as follows:

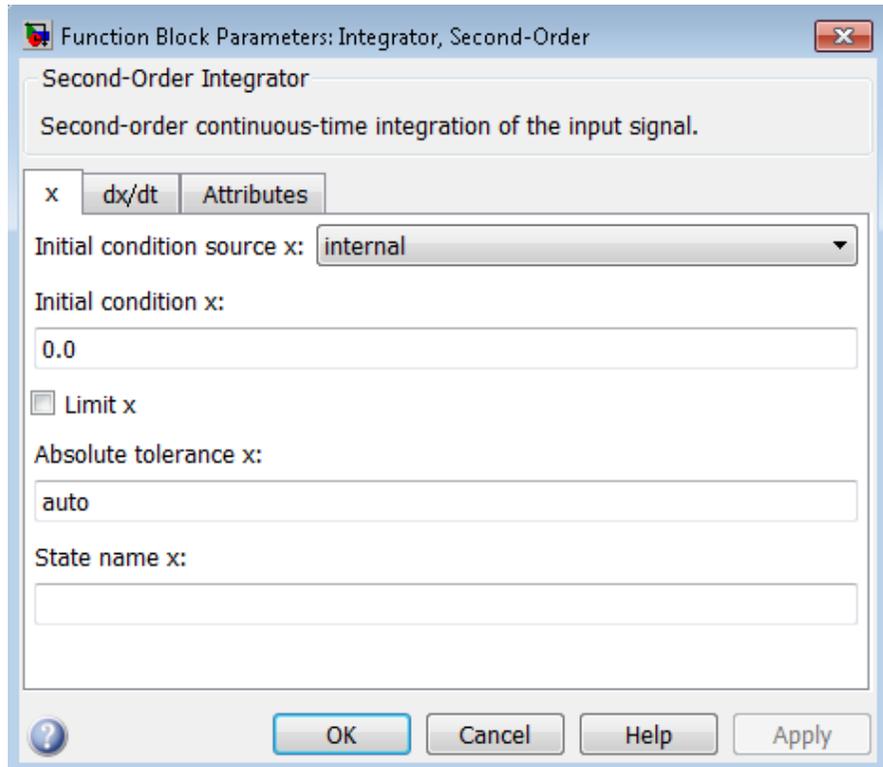


The **dx/dt** pane of the Second-Order Integrator block dialog box appears as follows:

# Second-Order Integrator, Second-Order Integrator Limited

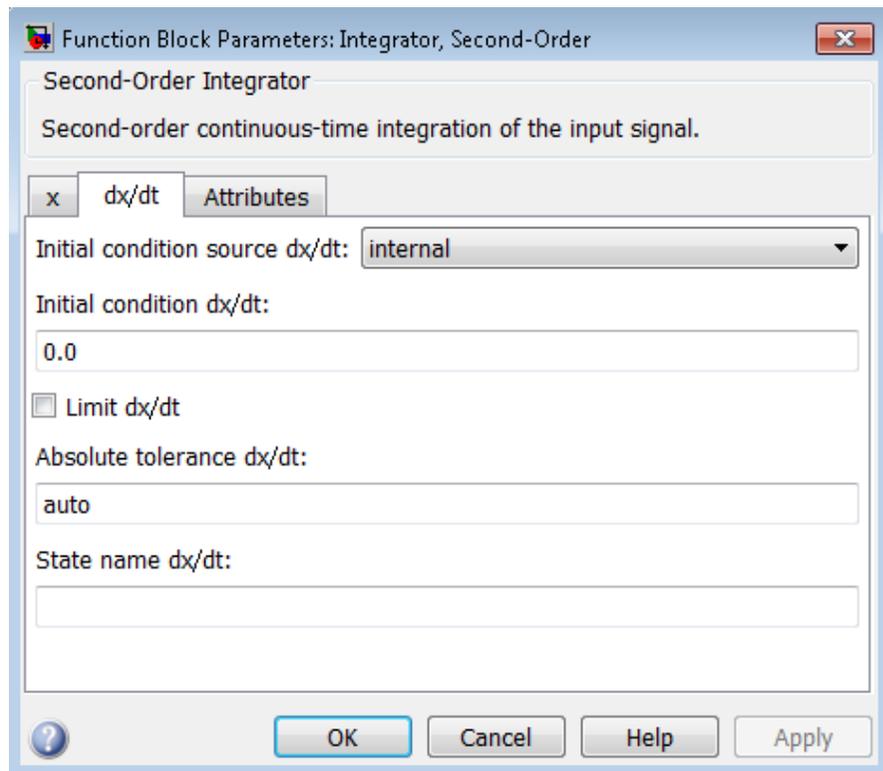

The **Attributes** pane of the Second-Order Integrator block dialog box appears as follows:

# Second-Order Integrator, Second-Order Integrator Limited

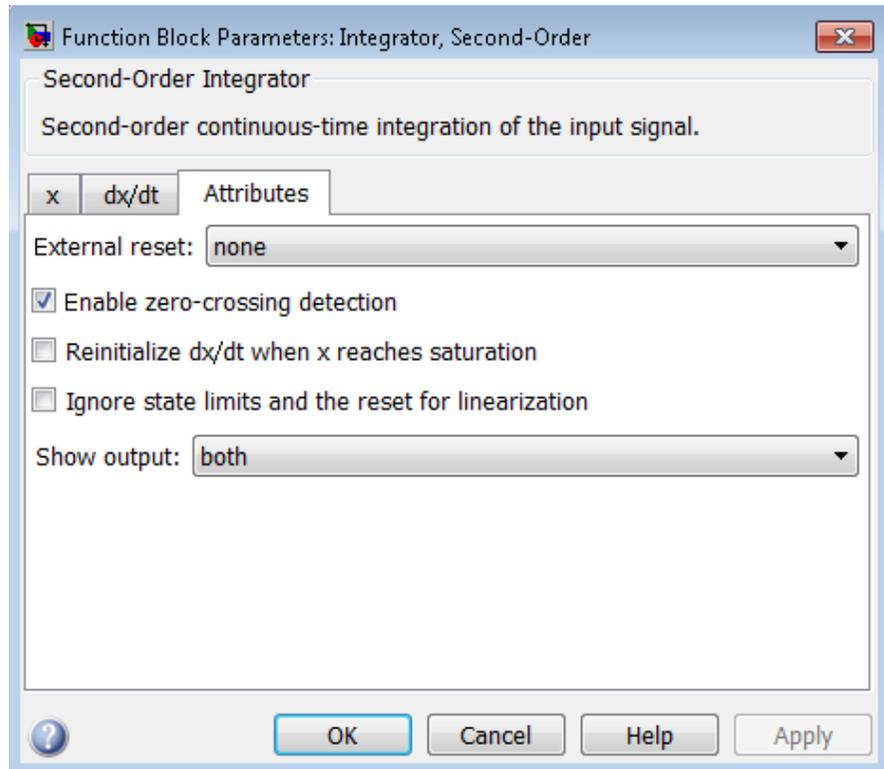

- “Initial condition source x” on page 1-1537
- “Initial condition x” on page 1-1538
- “Limit x” on page 1-1539
- “Upper limit x” on page 1-1540
- “Lower limit x” on page 1-1541
- “Absolute tolerance x” on page 1-1542
- “State name x” on page 1-1543
- “Initial condition source dx/dt” on page 1-1544

# Second-Order Integrator, Second-Order Integrator Limited

---

- “Initial condition  $dx/dt$ ” on page 1-1545
- “Limit  $dx/dt$ ” on page 1-1546
- “Upper limit  $dx/dt$ ” on page 1-1547
- “Lower limit  $dx/dt$ ” on page 1-1548
- “Absolute tolerance  $dx/dt$ ” on page 1-1549
- “State name  $dx/dt$ ” on page 1-1550
- “External reset” on page 1-1551
- “Enable zero-crossing detection” on page 1-1771
- “Reinitialize  $dx/dt$  when  $x$  reaches saturation” on page 1-1553
- “Ignore state limits and the reset for linearization” on page 1-1554
- “Show output” on page 1-1555

## Initial condition source $x$

Specify the initial condition source for state  $x$ .

### Settings

**Default:** internal

internal

Get the initial conditions of state  $x$  from the **Initial condition  $x$**  parameter.

external

Get the initial conditions of state  $x$  from an external block.

### Tip

Simulink software does not allow the initial condition of this block to be inf or NaN.

### Dependencies

Selecting internal enables the **Initial condition  $x$**  parameter.

Selecting external disables the **Initial condition  $x$**  parameter..

### Command-Line Information

**Parameter:** ICSourceX

**Type:** string

**Value:** 'internal' | 'external'

**Default:** 'internal'

# Second-Order Integrator, Second-Order Integrator Limited

---

## **Initial condition $x$**

Specify the initial condition of state  $x$ .

## **Settings**

**Default:** 0.0

## **Tip**

Simulink software does not allow the initial condition of this block to be `inf` or `NaN`.

## **Dependencies**

Setting **Initial condition source  $x$**  to `internal` enables this parameter.

Setting **Initial condition source  $x$**  to `external` disables this parameter.

## **Command-Line Information**

**Parameter:** ICX

**Type:** scalar or vector

**Value:** '0'

**Default:** '0'

# Second-Order Integrator, Second-Order Integrator Limited

---

## Limit $x$

Limit state  $x$  of the block to a value between the **Lower limit  $x$**  and **Upper limit  $x$**  parameters.

## Settings

**Default:** Off for Second-Order Integrator, On for Second-Order Integrator Limited



On

Limit state  $x$  to a value between the **Lower limit  $x$**  and **Upper limit  $x$**  parameters.



Off

Do not limit the state  $x$  output to a value between the **Lower limit  $x$**  and **Upper limit  $x$**  parameters.

## Dependencies

This parameter enables **Upper limit  $x$**  parameter.

This parameter enables **Lower limit  $x$**  parameter.

## Command-Line Information

**Parameter:** LimitX

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Second-Order Integrator, Second-Order Integrator Limited

---

## Upper limit $x$

Specify the upper limit of state  $x$ .

## Settings

**Default:** `inf` for Second-Order Integrator, `1` for Second-Order Integrator Limited

## Tip

The upper saturation limit for state  $x$  must be strictly greater than the lower saturation limit.

## Dependency

**Limit  $x$**  enables this parameter.

## Command-Line Information

**Parameter:** `UpperLimitX`

**Type:** scalar or vector

**Value:** `'inf'`

**Default:** `'inf'`

# Second-Order Integrator, Second-Order Integrator Limited

---

## Lower limit $x$

Specify the lower limit of state  $x$ .

## Settings

**Default:** `inf` for Second-Order Integrator, `0` for Second-Order Integrator Limited

## Tip

The lower saturation limit for state  $x$  must be strictly less than the upper saturation limit.

## Dependencies

**Limit  $x$**  enables this parameter.

## Command-Line Information

**Parameter:** `LowerLimitX`

**Type:** scalar or vector

**Value:** `'-inf'`

**Default:** `'-inf'`

# Second-Order Integrator, Second-Order Integrator Limited

---

## **Absolute tolerance $x$**

Specify the absolute tolerance for computing state  $x$ .

### **Settings**

**Default:** auto

- You can enter auto, -1, a positive real scalar or vector.
- If you enter auto or -1, Simulink uses the absolute tolerance value in the Configuration Parameters dialog box (see “Solver Pane”) to compute state  $x$ .
- If you enter a real scalar value, that value overrides the absolute tolerance in the Configuration Parameters dialog box and is used for computing all  $x$  states.
- If you enter a real vector, the dimension of that vector must match the dimension of state  $x$ . These values override the absolute tolerance in the Configuration Parameters dialog box.

### **Command-Line Information**

**Parameter:** AbsoluteToleranceX

**Type:** string, scalar, or vector

**Value:** 'auto' | '-1' | any positive real scalar or vector

**Default:** 'auto'

# Second-Order Integrator, Second-Order Integrator Limited

---

## State name $x$

Assign a unique name to state  $x$ .

## Settings

Default: ''

## Tips

- To assign a name to a single state, enter the name between quotes, for example, 'position'.
- To assign names to multiple  $x$  states, enter a comma-delimited list surrounded by braces, for example, {'a', 'b', 'c'}. Each name must be unique.
- The state names apply only to the selected block.
- If you specify a state name for  $x$ , you must also specify a state name for  $dx/dt$ .
- State names for  $x$  and  $dx/dt$  must have identical types and lengths.
- The number of states must be evenly divided by the number of state names. You can specify fewer names than  $x$  states, but you cannot specify more names than  $x$  states. For example, you can specify two names in a system with four states. The first name applies to the first two states and the second name to the last two states. However, you must be consistent and apply the same scheme to the state names for  $dx/dt$ .
- To assign state names with a variable in the MATLAB workspace, enter the variable without quotes. A variable can be a string or a cell array.

## Command-Line Information

Parameter: StateNameX

Type: string

Value: ' ' | user-defined

Default: ' '

# Second-Order Integrator, Second-Order Integrator Limited

---

## Initial condition source $dx/dt$

Specify the initial condition source for state  $dx/dt$ .

### Settings

**Default:** internal

internal

Get the initial conditions of state  $dx/dt$  from the **Initial condition  $dx/dt$**  parameter.

external

Get the initial conditions of state  $dx/dt$  from an external block.

### Tip

Simulink software does not allow the initial condition of this block to be `inf` or `NaN`.

### Dependencies

Selecting `internal` enables the **Initial condition  $dx/dt$**  parameter.

Selecting `external` disables the **Initial condition  $dx/dt$**  parameter.

### Command-Line Information

**Parameter:** ICSourceDXDT

**Type:** string

**Value:** 'internal' | 'external'

**Default:** 'internal'

## **Initial condition $dx/dt$**

Specify the initial condition of state  $dx/dt$ .

### **Settings**

**Default:** 0.0

### **Tip**

Simulink software does not allow the initial condition of this block to be  $\text{inf}$  or  $\text{NaN}$ .

### **Dependencies**

Setting **Initial condition source  $dx/dt$**  to `internal` enables this parameter.

Setting **Initial condition source  $dx/dt$**  to `external` disables this parameter.

### **Command-Line Information**

**Parameter:** ICDXDT

**Type:** scalar or vector

**Value:** '0'

**Default:** '0'

# Second-Order Integrator, Second-Order Integrator Limited

---

## Limit $dx/dt$

Limit the  $dx/dt$  state of the block to a value between the **Lower limit  $dx/dt$**  and **Upper limit  $dx/dt$**  parameters.

## Settings

**Default:** Off for Second-Order Integrator, On for Second-Order Integrator Limited



On

Limit state  $dx/dt$  of the block to a value between the **Lower limit  $dx/dt$**  and **Upper limit  $dx/dt$**  parameters.



Off

Do not limit state  $dx/dt$  of the block to a value between the **Lower limit  $dx/dt$**  and **Upper limit  $dx/dt$**  parameters.

## Tip

If you set saturation limits for  $x$ , then the interval defined by the **Upper limit  $dx/dt$**  and **Lower limit  $dx/dt$**  must contain zero.

## Dependencies

This parameter enables **Upper limit  $dx/dt$** .

This parameter enables **Lower limit  $dx/dt$** .

## Command-Line Information

**Parameter:** LimitDXDT

**Type:** string

**Value:** 'Off' | 'On'

**Default:** 'Off'

# Second-Order Integrator, Second-Order Integrator Limited

---

## Upper limit $dx/dt$

Specify the upper limit for state  $dx/dt$ .

### Settings

Default: 'inf'

### Tip

If you limit  $x$ , then this parameter must have a strictly positive value.

### Dependencies

Limit  $dx/dt$  enables this parameter.

### Command-Line Information

Parameter: UpperLimitDXDT

Type: scalar or vector

Value: 'inf'

Default: 'inf'

# Second-Order Integrator, Second-Order Integrator Limited

---

## Lower limit $dx/dt$

Specify the lower limit for state  $dx/dt$ .

## Settings

Default: '-inf'

## Tip

If you limit  $x$ , then this parameter must have a strictly negative value.

## Dependencies

Limit  $dx/dt$  enables this parameter.

## Command-Line Information

Parameter: LowerLimitDXDT

Type: scalar or vector

Value: '-inf'

Default: '-inf'

## Absolute tolerance $dx/dt$

Specify the absolute tolerance for computing state  $dx/dt$ .

### Settings

Default: auto

- You can enter auto, -1, a positive real scalar or vector.
- If you enter auto or -1, then Simulink uses the absolute tolerance value in the Configuration Parameters dialog box (see “Solver Pane”) to compute the  $dx/dt$  output of the block.
- If you enter a numeric value, that value overrides the absolute tolerance in the Configuration Parameters dialog box.

### Command-Line Information

**Parameter:** AbsoluteToleranceDXDT

**Type:** string, scalar, or vector

**Value:** 'auto' | '-1' | any positive real scalar or vector

**Default:** 'auto'

# Second-Order Integrator, Second-Order Integrator Limited

---

## State name $dx/dt$

Assign a unique name to state  $dx/dt$ .

## Settings

Default: ''

## Tips

- To assign a name to a single state, enter the name between quotes, for example, 'velocity'.
- To assign names to multiple  $dx/dt$  states, enter a comma-delimited list surrounded by braces, for example, {'a', 'b', 'c'}. Each name must be unique.
- The state names apply only to the selected block.
- If you specify a state name for  $dx/dt$ , you must also specify a state name for  $x$ .
- State names for  $x$  and  $dx/dt$  must have identical types and lengths.
- The number of states must be evenly divided by the number of state names. You can specify fewer names than  $dx/dt$  states, but you cannot specify more names than  $dx/dt$  states. For example, you can specify two names in a system with four states. The first name applies to the first two states and the second name to the last two states. However, you must be consistent and apply the same scheme to the state names for  $x$ .
- To assign state names with a variable in the MATLAB workspace, enter the variable without quotes. A variable can be a string or a cell array.

## Command-Line Information

**Parameter:** StateNameDXDT

**Type:** string

**Value:** ' ' | user-defined

**Default:** ' '

## External reset

Reset the states to their initial conditions when a trigger event occurs in the reset signal.

## Settings

**Default:** none

none

Do not reset the state to initial conditions.

rising

Reset the state when the reset signal rises from a zero to a positive value or from a negative to a positive value.

falling

Reset the state when the reset signal falls from a positive value to zero or from a positive to a negative value.

either

Reset the state when the reset signal changes from zero to a nonzero value or changes sign.

## Command-Line Information

**Parameter:** ExternalReset

**Type:** string

**Value:** 'none' | 'rising' | 'falling' | 'either'

**Default:** 'none'

# Second-Order Integrator, Second-Order Integrator Limited

---

## Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

### Settings

Default: On



On

Enable zero-crossing detection.



Off

Do not enable zero-crossing detection.

### Command-Line Information

Parameter: ZeroCross

Type: string

Value: 'on' | 'off'

Default: 'on'

# Second-Order Integrator, Second-Order Integrator Limited

---

## Reinitialize $dx/dt$ when $x$ reaches saturation

At the instant when state  $x$  reaches saturation, reset  $dx/dt$  to its current initial conditions.

### Settings

Default: Off



On

Reset  $dx/dt$  to its initial conditions when  $x$  becomes saturated.



Off

Do not reset  $dx/dt$  to its initial conditions when  $x$  becomes saturated.

### Tip

The  $dx/dt$  initial condition must have a value that enables  $x$  to leave saturation immediately. Otherwise, Simulink ignores the initial conditions for  $dx/dt$  to preserve mathematical consistency of block states.

### Command-Line Information

**Parameter:** ReinitDXDTwhenXreachesSaturation

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Second-Order Integrator, Second-Order Integrator Limited

---

## Ignore state limits and the reset for linearization

For linearization purposes, have Simulink ignore the specified state limits and the external reset.

### Settings

Default: Off



On

Ignore the specified state limits and the external reset.



Off

Apply the specified state limits and the external reset setting.

### Command-Line Information

**Parameter:** IgnoreStateLimitsAndResetForLinearization

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Second-Order Integrator, Second-Order Integrator Limited

---

## Show output

Specify the output ports on the block.

## Settings

**Default:** both

both

Show both  $x$  and  $dx/dt$  output ports.

$x$

Show only the  $x$  output port.

$dx/dt$

Show only the  $dx/dt$  output port.

## Command-Line Information

**Parameter:** ShowOutput

**Type:** string

**Value:** 'both' | 'x' | 'dxdt'

**Default:** 'both'


# Selector

---

**Purpose** Select input elements from vector, matrix, or multidimensional signal

**Library** Signal Routing

**Description** The Selector block generates as output selected or reordered elements of an input vector, matrix, or multidimensional signal.

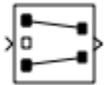

A Selector block accepts vector, matrix, or multidimensional signals as input. The parameter dialog box and the block's appearance change to reflect the number of dimensions of the input.

Based on the value you enter for the **Number of input dimensions** parameter, a table of indexing settings is displayed. Each row of the table corresponds to one of the input dimensions in **Number of input dimensions**. For each dimension, you define the elements of the signal to work with. Specify a vector signal as a 1-D signal and a matrix signal as a 2-D signal. When you configure the Selector block for multidimensional signal operations, the block icon changes.

For example, assume a 6-D signal with a one-based index mode. The table of the Selector block dialog changes to include one row for each dimension. Suppose that you define each dimension with the following entries:

- Dimension 1
  - **Index Option**, select `Select all`
- Dimension 2
  - **Index Option**, select `Starting index (dialog)`
  - **Index**, enter 2
  - **Output Size**, enter 5
- Dimension 3
  - **Index Option**, select `Index vector (dialog)`
  - **Index**, enter [1 3 5]
- Dimension 4

- **Index Option**, select Starting index (port)
- **Output Size**, enter 8
- Dimension 5
  - **Index Option**, select Index vector (port)
- Dimension 6
  - **Index Option**, select Starting and ending indices (port)

The output will be  $Y=U(1:\text{end}, 2:6, [1\ 3\ 5], \text{Idx}4:\text{Idx}4+7, \text{Idx}5, \text{Idx}6(1):\text{Idx}6(2))$ , where  $\text{Idx}4$ ,  $\text{Idx}5$ , and  $\text{Idx}6$  are the index ports for dimensions 4, 5, and 6.


You can use an array of buses as an input signal to a Selector block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

## Data Type Support

The data port of the Selector block accepts signals of any signal type and any data type that Simulink supports, including fixed-point and enumerated data types. The data port accepts mixed-type signals. The index port accepts built-in data types, but not Boolean. The elements of the output have the same type as the corresponding selected input elements.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Selector

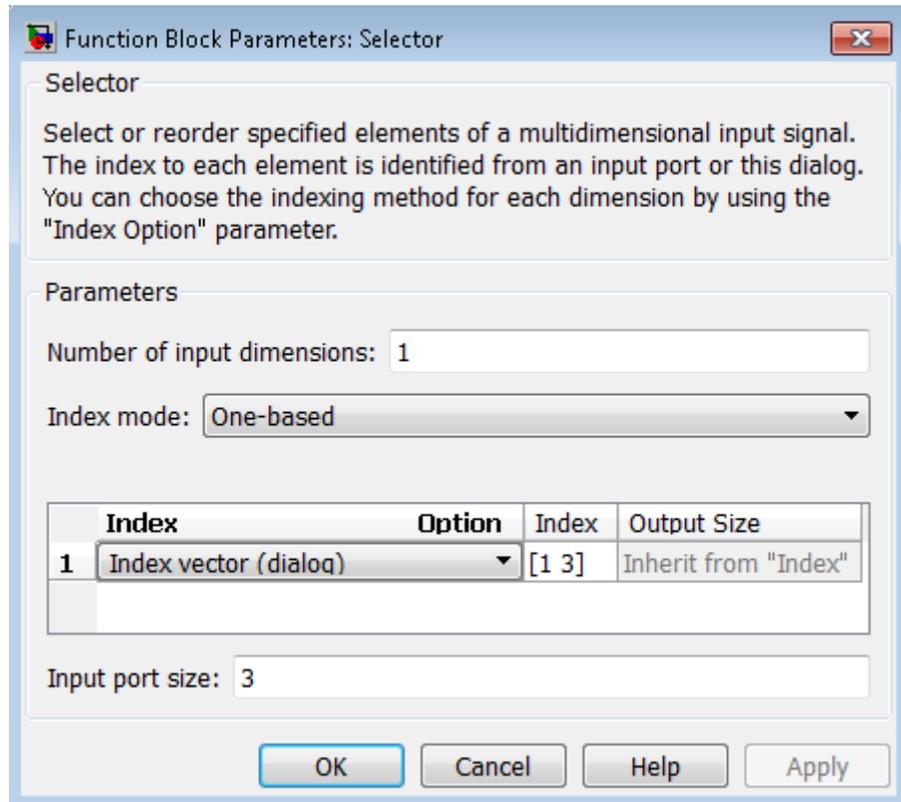

## Parameters and Dialog Box

### Number of input dimensions

Enter the number of dimensions of the input signal.

### Index mode

Specifies the indexing mode: One-based or Zero-based. If One-based is selected, an index of 1 specifies the first element of the input vector, 2, the second element, and so on. If Zero-based is selected, an index of 0 specifies the first element of the input vector, 1, the second element, and so on.

## Index Option

Define, by dimension, how the elements of the signal are to be indexed. From the list, select:

- Select all

No further configuration is required. All elements are selected.

- Index vector (dialog)

Enables the **Index** column. Enter the vector of indices of the elements.

- Index vector (port)

No further configuration is required.

- Starting index (dialog)

Enables the **Index** and **Output Size** columns. Enter the starting index of the range of elements to select in the **Index** column and the number of elements to select in the **Output Size** column.

- Starting index (port)

Enables the **Output Size** column. Enter the number of elements to be selected in the **Output Size** column.

- Starting and ending indices (port)

No further configuration is required.

---

**Note** Using this option results in a variable-size output signal. When you update the output dimension is set to be the same as the input signal dimension. During execution, the output dimension is updated based on the signal feeding the index.

---

The **Index** and **Output Size** columns appear as needed.

# Selector

---

## Index

If the **Index Option** is `Index vector (dialog)`, enter the index of each element in which you are interested.

If the **Index Option** is `Starting index vector (dialog)`, enter the starting index of the range of elements to be selected.

## Output Size

Enter the width (number of elements from the starting point) of the block output signal.

## Input port size

Specify the width of the block input signal (-1 for inherited) — 1-D signals only.

## Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

---

**Note** For 1-D signals, the **Sample time** parameter is available only when **Index Option** is `Starting index (port)`, `Index vector (port)`, or `Starting and ending indices (port)`. For all other **Index Option** settings, the Selector block becomes a virtual block and the **Sample time** parameter does not appear.



---

## Examples

The `sldemo_dblcart1` model shows the use of three Selector blocks. The following diagram shows what the model looks like after you enable **Display > Signals & Ports > Signal Dimensions** and simulate the model.



# Selector

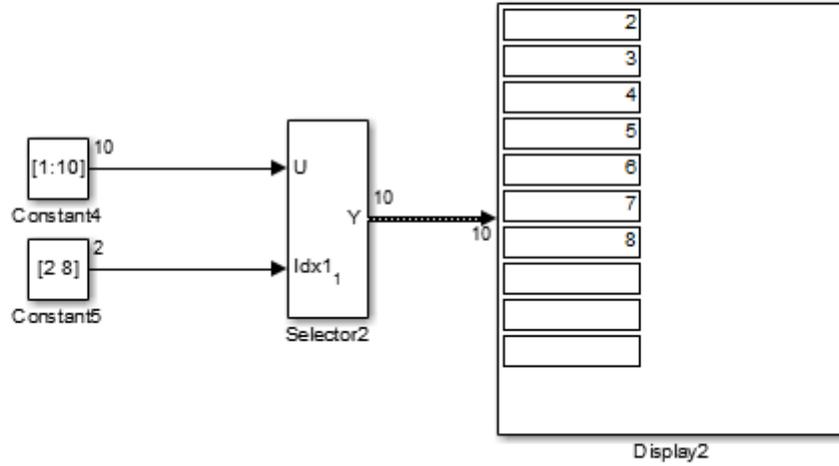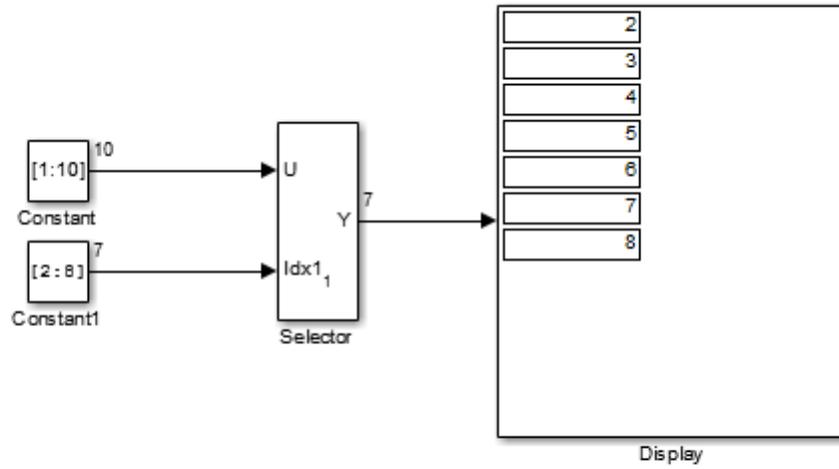

The Selector block sets **Index Option** to Index vector (port), which uses the input signal from Constant1 as the index vector. The dimension of the input signal is 7, so the Display block shows the 7 values of the Constant1 block. The Selector2 block sets the **Input port size** parameter to 10, which is the size of the largest input signal to the Selector1 block.

The Selector2 block uses the same configuration as the Selector block, except that the **Index Option** is set to Starting and ending indices (port). The output uses the size of **Input port size** parameter (10), even though the size of the input signal is 7. The Display2 block shows empty boxes for the three extra dimensions.

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Dimensionalized	Yes
Multidimensionalized	Yes
Virtual	Yes, when <b>Number of input dimensions</b> is 1 and <b>Index Option</b> is Select all, Index vector (dialog), or Starting index (dialog)  For more information, see “Virtual Blocks” in the Simulink documentation.
Zero-Crossing Detection	No


# S-Function

---

**Purpose** Include S-function in model

**Library** User-Defined Functions

**Description** The S-Function block provides access to S-functions from a block diagram. The S-function named as the **S-function name** parameter can be a Level-1 MATLAB or a Level-1 or Level-2 C MEX S-function (see “S-Function Basics” for information on how to create S-functions).

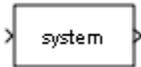

---

**Note** Use the Level-2 MATLAB S-Function block to include a Level-2 MATLAB S-function in a block diagram.

---


The S-Function block allows additional parameters to be passed directly to the named S-function. The function parameters can be specified as MATLAB expressions or as variables separated by commas. For example,

A, B, C, D, [eye(2,2);zeros(2,2)]

Note that although individual parameters can be enclosed in brackets, the list of parameters must not be enclosed in brackets.

The S-Function block displays the name of the specified S-function and the number of input and output ports specified by the S-function. Signals connected to the inputs must have the dimensions specified by the S-function for the inputs.

**Data Type Support** Depends on the implementation of the S-Function block.

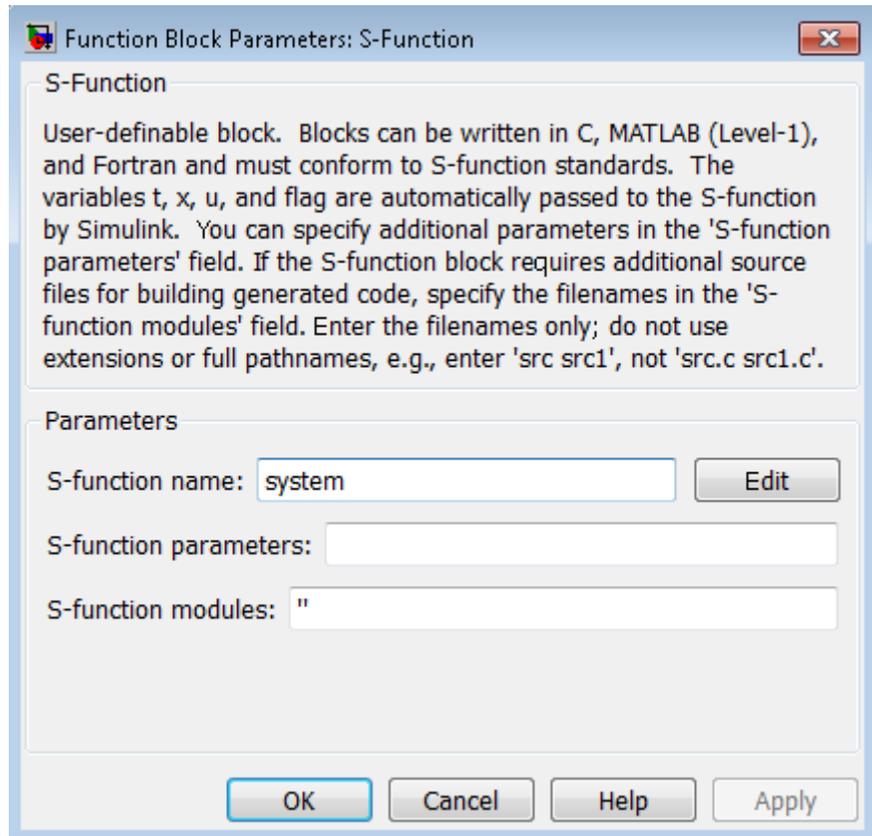

## Parameters and Dialog Box

### S-function name

The S-function name.

### S-function parameters

Additional S-function parameters. See the preceding block description for information on how to specify the parameters.

### S-function modules

This parameter applies only if this block represents a C MEX S-function and you intend to use the Simulink Coder software to generate code from the model containing the block. If you use it,

# S-Function

---

when you are ready to generate code, you must force the coder to rebuild the top model as explained in “Control Regeneration of Top Model Code”.

For more information on using this parameter, see “Specify Additional Source Files for an S-Function” in the Simulink Coder documentation.

## Characteristics

Direct Feedthrough	Depends on contents of S-function
Sample Time	Depends on contents of S-function
Scalar Expansion	Depends on contents of S-function
Dimensionalized	Depends on contents of S-function
Multidimensionalized	Yes
Zero-Crossing Detection	No

**Purpose** Create S-function from C code that you provide

**Library** User-Defined Functions

## Description



The S-Function Builder block creates a C MEX S-function from specifications and C source code that you provide. See “Build S-Functions Automatically” for detailed instructions on using the S-Function Builder block to generate an S-function.

Instances of the S-Function Builder block also serve as wrappers for generated S-functions in Simulink models. When simulating a model containing instances of an S-Function Builder block, Simulink software invokes the generated S-function associated with each instance to compute the instance’s output at each time step.

---

**Note** The S-Function Builder block does not support masking. However, you can mask a Subsystem block that contains an S-Function Builder block. For more information, see “Masking”.

---

## Data Type Support

The S-Function Builder can accept and output complex, 1-D, or 2-D signals and nonvirtual buses. For each of these cases, the signals must have a data type that Simulink supports.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

See “S-Function Builder Dialog Box” in the online documentation for information on using the S-Function Builder block’s parameter dialog box.

# Shift Arithmetic

---

**Purpose** Shift bits or binary point of signal

**Library** Logic and Bit Operations

**Description** **Supported Shift Operations**

The Shift Arithmetic block can shift the bits or the binary point of an input signal, or both.

For example, shifting the binary point on an input of data type `sfixed(8)`, by two places to the right and left, gives these decimal values.

Shift Operation	Binary Value	Decimal Value
No shift (original number)	11001.011	-6.625
Binary point shift right by two places	1100101.1	-26.5
Binary point shift left by two places	110.01011	-1.65625

This block performs arithmetic bit shifts on signed numbers. Therefore, the block recycles the most significant bit for each bit shift. Shifting the bits on an input of data type `sfixed(8)`, by two places to the right and left, gives these decimal values.

Shift Operation	Binary Value	Decimal Value
No shift (original number)	11001.011	-6.625
Bit shift right by two places	11110.010	-1.75
Bit shift left by two places	00101.100	5.5

## Data Type Support

The block supports input signals of the following data types:

Input Signal	Supported Data Types
u	<ul style="list-style-type: none"> <li>• Floating point</li> <li>• Built-in integer</li> <li>• Fixed point</li> </ul>
s	<ul style="list-style-type: none"> <li>• Floating point</li> <li>• Built-in integer</li> <li>• Fixed-point integer</li> </ul>

The following rules determine the output data type:

Data Type of Input u	Output Data Type
Floating point	Same as input u
Built-in integer or fixed point	<ul style="list-style-type: none"> <li>• Sign of u</li> <li>• Word length of u</li> <li>• Slope of <math>u * 2^{(\max(\text{binary points to shift}))}</math></li> <li>• Bias of <math>u * 2^{(\max(\text{binary points to shift} - \text{bits to shift}))}</math>, for bit shifts where the direction is bidirectional or right</li> <li>• Bias of <math>u * 2^{(\max(\text{binary points to shift} + \text{bits to shift}))}</math>, for bit shifts where the direction is left</li> </ul>

# Shift Arithmetic

---


The block parameters support the following data types:

<b>Parameter</b>	<b>Supported Data Types</b>
<b>Bits to shift: Number</b>	<ul style="list-style-type: none"><li>• Built-in integer</li><li>• Fixed-point integer</li></ul>
<b>Binary points to shift</b>	<ul style="list-style-type: none"><li>• Built-in integer</li><li>• Fixed-point integer</li></ul>

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

The Shift Arithmetic block dialog box appears as follows:

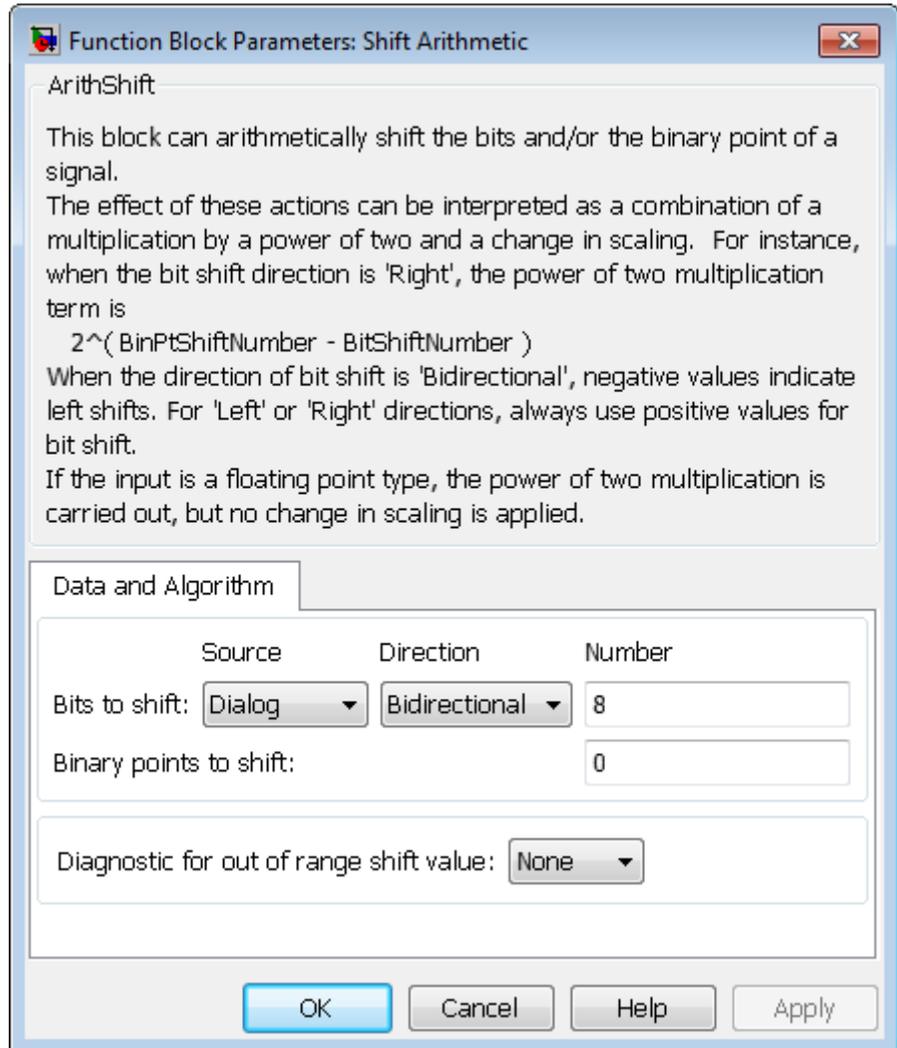

# Shift Arithmetic

---

## **Bits to shift: Source**

Specify whether to enter the bits to shift on the dialog box or to inherit the values from an input port.

## **Bits to shift: Direction**

Specify the direction in which to shift bits: left, right, or bidirectional.

## **Bits to shift: Number**

Specify a scalar, vector, or array of bit shift values. This parameter is available when **Bits to shift: Source** is Dialog.

<b>If the direction is...</b>	<b>Then...</b>
Left or Right	Use positive integers to specify bit shifts.
Bidirectional	Use positive integers for right shifts and negative integers for left shifts.

## **Binary points to shift**

Specify an integer number of places to shift the binary point of the input signal. A positive value indicates a right shift, while a negative value indicates a left shift.

## **Diagnostic for out-of-range shift value**

Specify whether to produce a warning or error during simulation when the block contains an out-of-range shift value. Options include:

- None — No warning or error appears.
- Warning — Display a warning in the MATLAB Command Window and continue the simulation.
- Error — Halt the simulation and display an error in the Diagnostic Viewer.

For more information, see “Simulation and Accelerator Mode Results for Out-of-Range Bit Shift Values” on page 1-1575.

## **Check for out-of-range 'Bits to shift' in generated code**

Select this check box to include conditional statements in the generated code that protect against out-of-range bit shift values. This check box is available when **Bits to shift: Source** is Input port.


For more information, see “Code Generation for Out-of-Range Bit Shift Values” on page 1-1577.

# Shift Arithmetic


## Out-of-Range Bit Shifts

### Definition of an Out-of-Range Bit Shift

Suppose that WL is the input word length. The shaded regions in the following diagram show out-of-range bit shift values for left and right shifts.

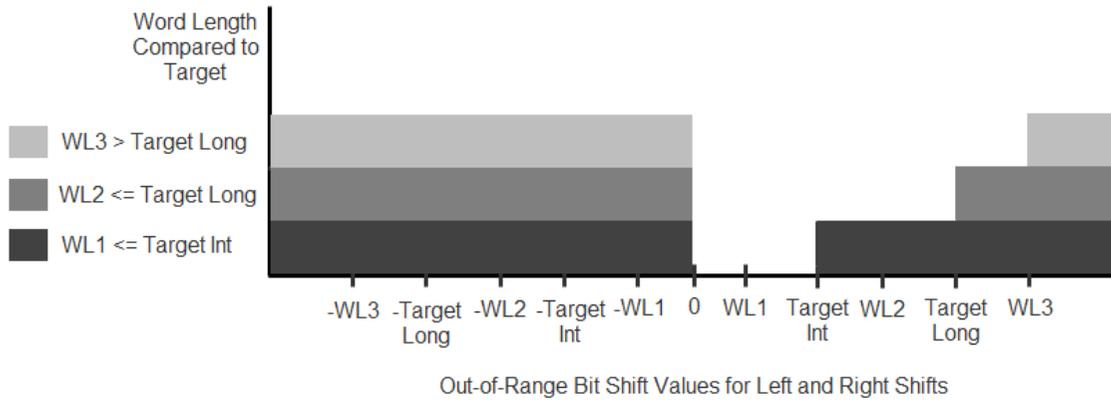

Similarly, the shaded regions in the following diagram show out-of-range bit shift values for bidirectional shifts.

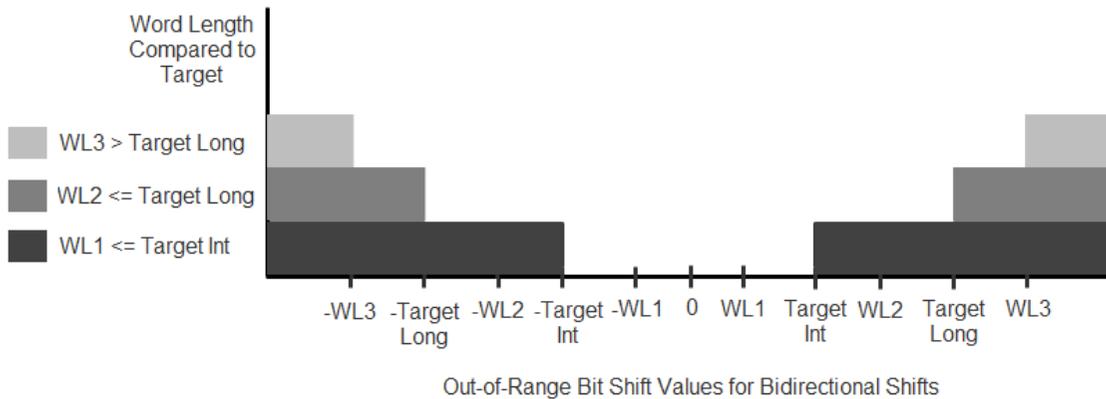


The diagnostic for out-of-range bit shifts responds as follows, depending on the mode of operation:

Mode	Diagnostic for out-of-range shift value		
	None	Warning	Error
Simulation	Do not report any warning or error.	Report a warning but continue simulation.	Report an error and stop simulation.
Accelerator modes and code generation	Has no effect.		


## Simulation and Accelerator Mode Results for Out-of-Range Bit Shift Values

Suppose that  $U$  is the input,  $WL$  is the input word length, and  $Y$  is the output. The output for an out-of-range bit shift value for left shifts is as follows:

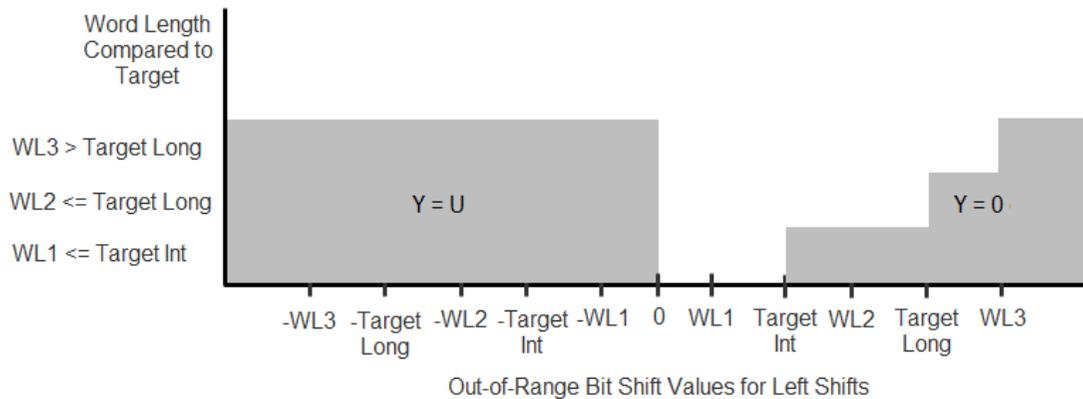


# Shift Arithmetic

Similarly, the output for an out-of-range bit shift value for right shifts is as follows:

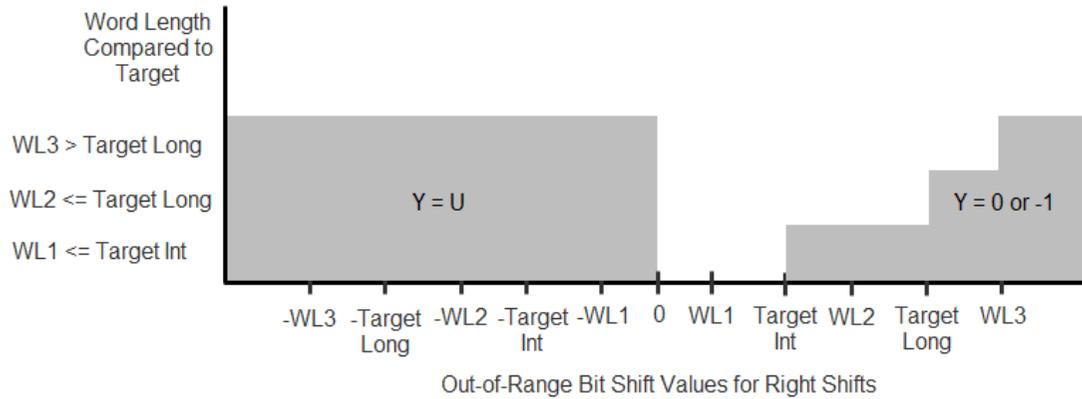

For bidirectional shifts, the output for an out-of-range bit shift value is as follows:

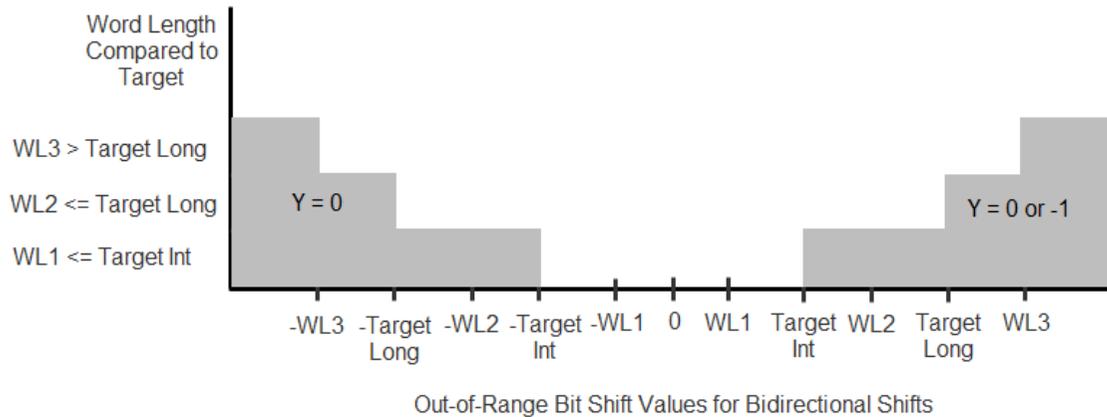

## Code Generation for Out-of-Range Bit Shift Values

For the generated code, the method for handling out-of-range bit shifts depends on the setting of **Check for out-of-range 'Bits to shift' in generated code**.

Check Box Setting	Generated Code	Simulation Results Compared to Generated Code
Selected	Includes conditional statements to protect against out-of-range bit shift values.	Simulation and Accelerator mode results match those of code generation.
Cleared	Does not protect against out-of-range bit shift values.	<ul style="list-style-type: none"><li>• For in-range values, simulation and Accelerator mode results match those of code generation.</li><li>• For out-of-range values, the code generation results are compiler specific.</li></ul>


For right shifts on signed negative inputs, most C compilers use an arithmetic shift instead of a logical shift. Generated code for the Shift Arithmetic block depends on this compiler behavior.

# Shift Arithmetic

## Examples

### Block Output for Right Bit Shifts

The following model compares the behavior of right bit shifts using the dialog box versus the block input port.

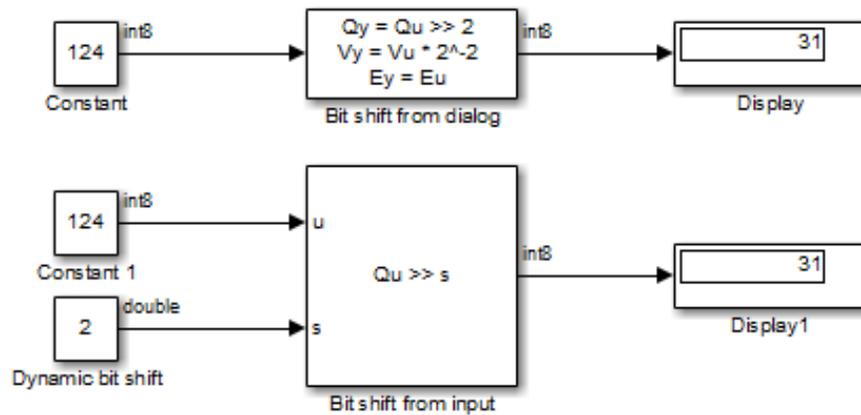

The key block parameter settings of the Constant blocks are:

Block	Parameter	Setting
Constant and Constant1	Constant value	124
	Output data type	int8
Dynamic bit shift	Constant value	2
	Output data type	Inherit: Inherit from 'Constant value'

The key block parameter settings of the Shift Arithmetic blocks are:

<b>Block</b>	<b>Parameter</b>	<b>Setting</b>
Bit shift from dialog	<b>Bits to shift: Source</b>	Dialog
	<b>Bits to shift: Direction</b>	Right
	<b>Bits to shift: Number</b>	2
Bit shift from input	<b>Bits to shift: Source</b>	Input port
	<b>Bits to shift: Direction</b>	Right


The top Shift Arithmetic block takes an input of 124, which corresponds to 01111100 in binary format. Shifting the number of bits two places to the right produces 00011111 in binary format. Therefore, the block outputs 31.

The bottom Shift Arithmetic block performs the same operation as the top block. However, the bottom block receives the bit shift value through an input port instead of the dialog box. By supplying this value as an input signal, you can change the number of bits to shift during simulation.

# Shift Arithmetic

## Block Output for Binary Point Shifts

The following model shows the effect of binary point shifts.

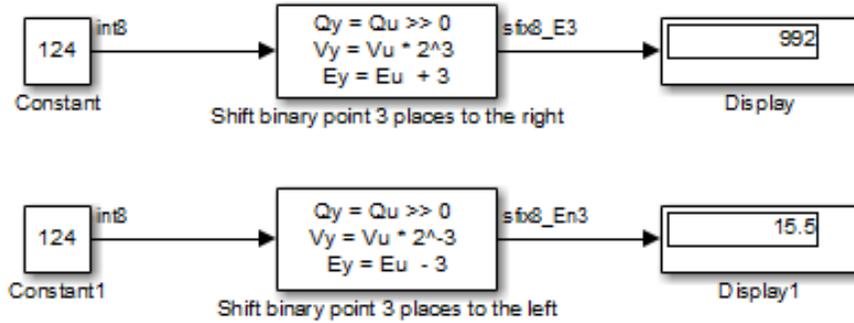

The key block parameter settings of the Constant blocks are:

Block	Parameter	Setting
Constant and Constant1	Constant value	124
	Output data type	int8

The key block parameter settings of the Shift Arithmetic blocks are:

Block	Parameter	Setting
Shift binary point 3 places to the right	Bits to shift: Source	Dialog
	Bits to shift: Direction	Bidirectional
	Bits to shift: Number	0
	Binary points to shift: Number	3
Shift binary point 3 places to the left	Bits to shift: Source	Dialog
	Bits to shift: Direction	Bidirectional
	Bits to shift: Number	0
	Binary points to shift: Number	-3

The top Shift Arithmetic block takes an input of 124, which corresponds to 01111100 in binary format. Shifting the binary point three places to the right produces 01111100000 in binary format. Therefore, the top block outputs 995.

The bottom Shift Arithmetic block also takes an input of 124. Shifting the binary point three places to the left produces 01111.100 in binary format. Therefore, the bottom block outputs 15.5.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from the driving block

# Shift Arithmetic

---

Scalar Expansion	Yes
Dimensionalized	Yes
Multidimensionalized	Yes, for the input port that specifies bit shift values
Zero-Crossing Detection	No

**Purpose** Indicate sign of input

**Library** Math Operations


**Description** **Block Behavior for Real Inputs**

For real inputs, the Sign block outputs the sign of the input:



Input	Output
Greater than zero	1
Equal to zero	0
Less than zero	-1

For vector and matrix inputs, the block outputs a vector or matrix where each element is the sign of the corresponding input element, as shown in this example:

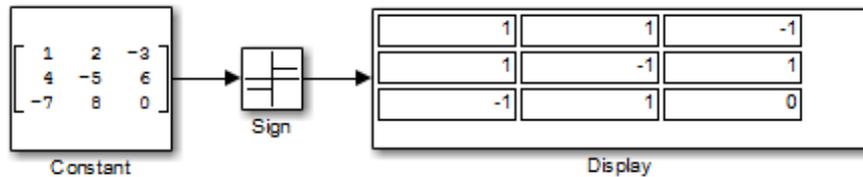


**Block Behavior for Complex Inputs**

When the input  $u$  is a complex scalar, the block output matches the MATLAB result for:

$$\text{sign}(u) = u ./ \text{abs}(u)$$

When an element of a vector or matrix input is complex, the block uses the same formula that applies to scalar input, as shown in this example:

# Sign

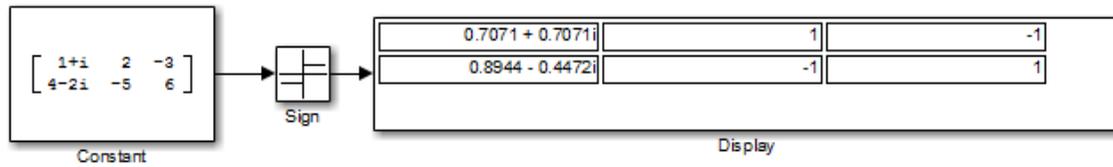


## Data Type Support

The Sign block supports real inputs of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

The block supports complex inputs only for floating-point data types, `double` and `single`. The output uses the same data type as the input.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

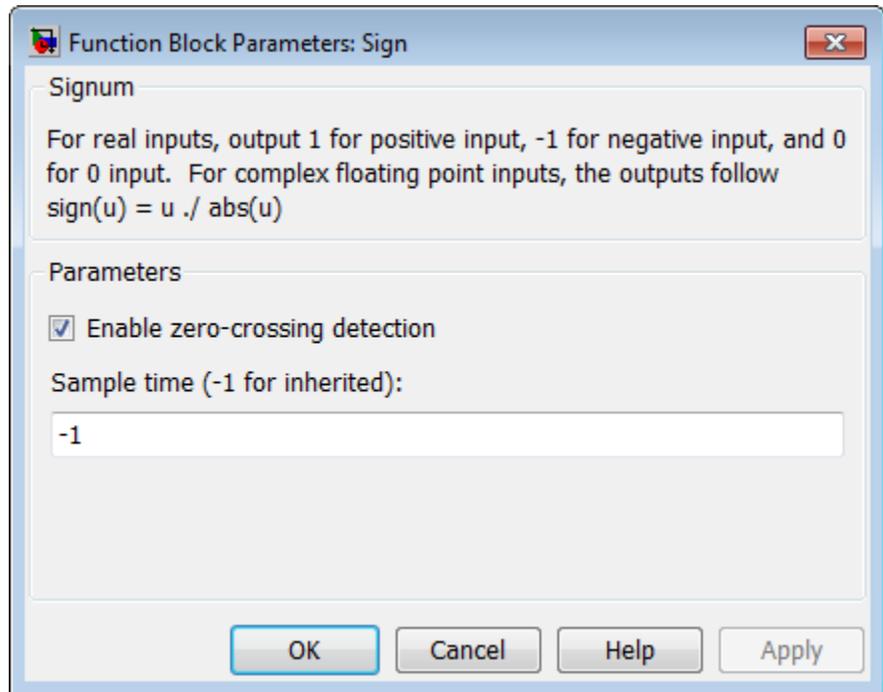

## Parameters and Dialog Box

### Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

### Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation for more information.

## Examples

The following Simulink examples show how to use the Sign block:

- `sldemo_fuelsys` (in the Engine Gas Dynamics/Throttle & Manifold/Throttle subsystem)
- `sldemo_hardstop`

# Sign


---

<b>Characteristics</b>	Direct Feedthrough	Yes
	Sample Time	Specified in the <b>Sample time</b> parameter
	Scalar Expansion	N/A
	Dimensionalized	Yes
	Multidimensionalized	No
	Zero-Crossing Detection	Yes, if enabled

**Purpose** Create and generate interchangeable groups of signals whose waveforms are piecewise linear

**Library** Sources

## Description

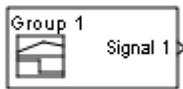

The Signal Builder block allows you to create interchangeable groups of piecewise linear signal sources and use them in a model. See “Signal Groups”.

---

**Note** Use the `signalbuilder` function to create and access Signal Builder blocks programmatically.

---

**Data Type Support** The Signal Builder block outputs a virtual nonhierarchical bus, scalar, or array of real signals of type `double`.

For more information, see “Data Types Supported by Simulink”.

**Parameters and Dialog Box** The Signal Builder block has the same dialog box as that of a Subsystem block. To display the dialog box, right-click the block and select **Subsystem Parameters**.

**Examples** The following examples show how to use the Signal Builder block:

- `sldemo_pid2dof`
- `sf_test_vectors`

# Signal Builder


---

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter, accessible by selecting <b>File &gt; Simulation Options</b> in the Signal Builder block <ul style="list-style-type: none"><li>• Zero represents a continuous sample time.</li><li>• A positive integer represents a discrete sample time.</li></ul>
Scalar Expansion	Yes, of parameters
Dimensionalized	Yes
Zero Crossing	Yes

<b>Purpose</b>	Convert signal to new type without altering signal values
<b>Library</b>	Signal Attributes
<b>Description</b>	The Signal Conversion block converts a signal from one type to another. Use the <b>Output</b> parameter to select the type of conversion to perform.
<b>Data Type Support</b>	<p>The Signal Conversion block accepts signals of the following data types:</p> <ul style="list-style-type: none"><li>• Scalar</li><li>• Floating point</li><li>• Built-in integer</li><li>• Fixed point</li><li>• Boolean</li><li>• Enumerated</li><li>• Virtual and nonvirtual bus signals</li></ul> <p>You can use an array of buses as an input signal to a Signal Conversion block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.</p> <p>For more information about data types, see “Data Types Supported by Simulink” in the Simulink documentation.</p>

# Signal Conversion

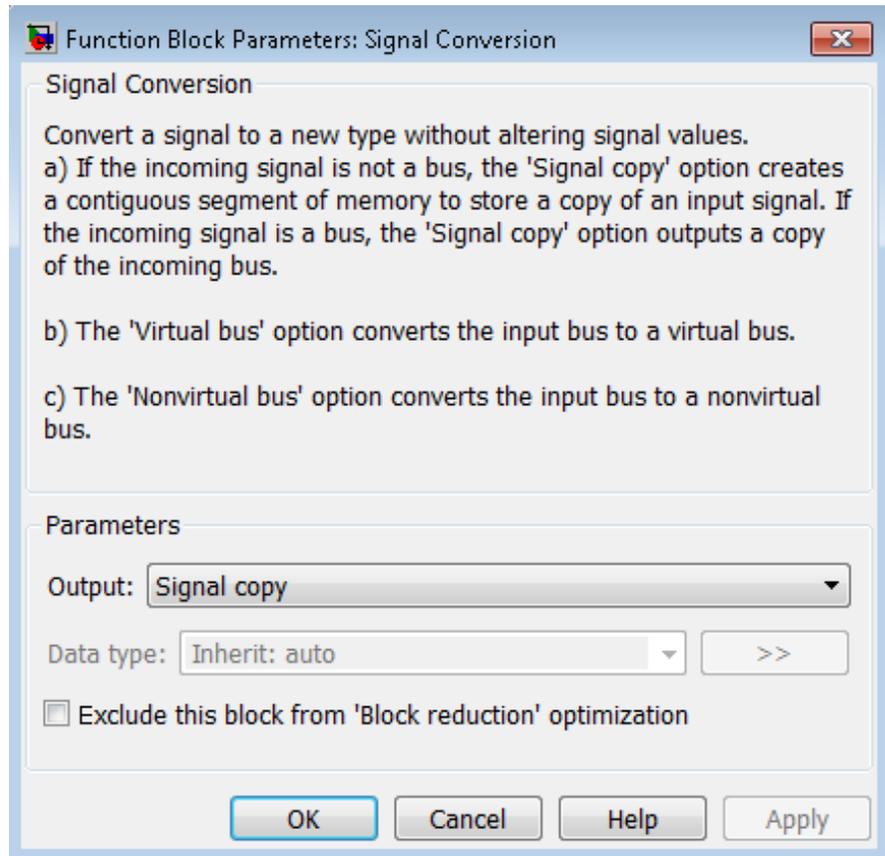

## Parameters and Dialog Box

### Output

Specify the type of conversion to perform. The type of conversion that you use depends on your modeling goal.

Modeling Goal	Output Option
<p>Reduce generated code for a muxed signal.</p> <p>For an example involving Simulink Coder software, see “Reusable Code and Referenced Models”.</p>	Signal copy
<p>Connect a block with a constant sample time to an output port of an enabled subsystem.</p> <p>For more information, see “Using Blocks with Constant Sample Times in Enabled Subsystems”.</p>	Signal copy
<p>Pass a bus signal, or array of buses signal, whose components have different data types to a nonvirtual Inport block in an atomic subsystem that has direct feedthrough.</p> <p>For more information, see “Composite Signals”.</p>	Signal copy
<p>Save memory by converting a nonvirtual bus to a virtual bus.</p>	Virtual bus
<p>Pass a virtual bus signal to a modeling construct that requires a nonvirtual bus, such as a Model block.</p>	Nonvirtual bus
<p>Pass a nonvirtual bus signal from a Bus Selector block.</p>	Nonvirtual bus


- The **Signal copy** option is the default. The type of conversion that the Signal Conversion block performs using the **Signal copy** option depends on the type of input signal.

# Signal Conversion


Type of Input Signal	Conversion that the Signal Copy Option Performs
Muxed (nonbus) signal	Converts the muxed signal, whose elements occupy discontinuous areas of memory, to a vector signal, whose elements occupy contiguous areas of memory. The conversion allocates a contiguous area of memory for the elements of the muxed signal and copies the values from the discontinuous areas (represented by the block's input) to the contiguous areas (represented by the block's output) at each time step.
Bus signal	Outputs a contiguous copy of the bus signal that is the input to the Signal Conversion block.

For an array of buses input signal, use the `Signal copy` option.

In the following example, a muxed signal inputs to a Signal Conversion block that has the **Output** parameter set to `Signal copy`. The Signal Conversion block converts the input signal to a vector.

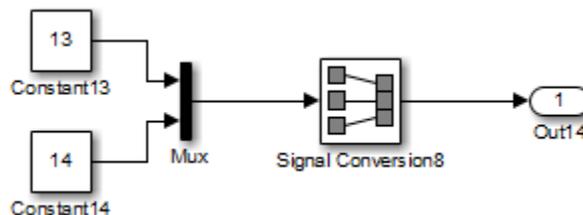


In the following example, a nonvirtual bus signal from a Bus Creator block inputs to a Signal Conversion block that has **Output** set to **Signal** copy. The Signal Conversion block creates another contiguous copy of the input bus signal.

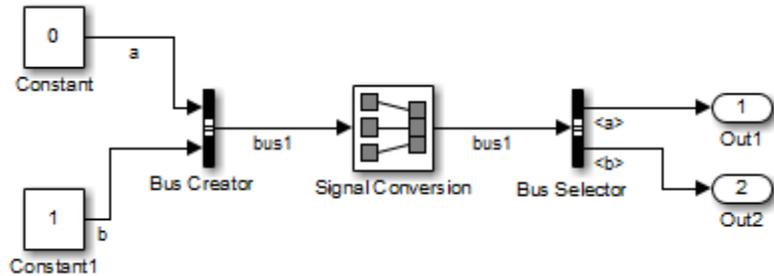

- The **Virtual** bus option converts a nonvirtual bus to a virtual bus.


In the following example, a Bus Creator block inputs to a Signal Conversion block that has **Output** set to **Virtual** bus. The Signal Conversion block converts the nonvirtual bus signal from the Bus Creator block to a virtual bus signal that inputs to the Bus Selector block.

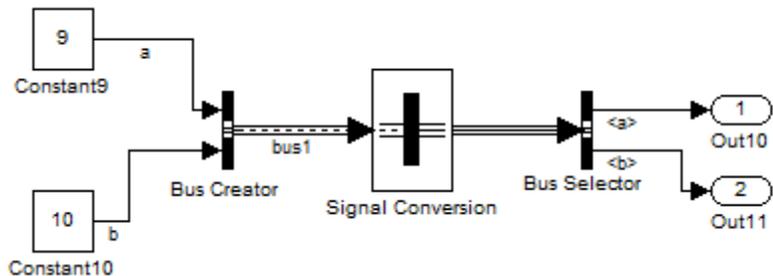

- The **Nonvirtual** bus option converts a virtual bus to a nonvirtual bus.

# Signal Conversion

In the following example, the Signal Conversion block converts a virtual bus signal from the first Bus Selector block to a nonvirtual bus signal that inputs to the second Bus Selector block. The Signal Conversion block has its **Output** parameter set to `Nonvirtual bus`, and specifies a bus object that matches the bus signal hierarchy of the bus that the first Bus Creator block outputs.

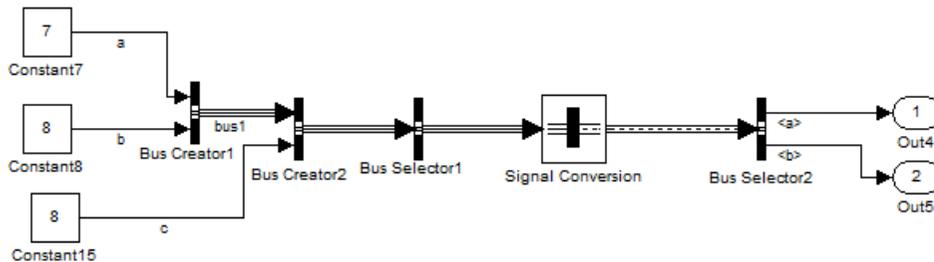

## Data type

Specify the output data type of the nonvirtual bus that the Signal Conversion block produces.

This option is available only when you set the **Output** parameter to `Nonvirtual bus`.

The default option is `Inherit: auto`, which uses a rule that inherits a data type.

You must specify a `Simulink.Bus` object in the **Data type** parameter for one or both of the following blocks:

- Signal Conversion block
- An upstream Bus Creator block

If you specify a bus object for the Signal Conversion block, but not for its upstream Bus Creator block, then use a bus object that

matches the hierarchy of the bus that upstream Bus Creator block outputs.

If you specify a bus object for both the Signal Conversion block and its upstream Bus Creator block, use the same bus object for both blocks.

You can select the button to the right of the Data type parameter to open the Data Type Assistant, which helps you to set the **Data type** parameter.

See “Specify Block Output Data Types” in *Simulink User’s Guide* for more information.

### **Exclude this block from ‘Block reduction’ optimization**

This option is available only when you set the **Output** parameter to **Signal copy**. If the elements of the input signal occupy contiguous areas of memory, then as an optimization, Simulink software eliminates the block from the compiled model . If you select the **Exclude this block from ‘Block reduction’ optimization** check box, the optimization occurs the next time you compile the model. For more information, see “Block reduction”.

## **Characteristics**

Sample Time	Inherited from the driving block
Scalar Expansion	n/a
Dimensionalized	n/a
Multidimensionalized	Yes
Zero-Crossing Detection	No

# Signal Generator

---

**Purpose**           Generate various waveforms



**Library**           Sources

## Description





## Supported Operations

The Signal Generator block can produce one of four different waveforms: sine wave, square wave, sawtooth wave, and random wave. You can express signal parameters in Hertz (the default) or radians per second. Using default parameter values, you get one of the following waveforms:

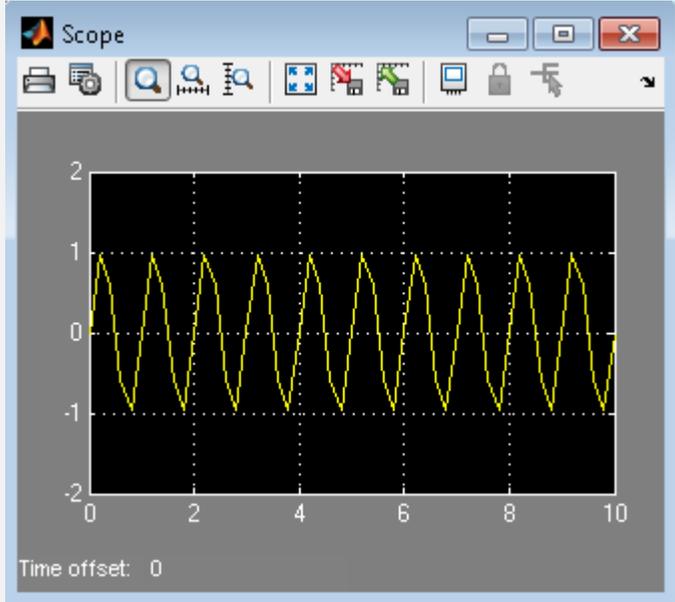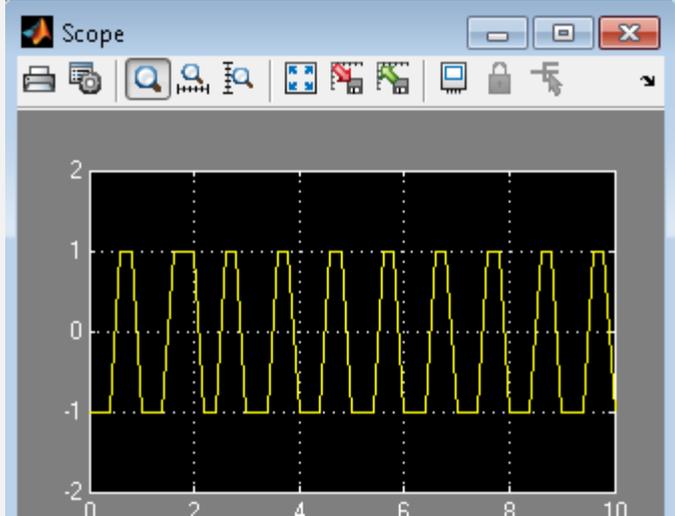Waveform	Scope Output
Sine wave	
Square wave	

# Signal Generator

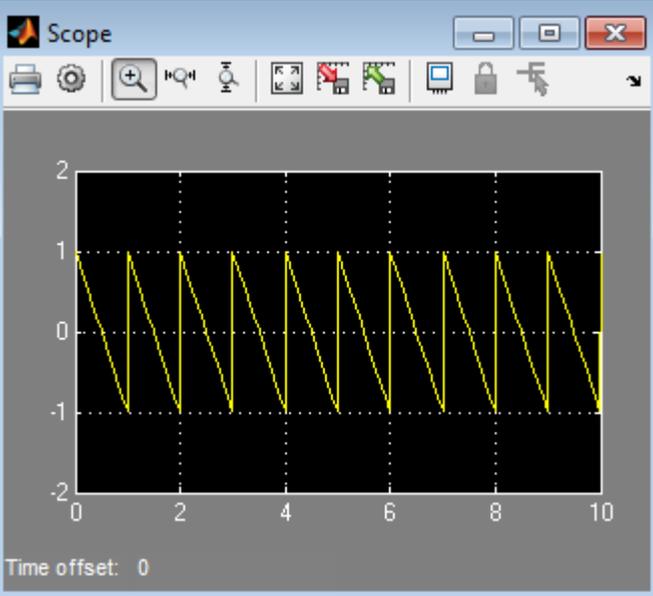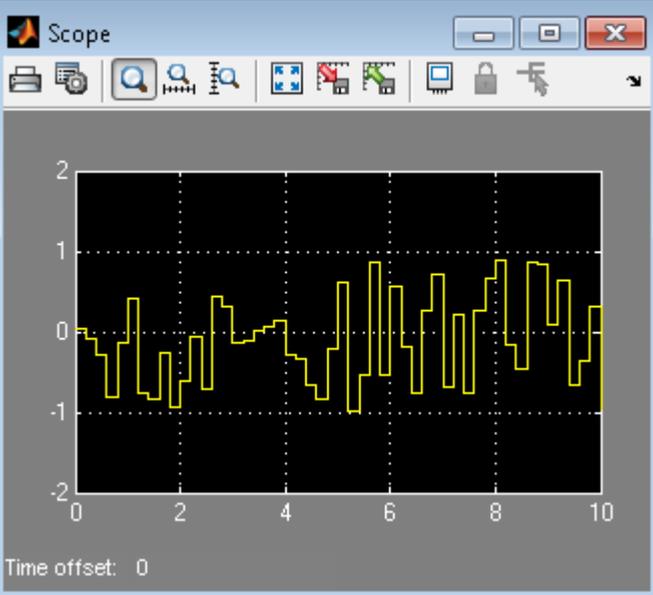Waveform	Scope Output
Sawtooth wave	 <p>The scope window displays a sawtooth wave with a period of 1 unit. The vertical axis ranges from -2 to 2, and the horizontal axis ranges from 0 to 10. The wave starts at 0, rises to 1, and then falls to -1, repeating this pattern. The text "Time offset: 0" is visible at the bottom left of the plot area.</p>
Random wave	 <p>The scope window displays a random wave with a period of 1 unit. The vertical axis ranges from -2 to 2, and the horizontal axis ranges from 0 to 10. The wave is highly irregular and noisy, fluctuating between approximately -1 and 1. The text "Time offset: 0" is visible at the bottom left of the plot area.</p>

A negative **Amplitude** parameter value causes a 180-degree phase shift. You can generate a phase-shifted wave at other than 180 degrees in many ways. For example, you can connect a Clock block signal to a MATLAB Function block and write the equation for the specific wave.

You can vary the output settings of the Signal Generator block while a simulation is in progress. This is useful to determine quickly the response of a system to different types of inputs.

The **Amplitude** and **Frequency** parameters determine the amplitude and frequency of the output signal. The parameters must be of the same dimensions after scalar expansion. If you clear the **Interpret vector parameters as 1-D** check box, the block outputs a signal of the same dimensions as the **Amplitude** and **Frequency** parameters (after scalar expansion). If you select the **Interpret vector parameters as 1-D** check box, the block outputs a vector (1-D) signal if the **Amplitude** and **Frequency** parameters are row or column vectors, that is, single row or column 2-D arrays. Otherwise, the block outputs a signal of the same dimensions as the parameters.

# Signal Generator


---

## **Solver Considerations**




If your model uses a fixed-step solver, Simulink uses the same step size for the entire simulation. In this case, the Signal Generator block output provides a uniformly sampled representation of the ideal waveform.

If your model uses a variable-step solver, Simulink might use different step sizes during the simulation. In this case, the Signal Generator block output does not always provide a uniformly sampled representation of the ideal waveform. To ensure that the block output is a uniformly sampled representation, add a Hit Crossing block directly downstream of the Signal Generator block. The following models show the difference in Signal Generator block output with and without the Hit Crossing block.

## Model That Uses a Variable-Step Solver

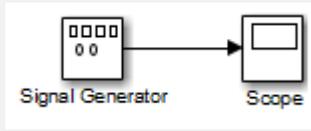

## Signal Generator Block Output

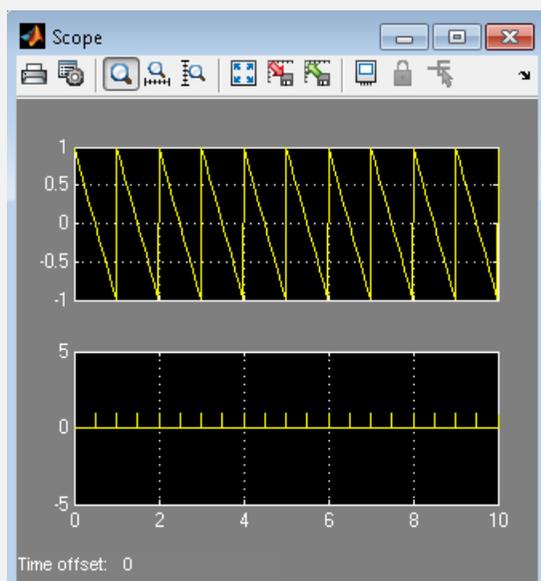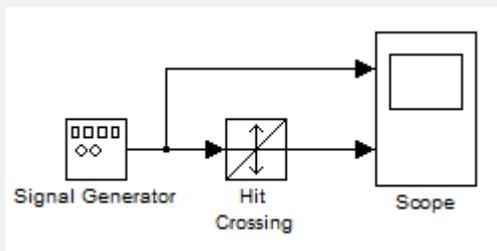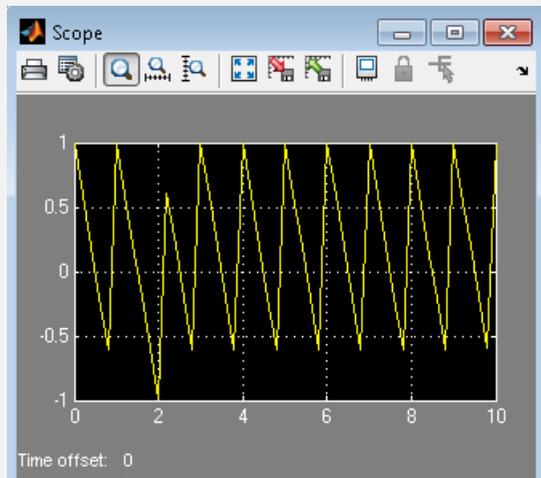


# Signal Generator

## Data Type Support

The Signal Generator block outputs a scalar or array of real signals of type double.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

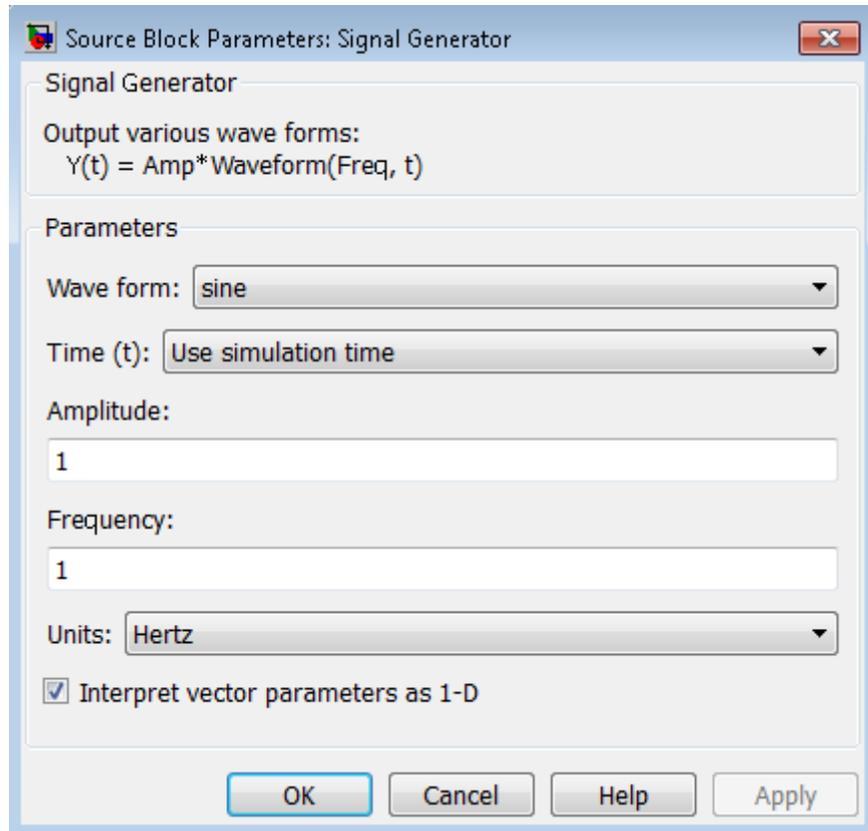

## Parameters and Dialog Box

### Wave form

Specify the wave form: a sine wave, square wave, sawtooth wave, or random wave. The default is a sine wave. This parameter cannot change while a simulation is running.

## Time

Specify whether to use simulation time as the source of values for the waveform's time variable or an external signal. If you specify an external time source, the block displays an input port for the time source.

## Amplitude

Specify the signal amplitude. The default is 1.

## Frequency

Specify the signal frequency. The default is 1.

## Units

Specify the signal units as Hertz or rad/sec. The default is rad/sec.

## Interpret vector parameters as 1-D

If selected, column or row matrix values for the **Amplitude** and **Frequency** parameters result in a vector output signal (see "Determining the Output Dimensions of Source Blocks"). This option is not available when an external signal specifies time. In this case, if the **Amplitude** and **Frequency** parameters are column or row matrix values, the output is a 1-D vector.

## Examples

The following Simulink examples show how to use the Signal Generator block:

- `sldemo_dbldcart1`
- `slexAircraftExample`
- `penddemo`

## Characteristics

Sample Time	Continuous
Scalar Expansion	Yes, of parameters
Dimensionalized	Yes

# Signal Generator

---

Multidimensionalized	Yes
Zero-Crossing Detection	No

## **See Also**

Pulse Generator

**Purpose** Specify desired dimensions, sample time, data type, numeric type, and other attributes of signal

**Library** Signal Attributes

## Description



The Signal Specification block allows you to specify the attributes of the signal connected to its input and output ports. If the specified attributes conflict with the attributes specified by the blocks connected to its ports, Simulink software displays an error when it compiles the model. For example, at the beginning of a simulation, if no conflict exists, Simulink eliminates the Signal Specification block from the compiled model. In other words, the Signal Specification block is a virtual block. It exists only to specify the attributes of a signal and plays no role in the simulation of the model.

You can use the Signal Specification block to ensure that the actual attributes of a signal meet desired attributes. For example, suppose that you and a colleague are working on different parts of the same model. You use Signal Specification blocks to connect your part of the model with your colleague's. If your colleague changes the attributes of a signal without informing you, the attributes entering the corresponding Signal Specification block do not match. When you try to simulate the model, you get an error.

You can also use the Signal Specification block to ensure correct propagation of signal attributes throughout a model. The capability of allowing the Simulink to propagate attributes from block to block is powerful. However, if some blocks have unspecified attributes for the signals they accept or output, the model does not have enough information to propagate attributes correctly. For these cases, the Signal Specification block is a good way of providing the information

# Signal Specification

---

Simulink needs. Using the Signal Specification block also helps speed up model compilation when blocks are missing signal attributes.

The Signal Specification block supports signal label propagation.

## Data Type Support

The Signal Specification block accepts real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types, as well as bus objects. The input data type must match the data type specified by the **Data type** parameter.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum and maximum values for bus data on the block. Simulink ignores these settings. Instead, set the minimum and maximum values for bus elements of the bus object specified as the data type. The values should be finite real double scalar.

For information on the Minimum and Maximum properties of a bus element, see `Simulink.BusElement`.

---

For more information, see “Data Types Supported by Simulink”.

Function Block Parameters: Signal Specification

SignalSpecification

Specify attributes of a signal line.

Parameters

Minimum: [] Maximum: []

Data type: Inherit: auto <<

Data Type Assistant

Mode: Inherit auto

Lock output data type setting against changes by the fixed-point tools

Dimensions (-1 for inherited):

-1

Variable-size signal: Inherit

Sample time (-1 for inherited):

-1

Signal type: auto

Sampling mode: auto

? OK Cancel Help Apply

## Parameters

# Signal Specification

---

## **and Dialog Box**

- “Minimum” on page 1-1609
- “Maximum” on page 1-1610
- “Data type” on page 1-1611
- “Show data type assistant” on page 1-1727
- “Mode” on page 1-1614
- “Data type override” on page 1-1975
- “Signedness” on page 1-1617
- “Word length” on page 1-1618
- “Scaling” on page 1-1789
- “Fraction length” on page 1-1620
- “Slope” on page 1-1621
- “Bias” on page 1-1622
- “Require nonvirtual bus” on page 1-1623
- “Lock output data type setting against changes by the fixed-point tools” on page 1-1774
- “Dimensions (-1 for inherited)” on page 1-1625
- “Variable-size signal” on page 1-1626
- “Sample time (-1 for inherited)” on page 1-1627
- “Signal type” on page 1-1628
- “Sampling mode” on page 1-1629

## Minimum

Specify the minimum value for the block output.

### Settings

**Default:** [] (unspecified)

This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum property of a bus element, see `Simulink.BusElement`.

---

Simulink uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### Command-Line Information

**Parameter:** OutMin

**Type:** string

**Value:** Any valid finite real double scalar value

**Default:** '[]'

# Signal Specification

---

## **Maximum**

Specify the maximum value for the block output.

## **Settings**

**Default:** [] (unspecified)

This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum property of a bus element, see `Simulink.BusElement`.

---

Simulink uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## **Command-Line Information**

**Parameter:** OutMax

**Type:** string

**Value:** Any valid finite real double scalar value

**Default:** '[]'

**Data type**

Specify the output data type.

**Settings**

**Default:** auto

Inherit: auto

Inherits the data type.

double

Specifies the data type is double.

single

Specifies the data type is single.

int8

Specifies the data type is int8.

uint8

Specifies the data type is uint8.

int16

Specifies the data type is int16.

uint16

Specifies the data type is uint16.

int32

Specifies the data type is int32.

uint32

Specifies the data type is uint32.

boolean

Specifies the data type is boolean.

fixdt(1,16,0)

Specifies the data type is fixed point fixdt(1,16,0).

fixdt(1,16,2<sup>0</sup>,0)

Specifies the data type is fixed point fixdt(1,16,2<sup>0</sup>,0).

# Signal Specification

---

**Enum:** <class name>  
Specifies the data type as enumerated.

**Bus:** <object name>  
Data type is a bus object.

**<data type expression>**  
The name of a data type object, for example  
Simulink.NumericType

Do not specify a bus object as the expression.

## Dependency

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Data type** parameters.

## Command-Line Information

**Parameter:** OutDataTypeStr

**Type:** string

**Value:** 'Inherit: auto' | 'double' | 'single' | 'int8'  
| 'uint8' | 'int16' | 'uint16' | 'int32' | 'uint32' |  
'boolean' | 'fixdt(1,16,0)' | 'fixdt(1,16,2^0,0)' |  
'Enum: <class name>' | 'Bus: <object name>' | <data  
type expression>

**Default:** 'Inherit: auto'

## See Also

“Specify Block Output Data Types”.

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

# Signal Specification

---

## Mode

Select the category of data to specify.

## Settings

**Default:** Inherit

### Inherit

Specifies inheritance rules for data types. Selecting **Inherit** enables **auto**.

### Built in

Specifies built-in data types. Selecting **Built in** enables a list of possible values:

- **double** (default)
- **single**
- **int8**
- **uint8**
- **int16**
- **uint16**
- **int32**
- **uint32**
- **boolean**

### Fixed point

Specifies fixed-point data types.

### Enumerated

Specifies enumerated data types. Selecting **Enumerated** enables you to enter a class name.

### Bus

Bus object. Selecting **Bus** enables a **Bus object** parameter to the right, where you enter the name of a bus object that you want to use to define the structure of the bus. If you need to create or

change a bus object, click **Edit** to the right of the **Bus object** field to open the Simulink Bus Editor. For details about the Bus Editor, see “Manage Bus Objects with the Bus Editor”.

## Expression

Expressions that evaluate to data types. Selecting Expression enables a second menu/text box to the right, where you can enter the expression.

Do not specify a bus object as the expression.

## Dependency

Clicking the **Show data type assistant** button  enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## See Also

“Specify Data Types Using Data Type Assistant”.

# Signal Specification

---

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is Built in or Fixed point.

## **Signedness**

Specify whether you want the fixed-point data signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specifies fixed-point data as signed.

Unsigned

Specifies the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > Fixed point enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

“Specifying a Fixed-Point Data Type”.

# Signal Specification

---

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

Large word sizes represent large values with greater precision than small word sizes.

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

“Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

# Signal Specification

---

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

“Specifying a Fixed-Point Data Type”.

## **Slope**

Specify slope for the fixed-point data type.

### **Settings**

**Default:**  $2^0$

Specify any positive real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

“Specifying a Fixed-Point Data Type”.

# Signal Specification

---

## **Bias**

Specify bias for the fixed-point data type.

## **Dependencies**

Selecting **Scaling** > Slope and bias enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

“Specifying a Fixed-Point Data Type”.

## Require nonvirtual bus

If you specify a bus object as the data type, use this parameter to specify whether to accept only nonvirtual bus signals.

### Settings



Default: off



Off

Specifies that a signal must come from a *virtual* bus.



On

Specifies that a signal must come from a *nonvirtual* bus.

### Dependencies

The following **Data type** values enable this parameter:

- Bus: <object name>
- <data type expression> that specifies a bus object

### Command-Line Information

**Parameter:** BusOutputAsStruct

**Type:** string

**Value:** 'off' | 'on'

**Default:** '-1off'

# Signal Specification

---

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off



On

Locks the output data type setting for this block.



Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

## Dimensions (-1 for inherited)

Specify the dimensions of the input and output signals.

### Settings

**Default:** -1

-1

Specifies that signals inherit dimensions.

n

Specifies vector signal of width n.

[m n]

Specifies matrix signal having m rows and n columns.

### Command-Line Information

**Parameter:** Dimensions

**Type:** string

**Value:** '-1' | n | [m n]

**Default:** '-1'

# Signal Specification

---

## Variable-size signal

Specify a variable-size signal, fixed-size signal, or both.

### Settings

**Default:** Inherit

Inherit

Allows variable-size and fixed-size signals.

No

Does not allow variable-size signals.

Yes

Allows only variable-size signals.

### Dependencies

When the signal is a variable-size signal, the **Dimensions** parameter specifies the maximum dimensions of the signal.

If you specify a bus object, the simulation allows variable-size signals only with a disabled bus object.

### Command-Line Information

**Parameter:** VarSizeSig

**Type:** string

**Value:** 'Inherit' | 'No' | 'Yes'

**Default:** 'Inherit'

### See Also

“Variable-Size Signal Basics”

## **Sample time (-1 for inherited)**

Specify the time interval when simulation updates the block.

### **Settings**

**Default:** -1

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” for more information.

### **Command-Line Information**

**Parameter:** SampleTime

**Type:** string

**Value:** Any valid sample time

**Default:** '-1'

### **See Also**

“Specify Sample Time”

# Signal Specification

---

## Signal type

Specify the numeric type of the input and output signals.

### Settings

**Default:** auto

auto

Accepts either real or complex as the numeric type.

real

Specifies the numeric type as a real number.

complex

Specifies the numeric type as a complex number.

## Command-Line Information

**Parameter:** SignalType

**Type:** string

**Value:** 'auto' | 'real' | 'complex'

**Default:** 'auto'

## Sampling mode

Select the sampling mode for this block.

### Settings

**Default:** auto

auto

Accepts any sampling mode.

Sample based

Specifies the output signal to be sample-based.

Frame based

Specifies the output signal to be frame-based.

### Tip

To generate frame-based signals, you must have the DSP System Toolbox product installed.

### Command-Line Information

**Parameter:** SamplingMode

**Type:** string

**Value:** 'auto' | 'Sample based' | 'Frame based'

**Default:** 'auto'

## Bus Support

The Signal Specification block supports virtual and nonvirtual buses. If you specify a bus object as the data type, then set these other block parameters as follows:

Block Parameter	Required Value for a Bus Data Type
Variable-size signal	No
Sampling mode	Sample based

All elements of the bus input to a Signal Specification block must have the same names as specified in the bus object.

# Signal Specification

---

All signals in a nonvirtual bus input to a Signal Specification block must have the same sample time, even if the elements of the associated bus object specify inherited sample times. You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus. See “Composite Signals” and Bus-Capable Blocks for more information.

The **Model Configuration Parameters > Diagnostics > Connectivity “Mux blocks used to create bus signals”** diagnostic must be set to Error.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified by the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Virtual	Yes For more information, see “Virtual Blocks”.
Zero-Crossing Detection	No

**Purpose** Dual port RAM with single output port

**Library** HDL Coder / HDL Operations

## Description



The Simple Dual Port RAM block models a RAM that supports simultaneous read and write accesses, and has a single output port for read data. You can use this block to generate HDL code that maps to RAM in most FPGAs.


The Simple Dual Port RAM is similar to the Dual Port RAM, but the Dual Port RAM has both a write data output port and a read data output port.

### Read-During-Write Behavior

During a write operation, if a read operation is performed at the same address, old data is read at the output.

# Simple Dual Port RAM

## Dialog Box and Parameters

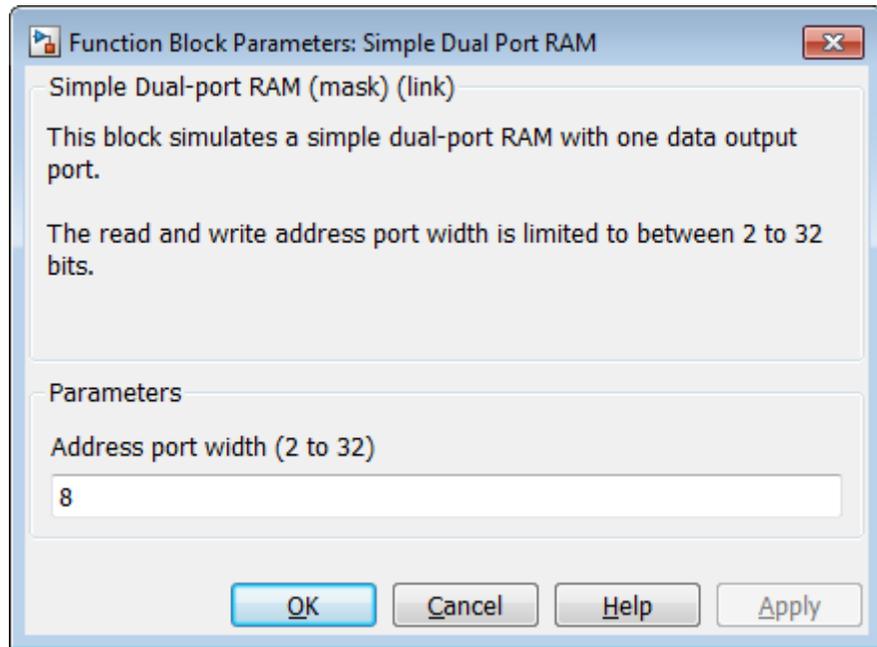

### Address port width

Address bit width. Minimum bit width is 2, and maximum bit width is 32.

Default: 8

## Ports

The block has the following ports:

`wr_din`

Write data input. The data can be of any width, and inherits its width and data type from the input signal.

Data type: scalar fixed point, integer, or complex

`wr_addr`

Write address.

Data type: scalar unsigned integer (`uintN`) or unsigned fixed point (`ufixN`) with a fraction length of 0

`wr_en`

Write enable.

Data type: Boolean

`rd_addr`

Read address.

Data type: scalar unsigned integer (`uintN`) or unsigned fixed point (`ufixN`) with a fraction length of 0

`rd_dout`

Output data from read address, `rd_addr`.

## See Also

Dual Port RAM | Dual Rate Dual Port RAM | Single Port RAM


# Single Port RAM

---

**Purpose** Single port RAM

**Library** HDL Coder / HDL Operations


## Description

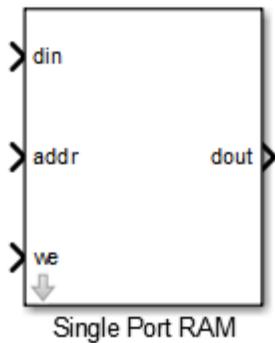

The Single Port RAM block models a RAM that supports sequential read and write accesses.

If you want to model a RAM that supports simultaneous read and write accesses, use the Dual Port RAM or Simple Dual Port RAM.

## Dialog Box and Parameters

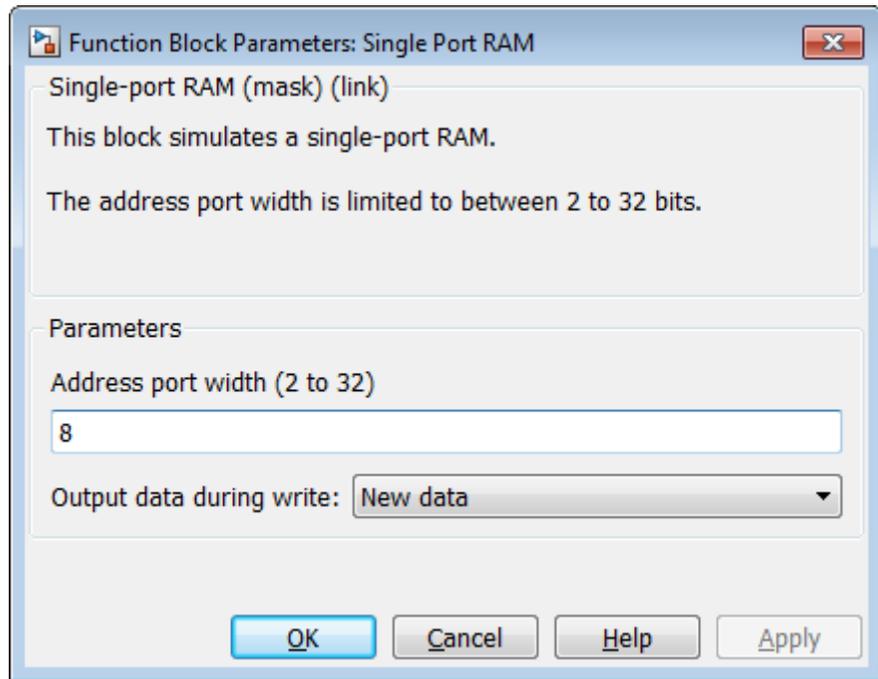

### Address port width

Address bit width. Minimum bit width is 2, and maximum bit width is 32.

Default: 8

### Output data during write

Controls the output data, dout, during a write access.

- **New data** (default): During a write, new data appears at the output port, dout.
- **Old data**: During a write, old data appears at the output port, dout.

## Ports

The block has the following ports:

# Single Port RAM

---

din

Data input. The data can be of any width, and inherits its width and data type from the input signal.

Data type: scalar fixed point, integer, or complex

addr

Write address.

Data type: scalar unsigned integer (`uintN`) or unsigned fixed point (`ufixN`) with a fraction length of 0

we

Write enable.

Data type: Boolean

dout

Output data from address, addr.

## See Also

Dual Port RAM | Simple Dual Port RAM | Dual Rate Dual Port RAM


## Purpose

Implement fixed-point sine or cosine wave using lookup table approach that exploits quarter wave symmetry

## Library

Lookup Tables (Sine block or Cosine block)

## Description

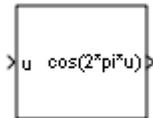

The Sine and Cosine block implements a sine and/or cosine wave in fixed point using a lookup table method that exploits quarter wave symmetry.

The Sine and Cosine block can output the following functions of the input signal, depending upon what you select for the **Output formula** parameter:

- $\sin(2\pi u)$
- $\cos(2\pi u)$
- $\exp(i2\pi u)$
- $\sin(2\pi u)$  and  $\cos(2\pi u)$

You define the number of lookup table points in the **Number of data points for lookup table** parameter. The block implementation is most efficient when you specify the lookup table data points to be  $(2^n)+1$ , where  $n$  is an integer.

---

**Tip** To obtain meaningful block output, the block input values should fall within the range  $[0, 1)$ . For input values that fall outside this range, the values are cast to an unsigned data type, where overflows wrap. For these out-of-range inputs, the block output might not be meaningful.

---

Use the **Output word length** parameter to specify the word length of the fixed-point output data type. The fraction length of the output is the output word length minus 2.

# Sine, Cosine

---


## **Data Type Support**

The Sine and Cosine block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

The output of the block is a fixed-point data type.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

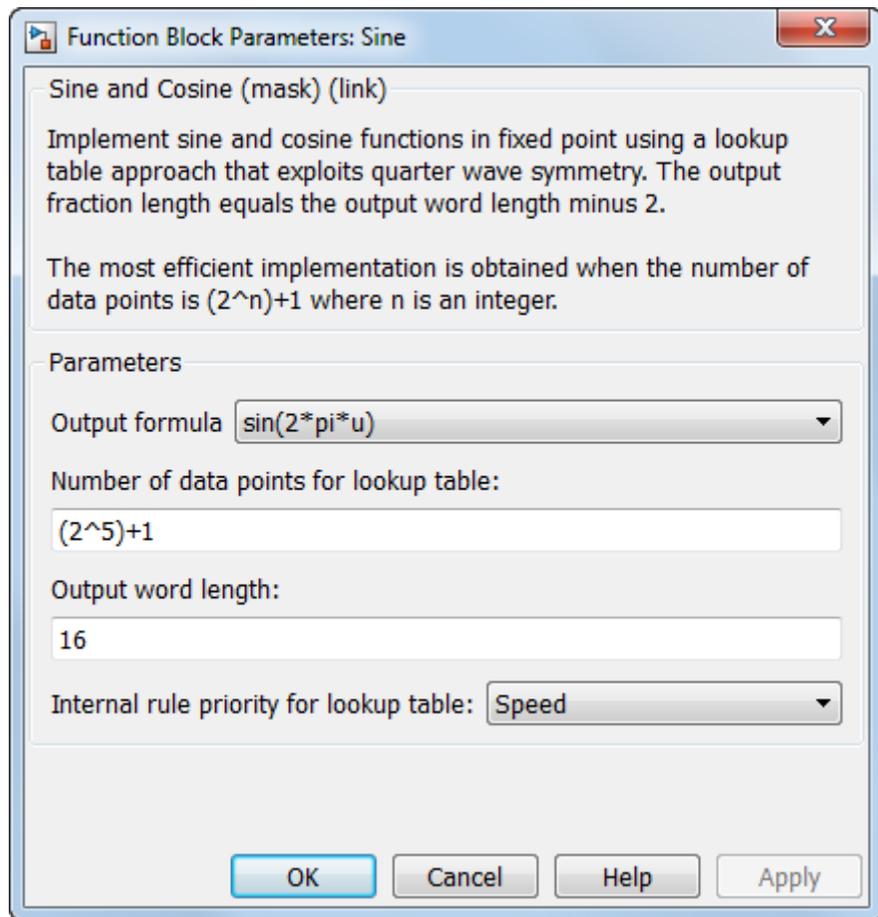

## Parameters and Dialog Box

### Output formula

Select the signal(s) to output.

### Number of data points for lookup table

Specify the number of data points to retrieve from the lookup table. The implementation is most efficient when you specify the lookup table data points to be  $(2^n)+1$ , where  $n$  is an integer.

## **Output word length**

Specify the word length for the fixed-point data type of the output signal. The fraction length of the output is the output word length minus 2.

---

**Note** The block uses double-precision floating-point values to construct lookup tables. Therefore, the maximum amount of precision you can achieve in your output is 53 bits. Setting the word length to values greater than 53 bits does not improve the precision of your output.

---


## **Internal rule priority for lookup table**

Specify the internal rule for intermediate calculations. Select **Speed** for faster calculations. If you do, a loss of accuracy might occur, usually up to 2 bits.

## Examples

The `sldemo_tonegen_fixpt` model shows how you can use the Sine block to implement a fixed-point sine wave.

### Additional blocks to calculate sine and approximate sine using various algorithms.

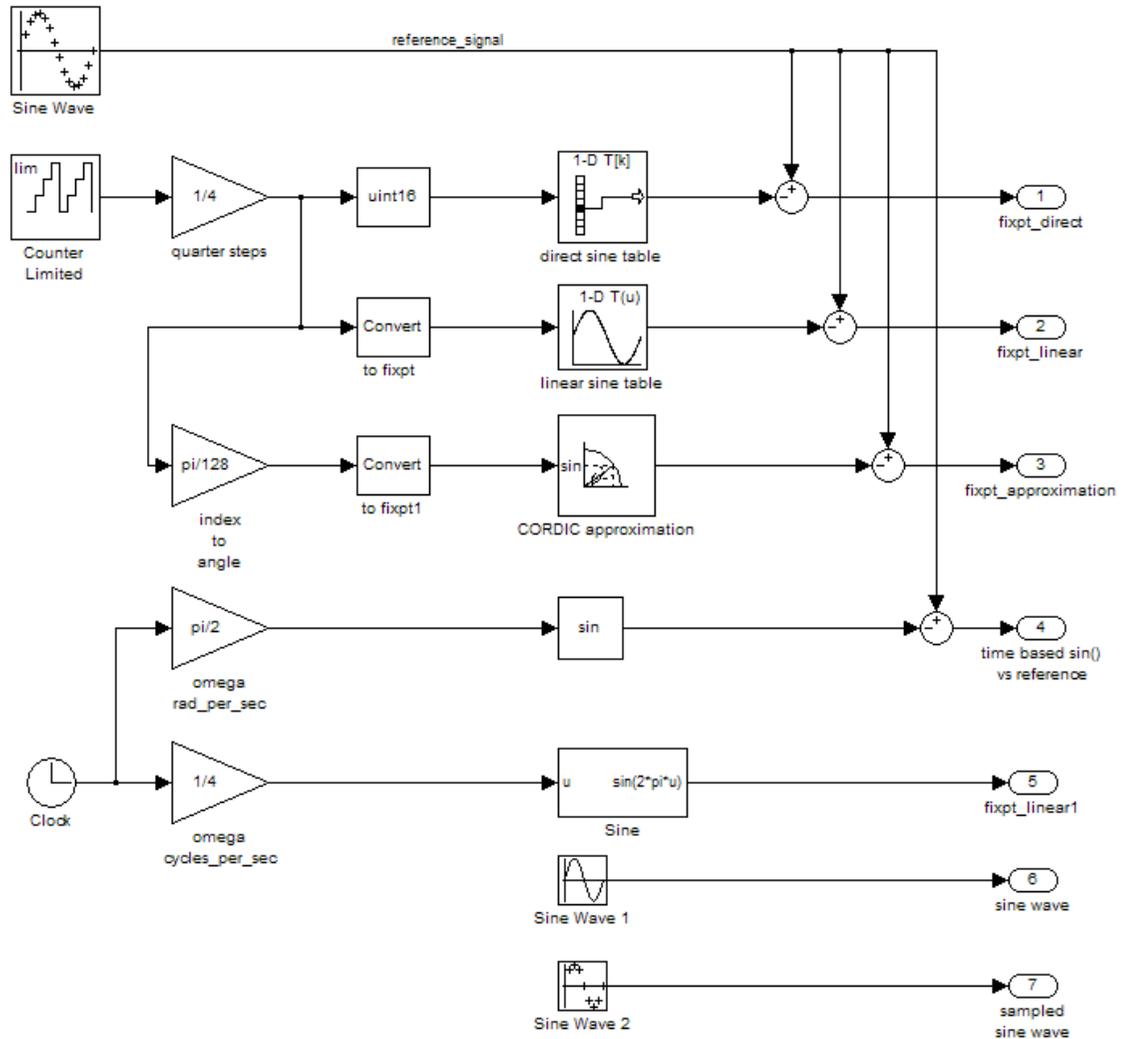

# Sine, Cosine

---

<b>Characteristics</b>	Direct Feedthrough	Yes
	Sample Time	Inherited from the driving block
	Scalar Expansion	N/A
	Zero-Crossing Detection	No

**See Also** Sine Wave, Trigonometric Function

**Purpose** Generate sine wave, using simulation time as time source

**Library** Sources

**Description** The Sine Wave block outputs a sinusoidal waveform. The block can operate in time-based or sample-based mode.



---

**Note** This block is the same as the Sine Wave Function block that appears in the Math Operations library. If you select **Use external signal** for the **Time** parameter in the block dialog box, you get the Sine Wave Function block.

---

## Time-Based Mode

The output of the Sine Wave block is determined by:

$$y = \textit{amplitude} \times \sin(\textit{frequency} \times \textit{time} + \textit{phase}) + \textit{bias}.$$

Time-based mode has two submodes: continuous mode or discrete mode. The value of the **Sample time** parameter determines whether the block operates in continuous mode or discrete mode:

- 0 (the default) causes the block to operate in continuous mode.
- >0 causes the block to operate in discrete mode.

See “Specify Sample Time” in the online documentation for more information.

## Block Behavior in Continuous Mode

A **Sample time** parameter value of 0 causes the block to operate in continuous mode. When operating in continuous mode, the Sine Wave block can become inaccurate due to loss of precision as time becomes very large.

# Sine Wave

---

## Block Behavior in Discrete Mode

A **Sample time** parameter value greater than zero causes the block to behave as if it were driving a Zero-Order Hold block whose sample time is set to that value.

Using the Sine Wave block in this way, you can build models with sine wave sources that are purely discrete, rather than models that are hybrid continuous/discrete systems. Hybrid systems are inherently more complex and as a result take more time to simulate.

In discrete mode, this block uses a differential incremental algorithm instead of one based on absolute time. As a result, the block can be useful in models intended to run for an indefinite length of time, such as in vibration or fatigue testing.

The differential incremental algorithm computes the sine based on the value computed at the previous sample time. This method uses the following trigonometric identities:

$$\begin{aligned}\sin(t + \Delta t) &= \sin(t)\cos(\Delta t) + \sin(\Delta t)\cos(t) \\ \cos(t + \Delta t) &= \cos(t)\cos(\Delta t) - \sin(t)\sin(\Delta t)\end{aligned}$$

In matrix form, these identities are:

$$\begin{bmatrix} \sin(t + \Delta t) \\ \cos(t + \Delta t) \end{bmatrix} = \begin{bmatrix} \cos(\Delta t) & \sin(\Delta t) \\ -\sin(\Delta t) & \cos(\Delta t) \end{bmatrix} \begin{bmatrix} \sin(t) \\ \cos(t) \end{bmatrix}$$

Because  $\Delta t$  is constant, the following expression is a constant:

$$\begin{bmatrix} \cos(\Delta t) & \sin(\Delta t) \\ -\sin(\Delta t) & \cos(\Delta t) \end{bmatrix}$$

Therefore, the problem becomes one of a matrix multiplication of the value of  $\sin(t)$  by a constant matrix to obtain  $\sin(t + \Delta t)$ .

Discrete mode reduces but does not eliminate the accumulation of round-off errors, for example,  $(4 * \text{eps})$ . This accumulation can happen

because computation of the block output at each time step depends on the value of the output at the previous time step.

### Methods to Handle Round-Off Errors in Discrete Mode

To handle round-off errors when the Sine Wave block operates in time-based discrete mode, use one of the following methods.

Method	Rationale
Insert a Saturation block directly downstream of the Sine Wave block.	By setting saturation limits on the Sine Wave block output, you can remove overshoot due to accumulation of round-off errors.
<p>Set up the Sine Wave block to use the <code>sin()</code> math library function to calculate block output.</p> <ol style="list-style-type: none"> <li><b>1</b> On the Sine Wave block dialog box, set <b>Time</b> to <b>Use external signal</b> so that an input port appears on the block icon.</li> <li><b>2</b> Connect a clock signal to this input port using a Digital Clock block.</li> <li><b>3</b> Set the sample time of the clock signal to the sample time of the Sine Wave block.</li> </ol>	Unlike the block algorithm, the <code>sin()</code> math library function computes block output at each time step <i>independently</i> of output values from other time steps, preventing the accumulation of round-off errors.

### Sample-Based Mode

Sample-based mode uses the following formula to compute the output of the Sine Wave block.

$$y = A \sin(2\pi(k + o) / p) + b$$

where

# Sine Wave

---

- $A$  is the amplitude of the sine wave.
- $p$  is the number of time samples per sine wave period.
- $k$  is a repeating integer value that ranges from 0 to  $p-1$ .
- $o$  is the offset (phase shift) of the signal.
- $b$  is the signal bias.

In this mode, Simulink sets  $k$  equal to 0 at the first time step and computes the block output, using the preceding formula. At the next time step, Simulink increments  $k$  and recomputes the output of the block. When  $k$  reaches  $p$ , Simulink resets  $k$  to 0 before computing the block output. This process continues until the end of the simulation.

The sample-based method of computing the block output does not depend on the result of the previous time step to compute the result at the current time step. Therefore, this mode avoids the accumulation of round-off errors. However, this mode has one potential drawback. If the Sine Wave block is in a conditionally-executed subsystem that pauses and then resumes execution, the block output might not stay in sync with the rest of the simulation. If the accuracy of your model requires that the output of conditionally-executed Sine Wave blocks remain in sync with the rest of the model, use time-based mode for computing the output of the conditionally-executed blocks.

## Parameter Dimensions

The numeric parameters of this block must have the same dimensions after scalar expansion.

- If **Interpret vector parameters as 1-D** is not selected, the block outputs a signal of the same dimensions and dimensionality as the parameters.
- If **Interpret vector parameters as 1-D** is selected and the numeric parameters are row or column vectors, the block outputs a vector signal. Otherwise, the block outputs a signal of the same dimensionality and dimensions as the parameters.

## **Data Type Support**

The Sine Wave block accepts and outputs real signals of type double.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Sine Wave

Source Block Parameters: Sine Wave

Sine Wave

Output a sine wave:

$$O(t) = \text{Amp} * \text{Sin}(\text{Freq} * t + \text{Phase}) + \text{Bias}$$

Sine type determines the computational technique used. The parameters in the two types are related through:

$$\text{Samples per period} = 2 * \pi / (\text{Frequency} * \text{Sample time})$$
$$\text{Number of offset samples} = \text{Phase} * \text{Samples per period} / (2 * \pi)$$

Use the sample-based sine type if numerical problems due to running for large times (e.g. overflow in absolute time) occur.

Parameters

Sine type: Time based

Time (t): Use simulation time

Amplitude: 1

Bias: 0

Frequency (rad/sec): 1

Phase (rad): 0

Sample time: 0

Interpret vector parameters as 1-D

OK Cancel Help Apply

## Parameters

## and Dialog Box

### **Sine type**

Specify the type of sine wave that this block generates, either time- or sample-based. Some parameters in the dialog box appear depending on whether you select time-based or sample-based.

### **Time**

Specify whether to use simulation time as the source of values for the time variable or an external source. If you specify an external time source, the block displays an input port for the time source.

### **Amplitude**

Specify the amplitude of the signal. The default is 1.

### **Bias**

Specify the constant value added to the sine to produce the output of this block.

### **Frequency**

Specify the frequency, in radians per second. The default is 1. This parameter appears only when you set **Sine type** to time-based.

### **Samples per period**

Specify the number of samples per period. This parameter appears only when you set **Sine type** to sample-based.

### **Phase**

Specify the phase shift, in radians. The default is 0. This parameter appears only when you set **Sine type** to time-based.

### **Number of offset samples**

Specify the offset (discrete phase shift) in number of sample times. This parameter appears only when you set **Sine type** to sample-based.

### **Sample time**

Specify the sample period. The default is 0. If the sine type is sample-based, the sample time must be greater than 0. See “Specify Sample Time” in the online documentation for more information.

# Sine Wave

---

## Interpret vector parameters as 1-D

If selected, column or row matrix values for numeric parameters result in a vector output signal. Otherwise, the block outputs a signal of the same dimensionality as the parameters. If you do not select this check box, the block always outputs a signal of the same dimensionality as the numeric parameters. See “Determining the Output Dimensions of Source Blocks” in the Simulink documentation. This parameter is not available when an external signal specifies time. In this case, if numeric parameters are column or row matrix values, the output is a 1-D vector.

## Examples

The following Simulink examples show how to use the Sine Wave block:

- `sldemo_househeat`
- `sldemo_tonegen_fixpt`
- `sldemo_VariableTransportDelay`
- `sldemo_zeroring`

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of parameters
Dimensionalized	Yes
Zero-Crossing Detection	No

**Purpose**

Generate sine wave, using external signal as time source

**Library**

Math Operations

**Description**

This block is the same as the Sine Wave block that appears in the Sources library. If you select `Use simulation time` for the **Time** parameter in the block dialog box, you get the Sine Wave block. See the documentation for the Sine Wave block for more information.



# Slider Gain

---


**Purpose** Vary scalar gain using slider

**Library** Math Operations

**Description** Use the Slider Gain block to vary a scalar gain during a simulation using a slider. The block accepts one input and generates one output.

**Data Type Support** Data type support for the Slider Gain block is the same as that for the Gain block (see Gain).

## Parameters and Dialog Box

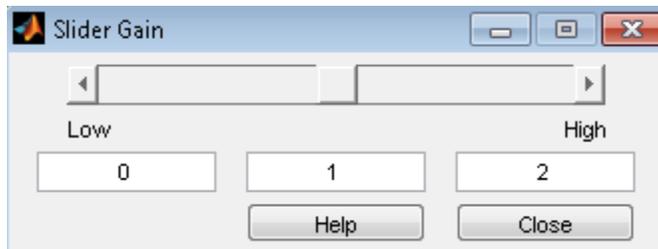

**Low** Specify the lower limit of the slider range. The default is 0.

**High** Specify the upper limit of the slider range. The default is 2.

The edit fields indicate (from left to right) the lower limit, the current value, and the upper limit. You can change the gain in two ways: by manipulating the slider, or by entering a new value in the current value field. You can change the range of gain values by changing the lower and upper limits. Close the dialog box by clicking the **Close** button.

If you click the left or right arrow of the slider, the current value changes by about 1% of the slider range. If you click the rectangular area to either side of the slider's indicator, the current value changes by about 10% of the slider range.

To apply a vector or matrix gain to the block input, consider using the Gain block.

## Examples

The following example models show how to use the Slider Gain block:

- `aero_six_dof`

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from the driving block
Scalar Expansion	Yes, of the gain
States	0
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Gain

# Sqrt, Signed Sqrt, Reciprocal Sqrt

**Purpose** Calculate square root, signed square root, or reciprocal of square root

**Library** Math Operations

**Description** You can select one of the following functions from the **Function** parameter list.



Function	Description	Mathematical Expression	MATLAB Equivalent
sqrt	Square root of the input	$u^{0.5}$	sqrt
signedSqrt	Square root of the absolute value of the input, multiplied by the sign of the input	$\text{sign}(u) *  u ^{0.5}$	—
rSqrt	Reciprocal of the square root of the input	$u^{-0.5}$	—

The block output is the result of applying the function to the input. Each function supports:

- Scalar operations
- Element-wise vector and matrix operations

# Sqrt, Signed Sqrt, Reciprocal Sqrt

## Data Type Support

The block accepts input signals of the following data types:

Function	Input Data Types	Restrictions
sqrt	<ul style="list-style-type: none"><li>Floating point</li><li>Built-in integer</li><li>Fixed point</li></ul>	None
signedSqrt	<ul style="list-style-type: none"><li>Floating point</li><li>Built-in integer</li><li>Fixed point</li></ul>	When the input is an integer or fixed-point type, the output must be floating point.
rSqrt	<ul style="list-style-type: none"><li>Floating point</li><li>Built-in integer</li><li>Fixed point</li></ul>	None

The block accepts real and complex inputs of the following types:

Function	Types of Real Inputs	Types of Complex Inputs
sqrt	Any, except for fixed-point inputs that are negative or have nontrivial slope and nonzero bias	Any, except for fixed-point inputs
signedSqrt		None
rSqrt		None


The block output:

- Uses the data type that you specify for **Output data type**
- Is real or complex, depending on your selection for **Output signal type**

# Sqrt, Signed Sqrt, Reciprocal Sqrt

## Parameters and Dialog Box

The **Main** pane of the block dialog box appears as follows:

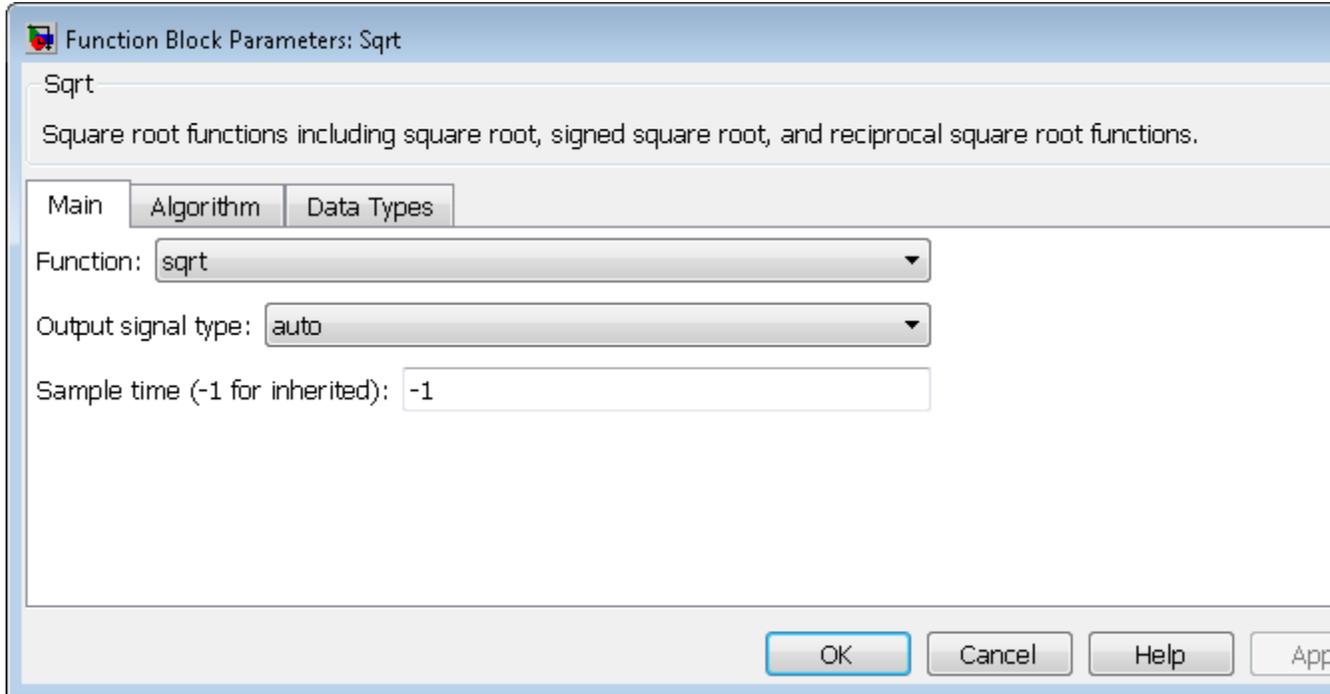

### Function

Specify the mathematical function. The block icon changes to match the function you select.

# Sqrt, Signed Sqrt, Reciprocal Sqrt

Function	Block Icon
sqrt	
signedSqrt	
rSqrt	

## Output signal type

Specify the output signal type of the block as auto, real, or complex.


Function	Input Signal Type	Output Signal Type		
		Auto	Real	Complex
sqrt	real	real for nonnegative inputs NaN for negative inputs	real for nonnegative inputs NaN for negative inputs	complex
	complex	complex	error	complex
signedSqrt	real	real	real	complex
	complex	error	error	error
rSqrt	real	real	real	error
	complex	error	error	error

## Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

# Sqrt, Signed Sqrt, Reciprocal Sqrt

The **Algorithm** pane of the block dialog box appears as follows:

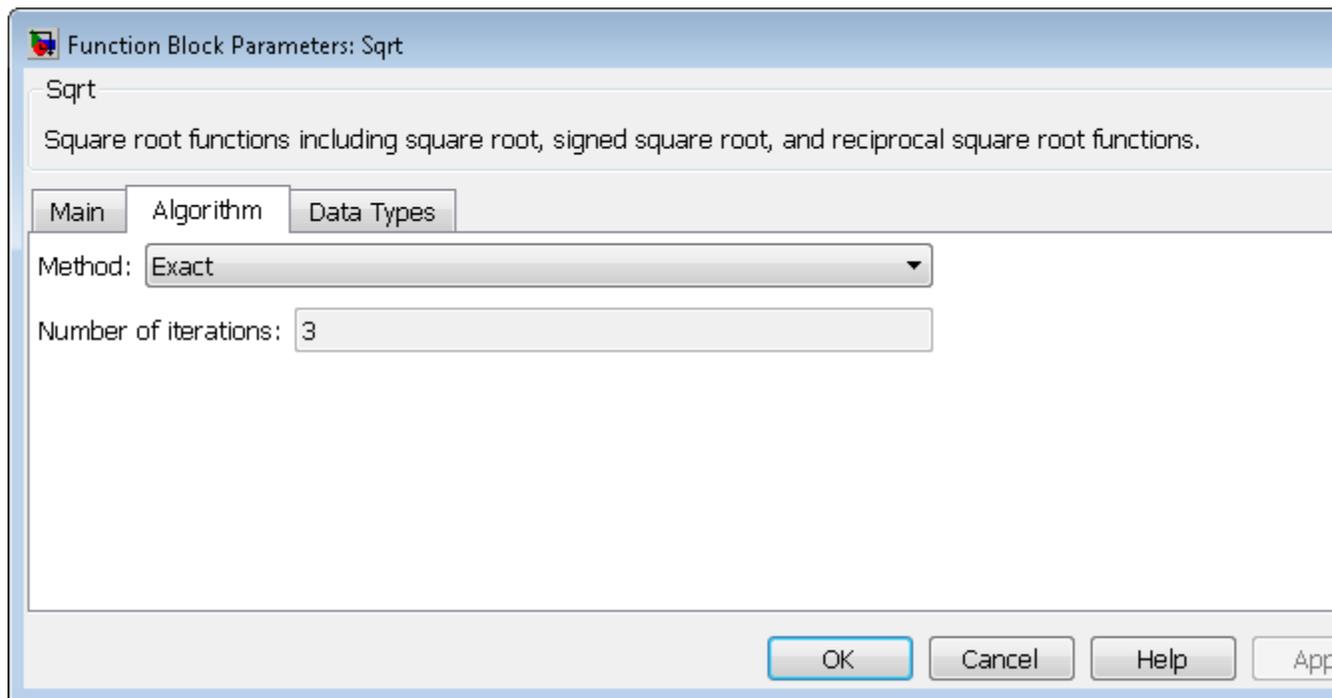

---

**Note** The parameters in the **Algorithm** pane are available only when you set **Function** to rSqrt on the **Main** pane.

---

## **Method**

Specify the method for computing the reciprocal of a square root.

# Sqrt, Signed Sqrt, Reciprocal Sqrt

---

Method	Data Types Supported	When to Use This Method
Exact	Floating point If you use a fixed-point or built-in integer type, an upcast to a floating-point type occurs.	You do not want an approximation. <hr/> <b>Note</b> The input or output must be floating point. <hr/>
Newton-Raphson	Floating-point, fixed-point, and built-in integer types	You want a fast, approximate calculation.

The Exact method provides results that are consistent with MATLAB computations.

---

**Note** The algorithms for sqrt and signedSqrt are always of Exact type, no matter what selection appears on the block dialog box.

---

## Number of iterations

Specify the number of iterations to perform the Newton-Raphson algorithm. The default value is 3.

This parameter is not available when you select Exact for **Method**.


---

**Note** If you enter 0, the block output is the initial guess of the Newton-Raphson algorithm.

---

# Sqrt, Signed Sqrt, Reciprocal Sqrt

The **Data Types** pane of the block dialog box appears as follows:

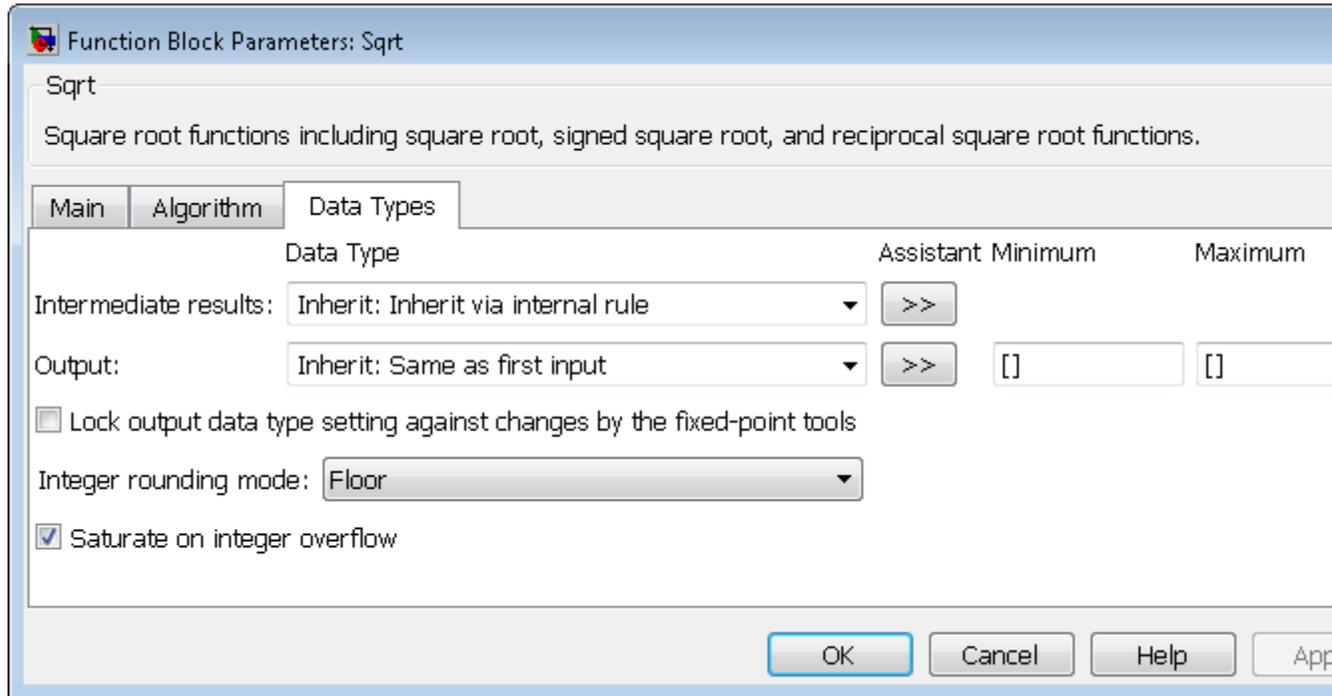

## Intermediate results data type

Specify the data type for intermediate results (available only when you set **Function** to `sqrt` or `rSqrt` on the **Main** pane). You can set the data type to:

- A rule that inherits a data type, for example, `Inherit:Inherit via internal rule`
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object

# Sqrt, Signed Sqrt, Reciprocal Sqrt

- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Follow these guidelines on setting an intermediate data type explicitly for the square root function, `sqrt`:

<b>Input and Output Data Types</b>	<b>Intermediate Data Type</b>
Input or output is double.	Use double.
Input or output is single, and any non-single data type is <i>not</i> double.	Use single or double.
Input and output are fixed point.	Use fixed point.

Follow these guidelines on setting an intermediate data type explicitly for the reciprocal square root function, `rSqrt`:

<b>Input and Output Data Types</b>	<b>Intermediate Data Type</b>
Input is double and output is not single.	Use double.
Input is not single and output is double.	Use double.
Input and output are fixed point.	Use fixed point.

# Sqrt, Signed Sqrt, Reciprocal Sqrt

---

---

**Caution** Do not set **Intermediate results data type** to `Inherit:Inherit` from output when:

- You select Newton-Raphson to compute the reciprocal of a square root.
- The input data type is floating point.
- The output data type is fixed point.

Under these conditions, selecting `Inherit:Inherit` from output yields suboptimal performance and produces an error.

To avoid this error, convert the input signal from a floating-point to fixed-point data type. For example, insert a **Data Type Conversion** block in front of the **Sqrt** block to perform the conversion.

---

## Output data type

Specify the output data type. You can set the data type to:

- A rule that inherits a data type, for example, `Inherit:Inherit` via back propagation
- The name of a built-in data type, for example, `single`
- The name of a data type object, for example, a `Simulink.NumericType` object
- An expression that evaluates to a data type, for example, `fixdt(1,16,0)`

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Output data type** parameter.

See “Specify Block Output Data Types” in the *Simulink User’s Guide* for more information.

## Output minimum

Specify the minimum value that the block can output. The default value is [] (unspecified). Simulink uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Output maximum

Specify the maximum value that the block can output. The default value is [] (unspecified). Simulink uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor. For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the

# Sqrt, Signed Sqrt, Reciprocal Sqrt


Action	Reasons for Taking This Action	What Happens for Overflows	Example
			check box selected, the block output saturates at 127. Similarly, the block output saturates at a minimum output value of -128.
Do not select this check box.	<p>You want to optimize efficiency of your generated code.</p> <p>You want to avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.</p>	Overflows wrap to the appropriate value that is representable by the data type.	The maximum value that the int8 (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box cleared, the software interprets the overflow-causing value as int8, which can produce an unintended result. For example, a block result of 130 (binary 1000 0010) expressed as int8, is -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Examples

### sqrt Function

Suppose that you have the following model:

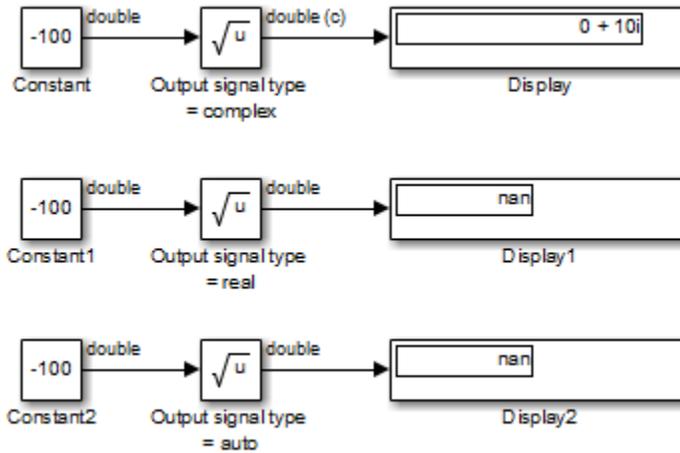


When the input to the Sqrt block is negative and the **Output signal type** is auto or real, the sqrt function outputs NaN. However, setting **Output signal type** to complex produces the correct answer.

# Sqrt, Signed Sqrt, Reciprocal Sqrt


## signedSqrt Function

Suppose that you have the following model:

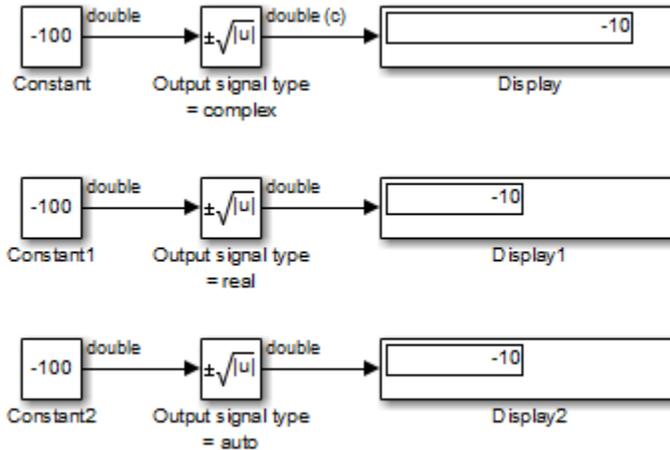


When the input to the Sqrt block is negative, the block output is the same for any **Output signal type** setting. If you change the first Display block format from short to decimal (Stored Integer), you see the value of the imaginary part for the complex output.

# Sqrt, Signed Sqrt, Reciprocal Sqrt

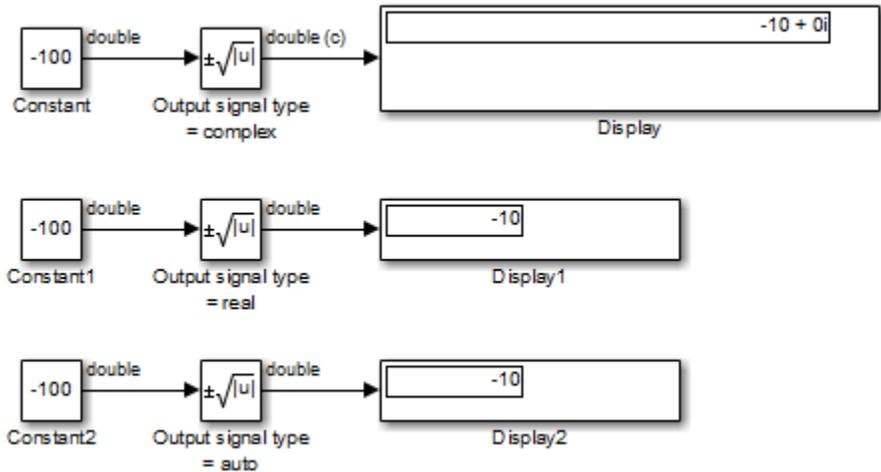

## rSqrt Function with Floating-Point Inputs

Suppose that you have the following model:

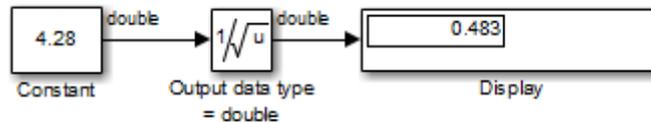

In the Sqrt block dialog box, assume that the following parameter settings apply:


Parameter	Setting
Method	Newton-Raphson
Number of iterations	1
Intermediate results data type	Inherit:Inherit from input

# Sqrt, Signed Sqrt, Reciprocal Sqrt

After one iteration of the Newton-Raphson algorithm, the block output is within 0.0004 of the final value (0.4834).

## rSqrt Function with Fixed-Point Inputs

Suppose that you have the following model:

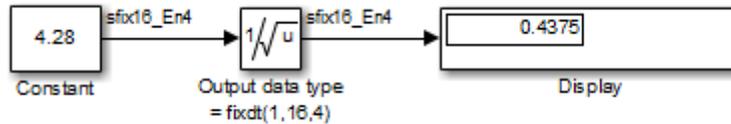

In the Sqrt block dialog box, assume that the following parameter settings apply:

Parameter	Setting
Method	Newton-Raphson
Number of iterations	1
Intermediate results data type	Inherit:Inherit from input

After one iteration of the Newton-Raphson algorithm, the block output is within 0.0459 of the final value (0.4834).

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No


## See Also

Math Function, Trigonometric Function

**Purpose** Remove singleton dimensions from multidimensional signal

**Library** Math Operations

## Description

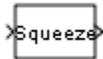


The Squeeze block removes singleton dimensions from its multidimensional input signal. A singleton dimension is any dimension whose size is one. The Squeeze block operates only on signals whose number of dimensions is greater than two. Scalar, one-dimensional (vector), and two-dimensional (matrix) signals pass through the Squeeze block unchanged.

## Data Type Support

The Squeeze block accepts input signals of any dimension and of any data type that Simulink supports, including fixed-point and enumerated data types. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.


## Parameters and Dialog Box

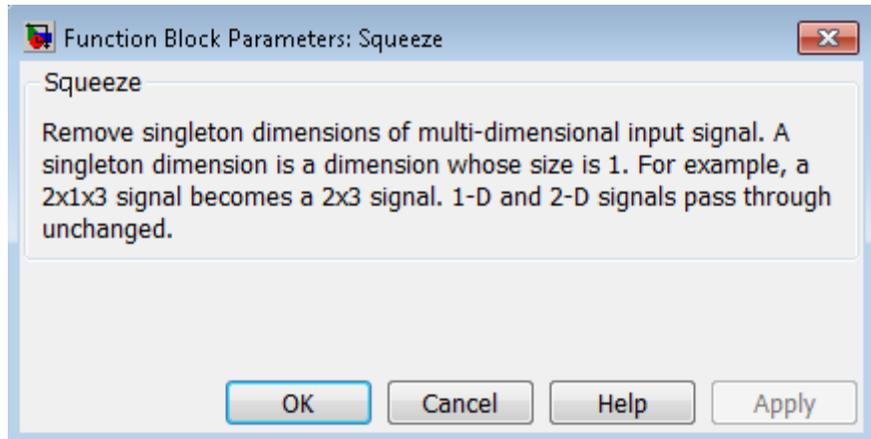

# Squeeze

## Examples

In the following model, the Squeeze block converts a multidimensional array of size 3-by-1-by-2 into a 3-by-2 signal:

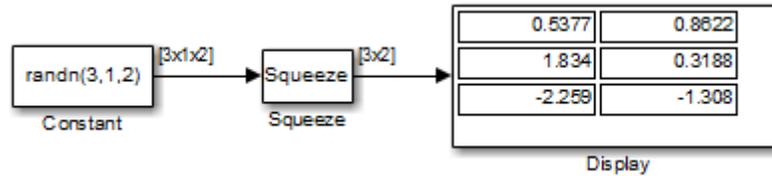

Because the Constant block supplies a signal with random values to the Squeeze block, the values in the Display block vary from simulation to simulation.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from the driving block
Scalar Expansion	N/A
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Reshape

**Purpose** Implement linear state-space system

**Library** Continuous

**Description** The State-Space block implements a system whose behavior you define as

$$\left. \begin{array}{l} \dot{x} = Ax + Bu \\ y = Cx + Du \end{array} \right\}$$


$$\dot{x} = Ax + Bu$$

$$y = Cx + Du$$

$$x|_{t=t_0} = x_0,$$

where  $x$  is the state vector,  $u$  is the input vector,  $y$  is the output vector and  $x_0$  is the initial condition of the state vector. The matrix coefficients must have these characteristics:

- $A$  must be an  $n$ -by- $n$  matrix, where  $n$  is the number of states.
- $B$  must be an  $n$ -by- $m$  matrix, where  $m$  is the number of inputs.
- $C$  must be an  $r$ -by- $n$  matrix, where  $r$  is the number of outputs.
- $D$  must be an  $r$ -by- $m$  matrix.

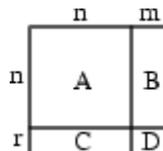

In general, the block has one input port and one output port. The number of rows in  $C$  or  $D$  matrix is the same as the width of the output port. The number of columns in the  $B$  or  $D$  matrix are the same as the width of the input port. If you want to model an autonomous linear system with no inputs, set the  $B$  and  $D$  matrices to empty. In this case, the block acts as a source block with no input port and one output port, and implements the following system:

# State-Space

---

$$\dot{x} = Ax$$

$$y = Cx$$

$$x|_{t=t_0} = x_0.$$


Simulink software converts a matrix containing zeros to a sparse matrix for efficient multiplication.

## **Data Type Support**

A State-Space block accepts and outputs real signals of type double.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

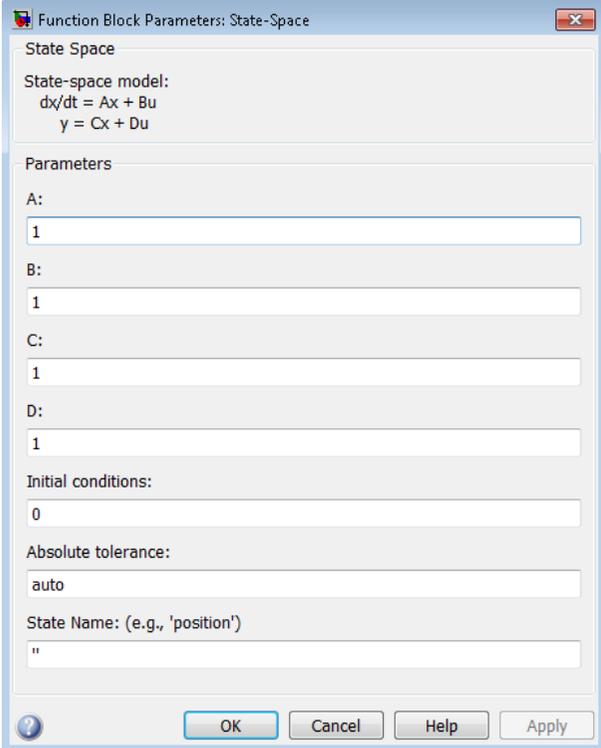

Function Block Parameters: State-Space

State Space

State-space model:  
 $dx/dt = Ax + Bu$   
 $y = Cx + Du$

Parameters

A:  
1

B:  
1

C:  
1

D:  
1

Initial conditions:  
0

Absolute tolerance:  
auto

State Name: (e.g., 'position')  
"

OK Cancel Help Apply

# State-Space

---

## **A**

Specify the n-by-n matrix coefficient, where n is the number of states.

### **Settings**

Default: 1

### **Command-Line Information**

Parameter: A

Type: matrix

Value: '1'

Default: '1'

**B**

Specify the n-by-m matrix coefficient, where n is the number of states and m is the number of inputs.

**Settings**

Default: 1

**Command-Line Information**

Parameter: B

Type: matrix

Value: '1'

Default: '1'

# State-Space

---

## **C**

Specify the r-by-n matrix coefficient, where r is the number of outputs and n is the number of states.

### **Settings**

**Default:** 1

### **Command-Line Information**

**Parameter:** C

**Type:** matrix

**Value:** '1'

**Default:** '1'

## **D**

Specify the r-by-m matrix coefficient, where r is the number of outputs and m is the number of inputs.

### **Settings**

Default: 1

### **Command-Line Information**

Parameter: D

Type: matrix

Value: '1'

Default: '1'

# State-Space

---

## **Initial conditions**

Specify the initial state vector.

## **Settings**

**Default:** 0

The initial conditions of this block cannot be inf or NaN.

## **Command-Line Information**

**Parameter:** X0

**Type:** vector

**Value:** '0'

**Default:** '0'

## Absolute tolerance

Specify the absolute tolerance for computing block states.

### Settings

**Default:** auto

- You can enter `auto`, `-1`, a positive real scalar or vector.
- If you enter `auto` or `-1`, then Simulink uses the absolute tolerance value in the Configuration Parameters dialog box (see “Solver Pane”) to compute block states.
- If you enter a real scalar, then that value overrides the absolute tolerance in the Configuration Parameters dialog box for computing all block states.
- If you enter a real vector, then the dimension of that vector must match the dimension of the continuous states in the block. These values override the absolute tolerance in the Configuration Parameters dialog box.

### Command-Line Information

**Parameter:** `AbsoluteTolerance`

**Type:** string, scalar, or vector

**Value:** `'auto'` | `'-1'` | any positive real scalar or vector

**Default:** `'auto'`

# State-Space

---

## State Name (e.g., 'position')

Assign a unique name to each state.

### Settings

Default: ' '

If this field is blank, no name assignment occurs.

### Tips

- To assign a name to a single state, enter the name between quotes, for example, 'velocity'.
- To assign names to multiple states, enter a comma-delimited list surrounded by braces, for example, {'a', 'b', 'c'}. Each name must be unique.
- The state names apply only to the selected block.
- The number of states must divide evenly among the number of state names.
- You can specify fewer names than states, but you cannot specify more names than states.

For example, you can specify two names in a system with four states. The first name applies to the first two states and the second name to the last two states.

- To assign state names with a variable in the MATLAB workspace, enter the variable without quotes. A variable can be a string, cell array, or structure.

### Command-Line Information

**Parameter:** ContinuousStateAttributes

**Type:** string

**Value:** ' ' | user-defined

**Default:** ' '

## Examples

The following Simulink examples show how to use the State-Space block:

- `sldemo_dbldcart1`
- `aero_vibrati`

## Characteristics

Direct Feedthrough	Only if $\mathbf{D} \neq 0$
Sample Time	Continuous
Scalar Expansion	Yes, of the initial conditions
States	Depends on the size of $\mathbf{A}$
Dimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Discrete State-Space

# Step

---

**Purpose** Generate step function

**Library** Sources

## Description




The Step block provides a step between two definable levels at a specified time. If the simulation time is less than the **Step time** parameter value, the block's output is the **Initial value** parameter value. For simulation time greater than or equal to the **Step time**, the output is the **Final value** parameter value.

The numeric block parameters must be of the same dimensions after scalar expansion. If the **Interpret vector parameters as 1-D** option is off, the block outputs a signal of the same dimensions and dimensionality as the parameters. If the **Interpret vector parameters as 1-D** option is on and the numeric parameters are row or column vectors (that is, single row or column 2-D arrays), the block outputs a vector (1-D array) signal. Otherwise, the block outputs a signal of the same dimensionality and dimensions as the parameters.

## Data Type Support

The Step block outputs real signals of type double.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

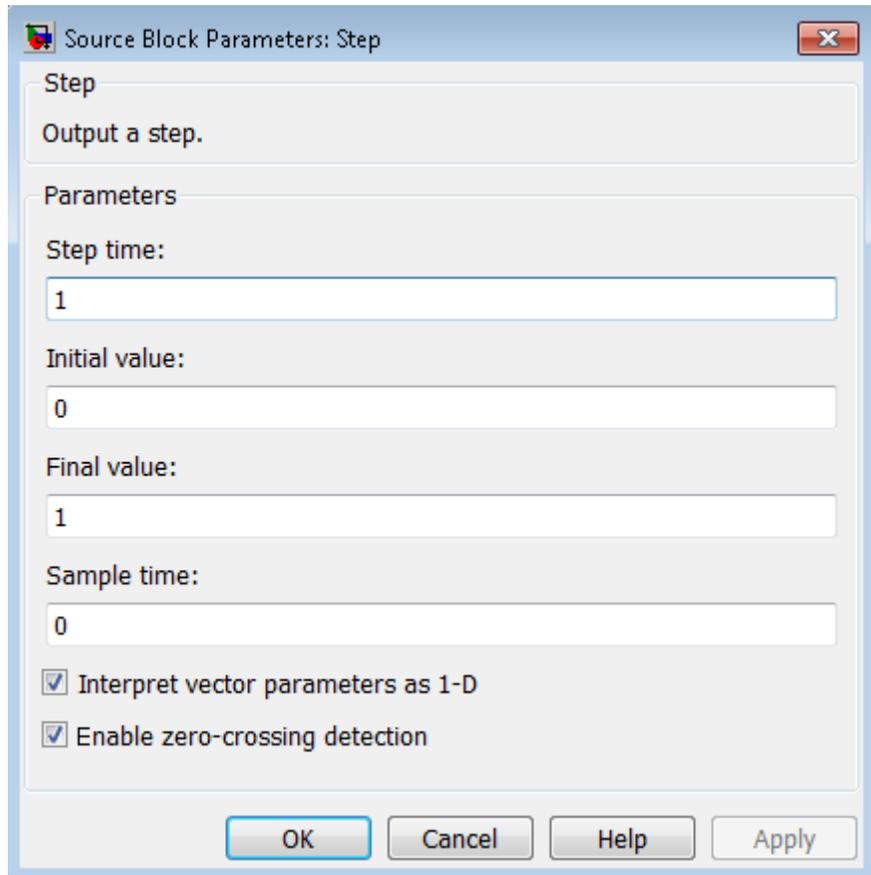

## Parameters and Dialog Box

### Step time

Specify the time, in seconds, when the output jumps from the **Initial value** parameter to the **Final value** parameter. The default is 1 second.

### Initial value

Specify the block output until the simulation time reaches the **Step time** parameter. The default is 0.

# Step

---

## Final value

Specify the block output when the simulation time reaches and exceeds the **Step time** parameter. The default is 1.

## Sample time

Specify the sample rate of step. See “Specify Sample Time” in the online documentation for more information.

## Interpret vector parameters as 1-D

If selected, column or row matrix values for the Step block’s numeric parameters result in a vector output signal; otherwise, the block outputs a signal of the same dimensionality as the parameters. If this option is not selected, the block always outputs a signal of the same dimensionality as the block’s numeric parameters. See “Determining the Output Dimensions of Source Blocks” in the Simulink documentation.

## Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

## Examples

The following Simulink examples show how to use the Step block:

- `sldemo_doublebounce`
- `sldemo_enginewc`

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of parameters
Dimensionalized	Yes
Zero-Crossing Detection	Yes, if enabled.

## See Also

Ramp

**Purpose** Stop simulation when input is nonzero

**Library** Sinks

## Description



The Stop Simulation block stops the simulation when the input is nonzero. The simulation completes the current time step before terminating. If the block input is a vector, any nonzero vector element causes the simulation to stop.


When you use the Stop Simulation block in a For Iterator subsystem, the stop action occurs after execution of *all* the iterations in the subsystem during a time step. The stop action does not interrupt execution until the start of the next time step.

You cannot use the Stop Simulation block to pause the simulation. To create a block that pauses the simulation, see “Creating Pause Blocks” in the Simulink documentation.

## Data Type Support

The Stop Simulation block accepts real signals of type double or Boolean. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

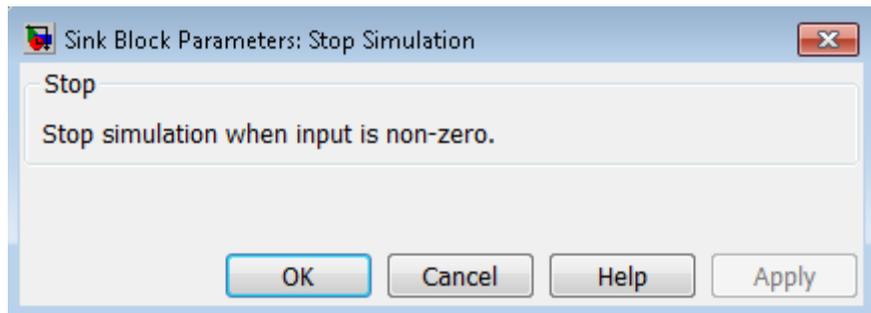


# Stop Simulation

---

## Examples


### Usage with the Relational Operator Block

You can use the Stop Simulation block with the Relational Operator block to control when a simulation stops. For example, the following model stops simulation when the simulation time reaches 10.

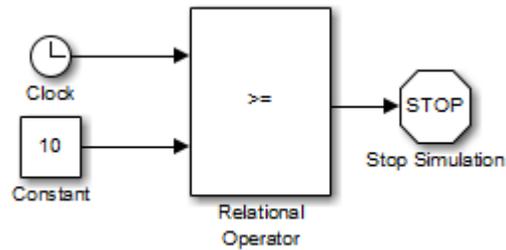

## Usage with the Integrator Block

You can use the Stop Simulation block with the Integrator block to control when a simulation stops. For example, the `sldemo_absbrake` model stops simulation when the saturation port of the Integrator block outputs a value of 1 or -1.

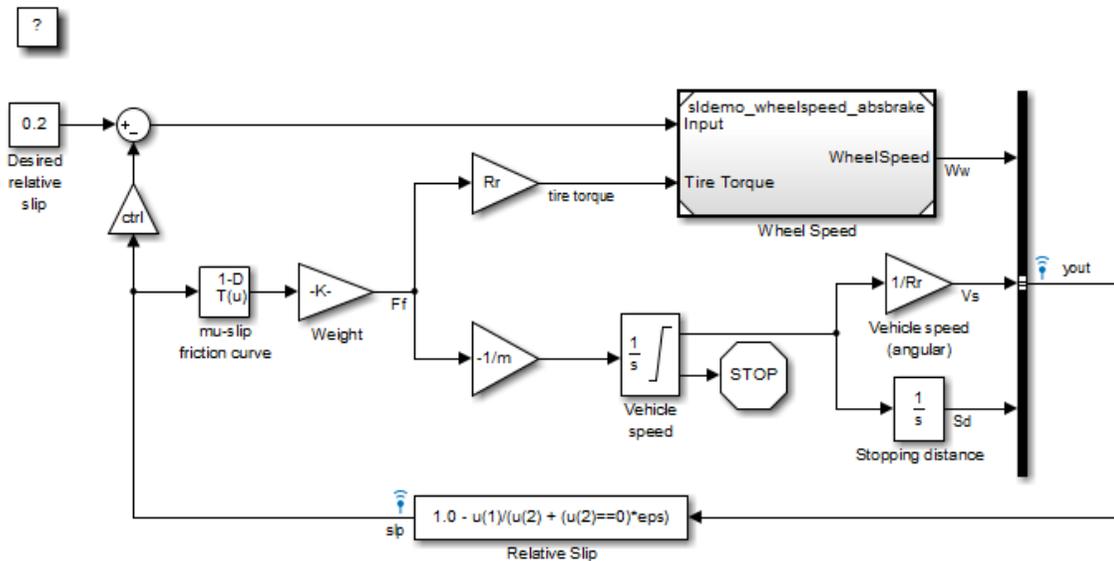

## Characteristics

Sample Time	Inherited from driving block
Dimensionalized	Yes
Zero-Crossing Detection	No

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

**Purpose** Represent system within another system

**Library** Ports & Subsystems

## Description



A subsystem block contains a subset of blocks or code within an overall model or system. The subsystem block can represent a virtual subsystem or a nonvirtual subsystem.

In nonvirtual subsystems, you can control when the contents of the subsystem are evaluated. Nonvirtual subsystems are executed as a single unit (atomic execution). You can create conditionally executed nonvirtual subsystems that execute only when a transition occurs on a triggering, function-call, action, or enabling input (see “Conditional Subsystems”).

A subsystem is virtual if the block is neither conditionally executed nor atomic.

---

**Tip** To determine if a subsystem is virtual, use the `get_param` function for the Boolean block parameter `IsSubsystemVirtual`.

---

An Atomic Subsystem block is a subsystem block in which **Treat as atomic unit** is selected by default.

A CodeReuse Subsystem block is a subsystem block in which **Treat as atomic unit** is selected and **Function packaging** is set to Reusable function, specifying the function code generation format for the subsystem. (see “Function packaging” on page 1-1702 for details).

To create a subsystem, do one of the following:

- Copy a subsystem block from the Ports & Subsystems library into your model. Then add blocks to the subsystem by opening the subsystem block and copying blocks into it.
- Select all blocks and lines that make up the subsystem, and select **Diagram > Subsystem & Model Reference > Create Subsystem**

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

**from Selection.** Simulink replaces the blocks with a subsystem block, along with the necessary Inport and Outport blocks to reflect signals entering and leaving the subsystem.

The number of input ports drawn on the subsystem block's icon corresponds to the number of Inport blocks in the subsystem. Similarly, the number of output ports drawn on the block corresponds to the number of Outport blocks in the subsystem.

The subsystem block supports signal label propagation through subsystem Inport and Outport blocks.

See “Create a Subsystem” for more information.


## Data Type Support

See Inport for information on the data types accepted by a subsystem's input ports. See Outport for information on the data types output by a subsystem's output ports.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

## Parameters and Dialog Box

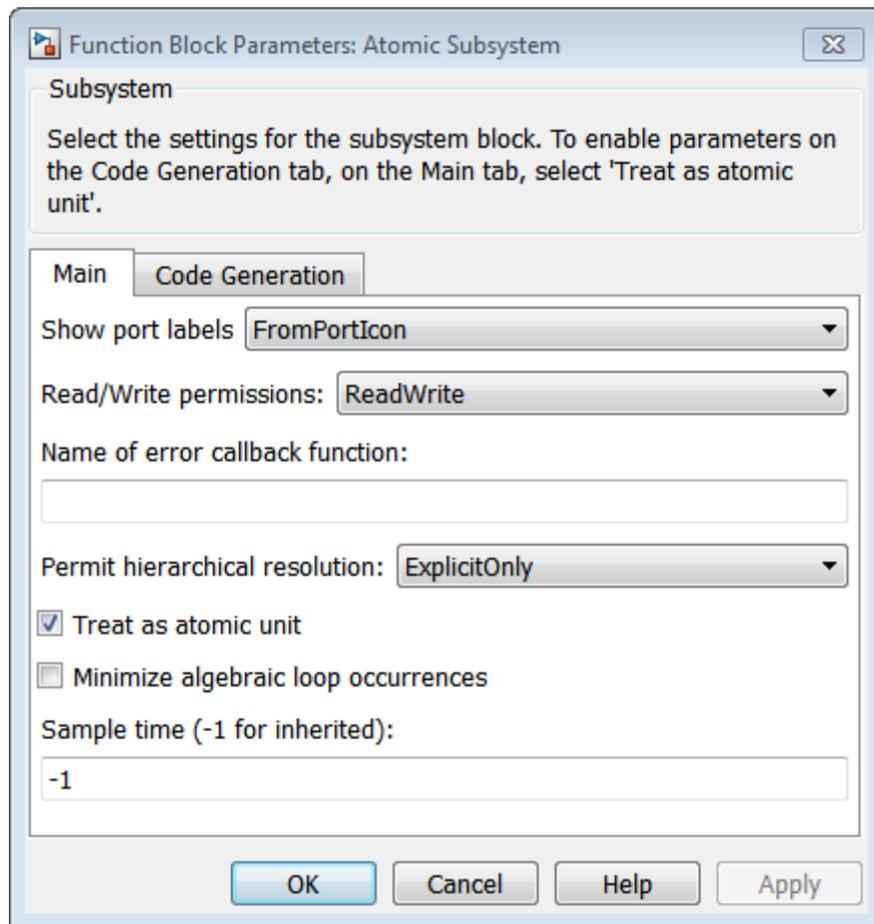

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

Function Block Parameters: Atomic Subsystem

Subsystem

Select the settings for the subsystem block. To enable parameters on the Code Generation tab, on the Main tab, select 'Treat as atomic unit'.

Main Code Generation

Function packaging: Nonreusable function

Function name options: User specified

Function name:  
myfun

File name options: User specified

File name (no extension):  
myfile

Function interface: void\_void

Function with separate data

Memory section for initialize/terminate functions: Inherit from model

Memory section for execution functions: Inherit from model

Memory section for constants: Inherit from model

Memory section for internal data: Inherit from model

Memory section for parameters: Inherit from model

OK Cancel Help Apply

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

---

**Note** Parameters on the Code Generation tab require a Simulink Coder or Embedded Coder license. For more information, see the parameter sections.

---

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Show port labels

Cause Simulink software to display labels for the subsystem's ports on the subsystem's icon.

### Settings

**Default:** FromPortIcon

none

Does not display port labels on the subsystem block.

FromPortIcon

If the corresponding port icon displays a signal name, display the signal name on the subsystem block. Otherwise, display the port block's name.

FromPortBlockName

Display the name of the corresponding port block on the subsystem block.

SignalName

If a name exists, display the name of the signal connected to the port on the subsystem block; otherwise, the name of the corresponding port block.

### Command-Line Information

See "Block-Specific Parameters" on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## **Read/Write permissions**

Control user access to the contents of the subsystem.

### **Settings**

**Default:** ReadWrite

ReadWrite

Enables opening and modification of subsystem contents.

ReadOnly

Enables opening but not modification of the subsystem. If the subsystem resides in a block library, you can create and open links to the subsystem and can make and modify local copies of the subsystem but cannot change the permissions or modify the contents of the original library instance.

NoReadOrWrite

Disables opening or modification of subsystem. If the subsystem resides in a library, you can create links to the subsystem in a model but cannot open, modify, change permissions, or create local copies of the subsystem.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## **Name of error callback function**

Enter name of a function to be called if an error occurs while Simulink software is executing the subsystem.

## **Settings**

**Default:** ' '

Simulink software passes two arguments to the function: the handle of the subsystem and a string that specifies the error type. If no function is specified, Simulink software displays a generic error message if executing the subsystem causes an error.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## **Permit hierarchical resolution**

Specify whether to resolve names of workspace variables referenced by this subsystem.

### **Settings**

**Default:** All

All

Resolve all names of workspace variables used by this subsystem, including those used to specify block parameter values and Simulink data objects (for example, `Simulink.Signal` objects).

ExplicitOnly

Resolve only names of workspace variables used to specify block parameter values, data store memory (where no block exists), signals, and states marked as “must resolve”.

None

Do not resolve any workspace variable names.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Treat as atomic unit

Causes Simulink software to treat the subsystem as a unit when determining the execution order of block methods.

### Settings

Default: Off



On

Cause Simulink software to treat the subsystem as a unit when determining the execution order of block methods. For example, when it needs to compute the output of the subsystem, Simulink software invokes the output methods of all the blocks in the subsystem before invoking the output methods of other blocks at the same level as the subsystem block.



Off

Cause Simulink software to treat all blocks in the subsystem as being at the same level in the model hierarchy as the subsystem when determining block method execution order. This can cause execution of methods of blocks in the subsystem to be interleaved with execution of methods of blocks outside the subsystem.

## Dependencies

This parameter enables:

- “Minimize algebraic loop occurrences” on page 1-1698.
- “Sample time (-1 for inherited)” on page 1-1701
- “Function packaging” on page 1-1702 (requires a Simulink Coder license)

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Minimize algebraic loop occurrences

Try to eliminate any artificial algebraic loops that include the atomic subsystem

### Settings

Default: Off



On

Try to eliminate any artificial algebraic loops that include the atomic subsystem.



Off

Do not try to eliminate any artificial algebraic loops that include the atomic subsystem.

### Dependency

“Treat as atomic unit” on page 1-1697 enables this parameter.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## **Propagate execution context across subsystem boundary**

Enable execution context propagation across the boundary of this subsystem.

### **Settings**

**Default:** Off



On

Enables execution context propagation across this subsystem's boundary.



Off

Does not enable execution context propagation across this subsystem's boundary.

### **Dependency**

Conditional execution of the subsystem enables this parameter.

### **Command-Line Information**

See "Block-Specific Parameters" on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Warn if function-call inputs are context-specific

Simulink displays a warning if it has to compute any of this function-call subsystem's inputs directly or indirectly during execution of a function-call.

### Settings

**Default:** Off



On

Simulink displays a warning if it has to compute any of this function-call subsystem's inputs directly or indirectly during execution of a function-call.



Off

Simulink does not display a warning if it has to compute any of this function-call subsystem's inputs directly or indirectly during execution of a function-call.

### Dependency

Use of a function-call subsystem enables this parameter.

The option is effective only when the **Context-dependent inputs** diagnostic on the **Diagnostics > Connectivity** pane of the Configuration Parameters dialog box is set to `Use local settings`.

### Command-Line Information

See "Block-Specific Parameters" on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Sample time (-1 for inherited)

Specify whether all blocks in this subsystem must run at the same rate or can run at different rates.

### Settings

Default: -1

- -1

Specify the inherited sample time. Use this sample time if the blocks in the subsystem can run at different rates.

- [Ts 0]

Specify periodic sample time.

### Tips

- If the blocks in the subsystem can run at different rates, specify the subsystem's sample time as inherited (-1).
- If all blocks must run at the same rate, specify the sample time corresponding to this rate as the value of the subsystem's **Sample time** parameter.
- If any of the blocks in the subsystem specify a different sample time (other than -1 or `inf`), Simulink software displays an error message when you update or simulate the model. For example, suppose all the blocks in the subsystem must run 5 times a second. To ensure this, specify the sample time of the subsystem as 0.2. In this example, if any of the blocks in the subsystem specify a sample time other than 0.2, -1, or `inf`, Simulink software displays an error when you update or simulate the model.

### Dependency

"Treat as atomic unit" on page 1-1697 enables this parameter.

### Command-Line Information

See "Block-Specific Parameters" on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Function packaging

Specify the code format to be generated for an atomic (nonvirtual) subsystem.

### Settings

**Default:** Auto

#### Auto

Simulink Coder software chooses the optimal format for you based on the type and number of instances of the subsystem that exist in the model.

#### Inline

Simulink Coder software inlines the subsystem unconditionally.

#### Nonreusable function

Simulink Coder software explicitly generates a separate function in a separate file. Subsystems with this setting generate functions that might have arguments depending on the “Function interface” on page 1-1713 parameter setting. You can name the generated function and file using parameters “Function name” on page 1-1707 and “File name (no extension)” on page 1-1710. These functions are not reentrant.

#### Reusable function

Simulink Coder software generates a function with arguments that allows reuse of subsystem code when a model includes multiple instances of the subsystem.

This option also generates a function with arguments that allows subsystem code to be reused in the generated code of a model reference hierarchy that includes multiple instances of a subsystem across referenced models. In this case, the subsystem must be in a library.

### Tips

- When you want multiple instances of a subsystem to be represented as one reusable function, you can designate each one of them as `Auto` or as `Reusable function`. It is best to use one or the other, as using

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

both creates two reusable functions, one for each designation. The outcomes of these choices differ only when reuse is not possible. Selecting Auto does not allow control of the function or file name for the subsystem code.

- The `Reusable` function and `Auto` options both try to determine if multiple instances of a subsystem exist and if the code can be reused. The difference between the options' behavior is that when reuse is not possible:
  - `Auto` yields inlined code, or if circumstances prohibit inlining, separate functions without arguments for each subsystem instance.
  - `Reusable` function yields a separate function with arguments for each subsystem instance in the model.
- If you select `Reusable` function while your generated code is under source control, set **File name options** to `Use subsystem name`, `Use function name`, or `User specified`. Otherwise, the names of your code files change whenever you modify your model, which prevents source control on your files.

## Dependencies

- This parameter requires a Simulink Coder license.
- “Treat as atomic unit” on page 1-1697 enables this parameter.
- Setting this parameter to `Nonreusable` function or `Reusable` function enables the following parameters:
  - “Function name options” on page 1-1705
  - “File name options” on page 1-1708
  - “Memory section for initialize/terminate functions” on page 1-1714 (requires a license for Embedded Coder software and an ERT-based system target file)
  - “Memory section for execution functions” on page 1-1716 (requires a license for Embedded Coder software and an ERT-based system target file)

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

- Setting this parameter to `Nonreusable` function enables “Function with separate data” on page 1-1711 (requires a license for Embedded Coder software and an ERT-based system target file).

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Function name options

Specify how Simulink Coder software is to name the function it generates for the subsystem.

### Settings

**Default:** Auto

#### Auto

Assign a unique function name using the default naming convention, *model\_subsystem()*, where *model* is the name of the model and *subsystem* is the name of the subsystem (or that of an identical one when code is being reused).

If you select **Reusable** function for the **Function packaging** parameter and there are multiple instances of the reusable subsystem in a model reference hierarchy, in order to generate reusable code for the subsystem, **Function name options** must be set to **Auto**.

#### Use subsystem name

Use the subsystem name as the function name.

---

**Note** When a subsystem is a library block and the subsystem parameter “Function packaging” on page 1-1702 is set to **Reusable** function, if you set the **Use subsystem name** option, the code generator uses the name of the library block for the subsystem’s function name and file name.

---

#### User specified

This option enables the **Function name** field. Enter any legal C or C++ function name, which must be unique.

### Dependencies

- This parameter requires a Simulink Coder license.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

- Setting “Function packaging” on page 1-1702 to Nonreusable function or Reusable function enables this parameter.
- Setting this parameter to User specified enables the “Function name” on page 1-1707 parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Function name

Specify a unique, valid C or C++ function name for subsystem code.

## Settings

Default: ' '

Use this parameter if you want to give the function a specific name instead of allowing the Simulink Coder code generator to assign its own autogenerated name or use the subsystem name.

## Dependencies

- This parameter requires a Simulink Coder license.
- Setting “Function name options” on page 1-1705 to User specified enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## File name options

Specify how Simulink Coder software names the separate file for the function it generates for the subsystem.

### Settings

**Default:** Auto

#### Auto

Depending on the configuration of the subsystem and how many instances are in the model, Auto yields different results:

- If the code generator does *not* generate a separate file for the subsystem, the subsystem code is generated within the code module generated from the subsystem's parent system. If the subsystem's parent is the model itself, the subsystem code is generated within *model.c* or *model.cpp*.
- If you select `Reusable` function for the **Function packaging** parameter and your generated code is under source control, consider specifying a **File name options** value other than Auto. This prevents the generated file name from changing due to unrelated model modifications, which is problematic for using source control to manage configurations.
- If you select `Reusable` function for the **Function packaging** parameter and there are multiple instances of the reusable subsystem in a model reference hierarchy, in order to generate reusable code for the subsystem, **File name options** must be set to Auto.

#### Use subsystem name

The code generator generates a separate file, using the subsystem (or library block) name as the file name.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

---

**Note** When **File name options** is set to Use subsystem name, the subsystem file name is mangled if the model contains Model blocks, or if a model reference target is being generated for the model. In these situations, the file name for the subsystem consists of the subsystem name prefixed by the model name.

---

## Use function name

The code generator uses the function name specified by **Function name options** as the file name.

## User specified

This option enables the **File name (no extension)** text entry field. The code generator uses the name you enter as the file name. Enter any file name, but do not include the .c or .cpp (or any other) extension. This file name need not be unique.

---

**Note** While a subsystem source file name need not be unique, you must avoid giving nonunique names that result in cyclic dependencies (for example, sys\_a.h includes sys\_b.h, sys\_b.h includes sys\_c.h, and sys\_c.h includes sys\_a.h).

---

## Dependencies

- This parameter requires a Simulink Coder license.
- Setting “Function packaging” on page 1-1702 to Nonreusable function or Reusable function enables this parameter.
- Setting this parameter to User specified enables the “File name (no extension)” on page 1-1710 parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## **File name (no extension)**

Specify how Simulink Coder software is to name the file for the function it generates for the subsystem.

### **Settings**

**Default:** ' '

- The filename that you specify does not have to be unique. However, avoid giving non-unique names that result in cyclic dependencies (for example, `sys_a.h` includes `sys_b.h`, `sys_b.h` includes `sys_c.h`, and `sys_c.h` includes `sys_a.h`).

### **Dependencies**

- This parameter requires a Simulink Coder license.
- Setting “File name options” on page 1-1708 to `User specified` enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Function with separate data

Generate subsystem function code in which the internal data for an atomic subsystem is separated from its parent model and is owned by the subsystem.

### Settings

**Default:** Off

On

Generate subsystem function code in which the internal data for an atomic subsystem is separated from its parent model and is owned by the subsystem. The subsystem data structure is declared independently from the parent model data structures. A subsystem with separate data has its own block I/O and DWork data structure. As a result, the generated code for the subsystem is easier to trace and test. The data separation also tends to reduce the maximum size of global data structures throughout the model, because they are split into multiple data structures.

Off

Do not generate subsystem function code in which the internal data for an atomic subsystem is separated from its parent model and is owned by the subsystem.

### Dependencies

- This parameter requires a license for Embedded Coder software and an ERT-based system target file.
- Setting “Function packaging” on page 1-1702 to Nonreusable function enables this parameter.
- Selecting this check box enables these parameters:
  - “Memory section for constants” on page 1-1718
  - “Memory section for internal data” on page 1-1719
  - “Memory section for parameters” on page 1-1720

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Function interface

For this subsystem, specify whether the generated function uses arguments.

### Settings

**Default:** `void_void`

`void_void`

Generate a function without arguments and passes data as global variables. For example:

```
void subsystem_function(void)
```

Allow arguments

Generate a function that uses arguments instead of passing data as global variables. This specification reduces global RAM. It might reduce code size and improve execution speed, and allow the code generator to apply additional optimizations. For example:

```
void subsystem_function(real_T rtu_In1, real_T rtu_In2,  
                        real_T *rtty_Out1)
```

### Dependencies

- This parameter requires an Embedded Coder license and an ERT-based system target file.
- Setting “Function packaging” on page 1-1702 to Nonreusable function enables this parameter.

### Command-Line Information

For the command-line information, see “Block-Specific Parameters” on page 7-113.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Memory section for initialize/terminate functions

Indicate how the Embedded Coder software is to apply memory sections to the subsystem's initialization and termination functions.

### Settings

**Default:** `Inherit from model`

`Inherit from model`

Apply the root model's memory sections to the subsystem's function code

`Default`

Not apply memory sections to the subsystem's system code, overriding any model-level specification

The memory section of interest

Apply one of the model's memory sections to the subsystem

### Tips

- The possible values vary depending on what (if any) package of memory sections you have set for the model's configuration. See "About Memory Sections", "Configure Memory Sections", and "Code Generation Pane: Memory Sections" in the Embedded Coder documentation.
- If you have not configured the model with a package, `Inherit from model` is the only value that appears. Otherwise, the list includes `Default` and all memory sections the model's package contains.
- These options can be useful for overriding the model's memory section settings for the given subsystem.

### Dependencies

- This parameter requires a license for Embedded Coder software and an ERT-based system target file.
- Setting "Function packaging" on page 1-1702 to `Nonreusable function` or `Reusable function` enables this parameter.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Memory section for execution functions

Indicate how the Embedded Coder software is to apply memory sections to the subsystem's execution functions.

### Settings

**Default:** `Inherit from model`

`Inherit from model`

Apply the root model's memory sections to the subsystem's function code

`Default`

Not apply memory sections to the subsystem's system code, overriding any model-level specification

The memory section of interest

Apply one of the model's memory sections to the subsystem

### Tips

- The possible values vary depending on what (if any) package of memory sections you have set for the model's configuration. See "About Memory Sections", "Configure Memory Sections", and "Code Generation Pane: Memory Sections" in the Embedded Coder documentation.
- If you have not configured the model with a package, `Inherit from model` is the only value that appears. Otherwise, the list includes `Default` and all memory sections the model's package contains.
- These options can be useful for overriding the model's memory section settings for the given subsystem.

### Dependencies

- This parameter requires a license for Embedded Coder software and an ERT-based system target file.
- Setting "Function packaging" on page 1-1702 to `Nonreusable function` or `Reusable function` enables this parameter.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Memory section for constants

Indicate how the Embedded Coder software is to apply memory sections to the subsystem's data.

### Settings

**Default:** `Inherit from model`

`Inherit from model`

Apply the root model's memory sections to the subsystem's data

`Default`

Not apply memory sections to the subsystem's data, overriding any model-level specification

The memory section of interest

Apply one of the model's memory sections to the subsystem

### Tips

- Can be useful for overriding the model's memory section settings for the given subsystem.
- The possible values vary depending on what (if any) package of memory sections you have set for the model's configuration. See "Configure Memory Sections" in the Embedded Coder documentation.
- If you have not configured the model with a package, `Inherit from model` is the only value that appears. Otherwise, the list includes `Default` and all memory sections the model's package contains.

### Dependencies

- This parameter requires a license for Embedded Coder software and an ERT-based system target file.
- Setting "Function packaging" on page 1-1702 to `Nonreusable function` and selecting the "Function with separate data" on page 1-1711 check box enables this parameter.

### Command-Line Information

See "Block-Specific Parameters" on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Memory section for internal data

Indicate how the Embedded Coder software is to apply memory sections to the subsystem's data.

### Settings

**Default:** `Inherit from model`

`Inherit from model`

Apply the root model's memory sections to the subsystem's data

`Default`

Not apply memory sections to the subsystem's data, overriding any model-level specification

The memory section of interest

Apply one of the model's memory sections to the subsystem

### Tips

- Can be useful for overriding the model's memory section settings for the given subsystem.
- The possible values vary depending on what (if any) package of memory sections you have set for the model's configuration. See "Configure Memory Sections" in the Embedded Coder documentation.
- If you have not configured the model with a package, `Inherit from model` is the only value that appears. Otherwise, the list includes `Default` and all memory sections the model's package contains.

### Dependencies

- This parameter requires a license for Embedded Coder software and an ERT-based system target file.
- Setting "Function packaging" on page 1-1702 to `Nonreusable function` and selecting the "Function with separate data" on page 1-1711 check box enables this parameter.

### Command-Line Information

See "Block-Specific Parameters" on page 7-113 for the command-line information.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Memory section for parameters

Indicate how the Embedded Coder software is to apply memory sections to the subsystem's data.

### Settings

**Default:** `Inherit from model`

`Inherit from model`

Apply the root model's memory sections to the subsystem's function code

`Default`

Not apply memory sections to the subsystem's system code, overriding any model-level specification

The memory section of interest

Apply one of the model's memory sections to the subsystem

### Tips

- Can be useful for overriding the model's memory section settings for the given subsystem.
- The possible values vary depending on what (if any) package of memory sections you have set for the model's configuration. See "Configure Memory Sections" in the Embedded Coder documentation.
- If you have not configured the model with a package, `Inherit from model` is the only value that appears. Otherwise, the list includes `Default` and all memory sections the model's package contains.

### Dependencies

- This parameter requires a license for Embedded Coder software and an ERT-based system target file.
- Setting "Function packaging" on page 1-1702 to `Nonreusable function` and selecting the "Function with separate data" on page 1-1711 check box enables this parameter.

# Subsystem, Atomic Subsystem, Nonvirtual Subsystem, CodeReuse Subsystem

---

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Characteristics

Sample Time	Depends on the blocks in the subsystem
Dimensionalized	Depends on the blocks in the subsystem
Multidimensionalized	Depends on the blocks in the subsystem
Virtual	Yes, if the read-only property <code>IsSubsystemVirtual</code> is on
Zero Crossing	Yes, for enable and trigger ports if present

# Sum, Add, Subtract, Sum of Elements

---

**Purpose** Add or subtract inputs

**Library** Math Operations

**Description** The Sum block performs addition or subtraction on its inputs. This block can add or subtract scalar, vector, or matrix inputs. It can also collapse the elements of a signal.



You specify the operations of the block with the **List of signs** parameter. Plus (+), minus (-), and spacer (|) characters indicate the operations to be performed on the inputs:

- If there are two or more inputs, then the number of + and - characters must equal the number of inputs. For example, “+ - +” requires three inputs and configures the block to subtract the second (middle) input from the first (top) input, and then add the third (bottom) input.
- All nonscalar inputs must have the same dimensions. Scalar inputs will be expanded to have the same dimensions as the other inputs.
- A spacer character creates extra space between ports on the block’s icon.
- For a round Sum block, the first input port is the port closest to the 12 o’clock position going in a counterclockwise direction around the block. Similarly, other input ports appear in counterclockwise order around the block.
- If only addition of all inputs is required, then a numeric parameter value equal to the number of inputs can be supplied instead of “+” characters.
- If only one input port is required, a single “+” or “-” collapses the element via the specified operation.

The Sum block first converts the input data type(s) to its accumulator data type, then performs the specified operations. The block converts the result to its output data type using the specified rounding and overflow modes.

# Sum, Add, Subtract, Sum of Elements

## Calculation of Block Output

Output calculation for the Sum block depends on the number of block inputs and the sign of input ports:

If the Sum block has...	And...	The formula for output calculation is...	Where...
One input port	The input port sign is +	$y = e[0] + e[1] + e[2] \dots + e[m]$	$e[i]$ is the $i^{\text{th}}$ element of input $u$
	The input port sign is -	$y = 0.0 - e[0] - e[1] - e[2] \dots - e[m]$	
Two or more input ports	All input port signs are -	$y = 0.0 - u[0] - u[1] - u[2] \dots - u[n]$	$u[i]$ is the input to the $i^{\text{th}}$ input port
	The $k^{\text{th}}$ input port is the first port where the sign is +	$y = u[k] - u[0] - u[1] - u[2] - u[k-1] (+/-) u[k+1] \dots (+/-) u[n]$	

## Data Type Support

The Sum block accepts real or complex signals of the following data types:

- Floating point
- Built-in integer

# Sum, Add, Subtract, Sum of Elements

---


- Fixed point
- Boolean

The inputs can be of different data types, unless you select the **Require all inputs to have the same data type** parameter. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Sum, Add, Subtract, Sum of Elements


## Parameters and Dialog Box

The **Main** pane of the Sum block dialog box appears as follows:

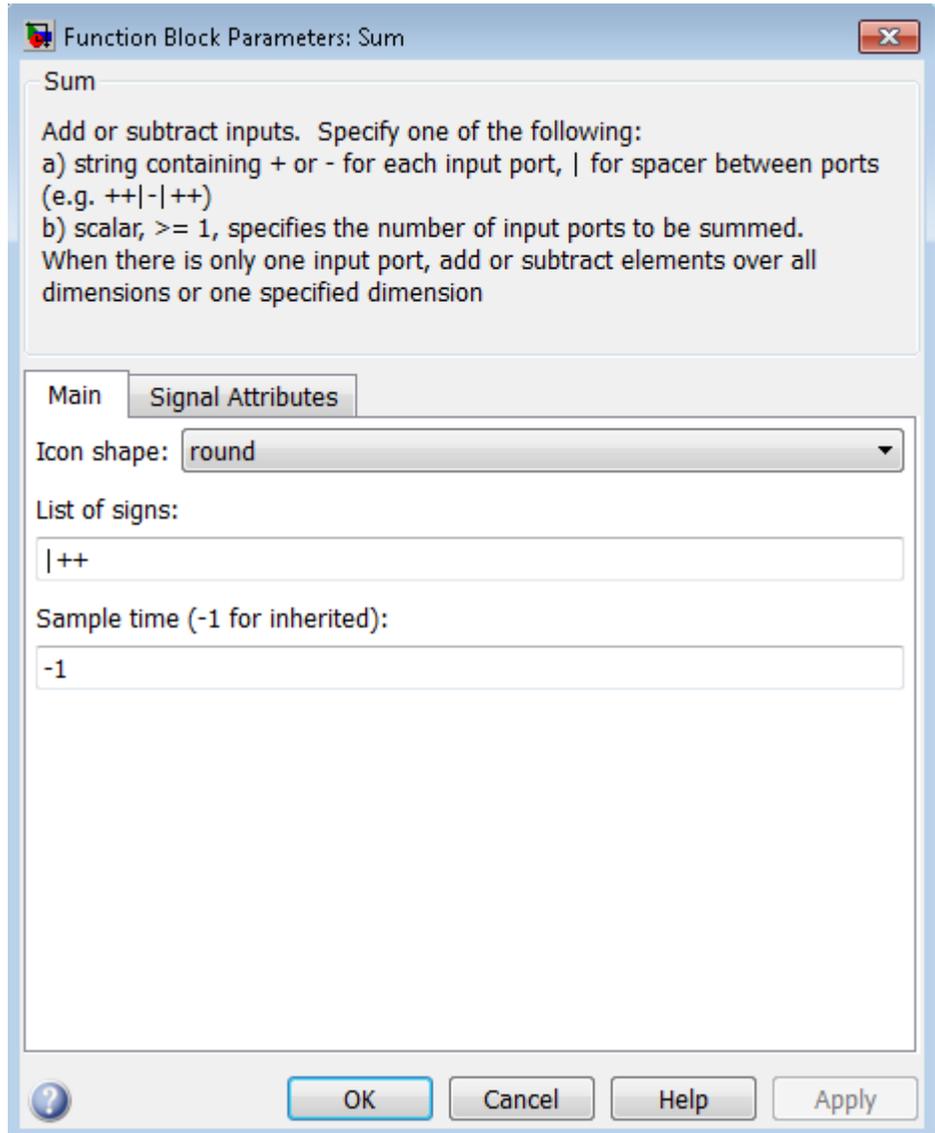

# Sum, Add, Subtract, Sum of Elements

The **Signal Attributes** pane of the Sum block dialog box appears as follows:

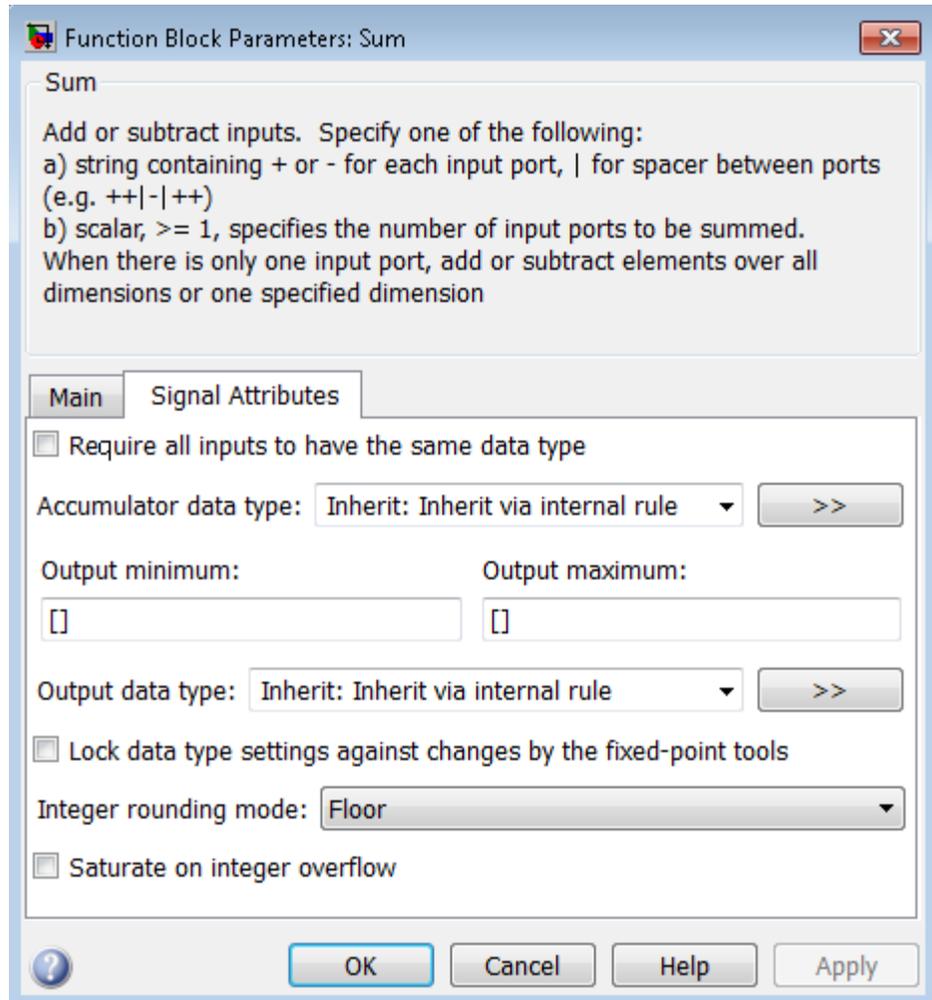

## **Show data type assistant**

Display the **Data Type Assistant**.

### **Settings**

The **Data Type Assistant** helps you set the **Output data type** parameter.

For more information, see “Specify Block Output Data Types”.

# Sum, Add, Subtract, Sum of Elements

---

## **Icon shape**

Designate the icon shape of the block.

## **Settings**

**Default:** round

rectangular

Designate the icon shape of the block as rectangular.

round

Designate the icon shape of the block as round.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Sum, Add, Subtract, Sum of Elements

---

## List of signs

Enter plus (+) and minus (-) characters.

## Settings

**Default:** |++

- Addition is the default operation, so if you only want to add the inputs, enter the number of input ports.
- For a single vector input, “+” or “-” will collapse the vector using the specified operation.
- Enter as many plus (+) and minus (-) characters as there are inputs.

## Tips

You can manipulate the positions of the input ports on the block by inserting spacers (|) between the signs in the **List of signs** parameter. For example, “++| - -” creates an extra space between the second and third input ports.

## Dependencies

Entering only one element enables the **Sum over** parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Sum, Add, Subtract, Sum of Elements

---

## **Sum over**

Select dimension over which to perform the sum over operation.

## **Settings**

**Default:** All dimensions

All dimensions

Sum all input elements, yielding a scalar.

Specified dimension

Display the **Dimension** parameter, where you specify the dimension over which to perform the operation.

## **Dependencies**

Selecting Specified dimension enables the **Dimension** parameter.

**List of signs** (when it has only one element) enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Dimension

Specify the dimension over which to perform the operation.

## Settings

**Default:** 1

The block follows the same summation rules as the MATLAB `sum` function.

Suppose that you have a 2-by-3 matrix  $U$ .

- Setting **Dimension** to 1 results in the output  $Y$  being computed as:

$$Y = \sum_{i=1}^2 U(i, j)$$

- Setting **Dimension** to 2 results in the output  $Y$  being computed as:

$$Y = \sum_{j=1}^3 U(i, j)$$

If the specified dimension is greater than the dimension of the input, an error message appears.

## Dependencies

Setting **Sum over** to Specified dimension enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Sum, Add, Subtract, Sum of Elements

---

## **Sample time (-1 for inherited)**

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### **Settings**

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Sum, Add, Subtract, Sum of Elements

---

## **Require all inputs to have the same data type**

Require that all inputs have the same data type.

### **Settings**

**Default:** Off



On

Require that all inputs have the same data type.



Off

Do not require that all inputs have the same data type.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Sum, Add, Subtract, Sum of Elements

---

## **Lock data type settings against changes by the fixed-point tools**

Select to lock data type settings of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### **Settings**

**Default:** Off



Locks all data type settings for this block.



Allows the Fixed-Point Tool and the Fixed-Point Advisor to change data type settings for this block.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Integer rounding mode

Specify the rounding mode for fixed-point operations.

### Settings

**Default:** Floor

#### Ceiling

Rounds both positive and negative numbers toward positive infinity. Equivalent to the MATLAB `ceil` function.

#### Convergent

Rounds number to the nearest representable value. If a tie occurs, rounds to the nearest even integer. Equivalent to the Fixed-Point Designer convergent function.

#### Floor

Rounds both positive and negative numbers toward negative infinity. Equivalent to the MATLAB `floor` function.

#### Nearest

Rounds number to the nearest representable value. If a tie occurs, rounds toward positive infinity. Equivalent to the Fixed-Point Designer nearest function.

#### Round

Rounds number to the nearest representable value. If a tie occurs, rounds positive numbers toward positive infinity and rounds negative numbers toward negative infinity. Equivalent to the Fixed-Point Designer round function.

#### Simplest

Automatically chooses between round toward floor and round toward zero to generate rounding code that is as efficient as possible.

#### Zero

Rounds number toward zero. Equivalent to the MATLAB `fix` function.

# Sum, Add, Subtract, Sum of Elements

---

## Command-Line Information

**Parameter:** RndMeth

**Type:** string

**Value:** 'Ceiling' | 'Convergent' | 'Floor' | 'Nearest' |  
'Round' | 'Simplest' | 'Zero'

**Default:** 'Floor'

## See Also

For more information, see “Rounding” in the Fixed-Point Designer documentation.

## Saturate on integer overflow

Specify whether overflows saturate.

### Settings

**Default:** Off

On

Overflows saturate to either the minimum or maximum value that the data type can represent.

For example, an overflow associated with a signed 8-bit integer can saturate to -128 or 127.

Off

Overflows wrap to the appropriate value that is representable by the data type.

For example, the number 130 does not fit in a signed 8-bit integer and wraps to -126.

### Tips

- Consider selecting this check box when your model has possible overflow and you want explicit saturation protection in the generated code.
- Consider clearing this check box when you want to optimize efficiency of your generated code.

Clearing this check box also helps you avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.

- When you select this check box, saturation applies to every internal operation on the block, not just the output or result.
- In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

# Sum, Add, Subtract, Sum of Elements

---

## Command-Line Information

**Parameter:** SaturateOnIntegerOverflow

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## Accumulator data type

Specify the accumulator data type.

### Settings

**Default:** Inherit: Inherit via internal rule

Inherit: Inherit via internal rule

Use internal rule to determine accumulator data type.

Inherit: Same as first input

Use data type of first input signal.

double

Accumulator data type is double.

single

Accumulator data type is single.

int8

Accumulator data type is int8.

uint8

Accumulator data type is uint8.

int16

Accumulator data type is int16.

uint16

Accumulator data type is uint16.

int32

Accumulator data type is int32.

uint32

Accumulator data type is uint32.

fixdt(1,16,0)

Accumulator data type is fixed point fixdt(1,16,0).

fixdt(1,16,2<sup>0</sup>,0)

Accumulator data type is fixed point fixdt(1,16,2<sup>0</sup>,0).

# Sum, Add, Subtract, Sum of Elements

---

<data type expression>

The name of a data type object, for example  
Simulink.NumericType

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

For more information, see “Specify Data Types Using Data Type Assistant”.

# Sum, Add, Subtract, Sum of Elements

---

## Mode

Select the category of accumulator data to specify

## Settings

**Default:** Inherit

### Inherit

Specifies inheritance rules for data types. Selecting `Inherit` enables a list of possible values:

- `Inherit via internal rule` (default)
- `Same as first input`

### Built in

Specifies built-in data types. Selecting `Built in` enables a list of possible values:

- `double` (default)
- `single`
- `int8`
- `uint8`
- `int16`
- `uint16`
- `int32`
- `uint32`

### Fixed point

Specifies fixed-point data types.

### Expression

Specifies expressions that evaluate to data types. Selecting `Expression` enables you to enter an expression.

## Dependency

Clicking the **Show data type assistant** button for the accumulator data type enables this parameter.

# Sum, Add, Subtract, Sum of Elements

---

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is `Built in` or `Fixed point`.

# Sum, Add, Subtract, Sum of Elements

---

## **Signedness**

Specify whether you want the fixed-point data to be signed or unsigned.

## **Settings**

**Default:** Signed

Signed

Specify the fixed-point data to be signed.

Unsigned

Specify the fixed-point data to be unsigned.

## **Dependencies**

Selecting **Mode** > Fixed point for the accumulator data type enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

## **Word length**

Specify the bit size of the word that will hold the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

Large word sizes represent large values with greater precision than small word sizes.

### **Dependencies**

Selecting **Mode** > **Fixed** point for the accumulator data type enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

# Sum, Add, Subtract, Sum of Elements

---

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

## Settings

**Default:** Binary point

Binary point  
Specify binary point location.

Slope and bias  
Enter slope and bias.

## Dependencies

Selecting **Mode** > Fixed point for the accumulator data type enables this parameter.

Selecting Binary point enables:

- **Fraction length**

Selecting Slope and bias enables:

- **Slope**
- **Bias**

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## See Also

See “Specifying a Fixed-Point Data Type” for more information.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point for the accumulator data type enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

# Sum, Add, Subtract, Sum of Elements

---

## **Slope**

Specify slope for the fixed-point data type.

## **Settings**

**Default:** 2<sup>0</sup>

Specify any positive real number.

## **Dependencies**

Selecting **Scaling** > **Slope** and **bias** for the accumulator data type enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

**Bias**

Specify bias for the fixed-point data type.

**Settings**

**Default:** 0

Specify any real number.

**Dependencies**

Selecting **Scaling** > Slope and bias for the accumulator data type enables this parameter.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**See Also**

See “Specifying a Fixed-Point Data Type” for more information.

# Sum, Add, Subtract, Sum of Elements

---

## Output minimum

Lower value of the output range that Simulink checks.

### Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the minimum to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output minimum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

### Command-Line Information

**Parameter:** OutMin

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

# Sum, Add, Subtract, Sum of Elements

---

## Output maximum

Upper value of the output range that Simulink checks.

## Settings

**Default:** [] (unspecified)

Specify this number as a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum parameter for a bus element, see `Simulink.BusElement`.

---

Simulink uses the maximum value to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges” and “Enabling Simulation Range Checking”)
- Automatic scaling of fixed-point data types

---

**Note** **Output maximum** does not saturate or clip the actual output signal. Use the Saturation block instead.

---

## Command-Line Information

**Parameter:** OutMax

**Type:** string

**Value:** '[ ]'

**Default:** '[ ]'

# Sum, Add, Subtract, Sum of Elements

---

## Output data type

Specify the output data type.

### Settings

**Default:** Inherit: Inherit via internal rule

Inherit: Inherit via internal rule

Simulink chooses a data type to balance numerical accuracy, performance, and generated code size, while taking into account the properties of the embedded target hardware. If you change the embedded target settings, the data type selected by the internal rule might change. It is not always possible for the software to optimize code efficiency and numerical accuracy at the same time. If the internal rule doesn't meet your specific needs for numerical accuracy or performance, use one of the following options:

- Specify the output data type explicitly.
- Use the simple choice of Inherit: Same as first input.
- Explicitly specify a default data type such as `fixdt(1,32,16)` and then use the Fixed-Point Tool to propose data types for your model. For more information, see `fxptdlg`.
- To specify your own inheritance rule, use Inherit: Inherit via back propagation and then use a Data Type Propagation block. Examples of how to use this block are available in the Signal Attributes library Data Type Propagation Examples block.

---

**Note** The accumulator internal rule favors greater numerical accuracy, possibly at the cost of less efficient generated code. To get the same accuracy for the output, set the output data type to Inherit: Inherit same as accumulator.

---

Inherit: Inherit via back propagation  
Use data type of the driving block.

# Sum, Add, Subtract, Sum of Elements

---

Inherit: Same as first input  
Use data type of first input signal.

Inherit: Same as accumulator  
Output data type is the same as accumulator data type.

double  
Output data type is double.

single  
Output data type is single.

int8  
Output data type is int8.

uint8  
Output data type is uint8.

int16  
Output data type is int16.

uint16  
Output data type is uint16.

int32  
Output data type is int32.

uint32  
Output data type is uint32.

fixdt(1,16,0)  
Output data type is fixed point fixdt(1,16,0).

fixdt(1,16,2<sup>0</sup>,0)  
Output data type is fixed point fixdt(1,16,2<sup>0</sup>,0).

<data type expression>  
Use a data type object, for example, Simulink.NumericType.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Sum, Add, Subtract, Sum of Elements

---

## **See Also**

For more information, see “Specify Block Output Data Types”.

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Inherit

### Inherit

Inheritance rules for data types. Selecting **Inherit** enables a second menu/text box to the right. Select one of the following choices:

- Inherit via internal rule (default)
- Inherit via back propagation
- Same as first input
- Same as accumulator

### Built in

Built-in data types. Selecting **Built in** enables a second menu/text box to the right. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32

### Fixed point

Fixed-point data types.

# Sum, Add, Subtract, Sum of Elements

---

## Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second menu/text box to the right, where you can enter the expression.

## Dependency

Clicking the **Show data type assistant** button enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## See Also

See “Specify Data Types Using Data Type Assistant”.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > Fixed point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Sum, Add, Subtract, Sum of Elements

---

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Binary point

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### See Also

See “Specifying a Fixed-Point Data Type”.

# Sum, Add, Subtract, Sum of Elements

---

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Slope

Specify slope for the fixed-point data type.

### Settings

**Default:**  $2^0$

Specify any positive real number.

### Dependencies

Selecting **Scaling** > Slope and bias enables this parameter.

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## Bias

Specify bias for the fixed-point data type.

### Settings

**Default:** 0

Specify any real number.

### Dependencies

Selecting **Scaling** > Slope and bias enables this parameter.

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

## Examples

### How the Sum Block Reorders Inputs

If you use - on the first input port, the Sum block reorders the inputs so that, if possible, the first input uses a + operation. For example, in the expression  $\text{output} = -a - b + c$ , the Sum block reorders the inputs so that  $\text{output} = c - a - b$ . To initialize the accumulator, the Sum block uses the first + input port.

The block avoids performing a unary minus operation on the first operand  $a$  because doing so can change the value of  $a$  for fixed-point data types. In that case, the output value differs from the result of accumulating the values for  $a$ ,  $b$ , and  $c$ .


# Sum, Add, Subtract, Sum of Elements

---

**Tip** To explicitly specify a unary minus operation for  $\text{output} = -a-b+c$ , you can use the Unary Minus block in the Math Operations library.

---

Suppose that you have the following model:

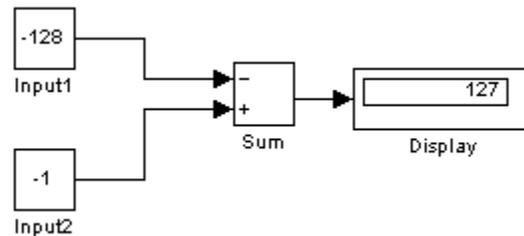

The following block parameters apply:

- Both Constant blocks, Input1 and Input 2, use **int8** for the **Output data type**.
- The Sum block uses **int8** for both **Accumulator data type** and **Output data type**.
- The Sum block has **Saturate on integer overflow** turned on.

The Sum block reorders the inputs so that the following operations occur and you get the ideal result of 127.

Step	Block Operation
1	Reorders inputs from ( Input1 + Input2) to (Input2 Input1).
2	Initializes the accumulator by using the first + input port: Accumulator = $\text{int8}(-1) = -1$

# Sum, Add, Subtract, Sum of Elements

Step	Block Operation
3	Continues to accumulate values: Accumulator = Accumulator + int8(-128) = 127
4	Calculates the block output: Output = int8(127) = 127

If the Sum block does *not* reorder the inputs, the following operations occur instead and you get the nonideal result of 126.

Step	Block Operation
1	Initializes the accumulator by using the first input port: Accumulator = int8(-(-128)) = 127 Because saturation is on, the initial value of the accumulator saturates at 127 and does not wrap.
2	Continues to accumulate values: Accumulator = Accumulator + int8(-1) = 126
3	Calculates the block output: Output = int8(126) = 126

## Characteristics

Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
States	0
Dimensionalized	Yes
Multidimensionalized	Yes, only along the specified dimension
Zero-Crossing Detection	No

# Switch

---


## Purpose

Switch output between first input and third input based on value of second input

## Library

Signal Routing

## Description

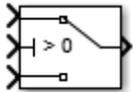

### Types of Block Inputs

The Switch block passes through the first input or the third input based on the value of the second input. The first and third inputs are called *data inputs*. The second input is called the *control input*. Specify the condition under which the block passes the first input by using the **Criteria for passing first input** and **Threshold** parameters.

To immediately back propagate a known output data type to the first and third input ports, set the **Output data type** parameter to **Inherit: Inherit via internal rule** and select the **Require all data port inputs to have the same data type** check box.

### Limitations on Data Inputs

The sizes of the two data inputs can be different if you select **Allow different data input sizes** on the block dialog box. However, this block does not support variable-size input signals. Therefore, the size of each input cannot change during simulation.

If the data inputs to the Switch block are buses, the element names of both buses must be the same. Using the same element names ensures that the output bus has the same element names no matter which input bus the block selects. To ensure that your model meets this requirement, use a bus object to define the buses and set the **Element name mismatch** diagnostic to error. See “Connectivity Diagnostics Overview” for more information.

### Block Icon Appearance

The block icon helps you identify **Criteria for passing first input** and **Threshold** without having to open the block dialog box.

For information about port order for various block orientations, see “How to Rotate a Block” in the Simulink documentation.

## Block Behavior for Boolean Control Input

When the control input is a Boolean signal, use one of these combinations of criteria and threshold value:

- $u2 \geq \text{Threshold}$ , where the threshold value equals 1
- $u2 > \text{Threshold}$ , where the threshold value equals 0
- $u2 \sim 0$

Otherwise, the Switch block ignores the threshold and uses the Boolean input for signal routing. For a control input of 1, the block passes the first input, and for a control input of 0, the block passes the third input. In this case, the block icon changes *after compile time* and uses T and F to label the first and third inputs, respectively.

## Data Type Support

The control input can be of any data type that Simulink supports, including fixed-point and enumerated types. The control input cannot be complex. If the control input is enumerated, the **Threshold** parameter must be a value of the same enumerated type.

The data inputs can be of any data type that Simulink supports. If either data input is of an enumerated type, the other must be of the same enumerated type.


When the output is of enumerated type, both data inputs should use the same enumerated type as the output.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Switch

## Parameters and Dialog Box

The Switch block dialog box appears as follows:

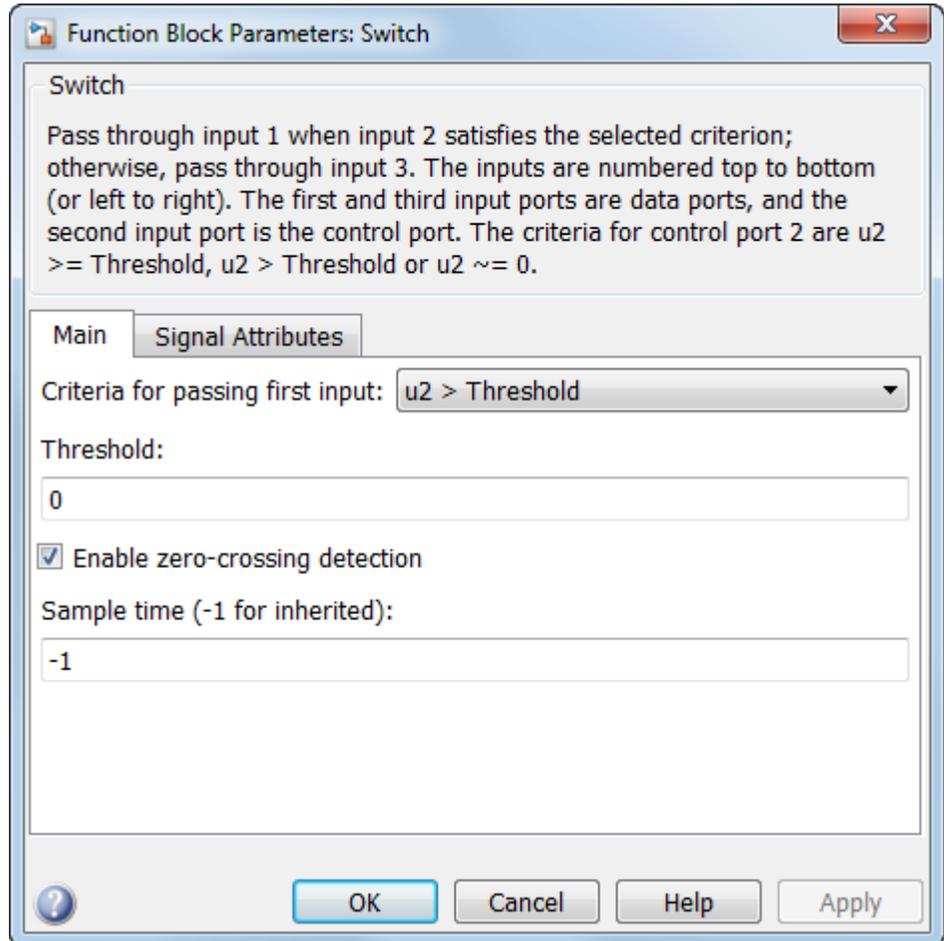

- “Criteria for passing first input” on page 1-1768
- “Threshold” on page 1-1770
- “Enable zero-crossing detection” on page 1-1771
- “Sample time (-1 for inherited)” on page 1-2024
- “Require all data port inputs to have the same data type” on page 1-1773
- “Lock output data type setting against changes by the fixed-point tools” on page 1-1774
- “Integer rounding mode” on page 1-1775
- “Saturate on integer overflow” on page 1-1777
- “Allow different data input sizes” on page 1-1779
- “Output minimum” on page 1-1780
- “Output maximum” on page 1-1781
- “Output data type” on page 1-1782
- “Mode” on page 1-1784
- “Data type override” on page 1-1975
- “Signedness” on page 1-1976
- “Word length” on page 1-1979
- “Scaling” on page 1-1789
- “Fraction length” on page 1-1980
- “Slope” on page 1-1981
- “Bias” on page 1-1981

# Switch

---

## Criteria for passing first input

Select the condition under which the block passes the first input. If the control input meets the condition set in the **Criteria for passing first input** parameter, the block passes the first input. Otherwise, the block passes the third input.

### Settings

**Default:**  $u2 > \text{Threshold}$

$u2 \geq \text{Threshold}$

Checks whether the control input is greater than or equal to the threshold value.

$u2 > \text{Threshold}$

Checks whether the control input is greater than the threshold value.

$u2 \neq 0$

Checks whether the control input is nonzero.

---

**Note** The Switch block does not support  $u2 \neq 0$  mode for enumerated data types.

---

### Tip

When the control input is a Boolean signal, use one of these combinations of condition and threshold value:

- $u2 \geq \text{Threshold}$ , where the threshold value equals 1
- $u2 > \text{Threshold}$ , where the threshold value equals 0
- $u2 \neq 0$

Otherwise, the Switch block ignores threshold values and uses the Boolean value for signal routing. For a value of 1, the block passes the first input, and for a value of 0, the block passes the third input.

A warning message that describes this behavior also appears in the MATLAB Command Window.

### **Dependencies**

Selecting `u2 ~=0` disables the **Threshold** parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Switch

---

## Threshold

Assign the switch threshold that determines which input the block passes to the output.

### Settings

**Default:** 0

**Minimum:** value from the **Output minimum** parameter

**Maximum:** value from the **Output maximum** parameter

### Tip

To specify a nonscalar threshold, use brackets. For example, the following entries are valid:

- [1 4 8 12]
- [MyColors.Red, MyColors.Blue]

### Dependencies

Setting **Criteria for passing first input** to `u2 ~=0` disables this parameter.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

### Settings

**Default:** On



On

Enable zero-crossing detection.



Off

Do not enable zero-crossing detection.

### Command-Line Information

**Parameter:** ZeroCross

**Type:** string

**Value:** 'on' | 'off'

**Default:** 'on'

## **Sample time (-1 for inherited)**

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### **Settings**

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Require all data port inputs to have the same data type**

Require all data inputs to have the same data type.

### **Settings**

**Default:** Off



On

Requires all data inputs to have the same data type.



Off

Does not require all data inputs to have the same data type.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Switch

---

## Lock output data type setting against changes by the fixed-point tools

Select to lock the output data type setting of this block against changes by the Fixed-Point Tool and the Fixed-Point Advisor.

### Settings

**Default:** Off



On

Locks the output data type setting for this block.



Off

Allows the Fixed-Point Tool and the Fixed-Point Advisor to change the output data type setting for this block.

### Command-Line Information

**Parameter:** LockScale

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

For more information, see “Use Lock Output Data Type Setting”.

## Integer rounding mode

Specify the rounding mode for fixed-point operations.

### Settings

**Default:** Floor

#### Ceiling

Rounds both positive and negative numbers toward positive infinity. Equivalent to the MATLAB `ceil` function.

#### Convergent

Rounds number to the nearest representable value. If a tie occurs, rounds to the nearest even integer. Equivalent to the Fixed-Point Designer convergent function.

#### Floor

Rounds both positive and negative numbers toward negative infinity. Equivalent to the MATLAB `floor` function.

#### Nearest

Rounds number to the nearest representable value. If a tie occurs, rounds toward positive infinity. Equivalent to the Fixed-Point Designer nearest function.

#### Round

Rounds number to the nearest representable value. If a tie occurs, rounds positive numbers toward positive infinity and rounds negative numbers toward negative infinity. Equivalent to the Fixed-Point Designer round function.

#### Simplest

Automatically chooses between round toward floor and round toward zero to generate rounding code that is as efficient as possible.

#### Zero

Rounds number toward zero. Equivalent to the MATLAB `fix` function.

# Switch

---

## **Command-Line Information**

**Parameter:** RndMeth

**Type:** string

**Value:** 'Ceiling' | 'Convergent' | 'Floor' | 'Nearest' |  
'Round' | 'Simplest' | 'Zero'

**Default:** 'Floor'

## **See Also**

For more information, see “Rounding” in the Fixed-Point Designer documentation.

## Saturate on integer overflow

Specify whether overflows saturate.

### Settings

**Default:** Off



On

Overflows saturate to either the minimum or maximum value that the data type can represent.

For example, an overflow associated with a signed 8-bit integer can saturate to -128 or 127.



Off

Overflows wrap to the appropriate value that is representable by the data type.

For example, the number 130 does not fit in a signed 8-bit integer and wraps to -126.

### Tips

- Consider selecting this check box when your model has possible overflow and you want explicit saturation protection in the generated code.
- Consider clearing this check box when you want to optimize efficiency of your generated code.

Clearing this check box also helps you avoid overspecifying how a block handles out-of-range signals. For more information, see “Checking for Signal Range Errors”.

- When you select this check box, saturation applies to every internal operation on the block, not just the output or result.
- In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

# Switch

---

## **Command-Line Information**

**Parameter:** SaturateOnIntegerOverflow

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## Allow different data input sizes

Select this check box to allow input signals with different sizes.

### Settings

**Default:** Off



On

Allows input signals with different sizes, and propagates the input signal size to the output signal. If the two data inputs are variable-size signals, the maximum size of the signals can be equal or different.



Off

Inputs signals must be the same size.

### Command-Line Information

**Parameter:** AllowDiffInputSize

**Type:** string

**Value:** 'on' | 'off'

**Default:** 'off'

# Switch

---

## **Output minimum**

Specify the minimum value that the block should output.

## **Settings**

**Default:** []

The default value is [] (unspecified).

Simulink uses this value to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

## **Tip**

This number must be a finite real double scalar value.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Output maximum**

Specify the maximum value that the block should output.

### **Settings**

**Default:** []

The default value is [] (unspecified).

Simulink uses this value to perform:

- Parameter range checking (see “Check Parameter Values”) for some blocks
- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### **Tip**

This number must be a finite real double scalar value.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Switch

---

## Output data type

Specify the output data type.

### Settings

**Default:** Inherit: Inherit via internal rule

Inherit: Inherit via internal rule

Uses the following rules to determine the output data type.

Data Type of First Input Port	Output Data Type
Has a larger positive range than the third input port	Inherited from the first input port
Has the same positive range as the third input port	Inherited from the third input port
Has a smaller positive range than the third input port	

Inherit: Inherit via back propagation

Uses data type of the driving block.

**double**

Specifies output data type is double.

**single**

Specifies output data type is single.

**int8**

Specifies output data type is int8.

**uint8**

Specifies output data type is uint8.

**int16**

Specifies output data type is int16.

**uint16**

Specifies output data type is uint16.

`int32`

Specifies output data type is `int32`.

`uint32`

Specifies output data type is `uint32`.

`fixdt(1,16,0)`

Specifies output data type is fixed point `fixdt(1,16,0)`.

`fixdt(1,16,2^0,0)`

Specifies output data type is fixed point `fixdt(1,16,2^0,0)`.

Enum: `<class name>`

Uses an enumerated data type, for example, Enum: `BasicColors`.

`<data type expression>`

Uses a data type object, for example, `Simulink.NumericType`.

### Tip

When the output is of enumerated type, both data inputs should use the same enumerated type as the output.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### See Also

See “Specify Block Output Data Types” for more information.

# Switch

---

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Inherit

### Inherit

Specifies inheritance rules for data types. Selecting `Inherit` enables a list of possible values:

- `Inherit via internal rule` (default)
- `Inherit via back propagation`

### Built in

Specifies built-in data types. Selecting `Built in` enables a list of possible values:

- `double` (default)
- `single`
- `int8`
- `uint8`
- `int16`
- `uint16`
- `int32`
- `uint32`

### Fixed point

Specifies fixed-point data types.

### Enumerated

Specifies enumerated data types. Selecting `Enumerated` enables you to enter a class name.

### Expression

Specifies expressions that evaluate to data types. Selecting `Expression` enables you to enter an expression.

**Dependencies**

Clicking the **Show data type assistant** button enables this parameter.

**Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

**See Also**

See “Specify Data Types Using Data Type Assistant”.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is `Built in` or `Fixed point`.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specifies the fixed-point data as signed.

Unsigned

Specifies the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode > Fixed point** enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type”.

# Switch

---

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

Large word sizes represent large values with greater precision than small word sizes.

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Best precision

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### See Also

For more information, see “Specifying a Fixed-Point Data Type”.

# Switch

---

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

## **Slope**

Specify slope for the fixed-point data type.

### **Settings**

**Default:** 2<sup>0</sup>

Specify any positive real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

### **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

# Switch

---

## **Bias**

Specify bias for the fixed-point data type.

## **Settings**

**Default:** 0

Specify any real number.

## **Dependencies**

Selecting **Scaling** > Slope and bias enables this parameter.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **See Also**

See “Specifying a Fixed-Point Data Type” for more information.

## **Bus Support**

The Switch block is a bus-capable block. The data inputs can be virtual or nonvirtual bus signals subject to the following restrictions:


- All the buses must be equivalent (same hierarchy with identical names and attributes for all elements).
- All signals in a nonvirtual bus input to a Switch block must have the same sample time. The requirement holds even if the elements of the associated bus object specify inherited sample times.

You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus. See “Composite Signals” and Bus-Capable Blocks for more information.

You can use an array of buses as an input signal to a Switch block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”. When using an array of buses with a Switch block, set the **Threshold** parameter to a scalar value.

## Examples Use of Boolean Input for the Control Port

In the `sldemo_fuelsys` model, the `fuel_rate_control/airflow_calc` subsystem uses a Switch block:

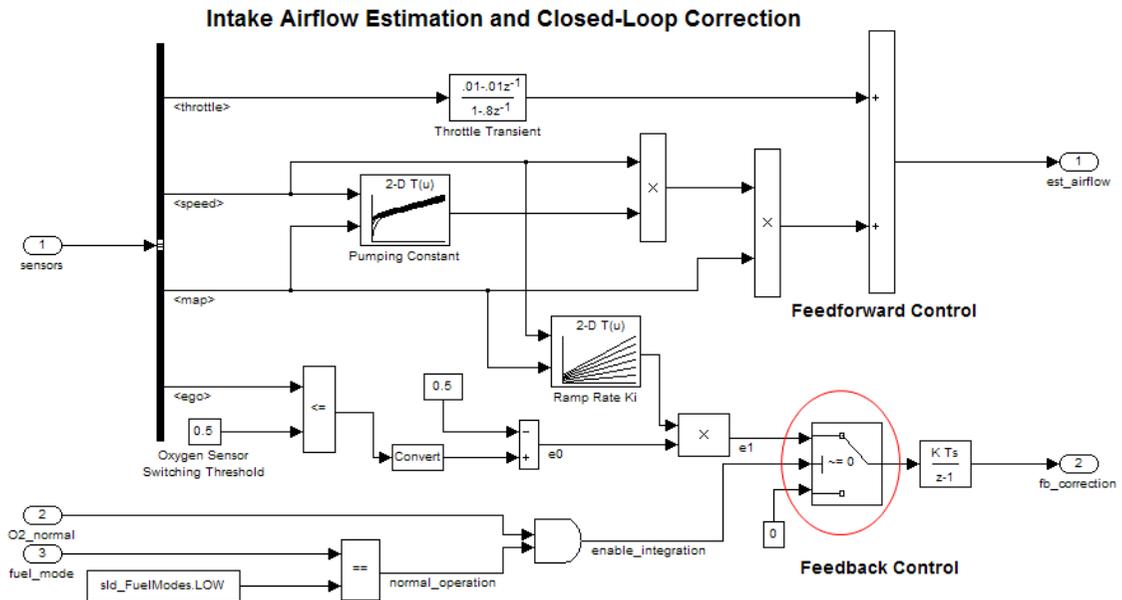


The value of the control port on the Switch block determines whether or not feedback correction occurs. The control port value depends on the output of the Logical Operator block.

When the Logical Operator block output is...	The control port of the Switch block is...	And feedback control...
TRUE	1	Occurs
FALSE	0	Does not occur

# Switch

## Use of Simulation Time for the Control Port

The `sldemo_zeroxing` model uses a Switch block:

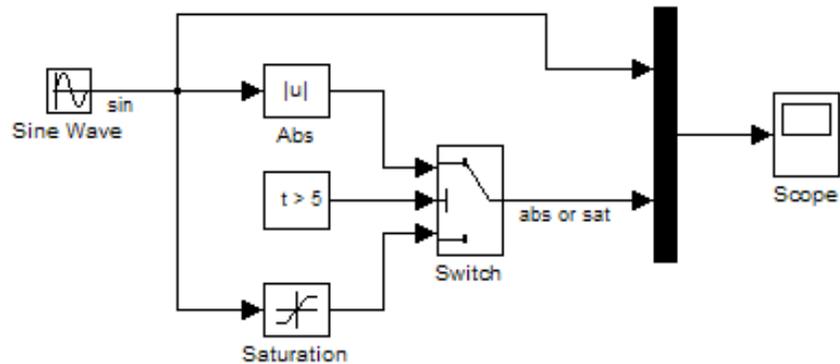

The value of the control port on the Switch block determines when the output changes from the first input to the third input.

When simulation time is...	The Switch block output is...
Less than or equal to 5	The first input from the Abs block
Greater than 5	The third input from the Saturation block

## Characteristics

Bus-capable	Yes, with restrictions
Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Dimensionalized	Yes

Multidimensionalized	Yes
Zero-Crossing Detection	Yes, if enabled

**See Also**

Multiport Switch


# Switch Case

---

**Purpose** Implement C-like switch control flow statement

**Library** Ports & Subsystems


## Description

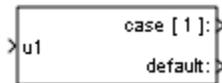

A Switch Case block receives a single input. Each output port is attached to a Switch Case Action Subsystem. Data outputs are action signals to Switch Case Action subsystems, which you create with Action Port blocks and subsystems.

The Switch Case block uses its input value to select a case condition that determines which subsystem to execute. The cases are evaluated top down starting with the first case. If a case value (in brackets) corresponds to the value of the input, its Switch Case Action Subsystem is executed.

If a `default` case exists, it executes if none of the other cases executes. Providing a `default` case is optional, even if the other case conditions do not exhaust every possible value. The following diagram shows a completed Simulink switch control flow statement:

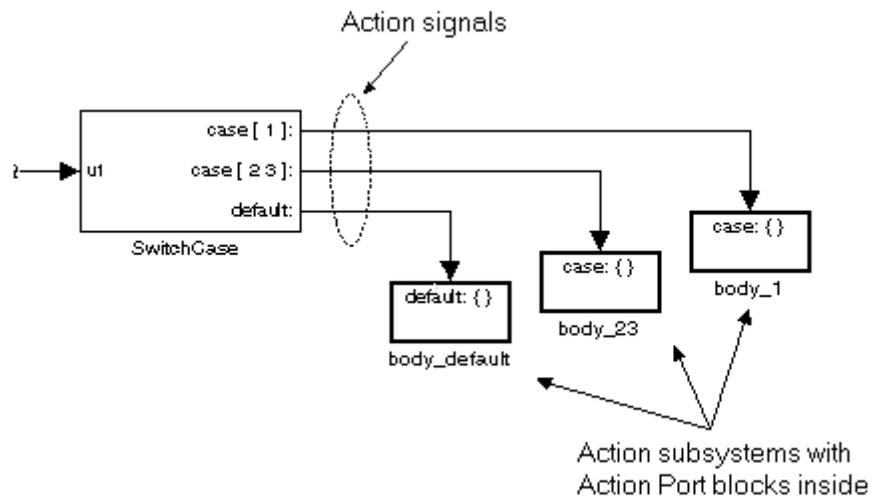

Cases for the Switch Case block contain an implied break after their Switch Case Action subsystems are executed. Thus there is no fall-through behavior for the Simulink switch control flow statement as found in standard C switch statements. The following pseudocode represents generated code for the preceding switch control example:

```
switch (u1) {
  case [u1=1]:
    body_1;
    break;
  case [u1=2 or u1=3]:
    body_23;
    break;
  default:
    body_default;
}
```

To construct the Simulink switch control flow statement shown in the above example:

# Switch Case

---

- 1 Place a Switch Case block in the current system and attach the input port labeled u1 to the source of the data you are evaluating.
- 2 Open the Switch Case block dialog box and update parameters:
  - a Populate the **Case conditions** field with the individual cases.
  - b To show a default case, select the **Show default case** check box.
- 3 Create a Switch Case Action Subsystem for each case port you added to the Switch Case block.

These consist of subsystems with Action Port blocks inside them. When you place the Action Port block inside a subsystem, the subsystem becomes an atomic subsystem with an input port labeled Action.

- 4 Connect each case output port and the default output port of the Switch Case block to the Action port of an Action subsystem.

Each connected subsystem becomes a case body. This is indicated by the change in label for the Switch Case Action Subsystem block and the Action Port block inside of it to the name `case{}`.

During simulation of a switch control flow statement, the Action signals from the Switch Case block to each Switch Case Action Subsystem turn from solid to dashed.

- 5 In each Switch Case Action Subsystem, enter the Simulink logic appropriate to the case it handles. All blocks in a Switch Case Action Subsystem must run at the same rate as the driving Switch Case block. You can achieve this by setting each block's sample time parameter to be either inherited (-1) or the same value as the Switch Case block's sample time.


## Enumerated Types in Switch Case Blocks

The Switch Case block supports enumerated data types for the input signal and the case conditions. You specify enumerated case conditions

as a cell array of enumerated values in the **Case conditions** field, for example:

```
{BasicColors.Red, [BasicColors.Yellow, BasicColors.Blue]}
```

The Switch Case block icon shows the enumerated names that correspond to the case conditions, for example:

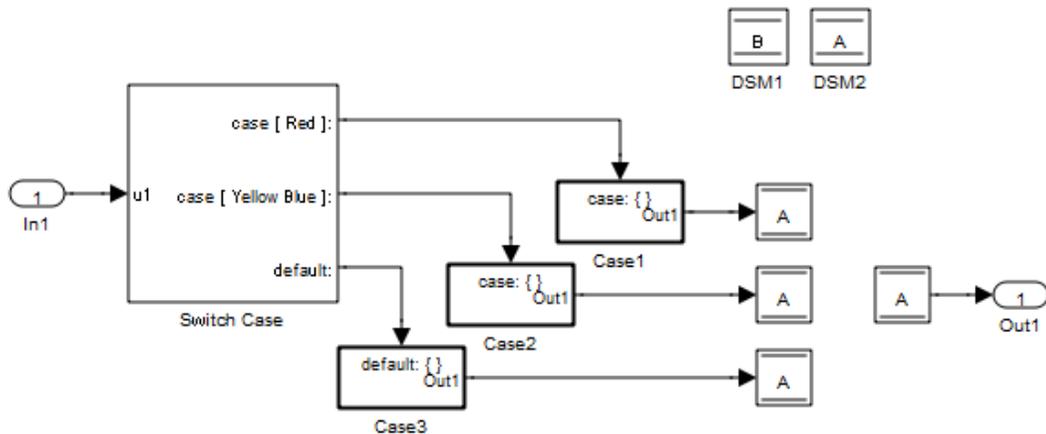

You can use the enumeration function to specify a case condition that includes a case for every value in an enumerated type. When you use enumerated data in a Switch Case block, follow these rules:

- If the input `u1` is of an enumerated type, all case condition values must be of that same enumerated type.
- If any case condition value is of an enumerated type, the input `u1` and all other case condition values must be of that same enumerated type.
- When the case condition values are of an enumerated type, each value that appears as a case condition must have a different underlying integer.

# Switch Case

---


For more information about enumerated data types in Simulink, see “Use Enumerated Data in Simulink Models”. The generated code for a Switch Case block that uses enumerated data uses the enumerated values of the specified case conditions, rather than their underlying integers.

## Data Type Support

The input to the port labeled u1 of a Switch Case block can be:

- A scalar value having a built-in data type that Simulink supports. The block does not support Boolean or fixed-point data types and truncates the numeric inputs to 32-bit signed integers.
- A scalar value of any enumerated data type, as described in “Enumerated Types in Switch Case Blocks” on page 1-1798.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

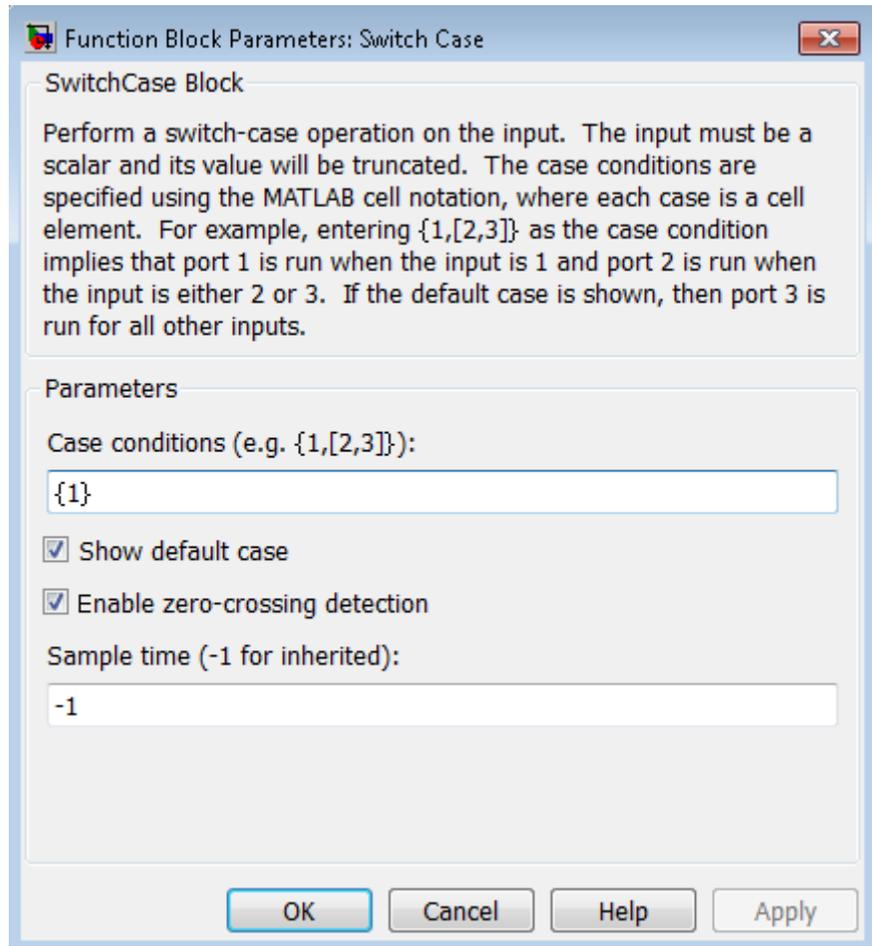

## Parameters and Dialog Box

### Case conditions

Specify the case conditions using MATLAB cell notation. For example, entering `{1,[7,9,4]}` specifies that output port `case[1]` is run when the input value is 1, and output port `case[7 9 4]` is run when the input value is 7, 9, or 4.

# Switch Case

---

You can use colon notation to specify a range of integer case conditions. For example, entering `{[1:5]}` specifies that output port `case[1 2 3 4 5]` is run when the input value is 1, 2, 3, 4, or 5.

Depending on block size, cases with long lists of conditions are displayed in shortened form in the Switch Case block, using a terminating ellipsis (...).

You can use the enumeration function to specify a case condition that includes a case for every value in an enumerated type.

## Show default case

If you select this check box, the default output port appears as the last case on the Switch Case block, allowing you to specify a default case. This case executes when the input value does not match any of the case values specified in the **Case conditions** field. With **Show default case** selected, a default output port always appears, even if the preceding cases exhaust all possibilities for the input value.

## Enable zero-crossing detection

Select to enable zero-crossing detection. For more information, see “Zero-Crossing Detection” in the Simulink documentation.

## Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” for more information.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block
Scalar Expansion	No
Dimensionalized	No
Zero-Crossing Detection	Yes, if enabled


# Switch Case Action Subsystem

---

**Purpose** Represent subsystem whose execution is triggered by Switch Case block

**Library** Ports & Subsystems

## Description

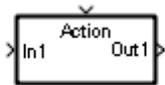

This block is a Subsystem block that is preconfigured to serve as a starting point for creating a subsystem whose execution is triggered by a Switch Case block.

---

**Note** All blocks in a Switch Case Action Subsystem must run at the same rate as the driving Switch Case block. You can achieve this by setting each block's sample time parameter to be either inherited (-1) or the same value as the Switch Case block's sample time.

---

For more information, see “Create an Action Subsystem”, Switch Case block and “Use Control Flow Logic” in the “Creating a Model” chapter of the Simulink documentation.

# Tapped Delay

---

**Purpose** Delay scalar signal multiple sample periods and output all delayed versions

**Library** Discrete

**Description** The Tapped Delay block delays an input by the specified number of sample periods and outputs all the delayed versions. Use this block to discretize a signal in time or resample a signal at a different rate.

The block accepts one scalar input and generates an output vector that contains each delay. Specify the order of the delays in the output vector with the **Order output vector starting with** parameter:

- **Oldest** orders the output vector starting with the oldest delay version and ending with the newest delay version.
- **Newest** orders the output vector starting with the newest delay version and ending with the oldest delay version.

Specify the output vector for the first sampling period with the **Initial condition** parameter. Careful selection of this parameter can minimize unwanted output behavior.


Specify the time between samples with the **Sample time** parameter. Specify the number of delays with the **Number of delays** parameter. A value of -1 instructs the block to inherit the number of delays by back propagation. Each delay is equivalent to the  $z^{-1}$  discrete-time operator, which the Unit Delay block represents.

**Data Type Support** The Tapped Delay block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

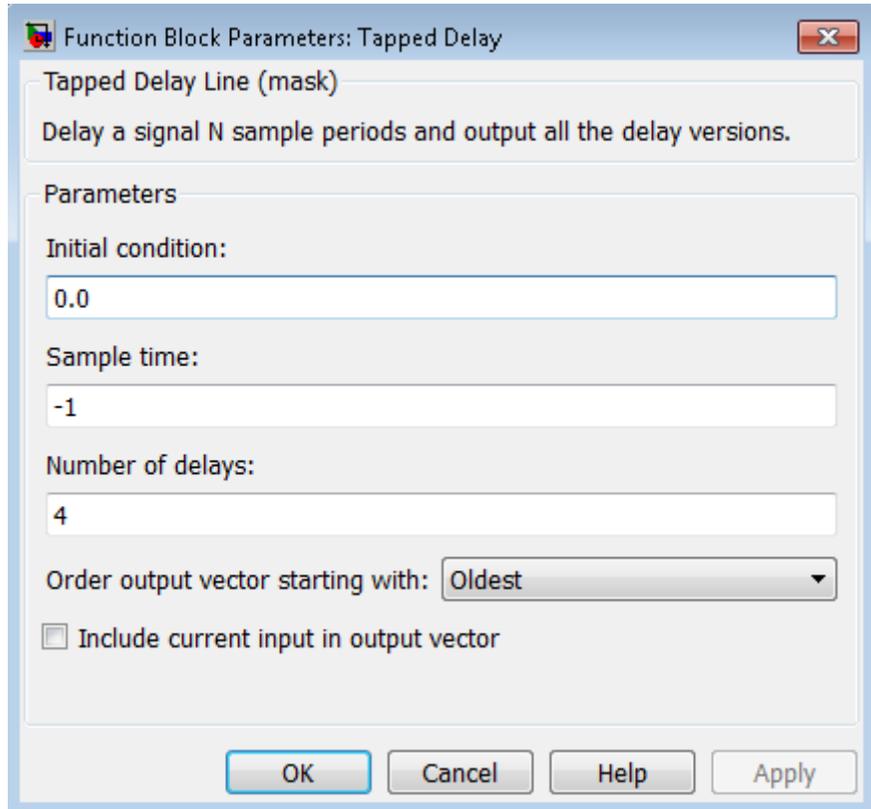

### Initial condition

Specify the initial output of the simulation. The **Initial condition** parameter is converted from a double to the input data type offline using round-to-nearest and saturation. Simulink software does not allow you to set the initial condition of this block to `inf` or `NaN`.

# Tapped Delay

---

## Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online Simulink documentation for more information.

## Number of delays

Specify the number of discrete-time operators.

## Order output vector starting with

Specify whether to output the oldest delay version first, or the newest delay version first.

## Include current input in output vector

Select to include the current input in the output vector.

## Characteristics

Direct Feedthrough	Yes, when <b>Include current input in output vector</b> check box is selected. No, otherwise.
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of initial conditions

## See Also

Unit Delay

**Purpose** Terminate unconnected output port

**Library** Sinks

## Description




Use the Terminator block to cap blocks whose output ports do not connect to other blocks. If you run a simulation with blocks having unconnected output ports, Simulink issues warning messages. Using Terminator blocks to cap those blocks helps prevent warning messages.

## Data Type Support

The Terminator block accepts real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

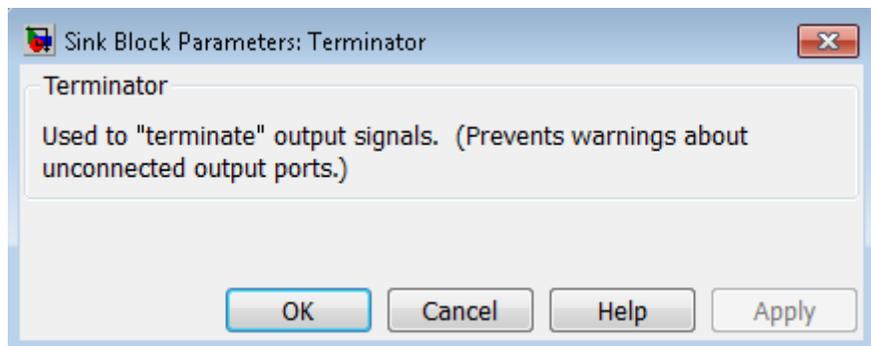

## Parameters and Dialog Box

## Examples

The following Simulink examples show how to use the Terminator block:

- sldemo\_bounce

# Terminator

---

- sldemo\_fuelsys
- aero\_six\_dof

## Characteristics

Sample Time	Inherited from the driving block
Dimensionalized	Yes
Multidimensionalized	Yes
Virtual	Yes For more information, see “Virtual Blocks” in the Simulink documentation.
Zero-Crossing Detection	No

## Purpose

Generate linear models in base workspace at specific times

## Library

Model-Wide Utilities

## Description



This block calls `linmod` or `dlinmod` to create a linear model for the system when the simulation clock reaches the time specified by the **Linearization time** parameter. No trimming is performed. The linear model is stored in the base workspace as a structure, along with information about the operating point at which the snapshot was taken. Multiple snapshots are appended to form an array of structures.

The block sets the following model parameters to the indicated values:

- `BufferReuse` = 'off'
- `RTWInlineParameters` = 'on'
- `BlockReductionOpt` = 'off'

The name of the structure used to save the snapshots is the name of the model appended by `_Timed_Based_Linearization`, for example, `vdp_Timed_Based_Linearization`. The structure has the following fields:

Field	Description
<code>a</code>	The A matrix of the linearization
<code>b</code>	The B matrix of the linearization
<code>c</code>	The C matrix of the linearization
<code>d</code>	The D matrix of the linearization
<code>StateName</code>	Names of the model's states
<code>OutputName</code>	Names of the model's output ports
<code>InputName</code>	Names of the model's input ports

# Timed-Based Linearization

---

Field	Description
OperPoint	A structure that specifies the operating point of the linearization. The structure specifies the operating point time ( <code>OperPoint.t</code> ). The states ( <code>OperPoint.x</code> ) and inputs ( <code>OperPoint.u</code> ) fields are not used.
Ts	The sample time of the linearization for a discrete linearization

Use the Trigger-Based Linearization block if you need to generate linear models conditionally.

You can use state and simulation time logging to extract the model states and inputs at operating points. For example, suppose that you want to get the states of the f14 example model at linearization times of 2 seconds and 5 seconds.

- 1 Open the model and drag an instance of this block from the Model-Wide Utilities library and drop the instance into the model.
- 2 Open the block's parameter dialog box and set the **Linearization time** to 2 and 5.
- 3 Open the model's **Model Configuration Parameters** dialog box.
- 4 Select the **Data Import/Export** pane.
- 5 Check **States** and **Time** on the **Save to Workspace** control panel
- 6 Select OK to confirm the selections and close the dialog box.
- 7 Simulate the model.

At the end of the simulation, the following variables appear in the MATLAB workspace: `f14_Timed_Based_Linearization`, `tout`, and `xout`.

- 8 Get the indices to the operating point times by entering the following at the MATLAB command line:

```
ind1 = find(f14_Timed_Based_Linearization(1).OperPoint.t==tout);  
ind2 = find(f14_Timed_Based_Linearization(1).OperPoint.t==tout);
```


- 9 Get the state vectors at the operating points.

```
x1 = xout(ind1,:);  
x2 = xout(ind2,:);
```

## Data Type Support

Not applicable.

# Timed-Based Linearization

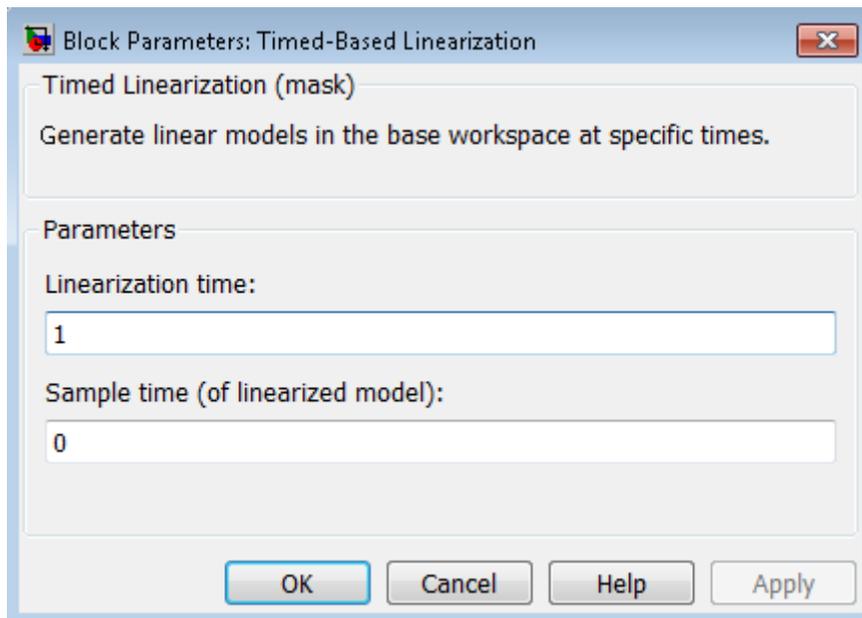

## Parameters and Dialog Box

### Linearization time

Time at which you want the block to generate a linear model. Enter a vector of times if you want the block to generate linear models at more than one time step.

### Sample time (of linearized model)

Specify a sample time to create discrete-time linearizations of the model (see “Discrete-Time System Linearization” on page 2-29).

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Dimensionalized	No

## See Also

Trigger-Based Linearization

## Purpose

Display time-domain signals


## Description



The Time Scope block displays signals in the time domain. The Time Scope block accepts input signals with the following characteristics:

- Continuous or discrete sample time
- Real- or complex-valued
- Fixed or variable size dimensions
- Floating- or fixed-point data type
- N-dimensional
- Simulink enumerations

# Time Scope

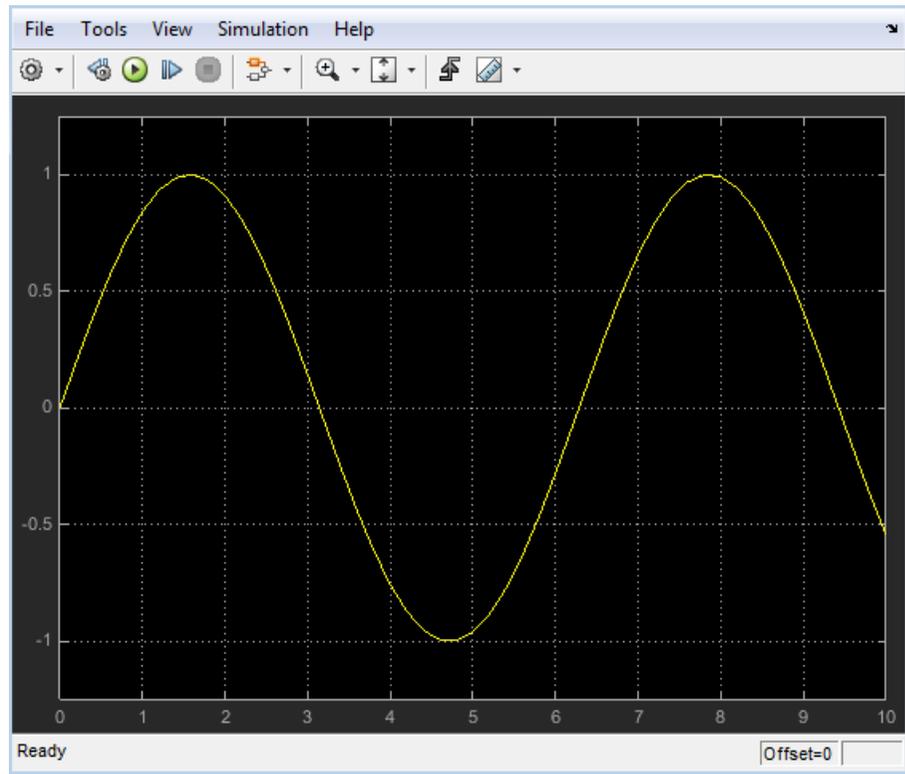

You can use the Time Scope block in models running in Normal or Accelerator simulation modes. You can also use the Time Scope block in models running in Rapid Accelerator or External simulation modes, with some limitations. See the “Supported Simulation Modes” on page 1-1901 section for more information.

You can use the Time Scope block inside of all subsystems and conditional subsystems. *Conditional subsystems* include enabled subsystems, triggered subsystems, enabled and triggered subsystems, and function-call subsystems. See “Conditional Subsystems” in the Simulink documentation for more information.

See the following sections for more information on the Time Scope:

- “Displaying Multiple Signals” on page 1-1815
- “Signal Display” on page 1-1820
- “Toolbar” on page 1-1824
- “Configuration Properties Buttons” on page 1-1825
- “Simulation Buttons” on page 1-1826
- “Zoom and Axes Control Buttons” on page 1-1828
- “Measurements Buttons” on page 1-1831
- “Measurements Panels” on page 1-1833
- “Configuration Properties Dialog Box” on page 1-1878
- “Style Dialog Box” on page 1-1893
- “Stepping Options” on page 1-1897
- “Tools—Axes Scaling Properties” on page 1-1898
- “Supported Data Types” on page 1-1901
- “Supported Simulation Modes” on page 1-1901

## Displaying Multiple Signals

### Multiple Signal Input

You can configure the Time Scope block to show multiple signals within the same display or on separate displays. By default, the signals appear as different-colored lines on the same display. The signals can have different dimensions, sample rates, and data types. Each signal can be either real or complex valued. You can set the number of input ports on the Time Scope block in the following ways:

- Right-click the Time Scope block in your model to bring up the context menu. Point your cursor to the **Signals & Ports > Number of Input Ports** item on the context menu. You can then select the number of input ports for the Time Scope block. If the desired number of input signals is 1, 2, or 3, then click on the appropriate value. To configure a Time Scope block to have more than three

# Time Scope

---


input ports, select **More**, and enter a number for the **Number of input ports** parameter.

- Open the Time Scope window by double-clicking the Time Scope block in your model. In the scope menu, select **File > Number of Input Ports**.
- Open the Time Scope window by double-clicking the Time Scope block in your model. In the scope menu, select **View > Configuration Properties** and set the **Number of input ports** on the **Main** tab.

An input signal may contain multiple channels, depending on its dimensions. Multiple channels of data are always shown as different-colored lines on the same display.


## Multiple Signal Names

By default, the scope names each channel according to either its signal name or the name of the block from which it comes. If the signal has multiple channels, the scope uses an index number to identify each channel of that signal. For example, a 2-channel signal named `Signal1` would have the following default names in the channel legend: `Signal1:1`, `Signal1:2`. In the following example, there is one 3-channel input signal and one 4-channel input signal to the scope block, one signal named `Signal1` and one unnamed signal coming from a block named `Block2`.

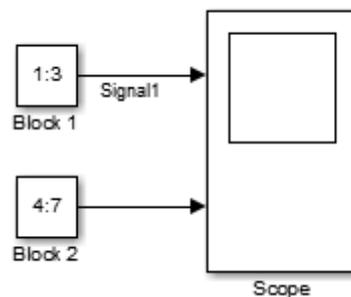

To see all the signal names, run the simulation and show the legend. To show the legend, select **View > Configuration Properties**, click the

**Display** tab, and select the **Show Legend** check box. The following legend appears in the display.

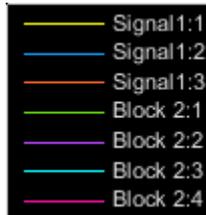


## Multiple Signal Colors

By default, the scope has a black axes background and chooses line colors for each channel in the same manner as the Simulink Scope block. When the scope axes background is black, it assigns each channel of each input signal a line color in the order shown above.

If there are more than 7 channels, then the scope repeats this order to assign line colors to the remaining channels. To choose line colors for each channel in the same manner as the MATLAB `plot` function, change the axes background color to any color except black. To change the axes background color to white, select **View > Style**, click the Axes

background color button () , and select white from the color palette. Run the simulation again. The following legend appears in the display.

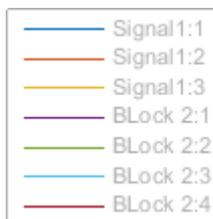

When the scope axes background is not black, it assigns each channel of each input signal a line color in order shown above. If there are more than 7 channels, then the scope repeats this order to assign line colors to the remaining channels. To manually modify any line color, select **View > Style** to open the Style dialog box. Next to **Properties for**

# Time Scope

---

**line**, select the signal name whose color you want to change. Then, next to **Line**, click the Line color button () and select any color from the palette.

## Multiple Time Offsets

You can offset all channels of an input signal by the same number of seconds or offset each channel independently. To offset all channels equally, select **View > Configuration Properties**, and specify a scalar value for the **Time display offset** parameter on the **Main** pane. To offset each channel independently, specify a vector of offset values. When you specify a **Time display offset** vector of length  $N$ , the scope offsets the input channels as follows:

- When  $N$  is equal to the number of input channels, the scope offsets each channel according to its corresponding value in the offset vector.
- When  $N$  is less than the number of input channels, the scope applies the values you specify in the offset vector to the first  $N$  input channels. The scope does not offset the remaining channels.
- When  $N$  is greater than the number of input channels, the scope offsets each input channel according to the corresponding value in the offset vector. The scope ignores all values in the offset vector that do not correspond to a channel of the input.

## Multiple Displays


You can display multiple channels of data on different displays in the scope window. In the scope toolbar, select **View > Layout**, or select the Layout button () in the dropdown below the Configuration Properties button.

---

**Note** The **Layout** menu item and button are not available when the scope is in snapshot mode.


---

This feature allows you to tile the window into a number of separate displays, up to a grid of 4 rows and 4 columns. For example, if there are three inputs to the scope, you can display the signals in separate displays by selecting row 3, column 1, as shown in the following figure.

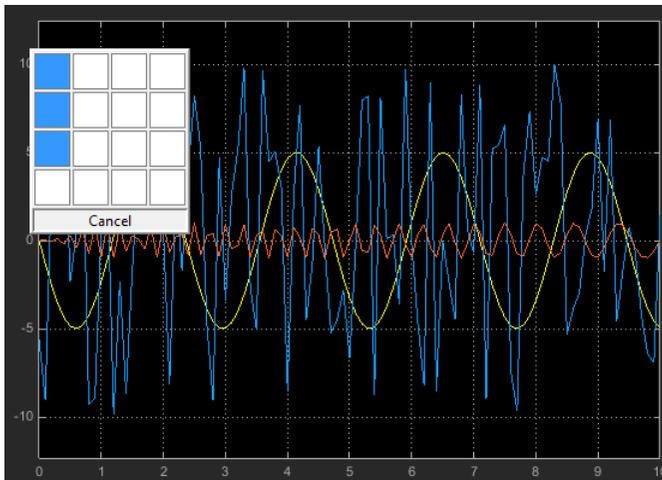

After you select row 3, column 1, the scope window is partitioned into three separate displays, as shown in the following figure.

# Time Scope

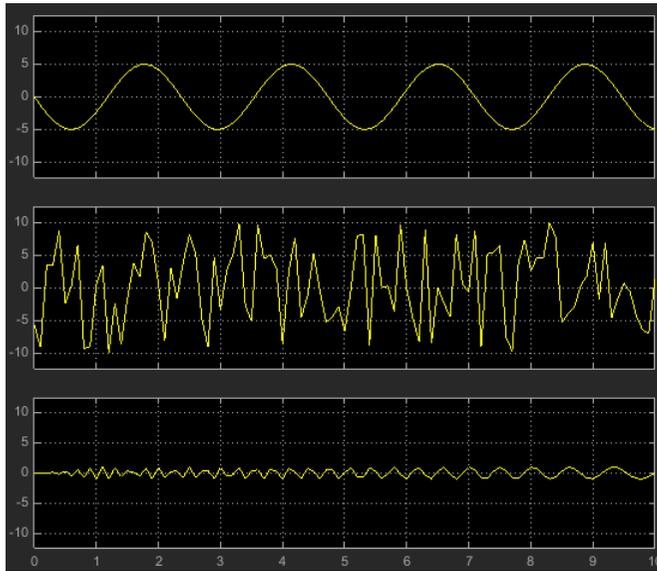


When you use the Layout option to tile the window into multiple displays, the display highlighted in yellow is referred to as the *active display*. The scope dialog boxes reference the active display.

## Signal Display

Time Scope uses the simulation start time and stop time in order to determine the default time range. However, you can define the length of simulation time for which the Time Scope displays data. To change the signal display settings, select **View > Configuration Properties** to bring up the Configuration Properties dialog box. Then, modify the values for the **Time span** and **Time display offset** parameters on the **Time** tab. For example, if you set the **Time span** to 20 seconds and the **Time display offset** to 0, the scope displays 20 seconds' worth of simulation data at a time. The values on the *time*-axis of the Time Scope display remain the same throughout simulation.

To communicate the simulation time that corresponds to the current display, the scope uses the **Time units**, **Time offset**, and **Simulation time** indicators on the scope window. The following figure highlights these and other important aspects of the Time Scope window.

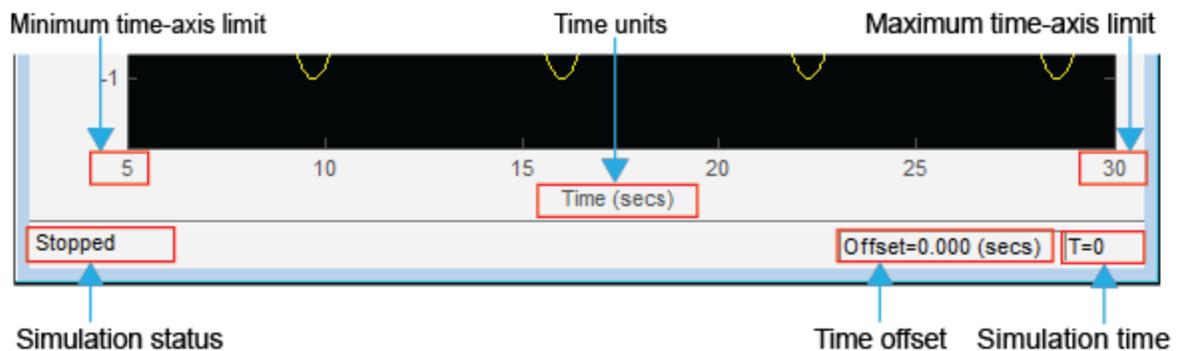

**Note** To prevent the scope from opening when you run your model, right-click on the scope icon and select **Comment Out**. If the scope is already open, you can still comment it out in the model. When you do so, the scope displays a message, “No data can be shown because this scope is commented out.” Select **Uncomment** to turn the scope back on.

- **Minimum time-axis limit** — The Time Scope sets the minimum *time*-axis limit using the value of the **Time display offset** parameter on the **Main** tab of the Visuals—Time Domain Properties dialog box. If you specify a vector of values for the **Time display offset** parameter, the scope uses the smallest of those values to set the minimum *time*-axis limit.
- **Maximum time-axis limit** — The Time Scope sets the maximum *time*-axis limit by summing the value of **Time display offset** parameter with the value of the **Time span** parameter. If you specify a vector of values for the **Time display offset** parameter, the scope sets the maximum *time*-axis limit by summing the largest of those values with the value of the **Time span** parameter.
- **Simulation status** — Provides the current status of the model simulation. The status can be one of the following conditions:
  - Initializing

# Time Scope

---

- Ready
- Running
- Paused

The **Simulation status** is part of the **Status Bar** in the Time Scope window. You can choose to hide or display the entire **Status Bar**. From the Time Scope menu, select **View > Status Bar**.

- **Time units** — The units used to describe the *time*-axis. The Time Scope sets the time units using the value of the **Time Units** parameter on the **Time** tab of the Configuration Properties dialog box. By default, this parameter is set to **Metric** (based on **Time Span**) and displays in metric units such as milliseconds, microseconds, minutes, days, etc. You can change it to **Seconds** to always display the *time*-axis values in units of seconds. You can change it to **None** to not display any units on the *time*-axis. When you set this parameter to **None**, then Time Scope shows only the word **Time** on the *time*-axis.

To hide both the word **Time** and the values on the *time*-axis, set the **Show time-axis labels** parameter to **None**. To hide both the word **Time** and the values on the *time*-axis in all displays except the bottom ones in each column of displays, set this parameter to **Bottom Displays Only**. This behavior differs from the Simulink Scope block, which always shows the values but never shows a label on the *x*-axis.

- **Time offset** — The **Time offset** value helps you determine the simulation times for which the scope is displaying data. The value is always in the range  $0 \leq \text{Time offset} \leq \text{Simulation time}$ . Therefore, add the **Time offset** to the fixed time span values on the *time*-axis to get the overall simulation time.

For example, if you set the **Time span** to 20 seconds, and you see a **Time offset** of 0 (**secs**) on the scope window. This value indicates that the scope is displaying data for the first 0 to 20 seconds of simulation time. If the **Time offset** changes to 20 (**secs**), the scope displays data for simulation times from 20 seconds to 40 seconds. The

scope continues to update the **Time offset** value until the simulation is complete.

- **Simulation time** — When the model is running or simulation has been paused, the scope displays the current simulation time. This time is the amount of time that the Time Scope has spent processing the input. If the model simulation completes or is stopped, the scope displays the time at which the simulation stopped. The **Simulation time** is part of the **Status Bar** in the Time Scope window. You can choose to hide or display the entire **Status Bar**. From the Time Scope menu, select **View > Status Bar**.


---

**Note** In some situations, the Time Scope block simulation time can be different from the Simulink simulation time. For multirate input signals, which have different sample times, and input signals originating from conditionally-executed subsystems, such as Triggered and Enabled subsystems, separate Time Scope blocks may report different simulation times. The Time Scope block reports the simulation time as the time corresponding to the last point in the display.

---

## Axes Maximization

When the scope is in maximized axes mode, the following figure highlights the important indicators on the scope window.

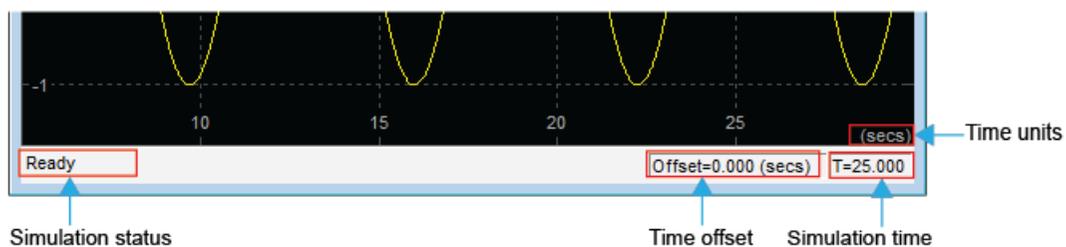

To toggle this mode, in the scope menu, select **View > Configuration Properties**. In the **Main** pane, locate the **Maximize axes** parameter.

# Time Scope

---

Specify whether to display the scope in maximized axes mode. In this mode, each of the axes is expanded to fit into the entire display. To conserve space, labels do not appear in each display. Instead, tick-mark values appear on top of the plotted data. You can select one of the following options:

- **Auto** — In this mode, the axes appear maximized in all displays only if the `Title` and `YLabel` properties are empty for every display. If you enter any value in any display for either of these properties, the axes are not maximized.
- **On** — In this mode, the axes appear maximized in all displays. Any values entered into the `Title` and `YLabel` properties are hidden.
- **Off** — In this mode, none of the axes appear maximized.

This property is Tunable.

The default setting is `Auto`.

## Reduce Updates to Improve Performance

By default, the scope updates the displays periodically at a rate not exceeding 20 hertz. If you would like the scope to update on every simulation time step, you can disable the **Reduce Updates to Improve Performance** option. However, as a recommended practice, leave this option enabled because doing so can significantly improve the speed of the simulation.

In the Time Scope menu, select **Simulation > Reduce Updates to Improve Performance** to clear the check box. Alternatively, use the **Ctrl+R** shortcut to toggle this setting.

## Toolbar

The Time Scope toolbar contains the following buttons. You can control whether this toolbar appears in the Time Scope window. From the Time Scope menu, select **View > Toolbar**.

## Configuration Properties Buttons

Button	Menu Location	Shortcut Keys	Description
	<b>View &gt; Configuration Properties</b>	N/A	Open the <b>Configuration Properties</b> dialog box.  See the “Configuration Properties Dialog Box” on page 1-1878 section for more information.
	<b>View &gt; Style</b>	N/A	You access the Style button from the menu under the Configuration Properties icon. Configure the scope display. You can change the color of the figure containing the displays, the background and foreground colors of display axes, and properties of lines in a display. style of the scope display. See the “Style Dialog Box” on page 1-1893 section for more information.
	<b>View &gt; Layout</b>	N/A	You access the Layout button from the menu under the Configuration Properties icon. Arrange the layout of displays in the Time Scope. This feature allows you to tile your screen into a number of separate displays, up to a grid of 4 rows and 4 columns. You may find multiple displays useful when the Time Scope takes multiple input signals. The default display is 1 row and 1 column. See the “Multiple Displays” on page 1-1818 section for more information.

## Simulation Buttons

Button	Menu Location	Shortcut Keys	Description
	Simulation > Stepping Options	N/A	Open the <b>Simulation Stepping Options</b> dialog box. This button appears only when you have stepping backward disabled. See the “Stepping Options” on page 1-1897 section for more information.
	Simulation > Step Back	N/A	Advance the model simulation backward by one time step. This button appears only when you have stepping backward enabled and the model simulation is paused.
	Simulation > Run	Ctrl+T, p, Space	Start the model simulation. This button appears only when the model simulation is stopped.
	Simulation > Continue	p, Space	Continue the model simulation. This button appears only when the model simulation is paused.
	Simulation > Pause	p, Space	Pause the model simulation. This button appears only when the model simulation is running.
	Simulation > Step Forward	Right arrow, Page Down	Advance the model simulation forward by one time step. This button starts the model simulation, allows it to run for one time step, and then pauses it again. The scope window then updates with the latest data.

Button	Menu Location	Shortcut Keys	Description
	<b>Simulation &gt; Stop</b>	<b>Ctrl+T, s</b>	Stop the model simulation. This button appears only when the model simulation is running or paused.
	<b>View &gt; Highlight Simulink Block</b>	<b>Ctrl+L</b>	Bring the model window forward, and highlight the Time Scope block whose display you are currently viewing. The Time Scope block that corresponds to the active Time Scope window flashes three times in the model.
	<b>Simulation &gt; Simulink Snapshot</b>	N/A	You access the Simulation Snapshot button from the menu under the Highlight Simulink Block icon. Take a snapshot of the current scope display. This button temporarily freezes the scope display, while allowing simulation to continue running. To unfreeze the scope display and view the current simulation data, toggle this button to turn off snapshot mode. Snapshot mode is not available if the scope is commented out in the block diagram.

To see a full listing of the shortcut keys for these simulation controls, from the Time Scope menu, select **Help > Keyboard Command Help**.

## Zoom and Axes Control Buttons

Button	Menu Location	Shortcut Keys	Description
	<b>Tools &gt; Zoom In</b>	N/A	When this tool is active, you can zoom in on the scope window. To do so, click in the center of your area of interest, or click and drag your cursor to draw a rectangular area of interest inside the scope window.
	<b>Tools &gt; Zoom X</b>	N/A	You access the Zoom X button from the menu under the Zoom In icon. When this tool is active, you can zoom in on the $x$ -axis. To do so, click inside the scope window, or click and drag your cursor along the $x$ -axis over your area of interest.
	<b>Tools &gt; Zoom Y</b>	N/A	You access the Zoom Y button from the menu under the Zoom In icon. When this tool is active, you can zoom in on the $y$ -axis. To do so, click inside the scope window, or click and drag your cursor along the $y$ -axis over your area of interest.

Button	Menu Location	Shortcut Keys	Description
	<b>Tools &gt; Pan</b>	N/A	<p>You access the Pan button from the menu under the Zoom In icon. When this tool is active, you can pan on the scope window. To do so, click in the center of your area of interest and drag your cursor to the left, right, up, or down, to move the position of the display.</p>
	<b>Tools &gt; Scale Y-Axis Limits</b>	<b>Ctrl+A</b>	<p>Click this button to scale the axes in the active scope window.</p> <p>Alternatively, you can enable automatic axes scaling by selecting one of the following options from the <b>Tools</b> menu:</p> <ul style="list-style-type: none"> <li>• <b>Automatically Scale Axes Limits</b> — When you select this option, the scope scales the axes as needed during simulation.</li> <li>• <b>Scale Axes Limits after 10 Updates</b> — When you select this option, the scope scales the axes after 10 updates. The scope does not scale the axes again during the simulation.</li> <li>• <b>Scale Axes Limits at Stop</b> — When you select this option, the scope scales the axes each time the simulation is stopped.</li> </ul>

# Time Scope

Button	Menu Location	Shortcut Keys	Description
	<b>Tools &gt; Scale X-Axis Limits</b>	N/A	<p>You access the Scale X-Axis Limits button from the menu under the current Axis Limits icon. Click this button to scale the axes in the X direction in the active scope window.</p> <p>Alternatively, you can enable automatic axes scaling by selecting one of the following options from the <b>Tools</b> menu:</p> <ul style="list-style-type: none"> <li>• <b>Automatically Scale Axes Limits</b> — When you select this option, the scope scales the axes as needed during simulation.</li> <li>• <b>Scale Axes Limits after 10 Updates</b> — When you select this option, the scope scales the axes after 10 updates. The scope does not scale the axes again during the simulation.</li> <li>• <b>Scale Axes Limits at Stop</b> — When you select this option, the scope scales the axes each time the simulation is stopped.</li> </ul>
	<b>Tools &gt; Scale X and Y Axes Limits</b>	N/A	<p>You access the Scale X and Y Axis Limits button from the menu under the current Axis Limits icon. Click this button to scale the axes in both the X and Y directions in the active scope window.</p> <p>Alternatively, you can enable automatic axes scaling by selecting</p>

Button	Menu Location	Shortcut Keys	Description
			<p>one of the following options from the <b>Tools</b> menu:</p> <ul style="list-style-type: none"> <li>• <b>Automatically Scale Axes Limits</b> — When you select this option, the scope scales the axes as needed during simulation.</li> <li>• <b>Scale Axes Limits after 10 Updates</b> — When you select this option, the scope scales the axes after 10 updates. The scope does not scale the axes again during the simulation.</li> <li>• <b>Scale Axes Limits at Stop</b> — When you select this option, the scope scales the axes each time the simulation is stopped.</li> </ul>

## Measurements Buttons

	<b>Tools &gt; Triggers</b>	N/A	<p>Open or close the <b>Triggers</b> panel. This panel allows you to pause the display only when certain events occur. You can use the Triggers panel when you want to align or search for interesting events. Triggers can be configured to both select and align specific regions of interest in the display area of the scope.</p>
---	----------------------------	-----	---

# Time Scope

			See the “Triggers Panel” on page 1-1835 section for more information.
	<b>Tools &gt; Measurements &gt; Cursor Measurements</b>	N/A	<p>Open or close the <b>Cursor Measurements</b> panel. This panel puts screen cursors on all the displays.</p> <p>See the “Cursor Measurements Panel” on page 1-1854 section for more information.</p>
	<b>Tools &gt; Measurements &gt; Signal Statistics</b>	N/A	<p>You access the Signal Statistics button from the menu under the current Measurements icon. Open or close the <b>Signal Statistics</b> panel. This panel displays the maximum, minimum, peak-to-peak difference, mean, median, RMS values of a selected signal, and the times at which the maximum and minimum occur.</p> <p>See the “Signal Statistics Panel” on page 1-1856 section for more information.</p>
	<b>Tools &gt; Measurements &gt; Bilevel Measurements</b>	N/A	<p>You access the Bilevel Measurements button from the menu under the current Measurements icon. Open or close the <b>Bilevel Measurements</b> panel. This panel displays information about a selected signal’s transitions, overshoots or undershoots, and cycles.</p> <p>See the “Bilevel Measurements Panel” on page 1-1859 section for more information.</p>

	<b>Tools &gt; Measurements &gt; Peak Finder</b>	N/A	<p>You access the Peak Finder button from the menu under the current Measurements icon. Open or close the <b>Peak Finder</b> panel. This panel displays maxima and the times at which they occur, allowing the settings for peak threshold, maximum number of peaks, and peak excursion to be modified.</p> <p>See the “Peak Finder Panel” on page 1-1873 section for more information.</p>
---	---	-----	---

## Measurements Panels

The Measurements panels are the panels that appear to the right side of the Time Scope GUI. These panels are labeled **Trace selection**, **Cursor measurements**, **Signal statistics**, **Bilevel measurements**, and **Peak finder**.

The Time Domain Measurements panels only appear if the **Measurements** tool is enabled in the Tools—Axes Scaling Properties dialog box. To open this dialog box, in the Time Scope menu, select **File > Configuration** and click the **Tools** pane. If you disable the tool by clearing the **Enabled** check box, the Time Domain Measurements tools no longer display in the Time Scope figure. You can reenabling the tool at any time by selecting the **Enabled** check box. See the “Tools—Axes Scaling Properties” on page 1-1898 section for more information.

### Measurements Panel Buttons

Each of the Measurements panels contains the following buttons that enable you to modify the appearance of the current panel.

# Time Scope

Button	Description
	Move the current panel to the top. When you are displaying more than one panel, this action moves the current panel above all the other panels.
	Collapse the current panel. When you first enable a panel, by default, it displays one or more of its panes. Click this button to hide all of its panes to conserve space. After you click this button, it becomes the expand button  .
	Expand the current panel. This button appears after you click the collapse button to hide the panes in the current panel. Click this button to display the panes in the current panel and show measurements again. After you click this button, it becomes the collapse button  again.
	Undock the current panel. This button lets you move the current panel into a separate window that can be relocated anywhere on your screen. After you click this button, it becomes the dock button  in the new window.
	Dock the current panel. This button appears only after you click the undock button. Click this button to put the current panel back into the right side of the Scope window. After you click this button, it becomes the undock button  again.
	Close the current panel. This button lets you remove the current panel from the right side of the Scope window.

Some panels have their measurements separated by category into a number of panes. Click the pane expand button  to show each pane that is hidden in the current panel. Click the pane collapse button  to hide each pane that is shown in the current panel.

## Trace Selection Panel

When you use the scope to view multiple signals, the Trace Selection panel appears if you have more than one signal displayed and you click on any of the other Measurements panels. The Measurements panels display information about only the signal chosen in this panel. Choose the signal name for which you would like to display time domain measurements. See the following figure.



You can choose to hide or display the **Trace Selection** panel. In the Scope menu, select **Tools > Measurements > Trace Selection**.


## Triggers Panel

The **Triggers** panel allows you to pause the display only when certain events occur. You can use the Triggers panel when you want to align or search for interesting events. You can configure triggers to both select and align specific regions of interest in the display area of the scope. Triggers work across multiple displays. You can also choose to hide or display the **Triggers** panel. In the scope toolbar, click

the Triggers button (  ). Alternatively, in the scope menu, select **Tools > Triggers**.

# Time Scope

---

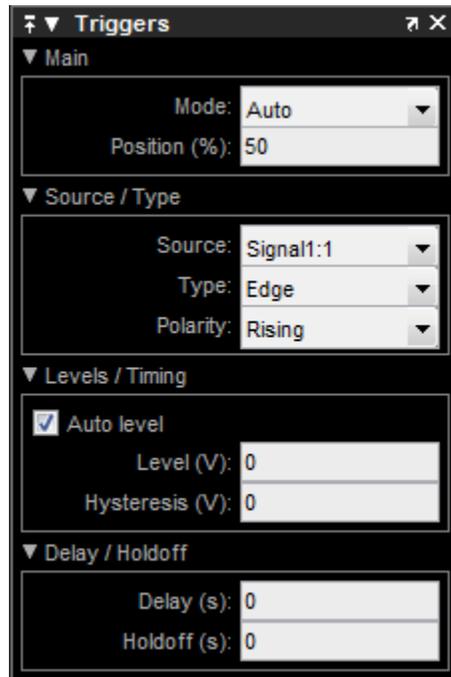

When the **Triggers** panel is displayed, triangle pointers appear at the top and right side of the axes on each display. These markers indicate the time position (▲) and level (■) at the event. The color of the markers corresponds to the color of the source signal.

---

**Note** The scope does not display an event until at least a full time span is completely viewable inside the display. To prevent data from being shown twice in the display, the scope suppresses the alignment of recurring events until a full time span has elapsed since the previous update.

---

## Main Pane

The **Main** pane lets you choose how often the display updates and in what position the trigger indicator appears.

- **Mode** — Define how often the display should update.
  - **Auto** — The scope aligns and displays data from the latest trigger event. If no event is found after a full time span has elapsed, then the scope displays the last available data. Use this mode to see your data and have it align whenever a trigger event occurs.
  - **Normal** — The scope aligns and displays data only from the latest trigger event. Use this mode to search for infrequently occurring events in your data.
  - **Once** — The scope displays data on the next encountered trigger event and freezes the display. The scope ignores subsequent data until you press the **Rearm** button.
  - **Off** — The scope does not make acquisitions. Triggering is disabled. This setting is equivalent to hiding the **Triggers** panel. You can use panning only if **Mode** is set to **Off**.

If mode is set to either **Normal** or **Once** and the Triggers panel does not encounter any event, the display remains blank. Set **Mode** to **Auto** if you want the scope to display signal data regularly, in addition to trigger events.

- **Position (%)** — Specify, as a percentage of the total time span within the active display, the horizontal position in which the trigger indicator appears. A position value of 0 corresponds to the minimum *time*-axis value at the far-left side of the display. A position value of 100 corresponds to the maximum *time*-axis value at the far-right side of the display. Drag the trigger position indicator to the left or right to adjust its position.


## Source / Type Pane

The **Source / Type** pane lets you choose the source of the trigger and the type of events on which to stop.

# Time Scope


---

- **Source** — Assign the trigger source to a particular channel. If you are viewing a magnitude/phase plot, you can trigger off the magnitude or the phase. If you are not viewing the magnitude/phase plot, you can trigger off the real or imaginary data. If the input signal has multiple channels, the scope assigns an index number to identify each channel of that signal. For more information, see Multiple Signal Input.
- **Type** — Select the type of trigger to use.
  - **Edge** — Trigger when the scope crosses a level threshold. In the case of a rising edge, the scope enables the trigger event when the signal value becomes less than the level threshold minus hysteresis. The scope disables the trigger event when the signal becomes greater than the level threshold for the first time. The scope uses linear interpolation to generate a trigger event at the time when the signal crosses the level threshold, as shown in the following figure.

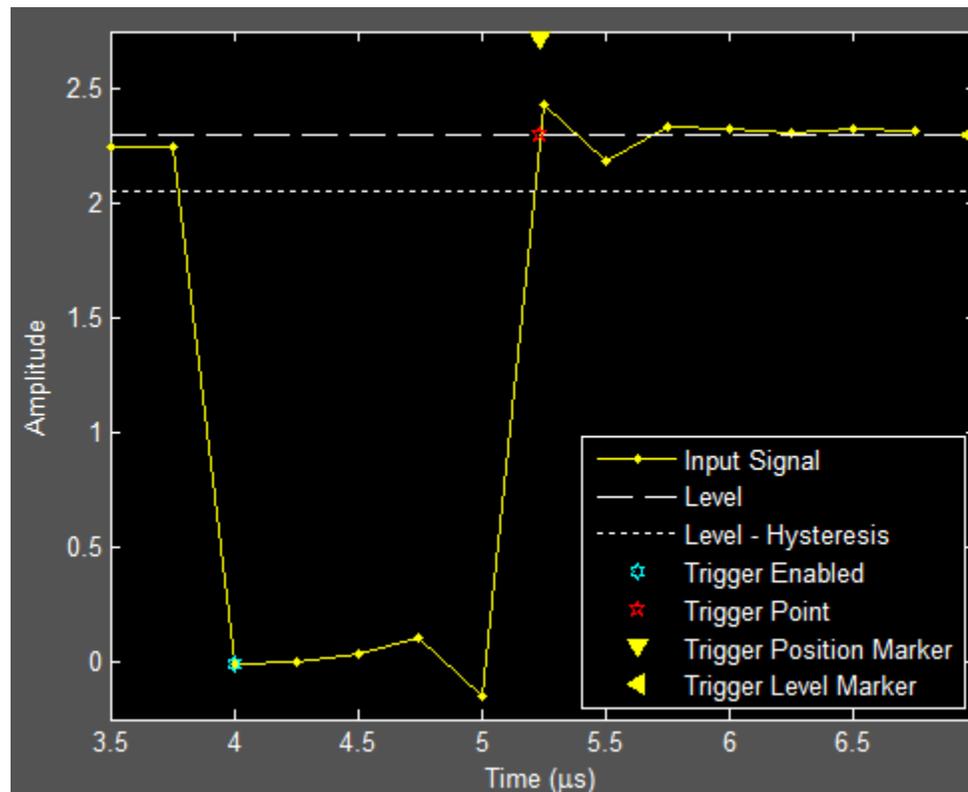


In the case of a falling edge, the scope enables the trigger event when the signal value becomes greater than the level threshold plus hysteresis. The scope disables the trigger event when the signal becomes less than the level threshold for the first time. The scope uses linear interpolation to generate a trigger event at the time when the signal crosses the level threshold, as shown in the following figure.

# Time Scope

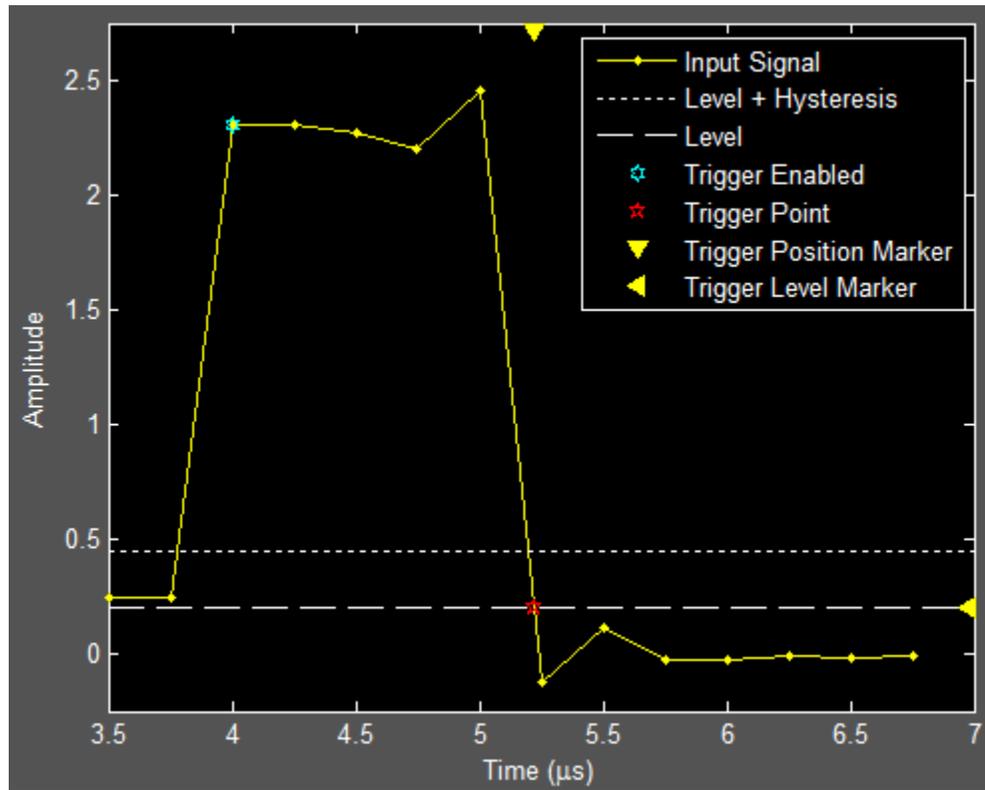

- **Pulse Width** — Trigger when the scope encounters a pulse whose width falls inside or outside specified time limits. You specify the range of valid time limits in the **Levels / Timing** pane. In the case of a positive-polarity pulse, the scope encounters a trigger event when the signal crosses the low threshold for the second time. The scope measures the pulse width as the time between the first and second crossings of the middle threshold, located halfway between the high and low thresholds, as shown in the following figure.

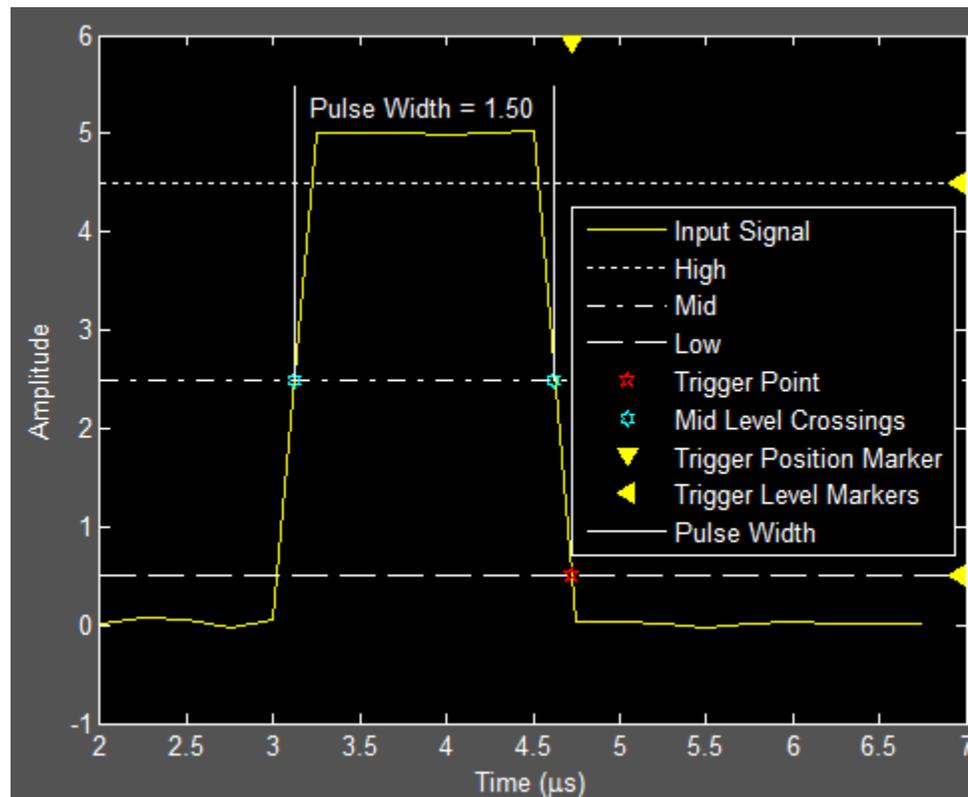

---


**Note** A *Glitch*-type trigger looks for a pulse or spike whose duration is less than a specified amount. You can implement a *Glitch* type trigger by using a **Pulse Width** type trigger and manually setting the **Max Width** parameter.

---

- **Transition** — Trigger on a rising or falling edge that crosses two levels, high and low, inside or outside a specified time interval. You specify the range of valid transition times in the **Levels / Timing** pane. In the case of a rising transition, the


# Time Scope

scope encounters the trigger event when the signal crosses the high threshold. The transition time is when the signal crosses the middle threshold, located halfway between the high and low thresholds, as shown in the following figure.

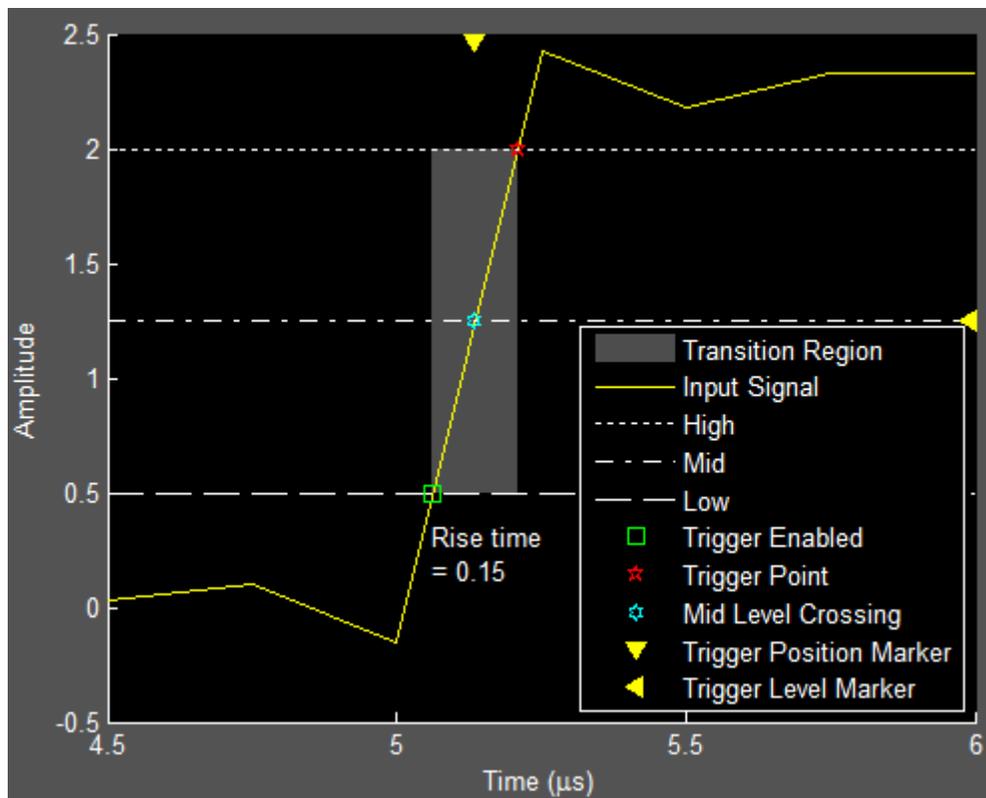

- **Runt** — Trigger on a runt pulse, which crosses one threshold, high or low, but not both. In the case of a positive-polarity runt pulse, the scope encounters a trigger event when the signal crosses the low threshold the second time, without ever crossing the high threshold. The scope measures the runt width as the time between the first and second crossings of the low threshold, as shown in the

following figure. The runt width is the **Max Width** – **Min Width**. Any runt pulse width that is less than the minimum width or greater than the maximum width will not generate a trigger event.

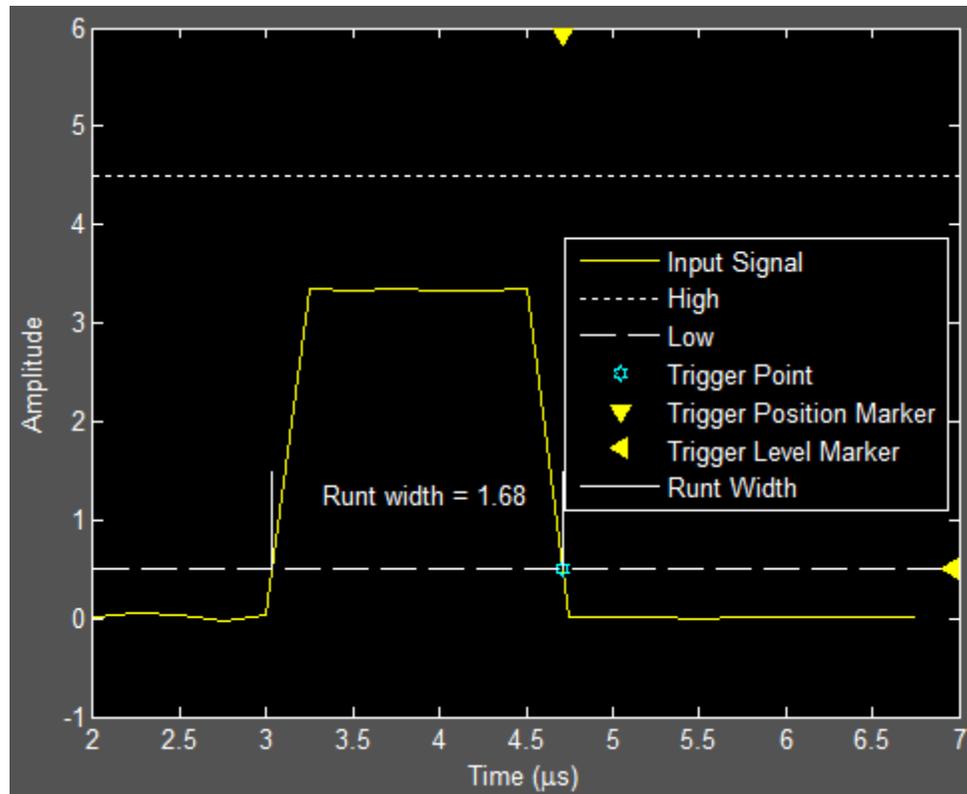

---


**Note** You can also replicate a **Runt**-type trigger by using a **Window**-type trigger and setting **Polarity** to **Inside**.

---


- **Window** — Trigger when the input signal stays within or outside the region defined by the high and low thresholds for a period of

# Time Scope

time. In the case of an inside window, the scope encounters a trigger event when the signal enters and exits the inside region, as shown in the following figure.

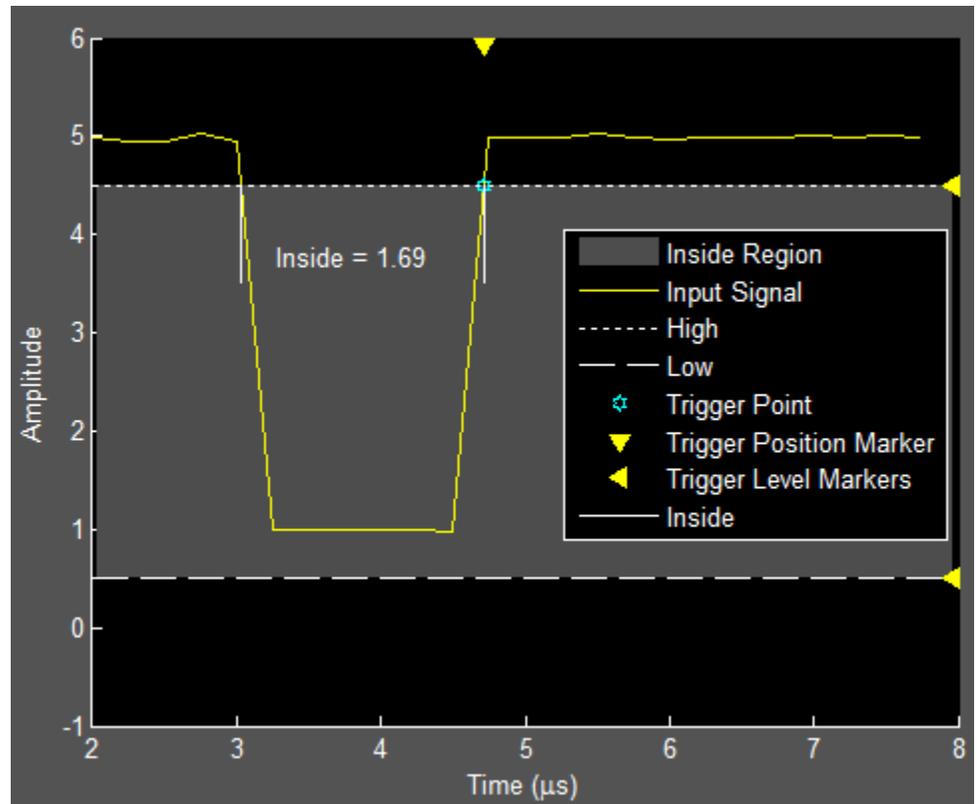


In the case of an outside window, the scope encounters a trigger event when the signal enters and exits the outside region, as shown in the following figure.

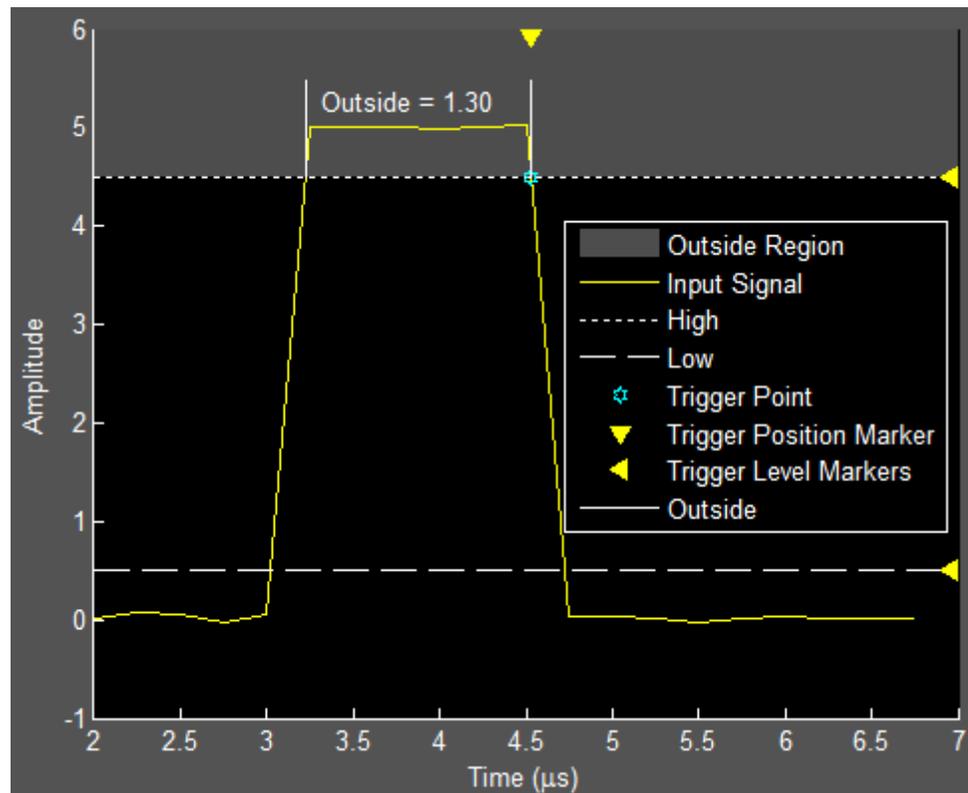


The scope encounters a trigger event when the signal crosses either the high or low threshold the second time.

- **Timeout** — Trigger when the input signal stays above or below a voltage threshold longer than a specified time. In the case of a timeout trigger with polarity set to **Either** and a timeout duration of 7.50 seconds, the scope can encounter the trigger event 7.50 seconds after the signal crosses the level threshold the last time, as shown in the following figure.

# Time Scope

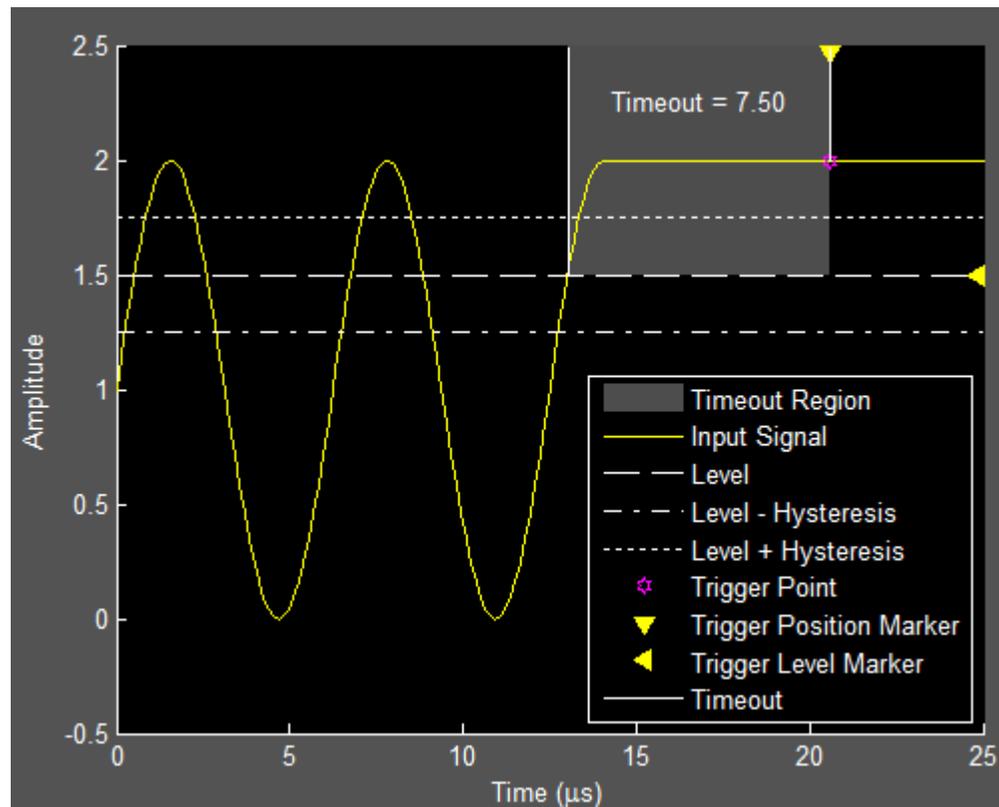

Alternatively, the scope can encounter the trigger event when the signal stays within the boundaries defined by the hysteresis for 7.50 seconds after the signal crosses the level threshold, as shown in the following figure.

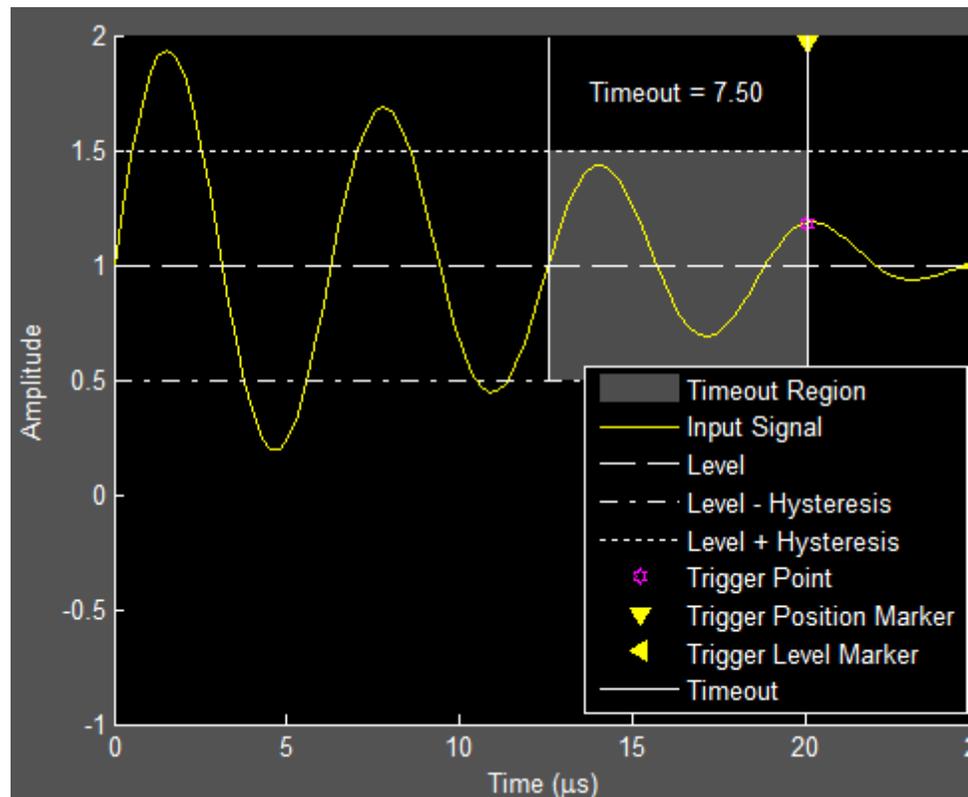

- Polarity** — Select the polarity of the trigger type. The option you choose for **Type** directly affects the options available for **Polarity**, as shown in the following table.

Trigger Type	Polarity Options
Edge	Rising, Falling, Either
Pulse Width	Positive, Negative, Either
Transition	Rise Time, Fall Time, Either
Runt	Positive, Negative, Either

# Time Scope

---


Trigger Type	Polarity Options
Window	Inside, Outside, Either
Timeout	Rising, Falling, Either

When you set **Type** to Edge, the polarity options are:


- **Rising** — Trigger on a *rising edge*, a transition from a low-state level to a high-state level.
- **Falling** — Trigger on a *falling edge*, transition from a high-state level to a low-state level.
- **Either** — Trigger on both rising edges and falling edges.

When you set **Type** to Pulse Width or Runt, the polarity options are:

- **Positive** — Trigger on a positive-polarity pulse, as shown in the following figure.

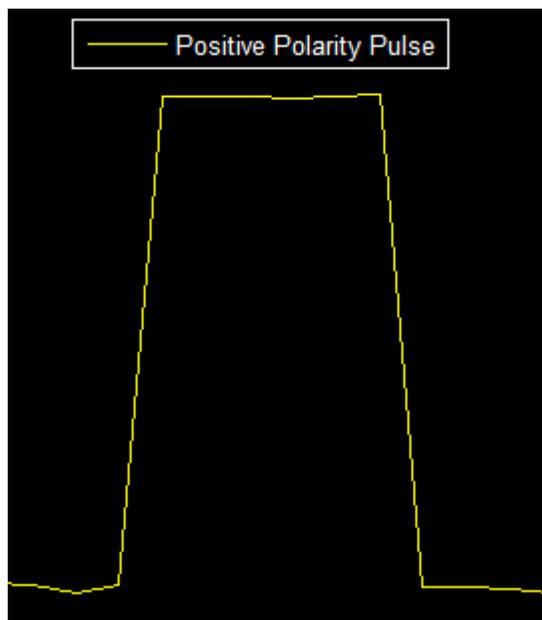

- **Negative** — Trigger on a negative-polarity pulse, as shown in the following figure.

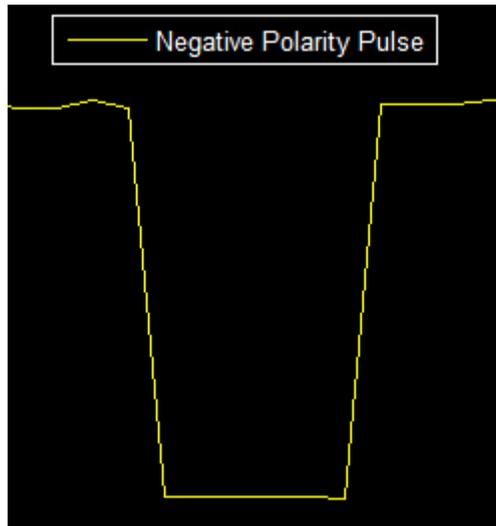

- **Either** — Trigger on both positive-polarity and negative-polarity pulses.

When you set **Type** to Transition, the polarity options are:

- **Rise Time** — Trigger based on how long the signal takes to transition from the low threshold to the high threshold.
- **Fall Time** — Trigger based on how long the signal takes to transition from the high threshold to the low threshold.
- **Either** — Trigger based on how long it takes to make either a rising or falling transition.

When you set **Type** to Window, the polarity options are:

- **Inside** — Trigger when the signal stays within the low and high levels for a specified time duration.
- **Outside** — Trigger when the signal stays outside of the low and high levels for a specified time duration.

# Time Scope

- **Either** — Trigger on both inside and outside windows.  
When you set **Type** to **Timeout**, the polarity options are:
  - **Rising** — Trigger when the signal does not cross the reference level from below.
  - **Falling** — Trigger when the signal does not cross the reference level from above.
  - **Either** — Trigger when the signal does not cross the reference level from either direction.

## Levels / Timing Pane

The **Levels / Timing** pane enables you to set the trigger level and hysteresis value. The option you choose for **Type** directly affects which level and timing parameters are available, as shown in the following table.


Trigger Type	Level Parameters	Auto-Level Setting	Timing Parameters
Edge	Level, Hysteresis	Level = 50%	n/a
Pulse Width	High, Low	High = 90%, Low = 10%	Min Width, Max Width
Transition	High, Low	High = 90%, Low = 10%	Min Time, Max Time
Runt	High, Low	High = 90%, Low = 10%	Min Width, Max Width
Window	High, Low	High = 90%, Low = 10%	Min Time, Max Time
Timeout	Level, Hysteresis	n/a	Timeout

- **Auto level** — Enable the Triggers panel to automatically choose the level parameters. If you set the trigger type to **Edge**, this option sets


the **Level** parameter to 50% of the range of the source signal. If you set the trigger type to **Timeout**, the Triggers panel does not show this option. Setting the trigger type to other menu choices results in **High** and **Low** parameter adjustment. **Auto level** sets the **High** parameter to 90% of the range of the source signal and the **Low** parameter to 10% of the range of the source signal.

- **Level (V)** — Specify, in volts, the trigger level. This parameter is visible when you set **Type** to Edge or Timeout.
- **Hysteresis (V)** — Specify, in volts, the hysteresis or noise reject value. This parameter is visible when you set **Type** to Edge or Timeout. If the signal jitters inside this range and briefly crosses the trigger level, the scope does not register an event. In the case of an edge trigger with rising polarity, the scope ignores any times that the signal crosses the trigger level within the hysteresis region, as shown in the following figure.

# Time Scope

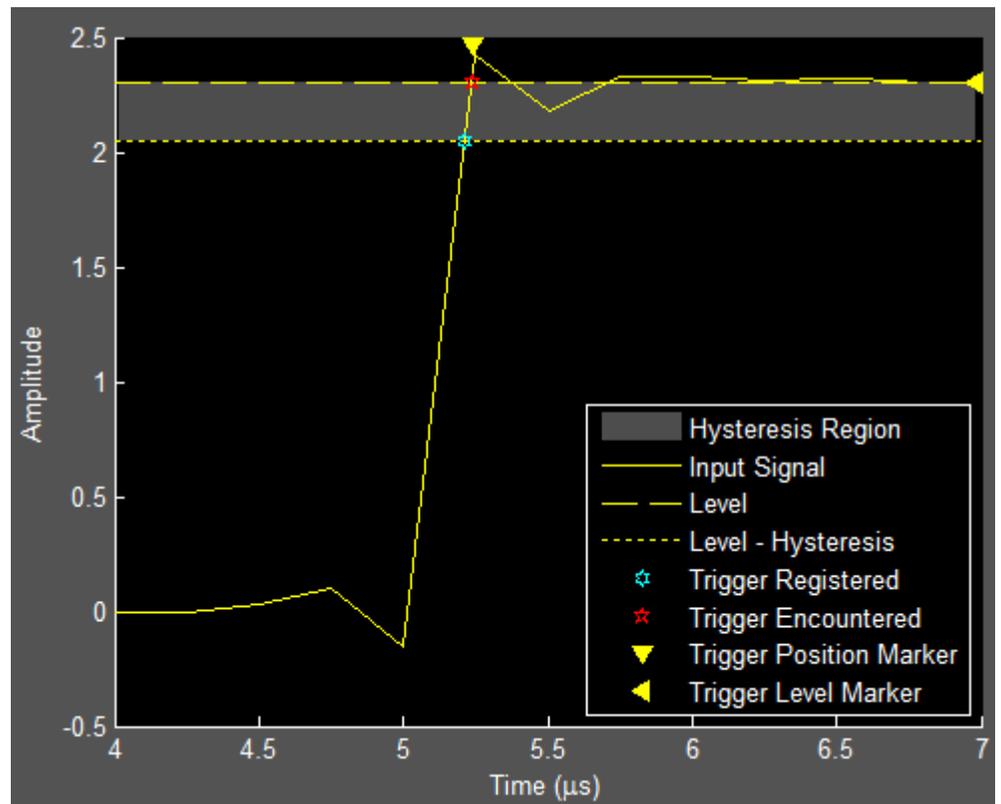

You can reduce the hysteresis region size by decreasing the hysteresis value. If you set the hysteresis value to 0.07 in this example, then the scope also considers the second rising edge to be a trigger event, as shown in the following figure.

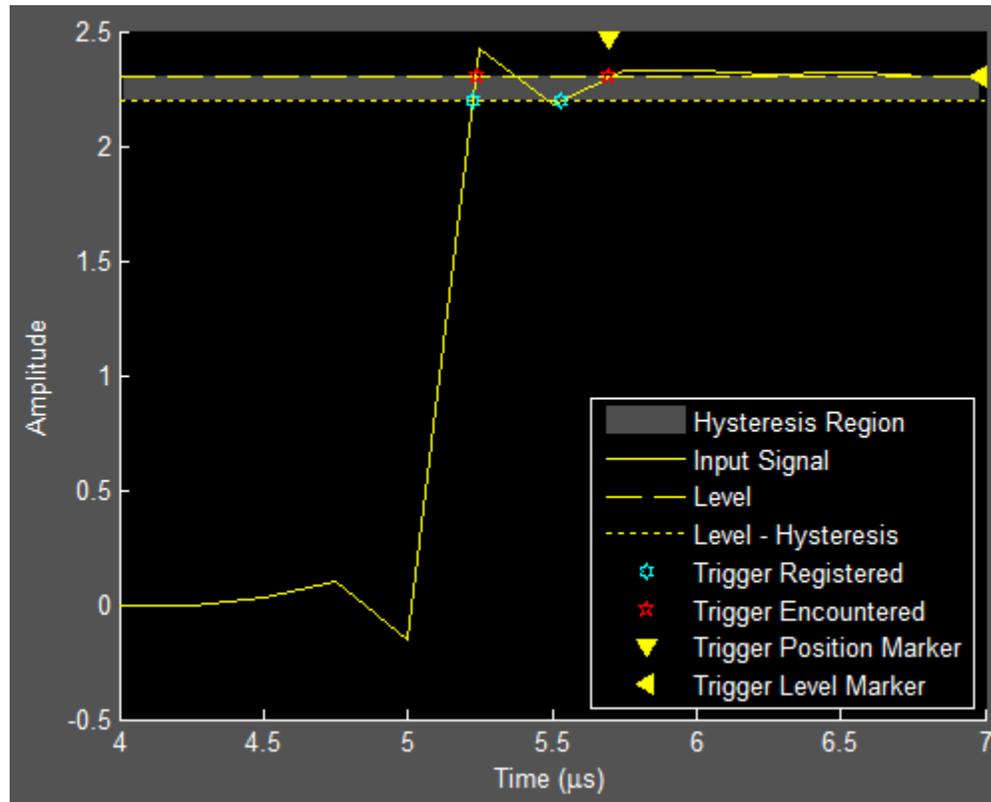

- **High (V)** — Specify, in volts, the value that denotes a positive polarity, or high-state level. This parameter is visible when you set **Type** to Pulse Width, Transition, Runt, or Window.
- **Low (V)** — Specify, in volts, the value that denotes a negative polarity, or low-state level. This parameter is visible when you set **Type** to Pulse Width, Transition, Runt, or Window.
- **Min Width (s)** — Specify, in seconds, the minimum pulse width. This parameter is visible when you set **Type** to Pulse Width or Runt.
- **Max Width (s)** — Specify, in seconds, the maximum pulse width. This parameter is visible when you set **Type** to Pulse Width or Runt.

# Time Scope

---

- **Min Time (s)** — Specify, in seconds, the minimum duration. This parameter is visible when you set **Type** to Transition or Window.
- **Max Time (s)** — Specify, in seconds, the maximum duration. This parameter is visible when you set **Type** to Transition or Window.
- **Timeout (s)** — Specify, in seconds, the timeout duration. This parameter is visible when you set **Type** to Timeout.


## Delay / Holdoff Pane

The **Delay / Holdoff** pane enables you to offset the trigger position by a fixed delay or set the minimum possible time between trigger events.

- **Delay (s)** — Specify, in seconds, the fixed delay time by which to offset the trigger position. This parameter controls the amount of time the scope waits after a trigger event occurs before displaying a signal.
- **Holdoff (s)** — Specify, in seconds, the minimum possible time between trigger events. This amount of time is used to suppress data acquisition after a valid trigger event is encountered. A trigger holdoff prevents repeated occurrences of a trigger from occurring during the portion of a burst that is of interest.

## Cursor Measurements Panel

The **Cursor Measurements** panel displays screen cursors. You can choose to hide or display the **Cursor Measurements** panel. In the Scope menu, select **Tools > Measurements > Cursor Measurements**. Alternatively, in the Scope toolbar, click the Cursor Measurements  button.

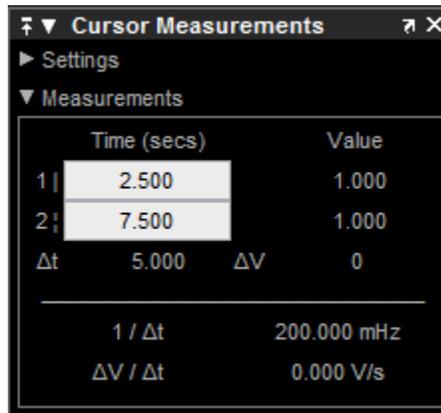

The screenshot shows a window titled "Cursor Measurements" with a close button (X) and a maximize button (⌵). It is divided into two panes: "Settings" (expanded) and "Measurements" (collapsed). The "Measurements" pane contains a table with the following data:

	Time (secs)	Value
1	2.500	1.000
2	7.500	1.000
$\Delta t$	5.000	$\Delta V$ 0
$1 / \Delta t$		200.000 mHz
$\Delta V / \Delta t$		0.000 V/s

The **Cursor Measurements** panel is separated into two panes, labeled **Settings** and **Measurements**. You can expand each pane to see the available options.

You can use the mouse or the left and right arrow keys to move vertical or waveform cursors and the up and down arrow keys for horizontal cursors.

## Settings Pane

The **Settings** pane enables you to modify the type of screen cursors used for calculating measurements. When more than one signal is displayed, you can assign cursors to each trace individually.

- **Screen Cursors** — Shows screen cursors (for power and power density spectra only).
- **Horizontal** — Shows horizontal screen cursors (for power and power density spectra only).
- **Vertical** — Shows vertical screen cursors (for power and power density spectra only).
- **Waveform Cursors** — Shows cursors that attach to the input signals (for power and power density spectra only).

# Time Scope

---

- **Lock Cursor Spacing** — Locks the frequency difference between the two cursors.
- **Snap to Data** — Positions the cursors on signal data points.


## Measurements Pane

The **Measurements** pane shows the time and value measurements.

- **1 |**— Shows or enables you to modify the time or value at cursor number one, or both.
- **2 :**— Shows or enables you to modify the time or value at cursor number two, or both.
- **$\Delta t$** — Shows the absolute value of the difference in the times between cursor number one and cursor number two.
- **$\Delta V$** — Shows the absolute value of the difference in signal amplitudes between cursor number one and cursor number two.
- **$1/\Delta t$** — Shows the rate, the reciprocal of the absolute value of the difference in the times between cursor number one and cursor number two.
- **$\Delta V/\Delta t$** — Shows the slope, the ratio of the absolute value of the difference in signal amplitudes between cursors to the absolute value of the difference in the times between cursors.

## Signal Statistics Panel

The **Signal Statistics** panel displays the maximum, minimum, peak-to-peak difference, mean, median, and RMS values of a selected signal. It also shows the  $x$ -axis indices at which the maximum and minimum values occur. You can choose to hide or display the **Signal Statistics** panel. In the Scope menu, select **Tools > Measurements > Signal Statistics**. Alternatively, in the scope toolbar, click the Signal Statistics  button.

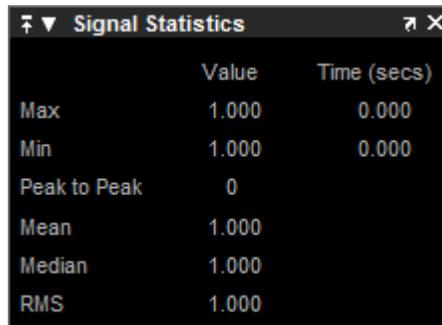

	Value	Time (secs)
Max	1.000	0.000
Min	1.000	0.000
Peak to Peak	0	
Mean	1.000	
Median	1.000	
RMS	1.000	

## Signal Statistics Measurements

The **Signal Statistics** panel shows statistics about the portion of the input signal within the  $x$ -axis and  $y$ -axis limits of the active display. The statistics shown are:

- **Max** — Shows the maximum or largest value within the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the MATLAB `max` function reference.
- **Min** — Shows the minimum or smallest value within the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the MATLAB `min` function reference.
- **Peak to Peak** — Shows the difference between the maximum and minimum values within the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `peak2peak` function reference.
- **Mean** — Shows the average or mean of all the values within the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the MATLAB `mean` function reference.
- **Median** — Shows the median value within the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the MATLAB `median` function reference.

# Time Scope

---

- **RMS** — Shows the difference between the maximum and minimum values within the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `rms` function reference.

When you use the zoom options in the Scope, the Signal Statistics measurements automatically adjust to the time range shown in the display. In the Scope toolbar, click the **Zoom In** or **Zoom X** button to constrict the *x*-axis range of the display, and the statistics shown reflect this time range. For example, you can zoom in on one pulse to make the **Signal Statistics** panel display information about only that particular pulse.


The Signal Statistics measurements are valid for any units of the input signal. The letter after the value associated with each measurement represents the appropriate International System of Units (SI) prefix, such as *m* for *milli*-. For example, if the input signal is measured in volts, an *m* next to a measurement value indicates that this value is in units of millivolts. The SI prefixes are shown in the following table:

Abbreviation	Name	Multiplier
a	atto	10 <sup>-18</sup>
f	femto	10 <sup>-15</sup>
p	pico	10 <sup>-12</sup>
n	nano	10 <sup>-9</sup>
u	micro	10 <sup>-6</sup>
m	milli	10 <sup>-3</sup>
		10 <sup>0</sup>
k	kilo	10 <sup>3</sup>
M	mega	10 <sup>6</sup>
G	giga	10 <sup>9</sup>
T	tera	10 <sup>12</sup>

Abbreviation	Name	Multiplier
P	peta	10 <sup>15</sup>
E	exa	10 <sup>18</sup>

## Bilevel Measurements Panel

The **Bilevel Measurements** panel shows information about a selected signal's transitions, overshoots or undershoots, and cycles. You can choose to hide or display the **Bilevel Measurements** panel. In the Scope menu, select **Tools > Measurements > Bilevel Measurements**. Alternatively, in the Scope toolbar, you can select the Bilevel Measurements  button.

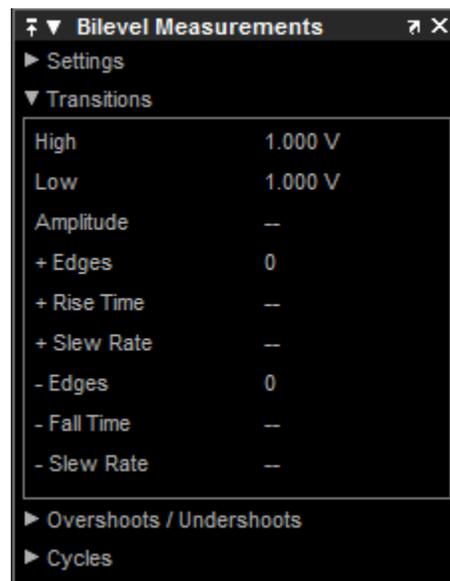


The **Bilevel Measurements** panel is separated into four panes, labeled **Settings**, **Transitions**, **Overshoots / Undershoots**, and **Cycles**. You can expand each pane to see the available options.

# Time Scope


## Settings Pane

The **Settings** pane enables you to modify the properties used to calculate various measurements involving transitions, overshoots, undershoots, and cycles. You can modify the high-state level, low-state level, state-level tolerance, upper-reference level, mid-reference level, and lower-reference level, as shown in the following figure.

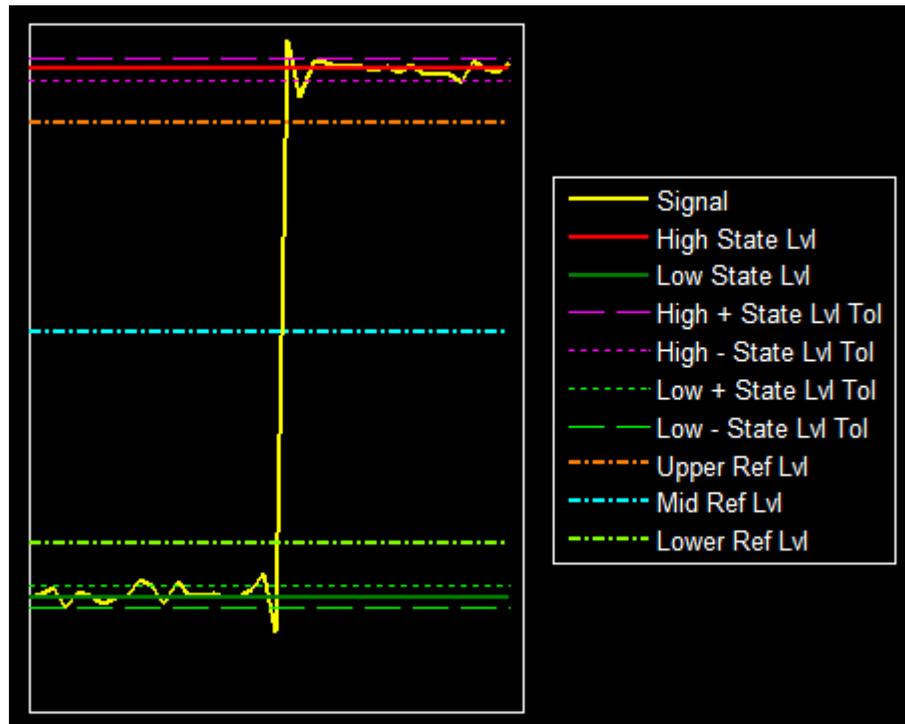

- **Auto State Level** — When this check box is selected, the Bilevel measurements panel autodetects the high- and low- state levels of a bilevel waveform. For more information on the algorithm this option uses, see the Signal Processing Toolbox `statelevels` function reference. When this check box is cleared, you may enter in values for the high- and low- state levels manually.


- **High** — Used to manually specify the value that denotes a positive polarity, or high-state level, as shown in the following figure.

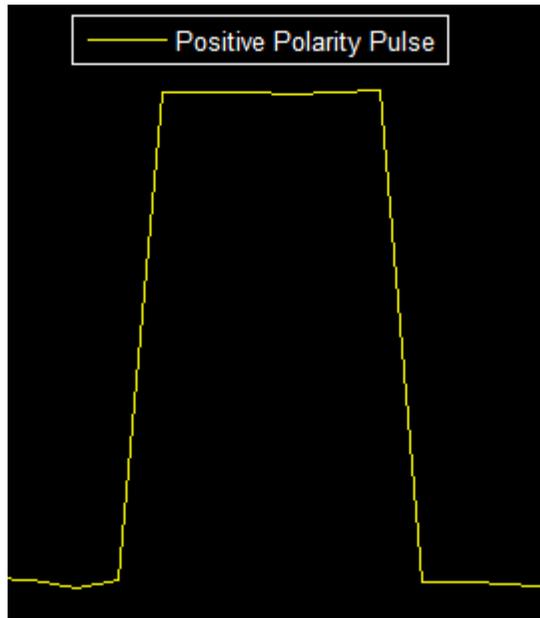


- **Low** — Used to manually specify the value that denotes a negative polarity, or low-state level, as shown in the following figure.

# Time Scope

---

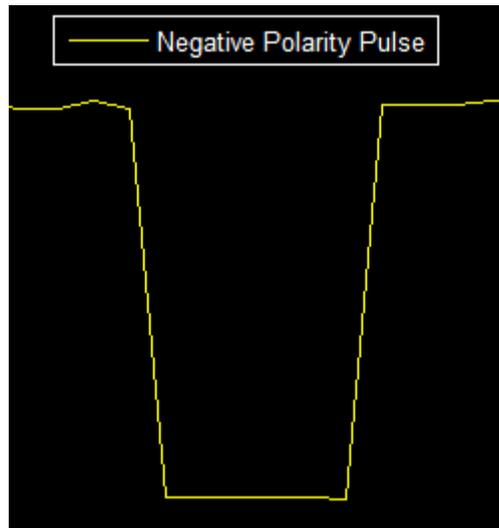

- **State Level Tolerance** — Tolerance within which the initial and final levels of each transition must be within their respective state levels. This value is expressed as a percentage of the difference between the high- and low-state levels.
- **Upper Ref Level** — Used to compute the end of the rise-time measurement or the start of the fall time measurement. This value is expressed as a percentage of the difference between the high- and low-state levels.
- **Mid Ref Level** — Used to determine when a transition occurs. This value is expressed as a percentage of the difference between the high- and low- state levels. In the following figure, the mid-reference level is shown as the horizontal line, and its corresponding mid-reference level instant is shown as the vertical line.

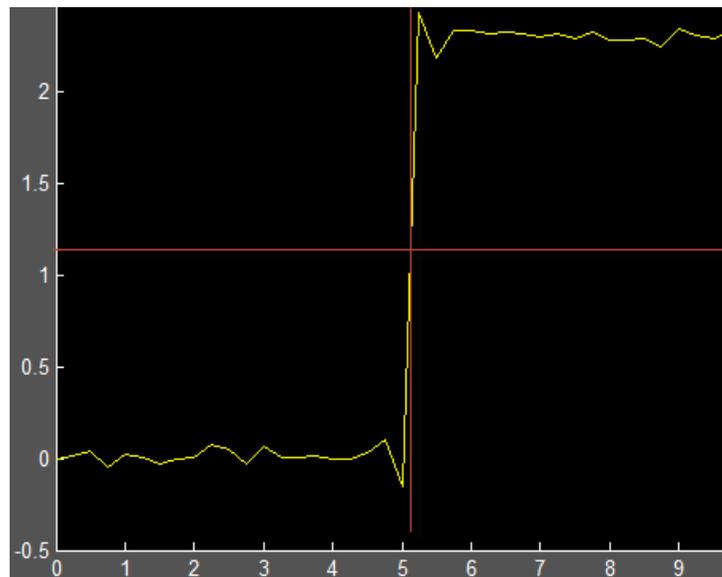

- **Lower Ref Level** — Used to compute the end of the fall-time measurement or the start of the rise-time measurement. This value is expressed as a percentage of the difference between the high- and low-state levels.
- **Settle Seek** — The duration after the mid-reference level instant when each transition occurs used for computing a valid settling time. This value is equivalent to the input parameter, `D`, which you can set when you run the `settlingtime` function. The settling time is displayed in the **Overshoots/Undershoots** pane.

## Transitions Pane


The **Transitions** pane displays calculated measurements associated with the input signal changing between its two possible state level values, high and low.

A positive-going transition, or *rising edge*, in a bilevel waveform is a transition from the low-state level to the high-state level. A

# Time Scope


---

positive-going transition has a slope value greater than zero. The following figure shows a positive-going transition.

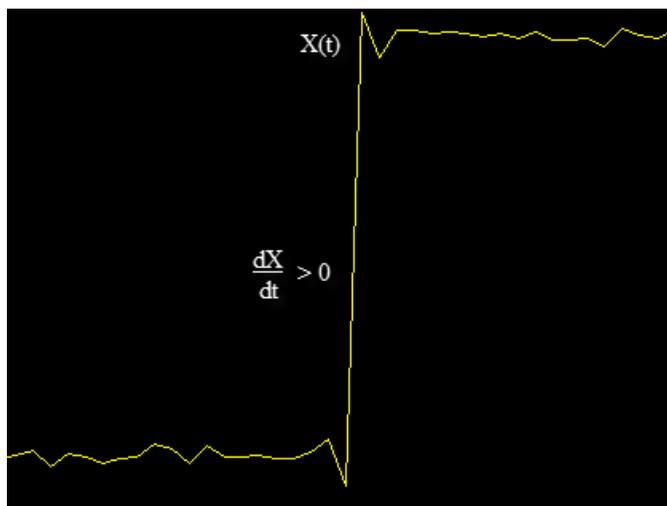

Whenever there is a plus sign (+) next to a text label, this symbol refers to measurement associated with a rising edge, a transition from a low-state level to a high-state level.

A negative-going transition, or falling edge, in a bilevel waveform is a transition from the high-state level to the low-state level. A negative-going transition has a slope value less than zero. The following figure shows a negative-going transition.

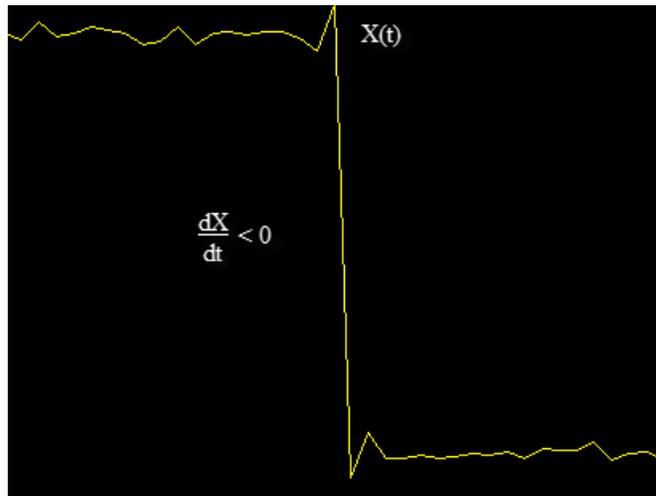


Whenever there is a minus sign (–) next to a text label, this symbol refers to measurement associated with a falling edge, a transition from a high-state level to a low-state level.

The Transition measurements assume that the amplitude of the input signal is in units of volts. You must convert all input signals to volts for the Transition measurements to be valid.

- **High** — The high-amplitude state level of the input signal over the duration of the **Time Span** parameter. You can set **Time Span** in the **Main** pane of the Visuals—Time Domain Properties dialog box. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `statelevels` function reference.
- **Low** — The low-amplitude state level of the input signal over the duration of the **Time Span** parameter. You can set **Time Span** in the **Main** pane of the Visuals—Time Domain Properties dialog box. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `statelevels` function reference.
- **Amplitude** — Difference in amplitude between the high-state level and the low-state level.

# Time Scope

- **+ Edges** — Total number of positive-polarity, or rising, edges counted within the displayed portion of the input signal.
- **+ Rise Time** — Average amount of time required for each rising edge to cross from the lower-reference level to the upper-reference level. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `risetime` function reference.
- **+ Slew Rate** — Average slope of each rising-edge transition line within the upper- and lower-percent reference levels in the displayed portion of the input signal. The region in which the slew rate is calculated appears in gray in the following figure.

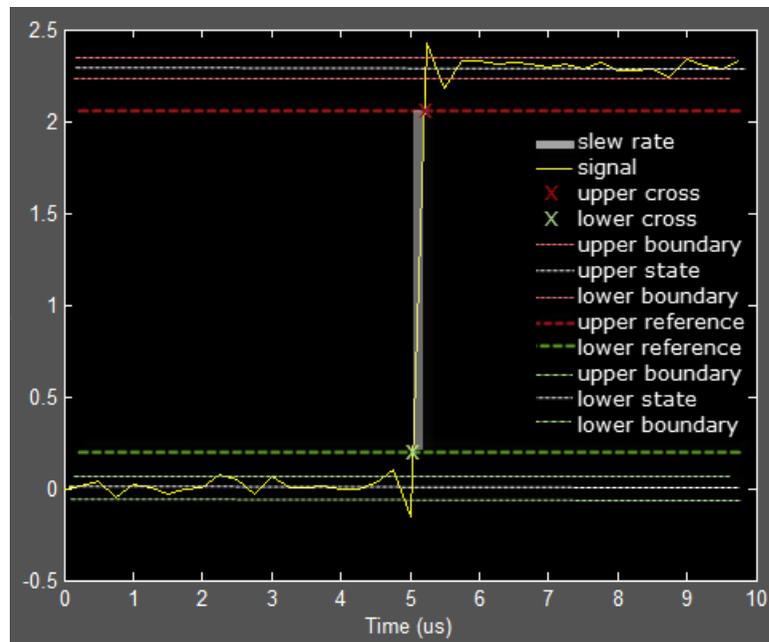

For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `slewrates` function reference.

- **- Edges** — Total number of negative-polarity or falling edges counted within the displayed portion of the input signal.


- – **Fall Time** — Average amount of time required for each falling edge to cross from the upper-reference level to the lower-reference level. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `falltime` function reference.
- – **Slew Rate** — Average slope of each falling edge transition line within the upper- and lower-percent reference levels in the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `slewrates` function reference.

## Overshoots/Undershoots


The **Overshoots/Undershoots** pane displays calculated measurements involving the distortion and damping of the input signal. *Overshoot* and *undershoot* refer to the amount that a signal respectively exceeds and falls below its final steady-state value. *Preshoot* refers to the amount prior to a transition that a signal varies from its initial steady-state value. This figure shows preshoot, overshoot, and undershoot for a rising-edge transition.

# Time Scope

---

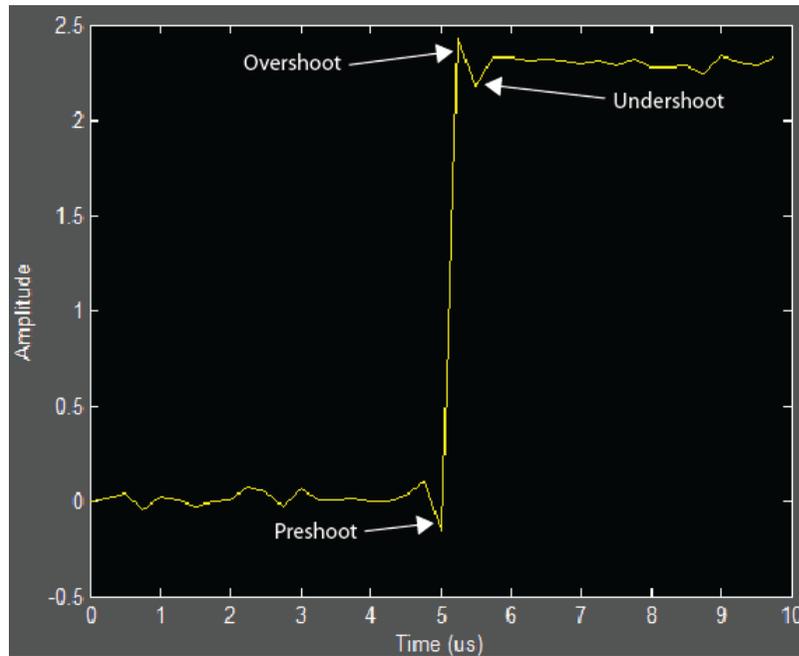


The next figure shows preshoot, overshoot, and undershoot for a falling-edge transition.

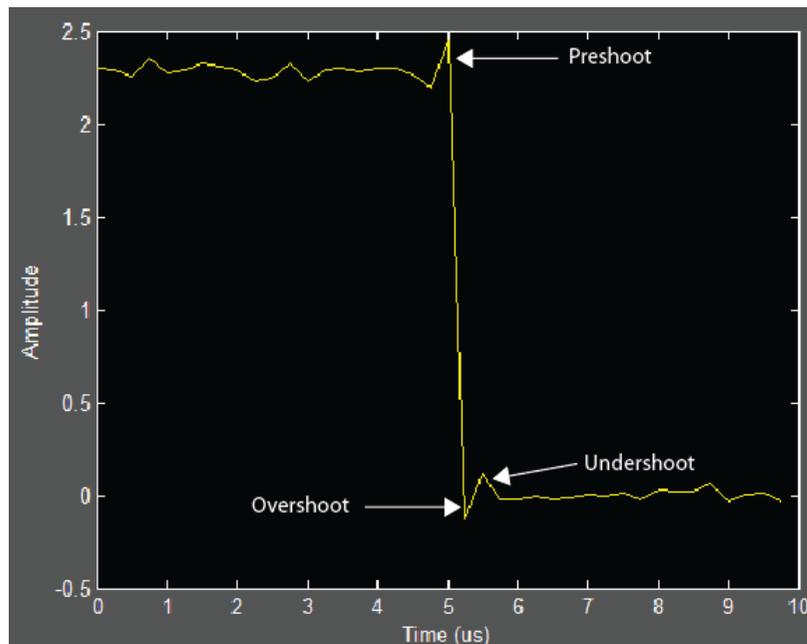

- + **Preshoot** — Average lowest aberration in the region immediately preceding each rising transition.
- + **Overshoot** — Average highest aberration in the region immediately following each rising transition. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox overshoot function reference.
- + **Undershoot** — Average lowest aberration in the region immediately following each rising transition. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox undershoot function reference.
- + **Settling Time** — Average time required for each rising edge to enter and remain within the tolerance of the high-state level for the remainder of the settle seek duration. The settling time is the time after the mid-reference level instant when the signal crosses into and

# Time Scope

remains in the tolerance region around the high-state level. This crossing is illustrated in the following figure.

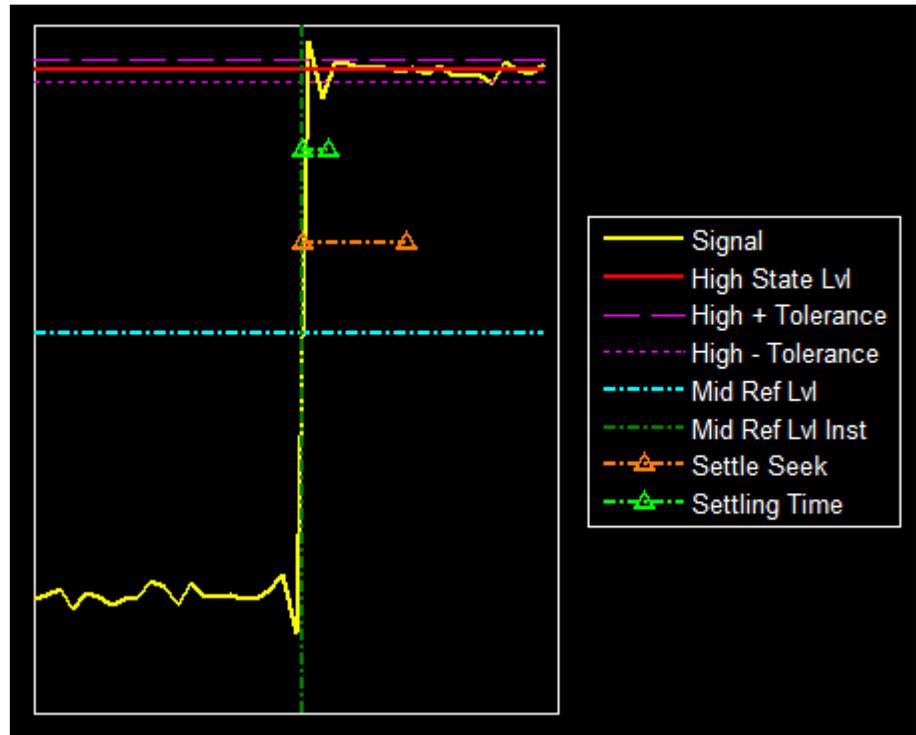

You can modify the settle seek duration parameter in the **Settings** pane. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `settlingtime` function reference.

- – **Preshoot** — Average highest aberration in the region immediately preceding each falling transition.
- – **Overshoot** — Average highest aberration in the region immediately following each falling transition. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `overshoot` function reference.

- – **Undershoot** — Average lowest aberration in the region immediately following each falling transition. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `undershoot` function reference.
- – **Settling Time** — Average time required for each falling edge to enter and remain within the tolerance of the low-state level for the remainder of the settle seek duration. The settling time is the time after the mid-reference level instant when the signal crosses into and remains in the tolerance region around the low-state level. You can modify the settle seek duration parameter in the **Settings** pane. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `settlingtime` function reference.


## Cycles

The **Cycles** pane displays calculated measurements pertaining to repetitions or trends in the displayed portion of the input signal.

- **Period** — Average duration between adjacent edges of identical polarity within the displayed portion of the input signal. The Bilevel measurements panel calculates period as follows. It takes the difference between the mid-reference level instants of the initial transition of each positive-polarity pulse and the next positive-going transition. These mid-reference level instants appear as red dots in the following figure.

# Time Scope

---

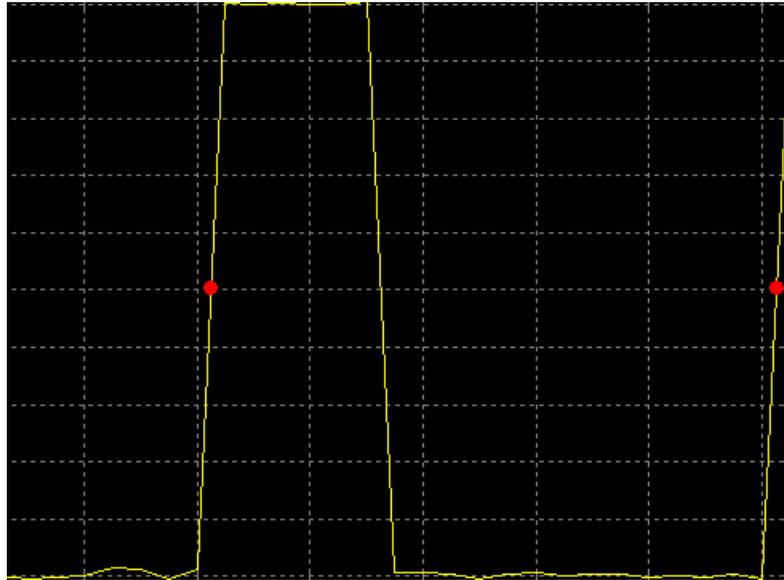

For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `pulseperiod` function reference.

- **Frequency** — Reciprocal of the average period. Whereas period is typically measured in some metric form of seconds, or seconds per cycle, frequency is typically measured in hertz or cycles per second.
- **+ Pulses** — Number of positive-polarity pulses counted.
- **+ Width** — Average duration between rising and falling edges of each positive-polarity pulse within the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `pulsewidth` function reference.
- **+ Duty Cycle** — Average ratio of pulse width to pulse period for each positive-polarity pulse within the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `dutycycle` function reference.
- **- Pulses** — Number of negative-polarity pulses counted.

- – **Width** — Average duration between rising and falling edges of each negative-polarity pulse within the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `pulsewidth` function reference.
- – **Duty Cycle** — Average ratio of pulse width to pulse period for each negative-polarity pulse within the displayed portion of the input signal. For more information on the algorithm this measurement uses, see the Signal Processing Toolbox `dutycycle` function reference.


When you use the zoom options in the Scope, the bilevel measurements automatically adjust to the time range shown in the display. In the Scope toolbar, click the **Zoom In** or **Zoom X** button to constrict the *x*-axis range of the display, and the statistics shown reflect this time range. For example, you can zoom in on one rising edge to make the **Bilevel Measurements** panel display information about only that particular rising edge. However, this feature does not apply to the **High** and **Low** measurements.

## Peak Finder Panel

The **Peak Finder** panel displays the maxima, showing the *x*-axis values at which they occur. This panel allows you to modify the settings for peak threshold, maximum number of peaks, and peak excursion. You can choose to hide or display the **Peak Finder** panel. In the scope menu, select **Tools > Measurements > Peak Finder**. Alternatively, in the scope toolbar, select the Peak Finder  button.

# Time Scope

---

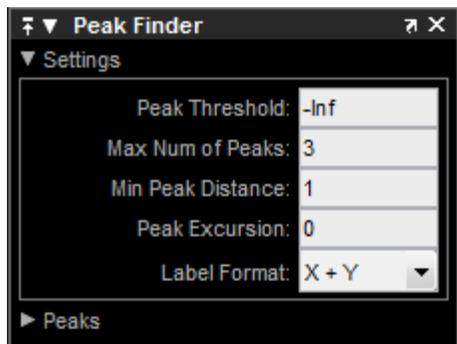


The **Peak finder** panel is separated into two panes, labeled **Settings** and **Peaks**. You can expand each pane to see the available options.

## Settings Pane

The **Settings** pane enables you to modify the parameters used to calculate the peak values within the displayed portion of the input signal. For more information on the algorithms this pane uses, see the Signal Processing Toolbox `findpeaks` function reference.

- **Peak Threshold** — The level above which peaks are detected. This setting is equivalent to the `MINPEAKHEIGHT` parameter, which you can set when you run the `findpeaks` function.
- **Max Num of Peaks** — The maximum number of peaks to show. The value you enter must be a scalar integer between 1 and 99. This setting is equivalent to the `NPEAKS` parameter, which you can set when you run the `findpeaks` function.
- **Min Peaks Distance** — The minimum number of samples between adjacent peaks. This setting is equivalent to the `MINPEAKDISTANCE` parameter, which you can set when you run the `findpeaks` function.
- **Peak Excursion** — The minimum height difference between a peak and its neighboring samples. Peak excursion is illustrated alongside peak threshold in the following figure.

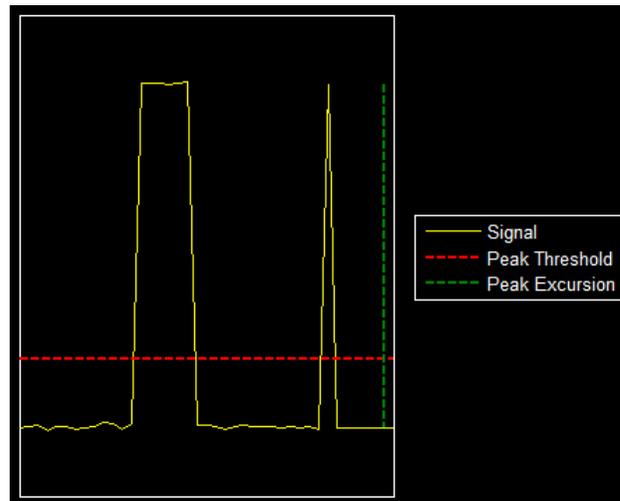

The *peak threshold* is a minimum value necessary for a sample value to be a peak. The *peak excursion* is the minimum difference between a peak sample and the samples to its left and right in the time domain. In the figure, the green vertical line illustrates the lesser of the two height differences between the labeled peak and its neighboring samples. This height difference must be greater than the **Peak Excursion** value for the labeled peak to be classified as a peak. Compare this setting to peak threshold, which is illustrated by the red horizontal line. The amplitude must be above this horizontal line for the labeled peak to be classified as a peak.


The peak excursion setting is equivalent to the `THRESHOLD` parameter, which you can set when you run the `findpeaks` function.

- **Label Format** — The coordinates to display next to the calculated peak values on the plot. To see peak values, you must first expand the **Peaks** pane and select the check boxes associated with individual peaks of interest. By default, both *x*-axis and *y*-axis values are displayed on the plot. Select which axes values you want to display next to each peak symbol on the display.
  - `X+Y` — Display both *x*-axis and *y*-axis values.

- X — Display only  $x$ -axis values.
- Y — Display only  $y$ -axis values.

## Peaks Pane

The **Peaks** pane displays all of the largest calculated peak values. It also shows the coordinates at which the peaks occur, using the parameters you define in the **Settings** pane. You set the **Max Num of Peaks** parameter to specify the number of peaks shown in the list.

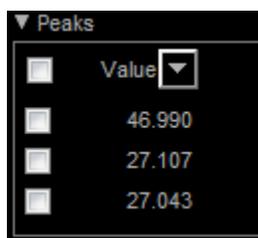

The screenshot shows a dark-themed window titled "Peaks". At the top left is a dropdown arrow and the text "Peaks". Below this is a table with two columns. The first column contains three empty checkboxes. The second column is labeled "Value" and contains three numerical values: 46.990, 27.107, and 27.043. Each row has a small dropdown arrow to its right.

<input type="checkbox"/>	Value
<input type="checkbox"/>	46.990
<input type="checkbox"/>	27.107
<input type="checkbox"/>	27.043

The numerical values displayed in the **Value** column are equivalent to the `pks` output argument returned when you run the `findpeaks` function. The numerical values displayed in the second column are similar to the `locs` output argument returned when you run the `findpeaks` function.

The Peak Finder displays the peak values in the **Peaks** pane. By default, the **Peak Finder** panel displays the largest calculated peak values in the **Peaks** pane in decreasing order of peak height. Use the sort descending button () to rearrange the category and order by which Peak Finder displays peak values. Click this button again to sort the peaks in ascending order instead. When you do so, the arrow changes direction to become the sort ascending button (). A filled sort button indicates that the peak values are currently sorted in the direction of the button arrow. If the sort button is not filled () , then the peak values are sorted in the opposite direction of the button arrow. The **Max Num of Peaks** parameter still controls the number of peaks listed.

Use the check boxes to control which peak values are shown on the display. By default, all check boxes are cleared and the **Peak Finder** panel hides all the peak values. To show all the peak values on the display, select the check box in the top-left corner of the **Peaks** pane. To hide all the peak values on the display, clear this check box. To show an individual peak, select the check box directly to the left of its **Value** listing. To hide an individual peak, clear the check box directly to the left of its **Value** listing.

The Peaks are valid for any units of the input signal. The letter after the value associated with each measurement indicates the abbreviation for the appropriate International System of Units (SI) prefix, such as *m* for *milli*-. For example, if the input signal is measured in volts, an *m* next to a measurement value indicates that this value is in units of millivolts.

Abbreviation	Name	Multiplier
a	atto	$10^{-18}$
f	femto	$10^{-15}$
p	pico	$10^{-12}$
n	nano	$10^{-9}$
u	micro	$10^{-6}$
m	milli	$10^{-3}$
		$10^0$
k	kilo	$10^3$
M	mega	$10^6$
G	giga	$10^9$
T	tera	$10^{12}$
P	peta	$10^{15}$
E	exa	$10^{18}$

# Time Scope


## Configuration Properties Dialog Box

The Configuration Properties dialog box controls various properties about the Time Scope displays. From the Time Scope menu, select **View > Configuration Properties** to open this dialog box. Alternatively, in the Time Scope toolbar, click the Configuration

Properties  button.

### Main Pane

The **Main** pane of the Configuration Properties dialog box appears as follows.

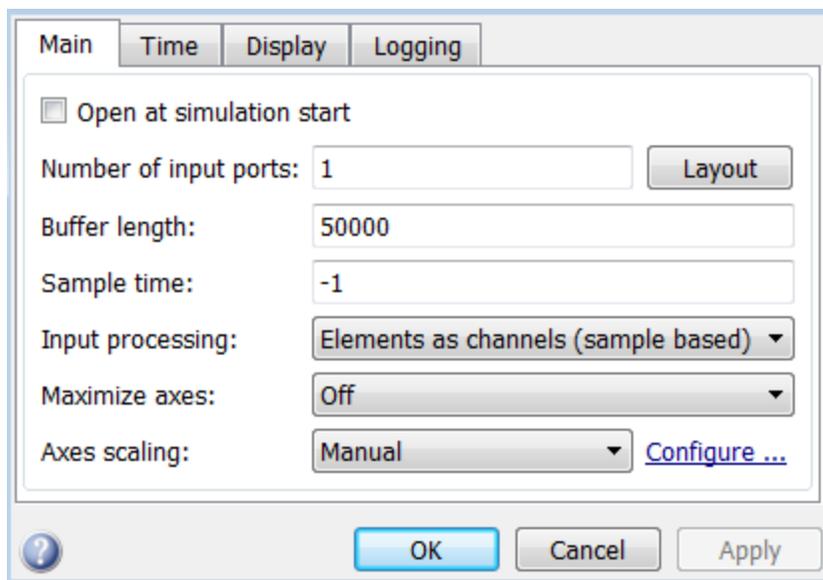

### Open at simulation start

Select this check box to ensure that the scope opens when the simulation starts. The following table summarizes the interaction between the **Open at simulation start** check box and the Scope figure.

Open at simulation start	Scope figure status when	Scope figure opens
Checked	Closed	At simulation start
Checked	Open	At model loading
Not checked	Closed	Only if you double-click the Scope block icon in the model
Not checked	Open	At model loading

### Number of input ports

Specify the number of input ports that should appear on the left side of the scope block.

### Layout

Specify the arrangement of scope displays in the scope window. The display highlighted in blue is referred to as the *active display*. The scope dialog boxes reference the active display.

### Buffer length

Specify the size of the buffer that the scope holds in its memory cache. If your signal has  $M$  rows of data and  $N$  data points in each row,  $M \times N$  is the number of data points per time step. Multiply this result by the number of time steps for your model to obtain the required buffer length. For example, if you have 10 rows of data with each row having 100 data points and your run will be 10 time steps, you should enter 10,000 (which is  $10 \times 100 \times 10$ ) as the buffer length.

The default setting is 50000.

### Sample time

Specify the sampling time in seconds. If you enter -1, the sample time of the input signal is used.

### Input processing

Specify whether the Time Scope should treat the input signal as Columns as channels (frame based) or Elements as channels (sample based).

# Time Scope

---

Frame-based processing is only available for discrete input signals. For more information about frame-based input channels, see the “What Is Frame-Based Processing?” section in the DSP System Toolbox documentation. For an example that uses the Time Scope block and frame-based input signals, see the “Display Time-Domain Data” section in the DSP System Toolbox documentation.

## **Maximize axes**

Specify whether to display the scope in maximized axes mode. In this mode, each of the axes is expanded to fit into the entire display. To conserve space, labels do not appear in each display. Instead, tick-mark values appear on top of the plotted data. You can select one of the following options:

- **Auto** — In this mode, the axes appear maximized in all displays only if the **Title** and **YLabel** properties are empty for every display. If you enter any value in any display for either of these properties, the axes are not maximized.
- **On** — In this mode, the axes appear maximized in all displays. Any values entered into the **Title** and **YLabel** properties are hidden.
- **Off** — In this mode, none of the axes appear maximized.

This property is Tunable.

The default setting is Auto.

## **Axes scaling**

Specify when the scope should automatically scale the axes. You can select one of the following options:

- **Manual** — When you select this option, the scope does not automatically scale the axes. You can manually scale the axes in any of the following ways:
  - Select **Tools > Axes Scaling Properties**.
  - Press one of the **Scale Axis Limits** toolbar buttons.

- When the scope figure is the active window, press **Ctrl** and **A** simultaneously.
- **Auto** — When you select this option, the scope scales the axes as needed, both during and after simulation. Selecting this option shows the **Do not allow Y-axis limits to shrink** check box.
- **After N Updates** — Selecting this option causes the scope to scale the axes after a specified number of updates. Selecting this option shows the **Number of updates** edit box.

By default, this property is set to Auto. This property is Tunable.

---

**Note** Click the link labeled **Configure** to the right of the **Axes scaling** property to see additional axes scaling properties. After you click this button, its label changes to **Hide**. To hide these additional properties, click the **Hide** link.

---

### **Scale axes limits at stop**

Select this check box to scale the axes when the simulation stops. The *y*-axis is always scaled. The *x*-axis limits are only scaled if you also select the **Scale X-axis limits** check box.

### **Do not allow Y-axis limits to shrink**

When you select this property, the *y*-axis is allowed only to grow during axes scaling operations. If you clear this check box, the *y*-axis or color limits may shrink during axes scaling operations.

This property appears only when you select **Auto** for the **Axis scaling** property. When you set the **Axes scaling** property to **Manual** or **After N Updates**, the *y*-axis or color limits are allowed to shrink. Tunable.

### **Y-axis Data range (%)**

Set the percentage of the *y*-axis that the scope should use to display the data when scaling the axes. Valid values are between 1 and 100. For example, if you set this property to 100, the Scope scales the *y*-axis limits such that your data uses the entire *y*-axis range. If you then set

# Time Scope

---

this property to 30, the scope increases the *y*-axis range such that your data uses only 30% of the *y*-axis range. Tunable.

## **Y-axis Align**

Specify where the scope should align your data with respect to the *y*-axis when it scales the axes. You can select **Top**, **Center**, or **Bottom**. Tunable.

## **Autoscale X-axis limits**

Check this box to allow the scope to scale the *x*-axis limits when it scales the axes. If **Axes scaling** is set to **Auto**, checking **Scale X-axis limits** only scales the data currently within the axes, not the entire signal in the data buffer. Tunable.

## **X-axis Data range (%)**

Set the percentage of the *x*-axis that the Scope should use to display the data when scaling the axes. Valid values are between 1 and 100. For example, if you set this property to 100, the Scope scales the *x*-axis limits such that your data uses the entire *x*-axis range. If you then set this property to 30, the Scope increases the *x*-axis range such that your data uses only 30% of the *x*-axis range. Use the *x*-axis **Align** property to specify data placement with respect to the *x*-axis.


This property appears only when you select the **Scale X-axis limits** check box. Tunable.

## **X-axis Align**

Specify how the Scope should align your data with respect to the *x*-axis: **Left**, **Center**, or **Right**. This property appears only when you select the **Scale X-axis limits** check box. Tunable.

## **Time Pane**

The **Time** pane of the Configuration Properties dialog box appears as follows.

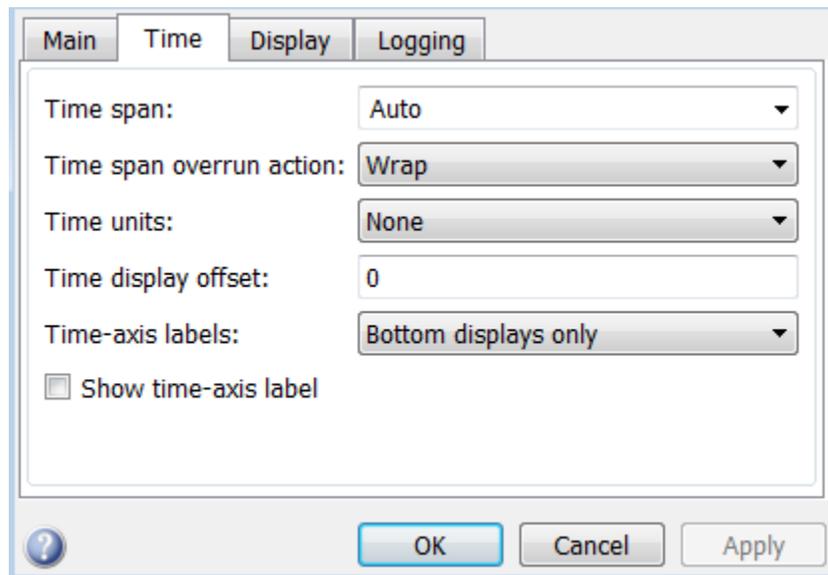

## Time span

Specify the time span, either by selecting a predefined option or by entering a numeric value in seconds. You can select one of the following options:

- Auto — In this mode, Time Scope automatically calculates the appropriate value for time span.

The Time Scope block calculates the minimum and maximum *time-axis* limits as follows:


- Minimum *time-axis* limit = Simulation “Start time”
- Maximum *time-axis* limit = Simulation “Stop time” +  $\max(\text{FrameRate} * (\text{FrameSize}-1) / \text{FrameSize})$

*FrameSize* is a vector equal to the number of rows in each input signal. *FrameRate* is the reciprocal of the sample time for each frame. The Time Scope System object calculates the minimum and maximum *time-axis* limits as follows:

# Time Scope

- Minimum *time*-axis limit =  $\min(\text{TimeDisplayOffset})$
- Maximum *time*-axis limit =  $\max(\text{TimeDisplayOffset}) + \max(1/\text{SampleRate} * \text{FrameSize})$   
where `TimeDisplayOffset` and `SampleRate` are the values of their respective properties. This property is Tunable.
- One frame period — In this mode, the Time Scope uses the frame period of the input signal to the Time Scope block. This option is only available when the **Input processing** parameter is set to **Columns as channels (frame based)**. This option is not available when you set the **Input processing** parameter to **Elements as channels (sample based)**.
- <user defined> — In this mode, you specify the time span by replacing the text <user defined> with a numeric value in seconds.

The scope sets the *time*-axis limits using the value of this property and the value of the **Time display offset** property. For example, if you set the **Time display offset** to  $5e-6$  and the **Time span** to  $25e-6$ , the scope sets the *time*-axis limits as shown in the following figure.

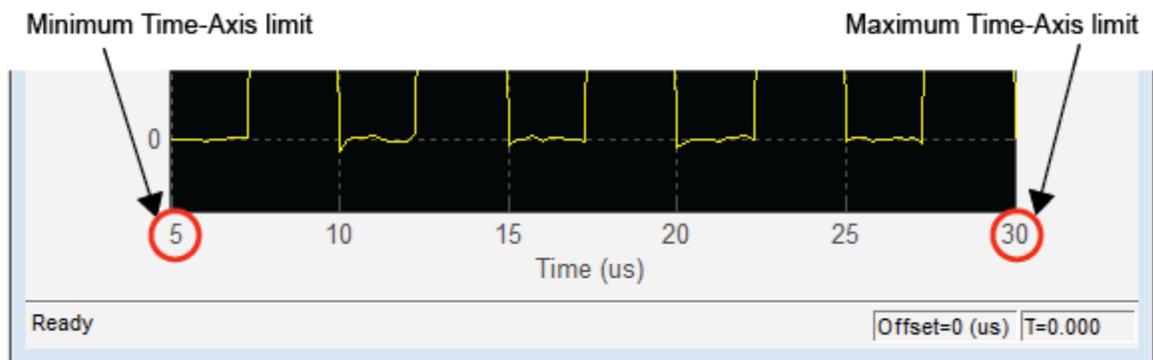

This property is Tunable.

### Time span overrun action

Specify how the scope displays new data beyond the visible time span. You can select one of the following options:

- **Wrap** — In this mode, the scope displays new data until the data reaches the maximum *time*-axis limit. When the data reaches the maximum *time*-axis limit of the scope window, the scope clears the display. The scope then updates the time offset value and begins displaying subsequent data points starting from the minimum *time*-axis limit.
- **Scroll** — In this mode, the scope scrolls old data to the left to make room for new data on the right side of the scope display. This mode is graphically intensive and can affect run-time performance. However, it is beneficial for debugging and monitoring time-varying signals.

This property is Tunable.

The default setting is **Wrap**.

## **Time units**

Specify the units used to describe the *time*-axis. You can select one of the following options:

- **Metric** — In this mode, the scope converts the times on the *time*-axis to the most appropriate measurement units. These can include milliseconds, microseconds, nanoseconds, minutes, days, etc. The scope chooses the appropriate measurement units based on the minimum *time*-axis limit and the maximum *time*-axis limit of the scope window.
- **Seconds** — In this mode, the scope always displays the units on the *time*-axis as seconds.
- **None** — In this mode, the scope does not display any units on the *time*-axis. The scope only shows the word **Time** on the *time*-axis.

This property is Tunable.

The default setting is **Metric**.

## **Time display offset**

This property allows you to offset the values displayed on the *time*-axis by a specified number of seconds. When you specify a scalar value, the


# Time Scope

scope offsets all channels equally. When you specify a vector of offset values, the scope offsets each channel independently. Tunable.

When you specify a **Time display offset** vector of length  $N$ , the scope offsets the input channels as follows:

- When  $N$  is equal to the number of input channels, the scope offsets each channel according to its corresponding value in the offset vector.
- When  $N$  is less than the number of input channels, the scope applies the values you specify in the offset vector to the first  $N$  input channels. The scope does not offset the remaining channels.
- When  $N$  is greater than the number of input channels, the scope offsets each input channel according to the corresponding value in the offset vector. The scope ignores all values in the offset vector that do not correspond to a channel of the input.

The scope computes the *time*-axis range using the values of the **Time display offset** and **Time span** properties. For example, if you set the **Time display offset** to  $5e-6$  and the **Time span** to  $25e-6$ , the scope sets the *time*-axis limits as shown in the following figure.

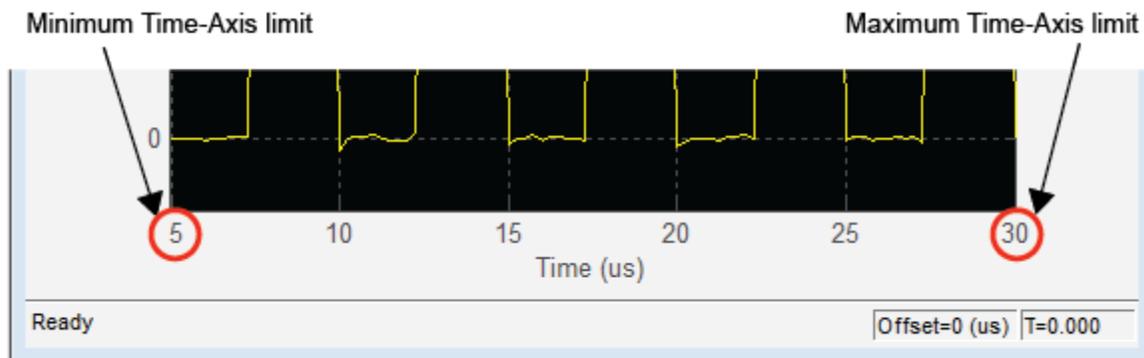

Similarly, when you specify a vector of values, the scope sets the minimum *time*-axis limit using the smallest value in the vector. To set the maximum *time*-axis limit, the scope sums the largest value in the

vector with the value of the **Time span** property. For more information, see “Signal Display” on page 1-1820.

## **Time-axis labels**

Specify how to display the time units used to describe the *time*-axis. The default setting is All. You can select one of the following options:

- All — The *time*-axis labels appear in all displays.
- None — The *time*-axis labels do not appear in the displays.
- Bottom Displays Only — The *time*-axis labels appear in only the bottom row of the displays.

Tunable.

## **Show time-axis label**


Select this check box to show the time-axis label on the scope display. This check box is not available if **Time-axis labels** is None.

## **Display Pane**

The **Display** pane of the Configuration Properties dialog box appears as follows.

# Time Scope

---

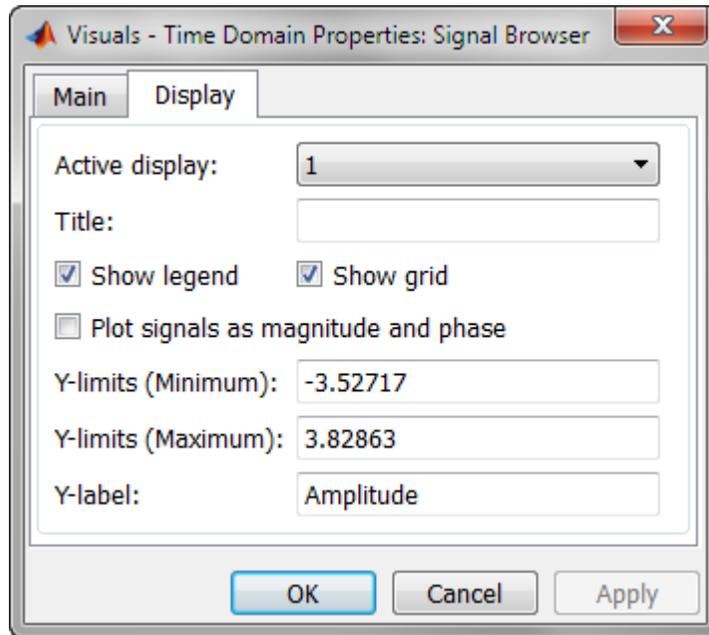

## Active display

Specify the active display as an integer to get and set relevant properties. The number of a display corresponds to its column-wise placement index. Set this property to control which display should have its axes colors, line properties, marker properties, and visibility changed. Tunable

When you use the Layout option to tile the window into multiple displays, the display highlighted in blue is referred to as the *active display*. The default setting is 1.

## Title

Specify the active display title as a string. Enter %<SignalLabel> to use the signal labels in the Simulink Model as the axes titles. By default, the active display has no title. Tunable.

## **Show legend**

Select this check box to show the legend in the display. The channel legend displays a name for each channel of each input signal. When the legend appears, you can place it anywhere inside of the scope window. To turn the legend off, clear the **Show legend** check box. This parameter applies only when the Spectrum **Type** is Power or Power density. Tunable

You can edit the name of any channel in the legend. To do so, double-click the current name, and enter a new channel name. By default, the scope names each channel according to either its signal name or the name of the block from which it comes. If the signal has multiple channels, the scope uses an index number to identify each channel of that signal.

To change the appearance of any channel of any input signal in the scope window, from the menu, select **View > Style**.


## **Show grid**

When you select this check box, a grid appears in the display of the scope figure. To hide the grid, clear this check box. Tunable


## **Plot signals as magnitude and phase**

When you select this check box, the scope splits the display into a magnitude plot and a phase plot. By default, this check box is cleared. If the input signal is complex valued, the scope plots the real and imaginary portions on the same axes. These real and imaginary portions appear as different-colored lines on the same axes, as shown in the following figure.

# Time Scope

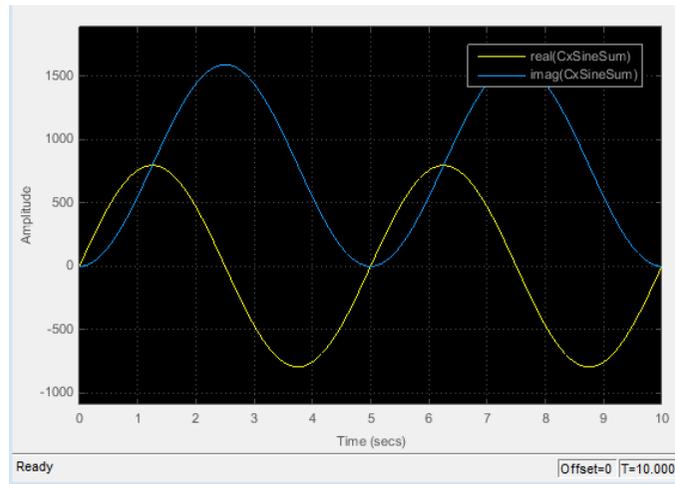

Selecting this check box and clicking the **Apply** or **OK** button changes the display. The magnitude of the input signal appears on the top axes and its phase, in degrees, appears on the bottom axes. See the following figure.

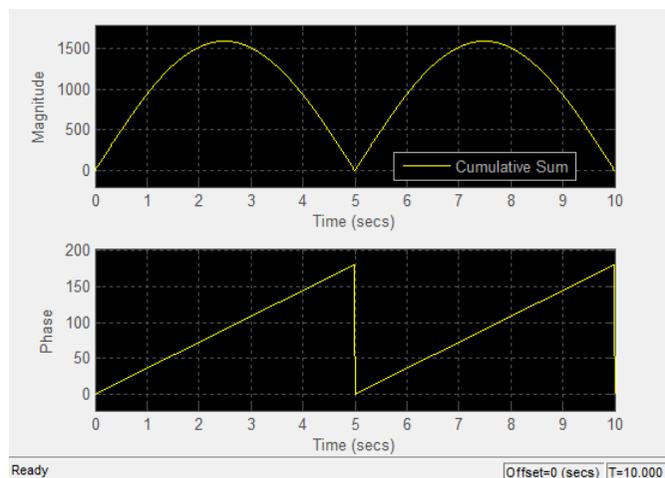

This feature is particularly useful for complex-valued input signals. If the input is a real-valued signal, selecting this check box returns the

absolute value of the signal for the magnitude. The phase is 0 degrees for nonnegative input and 180 degrees for negative input. Tunable

### **Y-limits (Minimum)**

Specify the minimum value of the  $y$ -axis. Tunable

When you select the **Plot signal(s) as magnitude and phase** check box, the value of this property always applies to the magnitude plot on the top axes. The phase plot on the bottom axes is always limited to a minimum value of -180 degrees.

### **Y-limits (Maximum)**

Specify the maximum value of the  $y$ -axis. Tunable

When you select the **Plot signal(s) as magnitude and phase** check box, the value of this property always applies to the magnitude plot on the top axes. The phase plot on the bottom axes is always limited to a maximum value of 180 degrees.

### **Y-label**


Specify as a string the text for the scope to display to the left of the  $y$ -axis. Tunable

This property becomes invisible when you select the **Plot signal(s) as magnitude and phase** check box. When you enable that property, the  $y$ -axis label always appears as **Magnitude** on the top axes and **Phase** on the bottom axes.

### **Logging Pane**

The **Logging** pane of the Configuration Properties dialog box appears as follows.

# Time Scope

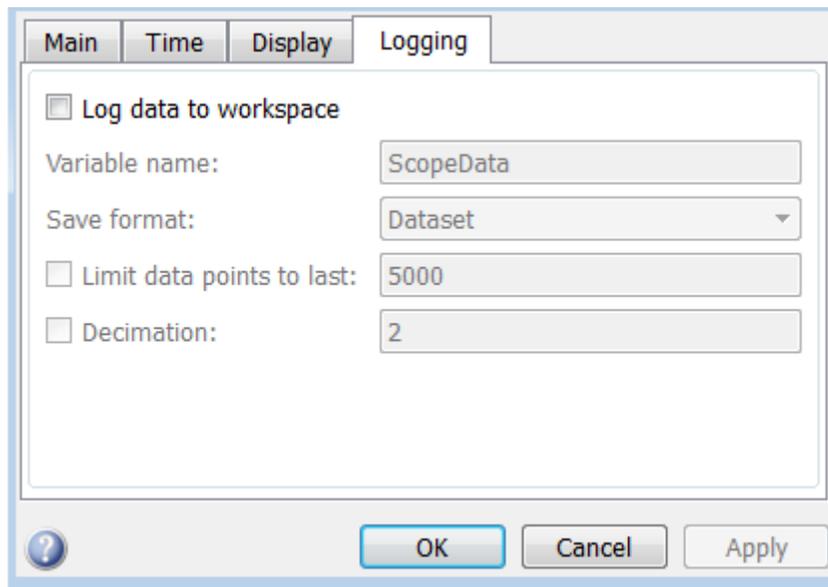

## Log data to workspace

When you select this check box, the scope logs data in the format you select in **Save format**.

The default setting is unchecked and no data is logged.

## Variable name

Specify as a string the name of the variable in the MATLAB workspace to which the scope logs data. Any existing variable is overwritten.

## Save format

Select the format in which to save logged data. Unless otherwise noted, you can save logged data for single- and multi-port data, sample-based and frame-based data, variable-size data, MAT-file logging, and external mode archiving. Valid values for **Save format** are:

- **Structure With Time** — Save logged data as a structure with associated time information to the MATLAB workspace. **Structure With Time** format does not support single- or multi-port frame-based data.

- **Structure** — Save logged data as a structure to the MATLAB workspace. Structure format does not support multi-port, frame-based data.
- **Array** — Save logged data as an array with associated time information to the MATLAB workspace. Array format does not support multi-port sample-based data, single- or multi-port frame-based data, or variable-size data.
- **Dataset** — Save logged data as a dataset object to the MATLAB workspace. Dataset format does not support variable-size data, MAT-file logging, or external mode archiving. See `Simulink.SimulationData.Dataset` for information.

### Limit data points to last

When you select this check box, the scope limits the number of data points that it stores in a variable. Specify as a positive integer the number of data points at the end of the simulation data that the scope logs.

The default setting is unchecked, so that all data is logged. When checked, the default is the last 5000 data points.

### Decimation


When you select this check box, the scope logs every Nth data point, where N is the decimation factor you specify.

The default setting is unchecked, so that logged data is not decimated. When checked, the default decimation rate is 2.

## Style Dialog Box

In the **Style** dialog box, you can customize the style of displays. You can change the color of the figure containing the displays, the background and foreground colors of display axes, and properties of lines in a display. From the scope menu, select **View > Style** or select the Style button  in the dropdown below the Configuration Properties button to open this dialog box.

# Time Scope

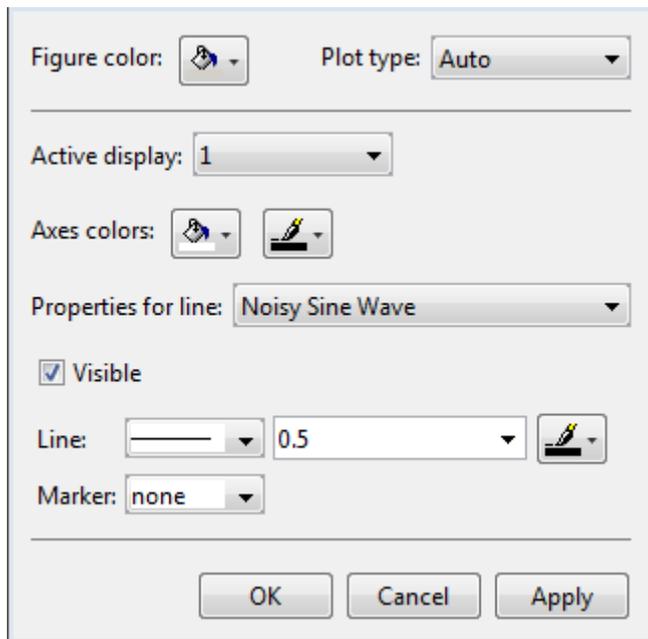

## Properties

The **Style** dialog box allows you to modify the following properties of the scope figure:

### Figure color

Specify the color that you want to apply to the background of the scope figure. By default, the figure color is gray.

### Plot type

Specify the type of plot to use. The default setting is **Line**. Valid values for **Plot type** are:

- **Line** — Displays input signal as lines connecting each of the sampled values. This approach is similar to the functionality of the MATLAB `line` or `plot` function.

- **Stairs** — Displays input signal as a *stairstep* graph. A stairstep graph is made up of only horizontal lines and vertical lines. Each horizontal line represents the signal value for a discrete sample period and is connected to two vertical lines. Each vertical line represents a change in values occurring at a sample. This approach is equivalent to the MATLAB `stairs` function. Stairstep graphs are useful for drawing time history graphs of digitally sampled data.
- **Auto** — Displays input signal as a line graph if it is a continuous signal and displays input signal as a stairstep graph if it is a discrete signal.

This property is Tunable.

### **Active display**

Specify the active display as an integer to get and set relevant properties. The number of a display corresponds to its column-wise placement index. Set this property to control which display should have its axes colors, line properties, marker properties, and visibility changed. Tunable

When you use the Layout option to tile the window into multiple displays, the display highlighted in blue is referred to as the *active display*. The default setting is 1.

### **Axes colors**

Specify the color that you want to apply to the background of the axes for the active display.

### **Properties for line**

Specify the signal for which you want to modify the visibility, line properties, and marker properties.

### **Visible**

Specify whether the selected signal on the active display should be visible. If you clear this check box, the line disappears.

### **Line**

Specify the line style, line width, and line color for the selected signal on the active display.

# Time Scope

---


## Marker

Specify marks for the selected signal on the active display to show at data points. This property is similar to the Marker property for the MATLAB Handle Graphics® plot objects. You can choose any of the marker symbols from the following table.

Specifier	Marker Type
none	No marker (default)
○	Circle
□	Square
×	Cross
•	Point
+	Plus sign
*	Asterisk
◇	Diamond
▽	Downward-pointing triangle
△	Upward-pointing triangle
◁	Left-pointing triangle
▷	Right-pointing triangle
☆	Five-pointed star (pentagram)
☆☆	Six-pointed star (hexagram)

## Stepping Options

The Simulation Stepping Options dialog box lets you control the simulation behavior. You can pause the simulation at a specified time, enable stepping back, or specify options for stepping back. You can also modify the number of steps by which to step forward or backward. To open this dialog box, in the Time Scope menu, select **Simulation > Stepping Options** to open this dialog box. Alternatively, if stepping back is disabled, in the Time Scope toolbar, click the step back  button.

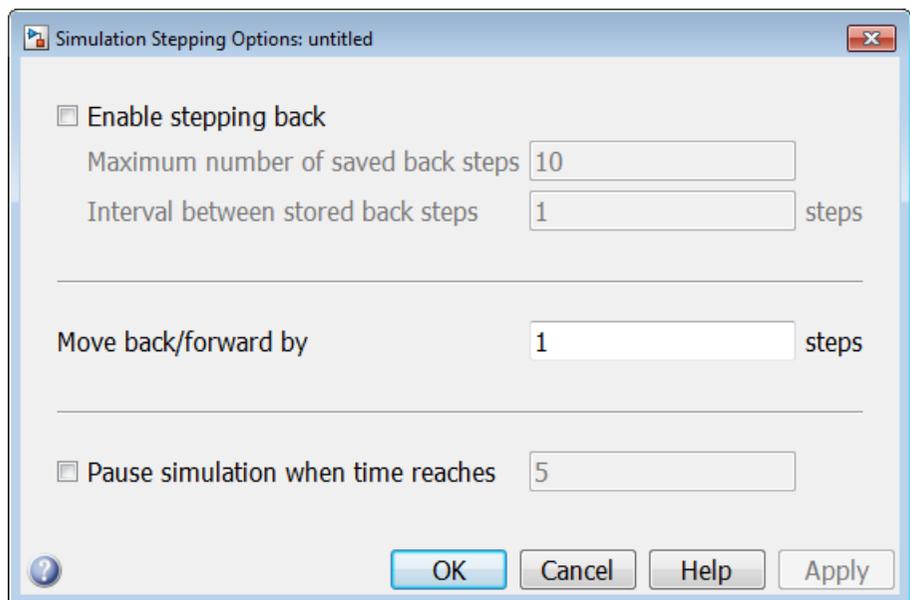

The Simulation Stepping Options dialog box is not unique to Time Scope; it can also be launched from any Simulink model. To open this dialog box from any Simulink model, select **Simulation > Stepping Options**. For more information, see “How Simulation Stepper Helps With Model Analysis” and “Simulation Stepping Options” in the Simulink documentation.

# Time Scope

---

## Enable stepping back

Select this check box to enable the Time Scope to take steps back in time. When selected, Time Scope enables the step back button () on the simulation toolbar.

## Maximum number of saved back steps

Specify the maximum number of back steps that the Time Scope saves in memory. To maximize simulation speed, the value for this property should be kept small. The default setting is 10.

## Interval between stored back steps

Specify the number of steps between back steps that the Time Scope saves in memory for stepping backward. Set this property to a larger number to increase the time span of a back step without increasing the amount of memory used. The default setting is 1.

## Move back/forward by

Specify the number of steps forward or backward that the Scope progresses when you click the step forward () and step back () buttons. The default setting is 1.

## Pause simulation when time reaches

Select this check box to enable the Scope to pause the simulation when it reaches a specified time.

## Pause simulation when time reaches


Specify the time at which you want Scope to pause when the check box is selected.

## Tools—Axes Scaling Properties

Select **Tools > Axes Scaling Properties** to open the Axes Scaling Properties dialog box. This dialog box provides you with the ability to automatically zoom in on and zoom out of your data, and to scale the axes of the Scope.

## Properties

The Tools—Axes Scaling Properties dialog box appears as follows.

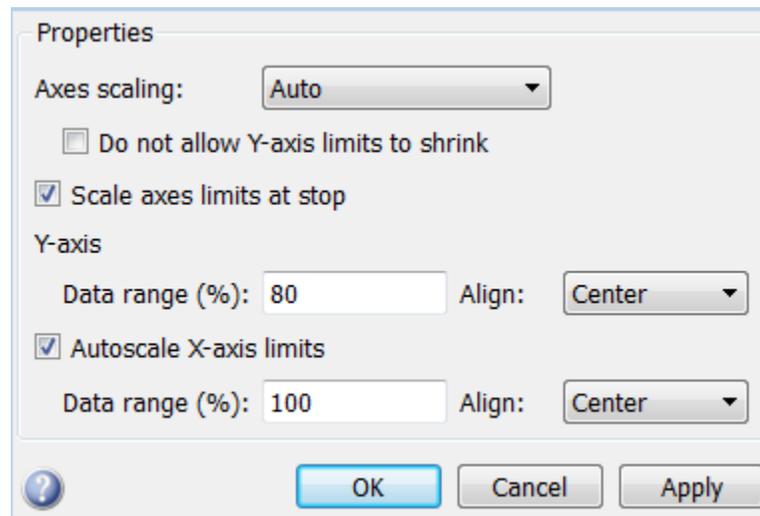

## Axes scaling

Specify when the scope should automatically scale the axes. You can select one of the following options:

- **Manual** — When you select this option, the scope does not automatically scale the axes. You can manually scale the axes in any of the following ways:
  - Select **Tools > Axes Scaling Properties**.
  - Press one of the **Scale Axis Limits** toolbar buttons.
  - When the scope figure is the active window, press **Ctrl** and **A** simultaneously.
- **Auto** — When you select this option, the scope scales the axes as needed, both during and after simulation. Selecting this option shows the **Do not allow Y-axis limits to shrink** check box.
- **After N Updates** — Selecting this option causes the scope to scale the axes after a specified number of updates. Selecting this option shows the **Number of updates** edit box.

# Time Scope

---

By default, this property is set to Auto. This property is Tunable.

## **Do not allow Y-axis limits to shrink**

When you select this property, the *y*-axis is allowed only to grow during axes scaling operations. If you clear this check box, the *y*-axis or color limits may shrink during axes scaling operations.

This property appears only when you select Auto for the **Axis scaling** property. When you set the **Axes scaling** property to Manual or After N Updates, the *y*-axis or color limits are allowed to shrink. Tunable.

## **Number of updates**

Specify as a positive integer the number of updates after which to scale the axes. This property appears only when you select After N Updates for the **Axes scaling** property. Tunable.

## **Scale axes limits at stop**

Select this check box to scale the axes when the simulation stops. The *y*-axis is always scaled. The *x*-axis limits are only scaled if you also select the **Scale X-axis limits** check box.

## **Y-axis Data range (%)**

Set the percentage of the *y*-axis that the scope should use to display the data when scaling the axes. Valid values are between 1 and 100. For example, if you set this property to 100, the Scope scales the *y*-axis limits such that your data uses the entire *y*-axis range. If you then set this property to 30, the scope increases the *y*-axis range such that your data uses only 30% of the *y*-axis range. Tunable.

## **Y-axis Align**

Specify where the scope should align your data with respect to the *y*-axis when it scales the axes. You can select Top, Center, or Bottom. Tunable.

## **Autoscale X-axis limits**

Check this box to allow the scope to scale the *x*-axis limits when it scales the axes. If **Axes scaling** is set to Auto, checking **Scale X-axis limits** only scales the data currently within the axes, not the entire signal in the data buffer. Tunable.

## X-axis Data range (%)

Set the percentage of the  $x$ -axis that the Scope should use to display the data when scaling the axes. Valid values are between 1 and 100. For example, if you set this property to 100, the Scope scales the  $x$ -axis limits such that your data uses the entire  $x$ -axis range. If you then set this property to 30, the Scope increases the  $x$ -axis range such that your data uses only 30% of the  $x$ -axis range. Use the  $x$ -axis **Align** property to specify data placement with respect to the  $x$ -axis.

This property appears only when you select the **Scale X-axis limits** check box. Tunable.

## X-axis Align

Specify how the Scope should align your data with respect to the  $x$ -axis: Left, Center, or Right. This property appears only when you select the **Scale X-axis limits** check box. Tunable.

## Supported Data Types

Port	Supported Data Types
Input	<ul style="list-style-type: none"> <li>• Double-precision floating point</li> <li>• Single-precision floating point</li> <li>• Fixed point (signed and unsigned)</li> <li>• Boolean</li> <li>• 8-, 16-, and 32-bit signed integers</li> <li>• 8-, 16-, and 32-bit unsigned integers</li> <li>• Simulink enumerations</li> </ul>

## Supported Simulation Modes

You can use the scope block in models running the following supported simulation modes.

Mode	Supported	Notes and Limitations
Normal	Yes	
Accelerator	Yes	

# Time Scope

Mode	Supported	Notes and Limitations
Rapid Accelerator	Yes	You can use Rapid Accelerator mode as a method to increase the execution speed of your Simulink model. Rapid Accelerator mode creates an executable that includes the solver and model methods. This executable resides outside MATLAB and Simulink. Rapid Accelerator mode uses External mode to communicate with Simulink. For more information about Rapid Accelerator mode, see “Acceleration” in the Simulink documentation.
PIL	No	
SIL	No	
External	Yes	<p>You can use External mode to tune block parameters in real time and view block outputs in many types of blocks and subsystems. External mode establishes communication between a host system, where the Simulink environment resides, and a target system, where the executable runs after it is generated by the code generation and build process. For more information about External mode, see “Host/Target Communication” in the Simulink Coder documentation.</p> <p>The scope does not support data archiving. See “Set External Mode Data Archiving Parameters” in the Real-Time Windows Target™ documentation.</p>

For more information about these modes, see “How Acceleration Modes Work” in the Simulink documentation.

**See Also**

Scope

**How To**

- “View Simulation Results”

# To File

---

**Purpose** Write data to file

**Library** Sinks

**Description** The To File block inputs a signal and writes the signal data to a MAT-file. Use the To File block to log signal data.



The To File block icon shows the name of the output file.

The block writes to the output file incrementally, with minimal memory overhead during simulation. If the output file exists when the simulation starts, the block overwrites the file. The file automatically closes when simulation is complete. If simulation terminates abnormally, the To File block saves the data it has logged up until the point of the abnormal termination.

## Specifying the Format for Writing Data

Use the **Save format** parameter to specify the format for writing data:

- Timeseries (default)
- Array

Use the Array format only for vector, double, noncomplex inputs. To save bus data, use the Timeseries format.

For the Timeseries format, the To File block:

- Writes data in a MATLAB timeseries object
- Supports writing multidimensional, real, or complex output values
- Supports writing output values that have any built-in data type, including Boolean, enumerated (enum), and fixed-point data with a word length of up to 32 bits
- For bus input signals, creates a MATLAB structure that matches the bus hierarchy. Each leaf of the structure is a MATLAB timeseries object.

For the Array format, the To File block:

- Writes data into a matrix containing two or more rows. The matrix has the following form:

$$\begin{bmatrix} t_1 & t_2 & \dots & t_{final} \\ u1_1 & u1_2 & \dots & u1_{final} \\ \dots & & & \\ un_1 & un_2 & \dots & un_{final} \end{bmatrix}$$

Simulink writes one column to the matrix for each data sample. The first element of the column contains the time stamp. The remainder of the column contains data for the corresponding output values.

- Supports writing data that is one-dimensional, double, and noncomplex.

The following table shows how simulation mode support depends on the **Save format** value.

Simulation Mode	Timeseries	Array
Normal	Supported.	Supported.
Accelerator	Supported.	Supported.
Rapid Accelerator	Not supported.	Supported.
Software-in-the-Loop (SIL)	Not supported.	Supported if MAT-file logging is enabled.
Processor-in-the-Loop (PIL)	Not supported.	Supported if MAT-file logging is available and enabled.
External	Not supported.	Supported if MAT-file logging is enabled.
Simulink Coder Targets	Not supported.	Supported if MAT-file logging is enabled.

## **Controlling When Data Is Written to the File**

The To File block **Decimation** and **Sample Time** parameters control when data is written to the file.

## **Saving Data for Use by a From File Block**

The From File block can use data written by a To File block in any format (**Timeseries** or **Array**) without any modifications to the data or other special provisions.

## **Saving Data for Use by a From Workspace Block**

The From Workspace block can read data that is in the **Array** format and is the transposition of the data written by the To File block. To provide the required format, use MATLAB commands to load and transpose the data from a MAT-file.

## **Simulation Stepper Interaction with To File Block**

If you pause using the Simulation Stepper, the To File block captures the simulation data up to the point of the pause. When you step back, the To File data file no longer contains any simulation data past the new reduced time of the last output.

## **Limitation of To File blocks in a Referenced Model**

When a To File block is in a referenced model, that model must be a single-instance model. Only one instance of such a model can exist in a model hierarchy. See “General Reusability Limitations” for more information.

## **Compressing MAT-File Data**

To avoid the overhead of compressing data in real time, the To File block writes an uncompressed Version 7.3 MAT-file. To compress the data within the MAT-file, load and save the file in MATLAB. The resaved file is smaller than the original MAT-file that the To File block created, because the **Save** command compresses the data in the MAT-file.

## **Saving Bus Data**

The To File block supports virtual and nonvirtual bus input.

To save bus data, set the **Save format** parameter to `Timeseries`.

If the input signal is a bus, then the To File block creates a MATLAB structure that matches the bus hierarchy. Each leaf of the structure is a MATLAB `timeseries` object.

### **Pausing a Simulation**

After pausing a simulation, do not alter any file that a To File block logs into. For example, do not save such a file with the MATLAB `save` command. Altering the file can cause an error when you resume the simulation. If you want to alter the file after pausing, copy the file and work with the copied version of the file.


### **Data Type Support**

The To File block accepts real or complex signal data of any data type that Simulink supports, with the exception that the word length for fixed-point data must be 32 bits or less.

The To File block accepts bus data.

# To File

---

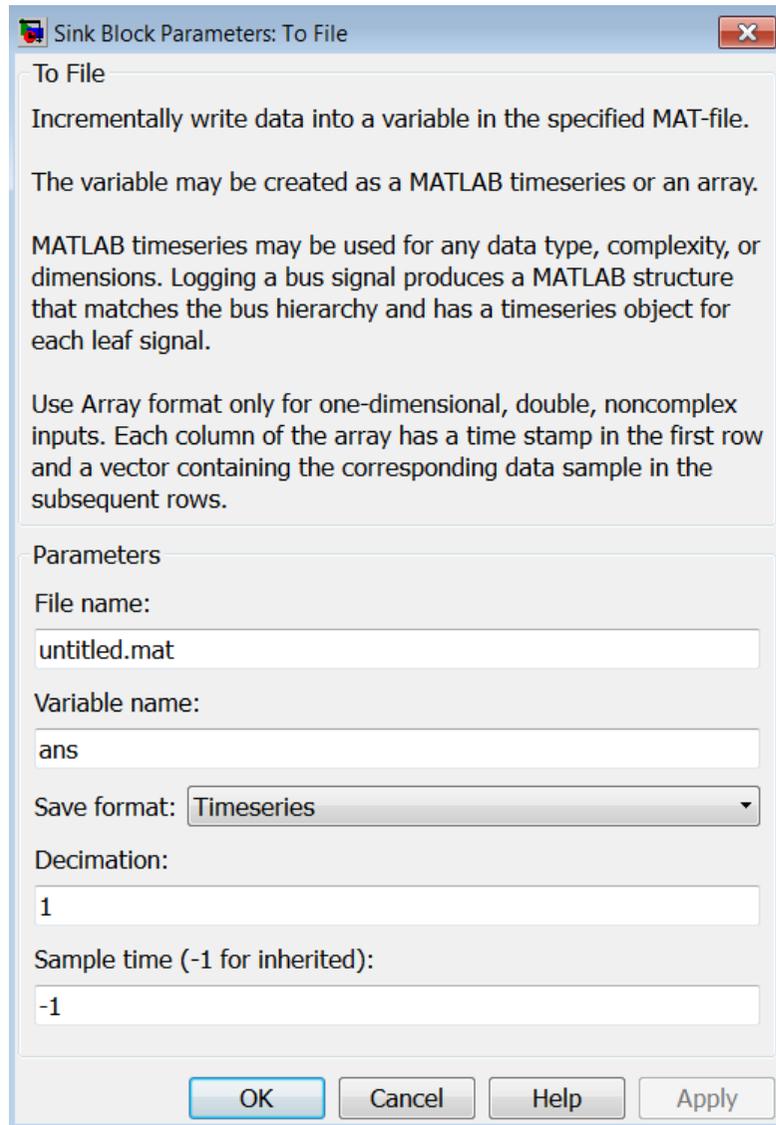

## Parameters

## and Dialog Box

### File name

The path or file name of the MAT-file in which to store the output. On UNIX systems, the pathname can start with a tilde (~) character signifying your home folder. The default file name is `untitled.mat`. If you specify a file name without path information, Simulink stores the file in the MATLAB working folder. (To determine the working folder, type `pwd` at the MATLAB command line.) If the file already exists, Simulink overwrites it.

### Variable name

The name of the matrix contained in the named file. The default name is `ans`.

### Save format

The data format that the To File block uses for writing data:

- Timeseries (default)
- Array

### Decimation

The decimation factor,  $n$ , where  $n$  specifies writing data at every  $n$ th time that the block executes. The default decimation is 1, which writes data at every time step.

### Sample time

Specifies the sample period and offset at which to collect points. This parameter is useful when you are using a variable-step solver where the interval between time steps might not be constant. The default is -1, which inherits the sample time from the driving block. See “Specify Sample Time” for more information.

# To File

---

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Dimensionalized	Yes

## See Also

“Export Runtime Information”, From File, From Workspace, To Workspace


## Purpose

Write data to MATLAB workspace

## Library

Sinks

## Description

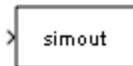

The To Workspace block inputs a signal and writes the signal data to the MATLAB workspace. During the simulation, the block writes data to an internal buffer. When the simulation is completed or paused, that data is written to the workspace. The block icon shows the name of the array to which the data is written.

To specify the name of the workspace variable to which the To Workspace block writes the data, use the **Variable name** parameter. To specify the data format of the variable, use the **Save format** parameter. You can specify to save the data in one of the following formats:

- A MATLAB `timeseries` object (or structure of MATLAB `timeseries` objects for bus data)
- An array
- Structure
- Structure with time

### Saving Data for Use by a From Workspace Block

To use a From Workspace block to play back the sample-based data that was saved by a To Workspace block in a previous simulation, in the To Workspace block, use the `Timeseries` or `Structure with time` format.

### Controlling the Amount of Data Saved

For variable-step solvers, to control the amount of data available to the To Workspace block, use the **Model Configuration Parameters > Data Import/Export > Output options** parameter. For example, to have Simulink write data at identical time points over multiple simulations, select the `Produce specified output only` option.

Then use To Workspace block parameters to control when and how much of this data the block writes:

# To Workspace

---

- Use the **Limit data points to last** parameter to specify how many sample points to save. If the simulation generates more data points than the specified maximum, the simulation saves only the most recently generated samples. To capture all the data, set this value to `inf`.
- Use the **Decimation** parameter to have the To Workspace block write data at every  $n$ th sample, where  $n$  is the decimation factor. The default decimation, 1, writes data at every time step.
- Use the **Sample time** parameter to specify a sampling interval at which to collect points. This parameter is useful when you are using a variable-step solver where the interval between time steps might not be the same. The default value of -1 causes the block to inherit the sample time from the driving block when determining the points to write. See “Specify Sample Time” in the online documentation for more information.

For example, suppose you have a simulation where the start time is 0, the **Limit data points to last** is 100, the **Decimation** is 1, and the **Sample time** is 0.5. The To Workspace block collects a maximum of 100 points, at time values of 0, 0.5, 1.0, 1.5, ..., seconds. Specifying a **Decimation** value of 1 directs the block to write data at each step.

In a similar example, the **Limit data points to last** is 100 and the **Sample time** is 0.5, but the **Decimation** is 5. In this example, the block collects up to 100 points, at time values of 0, 2.5, 5.0, 7.5, ..., seconds. Specifying a **Decimation** value of 5 directs the block to write data at every fifth sample. The sample time ensures that data is written at these points.

In another example, all parameters are as defined in the first example except that the **Limit data points to last** is 3. In this case, only the last three sample points collected are written to the workspace. If the simulation stop time is 100, data corresponds to times 99.0, 99.5, and 100.0 seconds (three points).

## **MAT-File Logging**

If you enable the **Model Configuration Parameters > Code Generation > Interface > MAT-file logging** parameter, then To Workspace logs its data to a MAT-file.

## **Frame-Based Signals**

By default, the To Workspace block treats input signals as sample-based.

To have the To Workspace block treat input signals as frame-based, set:

- 1 Save format** to either Array or Structure
- 2 Save 2-D signals as** to 2-D array (concatenating along first dimension) or 3-D array (concatenating along third dimension)


For examples of how these two settings store frame-based data, in the DSP System Toolbox documentation, see the Signal To Workspace block reference page. (These settings produce the same kind of results in the To Workspace block as they do in the Signal to Workspace block.)

## **Data Type Support**

The To Workspace block can save to the MATLAB workspace real or complex inputs of any data type that Simulink supports, including fixed-point and enumerated data types, as well as bus objects.

For more information, see “Data Types Supported by Simulink”.

# To Workspace

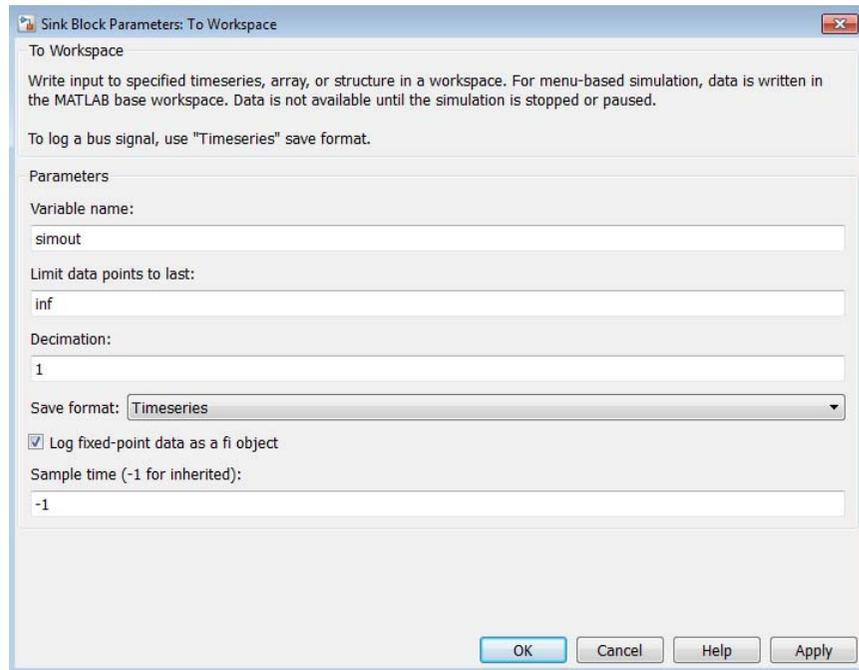

## Parameters and Dialog Box

### Variable name

Specify the name of the variable to which the software saves the data.

### Limit data points to last

Specify the maximum number of input samples to save. The default is `inf`.

### Decimation

Specify the decimation factor. The default is 1.

### Save format

Specify one of these formats for saving simulation output to the workspace:

- Timeseries (Default)

Save non-bus signal input as a MATLAB `timeseries` object and bus signal input as a structure of MATLAB `timeseries` objects.

- **Array**

Save the input as an N-dimensional array where N is one more than the number of dimensions of the input signal. For example, if the input signal is a vector, the resulting workspace array is two-dimensional. If the input signal is a matrix, then the array is three-dimensional.

How Simulink stores samples in the array depends on whether the input signal is a scalar or vector or a matrix. If the input is a scalar or a vector, each input sample is output as a row of the array. For example, suppose that the name of the output array is `simout`. Then, `simout(1,:)` corresponds to the first sample, `simout(2,:)` corresponds to the second sample, and so on. If the input signal is a matrix, the third dimension of the workspace array corresponds to the values of the input signal at specified sampling point. For example, suppose again that `simout` is the name of the resulting workspace array. Then, `simout(:, :, 1)` is the value of the input signal at the first sample point; `simout(:, :, 2)` is the value of the input signal at the second sample point; and so on.

If you select Array, the **Save 2-D signals** as parameter appears.

To treat input signals as frame-based, set **Save format** to either Array or Structure.

- **Structure**

This format consists of a structure with three fields:

- `time` — This field is empty for this format.
- `signals` — A structure with three fields: `values`, `dimensions`, and `label`. The `values` field contains the array of signal values. The `dimensions` field specifies the dimensions of the values array. The `label` field contains the label of the input line.
- `blockName` — Name of the To Workspace block

# To Workspace

---

If you select **Structure**, the **Save 2-D signals** parameter appears.

To treat input signals as frame-based, set **Save format** to either **Structure** or **Array**.

- **Structure With Time**

This format is the same as **Structure**, except that the time field contains a vector of simulation time steps.

To read To Workspace block output directly with a From Workspace block, use either the **Timeseries** or **Structure with Time** format. For details, see “Techniques for Importing Signal Data”.

**Structure with Time** format does not support frame-based signals. Use **Array** or **Structure** format instead.

The following table shows how simulation mode support depends on the **Save format** value.

<b>Simulation Mode</b>	<b>Timeseries</b>	<b>Array, Structure, or Structure With Time</b>
Normal	Supported.	Supported.
Accelerator	Supported.	Supported only in top model, not referenced models.
Rapid Accelerator	Not supported.	Supported only in top model, not referenced models.
Software-in-the-Loop (SIL)	Not supported.	If MAT-file logging is enabled, supported only in top model, not referenced models.
Processor-in-the-Loop (PIL)	Not supported.	If MAT-file logging is available and enabled, supported only in top model, not referenced models.

Simulation Mode	Timeseries	Array, Structure, or Structure With Time
External	Not supported.	Supported only in top model, not referenced models.
Simulink Coder Targets	Not supported.	If MAT-file logging is enabled, supported only in top model, not referenced models.

## Save 2-D signal as

If you set **Save format** to Array or Structure, the **Save 2-D signals as** parameter appears.

Specify one of these formats for saving 2-D signals to the workspace:

- 3-D array (concatenate along third dimension) (Default)

This setting is well-suited for sample-based signals. Data is concatenated along the third dimension. For example, 2-by-4 matrix input for 10 samples is stored as a 2x4x10 array.

- 2-D array (concatenate along first dimension)

This setting is well-suited for frame-based signals. The data is concatenated along the first dimension. For example, 2-by-4 matrix input for 10 samples is stored as a 20x4 array

- Inherit from input (this choice will be removed see release notes)

This setting is for backward compatibility. To configure this block to treat input signals as frame-based in future releases, set this to 2-D array (concatenate along first dimension) or 3-D array (concatenate along third dimension).

## Log fixed-point data as a fi object

By default, the To Workspace block logs fixed-point data to the MATLAB workspace as a Fixed-Point Designer `fi` object. If you clear this parameter, fixed-point data is logged to the workspace as `double`.

# To Workspace

---

## Sample time

Specify the sample period and offset at which to collect data. This parameter is useful when you are using a variable-step solver where the interval between time steps might not be constant. The default is -1, which inherits the sample time from the driving block. See “Specify Sample Time” for more information.

## Examples

The `aero_vibrati` example shows how to use the To Workspace block.

In the DSP System Toolbox documentation, the Signal To Workspace block reference page includes examples of handling frame-based data. (The To Workspace block handles frame-based data in a similar way as the Signal To Workspace block does.)

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Dimensionalized	Yes
Multidimensionalized	Yes


## See Also

“Data Export Basics”, From File, From Workspace, To File

**Purpose** Model linear system by transfer function

**Library** Continuous

## Description

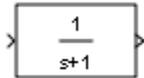

The Transfer Fcn block models a linear system by a transfer function of the Laplace-domain variable  $s$ . The block can model single-input single-output (SISO) and single-input multiple output (SIMO) systems.

### Conditions for Using This Block

The Transfer Fcn block assumes the following conditions:

- The transfer function has the form

$$H(s) = \frac{y(s)}{u(s)} = \frac{num(s)}{den(s)} = \frac{num(1)s^{nn-1} + num(2)s^{nn-2} + \dots + num(nn)}{den(1)s^{nd-1} + den(2)s^{nd-2} + \dots + den(nd)}$$

where  $u$  and  $y$  are the system input and outputs, respectively,  $nn$  and  $nd$  are the number of numerator and denominator coefficients, respectively.  $num(s)$  and  $den(s)$  contain the coefficients of the numerator and denominator in descending powers of  $s$ .

- The order of the denominator must be greater than or equal to the order of the numerator.
- For a multiple-output system, all transfer functions have the same denominator and all numerators have the same order.

### Modeling a Single-Output System

For a single-output system, the input and output of the block are scalar time-domain signals. To model this system:

- 1 Enter a vector for the numerator coefficients of the transfer function in the **Numerator coefficients** field.
- 2 Enter a vector for the denominator coefficients of the transfer function in the **Denominator coefficients** field.

## Modeling a Multiple-Output System

For a multiple-output system, the block input is a scalar and the output is a vector, where each element is an output of the system. To model this system:

- 1 Enter a matrix in the **Numerator coefficients** field.

Each *row* of this matrix contains the numerator coefficients of a transfer function that determines one of the block outputs.

- 2 Enter a vector of the denominator coefficients common to all transfer functions of the system in the **Denominator coefficients** field.

## Specifying Initial Conditions

A transfer function describes the relationship between input and output in Laplace (frequency) domain. Specifically, it is defined as the Laplace transform of the response (output) of a system with zero initial conditions to an impulse input.

Operations like multiplication and division of transfer functions rely on zero initial state. For example, you can decompose a single complicated transfer function into a series of simpler transfer functions. Apply them sequentially to get a response equivalent to that of the original transfer function. This will not be correct if one of the transfer functions assumes a non-zero initial state. Furthermore, a transfer function has infinitely many time domain realizations, most of whose states do not have any physical meaning.

For these reasons, Simulink presets the initial conditions of the Transfer Fcn block to zero. To specify initial conditions for a given transfer function, convert the transfer function to its controllable, canonical state-space realization using `tf2ss`. Then, use the State-Space block. The `tf2ss` utility provides the A, B, C, and D matrices for the system.


For more information, type `help tf2ss` or see the Control System Toolbox™ documentation.

## Transfer Function Display on the Block

The Transfer Fcn block displays the transfer function depending on how you specify the numerator and denominator parameters.

- If you specify each parameter as an expression or a vector, the block shows the transfer function with the specified coefficients and powers of  $s$ . If you specify a variable in parentheses, the block evaluates the variable.


For example, if you specify **Numerator coefficients** as  $[3,2,1]$  and **Denominator coefficients** as  $(den)$ , where  $den$  is  $[7,5,3,1]$ , the block looks like this:

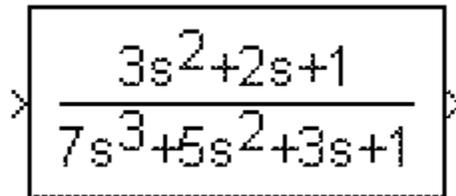

A rectangular block with a dashed border and arrowheads on the left and right sides. Inside the block, the transfer function is displayed as a fraction: the numerator is  $3s^2 + 2s + 1$  and the denominator is  $7s^3 + 5s^2 + 3s + 1$ .

- If you specify each parameter as a variable, the block shows the variable name followed by  $(s)$ .

For example, if you specify **Numerator coefficients** as  $num$  and **Denominator coefficients** as  $den$ , the block looks like this:

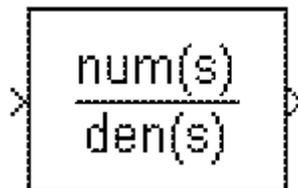


A rectangular block with a dashed border and arrowheads on the left and right sides. Inside the block, the transfer function is displayed as a fraction: the numerator is  $num(s)$  and the denominator is  $den(s)$ .

## Data Type Support

The Transfer Fcn block accepts and outputs signals of type double.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Transfer Fcn

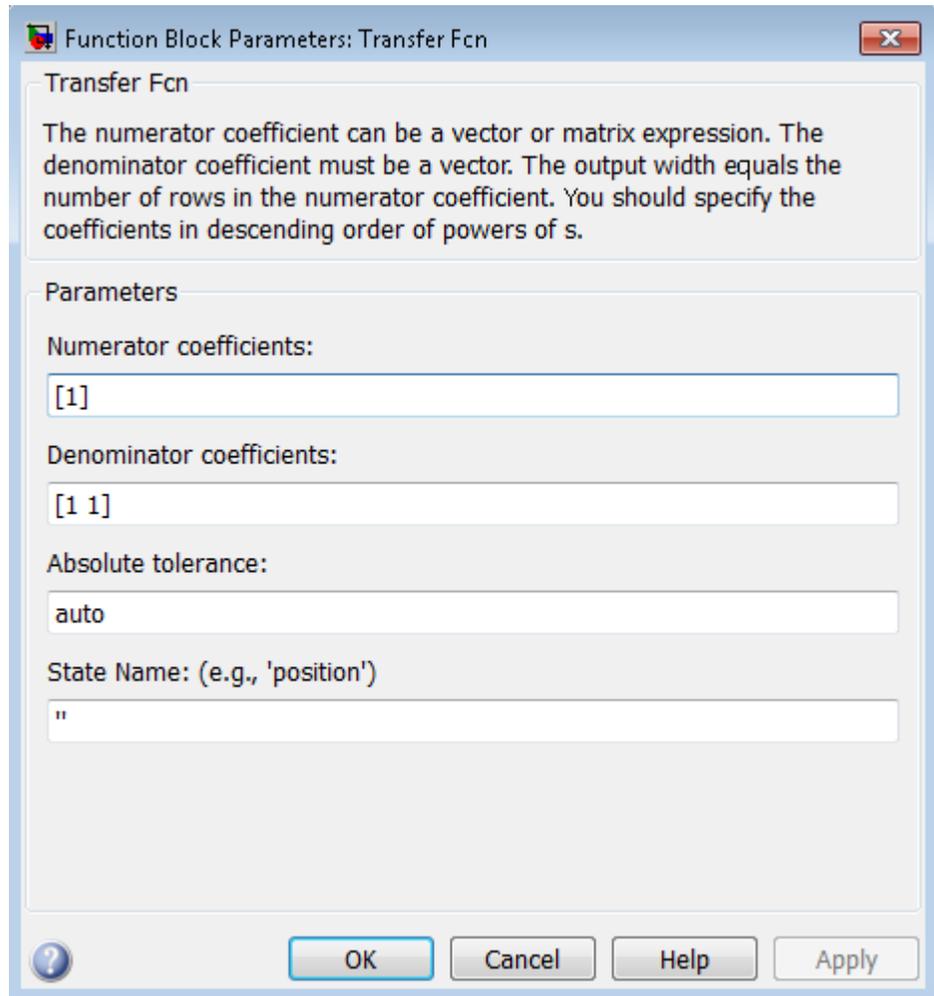

**Parameters  
and  
Dialog  
Box**

## Numerator coefficients

Define the row vector of numerator coefficients.

### Settings

**Default:** [1]

### Tips

- For a single-output system, enter a vector for the numerator coefficients of the transfer function.
- For a multiple-output system, enter a matrix. Each row of this matrix contains the numerator coefficients of a transfer function that determines one of the block outputs.

### Command-Line Information

**Parameter:** Numerator

**Type:** vector or matrix

**Value:** '[1]'

**Default:** '[1]'

### See Also

See the Transfer Fcn block reference page for more information.

# Transfer Fcn

---

## Denominator coefficients

Define the row vector of denominator coefficients.

### Settings

**Default:** [1 1]

### Tips

- For a single-output system, enter a vector for the denominator coefficients of the transfer function.
- For a multiple-output system, enter a vector containing the denominator coefficients common to all transfer functions of the system.

### Command-Line Information

**Parameter:** Denominator

**Type:** vector

**Value:** '[1 1]'

**Default:** '[1 1]'

## Absolute tolerance

Specify the absolute tolerance for computing block states.

### Settings

**Default:** auto

- You can enter `auto`, `-1`, a positive real scalar or vector.
- If you enter `auto` or `-1`, then Simulink uses the absolute tolerance value in the Configuration Parameters dialog box (see “Solver Pane”) to compute block states.
- If you enter a real scalar, then that value overrides the absolute tolerance in the Configuration Parameters dialog box for computing all block states.
- If you enter a real vector, then the dimension of that vector must match the dimension of the continuous states in the block. These values override the absolute tolerance in the Configuration Parameters dialog box.

### Command-Line Information

**Parameter:** `AbsoluteTolerance`

**Type:** string, scalar, or vector

**Value:** `'auto'` | `'-1'` | any positive real scalar or vector

**Default:** `'auto'`

# Transfer Fcn

---

## State Name (e.g., 'position')

Assign a unique name to each state.

### Settings

Default: ' '

If this field is blank, no name assignment occurs.

### Tips

- To assign a name to a single state, enter the name between quotes, for example, 'velocity'.
- To assign names to multiple states, enter a comma-delimited list surrounded by braces, for example, {'a', 'b', 'c'}. Each name must be unique.
- The state names apply only to the selected block.
- The number of states must divide evenly among the number of state names.
- You can specify fewer names than states, but you cannot specify more names than states.

For example, you can specify two names in a system with four states. The first name applies to the first two states and the second name to the last two states.

- To assign state names with a variable in the MATLAB workspace, enter the variable without quotes. A variable can be a string, cell array, or structure.

### Command-Line Information

**Parameter:** ContinuousStateAttributes

**Type:** string

**Value:** ' ' | user-defined

**Default:** ' '

## Examples

The following Simulink examples show how to use the Transfer Fcn block:

- `slexAircraftExample`
- `sldemo_absbrake`
- `penddemo`

## Characteristics

Direct Feedthrough	Only if the lengths of the <b>Numerator coefficients</b> and <b>Denominator coefficients</b> parameters are equal
Sample Time	Continuous
Scalar Expansion	No
States	Length of <b>Denominator coefficients</b> -1
Dimensionalized	Yes, the block expands scalar input into vector output when the transfer function numerator is a matrix.
Zero-Crossing Detection	No

## See Also

Discrete Transfer Fcn


# Transfer Fcn Direct Form II

---

**Purpose** Implement Direct Form II realization of transfer function

**Library** Additional Math & Discrete / Additional Discrete

## Description

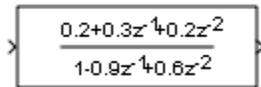
$$\frac{0.2+0.3z^{-1}+0.2z^{-2}}{1-0.9z^{-1}+0.6z^{-2}}$$

The Transfer Fcn Direct Form II block implements a Direct Form II realization of the transfer function that the **Numerator coefficients** and **Denominator coefficients excluding lead** parameters specify. The block supports only single input-single output (SISO) transfer functions.


The block automatically selects the data types and scalings of the output, the coefficients, and any temporary variables.

## Data Type Support

The Transfer Fcn Direct Form II block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

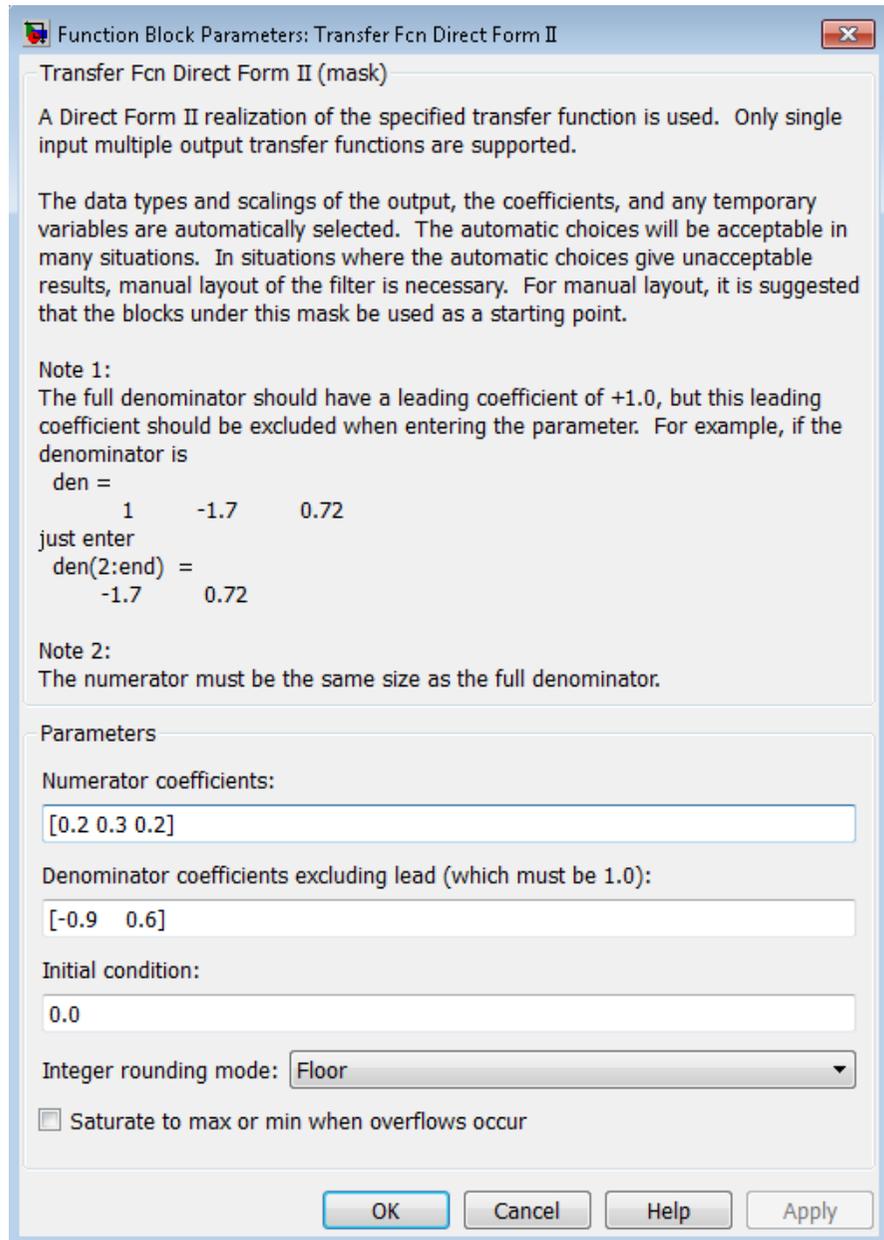

## Parameters and Dialog Box

### Numerator coefficients

Specify the numerator coefficients.

### Denominator coefficients excluding lead

Specify the denominator coefficients, excluding the leading coefficient, which must be 1.0.

# Transfer Fcn Direct Form II

---

## Initial condition

Set the initial condition.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate to max or min when overflows occur

Select to have overflows saturate to the maximum or minimum value that the data type can represent. Otherwise, overflows wrap.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes, of initial conditions
Multidimensionalized	No
Zero-Crossing Detection	No

## See Also


Transfer Fcn Direct Form II Time Varying

# Transfer Fcn Direct Form II Time Varying

**Purpose** Implement time varying Direct Form II realization of transfer function

**Library** Additional Math & Discrete / Additional Discrete

## Description

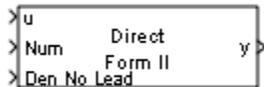

The Transfer Fcn Direct Form II Time Varying block implements a Direct Form II realization of the specified transfer function. The block supports only single input-single output (SISO) transfer functions.

The input signal labeled Den No Lead contains the denominator coefficients of the transfer function. The full denominator has a leading coefficient of one, but it is excluded from the input signal. For example, a denominator of  $[1 \ -1.7 \ 0.72]$  is represented by a signal with the value  $[-1.7 \ 0.72]$ . The input signal labeled Num contains the numerator coefficients. The data types of the numerator and denominator coefficients can be different, but the length of the numerator vector and the full denominator vector must be the same. Pad the numerator vector with zeros, if needed.

The block automatically selects the data types and scalings of the output, the coefficients, and any temporary variables.

## Data Type Support

The Transfer Fcn Direct Form II Time Varying block accepts signals of the following data types:


- Floating point
- Built-in integer
- Fixed point

# Transfer Fcn Direct Form II Time Varying

---

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Transfer Fcn Direct Form II Time Varying

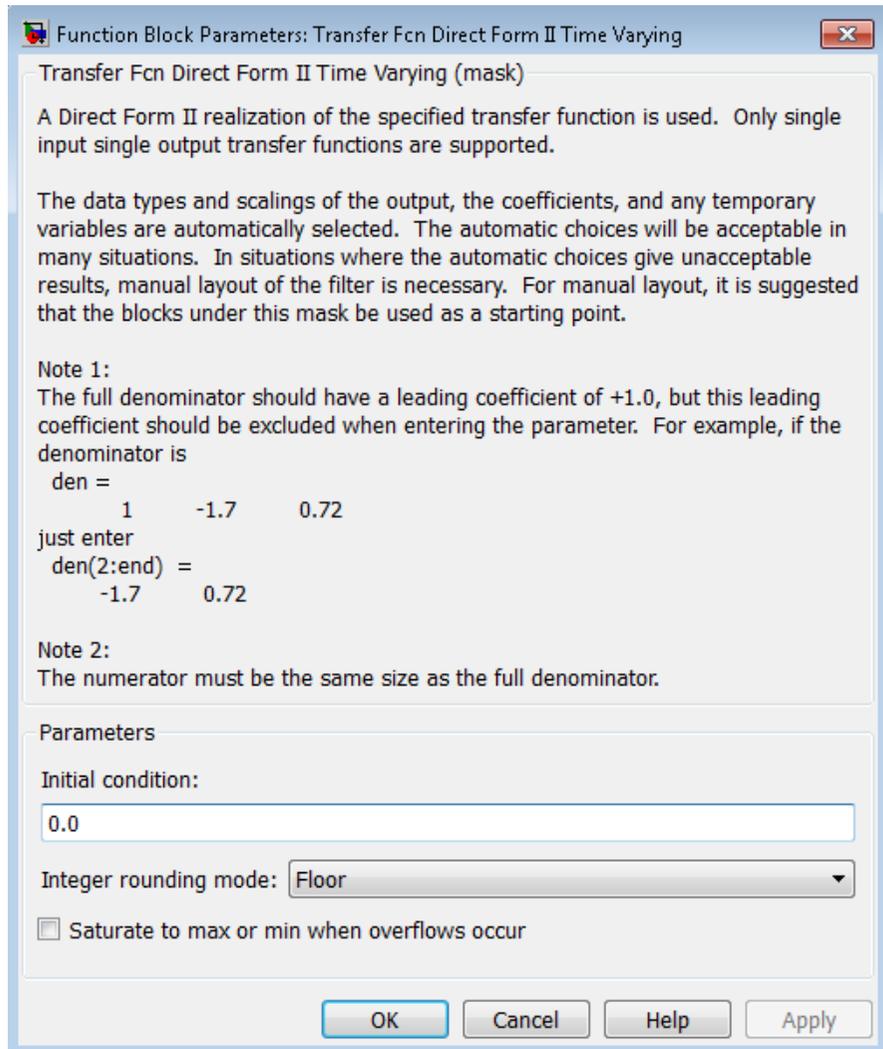

## Parameters and Dialog Box

### Initial condition

Set the initial condition.

# Transfer Fcn Direct Form II Time Varying

---

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate to max or min when overflows occur

Select to have overflows saturate to the maximum or minimum value that the data type can represent. Otherwise, overflows wrap.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes, of initial conditions
Multidimensionalized	No
Zero-Crossing Detection	No


## See Also

Transfer Fcn Direct Form II

**Purpose** Implement discrete-time first order transfer function

**Library** Discrete

**Description** The Transfer Fcn First Order block implements a discrete-time first order transfer function of the input. The transfer function has a unity DC gain.

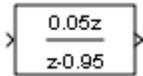


**Data Type Support** The Transfer Fcn First Order block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Transfer Fcn First Order

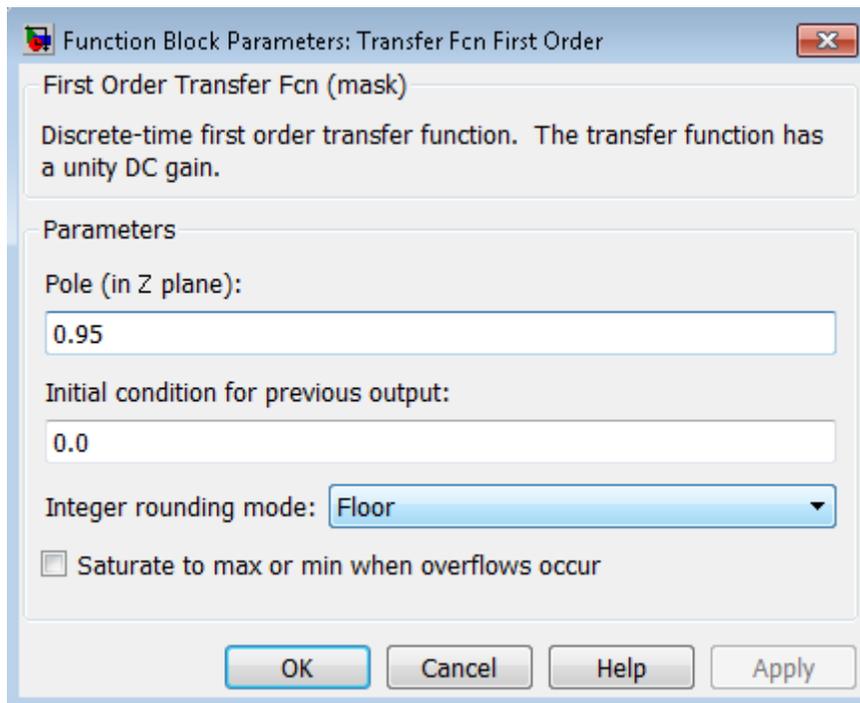

## Parameters and Dialog Box

### Pole (in Z plane)

Set the pole.

### Initial condition for previous output

Set the initial condition for the previous output.

### Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

### Saturate to max or min when overflows occur

Select to have overflows saturate to the maximum or minimum value that the data type can represent. Otherwise, overflows wrap.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes, of initial conditions
Zero-Crossing Detection	No


# Transfer Fcn Lead or Lag

---

**Purpose** Implement discrete-time lead or lag compensator

**Library** Discrete


**Description** The Transfer Fcn Lead or Lag block implements a discrete-time lead or lag compensator of the input. The instantaneous gain of the compensator is one, and the DC gain is equal to  $(1-z)/(1-p)$ , where  $z$  is the zero and  $p$  is the pole of the compensator.

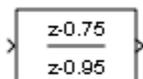

The block implements a lead compensator when  $0 < z < p < 1$ , and implements a lag compensator when  $0 < p < z < 1$ .

**Data Type Support** The Transfer Fcn Lead or Lag block accepts signals of any numeric data type that Simulink supports, including fixed-point data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

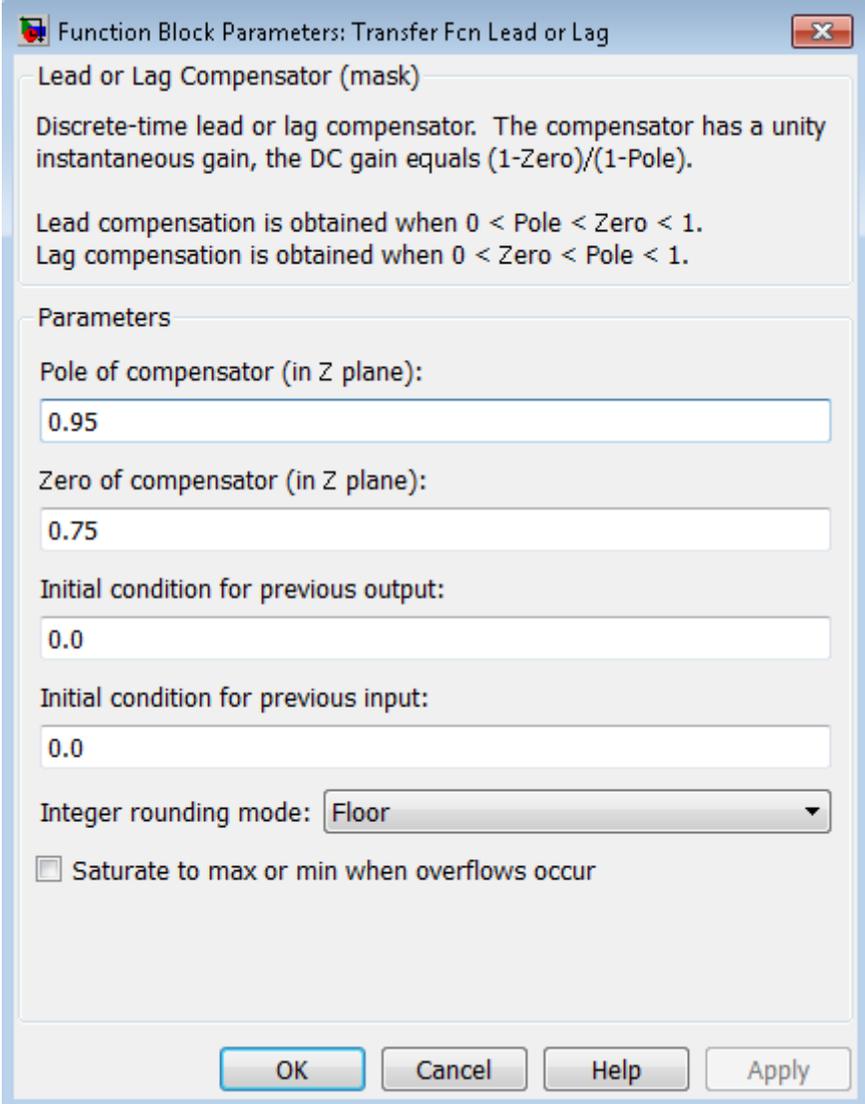

Function Block Parameters: Transfer Fcn Lead or Lag

Lead or Lag Compensator (mask)

Discrete-time lead or lag compensator. The compensator has a unity instantaneous gain, the DC gain equals  $(1-\text{Zero})/(1-\text{Pole})$ .

Lead compensation is obtained when  $0 < \text{Pole} < \text{Zero} < 1$ .  
Lag compensation is obtained when  $0 < \text{Zero} < \text{Pole} < 1$ .

Parameters

Pole of compensator (in Z plane):  
0.95

Zero of compensator (in Z plane):  
0.75

Initial condition for previous output:  
0.0

Initial condition for previous input:  
0.0

Integer rounding mode: Floor

Saturate to max or min when overflows occur

OK Cancel Help Apply

## Parameters

# Transfer Fcn Lead or Lag

---

## and Dialog Box

### **Pole of compensator (in Z plane)**

Set the pole.

### **Zero of compensator (in Z plane)**

Set the zero.

### **Initial condition for previous output**

Set the initial condition for the previous output.

### **Initial condition for previous input**

Set the initial condition for the previous input.

### **Integer rounding mode**

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

### **Saturate to max or min when overflows occur**

Select to have overflows saturate to the maximum or minimum value that the data type can represent. Otherwise, overflows wrap.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.


## **Characteristics**

Direct Feedthrough	Yes
Scalar Expansion	Yes, of initial conditions
Zero-Crossing Detection	No

**Purpose** Implement discrete-time transfer function that has real zero and no pole

**Library** Discrete


**Description** The Transfer Fcn Real Zero block implements a discrete-time transfer function that has a real zero and effectively no pole.

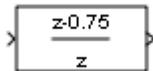

**Data Type Support** The Transfer Fcn Real Zero block accepts signals of any numeric data type that Simulink supports, including fixed-point data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Transfer Fcn Real Zero

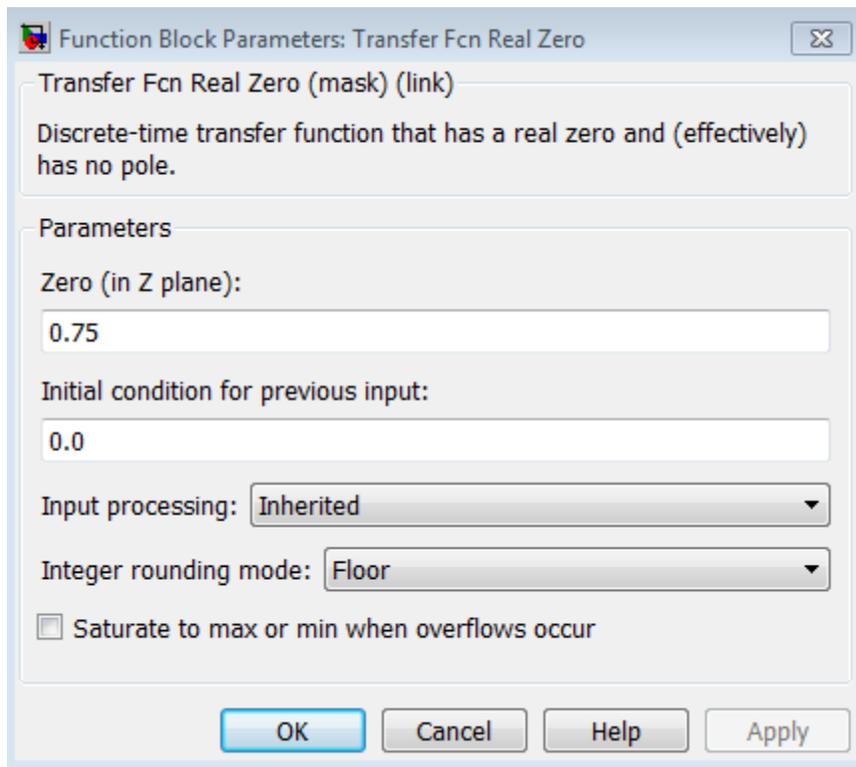

## Parameters and Dialog Box

### Zero (in Z plane)

Set the zero.

### Initial condition for previous input

Set the initial condition for the previous input.

### Input processing

Specify whether the block performs sample- or frame-based processing. You can select one of the following options:

- **Elements as channels (sample based)** — Treat each element of the input as a separate channel (sample-based processing).

- **Columns as channels (frame based)** — Treat each column of the input as a separate channel (frame-based processing).

---

**Note** Frame-based processing requires a DSP System Toolbox license.

For more information, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

---

- **Inherited** — Inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the **Inherited** option for the **Input processing** parameter, and the input signal is frame-based, Simulink will generate a warning or error in future releases.

---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input  $u$ . All other input signals must be sample based.

Input Signal $u$	Input Processing Mode	Block Works?
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes

# Transfer Fcn Real Zero

---

Input Signal $u$	Input Processing Mode	Block Works?
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate to max or min when overflows occur

Select to have overflows saturate to the maximum or minimum value that the data type can represent. Otherwise, overflows wrap.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes, of initial conditions
Zero-Crossing Detection	No

**Purpose** Delay input by given amount of time

**Library** Continuous

## Description



The Transport Delay block delays the input by a specified amount of time. You can use this block to simulate a time delay. The input to this block should be a continuous signal.

At the start of simulation, the block outputs the **Initial output** parameter until the simulation time exceeds the **Time delay** parameter. Then, the block begins generating the delayed input. During simulation, the block stores input points and simulation times in a buffer. You specify this size with the **Initial buffer size** parameter.

When you want output at a time that does not correspond to times of the stored input values, the block interpolates linearly between points. When the delay is smaller than the step size, the block extrapolates from the last output point, which can produce inaccurate results. Because the block does not have direct feedthrough, it cannot use the current input to calculate an output value. For example, consider a fixed-step simulation with a step size of 1 and the current time at  $t = 5$ . If the delay is 0.5, the block must generate a point at  $t = 4.5$ . Because the most recent stored time value is at  $t = 4$ , the block performs forward extrapolation.

The Transport Delay block does not interpolate discrete signals. Instead, the block returns the discrete value at the required time.

This block differs from the Unit Delay block, which delays and holds the output on sample hits only.

---

**Tip** Avoid using `linmod` to linearize a model that contains a Transport Delay block. For more information, see “Linearizing Models” in the Simulink documentation.

---


# Transport Delay

---

## **Data Type Support**

The Transport Delay block accepts and outputs real signals of type `double`.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

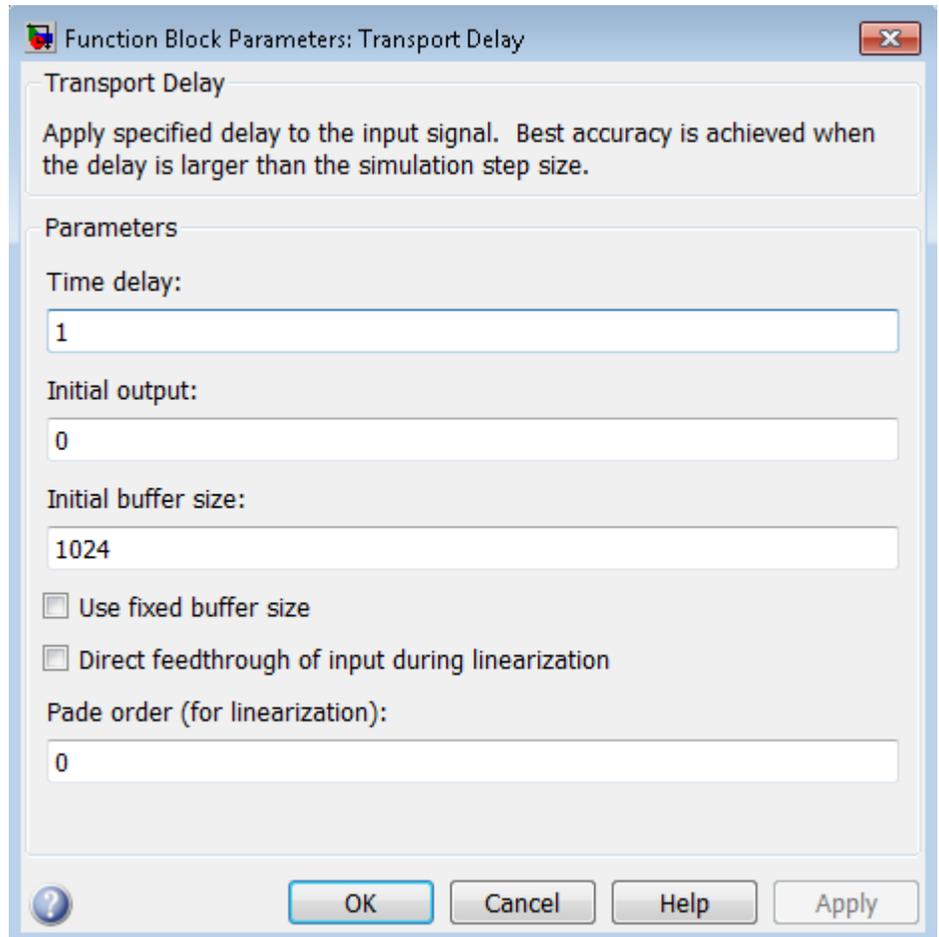

**Parameters  
and  
Dialog  
Box**

# Transport Delay

---

## **Time delay**

Specify the amount of simulation time to delay the input signal before propagation to the output.

### **Settings**

**Default:** 1

This value must be nonnegative.

### **Command-Line Information**

**Parameter:** DelayTime

**Type:** scalar or vector

**Value:** '1'

**Default:** '1'

## **Initial output**

Specify the output that the block generates until the simulation time first exceeds the time delay input.

## **Settings**

**Default:** Run-to-run tunable parameter

A Run-to-run tunable parameter cannot be changed during a simulation's run time. However, changing it before a simulation begins will not cause Accelerator or Rapid Accelerator to regenerate code.

Also, the initial output of this block cannot be `inf` or `NaN`.

## **Command-Line Information**

**Parameter:** InitialOutput

**Type:** scalar or vector

**Value:** '0'

**Default:** '0'

# Transport Delay

---

## **Initial buffer size**

Define the initial memory allocation for the number of input points to store.

## **Settings**

**Default:** 1024

- If the number of input points exceeds the initial buffer size, the block allocates additional memory.
- After simulation ends, a message shows the total buffer size needed.

## **Tips**

- Because allocating memory slows down simulation, choose this value carefully if simulation speed is an issue.
- For long time delays, this block can use a large amount of memory, particularly for dimensionalized input.

## **Command-Line Information**

**Parameter:** BufferSize

**Type:** scalar

**Value:** '1024'

**Default:** '1024'

## Use fixed buffer size

Specify use of a fixed-size buffer to save input data from previous time steps.

### Settings

**Default:** Off

On

The block uses a fixed-size buffer.

Off

The block does not use a fixed-size buffer.

The **Initial buffer size** parameter specifies the size of the buffer. If the buffer is full, new data replaces data already in the buffer. Simulink software uses linear extrapolation to estimate output values that are not in the buffer.

---

**Note** If you have a Simulink Coder license, ERT or GRT code generation uses a fixed-size buffer even if you do not select this check box.

---

### Tips

- If the input data is linear, selecting this check box can save memory.
- If the input data is nonlinear, do not select this check box. Doing so can yield inaccurate results.

### Command-Line Information

**Parameter:** FixedBuffer

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Transport Delay

---

## Direct feedthrough of input during linearization

Cause the block to output its input during linearization and trim, which sets the block mode to direct feedthrough.

### Settings

**Default:** Off

On  
Enables direct feedthrough of input.

Off  
Disables direct feedthrough of input.

### Tips

- Selecting this check box can cause a change in the ordering of states in the model when you use the functions `linmod`, `dlinmod`, or `trim`. To extract this new state ordering:

- 1 Compile the model using the following command, where `model` is the name of the Simulink model.

```
[sizes, x0, x_str] = model([],[],[],'lincompile');
```

- 2 Terminate the compilation with the following command.

```
model([],[],[],'term');
```

- The output argument `x_str`, which is a cell array of the states in the Simulink model, contains the new state ordering. When you pass a vector of states as input to the `linmod`, `dlinmod`, or `trim` functions, the state vector must use this new state ordering.

### Command-Line Information

**Parameter:** `TransDelayFeedthrough`

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## Pade order (for linearization)

Set the order of the Pade approximation for linearization routines.

### Settings

**Default:** 0

- The default value is 0, which results in a unity gain with no dynamic states.
- Setting the order to a positive integer  $n$  adds  $n$  states to your model, but results in a more accurate linear model of the transport delay.

### Command-Line Information

**Parameter:** PadeOrder

**Type:** string

**Value:** '0'

**Default:** '0'

## Characteristics

Direct Feedthrough	No
Sample Time	Continuous
Scalar Expansion	Yes, of input and all parameters except <b>Initial buffer size</b>
Dimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Variable Time Delay

# Trigger

---

**Purpose** Add trigger port to model or subsystem

**Library** Ports & Subsystems

**Description** Adding a Trigger block to a model allows an external signal to trigger its execution. You can add a trigger port to a root-level model or to a subsystem.



Configure the Trigger block to execute the model either:

- Once on each integration step, when the value of the external signal changes in a way that you specify.
- Multiple times during a time step, when the external signal is a function-call from a Function-Call Generator block or S-function.

Include only one Trigger block in a model or a subsystem.

Specify the properties that the trigger port enforces for any incoming signal, using the **Signal Attributes** tab.

The Trigger block supports signal label propagation.

For more information, see:


- “Create a Triggered Subsystem”
- “Create Conditional Models”
- “Function-Call Models”
- “Create a Function-Call Subsystem”

## Data Type Support

The Trigger block accepts signals of supported Simulink numeric data types, including fixed-point data types. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.


## Parameters and Dialog Box

The **Main** tab of the Trigger block dialog box appears as follows:

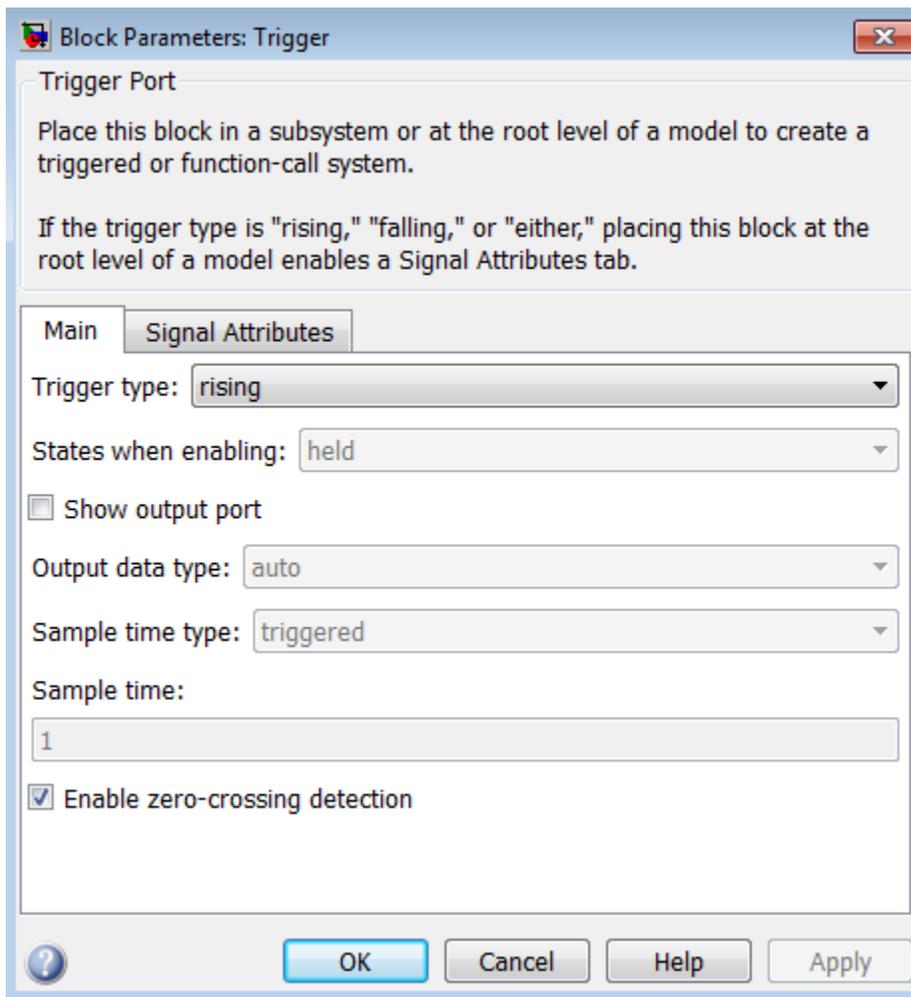

The **Signal Attributes** tab of the Trigger block dialog box appears as follows:

# Trigger

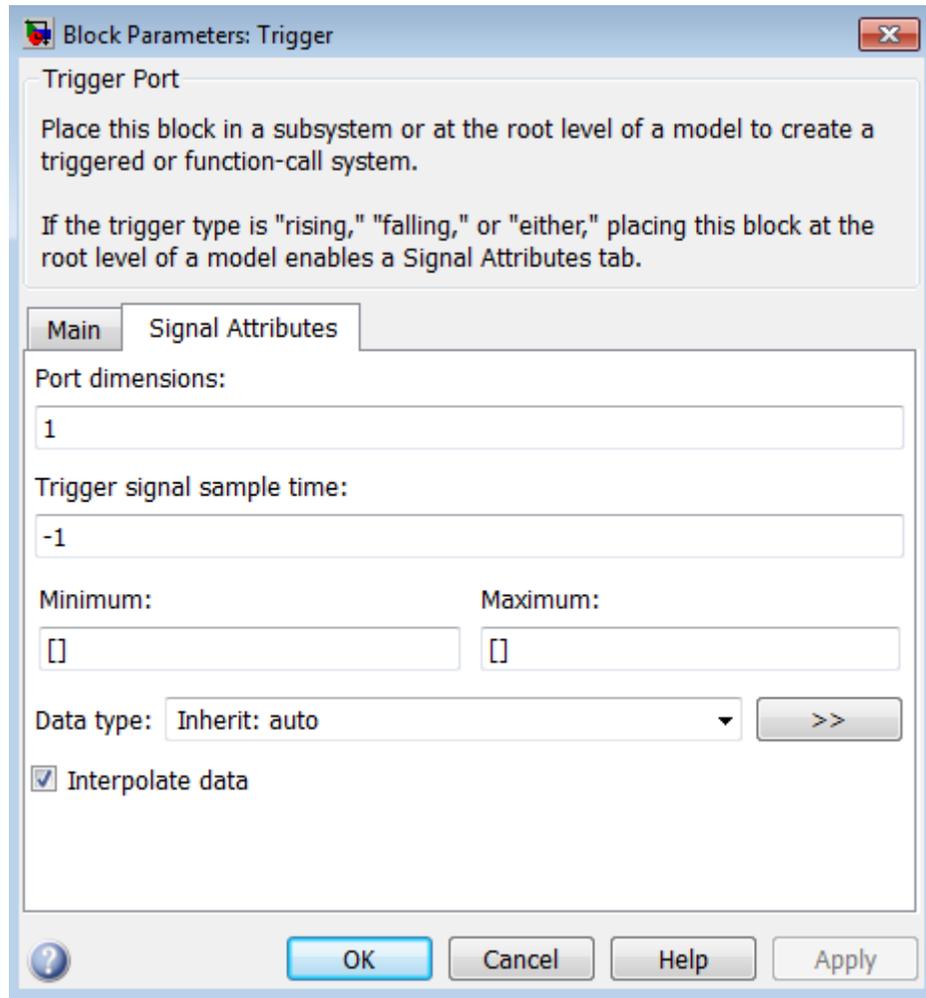

- “Trigger type” on page 1-1958
- “States when enabling” on page 1-1959
- “Propagate sizes of variable-size signals” on page 1-1961

- “Show output port” on page 1-1962
- “Output data type” on page 1-1963
- “Sample time type” on page 1-1964
- “Sample time” on page 1-1965
- “Enable zero-crossing detection” on page 1-1966
- “Port dimensions” on page 1-1967
- “Trigger signal sample time” on page 1-1968
- “Minimum” on page 1-1969
- “Maximum” on page 1-1970
- “Data type” on page 1-1971
- “Mode” on page 1-1973
- “Data type override” on page 1-1975
- “Signedness” on page 1-1976
- “Scaling” on page 1-1977
- “Word length” on page 1-1979
- “Fraction length” on page 1-1980
- “Slope” on page 1-1981
- “Bias” on page 1-1981
- “Interpolate data” on page 1-1982

## Trigger type

Select the type of event that triggers execution of the subsystem.

### Settings

**Default:** rising

rising

Triggers execution of the model or subsystem when the control signal rises from a negative or zero value to a positive value. If the initial value is negative, rising to zero triggers execution.

falling

Triggers execution of the model or subsystem when the control signal falls from a positive or a zero value to a negative value. If the initial value is positive, falling to zero triggers execution.

either

Triggers execution of the model or subsystem when the signal is either rising or falling.

function-call

Allows a Function-Call Generator or S-function to control execution of the subsystem or model.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## States when enabling

Specify the state values when triggered by a function-call.

### Settings

**Default:** held

held

Leaves the states at their current values.

reset

Resets the states.

inherit

Uses the held/reset setting from the parent subsystem initiating the function-call. If the parent of the initiator is the model root, the inherited setting is held. If the trigger has multiple initiators, set the parents of all initiators to either held or reset.

### Dependencies

To enable this parameter, select function-call from the **Trigger Type** list.

The parameter setting applies only if the model explicitly enables and disables the function-call subsystem. For example:

- The function-call subsystem resides in an enabled subsystem. In this case, the model enables and disables the function-call subsystem along with the parent subsystem.
- The function-call initiator that controls the function-call subsystem resides in an enabled subsystem. In this case, the model enables and disables the function-call subsystem along with the enabled subsystem containing the function-call initiator.
- The function-call initiator is a Stateflow event bound to a particular state. See “Control Function-Call Subsystems Using Bind Actions” in the Stateflow documentation.

# Trigger

---

- The function-call initiator is an S-function that explicitly enables and disables the function-call subsystem. See `ssEnableSystemWithTid` for an example.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Propagate sizes of variable-size signals**

Specify when to propagate a variable-size signal.

### **Settings**

**Default:** During execution

Only when enabling

Propagates variable-size signals only when enabling the model or subsystem containing the Trigger block.

During execution

Propagates variable-size signals at each time step.

### **Dependency**

Select Function-call from the **Trigger type** list to enable this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Show output port

Select this check box to output the trigger signal.

### Settings

**Default:** On



On

Shows the Trigger block output port and outputs the trigger signal. This action allows the system to determine which signal caused the trigger. The width of the signal is the width of the triggering signal. The signal value is:

- 1 for a signal that causes a rising trigger
- -1 for a signal that causes a falling trigger
- 2 for a function-call trigger
- 0 otherwise



Off

Removes the output port.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Output data type

Specify the trigger output data type.

### Settings

**Default:** auto

auto

Specifies that the data type is the same as the port connected to output.

double

Sets the data type to double.

int8

Sets the data type to integer.

### Dependencies

To enable this parameter, select the **Show output port** check box.

The Trigger block ignores the **Data type override** setting of the Fixed-Point Tool.

# Trigger

---

## Sample time type

Specify the calling frequency of a subsystem.

### Settings

**Default:** triggered

triggered

Applies to applications that do not have a periodic calling frequency.

periodic

Applies if the caller of the parent function-call subsystem calls the subsystem once per time step when the subsystem is active (enabled). A Stateflow chart is an example of a caller.

### Dependency

Select Function-call from the **Trigger type** list to enable this parameter.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Sample time**

Specify the calling rate for blocks.

### **Settings**

**Default:** 1

Set this parameter to the sample time you expect for the calling rate of the function-call subsystem containing this Trigger block. If the actual calling rate for the subsystem differs from the rate that this parameter specifies, Simulink displays an error.

### **Dependency**

Setting **Trigger type** to `function-call` and **Sample time type** to `periodic` enables this parameter.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Enable zero-crossing detection**

Select to enable zero-crossing detection.

### **Settings**

**Default:** On



On

Detects zero crossings.



Off

Does not detect zero crossings.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Port dimensions

Specify the dimensions of the input signal to the block.

### Settings

**Default:** 1

Valid values are:

Value	Description
n	Accepts vector signal of width n
[m n]	Accepts matrix signal having m rows and n columns

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Trigger signal sample time**

Specify the rate at which the block driving the triggered signal is expected to run.

### **Settings**

**Default:** -1

To inherit the sample time, set this parameter to -1.

See “Specify Sample Time” for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Minimum

Specify the minimum value that the block should output.

### Settings

**Default:** [] (unspecified)

This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the minimum value for bus data on the block. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum property of a bus element, see `Simulink.BusElement`.

---

Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Maximum**

Specify the maximum value that the block should output.

### **Settings**

**Default:** [] (unspecified)

This number must be a finite real double scalar value.

---

**Note** If you specify a bus object as the data type for this block, do not set the maximum value for bus data on the block. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum property of a bus element, see `Simulink.BusElement`.

---

Simulink software uses this value to perform:

- Simulation range checking (see “Signal Ranges”)
- Automatic scaling of fixed-point data types

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Data type

Specify the expected data type of the signal feeding the trigger port.

### Settings

**Default:** Inherit: auto

Inherit: auto

Data type is double

double

Data type is double.

single

Data type is single.

int8

Data type is int8.

uint8

Data type is uint8.

int16

Data type is int16.

uint16

Data type is uint16.

int32

Data type is int32.

uint32

Data type is uint32.

boolean

Data type is boolean.

fixdt(1,16,0)

Data type is fixed point, fixdt(1,16,0).

fixdt(1,16,2<sup>0</sup>,0)

Data type is fixed point, fixdt(1,16,2<sup>0</sup>,0).

# Trigger

---

Enum: <class name>

Data type is enumerated, for example, Enum: Basic Colors.

<data type expression>

The name of a data type object, for example,  
Simulink.NumericType.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## **Mode**

Select the category of data to specify.

## **Settings**

**Default:** Inherit

### Inherit

Inheritance rule for data types. Selecting **Inherit** enables a second list.

### Built in

Built-in data types. Selecting **Built in** enables a second list. Select one of the following choices:

- double (default)
- single
- int8
- uint8
- int16
- uint16
- int32
- uint32
- boolean

### Fixed point

Fixed-point data types.

### Enumerated

Enumerated data types. Selecting **Enumerated** enables a second text box, where you can enter the class name.

### Expression

Expressions that evaluate to data types. Selecting **Expression** enables a second text box, where you can enter the expression.

# Trigger

---

## **Dependency**

To enable this parameter, click **Show data type assistant**.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Data type override

Specify data type override mode for this signal.

### Settings

**Default:** Inherit

Inherit

Inherits the data type override setting from its context, that is, from the block, `Simulink.Signal` object or Stateflow chart in Simulink that is using the signal.

Off

Ignores the data type override setting of its context and uses the fixed-point data type specified for the signal.

### Tip

The ability to turn off data type override for an individual data type provides greater control over the data types in your model when you apply data type override. For example, you can use this option to ensure that data types meet the requirements of downstream blocks regardless of the data type override setting.

### Dependency

This parameter appears only when the **Mode** is `Built in` or `Fixed point`.

## **Signedness**

Specify whether you want the fixed-point data as signed or unsigned.

### **Settings**

**Default:** Signed

Signed

Specify the fixed-point data as signed.

Unsigned

Specify the fixed-point data as unsigned.

### **Dependencies**

Selecting **Mode** > Fixed point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## Scaling

Specify the method for scaling your fixed-point data to avoid overflow conditions and minimize quantization errors.

### Settings

**Default:** Best precision, Binary point, Integer

Binary point

Specify binary point location.

Slope and bias

Enter slope and bias.

Best precision

Specify best-precision values. This option appears for some blocks.

Integer

Specify integer. This setting has the same result as specifying a binary point location and setting fraction length to 0. This option appears for some blocks.

### Dependencies

Selecting **Mode** > Fixed point enables this parameter.

Selecting Binary point enables:

- **Fraction length**
- **Calculate Best-Precision Scaling**

Selecting Slope and bias enables:

- **Slope**
- **Bias**
- **Calculate Best-Precision Scaling**

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Trigger

---

## **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Word length**

Specify the bit size of the word that holds the quantized integer.

### **Settings**

**Default:** 16

**Minimum:** 0

**Maximum:** 32

### **Dependencies**

Selecting **Mode** > **Fixed point** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Fraction length**

Specify fraction length for fixed-point data type.

### **Settings**

**Default:** 0

Binary points can be positive or negative integers.

### **Dependencies**

Selecting **Scaling** > Binary point enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Slope**

Specify slope for the fixed-point data type.

### **Settings**

**Default:**  $2^0$

Specify any positive real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

## **Bias**

Specify bias for the fixed-point data type.

### **Settings**

**Default:** 0

Specify any real number.

### **Dependencies**

Selecting **Scaling** > **Slope** and **bias** enables this parameter.

### **See Also**

For more information, see “Specifying a Fixed-Point Data Type”.

# Trigger

---

## Interpolate data

Cause the block to interpolate or extrapolate output at time steps for which no corresponding workspace data exists when loading data from the workspace.

### Settings

**Default:** On



On

Causes the block to interpolate or extrapolate output at time steps for which no corresponding workspace data exists when loading data from the workspace.



Off

Does not cause the block to interpolate or extrapolate output at time steps for which no corresponding workspace data exists when loading data from the workspace.

### Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Characteristics

Sample Time	Specified by the <b>Sample time</b> parameter if: <ul style="list-style-type: none"><li>• <b>Trigger type</b> is function-call</li><li>• <b>Sample time type</b> is periodic</li></ul> Otherwise, specified by the signal at the trigger port.
Dimensionalized	Yes

Virtual	Yes, when the output port is <i>not</i> present For more information, see “Virtual Blocks” in the Simulink documentation.
Zero-Crossing Detection	Yes, if enabled

## See Also

- “Create Conditional Models”
- Triggered Subsystem
- Function-Call Subsystem

# Trigger-Based Linearization

---

**Purpose** Generate linear models in base workspace when triggered

**Library** Model-Wide Utilities

**Description** When triggered, this block calls `linmod` or `dlinmod` to create a linear model for the system at the current operating point. No trimming is performed. The linear model is stored in the base workspace as a structure, along with information about the operating point at which the snapshot was taken. Multiple snapshots are appended to form an array of structures.



The block sets the following model parameters to the indicated values:

- `BufferReuse` = 'off'
- `RTWInlineParameters` = 'on'
- `BlockReductionOpt` = 'off'

The name of the structure used to save the snapshots is the name of the model appended by `_Trigger_Based_Linearization`, for example, `vdp_Trigger_Based_Linearization`. The structure has the following fields:

Field	Description
<code>a</code>	The A matrix of the linearization
<code>b</code>	The B matrix of the linearization
<code>c</code>	The C matrix of the linearization
<code>d</code>	The D matrix of the linearization
<code>StateName</code>	Names of the model's states
<code>OutputName</code>	Names of the model's output ports
<code>InputName</code>	Names of the model's input ports

Field	Description
OperPoint	A structure that specifies the operating point of the linearization. The structure specifies the value of the model's states ( <code>OperPoint.x</code> ) and inputs ( <code>OperPoint.u</code> ) at the operating point time ( <code>OperPoint.t</code> ).
Ts	The sample time of the linearization for a discrete linearization

Use the Timed-Based Linearization block to generate linear models at predetermined times.

You can use state and simulation time logging to extract the model states at operating points. For example, suppose that you want to get the states of the vdp example model when the signal `x1` triggers the Trigger-Based Linearization block on a rising edge.

- 1 Open the model and drag an instance of this block from the Model-Wide Utilities library and drop the instance into the model.
- 2 Connect the block's trigger port to the signal labeled `x1`.
- 3 Open the model's **Model Configuration Parameters** dialog box.
- 4 Select the **Data Import/Export** pane.
- 5 Check **States** and **Time** on the **Save to Workspace** control panel
- 6 Select OK to confirm the selections and close the dialog box.
- 7 Simulate the model.

At the end of the simulation, the following variables appear in the MATLAB workspace: `vdp_Trigger_Based_Linearization`, `tout`, and `xout`.

- 8 Get the index to the first operating point time by entering the following at the MATLAB command line:

# Trigger-Based Linearization

---

```
ind1 = find(vdp_Trigger_Based_Linearization(1).OperPoint.t==tout);
```


- 9 Get the state vector at this operating point.

```
x1 = xout(ind1,:);
```

## Data Type Support

The trigger port accepts signals of any numeric data type that Simulink supports.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

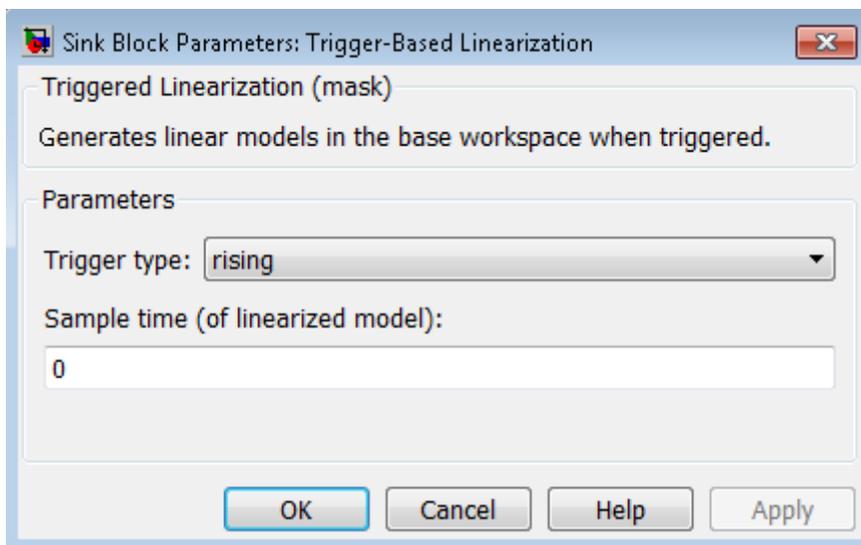

## Parameters and Dialog Box

### Trigger type

Type of event on the trigger input signal that triggers generation of a linear model. See the **Trigger type** parameter of the Trigger block for an explanation of the various trigger types that you can select.

## Sample time (of linearized model)

Specify a sample time to create a discrete-time linearization of the model (see “Discrete-Time System Linearization” on page 2-29).

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Dimensionalized	No

## See Also

Timed-Based Linearization


# Triggered Subsystem

---

**Purpose** Represent subsystem whose execution is triggered by external input

**Library** Ports & Subsystems

## Description

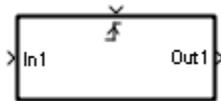

This block is a Subsystem block that is preconfigured to serve as the starting point for creating a triggered subsystem (see “Create a Triggered Subsystem”).

**Purpose** Specified trigonometric function on input

**Library** Math Operations

**Description** **Supported Functions**

The Trigonometric Function block performs common trigonometric functions. You can select one of the following functions from the **Function** parameter list.

Function	Description	Mathematical Expression	MATLAB Equivalent
sin	Sine of the input	$\sin(u)$	sin
cos	Cosine of the input	$\cos(u)$	cos
tan	Tangent of the input	$\tan(u)$	tan
asin	Inverse sine of the input	$\text{asin}(u)$	asin
acos	Inverse cosine of the input	$\text{acos}(u)$	acos
atan	Inverse tangent of the input	$\text{atan}(u)$	atan
atan2	Four-quadrant inverse tangent of the input	$\text{atan2}(u)$	atan2
sinh	Hyperbolic sine of the input	$\sinh(u)$	sinh
cosh	Hyperbolic cosine of the input	$\cosh(u)$	cosh

# Trigonometric Function

---

Function	Description	Mathematical Expression	MATLAB Equivalent
<code>tanh</code>	Hyperbolic tangent of the input	$\tanh(u)$	<code>tanh</code>
<code>asinh</code>	Inverse hyperbolic sine of the input	$\operatorname{asinh}(u)$	<code>asinh</code>
<code>acosh</code>	Inverse hyperbolic cosine of the input	$\operatorname{acosh}(u)$	<code>acosh</code>
<code>atanh</code>	Inverse hyperbolic tangent of the input	$\operatorname{atanh}(u)$	<code>atanh</code>
<code>sincos</code>	Sine of the input; cosine of the input	—	—
<code>cos + jsin</code>	Complex exponential of the input	—	—

The block output is the result of applying the function to one or more inputs in radians. Each function supports:

- Scalar operations
- Element-wise vector and matrix operations

---

**Note** Not all compilers support the `asinh`, `acosh`, and `atanh` functions. If you use a compiler that does not support those functions, a warning appears and the generated code fails to link.

---

## Block Appearance for the atan2 Function

If you select the `atan2` function, the block shows two inputs. The first input is the  $y$ -axis or imaginary part of the function argument. The second input is the  $x$ -axis or real part of the function argument. (See “How to Rotate a Block” in the Simulink documentation for a description of the port order for various block orientations.)

## Block Appearance for the sincos Function

If you select the `sincos` function, the block shows two outputs. The first output is the sine of the function argument, and the second output is the cosine of the function argument.

## Definitions

### CORDIC

CORDIC is an acronym for COordinate Rotation DIgital Computer. The Givens rotation-based CORDIC algorithm is one of the most hardware-efficient algorithms available because it requires only iterative shift-add operations (see References). The CORDIC algorithm eliminates the need for explicit multipliers. Using CORDIC, you can calculate various functions, such as sine, cosine, arc sine, arc cosine, arc tangent, and vector magnitude. You can also use this algorithm for divide, square root, hyperbolic, and logarithmic functions.

Increasing the number of CORDIC iterations can produce more accurate results, but doing so also increases the expense of the computation and adds latency.

# Trigonometric Function

---

## Data Type Support

The block accepts input signals of the following data types:

Functions	Input Data Types
<ul style="list-style-type: none"><li>• sin</li><li>• cos</li><li>• sincos</li><li>• cos + jsin</li><li>• atan2</li></ul>	<ul style="list-style-type: none"><li>• Floating point</li><li>• Fixed point (only when <b>Approximation method</b> is CORDIC)</li></ul>
<ul style="list-style-type: none"><li>• tan</li><li>• asin</li><li>• acos</li><li>• atan</li><li>• sinh</li><li>• cosh</li><li>• tanh</li><li>• asinh</li><li>• acosh</li><li>• atanh</li></ul>	<ul style="list-style-type: none"><li>• Floating point</li></ul>

Complex input signals are supported for all functions in this block, except atan2.

You can use floating-point input signals when you set **Approximation method** to None or CORDIC. However, the block output data type depends on which of these approximation method options you choose.

Input Data Type	Approximation Method	Output Data Type
Floating point	None	Depends on your selection for <b>Output signal type</b> . Options are auto (same data type as input), real, or complex.
Floating point	CORDIC	Same as input. <b>Output signal type</b> is not available when you use the CORDIC approximation method to compute the block output.

You can use fixed-point input signals only when **Approximation method** is set to CORDIC. The CORDIC approximation is available for the `sin`, `cos`, `sincos`, `cos + jsin`, and `atan2` functions. For the `atan2` function, the relationship between input and output data types depends also on whether the fixed-point input is signed or unsigned.

Input Data Type	Function	Output Data Type
Fixed point, signed or unsigned	<code>sin</code> , <code>cos</code> , <code>sincos</code> , and <code>cos + jsin</code>	<code>fixdt(1, WL, WL - 2)</code> where $WL$ is the input word length  This fixed-point type provides the best precision for the CORDIC algorithm.
Fixed point, signed	<code>atan2</code>	<code>fixdt(1, WL, WL - 3)</code>
Fixed point, unsigned	<code>atan2</code>	<code>fixdt(1, WL, WL - 2)</code>

# Trigonometric Function

---

For CORDIC approximations:

- Input must be real for the `sin`, `cos`, `sincos`, `cos + jsin`, and `atan2` functions.
- Output is real for the `sin`, `cos`, `sincos`, and `atan2` functions.
- Output is complex for the `cos + jsin` function.

## Invalid Inputs for CORDIC Approximations

If you use the CORDIC approximation method (see “Definitions” on page 1-1991), the block input has some further requirements.

For the `sin`, `cos`, `sincos`, and `cos + jsin` functions:

- When you use signed fixed-point types, the input angle must fall within the range  $[-2\pi, 2\pi)$  radians.
- When you use unsigned fixed-point types, the input angle must fall within the range  $[0, 2\pi)$  radians.


For the `atan2` function:

- Inputs must be the same size, or at least one value must be a scalar value.
- Both inputs must have the same data type.
- When you use signed fixed-point types, the word length must be 126 or less.
- When you use unsigned fixed-point types, the word length must be 125 or less.

This table summarizes what happens for an invalid input.

<b>Block Usage</b>	<b>Effect of Invalid Input</b>
Simulation	An error appears.
Generated code	Undefined behavior occurs. Avoid relying on undefined behavior for generated code or Accelerator modes.
Accelerator modes	

# Trigonometric Function

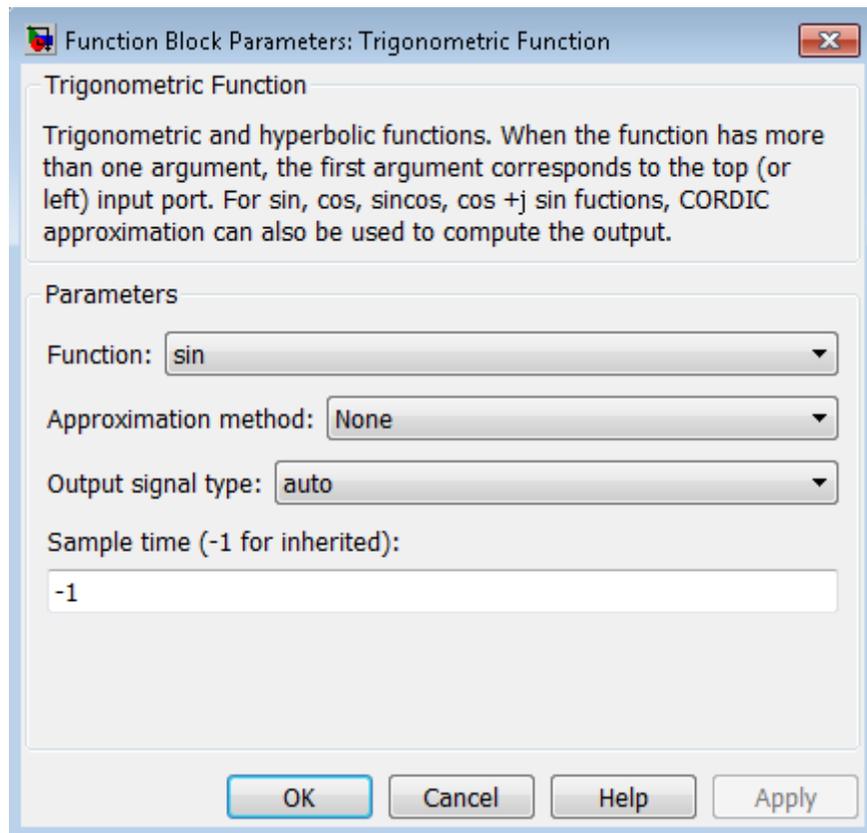

## Parameters and Dialog Box

### Function

Specify the trigonometric function. The name of the function on the block icon changes to match your selection.



### Approximation method

Specify the type of approximation for computing output. This parameter appears only when you set **Function** to sin, cos, sincos, cos + j sin, or atan2.




# Trigonometric Function

Approximation Method	Data Types Supported	When to Use This Method
None (default)	Floating point	You want to use the default Taylor series algorithm.
CORDIC	Floating point and fixed point	You want a fast, approximate calculation.

If you select CORDIC and enlarge the block from the default size, the block icon changes:

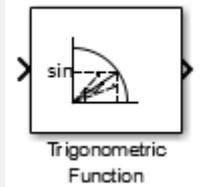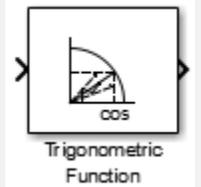Function	Block Icon
sin	
cos	

# Trigonometric Function

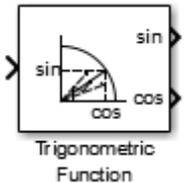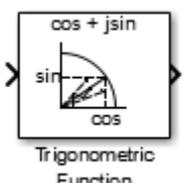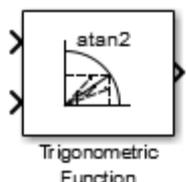Function	Block Icon
sincos	 The icon shows a square block with a right-angled triangle inscribed in a quarter-circle. The vertical side is labeled 'sin' and the horizontal side is labeled 'cos'. The text 'Trigonometric Function' is centered below the triangle.
cos + jsin	 The icon shows a square block with a right-angled triangle inscribed in a quarter-circle. The vertical side is labeled 'sin' and the horizontal side is labeled 'cos'. The text 'cos + jsin' is centered above the triangle, and 'Trigonometric Function' is centered below it.
atan2	 The icon shows a square block with a right-angled triangle inscribed in a quarter-circle. The text 'atan2' is centered above the triangle, and 'Trigonometric Function' is centered below it.

## Number of iterations

Specify the number of iterations to perform the CORDIC algorithm. The default value is 11.

- When the block input uses a floating-point data type, the number of iterations can be a positive integer.
- When the block input is a fixed-point data type, the number of iterations cannot exceed the word length.

For example, if the block input is `fixdt(1,16,15)`, the word length is 16. In this case, the number of iterations cannot exceed 16.

This parameter appears when both of the following conditions hold:

- You set **Function** to sin, cos, sincos, cos + jsin, or atan2.
- You set **Approximation method** to CORDIC.

### Output signal type

Specify the output signal type of the Trigonometric Function block as auto, real, or complex.

Function	Input Signal Type	Output Signal Type		
		Auto	Real	Complex
Any selection for the <b>Function</b> parameter	real	real	real	complex
	complex	complex	error	complex

---

**Note** When **Function** is atan2, complex input signals are not supported for simulation or code generation.

---

Setting **Approximation method** to CORDIC disables this parameter.

### Sample time (-1 for inherited)


Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation for more information.

# Trigonometric Function

## Examples

### sin Function with Floating-Point Input

Suppose that you have the following model:

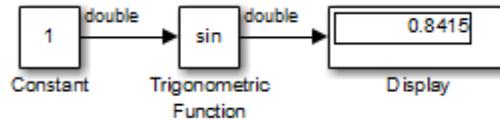

The key block parameters for the Constant block are:

Parameter	Setting
Constant value	1
Output data type	Inherit: Inherit from 'Constant value'


The block parameters for the Trigonometric Function block are:

Parameter	Setting
Function	sin
Approximation method	None
Output signal type	auto
Sample time	-1

The output type of the Trigonometric Function block is the same as the input because the input type is floating point and **Approximation method** is None.

## sincos Function with Fixed-Point Input

Suppose that you have the following model:

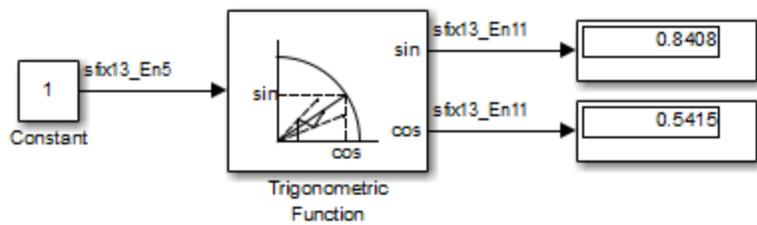

The key block parameters for the Constant block are:

Parameter	Setting
Constant value	1  This value must fall within the range $[-2\pi, 2\pi)$ because the Trigonometric Function block uses the CORDIC algorithm and the block input uses a signed fixed-point type.
Output data type	fixdt(1,13,5)

The block parameters for the Trigonometric Function block are:


Parameter	Setting
Function	sincos
Approximation method	CORDIC
Number of iterations	11
Sample time	-1

# Trigonometric Function

The output type of the Trigonometric Function block is `fixdt(1,13,11)` because the input type is fixed point and **Approximation method** is CORDIC. The output fraction length equals the input word length – 2.

## Block Behavior for Complex Exponential Output

The following model compares the complex exponential output for the two different approximation methods:

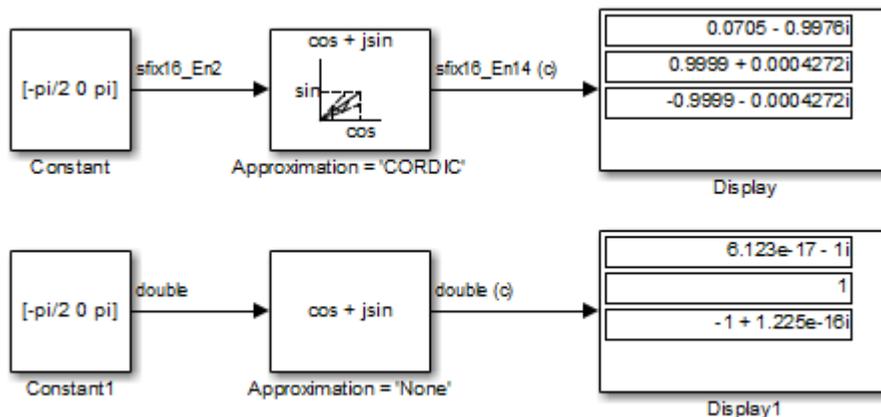

The key block parameters for the Constant blocks are:

Block	Parameter	Setting
Constant	Constant value	$[-\pi/2 \ 0 \ \pi]$
	Output data type	<code>fixdt(1,16,2)</code>
Constant1	Constant value	$[-\pi/2 \ 0 \ \pi]$
	Output data type	<code>double</code>

The block parameters for the Trigonometric Function blocks are:

Block	Parameter	Setting
Approximation = 'CORDIC'	Function	cos + jsin
	Approximation method	CORDIC
	Number of iterations	11
	Sample time	-1
Approximation = 'None'	Function	cos + jsin
	Approximation method	None
	Sample time	-1

When the **Approximation method** is CORDIC, the input data type can be fixed point, in this case: `fixdt(1,16,2)`. The output data type is `fixdt(1,16,14)` because the output fraction length equals the input word length – 2.

When the **Approximation method** is None, the input data type must be floating point. The output data type is the same as the input.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from the driving block
Scalar Expansion	Yes, of the input when the function requires two inputs
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

# Trigonometric Function

---

## References

[1] Volder, JE. "The CORDIC Trigonometric Computing Technique." *IRE Transactions on Electronic Computers*. Vol. EC-8, September 1959, pp. 330–334.

[2] Andraka, R. "A survey of CORDIC algorithm for FPGA based computers." *Proceedings of the 1998 ACM/SIGDA sixth international symposium on Field programmable gate arrays*. Feb. 22–24, 1998, pp. 191–200.

[3] Walther, J.S. "A Unified Algorithm for Elementary Functions." Hewlett-Packard Company, Palo Alto. Spring Joint Computer Conference, 1971, pp. 379–386. (from the collection of the Computer History Museum). [www.computer.org/csdl/proceedings/afips/1971/5077/00/50770379.pdf](http://www.computer.org/csdl/proceedings/afips/1971/5077/00/50770379.pdf)

[4] Schelin, Charles W. "Calculator Function Approximation." *The American Mathematical Monthly*. Vol. 90, No. 5, May 1983, pp. 317–325.

## See Also

Math Function, Sqrt

**Purpose** Negate input

**Library** Math Operations

**Description** The Unary Minus block negates the input.



For signed-integer data types, the unary minus of the most negative value is not representable by the data type. In this case, the **Saturate on integer overflow** check box controls the behavior of the block:

If you...	The block...	And...
Select this check box	Saturates to the most positive value of the integer data type	<ul style="list-style-type: none"> <li>For 8-bit signed integers, -128 maps to 127.</li> <li>For 16-bit signed integers, -32768 maps to 32767.</li> <li>For 32-bit signed integers, -2147483648 maps to 2147483647.</li> </ul>
Do not select this check box	Wraps to the most negative value of the integer data type	<ul style="list-style-type: none"> <li>For 8-bit signed integers, -128 remains -128.</li> <li>For 16-bit signed integers, -32768 remains -32768.</li> <li>For 32-bit signed integers, -2147483648 remains -2147483648.</li> </ul>


**Data Type Support** The Unary Minus block accepts and outputs signals of the following data types:

- Floating point
- Signed integer
- Fixed point

# Unary Minus

---

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

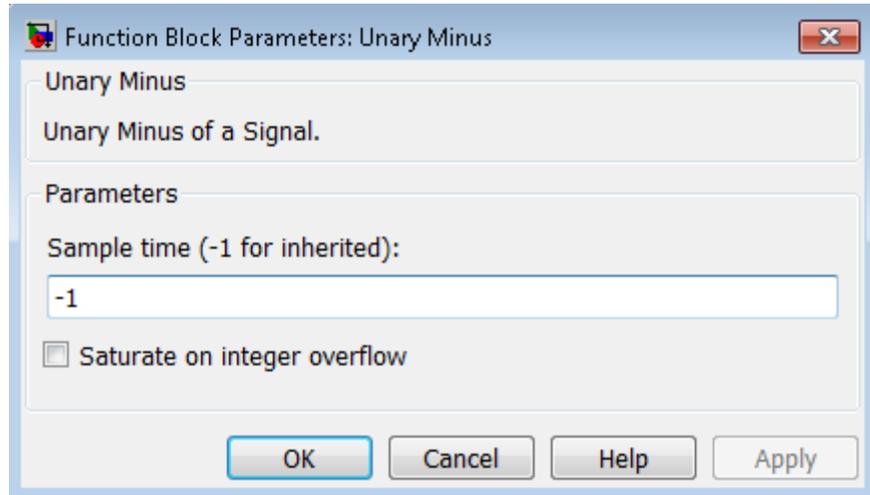

## Parameters and Dialog Box

### Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. For more information, see “Specify Sample Time” in the Simulink documentation.

### Saturate on integer overflow

Select to have integer overflows saturate. Otherwise, overflows wrap.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. In general, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Characteristics

Direct Feedthrough	No
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of input or initial conditions
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

# Uniform Random Number

---

**Purpose** Generate uniformly distributed random numbers

**Library** Sources

## Description



The Uniform Random Number block generates uniformly distributed random numbers over an interval that you specify. To generate normally distributed random numbers, use the Random Number block.

You can generate a repeatable sequence using any Uniform Random Number block with the same nonnegative seed and parameters. The seed resets to the specified value each time a simulation starts.

Avoid integrating a random signal, because solvers must integrate relatively smooth signals. Instead, use the Band-Limited White Noise block.

The numeric parameters of this block must have the same dimensions after scalar expansion. If you select the **Interpret vector parameters as 1-D** check box and the numeric parameters are row or column vectors after scalar expansion, the block outputs a 1-D signal. If you clear the **Interpret vector parameters as 1-D** check box, the block outputs a signal of the same dimensionality as the parameters.

## Data Type Support

The Uniform Random Number block accepts and outputs a real signal of type double.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Uniform Random Number

Source Block Parameters: Uniform Random Number

Uniform Random Number

Output a uniformly distributed random signal. Output is repeatable for a given seed.

Parameters

Minimum:  
-1

Maximum:  
1

Seed:  
0

Sample time:  
0.1

Interpret vector parameters as 1-D

OK Cancel Help Apply

## Parameters and Dialog Box

### Minimum

Specify the minimum of the interval. The default is -1.

### Maximum

Specify the maximum of the interval. The default is 1.

### Seed

Specify the starting seed for the random number generator. The default is 0.

# Uniform Random Number

---

The seed must be 0 or a positive integer. Output is repeatable for a given seed.

## Sample time

Specify the time interval between samples. The default is 0.1. See “Specify Sample Time” in the Simulink documentation for more information.

## Interpret vector parameters as 1-D

If you select this check box and the other parameters are row or column vectors after scalar expansion, the block outputs a 1-D signal. Otherwise, the block outputs a signal of the same dimensionality as the other parameters. For more information, see “Determining the Output Dimensions of Source Blocks” in the Simulink documentation.

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of parameters
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No
Algorithm	mcg16807, multiplicative congruential generator

The generator algorithm is identical to the one used in MATLAB Version 4.0 by the `rand` and `randn` functions. For details on the mcg16807 algorithm, see “Choosing a Random Number Generator” in the MATLAB documentation.

To use other algorithms supported by MATLAB in a Simulink model, generate a set of random numbers in MATLAB, and store the output as a `.mat` file. Use this `.mat` file as the random number input for your simulation. For more information, see “Creating and Controlling a

Random Number Stream”. To create multiple independent streams using MATLAB, see “Multiple streams”

---

**Note** Using multiple seeds to generate multiple parallel independent streams for a generator algorithm is not recommended for the `mcg16807` algorithm. Instead, use the method described above.

---

**See Also** [Random Number](#)

# Unit Delay

---

**Purpose** Delay signal one sample period

**Library** Discrete

## Description



The Unit Delay block holds and delays its input by the sample period you specify. This block is equivalent to the  $z^{-1}$  discrete-time operator. The block accepts one input and generates one output. Each signal can be scalar or vector. If the input is a vector, the block holds and delays all elements of the vector by the same sample period.

You specify the block output for the first sampling period with the **Initial conditions** parameter. Careful selection of this parameter can minimize unwanted output behavior. You specify the time between samples with the **Sample time** parameter. A setting of -1 means the block inherits the **Sample time**.

When the Unit Delay block inherits a continuous sample time, the block is analogous to the Memory block.

---

**Tip** Do not use the Unit Delay block to create a slow-to-fast transition between blocks operating at different sample rates. Instead, use the Rate Transition block.

---

## Comparison with Similar Blocks

### Blocks with Similar Functionality

The Unit Delay, Memory, and Zero-Order Hold blocks provide similar functionality but have different capabilities. Also, the purpose of each block is different. The sections that follow highlight some of these differences.

## Recommended Usage for Each Block

Block	Purpose of the Block	Reference Examples
Unit Delay	Implement a delay using a discrete sample time that you specify. Ideally, the block accepts and outputs signals with a discrete sample time.	<ul style="list-style-type: none"><li>• sldemo_enginewc (Compression subsystem)</li></ul>
Memory	Implement a delay by one integration time step. Ideally, the block accepts continuous (or fixed in minor time step) signals and outputs a signal that is fixed in minor time step.	<ul style="list-style-type: none"><li>• sldemo_bounce</li><li>• sldemo_clutch (Friction Mode Logic/Lockup FSM subsystem)</li></ul>
Zero-Order Hold	Convert an input signal with a continuous sample time to an output signal with a discrete sample time.	<ul style="list-style-type: none"><li>• sldemo_radar_em1</li><li>• aero_dap3dof</li></ul>

# Unit Delay

---


## Overview of Block Capabilities

Capability	Block		
	Unit Delay	Memory	Zero-Order Hold
Specification of initial condition	Yes	Yes	No, because the block output at time $t = 0$ must match the input value.
Specification of sample time	Yes	No, because the block can only inherit sample time (from the driving block or the solver used for the entire model).	Yes
Support for frame-based signals	Yes	No	Yes
Support for state logging	Yes	No	No

## Effect of Solver Specification on Block Output

When you specify a discrete sample time in the dialog box for a Unit Delay or Zero-Order Hold block, the block output can differ depending on the solver specification for the model.


Suppose that you have a model with Unit Delay and Zero-Order Hold blocks, which both use a discrete sample time of 1:

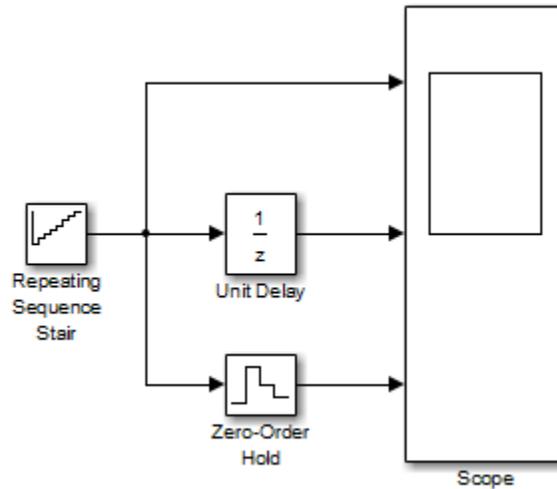


The Repeating Sequence Stair block uses a continuous sample time of 0 to provide input signals to the Unit Delay and Zero-Order Hold blocks.

# Unit Delay

If the model uses a fixed-step solver with a step size of 1, the scope shows the following simulation results:

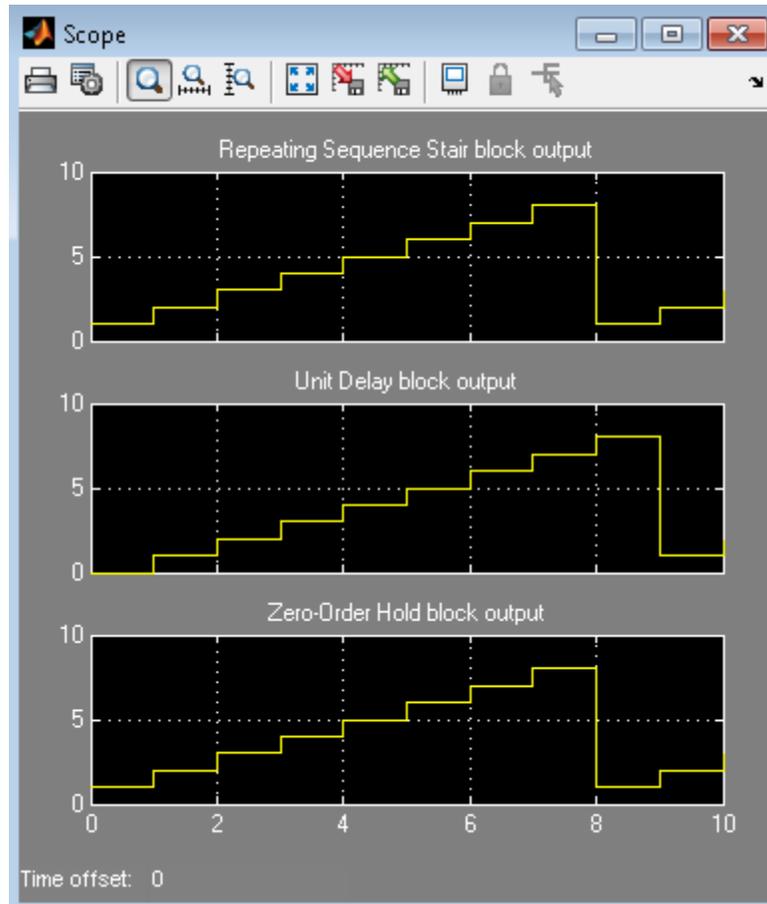

If the model uses a variable-step solver, the scope shows the following simulation results:

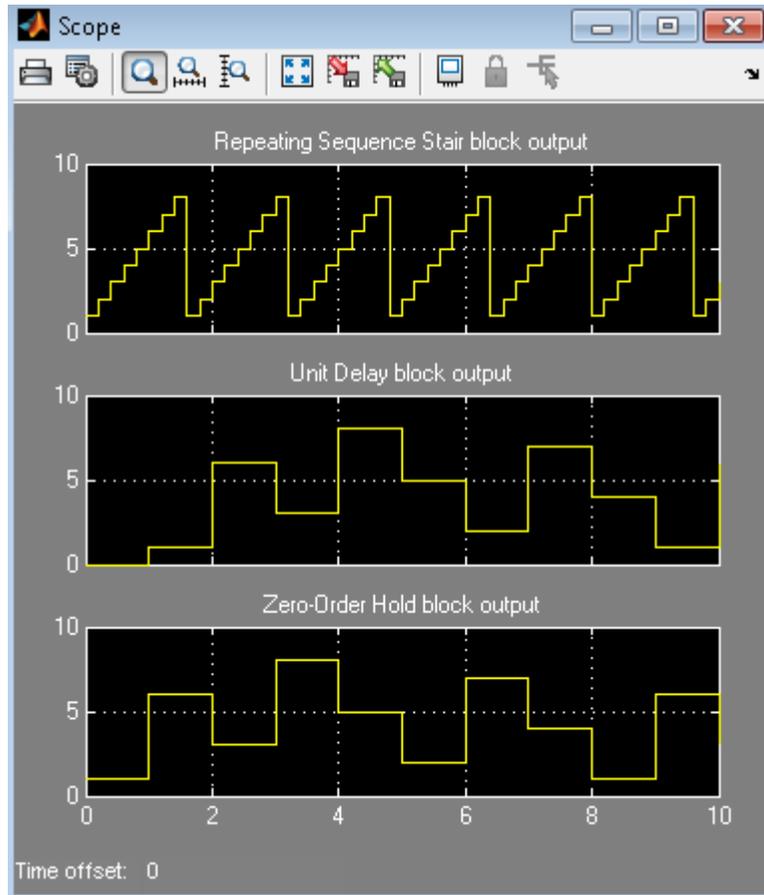

The Zero-Order Hold block takes the input value of the Repeating Sequence Stair block at  $t = 0, 1, 2, \dots, 9$  and holds each input value for a sample period (1 second). The Unit Delay block applies the same 1-second hold to each input value of the Repeating Sequence Stair block, but also delays each value by a sample period. The **Initial conditions**

# Unit Delay

---

parameter specifies the output for the Unit Delay block during the first sample period. For more information about sample time, see “What Is Sample Time?” and “Specify Sample Time”.



Solver specification for a model also affects the behavior of the Memory block. For details, see “Examples of Memory Block Usage” on page 1-995.

## **Data Type Support**

The Unit Delay block accepts real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types. If the data type of the input signal is user-defined, the initial condition must be zero.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

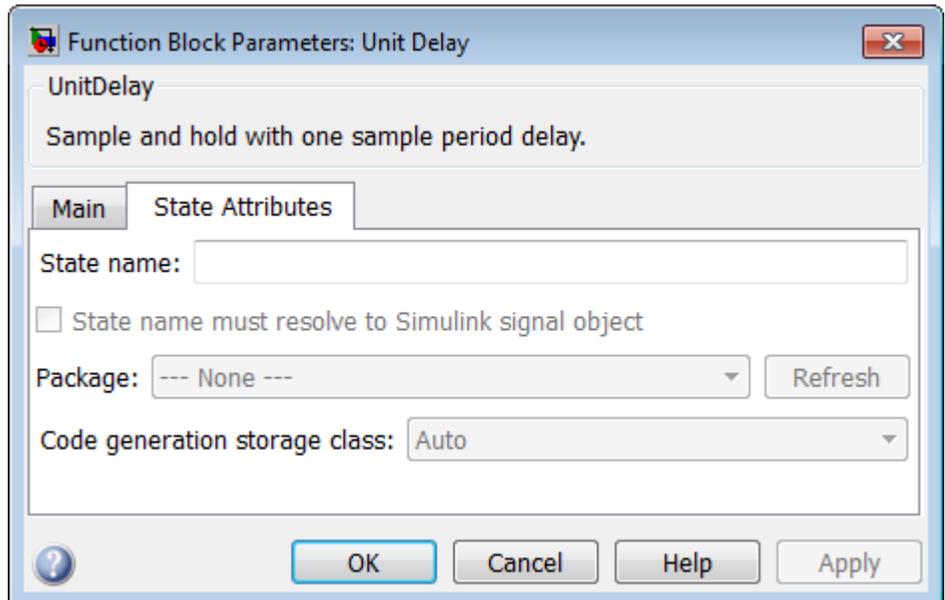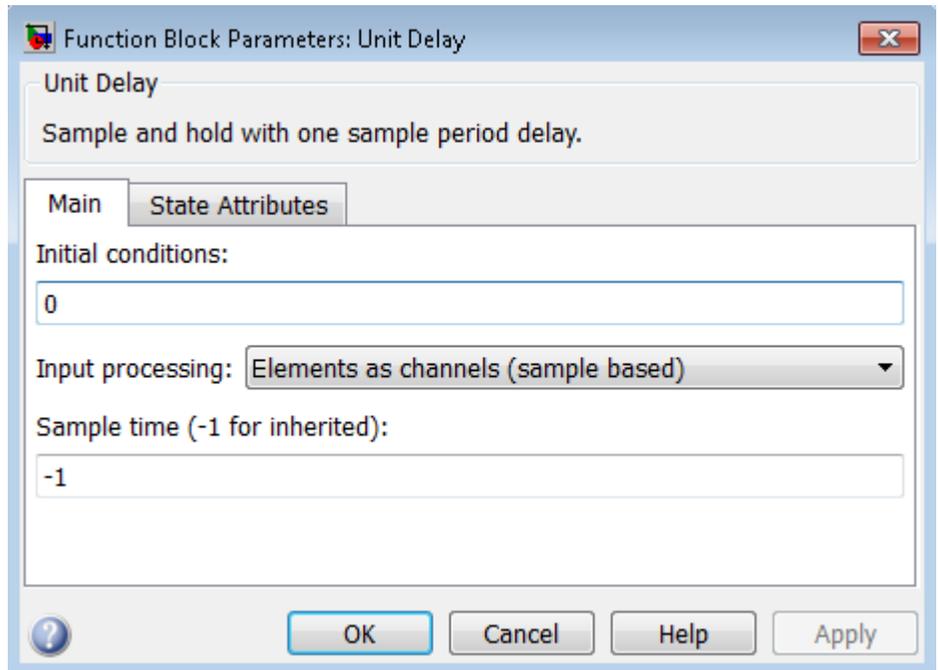

# Unit Delay

---

During simulation, the block uses the following values:

- The initial value of the signal object to which the state name is resolved
- Min and Max values of the signal object

For more information, see “States” in the Simulink Coder documentation.

## **Initial condition**

Specify the output of the simulation for the first sampling period, during which the output of the Unit Delay block is otherwise undefined.

## **Settings**

**Default:** 0

The **Initial conditions** parameter is converted from a double to the input data type offline using round-to-nearest and saturation.

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Unit Delay

---

## Input processing

Specify whether the Unit Delay block performs sample- or frame-based processing.

### Settings

**Default:** Elements as channels (sample based)

Elements as channels (sample based)

Treat each element of the input as a separate channel (sample-based processing).

Columns as channels (frame based)

Treat each column of the input as a separate channel (frame-based processing).

Inherited

Sets the block to inherit the processing mode from the input signal and delay the input accordingly. You can identify whether the input signal is sample or frame based by looking at the signal line. Simulink represents sample-based signals with a single line and frame-based signals with a double line.

---

**Note** When you choose the Inherited option for the **Input processing** parameter, and the input signal is frame-based, Simulink® will generate a warning or error in future releases.

---

Use **Input processing** to specify whether the block performs sample- or frame-based processing. The block accepts frame-based signals for the input  $u$ . All other input signals must be sample based.

Input Signal $u$	Input Processing Mode	Block Works?
Sample based	Sample based	Yes
Frame based		No, produces an error
Sample based	Frame based	Yes
Frame based		Yes
Sample based	Inherited	Yes
Frame based		Yes

For more information about these two processing modes, see “Sample- and Frame-Based Concepts” in the DSP System Toolbox documentation.

### **Dependency**

Frame-based processing requires a DSP System Toolbox license.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Unit Delay

---

## **Sample time (-1 for inherited)**

Enter the discrete interval between sample time hits or specify another appropriate sample time such as continuous or inherited.

### **Settings**

**Default:** -1

By default, the block inherits its sample time based upon the context of the block within the model. To set a different sample time, enter a valid sample time based upon the table in “Types of Sample Time”.

See also “Specify Sample Time” in the online documentation for more information.

### **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## State name

Use this parameter to assign a unique name to each state.

## Settings

Default: ' '

- If left blank, no name is assigned.

## Tips

- A valid identifier starts with an alphabetic or underscore character, followed by alphanumeric or underscore characters.
- The state name applies only to the selected block.

## Dependency

This parameter enables **State name must resolve to Simulink signal object** when you click the **Apply** button.

For more information, see “States” in the Simulink Coder documentation.

## Command-Line Information

**Parameter:** StateIdentifier

**Type:** string

**Value:** ' '

**Default:** ' '

# Unit Delay

---

## **State name must resolve to Simulink signal object**

Require that state name resolve to Simulink signal object.

### **Settings**

**Default:** Off



On

Require that state name resolve to Simulink signal object.



Off

Do not require that state name resolve to Simulink signal object.

### **Dependencies**

**State name** enables this parameter.

Selecting this check box disables **Code generation storage class**.

### **Command-Line Information**

**Parameter:** StateMustResolveToSignalObject

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

## Package

Select a package that defines the custom storage class you want to apply.

## Settings

**Default:** ---None---

---None---

Sets internal storage class attributes.

mpt

Applies the built-in mpt package.

Simulink

Applies the built-in Simulink package.

## Dependencies

If you have defined any packages of your own, click **Refresh**. This action adds all user-defined packages on your search path to the package list.

## Code generation storage class

Select state storage class.

### Settings

**Default:** Auto

Auto

Auto is the appropriate storage class for states that you do not need to interface to external code.

ExportedGlobal

State is stored in a global variable

ImportedExtern

*model\_private.h* declares the state as an extern variable.

ImportedExternPointer

*model\_private.h* declares the state as an extern pointer.

### Dependencies

**State name** enables this parameter.

Setting this parameter to `ExportedGlobal`, `ImportedExtern`, or `ImportedExternPointer` enables **Code generation storage type qualifier**.

### Command-Line Information

Command-Line Information

**Parameter:** StateStorageClass

**Type:** string

**Value:** 'Auto' | 'ExportedGlobal' | 'ImportedExtern' | 'ImportedExternPointer'

**Default:** 'Auto'

## Code generation storage class

Select custom storage class for state.

### Settings

**Default:** Auto

#### Auto

Auto is the appropriate storage class for states that you do not need to interface to external code.

#### SimulinkGlobal

*model\_P* initializes the state to its corresponding value in the workspace.

#### ExportedGlobal

State is stored in a global variable

#### ImportedExtern

*model\_private.h* declares the state as an extern variable.

#### ImportedExternPointer

*model\_private.h* declares the state as an extern pointer.

#### Default

A non-editable placeholder storage class is created.

#### BitField

A struct declaration is created that embeds Boolean data.

#### Volatile

Volatile type qualifier is used in state declaration.

#### ExportToFile

Header (.h) file containing global variable declarations is generated with user-specified name.

#### ImportFromFile

Predefined header (.h) files containing global variable declarations are included.

# Unit Delay

---

## FileScope

A static qualifier is generated in front of the state declaration to make the state visible only to the current file.

## Struct

A struct declaration is created to encapsulate parameter or signal object data.

## StructVolatile

Volatile type qualifier is used in struct declaration.

## GetSet

Supports specialized function calls to read and write memory.

## Dependencies

**State name** enables this parameter.

The list of valid storage classes differs based on the **Package** selection.

Setting this parameter to ExportedGlobal, ImportedExtern, or ImportedExternPointer enables **Code generation storage type qualifier**.

## See Also

“State Storage Classes” in the Simulink Coder documentation.

## Code generation storage type qualifier

Specify the Simulink Coder storage type qualifier.

### Settings

**Default:** ' '

If left blank, no qualifier is assigned.

### Dependency

Setting **Code generation storage class** to ExportedGlobal, ImportedExtern, or ImportedExternPointer enables this parameter.

### Command-Line Information

**Parameter:** RTWStateStorageTypeQualifier

**Type:** string

**Value:** ' '

**Default:** ' '

## Bus Support

The Unit Delay block is a bus-capable block. The input can be a virtual or nonvirtual bus signal subject to the following restrictions:

- **Initial conditions** must be zero, a nonzero scalar, or a finite numeric structure.
- If **Initial conditions** is zero or a structure, and you specify a **State name**, the input cannot be a virtual bus.
- If **Initial conditions** is a nonzero scalar, no **State name** can be specified.

For information about specifying an initial condition structure, see “Specify Initial Conditions for Bus Signals”.

All signals in a nonvirtual bus input to a Unit Delay block must have the same sample time, even if the elements of the associated bus object specify inherited sample times. You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus. See “Composite Signals” and Bus-Capable Blocks for more information.

# Unit Delay

---

## Examples

For an example of how to use the Unit Delay block, see the `sldemo_enginewc` model. The Unit Delay block appears in the Compression subsystem.

## Characteristics

Bus-capable	Yes, with restrictions as noted in “Bus Support” on page 1-2031
Direct Feedthrough	No
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes, of input or initial conditions
States	Yes, inherited from the driving block for nonfixed-point data types
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Memory, Zero-Order Hold

## Purpose

Delay signal one sample period, if external enable signal is on

## Library

Additional Math & Discrete / Additional Discrete

## Description



The Unit Delay Enabled block delays a signal by one sample period when the external enable signal E is on. While the enable is off, the block is disabled. It holds the current state at the same value and outputs that value. The enable signal is on when E is not 0, and off when E is 0.

You specify the block output for the first sampling period with the value of the **Initial condition** parameter.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.

## Data Type Support


The Unit Delay Enabled block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

The output has the same data type as the input u. For enumerated signals, the **Initial condition** must be of the same enumerated type as the input u.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Unit Delay Enabled

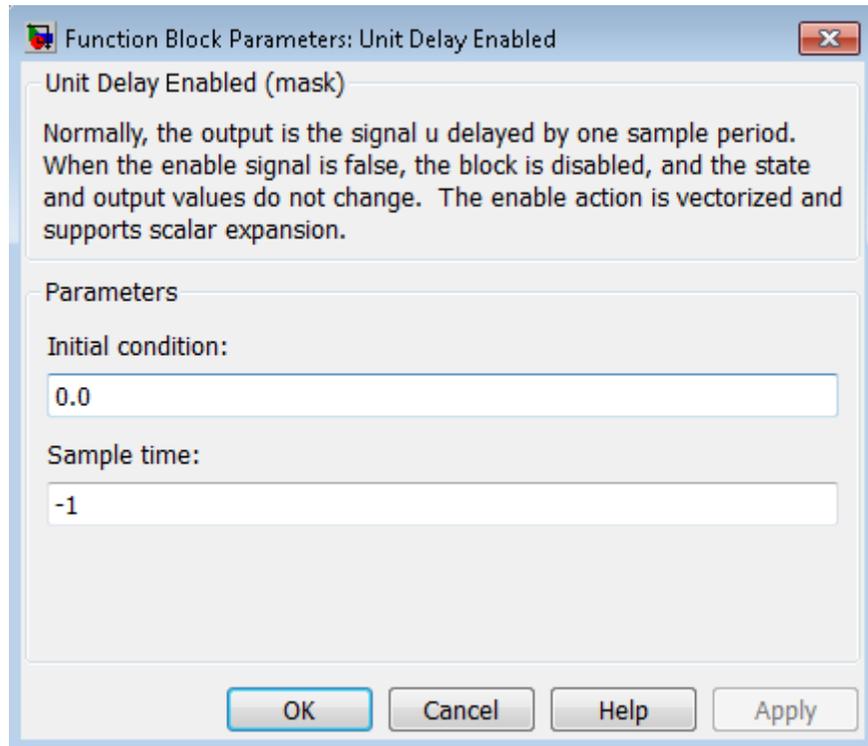

## Parameters and Dialog Box

### Initial condition

Specify the initial output of the simulation.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

## Characteristics

Direct Feedthrough	No
Sample Time	Specified in the <b>Sample time</b> parameter

Scalar Expansion	Yes
Zero-Crossing Detection	No

## See Also

Unit Delay, Unit Delay Enabled External IC, Unit Delay Enabled Resettable, Unit Delay Enabled Resettable External IC, Unit Delay External IC, Unit Delay Resettable, Unit Delay Resettable External IC, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable, Unit Delay With Preview Enabled Resettable External RV, Unit Delay With Preview Resettable, Unit Delay With Preview Resettable External RV

# Unit Delay Enabled External IC

---

## Purpose

Delay signal one sample period, if external enable signal is on, with external initial condition

## Library

Additional Math & Discrete / Additional Discrete

## Description



The Unit Delay Enabled External IC block delays a signal by one sample period when the enable signal **E** is on. While the enable is off, the block holds the current state at the same value and outputs that value. The enable **E** is on when **E** is not 0, and off when **E** is 0.

The initial condition of this block is given by the signal **IC**.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means the block inherits the **Sample time**.

## Data Type Support


The Unit Delay Enabled External IC block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

The data types of the inputs **u** and **IC** must be the same. The output has the same data type as **u** and **IC**.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Unit Delay Enabled External IC

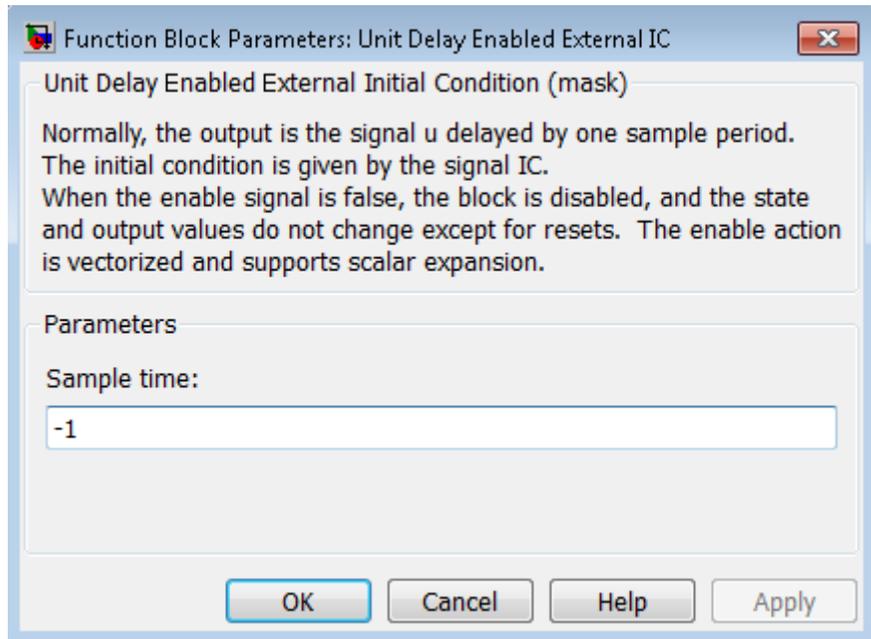

## Parameters and Dialog Box

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

## Characteristics

Direct Feedthrough	Yes, of the reset input port No, of the enable input port Yes, of the external IC port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

# Unit Delay Enabled External IC

---

## **See Also**

Unit Delay, Unit Delay Enabled, Unit Delay Enabled Resettable, Unit Delay Enabled Resettable External IC, Unit Delay External IC, Unit Delay Resettable, Unit Delay Resettable External IC, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable, Unit Delay With Preview Enabled Resettable External RV, Unit Delay With Preview Resettable, Unit Delay With Preview Resettable External RV

# Unit Delay Enabled Resettable

**Purpose** Delay signal one sample period, if external enable signal is on, with external Boolean reset

**Library** Additional Math & Discrete / Additional Discrete

**Description** The Unit Delay Enabled Resettable block combines the features of the Unit Delay Enabled and Unit Delay Resettable blocks.



The block can reset its state based on an external reset signal **R**. When the enable signal **E** is on and the reset signal **R** is false, the block outputs the input signal delayed by one sample period.

When the enable signal **E** is on and the reset signal **R** is true, the block resets the current state to the initial condition, specified by the **Initial condition** parameter, and outputs that state delayed by one sample period.

When the enable signal is off, the block is disabled, and the state and output do not change except for resets. The enable signal is on when **E** is not 0, and off when **E** is 0.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.

**Data Type Support** The Unit Delay Enabled Resettable block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated


## Unit Delay Enabled Resettable

---

The output has the same data type as the input  $u$ . For enumerated signals, the **Initial condition** must be of the same enumerated type as the input  $u$ .

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Unit Delay Enabled Resettable

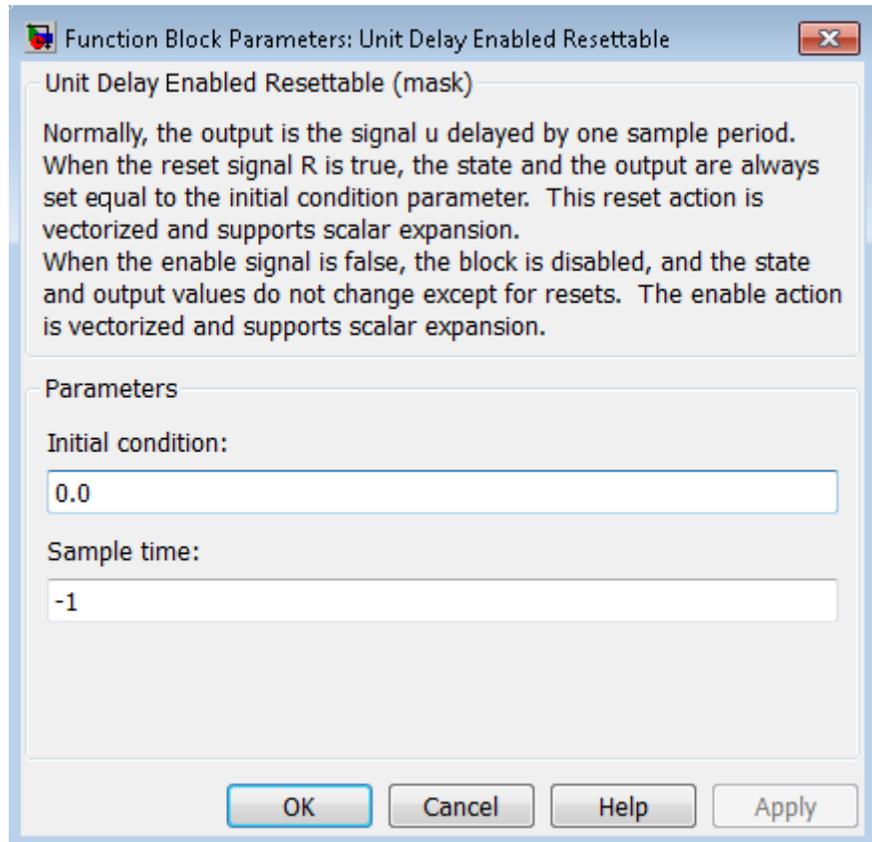

## Parameters and Dialog Box

### Initial condition

Specify the initial output of the simulation.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

# Unit Delay Enabled Resettable

---

## Characteristics

Direct Feedthrough	No, of the input port No, of the enable port Yes, of the reset port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

## See Also

Unit Delay, Unit Delay Enabled, Unit Delay Enabled External IC, Unit Delay Enabled Resettable External IC, Unit Delay External IC, Unit Delay Resettable, Unit Delay Resettable External IC, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable, Unit Delay With Preview Enabled Resettable External RV, Unit Delay With Preview Resettable, Unit Delay With Preview Resettable External RV

# Unit Delay Enabled Resettable External IC

## Purpose

Delay signal one sample period, if external enable signal is on, with external Boolean reset and initial condition

## Library

Additional Math & Discrete / Additional Discrete

## Description



The Unit Delay Enabled Resettable External IC block combines the features of the Unit Delay Enabled, Unit Delay External IC, and Unit Delay Resettable blocks.

The block can reset its state based on an external reset signal R. When the enable signal E is on and the reset signal R is false, the block outputs the input signal delayed by one sample period.

When the enable signal E is on and the reset signal R is true, the block resets the current state to the initial condition given by the signal IC, and outputs that state delayed by one sample period.

When the enable signal is off, the block is disabled, and the state and output do not change except for resets. The enable signal is on when E is not 0, and off when E is 0.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.

## Data Type Support


The Unit Delay Enabled Resettable External IC block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

The data types of the inputs u and IC must be the same. The output has the same data type as u and IC.

# Unit Delay Enabled Resettable External IC

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

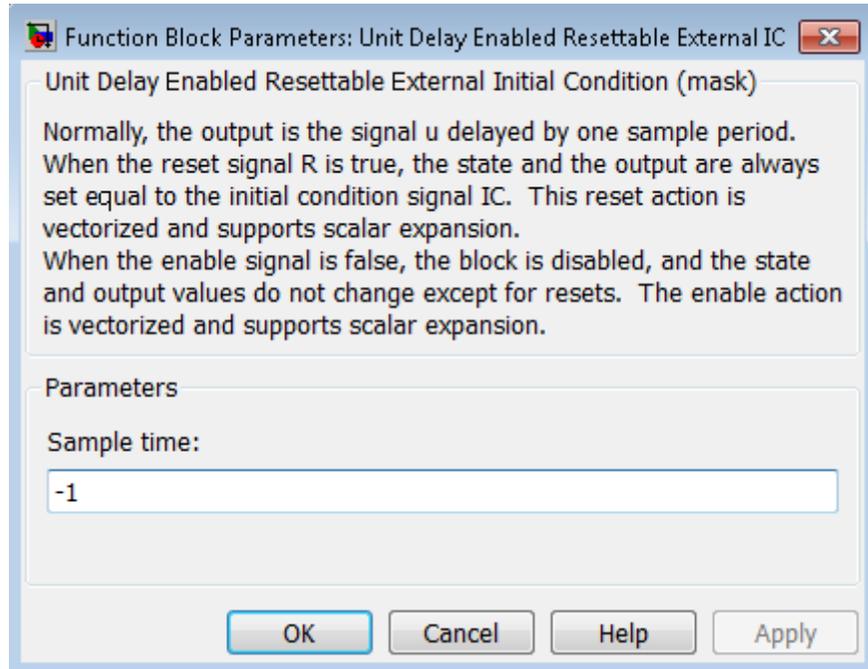

## Parameters and Dialog Box

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

# Unit Delay Enabled Resettable External IC

## Characteristics

Direct Feedthrough	No, of the input port No, of the enable port Yes, of the enable port Yes, of the external IC port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

## See Also

Unit Delay, Unit Delay Enabled, Unit Delay Enabled External IC, Unit Delay Enabled Resettable, Unit Delay External IC, Unit Delay Resettable, Unit Delay Resettable External IC, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable, Unit Delay With Preview Enabled Resettable External RV, Unit Delay With Preview Resettable, Unit Delay With Preview Resettable External RV

# Unit Delay External IC

---

## Purpose

Delay signal one sample period, with external initial condition

## Library

Additional Math & Discrete / Additional Discrete

## Description



The Unit Delay External IC block delays its input by one sample period. This block is equivalent to the  $z^{-1}$  discrete-time operator. The block accepts one input and generates one output, both of which can be scalar or vector. If the input is a vector, all elements of the vector are delayed by the same sample period.

The block's output for the first sample period is equal to the signal IC.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.


## Data Type Support

The Unit Delay External IC block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

The data types of the inputs  $u$  and IC must be the same. The output has the same data type as  $u$  and IC.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

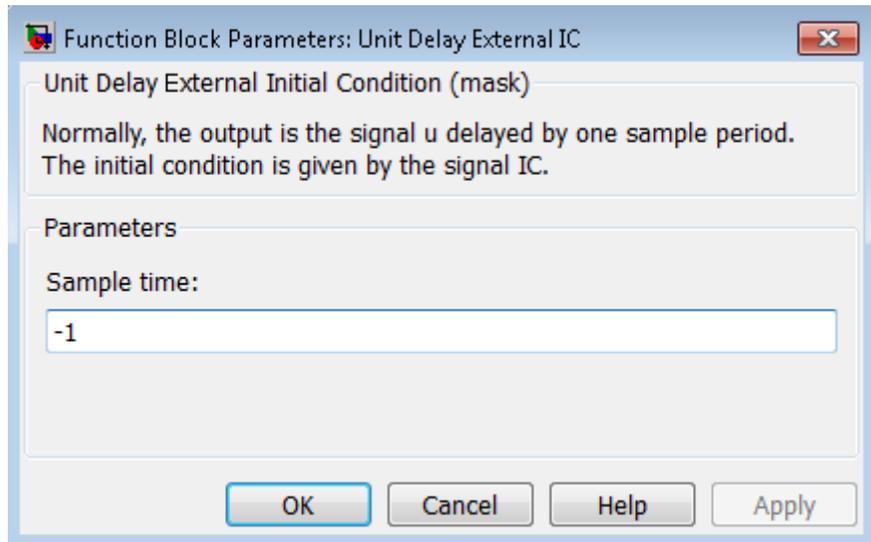

## Parameters and Dialog Box

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

## Characteristics

Direct Feedthrough	No, of the input port Yes, of the external IC port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

## See Also

Unit Delay, Unit Delay Enabled, Unit Delay Enabled External IC, Unit Delay Enabled Resettable, Unit Delay Enabled Resettable External IC, Unit Delay Resettable, Unit Delay Resettable External IC, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable,

# Unit Delay External IC

---

Unit Delay With Preview Enabled Resettable External RV, Unit Delay  
With Preview Resettable, Unit Delay With Preview Resettable External  
RV

## Purpose

Delay signal one sample period, with external Boolean reset

## Library

Additional Math & Discrete / Additional Discrete

## Description



The Unit Delay Resettable block delays a signal one sample period.

The block can reset both its state and output based on an external reset signal R. The block has two input ports, one for the input signal u and the other for the external reset signal R.

At the start of simulation, the block's **Initial condition** parameter determines its initial output. During simulation, when the reset signal is false, the block outputs the input signal delayed by one time step. When the reset signal is true, the block resets the current state and its output to the **Initial condition**.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.

## Data Type Support


The Unit Delay Resettable block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

The output has the same data type as the input u. For enumerated signals, the **Initial condition** must be of the same enumerated type as the input u.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Unit Delay Resettable

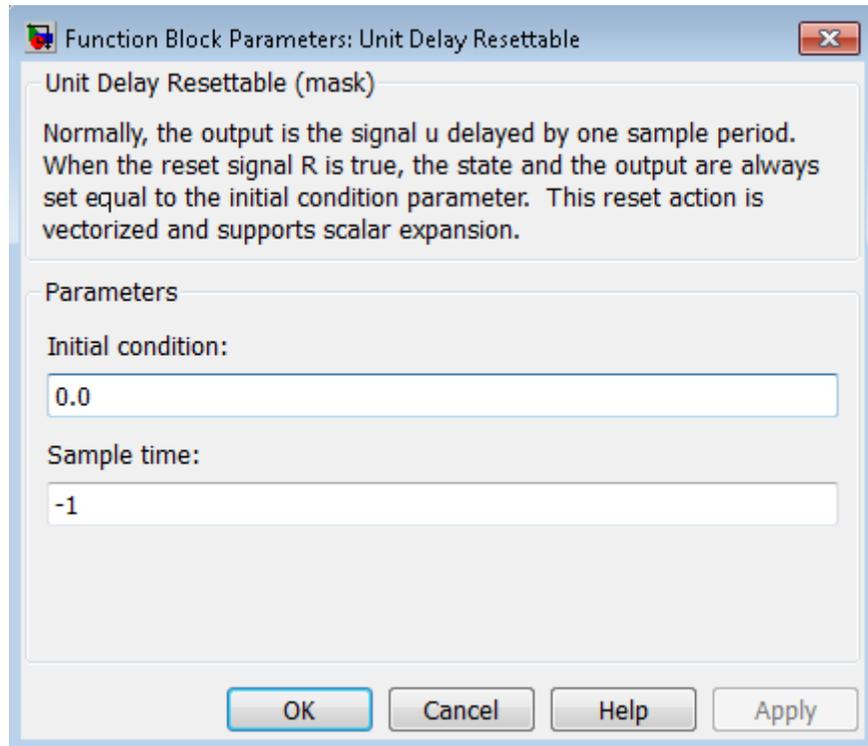

## Parameters and Dialog Box

### Initial condition

Specify the initial output of the simulation.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

## Characteristics

Direct Feedthrough	No, of the input port Yes, of the reset port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

## See Also

Unit Delay, Unit Delay Enabled, Unit Delay Enabled External IC, Unit Delay Enabled Resettable, Unit Delay Enabled Resettable External IC, Unit Delay External IC, Unit Delay Resettable External IC, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable, Unit Delay With Preview Enabled Resettable External RV, Unit Delay With Preview Resettable, Unit Delay With Preview Resettable External RV

# Unit Delay Resettable External IC

---

**Purpose** Delay signal one sample period, with external Boolean reset and initial condition

**Library** Additional Math & Discrete / Additional Discrete

**Description** The Unit Delay Resettable External IC block delays a signal one sample period.



The block can reset its state based on an external reset signal R. The block has two input ports, one for the input signal u and the other for the reset signal R. When the reset signal is false, the block outputs the input signal delayed by one time step. When the reset signal is true, the block resets the current state to the initial condition given by the signal IC and outputs that state delayed by one time step.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.


**Data Type Support** The Unit Delay Resettable External IC block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

The data types of the inputs u and IC must be the same. The output has the same data type as u and IC.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Unit Delay Resettable External IC

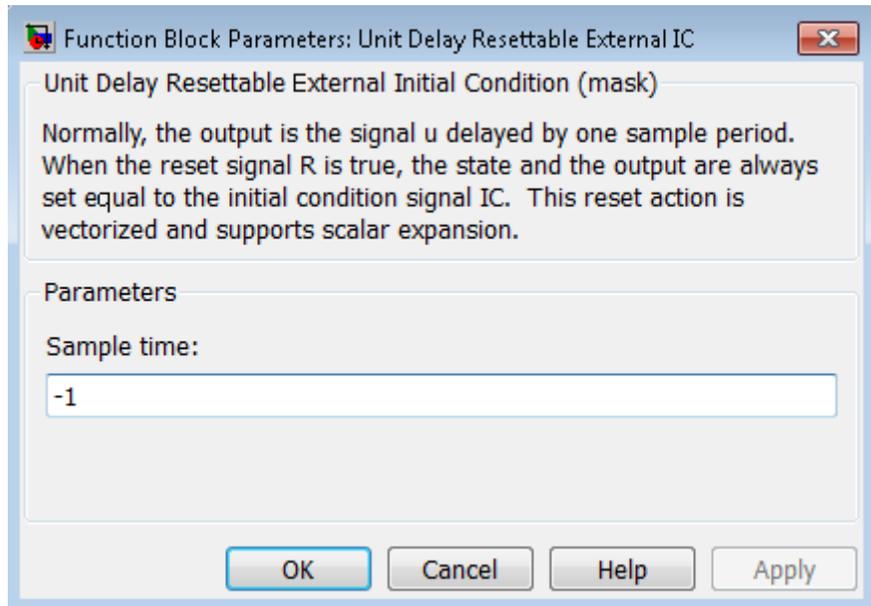

## Parameters and Dialog Box

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

## Characteristics

Direct Feedthrough	No, of the input port Yes, of the reset port Yes, of the external IC port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

# Unit Delay Resettable External IC

---

## **See Also**

Unit Delay, Unit Delay Enabled, Unit Delay Enabled External IC, Unit Delay Enabled Resettable, Unit Delay Enabled Resettable External IC, Unit Delay External IC, Unit Delay Resettable, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable, Unit Delay With Preview Enabled Resettable External RV, Unit Delay With Preview Resettable, Unit Delay With Preview Resettable External RV

# Unit Delay With Preview Enabled


## Purpose

Output signal and signal delayed by one sample period, if external enable signal is on

## Library

Additional Math & Discrete / Additional Discrete

## Description

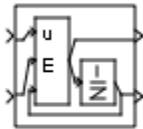

The Unit Delay With Preview Enabled block supports calculations that have feedback and depend on the current input.

The block has two input ports: one for the input signal  $u$  and one for the external enable signal  $E$ .

When the enable signal  $E$  is on, the first port outputs the signal and the second port outputs the signal delayed by one sample period. When the enable signal  $E$  is off, the block is disabled, and the state and output values do not change, except during resets.

The enable signal is on when  $E$  is not 0, and off when  $E$  is 0. This enable action is vectorized and supports scalar expansion.

Having two outputs is useful for implementing recursive calculations where the result includes the most recent inputs. The second output can feed back into calculations of the block's inputs without causing an algebraic loop. Meanwhile, the first output shows the most up-to-date calculations.

You specify the block output for the first sampling period with the value of the **Initial condition** parameter.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.

## Data Type Support

The Unit Delay With Preview Enabled block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

# Unit Delay With Preview Enabled


---

- Boolean
- Enumerated

The outputs have the same data type as the input  $u$ . For enumerated signals, the **Initial condition** must be of the same enumerated type as the input  $u$ .

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Unit Delay With Preview Enabled

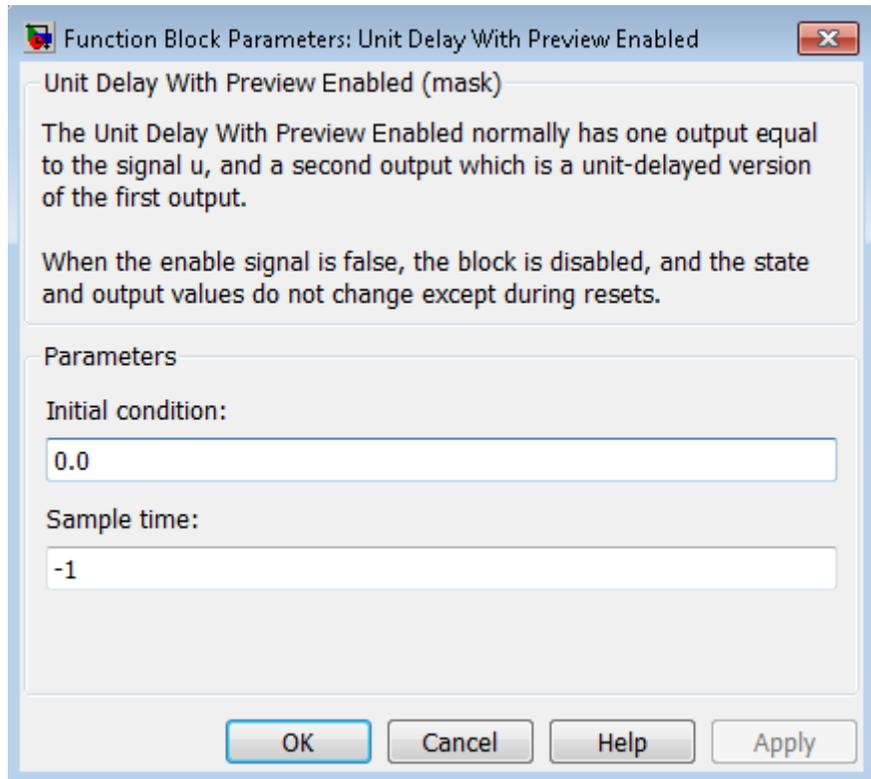

## Parameters and Dialog Box

### Initial condition

Specify the initial output of the simulation.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

# Unit Delay With Preview Enabled

---

## Characteristics

Direct Feedthrough	Yes, to first output port No, to second output port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

## See Also

Unit Delay, Unit Delay Enabled, Unit Delay Enabled External IC, Unit Delay Enabled Resettable, Unit Delay Enabled Resettable External IC, Unit Delay External IC, Unit Delay Resettable, Unit Delay Resettable External IC, Unit Delay With Preview Enabled Resettable, Unit Delay With Preview Enabled Resettable External RV, Unit Delay With Preview Resettable, Unit Delay With Preview Resettable External RV

# Unit Delay With Preview Enabled Resettable


## Purpose

Output signal and signal delayed by one sample period, if external enable signal is on, with external reset

## Library

Additional Math & Discrete / Additional Discrete

## Description

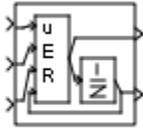

The Unit Delay With Preview Enabled Resettable block supports calculations that have feedback and depend on the current input. The block can reset its state based on a reset signal R.

The block has three input ports: one for the input signal  $u$ , one for the external enable signal  $E$ , and one for the external reset signal  $R$ .

When the enable signal  $E$  is on and the reset signal  $R$  is false, the first port outputs the signal and the second port outputs the signal delayed by one sample period.

When the enable signal  $E$  is on and the reset signal  $R$  is true, the block resets the current state to the initial condition given by the **Initial condition** parameter. The first output signal is forced to equal the initial condition. The second output signal is not affected until one time step later.

When the enable signal is off, the block is disabled, and the state and output values do not change, except during resets.

The enable signal is on when  $E$  is not 0, and off when  $E$  is 0. The enable and reset actions are vectorized and support scalar expansion.

Having two outputs is useful for implementing recursive calculations where the result includes the most recent inputs. The second output can feed back into calculations of the block's inputs without causing an algebraic loop. Meanwhile, the first output shows the most up-to-date calculations.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.

# Unit Delay With Preview Enabled Resettable

---

## Data Type Support


The Unit Delay With Preview Enabled Resettable block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

The outputs have the same data type as the input  $u$ . For enumerated signals, the **Initial condition** must be of the same enumerated type as the input  $u$ .

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Unit Delay With Preview Enabled Resettable

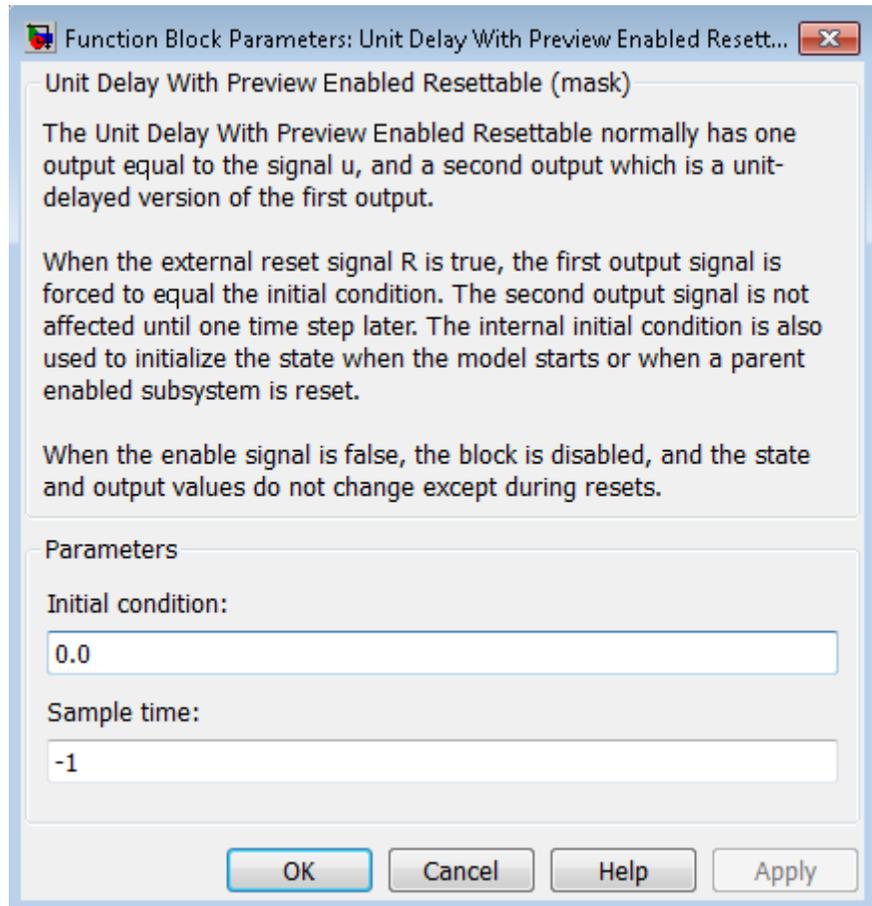

## Parameters and Dialog Box

### Initial condition

Specify the initial output of the simulation.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

# Unit Delay With Preview Enabled Resettable

---

## Characteristics

Direct Feedthrough	Yes, to first output port No, to second output port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

## See Also

Unit Delay, Unit Delay Enabled, Unit Delay Enabled External IC, Unit Delay Enabled Resettable, Unit Delay Enabled Resettable External IC, Unit Delay External IC, Unit Delay Resettable, Unit Delay Resettable External IC, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable External RV, Unit Delay With Preview Resettable, Unit Delay With Preview Resettable External RV

# Unit Delay With Preview Enabled Resettable External RV


## Purpose

Output signal and signal delayed by one sample period, if external enable signal is on, with external RV reset

## Library

Additional Math & Discrete / Additional Discrete

## Description

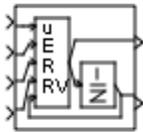

The Unit Delay With Preview Enabled Resettable External RV block supports calculations that have feedback and depend on the current input. The block can reset its state based on a reset signal R.

The block has four input ports: one for the input signal u, one for the external enable signal E, one for the external reset signal R, and one for the external reset value RV.

When the enable signal E is on and the reset signal R is false, the first port outputs the signal and the second port outputs the signal delayed by one sample period.

When the enable signal E is on and the reset signal R is true, the first output signal is forced to equal the reset value RV. The second output signal is not affected until one time step later, at which time it is equal to the reset value RV at the previous time step. The internal **Initial condition** has a direct effect on the second output only when the model starts or when a parent enabled subsystem is reset.

When the enable signal is off, the block is disabled, and the state and output values do not change, except during resets.

The enable signal is on when E is not 0, and off when E is 0. The enable and reset actions are vectorized and support scalar expansion.

Having two outputs is useful for implementing recursive calculations where the result includes the most recent inputs. The second output can feed back into calculations of the block's inputs without causing an algebraic loop. Meanwhile, the first output shows the most up-to-date calculations.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.

# Unit Delay With Preview Enabled Resettable External RV

---

## Data Type Support


The Unit Delay With Preview Enabled Resettable External RV block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

The outputs have the same data type as the input  $u$ . For enumerated signals, the **Initial condition** must be of the same enumerated type as the input  $u$ .

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Unit Delay With Preview Enabled Resettable External RV

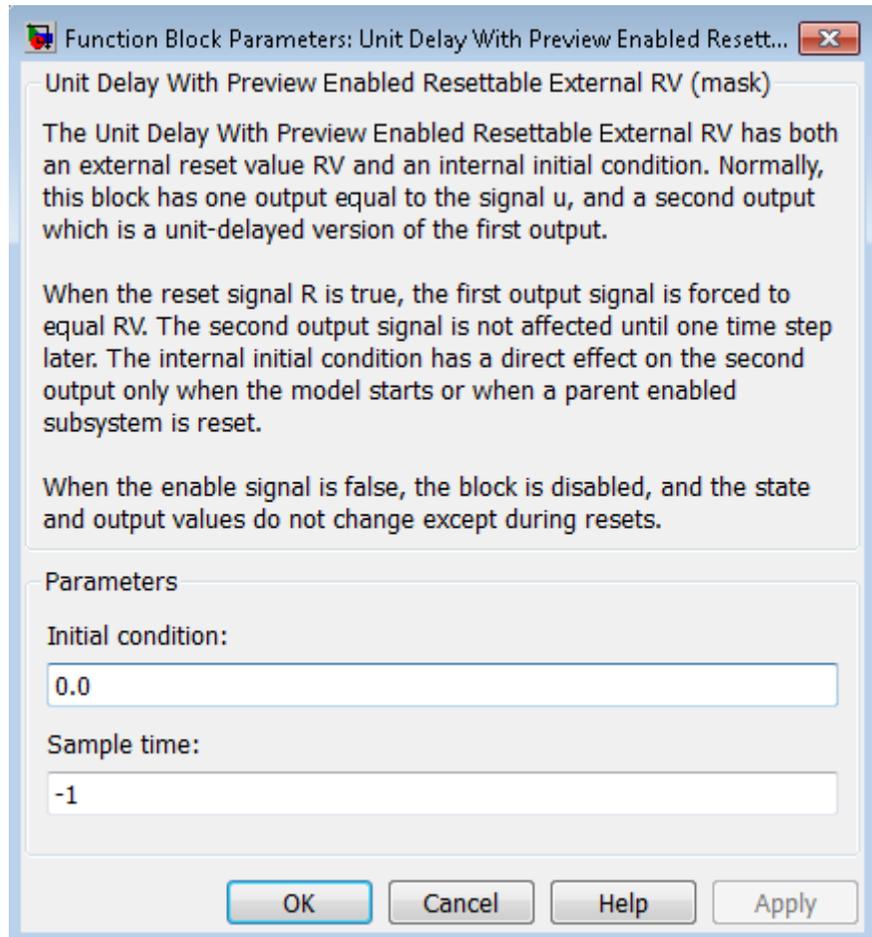

## Parameters and Dialog Box

### Initial condition

Specify the initial output of the simulation.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

# Unit Delay With Preview Enabled Resettable External RV

## Characteristics

Direct Feedthrough	Yes, to first output port No, to second output port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

## See Also

Unit Delay, Unit Delay Enabled, Unit Delay Enabled External IC, Unit Delay Enabled Resettable, Unit Delay Enabled Resettable External IC, Unit Delay External IC, Unit Delay Resettable, Unit Delay Resettable External IC, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable, Unit Delay With Preview Resettable, Unit Delay With Preview Resettable External RV

# Unit Delay With Preview Resettable


## Purpose

Output signal and signal delayed by one sample period, with external reset

## Library

Additional Math & Discrete / Additional Discrete

## Description

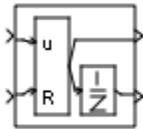

The Unit Delay With Preview Resettable block supports calculations that have feedback and depend on the current input. The block can reset its state based on a reset signal R.

The block has two input ports: one for the input signal u and one for the external reset signal R.

When the reset signal R is false, the first port outputs the signal and the second port outputs the signal delayed by one sample period.

When the reset signal R is true, the block resets the current state to the initial condition given by the **Initial condition** parameter. The first output signal is forced to equal the initial condition. The second output signal is not affected until one time step later.

This reset action is vectorized and supports scalar expansion.

Having two outputs is useful for implementing recursive calculations where the result includes the most recent inputs. The second output can feed back into calculations of the block's inputs without causing an algebraic loop. Meanwhile, the first output shows the most up-to-date calculations.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.

## Data Type Support

The Unit Delay With Preview Resettable block accepts signals of the following data types:

- Floating point
- Built-in integer
- Fixed point

# Unit Delay With Preview Resettable


---

- Boolean
- Enumerated

The outputs have the same data type as the input  $u$ . For enumerated signals, the **Initial condition** must be of the same enumerated type as the input  $u$ .

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Unit Delay With Preview Resettable

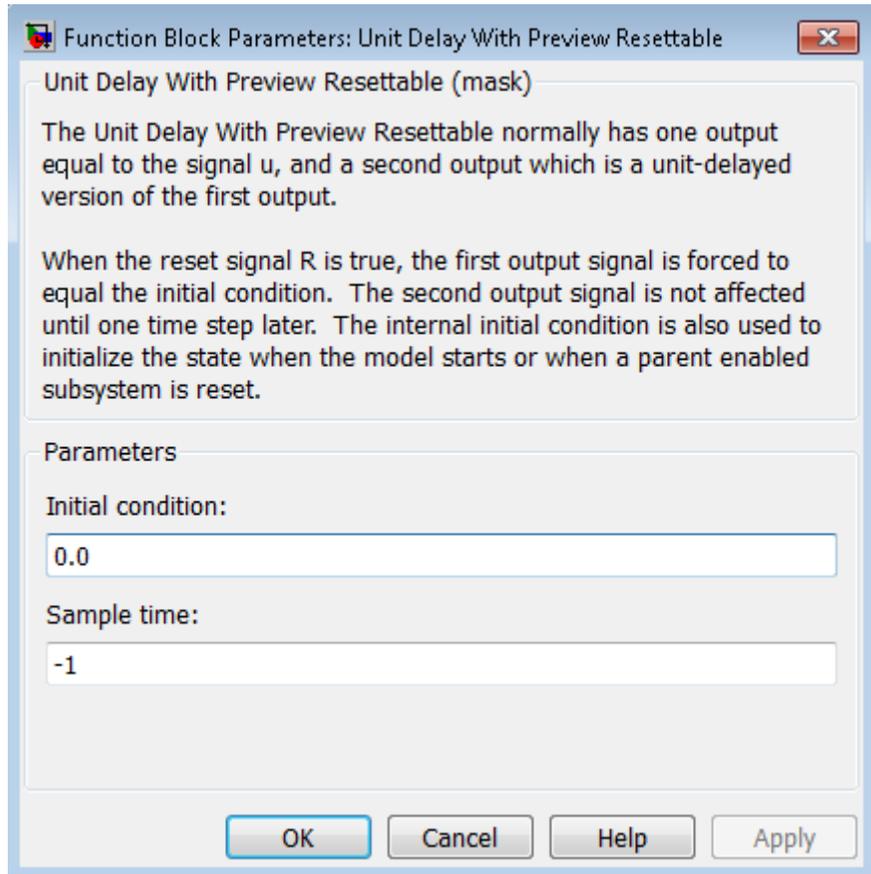

## Parameters and Dialog Box

### Initial condition

Specify the initial output of the simulation.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

# Unit Delay With Preview Resettable

---

## Characteristics

Direct Feedthrough	Yes, to first output port No, to second output port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

## See Also

Unit Delay, Unit Delay Enabled, Unit Delay Enabled External IC, Unit Delay Enabled Resettable, Unit Delay Enabled Resettable External IC, Unit Delay External IC, Unit Delay Resettable, Unit Delay Resettable External IC, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable, Unit Delay With Preview Enabled Resettable External RV, Unit Delay With Preview Resettable External RV

# Unit Delay With Preview Resettable External RV


## Purpose

Output signal and signal delayed by one sample period, with external RV reset

## Library

Additional Math & Discrete / Additional Discrete

## Description

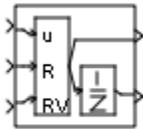

The Unit Delay With Preview Resettable External RV block supports calculations that have feedback and depend on the current input. The block can reset its state based on a reset signal R.

The block has three input ports: one for the input signal u, one for the external reset signal R, and one for the external reset value RV.

When the reset signal R is false, the first port outputs the signal and the second port outputs the signal delayed by one sample period.

When the reset signal R is true, the first output signal is forced to equal the reset value RV. The second output signal is not affected until one time step later, at which time it is equal to the reset value RV at the previous time step. The internal **Initial condition** has a direct effect on the second output only when the model starts or when a parent enabled subsystem is reset.

This reset action is vectorized and supports scalar expansion.

Having two outputs is useful for implementing recursive calculations where the result includes the most recent inputs. The second output can feed back into calculations of the block's inputs without causing an algebraic loop. Meanwhile, the first output shows the most up-to-date calculations.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means that the block inherits the **Sample time**.

## Data Type Support

The Unit Delay With Preview Resettable External RV block accepts signals of the following data types:

- Floating point
- Built-in integer

# Unit Delay With Preview Resettable External RV


---

- Fixed point
- Boolean
- Enumerated

The outputs have the same data type as the input  $u$ . For enumerated signals, the **Initial condition** must be of the same enumerated type as the input  $u$ .

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Unit Delay With Preview Resettable External RV

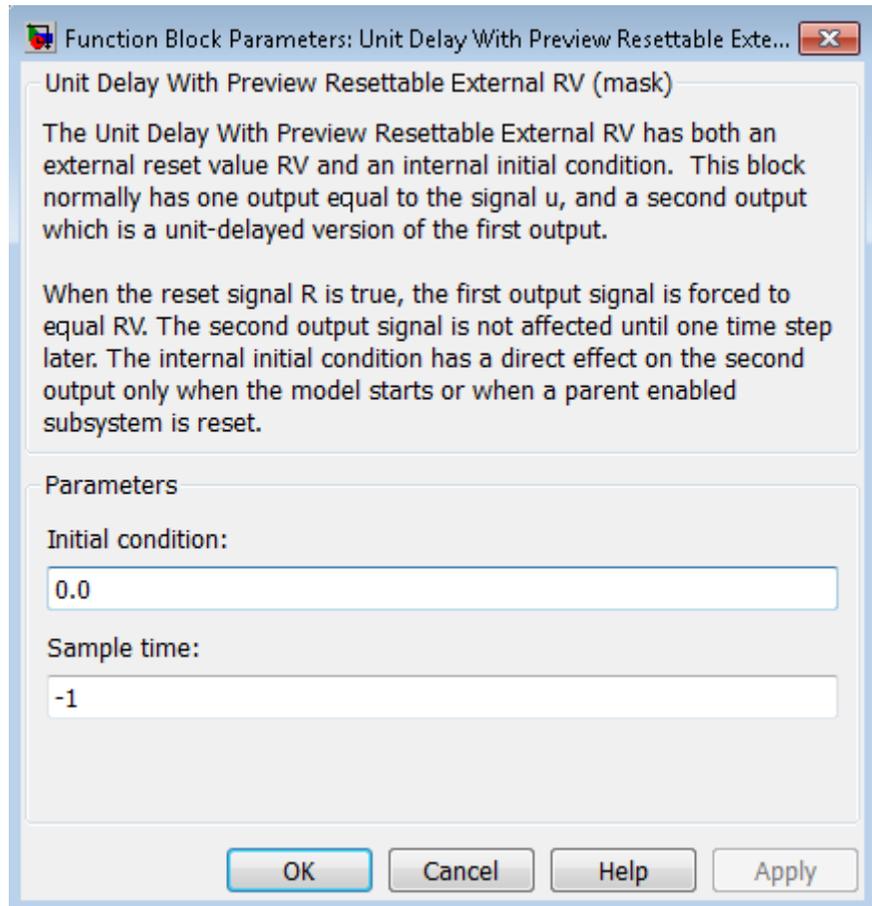

## Parameters and Dialog Box

### Initial condition

Specify the initial output of the simulation.

### Sample time

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

# Unit Delay With Preview Resettable External RV

---

## Characteristics

Direct Feedthrough	Yes, to first output port No, to second output port
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	Yes
Zero-Crossing Detection	No

## See Also



Unit Delay, Unit Delay Enabled, Unit Delay Enabled External IC, Unit Delay Enabled Resettable, Unit Delay Enabled Resettable External IC, Unit Delay External IC, Unit Delay Resettable, Unit Delay Resettable External IC, Unit Delay With Preview Enabled, Unit Delay With Preview Enabled Resettable, Unit Delay With Preview Enabled Resettable External RV, Unit Delay With Preview Resettable

# Variable Integer Delay

**Purpose** Delay input signal by variable sample period

**Library** Discrete

**Description** The Variable Integer Delay block is a variant of the Delay block that has the source of the delay length set to Input port, by default.

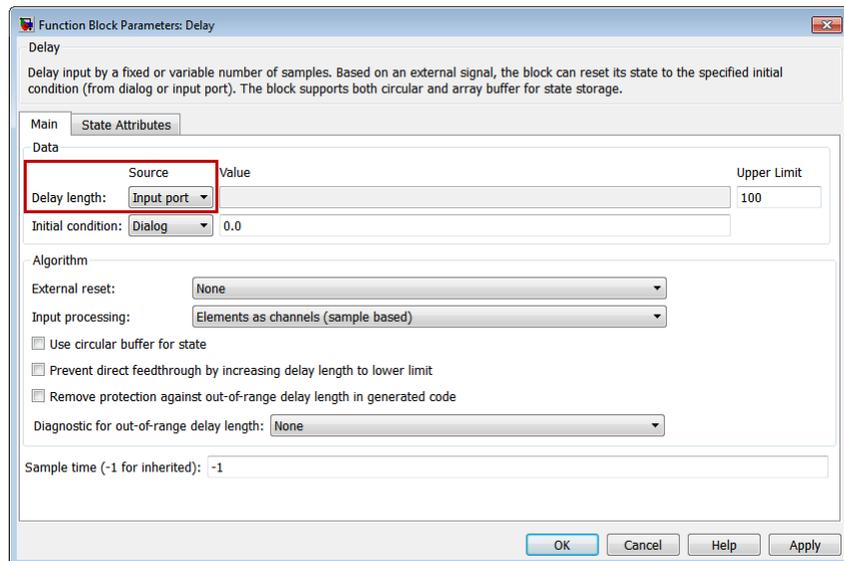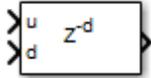

**See Also**

- Delay
- Resetable Delay

# Variable Time Delay, Variable Transport Delay

**Purpose** Delay input by variable amount of time

**Library** Continuous


**Description** The Variable Transport Delay and Variable Time Delay appear as two blocks in the Simulink block library. However, they are the same Simulink block with different settings of a **Select delay type** parameter. Use this parameter to specify the mode in which the block operates.



## Variable Time Delay

In this mode, the block has a data input, a time delay input, and a data output. (See “How to Rotate a Block” in the Simulink documentation for a description of the port order for various block orientations.) The output at the current time step equals the value of its data input at a previous time step. This time step is the current simulation time minus a delay time specified by the time delay input.

$$y(t) = u(t - t_0) = u(t - \tau(t))$$

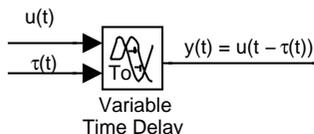

During the simulation, the block stores time and input value pairs in an internal buffer. At the start of simulation, the block outputs the value of the **Initial output** parameter until the simulation time exceeds the time delay input. Then, at each simulation step, the block outputs the signal at the time that corresponds to the current simulation time minus the delay time.

If you want the output at a time between input storing times and the solver is a continuous solver, the block interpolates linearly between points. If the time delay is smaller than the step size, the block extrapolates an output point from a previous point. For example,

# Variable Time Delay, Variable Transport Delay

consider a fixed-step simulation with a step size of 1 and the current time at  $t = 5$ . If the delay is 0.5, the block needs to generate a point at  $t = 4.5$ , but the most recent stored time value is at  $t = 4$ . Thus, the block extrapolates the input at 4.5 from the input at 4 and uses the extrapolated value as its output at  $t = 5$ .

Extrapolating forward from the previous time step can produce a less accurate result than extrapolating back from the current time step. However, the block cannot use the current input to calculate its output value because the input port does not have direct feedthrough.

If the model specifies a discrete solver, the block does not interpolate between time steps. Instead, it returns the nearest stored value that precedes the required value.

## Variable Transport Delay


In this mode, the block output at the current time step is equal to the value of its data (top, or left) input at an earlier time step equal to the current time minus a transportation delay.

$$y(t) = u(t - t_d(t))$$

Simulink software finds the transportation delay,  $t_d(t)$ , by solving the following equation:

$$\int_{t-t_d(t)}^t \frac{1}{t_i(\tau)} d\tau = 1$$

This equation involves an instantaneous time delay,  $t_i(t)$ , given by the time delay (bottom, or right) input.

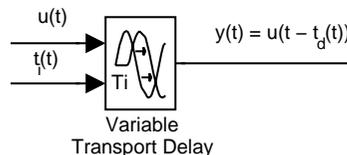

# Variable Time Delay, Variable Transport Delay

---

Suppose you want to use this block to model the fluid flow through a pipe where the fluid speed varies with time. In this case, the time delay input to the block is

$$t_i(t) = \frac{L}{v_i(t)}$$

where  $L$  is the length of the pipe and  $v_i(t)$  is the speed of the fluid.

## Data Type Support

The Variable Time Delay and Variable Transport Delay blocks accept and output real signals of type `double`.


For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

The parameters and dialog box differ, based on the mode in which the block is operating: variable time or variable transport. Most parameters exist in both modes.

The dialog box for the Variable Time Delay block appears as follows.

# Variable Time Delay, Variable Transport Delay

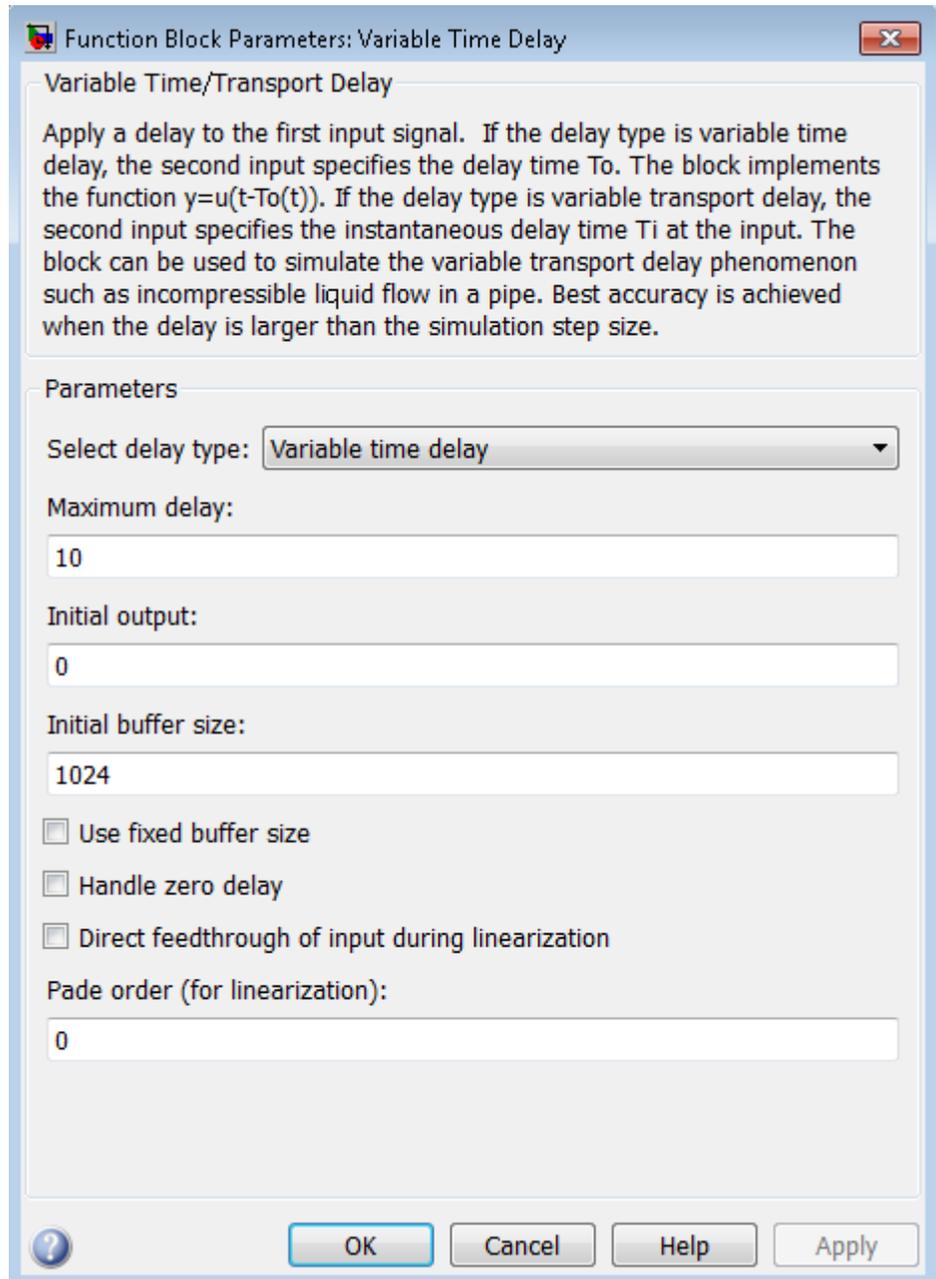

# Variable Time Delay, Variable Transport Delay

---

The dialog box for the Variable Transport Delay block appears as follows.

# Variable Time Delay, Variable Transport Delay

Function Block Parameters: Variable Transport Delay

**Variable Time/Transport Delay**

Apply a delay to the first input signal. If the delay type is variable time delay, the second input specifies the delay time  $T_0$ . The block implements the function  $y=u(t-T_0(t))$ . If the delay type is variable transport delay, the second input specifies the instantaneous delay time  $T_i$  at the input. The block can be used to simulate the variable transport delay phenomenon such as incompressible liquid flow in a pipe. Best accuracy is achieved when the delay is larger than the simulation step size.

**Parameters**

Select delay type: Variable transport delay

Maximum delay:  
10

Initial output:  
0

Initial buffer size:  
1024

Use fixed buffer size

Direct feedthrough of input during linearization

Pade order (for linearization):  
0

Absolute tolerance:  
auto

State Name: (e.g., 'position')  
"

OK Cancel Help Apply

# Variable Time Delay, Variable Transport Delay

---

## Select delay type

Specify the mode in which the block operates.

### Settings

**Default:** The Variable Time Delay block has a default value of `Variable time delay`. The Variable Transport Delay block has a default value of `Variable transport delay`.

`Variable time delay`

Specifies a Variable Time Delay block.

`Variable transport delay`

Specifies a Variable Transport Delay block.

### Dependencies

Setting this parameter to `Variable time delay` enables the **Handle zero delay** parameter.

Setting this parameter to `Variable transport delay` enables the **Absolute tolerance** and **State Name** parameters.

### Command-Line Information

**Parameter:** `VariableDelayType`

**Type:** `string`

**Value:** `'Variable transport delay' | 'Variable time delay'`

**Default:** `'Variable time delay'`

# Variable Time Delay, Variable Transport Delay

---

## **Maximum delay**

Set the maximum value of the time delay input.

## **Settings**

**Default:** 10

- This value defines the largest time delay input that this block allows. The block clips any delay that exceeds this value.
- This value cannot be negative. If the time delay becomes negative, the block clips it to zero and issues a warning message.

## **Command-Line Information**

**Parameter:** MaximumDelay

**Type:** scalar or vector

**Value:** '10'

**Default:** '10'

# Variable Time Delay, Variable Transport Delay

---

## **Initial output**

Specify the output that the block generates until the simulation time first exceeds the time delay input.

## **Settings**

**Default:** Run-to-run tunable parameter

A Run-to-run tunable parameter cannot be changed during simulation run time. However, changing it before a simulation begins will not cause Accelerator or Rapid Accelerator to regenerate code. Also, the initial output of this block cannot be inf or NaN.

## **Command-Line Information**

**Parameter:** InitialOutput

**Type:** scalar or vector

**Value:** '0'

**Default:** '0'

# Variable Time Delay, Variable Transport Delay

---

## Initial buffer size

Define the initial memory allocation for the number of input points to store.

## Settings

**Default:** 1024

- If the number of input points exceeds the initial buffer size, the block allocates additional memory.
- After simulation ends, a message shows the total buffer size needed.

## Tips

- Because allocating memory slows down simulation, choose this value carefully if simulation speed is an issue.
- For long time delays, this block might use a large amount of memory, particularly for dimensionalized input.

## Command-Line Information

**Parameter:** MaximumPoints

**Type:** scalar

**Value:** '1024'

**Default:** '1024'

# Variable Time Delay, Variable Transport Delay

---

## Use fixed buffer size

Specify use of a fixed-size buffer to save input data from previous time steps.

### Settings

**Default:** Off

On

The block uses a fixed-size buffer.

Off

The block does not use a fixed-size buffer.

The **Initial buffer size** parameter specifies the buffer size. If the buffer is full, new data replaces data already in the buffer. Simulink software uses linear extrapolation to estimate output values that are not in the buffer.

---

**Note** ERT or GRT code generation uses a fixed-size buffer even if you do not select this check box.

---

### Tips

- If the input data is linear, selecting this check box can save memory.
- If the input data is nonlinear, do not select this check box. Doing so might yield inaccurate results.

### Command-Line Information

**Parameter:** FixedBuffer

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Variable Time Delay, Variable Transport Delay

---

## Handle zero delay

Convert this block to a direct feedthrough block.

### Settings

Default: Off



On

The block uses direct feedthrough.



Off

The block does not use direct feedthrough.

## Dependency

Setting **Select delay type** to Variable time delay enables this parameter.

## Command-Line Information

**Parameter:** ZeroDelay

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Variable Time Delay, Variable Transport Delay

---

## Direct feedthrough of input during linearization

Cause the block to output its input during linearization and trim, which sets the block mode to direct feedthrough.

### Settings

**Default:** Off

On  
Enables direct feedthrough of input.

Off  
Disables direct feedthrough of input.

### Tips

- Selecting this check box can cause a change in the ordering of states in the model when you use the functions `linmod`, `dlinmod`, or `trim`. To extract this new state ordering:

- 1 Compile the model using the following command, where `model` is the name of the Simulink model.

```
[sizes, x0, x_str] = model([],[],[],'lincompile');
```

- 2 Terminate the compilation with the following command.

```
model([],[],[],'term');
```

- The output argument `x_str`, which is a cell array of the states in the Simulink model, contains the new state ordering. When you pass a vector of states as input to the `linmod`, `dlinmod`, or `trim` functions, the state vector must use this new state ordering.

### Command-Line Information

**Parameter:** `TransDelayFeedthrough`

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

# Variable Time Delay, Variable Transport Delay

---

## **Pade order (for linearization)**

Set the order of the Pade approximation for linearization routines.

### **Settings**

**Default:** 0

- The default value is 0, which results in a unity gain with no dynamic states.
- Setting the order to a positive integer  $n$  adds  $n$  states to your model, but results in a more accurate linear model of the transport delay.

### **Command-Line Information**

**Parameter:** PadeOrder

**Type:** string

**Value:** '0'

**Default:** '0'

# Variable Time Delay, Variable Transport Delay

---

## Absolute tolerance

Specify the absolute tolerance for computing the block state.

**Default:** auto

- You can enter auto, -1, or a positive real scalar or vector.
- If you enter auto, or -1, then Simulink uses the absolute tolerance value in the Configuration Parameters dialog box (see “Solver Pane”) to compute the block states.
- If you enter a real scalar, then that value overrides the absolute tolerance in the Configuration Parameters dialog box for computing all block states.
- If you enter a real vector, then the dimension of that vector must match the dimension of the continuous states in the block. These values override the absolute tolerance in the Configuration Parameters dialog box.

## Dependency

Setting **Select delay type** to Variable transport delay enables this parameter.

## Command-Line Information

**Parameter:** AbsoluteTolerance

**Type:** string, scalar, or vector

**Value:** 'auto' | '-1' | any positive real scalar or vector

**Default:** 'auto'

## State Name (e.g., 'position')

Assign a unique name to each state.

## Settings

**Default:** ' '

If this field is blank, no name assignment occurs.

## Tips

- To assign a name to a single state, enter the name between quotes, for example, 'velocity'.

# Variable Time Delay, Variable Transport Delay

---

- To assign names to multiple states, enter a comma-delimited list surrounded by braces, for example, {'a', 'b', 'c'}. Each name must be unique.
- The state names apply only to the selected block.
- The number of states must divide evenly among the number of state names.
- You can specify fewer names than states, but you cannot specify more names than states.

For example, you can specify two names in a system with four states. The first name applies to the first two states and the second name to the last two states.

- To assign state names with a variable in the MATLAB workspace, enter the variable without quotes. A variable can be a string, cell array, or structure.

## Dependency

Setting **Select delay type** to Variable transport delay enables this parameter.

## Command-Line Information

**Parameter:** ContinuousStateAttributes

**Type:** string

**Value:** ' ' | user-defined


**Default:** ' '

## Examples

The `sldemo_VariableTransportDelay` and `sldemo_VariableTransportDelay_pipe` models show how you can use the Variable Transport Delay block.


# Variable Time Delay, Variable Transport Delay

The `sldemo_VariableTransportDelay` model shows how to model vertical wheel displacement on a one-dimensional car. The Variable Transport Delay block models the delay in vertical displacement of the rear wheel when the road profile changes:

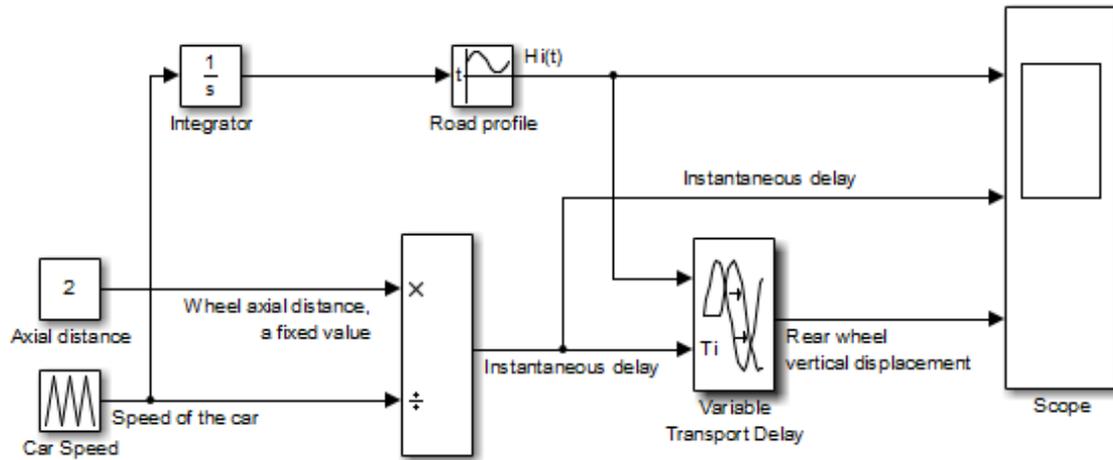

# Variable Time Delay, Variable Transport Delay

The `sldemo_VariableTransportDelay_pipe` model shows how to model incompressible flow through a fixed-length pipe. The Variable Transport Delay block models the delay in temperature change at the outlet when fluid flow occurs:

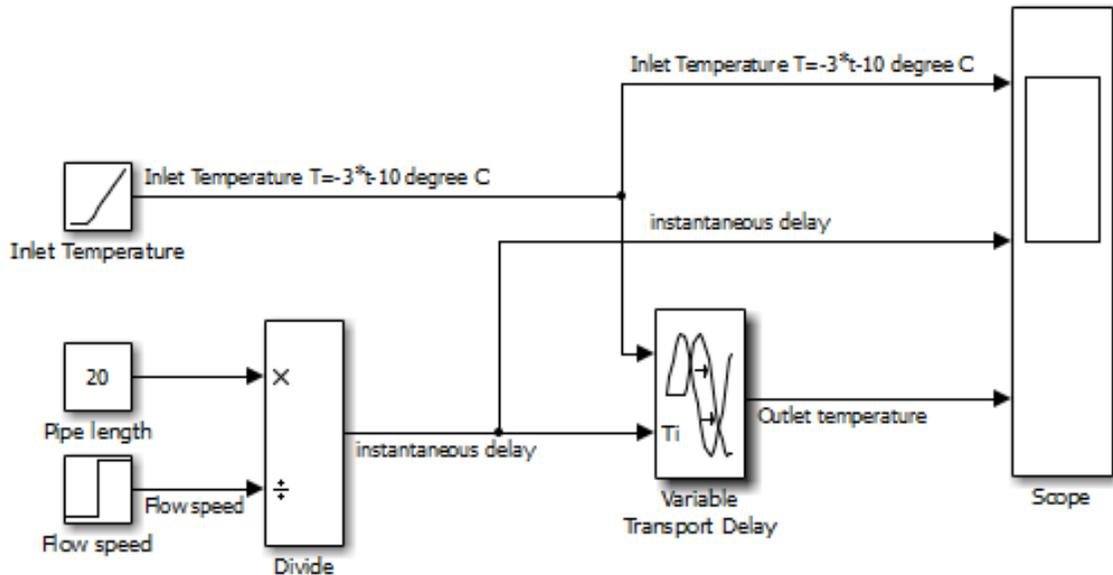

## Characteristics

Direct Feedthrough	Yes, of the time delay (second) input
Sample Time	Continuous
Scalar Expansion	Yes, of input and all parameters except <b>Initial buffer size</b>
Dimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Transport Delay

# Variant Subsystem

---

**Purpose** Represent a subsystem with multiple subsystems

**Library** Ports & Subsystems

## Description



Variant subsystems provide multiple implementations for a subsystem where only one implementation is active during simulation. You can programmatically swap out the active implementation with another implementation without modifying the model.

The Variant Subsystem block includes multiple child subsystems, where only one subsystem is active during simulation. The Variant Subsystem block can include Inport, Outport, and Connection Port blocks. There are no drawn connections inside the Variant Subsystem block. Each child subsystem is associated with a variant control, which is created in the base workspace. The variant control that evaluates to true, determines the active variant.

## Data Type Support

For information on the data types accepted by a subsystem input ports, see Inport block. For information on data types output by a subsystem output ports, see Outport block.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.


## **Mapping Inports and Outports**

Each subsystem block within a Variant Subsystem represents one variant configuration. These subsystem blocks can have different numbers of inports and outports than their parent variant subsystem, provided the following conditions are satisfied.

- The inport names on a variant are a subset of the inport names used by the parent variant subsystem.
- The outport names on a variant are a subset of the outport names used by the parent variant subsystem.

During simulation, Simulink disables the inactive ports in a variant subsystem block.

# Variant Subsystem

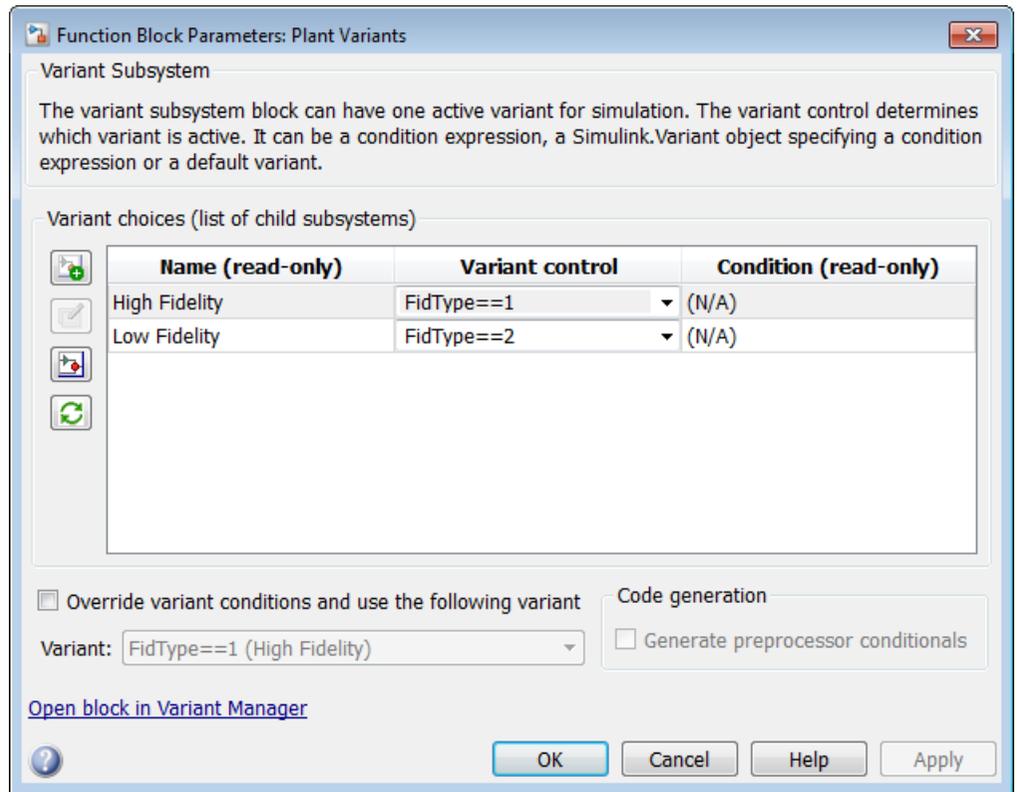

## Parameters and Dialog Box

- “Variant choices (list of child subsystems)” on page 1-2097
- “Name (read-only)” on page 1-2099
- “Variant Control” on page 1-2100
- “Condition (read-only)” on page 1-2101
- “Override variant conditions and use following variant” on page 1-2102
- “Variant” on page 1-2103
- “Generate preprocessor conditionals” on page 1-2104

## Variant choices (list of child subsystems)

Displays a table of variant choices, variant control, and conditions. The Variant control that evaluates to true determines the active variant.

### Settings

**Default:** The table has a row for each subsystem in the Variant Subsystem block. If the Variant Subsystem block does not contain any subsystems, then the table is empty. See each column parameter for its default value:

- “Name (read-only)” on page 1-2099
- “Variant Control” on page 1-2100
- “Condition (read-only)” on page 1-2101

### Tip

You can use buttons to the left of the **Variant choices** table to modify the elements in the table.

To...	Click...
<b>Create and add a new subsystem choice:</b> Places a new subsystem choice in the table and creates a new subsystem block in the Variant Subsystem block diagram.	
<b>Create/Edit selected variant object:</b> Creates a Simulink.Variant object in the base workspace and opens the Simulink.Variant object parameter dialog box to specify the variant <b>Condition</b> .	

# Variant Subsystem

---

To...	Click...
<b>Open selected subsystem variant choice:</b> Opens the subsystem block diagram for the selected row in the <b>Variant choices</b> table.	
<b>Refresh dialog information from variant subsystem contents:</b> Updates the <b>Variant choices</b> table according to the Subsystem block configuration and values of the variant control in the base workspace.	

## See Also

- “Define and Configure Variants”
- “Switching Between Variants”

## **Name (read-only)**

Name of the subsystem (a subsystem contained in the Variant Subsystem block)

## **Settings**

A read only field, based on the subsystems contained in the Variant Subsystem block. To add a new subsystem to the Variant Subsystem block, click the **Create and add a new subsystem choice** button



# Variant Subsystem

---

## Variant Control

Displays the variant controls available in the base workspace. The variant control can be a boolean condition expression, or a `Simulink.Variant` object representing a boolean condition expression. If you want to generate code for your model, you must define the control variables as `Simulink.Parameter` objects.

### Settings

**Default:** Variant

To enter a variant name, double-click a **Variant control** cell in a new row and type in the variant control expression.

### Command-Line Information

**Structure field:** Represented by the `variant.Name` field in the Variant parameter structure

**Type:** string

**Value:** Variant control that is associated with the variant choice.

**Default:** ''

**Condition (read-only)**

Displays the **Condition** for the variant controls that are of type `Simulink.Variant` object.

**Settings**

A read-only field, based on the condition for the associated variant control in the base workspace. Create or change a variant condition in the `Simulink.Variant` parameter dialog box or in the base workspace.

**See Also**

- “Create, Export, and Reuse Variant Controls”
- `Simulink.Variant`

# Variant Subsystem

---

## Override variant conditions and use following variant

Specify whether to designate the active variant from the evaluation of the variant conditions or from the value of the **Variant** parameter.

### Settings

**Default:** Off



On

Override the variant conditions and set the active variant to the variant choice represented by the **Variant** field.



Off

Determine the active variant by the value of the variant conditions.

### Dependencies

This parameter enables **Variant**.

### Command-Line Information

**Parameter:** OverrideUsingVariant

**Type:** string

**Value:** '' if no overriding variant is specified.

**Default:** ''

### See Also

- “Set and Open Active Variants”

## Variant

Specify the name of the variant to use if you select **Override variant conditions and use the following variant**.

### Settings

**Default:** ''

Must be a valid MATLAB identifier.

### Tips

You can use the **Variant** drop-down list to see a list of all variants currently in the base workspace.

### Dependencies

**Enable variants** and **Override variant conditions and use the following variant** enables this parameter.

### Command-Line Information

**Parameter:** OverrideUsingVariant

**Type:** string

**Value:** Specified by the variant control expression.

### See Also

- Simulink.Variant

# Variant Subsystem

---

## Generate preprocessor conditionals

Control whether generated code contains preprocessor conditionals for this Variant Subsystem block.

### Settings

**Default:** Disabled

### Dependencies

- The check box is available for generating only ERT targets.
- **Override variant conditions and use following variant** is cleared ('off')
- **Model Configuration Parameters > Optimization > Signals and Parameters > Inline parameters** is selected ('on')
- **Model Configuration Parameters > Code Generation > Interface > Generate preprocessor conditionals** is set to **Use local settings**.

### Command-Line Information

**Parameter:** GeneratePreprocessorConditionals

**Type:** string

**Value:** 'off' | 'on'

**Default:** 'off'

### See Also

- “Define and Configure Variants”
- “Variant Systems”

# Vector Concatenate, Matrix Concatenate

---

## Purpose

Concatenate input signals of same data type to create contiguous output signal

## Library

Math Operations, Signal Routing

## Description

The Concatenate block concatenates the signals at its inputs to create an output signal whose elements reside in contiguous locations in memory.



---

**Tip** The Concatenate block is useful for creating an output signal that is nonvirtual. However, to create a vector of function calls, use a Mux block instead.

---

You use a Concatenate block to define an array of buses. For details about defining an array of buses, see “Combine Buses into an Array of Buses”.

The Concatenate block operates in either vector or multidimensional array concatenation mode, depending on the setting of its **Mode** parameter. In either case, the block concatenates the inputs from the top to bottom, or left to right, input ports.

### Vector Mode

In vector mode, all input signals must be either vectors or row vectors [1xM matrices] or column vectors [Mx1 matrices] or a combination of vectors and either row or column vectors. The output is a vector if all inputs are vectors.

The output is a row or column vector if any of the inputs are row or column vectors, respectively.


### Multidimensional Array Mode

Multidimensional array mode accepts vectors and arrays of any size. It assumes that the trailing dimensions are all ones for input signals with lower dimensionality. For example, if the output is 4-D and the input is [2x3] (2-D) this block treats the input as [2x3x1x1]. The output is always an array. The block’s **Concatenate dimension**


# Vector Concatenate, Matrix Concatenate

parameter allows you to specify the output dimension along which the block concatenates its input arrays.

If you set the **Concatenate dimension** parameter to 2 and inputs are 2-D matrices, the block performs horizontal matrix concatenation and places the input matrices side-by-side to create the output matrix, for example:

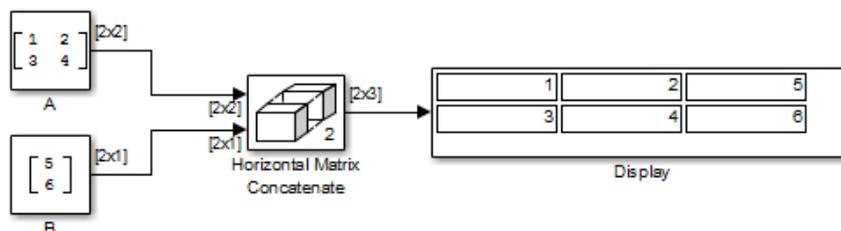


If you set the **Concatenate dimension** parameter to 1 and inputs are 2-D matrices, the block performs vertical matrix concatenation and stacks the input matrices on top of each other to create the output matrix, for example:

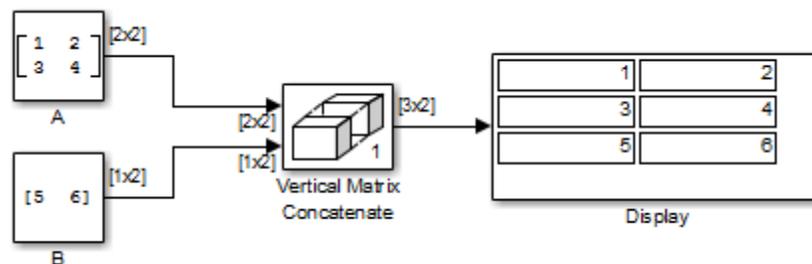

For horizontal concatenation, the input matrices must have the same column dimension. For vertical concatenation, the input matrices must have the same row dimension. All input signals must have the same dimension for all dimensions other than the concatenation dimensions.

# Vector Concatenate, Matrix Concatenate

If you set the **Mode** parameter to Multidimensional array, the **Concatenate dimension** parameter to 3, and the inputs are 2-D matrices, the block performs multidimensional matrix concatenation, for example:

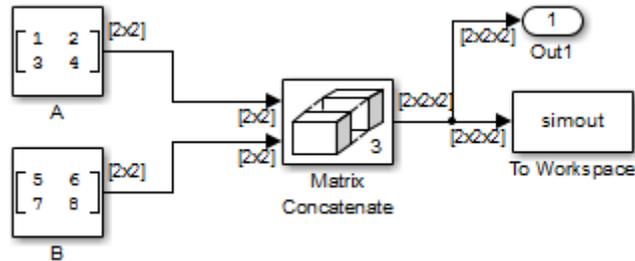

## Data Type Support

Accepts signals of any data type that Simulink supports. All inputs must be of the same data type. Outputs have the same data type as the input.


For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Vector Concatenate, Matrix Concatenate

## Parameters and Dialog Box


The parameters and dialog box differ, based on the mode in which the block is operating: vector or matrix. Most parameters exist in both modes.

The dialog box for the Vector Concatenate block appears as follows.

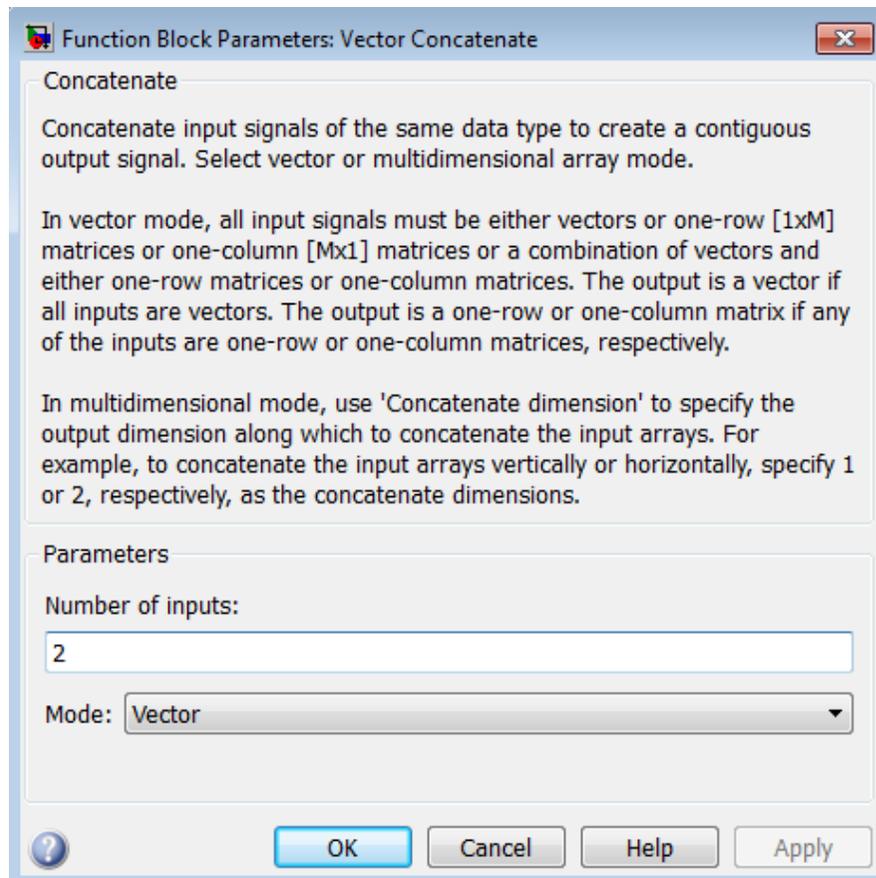

# Vector Concatenate, Matrix Concatenate

The dialog box for the Matrix Concatenate block appears as follows.

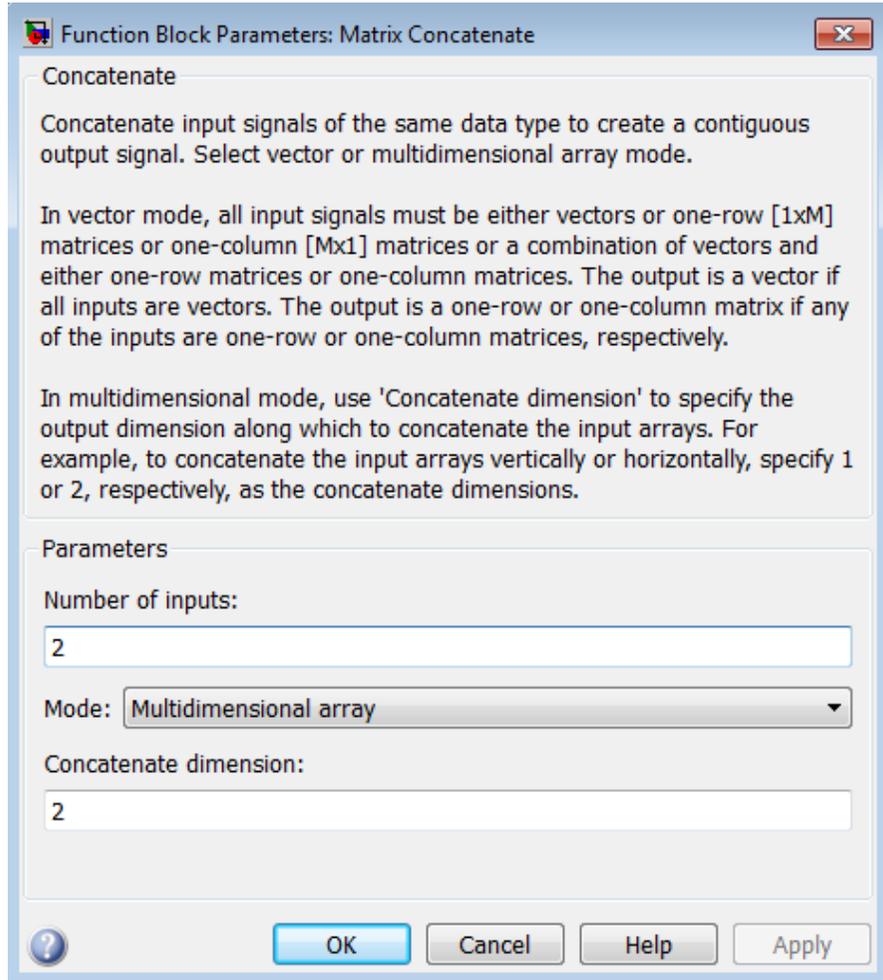

# Vector Concatenate, Matrix Concatenate

---

## **Number of inputs**

Specifies the number of inputs for the block.

## **Settings**

Default: 2

## **Command-Line Information**

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Vector Concatenate, Matrix Concatenate

---

## Mode

Select the type of concatenation that this block performs.

## Settings

**Default:** Vector (for the Vector Concatenate block), Multidimensional array (for the Matrix Concatenate block)

### Vector

Perform vector concatenation (see “Vector Mode” on page 1-2105 for details).

### Multidimensional array

Perform matrix concatenation (see “Multidimensional Array Mode” on page 1-2105 for details).

## Dependency

This parameter enables **Concatenate dimension**.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

# Vector Concatenate, Matrix Concatenate

---

## Concatenate dimension

Specifies the output dimension along which to concatenate the input arrays.

## Settings

**Default:** 2

- Enter 1 to concatenate input arrays vertically.
- Enter 2 to concatenate input arrays horizontally.
- Enter a higher dimension to perform multidimensional concatenation on the inputs.

## Dependency

Selecting `Multidimensional array` for **Mode** enables this parameter.

## Command-Line Information

See “Block-Specific Parameters” on page 7-113 for the command-line information.

## Characteristics

Direct Feedthrough	Yes
Sample Time	Inherited from driving block
Scalar Expansion	No
Dimensionalized	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No


## See Also

`cat` in the MATLAB reference documentation

**Purpose** Support calculations involving sample time

**Library** Signal Attributes

**Description** The Weighted Sample Time block is an implementation of the Weighted Sample Time Math block. See Weighted Sample Time Math for more information.

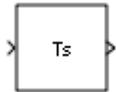

# Weighted Sample Time Math

---

**Purpose** Support calculations involving sample time

**Library** Math Operations

**Description** The Weighted Sample Time Math block adds, subtracts, multiplies, or divides its input signal,  $u$ , by a weighted sample time,  $T_s$ . If the input signal is continuous,  $T_s$  is the sample time of the Simulink model. Otherwise,  $T_s$  is the sample time of the discrete input signal.

You specify the math operation with the **Operation** parameter. Additionally, you can specify to use only the weight with either the sample time or its inverse.

Enter the weighting factor in the **Weight value** parameter. If the weight,  $w$ , is 1, that value does not appear in the equation on the block icon.

The block computes its output using the precedence rules for MATLAB operators (see “Operator Precedence” in the MATLAB documentation). For example, if the **Operation** parameter specifies  $+$ , the block calculates output using this equation:

$$u + (T_s * w)$$

However, if the **Operation** parameter specifies  $/$ , the block calculates output using this equation:

$$(u / T_s) / w$$

**Data Type Support** The Weighted Sample Time Math block accepts signals of the following data types:


- Floating point
- Built-in integer
- Fixed point
- Boolean

# Weighted Sample Time Math

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

## Parameters and Dialog Box

The **Main** pane of the Weighted Sample Time Math block dialog box appears as follows:

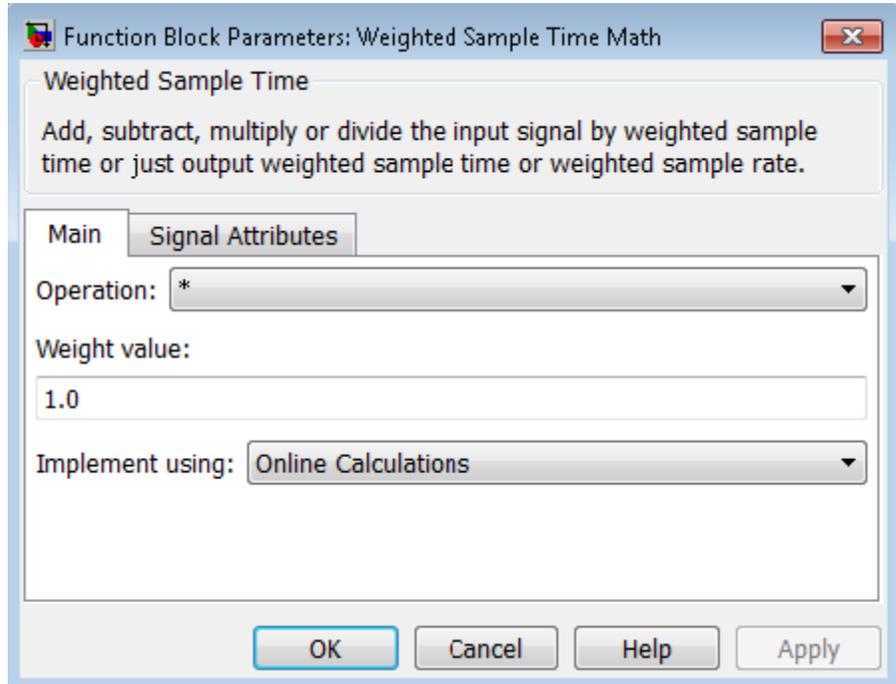

### Operation

Specify operation to use: +, -, \*, /, Ts Only, or 1/Ts Only.

### Weight value

Enter the weight of sample time.

# Weighted Sample Time Math

---

## Implement using

Select one of two modes: online calculations or offline scaling adjustment. This parameter is visible only when you set **Operation** to \* or /.

Result of ( $T_s * w$ )	Output Data Type of Two Modes	Block Execution
A power of 2, or an integer value	The same, when <b>Output data type</b> is Inherit: Inherit via internal rule	Equally efficient in both modes
Not power of 2 and not an integer value	Different	More efficient for the offline scaling mode


---

**Note** When the **Implement using** parameter is not visible, operations default to online calculations.

---

The **Signal Attributes** pane of the Weighted Sample Time Math block dialog box appears as follows:

# Weighted Sample Time Math

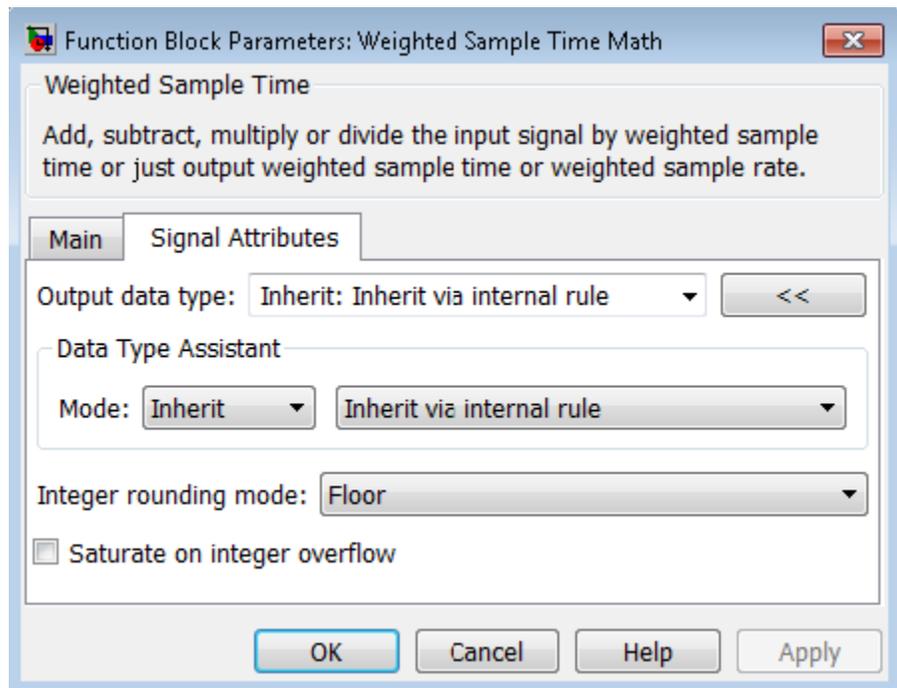

**Tip** The **Saturate on integer overflow** parameter is visible only if:

- The **Operation** parameter specifies + or -.
- The **Operation** parameter specifies \* or / and the **Implement using** parameter specifies Online Calculations.

## Output data type

Specify whether the block inherits the output data type by an internal rule or back propagation.

# Weighted Sample Time Math

---

**Tip** If you enter an expression in the edit field, the expression must evaluate to one of the two inherit rules.

---

## Integer rounding mode

Specify the rounding mode for fixed-point operations. For more information, see “Rounding”. in the Fixed-Point Designer documentation.

## Saturate on integer overflow

Action	Reasons for Taking This Action	What Happens for Overflows	Example
Select this check box.	Your model has possible overflow, and you want explicit saturation protection in the generated code.	Overflows saturate to either the minimum or maximum value that the data type can represent.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the 8-bit integer. With the check box selected, the block output saturates at 127. Similarly, the block output saturates at a minimum output value of -128.
Do not select this check box.	You want to optimize efficiency of your generated code.  You want to avoid overspecifying how a block handles out-of-range signals.	Overflows wrap to the appropriate value that is representable by the data type.	The maximum value that the <code>int8</code> (signed, 8-bit integer) data type can represent is 127. Any block operation result greater than this maximum value causes overflow of the

# Weighted Sample Time Math

Action	Reasons for Taking This Action	What Happens for Overflows	Example
	For more information, see “Checking for Signal Range Errors”.		8-bit integer. With the check box cleared, the software interprets the overflow-causing value as <code>int8</code> , which can produce an unintended result. For example, a block result of 130 (binary 1000 0010) expressed as <code>int8</code> , is -126.

When you select this check box, saturation applies to every internal operation on the block, not just the output or result. Usually, the code generation process can detect when overflow is not possible. In this case, the code generator does not produce saturation code.

## Characteristics

Direct Feedthrough	For all math operations except $T_s$ and $1/T_s$
Scalar Expansion	No, the weight is always a scalar
Zero-Crossing Detection	No

# While Iterator

---

**Purpose** Repeatedly execute contents of subsystem at current time step while condition is satisfied

**Library** Ports & Subsystems

## Description



```
> cond while {  
    ...  
> IC }
```

The While Iterator block, when placed in a subsystem, repeatedly executes the contents of the subsystem at the current time step while a specified condition is true.

---

**Note** Placing a While Iterator block in a subsystem makes it an atomic subsystem if it is not already an atomic subsystem.

---

The output of a While Iterator subsystem cannot be a function-call signal. Otherwise, Simulink displays an error when you simulate the model or update the diagram.

You can use this block to implement the block-diagram equivalent of a C program while or do-while loop. In particular, use **While loop type** to select one of the following while loop modes:

- do-while

In this mode, the While Iterator block has one input, the while condition input, whose source must reside in the subsystem. At each time step, the block runs all the blocks in the subsystem once and then checks whether the while condition input is true. If the input is true, the iterator block runs the blocks in the subsystem again. This process continues as long as the while condition input is true

and the number of iterations is less than or equal to the **Maximum number of iterations**.

- **while**

In this mode, the iterator block has two inputs: a while condition input and an initial condition (IC) input. The source of the initial condition signal must be external to the while subsystem. At the beginning of the time step, if the IC input is true, the iterator block executes the contents of the subsystem and then checks the while condition input. If the while condition input is true, the iterator executes the subsystem again. This process continues as long as the while condition input is true and the number of iterations is less than or equal to the **Maximum number of iterations**. If the IC input is false at the beginning of a time step, the iterator does not execute the contents of the subsystem during the time step.

---

**Tip** Specify a maximum number of iterations to avoid infinite loops, which you can break only by terminating MATLAB.


---

## Data Type Support

Acceptable data inputs for the condition ports are any numeric data type that Simulink supports, as well as any fixed-point type that includes a 0 value. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

The optional output port can output any of the following data types: double, int32, int16, or int8.

# While Iterator

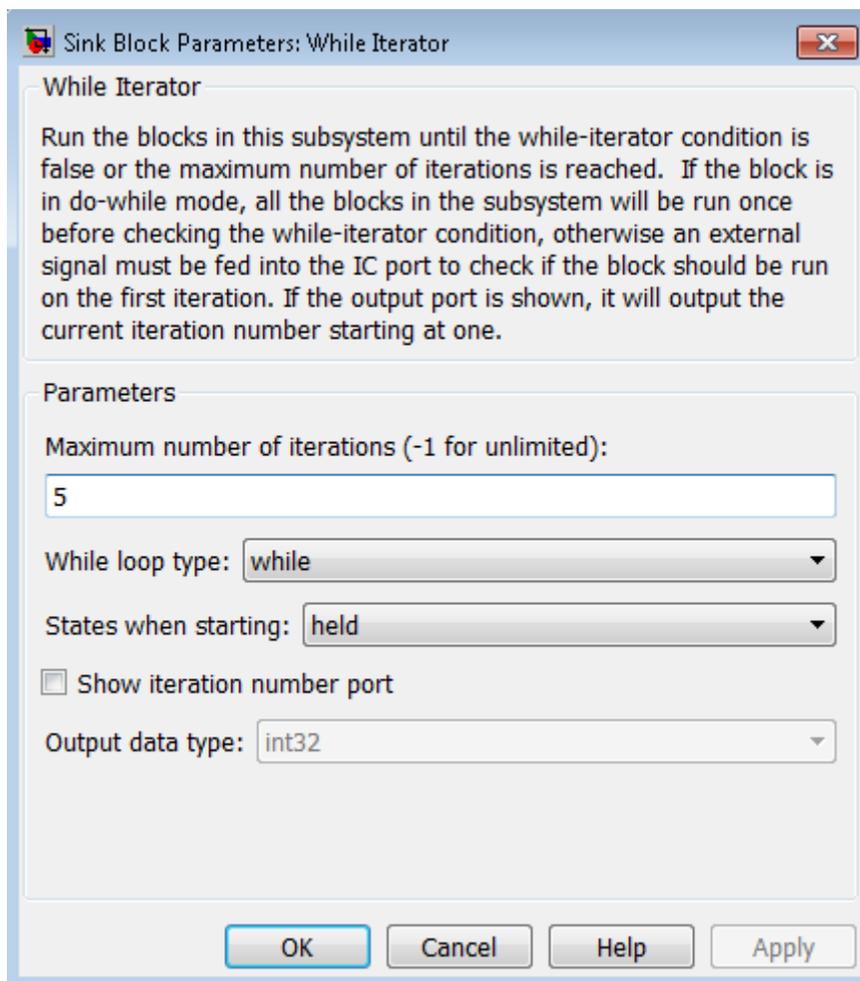

## Parameters and Dialog Box

### Maximum number of iterations

Specify the maximum number of iterations allowed. A value of -1 allows any number of iterations as long as the while condition input is true. Note that if you specify -1 and the while condition never becomes false, the simulation will run forever. In this

case, the only way to stop the simulation is to terminate the MATLAB process. Therefore, do not specify `-1` as the value of this parameter unless you are certain that the while condition becomes false at some point in the simulation.

## **While loop type**

Specify the type of while loop that this block implements.

## **States when starting**

Set this field to `reset` if you want the iterator block to reset the states of the blocks in the while subsystem to their initial values at the beginning of each time step (i.e., before executing the first loop iteration in the current time step). To cause the states of blocks in the subsystem to persist across time steps, set this field to `held` (the default).

## **Show iteration number port**

If you select this check box, the While Iterator block outputs its iteration value. This value starts at 1 and is incremented by 1 for each succeeding iteration. By default, this check box is not selected.


## **Output data type**

If you select the **Show iteration number port** check box (the default), this field is enabled. Use it to set the data type of the iteration number output to `int32`, `int16`, `int8`, or `double`.


## **Examples**

The While Iterator block can optionally output the current iteration number, starting at 1. The following model uses this capability to compute  $N$ , where  $N$  is the first  $N$  integers whose sum is less than 100.

# While Iterator

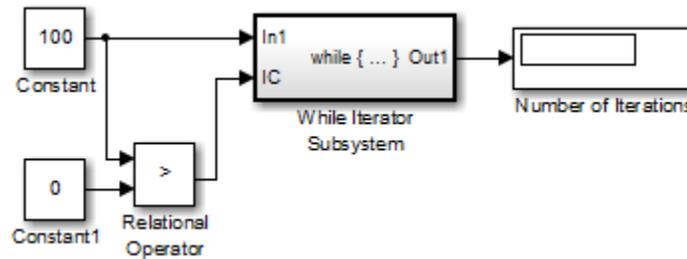

The contents of the While Iterator subsystem are:

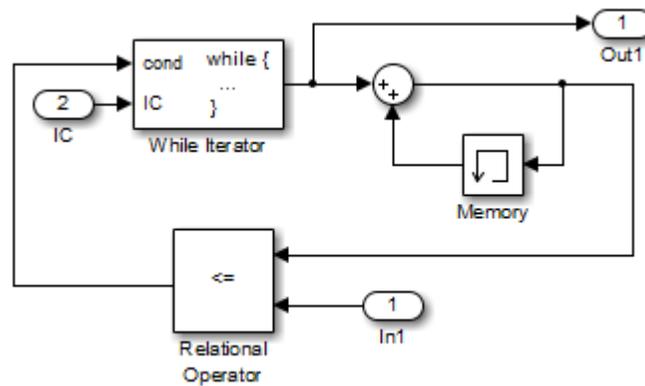

The While Iterator block uses the following parameter settings:

- **Maximum number of iterations** set to 20
- **States when starting** set to reset

The model is the diagrammatic equivalent of the following pseudocode:

```
max_sum = 100;  
sum = 0;  
iteration_number = 0;  
cond = (max_sum > 0);  
while (cond != 0) {
```

```
iteration_number = iteration_number + 1;  
sum = sum + iteration_number;  
if (sum > max_sum OR iteration_number > max_iterations)  
    cond = 0;  
}
```

## Characteristics

Direct Feedthrough	No
Sample Time	Inherited from the driving block
Scalar Expansion	No
Dimensionalized	No
Zero-Crossing Detection	No


# While Iterator Subsystem

---

**Purpose** Represent subsystem that executes repeatedly while condition is satisfied during simulation time step

**Library** Ports & Subsystems

## Description

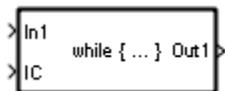

The While Iterator Subsystem block is a Subsystem block that is preconfigured to serve as a starting point for creating a subsystem that executes repeatedly while a condition is satisfied during a simulation time step.

See the While Iterator block and “Use Control Flow Logic” for more information.

When using simplified initialization mode, you cannot place any block needing elapsed time within an Iterator Subsystem. In simplified initialization mode, Iterator subsystems do not maintain elapsed time, so Simulink will report an error if any such block (such as the Discrete-Time Integrator block) is placed within the subsystem. For more information on simplified initialization modes, see “Underspecified initialization detection”.

**Purpose** Output width of input vector

**Library** Signal Attributes

**Description** The Width block generates as output the width of its input vector. You can use an array of buses as an input signal to a Width block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

**Data Type Support** The Width block accepts real or complex signals of the following data types:


- Floating point
- Built-in integer
- Fixed point
- Boolean
- Enumerated

The Width block also supports mixed-type signal vectors.

When the **Output data type mode** is not Choose intrinsic data type, the block supports only built-in numeric types. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

# Width

## Parameters and Dialog Box

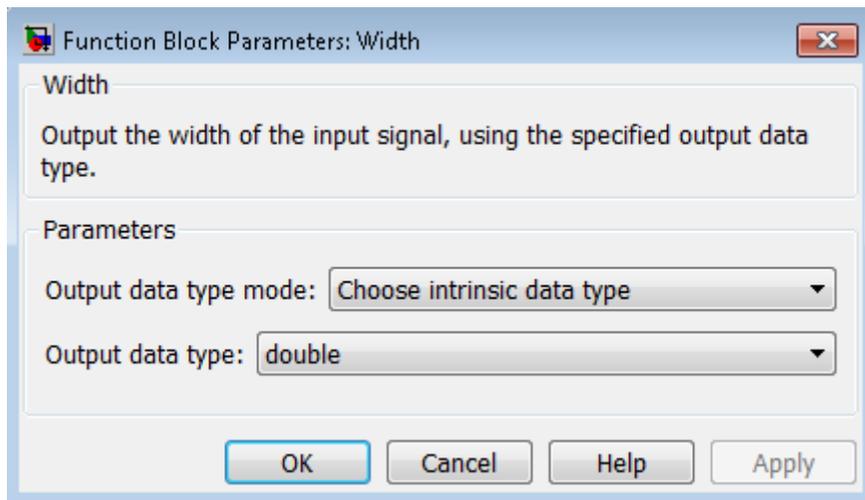

---

**Note** The Width block ignores the **Data type override** setting of the Fixed-Point Tool.

---

### Output data type mode

Specify the output data type to be the same as the input, or inherit the data type by back propagation. You can also choose to specify a built-in data type from the drop-down list in the **Output data type** parameter.

### Output data type

This parameter is visible when you select **Choose intrinsic data type** for **Output data type mode**. Select a built-in data type from the drop-down list.

## Characteristics

Sample Time	Constant
Dimensionalized	Yes

Multidimensionalized	Yes
Zero-Crossing Detection	No

# Wrap To Zero

---

**Purpose** Set output to zero if input is above threshold

**Library** Discontinuities

**Description** The Wrap To Zero block sets the output to zero when the input is above the **Threshold** value. However, the block outputs the input when the input is less than or equal to the **Threshold**.



**Data Type Support** The Wrap To Zero block accepts inputs of the following data types:


- Floating point
- Built-in integer
- Fixed point
- Boolean

The block output has the same data type as the input. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

---

**Tip** If the input data type cannot represent zero, parameter overflow occurs. To detect this overflow, go to the **Diagnostics > Data Validity** pane of the Configuration Parameters dialog box and set **Parameters > Detect overflow** to warning or error.

---

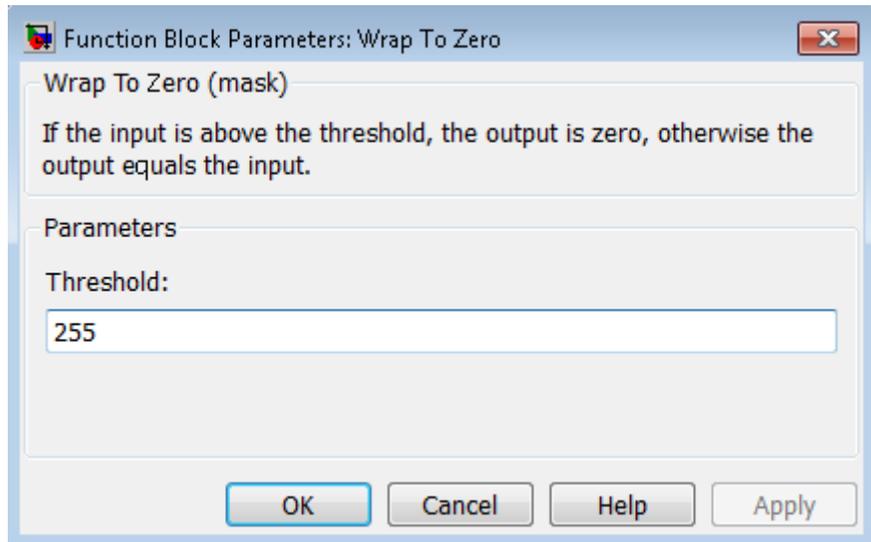

## Parameters and Dialog Box

### Threshold

When the input exceeds the threshold, the block sets the output to zero.

## Characteristics

Direct Feedthrough	Yes
Scalar Expansion	Yes
Multidimensionalized	Yes
Zero-Crossing Detection	No

# XY Graph

---

**Purpose** Display X-Y plot of signals using MATLAB figure window

**Library** Sinks

**Description** The XY Graph block displays an X-Y plot of its inputs in a MATLAB figure window.



The block has two scalar inputs. The block plots data in the first input (the  $x$  direction) against data in the second input (the  $y$  direction). (See “How to Rotate a Block” for a description of the port order for various block orientations.) This block is useful for examining limit cycles and other two-state data. Data outside the specified range does not appear.


A figure window appears for each XY Graph block in the model at the start of simulation.

## Data Type Support

The XY Graph block accepts real signals of the following data types:

- Floating point
- Built-in integer
- Fixed point
- Boolean

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

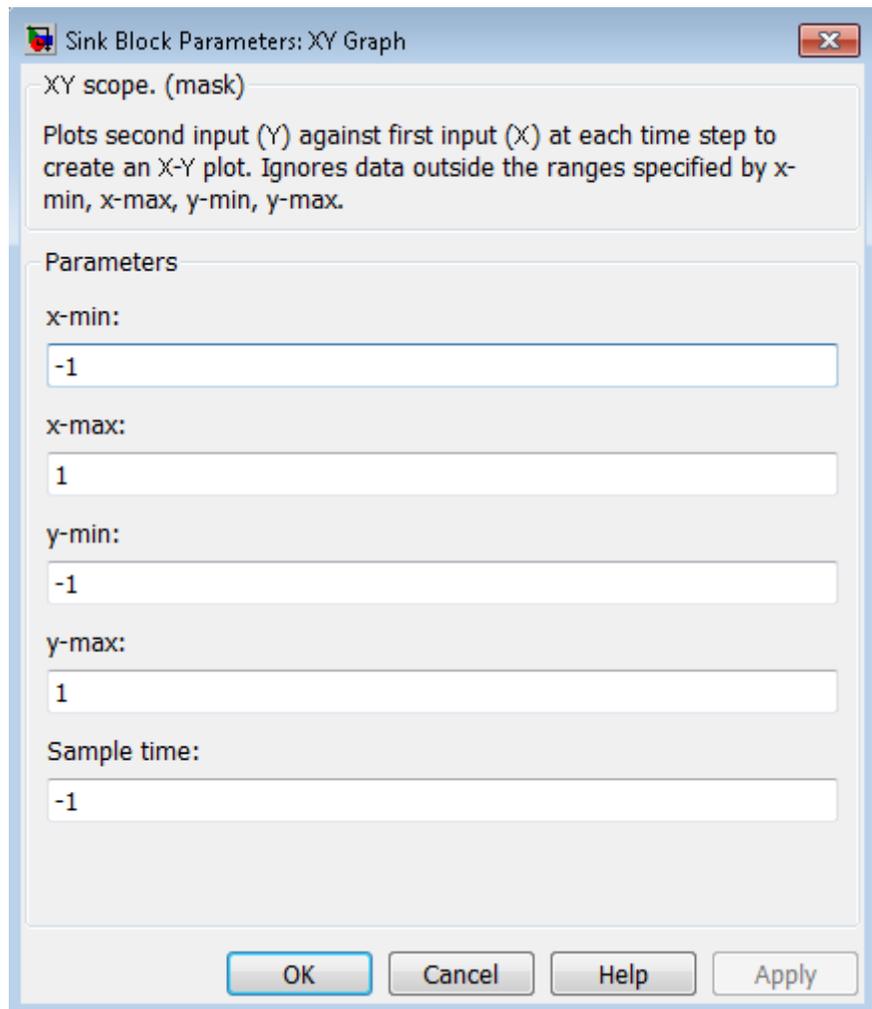

## Parameters and Dialog Box

### x-min

Specify the minimum  $x$ -axis value. The default is -1.

### x-max

Specify the maximum  $x$ -axis value. The default is 1.

# XY Graph

---

**y-min**

Specify the minimum  $y$ -axis value. The default is -1.

**y-max**


Specify the maximum  $y$ -axis value. The default is 1.

**Sample time**


Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the Simulink documentation for more information.

## Examples

The following model computes the points that define a circle of radius 4, centered at the origin of the  $x$ - $y$  plane.

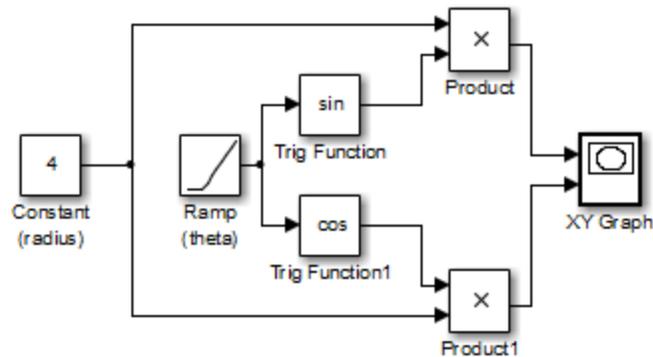

When you simulate the model, a figure window appears.

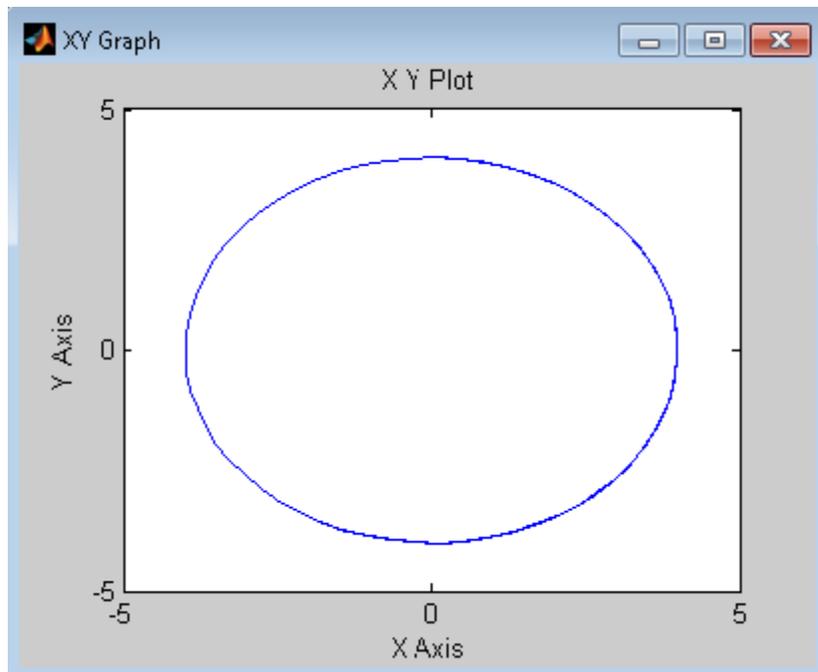

# XY Graph

---

## Characteristics

Sample Time	Specified in the <b>Sample time</b> parameter
States	0
Zero-Crossing Detection	No

**Purpose** Implement zero-order hold of one sample period

**Library** Discrete

## Description



The Zero-Order Hold block holds its input for the sample period you specify. The block accepts one input and generates one output. Each signal can be scalar or vector. If the input is a vector, the block holds all elements of the vector for the same sample period.

You specify the time between samples with the **Sample time** parameter. A setting of -1 means the block inherits the **Sample time**.

---

**Tip** Do not use the Zero-Order Hold block to create a fast-to-slow transition between blocks operating at different sample rates. Instead, use the Rate Transition block.

---

## Comparison with Similar Blocks

### Blocks with Similar Functionality

The Unit Delay, Memory, and Zero-Order Hold blocks provide similar functionality but have different capabilities. Also, the purpose of each block is different. The sections that follow highlight some of these differences.

### Recommended Usage for Each Block

Block	Purpose of the Block	Reference Examples
Unit Delay	Implement a delay using a discrete sample time that you specify. Ideally, the block accepts and outputs signals with a discrete sample time.	<ul style="list-style-type: none"> <li>• sldemo_enginewc (Compression subsystem)</li> </ul>
Memory	Implement a delay by one integration time step. Ideally, the block accepts	<ul style="list-style-type: none"> <li>• sldemo_bounce</li> <li>• sldemo_clutch (Friction Mode)</li> </ul>

# Zero-Order Hold

Block	Purpose of the Block	Reference Examples
	continuous (or fixed in minor time step) signals and outputs a signal that is fixed in minor time step.	Logic/Lockup FSM subsystem)
Zero-Order Hold	Convert an input signal with a continuous sample time to an output signal with a discrete sample time.	<ul style="list-style-type: none"> <li>• sldemo_radar_em1</li> <li>• aero_dap3dof</li> </ul>

## Overview of Block Capabilities


Capability	Block		
	Unit Delay	Memory	Zero-Order Hold
Specification of initial condition	Yes	Yes	No, because the block output at time $t = 0$ must match the input value.
Specification of sample time	Yes	No, because the block can only inherit sample time (from the driving block or the solver used for the entire model).	Yes

Capability	Block		
	Unit Delay	Memory	Zero-Order Hold
Support for frame-based signals	Yes	No	Yes
Support for state logging	Yes	No	No

## Effect of Solver Specification on Block Output

When you specify a discrete sample time in the dialog box for a Unit Delay or Zero-Order Hold block, the block output can differ depending on the solver specification for the model.


Suppose that you have a model with Unit Delay and Zero-Order Hold blocks, which both use a discrete sample time of 1:

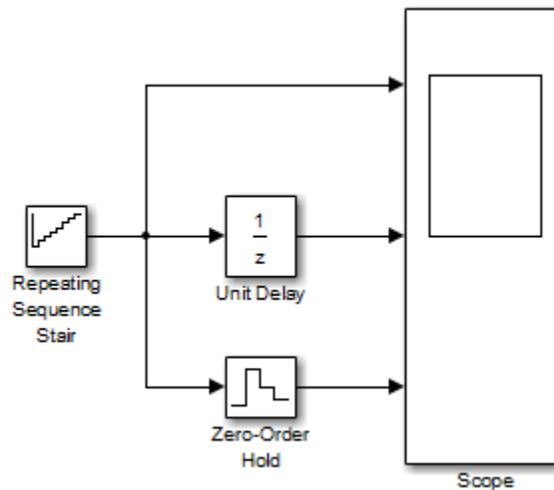


The Repeating Sequence Stair block uses a continuous sample time of 0 to provide input signals to the Unit Delay and Zero-Order Hold blocks.

# Zero-Order Hold

If the model uses a fixed-step solver with a step size of 1, the scope shows the following simulation results:

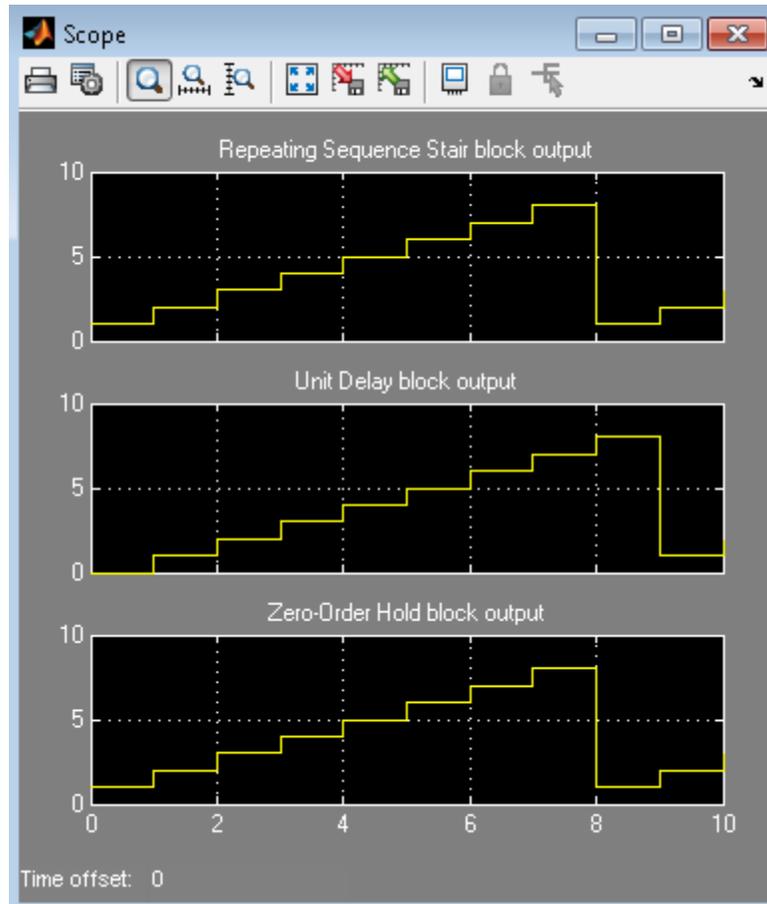

If the model uses a variable-step solver, the scope shows the following simulation results:

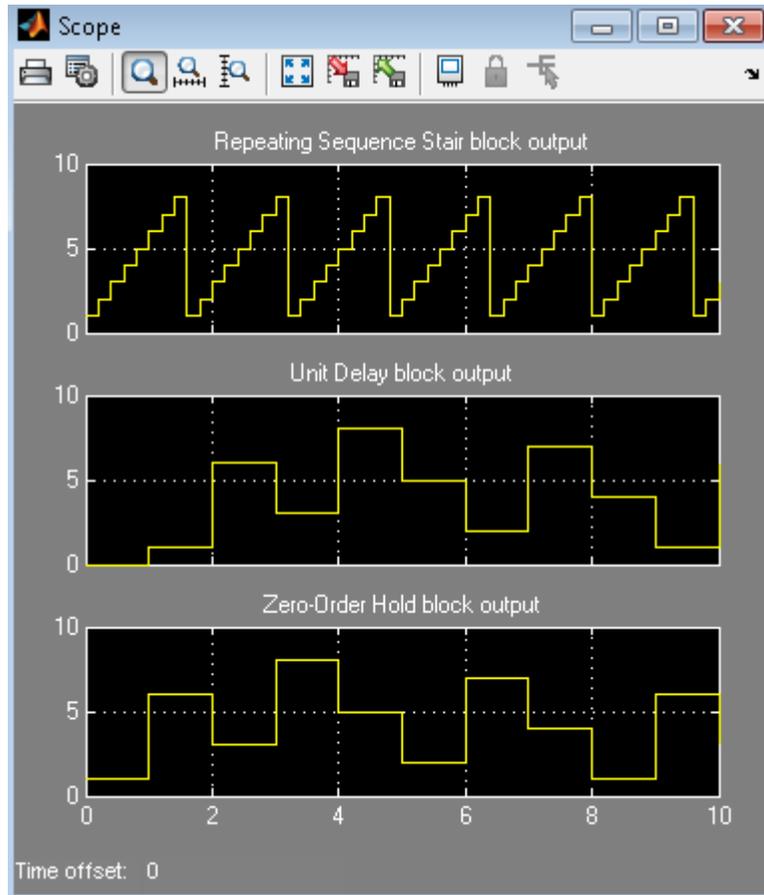

The Zero-Order Hold block takes the input value of the Repeating Sequence Stair block at  $t = 0, 1, 2, \dots, 9$  and holds each input value for a sample period (1 second). The Unit Delay block applies the same 1-second hold to each input value of the Repeating Sequence Stair block, but also delays each value by a sample period. The **Initial conditions**

# Zero-Order Hold

---


parameter specifies the output for the Unit Delay block during the first sample period. For more information about sample time, see “What Is Sample Time?” and “Specify Sample Time”.

Solver specification for a model also affects the behavior of the Memory block. For details, see “Examples of Memory Block Usage” on page 1-995.

## Data Type Support

The Zero-Order Hold block accepts real or complex signals of any data type that Simulink supports, including fixed-point and enumerated data types.

For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

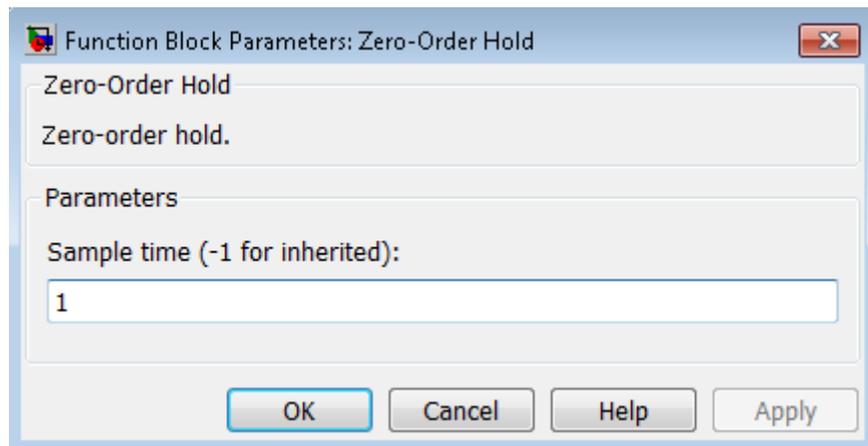

## Parameters and Dialog Box

### Sample time (-1 for inherited)

Specify the time interval between samples. To inherit the sample time, set this parameter to -1. See “Specify Sample Time” in the online documentation for more information.

Do not specify a continuous sample time, either 0 or [0,0]. This block supports only discrete sample times. When this parameter is -1, the inherited sample time must be discrete and not continuous.

## Bus Support

The Zero-Order Hold block is a bus-capable block. The input can be a virtual or nonvirtual bus signal. No block-specific restrictions exist. All signals in a nonvirtual bus input to a Zero-Order Hold block must have the same sample time, even if the elements of the associated bus object specify inherited sample times. You can use a Rate Transition block to change the sample time of an individual signal, or of all signals in a bus. See “Composite Signals” and “Bus-Capable Blocks” for more information.

You can use an array of buses as an input signal to a Zero-Order Hold block. For details about defining and using an array of buses, see “Combine Buses into an Array of Buses”.

## Examples

The following models show how to use the Zero-Order Hold block:

- `sldemo_radar_em1`
- `aero_dap3dof`

## Characteristics

Bus-capable	Yes
Direct Feedthrough	Yes
Sample Time	Specified in the <b>Sample time</b> parameter
Scalar Expansion	No
Dimensionalized	Yes
Zero-Crossing Detection	No

## See Also

Memory, Unit Delay


# Zero-Pole

---

**Purpose** Model system by zero-pole-gain transfer function

**Library** Continuous

**Description** The Zero-Pole block models a system that you define with the zeros, poles, and gain of a Laplace-domain transfer function. This block can model single-input single output (SISO) and single-input multiple-output (SIMO) systems.

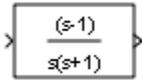

## Conditions for Using This Block

The Zero-Pole block assumes the following conditions:

- The transfer function has the form

$$H(s) = K \frac{Z(s)}{P(s)} = K \frac{(s - Z(1))(s - Z(2)) \dots (s - Z(m))}{(s - P(1))(s - P(2)) \dots (s - P(n))},$$

where  $Z$  represents the zeros,  $P$  the poles, and  $K$  the gain of the transfer function.

- The number of poles must be greater than or equal to the number of zeros.
- If the poles and zeros are complex, they must be complex-conjugate pairs.
- For a multiple-output system, all transfer functions must have the same poles. The zeros can differ in value, but the number of zeros for each transfer function must be the same.

---

**Note** You cannot use a Zero-Pole block to model a multiple-output system when the transfer functions have a differing number of zeros or a single zero each. Use multiple Zero-Pole blocks to model such systems.

---

## Modeling a Single-Output System

For a single-output system, the input and the output of the block are scalar time-domain signals. To model this system:

- 1 Enter a vector for the zeros of the transfer function in the **Zeros** field.
- 2 Enter a vector for the poles of the transfer function in the **Poles** field.
- 3 Enter a 1-by-1 vector for the gain of the transfer function in the **Gain** field.

## Modeling a Multiple-Output System

For a multiple-output system, the block input is a scalar and the output is a vector, where each element is an output of the system. To model this system:

- 1 Enter a matrix of zeros in the **Zeros** field.

Each *column* of this matrix contains the zeros of a transfer function that relates the system input to one of the outputs.

- 2 Enter a vector for the poles common to all transfer functions of the system in the **Poles** field.
- 3 Enter a vector of gains in the **Gain** field.

Each element is the gain of the corresponding transfer function in **Zeros**.

Each element of the output vector corresponds to a column in **Zeros**.

## Transfer Function Display on the Block

The Zero-Pole block displays the transfer function depending on how you specify the zero, pole, and gain parameters.


- If you specify each parameter as an expression or a vector, the block shows the transfer function with the specified zeros, poles, and gain.

# Zero-Pole

---


If you specify a variable in parentheses, the block evaluates the variable.

For example, if you specify **Zeros** as [3,2,1], **Poles** as (poles), where poles is [7,5,3,1], and **Gain** as gain, the block looks like this:

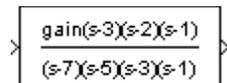
$$\frac{\text{gain}(s-3)(s-2)(s-1)}{(s-7)(s-5)(s-3)(s-1)}$$

- If you specify each parameter as a variable, the block shows the variable name followed by (s) if appropriate.

For example, if you specify **Zeros** as zeros, **Poles** as poles, and **Gain** as gain, the block looks like this:

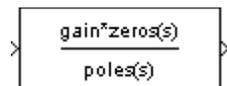
$$\frac{\text{gain}^{\wedge}\text{zeros}(s)}{\text{poles}(s)}$$

## Data Type Support

The Zero-Pole block accepts real signals of type double. For more information, see “Data Types Supported by Simulink” in the Simulink documentation.

Function Block Parameters: Zero-Pole

Zero-Pole

Matrix expression for zeros. Vector expression for poles and gain. Output width equals the number of columns in zeros matrix, or one if zeros is a vector.

Parameters

Zeros:  
[1]

Poles:  
[0 -1]

Gain:  
[1]

Absolute tolerance:  
auto

State Name: (e.g., 'position')  
"

? OK Cancel Help Apply

**Parameters  
and  
Dialog  
Box**

# Zero-Pole

---

## Zeros

Define the matrix of zeros.

## Settings

**Default:** [1]

## Tips

- For a single-output system, enter a vector for the zeros of the transfer function.
- For a multiple-output system, enter a matrix. Each *column* of this matrix contains the zeros of a transfer function that relates the system input to one of the outputs.

## Command-Line Information

**Parameter:** Zeros

**Type:** vector

**Value:** '[1]'

**Default:** '[1]'

## Poles

Define the vector of poles.

## Settings

**Default:** [0 -1]

## Tips

- For a single-output system, enter a vector for the poles of the transfer function.
- For a multiple-output system, enter a vector for the poles common to all transfer functions of the system.

## Command-Line Information

**Parameter:** Poles

**Type:** vector

**Value:** '[0 -1]'

**Default:** '[0 -1]'

# Zero-Pole

---

## Gain

Define the vector of gains.

## Settings

**Default:** [1]

## Tips

- For a single-output system, enter a 1-by-1 vector for the gain of the transfer function.
- For a multiple-output system, enter a vector of gains. Each element is the gain of the corresponding transfer function in **Zeros**.

## Command-Line Information

**Parameter:** Gain

**Type:** vector

**Value:** '[1]'

**Default:** '[1]'

## Absolute tolerance

Specify the absolute tolerance for computing block states.

### Settings

**Default:** auto

- You can enter `auto`, `-1`, a positive real scalar or vector.
- If you enter `auto` or `-1`, then Simulink uses the absolute tolerance value in the Configuration Parameters dialog box (see “Solver Pane”) to compute block states.
- If you enter a real scalar, then that value overrides the absolute tolerance in the Configuration Parameters dialog box for computing all block states.
- If you enter a real vector, then the dimension of that vector must match the dimension of the continuous states in the block. These values override the absolute tolerance in the Configuration Parameters dialog box.

### Command-Line Information

**Parameter:** `AbsoluteTolerance`

**Type:** string, scalar, or vector

**Value:** `'auto'` | `'-1'` | any positive real scalar or vector

**Default:** `'auto'`

# Zero-Pole

---

## State Name (e.g., 'position')

Assign a unique name to each state.

### Settings

Default: ' '

If this field is blank, no name assignment occurs.

### Tips

- To assign a name to a single state, enter the name between quotes, for example, 'velocity'.
- To assign names to multiple states, enter a comma-delimited list surrounded by braces, for example, {'a', 'b', 'c'}. Each name must be unique.
- The state names apply only to the selected block.
- The number of states must divide evenly among the number of state names.
- You can specify fewer names than states, but you cannot specify more names than states.

For example, you can specify two names in a system with four states. The first name applies to the first two states and the second name to the last two states.

- To assign state names with a variable in the MATLAB workspace, enter the variable without quotes. A variable can be a string, cell array, or structure.

### Command-Line Information

Parameter: ContinuousStateAttributes

Type: string

Value: ' ' | user-defined

Default: ' '

<b>Characteristics</b>	Direct Feedthrough	Only if the lengths of the <b>Poles</b> and <b>Zeros</b> parameters are equal
	Sample Time	Continuous
	Scalar Expansion	No
	States	Length of the <b>Poles</b> vector
	Dimensionalized	No
	Zero-Crossing Detection	No


**See Also** Discrete Zero-Pole

# Arduino Digital Input

---

**Purpose** Get logical value of digital input pin

**Library** Simulink Support Package for Arduino® Hardware/Common

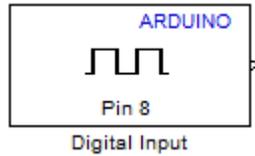

## Description


Get the logical value of a digital pin on the Arduino hardware:

- If the logical value of the digital pin is LOW, the block output emits 0.
- If the logical value of the digital pin is HIGH, the block output emits 1.

The data type of the block output is uint8.

During simulations without the hardware, this block emits zeroes. See “Block Produces Zeros or Does Nothing in Simulation”

## Dialog Box

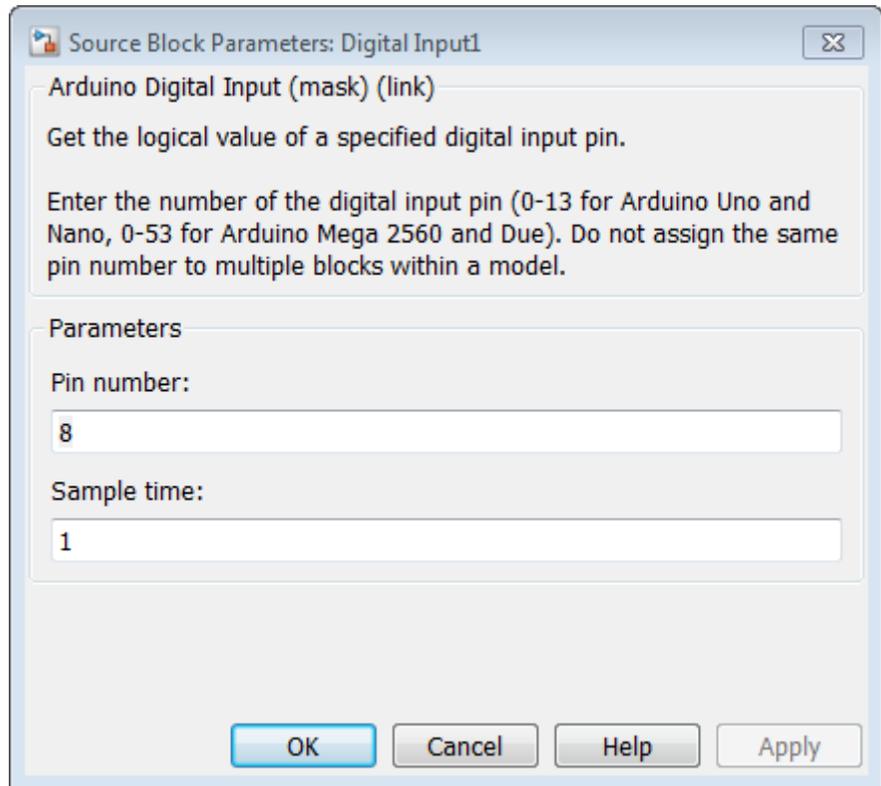

### Pin number

Enter the number of the digital pin.

Do not assign the same pin number to multiple blocks within the model.

If you set the **Target hardware** parameter to:

- Arduino Mega 2560, enter a pin number from 0 to 53.
- Arduino Uno, enter a pin number from 0 to 13.
- Arduino Nano, enter a pin number from 0 to 13.

# Arduino Digital Input

---

- Arduino Due, enter a pin number from 0 to 53.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## Sample time

Specify how often this block reads the pin value, in seconds. Enter a value greater than zero. This value defaults to a sample time of 1 second. The minimum value is 0.000001 second.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Arduino Digital Output | “Install Support for Arduino Hardware” | “Detect and Fix Task Overruns on Arduino Hardware”

## External Web Sites

- <http://arduino.cc/en/Reference/DigitalRead>

## Purpose

Set logical value of digital output pin

## Library

Simulink Support Package for Arduino Hardware/Common



## Description

Set the logical value of a digital pin on the Arduino hardware:

- Sending 1 to the block input sets the logical value of the digital pin HIGH to 5 V or 3.3 V, depending on the board voltage.
- Sending 0 to the block input sets the logical value of the digital pin LOW to 0 V.


The block input inherits the data type of the upstream block, and internally converts it to boolean.

During simulations without the hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”

# Arduino Digital Output

---

## Dialog Box

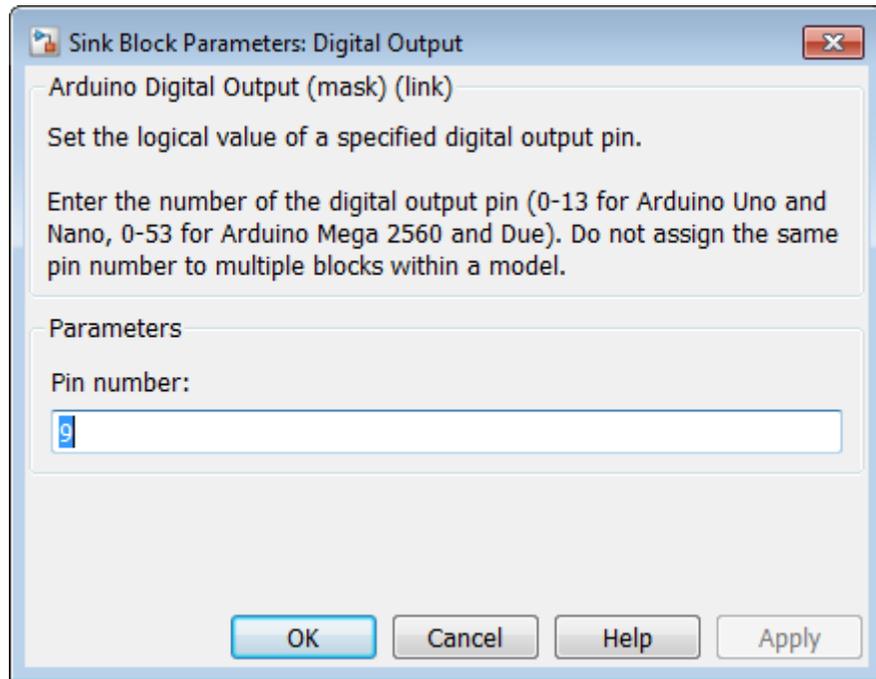

### Pin number

Enter the number of the digital pin.

Do not assign the same pin number to multiple blocks within the model.

If you set the **Target hardware** parameter to:

- Arduino Mega 2560, enter a pin number from 0 to 53.
- Arduino Uno, enter a pin number from 0 to 13.
- Arduino Nano, enter a pin number from 0 to 13.
- Arduino Due, enter a pin number from 0 to 53.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**

---

## See Also

Arduino Digital Input | “Install Support for Arduino Hardware”

## External Web Sites


- <http://arduino.cc/en/Reference/DigitalWrite>

# Arduino Analog Input

---

**Purpose** Measure voltage of analog input pin

**Library** Simulink Support Package for Arduino Hardware/Common

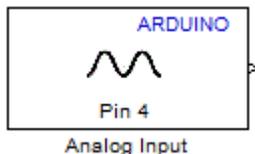

## Description

Measure the voltage of an analog pin relative to the analog input reference voltage on the Arduino hardware. Output the measurement as a 10-bit value that ranges from 0 to 1023.


- If the measured voltage equals the ground voltage, the block output emits 0.
- If the measured voltage equals the analog reference voltage, the block output emits 1023.

The default value of the analog input reference voltage is 0 to 5 V. To change the **Analog input reference voltage** parameter in your model Configuration Parameters, select **Tools > Run on Target Hardware > Options**.

During simulations without the hardware, this block emits zeroes. See “Block Produces Zeros or Does Nothing in Simulation”

## Warning

**The range of the voltage that can be applied to the analog input pin depends on the analog input reference voltage. For details, read the documentation for your Arduino hardware.**

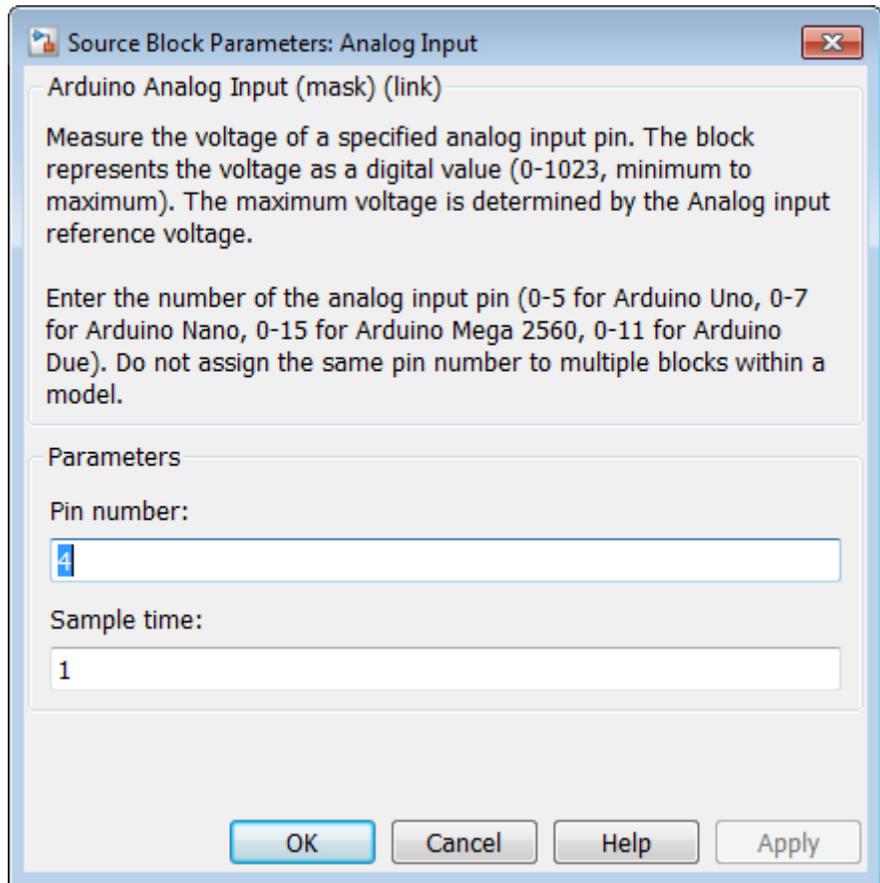

## Dialog Box

### Pin number

Enter the number of the analog input pin.

Do not assign the same pin number to multiple blocks within the model.

If you set the **Target hardware** parameter to:

- Arduino Mega 2560, enter a pin number from 0 to 15.

# Arduino Analog Input

---

- Arduino Uno, enter a pin number from 0 to 5.
- Arduino Nano, enter a pin number from 0 to 5.
- Arduino Due, enter a pin number from 0 to 11.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## Sample time

Specify how often this block measures the voltage of the analog input pin, in seconds. Enter a value greater than zero. This value defaults to a sample time of 1 second. The minimum value is 0.000001 second.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also


Arduino PWM | “Analog input reference voltage” | “Install Support for Arduino Hardware” | “Detect and Fix Task Overruns on Arduino Hardware”

## External Web Sites

- <http://arduino.cc/en/Reference/AnalogRead>
- <http://arduino.cc/en/Reference/AnalogReference>

**Purpose** Generate PWM waveform on analog output pin

**Library** Simulink Support Package for Arduino Hardware/Common

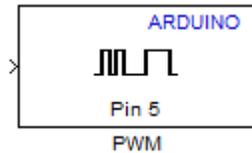

## Description

Use pulse-width modulation (PWM) to change the duty-cycle of square-wave pulses output by a PWM pin on the Arduino hardware. PWM enables a digital output to provide a range of different power levels, similar to that of an analog output.

The value sent to the block input determines the width of the square wave, called *duty-cycle*, that the target hardware outputs on the specified PWM pin. The range of valid input values is 0 to 255.

For example:

- Sending the maximum value, 255, to the block input produces 100% duty-cycle, which results in full power on a PWM pin.
- Sending the minimum value, 0, to the block input produces 0% duty-cycle, which results in no power on a PWM pin.
- Sending an intermediate value to the block input produces a proportional duty-cycle and power output on a PWM pin. For example, sending 204 to the block input produces 80% duty cycle and power ( $204/255 = 0.8$ ).
- Sending out-of-range values, such as 500 or -500, to the block input has the same effect as sending the maximum or minimum input values.

The frequency of the PWM signal on most pins is ~490 Hz. On the Arduino Uno and similar boards, pins 5 and 6 have a frequency of ~980 Hz.

# Arduino PWM


---

The block input inherits the data type of the upstream block, and internally converts it to uint8.

Some limitations:

- With Arduino Uno hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.
- With Arduino Nano hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.
- With Arduino Mega 2560 hardware, the Arduino PWM block cannot use digital pins 11 or 12 when the model contains more than 12 Servo blocks.
- With Arduino Due hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.

## Dialog Box

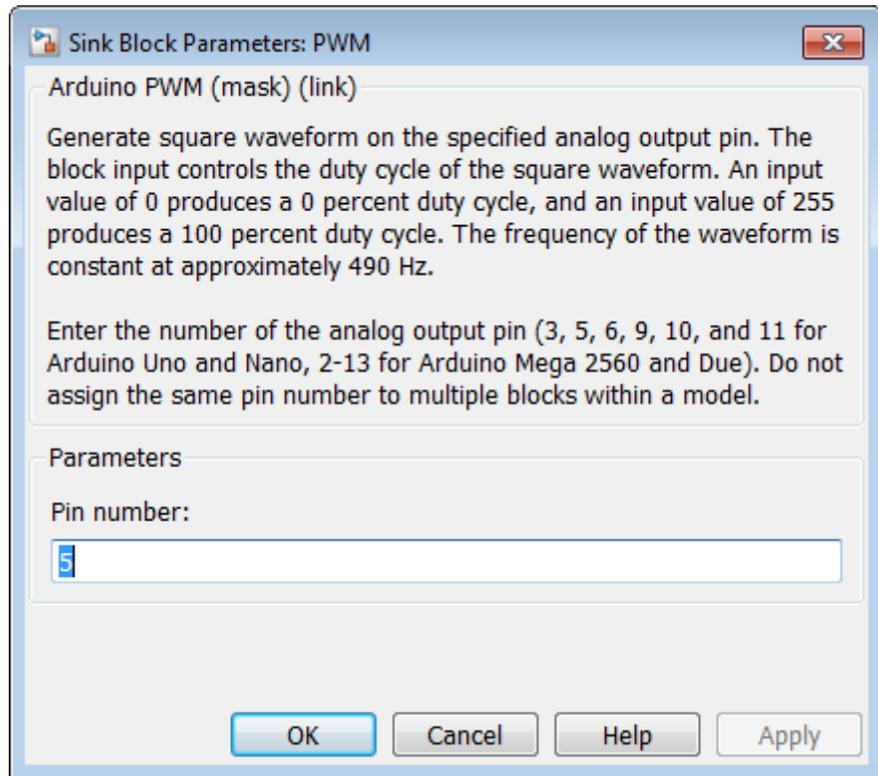

### Pin number

Enter the number of the PWM pin.

Do not assign the same pin number to multiple blocks within the model.

If you set the **Target hardware** parameter to:

- Arduino Mega 2560, enter a pin number from 2 to 13.
- Arduino Uno, enter one of the following pin numbers: 3, 5, 6, 9, 10, and 11. The board identifies these with a ~ symbol.

# Arduino PWM

---

- Arduino Nano, enter one of the following pin numbers: 3, 5, 6, 9, 10, and 11.
- Arduino Due, enter a pin number from 2 to 13.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

**See Also** “Install Support for Arduino Hardware”

## External Web Sites

- <http://arduino.cc/en/Reference/AnalogWrite>


## Purpose

Get one byte of data from serial port

## Library

Simulink Support Package for Arduino Hardware/Common

## Description

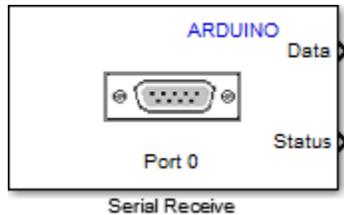

Get one byte of data per sample period from the receive buffer of the specified serial port. For more information, see “Use Serial Communications with Arduino Hardware”.

The Serial Receive block has two outputs, **Data** and **Status**.

When data is available:

- The **Data** block output emits data from the serial receive buffer.
- The **Status** block output emits 1.

When data is not available:

- The **Data** block output emits 255.
- The **Status** block output emits 0.

The **Data** block output emits uint8 values.

The **Status** block output emits int values. You can use the Status block output to determine whether a value of 255 emitted by the **Data** port is data, or an indication that no data was received.

During simulations without the hardware, this block emits zeroes. See “Block Produces Zeros or Does Nothing in Simulation”


# Arduino Serial Receive

---

If you use this block in models with the Standard Servo Read, Standard Servo Write, and Continuous Servo Write blocks, use longer sample times to avoid overruns.

## **Warning**

**Do not connect the serial port pins to an RS-232 serial interface, such as the DE-9M connector on a computer, without limiting the voltage. The RS-232 standard allows higher voltages that can damage your hardware. For details, read the documentation for your Arduino hardware.**

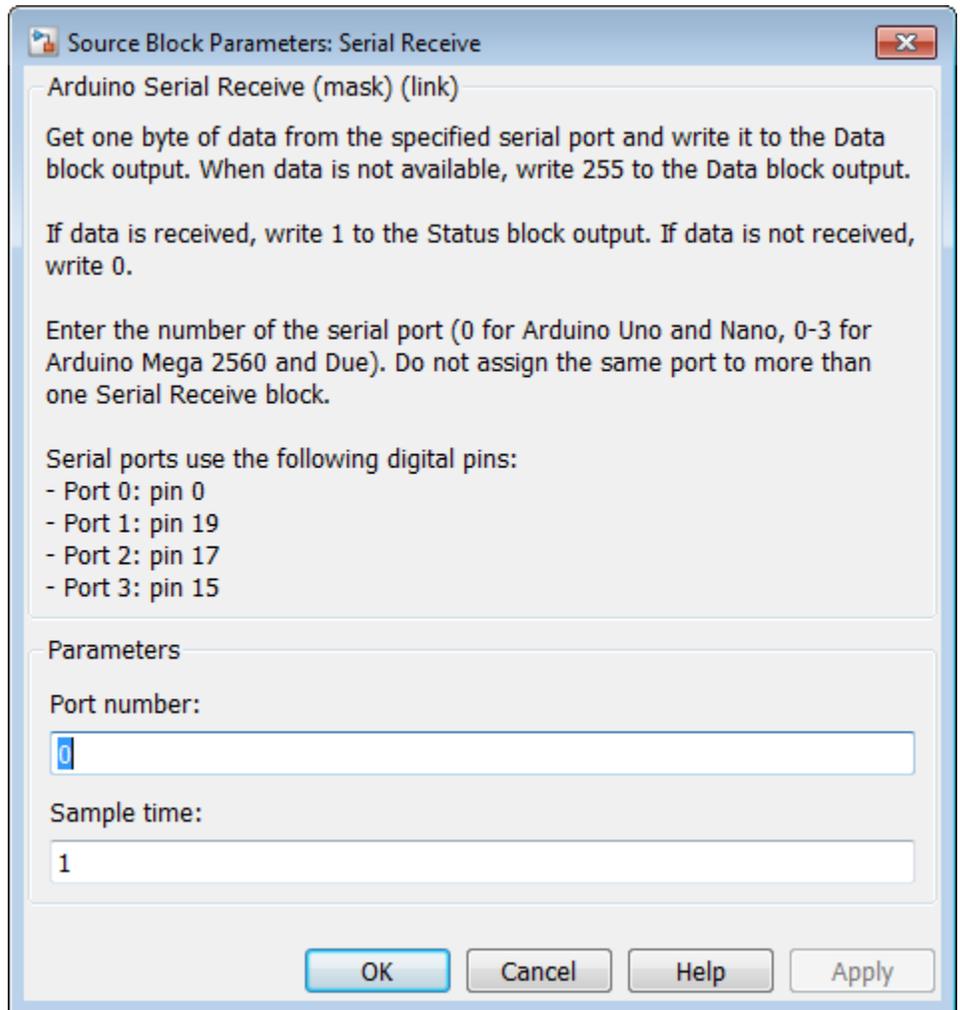

## Dialog

### Port Number

Enter the number of the serial port.

If you set the **Target hardware** parameter to:

# Arduino Serial Receive

---

- Arduino Mega 2560, enter a port number from 0 to 3.
- Arduino Uno, enter 0.
- Arduino Nano, enter 0.
- Arduino Due, enter a port number from 0 to 3.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

You can assign a Serial Transmit block and a Serial Receive block to the same serial port.

Do not assign more than one Serial Receive block to the same serial port.

Do not assign the pin numbers used by the serial port to other blocks within the model.

Serial port 0 is connected to the USB port through a converter. Do not use both serial port 0 and the USB port at the same time. For example, do not use serial port 0 if you intend to use External mode, because External mode requires the USB port.

## Sample time

Specify how often this block reads the serial port buffer. Enter a value greater than zero. This value defaults to a sample time of 1 second. The minimum value is 0.000001 second.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Arduino Serial Transmit | “Install Support for Arduino Hardware” | “Use Serial Communications with Arduino Hardware” | “Tune and Monitor Model Running on Arduino Mega 2560 Hardware” | “Detect and Fix Task Overruns on Arduino Hardware”

## External Web Sites

- <http://arduino.cc/en/Serial/Read>

# Arduino Serial Transmit

---

**Purpose** Send buffered data to serial port

**Library** Simulink Support Package for Arduino Hardware



## Description

Send buffered data to the specified serial port. For more information, see “Use Serial Communications with Arduino Hardware”.

The Arduino Uno hardware has one serial port device, serial port 0, connected to the digital pins marked TX 1 and RX 0. If you set the **Port number** parameter to 0, this block transmits over the digital pin marked TX 1.


The block input accepts vector or scalar uint8 data. To convert a data source to uint8, use a Data Type Conversion block.

During simulations without the hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

If you use this block in models with the Standard Servo Read, Standard Servo Write, and Continuous Servo Write blocks, use longer sample times to avoid overruns.

## Warning

**Do not connect the serial port pins to an RS-232 serial interface, such as the DE-9M connector on a computer, without limiting the voltage. The RS-232 standard allows higher voltages that can damage your hardware. For details, read the documentation for your Arduino hardware.**

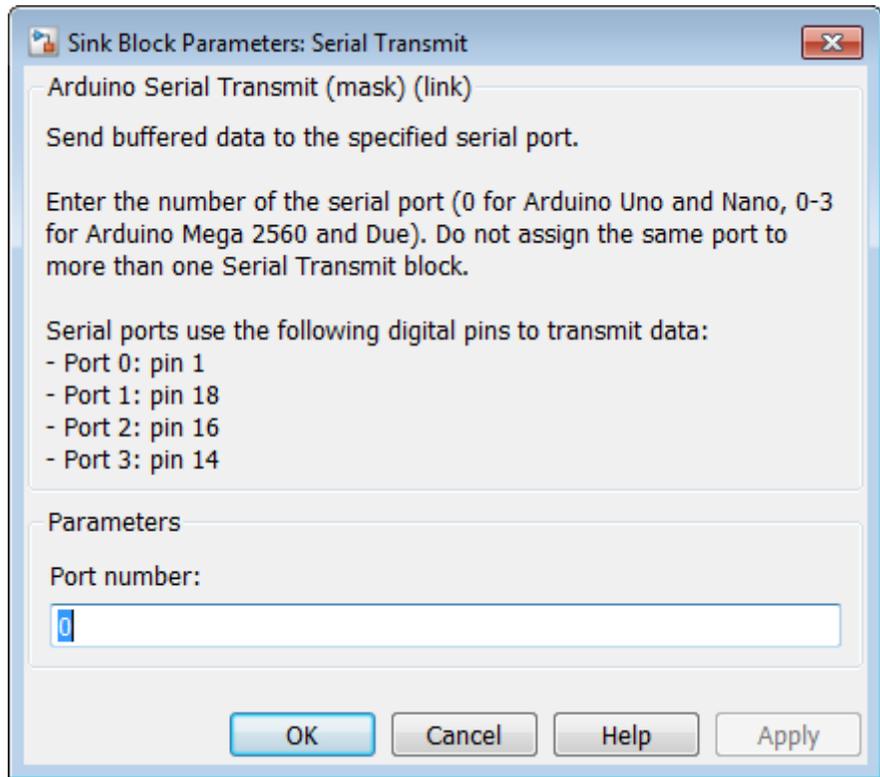

## Dialog Box

### Port Number

Enter the number of the serial port.

If you set the **Target hardware** parameter to:

- Arduino Mega 2560, enter a port number from 0 to 3.
- Arduino Uno, enter 0.
- Arduino Nano, enter 0.
- Arduino Due, enter a port number from 0 to 3.

# Arduino Serial Transmit

---

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

You can assign a Serial Transmit block and a Serial Receive block to the same serial port.

Do not assign multiple Serial Transmit blocks to the same serial port.

Do not assign the pin numbers used by the serial port to other blocks within the model.

Serial port 0 is connected to the USB port through a converter. Do not use both serial port 0 and the USB port at the same time. For example, do not use serial port 0 if you intend to use External mode, because External mode requires the USB port.

## See Also

Arduino Serial Receive | “Install Support for Arduino Hardware” | “Use Serial Communications with Arduino Hardware” | “Tune and Monitor Model Running on Arduino Mega 2560 Hardware”

## External Web Sites

- <http://arduino.cc/en/Serial/Write>

## Purpose

Get position of standard servo motor shaft in degrees

## Library

Simulink Support Package for Arduino Hardware/Common



## Description

Measure the angle of a standard servo motor shaft in degrees, from 0 to 180.

The data type of the block output is uint8.


During simulations without the hardware, this block emits zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

Some limitations:

- Do not use Servo blocks with External mode.
- If you use this block in models with the Serial Receive and Serial Transmit blocks, use longer sample times to avoid overruns.
- The maximum number of Servo blocks per model is 12 for most Arduino boards except for Arduino Mega 2560 hardware where the maximum is 48.
- With Arduino Uno hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.
- With Arduino Nano hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.
- With Arduino Mega 2560 hardware, the Arduino PWM block cannot use digital pins 11 or 12 when the model contains more than 12 Servo blocks.
- With Arduino Due hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.

# Arduino Standard Servo Read

**Note** The Servo Read block returns the last written value through the Servo Write block. Therefore, while using a Servo Read block in a model, make sure that there is a corresponding Servo Write block to get correct results.

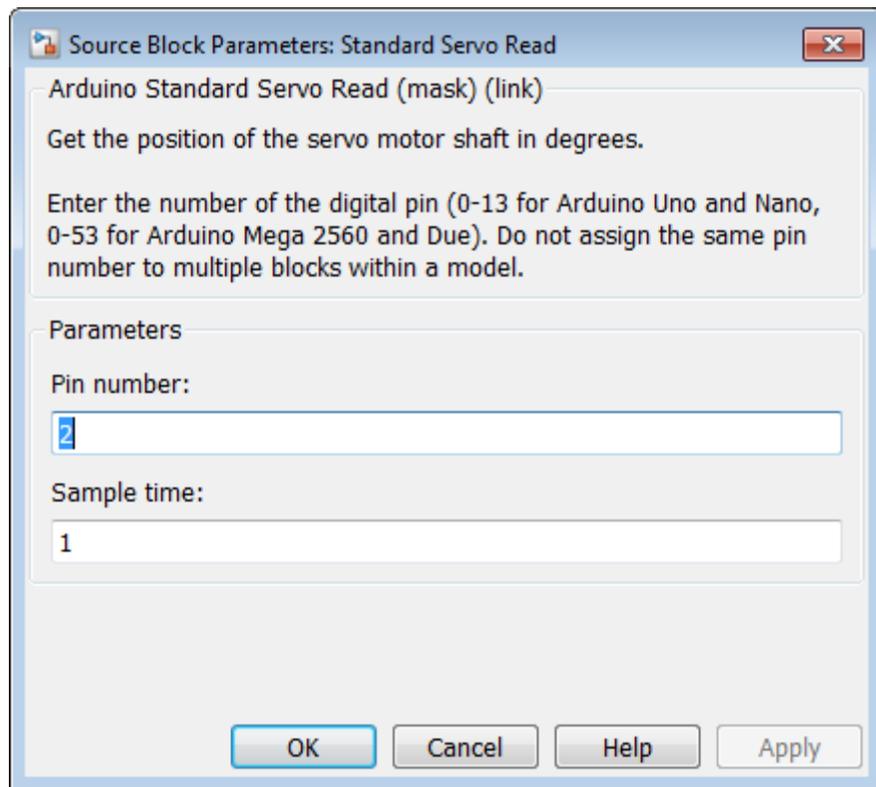

## Dialog Box

### Pin number

Enter the number of the digital pin.

Do not assign the same pin number to multiple blocks within the model.

If you set the **Target hardware** parameter to:

- Arduino Mega 2560, enter a pin number from 0 to 53.
- Arduino Uno, enter a pin number from 0 to 13.
- Arduino Nano, enter a pin number from 0 to 13.
- Arduino Due, enter a pin number from 0 to 53.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

### Sample time

Specify how often this block reads a servo motor angle, in seconds. Enter a value greater than zero. This value defaults to a sample time of 1 seconds. The minimum value is 0.000001 second.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

### See Also

Arduino Standard Servo Write | Arduino Continuous Servo Write | “Install Support for Arduino Hardware” | “Detect and Fix Task Overruns on Arduino Hardware”

### External Web Sites

- <http://arduino.cc/en/Reference/ServoRead>

# Arduino Standard Servo Write

---

**Purpose** Set shaft position of standard servo motor

**Library** Simulink Support Package for Arduino Hardware/Common



## Description

Standard Servo Write

Set the shaft position of a standard servo motor, from 0 to 180 degrees.

To rotate the servo shaft, send values from 0 to 180 to the block input.

Sending out-of-range values, such as -5 or 200, to the block input has the same effect as sending the minimum or maximum input values.

The block input inherits the data type of the upstream block, and internally converts it to uint8.


During simulations without the hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

Some limitations:

- Do not use Servo blocks with External mode.
- If you use this block in models with the Serial Receive and Serial Transmit blocks, use longer sample times to avoid overruns.
- The maximum number of Servo blocks per model is 12 for most Arduino boards except for Arduino Mega 2560 hardware where the maximum is 48.
- With Arduino Uno hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.
- With Arduino Nano hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.

# Arduino Standard Servo Write

- With Arduino Mega 2560 hardware, the Arduino PWM block cannot use digital pins 11 or 12 when the model contains more than 12 Servo blocks.
- With Arduino Due hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.

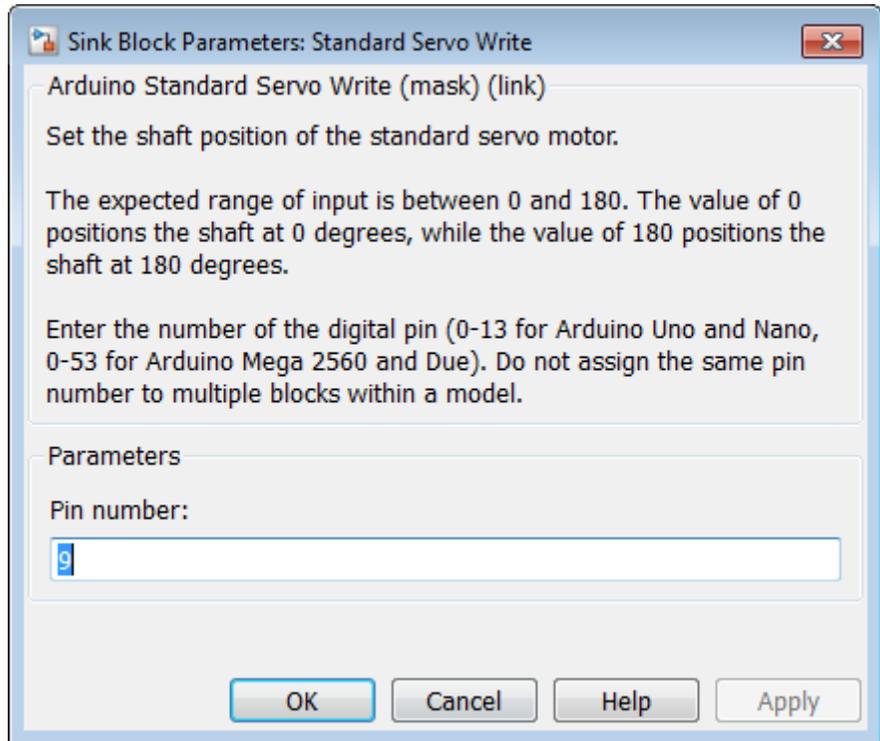

## Dialog Box

### Pin number

Enter the number of the digital pin.

Do not assign the same pin number to multiple blocks within the model.

# Arduino Standard Servo Write

---

If you set the **Target hardware** parameter to:

- Arduino Mega 2560, enter a pin number from 0 to 53.
- Arduino Uno, enter a pin number from 0 to 13.
- Arduino Nano, enter a pin number from 0 to 13.
- Arduino Due, enter a pin number from 0 to 53.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## See Also

Arduino Standard Servo Read | Arduino Continuous Servo Write |  
“Install Support for Arduino Hardware”

## External Web Sites

- <http://arduino.cc/en/Reference/ServoWrite>


# Arduino Continuous Servo Write

## Purpose

Set shaft speed of continuous rotation servo motor

## Library

Simulink Support Package for Arduino Hardware/Common

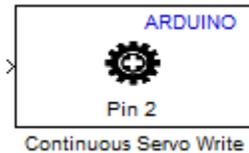

## Description

Set the direction and speed of a continuous rotation servo motor:

- Sending -90 to the block input produces the maximum rate of rotation in one direction.
- Sending 90 to the block input produces the maximum rate of rotation in the opposite direction.
- Sending 0 to the block input stops the servo motor.
- Sending out-of-range values, such as -95 or 200, to the block input has the same effect as sending the minimum or maximum input values.

The characteristics of some motors cause them to continue rotating when the block input value is 0. In that case, you can experiment to find an offset value that stops the motor.

With Arduino Mega 2560 hardware, you can use External mode to determine the offset while your model is running on the hardware. See “Tune and Monitor Model Running on Arduino Mega 2560 Hardware”.

The block input inherits the data type of the upstream block, and internally converts it to uint8 with an offset of 90.

During simulations without the hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.


Some limitations:

# Arduino Continuous Servo Write

---

- Do not use Servo blocks with External mode.
- If you use this block in models with the Serial Receive and Serial Transmit blocks, use longer sample times to avoid overruns.
- The maximum number of Servo blocks per model is 12 for most Arduino boards except for Arduino Mega 2560 hardware where the maximum is 48.
- With Arduino Uno hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.
- With Arduino Nano hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.
- With Arduino Mega 2560 hardware, the Arduino PWM block cannot use digital pins 11 or 12 when the model contains more than 12 Servo blocks.
- With Arduino Due hardware, the Arduino PWM block cannot use digital pins 9 or 10 when the model contains Servo blocks.

# Arduino Continuous Servo Write

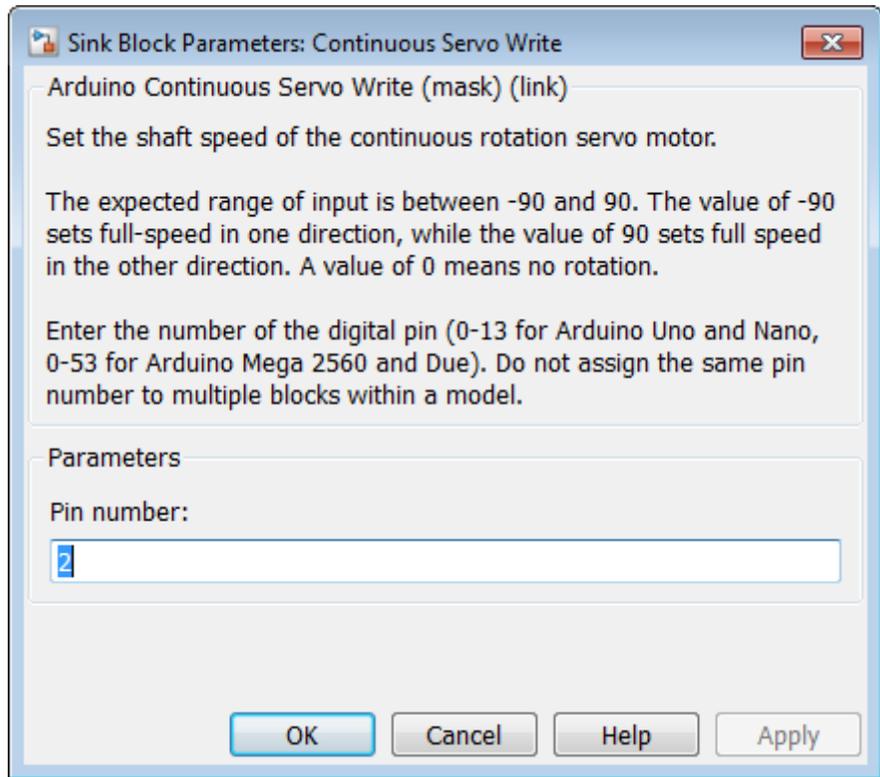

## Dialog Box

### Pin number

Enter the number of the digital pin.

Do not assign the same pin number to multiple blocks within the model.

If you set the **Target hardware** parameter to:

- Arduino Mega 2560, enter a pin number from 0 to 53.
- Arduino Uno, enter a pin number from 0 to 13.
- Arduino Nano, enter a pin number from 0 to 13.

# Arduino Continuous Servo Write

---

- Arduino Due, enter a pin number from 0 to 53.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## See Also

Arduino Standard Servo Read | Arduino Standard Servo Write |  
“Install Support for Arduino Hardware”

## External Web Sites


- <http://arduino.cc/en/Reference/ServoWrite>

**Purpose**

Send UDP message to remote interface

**Library**

Simulink Support Package for Arduino Hardware/Ethernet Shield

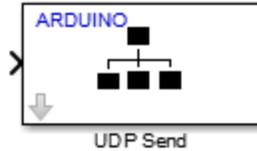**Description**

Send a UDP message to a remote interface identified by the remote IP address and remote port parameters.

Use this block when the transmission speed is of higher priority than the transmission reliability or the order of messages.

The Arduino Ethernet Shield uses the following pins on different Arduino board variants.

- Arduino Mega 2560 – pins 50 to 53.  
  Arduino Uno – pins 10 to 13.


This block input accepts uint8 values.

During simulations without the hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”

# Arduino UDP Send

---

## Dialog Box

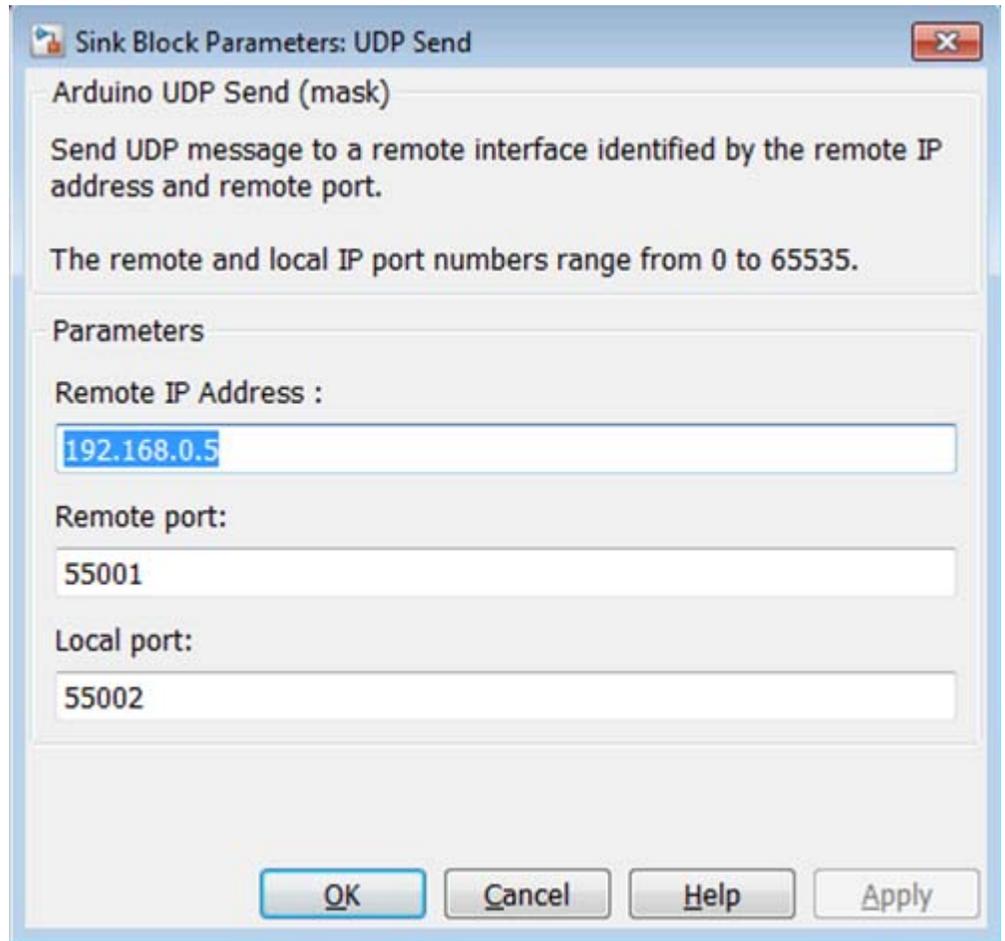

### Remote IP Address

Enter the IP address of the remote interface to which you want to send UDP messages.

**Remote port**

Enter the remote port of the remote interface to which you want to send UDP messages. The remote IP port numbers range from 0 to 65535.

**Local port**

Enter the local port number from which you want to send UDP messages. The local IP port numbers range from 0 to 65535.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

**See Also**

Arduino UDP Receive | Arduino TCP/IP Send | Arduino TCP/IP Receive

**External Web Sites**


- <http://arduino.cc/en/Main/ArduinoEthernetShield>
- <http://arduino.cc/en/Reference/Ethernet>

# Arduino UDP Receive

---

**Purpose** Receive UDP message

**Library** Simulink Support Package for Arduino Hardware/Ethernet Shield

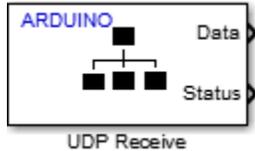

## Description

Receive UDP messages on a local port. This block reads one data packet at a time.

Use this block when the transmission speed is of higher priority than the transmission reliability or the order of messages.

You can monitor the **Status** block output to verify that the data is received successfully.

The Arduino Ethernet Shield uses the following pins on different Arduino board variants.

- Arduino Mega 2560 – pins 50 to 53.
- Arduino Uno – pins 10 to 13.

The UDP Receive block has two outputs, **Data** and **Status**.

When data is available:

- The **Data** block output emits data received from the UDP local port on the Arduino board.
- The **Status** block output emits 1.

When data is not available:


- The **Data** block output emits the last received value.
- The **Status** block output emits 0.

The **Data** block output emits uint8 values.

The **Status** block output emits int values.

During simulations without the hardware, this block emits zeroes. See “Block Produces Zeros or Does Nothing in Simulation”

## Dialog Box

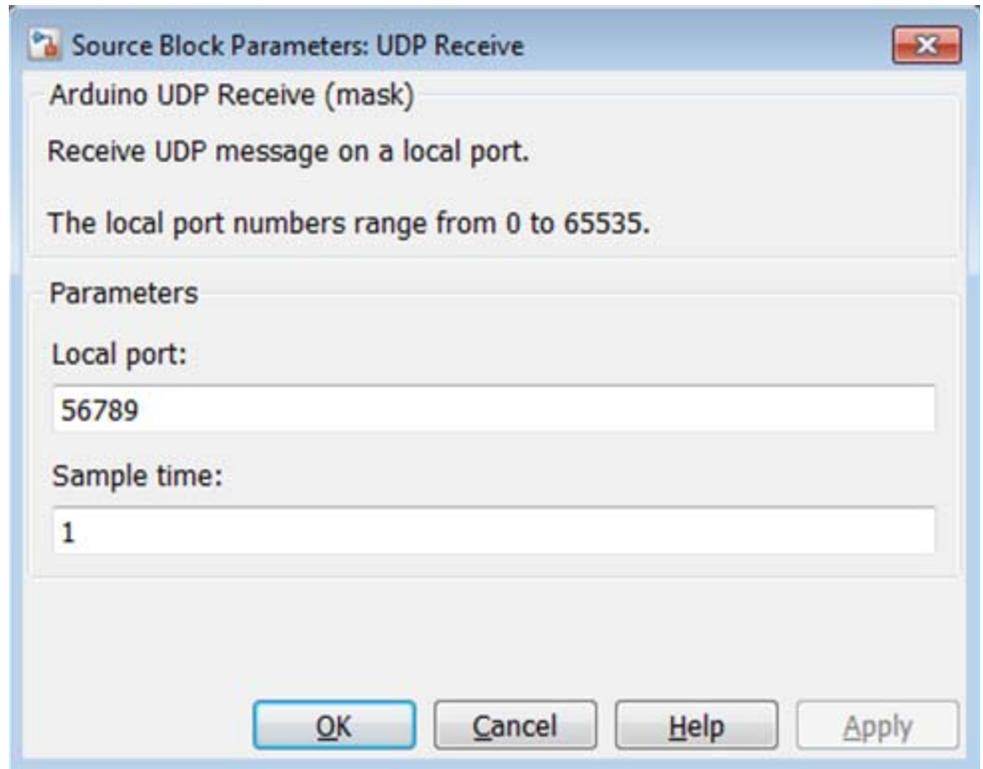

### Local port

Enter the local port through which you want to receive the UDP messages. The local IP port numbers range from 0 to 65535.

# Arduino UDP Receive

---

## Sample time

Specify how often this block reads the UDP messages, in seconds. Enter a value greater than zero. This value defaults to a sample time of 1 second. The minimum value is 0.000001 second.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## See Also

Arduino UDP Send | Arduino TCP/IP Send | Arduino TCP/IP Receive

## External Web Sites


- <http://arduino.cc/en/Main/ArduinoEthernetShield>
- <http://arduino.cc/en/Reference/Ethernet>

## Purpose

Send TCP/IP message from server

## Library

Simulink Support Package for Arduino Hardware/Ethernet Shield

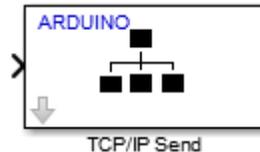

## Description

Send TCP/IP messages from a server over a wired network.

Use this block when your model has the following requirements:

- Reliable message transmission
- Intact order of messages
- Acceptable compromise on the transmission speed

The TCP/IP server created by this block can accept four socket connections on the Arduino board.

The Arduino Ethernet Shield uses the following pins on different Arduino board variants.

- Arduino Mega 2560 – pins 50 to 53.
- Arduino Uno – pins 10 to 13.


This block input accepts uint8 values.

During simulations without the hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”

# Arduino TCP/IP Send

---

## Dialog Box

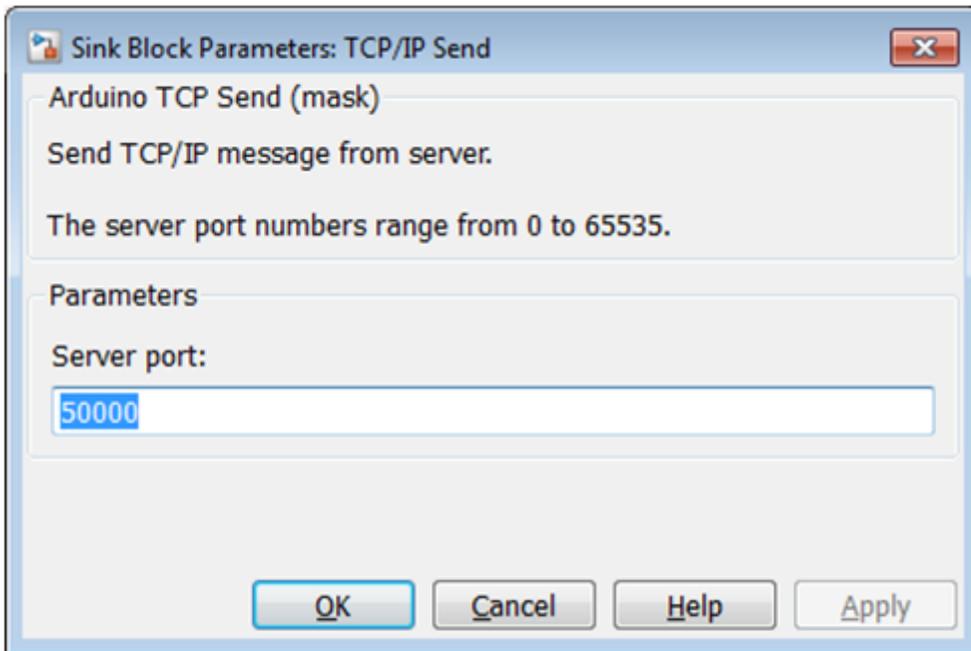

### Server port

Enter the port number through which you want the TCP/IP server to send the messages. The server port numbers range from 0 to 65535.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## See Also

Arduino TCP/IP Receive | Arduino UDP Send | Arduino UDP Receive

## External Web Sites


- <http://arduino.cc/en/Main/ArduinoEthernetShield>
- <http://arduino.cc/en/Reference/Ethernet>

# Arduino TCP/IP Receive

---

**Purpose** Receive TCP/IP message on wired network

**Library** Simulink Support Package for Arduino Hardware/Ethernet Shield

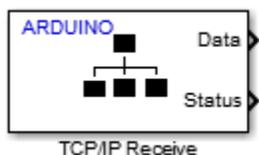

## Description

Receive TCP/IP messages on a server port over a wired network.

Use this block when your model has the following requirements:

- Reliable message transmission
- Intact order of messages
- Acceptable compromise on the transmission speed.

The Arduino Ethernet Shield uses the following pins on different Arduino board variants.

- Arduino Mega 2560 – pins 50 to 53.
- Arduino Uno – pins 10 to 13.

The TCP/IP Receive block has two block outputs, **Data** and **Status**.

When data is available:

- The **Data** block output emits the data received from the TCP/IP server.
- The **Status** block output emits 1.

When the data is not available:

- The **Data** block output emits the last received value.


- The **Status** block output emits 0.

The **Data** block output emits uint8 values.

The **Status** block output emits int values.

During simulations without the hardware, this block emits zeroes. See “Block Produces Zeros or Does Nothing in Simulation”

## Dialog Box

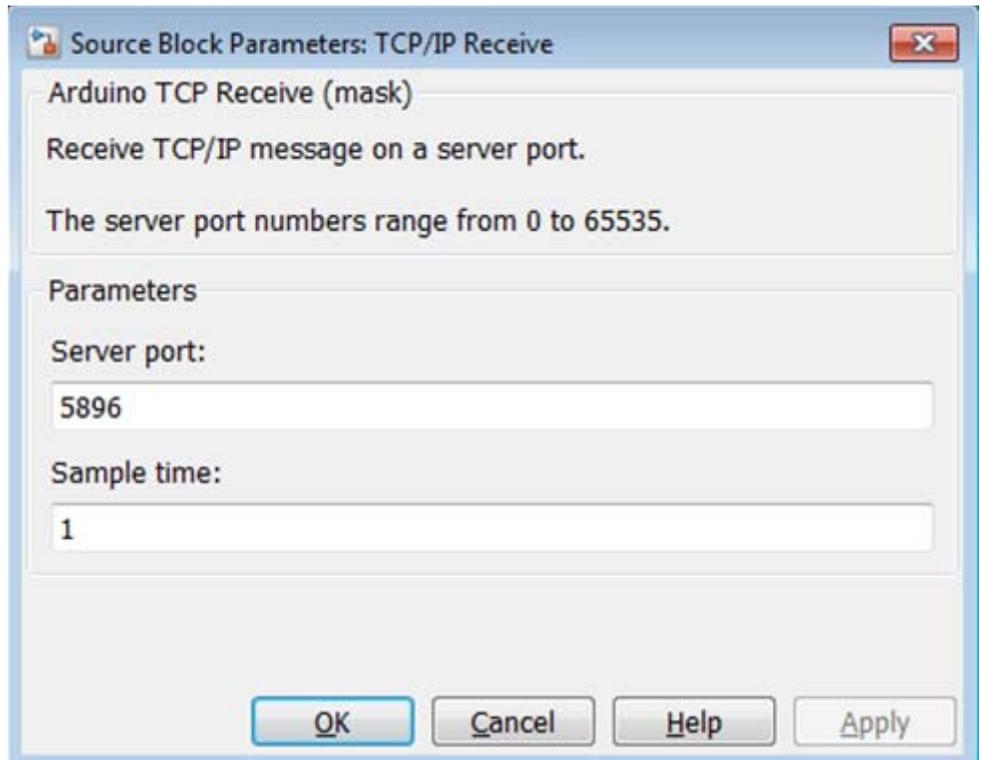

### Server port

Enter the port number through which you want the TCP/IP server to initiate the message reception. The server port numbers range from 0 to 65535.

# Arduino TCP/IP Receive

---

## Sample time

Specify how often this block reads the TCP/IP messages, in seconds. Enter a value greater than zero. This value defaults to a sample time of 1 second. The minimum value is 0.000001 second.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## See Also

Arduino TCP/IP Send | Arduino UDP Send | Arduino UDP Receive

## External Web Sites

- <http://arduino.cc/en/Main/ArduinoEthernetShield>
- <http://arduino.cc/en/Reference/Ethernet>

## Purpose

Receive WiFi TCP/IP message on wireless network

## Library

Simulink Support Package for Arduino Hardware/WiFi Shield



## Description

Receive WiFi TCP/IP messages on a server port over a wireless network.

Use this block when your model has the following requirements:

- Reliable message transmission
- Intact order of messages
- Acceptable compromise on the transmission speed

The Arduino WiFi Shield uses the following pins on different Arduino board variants.

- Arduino Mega 2560 – pins 50 to 53.  
Arduino Uno – pins 10 to 13.

The WiFi TCP/IP Receive block has two block outputs, **Data** and **Status**.

When the data is available:

- The **Data** block output emits the data received.
- The **Status** block output emits 1.

When the data is not available:

- The **Data** block output emits the last received value.

# Arduino WiFi TCP/IP Receive


---

- The **Status** block output emits 0.

The **Data** block output emits uint8 values.

The **Status** block output emits int values.

During simulations without the hardware, this block emits zeroes. See “Block Produces Zeros or Does Nothing in Simulation”

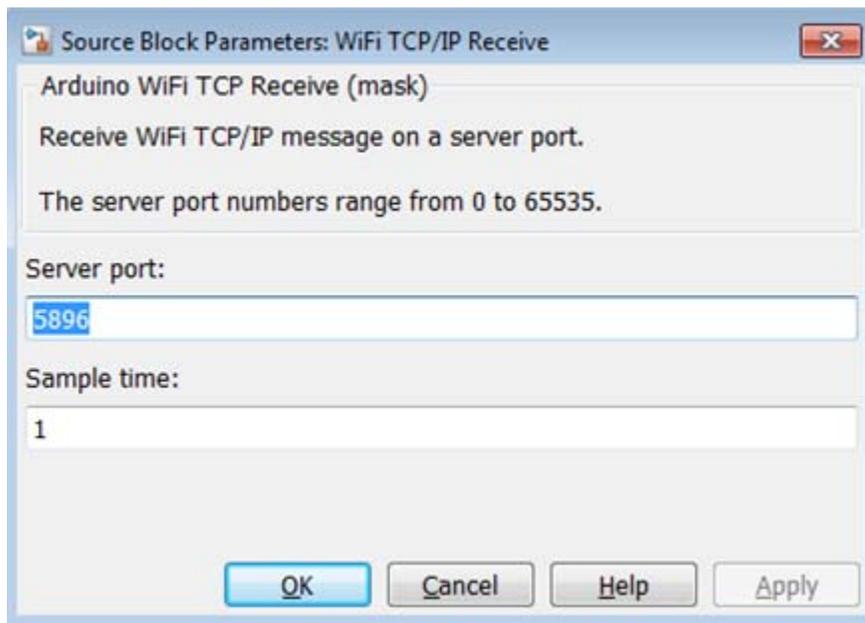

## Dialog Box

### Server port

Enter the port number through which you want the WiFi TCP/IP server to receive messages. The server port numbers range from 0 to 65535.

### Sample time

Specify how often this block reads the WiFi TCP/IP messages, in seconds. Enter a value greater than zero. This value defaults to a sample time of 1 second. The minimum value is 0.000001 second.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## See Also

Arduino WiFi TCP/IP Send | Arduino WiFi UDP Receive | Arduino WiFi UDP Send

## External Web Sites

- <http://arduino.cc/en/Main/ArduinoWiFiShield>
- <http://arduino.cc/en/Reference/WiFi>

# Arduino WiFi TCP/IP Send

---

**Purpose** Send WiFi TCP/IP message from server

**Library** Simulink Support Package for Arduino Hardware/WiFi Shield



## Description

Send WiFi TCP/IP messages from a server over a wireless network.

Use this block when your model has the following requirements:

- Reliable message transmission
- Intact order of messages
- Acceptable compromise on the transmission speed


The WiFi TCP/IP server created by this block can accept four socket connections on the Arduino board.

The Arduino WiFi Shield uses the following pins on different Arduino board variants.

- Arduino Mega 2560 – pins 50 to 53.
- Arduino Uno – pins 10 to 13.

This block input accepts uint8 values.

During simulations without the hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”

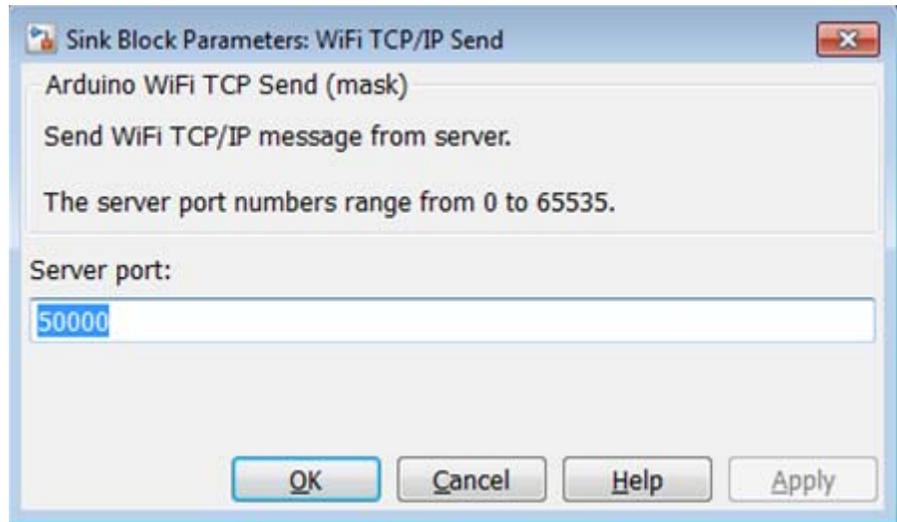

## Dialog Box

### Server port

Enter the port number through which you want the TCP/IP server to send the messages. The server port numbers range from 0 to 65535.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## See Also

Arduino WiFi TCP/IP Receive | Arduino WiFi UDP Receive | Arduino WiFi UDP Send

## External Web Sites

- <http://arduino.cc/en/Main/ArduinoWiFiShield>
- <http://arduino.cc/en/Reference/WiFi>

# Arduino WiFi UDP Receive

---

## Purpose

Receive WiFi UDP message

## Library

Simulink Support Package for Arduino Hardware/WiFi Shield



## Description

Receive WiFi UDP messages on a local port. This block reads one data packet at a time.

Use this block when the transmission speed is of higher priority than the transmission reliability or the order of messages. You can monitor the **Status** block output to check if the data is received successfully.

The Arduino WiFi Shield uses the following pins on different Arduino board variants.

- Arduino Mega 2560 – pins 50 to 53.  
Arduino Uno – pins 10 to 13.

The WiFi UDP Receive block has two output ports, **Data** and **Status**.

When data is available:

- The **Data** block output emits data received from the UDP local port on the Arduino.
- The **Status** block output emits 1.


When data is not available:

- The **Data** block output emits the last received value.
- The **Status** block output emits 0.

The **Data** block output emits uint8 values.

The **Status** block output emits int values.

During simulations without the hardware, this block emits zeroes. See “Block Produces Zeros or Does Nothing in Simulation”

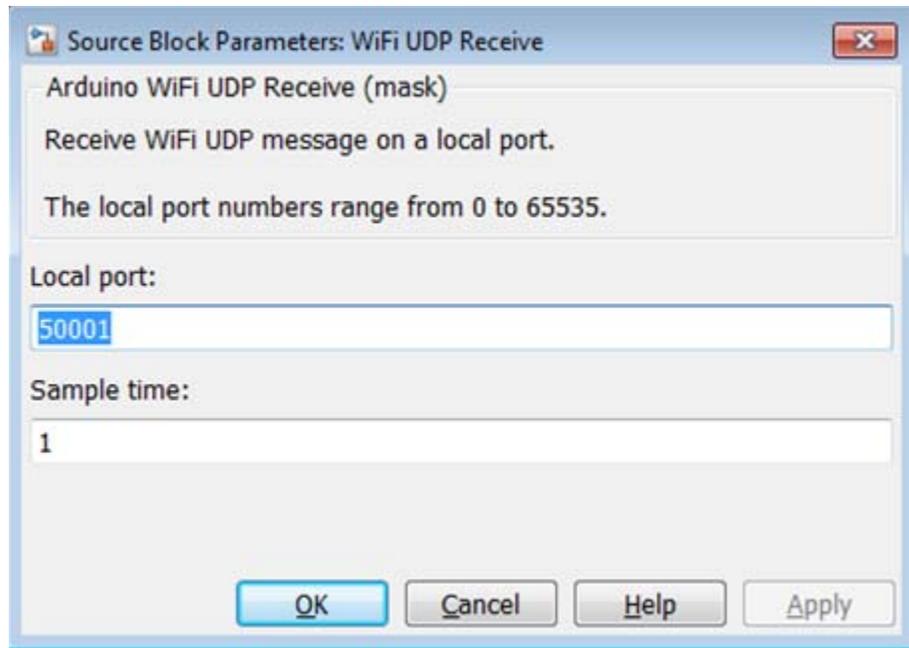

## Dialog Box

### Local port

Enter the local port through which you want to receive the WiFi UDP messages. The local IP port numbers range from 0 to 65535.

### Sample time

Specify how often this block reads the WiFi UDP messages, in seconds. Enter a value greater than zero. This value defaults to a sample time of 1 second. The minimum value is 0.000001 second.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

# Arduino WiFi UDP Receive

---

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## See Also

Arduino WiFi TCP/IP Receive | Arduino WiFi TCP/IP Send | Arduino WiFi UDP Send

## External Web Sites

- <http://arduino.cc/en/Main/ArduinoWiFiShield>
- <http://arduino.cc/en/Reference/WiFi>

## Purpose

Send WiFi UDP message to remote interface

## Library

Simulink Support Package for Arduino Hardware/WiFi Shield



## Description

Send WiFi UDP messages to a remote interface identified by the remote IP address and remote IP port parameters.

Use this block when the transmission speed is of higher priority than the transmission reliability or the order of messages.


The Arduino WiFi Shield uses the following pins on different Arduino board variants.

- Arduino Mega 2560 – pins 50 to 53.  
Arduino Uno – pins 10 to 13.

This block input accepts uint8 values.

During simulations without the hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”

# Arduino WiFi UDP Send

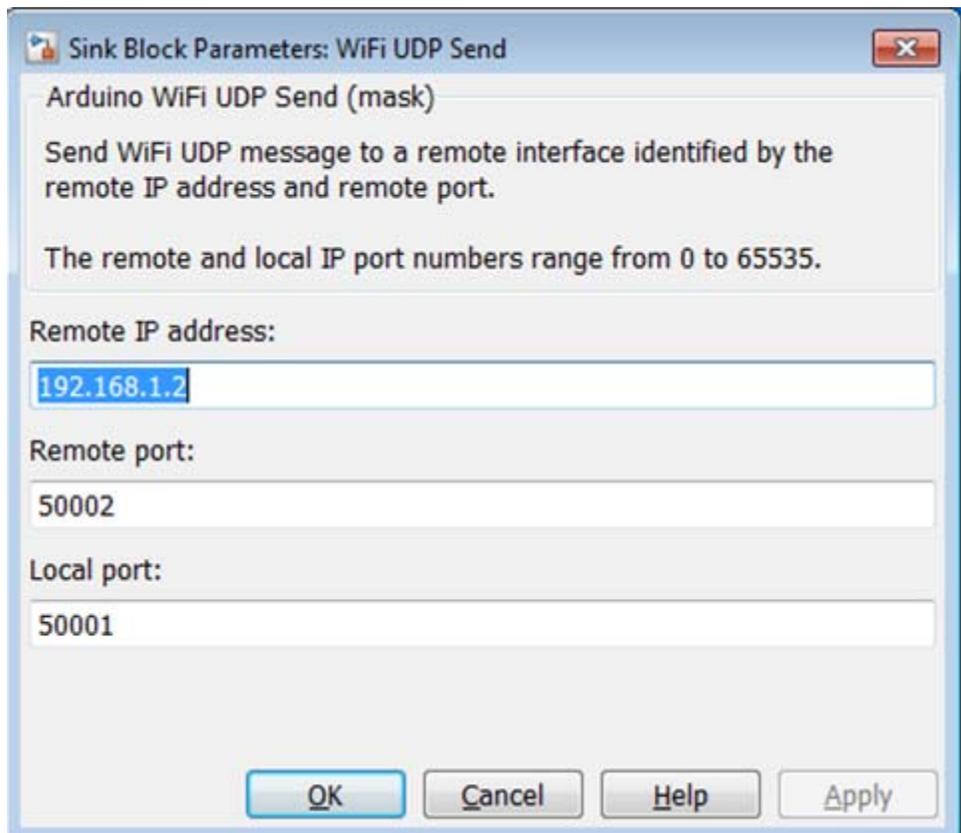

## Dialog Box

### Remote IP Address

Enter the IP address of the remote interface to which you want to send WiFi UDP messages.

### Remote port

Enter the remote port of the remote interface to which you want to send WiFi UDP messages. The remote IP port numbers range from 0 to 65535.

## Local port

Enter the local port number from which you want send the WiFi UDP messages. The local IP port numbers range from 0 to 65535.

---

**Note** To change the **Target hardware** parameter, select **Tools > Run on Target Hardware > Options**.

---

## See Also

Arduino WiFi TCP/IP Send | Arduino WiFi TCP/IP Send | Arduino WiFi UDP Receive

## External Web Sites


- <http://arduino.cc/en/Main/ArduinoWiFiShield>
- <http://arduino.cc/en/Reference/WiFi>

# LEGO MINDSTORMS NXT Acceleration Sensor

---

**Purpose** Measure acceleration along three axes


**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

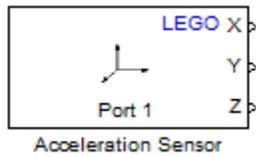

## Description

Measure the linear acceleration along the X, Y, and Z axes of the NAC1040 HiTechnic NXT Acceleration / Tilt Sensor.

The axes of the sensor are oriented as shown here.

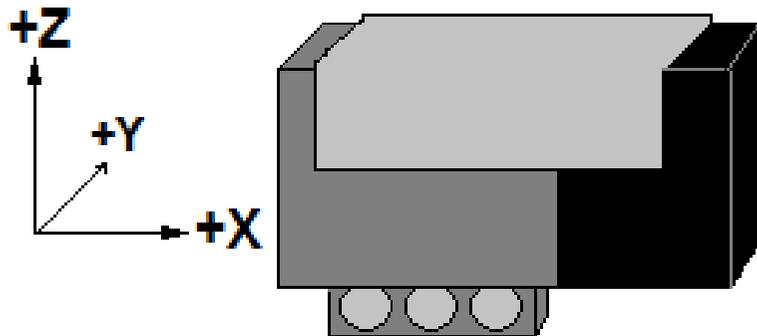

For each axis, the sensor measures -2 g to +2 g of acceleration. The sensor outputs approximately 200 counts per g.

---

**Note** The SI equivalent of 1 g is 9.8 meters per second squared.

---

You can use this sensor to:

# LEGO MINDSTORMS NXT Acceleration Sensor

- Determine the orientation of the sensor, for example in a self-levelling robot.
- Measure small and moderate acceleration forces, such as road surface vibration and acceleration in a vehicle.
- Detect larger acceleration events, such as a collision.


If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

## Use the Acceleration Sensor

View the changing outputs of an acceleration sensor as you change the orientation of the sensor.

Open the `legonxtlib` block library and copy the blocks shown to a new model.

Connect the Acceleration Sensor block to the LCD blocks, as shown.

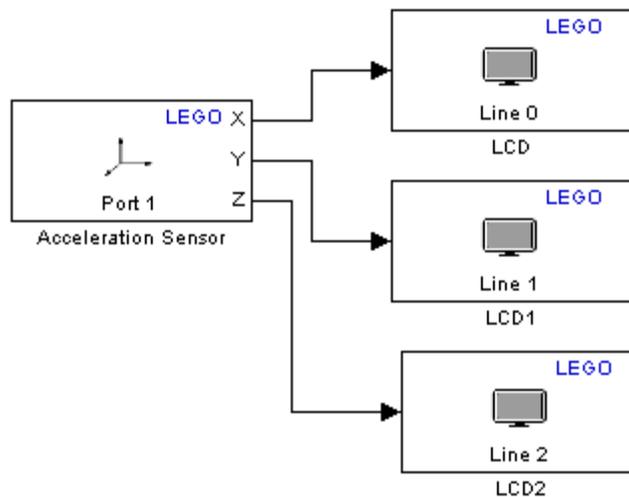

# LEGO MINDSTORMS NXT Acceleration Sensor

---

Double click each LCD block to open the block masks for each block.

Use the **Display at line** parameters to select a different line number for each block.


Use the **Display label** parameters to add an X, Y, or Z label for each line.

Connect the Acceleration sensor to Port 1 on the NXT brick.


Prepare and run the model on the NXT brick.

Move the Acceleration sensor about and observe the outputs on the LCD.

Position the Acceleration sensor on a table and systematically change the orientation of the sensor. The horizontal axes, such as X and Y in the following illustration, output values near zero. The vertical axis, such as Z in the following illustration, measures Earth's gravitational acceleration and therefore outputs a value near 200. If you invert the Z axis from the position shown, the sensor outputs a value near -200.

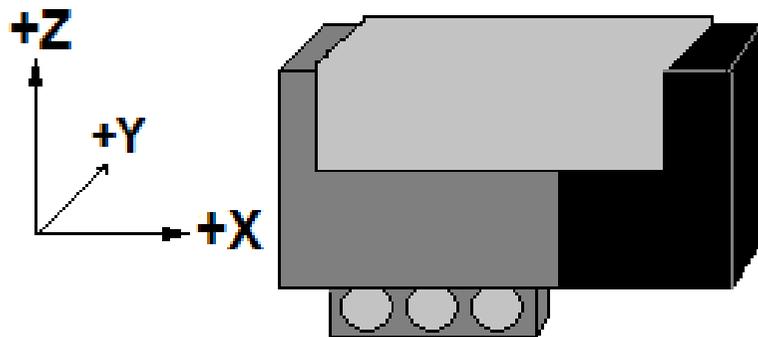

# LEGO MINDSTORMS NXT Acceleration Sensor

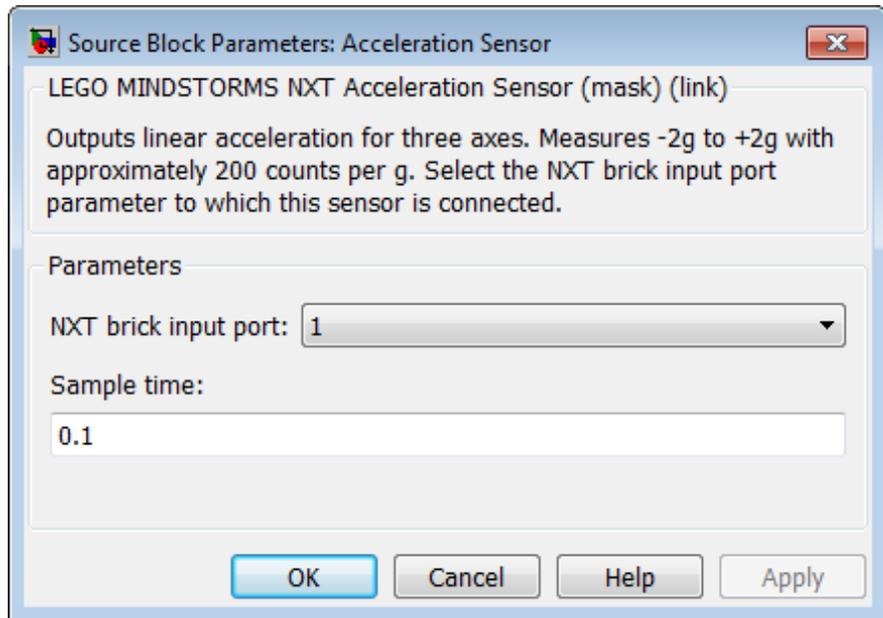

## Dialog Box

### NXT brick input port

Select the NXT sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

### Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

“Install Support for LEGO® MINDSTORMS® NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## External Web Sites


- HiTechnic NXT Acceleration / Tilt Sensor (NAC1040)

# LEGO MINDSTORMS NXT Battery

---

**Purpose** Measure voltage of battery in NXT brick

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

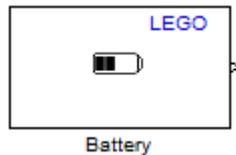

## Description


This block measures the voltage of the battery located in the NXT brick, and outputs the value in millivolts. For example, when the six 1.5 volt batteries are fully charged, the output value is approximately 9000.

If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

## Measure Battery Voltage

Measure the voltage of the batteries in the NXT brick.


Open the `legonxtlib` block library and copy the blocks shown to a new model.

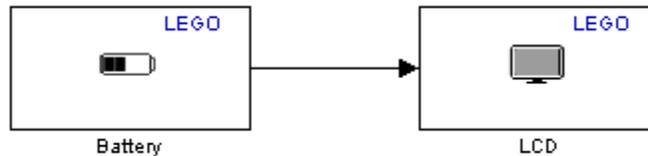

Connect the Battery block to the LCD block, as shown.

Prepare and run the model on the NXT brick.

Observe the battery voltage, shown in millivolts, on the LCD display.

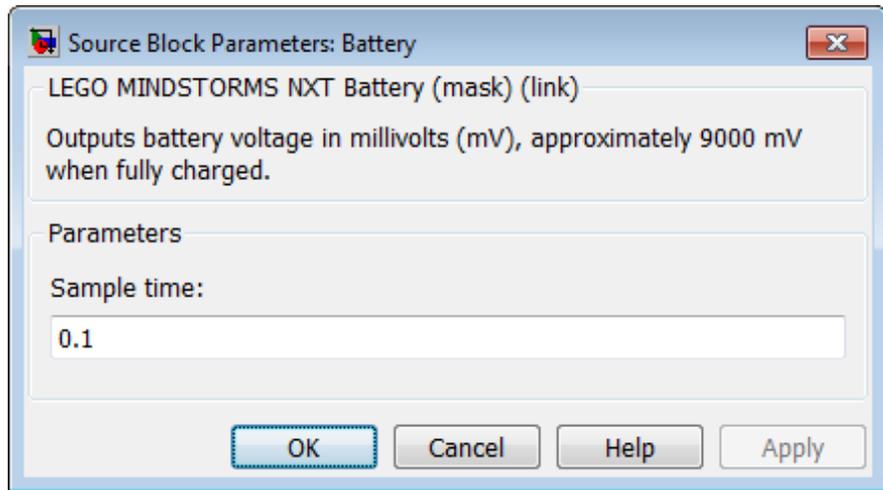

## Dialog Box

### Sample time

Specify how often the block reads battery values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

LEGO MINDSTORMS NXT Battery | LEGO MINDSTORMS NXT Button | LEGO MINDSTORMS NXT LCD | LEGO MINDSTORMS NXT Speaker | LEGO MINDSTORMS NXT Timer | “Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## External Web Sites

- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Receive via Bluetooth Connection

---

**Purpose** Receive data from another NXT brick over Bluetooth

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware



**Description** Receive via Bluetooth(R) Connection

Receive data from another NXT brick over the built-in Bluetooth® device. The model running on the other NXT brick must contain a Send via Bluetooth Connection block.


To establish multiple channels between the two NXT bricks, use multiple pairs of Bluetooth blocks, and set the Mailbox parameters for each pair to a unique number. This approach cannot be used to establish communication between more than two NXT bricks.

---

**Note** Because External mode relies on a Bluetooth connection between the host computer and the NXT brick, you cannot use External mode with models that contain a Send via Bluetooth Connection block or a Receive via Bluetooth Connection block.

---

# LEGO MINDSTORMS NXT Receive via Bluetooth Connection

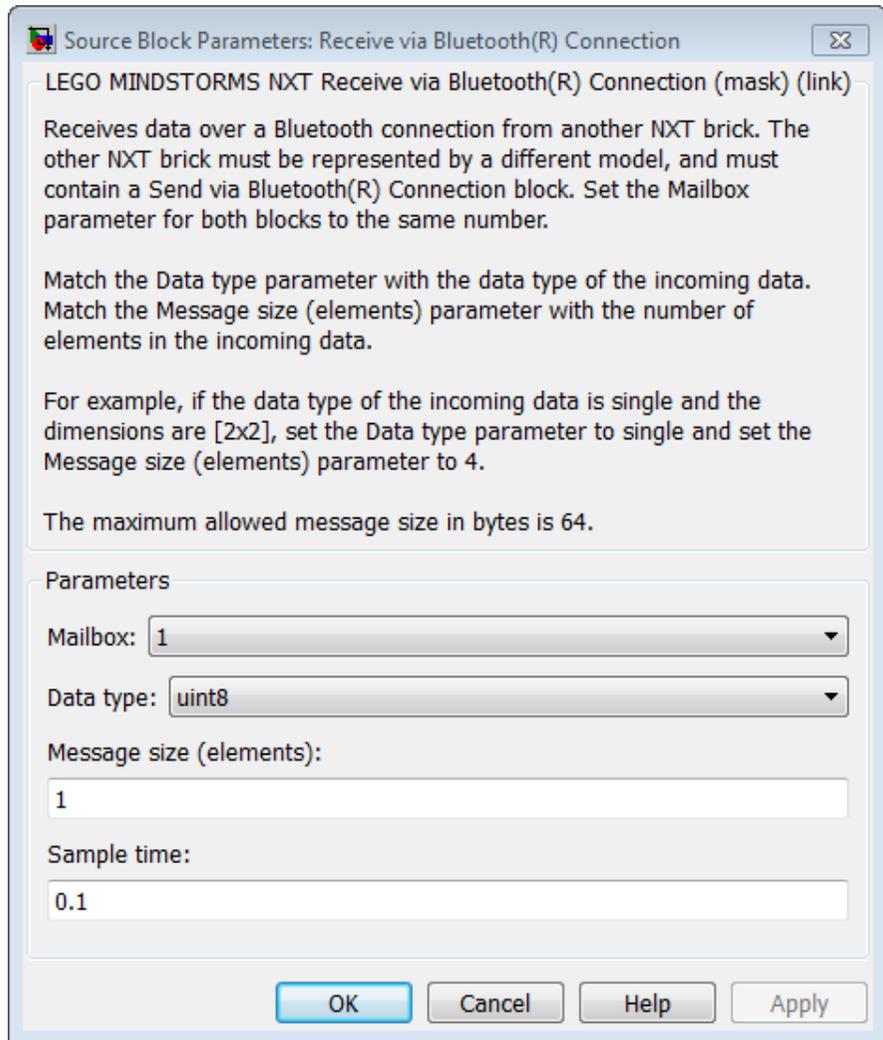

## Dialog Box

### Mailbox

Set the Mailbox parameter in both the Send via Bluetooth Connection and Receive via Bluetooth Connection blocks to the same number.

# LEGO MINDSTORMS NXT Receive via Bluetooth Connection

---

## Data type

Match the **Data type** parameter with the data type of the incoming data.

## Message size (elements)

Match the **Message size (elements)** parameter with the number of elements in the incoming data. For example, if the data type of the incoming data is single and the dimensions are [2x2], set the **Message size (elements)** parameter to single and set the **Message size (elements)** to 4.

## Sample time

Specify how often the block reads buffer values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

LEGO MINDSTORMS NXT Send via Bluetooth Connection | “Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## Related Examples

- “Exchange Data Between Two NXT Bricks”

## External Web Sites

- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Send via Bluetooth Connection

---

**Purpose** Send data to another NXT brick over Bluetooth

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware



**Description** Send via Bluetooth(R) Connection

Send data to another NXT brick over the built-in Bluetooth device. The model running on the other NXT brick must contain a Receive via Bluetooth Connection block.

To establish multiple channels between the two NXT bricks, use multiple pairs of Bluetooth blocks, and set the Mailbox parameters for each pair to a unique number. This approach cannot be used to establish communication between more than two NXT bricks.


The maximum size for the block input is 64 bytes. The supported data types for the block input are uint8, int8, uint16, int16, uint32, int32, single, and double.

---

**Note** Because External mode relies on a Bluetooth connection between the host computer and the NXT brick, you cannot use External mode with models that contain a Send via Bluetooth Connection block or a Receive via Bluetooth Connection block.

---

# LEGO MINDSTORMS NXT Send via Bluetooth Connection

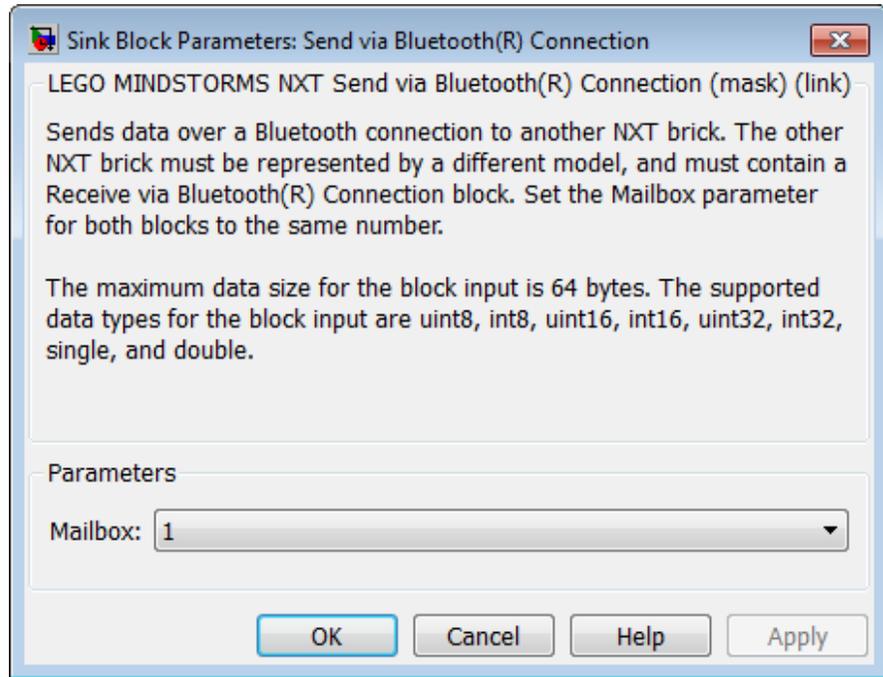

## Dialog Box

### Mailbox

Set the Mailbox parameter in both the Send via Bluetooth Connection and Receive via Bluetooth Connection blocks to the same number.

## See Also

LEGO MINDSTORMS NXT Receive via Bluetooth Connection | “Install Support for LEGO MINDSTORMS NXT Hardware”

## Related Examples

- “Exchange Data Between Two NXT Bricks”

## External Web Sites

- <http://mindstorms.lego.com>

## Purpose

Output state of button on NXT brick

## Library

Simulink Support Package for LEGO MINDSTORMS NXT Hardware

## Description



Get the state of the “middle orange” or “right arrow” button on the NXT brick: 1 while pressed and 0 while released.


If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

## Use the Button

Measure the voltage of the batteries in the NXT brick.

Open the `legonxtlib` block library and copy the blocks shown to a new model.


Connect the Button block to the LCD block, as shown.

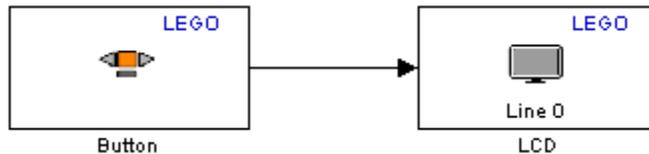

Prepare and run the model on the NXT brick.

Press the orange button on the NXT brick, and observe 0 on the LCD display turn to 1.

# LEGO MINDSTORMS NXT Button

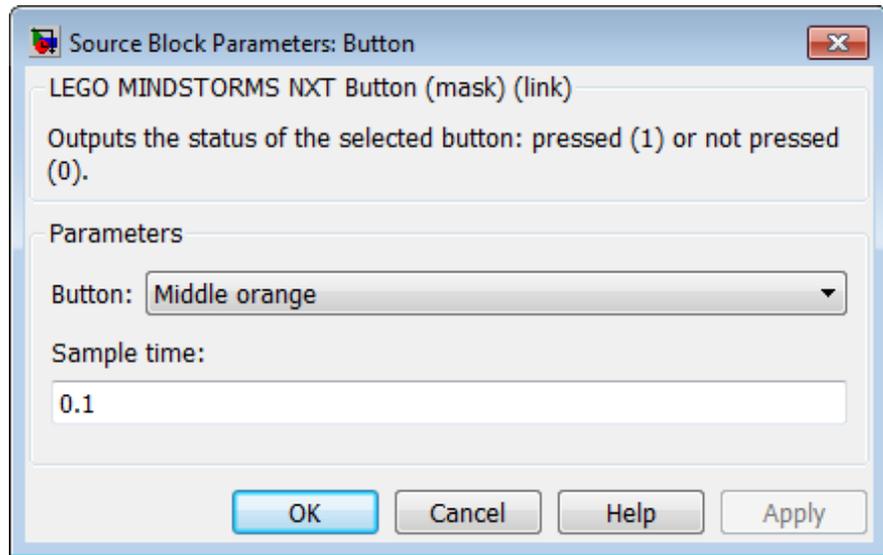

## Dialog Box

### Button

Select the button for which to output status. The options are Middle orange and Right arrow.

### Sample time

Specify how often the block reads the state of the button.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

LEGO MINDSTORMS NXT Battery | LEGO MINDSTORMS NXT Button | LEGO MINDSTORMS NXT LCD | LEGO MINDSTORMS NXT Speaker | LEGO MINDSTORMS NXT Timer | “Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## External Web Sites

- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Color Sensor

---


## Purpose

Measure color or light intensity

## Library

Simulink Support Package for LEGO MINDSTORMS NXT Hardware

## Description

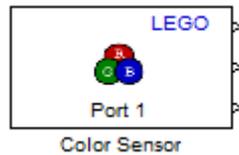

Measure color, or light intensity (luminance) from the LEGO 9841 Color Sensor. The sensor measures color using separate red, green, and blue (RGB) components.

If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.


### Use the Color Sensor

Use the Color Sensor block to measure the color or light intensity of an object.

- 1 Open the `legonxtlib` block library and copy the blocks shown to a new model.

# LEGO MINDSTORMS NXT Color Sensor

---

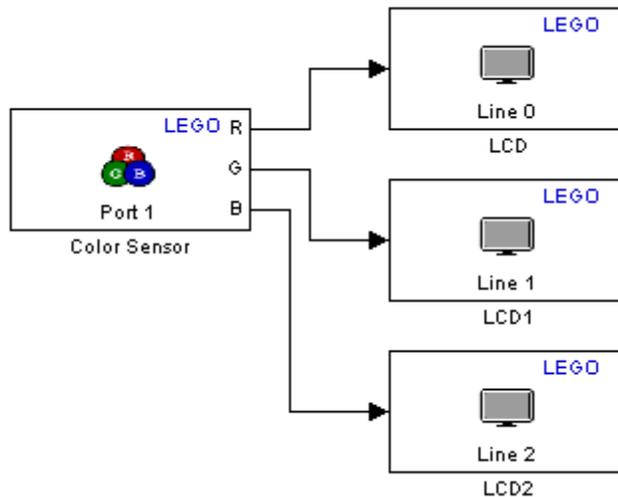

- 2 Connect the Color Sensor block to the LCD blocks.
- 3 Double click each LCD block to open the block masks for each block.  
  
Use the **Display at line** parameters to select a different line number for each block.  
  
Use the **Display label** parameters to add an R, G, or B label for each line.
- 4 Connect the color sensor to Port 1 on the NXT brick.
- 5 Prepare and run the model on the NXT brick.
- 6 Point the color sensor at a variety of well-lit colored objects and observe the measured red, green, and blue components of that color on the LCD. When you point the sensor at a bright white light, all three output values are near 255. When you point the sensor at a dark shadow, all three output values are low, nearer to 0.

# LEGO MINDSTORMS NXT Color Sensor

---


- 7** In the Color Sensor block, change the **Sensor type** parameter to **Light**. This action changes the block output for the red component, **R**, into an unlabeled block output for light measurements.
- 8** Delete the broken connectors and unused LCD blocks from the model, and then run the model on the NXT brick.
- 9** Point the color sensor at a variety of well-lit colored objects and observe the light measurements. When you point the sensor at a bright white light, the block output values are high, near 90. When you point the sensor at a dark shadow, all three output values are low, near 6.

---

**Note** For accurate color measurements, position the sensor approximately 1 to 2 inches (2.5 to 5 cm) from the object.

---

# LEGO MINDSTORMS NXT Color Sensor

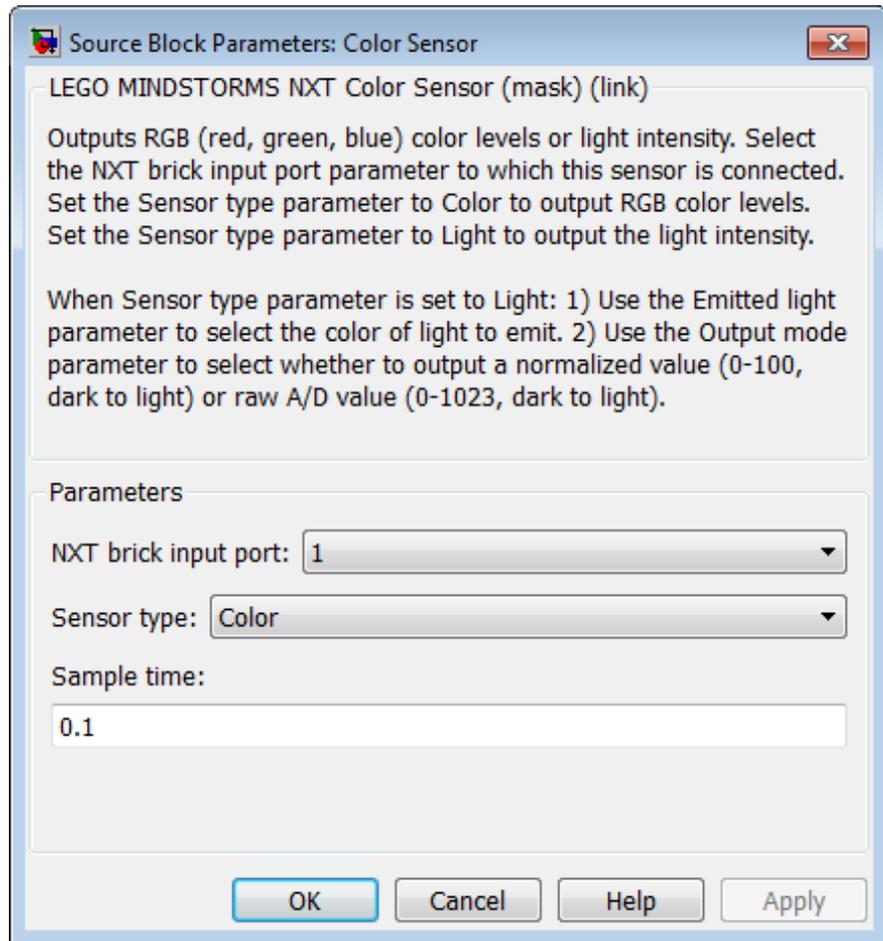

## Dialog Box

### NXT brick input port

Select the NXT sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

# LEGO MINDSTORMS NXT Color Sensor

---

## Sensor type

Select the type of measurement to perform, Color (the default) or Light.

When you select Color, the block outputs a 1-by-3 matrix of RGB values. Each value ranges from 0 (darkest) to 255 (brightest).

When you select Light, the block displays two new parameters, **Emitted light** and **Output mode**.

## Emitted light

This parameter is only available when the **Sensor type** parameter is set to Light.

Use **Emitted light** to choose the color of light the LED on the sensor emits, or to turn the LED off. The options are Red, Green, Blue, White, and None.

## Output mode

This parameter is only available when the **Sensor type** parameter is set to Light.

Select the range the block outputs, Normalized (0-100) or Raw A/D (0-1023).

When you select Normalized (0-100), the block outputs light intensity as normalized values that range from 0 (darkest) to 100 (brightest).

When you select Raw A/D (0-1023), the block outputs light intensity as raw values that ranges from 0 (darkest) to 1023 (brightest).

## Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

# LEGO MINDSTORMS NXT Color Sensor

---

## See Also

LEGO MINDSTORMS NXT Light Sensor | “Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## External Web Sites

- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Compass Sensor

---


## Purpose

Read magnetic heading of compass sensor

## Library

Simulink Support Package for LEGO MINDSTORMS NXT Hardware

## Description

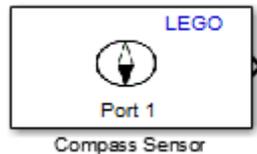

Read the magnetic heading of the compass sensor. The block outputs the heading as a int8 value, from 0 to 359, where:

- 0 is North
- 90 is East
- 180 is South
- 270 is West

The sensor reads the heading 100 times per second, and is accurate to within 1 degree.

This block supports the following sensors:


- HiTechnic NXT Compass Sensor (NMC1034)
- LEGO MINDSTORMS NXT Compass Sensor, Item: #10285

To configure the block, select the NXT brick input port parameter to which this sensor is connected.

Position the sensor away from sources of magnetic interference, such as motors and speakers. This block does not provide a calibration mode to reduce the effects of magnetic interference from nearby objects.

If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

# LEGO MINDSTORMS NXT Compass Sensor

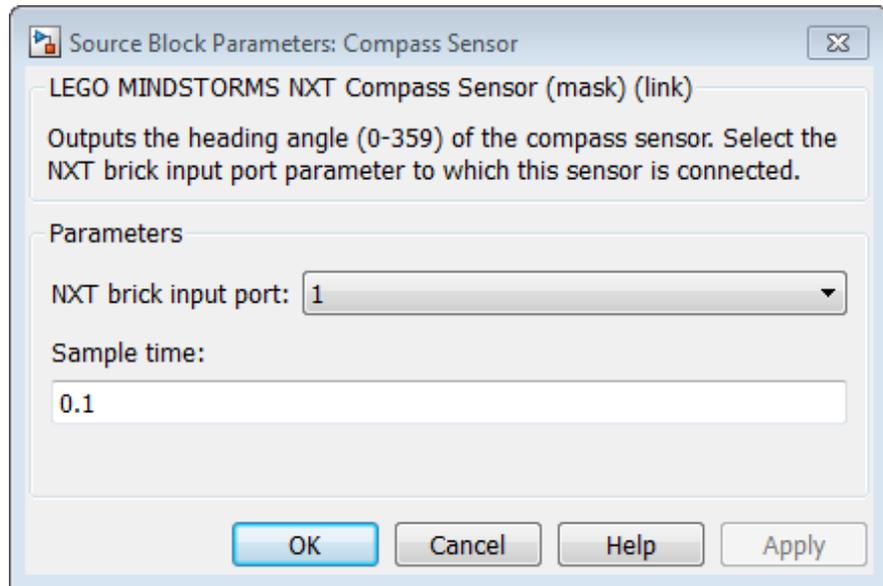

## Dialog Box

### NXT brick input port

Select the NXT sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

### Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

“Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”


## External Web Sites

- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT IR Receiver Sensor

**Purpose** Receive infrared signals from LEGO Power Functions IR Speed Remote Control

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

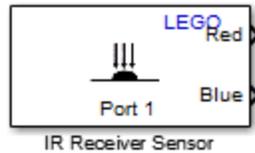

## Description

Receive infrared signals from LEGO Power Functions IR Speed Remote Control.

The remote control has two channels:

- The left dial and stop button are “red”.
- The right dial and stop button are “blue”.

For each channel on the remote control:


- Turning the transmitter on initializes the output value to 0.
- Rotating the dial either way increases or decreases the output value to: [-100, -86, -72, -58, -44, -30, -16, 0, 16, 30, 44, 58, 72, 86, 100]
- Changing the position of the black switch inverts polarity of the dial.
- Pressing the red “stop” button resets the output value to 0.

With the block switch in the down position, turning a dial clockwise outputs positive values.

To configure the block, select the NXT brick input port to which this sensor is connected. Select the Channel parameter to match the channel setting on the remote control.

# LEGO MINDSTORMS NXT IR Receiver Sensor

If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

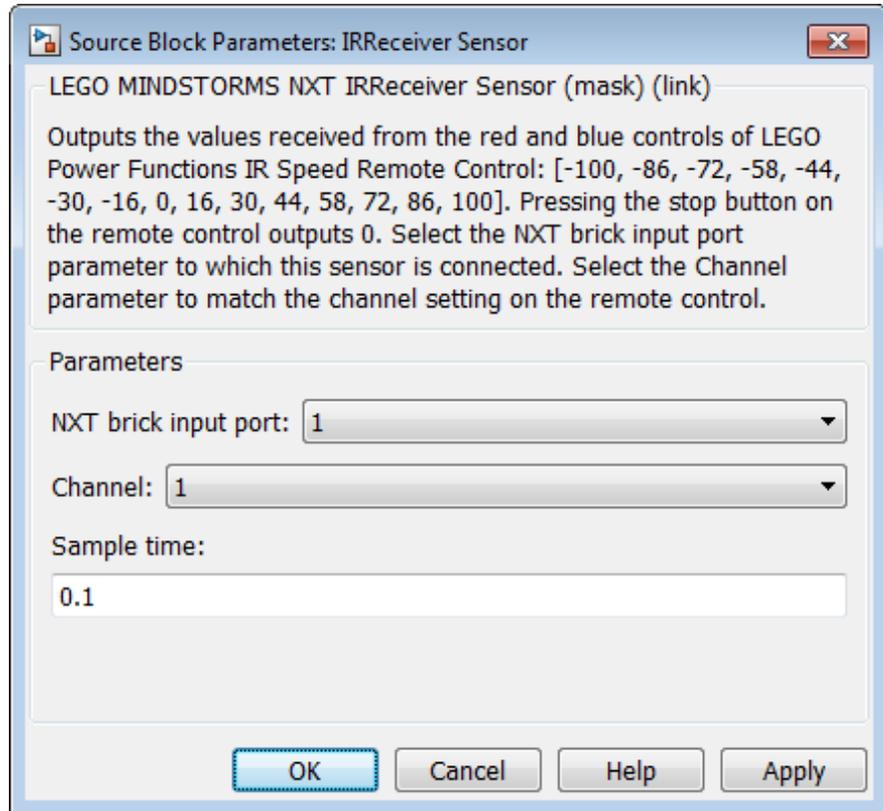

## Dialog Box

### NXT brick input port

Select the NXT sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

# LEGO MINDSTORMS NXT IR Receiver Sensor

---

## Channel

Update this value to match the channel setting on the remote control.

## Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

LEGO MINDSTORMS NXT Light Sensor | “Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## External Web Sites


- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Encoder

---

**Purpose** Measure encoder rotation from NXT Interactive Servo Motor

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

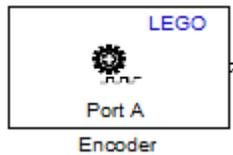

## Description


This block uses the encoder in the LEGO 9842 Interactive Servo Motor to measure the rotation of the wheel in degrees. Driving the wheel forward increments the measurement, and driving the wheel in reverse decrements the measurement.

If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

## Use the Encoder

Use the Encoder block to measure encoder rotation from an NXT Interactive Servo Motor

Open the `legonxtlib` block library and copy the blocks shown to a new model.

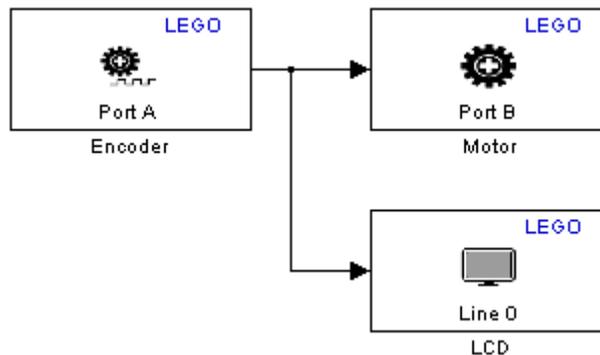

Connect the Encoder block to the Motor block and the LCD block, as shown.

Double click the Motor block to open the block mask, and change the **NXT brick output port** parameter to B.

Connect one servo motor to Port A on the NXT brick. Connect another servo motor to Port B on the NXT brick.

Prepare and run the model on the NXT brick.


Slowly rotate the wheel of servo motor connected to Port A in each direction. Observe the servo motor connected to Port B drive in one direction and then in the other direction as you input positive or negative values. Using the input value displayed on the LCD, observe that values larger than 100 or -100 do not increase the motor speed.

In the Encoder block, experiment with changing the **Reset mode** parameter to **Reset** at each sample time, and changing the **Sample time** parameter to 1.

Run the model on the NXT brick again.

Observe that the block output values remain lower and reset to zero every second.

# LEGO MINDSTORMS NXT Encoder

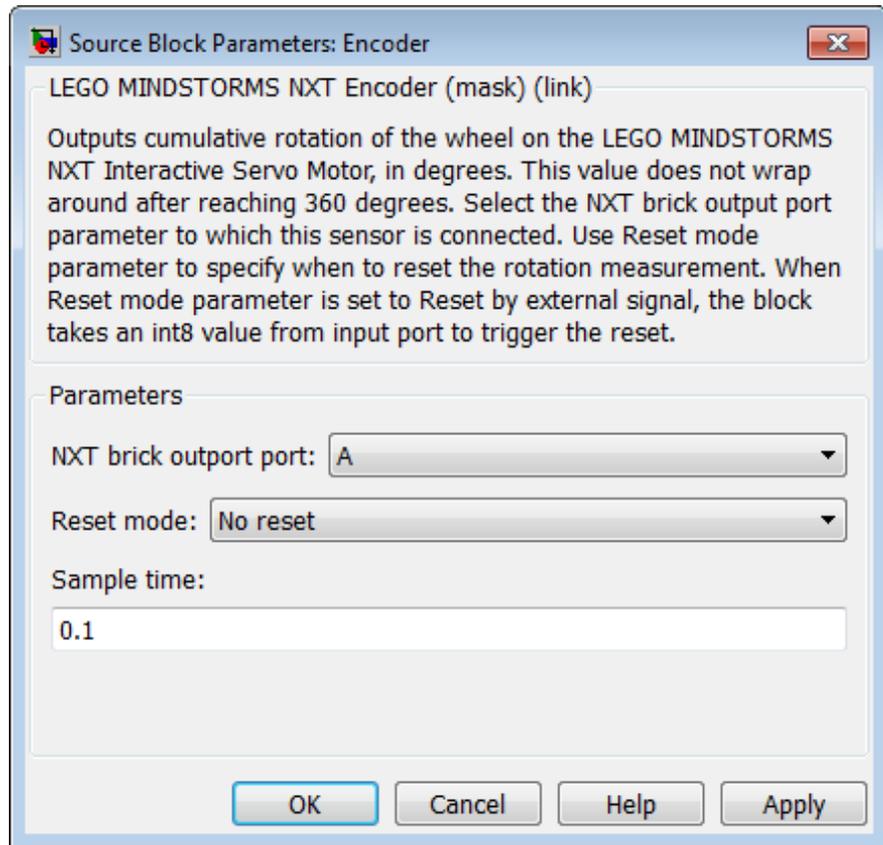

## Dialog Box

### NXT brick output port

Select the NXT brick output port to which the encoder is connected. The options are A, B, or C.

The LEGO 9842 Interactive Servo Motor contains both a motor and an encoder. If your model uses a Motor block and an Encoder block for the same LEGO 9842 Interactive Servo Motor, set the **NXT brick output port** parameter in both of those blocks to the same port.

## Reset mode

Choose whether to reset the measurement value:

- **No reset** — Do not reset the measurement value. Measure the total degrees of rotation.
- **Reset at each sample time** — For each sample period, output the measurement value and then reset it to 0.
- **Reset by external signal** — Create a block input that can reset the measurement value to 0. When you send a value other than 0 to the block input, reset the measurement value to 0. For each sample period, output the measurement value since the last reset.

## Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

LEGO MINDSTORMS NXT Motor | “Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## External Web Sites


- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT GPS Sensor

---

**Purpose** Measure latitude and longitude, or heading and distance to GPS position

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

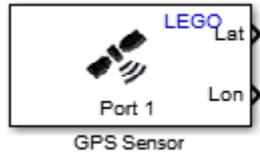

**Description**


This block requires a dGPS GPS Sensor for Mindstorms NXT from Dexter Industries.

---

**Note** If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

---

# LEGO MINDSTORMS NXT GPS Sensor

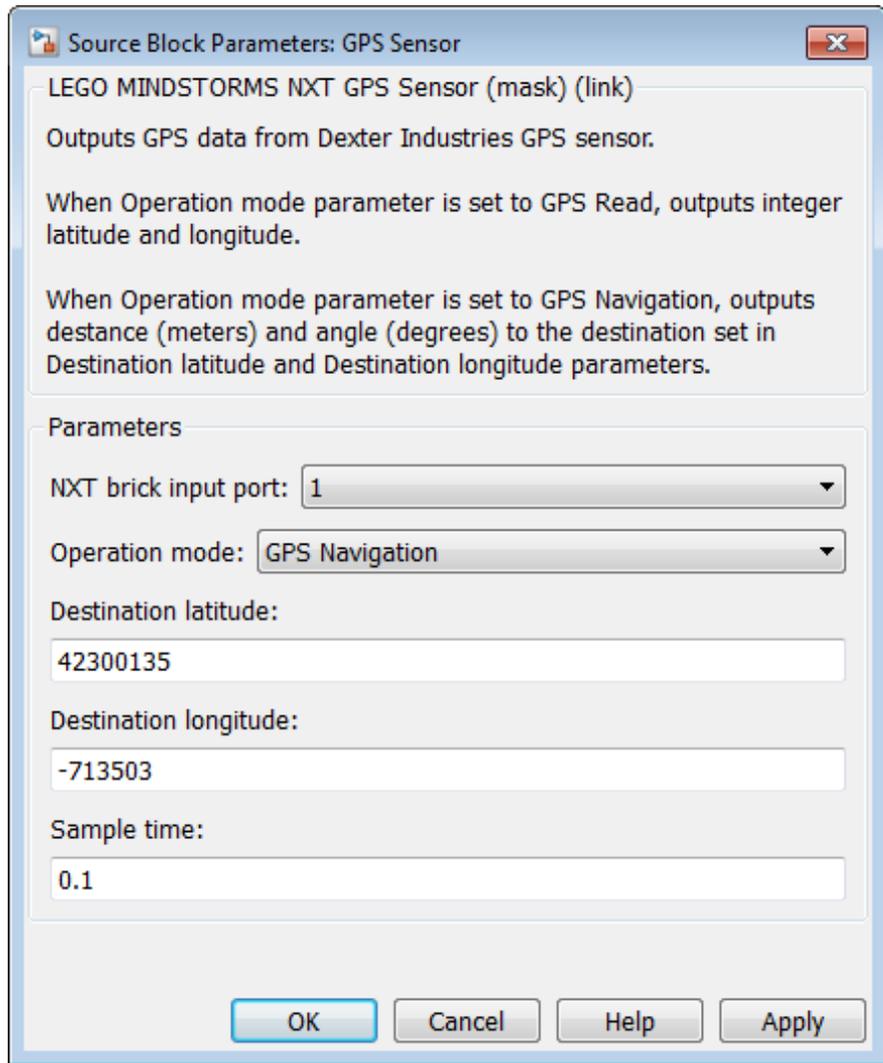

## Dialog Box

### NXT brick input port

Select the NXT sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

# LEGO MINDSTORMS NXT GPS Sensor

---

## Operation mode

Select the mode of operation:

GPS Read sends the latitude and longitude of the GPS sensor to the **Lat** and **Lon** outputs on the block. The values are expressed as positive or negative integer values.

GPS Navigation sends the distance and angle from the current GPS sensor position to the **Destination latitude** and **Destination longitude** to the **Dst** and **AgI** outputs on the block.

## Destination latitude

When **Operation mode** is GPS Navigation, specify the latitude of the destination. Get the latitude in decimal degrees format, remove the decimal point, and enter the value using 8 integers. The two left-most integers are the degrees latitude. Use zero as a placeholder for unused integers. Use a hyphen to indicate negative latitudes.

For example:

- The latitude of MathWorks in Natick, Massachusetts, USA, expressed in decimal degrees, is 42.300135. For **Destination latitude**, enter this latitude as 42300135.
- The latitude of Cape Town, South Africa, expressed in decimal degrees, is -33.924868. For **Destination latitude**, enter this as -33924868.

## Destination longitude

When **Operation mode** is GPS Navigation, specify the longitude of the destination. Get the longitude in decimal degrees format, remove the decimal point, and enter the value using 9 integers. The three left-most integers are the degrees longitude. Use zero as a placeholder for unused integers. Use a hyphen to indicate negative longitudes.

For example:

# LEGO MINDSTORMS NXT GPS Sensor

---

- The longitude of MathWorks in Natick, Massachusetts, USA, expressed in decimal degrees, is -71.3503011. For **Destination longitude**, enter this longitude as -071350301
- The longitude of Cape Town, South Africa, expressed in decimal degrees, is 18.424055. For **Destination longitude**, enter this as 018424055.

## Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

“Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## External Web Sites


- <http://www.dexterindustries.com/dGPS.html>
- <http://www.dexterindustries.com/manual/dgps-2/>

# LEGO MINDSTORMS NXT Gyro Sensor

---

**Purpose** Measure rate of rotation


**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

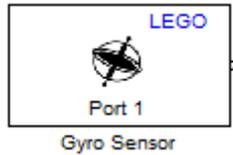

## Description

This block measures rate of rotation (yaw) along the a single axis of the HiTechnic NXT Gyro Sensor (NGY1044). This yaw is indicated by a circle above the vertical axis in the image on the left, and by a double-arrow in the image on the right.

Before using this sensor for precise measurements, use the offset value to remove small positive or negative bias in the output values, as described in the example below.

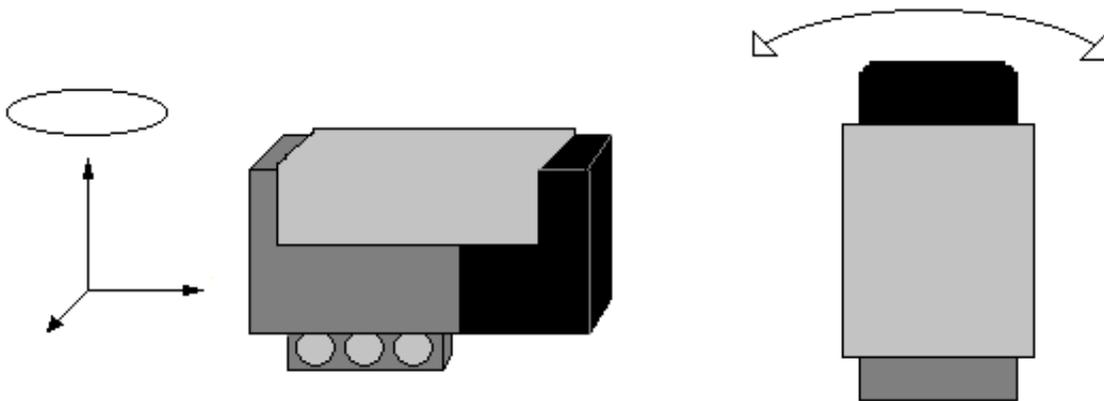

# LEGO MINDSTORMS NXT Gyro Sensor


---

If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

## Calibrate the Gyro Sensor

Use the Gyro Sensor block to perform zero-calibration for the gyro sensor

Open the `legonxtlib` block library and copy the blocks shown to a new model.

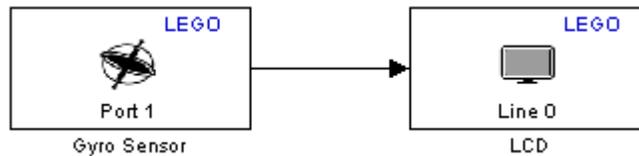

Connect the Gyro Sensor block to the LCD block, as shown.

Connect the NXT Gyro Sensor to the NTX brick.


Prepare and run the model on the NXT brick.

Observe any bias in the measurement values from the Gyro sensor visible on the LCD display of the NXT brick.

Double-click the Gyro Sensor block. In the block mask that opens, increase or decrease the offset value to reduce the bias.

Save the changes to your model and run the model again. Repeat these last two steps until the bias is nearly zero.

# LEGO MINDSTORMS NXT Gyro Sensor

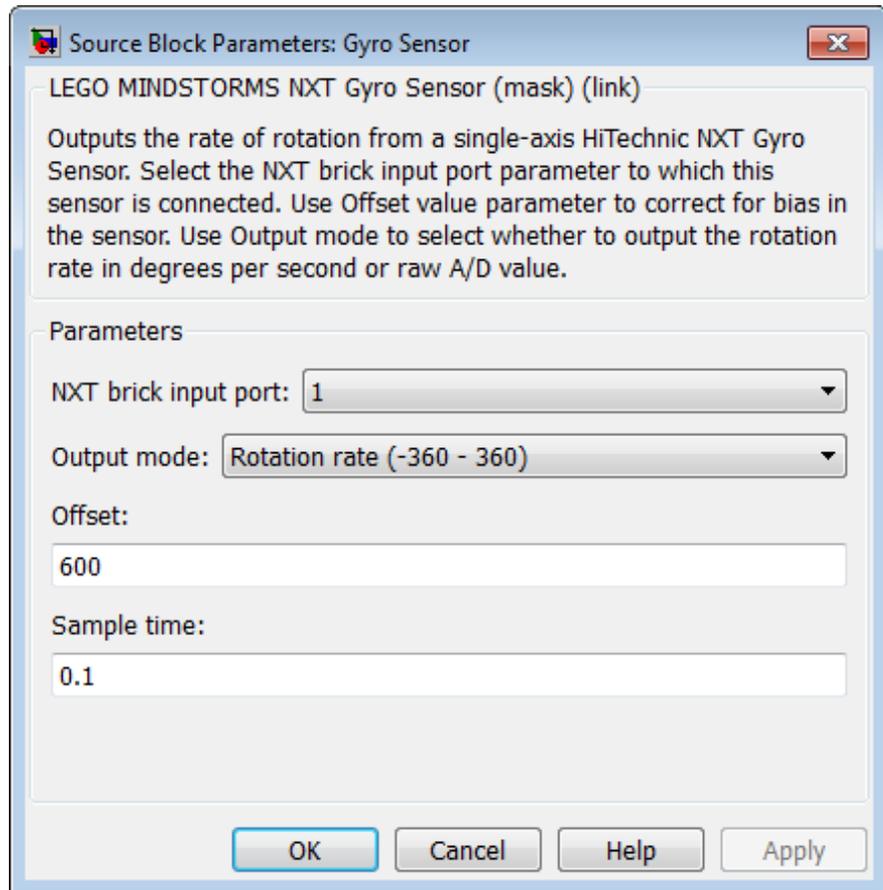

## Dialog Box

### NXT brick input port

Select the NXT sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

### Output mode

Select the type of rotation data to output:

# LEGO MINDSTORMS NXT Gyro Sensor

---

Rotation rate (-360 - 360) outputs the rate of rotation in degrees per second. When this option is selected, the block displays the **Offset** parameter.

Raw A/D (0 - 1023) outputs the rate of rotation in raw analog-to-digital values per second. When this option is selected, the block hides the **Offset** parameter.

## Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

LEGO MINDSTORMS NXT Acceleration Sensor | “Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## External Web Sites

- HiTechnic NXT Gyro Sensor (NGY1044)


# LEGO MINDSTORMS NXT LCD

---

**Purpose** Display number on single line of NXT LCD screen

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

## Description

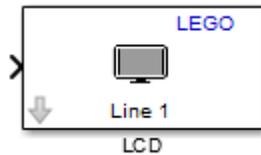

This block displays the value of the block input on the LCD located on the NXT brick. This block lets you enter a label for the value, and select the line of the LCD upon which to display the label/value.

If the value displayed changes faster than the refresh rate of the LCD, the displayed values may be blurry and hard to read.

If the model running on the NXT brick does not use the LCD, the LCD displays a default message that it is running a program.

Avoid configuring other LCD blocks to display information on the same line number.


This block automatically converts the data type of the data it receives. You do not need to perform data-type conversion on the input signals.

If you run a simulation of a model that contains this block without the target hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

### Use the LCD Display

Use the LCD block to display a number on a single line of the LCD display on the NXT brick

Open the `legonxtlib` block library and copy the blocks shown to a new model.

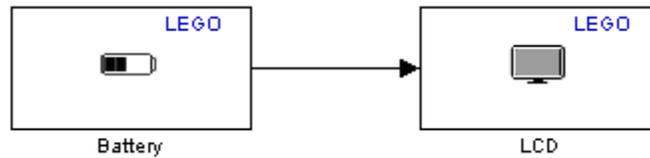

Connect the Battery block to the LCD block, as shown.

Prepare and run the model on the NXT brick.


Observe the battery voltage, shown in millivolts, on line 1 of the LCD display.

Double-click the LCD block in your model.

In the block mask that opens, set the **Display label** parameter to *Mv* and the **Display at line** parameter to 3.

Run the model again. On the NXT brick, observe the new label and position of the battery output on the LCD screen.

# LEGO MINDSTORMS NXT LCD

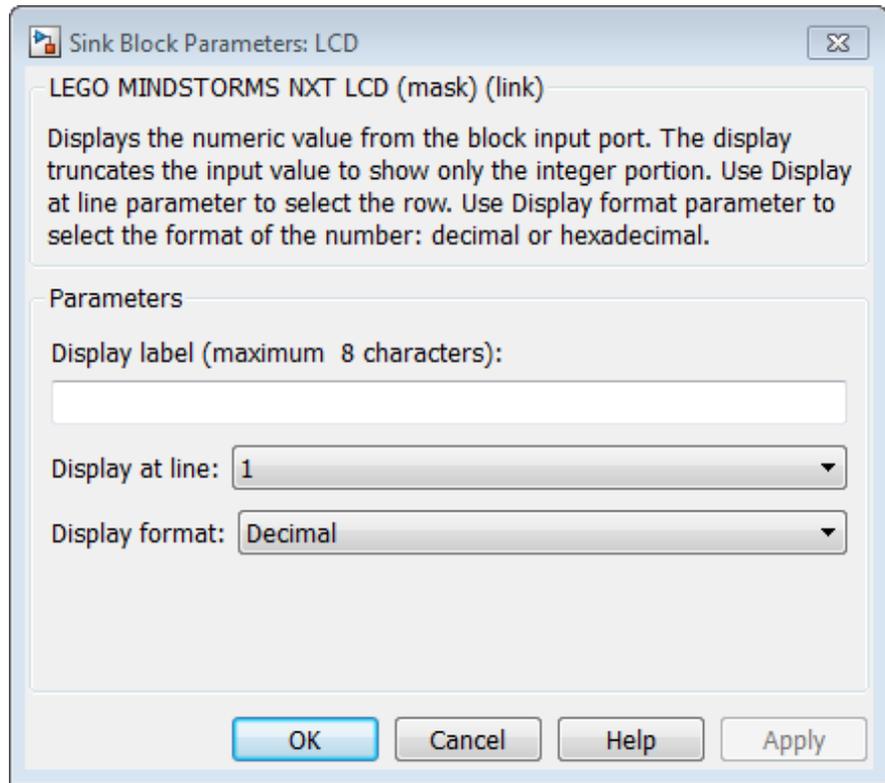

## Dialog Box

### Display label (maximum 8 characters)

Enter a prefix or label for the input to display. the LCD displays the prefix to the left of the input value. The prefix cannot be longer than 8 characters. For example, if you are displaying the state of the Button block, enter Button:.

### Display at line

Select the line upon which to display the number. Line 1 is at the top of the LCD. Line 8 is at the bottom.

## Display format

Select the format of the number. The options are Decimal or Hex (hexadecimal).

## See Also

LEGO MINDSTORMS NXT Battery | LEGO MINDSTORMS NXT Button | LEGO MINDSTORMS NXT LCD | LEGO MINDSTORMS NXT Speaker | LEGO MINDSTORMS NXT Timer | “Install Support for LEGO MINDSTORMS NXT Hardware”

## External Web Sites


- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Light Sensor

---

**Purpose** Measure light intensity

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

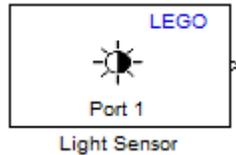


## Description

This block outputs the intensity of light detected by the NXT Light Sensor. The sensor includes an illuminating LED to actively measure the reflectance of nearby surfaces. For example, the light-intensity under a desk measures approximately 20 while a the light-intensity of fluorescent light is approximately 85.

If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

## Use the Light Sensor

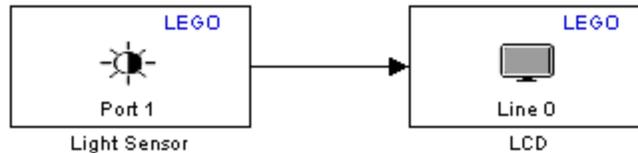

- 1 Open the `legonxtlib` block library and copy the blocks shown to a new model.
- 2 Connect the Light Sensor block to the LCD block, as shown.
- 3 Connect the Light sensor to Port 1 on the NXT brick.
- 4 Prepare and run the model on the NXT brick.

# LEGO MINDSTORMS NXT Light Sensor

---

- 5 Point the Light sensor at a variety of well-lit objects and observe the measurements on the LCD display.

When you point the sensor at a bright light, the measurement value is higher.


When you point the sensor at a dark shadow, the measurement value is lower.

- 6 Hold the Light sensor near a piece of white paper in a dark location, such as under your desk. The red LED in the sensor illuminates the paper. Observe the measurements on the LCD display.

When you hold the sensor nearer to the paper, the measurement value is higher.

When you hold the sensor further away from the paper, the measurement value is lower.

# LEGO MINDSTORMS NXT Light Sensor

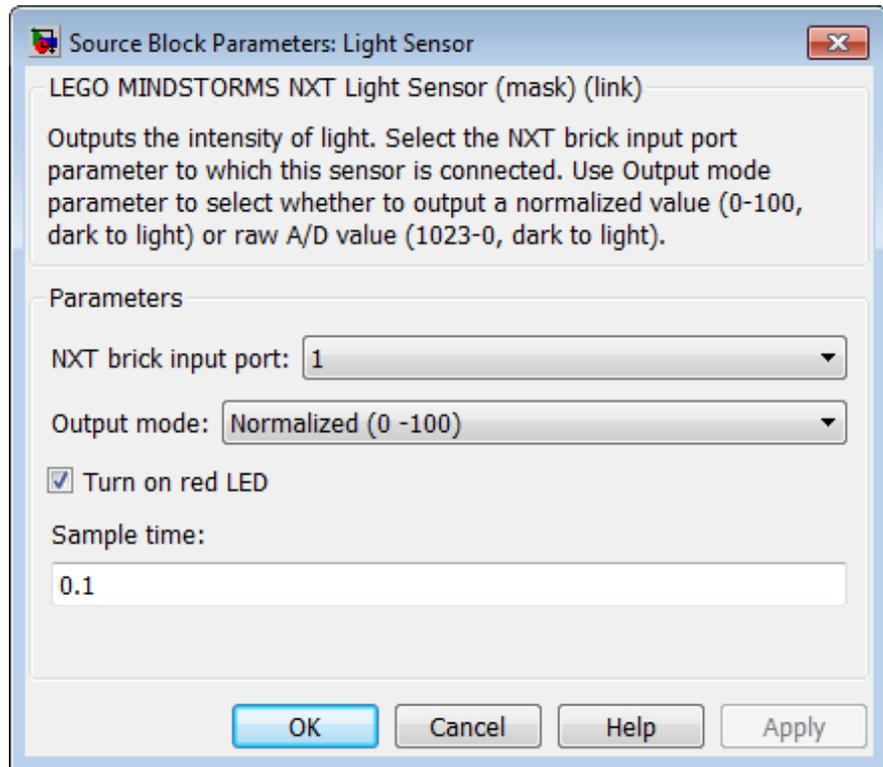

## Dialog Box

### NXT brick input port

Select the NXT sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

### Output mode

Select the type of light intensity data to output:

Normalized (0 - 100) outputs the intensity of the light on a scale from 0 to 100. 0 is the weakest intensity. 100 is the strongest intensity.

# LEGO MINDSTORMS NXT Light Sensor

---

Raw A/D (1023 - 0) outputs the intensity of the light on a scale from 1023 to 0. 1023 is the weakest intensity. 0 is the strongest intensity.

## **Turn on red LED**

Emit red light from the LED located next to the light sensor. Under low light conditions, the sensor can use this capability to measure the amount of red light nearby objects reflect.

## **Sample time**

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## **See Also**

LEGO MINDSTORMS NXT Color Sensor | “Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## **External Web Sites**


- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Motor

---

**Purpose** Set motor speed and stopping action

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

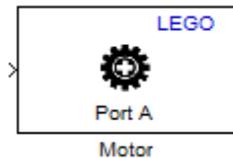

## Description

This block controls the speed, direction, and stopping action of the LEGO 9842 Interactive Servo Motor.


You can use this block with the LEGO MINDSTORMS NXT Encoder block, which outputs the rotation of the servo motor.

The Motor block input value controls the motor speed and direction.

- Forward: 1 to 100 (slowest to fastest)
- Reverse: -1 to -100 (slowest to fastest)
- Stop: 0

Using the **Stop action** parameter in the block, you can configure the motor to coast or brake when it receives an input of 0 (stop). As a side effect, when you change **Stop action** from Brake to Coast, the servo motor requires higher block input values to start moving and to maintain speed. The following graph shows this relationship.

# LEGO MINDSTORMS NXT Motor

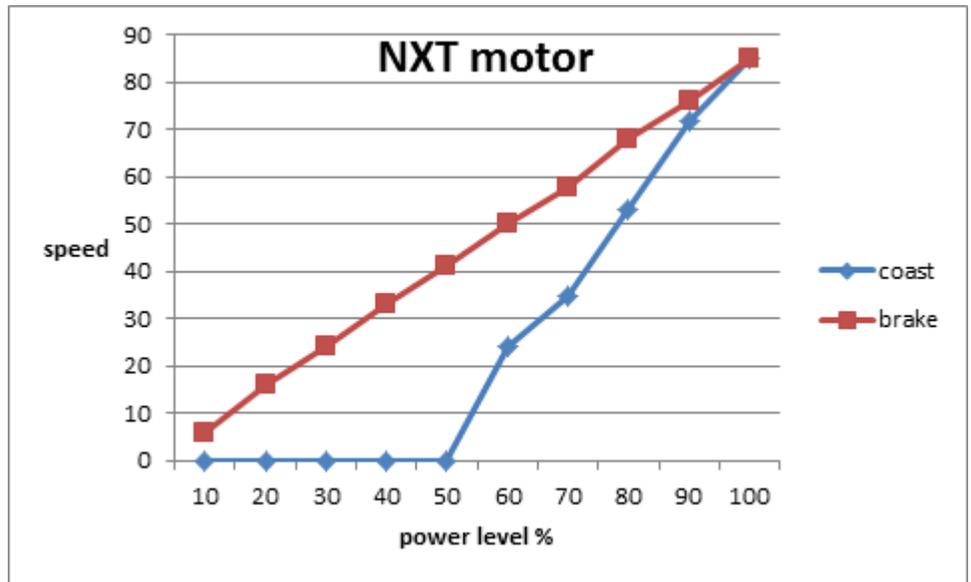


This block automatically converts the data type of the data it receives. You do not need to perform data-type conversion on the input signals.

If you run a simulation of a model that contains this block without the target hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

# LEGO MINDSTORMS NXT Motor

---


## Use the Motor

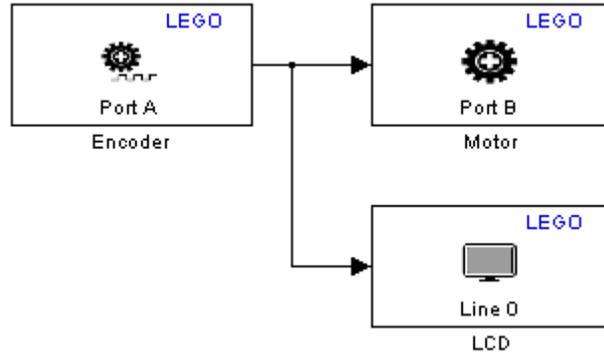

- 1 Open the `legonxtlib` block library and copy the blocks shown to a new model.
- 2 Connect the Encoder block to the Motor block and the LCD block, as shown.
- 3 Double click the Motor block to open the block mask, and change the **NXT brick output port** parameter to B.
- 4 Connect one servo motor to Port A on the NXT brick. Connect another servo motor to Port B on the NXT brick.
- 5 Prepare and run the model on the NXT brick.
- 6 Slowly rotate the wheel of servo motor connected to Port A in each direction. Observe the servo motor connected to Port B drive in one direction and then in the other direction as you input positive or negative values. Using the input value displayed on the LCD, observe that values larger than 100 or -100 do not increase the motor speed.
- 7 In the Motor block, experiment with changing the **Stop action** parameter to **Coast**.

Run the model on the NXT brick again.

Observe that the motor requires higher block input values both to start and to achieve the same speed as when the **Stop action** parameter was set to Brake.

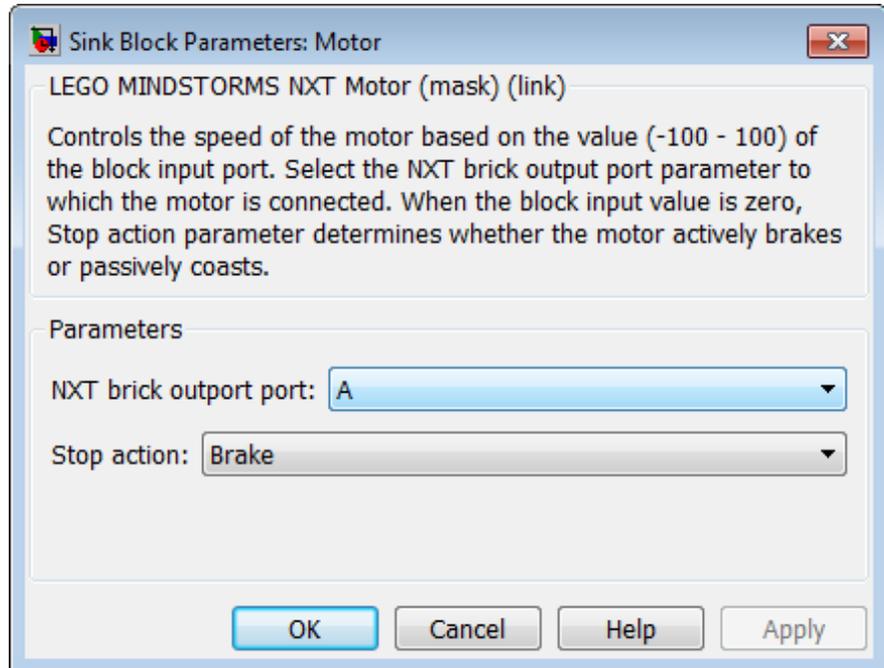

## Dialog Box

### NXT brick output port

Select the NXT brick output port to which the encoder is connected. The options are A, B, or C.

The LEGO 9842 Interactive Servo Motor contains both a motor and an encoder. If your model uses a Motor block and an Encoder block for the same LEGO 9842 Interactive Servo Motor, configure the **NXT brick output port** parameter in both of those blocks to use the same NXT brick output port.

# LEGO MINDSTORMS NXT Motor

---

## Stop action

Select the stopping behavior of the motor:

- Coast stops the motor gradually through loss of momentum. When **Stop action** is set to coast, getting the motor to start and run requires higher values at the block input than when **Stop action** is brake.
- Brake stops the motor immediately.

## See Also

LEGO MINDSTORMS NXT Encoder | “Install Support for LEGO MINDSTORMS NXT Hardware”


## External Web Sites

- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Sound Sensor

**Purpose** Measure sound level

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

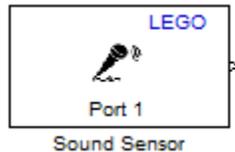


## Description

Measure sound level using the LEGO MINDSTORMS NXT Sound Sensor.


If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

## Use the Sound Sensor

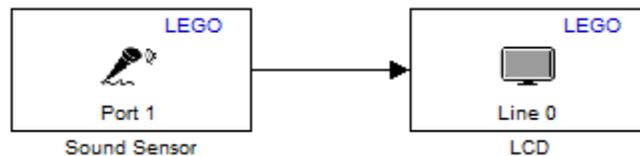

- 1** Open the `legonxtlib` block library and copy the blocks shown to a new model.
- 2** Connect the Sound Sensor block to the LCD block, as shown.
- 3** Connect the Sound sensor to Port 1 on the NXT brick.
- 4** Prepare and run the model on the NXT brick.
- 5** Make sounds close to the sensor and observe the measurements on the LCD display.

# LEGO MINDSTORMS NXT Sound Sensor

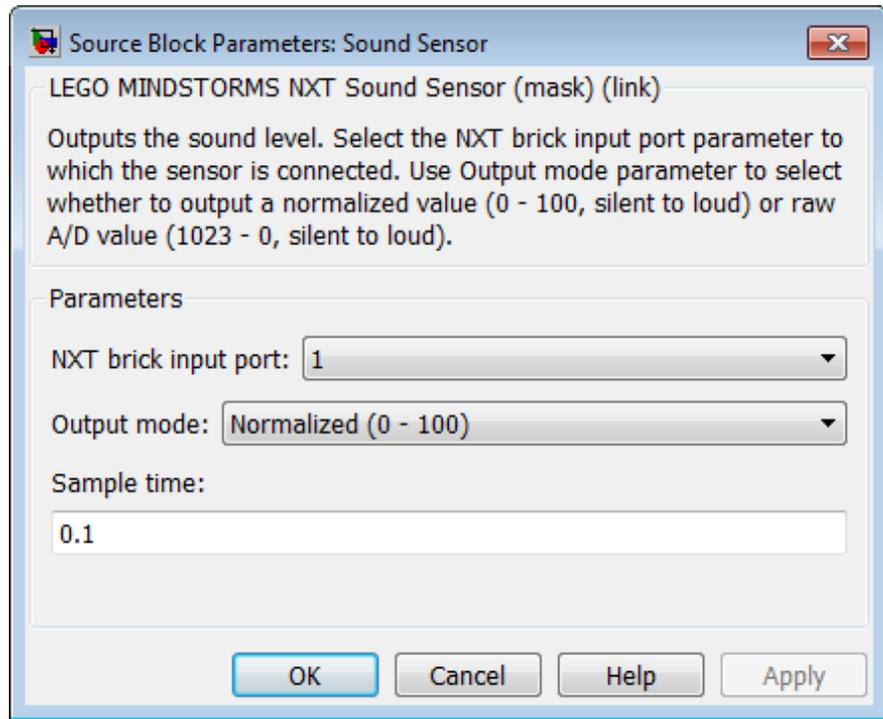

## Dialog Box

### NXT brick input port

Select the NXT sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

### Output mode

Select the type of data to output:

Normalized (0 - 100) outputs the intensity of the sound on a scale from 0 to 100. 0 is the weakest intensity. 100 is the strongest intensity.

# LEGO MINDSTORMS NXT Sound Sensor

---

Raw A/D (1023 - 0) outputs the intensity of the sound on a scale from 1023 to 0. 1023 is the weakest intensity. 0 is the strongest intensity.

## **Sample time**

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## **See Also**

“Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## **External Web Sites**

- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Speaker

**Purpose** Play tones on speaker in NXT brick

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

## Description



Use this block to play tones from the speaker in the NXT brick.


To play a tone, send an audible value to the block input for frequency (**Freq**) and/or volume (**Vol**). To stop playing a tone, send an inaudible value, such as zero, to either block input. The range of audible frequencies that the speaker can produce is approximately 32 to 13000 Hz. The speaker volume ranges from 0 to 100 (softest to loudest).

To set either the frequency or volume to a static value, disable one of the block inputs using the **Input mode** parameter, and then enter the static value for the equivalent parameter on the block mask. For example, if the speaker is only going to play a single frequency, set **Input mode** to **Volume only**, and then set the **Frequency (Hz)** parameter to 440.

This block automatically converts the data type of the data it receives. You do not need to perform data-type conversion on the input signals.

If you run a simulation of a model that contains this block without the target hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

## Use the Speaker

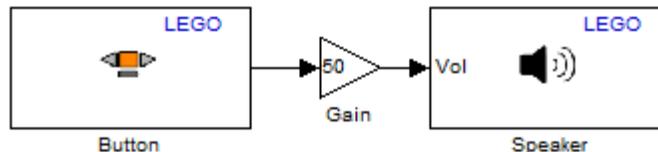

# LEGO MINDSTORMS NXT Speaker


---

- 1** Open the `legonxtlib` block library and copy the blocks shown to a new model.
- 2** Double click the Speaker block. In the block mask that opens, change the **Input mode** parameter to `Volume only`, and enter a value of 440 for the **Frequency (Hz)** parameter. Then click **OK**.
- 3** Connect the Button block to the Gain block, and the Gain block to the Speaker block, as shown.
- 4** Double click the Gain block. In the block mask that opens, set the **Gain** parameter to 50. When you press the orange button on the NXT brick, the Gain block will send a value of 50 to the volume input on the Speaker block.
- 5** Prepare and run the model on the NXT brick.
- 6** When you press the orange button, the speaker emits a 440 Hz tone.


# LEGO MINDSTORMS NXT Speaker

---


## Dialog Box

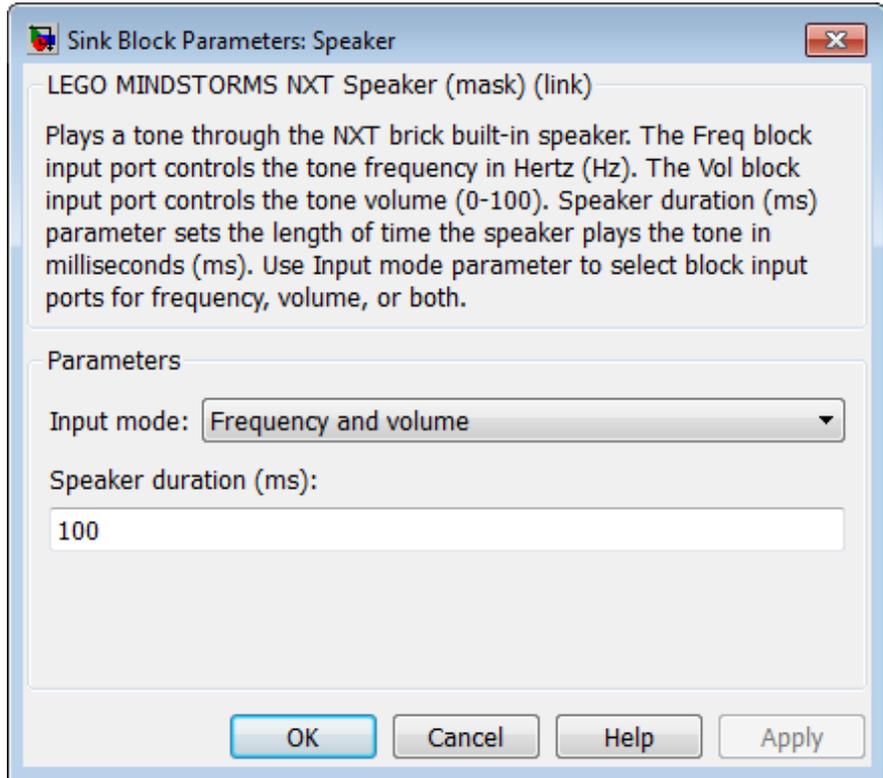

# LEGO MINDSTORMS NXT Speaker

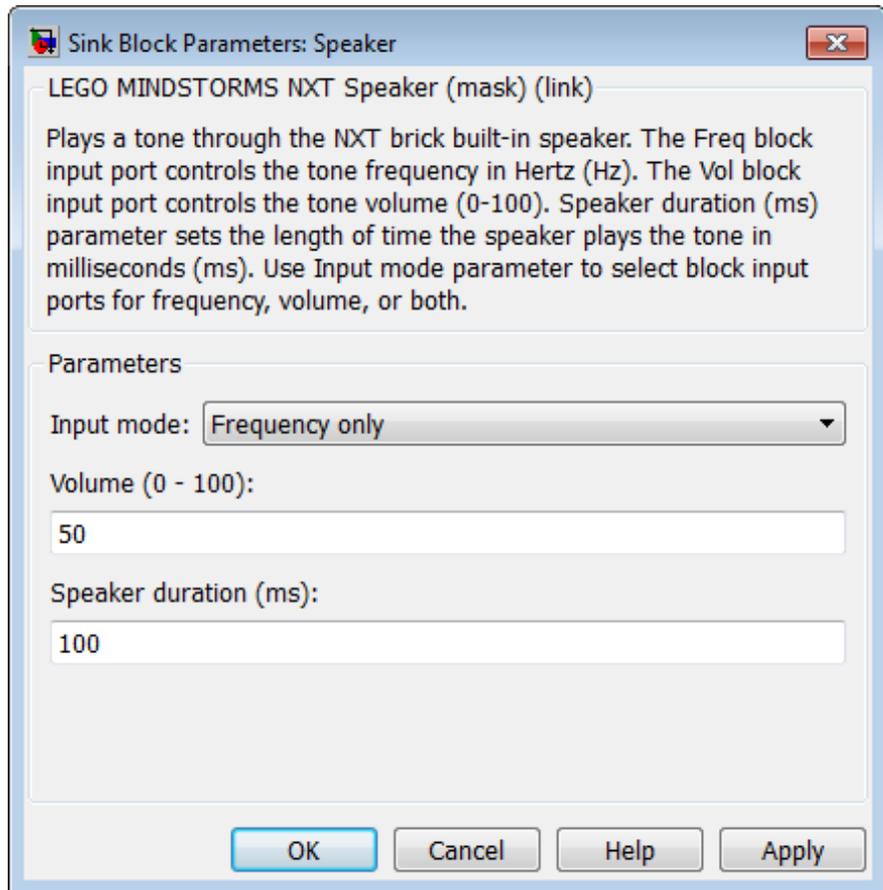

# LEGO MINDSTORMS NXT Speaker

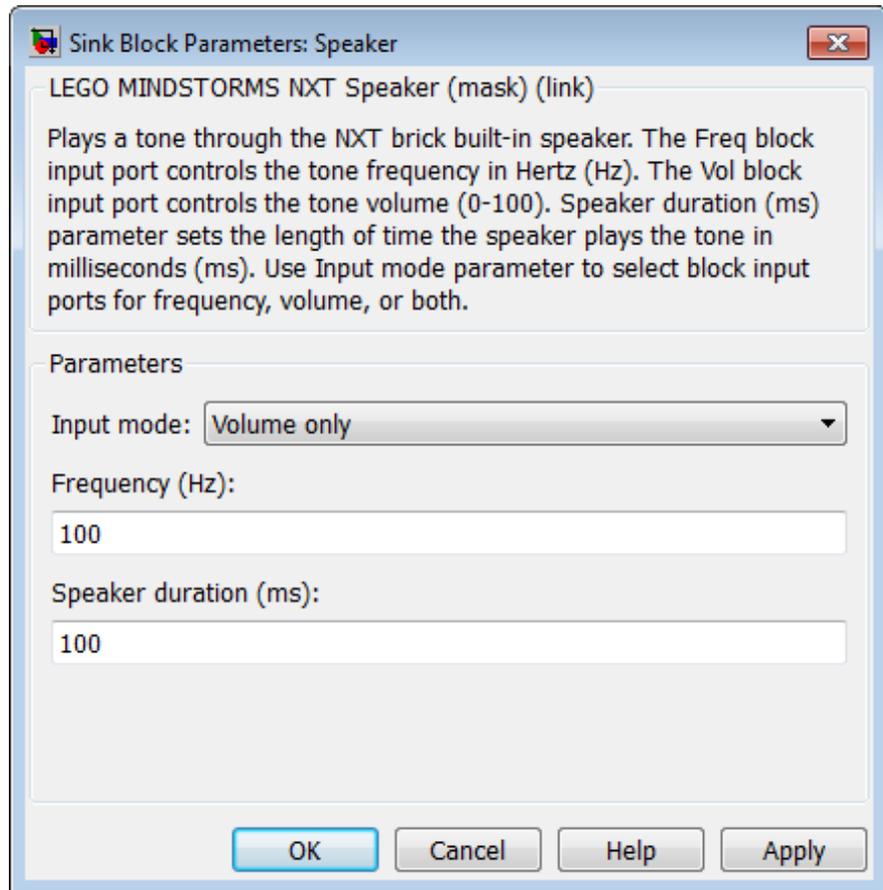

## Input mode

Enable or disable the block inputs:

- Frequency and volume — Enables both **Freq** and **Vol**.
- Volume only — Enables the **Vol** block input, disables the **Freq** block input, and enables the **Frequency (Hz)** parameter on the block mask.

- **Frequency only** — Enables the **Freq** block input, disables the **Vol** block input, and enables the **Volume (0 - 100)** parameter on the block mask.

## **Frequency (Hz)**

Enter the frequency of the tone the speaker emits. When the **Input mode** parameter is configured to enable a **Freq** input, this parameter is not available.

## **Volume (0 - 100)**

Set the volume of the tone the speaker emits. When the **Input mode** parameter is configured to enable a **Vol** input, this parameter is not available.

## **Speaker duration (ms)**

Play a continuous tone or an intermittent tone (beeps). If this value is equal to or greater than the sample time of the source block, the speaker emits a continuous tone. If this value is shorter than the sample time of the source block, the speaker emits an intermittent tone at each sample period. For example, in the preceding `ex_battery_voltage_alarm` model, if the sample time for the battery is 0.1 seconds, and the speaker duration is 100 milliseconds (0.1 seconds), the speaker plays a continuous tone. If you change the speaker duration to 50 milliseconds (half the battery sample time), the speaker emits a beep every 0.1 seconds.

## **See Also**

LEGO MINDSTORMS NXT Battery | LEGO MINDSTORMS NXT Button | LEGO MINDSTORMS NXT LCD | LEGO MINDSTORMS NXT Speaker | LEGO MINDSTORMS NXT Timer | “Install Support for LEGO MINDSTORMS NXT Hardware”

## **External Web Sites**


- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Timer

---

**Purpose** Measure elapsed time from timer in NXT brick

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

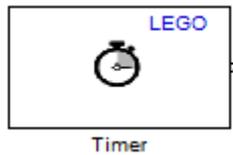

## Description


Measure the elapsed time, in milliseconds, from the time the NXT brick starts running the model.

With External mode disabled, the default setting, the NXT brick starts running the model when you press the right-arrow button on the NXT brick. With External mode enabled, the NXT brick automatically starts running the model when Simulink finishes downloading the model to the NXT brick.


You can see when the NXT brick starts running a model by observing the LCD on the NXT brick. For models that do not use an LCD block, the LCD on the NXT brick displays “I am running ...” followed by the model name. For models that use an LCD block, the model displays whatever output is sent to it.

If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

## Use the Timer

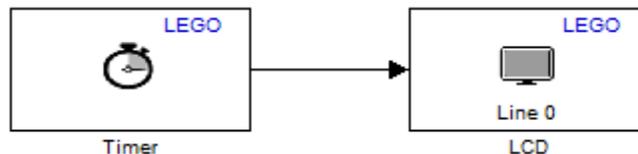

- 1 Open the `legonxtlib` block library and copy the blocks shown to a new model.
- 2 Connect the Timer block to the LCD block, as shown.
- 3 Prepare and run the model on the NXT brick.
- 4 Observe the elapsed time, in milliseconds, on the LCD display.

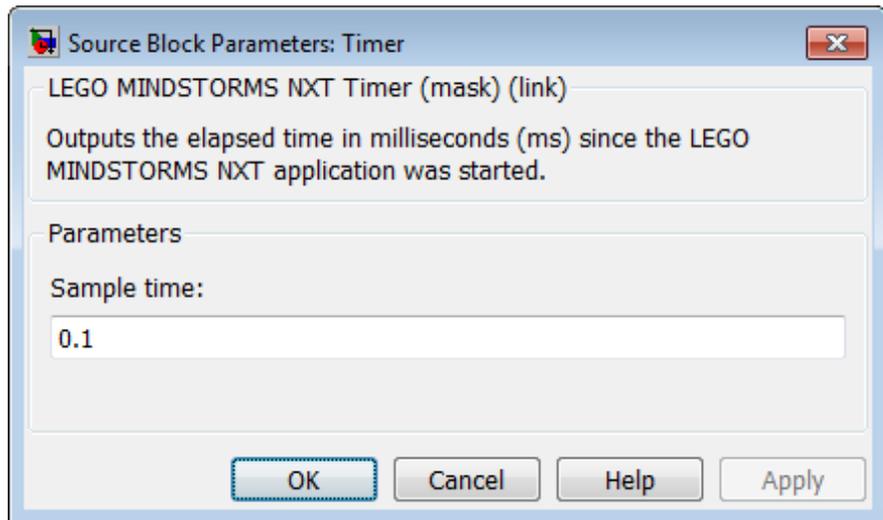

## Dialog Box

### Sample time

Specify how often the block reads timer values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

LEGO MINDSTORMS NXT Battery | LEGO MINDSTORMS NXT Button | LEGO MINDSTORMS NXT LCD | LEGO MINDSTORMS NXT Speaker | LEGO MINDSTORMS NXT Timer | “Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

# LEGO MINDSTORMS NXT Timer

---


## **External Web Sites**

- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Touch Sensor

**Purpose** Output state of touch sensor

**Library** Simulink Support Package for LEGO MINDSTORMS NXT Hardware

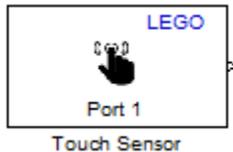


## Description

This block outputs the state of the LEGO MINDSTORMS 9843 Touch Sensor: 1 while pressed, and 0 while released.


If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

## Use the Touch Sensor

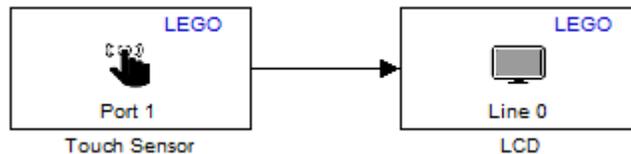

- 1** Open the `legonxtlib` block library and copy the blocks shown to a new model.
- 2** Connect the Touch block to the LCD block, as shown.
- 3** Connect the touch sensor to Port 1 on the NXT brick.
- 4** Prepare and run the model on the NXT brick.
- 5** Observe the state of the touch sensor on the LCD display while you press and release the touch sensor.

# LEGO MINDSTORMS NXT Touch Sensor

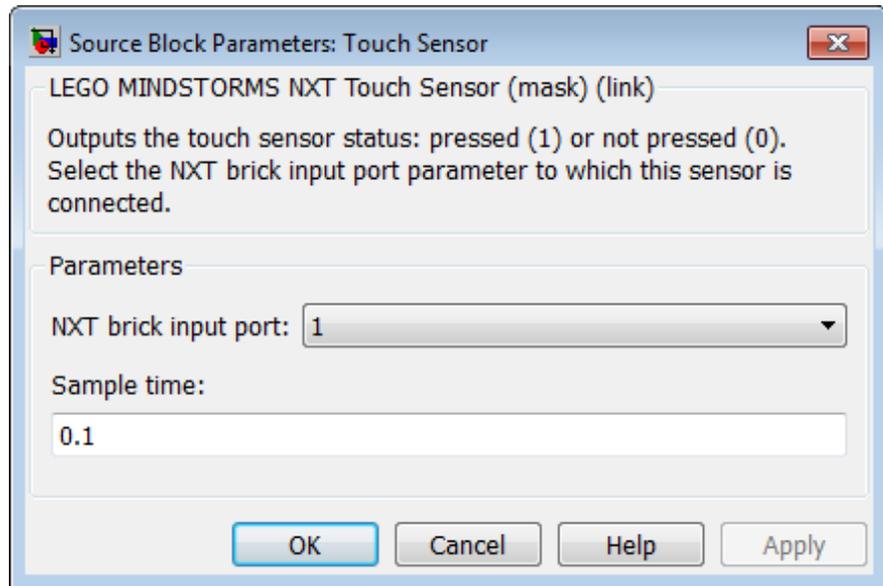

## Dialog Box

### NXT brick input port

Select the NXT sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

### Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

“Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

## External Web Sites

- <http://mindstorms.lego.com>

# LEGO MINDSTORMS NXT Ultrasonic Sensor


---

## Purpose

Measure distance from object in centimeters

## Library

Simulink Support Package for LEGO MINDSTORMS NXT Hardware

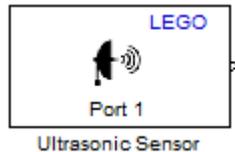

## Description

Measure the distance between the LEGO MINDSTORMS 9846 Ultrasonic Sensor and the nearest object in front of the sensor.

The sensor can detect objects from approximately 5 to 255 centimeters away. When the nearest object is beyond the maximum range of the Ultrasonic Sensor, the sensor outputs the maximum value, 255.

The measured distances are approximate. For greater precision, calibrate the sensor output values against physical measurements.

The distance from which the sensor first detects an approaching object depends on:

- The ultrasonic reflectance of the object, which is a function of the object's size and composition. The sensor detects large hard objects from a greater distance than small soft ones. For example, the sensor might detect a pane of glass at 255 cm and a hand puppet at 150 cm.
- The angle of incidence of the object relative to the sensor. The sensor detects objects directly in front of it at greater distances than objects off to the sides.


If you run a simulation of a model that contains this block without the target hardware, this block outputs zeroes. See “Block Produces Zeros or Does Nothing in Simulation”.

# LEGO MINDSTORMS NXT Ultrasonic Sensor

---


## Use the Ultrasonic Sensor

With the following blocks, the output from ultrasonic sensor drives the motor forward. As the ultrasonic sensor approaches an obstacle, the output values decrease, slowing the motor.

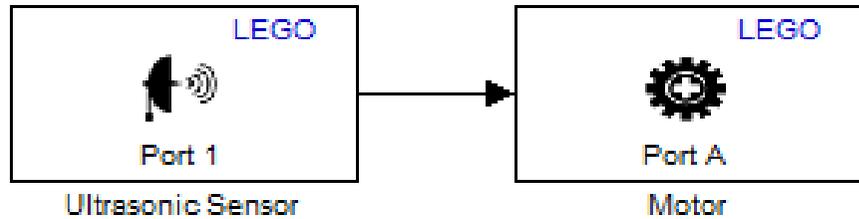

- 1** Open the `legonxt1lib` block library and copy the blocks shown to a new model.
- 2** Connect the Ultrasonic Sensor block to the Motor block, as shown.
- 3** Connect the ultrasonic sensor to Port 1 on the NXT brick, and connect the servo motor to Port A on the NXT brick.
- 4** Prepare and run the model on the NXT brick.
- 5** Observe the speed of the motor decrease as you hold the ultrasonic sensor closer to an object.

# LEGO MINDSTORMS NXT Ultrasonic Sensor

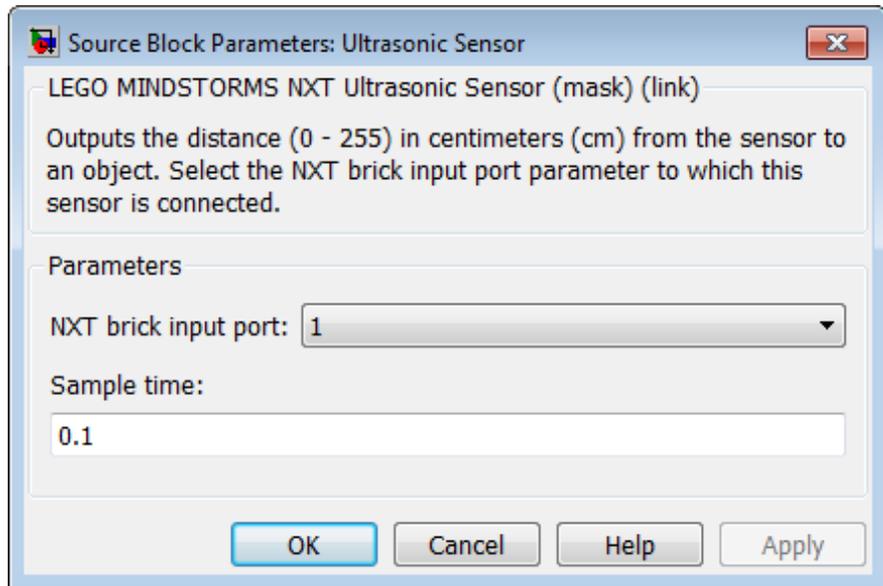

## Dialog Box

### NXT brick input port

Select the NXT sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

### Sample time

Specify how often the block reads sensor values. This value defaults to 0.1. Shorter sample times, such as 0.01, may produce unreliable measurements.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

“Install Support for LEGO MINDSTORMS NXT Hardware” | “Detect and Fix Task Overruns on NXT Brick”

# LEGO MINDSTORMS NXT Ultrasonic Sensor

---

## **External Web Sites**

- <http://mindstorms.lego.com>

# BeagleBoard ALSA Audio Capture

---

## Purpose

Capture audio from sound card using ALSA

## Library

Simulink Support Package for BeagleBoard Hardware

Simulink Support Package for Gumstix Overo Hardware

Simulink Support Package for PandaBoard Hardware

Simulink Support Package for Raspberry Pi Hardware




ALSA Audio Capture


## Description

Capture the left and right audio channels from the AUDIO IN connector or a stereo sound device using the Advanced Linux Sound Architecture (ALSA) driver framework. The block output, **Out**, emits an N-by-2 frame of int16 values. The width of the frame, 2, corresponds to the left and right audio channels. To determine the sample rate of the block output, divide the **Frame size (N)** by the **Audio sampling frequency (Hz)**. For example, if **Frame size (N)** is 4410 and **Audio sampling frequency (Hz)** is 44100, then the sample rate is 0.1 seconds.

# Raspberry Pi ALSA Audio Capture

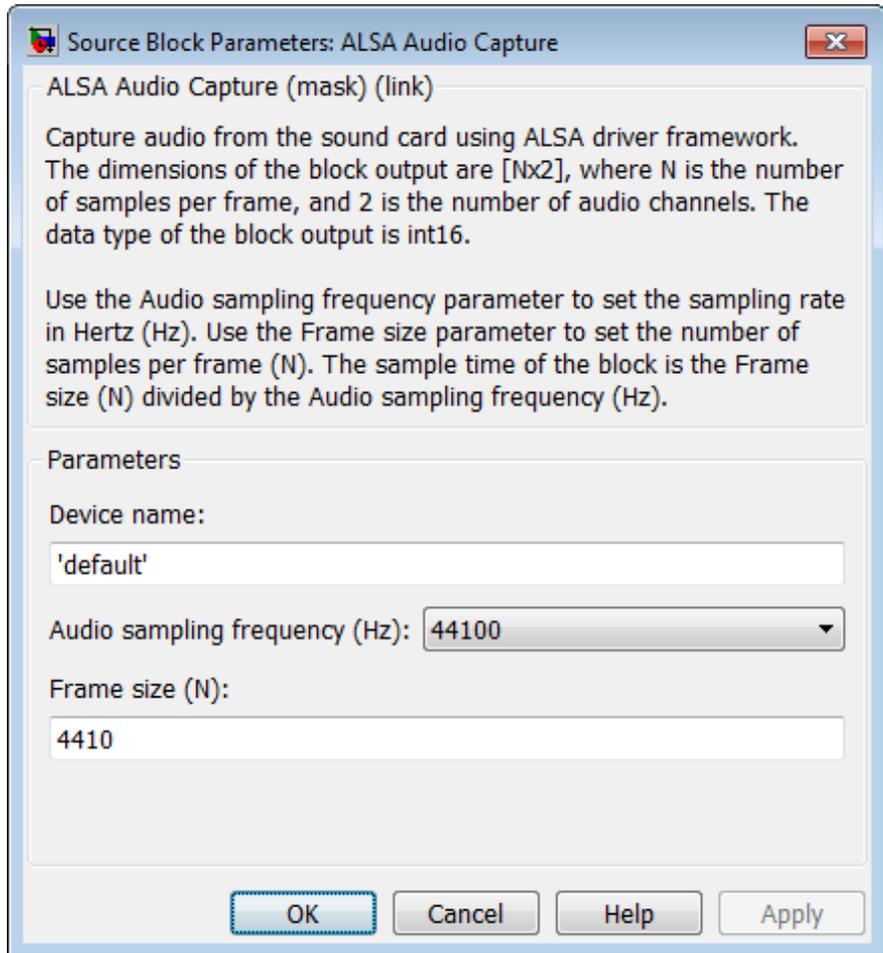

## Dialog

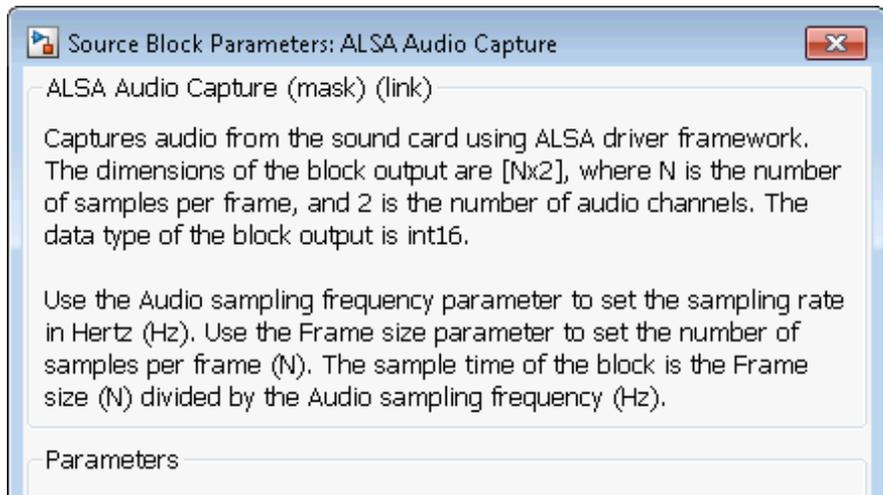

# Raspberry Pi ALSA Audio Capture

---

## Device name

For Raspberry Pi™ hardware, leave this value set to 'hw:1,0'.

For other types of hardware, use the default ALSA device, or specify an audio input device by name.

To use the default sound device specified by the ALSA configuration file, leave this parameter set to 'default'.

To find out which sound device the ALSA configuration file specifies, connect to the board and open the /usr/share/alsa/alsa.conf file. In the following example, the alsa.conf file specifies device 2 on card 0 as the default device:

```
pcm.!default {
    type hw
    card 0
    device 2
}
```

---

**Note** The contents of the alsa.conf file varies by type of target hardware and Linux® distribution.

---

To specify an audio input device by name, connect to the board and open the /proc/asound/cards file. In the following example, the cards file names two devices, VirMIDI and AudioPCI:

```
$ cat /proc/asound/cards 0 [Dummy ]: Dummy - Dummy
    Dummy 1

1 [VirMIDI ]: VirMIDI - VirMIDI
    Virtual MIDI Card 1

2 [AudioPCI ]: ENS1371 - Ensoniq AudioPCI
    Ensoniq AudioPCI ENS1371 at 0xe400, irq 11
```

# Raspberry Pi ALSA Audio Capture

---

This parameter value defaults to 'default'.

## **Audio sampling frequency (Hz)**

Enter the sampling frequency of the ALSA Audio Capture (input) device.

By default, the sampling frequency of ALSA Audio Capture is the same as the sampling frequency of ALSA Audio Playback.

This parameter value defaults to 44100 Hz (44.1 kHz). The maximum rate equals the sampling rate of the audio capture device.

## **Frame size (N)**

Enter the number of samples this block will output to your model. This parameter value defaults to 4410.

## **See Also**

Raspberry Pi ALSA Audio Playback | “Connect to Serial Port on BeagleBoard Hardware” | “Install Support for BeagleBoard Hardware”

## **External Web Sites**

- <http://www.alsa-project.org>
- [http://en.wikipedia.org/wiki/Advanced\\_Linux\\_Sound\\_Architecture](http://en.wikipedia.org/wiki/Advanced_Linux_Sound_Architecture)
- <http://beagleboard.org/>

# BeagleBoard ALSA Audio Playback

---

## Purpose

Send audio to sound card for playback using ALSA

## Library

Simulink Support Package for BeagleBoard Hardware  
Simulink Support Package for Gumstix Overo Hardware  
Simulink Support Package for PandaBoard Hardware  
Simulink Support Package for Raspberry Pi Hardware



ALSA Audio Playback

## Description

Send audio to the sound card for playback using the Advanced Linux Sound Architecture (ALSA) driver framework. The dimensions of the block input, **In**, are N-by-2, where N is the number of samples per frame, and 2 is the number of audio channels. The data type of the block input must be int16. Use the Audio sampling frequency parameter to set the sampling rate in Hertz (Hz).



---

**Note** When you use the software volume controls to lower the volume of one channel, crosstalk from the other channel may be audible.

---

# Raspberry Pi ALSA Audio Playback

## Dialog

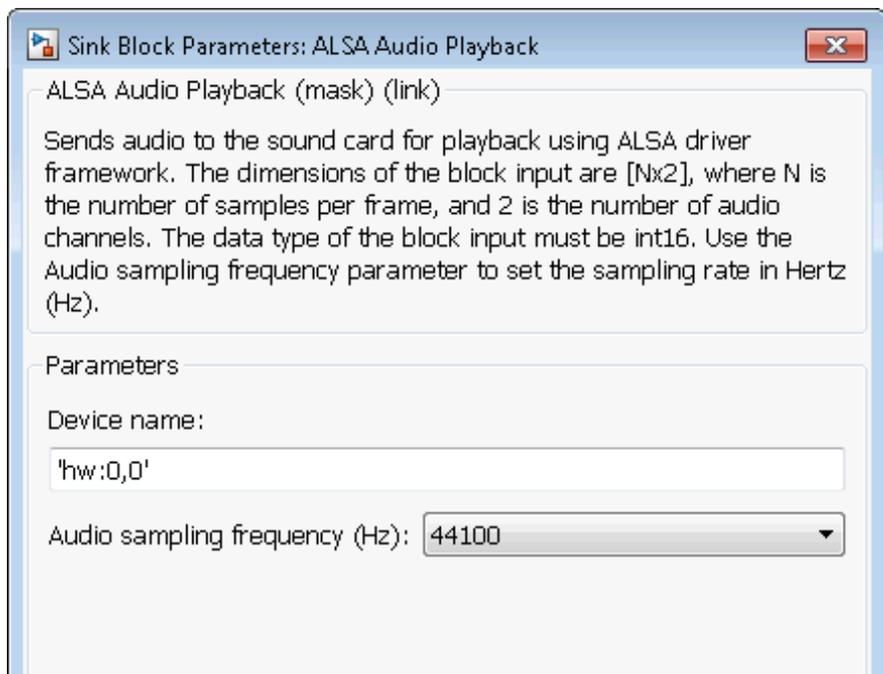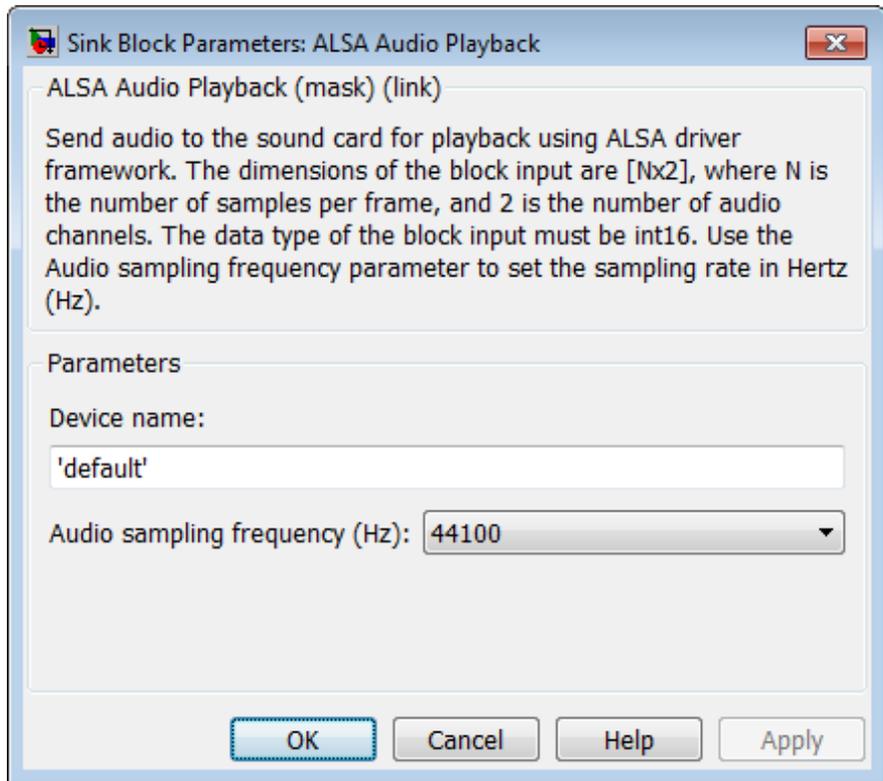

# Raspberry Pi ALSA Audio Playback

---

## Device name

For Raspberry Pi hardware, leave this value set to 'hw:0,0'.

For other types of hardware, use the default ALSA device, or specify an audio input device by name.

To use the default sound device specified by the ALSA configuration file, leave this parameter set to 'default'.

To find out which sound device the ALSA configuration file specifies, connect to the board and open the `/usr/share/alsa/alsa.conf` file. In the following example, the `alsa.conf` file specifies device 2 on card 0 as the default device:

```
pcm.!default {
    type hw
    card 0
    device 2
}
```

---

**Note** The contents of the `alsa.conf` file varies by type of target hardware and Linux distribution.

---

To specify an audio input device by name, connect to the board and open the `/proc/asound/cards` file. In the following example, the `cards` file names two devices, `VirMIDI` and `AudioPCI`:

```
$ cat /proc/asound/cards 0 [Dummy ]: Dummy - Dummy
    Dummy 1

1 [VirMIDI ]: VirMIDI - VirMIDI
    Virtual MIDI Card 1

2 [AudioPCI ]: ENS1371 - Ensoniq AudioPCI
    Ensoniq AudioPCI ENS1371 at 0xe400, irq 11
```

# Raspberry Pi ALSA Audio Playback

---

This parameter value defaults to 'default'.

## **Audio sampling frequency (Hz)**

Enter the sample frequency of the ALSA Audio Playback (output) device.

By default, the sample frequency of ALSA Audio Playback is the same as the sample frequency of ALSA Audio Capture.

This parameter value defaults to 44100 Hz (44.1 kHz). The maximum rate equals the sampling rate of the audio capture device.

## **See Also**

Raspberry Pi ALSA Audio Capture | “Connect to Serial Port on BeagleBoard Hardware” | “Install Support for BeagleBoard Hardware”

## **External Web Sites**

- <http://www.alsa-project.org>
- [http://en.wikipedia.org/wiki/Advanced\\_Linux\\_Sound\\_Architecture](http://en.wikipedia.org/wiki/Advanced_Linux_Sound_Architecture)
- <http://beagleboard.org/>
- <http://pandaboard.org/>

**Purpose**

Convert text to speech for output on default audio device

**Library**

Simulink Support Package for BeagleBoard Hardware  
Simulink Support Package for Gumstix Overo Hardware  
Simulink Support Package for PandaBoard Hardware  
Simulink Support Package for Raspberry Pi Hardware

**Description**

Convert text to speech using the eSpeak speech synthesizer. The synthesized speech is output by the default audio device.


The input port accepts a uint8 array containing the ASCII text to be converted: `uint8('string')`.

For example, you can send `uint8('Hello world')` or `uint8('1 2 3')` to the input. Sending `[1 2 3]` to the input does not work.

If you run a simulation of a model that contains this block without the target hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

# Raspberry Pi eSpeak Text to Speech

---

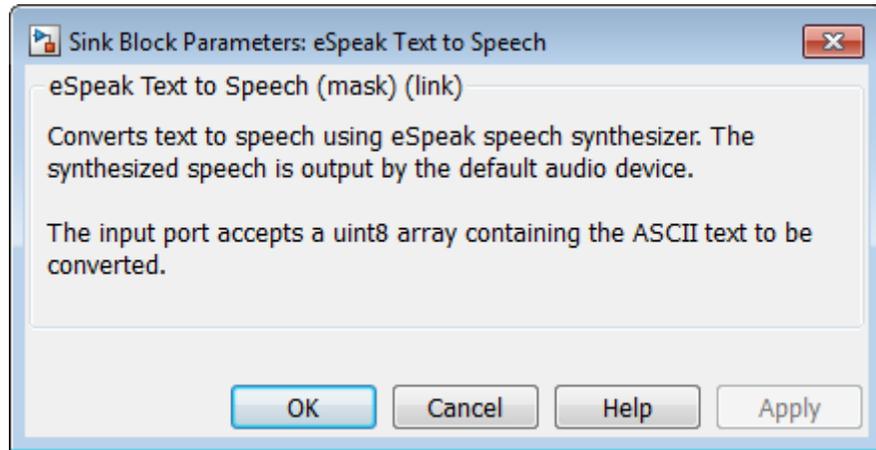

## Dialog

The dialog does not contain any parameters.

**See Also** “Install Support for BeagleBoard Hardware”

## External Web Sites

- <http://beagleboard.org/>
- <http://pandaboard.org/>
- [http://en.wikipedia.org/wiki/Pull-up\\_resistor](http://en.wikipedia.org/wiki/Pull-up_resistor)

## Purpose

Read logical value of GPIO pin configured as input

## Library

Simulink Support Package for BeagleBoard Hardware  
Simulink Support Package for Gumstix Overo Hardware  
Simulink Support Package for PandaBoard Hardware  
Simulink Support Package for Raspberry Pi Hardware

## Description



Use this block to:

- Create a physical input from a GPIO pin.
- Read the logical value of the GPIO pin at intervals that are determined by **Sample time**.
- Send the logical value to other blocks in the model as a stream of boolean values.
- The maximum input voltage of the GPIO pin is 1.8 V.

## Warning

**You can damage your target hardware by:**

- Shorting a GPIO pin to ground.
- Shorting a GPIO pin with high voltage to another GPIO pin with low voltage.
- Connecting a GPIO pin to a voltage source greater than the maximum voltage.
- Exceeding the maximum current by driving multiple GPIO pins high simultaneously.

# Raspberry Pi GPIO Read

## Dialog

**Source Block Parameters: GPIO Read**

**GPIO Read**

Read the logical value of a GPIO pin configured as input.

Select the GPIO number. Choose desired internal resistor configuration. Do not assign the same GPIO number to multiple blocks within a model.


**Parameters**

Board:

GPIO number:

Internal resistor:

Sample Time:

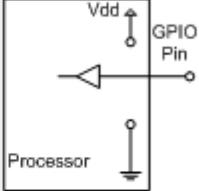

**Source Block Parameters: GPIO Read**

**GPIO Read (mask)**

Reads the logical value of a GPIO pin configured as input.

Select the GPIO number. Choose desired internal resistor configuration. Do not assign the same GPIO number to multiple blocks within a model.


**Parameters**

Board:


GPIO number:

Internal resistor:

Sample Time:

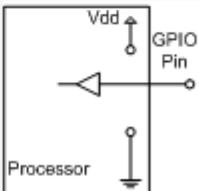


# Raspberry Pi GPIO Read

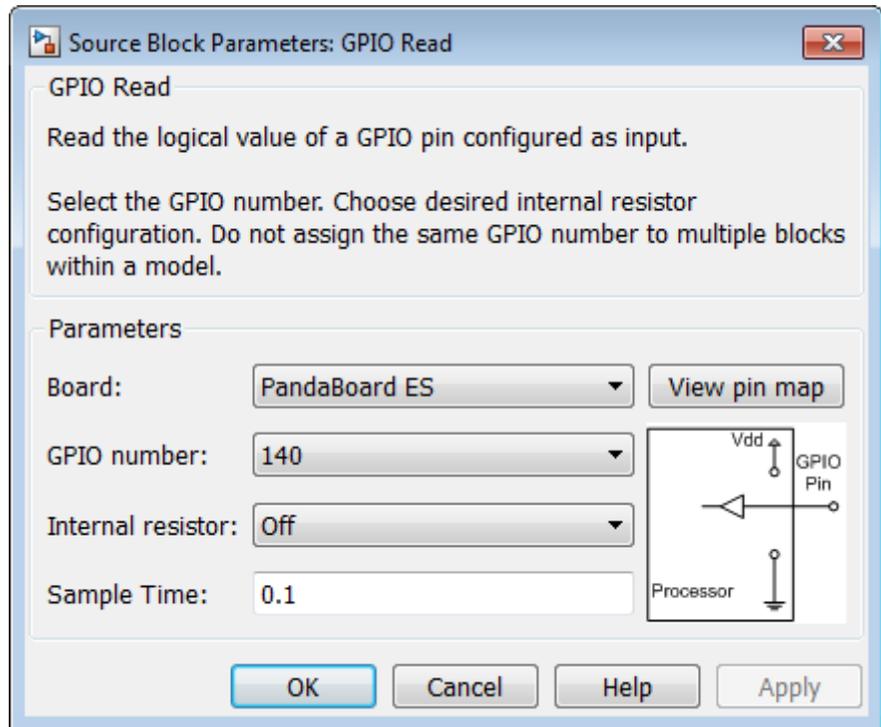

# Raspberry Pi GPIO Read

---

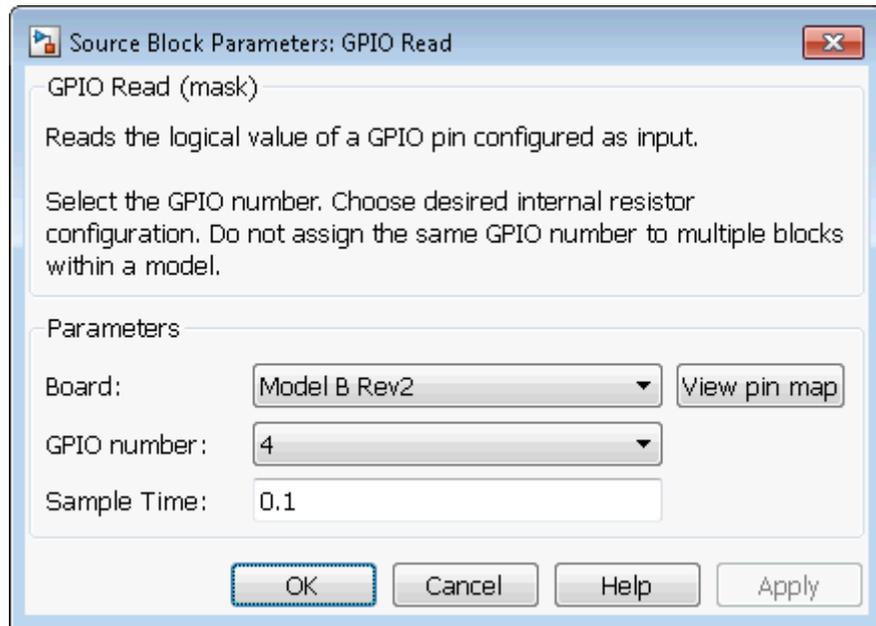

## Board

Select the specific board you are using. You can find this information on the target hardware, product packaging, or product documentation.

Changing **Board** updates the **GPIO number** choices and the **View pin map** diagram.

You can print the pin map to refer to it later.

## GPIO number

After selecting the **Board**, select the number of the GPIO pin. Do not use the same GPIO number in multiple blocks within a model.

To see the locations of the GPIO pins on the target hardware, click the **View pin map** button.

## Internal resistor

This parameter is not available for Raspberry Pi hardware.

Set the GPIO internal resistor to:

- **Off** — Do not use a pull-up or pull-down resistor.
- **Pull-up** — Use the internal pull-up resistor. When the physical input is inactive, disconnected, or has high impedance, the voltage of the GPIO pin goes high, settling at the voltage of *Vdd* on the processor.
- **Pull-down** — Use the internal pull-up resistor. When the physical input is inactive, disconnected, or has high impedance, the voltage of the GPIO pin goes low, settling at the voltage of *ground* on the processor.

Changing this parameter updates the diagram to the right of the parameter.

## Sample time

Select the sample time for reading the state of the GPIO pin. This parameter value defaults to 1/10 second.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

“Install Support for BeagleBoard Hardware” | “Tune and Monitor Model Running on BeagleBoard Hardware” | “Install Support for Gumstix® Overo® Hardware” | “Tune and Monitor Model Running on Gumstix Overo Hardware” | “Install Support for PandaBoard Hardware” | “Tune and Monitor Model Running on PandaBoard Hardware”

## External Web Sites

- <http://beagleboard.org/>
- <http://pandaboard.org/>
- [http://en.wikipedia.org/wiki/Pull-up\\_resistor](http://en.wikipedia.org/wiki/Pull-up_resistor)

# BeagleBoard GPIO Write

---

**Purpose** Write logical value of GPIO pin configured as output

**Library** Simulink Support Package for BeagleBoard Hardware  
Simulink Support Package for Gumstix Overo Hardware  
Simulink Support Package for PandaBoard Hardware  
Simulink Support Package for Raspberry Pi Hardware

## Description



Configure a GPIO pin on the target hardware to function as a physical output.

Send a logical value from your model to the GPIO pin. The sample time is determined by an upstream block.

The block input accepts boolean inputs.



Do not exceed the maximum voltage of the GPIO pin.

## Warning



**You can damage your target hardware by:**

- Shorting a GPIO pin to ground.
- Shorting a GPIO pin with high voltage to another GPIO pin with low voltage.
- Connecting a GPIO pin to a voltage source greater than the maximum voltage.
- Exceeding the maximum current by driving multiple GPIO pins high simultaneously.

## Dialog

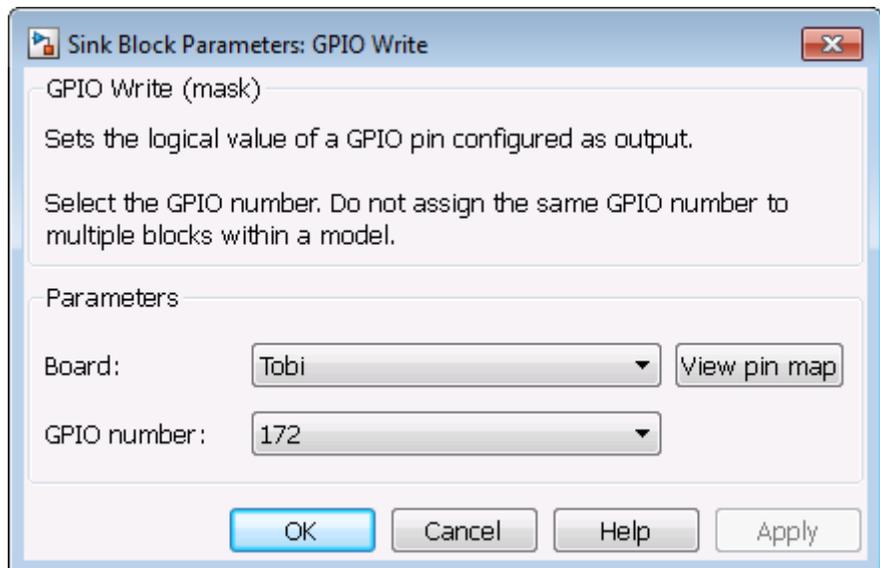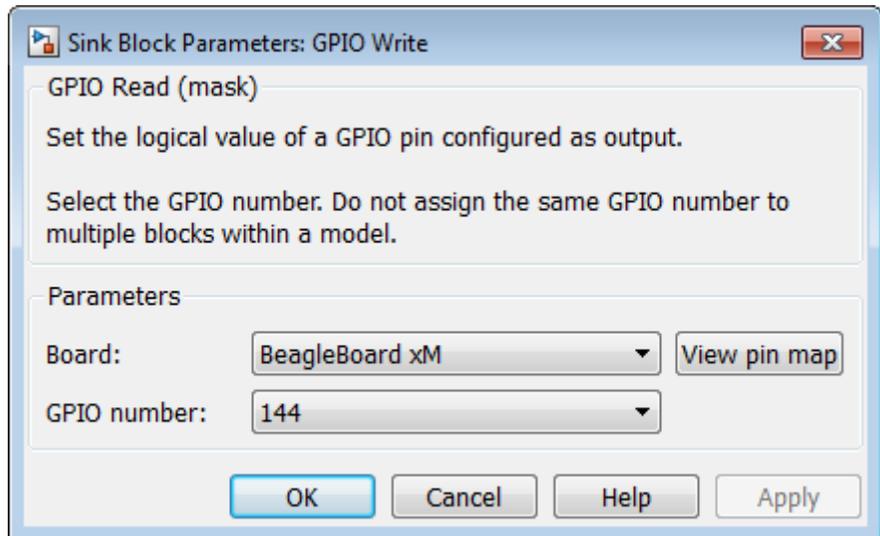

# Raspberry Pi GPIO Write

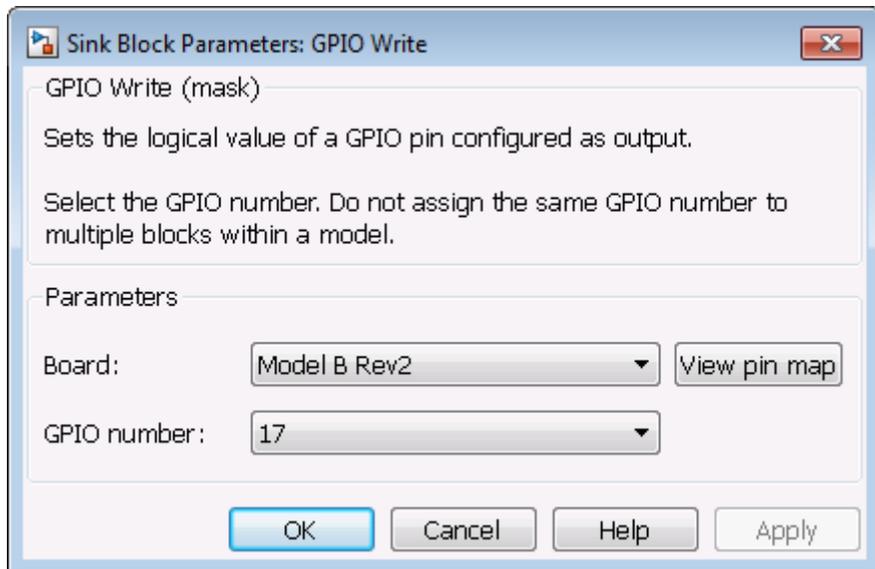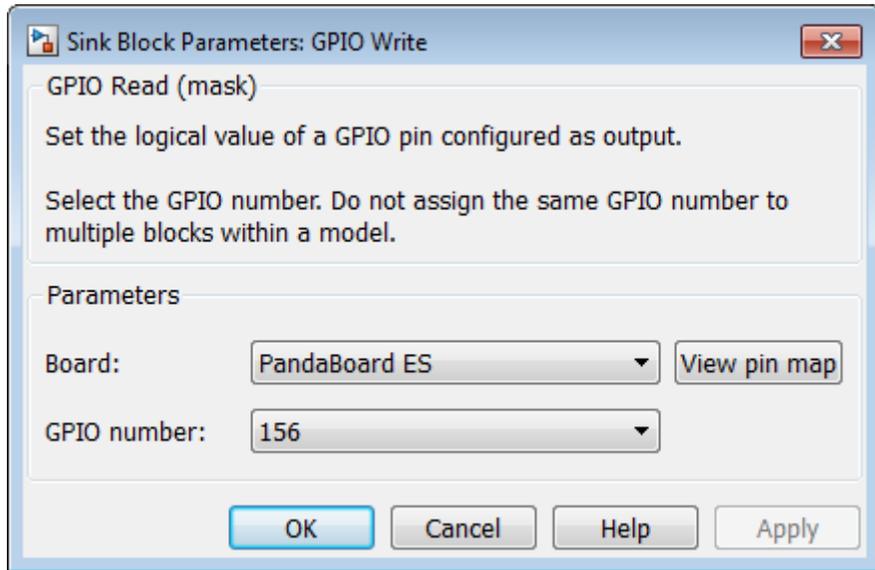

## **Board**

Select the specific board you are using.

You can find this information on the target hardware, product packaging, or product documentation.

Changing **Board** updates the **GPIO number** choices and the **View pin map** diagram.

You can print the pin map to refer to it later.

## **GPIO number**

After selecting the **Board**, select the number of the GPIO pin. Do not use the same GPIO number in multiple blocks within a model.

To see the locations of the GPIO pins on the target hardware, click the **View pin map** button.

**See Also** “Install Support for BeagleBoard Hardware”

## **External Web Sites**


- <http://beagleboard.org/>
- <http://pandaboard.org/>

# BeagleBoard LED

---

**Purpose** Illuminate built-in LED

**Library** Simulink Support Package for BeagleBoard Hardware  
Simulink Support Package for Gumstix Overo Hardware  
Simulink Support Package for PandaBoard Hardware  
Simulink Support Package for Raspberry Pi Hardware

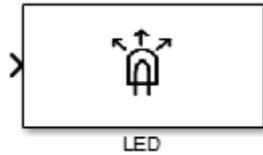



## Description

Use this block to illuminate one of the user-controllable LEDs on the target hardware. The block input takes a boolean value:



- 0 turns the LED off.
- 1 turns the LED on.

To configure this block, use the **Block** parameter to identify your target hardware. Then, click **View LED location** to see a diagram of the user-controllable LEDs on your target hardware. Then, use the **LED** parameter to select a specific LED.

## Dialog

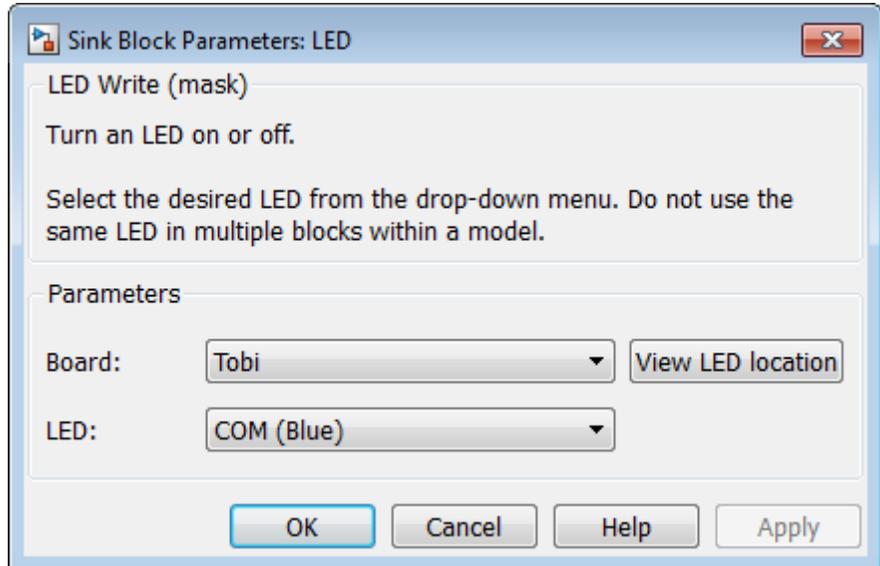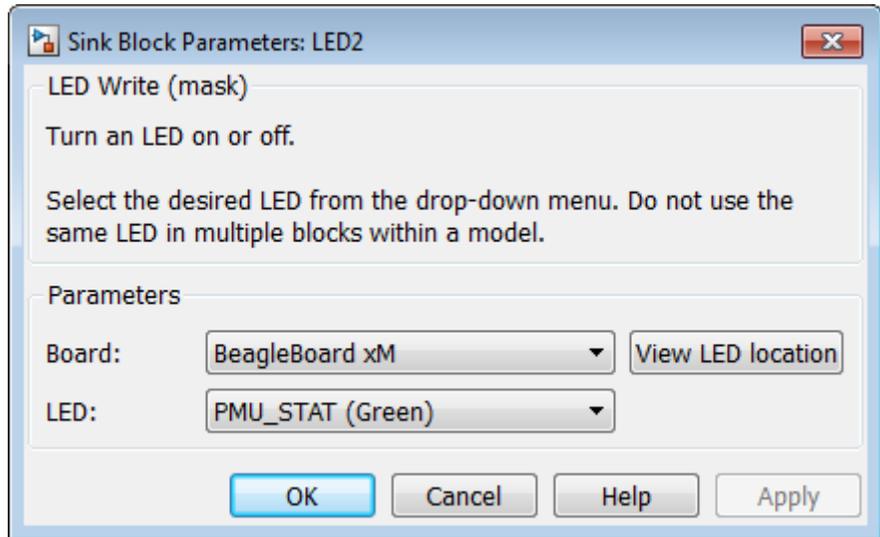

# Raspberry Pi LED

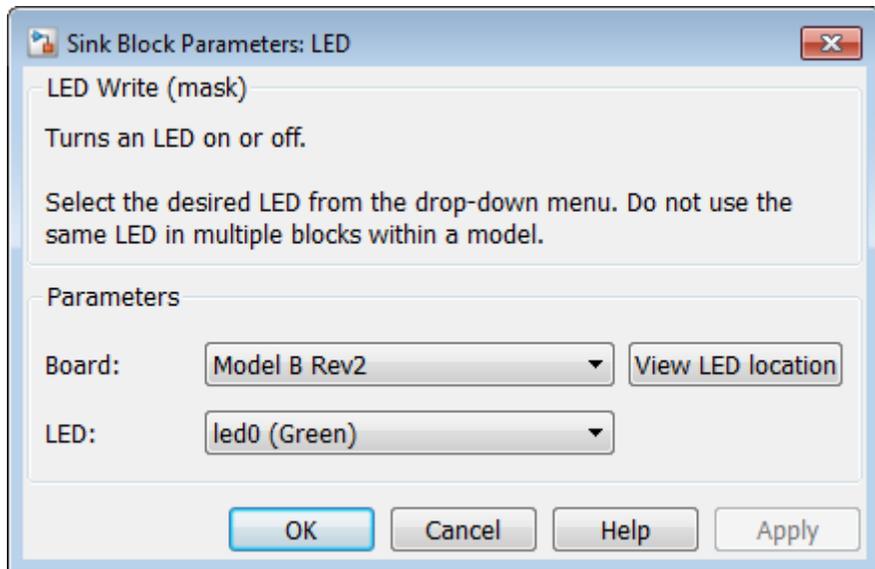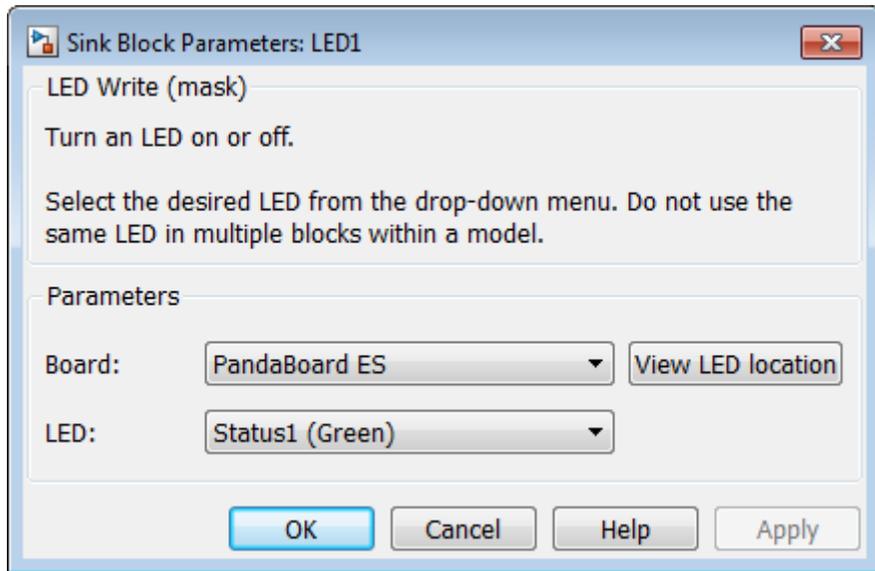

## **Board**

Select the specific board you are using. You can find this information on the target hardware, product packaging, or product documentation.

Changing **Board** updates the **LED** choices.

## **LED**

After selecting the **Board**, select the LED. Do not use the same LED in multiple blocks within a model.

To see the locations of the LED on the target hardware, click the **View LED location** button. You can print the LED Locations diagram for reference.

**See Also** “Install Support for BeagleBoard Hardware”

## **External Web Sites**


- <http://beagleboard.org/>
- <http://pandaboard.org/>

# BeagleBoard SDL Video Display

---

**Purpose** Display video using SDL


**Library** Simulink Support Package for BeagleBoard Hardware  
Simulink Support Package for Gumstix Overo Hardware  
Simulink Support Package for PandaBoard Hardware  
Simulink Support Package for Raspberry Pi Hardware

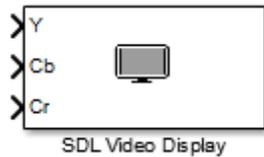

## Description

Display video data using the Simple Directmedia Layer (SDL) multimedia library. A Simulink model can contain only one SDL Video Display block.

This block takes planar video data in YCbCr 4:2:2 or RGB formats.

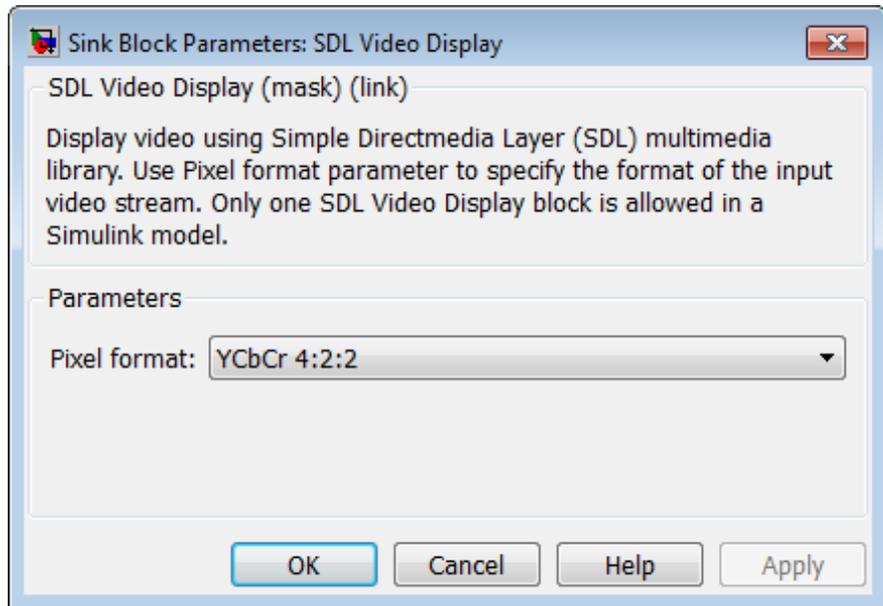

## Dialog

### Pixel format

Specify the format of the input video stream: YCbCr 4:2:2 or RGB.

YCbCr 4:2:2 uses three channels to represent color image data for each pixel:

- Y is the luma component (essentially a grayscale signal).
- Cb is the blue-difference chroma component.
- Cr is the red-difference chroma component.

Cb and Cr are sampled at half the rate of Y. Therefore, if the dimensions of Y are  $M \times N$ , the dimensions of Cb and Cr are each  $(M/2) \times N$ .

RGB uses three 8-bit values to represent the red, green, and blue components of each pixel.

# Raspberry Pi SDL Video Display

---

This parameter value defaults to YCbCr 4:2:2.

## See Also

Raspberry Pi V4L2 Video Capture | “Install Support for BeagleBoard Hardware”

## External Web Sites

- [http://en.wikipedia.org/wiki/Chroma\\_subsampling](http://en.wikipedia.org/wiki/Chroma_subsampling)
- <http://beagleboard.org/>
- <http://pandaboard.org/>
- <https://groups.google.com/forum/#!topic/beagleboard/x8MT086mKe0>
- [http://processors.wiki.ti.com/index.php/Beagle\\_Board\\_Challenge:\\_TurtleCam](http://processors.wiki.ti.com/index.php/Beagle_Board_Challenge:_TurtleCam)


## Purpose

Receive UDP packets over IP network

## Library

Simulink Support Package for BeagleBoard Hardware  
Simulink Support Package for Gumstix Overo Hardware  
Simulink Support Package for PandaBoard Hardware  
Simulink Support Package for Raspberry Pi Hardware

## Description

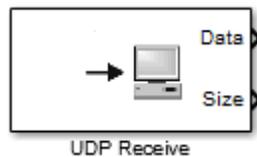

Receive UDP packets from the local network. The block output, **data**, emits UDP packet data as a one-dimensional vector of a specified data type. The block output, **size**, emits the size the data in the UDP buffer.

The data type of the block output, **Data**, depends on the **Data type** parameter. The data type of the block output, **Size**, is `uint16`.

While UDP Receive waits for new data to arrive, **size** emits a stream of zeros. When new data arrives, **size** changes to a non-zero value.

If you simulate a model that contains the UDP Receive block on your host computer (e.g., Simulation > Normal), and send UDP packets to that model from a board, the **data** output emits a disproportionately large number of zeros. This is because Simulink software simulates the model as a free-running application with a shorter period than the real-time application running on the board. In other words, the free-running simulation outputs zeros because it is waiting for the “slower” real-time application on the board to send data. If both applications were running on boards, this mismatch would not occur.


# Raspberry Pi UDP Receive

---

---

**Note** If you are having trouble using UDP to communicate with a computer, investigate whether antivirus or firewall software might be blocking UDP traffic. If so, try reconfiguring the software to allow UDP traffic for a specific IP port number.

---

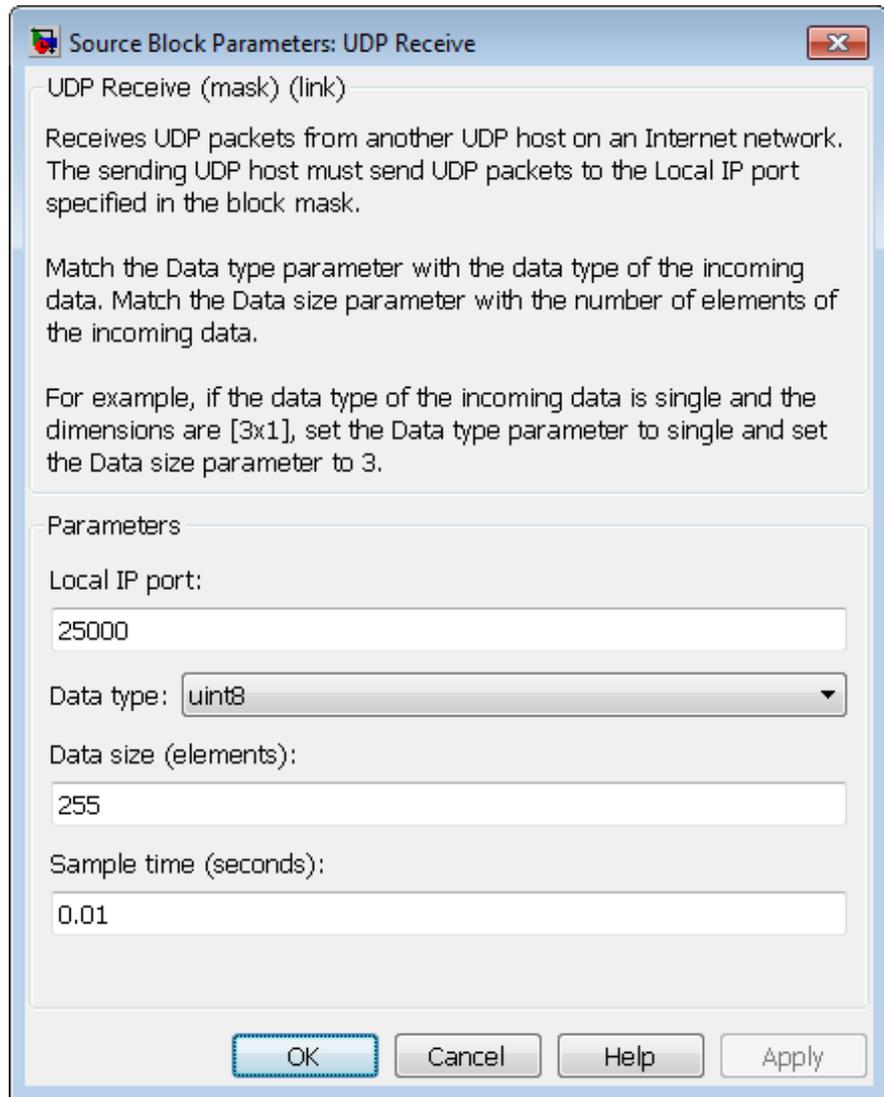

## Dialog

### Local IP port

The number of the IP port on the local device, which can range from 1 to 65535. This value defaults to 25000. The “local device” is the board running the model.

# Raspberry Pi UDP Receive

---

## Data type

Set the data type of the vector elements in the Message output. Match the data type with the data input used to create the UDP packets. This option defaults to `uint8`.

## Data size (elements)

Set the number of data elements in each UDP packet. Match the data size used to create the UDP packets. This value defaults to 255 elements.

## Sample time (seconds)

Specify how often this block reads the port buffer. Enter a value greater than zero. This value defaults to a sample time of 0.01 seconds.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Raspberry Pi UDP Send | “Install Support for BeagleBoard Hardware”  
| “Detect and Fix Task Overruns on BeagleBoard Hardware”

## External Web Sites


- [http://en.wikipedia.org/wiki/User\\_Datagram\\_Protocol](http://en.wikipedia.org/wiki/User_Datagram_Protocol)
- <http://beagleboard.org/>
- <http://pandaboard.org/>

**Purpose**

Send UDP packets over IP network

**Library**

Simulink Support Package for BeagleBoard Hardware  
Simulink Support Package for Gumstix Overo Hardware  
Simulink Support Package for PandaBoard Hardware  
Simulink Support Package for Raspberry Pi Hardware

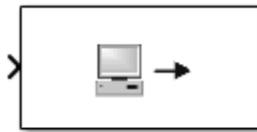**Description**

Send a UDP packet to a network address identified by the remote IP address and remote IP port parameters.


The data type of the block input data is `double`.

---

**Note** If you are having trouble using UDP to communicate with a computer, investigate whether antivirus or firewall software might be blocking UDP traffic. If so, try reconfiguring the software to allow UDP traffic for a specific IP port number.

---

# Raspberry Pi UDP Send

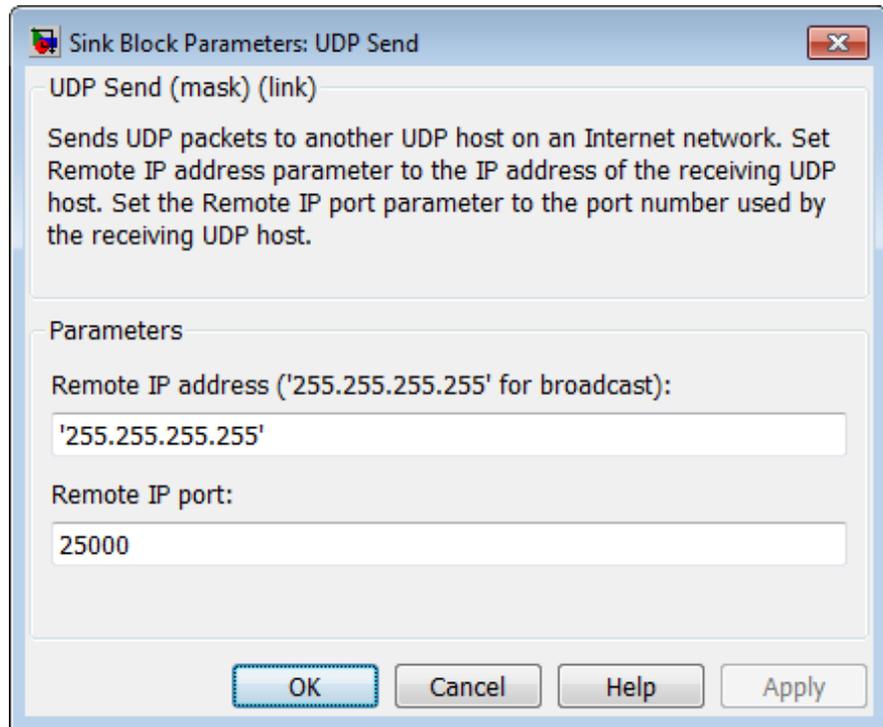

## Dialog

### Remote IP address ('255.255.255.255' for broadcast)

Enter the address or hostname of the IP node on the remote device.

To broadcast the UDP message to all devices, use the default parameter value, '255.255.255.255'. Use this approach sparingly to avoid creating unnecessary broadcast traffic. Often, IP routers are configured to drop broadcast UDP packets sent to '255.255.255.255'.

### Remote IP port

The number of the IP port on the remote device, which can range from 1 to 65535. This value defaults to 25000.

## See Also

Raspberry Pi UDP Receive | “Install Support for BeagleBoard Hardware”

## Related Examples

- Get the IP Address of the BeagleBoard Hardware

## External Web Sites

- [http://en.wikipedia.org/wiki/User\\_Datagram\\_Protocol](http://en.wikipedia.org/wiki/User_Datagram_Protocol)
- <http://beagleboard.org/>
- <http://pandaboard.org/>

# BeagleBoard V4L2 Video Capture

---

## Purpose

Capture video from USB camera using V4L2

## Library

Simulink Support Package for BeagleBoard Hardware  
Simulink Support Package for Gumstix Overo Hardware  
Simulink Support Package for PandaBoard Hardware  
Simulink Support Package for Raspberry Pi Hardware

## Description



Capture live video from a USB video camera, using the V4L2 (Video for Linux Two API) driver framework. The output is in row major format. During simulation, the model outputs a moving colorbar image.

The Ubuntu Linux image used on the target hardware supports video capture from USB cameras listed as Universal Video Class (UVC). In addition to being a UVC class camera, the camera itself must support data acquisition in YUYV mode.

The following cameras have been tested:

- Logitech QuickCam Pro 9000
- Logitech QuickCam Pro 3000
- Logitech Webcam C600
- Logitech HD Webcam C310

For a list of Logitech webcams that support UVC, see [http://logitech-en-amr.custhelp.com/app/answers/detail/a\\_id/6471](http://logitech-en-amr.custhelp.com/app/answers/detail/a_id/6471).  
For a list of UVC cameras supported by Ubuntu, see <http://www.ideasonboard.org/uvcl/>.

For BeagleBoard hardware only: If you connect any USB camera to a USB Host port on the board, the video output contains artifacts that

# Raspberry Pi V4L2 Video Capture

---

look like small dark scratches. This is a known hardware issue, and is independent of the Linux distribution. To work around this issue, connect the camera to the BeagleBoard's USB OTG port using a "Micro USB OTG to USB 2.0 Adapter". The USB OTG port is labelled "OTG" and is located next to the BeagleBoard's "5V" or "5VDC" connector. This issue is discussed at:

- [http://processors.wiki.ti.com/index.php/Beagle\\_Board\\_Challenge:\\_TurtleCam](http://processors.wiki.ti.com/index.php/Beagle_Board_Challenge:_TurtleCam)
- <https://groups.google.com/forum/#!topic/beagleboard/x8MT086mKe0>

# Raspberry Pi V4L2 Video Capture

## Dialog

## Device Configuration

Source Block Parameters: V4L2 Video Capture

V4L2 Video Capture (mask) (link)

Capture video from a USB camera using V4L2 driver framework. During simulation, the model outputs a moving colorbar image. While running on hardware, the block outputs video from a USB camera.

Set Image size parameter to the desired output size. Use Pixel format parameter to specify the format of the output video stream.

Parameters

Device name:

Image size:

Image size ([width, height]):

Pixel format:

Sample time:

OK Cancel Help Apply

## Device name

Enter the path and name of the video device. This parameter value defaults to  `'/dev/video0'`.

The Linux kernel creates a video device file when you connect a supported USB video camera to the board. By default, the Linux kernel supports all USB video class (UVC) devices.

To see the list of video device files, open a command line session with the board and enter: `ls -al /dev/video*`.

## Image size ([width, height])

Specify the width in pixels and height in lines of the image to capture.

This parameter value defaults to `[640, 480]`.

## Pixel format

Select the video format of the video device, RGB or YCbCr 4:2:2.

RGB represents the red, green, and blue components of a pixel using an 8-bit value. RGB color space is device-dependent.

YCbCr 4:2:2 uses three channels to represent color image data for each pixel:

- Y is the luma component (essentially a grayscale signal).
- Cb is the blue-difference chroma component.
- Cr is the red-difference chroma component.

The Cb and Cr components are sampled at half the sample rate of Y. See [http://en.wikipedia.org/wiki/Chroma\\_subsampling](http://en.wikipedia.org/wiki/Chroma_subsampling).

This parameter value defaults to YCbCr 4:2:2.

## Sample time

Select the sample time of the video device. This parameter value defaults to `1/10`

# Raspberry Pi V4L2 Video Capture

---

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Raspberry Pi SDL Video Display | “Install Support for BeagleBoard Hardware” | “Detect and Fix Task Overruns on BeagleBoard Hardware”

## External Web Sites


- [http://en.wikipedia.org/wiki/Chroma\\_subsampling](http://en.wikipedia.org/wiki/Chroma_subsampling)
- [http://logitech-en-amr.custhelp.com/app/answers/detail/a\\_id/6471](http://logitech-en-amr.custhelp.com/app/answers/detail/a_id/6471)
- <http://www.ideasonboard.org/uvic/>
- <http://beagleboard.org/>
- <http://pandaboard.org/>
- [http://processors.wiki.ti.com/index.php/Beagle\\_Board\\_Challenge:\\_TurtleCam](http://processors.wiki.ti.com/index.php/Beagle_Board_Challenge:_TurtleCam)
- <https://groups.google.com/forum/#!topic/beagleboard/x8MT086mKe0>

**Purpose**

Detect button press on EV3 brick

**Library**

Simulink Support Package for LEGO MINDSTORMS EV3 Hardware

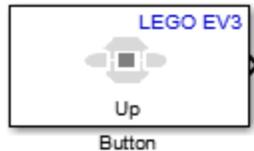**Description**

Detect whether a specific the EV3 Brick Button is being pressed:


- 0 = Not pressed
- 1 = Pressed

You can configure the block to detect the Center, Left, Right, Up, or Down button. The Back button is reserved for stopping programs and shutting down the EV3 brick.

The block output emits values as uint8.

During simulations without hardware, this block emits zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

# LEGO MINDSTORMS EV3 Button

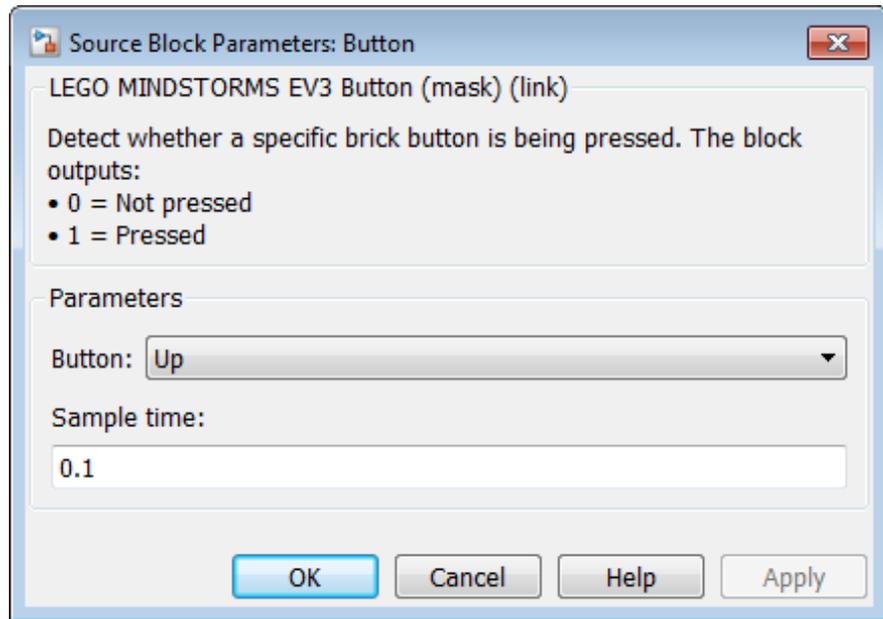

## Dialog Box

### Button

Select one of the EV3 Brick Buttons: Center, Left, Right, Up, or Down.

### Sample time

Specify how often the block reads the state of the button. The default value is 0.1.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

**See Also** “LEGO MINDSTORMS EV3 Hardware”

## External Web Sites

- <http://www.lego.com/mindstorms/>

# LEGO MINDSTORMS EV3 Color Sensor

---

**Purpose** Detect colors, reflected light, or ambient light

**Library** Simulink Support Package for LEGO MINDSTORMS EV3 Hardware




## Description

Detect the color of an object, measure reflected light, or measure ambient light.

The block output emits values as uint8.

During simulations without hardware, this block emits zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

# LEGO MINDSTORMS EV3 Color Sensor

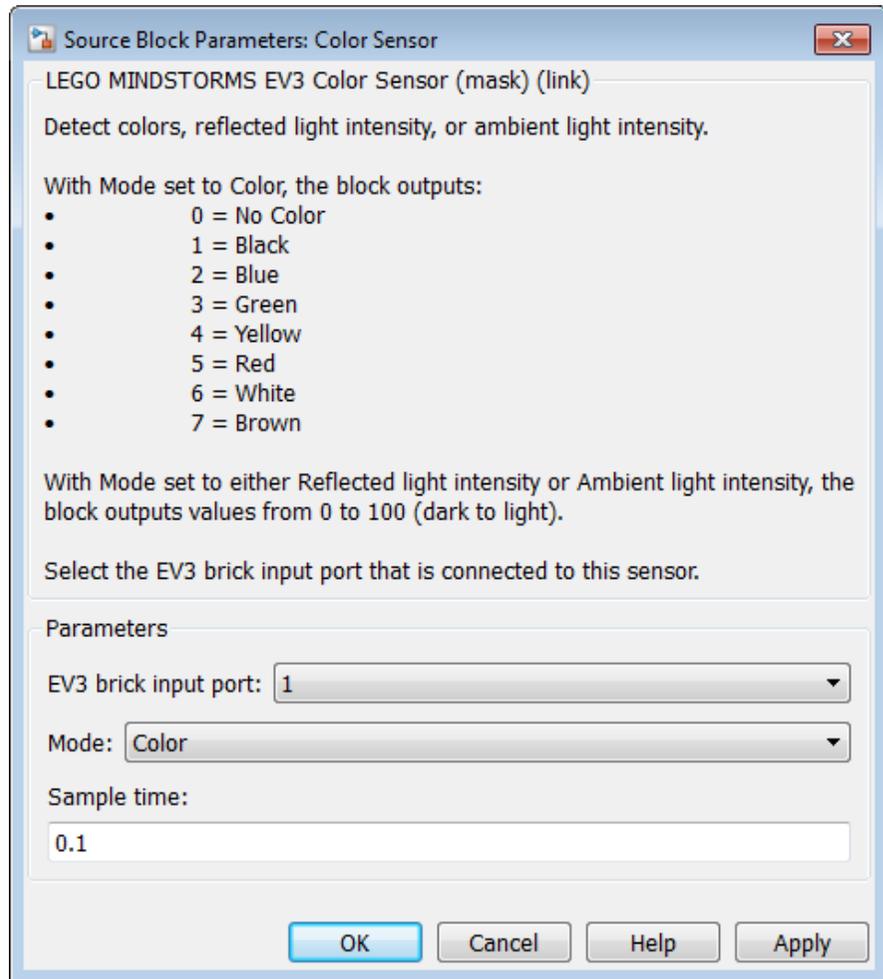

## Dialog Box

### EV3 brick input port

Identify the EV3 brick input port connected to this sensor. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

## Mode

Select the type of measurement to perform, Color (the default), Reflected light intensity, or Ambient light intensity.

With Color, the sensor evaluates the color of an object and outputs one of the following values:

- 0 = No Color
- 1 = Black
- 2 = Blue
- 3 = Green
- 4 = Yellow
- 5 = Red
- 6 = White
- 7 = Brown

For example, there are EV3-based robots that use Color mode solve Rubic's cube puzzles.

With Reflected light intensity, the sensor shines an LED and measures the amount of light reflected by nearby surfaces. The block outputs a normalized value (0-100, dark to light). For example, there are EV3 robots that use this mode to detect and follow a black line around an obstacle course.

With Ambient light intensity, the sensor measures the amount of light in its surroundings. The block outputs a normalized value (0-100, dark to light). For example, there are EV3 robots that use this mode to follow a light source.

## Sample time

Specify how often the block reads sensor values.

# LEGO MINDSTORMS EV3 Color Sensor

---

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

**See Also** “LEGO MINDSTORMS EV3 Hardware”

**External  
Web Sites**

- <http://www.lego.com/mindstorms/>

# LEGO MINDSTORMS EV3 Encoder

---

## Purpose

Measure motor rotation in degrees

## Library

Simulink Support Package for LEGO MINDSTORMS EV3 Hardware

## Description



Measure the wheel rotation of an EV3 Motor in degrees. Driving the wheel forward increments the measurement. Driving the wheel in reverse decrements the measurement.


You can use this block with the LEGO MINDSTORMS EV3 Motor block.

If your model contains Motor and Encoder blocks for the same motor, set the **EV3 brick output port** parameter in both blocks to the same port.

The block output emits values as int32.

During simulations without hardware, this block emits zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

# LEGO MINDSTORMS EV3 Encoder

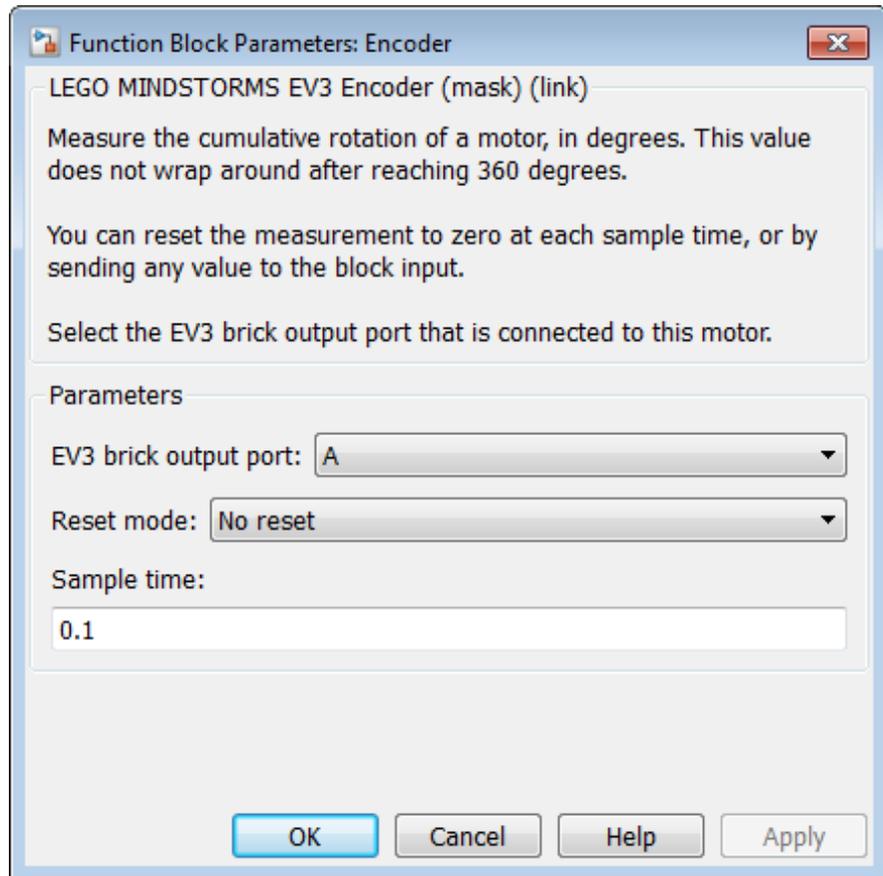

## Dialog Box

### EV3 brick output port

Select the EV3 brick output port connected to the motor. The options are A, B, C, or D.

### Reset mode

Choose whether to reset the measurement value:

- No reset — Do not reset the measurement value. Measure the total degrees of rotation.

- **Reset at each sample time** — For each sample period, output the measurement value and then reset it to 0.
- **Reset by external signal** — Create a block input that can reset the measurement value to 0. When you send a value other than 0 to the block input, reset the measurement value to 0. For each sample period, output the measurement value since the last reset.

## Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

“LEGO MINDSTORMS EV3 Hardware” | LEGO MINDSTORMS EV3 Motor

## External Web Sites

- <http://www.lego.com/mindstorms/>

# LEGO MINDSTORMS EV3 Gyro Sensor

---

**Purpose** Measure rate of rotation

**Library** Simulink Support Package for LEGO MINDSTORMS EV3 Hardware




## Description

Measure the rotation of the EV3 Gyro Sensor in degrees per second.

The block output emits values as int32.

During simulations without hardware, this block emits zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

# LEGO MINDSTORMS EV3 Gyro Sensor

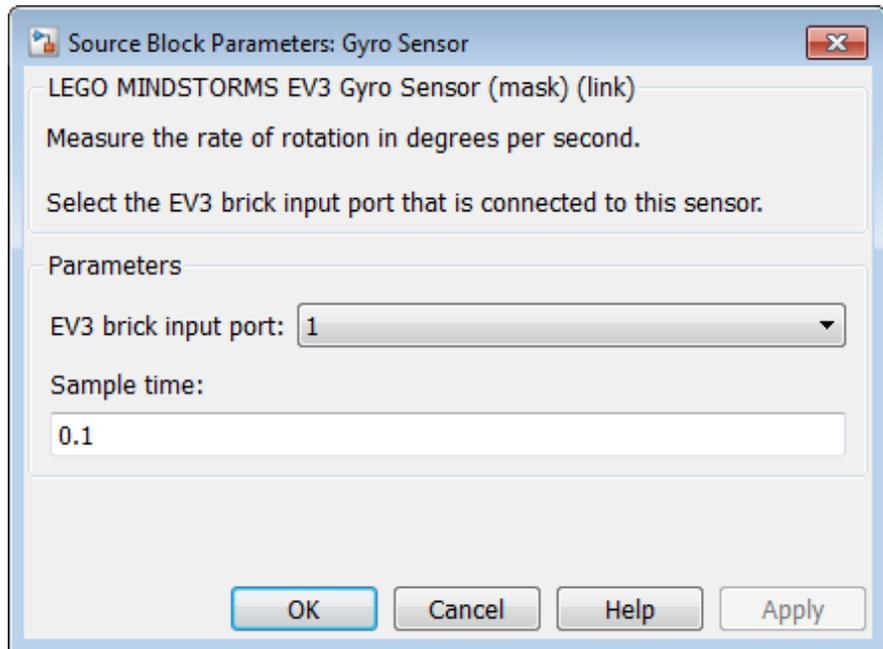

## Dialog Box

### EV3 brick input port

Select the EV3 sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

### Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.


**See Also** “LEGO MINDSTORMS EV3 Hardware”

# LEGO MINDSTORMS EV3 Infrared Sensor

---

**Purpose** Receive signals from EV3 Infrared Beacon

**Library** Simulink Support Package for LEGO MINDSTORMS EV3 Hardware

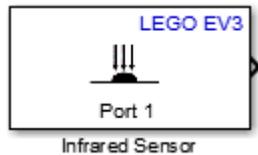

## Description

Receive infrared signals sent from EV3 Infrared Beacon to the EV3 Infrared Sensor.

- 0 = No button, or Beacon Mode is off
- 1 = Button 1
- 2 = Button 2
- 3 = Button 3
- 4 = Button 4
- 5 = Buttons 1 & 3
- 6 = Buttons 1 & 4
- 7 = Buttons 2 & 3
- 8 = Buttons 2 & 4
- 9 = Beacon Mode is on
- 10 = Buttons 1 & 2
- 11 = Buttons 3 & 4

To configure the block, select the EV3 brick input port to which this sensor is connected. Set the Channel parameter to match the channel setting on the EV3 Infrared Beacon. Operate the EV3 Infrared Beacon in Beacon Mode.


The block output emits values as uint8.

# LEGO MINDSTORMS EV3 Infrared Sensor

---

During simulations without hardware, this block emits zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

# LEGO MINDSTORMS EV3 Infrared Sensor

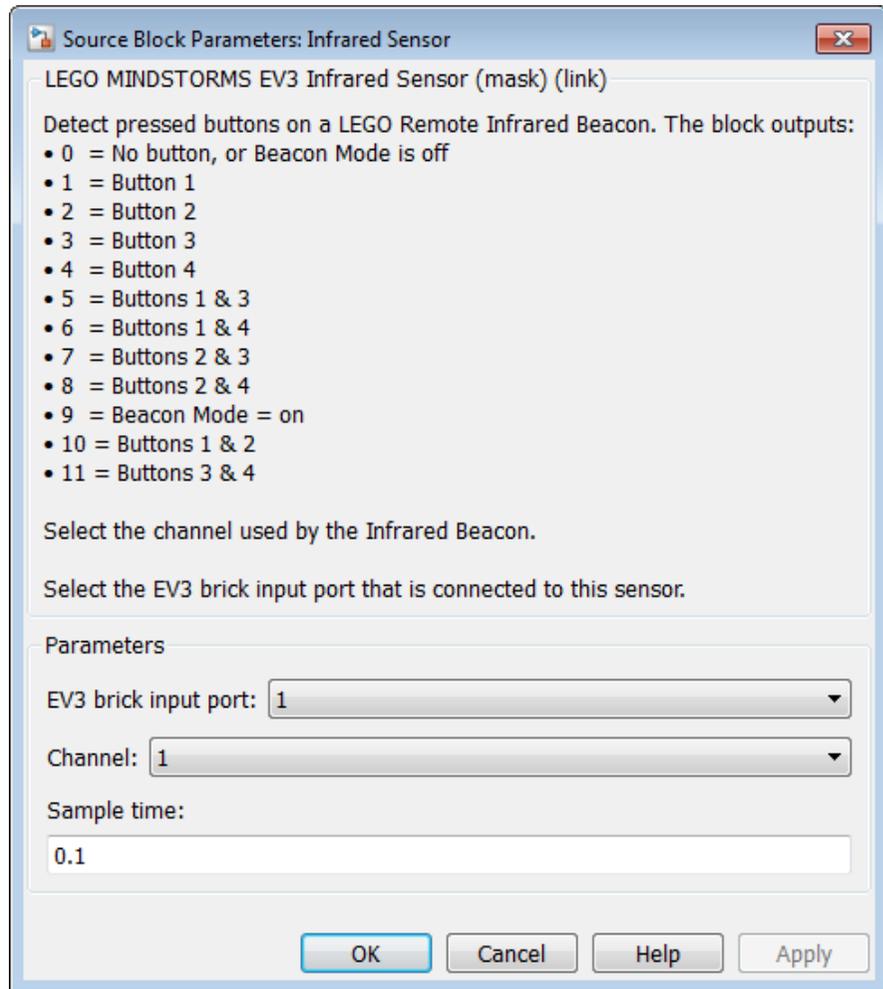

## Dialog Box

### EV3 brick input port

Select the EV3 sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

# LEGO MINDSTORMS EV3 Infrared Sensor

---

## **Channel**

Update this value to match the channel setting on the EV3 Infrared Beacon.

## **Sample time**

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

**See Also** “LEGO MINDSTORMS EV3 Hardware”

## **External Web Sites**

- <http://www.lego.com/mindstorms/>


# LEGO MINDSTORMS EV3 Display

---

**Purpose** Display label and integer on EV3 Display

**Library** Simulink Support Package for LEGO MINDSTORMS EV3 Hardware

## Description

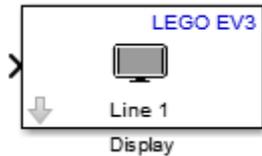

Display a static label, and an integer from the block input, on the EV3 Display.


The values can be positive or negative.

If the model running on the EV3 brick does not use the Display, the Display shows a message that it is running a program.

This block converts the data type of the values it receives. You do not need to convert the data type of the input signal to int32 with floor.

During simulations without hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

## Dialog Box

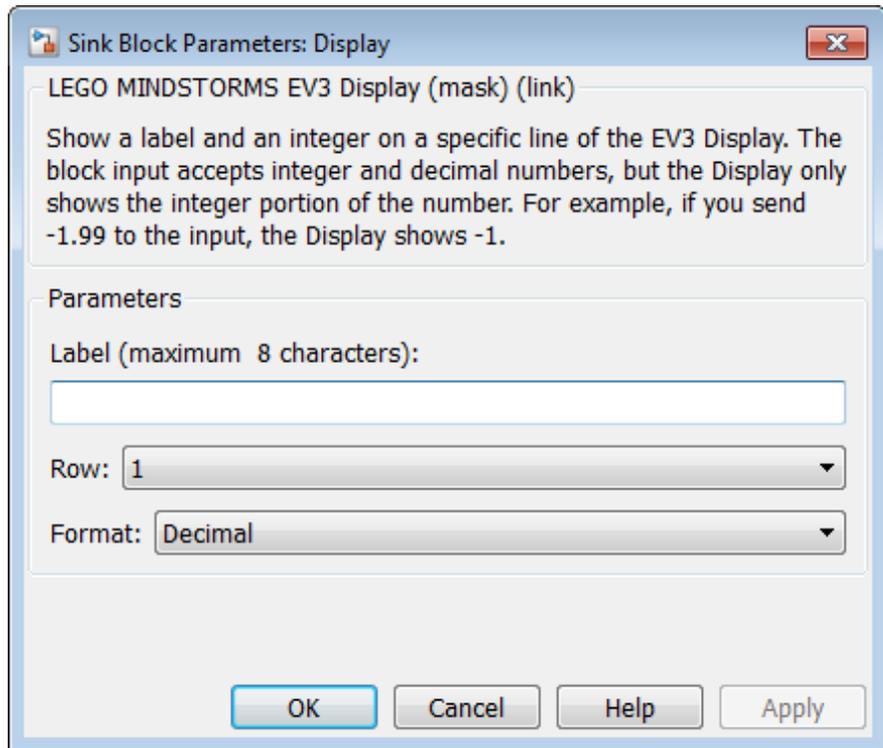

### Label (maximum 8 characters)

Enter a static label for the input. The Display shows the prefix to the left of the input value. The prefix cannot be longer than 8 characters. For example, if you are displaying the state of the Button block, enter Button:.

### Row

Select the row upon which to display the number. Row 1 is at the top of the Display. Line 10 is at the bottom.

### Display format

Select the format of the number. The options are Decimal or Hex (hexadecimal).

# LEGO MINDSTORMS EV3 Display

---

**See Also** “LEGO MINDSTORMS EV3 Hardware”

**External  
Web Sites**

- <http://www.lego.com/mindstorms/>

## Purpose

Control motor power and direction

## Library

Simulink Support Package for LEGO MINDSTORMS EV3 Hardware

## Description



Control the power and direction of an EV3 Motor.

You can use this block with the LEGO MINDSTORMS EV3 Encoder block, which measures rotation of the motor.

The block input accepts values from 100 to -100:


- 1 to 100 = Forward, minimum to maximum power
- -1 to -100 = Reverse, minimum to maximum power
- 0 = No power

During simulations without hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

This block converts the data type of the values it receives. You do not need to convert the data type of the input signal.

# LEGO MINDSTORMS EV3 Motor

---

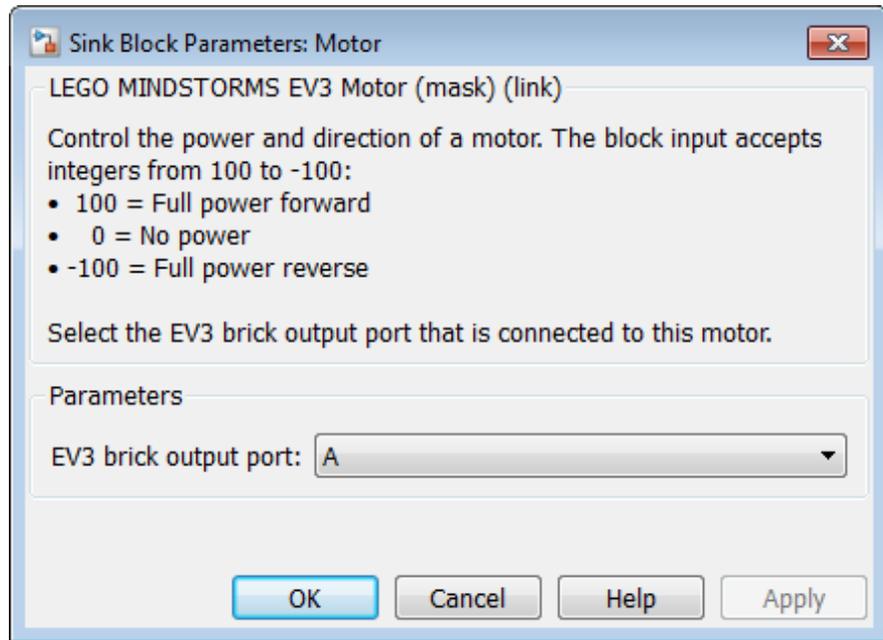

## Dialog Box

### EV3 brick output port

Select the EV3 brick output port connected to the motor. The options are A, B, C, or D.

## See Also

“LEGO MINDSTORMS EV3 Hardware” | LEGO MINDSTORMS EV3 Encoder

## External Web Sites

- <http://www.lego.com/mindstorms/>

## Purpose

Play tone from EV3 speaker

## Library

Simulink Support Package for LEGO MINDSTORMS EV3 Hardware

## Description



Play tones from the speaker inside the EV3 brick.

To play a tone, set the speaker volume and frequency to values that are audible.

To stop playing a tone, send a 0 to either block input.

The speaker can produce audible sound from approximately 32 to 13000 Hz.

The speaker volume ranges from 0 to 100 (lowest to highest).


You can disable either one of the block inputs using the **Input mode** parameter. For example, to always play 440 Hz, you can set **Input mode** to **Volume only**, and then set **Frequency (Hz)** to 440.

This block converts the data type of the values it receives. You do not need to convert the data type of the input signal.

During simulations without hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

# LEGO MINDSTORMS EV3 Speaker

## Dialog Box

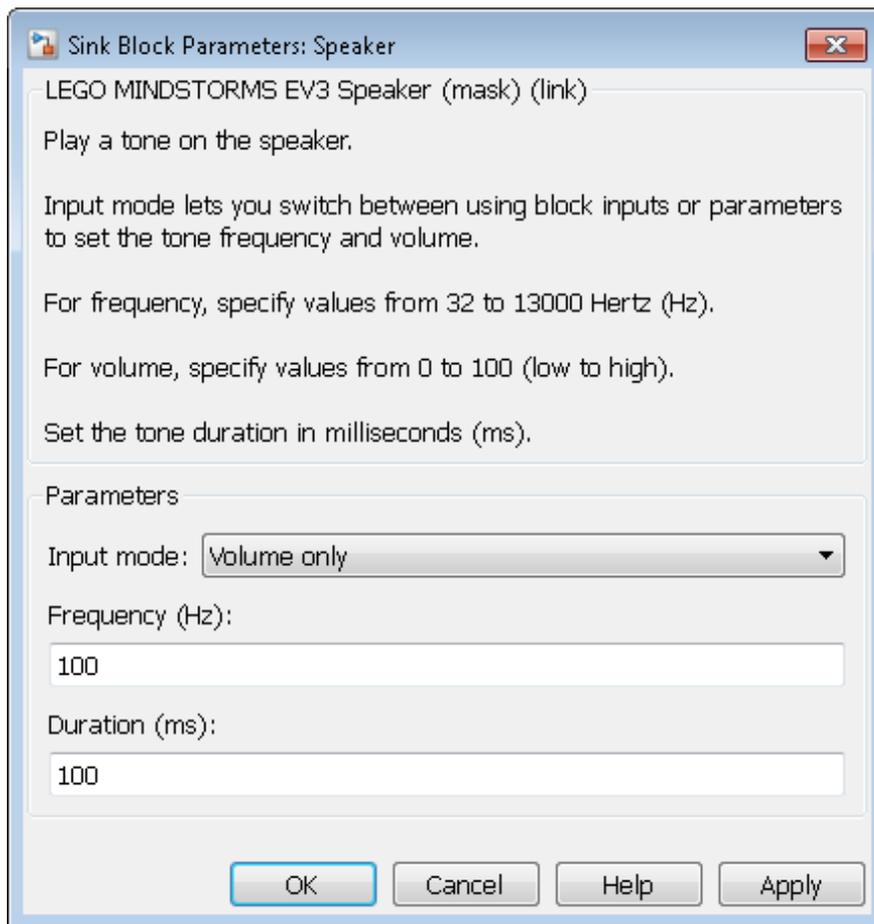

### Input mode

Enable or disable the block inputs:

- Frequency and volume — Enables both **Freq** and **Vol**.

- **Volume only** — Enables the **Vol** block input, disables the **Freq** block input, and enables the **Frequency (Hz)** parameter on the block mask.
- **Frequency only** — Enables the **Freq** block input, disables the **Vol** block input, and enables the **Volume (0 - 100)** parameter on the block mask.

## **Frequency (Hz)**

Enter the frequency of the tone the speaker emits. When the **Input mode** parameter is configured to enable a **Freq** input, this parameter is not available.

## **Volume (0 - 100)**

Set the volume of the tone the speaker emits. When the **Input mode** parameter is configured to enable a **Vol** input, this parameter is not available.

## **Duration (ms)**

Play a continuous tone or an intermittent tone (beeps). If this value is equal to or greater than the sample time of the source block, the speaker emits a continuous tone. If this value is shorter than the sample time of the source block, the speaker emits an intermittent tone at each sample period. For example, if the sample time of a source block is 0.1 seconds, and the speaker duration is 100 milliseconds (0.1 seconds), the speaker plays a continuous tone. If you change the speaker duration to 50 milliseconds, the speaker emits a beep every 0.1 seconds.

**See Also** “LEGO MINDSTORMS EV3 Hardware”

## **External Web Sites**


- <http://www.lego.com/mindstorms/>

# LEGO MINDSTORMS EV3 Status Light

---

**Purpose** Control status light on EV3 brick

**Library** Simulink Support Package for LEGO MINDSTORMS EV3 Hardware

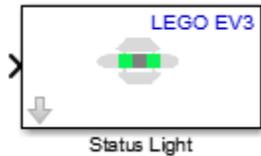

## Description

Control the color and effect of the status light behind the buttons on the EV3 brick.


The block input accepts the following values:

- 0 = Off
- 1 = Solid green
- 2 = Solid red
- 3 = Solid orange
- 4 = Pulsing green
- 5 = Pulsing red
- 6 = Pulsing orange
- Other values = Off

This block converts the data type of the values it receives. You do not need to convert the data type of the input signal.

During simulations without hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

## Dialog Box

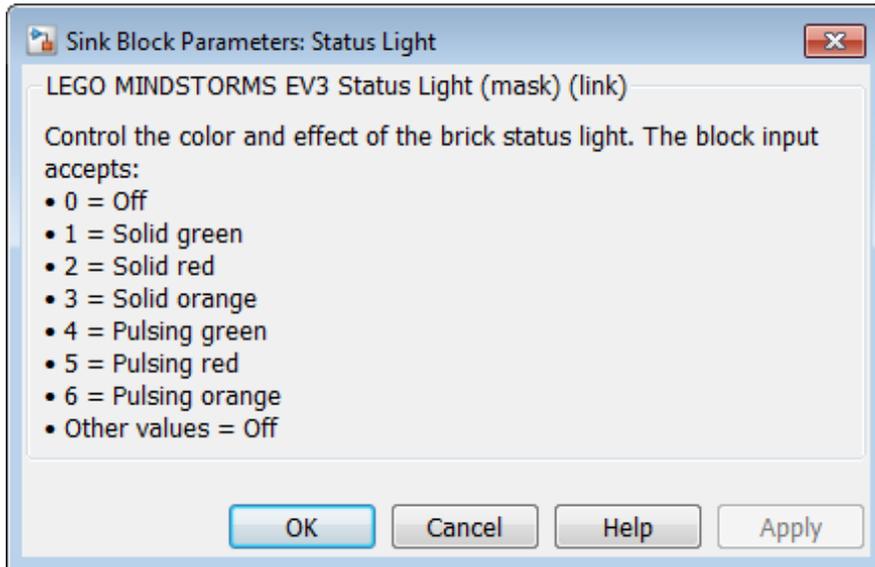

**See Also** “LEGO MINDSTORMS EV3 Hardware”

## External Web Sites

- <http://www.lego.com/mindstorms/>

# LEGO MINDSTORMS EV3 Touch Sensor

---

**Purpose** Output state of touch sensor

**Library** Simulink Support Package for LEGO MINDSTORMS EV3 Hardware



## Description


Detect whether the EV3 Touch Sensor is being pressed:

- 0 = Not pressed
- 1 = Pressed

The block output emits values as uint8.

During simulations without hardware, this block emits zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

# LEGO MINDSTORMS EV3 Touch Sensor

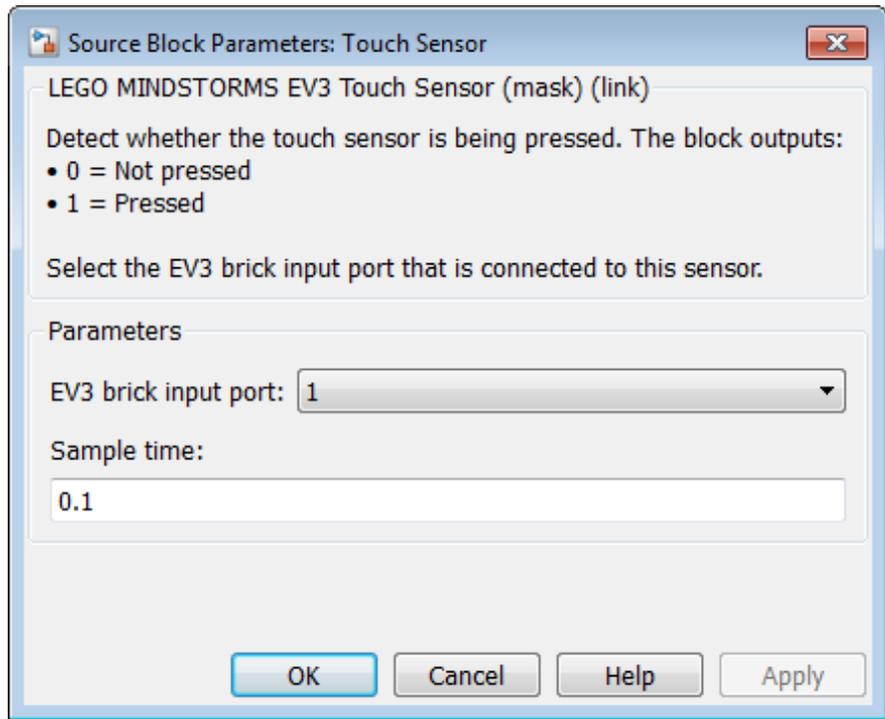

## Dialog Box

### EV3 brick input port

Select the EV3 sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

### Sample time

Specify how often the block reads sensor values.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

**See Also** “LEGO MINDSTORMS EV3 Hardware”

# LEGO MINDSTORMS EV3 Touch Sensor

---

## **External Web Sites**

- <http://www.lego.com/mindstorms/>

# LEGO MINDSTORMS EV3 Ultrasonic Sensor

---

## Purpose

Measure distance from object in centimeters

## Library

Simulink Support Package for LEGO MINDSTORMS EV3 Hardware



## Description

Measure the distance between the EV3 Ultrasonic Sensor and the nearest object in front of the sensor.

The sensor can detect objects from approximately 5 to 255 centimeters away.

When the nearest object is beyond the maximum range of the Ultrasonic Sensor, the sensor outputs the maximum value, 255.

The measured distances are approximate. For greater precision, calibrate the sensor output values against physical measurements.

The distance from which the sensor first detects an approaching object depends on:


- The ultrasonic reflectance of the object, which is a function of the object's size and composition. The sensor detects large hard objects from a greater distance than small soft ones. For example, the sensor might detect a pane of glass at 255 cm and a hand puppet at 150 cm.
- The angle of incidence of the object relative to the sensor. The sensor detects objects directly in front of it at greater distances than objects off to the sides.

The block output emits values as uint8.

During simulations without hardware, this block emits zeros. See "Block Produces Zeros or Does Nothing in Simulation".

# LEGO MINDSTORMS EV3 Ultrasonic Sensor

---

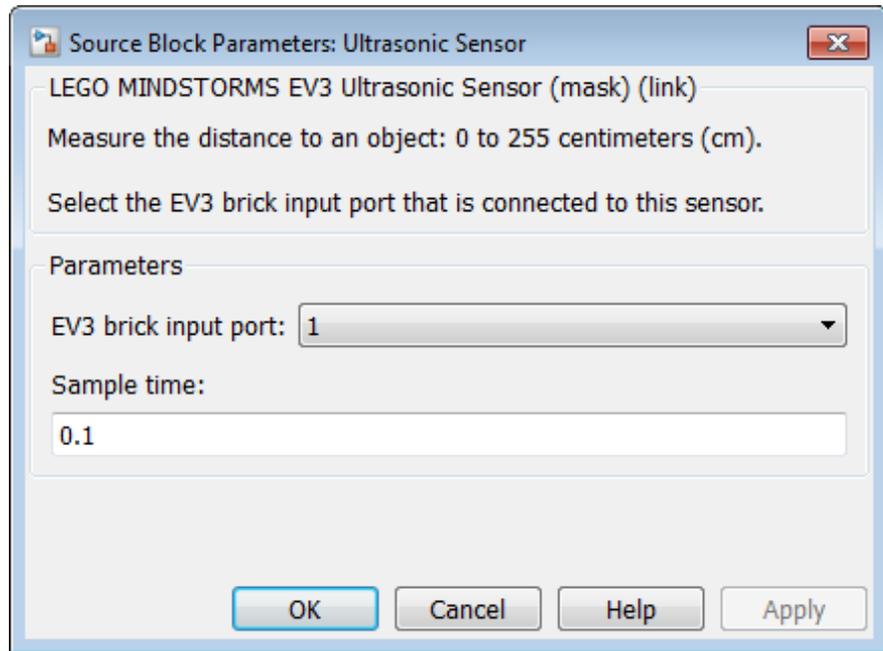

## Dialog Box

### EV3 brick input port

Select the EV3 sensor port to which the sensor is connected. Avoid assigning multiple devices to the same port. The options are 1, 2, 3, or 4.

### Sample time

Specify how often the block reads sensor values. This value defaults to 0.1. Shorter sample times, such as 0.01, may produce unreliable measurements.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

**See Also** “LEGO MINDSTORMS EV3 Hardware”

# LEGO MINDSTORMS EV3 Ultrasonic Sensor

---

## External Web Sites

- <http://www.lego.com/mindstorms/>

# Samsung GALAXY Android Accelerometer

---

**Purpose** Measure linear acceleration along X, Y and Z axes

**Library** Simulink Support Package for Samsung GALAXY® Android™ Devices



## Description


Measure linear acceleration along the X, Y and Z axes in meters per second squared ( $m/s^2$ ).

The data type of the block output data is `single`.

The following illustration shows the orientation of the positive X, Y, and Z axes for the Samsung GALAXY S4 device.

# Samsung GALAXY Android Accelerometer


---

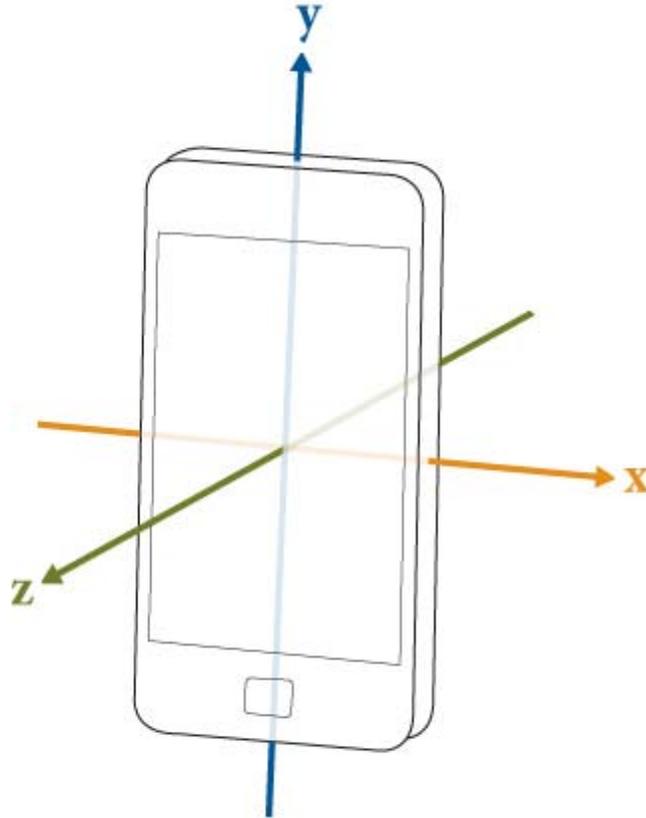

The following illustration shows the orientation of the positive X, Y, and Z axes for the Samsung GALAXY Tab2 device.

# Samsung GALAXY Android Accelerometer


---

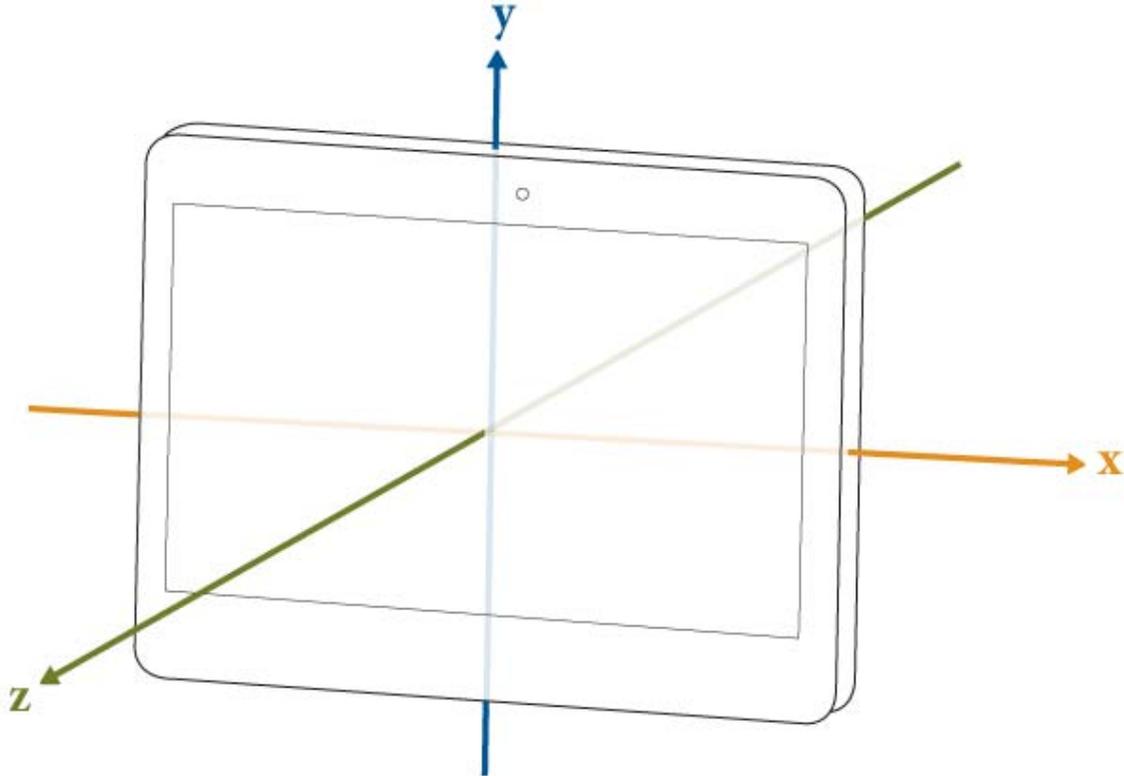

The orientation of the axes relative to the device remains constant. For example, if you place the device face-up on a table, the Z-axis measures the acceleration of Earth's gravity and outputs  $\approx 9.81 \text{ m/s}^2$ . The X and Y axes, which are perpendicular to the acceleration of Earth's gravity, both output  $\approx 0.00 \text{ m/s}^2$ .

During simulations without hardware, this block outputs zeros. See "Block Produces Zeros or Does Nothing in Simulation".

# Samsung GALAXY Android Accelerometer

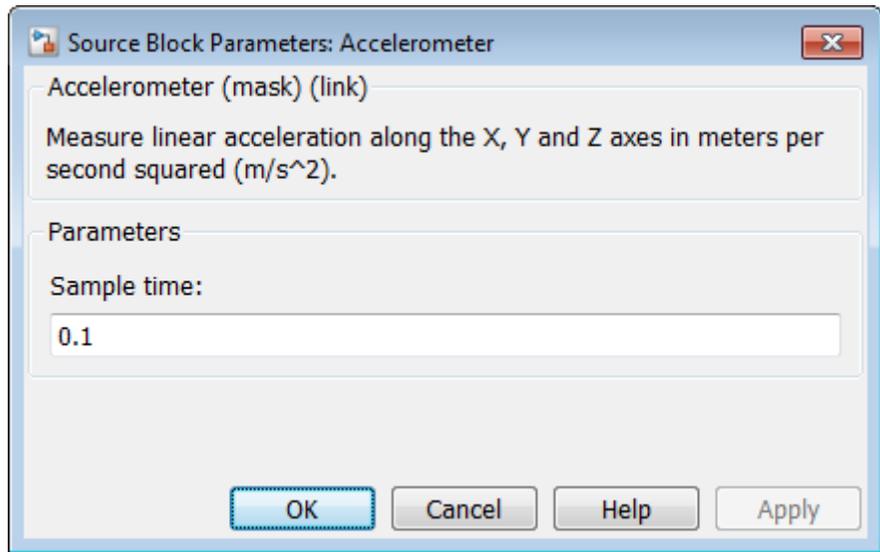

## Dialog Box

### Sample time

Specify how often the block reads the sensor.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Samsung GALAXY Android Gyroscope | Samsung GALAXY Android Location Sensor

## External Web Sites

- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android Ambient Temperature Sensor

**Purpose** Measure ambient temperature

**Library** Simulink Support Package for Samsung GALAXY Android Devices




## Description

Measure the ambient temperature in degrees Celsius.

The data type of the block output data is `single`.

During simulations without hardware, this block outputs zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

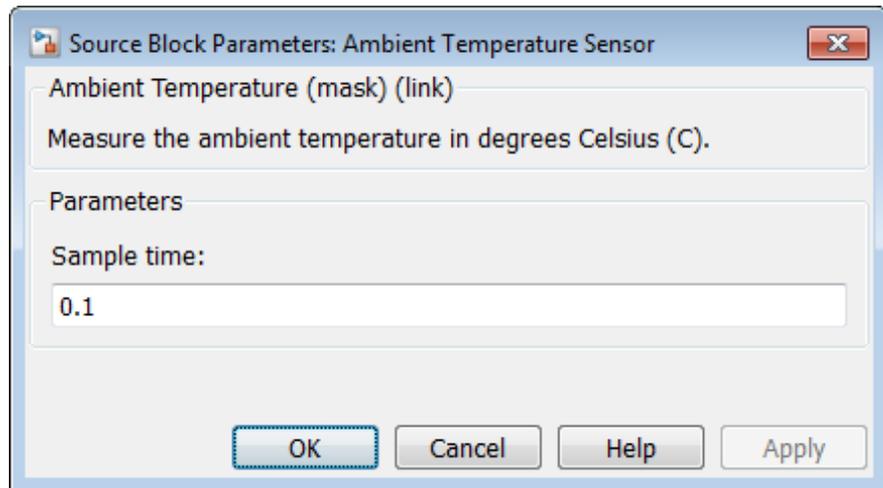

## Dialog Box

### Sample time

Specify how often the block reads the sensor.

# Samsung GALAXY Android Ambient Temperature Sensor

---

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Samsung GALAXY Android Humidity Sensor | Samsung GALAXY Android Light Sensor | Samsung GALAXY Android Pressure Sensor

## External Web Sites

- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android Audio Capture

---

**Purpose** Capture audio stream from device audio input

**Library** Simulink Support Package for Samsung GALAXY Android Devices



## Description


Capture stereo audio from the device's audio input, such as the microphone.

The block outputs the left and right audio channels as an N-by-2 array of int16 values. The **Frame size (samples)** parameter determines value of N.

If the model has trouble with the audio quality, run the model in External mode as described in “Tune Parameters and Monitor Data in Model Running on Android Devices”. While the model is running in External mode, make moderate adjustments to the value of **Queue duration (seconds)** parameter until the audio improves.

During simulations without hardware, this block outputs zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

# Samsung GALAXY Android Audio Capture

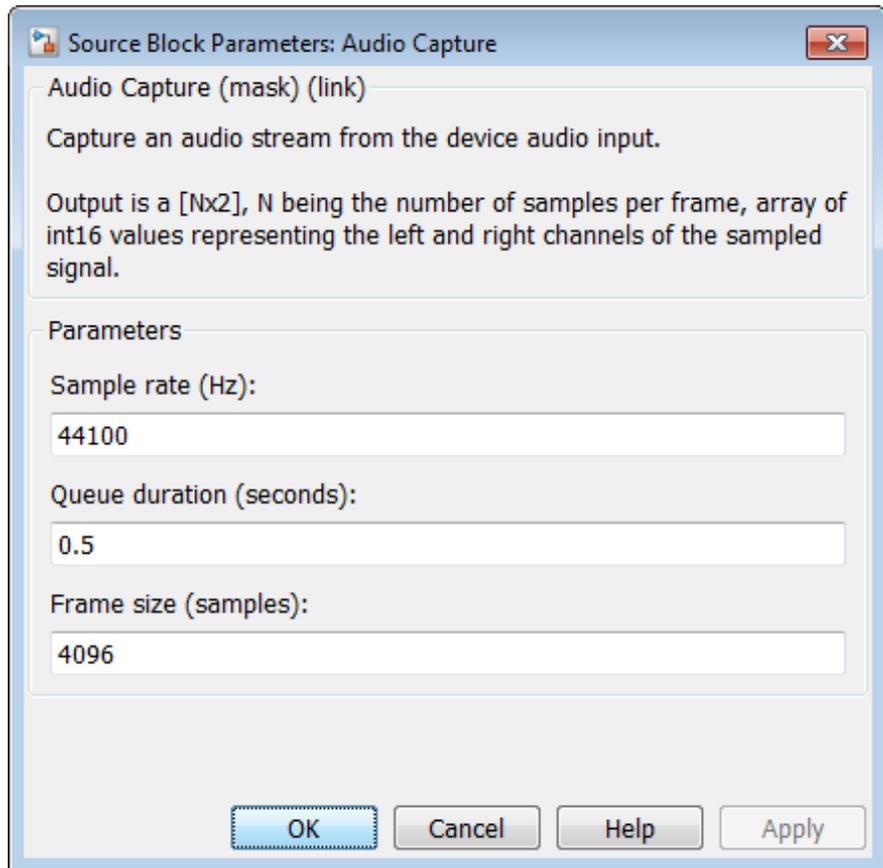

## Dialog Box

### Sample rate (Hz)

Specify the sample rate of the input device. The default value is 44100 Hz.

### Queue duration (seconds)

Specify the duration of the queue, in seconds. The default value is 0.5 seconds.

# Samsung GALAXY Android Audio Capture

---

The queue holds data that is on its way from the input device buffer to the block output.

When the input device buffer is full, the block writes the contents of the buffer to the queue.

## **Frame size (samples)**

Specify the frame size, in samples.

**See Also** Samsung GALAXY Android Audio Playback

## **External Web Sites**

- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android Audio Playback

---

## Purpose

Play back audio stream using device audio output

## Library

Simulink Support Package for Samsung GALAXY Android Devices

## Description



Play back a stereo audio stream using the device audio output, such as the speaker.


The block input accepts the left and right audio channels as an N-by-2 array of `int16` values. The frame size of the parameter determines value of N.

If the model has trouble with the audio quality, run the model in External mode as described in “Tune Parameters and Monitor Data in Model Running on Android Devices”. While the model is running in External mode, make moderate adjustments to the value of **Queue duration (seconds)** parameter until the audio improves.

During simulations without hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

# Samsung GALAXY Android Audio Playback

## Dialog Box

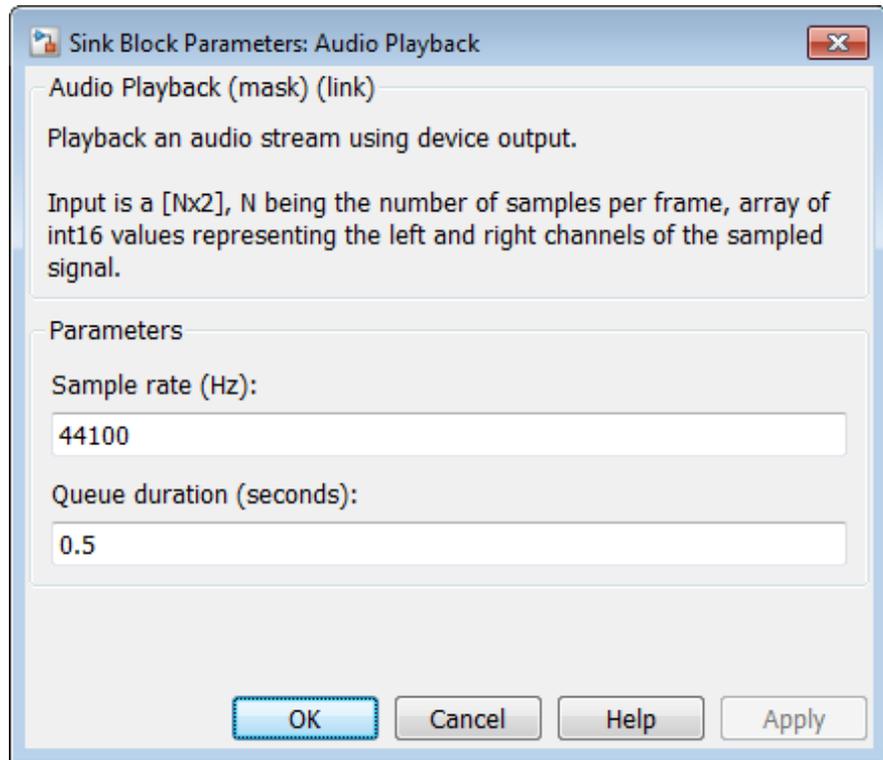

### Sample rate (Hz)

Specify the sample rate of the input device. The default value is 44100 Hz.

### Queue duration (seconds)

Specify the duration of the queue, in seconds. The default value is 0.5 seconds.

The queue holds data that is on its way from the block input to the output device buffer.

When the output device buffer is empty, the block writes the contents of the queue to the buffer.

# Samsung GALAXY Android Audio Playback

---

**See Also** Samsung GALAXY Android Audio Capture

**External  
Web Sites**

- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android Camera

---

**Purpose** Record video using front or rear camera

**Library** Simulink Support Package for Samsung GALAXY Android Devices

## Description




Capture video using the front or back camera. The block outputs RGB values for the images.

The R, G, and B block outputs each emit a vector of `uint8` data.

During simulations without hardware, this block outputs zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

## Dialog Box

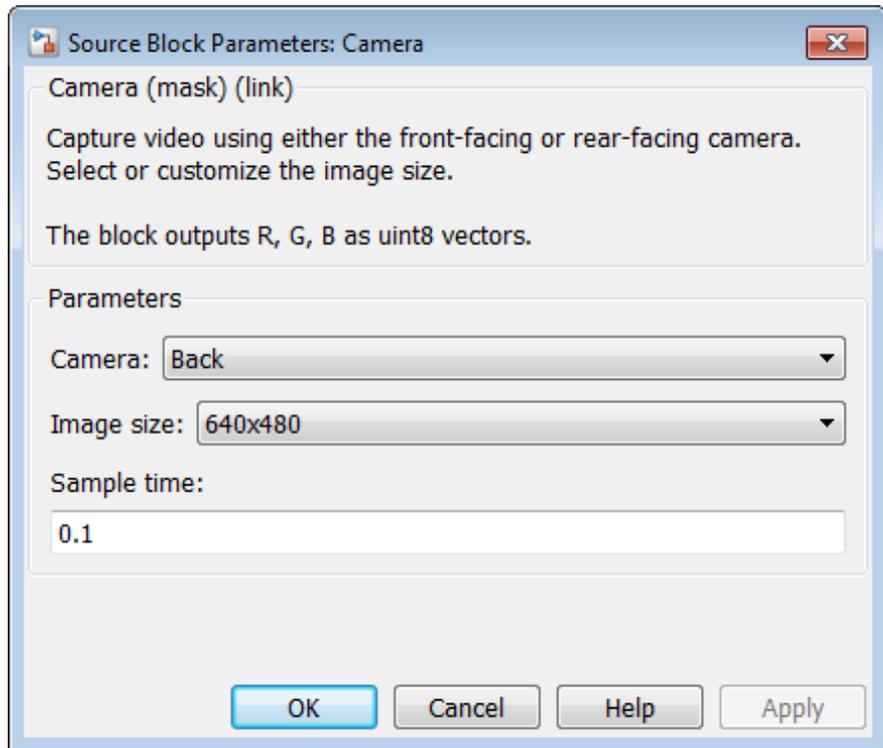

### Camera

Select one of the two cameras:

- Front uses the camera on the same side as the display.
- Back uses the camera on the opposite side from the display.

### Image size

Select one of the image sizes.

Image size significantly affects the rate at which the camera produces data. For example, capturing video at 1920x1080 produces almost six times more data than capturing video at 720x486.

# Samsung GALAXY Android Camera

---

During External mode, you cannot tune the value of this parameter.

## **Sample time**

Specify how often the block reads the sensor.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

**See Also** Samsung GALAXY Android Display

## **External Web Sites**

- <http://en.wikipedia.org/wiki/YCbCr>
- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android Display

**Purpose** Show video on device display

**Library** Simulink Support Package for Samsung GALAXY Android Devices

## Description




Show video on the device display using an image viewer.

The block inputs, R, G, and B, accept data as uint8 vectors.

During simulations without hardware, this block outputs zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

## Dialog Box

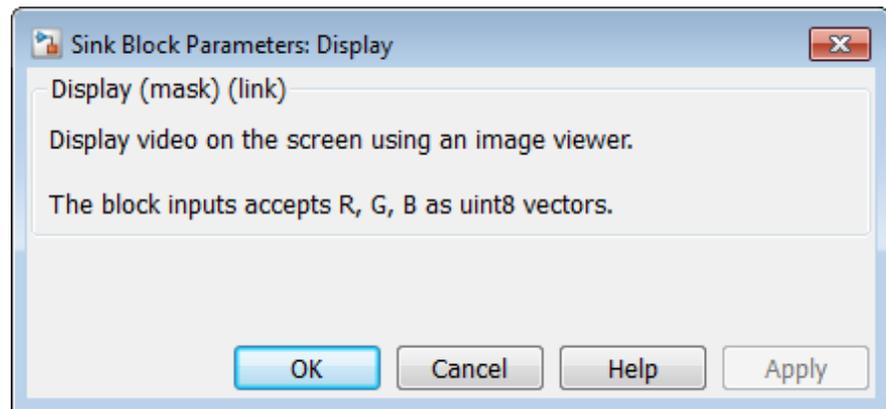

This block does not have any parameters.

**See Also** Samsung GALAXY Android Camera

## External Web Sites

- <http://en.wikipedia.org/wiki/YCbCr>
- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android ToApp

---

**Purpose** Send data to Android app

**Library** Simulink Support Package for Samsung GALAXY Android Devices



## Description

Send data to a function in an Android app.

For example, suppose the following:

- The block input is `int32(ones(3,1))`
- The function name is `ToAppFcn`


Then, the expected function in the Android app would be:

```
public void ToAppFcn(int[] inData)
```

Where `inData` is an integer array of three elements.

The block input supports the following data types: `uint8`, `int8`, `uint16`, `int16`, `uint32`, `int32`, `single`, and `double`.

During simulations without hardware, this block does nothing. See “Block Produces Zeros or Does Nothing in Simulation”.

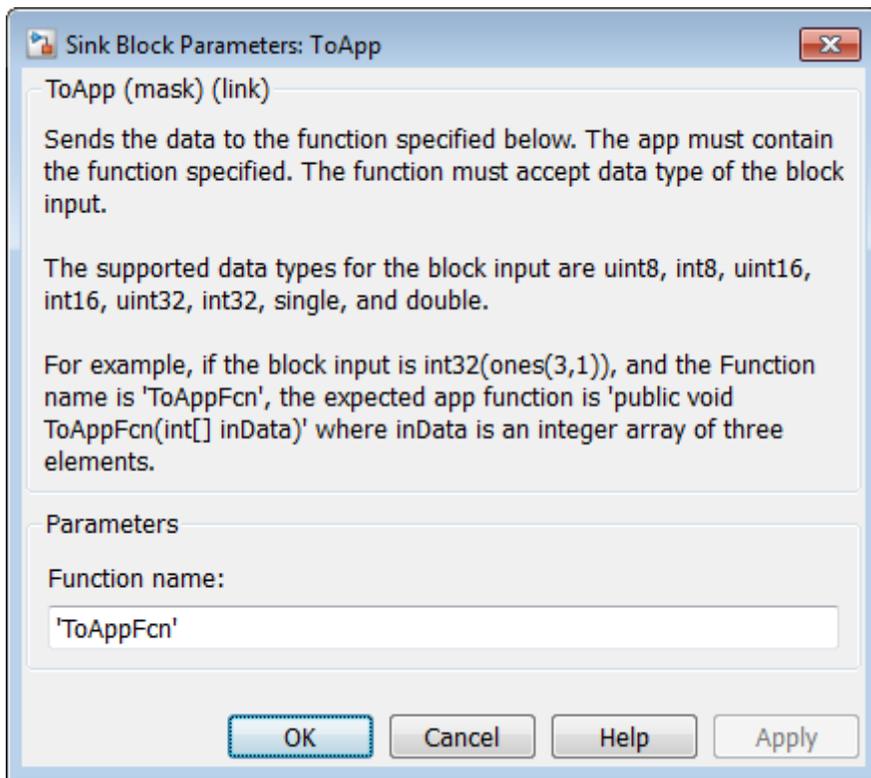

## Dialog Box

### Function name

Specify the name of a function in the Android app. The function must accept the data type of the block output data.

**See Also** Samsung GALAXY Android FromApp

## External Web Sites

- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android FromApp

---

**Purpose** Receive data from Android app

**Library** Simulink Support Package for Samsung GALAXY Android Devices



## Description

Receive data from a function in an Android app.

Configure the **Function name**, **Data type**, and **Data size** parameters to match those of the function.

For example, suppose that the function:


- Is `public int[] FromAppFcn()`.
- Sends three data elements each time it runs.
- The data type of those data elements is `int32`.

Then, set:

- **Function name** to `FromAppFcn`
- **Data size** to `3`
- **Data type** to `int32`

The function in the Android app must send a data type that this block can accept.

During simulations without hardware, this block outputs zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

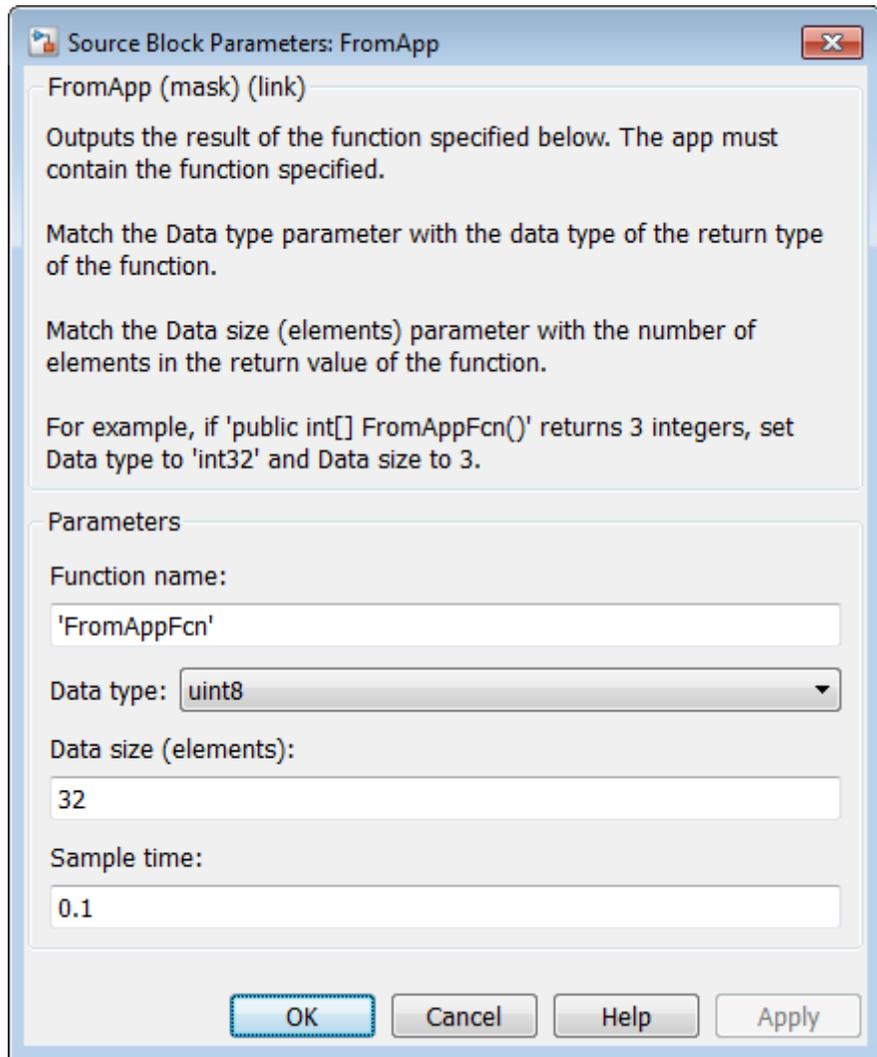

## Dialog Box

### Function name

The name of the function in the Android app.

# Samsung GALAXY Android FromApp

---

**Data type**

The data type of the data sent by the function.

**Data size**

The number of data elements the function sends to the block each time it runs.

**Sample time**

Specify how often the block reads the function.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

**See Also** Samsung GALAXY Android ToApp

**External  
Web Sites**

- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android Gyroscope

---

## Purpose

Measure rotational speed around X, Y, and Z axes

## Library

Simulink Support Package for Samsung GALAXY Android Devices

## Description



Measure rotational speed around the X, Y, and Z axes in radians per second (rad/s).

The data type of the block output data is `single`.


For any positive axis on the device, clockwise rotation outputs negative values, and counterclockwise rotation outputs positive values.

For example, if you place the device face up on a table and spin it clockwise, the block outputs negative values for the Z-axis.

The following illustration shows the orientation of the positive X, Y, and Z axes for the Samsung GALAXY S4 device.

# Samsung GALAXY Android Gyroscope


---

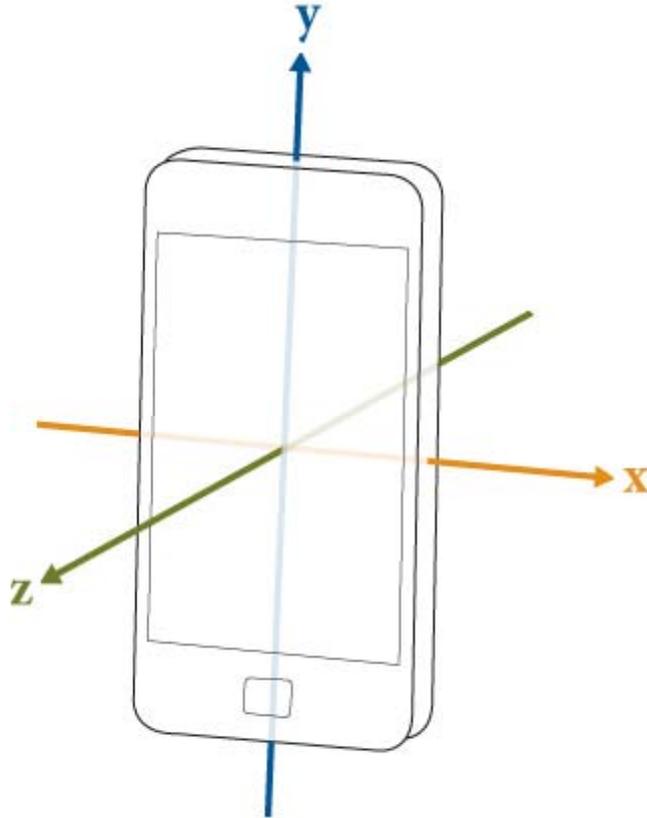

The following illustration shows the orientation of the positive X, Y, and Z axes for the Samsung GALAXY Tab2 device.


# Samsung GALAXY Android Gyroscope

---

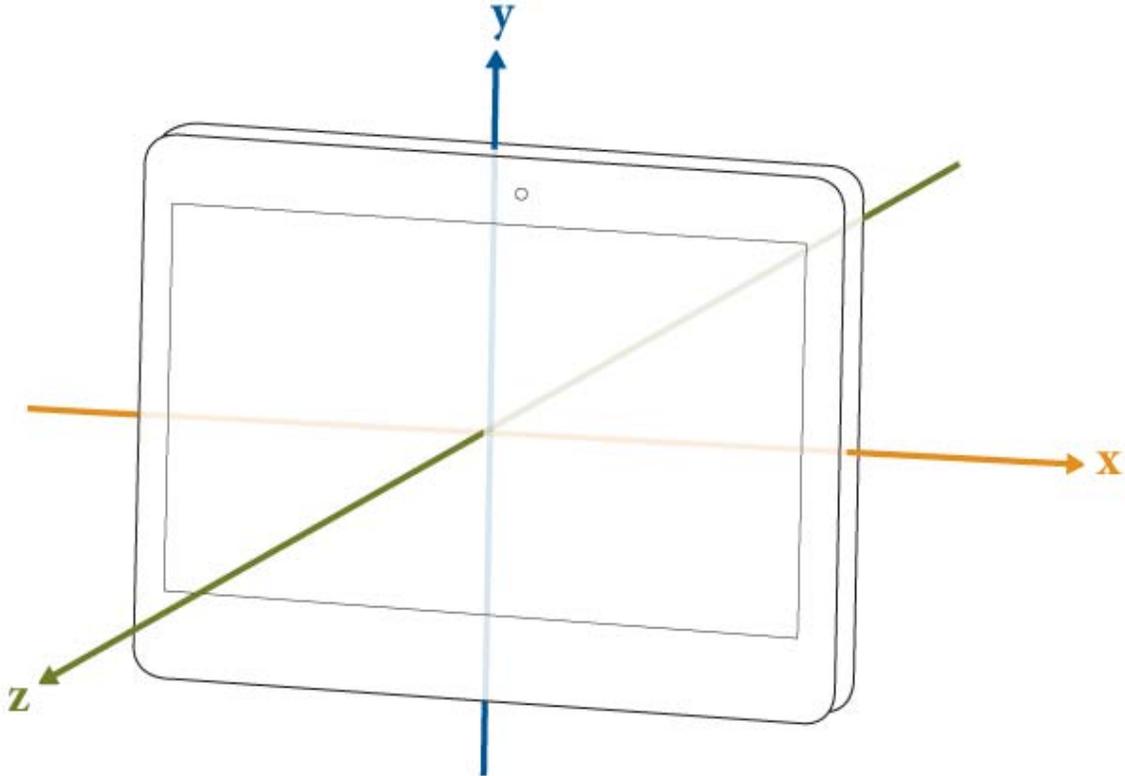

During simulations without hardware, this block outputs zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

# Samsung GALAXY Android Gyroscope

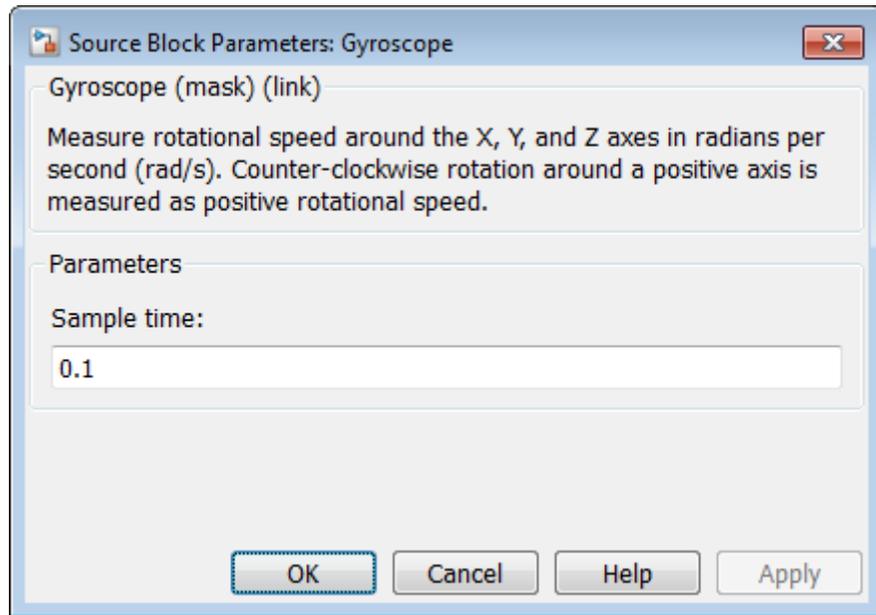

## Dialog Box

### Sample time

Specify how often the block reads the sensor.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Samsung GALAXY Android Accelerometer | Samsung GALAXY Android Location Sensor

## External Web Sites

- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android Humidity Sensor

**Purpose** Measure relative air humidity

**Library** Simulink Support Package for Samsung GALAXY Android Devices




## Description

Measure the relative air humidity as a percentage.

The data type of the block output data is `single`.

During simulations without hardware, this block outputs zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

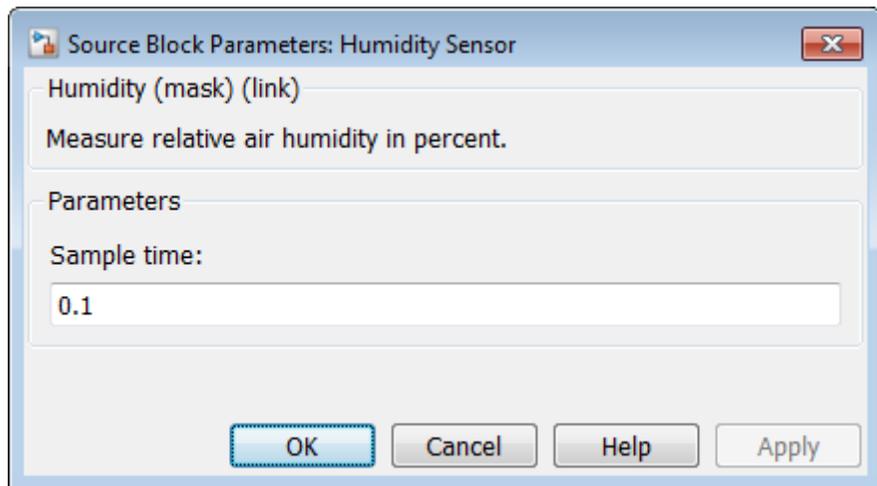

## Dialog Box

**Sample time**  
Specify how often the block reads the sensor.

# Samsung GALAXY Android Humidity Sensor

---

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Samsung GALAXY Android Humidity Sensor | Samsung GALAXY Android Pressure Sensor | Samsung GALAXY Android Ambient Temperature Sensor

## External Web Sites

- [http://en.wikipedia.org/wiki/Relative\\_air\\_humidity](http://en.wikipedia.org/wiki/Relative_air_humidity)
- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android Light Sensor

## Purpose

Measure ambient light

## Library

Simulink Support Package for Samsung GALAXY Android Devices

## Description




Measure ambient light in lux (lx).

The light sensor is located near the front camera and device display. The device can use this sensor to automatically adjust screen brightness.

The data type of the block output data is `single`.

During simulations without hardware, this block outputs zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

## Dialog Box

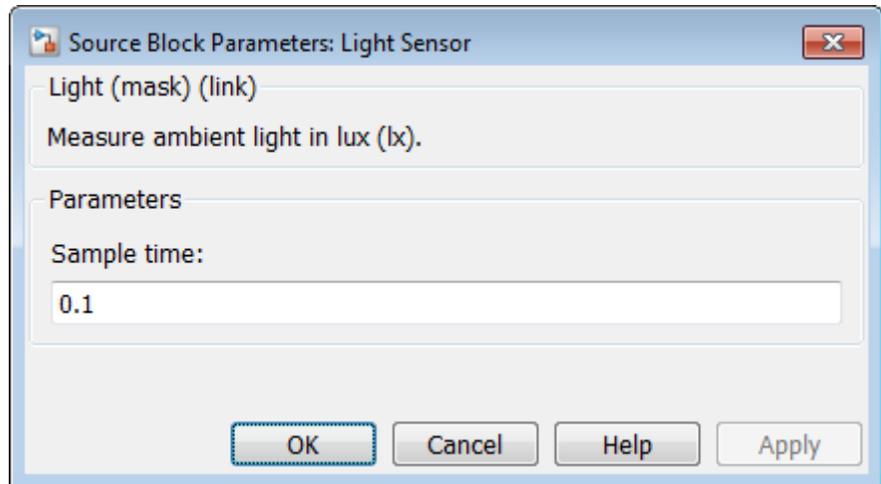

### Sample time

Specify how often the block reads the sensor.

# Samsung GALAXY Android Light Sensor

---

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Samsung GALAXY Android Ambient Temperature Sensor | Samsung GALAXY Android Humidity Sensor | Samsung GALAXY Android Pressure Sensor

## External Web Sites

- <http://en.wikipedia.org/wiki/Lux>
- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android Location Sensor

---

## Purpose

Measure GPS latitude and longitude

## Library

Simulink Support Package for Samsung GALAXY Android Devices

## Description



Measure the latitude and longitude using the device's GPS receiver. The measurements are referenced to the WGS84 datum.

The format of the measurements is decimal degrees, with six places to the right of the decimal point.

---

**Note** This number of decimal places provides greater accuracy than the GPS receiver is capable of providing. For example, at the equator, 0.000001 degrees is approximately 11.1 centimeters. GPS accuracy is typically measured in meters.


---

The data type of the block output data is `double`.

During simulations without hardware, this block outputs zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

# Samsung GALAXY Android Location Sensor

---

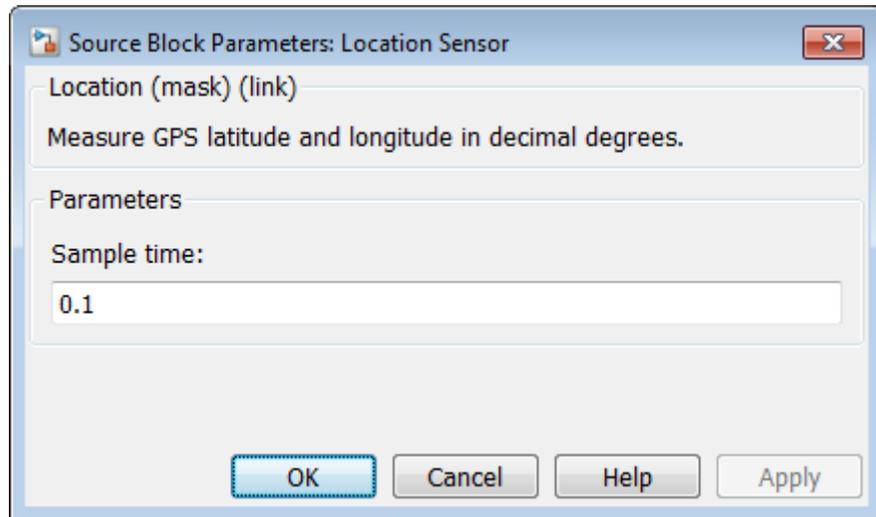

## Dialog Box

### Sample time

Specify how often the block reads the sensor.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Samsung GALAXY Android Gyroscope | Samsung GALAXY Android Accelerometer

## External Web Sites

- [http://en.wikipedia.org/wiki/Latitude\\_and\\_longitude](http://en.wikipedia.org/wiki/Latitude_and_longitude)
- [http://en.wikipedia.org/wiki/Decimal\\_degrees](http://en.wikipedia.org/wiki/Decimal_degrees)
- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android Pressure Sensor

---

**Purpose** Measure atmospheric pressure

**Library** Simulink Support Package for Samsung GALAXY Android Devices



## Description

Measure atmospheric pressure in hectopascals (hPa).

Both weather conditions and altitude affect atmospheric pressure.

---

**Note** One hectopascal is equivalent to one millibar. Standard atmospheric pressure is 1013.25 hPa .


---

The data type of the block output data is `single`.

During simulations without hardware, this block outputs zeros. See “Block Produces Zeros or Does Nothing in Simulation”.

# Samsung GALAXY Android Pressure Sensor

---

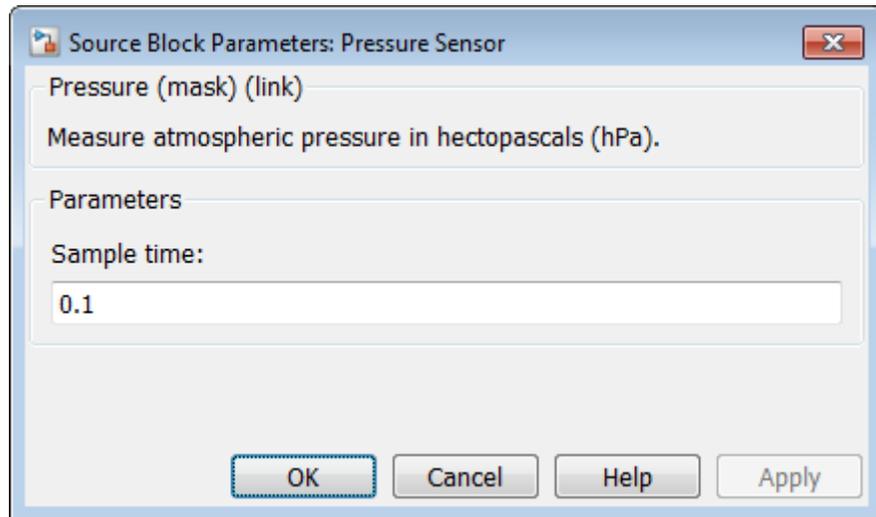

## Dialog Box

### Sample time

Specify how often the block reads the sensor.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

## See Also

Samsung GALAXY Android Ambient Temperature Sensor | Samsung GALAXY Android Humidity Sensor | Samsung GALAXY Android Light Sensor

## External Web Sites

- [http://en.wikipedia.org/wiki/Atmospheric\\_pressure](http://en.wikipedia.org/wiki/Atmospheric_pressure)
- [http://en.wikipedia.org/wiki/Pascal\\_\(unit\)](http://en.wikipedia.org/wiki/Pascal_(unit))
- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android UDP Receive


---

## Purpose

Receive UDP packets

## Library

Simulink Support Package for Samsung GALAXY Android Devices

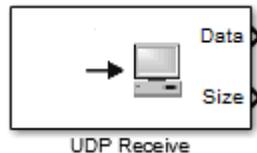

## Description

Receive UDP packets from the local network. The block output, **data**, emits UDP packet data as a one-dimensional vector of a specified data type. The block output, **size**, emits the size the data in the UDP buffer.

The data type of the block output, **Data**, depends on the **Data type** parameter. The data type of the block output, **Size**, is `uint16`.

While UDP Receive waits for new data to arrive, **size** emits a stream of zeros. When new data arrives, **size** changes to a non-zero value.


If you simulate a model that contains the UDP Receive block on your host computer (e.g., Simulation > Normal), and send UDP packets to that model from a board, the **data** output emits a disproportionately large number of zeros. This is because Simulink software simulates the model as a free-running application with a shorter period than the real-time application running on the board. In other words, the free-running simulation outputs zeros because it is waiting for the “slower” real-time application on the board to send data. If both applications were running on boards, this mismatch would not occur.

---

**Note** If you are having trouble using UDP to communicate with a computer, investigate whether antivirus or firewall software might be blocking UDP traffic. If so, try reconfiguring the software to allow UDP traffic for a specific IP port number.

---

# Samsung GALAXY Android UDP Receive

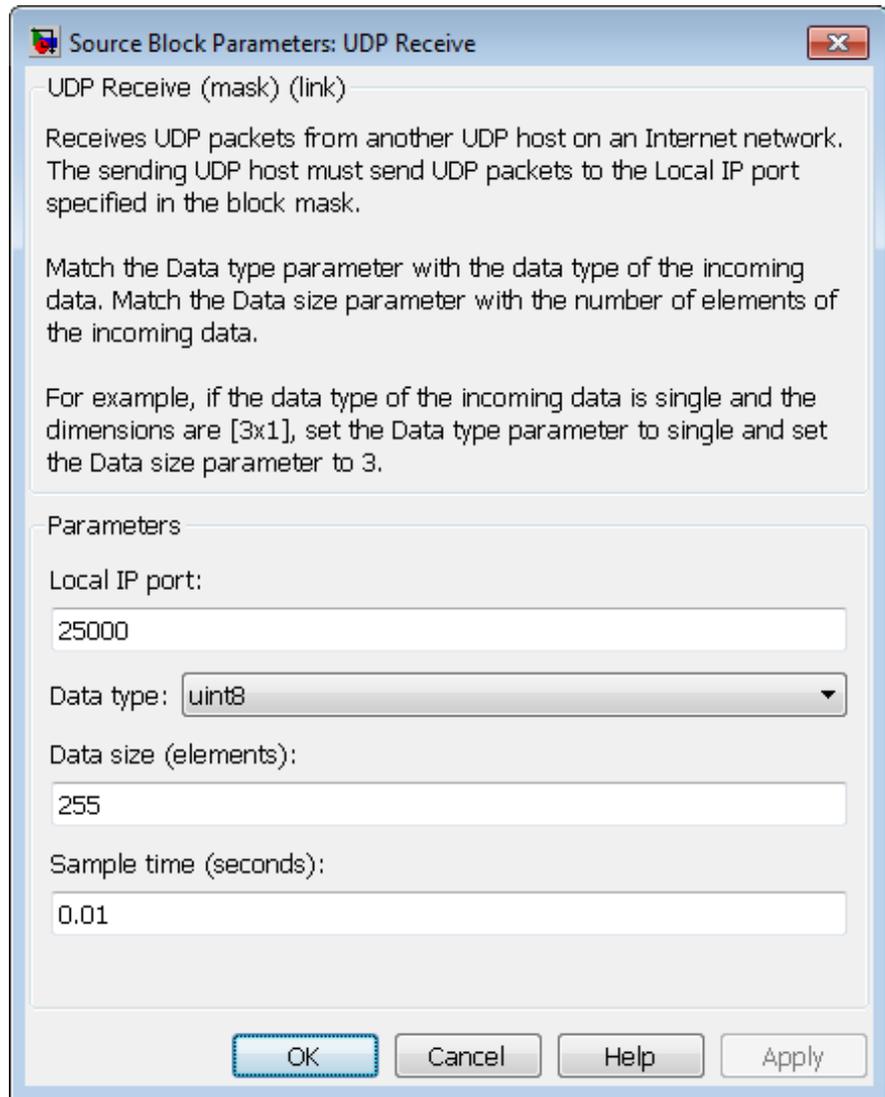

## Dialog

### Local IP port

The number of the IP port on the local device, which can range from 1 to 65535. This value defaults to 25000. The “local device” is the board running the model.

**Data type**

Set the data type of the vector elements in the Message output. Match the data type with the data input used to create the UDP packets. This option defaults to `uint8`.

**Data size (elements)**

Set the number of data elements in each UDP packet. Match the data size used to create the UDP packets. This value defaults to 255 elements.

**Sample time (seconds)**

Specify how often this block reads the port buffer. Enter a value greater than zero. This value defaults to a sample time of 0.01 seconds.

Smaller values require the processor to complete the same number of instructions in less time, which can cause task overruns.

**See Also** Samsung GALAXY Android UDP Send

**External Web Sites**


- <http://developer.android.com/guide/index.html>

# Samsung GALAXY Android UDP Send

---

**Purpose** Send UDP packets

**Library** Simulink Support Package for Samsung GALAXY Android Devices

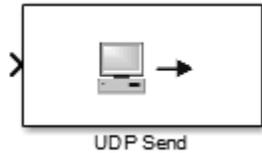

**Description**

Send a UDP packet to a network address identified by the remote IP address and remote IP port parameters.


The data type of the block input data is `double`.

---

**Note** If you are having trouble using UDP to communicate with a computer, investigate whether antivirus or firewall software might be blocking UDP traffic. If so, try reconfiguring the software to allow UDP traffic for a specific IP port number.

---

# Samsung GALAXY Android UDP Send

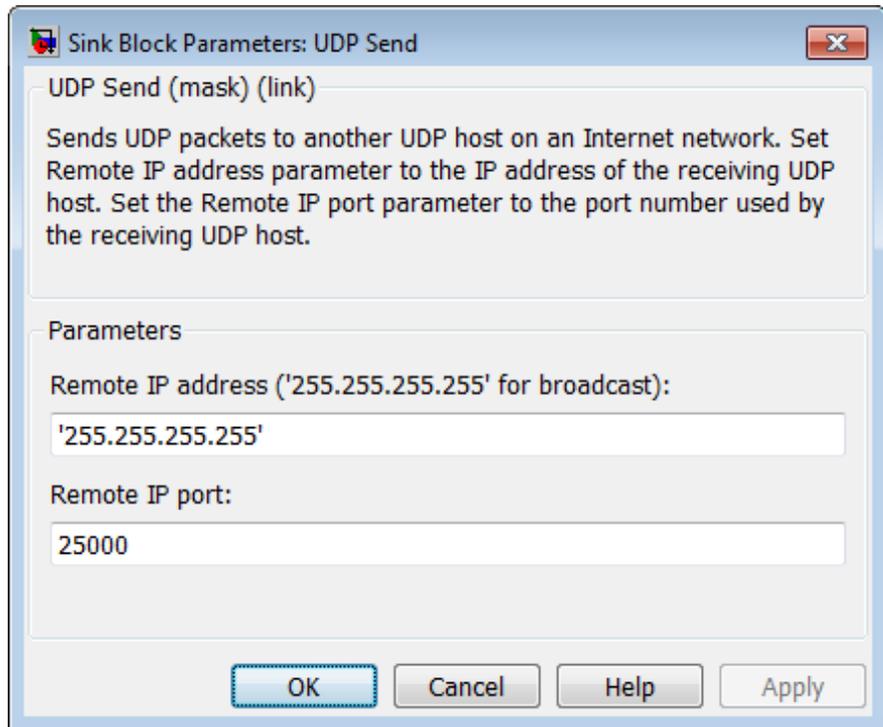

## Dialog

### Remote IP address ('255.255.255.255' for broadcast)

Enter the address or hostname of the IP node on the remote device.

To broadcast the UDP message to all devices, use the default parameter value, '255.255.255.255'. Use this approach sparingly to avoid creating unnecessary broadcast traffic. Often, IP routers are configured to drop broadcast UDP packets sent to '255.255.255.255'.

### Remote IP port

The number of the IP port on the remote device, which can range from 1 to 65535. This value defaults to 25000.

# Samsung GALAXY Android UDP Send

---

**See Also** Samsung GALAXY Android UDP Receive

**External  
Web Sites**

- <http://developer.android.com/guide/index.html>

# Functions — Alphabetical List

---

# add\_block

---

## Purpose

Add block to model

## Syntax

```
add_block('src', 'dest')
block = add_block('src', 'dest')
add_block('src', 'dest', 'param1', value1, ...)
add_block('src', 'dest', 'MakeNameUnique', 'on')
add_block('src_inport', 'dest_inport',
'CopyOption', 'duplicate')
add_block('built-in/Note', 'path/text', 'Position',
position_array)
```

## Description

`add_block('src', 'dest')` copies the block with the full path name that you specify with `'src'` to a new block with a full path name that you specify with `'dest'`. The block parameters of the new block are identical to those of the original. The new block appears in front of any blocks that it overlaps. If the `'src'` block is a Subsystem block, then `add_block` copies all the blocks in the subsystem.

`block = add_block('src', 'dest')` returns the handle of the newly created block.

`add_block('src', 'dest', 'param1', value1, ...)` creates a copy of the `'src'` block, with the named parameters having the specified values. Additional arguments must occur in parameter/value pairs.

`add_block('src', 'dest', 'MakeNameUnique', 'on')` creates a unique name for the new block, based on the name of the `'dest'` block. The `add_block` function creates a unique name only if the `'dest'` block name exists in the model into which you add the new block. By default, `MakeNameUnique` is off.

`add_block('src_inport', 'dest_inport', 'CopyOption', 'duplicate')` applies only to Inport blocks. It creates a copy with the same port number as the `'src_inport'` block.

`add_block('built-in/Note', 'path/text', 'Position', position_array)` creates a an annotation in a Simulink model or a note in a Stateflow chart. The first part of the `path/text` argument is the path of the model or chart where you want the annotation or

note. Append to the path a backslash (/), followed by the text for the annotation or note. The `position_array` argument is a 1x4 array, specified as `[left, top, right, bottom]`, that gives the position of the left top corner of the annotation or note in pixels, relative to the upper left corner of the model or chart. If the annotation is autosized (the default), you can specify a 1x2 array `[left top]`. Positive x and y values are to the right of and down from the origin, respectively, and negative x and y values are to the left of up from the origin, respectively.

Before you add a block from a source model, open the source model. For example, use `load_system` (model opens invisibly) or `open_system` (model opens visibly). Also open the destination model if it is different from the source model.

Calling `add_block` triggers the `CopyFcn` and `PreCopyFcn` block callback functions.

You can use `'built-in/blocktype'` as a source block path name for Simulink built-in blocks, where *blocktype* is the built-in block type (that is, the value of its `BlockType` parameter (see “Common Block Properties” on page 7-100). However, using `'built-in/blocktype'` causes some default parameter values of some blocks to be different from the defaults that you get if you added those blocks interactively using Simulink.

## Tips

Do not use `delete_block` to delete an annotation. For details, see “Delete an Annotation”.

## Examples

Copy the Scope block from the Sinks subsystem of the `simulink` system to a block named Scope in the Controller subsystem of the `f14` system.

```
simulink;  
open_system('f14');  
add_block('simulink/Sinks/Scope', 'f14/Controller/Scope')
```

---

Create a subsystem named `Controller2` in the `f14` system. You do not have to open the Library Browser.

# add\_block

---

```
open_system('f14');
add_block('built-in/SubSystem', 'f14/Controller2')
```

---

Copy the built-in Gain block to a block named Speed in the f14 system and assign the Gain parameter a value of 4. You do not have to open the Library Browser.

```
open_system('f14');
add_block('built-in/Gain', 'F14/Speed', 'Gain', '4')
```

---

Copy the block named Mu in vdp and create a copy. Because the model already contains a Mu block, the command names the new block Mu1. Open the vdp model, which is both the source and destination model, and get the handle of the added block.

```
open_system('vdp');
block = add_block('vdp/Mu', 'vdp/Mu', 'MakeNameUnique', 'on')
```

---

Create an annotation that says “This simulates a nonlinear second order system”. Position the annotation above the copyright line.

```
open_system('vdp');
block = add_block('built-in/Note', ...
'vdp/This simulates a nonlinear second order system', ...
'Position', [200 250])
```

## See Also

[delete\\_block](#) | [replace\\_block](#) | [set\\_param](#) | [Simulink.Annotation](#)

## Tutorials

- “Create Annotations Programmatically”

## How To

- “Add Blocks”
- “Annotation Callback Functions”

**Purpose** Register listener for block method execution event

**Syntax** `h = add_exec_event_listener(blk, event, listener);`

**Description** `h = add_exec_event_listener(blk, event, listener)` registers a listener for a block method execution event where the listener is a MATLAB program that performs some task, such as logging runtime data for a block, when the event occurs (see “Listen for Method Execution Events”). Simulink software invokes the registered listener whenever the specified event occurs during simulation of the model.

---

**Note** Simulink software can register a listener only while a simulation is running. Invoking this function when no simulation is running results in an error message. To ensure that a listener catches all relevant events triggered by a model’s simulation, you should register the listener in the model’s `StartFcn` callback function (see “Callbacks for Customized Model Behavior”).

---

## Input Arguments

`blk`

Specifies the block whose method execution event the listener is intended to handle. May be one of the following:

- Full pathname of a block
- A block handle
- A block runtime object (see “Access Block Data During Simulation”).

`event`

Specifies the type of event for which the listener listens. It may be any of the following:

## add\_exec\_event\_listener

---

Event	Occurs...
'PreDerivatives'	Before a block's Derivatives method executes
'PostDerivatives'	After a block's Derivatives method executes
'PreOutputs'	Before a block's Outputs method executes.
'PostOutputs'	After a block's Outputs method executes
'PreUpdate'	Before a block's Update method executes
'PostUpdate'	After a block's Update method executes

### listener

Specifies the listener to be registered. It may be either a string specifying a MATLAB expression, e.g., `'disp(''here'')` or a handle to a MATLAB function that accepts two arguments. The first argument is the block runtime object of the block that triggered the event. The second argument is an instance of `EventData` class that specifies the runtime object and the name of the event that just occurred.

### Output Arguments

`add_exec_event_listener` returns a handle to the listener that it registered. To stop listening for an event, use the MATLAB `clear` command to clear the listener handle from the workspace in which the listener was registered.

**Purpose**

Add line to Simulink system

**Syntax**

```
h = add_line('sys','oport','iport')
h = add_line('sys','oport','iport', 'autorouting','on')
h = add_line('sys', points)
```

**Description**

The `add_line` command adds a line to the specified system and returns a handle to the new line. You can define the line in two ways:

- By naming the block ports that are to be connected by the line
- By specifying the location of the points that define the line segments

`add_line('sys', 'oport', 'iport')` adds a straight line to a system from the specified block output port `'oport'` to the specified block input port `'iport'`. `'oport'` and `'iport'` are strings consisting of a block name and a port identifier in the form `'block/port'`. Most block ports are identified by numbering the ports from top to bottom or from left to right, such as `'Gain/1'` or `'Sum/2'`. Enable, Trigger, State, and Action ports are identified by name, such as `'subsystem_name/Enable'`, `'subsystem_name/Trigger'`, `'Integrator/State'`, or `if_action_subsystem_name/Ifaction'`.

`add_line('sys','oport','iport', 'autorouting','on')` works like `add_line('sys','oport','iport')` except that it routes the line around intervening blocks. The default value for autorouting is `'off'`.

`add_line(system, points)` adds a segmented line to a system. Each row of the `points` array specifies the  $x$  and  $y$  coordinates of a point on a line segment. The origin is the top-left corner of the window. The signal flows from the point defined in the first row to the point defined in the last row. If the start of the new line is close to the output of an existing block or line, a connection is made. Likewise, if the end of the line is close to an existing input, a connection is made.

# add\_line

---

## Examples

This command adds a line to the `mymodel` system connecting the output of the Sine Wave block to the first input of the Mux block.

```
add_line('mymodel','Sine Wave/1','Mux/1')
```

This command adds a line to the `mymodel` system extending from (20,55) to (40,10) to (60,60).

```
add_line('mymodel',[20 55; 40 10; 60 60])
```

## See Also

`delete_line`

**Purpose** Add parameter to Simulink system

**Syntax** `add_param('sys','parameter1',value1,'parameter2',value2,...)`

**Description** The `add_param` command adds the specified parameters to the specified system and initializes the parameters to the specified values. Case is ignored for parameter names. Value strings are case sensitive. The value of the parameter must be a string. Once the parameter is added to a system, `set_param` and `get_param` can be used on the new parameters as if they were standard Simulink parameters. Simulink software saves these new parameters with the model file.

---

**Note** If you attempt to add a parameter that has the same name as an existing parameter of the system, Simulink software displays an error.

---

**Examples** This command

```
add_param('vdp','DemoName','VanDerPolEquation','EquationOrder','2')
```

adds the parameters `DemoName` and `EquationOrder` with string values `'VanDerPolEquation'` and `'2'` to the `vdp` system. Afterward, you can use the following command to retrieve the value of the `DemoName` parameter.

```
get_param('vdp','DemoName')
```

**See Also** `delete_param` | `get_param` | `set_param`

# addFile

---

**Purpose** Add file to Simulink Project

**Syntax** `addFile(proj, file)`

**Description** `addFile(proj, file)` adds a file to the project `proj`.

**Input Arguments**

**proj - Project**

project object

Project, specified as a project object. Use `simulinkproject` to create a project object to manipulate a Simulink Project at the command line.

**file - Path of file**

string

Path of the file to add relative to the project root folder, including the file extension, specified as a string. The file must be within the root folder.

**Example:** `'models/myModelName.slx'`

**Examples**

**Add Files to a Project**

Open the airframe project and create a project object.

```
sldemo_slproject_airframe  
proj = simulinkproject;
```

Remove a file.

```
removeFile(proj, 'models/AnalogControl.mdl')
```

Add the file back to the project.

```
addFile(proj, 'models/AnalogControl.mdl');
```

Create and save a new model.

```
new_system('mymodel');  
save_system('mymodel');
```

Add the new file to the project.

```
addFile(proj, 'mymodel.slx');
```

## See Also

## Functions

`simulinkprojectremoveFile`

# addterms

---

<b>Purpose</b>	Add terminators to unconnected ports in model
<b>Syntax</b>	<code>addterms('sys')</code>
<b>Description</b>	<code>addterms('sys')</code> adds Terminator and Ground blocks to the unconnected ports in the Simulink block diagram <code>sys</code> .
<b>See Also</b>	<code>slupdate</code>

<b>Purpose</b>	Associate configuration set or configuration reference with model
<b>Syntax</b>	<pre>attachConfigSet(model, configObj) attachConfigSet(model, configObj, allowRename)</pre>
<b>Arguments</b>	<p><b>model</b> The name of an open model, or <code>gcs</code> to specify the current model</p> <p><b>configObj</b> A configuration set (<code>Simulink.ConfigSet</code>) or configuration reference (<code>Simulink.ConfigSetRef</code>)</p> <p><b>allowRename</b> Boolean that determines how Simulink software handles a name conflict</p>
<b>Description</b>	<p><code>attachConfigSet</code> associates the configuration set or configuration reference (configuration object) specified by <code>configObj</code> with <code>model</code>.</p> <p>You cannot attach a configuration object to a model if the configuration object is already attached to another model, or has the same name as another configuration object attached to the same model. The optional Boolean argument <code>allowRename</code> determines how Simulink software handles a name conflict between configuration objects. If <code>allowRename</code> is <code>false</code> and the configuration object specified by <code>configObj</code> has the same name as a configuration object already attached to <code>model</code>, Simulink software generates an error. If <code>allowRename</code> is <code>true</code> and a name conflict occurs, Simulink software provides a unique name for <code>configObj</code> before associating <code>configObj</code> with <code>model</code>.</p>
<b>Examples</b>	<p>The following example creates a copy of the current model's active configuration object and attaches it to the model, changing its name if necessary to be unique. The code is the same whether the object is a configuration set or configuration reference.</p> <pre>myConfigObj = getActiveConfigSet(gcs); copiedConfig = myConfigObj.copy; copiedConfig.Name = 'DevConfig';</pre>

# attachConfigSet

---

```
attachConfigSet(gcs, copiedConfig, true);
```

## See Also

[attachConfigSetCopy](#) | [closeDialog](#) | [detachConfigSet](#) | [getActiveConfigSet](#) | [getConfigSet](#) | [getConfigSets](#) | [openDialog](#) | [setActiveConfigSet](#)

## How To

- “Manage a Configuration Set”
- “Manage a Configuration Reference”

**Purpose** Copy configuration set or configuration reference and associate it with model

**Syntax**

```
myConfigObj = attachConfigSetCopy(model, configObj)
myConfigObj = attachConfigSetCopy(model,
configObj, allowRename)
```

**Arguments**

**model**  
The name of an open model, or gcs to specify the current model

**configObj**  
A configuration set (`Simulink.ConfigSet`) or configuration reference (`Simulink.ConfigSetRef`)

**allowRename**  
Boolean that specifies how Simulink software handles a name conflict

**Description** `attachConfigSetCopy` copies the configuration set or configuration reference (configuration object) specified by `configObj` and associates the copy with `model`. Simulink software returns the copied configuration object as `newConfigObj`.

You cannot attach a configuration object to a model if the configuration object has the same name as another configuration object attached to the same model. The optional Boolean argument `allowRename` determines how Simulink software handles a name conflict between configuration objects. If `allowRename` is `false` and the configuration object specified by `configObj` has the same name as a configuration object already attached to `model`, Simulink software generates an error. If `allowRename` is `true` and a name conflict occurs, Simulink software provides a unique name for the copy of `configObj` before associating it with `model`.

**Examples** The following example creates a copy of `ModelA`'s active configuration object and attaches it to `ModelB`, changing the name if necessary to be unique. The code is the same whether the object is a configuration set or configuration reference.

# attachConfigSetCopy

---

```
myConfigObj = getActiveConfigSet('ModelA');  
newConfigObj = attachConfigSetCopy('ModelB', myConfigObj, true);
```

## See Also

[attachConfigSet](#) | [closeDialog](#) | [detachConfigSet](#) |  
[getActiveConfigSet](#) | [getConfigSet](#) | [getConfigSets](#) | [openDialog](#)  
| [setActiveConfigSet](#)

## How To

- “Manage a Configuration Set”
- “Manage a Configuration Reference”

<b>Purpose</b>	Attach label to Simulink Project file
<b>Syntax</b>	<pre>addLabel(file,categoryName,labelName) addLabel(file,categoryName,labelName,labelData)</pre>
<b>Description</b>	<p><code>addLabel(file,categoryName,labelName)</code> attaches the specified label <code>labelName</code> in the category <code>categoryName</code> to the file.</p> <p><code>addLabel(file,categoryName,labelName,labelData)</code> attaches the label with data <code>labelData</code>.</p>
<b>Input Arguments</b>	<p><b>file - File to attach label to</b> file object</p> <p>File to attach the label to, specified as a file object. You can get the file object by examining the project's <code>Files</code> property (<code>proj.Files</code>), or use <code>findFile</code> to find a file by name. The file must be within the root folder.</p> <p><b>categoryName - Name of category for label</b> string</p> <p>Name of the category for the label, specified as a string.</p> <p><b>labelName - Name of label</b> string   label definition object</p> <p>Name of the label to attach, specified as a string or a label definition object returned by the <code>file.Label</code> property or <code>findLabel</code>. You can specify a new label name that does not already exist in the project.</p> <p><b>labelData - Data to attach to label</b> string   numeric</p> <p>Data to attach to the label, specified as a string or numeric. Data type depends on the label definition. Get a label to examine its <code>DataType</code> property using <code>file.Label</code> or <code>findLabel</code>.</p>

# addLabel

---

## Examples

### Attach a Label to a Project File

Open the airframe project and create a project object.

```
sldemo_slproject_airframe;  
proj = simulinkproject;
```

Get a particular file by name.

```
myfile = findFile(proj,'models/AnalogControl.mdl')  
  
myfile =
```

```
ProjectFile with properties:
```

```
Path: [1x86 char]  
Labels: [1x1 slproject.Label]
```

Get the Labels property of the file.

```
myfile.Labels
```

```
ans =
```

```
Label with properties:
```

```
File: 'C:\work\airframe\models\AnalogControl.mdl'  
Data: []  
DataType: 'none'  
Name: 'Design'  
CategoryName: 'Classification'
```

Attach the label 'To Review' to the file.

```
addLabel(myfile,'Review','To Review')
```

```
ans =
```

```
Label with properties:
```

```
File: [1x82 char]
Data: []
DataType: 'char'
Name: 'To Review'
CategoryName: 'Review'
```

Index into the Labels property to get the second label attached to this file.

```
reviewlabel = myfile.Labels(2)
```

```
reviewlabel =
```

```
Label with properties:
```

```
File: 'C:\Temp\project1\airframe\models\AnalogControl.mdl'
Data: []
DataType: 'char'
Name: 'To Review'
CategoryName: 'Review'
```

Detach the new label from the file.

```
removeLabel(myfile,reviewlabel)
```

## **Attach a Label to a Subset of Files**

Attach the label 'To Review' in the 'Review' category to all files in the project with the .m file extension.

Open the airframe project and create a project object.

```
sldemo_slproject_airframe;
proj = simulinkproject;
```

# addLabel

---

Get the list of files.

```
files = proj.Files;
```

Loop through each file. If the file has the extension .m, attach the label To Review.

```
for fileIndex = 1:numel(files)
    file = files(fileIndex);
    [~, ~, fileExtension] = fileparts(file.Path);
    if strcmp(fileExtension, '.m')
        addLabel(file, 'Review', 'To Review');
    end
end
```

In the Simulink Project Tool, the label To Review appears in the **Review** column next to the files in the project utilities folder.

## Attach a Label and Label Data to a File

Open the airframe project and create a project object.

```
sldemo_slproject_airframe;
proj = simulinkproject;
```

Get a particular file by name.

```
myfile = findFile(proj, 'models/AnalogControl.mdl')

myfile =
```

```
ProjectFile with properties:
```

```
Path: [1x86 char]
Labels: [1x1 slproject.Label]
```

Attach the label 'To Review' and a string of label data to the file.

```
addLabel(myfile,'Review','To Review','Whole team design review')
```

Index into the Labels property to get the second label attached to this particular file, and see the label data.

```
myfile.Labels(2)
```

```
ans =
```

```
Label with properties:
```

```
File: 'C:\Temp\project1\airframe\models\AnalogControl.mdl'  
Data: 'Whole team design review'  
DataType: 'char'  
Name: 'To Review'  
CategoryName: 'Review'
```

In the Simulink Project Tool, the label **To Review** and the label data appear in the **Review** column next to the file `AnalogControl.mdl`.

Alternatively, you can set or change label data using the data property.

```
mylabel = myfile.Labels(2);  
mylabel.Data = 'Final review';
```

## See Also

### Functions

`simulinkprojectfindFile` `findLabel` `createLabel` `removeLabel`

# bdclose

---

<b>Purpose</b>	Close any or all Simulink system windows unconditionally
<b>Syntax</b>	<code>bdclose</code> <code>bdclose('sys')</code> <code>bdclose('all')</code>
<b>Description</b>	<code>bdclose</code> with no arguments closes the current system window unconditionally and without confirmation. Any changes made to the system since it was last saved are lost. <code>bdclose('sys')</code> closes the specified system window. <code>bdclose('all')</code> closes all system windows.
<b>Examples</b>	This command closes the vdp system. <code>bdclose('vdp')</code>
<b>See Also</b>	<code>close_system</code>   <code>new_system</code>   <code>open_system</code>   <code>save_system</code>

**Purpose** Whether block diagram is in memory

**Syntax** `isLoaded = bdIsLoaded(bdnames)`

**Description** `isLoaded = bdIsLoaded(bdnames)` returns whether or not a block diagram is in memory. `bdnames` can be a string or a cell array of strings. All strings must be valid block diagram names (which are the same as valid MATLAB variable names). It is an error to supply a path to a block or subsystem.

`isLoaded` is a logical array with one entry for each block diagram name.

**Examples** `bdIsLoaded('sf_car')`

returns a logical scalar.

`bdIsLoaded({'sf_car','vdp'})`

returns a 1-by-2 logical array.

**See Also** `find_system`

# bdroot

---

**Purpose** Return name of top-level Simulink system

**Syntax** `bdroot`  
`bdroot(obj)`  
`bdroot(handle)`  
`bdroot(sys)`

**Description** `bdroot` with no arguments returns the name of the current top-level system.

`bdroot(obj)`, where `obj` is a string specifying a system or block path name, returns the name of the top-level system containing the specified object name. The `bdroot` of an empty string generates an error. Prior to issuing `bdroot`, make sure that the top-level system is loaded.

`bdroot(handle)`, where `handle` is the numeric handle for a system or block, returns the numeric handle of the top-level system containing the specified object. Prior to issuing `bdroot`, make sure that the top-level system for each element in the cell array is loaded. If you specify a vector of handles, Simulink returns a list of handles of the top-level systems.

`bdroot(sys)`, where `sys` is a cell array of system names or a vector of system handles. Prior to issuing `bdroot`, make sure that the top-level system for each element in the cell array is loaded. If you specify a vector of handles, Simulink returns a list of handles of the top-level systems.

**Examples** This command returns the name of the top-level system that contains the current block.

```
bdroot(gcb)
```

This command returns the name of the top-level system that contains the current system.

```
bdroot(gcs)
```

This command returns the name of the top-level system that contains the current block.

`bdroot (gcbh)`

If `bdroot` is a cell array of system names or handles, it returns a cell array containing the corresponding top-level system names or handles.

If `bdroot` is a numeric array of system handles, it returns a numeric array containing the corresponding top-level system handles.

**See Also**

`find_system` | `load_system` | `gcb` | `gcs` | `gcbh`

# dlinmod

---

**Purpose** Extract discrete-time linear state-space model around operating point

**Syntax**

```
argout = dlinmod('sys', Ts, x, u)
argout = dlinmod('sys', Ts, x, u, para, 'v5')
argout = dlinmod('sys', Ts, x, u, para, xpert, upert, 'v5')
```

**Arguments**

<i>sys</i>	Name of the Simulink system from which the linear model is extracted.
------------	---

<i>x, u</i>	State ( <i>x</i> ) and the input ( <i>u</i> ) vectors. If specified, they set the operating point at which the linear model is extracted. When a model has model references using the Model block, you must use the Simulink structure format to specify <i>x</i> . To extract the <i>x</i> structure from the model, use the following command:
-------------	--

```
x = Simulink.BlockDiagram.getInitialState('sys');
```

You can then change the operating point values within this structure by editing `x.signals.values`.

If the state contains different data types (for example, 'double' and 'uint8'), then you cannot use a vector to specify this state. You must use a structure instead. In addition, you can only specify the state as a vector if the state data type is 'double'.

<i>Ts</i>	Sample time of the discrete-time linearized model
-----------	---

'v5'	An optional argument that invokes the perturbation algorithm created prior to MATLAB 5.3. Invoking this optional argument is equivalent to calling <code>linmodv5</code> .
------	--

*para*

A three-element vector of optional arguments:

- *para(1)* — Perturbation value of delta, the value used to perform the perturbation of the states and the inputs of the model. This is valid for linearizations using the 'v5' flag. The default value is 1e-05.
- *para(2)* — Linearization time. For blocks that are functions of time, you can set this parameter with a nonnegative value that gives the time (t) at which Simulink evaluates the blocks when linearizing a model. The default value is 0.
- *para(3)* — Set *para(3)=1* to remove extra states associated with blocks that have no path from input to output. The default value is 0.

*xpert, upert*

The perturbation values used to perform the perturbation of all the states and inputs of the model. The default values are

```
xpert = para(1) + 1e-3*para(1)*abs(x)
upert = para(1) + 1e-3*para(1)*abs(u)
```

When a model has model references using the Model block, you must use the Simulink structure format to specify *xpert*. To extract the *xpert* structure, use the following command:

```
xpert = Simulink.BlockDiagram.getInitialState('sys');
```

You can then change the perturbation values within this structure by editing *xpert.signals.values*.

The perturbation input arguments are only available when invoking the perturbation algorithm created

*argout* prior to MATLAB 5.3, either by calling `linmodv5` or specifying the 'v5' input argument to `linmod`.

`linmod`, `dlinmod`, and `linmod2` return state-space representations if you specify the output (left-hand) side of the equation as follows:

- `[A,B,C,D] = linmod('sys', x, u)` obtains the linearized model of `sys` around an operating point with the specified state variables `x` and the input `u`. If you omit `x` and `u`, the default values are zero.

`linmod` and `dlinmod` both also return a transfer function and MATLAB data structure representations of the linearized system, depending on how you specify the output (left-hand) side of the equation. Using `linmod` as an example:

- `[num, den] = linmod('sys', x, u)` returns the linearized model in transfer function form.
- `sys_struct = linmod('sys', x, u)` returns a structure that contains the linearized model, including state names, input and output names, and information about the operating point.

## Description

`dlinmod` compute a linear state-space model for a discrete-time system by linearizing each block in a model individually.

`linmod` obtains linear models from systems of ordinary differential equations described as Simulink models. Inputs and outputs are denoted in Simulink block diagrams using Inport and Outport blocks.

The default algorithm uses preprogrammed analytic block Jacobians for most blocks which should result in more accurate linearization than numerical perturbation of block inputs and states. A list of

blocks that have preprogrammed analytic Jacobians is available in the Simulink Control Design documentation along with a discussion of the block-by-block analytic algorithm for linearization.

The default algorithm also allows for special treatment of problematic blocks such as the Transport Delay and the Quantizer. See the mask dialog of these blocks for more information and options.

### Discrete-Time System Linearization

The function `dlinmod` can linearize discrete, multirate, and hybrid continuous and discrete systems at any given sampling time. Use the same calling syntax for `dlinmod` as for `linmod`, but insert the sample time at which to perform the linearization as the second argument. For example,

```
[Ad,Bd,Cd,Dd] = dlinmod('sys', Ts, x, u);
```

produces a discrete state-space model at the sampling time  $T_s$  and the operating point given by the state vector  $x$  and input vector  $u$ . To obtain a continuous model approximation of a discrete system, set  $T_s$  to 0.

For systems composed of linear, multirate, discrete, and continuous blocks, `dlinmod` produces linear models having identical frequency and time responses (for constant inputs) at the converted sampling time  $T_s$ , provided that

- $T_s$  is an integer multiple of all the sampling times in the system.
- The system is stable.

For systems that do not meet the first condition, in general the linearization is a time-varying system, which cannot be represented with the  $[A,B,C,D]$  state-space model that `dlinmod` returns.

Computing the eigenvalues of the linearized matrix  $A_d$  provides an indication of the stability of the system. The system is stable if  $T_s > 0$  and the eigenvalues are within the unit circle, as determined by this statement:

```
all(abs(eig(Ad))) < 1
```

Likewise, the system is stable if  $T_s = 0$  and the eigenvalues are in the left half plane, as determined by this statement:

```
all(real(eig(Ad))) < 0
```

When the system is unstable and the sample time is not an integer multiple of the other sampling times, `dlinmod` produces `Ad` and `Bd` matrices, which can be complex. The eigenvalues of the `Ad` matrix in this case still, however, provide a good indication of stability.

You can use `dlinmod` to convert the sample times of a system to other values or to convert a linear discrete system to a continuous system or vice versa.

You can find the frequency response of a continuous or discrete system by using the `bode` command.

## Notes

By default, the system time is set to zero. For systems that are dependent on time, you can set the variable `para` to a two-element vector, where the second element is used to set the value of `t` at which to obtain the linear model.

The ordering of the states from the nonlinear model to the linear model is maintained. For Simulink systems, a string variable that contains the block name associated with each state can be obtained using

```
[sizes,x0,xstring] = sys
```

where `xstring` is a vector of strings whose *i*th row is the block name associated with the *i*th state. Inputs and outputs are numbered sequentially on the diagram.

For single-input multi-output systems, you can convert to transfer function form using the routine `ss2tf` or to zero-pole form using `ss2zp`. You can also convert the linearized models to LTI objects using `ss`. This function produces an LTI object in state-space form that can be further converted to transfer function or zero-pole-gain form using `tf` or `zpk`.

The default algorithms in `linmod` and `dlinmod` handle Transport Delay blocks by replacing the linearization of the blocks with a Pade approximation. For the 'v5' algorithm, linearization of a model that contains Derivative or Transport Delay blocks can be troublesome. For more information, see “Linearizing Models”.

**See Also**

`linmod` | `linmod2` | `linmodv5`

# close\_system

---

**Purpose** Close Simulink system window or block dialog box

**Syntax**

```
close_system
close_system('sys')
close_system('sys', saveflag)
close_system('sys', 'newname')
close_system('sys', 'newname', 'ErrorIfShadowed', true)
```

**Description** `close_system` with no arguments closes the current system or subsystem window. If the current system is the top-level system and it has been modified, `close_system` returns an error. The current system is defined in the description of the `gcs` command.

`close_system('sys')` closes the specified system, subsystem, or block window.

`close_system('sys')` unloads a model after specifying

- 
- `load_system('sys')`.

'`sys`' can be a string (which can be a system, a subsystem, or a full block pathname), a cell array of strings, a numeric handle, or an array of numeric handles. This command displays an error if '`sys`' is a MATLAB keyword, '`simulink`', or more than 63 characters long.

`close_system('sys', saveflag)`, if `saveflag` is 1, saves the specified top-level system to a file with its current name, then closes the specified top-level system window and removes it from memory. If `saveflag` is 0, the system is closed without saving. A single `saveflag` can be supplied, in which case it is applied to all block diagrams. Alternatively, separate `saveflags` can be supplied for each block diagram, as a numeric array.

`close_system('sys', 'newname')` saves the specified top-level system to a file with the specified new name, then closes the system.

Additional arguments can be supplied when saving a block diagram. These are exactly the same as for `save_system`:

- `ErrorIfShadowed`: true or false (default: false)

- BreakAllLinks: true or false (default: false)
- SaveAsVersion: MATLAB version name (default: current)
- OverwriteIfChangedOnDisk: true or false (default: false)
- SaveModelWorkspace: true or false (default: false)

If you try to specify additional options when you are doing something other than saving a block diagram, they are ignored. You see a warning if you try to save when closing something other than a block diagram (e.g., a subsystem or a Block Properties dialog).

## Examples

This command closes the current system.

```
close_system
```

This command closes the vdp system, unless it has been modified, in which case it returns an error.

```
close_system('vdp')
```

This command saves the engine system with its current name, then closes it.

```
close_system('engine', 1)
```

This command saves the mymdl12 system under the new name testsys, then closes it.

```
close_system('mymdl12', 'testsys')
```

This command tries to save the vdp system to a file with the name 'max', but returns an error because 'max' is the name of an existing MATLAB function.

```
close_system('vdp','max','ErrorIfShadowed', true)
```

## close\_system

---

All three of the following commands save and close `mymodel` (saved with the same name), and replace links to library blocks with copies of the library blocks in the saved file:

```
close_system('mymodel',1,'BreakAllLinks',true)
close_system('mymodel','mymodel','BreakAllLinks',true)
close_system('mymodel',[],'BreakAllLinks',true)
```

This command closes the dialog box of the Unit Delay block in the Combustion subsystem of the engine system.

```
close_system('engine/Combustion/Unit Delay')
```

---

**Note** The `close_system` command cannot be used in a block or menu callback to close the root-level model. Attempting to close the root-level model in a block or menu callback results in an error and discontinues the callback's execution.

---

### See Also

`bdclose` | `gcs` | `new_system` | `open_system` | `save_system` | `load_system`

<b>Purpose</b>	Close configuration parameters dialog
<b>Syntax</b>	<code>closeDialog(<i>configObj</i>)</code>
<b>Arguments</b>	<i>configObj</i> A configuration set ( <code>Simulink.ConfigSet</code> ) or configuration reference ( <code>Simulink.ConfigSetRef</code> )
<b>Description</b>	<code>closeDialog</code> closes an open configuration parameters dialog box. If <i>configObj</i> is a configuration set, the function closes the dialog box that displays the configuration set. If <i>configObj</i> is a configuration reference, the function closes the dialog box that displays the referenced configuration set, or generates an error if the reference does not specify a valid configuration set. If the dialog box is already closed, the function does nothing.
<b>Examples</b>	<p>The following example closes a configuration parameters dialog box that shows the current parameters for the current model. The parameter values derive from the active configuration set or configuration reference (configuration object). The code is the same in either case; the only difference is which type of configuration object is currently active.</p> <pre>myConfigObj = getActiveConfigSet(gcs); closeDialog(myConfigObj);</pre>
<b>See Also</b>	<code>attachConfigSet</code>   <code>attachConfigSetCopy</code>   <code>detachConfigSet</code>   <code>getActiveConfigSet</code>   <code>getConfigSet</code>   <code>getConfigSets</code>   <code>openDialog</code>   <code>setActiveConfigSet</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Manage a Configuration Set”</li><li>• “Manage a Configuration Reference”</li></ul>

# close

---

**Purpose** Close Simulink Project

**Syntax** `close(proj)`

**Description** `close(proj)` closes the project `proj`.

**Input Arguments** **proj - Project**  
`project object`  
Project, specified as a project object. Use `simulinkproject` to create a project object to manipulate a Simulink Project at the command line.

**Examples** **Open and Close a Simulink Project**

Open a specified project and get a project object to manipulate the project at the command line. For example,

```
proj = simulinkproject('C:/projects/project1/myproject.prj')
```

Close the project.

```
close(proj)
```

**See Also**

**Functions** `simulinkproject`

**Purpose** Control code generation from protected MATLAB files

**Syntax** `coder.allowpcode('plain')`

**Description** `coder.allowpcode('plain')` allows you to generate protected MATLAB code (P-code) that you can then compile into optimized MEX functions or embeddable C/C++ code. This function does not obfuscate the generated MEX functions or embeddable C/C++ code.

With this capability, you can distribute algorithms as protected P-files that provide code generation optimizations, providing intellectual property protection for your source MATLAB code.

Call this function in the top-level function before control-flow statements, such as `if`, `while`, `switch`, and function calls.

MATLAB functions can call P-code. When the `.m` and `.p` versions of a file exist in the same folder, the P-file takes precedence.

`coder.allowpcode` is ignored outside of code generation.

**Examples** Generate optimized embeddable code from protected MATLAB code:

- 1 Write an function `p_abs` that returns the absolute value of its input:

```
function out = p_abs(in)    %#codegen
% The directive %#codegen indicates that the function
% is intended for code generation
coder.allowpcode('plain');
out = abs(in);
```

- 2 Generate protected P-code. At the MATLAB prompt, enter:

```
pcode p_abs
```

The P-file, `p_abs.p`, appears in the current folder.

- 3 Generate a MEX function for `p_abs.p`, using the `-args` option to specify the size, class, and complexity of the input parameter (requires a MATLAB Coder license). At the MATLAB prompt, enter:

```
codegen p_abs -args { int32(0) }
```

`codegen` generates a MEX function in the current folder.

- 4 Generate embeddable C code for `p_abs.p` (requires a MATLAB Coder license). At the MATLAB prompt, enter:

```
codegen p_abs -config:lib -args { int32(0) };
```

`codegen` generates C library code in the `codegen\lib\p_abs` folder.

### See Also

[pcode](#) | [codegen](#)

**Purpose** Call external C/C++ function

**Syntax**

```

coder.ceval('cfun_name')
coder.ceval('cfun_name', cfun_arguments)
cfun_return = coder.ceval('cfun_name')
cfun_return = coder.ceval('cfun_name', cfun_arguments)
coder.ceval('-global', 'cfun_name', cfun_arguments)
cfun_return=coder.ceval('-global', 'cfun_name', cfun_arguments)

```

**Description** `coder.ceval('cfun_name')` executes the external C/C++ function specified by the quoted string `cfun_name`. Define `cfun_name` in an external C/C++ source file or library.

`coder.ceval('cfun_name', cfun_arguments)` executes `cfun_name` with arguments `cfun_arguments`. `cfun_arguments` is a comma-separated list of input arguments in the order that `cfun_name` requires.

`cfun_return = coder.ceval('cfun_name')` executes `cfun_name` and returns a single scalar value, `cfun_return`, corresponding to the value that the C/C++ function returns in the return statement. To be consistent with C/C++, `coder.ceval` can return only a scalar value; it cannot return an array.

`cfun_return = coder.ceval('cfun_name', cfun_arguments)` executes `cfun_name` with arguments `cfun_arguments` and returns `cfun_return`.

```

coder.ceval('-global', 'cfun_name', cfun_arguments)
cfun_return=coder.ceval('-global', 'cfun_name', cfun_arguments)

```

For code generation, you must specify the type, size, and complexity data type of return values and output arguments before calling `coder.ceval`.

By default, `coder.ceval` passes arguments by value to the C/C++ function whenever C/C++ supports passing arguments by value. To make `coder.ceval` pass arguments by reference, use the constructs `coder.ref`, `coder.rref`, and `coder.wref`. If C/C++ does not support passing arguments by value, for example, if the argument is an array,

`coder.ceval` passes arguments by reference. In this case, if you do not use the `coder.ref`, `coder.rref`, and `coder.wref` constructs, a copy of the argument might appear in the generated code to enforce MATLAB semantics for arrays.

If you pass a global variable by reference using `coder.ref`, `coder.rref` or `coder.wref`, and the custom C code saves the address of this global variable, use the `-global` flag to synchronize for the variables passed to the custom C code. Synchronization occurs before and after calls to the custom code. If you do not synchronize global variables under these circumstances and the custom C code saves the address and accesses it again later, the value of the variable might be out of date.

---

**Note** The `-global` flag does not apply for MATLAB Function blocks.

---

You cannot use `coder.ceval` on functions that you declare extrinsic with `coder.extrinsic`.

Use `coder.ceval` only in MATLAB for code generation. `coder.ceval` generates an error in uncompiled MATLAB code. Use `coder.target` to determine if the MATLAB function is executing in MATLAB. If it is, do not use `coder.ceval` to call the C/C++ function. Instead, call the MATLAB version of the C/C++ function.

When the LCC compiler creates a library, it adds a leading underscore to the library function names. If the compiler for the library was LCC and your code generation compiler is not LCC, you must add the leading underscore to the function name in a `coder.ceval` call. For example, `coder.ceval('_mylibfun')`. If the compiler for a library was not LCC, you cannot use LCC to generate code from MATLAB code that calls functions from that library. Those library function names do not have the leading underscore that the LCC compiler requires.

## Examples

Call a C function `foo(u)` from a MATLAB function from which you intend to generate C code:

- 1 Create a C header file `foo.h` for a function `foo` that takes two input parameters of type `double` and returns a value of type `double`.

```
#include <tmwtypes.h>

double foo(double in1, double in2);
```

- 2 Write the C function `foo.c`.

```
#include <stdio.h>
#include <stdlib.h>
#include "foo.h"

double foo(double in1, double in2)
{
    return in1 + in2;
}
```

- 3 Write a function `callfoo` that calls `foo` using `coder.ceval`.

```
function y = callfoo %#codegen
y = 0.0;
if coder.target('MATLAB')
    % Executing in MATLAB, call MATLAB equivalent of
    % C function foo
    y = 10 + 20;
else
    % Executing in generated code, call C function foo
    y = coder.ceval('foo', 10, 20);
end
```

- 4 Generate C library code for function `callfoo`, passing `foo.c` and `foo.h` as parameters to include this custom C function in the generated code.

```
codegen -config:lib callfoo foo.c foo.h
```

`codegen` generates C code in the `codegen\lib\callfoo` subfolder.

```
double callfoo(void)
{
    /* Executing in generated code, call C function foo */
    return foo(10.0, 20.0);
}
```

In this case, you have not specified the type of the input arguments, that is, the type of the constants 10 and 20. Therefore, the arguments are implicitly of double-precision, floating-point type by default, because the default type for constants in MATLAB is `double`.

---

Call a C library function from MATLAB code:

- 1 Write a MATLAB function `absval`.

```
function y = absval(u)    %#codegen
y = abs(u);
```

- 2 Generate the C library for `absval.m`, using the `-args` option to specify the size, type, and complexity of the input parameter.

```
codegen -config:lib absval -args {0.0}
```

`codegen` creates the library `absval.lib` and header file `absval.h` in the folder `/codegen/lib/absval`. It also generates the functions `absval_initialize` and `absval_terminate` in the same folder.

- 3 Write a MATLAB function to call the generated C library functions using `coder.ceval`.

```
function y = callabsval    %#codegen
y = -2.75;
% Check the target. Do not use coder.ceval if callabsval is
% executing in MATLAB
if coder.target('MATLAB')
    % Executing in MATLAB, call function absval
    y = absval(y);
```

```

else
    % Executing in the generated code.
    % Call the initialize function before calling the
    % C function for the first time
    coder.ceval('absval_initialize');

    % Call the generated C library function absval
    y = coder.ceval('absval',y);

    % Call the terminate function after
    % calling the C function for the last time
    coder.ceval('absval_terminate');
end

```

- 4 Convert the code in `callabsval.m` to a MEX function so you can call the C library function `absval` directly from MATLAB.

```

codegen -config:mex callabsval codegen/lib/absval/absval.lib...
        codegen/lib/absval/absval.h

```

- 5 Call the C library by running the MEX function from MATLAB.

```

callabsval_mex

```

```

coder.ref | | coder.rref | | coder.wref | | coder.target | | |
coder.extrinsic

```

## Tutorials

- “Return Multiple Values from C Functions”

## How To

- “Compilation Directive `%#codegen`”
- “External Code Integration”
- “Data Definition Basics”

# coder.cinclude

---

**Purpose** Include header file in generated code

**Syntax** `coder.cinclude(AppHeaderFile)`  
`coder.cinclude(SysHeaderFile)`

**Description** `coder.cinclude(AppHeaderFile)` includes an application header file in generated code using this format:

```
#include "HeaderFile"
```

`coder.cinclude(SysHeaderFile)` includes a system header file in generated code using this format:

```
#include <HeaderFile>
```

## Input Arguments

### **AppHeaderFile - Name of application header file**

string

Name of an application header file, specified as a string. The header file must be located in the include path that you specify with the `-I` option when generating code using `codegen`.

**Example:** `coder.cinclude('myheader.h')`

### **Data Types**

char

### **SysHeaderFile - Name of system header file**

string

Name of a system header file, specified as a string enclosed in angle brackets `< >`. The header file must come from a standard list of system directories or from the include path that you specify with the `-I` option when generating code using `codegen`.

**Example:** `coder.cinclude('<stdio.h>')`

### **Data Types**

char

## Examples

### Include Header File Conditionally in Generated Code

Generate code from a MATLAB function that calls an external C function to double its input. The MATLAB function uses `coder.cinclude` to include an application header file in generated C code running on a target machine, but not when the function runs in the MATLAB environment.

Write a C function `myMult2.c` that doubles its input. Save it in a subfolder `mycfiles`.

```
#include "myMult2.h"
double myMult2(double u)
{
    return 2 * u;
}
```

Write the application header file `myMult2.h`. Save it in the subfolder `mycfiles`.

```
#if !defined(MYMULT2)
#define MYMULT2
extern double myMult2(double);
#endif
```

Write a MATLAB function that conditionally includes the application header file and calls the external C function.

```
function y = myfunc
%#codegen
    y = 21;
    if ~coder.target('MATLAB')
    % Running in generated code
        coder.cinclude('myMult2.h');
        y = coder.ceval('myMult2', y);
    else
    % Running in MATLAB
        y = y * 2;
    end
```

# coder.cinclude

---

end

Compile the MATLAB function. Use the `-I` option to specify the path to the external header and C files.

```
codegen -config:lib myfunc -I mycfiles
```

Here is the generated C code:

```
/* Include files */
#include "rt_nonfinite.h"
#include "myfunc.h"
#include "myMult2.h"

/* Function Definitions */
double myfunc(void)
{
    /* Running in generated code */
    return myMult2(21.0);
}

/* End of code generation (myfunc.c) */
```

Besides the files that `coder.cinclude` specifies, `codegen` automatically includes the following files:

- Header file that defines the prototype for your entry-point function (in this case, `myMult2.h`)
  - `rt_nonfinite.h` (if you do not specify `SupportNonFinite=false` using `coder.config` when you compile the entry-point function).
- Tips**
- Call `coder.cinclude` before calling an external C/C++ function using `coder.ceval` to include in the generated code the header files required for the external function.
  - Localize use of `coder.cinclude` at the call sites where you want to include each header file. Do not place all of your `coder.cinclude`

calls in the top-level (entry-point) function unless you want to include the specified header files in every build.

## Limitations

- Do not call `coder.cinclude` inside run-time conditional constructs such as `if` statements, `switch` statements, `while`-loops, and `for`-loops. However, you can call `coder.cinclude` inside compile-time conditional statements, such as `coder.target`. For example:

```
...
if ~coder.target('MATLAB')
    coder.cinclude('foo.h');
    coder.ceval('foo');
end
...
```

## See Also

`coder.ceval` | `coder.target`

<b>Purpose</b>	Fold expressions into constants in generated code
<b>Syntax</b>	<pre>out = coder.const(expression) [out1,...,outN] = coder.const(handle,arg1,...,argN)</pre>
<b>Description</b>	<p><code>out = coder.const(expression)</code> evaluates <code>expression</code> and replaces <code>out</code> with the result of the evaluation in generated code.</p> <p><code>[out1,...,outN] = coder.const(handle,arg1,...,argN)</code> evaluates the multi-output function having <code>handle</code> <code>handle</code>. It then replaces <code>out1,...,outN</code> with the results of the evaluation in the generated code.</p>
<b>Input Arguments</b>	<p><b>expression - MATLAB expression or user-written function</b> expression with constants   single-output function with constant arguments</p> <p>MATLAB expression or user-defined single-output function.</p> <p>The expression must have compile-time constants only. The function must take constant arguments only. For instance, the following code leads to a code generation error, because <code>x</code> is not a compile-time constant.</p> <pre>function y=func(x)     y=coder.const(log10(x));</pre> <p>To fix the error, assign <code>x</code> to a constant in the MATLAB code. Alternatively, during code generation, you can use <code>coder.Constant</code> to define input type as follows:</p> <pre>codegen -config:lib func -args coder.Constant(10)</pre> <p><b>Example:</b> <code>2*pi, factorial(10)</code></p> <p><b>handle - Function handle</b> function handle</p> <p>Handle to built-in or user-written function.</p>

**Example:** @log, @sin

**Data Types**

function\_handle

**arg1,...,argN - Arguments to the function with handle handle**

function arguments that are constants

Arguments to the function with handle handle.

The arguments must be compile-time constants. For instance, the following code leads to a code generation error, because x and y are not compile-time constants.

```
function y=func(x,y)
    y=coder.const(@nchoosek,x,y);
```

To fix the error, assign x and y to constants in the MATLAB code. Alternatively, during code generation, you can use coder.Constant to define input type as follows:

```
codegen -config:lib func -args {coder.Constant(10),coder.Constant(2)}
```

**Output Arguments**

**out - Value of expression**

value of the evaluated expression

Value of expression. In the generated code, MATLAB Coder replaces occurrences of out with the value of expression.

**out1,...,outN - Outputs of the function with handle handle**

values of the outputs of the function with handle handle

Outputs of the function with handle handle. MATLAB Coder evaluates the function and replaces occurrences of out1,...,outN with constants in the generated code.

**Examples**

**Specify Constants in Generated Code**

This example shows how to specify constants in generated code using coder.const.

Write a function `AddShift` that takes an input `Shift` and adds it to the elements of a vector. The vector consists of the square of the first 10 natural numbers. `AddShift` generates this vector.

```
function y = AddShift(Shift) %#codegen
y = (1:10).^2+Shift;
```

Generate code for `AddShift` using the `codegen` command. Open the Code Generation Report.

```
codegen -config:lib -launchreport AddShift -args 0
```

The code generation software generates code for creating the vector. It adds `Shift` to each element of the vector during vector creation. The definition of `AddShift` in generated code looks as follows:

```
void AddShift(double Shift, double y[10])
{
    int k;
    for (k = 0; k < 10; k++) {
        y[k] = (double)((1 + k) * (1 + k)) + Shift;
    }
}
```

Replace the statement

```
y = (1:10).^2+Shift;
```

with

```
y = coder.const((1:10).^2)+Shift;
```

Generate code for `AddShift` using the `codegen` command. Open the Code Generation Report.

```
codegen -config:lib -launchreport AddShift -args 0
```

The code generation software creates the vector containing the squares of the first 10 natural numbers. In the generated code, it adds `Shift` to each element of this vector. The definition of `AddShift` in generated code looks as follows:

```
void AddShift(double Shift, double y[10])
{
    int i0;
    static const signed char iv0[10] = { 1, 4, 9, 16, 25, 36,
                                         49, 64, 81, 100 };

    for (i0 = 0; i0 < 10; i0++) {
        y[i0] = (double)iv0[i0] + Shift;
    }
}
```

### Create Lookup Table in Generated Code

This example shows how to fold a user-written function into a constant in generated code.

Write a function `getsine` that takes an input `index` and returns the element referred to by `index` from a lookup table of sines. The function `getsine` creates the lookup table using another function `gettable`.

```
function y = getsine(index) %#codegen
    assert(isa(index, 'int32'));
    persistent tbl;
    if isempty(tbl)
        tbl = gettable(1024);
    end
    y = tbl(index);

function y = gettable(n)
    y = zeros(1,n);
    for i = 1:n
        y(i) = sin((i-1)/(2*pi*n));
    end
```

Generate code for `getsine` using an argument of type `int32`. Open the Code Generation Report.

```
codegen -config:lib -launchreport getsine -args int32(0)
```

The generated code contains instructions for creating the lookup table.

Replace the statement:

```
tbl = gettable(1024);
```

with:

```
tbl = coder.const(gettable(1024));
```

Generate code for `getsine` using an argument of type `int32`. Open the Code Generation Report.

The generated code contains the lookup table itself. `coder.const` forces the expression `gettable(1024)` to be evaluated during code generation. The generated code does not contain instructions for the evaluation. The generated code contains the result of the evaluation itself.

## Specify Constants in Generated Code Using Multi-Output Function

This example shows how to specify constants in generated code using a multi-output function in a `coder.const` statement.

Write a function `MultiplyConst` that takes an input factor and multiplies every element of two vectors `vec1` and `vec2` with `factor`. The function generates `vec1` and `vec2` using another function `EvalConsts`.

```
function [y1,y2] = MultiplyConst(factor) %#codegen
    [vec1,vec2]=EvalConsts(pi.*(1./2.^(1:10)),2);
    y1=vec1.*factor;
    y2=vec2.*factor;
```

```
function [f1,f2]=EvalConsts(z,n)
```

```
f1=z.^(2*n)/factorial(2*n);
f2=z.^(2*n+1)/factorial(2*n+1);
```

Generate code for `MultiplyConst` using the `codegen` command. Open the Code Generation Report.

```
codegen -config:lib -launchreport MultiplyConst -args 0
```

The code generation software generates code for creating the vectors.

Replace the statement

```
[vec1,vec2]=EvalConsts(pi.*(1./2.^(1:10)),2);
```

with

```
[vec1,vec2]=coder.const(@EvalConsts,pi.*(1./2.^(1:10)),2);
```

Generate code for `MultiplyConst` using the `codegen` command. Open the Code Generation Report.

```
codegen -config:lib -launchreport MultiplyConst -args 0
```

The code generation software does not generate code for creating the vectors. Instead, it calculates the vectors and specifies the calculated vectors in generated code.

### **Read Constants by Processing XML File**

This example shows how to call an extrinsic function using `coder.const`.

Write an XML file `MyParams.xml` containing the following statements:

```
<params>
  <param name="hello" value="17"/>
  <param name="world" value="42"/>
</params>
```

Save `MyParams.xml` in the current folder.

Write a MATLAB function `xml2struct` that reads an XML file. The function identifies the XML tag `param` inside another tag `params`.

After identifying `param`, the function assigns the value of its attribute name to the field name of a structure `s`. The function also assigns the value of attribute `value` to the value of the field.

```
function s = xml2struct(file)

s = struct();
doc = xmlread(file);
els = doc.getElementsByTagName('params');
for i = 0:els.getLength-1
    it = els.item(i);
    ps = it.getElementsByTagName('param');
    for j = 0:ps.getLength-1
        param = ps.item(j);
        paramName = char(param.getAttribute('name'));
        paramValue = char(param.getAttribute('value'));
        paramValue = evalin('base', paramValue);
        s.(paramName) = paramValue;
    end
end
```

Save `xml2struct` in the current folder.

Write a MATLAB function `MyFunc` that reads the XML file `MyParams.xml` into a structure `s` using the function `xml2struct`. Declare `xml2struct` as extrinsic using `coder.extrinsic` and call it in a `coder.const` statement.

```
function y = MyFunc(u) %#codegen
    assert(isa(u, 'double'));
    coder.extrinsic('xml2struct');
    s = coder.const(xml2struct('MyParams.xml'));
    y = s.hello + s.world + u;
```

Generate code for MyFunc using the codegen command. Open the Code Generation Report.

```
codegen -config:dll -launchreport MyFunc -args 0
```

The code generation software executes the call to `xml2struct` during code generation. It replaces the structure fields `s.hello` and `s.world` with the values 17 and 42 in generated code.

### Tips

- The code generation software constant-folds expressions automatically when possible. Typically, automatic constant-folding occurs for expressions with scalars only. Use `coder.const` when the code generation software does not constant-fold expressions on its own.

# coder.cstructname

---

**Purpose** Specify structure name in generated code

**Syntax**

```
coder.cstructname(structVar, 'structName')
coder.cstructname(structVar, 'structName', 'extern')
coder.cstructname(structVar, 'structName', 'extern', Name, Value)
coder.cstructname(structType, 'structName')
coder.cstructname(structType, 'structName', 'extern')
coder.cstructname(structType, 'structName', 'extern', Name, Value)
```

**Description**

`coder.cstructname(structVar, 'structName')` allows you to specify the name of a structure in generated code. *structVar* is the structure variable. *structName* specifies the name to use for the structure variable *structVar* in the generated code. Use `coder.cstructname(structVar, 'structName')` in a function that is compiled using `.mex`. Before the first use of the structure variable in your function, you must call `coder.cstructname`.

`coder.cstructname(structVar, 'structName', 'extern')` declares an externally defined structure. It does not generate the definition of the structure type. Provide the definition in a custom include file.

`coder.cstructname(structVar, 'structName', 'extern', Name, Value)` uses additional options specified by one or more *Name, Value* pair arguments.

`coder.cstructname(structType, 'structName')` returns a `coder.StructType` with the name *structName*. When the first argument is *structType*, `coder.cstructname` is a MATLAB function. You cannot use `coder.cstructname(structType, 'structName')` in a function that is compiled using `.mex`. Use the returned type with the `-args` option.

`coder.cstructname(structType, 'structName', 'extern')` returns a `coder.StructType` that uses an externally defined structure. Provide the structure definition in a custom include file.

`coder.cstructname(structType, 'structName', 'extern', Name, Value)` uses additional options specified by one or more *Name, Value* pair arguments.

## Tips

- `coder.cstructname(structVar, 'structName')` is ignored outside of code generation. Using `coder.cstructname` at the MATLAB command line, and then calling `codegen` does not assign a name to a structure in the generated code. For example, if function `foo` does not use `coder.cstructname` to assign a name to structure `S`, the following commands do not assign the name `myStruct` to the structure variable `S` in generated code.

```
coder.cstructname(S, 'myStruct');  
codegen foo -args {S}
```

- To assign a structure name outside of code generation, use `coder.cstructname(structType, 'structName')`. `coder.cstructname` returns a `coder.StructType` object you can use with the `-args` option. For more information, see “Create a `coder.StructType` Object” on page 2-63.
- To use `coder.cstructname` on arrays, use single indexing. For example, you cannot use `coder.cstructname(x(1,2))`. Instead, use single indexing, for example `coder.cstructname(x(n))`.
- Use of `coder.cstructname` with global variables is not supported.
- If you use `coder.cstructname` on an array, it sets the name of the base type of the array, not the name of the array. Therefore, you cannot use `coder.cstructname` on the base element and then on the array. For example, the following code does not work. The second `coder.cstructname` attempts to set the name of the base type to `myStructArrayName`, which conflicts with the previous `coder.cstructname`, `myStructName`.

```
% Define scalar structure with field a  
myStruct = struct('a', 0);  
coder.cstructname(mystruct, 'myStructName');  
% Define array of structure with field a  
myStructArray = repmat(myStruct, k, n);  
coder.cstructname(myStructArray, 'myStructArrayName');
```

- If you are using custom structure types, specify the name of the header file that includes the external definition of the structure. Use the `HeaderFile` input argument.
- If you have an Embedded Coder license and use Code Replacement Libraries (CRLs), the CRLs provide the ability to align data objects passed into a replacement function to a specified boundary. To take advantage of target-specific function implementations that require data to be aligned, use the `Alignment` input argument.
- You can also use `coder.cstructname` to assign a name to a substructure, which is a structure that appears as a field of another structure. For more information, see “Assign a Name to a SubStructure” on page 2-62.

### Input Arguments

#### **structName**

The name to use for the structure in the generated code.

#### **structType**

`coder.StructType` object.

#### **structVar**

Structure variable.

### **Name-Value Pair Arguments**

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

#### **'Alignment'**

The run-time memory alignment of structures of this type in bytes. If you have an Embedded Coder license and use Code Replacement Libraries (CRLs), the CRLs provide the ability to align data objects

passed into a replacement function to a specified boundary. This capability allows you to take advantage of target-specific function implementations that require data to be aligned. By default, the structure is not aligned on a specific boundary. Hence it is not matched by CRL functions that require alignment.

Alignment must be either -1 or a power of 2 that is not greater than 128.

**Default:** -1

### **'HeaderFile'**

Name of the header file that contains the external definition of the structure, for example, "mystruct.h".

By default, the generated code contains `#include` statements for custom header files after the standard header files. If a standard header file refers to the custom structure type, then the compilation fails. By specifying the `HeaderFile` option, MATLAB Coder includes that header file exactly at the point where it is required.

Must be a non-empty string.

## **Examples**

### **Apply coder.cstructname to Top-Level Inputs**

Generate code for a MATLAB function that takes structure inputs.

- 1 Write a MATLAB function, `topfun`, that assigns the name `MyStruct` to its input parameter.

```
function y = topfun(x) %#codegen
% Assign the name 'MyStruct' to the input variable in
% the generated code
coder.cstructname(x, 'MyStruct');
y = x;
end
```

- 2 Declare a structure `s` in MATLAB. `s` is the structure definition for the input variable `x`.

```
s = struct('a',42,'b',4711);
```

- 3 Generate a MEX function for `topfun`, using the `-args` option to specify that the input parameter is a structure.

```
codegen topfun.m -args { s }
```

codegen generates a MEX function in the default folder `codegen\mex\topfun`. In this folder, the structure definition is in `topfun_types.h`.

```
typedef struct
{
    double a;
    double b;
} MyStruct;
```

### Assign a Name to a Structure and Pass it to a Function

Assign the name `MyStruct` to the structure `structVar`. Pass the structure to a C function `use_struct`.

- 1 Create a C header file, `use_struct.h`, for a `use_struct` function that takes a parameter of type `MyStruct`. Define a structure of type `MyStruct` in the header file.

```
#include <tmwtypes.h>
```

```
typedef struct MyStruct
{
    double s1;
    double s2;
} MyStruct;
```

```
void use_struct(struct MyStruct *my_struct);
```

- 2 Write the C function `use_struct.c`.

```
#include <stdio.h>
```

```
#include <stdlib.h>

#include "use_struct.h"

void use_struct(struct MyStruct *my_struct)
{
    double x = my_struct->s1;
    double y = my_struct->s2;
}
```

- 3** Write a `m_use_struct` compliant with MATLAB that declares a structure. Have the function assign the name `MyStruct` to the structure. Then, have the function call the C function `use_struct` using `coder.ceval`.

```
function m_use_struct %#codegen
% The directive %#codegen indicates that the function
% is intended for code generation
% Declare a MATLAB structure
structVar.s1 = 1;
structVar.s2 = 2;

% Assign the name MyStruct to the structure variable.
% extern indicates this is an externally defined
% structure.
coder.cstructname(structVar, 'MyStruct', 'extern');

% Call the C function use_struct. The type of structVar
% matches the signature of use_struct.
% Use coder.rref to pass the the variable structVar by
% reference as a read-only input to the external C
% function use_struct
coder.ceval('use_struct', coder.rref(structVar));
```

- 4** Generate C library code for function `m_use_struct`, passing `use_struct.h` to include the structure definition.

```
codegen -config:lib m_use_struct use_struct.c use_struct.h
```

codegen generates C code in the default folder `codegen\lib\m_use_struct`. The generated header file `m_use_struct_types.h` in this folder does not contain a definition of the structure `MyStruct` because `MyStruct` is an external type.

### Assign a Name to a SubStructure

Use `coder.cstructname` to assign a name to a substructure.

- 1 Define a MATLAB structure, `top`, that has another structure, `lower`, as a field.

```
% Define structure top with field lower,  
% which is a structure with fields a and b  
top.lower = struct('a',1,'b',1);  
top.c = 1;
```

- 2 Define a function, `MyFunc`, which takes an argument, `TopVar`, as input. Mark the function for code generation using  `%#codegen`.

```
function out = MyFunc(TopVar) %#codegen
```

- 3 Inside `MyFunc`, include the following lines

```
coder.cstructname(TopVar, 'topType');  
coder.cstructname(TopVar.lower, 'lowerType');
```

- 4 Generate C code for `MyFunc` with an argument having the same type as `top`. This ensures that `TopVar` has the same type as `top`.

```
codegen -config:lib MyFunc -args coder.typeof(top)
```

In the generated C code, the field variable `TopVar.lower` is assigned the type name `lowerType`. For instance, the structure declaration of the variable `TopVar.lower` appears in the C code as:

```
typedef struct  
{
```

```
        /* Definitions of a and b appear here */  
    } lowerType;
```

and the structure declaration of the variable TopVar appears as:

```
typedef struct  
{  
    lowerType lower;  
    /* Definition of c appears here */  
} topType;
```

## Create a coder.StructType Object

Create a `coder.StructType` object and pass it as argument. .

```
S = struct('a',double(0),'b',single(0))  
T = coder.typeof(S);  
T = coder.cstructname(T,'mytype');  
codegen -config:lib MyFile -args T
```

In this example, you create a `coder.StructType` object `T`. The object is passed as a `codegen` argument. However, because of the `coder.cstructname` statement, `T` is replaced with `mytype` in the generated C code. For instance, the declaration of `T` appears in the C code as:

```
typedef struct  
{  
    /* Field definitions appear here */  
} mytype;
```

## Create a coder.StructType Object Using an Externally Defined Type

Create a C header file, `MyFile.h`, containing the definition of a structure type, `mytype`.

```
typedef struct {  
    /* Field definitions */  
    double a;
```

## **coder.cstructname**

---

```
float b;  
} mytype;
```

Save the file in the folder, `C:\MyHeaders`.

Define a `coder.StructType` object, `T`, with the same fields as `mytype`.

```
T = coder.typeof(struct('a',double(0),'b',single(0)));
```

Using `coder.cstructname`, rename `T` as `mytype`. Specify that the definition of `mytype` is in `MyFile.h`.

```
T = coder.cstructname(T,'mytype','extern','HeaderFile','MyFile.h');
```

Generate code for MATLAB function, `MyFunc`, which takes a structure of type, `T`, as input argument. Add the folder, `C:\MyHeaders`, to the include path during code generation.

```
codegen -config:lib MyFunc -args T -I C:\MyHeaders
```

In the generated code, the structure, `T`, is assigned the name, `mytype`. The code generation software does not generate the definition of `mytype`. Instead the software includes the header file, `MyFile.h`, in the generated code.

## Purpose

Declare extrinsic function or functions

## Syntax

```
coder.extrinsic('function_name');
coder.extrinsic('function_name_1', ... ,
'function_name_n');
coder.extrinsic('-sync:on', 'function_name');
coder.extrinsic('-sync:on', 'function_name_1', ... ,
'function_name_n');
coder.extrinsic('-sync:off', 'function_name');
coder.extrinsic('-sync:off', 'function_name_1', ... ,
'function_name_n');
```

## Arguments

*function\_name*

*function\_name\_1*, ... , *function\_name\_n*

Declares *function\_name* or *function\_name\_1* through *function\_name\_n* as extrinsic functions.

`-sync:on`

*function\_name* or *function\_name\_1* through *function\_name\_n*.

Enables synchronization of global data between MATLAB and MEX functions before and after calls to the extrinsic functions, *function\_name* or *function\_name\_1* through *function\_name\_n*. If only a few extrinsic calls modify global data, turn off synchronization before and after all extrinsic function calls by setting the global synchronization mode to `At MEX-function entry and exit`. Use the `-sync:on` option to turn on synchronization for only the extrinsic calls that *do* modify global data.

`-sync:off`

Disables synchronization of global data between MATLAB and MEX functions before and after calls to the extrinsic functions, *function\_name* or *function\_name\_1* through *function\_name\_n*. If most extrinsic calls modify global data, but a few do not, you

# coder.extrinsic

---

can use the `-sync:off` option to turn off synchronization for the extrinsic calls that *do not* modify global data.

## Description

`coder.extrinsic` declares extrinsic functions. During simulation, the code generation software generates code for the call to an extrinsic function, but does not generate the function's internal code. Therefore, simulation can run only on platforms where MATLAB software is installed. During standalone code generation, MATLAB attempts to determine whether the extrinsic function affects the output of the function in which it is called — for example by returning `mxArrays` to an output variable. Provided that there is no change to the output, MATLAB proceeds with code generation, but excludes the extrinsic function from the generated code. Otherwise, compilation errors occur.

You cannot use `coder.ceval` on functions that you declare extrinsic by using `coder.extrinsic`.

`coder.extrinsic` is ignored outside of code generation.

## Tips

- The code generation software detects calls to many common visualization functions, such as `plot`, `disp`, and `figure`. The software treats these functions like extrinsic functions, but you do not have to declare them extrinsic using the `coder.extrinsic` function.
- Use the `coder.screener` function to detect which functions you must declare extrinsic. This function opens the code generations readiness tool that detects code generation issues in your MATLAB code.

During code generation, MATLAB attempts to determine whether the extrinsic function affects the output of the function in which it is called—for example, by returning `mxArrays` to an output variable. Provided that there is no change to the output, MATLAB proceeds with code generation, but excludes the extrinsic function from the generated code. Otherwise, a MATLAB issues a compiler error.

## Examples

The following code declares the MATLAB functions `patch` and `axis` extrinsic in the MATLAB local function `create_plot`:

```
function c = pythagoras(a,b,color) %#codegen
```

```

% Calculates the hypotenuse of a right triangle
% and displays the triangle as a patch object.

c = sqrt(a^2 + b^2);

create_plot(a, b, color);

function create_plot(a, b, color)
%Declare patch and axis as extrinsic

coder.extrinsic('patch', 'axis');

x = [0;a;a];
y = [0;0;b];
patch(x, y, color);
axis('equal');

```

By declaring these functions extrinsic, you instruct the software not to compile or generate code for `patch` and `axis`. Instead it dispatches these functions to MATLAB for execution.

**See Also**

`coder.ceval` | `coder.screener`

**How To**

- “Resolution of Function Calls for Code Generation”
- “Restrictions on Extrinsic Functions for Code Generation”

# **coder.inline**

---

**Purpose** Control inlining in generated code

**Syntax**

```
coder.inline('always')
coder.inline('never')
coder.inline('default')
```

**Description**

`coder.inline('always')` forces inlining of the current function in generated code.

`coder.inline('never')` prevents inlining of the current function in generated code. For example, you may want to prevent inlining to simplify the mapping between the MATLAB source code and the generated code.

`coder.inline('default')` uses internal heuristics to determine whether or not to inline the current function.

In most cases, the heuristics used produce highly optimized code. Use `coder.inline` only when you need to fine-tune these optimizations.

Place the `coder.inline` directive inside the function to which it applies. MATLAB Coder does not inline entry-point functions.

`coder.inline('always')` does not inline functions called from `parfor`-loops. MATLAB Coder does not inline functions into `parfor`-loops.

## **Examples**

- “Preventing Function Inlining” on page 2-68
- “Using `coder.inline` In Control Flow Statements” on page 2-69

### **Preventing Function Inlining**

In this example, function `foo` is not inlined in the generated code:

```
function y = foo(x)
    coder.inline('never');
    y = x;
end
```

## Using coder.inline In Control Flow Statements

You can use `coder.inline` in control flow code. If the software detects contradictory `coder.inline` directives, the generated code uses the default inlining heuristic and issues a warning.

Suppose you want to generate code for a division function that will be embedded in a system with limited memory. To optimize memory use in the generated code, the following function, `inline_division`, manually controls inlining based on whether it performs scalar division or vector division:

```
function y = inline_division(dividend, divisor)

% For scalar division, inlining produces smaller code
% than the function call itself.
if isscalar(dividend) && isscalar(divisor)
    coder.inline('always');
else
% Vector division produces a for-loop.
% Prohibit inlining to reduce code size.
    coder.inline('never');
end

if any(divisor == 0)
    error('Can not divide by 0');
end

y = dividend / divisor;
```

# coder.load

---

**Purpose** Load compile-time constants from MAT-file or ASCII file into caller workspace

**Syntax**

```
S = coder.load(filename)
S = coder.load(filename,var1,...,varN)
S = coder.load(filename,'-regexp',expr1,...,exprN)
S = coder.load(filename,'-ascii')
S = coder.load(filename,'-mat')
S = coder.load(filename,'-mat',var1,...,varN)
S = coder.load(filename,'-mat','-regexp', expr1,...,exprN)
```

**Description** `S = coder.load(filename)` loads compile-time constants from `filename`.

- If `filename` is a MAT-file, then `coder.load` loads variables from the MAT-file into a structure array.
- If `filename` is an ASCII file, then `coder.load` loads data into a double-precision array.

`S = coder.load(filename,var1,...,varN)` loads only the specified variables from the MAT-file `filename`.

`S = coder.load(filename,'-regexp',expr1,...,exprN)` loads only the variables that match the specified regular expressions.

`S = coder.load(filename,'-ascii')` treats `filename` as an ASCII file, regardless of the file extension.

`S = coder.load(filename,'-mat')` treats `filename` as a MAT-file, regardless of the file extension.

`S = coder.load(filename,'-mat',var1,...,varN)` treats `filename` as a MAT-file and loads only the specified variables from the file.

`S = coder.load(filename, '-mat', '-regexp', expr1, ..., exprN)`  
treats `filename` as a MAT-file and loads only the variables that match the specified regular expressions.

## Input Arguments

### **filename - Name of file**

string

Name of file, specified as a string constant.

`filename` can include a file extension and a full or partial path. If `filename` has no extension, `load` looks for a file named `filename.mat`. If `filename` has an extension other than `.mat`, `load` treats the file as ASCII data.

ASCII files must contain a rectangular table of numbers, with an equal number of elements in each row. The file delimiter (the character between elements in each row) can be a blank, comma, semicolon, or tab character. The file can contain MATLAB comments (lines that begin with a percent sign, %).

**Example:** `'myFile.mat'`

### **Data Types**

char

### **var1,...,varN - Names of variables to load**

string

Names of variables, specified as string constants. Use the `*` wildcard to match patterns.

**Example:** `load('myFile.mat', 'A*')` loads all variables in the file whose names start with `A`.

### **Data Types**

char

### **expr1,...,exprN - Regular expressions indicating which variables to load**

string

Regular expressions indicating which variables to load, specified as string constants.

**Example:** `load('myFile.mat', '^A', '^B')` loads only variables whose names begin with A or B.

## Data Types

char

## Output Arguments

### S - Loaded variables or data

structure array | m-by-n array

If filename is a MAT-file, S is a structure array.

If filename is an ASCII file, S is an m-by-n array of type double. m is the number of lines in the file and n is the number of values on a line.

## Examples

### Load compile-time constants from MAT-file

Generate code for a function `edgeDetect1` which given a normalized image, returns an image where the edges are detected with respect to the threshold value. `edgeDetect1` uses `coder.load` to load the edge detection kernel from a MAT-file at compile time.

Save the Sobel edge-detection kernel in a MAT-file.

```
k = [1 2 1; 0 0 0; -1 -2 -1];
```

```
save('sobel.mat', 'k');
```

Write the function `edgeDetect1`.

```
function edgeImage = edgeDetect1(originalImage, threshold) %#codegen
assert(all(size(originalImage) <= [1024 1024]));
assert(isa(originalImage, 'double'));
assert(isa(threshold, 'double'));
```

```
S = coder.load('sobel.mat', 'k');
H = conv2(double(originalImage), S.k, 'same');
V = conv2(double(originalImage), S.k', 'same');
```

```
E = sqrt(H.*H + V.*V);
edgeImage = uint8((E > threshold) * 255);
```

Create a code generation configuration object for a static library.

```
cfg = coder.config('lib');
```

Generate a static library for `edgeDetect1`.

```
codegen -report -config cfg edgeDetect1
```

`codegen` generates C code in the `codegen\lib\edgeDetect1` folder.

### **Load compile-time constants from ASCII file**

Generate code for a function `edgeDetect2` which given a normalized image, returns an image where the edges are detected with respect to the threshold value. `edgeDetect2` uses `coder.load` to load the edge detection kernel from an ASCII file at compile time.

Save the Sobel edge-detection kernel in an ASCII file.

```
k = [1 2 1; 0 0 0; -1 -2 -1];
save('sobel.dat', 'k', '-ascii');
```

Write the function `edgeDetect2`.

```
function edgeImage = edgeDetect2(originalImage, threshold) %#codegen
assert(all(size(originalImage) <= [1024 1024]));
assert(isa(originalImage, 'double'));
assert(isa(threshold, 'double'));
```

```
k = coder.load('sobel.dat');
H = conv2(double(originalImage),k, 'same');
V = conv2(double(originalImage),k, 'same');
E = sqrt(H.*H + V.*V);
edgeImage = uint8((E > threshold) * 255);
```

Create a code generation configuration object for a static library.

```
cfg = coder.config('lib');
```

Generate a static library for `edgeDetect2`.

```
codegen -report -config cfg edgeDetect2
```

`codegen` generates C code in the `codegen\lib\edgeDetect2` folder.

## Limitations

- `coder.load` does not support loading objects.
- Arguments to `coder.load` must be compile-time constant strings.
- The output `S` must be the name of a structure or array without any subscripting. For example, `S[i] = coder.load('myFile.mat')` is not allowed.
- You cannot use `save` to save workspace data to a file inside a function intended for code generation. The code generation software does not support the `save` function. Furthermore, you cannot use `coder.extrinsic` with `save`. Prior to generating code, you can use `save` to save workspace data to a file.

## Tips

- `coder.load` loads data at compile time, not at run time. If you are generating MEX code or code for Simulink simulation, you can use the MATLAB function `load` to load run-time values.
- If the MAT-file contains unsupported constructs, use `coder.load(filename,var1,...,varN)` to load only the supported constructs.
- If you generate code in a MATLAB Coder project, the code generation software practices incremental code generation for the `coder.load` function. When the MAT-file or ASCII file used by `coder.load` changes, the software rebuilds the code.

## See Also

`matfile` | `regexp` | `save`

## Concepts

- “Regular Expressions”

**Purpose** Declare uninitialized variables

**Syntax** `X = coder.nullcopy(A)`

**Description** `X = coder.nullcopy(A)` copies type, size, and complexity of `A` to `X`, but does not copy element values. Preallocates memory for `X` without incurring the overhead of initializing memory.

`coder.nullcopy` does not support MATLAB classes as inputs.

### Use With Caution

Use this function with caution. See “How to Eliminate Redundant Copies by Defining Uninitialized Variables”.

### Examples

The following example shows how to declare variable `X` as a 1-by-5 vector of real doubles without performing an unnecessary initialization:

```
function X = foo

N = 5;
X = coder.nullcopy(zeros(1,N));
for i = 1:N
    if mod(i,2) == 0
        X(i) = i;
    else
        X(i) = 0;
    end
end
```

Using `coder.nullcopy` with `zeros` lets you specify the size of vector `X` without initializing each element to zero.

### How To

- “Eliminate Redundant Copies of Variables in Generated Code”

# coder.opaque

---

**Purpose** Declare variable in generated code

**Syntax**

```
y = coder.opaque(type)
y = coder.opaque(type,value)
y = coder.opaque(type,'HeaderFile',HeaderFile)
y = coder.opaque(type,value,'HeaderFile',HeaderFile)
```

**Description** `y = coder.opaque(type)` declares a variable `y` with the specified type and no initial value in the generated code.

- `y` can be a variable or a structure field.
- MATLAB code cannot set or access `y`, but external C functions can accept `y` as an argument.
- `y` can be an:
  - Argument to `coder.rref`, `coder.wref`, or `coder.ref`
  - Input or output argument to `coder.ceval`
  - Input or output argument to a user-written MATLAB function
  - Input to a subset of MATLAB toolbox functions supported for code generation

- Assignment from `y` declares another variable with the same type in the generated code. For example:

```
y = coder.opaque('int');
z = y;
```

declares a variable `z` of type `int` in the generated code.

- You can assign `y` from another variable declared using either `coder.opaque` or assignment from a variable declared using `coder.opaque`. The variables must have identical types.
- You can compare `y` to another variable declared using either `coder.opaque` or assignment from a variable declared using `coder.opaque`. The variables must have identical types.

`y = coder.opaque(type, value)` declares a variable `y` and specifies the initial value of `y` in the generated code.

`y = coder.opaque(type, 'HeaderFile', HeaderFile)` declares a variable `y` and specifies the header file that contains the definition of `type`. The code generation software generates the `#include` statement for the header file where required in the generated code.

`y = coder.opaque(type, value, 'HeaderFile', HeaderFile)` declares a variable `y` with the specified type, initial value, and header file in the generated code.

## Input Arguments

### **type** - Type of variable

string

Type of variable in generated code specified as a string constant. The type must be a:

- Built-in C data type or a type defined in a header file
- C type that supports copy by assignment
- Legal prefix in a C declaration

**Example:** 'FILE \*'

### **Data Types**

char

### **value** - Initial value of variable

string

Initial value of variable in generated code specified as a string constant. Specify a C expression not dependent on MATLAB variables or functions.

If you do not provide the initial value in `value`, initialize the value of the variable prior to using it. To initialize a variable declared using `coder.opaque`:

- Assign a value from another variable with the same type declared using either `coder.opaque` or assignment from a variable declared using `coder.opaque`.
- Assign a value from an external C function.
- Pass the variable's address to an external function using `coder.wref`.

**Example:** `'NULL'`

## Data Types

`char`

## HeaderFile - Name of header file

`string`

Name of header file, specified as a string constant, that contains the definition of `type`.

For a system header file, use angle brackets.

**Example:** `'<stdio.h>'` generates `#include <stdio.h>`

For an application header file, use double quotes.

**Example:** `'"foo.h"'` generates `#include "foo.h"`

If you omit the angle brackets or double quotes, the code generation software generates double quotes.

**Example:** `'foo.h'` generates `#include "foo.h"`

Specify the include path in the build configuration parameters.

**Example:** `cfg.CustomInclude = 'c:\myincludes'`

## Data Types

`char`

## Examples

### Declare Variable Specifying Initial Value

Generate code for a function `valtest` which returns 1 if the call to `myfun` is successful. This function uses `coder.opaque` to declare a

variable `x1` with type `int` and initial value 0. The assignment `x2 = x1` declares `x2` to be a variable with the type and initial value of `x1` .

Write a function `valtest`.

```
function y = valtest
%codegen
%declare x1 to be an integer with initial value '0')
x1 = coder.opaque('int','0');
%Declare x2 to have same type and intial value as x1
x2 = x1;
x2 = coder.ceval('myfun');
%test the result of call to 'myfun' by comparing to value of x1
if x2 == x1;
    y = 0;
else
    y = 1;
end
end
```

Create a code generation configuration object for a static library.

```
cfg = coder.config('lib');
```

Generate a static library for `valtest`.

```
codegen -report -config cfg valtest
```

`codegen` generates C code in the `codegen\lib\valtest` folder.

## Declare Variable Specifying Initial Value and Header File

Generate code for a MATLAB function `filetest` which returns its own source code using `fopen/fread/fclose`. This function uses `coder.opaque` to declare the variable that stores the file pointer used by `fopen/fread/fclose`. The call to `coder.opaque` declares the variable `f` with type `FILE *`, initial value `NULL`, and header file `<stdio.h>`.

Write a MATLAB function `filetest`.

```
function buffer = filetest
%#codegen

% Declare 'f' as an opaque type 'FILE *' with initial value 'NULL'
%Specify the header file that contains the type definition of 'FILE *';

f = coder.opaque('FILE *', 'NULL', 'HeaderFile', '<stdio.h>');
% Open file in binary mode
f = coder.ceval('fopen', cstring('filetest.m'), cstring('rb'));

% Read from file until end of file is reached and put
% contents into buffer
n = int32(1);
i = int32(1);
buffer = char(zeros(1,8192));
while n > 0
    % By default, MATLAB converts constant values
    % to doubles in generated code
    % so explicit type conversion to int32 is inserted.
    n = coder.ceval('fread', coder.ref(buffer(i)), int32(1), ...
        int32(numel(buffer)), f);
    i = i + n;
end
coder.ceval('fclose', f);

buffer = strip_cr(buffer);

% Put a C termination character '\0' at the end of MATLAB string
function y = cstring(x)
    y = [x char(0)];

% Remove all character 13 (CR) but keep character 10 (LF)
function buffer = strip_cr(buffer)
j = 1;
for i = 1:numel(buffer)
```

```
    if buffer(i) ~= char(13)
        buffer(j) = buffer(i);
        j = j + 1;
    end
end
buffer(i) = 0;
```

Create a code generation configuration object for a static library.

```
cfg = coder.config('lib');
```

Generate a static library for filetest.

```
codegen -report -config cfg filetest
```

codegen generates C code in the codegen\lib\filetest folder.

## Compare Variables Declared Using coder.opaque

Compare variables declared using coder.opaque to test for successfully opening a file.

Use coder.opaque to declare a variable null with type FILE \* and initial value NULL.

```
null = coder.opaque('FILE *', 'NULL', 'HeaderFile', '<stdio.h>');
```

Use assignment to declare another variable ftmp with the same type and value as null.

```
ftmp = null;
ftmp = coder.ceval('fopen', ['testfile.txt', char(0)], ['r', char(0)]);
```

Compare the variables.

```
if ftmp == null
    %error condition
end
```

## Tips

- `coder.opaque` declares the type of a variable. It does not instantiate the variable. You can instantiate a variable by using it later in the MATLAB code. In the following example, assignment of `fp1` from `coder.ceval` instantiates `fp1`.

```
% Declare fp1 of type FILE *
fp1 = coder.opaque('FILE *');
%Create the variable fp1
fp1 = coder.ceval('fopen', ['testfile.txt', char(0)], ['r', char(0)]);
```

- In the MATLAB environment, `coder.opaque` returns the value specified in `value`. If `value` is not provided, it returns the empty string.
- You can compare variables declared using either `coder.opaque` or assignment from a variable declared using `coder.opaque`. The variables must have identical types. The following example demonstrates how to compare these variables. “Compare Variables Declared Using `coder.opaque`” on page 2-81
- To avoid multiple inclusions of the same header file in generated code, enclose the header file in the conditional preprocessor statements `#ifndef` and `#endif`. For example:

```
#ifndef MyHeader_h
#define MyHeader_h
<body of header file>
#endif
```

## See Also

[coder.ceval](#) | [coder.ref](#) | [coder.rref](#) | [coder.wref](#)

## Purpose

Pass argument by reference as read input or write output

## Syntax

```
[y =] coder.ceval('function_name', coder.ref(arg), ... u_n)
```

## Arguments

*arg*

Variable passed by reference as an input or an output to the external C/C++ function called in `coder.ceval`. *arg* must be a scalar variable, a matrix variable, or an element of a matrix variable.

## Description

[y =] `coder.ceval('function_name', coder.ref(arg), ... u_n)` passes the variable *arg* by reference as an input or an output to the external C/C++ function called in `coder.ceval`. You add `coder.ref` inside `coder.ceval` as an argument to *function\_name*. The argument list can contain multiple `coder.ref` constructs. Add a separate `coder.ref` construct for each argument that you want to pass by reference to *function\_name*.

Only use `coder.ref` in MATLAB code that you have compiled with `codegen`. `coder.ref` generates an error in uncompiled MATLAB code.

## Examples

In the following example, a MATLAB function `fcn` has a single input `u` and a single output `y`. `fcn` calls a C function `my_fcn`, passing `u` by reference as an input. The value of output `y` is passed to `fcn` by the C function through its return statement.

Here is the MATLAB function code:

```
function y = fcn(u) %#codegen

y = 0; %Constrain return type to double
y = coder.ceval('my_fcn', coder.ref(u));
```

The C function prototype for `my_fcn` must be as follows:

```
double my_fcn(double *u)
```

In this example, the generated code infers the type of the input `u` from the `codegen` argument.

The C function prototype defines the input as a pointer because it is passed by reference.

The generated code cannot infer the type of the output `y`, so you must set it explicitly—in this case to a constant value `0` whose type defaults to `double`.

### See Also

[coder.ceval](#) | [coder.rref](#) | [coder.wref](#)

<b>Purpose</b>	Pass argument by reference as read-only input
<b>Syntax</b>	<code>[y =] coder.ceval('function_name', coder.rref(argI), ... u<sub>n</sub>)</code>
<b>Arguments</b>	<p><i>argI</i></p> <p>Variable passed by reference as a <i>read-only</i> input to the external C/C++ function called in <code>coder.ceval</code>.</p>
<b>Description</b>	<p><code>[y =] coder.ceval('function_name', coder.rref(argI), ... u<sub>n</sub>)</code> passes the variable <i>argI</i> by reference as a <i>read-only</i> input to the external C/C++ function called in <code>coder.ceval</code>. You add <code>coder.rref</code> inside <code>coder.ceval</code> as an argument to <i>function_name</i>. The argument list can contain multiple <code>coder.rref</code> constructs. Add a separate <code>coder.rref</code> construct for each read-only argument that you want to pass by reference to <i>function_name</i>.</p>

**Caution**

The generated code assumes that a variable passed by `coder.rref` is *read-only* and is optimized accordingly. Consequently, the C/C++ function must not write to the variable or results can be unpredictable.

Only use `coder.rref` in MATLAB code that you have compiled with `codegen`. `coder.rref` generates an error in uncompiled MATLAB code.

**Examples**

In the following example, a MATLAB function `fcn` has a single input `u` and a single output `y`. `fcn` calls a C function `foo`, passing `u` by reference as a read-only input. The value of output `y` is passed to `fcn` by the C function through its return statement.

Here is the MATLAB function code:

```
function y = fcn(u) %#codegen

y = 0; % Constrain return type to double
y = coder.ceval('foo', coder.rref(u));
```

The C function prototype for `foo` must be as follows:

```
double foo(const double *u)
```

In this example, the generated code infers the type of the input `u` from the `codegen` argument.

The C function prototype defines the input as a pointer because it is passed by reference.

The generated code cannot infer the type of the output `y`, so you must set it explicitly—in this case to a constant value `0` whose type defaults to `double`.

### See Also

[coder.ceval](#) | [coder.opaque](#) | [coder.ref](#) | [coder.wref](#)

<b>Purpose</b>	Determine if function is suitable for code generation
<b>Syntax</b>	<pre>coder.screener(fcn) coder.screener(fcn_1,...,fcn_n )</pre>
<b>Description</b>	<p><code>coder.screener(fcn)</code> analyzes the entry-point MATLAB function, <code>fcn</code>. It identifies unsupported functions and language features, such as recursion, cell arrays, nested functions, and function handles as code generation compliance issues and displays them in a report. If <code>fcn</code> calls other functions directly or indirectly that are not MathWorks® functions, <code>coder.screener</code> analyzes these functions too. It does not analyze MathWorks functions. <code>coder.screener</code> might not detect all code generation issues. Under certain circumstances, it might report false errors.</p> <p><code>coder.screener(fcn_1,...,fcn_n )</code> analyzes entry-point functions (<code>fcn_1,...,fcn_n</code>).</p>
<b>Tips</b>	<ul style="list-style-type: none"> <li>• Before using <code>coder.screener</code>, fix issues identified by the code analyzer.</li> <li>• Before generating code, use <code>coder.screener</code> to check that a function is suitable for code generation. Fix all the issues that it detects.</li> </ul>
<b>Input Arguments</b>	<p><b>fcn</b> Name of entry-point MATLAB function that you want to analyze.</p> <p><b>fcn_1,...,fcn_n</b> Comma-separated list of names of entry-point MATLAB functions that you want to analyze.</p>
<b>Examples</b>	<p><b>Identify Unsupported Functions</b></p> <p>The <code>coder.screener</code> function identifies calls to functions that are not supported for code generation. It checks both the entry-point function, <code>foo1</code>, and the function <code>foo2</code> that <code>foo1</code> calls.</p>


Analyze the MATLAB function `foo1` that calls `foo2`.

```
function out = foo1(in)
    out = foo2(in);
    disp(out);
end
```

```
function out = foo2(in)
    out = eval(in);
end
```

```
coder.screener('foo1')
```


The code generation readiness report opens. It provides a summary of the unsupported MATLAB function calls. The function `foo2` calls one unsupported MATLAB function.

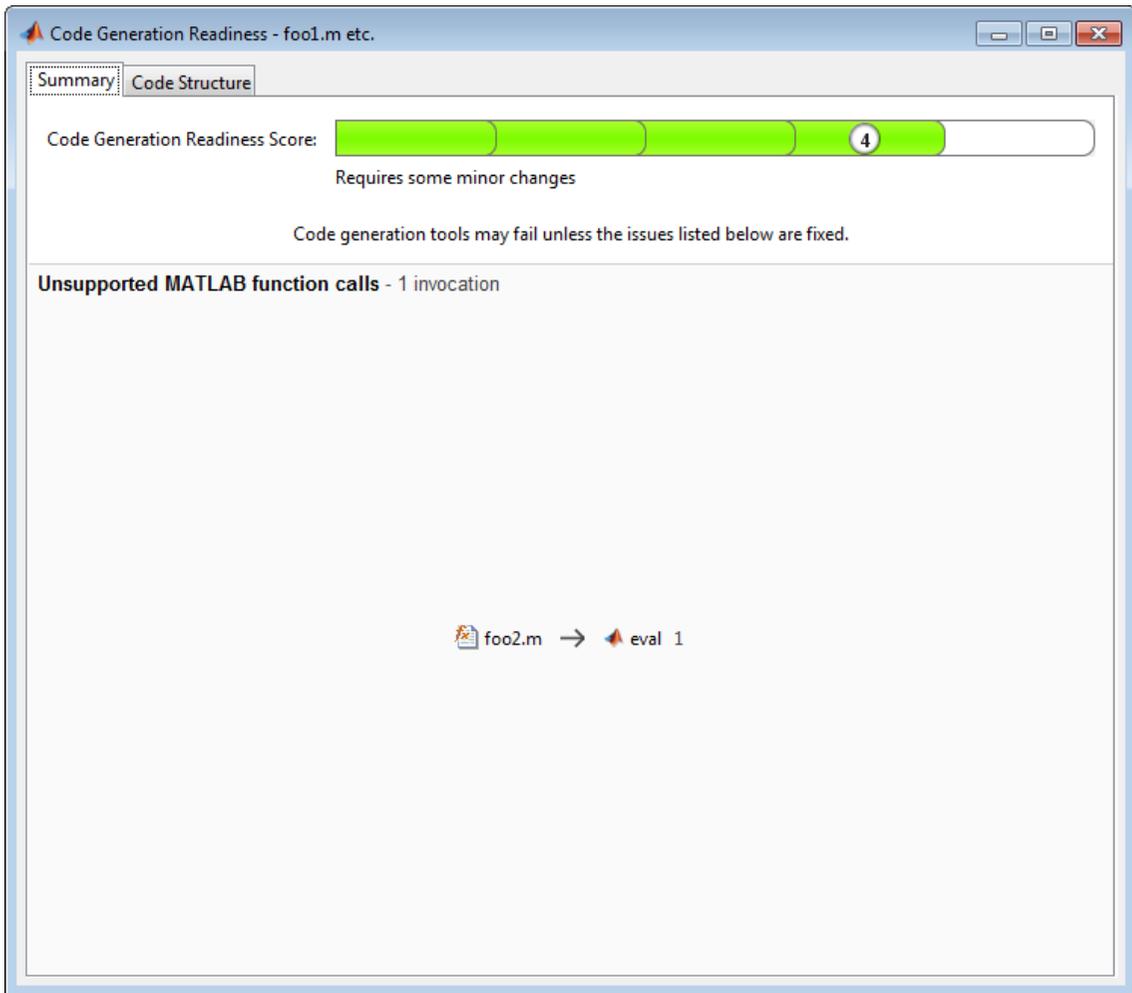

In the report, click the **Code Structure** tab and select **Show MATLAB functions**.

This tab displays a pie chart showing the relative size of each file and how suitable each file is for code generation. In this case, the report:

- Colors `foo1.m` green to indicate that it is suitable for code generation.
- Colors `foo2.m` yellow to indicate that some significant changes are required.
- Assigns `foo1.m` a code generation readiness score of 4 and `foo2.m` a score of 3. The score is based on a scale of 1 to 5. 1 indicates that significant changes are required; 5 indicates that the code generation readiness tool cannot detect issues.
- Displays a call tree.

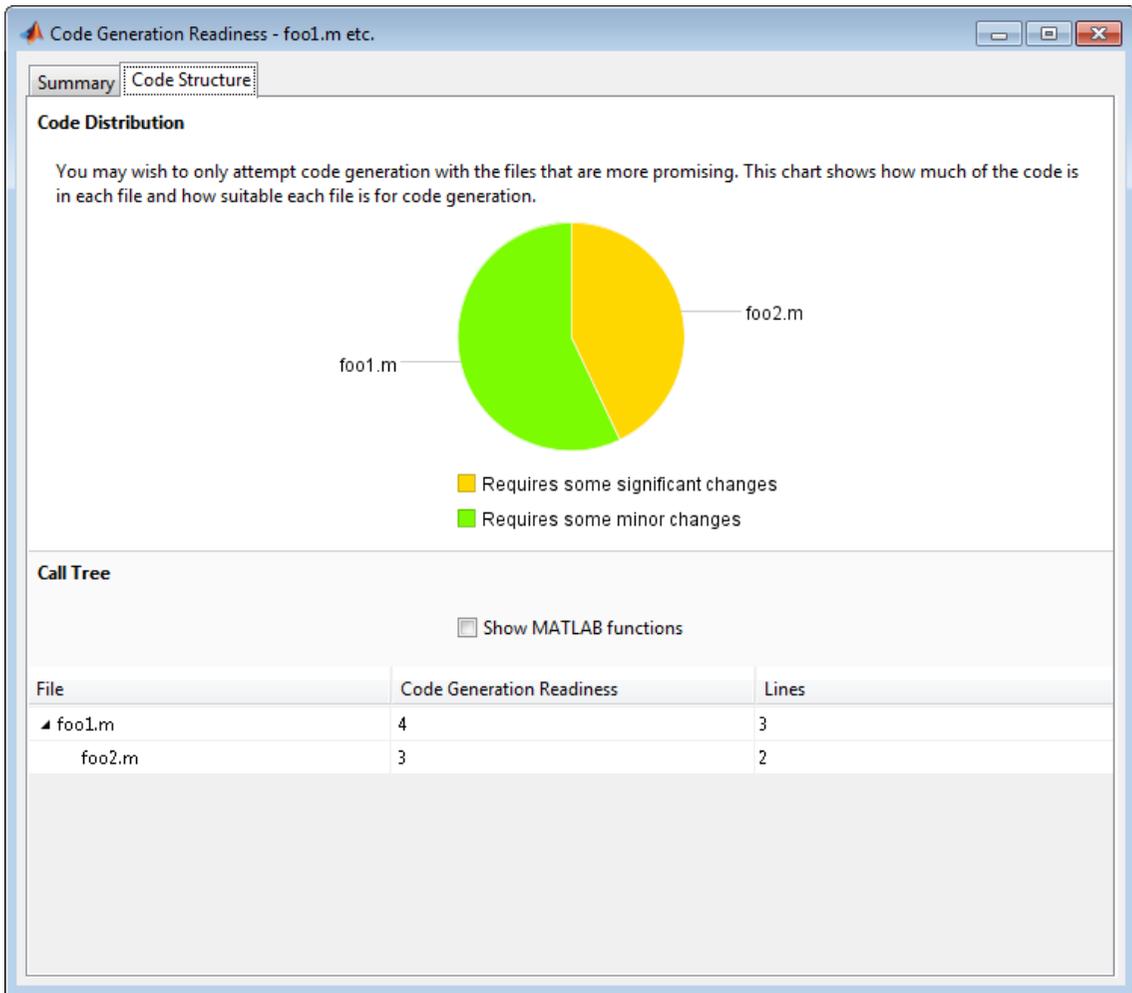

The report **Summary** tab indicates that `foo2.m` contains one call to the `eval` function which is not supported for code generation. To generate a MEX function for `foo2.m`, modify the code to make the call to `eval` extrinsic.

```
function out = foo2(in)
    coder.extrinsic('eval');
    out = eval(in);
end
```

Rerun the code generation readiness tool.

```
coder.screener('foo1')
```

The report no longer flags that the `eval` function is not supported for code generation. When you generate a MEX function for `foo1`, the code generation software automatically calls out to MATLAB for `eval`. For standalone code generation, it does not generate code for it.

## Identify Unsupported Data Types


The `coder.screener` function identifies data types that are not supported for code generation.

Analyze the MATLAB function `foo3` that uses unsupported data types.

```
function [outSparse,outCategorical] = foo3(inVal,inStr1,inStr2)
    outSparse = sparse(inVal);
    cellArray = {inStr1,inStr2};
    outCategorical = categorical(cellArray);
end
```

```
coder.screener('foo3')
```

The code generation readiness report opens. It provides a summary of the unsupported data types.

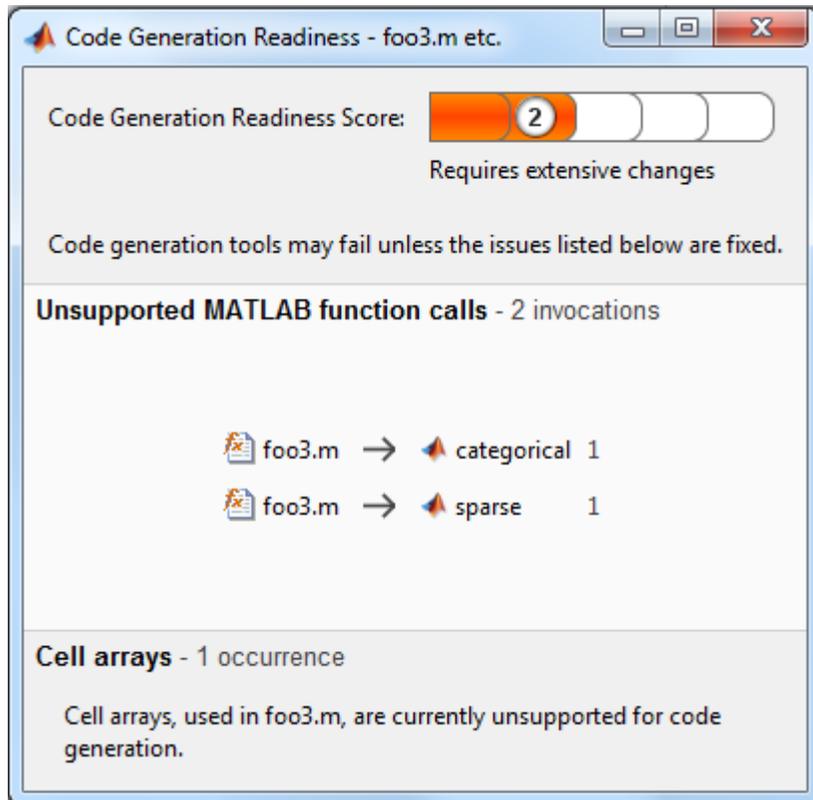

The report assigns the code a code readiness score of 2, indicating that the code requires extensive changes.

Before generating code, you must fix the reported issues.

### Determine code generation readiness for multiple entry-point functions

The `coder.screener` function identifies calls to functions that are not supported for code generation. It checks the entry-point functions `foo4` and `foo5`.


Analyze the MATLAB functions `foo4` and `foo5`.

```
function out = foo4(in)
    out = in;
    disp(out);
end
```

```
function out = foo5(in)
    out = eval(in);
end
```

```
coder.screener('foo4', 'foo5')
```


The code generation readiness report opens. It provides a summary of the unsupported MATLAB function calls. The function `foo5` calls one unsupported MATLAB function.

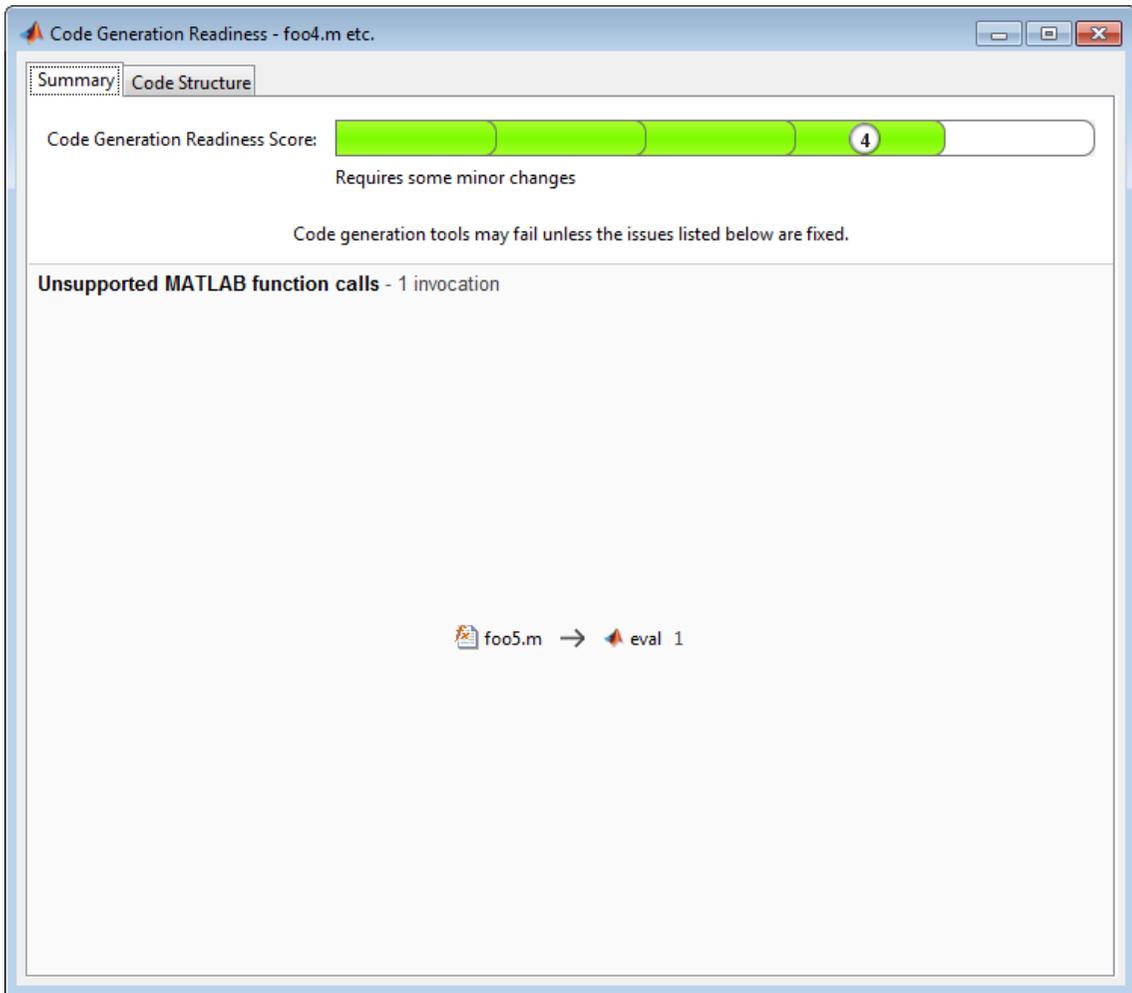

In the report, click the **Code Structure** tab and select **Show MATLAB functions**.

This tab displays a pie chart showing the relative size of each file and how suitable each file is for code generation. In this case, the report:

- Colors `foo1.m` green to indicate that it is suitable for code generation.
- Colors `foo2.m` yellow to indicate that some significant changes are required.
- Assigns `foo1.m` a code generation readiness score of 4 and `foo2.m` a score of 3. The score is based on a scale of 1 to 5. 1 indicates that significant changes are required; 5 indicates that the code generation readiness tool cannot detect issues.
- Displays a call tree.

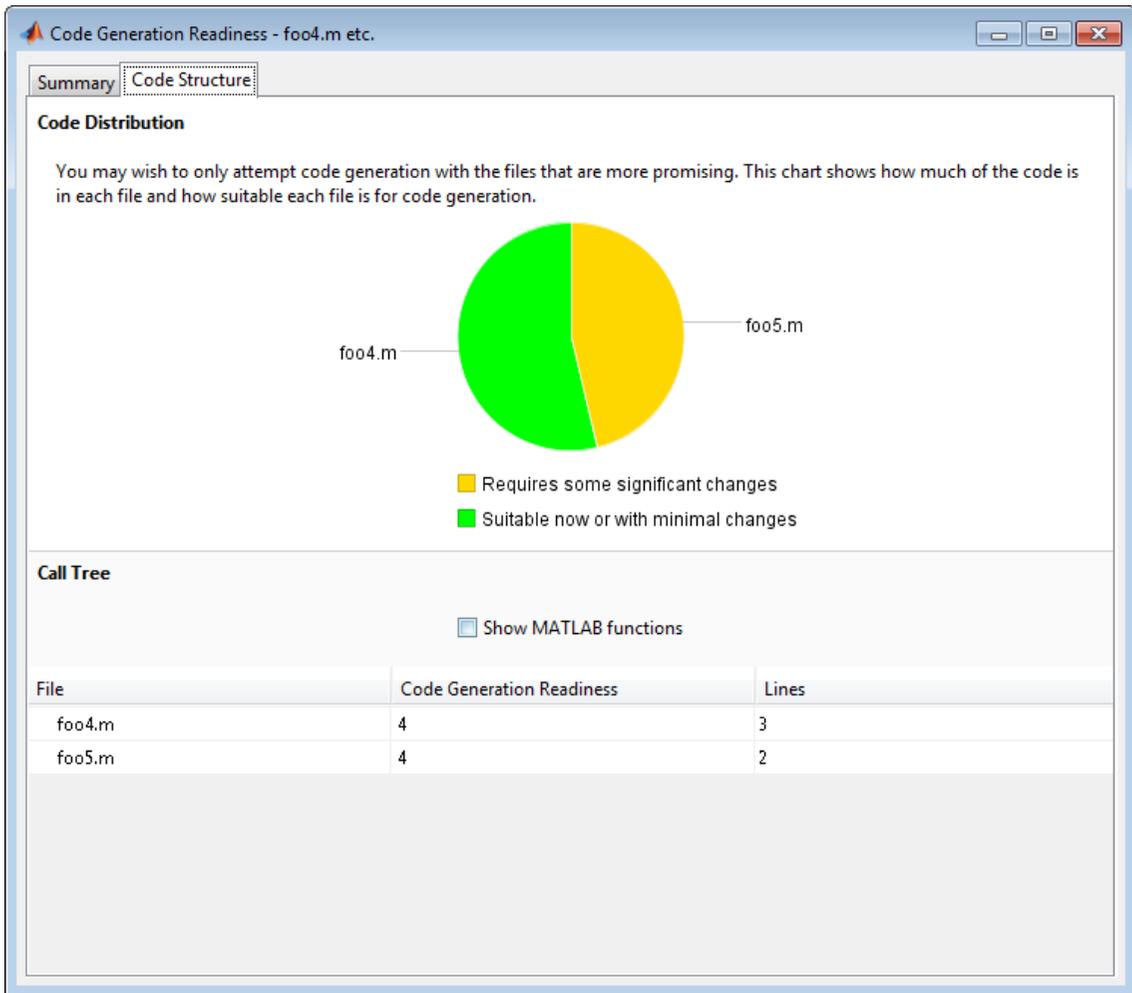

**Alternatives**

- “Run the Code Generation Readiness Tool From the Current Folder Browser”

## **Concepts**

- “Functions and Objects Supported for C and C++ Code Generation — Alphabetical List”
- “Functions and Objects Supported for C and C++ Code Generation — Categorical List”
- “Code Generation Readiness Tool”

**Purpose** Determine if code generation target is specified target

**Syntax** `tf = coder.target(target)`

**Description** `tf = coder.target(target)` returns true (1) if the code generation target is target. Otherwise, it returns false (0).

If you generate code for MATLAB classes, MATLAB computes class initial values at class loading time before code generation. If you use `coder.target` in MATLAB class property initialization, `coder.target('MATLAB')` returns true.

**Input Arguments**

**target - code generation target**

string

Code generation target specified as one of the following strings:

- 'MATLAB' Running in MATLAB (not generating code)
- 'MEX' Generating a MEX function
- 'Sfun' Simulating a Simulink model
- 'Rtw' Generating a LIB, DLL, or EXE target
- 'HDL' Generating an HDL target
- 'Custom' Generating a custom target

**Example:** `tf = coder.target('MATLAB')`

**Data Types**

char

**Examples**

**Use coder.target to parameterize a MATLAB function**

Parameterize a MATLAB function so that it works in MATLAB or generated code. When the function runs in MATLAB, it calls the MATLAB function `myabsval`. The generated code, however, calls a C library function `myabsval`.

Write a MATLAB function `myabsval`.

```
function y = myabsval(u)    %#codegen
y = abs(u);
```

Generate the C library for `myabsval.m`, using the `-args` option to specify the size, type, and complexity of the input parameter.

```
codegen -config:lib myabsval -args {0.0}
```

`codegen` creates the library `myabsval.lib` and header file `myabsval.h` in the folder `/codegen/lib/myabsval`. It also generates the functions `myabsval_initialize` and `myabsval_terminate` in the same folder.

Write a MATLAB function to call the generated C library function using `coder.ceval`.

```
function y = callmyabsval    %#codegen
y = -2.75;
% Check the target. Do not use coder.ceval if callmyabsval is
% executing in MATLAB
if coder.target('MATLAB')
    % Executing in MATLAB, call function myabsval
    y = myabsval(y);
else
    % Executing in the generated code.
    % Call the initialize function before calling the
    % C function for the first time
    coder.ceval('myabsval_initialize');

    % Call the generated C library function myabsval
    y = coder.ceval('myabsval',y);

    % Call the terminate function after
    % calling the C function for the last time
    coder.ceval('myabsval_terminate');
end
```

Convert `callmyabsval.m` to the MEX function `callmyabsval_mex`.

```
codegen -config:mex callmyabsval codegen/lib/myabsval/myabsval.lib...
        codegen/lib/myabsval/myabsval.h
```

Run the MATLAB function `callmyabsval`.

```
callmyabsval
```

```
ans =
```

```
    2.7500
```

Run the MEX function `callmyabsval_mex` which calls the library function `myabsval`.

```
callmyabsval_mex
```

```
ans =
```

```
    2.7500
```

**See Also**

```
coder.ceval
```

# coder.typeof

---

**Purpose** Convert MATLAB value into its canonical type

**Syntax**

```
t=coder.typeof(v)
t=coder.typeof(v, sz, variable_dims)
t=coder.typeof(t)
```

**Description** `t=coder.typeof(v)` creates a `coder.Type` object denoting the smallest nonconstant type that contains `v`. `v` must be a MATLAB numeric, logical, char, enumeration or fixed-point array, or a struct constructed from the preceding types. Use `coder.typeof` to specify only input parameter types.

`t=coder.typeof(v, sz, variable_dims)` returns a modified copy of `t=coder.typeof(v)` with (upper bound) size specified by `sz` and variable dimensions `variable_dims`. If `sz` specifies `inf` for a dimension, then the size of the dimension is unbounded and the dimension is variable size. When `sz` is `[]`, the (upper bound) sizes of `v` remain unchanged. If you do not specify the `variable_dims` input parameter, the bounded dimensions of the type are fixed. When `variable_dims` is a scalar, it is applied to bounded dimensions or dimensions that are 1 or 0, which are fixed.

`t=coder.typeof(t)`, where `t` is a `coder.Type` object, returns `t` itself.

## Input Arguments

**sz**  
Size vector specifying each dimension of type object

**t**  
`coder.Type` object

**v**  
MATLAB expression that describes the set of values represented by this type.

`v` must be a MATLAB numeric, logical, char, enumeration or fixed-point array, or a struct constructed from the preceding types.

**variable\_dims**

Logical vector that specifies whether each dimension is variable size (true) or fixed size (false).

**Default:** false(size(sz)) | sz==Inf

**Output Arguments**

**t**  
coder.Type object

**Examples**

Create a type for a simple fixed-size 5x6 matrix of doubles.

```
coder.typeof(ones(5, 6))
% returns 5x6 double
coder.typeof(0, [5 6])
% also returns 5x6 double
```

Create a type for a variable-size matrix of doubles.

```
coder.typeof(ones(3,3), [], 1)
% returns :3 x :3 double
% ':' indicates variable-size dimensions
```

Create a type for a structure with a variable-size field.

```
x.a = coder.typeof(0,[3 5],1);
x.b = magic(3);
coder.typeof(x)
% Returns
% coder.StructType
% 1x1 struct
% a: :3x:5 double
% b: 3x3 double
% ':' indicates variable-size dimensions
```

---

Create a type for a matrix with fixed-size and variable-size dimensions.

```
coder.typeof(0, [2,3,4], [1 0 1]);  
% Returns :2x3x:4 double  
% ':' indicates variable-size dimensions
```

---

```
coder.typeof(10, [1 5], 1)  
% returns double 1 x :5  
% ':' indicates variable-size dimensions
```

---

Create a type for a matrix of doubles, first dimension unbounded, second dimension with fixed size.

```
coder.typeof(10,[inf,3])  
% returns double:inf x 3  
% ':' indicates variable-size dimensions
```

---

Create a type for a matrix of doubles, first dimension unbounded, second dimension with variable size with an upper bound of 3.

```
coder.typeof(10, [inf,3],[0 1])  
% returns double :inf x :3  
% ':' indicates variable-size dimensions
```

---

Convert a fixed-sized matrix to a variable-sized matrix.

```
coder.typeof(ones(5,5), [], 1)  
% returns double :5x:5  
% ':' indicates variable-size dimensions
```

---

Create a nested structure (a structure as a field of another structure).

```
S = struct('a',double(0),'b',single(0))
SuperS.x = coder.typeof(S)
SuperS.y = single(0)
coder.typeof(SuperS)
% Returns
% coder.StructType
% SuperS: 1x1 struct
%   with fields
%     x: 1x1 struct
%       with fields
%         a: 1x1 double
%         b: 1x1 single
%     y: 1x1 single
```

Create a structure containing a variable-size array of structures as a field.

```
S = struct('a',double(0),'b',single(0))
SuperS.x = coder.typeof(S,[1 inf],[0 1])
SuperS.y = single(0)
coder.typeof(SuperS)
% Returns
% coder.StructType
% SuperS: 1x1 struct
%   with fields
%     x: 1x:inf struct
%       with fields
%         a: 1x1 double
%         b: 1x1 single
%     y: 1x1 single
% ':' indicates variable-size dimensions
```

## **Tips**

- If you are already specifying the type of an input variable using a type function, do not use `coder.typeof` unless you also want to specify the size. For instance, instead of `coder.typeof(single(0))`, use the syntax `single(0)`.

**Purpose**

Copy body of for-loop in generated code for each iteration

**Syntax**

```
for i = coder.unroll(range)
for i = coder.unroll(range, flag)
```

**Description**

for *i* = coder.unroll(*range*) copies the body of a for-loop (unrolls a for-loop) in generated code for each iteration specified by the bounds in *range*. *i* is the loop counter variable.

for *i* = coder.unroll(*range*, *flag*) unrolls a for-loop as specified in *range* if *flag* is true.

You must use coder.unroll in a for-loop header. coder.unroll modifies the generated code, but does not change the computed results.

coder.unroll must be able to evaluate the bounds of the for-loop at compile time. The number of iterations cannot exceed 1024; unrolling large loops can increase compile time significantly and generate inefficient code

This function is ignored outside of code generation.

**Input Arguments**

**flag**

Boolean expression that indicates whether to unroll the for-loop:

true Unroll the for-loop

false Do not unroll the for-loop

**range**

Specifies the bounds of the for-loop iteration:

<code>init_val : end_val</code>	Iterate from <code>init_val</code> to <code>end_val</code> , using an increment of 1
<code>init_val : step_val : end_val</code>	Iterate from <code>init_val</code> to <code>end_val</code> , using <code>step_val</code> as an increment if positive or as a decrement if negative
Matrix variable	Iterate for a number of times equal to the number of columns in the matrix

## Examples

To limit the number of times to copy the body of a for-loop in generated code:

- 1 Write a MATLAB function `getrand(n)` that uses a for-loop to generate a vector of length `n` and assign random numbers to specific elements. Add a test function `test_unroll`. This function calls `getrand(n)` with `n` equal to values both less than and greater than the threshold for copying the for-loop in generated code.

```
function [y1, y2] = test_unroll() %#codegen
% The directive %#codegen indicates that the function
% is intended for code generation
% Calling getrand 8 times triggers unroll
y1 = getrand(8);
% Calling getrand 50 times does not trigger unroll
y2 = getrand(50);
```

```
function y = getrand(n)
% Turn off inlining to make
% generated code easier to read
coder.inline('never');

% Set flag variable dounroll to repeat loop body
% only for fewer than 10 iterations
dounroll = n < 10;
```

```

% Declare size, class, and complexity
% of variable y by assignment
y = zeros(n, 1);
% Loop body begins
for i = coder.unroll(1:2:n, dounroll)
    if (i > 2) && (i < n-2)
        y(i) = rand();
    end;
end;
% Loop body ends

```

- 2** In the default output folder, `codegen/lib/test_unroll`, generate C static library code for `test_unroll` :

```
codegen -config:lib test_unroll
```

In `test_unroll.c`, the generated C code for `getrand(8)` repeats the body of the for-loop (unrolls the loop) because the number of iterations is less than 10:

```

static void getrand(double y[8])
{
    /* Turn off inlining to make */
    /* generated code easier to read */
    /* Set flag variable dounroll to repeat loop body */
    /* only for fewer than 10 iterations */
    /* Declare size, class, and complexity */
    /* of variable y by assignment */
    memset(&y[0], 0, sizeof(double) << 3);

    /* Loop body begins */
    y[2] = b_rand();
    y[4] = b_rand();

    /* Loop body ends */
}

```

The generated C code for `getrand(50)` does not unroll the for-loop because the number of iterations is greater than 10:

```
static void b_getrand(double y[50])
{
    int i;
    int b_i;

    /* Turn off inlining to make */
    /* generated code easier to read */
    /* Set flag variable dounroll to repeat loop body */
    /* only for fewer than 10 iterations */
    /* Declare size, class, and complexity */
    /* of variable y by assignment */
    memset(&y[0], 0, 50U * sizeof(double));

    /* Loop body begins */
    for (i = 0; i < 25; i++) {
        b_i = (i << 1) + 1;
        if ((b_i > 2) && (b_i < 48)) {
            y[b_i - 1] = b_rand();
        }
    }
}
```

||| for

## How To

- “Using Logicals in Array Indexing”
-

## Purpose

Update build information object RTW.BuildInfo

## Syntax

```
coder.updateBuildInfo('addCompileFlags',options)
coder.updateBuildInfo('addLinkFlags',options)
coder.updateBuildInfo('addDefines',options)
coder.updateBuildInfo(___,group)

coder.updateBuildInfo('addLinkObjects',filename,path)
coder.updateBuildInfo('addLinkObjects',filename,path,
priority,
    precompiled)
coder.updateBuildInfo('addLinkObjects',filename,path,
priority,
    precompiled,linkonly)
coder.updateBuildInfo(___,group)

coder.updateBuildInfo('addNonBuildFiles',filename)
coder.updateBuildInfo('addSourceFiles',filename)
coder.updateBuildInfo('addIncludeFiles',filename)
coder.updateBuildInfo(___,path)
coder.updateBuildInfo(___,path,group)

coder.updateBuildInfo('addSourcePaths',path)
coder.updateBuildInfo('addIncludePaths',path)
coder.updateBuildInfo(___,group)
```

## Description

`coder.updateBuildInfo('addCompileFlags',options)` adds compiler options to the build information object.

`coder.updateBuildInfo('addLinkFlags',options)` adds link options to the build information object.

`coder.updateBuildInfo('addDefines',options)` adds preprocessor macro definitions to the build information object.

## **coder.updateBuildInfo**

---

`coder.updateBuildInfo( ____,group)` assigns a group name to options for later reference.

`coder.updateBuildInfo('addLinkObjects',filename,path)` adds a link object from a file to the build information object.

`coder.updateBuildInfo('addLinkObjects',filename,path,priority,precompiled)` specifies if the link object is precompiled.

`coder.updateBuildInfo('addLinkObjects',filename,path,priority,precompiled,linkonly)` specifies if the object is to be built before being linked or used for linking alone. If the object is to be built, it specifies if the object is precompiled.

`coder.updateBuildInfo( ____,group)` assigns a group name to the link object for later reference.

`coder.updateBuildInfo('addNonBuildFiles',filename)` adds a nonbuild-related file to the build information object.

`coder.updateBuildInfo('addSourceFiles',filename)` adds a source file to the build information object.

`coder.updateBuildInfo('addIncludeFiles',filename)` adds an include file to the build information object.

`coder.updateBuildInfo( ____,path)` adds the file from specified path.

`coder.updateBuildInfo( ____,path,group)` assigns a group name to the file for later reference.

`coder.updateBuildInfo('addSourcePaths', path)` adds a source file path to the build information object.

`coder.updateBuildInfo('addIncludePaths', path)` adds an include file path to the build information object.

`coder.updateBuildInfo( ____, group)` assigns a group name to the path for later reference.

## Input Arguments

### options - Build options

string

Build options, specified as a string. The string must be a compile-time constant.

Depending on the leading argument, `options` specifies the relevant build options to be added to the project's build information.

Leading Argument	Values in options
'addCompileFlags'	Compiler options
'addLinkFlags'	Link options
'addDefines'	Preprocessor macro definitions

The function adds the options to the end of an option vector.

**Example:** `coder.updateBuildInfo('addCompileFlags', '-Zi -Wall')`

### group - Group name

string

Name of user-defined group, specified as a string. The string must be a compile-time constant.

The group option assigns a group name to the parameters in the second argument.

## coder.updateBuildInfo

---

Leading Argument	Second Argument	Parameters Named by group
'addCompileFlags'	options	Compiler options
'addLinkFlags'	options	Link options
'addLinkObjects'	filename	Name of file containing linkable objects
'addNonBuildFiles'	filename	Name of nonbuild-related file
'addSourceFiles'	filename	Name of source file
'addSourcePaths'	path	Name of source file path

You can use group to:

- Document the use of specific parameters.
- Retrieve or apply multiple parameters together as one group.

### **filename - File name**

string

File name, specified as a string. The string must be a compile-time constant.

Depending on the leading argument, `filename` specifies the relevant file to be added to the project's build information.

Leading Argument	File Specified by filename
'addLinkObjects'	File containing linkable objects
'addNonBuildFiles'	Nonbuild-related file
'addSourceFiles'	Source file

The function adds the file name to the end of a file name vector.

### path - Full path name

string

Full path name, specified as a string. The string must be a compile-time constant.

Depending on the leading argument, `path` specifies the relevant path name to be added to the project's build information.

Leading Argument	Path Specified by path
'addLinkObjects'	Path to linkable objects
'addNonBuildFiles'	Path to nonbuild-related files
'addSourceFiles', 'addSourcePaths'	Path to source files

The function adds the path to the end of a path name vector.

### priority - Relative priority of link object

Priority of link objects.

This feature applies only when several link objects are added. Currently, only a single link object file can be added for every `coder.updateBuildInfo` statement. Therefore, this feature is not available for use.

To use the succeeding arguments, include `' '` as a placeholder argument.

### precompiled - Variable indicating if link objects are precompiled

logical value

Variable indicating if the link objects are precompiled, specified as a logical value. The value must be a compile-time constant.

If the link object has been prebuilt for faster compiling and linking and exists in a specified location, specify `true`. Otherwise, the MATLAB Coder build process creates the link object in the build folder.

If `linkonly` is set to `true`, this argument is ignored.

## Data Types

logical

### **linkonly - Variable indicating if objects must be used for linking only**

logical value

Variable indicating if objects must be used for linking only, specified as a logical value. The value must be a compile-time constant.

If you want that the MATLAB Coder build process must not build or generate rules in the makefile for building the specified link object, specify `true`. Instead, when linking the final executable, the process should just include the object. Otherwise, rules for building the link object are added to the makefile.

You can use this argument to incorporate link objects for which source files are not available.

If `linkonly` is set to `true`, the value of `precompiled` is ignored.

## Data Types

logical

## Examples

### **Add Multiple Compiler Options**

Add the compiler options `-Zi` and `-Wall` during code generation for function, `func`.

Anywhere in the MATLAB code for `func`, add the following line:

```
coder.updateBuildInfo('addCompileFlags', '-Zi -Wall');
```

Generate code for `func` using the `codegen` command. Open the Code Generation Report.

```
codegen -config:lib -launchreport func
```

### **Add Source File Name**

Add a source file to the project build information while generating code for a function, `calc_factorial`.

- 1 Write a header file `fact.h` that declares a C function `factorial`.

```
double factorial(double x);
```

`fact.h` will be included as a header file in generated code. This inclusion ensures that the function is declared before it is called.

Save the file in the current folder.

- 2 Write a C file `fact.c` that contains the definition of `factorial`. `factorial` calculates the factorial of its input.

```
#include "fact.h"

double factorial(double x)
{
    int i;
    double fact = 1.0;
    if (x == 0 || x == 1) {
        return 1.0;
    } else {
        for (i = 1; i <= x; i++) {
            fact *= (double)i;
        }
        return fact;
    }
}
```

`fact.c` is used as a source file during code generation.

Save the file in the current folder.

- 3 Write a MATLAB function `calc_factorial` that uses `coder.ceval` to call the external C function `factorial`.

## coder.updateBuildInfo

---

Use `coder.updateBuildInfo` with option `'addSourceFiles'` to add the source file `fact.c` to the build information. Use `coder.cinclude` to include the header file `fact.h` in the generated code.

```
function y = calc_factorial(x) %#codegen

    coder.cinclude('fact.h');
    coder.updateBuildInfo('addSourceFiles', 'fact.c');

    y = 0;
    y = coder.ceval('factorial', x);
```

**4** Generate code for `calc_factorial` using the `codegen` command.

```
codegen -config:dll -launchreport calc_factorial -args 0
```

### Add Link Object

Add a link object `LinkObj.lib` to the build information while generating code for a function `func`. For this example, you must have a link object `LinkObj.lib` saved in a local folder, for example, `c:\Link_Objects`.

Anywhere in the MATLAB code for `func`, add the following lines:

```
libPriority = '';
libPreCompiled = true;
libLinkOnly = true;
libName = 'LinkObj.lib';
libPath = 'c:\Link_Objects';
coder.updateBuildInfo('addLinkObjects', libName, libPath, ...
    libPriority, libPreCompiled, libLinkOnly);
```

Generate a MEX function for `func` using the `codegen` command. Open the Code Generation Report.

```
codegen -launchreport func
```

## Add Include Paths

Add an include path to the build information while generating code for a function, `adder`. Include a header file, `adder.h`, existing on the path.

When header files do not reside in the current folder, to include them, use this method:

- 1 Write a header file `mysum.h` that contains the declaration for a C function `mysum`.

```
double mysum(double, double);
```

Save it in a local folder, for example `c:\coder\myheaders`.

- 2 Write a C file `mysum.c` that contains the definition of the function `mysum`.

```
#include "mysum.h"

double mysum(double x, double y)
{
    return(x+y);
}
```

Save it in the current folder.

- 3 Write a MATLAB function `adder` that adds the path `c:\coder\myheaders` to the build information.

Use `coder.cinclude` to include the header file `mysum.h` in the generated code.

```
function y = adder(x1, x2) %#codegen
    coder.updateBuildInfo('addIncludePaths','c:\coder\myheaders');
    coder.updateBuildInfo('addSourceFiles','mysum.c');
    %Include the source file containing C function definition
    coder.cinclude('mysum.h');
```

## **coder.updateBuildInfo**

---

```
y = 0;
if coder.target('MATLAB')
    % This line ensures that the function works in MATLAB
    y = x1 + x2;
else
    y = coder.ceval('mysum', x1, x2);
end
end
```

- 4** Generate code for adder using the codegen command.

```
codegen -config:lib -launchreport adder -args {0,0}
```

**Purpose**

Declare variable-size data

**Syntax**

```
coder.versize('var1', 'var2', ...)
coder.versize('var1', 'var2', ..., ubound)
coder.versize('var1', 'var2', ..., ubound, dims)
coder.versize('var1', 'var2', ..., [], dims)
```

**Description**

`coder.versize('var1', 'var2', ...)` declares one or more variables as variable-size data, allowing subsequent assignments to extend their size. Each `'varn'` must be a quoted string that represents a variable or structure field. If the structure field belongs to an array of structures, use colon (`:`) as the index expression to make the field variable-size for all elements of the array. For example, the expression `coder.versize('data(:).A')` declares that the field `A` inside each element of `data` is variable sized.

`coder.versize('var1', 'var2', ..., ubound)` declares one or more variables as variable-size data with an explicit upper bound specified in `ubound`. The argument `ubound` must be a constant, integer-valued vector of upper bound sizes for every dimension of each `'varn'`. If you specify more than one `'varn'`, each variable must have the same number of dimensions.

`coder.versize('var1', 'var2', ..., ubound, dims)` declares one or more variables as variable-sized with an explicit upper bound and a mix of fixed and varying dimensions specified in `dims`. The argument `dims` is a logical vector, or double vector containing only zeros and ones. Dimensions that correspond to zeros or `false` in `dims` have fixed size; dimensions that correspond to ones or `true` vary in size. If you specify more than one variable, each fixed dimension must have the same value across all `'varn'`.

`coder.versize('var1', 'var2', ..., [], dims)` declares one or more variables as variable-sized with a mix of fixed and varying dimensions. The empty vector `[]` means that you do not specify an explicit upper bound.

When you do *not* specify `ubound`, the upper bound is computed for each `'varn'` in generated code.

When you do *not* specify *dims*, dimensions are assumed to be variable except the singleton ones. A singleton dimension is a dimension for which `size(A,dim) = 1`.

You must add the `coder.versize` declaration before each '`varn`' is used (read). You may add the declaration before the first assignment to each '`varn`'.

`coder.versize` cannot be applied to global variables.

`coder.versize` is not supported for MATLAB class properties.

You cannot use `coder.versize` outside the MATLAB code intended for code generation. For example, the following code does not declare the variable, `var`, as variable-size data:

```
coder.versize('var',10);  
codegen -config:lib MyFile -args var
```

Instead, include the `coder.versize` statement inside `MyFile` to declare `var` as variable-size data. Alternatively, you can use `coder.typeof` to declare `var` as variable-size outside `MyFile`. It can then be passed to `MyFile` during code generation using the `-args` option. For more information, see `coder.typeof`.

### Examples

#### **Develop a simple stack that varies in size up to 32 elements as you push and pop data at run time.**

Write primary function `test_stack` to issue commands for pushing data on and popping data from a stack.

```
function test_stack %#codegen  
    % The directive %#codegen indicates that the function  
    % is intended for code generation  
    stack('init', 32);  
    for i = 1 : 20  
        stack('push', i);  
    end  
    for i = 1 : 10  
        value = stack('pop');
```

```

        % Display popped value
        value
    end
end

```

Write local function `stack` to execute the push and pop commands.

```

function y = stack(command, varargin)
    persistent data;
    if isempty(data)
        data = ones(1,0);
    end
    y = 0;
    switch (command)
    case {'init'}
        coder.varsize('data', [1, varargin{1}], [0 1]);
        data = ones(1,0);
    case {'pop'}
        y = data(1);
        data = data(2:size(data, 2));
    case {'push'}
        data = [varargin{1}, data];
    otherwise
        assert(false, ['Wrong command: ', command]);
    end
end

```

The variable `data` is the stack. The statement `coder.varsize('data', [1, varargin{1}], [0 1])` declares that:

- `data` is a row vector
- Its first dimension has a fixed size
- Its second dimension can grow to an upper bound of 32

Generate a MEX function for `test_stack`:

```
codegen -config:mex test_stack
```

codegen generates a MEX function in the current folder.

Run `test_stack` to get these results:

```
value =  
    20
```

```
value =  
    19
```

```
value =  
    18
```

```
value =  
    17
```

```
value =  
    16
```

```
value =  
    15
```

```
value =  
    14
```

```
value =  
    13
```

```
value =  
    12
```

```
value =  
    11
```

At run time, the number of items in the stack grows from zero to 20, and then shrinks to 10.

## Declare a variable-size structure field.

Write a function `struct_example` that declares an array `data`, where each element is a structure that contains a variable-size field:

```
function y=struct_example() %#codegen

    d = struct('values', zeros(1,0), 'color', 0);
    data = repmat(d, [3 3]);
    coder.versize('data(:).values');

    for i = 1:numel(data)
        data(i).color = rand-0.5;
        data(i).values = 1:i;
    end

    y = 0;
    for i = 1:numel(data)
        if data(i).color > 0
            y = y + sum(data(i).values);
        end;
    end
end
```

The statement `coder.versize('data(:).values')` marks as variable-size the field `values` inside each element of the matrix `data`.

Generate a MEX function for `struct_example`:

```
codegen -config:mex struct_example
```

Run `struct_example`.

Each time you run `struct_example` you get a different answer because the function loads the array with random numbers.

## Tips

- If you use input variables (or result of a computation using input variables) to specify the size of an array, it is declared as variable-size

## coder.versize

---

in the generated code. Do not use `coder.versize` on the array again, unless you also want to specify an upper bound for its size.

- Using `coder.versize` on an array without explicit upper bounds causes dynamic memory allocation of the array. This can reduce speed of generated code. To avoid this, use the syntax `coder.versize('var1', 'var2', ..., ubound)` to specify an upper bound for the array size (if you know it in advance).

### See Also

[assert](#) | [size](#) | [varargin](#)

### How To

- “Incompatibilities with MATLAB in Variable-Size Support for Code Generation”

**Purpose** Pass argument by reference as write-only output

**Syntax** `[y =] coder.ceval('function_name',  
coder.wref(arg0), ... u_n);`

**Arguments** `arg0`  
Variable passed by reference as a *write-only* output to the external C/C++ function called in `coder.ceval`.

**Description** `[y =] coder.ceval('function_name', coder.wref(arg0), ... u_n);` passes the variable `arg0` by reference as a *write-only* output to the external C/C++ function called in `coder.ceval`. You add `coder.wref` inside `coder.ceval` as an argument to `function_name`. The argument list can contain multiple `coder.wref` constructs. Add a separate `coder.wref` construct for each write-only argument that you want to pass by reference to `function_name`.

---

### Caution

The generated code assumes that a variable passed by `coder.wref` is *write-only* and optimizes the code accordingly. Consequently, the C/C++ function must write to the variable. If the variable is a vector or matrix, the C/C++ function must write to *every* element of the variable. Otherwise, results are unpredictable.

---

Only use `coder.wref` in MATLAB code that you have compiled with `codegen`. `coder.wref` generates an error in uncompiled MATLAB code.

**Examples** In the following example, a MATLAB function `fcn` has a single input `u` and a single output `y`, a 5-by-10 matrix. `fcn` calls a C function `init` to initialize the matrix, passing `y` by reference as a write-only output. Here is the MATLAB function code:

```
function y = fcn(u)
%#codegen
```

```
y = zeros(5,10);  
coder.ceval('init', coder.wref(y));
```

The C function prototype for `init` must be as follows:

```
void init(double *x);
```

In this example:

- Although the C function is void, `coder.wref` allows it to access, modify, and return a matrix to the MATLAB function.
- The C function prototype defines the output as a pointer because it is passed by reference.
- For C/C++ code generation, you must set the type of the output `y` explicitly—in this case to a matrix of type `double`.
- The generated code collapses matrices to a single dimension.

### See Also

`coder.ceval` | `coder.ref` | `coder.rref`

# coder.BuildConfig.getHardwareImplementation

---

<b>Purpose</b>	Get handle of copy of hardware implementation object
<b>Syntax</b>	<code>hw = bldcfg.getHardwareImplementation()</code>
<b>Description</b>	<code>hw = bldcfg.getHardwareImplementation()</code> returns the handle of a copy of the hardware implementation object.
<b>Input Arguments</b>	<b>bldcfg</b> coder.BuildConfig object.
<b>Output Arguments</b>	<b>hw</b> Handle of copy of hardware implementation object.

# coder.BuildConfig.getStdLibInfo

---

**Purpose** Get standard library information

**Syntax** [linkLibPath,linkLibExt,execLibExt,libPrefix]=  
bldcfg.getStdLibInfo()

**Description** [linkLibPath,linkLibExt,execLibExt,libPrefix]=  
bldcfg.getStdLibInfo() returns strings representing the:

- Standard MATLAB architecture-specific library path
- Platform-specific library file extension for use at link time
- Platform-specific library file extension for use at run time
- Standard architecture-specific library name prefix

## Input Arguments

**bldcfg**  
coder.BuildConfig object.

## Output Arguments

**linkLibPath**  
Standard MATLAB architecture-specific library path specified as a string. The string can be empty.

**linkLibExt**  
Platform-specific library file extension for use at link time, specified as a string. The value is one of '.lib', '.dylib', '.so', ''.

**execLibExt**  
Platform-specific library file extension for use at run time, specified as a string. the value is one of '.dll', '.dylib', '.so', ''.

**linkPrefix**  
Standard architecture-specific library name prefix, specified as a string. The string can be empty.

<b>Purpose</b>	Get target code generation language
<b>Syntax</b>	<code>lang = bldcfg.getTargetLang()</code>
<b>Description</b>	<code>lang = bldcfg.getTargetLang()</code> returns a string containing the target code generation language.
<b>Input Arguments</b>	<b>bldcfg</b> coder.BuildConfig object.
<b>Output Arguments</b>	<b>lang</b> A string containing the target code generation language. The value is 'C' or 'C++'.

# coder.BuildConfig.getToolchainInfo

---

**Purpose** Returns handle of copy of toolchain information object

**Syntax** `tc = bldcfg.getToolchainInfo()`

**Description** `tc = bldcfg.getToolchainInfo()`

**Input Arguments** **bldcfg**  
coder.BuildConfig object.

**Output Arguments** **tc**  
Handle of copy of toolchain information object.

**Purpose** Determine if build configuration represents specified target

**Syntax** `tf = bldcfg.method(target)`

**Description** `tf = bldcfg.method(target)` returns true (1) if the code generation target of the current build configuration represents the code generation target specified by `target`. Otherwise, it returns false (0).

## Input Arguments

### **bldcfg**

coder.BuildConfig object.

### **target**

Code generation target specified as a string or cell array of strings.

Specify	For code generation target
'rtw'	C/C++ dynamic Library, C/C++ static library, or C/C++ executable
'sfun'	S-function (Simulation)
'mex'	MEX-function

Specify `target` as a cell array of strings to test if the code generation target of the build configuration represents one of the targets specified in the cell array.

For example:

```
...  
mytarget = {'sfun','mex'};  
tf = bldcfg.isCodeGenTarget(mytarget);  
...
```

tests whether the build context represents an S-function target or a MEX-function target.

# coder.BuildConfig.isCodeGenTarget

---

## Output Arguments

**tf**

The value is true (1) if the code generation target of the build configuration represents the code generation target specified by target. Otherwise, the value is false (0).

## See Also

`coder.target`

<b>Purpose</b>	Determine if hardware implementation object target is MATLAB host computer
<b>Syntax</b>	<code>tf = bldcfg.isMatlabHostTarget()</code>
<b>Description</b>	<code>tf = bldcfg.isMatlabHostTarget()</code> returns true (1) if the current hardware implementation object targets the MATLAB host computer. Otherwise, it returns false (0).
<b>Input Arguments</b>	<b>bldcfg</b> coder.BuildConfig object.
<b>Output Arguments</b>	<b>tf</b> Value is true (1) if the current hardware implementation object targets the MATLAB host computer. Otherwise, the value is false (0).

# coder.ExternalDependency.getDescriptiveName

---

**Purpose** Return descriptive name for external dependency

**Syntax** `extname =  
coder.ExternalDependency.getDescriptiveName(bldcfg)`

**Description** `extname =  
coder.ExternalDependency.getDescriptiveName(bldcfg)` returns the name that you want to associate with an “external dependency” on page 2-136. The code generation software uses the external dependency name for error messages.

**Input Arguments** **bldcfg**  
`coder.BuildConfig` object. Use `coder.BuildConfig` methods to get information about the “build context” on page 2-136  
You can use this information when you want to return different names based on the build context.

**Output Arguments** **extname**  
External dependency name returned as a string.

**Definitions** **external dependency**  
External code interface represented by a class derived from a `coder.ExternalDependency` class. The external code can be a library, object files, or C/C++ source.

## **build context**

Information used by the build process including:

- Target language
- Code generation target
- Target hardware
- Build toolchain

# coder.ExternalDependency.getDescriptiveName

---

## Examples

### Return external dependency name

Define a method that always returns the same name.

```
function myextname = getDescriptiveName(~)
    myextname = 'MyLibrary'
end
```

### Return external library name based on the code generation target

Define a method that uses the build context to determine the name.

```
function myextname = getDescriptiveName(context)
    if context.isMatlabHostTarget()
        myextname = 'MyLibrary_MatlabHost';
    else
        myextname = 'MyLibrary_Local';
    end
end
```

# coder.ExternalDependency.isSupportedContext

---

<b>Purpose</b>	Determine if build context supports external dependency
<b>Syntax</b>	<code>tf = coder.ExternalDependency.isSupportedContext(bldcfg)</code>
<b>Description</b>	<p><code>tf = coder.ExternalDependency.isSupportedContext(bldcfg)</code> returns true (1) if you can use the “external dependency” on page 2-138 in the current “build context” on page 2-138 . You must provide this method in the class definition for a class that derives from <code>coder.ExternalDependency</code>.</p> <p>If you cannot use the “external dependency” on page 2-138 in the current “build context” on page 2-138, display an error message and stop code generation. The error message must describe why you cannot use the external dependency in this build context. If the method returns false (0), the code generation software uses a default error message. The default error message uses the name returned by the <code>getDescriptiveName</code> method of the <code>coder.ExternalDependency</code> class.</p> <p>Use <code>coder.BuildConfig</code> methods to determine if you can use the external dependency in the current build context.</p>
<b>Input Arguments</b>	<p><b>bldcfg</b></p> <p><code>coder.BuildConfig</code> object. Use <code>coder.BuildConfig</code> methods to get information about the “build context” on page 2-138.</p>
<b>Output Arguments</b>	<p><b>tf</b></p> <p>Value is true (1) if the build context supports the external dependency.</p>
<b>Definitions</b>	<p><b>external dependency</b></p> <p>External code interface represented by a class derived from <code>coder.ExternalDependency</code> class. The external code can be a library, object file, or C/C++ source.</p> <p><b>build context</b></p> <p>Information used by the build process including:</p>

- Target language
- Code generation target
- Target hardware
- Build toolchain

## Examples

### Report error when build context does not support external library

This method returns true(1) if the code generation target is a MATLAB host target. Otherwise, the method reports an error and stops code generation.

Write `isSupportedContext` method.

```
function tf = isSupportedContext(ctx)
    if ctx.isMatlabHostTarget()
        tf = true;
    else
        error('adder library not available for this target');
    end
end
```

# coder.ExternalDependency.updateBuildInfo

---

<b>Purpose</b>	Update build information
<b>Syntax</b>	<code>coder.ExternalDependency.updateBuildInfo(buildInfo, bldcfg)</code>
<b>Description</b>	<p><code>coder.ExternalDependency.updateBuildInfo(buildInfo, bldcfg)</code> updates the build information object whose handle is <code>buildInfo</code>. After code generation, the build information object has standard information. Use this method to provide additional information required to link to external code. Use <code>coder.BuildConfig</code> methods to get information about the “build context” on page 2-140.</p> <p>You must provide this method in the class definition for a class that derives from <code>coder.ExternalDependency</code>.</p>
<b>Input Arguments</b>	<p><b>buildInfo</b> Handle of build information object.</p> <p><b>bldcfg</b> <code>coder.BuildConfig</code> object. Use <code>coder.BuildConfig</code> methods to get information about the “build context” on page 2-140.</p>
<b>Definitions</b>	<p><b>build context</b> Information used by the build process including:</p> <ul style="list-style-type: none"><li>• Target language</li><li>• Code generation target</li><li>• Target hardware</li><li>• Build toolchain</li></ul>

<b>Purpose</b>	Create category of Simulink Project labels
<b>Syntax</b>	<code>createCategory(proj, categoryName)</code> <code>createCategory(proj, categoryName, dataType)</code>
<b>Description</b>	<p><code>createCategory(proj, categoryName)</code> creates a new category of labels <code>categoryName</code> in the project <code>proj</code>.</p> <p><code>createCategory(proj, categoryName, dataType)</code> specifies the class of data to store in labels of the new category.</p>
<b>Input Arguments</b>	<p><b>proj - Project</b> project object</p> <p>Project, specified as a project object. Use <code>simulinkproject</code> to create a project object to manipulate a Simulink Project at the command line.</p> <p><b>categoryName - Name of category</b> string</p> <p>Name of the category of labels to create, specified as a string.</p> <p><b>dataType - Class of data to store in labels</b> string</p> <p>The class of data to store in labels in the new category, specified as a string.</p>
<b>Examples</b>	<p><b>Create a New Category of Labels for File Ownership</b></p> <p>Create a new category of labels for file ownership, and attach a new label and label data to a file.</p> <p>Open the airframe project and create a project object.</p> <pre>sldemo_slproject_airframe proj = simulinkproject;</pre>

## createCategory

---

Create a new category of labels, called `Engineers`, to denote file ownership in a project. These labels have the `char` datatype for attaching string data.

```
createCategory(proj, 'Engineers', 'char');
```

Use `findCategory` to get the new category.

```
engineersCategory = findCategory(proj, 'Engineers');
```

Create labels in the new category.

```
createLabel(engineersCategory, 'Tom');  
createLabel(engineersCategory, 'Dick')  
createLabel(engineersCategory, 'Harry')
```

Attach one of the new labels to a file in the project.

```
myfile = findFile(proj, 'models/AnalogControl.mdl')  
addLabel(myfile, 'Engineers', 'Tom');
```

Get the label and add data.

```
label = findLabel(file, 'Engineers', 'Tom');  
label.Data = 'Maintenance responsibility';  
disp(label)
```

Label with properties:

```
File: [1x80 char]  
Data: 'Maintenance responsibility'  
DataType: 'char'  
Name: 'Tom'  
CategoryName: 'Engineers'
```

### **Create a New Category of Labels with Datatype Double**

Open the `airframe` project and create a project object.

```
sldemo_slproject_airframe  
proj = simulinkproject;
```

Create a new category of labels.

```
createCategory(proj, 'Coverage', 'double')
```

```
category =
```

```
Category with properties:
```

```
        Name: 'Coverage'  
        DataType: 'double'  
        LabelDefinitions: []
```

Find out what you can do with the new category.

```
category = findCategory(proj, 'Coverage');  
methods(category)
```

```
Methods for class slproject.Category:
```

```
findLabel  removeLabel  createLabel
```

## Tips

After you create a new category, you can create labels in the new category. See `createLabel`.

## See Also

## Functions

```
simulinkprojectcreateLabel
```

# createLabel

---

**Purpose** Define Simulink Project label

**Syntax** `createLabel(category,newLabelName)`

**Description** `createLabel(category,newLabelName)` creates a new label, `newLabelName`, in a category. Use this syntax if you previously got a category by accessing a `Categories` property, e.g., using a command like `proj.Categories(1)`.

Use `addLabel` instead to create and attach a new label in an existing category using a single step.

Use `createCategory` first if you want to make a new category of labels.

## Input Arguments

### **category - Category**

category object

Category for the new label, specified as a category object. Get the category by accessing a `Categories` property, e.g. with a command like `proj.Categories(1)`, or use `findCategory`. To create a new category, use `createCategory`.

### **newLabelName - The name of the new label to define**

string

The name of the new label to define, specified as a string.

## Examples

### **Create a New Label**

Open the airframe project and create a project object.

```
sldemo_slproject_airframe
proj = simulinkproject;
```

Examine the first existing category.

```
cat = proj.Categories(1)
```

```
cat =
```

Category with properties:

```
Name: 'Review'  
DataType: 'char'  
LabelDefinitions: [1x4 slproject.LabelDefinition]
```

Define a new label in the category.

```
createLabel(cat, 'review me');
```

## **Create a New Category of Labels for File Ownership**

Open the airframe project and create a project object.

```
sldemo_slproject_airframe  
proj = simulinkproject;
```

Create creates a new category of labels called Engineers which can be used to denote file ownership in a project. These labels have the char datatype for attaching string data.

```
createCategory(proj, 'Engineers', 'char');
```

Use findCategory to get the new category.

```
engineersCategory = findCategory(proj, 'Engineers');
```

Create labels in the new category.

```
createLabel(engineersCategory, 'Tom');  
createLabel(engineersCategory, 'Dick');  
createLabel(engineersCategory, 'Harry');
```

Attach one of the new labels to a file in the project.

```
myfile = findFile(proj, 'models/AnalogControl.mdl')  
addLabel(myfile, 'Engineers', 'Tom');
```

# createLabel

---

Get the label and add data.

```
label = findLabel(myfile, 'Engineers', 'Tom');  
label.Data = 'Maintenance responsibility';  
disp(label)
```

Label with properties:

```
File: [1x80 char]  
Data: 'Maintenance responsibility'  
DataType: 'char'  
Name: 'Tom'  
CategoryName: 'Engineers'
```

## See Also

### Functions

[addLabel](#) [createCategory](#)

**Purpose** Delete block from Simulink system

**Syntax** `delete_block('blk')`

**Description** `delete_block('blk')`, where *blk* is a full block pathname, deletes the specified block from a system.

**Examples** This command removes the Out1 block from the vdp system.

```
delete_block('vdp/Out1')
```

**See Also** `add_block` | `replace_block`

# delete\_line

---

**Purpose** Delete line from Simulink system

**Syntax**

```
delete_line('model', 'outPort', 'inPort')
delete_line('model', [x y])
delete_line(LineHandle)
```

**Description** `delete_line('sys', 'oport', 'iport')` deletes the line extending from the specified block output port *oport* to the specified block input port *iport*. *oport* and *iport* are strings consisting of a block name and a port identifier in the form *block/port*. Most block ports are identified by numbering the ports from top to bottom or from left to right, such as Gain/1 or Sum/2. Enable, Trigger, and State ports are identified by name, such as *subsystem\_name/Enable*, *subsystem\_name/Trigger*, *Integrator/State*, or *if\_action\_subsystem\_name/Ifaction*.

`delete_line('sys', [x y])` deletes one of the lines in the system that contains the specified point (x,y), if any such line exists.

`delete_line(LineHandle)` deletes the line specified by the handle.

## **Examples**      **Remove Line Using Block Port Names**

For the model vdp, remove the line connecting the Product block with the Gain block.

```
open_system('vdp')
delete_line('vdp', 'Product/1', 'Mu/1')
```

## **Remove Line Using Line Handle**

For the model vdp, remove a line using the line handle.

```
open_system('vdp')
delete_line('vdp', 'Product/1', 'Mu/1')
LineHandle = add_line('vdp', 'Product/1', 'Mu/1')
delete_line(LineHandle)
```

**See Also**      `add_line`

**Purpose** Delete system parameter added via `add_param` command

**Syntax** `delete_param('sys', 'parameter1', 'parameter2', ...)`

**Description** This command deletes parameters that were added to the system using the `add_param` command. The command displays an error message if a specified parameter was not added with the `add_param` command.

**Examples** The following example

```
add_param('vdp', 'DemoName', 'VanDerPolEquation', 'EquationOrder', '2')
delete_param('vdp', 'DemoName')
```

adds the parameters `DemoName` and `EquationOrder` to the `vdp` system, then deletes `DemoName` from the system.

**See Also** `add_param`

# dependencies.fileDependencyAnalysis

---

## Purpose

Find model file dependencies

## Syntax

```
files = dependencies.fileDependencyAnalysis('modelname')
[files, missing] =
dependencies.fileDependencyAnalysis('modelname')
[files, missing,
    depfile] =
dependencies.fileDependencyAnalysis('modelname')
[files, missing, depfile,
    manifestfile] = dependencies.fileDependencyAnalysis('modelname',
    'manifestfile')
```

## Description

`files = dependencies.fileDependencyAnalysis('modelname')` returns `files`, a cell array of strings containing the full paths of all existing files referenced by the model `modelname`.

`[files, missing] = dependencies.fileDependencyAnalysis('modelname')` returns `files`, all existing files referenced by the model `modelname`, and any referenced files that cannot be found in *missing*.

`[files, missing, depfile] = dependencies.fileDependencyAnalysis('modelname')` also returns `depfile`, the full path of the user dependencies (.smd) file, if it exists, that stores the names of any files you manually added or excluded.

`[files, missing, depfile, manifestfile] = dependencies.fileDependencyAnalysis('modelname', 'manifestfile')` also creates a manifest file with the name and path specified in `manifestfile`.

## Tip

If you try dependency analysis on an example model, it returns an empty list of required files because the standard MathWorks installation includes all the files required for the example models.

## Input Arguments

### **modelname**

String specifying the name of the model to analyze for dependencies.

## Output Arguments

### manifestfile

(Optional) String to specify the name of the manifest file to create. You can specify a full path or just a file name (in which case the file is created in the current folder). The function adds the suffix `.smf` to the user-specified name.

### files

A cell array of strings containing the full-paths of all existing files referenced by the model `modelName`.

**Default:** []

### missing

A cell array of strings containing the names of any files that are referenced by the model `modelName`, but cannot be found.

**Default:** []

### depfile

String containing the full path of a user dependencies (`.smd`) file, if it exists, that stores the names of any files you manually added or excluded. Simulink uses the `.smd` file to remember your changes the next time you generate a manifest. See “Edit Manifests”.

**Default:** []

### manifestfile

String containing the name and path of the new manifest file.

**Default:** []

## Examples

The following code analyses the model `mymodel` for file dependencies:

```
files = dependencies.fileDependencyAnalysis('mymodel')
```

# dependencies.fileDependencyAnalysis

---

If you try dependency analysis on an example model, it returns an empty list of required files because the standard MathWorks installation includes all the files required for the example models.

## Alternatives

You can interactively run dependency analysis from the Simulink project. See “Choose Files and Run Dependency Analysis”.

To create a report to identify where dependencies arise, find required toolboxes, and for more control over dependency analysis options, you can interactively generate a manifest and report. See “Analyze Model Dependencies”.

To programmatically check which *toolboxes* are required, see `dependencies.toolboxDependencyAnalysis`.

## See Also

`dependencies.toolboxDependencyAnalysis`

## Concepts

- “What Are Model Dependencies?”

# dependencies.toolboxDependencyAnalysis

---

## Purpose

Find toolbox dependencies

## Syntax

```
names = dependencies.toolboxDependencyAnalysis(files_in)
[names, folders] =
dependencies.toolboxDependencyAnalysis(files_in)
```

## Description

`names = dependencies.toolboxDependencyAnalysis(files_in)` returns `names`, a cell array of toolbox names required by the files in `files_in`.

```
[names, folders] =
dependencies.toolboxDependencyAnalysis(files_in)
```

 returns toolbox names and also a cell array of the toolbox folders.

## Tips

The function `dependencies.toolboxDependencyAnalysis` looks for toolbox dependencies of the files in `files_in` but does *not* analyze any subsequent dependencies. See “Examples” on page 2-154.

For command-line dependency analysis, the analysis uses the default settings for analysis scope to determine required toolboxes. For example, if you have code generation products, then the check **Find files required for code generation** is on by default and Simulink Coder is always reported as required. See “Required Toolboxes” in the manifest documentation for more examples of how your installed products and analysis scope settings can affect reported toolbox requirements.

## Input Arguments

### `files_in`

Cell array of strings containing `.m` or `.mdl` files on the MATLAB path. Simulink model names (without file extension) are also allowed.

**Default:** `[]`

## Output Arguments

### `names`

Cell array of toolbox names required by the files in `files_in`.

# dependencies.toolboxDependencyAnalysis

---

## folders

(Optional) Cell-array of the required toolbox folders.

## Examples

The following code reports the detectable required toolboxes for the model vdp:

```
files_in={'vdp'};
names = dependencies.toolboxDependencyAnalysis(files_in)
```

```
names =

    'MATLAB'    'Simulink'    'Simulink Coder'
```

To find all detectable toolbox dependencies of your model *and* the files it depends on:

- 1 Call `fileDependencyAnalysis` on your model.

For example:

```
files = dependencies.fileDependencyAnalysis('mymodel')

files =

    'C:\Work\foo.m'
    'C:\Work\mymodel.mdl'
```

- 2 Call `toolboxDependencyAnalysis` on the files output of step 1.

For example:

```
tbxes = dependencies.toolboxDependencyAnalysis(files)

tbxes =

[1x24 char]    'MATLAB'    'Simulink Coder'    'Simulink'
```

To view long product names examine the `tbxes` cell array as follows:

```
tbxes{:}
```

```
ans =  
Image Processing Toolbox
```

```
ans =  
MATLAB
```

```
ans =  
Simulink Coder
```

```
ans =  
  
Simulink
```

## Alternatives

You can interactively run dependency analysis from the Simulink project. See “Choose Files and Run Dependency Analysis”.

To create a report to identify where dependencies arise, and for more control over dependency analysis options, you can interactively generate a manifest and report. See “Analyze Model Dependencies”.

To programmatically check which *files* are required, see `dependencies.fileDependencyAnalysis`.

## See Also

`dependencies.fileDependencyAnalysis`

## Concepts

- “What Are Model Dependencies?”

# detachConfigSet

---

**Purpose** Dissociate configuration set or configuration reference from model

**Syntax** `detachConfigSet(model, configObjName)`

**Arguments**

`model`  
The name of an open model, or `gcs` to specify the current model

`configObjName`  
The name of a configuration set (`Simulink.ConfigSet`) or configuration reference (`Simulink.ConfigSetRef`)

**Description** `detachConfigSet` detaches the configuration set or configuration reference (configuration object) specified by `configObjName` from `model`. If no such configuration object is attached to the model, an error occurs.

**Examples** The following example detaches the configuration object named `DevConfig` from the current model. The code is the same whether `DevConfig` is a configuration set or configuration reference.

```
detachConfigSet(gcs, 'DevConfig');
```

**See Also** `attachConfigSet` | `attachConfigSetCopy` | `closeDialog` | `getActiveConfigSet` | `getConfigSet` | `getConfigSets` | `openDialog` | `setActiveConfigSet`

**How To**

- “Manage a Configuration Set”
- “Manage a Configuration Reference”

# removeLabel(was detachLabelFromFile )

---

**Purpose** REMOVE — RENAMED TO REMOVELABEL — consolidate with existing removeLabel page. was: Detach label from Simulink Project file

**Syntax** `removeLabel(file,labelDefinition)`

**Description** `removeLabel(file,labelDefinition)` detaches the specified label `labelDefinition` from the file. Before you can detach the label, you need to get the label from the `file.Label` property or by using `findLabel`.

**Input Arguments** **file - File to detach label from**  
file object

File to detach the label from, specified as a file object. You can get the file object by examining the project's Files property (`proj.Files`), or use `findFile` to find a file by name. The file must be within the root folder.

**labelDefinition - Label to detach**  
label definition object

Name of the label to detach, specified as a label definition object returned by the `file.Label` property or `findLabel`.

**Examples** **Detach a Label from a File**

Remove a label from a particular project file.

Open the airframe project and create a project object.

```
sldemo_slproject_airframe;  
proj = simulinkproject;
```

Get a particular file by name.

```
myfile = findFile(proj,'models/AnalogControl.mdl')
```

```
myfile =
```

```
ProjectFile with properties:
```

## removeLabel(was detachLabelFromFile )

---

```
Path: [1x86 char]
Labels: [1x1 slproject.Label]
```

Get the Labels property of the file.

```
myfile.Labels
```

```
ans =
```

```
Label with properties:
```

```
File: 'C:\work\airframe\models\AnalogControl.mdl'
Data: []
DataType: 'none'
Name: 'Design'
CategoryName: 'Classification'
```

Attach the label 'To Review' to the file.

```
addLabel(myfile,'Review','To Review')
```

Get the label you want to remove. Index into the Labels property to get the second label attached to the file.

```
labeltoremove = myfile.Labels(2)
```

```
labeltoremove =
```

```
Label with properties:
```

```
File: [1x86 char]
Data: []
DataType: 'char'
Name: 'To Review'
```

# removeLabel(was detachLabelFromFile )

---

```
CategoryName: 'Review'
```

Remove the label from the file.

```
removeLabel(myfile,labeltoremove)
myfile.Labels
```

```
ans =
```

```
Label with properties:
```

```
File: [1x86 char]
Data: []
DataType: 'none'
Name: 'Design'
CategoryName: 'Classification'
```

## See Also

## Functions

```
simulinkprojectfindFilefindLabelcreateLabeladdLabel
```

# disableimplicitsignalresolution

---

**Purpose** Convert model to use only explicit signal resolution

**Syntax** `retVal = disableimplicitsignalresolution('model')`  
`retVal = disableimplicitsignalresolution('model', displayOnly)`

**Description** `retVal = disableimplicitsignalresolution('model')` inputs a model, reports all signals and states that implicitly resolve to signal objects, and converts the model to resolve only signals and states that explicitly require it. The report and any changes are limited to the model itself; they do not include blocks that are library links.

Before executing this function, ensure that all relevant Simulink data objects are defined in the base workspace. The function ignores any data objects that are defined elsewhere.

The function scans `model`, returns a structure of handles to signals and states that resolve implicitly to signal objects, and performs the following operations on `model`:

- Search the model for all output ports and block states that resolve to Simulink signal objects.
- Modify these ports and blocks to enforce signal object resolution in the future.
- Set the model's `SignalResolutionControl` parameter to `'UseLocalSettings'` (GUI: **Explicit Only**).
- If any Stateflow output data resolves to a Simulink signal object:
  - Turn off hierarchical scoping of signal objects from within the Stateflow chart.
  - Explicitly label the output signal of the Stateflow chart.
  - Enforce signal object resolution for this signal in the future.

Any changes made by `disableimplicitsignalresolution` permanently change the model. Be sure to back up the model before calling the function with `displayOnly` defaulted to or specified as `false`.

`retVal = disableimplicitsignalresolution('model', displayOnly)` is equivalent to `disableimplicitsignalresolution(model)` if `displayOnly` is false.

If `displayOnly` is true, the function returns a structure of handles to signals and states that resolve implicitly to signal objects, but leaves the model unchanged.

## Input Arguments

### **displayOnly**

Boolean specifying whether to change the model (false) or just generate a report (true)

**Default:** false

### **model**

Model name or handle

## Output Arguments

### **retVal**

A MATLAB structure containing:

Signals

Handles to ports with signal names that resolve to signal objects

States

Handles to blocks with states that resolve to signal objects

## See Also

`Simulink.Signal`

## How To

- “Data Validity Diagnostics Overview”
- “Symbol Resolution”

**Purpose** Get or set editor invoked by Simulink DocBlock

**Syntax**

```
docblock('setEditorHTML', editCmd)
docblock('setEditorDOC', editCmd)
docblock('setEditorTXT', editCmd)
editCmd = docblock('getEditorHTML')
editCmd = docblock('getEditorDOC')
editCmd = docblock('getEditorTXT')
```

**Description** `docblock('setEditorHTML', editCmd)` sets the HTML editor invoked by a DocBlock. The *editCmd* string specifies a command, executed at the MATLAB prompt, which launches a custom HTML editor. By default, a DocBlock invokes Microsoft Word (if available) as the HTML editor; otherwise, it opens HTML documents using the editor you specified on the **Editor/Debugger Preferences** pane of the MATLAB Preferences dialog box.

Use the "%<FileName>" token in the *editCmd* string to represent the full pathname to the document. Use the empty string '' as the *editCmd* to reset the DocBlock to its default editor for a particular document type.

`docblock('setEditorDOC', editCmd)` sets the Rich Text Format (RTF) editor invoked by a DocBlock. The *editCmd* string specifies a command, executed at the MATLAB prompt, which launches a custom RTF editor. By default, a DocBlock invokes Microsoft Word (if available) as the RTF editor. Otherwise, it opens RTF documents using the editor you specified on the **Editor/Debugger Preferences** pane of the Preferences dialog box.

`docblock('setEditorTXT', editCmd)` sets the text editor invoked by a DocBlock. The *editCmd* string specifies a command, executed at the MATLAB prompt, which launches a custom text editor. By default, a DocBlock invokes the editor you specified on the **Editor/Debugger Preferences** pane of the Preferences dialog box.

`editCmd = docblock('getEditorHTML')` returns the value of the current command used to invoke an HTML editor when double-clicking a DocBlock.

`editCmd = docblock('getEditorDOC')` returns the value of the current command used to invoke a RTF editor when double-clicking a DocBlock.

`editCmd = docblock('getEditorTXT')` returns the value of the current command used to invoke a text editor when double-clicking a DocBlock.

## Examples

Specify Microsoft Notepad as the DocBlock editor for RTF documents:

```
docblock('setEditorRTF','system(''notepad "%<FileName>"');')
```

---

Reset the DocBlock to use its default editor for RTF documents:

```
docblock('setEditorRTF','')
```

---

Specify Mozilla Composer as the HTML editor for the DocBlock:

```
docblock('setEditorHTML','system(''/usr/local/bin/mozilla ...  
-edit "%<FileName>" &'');')
```

## See Also

DocBlock

## How To

- “Use a Simulink DocBlock to Add a Comment”

# export

---

**Purpose** Export Simulink Project to zip

**Syntax**  
`export(proj,zipFileName)`  
`export(proj,zipFileName,definitionType)`

**Description** `export(proj,zipFileName)` exports the project `proj` to a zip file specified by `zipFileName`. The zip archive preserves the project files, structure, labels, and shortcuts, and does not include any source control information. You can use the zip archive to send the project to customers, suppliers, or colleagues who do not have access to your source control repository. Recipients can create a new project from the zip archive by selecting **New > Simulink Project > From Archive** in the Simulink Project Tool.

`export(proj,zipFileName,definitionType)` exports the project using the specified `definitionType` for the project definition files, single or multiple. If you do not specify `definitionType`, the project's current setting is used. Use the `definitionType` export option if you want to change project definition file management from the type selected when the project was created.

## Input Arguments

**proj - Project**  
project object

Project, specified as a project object. Use `simulinkproject` to create a project object to manipulate a Simulink Project at the command line.

**zipFileName - Zip file name or path**  
string

Zip file name or path, specified as a string ending in the file extension `.zip`. If `zipFileName` is a filename, Simulink exports the file to the current folder. You can also specify a fully qualified path name.

**Example:** `'project.zip'`

**Data Types**  
char

**definitionType - Definition file type**

`slproject.DefinitionFiles.SingleFile` | `slproject.DefinitionFiles.MultiFile`

Definition file type, specified as `slproject.DefinitionFiles.SingleFile` or `slproject.DefinitionFiles.MultiFile`. Use the `definitionType` export option if you want to change project definition file management from the type selected when the project was created. `MultiFile` is better for avoiding merging issues on shared projects. `SingleFile` is faster but is likely to cause merge issues when two users submit changes in the same project to a source control tool.

**Example:**

```
export(proj, 'proj.zip', slproject.DefinitionFiles.SingleFile)
```

**Examples****Export a Project to a Zip File**

Open the airframe project and create a project object.

```
sldemo_slproject_airframe;  
proj = simulinkproject;
```

Export the project to a zip file.

```
export(proj, 'airframeproj.zip')
```

**Related Examples**

- “Archive Projects in Zip Files”

# findCategory

---

<b>Purpose</b>	Get Simulink Project category of labels
<b>Syntax</b>	<code>category = findCategory(proj, categoryName)</code>
<b>Description</b>	<code>category = findCategory(proj, categoryName)</code> returns the project category specified by <code>categoryName</code> . You need to get a category before you can use <code>createLabel</code> or <code>removeLabel</code> .
<b>Input Arguments</b>	<p><b>proj - Project</b> project</p> <p>Project, specified as a project object. Use <code>simulinkproject</code> to create a project object to manipulate a Simulink Project at the command line.</p> <p><b>categoryName - Name of category</b> string</p> <p>Name of the category to get, specified as a string.</p>
<b>Output Arguments</b>	<p><b>category - Category of labels</b> category object</p> <p>Category of labels, returned as a category object that you can query or modify. If the specified category is not found, the function returns an empty array.</p>
<b>Examples</b>	<p><b>Get a Category of Project Labels</b></p> <p>Open the airframe project and create a project object.</p> <pre>sldemo_slproject_airframe; proj = simulinkproject;</pre> <p>Use <code>findCategory</code> to get a category of labels by name.</p> <pre>category = findCategory(proj, 'Review')</pre> <pre>category =</pre>

Category with properties:

```
        Name: 'Review'  
        DataType: 'char'  
        LabelDefinitions: [1x5 slproject.LabelDefinition]
```

Alternatively, you can examine categories by index. Get the first category.

```
proj.Categories(1)
```

```
ans =
```

Category with properties:

```
        Name: 'Review'  
        DataType: 'char'  
        LabelDefinitions: [1x4 slproject.LabelDefinition]
```

Find out what you can do with the category.

```
methods(category)
```

```
Methods for class slproject.Category:
```

```
createLabel      findLabel  removeLabel
```

## See Also

## Functions

```
simulinkprojectcreateLabelremoveLabel
```

# findFile

---

<b>Purpose</b>	Get Simulink Project file by name
<b>Syntax</b>	<code>file = findFile(proj,fileName)</code>
<b>Description</b>	<code>file = findFile(proj,fileName)</code> returns a specific project file by name. You need to get a file before you can query labels, or use <code>addLabel</code> or <code>removeLabel</code> .
<b>Input Arguments</b>	<p><b>proj - Project</b> project</p> <p>Project, specified as a project object. Use <code>simulinkproject</code> to create a project object to manipulate a Simulink Project at the command line.</p> <p><b>fileName - Path of file</b> string</p> <p>Path of the file to find, including any subfolders under the project root, specified as a string.</p>
<b>Output Arguments</b>	<p><b>file - Project file</b> file object</p> <p>Project file, returned as a file object that you can query or modify.</p>
<b>Examples</b>	<p><b>Find a File By Name</b></p> <p>Open the airframe project and create a project object.</p> <pre>sldemo_slproject_airframe; proj = simulinkproject;</pre> <p>Use <code>findFile</code> to get a file by name. You need to know the path if it is inside subfolders under the project root.</p> <pre>myfile = findFile(proj, 'models/AnalogControl.mdl')</pre> <pre>myfile =</pre>

ProjectFile with properties:

```
Path: [1x86 char]
Labels: [1x1 slproject.Label]
```

Alternatively, you can examine files by index. Get the first file.

```
file = proj.Files(1);
```

Find out what you can do with the file.

```
methods(file)
```

Methods for class slproject.ProjectFile:

```
ProjectFile      addLabel      removeLabel      findLabel
```

Alternatively, you can find project files by their labels using `findLabel`.

## See Also

## Functions

```
simulinkprojectfindCategoryfindLabeladdLabelremoveLabel
```

# findLabel

---

**Purpose** Get Simulink Project file label

**Syntax**

```
label = findLabel(file,categoryName,labelName)
label = findLabel(file,labelDefinition)
label = findLabel(category,labelName)
```

**Description** `label = findLabel(file,categoryName,labelName)` returns the label and its attached data for the label `labelName` in the category `categoryName` that is attached to the specified `file`. Use this syntax when you know the label name and category.

`label = findLabel(file,labelDefinition)` returns the file label and its attached data for the label name and category specified by `labelDefinition`. Use this syntax if you previously got a `labelDefinition` by accessing a `Labels` property, e.g., using a command like `myfile.Labels(1)`.

`label = findLabel(category,labelName)` returns the label definition of the label in this category specified by `labelName`. Returns an empty array if the label is not found.

## Input Arguments

### **file - File to search labels of**

file object

File to search the labels of, specified as a file object. You can get the file object by examining the project's `Files` property (`proj.Files`), or use `findFile` to get a file by name. The file must be within the root folder.

### **categoryName - Name of category**

string

Name of the parent category for the label, specified as a string.

### **labelName - Name of label**

string

Name of the label to get, specified as a string.

**labelDefinition - Name of label**

label definition object

Name of the label to get, specified as a label definition object returned by the `file.Label` property.

**category - Category of labels**

category object

Category of labels, specified as a category object. Get a category object from the `proj.Categories` property or by using `findCategory`.

**Output Arguments****label - Label**

label object

Label, returned as a label object.

**Examples****Find Files with the Label To Review**

Find all project files with a particular label.

Open the `airframe` project and create a project object.

```
sldemo_slproject_airframe;  
proj = simulinkproject;
```

Get the list of project files.

```
files = proj.Files;
```

Loop through each file. If the file has the extension `.m`, attach the label `To Review`.

```
for fileIndex = 1:numel(files)  
    file = files(fileIndex);  
    [~, ~, fileExtension] = fileparts(file.Path);  
    if strcmp(fileExtension, '.m')  
        addLabel(file, 'Review', 'To Review');  
    end  
end  
end
```

# findLabel

---

Find all the files with the label To Review and add them to a list returned in files\_to\_review.

```
files_to_review = {};  
for jj=1:numel(files)  
    this_file = files(jj);  
  
    label = findLabel(this_file,'Review','To Review');  
  
    if ( ~isempty(label))  
        % This is a file labeled 'To Review'. Add to the  
        % list of files to review.  
        files_to_review = [files_to_review; this_file];  
    end  
end
```

## Find a Label by Name or Definition

Open the airframe project and create a project object.

```
sldemo_slproject_airframe;  
proj = simulinkproject;
```

Get a particular file by name.

```
myfile = findFile(proj,'models/AnalogControl.mdl');
```

Get a label by name.

```
label = findLabel(myfile,'Review','To Review');
```

Alternatively, examine the Labels property of the file to get an array of Label objects, one for each label attached to the file.

```
labels = myfile.Labels
```

Index into the Labels property to get the second label attached to the particular file.

```
labeldefinition = myfile.Labels(1)
```

After you get the label definition from the Labels property, you can use it with findLabel.

```
label = findLabel(myfile,labeldefinition);
```

## Find Labels by Name or Definition

Open the airframe project and create a project object.

```
sldemo_slproject_airframe;  
proj = simulinkproject;
```

Get a category.

```
category = proj.Categories(1)
```

```
category =
```

```
Category with properties:
```

```
    Name: 'Review'  
    DataType: 'char'  
    LabelDefinitions: [1x4 slproject.LabelDefinition]
```

Get a label definition.

```
ld = findLabel(category,'To Review')
```

```
ld =
```

```
LabelDefinition with properties:
```

```
    Name: 'To Review'
```

# findLabel

---

CategoryName: 'Review'

## See Also

## Functions

simulinkprojectfindFilecreateLabeladdLabel

# findLabelDefinition(renamed to findLabel)

---

## Purpose

Get Simulink Project label definition

## Syntax

```
labelDefinition = findLabelDefinition(category, labelName)
```

## Description

`labelDefinition = findLabelDefinition(category, labelName)` returns the label definition of the label in this category specified by `labelName`. Returns an empty array if the label is not found.

## Input Arguments

### labelName - Name of label

string

Name of the label to get, specified as a string.

### category - Category of labels

category object

Category of labels, specified as a category object. Get a category object from the `proj.Categories` property or by using `findCategory`.

## Output Arguments

### labelDefinition - Label definition

label definition object

Label definition, returned as a label definition object. Query the label definition properties to find the label data type.

## Examples

### Find Labels by Name or Definition

Open the airframe project and create a project object.

```
sldemo_slproject_airframe;  
proj = simulinkproject;
```

Get a category.

```
category = proj.Categories(1)
```

```
category =
```

```
    Category with properties:
```

## findLabelDefinition(renamed to findLabel)

---

```
        Name: 'Review'  
        DataType: 'char'  
LabelDefinitions: [1x4 slproject.LabelDefinition]
```

Get a label definition.

```
ld = findLabelDefinition(category,'To Review')
```

```
ld =
```

```
LabelDefinition with properties:
```

```
        Name: 'To Review'  
        CategoryName: 'Review'
```

Alternatively, get a file and examine the `Labels` property to get an array of `Label` objects, one for each label attached to the file.

```
myfile = findFile(proj,'models/AnalogControl.mdl');  
labels = myfile.Labels
```

Index into the `Labels` property to get the second label attached to the particular file.

```
labeldefinition = myfile.Labels(1)
```

After you get the label definition from the `Labels` property, you can use it with `findLabel`.

```
label = findLabel(myfile,labeldefinition);
```

Alternatively, get a particular file by name, and then get one of its labels by name.

# findLabelDefinition(renamed to findLabel)

---

```
myfile = findFile(proj,'models/AnalogControl.mdl');  
label = findLabel(myfile,'Review','To Review');
```

## See Also

## Functions

simulinkprojectfindCategorycreateLabeladdLabel

# find\_mdrefs

---

**Purpose** Find Model blocks and referenced models at all levels or at top level only

**Syntax**

```
[refMdls, mdlBlks] = find_mdrefs('modelName')  
[refMdls, mdlBlks] = find_mdrefs('modelName', allLevels)  
[refMdls, mdlBlks] = find_mdrefs('modelName',  
    'Param1', Val1, ... ,  
    'ParamN', ValN)
```

**Description** [refMdls, mdlBlks] = find\_mdrefs('modelName') finds all Model blocks and referenced models contained by the model hierarchy of which *modelName* is the top model.

[refMdls, mdlBlks] = find\_mdrefs('modelName', allLevels) If *allLevels* is true, this is equivalent to the preceding syntax. If *allLevels* is false, the function searches only the top level of *modelName*, ignoring any subordinate hierarchy.

[refMdls, mdlBlks] = find\_mdrefs('modelName', 'Param1', Val1, ... , 'ParamN', ValN) searches the model as specified by the optional name/value pairs 'Param1', Val1, ... , 'ParamN', ValN.

## Input Arguments

### **modelName**

The model in which to search for Model blocks and referenced models.

### **allLevels**

Boolean specifying whether to search the complete hierarchy (true) or only the top model *modelName* (false). Default: true.

### **'Param1', Val1, ... , 'ParamN', ValN**

One or more name/value pairs that control the actions of the function. The possible names and values, and their defaults, are:

---

'AllLevels'	Boolean specifying whether to search the complete hierarchy (true) or only the top level (false). The default if you omit 'AllLevels' is true: the function searches the complete hierarchy of which <i>modelName</i> is the top model.
'IncludeProtectedModels'	Boolean that specifies whether the output <i>refMdls</i> includes the names of protected models (true) or excludes them(false). The default if you omit 'IncludeProtectedModels' is false: the function excludes protected models from <i>refMdls</i> .
'Variants'	String that specifies whether the output <i>refMdls</i> includes the names of variant models. The possible values are: <ul style="list-style-type: none"><li>• 'ActiveVariants' — Include the active variant of each Model Variants block included in the search.</li><li>• 'ActivePlusCodeVariants' — Include all variants for all Model Variants blocks included in the search that have <b>Generate preprocessor conditionals</b> option selected.</li><li>• 'AllVariants' — Include all variants for all Model Variants blocks included in the search.</li></ul>

# find\_mdrefs

---

The default if you omit 'Variants' is 'ActivePlusCodeVariants'.

The `find_mdrefs` function provides two different ways to search all levels of the model *modelName*. Both techniques give the same results, but only the name/value technique allows you to control inclusion of protected and variant models in *refMdl*s.

## Output Arguments

### mdlBlks

Depending on the value of 'AllLevels', a list containing the names of all Model blocks:

- In the hierarchy of which *modelName* is the top model
- In *modelName* alone

### refMdl

Depending on the value of 'AllLevels', a list containing the names of all models referenced by a Model block:

- In the hierarchy of which *modelName* is the top model
- In *modelName* alone

Optional inputs to `find_mdrefs` control inclusion of protected and variant models. The last element of the *refMdl*s is *modelName* itself.

## Examples

Return in *MyMdlBlks* the names all Model blocks at the top level of *MyModel*. Return in *MyRefMdl*s the names of all models referenced by Model blocks at the top level, including the active variant of every variant Model block:

```
[MyRefMdl, MyMdlBlks] = find_mdrefs(MyModel, 'AllLevels',...  
false, 'Variants', 'ActiveVariants')
```

## See Also

Model | view\_mdrefs

## How To

- “Model Reference”
- “Set Up Model Variants”
- “Protected Model”

# find\_system

---

**Purpose** Find systems, blocks, lines, ports, and annotations

**Syntax** `find_system(sys, 'c1', cv1, 'c2', cv2,...'p1', v1, 'p2', v2,...)`

**Description** `find_system(sys, 'c1', cv1, 'c2', cv2,...'p1', v1, 'p2', v2,...)` searches the loaded systems or subsystems specified by `sys`, using the constraints `c1`, `c2` etc., with values `cv1`, `cv2`, etc., and returns handles or paths to the objects whose parameters, `p1`, `p2`, etc., have the values `v1`, `v2`, etc. The `sys` argument can be a pathname (or cell array of pathnames), a handle (or vector of handles), or omitted. To search block dialog parameter values, specify 'BlockDialogParams' as the parameter name.

---

**Note** All the search constraints must precede all the parameter-value pairs in the argument list.

---

If `sys` is a pathname or cell array of pathnames, `find_system` returns a cell array of pathnames of the objects it finds. If `sys` is a handle or a vector of handles, `find_system` returns a vector of handles to the objects that it finds. If `sys` is omitted, `find_system` searches all loaded systems and returns a cell array of pathnames.

Case is ignored for parameter names. Value strings are case sensitive by default (see the 'CaseSensitive' search constraint for more information). Any parameters that correspond to dialog box entries have string values. See "Model Parameters" on page 7-2 and "Block-Specific Parameters" on page 7-113 for a list of model and block parameters.

You can specify any of the following search constraints.

Name	Value Type	Description
'SearchDepth'	scalar	Restricts the search depth to the specified level (0 for loaded systems only, 1 for blocks and subsystems of the top-level system, 2 for the top-level system and its children, etc.). The default is all levels.
'LookUnderMasks'	'none'	Search skips masked subsystems.
	{'graphical'}	Search includes masked subsystems that have no workspaces and no dialogs. This is the default.
	'functional'	Search includes masked subsystems that do not have dialogs.
	'all'	Search includes all masked subsystems.
'FollowLinks'	'on'   {'off'}	If 'on', search follows links into library blocks. The default is 'off'.
'FindAll'	'on'   {'off'}	If 'on', search extends to lines, ports, and annotations within systems. The default is 'off'. Note that <code>find_system</code> returns a vector of handles when this option is 'on', regardless of the array type of <code>sys</code> .
'CaseSensitive'	{'on'}   'off'	If 'on', search considers case when matching search strings. The default is 'on'.

# find\_system

Name	Value Type	Description
'RegExp'	'on'   {'off'}	If 'on', search treats search expressions as regular expressions. Use to search for partial matches. The default is 'off'.  See “Searching with Regular Expressions” on page 2-186.
'LoadFullyIfNeeded'	{'on'}   'off'	If 'on', attempts to load any partially loaded models. The default is 'on'. If 'off', disables the model loading, for example to prevent load warnings.
'Variants'	{'ActiveVariants'}	(Default) Search in only the active variant subsystems.
	'AllVariants'	Search in all variants.
	'ActivePlusCodeVariants'	Search all variants if any generate preprocessor conditionals. Otherwise, search only the active variant.
'IncludeCommented'	'on'   {'off'}	Specify whether to include commented blocks in the search.

The table indicates default constraint values in brackets. If you omit a 'constraint', find\_system uses the default constraint value.

## Examples

This command returns a cell array containing the names of all loaded systems and blocks.

```
find_system
```

This command returns the names of all loaded block diagrams.

```
open_bd = find_system('type', 'block_diagram')
```

This command returns the names of all Goto blocks that are children of the Unlocked subsystem in the sldemo\_clutch system.

```
sldemo_clutch
find_system('sldemo_clutch/
Unlocked', 'SearchDepth', 1, 'BlockType', 'Goto')
```

These commands return the names of all Gain blocks in the vdp system having a Gain parameter value of 1.

```
vdp
gb = find_system('vdp', 'BlockType', 'Gain')
find_system(gb, 'Gain', '1')
```

The preceding two commands are equivalent to this command:

```
vdp
find_system('vdp', 'BlockType', 'Gain', 'Gain', '1')
```

These commands obtain the handles of all lines and annotations in the vdp system.

```
vdp
sys = get_param('vdp', 'Handle');
l = find_system(sys, 'FindAll', 'on', 'type', 'line');
a = find_system(sys, 'FindAll', 'on', 'type',
'annotation');
```

Turn off the LoadFullyIfNeeded search constraint.

```
find_system(gcs, 'LoadFullyIfNeeded', 'off', 'ParameterName', 'ParameterValue')
```

Search for partial matches for X within any block dialog parameter value:

```
find_system('Regexp', 'on', 'BlockDialogParams', 'X')
```

## Searching for Blocks with a Specific Tag

Use the block **Tag** property to search for blocks.

- 1 Open the vdp model.

```
open_system('vdp')
```

- 2 Right-click the Sum block, and from the menu, select **Properties**. The Block Properties: Sum dialog opens.

- 3 In the **Tag** box, enter `sum blocks`, and then click **OK**.

- 4 Search for the tag `sum blocks`.

```
find_system('vdp', 'Tag', 'sum blocks')
```

```
ans =  
    'vdp/Sum'
```

## Searching Block Dialog Parameter Values

Use the parameter `'BlockDialogParams'` to search block dialog parameter values. For example, to find any block which has a dialog parameter whose value is the string `'X+1'`, enter:

```
find_system('BlockDialogParams', 'X+1')
```

To find any partial matches within parameter values, for any `find_system` command, first specify the option `'Regexp', 'on'`. For the example above, to find `X` within the parameter value `'X+1'`, enter:

```
find_system('Regexp', 'on', 'BlockDialogParams', 'X')
```

## Searching with Regular Expressions

If you specify the `'RegExp'` constraint as `'on'`, `find_system` treats search value strings as regular expressions. A regular expression is a string of characters in which some characters have special pattern-matching significance. For details, see “Regular Expressions”.

Regular expressions greatly expand the types of searches you can perform with `find_system`. For example, regular expressions allow you to do partial-word searches. You can search for all objects that have a

specified parameter that contains or begins or ends with a specified string of characters.

To use regular expressions to search Simulink systems, specify the 'regexp' search constraint as 'on' in a `find_system` command and use a regular expression anywhere you would use an ordinary search value string.

For example, the following command finds all the inport and outport blocks in the `sldemo_clutch` model that is provided with Simulink software.

```
sldemo_clutch  
find_system('sldemo_clutch', 'regexp', 'on', 'blocktype', 'port')
```

## See Also

[get\\_param](#) | [set\\_param](#)

## Purpose

Create Simulink.NumericType object describing fixed-point or floating-point data type

## Syntax

```
a = fixdt(Signed, WordLength)
a = fixdt(Signed, WordLength, FractionLength)
a = fixdt(Signed, WordLength, TotalSlope, Bias)
a = fixdt(Signed, WordLength, SlopeAdjustmentFactor, FixedExponent,
    Bias)
a = fixdt(DataTypeNameString)
a = fixdt(..., 'DataTypeOverride', 'Off')
[DataType, IsScaledDouble] = fixdt(DataTypeNameString)
[DataType, IsScaledDouble] = fixdt(DataTypeNameString,
    'DataTypeOverride', 'Off')
```

## Description

`a = fixdt(Signed, WordLength)` returns a Simulink.NumericType object describing a fixed-point data type with unspecified scaling. The scaling would typically be determined by another block parameter. Signed can be 0 (false) for unsigned or 1 (true) for signed.

`a = fixdt(Signed, WordLength, FractionLength)` returns a Simulink.NumericType object describing a fixed-point data type with binary point scaling. FractionLength can be greater than WordLength. For more information, see “Binary Point Interpretation”.

`a = fixdt(Signed, WordLength, TotalSlope, Bias)` or `a = fixdt(Signed, WordLength, SlopeAdjustmentFactor, FixedExponent, Bias)` returns a Simulink.NumericType object describing a fixed-point data type with slope and bias scaling.

`a = fixdt(DataTypeNameString)` returns a Simulink.NumericType object describing an integer, fixed-point, or floating-point data type specified by a data type name. The data type name can be either the name of a built-in Simulink data type or the name of a fixed-point data type that conforms to the naming convention for fixed-point names established by the Fixed-Point Designer product. For more information, see “Fixed-Point Data Type and Scaling Notation” in the Fixed-Point Designer documentation.

`a = fixdt(..., 'DataTypeOverride', 'Off')` returns a `Simulink.NumericType` object with its `DataTypeOverride` parameter set to `Off`. The default value for this property is `Inherit`. You can specify the `DataTypeOverride` parameter after any combination of other input parameters.

`[DataType, IsScaledDouble] = fixdt(DataTypeNameString)` returns a `Simulink.NumericType` object describing an integer, fixed-point, or floating-point data type specified by a data type name and a flag that indicates whether the specified data type name was the name of a scaled double data type.

`[DataType, IsScaledDouble] = fixdt(DataTypeNameString, 'DataTypeOverride', 'Off')` returns:

- A `Simulink.NumericType` object describing an integer, fixed-point, or floating-point data type specified by a data type name. The `DataTypeOverride` parameter of the `Simulink.NumericType` object is set to `Off`.
- A flag that indicates whether the specified data type name was the name of a scaled double data type.

## Examples

Return a `Simulink.NumericType` object describing a fixed-point data type with unspecified scaling:

```
a = fixdt(1,16)
```

```
a =
```

```
Simulink.NumericType
  DataTypeMode: 'Fixed-point: unspecified scaling'
  Signedness: 'Signed'
  WordLength: 16
  IsAlias: false
  HeaderFile: ''
  Description: ''
```

---

Return a `Simulink.NumericType` object describing a fixed-point data type with binary point scaling :

```
a = fixdt(1,16,2)
```

```
a =
```

```
Simulink.NumericType
  DataTypeMode: 'Fixed-point: binary point scaling'
  Signedness: 'Signed'
  WordLength: 16
  FractionLength: 2
  IsAlias: false
  HeaderFile: ''
  Description: ''
```

---

Return a `Simulink.NumericType` object describing a fixed-point data type with slope and bias scaling:

```
a = fixdt(1, 16, 2^-2, 4)
```

```
a =
```

```
Simulink.NumericType
  DataTypeMode: 'Fixed-point: slope and bias scaling'
  Signedness: 'Signed'
  WordLength: 16
  Slope: 0.25
  Bias: 4
  IsAlias: false
  HeaderFile: ''
  Description: ''
```

---

Return a `Simulink.NumericType` object describing an integer, fixed-point, or floating-point data type specified by a data type name:

```
[DataType,IsScaledDouble] = fixdt('ufix8')

DataType =

Simulink.NumericType
    DataTypeMode: 'Fixed-point: binary point scaling'
    Signedness: 'Unsigned'
    WordLength: 8
    FractionLength: 0
    IsAlias: false
    HeaderFile: ''
    Description: ''
IsScaledDouble =

    0
```

---

Return a `Simulink.NumericType` object with its `DataTypeOverride` property set to `Off`:

```
a = fixdt(0, 8, 2, 'DataTypeOverride', 'Off')

a =

Simulink.NumericType
    DataTypeMode: 'Fixed-point: binary point scaling'
    Signedness: 'Unsigned'
    WordLength: 8
    FractionLength: 2
    DataTypeOverride: Off
    IsAlias: false
    HeaderFile: ''
    Description: ''
```

## See Also

`float` | `sfix` | `sfrac` | `sint` | `ufix` | `ufrac` | `uint`

# fixpt\_evenspace\_cleanup

---

**Purpose** Modify breakpoints of lookup table to have even spacing

**Syntax** `xdata_modified = fixpt_evenspace_cleanup(xdata,xdt,xscale)`

**Description** `xdata_modified = fixpt_evenspace_cleanup(xdata,xdt,xscale)` modifies breakpoints of a lookup table to have even spacing after quantization. By adjusting breakpoints to have even spacing after quantization, Simulink Coder generated code can exclude breakpoints from memory.

`xdata` is the breakpoint vector of a lookup table to make evenly spaced, such as `0:0.005:1`. `xdt` is the data type of the breakpoints, such as `sfix(16)`. `xscale` is the scaling of the breakpoints, such as  $2^{-12}$ . Using these three inputs, `fixpt_evenspace_cleanup` returns the modified breakpoints in `xdata_modified`.

This function works only with nontunable data and considers data to have even spacing relative to the scaling slope. For example, the breakpoint vector `[0 2 5]`, which has spacing value 2 and 3, appears to have uneven spacing. However, the difference between the maximum spacing 3 and the minimum spacing 2 equals 1. If the scaling slope is 1 or greater, a spacing variation of 1 represents a 1-bit change or less. In this case, the `fixpt_evenspace_cleanup` function considers a spacing variation of 1 bit or less to be even.

Modifications to breakpoints can change the numerical behavior of a lookup table. To check for changes, test the model using simulation, rapid prototyping, or other appropriate methods.

**Examples** Modify breakpoints of a lookup table to have even spacing after quantization:

```
xdata = 0:0.005:1;
xdt = sfix(16);
xscale = 2^-12;
xdata_modified = fixpt_evenspace_cleanup(xdata,xdt,xscale)
```

## See Also

`fixdt` | `fixpt_interp1` | `fixpt_look1_func_approx` |  
`fixpt_look1_func_plot` | `sfix` | `ufix`

## Tutorials

- “Effects of Spacing on Speed, Error, and Memory Usage”
- “Create Lookup Tables for a Sine Function”

# fixpt\_interp1

---

**Purpose** Implement 1-D lookup table

**Syntax**  $y =$   
`fixpt_interp1(xdata,ydata,x,xdt,xscale,ydt,yscale,rndmeth)`

**Description**  $y =$   
`fixpt_interp1(xdata,ydata,x,xdt,xscale,ydt,yscale,rndmeth)`  
implements a one-dimensional lookup table to find output  $y$  for input  $x$ . If  $x$  falls between two  $xdata$  values (breakpoints),  $y$  is the result of interpolating between the corresponding  $ydata$  values. If  $x$  is greater than the maximum value in  $xdata$ ,  $y$  is the maximum  $ydata$  value. If  $x$  is less than the minimum value in  $xdata$ ,  $y$  is the minimum  $ydata$  value.

If the input data type  $xdt$  or the output data type  $ydt$  is floating point, `fixpt_interp1` performs the interpolation using floating-point calculations. Otherwise, `fixpt_interp1` uses integer-only calculations. These calculations handle the input scaling  $xscale$  and the output scaling  $yscale$  and obey the rounding method  $rndmeth$ .

## Input Arguments

**xdata**  
Vector of breakpoints for the lookup table, such as `linspace(0,8,33)`.

**ydata**  
Vector of table data that correspond to the breakpoints for the lookup table, such as `sin(xdata)`.

**x**  
Vector of input values for the lookup table to process, such as `linspace(-1,9,201)`.

**xdt**  
Data type of input  $x$ , such as `sfix(8)`.

**xscale**

Scaling for input  $x$ , such as  $2^{-3}$ .

### **ydt**

Data type of output  $y$ , such as `sfixed(16)`.

### **yscale**

Scaling for output  $y$ , such as  $2^{-14}$ .

### **rndmeth**

Rounding mode supported by fixed-point Simulink blocks:

'Ceiling'	Round to the nearest representable number in the direction of positive infinity.
'Floor' (default)	Round to the nearest representable number in the direction of negative infinity.
'Nearest'	Round to the nearest representable number.
'Toward Zero'	Round to the nearest representable number in the direction of zero.

## **Examples**

Interpolate outputs for  $x$  using a 1-D lookup table that approximates the sine function:

```
xdata = linspace(0,8,33).';
ydata = sin(xdata);
% Define input x as a vector of 201 evenly
% spaced points between -1 and 9 (includes
% values both lower and higher than the range
% of breakpoints in xdata)
x = linspace(-1,9,201).';
% Interpolate output values for x
```

# fixpt\_interp1

---

```
y = fixpt_interp1(xdata,ydata,x,sfix(8),2^-3,sfix(16),...  
  2^-14,'Floor')
```

## See Also

[fixpt\\_evenspace\\_cleanup](#) | [fixpt\\_look1\\_func\\_approx](#) |  
[fixpt\\_look1\\_func\\_plot](#)

## Tutorials

- “Producing Lookup Table Data”

## Purpose

Optimize fixed-point approximation of nonlinear function by interpolating lookup table data points

## Syntax

```
[xdata,ydata,errworst] = fixpt_look1_func_approx('func',...  
xmin,xmax,xdt,xscale,ydt,yscale,rndmeth,errmax,nptsmax)  
[xdata,ydata,errworst] = fixpt_look1_func_approx('func',...  
xmin,xmax,xdt,xscale,ydt,yscale,rndmeth,errmax,[])  
[xdata,ydata,errworst] = fixpt_look1_func_approx('func',...  
xmin,xmax,xdt,xscale,ydt,yscale,rndmeth,[],nptsmax)  
[xdata,ydata,errworst] = fixpt_look1_func_approx('func',...  
xmin,xmax,xdt,xscale,ydtydt,yscale,rndmeth,errmax,nptsmax,spacing)
```

## Description

```
[xdata,ydata,errworst] = fixpt_look1_func_approx('func',...  
xmin,xmax,xdt,xscale,ydt,yscale,rndmeth,errmax,nptsmax)
```

returns the optimal breakpoints of a lookup table, an ideal function applied to the breakpoints, and the worst-case approximation error. The lookup table satisfies the maximum acceptable error and maximum number of points that you specify.

```
[xdata,ydata,errworst] = fixpt_look1_func_approx('func',...  
xmin,xmax,xdt,xscale,ydt,yscale,rndmeth,errmax,[])
```

returns the optimal breakpoints of a lookup table, an ideal function applied to the breakpoints, and the worst-case approximation error. The lookup table satisfies the maximum acceptable error that you specify.

```
[xdata,ydata,errworst] = fixpt_look1_func_approx('func',...  
xmin,xmax,xdt,xscale,ydt,yscale,rndmeth,[],nptsmax)
```

returns the optimal breakpoints of a lookup table, an ideal function applied to the breakpoints, and the worst-case approximation error. The lookup table satisfies the maximum number of points that you specify.

```
[xdata,ydata,errworst] = fixpt_look1_func_approx('func',...  
xmin,xmax,xdt,xscale,ydtydt,yscale,rndmeth,errmax,nptsmax,spacing)
```

returns the optimal breakpoints of a lookup table, an ideal function applied to the breakpoints, and the worst-case approximation error. The lookup table satisfies the maximum acceptable error, maximum number of points, and breakpoint spacing that you specify.

# fixpt\_look1\_func\_approx

---

In each case, `fixpt_look1_func_approx` interpolates between lookup table data points to optimize the fixed-point approximation. The inputs `xmin` and `xmax` specify the range over which to approximate the breakpoints. The inputs `xdt`, `xscale`, `ydt`, `yscale`, and `rndmeth` follow conventions used by fixed-point Simulink blocks.

The inputs `errmax`, `nptsmax`, and `spacing` are optional. Of these inputs, you must specify at least `errmax` or `nptsmax`. If you omit one of those two inputs, you must use brackets, `[]`, in place of the omitted input. `fixpt_look1_func_approx` ignores that requirement for the lookup table.

If you do not specify `spacing`, and more than one spacing satisfies `errmax` and `nptsmax`, `fixpt_look1_func_approx` chooses in this order: power-of-2 spacing, even spacing, uneven spacing. This behavior applies when you specify both `errmax` and `nptsmax`, but not when you specify just one of the two.

## Input Arguments

### **func**

Function of `x` for which to approximate breakpoints. Enclose this expression in single quotes, for example, `'sin(2*pi*x)'`.

### **xmin**

Minimum value of `x`.

### **xmax**

Maximum value of `x`.

### **xdt**

Data type of `x`.

### **xscale**

Scaling for the `x` values.

### **ydt**

Data type of  $y$ .

## **yscale**

Scaling for the  $y$  values.

## **rndmeth**

Rounding mode supported by fixed-point Simulink blocks:

'Ceiling'	Round to the nearest representable number in the direction of positive infinity.
'Floor' (default)	Round to the nearest representable number in the direction of negative infinity.
'Nearest'	Round to the nearest representable number.
'Toward Zero'	Round to the nearest representable number in the direction of zero.

## **errmax**

Maximum acceptable error between the ideal function and the approximation given by the lookup table.

## **nptsmax**

Maximum number of points for the lookup table.

## **spacing**

Spacing of breakpoints for the lookup table:

# fixpt\_look1\_func\_approx

---

'even'	Even spacing
'pow2'	Even, power-of-2 spacing
'unrestricted' (default)	Uneven spacing

If you specify...	The breakpoints of the lookup table...
<i>errmax</i> and <i>nptsmax</i>	Meet both criteria, if possible. The <i>errmax</i> requirement has higher priority than <i>nptsmax</i> . If the breakpoints cannot meet both criteria with the specified spacing, <i>nptsmax</i> does not apply.
<i>errmax</i> only	Meet the error criteria, and <code>fixpt_look1_func_approx</code> returns the fewest number of points.
<i>nptsmax</i> only	Meet the points criteria, and <code>fixpt_look1_func_approx</code> returns the smallest worst-case error.

## Output Arguments

### **xdata**

Vector of breakpoints for the lookup table.

### **ydata**

Vector of values from applying the ideal function to the breakpoints.

### **errworst**

Worst-case error, which is the maximum absolute error between the ideal function and the approximation given by the lookup table.

## Examples

Approximate a fixed-point sine function using a lookup table:

```
func = 'sin(2*pi*x)';
% Define the range over which to optimize breakpoints
xmin = 0;
xmax = 0.25;
% Define the data type and scaling for the inputs
xdt = ufix(16);
xscale = 2^-16;
% Define the data type and scaling for the outputs
ydt = sfix(16);
yscale = 2^-14;
% Specify the rounding method
rndmeth = 'Floor';
% Define the maximum acceptable error
errmax = 2^-10;
% Choose even, power-of-2 spacing for breakpoints
spacing = 'pow2';
% Create the lookup table
[xdata,ydata,errworst] = fixpt_look1_func_approx(func,...
    xmin,xmax,xdt,xscale,ydt,yscale,rndmeth,errmax,[],spacing);
```

## See Also

[fixpt\\_evenspace\\_cleanup](#) | [fixpt\\_interp1](#) |  
[fixpt\\_look1\\_func\\_plot](#)

## Tutorials

- “Producing Lookup Table Data”

## How To

- “Use Lookup Table Approximation Functions”

# fixpt\_look1\_func\_plot

---

**Purpose** Plot fixed-point approximation function for lookup table

**Syntax** `fixpt_look1_func_plot(xdata,ydata,'func',...  
xmin,xmax,xdt,xscale,ydt,yscale,rndmeth)  
errworst = fixpt_look1_func_plot(xdata,ydata,'func',...  
xmin,xmax,xdt,xscale,ydt,yscale,rndmeth)`

**Description** `fixpt_look1_func_plot(xdata,ydata,'func',...  
xmin,xmax,xdt,xscale,ydt,yscale,rndmeth)` plots a lookup table approximation function and the error from the ideal function.

`errworst = fixpt_look1_func_plot(xdata,ydata,'func',...  
xmin,xmax,xdt,xscale,ydt,yscale,rndmeth)` plots a lookup table approximation function and the error from the ideal function. The output `errworst` is the maximum absolute error.

You can use `fixpt_look1_func_approx` to generate `xdata` and `ydata`, the breakpoints and table data for the lookup table, respectively. `fixpt_look1_func_approx` applies the ideal function to the breakpoints in `xdata` to produce `ydata`. While this method is the easiest way to generate `ydata`, you can choose other values for `ydata` as input for `fixpt_look1_func_plot`. Choosing different values for `ydata` can, in some cases, produce a lookup table with a smaller maximum absolute error.

## Input Arguments

### **xdata**

Vector of breakpoints for the lookup table.

### **ydata**

Vector of values from applying the ideal function to the breakpoints.

### **func**

Function of `x` for which to approximate breakpoints. Enclose this expression in single quotes, for example, `'sin(2*pi*x)'`.

### **xmin**

Minimum value of x.

**xmax**

Maximum value of x.

**xdt**

Data type of x.

**xscale**

Scaling for the x values.

**ydt**

Data type of y.

**yscale**

Scaling for the y values.

**rndmeth**

Rounding mode supported by fixed-point Simulink blocks:

'Ceiling'	Round to the nearest representable number in the direction of positive infinity.
'Floor' (default)	Round to the nearest representable number in the direction of negative infinity.
'Nearest'	Round to the nearest representable number.
'Toward Zero'	Round to the nearest representable number in the direction of zero.

# fixpt\_look1\_func\_plot


---

## Examples

Plot a fixed-point approximation of the sine function using data points generated by `fixpt_look1_func_approx`:

```
func = 'sin(2*pi*x)';
% Define the range over which to optimize breakpoints
xmin = 0;
xmax = 0.25;
% Define the data type and scaling for the inputs
xdt = ufix(16);
xscale = 2^-16;
% Define the data type and scaling for the outputs
ydt = sfix(16);
yscale = 2^-14;
% Specify the rounding method
rndmeth = 'Floor';
% Define the maximum acceptable error
errmax = 2^-10;
% Choose even, power-of-2 spacing for breakpoints
spacing = 'pow2';
% Generate data points for the lookup table
[xdata,ydata,errworst]=fixpt_look1_func_approx(func,...
    xmin,xmax,xdt,xscale,ydt,yscale,rndmeth,errmax,[],spacing);
% Plot the sine function (ideal and fixed-point) & errors
fixpt_look1_func_plot(xdata,ydata,func,xmin,xmax,...
    xdt,xscale,ydt,yscale,rndmeth);
```

fixpt\_look1\_func\_plot plots the fixed-point sine function, using generated data points, and plots the error between the ideal function and the fixed-point function. The maximum absolute error and the number of points required appear on the plot. The error drops to zero at a breakpoint, but increases between breakpoints due to curvature differences between the ideal function and the line drawn between breakpoints.

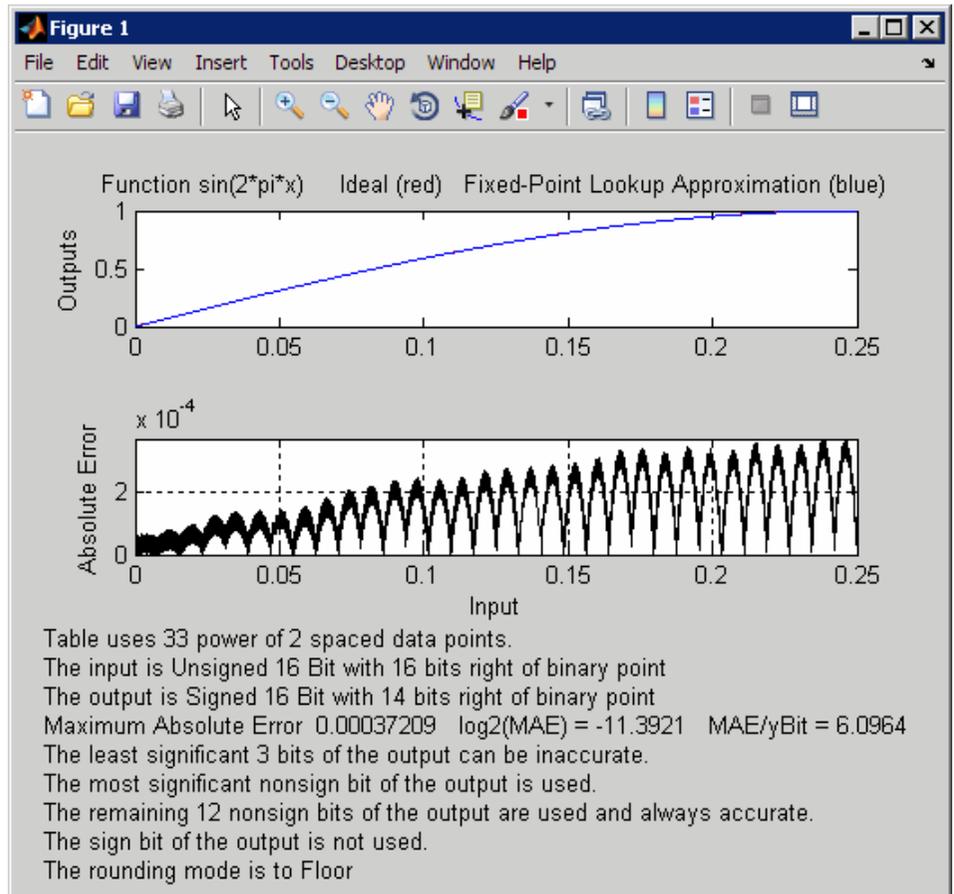

The lookup table requires 33 points to achieve a maximum absolute error of  $2^{-11.3922}$ .

# fixpt\_look1\_func\_plot

---

**See Also**      [fixpt\\_evenspace\\_cleanup](#) | [fixpt\\_interp1](#) | [fixpt\\_look1\\_func\\_approx](#)

**Tutorials**      • “Producing Lookup Table Data”

**How To**      • “Use Lookup Table Approximation Functions”

<b>Purpose</b>	Set property for each fixed-point block in subsystem
<b>Syntax</b>	<code>fixpt_set_all(SystemName,fixptPropertyName,fixptPropertyValue)</code>
<b>Description</b>	<code>fixpt_set_all(SystemName,fixptPropertyName,fixptPropertyValue)</code> sets the property <code>fixptPropertyName</code> of every applicable block in the model or subsystem <code>SystemName</code> to the value <code>fixptPropertyValue</code>
<b>Examples</b>	<p>Set each fixed-point block in a model <code>Filter_1</code> to round towards the floor and saturate upon overflow:</p> <pre>% Round towards the floor fixpt_set_all('Filter_1','RndMeth','Floor')  % Saturate upon overflow fixpt_set_all('Filter_1','DoSatur','on')</pre>

# fixptbestexp

---

**Purpose** Exponent that gives best precision for fixed-point representation of value

**Syntax** `out = fixptbestexp(RealWorldValue, TotalBits, IsSigned)`  
`out = fixptbestexp(RealWorldValue, FixPtDataType)`

**Description** `out = fixptbestexp(RealWorldValue, TotalBits, IsSigned)` returns the exponent that gives the best precision for the fixed-point representation of *RealWorldValue*. *TotalBits* specifies the number of bits for the fixed-point number. *IsSigned* specifies whether the fixed-point number is signed: 1 indicates the number is signed and 0 indicates the number is not signed.

`out = fixptbestexp(RealWorldValue, FixPtDataType)` returns the exponent that gives the best precision based on the data type *FixPtDataType*.

**Examples** Get the exponent that gives the best precision for the real-world value 4/3 using a signed, 16-bit number:

```
out = fixptbestexp(4/3,16,1)
out =
    -14
```

Alternatively, specify the fixed-point data type:

```
out = fixptbestexp(4/3,sfix(16))
out =
    -14
```

This shows that the maximum precision representation of 4/3 is obtained by placing 14 bits to the right of the binary point:

```
01.01010101010101
```

You can specify the precision of this representation in fixed-point blocks by setting the scaling to  $2^{-14}$  or  $2^{\text{fixptbestexp}(4/3,16,1)}$ .

**See Also**      `fixptbestprec`

# fixptbestprec

---

**Purpose** Determine maximum precision available for fixed-point representation of value

**Syntax**  
`out = fixptbestprec(RealWorldValue, TotalBits, IsSigned)`  
`out = fixptbestprec(RealWorldValue, FixPtDataType)`

**Description**  
`out = fixptbestprec(RealWorldValue, TotalBits, IsSigned)` determines the maximum precision for the fixed-point representation of the real-world value specified by `RealWorldValue`. You specify the number of bits for the fixed-point number with `TotalBits`, and you specify whether the fixed-point number is signed with `IsSigned`. If `IsSigned` is 1, the number is signed. If `IsSigned` is 0, the number is not signed. The maximum precision is returned to `out`.  
`out = fixptbestprec(RealWorldValue, FixPtDataType)` determines the maximum precision based on the data type specified by `FixPtDataType`.

## Examples **Example 1**

The following command returns the maximum precision available for the real-world value  $4/3$  using a signed, 8-bit number:

```
out = fixptbestprec(4/3,8,1)
out =
    0.015625
```

Alternatively, you can specify the fixed-point data type:

```
out = fixptbestprec(4/3,sfix(8))
out =
    0.015625
```

This value means that the maximum precision available for  $4/3$  is obtained by placing six bits to the right of the binary point since  $2^{-6}$  equals 0.015625:

01.010101

## Example 2

You can use the maximum precision as the scaling in fixed-point blocks. This enables you to use `fixptbestprec` to perform a type of autoscaling if you would like to designate a known range of your simulation. For example, if your known range is -13 to 22, and you are using a safety margin of 30%:

```
knownMax = 22;
knownMin = -13;
localSafetyMargin = 30;
slope = max( fixptbestprec( (1+localSafetyMargin/100)* ...
    [knownMax,knownMin], sfix(16) ) );
```

The variable `slope` can then be used in the expression that you specify for the **Output data type** parameter in a block mask. Be sure to select the **Lock output data type setting against changes by the fixed-point tools** check box in the same block to prevent the Fixed-Point Tool from overriding the scaling. If you know the range, you can use this technique in place of relying on a model simulation to provide the range to the autoscaling tool, as described in `autofixexp` in the Fixed-Point Designer documentation.

## See Also

`fixptbestexp`

# float

---

**Purpose** Create `Simulink.NumericType` object describing floating-point data type

**Syntax**  
`a = float('single')`  
`a = float('double')`

**Description** `a = float('single')` returns a `Simulink.NumericType` object that describes the data type of an IEEE single (32 total bits, 8 exponent bits).  
`a = float('double')` returns a `Simulink.NumericType` object that describes the data type of an IEEE double (64 total bits, 11 exponent bits).

---

**Note** `float` is a legacy function. In new code, use `fixdt` instead. In existing code, replace `float('single')` with `fixdt('single')` and `float('double')` with `fixdt('double')`.

---

**Examples** Define an IEEE single data type.

```
>> a = float('single')  
  
a =  
  
NumericType with properties:  
  
    DataTypeMode: 'Single'  
        IsAlias: 0  
        DataScope: 'Auto'  
        HeaderFile: ''  
        Description: ''
```

**See Also** `fixdt` | `Simulink.NumericType` | `sfix` | `sfrac` | `sint` | `ufix` | `ufrac` | `uint`

**Purpose** Edit print frames for Simulink and Stateflow block diagrams

**Syntax** `frameedit`  
`frameedit filename`

**Description** `frameedit` starts the PrintFrame Editor, a graphical user interface you use to create borders for Simulink and Stateflow block diagrams. With no argument, `frameedit` opens the **PrintFrame Editor** window with a new file.


`frameedit filename` opens the **PrintFrame Editor** window with the specified filename, where `filename` is a figure file (`.fig`) previously created and saved using `frameedit`.

# frameedit

---

## Tips

This illustrates the main features of the PrintFrame Editor.

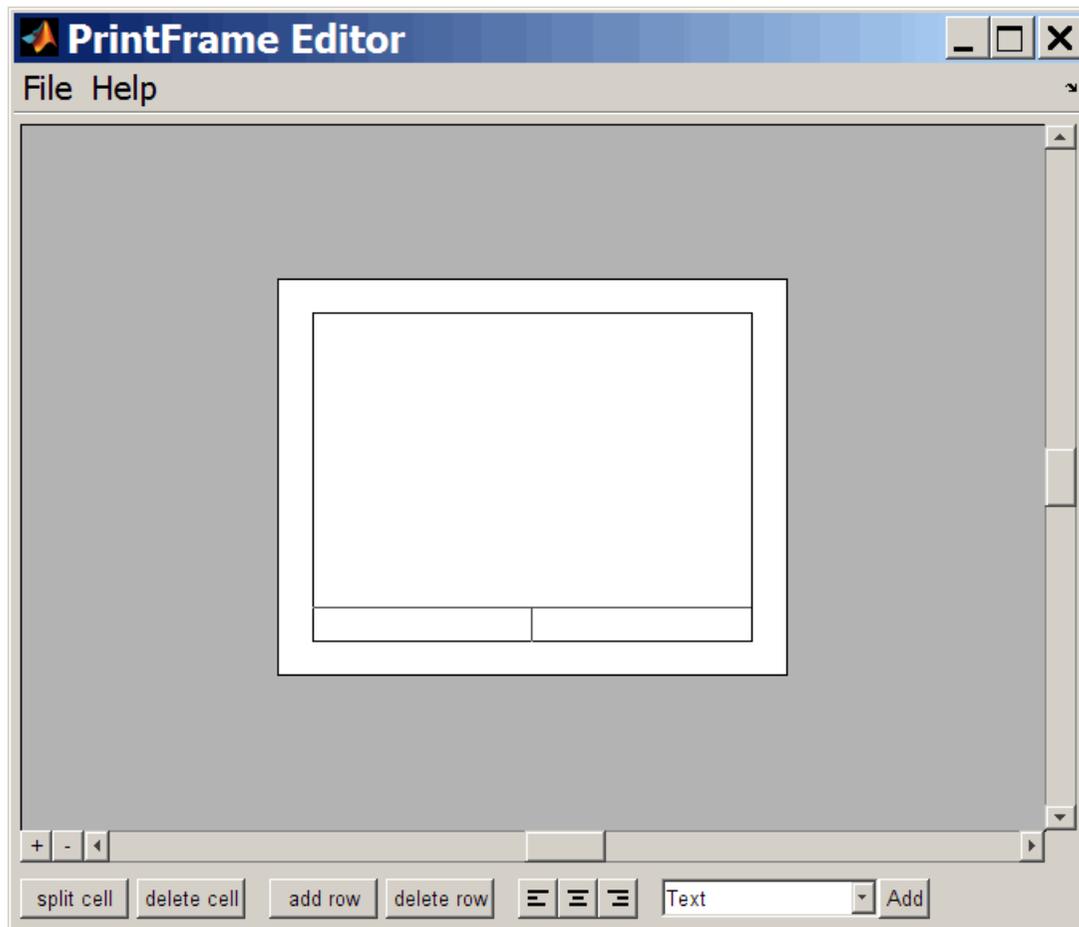

### Closing the PrintFrame Editor

To close the **PrintFrame Editor** window, click the close box in the upper right corner, or select **Close** from the **File** menu.

### **Printing Simulink Block Diagrams with Print Frames**

Select **Print** from the Simulink **File** menu. Check the **Frame** box and supply the filename for the print frame you want to use. Click **OK** in the **Print** dialog box.

### **Getting Help for the PrintFrame Editor**

For further instructions on using the PrintFrame Editor, select **PrintFrame Editor Help** from the **Help** menu in the PrintFrame Editor.

**Purpose** Start Fixed-Point Tool

**Syntax** `fxptdlg('modelName')`

**Description** `fxptdlg('modelName')` starts the Fixed-Point Tool for the Simulink model specified by `modelName`. You can also access this tool by the following methods:

- From the Simulink **Analysis** menu, select **Fixed Point Tool**.
- From a subsystem context (right-click) menu, select **Fixed Point Tool**.

In conjunction with Fixed-Point Designer software, the Fixed-Point Tool provides convenient access to:

- Model and subsystem parameters that control the signal logging, fixed-point instrumentation mode, and data type override, namely, `MinMaxOverflowArchiveMode`, `MinMaxOverflowLogging`, `DataTypeOverride`, and `DataTypeOverrideAppliesTo` (see “Model Parameters” on page 7-2)
- Plotting capabilities that enable you to plot data that resides in the MATLAB workspace, namely, simulation results associated with Scope, To Workspace, and root-level Outport blocks, in addition to logged signal data (see “Signal Logging” in the *Simulink User’s Guide*)
- An interactive automatic data typing feature that proposes fixed-point data types for appropriately configured objects in your model, and then allows you to selectively accept and apply the data type proposals

You can launch the Fixed-Point Tool for any system or subsystem, and the tool controls the object selected in its **Model Hierarchy** pane. If Fixed-Point Designer software is installed, the Fixed-Point Tool **Contents** pane displays the name, data type, design minimum and maximum values, minimum and maximum simulation values, and scaling of each model object that logs fixed-point data. Additionally, if a signal saturates or overflows, the tool displays the number of times

saturation or overflow occurred. You can display an object's dialog box by right-clicking the appropriate entry in the **Contents** pane and selecting **Properties**.

---

**Note** The Fixed-Point Tool works only for models that simulate in Normal mode. The tool does not work when you simulate your model in Accelerator or Rapid Accelerator mode.

---

### Overriding Fixed-Point Specifications

Most of the functionality in the Fixed-Point Tool is for use with the Fixed-Point Designer software. However, even if you do not have Fixed-Point Designer software, you can configure data type override settings to simulate a model that specifies fixed-point data types. In this mode, the Simulink software temporarily overrides fixed-point data types with floating-point data types when simulating the model.

---

**Note** If you use fi objects or embedded numeric data types in your model or workspace, you might introduce fixed-point data types into your model. You can set fipref to prevent the checkout of a Fixed-Point Designer license.

---

To simulate a model without using Fixed-Point Designer:

- 1** In the **Model Hierarchy** pane, select the root model.
- 2** From the Simulink model **Analysis** menu, select **Fixed Point Tool**.  
The Fixed-Point Tool opens.
- 3** In the **Current system settings** panel:
  - Set the **Fixed-point instrumentation mode** parameter to Force off.

- Set the **Data type override** parameter to `Double` or `Single`.
- Set the **Data type override applies to** parameter to `All numeric types`.

**4** If you use `fi` objects or embedded numeric data types in your model, set the `fi`pref `DataTypeOverride` property to `TrueDoubles` or `TrueSingles` (to be consistent with the model-wide data type override setting) and the `DataTypeOverrideAppliesTo` property to `All numeric types`.

For example, at the MATLAB command line, enter:

```
p = fioref('DataTypeOverride', 'TrueDoubles', ...
          'DataTypeOverrideAppliesTo', 'AllNumericTypes');
```

## Parameters and Dialog Box

The Fixed-Point Tool includes the following components:

- **Main** toolbar (see “Main Toolbar” on page 2-218)
- **Model Hierarchy** pane (see “Model Hierarchy Pane” on page 2-223)
- **Contents** pane (see “Contents Pane” on page 2-224)
- **Dialog** pane (see “Dialog Pane” on page 2-231)

### Main Toolbar


The Fixed-Point Tool’s main toolbar appears near the top of the Fixed-Point Tool window under the Fixed-Point Tool’s menu.

The toolbar contains the following buttons that execute commonly used Fixed-Point Tool commands:

Button	Usage
	Open the Fixed-Point Advisor to prepare the model for conversion to fixed point.
	Simulate a model and store the run results.

Button	Usage
	Pause a simulation.
	Stop a simulation.
	Analyze model and store derived minimum and maximum results.
	Propose data types. Propose fraction lengths for specified word lengths or propose word lengths for specified fraction lengths.
	Apply accepted data types.
	Show details for selected result.
	Compare selected runs.
	Create a difference plot for the selected signals.
	Plot the selected signal.
	Create a histogram plot for the selected signal.

The toolbar also contains the **Show** option:

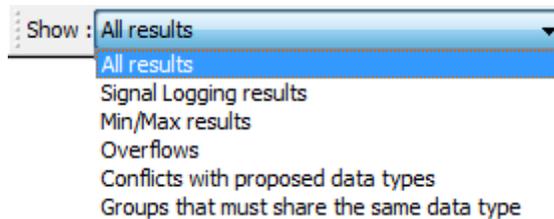

The **Show** option specifies the type of results to display in the **Contents** pane. The **Contents** pane displays information only after you simulate

a system or propose fraction lengths. If there are no results that satisfy a particular filter option, the list will be blank.

Show Option	Result
All results	Displays all results for the selected tree node.
Signal Logging results	<p>For the selected tree node, displays blocks whose output ports have logged signal data. The Fixed-Point tool marks these blocks with the logged signal icon .</p> <hr/> <p><b>Note</b> You can plot simulation results associated with logged signal data. For more information, see “Plot Interface” on page 2-273.</p> <hr/>
Min/Max results	<p>For the selected tree node, displays blocks that record design Min/Max, simulation Min/Max, and overflow data.</p> <p><b>Prerequisites:</b> Fixed-point instrumentation mode should not be set to Force Off.</p>
Overflows	<p>For the selected tree node, displays blocks that have non-zero overflows recorded. If a block has its <b>Saturate on integer overflow</b> option selected, overflow information appears in the <b>Saturations</b> column, otherwise it appears in the <b>OverflowWraps</b> column.</p>

Show Option	Result
<p><b>Conflicts with proposed data types</b></p>	<p>For the selected tree node, displays results that have potential data typing or scaling issues.</p> <p><b>Prerequisites:</b> This information is available only after you propose data types.</p> <p>The Fixed-Point Tool marks these results with a yellow or red icon, as shown here:</p> <ul style="list-style-type: none"> <li data-bbox="658 574 1311 666">  The proposed data type poses potential issues for this object. Open the Result Details dialog box to review these issues.         </li> <li data-bbox="658 687 1299 805">  The proposed data type will introduce errors if applied to this object. Open the Result Details dialog box for details about how to resolve these issues.         </li> </ul>
<p><b>Groups that must share the same data type</b></p>	<p>For the selected tree node, displays blocks that must share the same data type because of data type propagation rules.</p> <p><b>Prerequisites:</b> This information is available only after you propose fraction lengths.</p> <p>The Fixed-Point Tool allocates an identification tag to blocks that must share the same data type. This identification tag is displayed in the <b>DTGroup</b> column as follows:</p> <ul style="list-style-type: none"> <li data-bbox="649 1182 1307 1321"> <p>• If the selected tree node is the model root</p> <p>All results for the model are listed. The <b>DTGroup</b> column is sorted by default so that you can easily view all blocks in a group.</p> </li> <li data-bbox="649 1341 1302 1449"> <p>• If the selected tree node is a subsystem</p> <p>The identification tags have a suffix that indicates the total number of results in each group. For</p> </li> </ul>

Show Option	Result
	example, G2(2) means group G2 has 2 members. This information enables you to see how many members of a group belong to the selected subsystem and which groups share data types across subsystem boundaries.

## Model Hierarchy Pane

The **Model Hierarchy** pane displays a tree-structured view of the Simulink model hierarchy. The first node in the pane represents a Simulink model. Expanding the root node displays subnodes that represent the model's subsystems, MATLAB Function blocks, Stateflow charts, and referenced models.

The Fixed-Point Tool's **Contents** pane displays elements that comprise the object selected in the **Model Hierarchy** pane. The **Dialog** pane provides parameters for specifying the selected object's data type override and fixed-point instrumentation mode. Objects that control the **Fixed-point instrumentation mode** parameter display a red flag on their icons, while those that control the **Data type override** parameter display a green flag. The **Model Hierarchy** pane indicates the value of these parameters by displaying the following abbreviations next to the object name:

Abbreviation	Parameter Value
<b>Fixed-point instrumentation mode</b>	
mmo	Minimums, maximums and overflows
o	Overflows only
fo	Force off
<b>Data type override</b>	
scl	Scaled double
dbl	Double
sgl	Single
fo	Off

See "Dialog Pane" on page 2-231 for more information about these parameters.

## Contents Pane

The **Contents** pane displays a tabular view of objects that log fixed-point data in the system or subsystem selected in the **Model Hierarchy** pane. The table rows correspond to model objects, such as blocks, block parameters, and Stateflow data. The table columns correspond to attributes of those objects, such as the data type, design minimum and maximum values, and simulation minimum and maximum values.

The **Contents** pane displays information only after you simulate a system, analyze the model to derive minimum and maximum values, or propose fraction lengths.

You can control which of the following columns the Fixed-Point Tool displays in this pane. For more information, see “Customizing the Contents Pane View” on page 2-228.

Column Label	Description
<b>Accept</b>	Check box that enables you to selectively accept the Fixed-Point Tool’s data type proposal.
<b>CompiledDesignMax</b>	Compile-time information for <b>DesignMax</b> .
<b>CompiledDesignMin</b>	Compile-time information for <b>DesignMin</b> .
<b>CompiledDT</b>	Compile-time data type. This data type appears on the signal line in <b>sfix</b> format. See “Fixed-Point Data Type and Scaling Notation”.
<b>DerivedMax</b>	Maximum value the Fixed-Point tool derives for this signal from design ranges specified for blocks.

Column Label	Description
<b>DerivedMin</b>	Minimum value the Fixed-Point tool derives for this signal from design ranges specified for blocks.
<b>DesignMax</b>	Maximum value the block specifies in its parameter dialog box, for example, the value of its <b>Output maximum</b> parameter.
<b>DesignMin</b>	Minimum value the block specifies in its parameter dialog box, for example, the value of its <b>Output minimum</b> parameter.
<b>DivByZero</b>	Number of divide-by-zero instances that occur during simulation.
<b>DTGroup</b>	Identification tag associated with objects that share data types.
<b>InitValueMax</b>	<p>Maximum initial value for a signal or parameter. Some model objects provide parameters that allow you to specify the initial values of their signals. For example, the Constant block includes a <b>Constant value</b> that initializes the block output signal.</p> <hr/> <p><b>Note</b> The Fixed-Point Tool uses this parameter when it proposes data types.</p> <hr/>

Column Label	Description
<b>InitValueMin</b>	<p>Minimum initial value for a signal or parameter. Some model objects provide parameters that allow you to specify the initial values of their signals. For example, the Constant block includes a <b>Constant value</b> that initializes the block output signal.</p> <hr/> <p><b>Note</b> The Fixed-Point Tool uses this parameter when it proposes data types.</p>
<b>LogSignal</b>	<p>Check box that allows you to enable or disable signal logging for an object.</p>
<b>ModelRequiredMin</b>	<p>Minimum value of a parameter used during simulation. For example, the n-D Lookup Table block uses the <b>Breakpoints</b> and <b>Table data</b> parameters to perform its lookup operation and generate output. In this example, the block uses more than one parameter so the Fixed-Point Tool sets <b>ModelRequiredMin</b> to the minimum of the minimum values of all these parameters.</p> <hr/> <p><b>Note</b> The Fixed-Point Tool uses this parameter when it proposes data types.</p>

Column Label	Description
<b>ModelRequiredMax</b>	<p>Maximum value of a parameter used during simulation. For example, the n-D Lookup Table block uses the <b>Breakpoints</b> and <b>Table data</b> parameters to perform its lookup operation and generate output. In this example, the block uses more than one parameter so the Fixed-Point Tool sets <b>ModelRequiredMax</b> to the maximum of the maximum values of all these parameters.</p> <hr/> <p><b>Note</b> The Fixed-Point Tool uses this parameter when it proposes data types.</p> <hr/>
<b>Name</b>	Identifies path and name of block.
<b>OverflowWraps</b>	Number of overflows that wrap during simulation.
<b>ProposedDT</b>	Data type that the Fixed-Point Tool proposes.
<b>ProposedMax</b>	Maximum value that results from the data type the Fixed-Point Tool proposes.
<b>ProposedMin</b>	Minimum value that results from the data type the Fixed-Point Tool proposes.
<b>Run</b>	Indicates the run name for these results.
<b>Saturations</b>	Number of overflows that saturate during simulation.
<b>SimDT</b>	Data type the block uses during simulation. This data type appears on the signal line in <code>sfix</code> format. See “Fixed-Point Data Type and Scaling Notation”.

Column Label	Description
SimMax	Maximum value that occurs during simulation.
SimMin	Minimum value that occurs during simulation.
SpecifiedDT	Data type the block specifies in its parameter dialog box, for example, the value of its <b>Output data type</b> parameter.

## Customizing the Contents Pane View

You can customize the **Contents** pane in the following ways:

- “Using Column Views”
- “Changing Column Order and Width”
- “Sorting Rows by Column”

### Using Column Views

The Fixed-Point Tool provides the following standard Column Views:

View Name	Columns Provided	When Does the Fixed-Point Tool Display this View?
Simulation View (default)	Name, Run, CompiledDT, SpecifiedDT, SimMin, SimMax, DesignMin, DesignMax, OverflowWraps, Saturations	After a simulating minimum and maximum values.
Automatic Data Typing View	Name, Run, CompiledDT, CompiledDesignMax, CompiledDesignMin, AcceptedProposedDT, SpecifiedDT, DesignMin, DesignMax, DerivedMin,	After proposing data types if proposal is based on simulation, derived, and design min/max.

View Name	Columns Provided	When Does the Fixed-Point Tool Display this View?
	<b>DerivedMax, SimMin, SimMax, OverflowWraps, Saturations, ProposedMin, ProposedMax</b>	
Automatic Data Typing With Simulation Min/Max View	<b>Name, Run, CompiledDT, Accept, ProposedDT, SpecifiedDT, SimMin, SimMax, DesignMin, DesignMax, OverflowWraps, Saturations, ProposedMin, ProposedMax</b>	After proposing data types if the proposal is based on simulation and design min/max.
Automatic Data Typing With Derived Min/Max View	<b>Name, Run, CompiledDesignMax, CompiledDesignMin, Accepted, ProposedDT, SpecifiedDT, DerivedMin, DerivedMax, ProposedMin, ProposedMax</b>	After proposing data types if the proposal is based on design min/max and/or derived min/max.

View Name	Columns Provided	When Does the Fixed-Point Tool Display this View?
Data Collection View	<b>Name, Run, CompiledDT, SpecifiedDT, DerivedMin, DerivedMax, SimMin, SimMax, OverflowWraps, Saturations</b>	After simulating or deriving minimum and maximum values if the results have simulation min/max, derived min/max, and design min/max.
Derived Min/Max View	<b>Name, Run, CompiledDesignMax, CompiledDesignMin, DerivedMin, DerivedMax</b>	After deriving minimum and maximum values.

By selecting **Show Details**, you can:

- Customize the standard column views
- Create your own column views
- Export and import column views saved in MAT-files, which you can share with other users
- Reset views to factory settings

If you upgrade to a new release of Simulink, and the column views available in the Fixed-Point Tool do not match the views described in the documentation, reset your views to factory settings. When you reset all views, the Model Explorer removes all the custom views you have created. Before you reset views to factory settings, export any views that you will want to use in the future.

For more information on controlling views, see “Control Model Explorer Contents Using Views”

### **Changing Column Order and Width**

You can alter the order and width of columns that appear in the **Contents** pane as follows:

- To move a column, click and drag the head of a column to a new location among the column headers.
- To make a column wider or narrower, click and drag the right edge of a column header. If you double-click the right edge of a column header, the column width changes to fit its contents.

### **Sorting by Columns**

By default, the **Contents** pane displays its contents in ascending order of the **Name** column. You can alter the order in which the **Contents** pane displays its rows as follows:

- To sort all the rows in ascending order of another column, click the head of that column.
- To change the order from ascending to descending, simply click again on the head of that column.

### **Dialog Pane**

Use the Dialog pane to view and change properties associated with the object selected in the **Model Hierarchy** pane.

Fixed-point preparation for selected system

 Fixed-Point Advisor

Shortcuts to set up runs

 Model-wide double override and full instrumentation

 Model-wide no override and full instrumentation

[Add/Edit shortcuts](#)

Settings for selected system

Fixed-point instrumentation mode:

Data type override:

Data collection

Store results in run:

 Simulate

Merge instrumentation results from multiple simulations

 Derive min/max values for model

Highlight results with potential issues

Automatic data typing for selected system

 Propose fraction lengths [Configure...](#)

 Apply accepted fraction lengths

 Show details for selected result

The Dialog pane includes the following components:

<b>Component</b>	<b>Description</b>
<b>Fixed-point preparation for selected system</b>	Contains the <b>Fixed-Point Advisor</b> button. Use this button to open the Fixed-Point Advisor to guide you through the tasks to prepare your floating-point model for conversion to fixed point. For more information, see “Fixed-Point Advisor” on page 2-235.
<b>Shortcuts to set up runs</b>	Contains shortcuts that allow you to set up run parameters, such as the run name and data type override settings, by clicking a button. The Fixed-Point Tool provides several factory default shortcuts for common configurations and allows you to set up your own shortcuts. For more information, see “Shortcuts to set up runs” on page 2-236.
<b>Settings for selected system</b>	Contains controls to set the fixed-point instrumentation mode and data type override settings. For more information, see “Fixed-point instrumentation mode” on page 2-239, “Data type override” on page 2-241, and “Data type override applies to” on page 2-244.
<b>Data collection</b>	Contains controls to collect simulation or derived minimum and maximum data for your model.

Component	Description
Automatic data typing for selected system	Contains controls to propose and, optionally, accept data type proposals.
Show details for selected result	Use this button to view data type information about the object selected in the <b>Contents</b> pane. For more information, see “Show details for selected result” on page 2-263.

### Tips

From the Fixed-Point Tool **View** menu, you can customize the layout of the **Dialog** pane. Select:

- **Show Dialog View** to show/hide the **Dialog** pane. By default, the Fixed-Point Tool displays this pane. Hide it to make more room for displaying results.
- **Settings for selected system** to show/hide the **Settings for selected system** pane. By default, the Fixed-Point Tool displays this pane.
- **Show Fixed-Point Advisor** to show/hide the **Prepare conversion in the Fixed-Point Advisor** button. By default, the Fixed-Point Tool displays this button.

**Fixed-Point Advisor**

Open the Fixed-Point Advisor

**Action**

Opens the Fixed-Point Advisor which guides you through the tasks to prepare a floating-point model for conversion to fixed point.

Use the Fixed-Point Advisor if:

- You have a floating-point model
- You have inheritance rules in your model
- Your model contains blocks that do not support fixed-point data types

## Shortcuts to set up runs

Use shortcuts to configure model-wide data type override and instrumentation settings prior to simulation. The Fixed-Point Tool provides:

- Frequently-used factory default shortcuts
- The ability to add and edit custom shortcuts

---

**Note** The factory default shortcuts apply to the whole model. You cannot use these shortcuts to configure subsystems.

---

### Factory Defaults

Factory Default Shortcut	Description
<p><b>Model-wide double override and full instrumentation</b></p>	<p>Sets:</p> <ul style="list-style-type: none"> <li>• <b>Run name</b> to DoubleOverride</li> <li>• <b>Fixed-point instrumentation mode</b> to Minimums, maximums and overflows</li> <li>• <b>Data type override</b> to Double</li> <li>• <b>Data type override applies to</b> to All numeric types</li> </ul> <p>By default, a button for this shortcut appears in the <b>Shortcuts to set up runs</b> pane.</p>
<p><b>Model-wide no override with full instrumentation</b></p>	<p>Sets:</p> <ul style="list-style-type: none"> <li>• <b>Run name</b> to FixedPoint</li> <li>• <b>Fixed-point instrumentation mode</b> to Minimums, maximums and overflows</li> </ul>

Factory Default Shortcut	Description
	<ul style="list-style-type: none"><li>• <b>Data type override</b> to Use local settings</li></ul> <p>By default, a button for this shortcut appears in the <b>Shortcuts to set up runs</b> pane.</p>
<b>Model-wide single override and full instrumentation</b>	<p>Sets:</p> <ul style="list-style-type: none"><li>• <b>Run name</b> to SingleOverride</li><li>• <b>Fixed-point instrumentation mode</b> to Minimums, maximums and overflows</li><li>• <b>Data type override</b> to Single</li><li>• <b>Data type override applies to</b> to All numeric types</li></ul>

Factory Default Shortcut	Description
<b>Model-wide instrumentation off</b>	Sets <b>Fixed-point instrumentation mode</b> to Force Off. Does not affect run name or data type override settings.

### **Add/Edit shortcuts**

Use **Add/Edit shortcuts** to open the “Shortcut Editor” on page 2-264, which you use to add new shortcuts or edit existing user-defined shortcuts. You cannot edit the factory default shortcuts.

## Fixed-point instrumentation mode

Control which objects log minimum, maximum and overflow data during simulation.

### Settings

**Default:** Use local settings

Use local settings

Logs data according to the value of this parameter set for each subsystem. Otherwise, settings for parent systems always override those of child systems.

Minimums, maximums and overflows

Logs minimum value, maximum value, and overflow data for all blocks in the current system or subsystem during simulation.

Overflows only

Logs only overflow data for all blocks in the current system or subsystem.

Force off

Does not log data for any block in the current system or subsystem. Use this selection to work with models containing fixed-point enabled blocks if you do not have a Fixed-Point Designer license.

### Tips

- The Fixed-Point Tool marks the system controlling the **Fixed-point instrumentation mode** with a red flag .
- You cannot change the instrumentation mode for linked subsystems or referenced models.

### Dependencies

The value of this parameter for parent systems controls min/max logging for all child subsystems, unless Use local settings is selected.

### Command-Line Alternative

**Parameter:** 'MinMaxOverflowLogging'

**Type:** string

**Value:** 'UseLocalSettings' | 'MinMaxAndOverflow' |  
'OverflowOnly' | 'ForceOff'  
**Default:** 'UseLocalSettings'

### Data type override

Control data type override of objects that allow you to specify data types in their dialog boxes.

#### Settings

**Default:** Use local settings

The value of this parameter for parent systems controls data type override for all child subsystems, unless `Use local settings` is selected.

#### Use local settings

Overrides data types according to the setting of this parameter for each subsystem.

#### Scaled double

Overrides the data type of all blocks in the current system and subsystem with doubles; however, the scaling and bias specified in the dialog box of each block is maintained.

#### Double

Overrides the output data type of all blocks in the current system or subsystem with doubles. The overridden values have no scaling or bias.

#### Single

Overrides the output data type of all blocks in the current system or subsystem with singles. The overridden values have no scaling or bias.

#### Off

No data type override is performed on any block in the current system or subsystem. The settings on the blocks are used.

#### Tips

- Set this parameter to `Double` or `Single` and the **Data type override applies to** parameter to `All numeric types` to work with models containing fixed-point enabled blocks if you do not have a Fixed-Point Designer license.

- You cannot change the **Data type override** setting on linked subsystems or referenced models.
- The Fixed-Point Tool marks the system controlling the **Data type override** mode with a green flag .
- Data type override never applies to boolean data types.
- When you set the **Data type override** parameter of a parent system to **Double**, **Single**, **Scaled double** or **Off**, this setting also applies to all child subsystems and you cannot change the data type override setting for these child subsystems. When the **Data type override** parameter of a parent system is **Use local setting**, you can set the **Data type override** parameter for individual children.
- Use this parameter with the **Data type override applies to** parameter. The following table details how these two parameters affect the data types in your model.

Fixed-Point Tool Settings		Block Local Settings	
Data type override	Data type override applies to	Floating-point types	Fixed-point types
Use local settings/Off	N/A	Unchanged	Unchanged
Double	All numeric types	Double	Double
	Floating-point	Double	Unchanged
	Fixed-point	Unchanged	Double
Single	All numeric types	Single	Single
	Floating-point	Single	Unchanged
	Fixed-point	Unchanged	Single

Fixed-Point Tool Settings		Block Local Settings	
Data type override	Data type override applies to	Floating-point types	Fixed-point types
Scaled double	All numeric types	Double	Scaled double equivalent of fixed-point type
	Floating-point	Double	Unchanged
	Fixed-point	Unchanged	Scaled double equivalent of fixed-point type

### Dependencies

- The following Simulink blocks allow you to set data types in their block masks, but ignore the **Data type override** setting:
  - Probe
  - Trigger
  - Width

### Command-Line Alternative

**Parameter:** 'DataTypeOverride'

**Type:** string

**Value:** 'UseLocalSettings' | 'ScaledDouble' | 'Double' | 'Single' | 'Off'

**Default:** 'UseLocalSettings'

## **Data type override applies to**

Specifies which data types the Fixed-Point Tool overrides

### **Settings**

**Default:** All numeric types

#### All numeric types

Data type override applies to all numeric types, floating-point and fixed-point. It does not apply to boolean or enumerated data types.

#### Floating-point

Data type override applies only to floating-point data types, that is, double and single.

#### Fixed-point

Data type override applies only to fixed-point data types, for example, uint8, fixdt.

### **Tips**

- Use this parameter with the **Data type override** parameter.
- Data type override never applies to boolean or enumerated data types or to buses.
- When you set the **Data type override** parameter of a parent system to Double, Single, Scaled double or Off, this setting also applies to all child subsystems and you cannot change the data type override setting for these child subsystems. When the **Data type override** parameter of a parent system is Use local setting, you can set the **Data type override** parameter for individual children.
- The following table details how these two parameters affect the data types in your model.

Fixed-Point Tool Settings		Block Local Settings	
Data type override	Data type override applies to	Floating-point types	Fixed-point types
Use local settings/Off	N/A	Unchanged	Unchanged
Double	All numeric types	Double	Double
	Floating-point	Double	Unchanged
	Fixed-point	Unchanged	Double
Single	All numeric types	Single	Single
	Floating-point	Single	Unchanged
	Fixed-point	Unchanged	Single
Scaled double	All numeric types	Double	Scaled double equivalent of fixed-point type
	Floating-point	Double	Unchanged
	Fixed-point	Unchanged	Scaled double equivalent of fixed-point type

### Dependencies

This parameter is enabled only when **Data type override** is set to Scaled double, Double or Single.

### Command-Line Alternative

**Parameter:** 'DataTypeOverrideAppliesTo'

**Type:** string

**Value:** 'AllNumericTypes' | 'Floating-point' | 'Fixed-point'

**Default:** 'AllNumericTypes'

## **Store results in run**

Specifies the run name

If you use a shortcut to set up a run, by default, the Fixed-Point Tool uses the run name associated with this shortcut. You can override the run name by entering a new name in this field.

### **Tips**

- To store data for multiple runs, provide a different run name for each run. Running two simulations with the same run name overwrites the original run.
- You can edit the run name in the Contents pane **Run** column.

## **Simulate**

Simulates model and stores results.

### **Action**

Simulates the model and stores the results with the run name specified in **Store results in run**. The Fixed-Point Tool displays the run name in the **Run** column of the **Contents** pane.

### **Tips**

Using the **Simulate** button is the same as simulating the model using the **Run** button in the Simulink model.

### **Command-Line Alternative**

Command: `sim`

## Merge instrumentation results from multiple simulations

Control how simulation results are stored

### Settings

**Default:** Off



On

Merges new simulation minimum and maximum results with existing simulation results in the run specified by the run name parameter. Allows you to collect complete range information from multiple test benches. Does not merge signal logging results.



Off

Clears all existing simulation results from the run specified by the run name parameter before displaying new simulation results.

### Command-Line Alternative

**Parameter:** 'MinMaxOverflowArchiveMode'

**Type:** string

**Value:** 'Overwrite' | 'Merge'

**Default:** 'Overwrite'

### Tip

Select this parameter to log simulation minimum and maximum values captured over multiple simulations.

## Derive min/max values for selected system

Derive minimum and maximum values for signals for the selected system

The Fixed-Point Tool analyzes the selected system to compute derived minimum and maximum information based on the design minimum and maximum values specified on blocks. For example, using the **Output minimum** and **Output maximum** for block outputs.

### Action

Analyzes the selected system to compute derived minimum and maximum information based on the design minimum and maximum values specified on blocks.

By default, the Fixed-Point Tool displays the Derived Min/Max View with the following information in the **Contents** pane.

- **Name**
- **Run**
- **CompiledDesignMax**
- **CompiledDesignMin**
- **DerivedMax**
- **DerivedMin**
- **DesignMax**
- **DesignMin**

If **Highlight results with potential issues** is selected, the tool alerts you to potential issues for each object in the list by highlighting the object in the Contents pane.

### Command-Line Alternative

No command line alternative available.

### Dependencies

Range analysis:

- Requires a Fixed-Point Designer license.

# fxptdlg

---

- Does not run on Mac platforms.

## Highlight results with potential issues

Highlight results that have saturations, overflows or insufficient design min/max information to derive results.

### Settings

**Default:** On

On

Highlight results with potential issues.

After simulating the model, the Fixed-Point Tool highlights results that have either saturations or overflows.

After analyzing the model to derive minimum and maximum values, the tool highlights both the results that have issues and the results that are likely to be the cause of the issue. For example, if the tool cannot derive ranges for an object because an upstream object does not have sufficient design minimum and maximum information, it highlights both results.

The Fixed-Point Tool uses different colors to highlight the results that have issues and the results that might be the cause of issues.

Off

Do not highlight results. Remove existing highlighting.

### Command-Line Alternative

No command line alternative available.

### Tip

Select a highlighted result and click **Show details for selected result** to view more information about the issue.

## Propose fraction lengths

Use range information and propose fraction lengths for model objects.

### Action

Use this button to perform the first phase of the automatic data typing procedure, in which the Fixed-Point Tool uses range information for model objects—from design minimum and maximum values the objects specify explicitly, or from logged minimum and maximum values that occur during simulation, or from derived minimum and maximum values. Based on these values, the tool proposes fraction lengths for blocks whose:

- **Lock output data type setting against changes by the fixed-point tools** or **Lock data type settings against changes by the fixed-point tools** check box is cleared.
- Data type specifies a generalized fixed-point number.

The Fixed-Point Tool lists its scaling proposals in the **Contents** pane. The tool alerts you to potential scaling issues for each object in the list by displaying a green, yellow, or red icon, as shown here:



The proposed scaling poses no issues for this object.



The proposed scaling poses potential issues for this object. Open the Autoscale Information dialog box to review these issues.



The type proposed scaling will introduce data type errors if applied to this object. Open the Autoscale Information dialog box for details about how to resolve these issues.

### Command-Line Alternative

No command line alternative available.

## Propose word lengths

Use range information and propose word lengths for model objects.

### Action

Use this button to perform the first phase of the automatic data typing procedure, in which the Fixed-Point Tool uses range information for model objects—from design minimum and maximum values the objects specify explicitly, or from logged minimum and maximum values that occur during simulation, or from derived minimum and maximum values. Based on these values, the tool proposes word lengths for blocks whose:

- **Lock output data type setting against changes by the fixed-point tools** or **Lock data type settings against changes by the fixed-point tools** check box is cleared.
- Data type specifies a generalized fixed-point number.

The Fixed-Point Tool lists its data type proposals in the **Contents** pane. The tool alerts you to potential issues for each object in the list by displaying a green, yellow, or red icon, as shown here:

-  The proposed data type poses no issues for this object.
-  The proposed data type poses potential issues for this object. Open the Result Details dialog box to review these issues.
-  The proposed data type will introduce errors if applied to this object. Open the Result Details dialog box for details about how to resolve these issues.

### Command-Line Alternative

No command line alternative available.

## **Propose data types**

### **Propose fraction lengths for specified word lengths**

Select to propose fraction lengths for the word lengths specified in the model.

---

**Note** This parameter appears only if the **Automatic data typing for selected system Settings** pane is displayed.

---

**Propose word lengths for specified fraction lengths**

Select to propose word lengths for the fraction lengths specified in the model.

---

**Note** This parameter appears only if the **Automatic data typing for selected system Settings** pane is displayed.

---

## Default data type for all floating-point signals

Specifies the default data type to use for all floating-point signals

Use to change the floating-point data types in the model to fixed point.

### Settings

#### Default:

Remain floating-point

Does not change the data type of floating-point signals.

Select this option if you are using the Fixed-Point Tool to derive minimum and maximum values for the model. To propose data types for the model, you must set the default data type to be a built-in integer or fixed-point data type.

Same as embedded hardware integer

Sets the default data type for all floating-point signals to the integer type specified for the target hardware.

Select this option if your target hardware is a microprocessor.

int8

Sets the default data type for all floating-point signals to int8.

int16

Sets the default data type for all floating-point signals to int16.

int32

Sets the default data type for all floating-point signals to int32.

fixdt(1,16,4)

Sets the default data type for all floating-point signals to the fixed-point data type specified by fixdt. You can modify the parameters provided to fixdt to specify signedness, word length and fraction length.

### Dependency

This parameter appears only if you click the **Configure** link on the **Automatic data typing for selected system Settings** pane.

### Derived min/max

Propose fraction or word lengths based on design and derived minimum and maximum information.

#### Settings

**Default:** On

On

Propose fraction or word lengths based on derived minimum and maximum values, but only for blocks that do not specify design minimum or maximum values using, for example, **Output minimum** and **Output maximum** parameters.

If **Simulation min/max** is also selected, the Fixed-Point Tool bases its proposal on both the derived and simulation min/max values and the proposed data types cover the union of the derived range and the simulation range.

Off

Ignore derived minimum and maximum values when proposing fraction lengths.

#### Command-Line Alternative

No command line alternative available.

#### Dependency

This parameter appears only if you click the **Configure** link on the **Automatic data typing for selected system Settings** pane.

## Simulation min/max

Propose fraction or word lengths based on design and simulation minimum and maximum values.

### Settings

**Default:** On



On

Proposes fraction lengths based on simulation minimum and maximum values, but only for blocks that do not specify design minimum or maximum values using, for example, **Output minimum** and **Output maximum** parameters.

If **Derived min/max** is also selected, the Fixed-Point Tool bases its proposal on both the derived and simulation min/max values and the proposed data types cover the union of the derived range and the simulation range.



Off

Ignores simulation minimum and maximum values when proposing fraction lengths.

### Command-Line Alternative

No command line alternative available.

### Dependency

This parameter appears only if you click the **Configure** link on the **Automatic data typing for selected system Settings** pane.

### **Safety margin for design and derived min/max (%)**

Specify safety factor for design and derived minimum and maximum values.

#### **Settings**

**Default:** 0

The design and derived minimum and maximum values are adjusted by the percentage designated by this parameter. For example, a value of 55 specifies that a range *at least* 55 percent larger is desired. A value of -15 specifies that a range *up to* 15 percent smaller is acceptable.

#### **Dependency**

Before performing autoscaling, you must specify design minimum and maximum values, or run a simulation to collect simulation minimum and maximum data, or collect derived minimum and maximum data.

#### **Command-Line Alternative**

No command line alternative available.

#### **Dependency**

This parameter appears only if you click the **Configure** link on the **Automatic data typing for selected system Settings** pane.

## **Safety margin for simulation min/max (%)**

Specify safety factor for simulation minimum and maximum values.

### **Settings**

**Default:** 0

The simulation minimum and maximum values are adjusted by the percentage designated by this parameter, allowing you to specify a range different from that obtained from the simulation run. For example, a value of 55 specifies that a range *at least* 55 percent larger is desired. A value of -15 specifies that a range *up to* 15 percent smaller is acceptable.

### **Dependencies**

Before performing automatic data typing, you must specify design minimum and maximum values or run a simulation to collect simulation minimum and maximum data, or collect derived minimum and maximum values.

### **Command-Line Alternative**

No command line alternative available.

### **Dependency**

This parameter appears only if you click the **Configure** link on the **Automatic data typing for selected system Settings** pane.

## **Apply accepted fraction lengths**

Apply scaling proposals

### **Action**

Use this button to perform the second phase of the automatic data typing procedure, in which the Fixed-Point Tool applies the scaling proposals to the objects whose **Accept** check box in the **Contents** pane is selected.

### **Dependency**

This button appears when **Propose fraction lengths for specified word lengths** is selected.

### **Command-Line Alternative**

No command line alternative available.

## **Apply accepted word lengths**

Apply data type proposals

### **Action**

Use this button to perform the second phase of the automatic data typing procedure, in which the Fixed-Point Tool applies the data type proposals to the objects whose **Accept** check box in the **Contents** pane is selected.

### **Dependency**

This button appears when **Propose word lengths for specified fraction lengths** is selected.

### **Command-Line Alternative**

No command line alternative available.

**Show details for selected result**

Display details for object selected in the **Contents** pane

**Action**

Use this option to:

- Determine why a fraction length cannot be proposed, for example, fraction lengths cannot be proposed for Library Links or Mask Subsystems.
- Provide access to showing blocks with shared data types.
- Obtain more information on the proposal for the selected result.

**Command-Line Alternative**

No command line alternative available.

## Shortcut Editor

### Shortcut Editor Overview

Use the Shortcut Editor to add or edit user-defined shortcuts. You cannot modify the factory default shortcuts. If you add a new shortcut and want it to appear as a button on the Fixed-Point Tool **Shortcuts to set up runs** pane, use the controls in the **Manage shortcuts** panel.

### Name of shortcut

Enter a unique name for your shortcut. By default, the Fixed-Point Tool uses this name as the **Run name** for this shortcut.

If the shortcut name already exists, the new settings overwrite the existing settings.

### **Allow modification of fixed-point instrumentation settings**

Select whether to change the model fixed-point instrumentation settings when you apply this shortcut to the model.

#### **Settings**

**Default:** On



On

When you apply this shortcut to the model, changes the fixed-point instrumentation settings of the model and its subsystems to the setting defined in this shortcut.



Off

Does not change the fixed-point instrumentation settings when you apply this shortcut to the model.

#### **Tip**

If you want to control data type override settings without altering the fixed-point instrumentation settings on your model, clear this option.

## **Allow modification of data type override settings**

Select whether to change the model data type override settings when you apply this shortcut to the model

### **Settings**

**Default:** On



On

When you apply this shortcut to the model, changes the data type override settings of the model and its subsystems to the settings defined in this shortcut .



Off

Does not change the fixed-point instrumentation settings when you apply this shortcut to the model.

### **Allow modification of run name**

Select whether to change the run name on the model when you apply this shortcut to the model

#### **Settings**

**Default:** On



On

Changes the run name to the setting defined in this shortcut when you apply this shortcut to the model.



Off

Does not change the run name when you apply this shortcut to the model.

## **Run name**

Specify the run name to use when you apply this shortcut.

By default, the run name defaults to the name of the shortcut. Run names are case sensitive.

## **Dependency**

**Allow modification of run name** enables this parameter.

**Capture system settings**

Copy the model and subsystem fixed-point instrumentation mode and data type override settings into the Shortcut Editor.

## **Fixed-point instrumentation mode**

Control which objects in the shortcut editor log minimum, maximum and overflow data during simulation.

This information is stored in the shortcut. To use the current model setting, click **Capture system settings**.

### **Settings**

**Default:** Same as model setting

Use local settings

Logs data according to the value of this parameter set for each subsystem. Otherwise, settings for parent systems always override those of child systems.

Minimums, maximums and overflows

Logs minimum value, maximum value, and overflow data for all blocks in the current system or subsystem during simulation.

Overflows only

Logs only overflow data for all blocks in the current system or subsystem.

Force off

Does not log data for any block in the current system or subsystem. Use this selection to work with models containing fixed-point enabled blocks if you do not have a Fixed-Point Designer license.

### **Dependency**

**Allow modification of fixed-point instrumentation settings** enables this parameter.

## Data type override

Control data type override of objects that allow you to specify data types in their dialog boxes.

This information is stored in the shortcut. To use the current model settings, click **Capture system settings**.

### Settings

**Default:** Same as model

The value of this parameter for parent systems controls data type override for all child subsystems, unless `Use local settings` is selected.

#### Use local settings

Overrides data types according to the setting of this parameter for each subsystem.

#### Scaled double

Overrides the data type of all blocks in the current system and subsystem with doubles; however, the scaling and bias specified in the dialog box of each block is maintained.

#### Double

Overrides the output data type of all blocks in the current system or subsystem with doubles. The overridden values have no scaling or bias.

#### Single

Overrides the output data type of all blocks in the current system or subsystem with singles. The overridden values have no scaling or bias.

#### Off

No data type override is performed on any block in the current system or subsystem. The settings on the blocks are used.

### Dependency

**Allow modification of data type override settings** enables this parameter.

**See Also**

“Data type override” on page 2-241

## Data type override applies to

Specifies which data types to override when you apply this shortcut.

This information is stored in the shortcut. To use the current model setting, click **Capture system settings**.

### Settings

**Default:** All numeric types

#### All numeric types

Data type override applies to all numeric types, floating-point and fixed-point. It does not apply to boolean or enumerated data types.

#### Floating-point

Data type override applies only to floating-point data types, that is, double and single.

#### Fixed-point

Data type override applies only to fixed-point data types, for example, uint8, fixdt.

### Dependency

**Allow modification of data type override settings** enables this parameter.

### See Also

“Data type override applies to” on page 2-244

### Manage shortcuts

Control which shortcuts appear as buttons on the Fixed-Point Tool **Shortcuts to set up runs** panel and the order in which they appear.

## Plot Interface

The Fixed-Point Tool uses the Simulation Data Inspector tool plotting capabilities that enable you to plot signals for graphical analysis. The tool can access signal data that resides in the MATLAB workspace, allowing you to plot simulation results associated with:

- Scope blocks whose **Save data to workspace** parameter is selected

- To Workspace blocks
- Root-level Outport blocks, when the **Output** check box on the **Data Import/Export** pane of the Configuration Parameters dialog box is selected
- Logged signal data

---

**Tip** The **Contents** pane of the Fixed-Point Tool displays an antenna icon  next to items that you can plot.

---

Using the Simulation Data Inspector tool, you can:


- Compare signals
- Inspect signals
- Compare runs

## Compare Signals

To compare signals:

- 1** In one of the runs that you want to compare, select a logged signal.
- 2** From the Fixed-Point Tool menu, select **Results > Compare Signals** or click .
- 3** If there are more than two runs, in the **Compare Runs Selector** dialog box, select the run that you want to compare, and then click **OK**.

Plots the signal in both selected runs on the upper axes, and plots the difference between the selected runs on the lower axes. For more details, see “Propose Fraction Lengths Using Simulation Range Data”.

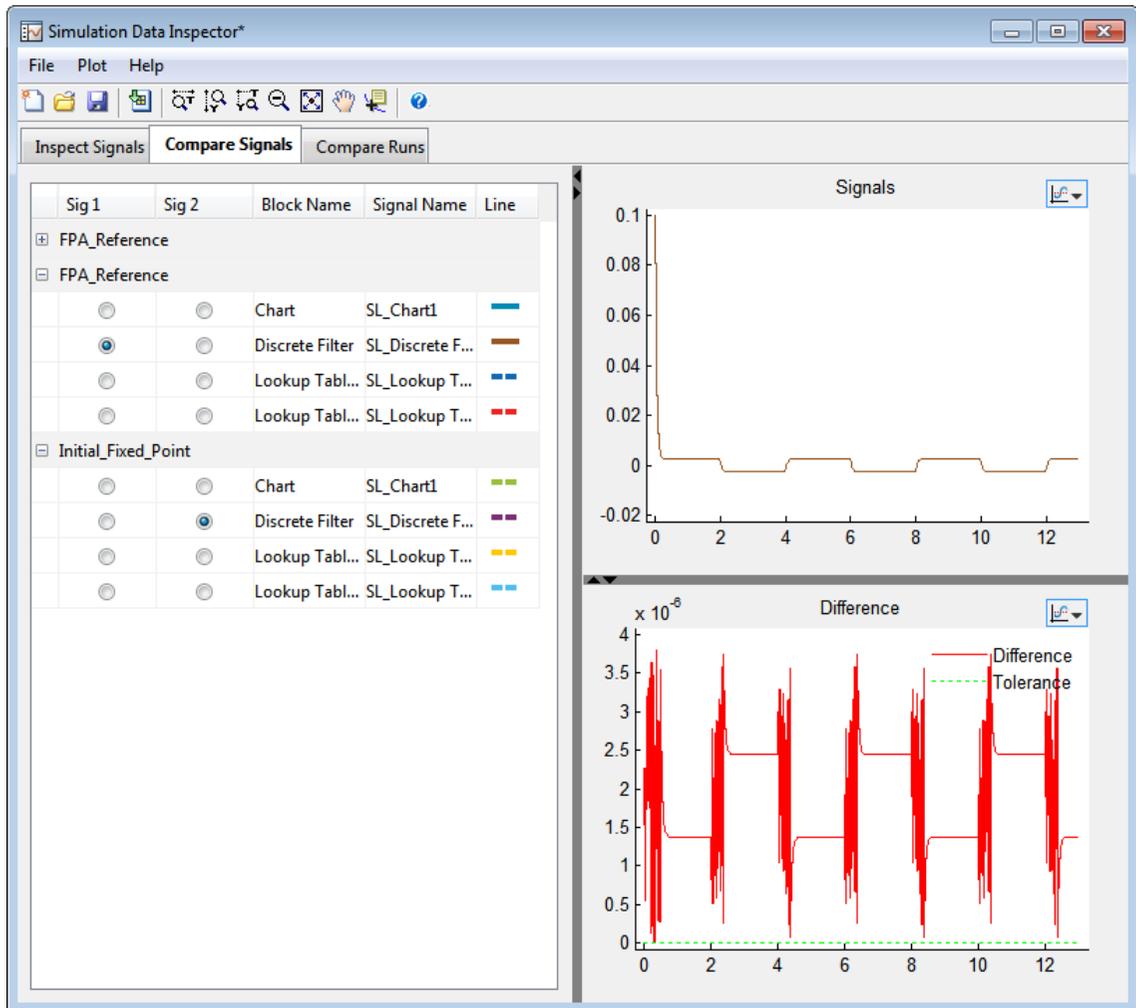


## Inspect Signal

To inspect a signal:

- 1 Select the logged signal that you want to inspect.

2 From the Fixed-Point Tool menu, select **Results > Inspect Signal** or click .

Plots data as a function of time.

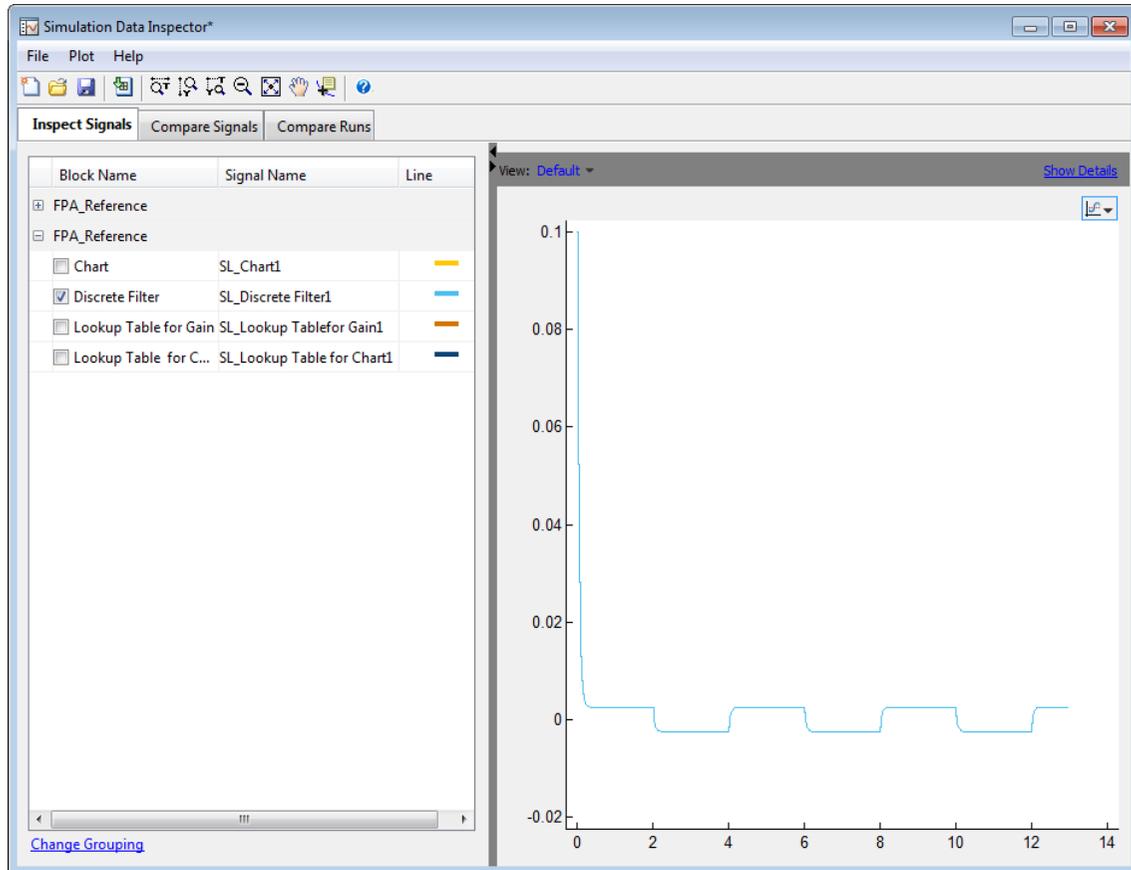


Note that, unlike the Fixed-Point Tool, the Simulation Data Inspector allows multiple runs with the same name.

## Compare Runs

To compare runs:

- 1** In one of the runs that you want to compare, select a logged signal.
- 2** From the Fixed-Point Tool menu, select **Results > Compare Runs** or click .
- 3** If there are more than two runs, in the **Compare Runs Selector** dialog box, select the run that you want to compare, and then click **OK**.

Plots the signal in both selected runs on the upper axes, and plots the difference between the selected runs on the lower axes.

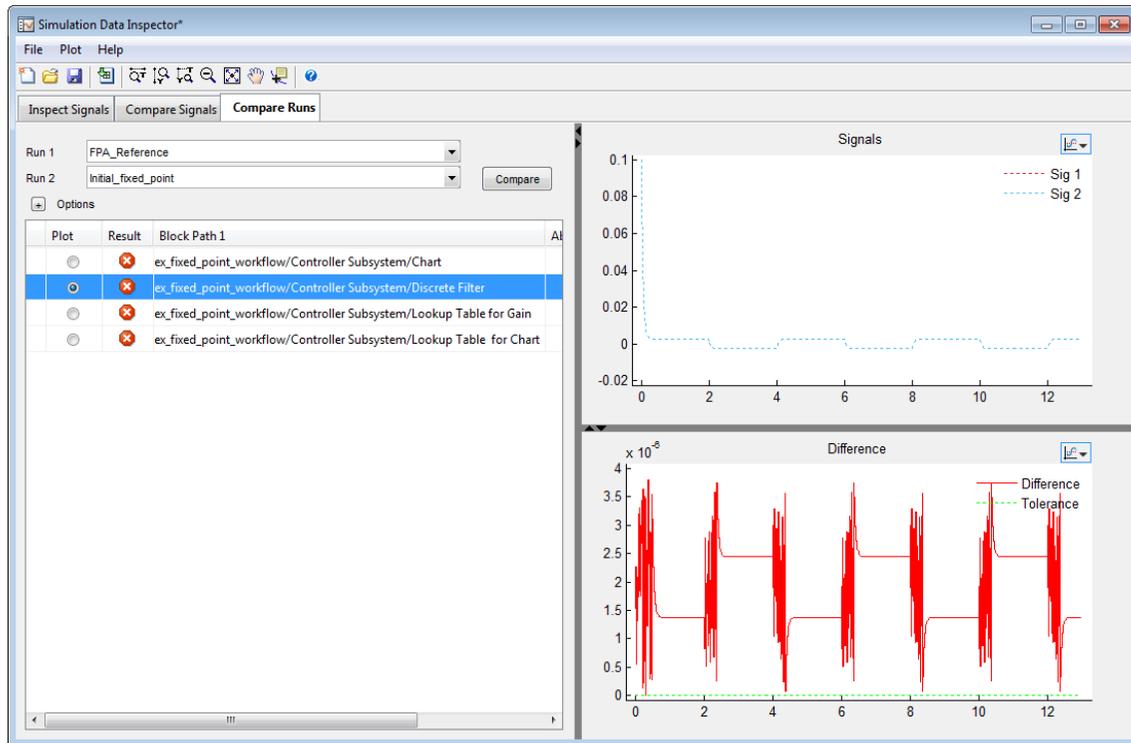

## Histogram Plot

To view the histogram plot of a signal:

- 1 Select the logged signal that you want to plot.
- 2 From the Fixed-Point Tool menu, select **Results > Histogram Plot of Signal** or click .


The histogram plot helps you visualize the dynamic range of a signal.

This plot provides information about the:

- Total number of samples (N)

- The maximum number of bits needed to prevent overflow
- Number of times each bit has been used to represent the data (as a percentage of the total number of samples)
- Number of times that exact zero occurred (without the effect of quantization). This does not include the number of zeroes that occurred due to rounding.

You can use this information to estimate the word size needed to represent the signal.

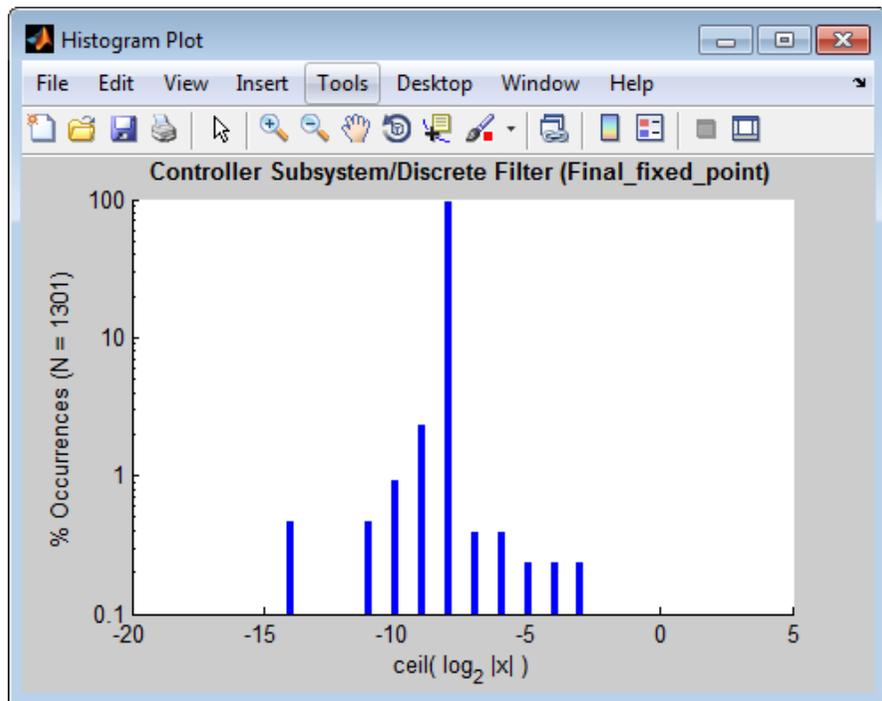

## Signal Logging Options

The Fixed-Point Tool provides options that allow you to control signal logging in a model (see “Signal Logging” in *Simulink User’s Guide*). Using these options, you can enable or disable logging for multiple signals simultaneously, based on signal attributes such as:

- The location of signals in a model hierarchy
- Whether or not signals have names

The Fixed-Point Tool does not control signal logging for referenced models or subsystems with library links. It ignores these objects when enabling or disabling signal logging in a model hierarchy.

You can control the signal logging of a Simulink subsystem, that is placed inside of a Stateflow Chart, from the subsystem parent node.

## How to Access the Signal Logging Options in the Fixed-Point Tool

- 1 In the **Model Hierarchy** pane, right-click a node that represents either a model or a subsystem.

The Fixed-Point Tool displays a context menu for the selected node.

- 2 In the context menu, select either **Enable Signal Logging** or **Disable Signal Logging**.

The Fixed-Point Tool displays a submenu that lists a variety of signal logging options.

### Signal Logging Options

Choose from the following signal logging options:

Select...	To Enable or Disable Signal Logging for...
All Signals in this System	All signals in the selected system
All Signals from Here Down	All signals in the selected system and its subsystems
Outputs in this System	All Output blocks in the selected system

Select...	To Enable or Disable Signal Logging for...
Named Signals in this System	All signals in the selected system, whose <b>Signal name</b> parameter specifies a value
Named Signals from Here Down	All signals in the selected system and its subsystems, whose <b>Signal name</b> parameter specifies a value
Unnamed Signals in this System	All signals in the selected system, whose <b>Signal name</b> parameter is empty
Unnamed Signals from Here Down	All signals in the selected system and its subsystems, whose <b>Signal name</b> parameter is empty

**Examples**

To learn how to use the tool, see “Propose Fraction Lengths Using Simulation Range Data”.

**See Also**

autofixexp

**Purpose** Get pathname of current block

**Syntax** `gcb`  
`gcb('sys')`

**Description** `gcb` returns the full block pathname of the current block in the current system.

`gcb('sys')` returns the full block pathname of the current block in the specified system.

The current block is one of these:

- During editing, the current block is the block most recently clicked.
- During simulation of a system that contains S-Function blocks, the current block is the S-Function block currently executing its corresponding MATLAB function.
- During callbacks, the current block is the block whose callback routine is being executed.
- During evaluation of the `MaskInitialization` string, the current block is the block whose mask is being evaluated.

**Examples** This command returns the path of the most recently selected block.

```
gcb
ans =
    clutch/Locked/Inertia
```

This command gets the value of the `Gain` parameter of the current block.

```
get_param(gcb, 'Gain')
ans =
    1/(Iv+Ie)
```

**See Also** `gcbh` | `gcs`

**Purpose** Get handle of current block

**Syntax** gcbh

**Description** gcbh returns the handle of the current block in the current system. You can use this command to identify or address blocks that have no parent system. The command should be most useful to blockset authors.

**Examples** This command returns the handle of the most recently selected block.

```
gcbh
```

```
ans =
```

```
281.0001
```

**See Also** gcb

**Purpose** Get pathname of current system

**Syntax** gcs

**Description** gcs returns the full pathname of the current system.

The current system is one of these:

- During editing, the current system is the system or subsystem most recently clicked.
- During simulation of a system that contains S-Function blocks, the current system is the system or subsystem containing the S-Function block that is currently being evaluated.
- During callbacks, the current system is the system containing any block whose callback routine is being executed.
- During evaluation of the `MaskInitialization` string, the current system is the system containing the block whose mask is being evaluated.

The current system is always the current model or a subsystem of the current model. Use `bdroot` to get the current model.

**Examples** This example returns the path of the system that contains the most recently selected block.

```
gcs
ans =
    clutch/Locked
```

**See Also** `bdroot` | `gcb`

**Purpose** Get parameter names and values

**Syntax**

```
RootParamNames = get_param(0,'ObjectParameter')  
GlobalParamValue = get_param(0,GlobalParam)
```

```
ModelParamNames = get_param(Model,'ObjectParameters')  
ModelParamValue = get_param(Model,ModelParam)  
ModelParamDefaultValue = get_param(0,ModelParam)
```

```
BlockParamNames = get_param(Block,'ObjectParameters')  
BlockDialogParamNames = get_param(Block,'DialogParameters')  
BlockParamValue = get_param(Block,BlockParam)  
BlockDialogParamValue = get_param(Block,BlockDialogParam)
```

**Description**

RootParamNames = get\_param(0,'ObjectParameter') returns a structure array with the root parameter names as separate fields in the structure. Includes both the global parameters and model parameters.

GlobalParamValue = get\_param(0,GlobalParam) returns the value of a global parameter for the current Simulink session.

ModelParamNames = get\_param(Model,'ObjectParameters') returns a structure array with the model parameter names as separate fields in the structure. Open or load the Simulink model first.

ModelParamValue = get\_param(Model,ModelParam) returns the value of a model parameter.

ModelParamDefaultValue = get\_param(0,ModelParam) returns the default value of a model parameter.

BlockParamNames = get\_param(Block,'ObjectParameters') returns a structure array with the block parameter names as separate fields in the structure. Includes the block dialog box parameters.

# get\_param

---

`BlockDialogParamNames = get_param(Block, 'DialogParameters')` returns a structure array with the block dialog box parameter names as separate fields in the structure. If the block has a mask, the function instead returns the mask parameters.

`BlockParamValue = get_param(Block, BlockParam)` returns the value of a block parameter.

`BlockDialogParamValue = get_param(Block, BlockDialogParam)` returns the value of a block dialog box parameter. If `Block` is a cell array, returns a cell array with the values of the specified parameter common to all blocks. All of the blocks in the `Block` cell array must contain the `BlockDialogParam` or an error occurs.

## Input Arguments

### **Model - Name of a model**

string | handle

Name of a Simulink model, specified as a string or handle to a model object.

### **GlobalParam - Parameter defined during a Simulink session**

string

Parameter defined during a Simulink session, specified as a string. Parameters include Simulink Editor preferences and Simulink Coder parameters.

### **ModelParam - Parameter saved with a Simulink model**

string

Parameter saved with a Simulink model, specified as a string. Parameters include Simulink model configuration parameters, Simulink Coder parameters, and Simulink Code Inspector parameters.

### **Block - Path and name of a Simulink block**

string | cell array of strings

Path and name of a Simulink block, specified as a string or cell array with block paths and names.

**BlockParam - Name of a block parameter**

string

Name of a block parameter, specified as a string. These parameters define how the block displays in the Simulink Editor, define a mask for the block, specify how the block is simulated within a model, and include the block dialog parameters.

**BlockDialogParam - Name of a block dialog box parameter**

string

Name of a block dialog box parameter, specified as a string. These parameters are specific to the type of block, i.e., these are the parameters you can specify in the block dialog box.

**Output Arguments****RootParamNames - Names of root parameters**

structure array of strings

Names of root parameters in a structure array. Each parameter name is a field in the structure. Each parameter field is a structure having these fields:

- **Type** — Parameter type values are: 'boolean', 'string', 'int', 'real', 'point', 'rectangle', 'matrix', 'enum', 'ports', or 'list'
- **Enum** — Cell array of enumeration string values that applies only to 'enum' parameter types
- **Attributes** — Cell array of strings defining the attributes of the parameter. Values are: 'read-write', 'read-only', 'read-only-if-compiled', 'write-only', 'dont-eval', 'always-save', 'never-save', 'nondirty', or 'simulation'

**GlobalParamValue - Value of global parameter**

value

Value of global parameter.

## **ModelParamNames - Names of model parameters**

structure array of strings

Names of model parameters.

## **ModelParamValue - Value of model parameter**

value

Value of model parameter.

## **ModelParamDefaultValue - Default value of model parameter**

value

Default value of model parameter.

## **BlockParamNames - Names of block parameters**

structure array of strings

Names of block parameters.

## **BlockDialogParamNames - Names of block dialog box parameters**

structure array of strings

Names of block dialog box parameters.

## **BlockParamValue - Value of a block parameter**

value

Value of a block parameter.

## **BlockDialogParamValue - Value of a block dialog box parameter**

value | cell array of values

Value of a block dialog box parameter or cell array with parameter values.

**Examples****Get Global Parameter Names and Values**

Get a list of global parameter names by finding the difference between the Simulink root parameter names and the model parameter names.

```
RootParameterNames = fieldnames (get_param(0, 'ObjectParameters'));
load_system('vdp')
ModelParameterNames = fieldnames (get_param('vdp', 'ObjectParameters'));
GlobalParameterNames = setdiff (RootParameterNames, ModelParameterNames);

GlobalParameterNames =
    'AutoSaveOptions'
    'CacheFolder'
    'CallbackTracing'
    'CharacterEncoding'
    .
    .
    'CurrentSystem'
```

Get the value of a global parameter. (If you enter a model parameter, you get the default value of the parameter, not the current value)

```
GlobalParameterValue = get_param(0, 'CurrentSystem')

GlobalParameterValue =
    vdp
```

**Get Model Parameter Names and Values**

Get a list of model parameters (returned in a structure) for the vdp model .

```
load_system('vdp')
ModelParameterNames = get_param('vdp', 'ObjectParameters')

ModelParameterNames =
    Name: [1x1 struct]
    Tag: [1x1 struct]
    Description: [1x1 struct]
    Type: [1x1 struct]
    Parent: [1x1 struct]
```

## get\_param

---

```
Handle: [1x1 struct]
      . . .
Version: [1x1 struct]
```

Get the current value of the `Version` model parameter for the `vdp` model.

```
ModelParameterValue = get_param('vdp','Version')
```

```
ModelParameterValue =
      8.3000
```

### Get Block Parameter Names and Values

Get a list of block paths and names (returned in a cell array) for the `vdp` model.

```
load_system('vdp')
BlockPaths = find_system('vdp','Type','Block')
```

```
BlockPaths =
    'vdp/Fcn'
    'vdp/More Info'
    'vdp/More Info/Model Info'
    'vdp/Mu'
    'vdp/Mux'
    'vdp/Product'
    'vdp/Scope'
    'vdp/Sum'
    'vdp/x1'
    'vdp/x2'
    'vdp/Out1'
    'vdp/Out2'
```

Get a list of block dialog parameters (returned in a structure) for the `Fcn` block.

```
BlockDialogParameters = get_param('vdp/Fcn','DialogParameters')
```

```
BlockDialogParameters =
    Expr: [1x1 struct]
    SampleTime: [1x1 struct]
```

Get the value for the Expr block parameter.

```
BlockParameterValue = get_param('vdp/Fcn','Expr')
```

```
BlockParameterValue =
    1 - u*u
```

### Display Block Types for all Blocks in a Model

Get a list of block paths and names (returned in a cell array) for the vdp model.

```
load_system('vdp')
BlockPaths = find_system('vdp','Type','Block')
```

```
BlockPaths =
    'vdp/Fcn'
    'vdp/More Info'
    'vdp/More Info/Model Info'
    'vdp/Mu'
    'vdp/Mux'
    'vdp/Product'
    'vdp/Scope'
    'vdp/Sum'
    'vdp/x1'
    'vdp/x2'
    'vdp/Out1'
    'vdp/Out2'
```

Get the value for the BlockType parameter for each of the blocks in the vdp model.

```
BlockTypes = get_param(BlockPaths,'BlockType')
```

```
BlockTypes =
```

# get\_param

---

```
'Fcn'  
'SubSystem'  
'SubSystem'  
'Gain'  
'Mux'  
'Product'  
'Scope'  
'Sum'  
'Integrator'  
'Integrator'  
'Outputport'  
'Outputport'
```

## See Also

[find\\_system](#) | [gcb](#) | [set\\_param](#)

## Related Examples

- “Associating User Data with Blocks”
- “Model Parameters” on page 7-2
- “Block-Specific Parameters” on page 7-113
- “Common Block Properties” on page 7-100
- “Use MATLAB Commands to Change Workspace Data”

<b>Purpose</b>	Get model's active configuration set or configuration reference
<b>Syntax</b>	<code>myConfigObj = getActiveConfigSet(model)</code>
<b>Arguments</b>	<code>model</code> The name of an open model, or <code>gcs</code> to specify the current model
<b>Description</b>	<code>getActiveConfigSet</code> returns the configuration set or configuration reference (configuration object) that is the active configuration object of <code>model</code> .
<b>Examples</b>	The following example returns the active configuration object of the current model. The code is the same whether the object is a configuration set or configuration reference.  <code>myConfigObj = getActiveConfigSet(gcs);</code>
<b>See Also</b>	<code>attachConfigSet</code>   <code>attachConfigSetCopy</code>   <code>closeDialog</code>   <code>detachConfigSet</code>   <code>getConfigSet</code>   <code>getConfigSets</code>   <code>openDialog</code>   <code>setActiveConfigSet</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Manage a Configuration Set”</li><li>• “Manage a Configuration Reference”</li></ul>

# getCallbackAnnotation

---

**Purpose** Get information about annotation

**Syntax** `getCallbackAnnotation`

**Description** `getCallbackAnnotation` is intended to be invoked by annotation callback functions. If it is invoked from an annotation callback function, it returns an instance of `Simulink.Annotation` class that represents the annotation associated with the callback function. The callback function can then use the instance to get and set the annotation's properties, such as its text, font and color. If this function is not invoked from an annotation callback function, it returns nothing, i.e., `[]`.

<b>Purpose</b>	Get one of model's configuration sets or configuration references
<b>Syntax</b>	<code>myConfigObj = getConfigSet(model, configObjName)</code>
<b>Arguments</b>	<code>model</code> The name of an open model, or <code>gcs</code> to specify the current model <code>configObjName</code> The name of a configuration set ( <code>Simulink.ConfigSet</code> ) or configuration reference ( <code>Simulink.ConfigSetRef</code> )
<b>Description</b>	<code>getConfigSet</code> returns the configuration set or configuration reference (configuration object) that is attached to <code>model</code> and is named <code>configObjName</code> . If no such object exists, an error occurs.
<b>Examples</b>	The following example returns the configuration object that is named <code>DevConfig</code> and attached to the current model. The code is the same whether <code>DevConfig</code> is a configuration set or configuration reference. <pre>myConfigObj = getConfigSet(gcs, 'DevConfig');</pre>
<b>See Also</b>	<code>attachConfigSet</code>   <code>attachConfigSetCopy</code>   <code>closeDialog</code>   <code>detachConfigSet</code>   <code>getActiveConfigSet</code>   <code>getConfigSets</code>   <code>openDialog</code>   <code>setActiveConfigSet</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Manage a Configuration Set”</li><li>• “Manage a Configuration Reference”</li></ul>

# getConfigSets

---

**Purpose** Get names of all of model's configuration sets or configuration references

**Syntax** `myConfigObjNames = getConfigSets(model)`

**Arguments** `model`  
The name of an open model, or `gcs` to specify the current model

**Description** `getConfigSets` returns a cell array of strings specifying the names of all configuration sets and configuration references (configuration objects) attached to `model`.

**Examples** The following example obtains the names of the configuration objects attached to the current model.

```
myConfigObjNames = getConfigSets(gcs)
```

**See Also** `attachConfigSet` | `attachConfigSetCopy` | `closeDialog` | `detachConfigSet` | `getActiveConfigSet` | `getConfigSet` | `openDialog` | `setActiveConfigSet`

**How To**

- “Manage a Configuration Set”
- “Manage a Configuration Reference”

**Purpose** Get pathname of block or line

**Syntax** path=getfullname(handle)

**Description** path=getfullname(handle) returns the full pathname of the block or line specified by handle.

**Examples** getfullname(gcb) returns the pathname of the block currently selected in the model editor's window.

The following code returns the pathname of the line currently selected in the model editor's window.

```
line = find_system(gcs, 'SearchDepth', 1, 'FindAll', 'on', ...
    'Type', 'line', 'Selected', 'on');
path = getfullname(line);
```

**See Also** gcb | find\_system

# getInputString

---

<b>Purpose</b>	Create comma-separated list of variables to map
<b>Syntax</b>	<pre>externalInputString = getInputString(inputmap, 'base')  externalInputString = getInputString(inputmap, filename)</pre>
<b>Description</b>	<p><code>externalInputString = getInputString(inputmap, 'base')</code> creates an input string using the supplied mapping <code>inputmap</code> and the variables loaded in the base workspace ('base').</p> <p>This function generates a comma-separated list of variables (input string) to be mapped. You can then use this list:</p> <ul style="list-style-type: none"><li>• As input to the <code>sim</code> command. Load the variables in the base workspace first.</li><li>• As input for the <b>Configuration Parameters &gt; Data Import/Export &gt; Input</b> parameter. Copy the contents of the input string into the text field.</li></ul> <p>This function is most useful if you have created a custom mapping.</p> <p><code>externalInputString = getInputString(inputmap, filename)</code> creates an input string using the supplied mapping <code>inputmap</code> and the variables defined in <code>filename</code>.</p>
<b>Input Arguments</b>	<p><b>inputmap - Map object</b> string Map object, as returned from the <code>getRootInportMap</code> function.</p> <p><b>filename - Input variables</b> MAT-file name as string Input variables, contained in a MAT-file. The file contains variables to map.</p> <p><b>Example:</b> 'data.mat'</p>

## Data Types

char

## Output Arguments

### **externalInputString** - External input string

Comma-separated string

External input string, returned as a comma-separated string. The string contains root inport information that you can specify to the `sim` command or the **Configuration Parameters > Data Import/Export > Input** parameter.

## Examples

### **Create an input string from the base workspace**

Create an input string from the base workspace and simulate a model.

Open the model

```
slexAutotransRootInportsExample;
```

Create signal variables in the base workspace

```
Throttle = timeseries(ones(10,1)*10);
Brake     = timeseries(zeros(10,1));
```

Create a mapping (inputMap) for the model.

```
inputMap = getRootInportMap('model',...
    'slexAutotransRootInportsExample',...
    'signalName',{'Throttle','Brake'},...
    'blockName',{'Throttle','Brake'});
```

Call `getInputString` with `inputMap` and 'base' as inputs.

```
externalInputString = getInputString(inputMap,'base')
```

```
externalInputString =
```

```
Throttle,Brake
```

Simulate the model with the input string.

# getInputString

---

```
sim('slexAutotransRootInportsExample','ExternalInput',...  
externalInputString);
```

## Create an external input string from variables in a MAT-file

Create an external input string from variables in a MAT-file named `input.mat`.

In a writable folder, create a MAT-file with input variables.

```
Throttle = timeseries(ones(10,1)*10);  
Brake     = timeseries(zeros(10,1));  
save('input.mat','Throttle','Brake');
```

Open the model.

```
slexAutotransRootInportsExample;
```

Create map object.

```
inputMap = getRootInportMap('model',...  
'slexAutotransRootInportsExample',...  
'signalName',{'Throttle','Brake'},...  
'blockName',{'Throttle','Brake'});
```

Get the resulting input string.

```
externalInputString = getInputString(inputMap,'input.mat')
```

```
externalInputString =
```

```
Throttle,Brake
```

Load variables from the base workspace for the simulation.

```
load('input.mat');
```

Simulate the model.

```
sim('slexAutotransRootInportsExample','ExternalInput',...  
externalInputString);
```

Alternatively, if you want to input the list of variables through the Configuration Parameters dialog, copy the contents of `externalInputString (Throttle,Brake)` into the **Data Import/Export > Input** parameter. Apply the changes, and then simulate the model.

## See Also

`getrootinportmap`

## Concepts

- “Import and Map Root-Level Inport Data”

# getRootInportMap

---

**Purpose** Create custom object to map signals to root-level inports

**Syntax**

```
map = getRootInportMap('Empty');  
map = getRootInportMap(model,mdl,Name,Value);  
map = getRootInportMap(inputmap,map,Name,Value);
```

**Description** `map = getRootInportMap('Empty');` creates an empty map object, *map*. Use this map object to set up an empty custom mapping object. Load the model before using this function. If you do not load the model first, the function loads the model to make the mapping and then closes the model afterwards.

`map = getRootInportMap(model,mdl,Name,Value);` creates a map object for `model`, `mdl`, with block names and signal names specified. Load the model before using this function. If you do not load the model first, the function loads the model to make the mapping and then closes the model afterwards.

`map = getRootInportMap(inputmap,map,Name,Value);` overrides the mapping object with the specified property. You can override only the properties `model`, `blockName`, and `signalName`. Load the model before using this function. If you do not load the model first, the function loads the model to make the mapping and then closes the model afterwards.

Use the `getRootInportMap` function when creating a custom mapping mode to map data to root-level inports. See `BlockNameIgnorePrefix.m` for an example of a custom mapping algorithm.

- Tips**
- Load the model before running this function.
  - If your custom mapping mode similar to an existing Simulink mapping mode, consider using the `getS1RootInportMap` function instead.

**Input Arguments**

**Empty**  
Create an empty map object.

**Default:** none

## **Name-Value Pair Arguments**

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

### **'model'**

Name of model to associate with the root inport map.

**Default:** None

### **'blockName'**

Block names of root-level input ports. The tool assigns data to ports according to the name of the root-inport block. If the tool finds a data element whose name matches the name of a root-inport block, it maps the data to the corresponding port.

The value for this argument can be:

Block name of root-level input ports.

Cell array containing multiple block names of root-level input ports.

**Default:** None

### **'signalName'**

Signal names to be mapped. The tool assigns data to ports according to the name of the signal on the port. If the tool finds a data element whose name matches the name of a signal at a port, it maps the data to the corresponding port.

The value for this argument can be:

Signal name to be mapped.

Cell array containing multiple signal names of signals to be mapped.

**Default:** None

# getRootInportMap

---

## 'inputmap'

Name of mapping object to override.

**Default:** None

## Output Arguments

### map

Custom object that you can use to map data to root-level input port.

## Examples

### Empty Mapping Object

Create an empty custom mapping object.

```
map = getRootInportMap('Empty')
```

```
map =
```

```
1x0 InputMap array with properties:
```

```
Type  
DataSourceName  
Destination
```

### Simple Mapping Object

Create a simple mapping object using a MATLAB time series object.

Create a time series object, signalIn1.

```
signalIn1 = timeseries((1:10)')
```

```
Common Properties:
```

```
Name: 'unnamed'  
Time: [10x1 double]  
TimeInfo: [1x1 tsdata.timemetadata]  
Data: [10x1 double]  
DataInfo: [1x1 tsdata.datametadata]
```

Create a mapping object for the time series object for the model,  
*matlabroot\help\toolbox\simulink\examples\ex\_minportsOnlyModel*.

```
load_system ex_minportsOnlyModel;  
map = getRootInportMap('model','ex_minportsOnlyModel',...  
    'blockName','In1','signalname','signalIn1')
```

```
map =
```

```
    InputMap with properties:
```

```
        Type: 'Inport'  
    DataSourceName: 'signalIn1'  
    Destination: [1x1 Simulink.iospecification.Destination]
```

## Mapping Object with Vectors

Create a mapping object using vectors of  
block names and signal names for the model  
*matlabroot\help\toolbox\simulink\examples\ex\_minportsOnlyModel*.

Create a mapping object of vectors.

```
load_system ex_minportsOnlyModel;  
map = getRootInportMap('model','ex_minportsOnlyModel',...  
    'blockName',{'In1' 'In2'}, ...  
    'signalname',{'signalIn1' 'signalIn2'})
```

```
map =
```

```
    1x2 InputMap array with properties:
```

```
        Type  
    DataSourceName  
    Destination
```

## Overriding Maps

Create a mapping object that contains the signal *var2*, then override  
*var2* with *var1*.

# getRootInportMap

---

Create a mapping object of vectors.

```
% Load the model and define variables
load_system ex_minportsOnlyModel;
modelValue = 'ex_minportsOnlyModel';
blockNameValue = 'In1';
signalNameValue = 'var2';
portType = 'Inport';

% Define var1 and override var2 with var1
signalNameToOverload = 'var1';
mapToOverload = getRootInportMap('model',modelValue,...
    'blockName',blockNameValue,...
    'signalName',signalNameToOverload)

mapToOverload =

    InputMap with properties:

        Type: 'Inport'
        DataSourceName: 'var1'
        Destination: [1x1 Simulink.iospecification.Destination]
```

## See Also

[getInputString](#) | [getS1RootInportMap](#)

## Related Examples

- “Create Custom Mapping File Function”

## Purpose

Create custom object to map signals to root-level inports using Simulink mapping mode

## Syntax

```
inputMap =
getSlRootInportMap('model',modelName,'MappingMode',
mappingmode,'SignalName',signalname,'SignalValue',signalvalue)
[inputMap, hasASignal] =
getSlRootInportMap('model',modelName,
'MappingMode',mappingmode,'SignalName',signalname,'SignalValue',
signalvalue)

inputMap =
getSlRootInportMap('model',modelName,'MappingMode',
'Custom','CustomFunction',customfunction,'SignalName',signalname,
'SignalValue',signalvalue)
[inputMap,hasASignal] =
getSlRootInportMap('model',modelName,
'MappingMode','Custom','CustomFunction',customfunction,
'SignalName',signalname,'SignalValue',signalvalue)
```

## Description

```
inputMap =
getSlRootInportMap('model',modelName,'MappingMode',
mappingmode,'SignalName',signalname,'SignalValue',signalvalue)
creates a root inport map using one of the Simulink mapping modes.
Load the model before using this function. If you do not load the model
first, the function loads the model to make the mapping and
then closes the model afterwards.
```

```
[inputMap, hasASignal] =
getSlRootInportMap('model',modelName,
'MappingMode',mappingmode,'SignalName',signalname,'SignalValue',
signalvalue) returns a vector of logical values specifying whether or
not the root inport map has a signal associated with it.
```

# getSlRootInportMap

---

`inputMap = getSlRootInportMap('model', modelname, 'MappingMode', 'Custom', 'CustomFunction', customfunction, 'SignalName', signalname, 'SignalValue', signalvalue)` creates a root inport map using a custom mapping mode specified in `customfunction`. Load the model before using this function. If you do not load the model first, the function loads the model to make the mapping and then closes the model afterwards.

`[inputMap, hasASignal] = getSlRootInportMap('model', modelname, 'MappingMode', 'Custom', 'CustomFunction', customfunction, 'SignalName', signalname, 'SignalValue', signalvalue)` returns a vector of logical values specifying whether or not the root inport map has a signal associated with it.

To map signals to root-level inports using custom mapping modes, you can use `getSlRootInport` with the Root Inport Mapping dialog box custom mapping capability.

## Tips

- Load the model before running this function.
- If your custom mapping mode is not similar to an existing Simulink mapping mode, consider using the `getRootInportMap` function instead.

## Input Arguments

### **modelname - Model name**

string

Specify the model to associate with the root inport map.

### **Data Types**

char

### **mappingmode - Simulink mapping mode**

string

Specify the mapping mode to use with model name and data source. Possible string values are:

'Index'	Assign sequential index numbers, starting at 1, to the data in the MAT-file, and map this data to the corresponding inport.
'BlockName'	Assign data to ports according to the name of the root-inport block. If the block name of a data element matches the name of a root-inport block, map the data to the corresponding port.
'SignalName'	Assign data to ports according to the name of the signal on the port. If the signal name of a data element matches the name of a signal at a port, map the data to the corresponding port.
'BlockPath'	Assign data to ports according to the block path of the root-inport block. If the block path of a data element matches the block path of a root-inport block, map the data to the corresponding port.
'Custom'	Apply mappings according to the definitions in a custom file.

## Data Types

char

### **customfunction - Custom function file name**

string

Specify name of file that implements a custom method to map signals to root-level ports. This function must be on the MATLAB path.

## Data Types

char

### **signalname - signal name**

scalar | cell array of strings

Specify the signal name(s) of the signal to associate with the root inport map.

# getSlRootInportMap

---

## Data Types

char | cell

## signalvalue - signal value

scalar | cell arrays

Specify the values of the signals to map to the root inport map. For the list of supported data types for the values, see “MAT-File for Import and Mapping”.

## Output Arguments

### inputMap - input map

scalar | vector

Mapping object that defines the mapping of input signals to root-level ports.

### hasASignal - signal presence indicator

scalar | vector

A vector of logical values with the same length as `inputMap`. If the value is true the `inputMap` has a signal associated with it. If the value is false the `inputMap` does not have a signal associated with it and will use a ground value as an input.

## Data Types

logical

## Examples

### Create inport map using Simulink mapping mode

Create a vector of inport maps using a built-in mapping mode.

```
Throttle = timeseries(ones(10,1)*10);
Brake    = timeseries(zeros(10,1));
inputMap = getSlRootInportMap('model','slexAutotransRootInportsExample',...
    'MappingMode','BlockName', ...
    'SignalName',{'Throttle' 'Brake'},...
    'SignalValue',{Throttle Brake});
```

## Create inport map using custom function

Create a vector of inport maps using a custom function

```
port1    = timeseries(ones(10,1)*10);
port2    = timeseries(zeros(10,1));
inputMap = getSlRootInportMap('model','slexAutotransRootInportsExample',...
    'MappingMode','Custom', ...
    'CustomFunction','slexCustomMappingMyCustomMap',...
    'SignalName',{'port1' 'port2'},...
    'SignalValue',{port1 port2});
```

### See Also

[getRootInportMap](#)

### Concepts

- “Import and Map Root-Level Inport Data”

# getVariable

---

<b>Purpose</b>	Get value of variable from workspace
<b>Syntax</b>	<pre>variableValue = getVariable(workspaceHandle,variableName) variableValue = workspaceHandle.getVariable(variableName)</pre>
<b>Description</b>	<p><code>variableValue = getVariable(workspaceHandle,variableName)</code> returns the value of the variable. If the variable does not exist in the workspace, an error occurs.</p> <p><code>variableValue = workspaceHandle.getVariable(variableName)</code> is an alternative syntax.</p>
<b>Input Arguments</b>	<p><b>workspaceHandle</b> Handle to the workspace containing the variable.</p> <p><b>variableName</b> Name of the variable containing the value.</p>
<b>Output Arguments</b>	<p><b>variableValue</b> Value of the variable.</p>
<b>Examples</b>	<p><b>Get Value of Workspace Variable</b></p> <p>Get the value of the workspace variable K, which is defined in model mdl.</p> <pre>wksp = get_param(mdl,'ModelWorkspace') value = wksp.getVariable('K')</pre> <pre>value =     5</pre>
<b>See Also</b>	<code>get_param</code>

<b>Purpose</b>	Determine if variable exists in workspace
<b>Syntax</b>	<pre>variableExists = hasVariable(workspaceHandle,variableName) variableExists = workspaceHandle.hasVariable(variableName)</pre>
<b>Description</b>	<pre>variableExists = hasVariable(workspaceHandle,variableName)</pre> returns 1 if the variable exists in the workspace, and 0 if not. <pre>variableExists = workspaceHandle.hasVariable(variableName)</pre> is an alternative syntax.
<b>Input Arguments</b>	<b>workspaceHandle</b> Handle to the workspace. <b>variableName</b> Name of the variable.
<b>Output Arguments</b>	<b>variableExists</b> Boolean value that indicates whether the variable exists in the workspace (1 if true and 0 if false).
<b>Examples</b>	<b>Determine Existence of Variable</b> Determine if the variable K exists in the workspace for model mdl. <pre>wksp = get_param mdl, 'ModelWorkspace' exists = wksp.hasVariable('K')</pre> <pre>exists =     1</pre>
<b>See Also</b>	<code>get_param</code>

# hilite\_system

---

<b>Purpose</b>	Highlight Simulink object
<b>Syntax</b>	<code>hilite_system(<i>block_path</i>)</code> <code>hilite_system(<i>block_path</i>, <i>hilite_scheme</i>)</code>
<b>Description</b>	<code>hilite_system(<i>block_path</i>)</code> highlights a model object using colors specified by the default highlighting scheme. <code>hilite_system(<i>block_path</i>, <i>hilite_scheme</i>)</code> highlights a model object using the foreground and background colors specified in the highlighting scheme.
<b>Tips</b>	<ul style="list-style-type: none"><li>• Calling <code>hilite_system</code> does not clear highlighted objects from previous <code>hilite_system</code> calls.</li><li>• Using a traceability tag for <code>block_path</code> requires a Simulink Coder license. If you call <code>hilite_system</code> with a traceability tag as input, do the following:<ul style="list-style-type: none"><li>▪ If you closed and reopened a model, you must update the model before calling <code>hilite_system</code>.</li><li>▪ If you changed your model, such as adding a block to your diagram, before calling <code>hilite_system</code>, generate new code for the model. When the system hierarchy of the model changes, traceability tags change. If you use a traceability tag from previously generated code, <code>hilite_system</code> might highlight the wrong block.</li><li>▪ If a block name contains a newline character (<code>\n</code>), it is replaced with a space for readability. When calling <code>hilite_system</code>, in the block path string, replace the newline character with a space.</li></ul></li><li>• <code>hilite_system</code> might not work for a block, if the block name contains:<ul style="list-style-type: none"><li>▪ A single quote (<code>'</code>).</li><li>▪ An asterisk (<code>*</code>), that causes name ambiguity relative to other names in the model. This name ambiguity occurs in a block name or at the end of a block name if an asterisk precedes or follows a slash (<code>/</code>).</li></ul></li></ul>

- The character (char(255)).

## Input Arguments

### block\_path

A string in two possible formats:

- A full block path
- A traceability tag from the comments of Simulink Coder generated code. Using a traceability tag requires a Simulink Coder license. In this case, the format is `<system>/block_name`:
  - *system* is one of the following:
    - The string Root.
    - A unique system number assigned by the Simulink engine.
  - *block\_name* is the name of the source block. If a block name contains a newline character (`\n`), in the block path string, replace the newline character with a space.

### hilite\_scheme

String identifying a highlighting scheme name. For more information, see “Highlighting Scheme” on page 2-315.

## Definitions

### Highlighting Scheme

A highlighting scheme specifies the foreground and background colors for a model object. Possible highlighting scheme names are:

```
default
none (clears the highlighting for an object)
find
unique
different
user1
user2
user3
user4
```

user5

You can alter the specification for a highlighting scheme by using the following command:

```
set_param(0, 'HiliteAncestorsData', HILITE_DATA)
```

*HILITE\_DATA* is a MATLAB structure array with the following fields:

- 'HiliteType': string specifying a highlighting scheme.
- 'ForegroundColor': string specifying a foreground “Color” on page 2-316.
- 'BackgroundColor': string specifying a background “Color” on page 2-316.

## Color

The supported color strings for foreground and background colors are:

```
black  
white  
gray  
red  
orange  
yellow  
green  
darkGreen  
blue  
lightBlue  
cyan  
magenta
```

## Examples

- 1 Open a Simulink model. For example, in the MATLAB Command Window, type

```
slexAircraftExample
```

- 2 Use the block path to highlight the Controller block.

```
hilite_system('slexAircraftExample/Controller')
```

In the model diagram, the Controller block is highlighted yellow.

If you have a Simulink Coder license, you can trace generated code to the corresponding source system or block in a model.

- 1 Open the Model Configuration Parameters dialog box. In the **Solver** pane, set solver parameters as follows:
  - Set the solver **Type** to Fixed-step.
  - Set **Fixed step size** to 0.1.


- 2 Generate code for the model. **Code > C/C++ Code > Build Model**.

- 3 In an editor or within an HTML code generation report, open a generated source or header file.

- 4 As you review lines of code, note traceability tags that correspond to code of interest. To highlight a block using a traceability tag, enter:


```
hilite_system('<Root>/alpha, rad')
```

The following figure shows block alpha, rad highlighted.

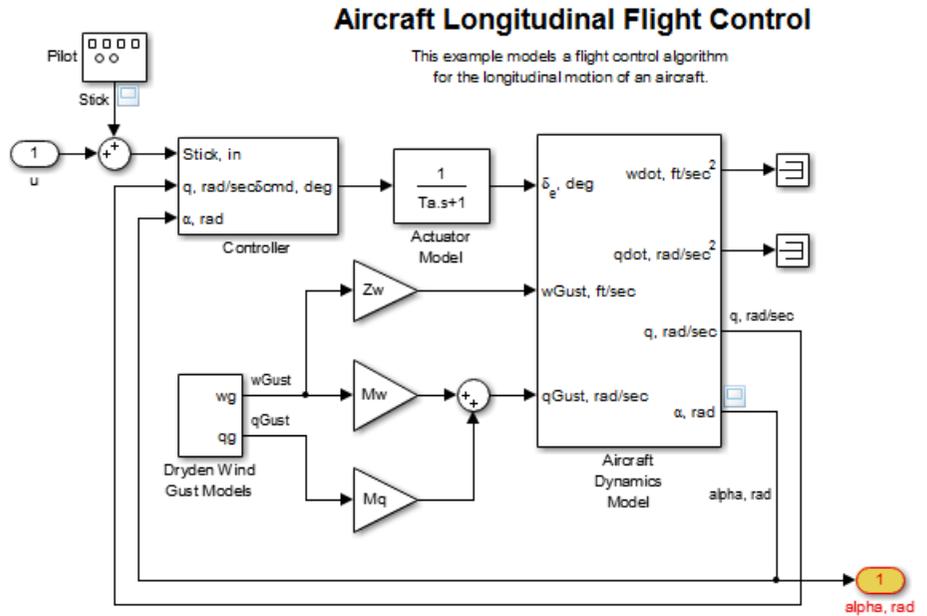

You can also use the `hilite_system` command to highlight a block within a subsystem. Specify the Aircraft Dynamics Model subsystem using its traceability tag.

```
hilite_system('<S1>/Vertical Channel')
```

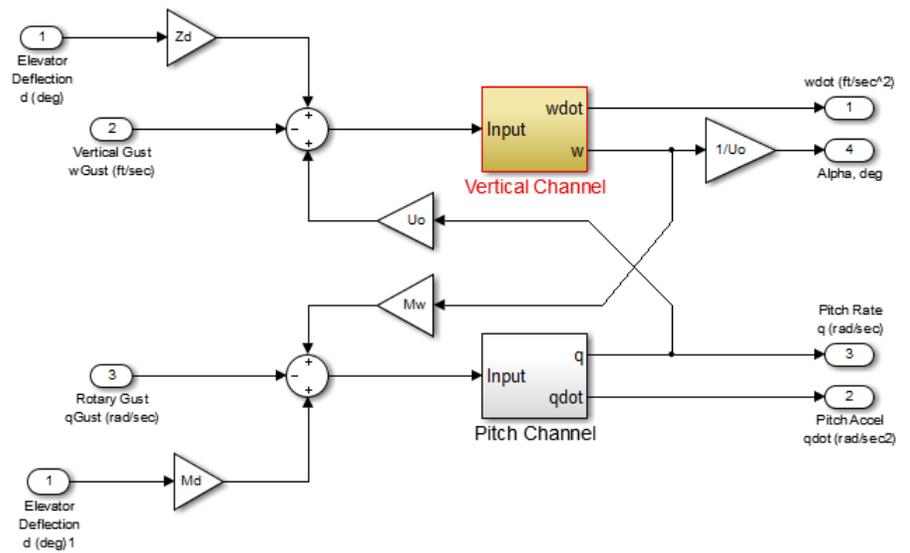

## See Also

rtwtrace

# intersect

---

**Purpose** Returns intersection of two vectors of `Simulink.VariableUsage` objects

**Syntax** `VarsOut = intersect (VarsIn1, VarsIn2)`  
`VarsOut = VarsIn1.intersect (VarsIn2)`

**Description** `VarsOut = intersect (VarsIn1, VarsIn2)` inputs two vectors of `Simulink.VariableUsage` objects and returns a vector containing a `Simulink.VariableUsage` object for each variable that is represented in both input vectors. The function compares input objects by comparing their `Name`, `Workspace`, and `WorkspaceType` values. If all three values are the same in both objects, the two objects match. Any returned object is a new object having the same field values as the matching input objects, except that its `UsedByBlocks` field contains the union of the values in the `UsedByBlocks` fields of the two matching objects.

`VarsOut = VarsIn1.intersect (VarsIn2)` is the equivalent method syntax (`Simulink.VariableUsage.intersect`) and gives identical results.

**Input Arguments** **VarsIn1**  
A vector of `Simulink.VariableUsage` objects

**VarsIn2**  
Another vector of `Simulink.VariableUsage` objects

**Output Arguments** **VarsOut**  
A vector of `Simulink.VariableUsage` objects containing a copy of any object in `VarsIn1` that matches an object in `VarsIn2`. Two objects match if their `Name`, `Workspace`, and `WorkspaceType` values are the same. The `UsedByBlocks` field of each returned object is the union of the values of that field in the matching input objects.

**Examples** Given two models, discover which variables are needed by the first model, the second model, or both models:

```
model1Vars = Simulink.findVars('model1');  
model2Vars = Simulink.findVars('model2');  
commonVars = intersect(model1Vars, model2Vars);
```

## See Also

[Simulink.findVars](#) | [Simulink.VariableUsage](#) | [setdiff](#)

# isLoaded

---

<b>Purpose</b>	Determine if Simulink Project is loaded
<b>Syntax</b>	<code>loaded = isLoaded(proj)</code>
<b>Description</b>	<code>loaded = isLoaded(proj)</code> returns whether the project referenced by the project object <code>proj</code> is loaded.
<b>Input Arguments</b>	<b>proj - Project</b> project Project, specified as a project object. Use <code>simulinkproject</code> to create a project object to manipulate a Simulink Project at the command line.
<b>Output Arguments</b>	<b>loaded - Loaded status</b> 1   0 Project loaded status, returned as true (1) if the project is loaded. <b>Data Types</b> logical
<b>Examples</b>	<b>Find Out if Project Is Loaded</b> Open the airframe project and create a project object. <pre>sldemo_slproject_airframe; proj = simulinkproject;</pre> Find out if the project is still loaded. <pre>loaded = isLoaded(proj)</pre> <pre>loaded =  1</pre>

## See Also

**Functions**     `simulinkprojectreload`

# legacy\_code

---

## Purpose

Use Legacy Code Tool

## Syntax

```
legacy_code('help')
specs = legacy_code('initialize')
legacy_code('sfcn_cmex_generate', specs)
legacy_code('compile', specs, compilerOptions)
legacy_code('generate_for_sim', specs, modelName)
legacy_code('slblock_generate', specs, modelName)
legacy_code('sfcn_tlc_generate', specs)
legacy_code('rtwmakecfg_generate', specs)
legacy_code('backward_compatibility')
```

## Description

The `legacy_code` function creates a MATLAB structure for registering the specification for existing C or C++ code and the S-function being generated. In addition, the function can generate, compile and link, and create a masked block for the specified S-function. Other options include generating

- A TLC file for simulation in Accelerator mode or code generation
- An `rtwmakecfg.m` file that you can customize to specify dependent source and header files that reside in a different directory than that of the generated S-function

`legacy_code('help')` displays instructions for using Legacy Code Tool.

`specs = legacy_code('initialize')` initializes the Legacy Code Tool data structure, `specs`, which registers characteristics of existing C or C++ code and properties of the S-function that the Legacy Code Tool generates.

`legacy_code('sfcn_cmex_generate', specs)` generates an S-function source file as specified by the Legacy Code Tool data structure, `specs`.

`legacy_code('compile', specs, compilerOptions)` compiles and links the S-function generated by the Legacy Code Tool based on the data structure, `specs`, and any compiler options that you might specify. The following examples show how to specify no options, one option, and multiple options:

```
legacy_code('compile', s);  
legacy_code('compile', s, '-DCOMPILER_VALUE1=1');  
legacy_code('compile', s,...  
    {'-DCOMPILER_VALUE1=1', '-DCOMPILER_VALUE2=2',...  
    '-DCOMPILER_VALUE3=3'});
```

`legacy_code('generate_for_sim', specs, modelName)` generates, compiles, and links the S-function in a single step. If the `Options.useTlcWithAccel` field of the Legacy Code Tool data structure is set to logical 1 (true), the function also generates a TLC file for accelerated simulations.

`legacy_code('slblock_generate', specs, modelName)` generates a masked S-Function block for the S-function generated by the Legacy Code Tool based on the data structure, *specs*. The block appears in the Simulink model specified by *modelName*. If you omit *modelName*, the block appears in an empty model editor window.

`legacy_code('sfcn_tlc_generate', specs)` generates a TLC file for the S-function generated by the Legacy Code Tool based on the data structure, *specs*. This option is relevant if you want to:

- Force Accelerator mode in Simulink software to use the TLC inlining code of the generated S-function. See the description of the `ssSetOptions SimStruct` function and `SS_OPTION_USE_TLC_WITH_ACCELERATOR` S-function option for more information.
- Use Simulink Coder software to generate code from your Simulink model. For more information, see “Integrate External Code Using Legacy Code Tool”.

`legacy_code('rtwmakecfg_generate', specs)` generates an `rtwmakecfg.m` file for the S-function generated by the Legacy Code Tool based on the data structure, *specs*. This option is relevant only if you use Simulink Coder software to generate code from your Simulink model. For more information, see “Use `rtwmakecfg.m` API to Customize Generated Makefiles” and “Integrate External Code Using Legacy Code Tool” in the Simulink Coder documentation.

`legacy_code('backward_compatibility')` automatically updates syntax for using Legacy Code Tool to the supported syntax described in this reference page and in “Integrate C Functions Using Legacy Code Tool”.

## Input Arguments

*specs*

A structure with the following fields:

### Name the S-function

**SFunctionName** (Required) — A string specifying a name for the S-function to be generated by the Legacy Code Tool.

### Define Legacy Code Tool Function Specifications

- **InitializeConditionsFcnSpec** — A nonempty string specifying a reentrant function that the S-function calls to initialize and reset states. You must declare this function by using tokens that Simulink software can interpret as explained in “Declaring Legacy Code Tool Function Specifications”.
- **OutputFcnSpec** — A nonempty string specifying the function that the S-function calls at each time step. You must declare this function by using tokens that Simulink software can interpret as explained in “Declaring Legacy Code Tool Function Specifications”.
- **StartFcnSpec** — A string specifying the function that the S-function calls when it begins execution. This function can access S-function parameter arguments only. You must declare this function by using tokens that Simulink software can interpret as explained in “Declaring Legacy Code Tool Function Specifications”.
- **TerminateFcnSpec** — A string specifying the function that the S-function calls when it terminates execution. This function can access S-function parameter arguments only. You must declare this function by using tokens that Simulink software

can interpret as explained in “Declaring Legacy Code Tool Function Specifications”.

## Define Compilation Resources

- **HeaderFiles** — A cell array of strings specifying the file names of header files required for compilation.
- **SourceFiles** — A cell array of strings specifying source files required for compilation. You can specify the source files using absolute or relative path names.
- **HostLibFiles** — A cell array of strings specifying library files required for host compilation. You can specify the library files using absolute or relative path names.
- **TargetLibFiles** — A cell array of strings specifying library files required for target (that is, standalone) compilation. You can specify the library files using absolute or relative path names.
- **IncPaths** — A cell array of strings specifying directories containing header files. You can specify the directories using absolute or relative path names.
- **SrcPaths** — A cell array of strings specifying directories containing source files. You can specify the directories using absolute or relative path names.
- **LibPaths** — A cell array of strings specifying directories containing host and target library files. You can specify the directories using absolute or relative path names.

## Specify a Sample Time

**SampleTime** — One of the following:

- **'inherited'** (default) — Sample time is inherited from the source block.

- 'parameterized' — Sample time is represented as a tunable parameter. Generated code can access the parameter by calling MEX API functions, such as `mxGetPr` or `mxGetData`.
- Fixed — Sample time that you explicitly specify. For information on how to specify sample time, see “Specify Sample Time”.

If you specify this field, you must specify it last.

## Define S-Function Options

**Options** — A structure that controls S-function options. The structure's fields include:

- `isMacro` — A logical value specifying whether the legacy code is a C macro. By default, the value is false (0).
- `isVolatile` — A logical value specifying the setting of the S-function `SS_OPTION_NONVOLATILE` option. By default, the value is true (1).
- `canBeCalledConditionally` — A logical value specifying the setting of the S-function `SS_OPTION_CAN_BE_CALLED_CONDITIONALLY` option. By default, the value is true (1).
- `useTlcWithAccel` — A logical value specifying the setting of the S-function `SS_OPTION_USE_TLC_WITH_ACCELERATOR` option. By default, the value is true (1).
- `language` — A string specifying either 'C' or 'C++' as the target language of the S-function that Legacy Code Tool will produce. By default, the value is 'C'.

---

**Note** The Legacy Code Tool can interface with C++ functions, but not C++ objects. For a work around, see “Legacy Code Tool Limitations” in the Simulink documentation.

---

- `singleCPPMexFile` — A logical value that, if `true`, specifies that generated code:
  - Requires you to generate and manage an inlined S-function as only one file (`.cpp`) instead of two (`.c` and `.tlc`).
  - Maintains model code style (level of parentheses usage and preservation of operand order in expressions and condition expressions in if statements) as specified by model configuration parameters.

By default, the value is `false`.

---

**Limitations** You cannot set the `singleCPPMexFile` field to `true` if

- `Options.language='C++'`
  - You use one of the following Simulink objects with the `IsAlias` property set to `true`:
    - `Simulink.Bus`
    - `Simulink.AliasType`
    - `Simulink.NumericType`
  - The Legacy Code Tool function specification includes a `void*` or `void**` to represent scalar work data for a state argument
  - `HeaderFiles` field of the Legacy Code Tool structure specifies multiple header files
- 

- `supportsMultipleExecInstances`— A logical value specifying whether to include a call to the `ssSupportsMultipleExecInstances` function. By default, the value is `false` (0).

- `convert2DMatrixToRowMajor`— A logical value specifying the automatic conversion of a matrix between a 2-D column-major format and a row-major format. The 2-D column-major format is used by MATLAB, Simulink, and the generated code. The row-major format is used by C. By default, the value is `false` (0).

---

**Note** This option does not support a 2-D matrix of complex data.

---

*modelName*

The name of a Simulink model into which Legacy Code Tool is to insert the masked S-function block generated when you specify `legacy_code` with the action string `'slblock_generate'`. If you omit this argument, the block appears in an empty model editor window.

## How To

- “Integrate C Functions Using Legacy Code Tool”
- “Integrate External Code Using Legacy Code Tool”

<b>Purpose</b>	Get information about library blocks referenced by model								
<b>Syntax</b>	<pre>libdata = libinfo('system') libdata = libinfo('system', constraint1, value1, ...)</pre>								
<b>Description</b>	<p><i>libdata</i> = libinfo('system') returns information about library blocks referenced by <i>system</i> and all the systems underneath it.</p> <p><i>libdata</i> = libinfo('system', <i>constraint1</i>, <i>value1</i>, ...) restricts the search as indicated by the search constraint(s) <i>c1</i>, <i>v1</i>, ...</p>								
<b>Input Arguments</b>	<p><b>system</b> The system to search recursively for library blocks.</p> <p><b>constraint1, value1, ...</b> One or more pairs, each consisting of a search constraint followed by a constraint value. You can specify any of the search constraints that you can use with <code>find_system</code>.</p>								
<b>Output Arguments</b>	<p><b>libdata</b> An array of structures that describes each library block referenced by <i>system</i>. Each structure has the following fields:</p> <table> <tr> <td>Block</td> <td>Path of the link to the library block</td> </tr> <tr> <td>Library</td> <td>Name of the library containing the referenced block</td> </tr> <tr> <td>ReferenceBlock</td> <td>Path of the library block</td> </tr> <tr> <td>LinkStatus</td> <td>Value of the <code>LinkStatus</code> parameter for the link to the library block</td> </tr> </table>	Block	Path of the link to the library block	Library	Name of the library containing the referenced block	ReferenceBlock	Path of the library block	LinkStatus	Value of the <code>LinkStatus</code> parameter for the link to the library block
Block	Path of the link to the library block								
Library	Name of the library containing the referenced block								
ReferenceBlock	Path of the library block								
LinkStatus	Value of the <code>LinkStatus</code> parameter for the link to the library block								
<b>See Also</b>	<code>find_system</code>								

## How To

- “About Block Libraries and Linked Blocks”

**Purpose**

Extract continuous-time linear state-space model around operating point

**Syntax**

```
argout = linmod('sys');
argout = linmod('sys',x,u);
argout = linmod('sys', x, u, para);
argout = linmod('sys', x, u, 'v5');
argout = linmod('sys', x, u, para, 'v5');
argout = linmod('sys', x, u, para, xpert, upert, 'v5');
```

**Arguments**

*sys* Name of the Simulink system from which the linear model is extracted.

*x* and *u* State (*x*) and the input (*u*) vectors. If specified, they set the operating point at which the linear model is extracted. When a model has model references using the Model block, you must use the Simulink structure format to specify *x*. To extract the *x* structure from the model, use the following command:

```
x = Simulink.BlockDiagram.getInitialState('sys');
```

You can then change the operating point values within this structure by editing *x.signals.values*.

If the state contains different data types (for example, 'double' and 'uint8'), then you cannot use a vector to specify this state. You must use a structure instead. In addition, you can only specify the state as a vector if the state data type is 'double'.

*Ts* Sample time of the discrete-time linearized model

'v5' An optional argument that invokes the perturbation algorithm created prior to MATLAB 5.3. Invoking this optional argument is equivalent to calling `linmodv5`.

para A three-element vector of optional arguments:

- `para(1)` — Perturbation value of delta, the value used to perform the perturbation of the states and the inputs of the model. This is valid for linearizations using the 'v5' flag. The default value is `1e-05`.
- `para(2)` — Linearization time. For blocks that are functions of time, you can set this parameter with a nonnegative value that gives the time (t) at which Simulink evaluates the blocks when linearizing a model. The default value is 0.
- `para(3)` — Set `para(3)=1` to remove extra states associated with blocks that have no path from input to output. The default value is 0.

xpert and  
upert

The perturbation values used to perform the perturbation of all the states and inputs of the model. The default values are

```
xpert = para(1) + 1e-3*para(1)*abs(x)
upert = para(1) + 1e-3*para(1)*abs(u)
```

When a model has model references using the Model block, you must use the Simulink structure format to specify `xpert`. To extract the `xpert` structure, use the following command:

```
xpert = Simulink.BlockDiagram.getInitialState('sys');
```

You can then change the perturbation values within this structure by editing `xpert.signals.values`.

The perturbation input arguments are only available when invoking the perturbation algorithm created prior to MATLAB 5.3, either by calling `linmodv5` or specifying the `'v5'` input argument to `linmod`.

*argout*

`linmod`, `dlinmod`, and `linmod2` return state-space representations if you specify the output (left-hand) side of the equation as follows:

- `[A,B,C,D] = linmod('sys', x, u)` obtains the linearized model of `sys` around an operating point with the specified state variables `x` and the input `u`. If you omit `x` and `u`, the default values are zero.

`linmod` and `dlinmod` both also return a transfer function and MATLAB data structure representations of the linearized system, depending on how you specify the output (left-hand) side of the equation. Using `linmod` as an example:

- `[num, den] = linmod('sys', x, u)` returns the linearized model in transfer function form.
- `sys_struct = linmod('sys', x, u)` returns a structure that contains the linearized model, including state names, input and output names, and information about the operating point.

## Description

`linmod` compute a linear state-space model by linearizing each block in a model individually.

`linmod` obtains linear models from systems of ordinary differential equations described as Simulink models. Inputs and outputs are denoted in Simulink block diagrams using Inport and Outport blocks.

The default algorithm uses preprogrammed analytic block Jacobians for most blocks which should result in more accurate linearization than numerical perturbation of block inputs and states. A list of blocks that have preprogrammed analytic Jacobians is available in the Simulink Control Design documentation along with a discussion of the block-by-block analytic algorithm for linearization.

The default algorithm also allows for special treatment of problematic blocks such as the Transport Delay and the Quantizer. See the mask dialog of these blocks for more information and options.

## Notes

By default, the system time is set to zero. For systems that are dependent on time, you can set the variable `para` to a two-element vector, where the second element is used to set the value of `t` at which to obtain the linear model.

The ordering of the states from the nonlinear model to the linear model is maintained. For Simulink systems, a string variable that contains the block name associated with each state can be obtained using

```
[sizes,x0,xstring] = sys
```

where `xstring` is a vector of strings whose *i*th row is the block name associated with the *i*th state. Inputs and outputs are numbered sequentially on the diagram.

For single-input multi-output systems, you can convert to transfer function form using the routine `ss2tf` or to zero-pole form using `ss2zp`. You can also convert the linearized models to LTI objects using `ss`. This function produces an LTI object in state-space form that can be further converted to transfer function or zero-pole-gain form using `tf` or `zpk`.

The default algorithms in `linmod` handle Transport Delay blocks by replacing the linearization of the blocks with a Pade approximation. For the 'v5' algorithm, linearization of a model that contains Derivative

or Transport Delay blocks can be troublesome. For more information, see “Linearizing Models”.

**See Also**

[linmod](#) | [dlinmod](#) | [linmod2](#) | [linmodv5](#)

# linmod2

---

**Purpose** Extract continuous-time linear state-space model around operating point

**Syntax**

```
argout = linmod2('sys', x, u);  
argout = linmod2('sys', x, u, para);
```

**Arguments**

<i>sys</i>	Name of the Simulink system from which the linear model is extracted.
------------	---

<i>x, u</i>	State ( <i>x</i> ) and the input ( <i>u</i> ) vectors. If specified, they set the operating point at which the linear model is extracted. When a model has model references using the Model block, you must use the Simulink structure format to specify <i>x</i> . To extract the <i>x</i> structure from the model, use the following command:
-------------	--

```
x = Simulink.BlockDiagram.getInitialState('sys');
```

You can then change the operating point values within this structure by editing `x.signals.values`.

If the state contains different data types (for example, 'double' and 'uint8'), then you cannot use a vector to specify this state. You must use a structure instead. In addition, you can only specify the state as a vector if the state data type is 'double'.

- para* A three-element vector of optional arguments:
- *para*(1) — Perturbation value of delta, the value used to perform the perturbation of the states and the inputs of the model. This is valid for linearizations using the 'v5' flag. The default value is 1e-05.
  - *para*(2) — Linearization time. For blocks that are functions of time, you can set this parameter with a nonnegative value that gives the time (t) at which Simulink evaluates the blocks when linearizing a model. The default value is 0.
  - *para*(3) — Set *para*(3)=1 to remove extra states associated with blocks that have no path from input to output. The default value is 0.

*argout* `linmod`, `dlinmod`, and `linmod2` return state-space representations if you specify the output (left-hand) side of the equation as follows:

- $[A,B,C,D] = \text{linmod}('sys', x, u)$  obtains the linearized model of *sys* around an operating point with the specified state variables *x* and the input *u*. If you omit *x* and *u*, the default values are zero.

`linmod` and `dlinmod` both also return a transfer function and MATLAB data structure representations of the linearized system, depending on how you specify the output (left-hand) side of the equation. Using `linmod` as an example:

- $[\text{num}, \text{den}] = \text{linmod}('sys', x, u)$  returns the linearized model in transfer function form.

- `sys_struct = linmod('sys', x, u)` returns a structure that contains the linearized model, including state names, input and output names, and information about the operating point.

## Description

`linmod2` computes a linear state-space model by perturbing the model inputs and model states, and uses an advanced algorithm to reduce truncation error.

`linmod2` obtains linear models from systems of ordinary differential equations described as Simulink models. Inputs and outputs are denoted in Simulink block diagrams using Inport and Outport blocks.

## Notes

By default, the system time is set to zero. For systems that are dependent on time, you can set the variable `para` to a two-element vector, where the second element is used to set the value of `t` at which to obtain the linear model.

The ordering of the states from the nonlinear model to the linear model is maintained. For Simulink systems, a string variable that contains the block name associated with each state can be obtained using

```
[sizes,x0,xstring] = sys
```

where `xstring` is a vector of strings whose *i*th row is the block name associated with the *i*th state. Inputs and outputs are numbered sequentially on the diagram.

For single-input multi-output systems, you can convert to transfer function form using the routine `ss2tf` or to zero-pole form using `ss2zp`. You can also convert the linearized models to LTI objects using `ss`. This function produces an LTI object in state-space form that can be further converted to transfer function or zero-pole-gain form using `tf` or `zpk`.

The default algorithms in `linmod` and `dlinmod` handle Transport Delay blocks by replacing the linearization of the blocks with a Pade approximation. For more information, see “Linearizing Models”.

**See Also**     `linmod` | `dlinmod` | `linmodv5`

# linmodv5

---

**Purpose** Extract continuous-time linear state-space model around operating point

**Syntax**

```
argout = linmodv5('sys');  
argout = linmodv5('sys',x,u);  
argout = linmodv5('sys', x, u, para);  
argout = linmodv5('sys', x, u, para, xpert, upert);
```

**Arguments**

<i>sys</i>	Name of the Simulink system from which the linear model is extracted.
------------	---

<i>x, u</i>	State ( <i>x</i> ) and the input ( <i>u</i> ) vectors. If specified, they set the operating point at which the linear model is extracted. When a model has model references using the Model block, you must use the Simulink structure format to specify <i>x</i> . To extract the <i>x</i> structure from the model, use the following command:
-------------	--

```
x = Simulink.BlockDiagram.getInitialState('sys');
```

You can then change the operating point values within this structure by editing `x.signals.values`.

If the state contains different data types (for example, 'double' and 'uint8'), then you cannot use a vector to specify this state. You must use a structure instead. In addition, you can only specify the state as a vector if the state data type is 'double'.

*para*

A three-element vector of optional arguments:

- *para(1)* — Perturbation value of delta, the value used to perform the perturbation of the states and the inputs of the model. This is valid for linearizations using the 'v5' flag. The default value is 1e-05.
- *para(2)* — Linearization time. For blocks that are functions of time, you can set this parameter with a nonnegative value that gives the time (t) at which Simulink evaluates the blocks when linearizing a model. The default value is 0.
- *para(3)* — Set *para(3)=1* to remove extra states associated with blocks that have no path from input to output. The default value is 0.

*xpert, upert*

The perturbation values used to perform the perturbation of all the states and inputs of the model. The default values are

```
xpert = para(1) + 1e-3*para(1)*abs(x)
upert = para(1) + 1e-3*para(1)*abs(u)
```

When a model has model references using the Model block, you must use the Simulink structure format to specify *xpert*. To extract the *xpert* structure, use the following command:

```
xpert = Simulink.BlockDiagram.getInitialState('sys');
```

You can then change the perturbation values within this structure by editing *xpert.signals.values*.

The perturbation input arguments are only available when invoking the perturbation algorithm created

prior to MATLAB 5.3, either by calling `linmodv5` or specifying the 'v5' input argument to `linmod`.

*argout*

`linmod`, `dlinmod`, and `linmod2` return state-space representations if you specify the output (left-hand) side of the equation as follows:

- `[A,B,C,D] = linmod('sys', x, u)` obtains the linearized model of `sys` around an operating point with the specified state variables `x` and the input `u`. If you omit `x` and `u`, the default values are zero.

`linmod` and `dlinmod` both also return a transfer function and MATLAB data structure representations of the linearized system, depending on how you specify the output (left-hand) side of the equation. Using `linmod` as an example:

- `[num, den] = linmod('sys', x, u)` returns the linearized model in transfer function form.
- `sys_struct = linmod('sys', x, u)` returns a structure that contains the linearized model, including state names, input and output names, and information about the operating point.

## Description

`linmodv5` computes a linear state space model using the full model perturbation algorithm created prior to MATLAB 5.3.

`linmodv5` obtains linear models from systems of ordinary differential equations described as Simulink models. Inputs and outputs are denoted in Simulink block diagrams using Inport and Outport blocks.

## Notes

By default, the system time is set to zero. For systems that are dependent on time, you can set the variable `para` to a two-element

vector, where the second element is used to set the value of `t` at which to obtain the linear model.

The ordering of the states from the nonlinear model to the linear model is maintained. For Simulink systems, a string variable that contains the block name associated with each state can be obtained using

```
[sizes,x0,xstring] = sys
```

where `xstring` is a vector of strings whose *i*th row is the block name associated with the *i*th state. Inputs and outputs are numbered sequentially on the diagram.

For single-input multi-output systems, you can convert to transfer function form using the routine `ss2tf` or to zero-pole form using `ss2zp`. You can also convert the linearized models to LTI objects using `ss`. This function produces an LTI object in state-space form that can be further converted to transfer function or zero-pole-gain form using `tf` or `zpk`.

The default algorithms in `linmod` and `dlinmod` handle Transport Delay blocks by replacing the linearization of the blocks with a Pade approximation. For the 'v5' algorithm, linearization of a model that contains Derivative or Transport Delay blocks can be troublesome. For more information, see “Linearizing Models”.

## See Also

`linmod` | `dlinmod` | `linmod2`

# load\_system

---

**Purpose** Invisibly load Simulink model

**Syntax** `load_system('sys')`

**Description** `load_system('sys')` loads `sys`, where `sys` is the name of a Simulink model, into memory without making its model window visible.

You cannot use `load_system` to load MATLAB file models last saved in Simulink Version 1.3 (for example: `load_system mymodel.m`). If you have a MATLAB file model, you must upgrade to Simulink model file format as follows:

**1** Execute the model as a function:

```
mymodel
```

**2** Save the model as a Simulink model file:

```
save_system mymodel
```

**Examples** The command

```
load_system('vdp')
```

loads the `vdp` sample model into memory.

**See Also** `close_system` | `open_system`

**Purpose**

Execute particular phase of simulation of model

**Syntax**

```
[sys,x0,str,ts] = model([],[],[],'sizes');  
[sys,x0,str,ts] = model([],[],[],'compile');  
outputs = model(t,x,u,'outputs');  
derivs = model(t,x,u,'derivs');  
dstates = model(t,x,u,'update');  
model([],[],[],'term');
```

**Description**

The `model` command executes a specific phase of the simulation of a Simulink model whose name is `model`. The command's last argument (`flag`) specifies the phase of the simulation to be executed. See “Simulating Dynamic Systems” for a description of the steps that Simulink software uses to simulate a model.

This command ignores the effects of state transitions and conditional execution. Therefore, it is not suitable for models which have such logic. Use this command for models which can be represented as simple dynamic systems. Such systems should meet requirements which include the following:

- All states in the model must be non-complex states of data type double. No other states can be accessed using this command.
- There is minimal amount of state logic (Stateflow, conditionally executed subsystems etc.)
- The models are mixed domain models. That is, most blocks in the model are built-in Simulink blocks and do not include user-written S-functions or blocks from other Sim\* products)

For models which do not comply with these requirements, using this command can cause Simulink to produce results which can only be interpreted by further analyzing and simplifying the model.

This command is also not intended to be used to run a model step-by-step, for example, to debug a model. Use the Simulink debugger if you need to examine intermediate results to debug a model.

## Arguments

sys	Vector of model size data: <ul style="list-style-type: none"><li>• sys(1) = number of continuous states</li><li>• sys(2) = number of discrete states</li><li>• sys(3) = number of outputs</li><li>• sys(4) = number of inputs</li><li>• sys(5) = reserved</li><li>• sys(6) = direct-feedthrough flag (1 = yes, 0 = no)</li><li>• sys(7) = number of sample times (= number of rows in ts)</li></ul>
x0	Vector containing the initial conditions of the system's states
str	Vector of names of the blocks associated with the model's states. The state names and initial conditions appear in the same order in str and x0, respectively.
ts	An $m$ -by-2 matrix containing the sample time (period, offset) information
outputs	Outputs of the model at time step $t$ .
derivs	Derivatives of the continuous states of the model at time $t$ .
dstates	Discrete states of the model at time $t$ .
t	Time step
x	State vector

u	Inputs
flag	<p data-bbox="773 314 1326 371">String that indicates the simulation phase to be executed:</p> <ul data-bbox="773 413 1326 991" style="list-style-type: none"> <li data-bbox="773 413 1326 534">• 'sizes' executes the size computation phase of the simulation. This phase determines the sizes of the model's inputs, outputs, state vector, etc.</li> <li data-bbox="773 557 1326 678">• 'compile' executes the compilation phase of the simulation. The compilation phase propagates signal and sample time attributes.</li> <li data-bbox="773 701 1326 758">• 'update' computes the next values of the model's discrete states.</li> <li data-bbox="773 781 1326 838">• 'outputs' computes the outputs of the model's blocks at time t.</li> <li data-bbox="773 861 1326 918">• 'derivs' computes the derivatives of the model's continuous states at time step t.</li> <li data-bbox="773 940 1326 998">• 'term' causes Simulink software to terminate simulation of the model.</li> </ul>

### Examples

This command executes the compilation phase of the vdp model that comes with Simulink software.

```
vdp([], [], [], 'compile')
```

The following command terminates the simulation initiated in the previous example.

```
vdp([], [], [], 'term')
```

# model

---

---

**Note** You must always terminate simulation of the model by invoking the model command with the 'term' command. Simulink software does not let you close the model until you have terminated the simulation.

---

## See Also

sim

<b>Purpose</b>	Open Model Advisor
<b>Syntax</b>	<code>modeladvisor(model)</code>
<b>Description</b>	<code>modeladvisor(model)</code> opens the Model Advisor for the model or subsystem specified by <code>model</code> . If the specified model or subsystem is not open, this command opens it.
<b>Input Arguments</b>	<b>model - Model or subsystem name</b> <i>string</i> Model or subsystem name or handle, specified as a string. <b>Data Types</b> <i>char</i>
<b>Examples</b>	<b>Open Model Advisor for model</b> Open the Model Advisor for vdp example model: <code>modeladvisor('vdp')</code>  <b>Open Model Advisor for subsystem</b> Open the Model Advisor for the Aircraft Dynamics Model subsystem of the f14 example model: <code>modeladvisor('f14/Aircraft Dynamics Model')</code>  <b>Open Model Advisor for currently selected model</b> Open the Model Advisor on the currently selected model: <code>modeladvisor(bdroot)</code>  <b>Open Model Advisor for currently selected subsystem</b> Open the Model Advisor on the currently selected subsystem:

# modeladvisor

---

`modeladvisor(gcs)`

**See Also** “Consult the Model Advisor”

**Purpose** Create empty Simulink system

**Syntax**

```
new_system(sys)
new_system(sys, model)
new_system(sys, model, subsystem_path)
new_system(sys, model, 'ErrorIfShadowed')
new_system(sys, 'Library')
h = new_system(sys)
```

**Description** `new_system(sys)` or `new_system(sys, model)` creates an empty system where `sys` is the name of the new system. This command displays an error if `sys` is a MATLAB keyword, 'simulink', or more than 63 characters long.

`new_system(sys, model, subsystem_path)` creates a system from a subsystem where `subsystem_path` is the full path of the subsystem. The model that contains the subsystem must be open when this command is executed.

`new_system(sys, model, 'ErrorIfShadowed')` creates an empty system having the specified name. This command generates an error if another model, MATLAB file, or variable of the same name exists on the MATLAB path or workspace.

`new_system(sys, 'Library')` creates an empty library.

`h = new_system(sys)` returns the numeric handle of the system that has been created. You can pass `h` to any of the Simulink API functions, for example, `open_system(h)`.

---

**Note** The `new_system` command does not open the window of the system or library that it creates.

---

See “Model Parameters” on page 7-2 and “Block-Specific Parameters” on page 7-113 for a list of the default parameter values for the new system.

# new\_system

---

## Examples

This command creates a new system named 'mysys'.

```
new_system('mysys')
```

The command

```
new_system('mysys','Library')
```

creates, but does not open, a new library named 'sys'.

The command

```
new_system('vdp','Model','ErrorIfShadowed')
```

returns an error because 'vdp' is the name of a model on the MATLAB path.

The commands

```
load_system('f14')
new_system('mycontroller','Model','f14/Controller')
```

create a new model named mycontroller that has the same contents as does the subsystem named Controller in the f14 model.

The commands

```
h = new_system('mymodel')
```

```
h =
```

```
    3.0012
```

```
>> get_param(h,'Name')
```

```
ans =
```

```
    mymodel
```

```
open_system(h)
```

return the numeric handle of the system that has been created, and use that handle to get parameters and open the model.

**See Also**      `close_system` | `open_system` | `save_system`

# num2fixpt

---

**Purpose** Convert number to nearest value representable by specified fixed-point data type

**Syntax** `outValue = num2fixpt(OrigValue, FixPtDataType, FixPtScaling, RndMeth, DoSatur)`

**Description** `num2fixpt(OrigValue, FixPtDataType, FixPtScaling, RndMeth, DoSatur)` returns the result of converting `OrigValue` to the nearest value representable by the fixed-point data type `FixPtDataType`. Both `OrigValue` and `outValue` are of data type `double`. As illustrated in the example that follows, you can use `num2fixpt` to investigate quantization error that might result from converting a number to a fixed-point data type. The arguments of `num2fixpt` include:

- |                            |  |
|----------------------------|--|
| <code>OrigValue</code>     | Value to be converted to a fixed-point representation. Must be specified using a <code>double</code> data type.  |
| <code>FixPtDataType</code> | The fixed-point data type used to convert <code>OrigValue</code> .   |
| <code>FixPtScaling</code>  | Scaling of the output in either <code>Slope</code> or <code>[Slope Bias]</code> format. If <code>FixPtDataType</code> does not specify a generalized fixed-point data type using the <code>sfix</code> or <code>ufix</code> command, <code>FixPtScaling</code> is ignored. |

RndMeth	Rounding technique used if the fixed-point data type lacks the precision to represent OrigValue. If FixPtDataType specifies a floating-point data type using the float command, RndMeth is ignored. Valid values are Zero, Nearest, Ceiling, or Floor (the default).
DoSatur	Indicates whether the output should be saturated to the minimum or maximum representable value upon underflow or overflow. If FixPtDataType specifies a floating-point data type using the float command, DoSatur is ignored. Valid values are on or off (the default).

## Examples

Suppose you wish to investigate the quantization effect associated with representing the real-world value 9.875 as a signed, 8-bit fixed-point number. The command

```
num2fixpt(9.875, sfix(8), 2^-1)
```

```
ans =
```

```
9.500000000000000
```

reveals that a slope of  $2^{-1}$  results in a quantization error of 0.375. The command

```
num2fixpt(9.875, sfix(8), 2^-2)
```

```
ans =
```

```
9.750000000000000
```

# num2fixpt

---

demonstrates that a slope of  $2^{-2}$  reduces the quantization error to 0.125. But a slope of  $2^{-3}$ , as used in the command

```
num2fixpt(9.875, sfix(8), 2^-3)
```

```
ans =
```

```
9.87500000000000
```

eliminates the quantization error entirely.

## See Also

[fixptbestexp](#) | [fixptbestprec](#)

**Purpose** Open Simulink model, library, subsystem, or block dialog box

**Syntax**

```
open_system(obj)

open_system(sys, 'loadonly')

open_system(sbsys, 'window')
open_system(sbsys, 'tab')

open_system(blk, 'mask')
open_system(blk, 'force')
open_system(blk, 'parameter')
open_system(blk, 'OpenFcn')
```

**Description** `open_system(obj)` opens the specified model, library, subsystem, or block. This is equivalent to double-clicking the model or library in the Current Folder Browser, or the subsystem or block in the Simulink Editor.

A model or library opens in a new window. For a subsystem or block within a model, the behavior depends on the type of block and its properties.

- Any `OpenFcn` callback parameter is evaluated.
- If there is no `OpenFcn` callback, and a mask is defined, the mask parameter dialog box opens.
- Without an `OpenFcn` callback or a mask parameter, Simulink opens the object.
  - A referenced model opens in a new window.
  - A subsystem opens in a new tab in the same window.
  - For blocks, the parameters dialog box for the block opens.

To open a specific subsystem or block, you must load the model or library containing it. Otherwise Simulink returns an error.

## open\_system

---

You can override the default behavior by supplying a second input argument.

`open_system(sys, 'loadonly')` loads the specified model or library without opening the Simulink Editor. This is equivalent to using `load_system`.

`open_system(sbsys, 'window')` opens the subsystem `sbsys` in a new Simulink Editor window. Before opening a specific subsystem or block, load the model or library containing it. Otherwise Simulink returns an error.

`open_system(sbsys, 'tab')` opens the subsystem in a new Simulink Editor tab in the same window. Before opening a specific subsystem or block, load the model or library containing it. Otherwise Simulink returns an error.

`open_system(blk, 'mask')` opens the mask dialog box of the block or subsystem specified by `blk`. Before opening a specific subsystem or block, load the model or library containing it. Otherwise Simulink returns an error.

`open_system(blk, 'force')` looks under the mask of a masked block or subsystem. It opens the dialog box of the block under the mask or opens a masked subsystems in a new Simulink Editor tab. This is equivalent to the **Look Under Mask** menu item. Before opening a specific subsystem or block, load the model or library containing it. Otherwise Simulink returns an error.

`open_system(blk, 'parameter')` opens the block parameter dialog box or, for masked subsystems, the Mask Parameters dialog box.

`open_system(blk, 'OpenFcn')` runs the block callback `OpenFcn`.

## Examples

### Open a Model

Open the f14 model.

```
open_system('f14')
```

### Load a Model Without Opening it

Load the f14 model.

```
open_system('f14','loadonly')
```

### Open a Subsystem

Open the Controller subsystem of the f14 model.

```
load_system('f14')  
open_system('f14/Controller')
```

### Open a Subsystem

Open the Controller subsystem of the f14 model.

```
load_system('f14')  
open_system('f14/Controller')
```

### Open a Subsystem in New Tab in Existing Window

Open the f14 model and open the Controller subsystem in a new tab.

```
f14  
open_system('f14/Controller','tab')
```

### Open a Subsystem in a Separate Window

Open a subsystem in its own Simulink Editor window.

```
open_system('f14')  
open_system('f14/Controller','window')
```

### Open a Referenced Model

Open the model sldemo\_mdhref\_counter, which is referenced by the CounterA model block in sldemo\_mdhref\_basic.

```
open_system('sldemo mdlref_basic')
open_system('sldemo mdlref_basic/CounterA')
```

The referenced model opens in its own Simulink Editor window.

### Open Block Dialog Box

Open the block parameters dialog box for the first Gain block in the Controller subsystem.

```
load_system('f14')
open_system('f14/Controller/Gain')
```

### Run Block Open Callback Function

Define an OpenFcn callback for a block and execute the block callback.

```
f14
set_param('f14/Pilot', 'OpenFcn', 'disp(''Hello World!'')')
open_system('f14/Pilot', 'OpenFcn')
```

The words Hello World appear on the MATLAB Command Prompt.

### Open Masked Subsystem

Open the contents of the masked subsystem Vehicle in the model sf\_car.

```
open_system('sf_car')
open_system('sf_car/Vehicle', 'force')
```

### Open Multiple Systems with One Command

Create a cell array of two model names, f14 and vdp. Open both models using open\_system with the cell array name.

```
models = {'f14', 'vdp'}
open_system(models)
```

## Input Arguments

### **obj - Model, referenced model, library, subsystem, or block path**

string

Model, referenced model, library, subsystem, or block path, specified as a string. If the model is not on the MATLAB path, specify the full path to the model file. Specify the block or subsystem using its full name, e.g., f14/Controller/Gain, on an opened or loaded model. On UNIX systems, the fully qualified path name of a model can start with a tilde (~), signifying your home directory.

#### **Data Types**

char

### **sys - Model or library path**

string

The full name or path of a model or library, specified as a string.

#### **Data Types**

char

### **sbsys - Subsystem path**

string

The full name or path of a subsystem in an open or loaded model, specified as a string.

#### **Data Types**

char

### **blk - Block or subsystem path**

string

The full name or path of a block or subsystem in an open or loaded model, specified as a string.

#### **Data Types**

char

## See Also

`new_system` | `load_system` | `close_system` | `save_system`

# openDialog

---

<b>Purpose</b>	Open configuration parameters dialog
<b>Syntax</b>	<code>openDialog(<i>configObj</i>)</code>
<b>Arguments</b>	<i>configObj</i> A configuration set ( <code>Simulink.ConfigSet</code> ) or configuration reference ( <code>Simulink.ConfigSetRef</code> )
<b>Description</b>	<code>openDialog</code> opens a configuration parameters dialog box. If <i>configObj</i> is a configuration set, the dialog box displays the configuration set. If <i>configObj</i> is a configuration reference, the dialog box displays the referenced configuration set, or generates an error if the reference does not specify a valid configuration set. If the dialog box is already open, its window becomes selected.
<b>Examples</b>	<p>The following example opens a configuration parameters dialog box that shows the current parameters for the current model. The parameter values derive from the active configuration set or configuration reference (configuration object). The code is the same in either case; the only difference is which type of configuration object is currently active.</p> <pre>myConfigObj = getActiveConfigSet(gcs); openDialog(myConfigObj);</pre>
<b>See Also</b>	<code>attachConfigSet</code>   <code>attachConfigSetCopy</code>   <code>closeDialog</code>   <code>detachConfigSet</code>   <code>getActiveConfigSet</code>   <code>getConfigSet</code>   <code>getConfigSets</code>   <code>setActiveConfigSet</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Manage a Configuration Set”</li><li>• “Manage a Configuration Reference”</li></ul>

**Purpose** Open Performance Advisor

**Syntax**

**Description** `performanceadvisor('model')` opens the Performance Advisor on the model or subsystem specified by `model`. If the specified model or subsystem is not open, this command opens it.

**Input Arguments** *model*  
A string specifying the name or handle to the model or subsystem.

**Examples** **Open Performance Advisor**

Open Performance Advisor on the vdp example model.

```
performanceadvisor('vdp')
```

Performance Advisor opens the vdp model and opens Performance Advisor on the model.

**Alternatives** “Start Performance Advisor”

**Related Examples**

- “Prepare a Model for Performance Advisor”
- “Run Performance Advisor Checks”

**Concepts**

- “Performance Advisor Window”
- “Operate on Performance Advisor Results”

# reload

---

<b>Purpose</b>	Reload Simulink Project
<b>Syntax</b>	<code>reload(proj)</code>
<b>Description</b>	<code>reload(proj)</code> reloads the project. Use <code>reload</code> when you want to run the project startup shortcuts.
<b>Input Arguments</b>	<b>proj - Project</b> <code>project object</code> Project, specified as a project object already created with <code>simulinkproject</code> to manipulate a Simulink Project at the command line.
<b>Examples</b>	<b>Reload Project</b> Open the airframe project and create a project object. <pre>sldemo_slproject_airframe; proj = simulinkproject;</pre> When you want to run the startup shortcuts again, reload the project. <pre>reload(proj)</pre>
<b>See Also</b>	
<b>Functions</b>	<code>simulinkprojectisLoaded</code>

**Purpose** Remove Simulink Project category of labels

**Syntax** `removeCategory(proj, categoryName)`

**Description** `removeCategory(proj, categoryName)` removes a category of labels, `categoryName`, from the Simulink Project specified by `proj`.

**Input Arguments** **proj - Project**  
project object

Project, specified as a project object. Use `simulinkproject` to create a project object to manipulate a Simulink Project at the command line.

**categoryName - Name of category**  
string

Name of the category to remove, which exists in the project, specified as a string.

**Examples** **Remove Category**

Open the airframe project and create a project object.

```
sldemo_slproject_airframe;  
proj = simulinkproject;
```

Create a new category of labels.

```
createCategory(proj, 'Engineers', 'char');
```

Remove the new category of labels.

```
removeCategory(proj, 'Engineers');
```

A message appears warning you that you cannot undo the operation. Click **Continue**. You can configure warnings in the Preferences in the Simulink Project Tool.

# removeCategory

---

## See Also

**Functions**      `simulinkprojectfindCategorycreateCategory`

<b>Purpose</b>	Remove file from Simulink Project
<b>Syntax</b>	<code>removeFile(proj, file)</code>
<b>Description</b>	<code>removeFile(proj, file)</code> removes a file from the project <code>proj</code> .
<b>Input Arguments</b>	<p><b>proj - Project</b> project object</p> <p>Project, specified as a project object. Use <code>simulinkproject</code> to create a project object to manipulate a Simulink Project at the command line.</p> <p><b>file - Path of file</b> string   file object</p> <p>Path of the file to remove relative to the project root folder, including the file extension, specified as a string or a file object returned by <code>findFile</code>. The file must be within the root folder.</p> <p><b>Example:</b> <code>'models/myModelName.slx'</code></p>
<b>Examples</b>	<p><b>Remove File from Project</b></p> <p>Open the airframe project and create a project object.</p> <pre>sldemo_slproject_airframe; proj = simulinkproject;</pre> <p>Remove a file.</p> <pre>removeFile(proj, 'models/AnalogControl.mdl')</pre> <p>Add the file back to the project.</p> <pre>addFile(proj, 'models/AnalogControl.mdl')</pre>
<b>See Also</b>	
<b>Functions</b>	<code>simulinkproject</code> <code>addFile</code> <code>findFile</code>

# removeLabel

---

**Purpose** Remove label from Simulink Project

**Syntax**  
`removeLabel(category, labelName)`  
`removeLabel(file, categoryName, labelName)`  
`removeLabel(file, labelDefinition)`

**Description** `removeLabel(category, labelName)` removes the label from the specified category of labels in the currently loaded project.

`removeLabel(file, categoryName, labelName)` removes the specified label in the category `categoryName` from the file. Use this syntax to specify category and label by name.

`removeLabel(file, labelDefinition)` removes the specified label `labelDefinition` from the file. Before you can remove the label, you need to get the label from the `file.Label` property or by using `findLabel`.

## Input Arguments

### **category - Category of labels**

category object

Category of labels, specified as a category object. Get a category object from the `proj.Categories` property or by using `findCategory`.

### **labelName - Name of label**

string

Name of the label to remove, specified as a string.

### **file - File to detach label from**

file object

File to detach the label from, specified as a file object. You can get the file object by examining the project's `Files` property (`proj.Files`), or use `findFile` to find a file by name. The file must be within the root folder.

### **categoryName - Name of category that contains label**

string

Name of the category that contains the label to remove, specified as a string.

## **labelDefinition - Label to detach**

label definition object

Name of the label to detach, specified as a label definition object returned by the `file.Label` property or `findLabel`.

## **Examples**

### **Remove a Label**

Open the airframe project and create a project object.

```
sldemo_slproject_airframe;  
proj = simulinkproject;
```

Examine the first existing category.

```
cat = proj.Categories(1)
```

```
cat =
```

```
Category with properties:
```

```
    Name: 'Review'  
    DataType: 'char'  
    LabelDefinitions: [1x4 slproject.LabelDefinition]
```

Define a new label in the category.

```
createLabel(cat, 'review me');
```

Remove the new label.

```
removeLabel(cat, 'review me');
```

# removeLabel

---

Alternatively, remove the label from the project by specifying the category by name.

```
removeLabel(proj,'Review','review me');
```

## See Also

## Functions

simulinkprojectfindLabelfindCategorycreateLabeladdLabel

## Purpose

Replace blocks in Simulink model

## Syntax

```
replace_block('sys', 'old_blk', 'new_blk')  
replace_block('sys', 'parameter', 'value', ..., 'blk')
```

## Description

`replace_block('sys', 'old_blk', 'new_blk')` replaces all blocks in `sys` having the block or mask type `old_blk` with `new_blk`.

- If `new_blk` is a Simulink built-in block, only the block name is necessary.
- If `old_blk` or `new_blk` is in another system, its full block pathname is required.
- If `noprompt` is omitted, Simulink software displays a dialog box that asks you to select matching blocks before making the replacement. Specifying the `noprompt` argument suppresses the dialog box from being displayed.
- If a return variable is specified, the paths of the replaced blocks are stored in that variable.

`replace_block('sys', 'parameter', 'value', ..., 'blk')` replaces all blocks in `sys` having the specified values for the specified parameters with `blk`. You can specify any number of parameter name/value pairs. You can also specify `find_system` parameter/value pairs followed by any number of block parameter/value pairs. For example, to replace blocks inside links, specify `'FollowLinks', 'on'` to follow links into library blocks. For information on block parameters, see “Block-Specific Parameters” on page 7-113.

---

**Note** Because it may be difficult to undo the changes this command makes, it is a good idea to save your Simulink model first.

---

## Examples

This command replaces all Gain blocks in the `f14` system with Integrator blocks and stores the paths of the replaced blocks in

# replace\_block

---

RepNames. Simulink software lists the matching blocks in a dialog box before making the replacement.

```
RepNames = replace_block('f14','Gain','Integrator')
```

This command replaces all blocks in the Unlocked subsystem in the sldemo\_clutch system having a Gain of 'bv' with the Integrator block. Simulink software displays a dialog box listing the matching blocks before making the replacement.

```
replace_block('sldemo_clutch/Unlocked','Gain','bv','Integrator')
```

This command replaces the Gain blocks in the f14 system with Integrator blocks but does not display the dialog box.

```
replace_block('f14','Gain','Integrator','noprompt')
```

This command replaces the Lockup Detection subsystem in the sldemo\_clutch model with a Gain block.

```
replace_block('sldemo_clutch','Name','Lockup Detection','built-in/Gain')
```

This command from the mask initialization of a linked block replaces blocks inside itself:

```
replace_block(gcf, 'FollowLinks', 'on', 'BlockType', 'Gain', 'Integrator', 'noprompt')
```

## See Also

[find\\_system](#) | [set\\_param](#)

## Purpose

Save Simulink system

## Syntax

```
save_system
save_system(sys)
save_system(sys, newsysname)
save_system(sys, newsysname.slx)
save_system(sys, newsysname, Name,Value)
save_system(sys, 'exported_file_name.xml',
'ExportToXML', true)
filename = save_system(sys)
```

## Description

`save_system` saves the current top-level system. If the system has not previously been saved, `save_system` creates a new file in the current folder.

`save_system(sys)` saves the top-level system that you specify in `sys` to a file using the current system name. `sys` must be a system name with no file extension. The system must be loaded. `sys` can be a string, a cell array of strings, a numeric handle, or an array of numeric handles. If you specify any options they apply to all the systems that you save.

`save_system(sys, newsysname)` saves the top-level system that you specify to a file using the new system name `newsysname`. The system must be loaded. `newsysname` can be a system name, or a filename with file extension and optional path, or empty. If you do not specify a file extension (.slx or .mdl) then `save_system` uses the file format specified in your Simulink preferences.

`save_system(sys, newsysname.slx)` saves the top-level system `sys` to a new file `newsysname` in the SLX file format.

`save_system(sys, newsysname, Name,Value)` saves the system with additional options specified by one or more `Name,Value` pair arguments.

`save_system(sys, 'exported_file_name.xml', 'ExportToXML', true)` exports the system to a file in a simple XML format. Do not use `ExportToXML` with any other `save_system` options.

# save\_system

---

`filename = save_system(sys)` returns the fully-qualified file name of the file you saved.

`save_system` can save only entire systems. To save a subsystem, use the `Simulink.SubSystem.copyContentsToBlockDiagram` function to copy the subsystem contents to a new block diagram and then save it using `save_system`. See `Simulink.SubSystem.copyContentsToBlockDiagram`.

If you set the `UpdateHistory` property of the model to `UpdateHistoryWhenSave`, you see the following behavior:

- When you save interactively, you see a dialog prompting for a comment to include in the model history.
- When you save using `save_system`, you do not see a prompt for a comment. `save_system` reuses the previous comment, unless you set `'ModifiedComment'` before saving:

```
set_param(mymodel, 'ModifiedComment', mycomment)
```

## Input Arguments

### **sys**

Top-level system to save. `'sys'` must be a system name, not a file name, i.e., without a file extension.

The system must be open. `'sys'` can be a string, a cell array of strings, a numeric handle, or an array of numeric handles.

### **newsysname**

New system name.

`'newsysname'` can be a system name, or a filename with file extension and optional path. If you do not specify a file extension (`.slx` or `.mdl`) then `save_system` uses the file format specified in your Simulink preferences.

`'newsysname'` can be empty (`[]`), in which case the current name is used. You must specify a `newsysname` argument before any name-value pair arguments even when you don't want to name a new sys, and in that case you leave it empty.

If 'sys' refers to more than one block diagram, 'newsysname' must be a cell array of new names.

This command displays an error if you enter any of the following as the new system name:

- A MATLAB keyword
- 'simulink'
- More than 63 characters

## **Name-Value Pair Arguments**

Specify optional comma-separated pairs of **Name**, **Value** arguments. **Name** is the argument name and **Value** is the corresponding value. **Name** must appear inside single quotes (' '). You can specify several name and value pair arguments in any order as **Name1**, **Value1**, ..., **NameN**, **ValueN**.

**Example:** `save_system(sys, newsysname, 'SaveModelWorkspace', true, 'BreakUserLinks', true, 'OverwriteIfChangedOnDisk', true)`

## **'BreakAllLinks'**

Logical value that indicates whether the function replaces links to library blocks with copies of the library blocks in the saved file. The 'BreakAllLinks' option affects any linked block, including user-defined and Simulink library blocks. Also accepts on or off.

true  
false (default)

---

## Note

The 'BreakAllLinks' option can result in compatibility issues when upgrading to newer versions of Simulink software. For example:

- Any masks on top of library links to Simulink S-functions will not upgrade to the new version of the S-function.
- Any library links to masked subsystems in a Simulink library will not upgrade to the new subsystem behavior.
- Any broken links prevent the automatic library forwarding mechanism from upgrading the link.

If you have saved a model with broken links, use the `Check model, local libraries, and referenced models for known upgrade issues` option in the Model Advisor to scan the model for out-of-date blocks. You can then use the `slupdate` command to upgrade the Simulink blocks to their current versions. Subsequently running the Model Advisor lists any remaining third-party library and optional Simulink blockset blocks that are still out of date and need manual upgrading.

---

## 'BreakUserLinks'

Logical value that indicates whether the function replaces links to user-defined library blocks with copies of the library blocks in the saved file. Also accepts `on` or `off`.

`true`  
`false` (default)

**Default:** `false`

## 'ErrorIfShadowed'

Logical value that indicates whether the function generates an error if the new name already exists on the MATLAB path or workspace. Also accepts `on` or `off`.

true  
false (default)

## **'ExportToXML'**

Logical value that indicates whether the function exports the specified block diagram to a file in a simple XML format. Specify the full name of the file, including an extension. The block diagram in memory does not change and no callbacks execute. Do not use this option with any other `save_system` options. Also accepts `on` or `off`.

true  
false (default)

## **'ExportToVersion'**

MATLAB release name, which specifies a previous Simulink version. `save_system` exports the system to a format that the specified previous Simulink version can load. You cannot export to your current version.

If the system contains functionality not supported by the specified Simulink software version, the command removes the functionality and replaces any unsupported blocks with empty masked subsystem blocks colored yellow. As a result, the converted system may generate different results.

To export to Release 2012a and later, you can specify model file format as `SLX` or `MDL`. If you do not specify a format, you export your default model file format.

`SaveAsVersion` is a legacy option for this argument that is also supported.

These version names are not case sensitive:

'R14'  
'R14SP1'  
'R14SP2'  
'R14SP3'  
'R2006A'

## save\_system

---

```
'R2006B'  
'R2007A'  
'R2007B'  
'R2008A'  
'R2008B'  
'R2009A'  
'R2009B'  
'R2010A'  
'R2010B'  
'R2011A'  
'R2011B'  
'R2012A_MDL'  
'R2012A_SLX'  
'R2012B_MDL'  
'R2012B_SLX'  
'R2013A_MDL'  
'R2013A_SLX'  
'R2013B_MDL'  
'R2013B_SLX'
```

### 'OverwriteIfChangedOnDisk'

Logical value that indicates whether to overwrite the file on disk (`true`) even if it has been externally modified since the system was loaded. To save the model regardless of whether the file has been changed on disk, supply the `OverwriteIfChangedOnDisk` option with value `true`.

If the file has changed on disk since the model was loaded, `save_system` displays an error to prevent the changes on disk from being overwritten, unless you use the `OverwriteIfChangedOnDisk` option set to `true`. Also accepts `on` or `off`.

```
true  
false (default)
```

You can control whether `save_system` displays an error if the file has changed on disk by using the **Saving the model** option in the **Model**

**File Change Notification** section of the Simulink Preferences dialog box. This preference is on by default.

## 'SaveModelWorkspace'

Logical value that indicates whether the function saves the contents of the model workspace. The model workspace `DataSource` must be a MAT-file. If the data source is not a MAT-file, `save_system` does not save the workspace. See “Specify Data Sources”. Also accepts `on` or `off`.

`true`  
`false` (default)

## Output Arguments

### **filename**

`save_system` returns the full name of the file that you saved, as a string. If you saved multiple files, the return value is a cell array of strings.

## Examples

The following examples assume prerequisites such as: you have loaded a model and the folder where you want to save is writeable.

Save the current system.

```
save_system
```

Save the `vdp` system with the name `vdp`.

```
save_system('vdp')
```

## save\_system

---

Save the vdp system to a file with the name 'myvdp'. If you do not specify a file extension in the second argument (.slx or .mdl), then `save_system` uses the file format specified in your Simulink preferences.

```
save_system('vdp', 'myvdp')
```

Save the vdp system to another folder.

```
save_system('vdp', 'C:\TMP\vdp.slx')
```

Save an existing model `mymodel` to a different file and specifying the SLX file format:

```
save_system('mymodel', 'newsysname.slx')
```

Save the vdp system to a file with the name 'myvdp' and replace links to library blocks with copies of the library blocks in the saved file.

```
save_system('vdp', 'myvdp', 'BreakAllLinks', true)
```

---

Save the current model (with its current name), and break any library links in it:

```
save_system('mymodel', 'mymodel', 'BreakAllLinks', true)
```

or

```
save_system('mymodel', [], 'BreakAllLinks', true)
```

---

Save the current model with a new name, but display an error (instead of saving) if something with this name already exists on the MATLAB path:

```
save_system('mymodel', 'mynewmodel', 'ErrorIfShadowed', true)
```

---

Prevent saving the vdp system with a new name if something with this name already exists on the MATLAB path. In this case `save_system` displays an error (instead of saving) because 'max' is the name of a MATLAB function.

```
save_system('vdp', 'max', 'ErrorIfShadowed', true)
```

Export the vdp system to Simulink Version R2008a with the name 'myvdp'. It does not replace links to library blocks with copies of the library blocks.

```
save_system('vdp', 'myvdp', 'ExportToVersion', 'R2008a')
```

Save the current model with a new name, save the model workspace, break any library links, and overwrite if the file has changed on disk:

```
save_system('mymodel', 'mynewmodel', 'SaveModelWorkspace',  
true, 'BreakAllLinks', true, 'OverwriteIfChangedOnDisk', true)
```

Return the full path name of the file that you saved, as a string. If you saved multiple files, the return value is a cell array of strings.

```
filename = save_system('mymodel')
```

Return the full path name of a system saved to a new file.

```
filename = save_system('mymodel', 'newmodelname')
```

## See Also

`close_system` | `new_system` | `open_system`

## How To

- “Save a Model”

# set\_param

---

**Purpose** Set system and block parameter values

**Syntax** `set_param(object,param,value)`

`set_param(object,param1,value1,...,paramN,valueN)`

**Description** `set_param(object,param,value)` sets the parameter to the specified value on the specified model or block object.

`set_param(object,param1,value1,...,paramN,valueN)` sets parameters and values on the specified model or block object.

When you set multiple parameters on the same model or block, use a single `set_param` command with multiple pairs of arguments, rather than multiple `set_param` commands. This technique is efficient because using a single call requires evaluating parameters only once. It is more robust because it prevents dependency errors by setting all parameter values before checking the legality of the results.

---

**Note** If you use `matlab -nodisplay` to start a session, you cannot use `set_param` to run your simulation. The `-nodisplay` mode does not support menu simulation.

---

---

**Tip** After you set parameters in the MATLAB workspace, in the Simulink editor, use **Simulation > Update Diagram** to see the changes in a model.

---

## Input Arguments

**object - Object name**

string

Object name of a model or path and name of a block.

**Example:** `'vdp/Fcn'`

**param - Parameter**

string

Parameter name, specified as a string. Case is ignored for parameter names. Value strings are case sensitive.

Many block parameter values must be specified as strings.

**Example:** 'Position',[50 100 110 120]

**value - Parameter value**

determined by parameter

Parameter value, specified in the format determined by the parameter. Values are often strings, but they can also be numeric, arrays, and so on. Value strings are case sensitive.

Many block parameter values are specified as strings. Two exceptions are the `Position`, specified as a vector, and `UserData`, specified according to the user data, parameters. These parameters are common to all blocks.

**Example:** 'Solver','ode15s','StopTime','3000'

**Example:** 'SimulationCommand','start'

**Example:** 'Position',[50 100 110 120]

**Examples****Set Model Configuration Parameters for the vdp System**

Set the `Solver` and `StopTime` parameters of the `vdp` system. Open `vdp` first.

```
vdp
set_param('vdp','Solver','ode15s','StopTime','3000')
```

**Set Model Configuration Parameters for Current System**

Set the `Solver` and `StopTime` parameters of the current system. Open a model first.

```
vdp
set_param(gcs,'Solver','ode15s','StopTime','3000')
```

## Set Position of Block

Set the position of the Fcn block in the vdp system. Open vdp first.

```
vdp  
set_param('vdp/Fcn','Position',[50 100 110 120])
```

## See Also

[get\\_param](#) | [gcs](#)

## Related Examples

- “Associating User Data with Blocks”
- “Model Parameters” on page 7-2
- “Block-Specific Parameters” on page 7-113
- “Common Block Properties” on page 7-100
- “Use MATLAB Commands to Change Workspace Data”
- “Control Execution of a Simulation”

**Purpose** Specify model's active configuration set or configuration reference

**Syntax** `setActiveConfigSet(model, configObjName)`

**Arguments**

`model`  
The name of an open model, or `gcs` to specify the current model

`configObjName`  
The name of a configuration set (`Simulink.ConfigSet`) or configuration reference (`Simulink.ConfigSetRef`)

**Description** `setActiveConfigSet` specifies the active configuration set or configuration reference (configuration object) of `model` to be the configuration object specified by `configObjName`. If no such configuration object is attached to the model, an error occurs. The previously active configuration object becomes inactive.

**Examples** The following example makes `DevConfig` the active configuration object of the current model. The code is the same whether `DevConfig` is a configuration set or configuration reference.

```
setActiveConfigSet(gcs, 'DevConfig');
```

**See Also** `attachConfigSet` | `attachConfigSetCopy` | `closeDialog` | `detachConfigSet` | `getActiveConfigSet` | `getConfigSet` | `getConfigSets` | `openDialog`

**How To**

- “Manage a Configuration Set”
- “Manage a Configuration Reference”

# setdiff

---

<b>Purpose</b>	Returns difference between two vectors of <code>Simulink.VariableUsage</code> objects
<b>Syntax</b>	<pre><i>VarsOut</i> = setdiff (<i>VarsIn1</i>, <i>VarsIn2</i>) <i>VarsOut</i> = <i>VarsIn1</i>.setdiff (<i>VarsIn2</i>)</pre>
<b>Description</b>	<p><code>VarsOut = setdiff (VarsIn1, VarsIn2)</code> inputs two vectors of <code>Simulink.VariableUsage</code> objects and returns a vector containing a <code>Simulink.VariableUsage</code> object for each workspace variable that is represented in the first vector but not the second. The function compares input objects by comparing their <code>Name</code>, <code>Workspace</code>, and <code>WorkspaceType</code> values. If all three value are the same in both objects, the two objects match. Any returned object is a new object having the same field values as the source input object.</p> <p><code>VarsOut = VarsIn1.setdiff (VarsIn2)</code> is the equivalent method syntax (<code>Simulink.VariableUsage.setdiff</code>) and gives identical results</p>
<b>Input Arguments</b>	<p><b>VarsIn1</b></p> <p>A vector of <code>Simulink.VariableUsage</code> objects</p> <p><b>VarsIn2</b></p> <p>Another vector of <code>Simulink.VariableUsage</code> objects</p>
<b>Output Arguments</b>	<p><b>VarsOut</b></p> <p>A vector of <code>Simulink.VariableUsage</code> objects containing a copy of any object in <code>VarsIn1</code> that does not match any object in <code>VarsIn2</code>. Two objects match if their <code>Name</code>, <code>Workspace</code>, and <code>WorkspaceType</code> values are the same.</p>
<b>Examples</b>	<p>Given two models, discover which variables are needed by the first model but not the second model:</p> <pre>model1Vars = Simulink.findVars('model1'); model2Vars = Simulink.findVars('model2');</pre>

```
commonVars = setdiff(model1Vars, model2Vars);
```

Locate all variables in the base workspace that are not being used by any recently-compiled open model:

```
models = find_system('type', 'block_diagram', 'LibraryType', 'None');  
base_vars = Simulink.VariableUsage(who);  
used_vars = Simulink.findVars(models, 'WorkspaceType', 'base');  
unusedVars = setdiff(base_vars, used_vars);
```

**See Also**

[Simulink.findVars](#) | [Simulink.VariableUsage](#) | [intersect](#)

# sfix

---

**Purpose** Create `Simulink.NumericType` object describing signed fixed-point data type

**Syntax** `a = sfix(WordLength)`

**Description** `sfix(WordLength)` returns a `Simulink.NumericType` object that describes a signed fixed-point number with the specified word length and unspecified scaling.

---

**Note** `sfix` is a legacy function. In new code, use `fixdt` instead. In existing code, replace `sfix(WordLength)` with `fixdt(1,WordLength)`.

---

**Examples** Define a 16-bit signed fixed-point data type.

```
a = sfix(16)
```

```
a =
```

```
NumericType with properties:
```

```
    DataTypeMode: 'Fixed-point: unspecified scaling'  
    Signedness: 'Signed'  
    WordLength: 16  
        IsAlias: 0  
    DataScope: 'Auto'  
    HeaderFile: ''  
    Description: ''
```

**See Also** `fixdt` | `Simulink.NumericType` | `float` | `sfrac` | `sint` | `ufix` | `ufrac` | `uint`

**Purpose** Create Simulink.NumericType object describing signed fractional data type


**Syntax**

```
a = sfrac(WordLength)
a = sfrac(WordLength, GuardBits)
```

**Description** `sfrac(WordLength)` returns a Simulink.NumericType object that describes the data type of a signed fractional data type with a word size given by `WordLength`.

`sfrac(WordLength, GuardBits)` returns a Simulink.NumericType object that describes the data type of a signed fractional number. The total word size is given by `WordLength` with `GuardBits` bits located to the left of the binary point.

The most significant (leftmost) bit is the sign bit. The default binary point for this data type is assumed to lie immediately to the right of the sign bit. If guard bits are specified, they lie to the left of the binary point and to right of the sign bit. For example, the structure for an 8-bit signed fractional data type with 4 guard bits is:

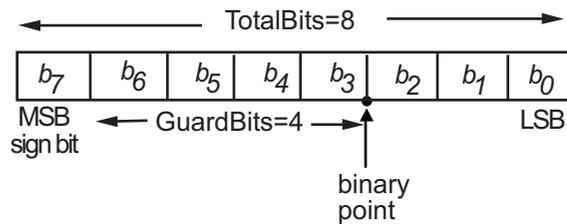


---

**Note** `sfrac` is a legacy function. In new code, use `fixdt` instead. In existing code, replace `sfrac(WordLength,GuardBits)` with `fixdt(1,WordLength,(WordLength-1-GuardBits))` and `sfrac(WordLength)` with `fixdt(1,WordLength,(WordLength-1))`.

---

## Examples

Define an 8-bit signed fractional data type with 4 guard bits. Note that the range of this data type is  $-2^4 = -16$  to  $(1 - 2^{(1-8)}) \cdot 2^4 = 15.875$ .

```
a = sfrac(8,4)
```

```
a =
```

```
NumericType with properties:
```

```
    DataTypeMode: 'Fixed-point: binary point scaling'  
    Signedness: 'Signed'  
    WordLength: 8  
    FractionLength: 3  
    IsAlias: 0  
    DataScope: 'Auto'  
    HeaderFile: ''  
    Description: ''
```

## See Also

```
fixdt | Simulink.NumericType | float | sfix | sint | ufix | ufrac  
| uint
```

## Purpose

Create and access Signal Builder blocks

## Syntax

```
[time, data] = signalbuilder(block)
[time, data, signames] = signalbuilder(block)
[time, data, signames, groupnames] = signalbuilder(block)
block = signalbuilder([], 'create', time, data,
signames, groupnames)
block = signalbuilder(path, 'create', time, data, signames,
groupnames)
block = signalbuilder(path, 'create', time, data, signames,
groupnames, vis)
block = signalbuilder(path, 'create', time, data, signames,
groupnames, vis, pos)
block = signalbuilder(block, 'append', time,
data, signames,
groupnames)
block = signalbuilder(block, 'appendgroup',
time, data, signames,
groupnames)
signalbuilder(block, 'appendsignal', time, data, signames)
signalbuilder(block, 'showsignal', signal, group)
signalbuilder(block, 'hidesignal', signal, group)
[time, data] = signalbuilder(block, 'get', signal, group)
signalbuilder(block, 'set', signal, group, time, data)
index = signalbuilder(block, 'activegroup')
[index, activeGroupLabel]= signalbuilder(block,
'activegroup')
signalbuilder(block, 'activegroup', index)
signalbuilder(block, 'annotategroup', onoff)
signalbuilder(block, 'print', [])
signalbuilder(block, 'print', config, printArgs)
figh = signalbuilder(block, 'print', config, 'figure')
```

## Description

Use the signalbuilder command to interact programmatically with Signal Builder blocks.

- “Creating and Accessing Signal Builder Blocks” on page 2-394

- “Adding New Groups” on page 2-396
- “Working with Signals” on page 2-397
- “Using Get/Set Methods for Specific Signals and Groups” on page 2-398
- “Querying, Labelling, and Setting the Active Group” on page 2-399
- “Enabling Current Group Display” on page 2-399
- “Printing Signal Groups” on page 2-399
- “Interpolating Missing Data Values” on page 2-401

---

**Note** When you use the `signalbuilder` command to interact with a Signal Builder block, the **Undo last edit** and **Redo last edit** buttons on the block dialog box are grayed out. You cannot undo the results of using the `signalbuilder` command.

---

## Creating and Accessing Signal Builder Blocks

`[time, data] = signalbuilder(block)` returns the time (*x*-coordinate) and amplitude (*y*-coordinate) data of the Signal Builder block, *block*.

The output arguments, `time` and `data`, take different formats depending on the block configuration:

Configuration	Time/Data Format
1 signal, 1 group	Row vector of break points.
>1 signal, 1 group	Column cell vector where each element corresponds to a separate signal and contains a row vector of points.

Configuration	Time/Data Format
1 signal, >1 group	Row cell vector where each element corresponds to a separate group and contains a row vector of points.
>1 signal, >1 group	Cell matrix where each element (i, j) corresponds to signal i and group j.

`[time, data, signames] = signalbuilder(block)` returns the signal names, `signames`, in a string or a cell array of strings.

`[time, data, signames, groupnames] = signalbuilder(block)` returns the group names, `groupnames`, in a string or a cell array of strings.

`block = signalbuilder([], 'create', time, data, signames, groupnames)` creates a Signal Builder block in a new Simulink model using the specified values. The preceding table describes the allowable formats of `time` and `data`. If `data` is a cell array and `time` is a vector, the `time` values are duplicated for each element of `data`. Each vector in `time` and `data` must be the same length and have at least two elements. If `time` is a cell array, all elements in a column must have the same initial and final value. Signal names, `signames`, and group names, `groupnames`, can be omitted to use default values. The function returns the path to the new block, `block`. Always provide `time` and `data` when using the `create` command. These two parameters are always required.

`block = signalbuilder(path, 'create', time, data, signames, groupnames)` creates a new Signal Builder block at `path` using the specified values. If `path` is empty, the function creates a block in a new model, which has a default name. If `data` is a cell array and `time` is a vector, the `time` values are duplicated for each element of `data`. Each vector within `time` and `data` must be the same length and have at least two elements. If `time` is a cell array, all elements in a column must have the same initial and final value. Signal names, `signames`, and group names, `groupnames`, can be omitted to use default values. The function returns the path to the new block, `block`. Always provide `time`

and *data* when using the `create` command. These two parameters are always required.

`block = signalbuilder(path, 'create', time, data, signames, groupnames, vis)` creates a new Signal Builder block and sets the visible signals in each group based on the values of the matrix *vis*. This matrix must be the same size as the cell array, *data*. Always provide *time* and *data* when using the `create` command. These two parameters are always required. You cannot create Signal Builder blocks in which all signals are invisible. For example, if you set the *vis* parameter for all signals to 0, the first signal is still visible.

`block = signalbuilder(path, 'create', time, data, signames, groupnames, vis, pos)` creates a new Signal Builder block and sets the block position to *pos*. Always provide *time* and *data* when using the `create` command. These two parameters are always required. You cannot create Signal Builder blocks in which all signals are invisible. For example, if you set the *vis* parameter for all signals to 0, the first signal is still visible.

If you create signals that are smaller than the display range or do not start from 0, the Signal Builder block extrapolates the undefined signal data. It does so by holding the final value.

## Adding New Groups

`block = signalbuilder(block, 'append', time, data, signames, groupnames)` or `block = signalbuilder(block, 'appendgroup', time, data, signames, groupnames)` appends new groups to the Signal Builder block, *block*. The *time* and *data* arguments must have the same number of signals as the existing block.

---

## Note

- If you specify a value of ' ' or {} for *signames*, the function uses existing signal names for the new groups.
  - If you do not specify a value for *groupnames*, the function creates the new signal groups with the default group name pattern, GROUP #*n*.
- 

## Working with Signals

`signalbuilder(block, 'appendsignal', time, data, signames)` appends new signals to all signal groups in the Signal Builder block, *block*. You can append either the same signals to all groups, or append different signals to different groups. Regardless of which signals you append, append the same number of signals to all the groups. Append signals to all the groups in the block; you cannot append signals to a subset of the groups. Correspondingly, provide *time* and *data* arguments for either one group (append the same information to all groups) or different *time* and *data* arguments for different groups. To use default signal names, omit the signal names argument, *signames*.

`signalbuilder(block, 'showsignal', signal, group)` makes *signals* that are hidden from the Signal Builder block visible. By default, signals in the current active group are visible when created. You control the visibility of a signal at creation with the *vis* parameter. *signal* can be a unique signal name, a signal scalar index, or an array of signal indices. *group* is the list of one or more signal groups that contains the affected signals. *group* can be a unique group name, a scalar index, or an array of indices.

`signalbuilder(block, 'hidesignal', signal, group)` makes signals, *signal*, hidden from the Signal Builder block. By default, all signals are visible when created. *signal* can be a unique signal name, a signal scalar index, or an array of signal indices. *group* is the list of one or more signal groups that contains the affected signals. *group* can be a unique group name, a scalar index, or an array of indices.

---

**Note** For the `showsignal` and `hidesignal` methods, if you do not specify a value for the `group` argument, `signalbuilder` applies the operation to all the signals and groups.

---

## Using Get/Set Methods for Specific Signals and Groups

`[time, data] = signalbuilder(block, 'get', signal, group)` gets the time and data values for the specified signal(s) and group(s). The `signal` argument can be the name of a signal, a scalar index of a signal, or an array of signal indices. The `group` argument can be a group name, a scalar index, or an array of indices.

`signalbuilder(block, 'set', signal, group, time, data)` sets the time and data values for the specified signal(s) and group(s). Use empty values of `time` and `data` to remove groups and signals. To remove a signal group, you must also remove all the signals in that group in the same command.

---

**Note** For the `set` method, if you do not specify a value for the `group` argument, `signalbuilder` applies the operation to all signals and groups.

---

When removing signals, you remove all signals from all groups. You cannot select a subset of groups from which to remove signals, unless you are also going to also remove that group.

---

**Note** The `signalbuilder` function does not allow you to alter and delete data in the same invocation. It also does not allow you to delete all the signals and groups from the application.

---

If you set signals that are smaller than the display range or do not start from 0, the Signal Builder block extrapolates the undefined signal data by holding the final value.

## Querying, Labelling, and Setting the Active Group

`index = signalbuilder(block, 'activegroup')` gets the index of the active group.

`[index, activeGroupLabel]= signalbuilder(block, 'activegroup')` gets the label value of the active group.

`signalbuilder(block, 'activegroup', index)` sets the active group index to *index*.

## Enabling Current Group Display

`signalbuilder(block, 'annotategroup', onoff)` controls the display of the current group name on the mask of the Signal Builder block.

<b><i>onoff</i> Value</b>	<b>Description</b>
'on'	Default. Displays the current group name on the block mask.
'off'	Does not display the current group name on the block mask.

## Printing Signal Groups

`signalbuilder(block, 'print', [])` prints the currently active signal group.

`signalbuilder(block, 'print', config, printArgs)` prints the currently active signal group or the signal group that *config* specifies. The argument *config* is a structure that allows you to customize the printed appearance of a signal group. The *config* structure may contain any of the following fields:

Field	Description	Example Value
groupIndex	Scalar specifying index of signal group to print	2
timeRange	Two-element vector specifying the time range to print (must not exceed the block's time range)	[3 6]
visibleSignals	Vector specifying index of signals to print	[1 2]
yLimits	Cell array specifying limits for each signal's <i>y</i> -axis	{[-1 1], [0 1]}
extent	Two-element vector of the form:  [width, height]  specifying the dimensions (in pixels) of the area in which to print the signals	[500 300]
showTitle	Logical value specifying whether to print a title; true (1) prints the title	false

Set up the structure with one or more of these fields before you print. For example, if you want to print just group 2 using a configuration structure, `configstruct`, set up the structure as follows. You do not need to specify any other fields.

```
configstruct.groupIndex=2
```

The optional argument `printArgs` allows you to configure print options (see `print` in the MATLAB Function Reference).

```
figh = signalbuilder(block, 'print', config, 'figure')
```

prints the currently active signal group or the signal group that `config` specifies to a new hidden figure handle, `figh`.

## Interpolating Missing Data Values

When specifying a periodic signal such as a Sine Wave, the `signalbuilder` function uses linear Lagrangian interpolation to compute data values for time steps that occur between time steps for which the `signalbuilder` function supplies data. When specifying periodic signals, specify them as a time vector that is defined as multiples of sample time, for example:

```
t = 0.2*[0:50]';
```

## Examples

### Example 1

Create a Signal Builder block in a new model editor window:

```
block = signalbuilder([], 'create', [0 5], {[2 2];[0 2]});
```

Get signal builder data from this block.

```
[time, data, signames, groupnames] = signalbuilder('untitled/Signal Builder')
```

```
time =
```

```
    [1x2 double]
    [1x2 double]
```

```
data =
```

```
    [1x2 double]
    [1x2 double]
```

```
signames =
```

```
    'Signal 1'    'Signal 2'
```

```
groupnames =
```

```
    'Group 1'
```

The Signal Builder block contains two signals in one group. Alter the second signal in the group:

```
signalbuilder(block, 'set', 2, 1, [0 5], [2 0])
```

To make this same change using the signal name and group name:

```
signalbuilder(block, 'set', 'Signal 2', 'Group 1', [0 5], [2 0])
```

Delete the first signal from the group:

```
signalbuilder(block, 'set', 1, 1, [], [])
```

Append the group with a new signal:

```
signalbuilder(block, 'append', [0 2.5 5], [0 2 0], 'Signal 2', 'Group 2');
```

Append another group with a new signal using `appendgroup`:

```
signalbuilder(block, 'appendgroup', [0 2.5 5], [0 2 0], 'Signal 2', 'Group 3');
```

## Example 2

Create a Signal Builder block in a new model editor window:

```
block = signalbuilder([], 'create', [0 2], {[0 1],[1 0]});
```

The Signal Builder block has two groups, each of which contains a signal. To delete the second group, also delete its signal:

```
signalbuilder(block, 'set', 1, 2, [], [])
```

## Example 3

Create a Signal Builder block in a new model editor window:

```
block = signalbuilder([], 'create', [0 1], ...  
    {[0 0],[1 1];[1 0],[0 1];[1 1],[0 0]});
```

The Signal Builder block has two groups, each of which contains three signals.

## Example 4

Create a Signal Builder block in a new model editor window:

```
block = signalbuilder([], 'create', {[0 10],[0 20]},{[6 -6],...
[2 5]});
```

The Signal Builder block has two groups. Each group contains one signal.

Append a new signal group to the existing block.

```
block = signalbuilder(block, 'append', [0 30],[10 -10]);
```

Append a new signal, sig3, to all groups.

```
signalbuilder(block, 'appendsignal', [0 30],[0 10], 'sig3');
```

## Example 5

Create a Signal Builder block in a new model editor window:

```
time = [0 1];
data = {[0 0],[1 1];[1 0],[0 1];[1 1],[0 0]};
block = signalbuilder([], 'create', time, data);
```

The Signal Builder block has two groups. Each group contains three signals.

Delete the second group. To delete a signal group, also delete all the signals in the group.

```
signalbuilder(block, 'set', [1,2,3], 'Group 2', []);
```

## Example 6

Create a Signal Builder block in a new model editor window:

```
block = signalbuilder([], 'create', [0 5], {[2 2];[0 2]});
```

The Signal Builder block has one group that contains two signals.

Hide the signal, Signal 1.

```
signalbuilder(block,'hidesignal','Signal 1', 'Group 1')
```

Signal 1 is no longer visible in the Signal Builder block.

Make Signal 1 visible again.

```
signalbuilder(block,'showsignal','Signal 1', 'Group 1')
```

## **Example 7**

Create a Signal Builder block in a new model editor window:

```
block = signalbuilder([], 'create', [0 5], {[2 2] [0 2]});
```

The Signal Builder block has two groups, each with one signal.

Create a structure, `configstruct`, to customize the Signal Builder block that you want to print.

```
configstruct.groupIndex = 2;  
configstruct.timeRange = [0 2];  
configstruct.visibleSignals = 1;  
configstruct.yLimits = {[0 1]};  
configstruct.extent = [500 300];  
configstruct.showTitle = true;
```

This sequence fills all the fields of the `configstruct` structure.

Print a view of the Signal Builder block to the default printer. The `configstruct` structure defines the view to print.

```
signalbuilder(block,'print',configstruct)
```

Print with print options, for example `-dps`.

```
signalbuilder(block,'print',configstruct,'-dps')
```

Print a view of the Signal Builder block as defined by the `configstruct` structure to a new hidden figure handle, `figH`.

```
figH = signalbuilder(block,'print',configstruct,'figure')  
figure(figH)
```

**Purpose**

Simulate dynamic system

**Syntax**

```
simOut = sim('model',  
            'ParameterName1',Value1,'ParameterName2',  
            Value2...);  
simOut = sim('model', ParameterStruct);  
simOut = sim('model', ConfigSet);
```

**Description**

`simOut = sim('model', 'ParameterName1',Value1,'ParameterName2', Value2...);` causes Simulink software to simulate the block diagram, `model`, using parameter name-value pairs `ParameterName1`, `Value1` and `ParameterName2`, `Value2`.

`simOut = sim('model', ParameterStruct);` causes Simulink software to simulate the block diagram, `model`, using the parameter values specified in the structure `ParameterStruct`.

`simOut = sim('model', ConfigSet);` causes Simulink software to simulate the block diagram, `model`, using the configuration settings specified in the model configuration set, `ConfigSet`.

**Input Arguments****model**

Name of model to simulate.

**ParameterName**

Name of a simulation parameter. Get a list of simulation parameters for the model `vdp` by enter the following in the MATLAB Command Window:

```
configSet = getActiveConfigSet('vdp')  
configSetNames = get_param(configSet, 'ObjectParameters')
```

This command lists several object parameters, including simulation parameters such as ``StopTime'`, ``SaveTime'`, ``SaveState'`, ``SaveOutput'`, and ``SignalLogging'`.

In addition, the `sim` command accepts the following parameters:

Parameter	Description
<code>ConcurrencyResolvingTo-FileSuffix</code>	<p>(Rapid Accelerator mode only) Appends this suffix string to the filename of a model (before the file extension) if:</p> <ul style="list-style-type: none"> <li>• The model contains a To File block</li> <li>• You call the <code>sim</code> command from <code>parfor</code>.</li> </ul>
<code>Debug 'on'   {'off'}   <i>cmds</i></code>	<p>Starts the simulation in debug mode (see “Debugger Graphical User Interface” for more information). The value of this option can be a cell array of commands to be sent to the debugger after it starts.</p> <p>Default is 'off'.</p>
<code>RapidAccelerator-ParameterSets</code>	<p>(Rapid Accelerator mode only) Returns structure that contains run-time parameters for running Rapid Accelerator simulations in <code>parfor</code>. See “sim in <code>parfor</code> with Rapid Accelerator Mode”.</p>
<code>RapidAcceleratorUpToDateCheck {'on'}   'off'</code>	<p>(Rapid Accelerator mode only) Enables/disables up-to-date check. If you set this value to 'off', the software does not perform an up-to-date check. If you call the <code>sim</code> command from <code>parfor</code>, set this value to 'off'.</p> <p>Default is 'on'.</p>
<code>SrcWorkspace {base}   current   parent</code>	<p>Specifies the workspace in which to evaluate MATLAB expressions defined in the model. Setting <code>SrcWorkspace</code> has no effect on a referenced model that executes in Accelerator mode.</p> <p>Default is the base workspace.</p>

Parameter	Description
TimeOut <i>timeout</i>	Specify the time, in seconds, to allow the simulation to run. If you run your model for a period longer than the value of TimeOut, the software issues a warning and stops the simulation.
Trace 'minstep', 'siminfo', 'compile' {' '}	<p>Enables simulation tracing facilities (specify one or more as a comma-separated list):</p> <ul style="list-style-type: none"> <li>• 'minstep' specifies that simulation stops when the solution changes so abruptly that the variable-step solvers cannot take a step and satisfy the error tolerances.</li> <li>• 'siminfo' provides a short summary of the simulation parameters in effect at the start of simulation.</li> <li>• 'compile' displays the compilation phases of a block diagram model.</li> </ul> <p>By default, Simulink software issues a warning message and continues the simulation.</p>

**Value**

Value of the simulation parameter. Get the value of the simulation parameter StopTime by entering:

```
configSetParamValue = get_param(configSet, 'StopTime')
```

**ParameterStruct**

A structure containing parameter settings

**ConfigSet**

A configuration set

## Output Arguments

### **simOut**

Simulink.SimulationOutput object containing the simulation outputs—logged time, states, and signals

## Definitions

For all three formats of the `sim` command, the input(s) are parameter specifications that override those defined on the Configuration Parameters dialog box. The software restores the original configuration values at the end of simulation.

In the case of a model with a Model block, the parameter specifications are applied to the top model.

For additional details about the `sim` command, see “Run Simulation Using the `sim` Command”.

## Examples

Simulate the model, `vdp`, in Rapid Accelerator mode for an absolute tolerance of  $1e-5$  and save the states in `xoutNew` and the output in `youtNew`.

### **Simulate Model with `sim` Command Line Options**

Specify parameter name value-pairs to the `sim` command:

```
simOut = sim('vdp','SimulationMode','rapid','AbsTol','1e-5',...
            'StopTime','30', ...
            'ZeroCross','on', ...
            'SaveTime','on','TimeSaveName','tout', ...
            'SaveState','on','StateSaveName','xoutNew',...
            'SaveOutput','on','OutputSaveName','youtNew',...
            'SignalLogging','on','SignalLoggingName','logout')
```

```
Simulink.SimulationOutput:
    tout: [95x1 double]
    xoutNew: [95x2 double]
    youtNew: [95x2 double]
```

## Simulate Model with sim Command Line Options in Structure

Specify parameter name-value pairs structure `paramNameValStruct` for the `sim` command:

```
paramNameValStruct.SimulationMode = 'rapid';
paramNameValStruct.AbsTol         = '1e-5';
paramNameValStruct.SaveState      = 'on';
paramNameValStruct.StateSaveName  = 'xoutNew';
paramNameValStruct.SaveOutput     = 'on';
paramNameValStruct.OutputSaveName = 'youtNew';
simOut = sim('vdp',paramNameValStruct)
```

```
Simulink.SimulationOutput:
  xoutNew: [65x2 double]
  youtNew: [65x2 double]
```

## Simulate Model with sim Command Line Options in Configuration Set

Specify parameter name-value pairs in configuration set `mdl_cs` for the `sim` command:

```
mdl = 'vdp';
load_system(mdl)
simMode = get_param(mdl, 'SimulationMode');
set_param(mdl, 'SimulationMode', 'rapid')
cs = getActiveConfigSet(mdl);
mdl_cs = cs.copy;
set_param(mdl_cs, 'AbsTol', '1e-5', ...
           'SaveState', 'on', 'StateSaveName', 'xoutNew', ...
           'SaveOutput', 'on', 'OutputSaveName', 'youtNew')
simOut = sim(mdl, mdl_cs);
set_param(mdl, 'SimulationMode', simMode)
```

### See Also

[parfor](#) | [Rapid Accelerator Simulations Using PARFOR](#) | [“sim in parfor with Rapid Accelerator Mode”](#) | [sldebug](#) | [“Backwards Compatible Syntax”](#) | [“Configuration Parameters Dialog Box Overview”](#)

# simplot

---

<b>Purpose</b>	Redirects to the Simulation Data Inspector
<b>Compatibility</b>	<code>simplot</code> will be removed in a future release. Use the Simulation Data Inspector instead.
<b>Syntax</b>	<code>simplot</code>
<b>Description</b>	<code>simplot</code> redirects to the Simulation Data Inspector and returns empty handles. This function is no longer supported and has been replaced by the Simulation Data Inspector. Use the record button in Simulink to capture simulation output in the Simulation Data Inspector. Programmatically, use the function <code>Simulink.sdi.view</code> instead.
<b>See Also</b>	“Validate System Behavior”   <code>plot</code>

**Purpose** Open Simulink block library

**Syntax** `simulink`  
`simulink('open')`  
`simulink('close')`

**Description** `simulink` or `simulink('open')` opens the Simulink Library Browser.  
`simulink('close')` closes the Library Browser.

# simulinkproject

---

**Purpose** Open Simulink Project and get project object

**Syntax** `simulinkproject`  
`simulinkproject(projectPath)`

```
proj = simulinkproject  
proj = simulinkproject(projectPath)
```

**Description** `simulinkproject` opens the Simulink Project Tool or brings focus to the tool if it is already open. After you open the tool, you can create new projects or access recent projects using the **Simulink Project** tab.

`simulinkproject(projectPath)` opens the Simulink project specified by the `.prj` file or folder in `projectPath`.

`proj = simulinkproject` returns a project object `proj` you can use to manipulate the project at the command line. You need to get a project object before you can use any of the other project functions.

`proj = simulinkproject(projectPath)` opens the Simulink project specified by `projectPath` and returns a project object.

## Input Arguments

**projectPath - Full path to project file or folder**

string

Full path to project `.prj` file, or the path to the project root folder, specified as a string.

**Example:** `'C:/projects/project1/myProject.prj'`

**Example:** `'C:/projects/project1/'`

## Output Arguments

**proj - Project**

project object

Project, returned as a project object. Use the project object to manipulate the currently open Simulink project at the command line.

Properties of `proj` output argument.

Project Property	Description	Value
Name	Project name	String
Categories	Categories of project labels	Cell array of strings
Files	Paths and names of project files	Cell array of strings
RootFolder	Full path to project root folder	String
Shortcuts	Shortcut files in project	Cell array of strings

## Examples

### Open Simulink Project Tool

Open the Simulink Project Tool.

```
simulinkproject
```

### Open a Simulink Project

Specify either the `.prj` file path or the folder that contains your `.SimulinkProject` folder and `.prj` file. For example:

```
simulinkproject('C:/projects/project1/')
```

### Open a Simulink Project and Get a Project Object

Open a specified project and get a project object to manipulate the project at the command line. For example,

```
proj = simulinkproject('C:/projects/project1/myproject.prj')
```

### Get Airframe Example Project

Open the Airframe project and create a project object to manipulate and explore the project at the command line.

```
sldemo_slproject_airframe
proj = simulinkproject

proj =

  ProjectManager with properties:

      Name: 'Simulink Project Airframe Example'
  Categories: [1x2 slproject.Category]
  Shortcuts: [1x6 slproject.Shortcut]
      Files: [1x24 slproject.ProjectFile]
  RootFolder: 'C:\Temp\20121107T135235\airframe'
```

## Find Project Commands

Find out what you can do with your project.

```
methods(proj)
```

Methods for class slproject.ProjectManager:

```
addFile
export
isLoading
removeFile
close
findCategory
reload
removeLabel
createCategory
findFile
removeCategory
```

## Examine Project Properties Programmatically

After you get a project object using the `simulinkproject` function, you can examine project properties.

Examine the project files.

```
files = proj.Files

files =

    1x24 ProjectFile array with properties:

        Path
        Labels
```

Use indexing to access files in this list. The following command gets file number 8. Each file has two properties describing its path and attached labels.

```
proj.Files(8)

ans =

    ProjectFile with properties:

        Path: 'C:\Temp\project1\airframe\models\AnalogControl.mdl'
        Labels: [1x1 slproject.Label]
```

Examine the labels of the eighth file.

```
proj.Files(8).Labels

ans =

    Label with properties:

        File: 'C:\Temp\project1\airframe\models\AnalogControl.mdl'
        Data: []
        DataType: 'none'
        Name: 'Design'
        CategoryName: 'Classification'
```

Get a particular file by name.

# simulinkproject

---

```
myfile = findFile(proj, 'models/AnalogControl.mdl')  
  
myfile =  
  
    ProjectFile with properties:  
  
        Path: 'C:\Temp\project1\airframe\models\AnalogControl.mdl'  
        Labels: [1x1 slproject.Label]
```

Find out what you can do with the file.

```
methods(myfile)
```

Methods for class `slproject.ProjectFile`:

```
addLabel  
removeLabel  
findLabel
```

## Tips

Alternatively, you can use `slproject.loadProject` to load a project, and `slproject.getCurrentProject` to get a project object. Use `simulinkproject` to open projects and explore projects interactively. Use `slproject.getCurrentProject` and `slproject.loadProject` for project automation scripts.

## See Also

## Functions

```
slproject.getCurrentProjects  
slproject.loadProject  
addFile  
removeFile  
findFile
```

## Related Examples

- “Create a New Project to Manage Existing Files”
- “Open Recent Projects”
- “Retrieve a Working Copy of a Project from Source Control”
- “Automate Project Management Tasks”

## Concepts

- “What Are Simulink Projects?”

<b>Purpose</b>	Add tasks or triggers to selected architecture of model
<b>Syntax</b>	<code>Simulink.architecture.add(Type,Object)</code>
<b>Description</b>	<code>Simulink.architecture.add(Type,Object)</code> adds the new task or trigger <code>Object</code> of the specified <code>Type</code> to a model.
<b>Input Arguments</b>	<p><b>Type - Object type</b> 'PeriodicTrigger'   'AperiodicTrigger'   'AperiodicTrigger'</p> <p>Object type that identifies the kind of trigger or task to add, , specified as a 'PeriodicTrigger', 'AperiodicTrigger', or 'Task'.</p> <ul style="list-style-type: none"><li>• 'PeriodicTrigger' Adds a periodic trigger to the architecture. Set the properties of the trigger with the <code>Simulink.architecture.set_param</code> function.</li><li>• 'AperiodicTrigger' Adds an aperiodic trigger to the architecture. Set the properties of the trigger with the <code>Simulink.architecture.set_param</code> function.</li><li>• 'Task' Adds a task to the architecture. Set the properties of the task with the <code>Simulink.architecture.set_param</code> function.</li></ul> <p><b>Object - Trigger or task object identifier</b> string</p> <p>Trigger or task object identifier to add to architecture, specified as a string.</p> <p><b>Example:</b> 'sldemo_concurrent_execution/CPU/MyTrigger1'</p> <p><b>Data Types</b> char</p>

# Simulink.architecture.add

---

## Examples

### Add periodic trigger

Add a periodic trigger, MyTrigger1, to the software node CPU of the selected architecture of the `sldemo_concurrent_execution` model.

```
sldemo_concurrent_execution;  
Simulink.architecture.add('PeriodicTrigger','sldemo_concurrent_execution/CPU/MyTrigger1');
```

## See Also

Simulink.architecture.set\_param |  
Simulink.architecture.get\_param  
| Simulink.architecture.delete |  
Simulink.architecture.find\_system |  
Simulink.architecture.importAndSelect  
| Simulink.architecture.profile |  
Simulink.architecture.register

<b>Purpose</b>	Create or convert configuration for concurrent execution
<b>Syntax</b>	<pre>Simulink.architecture.config(model, 'Convert') Simulink.architecture.config(model, 'Add') Simulink.architecture.config(model, 'OpenDialog')</pre>
<b>Description</b>	<p><code>Simulink.architecture.config(model, 'Convert')</code> converts the active configuration set in the specified model to one for concurrent execution.</p> <p><code>Simulink.architecture.config(model, 'Add')</code> adds and activates a new configuration set for concurrent execution.</p> <p><code>Simulink.architecture.config(model, 'OpenDialog')</code> opens the Concurrent Execution dialog box for a model configuration.</p>
<b>Input Arguments</b>	<p><b>model - Model name</b> string</p> <p>Model name whose configuration set you want to convert or add to, specified as a string.</p> <p><b>Example:</b></p> <p><b>Data Types</b> char</p>
<b>Examples</b>	<p><b>Convert existing configuration set</b></p> <p>Convert existing configuration set for concurrent execution in the model vdp.</p> <pre>vdp; Simulink.architecture.config('vdp', 'Convert');</pre> <p><b>Add new configuration set</b></p> <p>Add a new configuration set (copied from the existing configuration set) for concurrent execution in the model vdp.</p> <pre>vdp;</pre>

# Simulink.architecture.config

---

```
Simulink.architecture.config('vdp', 'Add');
```

## **Open Concurrent Execution dialog box**

Open the Concurrent Execution dialog box in the model  
sldemo\_concurrent\_execution.

```
sldemo_concurrent_execution;  
Simulink.architecture.config('sldemo_concurrent_execution', 'OpenDialog');
```

## **See Also**

[Simulink.architecture.add](#) | [Simulink.architecture.set\\_param](#) |  
[Simulink.architecture.profile](#)

**Purpose** Delete triggers and tasks from selected architecture of model

**Syntax** `Simulink.architecture.delete(Object)`

**Description** `Simulink.architecture.delete(Object)` deletes the specified object trigger or task.

**Input Arguments** **Object - Object to delete, specified as a string. Objects you can delete**  
string

Object to be deleted. Possible objects are:

- Periodic trigger

---

**Note** You cannot delete the last periodic trigger. The software node must contain at least one periodic trigger.

---

- Aperiodic trigger
- Task

**Example:** `[bdroot '/CPU/Periodic/ControllerB']`

**Data Types**  
char

**Examples** **Delete task Plant**

Delete the task Plant from the Periodic trigger of the CPU software node of the selected architecture of the model `sldemo_concurrent_execution`.

```
sldemo_concurrent_execution
Simulink.architecture.delete('sldemo_concurrent_execution/CPU/Periodic
```

# Simulink.architecture.delete

---

## See Also

`Simulink.architecture.get_param` | `Simulink.architecture.add`  
| `Simulink.architecture.find_system` |  
`Simulink.architecture.importAndSelect`  
| `Simulink.architecture.profile` |  
`Simulink.architecture.register`

## Purpose

Find objects under architecture object

## Syntax

```
object = Simulink.architecture.find_system(RootObject)
```

```
object =  
Simulink.architecture.find_system(RootObject,ParamName,  
    ParamValue)
```

## Description

`object = Simulink.architecture.find_system(RootObject)` looks for all objects under `RootObject`.

`object = Simulink.architecture.find_system(RootObject,ParamName,ParamValue)` returns the object in `RootObject` whose parameter `ParamName` has the value `ParamValue`. Parameter name and value strings are case-sensitive.

## Input Arguments

### RootObject - Object to search

string

Object to search for parameter value, specified as a string giving the object full path name. Possible objects are:

- Model
- Software node
- Hardware node
- Periodic trigger
- Aperiodic trigger
- Task

**Example:** `'sldemo_concurrent_execution'`

### ParamName - Name of parameter to find

string | scalar | vector

# Simulink.architecture.find\_system

---

Name of the parameter to find, specified as a string. Possible string values are:

- 'Name'
- 'Type'
- 'ClockFrequency'
- 'Color'
- 'Period'
- 'EventHandlerType'
- 'SignalNumber'
- 'EventName'

**Example:** 'EventName'

## **ParamValue - Parameter value to find**

string | scalar | vector

Parameter value to find, specified as a string, a scalar, or a vector.

**Example:** 'ERTDefaultEvent'

## **Examples**

### **Look for all objects**

To find all the objects in `sldemo_concurrent_execution`:

```
sldemo_concurrent_execution
t = Simulink.architecture.find_system('sldemo_concurrent_execution')

t =

    'sldemo_concurrent_execution'
    'sldemo_concurrent_execution/CPU'
    'sldemo_concurrent_execution/CPU/Periodic'
    'sldemo_concurrent_execution/CPU/Periodic/ControllerA'
    'sldemo_concurrent_execution/CPU/Periodic/ControllerB'
    'sldemo_concurrent_execution/CPU/Periodic/Plant'
```

```
'sldemo_concurrent_execution/CPU/Interrupt'
```

## Look for all tasks

To find all the tasks in sldemo\_concurrent\_execution:

```
sldemo_concurrent_execution
```

```
t = Simulink.architecture.find_system('sldemo_concurrent_execution', 'T
```

```
t =
```

```
'sldemo_concurrent_execution/CPU/Periodic/ControllerA'
```

```
'sldemo_concurrent_execution/CPU/Periodic/ControllerB'
```

```
'sldemo_concurrent_execution/CPU/Periodic/Plant'
```

## See Also

```
Simulink.architecture.set_param |
```

```
Simulink.architecture.add | Simulink.architecture.delete
```

```
| Simulink.architecture.importAndSelect
```

```
| Simulink.architecture.profile |
```

```
Simulink.architecture.register
```

# Simulink.architecture.get\_param

---

**Purpose** Get configuration parameters of architecture objects

**Syntax** ParamValue =  
Simulink.architecture.get\_param(Object,ParamName)

**Description** ParamValue =  
Simulink.architecture.get\_param(Object,ParamName)  
returns the value of the specified parameter for the object,  
Object. ParamName is case-sensitive.

**Input Arguments** **Object - Object whose parameter value to return**  
string  
Object whose parameter value to return, specified as a string giving the  
object full path name. Possible objects are:

- Software node
- Hardware node
- Periodic trigger
- Aperiodic trigger
- Task

**ParamName - Parameter whose value to return**  
string  
Name of a parameter for which Simulink.architecture.get\_param  
returns a value.

The following are the possible ParamName strings:

For a model:

- 'ArchitectureName'
- 'Type'

For a software node:

- 'Name'

- 'Type'

For a hardware node

- 'Name'
- 'ClockFrequency'
- 'Color'
- 'Type'

For a periodic trigger:

- 'Name'
- 'Period'
- 'Color'
- 'Type'

For an aperiodic trigger:

- 'Name'
- 'Color'
- 'EventHandlerType'
- 'SignalNumber'
- 'EventName'
- 'Type'

For a task:

- 'Name'
- 'Period'
- 'Color'
- 'Type'

# Simulink.architecture.get\_param

---

## Examples

### Get period

Get the period of task Plant of trigger Periodic of software node CPU of the selected architecture for the model `sldemo_concurrent_execution`.

```
sldemo_concurrent_execution;  
p = Simulink.architecture.get_param('sldemo_concurrent_execution/CPU/Periodic/Plant','Period')
```

```
p =
```

```
0.1
```

## See Also

```
Simulink.architecture.set_param |  
Simulink.architecture.add | Simulink.architecture.delete  
| Simulink.architecture.find_system |  
Simulink.architecture.importAndSelect  
| Simulink.architecture.profile |  
Simulink.architecture.register
```

<b>Purpose</b>	Import and select target architecture for concurrent execution environment for model
<b>Syntax</b>	<pre>Simulink.architecture.importAndSelect(model,Architecture)  Simulink.architecture.importAndSelect(model,     CustomArchitectureDescriptionFile)</pre>
<b>Description</b>	<p><code>Simulink.architecture.importAndSelect(model,Architecture)</code> imports and selects the built-in target architecture for the concurrent execution environment for the model.</p> <p><code>Simulink.architecture.importAndSelect(model, CustomArchitectureDescriptionFile)</code> imports and selects the architecture from an XML-based architecture description file.</p> <p>Importing and selecting target architectures requires that the associated support packages or hardware is installed on your computer.</p>
<b>Input Arguments</b>	<p><b>model - Model</b> string Model to import architecture to, specified as a string.</p> <p><b>Data Types</b> char</p> <p><b>Architecture - Target architecture name</b> string Target architecture name to import into the concurrent execution environment for the model, specified as a string. Possible target names are:</p>

# Simulink.architecture.importAndSelect

Property	Description
'Multicore'	Single CPU with multiple cores
'Sample Architecture'	Example architecture consisting of single CPU with multiple cores and two FPGAs. You can use this architecture to model for concurrent execution.
'Simulink Real-Time'	Simulink Real-Time™ target
'Xilinx Zynq ZC702 evaluation kit'	Xilinx® Zynq® ZC702 evaluation kit target
'Xilinx Zynq ZC706 evaluation kit'	Xilinx Zynq ZC706 evaluation kit target
'Xilinx Zynq Zedboard'	Xilinx Zynq ZedBoard™ target

## Data Types

char

## CustomArchitectureDescriptionFile - Custom target architecture file XML file

Custom target architecture file name, in XML format, that describes a custom target for the concurrent execution environment for the model, specified as a string giving the XML file name.

**Example:** custom\_arch.xml

## Examples

### Import and select a different architecture

Import and select the sample architecture to the model  
sldemo\_concurrent\_execution.

```
sldemo_concurrent_execution
```

```
Simulink.architecture.importAndSelect('sldemo_concurrent_execution', 'Sample Architecture')
```

## Import and select a custom architecture

Import and select the custom architecture defined in the XML file `custom_arch.xml`. This example requires you to create a `custom_arch.xml` first.

```
sldemo_concurrent_execution  
Simulink.architecture.importAndSelect('sldemo_concurrent_execution', 'c
```

## See Also

```
Simulink.architecture.set_param |  
Simulink.architecture.add | Simulink.architecture.delete  
| Simulink.architecture.find_system  
| Simulink.architecture.profile |  
Simulink.architecture.register
```

## Concepts

- “Define a Custom Architecture File”

# Simulink.architecture.profile

---

**Purpose** Generate profile report for model configured for concurrent execution

**Syntax** `Simulink.architecture.profile(model)`  
`Simulink.architecture.profile(model,numSamples)`

**Description** `Simulink.architecture.profile(model)` generates a profile report for a model configured for concurrent execution. Subsequent calls to the command for the same model name overwrite the existing profile report.

`Simulink.architecture.profile(model,numSamples)` specifies the number of samples to generate a profile report.

## Input Arguments

### **model - Model to profile**

string

Model to profile, specified as a string. Specify a model that is configured for concurrent execution.

### **Data Types**

char

### **numSamples - Number of time steps**

100 (default) | real, positive integer

Number of time steps, specified as a real, positive integer. This value determines the number of steps to collect data for in the profiled model.

### **Data Types**

single | double | int8 | int16 | int32 | int64 | uint8 |  
uint16 | uint32 | uint64

## Examples

### **Generate profile report**

Generate profile report for the model `sldemo_concurrent_execution`.

```
Simulink.architecture.profile('sldemo_concurrent_execution');
```

The command creates the file `sldemo_concurrent_execution_ProfileReport.html` in the current folder and opens it.

## Generate profile report for 120 time steps

Generate profile report for the model `sldemo_concurrent_execution` with data for 120 time steps.

```
Simulink.architecture.profile('sldemo_concurrent_execution',120);
```

The command creates the file `sldemo_concurrent_execution_ProfileReport.html` in the current folder.

## See Also

```
Simulink.architecture.get_param |  
Simulink.architecture.set_param |  
Simulink.architecture.add | Simulink.architecture.delete  
| Simulink.architecture.find_system |  
Simulink.architecture.importAndSelect |  
Simulink.architecture.register
```

## Concepts

- “Profile and Evaluate”

# Simulink.architecture.register

---

<b>Purpose</b>	Add custom target architecture to concurrent execution target architecture selector
<b>Syntax</b>	<code>Simulink.architecture.register(CustomArchFile)</code>
<b>Description</b>	<code>Simulink.architecture.register(CustomArchFile)</code> adds an XML-format custom target architecture file <code>CustomArchFile</code> to the concurrent execution target architecture selector. To access this selector, click the <b>Select</b> button on the Concurrent Execution pane of the Concurrent Execution dialog box.
<b>Input Arguments</b>	<b>CustomArchFile - Custom target architecture file</b> XML file  Custom target architecture file that describes a custom target for concurrent execution, specified as an XML file.
<b>Examples</b>	<b>Add custom target architecture</b>  Add custom target architecture defined in the XML file <code>custom_arch.xml</code> to the concurrent execution target architecture selector. This example requires you to create a <code>custom_arch.xml</code> first.  <pre>sldemo_concurrent_execution; Simulink.architecture.register('custom_arch.xml')</pre>
<b>See Also</b>	<code>Simulink.architecture.set_param</code>   <code>Simulink.architecture.add</code>   <code>Simulink.architecture.delete</code>   <code>Simulink.architecture.find_system</code>   <code>Simulink.architecture.profile</code>   <code>Simulink.architecture.importAndSelect</code>

<b>Purpose</b>	Set architecture object properties
<b>Syntax</b>	<code>Simulink.architecture.set_param(Object,ParamName,ParamValue)</code>
<b>Description</b>	<code>Simulink.architecture.set_param(Object,ParamName,ParamValue)</code> sets the specified parameter of <code>Object</code> to the specified value. Parameter name and value strings are case sensitive.
<b>Input Arguments</b>	<p><b>Object - Object whose parameter value to set</b> string</p> <p>Object whose parameter value to set, specified as a string giving the object full path name. Possible objects are:</p> <ul style="list-style-type: none"><li>• Software node</li><li>• Hardware node</li><li>• Periodic trigger</li><li>• Aperiodic trigger</li><li>• Task</li></ul> <p><b>ParamName - Name of the parameter to set</b> string</p> <p>Name of parameter whose value to set, specified as a string.</p> <p>These are the possible parameters whose values you can set for each of the object types:</p> <p>For software node:</p> <ul style="list-style-type: none"><li>• 'Name' — Name of the software node (string).</li></ul> <p>For hardware node:</p> <ul style="list-style-type: none"><li>• 'Name' — Name of the hardware node (string).</li><li>• 'ClockFrequency' — Frequency of the hardware node clock (string).</li></ul>

# Simulink.architecture.set\_param

---

- 'Color' — Color of the trigger icon, specified as an RGB triplet (vector).

For a periodic trigger:

- 'Name' — Name of the trigger (string).
- 'Period' — Period of the trigger (string).
- 'Color' — Color of the trigger icon, specified as an RGB triplet (vector).

For an aperiodic trigger:

- 'Name' — Name of the trigger (string).
- 'Color' — Color of the trigger icon, specified as an RGB triplet (vector).
- 'EventHandlerType' — Trigger source for the interrupt-driven task (string). Possible values:
  - 'Event (Windows)'
  - 'Posix Signal (Linux/VxWorks 6.x)'
- 'SignalNumber' — Signal number for the trigger (string). You can set this value only if EventHandlerType is set to Event (Windows).
- 'EventName' — Event name for the trigger (string). You can set this value only if EventHandlerType is set to Posix Signal (Linux/VxWorks 6.x).

For task:

- 'Name' — Name of the task (string).
- 'Period' — Period of the task (string).
- 'Color' — Color of the task icon, specified as an RGB triplet (vector).

## Data Types

char

## ParamValue - Value to set the parameter to

string | vector

Value to set the parameter to, specified as a string, scalar, or vector. The possible values depend on the parameter.

**Example:** 'MyCPUNewName'

## Examples

### Set software node name

Set the software node name from CPU to MyCPUNewName.

```
sldemo_concurrent_execution
Simulink.architecture.set_param([bdroot '/CPU'],'Name','MyCPUNewName');
```

### Change Periodic

Set Periodic trigger period to .02.

```
sldemo_concurrent_execution
Simulink.architecture.set_param([bdroot '/MyCPUNewName/Periodic'],'Period','.02')
```

## See Also

Simulink.architecture.get\_param |  
Simulink.architecture.add | Simulink.architecture.delete  
| Simulink.architecture.find\_system |  
Simulink.architecture.importAndSelect  
| Simulink.architecture.profile |  
Simulink.architecture.register

# Simulink.Block.getSampleTimes

---

<b>Purpose</b>	Return sample time information for a block
<b>Syntax</b>	<code>ts = Simulink.Block.getSampleTimes(block)</code>
<b>Input Arguments</b>	<i>block</i> Full name or handle of a Simulink block
<b>Output Arguments</b>	<i>ts</i> The command returns <i>ts</i> which is a 1xn array of Simulink.SampleTime objects associated with the model passed to Simulink.Block.getSampleTimes. Here n is the number of sample times associated with the block. The format of the returns is:  1xn Simulink.SampleTime Package: Simulink  value: [1x2 double] Description: [char string] ColorRGBValue: [1x3 double] Annotation: [char string] OwnerBlock: [char string] ComponentSampleTimes: [1x2 struct]  Methods <ul style="list-style-type: none"><li>• <i>value</i> — A two-element array of doubles that contains the sample time period and offset</li><li>• <i>Description</i> — A character string that describes the sample time type</li><li>• <i>ColorRGBValue</i> — A 1x3 array of doubles that contains the red, green and blue (RGB) values of the sample time color</li><li>• <i>Annotation</i> — A character string that represents the annotation of a specific sample time (e.g., 'D1')</li></ul>

- **OwnerBlock** — For asynchronous and variable sample times, a string containing the full path to the block that controls the sample time. For all other types of sample times, an empty string.
- **ComponentSampleTimes** — A structure array of elements of the same type as `Simulink.BlockDiagram.getSampleTimes` if the sample time is an async union or if the sample time is hybrid and the component sample times are available.

## Description

`ts = Simulink.Block.getSampleTimes(block)` performs an update diagram and then returns the sample times of the block connected to the input argument *mdl/signal*. This method performs an update diagram to ensure that the sample time information returned is up-to-date. If the model is already in the compiled state via a call to the model API, then an update diagram is not necessary.

Using this method allows you to access all information in the Sample Time Legend programmatically.

## See Also

`Simulink.BlockDiagram.getSampleTimes`

# Simulink.BlockDiagram.addBusToVector

---

## Purpose

Add Bus to Vector blocks to convert virtual bus signals into vector signals

## Syntax

```
[DstBlocks,  
 BusToVectorBlocks] =  
Simulink.BlockDiagram.addBusToVector('model')  
[DstBlocks,  
 BusToVectorBlocks] = Simulink.BlockDiagram.addBusToVector('model',  
 includeLibs)  
[DstBlocks,  
 BusToVectorBlocks] = Simulink.BlockDiagram.addBusToVector('model',  
 includeLibs, reportOnly)
```

## Description

`[DstBlocks, BusToVectorBlocks] = Simulink.BlockDiagram.addBusToVector('model')` searches a model, excluding any library blocks, for bus signals used implicitly as vectors, and returns the results of the search. Before executing this function, you must do the following:

- 1** Set **Simulation > Model Configuration Parameters > Diagnostics > Connectivity > Buses > Mux blocks used to create bus signals** to error, or equivalently, execute `set_param(model, 'StrictBusMsg', 'ErrorLevel1')`.
- 2** Ensure that the model compiles without error.
- 3** Save the model.

```
[DstBlocks, BusToVectorBlocks] =  
Simulink.BlockDiagram.addBusToVector('model', includeLibs)  
is equivalent to [DstBlocks, BusToVectorBlocks] =  
Simulink.BlockDiagram.addBusToVector(model) if includeLibs is  
false.
```

If *includeLibs* is true, the function searches library blocks rather than excluding them.

```
[DstBlocks, BusToVectorBlocks] =  
Simulink.BlockDiagram.addBusToVector('model', includeLibs,  
reportOnly) is equivalent to [DstBlocks, BusToVectorBlocks] =  
Simulink.BlockDiagram.addBusToVector(model, includeLibs) if  
reportOnly is true.
```

If *reportOnly* is false, the function inserts a Bus to Vector block into each bus that is used as a vector in any block that it searches. The search excludes or includes library blocks as specified by *includeLibs*. The insertion replaces the implicit use of a bus as a vector with an explicit conversion of the bus to a vector. The signal's source and destination blocks are unchanged by this insertion.

If `Simulink.BlockDiagram.addBusToVector` adds Bus to Vector blocks to the model or any library, the function permanently changes the saved copy of the diagram. Be sure to back up the model and any libraries before calling the function with *reportOnly* specified as false.

If `Simulink.BlockDiagram.addBusToVector` changes a library block, the change affects every instance of that block in every Simulink model that uses the library. To preview the effects of the change on blocks in all models, call `Simulink.BlockDiagram.addBusToVector` with *includeLibs* = true and *reportOnly* = true, then examine the information returned in *DstBlocks*.

## Input Arguments

### **model**

Model name or handle

### **includeLibs**

Boolean specifying whether to search library blocks (true) or only the top-level model (false).

**Default:** false

### **reportOnly**

Boolean specifying whether to change the model (false) or just generate a report (true).

# Simulink.BlockDiagram.addBusToVector

---

Default: true

## Output Arguments

### DstBlocks

An array of structures that contain information about blocks that are connected to buses but treat the buses as vectors. If no such blocks exist the array has 0 length. Each structure in the array contains the following fields:

BlockPath	String specifying the path to the block to which the bus connects
InputPort	Integer specifying the input port to which the bus connects
LibPath	If the block is a library block instance, and <i>includeLibs</i> is true, the path to the source library block. Otherwise, LibPath is empty ({}).

### BusToVectorBlocks


If *reportOnly* is false, and *model* contains any buses used as vectors, a cell array containing the path to each Bus to Vector block that was added to the model. Otherwise, *BusToVectorBlocks* is empty ({}).

## Tip

You can eliminate warnings and errors about virtual buses used as muxes by using `Simulink.BlockDiagram.addBusToVector` to insert a Bus to Vector block into any virtual bus signal that is used as a mux. For additional information, see “Prevent Bus and Mux Mixtures”.

## Examples


The following model simulates correctly, but the input to the Gain block is a bus, while the output is a vector. Thus the Gain block uses a block as a vector.

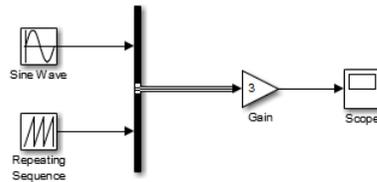

If the model shown is open as the current model, you can eliminate the implicit conversion with the following command:

```
Simulink.BlockDiagram.addBusToVector(gcs, false, false)
```

Rebuilding and simulating the model then gives this result:

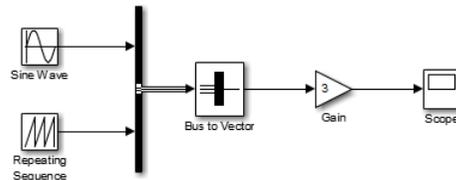

The Gain block no longer implicitly converts the bus to a vector; the inserted Bus to Vector block performs the conversion explicitly. Note that the results of simulation are the same for both models. The Bus to Vector block is virtual, and never affects simulation results, code generation, or performance.

## See Also

[Bus Assignment](#) | [Bus Creator](#) | [Bus Selector](#) | [Bus to Vector](#) | [Simulink.Bus](#) | [Simulink.Bus.cellToObject](#) | [Simulink.Bus.createObject](#) | [Simulink.BusElement](#) | [Simulink.Bus.objectToCell](#) | [Simulink.Bus.save](#)

## How To

- “Mux Signals”
- “Composite Signals”
- “Prevent Bus and Mux Mixtures”

# Simulink.BlockDiagram.buildRapidAcceleratorTarget

**Purpose** Build Rapid Accelerator target for model and return run-time parameter set

**Syntax** `rtp = Simulink.BlockDiagram.buildRapidAcceleratorTarget mdl`

**Description** `rtp = Simulink.BlockDiagram.buildRapidAcceleratorTarget mdl` builds a Rapid Accelerator target for model, `mdl`, and returns run-time parameter set, `rtp`.

**Input Arguments** **mdl**  
Name or handle of a Simulink model

**Output Arguments** **rtp**  
Run-time parameter set that contains two elements:

Element	Description												
<code>modelChecksum</code>	1x4 vector that encodes the structure of the model.												
<code>parameters</code>	A structure of the tunable parameters in the model. This structure contains the following fields.												
	<table border="1"><thead><tr><th>Field</th><th>Description</th></tr></thead><tbody><tr><td><code>dataTypeName</code></td><td>The data type name, for example, <code>double</code>.</td></tr><tr><td><code>dataTypeId</code></td><td>Internal data type identifier for use by Simulink Coder.</td></tr><tr><td><code>complex</code></td><td>Complex type or real type specification. Value is 0 if real, 1 if complex.</td></tr><tr><td><code>dtTransIdx</code></td><td>Internal data type identifier for use by Simulink Coder.</td></tr><tr><td><code>values</code></td><td>All values associated with this entry in the <code>parameters</code> substructure.</td></tr></tbody></table>	Field	Description	<code>dataTypeName</code>	The data type name, for example, <code>double</code> .	<code>dataTypeId</code>	Internal data type identifier for use by Simulink Coder.	<code>complex</code>	Complex type or real type specification. Value is 0 if real, 1 if complex.	<code>dtTransIdx</code>	Internal data type identifier for use by Simulink Coder.	<code>values</code>	All values associated with this entry in the <code>parameters</code> substructure.
	Field	Description											
	<code>dataTypeName</code>	The data type name, for example, <code>double</code> .											
	<code>dataTypeId</code>	Internal data type identifier for use by Simulink Coder.											
	<code>complex</code>	Complex type or real type specification. Value is 0 if real, 1 if complex.											
	<code>dtTransIdx</code>	Internal data type identifier for use by Simulink Coder.											
<code>values</code>	All values associated with this entry in the <code>parameters</code> substructure.												

# Simulink.BlockDiagram.buildRapidAcceleratorTarget

Element	Description	
	map	Mapping structure information that correlates the values to the model tunable parameters. This structure contains the following fields.
	Field	Description
	Identifier	Tunable parameter name.
	ValueIndices	Start and end indices into the values field, [startIdx, endIdx].
	Dimensions	Dimension of this tunable parameter (matrices are generally stored in column-major format).

## Examples

### Build Rapid Accelerator Target for Model

In the MATLAB Command Window, type:

```
rtp = Simulink.BlockDiagram.buildRapidAcceleratorTarget('f14')

### Building the rapid accelerator target for model: vdp
### Successfully built the rapid accelerator target for model: vdp

rtp =

    modelChecksum: [2.6812e+09 2.7198e+09 589261472 4.0180e+09]
    parameters: [1x1 struct]
```

## Concepts

- “How Acceleration Modes Work”
- “Choosing a Simulation Mode”
- “Design Your Model for Effective Acceleration”

# Simulink.BlockDiagram.copyContentsToSubSystem

---

**Purpose** Copy contents of block diagram to empty subsystem

**Syntax** `Simulink.BlockDiagram.copyContentsToSubSystem(bdiag,  
subsys)`

**Description** `Simulink.BlockDiagram.copyContentsToSubSystem(bdiag,  
subsys)` copies the contents of the block diagram *bdiag* to the subsystem *subsys*. The block diagram and subsystem must have already been loaded. The subsystem cannot be part of the block diagram.

The function affects only blocks, lines, and annotations; it does not affect nongraphical information such as configuration sets. You can use this function to convert a referenced model derived from an atomic subsystem into an atomic subsystem that is equivalent to the original subsystem.

This function cannot be used if the destination subsystem contains any blocks or signals. Other types of information can exist in the destination subsystem and are not affected by the function. Use `Simulink.SubSystem.deleteContents` if necessary to empty the subsystem before using `Simulink.BlockDiagram.copyContentsToSubSystem`.

**Input Arguments** ***bdiag***  
Block diagram name or handle

***subsys***  
Subsystem name or handle

**Examples** Copy the contents of `vdp` to an empty subsystem named `vdp_subsystem` that is in the model named `new_model_with_vdp`:

```
open_system('vdp');  
new_system('new_model_with_vdp')  
open_system('new_model_with_vdp');
```

# Simulink.BlockDiagram.copyContentsToSubSystem

---

```
add_block('built-in/Subsystem', 'new_model_with_vdp/vdp_subsystem')
Simulink.BlockDiagram.copyContentsToSubSystem...
('vdp', 'new_model_with_vdp/vdp_subsystem')
```

## See Also

[Simulink.BlockDiagram.deleteContents](#) |  
[Simulink.SubSystem.convertToModelReference](#) |  
[Simulink.SubSystem.copyContentsToBlockDiagram](#) |  
[Simulink.SubSystem.deleteContents](#)

## How To

- “Systems and Subsystems”
- “Create a Subsystem”

# Simulink.BlockDiagram.createSubSystem

---

**Purpose** Create subsystem containing specified set of blocks

**Syntax** `Simulink.BlockDiagram.createSubSystem(blocks)`  
`Simulink.BlockDiagram.createSubSystem()`

**Description** `Simulink.BlockDiagram.createSubSystem(blocks)` creates a new subsystem and moves the specified blocks into the subsystem. All of the specified blocks must originally reside at the top level of the model or in the same existing subsystem within the model.

If any of the blocks have unconnected input ports, the command creates input port blocks for each unconnected input port in the subsystem and connects the input port block to the unconnected input port. The command similarly creates and connects output port blocks for unconnected output ports on the specified blocks. If any of the specified blocks is an input port, the command creates an input port block in the parent system and connects it to the corresponding input port of the newly created subsystem. The command similarly creates and connects output port blocks for each of the specified blocks that is an output port block.

`Simulink.BlockDiagram.createSubSystem()` creates a new subsystem in the currently selected model and moves the currently selected blocks within the current model to the new subsystem.

**Input Arguments** **blocks**  
An array of block handles

**Default:** `[]`


**Examples** The following function converts the contents of a model or subsystem into a subsystem.

```
function convert2subsys(sys)
    blocks = find_system(sys, 'SearchDepth', 1);
    bh = [];
    for i = 2:length(blocks)
```

# Simulink.BlockDiagram.createSubSystem

```
        bh = [bh get_param(blocks{i}, 'handle')];  
    end  
    Simulink.BlockDiagram.createSubSystem(bh);  
end
```


For example, suppose you create the following model and save it as `initial_model.slx`.

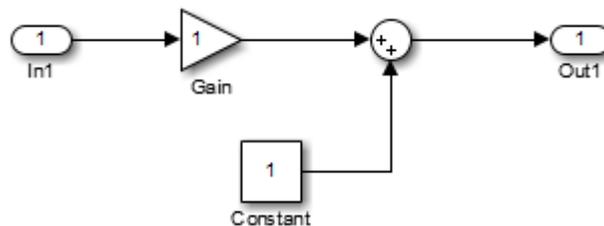

Executing

```
convert2subsys('initial_model');
```

converts this model to create a subsystem:

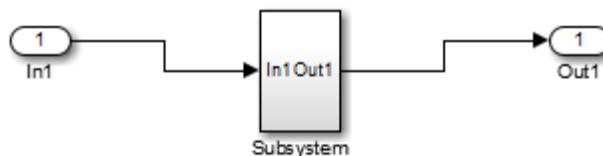

## See Also

[Simulink.BlockDiagram.copyContentsToSubSystem](#)  
| [Simulink.BlockDiagram.deleteContents](#) |  
[Simulink.SubSystem.convertToModelReference](#) |  
[Simulink.SubSystem.copyContentsToBlockDiagram](#)

# Simulink.BlockDiagram.createSubSystem

---

## How To

- “Systems and Subsystems”
- “Create a Subsystem”

# Simulink.BlockDiagram.deleteContents

---

<b>Purpose</b>	Delete contents of block diagram
<b>Syntax</b>	<code>Simulink.BlockDiagram.deleteContents(<i>bdiag</i>)</code>
<b>Description</b>	<code>Simulink.BlockDiagram.deleteContents(<i>bdiag</i>)</code> deletes the contents of the block diagram <i>bdiag</i> . The block diagram must have already been loaded. The function affects only blocks, lines, and annotations. It does not affect nongraphical information such as configuration sets.
<b>Input Arguments</b>	<b><code>bdiag</code></b> Block diagram name or handle
<b>Examples</b>	Delete the graphical content of an open block diagram named <code>f14</code> , including all subsystems:  <code>Simulink.BlockDiagram.deleteContents('f14');</code>
<b>See Also</b>	<code>Simulink.BlockDiagram.copyContentsToSubSystem</code>   <code>Simulink.SubSystem.convertToModelReference</code>   <code>Simulink.SubSystem.copyContentsToBlockDiagram</code>   <code>Simulink.SubSystem.deleteContents</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Modeling”</li><li>• “Create a Subsystem”</li></ul>

# Simulink.BlockDiagram.expandSubsystem

---

**Purpose** Expand subsystem contents to containing model level

**Syntax** `Simulink.BlockDiagram.expandSubsystem(block)`

**Description** `Simulink.BlockDiagram.expandSubsystem(block)` expands the contents of the subsystem for the specified Subsystem block. Subsystem expansion involves moving the contents of a virtual subsystem into the system that contains that subsystem.

You can expand virtual subsystems that are not masked, linked, or commented. For details, see “Subsystems That You Can Expand”.

## Input Arguments

### **block**

A string that specifies one of the following:

- The path to a subsystem block in a loaded model.
- The block handle of a subsystem block in a loaded model.
- `gcb` (the currently selected block)


## Examples

The following function expands the Combustion subsystem.

```
open_system('sldemo_enginewc')
Simulink.BlockDiagram.expandSubsystem('sldemo_enginewc/Combustion')
```

The blocks and signals that were in the Combustion subsystem become part of the top-level model that contained the Combustion subsystem, replacing that Subsystem block.

# Simulink.BlockDiagram.expandSubsystem

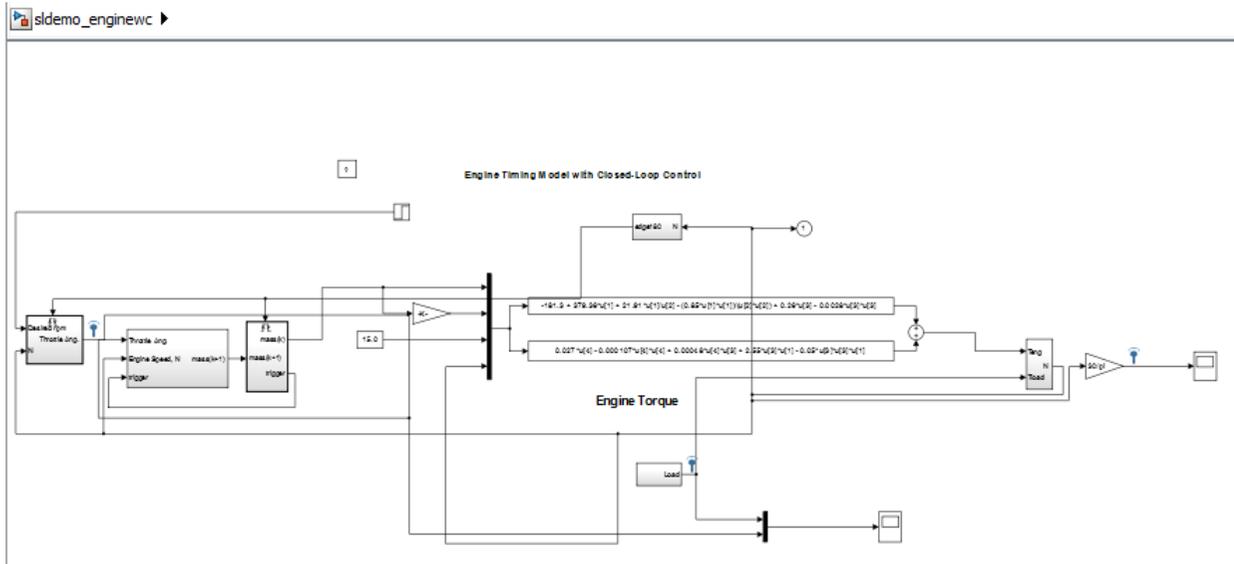

## See Also

[Simulink.BlockDiagram.copyContentsToSubSystem](#)  
| [Simulink.BlockDiagram.createSubSystem](#)  
| [Simulink.BlockDiagram.deleteContents](#) |  
[Simulink.SubSystem.convertToModelReference](#) |  
[Simulink.SubSystem.copyContentsToBlockDiagram](#)

## How To

- “Expand Subsystem Contents”
- “Systems and Subsystems”

# Simulink.BlockDiagram.getChecksum

---

**Purpose** Return checksum of model

**Syntax** `[checksum,details] = Simulink.BlockDiagram.getChecksum('model')`

**Description** `[checksum,details] = Simulink.BlockDiagram.getChecksum('model')` returns the checksum of the specified model. Simulink software computes the checksum based on attributes of the model and the blocks the model contains.

One use of this command is to determine why the Accelerator mode in Simulink software regenerates code. For an example, see `slAccelDemoWhyRebuild`.

---

**Note** `Simulink.BlockDiagram.getChecksum` compiles the specified model, if the model is not already in a compiled state.

---

This command accepts the argument `model`, which is the full name or handle of the model for which you are returning checksum data.

This command returns the following output:

- `checksum` — Array of four 32-bit integers that represents the model's 128-bit checksum.
- `details` — Structure of the form

```
ContentsChecksum: [1x1 struct]
InterfaceChecksum: [1x1 struct]
ContentsChecksumItems: [nx1 struct]
InterfaceChecksumItems: [mx1 struct]
```

- `ContentsChecksum` — Structure of the following form that represents a checksum that provides information about all blocks in the model.

Value: [4x1 uint32]  
MarkedUnique: [bool]

- Value — Array of four 32-bit integers that represents the model's 128-bit checksum.
- MarkedUnique — True if any blocks in the model have a property that prevents code reuse.
- InterfaceChecksum — Structure of the following form that represents a checksum that provides information about the model.

Value: [4x1 uint32]  
MarkedUnique: [bool]

- Value — Array of four 32-bit integers that represents the model's 128-bit checksum.
- MarkedUnique — Always true. Present for consistency with ContentsChecksum structure.
- ContentsChecksumItems and InterfaceChecksumItems — Structure arrays of the following form that contain information that Simulink software uses to compute the checksum for ContentsChecksum and InterfaceChecksum, respectively:

Handle: [char array]  
Identifier: [char array]  
Value: [type]

- Handle — Object for which Simulink software added an item to the checksum. For a block, the handle is a full block path. For a block port, the handle is the full block path and a string that identifies the port.
- Identifier — Descriptor of the item Simulink software added to the checksum. If the item is a documented parameter, the identifier is the parameter name.

# Simulink.BlockDiagram.getChecksum

---

- **Value** — Value of the item Simulink software added to the checksum. If the item is a parameter, **Value** is the value returned by

`get_param(handle, identifier)`

## Tip

The structural checksum reflects changes to the model that can affect the simulation results, including:

- Changing the solver type, for example from **Variable-step** to **Fixed-step**
- Adding or deleting blocks or connections between blocks
- Changing the values of nontunable block parameters, for example, the **Seed** parameter of the Random Number block
- Changing the number of inputs or outputs of blocks, even if the connectivity is vectorized
- Changing the number of states or the initial states in the model
- Selecting a different function in the Trigonometric Function block
- Changing signs used in a Sum block
- Adding a Target Language Compiler (TLC) file to inline an S-function

Examples of model changes that do not affect the structural checksum include:

- Changing the position of a block
- Changing the position of a line
- Resizing a block
- Adding, removing, or changing a model annotation

## See Also

`Simulink.SubSystem.getChecksum`

## Purpose

Return initial state structure of block diagram

## Syntax

```
x0 = Simulink.BlockDiagram.getInitialState('model')
```

## Description

`x0 = Simulink.BlockDiagram.getInitialState('model')` returns the initial state structure of the block diagram specified by the input argument *model*. This state structure can be used to specify the initial state vector in the **Configuration Parameters** dialog box or to provide an initial state condition to the linearization commands.

The command returns `x0`, a structure of the form

```
time: 0  
signals: [1xn struct]
```

where *n* is the number of states contained in the model, including any models referenced by Model blocks. The `signals` field is a structure of the form

```
values: [1xm double]  
dimensions: [1x1 double]  
label: [char array]  
blockName: [char array]  
inReferencedModel: [bool]  
sampleTime: [1x2 double]
```

- `values` — Numeric array of length *m*, where *m* is the number of states in the signal
- `dimensions` — Length of the values vector
- `label` — Indication of whether the state is continuous (CSTATE) or discrete. If the state is discrete:

The name of the discrete state will be shown for S-function blocks

The name of the discrete state will be shown for those built-in blocks that assign their own names to discrete states

DSTATE is used in all other cases

# Simulink.BlockDiagram.getInitialState

---

- `blockName` — Full path to block associated with this state
- `inReferencedModel` — Indication of whether the state originates in a model referenced by a Model block (1) or in the top model (0)
- `sampleTime` — Array containing the sample time and offset of the block that owns the state

Using the state structure simplifies specifying initial state values for models with multiple states, as each state is associated with the full path to its parent block.

## See Also

`linmod`

# Simulink.BlockDiagram.getSampleTimes

---

<b>Purpose</b>	Return all sample times associated with model
<b>Syntax</b>	<code>ts = Simulink.BlockDiagram.getSampleTimes('model')</code>
<b>Input Arguments</b>	<p><i>model</i> Name or handle of a Simulink model</p>
<b>Output Arguments</b>	<p><i>ts</i> The command returns <i>ts</i> which is a 1xn array of Simulink.SampleTime objects associated with the model passed to Simulink.BlockDiagram.getSampleTimes. Here n is the number of sample times associated with the block diagram. The format of the returns is as follows:</p> <pre>1xn Simulink.SampleTime Package: Simulink  value: [1x2 double] Description: [char string] ColorRGBValue: [1x3 double] Annotation: [char string] OwnerBlock: [char string] ComponentSampleTimes: [1x2 struct]</pre> <p>Methods</p> <ul style="list-style-type: none"><li>• <b>value</b> — A two-element array of doubles that contains the sample time period and offset</li><li>• <b>Description</b> — A character string that describes the sample time type</li><li>• <b>ColorRGBValue</b> — A 1x3 array of doubles that contains the red, green and blue (RGB) values of the sample time color</li><li>• <b>Annotation</b> — A character string that represents the annotation of a specific sample time (e.g., 'D1')</li></ul>

# Simulink.BlockDiagram.getSampleTimes

---

- **OwnerBlock** — For asynchronous and variable sample times, a string containing the full path to the block that controls the sample time. For all other types of sample times, an empty string.
- **ComponentSampleTimes** — A structure array of elements of the same type as `Simulink.BlockDiagram.getSampleTimes` if the sample time is an async union or if the sample time is hybrid and the component sample times are available.

## Description

`ts = Simulink.BlockDiagram.getSampleTimes('model')` performs an update diagram and then returns the sample times associated with the block diagram specified by the input argument *model*. The update diagram ensures that the sample time information returned is up-to-date. If the model is already in the compiled state via a call to the model API, then an update diagram is not necessary.

Using this method allows you to access all information in the Sample Time Legend programmatically.

## See Also

`Simulink.Block.getSampleTimes`

# Simulink.BlockDiagram.loadActiveConfigSet

## Purpose

Load, associate, and activate configuration set with model

## Syntax

```
Simulink.BlockDiagram.loadActiveConfigSet(model, filename)
```

## Description

`Simulink.BlockDiagram.loadActiveConfigSet(model, filename)` loads a configuration set, associates it with a model, and makes it the active configuration set. `model` is the name or handle of a model. `filename` is the name of the file (`.m` or `.mat`) that creates or contains a configuration set object to load. If you do not provide a file extension, it defaults to `.m`. If the file name is the same as a model name on the MATLAB path, the software cannot determine which file contains the configuration set object and displays an error message.

## Tips

- If you load a configuration set with the same name as the active configuration set, the software overwrites the active configuration set.
- If you load a configuration set with the same name as an inactive configuration set associated with the model, the software detaches the inactive configuration from the model.
- If you load a configuration set object that contains an invalid custom target, the software sets the “**System target file**” parameter to `ert.tlc`.

## Examples

Save the configuration set from the `sldemo_counters` model to `my_config_set.m`.

```
% Open the sldemo_counters model
sldemo_counters
% Save the active configuration set to my_config_set.m
Simulink.BlockDiagram.saveActiveConfigSet('sldemo_counters', 'my_config_set.m')
```

Load the configuration set from `my_config_set.m`, associate it with the `vdp` model, and make it the active configuration set.

```
% Open the vdp model
vdp
```

# Simulink.BlockDiagram.loadActiveConfigSet

---

```
% Load the configuration set from my_config_set.m, making it the active
% configuration set for vdp.
Simulink.BlockDiagram.loadActiveConfigSet('vdp', 'my_config_set.m')
```

## See Also

Simulink.BlockDiagram.saveActiveConfigSet |  
Simulink.ConfigSet | attachConfigSet | attachConfigSetCopy  
| detachConfigSet | getActiveConfigSet | getConfigSet |  
getConfigSets | setActiveConfigSet

## How To

- “Load a Saved Configuration Set”

# Simulink.BlockDiagram.saveActiveConfigSet

---

<b>Purpose</b>	Save active configuration set of model
<b>Syntax</b>	<code>Simulink.BlockDiagram.saveActiveConfigSet(model, filename)</code>
<b>Description</b>	<code>Simulink.BlockDiagram.saveActiveConfigSet(model, filename)</code> saves the active configuration set of a model to a <code>.m</code> or <code>.mat</code> file. <code>model</code> is the name or handle of the model. <code>filename</code> is the name of the file to save the model configuration set. If you specify a <code>.m</code> extension, the file contains a function that creates a configuration set object. If you specify a <code>.mat</code> extension, the file contains a configuration set object. If you do not provide a file extension, the active configuration set is saved to a file with a <code>.m</code> extension. Do not specify <code>filename</code> to be the same as a model name; otherwise the software cannot determine which file contains the configuration set object when loading the file.
<b>Examples</b>	<p>Save the configuration set from the <code>sldemo_counters</code> model to <code>my_config_set.m</code>.</p> <pre>% Open the sldemo_counters model sldemo_counters % Save the active configuration set to my_config_set.m Simulink.BlockDiagram.saveActiveConfigSet('sldemo_counters', 'my_config_set.m')</pre>
<b>See Also</b>	<code>Simulink.BlockDiagram.loadActiveConfigSet</code>   <code>Simulink.ConfigSet</code>   <code>attachConfigSet</code>   <code>attachConfigSetCopy</code>   <code>detachConfigSet</code>   <code>getActiveConfigSet</code>   <code>getConfigSet</code>   <code>getConfigSets</code>   <code>setActiveConfigSet</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Save a Configuration Set”</li></ul>

# Simulink.Bus.cellToObject

---

<b>Purpose</b>	Convert cell array containing bus information to bus objects
<b>Syntax</b>	<code>Simulink.Bus.cellToObject(<i>busCells</i>)</code>
<b>Description</b>	<code>Simulink.Bus.cellToObject(<i>busCells</i>)</code> creates a set of bus objects in the MATLAB base workspace from a cell array of bus information. The inverse function is <code>Simulink.Bus.objectToCell</code> .
<b>Input Arguments</b>	<p><b>busCells</b></p> <p>A cell array of cell arrays in which each subordinate array represents a bus object and contains the following data:</p> <pre>{<i>BusName</i>, <i>HeaderFile</i>, <i>Description</i>, <i>DataScope</i>, <i>Alignment</i>, <i>Elements</i>}</pre> <p>The <i>Elements</i> field is an array containing the following data for each element:</p> <pre>{<i>ElementName</i>, <i>Dimensions</i>, <i>DataType</i>, <i>SampleTime</i>, <i>Complexity</i>, <i>SamplingMode</i>, <i>DimensionsMode</i>, <i>Min</i>, <i>Max</i>, <i>DocUnits</i>, <i>Description</i>}</pre>
<b>See Also</b>	<a href="#">Bus Assignment</a>   <a href="#">Bus Creator</a>   <a href="#">Bus Selector</a>   <a href="#">Bus to Vector</a>   <a href="#">Simulink.Bus</a>   <a href="#">Simulink.Bus.createMATLABStruct</a>   <a href="#">Simulink.Bus.createObject</a>   <a href="#">Simulink.BusElement</a>   <a href="#">Simulink.Bus.objectToCell</a>   <a href="#">Simulink.Bus.save</a>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Composite Signals”</li></ul>

## Purpose

Create MATLAB structures with same hierarchy and attributes as bus signals

## Syntax

```
structForBus = Simulink.Bus.createMATLABStruct(busSource)
structForBus = Simulink.Bus.createMATLABStruct(busSource,
    partialValues)
structForBus = Simulink.Bus.createMATLABStruct(busSource,
    partialValues,dims)

cellStructsForBuses =
Simulink.Bus.createMATLABStruct(arrayOfPortHandles)
cellStructsForBuses =
Simulink.Bus.createMATLABStruct(arrayOfPortHandles,
    cellOfPartialStructs)
```

## Description

`structForBus = Simulink.Bus.createMATLABStruct(busSource)` creates a MATLAB structure with the same hierarchy and attributes (such as type and dimension) as a bus signal `busSource`. Specify either the name of a bus object or the handle of a bus signal port. The resulting structure uses the ground values of the bus signal.

`structForBus = Simulink.Bus.createMATLABStruct(busSource, partialValues)` creates a structure that uses specified values `partialValues` instead of the corresponding ground values of the bus signal.

`structForBus = Simulink.Bus.createMATLABStruct(busSource, partialValues,dims)` creates a structure with the specified dimensions. For the `busSource` argument, use the name of a bus object. You can specify an empty matrix (`[]`) for `partialValues`.

`cellStructsForBuses = Simulink.Bus.createMATLABStruct(arrayOfPortHandles)` creates a cell array of structures for bus signal ports `arrayOfPortHandles`.

# Simulink.Bus.createMATLABStruct

---

The resulting cell array of structures uses ground values. Use this syntax to create initialization structures for multiple bus ports. This syntax improves performance, compared to using separate `Simulink.Bus.createMATLABStruct` calls to create the structures.

```
cellStructsForBuses =  
Simulink.Bus.createMATLABStruct(arrayOfPortHandles,cellofPartialStructs) creates a cell array of structures. The corresponding fields in the structures use the specified values cellofPartialStructs instead of the ground values.
```


## Examples

### **MATLAB Structure from Bus Object**

Open a Simulink model and simulate it.

```
run([docroot ' /toolbox/simulink/ug/examples/signals/basic_example.mdl' ] );  
sim('basic_example')
```

The simulated `basic_example` model looks like this:

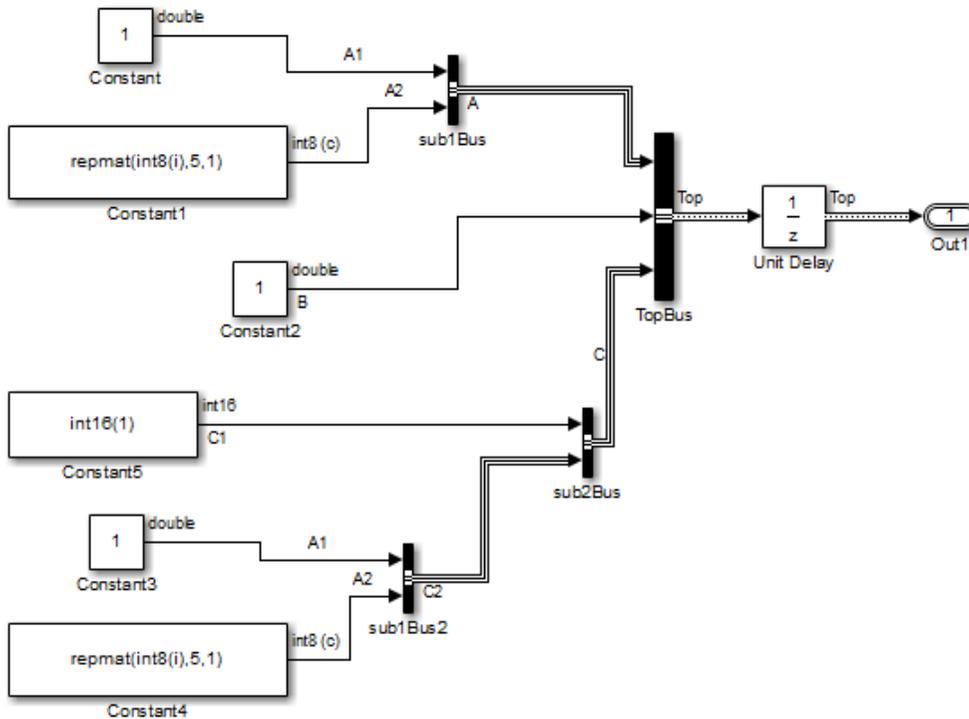

Create a MATLAB structure using the bus object Top, which the basic\_example model loads.

```
mStruct = Simulink.Bus.createMATLABStruct('Top')
```

```
mStruct =
```

```
    A: [1x1 struct]
```

```
    B: 0
```

```
    C: [1x1 struct]
```

Set a value for the field of the mStruct structure that corresponds to bus element A1 of bus A.

## Simulink.Bus.createMATLABStruct

---

```
mStruct.A.A1 = 3;
mStruct.A

ans =

    A1: 3
    A2: [5x1 int8]sim
('busic_example')
```

Simulink sets the other fields in the structure to the ground values of the corresponding bus elements.

You can use `mStruct` as the initial condition structure for the Unit Delay block.

Close the system.

```
close_system('busic_example')
```


### **MATLAB Structure from Bus Port and Partial Structure**

Create a MATLAB structure based on a port that connects to a bus signal. Use a partial structure to specify values for a subset of bus elements of the bus signal that connects to the port.

Open a Simulink model.

```
run([docroot ' /toolbox/simulink/ug/examples/signals/busic_example.mdl' ]);
sim('busic_example')
```

The simulated `busic_example` model looks like this:

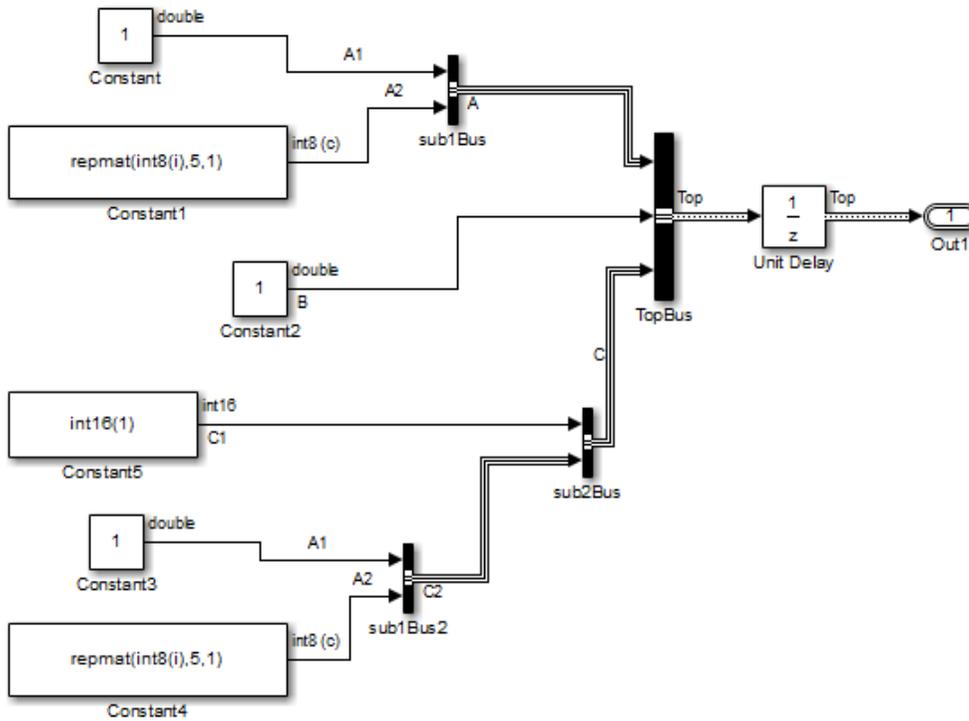

Find the port handle for the Bus Creator block port that produces the Top bus signal.

```
ph = get_param('busic_example/TopBus','PortHandles')
```

```
ph =
```

```

    Inport: [143.0013 144.0013 145.0013]
    Outport: 34.0013
    Enable: []
    Trigger: []
    State: []
    LConn: []

```

## Simulink.Bus.createMATLABStruct

---

```
RConn: []  
Ifaction: []
```

The Outport handle is the handle that you need.

Create a partial structure, which is a MATLAB structure that specifies values for a subset of bus elements for the bus signal created by the TopBus block.

```
PartialStructForK = struct('A',struct('A1',4), 'B',3)
```

```
PartialStructForK =
```

```
A: [1x1 struct]  
B: 3
```

Bus elements represented by structure fields `Top.B` and `Top.A` are at the same nesting level in the bus. You can use this partial structure to override the ground values for the B and A bus signal elements.

You can use a partial structure as an optional argument when creating a MATLAB structure from a bus object or from a bus port.

Create a MATLAB structure using the port handle (`ph`) for the TopBus block. Override the ground values for the A.A1 and B bus elements.

```
mStruct = Simulink.Bus.createMATLABStruct(ph.Outport,PartialStructForK)
```

```
mStruct =
```

```
A: [1x1 struct]  
B: 3  
C: [1x1 struct]
```

Close the system.


```
close_system('busic_example')
```

## MATLAB Structure with Specified Dimensions

Open a Simulink model and simulate it.

```
run([docroot ' /toolbox/simulink/ug/examples/signals/basic_example.mdl  
sim('basic_example')
```

The simulated basic\_example model looks like this:

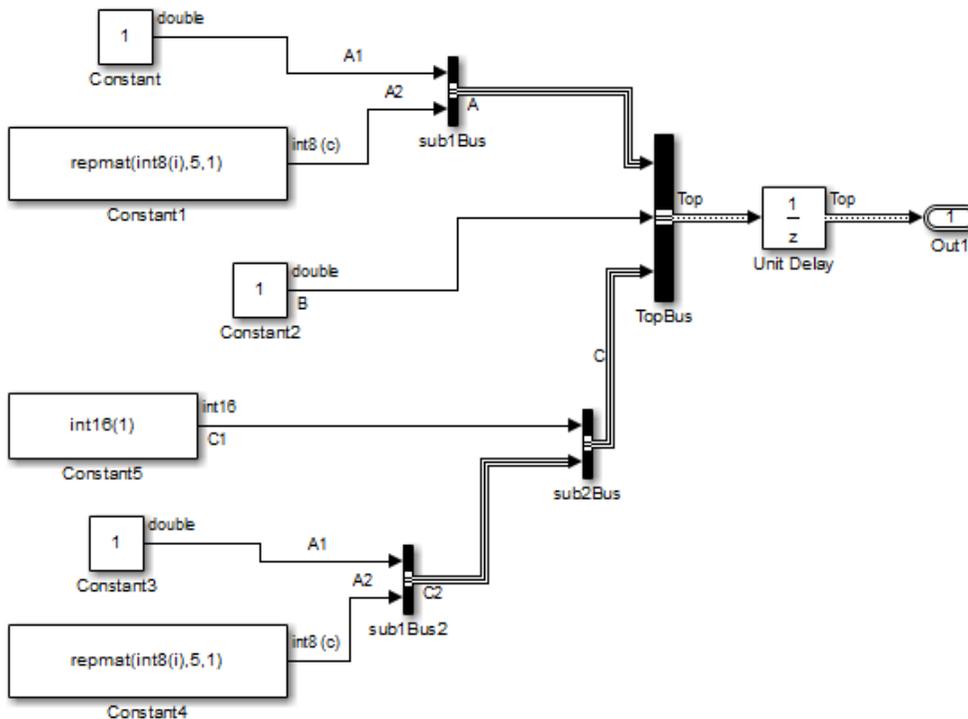

Create a partial structure, which is a MATLAB structure that specifies values for a subset of bus elements for the bus signal created by the TopBus block.

# Simulink.Bus.createMATLABStruct

---

```
PartialStructForK = struct('A',struct('A1',4), 'B',3)
```

```
PartialStructForK =
```

```
    A: [1x1 struct]  
    B: 3
```

Create a MATLAB structure using the bus object Top (which the `basic_example` model loads), a partial structure, and dimensions for the resulting structure.

```
structForBus = Simulink.Bus.createMATLABStruct...  
    ('Top',PartialStructForK,[2 3])
```

```
structForBus =
```

```
2x3 struct array with fields:
```

```
    A  
    B  
    C
```

Close the system.


```
close_system('basic_example')
```

## Cell Array of MATLAB Structures

Open a Simulink model and simulate it.

```
open_system(docpath(fullfile(docroot,'toolbox','simulink',...  
    'examples','ex_two_outports_create_struct')))  
sim('ex_two_outports_create_struct')
```

The simulated `ex_two_outports_create_struct` model looks like this:

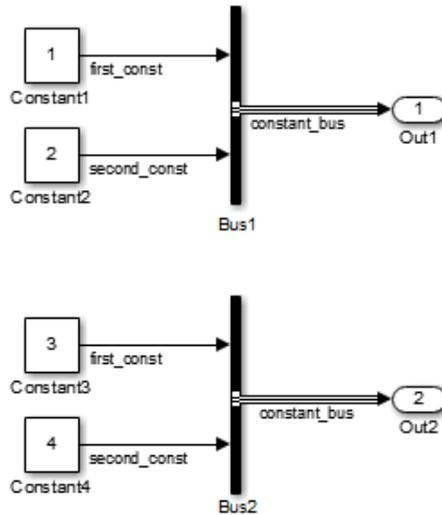

Find the port handles for the Bus Creator blocks Bus1 and Bus2.

```
ph_1 = get_param...  
      ('ex_two_outports_create_struct/Bus Creator','PortHandles')  
ph_2 = get_param...  
      ('ex_two_outports_create_struct/Bus Creator1','PortHandles')
```

Create a MATLAB structure using an array of port handles.

```
mStruct = Simulink.Bus.createMATLABStruct...  
          ([ph_1.Outputport ph_2.Outputport])
```

```
mStruct =
```

```
    [1x1 struct]  
    [1x1 struct]
```

Close the system.

```
close_system('ex_two_outports_create_struct')
```

# Simulink.Bus.createMATLABStruct

---

## Input Arguments

### **busSource** - Source representing a bus signal

name of bus object | port handle

Source representing a bus signal for which to create a MATLAB structure, specified as the name of a bus object (a `Simulink.Bus` object) or port handle.

- If you use the `dims` argument, then for `busSource`, use a bus object.
- For an array of buses signal, you cannot use a port handle.
- If you use a bus object, then that bus object must be in the MATLAB base workspace. The data type for the bus object is a `char`.
- If you use a port handle, then the model must compile successfully before you use the `createMATLABStruct` method. The data type for the port handle is a `double`.

**Example:** `structForBus = Simulink.Bus.createMATLABStruct('myBusObject')structForPortHandle = Simulink.Bus.createMATLABStruct(port_handle_1)`

### **partialValues** - Values for a subset of leaf nodes of the resulting structure

partial structure | []

Values for a subset of leaf nodes of the resulting structure, specified as a partial structure or empty array. Each field that you specify in a partial structure must match the data attributes of the corresponding bus element exactly. For details, see “Match IC Structure Values to Corresponding Bus Element Data Characteristics”.

Use an empty matrix [] when you use the `dims` argument and want to use ground values for all of the nodes in the resulting structure.

### **Data Types**

struct

### **dims** - Dimensions of the resulting structure

vector

Dimensions of the resulting structure, specified as a vector. To create a structure for an array of buses, use `dims`.

If you use `dims`, it must be the third argument.

Each dimension element must be an integer that is equal to, or greater than, 1. If you specify `partialValues`, then each dimension element in `dims` must be equal to, or greater than, its corresponding dimension element in the partial structure.

To use ground values, for `partialValues` use an empty matrix (that is, `[]`).

### Data Types

double

### **arrayOfPortHandles - Handles of bus signal ports**

array

Handles of bus signal ports, specified as an array. If you use the `cellofPartialStructs` argument, then the number of port handles that you specify in `arrayOfPortHandles` must be the same as the number of partial structures.

### Data Types

double

### **cellofPartialStructs - Handles of bus signal ports**

cell array

Handles of bus signal ports, specified as a cell array.

### Data Types

cell

## Output Arguments

### **structForBus - Bus signal hierarchy and attributes, returned as a MATLAB structure**

MATLAB structure

Structure of data with same hierarchy and attributes as a bus signal that you specify with either a bus object or port handle. The structure

uses ground values of the bus signal. To override ground values for specific nodes, specify a `partialValues` structure.

The dimensions of `structForBus` depend on the input arguments:

- If you specify only `busSource`, then the dimension is 1.
- If you also specify `partialValues`, then the dimensions match the dimensions of `partialValues`.
- If you specify the `dims` argument, then the dimensions match the dimensions of `dims`.

## **cellStructsForBuses - Structures with same hierarchy and attributes as bus signals**

cell array

Structures with same hierarchy and attributes as bus signals, specified as a cell array of structures of data with same hierarchy and attributes as a bus signals that you specify with an array of port handles. The cell array of structures uses ground values of the bus signals. To override other values for specific nodes in the resulting structures specify a `cellOfPartialStructs` cell array of partial structures.

The dimensions of `cellStructsForBuses` depend on the input arguments:

- If you specify only `arrayOfPortHandles`, then the dimension is 1.
- If you also specify `cellOfPartialStructs`, then the dimensions match the dimensions of `cellOfPartialStructs`.

## **Tips**

- You can use the Bus Editor to invoke the `Simulink.Bus.createMATLABStruct` function. Use one of these approaches:
  - Select the **File > Create a MATLAB structure** menu item.
  - Select the bus object for which you want to create a full MATLAB structure. Then, in the toolbar, click the **Create a MATLAB structure** icon ().

You can then edit the MATLAB structure in the MATLAB Editor and evaluate the code to create or update the values in this structure.

- You can use the `Simulink.Bus.createMATLABStruct` function to specify the initial value of the output of a referenced model. For details, see the “Referenced Model: Setting Initial Value for Bus Output” section of the Detailed Workflow for Managing Data with Model Reference example.

## See Also

[Bus Assignment](#) | [Bus Creator](#) | [Bus to Vector](#)  
[Simulink.Bus](#) | [Simulink.Bus.cellToObject](#) |  
[Simulink.Bus.createObject](#) | [Simulink.BusElement](#)  
[Simulink.Bus.objectToCell](#) | [Simulink.Bus.save](#) |  
[Simulink.SimulationData.createStructOfTimeseries](#) | | “Specify  
Initial Conditions for Bus Signals” | “Composite Signals”

# Simulink.Bus.createObject

---

**Purpose** Create bus objects from blocks or MATLAB structures

**Syntax**

```
busInfo = Simulink.Bus.createObject(modelName, blks)  
busInfo =  
Simulink.Bus.createObject(modelName,blks,fileName)  
busInfo =  
Simulink.Bus.createObject(modelName,blks,fileName,format)  
busInfo =  
Simulink.Bus.createObject(structTimeseries,fileName,format)  
busInfo =  
Simulink.Bus.createObject(structNumeric,fileName,format)
```

**Description** *busInfo* = Simulink.Bus.createObject(*modelName*, *blks*) creates bus objects (instances of Simulink.Bus class in the MATLAB base workspace) for specified blocks, and returns information about the objects that it created.

*busInfo* =  
Simulink.Bus.createObject(*modelName*,*blks*,*fileName*)  
saves the bus objects in a MATLAB file that contains a cell array of cell arrays. Each subordinate array represents a bus object and contains the following data:

```
{BusName, HeaderFile, Description, DataScope,  
Alignment, Elements}
```

The *Elements* field is an array containing the following data for each element:

```
{ElementName, Dimensions, DataType,  
SampleTime, Complexity, SamplingMode, DimensionsMode,  
Min, Max,DocUnits, Description}
```

*busInfo* =  
Simulink.Bus.createObject(*modelName*,*blks*,*fileName*,*format*)  
saves the bus objects in a file that contains either a cell array of bus information, or the bus objects themselves.

*busInfo* =  
Simulink.Bus.createObject(*structTimeseries*, *fileName*, *format*)  
creates bus objects in the MATLAB workspace from a MATLAB structure of timeseries objects and optionally saves the bus objects in the specified file.

*busInfo* =  
Simulink.Bus.createObject(*structNumeric*, *fileName*, *format*)  
creates bus objects in the MATLAB workspace from the numeric MATLAB structure and optionally saves the bus objects in the specified file.

## Tips

If you specify a model name, the model must compile successfully before you use the Simulink.Bus.createObject command.

## Input Arguments

### **modelName**

Name or handle of a model

### **blks**

List of subsystem-level Inport blocks, root-level or subsystem-level Outport blocks or Bus Creator blocks in the specified model. If only one block needs to be specified, this argument can be the full pathname of the block. Otherwise, this argument can be either a cell array containing block pathnames or a vector of block handles.

### **fileName**

Name of the file in which to save the bus objects created by this function. The file name must be unique. If you omit this argument, the function save the created bus objects in a cell array, not in a file.

### **format**

Format used to store the bus objects. The value can be 'cell' or 'object'. Use cell array format to save the objects in a compact form.

**Default:** 'cell'

# Simulink.Bus.createObject

---

## **structTimeseries**

MATLAB timeseries structure variable used to create bus objects

## **structNumeric**

Numeric structure variable used to create bus objects

## **Output Arguments**

### **busInfo**

A structure array containing bus information for the specified blocks. Each element of the structure array corresponds to one block and contains the following fields:

block	Handle of the block
busName	Name of the bus object associated with the block

## **Examples**

### **Use Bus Creator Blocks to Create a Bus Object**

Create a bus object from the Bus Creator block called Bus Creator2.

```
open_system('busdemo')
bus2Info = Simulink.Bus.createObject...
('busdemo', 'busdemo/Bus Creator2')
close_system('busdemo')
```

Create a bus object from two Bus Creator blocks, using block handles to specify the blocks. In the Simulink Editor, select the Bus Creator2 block and then the Bus Creator block and assign their block handles to variables. Use those variables in a vector specify the blocks to use for creating the bus object. This example also shows how to specify a file for saving the output (busdemo\_busobject).

```
clear;
open_system('busdemo')
% Select the Bus Creator2 block
bc2 = gcbh;
```

```
% Select the Bus Creator block
bc1 = gcbh;
bus3Info = Simulink.Bus.createObject...
('busdemo', [bc2 bc1], 'busdemo_busobject')
close_system('busdemo')
```

## Use a Structure of Timeseries Objects to Create a Bus Object

Create a bus object from a MATLAB structure of timeseries objects that results from logged data for the COUNTERBUS bus signal.

```
model = 'sldemo_md1ref_bus';
open_system(model);
sim(model);
topOut
```

```
topOut =
```

```
Simulink.SimulationData.Dataset
Package: Simulink.SimulationData
```

```
Characteristics:
    Name: 'topOut'
    Total Elements: 3
```

```
Elements:
    1: 'COUNTERBUS'
    2: 'OUTERDATA'
    3: 'INCREMENTBUS'
```

- Use `getElement` or `getElement` to access elements by index or name.
- Use `addElement` or `setElement` to add or modify elements.

Methods, Superclasses

```
bus4Info = Simulink.Bus.createObject(topOut.get('COUNTERBUS').Values)
close_system(model);
```

# Simulink.Bus.createObject

---

Create a bus object from a MATLAB structure, independent of a model.

```
X = struct('a',1,'b',2)
bus3Info = Simulink.Bus.createObject(X)
```

## See Also

[Bus Assignment](#) | [Bus Creator](#) | [Bus Selector](#) | [Bus to Vector](#) | [Simulink.Bus](#) | [Simulink.Bus.cellToObject](#) | [Simulink.Bus.createMATLABStruct](#) | [Simulink.BusElement](#) | [Simulink.Bus.objectToCell](#) | [Simulink.Bus.save](#)

## How To

- “Composite Signals”

**Purpose** Convert bus objects to cell array containing bus information

**Syntax** `busCells = Simulink.Bus.objectToCell(busNames)`

**Description** `busCells = Simulink.Bus.objectToCell(busNames)` inputs a cell array of names of bus objects in the MATLAB base workspace, and returns a cell array of cell arrays in which each subordinate array contains the bus information defined by one of the bus objects. The order of the elements in the output array corresponds to the order of the names in the input array. If `busNames` is empty, the function converts all bus objects in the base workspace. The inverse function is `Simulink.Bus.cellToObject`.

**Input Arguments** **busNames**  
A cell array of names of bus objects in the MATLAB base workspace

**Output Arguments** **busCells**  
A cell array of cell arrays in which each subordinate array represents a bus object and contains the following data:

```
{BusName, HeaderFile, Description, DataScope,  
Alignment, Elements}
```

The `Elements` field is an array containing the following data for each element:

```
{ElementName, Dimensions, DataType,  
SampleTime, Complexity, SamplingMode, DimensionsMode,  
Min, Max, DocUnits, Description}
```

**See Also** [Bus Assignment](#) | [Bus Creator](#) | [Bus Selector](#) | [Bus to Vector](#) | [Simulink.Bus](#) | [Simulink.Bus.cellToObject](#) | [Simulink.Bus.createMATLABstruct](#) | [Simulink.Bus.createObject](#) | [Simulink.BusElement](#) | [Simulink.Bus.save](#)

**How To**

- “Composite Signals”

# Simulink.Bus.save

---

**Purpose** Save bus objects in MATLAB file

**Syntax** `Simulink.Bus.save(fileName)`  
`Simulink.Bus.save(fileName, format)`  
`Simulink.Bus.save(fileName, format, busNames)`

**Description** `Simulink.Bus.save(fileName)` saves all bus objects (instances of `Simulink.Bus` class residing in the MATLAB base workspace) in a MATLAB file that contains a cell array of cell arrays. Each subordinate array represents a bus object and contains the following data:

```
{BusName, HeaderFile, Description, DataScope,  
Alignment, Elements}
```

The *Elements* field is an array containing the following data for each element:

```
{ElementName, Dimensions, DataType,  
SampleTime, Complexity, SamplingMode, DimensionsMode,  
Min, Max, DocUnits, Description}
```

Executing a MATLAB file created by `Simulink.Bus.save` in cell array format calls `Simulink.Bus.cellToObject` to recreate the bus objects and returns the new bus objects in the cell array. To suppress the creation of bus objects, specify the optional argument 'false' when you execute the MATLAB file.

`Simulink.Bus.save(fileName, format)` saves the bus objects in a MATLAB file that contains either a cell array of bus information or the bus objects themselves.

`Simulink.Bus.save(fileName, format, busNames)` saves only those bus objects whose names appear in *busNames*.

## Input Arguments

### **fileName**

Name of the file in which to store the bus objects

### **format**

Format used to store the bus objects. The value can be 'cell' or 'object'. Use cell array format to save the objects in a compact form.

**Default:** 'cell'

## **busNames**

A cell array containing names of bus objects to be saved. If the cell array is empty or omitted, this function saves all bus objects in the MATLAB workspace.

**Default:** {}

## **See Also**

Bus Assignment | Bus Creator | Bus Selector | Bus to Vector | Simulink.Bus | Simulink.Bus.cellToObject | Simulink.Bus.createMATLABStruct | Simulink.Bus.createObject | Simulink.BusElement | Simulink.Bus.objectToCell

## **How To**

- “Composite Signals”

# Simulink.defineIntEnumType

---

**Purpose** Define enumerated data type

**Syntax**

```
Simulink.defineIntEnumType(ClassName,  
CellOfEnums, IntValues)  
Simulink.defineIntEnumType(ClassName,  
CellOfEnums, IntValues,  
    'Description', ClassDesc)  
Simulink.defineIntEnumType(ClassName,  
CellOfEnums, IntValues,  
    'DefaultValue', DefValue)  
Simulink.defineIntEnumType(ClassName,  
CellOfEnums, IntValues,  
    'HeaderFile', FileName)  
Simulink.defineIntEnumType(ClassName,  
CellOfEnums, IntValues,  
    'AddClassNameToEnumNames', Flag)
```

**Description**

`Simulink.defineIntEnumType(ClassName, CellOfEnums, IntValues)` defines an enumeration named *ClassName* with enumeration values specified with *CellOfEnums* and underlying numeric values specified by *IntValues*.

`Simulink.defineIntEnumType(ClassName, CellOfEnums, IntValues, 'Description', ClassDesc)` defines the enumeration with a description (string).

`Simulink.defineIntEnumType(ClassName, CellOfEnums, IntValues, 'DefaultValue', DefValue)` defines a default value for the enumeration, which is one of the strings you specify for *CellOfEnums*.

`Simulink.defineIntEnumType(ClassName, CellOfEnums, IntValues, 'HeaderFile', FileName)` specifies a header file into which the code generator places the enumeration class definition.

`Simulink.defineIntEnumType(ClassName, CellOfEnums, IntValues, 'AddClassNameToEnumNames', Flag)` specifies whether the code generator applies the class name as a prefix to the enumeration values that you specify for *CellOfEnums*. For *Flag*, specify true or

false. For example, if you specify true, the code generator would use BasicColors.Red instead of Red to represent an enumerated value.

## Input Arguments

### **ClassName**

The name of the enumerated data type.

### **CellOfEnums**

A cell array of strings that defines the enumerations for the data type.

### **IntValues**

An array of numeric values that correspond to enumerations of the data type.

### **'Description', ClassDesc**

Specifies a string that describes the enumeration data type.

### **'DefaultValue', DefValue**

Specifies the default enumeration value.

### **'HeaderFile', FileName**

Specifies a string naming the header file that is to contain the data type definition.

### **'DataScope', 'Auto' | 'Exported' | 'Imported'**

Specifies whether the data type definition should be imported from, or exported to, a header file during code generation.

# Simulink.defineIntEnumType

Value	Action
Auto (default)	<p>If no value is specified for <code>Headerfile</code>, export the type definition to <code>model_types.h</code>, where <code>model</code> is the model name.</p> <p>If a value is specified for <code>Headerfile</code>, import the data type definition from the specified header file.</p>
Exported	<p>Export the data type definition to a header file.</p> <p>If no value is specified for <code>Headerfile</code>, the header file name defaults to <code>type.h</code>, where <code>type</code> is the data type name.</p>
Imported	<p>Import the data type definition from a header file.</p> <p>If no value is specified for <code>Headerfile</code>, the header file name defaults to <code>type.h</code>, where <code>type</code> is the data type name.</p>

## 'AddClassNameToEnumNames', Flag

A logical flag that specifies whether code generator applies the class name as a prefix to the enumerations.

## Examples

Assume an external data dictionary includes the following enumeration:

```
BasicColors.Red(0), BasicColors.Yellow(1), BasicColors.Blue(2)
```

Import the enumeration class definition into the MATLAB workspace:

```
Simulink.defineIntEnumType('BasicColors', ...
```

```
{'Red', 'Yellow', 'Blue'}, ...  
[0;1;2], ...  
'Description', 'Basic colors', ...  
'DefaultValue', 'Blue', ...  
'HeaderFile', 'mybasiccolors.h', ...  
'DataScope', 'Imported', ...  
'AddClassNameToEnumNames', true);
```

## See Also

enumeration

## How To

- “Import Enumerations Defined Externally to MATLAB”
- “Define Simulink Enumerations”

# Simulink.findVars

---

**Purpose** Variables found in models and blocks

**Syntax**

```
[variables] = Simulink.findVars(context)
[variables] = Simulink.findVars(context,Name,Value)
[variables] = Simulink.findVars
(context,variablefilter,Name,Value)
```

**Description** [variables] = Simulink.findVars(context) returns as a vector Simulink.VariableUsage objects found in the blocks and models specified by context, including subsystems and referenced models. Returns an empty vector if none are found.

[variables] = Simulink.findVars(context,Name,Value) uses additional options specified by one or more Name,Value pair arguments.

[variables] = Simulink.findVars
(context,variablefilter,Name,Value) returns results only for variables specified by variablefilter.

## **Input Arguments**

### **context - Models and blocks to search**

string | cell array

Models and blocks to search, specified in one of the following ways:

- The name of a model ('MyModel')
- The name or path of a block or masked block ('MyModel/Gain')
- A cell array of model or block names

**Example:** [variables] = Simulink.findVars('MyModel')

### **Data Types**

char | cell

### **variablefilter - Filter of variables to find**

Simulink.VariableUsage object | array of Simulink.VariableUsage objects

Filter of variables to find, specified as a Simulink.VariableUsage object or an array of Simulink.VariableUsage objects.

**Example:**

```
vars = [Simulink.VariableUsage('k','base workspace')
        Simulink.VariableUsage('myParam','base workspace')];
variablefilter = Simulink.findVars('MyModel',vars)
```

## **Name-Value Pair Arguments**

Specify optional comma-separated pairs of `Name,Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes (' '). You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

**Example:** 'FindUsedVars','true','Regexp','on','Name','^mod' specifies for the search to return variables in use having names that match the pattern ^mod.

### **'FindUsedVars' - Find variables that are used or not used**

true (default) | logical scalar | double scalar | string

Option to find variables that are explicitly used or not used, specified as the comma-separated pair consisting of `FindUsedVars` and a Boolean.

**Example:** 'FindUsedVars',false

### **'RegExp' - Enable regular expression matching**

'off' (default) | logical scalar | double scalar | string

Option to enable regular expression matching, specified as the comma-separated pair consisting of `RegExp` and on. Only input arguments with string values can be matched.

**Example:** 'RegExp','on'

### **'SearchMethod' - Compile status**

'compiled' (default) | 'cached'

Compile status, specified as the comma-separated pair consisting of SearchMethod and one of these values:

- 'compiled' — Return up-to-date results by compiling every model in the search context before search.
- 'cached' — Return quicker results by using results cached during the previous compile.

**Example:** 'SearchMethod', 'compiled'

## **'SearchReferencedModels' - Enable search within referenced models**

'off' (default) | logical scalar | double scalar | string

Option to enable search within referenced models, specified as the comma-separated pair consisting of SearchReferencedModels and on.

**Example:** 'SearchReferencedModels', 'on'

## **'Name' - Name of a variable to search for**

string

Name of a variable to search for, specified as the comma-separated pair consisting of Name and a string.

**Example:** 'Name', 'trans'

## **'SourceType' - Workspace or source containing the variable**

string

Workspace or source containing the variable, specified as the comma-separated pair of SourceType and one of the following options:

- 'base workspace'
- 'model workspace'
- 'mask workspace'
- 'data dictionary'

**Example:** 'SourceType', 'base workspace'

## 'Users' - Names of blocks to search for variables

string

Names of blocks to search for variables, specified as the comma-separated pair consisting of Users and a string.

**Example:** 'Users', 'MyModel/Gain1'

## Data Types

char

## Examples

### Variables in Use in a Model

Find variables used by MyModel.

```
[variables] = Simulink.findVars('MyModel');
```

### Specific Variable in Use in a Model

Find all uses of the base workspace variable k by MyModel using the cached results.

```
[variables] = Simulink.findVars('MyModel', 'Name', 'k',  
'SearchMethod', 'cached', 'SourceType', 'base workspace');
```

### Regular Expression Matching

Find any usage of a variable whose name matches the regular expression ^trans.

```
[variables] = Simulink.findVars('MyModel', 'Regex', 'on',  
'Name', '^trans');
```

### Variables Common to Two Models

Given two models, discover which variables are used by the first, the second, or both.

```
[model1Vars] = Simulink.findVars('model1');  
[model2Vars] = Simulink.findVars('model2');
```

# Simulink.findVars

---

```
[commonVars] = intersect(model1vars,model2Vars);
```

## Variables Not Used in a Model

Return variables in the model workspace that are not used by MyModel.

```
unusedVars = Simulink.findVars('MyModel','FindUsedVars',false,  
'SourceType','model workspace');
```

## Specific Variable Not Used in a Model

Determine if the base workspace variable k is not used by MyModel.

```
varObj = Simulink.VariableUsage('k','base workspace');  
unusedVar = Simulink.findVars('MyModel',varObj,  
'FindUsedVars',false);
```

## Variables Used by a Block

Return the variables that are used by the Gain1 block in MyModel.

```
[variables] = Simulink.findVars('MyModel',  
'Users','MyModel/Gain1');
```

## Variables Used in a Model Reference Hierarchy

Find variables used within the model reference hierarchy in MyNestedModel.

```
[variables] = Simulink.findVars('MyNestedModel','SearchReferencedModels',
```

## Limitations

Simulink.findVars does not work with the following constructs:

- MATLAB code in scripts and initialization and callback functions
- Libraries and blocks within libraries
- MATLAB Function blocks, except for input arguments
- Calls directly to MATLAB from the Stateflow action language
- S-functions that use data type variables registered using `ssRegisterDataType`.

To make the variables searchable, use `ssRegisterTypeFromNamedObject` instead.

- Variables of enumerated classes
- Variables used by inactive variant subsystems
- Variables referenced by machine-parented data in Stateflow

## See Also

`Simulink.VariableUsage` | `find_system` | `intersect`

## Related Examples

- “Search Using Model Explorer”

# Simulink.ModelDataLogs.convertToDataset

---

**Purpose** Convert logging data from Simulink.ModelDataLogs format to Simulink.SimulationData.Dataset format

**Syntax** `convertedDataset = sourceModelDataLogsObject.convertToDataset(convertedDatasetName)`

## Description

---

**Note** The ModelDataLogs format is supported for backwards compatibility. The ModelDataLogs format will be removed in a future release. For an existing model that uses the ModelDataLogs format, you should migrate the model to use Dataset format. For details, see “Migrate from ModelDataLogs to Dataset Format”.

For new models, use the Dataset logging format, which stores logged data in Simulink.SimulationData.Dataset objects.

---

`convertedDataset = sourceModelDataLogsObject.convertToDataset(convertedDatasetName)` converts the `sourceModelDataLogsObject` to a Simulink.SimulationData.Dataset object. The name of the converted object is based on `convertedDatasetName`.

The resulting Simulink.SimulationData.Dataset object is a flat list. This list has one element for each Simulink.Timeseries or Simulink.TsArray object in the Simulink.ModelDataLogs object.

## Limitations

Source of Simulink.ModelDataLogs Logged Data	Conversion Limitation
Referenced model	<p>Loads all ancestors of the referenced model not previously loaded. If any ancestor model does appear not on the MATLAB path, the conversion fails.</p> <p>If the model has changed, or the model's ancestors have changed, after Simulink logged the data, the conversion may fail. For example, adding, deleting, or renaming a block after logging can cause conversion failure.</p>
Variant model or subsystem	<p>The current active variant must be the same one that was active as when Simulink logged the data. Otherwise, the conversion fails.</p>
Frame signal	<p>The conversion fails.</p>
Mux block	<p>The conversion produces a different <code>Simulink.SimulationData.Dataset</code> object as the dataset than Simulink creates when you simulate the model using the <code>Dataset</code> format for the logged data .</p>
Stateflow chart	<p>Not supported.</p>

# Simulink.ModelDataLogs.convertToDataset

---

## Input Arguments

### **sourceModelDataLogsObject**

A `Simulink.ModelDataLogs` object that you want to convert to a `Simulink.SimulationData.Dataset` object.

### **convertedDatasetName**

Name of the dataset that the conversion process creates.

## Output Arguments

### **convertedDataset**

The `Simulink.SimulationDataset` object that the `Simulink.ModelDataLogs.convertToDataset` function creates.

For details about the converted dataset, see `Simulink.SimulationData.Dataset`.

## Example

Log signal data, simulate the model, and then convert the logged dataset to the `Simulink.SimulationData.Dataset` format.

- 1 Open the vdp model by typing:

```
vdp
```

- 2 Right-click the x1 and x2 signals.

- 3 Click the **Record** button arrow  and click **Log/Unlog Selected Signals**.

- 4 Simulate the model.

The vdp model has the **Configuration Parameters > Data Import/Export > Signal logging** parameter selected, and the signal logging object name set to `logout`. Also, the **Signal Logging Format** parameter is set to `ModelDataLogs`.

Simulink generates a warning about the use of the `ModelDataLogs` format.

# Simulink.ModelDataLogs.convertToDataset

5 At the MATLAB command line, type:

```
logout
```

```
logout =
```

```
Simulink.ModelDataLogs (vdp):
```

Name	Elements	Simulink Class
x1	1	Timeseries
x2	1	Timeseries

6 Convert the logged dataset to use the `Simulink.SimulationDataset` format:

```
dataset = logout.convertToDataset('vdp_dataset')
```

```
dataset =
```

```
Simulink.SimulationData.Dataset  
Package: Simulink.SimulationData
```

```
Characteristics:
```

```
    Name: 'vdp_dataset'  
  Total Elements: 2
```

```
Elements:
```

```
  1: 'x1'  
  2: 'x2'
```

Use `getElement` to access elements by index, name or block path.

Methods, Superclasses

## See Also

[Simulink.ModelDataLogs](#) | [Simulink.SimulationData.Dataset](#) | [Simulink.SimulationData.updateDatasetFormatLogging](#)

## How To

- “Export Signal Data Using Signal Logging”

# Simulink.ModelDataLogs.convertToDataset

---

- “Specify the Signal Logging Data Format”

# Simulink.SimState.ModelSimState.getBlockSimState

---

<b>Purpose</b>	Access SimState of individual Stateflow Chart, MATLAB Function, or S-function block
<b>Syntax</b>	<code>blockSimState = getBlockSimState(x, 'blockpath')</code>
<b>Description</b>	<code>blockSimState = getBlockSimState(x, 'blockpath')</code> returns the SimState of the block specified as <code>blockpath</code> . <code>blockpath</code> must be either a Stateflow Chart, MATLAB Function, or S-function block. For other types of blocks, see the <code>loggedStates</code> property of the <code>Simulink.SimState.ModelSimState</code> class.
<b>Input Arguments</b>	<p><b>x</b></p> <p>The <code>x</code> argument is a <code>Simulink.SimState.ModelSimState</code> object.</p> <p><b>blockpath</b></p> <p>The path to the block for which you are requesting the SimState values.</p>
<b>Output Arguments</b>	<p><b>blockSimState</b></p> <p>The SimState of the block specified.</p>
<b>Examples</b>	<code>chartState = getBlockSimState(x, 'mymodel/chart')</code>
<b>See Also</b>	<code>Simulink.SimState.ModelState.setBlockSimState</code>

# Simulink.SimState.ModelSimState.setBlockSimState

---

**Purpose** Set SimState of individual Stateflow Chart, MATLAB Function, or S-function block

**Syntax** `setBlockSimState(x, 'blockpath', blockSimState)`

**Description** `setBlockSimState(x, 'blockpath', blockSimState)` sets the SimState of the block specified as *blockpath*. *blockpath* must be either a Stateflow Chart, MATLAB Function, or S-function block. For other types of blocks, see the `loggedStates` property of the `Simulink.SimState.ModelSimState` class.

**Input Arguments** **x**  
The argument *x* is a `Simulink.SimState.ModelSimState` object.

**blockpath**  
The path to the block for which you are setting the SimState values

**blockSimState**  
The SimState of the block specified.

**Examples** `newObj = setBlockSimState(obj, 'myModel/chart', newChartState);`

**See Also** `Simulink.SimState.ModelState.getBlockSimState`

## Purpose

Save workspace variables and their values in MATLAB code format

## Syntax

---

**Note** Simulink.saveVars will be removed in a future release. Use matlab.io.saveVariablesToScript instead.

---

```
Simulink.saveVars(filename)
Simulink.saveVars(filename, VarNames)
Simulink.saveVars(filename, '-regex', RegExps)
Simulink.saveVars(filename, Specifications, UpdateOption)
Simulink.saveVars(filename, Specifications, Configuration)
Simulink.saveVars(filename, Specifications, MatlabVer)
[r1, r2] = Simulink.saveVars(filename, Specifications)
```

## Description

Simulink.saveVars(filename) saves all variables in the current workspace for which MATLAB code can be generated to a MATLAB file named filename.m. If MATLAB code cannot be generated for a variable, the variable is saved into a companion MAT-file named filename.mat, and a warning is generated. If either file already exists, it is overwritten. The filename cannot match the name of any variable in the current workspace, and can optionally include the suffix .m. Using Simulink.saveVars has no effect on the contents of any workspace.

Executing the MATLAB file restores the variables saved in the file to the current workspace. If a companion MAT-file exists, code in the MATLAB file loads the MAT-file, restoring its variables also. When both a MATLAB file and a MAT-file exist, do not load the MATLAB file unless the MAT file is available, or an error will occur. Do not load a MAT-file directly, or incomplete data restoration will result. No warning occurs if loading a file overwrites any existing variables.

You can edit a MATLAB file that Simulink.saveVars creates. You can insert comments between or within the MATLAB code sections for saved variables. However, if you later use Simulink.saveVars to update or append to the file, only comments between MATLAB code sections will be preserved. Internal comments should therefore be used only in files that you do not expect to change any further.

## Simulink.saveVars

---

You must not edit the header section in the MATLAB file, which comprises the first five comment lines. Simulink does not check that a manually edited MATLAB file is syntactically correct. MathWorks recommends not editing any MATLAB code in the file. You cannot edit a MAT-file and should never attempt to do so.

`Simulink.saveVars(filename, VarNames)` saves only the variables specified in *VarNames*, which is a comma-separated list of variable names. You can use the wildcard character `*` to save all variables that match a pattern. The `*` matches one or more characters, including non-alphanumeric characters.

`Simulink.saveVars(filename, '-regex', RegExps)` saves only variables whose names match one of the regular expressions in *RegExps*, which is a comma-separated list of expressions. See “Regular Expressions” for more information. A call to the function can specify both *VarNames* and `-regexps` *RegExps*, in that order and comma-separated.

`Simulink.saveVars(filename, Specifications, UpdateOption)` saves the variables described by *Specifications* (which represents the variable specifications in any of the above syntaxes) as directed by *UpdateOption*, which can be any one of the following:

- `'-create'` — Create a new MATLAB file (and MAT-file if needed) as directed by the *Specifications*. If either file already exists, it is overwritten. This is the default behavior.
- `'-update'` — Update the existing MATLAB file (and MAT-file if needed) specified by *filename* by changing only variables that match the *Specifications* and already exist in any files. The order of the variables in files is preserved. Comments within MATLAB code sections are not preserved.
- `'-append'` — Update the existing MATLAB file (and MAT-file if needed) specified by *filename* by:
  - Updating variables that match the *Specifications* and already exist in the file or files, preserving the existing order in the file or files. Comments within MATLAB code sections are not preserved.

- Appending variables that match the *Specifications* and do not exist in the file or files by appending the variables to the file or files. These new sections initially have no comments.

`Simulink.saveVars(filename, Specifications, Configuration)` saves the variables described by *Specifications* (which represents the variable specifications in any of the above syntaxes) according to the specified *Configuration*. The *Configuration* can contain any or all of the following options, in any order, separated by commas if more than one appears:

- `'-maxnumel' MaxNum` — Limits the number of elements saved for an array to *MaxNum*, which must be an integer between 1 and 10000. For a character array, the upper limit is set to twice the value that you specify with *MaxNum*. If an array is larger than *MaxNum*, the whole array appears in the MAT-file rather than the MATLAB file, generating a warning. Default: 1000
- `'-maxlevels' MaxLevels` limits the number of levels of hierarchy saved for a structure or cell array to *MaxLevels*, which must be an integer between 1 and 200. If a structure or cell array is deeper than *MaxLevels*, the whole entity appears in the MAT-file rather than the MATLAB file, generating a warning. Default: 20
- `'-textwidth' TextWidth` sets the text wrap width in the MATLAB file to *TextWidth*, which must be an integer between 32 and 256. Default: 76
- `'-2dslice'` — Sets two dimensions for 2-D slices that represent n-D (where n is greater than 2) char, logic, or numeric array data. `Simulink.saveVars` uses the first two dimensions of the n-D array to specify the size of the 2-D slice, unless you supply two positive integer arguments after the `-2dslice` option. If you specify two integer arguments:
  - The two integers must be positive.
  - The two integers must be less than or equal to the number of dimensions of the n-D array.
  - The second integer must be greater than the first.

# Simulink.saveVars

---

`Simulink.saveVars(filename, Specifications, MatlabVer)` acts as described by *Specifications* (which represents the specifications after *filename* in any of the above syntaxes) saving any MAT-file that it creates in the format required by the MATLAB version specified by *MatlabVer*. Possible values:

- `'-v7.3'` — 7.3 or later
- `'-v7.0'` — 7.0 or later
- `'-v6'` — Version 6 or later
- `'-v4'` — Any MATLAB version

`[r1, r2] = Simulink.saveVars(filename, Specifications)` acts as described by *Specifications* (which represents the specifications after *filename* in any of the above syntaxes) and reports what variables it has saved:

- *r1* — A cell array of strings. The strings name all variables (if any) that were saved to a MATLAB file.
- *r2* — A cell array of strings. The strings name all variables (if any) that were saved to a MAT-file.

## Tips

- If you do not need to save variables in an easily-understood form, see the `save` function.
- If you need to save only bus objects, use the `Simulink.Bus.save` function.
- If you need to save only a configuration set, use the `Simulink.ConfigSet.saveAs` method.

## Input Arguments

### filename

The name of the file or names of the files that the function creates or updates. The *filename* cannot match the name of any variable in the current workspace. The *filename* can have the suffix `.m`, but the function ignores it.

### VarNames

A variable or sequence of comma-separated variables. The function saves only the specified variables to the output file. You can use the wildcard character \* to save all variables that match a pattern. The \* matches one or more characters, including non-alphanumeric characters.

### **'-regex', RegExps**

After the keyword, a regular expression or sequence of comma-separated regular expressions. The function saves to the output file only those variables whose names match one of the expressions. See “Regular Expressions” for more information. A call to the function can specify both *VarNames* and `-regexps` *RegExps*, in that order and comma-separated.

### **UpdateOption**

Any of three keywords that control the action of the function. The possible values are:

- `'-create'` — Create a new MATLAB file (and MAT-file if needed) as directed by the *Specifications*.
- `'-update'` — Update the existing MATLAB file (and MAT-file if needed) specified by *filename* by changing only variables that match the *Specifications* and already exist in the file or files. The order of the variables in the file or files is preserved.
- `'-append'` — Update the existing MATLAB file (and MAT-file if needed) specified by *filename* by:
  - Updating variables that match the *Specifications* and already exist in the file or files, preserving the existing order in the file or files.
  - Appending variables that match the *Specifications* and do not exist in the file or files by appending the variables that match the *Specifications* to the file or files.

**Default:** `'-create'`

## Configuration

Any or all of the following options, in any order, separated by commas if more than one appears:

- '-maxnumel' *MaxNum* — Limits the number of elements saved for an array to *MaxNum*, which must be an integer between 0 and 10000. If an array is larger than that, the whole array appears in the MAT-file rather than the MATLAB script file, generating a warning. Default: 1000
- '-maxlevels' *MaxLevels* — Limits the number of levels saved for a structure or cell array to *MaxLevels*, which must be an integer between 0 and 200. If a structure or cell array is deeper than that, the whole entity appears in the MAT-file rather than the MATLAB script file, generating a warning. Default: 20
- '-textwidth' *TextWidth* — Sets the text wrap width in the MATLAB script file to *TextWidth*, which must be an integer between 32 and 256. Default: 76
- '-2dslice' — Sets two dimensions for 2-D slices that represent n-D (where n is greater than 2) arrays of char, logic, or numeric data. Using the '-2dslice' option produces more readable generated code that is consistent with how MATLAB displays n-D array data.

Simulink.saveVars uses the first two dimensions of the n-D array to specify the size of the 2-D slice, unless you supply two positive integer arguments after the -2dslice option. If you specify two integer arguments:

- The two integers must be positive.
- The two integers must be less than or equal to the number of dimensions of the n-D array.
- The second integer must be greater than the first.

---

**Note** You can use the **Simulink Preferences** pane to change the defaults for the `-maxnumel`, `-maxlevels`, `'-2dslice'`, and `-textwidth` configuration options. In the tree view section of the **Simulink Preferences** pane, select the **Variable Export Defaults** pane.

---

## MatlabVer

Specifies the MATLAB version whose syntax will be used by any MAT-file saved by the function.

- `'-v7.3'` — 7.3 or later
- `'-v7.0'` — 7.0 or later
- `'-v6'` — Version 6 or later
- `'-v4'` — Any MATLAB version

**Default:** `'-v7.3'`

## Output Arguments

### r1

A list of the names of all variables (if any) that were saved to a MATLAB file.

### r2

A list of the names of all variables (if any) that were saved to a MAT-file.

## Examples

Define some base workspace variables, then save them all to a new MATLAB file named `MyVars.m` using the default values for all input arguments except the *filename*.

```
a = 1;  
b = 2.5;  
c = 'A string';  
d = {a, b, c};  
Simulink.saveVars('MyVars');
```

## Simulink.saveVars

---

Define additional base workspace variables, then append them to the existing file `MyVars.m` without changing the values previously saved in the file:

```
K = Simulink.Parameter;
MyType = fixdt (1,16,3);
Simulink.saveVars('MyVars', '-append', 'K', 'MyType');
```

Update the variables `V1` and `V2` with their values in a MATLAB file, or for any whose value cannot be converted to MATLAB code, in a MAT-file. The file must already exist. Any array with more than 10 elements will be saved to a MAT-file that can be loaded on any version of MATLAB. The return argument `r1` lists the names of any variables saved to a MATLAB file; `r2` lists any saved to a MAT-file.

```
[r1, r2] = Simulink.saveVars('MyFile', 'V1', 'V2', '-update',
'-maxnumel', 10, '-v4');
```

Specify a 2-D slice for the output of the `my3Dtable` 3-D array. Specify that the 2-D slice expands along the first and third dimensions:

```
my3DTable = zeros(3, 4, 2, 'single');
Simulink.saveVars('mfile.m', 'my3DTable', '-2dslice', 1, 3);
```

The generated MATLAB code is:

```
my3DTable = zeros(3, 4, 2, 'single');
my3DTable (:,1,:) = single ( ...
    [1 13;
     5 17;
     9 21]);
my3DTable (:,2,:) = single( ...
    [2 14;
     6 18;
    10 22]);
my3DTable (:,3,:) = single( ...
    [3 15;
     7 19;
```

```
    11 23]);  
my3DTable(:,4,:) = single( ...  
    [4 16;  
     8 20;  
    12 24]);
```

## Limitations

The `Simulink.saveVars` function:

- Does not preserve shared references
- Ignores dynamic properties of objects
- Saves the following to the MAT-file although they could appear in the MATLAB file:
  - `fi` objects
  - `Simulink.Timeseries` and `Simulink.SimulationData.Dataset` objects
  - `Simulink.ConfigSet` objects with custom target components. (Use the `Simulink.ConfigSet` method `saveAs` instead.)

## See Also

`save` | `Simulink.Bus.save` | `Simulink.ConfigSet` | `Simulink.Bus.save`

# Simulink.sdi.addToRun

---

**Purpose** Add new simulation data to existing run

**Syntax**

```
signalIDs =  
Simulink.sdi.addToRun(runID, 'base', {varName1, ...,  
    varNameN})  
signalIDs =  
Simulink.sdi.addToRun(runID, 'model', modelNameOrHandle)  
signalIDs =  
Simulink.sdi.addToRun(runID, 'vars', var1, ..., varN)  
signalIDs =  
Simulink.sdi.addToRun(runID, 'namevalue', {Name1, ...,  
    NameN}, {Value1, ..., ValueN})
```

**Description**

signalIDs =  
Simulink.sdi.addToRun(runID, 'base', {varName1, ...,  
varNameN}) creates a run with data from the base workspace.  
{var1Name, ..., var2Name} is a cell array of strings, which are the  
names of variables in the base workspace.

signalIDs =  
Simulink.sdi.addToRun(runID, 'model', modelNameOrHandle)  
creates a run with the model simulation data, as specified on the **Data  
Import/Export** pane of the Configuration Parameters dialog box.  
modelNameOrHandle is a string, specifying the model name, or a  
model handle. When calling this function, the model must be open.

signalIDs =  
Simulink.sdi.addToRun(runID, 'vars', var1, ..., varN) creates a  
run with data stored as variables, var1, ..., varN. These variables are  
assumed to be in the calling workspace.

signalIDs =  
Simulink.sdi.addToRun(runID, 'namevalue', {Name1, ...,  
NameN}, {Value1, ..., ValueN}) creates a run from simulation data,  
Value1, and provides the ability to specify a name, Name1, for  
the data in the run.

## Input Arguments

### runID

Run ID, a unique number identifying a run in the Simulation Data Inspector.

## Output Arguments

### signalIDs

Array of numbers where each element is a unique ID for a signal added to the run.

## Examples

Add simulation data from the base workspace:

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample','SaveOutput','on','SaveFormat', ...
            'StructureWithTime','ReturnWorkspaceOutputs','on');
```

```
% Create a Simulation Data Inspector run
runID = Simulink.sdi.createRun('My Run')
```

```
% Add simulation output from the base workspace
Simulink.sdi.addToRun(runID,'base',{'simOut'});
```

```
% See the results in Simulation Data Inspector
Simulink.sdi.view;
```

Add simulation data as specified in a model:

```
sldemo_absbrake;
```

```
% Run simulation using the Simulink menu or the toolbar.
% Create a Data Inspector run
runID = Simulink.sdi.createRun('My Run');
Simulink.sdi.addToRun(runID, 'model', 'sldemo_absbrake');
```

```
% See the results in Simulation Data Inspector
Simulink.sdi.view;
```

# Simulink.sdi.addToRun

---

Add simulation data by passing variables directly to `Simulink.sdi.addToRun`:

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample','SaveOutput','on','SaveFormat', ...
            'StructureWithTime','ReturnWorkspaceOutputs','on');

% Create a Simulation Data Inspector run
runID = Simulink.sdi.createRun('My Run');
Simulink.sdi.addToRun(runID,'vars',simOut);

% See the results in Simulation Data Inspector
Simulink.sdi.view;
```

Add simulation data and name the data:

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample','SaveOutput','on', ...
            'SaveFormat','StructureWithTime', ...
            'ReturnWorkspaceOutputs','on');

% Create a Simulation Data Inspector run
runID = Simulink.sdi.createRun('My Run');
% Name simulation output passed to Simulink.sdi.addToRun
Simulink.sdi.addToRun(runID, 'namevalue', {'MyData'}, {simOut});

% See the results in Simulation Data Inspector
Simulink.sdi.view;
```

## See Also

[Simulink.sdi.Run](#) | [Simulink.sdi.createRun](#) | [Simulink.sdi.view](#)

## How To

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Clear all data from Simulation Data Inspector
<b>Syntax</b>	<code>Simulink.sdi.clear</code>
<b>Description</b>	<code>Simulink.sdi.clear</code> clears all run data from the Simulation Data Inspector.

**Examples** Remove all runs from the Simulation Data Inspector.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample','SaveOutput','on', ...
            'SaveFormat','StructureWithTime');
```

```
% Create a Simulation Data Inspector run
runID = Simulink.sdi.createRun('First Run','base',{'simOut'});
```

```
Simulink.sdi.clear;
```

```
% The number of runs is now zero.
runCount = Simulink.sdi.getRunCount()
```

# Simulink.sdi.close

---

**Purpose** Close Simulation Data Inspector

**Syntax** `Simulink.sdi.close`  
`Simulink.sdi.close(filename)`

**Description** `Simulink.sdi.close` closes the Simulation Data Inspector. It returns an error if there is unsaved data.

`Simulink.sdi.close(filename)` closes the Simulation Data Inspector and saves the data in the specified filename.

**Input Arguments** **filename - Filename to save data**  
`string` (default)

Filename to save data, specified as a string. The string must fully specify the target file to save.

**Examples** **Close Simulation Data Inspector and Save Data**

Log data, simulate a model, view the results, close the Simulation Data Inspector, and save the data.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on');

% Create a Data Inspector run
runID = Simulink.sdi.createRun('My Run');
Simulink.sdi.addToRun(runID, 'base', {'simOut'});

% See the results in Simulation Data Inspector
Simulink.sdi.view;

% Close the Simulation Data Inspector and save the data
Simulink.sdi.close('savedData.mat');
```

The data file, `savedData.mat`, is saved in the current working directory.

## **Related Examples**

- “Record and Inspect Signal Data Programmatically”

# Simulink.sdi.compareRuns

---

**Purpose** Compare signal data between two simulation runs

**Syntax**

```
diff = Simulink.sdi.compareRuns(runID1,runID2)
diff =
Simulink.sdi.compareRuns(runID1,runID2,alignmentMethods)
```

**Description** `diff = Simulink.sdi.compareRuns(runID1,runID2)` compares the matched signals between two simulation runs and returns their differences in a `Simulink.sdi.DiffRunResult` object.

```
diff =
Simulink.sdi.compareRuns(runID1,runID2,alignmentMethods)
```

compares the matched signals between two simulation runs using specified alignment algorithms and returns their differences in a `Simulink.sdi.DiffRunResult` object.

## Input Arguments

### **runID1**

Run ID, a unique number identifying the first run for comparison.

### **runID2**

Run ID, a unique number identifying the second run for comparison.

### **alignmentMethods**

An array specifying three alignment algorithms. Data is aligned by the value of the first element of the array, then by the second element, and then by the third element. Only the first three values in the array are considered. The array takes the following values.

Value	Align By
<code>Simulink.sdi.AlignType.BlockPath</code>	Path to the source block for the signal
<code>Simulink.sdi.AlignType.DataSource</code>	Data name ( <code>logout.Stick.Data</code> )
<code>Simulink.sdi.AlignType.SID</code>	“Simulink Identifier” on page 8-2
<code>Simulink.sdi.AlignType.SignalName</code>	Signal name for the data ( <code>Stick</code> )

## Output Arguments

### diff

Instance of `Simulink.sdi.DiffRunResult` that describes the differences between two simulation runs.

## Examples

Compare two simulation runs using the specified alignment algorithms. The function `Simulink.sdi.compareRuns` returns a `Simulink.sdi.DiffRunResult` object containing the comparison results.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on',...
            'SaveFormat', 'StructureWithTime',...
            'ReturnWorkspaceOutputs', 'on');

% Create a run and get signal IDs
run1ID = Simulink.sdi.createRun('My Run', 'namevalue',...
                               {'simOut'}, {simOut});

% Get and change one of the parameters of the model
mws = get_param('slexAircraftExample','modelworkspace');
wsMq = mws.evalin('Mq');
mws.assignin('Mq', 3*wsMq);

% Simulate again
simOut = sim('slexAircraftExample', 'SaveOutput','on',...
            'SaveFormat', 'StructureWithTime',...
            'ReturnWorkspaceOutputs', 'on');

% Create another run and get signal IDs
run2ID = Simulink.sdi.createRun('New Run', 'namevalue',...
                               {'simOut'}, {simOut});

% Define the alignment algorithms for comparison.
% Align the data first by data name, then by block path, then by SID.
algorithms = [Simulink.sdi.AlignType.DataSource
             Simulink.sdi.AlignType.BlockPath
```

# Simulink.sdi.compareRuns

---

```
        Simulink.sdi.AlignType.SID];

% Compare the two runs
difference = Simulink.sdi.compareRuns(run1ID, run2ID, algorithms);

% Number of comparisons in result
numComparisons = difference.count;

% Iterate through each result element
for i = 1:numComparisons
    % Get result at index i
    resultAtIdx = difference.getResultByIndex(i);

    % Get signal IDs for each comparison result
    sig1 = resultAtIdx.signalID1;
    sig2 = resultAtIdx.signalID2;

    % Display if signals match or not
    displayStr = 'Signals with IDs %d and %d %s \n';
    if resultAtIdx.match
        fprintf(displayStr, sig1, sig2, 'match');
    else
        fprintf(displayStr, sig1, sig2, 'do not match');
    end

    % Plot tolerance and difference results in a figure
    f1 = figure;
    plot(resultAtIdx.tol, 'Color', 'r');
    hold on;
    plot(resultAtIdx.diff, 'Color', 'g');
    legend('Tolerance', 'Difference');
end
```

---

Compare normal mode simulation with code generation results for model `slexAircraftExample`.

```
% Load the model 'slexAircraftExample'
load_system('slexAircraftExample');

% Configure model "slexAircraftExample" for logging
set_param('slexAircraftExample', 'SolverType', 'Fixed-Step', 'SaveOutput','on',...
         'SaveFormat', 'StructureWithTime', 'ReturnWorkspaceOutputs','on');

% CD to temporary directory and build
cd(tempdir);
rtwbuild('slexAircraftExample');

% Run the executable
if ispc
    system('slexAircraftExample');
elseif unix
    system('./slexAircraftExample');
end

% Create a run using the slexAircraftExample.mat placed in the current directory
[run1ID, ~, ~] = Simulink.sdi.createRun('My Run','file','slexAircraftExample.mat');

% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on',...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on',...
            'SolverType', 'Fixed-Step');

% Create another run from the simulation
[run2ID, ~, ~] = Simulink.sdi.createRun('My Run', 'namevalue',...
                                       {'MyData'}, {simOut});

% Compare the two runs
difference = Simulink.sdi.compareRuns(run1ID, run2ID);

% Number of comparisons in result
numComparisons = difference.count;
```

# Simulink.sdi.compareRuns

---

```
% Iterate through each result element
for i = 1:numComparisons
    % Get result at index i
    resultAtIdx = difference.getResultByIndex(i);

    % Get signal IDs for each comparison result
    sig1 = resultAtIdx.signalID1;
    sig2 = resultAtIdx.signalID2;

    % Display if signals match or not
    displayStr = 'Signals with IDs %d and %d %s \n';
    if resultAtIdx.match
        fprintf(displayStr, sig1, sig2, 'match. ');
    else
        fprintf(displayStr, sig1, sig2, 'do not match. ');
    end

    % Plot tolerance and difference results in a figure
    f1 = figure;
    plot(resultAtIdx.tol, 'Color', 'r');
    hold on;
    plot(resultAtIdx.diff, 'Color', 'g');
    legend('Tolerance', 'Difference');
end
```

## See Also

[Simulink.sdi.createRun](#) | [Simulink.sdi.DiffRunResult](#)

## How To

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Compare data from two signals
<b>Syntax</b>	<code>diff = Simulink.sdi.compareSignals(signalID1,signalID2)</code>
<b>Description</b>	<code>diff = Simulink.sdi.compareSignals(signalID1,signalID2)</code> compares two signals and returns the results in a <code>Simulink.sdi.DiffSignalsResult</code> object.
<b>Input Arguments</b>	<p><b>signalID1</b> Signal ID, a unique number identifying the first signal for comparison.</p> <p><b>signalID2</b> Signal ID, a unique number identifying the second signal for comparison.</p>
<b>Output Arguments</b>	<p><b>diff</b> <code>Simulink.sdi.diffSignalsResult</code> object containing the results of the comparison.</p>
<b>Examples</b>	<p>Call <code>Simulink.sdi.createRun</code> to get signal IDs for a simulation run in the Simulation Data Inspector. The function <code>Simulink.sdi.compareSignals</code> returns a <code>Simulink.sdi.DiffSignalResult</code> object containing the result data of the comparison. From this object you can determine if the signals are different.</p> <p>Comparing two signals:</p> <pre>% Configure model "slexAircraftExample" for logging and simulate simOut = sim('slexAircraftExample', 'SaveOutput','on', ...             'SaveFormat', 'StructureWithTime', ...             'ReturnWorkspaceOutputs','on');  % Create a Simulation Data Inspector run and get signal IDs [-, -, signalIDs] = Simulink.sdi.createRun('My Run','namevalue',{'MyData'},{simOut});</pre>

# Simulink.sdi.compareSignals

---

```
sig1 = signalIDs(1);
sig2 = signalIDs(2);

% Compare two signals, which returns results in instance of Simulink.sdi.DiffSignalResult
diff = Simulink.sdi.compareSignals(sig1, sig2);

% Find if the signal data match
match = diff.match;

% Get the tolerance used in Simulink.sdi.compareSignals
tolerance = diff.tol;
```

Comparing signals from two different runs:

```
% Load the model 'slexAircraftExample'
load_system('slexAircraftExample');

% Configure model "slexAircraftExample" for logging
set_param('slexAircraftExample', 'SolverType', 'Fixed-Step', 'SaveOutput', 'on', ...
         'SaveFormat', 'StructureWithTime', 'ReturnWorkspaceOutputs', ...
         'on');
```

% CD to temporary directory and build

```
cd(tempdir);
rtwbuild('slexAircraftExample');
```

% Run the executable

```
if ispc
    system('slexAircraftExample');
elseif unix
    system('./slexAircraftExample');
end
```

% Create a Data Inspector run using slexAircraftExample.mat created in the current  
% directory

```
[~, ~, signalIDs] = Simulink.sdi.createRun('My Run', 'file', 'slexAircraftExample.mat');

% Get first signal id to compare
sig1 = signalIDs(1);

% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
             'SaveFormat', 'StructureWithTime', ...
             'ReturnWorkspaceOutputs', 'on');

% Create a Data Inspector run and get signal IDs
[~, ~, signalIDs] = Simulink.sdi.createRun('My Run', 'namevalue',...
                                           {'MyData'}, {simOut});

% Get second signal id to compare
sig2 = signalIDs(1);

% compare two signals
result = Simulink.sdi.compareSignals(sig1, sig2);
if result.match
    disp('****The signals match****');
else
    disp('****The signals did not match****');
end

% Plot results in a figure
plot(result.tol, 'Color', 'r');
hold on;
plot(result.diff, 'Color', 'g');
legend('Tolerance', 'Difference');
```

## See Also

[Simulink.sdi.createRun](#) | [Simulink.sdi.DiffSignalResult](#)

## How To

- “Record and Inspect Signal Data Programmatically”

# Simulink.sdi.copyRun

---

**Purpose** Create copy of run including simulation output data

**Syntax**

```
runIDcopy = Simulink.sdi.copyRun(runID)
[runIDcopy, runIndex] = Simulink.sdi.copyRun(runID)
[runIDcopy, runIndex, signalIDs] =
Simulink.sdi.copyRun(runID)
```

**Description**

`runIDcopy = Simulink.sdi.copyRun(runID)` copies the run associated with `runID` and returns a run ID, `runIDcopy`, associated with the new run. The new run contains all of the simulation output data and metadata from the original run.

`[runIDcopy, runIndex] = Simulink.sdi.copyRun(runID)` copies the run associated with `runID` and returns the run ID, `runIDcopy`, and the `runIndex` for the new run.

`[runIDcopy, runIndex, signalIDs] = Simulink.sdi.copyRun(runID)` copies the run associated with `runID` and returns the run ID, run index, and array of new signal IDs, `signalIDs`, for signals in the new run.

**Input Arguments**

**runID**  
Run ID, a unique number identifying a run in the Simulation Data Inspector.

**Output Arguments**

**runIDcopy**  
Run ID, a unique number identifying the copied run.

**runIndex**  
Number representing the new run's index to the list of runs currently in the Simulation Data Inspector.

**signalIDs**  
Vector of numbers, where each element is a unique ID for a signal in this run. The signal IDs are different in the new run.

## Examples

Copy a `Simulink.sdi.Run` object representing a run currently in the Simulation Data Inspector.

```
% Configure model 'slexAircraftExample' for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput', 'on', ...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on');

% Create a Simulation Data Inspector run
runID = Simulink.sdi.createRun('First Run', 'base', {'simOut'});

[newRunID, runIndex, signalIDs] = Simulink.sdi.copyRun(runID);

% See the results in Simulation Data Inspector
Simulink.sdi.view;
```

## See Also

[Simulink.sdi.createRun](#) | [Simulink.sdi.view](#)

## How To

- “Record and Inspect Signal Data Programmatically”

# Simulink.sdi.createRun

---

**Purpose** Create run in Simulation Data Inspector

**Syntax**

```
runID = Simulink.sdi.createRun()  
runID = Simulink.sdi.createRun(runName)  
runID =  
Simulink.sdi.createRun(runName, 'base', {varName1, ...,  
    varNameN})  
runID =  
Simulink.sdi.createRun(runName, 'model', modelNameOrHandle)  
runID = Simulink.sdi.createRun(runName, 'vars',  
var1, ..., varN)  
runID =  
Simulink.sdi.createRun(runName, 'namevalue', {varName1, ...,  
    varNameN}, {varValue1, ..., varValueN})  
runID = Simulink.sdi.createRun(runName, 'file', fileName)  
[runID, runIndex] = Simulink.sdi.createRun(...)  
[runID, runIndex, signalIDs] = Simulink.sdi.createRun(...)
```

**Description** runID = Simulink.sdi.createRun() creates an empty unnamed run in the Simulation Data Inspector and returns the corresponding run ID.

runID = Simulink.sdi.createRun(runName) creates an empty run named runName in the Simulation Data Inspector repository and returns the corresponding run ID.

runID = Simulink.sdi.createRun(runName, 'base', {varName1, ..., varNameN}) creates a run with data from the base workspace. var1Name to var2Name are names of variables in the base workspace.

runID = Simulink.sdi.createRun(runName, 'model', modelNameOrHandle) creates a run with the model simulation output data, as specified on the **Data Import/Export** pane of the Configuration Parameters dialog box. modelNameOrHandle is a string specifying the model name of a model handle. When calling this function, the model must be open.

`runID = Simulink.sdi.createRun(runName, 'vars', var1, ..., varN)` creates a run with data stored in variables, `var1, ..., varN`. These variables must be in the calling workspace.

`runID = Simulink.sdi.createRun(runName, 'namevalue', {varName1, ..., varNameN}, {varValue1, ..., varValueN})` creates a run from simulation data. `varValue1` contains the data and `varName1` specifies a name for the data.

`runID = Simulink.sdi.createRun(runName, 'file', fileName)` creates a run with data extracted from a MAT-file, `fileName`.

`[runID, runIndex] = Simulink.sdi.createRun(...)` creates a run according to the input arguments specification and returns the run ID and the run index to the run currently stored in the Simulation Data Inspector.

`[runID, runIndex, signalIDs] = Simulink.sdi.createRun(...)` creates a run according to the input arguments specification and returns the run ID, the run index, and the signal IDs. The signal IDs are stored in a vector of numbers, where each element is a unique signal ID for each signal in the new run.

## Tips

- Before calling `Simulink.sdi.createRun` with either `'base'` or `'model'` as an input argument, you must configure the model for logging and simulate the model.
- When you create and add a run, the Simulation Data Inspector maintains a list of these runs. The first run in the list is given a `runIndex` of 1. If you delete a run from the Simulation Data Inspector, the subsequent runs move up the list and each `runIndex` changes. However, the run IDs remain the same.

## Input Arguments

### **runName**

A string specifying a name for the run.

# Simulink.sdi.createRun

---

## Output Arguments

### **runID**

Run ID, a unique number identifying a run in the Simulation Data Inspector.

### **runIndex**

Number representing an index to the list of runs currently in the Simulation Data Inspector.

### **signalIDs**

Vector of numbers, where each element is a unique ID for a signal in a run.

## Examples

### **Empty Run With No Name**

Create an empty run in the Simulation Data Inspector.

```
runID = Simulink.sdi.createRun();
```

### **Empty Run With a Name**

Create an empty run in the Simulation Data Inspector and give it a name.

```
runID = Simulink.sdi.createRun('My Run');
```

### **Simulation Output Data in the Base Workspace**

Create a run in the Simulation Data Inspector from output data in the base workspace.

Configure the model, `slexAircraftExample`, for logging and simulate.

```
simOut = sim('slexAircraftExample', 'SaveOutput', 'on', ...  
            'SaveFormat', 'StructureWithTime', ...  
            'ReturnWorkspaceOutputs', 'on');
```

Create a Simulation Data Inspector run from the simulation output data in the base workspace.

```
Simulink.sdi.createRun('My Run','base',{'simOut'});
```

Open the Simulation Data Inspector tool to view the data.

```
Simulink.sdi.view;
```

## Simulation Output Data for a Model

Create a run from simulation output data as specified in the model. The model must be open to use this function signature.

Open the model `sldemo_absbrake`.

```
sldemo_absbrake;
```

Run the simulation using the model diagram menu or the toolbar. The model is already configured for signal logging.

Create a Simulation Data Inspector run named, `My Run`, using simulation output data from the model.

```
Simulink.sdi.createRun('My Run','model','sldemo_absbrake');
```

Open the Simulation Data Inspector tool to view the data.

```
Simulink.sdi.view;
```

A run named, `My Run`, appears in the Simulation Data Inspector.

## Passed Variables

Create a run in the Simulation Data Inspector by directly passing data through variables.

Configure model `slexAircraftExample` for logging and simulate.

```
simOut = sim('slexAircraftExample','SaveOutput','on', ...  
            'SaveFormat','StructureWithTime', ...
```

# Simulink.sdi.createRun

---

```
'ReturnWorkspaceOutputs','on');
```

Create a Simulation Data Inspector run named, My Run, by passing the simulation output variable, simOut.

```
Simulink.sdi.createRun('My Run','vars',simOut);
```

Open the Simulation Data Inspector tool to view the data.

```
Simulink.sdi.view;
```

A run named, My Run, appears in the Simulation Data Inspector.

## **Include Name of Simulation Data in the Run**

Create a Simulation Data Inspector run and provide a name for the passed data.

Configure model slxAircraftExample for logging and simulate.

```
simOut = sim('slxAircraftExample','SaveOutput','on', ...  
            'SaveFormat','StructureWithTime', ...  
            'ReturnWorkspaceOutputs','on');
```

Create a Simulation Data Inspector run named, My Run, by passing the simulation output variable, simOut and a name for the data, MyData.

```
Simulink.sdi.createRun('My Run', 'namevalue', {'MyData'}, {simOut});
```

Open the Simulation Data Inspector tool to view the data.

```
Simulink.sdi.view;
```

A run named, My Run, appears in the Simulation Data Inspector.

## **Logged MAT-file of a Code Generation Build (Requires Simulink Coder)**

Create a run in the Simulation Data Inspector from data in a MAT-file, which includes data from a code generation build.

Load the model `slexAircraftExample`.

```
load_system('slexAircraftExample');
```

Configure the model for logging and simulate.

```
set_param('slexAircraftExample','SolverType','Fixed-Step',...
         'SaveOutput','on',...
         'SaveFormat','StructureWithTime', ...
         'ReturnWorkspaceOutputs','on');
```

Build the model to a temporary directory.

```
cd(tempdir);
rtwbuild('slexAircraftExample');
```

Run the executable.

```
if ispc
    system('slexAircraftExample');
elseif unix
    system('./slexAircraftExample');
end
```

A MAT-file is generated in the current directory.

Create a Simulation Data Inspector run using the data in the MAT-file.

```
Simulink.sdi.createRun('My Run','file','slexAircraftExample.mat');
```

Open the Simulation Data Inspector tool to view the data.

```
Simulink.sdi.view;
```

A run named, `My Run`, appears in the Simulation Data Inspector.

## See Also

[Simulink.sdi.Run](#) | [Simulink.sdi.getRun](#) | [Simulink.sdi.deleteRun](#)

## How To

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Delete run from Simulation Data Inspector
<b>Syntax</b>	<code>Simulink.sdi.deleteRun(runID)</code>
<b>Description</b>	<code>Simulink.sdi.deleteRun(runID)</code> deletes a run associated with the run ID in the Simulation Data Inspector. Deleting the run removes all signal data included in the run. The Simulation Data Inspector maintains a list of runs. After deleting a run, the subsequent runs move up the list and the run index for each run changes. However, the run IDs remain the same.
<b>Input Arguments</b>	<b>runID</b> Run ID, a unique number identifying a run.
<b>Examples</b>	<p>Remove a run from the Simulation Data Inspector.</p> <pre>% Configure model 'slexAircraftExample' for logging and simulate simOut = sim('slexAircraftExample','SaveOutput','on', ...             'SaveFormat','StructureWithTime');  % Create a Simulation Data Inspector run runID = Simulink.sdi.createRun('First Run','base',{'simOut'});  Simulink.sdi.deleteRun(runID);</pre>
<b>See Also</b>	<a href="#">Simulink.sdi.Run</a>   <a href="#">Simulink.sdi.createRun</a>   <a href="#">Simulink.sdi.copyRun</a>   <a href="#">Simulink.sdi.clear</a>
<b>How To</b>	<ul style="list-style-type: none"><li>“Record and Inspect Signal Data Programmatically”</li></ul>

# Simulink.sdi.getRun

---

**Purpose** Return `Simulink.sdi.Run` object containing simulation output data

**Syntax** `runObj = Simulink.sdi.getRun(runID)`

**Description** `runObj = Simulink.sdi.getRun(runID)` returns a handle to the `Simulink.sdi.Run` object for the run corresponding to `runID` in the Simulation Data Inspector.

**Input Arguments** **runID**  
Run ID, a unique number identifying a run in the Simulation Data Inspector.

**Output Arguments** **runObj**  
A handle to the `Simulink.sdi.Run` object containing the signal data and metadata.

**Examples** Get the `Simulink.sdi.Run` object for a run in the Simulation Data Inspector.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample','SaveOutput','on',...
            'SaveFormat','StructureWithTime',...
            'ReturnWorkspaceOutputs','on');

% Create a Simulation Data Inspector run
[runID, runIndex, signalIDs] = Simulink.sdi.createRun('My Run','base',{simOut});

runObj = Simulink.sdi.getRun(runID);
```

**See Also** `Simulink.sdi.Run` | `Simulink.sdi.createRun`

**How To** • “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Return number of runs in Simulation Data Inspector
<b>Syntax</b>	<code>runCount = Simulink.sdi.getRunCount()</code>
<b>Description</b>	<code>runCount = Simulink.sdi.getRunCount()</code> returns the number of runs that are in the Simulation Data Inspector.
<b>Output Arguments</b>	<b>runCount</b> Number of runs that exist in the Simulation Data Inspector.
<b>Examples</b>	Call <code>Simulink.sdi.getRunCount</code> to get the number of runs currently in the Simulation Data Inspector.  <code>runCount = Simulink.sdi.getRunCount();</code>
<b>See Also</b>	<code>Simulink.sdi.Run</code>   <code>Simulink.sdi.createRun</code>

# Simulink.sdi.getRunIDByIndex

---

**Purpose** Return the run ID corresponding to run index

**Syntax** `runID = Simulink.sdi.getRunIDByIndex(runIndex)`

**Description** `runID = Simulink.sdi.getRunIDByIndex(runIndex)` returns the run ID for the run corresponding to the run index.

**Input Arguments**

**runIndex**  
Number representing an index to the list of runs currently in the Simulation Data Inspector.

**Output Arguments**

**runID**  
Run ID, a unique number identifying a run in the Simulation Data Inspector.

**Examples** Get the run IDs for all runs currently in the Simulation Data Inspector.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample','SaveOutput','on', ...
            'SaveFormat','StructureWithTime', ...
            'ReturnWorkspaceOutputs','on');

% Create a Simulation Data Inspector run
[runID, runIndex, signalIDs] = Simulink.sdi.createRun('Run1','base',{'simOut'});

% Get the ID of the previously created run by index
runID2 = Simulink.sdi.getRunIDByIndex(runIndex);

% Both runID and runID2 reference the same run and should be equal
isequal(runID, runID2)
```

**See Also** `Simulink.sdi.createRun` | `Simulink.sdi.getRunCount` | `Simulink.sdi.isValidRunID`

**How To**

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Return <code>Simulink.sdi.Signal</code> object for signal in Simulation Data Inspector
<b>Syntax</b>	<code>signal = Simulink.sdi.getSignal(signalID)</code>
<b>Description</b>	<code>signal = Simulink.sdi.getSignal(signalID)</code> returns the <code>Simulink.sdi.Signal</code> object for the signal corresponding to the signal ID. The <code>Simulink.sdi.Signal</code> object manages the signal's time series data and metadata.
<b>Input Arguments</b>	<b>signalID</b> Signal ID, a unique number identifying a signal in the Simulation Data Inspector.
<b>Output Arguments</b>	<b>signal</b> A handle to the <code>Simulink.sdi.Signal</code> object.
<b>Examples</b>	Get the <code>Simulink.sdi.Signal</code> object for a signal in the Simulation Data Inspector. With the signal object you can modify its comparison and visualization properties.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample','SaveOutput','on','SaveFormat','StructureWithTime');

% Create a Simulation Data Inspector run
[runID, runIndex, signalIDs] = Simulink.sdi.createRun('My Run','base',{simOut})

signalObj = Simulink.sdi.getSignal(signalIDs(1));

% Specify the comparison and visualization signal properties
signalObj.absTol = .5;
signalObj.syncMethod = 'intersection';
signalObj.interpMethod = 'linear';
signalObj.lineColor = [1,0.4,0.6];
signalObj.lineDashed = '-';
```

# Simulink.sdi.getSignal

---

```
signalObj.checked = true;  
  
% view the signals in Simulation Data Inspector GUI  
Simulink.sdi.view
```

## See Also

[Simulink.sdi.Signal](#) | [Simulink.sdi.Run](#) |  
[Simulink.sdi.createRun](#) | [Simulink.sdi.getRun](#)

## How To

- “Record and Inspect Signal Data Programmatically”

**Purpose** Return location for storing simulation data

**Syntax** `source = Simulink.sdi.getSource()`

**Description** `source = Simulink.sdi.getSource()` return the location of the Simulation Data Inspector repository for storing simulation data. Call this function before running multiple simulations in a `parfor` loop.

**Output Arguments** **source**  
Location of the Simulation Data Inspector repository.

## Examples **Record Data During Parallel Simulations**

This example shows how to run multiple simulations in a `parfor` loop and record each run in the Simulation Data Inspector tool.

Open the Simulation Data Inspector.

```
Simulink.sdi.view;
```

Load the model.

```
mdl = 'slexAircraftExample';  
load_system(mdl);
```

Get the location of the simulation data repository.

```
src = Simulink.sdi.getSource();
```

Start a parallel pool with 4 workers.

```
parpool(4);
```

Run the simulation in a `parfor` loop.

```
parfor i=1:4  
    % Set the location of the simulation data repository of this  
    % worker to be the same for aggregating the data
```

# Simulink.sdi.getSource

---

```
Simulink.sdi.setSource(src);
% Run the simulation
simOut = sim mdl, 'SaveOutput', 'on', ...
         'SaveFormat', 'StructureWithTime', ...
         'ReturnWorkspaceOutputs', 'on');
% Create a simulation run in the Simulation Data Inspector
Simulink.sdi.createRun(['Run' num2str(i)], 'namevalue', ...
                      {'simout'}, {simOut});
end
```

Delete the current parallel pool and close all of the models.

```
parpool close;
bdclose all;
```

Refresh the Simulation Data Inspector.

```
Simulink.sdi.refresh();
```

## See Also

[Simulink.sdi.setSource](#) | [Simulink.sdi.refresh](#)

**Purpose** Determine if run ID is valid

**Syntax** `isValid = Simulink.sdi.isValidRunID(runID)`

**Description** `isValid = Simulink.sdi.isValidRunID(runID)` returns true if the run ID, `runID`, corresponds to a run currently in the Simulation Data Inspector. Otherwise, it returns false.

**Input Arguments** **runID**  
Run ID, a unique number identifying a run in the Simulation Data Inspector.

**Output Arguments** **isValid**  
Boolean value: true, if the run exists; false, otherwise.

**Examples** Before comparing the simulation data of two runs, you can verify that the run IDs are valid.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on');

% Create a Data Inspector run
run1ID = Simulink.sdi.createRun('First Run', 'base', {'simOut'});
run2ID = Simulink.sdi.createRun('Second Run', 'base', {'simOut'});

% Check if run IDs are valid in Simulation Data Inspector
run1ID_valid = Simulink.sdi.isValidRunID(run1ID);
run2ID_valid = Simulink.sdi.isValidRunID(run2ID);

if run1ID_valid & run2ID_valid
% Compare two runs
    difference = Simulink.sdi.compareRuns(run1ID, run2ID);
end
```

# Simulink.sdi.isValidRunID

---

## See Also

`Simulink.sdi.Run` | `Simulink.sdi.createRun` |  
`Simulink.sdi.compareRuns`

## How To

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Load saved Simulation Data Inspector session
<b>Syntax</b>	<code>Simulink.sdi.load(fileName)</code>
<b>Description</b>	<code>isValidSDIMatFile = Simulink.sdi.load(fileName)</code> loads the runs, signals, tolerances, signal selections, and the saved view from a MAT-file, <code>fileName</code> . You can include a full or partial path in <code>fileName</code> .
<b>Input Arguments</b>	<b>fileName</b> A string specifying the file and optionally a full or partial path.
<b>Output Arguments</b>	<b>isValidSDIMatFile</b> Boolean value specifying whether the file is a valid Simulation Data Inspector MAT-file.
<b>Examples</b>	<p>Load a previous Simulation Data Inspector session saved to a MAT-file.</p> <pre>% Configure model "slexAircraftExample" for logging and simulate simOut = sim('slexAircraftExample', 'SaveOutput','on', ...             'SaveFormat', 'StructureWithTime', ...             'ReturnWorkspaceOutputs', 'on');  % Create a run in the Simulation Data Inspector runID = Simulink.sdi.createRun('My Run','base',{simOut});  % Save the current Simulation Data Inspector session Simulink.sdi.save('my_runs.mat');  % Clear all data from the Simulation Data Inspector Simulink.sdi.clear;  % Import saved MAT-file into the Simulation Data Inspector Simulink.sdi.load('my_runs.mat');</pre>

# Simulink.sdi.load

---

```
% See the results in Simulation Data Inspector  
Simulink.sdi.view;
```

**Alternatives** In the Simulation Data Inspector tool, to load a saved session, select **File > Import Data** and enter the name for the MAT-file.

**See Also** [Simulink.sdi.createRun](#) | [Simulink.sdi.save](#) | [Simulink.sdi.view](#)

**How To**

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Refresh Simulation Data Inspector
<b>Syntax</b>	<code>Simulink.sdi.refresh</code>
<b>Description</b>	<code>Simulink.sdi.refresh</code> refresh the Simulation Data Inspector repository and the tool.

## Examples **Record Data During Parallel Simulations**

This example shows how to run multiple simulations in a `parfor` loop and record each run in the Simulation Data Inspector tool.

Open the Simulation Data Inspector.

```
Simulink.sdi.view;
```

Load the model.

```
mdl = 'slexAircraftExample';  
load_system(mdl);
```

Get the location of the simulation data repository.

```
src = Simulink.sdi.getSource();
```

Start a parallel pool with 4 workers.

```
parpool(4);
```

Run the simulation in a `parfor` loop.

```
parfor i=1:4  
    % Set the location of the simulation data repository of this  
    % worker to be the same for aggregating the data  
    Simulink.sdi.setSource(src);  
    % Run the simulation  
    simOut = sim(mdl, 'SaveOutput', 'on', ...  
                'SaveFormat', 'StructureWithTime', ...  
                'ReturnWorkspaceOutputs', 'on');
```

# Simulink.sdi.refresh

---

```
        % Create a simulation run in the Simulation Data Inspector
        Simulink.sdi.createRun(['Run' num2str(i)], 'namevalue', ...
                               {'simout'}, {simOut});
    end
```

Delete the current parallel pool and close all of the models.

```
parpool close;
bdclose all;
```

Refresh the Simulation Data Inspector.

```
Simulink.sdi.refresh();
```

## See Also

[Simulink.sdi.getSource](#) | [Simulink.sdi.setSource](#)

**Purpose** Generate report from Simulation Data Inspector tool

**Syntax**  
`Simulink.sdi.report()`  
`Simulink.sdi.report(Name,Value)`

**Description** `Simulink.sdi.report()` creates a report of the current view and data in the Inspect Signals tab in the Simulation Data Inspector.

`Simulink.sdi.report(Name,Value)` creates a report using the parameter `Name`, `Value` pairs, which specifies the information to include in the report.

## Input Arguments

### Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

#### 'ReportToCreate'

Specify which Simulation Data Inspector tab view to include in the report

Value	Description
'Inspect Signals' (default)	Information in the Inspect Signals tab view
'Compare Signals'	Information in the Compare Signals tab view
'Compare Runs'	Information in the Compare Runs tab view

**Default:** 'Inspect Signals'

#### 'ReportOutputFolder'

# Simulink.sdi.report

---

MATLAB string specifying the location of the generated report.

**Default:** <current working folder>/slprj/sdi

## 'ReportOutputFile'

MATLAB string specifying the report file name.

**Default:** 'SDI\_report.html'

## 'PreventOverwritingFile'

Boolean value. If the report file exists and the value is true, then the report generator increments the file name. If false, the report generator overwrites the report file, if it exists.

**Default:** true

## 'ColumnsToReport'

Matrix specifying values from the enumeration class, `Simulink.sdi.SignalMetaData`, which lists all signal metadata available in the Simulation Data Inspector. For example, to include the **Run** and **Synchronization Method** columns in the Compare Signals report, create a variable `signal_metadata`:

```
signal_metadata = [Simulink.sdi.SignalMetaData.Run, Simulink.sdi.SignalMetaData.SyncMethod];
```

Table Columns available for Inspect Signals and Compare Signals tabs:

Enumeration Element	Table Column Description
BlockPath (default)	Block path
SignalName (default)	Signal Name
Line (default)	Line style
AbsTol (default)	Positive number (user-specified)
RelTol (default)	Positive number (user-specified)

Enumeration Element	Table Column Description
SyncMethod	Method to align time vector: <b>union, intersection, uniform</b> (user-specified)
DataSource	String signifying the source of data ( <code>logout.Stick.Data</code> )
TimeSeriesRoot	String signifying the name of the Simulink.Timeseries object ( <code>logout.Stick.Time</code> )
TimeSource	String signifying the array containing the time data
InterpMethod	Method to align data: <b>zoh, linear</b> (user-specified)
Port	Index of the output port that emits the signal logged
Dimensions	Number of dimensions of the signal
Channel	Channel of matrix data
Run	Name of a simulation run
Model	Model name for the signal data
SID	“Simulink Identifier” on page 8-2

Table columns available for the Compare Run tab:

Value	Description
Result (default)	Result of the comparison for the signal across the specified runs
AbsTo11 (default)	Absolute tolerance
RelTo11 (default)	Relative tolerance

Value	Description
AlignedBy (default)	Metadata used to align signal data between simulation runs
LinkToPlot (default)	Link to a plot of each comparison result
BlockPath1	Block path for signal from first run
BlockPath2	Block path for signal from second run
SignalName1	Signal name from first run
SignalName2	Signal name from second run
DataSource1	Name for the data from first run
DataSource2	Name for the data from second run
SID1	“Simulink Identifier” on page 8-2 for the data from first run
SID2	“Simulink Identifier” on page 8-2 for the data from second run
SyncMethod1	Synchronization method specified for the first run
InterpMethod1	Interpolation method specified for the first run
Channel1	Channel specified for the first run

### **‘ShortenBlockPath’**

Boolean value. If the value is `true` and the block path name is too long, the Simulation Data Inspector shortens the name in the report. If the value is `false`, the entire block path name is displayed in the report.

**Default:** `true`

## 'LaunchReport'

Boolean value. If the value is true after creation, the generated report opens.

**Default:** true

## 'SignalsToReport'

For the 'Compare Runs' view only.

Value	Description
'ReportOnlyMismatchedSignals'	Includes only the mismatched signals from comparing two runs
'ReportAllSignals'	Includes all signals in the two compared runs

**Default:** 'ReportOnlyMismatchedSignals'

## Examples

Create a report from the Inspect Signals view

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on');

% Create a Data Inspector run
[~, ~, signalIDs] = Simulink.sdi.createRun('My Run', 'base', {'simOut'});

% Select signals for plotting
for i = 1:length( signalIDs )
    signal = Simulink.sdi.getSignal(signalIDs(i));
    signal.checked = true;
end

% Create default report, which is the Inspect Signals view
Simulink.sdi.report();
```

---

## Create a report from the Compare Signals view

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
             'SaveFormat', 'StructureWithTime', ...
             'ReturnWorkspaceOutputs', 'on');

% Create a Data Inspector run
[~, ~, signalIDs] = Simulink.sdi.createRun('My Run', 'base', {'simOut'});

% Compare two signals
Simulink.sdi.compareSignals( signalIDs(1), signalIDs(2) );

% Report on the signal comparison
Simulink.sdi.report('ReportToCreate', 'Compare Signals', ...
                  'ReportOutputFolder', tempdir, 'ReportOutputFile', 'myReport.html');
```

---

## Create a report from the Compare Runs view

```
% Configure model "slexAircraftExample" for logging and simulate
set_param('slexAircraftExample/Pilot', 'WaveForm', 'square');
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
             'SaveFormat', 'StructureWithTime', ...
             'ReturnWorkspaceOutputs', 'on');

% Create a Simulation Data Inspector run, Simulink.sdi.Run, from
% simOut in the base workspace
runID1 = Simulink.sdi.createRun('First Run', 'namevalue', {'simOut'}, {simOut});

% Simulate again
set_param('slexAircraftExample/Pilot', 'WaveForm', 'sawtooth');
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
             'SaveFormat', 'StructureWithTime', ...
             'ReturnWorkspaceOutputs', 'on');
```

```
% Create another Simulation Data Inspector run
runID2 = Simulink.sdi.createRun('Second Run', 'namevalue', {'simOut'}, {simOut});

% Compare two runs
difference = Simulink.sdi.compareRuns(runID1, runID2);

% Specify columns to include in the report
metaDataOfInterest = [Simulink.sdi.SignalMetaData.Result, ...
                      Simulink.sdi.SignalMetaData.BlockPath1, ...
                      Simulink.sdi.SignalMetaData.RelTo11];

% Report on the run comparison
Simulink.sdi.report('ReportToCreate', 'Compare Runs', ...
                  'ColumnsToReport', metaDataOfInterest, ...
                  'SignalsToReport', 'ReportAllSignals' );
```

## Alternatives

In the Simulation Data Inspector tool, to generate a report, select **File > Generate Report**.

## See Also

[Simulink.sdi.createRun](#) | [Simulink.sdi.compareRuns](#) | [Simulink.sdi.compareSignals](#)

## How To

- “Create Simulation Data Inspector Report”

# Simulink.sdi.save

---

**Purpose** Save current Simulation Data Inspector session

**Syntax** `Simulink.sdi.save(fileName)`

**Description** `Simulink.sdi.save(fileName)` saves all runs, signals, tolerances, signal selections, and the current view to a MAT-file, `fileName`.

**Input Arguments** **fileName**  
A string specifying the target file to save.

**Examples** Save the Simulation Data Inspector simulation runs, specified tolerances, and current view to a MAT-file. You can later load the information back in to the Simulation Data Inspector using the `Simulink.sdi.load` function.

```
% Configure model "sldemo_fuelsys" for logging and simulate
simOut = sim('sldemo_fuelsys', 'SaveOutput','on', ...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on');
% Create a run in the Simulation Data Inspector
runID = Simulink.sdi.createRun('My Run','base',{'simOut'});

% Save the current Simulation Data Inspector session
Simulink.sdi.save('my_runs.mat');
```

**Alternatives** To save the session to a file, in the Simulation Data Inspector tool, on the menu bar, select **File > Save** and enter a name for the MAT-file.

**See Also** `Simulink.sdi.createRun`

**How To** • “Record and Inspect Signal Data Programmatically”

**Purpose** Specify a run naming rule

**Syntax** `Simulink.sdi.setRunNamingRule(rule)`

**Description** `Simulink.sdi.setRunNamingRule(rule)` specifies a template for naming a run in the Simulation Data Inspector.

**Input Arguments** **rule**  
A string using predefined tokens and regular characters to create a template for run names. The available tokens are

Token	Description
<run_index>	Sequential number of each run
<model_name>	Name of model
<time_stamp>	Run creation time
<sim_mode>	Simulation mode for recorded run

**Examples** Specify a run naming rule.

```
Simulink.sdi.setRunNamingRule(...  
    'Run <run_index> : <model_name> : <sim_mode>');
```

After recording a run, in the Signal Browser table of the Simulation Data Inspector, the run appears with a name similar to the following:

```
Run 1 : slexAircraftExample : normal
```

**Alternatives** In the Simulation Data Inspector, in the Run Configuration Options dialog box, enter a string in the **Run naming rule** box.

**How To**

- “Run Management Configuration”

# Simulink.sdi.setRunOverwrite

---

<b>Purpose</b>	Mark simulation run for overwrite
<b>Syntax</b>	<code>Simulink.sdi.setRunOverwrite(runID,overwrite)</code>
<b>Description</b>	<code>Simulink.sdi.setRunOverwrite(runID,overwrite)</code> marks a run identified by <code>runID</code> for overwriting in the Simulation Data Inspector with the next recorded simulation run.
<b>Input Arguments</b>	<b>runID</b> Run ID, a unique number identifying a run in the Simulation Data Inspector.
<b>Output Arguments</b>	<b>overwrite</b> Boolean value. When set to <code>true</code> , the next recorded simulation overwrites the run.
<b>Examples</b>	<b>Mark Run for Overwriting</b> <p>This example shows how to mark a run for overwriting in the Simulation Data Inspector.</p> <p>Open <code>sldemo_fuelsys</code>.</p> <p>On the Simulink Editor toolbar, click the <b>Record</b> button on.</p> <p>Simulate the model.</p> <p>Open the Simulation Data Inspector.</p> <p>In the Signal Browser table, right-click the run name and select <b>Properties</b>.</p> <p>At the MATLAB command line, create a <code>runID</code> variable that uses the value of the <b>Run ID</b> for a run. You can find <b>Run ID</b> in the Properties dialog box in the Simulation Data Inspector.</p> <pre>runID = 1;</pre>

Set the overwrite condition to true.

```
Simulink.sdi.setRunOverwrite(runID,true);
```

In the Simulation Data Inspector, you can see the run is now marked for overwriting.

Simulate `sldemo_fuelsys`.

In the Simulation Data Inspector, the new recorded data replaces the previous recorded run.

## Alternatives

In the Simulation Data Inspector tool, click a run in the Signal Browser table and then click the **Overwrite Run** button.



## How To

- “Run Management Configuration”

# Simulink.sdi.setSource

---

**Purpose** Set location for storing simulation data

**Syntax** `Simulink.sdi.setSource(source)`

**Description** `Simulink.sdi.setSource(source)` sets the location of the Simulation Data Inspector repository for storing simulation data. Before calling this function, call `Simulink.sdi.getSource` to get the location. Call this function in a `parfor` loop for recording multiple simulations in the Simulation Data Inspector repository.

**Output Arguments** **source**  
Location of the Simulation Data Inspector repository.

## **Examples** **Record Data During Parallel Simulations**

This example shows how to run multiple simulations in a `parfor` loop and record each run in the Simulation Data Inspector tool.

Open the Simulation Data Inspector.

```
Simulink.sdi.view;
```

Load the model.

```
mdl = 'slexAircraftExample';  
load_system(mdl);
```

Get the location of the simulation data repository.

```
src = Simulink.sdi.getSource();
```

Start a parallel pool with 4 workers.

```
parpool(4);
```

Run the simulation in a `parfor` loop.

```
parfor i=1:4
```

```
% Set the location of the simulation data repository of this
% worker to be the same for aggregating the data
Simulink.sdi.setSource(src);
% Run the simulation
simOut = sim mdl, 'SaveOutput', 'on', ...
          'SaveFormat', 'StructureWithTime', ...
          'ReturnWorkspaceOutputs', 'on');
% Create a simulation run in the Simulation Data Inspector
Simulink.sdi.createRun(['Run' num2str(i)], 'namevalue', ...
                      {'simout'}, {simOut});
end
```

Delete the current parallel pool and close all of the models.

```
parpool close;
bdclose all;
```

Refresh the Simulation Data Inspector.

```
Simulink.sdi.refresh();
```

## See Also

[Simulink.sdi.getSource](#) | [Simulink.sdi.refresh](#)

# Simulink.sdi.view

---

**Purpose** Open Simulation Data Inspector tool

**Syntax** `Simulink.sdi.view`  
`Simulink.sdi.view(tabType)`

**Description** `Simulink.sdi.view` opens the Simulation Data Inspector tool.  
`Simulink.sdi.view(tabType)` opens the Simulation Data Inspector tool and displays the specified tab, `tabType`.

**Input Arguments** **tabType**  
An enumeration value that specifies the tab view in the Simulation Data Inspector.

Value	Description
<code>Simulink.sdi.GUITabType.InspectSignals</code>	Display <b>Inspect Signals</b> tab view
<code>Simulink.sdi.GUITabType.CompareSignals</code>	Display <b>Compare Signals</b> tab view
<code>Simulink.sdi.GUITabType.CompareRuns</code>	Display <b>Compare Runs</b> tab view

**Examples** Create a run in the Simulation Data Inspector and open the tool to view the simulation output.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on');

% Create a run in the Simulation Data Inspector
runID = Simulink.sdi.createRun('My Run','base',{simOut});

% See the results in Simulation Data Inspector
Simulink.sdi.view;
```

---

Compare two runs and open the tool to view the comparison.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on',...
            'SaveFormat', 'StructureWithTime',...
            'ReturnWorkspaceOutputs', 'on');

% Create a run in the Simulation Data Inspector and get signal IDs
run1ID = Simulink.sdi.createRun('My Run', 'namevalue',...
                               {'simOut'}, {simOut});

% Change one of the parameters of the model
Mq = 3*Mq;

% Simulate again
simOut = sim('slexAircraftExample', 'SaveOutput','on',...
            'SaveFormat', 'StructureWithTime',...
            'ReturnWorkspaceOutputs', 'on');

% Create another another run get signal IDs
run2ID = Simulink.sdi.createRun('New Run', 'namevalue',...
                               {'simOut'}, {simOut});

% Define alignment algorithms
algorithms = [Simulink.sdi.AlignType.DataSource
             Simulink.sdi.AlignType.BlockPath
             Simulink.sdi.AlignType.SID];

% Compare the two runs
difference = Simulink.sdi.compareRuns(run1ID, run2ID, algorithms);

% See the results in Simulation Data Inspector on the Compare Runs tab
Simulink.sdi.view(Simulink.sdi.GUITabType.CompareRuns);
```

## Alternatives

To open the Simulation Data Inspector tool, in the Simulink Editor window, click the **Record** button arrow and select **Simulation Data Inspector**.

# Simulink.sdi.view

---

## See Also

`Simulink.sdi.createRun`

## How To

- “Record and Inspect Signal Data Programmatically”

# Simulink.SimulationData.createStructOfTimeseries

---

## Purpose

Create a structure with MATLAB timeseries object leaf nodes

## Syntax

```
struct_of_ts =  
Simulink.SimulationData.createStructOfTimeseries(TsArrayObject)
```

```
struct_of_ts =  
Simulink.SimulationData.createStructOfTimeseries(busObj,  
structOfTimeseries)
```

```
struct_of_ts =  
Simulink.SimulationData.createStructOfTimeseries(busObj,  
cellofTimeseries)
```

```
struct_of_ts =  
Simulink.SimulationData.createStructOfTimeseries(busObj,  
cellofTimeseries,dims)
```

## Description

`struct_of_ts = Simulink.SimulationData.createStructOfTimeseries(TsArrayObject)` creates a structure of MATLAB timeseries objects from a Simulink.TsArray object. Use this syntax for models that use the ModelDataLogs signal logging format.

`struct_of_ts = Simulink.SimulationData.createStructOfTimeseries(busObj,structOfTimeseries)` creates a structure that matches the attributes of the bus object `busObj` and sets the values of structure leaf nodes using a structure of MATLAB timeseries objects `structOfTimeseries`. Use this syntax when using a partial structure as the basis for creating a full structure to load into a model.

`struct_of_ts = Simulink.SimulationData.createStructOfTimeseries(busObj,cellofTimeseries)` creates a structure that matches the attributes of the bus object `busObj` and sets the values of structure leaf nodes using a cell array of MATLAB timeseries objects `cellofTimeseries`.

# Simulink.SimulationData.createStructOfTimeseries


```
struct_of_ts =  
Simulink.SimulationData.createStructOfTimeseries(busObj  
,cellofTimeseries,dims) creates a structure with the dimensions  
dims. Use this syntax to create a structure to load into  
an array of buses.
```

## Examples **Structure Based on Simulink.TsArray**

Log signal data to create a Simulink.TsArray object.

```
open_system(docpath(fullfile(docroot,'toolbox','simulink','examples',...  
'ex_log_modeldatalogs_errwarn')))  
sim('ex_log_modeldatalogs_errwarn')
```

The simulated `ex_log_modeldatalogs_errwarn` model looks like this:

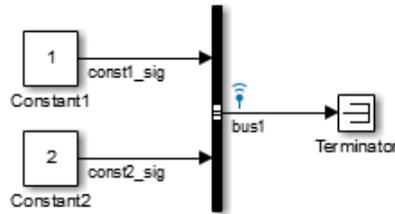

Use the `Simulink.TsArray` object to create a structure of MATLAB timeseries objects. The model uses `ModelDataLogs` format for the signal logging data.

```
logargout
```

```
logargout =
```

```
Simulink.ModelDataLogs (ex_log_modeldatalogs_errwarn):  
  Name           Elements  Simulink Class
```

```
bus1                2        TsArray

struct_of_ts = ...
Simulink.SimulationData.createStructOfTimeseries(logsout.bus1)

struct_of_ts =

    const1_sig: [1x1 timeseries]
    const2_sig: [1x1 timeseries]
```

## Structure Based on Bus Object and a Partial Structure of Timeseries Data


Create a structure of MATLAB timeseries objects based on a Simulink.Bus object and a partial structure of MATLAB timeseriesobjects. Use this structure to load into another model.

Open a model and simulate it, producing signal logging data.

```
open_system(docpath(fullfile(docroot,'toolbox','simulink',...
'examples','ex_log_structTimeSeries')))
sim('ex_log_structTimeSeries')
```

The simulated ex\_log\_structTimeseries model looks like this:

# Simulink.SimulationData.createStructOfTimeseries

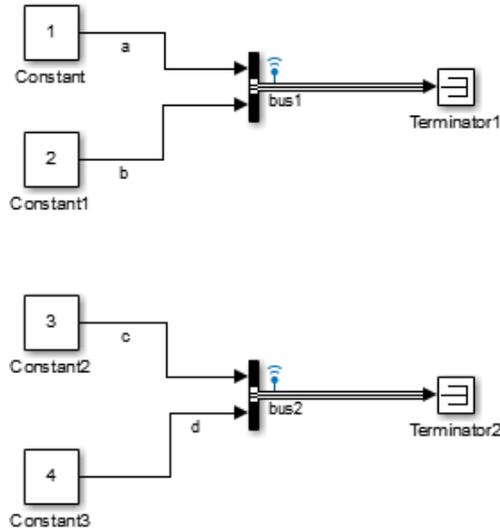

View the logged signal data.

```
ex_log_structTimeSeries_logargout
```

```
ex_log_structTimeSeries_logargout =
```

```
Simulink.SimulationData.Dataset  
Package: Simulink.SimulationData
```

```
Characteristics:
```

```
    Name: 'ex_log_structTimeSeries_logargout'  
    Total Elements: 2
```


```
Elements:
```

```
    1: 'bus1'  
    2: 'bus2'
```

Open the model to load the logged signal data into.

# Simulink.SimulationData.createStructOfTimeseries

```
open_system(docpath(fullfile(docroot,'toolbox','simulink',...  
'examples','ex_load_structTimeSeries_Bus')))
```

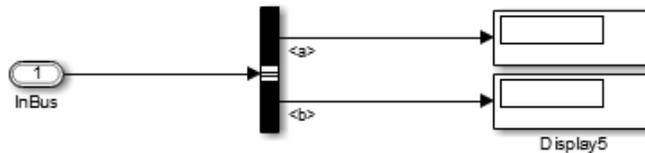

The `ex_load_structTimeSeries_Bus` model's **Configuration Parameters > Data Import/Export > Input** parameter lists the `ex_load_structTimeSeries_inputBus` variable. However, you have not yet defined that variable in the MATLAB workspace. Use `Simulink.SimulationData.createStructOfTimeseries` to define that variable.

```
ex_load_structTimeSeries_inputBus = ...  
Simulink.SimulationData.createStructOfTimeseries...  
( 'bus', ex_log_structTimeSeries_logout.get(2).Values)
```

```
ex_load_structTimeSeries_inputBus =
```

```
    a: [1x1 timeseries]  
    b: [1x1 timeseries]
```

## Structure to Use with an Array of Buses


Create a structure of MATLAB timeseries objects to load into an array of buses. Specify the dimensions of the created structure and a cell array of MATLAB timeseries objects.

Open a model and simulate it, producing signal logging data.

```
open_system(docpath(fullfile(docroot,'toolbox','simulink',...  
'examples','ex_log_structTimeSeries')))  
sim('ex_log_structTimeSeries')
```

# Simulink.SimulationData.createStructOfTimeseries

The simulated `ex_log_structTimeseries` model looks like this:

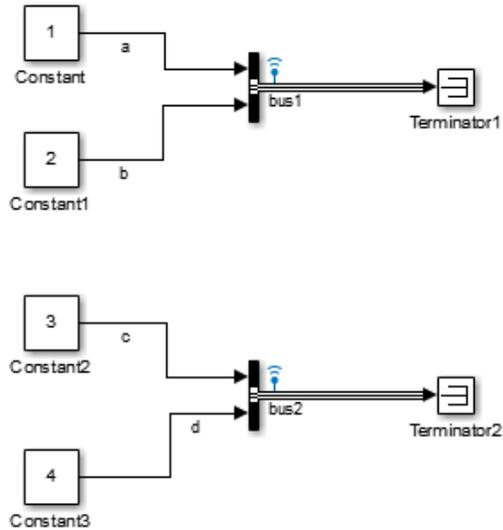

View the logged signal data.

```
ex_log_structTimeSeries_logstdout
```

```
ex_log_structTimeSeries_logstdout =
```

```
Simulink.SimulationData.Dataset  
Package: Simulink.SimulationData
```

```
Characteristics:
```

```
    Name: 'ex_log_structTimeSeries_logstdout'  
    Total Elements: 2
```


```
Elements:
```

```
    1: 'bus1'  
    2: 'bus2'
```

# Simulink.SimulationData.createStructOfTimeseries

Open the model to load the logged signal data into.

```
open_system(docpath(fullfile(docroot,'toolbox','simulink',...  
'examples','ex_load_structTimeSeries_AoB')))
```

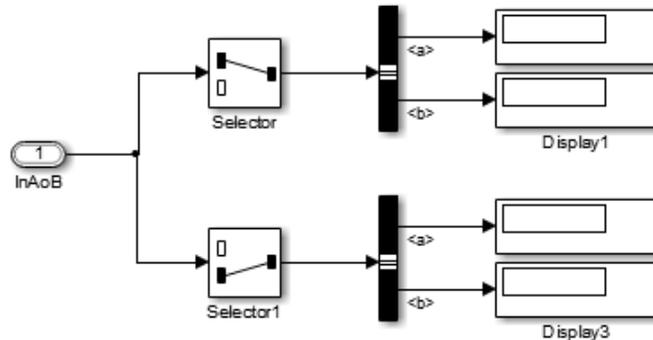

The `ex_load_structTimeSeries_AoB` model's **Configuration Parameters > Data Import/Export > Input** parameter lists the `ex_load_structTimeSeries_inputAoB` variable. However, you have not yet defined that variable in the MATLAB workspace. Use `Simulink.SimulationData.createStructOfTimeseries` to define that variable.

```
ex_load_structTimeSeries_inputAoB = ...  
Simulink.SimulationData.createStructOfTimeseries...  
( 'bus', {ex_log_structTimeSeries_logout.get(1).Values.a, ...  
ex_log_structTimeSeries_logout.get(1).Values.b, ...  
ex_log_structTimeSeries_logout.get(2).Values.c, ...  
ex_log_structTimeSeries_logout.get(2).Values.d}, [2, 1])
```

```
ex_load_structTimeSeries_inputAoB =
```

```
2x1 struct array with fields:
```

```
  a  
  b
```

# Simulink.SimulationData.createStructOfTimeseries

---

## Input Arguments

### **tsArrayObject - Object to convert**

Simulink.TsArray object

Object to convert to a structure of MATLAB timeseries objects, specified as a Simulink.TsArray object.

When you log signals using the ModelDataLogs format, the logged data consists of Simulink.TsArray objects.

### **busObj - Object for creating a structure of MATLAB timeseries objects**

Simulink.Bus object

Object for creating a structure of MATLAB timeseries objects, specified as the name of a Simulink.Bus object.

### **Data Types**

char

### **structOfTimeseries - Objects for values to override ground values, specified as a structure of MATLAB timeseries objects.**

structure of MATLAB timeseries objects

Objects for values to override ground values, specified as a structure of MATLAB timeseries objects. The structure must have the same hierarchy as the bus object. However, the names of the fields in the structure do not have to match the names of the corresponding bus object nodes.

### **Data Types**

struct

### **cellOfTimeseries - Objects for values to override ground values, specified as a cell array of MATLAB timeseries objects.**

cell array of MATLAB timeseries objects

Objects for values to override ground values, specified as a cell array of MATLAB timeseries objects. If you specify a cell array of MATLAB timeseries objects and you specify a `dims` argument, then the length of the cell array must be equal to the result of

# Simulink.SimulationData.createStructOfTimeseries

---

`Simulink.BusObject.getNumLeafBusElements` times the product of the specified dimensions.

## Data Types

cell

## **dims - Dimensions of the structure that this function creates.**

vector

Dimensions of the structure that this function creates, specified as a vector. The length of the cell array is equal to the result of `Simulink.BusObject.getNumLeafBusElements` times the product of the specified dimensions.

If you specify a dimension in the form `[n]`, then Simulink interprets the dimension to be `1xn`.

## Data Types

double

## Output Arguments

### **struct\_of\_ts - MATLAB timeseries objects, returned as a structure.**

MATLAB structure

MATLAB timeseries objects, returned as a structure. The structure has the same hierarchy and attributes as the `Simulink.TsArray` object or `Simulink.Bus` object that you specify.

The dimensions of `structForBus` depend on the input arguments:

- If you specify `tsArrayObject`, then the dimension is 1.
- If you specify the `busObject` and a structure of MATLAB timeseries, then the dimension matches the dimensions of the specified structure.
- If you specify only the `busObject` and a cell array of MATLAB timeseries, then the dimension is 1.
- If you specify the `busObject` argument, a cell array of MATLAB timeseries, and the `dims` argument, then the dimensions match the dimensions of `dims`.

# Simulink.SimulationData.createStructOfTimeseries

---

## Related Links

[Simulink.Bus](#) | [Simulink.TsArray](#) | [Simulink.ModelDataLogs](#)  
| [Simulink.ModelDataLogs.convertToDataset](#)

# Simulink.SimulationData.signalLoggingSelector

---

**Purpose** Open Signal Logging Selector

**Syntax** `Simulink.SimulationData.signalLoggingSelector(modelName)`

**Description** `Simulink.SimulationData.signalLoggingSelector(modelName)` opens the Signal Logging Selector dialog box for the model that you specify with `modelName`.

**Input Arguments**

**modelName**  
String that specifies the name of the model for which you want to open the Signal Logging Selector dialog box.

**Example** Open the Signal Logging Selector dialog box for the `sldemo_md1ref_bus.mdl`.

```
Simulink.SimulationData.signalLoggingSelector('sldemo_md1ref_bus')
```

**See Also** `Simulink.SimulationData.Dataset` | `Simulink.ModelDataLogs`

**How To**

- “Override Signal Logging Settings”

# Simulink.SimulationData.updateDatasetFormatLogging

<b>Purpose</b>	Convert model and its referenced models to use Dataset format for signal logging
<b>Syntax</b>	<pre>Simulink.SimulationData.updateDatasetFormatLogging(top_model) Simulink.SimulationData.updateDatasetFormatLogging(top_model,     variants)</pre>
<b>Description</b>	<p>Simulink.SimulationData.updateDatasetFormatLogging(top_model) converts the top-level model and all of its referenced models to use the Dataset format for signal logging instead of the ModelDataLogs format. If a Model block has the <b>Generate preprocessor conditionals</b> option selected, the function converts all the variants; otherwise, the function converts only the active variant.</p> <p>Simulink.SimulationData.updateDatasetFormatLogging(top_model, variants) specifies which variant models to convert to use the Dataset signal logging format. For details about the variants argument, see “Input Arguments” on page 2-577</p>
<b>Tips</b>	<ul style="list-style-type: none"><li>• Simulink checks signal logging data format consistency for certain model referencing configurations. For details, see “Model Reference Signal Logging Format Consistency”. You can use the Upgrade Advisor (with the upgradeadvisor function) to upgrade a model to use Dataset format.</li><li>• An alternative approach for handling reported inconsistencies is to use the Simulink.SimulationData.updateDatasetFormatLogging function to update the models to use Dataset format. This approach sets the <b>Model Configuration Parameters &gt; Data Import/Export &gt; Signal logging format</b> parameter to Dataset for each referenced model and each variant.</li><li>• The conversion function sets the SignalLoggingSaveFormat parameter value to Dataset for all the updated models.</li><li>• If you want to save the format updates that the conversion function makes, then ensure that the top-level model, referenced models, and variant models are accessible and writable.</li></ul>

# Simulink.SimulationData.updateDatasetFormatLogging

---

- If a model has no other unsaved changes, the conversion function saves the format updates to the model. If the model has unsaved changes, the function updates the format, but does not save those changes.
- If you use this function for a model that does not include any referenced models, the function converts the top-level model use the Dataset format.
- For new models, use the Dataset format for signal logging. The ModelDataLogs format will be removed in a future release. For an existing model that uses the ModelDataLogs format, you should migrate the model to use Dataset format. For details, see “Migrate from ModelDataLogs to Dataset Format”.

After conversion, to reset the format back to ModelDataLogs, you must set the **Signal logging format** parameter individually for each model. If you want to use the ModelDataLogs format for the model in the future, consider using one of these approaches:

- Save a version of the model that uses the ModelDataLogs format.
- Use the conversion function to convert the model to use Dataset format for signal logging and run the simulation in Normal mode. However, do not save the changes.

## Input Arguments

### **top\_model**

String that specifies the name of the top-level model.

### **variants**

String that specifies which variant models to update:

- 'ActivePlusCodeVariants' — (Default) Search all variants if any generate preprocessor conditionals. Otherwise, search only the active variant.
- 'ActiveVariants' — Convert only the active variant.
- 'AllVariants' — Convert all variants.

# Simulink.SimulationData.updateDatasetFormatLogging

---

## Definitions

### Dataset

The *Dataset* format causes Simulink to use a `Simulink.SimulationData.Dataset` object to store the logged signal data. The Dataset format use MATLAB timeseries objects to formatting the data.

### ModelDataLogs

The *ModelDataLogs* format causes Simulink to use a `Simulink.ModelDataLogs` object to store the logged signal data. `Simulink.Timeseries` and `Simulink.TsArray` objects provide the format for the data.

## See Also

`Simulink.SimulationData.Dataset` | `Simulink.ModelDataLogs` | `Simulink.ModelDataLogs.convertToDataset`

## How To

- “Specify the Signal Logging Data Format”

<b>Purpose</b>	Access and display values of simulation results
<b>Syntax</b>	<code>output = simOut.find('VarName')</code>
<b>Description</b>	<code>output = simOut.find('VarName')</code> accepts one variable name. Specify <i>VarName</i> inside single quotes.
<b>Input Arguments</b>	<b>VarName</b> Name of logged variable for which you seek values.
<b>Output Arguments</b>	<b>Value</b> Value of the logged variable name specified in input.
<b>Examples</b>	Simulate vdp and store the values of the variable <i>youtNew</i> in <i>yout</i> . <pre>simOut = sim('vdp','SimulationMode','rapid','AbsTol','1e-5',...             'SaveState','on','StateSaveName','xoutNew',...             'SaveOutput','on','OutputSaveName','youtNew'); yout = simOut.find('youtNew')</pre>
<b>Alternatives</b>	<code>Simulink.SimulationOutput.get</code>
<b>See Also</b>	<code>Simulink.SimulationOutput.get</code>   <code>Simulink.SimulationOutput.who</code>

# Simulink.SimulationOutput.get

---

**Purpose** Access and display values of simulation results

**Syntax** `output = simOut.get('VarName')`

**Description** `output = simOut.get('VarName')` accepts one variable name. Specify *VarName* inside single quotes.

**Input Arguments**

**VarName**  
Name of logged variable for which you seek values.

**Output Arguments**

**Value**  
Value of the logged variable name specified in input.

**Examples** Simulate vdp and store the values of the variable *youtNew* in *yout*.

```
simOut = sim('vdp','SimulationMode','rapid','AbsTol','1e-5',...  
            'SaveState','on','StateSaveName','xoutNew',...  
            'SaveOutput','on','OutputSaveName','youtNew');  
yout = simOut.get('youtNew')
```

**Alternatives** `Simulink.SimulationOutput.find`

**See Also** `Simulink.SimulationOutput.find` |  
`Simulink.SimulationOutput.who`

<b>Purpose</b>	Access and display output variable names of simulation
<b>Syntax</b>	<code>simOutVar = simOut.who</code>
<b>Description</b>	<code>simOutVar = simOut.who</code> returns the names of all simulation output variables, including workspace variables.
<b>Output Arguments</b>	<b>simOutVar</b> String array of output variable names of simulation.
<b>Examples</b>	Simulate vdp and store the string values of the output variable names. <pre>simOut = sim('vdp','SimulationMode','rapid','AbsTol','1e-5',...             'SaveState','on','StateSaveName','xoutNew',...             'SaveOutput','on','OutputSaveName','youtNew'); simOutVar = simOut.who</pre>
<b>See Also</b>	<a href="#">Simulink.SimulationOutput.find</a>   <a href="#">Simulink.SimulationOutput.get</a>

# Simulink.SubSystem.convertToModelReference

---

**Purpose** Convert subsystem to model reference

**Syntax**

```
[success, mdlRefBlkH] = Simulink.SubSystem.convertToModelReference(subsys, mdlRef, 'opt1', 'val1', ... , 'optN', 'valN')
```

**Description**

```
[success, mdlRefBlkH] = Simulink.SubSystem.convertToModelReference(subsys, mdlRef, 'opt1', 'val1', ... , 'optN', 'valN')
```

 converts a subsystem to a referenced model. The function creates a new model, copies the contents of the subsystem into the model, sets the model configuration parameters, and configures the model's root-level Inport and Outport blocks. By default, the function then replaces the subsystem block with a Model block that references the new model. Alternatively, you can set the input option `ReplaceSubsystem` to create another, temporary model containing a Model block that references the new model.

This function does not convert all kinds of subsystems to referenced models. For details, see “Which Subsystems Can You Convert?”.

Converting a subsystem to a referenced model requires your model to have the following configuration parameter settings:

- **Configuration Parameters > Diagnostics > Data Validity > Signal resolution** is set to `Explicit` only.
- **Configuration Parameters > Diagnostics > Connectivity > Mux blocks used to create bus signals** is set to `Error`.

You can use the following commands to set these parameters to the values required by this function:

```
set_param mdlName, 'SignalResolutionControl', 'UseLocalSettings');  
set_param mdlName, 'StrictBusMsg', 'ErrorLevel1');
```

When the conversion is successful, you might need to reconfigure the resulting model to meet your requirements. For details, see “Integrate the Referenced Model into the Parent Model”.

# Simulink.SubSystem.convertToModelReference

---

## Input Arguments

### **subsys**

Full name or handle of the subsystem to be converted

### **mdlRef**

Name of the new model to convert the subsystem to

### **opt1, val1, ... , optN, valN**

Zero or more pairs of options and values that control the conversion process. The options and values are:

'UseConversionAdvisor' If you specify this option and set it to **true**, this function opens the Model Reference Conversion Advisor.

For details, see “Run the Model Reference Conversion Advisor”.

'AutoFix' If you specify this parameter and set it to **true**, this function fixes all conversion issues that it can. The conversion process can generate error messages that you have to address by modifying the model.

'ReplaceSubsystem' If you specify this parameter and set it to **true**, this function replaces the Subsystem block with a Model block that references the model created from the subsystem.

If you omit this option or set it to **false**, the function creates and opens a separate Simulink Editor window with a model containing a Model block that references the model derived from the subsystem block.

# Simulink.SubSystem.convertToModelReference

---

- 'BusSaveFormat' If you specify this option, the function saves any bus objects that it creates in a file. Specify the format of the file as either 'Cell' or 'Object'. Use cell array format to save the objects in a compact form.
- If you omit this option, the function does not save bus objects to a file.
- 'BuildTarget' If you specify this option, the function generates a model reference target. Specify the type of target as either 'Sim' or 'RTW'.
- If you omit this option, the function does not generate a model reference target.
- 'Force' If you specify this parameter and set it to `true`, this function returns some errors as warnings and continues with the conversion without fixing the errors. This allows you to use the function to do the initial steps of conversion, and then complete the conversion process yourself.
- If you omit this option or set it to `false`, the function halts the conversion if an error occurs.
- If you set the `Force` option to `true`, the `success` output argument can be `true`, but it is possible that the converted model does not produce the same results as the model did before you converted the subsystem.

## Output Arguments

### **success**

The value is `true` if the conversion completed successfully, and `false` otherwise.

If you set the `Force` option to `true`, the `success` argument can be `true`, but it is possible that the converted model does not produce the same results as the model did before you converted the subsystem.

# Simulink.SubSystem.convertToModelReference

---

## **mdlRefBlkH**

Handle of the Model block that references the new model.

## **Tips**

If the top model uses a data dictionary that does not have any unsaved changes, Simulink uses the data dictionary to save the bus objects that it creates as part of the conversion processing.

## **See Also**

Simulink.BlockDiagram.copyContentsToSubSystem  
| Simulink.Bus.save |  
Simulink.SubSystem.copyContentsToBlockDiagram |

## **Tutorials**

- sldemo\_mdref\_conversion

## **How To**

- “Convert a Subsystem to a Referenced Model”
- “Create a Subsystem”
- “Model Reference”

# Simulink.SubSystem.copyContentsToBlockDiagram

---

<b>Purpose</b>	Copy contents of subsystem to empty block diagram
<b>Syntax</b>	<code>Simulink.SubSystem.copyContentsToBlockDiagram(<i>subsys</i>, <i>bdiag</i>)</code>
<b>Description</b>	<p><code>Simulink.SubSystem.copyContentsToBlockDiagram(<i>subsys</i>, <i>bdiag</i>)</code> copies the contents of the subsystem <i>subsys</i> to the block diagram <i>bdiag</i>. The subsystem and block diagram must have already been loaded. The subsystem cannot be part of the block diagram. The function affects only blocks, lines, and annotations; it does not affect nongraphical information such as configuration sets.</p> <p>This function cannot be used if the destination block diagram contains any blocks or signals. Other types of information can exist in the destination block diagram and are unaffected by the function. Use <code>Simulink.BlockDiagram.deleteContents</code> if necessary to empty the block diagram before using <code>Simulink.SubSystem.copyContentsToBlockDiagram</code>.</p>

---

**Tip** To flatten a model hierarchy by expanding the contents of a subsystem to the system that contains that subsystem, do not use the `Simulink.SubSystem.copyContentsToBlockDiagram` function. Instead, expand the subsystem, as described in “Expand Subsystem Contents”.

---

<b>Input Arguments</b>	<b>subsys</b> Subsystem name or handle
	<b>bdiag</b> Block diagram name or handle

**Examples** Copy the graphical contents of `f14/Controller`, including all nested subsystems, to a new block diagram:

# Simulink.SubSystem.copyContentsToBlockDiagram

---

```
% open f14
open_system('f14');

% create a new model
newbd = new_system;
open_system(newbd);

% copy the subsystem
Simulink.SubSystem.copyContentsToBlockDiagram('f14/Controller', newbd);

% close f14 and the new model
close_system('f14', 0);
close_system(newbd, 0);
```

## See Also

[Simulink.BlockDiagram.copyContentsToSubSystem](#)  
| [Simulink.BlockDiagram.deleteContents](#) |  
[Simulink.SubSystem.convertToModelReference](#) |  
[Simulink.SubSystem.deleteContents](#)

## How To

- “Modeling Basics”
- “Create a Subsystem”
- “Expand Subsystem Contents”

# Simulink.SubSystem.deleteContents

---

<b>Purpose</b>	Delete contents of subsystem
<b>Syntax</b>	<code>Simulink.SubSystem.deleteContents(<i>subsys</i>)</code>
<b>Description</b>	<code>Simulink.SubSystem.deleteContents(<i>subsys</i>)</code> deletes the contents of the subsystem <i>subsys</i> . The subsystem must have already been loaded. The function affects only blocks, lines, and annotations; it does not affect nongraphical information such as configuration sets.
<b>Input Arguments</b>	<b>subsys</b> Subsystem name or handle
<b>Examples</b>	Delete the graphical contents of Controller, including all nested subsystems:  <code>Simulink.SubSystem.deleteContents('f14/Controller');</code>
<b>See Also</b>	<code>Simulink.BlockDiagram.copyContentsToSubSystem</code>   <code>Simulink.BlockDiagram.deleteContents</code>   <code>Simulink.SubSystem.convertToModelReference</code>   <code>Simulink.SubSystem.copyContentsToBlockDiagram</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Model Hierarchy”</li><li>• “Create a Subsystem”</li></ul>

## Purpose

Return checksum of nonvirtual subsystem

## Syntax

```
[checksum,details] = Simulink.SubSystem.getChecksum(subsys)
```

## Description

[checksum,details] = Simulink.SubSystem.getChecksum(subsys) returns the checksum of the specified nonvirtual subsystem. Simulink software computes the checksum based on the subsystem parameter settings and the blocks the subsystem contains.

One use of this command is to determine why code generated for a subsystem is not being reused. For an example, see “Determine Why Subsystem Code Is Not Reused” in the Simulink Coder documentation.

---

**Note** Simulink.SubSystem.getChecksum compiles the model that contains the specified subsystem, if the model is not already in a compiled state. If you need to get the checksum for multiple subsystems and want to avoid multiple compiles, use the command , `model([], [], [], 'compile')` to place the model in a compiled state before using Simulink.SubSystem.getChecksum.

---

This command accepts the argument *subsys*, which is the full name or handle of the nonvirtual subsystem block for which you are returning checksum data.

This command returns the following output:

- *checksum* — Structure of the form

Value: [4x1 uint32]

MarkedUnique: [bool]

- Value — Array of four 32-bit integers that represents the subsystem’s 128-bit checksum.
- MarkedUnique — True if the subsystem or the blocks it contains have properties that would prevent the code generated for the subsystem from being reused; otherwise, false.

# Simulink.SubSystem.getChecksum

---

- *details* — Structure of the form

```
ContentsChecksum: [1x1 struct]
InterfaceChecksum: [1x1 struct]
ContentsChecksumItems: [nx1 struct]
InterfaceChecksumItems: [mx1 struct]
```

- ContentsChecksum — Structure of the same form as *checksum*, representing a checksum that provides information about all blocks in the system.
- InterfaceChecksum — Structure of the same form as *checksum*, representing a checksum that provides information about the subsystem's block parameters and connections.
- ContentsChecksumItems and InterfaceChecksumItems — Structure arrays of the following form that Simulink software uses to compute the checksum for ContentsChecksum and InterfaceChecksum, respectively:

```
Handle: [char array]
Identifier: [char array]
Value: [type]
```

- Handle — Object for which Simulink software added an item to the checksum. For a block, the handle is a full block path. For a block port, the handle is the full block path and a string that identifies the port.
- Identifier — Descriptor of the item Simulink software added to the checksum. If the item is a documented parameter, the identifier is the parameter name.
- Value — Value of the item Simulink software added to the checksum. If the item is a parameter, Value is the value returned by

```
get_param(handle, identifier)
```

**Tip**

For information about the kinds of changes that affect the structural checksum, see the `Simulink.BlockDiagram.getChecksum` documentation.

**See Also**

`Simulink.BlockDiagram.getChecksum`

# sint

---

**Purpose** Create Simulink.NumericType object describing signed integer data type

**Syntax** `a = sint(WordLength)`

**Description** `sint(WordLength)` returns a Simulink.NumericType object that describes the data type of a signed integer with a word size given by *WordLength*.

---

**Note** `sint` is a legacy function. In new code, use `fixdt` instead. In existing code, replace `sint(WordLength)` with `fixdt(1,WordLength,0)`.

---

**Examples** Define a 16-bit signed integer data type.

```
a = sint(16)
```

```
a =
```

```
    NumericType with properties:
```

```
        DataTypeMode: 'Fixed-point: binary point scaling'
        Signedness: 'Signed'
        WordLength: 16
        FractionLength: 0
        IsAlias: 0
        DataScope: 'Auto'
        HeaderFile: ''
        Description: ''
```

**See Also** `fixdt` | `Simulink.NumericType` | `float` | `sfix` | `sfrac` | `ufix` | `uffrac` | `uint`

**Purpose**

Build standalone and model reference targets

**Syntax**

```
slbuild('model')
slbuild('model','StandaloneRTWTarget')
slbuild('model','StandaloneRTWTarget','ForceTopModelBuild',true)

slbuild('model','CleanTopModel')

slbuild('model','ModelReferenceSimTarget')
slbuild('model','ModelReferenceRTWTarget')
slbuild('model','ModelReferenceRTWTargetOnly')
```

**Description**

---

**Note** Except where noted, this command requires a Simulink Coder license.

---

`slbuild('model')` builds a standalone Simulink Coder target executable from the specified model, using the current model configuration settings. If the model has not been loaded, `slbuild` loads it before initiating the build process.

`slbuild('model','StandaloneRTWTarget')` builds a standalone Simulink Coder target executable from the specified model (same as previous).

`slbuild('model','StandaloneRTWTarget','ForceTopModelBuild',true)` builds a standalone Simulink Coder target executable from the specified model. Specify the parameter `ForceTopModelBuild` with the value `true` if you want to force regeneration of the top model code. If the parameter is omitted or set to `false`, the build process determines whether regeneration of the top model code is necessary based on model checksums and options.

`slbuild('model','CleanTopModel')` cleans the model build area enough to trigger regeneration of the top model code at the next build.

---

**Note** The following commands honor the setting of the **Rebuild** parameter on the **Model Referencing** pane of the Configuration Parameters dialog box for rebuilding the model reference target for this model and its referenced models.

---

`slbuild('model', 'ModelReferenceSimTarget')` builds a model reference simulation target for the model. This command does not require a Simulink Coder license.

`slbuild('model', 'ModelReferenceRTWTarget')` builds model reference simulation and Simulink Coder targets for the model.

`slbuild('model', 'ModelReferenceRTWTargetOnly')` builds a model reference Simulink Coder target for the model.

If the **Rebuild** parameter on the **Model Referencing** pane of the Configuration Parameters dialog box is set to *Never*, you can use two additional arguments, `'UpdateThisModelReferenceTarget'` and *Buildcond*, to specify a rebuild option for building a model reference target for the model. For example,

```
slbuild('model', 'ModelReferenceSimTarget', ...  
        'UpdateThisModelReferenceTarget', Buildcond)
```

conditionally builds the simulation target for *model* based on the value of *Buildcond*.

---

**Note** The `'UpdateThisModelReferenceTarget'` argument rebuilds the model reference target only for the specified model, not for any models referenced by the specified model.

---

*Buildcond* must be one of the following:

- `'Force'`

Causes `slbuild` to always rebuild the model. This option is equivalent to the Always rebuild option on the **Model Referencing** pane of the Configuration Parameters dialog box.

- 'IfOutOfDateOrStructuralChange'

Causes `slbuild` to rebuild this model if it detects any changes. This option is equivalent to the If any changes detected rebuild option on the **Model Referencing** pane of the Configuration Parameters dialog box.

- 'IfOutOfDate'

Causes `slbuild` to rebuild this model if it detects any changes in known dependencies of this model. This option is equivalent to the If any changes in known dependencies detected rebuild option on the **Model Referencing** pane of the Configuration Parameters dialog box.

# slCharacterEncoding

---

**Purpose** Change MATLAB character set encoding

**Syntax** `currentCharacterEncoding = slCharacterEncoding()  
slCharacterEncoding(encoding)`

**Description** This command allows you to change the current MATLAB character set encoding to be compatible with the character encoding of a model that you want to open.

`currentCharacterEncoding = slCharacterEncoding()` returns the current MATLAB character set encoding.

`slCharacterEncoding(encoding)` changes the MATLAB character set encoding to the specified encoding. You should only specify these values:

- 'US-ASCII'
- 'Windows-1252'
- 'ISO-8859-1'
- 'Shift\_JIS'

If you want to use a different character encoding, you need to start MATLAB with the appropriate locale settings for your operating system. Consult your operating system manual to change the locale setting. Simulink can support any character encoding that uses single-byte or double-byte characters.

---

**Note** You must close all open models or libraries before changing the MATLAB character set encoding except when changing from 'US-ASCII' to another encoding.

---

**How To**

- “Models with Different Character Encodings”
- “Saving Models with Different Character Encodings”

<b>Purpose</b>	Start simulation in debug mode
<b>Syntax</b>	<code>sldebug('sys')</code>
<b>Description</b>	<code>sldebug('sys')</code> starts a simulation in debug mode. See “Debugger Command-Line Interface” for information about using the debugger.
<b>Examples</b>	<p>The following command:</p> <pre>sldebug('vdp')</pre> <p>loads the Simulink example model <code>vdp</code> into memory and starts the simulation in debug mode. Alternatively, you can achieve the same result by using the <code>sim</code> command:</p> <pre>sim('vdp', 'debug', 'on')</pre>
<b>See Also</b>	<code>sim</code>

# sldiagnostics

---

**Purpose** Display diagnostic information about Simulink system

**Syntax** `[txtRpt, sRpt] = sldiagnostics('sys')`  
`[txtRpt, sRpt] = sldiagnostics('sys', options)`

**Description** `sldiagnostics('sys')` displays the following diagnostic information associated with the model or subsystem specified by `sys`:

- Number of each type of block
- Number of each type of Stateflow object
- Number of states, outputs, inputs, and sample times of the root model.
- Names of libraries referenced and instances of the referenced blocks
- Time and additional memory used for each compilation phase of the root model

If the model specified by `sys` is not loaded, then `sldiagnostics` loads the model before performing the analysis.

The command `sldiagnostics('sys', options)` displays only the diagnostic information associated with the specific operations listed as *options* strings. The table below summarizes the options available and their corresponding valid input and output.

With `sldiagnostics`, you can input the name of a model or the path to a subsystem. For some analysis options, `sldiagnostics` can analyze only a root model. If you provide an incompatible input for one of these analyses, then `sldiagnostics` issues a warning. Finally, if you input a Simulink Library, then `sldiagnostics` cannot perform options that require a model compilation (**Update Diagram**). Instead, `sldiagnostics` issues a warning.

During the analysis, `sldiagnostics` will follow library links but will not follow or analyze Model References. See `find_mdrefs` for more information on finding all Model blocks and referenced models in a specified model.

Option	Valid Inputs	Output
CountBlocks	root model, library, or subsystem	Lists all unique blocks in the system and the number of occurrences of each. This includes blocks that are nested in masked subsystems or hidden blocks.
CountSF	root model, library, or subsystem	Lists all unique Stateflow objects in the system and the number of occurrences of each.
Sizes	root model	Lists the number of states, outputs, inputs, and sample times, as well as a flag indicating direct feedthrough, used in the root model.
Libs	root model, library, or subsystem	Lists all unique libraries referenced in the root model, as well as the names and numbers of the library blocks.
CompileStats	root model	Lists the time and additional memory used for each compilation phase of the root model. This information helps users troubleshoot model compilation speed and memory issues.

# sldiagnostics

---

Option	Valid Inputs	Output
RTWBuildStats	root model	Lists the same information as the CompileStats diagnostic. When issued with the second output argument sRpt, it captures the Simulink Coder build statistics in sRpt.rtwbuild.  You must explicitly specify this option; it is not part of the default analysis.
All	not applicable	Performs all diagnostics.

---

**Note** Running the CompileStats diagnostic before simulating a model for the first time will show greater memory usage. However, subsequent runs of the CompileStats diagnostic on the model will require less memory usage.

---

[txtRpt, sRpt] = sldiagnostics('sys') or [txtRpt, sRpt] = sldiagnostics('sys', options) returns the diagnostic information as a textual report txtRpt and a structure array sRpt, which contains the following fields that correspond to the diagnostic options:

- blocks
- stateflow
- sizes
- links
- compilestats
- rtwbuild

If your chosen options specify just one type of analysis, then `sRpt` contains the results of only that analysis and it is not a structure.

## Examples

The following command counts and lists each type of block used in the `sldemo_bounce` model that comes with Simulink software.

```
sldiagnostics('sldemo_bounce', 'CountBlocks')
```

The following command counts and lists both the unique blocks and Stateflow objects used in the `sf_boiler` model that comes with Stateflow software; the textual report returned is captured as `myReport`.

```
myReport = sldiagnostics('sf_boiler', 'CountBlocks', 'CountSF')
```

The following commands open the `f14` model that comes with Simulink software, and counts the number of blocks used in the `Controller` subsystem.

```
sldiagnostics('f14/Controller', 'CountBlocks')
```

The following command runs the `Sizes` and `CompileStats` diagnostics on the `f14` model, capturing the results as both a textual report and structure array.

```
[txtRpt, sRpt] = sldiagnostics('f14', 'Sizes', 'CompileStats')
```

## See Also

`find_system` | `get_param`

# sldiagviewer.diary

---

<b>Purpose</b>	Log simulation warnings and errors and build information to file
<b>Syntax</b>	<pre>sldiagviewer.diary sldiagviewer.diary(filename) sldiagviewer.diary(toggle) sldiagviewer.diary(filename, 'UTF-8')</pre>
<b>Description</b>	<p>sldiagviewer.diary intercepts build information, warnings, and errors transmitted to the Command Window or the Diagnostic Viewer and logs them to a text file <code>diary.txt</code> in the current folder.</p> <p>sldiagviewer.diary(filename) toggles the logging state of the text file specified by filename.</p> <p>sldiagviewer.diary(toggle) turns logging to the log file on or off. The setting applies to the last file name you specified for logging or to <code>diary.txt</code> if you did not specify a file name.</p> <p>sldiagviewer.diary(filename, 'UTF-8') specifies the character encoding for the log file filename.</p>
<b>Input Arguments</b>	<p><b>toggle - Logging state</b> 'off'   'on' Logging state, specified as 'on' or 'off'. <b>Example:</b> <code>sldiagviewer.diary('on')</code></p> <p><b>filename - Name of file to log data to</b> string Name of file to log data to, specified as a string. <b>Example:</b> <code>sldiagviewer.diary('C:\Simulations\mySimulationDiary.txt')</code></p>

## Examples

### Log Build Information and Simulation Warnings and Errors

Start logging build information and simulation warnings and errors to `diary.txt`.

```
sdiagviewer.diary
open_system('vdp')
rtwbuild('vdp')
```

Open `diary.txt` to view logs.

```
### Starting build procedure for model: vdp
### Build procedure for model: 'vdp' aborted due to an error.
...
```

### Log to Specific File

Set up logging to a file.

```
sdiagviewer.diary('C:\MyLogs\log1.txt')
```

### Toggle File Logging State

Switch the logging state of a file.

```
sdiagviewer.diary('C:\MyLogs\log1.txt') %Turn on logging
open_system('vdp')
rtwbuild('vdp')
```

```
sdiagviewer.diary('C:\MyLogs\log1.txt') %Turn off logging
```

### Specify Log File Name and Character Encoding

Set the file name to log to and the character encoding to use.

```
sdiagviewer.diary('C:\MyLogs\log1.txt','UTF-8')
```

## Related Examples

- “Manage Errors and Warnings”
- “Customize Simulation Messages”

# sldiscmdl

---

## Purpose

Discretize model that contains continuous blocks

## Syntax

```
sldiscmdl('model_name',sample_time)
sldiscmdl('model_name',sample_time,method)
sldiscmdl('model_name',sample_time,options)
sldiscmdl('model_name',sample_time,method,freq)
sldiscmdl('model_name',sample_time,method,options)
sldiscmdl('model_name',sample_time,method,freq,options)
[old_blks,new_blks] =
sldiscmdl('model_name',sample_time,method,freq,
options)
```

## Description

`sldiscmdl('model_name',sample_time)` discretizes the model named '*model\_name*' using the specified *sample\_time*. The model does not need to be open, and the units for *sample\_time* are simulation seconds.

`sldiscmdl('model_name',sample_time,method)` discretizes the model using *sample\_time* and the transform method specified by *method*.

`sldiscmdl('model_name',sample_time,options)` discretizes the model using *sample\_time* and criteria specified by the *options* cell array. This array consists of four elements: {*target*, *replace\_with*, *put\_into*, *prompt*}.

`sldiscmdl('model_name',sample_time,method,freq)` discretizes the model using *sample\_time*, *method*, and the critical frequency specified by *freq*. The units for *freq* are Hz. When you specify *freq*, *method* must be 'prewarp'.

`sldiscmdl('model_name',sample_time,method,options)` discretizes the model using *sample\_time*, *method*, and *options*.

`sldiscmdl('model_name',sample_time,method,freq,options)` discretizes the model using *sample\_time*, *method*, *freq*, and *options*. When you specify *freq*, *method* must be 'prewarp'.

`[old_blks,new_blks] = sldiscmdl('model_name',sample_time,method,freq,options)` discretizes the model using *sample\_time*, *method*, *freq*, and *options*. When you specify *freq*, *method* must be 'prewarp'. The function also

returns two cell arrays that contain full path names of the original, continuous blocks and the new, discretized blocks.

## Input Arguments

### **model\_name**

Name of the model to discretize.

### **sample\_time**

Sample-time specification for the model:

Scalar value	Sample time with zero offset, such as 1
Two-element vector	Sample time with nonzero offset, such as [1 0.1]

### **method**

Method of converting blocks from continuous to discrete mode:

'zoh' (default)	Zero-order hold on the inputs
'foh'	First-order hold on the inputs
'tustin'	Bilinear (Tustin) approximation
'prewarp'	Tustin approximation with frequency prewarping
'matched'	Matched pole-zero method
	For single-input, single-output (SISO) systems only

### **freq**

Critical frequency in Hz. This input applies only when the *method* input is 'prewarp'.

### **options**

Cell array  $\{target, replace\_with, put\_into, prompt\}$ , where each element can take the following values:

<i>target</i>	'all' (default)	Discretize all continuous blocks
	'selected'	Discretize only selected blocks in the model
	'full_blk_path'	Discretize specified block
<i>replace_with</i>	'parammask' (default)	Create discrete blocks whose parameters derive from the corresponding continuous blocks
	'hardcoded'	Create discrete blocks with hard-coded parameters placed directly into each block dialog box
<i>put_into</i>	'copy' (default)	Create discretization in a copy of the original model
	'configurable'	Create discretization candidate in a configurable subsystem
	'current'	Apply discretization to the current model
	'untitled'	Create discretization in a new untitled window
<i>prompt</i>	'on' (default)	Show discretization information at the command prompt
	'off'	Do not show discretization information at the command prompt

**Examples**

Discretize all continuous blocks in the `slexAircraftExample` model using a 1-second sample time:

```
sldiscmdl('slexAircraftExample',1);
```

---

Discretize the Aircraft Dynamics Model subsystem in the `slexAircraftExample` model using a 1-second sample time, a 0.1-second offset, and a first-order hold transform method:

```
sldiscmdl('slexAircraftExample',[1 0.1],'foh',...  
{'slexAircraftExample/Aircraft Dynamics Model',...  
'parammask','copy','on'});
```

---

Discretize the Aircraft Dynamics Model subsystem in the `slexAircraftExample` model and retrieve the full path name of the second discretized block:

```
[old_blks,new_blks] = sldiscmdl('slexAircraftExample',[1 0.1],...  
'foh',{'slexAircraftExample/Aircraft Dynamics Model','parammask',...  
'copy','on'});  
% Get full path name of the second discretized block  
new_blks{2}
```

**See Also**

`s1mdldiscui`

**How To**

- “Discretize a Model with the `sldiscmdl` Function”

# sIsFileChangedOnDisk

---

**Purpose** Determine whether model has changed since it was loaded

**Syntax** `Changed = sIsFileChangedOnDisk('sys')`

**Description** `Changed = sIsFileChangedOnDisk('sys')` Returns true if the file which contains block diagram `sys` was changed on disk since the block diagram was loaded.

**Examples** To ensure that code is not generated for a model whose file has changed on disk since it was loaded, include the following in the 'entry' section of the `STF_make_rtw_hook.m` file:

```
if (sIsFileChangedOnDisk(sys))
    error('File has changed on disk since it was loaded. Aborting code generation.');
```

end

**How To**

- “Customize Build Process with STF\_make\_rtw\_hook File”
- “Model File Change Notification”

**Purpose** Open Model Discretizer GUI

**Syntax** `slmdliscui`  
`slmdliscui('model')`

**Description** `slmdliscui` opens the Model Discretizer. A model does not need to be open.

`slmdliscui('model')` opens the Model Discretizer for the model or library called '*name*'.

To use the Model Discretizer, you must have a Control System Toolbox license, version 5.2 or later.

**Examples** Open the Model Discretizer for the `slexAircraftExample` model:

```
slmdliscui('slexAircraftExample')
```

---

Open the Model Discretizer for the `discretizing` library:

```
slmdliscui('discretizing')
```

**See Also** `sldiscmdl`

**How To** • “Discretize a Model with the Model Discretizer”

# slprofreport

---

**Purpose** Regenerate profiler report from data, `ProfileData`, saved from previous run

**Syntax** `slprofreport(model_nameProfileData)`

**Description** When you run a model with the profiler enabled, the simulation generates the data and saves it in the variable, `model_nameProfileData`. `slprofreport(model_nameProfileData)` generates a profiler report based on the data in `model_nameProfileData`, saved from the model run.

**Input Arguments** **ProfileData**  
Variable that contains profiler data from a model run. The variable name consists of the model name and `ProfileData`, for example, `vdpProfileData`.

**Default:** None

## **Examples** **Regenerate Simulink Profiler Results**

Regenerate the Profiler report for model `vdp`

In the MATLAB Command Window, start the `vdp` model.

In the Simulink editor window, run `vdp` model with Simulink Profiler enabled.

Simulink stores the data to the variable `vdpProfileData`.

To review the report, in the MATLAB Command Window

```
slprofreport(vdpProfileData)
```

The Simulink Profiler Report window is displayed.

## **Related Examples**

- “How to Save Simulink Profiler Results”

## **Concepts**

- “Capture Performance Data”

# slproject.getCurrentProject

---

**Purpose** Manipulate current Simulink Project at command line

**Syntax** `proj = slproject.getCurrentProject`

**Description** `proj = slproject.getCurrentProject` gets the current project open in the Simulink Project Tool and returns a project object `proj` that you can use to manipulate the project programmatically. Use `slproject.getProject` for project automation scripts.

**Output Arguments** **proj - Project**  
project object

Project, returned as a project object. Use the project object to manipulate the currently open Simulink Project at the command line.

Properties of `proj` output argument.

Project Property	Description	Value
Name	Project name	String
Categories	Categories of project labels	Cell array of strings
Files	Paths and labels of project files	Cell array of strings
RootFolder	Full path to project root folder	String
Shortcuts	Shortcut files in project	Cell array of strings

**Examples** **Get Airframe Example Project**

Open the Airframe project and use `slproject.getCurrentProject` to get a project object to manipulate the project at the command line.

```
sldemo_slproject_airframe  
proj = slproject.getCurrentProject
```

```
proj =  
  
    ProjectManager with properties:  
  
        Name: 'Simulink Project Airframe Example'  
    Categories: [1x2 slproject.Category]  
    Shortcuts: [1x6 slproject.Shortcut]  
        Files: [1x24 slproject.ProjectFile]  
    RootFolder: 'C:\Temp\20121107T135235\airframe'
```

## Find Project Commands

Open the airframe project and create a project object.

```
sldemo_slproject_airframe  
proj = slproject.getCurrentProject
```

```
proj =  
  
    ProjectManager with properties:  
  
        Name: 'Simulink Project Airframe Example'  
    Categories: [1x2 slproject.Category]  
        Files: [1x24 slproject.ProjectFile]  
    RootFolder: [1x61 char]
```

Find out what you can do with your project.

```
methods(proj)
```

```
Methods for class slproject.ProjectManager:
```

```
addFile  
export  
isLoading  
removeFile  
close  
findCategory
```

# slproject.getCurrentProject

---

```
reload
removeLabel
createCategory
findFile
removeCategory
```

## Examine Project Properties

After you get a project object, you can examine project properties.

Open the airframe project and create a project object.

```
sldemo_slproject_airframe
proj = slproject.getCurrentProject
```

```
proj =
```

```
  ProjectManager with properties:
```

```
      Name: 'Simulink Project Airframe Example'
  Categories: [1x2 slproject.Category]
      Files: [1x24 slproject.ProjectFile]
  RootFolder: [1x61 char]
```

Examine the project files.

```
files = proj.Files
```

```
files =
```

```
  1x24 ProjectFile array with properties:
```

```
      Path
  Labels
```

Examine the labels of the eighth file.

```
proj.Files(8).Labels
```

```
ans =  
  
    Label with properties:  
  
File: 'C:\Temp\airframe\models\AnalogControl.mdl'  
    Data: []  
    DataType: 'none'  
    Name: 'Design'  
CategoryName: 'Classification'  
  
Get a particular file.  
  
myfile = findFile(proj, 'models/AnalogControl.mdl')  
  
myfile =  
  
    ProjectFile with properties:  
  
    Path: 'C:\Temp\airframe\models\AnalogControl.mdl'  
    Labels: [1x1 slproject.Label]
```

Find out what you can do with the file.

```
methods(myfile)
```

```
Methods for class slproject.ProjectFile:
```

```
addLabel  
removeLabel  
findLabel
```

## Tips

Alternatively, you can use `simulinkproject` to get a project object, but `simulinkproject` also opens and gives focus to the Simulink Project Tool. Use `simulinkproject` to open projects and explore projects interactively. Use `slproject.getProject` for project automation scripts.

# slproject.getCurrentProject

---

## See Also

## Functions

`simulinkprojectsproject.loadProject`

**Purpose** Load Simulink project

**Syntax** `slproject.loadProject(projectPath);`  
`proj = slproject.loadProject(projectPath)`

**Description** `slproject.loadProject(projectPath);` loads the project specified by the .prj file or folder `projectPath` in the Simulink Project Tool, and closes any currently open project.

`proj = slproject.loadProject(projectPath)` loads the project and returns a project object `proj` for manipulating the project. Use `slproject.loadProject` for project automation scripts.

## Input Arguments

**projectPath - Full path to project file or folder**  
string

Full path to project .prj file or the path to the project root folder, specified as a string.

**Example:** 'C:/projects/project1/myProject.prj'

**Example:** 'C:/projects/project1/'

## Output Arguments

**proj - Project**  
project object

Project, returned as a project object. Use the project object to manipulate and explore the Simulink Project at the command line.

Properties of `proj` output argument.

Project Property	Description	Value
Name	Project name	String
Categories	Categories of project labels	Cell array of strings

# slproject.loadProject

---

Project Property	Description	Value
Files	Paths and labels of project files	Cell array of strings
RootFolder	Full path to project root folder	String
Shortcuts	Shortcut files in project	Cell array of strings

## Examples

### Load Project

Load a project from a folder called 'C:/projects/project1/'. Replace this path with the location of your project.

```
proj = slproject.loadProject('C:/projects/project1/')
```

### Get Airframe Example Project

Open the Airframe project and use `slproject.getCurrentProject` to get a project object to manipulate the project at the command line.

```
sldemo_slproject_airframe  
proj = slproject.getCurrentProject
```

```
proj =
```

```
  ProjectManager with properties:
```

```
      Name: 'Simulink Project Airframe Example'  
  Categories: [1x2 slproject.Category]  
   Shortcuts: [1x6 slproject.Shortcut]  
        Files: [1x24 slproject.ProjectFile]  
  RootFolder: 'C:\Temp\20121107T135235\airframe'
```

### Find Project Commands

Get the Airframe project..

Find project commands.

```
methods(proj)
```

```
Methods for class slproject.ProjectManager:
```

```
addFile  
export  
isLoading  
removeFile  
close  
findCategory  
reload  
removeLabel  
createCategory  
findFile  
removeCategory
```

## **Examine Project Properties**

After you get a project object, you can examine project properties.

Get the airframe project.

Examine the project files.

```
files = proj.Files
```

```
files =
```

```
    1x24 ProjectFile array with properties:
```

```
    Path  
    Labels
```

Examine the labels of the eighth file.

```
proj.Files(8).Labels
```

# slproject.loadProject

---

```
ans =
```

```
Label with properties:
```

```
File: 'C:\Temp\airframe\models\AnalogControl.mdl'  
Data: []  
DataType: 'none'  
Name: 'Design'  
CategoryName: 'Classification'
```

Get a particular file by name.

```
myfile = findFile(proj, 'models/AnalogControl.mdl')
```

```
myfile =
```

```
ProjectFile with properties:
```

```
Path: 'C:\Temp\airframe\models\AnalogControl.mdl'  
Labels: [1x1 slproject.Label]
```

Find out what you can do with the file.

```
methods(myfile)
```

```
Methods for class slproject.ProjectFile:
```

```
addLabel  
removeLabel  
findLabel
```

## See Also

## Functions

```
simulinkprojects\slproject.getCurrentProject
```

## Concepts

- “What Are Simulink Projects?”

# slreplace\_mux

---

**Purpose** Replace Mux blocks used to create buses with Bus Creator blocks

**Syntax** `[muxes, uniqueMuxes, uniqueBds] = slreplace_mux('model')`  
`[muxes, uniqueMuxes, uniqueBds] = slreplace_mux('model', reportonly)`

**Description** `[muxes, uniqueMuxes, uniqueBds] = slreplace_mux('model')` reports all Mux blocks that create buses in `model` and in libraries referenced by `model`. A signal created by a Mux block is a bus if the signal meets either or both of the following conditions:

- A Bus Selector block individually selects one or more of the signal's elements (as opposed to the entire signal).
- The signal's components have different data types, numeric types (complex or real), dimensionality, storage classes, or sampling modes.

Before running this command in any form, you should set the **Mux blocks used to create bus signals** connectivity diagnostic to warning or none. See “Connectivity Diagnostics Overview” for more information.

`[muxes, uniqueMuxes, uniqueBds] = slreplace_mux('model', reportonly)` is equivalent to `[muxes, uniqueMuxes, uniqueBds] = slreplace_mux('model')` if `reportonly` is true.

If `reportonly` is false, the function reports all Mux blocks that create buses in `model` and in libraries referenced by `model`, and replaces all such Mux blocks with Bus Creator blocks. The function saves the model, if changed, and saves and closes any changed library. You should make a backup copy of your model and libraries before using this form of the command.

## Input Arguments

### **model**

The model for which `slreplace_mux` is to report and optionally replace muxes used as buses.

### **reportOnly**

Whether to just generate a report (`true`) or also change the model(s) (`false`).

**Default:** `true`

## Output Arguments

### **muxes**

All Mux blocks used as Bus Creators in the model and in libraries referenced by the model

### **uniqueMuxes**

All Mux blocks used as Bus Creators in the model and in libraries referenced by the model, except blocks in the model that are copies of blocks in libraries

### **uniqueBds**

All models and libraries that use Mux blocks as Bus Creators

## See Also

Bus Creator | Mux

## How To

- “Connectivity Diagnostics Overview”
- “Prevent Bus and Mux Mixtures”
- “Mux Signals”
- “Composite Signals”

# slupdate

---

**Purpose** Replace blocks from previous releases with latest versions

**Syntax**

```
slupdate('sys')
slupdate('sys', prompt)
AnalysisResult = slupdate('sys', 'OperatingMode',
'Analyze')
```

**Description** `slupdate('sys')` replaces blocks in model `sys` from a previous release of Simulink software with the latest versions. The `slupdate` function alone cannot perform all upgrade checks on your model. Use the Upgrade Advisor to access the `slupdate` checks and also advice and fixes for all other upgrade checks. See “Model Upgrades”.

---

**Note** Best practice is to first open the model, and press CTRL+D to update the model, before you call `slupdate`.

---

`slupdate('sys', prompt)` specifies whether to prompt you before replacing a block. If *prompt* equals 1, the command prompts you before replacing the block. The prompt asks whether you want to replace the block. Valid responses are

- y  
Replace the block (the default).
- n  
Do not replace the block.
- a  
Replace this and all subsequent obsolete blocks without further prompting.

If *prompt* equals 0, the command replaces all obsolete blocks without prompting you.

In addition to replacing obsolete blocks, `slupdate`

- Reconnects broken links to masked blocks in libraries provided by MathWorks to ensure that the model reflects changes made to the blocks in this release. This will overwrite any custom changes you made to the masks of these blocks.
- Updates obsolete configuration settings for the model.

`AnalysisResult = slupdate('sys', 'OperatingMode', 'Analyze')` performs only the analysis portion without updating or changing the model. This command analyzes referenced models, linked libraries, and S-functions, and then returns a data structure with the following fields:

- `Message` — string containing a message summarizing the results
- `blockList` — cell array listing blocks that need to be updated
- `blockReasons` — cell array listing reasons for updating the corresponding blocks
- `modelList` — cell array listing referenced models and the parent model
- `libraryList` — cell array listing non-MathWorks libraries referenced
- `configSetList` — for internal use
- `sfunList` — cell array listing S-functions referenced
- `sfunOK` — logical array representing S-function status, where `false` indicates that an S-function needs updating and `true` indicates otherwise
- `sfunType` — cell array listing apparent S-function type (e.g., `.mex`)

## See Also

`upgradeadvisor`

## How To

- “Model Upgrades”

# legoev3

---

**Purpose** Create connection between host computer and EV3 hardware

**Syntax**  
`myev3 = legoev3(ipaddress)`  
`legoev3(ipaddress)`

**Description** `myev3 = legoev3(ipaddress)` creates a connection between the MATLAB software on your host computer and the operating system on the EV3 hardware. You can use this connection to start, stop, or delete Simulink models that you deployed to the EV3 hardware.

`legoev3(ipaddress)` verifies that the MATLAB software can reach an EV3 brick with the specified IP address on the network.

## Input Arguments

**ipaddress - IP address of EV3 hardware**  
IP address

IP address of EV3 hardware, specified as a string. You can get the IP address from **Brick Info** screen on the EV3 hardware.

**Example:** '192.168.1.7'

**Data Types**  
char

## Output Arguments

**myev3 - Connection to specific EV3 brick**  
handle

Connection to a specific EV3 brick, specified as a handle.

After creating a `myev3` handle, you can use the handle with the following methods:

- `stopModel`
- `runModel`
- `deleteModel`

You can use `myev3` to read and write the `ipAddress` property.

For example, to read the current IP address, enter:

```
myev3.ipAddress
```

```
ans =
```

```
172.21.128.249
```

For example, to connect to a different EV3 brick without clearing and recreating a connection, assign a new IP address to the connection:

```
myev3.ipAddress = '172.21.128.250'
```

```
myev3 =
```

```
legoev3 with properties:
```

```
ipAddress: '172.21.128.250'
```

## Examples

### Manage a Simulink Model That Is Running on EV3 Hardware

After you run a Simulink model on the EV3 hardware, you can use commands to stop, restart, and delete the model.

Create a connection between the MATLAB software on your host computer and the operating system on the EV3 hardware.

```
myev3 = legoev3('172.21.128.249')
```

```
myev3 =
```

```
legoev3 with properties:
```

```
ipAddress: '172.21.128.249'
```

The function returns a handle, `myev3`, that you will use as the first argument in the following commands.

To stop the model on the EV3 hardware, enter:

```
stopModel(myev3,'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has stopped the model, it returns 0.

To restart the model on the EV3 hardware, enter:

```
runModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has restarted the model, it returns 0.

To delete the model on the EV3 hardware, enter:

```
deleteModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has deleted the model, it returns 0.

## **Verify That EV3 Hardware is Reachable**

You can verify that an EV3 brick with a specific IP address is reachable on the network. For example, you can use this syntax to check that the EV3 power is on before you deploy a model to the EV3 brick.

```
legoev3('172.21.128.249')
```

```
ans =
```

```
legoev3 with properties:
```

```
ipAddress: '172.21.128.249'
```

The function returns the IP address of the reachable EV3 brick on the network.

If an EV3 brick is not reachable at the specified address, the command returns an error.

```
legoev3('172.21.128.250')
```

```
Error using legoev3 (line 60)  
Failed to connect to '172.21.128.250'.  
Please check your network settings.
```

## See Also

[stopModel](#) | [runModel](#) | [deleteModel](#)

## Related Examples

- “Connect the EV3 Hardware to the Network”
- “Run Model on EV3 Hardware”

# deleteModel

---

**Purpose** Delete Simulink model on EV3 hardware

**Syntax** `deleteModel(myev3,modelname)`

**Description** `deleteModel(myev3,modelname)` deletes a Simulink model on the EV3 hardware.

**Input Arguments**

**myev3 - Connection to specific EV3 brick**  
`handle`  
Connection to a specific EV3 brick, specified as a handle.  
Use `legoev3` to create this connection.  
**Example:** `legoev3`

**modelname - Name of model**  
`model name | all`  
Name of model, specified as a string. Use `'all'` to clear all Simulink models from the EV3 memory.  
**Example:** `'ev3_gettingstarted'`  
**Example:** `'all'`

## Examples **Manage a Simulink Model That Is Running on EV3 Hardware**

After you run a Simulink model on the EV3 hardware, you can use commands to stop, restart, and delete the model.

Create a connection between the MATLAB software on your host computer and the operating system on the EV3 hardware.

```
myev3 = legoev3('172.21.128.249')
```

```
myev3 =
```

```
legoev3 with properties:
```

```
ipAddress: '172.21.128.249'
```

The function returns a handle, `myev3`, that you will use as the first argument in the following commands.

To stop the model on the EV3 hardware, enter:

```
stopModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has stopped the model, it returns 0.

To restart the model on the EV3 hardware, enter:

```
runModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has restarted the model, it returns 0.

To delete the model on the EV3 hardware, enter:

```
deleteModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has deleted the model, it returns 0.

## See Also

[legoev3](#) | [stopModel](#) | [runModel](#)

## Related Examples

- “Connect the EV3 Hardware to the Network”
- “Run Model on EV3 Hardware”

# runModel

---

<b>Purpose</b>	Start or restart Simulink model running on EV3 hardware
<b>Syntax</b>	<code>runModel(myev3,modelname)</code>
<b>Description</b>	<code>runModel(myev3,modelname)</code> starts or restarts a Simulink model on the EV3 hardware.
<b>Input Arguments</b>	<b>myev3 - Connection to specific EV3 brick</b> <code>handle</code> Connection to a specific EV3 brick, specified as a handle. Use <code>legoev3</code> to create this connection. <b>Example:</b> <code>legoev3</code> <b>modelName - Name of model</b> <code>model name</code> Name of model, specified as a string. <b>Example:</b> <code>'ev3_gettingstarted'</code>

## Examples **Manage a Simulink Model That Is Running on EV3 Hardware**

After you run a Simulink model on the EV3 hardware, you can use commands to stop, restart, and delete the model.

Create a connection between the MATLAB software on your host computer and the operating system on the EV3 hardware.

```
myev3 = legoev3('172.21.128.249')
```

```
myev3 =
```

```
legoev3 with properties:
```

```
ipAddress: '172.21.128.249'
```

The function returns a handle, `myev3`, that you will use as the first argument in the following commands.

To stop the model on the EV3 hardware, enter:

```
stopModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has stopped the model, it returns 0.

To restart the model on the EV3 hardware, enter:

```
runModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has restarted the model, it returns 0.

To delete the model on the EV3 hardware, enter:

```
deleteModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has deleted the model, it returns 0.

## See Also

[legoev3](#) | [stopModel](#) | [deleteModel](#)

## Related Examples

- “Connect the EV3 Hardware to the Network”
- “Run Model on EV3 Hardware”

# stopModel

---

<b>Purpose</b>	Stop Simulink model running on EV3 hardware
<b>Syntax</b>	<code>stopModel(myev3,modelname)</code>
<b>Description</b>	<code>stopModel(myev3,modelname)</code> stops a Simulink model that is running on the EV3 hardware.

<b>Input Arguments</b>	<b>myev3 - Connection to specific EV3 brick</b> <code>handle</code> Connection to a specific EV3 brick, specified as a handle. Use <code>legoev3</code> to create this connection. <b>Example:</b> <code>legoev3</code>
	<b>modelName - Name of model</b> <code>model name   all</code> Name of model, specified as a string. Use <code>'all'</code> to clear all Simulink models from the EV3 memory. <b>Example:</b> <code>'ev3_gettingstarted'</code> <b>Example:</b> <code>'all'</code>

## **Examples**      **Manage a Simulink Model That Is Running on EV3 Hardware**

After you run a Simulink model on the EV3 hardware, you can use commands to stop, restart, and delete the model.

Create a connection between the MATLAB software on your host computer and the operating system on the EV3 hardware.

```
myev3 = legoev3('172.21.128.249')
```

```
myev3 =
```

```
legoev3 with properties:
```

```
ipAddress: '172.21.128.249'
```

The function returns a handle, `myev3`, that you will use as the first argument in the following commands.

To stop the model on the EV3 hardware, enter:

```
stopModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has stopped the model, it returns 0.

To restart the model on the EV3 hardware, enter:

```
runModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has restarted the model, it returns 0.

To delete the model on the EV3 hardware, enter:

```
deleteModel(myev3, 'ev3_gettingstarted')
```

```
ans =
```

```
0
```

When the function has deleted the model, it returns 0.

## See Also

`legoev3` | `runModel` | `deleteModel`

## Related Examples

- “Connect the EV3 Hardware to the Network”
- “Run Model on EV3 Hardware”

# supportPackageInstaller

---

**Purpose** Find and install support for third-party hardware or software

**Syntax** supportPackageInstaller


**Description** The supportPackageInstaller function opens *Support Package Installer*.

Support Package Installer can install *support packages*, which add support for specific third-party hardware or software to specific MathWorks products.

To see a list of available support packages, run Support Package Installer and advance to the second screen.

You can also start Support Package Installer in one of the following ways:

- On the MATLAB toolstrip, click **Add-Ons > Get Hardware Support Packages**.

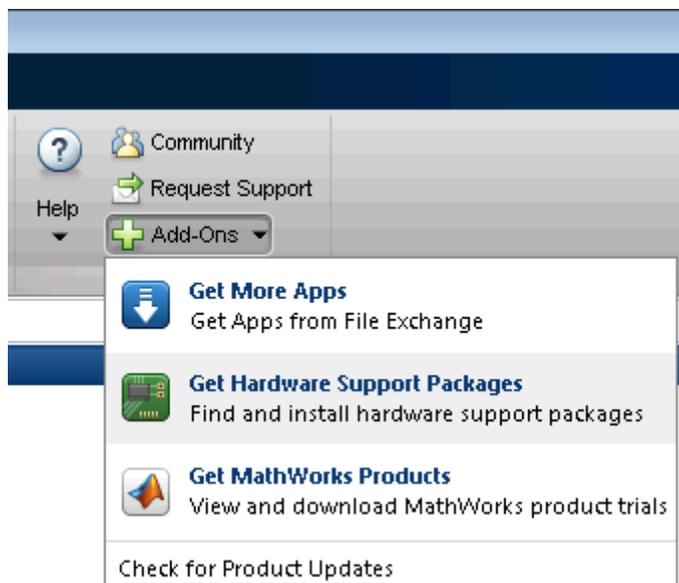

- Double-click a support package installation file (\*.mlpkginstall).

## See Also

`targetUpdater` | `matlabshared.supportpkg.checkForUpdate` |  
`matlabshared.supportpkg.getInstalled`

# targetinstaller

---

**Purpose** Open Support Package Installer and install support for third-party hardware or software

**Syntax** targetinstaller

**Description**

---


**Note** This function has been superseded by supportPackageInstaller. Use supportPackageInstaller instead of targetinstaller.

---

The targetinstaller function opens *Support Package Installer*. Support Package Installer can install *support packages*, which add support for specific third-party hardware or software to specific MathWorks products. To see a list of available support packages, run Support Package Installer and advance to the second screen.

You can also start Support Package Installer in one of the following ways:

- On the MATLAB toolstrip, click **Add-Ons > Get Hardware Support Packages**.

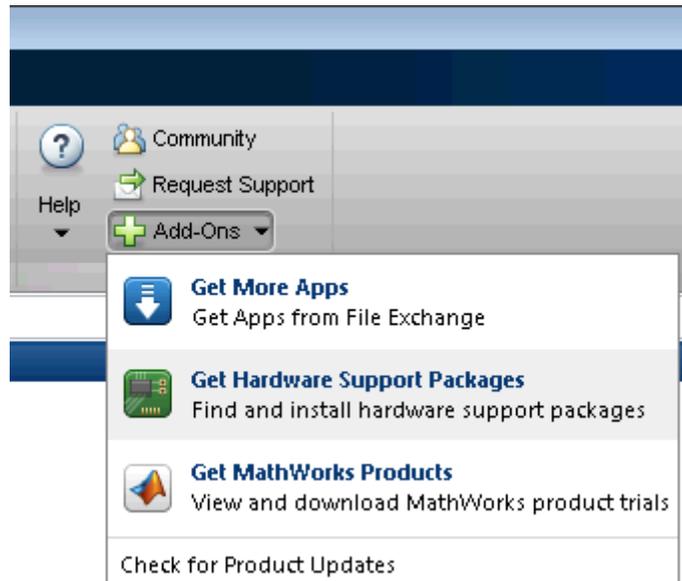

- Double-click a support package installation file (\*.mlpkginstall).

## See Also

`supportPackageInstaller` | `targetUpdater` |  
`matlabshared.supportpkg.checkForUpdate` |  
`matlabshared.supportpkg.getInstalled`

# targetupdater

---

**Purpose** Open Support Package Installer and update firmware on third-party hardware

## Syntax

**Description** The `targetupdater` function skips over the support package installation screens and opens Support Package Installer at the “Update firmware” screen. You can use this function to update the firmware on hardware without repeating the support package installation process.

---

**Tip** Use this function when you have multiple pieces of hardware.

---

The `targetupdater` function is only available for support packages that have already been installed and that require special firmware or setup steps.

If the **Hardware** parameter does not present an option for your hardware, use the `supportPackageInstaller` function to open Support Package Installer. Support Package Installer will guide you through the process of installing a support package for your hardware and, if required, updating the firmware.

## See Also

`supportPackageInstaller` |  
`matlabshared.supportpkg.checkForUpdate` |  
`matlabshared.supportpkg.getInstalled`

**Purpose**

Find trim point of dynamic system

**Syntax**

```
[x,u,y,dx] = trim('sys')
[x,u,y,dx] = trim('sys',x0,u0,y0)
[x,u,y,dx] = trim('sys',x0,u0,y0,ix,iu,iy)
[x,u,y,dx] = trim('sys',x0,u0,y0,ix,iu,iy,dx0,idx)
[x,u,y,dx,options] =
trim('sys',x0,u0,y0,ix,iu,iy,dx0,idx,options)
[x,u,y,dx,options] =
trim('sys',x0,u0,y0,ix,iu,iy,dx0,idx,options,t)
```

**Description**

A trim point, also known as an equilibrium point, is a point in the parameter space of a dynamic system at which the system is in a steady state. For example, a trim point of an aircraft is a setting of its controls that causes the aircraft to fly straight and level. Mathematically, a trim point is a point where the system's state derivatives equal zero. `trim` starts from an initial point and searches, using a sequential quadratic programming algorithm, until it finds the nearest trim point. You must supply the initial point implicitly or explicitly. If `trim` cannot find a trim point, it returns the point encountered in its search where the state derivatives are closest to zero in a min-max sense; that is, it returns the point that minimizes the maximum deviation from zero of the derivatives. `trim` can find trim points that meet specific input, output, or state conditions, and it can find points where a system is changing in a specified manner, that is, points where the system's state derivatives equal specific nonzero values.

`[x,u,y,dx] = trim('sys')` finds the equilibrium point nearest to the system's initial state, `x0`. Specifically, `trim` finds the equilibrium point that minimizes the maximum absolute value of  $[x-x_0, u, y]$ . If `trim` cannot find an equilibrium point near the system's initial state, it returns the point at which the system is nearest to equilibrium. Specifically, it returns the point that minimizes  $\text{abs}(dx-0)$ . You can obtain `x0` using this command.

```
[sizes,x0,xstr] = sys([],[],[],0)
```

`[x,u,y,dx] = trim('sys',x0,u0,y0)` finds the trim point nearest to `x0`, `u0`, `y0`, that is, the point that minimizes the maximum value of

```
abs([x-x0; u-u0; y-y0])
```

`[x,u,y,dx] = trim('sys',x0,u0,y0,ix,iu,iy)` finds the trim point closest to `x0`, `u0`, `y0` that satisfies a specified set of state, input, and/or output conditions. The integer vectors `ix`, `iu`, and `iy` select the values in `x0`, `u0`, and `y0` that must be satisfied. If `trim` cannot find an equilibrium point that satisfies the specified set of conditions exactly, it returns the nearest point that satisfies the conditions, namely,

```
abs([x(ix)-x0(ix); u(iu)-u0(iu); y(iy)-y0(iy)])
```

`[x,u,y,dx] = trim('sys',x0,u0,y0,ix,iu,iy,dx0,idx)` finds specific nonequilibrium points, that is, points at which the system's state derivatives have some specified nonzero value. Here, `dx0` specifies the state derivative values at the search's starting point and `idx` selects the values in `dx0` that the search must satisfy exactly.

`[x,u,y,dx,options] = trim('sys',x0,u0,y0,ix,iu,iy,dx0,idx,options)` specifies an array of optimization parameters that `trim` passes to the optimization function that it uses to find trim points. The optimization function, in turn, uses this array to control the optimization process and to return information about the process. `trim` returns the `options` array at the end of the search process. By exposing the underlying optimization process in this way, `trim` allows you to monitor and fine-tune the search for trim points.

The following table describes how each element affects the search for a trim point. Array elements 1, 2, 3, 4, and 10 are particularly useful for finding trim points.

No.	Default	Description
1	0	Specifies display options. 0 specifies no display; 1 specifies tabular output; -1 suppresses warning messages.
2	$10^{-4}$	Precision the computed trim point must attain to terminate the search.
3	$10^{-4}$	Precision the trim search goal function must attain to terminate the search.
4	$10^{-6}$	Precision the state derivatives must attain to terminate the search.
5	N/A	Not used.
6	N/A	Not used.
7	N/A	Used internally.
8	N/A	Returns the value of the trim search goal function ( $\lambda$ in goal attainment).
9	N/A	Not used.
10	N/A	Returns the number of iterations used to find a trim point.
11	N/A	Returns the number of function gradient evaluations.
12	0	Not used.
13	0	Number of equality constraints.
14	100*(Number of variables)	Maximum number of function evaluations to use to find a trim point.
15	N/A	Not used.
16	$10^{-8}$	Used internally.
17	0.1	Used internally.
18	N/A	Returns the step length.

```
[x,u,y,dx,options] =  
trim('sys',x0,u0,y0,ix,iu,iy,dx0,idx,options,t) sets the time  
to t if the system is dependent on time.
```

## Examples

Consider a linear state-space system modeled using a State-Space block

$$\dot{x} = Ax + Bu$$

$$y = Cx + Du$$

The  $A$ ,  $B$ ,  $C$ , and  $D$  matrices to enter at the command line or in the block parameters dialog are:

```
A = [-0.09 -0.01; 1 0];  
B = [ 0 -7; 0 -2];  
C = [ 0 2; 1 -5];  
D = [-3 0; 1 0];
```

### Example 1

To find an equilibrium point in this model called `sys`, use:

```
[x,u,y,dx,options] = trim('sys')  
x =  
 0  
 0  
u =  
 0  
 0  
y =  
 0  
 0  
dx =  
 0  
 0
```

The number of iterations taken is:

```
options(10)
ans =
     7
```

### Example 2

To find an equilibrium point near  $x = [1;1]$ ,  $u = [1;1]$ , enter

```
x0 = [1;1];
u0 = [1;1];
[x,u,y,dx,options] = trim('sys', x0, u0);
x =
    1.0e-13 *
   -0.5160
   -0.5169
u =
    0.3333
    0.0000
y =
   -1.0000
    0.3333
dx =
    1.0e-12 *
    0.1979
    0.0035
```

The number of iterations taken is

```
options(10)
ans =
    25
```

### Example 3

To find an equilibrium point with the outputs fixed to 1, use:

```
y = [1;1];
iy = [1;2];
```

```
[x,u,y,dx] = trim('sys', [], [], y, [], [], iy)
x =
    0.0009
   -0.3075
u =
   -0.5383
    0.0004
y =
    1.0000
    1.0000
dx =
    1.0e-15 *
   -0.0170
    0.1483
```

## Example 4

To find an equilibrium point with the outputs fixed to 1 and the derivatives set to 0 and 1, use

```
y = [1;1];
iy = [1;2];
dx = [0;1];
idx = [1;2];
[x,u,y,dx,options] = trim('sys',[],[],y,[],[],iy,dx,idx)
x =
    0.9752
   -0.0827
u =
   -0.3884
   -0.0124
y =
    1.0000
    1.0000
dx =
    0.0000
    1.0000
```

The number of iterations taken is

```
options(10)
ans =
    13
```

## Limitations

The trim point found by `trim` starting from any given initial point is only a local value. Other, more suitable trim points may exist. Thus, if you want to find the most suitable trim point for a particular application, it is important to try a number of initial guesses for `x`, `u`, and `y`.

## Algorithms

`trim` uses a sequential quadratic programming algorithm to find trim points. See “Sequential Quadratic Programming (SQP)” for a description of this algorithm.

# tunablevars2parameterobjects

---

**Purpose** Create Simulink parameter objects from tunable parameters

**Syntax**  
`tunablevars2parameterobjects ('modelName')`  
`tunablevars2parameterobjects ('modelName', class)`

**Description** `tunablevars2parameterobjects ('modelName')` creates `Simulink.Parameter` objects in the base workspace for the variables listed in the specified model's Tunable Parameters dialog, then deletes the source information from the dialog. To preserve the information, save the resulting Simulink parameter objects into a MAT-file.

If a tunable variable is already defined as a numeric variable in the base workspace, the variable will be replaced by a parameter object and the original variable will be copied to the object's Value property.

If a tunable variable is already defined as a Simulink parameter object, the object will not be modified but the information for the variable will still be deleted from the Tunable Parameters dialog.

If a tunable variable is defined as any other class of variable, the variable will not be modified and the information for the variable will not be deleted from the Tunable Parameters dialog.

`tunablevars2parameterobjects ('modelName', class)` creates objects of the specified class rather than `Simulink.Parameter` objects.

## Input Arguments

**modelName**  
Model name or handle

**class**  
Parameter class to use for creating objects

**Default:** `Simulink.Parameter`

**See Also** `Simulink.Parameter`

**How To** • “Tunable Parameters”

**Purpose** Create `Simulink.NumericType` object describing unsigned fixed-point data type

**Syntax** `a = ufix(WordLength)`

**Description** `ufix(WordLength)` returns a `Simulink.NumericType` object that describes a signed fixed-point data type with the specified word length and unspecified scaling.

---

**Note** `ufix` is a legacy function. In new code, use `fixdt` instead. In existing code, replace `ufix(WordLength)` with `fixdt(0,WordLength)`.

---

**Examples** Define a 16-bit unsigned fixed-point data type.

```
a = ufix(16)
```

```
a =
```

```
    NumericType with properties:
```

```
    DataTypeMode: 'Fixed-point: unspecified scaling'
    Signedness: 'Unsigned'
    WordLength: 16
    IsAlias: 0
    DataScope: 'Auto'
    HeaderFile: ''
    Description: ''
```

**See Also** `fixdt` | `Simulink.NumericType` | `float` | `sfix` | `sfrac` | `sint` | `ufrac` | `uint`

# ufrac

---

**Purpose** Create Simulink.NumericType object describing unsigned fractional data type

**Syntax**

```
a = ufrac(WordLength)
a = ufrac(WordLength, GuardBits)
```

**Description**

`ufrac(WordLength)` returns a Simulink.NumericType object that describes the data type of an unsigned fractional data type with a word size given by `WordLength`.

`ufrac(WordLength, GuardBits)` returns a Simulink.NumericType object that describes the data type of an unsigned fractional data type. The total word size is given by `WordLength` with `GuardBits` bits located to the left of the binary point.

---

**Note** `ufrac` is a legacy function. In new coder, use `fixdt` instead. In existing code, replace `ufrac(WordLength)` with `fixdt(0,WordLength,WordLength)` and `ufrac(WordLength,GuardBits)` with `fixdt(0,WordLength,(WordLength-GuardBits))`.

---

**Examples**

Define an 8-bit unsigned fractional data type with 4 guard bits. Note that the range of this data type is from 0 to  $(1 - 2^{-8}) \cdot 2^4 = 15.9375$ .

```
a = ufrac(8,4)
```

```
a =
```

```
NumericType with properties:
```

```
    DataTypeMode: 'Fixed-point: binary point scaling'
        Signedness: 'Unsigned'
        WordLength: 8
    FractionLength: 4
```

```
IsAlias: 0  
DataScope: 'Auto'  
HeaderFile: ''  
Description: ''
```

**See Also**

`fixdt` | `Simulink.NumericType` | `float` | `sfix` | `sfrac` | `sint` | `ufix`  
| `uint`

# uint

---

**Purpose** Create Simulink.NumericType object describing unsigned integer data type

**Syntax** `a = uint(WordLength)`

**Description** `uint(WordLength)` returns a Simulink.NumericType object that describes the data type of an unsigned integer with a word size given by `WordLength`.

---

**Note** `uint` is a legacy function. In new code, use `fixdt` instead. In existing code, replace `uint(WordLength)` with `fixdt(0,WordLength,0)`.

---

**Examples** Define a 16-bit unsigned integer.

```
a = uint(16)
```

```
a =
```

```
    NumericType with properties:
```

```
        DataTypeMode: 'Fixed-point: binary point scaling'
        Signedness: 'Unsigned'
        WordLength: 16
    FractionLength: 0
        IsAlias: 0
        DataScope: 'Auto'
        HeaderFile: ''
        Description: ''
```

**See Also** `fixdt` | Simulink.NumericType | `float` | `sfix` | `sfrac` | `sint` | `ufix` | `ufrac`

<b>Purpose</b>	Extract signal logging objects from signal logs and write them into MATLAB workspace
<b>Syntax</b>	<code>log.unpack</code> <code>tsarray.unpack</code> <code>log.unpack('systems')</code> <code>log.unpack('all')</code>
<b>Description</b>	<p><code>log.unpack</code> or <code>unpack(log)</code> extracts the top level elements of the <code>Simulink.ModelDataLogs</code> or <code>Simulink.SubsysDataLogs</code> object named <b>log</b> (e.g., <code>logout</code>).</p> <p><code>log.unpack('systems')</code> or <code>unpack(log, 'systems')</code> extracts <code>Simulink.Timeseries</code> and <code>Simulink.TsArray</code> objects from the <code>Simulink.ModelDataLogs</code> or <code>Simulink.SubsysDataLogs</code> object named <code>log</code>. This command does not extract <code>Simulink.Timeseries</code> objects from <code>Simulink.TsArray</code> objects nor does it write intermediate <code>Simulink.ModelDataLogs</code> or <code>Simulink.SubsysDataLogs</code> objects to the MATLAB workspace.</p> <p><code>log.unpack('all')</code> or <code>unpack(log, 'all')</code> extracts all the <code>Simulink.Timeseries</code> objects contained by the <code>Simulink.ModelDataLogs</code>, <code>Simulink.TsArray</code>, or <code>Simulink.SubsysDataLogs</code> object named <code>log</code>.</p> <p><code>tsarray.unpack</code> extracts the time-series objects of class <code>Simulink.Timeseries</code> from the <code>Simulink.TsArray</code> object named <code>tsarray</code>.</p>
<b>See Also</b>	<code>Simulink.ModelDataLogs</code>   <code>Simulink.SubsysDataLogs</code>   <code>Simulink.ScopeDataLogs</code>   <code>Simulink.Timeseries</code>   <code>Simulink.TsArray</code>   <code>who</code>   <code>whos</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Export Signal Data Using Signal Logging”</li></ul>

# upgradeadvisor

---

**Purpose** Open Upgrade Advisor

**Syntax** `upgradeadvisor('modelName')`

**Description** `upgradeadvisor('modelName')` opens the Upgrade Advisor for the model specified by `modelName`. If the specified model is not open, this command opens it. Use the Upgrade Advisor to help you upgrade and improve models with the current release.

**Tips**

- You can also open the Upgrade Advisor from the Model Editor, by selecting **Analysis > Model Advisor > Upgrade Advisor**.
- The Upgrade Advisor can identify cases where you can benefit by changing your model to use new features and settings in Simulink. The Advisor provides advice for transitioning to new technologies, and upgrading a model hierarchy.

The Upgrade Advisor can also identify cases where a model will not work because changes and improvements in Simulink require changes to a model.

The Upgrade Advisor offers options to perform recommended actions automatically or instructions for manual fixes.

**Input Arguments**

**modelName**  
String specifying the name or handle to the model.

**Examples**

The command

```
upgradeadvisor('vdp')
```

opens the Upgrade Advisor on the vdp example model.

The command

```
upgradeadvisor('f14/Aircraft Dynamics Model')
```

opens the Upgrade Advisor on the Aircraft Dynamics Model subsystem of the f14 example model.

The command

```
upgradeadvisor(bdroot)
```

opens the Upgrade Advisor on the currently selected model.

## Alternatives

You can also open the Upgrade Advisor from the Simulink Model Editor, by selecting **Analysis > Model Advisor > Upgrade Advisor**.

Alternatively, you can open the Upgrade Advisor from the Model Advisor. In the Model Advisor, under **By Task checks**, expand the folder **Upgrading to the Current Simulink Version** and select the check **Open the Upgrade Advisor**.

## See Also

modeladvisor

## Related Examples

- “Consult the Upgrade Advisor”
- “Consult the Model Advisor”

# view\_mdhrefs

---

**Purpose** Display graph of model reference dependencies

**Syntax** `view_mdhrefs('modelName')`

**Description** `view_mdhrefs('modelName')` launches the Model Dependency Viewer, which displays a graph of model reference dependencies for the model specified by *modelName*. The nodes in the graph represent Simulink models. The directed lines indicate model dependencies.

The default display omits library blocks. You could see this same display by opening *modelName* and choosing **Analysis > Model Dependencies > Model Dependency Viewer > Models Only** from the model menu. Use **Analysis > Model Dependencies > Model Dependency Viewer** to see other dependency displays.

The Model Dependency Viewer is the same tool, and provides the same options, whether you launch it by typing `view_mdhrefs('modelName')` or by using the Simulink GUI. To see an example of using the Model Dependency Viewer, type `sldemo_mdhref_depgraph` in the MATLAB Command Window.

**See Also** `Model | find_mdhrefs`

**Tutorials**

- `sldemo_mdhref_depgraph`

**How To**

- “Model Reference”
- “Model Dependency Viewer”

---

<b>Purpose</b>	List names of top-level data logging objects in Simulink data log
<b>Syntax</b>	<code>log.who</code> <code>tsarray.who</code> <code>log.who('systems')</code> <code>log.who('all')</code>
<b>Description</b>	<p><code>log.who</code> or <code>who(log)</code> lists the names of the top-level signal logging objects contained by <code>log</code>, where <code>log</code> is the handle of a <code>Simulink.ModelDataLogs</code> object name.</p> <p><code>tsarray.who</code> or <code>who(tsarray)</code> lists the names of <code>Simulink.TimeSeries</code> objects contained by the <code>Simulink.TsArray</code> object named <code>tsarray</code>.</p> <p><code>log.who('systems')</code> or <code>who(log, 'systems')</code> lists the names of all signal logging objects contained by <code>log</code> except for <code>Simulink.Timeseries</code> objects stored in <code>Simulink.TsArray</code> objects contained by <code>log</code>.</p> <p><code>log.who('all')</code> or <code>who(log, 'all')</code> lists the names of all the <code>Simulink.Timeseries</code> objects contained by the <code>Simulink.ModelDataLogs</code>, <code>Simulink.TsArray</code>, or <code>Simulink.SubsysDataLogs</code> object named <code>log</code>.</p> <p>For information about other uses of <code>who</code>, execute <code>help who</code> in the MATLAB Command Window.</p>
<b>See Also</b>	<code>Simulink.ModelDataLogs</code>   <code>Simulink.SubsysDataLogs</code>   <code>Simulink.ScopeDataLogs</code>   <code>Simulink.Timeseries</code>   <code>Simulink.TsArray</code>   <code>whos</code>   <code>unpack</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Signal Logging Object”</li></ul>

# whos

---

<b>Purpose</b>	List names and types of top-level data logging objects in Simulink data log
<b>Syntax</b>	<code>log.whos</code> <code>tsarray.whos</code> <code>log.whos('systems')</code> <code>log.whos('all')</code>
<b>Description</b>	<p><code>log.whos</code> or <code>whos(log)</code> lists the names and types of the top-level signal logging objects contained by <code>log</code>, where <code>log</code> is the handle of a <code>Simulink.ModelDataLogs</code> object name.</p> <p><code>tsarray.whos</code> or <code>whos(tsarray)</code> lists the names and types of <code>Simulink.TimeSeries</code> objects contained by the <code>Simulink.TsArray</code> object named <code>tsarray</code>.</p> <p><code>log.whos('systems')</code> or <code>whos(log, 'systems')</code> lists the names and types of all signal logging objects contained by <code>log</code> except for <code>Simulink.Timeseries</code> objects stored in <code>Simulink.TsArray</code> objects contained by <code>log</code>.</p> <p><code>log.whos('all')</code> or <code>whos(log, 'all')</code> lists the names and types of all the <code>Simulink.Timeseries</code> objects contained by the <code>Simulink.ModelDataLogs</code>, <code>Simulink.TsArray</code>, or <code>Simulink.SubsysDataLogs</code> object named <code>log</code>.</p> <p>For information about other uses of <code>whos</code>, execute <code>help whos</code> in the MATLAB Command Window.</p>
<b>See Also</b>	<code>Simulink.ModelDataLogs</code>   <code>Simulink.SubsysDataLogs</code>   <code>Simulink.ScopeDataLogs</code>   <code>Simulink.Timeseries</code>   <code>Simulink.TsArray</code>   <code>who</code>   <code>unpack</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• “Signal Logging Object”</li></ul>

# Apps — Alphabetical List

---

# Code Generation Advisor

---

**Purpose** Analyze model configuration settings against your code generation objectives

**Description** Code Generation Advisor checks your model and suggests configuration changes you can make to achieve your code generation objectives.


**Access** From the Simulink Editor:

- On the menu bar, select **Code > C/C++ Code > Code Generation Advisor**.
- On the toolbar  drop-down list, select Code Generation Advisor.
- Right-click a subsystem and select **C/C++ Code > Code Generation Advisor**.

- Examples**
- “Check and Configure Model for Code Generation Objectives”
  - “Check and Configure Model for Code Generation Objectives Using Configuration Parameters Dialog Box”

**Parameters** Context-sensitive help is available for Code Generation Advisor checks.  
To get help on a check:

- 1 Right-click the text label.
- 2 From the context menu, select **What’s This**.

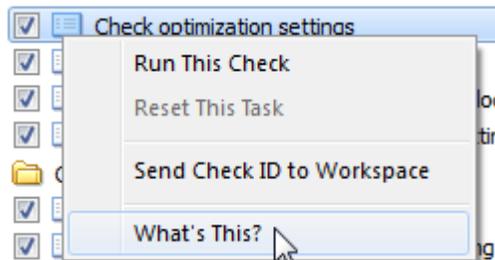


## **More About**

- “High-Level Code Generation Objectives”
- “Available Checks for Code Generation Objectives”

# Model Advisor

---

<b>Purpose</b>	Analyze model for inaccurate or inefficient conditions and settings
<b>Description</b>	Model Advisor checks your model for conditions and settings that can result in inaccurate or inefficient simulation of the system the model represents.
<b>Access</b>	<ul style="list-style-type: none"><li>• From the Model Editor, select <b>Analysis &gt; Model Advisor &gt; Model Advisor</b> or <b>Model Advisor Dashboard</b>.</li><li>• At the MATLAB command prompt, enter <code>modeladvisor(model)</code>.</li></ul>
<b>Examples</b>	<ul style="list-style-type: none"><li>• “Start the Model Advisor”</li><li>• “Run Model Advisor Checks”</li><li>• “Run Checks Using Model Advisor Dashboard”</li><li>• “Highlight Model Advisor Analysis Results”</li><li>• “Fix a Warning or Failure”</li><li>• “Revert Changes”</li><li>• “View and Save Model Advisor Reports”</li><li>• “Run the Model Advisor Programmatically”</li></ul>
<b>Parameters</b>	<p>Context-sensitive help is available for Model Advisor checks.</p> <p>To get help on a check:</p> <ol style="list-style-type: none"><li><b>1</b> Right-click the text label.</li><li><b>2</b> From the context menu, select <b>What’s This</b>.</li></ol>

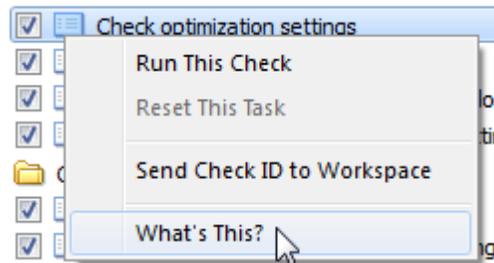

## More About

- “About the Model Advisor”
- “Overview of the Model Advisor Window”
- “Overview of the Model Advisor Dashboard”
- “Check Support for Libraries”
- “Checks Triggering an Update Diagram”
- “Model Advisor Limitations”

## See Also

modeladvisor

## Related Examples

- “Model Upgrades”

# Performance Advisor

---

## Purpose

Analyze model for inefficient conditions and settings

## Description

Performance Advisor checks your model for conditions and settings that slow simulation speed. It can recommend modeling optimizations, implement them, and run simulations in accelerator mode.

## Access

- From the Simulink Editor, select **Analysis > Performance Tools > Performance Advisor**.
- At the MATLAB command prompt, enter `performanceadvisor`.

## Examples


- “Get Started with Performance Advisor”
- “Prepare a Model for Performance Advisor”
- “Run Performance Advisor Checks”
- “Use Performance Advisor Reports”
- “Operate on Performance Advisor Results”

## Parameters

Context-sensitive help is available for Performance Advisor checks.

To get help on a check:

- 1 Right-click the text label.
- 2 From the context menu, select **What’s This**.

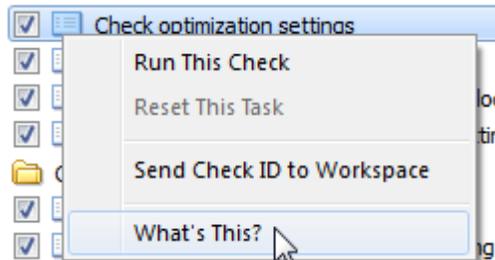

## **More About**

- “How Performance Advisor Improves Simulation Performance”
- “Performance Advisor Window”
- “Automated Performance Optimization”

## **See Also**

performanceadvisor

# Performance Advisor

---

# Mask Icon Drawing Commands

---

color	Change drawing color of subsequent mask icon drawing commands
disp	Display text on masked subsystem icon
dpoly	Display transfer function on masked subsystem icon
droots	Display transfer function on masked subsystem icon
fprintf	Display variable text centered on masked subsystem icon
image	Display RGB image on masked subsystem icon
patch	Draw color patch of specified shape on masked subsystem icon
plot	Draw graph connecting series of points on masked subsystem icon
port_label	Draw port label on masked subsystem icon
text	Display text at specific location on masked subsystem icon

# color

---

**Purpose** Change drawing color of subsequent mask icon drawing commands

**Syntax** `color(colorstr)`

**Description** `color(colorstr)` sets the drawing color of all subsequent mask drawing commands to the color specified by the string `colorstr`.

`colorstr` must be one of the following supported color strings.


blue  
green  
red  
cyan  
magenta  
yellow  
black

Entering any other string or specifying the color using RGB values results in a warning at the MATLAB command prompt; Simulink ignores the color change. The specified drawing color does not influence the color used by the patch or image drawing commands.

**Examples** The following commands

```
color('cyan');  
roots([-1], [-2 -3], 4)  
color('magenta')  
port_label('input',1,'in')  
port_label('output',1,'out')
```

draw the following mask icon.

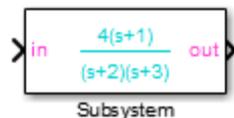

**See Also**      `droots | port_label`

# disp

---

**Purpose** Display text on masked subsystem icon

**Syntax** `disp(text)`  
`disp(text, 'texmode', 'on')`

**Description** `disp(text)` displays *text* centered on the block icon. *text* is any MATLAB expression that evaluates to a string.

`disp(text, 'texmode', 'on')` allows you to use TeX formatting commands in *text*. The TeX formatting commands in turn allow you to include symbols and Greek letters in icon text. See “Mathematical Symbols, Greek Letters, and TeX Characters” in the MATLAB documentation for information on the TeX formatting commands supported by Simulink software.

**Examples** The following command

```
disp({'\itEquation:} \alpha^2 + \beta^2 \rightarrow \gamma^2,  
\chi, \phi_3 = {\bfcool}', 'texmode','on')
```

draws the equation that appears on this masked block icon.

Equation

**See Also** `fprintf` | `port_label` | `text`

**Purpose** Display transfer function on masked subsystem icon

**Syntax**  
`dpoly(num, den)`  
`dpoly(num, den, 'character')`

**Description** `dpoly(num, den)` displays the transfer function whose numerator is *num* and denominator is *den*.


`dpoly(num, den, 'character')` specifies the name of the transfer function independent variable. The default is *s*.

When Simulink draws the block icon, the initialization commands execute and the resulting equation appears on the block icon, as in the following examples:

- To display a continuous transfer function in descending powers of *s*, enter

`dpoly(num, den)`


For example, for `num = [0 0 1]`; and `den = [1 2 1]` the icon looks like:

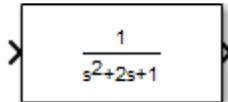

- To display a discrete transfer function in descending powers of *z*, enter

`dpoly(num, den, 'z')`

For example, for `num = [0 0 1]`; and `den = [1 2 1]`; the icon looks like:

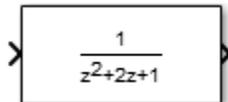


# dpoly

---

- To display a discrete transfer function in ascending powers of  $1/z$ , enter

```
dpoly(num, den, 'z-')
```

For example, for *num* and *den* as defined previously, the icon looks like:

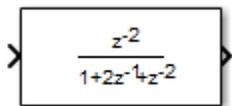

If the parameters are not defined or have no values when you create the icon, Simulink software displays three question marks (? ? ?) in the icon. When you define parameter values in the Mask Settings dialog box, Simulink software evaluates the transfer function and displays the resulting equation in the icon.

## See Also

`disp` | `port_label` | `text` | `roots`

**Purpose** Display transfer function on masked subsystem icon

**Syntax**  
`droots(zero, pole, gain)`  
`droots(zero, pole, gain, 'z')`  
`droots(zero, pole, gain, 'z-')`

**Description** `droots(zero, pole, gain)` displays the transfer function whose zero is *zero*, pole is *pole*, and gain is *gain*.

`droots(zero, pole, gain, 'z')` and `droots(zero, pole, gain, 'z-')` expresses the transfer function in terms of *z* or  $1/z$ .


When Simulink draws the block icon, the initialization commands execute and the resulting equation appears on the block icon, as in the following examples:

- To display a zero-pole gain transfer function, enter

```
droots(z, p, k)
```

For example, the preceding command creates this icon for these values:

```
z = []; p = [-1 -1]; k = 1;
```

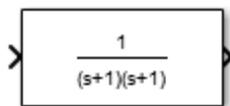

If the parameters are not defined or have no values when you create the icon, Simulink software displays three question marks (? ? ?) in the icon. When you define parameter values in the Mask Settings dialog box, Simulink software evaluates the transfer function and displays the resulting equation in the icon.

**See Also** `disp` | `port_label` | `text` | `dpoly`

# fprintf

---

**Purpose** Display variable text centered on masked subsystem icon

**Syntax** `fprintf(text)`  
`fprintf(format, var)`

**Description** The `fprintf` command displays formatted text centered on the icon and can display *format* along with the contents of *var*.

---

**Note** While this `fprintf` function is identical in name to its corresponding MATLAB function, it provides only the functionality described on this page.

---

**Examples** The command

```
fprintf('Hello');
```

displays the string 'Hello' on the icon.

The command

```
fprintf('Juhi = %d',17);
```

uses the decimal notation format (%d) to display the variable 17.

**See Also** `disp` | `port_label` | `text`

**Purpose** Display RGB image on masked subsystem icon

**Syntax**

```
image(a)
image(a, position)
image(a, position, rotation)
```

**Description** `image(a)` displays the image `a`, where `a` is an  $m$ -by- $n$ -by-3 array of RGB values. If necessary, use the MATLAB commands `imread` and `ind2rgb` to read and convert bitmap files (such as GIF) to the necessary matrix format.

`image(a, position)` creates the image at the specified position as follows.

Position	Description
<code>[x, y, w, h]</code>	Position ( $x$ , $y$ ) and size ( $w$ , $h$ ) of the image where the position is relative to the lower-left corner of the mask. The image scales to fit the specified size.
<code>'center'</code>	Center of the mask
<code>'top-left'</code>	Top left corner of the mask, unscaled
<code>'bottom-left'</code>	Bottom left corner of the mask, unscaled
<code>'top-right'</code>	Top right corner of the mask, unscaled
<code>'bottom-right'</code>	Bottom right corner of the mask, unscaled

`image(a, position, rotation)` allows you to specify whether the image rotates (`'on'`) or remains stationary (`'off'`) as the icon rotates. The default is `'off'`.

# image

---

## Examples

The command

```
image(imread('icon.jpg'))
```

reads the icon image from a JPEG file named `icon.jpg` in the MATLAB path.

The following commands read and convert a GIF file, `label.gif`, to the appropriate matrix format. You can type these commands in the **Initialization** pane of the Mask Editor.

```
[data, map]=imread('label.gif');  
pic=ind2rgb(data,map);
```

Then type the command

```
image(pic)
```

in the **Icon** pane of the Mask Editor to read the converted label image.

## See Also

`patch` | `plot`

**Purpose** Draw color patch of specified shape on masked subsystem icon

**Syntax** `patch(x, y)`  
`patch(x, y, [r g b])`

**Description** `patch(x, y)` creates a solid patch having the shape specified by the coordinate vectors `x` and `y`. The patch's color is the current foreground color.

`patch(x, y, [r g b])` creates a solid patch of the color specified by the vector `[r g b]`, where `r` is the red component, `g` the green, and `b` the blue. For example,


```
patch([0 .5 1], [0 1 0], [1 0 0])
```

creates a red triangle on the mask's icon.

**Examples** The command

```
patch([0 .5 1], [0 1 0], [1 0 0])
```

creates a red triangle on the mask's icon.

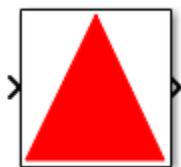

Pyramid

**See Also** `image` | `plot`

# plot

---

**Purpose** Draw graph connecting series of points on masked subsystem icon

**Syntax** `plot(Y)`  
`plot(X1,Y1,X2,Y2,...)`

**Description** `plot(Y)` plots, for a vector  $Y$ , each element against its index. If  $Y$  is a matrix, it plots each column of the matrix as though it were a vector.

`plot(X1,Y1,X2,Y2,...)` plots the vectors  $Y1$  against  $X1$ ,  $Y2$  against  $X2$ , and so on. Vector pairs must be the same length and the list must consist of an even number of vectors.

Plot commands can include NaN and inf values. When Simulink software encounters NaNs or infs, it stops drawing, and then begins redrawing at the next numbers that are not NaN or inf. The appearance of the plot on the icon depends on the value of the **Drawing coordinates** parameter.

Simulink software displays three question marks (? ? ?) in the block icon and issues warnings in these situations:

- When you have not defined values for the parameters used in the drawing commands (for example, when you first create the mask, but have not yet entered values in the Mask Settings dialog box)
- When you enter a masked block parameter or drawing command incorrectly

**Examples** The command

```
plot([0 1 5], [0 0 4])
```

generates the plot that appears on the icon for the Ramp block, in the Sources library.



**See Also**

image

# port\_label

---

**Purpose** Draw port label on masked subsystem icon

**Syntax**  
`port_label('port_type', port_number, 'label')`  
`port_label('port_type', port_number, 'label', 'texmode', 'on')`

**Description** `port_label('port_type', port_number, 'label')` draws a label on a port. Valid values for *port\_type* include the following.

Value	Description
input	Simulink input port
output	Simulink output port
lconn	Physical Modeling connection port on the left side of a masked subsystem
rconn	Physical Modeling connection port on the right side of a masked subsystem
Enable	Label for the trigger port in a masked Triggered or Enabled and Triggered subsystem.
trigger	Label for the trigger port in a masked Triggered or Enabled and Triggered subsystem.
action	Label for the action port in a masked Switch Case Action Subsystem.

The input argument *port\_number* is an integer, and *label* is a string specifying the port's label.

---

**Note** Physical Modeling port labels are assigned based on the nominal port location. If the masked subsystem has been rotated or flipped, for example, a port labeled using 'lconn' as the *port\_type* may not appear on the left side of the block.

---

`port_label('port_type', port_number, 'label', 'texmode', 'on')` lets you use TeX formatting commands in `label`. The TeX formatting commands allow you to include symbols and Greek letters in the port label. See “Mathematical Symbols, Greek Letters, and TeX Characters” in the MATLAB documentation for information on the TeX formatting commands that the Simulink software supports.

## Examples

The command

```
port_label('input', 1, 'a')
```

defines `a` as the label of input port 1.

The command

```
port_label('Enable', 'En')
```

defines `En` as the label of Enable port.

The command

```
port_label('trigger', 'Tr')
```

defines `Tr` as the label of trigger port.

The command

```
port_label('action', 'Switch():')
```

defines `Switch():` as the label of action port.

The command

```
port_label('trigger', '$\sqrt{m}$', 'interp', 'latex')
```

defines the label of trigger port with latex interpretation.

The commands


```
disp('Card\nSwapper');  
port_label('input', 1, '\spadesuit', 'texmode', 'on');
```

## port\_label

---

```
port_label('output',1,'\heartsuit','texmode','on');
```

draw playing card symbols as the labels of the ports on a masked subsystem.

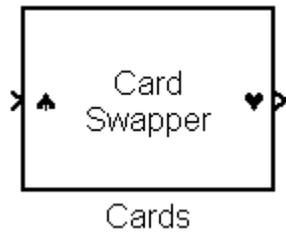

### See Also

`disp` | `fprintf` | `text`

**Purpose**

Display text at specific location on masked subsystem icon

**Syntax**

```
text(x, y, 'text')
text(x, y, 'text', 'horizontalAlignment', 'halign',
     'verticalAlignment', 'valign')
text(x, y, 'text', 'texmode', 'on')
```

**Description**

The text command places a character string at a location specified by the point (x,y). The units depend on the **Drawing coordinates** parameter.

`text(x,y, text, 'texmode', 'on')` allows you to use TeX formatting commands in *text*. The TeX formatting commands in turn allow you to include symbols and Greek letters in icon text. See “Mathematical Symbols, Greek Letters, and TeX Characters” in the MATLAB documentation for information on the TeX formatting commands supported by Simulink software.

You can optionally specify the horizontal and/or vertical alignment of the text relative to the point (x, y) in the text command.

The text command offers the following horizontal alignment options.

Option	Aligns
'left'	The left end of the text at the specified point
'right'	The right end of the text at the specified point
'center'	The center of the text at the specified point

The text command offers the following vertical alignment options.

Option	Aligns
'base'	The baseline of the text at the specified point
'bottom'	The bottom line of the text at the specified point
'middle'	The midline of the text at the specified point

# text

---

Option	Aligns
'cap'	The capitals line of the text at the specified point
'top'	The top of the text at the specified point

---

**Note** While this text function is identical in name to its corresponding MATLAB function, it provides only the functionality described on this page.

---

## Examples

The command


```
text(0.5, 0.5, 'foobar', 'horizontalAlignment', 'center')
```

centers foobar in the icon.

The command

```
text(.05,.5, '{\itEquation:} \Sigma \alpha^2 +  
\beta^2 \rightarrow \infty, \Pi, \phi_3 = {\bfcool}',  
'hor','left','texmode','on')
```

draws a left-aligned equation on the icon.

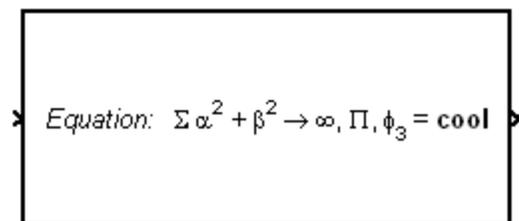

Equation

## See Also

disp | fprintf | port\_label

# Simulink Debugger Commands

---

ashow	Show algebraic loop
atrace	Set algebraic loop trace level
bafter	Insert breakpoint after specified method
break	Insert breakpoint before specified method
bshow	Show specified block
clear	Clear breakpoints from model
continue	Continue simulation
disp	Display block's I/O when simulation stops
ebreak	Enable (or disable) breakpoint on solver errors
elist	List simulation methods in order in which they are executed during simulation
emode	Toggle model execution between accelerated and normal mode
etrace	Enable or disable method tracing
help	Display help for debugger commands
nanbreak	Set or clear nonfinite value break mode

next	Advance simulation to start of next method at current level in model's execution list
probe	I/O and state data for blocks
quit	Stop simulation debugger
rbreak	Break simulation before solver reset
run	Run simulation to completion
slist	Sorted list of model blocks
states	Current state values
status	Debugging options in effect
step	Advance simulation by one or more methods
stimes	Model sample times
stop	Stop simulation
strace	Set solver trace level
systems	List nonvirtual systems of model
tbreak	Set or clear time breakpoint
trace	Display block's I/O each time block executes
undisp	Remove block from debugger's list of display points
untrace	Remove block from debugger's list of trace points
where	Display current location of simulation in simulation loop
xbreak	Break when debugger encounters step-size-limiting state

---

zcbreak

Toggle breaking at nonsampled  
zero-crossing events

zclist

List blocks containing nonsampled  
zero crossings

# ashow

---

**Purpose** Show algebraic loop

**Syntax** `ashow <gcb | s:b | s#n | clear>`  
`as <gcb | s:b | s#n | clear>`

**Arguments**

<code>gcb</code>	Current block.
<code>s:b</code>	The block whose system index is <code>s</code> and block index is <code>b</code> .
<code>s#n</code>	The algebraic loop numbered <code>n</code> in system <code>s</code> .
<code>clear</code>	Switch that clears loop coloring.

**Description** `ashow` without any arguments lists all of a model's algebraic loops in the MATLAB Command Window. `ashow gcb` or `ashow s:b` highlights the algebraic loop that contains the specified block. `ashow s#n` highlights the `n`th algebraic loop in system `s`. The `ashow clear` command removes algebraic loop highlights from the model diagram.

**See Also** `atrace` | `slist`

**Purpose** Set algebraic loop trace level

**Syntax** `atrace level`  
`at level`

**Arguments** `level` Trace level (0 = none, 4 = everything).

**Description** The `atrace` command sets the algebraic loop trace level for a simulation.

<b>Command</b>	<b>Displays for Each Algebraic Loop</b>
<code>atrace 0</code>	No information
<code>atrace 1</code>	The loop variable solution, the number of iterations required to solve the loop, and the estimated solution error
<code>atrace 2</code>	Same as level 1
<code>atrace 3</code>	Level 2 plus Jacobian matrix used to solve loop
<code>atrace 4</code>	Level 3 plus intermediate solutions of the loop variable

**See Also** `states` | `systems`

# bafter

---

**Purpose** Insert breakpoint after specified method

**Syntax**

```
bafter
ba
bafter m:mid

bafter <sysIdx:blkIdx | gcb> [meth] [tid:TID]
bafter <s:sysIdx | gcs> [meth] [tid:TID]
bafter model [meth] [tid:TID]
```

**Arguments**

<i>mid</i>	Method ID
<i>sysIdx:blkIdx</i>	Block ID
<b>gcb</b>	Currently selected block
<i>sysIdx</i>	System ID
<i>gcs</i>	Currently selected system
<b>model</b>	Currently selected model
<i>meth</i>	A method name, e.g., <code>Outputs.Major</code>
<b>TID</b>	Task ID

**Description** `bafter` inserts a breakpoint after the current method.

Instead of `bafter`, you can use the short form of `ba` with any of the syntaxes.

`bafter m:mid` inserts a breakpoint after the method specified by *mid* (see “Method ID”).

`bafter sysIdx:blkIdx` inserts a breakpoint after each invocation of the method of the block specified by *sysIdx:blkIdx* (see “Block ID”) in major time steps. `bafter gcb` inserts a breakpoint after each invocation of a method of the currently selected block (see `gcb`) in major times steps.

**bafter** **s:sysIdx** inserts a breakpoint after each method of the root system or nonvirtual subsystem specified by the system ID: *sysIdx*.

---

**Note** The `systems` command displays the system IDs for all nonvirtual systems in the currently selected model.

---

**bafter** **gcs** inserts a breakpoint after each method of the currently selected nonvirtual system.

**bafter** **model** inserts a breakpoint after each method of the currently selected model.

The optional *meth* parameter allow you to set a breakpoint after a particular block, system, or model method and task. For example, **bafter** **gcb** **Outputs** sets a breakpoint after the **Outputs** method of the currently selected block.

The optional TID parameter allows you to set a breakpoint after invocation of a method by a particular task. For example, suppose that the currently selected nonvirtual subsystem operates on task 2 and 3. Then **bafter** **gcs** **Outputs** **tid:2** sets a breakpoint after the invocation of the subsystem's **Outputs** method that occurs when task 2 is active.

## See Also

`break` | `ebreak` | `tbreak` | `xbreak` | `nanbreak` | `zcbreak` | `rbreak` | `clear` | `where` | `slist` | `systems`

# break

---

**Purpose** Insert breakpoint before specified method

**Syntax**

```
break
b
break m:mid
break <sysIdx:blkIdx | gcb> [meth] [tid:TID]
break <s:sysIdx | gcs> [meth] [tid:TID]
break model [meth] [tid:TID]
```

**Arguments**

<i>mid</i>	Method ID
<i>sysIdx:blkIdx</i>	Block ID
<b>gcb</b>	Currently selected block
<i>sysIdx</i>	System ID
<i>gcs</i>	Currently selected system
<b>model</b>	Currently selected model
<i>meth</i>	A method name, e.g., Outputs.Major
<i>TID</i>	task ID

**Description** break inserts a breakpoint before the current method.

Instead of break, you can use the short form of b with any of the syntaxes.

break **m:mid** inserts a breakpoint before the method specified by *mid* (see “Method ID”).

break *sysIdx:blkIdx* inserts a breakpoint before each invocation of the method of the block specified by *sysIdx:blkIdx* (see “Block ID”) in major time steps. break **gcb** inserts a breakpoint before each invocation of a method of the currently selected block (see **gcb**) in major times steps.

break **s:sysIdx** inserts a breakpoint at each method of the root system or nonvirtual subsystem specified by the system ID: *sysIdx*.

---

**Note** The `systems` command displays the system IDs for all nonvirtual systems in the currently selected model.

---

`break gcs` inserts a breakpoint at each method of the currently selected nonvirtual system.

`break model` inserts a breakpoint at each method of the currently selected model.

The optional `meth` parameter allow you to set a breakpoint at a particular block, system, or model method. For example, `break gcb Outputs` sets a breakpoint at the `Outputs` method of the currently selected block.

The optional `TID` parameter allows you to set a breakpoint at the invocation of a method by a particular task. For example, suppose that the currently selected nonvirtual subsystem operates on task 2 and 3. Then `break gcs Outputs tid:2` sets a breakpoint at the invocation of the subsystem's `Outputs` method that occurs when task 2 is active.

## See Also

`bafter` | `clear` | `ebreak` | `nanbreak` | `rbreak` | `systems` | `tbreak` | `where` | `xbreak` | `zcbreak` | `slist`

# bshow

---

**Purpose** Show specified block

**Syntax** `bshow s:b`  
`bs s:b`

**Arguments** `s:b` The block whose system index is `s` and block index is `b`.

**Description** The `bshow` command opens the model window containing the specified block and selects the block.

**See Also** `slist`

**Purpose** Clear breakpoints from model

**Syntax**

```
clear
c1
clear m:mid
clear id
clear <sysIdx:blkIdx | gcb>
```

**Arguments**

<i>mid</i>	Method ID
<i>id</i>	Breakpoint ID
<i>sysIdx:blkIdx</i>	Block ID
<b>gcb</b>	Currently selected block

**Description** `clear` clears a breakpoint from the current method.

Instead of `clear`, you can use the short form of `c1` with any of the syntaxes.

`clear m:mid` clears a breakpoint from the method specified by *mid*.

`clear id` clears the breakpoint specified by the breakpoint ID *id*.

`clear sysIdx:blkIdx` clears any breakpoints set on the methods of the block specified by *sysIdx:blkIdx*.

`clear gcb` clears any breakpoints set on the methods of the currently selected block.

**See Also** `break` | `bafter` | `slist`

# continue

---

**Purpose** Continue simulation

**Syntax** `continue`  
`c`

**Description** The `continue` command continues the simulation from the current breakpoint. If animation mode is not enabled, the simulation continues until it reaches another breakpoint or its final time step. If animation mode is enabled, the simulation continues in animation mode to the first method of the next major time step, ignoring breakpoints.

**See Also** `run` | `stop` | `quit`

**Purpose** Display block's I/O when simulation stops

**Syntax**

```
disp  
d  
disp gcb  
disp s:b
```

**Arguments**

<code>s:b</code>	The block whose system index is <code>s</code> and block index is <code>b</code> .
<code>gcb</code>	Current block.

**Description** The `disp` command registers a block as a display point. The debugger displays the inputs and outputs of all display points in the MATLAB Command Window whenever the simulation halts. Invoking `disp` without arguments shows a list of display points. Use `undisp` to unregister a block.

Instead of `disp`, you can use the short form of `d` with any of the syntaxes.

**See Also** `undisp` | `slist` | `probe` | `trace`

# ebreak

---

<b>Purpose</b>	Enable (or disable) breakpoint on solver errors
<b>Syntax</b>	ebreak eb
<b>Description</b>	This command causes the simulation to stop if the solver detects a recoverable error in the model. If you do not set or disable this breakpoint, the solver recovers from the error and proceeds with the simulation without notifying you.
<b>See Also</b>	break   bafter   tbreak   xbreak   nanbreak   zcbreak   rbreak   clear   where   slist   systems

**Purpose** List simulation methods in order in which they are executed during simulation

**Syntax**

```
elist
el
elist m:mid [tid:TID]
elist <gcs | s:sysIdx> [mth] [tid:TID]
elist <gcb | sysIdx:blkIdx> [mth] [tid:TID]
```

**Description** Instead of `elist`, you can use the short form of `el` with any of the syntaxes.

`elist m:mid` lists the methods invoked by the system or nonvirtual subsystem method corresponding to the method id `mid` (see the `where` command for information on method IDs), e.g.,

```
(sldebug @19): elist m:19

RootSystem.Outputs 'vdp' [tid=0] : ← Calling method
0:0 Integrator.Outputs 'vdp/x1' [tid=0]
0:1 Outport.Outputs 'vdp/Out1' [tid=0]
0:2 Integrator.Outputs 'vdp/x2' [tid=0]
...

```

↑
↑
↑
↑

Block id
Method
Block
Task id

The method list specifies the calling method followed by the methods that it calls in the order in which they are invoked. The entry for the calling method includes

- The name of the method
  - The name of the method is prefixed by the type of system that defines the method, e.g., `RootSystem`.
- The name of the model or subsystem instance on which the method is invoked

- The ID of the task that invokes the method

The entry for each called method includes

- The ID (*sysIdx:blkIdx*) of the block instance on which the method is invoked

The block ID is prefixed by a number specifying the system that contains the block (the *sysIdx*). This allows Simulink software to assign the same block ID to blocks residing in different subsystems.

- The name of the method

The method name is prefixed with the type of block that defines the method, e.g., Integrator.

- The name of the block instance on which the method is invoked

- The task that invokes the method

The optional task ID parameter (**tid:TID**) allows you to restrict the displayed lists to methods invoked for a specified task. You can specify this option only for system or atomic subsystem methods that invoke Outputs or Update methods.

`elist <gcs | s:sysIdx>` lists the methods executed for the currently selected system (specified by the `gcs` command) or the system or nonvirtual subsystem specified by the system ID *sysIdx*, e.g.,

```
(sldebug @19): elist gcs

RootSystem.Start 'vdp':
  0:0 Integrator.Start 'vdp/x1'
  0:2 Integrator.Start 'vdp/x2'
  0:4 Scope.Start 'vdp/Scope'
  0:5 Fcn.Start 'vdp/Fcn'
  0:6 Product.Start 'vdp/Product'
  0:7 Gain.Start 'vdp/Mu'
  0:8 Sum.Start 'vdp/Sum'

RootSystem.Initialize 'vdp':
  0:0 Integrator.Initialize 'vdp/x1'
  ...
```

The system ID of a model's root system is 0. You can use the debugger's `systems` command to determine the system IDs of a model's subsystems.

---

**Note** The `elist` and `where` commands use block IDs to identify subsystems in their output. The block ID for a subsystem is not the same as the system ID displayed by the `systems` command. Use the `elist sysIdx:blkIdx` form of the `elist` command to display the methods of a subsystem whose block ID appears in the output of a previous invocation of the `elist` or `where` command.

---

`elist <gcs | s:sysIdx> mth` lists methods of type `mth` to be executed for the system specified by the `gcs` command or the system ID `sysIdx`, e.g.,

```
(sldebug @19): elist gcs Start

RootSystem.Start 'vdp':
  0:0 Integrator.Start 'vdp/x1'
  0:2 Integrator.Start 'vdp/x2'
  0:4 Scope.Start 'vdp/Scope'
  0:5 Fcn.Start 'vdp/Fcn'
  0:6 Product.Start 'vdp/Product'
  0:7 Gain.Start 'vdp/Mu'
  0:8 Sum.Start 'vdp/Sum'
  ...
```

Use `elist gcb` to list the methods invoked by the nonvirtual subsystem currently selected in the model.

## See Also

where | `slist` | `systems`

<b>Purpose</b>	Toggle model execution between accelerated and normal mode
<b>Syntax</b>	emode em
<b>Description</b>	Toggles the simulation between accelerated and normal mode when using the Accelerator mode in Simulink software. For more information, see “Run Accelerator Mode with the Simulink Debugger”.

# etrace

---

**Purpose** Enable or disable method tracing

**Syntax** `etrace level level-number`

`et level level-number`

**Description** This command enables or disables method tracing, depending on the value of `level`:

<b>Level</b>	<b>Description</b>
0	Turn tracing off.
1	Trace model methods.
2	Trace model and system methods.
3	Trace model, system, and block methods.

When method tracing is on, the debugger prints a message at the command line every time a method of the specified level is entered or exited. The message specifies the current simulation time, whether the simulation is entering or exiting the method, the method id and name, and the name of the model, system, or block to which the method belongs.

**See Also** `elist | where | trace`

**Purpose**

Display help for debugger commands

**Syntax**

help  
?  
h

**Description**

The help command displays a list of debugger commands in the command window. The list includes the syntax and a brief description of each command.

# nanbreak

---

<b>Purpose</b>	Set or clear nonfinite value break mode
<b>Syntax</b>	nanbreak na
<b>Description</b>	The nanbreak command causes the debugger to break whenever the simulation encounters a nonfinite (NaN or Inf) value. If nonfinite break mode is set, nanbreak clears it.
<b>See Also</b>	break   bafter   rbreak   tbreak   xbreak   zcbreak
<b>How To</b>	<ul style="list-style-type: none"><li>• ebreak</li></ul>

**Purpose** Advance simulation to start of next method at current level in model's execution list

**Syntax** next  
n

**Description** The next command advances the simulation to the start of the next method at the current level in the model's method execution list.

---

**Note** The next command has the same effect as the `step over` command. See `step` for more information.

---

**See Also** step

# probe

---

**Purpose** I/O and state data for blocks

**Syntax**

```
probe
probe s:b
probe gcb
probe level level-type
p
```

**Description** `probe` sets the Simulink debugger to interactive probe mode. In this mode, the debugger displays the I/O of a selected block. To exit interactive probe mode, enter a debugger command or press the **Enter** key.

`probe s:b` displays the I/O of the block whose system index is *s* and block index is *b*.

`probe gcb` displays the I/O of the currently selected block.

`probe level level-type` sets the verbosity level for `probe`, `trace`, and `dis`. If *level-type* is `io`, the debugger displays block I/O. If *level-type* is `all` (default), the debugger displays all information for the current state of a block, including inputs and outputs, states, and zero crossings.

`p` is the short form of the command.

**Examples** Display I/O for the currently selected block `Out2` in the model `vdp` using the Simulink debugger.

**1** In the MATLAB Command Window, enter:

```
sldebug 'vdp'
```

The MATLAB command prompt `>>` changes to the Simulink debugger prompt (`sldebug @0`): `>>`.

**2** Enter:

```
probe gcb
```

The MATLAB Command Window displays:

```
probe: Data of 0:3 Outport block 'vdp/Out2':  
U1      = [0]
```

**See Also**

`disp` | `trace`

# quit

---

<b>Purpose</b>	Stop simulation debugger
<b>Syntax</b>	<code>quit</code> <code>q</code>
<b>Description</b>	<code>quit</code> stops the Simulink debugger and returns to the MATLAB command prompt. <code>q</code> is the short form of the command.
<b>Examples</b>	Start the Simulink debugger for the model <code>vdp</code> and then stop it.  <b>1</b> In the MATLAB Command Window, enter:  <code>sldebug 'vdp'</code>  The MATLAB command prompt <code>&gt;&gt;</code> changes to the Simulink debugger prompt ( <code>sldebug @0</code> ): <code>&gt;&gt;</code> .  <b>2</b> Enter:  <code>quit</code>
<b>See Also</b>	<code>stop</code>

---

<b>Purpose</b>	Break simulation before solver reset
<b>Syntax</b>	<code>rbreak</code> <code>rb</code>
<b>Description</b>	<p><code>rbreak</code> enables (or disables) a solver reset breakpoint if the breakpoint is disabled (or enabled). The breakpoint causes the debugger to halt the simulation whenever an event requires a solver reset. The halt occurs before the solver resets.</p> <p><code>rb</code> is the short form of the command.</p>
<b>Examples</b>	<p>Start Simulink debugger for the model <code>vdp</code> and a set breakpoint before a solver reset.</p> <p><b>1</b> In the MATLAB Command Window, enter:</p> <pre>sldebug 'vdp'</pre> <p>The MATLAB command prompt <code>&gt;&gt;</code> is replaced with the Simulink debugger prompt (<code>sldebug @0</code>): <code>&gt;&gt;</code>.</p> <p><b>2</b> Enter:</p> <pre>rbreak</pre> <p>The MATLAB Command Window displays:</p> <pre>Break on solver reset request           : enabled</pre>
<b>See Also</b>	<code>break</code>   <code>bafter</code>   <code>nanbreak</code>   <code>ebreak</code>   <code>tbreak</code>   <code>xbreak</code>   <code>zcbreak</code>

# run

---

**Purpose**

Run simulation to completion

**Syntax**

run  
r

**Description**

run starts the simulation from the current breakpoint to its final time step. It ignores breakpoints and display points.

r is the short form of the command

**Examples**

Continue the simulation for the model vdp using the Simulink debugger.

**1** In the MATLAB Command Window, enter:

```
sldebug 'vdp'
```

The MATLAB command prompt >> changes to the Simulink debugger prompt (sldebug @0): >>.

**2** Enter:

```
run
```

**See Also**

continue | stop | quit

**Purpose**

Sorted list of model blocks

**Syntax**

```
slist  
sli
```

**Description**

`slist` displays a list of blocks for the root system and each nonvirtual subsystem sorted according to data dependencies and other criteria.

For each system (root or nonvirtual), `slist` displays:

- Title line specifying the name of the system, the number of nonvirtual blocks that the system contains, and the number of blocks in the system that have direct feedthrough ports.
- Entry for each block in the order in which the blocks appear in the sorted list.

For each block entry, `slist` displays the block ID and the name and type of the block. The block ID consists of a system index and a block index separated by a colon (`sysIdx:blkIdx`).

- Block index is the position of the block in the sorted list.
- System index is the order in which the Simulink software generated the system sorted list. The system index has no special significance. It simply allows blocks that appear in the same position in different sorted lists to have unique identifiers.

Simulink software uses sorted lists to create block method execution lists (see `elist`) for root system and nonvirtual subsystem methods. In general, root system and nonvirtual subsystem methods invoke the block methods in the same order as the blocks appear in the sorted list.

Exceptions occur in the execution order of block methods. For example, execution lists for multicast models group together all blocks operating at the same rate and in the same task. Slower groups appear later than faster groups. The grouping of methods by task can result in a block method execution order that is different from the block sorted order. However, within groups, methods execute in the same order as the corresponding blocks appear in the sorted list.

sli is the short form of the command.

## Examples

Display a sorted list of the root system in the vdp model using the Simulink debugger.

- 1 In the MATLAB Command Window, enter:

```
sldebug 'vdp'
```

The MATLAB command prompt `>>` changes to the Simulink debugger prompt (sldebug `@0`): `>>`.

- 2 Enter:

```
slist
```

The MATLAB Command Window displays:

```
---- Sorted list for 'vdp' [9 nonvirtual blocks, directFeed=0]
0:0  'vdp/x1' (Integrator)
0:1  'vdp/Out1' (Outport)
0:2  'vdp/x2' (Integrator)
0:3  'vdp/Out2' (Outport)
0:4  'vdp/Scope' (Scope)
0:5  'vdp/Fcn' (Fcn)
0:6  'vdp/Product' (Product)
0:7  'vdp/Mu' (Gain)
0:8  'vdp/Sum' (Sum)
```

## See Also

systems | elist

**Purpose** Current state values

**Syntax** states

**Description** states displays a list of the current states of the model. The list includes the index, current value, system:block:element ID, state vector name, and block name for each state.

**Examples** Display information about the states for the vdp model.

**1** In the MATLAB Command Window, enter:

```
sldebug 'vdp'
```

The MATLAB command prompt >> changes to the Simulink debugger prompt (sldebug @0): >>.

**2** Enter:

```
states
```

The MATLAB Command Window displays:

```
Continuous States:
Idx  Value                                     (system:block:element Name 'BlockName')
  0  0                                           (0:0:0 CSTATE 'vdp/x1')
  1  0                                           (0:2:0 CSTATE 'vdp/x2')
```

# status

---

**Purpose** Debugging options in effect

**Syntax** status

**Description** status displays a list of the debugging options in effect.

**Examples** Display status for the model vdp using the Simulink debugger.

**1** In the MATLAB Command Window, enter:

```
sldebug 'vdp'
```

The MATLAB command prompt >> changes to the Simulink debugger prompt (sldebug @0): >>.

**2** Enter:

```
status
```

The MATLAB Command Window displays:

```
%-----%
Current simulation time           : 0 (MajorTimeStep)
Solver needs reset                : no
Solver derivatives cache needs reset : no
Zero crossing signals cache needs reset : no
Default command to execute on return/enter : ""
Break at zero crossing events     : disabled
Break on solver error             : disabled
Break on failed integration step   : disabled
Time break point                  : disabled
Break on non-finite (NaN,Inf) values : disabled
Break on solver reset request     : disabled
Display level for disp, trace, probe : 1 (i/o, states)
Solver trace level                 : 0
Algebraic loop tracing level      : 0
Animation Mode                    : off
Window reuse                       : not supported
```

```
Execution Mode           : Normal
Display level for etrace : 0 (disabled)
Break points             : none installed
Display points           : none installed
```

# step

---

**Purpose** Advance simulation by one or more methods

**Syntax**

```
step
step in
step over
step out
step top
step blockmth
s
```

**Description**

`step` or `step in` advances the simulation to the next method in the current time step.

`step over` advances the simulation over the next method.

`step out` advances the simulation the end of the current simulation point hierarchy.

`step top` advances the simulation to the first method executed in the next time step.

`step blockmth` advances the simulation to the next method that operates on a block.


`s` is the short form of the command.

If `step` advances the simulation to the start of a block method, the debugger points at the block on which the method operates.

.

**Examples**

The following diagram illustrates the effect of various forms of the `step` command for the model `vdp`.

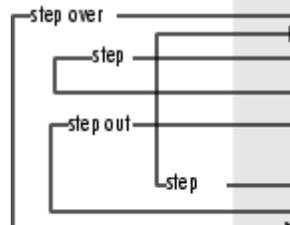

```
0 >> vdp.Simulate
1     vdp.Start
...
15    vdp.Outputs.InvariantConstants
17    >> vdp.SimulationLoop
    >> vdp.Outputs.Major
        RootSystem.Outputs 'vdp'
        0:0 Integrator.Outputs 'x1'
        0:1 Outport.Outputs 'Out1'
        ...
        0:8 Sum.Outputs 'Sum'
29    vdp.Update
33    vdp.Solver
```

The diagram illustrates step-through actions for the provided code. A vertical line on the left has arrows pointing to specific lines of code, labeled with step-through actions: 'step over' points to line 17, 'step' points to line 18, 'step out' points to line 21, and another 'step' points to line 28. A final arrow points to line 29.

**See Also**

next | where | elist

# stimes

---

**Purpose** Model sample times

**Syntax** `stimes`  
`sti`

**Description** `stimes` displays information about the model sample times, including the sample time period, offset, and task ID.  
`sti` is the short form of the command.

**Examples** Display sample times for the model `vdp` using the Simulink debugger.

**1** In the MATLAB Command Window, enter:

```
sldebug 'vdp'
```

The MATLAB command prompt `>>` changes to the Simulink debugger prompt (`sldebug @0`): `>>`.

**2** Enter:

```
stimes
```

The MATLAB Command Window displays:

```
--- Sample times for 'vdp' [Number of sample times = 1]
    1. [0      , 0      ] tid=0 (continuous sample time)
```

---

<b>Purpose</b>	Stop simulation
<b>Syntax</b>	stop
<b>Description</b>	stop stops the simulation of the model you are debugging.
<b>Examples</b>	<p>Start and stop a simulation for the model vdp using the Simulink debugger.</p> <ol style="list-style-type: none"><li>1 Start a debugger session. In the MATLAB Command Window, enter: <pre>sldebug 'vdp'</pre><p>The MATLAB command prompt &gt;&gt; changes to the Simulink debugger prompt (sldebug @0): &gt;&gt;.</p></li><li>2 Start a simulation of the model. Enter: <pre>run</pre></li><li>3 Stop the simulation. Enter: <pre>stop</pre></li></ol>
<b>See Also</b>	continue   run   quit

# strace

---

**Purpose** Set solver trace level

**Syntax** `strace level`  
`i`

**Description** `strace level` causes the solver to display diagnostic information in the MATLAB Command Window, depending on the value of `level`. Values are 0 (no information) or 1 (maximum information about time steps, integration steps, zero crossings, and solver resets).

`i` is the short form of the command.

**Examples** Display maximum information about a simulation for the model `vdp` using the Simulink debugger.

**1** In the MATLAB Command Window, enter:

```
sldebug 'vdp'
```

The MATLAB command prompt `>>` changes to the Simulink debugger prompt (`sldebug @0`): `>>`.

**2** Get information about the notation . Enter:

```
help time
```

The MATLAB Command Window displays:

```
Time is displayed as:  
TM = <time while in MajorTimeStep>  
Tm = <time while in MinorTimeStep>  
Tr = <time while in solver reset>  
Tz = <time at or just after zero crossing>  
TZL = <time while in major step just before (at left post of) zero crossing>  
TZR = <time while in major step at or just after (at right post of) zero crossing>  
Ts = <time of successful integration step>  
Tf = <time of failed integration step>  
Tn = <time while in Newton iteration> (when using implicit solvers)
```

Tj = <time during Jacobian evaluation> (when using implicit solvers)

Step size is displayed as:

Hm = <step size at the start of solver phase>

Hs = <successful integration step size>

Hf = <failed integration step size>

Hn = <step size during Newton iteration> (when using implicit solvers)

HZ = <value of 'TM - TzL' during zero crossing search>

Iz = <value of 'Tz - TzL' during zero crossing search>

### 3 Set trace to display all information. Enter:

```
strace 1
```

When diagnostic tracing is on, the debugger displays the sizes of major and minor time steps.

```
[TM = 13.21072088374186 ] Start of Major Time Step
```

```
[Tm = 13.21072088374186 ] Start of Minor Time Step
```

The debugger displays integration information. This information includes the time step of the integration method, step size of the integration method, outcome of the integration step, normalized error, and index of the state.

```
[Tm = 13.21072088374186 ] [H = 0.2751116230148764 ] Begin Integration Step
```

```
[Tf = 13.48583250675674 ] [Hf = 0.2751116230148764 ] Fail [Er = 1.0404e+000]
```

```
[Ix = 1]
```

```
[Tm = 13.21072088374186 ] [H = 0.2183536061326544 ] Retry
```

```
[Ts = 13.42907448987452 ] [Hs = 0.2183536061326539 ] Pass [Er = 2.8856e-001]
```

```
[Ix = 1]
```

For zero crossings, the debugger displays information about the iterative search algorithm when the zero crossing occurred. This information includes the time step of the zero crossing, step size of the zero crossing detection algorithm, length of the time interval bracketing the zero crossing, and a flag denoting the rising or falling direction of the zero crossing.

```
[Tz = 3.615333333333301 ] Detected 1 Zero Crossing Event 0[F]
      Begin iterative search to bracket zero crossing event
[Tz = 3.6211111157580072 ] [Hz = 0.005777824246771424 ] [Iz = 4.2222e-003] 0[F]
[Tz = 3.621116982080098 ] [Hz = 0.005783648746797265 ] [Iz = 4.2164e-003] 0[F]
[Tz = 3.621116987943544 ] [Hz = 0.005783654610242994 ] [Iz = 4.2163e-003] 0[F]
[Tz = 3.621116987943544 ] [Hz = 0.005783654610242994 ] [Iz = 1.1804e-011] 0[F]
[Tz = 3.621116987949452 ] [Hz = 0.005783654616151157 ] [Iz = 5.8962e-012] 0[F]
[Tz = 3.621116987949452 ] [Hz = 0.005783654616151157 ] [Iz = 5.1514e-014] 0[F]
      End iterative search to bracket zero crossing event
```

When a solver resets occur, the debugger displays the time at which the solver was reset.

```
[Tr = 6.246905153573676 ] Process Solver Reset
[Tr = 6.246905153573676 ] Reset Zero Crossing Cache
[Tr = 6.246905153573676 ] Reset Derivative Cache
```

## See Also

[atrace](#) | [etrace](#) | [states](#) | [trace](#) | [zclist](#)

<b>Purpose</b>	List nonvirtual systems of model
<b>Syntax</b>	<code>systems</code> <code>sys</code>
<b>Description</b>	<code>systems</code> displays the nonvirtual subsystems for a model in the MATLAB Command Window. <code>sys</code> is the short form of the command.
<b>Examples</b>	<p>Display the nonvirtual systems for the model <code>sldemo_enginewc</code> using the Simulink debugger.</p> <p><b>1</b> In the MATLAB Command Window, enter:</p> <pre>sldbug 'sldemo_enginewc'</pre> <p>The MATLAB command prompt <code>&gt;&gt;</code> changes to the Simulink debugger prompt (<code>sldbug @0</code>): <code>&gt;&gt;</code>.</p> <p><b>2</b> Enter:</p> <pre>systems</pre> <p>The MATLAB Command Window displays the nonvirtual subsystems.</p> <pre>0 'sldemo_enginewc' 1 'sldemo_enginewc/Compression' 2 'sldemo_enginewc/Controller/TmpAtomicSubsysAtSwitchInport3' 3 'sldemo_enginewc/Controller/TmpAtomicSubsysAtSwitchInport1' 4 'sldemo_enginewc/Controller' 5 'sldemo_enginewc/Throttle &amp; Manifold/Throttle/TmpAtomicSubsysAtSwitchInport1' 6 'sldemo_enginewc/valve timing/positive edge to dual edge conversion'</pre>
<b>See Also</b>	<code>slist</code>

# tbreak

---

**Purpose** Set or clear time breakpoint

**Syntax** tbreak  
tb  
tbreak t

**Description** The tbreak command sets a breakpoint at the specified time step. If a breakpoint already exists at the specified time, tbreak clears the breakpoint. If you do not specify a time, tbreak toggles a breakpoint at the current time step.

Instead of tbreak, you can use the short form of tb, with or without t.

**See Also** break | bafter | xbreak | nanbreak | zcbreak | rbreak

**How To** • ebreak

**Purpose** Display block's I/O each time block executes

**Syntax** `trace gcb`  
`trace s:b`

`tr gcb`  
`trace s:b`

**Arguments**

<code>s:b</code>	The block whose system index is s and block index is b.
<code>gcb</code>	Current block.

**Description** The trace command registers a block as a trace point. The debugger displays the I/O of each registered block each time the block executes.

**See Also** `disp` | `probe` | `untrace` | `slist` | `strace`

# undisp

---

**Purpose** Remove block from debugger's list of display points

**Syntax**  
undisp gcb  
und gcb  
undisp s:b  
und s:b

**Arguments**

s:b	The block whose system index is s and block index is b.
gcb	Current block.

**Description** The undisp command removes the specified block from the debugger's list of display points.

**See Also** disp | slist

**Purpose** Remove block from debugger's list of trace points

**Syntax**

```
untrace gcb  
unt gcb  
untrace s:b  
unt s:b
```

**Arguments**

s:b	The block whose system index is s and block index is b.
gcb	Current block.

**Description** The untrace command removes the specified block from the debugger's list of trace points.

**See Also** trace | slist

# where

---

**Purpose** Display current location of simulation in simulation loop

**Syntax** where [detail]  
w [detail]

**Description** The where command displays the current location of the simulation in the simulation loop, for example,

```
sldebug @7): where
  0 >> vdp.Simulate
  1   >> vdp.Start
  2     >> RootSystem.Start 'vdp'
  7       >| 0:8 Sum.Start 'Sum'
```



The display consists of a list of simulation nodes with the last entry being the node that is about to be entered or exited. Each entry contains the following information:

- Method ID  
The method ID identifies a specific invocation of a method.
- A symbol specifying its state:
  - >> (active)
  - >|(about to be entered)
  - <|(about to be exited)
- Name of the method invoked (e.g., RootSystem.Start)
- Name of the block or system on which the method is invoked (e.g., Sum)
- System and block ID (sysIdx:blkIdx) of the block on which the method is invoked

For example, 0:8 indicates that the specified method operates on block 8 of system 0.

where detail, where detail is any nonnegative integer, includes inactive nodes in the display.

```
0 >> vdp.Simulate
  1   >> vdp.Start
  2     >> RootSystem.Start 'vdp'
  3       0:4 Scope.Start 'Scope'
  4         0:5 Fcn.Start 'Fcn'
  5         0:6 Product.Start
  'Product'
  6           0:7 Gain.Start 'Mu'
  7         >| 0:8 Sum.Start 'Sum'
```

## See Also

step

# xbreak

---

<b>Purpose</b>	Break when debugger encounters step-size-limiting state
<b>Syntax</b>	<code>xbreak</code> <code>x</code>
<b>Description</b>	The <code>xbreak</code> command pauses execution of the model when the debugger encounters a state that limits the size of the steps that the solver takes. If <code>xbreak</code> mode is already on, <code>xbreak</code> turns the mode off.
<b>See Also</b>	<code>break</code>   <code>bafter</code>   <code>zcbreak</code>   <code>tbreak</code>   <code>nanbreak</code>   <code>rbreak</code>
<b>How To</b>	<ul style="list-style-type: none"><li>• <code>ebreak</code></li></ul>

**Purpose** Toggle breaking at nonsampled zero-crossing events

**Syntax** zcbreak  
zcb

**Description** The zcbreak command causes the debugger to break when a nonsampled zero-crossing event occurs. If zero-crossing break mode is already on, zcbreak turns the mode off.

**See Also** break | bafter | xbreak | tbreak | nanbreak | zclist

# zclist

---

<b>Purpose</b>	List blocks containing nonsampled zero crossings
<b>Syntax</b>	<code>zclist</code> <code>zcl</code>
<b>Description</b>	The <code>zclist</code> command displays a list of blocks in which nonsampled zero crossings can occur. The command displays the list in the MATLAB Command Window.
<b>See Also</b>	<code>zcbreak</code>

# Simulink Classes

---

<code>eventData</code>	Provide information about block method execution events
<code>getDescription</code>	Extract file description without loading block diagram into memory
<code>getMetadata</code>	Extract file metadata without loading block diagram into memory
<code>Simulink.AliasType</code>	Create alias for signal and/or parameter data type
<code>Simulink.Annotation</code>	Specify properties of model annotation
<code>Simulink.BlockCompDworkData</code>	Provide postcompilation information about block's DWork vector
<code>Simulink.BlockCompInputPortData</code>	Provide postcompilation information about block input port
<code>Simulink.BlockCompOutputPortData</code>	Provide postcompilation information about block output port
<code>Simulink.BlockData</code>	Provide run-time information about block-related data, such as block parameters
<code>Simulink.BlockPath</code>	

Simulink.BlockPortData	Describe block input or output port
Simulink.BlockPreCompInputPortData	
	Provide precompilation information about block input port
Simulink.BlockPreCompOutputPortData	
	Provide precompilation information about block output port
Simulink.Bus	Specify properties of signal bus
Simulink.BusElement	Describe element of signal bus
Simulink.ConfigSet	Access model configuration set
Simulink.ConfigSetRef	Link model to configuration set stored independently of any model
Simulink.DualScaledParameter	Specify name, value, units, and other properties of Simulink dual-scaled parameter
Simulink.GlobalDataTransfer	Configure concurrent execution data transfers
Simulink.Mask	Control masks programmatically
Simulink.MaskParameter	Control mask parameters programmatically
Simulink.MDLInfo	Extract model file information without loading block diagram into memory
Simulink.ModelAdvisor	Run Model Advisor from MATLAB file
Simulink.ModelDataLogs	Container for model's signal data logs

---

Simulink.ModelManagement.Project.CurrentProject	(To be removed) Manipulate the currently open Simulink project from the command line
Simulink.ModelWorkspace	Describe model workspace
Simulink.MSFcnRunTimeBlock	Get run-time information about Level-2 MATLAB S-function block
Simulink.NumericType	Specify data type
Simulink.ParamCoderInfo	Specify information needed to generate code for parameter
Simulink.Parameter	Specify value, value range, data type, and other properties of block parameter
Simulink.Preferences	Set Model Advisor preferences
Simulink.RunTimeBlock	Allow Level-2 MATLAB S-function and other MATLAB programs to get information about block while simulation is running
Simulink.SampleTime	Object containing sample time information
Simulink.ScopeDataLogs	Store data logged by Scope signal viewer
Simulink.scopes.TimeScopeConfiguration	Configure Time Scope for programmatic access
Simulink.sdi.DiffRunResult	Results from comparing two simulation runs
Simulink.sdi.DiffSignalResult	Results from comparing two signals
Simulink.sdi.Run	Manages signal data and metadata of simulation run

<code>Simulink.sdi.Signal</code>	Manages signal time series data and metadata
<code>Simulink.Signal</code>	Specify attributes of signal
<code>Simulink.SignalCoderInfo</code>	Specify information needed to generate code for signal
<code>Simulink.SimState.ModelSimState</code>	
	Access <code>SimState</code> snapshot data
<code>Simulink.SimulationData.BlockPath</code>	
	Fully specified Simulink block path
<code>Simulink.SimulationData.Dataset</code>	
	Container for logged data using MATLAB <code>timeseries</code> objects
<code>Simulink.SimulationData.DataStoreMemory</code>	
<code>Simulink.SimulationData.LoggingInfo</code>	
	Signal logging override settings
<code>Simulink.SimulationData.ModelLoggingInfo</code>	
	Signal logging override settings for a model
<code>Simulink.SimulationData.Signal</code>	
<code>Simulink.SimulationData.SignalLoggingInfo</code>	
	Signal logging override settings for signal
<code>Simulink.SimulationOutput</code>	Access object values of simulation results

---

<code>Simulink.SubsysDataLogs</code>	Container for subsystem's signal data logs
<code>Simulink.TimeInfo</code>	Provide information about time data in <code>Simulink.Timeseries</code> object
<code>Simulink.Timeseries</code>	Store data for any signal except mux or bus signal
<code>Simulink.TsArray</code>	Store data for mux or bus signal
<code>Simulink.VariableUsage</code>	Get information about workspace variables and blocks that use them
<code>Simulink.Variant</code>	Specify a model reference variant and its execution environment
<code>Simulink.WorkspaceVar</code>	Contains information about workspace variables and blocks that use them

# eventData

---

**Purpose** Provide information about block method execution events

**Description** Simulink software creates an instance of this class when a block method execution event occurs during simulation and passes it to any listeners registered for the event (see `add_exec_event_listener`). The instance specifies the type of event that occurred and the block whose method execution triggered the event. See “Access Block Data During Simulation” for more information.

**Parent** None

**Children** None

## Property Summary

Name	Description
“Type”	Type of method execution event that occurred.
“Source”	Block that triggered the event.

## Properties

---

Type

### Description

Type of method execution event that occurred. Possible values are:

event	Occurs...
'PreOutputs'	Before a block's Outputs method executes.
'PostOutputs'	After a block's Outputs method executes.
'PreUpdate'	Before a block's Update method executes.
'PostUpdate'	After a block's Update method executes.
'PreDerivatives'	Before a block's Derivatives method executes.
'PostDerivatives'	After a block's Derivatives method executes.

**Data Type**

string

**Access**

RO

---

Source

**Description**

Block that triggered the event

**Data Type**

Simulink.RunTimeBlock

**Access**

RO

# matlab.System

---

## Purpose

Base class for System objects

## Description

`matlab.System` is the base class for System objects. In your class definition file, you must subclass your object from this base class (or from another class that derives from this base class). Subclassing allows you to use the implementation and service methods provided by this base class to build your object. Type this syntax as the first line of your class definition file to directly inherit from the `matlab.System` base class, where `ObjectName` is the name of your object:

```
classdef ObjectName < matlab.System
```

---

**Note** You must set `Access=protected` for each `matlab.System` method you use in your code.

---

## Methods

<code>cloneImpl</code>	Copy System object
<code>getDiscreteStateImpl</code>	Discrete state property values
<code>getInputNamesImpl</code>	Names of the input ports of the System block
<code>getNumInputsImpl</code>	Number of input arguments passed to step and setup methods
<code>getNumOutputsImpl</code>	Number of outputs returned by method
<code>getOutputNamesImpl</code>	Names of System block output ports
<code>infoImpl</code>	Information about System object
<code>isInactivePropertyImpl</code>	Active or inactive flag for properties
<code>loadObjectImpl</code>	Load saved System object from MAT file

<code>processTunedPropertiesImpl</code>	Action when tunable properties change
<code>releaseImpl</code>	Release resources
<code>resetImpl</code>	Reset System object states
<code>saveObjectImpl</code>	Save System object in MAT file
<code>setProperties</code>	Set property values from name-value pair inputs
<code>setupImpl</code>	Initialize System object
<code>stepImpl</code>	System output and state update equations
<code>validateInputsImpl</code>	Validate inputs to step method
<code>validatePropertiesImpl</code>	Validate property values

## Attributes

In addition to the attributes available for MATLAB objects, you can apply the following attributes to any property of a custom System object.

<code>Nontunable</code>	After an object is locked (after <code>step</code> or <code>setup</code> has been called), use <code>Nontunable</code> to prevent a user from changing that property value. By default, all properties are tunable. The <code>Nontunable</code> attribute is useful to lock a property that has side effects when changed. This attribute is also useful for locking a property value assumed to be constant during processing. You should always specify properties that affect the number of input or output ports as <code>Nontunable</code> .
<code>Logical</code>	Use <code>Logical</code> to limit the property value to a logical, scalar value. Any scalar value that can be converted to a logical is also valid, such as 0 or 1.

PositiveInteger	Use PositiveInteger to limit the property value to a positive integer value.
DiscreteState	Use DiscreteState to mark a property so it will display its state value when you use the getDiscreteState method.

To learn more about attributes, see “Property Attributes” in the MATLAB Object-Oriented Programming documentation.

## Examples

### Create a Basic System Object

Create a simple System object, AddOne, which subclasses from matlab.System. You place this code into a MATLAB file, AddOne.m.

```
classdef AddOne < matlab.System
%ADDONE Compute an output value that increments the input by one

    methods (Access=protected)
        % stepImpl method is called by the step method.
        function y = stepImpl(~,x)
            y = x + 1;
        end
    end
end
```

Use this object by creating an instance of AddOne, providing an input, and using the step method.

```
hAdder = AddOne;
x = 1;
y = step(hAdder,x)
```

Assign the Nontunable attribute to the InitialValue property, which you define in your class definition file.

```
properties (Nontunable)
    InitialValue
```

end

## See Also

`matlab.system.StringSet` | `matlab.system.mixin.FiniteSource`

## How To

- “Object-Oriented Programming”
- Class Attributes
- Property Attributes
- “Method Attributes”
- “Define Basic System Objects”
- “Define Property Attributes”

# matlab.System.getInputNamesImpl

---

**Purpose** Names of the input ports of the System block

**Syntax** [name1,name2,...] = getInputNamesImpl(obj)

**Description** [name1,name2,...] = getInputNamesImpl(obj) returns the names of the input ports to System object, obj implemented in a MATLAB System block. The number of returned input names matches the number of inputs returned by the getNumInputs method. If you change a property value that changes the number of inputs, the names of those inputs also change.

getInputNamesImpl is called by the getInputNames method by the MATLAB System block.

---

**Note** You must set Access=protected for this method.

---

**Input Arguments** **obj**  
System object handle

**Output Arguments** **name1,name2,...**  
Names of the inputs for the specified object.  
**Default:** empty string

## **Examples** **Specify Input Port Name**

Specify in your class definition file the names of two input ports as 'upper' and 'lower'.

```
methods (Access=protected)
    function varargout = getInputNamesImpl(obj)
        numInputs = getNumInputs(obj);
        varargout = cell(1,numInputs);
        varargout{1} = 'upper';
```

```
        if numInputs > 1
            varargout{2} = 'lower';
        end
    end
end
```

## See Also

[getNumInputsImpl](#) | [getOutputNamesImpl](#)

## How To

- “Validate Property and Input Values”

# matlab.System.getOutputNamesImpl

---

**Purpose** Names of System block output ports

**Syntax** [name1,name2,...] = getOutputNamesImpl(obj)

**Description** [name1,name2,...] = getOutputNamesImpl(obj) returns the names of the output ports from System object, obj implemented in a MATLAB System block. The number of returned output names matches the number of outputs returned by the getNumOutputs method. If you change a property value that affects the number of outputs, the names of those outputs also change.

getOutputNamesImpl is called by the getOutputNames method and by the MATLAB System block.

---

**Note** You must set Access=protected for this method.

---

**Input Arguments** **obj**  
System object handle

**Output Arguments** **name1,name2,...**  
Names of the outputs for the specified object.  
**Default:** empty string

**Examples** **Specify Output Port Name**

Specify the name of an output port as 'count'.

```
methods (Access=protected)
    function outputName = getOutputNamesImpl(~)
        outputName = 'count';
    end
end
```

**See Also**      [getNumOutputsImpl](#) | [getInputNamesImpl](#)

**How To**      • “Validate Property and Input Values”

# matlab.System.infoImpl

---

**Purpose** Information about System object

**Syntax** `s = infoImpl(obj,varargin)`

**Description** `s = infoImpl(obj,varargin)` lets you set up information to return about the current configuration of a System object `obj`. This information is returned in a struct from the `info` method. The `varargin` argument is optional. The default `infoImpl` method, which is used if you do not include `infoImpl` in your class definition file, returns an empty struct. `infoImpl` is called by the `info` method.

---

**Note** You must set `Access=protected` for this method.

---

**Input Arguments** **obj**  
System object handle

**varargin**  
Allows variable number of inputs

## Examples **Define info for System object**

Define the `infoImpl` method to return current count information for `info(obj)`.

```
methods (Access=protected)
    function s = infoImpl(obj)
        s = struct('Count',obj.pCount);
    end
end
```

**How To** • “Define System Object Information”

<b>Purpose</b>	System output and state update equations
<b>Syntax</b>	<code>[output1,output2,...] = stepImpl(obj,input1,input2,...)</code>
<b>Description</b>	<code>[output1,output2,...] = stepImpl(obj,input1,input2,...)</code> defines the algorithm to execute when you call the <code>step</code> method on the specified object <code>obj</code> . The <code>step</code> method calculates the outputs and updates the object's state values using the inputs, properties, and state update equations.  <code>stepImpl</code> is called by the <code>step</code> method.

---

**Note** You must set `Access=protected` for this method.

---

<b>Tips</b>	The number of input arguments and output arguments must match the values returned by the <code>getNumInputsImpl</code> and <code>getNumOutputsImpl</code> methods, respectively
-------------	---

<b>Input Arguments</b>	<b>obj</b> System object handle
	<b>input1,input2,...</b> Inputs to the <code>step</code> method

<b>Output Arguments</b>	<b>output</b> Output returned from the <code>step</code> method.
-------------------------	---

<b>Examples</b>	<b>Specify System Object Algorithm</b> Use the <code>stepImpl</code> method to increment two numbers.
-----------------	--

```
methods (Access=protected)
function [y1,y2] = stepImpl(obj,x1,x2)
    y1 = x1 + 1;
```

# matlab.System.stepImpl

---

```
        y2 = x2 + 1;  
    end  
end
```

## See Also

[getNumInputsImpl](#) | [getNumOutputsImpl](#) | [validateInputsImpl](#)

## How To

- “Define Basic System Objects”
- “Change Number of Step Inputs or Outputs”

**Purpose**

Initialize System object

**Syntax**

```
setupImpl(obj)  
setupImpl(obj,input1,input2,...)
```

**Description**

`setupImpl(obj)` sets up a System object and implements one-time tasks that do not depend on any inputs to the `stepImpl` method for this object. To acquire resources for a System object, you must use `setupImpl` instead of a constructor. `setupImpl` executes the first time the `step` method is called on an object after that object has been created. It also executes the next time `step` is called after an object has been released. You typically use `setupImpl` to set private properties so they do not need to be calculated each time `stepImpl` method is called.

`setupImpl(obj,input1,input2,...)` sets up a System object using one or more of the `stepImpl` input specifications. The number and order of inputs must match the number and order of inputs defined in the `stepImpl` method. You pass the inputs into `setupImpl` to use the specifications, such as size and datatypes in the one-time calculations. You do not use the `setupImpl` method to set up input values.

`setupImpl` is called by the `setup` method, which is done automatically as the first subtask of the `step` method on an unlocked System object.

---

**Note** You can omit this method from your class definition file if your System object does not require any setup tasks.

You must set `Access=protected` for this method.

Do not use `setupImpl` to initialize or reset states. For states, use the `resetImpl` method.

You cannot modify any tunable properties in this method if its System object will be used in the Simulink MATLAB System block.

---

# matlab.System.setupImpl

---

## Tips

To validate properties or inputs use the `validatePropertiesImpl`, `validateInputsImpl`, or `setProperties` methods. Do not include validation in `setupImpl`.

## Input Arguments

**obj**

System object handle

**input1,input2,...**

Inputs to the `stepImpl` method

## Examples

### Setup a File for Writing

This example shows how to open a file for writing using the `setupImpl` method in your class definition file.

```
methods (Access=protected)
    function setupImpl(obj)
        obj.pFileID = fopen(obj.Filename,'wb');
        if obj.pFileID < 0
            error('Opening the file failed');
        end
    end
end
```

### Check input size

This examples shows how to use `setupImpl` to check that the size of a `stepImpl` method input matches the size of a state property.

```
properties (Access = private)
    myState = [1 2];
end

methods (Access = protected)
    function setupImpl(obj,u)
        if any(size(obj.myState) ~= size(u))
            error('Size of "myState" does not match size of input "u"');
        end
    end
end
```

```
        end

        function y = stepImpl(obj,u)
            y = obj.myState;
            obj.myState = u;
        end
    end
end
```

## See Also

[validatePropertiesImpl](#) | [validateInputsImpl](#) | [setProperties](#)

## How To

- “Initialize Properties and Setup One-Time Calculations”
- “Set Property Values at Construction Time”

# matlab.System.resetImpl

---

**Purpose** Reset System object states

**Syntax** resetImpl(obj)

**Description** resetImpl(obj) defines the state reset equations for the System object. Typically you reset the states to a set of initial values. This is useful for initialization at the start of simulation.

resetImpl is called by the reset method. It is also called by the setup method, after the setupImpl method.

---

**Note** You must set Access=protected for this method.

Do not use resetImpl to initialize or reset properties. For properties, use the setupImpl method.

You cannot modify any tunable properties in this method if its System object will be used in the Simulink MATLAB System block.

---

**Input Arguments** **obj**  
System object handle

**Examples** **Reset Property Value**

Use the reset method to reset the counter pCount property to zero.

```
methods (Access=protected)
    function resetImpl(obj)
        obj.pCount = 0;
    end
end
```

**See Also** releaseImpl

**How To** • “Reset Algorithm State”

**Purpose** Release resources

**Syntax** `releaseImpl(obj)`

**Description** `releaseImpl(obj)` releases any resources used by the System object, such as file handles. This method also performs any necessary cleanup tasks. To release resources for a System object, you must use `releaseImpl` instead of a destructor.

`releaseImpl` is called by the `release` method. `releaseImpl` is also called when the object is deleted or cleared from memory, or when all references to the object have gone out of scope.

---

**Note** You must set `Access=protected` for this method.

---

**Input Arguments**

**obj**  
System object handle

**Examples** **Close a File and Release Its Resources**

Use the `releaseImpl` method to close a file.

```
methods (Access=protected)
function releaseImpl(obj)
    fclose(obj.pFileID);
end
end
```

**How To**

- “Release System Object Resources”

# matlab.System.getNumInputsImpl

---

**Purpose** Number of input arguments passed to step and setup methods

**Syntax** `num = getNumInputsImpl(obj)`

**Description** `num = getNumInputsImpl(obj)` returns the number of inputs `num` (excluding the System object handle) expected by the `step` method.

If your `step` method has a variable number of inputs (uses `varargin`), you should implement the `getNumInputsImpl` method in your class definition file. If the number of inputs expected by the `step` method is fixed (does not use `varargin`), the default `getNumInputsImpl` determines the required number of inputs directly from the `step` method. In this case, you do not need to include `getNumInputsImpl` in your class definition file.

`getNumInputsImpl` is called by the `getNumInputs` method and by the `setup` method if the number of inputs has not been determined already.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any properties in this method.

---

## Input Arguments

**obj**  
System object handle

## Output Arguments

**num**  
Number of inputs expected by the `step` method for the specified object.

**Default:** 1

## Examples

### Set Number of Inputs

Specify the number of inputs (2, in this case) expected by the `step` method.

```
methods (Access=protected)
    function num = getNumInputsImpl(obj)
        num = 2;
    end
end
```

## Set Number of Inputs to Zero

Specify that the step method will not accept any inputs.

```
methods (Access=protected)
    function num = getNumInputsImpl(~)
        num = 0;
    end
end
```

## See Also

[setupImpl](#) | [stepImpl](#) | [getNumOutputsImpl](#)

## How To

- “Change Number of Step Inputs or Outputs”

# matlab.System.getNumOutputsImpl

---

**Purpose** Number of outputs returned by step method

**Syntax** num = getNumOutputsImpl (obj)

**Description** num = getNumOutputsImpl (obj) returns the number of outputs from the step method. The default implementation returns 1 output. To specify a value other than 1, you must use include the getNumOutputsImpl method in your class definition file.

getNumOutputsImpl is called by the getNumOutputs method, if the number of outputs has not been determined already.

---

**Note** You must set Access=protected for this method.

You cannot modify any properties in this method.

---

**Input Arguments** **obj**  
System object handle

**Output Arguments** **num**  
Number of outputs to be returned by the step method for the specified object.

## **Examples** **Set Number of Outputs**

Specify the number of outputs (2, in this case) returned from the step method.

```
methods (Access=protected)
    function num = getNumOutputsImpl(obj)
        num = 2;
    end
end
```

## Set Number of Outputs to Zero

Specify that the step method does not return any outputs.

```
methods (Access=protected)
    function num = getNumOutputsImpl(-)
        num = 0;
    end
end
```

## See Also

[stepImpl](#) | [getNumInputsImpl](#) | [setupImpl](#)

## How To

- “Change Number of Step Inputs or Outputs”

# matlab.System.getDiscreteStateImpl

---

**Purpose** Discrete state property values

**Syntax** `s = getDiscreteStateImpl(obj)`

**Description** `s = getDiscreteStateImpl(obj)` returns a struct `s` of state values. The field names of the struct are the object's `DiscreteState` property names. To restrict or change the values returned by `getDiscreteState` method, you can override this `getDiscreteStateImpl` method.

`getDiscreteStatesImpl` is called by the `getDiscreteState` method, which is called by the `setup` method.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any properties in this method.

---

**Input Arguments** **obj**  
System object handle

**Output Arguments** **s**  
Struct of state values.

## Examples **Get Discrete State Values**

Use the `getDiscreteStateImpl` method in your class definition file to get the discrete states of the object.

```
methods (Access=protected)
    function s = getDiscreteStateImpl(obj)
    end
end
```

**See Also** `setupImpl`

## How To

- “Define Property Attributes”

# matlab.System.validateInputsImpl

---

**Purpose** Validate inputs to step method

**Syntax** `validateInputsImpl(obj,input1,input2,...)`

**Description** `validateInputsImpl(obj,input1,input2,...)` validates inputs to the step method at the beginning of initialization. Validation includes checking data types, complexity, cross-input validation, and validity of inputs controlled by a property value.

`validateInputsImpl` is called by the `setup` method before `setupImpl`. `validateInputsImpl` executes only once.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any properties in this method. Use the `processTunedPropertiesImpl` method or `setupImpl` method to modify properties.

---

## Input Arguments

**obj**  
System object handle

**input1,input2,...**  
Inputs to the setup method

## Examples

### Validate Input Type

Validate that the input is numeric.

```
methods (Access=protected)
function validateInputsImpl(~,x)
    if ~isnumeric(x)
        error('Input must be numeric');
    end
end
end
```

**See Also**      `validatePropertiesImpl` | `setupImpl`

**How To**      • “Validate Property and Input Values”

# matlab.System.validatePropertiesImpl

---

**Purpose** Validate property values

**Syntax** `validatePropertiesImpl(obj)`

**Description** `validatePropertiesImpl(obj)` validates interdependent or interrelated property values at the beginning of object initialization, such as checking that the dependent or related inputs are the same size. `validatePropertiesImpl` is the first method called by the `setup` method. `validatePropertiesImpl` also is called before the `processTunablePropertiesImpl` method.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any properties in this method. Use the `processTunedPropertiesImpl` method or `setupImpl` method to modify properties.

---

**Input Arguments**

**obj**  
System object handle

## Examples

### Validate a Property

Validate that the `useIncrement` property is true and that the value of the `increment` property is greater than zero.

```
methods (Access=protected)
function validatePropertiesImpl(obj)
    if obj.useIncrement && obj.increment < 0
        error('The increment value must be positive');
    end
end
end
```

**See Also** `processTunedPropertiesImpl` | `setupImpl` | `validateInputsImpl`

## How To

- “Validate Property and Input Values”

# matlab.System.processTunedPropertiesImpl

---

**Purpose** Action when tunable properties change

**Syntax** `processTunedPropertiesImpl(obj)`

**Description** `processTunedPropertiesImpl(obj)` specifies the actions to perform when one or more tunable property values change. This method is called as part of the next call to the `step` method after a tunable property value changes. A property is tunable only if its `Nontunable` attribute is `false`, which is the default.

`processTunedPropertiesImpl` is called by the `step` method.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any tunable properties in this method if its `System` object will be used in the Simulink MATLAB System block.

---

**Tips** Use this method when a tunable property affects a different property value. For example, two property values determine when to calculate a lookup table. You want to perform that calculation when either property changes. You also want the calculation to be done only once if both properties change before the next call to the `step` method.

**Input Arguments** **obj**  
System object handle

## **Examples** Specify Action When Tunable Property Changes

Use `processTunedPropertiesImpl` to recalculate the lookup table if the value of either the `NumNotes` or `MiddleC` property changes.

```
methods (Access=protected)
function processTunedPropertiesImpl(obj)
    % Generate a lookup table of note frequencies
    obj.pLookupTable = obj.MiddleC * (1+log(1:obj.NumNotes)/log(12));
```

```
        end  
    end
```

## See Also

[validatePropertiesImpl](#) | [setProperties](#)

## How To

- “Validate Property and Input Values”
- “Define Property Attributes”

# matlab.System.isInactivePropertyImpl

---

**Purpose** Active or inactive flag for properties

**Syntax** `flag = isInactivePropertyImpl(obj,prop)`

**Description** `flag = isInactivePropertyImpl(obj,prop)` specifies whether a public, non-state property is inactive for the current object configuration. An *inactive property* is a property that is not relevant to the object, given the values of other properties. Inactive properties are not shown if you use the `disp` method to display object properties. If you attempt to use public access to directly access or use `get` or `set` on an inactive property, a warning occurs.

`isInactiveProperty` is called by the `disp` method and by the `get` and `set` methods.

---

**Note** You must set `Access=protected` for this method.

---

**Input Arguments**

**obj**  
System object handle

**prop**  
Public, non-state property name

**Output Arguments**

**flag**  
Logical scalar value indicating whether the input property `prop` is inactive for the current object configuration.

**Examples**      **Set Inactive Property**

Display the `InitialValue` property only when the `UseRandomInitialValue` property value is `false`.

```
methods (Access=protected)
    function flag = isInactivePropertyImpl(obj,propertyName)
```

```
        if strcmp(propertyName,'InitialValue')
            flag = obj.UseRandomInitialValue;
        else
            flag = false;
        end
    end
end
end
```

## See Also

setProperties

## How To

- “Hide Inactive Properties”

# matlab.System.setProperties

---

**Purpose** Set property values from name-value pair inputs

**Syntax** `setProperties(obj,numargs,name1,value1,name2,value2,...)`  
`setProperties(obj,numargs,arg1,...,argm,name1,value1,name2,value2,...,`  
`'ValueOnlyPropName1','ValueOnlyPropName2',...,`  
`'ValueOnlyPropNameM')`

**Description** `setProperties(obj,numargs,name1,value1,name2,value2,...)` provides the name-value pair inputs to the System object constructor. Use this syntax if every input must specify both name and value.

---

**Note** To allow standard name-value pair handling at construction, define `setProperties` for your System object.

---

`setProperties(obj,numargs,arg1,...,argm,name1,value1,name2,value2,...,`  
`'ValueOnlyPropName1','ValueOnlyPropName2',...,`  
`'ValueOnlyPropNameM')` provides the value-only inputs, followed by the name-value pair inputs to the System object during object construction. Use this syntax if you want to allow users to specify one or more inputs by their values only.

## Input Arguments

**obj**  
System objectSystem object handle

**numargs**  
Number of inputs passed in by the object constructor

**name1,name2,...**  
Name of property

**value1,value2,...**  
Value of the property

**arg1,arg2,...**

Value of property (for value-only input to the object constructor)

**ValueOnlyPropName1,ValueOnlyPropName2,...**

Name of the value-only property

## Examples

### Setup Value-Only Inputs

Set up an object so users can specify value-only inputs for VProp1, VProp2, and other property values via name-value pairs when constructing the object. In this example, VProp1 and VProp2 are the names of value-only properties.

```
methods
    function obj = MyFile(varargin)
        setProperties(obj,nargin,varargin{:},'VProp1','VProp2');
    end
end
```

## How To

- “Set Property Values at Construction Time”

# matlab.System.loadObjectImpl

---

**Purpose** Load saved System object from MAT file

**Syntax** loadObjectImpl(obj)

**Description** loadObjectImpl(obj) loads a saved System object, obj, from a MAT file. Your loadObjectImpl method should correspond to your saveObjectImpl method to ensure that all saved properties and data are loaded.

---

**Note** You must set Access=protected for this method.

---

**Input Arguments**

**obj**  
System object handle

## Examples

### Load System Object

Load a saved System object. In this case, the object contains a child object, protected and private properties, and a discrete state.

```
methods(Access=protected)
function loadObjectImpl(obj, s, wasLocked)
    % Load child System objects
    obj.child = matlab.System.loadObject(s.child);

    % Save protected & private properties
    obj.protected = s.protected;
    obj.pdependentprop = s.pdependentprop;

    % Save state only if locked when saved
    if wasLocked
        obj.state = s.state;
    end

    % Call base class method
```

```
        loadObjectImpl@matlab.System(obj,s,wasLocked);  
    end  
end
```

## See Also

saveObjectImpl

## How To

- “Load System Object”
- “Save System Object”

# matlab.System.saveObjectImpl

---

**Purpose** Save System object in MAT file

**Syntax** `saveObjectImpl(obj)`

**Description** `saveObjectImpl(obj)` defines what System object `obj` property and state values are saved in a MAT file when a user calls `save` on that object. `save` calls `saveObject`, which then calls `saveObjectImpl`. If you do not define a `saveObjectImpl` method for your System object class, only public properties and properties with the `DiscreteState` attribute are saved. To save any private or protected properties or state information, you must define a `saveObjectImpl` in your class definition file.

You should save the state of an object only if the object is locked. When the user loads that saved object, it loads in that locked state.

To save child object information, you use the associated `saveObject` method within the `saveObjectImpl` method.

End users can use `load`, which calls `loadObjectImpl` to load a System object into their workspace.

---

**Note** You must set `Access=protected` for this method.

---

**Input Arguments**

**obj**  
System object handle

**Examples** **Define Property and State Values to Save**

Define what is saved for the System object. Call the base class version of `saveObjectImpl` to save public properties. Then, save any child System objects and any protected and private properties. Finally, save the state, if the object is locked.

```
methods(Access=protected)
function s = saveObjectImpl(obj)
```

```
s = saveObjectImpl@matlab.System(obj);
s.child = matlab.System.saveObject(obj.child);
s.protected = obj.protected;
s.pdependentprop = obj.pdependentprop;
if isLocked(obj)
    s.state = obj.state;
end
end
end
```

## See Also

loadObjectImpl

## How To

- “Save System Object”
- “Load System Object”

# matlab.System.cloneImpl

---

**Purpose** Copy System object

**Syntax** `cloneImpl(obj)`

**Description** `cloneImpl(obj)` copies a System object by using the `saveObjectImpl` and `loadObjectImpl` methods. The default `cloneImpl` copies an object and its current state but does not copy any private or protected properties. If the object you clone is locked and you use the default `cloneImpl`, the new object will also be locked. If you define your own `cloneImpl` and the associated `saveObjectImpl` and `loadObjectImpl`, you can specify whether to clone the object's state and whether to clone the object's private and protected properties.

`cloneImpl` is called by the `clone` method.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any properties in this method.

---

## Input Arguments

**obj**  
System object handle of object to clone.

## Examples

### Clone a System Object

Use the `cloneImpl` method in your class definition file to copy a System object

```
methods (Access=protected)
    function obj2 = cloneImpl(obj1)
        s = saveObject (obj1);
        obj2 = loadObject(s);
    end
end
```

## See Also

`saveObjectImpl` | `saveObjectImpl`

## How To

- “Clone System Object”

# matlab.system.mixin.FiniteSource

---

**Purpose** Finite source mixin class

**Description** `matlab.system.mixin.FiniteSource` is a class that defines the `isDone` method, which reports the state of a finite data source, such as an audio file.

To use this method, you must subclass from this class in addition to the `matlab.System` base class. Type the following syntax as the first line of your class definition file, where `ObjectName` is the name of your object:

```
classdef ObjectName < matlab.System &...  
    matlab.system.mixin.FiniteSource
```

**Methods** `isDoneImpl` End-of-data flag

**See Also** `matlab.System`

**Tutorials** • “Define Finite Source Objects”

**How To** • “Object-Oriented Programming”  
• Class Attributes  
• Property Attributes

**Purpose** End-of-data flag

**Syntax** `status = isDoneImpl(obj)`

**Description** `status = isDoneImpl(obj)` indicates if an end-of-data condition has occurred. The `isDone` method should return `false` when data from a finite source has been exhausted, typically by having read and output all data from the source. You should also define the result of future reads from an exhausted source in the `isDoneImpl` method.

`isDoneImpl` is called by the `isDone` method.

---

**Note** You must set `Access=protected` for this method.

---

**Input Arguments** **obj**  
System object handle

**Output Arguments** **status**  
Logical value, true or false, that indicates if an end-of-data condition has occurred or not, respectively.

## Examples **Check for End-of-Data**

Set up the `isDoneImpl` method in your class definition file so the `isDone` method checks whether the object has completed eight iterations.

```
methods (Access=protected)
    function bdone = isDoneImpl(obj)
        bdone = obj.NumIters==8;
    end
end
```

**See Also** `matlab.system.mixin.FiniteSource`

## How To

- “Define Finite Source Objects”

## Purpose

Set of valid string values

## Description

`matlab.system.StringSet` defines a list of valid string values for a property. This class validates the string in the property and enables tab completion for the property value. A *StringSet* allows only predefined or customized strings as values for the property.

A `StringSet` uses two linked properties, which you must define in the same class. One is a public property that contains the current string value. This public property is displayed to the user. The other property is a hidden property that contains the list of all possible string values. This hidden property should also have the transient attribute so its value is not saved to disk when you save the System object.

The following considerations apply when using `StringSets`:

- The string property that holds the current string can have any name.
- The property that holds the `StringSet` must use the same name as the string property with the suffix “Set” appended to it. The string set property is an instance of the `matlab.system.StringSet` class.
- Valid strings, defined in the `StringSet`, must be declared using a cell array. The cell array cannot be empty nor can it have any empty strings. Valid strings must be unique and are case-insensitive.
- The string property must be set to a valid `StringSet` value.

## Examples

### Set String Property Values

Set the string property, `Flavor`, and the `StringSet` property, `FlavorSet` in your class definition file.

```
properties
    Flavor='Chocolate';
end

properties (Hidden,Transient)
    FlavorSet = ...
        matlab.system.StringSet({'Vanilla','Chocolate'});
```

# matlab.system.StringSet

---

end

## See Also

matlab.System

## How To

- “Object-Oriented Programming”
- Class Attributes
- Property Attributes
- “Limit Property Values to Finite String Set”

**Purpose**

Custom icon mixin class

**Description**

`matlab.system.mixin.CustomIcon` is a class that defines the `getIcon` method. This method customizes the name of the icon used for the System object implemented through a MATLAB System block.

To use this method, you must subclass from this class in addition to the `matlab.System` base class. Type the following syntax as the first line of your class definition file, where `ObjectName` is the name of your object:

```
classdef ObjectName < matlab.system &...  
    matlab.system.mixin.CustomIcon
```

**Methods**

<code>getIconImpl</code>	Name to display as block icon
--------------------------	-------------------------------

**See Also**

`matlab.System`

**Tutorials**

- “Define System Block Icon”

**How To**

- “Object-Oriented Programming”
- Class Attributes
- Property Attributes

# matlab.system.mixin.CustomIcon.getIconImpl

---

**Purpose** Name to display as block icon

**Syntax** `icon = getIconImpl(obj)`

**Description** `icon = getIconImpl(obj)` returns the string or cell array of strings to display on the block icon of the System object implemented through the MATLAB System block. If you do not specify the `getIconImpl` method, the block displays the class name of the System object as the block icon. For example, if you specify `pkg.MyObject` in the MATLAB System block, the default icon is labeled `My Object`

`getIconImpl` is called by the `getIcon` method, which is used by the MATLAB System block during Simulink model compilation.

---

**Note** You must set `Access=protected` for this method.

---

**Input Arguments** **obj**  
System object handle

**Output Arguments** **icon**  
String or cell array of strings to display as the block icon. Each cell is displayed as a separate line.

## Examples **Add System Block Icon Name**

Specify in your class definition file the name of the block icon as 'Enhanced Counter' using two lines.

```
methods (Access=protected)
    function icon = getIconImpl(~)
        icon = {'Enhanced', 'Counter'};
    end
end
```

**See Also**      matlab.system.mixin.CustomIcon

**How To**      • “Define System Block Icon”

# matlab.system.display.Header

---

**Purpose** Header for System objects properties

**Syntax** `matlab.system.display.Header(N1,V1,...Nn,Vn)`  
`matlab.system.display.Header(Obj,...)`

**Description** `matlab.system.display.Header(N1,V1,...Nn,Vn)` defines a header for the System object, with the header properties defined in Name-Value (N,V) pairs. You use `matlab.system.display.Header` within the `getHeaderImpl` method. The available header properties are

- `Title` — Header title string. The default value is an empty string.
- `Text` — Header description text string. The default value is an empty string.
- `ShowSourceLink` — Show link to source code for the object.

`matlab.system.display.Header(Obj,...)` creates a header for the specified System object (`Obj`) and sets the following property values:

- `Title` — Set to the `Obj` class name.
- `Text` — Set to help summary for `Obj`.
- `ShowSourceLink` — Set to `true` if `Obj` is MATLAB code. In this case, the **Source Code** link is displayed. If `Obj` is P-coded and the source code is not available, set this property to `false`.

You can use `mfilename('class')` from within this method to get the name of the System object. If you set any Name-Value pairs, those property values override the default settings.


**Methods** `getHeaderImpl` Header for System object display

## **Examples** Define System Block Header

Define a header in your class definition file.

```
methods(Static,Access=protected)
    function header = getHeaderImpl
        header = matlab.system.display.Header(mfilename('class'), ...
            'Title','AlternativeTitle',...
            'Text','An alternative class description');
    end
end
```

The resulting output appears as follows. In this case, **Source code** appears because the ShowSourceLink property was set to true.

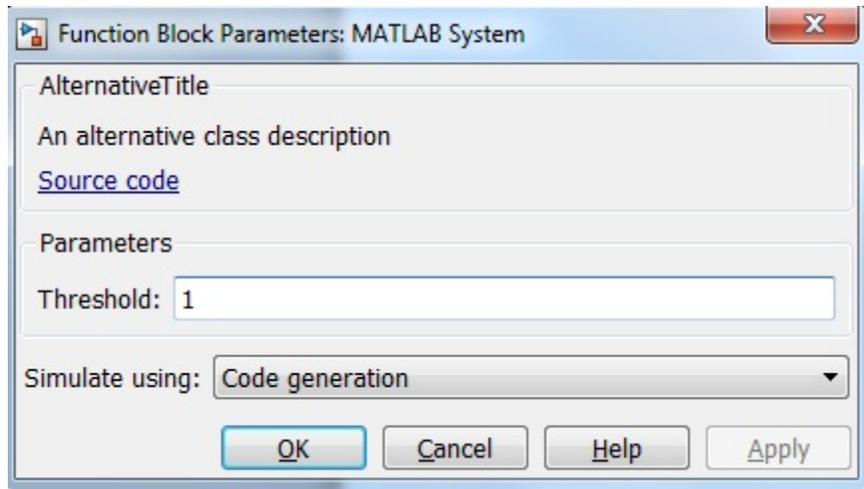

## See Also

matlab.system.display.Section |  
matlab.system.display.SectionGroup

## How To

- “Object-Oriented Programming”
- Class Attributes
- Property Attributes
- “Add Header to System Block Dialog”

# matlab.system.display.Header.getHeaderImpl

---

**Purpose** Header for System object display

**Syntax** header = getHeaderImpl

**Description** header = getHeaderImpl returns the header to display for the System object. If you do not specify the getHeaderImpl method, no title or text appears for the header in the block dialog box.

getHeaderImpl is called by the MATLAB System block

---

**Note** You must set Access=protected and Static for this method.

---

**Output Arguments** header  
Header text

## **Examples** Define Header for System Block Dialog Box

Define a header in your class definition file for the EnhancedCounter System object.

```
methods(Static,Access=protected)
    function header = getHeaderImpl
        header = matlab.system.display.Header('EnhancedCounter',...
            'Title','Enhanced Counter');
    end
end
```

**See Also** getPropertyGroupsImpl

**How To** • “Add Header to System Block Dialog”

## Purpose

Property group section for System objects

## Syntax

```
matlab.system.display.Section(N1,V1,...Nn,Vn)
matlab.system.display.Section(Obj,...)
```

## Description

`matlab.system.display.Section(N1,V1,...Nn,Vn)` creates a property group section for displaying System object properties, which you define using property Name-Value pairs (N,V). You use `matlab.system.display.Section` to define property groups using the `getPropertyGroupsImpl` method. The available Section properties are

- **Title** — Section title string. The default value is an empty string.
- **TitleSource** — Source of section title string. Valid values are 'Property' and 'Auto'. The default value is 'Property', which uses the string from the `Title` property. If the `Obj` name is given, the default value is `Auto`, which uses the `Obj` name.
- **Description** — Section description string. The default value is an empty string.
- **PropertyList** — Section property list as a cell array of property names. The default value is an empty array. If the `Obj` name is given, the default value is all eligible display properties.

---

**Note** Certain properties are not eligible for display either in a dialog box or in the System object summary on the command-line. Property types that cannot be displayed are: hidden, abstract, private or protected access, discrete state, and continuous state. Dependent properties do not display in a dialog box, but do display in the command-line summary.

---

`matlab.system.display.Section(Obj,...)` creates a property group section for the specified System object (`Obj`) and sets the following property values:

# matlab.system.display.Section

---

- TitleSource — Set to 'Auto', which uses the Obj name.
- PropertyList — Set to all publically-available properties in the Obj.

You can use `mfilename('class')` from within this method to get the name of the System object. If you set any Name-Value pairs, those property values override the default settings.

## Methods

## Examples


### Define Property Groups

Define two property groups in your class definition file by specifying their titles and property lists.

```
methods(Static,Access=protected)
    function groups = getPropertyGroupsImpl
        valueGroup = matlab.system.display.Section(...
            'Title','Value parameters',...
            'PropertyList',{'StartValue','EndValue'});

        thresholdGroup = matlab.system.display.Section(...
            'Title','Threshold parameters',...
            'PropertyList',{'Threshold','UseThreshold'});
        groups = [valueGroup,thresholdGroup];
    end
end
```

When you specify the System object in the MATLAB System block, the resulting dialog box appears as follows.

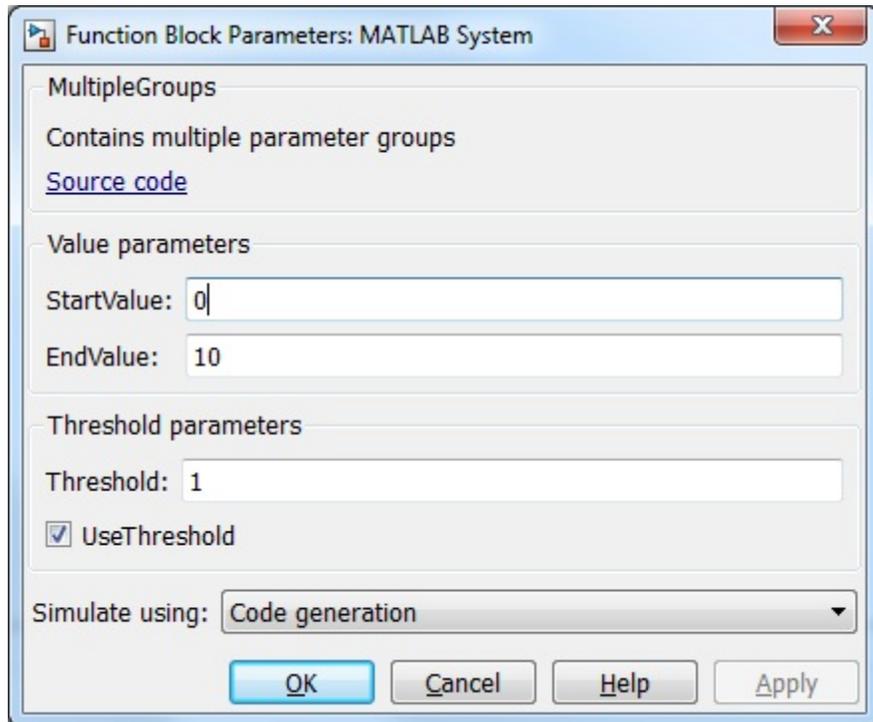

## See Also

`matlab.system.display.Header` |  
`matlab.system.display.SectionGroup`

## How To

- “Object-Oriented Programming”
- Class Attributes
- Property Attributes
- “Add Property Groups to System Object and Block Dialog”

# matlab.system.display.Section.getPropertyGroupsImpl

---

**Purpose** Property groups for System object display

**Syntax** `group = getPropertyGroupsImpl`

**Description** `group = getPropertyGroupsImpl` returns the groups of properties to display. You define property sections (`matlab.system.display.Section`) and section groups (`matlab.system.display.SectionGroup`) within this method. Sections arrange properties into groups. Section groups arrange sections and properties into groups. If a System object, included through the MATLAB System block, has a section, but that section is not in a section group, its properties appear above the block dialog tab panels.

If you do not include a `getPropertyGroupsImpl` method in your code, all public properties are included in the dialog box by default. If you include a `getPropertyGroupsImpl` method but do not list a property, that property does not appear in the dialog box.

`getPropertyGroupsImpl` is called by the MATLAB System block and when displaying the object at the command line.

---

**Note** You must set `Access=protected` and `Static` for this method.

---

**Output Arguments** **group**  
Property group or groups

## Examples Define Block Dialog Tabs

Define two block dialog tabs, each containing specific properties. For this example, you use the `getPropertyGroupsImpl`, `matlab.system.display.SectionGroup`, and `matlab.system.display.Section` methods in your class definition file.

```
methods(Static, Access=protected)
    function groups = getPropertyGroupsImpl
```

# matlab.system.display.Section.getPropertyGroupsImpl

---

```
valueGroup = matlab.system.display.Section(...
    'Title','Value parameters',...
    'PropertyList',{'StartValue','EndValue'});

thresholdGroup = matlab.system.display.Section(...
    'Title','Threshold parameters',...
    'PropertyList',{'Threshold','UseThreshold'});


mainGroup = matlab.system.display.SectionGroup(...
    'Title','Main', ...
    'Sections',[valueGroup,thresholdGroup]);


initGroup = matlab.system.display.SectionGroup(...
    'Title','Initial conditions', ...
    'PropertyList',{'IC1','IC2','IC3'});

    groups = [mainGroup,initGroup];
end
end
```

The resulting dialog box appears as follows.

# matlab.system.display.Section.getPropertyGroupsImpl

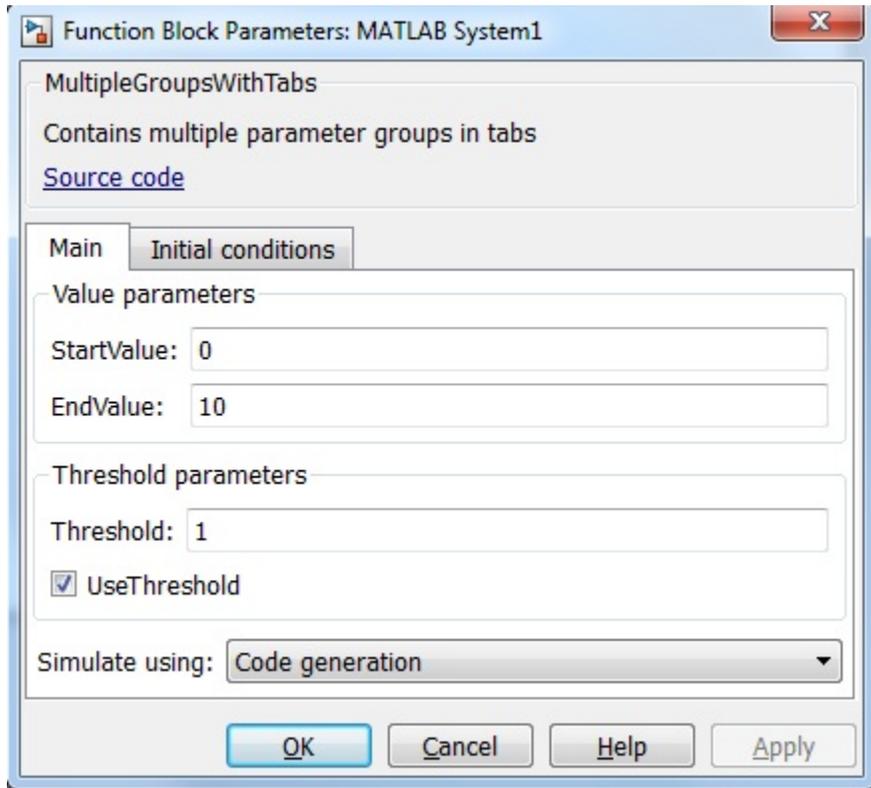

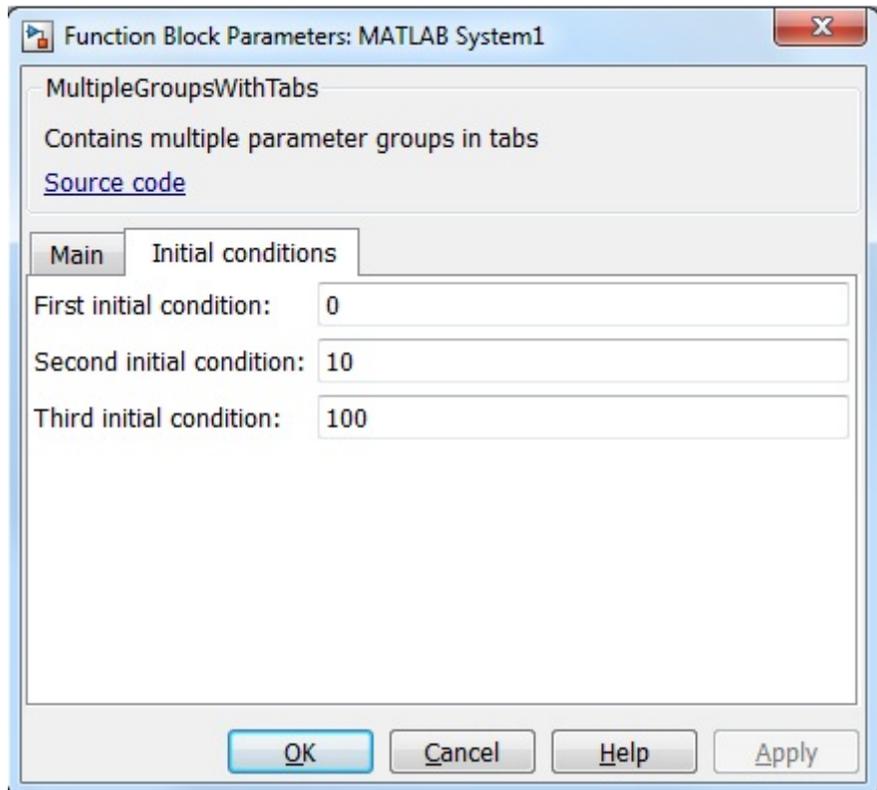

## See Also

`matlab.system.display.Header` | `matlab.system.display.Section`  
| `matlab.system.display.SectionGroup`

## How To

- “Add Property Groups to System Object and Block Dialog”

# matlab.system.display.SectionGroup

---

**Purpose** Section group for System objects

**Syntax** `matlab.system.display.SectionGroup(N1,V1,...Nn,Vn)`  
`matlab.system.display.SectionGroup(Obj,...)`

**Description** `matlab.system.display.SectionGroup(N1,V1,...Nn,Vn)` creates a group for displaying System object properties and display sections created with `matlab.system.display.Section`. You define such sections or properties using property Name-Value pairs (N,V). A section group can contain both properties and sections. You use `matlab.system.display.SectionGroup` to define section groups using the `getPropertyGroupsImpl` method. Section groups display as separate tabs in the MATLAB System block. The available Section properties are

- **Title** — Group title string. The default value is an empty string.
- **TitleSource** — Source of group title string. Valid values are 'Property' and 'Auto'. The default value is 'Property', which uses the string from the **Title** property. If the **Obj** name is given, the default value is **Auto**, which uses the **Obj** name.
- **Description** — Group or tab description that appears above any properties or panels. The default value is an empty string.
- **PropertyList** — Group or tab property list as a cell array of property names. The default value is an empty array. If the **Obj** name is given, the default value is all eligible display properties.
- **Sections** — Group sections as an array of section objects. If the **Obj** name is given, the default value is the default section for the **Obj**.

`matlab.system.display.SectionGroup(Obj,...)` creates a section group for the specified System object (**Obj**) and sets the following property values:

- **TitleSource** — Set to 'Auto'.
- **Sections** — Set to `matlab.system.display.Section` object for **Obj**.

You can use `mfilename('class')` from within this method to get the name of the System object. If you set any Name-Value pairs, those property values override the default settings.

## Methods

## Examples

### Define Block Dialog Tabs

Define in your class definition file two tabs, each containing specific properties. For this example, you use the `matlab.system.display.SectionGroup`, `matlab.system.display.Section`, and `getPropertyGroupsImpl` methods.

```
methods(Static, Access=protected)
    function groups = getPropertyGroupsImpl
        valueGroup = matlab.system.display.Section(...
            'Title','Value parameters',...
            'PropertyList',{'StartValue','EndValue'});

        thresholdGroup = matlab.system.display.Section(...
            'Title','Threshold parameters',...
            'PropertyList',{'Threshold','UseThreshold'});


        mainGroup = matlab.system.display.SectionGroup(...
            'Title','Main', ...
            'Sections',[valueGroup,thresholdGroup]);


        initGroup = matlab.system.display.SectionGroup(...
            'Title','Initial conditions', ...
            'PropertyList',{'IC1','IC2','IC3'});

        groups = [mainGroup,initGroup];
    end
end
```

# matlab.system.display.SectionGroup

The resulting dialog appears as follows when you add the object to Simulink with the MATLAB System block.

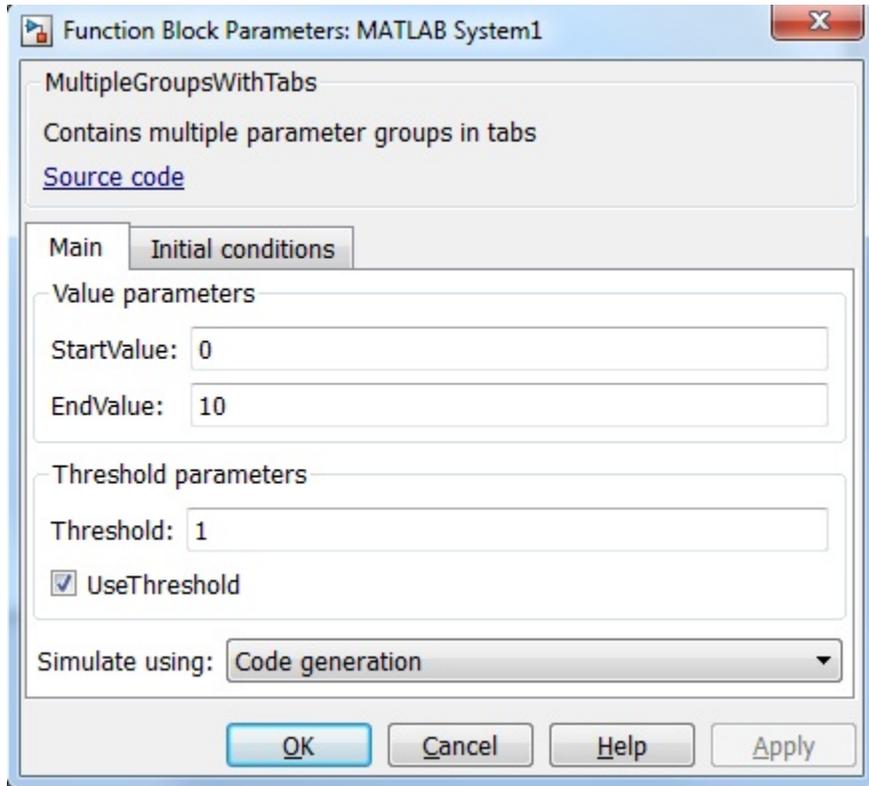

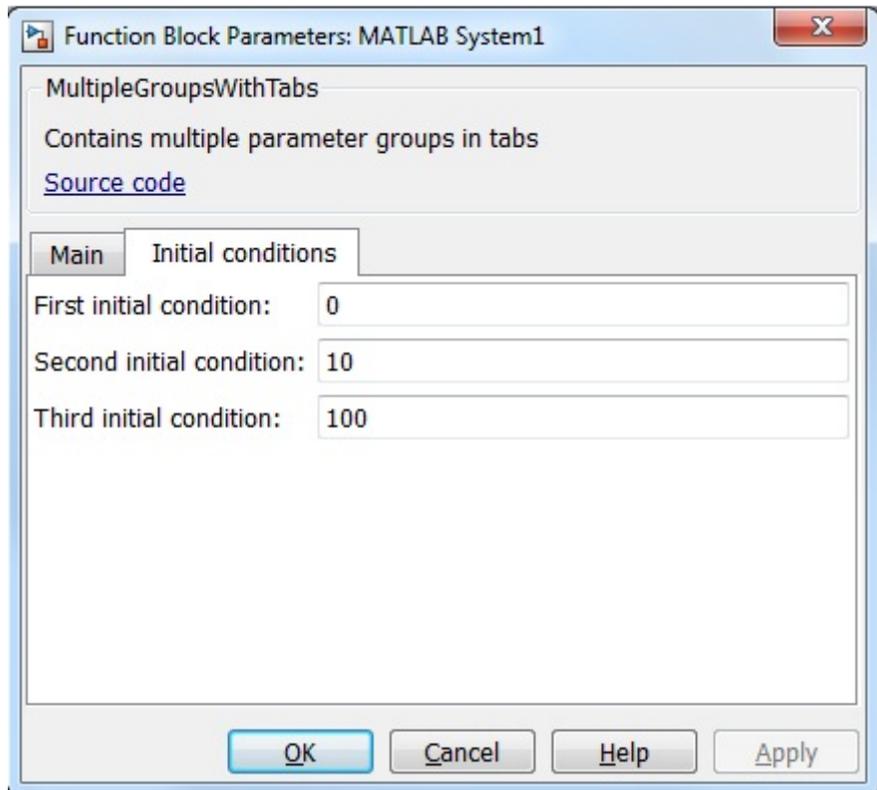

## See Also

`matlab.system.display.Header` | `matlab.system.display.Section`

## How To

- “Object-Oriented Programming”
- Class Attributes
- Property Attributes
- “Add Property Groups to System Object and Block Dialog”

# matlab.system.mixin.Propagates

---

**Purpose** Output signal characteristics propagation mixin class

**Description** `matlab.system.mixin.Propagates` is a class that defines the System object's output size, data type, and complexity. You implement the methods of this class when the output specifications cannot be inferred directly from the inputs during Simulink model compilation. If you do not include this mixin and the output specifications cannot be inferred, an error occurs. You use this mixin class and its methods when your System object will be used in the MATLAB System block.

To use this mixin, you must subclass from this class in addition to subclassing from the `matlab.System` base class. Type the following syntax as the first line of your class definition file, where `ObjectName` is the name of your System object:

```
classdef ObjectName < matlab.System &...  
    matlab.system.mixin.Propagates
```

The `matlab.system.mixin.Propagates` mixin is called by the MATLAB System block during Simulink model compilation.

<b>Methods</b>	
<code>getDiscreteStateSpecificationImpl</code>	Discrete state size, data type, and complexity
<code>getOutputDataTypeImpl</code>	Data types of output ports
<code>getOutputSizeImpl</code>	Sizes of output ports
<code>isOutputComplexImpl</code>	Complexity of output ports
<code>isOutputFixedSizeImpl</code>	Fixed- or variable-size output ports
<code>propagatedInputComplexity</code>	Get input complexity during Simulink propagation
<code>propagatedInputDataType</code>	Get input data type during Simulink propagation

propagatedInputFixedSize	Get input fixed status during Simulink propagation
propagatedInputSize	Get input size during Simulink propagation

---

**Note** If your System object has exactly one input and one output and no discrete property states, you do not have to implement any of these methods. Default values are used when you subclass from the `matlab.system.mixin.Propagates` mixin.

---

## See Also

`matlab.System`

## Tutorials

- “Set Output Data Type”
- “Set Output Size”
- “Set Output Complexity”
- “Specify Whether Output Is Fixed- or Variable-Size”
- “Specify Discrete State Output Specification”

## How To

- “Object-Oriented Programming”
- Class Attributes
- Property Attributes

# matlab.system.mixin.Propagates.getDiscreteStateSpecification

**Purpose** Discrete state size, data type, and complexity

**Syntax** [sz,dt,cp] = getDiscreteStateSpecificationImpl(obj,name)

**Description** [sz,dt,cp] = getDiscreteStateSpecificationImpl(obj,name) returns the size, data type, and complexity of the property, name. This property must be a discrete state property. You must define this method if your System object has discrete state properties and is used in the MATLAB System block. If you define this method for a property that is not discrete state, an error occurs during model compilation.

You always set the getDiscreteStateSpecificationImpl method access to `protected` because it is an internal method that users do not directly call or run.

getDiscreteStateSpecificationImpl is called by the MATLAB System block during Simulink model compilation.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any properties in this method.

---

## Input Arguments

**obj**  
System object handle

**name**  
Name of discrete state property of the System object

## Output Arguments

**sz**  
Vector containing the length of each dimension of the property.

**Default:** [1 1]

**dt**

Data type of the property. For built-in data types, `dt` is a string. For fixed-point data types, `dt` is a `numericType` object.

**Default:** `double`

## **cp**

Complexity of the property as a scalar, logical value, where `true` = complex and `false` = real.

**Default:** `false`

## **Examples**

### **Specify Discrete State Property Size, Data Type, and Complexity**

Specify in your class definition file the size, data type, and complexity of a discrete state property.

```
methods (Access=protected)
    function [sz,dt,cp] = getDiscreteStateSpecificationImpl(-,name)
        sz = [1 1];
        dt = 'double';
        cp = false;
    end
end
```

## **See Also**

`matlab.system.mixin.Propagates`

## **How To**

- “Specify Discrete State Output Specification”

# matlab.system.mixin.Propagates.getOutputDataTypeImpl

**Purpose** Data types of output ports

**Syntax** `[dt_1,dt_2,...,dt_n] = getOutputDataTypeImpl(obj)`

**Description** `[dt_1,dt_2,...,dt_n] = getOutputDataTypeImpl(obj)` returns the data types of each output port. The number of outputs must match the value returned from the `getNumOutputs` method or the number of output arguments listed in the `step` method.

For System objects with one input and one output and where you want the input and output data types to be the same, you do not need to implement this method. In this case `getOutputDataTypeImpl` assumes the input and output data types are the same and returns the data type of the input.

If your System object has more than one input or output or you need the output and input data types to be different, you must implement the `getOutputDataTypeImpl` method to define the output data type if the output data type differs from the input data type. You also must implement the `propagatedInputDataType` method.

During Simulink model compilation and propagation, the MATLAB System block calls the `getOutputDataType` method, which then calls the `getOutputDataTypeImpl` method to determine the output data type.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any properties in this method.

---

**Input Arguments**

**obj**  
System object handle

**Output Arguments**

**dt\_1,dt\_2,...**  
Data type of the property. For built-in data types, `dt` is a string. For fixed-point data types, `dt` is a `numericType` object.

## Examples

### Specify Output Data Type

Specify in your class definition file the data type of a System object with one output.

```
methods (Access=protected)
    function dt_1 = getOutputDataTypeImpl(~)
        dt_1 = 'double';
    end
end
```

## See Also

[matlab.system.mixin.Propagates](#) | [propagatedInputDataType](#)

## How To

- “Set Output Data Type”

# matlab.system.mixin.Propagates.getOutputSizeImpl

---

**Purpose** Sizes of output ports

**Syntax** `[sz_1,sz_2,...,sz_n] = getOutputSizeImpl(obj)`

**Description** `[sz_1,sz_2,...,sz_n] = getOutputSizeImpl(obj)` returns the sizes of each output port. The number of outputs must match the value returned from the `getNumOutputs` method or the number of output arguments listed in the `step` method.

For System objects with one input and one output and where you want the input and output sizes to be the same, you do not need to implement this method. In this case `getOutputSizeImpl` assumes the input and output sizes are the same and returns the size of the input. For variable-size inputs, the output size is the maximum input size.

If your System object has more than one input or output or you need the output and input sizes to be different, you must implement the `getOutputSizeImpl` method to define the output size. You also must use the `propagatedInputSize` method if the output size differs from the input size.

During Simulink model compilation and propagation, the MATLAB System block calls the `getOutputSize` method, which then calls the `getOutputSizeImpl` method to determine the output size.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any properties in this method.

---

**Input Arguments** **obj**  
System object handle

**Output Arguments** **sz\_1,sz\_2,...**  
Vector containing the size of each output port.

## Examples

### Specify Output Size

Specify in your class definition file the size of a System object output.

```
methods (Access=protected)
    function sz_1 = getOutputSizeImpl(obj)
        sz_1 = [1 1];
    end
end
```

## See Also

[matlab.system.mixin.Propagates](#) | [propagatedInputSize](#)

## How To

- “Set Output Size”

# matlab.system.mixin.Propagates.isOutputComplexImpl

---

## Purpose

Complexity of output ports

## Syntax

```
[cp_1,cp_2,...,cp_n] = isOutputComplexImpl(obj)
```

## Description

[cp\_1,cp\_2,...,cp\_n] = isOutputComplexImpl(obj) returns whether each output port has complex data. The number of outputs must match the value returned from the getNumOutputs method or the number of output arguments listed in the step method.

For System objects with one input and one output and where you want the input and output complexities to be the same, you do not need to implement this method. In this case isOutputComplexImpl assumes the input and output complexities are the same and returns the complexity of the input.

If your System object has more than one input or output or you need the output and input complexities to be different, you must implement the isOutputComplexImpl method to define the output complexity. You also must use the propagatedInputComplexity method if the output complexity differs from the input complexity.

During Simulink model compilation and propagation, the MATLAB System block calls the isOutputComplex method, which then calls the isOutputComplexImpl method to determine the output complexity.

---

**Note** You must set Access=protected for this method.

You cannot modify any properties in this method.

---

## Input Arguments

**obj**

System object handle

## Output Arguments

**cp\_1,cp\_2,...**

Logical, scalar value indicating whether the specific output port is complex (true) or real (false).

## Examples

### Specify Output as Real-Valued

Specify in your class definition file that the output from a System object is a real value.

```
methods (Access=protected)
    function c1 = isOutputComplexImpl(obj)
        c1 = false;
    end
end
```

## See Also

[matlab.system.mixin.Propagates](#) | [propagatedInputComplexity](#)

## How To

- “Set Output Complexity”

# matlab.system.mixin.Propagates.isOutputFixedSizeImpl

---

**Purpose** Fixed- or variable-size output ports

**Syntax** [flag\_1,flag\_2,...flag\_n] = isOutputFixedSizeImpl(obj)

**Description** [flag\_1,flag\_2,...flag\_n] = isOutputFixedSizeImpl(obj) indicates whether each output port is fixed size. The number of outputs must match the value returned from the getNumOutputs method or the number of output arguments listed in the step method.

For System objects with one input and one output and where you want the input and output fixed sizes to be the same, you do not need to implement this method. In this case isOutputFixedSizeImpl assumes the input and output fixed sizes are the same and returns the fixed size of the input.

If your System object has more than one input or output or you need the output and input fixed sizes to be different, you must implement the isOutputFixedSizeImpl method to define the output data type. You also must use the propagatedInputFixedSize method if the output fixed size status differs from the input fixed size status.

During Simulink model compilation and propagation, the MATLAB System block calls the isOutputFixedSize method, which then calls the isOutputFixedSizeImpl method to determine the output fixed size.

---

**Note** You must set Access=protected for this method.

You cannot modify any properties in this method.

---

**Input Arguments** **obj**  
System object handle

**Output Arguments** **flag\_1,flag2,...**  
Logical, scalar value indicating whether the specific output port is fixed size (true) or variable size (false).

## Examples

### Specify Output as Fixed-Point

Specify in your class definition file that the output from a System object is a fixed-point value.

```
methods (Access=protected)
    function c1 = isOutputFixedSizeImpl(obj)
        c1 = true;
    end
end
```

## See Also

[matlab.system.mixin.Propagates](#) | [propagatedInputFixedSize](#)

## How To

- “Specify Whether Output Is Fixed- or Variable-Size”

# matlab.system.mixin.Propagates.propagatedInputComplexity

<b>Purpose</b>	Get input complexity during Simulink propagation
<b>Syntax</b>	<code>flag = propagatedInputComplexity(obj,index)</code>
<b>Description</b>	<p><code>flag = propagatedInputComplexity(obj,index)</code> returns <code>true</code> or <code>false</code> to indicate whether the indicated object's input argument is complex. The index specifies the input to the <code>step</code> method (excluding the <code>obj</code> input) for which to return the complexity. You can only call this method from within the <code>isOutputComplexImpl</code> method in your class definition file.</p> <p>You must use the <code>isOutputComplexImpl</code> method if your System object has more than one input or output. Use the <code>propagatedInputComplexity</code> method inside <code>isOutputComplexImpl</code> when the output complexity is determined using the input complexity. You must also use these two methods for a single input, single output System object if you need the output complexity to be different than the input complexity.</p>
<b>Input Arguments</b>	<p><b>obj</b> System object handle</p> <p><b>index</b> Index of the desired <code>step</code> method input</p>
<b>Output Arguments</b>	<p><b>flag</b> Whether the specified input argument is complex-valued</p>
<b>Examples</b>	<p><b>Match Input and Output Complexity</b></p> <p>This example shows how to use the <code>propagatedInputComplexity</code> method in your class definition file. The following code gets the input complexity of the <code>step</code> method's second input and returns it as the output complexity. In this case, the <code>step</code> method's first input is assumed to have no impact on the output complexity.</p>

# matlab.system.mixin.Propagates.propagatedInputComplexity

---

```
methods (Access=protected)
    function outcomplx = isOutputComplexImpl(obj)
        outcomplx = propagatedInputComplexity(obj,2);
    end
end
```

## See Also

matlab.system.mixin.Propagates | isOutputComplexImpl

## How To

- “Set Output Complexity”

# matlab.system.mixin.Propagates.propagatedInputDataType

**Purpose** Get input data type during Simulink propagation

**Syntax** `dt = propagatedInputDataType(obj, index)`

**Description** `dt = propagatedInputDataType(obj, index)` returns a string (or `numericType` for fixed-point inputs) to indicate the data type of the object's input argument. The index specifies the input to the `step` method (excluding the `obj` input) for which to return the data type. You can only call this method from within the `getOutputDataTypeImpl` method in your class definition file.

You must use the `getOutputDataTypeImpl` method if your `System` object has more than one input or output. Use the `propagatedInputDataType` method inside `getOutputDataTypeImpl` when the output data type is determined using the input data type. You must also use these two methods for a single input, single output `System` object if you need the output data type to be different than the input data type.

## Input Arguments

**obj**  
System object handle

**index**  
Index of the desired `step` method input

## Output Arguments

**dt**  
String, or `numericType` object for fixed-point inputs, indicating the data type of the object's input argument

## Examples

### Match Input and Output Data Type

This example shows how to use the `propagatedInputDataType` method in your class definition file. The following code checks the input data type. If the `step` method's second input data type is `double`, then the output data type is `int32`. For all other cases, the output data type matches the second input data type. In this case, the `step` method's first input is assumed to have no impact on the output data type.

```
methods (Access=protected)
    function dt = getOutputDataTypeImpl(obj)
        if strcmpi(propagatedInputDataType(obj,2), 'double')
            dt = 'int32';
        else
            dt = propagatedInputDataType(obj,2);
        end
    end
end
```

## See Also

matlab.system.mixin.Propagates | getOutputDataTypeImpl | “Data Type Propagation”

## How To

- “Set Output Data Type”

# matlab.system.mixin.Propagates.propagatedInputFixedSize

**Purpose** Get input fixed status during Simulink propagation

**Syntax** `flag = propagatedInputFixedSize(obj,index)`

**Description** `flag = propagatedInputFixedSize(obj,index)` returns true or false to indicate whether the indicated object's input argument is a fixed-sized input. The index specifies the input to the `step` method (excluding the `obj` input) for which to return the fixed-size flag. You can only call this method from within the `isOutputFixedSizeImpl` method in your class definition file.

You must use the `isOutputFixedSizeImpl` method if your System object has more than one input or output. Use the `propagatedInputFixedSize` method inside `isOutputFixedSizeImpl` when the output fixed size status is determined using the input fixed size status. You must also use these two methods for a single input, single output System object if you need the output fixed size status to be different than the input fixed size status.

**Input Arguments**

**obj**  
System object handle

**index**  
Index of the desired step method input

**Output Arguments**

**flag**  
Whether the specified input argument is fixed-size or not

## **Examples** Determine Fixed-Size Input

This example shows how to use the `propagatedInputFixedSize` method in your class definition file. The following code checks the input fixed size status. Check whether the third input to the `step` method is fixed size and set the output to have the same fixed size status as that third input. In this case, the first and second inputs to the `step` method are assumed to have no impact on the output.

# matlab.system.mixin.Propagates.propagatedInputFixedS

---

```
methods (Access=protected)
    function outtype = isOutputFixedSizeImpl(obj)
        outtype = propagatedInputFixedSize(obj,3)
    end
end
```

## See Also

matlab.system.mixin.Propagates | isOutputFixedSizeImpl

## How To

- “Specify Whether Output Is Fixed- or Variable-Size”

# matlab.system.mixin.Propagates.propagatedInputSize

---

**Purpose** Get input size during Simulink propagation

**Syntax** `sz = propagatedInputSize(obj,index)`

**Description** `sz = propagatedInputSize(obj,index)` returns, as a vector, the size of the indicated object's input argument. The index specifies the input to the `step` method (excluding the `obj` input) for which to return size information. You can only call this method from within the `getOutputSizeImpl` method in your class definition file.

You must use the `getOutputSizeImpl` method if your System object has more than one input or output. Use the `propagatedInputSize` method inside `getOutputSizeImpl` when the output size is determined using the input size. You must also use these two methods for a single input, single output System object if you need the output size to be different than the input size.

## Input Arguments

**obj**  
System object handle

**index**  
Index of the desired step method input

## Output Arguments

**sz**  
Size of the specified input

## Examples

### Obtain Input Size

This example shows how to use the `propagatedInputSize` method in your class definition file. The following code checks the input size. If the first dimension of the second input to the `step` method has a size greater than 1, then set the output size to a 1 x 2 vector. For all other cases, the output is a 2 x 1 matrix. In this case, the `step` method's first input is assumed to have no impact on the output size.

```
methods (Access=protected)
```

# matlab.system.mixin.Propagates.propagatedInputSize

---

```
function outsz = getOutputSizeImpl(obj)
    sz = propagatedInputSize(obj,2);
    if sz(1) == 1
        outsz = [1,2];
    else
        outsz = [2,1];
    end
end
end
```

## See Also

matlab.system.mixin.Propagates | getOutputSizeImpl

## How To

- “Set Output Size”

# matlab.system.mixin.Nondirect

---

**Purpose** Nondirect feedthrough mixin class

**Description** `matlab.system.mixin.Nondirect` is a class that uses the output and update methods to process nondirect feedthrough data through a System object.

For System objects that use direct feedthrough, the object's input is needed to generate the output at that time. For these direct feedthrough objects, the `step` method calculates the output and updates the state values. For nondirect feedthrough, however, the object's output depends only on the internal states at that time. The inputs are used to update the object states. For these objects, calculating the output with `outputImpl` is separated from updating the state values with `updateImpl`. If you use the `matlab.system.mixin.Nondirect` mixin and include the `stepImpl` method in your class definition file, an error occurs. In this case, you must include the `updateImpl` and `outputImpl` methods instead.

The following cases describe when System objects in Simulink use direct or nondirect feedthrough.

- System object supports code generation and does not inherit from the Propagates mixin — Simulink automatically infers the direct feedthrough settings from the System object code.
- System object supports code generation and inherits from the Propagates mixin — Simulink does not automatically infer the direct feedthrough settings. Instead, it uses the value returned by the `isInputDirectFeedthroughImpl` method.
- System object does not support code generation — Default `isInputDirectFeedthrough` method returns false, indicating that direct feedthrough is not enabled. To override the default behavior, implement the `isInputDirectFeedthroughImpl` method in your class definition file.

Use the Nondirect mixin to allow a System object to be used in a Simulink feedback loop. A delay object is an example of a nondirect feedthrough object.

To use this mixin, you must subclass from this class in addition to subclassing from the `matlab.System` base class. Type the following syntax as the first line of your class definition file, where `ObjectName` is the name of your object:

```
classdef ObjectName < matlab.system &...  
    matlab.system.mixin.Nondirect
```

## Methods

<code>isInputDirectFeedthroughImpl</code>	Direct feedthrough status of input
<code>outputImpl</code>	Output calculation from input or internal state of System object
<code>updateImpl</code>	Update object states based on inputs

## See Also

`matlab.system`

## Tutorials

- “Use Update and Output for Nondirect Feedthrough”

## How To

- “Object-Oriented Programming”
- Class Attributes
- Property Attributes

# matlab.system.mixin.Nondirect.isInputDirectFeedthroughImpl

<b>Purpose</b>	Direct feedthrough status of input
<b>Syntax</b>	<code>[flag1,...,flagN] = isInputDirectFeedthroughImpl(obj,u1,u2,...,uN)</code>
<b>Description</b>	<code>[flag1,...,flagN] = isInputDirectFeedthroughImpl(obj,u1,u2,...,uN)</code> indicates whether each input is a direct feedthrough input. If direct feedthrough is true, the output depends on the input at each time instant.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any properties or implement or access tunable properties in this method.

---

If you do not include the `isInputDirectFeedthroughImpl` method in your System object class definition file, all inputs are assumed to be direct feedthrough.

The following cases describe when System objects in Simulink code generation use direct or nondirect feedthrough.

- System object supports code generation and does not inherit from the `Propagates` mixin — Simulink automatically infers the direct feedthrough settings from the System object code.
- System object supports code generation and inherits from the `Propagates` mixin — Simulink does not automatically infer the direct feedthrough settings. Instead, it uses the value returned by the `isInputDirectFeedthroughImpl` method.
- System object does not support code generation — Default `isInputDirectFeedthrough` method returns false, indicating that direct feedthrough is not enabled. To override the default behavior, implement the `isInputDirectFeedthroughImpl` method in your class definition file.

# matlab.system.mixin.Nondirect.isInputDirectFeedthrough

`isInputDirectFeedthroughImpl` is called by the `isInputDirectFeedthrough` method.

## Input Arguments

**obj**

System object handle

**u1,u2,...,uN**

Specifications of the inputs to the algorithm or step method.

## Output Arguments

**flag1,...,flagN**

Logical value or either true or false. This value indicates whether the corresponding input is direct feedthrough or not, respectively. The number of outputs must match the number of outputs returned by the `getNumOutputs` method.

## Examples

### Specify Input as Nondirect Feedthrough

Use `isInputDirectFeedthroughImpl` in your class definition file to mark the inputs as nondirect feedthrough.

```
methods (Access=protected)
    function flag = isInputDirectFeedthroughImpl(~,~)
        flag = false;
    end
end
```

## See Also

`matlab.system.mixin.Nondirect`

## How To

- “Use Update and Output for Nondirect Feedthrough”

# matlab.system.mixin.Nondirect.outputImpl

---

**Purpose** Output calculation from input or internal state of System object

**Syntax** `[y1,y2,...,yN] = outputImpl(obj,u1,u2,...,uN)`

**Description** `[y1,y2,...,yN] = outputImpl(obj,u1,u2,...,uN)` implements the output equations for the System object. The output values are calculated from the states and property values. Any inputs that you set to nondirect feedthrough are ignored during output calculation.

`outputImpl` is called by the `output` method. It is also called before the `updateImpl` method in the `step` method. For sink objects, calling `updateImpl` before `outputImpl` locks the object. For all other types of objects, calling `updateImpl` before `outputImpl` causes an error.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any tunable properties in this method if its System object will be used in the Simulink MATLAB System block.

---

## Input Arguments

**obj**  
System object handle

### **u1,u2,...uN**

Inputs from the algorithm or `step` method. The number of inputs must match the number of inputs returned by the `getNumInputs` method. Nondirect feedthrough inputs are ignored during normal execution of the System object. However, for code generation, you must provide these inputs even if they are empty.

## Output Arguments

### **y1,y2,...yN**

Outputs calculated from the specified algorithm. The number of outputs must match the number of outputs returned by the `getNumOutputs` method.

## Examples

### Set Up Output that Does Not Depend on Input

Specify in your class definition file that the output does not directly depend on the current input with the `outputImpl` method. `PreviousInput` is a property of the `obj`.

```
methods (Access=protected)
    function [y] = outputImpl(obj, ~)
        y = obj.PreviousInput(end);
    end
end
```

## See Also

`matlab.system.mixin.Nondirect`

## How To

- “Use Update and Output for Nondirect Feedthrough”

# matlab.system.mixin.Nondirect.updateImpl

---

**Purpose** Update object states based on inputs

**Syntax** `updateImpl(obj,u1,u2,...,uN)`

**Description** `updateImpl(obj,u1,u2,...,uN)` implements the state update equations for the system. You use this method when your algorithm outputs depend only on the object's internal state and internal properties. Do not use this method to update the outputs from the inputs.

`updateImpl` is called by the `update` method and after the `outputImpl` method in the `step` method. For sink objects, calling `updateImpl` before `outputImpl` locks the object. For all other types of objects, calling `updateImpl` before `outputImpl` causes an error.

---

**Note** You must set `Access=protected` for this method.

You cannot modify any tunable properties in this method if its `System` object will be used in the Simulink MATLAB System block.

---

## Input Arguments

**obj**  
System object handle

**u1,u2,...,uN**  
Inputs to the algorithm or `step` method. The number of inputs must match the number of inputs returned by the `getNumInputs` method.

## Examples

### Set Up Output that Does Not Depend on Current Input

Update the object with previous inputs. Use `updateImpl` in your class definition file. This example saves the `u` input and shifts the previous inputs.

`methods (Access=protected)`

```
function updateImpl(obj,u)
    obj.PreviousInput = [u obj.PreviousInput(1:end-1)];
end
```

## See Also

`matlab.system.mixin.Nondirect`

## How To

- “Use Update and Output for Nondirect Feedthrough”

# Simulink.AliasType

---

## Purpose

Create alias for signal and/or parameter data type

## Description

This class allows you to designate MATLAB variables as aliases for signal and parameter data types. You do this by creating instances of this class and assigning them to variables in the MATLAB or model workspaces (see “Creating a Data Type Alias” on page 6-96). The MATLAB variable to which a `Simulink.AliasType` object is assigned is called a data type alias. The data type to which an alias refers is called its base type. Simulink software allows you to set the `BaseType` property of the object that the variable references, thereby designating the data type for which it is an alias.

Simulink software lets you use aliases instead of actual type names in dialog boxes and `set_param` commands to specify the data types of Simulink block outputs and parameters. Using aliases to specify signal and parameter data types can greatly simplify global changes to the signal and parameter data types that a model specifies. In particular, changing the data type of all signals and parameters whose data type is specified by an alias requires only changing the base type of the alias. By contrast, changing the data types of signals and parameters whose data types are specified by an actual type name requires respecifying the data type of each signal and parameter individually.

---

**Note** Suppose you specify an instance of the `Simulink.AliasType` class as the value of a `Simulink.Parameter` object’s **Data type** property. If you enter the parameter object in a subsystem’s mask, the subsystem displays the data type’s base type instead of its alias name.

---

## Creating a Data Type Alias

You can use either the Model explorer or MATLAB commands (see “MATLAB Commands for Creating Data Type Aliases” on page 6-97) to create a data type alias.

To use the Model explorer to create an alias:

- 1 Select **Base Workspace** (i.e., the MATLAB workspace) in the Model explorer's **Model Hierarchy** pane.

You must create data type aliases in the MATLAB workspace. If you attempt to create an alias in a model workspace, Simulink software displays an error.

- 2 Select **Simulink.AliasType** from the Model explorer's **Add** menu.

Simulink software creates an instance of a `Simulink.AliasType` object and assigns it to a variable named `Alias` in the MATLAB workspace.

- 3 Rename the variable to a more appropriate name, for example, a name that reflects its intended usage.

To change the name, edit the name displayed in the **Name** field in the Model explorer's **Contents** pane.

- 4 Enter the name of the data type that this alias represents in the **Base type** field in the Model explorer's **Dialog** pane.

You can specify the name of any existing standard or user-defined data type in this field. Skip this step if the desired base type is `double` (the default).

- 5 Use the MATLAB `save` command to save the newly created alias in a MAT-file that can be loaded by the models in which it is used.

## **MATLAB Commands for Creating Data Type Aliases**

Use the following syntax to create a data type alias at the MATLAB command line or in a MATLAB program

```
ALIAS = Simulink.AliasType;
```

where `ALIAS` is the name of the variable that you want to serve as the alias. For example, the following line creates an alias names `MyFloat`.

```
MyFloat = Simulink.AliasType;
```

The following notations get and set the properties of a data type alias, respectively,

```
PROPVALUE = ALIAS.PROPNAME;  
ALIAS.PROPNAME = PROPVALUE;
```

where ALIAS is the name of the alias object, PROPNAME is the name of the alias object's properties, and PROPVALUE is the property's value. For example, the following code saves the current value of MyFloat's BaseType property and assigns it a new value.

```
old = MyFloat.BaseType;  
MyFloat.BaseType = 'single';
```

See “Properties” on page 6-102 for information on the names, permitted values, and usage of the properties of data type alias objects.

## Data Type Aliases in the Generated Code

If you have a Simulink Coder license, you can cause data type aliases to appear in the code generated for a model using any of the following methods.

- Specifying the signal data type of a block in the model as a Simulink.AliasType via the **Block Parameters** dialog box.
- Creating a Simulink.Signal object that uses the Simulink.AliasType as its data type. Use this signal object as the name of a signal in the model and specify that the signal name must resolve to an object in the MATLAB workspace. See “Signal Objects” in the Simulink Coder User's Guide for more information.
- Creating a Simulink.Parameter object that uses the Simulink.AliasType as its data type. Use this parameter object as a block parameter in the model. See “Generated Code for Parameter Data Types” in the Simulink Coder User's Guide for more information.

---

## Notes

- If you assign a data type in a block's **Block Parameters** dialog box and by using a `Simulink.Signal` object on the signal feeding into the block, the code is always generated using the data type in the dialog box.
- The Simulink Coder code generator tries to preserve the names of alias types in the generated code. However, in some cases, an alias type name might revert to its underlying equivalent built-in data type. If you have an Embedded Coder license, you can guarantee that the code generator uses the alias type name in the generated code, by using replacement types (see "Data Type Replacement" in the Embedded Coder documentation).
- The `Simulink.AliasType` class does not support multiword data types for code generation.
- You can specify the data type of a complex signal using the `Simulink.AliasType` class. In this case, if the **DataScope** property of the `Simulink.AliasType` class is set to `Imported` (or `Auto` with a header file specified), provide a definition for the complex type. As shown in the example below, the alias type definition, `IAT_int32`, should contain the name of the complex type prefixed by `c`.

```
#ifndef myAliasTypes_H_
#define myAliasTypes_H_

#include "rtwtypes.h"

typedef int32_T IAT_int32;
typedef cint32_T cIAT_int32;

#endif
```

In the above example, while `IAT_int32` must be defined in the base workspace, `cIAT_int32` need not be defined in the base workspace.

---


# Simulink.AliasType

---

**Parent**            None

**Children**        None

**Property  
Dialog  
Box**

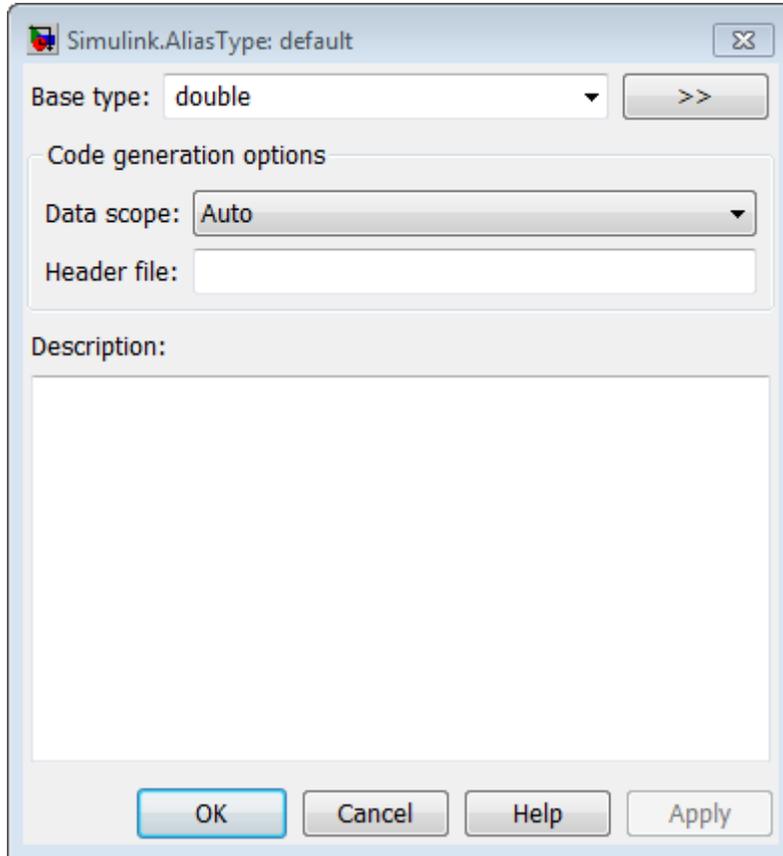

**Base type**

The data type to which this alias refers. The default is `double`. To specify another data type, select the data type from the adjacent pull-down list of standard data types or enter the data type's name in the edit field. Note that you can, with one exception,

specify a nonstandard data type, e.g., a data type defined by a `Simulink.NumericType` object, by entering the data type's name in the edit field. The exception is a `Simulink.NumericType` whose `Category` is `Fixed-point: unspecified scaling`.

---

**Note** `Fixed-point: unspecified scaling` is a partially specified type whose definition is completed by the block that uses the `Simulink.NumericType`. Forbidding its use in alias types avoids creating aliases that have different base types depending on where they are used.

---

## Data scope

Specifies whether the data type definition should be imported from, or exported to, a header file during code generation. The possible values are:

Value	Action
Auto (default)	If no value is specified for <b>Header file</b> , export the type definition to <code>model_types.h</code> , where <code>model</code> is the model name.  If a value is specified for <b>Header file</b> , import the data type definition from the specified header file.
Exported	Export the data type definition to a header file, which can be specified in the <b>Header file</b> field. If no value is specified for <b>Header file</b> , the header file name defaults to <code>type.h</code> , where <code>type</code> is the data type name.
Imported	Import the data type definition from a header file, which can be specified in the <b>Header file</b> field. If no value is specified for <b>Header file</b> , the header file name defaults to <code>type.h</code> , where <code>type</code> is the data type name.

# Simulink.AliasType

---

## Header file

Name of a C header file from which a data type definition is imported, or to which a data type definition is exported, based on the value of **Data scope**. If this field is specified, the specified name is used during code generation for importing or exporting. If this field is empty, the value defaults to `type.h` if **Data scope** equals Imported or Exported, or defaults to `model_types.h` if **Data scope** equals Auto.

## Description

Describes the usage of the data type referenced by this alias.

## Properties

Name	Description
BaseType	A string specifying the name of a standard or custom data type. ( <b>Base type</b> )
DataScope	A string specifying whether the data type definition should be imported from, or exported to, a header file during code generation. ( <b>Data scope</b> )
Description	A string that describes the usage of the data type. May be a null string. ( <b>Description</b> )
HeaderFile	A string that specifies the name of a C header file from which a data type definition is imported, or to which a data type definition is exported, during code generation. ( <b>Header file</b> )

## See Also

“Generate Code Including User-Defined Data Types” in the Embedded Coder documentation

**Purpose** Specify properties of model annotation

**Description** Instances of this class specify the properties of annotations. You can use `getCallbackAnnotation` in an annotation callback function to get the `Simulink.Annotation` instance for the annotation associated with the callback function. You can use `find_system` and `get_param` to get the `Simulink.Annotation` instance associated with any annotation in a model. For example, the following code gets the annotation object for the first annotation in the currently selected model and turns on its drop shadow

```
ah = find_system(gcs, 'FindAll', 'on', 'type', 'annotation');  
ao = get_param(ah(1), 'Object');  
ao.DropShadow = 'on';
```

**Children** None.

## Property Summary

Property	Description	Values
Text	String specifying text of annotation. Same as Name.	string
ClickFcn	Specifies MATLAB code to be executed when a user single-clicks this annotation. Simulink software stores the code entered in this field with the model. See “Associate Click Functions with Annotations” for more information.	string
Description	String that describes this annotation.	string

# Simulink.Annotation

Property	Description	Values
FontAngle	String specifying the angle of the annotation font. The default value, 'auto', specifies use of the model preference for the font angle.	'normal'   'italic'   'oblique'   {'auto'}
FontName	String specifying name of annotation's font. The default value, 'auto', specifies use of the model preference for the font.	string
FontSize	Integer specifying size of annotation's font in points. The default value, -1, specifies use of the model preference for the font size.	real {'-1'}
FontWeight	String specifying the weight of the annotation font. The default value, 'auto', specifies use of the model preference for font weight.	'light'   'normal'   'demi'   'bold'   {'auto'}
Handle	Annotation handle.	real
HiliteAncestors	For internal use.	
Name	String specifying text of annotation. Same as Text.	string
Selected	String specifying whether this annotation is currently selected ('on') or not selected ('off').	'on'   'off'
Parent	String specifying parent name of annotation object.	string
Path	Path to the annotation.	string

Property	Description	Values
Position	Array specifying the location of the annotation	1x4 array [left top right bottom].  The maximum value for a coordinate is 32767.
Horizontal-Alignment	String specifying the horizontal alignment of this annotation, e.g., 'center'.	'center'   {'left'} 'right'
VerticalAlignment	String specifying the vertical alignment of this annotation (for example, 'middle'.	'middle'   {'top'} 'cap' 'baseline' 'bottom'
ForegroundColor	String specifying foreground color of this annotation.	RGB value array string   [r,g,b,a] where r, g, b, and a are the red, green, blue, and alpha values of the color normalized to the range 0.0 to 1.0, delineated with commas. The alpha value is optional and ignored.  Annotation background color can also be 'black', 'white', 'red', 'green', 'blue', 'cyan', 'magenta', 'yellow', 'gray', 'lightBlue', 'orange', 'darkGreen'.

# Simulink.Annotation

Property	Description	Values
BackgroundColor	String specifying background color of this annotation.	RGB value array string   [r,g,b,a] where r, g, b, and a are the red, green, blue, and alpha values of the color normalized to the range 0.0 to 1.0, delineated with commas. The alpha value is optional and ignored.  Annotation background color can also be 'black', 'white', 'red', 'green', 'blue', 'cyan', 'magenta', 'yellow', 'gray', 'lightBlue', 'orange', 'darkGreen'.
DropShadow	String specifying whether to display a drop shadow. Options are 'on' or 'off'.	'on'   {'off'}
TeXMode	String specifying whether to render TeX markup. Options are 'on' or 'off'.	'on'   {'off'}
Type	Annotation type. This is always 'annotation'	string
LoadFcn	String specifying MATLAB code to be executed when the model containing this annotation is loaded. See “Annotation Callback Functions”.	string
DeleteFcn	String specifying MATLAB code to be executed before deleting this annotation. See “Annotation Callback Functions”.	string

Property	Description	Values
RequirementInfo	For internal use.	string
Tag	User-specified text that is assigned to the annotation Tag parameter and saved with the annotation.	string
UseDisplayText-AsClickCallback	<p>String specifying whether to use the contents of the Text property as the click function for this annotation. Options are 'on' or 'off'.</p> <p>If set to 'on', the text of the annotation is interpreted as a valid MATLAB expression and run. If set to 'off', clicking the annotation runs the click function, if there is one. If there is no click function, clicking the annotation has no effect.</p> <p>See “Associate Click Functions with Annotations” for more information.</p>	'on'   {'off'}
UserData	Any data that you want to associate with this annotation.	vector
Interpreter	Type of annotation	'rich'   'tex'   {'off'}
IsImage	Only 'on' if the annotation is an image annotation	'on'   {'off'}

# Simulink.Annotation

Property	Description	Values
InternalMargins	Array specifying the space from the bounding box of text to the borders of the annotation.	1x4 array [left top right bottom] . The default is [1 1 1 1].  The maximum value for a coordinate is 32767.
PlainText	Read-only display of the text in the annotation, without formatting	vector
FixedHeight	String specifying whether the bottom border of the annotation resizes as you add content	'on'   {'off'}, where 'off' means that the bottom border resizes as you add content
FixedWidth	String specifying whether or not to use wordwrap or to have the width of the annotation expand to accommodate text	'on'   {'off'}, where 'off' means to use wordwrap

## Method Summary

Method	Description
delete	Delete this annotation from the Simulink model.
dialog	Display the Annotation properties dialog box.
disp	Display the property names and their settings for this Annotation object.
fitToView	Zoom in on this annotation and highlight it in the model.
get	Return the specified property settings for this annotation.
help	Display a list of properties for this Annotation object with short descriptions.
insertImage	Insert image from clipboard or image file into an annotation.

<b>Method</b>	<b>Description</b>
methods	Display all nonglobal methods of this Annotation object.
set	Set the specified property of this Annotation object with the specified value.
struct	Return and display a MATLAB structure containing the property settings of this Annotation object.
view	Display this annotation in the Simulink Editor with this annotation highlighted.

# Simulink.BlockCompDworkData

---

**Purpose** Provide postcompilation information about block's DWork vector

**Description** Simulink software returns an instance of this class when a MATLAB program, e.g., a Level-2 MATLAB S-function, invokes the "Dwork" on page 6-272 method of a block's run-time object after the model containing the block has been compiled.

**Parent** Simulink.BlockData

**Children** None

## Property Summary

Name	Description
"Usage" on page 6-110	Usage type of this DWork vector.
"UsedAsDiscState"	True if this DWork vector is being used to store the values of a block's discrete states.

## Properties

---

Usage

### Description

Returns a string indicating how this DWork vector is used. Permissible values are:

- DWork
- DState
- Scratch
- Mode

### Data Type

string

### Access

RW for MATLAB S-function blocks, RO for other blocks.

---

UsedAsDiscState

**Description**

True if this DWork vector is being used to store the values of a block's discrete states.

**Data Type**

Boolean

**Access**

RW for MATLAB S-Function blocks, RO for other blocks.

# Simulink.BlockComplInputPortData

---

**Purpose** Provide postcompilation information about block input port

**Description** Simulink software returns an instance of this class when a MATLAB program, e.g., a Level-2 MATLAB S-function, invokes the “InputPort” on page 6-273 method of a block’s run-time object after the model containing the block has been compiled.

**Parent** Simulink.BlockPortData

**Children** None

## Property Summary

Name	Description
“DirectFeedthrough”	True if this port has direct feedthrough.
“Overwritable”	True if this port is overwritable.

## Properties

---

DirectFeedthrough

### Description

True if this input port has direct feedthrough.

### Data Type

Boolean

### Access

RW for MATLAB S functions, RO for other blocks.

---

Overwritable

### Description

True if this input port is overwritable.

### Data Type

Boolean

### Access

RW for MATLAB S functions, RO for other blocks.

**Purpose** Provide postcompilation information about block output port

**Description** Simulink software returns an instance of this class when a MATLAB program, e.g., a Level-2 MATLAB S-function, invokes the “OutputPort” on page 6-274 method of a block’s run-time object after the model containing the block has been compiled.

**Parent** Simulink.BlockPortData

**Children** None

## Property Summary

Name	Description
“Reusable”	Specifies whether an output port’s memory is reusable.

## Properties

---

Reusable

### Description

Specifies whether an output port’s memory is reusable. Options are: NotReusableAndGlobal and ReusableAndLocal.

### Data Type

string

### Access

RW for MATLAB S functions, RO for other blocks.

# Simulink.BlockData

---

**Purpose** Provide run-time information about block-related data, such as block parameters

**Description** This class defines properties that are common to objects that provide run-time information about a block's ports and work vectors.

**Parent** None

**Children** Simulink.BlockPortData, Simulink.BlockCompDworkData

## Property Summary

Name	Description
"AliasedThroughDataType" on page 6-115	Fundamental base data type.
"AliasedThroughDataType-ID" on page 6-116	Fundamental base data type ID.
"Complexity"	Numeric type (real or complex) of the block data.
"Data"	The block data.
"DataAsDouble"	The block data in double form.
"Datatype"	Data type of the block data.
"DatatypeID"	Index of the data type of the block data.
"Dimensions"	Dimensions of the block data.
"Name"	Name of the block data.
"Type"	Type of block data (e.g., a parameter).

## Properties

AliasedThroughDataType

### Description

Data type aliases allow a data type (B) to be recursively aliased to another alias type or **BaseType** (A). If alias type A is aliased to another alias type that is aliased to another alias type and so forth, this property allows the alias type to be iteratively searched (aliased through) until the type is no longer an alias type and that final result is the value of the property returned. For example, assume that you have created the Simulink Alias types A and B as follows:

```
A=Simulink.AliasType('double')
```

```
A =  
Simulink.AliasType  
    Description: ''  
    HeaderFile: ''  
    BaseType: 'double'  
B=Simulink.AliasType('A')
```

```
B =  
Simulink.AliasType  
    Description: ''  
    HeaderFile: ''  
    BaseType: 'A'
```

If the data type of an item of block data is B, this property returns the base type A instead of B.

### Data Type

string

### Access

RO

---

AliasedThroughDataTypeID

**Description**

Index of the data type alias returned by the `AliasedThroughDataType` property.

**Data Type**

integer

**Access**

RO

---

Complexity

**Description**

Numeric type (real or complex) of the block data.

**Data Type**

string

**Access**

RW for MATLAB S functions, RO for other blocks.

---

Data

**Description**

The block data.

**Data Type**

The data type specified by the “Datatype” or “DatatypeID” properties of this object.

**Access**

RW

---

DataAsDouble

**Description**

The block data's in double form.

**Data Type**

double

**Access**

RO

---

Datatype

**Description**

Data type of the values of the block-related object.

**Data Type**

string

**Access**

RO

---

DatatypeID

**Description**

Index of the data type of the values of the block-related object. enter the numeric value for the desired data type, as follows:

Data Type	Value
'inherited'	-1
'double'	0
'single'	1
'int8'	2
'uint8'	3
'int16'	4
'uint16'	5

# Simulink.BlockData

---

Data Type	Value
'int32'	6
'uint32'	7
'boolean' or fixed-point data types	8

---

**Data Type**

integer

**Access**

RW for MATLAB S functions, RO for other blocks

---

Dimensions

**Description**

Dimensions of the block-related object, e.g., parameter or DWork vector.

**Data Type**

array

**Access**

RW for MATLAB S functions, RO for other blocks

---

Name

**Description**

Name of block-related object, e.g., a block parameter or DWork vector.

**Data Type**

string

**Access**

RW for MATLAB S functions, RO for other blocks

---

Type

**Description**

Type of block data. Possible values are:

Type	Description
'BlockPreCompInputPortData '	This object contains data for an input port before the model is compiled.
'BlockPreCompOutputPortData '	This object contains data for an output port before the model is compiled.
'BlockCompInputPortData '	This object contains data for an input port after the model is compiled.
'BlockCompOutputPortData '	This object contains data for an output port after the model is compiled.
'BlockPreCompDworkData '	This object contains data for a DWork vector before the model is compiled.
'BlockCompDworkData '	This object contains data for a DWork vector after the model is compiled.
'BlockDialogPrmData '	This object describes a dialog box parameter of a Level-2 MATLAB S-function.
'BlockRuntimePrmData '	This object describes a run-time parameter of a Level-2 MATLAB S-function.
'BlockCompContStatesData '	This object describes the continuous states of the block at the current time step.
'BlockDerivativesData '	This object describes the derivatives of the block's continuous states at the current time step.

# Simulink.BlockData

---

**Data Type**

string

**Access**

RO

**Purpose** Fully specified Simulink block path

**Description** A `Simulink.BlockPath` object represents a fully specified block path that uniquely identifies a block within a model hierarchy, including model reference hierarchies that involve multiple instances of a referenced model. Simulink uses block path objects in a variety of contexts. For example, when you specify Normal mode visibility, Simulink uses block path objects to identify the models with Normal mode visibility. For details, see “Set Normal Mode Visibility”.

The `Simulink.BlockPath` class is very similar to the `Simulink.SimulationData.BlockPath` class.

You must have Simulink installed to use the `Simulink.BlockPath` class. However, you do not have to have Simulink installed to use the `Simulink.SimulationData.BlockPath` class. If you have Simulink installed, consider using `Simulink.BlockPath` instead of `Simulink.SimulationData.BlockPath`, because the `Simulink.BlockPath` class includes a method for checking the validity of block path objects without you having to update the model diagram.

## Property Summary

Name	Description
SubPath	Individual component within the block specified by the block path

## Method Summary

Name	Description
BlockPath	Create a block path.
convertToCell	Convert a block path to a cell array of strings.
getBlock	Get a single block path in the model reference hierarchy.
getLength	Get the length of the block path.
validate	Determine whether the block path represents a valid block hierarchy.

# Simulink.BlockPath

---

## Properties

---

SubPath

### Description

Represents an individual component within the block specified by the block path.

For example, if the block path refers to a Stateflow chart, you can use SubPath to indicate the chart signals. For example:

Block Path:

```
'sf_car/shift_logic'
```

SubPath:

```
'gear_state.first'
```

### Data Type

string

### Access

RW

## Methods

---

BlockPath

### Purpose

Create block path

### Syntax

```
blockpath_object = Simulink.BlockPath()
```

```
blockpath_object = Simulink.BlockPath(blockpath)
```

```
blockpath_object = Simulink.BlockPath(paths)
```

```
blockpath_object = Simulink.BlockPath(paths, subpath)
```

### Input Arguments

blockpath

Block path object that you want to copy.

paths

A string or cell array of strings that Simulink uses to build the block path.

Specify each string in order, from the top model to the specific block for which you are creating a block path.

Each string must be a path to a block within the Simulink model. The block must be:

- A block in a single model
- A Model block (except for the last string, which may be a block other than a Model block)
- A block that is in a model that is referenced by a Model block that is specified in the previous string

When you create a block path for specifying Normal mode visibility:

- The first string must represent a block that is in the top model in the model reference hierarchy.
- Strings must represent Model blocks that are in Normal mode.
- Strings that represent variant models or variant subsystems must refer to an active variant.

You can use `gcb` in the cell array to specify the currently selected block.

`subpath`

String that represents an individual component within a block.

## **Output Arguments**

`blockpath_object`

Block path that you create.

## **Description**

`blockpath_object = Simulink.BlockPath()` creates an empty block path.

# Simulink.BlockPath

---

`blockpath_object = Simulink.BlockPath(blockpath)` creates a copy of the block path of the block path object that you specify with the `source_blockpath` argument.

`blockpath = Simulink.BlockPath(paths)` creates a block path from the cell array of strings that you specify with the `paths` argument. Each string represents a path at a level of model hierarchy. Simulink builds the full block path based on the strings.

`blockpath = Simulink.BlockPath(paths, subpath)` creates a block path from the string or cell array of strings that you specify with the `paths` argument and creates a path for the individual component (for example, a signal) of the block.

## Example

Create a block path object called `bp1`, using `gcb` to get the current block.

```
sldemo_md1ref_depgraph
bp1 = Simulink.BlockPath(gcb)
```

The resulting block path is the top-level Model block called `thermostat` (the top-left Model block).

```
bp1 =

    Simulink.BlockPath
    Package: Simulink

    Block Path:
        'sldemo_md1ref_depgraph/thermostat'
```

---

Create a block path object called `bp2`, using a cell array of strings representing elements of the block path.

```
sldemo_md1ref_depgraph
bp2 = Simulink.BlockPath({'sldemo_md1ref_depgraph/thermostat', ...
    'sldemo_md1ref_heater/Fahrenheit to Celsius', ...
    'sldemo_md1ref_F2C/Gain1'})
```

The resulting block path reflects the model reference hierarchy for the block path

```
bp2 =
```

```
    Simulink.BlockPath  
    Package: Simulink
```

```
    Block Path:
```

```
        'sldemo_mdhref_depgraph/thermostat'  
        'sldemo_mdhref_heater/Fahrenheit to Celsius'  
        'sldemo_mdhref_F2C/Gain1'
```

---

```
convertToCell
```

### **Purpose**

Convert block path to cell array of strings

### **Syntax**

```
cellarray = Simulink.BlockPath.convertToCell()
```

### **Output Arguments**

cellarray

Cell array of strings representing elements of block path.

### **Description**

cellarray = Simulink.BlockPath.convertToCell() converts a block path to a cell array of strings.

### **Examples**

```
sldemo_mdhref_depgraph  
bp2 = Simulink.BlockPath({'sldemo_mdhref_depgraph/thermostat', ...  
    'sldemo_mdhref_heater/Fahrenheit to Celsius', ...  
    'sldemo_mdhref_F2C/Gain1'})  
cellarray_for_bp2 = bp2.convertToCell()
```

The result is a cell array representing the elements of the block path.

```
cellarray_for_bp2 =
```

# Simulink.BlockPath

---

```
'sldemo_mdref_depgraph/thermostat'  
'sldemo_mdref_heater/Fahrenheit to Celsius'  
'sldemo_mdref_F2C/Gain1'
```

---

getBlock

## **Purpose**

Get block path in model reference hierarchy

## **Syntax**

```
block = Simulink.BlockPath.getBlock(index)
```

## **Input Arguments**

index

The index of the block for which you want to get the block path. The index reflects the level in the model reference hierarchy. An index of 1 represents a block in the top-level model, an index of 2 represents a block in a model referenced by the block of index 1, and an index of  $n$  represents a block that the block with index  $n-1$  references.

## **Output Arguments**

block

The block representing the level in the model reference hierarchy specified by the `index` argument.

## **Description**

`blockpath = Simulink.BlockPath.getBlock(index)` returns the block path of the block specified by the `index` argument.

## **Example**

Get the block for the second level in the model reference hierarchy.

```
sldemo_mdref_depgraph  
bp2 = Simulink.BlockPath({'sldemo_mdref_depgraph/thermostat', ...  
'sldemo_mdref_heater/Fahrenheit to Celsius', ...  
'sldemo_mdref_F2C/Gain1'})
```

```
blockpath = bp2.getBlock(2)
```

The result is the thermostat block, which is at the second level in the block path hierarchy.

```
blockpath =
```

```
sldemo_md1ref_heater/Fahrenheit to Celsius
```

---

```
getLength
```

### **Purpose**

Get length of block path

### **Syntax**

```
length = Simulink.BlockPath.getLength()
```

### **Output Arguments**

length

The length of the block path. The length is the number of levels in the model reference hierarchy.

### **Description**

`length = Simulink.BlockPath.getLength()` returns a numeric value that corresponds to the number of levels in the model reference hierarchy for the block path.

### **Example**

Get the length of block path `bp2`.

```
sldemo_md1ref_depgraph  
bp2 = Simulink.BlockPath({'sldemo_md1ref_depgraph/thermostat', ...  
    'sldemo_md1ref_heater/Fahrenheit to Celsius', ...  
    'sldemo_md1ref_F2C/Gain1'})  
length_bp2 = bp2.getLength()
```

The result reflects that the block path has three elements.

```
length_bp2 =
```

---

validate

## **Purpose**

Determine whether block path represents valid block hierarchy

## **Syntax**

`Simulink.BlockPath.validate()`

`Simulink.BlockPath.validate(AllowInactiveVariant)`

## **Input Arguments**

`AllowInactiveVariant`

Set to true to include inactive variants in the validity checking.

The default is false.

## **Description**

`Simulink.BlockPath.validate()` determines whether the block path represents a valid block hierarchy. If there are any validity issues, messages appear in the MATLAB command window. The method checks that:

- All elements in the block path represent valid blocks.
- All variant elements are active.
- Each element except for the last element:
  - Is a valid Model block
  - References the model of the next element

`Simulink.BlockPath.validate(AllowInactiveVariant)` Specifying true causes the validity checking to consider inactive variants as being valid, if they meet the other validity checks described above. Omitting the `AllowInactiveVariant` argument or specifying its default value of false causes the method to check only the active variant.

## **Example**

Validate the block paths, checking only the active variant. This validation fails, because the block path actually references model

sldemo\_mrv\_nonlinear\_controller, while bp specifies that the block references model sldemo\_mdref\_second\_order\_controller, which is in an inactive variant.

```
sldemo_mdref_variants
bp = Simulink.BlockPath({'sldemo_mdref_variants/Controller', ...
'sldemo_mrv_second_order_controller/sensor1'})
bp.validate()
```

Validate by checking all variants. The block path passes the validation when inactive variants are also checked.

```
bp.validate(true)
```

## See Also

Simulink.SimulationData.BlockPath |  
Simulink.SimulationData.Dataset

## How To

- “Specify the Instance That Has Normal Mode Visibility”

# Simulink.BlockPortData

---

**Purpose** Describe block input or output port

**Description** This class defines properties that are common to objects that provide run-time information about a block's ports.

**Parent** Simulink.BlockData

**Children** Simulink.BlockPreCompInputPortData,  
Simulink.BlockPreCompOutputPortData,  
Simulink.BlockCompInputPortData,  
Simulink.BlockCompOutputPortData

## Property Summary

Name	Description
"IsBus"	True if this port is connected to a bus.
"IsSampleHit"	True if this port produces output or accepts input at the current simulation time step.
"SampleTime"	Sample time of this port.
"SampleTimeIndex"	Sample time index of this port.
"SamplingMode"	Sampling mode of the port.

## Properties

---

IsBus

### Description

True if this port is connected to a bus.

### Data Type

Boolean

### Access

RO

---

IsSampleHit

**Description**

True if this port produces output or accepts input at the current simulation time step.

**Data Type**

Boolean

**Access**

RO

---

SampleTime

**Description**

Sample time of this port.

**Data Type**

[period offset] where period and offset are values of type double. See “Specify Sample Time” for more information.

**Access**

RW for MATLAB S functions, RO for other blocks

---

SampleTimeIndex

**Description**

Sample time index of this port.

**Data Type**

integer

**Access**

RO

---

SamplingMode

**Description**

Sampling mode of the port. Valid values are:

# Simulink.BlockPortData

---

Value	Description
'frame'	Port accepts or outputs frame-based signals. The use of frame-based signals requires a DSP System Toolbox license.
'inherited'	Sampling mode is inherited from the port to which this port is connected.
'sample'	Port accepts or outputs sampled data.

## Data Type

string

## Access

RW for MATLAB S functions, RO for other blocks

**Purpose** Provide precompilation information about block input port

**Description** Simulink software returns an instance of this class when a MATLAB program, e.g., a Level-2 MATLAB S-function, invokes the “InputPort” on page 6-273 method of a block’s run-time object before the model containing the block has been compiled.

**Parent** Simulink.BlockPortData

**Children** None

## Property Summary

Name	Description
“DirectFeedthrough”	True if this port has direct feedthrough.
“Overwritable”	True if this port is overwritable.

## Properties

---

DirectFeedthrough

### Description

True if this input port has direct feedthrough.

### Data Type

Boolean

### Access

RW for MATLAB S functions, RO for other blocks

---

Overwritable

### Description

True if this input port is overwritable.

### Data Type

Boolean

### Access

RW for MATLAB S functions, RO for other blocks

# Simulink.BlockPreCompOutputPortData

---

**Purpose** Provide precompilation information about block output port

**Description** Simulink software returns an instance of this class when a MATLAB program, e.g., a Level-2 MATLAB S-function, invokes the “OutputPort” on page 6-274 method of a block’s run-time object before the model containing the block has been compiled.

**Parent** Simulink.BlockPortData

**Children** none

## Property Summary

Name	Description
“Reusable”	Specifies whether an output port’s memory is reusable.

## Properties

---

Reusable

### Description

Specifies whether an output port’s memory is reusable. Options are: NotReusableAndGlobal and ReusableAndLocal.

### Data Type

string

### Access

RW for MATLAB S functions, RO for other blocks

**Purpose** Specify properties of signal bus

**Description** Objects of this class (in conjunction with objects of the `Simulink.BusElement` class) specify the properties of a signal bus. Use bus objects to enable Simulink software to validate the properties of buses connected to the inputs of blocks in your model. You do this by entering, in the **Data type** parameter of a block parameter dialog box, the name of a bus object that defines a bus. When you update the model diagram or start a simulation of the model, Simulink checks whether the buses connected to the blocks have the properties specified by the bus objects. If not, Simulink halts and displays an error message.

The blocks that support using a bus object as a data type are:

- Bus Creator
- Constant
- Data Store Memory
- Data Store Read
- Data Store Write
- From File
- From Workspace
- Inport
- Outport
- Signal Specification

You can use the Model Explorer **Add > Simulink Bus** command (see “Using the Model Explorer to Create Data Objects”), the Simulink Bus editor (see “Manage Bus Objects with the Bus Editor”), or MATLAB commands (see “Data Objects”) to create bus objects in the base MATLAB workspace. You must use the Bus editor or the MATLAB command line to set the properties of a bus object. Simulink also provides a set of utility functions for creating and saving bus objects.


To view bus object properties:

# Simulink.Bus

---

- 1 Open the Model Explorer.
  - 2 In the **Model Hierarchy** pane, select the Base Workspace node.
  - 3 In the **Contents** pane, select the bus object.
- In the **Property** dialog box appears.

## Property Dialog Box

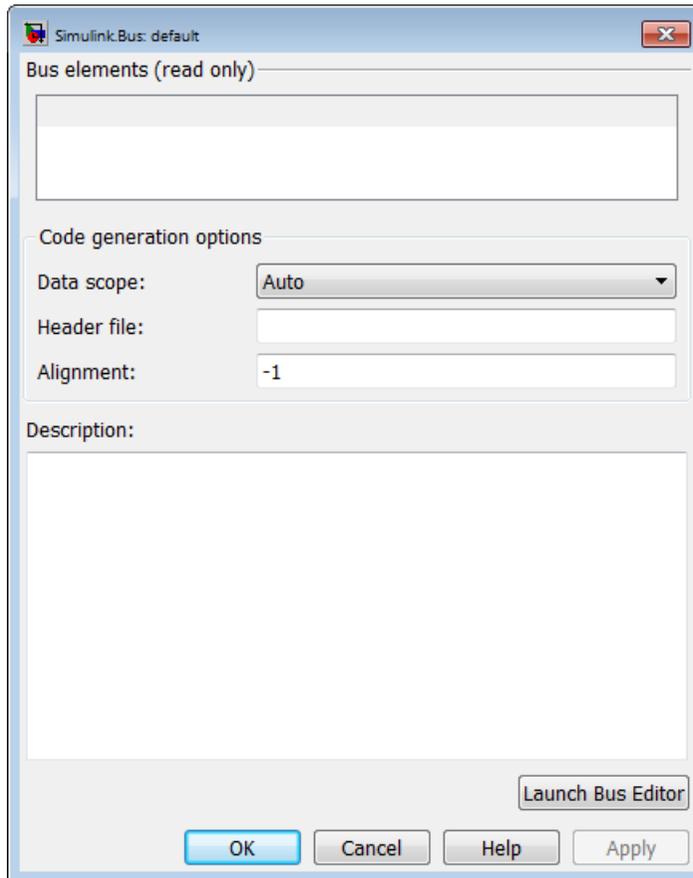

## Bus elements

Table that displays the properties of the bus elements. You cannot edit this table. You must use either the Simulink **Bus editor** (see “Bus Objects”) or MATLAB commands to add or delete bus elements or change the properties of existing bus elements. To launch the bus editor, click the **Launch Bus editor** button at the bottom of this dialog box or in the Simulink Editor, select **Edit > Bus Editor**Bus editor.

## Data scope

Specifies whether the data type definition should be imported from, or exported to, a header file during code generation. The possible values are:

Value	Action
Auto (default)	<p>If no value is specified for <b>Header file</b>, export the data type definition to <i>model_types.h</i>, where <i>model</i> is the model name.</p> <p>If a value is specified for <b>Header file</b>, import the data type definition from the specified header file.</p>
Exported	<p>Export the data type definition to a header file, which can be specified in the <b>Header file</b> field. If no value is specified for <b>Header file</b>, the header file name defaults to <i>type.h</i>, where <i>type</i> is the data type name.</p>
Imported	<p>Import the data type definition from a header file, which can be specified in the <b>Header file</b> field. If no value is specified for <b>Header file</b>, the header file name defaults to <i>type.h</i>, where <i>type</i> is the data type name.</p>

## Header file

Name of a C header file from which a data type definition is imported, or to which a data type definition is exported, based

on the value of **Data scope**. This field is intended for use by Simulink Coder software. See “Generate Code Including User-Defined Data Types”. Simulink software ignores this field.

## Alignment

Data alignment boundary, specified in number of bytes. The starting memory address for the data allocated for the bus will be a multiple of the **Alignment** setting. The default value is -1, which specifies that the code generator should determine an optimal alignment based on usage. Otherwise, specify a positive integer that is a power of 2, not exceeding 128. This field is intended for use by Simulink Coder software. See “Configure Data Alignment for Function Implementations”. Simulink software ignores this field.

## Description

Description of this structure. This field is intended for you to use to document this bus. Simulink software does not use this field.

## Properties

Name	Access	Description
Alignment	RW	Integer value specifying a data alignment boundary, in number of bytes. This property is intended for use by Simulink Coder software. Simulink software does not use it. (Alignment)
DataScope	RW	A string specifying whether the data type definition should be imported from, or exported to, a header file during code generation. (Data scope)
Description	RW	A string that describes this bus. This property is intended for user use. Simulink software does not use it. (Description)

Name	Access	Description
Elements	RW	An array of <code>Simulink.BusElement</code> objects that define the names, data types, dimensions, and other properties of the bus's elements. The elements must have unique names (see "Choosing a Signal Name"). (Bus elements)
HeaderFile	RW	A string that specifies the name of a C header file from which a data type definition is imported, or to which a data type definition is exported, during code generation. (Header file)

## See Also

"Composite Signals", Bus Assignment, Bus Creator, Bus Selector, Bus to Vector, Constant, Inport, Outport, Signal Specification, `Simulink.Bus.cellToObject`, `Simulink.Bus.createMATLABStruct`, `Simulink.Bus.createObject`, `Simulink.BusElement`, `Simulink.Bus.objectToCell`, `Simulink.Bus.save`

# Simulink.BusElement

---

**Purpose** Describe element of signal bus

**Description** Objects of this class define elements of buses defined by objects of the `Simulink.Bus` class.

Property  
Dialog  
Box

**Simulink.BusElement: a**

Properties

Name:

DataType:  <<

Data Type Assistant

Mode:   Data type override:

Complexity:

Dimensions:  DimensionsMode:

SampleTime:  SamplingMode:

Minimum:  Maximum:

Units:

Description:

# Simulink.BusElement

---

---

## Name

Name of this element. See “Signal Names” for guidelines for signal names.

Data Type: string

Access: RW

---

## DataType

Name of the data type of this element. The value of this field can be a:

- Built-in Simulink data type (for example, `double` or `uint8`)
- `Simulink.NumericType` object, with one exception. The exception is a `Simulink.NumericType` whose `Category` is `Fixed-point: unspecified scaling`.

---

**Note** `Fixed-point: unspecified scaling` is a partially specified type whose definition is completed by the block that uses the `Simulink.NumericType`. Forbidding its use for bus elements avoids creating bus elements that have different data types depending on where they are used.

---

- `Simulink.Bus` object, using the `Bus: <object name>` option. This allows you to create bus objects that specify hierarchical buses (that is, buses that contain other buses).

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Data type** parameter. (See “Specify Data Types Using Data Type Assistant”.)

Data Type: string

Access: RW

---

## Dimensions

A vector specifying the dimensions of this element.

Data Type: array.

Access: RW

---

## Complexity

Numeric type (real or complex) of this element. Must be real if this bus element is itself a bus.

Data Type: string

Access: RW

---

## SampleTime

Size of the interval between times when this signal value must be recomputed. Must be -1 (inherited) if this bus element is itself a bus or if the bus that includes this element passes through a block that changes the bus's sample time, such as a Rate Transition block. See "Specify Sample Time" for more information.

Data Type: double

Access: RW

---

## Min

The minimum value of this element. This value must be a finite real double scalar. This value must be empty [ ] if this element is itself a bus.

Data Type: double

Access: RW

# Simulink.BusElement

---

---

## Max

The maximum value of this element. This value must be a finite real double scalar. This value must be empty [ ] if this element is itself a bus.

Data Type: double

Access: RW

---

## SamplingMode

Sampling mode of this element. Must be sample-based if this element is itself a bus. This field is intended to be used by applications based on Simulink models.

Data Type: string

Access: RW

---

## DimensionsMode

A field that specifies if the size (the number of elements in a dimension) of this element may vary or remain fixed during simulation. This field can have the following values:

- **Fixed:** The size of the element may not change during simulation.
- **Variable:** The size of the element may change during simulation. See “Variable-Size Signal Basics” for more information.

Data Type: string

Access: RW

---

## Units

Measurement units in which this value is expressed (for example, inches). This field is intended for use in documenting this parameter. Simulink ignores it.

Data Type: string

Access: RW

---

## Description

Description of the bus element. This field is intended for use in documenting this parameter. Simulink ignores it.

Data Type: string

Access: RW

## See Also

“Composite Signals”, Bus Assignment, Bus Creator, Bus Selector, Bus to Vector, `Simulink.Bus`, `Simulink.Bus.cellToObject`, `Simulink.Bus.createObject`, `Simulink.Bus.objectToCell`, `Simulink.Bus.save`

# Simulink.ConfigSet

---

**Purpose** Access model configuration set

**Description** Instances of this handle class allow you to write programs to create, modify, and attach configuration sets to models. See “Manage a Configuration Set” and “Overview” for more information.

## Property Summary

Name	Description
“Components”	Components of the configuration set.
“Description”	Description of the configuration set.
“Name”	Name of the configuration set.

---

**Note** You can use the **Model Configuration** dialog box to set the Name and Description properties of a configuration set. See “Model Configuration Pane” for more information.

---

## Method Summary

Name	Description
“attachComponent”	Attach a component to a configuration set.
“copy”	Create a copy of a configuration set.
“getComponent”	Get a component of a configuration set.
“getFullName”	Get the full path of a configuration set.
“getModel”	Get the handle of the model that owns a configuration set.
“get_param”	Get the value of a configuration set parameter.
“isActive”	Determine whether a configuration set is the active set of the model that owns it.
“isValidParam”	Determine whether a specified parameter is a valid parameter of a configuration set.

---

Name	Description
“saveAs”	Save a configuration set to a MATLAB file.
“setPropEnabled”	Prevent or allow a user to change a parameter.
“set_param”	Set the value of a configuration set parameter.

## Properties

---

Components

### Description

Array of Simulink.ConfigComponent objects representing the components of the configuration set. For example, solver parameters and data import/export parameters.

### Data Type

array

### Access

RW

---

Description

### Description

Description of the configuration set. You can use this property to provide additional information about a configuration set, such as its purpose. This field can remain blank.

### Data Type

string

### Access

RW

---

Name

### Description

Name of the configuration set. This name represents the configuration set in the Model explorer.

**Data Type**

string

**Access**

RW

## Methods

---

attachComponent

**Purpose**

Attach a component to this configuration set.

**Syntax**

attachComponent(*component*)

**Arguments**

*component*

Instance of Simulink.ConfigComponent class.

**Description**

This method replaces a component in this configuration set with a component having the same name.

**example**

The following example replaces the solver component of the active configuration set of model A with the solver component of the active configuration set of model B.

```
hCs = getActiveConfigSet('B');  
hSolverConfig = hCs.getComponent('Solver');  
hSolverConfig = hSolverConfig.copy;  
hCs = getActiveConfigSet('A');  
hCs.attachComponent(hSolverConfig);
```

---

copy

**Purpose**

Create a copy of this configuration set.

**Syntax**

copy

## Description

This method creates a copy of this configuration set.

---

**Note** You must use this method to create copies of configuration sets because `Simulink.ConfigSet` is a handle class. See “Handle Versus Value Classes” for more information.

---

---

`getComponent`

## Purpose

Get a component of this configuration set.

## Syntax

`getComponent(componentName)`

## Arguments

*componentName*

String specifying the name of the component to be returned.

## Description

Returns the specified component. Omit the argument to get a list of the names of the components that this configuration set contains.

## Example

The following code gets the solver component of the active configuration set of the currently selected model.

```
hCs = getActiveConfigSet(gcs);  
hSolverConfig = hCs.getComponent('Solver');
```

The following code displays the names of the components of the currently selected active configuration set of the model at the MATLAB command line.

```
hCs = getActiveConfigSet(gcs);  
hCs.getComponent
```

---

getFullName

**Purpose**

Get the full path of a configuration set.

**Syntax**

getFullName

**Description**

This method returns a string specifying the full path of a configuration set, for example, 'vdp/Configuration'.

---

getModel

**Purpose**

Get the model that owns this configuration set.

**Syntax**

getModel

**Description**

Returns a handle to the model that owns this configuration set.

**Example**

The following command opens the block diagram of the model that owns the configuration set referenced by the MATLAB workspace variable hCs.

```
open_system(hCs.getModel);
```

---

get\_param

**Purpose**

Get the value of a configuration set parameter.

**Syntax**

get\_param(*paramName*)

## Arguments

*paramName*

String specifying the name of the parameter whose value is to be returned.

## Description

This method returns the value of the specified parameter. Specifying *paramName* as 'ObjectParameters' returns the names of the valid parameters in the configuration set.

## Example

The following command gets the name of the solver used by the selected active configuration of the model.

```
hAcs = getActiveConfigSet(bdroot);  
hAcs.get_param('SolverName');
```

---

**Note** You can also use the `get_param` model construction command to get the values of parameters of an active configuration set of a model. For example, `get_param(bdroot, 'SolverName')` gets the solver name of the currently selected model.

---

---

`isActive`

## Purpose

Determine whether configuration set is the active configuration set for the model.

## Syntax

`isActive`

## Description

Returns true if this configuration set is the active configuration set of the model that owns this configuration set.

---

`isValidParam`

## **Purpose**

Determine whether a specified parameter is a valid parameter of this configuration set. A parameter is valid if it is compatible with other parameters in the configuration set. For example, if `SolverType` is 'variable-step', `FixedStep` is an invalid parameter.

## **Syntax**

`isValidParam(paramName)`

## **Arguments**

*paramName*

String specifying the name of the parameter whose validity is to be determined.

## **Description**

This method returns true if the specified parameter is a valid parameter of this configuration set; otherwise, it returns false.

## **Example**

The following code sets the parameter `StopTime` only if it is a valid parameter of the currently selected active configuration set.

```
hAcs = getActiveConfigSet(gcs);
if hAcs.isValidParam('StopTime')
    set_param('StopTime', '20');
end
```

---

`saveAs`

## **Purpose**

Save configuration set to MATLAB file

## **Syntax**

`saveAs(fileName)`  
`saveAs(fileName, 'paramName', paramValue)`

## Arguments

*fileName*

String specifying the name of the MATLAB file that the method creates.

*paramName, paramValue*

Parameter name and value pairs that you optionally use to format the MATLAB file.

Name	Value
'-format'	<ul style="list-style-type: none"> <li>• 'MATLAB function' (default) — Creates a MATLAB function.</li> <li>• 'MATLAB script' — Creates a MATLAB script.</li> </ul>
'-comments'	<ul style="list-style-type: none"> <li>• 'on' (default) — The MATLAB file:               <ul style="list-style-type: none"> <li>— Includes the GUI name of the parameter as a comment to help identify the parameters.</li> <li>— Groups the parameters by the pane in the Configuration Parameters dialog box on which they are displayed.</li> </ul> </li> <li>• 'off' — Does not include comments in the MATLAB file, so that the file generates faster.</li> </ul>
'-varname'	' <i>variable</i> ' — Any valid variable name. If you do not specify this parameter, the

Name	Value
	MATLAB script uses <code>cs</code> for the variable.  When you specify <code>'-format'</code> , <code>'MATLAB script'</code> , use <code>'-varname'</code> , <code>'variable'</code> to specify the variable that the script uses for the configuration set object. When you run the script, the script creates the variable in the base workspace.

## Description

`saveAs(fileName)` saves a configuration set to a MATLAB file. Before saving, you must get a handle to the configuration set. Use `fileName` to specify the file name.

`saveAs(fileName, 'paramName', paramValue)` accepts one or more comma-separated parameter name and value pairs. For the valid parameter name and value pairs, see the previous arguments section.

## Example

The following code gets the configuration set for `sldemo_counters` and creates a function called `ConfiguredDataFunction`.

```
% Get the active configuration set from sldemo_counters.  
hCs = getActiveConfigSet('sldemo_counters');  
% Save the configuration set as a function.  
hCs.saveAs('ConfiguredDataFunction');
```

The following code gets the configuration set for `sldemo_counters` and creates a script called `ConfiguredDataScript`. The script uses `config_set` for the variable name.

```
% Get the active configuration set from sldemo_counters.  
hCs = getActiveConfigSet('sldemo_counters');
```

```
% Save the configuration set as a script.
```

```
hCs.saveAs('ConfiguredDataScript', '-format', 'MATLAB script', '-varname', 'config_set');
```

## See Also

`getActiveConfigSet`, `getConfigSet`

---

`setPropEnabled`

### Purpose

Enable a configuration set parameter to be changed.

### Syntax

```
setPropEnabled(paramName, isEnabled)
```

### Arguments

*paramName*

Name of the parameter whose value is to be set.

*isEnabled*

Specify as `true` to enable parameter; as `false`, to disable the parameter.

### Description

This method sets the enabled status the parameter specified by `paramName` to the value specified by `isEnabled`. Disabling a parameter prevents the user from changing it.

### Example

The following code prevents the user from setting the simulation stop time of the currently selected model.

```
hAcs = getActiveConfigSet(gcs);  
hAcs.setPropEnabled('StopTime', false);
```

---

`set_param`

### Purpose

Set the value of a configuration set parameter.

# Simulink.ConfigSet

---

## Syntax

```
set_param(paramName, paramValue)
```

## Arguments

paramName

Name of the parameter whose value is to be set.

paramValue

Value to assign to the parameter.

## Description

This method sets the configuration set parameter specified by `paramName` to the value specified by `paramValue`.

## Example

The following command sets the simulation stop time of the selected active configuration set.

```
hAcs = getActiveConfigSet(gcs);  
hAcs.set_param('StopTime', '20');
```

---

**Note** You can also use the `set_param` model construction command to set the parameters of the active configuration set. For example, `set_param(gcs, 'StopTime', '20')` sets the simulation stop time of the currently selected model.

---

## See Also

“About Configuration Sets”

**Purpose** Link model to configuration set stored independently of any model

**Description** Instances of this handle class allow a model to reference configuration sets that exist outside any model. See “Manage a Configuration Set”, “Overview”, and “Manage a Configuration Reference” for more information.

**Property Summary**

Name	Description
“Description”	Description of the configuration reference.
“Name”	Name of the configuration reference.
“WSVarName”	Name of the workspace variable that contains the referenced configuration set.

**Note** You can use the **Configuration Reference** dialog box to set the Name, Description, and WSVarName properties of a configuration reference. See “Create and Attach a Configuration Reference” for details.

**Method Summary**

Name	Description
“copy”	Create a copy of a configuration reference.
“getFullName”	Get the full pathname of a configuration reference.
“getModel”	Get the handle of the model that owns a configuration reference.
“get_param”	Get the value of a configuration set parameter indirectly through a configuration reference.
“getRefConfigSet”	Get the configuration set specified by a configuration reference.

# Simulink.ConfigSetRef

---

Name	Description
“isActive”	Determine whether a configuration reference is the active configuration object of the model.
“refresh”	Update configuration reference after any change to properties or configuration set availability.

## Properties

---

Description

### Description

Description of the configuration reference. You can use this property to provide additional information about a configuration reference, such as its purpose. This field can remain blank.

### Data Type

string

### Access

RW

---

Name

### Description

Name of the configuration reference. This name represents the configuration reference in the GUI.

### Data Type

string

### Access

RW

---

WSVarName

### Description

Name of the workspace variable that contains the referenced configuration set.

**Data Type**

string

**Access**

RW

## Methods

---

copy

**Purpose**

Create a copy of this configuration reference.

**Syntax**

copy

**Description**

This method creates a copy of this configuration set.

---

**Note** You must use this method to create copies of configuration references. This is because `Simulink.ConfigSetRef` is a handle class. See “Handle Versus Value Classes” for more information.

---

---

getFullName

**Purpose**

Get the full pathname of a configuration reference.

**Syntax**

getFullName

**Description**

This method returns a string specifying the full pathname of a configuration reference, e.g., 'vdp/Configuration'.

---

getModel

**Purpose**

Get the model that owns this configuration reference.

# Simulink.ConfigSetRef

---

## Syntax

getModel

## Description

Returns a handle to the model that owns this configuration reference.

## example

The following command opens the block diagram of the model that owns the configuration set referenced by the MATLAB workspace variable hCr.

```
open_system(hCr.getModel);
```

---

get\_param

## Purpose

Get the value of a configuration set parameter indirectly through a configuration reference.

## Syntax

```
get_param(paramName)
```

## Arguments

paramName

String specifying the name of the parameter whose value is to be returned.

## Description

This method returns the value of the specified parameter from the configuration set to which the configuration reference points. To obtain this value, the method uses the value of `WSVarName` to retrieve the configuration set, then retrieves the value of `paramName` from that configuration set. Specifying `paramName` as 'ObjectParameters' returns the names of all valid parameters in the configuration set. If a valid configuration set is not attached to the configuration reference, the method returns unreliable values.

The inverse method, `set_param`, is not defined for configuration references. To obtain a parameter value through a configuration reference, you must first use the `getRefConfigSet` method to retrieve

the configuration set from the reference, then use `set_param` directly on the configuration set itself.

You can also use the `get_param` model construction command to get the values of parameters of a model's active configuration set, e.g., `get_param(bdroot, 'SolverName')` gets the solver name of the currently selected model.

### **example**

The following command gets the name of the solver used by the selected model's active configuration.

```
hAcs = getActiveConfigSet(bdroot);  
hAcs.get_param('SolverName');
```

---

`getRefConfigSet`

### **Purpose**

Get the configuration set specified by a configuration reference

### **Syntax**

`getRefConfigSet`

### **Description**

Returns a handle to the configuration set specified by the `WSVarName` property of a configuration reference.

---

`isActive`

### **Purpose**

Determine whether this configuration set is its model's active configuration set.

### **Syntax**

`isActive`

### **Description**

Returns true if this configuration set is the active configuration set of the model that owns this configuration set.

---

refresh

**Purpose**

Update configuration reference after any change to properties or configuration set availability

**Syntax**

refresh

**Description**

Updates a configuration reference after using the API to change any property of the reference, or after providing a configuration set that did not exist at the time the set was originally specified in `WSVarName`. If you omit executing `refresh` after any such change, the configuration reference handle will be stale, and using it will give incorrect results.

## Purpose

Configure concurrent execution data transfers

## Description

The `Simulink.GlobalDataTransfer` object contains the data transfer information for the concurrent execution of a model. To access the properties of this class, use the `get_param` function to get the handle for this class, and then use dot notation to access the properties. For example:

```
dt=get_param(gcs,'DataTransfer');  
dt.DefaultTransitionBetweenContTasks
```

```
ans =
```

```
Ensure deterministic transfer (minimum delay)
```

## Properties

### DefaultTransitionBetweenSyncTasks

Global setting for data transfer handling option when the source and destination of a signal are in two different and periodic tasks.

Data Type: Enumeration. Can be one of:

- 'Ensure data integrity only'
- 'Ensure deterministic transfer (maximum delay)'

Access: Read/write

### DefaultTransitionBetweenContTasks

Global setting for the data transfer handling option for signals that have a continuous sample time.

Data Type: Enumeration. Can be one of:

- 'Ensure data integrity only'
- 'Ensure deterministic transfer (maximum delay)'

Access: Read/write

# Simulink.GlobalDataTransfer

---

## **DefaultExtrapolationMethodBetweenContTasks**

Global setting for the data transfer extrapolation method for signals that have a continuous sample time.

Data Type: Enumeration. Can be one of:

- 'None'
- 'Zero Order Hold'
- 'Linear'
- 'Quadratic'

Access: Read/write

## **AutoInsertRateTranBlk**

Setting for whether or not Simulink software automatically inserts hidden Rate Transition blocks between blocks that have different sample rates to ensure the integrity of data transfers between tasks; and optional determinism of data transfers for periodic tasks.

Data Type: Boolean. Can be one of:

- 0
- 1

Access: Read/write

## **Copy Semantics**

Handle. To learn how handle classes affect copy operations, see Copying Objects in the MATLAB documentation.

## **Examples**

Access the properties of this class.

```
dt=get_param(gcs,'DataTransfer');  
dt.DefaultTransitionBetweenContTasks
```

```
ans =
```

```
Ensure deterministic transfer (minimum delay)
```

**Alternatives**    “Customize Concurrent Execution Settings”

**See Also**        `Simulink.architecture.get_param` |  
`Simulink.architecture.add` | `Simulink.architecture.delete`  
| `Simulink.architecture.find_system` |  
`Simulink.architecture.importAndSelect`  
| `Simulink.architecture.profile` |  
`Simulink.architecture.register` |  
`Simulink.architecture.set_param`

**How To**         • “Configuring Data Transfer Communications”

# Simulink.MDLInfo

---

**Purpose** Extract model file information without loading block diagram into memory

**Description** The class `Simulink.MDLInfo` extracts information from a model file without loading the block diagram into memory.

You can create an `MdlInfo` object containing all the model information properties, or you can use the static methods for convenient access to individual properties without creating the class first. For example, to get the description only:

```
description = Simulink.MDLInfo.getDescription('mymodel')
```

To get the metadata only:

```
metadata = Simulink.MDLInfo.getMetadata('mymodel')
```

All model information properties are read only.

**Construction** `info = Simulink.MDLInfo('mymodel')` creates an instance of the `MdlInfo` class `info` and populates the properties with the information from the model file '*mymodel*'.

*mymodel* can be:

- A block diagram name (for example, `vdp`)
- The file name for a file on the MATLAB path (for example, `mymodel.slx`)
- A file name relative to the current folder (for example, `mydir/mymodel.slx`)
- A fully qualified file name (for example, `C:\mydir\mymodel.slx`)

`Simulink.MDLInfo` resolves the supplied name by looking at files on the MATLAB path, and ignores any block diagrams in memory. This may cause unexpected results if you supply the name of a loaded model, but its file is shadowed by another file on the MATLAB path. If a file is

shadowed, you see a warning in the command window. To avoid any confusion, supply a fully-qualified file name to `Simulink.MDLInfo`.

## Properties

### **BlockDiagramName**

Name of block diagram.

### **Description**

Description of model.

### **FileName**

Name of model file.

### **Interface**

Names and attributes of the block diagram's root inports, outports, model references, etc., describing the graphical interface if you created a Model Reference block from this model.

Structure.

### **IsLibrary**

Whether the block diagram is a library.

### **Metadata**

Names and attributes of arbitrary data associated with the model.

Structure. The structure fields can be strings, numeric matrices of type "double", or more structures. Use the method `getMetadata` to extract this metadata structure without loading the model.

### **ModelVersion**

Model version number.

### **SimulinkVersion**

Version number of Simulink software that was used to save the model file.

## Methods

<code>getDescription</code>	Extract file description without loading block diagram into memory
<code>getMetadata</code>	Extract file metadata without loading block diagram into memory

## Copy Semantics

Handle. To learn how this affects your use of the class, see Copying Objects in the MATLAB Programming Fundamentals documentation.

## Examples

Construct and view a model information object:

```
info = Simulink.MDLInfo('myModel')
% Get the Version when the model was saved
simulink_version = info.SimulinkVersion;
% Get model metadata
metadata = info.metadata
```

---

To add metadata to a model, create a metadata structure containing the information you require and use `set_param` to attach it to the model. For example:

```
metadata.TestStatus = 'untested';
metadata.ExpectedCompletionDate
    = '01/01/2011';
load_system(mymodelName);
set_param(mymodelName, 'Metadata', ...
    metadata) % must be a struct
save_system(mymodelName);
close_system(mymodelName);
```

Construct a model information object for a model named `mpowertrain`, in order to find the names of referenced models without loading the model into memory:

```
info = Simulink.MDLInfo('mpowertrain')
% Get the Interface property
info.Interface
```

Output:

```
ans =
           Inports: [0x1 struct]
           Outports: [0x1 struct]
           Trigports: [0x1 struct]
           Connports: [0x1 struct]
           ModelVersion: '1.122'
           ModelReferences: {2x1 cell}
           ParameterArgumentNames: ''
           TestPointedSignals: [0x1 struct]
```

Get the referenced models:

```
info.Interface.ModelReferences
```

Output is in the form *model name / block path | referenced model name*:

```
ans =
'mpowertrain/Model Variants|manual_transmission'
'mpowertrain/engine model|menginemodel'
```

## See Also

`Simulink.MDLInfo.getDescription`; `Simulink.MDLInfo.getMetadata`

# Simulink.MDLInfo.getDescription

---

**Purpose** Extract model file description without loading block diagram into memory

**Syntax**  
`description = Simulink.MDLInfo.getDescription('mymodel')`  
`description = info.getDescription`

**Description** `description = Simulink.MDLInfo.getDescription('mymodel')` returns the description associated with the file *mymodel*, without loading the model.

*mymodel* can be:

- A block diagram name (for example, vdp)
- The file name for a file on the MATLAB path (for example, mymodel.slx)
- A file name relative to the current folder (for example, mydir/mymodel.slx)
- A fully qualified file name (for example, C:\mydir\mymodel.slx)

`description = info.getDescription` returns the description property of the Simulink.MDLInfo object `info`.

**Examples** Get the description without loading the model or creating a Simulink.MDLInfo object:

```
description = Simulink.MDLInfo.getDescription('mymodel')
```

---

Create a Simulink.MDLInfo object containing all the model information properties, and get the description property:

```
info = Simulink.MDLInfo('mymodel')  
description = info.getDescription
```

**See Also** Simulink.MDLInfo; Simulink.MDLInfo.getMetadata

**Purpose** Extract model file metadata without loading block diagram into memory

**Syntax**

```
metadata = Simulink.MDLInfo.getMetadata('mymodel')  
metadata = info.getMetadata
```

**Description** `metadata = Simulink.MDLInfo.getMetadata('mymodel')` extracts the structure `metadata` associated with the file `mymodel`, without loading the model.

`mymodel` can be:

- A block diagram name (for example, `vdp`)
- The file name for a file on the MATLAB path (for example, `mymodel.slx`)
- A file name relative to the current folder (for example, `mydir/mymodel.slx`)
- A fully qualified file name (for example, `C:\mydir\mymodel.slx`)

`metadata = info.getMetadata` returns the `metadata` property of the `Simulink.MDLInfo` object `info`.

`metadata` is a structure containing the names and attributes of arbitrary data associated with the model. The structure fields can be strings, numeric matrices of type "double", or more structures.

To add metadata to a model, create a `metadata` structure containing the information you require and use `set_param` to attach it to the model. If it is important to extract the information without loading the model, use `metadata` instead of adding custom user data with `add_param`.

**Examples** Create a `metadata` structure and use `set_param` to attach it to the model:

```
metadata.TestStatus = 'untested';  
metadata.ExpectedCompletionDate = '01/01/2011';  
load_system('mymodel');  
set_param('mymodel', 'Metadata', metadata) % must be a struct
```

# Simulink.MDLInfo.getMetadata

---

```
save_system('mymodel');  
close_system('mymodel');
```

---

Get the metadata without loading the model or creating a `Simulink.MDLInfo` object:

```
metadata = Simulink.MDLInfo.getMetadata('mymodel')
```

---

Create a `Simulink.MDLInfo` object containing all the model information properties, and get the metadata property:

```
info = Simulink.MDLInfo('mymodel')  
metadata = info.getMetadata
```

## See Also

`Simulink.MDLInfo`; `Simulink.MDLInfo.getDescription`

## Purpose

Run Model Advisor from MATLAB file

## Description

Use instances of this class in MATLAB programs to run the Model Advisor, for example, to perform a standard set of checks. MATLAB software creates an instance of this object for each model that you open in the current MATLAB session. To get a handle to a model's Model Advisor object, execute the following command

```
ma = Simulink.ModelAdvisor.getModelAdvisor(model);
```

where *model* is the name of the model or subsystem that you want to check. Your program can then use the Model Advisor object's methods to initialize and run the Model Advisor's checks.

## About IDs

Many Simulink.ModelAdvisor object methods require or return IDs. An *ID* is a string that identifies a Model Advisor check, task, or group. ID must remain constant. A Simulink.ModelAdvisor object includes methods that enable you to retrieve the ID or IDs for all checks, tasks, and groups, checks belonging to groups and tasks, the active check, and selected checks, tasks and groups. See the Simulink.ModelAdvisor "Method Summary" for more information.

You can also determine check IDs as follows:

- 1 In the Model Advisor, select **View > Source Tab**.
- 2 Navigate to the folder that contains the check.
- 3 In the right pane, click **Source**. The Model Advisor displays the **Title**, **TitleID**, and **Source** information for each check in the folder.

## Syntax

```
ma = Simulink.ModelAdvisor
```

# Simulink.ModelAdvisor

---

## Arguments

*ma*

A variable representing the Simulink.ModelAdvisor object you create.

## Properties

### EmitInputParametersToReport

The EmitInputParametersToReport property specifies the display of check input parameters in the Model Advisor report.

Value	Description
'true' (default)	Display check input parameters in the Model Advisor report.
'false'	Do not display check input parameters in the Model Advisor report.

## Method Summary

Name	Description
“closeReport”	Close Model Advisor report.
“deselectCheck”	Clear checks.
“deselectCheckAll”	Clear all checks.
“deselectCheckForGroup”	Clear a group of checks.
“deselectCheckForTask”	Clear checks that belong to a specified task or set of tasks.
“deselectTask”	Clear tasks.
“deselectTaskAll”	Clear all tasks.
“displayReport”	Display Model Advisor report.

<b>Name</b>	<b>Description</b>
“exportReport”	Copy report to a specified location.
“filterResultWithExclusion” on page 6-182	Filter objects that have been excluded by user-defined exclusions.
“getBaselineMode”	Get baseline mode setting for the Model Advisor.
“getCheckAll”	Get the IDs of the checks performed by the Model Advisor.
“getCheckForGroup”	Get checks belonging to a check group.
“getCheckForTask”	Get checks belonging to a task.
“getCheckResult”	Get check results.
“getCheckResultData”	Get check result data.
“getCheckResultStatus”	Get pass/fail status of a check or set of checks.
“getGroupAll”	Get the IDs of the groups of tasks performed by the Model Advisor.
“getInputParameters” on page 6-187	Get input parameters of a check.
“getListViewParameters” on page 6-188	Get list view parameters of a check.
“getModelAdvisor”	Get the Model Advisor for a model or subsystem.

# Simulink.ModelAdvisor

---

<b>Name</b>	<b>Description</b>
“getSelectedCheck”	Get selected checks.
“getSelectedSystem” on page 6-190	Get path of system currently targeted by the Model Advisor.
“getSelectedTask”	Get selected tasks.
“getTaskAll”	Get the IDs of the tasks performed by the Model Advisor.
“Simulink.ModelAdvisor.openConfigUI” on page 6-191	Start the Model Advisor Configuration editor.
“Simulink.ModelAdvisor.reportexists”	Determine whether a report exists for a system or subsystem.
“runCheck”	Run selected checks.
“runTask”	Run checks for selected tasks.
“selectCheck”	Select checks.
“selectCheckAll”	Select all checks.
“selectCheckForGroup”	Select a group of checks.
“selectCheckForTask”	Select checks that belong to a specified task.
“selectTask”	Select tasks.
“selectTaskAll”	Select all tasks.
“setActionEnable” on page 6-196	Set enable/disable status for a check action.
“setBaselineMode”	Set baseline mode for the Model Advisor.
“setCheckErrorSeverity” on page 6-198	Set severity of a check failure.

Name	Description
“setCheckResult”	Set result for the currently running check.
“setCheckResultData”	Set result data for the currently running check.
“setCheckResultStatus”	Set pass/fail status for the currently running check.
“setListViewParameters” on page 6-201	Set list view parameters for a check.
“verifyCheckRan”	Verify that checks have run.
“verifyCheckResult”	Generate a baseline set of check results or compare the current set of results to the baseline results.
“verifyCheckResultStatus”	Verify that a model has passed or failed a set of checks.
“verifyHTML”	Generate a baseline report or compare the current report to a baseline report.

## Methods

### closeReport

#### Purpose

Close Model Advisor report

#### Syntax

```
closeReport
```

#### Description

Closes the report associated with this Model Advisor object, which closes the Model Advisor window.

#### See Also

“displayReport”

## **deselectCheck**

### **Purpose**

Clear check

### **Syntax**

```
success = deselectCheck(ID)
```

### **Arguments**

*ID*

String or cell array that specifies the IDs of the checks to be cleared.

*success*

True (1) if the check is cleared.

### **Description**

This method clears the checks specified by ID.

---

**Note** This method cannot clear disabled checks.

---

### **See Also**

“getCheckAll”, “deselectCheckForGroup”, “selectCheck”

## **deselectCheckAll**

### **Purpose**

Clear all checks

### **Syntax**

```
success = deselectCheckAll
```

### **Arguments**

*success*

True (1) if all checks are cleared.

### **Description**

Clears all checks that are not disabled.

**See Also**

“selectCheckAll”

**deselectCheckForGroup****Purpose**

Clear group of checks

**Syntax**

```
success = deselectCheckForGroup(groupName)
```

**Arguments**

*groupName*

String or cell array that specifies the names of the groups to be cleared.

*success*

True (1) if the method succeeds in clearing the specified group.

**Description**

Clears a specified group of checks.

**See Also**

“selectCheckForGroup”

**deselectCheckForTask****Purpose**

Clear checks that belong to specified task or set of tasks

**Syntax**

```
success = deselectCheckForTask(ID)
```

**Arguments**

*ID*

String or cell array of strings that specify the IDs of tasks whose checks are to be cleared.

*success*

True (1) if the specified tasks are cleared.

**Description**

Clears checks belonging to the tasks specified by the *ID* argument.

**See Also**

“getTaskAll”, “selectCheckForTask”

**deselectTask****Purpose**

Clear task

**Syntax**

```
success = deselectTask(ID)
```

**Arguments**

*ID*

String or cell array that specifies the ID of tasks to be cleared

success

True (1) if the method succeeded in clearing the specified tasks.

**Description**

Clears the tasks specified by *ID*.

**See Also**

“selectTask”, “getTaskAll”

**deselectTaskAll****Purpose**

Clears all tasks

**Syntax**

```
success = deselectTaskAll
```

**Arguments**

success

True (1) if this method succeeds in clearing all tasks.

**Description**

Clears all tasks.

**See Also**

“selectTaskAll”

## **displayReport**

### **Purpose**

Display report in Model Advisor window

### **Syntax**

```
displayReport
```

### **Description**

Displays the report associated with this Model Advisor object in the Model Advisor window. The report includes the most recent results of running checks on the system associated with this Model Advisor object and the current selection status of checks, groups, and tasks for the system.

### **See Also**

“Simulink.ModelAdvisor.reportexists”

## **exportReport**

### **Purpose**

Create copy of report generated by Model Advisor

### **Syntax**

```
[success message] = exportReport(destination)
```

### **Arguments**

*destination*

Path name of copy to be made of the report file.

success

True (1) if this method succeeded in creating a copy of the report at the specified location.

message

Empty if the copy was successful; otherwise, the reason the copy did not succeed.

### **Description**

This method creates a copy of the last report generated by the Model Advisor and stores the copy at the specified location.

## See Also

“Simulink.ModelAdvisor.reportexists”

## filterResultWithExclusion

### Purpose

Filter objects that have been excluded by user-defined exclusions.

### Syntax

```
filteredResultHandles =  
obj.filterResultWithExclusion(ResultHandles)
```

### Arguments

*filteredResultHandles*

An array of objects causing exclusion enabled checks to warn or fail.

*obj*

A variable representing the Simulink.ModelAdvisor.getModelAdvisor object.

*ResultHandles*

An array of objects causing a check warning or failure.

### Description

This method filters objects that cause a check warning or failure with checks that have exclusions enabled.

---

**Note** This method is intended for excluding objects from custom checks created with the Model Advisor’s customization API, a feature available with Simulink Verification and Validation™.

---

## See Also

“getModelAdvisor” on page 6-189

## **getBaselineMode**

### **Purpose**

Determine whether Model Advisor is in baseline data generation mode

### **Syntax**

```
mode = getBaselineMode
```

### **Arguments**

mode

Boolean value indicating baseline mode.

### **Description**

The mode output variable returns true if the Model Advisor is in baseline data mode. Baseline data mode causes the verification methods of the Model Advisor, for example, “verifyHTML”, to generate baseline data.

### **See Also**

“setBaselineMode”, “verifyHTML”, “verifyCheckResult”, “verifyCheckResultStatus”

## **getCheckAll**

### **Purpose**

Get IDs of all checks

### **Syntax**

```
IDs = getCheckAll
```

### **Arguments**

IDs

Cell array of strings specifying the IDs of all checks performed by the Model Advisor.

### **Description**

Returns a cell array of strings specifying the IDs of all checks performed by the Model Advisor.

### **See Also**

“getTaskAll”, “getGroupAll”

## **getCheckForGroup**

### **Purpose**

Get checks that belong to check group

### **Syntax**

`IDs = getCheckForTask(groupName)`

### **Arguments**

*groupName*

String specifying the name of a group.

IDs

Cell array of IDs.

### **Description**

Returns a cell array of IDs of the tasks and checks belonging to the group specified by *groupName*.

### **See Also**

“getCheckForTask”

## **getCheckForTask**

### **Purpose**

Get checks that belong to task

### **Syntax**

`checkIDs = getCheckForTask(taskID)`

### **Arguments**

*taskID*

ID of a task.

checkIDs

Cell array of IDs of checks belonging to the specified task.

### **Description**

Returns a cell array of IDs of the checks belonging to the task specified by *taskID*.

### **See Also**

“getCheckForGroup”

## **getCheckResult**

### **Purpose**

Get results of running check or set of checks

### **Syntax**

```
result = getCheckResult(ID)
```

### **Arguments**

*ID*

ID of a check or cell array of check IDs.

result

A check result or cell array of check results.

### **Description**

Gets results for the specified checks. The format of the results depends on the checks that generated the data.

---

**Note** This method is intended for accessing results generated by custom checks created with the Model Advisor's customization API, an optional feature available with Simulink Verification and Validation software. For more information, see the Simulink Verification and Validation documentation.

---

### **See Also**

“getCheckResultData”, “getCheckResultStatus”

## **getCheckResultData**

### **Purpose**

Get data resulting from running check or set of checks

### **Syntax**

```
result = getCheckResultData(ID)
```

### **Arguments**

*ID*

Check ID or cell array of check IDs.

`result`

Data from a check result or cell array of data from check results.

## Description

Gets the check result data for the specified checks. The format of the data depends on the checks that generated the data.

---

**Note** This method is intended for accessing check result data generated by custom checks created with the Model Advisor's customization API, an optional feature available with Simulink Verification and Validation software. For more information, see the Simulink Verification and Validation documentation.

---

## See Also

“getCheckResult”, “getCheckResultStatus”

## getCheckResultStatus

### Purpose

Get status of check or set of checks

### Syntax

```
result = getCheckResultStatus(ID)
```

### Arguments

*ID*

Check ID or cell array of check IDs.

`result`

Boolean or a cell array of Boolean values indication the pass or fail status of a check or set of checks.

## Description

Invoke this method after running a set of checks to determine whether the checks passed or failed.

## See Also

“getCheckResult”, “getCheckResultData”

## **getGroupAll**

### **Purpose**

Get all groups of checks run by Model Advisor

### **Syntax**

```
IDs = getGroupAll
```

### **Arguments**

IDs

Cell array of IDs of all groups of checks run by the Model Advisor.

### **Description**

Returns a cell array of IDs of all groups of checks run by the Model Advisor.

### **See Also**

“getCheckAll”, “getTaskAll”

## **getInputParameters**

### **Purpose**

Get input parameters of check

### **Syntax**

```
params = obj.getInputParameters(check_ID)
```

### **Arguments**

params

A cell array of `ModelAdvisor.InputParameter` objects.

*obj*

A variable representing the `Simulink.ModelAdvisor` object.

*check\_ID*

A string that uniquely identifies the check.

You can omit the *check\_ID* if you use the method inside a check callback function.

### **Description**

Returns the input parameters associated with a check.

---

**Note** This method is intended for accessing custom checks created with the Model Advisor's customization API, an optional feature available with Simulink Verification and Validation software. For more information, see the Simulink Verification and Validation documentation.

---

## See Also

`ModelAdvisor.InputParameter`

## getListViewParameters

### Purpose

Get list view parameters of check

### Syntax

```
params = obj.getListViewParameters(check_ID)
```

### Arguments

*params*

A cell array of `ModelAdvisor.ListViewParameter` objects.

*obj*

A variable representing the `Simulink.ModelAdvisor` object.

*check\_ID*

A string that uniquely identifies the check.

You can omit the *check\_ID* if you use the method inside a check callback function.

### Description

Returns the list view parameters associated with a check.

---

**Note** This method is intended for accessing custom checks created with the Model Advisor’s customization API, an optional feature available with Simulink Verification and Validation software. For more information, see the Simulink Verification and Validation documentation.

---

## See Also

“setListViewParameters” on page 6-201,  
`ModelAdvisor.ListViewParameter`

## getModelAdvisor

### Purpose

Get Model Advisor object for system or subsystem

### Syntax

```
obj = Simulink.ModelAdvisor.getModelAdvisor(system)  
obj = Simulink.ModelAdvisor.getModelAdvisor(system, 'new')
```

### Arguments

*system*

Name of model or subsystem.

'new'

Required when changing Model Advisor working scope from one system to another without closing the previous session. Alternatively, you can close the previous session before invoking `getModelAdvisor`, in which case 'new' can be omitted.

*obj*

Model Advisor object.

### Description

This static method (see “Static Methods”) creates and returns an instance of `Simulink.ModelAdvisor` class for the model or subsystem specified by *system*.

## **getSelectedCheck**

### **Purpose**

Get currently selected checks

### **Syntax**

`IDs = getSelectedCheck`

### **Arguments**

`IDs`

Cell array of IDs of currently selected checks.

### **Description**

Returns the IDs of the currently selected checks in the Model Advisor.

### **See Also**

“getSelectedTask”

## **getSelectedSystem**

### **Purpose**

Get system currently targeted by Model Advisor

### **Syntax**

`path = getSelectedSystem`

### **Arguments**

`path`

Path of the selected system.

### **Description**

Gets the path of the system currently targeted by the Model Advisor. That is, the system or subsystem most recently selected for checking either interactively by the user or programmatically via `Simulink.ModelAdvisor.getModelAdvisor`.

### **See Also**

“getModelAdvisor”

## **getSelectedTask**

### **Purpose**

Get selected tasks

**Syntax**

IDs = getSelectedTask

**Arguments**

IDs

Cell array of IDs of currently selected tasks.

**Description**

Returns the IDs of the currently selected tasks in the Model Advisor.

**See Also**

“getSelectedCheck”

**getTaskAll****Purpose**

Get tasks run by Model Advisor

**Syntax**

IDs = getTaskAll

**Arguments**

IDs

Cell array of IDs of tasks run by the Model Advisor.

**Description**

Returns a cell array of IDs of tasks run by the Model Advisor.

**See Also**

“getCheckAll”, “getGroupAll”

**Simulink.ModelAdvisor.openConfigUI****Purpose**

Starts Model Advisor Configuration editor

**Syntax**

Simulink.ModelAdvisor.openConfigUI

**Description**

This static method starts the Model Advisor Configuration editor. Use the Model Advisor Configuration editor to create customized configurations for the Model Advisor.

---

**Note** The Model Advisor Configuration editor is an optional feature available with Simulink Verification and Validation software (see “Organize Checks and Folders Using the Model Advisor Configuration Editor” for more information).

- Before starting the Model Advisor Configuration editor, ensure that the current folder is writable. If the folder is not writable, you see an error message when you start the Model Advisor Configuration editor.
  - The Model Advisor Configuration editor uses the Simulink project (slprj) folder (for more information, see “Model Reference Simulation Targets”) in the current folder to store reports and other information. If this folder does not exist in the current folder, the Model Advisor Configuration editor creates it.
- 

## Simulink.ModelAdvisor.reportexists

### Purpose

Determine whether report exists for model or subsystem

### Syntax

```
exists = reportexists('system')
```

### Arguments

*system*

String specifying path of a system or subsystem.

*exists*

True (1) if a report exists for *system*.

### Description

This method returns true (1) if a report file exists for the model (*system*) or subsystem specified by *system* in the slprj/modeladvisor subfolder of the MATLAB working folder.

### See Also

“exportReport”

## **runCheck**

### **Purpose**

Run currently selected checks

### **Syntax**

```
success = runCheck
```

### **Arguments**

success

True (1) if the checks were run.

### **Description**

Runs the checks currently selected in the Model Advisor. Invoking this method is equivalent to selecting the **Run Selected Checks** button on the Model Advisor window.

### **See Also**

“selectCheck”

## **runTask**

### **Purpose**

Run currently selected tasks

### **Syntax**

```
success = runTask
```

### **Arguments**

success

True (1) if the tasks were run.

### **Description**

Runs the tasks currently selected in the Model Advisor. Invoking this method is equivalent to selecting the **Run Selected Checks** button on the Model Advisor window.

### **See Also**

“selectTask”

## **selectCheck**

### **Purpose**

Select check

### **Syntax**

```
success = selectCheck(ID)
```

### **Arguments**

*ID*

ID or cell array of IDs of checks to be selected.

success

True (1) if this method succeeded in selecting the specified checks.

### **Description**

Select the check specified by *ID*. This method cannot select a check that is disabled.

### **See Also**

“selectCheckAll”, “selectCheckForGroup”, “deselectCheck”

## **selectCheckAll**

### **Purpose**

Select all checks

### **Syntax**

```
success = selectCheckAll
```

### **Arguments**

success

True (1) if this method succeeded in selecting all checks.

### **Description**

Selects all checks that are not disabled.

### **See Also**

“selectCheck”, “selectCheckForGroup”, “deselectCheck”

## **selectCheckForGroup**

### **Purpose**

Select group of checks

**Syntax**

success = selectCheckForGroup(*ID*)

**Arguments**

*ID*

ID or cell array of group IDs.

success

True (1) if this method succeeded in selecting the specified groups

**Description**

Selects the groups specified by *ID*.

**See Also**

“deselectCheckForGroup”

**selectCheckForTask****Purpose**

Select checks that belong to specified task or set of tasks

**Syntax**

success = selectCheckForTask(*ID*)

**Arguments**

*ID*

ID or cell array of IDs of tasks whose checks are to be selected.

success

True (1) if this method succeeded in selecting the checks for the specified tasks

**Description**

Selects checks belonging to the tasks specified by the *ID* argument.

**See Also**

“deselectCheckForTask”

**selectTask****Purpose**

Select task

## **Syntax**

`success = selectTask(ID)`

## **Arguments**

*ID*

ID or cell array of IDs of the task to be selected.

`success`

True (1) if this method succeeds in selecting the specified tasks.

## **Description**

Selects a task.

## **See Also**

“deselectTask”

## **selectTaskAll**

### **Purpose**

Select all tasks

### **Syntax**

`success = selectTaskAll`

### **Arguments**

`success`

True (1) if this method succeeds in selecting all tasks.

## **Description**

Selects all tasks.

## **See Also**

“deselectTaskAll”

## **setActionEnable**

### **Purpose**

Set status for check action

### **Syntax**

`obj.setActionEnable(value)`

## Arguments

*obj*

A variable representing the `Simulink.ModelAdvisor` object.

*value*

Boolean value indicating whether the Action box is enabled or disabled.

- `true` — enable the Action box.
- `false` — Disable the Action box.

## Description

The `setActionEnable` method specifies the enables or disables the Action box. Only a check callback function can invoke this method.

---

**Note** This method is intended for accessing custom checks created with the Model Advisor's customization API, an optional feature available with Simulink Verification and Validation software. For more information, see the Simulink Verification and Validation documentation.

---

## See Also

`ModelAdvisor.Action`

## setBaselineMode

### Purpose

Set baseline data generation mode for Model Advisor

### Syntax

`setBaselineMode(mode)`

### Arguments

*mode*

Boolean value indicating setting of Model Advisor's baseline mode, either on (`true`) or off (`false`).

## Description

Sets the Model Advisor's baseline mode to *mode*. Baseline mode causes the Model Advisor's verify methods to generate baseline comparison data for verifying the results of a Model Advisor run.

## See Also

“getBaselineMode”, “verifyCheckResult”, “verifyHTML”

## setCheckErrorSeverity

### Purpose

Set severity of check failure

### Syntax

```
obj.setCheckErrorSeverity(value)
```

### Arguments

*obj*

A variable representing the `Simulink.ModelAdvisor` object.

*value*

Integer indicating severity of failure.

- 0 — Check Result = Warning
- 1 — Check Result = Failed

## Description

Sets result status for a currently running check that fails to *value*. Only a check callback function can invoke this method.

---

**Note** This method is intended for accessing custom checks created with the Model Advisor's customization API, an optional feature available with Simulink Verification and Validation software. For more information, see the Simulink Verification and Validation documentation.

---

## See Also

“setCheckResultStatus”

## setCheckResult

### Purpose

Set result for currently running check

### Syntax

```
success = setCheckResult(result)
```

### Arguments

*result*

String or cell array that specifies the result of the currently running task.

*success*

True (1) if this method succeeds in setting the check result.

### Description

Sets the check result for the currently running check. Only the callback function of a check can invoke this method.

---

**Note** This method is intended for use with custom checks created with the Model Advisor's customization API, an optional feature available with Simulink Verification and Validation software. For more information, see the Simulink Verification and Validation documentation.

---

### See Also

“getCheckResult”, “setCheckResultData”, “setCheckResultStatus”

## setCheckResultData

### Purpose

Set result data for currently running check

### Syntax

```
success = setCheckResultData(data)
```

### Arguments

*data*

Result data to be set.

success

True (1) if this method succeeds in setting the result data for the current check

## Description

Sets the check result data for the currently running check. Only the callback function of a check can invoke this method.

---

**Note** This method is intended for use with custom checks created with the Model Advisor's customization API, an optional feature available with Simulink Verification and Validation software. For more information, see the Simulink Verification and Validation documentation.

---

## See Also

“getCheckResultData”, “setCheckResult”, “setCheckResultStatus”

## setCheckResultStatus

### Purpose

Set status for currently running check

### Syntax

```
success = setCheckResultStatus(status)
```

### Arguments

*status*

Boolean value that indicates the status of the check that just ran, either pass (true) or fail (false)

success

True (1) if the status was set.

## Description

Sets the pass or fail status for the currently running check to *status*. Only the callback function of the check can invoke this method.

---

**Note** This method is intended for use with custom checks created with the Model Advisor’s customization API, an optional feature available with Simulink Verification and Validation software. For more information, see the Simulink Verification and Validation documentation.

---

## See Also

“getCheckResultStatus”, “setCheckResult”, “setCheckResultData”, “setCheckErrorSeverity” on page 6-198

## setListViewParameters

### Purpose

Specify list view parameters for check

### Syntax

```
obj.setListViewParameters(check_ID, params)
```

### Arguments

*obj*

A variable representing the `Simulink.ModelAdvisor` object.

*check\_ID*

A string that uniquely identifies the check.

You can omit the *check\_ID* if you use the method inside a check callback function.

*params*

A cell array of `ModelAdvisor.ListViewParameter` objects.

### Description

Set the list view parameters for the check.

---

**Note** This method is intended for accessing custom checks created with the Model Advisor's customization API, an optional feature available with Simulink Verification and Validation software. For more information, see the Simulink Verification and Validation documentation.

---

## See Also

“getListViewParameters” on page 6-188,  
`ModelAdvisor.ListViewParameter`

## verifyCheckRan

### Purpose

Verify that Model Advisor has run set of checks

### Syntax

```
[success, missingChecks, additionalChecks] =  
verifyCheckRan(IDs)
```

### Arguments

*IDs*

Cell array of IDs of checks to verify.

*success*

Boolean value specifying whether the checks ran.

*missingChecks*

Cell array of IDs for specified checks that ran.

*additionalChecks*

Cell array of IDs for unspecified checks that ran.

### Description

The output variable `success` returns `true` if all the checks specified by *IDs* have run. If not, `success` returns `false`, `missingChecks` lists specified checks that did not run. The `additionalChecks` argument lists unspecified checks that ran.

## See Also

“verifyCheckResultStatus”

## verifyCheckResult

### Purpose

Generate baseline Model Advisor check results file or compare current check results to baseline check results

### Syntax

```
[success message] = verifyCheckResult(baseline, checkIDs)
```

### Arguments

*baseline*

Path of the baseline check results MAT-file.

*checkIDs*

Cell array of check IDs.

*success*

Boolean value specifying whether the method succeeded.

*message*

String specifying an error message.

### Description

If the Model Advisor is in baseline mode (see “setBaselineMode”), this method stores the most recent results of running the checks specified by *checkIDs* in a MAT-file at the location specified by *baseline*. If the method is unable to store the check results at the specified location, it returns *false* in the output variable *success* and the reason for the failure in the output variable *message*. If the Model Advisor is not in baseline mode, this method compares the most recent results of running the checks specified by *checkIDs* with the report specified by *baseline*. If the current results match the baseline results, this method returns *true* as the value of the *success* output variable.

---

**Note** You must run the checks specified by *checkIDs* (see “runCheck”) before invoking *verifyCheckResult*.

---

This method enables you to compare the most recent check results generated by the Model Advisor with a baseline set of check results. You can use the method to generate the baseline report as well as perform current-to-baseline result comparisons. To generate a baseline report, put the Model Advisor in baseline mode, using “setBaselineMode”. Then invoke this method with the baseline argument set to the location where you want to store the baseline results. To perform a current-to-baseline report comparison, first ensure that the Model Advisor is not in baseline mode (see “getBaselineMode”). Then invoke this method with the path of the baseline report as the value of the `baseline` input argument.

### See Also

“setBaselineMode”, “getBaselineMode”, “runCheck”, “verifyCheckResultStatus”

### verifyCheckResultStatus

#### Purpose

Verify that model has passed or failed set of checks

#### Syntax

```
[success message] = verifyCheckResultStatus(baseline,  
checkIDs)
```

#### Arguments

*baseline*

Array of Boolean variables.

*checkIDs*

Cell array of check IDs.

*success*

Boolean value specifying whether the method succeeded.

*message*

String specifying an error message.

#### Description

This method compares the pass or fail (`true` or `false`) statuses from the most recent running of the checks specified by *checkIDs* with the Boolean values specified by *baseline*. If the statuses match the

baseline, this method returns true as the value of the success output variable.

---

**Note** You must run the checks specified by *checkIDs* (see “runCheck”) before invoking *verifyCheckResultStatus*.

---

### See Also

“runCheck”

### verifyHTML

#### Purpose

Generate baseline Model Advisor report or compare current report to baseline report

#### Syntax

```
[success message] = verifyHTML(baseline)
```

#### Arguments

*baseline*

Path of a Model Advisor report.

success

Boolean value specifying whether the method succeeded.

message

String specifying an error message.

#### Description

If the Model Advisor is in baseline mode (see “setBaselineMode”), this method stores the report most recently generated by the Model Advisor at the location specified by *baseline*. If the method is unable to store a copy of the report at the specified location, it returns **false** in the output variable *success* and the reason for the failure in the output variable *message*. If the Model Advisor is not in baseline mode, this method compares the report most recently generated by the Model Advisor with the report specified by *baseline*. If the current report has

exactly the same content as the baseline report, this method returns `true` as the value of the `success` output variable.

This method enables you to compare a report generated by the Model Advisor with a baseline report to determine if they differ. You can use the method to generate the baseline report as well as perform current-to-baseline report comparisons. To generate a baseline report, put the Model Advisor in baseline mode. Then invoke this method with the baseline argument set to the location where you want to store the baseline report. To perform a current-to-baseline report comparison, first ensure that the Model Advisor is not in baseline mode (see “`getBaselineMode`”). Then invoke this method with the path of the baseline report as the value of the *baseline* input argument.

**See Also**

“`setBaselineMode`”, “`getBaselineMode`”, “`verifyCheckResult`”

**Purpose** Container for model's signal data logs

## Description

---

**Note** The ModelDataLogs format is supported for backwards compatibility. The ModelDataLogs format will be removed in a future release. For an existing model that uses the ModelDataLogs format, you should migrate the model to use Dataset format. For details, see “Migrate from ModelDataLogs to Dataset Format”.

For new models, use the Dataset logging format, which stores logged data in `Simulink.SimulationData.Dataset` objects.

---

If you set **Configuration Parameters > Data Import/Export > Signal logging format** to ModelDataLogs, Simulink software creates instances of the `Simulink.ModelDataLogs` class to contain signal logs that it creates while simulating a model (see “Signal Logging”). In particular, Simulink software creates an instance of this class for a top model and for each model referenced by the top model that contains signals to be logged. Simulink software assigns the ModelDataLogs object for the top model to a variable in the MATLAB workspace. The name of the variable is the name specified in the **Signal logging name** field on the **Data Import/export** pane of the model's **Configuration Parameters** dialog box. The default value is `logsout`.

A ModelDataLogs object has a variable number of properties. The first property, named `Name`, specifies the name of the model whose signal data the object contains or, if the model is a referenced model, the name of the Model block that references the model. The remaining properties reference objects that contain signal data logged during simulation of the model. The objects may be instances of any of the following types of objects:

- `Simulink.ModelDataLogs`  
Container for the data logs of a model
- `Simulink.SubsysDataLogs`

# Simulink.ModelDataLogs

---

Container for the data logs of a subsystem

- `Simulink.ScopeDataLogs`

Container for the data logs of Scope signal viewers

- `Simulink.Timeseries`

Data log for any signal except a mux or bus signal

- `Simulink.TsArray`

Data log for a mux or bus signal

The names of the properties identify the data being logged as follows:


- For signal data logs, the name of the signal
- For a subsystem or model log container, the name of the subsystem or model, respectively
- For a scope viewer data log, the name specified on the viewer's parameter dialog box

---

**Note** If a name contains spaces, the `ModelDataLogs` objects specifies its name as ( ' **name** ' ) where **name** is the actual name, e.g., ( ' Brake Subsystem ' ). See “Handling Spaces and Newlines in Logged Names” for more information.

---

Consider, for example, the following model.

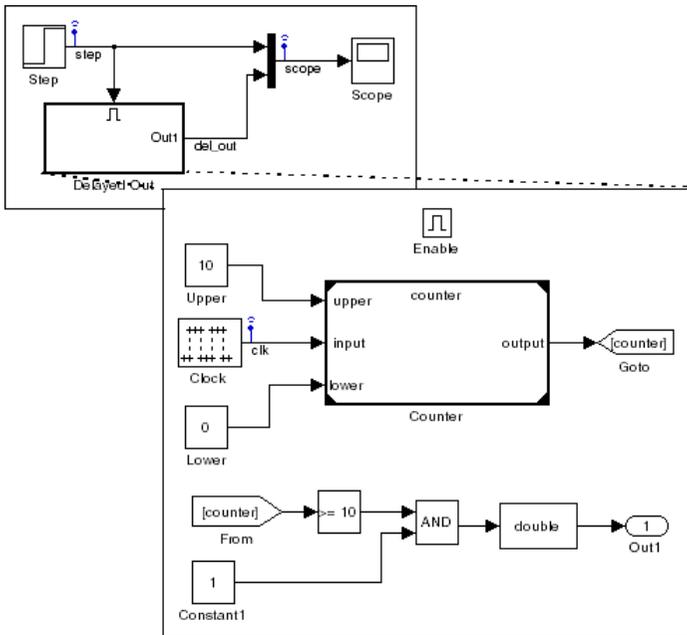

As indicated by the testpoint icons, this model specifies that Simulink software should log the signals named `step` and `scope` in the model's root system and the signal named `clk` in the subsystem named `Delayed Out`. After simulation of this model, the MATLAB workspace contains the following variable:

```
>> logstdout
```

```
logstdout =
```

```
Simulink.ModelDataLogs (siglgex):
```

Name	elements	Simulink Class
<code>scope</code>	2	TsArray
<code>step</code>	1	Timeseries
<code>('Delayed Out')</code>	2	SubsysDataLogs

# Simulink.ModelDataLogs

---

The `logouts` variable contains the signal data logged during the simulation. You can use fully qualified object names or the Simulink `unpack` command to access the signal data stored in `logouts`. For example, to access the amplitudes of the `clk` signal in the Delayed Out subsystem, enter

```
>> data = logouts.('Delayed Out').clk.Data;
```

or

```
>> logouts.unpack('all');  
>> data = clk.Data;
```

You can use a custom logging name or signal name when logging a signal. If you use the signal name, and that name occupies more than one line, include an `sprintf('\n')` between the lines of the signal name when accessing the logged data. For example, to access the signal in the following model:



Use the following syntax:

```
logouts.(['scope' sprintf('\n') '(delayed out)'])
```

See “Handling Spaces and Newlines in Logged Names” for more information.

## See Also

“Signal Logging”, `Simulink.SubsysDataLogs`,  
`Simulink.ScopeDataLogs`, `Simulink.Timeseries`, `Simulink.TsArray`,  
`who`, `whos`, `unpack`

**Purpose** Access SimState snapshot data

**Description** The `Simulink.SimState.ModelSimState` class contains all of the information associated with a “snapshot” of a simulation, including the logged states, the time of the snapshot, and the start time of the simulation. To access these data for a block, use the `getBlockSimState` method or the `loggedStates` property.

## Properties

### **description**

Specify a description. By default, Simulink software generates a string based on your model name.

### **loggedStates**

The logged states are the continuous and discrete states of the blocks in a model. These states represent a subset of the complete simulation state (`SimState`) of the model.

### **Attributes:**

dependent

### **snapshotTime**

Time at which Simulink software takes a “snapshot” of the complete simulation states. This data is read only.

### **startTime**

Time at which the simulation starts. This data is read only.

## Methods

<code>getBlockSimState</code>	Access <code>SimState</code> of individual Stateflow Chart, MATLAB Function, or S-function block
<code>setBlockSimState</code>	Set <code>SimState</code> of individual Stateflow Chart, MATLAB Function, or S-function block

# Simulink.SimState.ModelSimState

---

## **Copy Semantics**

Value. To learn how value classes affect copy operations, see [Copying Objects](#) in the MATLAB Programming Fundamentals documentation.

# Simulink.ModelManagement.Project.CurrentProject

---

## Purpose

(To be removed) Manipulate the currently open Simulink project from the command line

---

**Note** `Simulink.ModelManagement.Project.CurrentProject` will be removed in a future release. Use `simulinkproject` and related functions instead. See “Project Management” for links to project functions.

---

## Description

Use an instance of `Simulink.ModelManagement.Project.CurrentProject` class to perform the following operations.

- Open and close Simulink projects
- Investigate the properties of the currently open Simulink project
- Change some properties of the currently open Simulink project

## Construction

Create an instance of the class as follows.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

## Methods

<code>addFileToProject</code>	(To be removed) Add a file to the currently open Simulink project
<code>attachLabelToFile</code>	(To be removed) Add a label to a file in the currently open Simulink project
<code>close</code>	(To be removed) Close the currently open Simulink project

# Simulink.ModelManagement.Project.CurrentProject

---

<code>createCategory</code>	(To be removed) Create a category in the currently open Simulink project
<code>createLabel</code>	(To be removed) Create a label in a category in the currently open Simulink project
<code>detachLabelFromFile</code>	(To be removed) Remove a label from a file in the currently open Simulink project
<code>export</code>	(To be removed) Export Simulink project to Zip file
<code>getAttachedLabels</code>	(To be removed) Get a list of labels attached to a file in the currently open Simulink project
<code>getCategories</code>	(To be removed) Get a list of the categories of file labels in the currently open Simulink project
<code>getFilesInProject</code>	(To be removed) Get a list of files in the currently open Simulink project
<code>getLabels</code>	(To be removed) Get a list of labels in a category in the currently open Simulink project
<code>getProjectName</code>	(To be removed) Get the name of the currently open Simulink project
<code>getRootDirectory</code>	(To be removed) Get the name of the root folder for the currently open Simulink project
<code>getRootFolder</code>	(To be removed) Get the name of the root folder for the currently open Simulink project

# Simulink.ModelManagement.Project.CurrentProject

---

<code>isProjectLoaded</code>	(To be removed) Return true when a Simulink project is loaded and false when no project is loaded
<code>loadProject</code>	(To be removed) Load an existing Simulink project and close any currently open project
<code>removeCategory</code>	(To be removed) Remove a category from the currently open Simulink project
<code>removeFileFromProject</code>	(To be removed) Remove a file from the currently open Simulink project
<code>removeLabel</code>	(To be removed) Remove a label from a category in the currently open Simulink project
<code>setProjectName</code>	(To be removed) Change the name of the currently open Simulink project

## Examples

This example creates a new instance of the `Simulink.ModelManagement.Project.CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

## How To

- “Project Management”

# Simulink.ModelWorkspace

---

**Purpose** Describe model workspace

**Description** Instances of this class describe model workspaces. Simulink software creates an instance of this class for each model that you open during a Simulink session. See “Model Workspaces” for more information.

## Property Summary

Name	Access	Description
DataSource	RW	Specifies the source used to initialize this workspace. Valid values are <ul style="list-style-type: none"><li>• 'Model File'</li><li>• 'MAT-File'</li><li>• 'MATLAB Code'</li><li>• 'MATLAB File'</li></ul>
FileName	RW	Specifies the name of the MAT-file used to initialize this workspace. Simulink software ignores this property if DataSource is neither 'MAT-File' nor 'MATLAB Code'.
MATLABCode	RW	A string specifying MATLAB code used to initialize this workspace. Simulink software ignores this property if DataSource is not 'MATLAB Code'.

## Method Summary

Name	Description
“assignin”	Assign a value to a variable in the model’s workspace.
“clear”	Clear the model’s workspace.

Name	Description
“evalin”	Evaluate an expression in the model’s workspace.
“reload”	Reload the model workspace from the workspace’s data source.
“save”	Save the model’s workspace to a specified MAT-file.
“saveToSource”	Save the workspace to the MAT-file that the workspace designates as its data source.
“whos”	List the variables in the model workspace.
“getVariable”	Get value of variable from workspace.
“hasVariable”	Determine if variable exists in workspace.

## Methods

---

assignin

### Purpose

Assign a value to a variable in the model’s workspace.

### Syntax

```
assignin('varname', varvalue)
```

### Arguments

varname

Name of the variable to be assigned a value.

varvalue

Value to be assigned the variable.

### Description

This method assigns the value specified by varvalue to the variable whose name is varname.

### See also

“evalin”

---

clear

**Purpose**

Clear the model's workspace.

**Syntax**

clear

**Description**

This method empties the workspace of its variables.

---

evalin

**Purpose**

Evaluate an expression in the model's workspace.

**Syntax**

evalin('expression')

**Arguments**

expression

A MATLAB expression to be evaluated.

**Description**

This method evaluates expression in the model workspace.

**See also**

“assignin”

---

getVariable

**Purpose**

Get value of variable from workspace.

**Syntax**

variableValue = getVariable(workspaceHandle,variableName)

**Arguments**

workspaceHandle

Handle to the workspace.

variableName  
Name of the variable.

## **Description**

This method gets the value of a variable from a workspace.

---

hasVariable

## **Purpose**

Determine if variable exists in workspace.

## **Syntax**

```
variableExists = hasVariable(workspaceHandle,variableName)
```

## **Arguments**

workspaceHandle  
Handle to the workspace.

variableName  
Name of the variable.

## **Description**

This method determines whether a variable exists in a workspace.

---

reload

## **Purpose**

Reload the model workspace from the workspace's data source.

## **Syntax**

```
reload
```

## **Description**

This method reloads the model workspace from the data source specified by its DataSource parameter. The data source must be 'MAT-File', 'MATLAB Code', or 'MATLAB File' .

## **See also**

“saveToSource”

# Simulink.ModelWorkspace

---

---

save

## **Purpose**

Save the model's workspace to a specified MAT-file.

## **Syntax**

```
save('filename')
```

## **Arguments**

filename

Name of a MAT-file.

## **Description**

This method saves the model's workspace to the MAT-file specified by filename.

---

**Note** This method allows you to save the workspace to a file other than the file specified by the workspace's `FileName` property. If you want to save the model workspace to the file specified by the file's `FileName` property, it is simpler to use the workspace's `saveToSource` method.

---

## **example**

```
hws = get_param('mymodel','modelworkspace')
hws.DataSource = 'MAT-File';
hws.FileName = 'workspace';
hws.assignin('roll', 30);
hws.saveToSource;
hws.assignin('roll', 40);
hws.save('workspace_test.mat');
```

## **See also**

“reload”, “saveToSource”

---

saveToSource

**Purpose**

Save the workspace to the MAT-file that it designates as its data source.

**Syntax**

saveToSource

**Description**

This method saves the model workspace designated by its `FileName` property.

**example**

```
hws = get_param('mymodel','modelworkspace')
hws.DataSource = 'MAT-File';
hws.FileName = 'params';
hws.assignin('roll', 30);
hws.saveToSource;
```

**See also**

“save”, “reload”

---

whos

**Purpose**

List the variables in the model workspace.

**Syntax**

whos

**Description**

This method lists the variables in the model’s workspace. The listing includes the size and class of the variables.

# Simulink.ModelWorkspace

---

## **example**

```
>> hws = get_param('myModel', 'modelworkspace');  
>> hws.assignin('k', 2);  
>> hws.whos
```

Name	Size	Bytes	Class
k	1x1	8	double array

<b>Purpose</b>	Get run-time information about Level-2 MATLAB S-function block
<b>Description</b>	<p>This class allows a Level-2 MATLAB S-function or other MATLAB program to obtain information from Simulink software and provide information to Simulink software about a Level-2 MATLAB S-Function block. Simulink software creates an instance of this class for each Level-2 MATLAB S-Function block in a model. Simulink software passes the object to the callback methods of Level-2 MATLAB S-functions when it updates or simulates a model, allowing the callback methods to get and provide block-related information to Simulink software. See “Write Level-2 MATLAB S-Functions” for more information.</p> <p>You can also use instances of this class in MATLAB programs to obtain information about Level-2 MATLAB S-Function blocks during a simulation. See “Access Block Data During Simulation” for more information.</p> <p>The Level-2 MATLAB S-function template <i>matlabroot/toolbox/simulink/blocks/msfuntmpl.m</i> shows how to use a number of the following methods.</p>
<b>Parent Class</b>	Simulink.RunTimeBlock
<b>Derived Classes</b>	None

# Simulink.MSFcnRunTimeBlock

---

## Property Summary

Name	Description
“AllowSignalsWithMoreThan2D”	enable Level-2 MATLAB S-function to use multidimensional signals.
“DialogPrmsTunable”	Specifies which of the S-function’s dialog parameters are tunable.
“NextTimeHit”	Time of the next sample hit for variable sample time S-functions.

## Method Summary

Name	Description
“AutoRegRuntimePrms”	Register this block’s dialog parameters as run-time parameters.
“AutoUpdateRuntimePrms”	Update this block’s run-time parameters.
“IsDoingConstantOutput”	Determine whether the current simulation stage is the constant sample time stage.
“IsMajorTimeStep”	Determine whether the current simulation time step is a major time step.
“IsSampleHit”	Determine whether the current simulation time is one at which a task handled by this block is active.

<b>Name</b>	<b>Description</b>
"IsSpecialSampleHit"	Determine whether the current simulation time is one at which multiple tasks handled by this block are active.
"RegBlockMethod"	Register a callback method for this block.
"RegisterDataTypeFxpBinaryPoint"	Register fixed-point data type with binary point-only scaling.
"RegisterDataTypeFxpFSlopeFixexpBias"	Register fixed-point data type with [Slope Bias] scaling specified in terms of fractional slope, fixed exponent, and bias.
"RegisterDataTypeFxpSlopeBias"	Register data type with [Slope Bias] scaling.
"SetAccelRunOnTLC"	Specify whether to use this block's TLC file to generate the simulation target for the model that uses it.
"SetPreCompInPortInfoToDynamic"	Set precompiled attributes of this block's input ports to be inherited.
"SetPreCompOutPortInfoToDynamic"	Set precompiled attributes of this block's output ports to be inherited.

# Simulink.MSFcnRunTimeBlock

---

Name	Description
“SetPreCompPortInfoToDefaults”	Set precompiled attributes of this block’s ports to the default values.
“SetSimViewingDevice”	Specify whether block is a viewer.
“SupportsMultipleExecInstances”	
“WriteRTWParam”	Write custom parameter information to Simulink Coder file.

## Properties

---

AllowSignalsWithMoreThan2D

### Description

Allow Level-2 MATLAB S-functions to use multidimensional signals. You must set the AllowSignalsWithMoreThan2D property in the setup method.

### Data Type

Boolean

### Access

RW

---

DialogPrmsTunable

### Description

Specifies whether a dialog parameter of the S-function is tunable. Tunable parameters are registered as run-time parameters when you call the “AutoRegRuntimePrms” method. Note that SimOnlyTunable parameters are not registered as run-time parameters. For example, the following lines initializes three dialog parameters where the first is tunable, the second in not tunable, and the third is tunable only during simulation.

```
block.NumDialogPrms = 3;  
block.DialogPrmsTunable = {'Tunable', 'Nontunable', 'SimOnlyTunable'};
```

**Data Type**

array

**Access**

RW

---

NextTimeHit

**Description**

Time of the next sample hit for variable sample-time S-functions.

**Data Type**

double

**Access**

RW

---

## Methods

AutoRegRuntimePrms

**Purpose**

Register a block's tunable dialog parameters as run-time parameters.

**Syntax**

```
AutoRegRuntimePrms;
```

**Description**

Use in the PostPropagationSetup method to register this block's tunable dialog parameters as run-time parameters.

---

AutoUpdateRuntimePrms

**Purpose**

Update a block's run-time parameters.

**Syntax**

```
AutoUpdateRuntimePrms;
```

# Simulink.MSFcnRunTimeBlock

---

## Description

Automatically update the values of the run-time parameters during a call to ProcessParameters.

See the S-function

*matlabroot/toolbox/simulink/simdemos/simfeatures/adapt\_lms.m* in the Simulink model *sldemo\_msfcn\_lms* for an example.

---

IsDoingConstantOutput

## Purpose

Determine whether this is in the constant sample time stage of a simulation.

## Syntax

```
bVal = IsDoingConstantOutput;
```

## Description

Returns true if this is the constant sample time stage of a simulation, i.e., the stage at the beginning of a simulation where Simulink software computes the values of block outputs that cannot change during the simulation (see “Constant Sample Time”). Use this method in the Outputs method of an S-function with port-based sample times to avoid unnecessarily computing the outputs of ports that have constant sample time, i.e.,  $[\text{inf}, 0]$ .

```
function Outputs(block)
.
.
    if block.IsDoingConstantOutput
        ts = block.OutputPort(1).SampleTime;
        if ts(1) == Inf
            %% Compute port's output.
        end
    end
end
.
.
%% end of Outputs
```

See “Specifying Port-Based Sample Times” for more information.

---

IsMajorTimeStep

**Purpose.**

Determine whether current time step is a major or a minor time step.

**Syntax**

```
bVal = IsMajorTimeStep;
```

**Description**

Returns true if the current time step is a major time step; false, if it is a minor time step. This method can be called only from the Outputs or Update methods.

---

IsSampleHit

**Purpose**

Determine whether the current simulation time is one at which a task handled by this block is active.

**Syntax**

```
bVal = IsSampleHit(stIdx);
```

**Arguments**

stIdx

Global index of the sample time to be queried.

**Description**

Use in Outputs or Update block methods when the MATLAB S-function has multiple sample times to determine whether a sample hit has occurred at stIdx. The sample time index stIdx is a global index for the Simulink model. For example, consider a model that contains three sample rates of 0.1, 0.2, and 0.5, and a MATLAB S-function block that contains two rates of 0.2 and 0.5. In the MATLAB S-function, block.IsSampleHit(0) returns true for the rate 0.1, not the rate 0.2.

This block method is similar to ssIsSampleHit for C-MeX S-functions, however ssIsSampleHit returns values based on only the sample times contained in the S-function. For example, if the model described

# Simulink.MSFcnRunTimeBlock

---

above contained a C-MeX S-function with sample rates of 0.2 and 0.5, `ssIsSampleHit(S,0,tid)` returns true for the rate of 0.2.

Use port-based sample times to avoid using the global sample time index for multi-rate systems (see `Simulink.BlockPortData`).

---

`IsSpecialSampleHit`

## **Purpose**

Determine whether the current simulation time is one at which multiple tasks implemented by this block are active.

## **Syntax**

```
bVal = IsSpecialSampleHit(stIdx1,stIdx1);
```

## **Arguments**

`stIdx1`

Index of sample time of first task to be queried.

`stIdx2`

Index of sample time of second task to be queried.

## **Description**

Use in `Outputs` or `Update` block methods to ensure the validity of data shared by multiple tasks running at different rates. Returns true if a sample hit has occurred at `stIdx1` and a sample hit has also occurred at `stIdx2` in the same time step (similar to `ssIsSpecialSampleHit` for C-Mex S-functions).

When using the `IsSpecialSampleHit` macro, the slower sample time must be an integer multiple of the faster sample time.

---

`RegBlockMethod`

## **Purpose**

Register a block callback method.

## **Syntax**

```
RegBlockMethod(methName, methHandle);
```

## Arguments

methName

Name of method to be registered.

methHandle

MATLAB function handle of the callback method to be registered.

## Description

Registers the block callback method specified by `methName` and `methHandle`. Use this method in the `setup` function of a Level-2 MATLAB S-function to specify the block callback methods that the S-function implements.

---

RegisterDataTypeFxpBinaryPoint

## Purpose

Register fixed-point data type with binary point-only scaling.

## Syntax

```
dtID = RegisterDataTypeFxpBinaryPoint(isSigned, wordLength,  
fractionalLength, obeyDataTypeOverride);
```

## Arguments

isSigned

true if the data type is signed.

false if the data type is unsigned.

wordLength

Total number of bits in the data type, including any sign bit.

fractionalLength

Number of bits in the data type to the right of the binary point.

obeyDataTypeOverride

true indicates that the **Data Type Override** setting for the subsystem is to be obeyed. Depending on the value of **Data Type Override**, the resulting data type could be `Double`, `Single`, `ScaledDouble`, or the fixed-point data type specified by the other arguments of the function.

# Simulink.MSFcnRunTimeBlock

---

false indicates that the **Data Type Override** setting is to be ignored.

## Description

This method registers a fixed-point data type with Simulink software and returns a data type ID. The data type ID can be used to specify the data types of input and output ports, run-time parameters, and DWork states. It can also be used with all the standard data type access methods defined for instances of this class, such as “DatatypeSize”.

Use this function if you want to register a fixed-point data type with binary point-only scaling. Alternatively, you can use one of the other fixed-point registration functions:

- Use “RegisterDataTypeFxpFSlopeFixexpBias” to register a data type with [Slope Bias] scaling by specifying the word length, fractional slope, fixed exponent, and bias.
- Use “RegisterDataTypeFxpSlopeBias” to register a data type with [Slope Bias] scaling.

If the registered data type is not one of the Simulink built-in data types, a Fixed-Point Designer license is checked out.

---

## RegisterDataTypeFxpFSlopeFixexpBias

### Purpose

Register fixed-point data type with [Slope Bias] scaling specified in terms of fractional slope, fixed exponent, and bias

### Syntax

```
dtID = RegisterDataTypeFxpFSlopeFixexpBias(isSigned,  
wordLength, fractionalSlope, fixedexponent, bias,  
obeyDataTypeOverride);
```

### Arguments

isSigned

true if the data type is signed.

false if the data type is unsigned.

`wordLength`

Total number of bits in the data type, including any sign bit.

`fractionalSlope`

Fractional slope of the data type.

`fixedexponent`

exponent of the slope of the data type.

`bias`

Bias of the scaling of the data type.

`obeyDataTypeOverride`

`true` indicates that the **Data Type Override** setting for the subsystem is to be obeyed. Depending on the value of **Data Type Override**, the resulting data type could be `True Doubles`, `True Singles`, `ScaledDouble`, or the fixed-point data type specified by the other arguments of the function.

`false` indicates that the **Data Type Override** setting is to be ignored.

## Description

This method registers a fixed-point data type with Simulink software and returns a data type ID. The data type ID can be used to specify the data types of input and output ports, run-time parameters, and DWork states. It can also be used with all the standard data type access methods defined for instances of this class, such as “`DatatypeSize`”.

Use this function if you want to register a fixed-point data type by specifying the word length, fractional slope, fixed exponent, and bias. Alternatively, you can use one of the other fixed-point registration functions:

- Use “`RegisterDataTypeFxpBinaryPoint`” to register a data type with binary point-only scaling.
- Use “`RegisterDataTypeFxpSlopeBias`” to register a data type with [Slope Bias] scaling.

# Simulink.MSFcnRunTimeBlock

---

If the registered data type is not one of the Simulink built-in data types, a Fixed-Point Designer license is checked out.

---

RegisterDataTypeFxpSlopeBias

## Purpose

Register data type with [Slope Bias] scaling.

## Syntax

```
dtID = RegisterDataTypeFxpSlopeBias(isSigned, wordLength,  
totalSlope, bias, obeyDataTypeOverride);
```

## Arguments

isSigned

true if the data type is signed.

false if the data type is unsigned.

wordLength

Total number of bits in the data type, including any sign bit.

totalSlope

Total slope of the scaling of the data type.

bias

Bias of the scaling of the data type.

obeyDataTypeOverride

true indicates that the **Data Type Override** setting for the subsystem is to be obeyed. Depending on the value of **Data Type Override**, the resulting data type could be **True Doubles**, **True Singles**, **ScaledDouble**, or the fixed-point data type specified by the other arguments of the function.

false indicates that the **Data Type Override** setting is to be ignored.

## Description

This method registers a fixed-point data type with Simulink software and returns a data type ID. The data type ID can be used to specify

the data types of input and output ports, run-time parameters, and DWork states. It can also be used with all the standard data type access methods defined for instances of this class, such as “DatatypeSize” on page 6-271.

Use this function if you want to register a fixed-point data type with [Slope Bias] scaling. Alternatively, you can use one of the other fixed-point registration functions:

- Use “RegisterDataTypeFxpBinaryPoint” to register a data type with binary point-only scaling.
- Use “RegisterDataTypeFxpFSlopeFixexpBias” to register a data type by specifying the word length, fractional slope, fixed exponent, and bias

If the registered data type is not one of the Simulink built-in data types, a Fixed-Point Designer license is checked out.

---

SetAccelRunOnTLC

### **Purpose**

Specify whether to use block’s TLC file to generate code for the Accelerator mode of Simulink software.

### **Syntax**

```
SetAccelRunOnTLC(bVal);
```

### **Arguments**

bVal

May be 'true' (use TLC file) or 'false' (run block in interpreted mode).

### **Description**

Specify if the block should use its TLC file to generate code that runs with the accelerator. If this option is 'false', the block runs in interpreted mode. See the S-function *matlabroot/toolbox/simulink/blocks/msfcn\_times\_two.m* in the Simulink model *msfcndemo\_timestwo* for an example.

# Simulink.MSFcnRunTimeBlock

---

---

SetPreCompInpPortInfoToDynamic

**Purpose**

Set precompiled attributes of this block's input ports to be inherited.

**Syntax**

SetPreCompInpPortInfoToDynamic;

**Description**

Initialize the compiled information (dimensions, data type, complexity, and sampling mode) of this block's input ports to be inherited. See the S-function *matlabroot/toolbox/simulink/simdemos/simfeatures/adapt\_lms.m* in the Simulink model *sldemo\_msfcn\_lms* for an example.

---

SetPreCompOutPortInfoToDynamic

**Purpose**

Set precompiled attributes of this block's output ports to be inherited.

**Syntax**

SetPreCompOutPortInfoToDynamic;

**Description**

Initialize the compiled information (dimensions, data type, complexity, and sampling mode) of the block's output ports to be inherited. See the S-function *matlabroot/toolbox/simulink/simdemos/simfeatures/adapt\_lms.m* in the Simulink model *sldemo\_msfcn\_lms* for an example.

---

SetPreCompPortInfoToDefaults

**Purpose**

Set precompiled attributes of this block's ports to the default values.

**Syntax**

SetPreCompPortInfoToDefaults;

## Description

Initialize the compiled information (dimensions, data type, complexity, and sampling mode) of the block's ports to the default values. By default, a port accepts a real scalar sampled signal with a data type of double.

---

SetSimViewingDevice

## Purpose

Specify whether this block is a viewer.

## Syntax

```
SetSimViewingDevice(bVal);
```

## Arguments

bVal

May be 'true' (is a viewer) or 'false' (is not a viewer).

## Description

Specify if the block is a viewer/scope. If this flag is specified, the block will be used only during simulation and automatically stubbed out in generated code.

---

SupportsMultipleExecInstances

## Purpose

Specify whether or not a For Each Subsystem supports an S-function inside of it.

## Syntax

```
SupportsMultipleExecInstances(bVal);
```

## Arguments

bVal

May be 'true' (S-function is supported) or 'false' (S-function is not supported).

## Description

Specify if an S-function can operate within a For Each Subsystem.

# Simulink.MSFcnRunTimeBlock

---

---

WriteRTWParam

## **Purpose**

Write a custom parameter to the Simulink Coder information file used for code generation.

## **Syntax**

WriteRTWParam(pType, pName, pVal)

## **Arguments**

pType

Type of the parameter to be written. Valid values are 'string' and 'matrix'.

pName

Name of the parameter to be written.

pVal

Value of the parameter to be written.

## **Description**

Use in the WriteRTW method of the MATLAB S-function to write out custom parameters. These parameters are generally settings used to determine how code should be generated in the TLC file for the S-function. See the S-function *matlabroot/toolbox/simulink/simdemos/simfeatures/adapt\_lms.m* in the Simulink model *sldemo\_msfcn\_lms* for an example.

**Purpose** Specify data type


**Description** This class lets you specify a data type as follows:

- 1** Create an instance of this class in the MATLAB base workspace or a model workspace. To create a numeric type in a model workspace, you must disable the **Is alias** option.
- 2** Set object properties to the properties of the custom data type.
- 3** Assign the data type to all signals and parameters of your model that you want to conform to the data type.

Assigning a data type in this way allows you to change the data types of the signals and parameters in your model by changing the properties of the object that describe them. You do not have to change the model itself.

# Simulink.NumericType

## Property Dialog Box

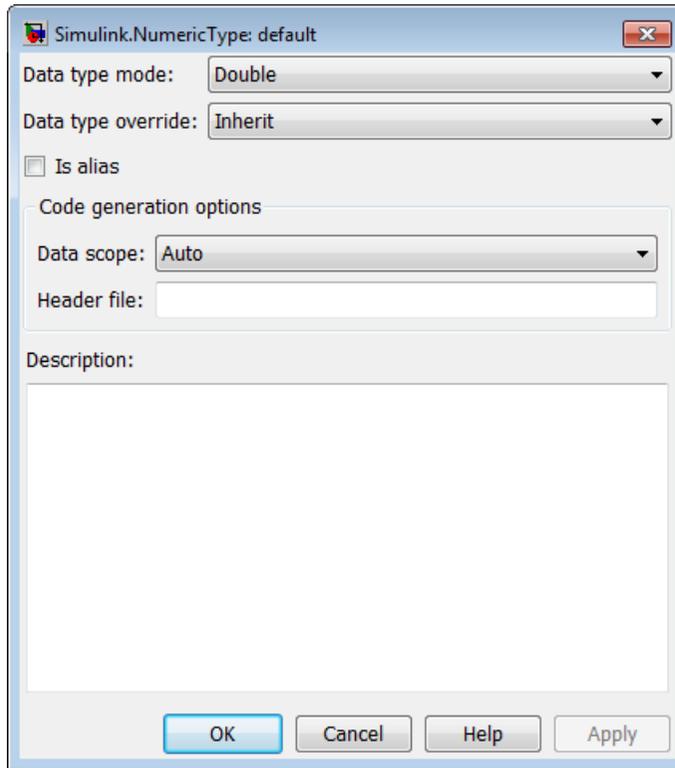

### Data type mode

Data type of this numeric type. The options are

Option	Description
Double	Same as the MATLAB double type.
Single	Same as the MATLAB single type.
Boolean	Same as the MATLAB boolean type.

Option	Description
Fixed-point: unspecified scaling	A fixed-point data type with unspecified scaling.
Fixed-point: binary point scaling	A fixed-point data type with binary-point scaling.
Fixed-point: slope and bias scaling	A fixed-point data type with slope and bias scaling.

Selecting a data type mode causes Simulink software to enable controls on the dialog box (see below) that apply to the mode and to disable other controls that do not apply. Selecting a fixed-point data type mode might, depending on the other dialog box options that you select, cause the model to run only on systems that have a Fixed-Point Designer option installed.

### Data type override

Data type override setting for this numeric type. The options are

Option	Description
Inherit (default)	Data type override setting for the context in which this numeric type is used (block, signal, Stateflow chart in Simulink) applies to this numeric type.
Off	Data type override setting does not affect this numeric type.

### Is alias

If this option is selected for a workspace object of this type, Simulink software uses the name of the object as the data type for all objects that specify the object as its data type. Otherwise,

# Simulink.NumericType

---

Simulink software uses the data type mode of the data type as its name, or, if the data type mode is a fixed-point mode, Simulink software generates a name that encodes the type's properties, using the encoding specified by the Fixed-Point Designer product.

## Data scope

Specifies whether the data type definition should be imported from, or exported to, a header file during code generation. The possible values are:

Value	Action
Auto (default)	If no value is specified for <b>Header file</b> , export the type definition to <i>model_types.h</i> , where <i>model</i> is the model name.  If a value is specified for <b>Header file</b> , import the data type definition from the specified header file.
Exported	Export the data type definition to a header file, which can be specified in the <b>Header file</b> field. If no value is specified for <b>Header file</b> , the header file name defaults to <i>type.h</i> , where <i>type</i> is the data type name.
Imported	Import the data type definition from a header file, which can be specified in the <b>Header file</b> field. If no value is specified for <b>Header file</b> , the header file name defaults to <i>type.h</i> , where <i>type</i> is the data type name.

## Header file

Name of a C header file from which a data type definition is imported, or to which a data type definition is exported, based on the value of **Data scope**. If this field is specified, the specified name is used during code generation for importing or exporting. If this field is empty, the value defaults to *type.h* if **Data scope**

equals Imported or Exported, or defaults to *model\_types.h* if **Data scope** equals Auto.

**Description**


Description of this data type. This field is intended for use in documenting this data type. Simulink software ignores it.

**Signedness**

Specifies whether the data type is signed or unsigned, or inherits its signedness. Set the option to Signed, Unsigned, or Auto. This option is enabled only for fixed-point data type modes.

# Simulink.NumericType

---

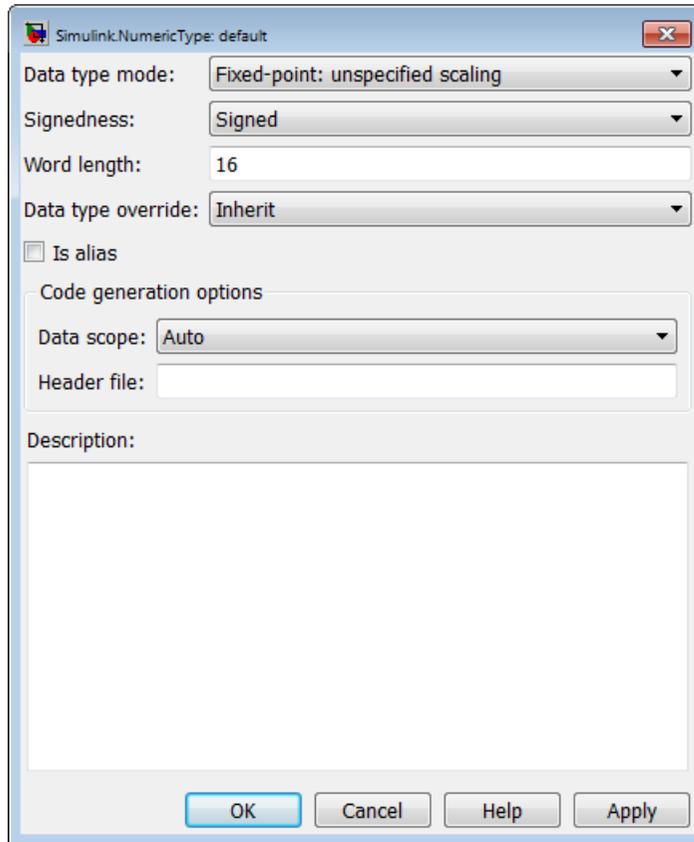


## **Word-Length**

Word length in bits of the fixed-point data type. This option is enabled only for fixed-point data type modes.

## **Fraction length**


Number of bits to the right of the binary point. This option is enabled only if the data type mode is **Fixed-point: binary point scaling**.

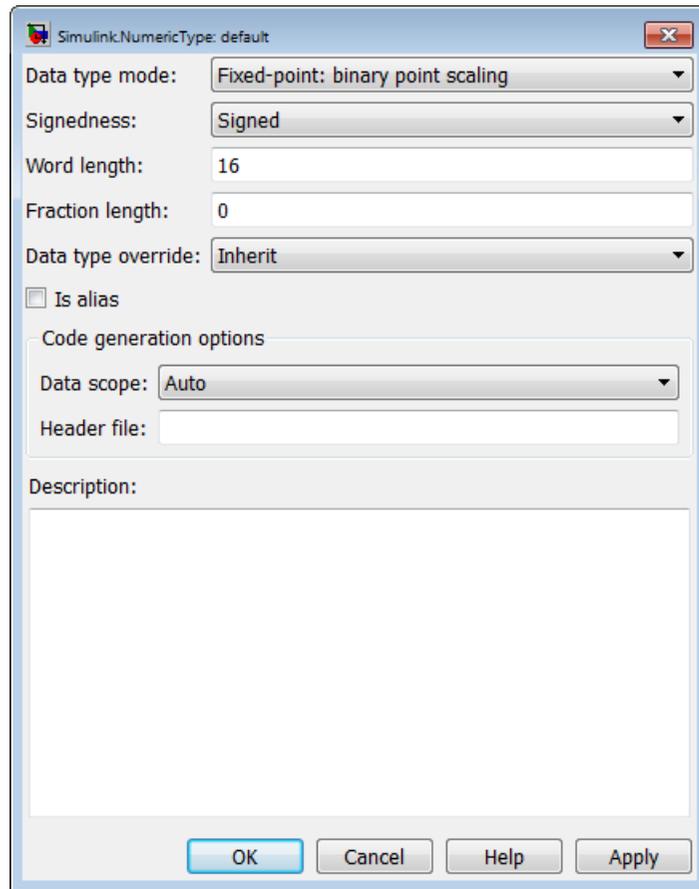

## Slope

Slope for slope and bias scaling. This option is enabled only if the data type mode is Fixed-point: slope and bias scaling.

# Simulink.NumericType

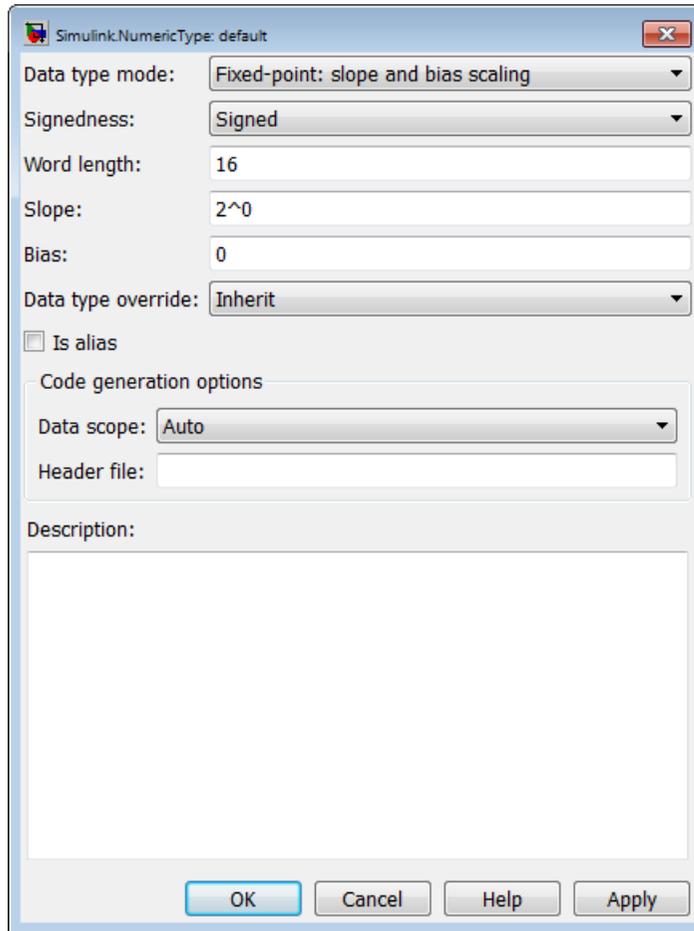

## Bias

Bias for slope and bias scaling. This option is enabled only if the data type mode is Fixed-point: slope and bias scaling. See the preceding figure.

## Properties

Name	Access	Description
Bias	RW	Bias used for slope and bias scaling of a fixed-point data type. This field is intended for use by the Fixed-Point Designer product. (Bias)
DataScope	RW	A string specifying whether the data type definition should be imported from, or exported to, a header file during code generation. (Data scope)
DataTypeMode	RW	String that specifies the data type mode of this numeric type. Valid values are 'Double', 'Boolean', 'Single', 'Fixed-point: unspecified scaling', 'Fixed-point: binary point scaling', and 'Fixed-point: slope and bias scaling'. (Data type mode)
DataTypeOverride	RW	String that specifies the data type override mode. Valid values are Inherit and Off. (Data type override)
Description	RW	Description of this data type. (Description)

# Simulink.NumericType

Name	Access	Description
Fixedexponent	RW	Exponent used for binary point scaling. This property equals <code>-FractionLength</code> . Setting this property causes Simulink software to set the <code>FractionLength</code> and <code>Slope</code> properties accordingly, and vice versa. This property applies only if the <code>DataTypeMode</code> is <code>Fixed-point: binary point scaling</code> or <code>Fixed-point: slope and bias scaling</code> . It does not appear on the object's Property dialog box, but can be accessed from the MATLAB command prompt.
FractionLength	RW	Integer that specifies the size in bits of the fractional portion of the fixed-point number. This property equals <code>-Fixedexponent</code> . Setting this property causes Simulink software to set the <code>Fixedexponent</code> property accordingly, and vice versa. This field is intended for use by the Fixed-Point Designer product. (Fraction length)
HeaderFile	RW	A string that specifies the name of a C header file from which a data type definition is imported, or to which a data type definition is exported, during code generation. (Header file)
IsAlias	RW	Integer that specifies whether to use the name of this object as the name of the data type that it specifies. Valid values are 1 (yes) or 0 (no). (Is alias)

Name	Access	Description
Signedness	RW	Boolean that specifies whether this data type is signed, unsigned, or inherits its signedness. Valid values are 1 (signed), 0 (unsigned), or Auto (inherit signedness). (Signedness)
Slope	RW	Slope for slope and bias scaling of fixed-point numbers. This property equals $\text{SlopeAdjustmentFactor} * 2^{\text{Fixedexponent}}$ . If $\text{SlopeAdjustmentFactor}$ is 1.0, Simulink software displays the value of this field as $2^{\text{SlopeAdjustmentFactor}}$ . Otherwise, it displays it as a numeric value. Setting this property causes Simulink software to set the <code>Fixedexponent</code> and <code>SlopeAdjustmentFactor</code> properties accordingly, and vice versa. This property appears only if <code>DataTypeMode</code> is <code>Fixed-point: slope and bias scaling</code> . (Slope)
SlopeAdjustmentFactor	RW	Slope for slope and bias scaling of fixed-point numbers. Setting this property causes Simulink software to adjust the <code>Slope</code> property accordingly, and vice versa. This property applies only if <code>DataTypeMode</code> is <code>Fixed-point: slope and bias scaling</code> . It does not appear on the object's Property dialog box, but can be accessed from the MATLAB command prompt.
WordLength	RW	Integer that specifies the word size of this data type. This field is intended for use by the Fixed-Point Designer product. This

# Simulink.NumericType

Name	Access	Description
		property appears only if DataTypeMode is Fixed-point. (Word Length)

## Methods

Name	Description
isboolean	Determine whether data type is Boolean Returns 1 when the DataTypeMode is 'Boolean', 0 otherwise.
isdouble	Determine whether data type is double precision Returns 1 when the DataTypeMode is 'Double', 0 otherwise.
isfixed	Determine whether data type is fixed point Returns 1 when the DataTypeMode is any of the fixed-point options, 0 otherwise. The fixed-point options are: <ul style="list-style-type: none"><li>• 'Fixed-point: unspecified scaling'</li><li>• 'Fixed-point: binary point scaling'</li><li>• 'Fixed-point: slope and bias scaling'</li></ul>
isfloat	Determine whether data type is floating point Returns 1 when the DataTypeMode is 'Double' or 'Single', 0 otherwise.

Name	Description
isscalingbinarypoint	<p>Determine whether data type has binary point scaling</p> <p>Returns 1 when the data type has binary point scaling or trivial slope and bias scaling, 0 otherwise. Slope and bias scaling is trivial when the slope is an integer power of two and the bias is zero.</p> <p>DataTypeMode is 'Fixed-point: binary point scaling'</p>
isscalingslopebias	<p>Determine whether data type has nontrivial slope and bias scaling</p> <p>Returns 1 when the data type has nontrivial slope and bias scaling, 0 otherwise. Slope and bias scaling is trivial when the slope is an integer power of two and the bias is zero.</p> <p>DataTypeMode is 'Fixed-point: slope and bias scaling'</p>
isscalingunspecified	<p>Determine whether data type has unspecified scaling</p> <p>Returns 1 when the data type is fixed point and its scaling has not been specified, 0 otherwise.</p> <p>DataTypeMode is 'Fixed-point: unspecified scaling'</p>
issingle	<p>Determine whether data type is single-precision</p> <p>Returns 1 when the DataTypeMode is 'Single', 0 otherwise.</p>

# Simulink.NumericType

---

## **See Also**

“Generate Code Including User-Defined Data Types” in the Embedded Coder documentation

## Purpose

Specify value, value range, data type, and other properties of block parameter

## Description

This class enables you to create workspace objects that you can then use as the values of block parameters — for example, the value of the Gain parameter of a Gain block. You can create a `Simulink.Parameter` object in the base MATLAB workspace or a model workspace. However, to create the object in a model workspace, you must set the object storage class to `Auto`.

Parameter objects let you specify not only the value of a parameter but also other information about the parameter, such as the parameter's purpose, its dimensions, or its minimum and maximum values. Some Simulink products use this information. For example, Simulink and Simulink Coder products use information specified by `Simulink.Parameter` objects to determine whether the parameter is tunable (see “Tunable Parameters” in *Simulink User's Guide*).

Simulink performs range checking of parameter values. The software alerts you when the parameter object value lies outside a range that corresponds to its specified minimum and maximum values and data type.

You can use the **Simulink.Parameter** dialog box to define a `Simulink.Parameter` object. To open the dialog box, in the Model Explorer, select the base workspace or a model workspace and select **Add > Simulink Parameter**.

# Simulink.Parameter

## Property Dialog Box

Simulink.Parameter: Param

Value: [ ]

Data type: auto >>

Dimensions: [0 0] Complexity: real

Minimum: [ ] Maximum: [ ]

Units:

Code generation options

Storage class: Auto

Alignment: -1

Description:

OK Cancel Help Apply

### Value

Value of the parameter. You can use MATLAB expressions to specify the numeric type, dimensions, and data type of the parameter (see “Data Types Supported by Simulink”). You can also specify fixed-point values for block parameters (see “Specify Fixed-Point Values Directly” in the Fixed-Point Designer documentation). The following examples illustrate this syntax.

Expression	Description
<code>single(1.0)</code>	Specifies a single-precision value of 1.0
<code>int8(2)</code>	Specifies an 8-bit integer of value 2
<code>int32(3+2i)</code>	Specifies a complex value whose real and imaginary parts are 32-bit integers
<code>fi(2.3,true,16,3)</code>	Specifies a signed fixed-point numeric object having a value of 2.3, a word length of 16 bits, and a fraction length of 3.  (Requires Fixed-Point Designer)
<code>struct('A',20,'B',5)</code>	Specifies a structure for a bus with two signals, A and B, with double-precision values of 20 and 5, respectively.  The shape and attributes of the structure must match the shape and attributes of the elements in the bus. For information about specifying an initial condition structure, see “Specify Initial Conditions for Bus Signals”.

---

**Note** Specifying a typed expression as the **Value** property of the parameter object overrides the current setting of the **Data type** property.

---

If **Value** evaluates to a MATLAB structure, then in the **Configuration Parameters > Diagnostics > Data Validity** pane, set “Underspecified initialization detection” to **simplified**.

### Data type

Data type of the parameter. You can either select a data type from the adjacent pulldown menu or enter a string. If you select **auto** (the default), the block that references the parameter object

# Simulink.Parameter

---

determines the data type of the variable used to represent this parameter in code generated from the model. If you enter a string, it must evaluate to one of the following:

- A built-in data type that Simulink supports (see “Data Types Supported by Simulink” ).
- A `Simulink.NumericType` object
- A `Simulink.AliasType` object
- A `Simulink.Bus` object (using the `Bus: <object name>` option)

You can use the Bus Editor to define or edit a `Simulink.Parameter` object with a bus object for its data type. Use one of these approaches:

- Select the **File > Create/Edit a Simulink.Parameter object** menu item.
- Click the **Create/Edit a Simulink.Parameter object** icon () from the toolbar.

You can then edit the `Simulink.Parameter` object in the MATLAB Editor and evaluate the code to create or update the values for this `Simulink.Parameter` object.

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Data type** parameter. (See “Specify Data Types Using Data Type Assistant” in *Simulink User’s Guide*.)

---

**Note** If you specify a parameter object data type using the **Data type** property, it overrides any typed expression in the **Value** property and changes the value to be untyped.

---

## Units

Measurement units in which this value is expressed (for example, inches). This field is intended for use in documenting this parameter. Simulink ignores it.

## Dimensions

Dimensions of the parameter. Simulink determines the dimensions from the entry in the **Value** field of this parameter. You cannot set this field yourself.

## Complexity

Numeric type (i.e., real or complex) of the parameter. Simulink determines the numeric type of this parameter from the entry in the **Value** field of this parameter. You cannot set this field yourself.

## Minimum

Minimum value that the parameter can have. The default value is [ ] (unspecified). Specify a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for a parameter, do not set the minimum value for bus data on the parameter property dialog box. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum property of a bus element, see `Simulink.BusElement`.

---

Simulink generates a warning if the parameter value is less than the minimum value or if the minimum value is outside the range of the parameter data type. When updating the diagram or starting a simulation, Simulink generates an error in these cases.

## Maximum

Maximum value that the parameter can have. The default value is [ ] (unspecified). Specify a finite, real, double, scalar value.

# Simulink.Parameter

---

---

**Note** If you specify a bus object as the data type for a parameter, do not set the maximum value for bus data on the parameter property dialog box. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum property of a bus element, see `Simulink.BusElement`.

---

Simulink generates a warning if the parameter value is greater than the maximum value or if the maximum value is outside the range of the parameter data type. When updating the diagram or starting a simulation, Simulink generates an error in these cases.

## Storage class

Storage class of this parameter. Simulink code generation products use this property to allocate memory for this parameter in generate code. For more information, see “Tunable Parameter Storage Classes”.

## Alias

Alternate name for this parameter. Simulink ignores this setting.

## Alignment

Data alignment boundary, specified in number of bytes. The starting memory address for the data allocated for the parameter will be a multiple of the **Alignment** setting. The default value is -1, which specifies that the code generator should determine an optimal alignment based on usage. Otherwise, specify a positive integer that is a power of 2, not exceeding 128. This field is intended for use by Simulink Coder software (see “Configure Data Alignment for Function Implementations”). Simulink software ignores this setting.

## Description

Description of this parameter. This field is intended for use in documenting this parameter. Simulink ignores it.

## Properties

Name	Access	Description
Value	RW	Value of this parameter. (Value)
CoderInfo	R	Information used by Simulink Coder software for generating code for this parameter. The value of this property is an object of <code>Simulink.ParamCoderInfo</code> class.
Description	RW	String that describes this parameter. This property is intended for user use. Simulink itself does not use it. (Description)
DataType	RW	String specifying the data type of this parameter. (Data type)
Min	RW	Minimum value that this parameter can have. (Minimum)
Max	RW	Maximum value that this parameter can have. (Maximum)
DocUnits	RW	Measurement units in which this parameter's value is expressed. (Units)
Complexity	RO	String specifying the numeric type of this parameter. Valid values are 'real' or 'complex'. (Complexity)
Dimensions	RO	Vector specifying the dimensions of this parameter. (Dimensions)

# Simulink.ParamCoderInfo

---

**Purpose** Specify information needed to generate code for parameter

**Description** Simulink software creates an instance of this class for each instance of a `Simulink.Parameter` object that it creates. Simulink software uses the `Simulink.ParamCoderInfo` object to store information needed to generate code for the parameter specified by the `Simulink.Parameter` object.

You can set the properties of an instance of this class via the `CoderInfo` property or the property dialog box of the `Simulink.Parameter` object that uses it. For example, the following MATLAB expression sets the `StorageClass` property of a `Simulink.ParamCoderInfo` object used by a parameter object name `myparam`.

```
myparam.CoderInfo.StorageClass = 'exportedGlobal';
```

**Property Dialog Box** Use the Code Generation Options section of the `Simulink.Parameter` property dialog box to set the `StorageClass`, `Alias`, and `Alignment` properties of objects of this class.

## Properties

Name	Description
Alias	Alternate name for this parameter.
Alignment	Data alignment boundary for this parameter. See “Configure Data Alignment for Function Implementations” in the Embedded Coder documentation for more information.
CustomAttributes	Custom storage class attributes of this parameter. See “Introduction to Custom Storage Classes” in the Embedded Coder documentation for more information.

<b>Name</b>	<b>Description</b>
CustomStorageClass	Custom storage class of this parameter.
StorageClass	Storage class of this parameter. For more information, see “Parameters” in the Simulink Coder documentation.

# Simulink.Preferences

---

**Purpose** Set Model Advisor preferences

**Description** Use instances of this class to set Model Advisor preferences.

## Property Summary

Property	Description	Values
ShowByProduct	String specifying the display of the <b>By Product</b> folder in the Model Advisor window. The default value is .	{true}   false
ShowByTask	String specifying the display of the <b>By Task</b> folder in the Model Advisor window. The default value is true.	{true}   false
ShowSourceTab	String specifying the display of the <b>Source</b> tab in the Model Advisor window. The default value is false. When you click the <b>Source</b> tab, the Model Advisor window displays the check Title, TitleID, and location of the MATLAB source code for the check.	true   {false}
ShowExclusionTab	String specifying the display of the <b>Exclusions</b> tab in the Model Advisor window. The default value is false. When you click the <b>Exclusions</b> tab, the Model Advisor window displays checks that are excluded from the Model Advisor analysis.	true   {false}

Property	Description	Values
ShowAccordion	String specifying the display of the <b>Code Generation Advisor</b> , <b>Upgrade Advisor</b> , and <b>Performance Advisor</b> in the Model Advisor window. The default value is <code>false</code> . You can use these advisors to help configure your model for code generation, upgrade your model for the current release, or improve performance.	<code>true</code>   <code>{false}</code>
ShowExclusionsInReport	String specifying to include exclusions in the Model Advisor report. The default value is <code>true</code> .	<code>{true}</code>   <code>false</code>

## Methods

Name	Description
<code>load</code>	Load Model Advisor preferences.
<code>save</code>	Save Model Advisor preferences.

## Examples

This example shows how to not display the **By Product** folder in the Model Advisor window:

```
mp = ModelAdvisor.Preferences;
mp.load;
mp.ShowByProduct = false;
mp.save
```

## Alternatives

You can set the Model Advisor preferences by using the Model Advisor Preferences dialog box:

# Simulink.Preferences

---

- On the Model Advisor menu, select **Settings > Preferences**.
- From the Model Editor, select **Analysis > Model Advisor > Preferences**.

## **See Also**

“Verify Model Syntax”

## Purpose

Allow Level-2 MATLAB S-function and other MATLAB programs to get information about block while simulation is running

## Description

This class allows a Level-2 MATLAB S-function or other MATLAB program to obtain information about a block. Simulink software creates an instance of this class or a derived class for each block in a model. Simulink software passes the object to the callback methods of Level-2 MATLAB S-functions when it updates or simulates a model, allowing the callback methods to get block-related information from and provide such information to Simulink software. See “Write Level-2 MATLAB S-Functions” in Writing S-Functions for more information. You can also use instances of this class in MATLAB programs to obtain information about blocks during a simulation. See “Access Block Data During Simulation” for more information.

---

**Note** Simulink.RunTimeBlock objects do not support MATLAB sparse matrices. For example, the following line of code attempts to assign a sparse identity matrix to the run-time object’s output port data. This line of code in a Level-2 MATLAB S-function produces an error:

```
block.Outputport(1).Data = speye(10);
```

---

## Parent Class

None

## Derived Classes

Simulink.MSFcnRunTimeBlock

## Property Summary

Name	Description
“BlockHandle”	Block’s handle.
“CurrentTime”	Current simulation time.

# Simulink.RunTimeBlock

---

Name	Description
“NumDworks”	Number of discrete work vectors used by the block.
“NumOutputPorts”	Number of block output ports.
“NumContStates”	Number of block’s continuous states.
“NumDworkDiscStates”	Number of block’s discrete states
“NumDialogPrms”	Number of parameters that can be entered on S-function block’s dialog box.
“NumInputPorts”	Number of block’s input ports.
“NumRuntimePrms”	Number of run-time parameters used by block.
“SampleTimes”	Sample times at which block produces outputs.

## Method Summary

Name	Description
“ContStates”	Get a block’s continuous states.
“DataTypeIsFixedPoint”	Determine whether a data type is fixed point.
“DatatypeName”	Get name of a data type supported by this block.
“DatatypeSize”	Get size of a data type supported by this block.
“Derivatives”	Get a block’s continuous state derivatives.
“DialogPrm”	Get a parameter entered on an S-function block’s dialog box.
“Dwork”	Get one of a block’s DWork vectors.

Name	Description
“FixedPointNumericType”	Determine the properties of a fixed-point data type.
“InputPort”	Get one of a block’s input ports.
“OutputPort”	Get one of a block’s output ports.
“RuntimePrm”	Get one of the run-time parameters used by a block.

## Properties

---

BlockHandle

**Description**

Block’s handle.

**Access**

RO

---

CurrentTime

**Description**

Current simulation time.

**Access**

RO

---

NumDworks

**Description**

Number of data work vectors.

**Access**

RW

**See Also**

ssGetNumDWork

# Simulink.RunTimeBlock

---

---

NumOutputPorts

**Description**

Number of output ports.

**Access**

RW

**See Also**

ssGetNumOutputPorts

---

NumContStates

**Description**

Number of continuous states.

**Access**

RW

**See Also**

ssGetNumContStates

---

NumDworkDiscStates

**Description**

Number of discrete states. In a MATLAB S-function, you need to use DWorks to set up discrete states.

**Access**

RW

**See Also**

ssGetNumDiscStates

---

NumDialogPrms

**Description**

Number of parameters declared on the block's dialog. In the case of the S-function, it returns the number of parameters listed as a comma-separated list in the **S-function parameters** dialog field.

**Access**

RW

**See Also**

ssGetNumSFcnParams

---

NumInputPorts

**Description**

Number of input ports.

**Access**

RW

**See Also**

ssGetNumInputPorts

---

NumRuntimePrms

**Description**

Number of run-time parameters used by this block. See “Run-Time Parameters” for more information.

**Access**

RW

**See Also**

ssGetNumSFcnParams

---

SampleTimes

**Description**

Block’s sample times.

**Access**

RW for MATLAB S-functions, RO for all other blocks.

# Simulink.RunTimeBlock

---

## Methods

---

ContStates

**Purpose**

Get a block's continuous states.

**Syntax**

```
states = ContStates();
```

**Description**

Get vector of continuous states.

**See Also**

ssGetContStates

---

DataTypeIsFixedPoint

**Purpose**

Determine whether a data type is fixed point.

**Syntax**

```
bVal = DataTypeIsFixedPoint(dtID);
```

**Arguments**

dtID

Integer value specifying the ID of a data type.

**Description**

Returns true if the specified data type is a fixed-point data type.

---

DatatypeName

**Purpose**

Get the name of a data type.

**Syntax**

```
name = DatatypeName(dtID);
```

**Arguments**

dtID

Integer value specifying ID of a data type.

**Description**

Returns the name of the data type specified by dtID.

**See Also**

“DatatypeSize”

---

DatatypeSize

**Purpose**

Get the size of a data type.

**Syntax**

```
size = DatatypeSize(dtID);
```

**Arguments**

dtID

Integer value specifying the ID of a data type.

**Description**

Returns the size of the data type specified by dtID.

**See Also**

“DatatypeName”

---

Derivatives

**Purpose**

Get derivatives of a block’s continuous states.

**Syntax**

```
derivs = Derivatives();
```

**Description**

Get vector of state derivatives.

**See Also**

ssGetX

---

DialogPrm

**Purpose**

Get an S-function's dialog parameters.

**Syntax**

```
param = DialogPrm(pIdx);
```

**Arguments**

pIdx

Integer value specifying the index of the parameter to be returned.

**Description**

Get the specified dialog parameter. In the case of the S-function, each DialogPrm corresponds to one of the elements in the comma-separated list of parameters in the **S-function parameters** dialog field.

**See Also**

ssGetSFcnParam, "RuntimePrm"

---

Dwork

**Purpose**

Get one of a block's DWork vectors.

**Syntax**

```
dworkObj = Dwork(dwIdx);
```

**Arguments**

dwIdx

Integer value specifying the index of a work vector.

**Description**

Get information about the DWork vector specified by dwIdx where dwIdx is the index number of the work vector. This method returns an object of type Simulink.BlockCompDworkData.

## See Also

ssGetDWork

---

FixedPointNumericType

### Purpose

Get the properties of a fixed-point data type.

### Syntax

```
eno = FixedPointNumericType(dtID);
```

### Arguments

dtID

Integer value specifying the ID of a fixed-point data type.

### Description

Returns an object of `embedded.Numeric` class that contains the attributes of the specified fixed-point data type.

---

**Note** `embedded.Numeric` is also the class of the `numericType` objects created by Fixed-Point Designer software. For information on the properties defined by `embedded.Numeric` class, see `numericType` Object Properties.

---

---

InputPort

### Purpose

Get an input port of a block.

### Syntax

```
port = InputPort(pIdx);
```

### Arguments

pIdx

Integer value specifying the index of an input port.

# Simulink.RunTimeBlock

---

## Description

Get the input port specified by `pIdx`, where `pIdx` is the index number of the input port. For example,

```
port = rto.InputPort(1)
```

returns the first input port of the block represented by the run-time object `rto`.

This method returns an object of type `Simulink.BlockPreCompInputPortData` or `Simulink.BlockCompInputPortData`, depending on whether the model that contains the port is uncompiled or compiled. You can use this object to get and set the input port's uncompiled or compiled properties, respectively.

## See Also

`ssGetInputPortSignalPtrs`, `Simulink.BlockPreCompInputPortData`, `Simulink.BlockCompInputPortData`, "OutputPort"

---

OutputPort

## Purpose

Get an output port of a block.

## Syntax

```
port = OutputPort(pIdx);
```

## Arguments

`pIdx`

Integer value specifying the index of an output port.

## Description

Get the output port specified by `pIdx`, where `pIdx` is the index number of the output port. For example,

```
port = rto.OutputPort(1)
```

returns the first output port of the block represented by the run-time object `rto`.

This method returns an object of type `Simulink.BlockPreCompOutputPortData` or `Simulink.BlockCompOutputPortData`, depending on whether the model that contains the port is uncompiled or compiled, respectively. You can use this object to get and set the output port's uncompiled or compiled properties, respectively.

### See Also

`ssGetInputPortSignalPtrs`,  
`Simulink.BlockPreCompOutputPortData`,  
`Simulink.BlockCompOutputPortData`

---

`RuntimePrm`

### Purpose

Get an S-function's run-time parameters.

### Syntax

```
param = RuntimePrm(pIdx);
```

### Arguments

`pIdx`

Integer value specifying the index of a run-time parameter.

### Description

Get the run-time parameter whose index is `pIdx`. This run-time parameter is a `Simulink.BlockData` object of type `Simulink.BlockRunTimePrmData`.

### See Also

`ssGetRunTimeParamInfo`

# Simulink.SampleTime

---

<b>Purpose</b>	Object containing sample time information
<b>Description</b>	<p>The <code>SampleTime</code> class represents the sample time information associated with an individual sample time.</p> <p>Use the methods <code>Simulink.Block.getSampleTimes</code> and <code>Simulink.BlockDiagram.getSampleTimes</code> to retrieve the values of the <code>SampleTime</code> properties for a block and for a block diagram, respectively.</p>
<b>Properties</b>	<p><b>Value</b></p> <p>A two-element array of doubles that contains the period and offset of the sample time</p> <p><b>Description</b></p> <p>A character string that describes the sample time type</p> <p><b>ColorRGBValue</b></p> <p>A 1x3 array of doubles that contains the red, green and blue (RGB) values of the sample time color</p> <p><b>Annotation</b></p> <p>A character string that represents the annotation of a specific sample time (for example, 'D1')</p> <p><b>OwnerBlock</b></p> <p>For asynchronous and variable sample times, <code>OwnerBlock</code> is a string containing the full path to the block that controls the sample time. For all other types of sample times, it is an empty string.</p> <p><b>ComponentSampleTimes</b></p> <p>If the sample time is an async union or if the sample time is hybrid and the component sample times are available, then the array <code>ComponentSampleTimes</code> contains <code>Simulink.SampleTime</code> objects.</p>

## Copy Semantics

Value. To learn how value classes affect copy operations, see Copying Objects in the MATLAB Programming Fundamentals documentation.

## Examples

Retrieve the sample time information for the 'vdp' model.

```
ts = Simulink.BlockDiagram.getSampleTimes('vdp')
```

Simulink returns:

```
ts =
```

```
1x2 Simulink.SampleTime  
Package: Simulink
```

Properties:

```
Value  
Description  
ColorRGBValue  
Annotation  
OwnerBlock  
ComponentSampleTimes
```

Methods

To examine the values of the properties:

```
ts(1), ts(2)
```

```
ans =
```

```
Simulink.SampleTime  
Package: Simulink
```

Properties:

```
Value: [0 0]  
Description: 'Continuous'  
ColorRGBValue: [0 0 0]  
Annotation: 'Cont'
```

# Simulink.SampleTime

---

```
OwnerBlock: []  
ComponentSampleTimes: {}
```

Methods

ans =

```
Simulink.SampleTime  
Package: Simulink
```

Properties:

```
Value: [Inf 0]  
Description: 'Constant'  
ColorRGBValue: [1 0.2600 0.8200]  
Annotation: 'Inf'  
OwnerBlock: []  
ComponentSampleTimes: {}
```

Methods

## See Also

```
Simulink.Block.getSampleTimes |  
Simulink.BlockDiagram.getSampleTimes
```

## Purpose

Store data logged by Scope signal viewer

## Description

---

**Note** The `Simulink.ScopeDataLogs` class is used in conjunction with the `ModelDataLogs` logging data format. The `ModelDataLogs` format is supported for backwards compatibility. The `ModelDataLogs` format will be removed in a future release.


For new models, use the `Dataset` logging format. If you use the `Dataset` format for signal logging, then Simulink does not log the signals configured to be logged in the Signal Viewer. Explicitly mark the signal for signal logging by using the Signal Properties dialog box. To access the Signal Properties dialog box, right-click a signal and from the context menu, select **Properties**.

---


Simulink software creates instances of this class to log data displayed on Scope viewers (see “Visualize Results”). In particular, if you have enabled data logging for a model, Simulink software creates an instance of this class for each scope viewer enabled for logging in the model and assigns it to a property of the model’s `Simulink.ModelDataLogs` object. The instance created for each viewer has a `Name` property whose value is the name specified on the History pane of the viewer’s parameter dialog box (see `Scope` for more information). The instance also has an `axes` property for each of the scope’s axes labeled `Axes1`, `Axes2`, etc. The value of each `axes` property is itself a `Simulink.ScopeDataLogs` object that contains `Simulink.Timeseries` objects, one for each signal displayed on the axes. The time series objects contain the signal data displayed on the axes.

# Simulink.ScopeDataLogs


Consider, for example, the following model:

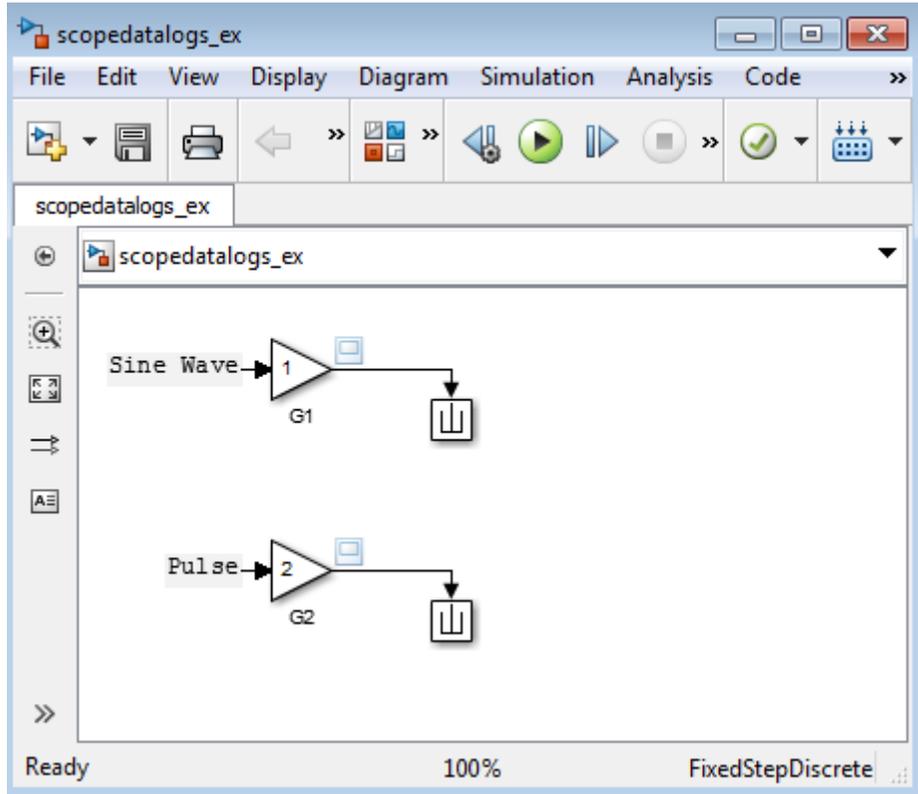

This model displays signals out1 and out2 on a scope viewer that has only one set of axes.

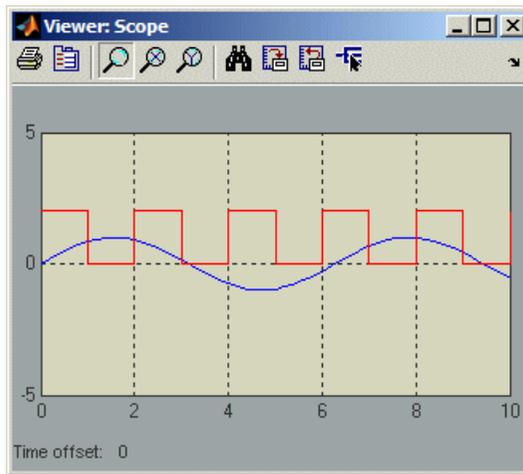

The model enables data logging for the scope viewer under the variable name ScopeData and for the model as a whole under the default variable name logout.

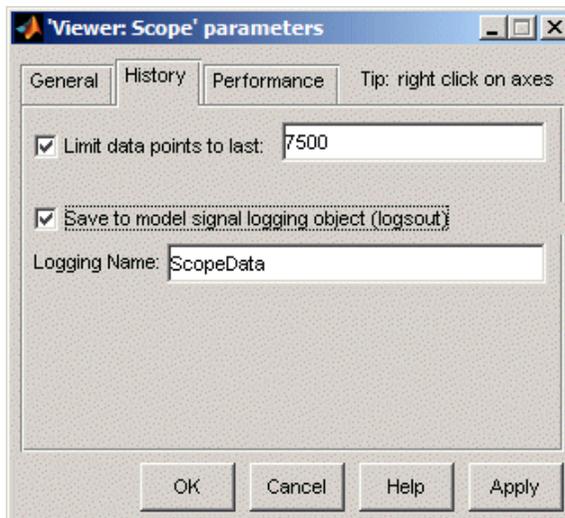

# Simulink.ScopeDataLogs

---

After simulation of the model, the MATLAB workspace contains a `Simulink.ModelDataLogs` object named `logout` containing a `Simulink.ScopeDataLogs` object that in turn contains a `Simulink.ScopeDataLogs` object that contains `Simulink.Timeseries` objects that contain the times series data for signals `out1` and `out 2`.

You can use Simulink data object dot notation to access the data, e.g.,

```
>> logout.ScopeData.axes1
```

```
ans =
```

```
Simulink.ScopeDataLogs (axes1):
```

Name	elements	Simulink Class
out1	1	Timeseries
out2	1	Timeseries

## See Also

“Signal Logging”, `Simulink.ModelDataLogs`, `Simulink.SubsysDataLogs`, `Simulink.Timeseries`, `Simulink.TsArray`, `Simulink.SimulationData.Dataset`, `who`, `whos`, `unpack`

# Simulink.scopes.TimeScopeConfiguration

---

<b>Purpose</b>	Configure Time Scope for programmatic access
<b>Description</b>	The <code>Simulink.scopes.TimeScopeConfiguration</code> object contains the scope configuration information for the Time Scope block.
<b>Construction</b>	Call the <code>get_param</code> function, specifying a Time Scope block. <code>htsc = get_param(gcbh, 'ScopeConfiguration')</code> constructs a new Time Scope Configuration object.
<b>Properties</b>	<p><b>ActiveDisplay</b></p> <p>Active display for display-specific properties</p> <p>Specify the active display as an integer to get and set relevant properties. The number of a display corresponds to its column-wise placement index. Set this property to control which display should have its axes colors, line properties, marker properties, and visibility changed. Tunable</p> <p>Setting this property controls which display is used for <code>ShowGrid</code>, <code>ShowLegend</code>, <code>Title</code>, <code>PlotAsMagnitudePhase</code>, <code>YLabel</code>, and <code>YLimits</code>.</p> <p><b>Default:</b> 1</p> <p><b>AxesScaling</b></p> <p>Specify how axes should be scaled when plotting data</p> <p>Specify when the scope should automatically scale the axes. You can select one of the following options:</p> <ul style="list-style-type: none"><li>• <b>Manual</b> — When you select this option, the scope does not automatically scale the axes. You can manually scale the axes in any of the following ways:<ul style="list-style-type: none"><li>▪ Select <b>Tools &gt; Axes Scaling Properties</b>.</li><li>▪ Press one of the <b>Scale Axis Limits</b> toolbar buttons.</li></ul></li></ul>

# Simulink.scopes.TimeScopeConfiguration

---

- When the scope figure is the active window, press **Ctrl** and **A** simultaneously.
- Auto — When you select this option, the scope scales the axes as needed, both during and after simulation. Selecting this option shows the **Do not allow Y-axis limits to shrink** check box.
- After N Updates — Selecting this option causes the scope to scale the axes after a specified number of updates. Selecting this option shows the **Number of updates** edit box.

By default, this property is set to Auto. This property is Tunable.

## BufferLength

Number of data points in buffer

Specify the size of the buffer that the scope holds in its memory cache. If your signal has  $M$  rows of data and  $N$  data points in each row,  $M \times N$  is the number of data points per time step. Multiply this result by the number of time steps for your model to obtain the required buffer length. For example, if you have 10 rows of data with each row having 100 data points and your run will be 10 time steps, you should enter 10,000 (which is  $10 \times 100 \times 10$ ) as the buffer length.

**Default:** 50000

## DataLogging

Specify whether to log data to the workspace

Set this property to `true` to log data to the workspace. Data is logged as a dataset object. See `Simulink.SimulationData.Dataset` for information. Set this property to `false` to prevent the scope from logging data.

**Default:** `false`

## DataLoggingVariableName

Name of variable for logged data

Specify as a string the name of the variable in the MATLAB workspace to which the scope logs data. Any existing variable is overwritten.

**Default:** ScopeData

## **DataLoggingLimitDataPoints**

Specify whether to limit number of logged data points

Set this property to `true` to limit the number of data points at the end of the simulation data that the scope logs. Set this property to `false` to log all data points.

**Default:** `false`

## **DataLoggingMaxPoints**

Maximum number of data points to log

Specify the maximum number of data points at the end of the data to log to the workspace.

**Default:** 5000

## **DataLoggingDecimateData**

Specify whether to decimate logged data

Set this property to `true` to decimate logged data. Set this property to `false` to log all data points.

**Default:** `false`

## **DataLoggingDecimation**

Logged data decimation rate

# Simulink.scopes.TimeScopeConfiguration

---

Specify the rate at which to log decimation data. The scope logs every Nth data point, where N is the decimation factor you specify.

**Default:** 2

## LayoutDimensions

Layout grid dimensions

Specify the layout grid dimensions as a 2-element vector: [numberOfRows, numberOfColumns]. You can use no more than four rows or four columns. This property is Tunable.

**Default:** [1, 1]

## MaximizeAxes

Maximize axes control

Specify whether to display the scope in maximized axes mode. In this mode, each of the axes is expanded to fit into the entire display. To conserve space, labels do not appear in each display. Instead, tick-mark values appear on top of the plotted data. You can select one of the following options:

- **Auto** — In this mode, the axes appear maximized in all displays only if the `Title` and `YLabel` properties are empty for every display. If you enter any value in any display for either of these properties, the axes are not maximized.
- **On** — In this mode, the axes appear maximized in all displays. Any values entered into the `Title` and `YLabel` properties are hidden.
- **Off** — In this mode, none of the axes appear maximized.

This property is Tunable.

**Default:** 'Auto'

## **Name**

Caption to display on the Time Scope window

Specify as a string the caption to display on the scope window. This property is Tunable.

**Default:** 'Time Scope'

## **NumInputPorts**

Number of input signals

Specify the number of input signals to display on the scope as a positive integer. You must invoke the `step` method with the same number of inputs as the value of this property.

**Default:** 1

## **OpenAtSimulationStart**

Open the scope when starting the simulation

Set this property to `true` to open the scope when the simulation starts. Set this property to `false` to prevent the scope from opening at the start of simulation.

**Default:** `true`

## **PlotAsMagnitudePhase**

Plot signal magnitude and phase

When you set this property to `true`, the scope plots the magnitude and phase of the input signal on two separate axes within the same active display. When you set this property to `false`, the scope plots the real and imaginary parts of the input signal on two separate axes within the same active display. This property is particularly useful for complex-valued input signals. Selecting this check box affects the phase for real-valued input signals. When the amplitude of the input signal is nonnegative, the phase

# Simulink.scopes.TimeScopeConfiguration

---

is 0 degrees. When the amplitude of the input signal is negative, the phase is 180 degrees. This property is Tunable.

When set, `ActiveDisplay` controls which displays are updated. The active display shows the magnitude of the input signal on the top axes and its phase, in degrees, on the bottom axes.

**Default:** false

## Position

Time Scope window position in pixels

Specify, in pixels, the size and location of the scope window as a 4-element double vector of the form, `[left bottom width height]`. You can place the scope window in a specific position on your screen by modifying the values to this property. This property is Tunable.

**Default:** The default depends on your screen resolution. By default, the Time Scope window appears in the center of your screen with a width of 410 pixels and height of 300 pixels.

## ShowGrid

Option to enable or disable grid display

When you set this property to `true`, the grid appears. When you set this property to `false`, the grid is hidden. This property is Tunable.

When set, `ActiveDisplay` controls which display is updated.

**Default:** false

## ShowLegend

When you set this property to `true`, the scope displays a legend with automatic string labels for each input channel. When you set this property to `false`, the scope does not display a legend. This

property applies only when you set the `SpectrumType` property to 'Power' or 'Power density'. This property is Tunable.

See `FrameBasedProcessing` for information on input channels.

When set, `ActiveDisplay` controls which display is updated.

**Default:** false

## TimeAxisLabels

*Time*-axis labels

Specify how *time*-axis labels should appear in the scope displays as one of 'All', 'Bottom', or 'None'.

- When you set this property to 'All', *time*-axis labels appear in all displays.
- When you set this property to 'Bottom', *time*-axis labels appear in the bottom display of each column.
- When you set this property to 'None', there are no labels in any displays.

This property is Tunable.

**Default:** 'All'

## TimeDisplayOffset

Time display offset

Specify the offset, in seconds, to apply to the *time*-axis. This property can be either a numeric scalar or a vector of length equal to the number of input channels. If you specify this property as a scalar, then that value is the time display offset for all channels. If you specify a vector, each vector element is the time offset for the corresponding channel. For vectors with length less than the number of input channels, the time display offsets for the remaining channels are set to 0. If a vector has a length greater

# Simulink.scopes.TimeScopeConfiguration

---

than the number of input channels, the extra vector elements are ignored. This property is Tunable.

See `FrameBasedProcessing` for information on input channels. See `TimeSpan` and `TimeSpanSource` for information on the *x*-axis limits and time span settings.

**Default:** 0

## TimeSpan

Time span

Specify the time span, in seconds, as a positive, numeric scalar value. This property applies when `FrameBasedProcessing` is `false`. This property also applies when `FrameBasedProcessing` is `true` and `TimeSpanSource` is `Property`. The *time*-axis limits are calculated as follows.

- Minimum *time*-axis limit =  $\min(\text{TimeDisplayOffset})$
- Maximum *time*-axis limit =  $\max(\text{TimeDisplayOffset}) + \text{TimeSpan}$

where `TimeDisplayOffset` and `TimeSpan` are the values of their respective properties. This property is Tunable.

**Default:** 10

## TimeSpanOverrunAction

Wrap or scroll when the `TimeSpan` value is overrun

Specify how the scope displays new data beyond the visible time span. You can select one of the following options:

- **Wrap** — In this mode, the scope displays new data until the data reaches the maximum *time*-axis limit. When the data reaches the maximum *time*-axis limit of the scope window, the scope clears the display. The scope then updates the time offset

value and begins displaying subsequent data points starting from the minimum *time*-axis limit.

- **Scroll** — In this mode, the scope scrolls old data to the left to make room for new data on the right side of the scope display. This mode is graphically intensive and can affect run-time performance. However, it is beneficial for debugging and monitoring time-varying signals.

This property is Tunable.

**Default:** 'Wrap'

## **TimeUnits**

Units of the *time*-axis

Specify the units used to describe the *time*-axis. You can select one of the following options:

- **Metric** — In this mode, the scope converts the times on the *time*-axis to the most appropriate measurement units. These can include milliseconds, microseconds, nanoseconds, minutes, days, etc. The scope chooses the appropriate measurement units based on the minimum *time*-axis limit and the maximum *time*-axis limit of the scope window.
- **Seconds** — In this mode, the scope always displays the units on the *time*-axis as seconds.
- **None** — In this mode, the scope does not display any units on the *time*-axis. The scope only shows the word Time on the *time*-axis.

This property is Tunable.

**Default:** 'Metric'

## **Title**

# Simulink.scopes.TimeScopeConfiguration

---

Display title

Specify the display title as a string. Enter %<SignalLabel> to use the signal labels in the Simulink Model as the axes titles. This property is Tunable.

When set, ActiveDisplay controls which display is updated.

**Default:** ''

## **YLabel**

The label for the *y*-axis

Specify as a string the text for the scope to display to the left of the *y*-axis. Tunable

This property applies only when PlotAsMagnitudePhase is false. When PlotAsMagnitudePhase is true, the two *y*-axis labels are read-only values. The *y*-axis labels are set to 'Magnitude' and 'Phase' for the magnitude plot and the phase plot, respectively. When set, ActiveDisplay controls which display is updated.

**Default:** 'Amplitude' if PlotAsMagnitudePhase is false

## **YLimits**

The limits for the *y*-axis

Specify the *y*-axis limits as a 2-element numeric vector, [ymin ymax]. This property is Tunable.

When PlotAsMagnitudePhase is true, this property specifies the *y*-axis limits of only the magnitude plot. The *y*-axis limits of the phase plot are always [-180, 180]. When set, ActiveDisplay controls which display is updated.

**Default:** [-10, 10], if PlotAsMagnitudePhase is false, or [0, 10], if PlotAsMagnitudePhase is true.

## Examples

### Example: Construct a Time Scope Configuration Object

Create a new Simulink model with a randomly-generated name.

```
sysname=char(randi(26,1,7)+96);  
new_system(sysname);
```

Add a new Time Scope block to the model.

```
add_block('built-in/TimeScope',[sysname,'/TimeScope'])
```

Call the `get_param` function to retrieve the default Time Scope block properties.

```
htsc = get_param([sysname,'/TimeScope'],'ScopeConfiguration')
```

```
ans =
```

```
TimeScopeConfiguration with properties:
```

```
                Name: 'TimeScope'  
    NumInputPorts: '1'  
    BufferLength: '50000'  
OpenAtSimulationStart: 0  
                Position: [755 450 410 300]  
    MaximizeAxes: 'Auto'  
    AxesScaling: 'Manual'  
                TimeSpan: 'Auto'  
TimeSpanOverrunAction: 'Wrap'  
                TimeUnits: 'none'  
    TimeDisplayOffset: '0'  
    TimeAxisLabels: 'Bottom'  
    LayoutDimensions: [1 1]  
    ActiveDisplay: 1  
                Title: ''  
    ShowLegend: 0  
    ShowGrid: 1  
    PlotAsMagnitudePhase: 0
```

# Simulink.scopes.TimeScopeConfiguration

---

```
YLimits: [-10 10]  
YLabel: 'Amplitude'
```

## **Related Examples**

- “Control Time Scope Programmatically”

<b>Purpose</b>	Results from comparing two simulation runs		
<b>Description</b>	The <code>Simulink.sdi.DiffRunResult</code> class manages the results from comparing two simulation runs. A <code>Simulink.sdi.DiffRunResult</code> object contains a <code>Simulink.sdi.DiffSignalResult</code> object for each signal compared.		
<b>Construction</b>	The function <code>Simulink.sdi.compareRuns</code> returns a handle to a <code>Simulink.sdi.DiffRunResult</code> object.		
<b>Properties</b>	<p><b>runID1</b> Run ID, a unique number identifying the first run compared.</p> <p><b>runID2</b> Run ID, a unique number identifying the second run compared.</p> <p><b>count</b> Number of compared signal results.</p> <p><b>matlabVersion</b> Version of MATLAB used to create an instance of <code>Simulink.sdi.DiffRunResult</code>.</p> <p><b>dateCreated</b> Date of object creation, stored in serial date number format.</p>		
<b>Methods</b>	<table><tr><td><code>getResultByIndex</code></td><td>Return signal comparison result, object</td></tr></table>	<code>getResultByIndex</code>	Return signal comparison result, object
<code>getResultByIndex</code>	Return signal comparison result, object		
<b>Copy Semantics</b>	Handle. To learn how handle classes affect copy operations, see Copying Objects in the MATLAB documentation.		
<b>Examples</b>	The function <code>Simulink.sdi.compareRuns</code> returns a <code>Simulink.sdi.DiffRunResult</code> object containing the results		

# Simulink.sdi.DiffRunResult

---

of the comparison. The `Simulink.sdi.DiffRunResult` object contains a `Simulink.sdi.DiffSignalResult` object for each signal comparison between the two simulation runs.

```
% Configure model "slexAircraftExample" for logging and simulate
set_param('slexAircraftExample/Pilot','WaveForm','square');
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on');

% Create a Simulation Data Inspector run, Simulink.sdi.Run, from
% simOut in the base workspace
runID1 = Simulink.sdi.createRun('First Run','namevalue',{simOut},{simOut});

% Simulate again
set_param('slexAircraftExample/Pilot','WaveForm','sawtooth');
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on');

% Create another Simulation Data Inspector run
runID2 = Simulink.sdi.createRun('Second Run','namevalue',{simOut},{simOut});

% Compare two runs and get an instance of Simulink.sdi.DiffRunResult
diff = Simulink.sdi.compareRuns(runID1, runID2);

% Get the number of signal comparison results
count = diff.count;

% Iterate over results and find out if signals match
for i=1:count
    % Get the Simulink.sdi.DiffSignalResult, diffSignal
    diffSignal = diff.getResultByIndex(i);
    signalID1 = diffSignal.signalID1;
    signalID2 = diffSignal.signalID2;
    match     = diffSignal.match;
```

```
if match
    disp([num2str(signalID1) ' and ' num2str(signalID2)...
        ' match']);
else
    disp([num2str(signalID1) ' and ' num2str(signalID2)...
        ' don't match']);
end
end
```

## See Also

[Simulink.sdi.createRun](#) | [Simulink.sdi.compareRuns](#) | [Simulink.sdi.DiffSignalResult](#)

## How To

- “Record and Inspect Signal Data Programmatically”

# Simulink.sdi.DiffRunResult.getResultByIndex

---

**Purpose** Return signal comparison result, `Simulink.sdi.DiffSignalResult` object

**Syntax** `diffSignalObj = diffRunObj.getResultByIndex(index)`

**Description** `diffSignalObj = diffRunObj.getResultByIndex(index)` returns the `Simulink.sdi.DiffSignalResult` object, `diffSignalObj`, which contains the comparison results for a signal. `diffRunObj` is an instance of a `Simulink.sdi.DiffRunResult` class, which contains an array of signal comparison results, where each element is an instance of a `Simulink.sdi.DiffSignalResult` class.

**Input Arguments**

**index**  
An index to the array of `Simulink.sdi.DiffSignalResult` objects contained in a `Simulink.sdi.DiffRunResult` object.

**Output Arguments**

**diffSignalObj**  
Handle to a `Simulink.sdi.DiffSignalResult` object representing the results of comparing two signals between simulation runs.

**Examples**

The function `Simulink.sdi.compareRuns` returns a `Simulink.sdi.DiffRunResult` object containing the results of the comparison. The `Simulink.sdi.DiffRunResult` object contains a `Simulink.sdi.DiffSignalResult` object for each signal comparison between the two simulation runs. `diff.getResultByIndex` returns the `Simulink.sdi.DiffSignalResult` object for each signal comparison.

```
% Configure model "slexAircraftExample" for logging and simulate
set_param('slexAircraftExample/Pilot','WaveForm','square');
simOut = sim('slexAircraftExample','SaveOutput','on', ...
            'SaveFormat','StructureWithTime', ...
            'ReturnWorkspaceOutputs','on');
```

```
% Create a Simulation Data Inspector run, Simulink.sdi.Run, from simOut i
```

# Simulink.sdi.DiffRunResult.getResultByIndex

```
runID1 = Simulink.sdi.createRun('First Run','namevalue',{'simOut'},{s

% Simulate again
set_param('slexAircraftExample/Pilot','WaveForm','sawtooth');
simOut = sim('slexAircraftExample','SaveOutput','on',...
            'SaveFormat','StructureWithTime',...
            'ReturnWorkspaceOutputs','on');

% Create another Data Inspector run and get signal IDs
runID2 = Simulink.sdi.createRun('Second Run','namevalue',{'simOut'},{s

% Compare two runs and get an instance of Simulink.sdi.DiffRunResult
diff = Simulink.sdi.compareRuns(runID1, runID2);

% Get the number of signal comparison results
count = diff.count;

% Iterate over results and display the comparison results
for i=1:count
    diffSignal = diff.getResultByIndex(i);
    signalID1 = diffSignal.signalID1;
    signalID2 = diffSignal.signalID2;
    match      = diffSignal.match;

    if match
        disp([num2str(signalID1) ' and ' num2str(signalID2)...
            ' match']);
    else
        disp([num2str(signalID1) ' and ' num2str(signalID2)...
            ' don''t match']);
    end
end
```

## See Also

[Simulink.sdi.Run](#) | [Simulink.sdi.Signal](#) |  
[Simulink.sdi.DiffRunResult](#) | [Simulink.sdi.DiffSignalResult](#)  
| [Simulink.sdi.compareRuns](#)

# Simulink.sdi.DiffRunResult.getResultByIndex

---

## How To

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Results from comparing two signals
<b>Description</b>	The <code>Simulink.sdi.DiffSignalResult</code> object manages the results from comparing two signals. A <code>Simulink.sdi.DiffSignalResult</code> object contains the value differences of the signals, the tolerance data, and the data after any specified synchronization methods are performed.
<b>Construction</b>	<p>The function <code>Simulink.sdi.compareSignals</code> returns a handle to a <code>Simulink.sdi.DiffSignalResult</code> object, which contains the comparison results.</p> <p>A <code>Simulink.sdi.DiffSignalResult</code> object is also created when the function <code>Simulink.sdi.compareRuns</code> creates a <code>Simulink.sdi.DiffRunResult</code> object, which in turn creates <code>Simulink.sdi.DiffSignalResult</code> objects.</p>
<b>Properties</b>	<p><b>signalID1</b> Signal ID, a unique number identifying the first signal compared.</p> <p><b>signalID2</b> Signal ID, a unique number identifying the second signal compared.</p> <p><b>match</b> A boolean indicating if the two <code>timeseries</code> objects match according to the specified tolerance and time synchronization options.</p> <p><b>diff</b> A MATLAB <code>timeseries</code> object specifying the value differences after synchronizing the two time series data.</p> <p><b>tol</b> A MATLAB <code>timeseries</code> object specifying the actual absolute tolerance value at each synchronized time point.</p> <p><b>sync1</b></p>

# Simulink.sdi.DiffSignalResult

---

A MATLAB timeseries object specifying time series 1 after synchronization has been applied.

## **sync2**

A MATLAB timeseries object specifying time series 2 after synchronization has been applied.

## **Copy Semantics**

Handle. To learn how handle classes affect copy operations, see Copying Objects in the MATLAB documentation.

## **Examples**

In this example, a `Simulink.sdi.DiffSignalResult` object is created after comparing two signals in the Simulation Data Inspector.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on');

% Create a Simulation Data Inspector run and get signal IDs
[~, ~, signalIDs] = Simulink.sdi.createRun('My Run', 'namevalue', {'MyData'

sig1 = signalIDs(1);
sig2 = signalIDs(2);

% Compare two signals, which returns the results in an instance of Simulink.sdi.DiffSignalResult
diff = Simulink.sdi.compareSignals(sig1, sig2);

% Find if the signals match
match = diff.match;

% Get the tolerance used in Simulink.sdi.compareSignals
tolerance = diff.tol;
```

## **See Also**

`Simulink.sdi.DiffRunResult` | `Simulink.sdi.createRun` | `Simulink.sdi.compareRuns`

## How To

- “Record and Inspect Signal Data Programmatically”

# Simulink.sdi.Run

---

<b>Purpose</b>	Manages signal data and metadata of simulation run	
<b>Description</b>	The <code>Simulink.sdi.Run</code> object contains the signal logging information for one simulation run, which includes the logged signal data, a run ID, and the total number of signals in the run.	
<b>Construction</b>	The function <code>Simulink.sdi.createRun</code> creates a <code>Simulink.sdi.Run</code> object.	
<b>Properties</b>	<b>dateCreated</b>	Date and time of the run, stored as a double.
	<b>description</b>	User-specified description of the run. The default value is an empty string.
	<b>id</b>	Read-only unique number to identify a run.
	<b>name</b>	User-specified name of the run. The default value is an empty string.
	<b>signalCount</b>	Number of signals in the run.
	<b>tag</b>	User-specified string for categorization, identification, or attaching other information to this run. The default value is an empty string.
<b>Methods</b>	<code>getSignal</code>	Return object by signal ID
	<code>getSignalByIndex</code>	Return object by index

<code>getSignalIDByIndex</code>	Return signal ID at array index
<code>isValidSignalID</code>	Determine if signal ID is valid within run

## Copy Semantics

Handle. To learn how handle classes affect copy operations, see Copying Objects in the MATLAB documentation.

## Examples

The `Simulink.sdi.Run` object contains a `Simulink.sdi.Signal` object for each logged signal. This example creates a run from simulation data in the base workspace. It demonstrates how to access the `Simulink.sdi.Run` object from the Simulation Data Inspector. You can select which signals to view and then open the Simulation Data Inspector tool to inspect those signals.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
            'SaveFormat', 'StructureWithTime', ...
            'ReturnWorkspaceOutputs', 'on');
```

```
% Create a Simulation Data Inspector run, Simulink.sdi.Run, from simOut
runID = Simulink.sdi.createRun('My Run', 'base', {'simOut'});
```

```
% Get the handle to the run object, Simulink.sdi.Run, corresponding to runID
runObj = Simulink.sdi.getRun(runID);
```

```
% Get the name of the run
runName = runObj.name;
```

```
% Get number of signals
numSignals = runObj.signalCount;
```

```
% To view the all of the signals in the run, select each signal in the
for i=1:numSignals
    signalObj = runObj.getSignalByIndex(i);
    signalObj.checked = true;
end
```

# Simulink.sdi.Run

---

```
% Open the Simulation Data Inspector to inspect the selected signals.  
Simulink.sdi.view;
```

## See Also

```
Simulink.sdi.createRun | Simulink.sdi.getRun |  
Simulink.sdi.view
```

## How To

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Return <code>Simulink.sdi.Signal</code> object by signal ID
<b>Syntax</b>	<code>signalObj = runObj.getSignal(signalID)</code>
<b>Description</b>	<code>signalObj = runObj.getSignal(signalID)</code> returns the <code>Simulink.sdi.Signal</code> object, <code>signalObj</code> , corresponding to the signal ID, <code>signalID</code> , stored in the <code>Simulink.sdi.Run</code> object, <code>runObj</code> .
<b>Input Arguments</b>	<b>signalID</b> Signal ID, a unique number identifying a signal in a run in the Simulation Data Inspector.
<b>Output Arguments</b>	<b>signalObj</b> Handle to a <code>Simulink.sdi.Signal</code> object representing a signal in a run object, <code>Simulink.sdi.Run</code> .
<b>Examples</b>	<p>The <code>Simulink.sdi.Run</code> method, <code>getSignal</code>, returns a signal object representing the signal data and metadata in a run. You can modify the signal object properties to configure the signal for plotting or comparing to other signals in the Simulation Data Inspector.</p> <pre>% Configure model "slexAircraftExample" for logging and simulate simOut = sim('slexAircraftExample', 'SaveOutput','on', ...             'SaveFormat', 'StructureWithTime', ...             'ReturnWorkspaceOutputs', 'on');  % Create a Simulation Data Inspector run [runID,runIndex,signalIDs] = Simulink.sdi.createRun('My Run','base',{  % Get the Simulink.sdi.Run object corresponding to the new run ID runObj = Simulink.sdi.getRun(runID);  % Get the number of signals in the run numSignals = runObj.signalCount;</pre>

# Simulink.sdi.Run.getSignal

---

```
% Get the Simulink.sdi.Signal objects for each signal in the run and select
for i = 1:numSignals
    signalObjs(i) = runObj.getSignal(signalIDs(i));
    signalObjs(i).checked = true;
end
```

## See Also

[Simulink.sdi.Run](#) | [Simulink.sdi.Signal](#) |  
[Simulink.sdi.createRun](#)

## How To

- “Record and Inspect Signal Data Programmatically”

# Simulink.sdi.Run.getSignalByIndex

<b>Purpose</b>	Return <code>Simulink.sdi.Signal</code> object by index
<b>Syntax</b>	<code>signalObj = runObj(index)</code>
<b>Description</b>	<code>signalObj = runObj(index)</code> returns the <code>Simulink.sdi.Signal</code> object, <code>signalObj</code> , at the index into the array of signals contained in the <code>Simulink.sdi.Run</code> object, <code>runObj</code> .
<b>Input Arguments</b>	<b>index</b> Number specifying an index to the array of signals contained in a <code>Simulink.sdi.Run</code> object. The first index in the array is 1.
<b>Output Arguments</b>	<b>signalObj</b> Handle to a <code>Simulink.sdi.Signal</code> object representing a signal in a run object, <code>Simulink.sdi.Run</code> .
<b>Examples</b>	<p>The <code>Simulink.sdi.Run</code> method, <code>getSignalByIndex</code>, returns a signal object representing the signal data and information in a run. You can modify the signal object properties to configure the signal for plotting or comparing to other signals in the Simulation Data Inspector.</p> <pre>% Configure model "slexAircraftExample" for logging and simulate simOut = sim('slexAircraftExample','SaveOutput','on','SaveFormat','S             'ReturnWorkspaceOutputs','on');  % Create a Simulation Data Inspector run runID = Simulink.sdi.createRun('My Run','base',{'simOut'});  % Get the Simulink.sdi.Run object corresponding to the new run ID runObj = Simulink.sdi.getRun(runID);  % Get the number of signals in the run numSignals = runObj.signalCount;  % Get the Simulink.sdi.Signal object for the first signal in the run</pre>

# Simulink.sdi.Run.getSignalByIndex

---

```
if numSignals > 0
    signalObj = runObj.getSignalByIndex(1);
end
```

## See Also

[Simulink.sdi.Signal](#) | [Simulink.sdi.Run](#) |  
[Simulink.sdi.createRun](#) | [Simulink.sdi.getRun](#)

## How To

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Return signal ID at array index
<b>Syntax</b>	<code>signalID = runObj.getSignalIDByIndex(index)</code>
<b>Description</b>	<code>signalID = runObj.getSignalIDByIndex(index)</code> returns the signal ID for the signal at the specified index to the array of signals contained in the <code>Simulink.sdi.Run</code> object, <code>runObj</code> .
<b>Input Arguments</b>	<b>index</b> Number specifying the index to the array of signals contained in a <code>Simulink.sdi.Run</code> object. The first index in the array is 1.
<b>Output Arguments</b>	<b>signalID</b> Signal ID, a unique number identifying a signal in a run.
<b>Examples</b>	<p>The <code>Simulink.sdi.Run</code> method, <code>getSignalIDByIndex</code>, returns the signal ID corresponding to a signal in a run. With the signal ID you can get the signal object representing the signal data and metadata. You can compare two signals by passing their signal IDs to <code>Simulink.sdi.compareSignals</code>.</p> <pre>% Configure model "slexAircraftExample" for logging and simulate simOut = sim('slexAircraftExample','SaveOutput','on', ...             'SaveFormat','StructureWithTime', ...             'ReturnWorkspaceOutputs','on');  % Create a Simulation Data Inspector run runID = Simulink.sdi.createRun('My Run','base',{'simOut'});  % Get the Simulink.sdi.Run object corresponding to the new run ID runObj = Simulink.sdi.getRun(runID);  % Get the number of signals in the run numSignals = runObj.signalCount;</pre>

# Simulink.sdi.Run.getSignalIDByIndex

---

```
% Get the signal ID for the first signal in the run
if numSignals > 0
    signalID = runObj.getSignalIDByIndex(1);
end
```

## See Also

Simulink.sdi.Signal | Simulink.sdi.Run |  
Simulink.sdi.createRun | Simulink.sdi.getRun |  
Simulink.sdi.compareSignals

## How To

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Determine if signal ID is valid within run
<b>Syntax</b>	<code>isValid = runObj.isValidSignalID(signalID)</code>
<b>Description</b>	<code>isValid = runObj.isValidSignalID(signalID)</code> returns true if the signal ID, <code>signalID</code> , corresponds to a signal in the run object, <code>runObj</code> . Otherwise, it returns false.
<b>Input Arguments</b>	<b>signalID</b> Signal ID, a unique number identifying a signal stored in the run object.
<b>Output Arguments</b>	<b>isValid</b> A Boolean value: true, if the signal exists; false, otherwise.
<b>Examples</b>	<p>Before calling a function that takes a signal ID as input, verify that the signal ID is valid.</p> <pre>% Configure model "slexAircraftExample" for logging and simulate simOut = sim('slexAircraftExample','SaveOutput','on', ...             'SaveFormat','StructureWithTime', ...             'ReturnWorkspaceOutputs','on');  % Create a Simulation Data Inspector run runID = Simulink.sdi.createRun('My Run','base',{'simOut'});  % Get the Simulink.sdi.Run object corresponding to the new run ID runObj = Simulink.sdi.getRun(runID);  % Get the number of signals in the run numSignals = runObj.signalCount;  % Get the signal ID for the first signal in the run if numSignals &gt; 0     signalID = runObj.getSignalIDByIndex(1);</pre>

# Simulink.sdi.Run.isValidSignalID

---

```
end

% Before calling getSignal, check that the signalID is valid
if runObj.isValidSignalID(signalID)
    signalObj = runObj.getSignal(signalID)
end
```

## See Also

Simulink.sdi.Signal | Simulink.sdi.Run |  
Simulink.sdi.createRun | Simulink.sdi.getRun  
| Simulink.sdi.Run.getSignalByIndex |  
Simulink.sdi.Run.isValidSignalID | Simulink.sdi.Run.getSignal

## How To

- “Record and Inspect Signal Data Programmatically”

<b>Purpose</b>	Manages signal time series data and metadata
<b>Description</b>	The <code>Simulink.sdi.Signal</code> object contains the signal logging information for one simulation run. It also contains properties for visualizing and comparing signals.
<b>Construction</b>	The function <code>Simulink.sdi.createRun</code> creates a <code>Simulink.sdi.Run</code> object, which creates a <code>Simulink.sdi.Signal</code> object for each signal in the simulation output.
<b>Properties</b>	<p><b>Signal Properties</b> (read only)</p> <p><b>id</b> Signal ID, a unique number identifying the signal.</p> <p><b>runID</b> Run ID, a unique number identifying the signal's parent run.</p> <p><b>rootSource</b> String to access the high-level logging structure this signal was derived from.</p> <p><b>timeSource</b> String to access the logged signal's time vector.</p> <p><b>dataSource</b> String to access the logged signal's data values.</p> <p><b>dataValues</b> Time series data for this signal.</p> <p><b>blockSource</b> String specifying the path to the block that defines the signal.</p> <p><b>modelSource</b> String specifying the name of the model that defines the signal.</p>

**signalLabel**

String specifying the name of the signal.

**timeDim**

For any given data sample, the time dimension.

**sampleDims**

Dimensions of a data sample.

**portIndex**

Index of the port that defines the signal.

**channel**

Channel index. This property applies to matrix data only. Matrix data is flattened into a scalar time series by using channels.

**SID**

“Simulink Identifier” on page 8-2 of the block that defines the signal.

**Comparison Properties** (read and write)

Each signal has properties that the Simulation Data Inspector uses for comparing two signals. The Simulation Data Inspector uses the comparison properties from the first signal passed in, also called the reference signal.

**absTol**

Absolute tolerance of the signal. Must be a positive number.

**relTol**

Relative tolerance of the signal. Must be a positive number.

**syncMethod**

Time synchronization method to align time vector when comparing signals. Possible values are: 'intersection', 'uniform', and 'union'.

## **interpMethod**

Interpolation method to align data. Possible values are: 'zoh' and 'linear'.

## **Visualization Properties** (read and write)

### **lineColor**

Signal line color in the plot in the form of a vector [r g b]. r is the red component, g the green component, and b the blue component.

### **lineDashed**

Signal line format in the plot

### **checked**

Boolean specifying if the signal is selected for plotting: true for selected and false for cleared.

## **Copy Semantics**

Handle. To learn how handle classes affect copy operations, see Copying Objects in the MATLAB documentation.

## **Examples**

Create a run and call the `Simulink.sdi.getSignal` function to get a `Simulink.sdi.Signal` object.

```
% Configure model "slexAircraftExample" for logging and simulate
simOut = sim('slexAircraftExample', 'SaveOutput','on', ...
             'SaveFormat', 'StructureWithTime', ...
             'ReturnWorkspaceOutputs', 'on');
```

```
% Create a Simulation Data Inspector run which returns a list of signals
[~,~,signalIDs] = Simulink.sdi.createRun('My Run', 'base', {'simOut'})
```

```
% Get the signal object corresponding to the first signal ID
```

# Simulink.sdi.Signal

---

```
signalObj = Simulink.sdi.getSignal(signalIDs(1));

% signalObj is an instance of Simulink.sdi.Signal. Get the run ID for this signal
runID = signalObj.runID;

% Modify or define comparison and visualization properties for this signal
signalObj.syncMethod = 'intersection';
signalObj.lineColor = [1,0.4,0.6];
signalObj.lineDashed = '-';
signalObj.checked = true;

% View signals in the Simulation Data Inspector tool
Simulink.sdi.view;
```

## See Also

[Simulink.sdi.Run](#) | [Simulink.sdi.createRun](#) |  
[Simulink.sdi.getSignal](#)

## How To

- “Record and Inspect Signal Data Programmatically”

**Purpose** Specify attributes of signal

**Description** This class enables you to create workspace objects that you can use to assign or validate the attributes of a signal or discrete state, such as its data type, numeric type, dimensions, and so on. You can use a signal object to:

- Assign values to signal attributes that are left unassigned (have a value of -1 or auto) by the signal source.
- Validate signal attributes whose values are explicitly assigned by the signal source. Such attributes have values other than -1 or auto. Successful validation guarantees that the signal has the attributes that you intended it to have.

You can create a `Simulink.Signal` object in the MATLAB workspace or in a model workspace.

Use signal objects to assign or validate signal or discrete state attributes by giving the signal or discrete state the same name as the workspace variable that references the `Simulink.Signal` object.

### **Signal Specification Block: An Alternative to Simulink.Signal**


You can use a Signal Specification block rather than a `Simulink.Signal` object to assign properties left unspecified by a signal source. Each technique has advantages and disadvantages:

- Using a signal object simplifies the model and allows you to change signal property values without editing the model, but does not show signal property values directly in the block diagram.
- Using a Signal Specification block displays signal property values directly in the block diagram, but complicates the model and requires editing it to change signal property values.
- You can use a Signal Specification block with virtual and nonvirtual buses; you can use only nonvirtual buses with a `Simulink.Signal` object.


The following two models illustrate the respective advantages of the two ways of assigning attributes to a signal.

# Simulink.Signal

In the first example, the signal object named `Sig1` specifies the sample time and data type of the signal emitted by input port `In1`.

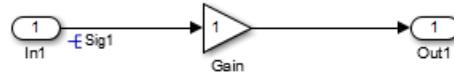

To determine the properties of the `Sig1` signal, you can view the signal object in the Model Explorer. In this model, the sample time is `-1` and the data type is `auto`.

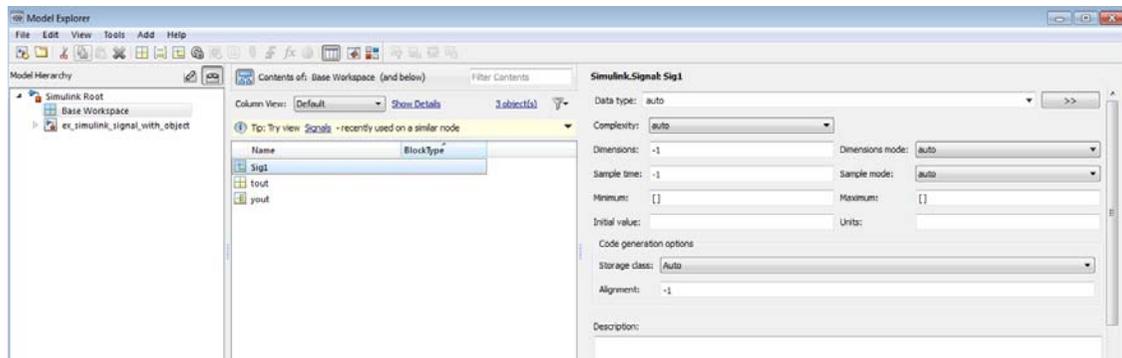

Using a signal object to specify the sample time and data type properties of signal `Sig1` allows you to change the sample time or data type without having to edit the model. For example, you could use the Model Explorer, the MATLAB command line, or a MATLAB program to change these properties.

The second example uses a Signal Specification block specifies the sample time and data type of the signal emitted by input port `In2`. The Signal Specification block displays the data type and signal sample time properties right in the diagram, which in this case are `uint8` and `4`, respectively.



## Using Signal Objects to Assign or Validate Signal Attributes

This section describes how you can use signal objects to assign or validate signal attributes. The same techniques work with discrete states also. To use a signal object to assign or validate signal attribute values:

- 1 Create a `Simulink.Signal` object that has the same name as the signal to which you want to assign attributes or whose attributes you want to validate.
  - a Open the Model Explorer.
  - b In the Model Hierarchy pane, select either the Base workspace or Model workspace node, depending on the context you want for the signal object. If you create the signal object in a model workspace, you must set the **Storage class** parameter to Auto.
  - c Select **Add > Simulink Signal**.
- 2 Set the properties of the object that correspond to the attributes left unspecified by the signal source, or that correspond to the attributes you want to validate. See “Property Dialog Box” on page 6-324 for details.
- 3 Enable explicit or implicit signal resolution:
  - **Explicit resolution:** In the Signal Properties dialog box for the signal, enable **Signal name must resolve to Simulink signal object**. This is the preferred technique. See “Explicit and Implicit Symbol Resolution” for more information.
  - **Implicit resolution:** Set the **Configuration Parameters > Diagnostics > Data Validity > Signal** resolution option for

the model to `Explicit` and `implicit` or `Explicit` and `warn implicit`. `Explicit` resolution is the preferred technique.

- 4 Assign the signal object to a workspace variable.
- 5 Associate the signal object with the source signal.
  - Give the signal the same name as the workspace variable that references the signal object.
  - You can use a variety of techniques to associate a signal object with a signal. For examples, see “Using Signal Objects to Initialize Signals and Discrete States”, “Using Signal Objects to Tune Initial Values”, and “Apply Custom Storage Classes”.

## Validation

The result when a signal does not match a signal object can depend on several factors. Simulink software can validate a signal property when you update the diagram, while you run a simulation, or both. When and how validation occurs can depend on internal rules that are subject to change, and sometimes on configuration parameter settings.

Not all signal validation compares signal source attributes with signal object properties. For example, if you specify **Minimum** and **Maximum** signal values using a signal object, the signal source must specify the same values as the signal object (or inherit the values from the object) but such validation relates only to agreement between the source and the object, not to enforcement of the minimum and maximum values during simulation.

If the value of **Configuration Parameters > Diagnostics > Data Validity > Simulation range checking** is `none` (the default), Simulink does not enforce any minimum and maximum signal values during simulation, even though a signal object provided or validated them. To enforce minimum and maximum signal values during simulation, set **Simulation range checking** to `warning` or `error`. See “Signal Ranges” and “Diagnostics Pane: Data Validity” for more information.


## Multiple Signal Objects

You can associate a given *signal object* with more than one signal if the storage class of the signal object is `Auto`. If the storage class of the object is other than `Auto`, you can associate the signal object with no more than one signal.

You can associate a given *signal* with no more than one signal object. The signal can refer to the signal object more than once, but every reference must resolve to exactly the same signal object. Referencing two different signal objects that have exactly the same properties causes a compile-time error.

A compile-time error occurs if a model associates more than one signal object with any signal. To prevent the error, decide which object you want the signal to use, then delete or reconfigure all references to any other signal objects, so that all remaining references resolve to the chosen signal object. See “Display Signal Sources and Destinations” for a description of techniques that you can use to trace the full extent of a signal.

# Simulink.Signal

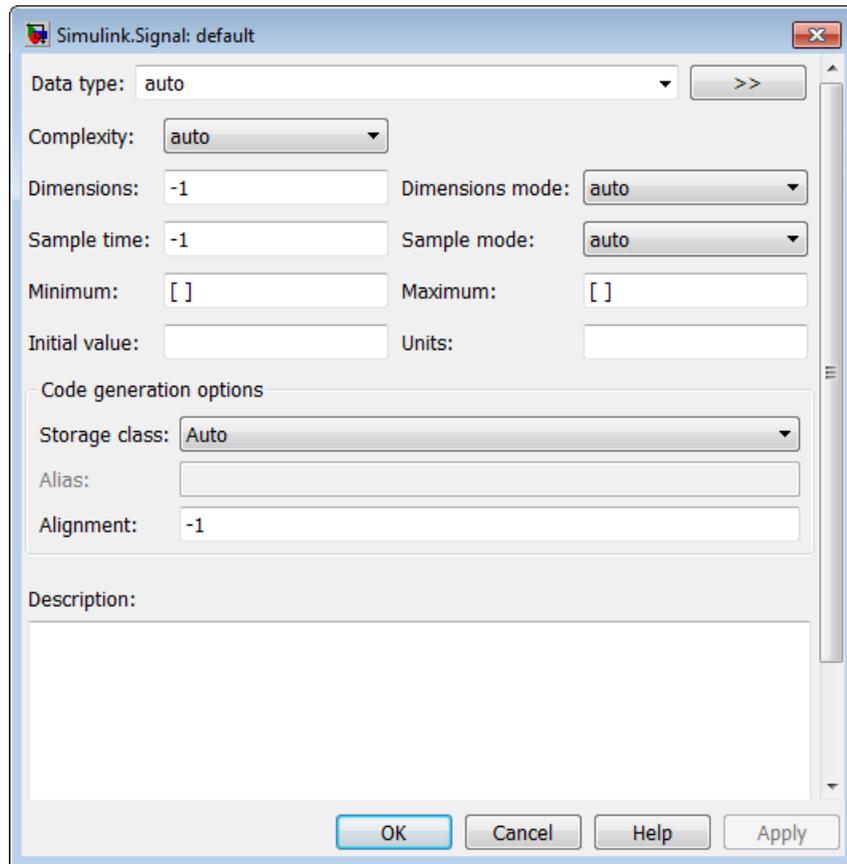

## Property Dialog Box

### Data type

Data type of the signal. The default entry, `auto`, specifies that Simulink should determine the data type. Use the adjacent pulldown list to specify built-in data types (for example, `uint8`). To specify a custom data type, enter a MATLAB expression that specifies the type, (for example, a base workspace variable that references a `Simulink.NumericType` object).

To specify a bus object as the data type for the signal object, use the **Bus:** <object\_name> option. See “Bus Support” on page 6-329 for details about what you need to do if you specify a bus object as the data type.

Click the **Show data type assistant** button  to display the **Data Type Assistant**, which helps you set the **Data type** parameter. (See “Specify Data Types Using Data Type Assistant” in *Simulink User’s Guide*.)

### Complexity

Numeric type of the signal. Valid values are **auto** (determined by Simulink), **real**, or **complex**.

### Dimensions

Dimensions of this signal. Valid values are **-1** (the default) specifying any dimensions, **N** specifying a vector signal of size **N**, or **[M N]** specifying an **M**×**N** matrix signal.

### Dimensions mode

Dimensions mode of this signal. From the drop-down list, select

- **Auto** — Allows variable-size and fixed-size signals.
- **Fixed** — Allows only fixed-size signals. Does not allow variable-size signals.
- **Variable** — Allows only variable-size signals.

### Sample time

Rate at which the value of this signal should be computed. See “Specify Sample Time” for details.

### Sample mode

Sample mode of this signal. Simulink ignores the setting of this field.

### Minimum

Minimum value that the signal should have. The default value is **[]** (unspecified). Specify a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for a signal, do not set the minimum value for bus data on the signal property dialog box. Simulink ignores this setting. Instead, set the minimum values for bus elements of the bus object specified as the data type. For information on the Minimum property of a bus element, see `Simulink.BusElement`.

---

Simulink uses this value in the following ways:

- When updating the diagram or starting a simulation, Simulink generates an error if the signal's initial value is less than the minimum value or if the minimum value is outside the range for the data type of the signal.
- When you enable the **Simulation range checking** diagnostic, Simulink alerts you during simulation if the signal value is less than the minimum value (see "Simulation range checking").

## Maximum

Maximum value that the signal should have. The default value is [] (unspecified). Specify a finite, real, double, scalar value.

---

**Note** If you specify a bus object as the data type for a signal, do not set the maximum value for bus data on the signal property dialog box. Simulink ignores this setting. Instead, set the maximum values for bus elements of the bus object specified as the data type. For information on the Maximum property of a bus element, see `Simulink.BusElement`.

---

Simulink uses this value in the following ways:

- When updating the diagram or starting a simulation, Simulink generates an error if the initial value of the signal is greater than the maximum value or if the maximum value is outside the range of the data type of the signal.

- When you enable the **Simulation range checking** diagnostic, Simulink alerts you during simulation if the signal value is greater than the maximum value (see “Simulation range checking”).

## Initial value

Signal or state value before a simulation takes its first time step. You can specify any MATLAB string expression that evaluates to a double numeric scalar value or array.

Valid:

```
1.5  
[1 2 3]  
1+0.5
```

```
foo = 1.5;  
s1.InitialValue = 'foo';
```

Invalid:

```
uint(1)  
foo = '1.5';  
s1.InitialValue = 'foo';
```

If you use a bus object as the data type for the signal object, set **Initial value** to a string containing either 0 or a MATLAB structure that matches the bus object. See “Bus Support” on page 6-329 for details.

If the initial value evaluates to a MATLAB structure, then in the **Configuration Parameters > Diagnostics > Data Validity** pane, set “**Underspecified initialization detection**” to simplified.

If necessary, Simulink converts the initial value to ensure type, complexity, and dimension consistency with the corresponding block parameter value. If you specify an invalid value or

expression, an error message appears when you update the model. Also, Simulink performs range checking of the initial value. The software alerts you when the initial value of the signal lies outside a range that corresponds to its specified minimum and maximum values and data type.

**Classic initialization mode:** In this mode, initial value settings for signal objects that represent the following signals and states override the corresponding block parameter initial values if undefined (specified as []):

- Output signals of conditionally executed subsystems and Merge blocks
- Block states

**Simplified initialization mode:** In this mode, initial values of signal objects associated with the following blocks are ignored. The initial values of the corresponding blocks are used instead.

- Outport blocks of conditionally executed subsystems
- Merge blocks

## Units

Measurement units in which the value of this signal is expressed, (for example, inches). You can use this parameter to document this signal. Simulink ignores it during simulation.

## Storage class

Storage class of this signal. For more information, see “Simulink Package Custom Storage Classes”.

If you create the signal object in a model workspace, you must set the object storage class to `Auto`.

## Alias

Alternate name for this signal. Simulink ignores this setting. This property is used for code generation.

## Alignment

Data alignment boundary, specified in number of bytes. The starting memory address for the data allocated for the signal will be a multiple of the **Alignment** setting. The default value is -1, which specifies that the code generator should determine an optimal alignment based on usage. Otherwise, specify a positive integer that is a power of 2, not exceeding 128. This field is intended for use by Simulink Coder software. See “Configure Data Alignment for Function Implementations”. Simulink software ignores this setting.

## Description

Description of this signal. This field is intended for use in documenting this signal. This property is used by the Simulink Report Generator and for code generation.

## Bus Support

### Using Bus Objects as the Data Type

Simulink.Signal supports nonvirtual buses as the output data type.

If you set the **Data type** of the signal object to be a bus object, then you cannot associate the signal object with a non-bus signal.

### Using Structures for the Initial Value

If you use a bus object as the data type, set **Initial value** to 0 or a MATLAB structure that matches the bus object.

The structure you specify must contain a value for every element of the bus represented by the bus object.

You can use the `Simulink.Bus.createMATLABStruct` to create a full structure that corresponds to a bus.

You can use `Simulink.Bus.createObject` to create a bus object from a MATLAB structure.

### Setting Configuration Parameters to Support Using a Bus Object Data Type

To enable the use of a bus object as the signal object data type, before you start a simulation, in the **Configuration Parameters** >

# Simulink.Signal

---

**Diagnostics > Connectivity** pane, set “**Mux blocks used to create bus signals**” to error. The documentation for that diagnostic explains how convert your model to handle error messages the diagnostic generates.

## Properties

Name	Access	Description
CoderInfo	RW	Information used by Simulink Coder for generating code for this signal. The value of this property is an object of Simulink.SignalCoderInfo class.
Description	RW	Description of this signal. This field is intended for use in documenting this signal. (Description)
DataType	RW	String specifying the data type of this signal. (Data type)
Min	RW	Minimum value that this signal can have. (Minimum)
Max	RW	Maximum value that this signal can have. (Maximum)
DocUnits	RW	Measurement units used for expressing this signal value. (Units)
Dimensions	RW	Scalar or vector specifying the dimensions of this signal. (Dimensions)
Complexity	RW	String specifying the numeric type of this signal. Valid values are 'auto', 'real', or 'complex'. (Complexity)
SampleTime	RW	Rate at which this signal should be updated. (Sample time)

<b>Name</b>	<b>Access</b>	<b>Description</b>
Sampling Mode	RW	Sampling mode of this signal. (Sample mode)
InitialValue	RW	Signal or state value before a simulation takes its first time step. (Initial Value)

# Simulink.SignalCoderInfo

---

**Purpose** Specify information needed to generate code for signal

**Description** Simulink software creates an instance of this class for each instance of a `Simulink.Signal` object that it creates. Simulink software uses the `Simulink.SignalCoderInfo` object to store information needed to generate code for the signal specified by the `Simulink.Signal` object.

You can set the properties of an instance of this class via the `CoderInfo` property or the property dialog box of the `Simulink.Signal` object that uses it. For example, the following MATLAB expression sets the `StorageClass` property of a `Simulink.SignalCoderInfo` object named `mysignal`.

```
mysignal.CoderInfo.StorageClass = 'exportedGlobal';
```

**Property Dialog Box** Use the Code Generation Options section of the `Simulink.Signal` property dialog box to set the `StorageClass`, `Alias`, and `Alignment` properties of objects of this class.

## Properties

Name	Description
Alias	Alternate name for this signal.
Alignment	Data alignment boundary for this signal. See “Configure Data Alignment for Function Implementations” in the Embedded Coder documentation for more information.
CustomAttributes	Custom storage class attributes of this signal. See “Introduction to Custom Storage Classes” in the Embedded Coder documentation for more information.
CustomStorageClass	Custom storage class of this signal.
StorageClass	Storage class of this signal. For more information, see “Signals” in the Simulink Coder documentation.

## Purpose

Fully specified Simulink block path

## Description

Simulink creates block path objects when creating dataset objects for signal logging and data store logging. `Simulink.SimulationData.Signal` and `Simulink.SimulationData.DataStoreMemory` objects include block path objects.

You can create a block path that you can use with the `Simulink.SimulationData.Dataset.getElement` method to access a specific dataset element. If you want to create a dataset in MATLAB to use as a baseline to compare against a signal logging or data store logging dataset, then you need to create the block paths as part of that dataset.

The `Simulink.SimulationData.BlockPath` class is very similar to the `Simulink.BlockPath` class.

You do not have to have Simulink installed to use the `Simulink.SimulationData.BlockPath` class. However, you must have Simulink installed to use the `Simulink.BlockPath` class. If you have Simulink installed, consider using `Simulink.BlockPath` instead of `Simulink.SimulationData.BlockPath`, because the `Simulink.BlockPath` class includes a method for checking the validity of block path objects without you having to update the model diagram.

## Property Summary

Name	Description
SubPath	Individual component within the block specified by the block path

## Method Summary

Name	Description
BlockPath	Create a block path.
convertToCell	Convert a block path to a cell array of strings.

# Simulink.SimulationData.BlockPath

---

Name	Description
getBlock	Get a single block path in the model reference hierarchy.
getLength	Get the length of the block path.

## Properties

---

SubPath

### Description

Represents an individual component within the block specified by the block path.

For example, if the block path refers to a Stateflow chart, you can use SubPath to indicate the chart signals. For example:

```
Block Path:  
    'sf_car/shift_logic'
```

```
SubPath:  
    'gear_state.first'
```

### Data Type

string

### Access

RW

## Methods

---

BlockPath

### Purpose

Create block path

### Syntax

```
blockpath_object = Simulink.SimulationData.BlockPath()  
blockpath_object = Simulink.SimulationData.BlockPath(blockpath)  
blockpath_object = Simulink.SimulationData.BlockPath(paths)  
blockpath_object = Simulink.SimulationData.BlockPath(paths, subpath)
```

## Input Arguments

**blockpath**

The block path object that you want to copy.

**paths**

A string or cell array of strings that Simulink uses to build the block path.

Specify each string in order, from the top model to the specific block for which you are creating a block path.

Each string must be a path to a block within the Simulink model. The block must be:

- A block in a single model
- A Model block (except for the last string, which may be a block other than a Model block)
- A block that is in a model that is referenced by a Model block that is specified in the previous string

**subpath**

A string that represents an individual component within a block.

## Output Arguments

**blockpath\_object**

The block path that you create.

## Description

`blockpath_object = Simulink.SimulationData.BlockPath()` creates an empty block path.

`blockpath_object = Simulink.SimulationData.BlockPath(blockpath)` creates a copy of the block path of the block path object that you specify with the `source_blockpath` argument.

`blockpath = Simulink.SimulationData.BlockPath(paths)` creates a block path from the string or cell array of strings that you specify

# Simulink.SimulationData.BlockPath

---

with the `paths` argument. Each string represents a path at a level of model hierarchy.

`blockpath = Simulink.SimulationData.BlockPath(paths, subpath)` creates a block path from the string or cell array of strings that you specify with the `paths` argument and creates a path for the individual component (for example, a signal) of the block.

## Example

Create a block path object called `bp1`, using a cell array of strings representing elements of the block path.

```
bp1 = Simulink.SimulationData.BlockPath(...  
{'sldemo_mdhref_depgraph/thermostat', ...  
'sldemo_mdhref_heater/Fahrenheit to Celsius', ...  
'sldemo_mdhref_F2C/Gain1'})
```

The resulting block path reflects the model reference hierarchy for the block path.

```
bp1 =
```

```
Simulink.BlockPath  
Package: Simulink
```

```
Block Path:  
  'sldemo_mdhref_depgraph/thermostat'  
  'sldemo_mdhref_heater/Fahrenheit to Celsius'  
  'sldemo_mdhref_F2C/Gain1'
```

---

```
convertToCell
```

## Purpose

Convert block path to cell array of strings

## Syntax

```
cellarray = Simulink.SimulationData.BlockPath.convertToCell()
```

## Output Arguments

cellarray

The cell array of strings representing the elements of the block path.

## Description

cellarray =

Simulink.SimulationData.BlockPath.convertToCell() converts a block path to a cell array of strings.

## Examples

```
bp1 = Simulink.SimulationData.BlockPath(...
{'sldemo_mdldref_depgraph/thermostat', ...
'sldemo_mdldref_heater/Fahrenheit to Celsius', ...
'sldemo_mdldref_F2C/Gain1'})
cellarray_for_bp1 = bp1.convertToCell()
```

The result is a cell array representing the elements of the block path.

```
cellarray_for_bp1 =

    'sldemo_mdldref_depgraph/thermostat'
    'sldemo_mdldref_heater/Fahrenheit to Celsius'
    'sldemo_mdldref_F2C/Gain1'
```

---

getBlock

## Purpose

Get single block path in model reference hierarchy

## Syntax

```
block = Simulink.SimulationData.BlockPath.getBlock(index)
```

## Input Arguments

index

The index of the block for which you want to get the block path. The index reflects the level in the model reference hierarchy. An index of 1 represents a block in the top-level model, an index of 2 represents a block in a model referenced by the block of index

# Simulink.SimulationData.BlockPath

---

1, and an index of  $n$  represents a block that the block with index  $n-1$  references.

## Output Arguments

`block`

The block representing the level in the model reference hierarchy specified by the `index` argument.

## Description

`blockpath =`

`Simulink.SimulationData.BlockPath.getBlock(index)` returns the block path of the block specified by the `index` argument.

## Example

Get the block for the second level in the model reference hierarchy.

```
bp1 = Simulink.SimulationData.BlockPath(...
{'sldemo_mdref_depgraph/thermostat', ...
'sldemo_mdref_heater/Fahrenheit to Celsius', ...
'sldemo_mdref_F2C/Gain1'})
blockpath = bp1.getBlock(2)
```

The result is the thermostat block, which is at the second level in the block path hierarchy.

```
blockpath =
```

```
sldemo_mdref_heater/Fahrenheit to Celsius
```

---

```
getLength
```

## Purpose

Get length of block path

## Syntax

```
length = Simulink.SimulationData.BlockPath.getLength()
```

## Output Arguments

length

The length of the block path. The length is the number of levels in the model reference hierarchy.

## Description

`length = Simulink.SimulationData.BlockPath.getLength()` returns a numeric value that corresponds to the number of levels in the model reference hierarchy for the block path.

## Example

Get the length of block path `bp1`.

```
bp1 = Simulink.SimulationData.BlockPath(...
{'sldemo_mdref_depgraph/thermostat', ...
'sldemo_mdref_heater/Fahrenheit to Celsius', ...
'sldemo_mdref_F2C/Gain1'})
length_bp1 = bp1.getLength()
```

The result reflects that the block path has three elements.

```
length_bp1 =
```

```
3
```

## See Also

[Simulink.BlockPath](#) | [Simulink.SimulationData.Dataset](#)

## How To

- “Specify the Instance That Has Normal Mode Visibility”

# Simulink.SimulationData.Dataset

---

## Purpose

Container for logged data using MATLAB timeseries objects

## Description

Simulink creates `Simulink.SimulationData.Dataset` objects to store data elements when:

- Performing signal logging, if you use the default signal logging format of `Dataset`
- Logging a data store

Using the `Dataset` format for signal logging offers several advantages, compared to the `ModelDataLogs` format. For a discussion of those advantages, see “Signal logging format”.

`Simulink.SimulationData.Dataset` provides a `getElement` method for accessing individual elements in the dataset. You can specify an element by index, name, or block path.

To select the `Dataset` format for signal logging, use *one* of these approaches:

- Set the **Configuration Parameters > Data Import/Export > Signal logging format** parameter to `Dataset`. For details, see “Signal logging format”.
- From the MATLAB command line, set the `SignalLoggingSaveFormat` parameter to `Dataset`.

Unlike the handle-based `ModelDataLogs` class, `Simulink.SimulationData.Dataset` is a value class. For details, see “Handle Versus Value Classes”.

If you have logged signal data in the `ModelDataLogs` format, you can use the `Simulink.ModelDataLogs.convertToDataset` function to update the `ModelDataLogs` data to `Dataset` format.

Simulink checks signal logging data format consistency for certain model referencing configurations. For details, see “Model Reference Signal Logging Format Consistency”. You can use the Upgrade Advisor (with the `upgradeadvisor` function) to upgrade a model to use `Dataset` format.

An alternative approach for handling reported inconsistencies is to use the `Simulink.SimulationData.updateDatasetFormatLogging` function to update the models to use Dataset format. This approach sets the **Model Configuration Parameters > Data Import/Export > Signal logging format** parameter to Dataset for each referenced model and each variant.

If you have logged signal data in the `ModelDataLogs` format, you can use the `Simulink.ModelDataLogs.convertToDataset` function to convert the `ModelDataLogs` data to Dataset format.

For details about migrating an existing model that uses `ModelDataLogs` format to use Dataset format, see “Migrate from ModelDataLogs to Dataset Format”.

## Property Summary

Name	Description
Name	Logged dataset name.

## Method Summary

Name	Description
<code>addElement</code>	Add an element to the end of a dataset.
<code>get</code> The <code>getElement</code> method uses the same syntax and behavior as the <code>get</code> method	Get element or collection of elements from the dataset, based on index, name, or block path.
<code>getElementNames</code>	Get the names of dataset elements.
<code>numElements</code>	Get number of elements in the dataset.
<code>setElement</code>	Change the element stored at the specified index

# Simulink.SimulationData.Dataset

---

## Properties

---

Name

### Description

The name of the dataset. The default is an empty string.

Specify a name when you want to easily distinguish one dataset from another. For example, if you have signal logging in model reference hierarchy, name the signal logging dataset for each model to make the output easier to analyze.

The following example shows how to give a dataset the name of Dataset1.

```
ds = Simulink.SimulationData.Dataset
ds.Name = 'Dataset1'
```

### Data Type

string

### Access

RW

## Methods

---

addElement

### Purpose

Add element to end of dataset.

### Syntax

```
dataset = dataset.addElement(element)
dataset = dataset.addElement(element,name)
```

### Input Arguments

element

The element to add to the dataset. The element must be one of the following:

- Simulink.SimulationData.Signal object
- Simulink.SimulationData.DataStoreMemory object

name

A string specifying a name for the element.

## Output Arguments

dataset

The dataset to which you add the element. The new element is added to the end of the dataset.

## Description

dataset =

`Simulink.SimulationData.Dataset.addElement(element)` adds an element to the `Simulink.SimulationData.Dataset` dataset.

dataset =

`Simulink.SimulationData.Dataset.addElement(element, name)` adds an element to the `Simulink.SimulationData.Dataset` dataset. This element receives the name that you specify with the `name` argument. You can use `name` to identify an element that does not have a name. If an object that already has a name (for example, a `Simulink.SimulationData.Signal` object to which you assigned a name), the element uses that name unless you specify a different name by using with the `name` argument.

## Examples

Create a dataset and add three elements to that dataset.

```
time = 0.1*(0:100)';  
ds = Simulink.SimulationData.Dataset;  
element1 = Simulink.SimulationData.Signal;  
element1.Name = 'A';  
element1.Values = timeseries(sin(time), time);  
ds = ds.addElement(element1);  
element2 = Simulink.SimulationData.Signal;  
element2.Name = 'B';  
element2.Values = timeseries(2*sin(time), time);  
ds = ds.addElement(element2);  
element3 = Simulink.SimulationData.Signal;  
element3.Name = 'C';
```

# Simulink.SimulationData.Dataset

---

```
element3.Values = timeseries(3*sin(time), time);  
ds = ds.addElement(element3)
```

The output is:

```
ds =
```

```
Simulink.SimulationData.Dataset  
Package: Simulink.SimulationData
```

```
Characteristics:  
    Name: 'topOut'  
    Total Elements: 3
```

```
Elements:  
    1: 'A'  
    2: 'B'  
    3: 'C'
```

---

get

## **Purpose**

Get element or collection of elements from dataset, based on index, name, or block path

The `getElement` method shares the same syntax and behavior as the `get` method.

## **Syntax**

```
element = dataset.get(search_arg)  
element = dataset.get(search_arg, '-blockpath')
```

## **Input Arguments**

`search_arg`

The index, name, or block path that identifies the element to access. To access an element by:

- Index — Set `search_arg` to a scalar numeric value.

- Name — Set `search_arg` to a character array.
- Block path — Specify a `Simulink.SimulationData.BlockPath` object. For signal logging, specify the blockpath for the source block for the element.

When specifying a name or block path for `search_arg` in cases where there could be duplicate names or block paths, use a cell array to consistently return a `Simulink.SimulationData.Dataset` object. (Such duplication could occur, for example, in a model reference hierarchy.)

'-blockpath'

Specify a block path directly. Set `search_arg` to a character array representing the full block path to the element, followed by '-blockpath'.

## Output Arguments

`element`

The element that the `getElement` method adds to the dataset. The returned value depends on the `search_arg` format.

<b>search_arg Argument Value</b>	<b>Returned Value</b>
Single-character array or <code>Simulink.SimulationData.BlockPath</code> object	Single element if only one element is found; dataset if more than one element with the specified name exists
Cell array containing one string or <code>Simulink.SimulationData.BlockPath</code> object	Dataset

## Description

`element = Simulink.SimulationData.Dataset.get(search_arg)` returns the element corresponding the index, name, or block path that you specify with `search_arg`.

`element = Simulink.SimulationData.Dataset.get(search_arg, '-blockpath')` returns the element corresponding the `search_arg`

# Simulink.SimulationData.Dataset

---

character array that identifies the block path for the element that you want to access.

## Examples

Access dataset elements in the top model of the `ex_bus_logging` model. The signal logging dataset is `topOut`.

```
open_system(docpath(fullfile(docroot, 'toolbox', 'simulink', 'examples',
open_system(docpath(fullfile(docroot, 'toolbox', 'simulink', 'examples',
sim('ex_bus_logging')
topOut
```

```
topOut =
```

```
Simulink.SimulationData.Dataset
Package: Simulink.SimulationData
```

```
Characteristics:
    Name: 'topOut'
    Total Elements: 4
```

```
Elements:
    1: 'COUNTERBUS'
    2: 'OUTPUTBUS'
    3: 'INCREMENTBUS'
    4: 'inner_bus'
```

```
-Use get or getElement to access elements by index, name or block path.
-Use addElement or setElement to add or modify elements.
```

```
Methods, Superclasses
```

---

Access the first element of the dataset, by specifying an index for `search_arg`.

```
element1 = topOut.get(1)
```

---

Access the second element of the dataset, by using a cell array to specify the name for `search_arg`.

```
element2 = topOut.get({'OUTPUTBUS'})
```

---

Access the third element of the dataset by block path. In the Simulink Editor, select the IncrementBusCreator block. At the MATLAB command line, use `gcb` for `search_arg` and use the `'-blockpath'` argument.

```
element3 = topOut.get(gcb,'-blockpath')
close_system('ex_bus_logging');
close_system('ex_mdhref_counter_bus');
```

---

`getElementNames`

### **Purpose**

Return the names of all of the elements in the dataset.

### **Syntax**

```
element_list = dataset.getElementNames
```

### **Input Arguments**

None

### **Output Arguments**

`element_list`

A cell array of the strings containing names of all of the elements of the dataset.

### **Description**

```
element_list =
Simulink.SimulationData.Dataset.getElementNames(element
) returns the names of all of the elements in the
Simulink.SimulationData.Dataset object.
```

# Simulink.SimulationData.Dataset

---

## Examples

Return the names of the elements for the topOut dataset (the signal logging data).

```
open_system(docpath(fullfile(docroot, 'toolbox', 'simulink', 'examples',
open_system(docpath(fullfile(docroot, 'toolbox', 'simulink', 'examples',
sim('ex_bus_logging')
el_names = topOut.getElementNames

el_names =

    'COUNTERBUS'
    'OUTPUTBUS'
    'INCREMENTBUS'
    'inner_bus'

close_system('ex_bus_logging');
close_system('ex_mdhref_counter_bus');
```

---

numElements

## Purpose

Get number of elements in dataset.

## Syntax

```
length = Simulink.SimulationData.Dataset.numElements()
```

## Description

`length = Simulink.SimulationData.Dataset.numElements()` Get the number of elements in the top-level dataset. To get the number of elements of a nested dataset, use `numElements` with the nested dataset.

## Example

Get the number of elements in the signal logging dataset for the `ex_bus_logging`.

```
length = topOut.numElements()
```

setElement

## Purpose

Change element stored at specified index.

## Syntax

```
dataset = Simulink.SimulationData.Dataset.setElement(index,...  
element)
```

```
dataset = Simulink.SimulationData.Dataset.setElement(index,...  
element,name)
```

## Input Arguments

index

A scalar numeric value specifying the index for the added element. The value must be between 1 and the number of elements plus 1.

element

The element to replace an existing element or to add to the dataset. The element must be one of the following:

- Simulink.SimulationData.Signal object
- Simulink.SimulationData.DataStoreMemory object

name

A string specifying a name for the element.

## Output Arguments

dataset

The dataset in which you change or add an element.

## Description

`dataset = Simulink.SimulationData.Dataset.setElement(index, element)` Change the element stored at the specified index, for an existing index. If `index` is one greater than the number of elements in the dataset, the element is added at the end of the dataset.

`dataset = Simulink.SimulationData.Dataset.setElement(index, element, name)` changes the element stored at the specified index and gives it the name that you specify with the `name` argument. You can use

# Simulink.SimulationData.Dataset

---

name to identify an element that does not have a name. If an object that already has a name (for example, a `Simulink.SimulationData.Signal` object to which you assigned a name), the element uses that name unless you specify a different name by using with the `name` argument.

## Example

```
ds = Simulink.SimulationData.Dataset
element1 = Simulink.SimulationData.Signal
element1.Name = 'A'
ds = ds.addElement(element1)
element2 = Simulink.SimulationData.Signal
element2.Name = 'B'
elementNew = Simulink.SimulationData.Signal
ds = ds.setElement(2,elementNew,'B1')
ds
```

```
ds =
```

```
Simulink.SimulationData.Dataset
Package: Simulink.SimulationData
```

```
Characteristics:
    Name: 'topOut'
    Total Elements: 2
```

```
Elements:
    1: 'A'
    2: 'B1'
```

Use `getElement` to access elements by index, name or block path.

Methods, Superclasses

## See Also

```
Simulink.SimulationData.BlockPath
| Simulink.SimulationData.Signal |
Simulink.SimulationData.DataStoreMemory |
Simulink.ModelDataLogs
```

## How To

- “Specify the Signal Logging Data Format”
- “Export Signal Data Using Signal Logging”
- “Log Data Stores”

# Simulink.SimulationData.DataStoreMemory

---

**Purpose** Container for data store logging information

**Description** Simulink uses `Simulink.SimulationData.DataStoreMemory` objects to store logging information from Data Store Memory blocks during simulation. The objects contain information about the blocks that write to the data store.

## Property Summary

Name	Description
BlockPath	Location of Data Store Memory block for the logged data store
DSMWriterBlockPaths	Location of Data Store Write blocks that write to the data store
DSMWriters	Data Store Write blocks for each signal value
Name	Name of the data store dataset
Scope	Scope of the data store: 'local' or 'global'
Values	Time and data that were logged

## Properties

---

BlockPath

### Description

Location of Data Store Memory block for the logged data store.

### Data Type

string

### Access

RW

---

DSMWriterBlockPaths

**Description**

Location of blocks that write to the data store. Each element of the array contains the full block path of one writer block.

**Data Type**

Vector of Simulink.SimulationData.BlockPath objects

**Access**

RO

---

DSMWriters

**Description**

The number of writes in the data store.

The *n*th element of DSMWriters contains the index of the element in DSMWriterBlockPaths that contains the block path of the writer that performed the *n*th write to Values.

**Data Type**

Integer vector

**Access**

RO

---

Name

**Description**

Name of the data store dataset

**Data Type**

string

**Access**

RO

# Simulink.SimulationData.DataStoreMemory

---

---

Scope

**Description**

Scope of the data store: 'local' or 'global'

**Data Type**

string

**Access**

RW

---

Values

**Description**

Time and data that were logged

**Data Type**

MATLAB timeseries

**Access**

RW

**See Also**

[Simulink.SimulationData.Dataset](#) |  
[Simulink.SimulationData.BlockPath](#) | [Data Store Memory](#) |  
[Data Store Write](#)

**How To**

- “Log Data Stores”

# Simulink.SimulationData.LoggingInfo

**Purpose** Signal logging override settings

**Description** This object specifies a set of signal logging override settings.  
Use a `Simulink.SimulationData.LoggingInfo` object to specify the signal logging override settings for a signal. You can use this object for the `LoggingInfo` property of a `Simulink.SimulationData.SignalLoggingInfo` object.

## Property Summary

Name	Description
<code>DataLogging</code>	Signal logging mode.
<code>NameMode</code>	Source of signal logging name.
<code>LoggingName</code>	Custom signal logging name.
<code>DecimateData</code>	Use interval for logging data points.
<code>Decimation</code>	Decimation value (M): Simulink logs every Mth data point.
<code>LimitDataPoints</code>	Limit number of data points to log.
<code>MaxPoints</code>	Maximum number of data points to log (N). The set of logged data points is the last N data points generated by the simulation.

## Method Summary

Name	Description
<code>LoggingInfo</code>	Create a set of signal logging override settings for a signal.

## Properties

---

`DataLogging`

### Description

Signal logging mode.

Indicates whether logging is enabled for this signal.

# Simulink.SimulationData.LoggingInfo

---

**Data Type**

logical value — {true} | false

**Access**

RW

---

NameMode

**Description**

Source of signal logging name.

Indicates whether the signal logging name is a custom name ('true') or whether the signal logging name is the same as the signal name ('false').

**Data Type**

logical value — true | {false}

**Access**

RW

---

LoggingName

**Description**

Custom signal logging name

The custom signal logging name to use for this signal, if the NameMode property is true.

**Data Type**

string

**Access**

RW

---

DecimateData

**Description**

Log a subset of sample points, selecting data points at a specified interval.

**Data Type**

logical value — true | {false}

**Access**

RW

---

Decimation

**Description**

Decimation value (M). If the `DecimateData` property is true, then Simulink logs every Mth data point.

**Data Type**

nonzero integer

**Access**

RW

---

LimitDataPoints

**Description**

Limit the number of data points to log.

**Data Type**

logical value — true | {false}

**Access**

RW

---

MaxPoints

**Description**

Maximum number of data points to log (N). If the `LimitDataPoints` property is true, then the set of logged data points includes the last N data points generated by the simulation.

**Data Type**

nonzero integer

**Access**

RW

# Simulink.SimulationData.LoggingInfo

---

## Methods

LoggingInfo

### Purpose

Create a `Simulink.SimulationData.LoggingInfo` object.

### Syntax

```
logging_info_object = Simulink.SimulationData.LoggingInfo()  
logging_info_object = Simulink.SimulationData.LoggingInfo(object)
```

### Input Arguments

`object`

A signal logging override settings object whose property values the constructor uses for the new `Simulink.SimulationData.LoggingInfo` object. The signal logging override object that you specify must be one of the following types of objects:

- `Simulink.SimulationData.LoggingInfo` object
- `Simulink.LoggingInfo` object

### Output Arguments

`logging_info_object`

A `Simulink.SimulationData.LoggingInfo` object.

### Description

`logging_info_object = Simulink.SimulationData.LoggingInfo()` creates a `Simulink.SimulationData.LoggingInfo` object that has default property values.

`logging_info_object = Simulink.SimulationData.LoggingInfo(object)` creates a `Simulink.SimulationData.LoggingInfo` object that copies the property values from the signal logging override object that you specify with the `object` argument.

### Examples

The following example creates a `Simulink.SimulationData.LoggingInfo` object with default settings, changes the `DecimateData` and `Decimation` properties,

and uses the object for the `LoggingInfo` property of a `Simulink.SimulationData.SignalLoggingInfo` object `mi`.

```
open_system(docpath(fullfile(docroot, 'toolbox', 'simulink', 'examples...
open_system(docpath(fullfile(docroot, 'toolbox', 'simulink', 'examples...
log_info = Simulink.SimulationData.LoggingInfo();
log_info.DecimateData = true;
log_info.Decimation = 2;
mi = Simulink.SimulationData.SignalLoggingInfo('ex_bus_logging');
mi.LoggingInfo = log_info
```

```
Simulink.SimulationData.SignalLoggingInfo
  Package: Simulink.SimulationData
```

```
  BlockPath:
    'ex_bus_logging'
```

```
  OutputPortIndex: 1
```

```
  LoggingInfo:
    DataLogging: 1
    NameMode: 0
    LoggingName: ''
    DecimateData: 1
    Decimation: 2
    LimitDataPoints: 0
    MaxPoints: 5000
```

## See Also

```
Simulink.SimulationData.ModelLoggingInfo |
Simulink.SimulationData.SignalLoggingInfo
| Simulink.SimulationData.BlockPath
| Simulink.SimulationData.Signal |
Simulink.SimulationData.DataStoreMemory |
Simulink.ModelDataLogs
```

## How To

- “Override Signal Logging Settings from MATLAB”
- “Specify the Signal Logging Data Format”

# Simulink.SimulationData.LoggingInfo

---

- “Export Signal Data Using Signal Logging”
- “Log Data Stores”

# Simulink.SimulationData.ModelLoggingInfo

## Purpose

Signal logging override settings for a model

## Description

This class is a collection of `Simulink.SimulationData.SignalLoggingInfo` objects that specify all signal logging override settings for a model.

Use methods and properties of this class to:

- Turn off logging for a signal or a Model block.
- Change logging settings for any signals that are already marked for logging within a model.

You can control whether a top-level model and referenced models use override signal logging settings or use the signal logging settings specified by the model. Use the `LoggingMode` and `LogAsSpecifiedByModels` properties to control which logging settings to apply.

Logging Mode for Models	Property Settings
For top-level model and all referenced models, use logging settings specified in the model.	Set <code>LoggingMode</code> to <code>LogAllAsSpecifiedInModel</code> .
For top-level model and all referenced models, use override signal logging settings.	Set <code>LoggingMode</code> to <code>OverrideSignals</code> .
For top-level model and referenced models, use a mix of override signal logging settings and the signal logging settings specified in the model.	Set <code>LoggingMode</code> to <code>OverrideSignals</code> . In the <code>LogAsSpecifiedByModels</code> cell array, include the models that you do not want to use the override signal logging settings.

# Simulink.SimulationData.ModelLoggingInfo

---

For more information and examples, see “Override Signal Logging Settings from MATLAB”.

## Property Summary

Name	Description
LoggingMode	Signal logging override status
LogAsSpecifiedByModels	Source of signal logging settings for the top-level model or a top-level Model block
Signals	All signals that have signal override settings

## Method Summary

Name	Description
findSignal	Find signals within the Signals vector, using block path and output port index.
verifySignalAndModelPaths	Verify signal and model paths for the model signal logging override object.
getLogAsSpecifiedInModel	Determine whether the model logs signals as specified in the model or uses override settings.
setLogAsSpecifiedInModel	Set the logging mode for the top-level model or a top-level Model block.
createFromModel	Create and populate a model signal logging override object with all logged signals in the model reference hierarchy.
ModelLoggingInfo	Set signals to log or override logging settings.

## Properties

---

LoggingMode

### Description

Signal logging override status. Values are:

- **OverrideSignals** — (Default) Uses the logging settings for signals, as specified in the **Signals** property. For models where `getLogAsSpecifiedInModel` is:
  - `true` — Logs all signals, as specified in the model.
  - `false` — Logs only the signals specified in the **Signals** property.
- **LogAllAsSpecifiedInModel** — Logs signals in the top-level model and all referenced models, as specified in the model. Simulink honors the signal logging indicators (blue antennae) and ignores the **Signals** property.

To change the logging mode for the top-level model or for a given reference model, use the `setLogAsSpecifiedInModel` method.

### Data Type

logical value — `true` or `false`

### Access

RW

---

LogAsSpecifiedByModels

### Description

When `LoggingMode` is set to `'OverrideSignals'`, this cell array specifies whether the top-level model or a top-level Model block logs all signals based on the signal logging settings defined in the model.

- For the top-level model and top-level Model blocks that the cell array includes, Simulink ignores the **Signals** property overrides.
- For a model or Model block that the cell array does *not* include, Simulink uses the **Signals** property to determine which signals to log.

# Simulink.SimulationData.ModelLoggingInfo

---

When `LoggingMode` is set to `'LogAllAsSpecifiedInModel'`, Simulink ignores the `LogAsSpecifiedByModels` property.

Use the `getLogAsSpecifiedInModel` method to determine whether the top-level model or top-level Model block logs signals as specified in the model (default logging), and use `setLogAsSpecifiedInModel` to turn default logging on and off.

## Data Type

cell array — For the top-level model, specify the model name. For Model blocks, specify the block path.

## Access

RW

---

## Signals

### Description

Vector of `Simulink.SimulationData.SignalLoggingInfo` objects for all signals with signal logging override settings.

### Data Type

vector of `Simulink.SimulationData.SignalLoggingInfo` objects

### Access

RW

## Methods

---

`createFromModel`

### Purpose

Create a `Simulink.SimulationData.ModelLoggingInfo` object for a top-level model, with override settings for each logged signal in the model.

### Syntax

```
model_logging_info_object = ...  
Simulink.SimulationData.ModelLoggingInfo.createFromModel(...  
model, options)
```

## Input Arguments

### model

Name of the top-level model for which to create a `Simulink.SimulationData.ModelLoggingInfo` object.

### options

You can use any combination of the following option name and value pairs to control the kinds of systems from which to include logged signals.

- **FollowLinks**
  - **on** — (Default) Include logged signals from inside of libraries.
  - **off** — Skip all libraries.
- **LookUnderMasks**
  - **all** — (Default) Include logged signals from all masked subsystems.
  - **none** — Skip all masked subsystems.
  - **graphical** — Include logged signals from masked subsystems that do not have a workspace or dialog box.
  - **functional** — Include logged signals from masked subsystems that do not have a dialog box.
- **Variants**
  - **ActiveVariants** — (Default) Include logged signals from only active subsystem and model reference variants.
  - **AllVariants** — Include logged signals from all subsystem and model reference variants.
- **RefModels**
  - **on** — (Default) Include logged signals from referenced models.
  - **off** — Skip all referenced models.

# Simulink.SimulationData.ModelLoggingInfo

---

If you select more than one option, then the created `Simulink.SimulationData.ModelLoggingInfo` object includes signals that fit the combinations (the “AND”) of the specified options. For example, if you set `FollowLinks` to on and set `RefModels` to off, then the model signal logging override object does not include signals from library links that exist inside of referenced models.

## Output Arguments

`model_logging_override_object`  
`Simulink.SimulationData.ModelLoggingInfo` object for the top-level model.

## Description

`model_logging_info_object = Simulink.SimulationData.ModelLoggingInfo.createFromModel(model)` creates a `Simulink.SimulationData.ModelLoggingInfo` object for the model that includes logged signals for the following kinds of systems:

- Libraries
- Masked subsystems
- Referenced models
- Active variants

`model_logging_override_object = Simulink.SimulationData.ModelLoggingInfo.createFromModel(model, options)` creates a `Simulink.SimulationData.ModelLoggingInfo` object for the model. The included logged signals reflect the options settings for the following kinds of systems:

- Libraries
- Masked subsystems
- Referenced models
- Variants

## Examples

The following example creates a model logging override object for the `sldemo_mdref_bus` model and automatically adds each logged signal in the model to that object:

```
mi = Simulink.SimulationData.ModelLoggingInfo.createFromModel(...
'sldemo_mdref_bus')

mi =

ModelLoggingInfo with properties:

    Model: 'sldemo_mdref_bus'
  LoggingMode: 'OverrideSignals'
LogAsSpecifiedByModels: {}
    Signals: [1x3 Simulink.SimulationData.SignalLoggingInfo]
```

To apply the model override object settings, use:

```
set_param(sldemo_mdref_bus, 'DataLoggingOverride', mi);
```

The following example explicitly specifies the kinds of systems from which to include signals, rather than use the default settings for each kind of system. This example specifies to include signals from all model reference variants (instead of using the default of including only active variant).

The `sldemo_mdref_variants` model has two variants: `sldemo_mrv_nonlinear_controller` and `sldemo_controller`. In this example, in each variant, you configure a signal for signal logging, and then create a `Simulink.SimulationData.ModelLoggingInfo` object. The resulting object includes, in the `Signals` property, two signals (one from each variant).

```
sldemo_mrv_nonlinear_controller;
sldemo_mrv_second_order_controller;
ph = get_param('sldemo_mrv_nonlinear_controller/Add', 'PortHandles');
set_param(ph.Outport(1), 'DataLogging', 'on');
```

# Simulink.SimulationData.ModelLoggingInfo

---

```
ph1 = get_param('sldemo_mrv_second_order_controller/Add', 'PortHandles');
set_param(ph1.Outport(1), 'DataLogging', 'on');
mi = Simulink.SimulationData.ModelLoggingInfo.createFromModel(...
'sldemo_mdref_variants', 'Variants', 'AllVariants')
```

## Results:

```
V_NONLINEAR_CONTROLLER =
```

```
Simulink.Variant
  Condition: 'CTRL==1'
```

```
V_SECOND_ORDER_CONTROLLER =
```

```
Simulink.Variant
  Condition: 'CTRL==2'
```

```
CTRL =
```

```
1
```

```
mi =
```

```
Simulink.SimulationData.ModelLoggingInfo
Package: Simulink.SimulationData
```

### Properties:

```
      Model: 'sldemo_mdref_variants'
      LoggingMode: 'OverrideSignals'
      LogAsSpecifiedByModels: {}
      Signals: [1x2 Simulink.SimulationData.SignalLoggingInfo]
```

### Methods

---

ModelLoggingInfo

## Purpose

Specify signals to log or override logging settings.

## Syntax

```
model_logging_override_object = ....  
Simulink.SimulationData.ModelLoggingInfo(model)
```

## Input Arguments

model

Name of the top-level model for which to create a Simulink.SimulationData.ModelLoggingInfo object

## Output Arguments

model\_logging\_override\_object

Simulink.SimulationData.ModelLoggingInfo object created for the specified top-level model.

## Description

`model_logging_override_object = Simulink.SimulationData.ModelLoggingInfo(model)` creates a Simulink.SimulationData.ModelLoggingInfo object for the specified top-level model.

If you use the Simulink.SimulationData.ModelLoggingInfo constructor, specify a Simulink.SimulationData.SignalLoggingInfo object for each logged signal for which you want to override logging settings.

To check that you have specified valid signal logging override settings for a model, use the `verifySignalAndModelPaths` method with the Simulink.SimulationData.ModelLoggingInfo object for the model.

## Examples

The following example shows how to log all signals as specified in the top-level model and all referenced models.

```
mi = Simulink.SimulationData.ModelLoggingInfo('sldemo_md1ref_bus');
```

# Simulink.SimulationData.ModelLoggingInfo

---

```
mi.LoggingMode = 'LogAllAsSpecifiedInModel'

mi =

  ModelLoggingInfo with properties:

        Model: 'sldemo_md1ref_bus'
   LoggingMode: 'LogAllAsSpecifiedInModel'
LogAsSpecifiedByModels: {}
        Signals: []
```

To apply the model override object settings, use:

```
set_param(sldemo_md1ref_bus, 'DataLoggingOverride', mi);
```

The following example shows how to log only signals in the top-level model:

```
mi = ...
Simulink.SimulationData.ModelLoggingInfo('sldemo_md1ref_bus');
mi.LoggingMode = 'OverrideSignals';
mi = mi.setLogAsSpecifiedInModel('sldemo_md1ref_bus', true);
set_param('sldemo_md1ref_bus', 'DataLoggingOverride', mi);
```

---

## findSignal

### Purpose

Find signals within the `Signals` vector, using a block path and optionally an output port index.

### Syntax

```
signal_indices = ...
    model_logging_override_object.findSignal(block_path)
signal_indices = ...
    model_logging_override_object.findSignal(...
    block_path, port_index)
```

## Input Arguments

`block_path`

Source block to search. The `block_path` must be one of the following:

- String
- Cell array of strings
- `Simulink.BlockPath` object

`port_index`

Index of the output port to search. Specify a scalar greater than, or equal to, 1.

## Output Arguments

`signal_indices`

Vector of numeric indices into the signals vector of the `Simulink.SimulationData.ModelLoggingInfo` object.

## Description

`signal_indices = model_logging_override_object.findSignal(block_path)` finds the indices of the signals for the block path that you specify.

To find a *single* instance of a signal within a referenced model, use a `Simulink.BlockPath` object or a cell array with a *full path*.

To find *all* instances of a signal within a referenced model, use a string with the *relative* path of the signal within the referenced model.

To find a logged chart signal within a Stateflow chart, use a `Simulink.BlockPath` object and set the `SubPath` property to the name of the Stateflow chart signal.

`signal_indices = model_logging_override_object.findSignal(block_path, port_index)` finds the indices of the output signal for the port that you specify, for the block path that you specify.

Do not use the `port_index` argument for Stateflow chart signals.

## Examples

To find a signal that is *not* in a Stateflow chart and that does *not* appear in multiple instances of a referenced model:

```
open_system(docpath(fullfile(docroot,'toolbox','simulink','examples','ex_bus_logging')))
% Open the referenced model
ex_mdref_counter_bus
mi = Simulink.SimulationData.ModelLoggingInfo.createFromModel(...
    'ex_bus_logging');
% Click the COUNTERBUSCreator block that is the source of
% the logged COUNTERBUS signal
signal_index = mi.findSignal(gcb)
```

The output is:

```
signal_index =

     1
```

---

To find a signal in a specific instance of a referenced model that is not in a Stateflow chart, use the following approach:

```
signal_index = mi.findSignal({'sldemo_mdref_bus/CounterA', ...
    'sldemo_mdref_counter_bus/Bus Creator'})
```

For an example that uses the `findSignal` method with a Stateflow chart, see “Override Logging Properties with the Command-Line API” in the Stateflow documentation.

---

```
getLogAsSpecifiedInModel
```

## Purpose

Determine whether the model logs as specified in the model or uses override settings.

## Syntax

```
logging_mode = ...
```

```
getLogAsSpecifiedInModel(model_logging_override_object, path)
```

## Input Arguments

`model_logging_override_object`

A `Simulink.SimulationData.ModelLoggingInfo` object.

`path`

The path is a string that specifies one of the following:

- Name of the top-level model
- Block path of a Model block in the top-level model

## Output Arguments

`logging_mode`

The `logging_mode` is:

- `true`, if the model specified by `path` is logged as specified in the model.
- `false`, if the model specified by `path` is logged using the override settings specified in the `Signals` property.

## Description

`logging_mode =`

`model_logging_override_object.getLogAsSpecifiedInModel(path)` returns:

- `true`, if the model specified by `path` is logged as specified in the model.
- `false`, if the model specified by `path` is logged using the override settings specified in the `Signals` property.

## Examples

In the following example, the `Simulink.SimulationData.ModelLoggingInfo` object `mi` uses the override settings specified in its `Signals` property.

```
mi = Simulink.SimulationData.ModelLoggingInfo('sldemo_mdref_bus');  
logging_mode = getLogAsSpecifiedInModel(mi, 'sldemo_mdref_bus')
```

```
logging_mode =
```

# Simulink.SimulationData.ModelLoggingInfo

---

0

---

```
setLogAsSpecifiedInModel
```

## **Purpose**

Set logging mode for top-level model or top-level Model block

## **Syntax**

```
setLogAsSpecifiedInModel(override_object, path)
```

## **Input Arguments**

**override\_object**

Simulink.SimulationData.ModelLoggingInfo object.

**path**

String that specifies one of the following:

- Name of the top-level model
- Block path of a Model block in the top-level model

**value**

Logging mode:

- **true**, if the model specified by path is logged as specified in the model
- **false**, if the model specified by path is logged using the override settings specified in the **Signals** property.

## **Description**

`setLogAsSpecifiedInModel(override_object, path, value)` sets the `LoggingMode` property for a top-level model or a Model block in the top-level model.

## **Example**

The following example shows how to log only signals in the top-level model, using the logging settings specified in that model:

```
sldemo_mdhref_bus;  
mi = Simulink.SimulationData.ModelLoggingInfo('sldemo_mdhref_bus');
```

```
mi.LoggingMode = 'OverrideSignals';
setLogAsSpecifiedInModel(mi, 'sldemo_md1ref_bus', true);
set_param('sldemo_md1ref_bus', 'DataLoggingOverride', mi);
```

---

verifySignalAndModelPaths

## Purpose

Verify paths in `Simulink.SimulationData.ModelLoggingInfo` object.

## Syntax

```
verified_object = verifySignalAndModelPaths...
    (model_logging_override_object, action)
```

## Input Arguments

`model_logging_override_object`

The `Simulink.SimulationData.ModelLoggingInfo` object to verify. This argument is required.

`action`

The action that the function performs if verification fails. This argument is optional. Specify one of the following values:

- `error` — (default) Throw an error when verification fails
- `warnAndRemove` — Issue a warning when verification fails and update the `Simulink.SimulationData.ModelLoggingInfo` object.
- `remove` — Silently update the `Simulink.SimulationData.ModelLoggingInfo` object.

## Output Arguments

`verified_object`

If the method detects no invalid paths, it returns the validated object. For example:

```
verified_object =

    Simulink.SimulationData.ModelLoggingInfo
    Package: Simulink.SimulationData
```

# Simulink.SimulationData.ModelLoggingInfo

---

Properties:

```
Model: 'logging_top'  
LoggingMode: 'OverrideSignals'  
LogAsSpecifiedByModels: {}  
Signals: [1x11 Simulink.SimulationData.SignalLoggingInfo]
```

If the method detects an invalid path, it performs the action specified by the action argument. By default, it issues an error message.

## Description

```
verified_object =  
verifySignalAndModelPaths(model_logging_override_object,  
action)
```

For a `Simulink.SimulationData.ModelLoggingInfo` object, verify that:

- All strings in the `LogAsSpecifiedByModels` property are either the name of the top-level model or the block path of a Model block in the top-level model.
- The block paths for signals in the `Signals` property refer to valid blocks within the hierarchy of the top-level model.
- The `OutputPortIndex` property for all signals in the `Signals` property are valid for the given block.
- All signals in the `Signals` property refer to *logged* signals.

The action argument specifies what action the method performs. By default, the method returns an error if it detects an invalid path.

If you use the `Simulink.SimulationData.ModelLoggingInfo` constructor and specify a `Simulink.SimulationData.SignalLoggingInfo` object for each signal, then consider using the `verifySignalAndModelPaths` method to verify that your object definitions are valid.

## Example

The following example shows how to validate the signal and block paths in a `Simulink.SimulationData.ModelLoggingInfo` object. Because the action argument is `warnAndRemove`, if the validation fails, the `verifySignalAndModelPaths` method issues a warning and updates the `Simulink.SimulationData.ModelLoggingInfo` object.

```
mi = Simulink.SimulationData.ModelLoggingInfo('sldemo_md1ref_bus');  
verified_object = verifySignalAndModelPaths...  
    (mi, 'warnAndRemove')
```

## See Also

`Simulink.BlockPath` | `Simulink.SimulationData.LoggingInfo`  
| `Simulink.SimulationData.SignalLoggingInfo`  
| `Simulink.SimulationData.Signal` |  
`Simulink.SimulationData.DataStoreMemory` |  
`Simulink.ModelDataLogs`

## How To

- “Override Signal Logging Settings from MATLAB”
- “Specify the Signal Logging Data Format”
- “Export Signal Data Using Signal Logging”
- “Log Data Stores”

# Simulink.SimulationData.SignalLoggingInfo

---

**Purpose** Signal logging override settings for signal

**Description** This object contains the signal override signal logging settings for a single logged signal.

## Property Summary

Name	Description
BlockPath	Simulink.BlockPath of source block of a signal to log.
OutputPortIndex	Index of an output port to log.
LoggingInfo	Simulink.SimulationData.LoggingInfo object containing all logging override settings for a signal.

## Method Summary

Name	Description
SignalLoggingInfo	Create a signal logging override object for a signal.

## Properties

---

BlockPath

### Description

Simulink.BlockPath of source block of signal to log. The block path represents the full model reference hierarchy.

To specify a specific instance of a signal, use an absolute path, reflecting the model reference hierarchy, starting at the top model. For example:

```
sig_log_info = Simulink.SimulationData.SignalLoggingInfo(...  
{ 'sldemo_mdref_bus/CounterA', ...  
'sldemo_mdref_counter_bus/Bus Creator' })
```

### Data Type

Simulink.BlockPath

**Access**

RW

---

OutputPortIndex

**Description**

Index of the output port to log. The index is a 1-based numeric value.

**Data Type**

nonzero integer

**Access**

RW

---

LoggingInfo

**Description**

Simulink.SimulationData.LoggingInfo object containing logging override settings for a signal. The logging settings specify whether signal logging is overridden for this signal. The logging settings also can specify a logging name, a decimation factor, and a maximum number of data points.

**Data Type**

cell array

**Access**

RW

## Methods

---

SignalLoggingInfo

**Purpose**

Construct a Simulink.SimulationData.SignalLoggingInfo object.

**Syntax**

```
signal_logging_info_object = ...  
    Simulink.SimulationData.SignalLoggingInfo()  
signal_logging_info_object = ...  
    Simulink.SimulationData.SignalLoggingInfo(path)
```

# Simulink.SimulationData.SignalLoggingInfo

---

```
signalLoggingInfo_object = ...  
    Simulink.SimulationData.SignalLoggingInfo(path,index)
```

## Input Arguments

path

The block path of the source block for which the signal logging override settings apply. If you use this argument without also using the port argument, then Simulink sets the output port index to 1.

index

Output port index to which the signal logging override settings apply.

## Output Arguments

signal\_logging\_object

Simulink.SimulationData.SignalLoggingInfo object that represents the override settings of a signal.

## Description

```
signal_logging_override_object =  
Simulink.SimulationData.SignalLogging Info() creates a  
Simulink.SimulationData.LoggingInfo object that contains default  
logging settings for a signal.
```

```
signal_logging_override_object =  
Simulink.SimulationData.SignalLogging Info(path) creates a  
Simulink.SimulationData.LoggingInfo object, using the specified  
block path, and sets the output port index to 1.
```

```
signal_logging_override_object =  
Simulink.SimulationData.SignalLogging Info(path, port)  
creates a Simulink.SimulationData.LoggingInfo object that contains  
default logging settings for the specified block path and output port  
index.
```

## Examples

The following example creates a `Simulink.SimulationData.SignalLoggingInfo` object for the first output port of the `Bus Creator` block in the `sldemo_mdref_bus` model.

```
sldemo_mdref_bus;
mi = Simulink.SimulationData.ModelLoggingInfo(...
'sldemo_mdref_bus');
mi.LoggingMode = 'OverrideSignals';
mi.Signals = ...
    Simulink.SimulationData.SignalLoggingInfo(...
        {'sldemo_mdref_bus/CounterA', ...
'sldemo_mdref_counter_bus/Bus Creator'}, 1)
```

The output is:

```
mi =
```

Data.ModelLoggingInfo with properties:

```
        Model: 'sldemo_mdref_bus'
      LoggingMode: 'OverrideSignals'
LogAsSpecifiedByModels: {}
      Signals: [1x1 Simulink.SimulationData.SignalLoggingInfo]
```

Methods

## See Also

`Simulink.SimulationData.ModelLoggingInfo`  
| `Simulink.SimulationData.LoggingInfo`  
| `Simulink.SimulationData.BlockPath`  
| `Simulink.SimulationData.Signal` |  
`Simulink.SimulationData.DataStoreMemory` |  
`Simulink.ModelDataLogs`

## How To

- “Override Signal Logging Settings from MATLAB”
- “Specify the Signal Logging Data Format”

# Simulink.SimulationData.SignalLoggingInfo

---

- “Export Signal Data Using Signal Logging”
- “Log Data Stores”

**Purpose** Container for signal logging information

**Description** Simulink uses `Simulink.SimulationData.Signal` objects to store signal logging information during simulation. The objects contain information about the source block for the signal, including the port type and index.

## Property Summary

Name	Description
BlockPath	Block path for the source block for the signal
Name	Name of signal element to use for name-based access
PortIndex	Numeric index of port that was logged
PortType	Type of port that was logged: for signal logging, the port type is 'outport'
Values	Time and data that were logged

## Properties

---

BlockPath

### Description

Block path for the source block for the signal

### Data Type

`Simulink.SimulationData.BlockPath`

### Access

RW

---

Name

### Description

Name of signal element to use for name-based access

# Simulink.SimulationData.Signal

---

## **Data Type**

string

## **Access**

RW

---

PortIndex

## **Description**

Numeric index of port that was logged

## **Data Type**

string

## **Access**

RW

---

PortType

## **Description**

Type of port that was logged: for signal logging, the port type is 'outport'

## **Data Type**

string

## **Access**

RW

---

Values

## **Description**

Time and data that were logged.

For an example of how to use the Values property and plot logged signal data, in the `sldemo_md1ref_bus` example, see “Logging Signal Data.”

## **Data Type**

A single MATLAB `timeseries` object or a MATLAB structure of `timeseries` objects (for bus signals)

## Access

RW

## See Also

`Simulink.BlockPath` | `Simulink.SimulationData.Dataset` | `timeseries`

## How To

- “Access Signal Logging Data”
- “Import MATLAB timeseries Data”
- “Import Structures of timeseries Objects for Buses”

# Simulink.SimulationOutput

---

<b>Purpose</b>	Access object values of simulation results						
<b>Description</b>	<p>The <code>SimulationOutput</code> class contains all simulation outputs, including workspace variables.</p> <p>Use <code>Simulink.SimulationOutput.who</code> and either <code>Simulink.SimulationOutput.get</code> or <code>Simulink.SimulationOutput.find</code> methods to access the output variable names and their respective values.</p>						
<b>Methods</b>	<table><tr><td><code>find</code></td><td>Access and display values of simulation results</td></tr><tr><td><code>get</code></td><td>Access and display values of simulation results</td></tr><tr><td><code>who</code></td><td>Access and display output variable names of simulation</td></tr></table>	<code>find</code>	Access and display values of simulation results	<code>get</code>	Access and display values of simulation results	<code>who</code>	Access and display output variable names of simulation
<code>find</code>	Access and display values of simulation results						
<code>get</code>	Access and display values of simulation results						
<code>who</code>	Access and display output variable names of simulation						
<b>Copy Semantics</b>	Value. To learn how value classes affect copy operations, see <a href="#">Copying Objects in the MATLAB Programming Fundamentals documentation</a> .						
<b>Examples</b>	<p>Simulate the <code>vdp</code> model and place the results of the <code>Simulink.SimulationOutput</code> object in <code>simOut</code>.</p> <pre>simOut = sim('vdp','SimulationMode','rapid','AbsTol','1e-5',...             'SaveState','on','StateSaveName','xoutNew',...             'SaveOutput','on','OutputSaveName','youtNew');</pre> <p>Store the variable names of the outputs in <code>simOutVars</code>, using the <code>who</code> method.</p> <pre>simOutVars = simOut.who</pre> <p>Simulink returns and displays:</p> <pre>simOutVars =</pre>						

```
'xoutNew'  
'youtNew'
```

Get the values of the variable *youtNew*.

```
yout = simOut.get('youtNew')
```

Simulink returns and displays the values.

## See Also

[Simulink.SimulationData.BlockPath](#) |  
[Simulink.SimulationData.Dataset](#)

## How To

- “Specify the Signal Logging Data Format”
- “Export Simulation Data”

# Simulink.SubsysDataLogs

**Purpose** Container for subsystem's signal data logs


## Description

**Note** The `Simulink.SubsysDataLogs` class is used in conjunction with the `ModelDataLogs` logging data format. The `ModelDataLogs` format is supported for backwards compatibility. The `ModelDataLogs` format will be removed in a future release.

For new models, use the `Dataset` logging format.

Simulink software creates instances of this class to contain logs for signals belonging to a subsystem (see “Export Signal Data Using Signal Logging”). Objects of this class have a variable number of properties. The first property, named `Name`, is the name of the subsystem whose log data this object contains. The remaining properties are signal log or signal log container objects containing the data logged for the subsystem specified by this object's `Name` property.

Consider, for example, the following model.

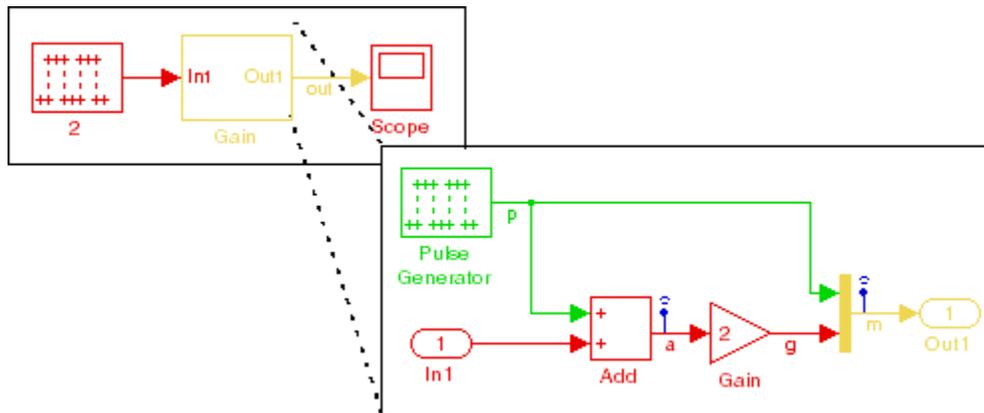

After simulation of this model, the MATLAB workspace contains a `Simulink.ModelDataLogs` object, named `logout`, that contains a

Simulink.SubsysDataLogs object, named Gain, that contains the log data for signals a and m in the subsystem named Gain.

```
>> logout.Gain
```

```
ans =
```

```
Simulink.SubsysDataLogs (Gain):
```

Name	elements	Simulink Class
a	1	Timeseries
m	2	TsArray

You can use either fully qualified log names or the unpack command to access the signal logs contained by a SubsysDataLogs object. For example, to access the amplitudes logged for signal a in the preceding example, you could enter the following at the MATLAB command line:

```
>> data = logout.Gain.a.Data;
```

```
or
```

```
>> logout.unpack('all');  
data = a.Data;
```

## See Also

“Signal Logging”, Simulink.ModelDataLogs, Simulink.ScopeDataLogs, Simulink.Timeseries, Simulink.TsArray, Simulink.SimulationData.Dataset, who, whos, unpack

# Simulink.TimeInfo

---

**Purpose** Provide information about time data in `Simulink.Timeseries` object

**Description** Simulink software creates instances of these objects to describe the time data that it includes in `Simulink.Timeseries` objects.

## Properties

Name	Access	Description
Units	RW	The units, e.g., 'seconds', in which the time series data are expressed in the associated <code>Simulink.Timeseries</code> object.
Start	RW	If the associated signal is not in a conditionally executed subsystem, this field contains the simulation time of the first signal value recorded in the associated <code>Simulink.Timeseries</code> object. If the signal is in a conditionally executed subsystem, this field contains an array of times when the system became active.
end	RW	If the associated signal is not in a conditionally executed subsystem, this field contains the simulation time of the last signal value recorded in the associated <code>Simulink.Timeseries</code> object. If the signal is in a conditionally executed subsystem, this field contains an array of times when the system became inactive.

Name	Access	Description
Increment	RW	The interval between simulation times at which signal data is logged in the associated <code>Simulink.Timeseries</code> object. If the signal is aperiodic (continuous signal with variable-step solver), this property has a value of NaN. A signal is periodic if it has a discrete sample time (not continuous or constant) or is continuous with a fixed-step solver.
Length	W	The number of signal samples recorded in the associated <code>Simulink.Timeseries</code> object, i.e., the length of the arrays referenced by the object's <code>Time</code> and <code>Data</code> properties.

## See Also

`Simulink.Timeseries` , `Simulink.SimulationData.Dataset`

# Simulink.Timeseries

---

**Purpose** Store data for any signal except mux or bus signal

**Description** Simulink software creates instances of this class to store signal data that it logs for any signal except a mux or bus signal, which are stored in a `Simulink.TsArray`. See “Export Signal Data Using Signal Logging” for more information.

## Properties

Name	Access	Description
Name	RW	Name of this signal log.
BlockPath	RW	Path of the block that output the signal logged in this signal log.
PortIndex	RW	Index of the output port that emitted the signal logged in this signal log.
SignalName	RW	Name of the signal logged in this signal log.
ParentName	RW	Name of the parent of the signal recorded in this log, if the signal is an element of a mux or a virtual bus; otherwise, the same as <code>SignalName</code> .
TimeInfo	RW	An object of <code>Simulink.TimeInfo</code> class that describes the time data in this log.
Time	RW	An array containing the simulation times at which signal data was logged.
Data	RW	An array containing the signal data.

## See Also


“Export Signal Data Using Signal Logging”, `Simulink.TimeInfo`, `Simulink.SimulationData.Dataset`, `Simulink.ModelDataLogs`, `Simulink.SubsysDataLogs`, `Simulink.ScopeDataLogs`, `Simulink.TsArray`, `who`, `whos`, `unpack`

**Purpose** Store data for mux or bus signal

**Description** Simulink software creates instances of this class to contain the data that it logs for a mux or bus signal. Other types of signals are stored in a `Simulink.Timeseries`. See “Export Signal Data Using Signal Logging” for more information.

Objects of the `Simulink.TsArray` class have a variable number of properties. The first property, called `Name`, specifies the log name of the logged signal. The remaining properties reference logs for the elements of the logged signal: `Simulink.Timeseries` objects for elementary signals and `Simulink.TsArray` objects for mux or bus signals. The name of each property is the log name of the corresponding signal.

For example, consider the following model.

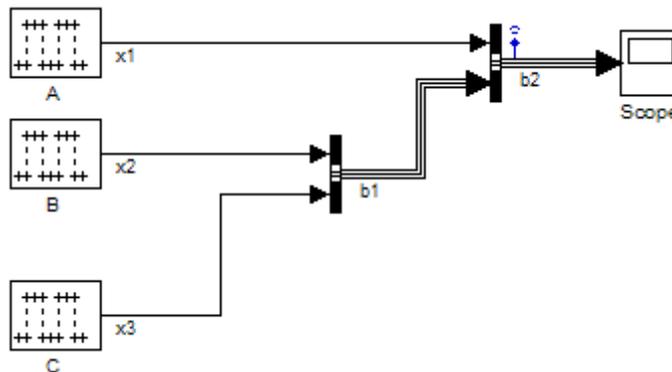

This model specifies that Simulink software should log the values of the signal `b2` during simulation. After simulation of this model, the MATLAB workspace contains a `Simulink.ModelDataLogs` object, named `logouts`, that contains a `Simulink.TsArray` object, named `b2`, that contains the logs for the elements of `b2`, i.e., for the elementary signal `x1` and the bus signal `b1`. entering the fully qualified name of the `Simulink.TsArray` object, i.e., `logouts.b2`, at the MATLAB command line reveals the structure of the signal log for this model.

# Simulink.TsArray

---

```
>> logout.b2
Simulink.TsArray (untitled/Bus Creator1):
  Name                elements  Simulink Class
  x1                   1        Timeseries
  b1                   2        TsArray
```

You can use either fully qualified log names or the `unpack` command to access the signal logs contained by a `Simulink.TsArray` object. For example, to access the amplitudes logged for signal `x1` in the preceding example, you could enter the following at the MATLAB command line:

```
>> data = logout.b2.x1.Data;
```

or

```
>> logout.unpack('all');
data = x1.Data;
```

## See Also

“Export Signal Data Using Signal Logging”, `Simulink.ModelDataLogs`, `Simulink.SubsysDataLogs`, `Simulink.ScopeDataLogs`, `Simulink.Timeseries`, `Simulink.SimulationData.Dataset`, `who`, `whos`, `unpack`

**Purpose** Specify a model reference variant and its execution environment

**Description** A `Simulink.Variant` object specifies a variant object, which is defined using a Boolean expression called a variant condition. A Variant Subsystem block (or optionally, a Model Variant block) use variant objects to associate an execution environment with each of its variants.

The variant condition references MATLAB variables and/or Simulink parameter objects in the base workspace called variant control variables. The variant condition must evaluate to `true` or `false` when the model is compiled.

For a given Model Variants block or Variant Subsystem block, you must define the variant objects so that only one evaluates to `true`. The variant object, whose variant condition evaluates to `true`, is the active variant for that variant block.

**Construction** `variant=Simulink.Variant(VariantCondition)` creates a variant object in the base workspace. The object name is `variant`, and the associated variant condition is `VariantCondition`. The object can have any unique legal MATLAB name.

The `VariantCondition` must be a Boolean expression that references at least one base workspace variable or parameter. A variant condition can include scalar variables, enumerated values, the operators `==`, `~=`, `&&`, `||`, `~`, as well as parentheses for grouping. If you specify the condition literally, surround it with single quotes.

You can also create a variant object using the Model explorer. Select the **Base Workspace**, choose **Add > Simulink.Variant**, and specify the desired name and variant condition in the Contents and Dialog panes. If you specify the condition literally, do *not* surround it with single quotes (unlike the MATLAB API, which requires single quotes).

## Properties

---

Condition

### Description

The Boolean expression associated with the variant object.

# Simulink.Variant

---

## Access

RW

## Examples

Create a variant object with a variant condition:

```
GU=Simulink.Variant('Fuel==1 && Emis==1')
```

## See Also

- “Define and Configure Variants”
- “Switching Between Variants”

## Purpose

Class representing a variant configurations data object

## Description

The variant configuration data object, stores a collection of variant configurations, constraints, and the name of the default active configuration. The `Simulink.VariantConfigurationData` class has properties that enable you to add, modify, or remove variant configurations, constraints, and control variables. Use an instance of `Simulink.VariantConfigurationData` class to do the following:

- Define and edit variant configurations.
- Add control variables to variant configurations.
- Add copy of variant configuration.
- Delete existing variant configurations, constraints, and sub model configurations.
- Set a specific configuration as default active.
- Validate model using default or a specific variant configuration.
- Query or create variant configurations data object for a given model.

## Properties

### VariantConfigurations

Set of variant configurations. The names of the configurations must be unique and valid MATLAB variable names.

### Constraints

Set of constraints that must always be satisfied by the model for all variant configurations. The name of the constraints must be unique and valid MATLAB variable names.

### DefaultConfigurationName

Name of the variant configuration to be used by default for validation.

# Simulink.VariantConfigurationData

---

## Methods

addConfiguration	Add a new variant configuration to the variant configuration data object
addConstraint	Add a constraint to the variant configuration data object
addControlVariables	Add control variables to an existing variant configuration
addCopyOfConfiguration	Add a copy of an existing variant configuration to the variant configuration data object
addSubModelConfigurations	Add to a variant configuration the names of the configurations to be used for submodels
existsFor	Check if variant configuration data object exists for a model
getConfiguration	Returns the variant configuration with a given name from a variant configuration data object
getDefaultConfiguration	Returns default variant configuration, if any, for a variant configuration data object
getFor	Get existing variant configuration data object for a model
getOrCreateFor	Get existing or create a new variant configuration data object for a model
removeConfiguration	Remove a variant configuration with a given name from the variant configuration data object

<code>removeConstraint</code>	Remove a constraint from the variant configuration data object
<code>removeControlVariable</code>	Remove a control variable from a variant configuration
<code>removeSubModelConfiguration</code>	Remove from a variant configuration, the configuration to be used for a sub model.
<code>setDefaultConfigurationName</code>	Set name of the default variant configuration for a variant configuration data object
<code>validateModel</code>	Validate all variant blocks in the model and submodels in the hierarchy during simulation
<code>VariantConfigurationData</code>	Object constructor with optional arguments for variant configurations, constraints, and default configuration name

## Concepts

- “Variant Management”

# Simulink.VariantConfigurationData.addConfiguration

---

**Purpose** Add a new variant configuration to the variant configuration data object

**Syntax**

```
vcdataObj.addConfiguration(name)
vcdataObj.addConfiguration(name,description)
vcdataObj.addConfiguration(name,description,controlVars)
vcdataObj.addConfiguration(name,description,controlVars,
    subModelConfigurations)
```

**Description** `vcdataObj.addConfiguration(name)` adds a new variant configuration with a given name to the variant configuration data object.

`vcdataObj.addConfiguration(name,description)` adds a new variant configuration with a given name and optional description to the variant configuration data object.

`vcdataObj.addConfiguration(name,description,controlVars)` adds a new variant configuration with a given name, optional description, and control variables to the variant configuration data object.

`vcdataObj.addConfiguration(name,description,controlVars,subModelConfigurations)` adds a new variant configuration with a given name, optional description, control variables, and submodel configurations to the variant configuration data object.

## Input Arguments

### **name**

Name of variant configuration being added.

### **description**

Description text for the variant configuration being added.

### **controlVars**

Control variables for the variant configuration being added. This argument must be a vector of structures with required fields: `Name` and `Value`. The values assigned to the `Name` field must be unique and valid MATLAB variable names. The `Value` field can contain either strings or `Simulink.Parameter` objects. The values

# Simulink.VariantConfigurationData.addConfiguration

---

of control variables are checked during validation of the variant configuration.

## **subModelConfigurations**

Vector of structures containing fields: `ModelName`, `ConfigurationName`. The names of submodels must be unique and valid MATLAB variable names and configuration names must be valid MATLAB variables.

## **Examples**

```
% Define the variant configuration data object
vcdataObj = Simulink.VariantConfigurationData;

% Add a variant configuration LinInterExp
vcdataObj.addConfiguration('LinInterExp')
```

## **See Also**

```
Simulink.VariantConfigurationData |
Simulink.VariantConfigurationData.addControlVariables |
Simulink.VariantConfigurationData.addSubModelConfigurations
```

# Simulink.VariantConfigurationData.addConstraint

---

<b>Purpose</b>	Add a constraint to the variant configuration data object
<b>Syntax</b>	<pre>vcdataObj.addConstraint(nameOfConstraint) vcdataObj.addConstraint(nameOfConstraint,condition) vcdataObj.addConstraint(nameOfConstraint,condition,description)</pre>
<b>Description</b>	<p><code>vcdataObj.addConstraint(nameOfConstraint)</code> adds a new constraint with a given name to <code>vcdataObj</code>.</p> <p><code>vcdataObj.addConstraint(nameOfConstraint,condition)</code> adds a new constraint with a given name and condition expression to <code>vcdataObj</code>.</p> <p><code>vcdataObj.addConstraint(nameOfConstraint,condition,description)</code> adds a new constraint with a given name, condition expression, and description to <code>vcdataObj</code>.</p>
<b>Input Arguments</b>	<p><b>nameOfConstraint</b></p> <p>Name of constraint being added. Must be unique and valid MATLAB variable name.</p> <p><b>condition</b></p> <p>Boolean expression that must evaluate to true. When the expression evaluates to true, it means the constraint is satisfied.</p> <p><b>description</b></p> <p>Text that describes the constraint.</p>
<b>Examples</b>	<pre>% Define the variant configuration data object vcdataObj = Simulink.VariantConfigurationData;  % Add a constraint named LinNotExtern vcdataObj.addConstraint('LinNotExtern','((Ctrl~=1)...    (PlantLocation ~=1))','Description of the constraint')</pre>
<b>See Also</b>	<p><code>Simulink.VariantConfigurationData</code>   <code>Simulink.VariantConfigurationData.removeConstraint</code>  </p>

# Simulink.VariantConfigurationData.addConstraint

---

Simulink.VariantConfigurationData.addConfiguration |  
Simulink.VariantConfigurationData.removeConfiguration

# Simulink.VariantConfigurationData.addControlVariables

<b>Purpose</b>	Add control variables to an existing variant configuration
<b>Syntax</b>	<code>vcdataObj.addControlVariables(nameOfConfiguration,controlVars)</code>
<b>Description</b>	<code>vcdataObj.addControlVariables(nameOfConfiguration,controlVars)</code> , adds control variables to a variant configuration.
<b>Input Arguments</b>	<b>nameOfConfiguration</b> Specifies the name of an existing configuration. <b>controlVars</b> Control variables being added. This argument must be a vector of structures with required fields: <code>Name</code> and <code>Value</code> . The values assigned to the <code>Name</code> field must be unique and valid MATLAB variable names. The <code>Value</code> field can contain either strings or <code>Simulink.Parameter</code> objects. The values of control variables are checked during validation of the variant configuration.

**Examples**

```
% Define the variant configuration data object
vcdataObj = Simulink.VariantConfigurationData;

% Add a variant configuration named LinInterExp
vcdataObj.addConfiguration('LinInterExp',...
'Linear Internal Experimental Plant Controller');

% Add control variables SmartSensor1Mod and PlanLocation
vcdataObj.addControlVariables('LinInterExp',...
    cell2struct({'SmartSensor1Mod', '2';...
                'PlanLocation', '1'},...
                {'Name', 'Value'}, 2))
```

**See Also**

`Simulink.VariantConfigurationData` |  
`Simulink.VariantConfigurationData.removeControlVariable` |  
`Simulink.VariantConfigurationData.addSubModelConfigurations`

# Simulink.VariantConfigurationData.addControlVariables

---

|  
Simulink.VariantConfigurationData.removeSubModelConfiguration

# Simulink.VariantConfigurationData.addCopyOfConfiguration

## Purpose

Add a copy of an existing variant configuration to the variant configuration data object

## Syntax

```
vcdataObj.addCopyOfConfiguration(nameOfExistingConfiguration)
vcdataObj.addCopyOfConfiguration(nameOfExistingConfiguration,
    nameOfTobeAddedConfiguration)
```

## Description

`vcdataObj.addCopyOfConfiguration(nameOfExistingConfiguration)`, adds a new configuration with a default name (default name is based on existing configuration name being copied) as a copy of the existing configuration to the variant configuration data object.

`vcdataObj.addCopyOfConfiguration(nameOfExistingConfiguration, nameOfTobeAddedConfiguration)`, adds a new configuration with a specified name, as a copy of the existing configuration, to the variant configuration data object.

## Input Arguments

### **nameOfExistingConfiguration**

Name of existing configuration.

### **nameOfTobeAddedConfiguration**

Name of new configuration to be added as a copy of the configuration.

## Examples

```
% Define the variant configuration data object
vcdataObj = Simulink.VariantConfigurationData;

% Add the variant configuration LinInterExp
vcdataObj.addConfiguration('LinInterExp',...
    'Linear Internal Experimental Plant Controller');

% Add a copy of variant configuration LinInterExp
% and name the copy as LinExtExp
vcdataObj.addCopyOfConfiguration('LinInterExp','LinExtExp')
```

# Simulink.VariantConfigurationData.addCopyOfConfigurat

---

## See Also

[Simulink.VariantConfigurationData](#) |  
[Simulink.VariantConfigurationData.addConfiguration](#) |  
[Simulink.VariantConfigurationData.removeConfiguration](#) |  
[Simulink.VariantConfigurationData.setDefaultConfiguration](#)

# Simulink.VariantConfigurationData.addSubModelConfiguration

**Purpose** Add to a variant configuration the names of the configurations to be used for submodels

**Syntax** `vcdataObj.addSubModelConfigurations(nameOfConfiguration, subModelConfigurations)`

**Description** `vcdataObj.addSubModelConfigurations(nameOfConfiguration, subModelConfigurations)`, specifies names of the configurations to be used for submodels.

**Input Arguments**

**nameOfConfiguration**  
Name for the configuration of submodels that are model references.

**subModelConfigurations**  
Vector of structures containing fields: `ModelName`, `ConfigurationName`. The names of submodels must be unique and valid MATLAB variable names and configuration names must be valid MATLAB variables.

**Examples**

```
% Add the path to the model file
addpath(fullfile(docroot,'toolbox','simulink','examples'));

% Load the model
load_system('slexVariantManagementExample');

% Define the variant configuration data object
vcdataObj = Simulink.VariantConfigurationData;

% Add the variant configuration LinInterExp
vcdataObj.addConfiguration('LinInterExp',...
    'Linear Internal Experimental Plant Controller');

% Add a new submodel configuration to LinInterExp
vcdataObj.addSubModelConfigurations('LinInterExp',...
    [struct('ModelName', 'slexVariantManagementExternalPlantMdlRef',...
```

# Simulink.VariantConfigurationData.addSubModelConfigur

---

```
'ConfigurationName', 'LowFid'))]
```

## See Also

[Simulink.VariantConfigurationData](#) |  
[Simulink.VariantConfigurationData.removeSubModelConfiguration](#)  
| [Simulink.VariantConfigurationData.addControlVariables](#) |  
[Simulink.VariantConfigurationData.removeControlVariable](#)

# Simulink.VariantConfigurationData.existsFor

---

<b>Purpose</b>	Check if variant configuration data object exists for a model
<b>Syntax</b>	<code>Simulink.VariantConfigurationData.existsFor(modelNameOrHandle)</code>
<b>Description</b>	<code>Simulink.VariantConfigurationData.existsFor(modelNameOrHandle)</code> returns true if the variant configuration data object exists for the model.
<b>Input Arguments</b>	<b>modelNameOrHandle</b> Name or handle to the model.
<b>Examples</b>	<pre>% Add the path to the model file addpath(fullfile(docroot,'toolbox','simulink','examples'));  % Load the model load_system('slexVariantManagementExample');  % Checks whether a variant configuration % data object exists for model [exists] = Simulink.VariantConfigurationData.existsFor... ('slexVariantManagementExample')</pre>
<b>See Also</b>	<code>Simulink.VariantConfigurationData</code>   <code>Simulink.VariantConfigurationData.getFor</code>

# Simulink.VariantConfigurationData.getConfiguration

**Purpose** Returns the variant configuration with a given name from a variant configuration data object

**Syntax** `vcdataObj.getConfiguration(nameOfConfiguration)`

**Description** `vcdataObj.getConfiguration(nameOfConfiguration)` returns a specific variant configuration that is associated with the variant configuration data object.

**Input Arguments**

**nameOfConfiguration**  
Name of the variant configuration to be returned.

**Examples**

```
% Define the variant configuration data object
vcdataObj = Simulink.VariantConfigurationData;

% Add the variant configuration LinInterExp
vcdataObj.addConfiguration('LinInterExp',...
    'Linear Internal Experimental Plant Controller');

% Add a control variable SmartSensor1Mod
vcdataObj.addControlVariables('LinInterExp',...
    [struct('Name','SmartSensor1Mod','Value','2')]);

% Obtain information on the variant configuration..
% LinInterExp from the variant configuration data object
vc = vcdataObj.getConfiguration('LinInterExp')
```

**See Also** `Simulink.VariantConfigurationData` |  
`Simulink.VariantConfigurationData.addConfiguration` |  
`Simulink.VariantConfigurationData.removeConfiguration` |  
`Simulink.VariantConfigurationData.getDefaultConfiguration`

# Simulink.VariantConfigurationData.getDefaultConfiguration

**Purpose** Returns default variant configuration, if any, for a variant configuration data object

**Syntax** `vcdatabj.getDefaultConfiguration`

**Description** `vcdatabj.getDefaultConfiguration` returns the default variant configuration. If no default variant configuration is defined, then [] is returned.

**Examples**

```
% Define the variant configuration data object
vcdatabj = Simulink.VariantConfigurationData;

% Add the variant configuration named LinInterExp
vcdatabj.addConfiguration('LinInterExp',...
    'Linear Internal Experimental Plant Controller');

% Add the variant configuration LinInterStd
vcdatabj.addConfiguration('LinInterStd',...
    'Linear Internal Standard Plant Controller');

% Set LinExtExp as the default variant configuration
vcdatabj.setDefaultConfigurationName('LinExtExp');

% Obtain the default variant configuration
defvc = vcdatabj.getDefaultConfiguration
```

**See Also** `Simulink.VariantConfigurationData` | `Simulink.VariantConfigurationData.getConfiguration` | `Simulink.VariantConfigurationData.setDefaultConfigurationName`

# Simulink.VariantConfigurationData.getFor

---

<b>Purpose</b>	Get existing variant configuration data object for a model
<b>Syntax</b>	<code>Simulink.VariantConfigurationData.getFor(modelNameOrHandle)</code>
<b>Description</b>	<code>Simulink.VariantConfigurationData.getFor(modelNameOrHandle)</code> , returns the variant configuration object for the model. If no default variant configuration is defined, then [] is returned.
<b>Input Arguments</b>	<b>modelNameOrHandle</b> Model name or handle.
<b>Examples</b>	<pre>% Add the path to the model file addpath(fullfile(docroot,'toolbox','simulink','examples'));  % Load the model load_system('slexVariantManagementExample');  % Obtain variant configuration data object for the model % slexVariantManagementExample vcdataObj = Simulink.VariantConfigurationData.getFor... ('slexVariantManagementExample')</pre>
<b>See Also</b>	<code>Simulink.VariantConfigurationData</code>   <code>Simulink.VariantConfigurationData.existsFor</code>   <code>Simulink.VariantConfigurationData.getOrCreateFor</code>

# Simulink.VariantConfigurationData.getOrCreateFor

---

<b>Purpose</b>	Get existing or create a new variant configuration data object for a model
<b>Syntax</b>	<code>Simulink.VariantConfigurationData.getOrCreateFor(modelNameOrHandle)</code>
<b>Description</b>	<code>Simulink.VariantConfigurationData.getOrCreateFor(modelNameOrHandle)</code> , returns the object if the variant configuration data objects exists otherwise, creates an empty object.
<b>Input Arguments</b>	<b>modelNameOrHandle</b> Model name or handle to the model.
<b>Examples</b>	<pre>% Add the path to the model file addpath(fullfile(docroot,'toolbox','simulink','examples'));  % Load the model load_system('slexVariantManagementExample');  % Obtain existing or create an empty variant configuration % data object for the slexVariantManagementExample model vcdataObj = Simulink.VariantConfigurationData.getOrCreateFor... ('slexVariantManagementExample')</pre>
<b>See Also</b>	<code>Simulink.VariantConfigurationData</code>   <code>Simulink.VariantConfigurationData.existsFor</code>   <code>Simulink.VariantConfigurationData.getFor</code>

# Simulink.VariantConfigurationData.removeConfiguration

---

**Purpose** Remove a variant configuration with a given name from the variant configuration data object

**Syntax** `vcdataObj.removeConfiguration(nameOfConfiguration)`

**Description** `vcdataObj.removeConfiguration(nameOfConfiguration)` removes the configuration from the variant configuration data object.

**Input Arguments**

**nameOfConfiguration**  
Name of the configuration to be removed.

**Examples**

```
% Define the variant configuration data object
vcdataObj = Simulink.VariantConfigurationData;

% Add the LinInterExp variant configuration
% to the variant configuration data object
vcdataObj.addConfiguration('LinInterExp',...
    'Linear Internal Experimental Plant Controller');

% Remove the LinInterExp configuration
% from the variant configuration data object
vcdataObj.removeConfiguration('LinInterExp')
```

**See Also** [Simulink.VariantConfigurationData](#) | [Simulink.VariantConfigurationData.addConfiguration](#) | [Simulink.VariantConfigurationData.getConfiguration](#)

# Simulink.VariantConfigurationData.removeConstraint

---

**Purpose** Remove a constraint from the variant configuration data object

**Syntax** `vcdataObj.removeConstraint(nameOfConstraint)`

**Description** `vcdataObj.removeConstraint(nameOfConstraint)`, removes the constraint from the variant configuration data object.

**Input Arguments**

**nameOfConstraint**  
Name of the constraint to be removed.

**Examples**

```
% Define the variant configuration data object
vcdataObj = Simulink.VariantConfigurationData;

% Add a constraint named LinNotExtern
vcdataObj.addConstraint('LinNotExtern','((Ctrl~=1)...
    || (PlantLocation ~=1))',..
    'Description of the constraint');

% Remove the constraint LinNotExtern
% from the variant configuration
vcdataObj.removeConstraint('LinNotExtern')
```

**See Also** `Simulink.VariantConfigurationData` | `Simulink.VariantConfigurationData.addConstraint`

# Simulink.VariantConfigurationData.removeControlVariable

---

<b>Purpose</b>	Remove a control variable from a variant configuration
<b>Syntax</b>	<code>vcdataObj.removeControlVariable(nameOfConfiguration, nameOfControlVariable)</code>
<b>Description</b>	<code>vcdataObj.removeControlVariable(nameOfConfiguration, nameOfControlVariable)</code> removes a control variable from a variant configuration.
<b>Input Arguments</b>	<p><b>nameOfConfiguration</b> Name of the variant configuration.</p> <p><b>nameOfControlVariable</b> Name of the control variable to be deleted.</p>
<b>Examples</b>	<pre>% Define the variant configuration data object vcdataObj = Simulink.VariantConfigurationData;  % Add a variant configuration named LinInterExp vcdataObj.addConfiguration('LinInterExp',...     'Linear Internal Experimental Plant Controller');  % Add control variables SmartSensor1Mod and PlanLocation vcdataObj.addControlVariables('LinInterExp',...     [struct('Name','SmartSensor1Mod','Value','2')]);  % Remove the control variable SmartSensor1Mod % from the configuration LinInterExp vcdataObj.removeControlVariable('LinInterExp',...     'SmartSensor1Mod')</pre>
<b>See Also</b>	<code>Simulink.VariantConfigurationData</code>   <code>Simulink.VariantConfigurationData.addControlVariables</code>

# Simulink.VariantConfigurationData.removeSubModelConfiguration

<b>Purpose</b>	Remove from a variant configuration, the configuration to be used for a sub model.
<b>Syntax</b>	<code>vcdataObj.removeSubModelConfiguration(nameOfConfiguration, nameOfSubModel)</code>
<b>Description</b>	<code>vcdataObj.removeSubModelConfiguration(nameOfConfiguration, nameOfSubModel)</code> , removes the configuration specified for a submodel.
<b>Input Arguments</b>	<p><b>nameOfConfiguration</b></p> <p>Name of the submodel configuration to be removed.</p> <p><b>nameOfSubModel</b></p> <p>Name of the submodel from which the configuration must be removed.</p>
<b>Examples</b>	<pre>% Load the model load_system('slexVariantManagementExample');  % Define the variant configuration data object vcdataObj = Simulink.VariantConfigurationData;  % Add the variant configuration named LinInterExp vcdataObj.addConfiguration('LinInterExp',...     'Linear Internal Experimental Plant Controller',controlvars);  % Add a new submodel configuration to LinInterExp vcdataObj.addSubModelConfigurations('LinInterExp',...     [struct('ModelName','slexVariantManagementExternalPlantMdlRef',...         'ConfigurationName','LowFid')]);  % Remove the submodel configuration LinInterExp % from the submodel slexVariantManagementExternalPlantMdlRef vcdataObj.removeSubModelConfiguration('LinInterExp',...     'slexVariantManagementExternalPlantMdlRef')</pre>

# Simulink.VariantConfigurationData.removeSubModelConf

---

## See Also

[Simulink.VariantConfigurationData](#) |

[Simulink.VariantConfigurationData.addSubModelConfigurations](#)

# Simulink.VariantConfigurationData.setDefaultConfigurationName

**Purpose** Set name of the default variant configuration for a variant configuration data object

**Syntax** `vcdataObj.setDefaultConfiguration(nameOfConfiguration)`

**Description** `vcdataObj.setDefaultConfiguration(nameOfConfiguration)` sets the default configuration name. A variant configuration must exist with the same name. If an empty value is passed, then the default configuration name is cleared.

**Input Arguments**

**nameOfConfiguration**  
Name of the configuration to be set as the default.

**Examples**

```
% Define the variant configuration data object
vcdataObj = Simulink.VariantConfigurationData;

% Add the LinInterExp variant configuration
vcdataObj.addConfiguration('LinInterExp',...
    'Linear Internal Experimental Plant Controller');

% Set the configuration LinInterExp as default
vcdataObj.setDefaultConfigurationName('LinInterExp');

% Obtain the default variant configuration
dconfig = vcdataObj.getDefaultConfiguration
```

**See Also** `Simulink.VariantConfigurationData` | `Simulink.VariantConfigurationData.getDefaultConfiguration`



# Simulink.VariantConfigurationData.validateModel

---

```
        {'Name', 'Value'}, 2));

% Associate this object with the model
set_param('slexVariantManagementExample',...
    'VariantConfigurationObject', 'vcdataObj');

% Validate the model slexVariantManagementExample using
% the configuration LinInterExp
[valid, errors] = Simulink.VariantConfigurationData.validateModel...
    ('slexVariantManagementExample', 'LinInterExp')
```

## See Also

```
Simulink.VariantConfigurationData |
Simulink.VariantConfigurationData.getFor |
Simulink.VariantConfigurationData.existsFor |
Simulink.VariantConfigurationData.getOrCreateFor
```

# Simulink.VariantConfigurationData.VariantConfigurationData

**Purpose** Object constructor with optional arguments for variant configurations, constraints, and default configuration name

**Syntax** `vardataObj =  
Simulink.VariantConfigurationData(variantConfigurations)`

**Description** `vardataObj =  
Simulink.VariantConfigurationData(variantConfigurations),` constructor that creates an empty variant configuration data object. Optionally, can also accept constraints and a default configuration name as inputs.

**Input Arguments** **variantConfigurations**  
Configurations that are part of the variant configuration data object.

**constraints**

Constraints to be satisfied by the model.

**defaultConfigurationName**

Name of the default configuration

**Examples** `% Create an empty variant configuration data object  
vcdataObj = Simulink.VariantConfigurationData`

**See Also** `Simulink.VariantConfigurationData |  
Simulink.VariantConfigurationData.addConfiguration  
| Simulink.VariantConfigurationData.addConstraint |  
Simulink.VariantConfigurationData.addControlVariables |  
Simulink.VariantConfigurationData.addSubModelConfigurations`

# Simulink.WorkspaceVar

---

**Purpose** Contains information about workspace variables and blocks that use them

---

**Note** Simulink.WorkspaceVar will be removed in a future release. Use Simulink.VariableUsage instead.

---

**Description** A Simulink.WorkspaceVar object describes attributes of a workspace variable and lists the blocks that use the variable. The Simulink.findVars function returns one or more Simulink.WorkspaceVar objects that embody the results of searching for variables.

**Tip** Only a Simulink.WorkspaceVar constructor can set any field value in a Simulink.WorkspaceVar object. The fields are otherwise read-only.

## Properties

### Name

The name of the variable described by the Simulink.WorkspaceVar object

### Workspace

The name of the workspace in which the variable resides, for example:

Workspace value	Meaning
'base workspace'	The MATLAB base workspace
'MyModel'	The model workspace for the model MyModel.
'MyModel/Mask1'	The mask workspace for the masked block Mask1 in the model MyModel.

### WorkspaceType

The type of workspace in which the variable resides. The possible values are:

- 'base'
- 'model'
- 'mask'

## UsedByBlocks

A cell array of strings. Each string names a block that uses the variable. `Simulink.findVars` populates this field.

## Construction

`var = Simulink.WorkspaceVar (VarName, WkspName)`, where both arguments are strings, returns a `Simulink.WorkspaceVar` object with Name `VarName` and Workspace `WkspName`. The inputs need not exist in the model. Simulink will provide a `WorkspaceType` automatically.

`vars = Simulink.WorkspaceVar (VarNames, WkspName)`, where `VarNames` is a cell array of strings, returns a vector of `Simulink.WorkspaceVar` objects, each with a specified name and `Workspace = WkspName`.

## Methods

`[VarsOut] = VarsIn1.setdiff (VarsIn2)` — Calls `setdiff` to return the difference between `VarsIn1` and `VarsIn2`. The arguments and return value are vectors of `Simulink.WorkspaceVar` objects.

`[VarsOut] = VarsIn1.intersect (VarsIn2)` — Calls `intersect` to return the intersection between `VarsIn1` and `VarsIn2`. The arguments and return value are vectors of `Simulink.WorkspaceVar` objects.

## Examples

Create a `Simulink.WorkspaceVar` object for the variable 'k' in the base workspace.

```
var = Simulink.WorkspaceVar('k', 'base workspace');
```

Return a vector of `Simulink.WorkspaceVar` objects, one object for each variable returned by `who`.

# Simulink.WorkspaceVar

---

```
[vars] = Simulink.WorkspaceVar (who, WkspName)
```

---

Return a vector of Simulink.WorkspaceVar objects, one object for each variable returned by whos.

```
[vars] = Simulink.WorkspaceVar (who, WkspName)
```

---

Create a vector of Simulink.WorkspaceVar objects that describes all the variables in a model workspace

```
hws = get_param('mymodel', 'ModelWorkspace');  
vars=Simulink.WorkspaceVar(hws.whos, 'MyModel')
```

---

Create a vector of Simulink.WorkspaceVar objects that describes all the variables in a mask workspace

```
maskVars = get_param('mymodel/maskblock', 'MaskWSVariables');  
vars = Simulink.WorkspaceVar(maskVars, 'mymodel/maskblock');
```

## See Also

- Simulink.findVars
- setdiff
- intersect

**Purpose** Get information about workspace variables and blocks that use them

**Tip** Only a `Simulink.VariableUsage` constructor can set any field value in a `Simulink.VariableUsage` object. The fields are otherwise read-only.

**Description** Create a `Simulink.VariableUsage` object to get the attributes of a workspace variable and determine the blocks that use the variable.

**Construction** Create a `Simulink.VariableUsage` object as follows.

`var = Simulink.VariableUsage (VarName, WkspName)`, where both arguments are strings, returns a `Simulink.VariableUsage` object with Name `VarName` and Workspace `WkspName`. The inputs need not exist in the model. Simulink will provide a `WorkspaceType` automatically.

`vars = Simulink.VariableUsage (VarNames, WkspName)`, where `VarNames` is a cell array of strings, returns a vector of `Simulink.VariableUsage` objects, each with a specified name and `Workspace = WkspName`.

**Properties**

**Name**

The name of the variable described by the `Simulink.VariableUsage` object

**Source**

The name of the workspace in which the variable resides, for example:

Workspace value	Meaning
'base workspace'	The MATLAB base workspace
'MyModel'	The model workspace for the model MyModel.
'MyModel/Mask1'	The mask workspace for the masked block Mask1 in the model MyModel.

# Simulink.VariableUsage

---

## SourceType

The type of workspace in which the variable resides. The possible values are:

- 'base workspace'
- 'model workspace'
- 'mask workspace'

## Users

A cell array of strings. Each string names a block that uses the variable. `Simulink.findVars` populates this field.

## Methods

`[VarsOut] = VarsIn1.setdiff (VarsIn2)` — Calls `setdiff` to return the difference between `VarsIn1` and `VarsIn2`. The arguments and return value are vectors of `Simulink.VariableUsage` objects.

`[VarsOut] = VarsIn1.intersect (VarsIn2)` — Calls `intersect` to return the intersection between `VarsIn1` and `VarsIn2`. The arguments and return value are vectors of `Simulink.VariableUsage` objects.

## Examples

Create a `Simulink.VariableUsage` object for the variable 'k' in the base workspace.

```
var = Simulink.VariableUsage('k', 'base workspace');
```

---

Return a vector of `Simulink.VariableUsage` objects, one object for each variable returned by `whos`.

```
[vars] = Simulink.VariableUsage (whos, WkspName)
```

---

Create a vector of `Simulink.VariableUsage` objects that describes all the variables in a model workspace

```
hws = get_param('mymodel', 'ModelWorkspace');  
vars = Simulink.VariableUsage(hws.whos, 'MyModel')
```

---

Create a vector of `Simulink.VariableUsage` objects that describes all the variables in a mask workspace

```
maskVars = get_param('mymodel/maskblock', 'MaskWSVariables');  
vars = Simulink.VariableUsage(maskVars, 'mymodel/maskblock');
```

### See Also

`Simulink.findVars` | `setdiff` | `intersect`

# Simulink.ModelManagement.Project.CurrentProject.loadProject

**Purpose** (To be removed) Load an existing Simulink project and close any currently open project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.loadProject` will be removed in a future release. Use `slproject.loadProject` instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.loadProject(pathtoprojectfolder)
```

**Description** `p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`p.loadProject(pathtoprojectfolder)` loads the Simulink project in the `pathtoprojectfolder` specified.

Loading a project closes any currently open project. If the currently open project is configured to run shutdown shortcuts, the shutdown tasks run before loading the next project.

**Input  
Argument**

**pathtoprojectfolder**

The complete path to the folder that contains the `.SimulinkProject` folder.

**Example**

To load an existing Simulink project, use the following commands.

- 1 Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

- 2 Use the `loadProject` method specifying the path to your project folder (that contains the `.SimulinkProject` folder), for example:

```
p.loadProject('C:\work\airframe');
```

# Simulink.ModelManagement.Project.CurrentProject.loadP

---

## See Also

`Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.isProjectLoaded

**Purpose** (To be removed) Return true when a Simulink project is loaded and false when no project is loaded

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.isProjectLoaded` will be removed in a future release. Use `isLoading` instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
isLoading = p.isProjectLoaded
```

**Description**

`p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`isLoading = p.isProjectLoaded` returns 1 or 0 depending on whether a Simulink project is loaded or not loaded, respectively.

**Example**

To determine if a Simulink project is loaded, use the following commands.

**1** Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

**2** Use the `isProjectLoaded` method.

```
isLoading = p.isProjectLoaded;
```

`isLoading = 0` indicates that no Simulink project is loaded

`isLoading = 1` indicates a Simulink project is loaded

**See Also** `Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.getRo

## Purpose

(To be removed) Get the name of the root folder for the currently open Simulink project

---

**Note** `getRootDirectory` will be removed in a future release. Access the `RootFolder` property of a project object instead. Use `simulinkproject` to get a project object.

---

## Syntax

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.getRootDirectory
```

## Description

`p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`p.getRootDirectory` returns the name of the root folder for the currently open Simulink project.

This method is particularly useful when creating start up and shutdown scripts, or functions, for a project. Use this method to determine the project root folder so that sub-folders of the project can be added to the MATLAB path without using absolute paths.

## Example

To get the name of the root folder for the currently open Simulink project, use the following commands.

- 1 Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

- 2 Use the `getRootDirectory` method.

```
p.getRootDirectory;
```

## See Also

`Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.getRootFolder

**Purpose** (To be removed) Get the name of the root folder for the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.getRootFolder` will be removed in a future release. Access the `RootFolder` property of a project object instead. Use `simulinkproject` to get a project object.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.getRootFolder
```

**Description** `p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`p.getRootFolder` returns the name of the root folder for the currently open Simulink project.

This method is particularly useful when creating start up and shutdown scripts, or functions, for a project. Use this method to determine the project root folder so that sub-folders of the project can be added to the MATLAB path without using absolute paths.

**Example** To get the name of the root folder for the currently open Simulink project, use the following commands.

**1** Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

**2** Use the `getRootFolder` method.

```
p.getRootFolder;
```

**See Also** `Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.getProjectName

---

**Purpose** (To be removed) Get the name of the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.getProjectName` will be removed in a future release. See “Simulink Project File Management” for links to project functions.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
name = p.getProjectName
```

**Description**

`p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`name = p.getProjectName` returns the name of the currently open Simulink project.

**Example**

To get the name of the currently open Simulink project, use the following commands.

**1** Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

**2** Use the `getProjectName` method.

```
name = p.getProjectName;
```

**See Also** `Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.getLabels

**Purpose** (To be removed) Get a list of labels in a category in the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.getLabels` will be removed in a future release. Instead, use `simulinkproject` and then access the `Labels` property of project files, or use `findLabel` to get labels by name.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
labels = p.getLabels(category)
```

**Description** `p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`labels = p.getLabels(category)` returns an array of label names in a specified `category` in the currently open Simulink project.

**Input  
Argument**

**category**

The name of a category in the currently open Simulink project.

**Examples**

- To get a list of labels in category `Review` in the currently open Simulink project, use the following commands.

- 1 Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

- 2 Use the `getLabels` method.

```
labels = p.getLabels('Review');
```

- 3 To view the cell array containing the category names, use

```
labels{:}
```

# Simulink.ModelManagement.Project.CurrentProject.getLabels

---

- To display all the labels within the currently open Simulink project, run the following code.

```
p = Simulink.ModelManagement.Project.CurrentProject();
categories = p.getCategories;
for jj = 1:numel(categories)
    thisCategory = categories{jj};
    disp([thisCategory ' : ']);
    labels = p.getLabels(thisCategory);
    for kk = 1:numel(labels)
        thisLabel = labels(kk);
        disp([' - ' thisLabel.Name]);
    end
end
```

## See Also

Simulink.ModelManagement.Project.CurrentProject

# Simulink.ModelManagement.Project.CurrentProject.GetFilesInP

## Purpose

(To be removed) Get a list of files in the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.GetFilesInProject` will be removed in a future release. Instead, use `simulinkproject` and then access the `Files` property of the project object.

---

## Syntax

```
p = Simulink.ModelManagement.Project.CurrentProject()  
projFiles = p.GetFilesInProject  
projFiles = p.GetFilesInProject(includeFolders)
```

## Description

`p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`projFiles = p.GetFilesInProject` returns a cell array of strings containing the fully qualified filenames of all the files and the folders in the currently open Simulink project.

`projFiles = p.GetFilesInProject(includeFolders)` specifies whether to include folders in the list of project files. `includeFolders` is an optional logical input specifying whether to include folders (`true`) or exclude folders (`false`). Default: `true`.

## Example

To get the names of files in the currently open Simulink project, use the following commands.

- 1 Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject()
```

- 2 Use the `getFilesInProject` method.

```
projFiles = p.GetFilesInProject;
```

- 3 To view the cell array containing the file names, use

```
projFiles{:}
```

# Simulink.ModelManagement.Project.CurrentProject.GetFiles

---

**4** Use the `getFilesInProject` method and exclude folders.

```
projFiles = p.GetFilesInProject(false);
```

## See Also

`Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.getCategories

**Purpose** (To be removed) Get a list of the categories of file labels in the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.getCategories` will be removed in a future release. Instead, use `simulinkproject` and then access the `Categories` property of the project object.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
categories = p.getCategories
```

**Description**

`p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`categories = p.getCategories` returns a cell array of category names in the currently open Simulink project.

**Example**

To get a list of categories in the currently open Simulink project, use the following commands.

**1** Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

**2** Use the `getCategories` method.

```
categories = p.getCategories;
```

**3** To view the cell array containing the category names, use

```
categories{:}
```

**See Also** `Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.getAtt

---

**Purpose** (To be removed) Get a list of labels attached to a file in the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.getAttachedLabels` will be removed in a future release. Instead, use `simulinkproject` to get a project object, access the `Files` property of the project, and get the `Labels` property of a file.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()
labels = p.getAttachedLabels(filePath)
```

**Description** `p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`labels = p.getAttachedLabels(filePath)` returns an array of label objects for a file specified using `filePath`.

**Input  
Argument**

**filePath**

The fully qualified path to the file within the root folder of the project.

**Example**

To get a list of labels in a file in the currently open Simulink project, use the following commands.

- 1 Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

- 2 Create a fully qualified path for the file.

---

**Note** The use of the `getRootDirectory` method in this step is optional.

---

# Simulink.ModelManagement.Project.CurrentProject.getAttached

---

```
file = fullfile(p.getRootDirectory, 'work', 'myExample.c');
```

**3** Use the `getAttachedLabels` method.

```
labels = p.getAttachedLabels(file);
```

## **See Also**

`Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.detachLabelFromFile

---

**Purpose** (To be removed) Remove a label from a file in the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.detachLabelFromFile` will be removed in a future release. Use `removeLabel` instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.detachLabelFromFile(filePath,labelObj)
```

**Description**

`p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`p.detachLabelFromFile(filePath,labelObj)` removes a label from a file specified using `filePath` using the label object `labelObj`.

**Input Argument**

**filePath**

The fully qualified path to the file from which the label is to be removed.

**labelObj**

The label object used to remove the label from the file.

**Example**

To remove a label from a file labelled with review status `Approved`, use the following commands.

1 Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

2 Create a fully qualified path for the file.

---

**Note** The use of the `getRootDirectory` method in this step is optional.

---

# Simulink.ModelManagement.Project.CurrentProject.detachLabel

---

```
file = fullfile(p.getRootDirectory, 'work', 'myExample.c');
```

**3** Create a label object.

```
labelObj = Simulink.ModelManagement.Project.Label('Review','Approved');
```

**4** Use the detachLabelFromFile method.

```
p.detachLabelFromFile(file,labelObj);
```

## See Also

Simulink.ModelManagement.Project.CurrentProject

# Simulink.ModelManagement.Project.CurrentProject.createLabel

**Purpose** (To be removed) Create a label in a category in the currently open Simulink project

---

**Note** Simulink.ModelManagement.Project.CurrentProject.createLabel will be removed in a future release. Use createLabel instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
labelObj =  
Simulink.ModelManagement.Project.Label(categoryName,  
    labelName);  
p.createLabel(labelObj)
```

**Description** p = Simulink.ModelManagement.Project.CurrentProject() creates an instance of the CurrentProject class.

```
labelObj =  
Simulink.ModelManagement.Project.Label(categoryName,  
labelName);
```

creates a label object named labelObj for the category categoryName.

```
p.createLabel(labelObj)
```

creates the label in the category.

If the category for the new label does not exist, it is created with the label object.

## Input Argument

### categoryName

The name of the category in which the new label is to be added.

### labelName

The name of the new label.

## Examples

To create a new label John in category Owner in the currently open Simulink project, use the following commands.

- 1 Create an instance of the CurrentProject class.

# Simulink.ModelManagement.Project.CurrentProject.createLabel

---

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

**2** Create a label object.

```
labelObj = Simulink.ModelManagement.Project.Label('Owner', 'John');
```

**3** Add the label to the category.

```
p.createLabel(labelObj);
```

## See Also

Simulink.ModelManagement.Project.CurrentProject

# Simulink.ModelManagement.Project.CurrentProject.createCategory

**Purpose** (To be removed) Create a category in the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.createCategory` will be removed in a future release. Use `createCategory` instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.createCategory(categoryName)
```

**Description** `p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`p.createCategory(categoryName)` creates a category named `categoryName` in the currently open Simulink project.

The new category is created immediately. If you are using a version control tool for your project, you must commit the resulting changes to the `.SimulinkProject` folder to source control.

## Input Argument

### **categoryName**

The name of the new category.

## Examples

To create a new category `Owner` in the currently open Simulink project, use the following commands.

- 1 Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

- 2 Use the `createCategory` method.

```
p.createCategory('Owner');
```

## See Also

`Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.close

---

**Purpose** (To be removed) Close the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.close` will be removed in a future release. Use `close` instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.close
```

**Description**

`p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`p.close` closes the currently open Simulink project.

**Example** To close a currently open Simulink project, use the following commands.

**1** Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

**2** Use the `close` method.

```
p.close;
```

**See Also** `Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.attachLabelToFile

---

**Purpose** (To be removed) Add a label to a file in the currently open Simulink project

---

**Note** Simulink.ModelManagement.Project.CurrentProject.attachLabelToFile will be removed in a future release. Use addLabel instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.attachLabelToFile(filePath,labelObj)
```

**Description**

p = Simulink.ModelManagement.Project.CurrentProject() creates an instance of the CurrentProject class.

p.attachLabelToFile(filePath,labelObj) adds a label to a file specified using filePath using the label object labelObj .

**Input Argument**

**filePath**

The fully qualified path to the file to which the label is to be attached.

**labelObj**

The label object used to attach the label to the file.

**Example**

To attach a label to a file in the currently open Simulink project with a review status Approved, use the following commands.

1 Create an instance of the CurrentProject class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

2 Create a fully qualified path for the file.

---

**Note** The use of the getRootDirectory method in this step is optional.

---

# Simulink.ModelManagement.Project.CurrentProject.attachLabel

---

```
file = fullfile(p.getRootDirectory, 'work', 'myExample.c');
```

**3** Create a label object.

```
labelObj = Simulink.ModelManagement.Project.Label('Review','Approved');
```

**4** Use the attachLabelToFile method.

```
p.attachLabelToFile(file,labelObj);
```

## See Also

Simulink.ModelManagement.Project.CurrentProject

# Simulink.ModelManagement.Project.CurrentProject.addFile

---

**Purpose** (To be removed) Add a file to the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.addFileToProject` will be removed in a future release. Use `addFile` instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.addFileToProject(filePath)
```

**Description**

`p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`p.addFileToProject(filePath)` adds a file on the specified `filePath` to the currently open Simulink project.

**Input Argument**

**filePath**

The fully qualified path to the file within the root folder of the project.

**Example**

To add a file to the currently open Simulink project, use the following commands.

**1** Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

**2** Create a fully qualified path for the file.

---

**Note** The use of the `getRootDirectory` method in this step is optional.

---

```
file = fullfile(p.getRootDirectory, 'work', 'newshortcut.m');
```

**3** Use the `addFileToProject` method.

# Simulink.ModelManagement.Project.CurrentProject.addFileToP

---

```
p.addFileToProject(file);
```

## **See Also**

`Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.removeCategory

---

**Purpose** (To be removed) Remove a category from the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.removeCategory` will be removed in a future release. Use `removeCategory` instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.removeCategory(categoryName)
```

**Description**

`p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`p.removeCategory(categoryName)` removes the category.

**Input Argument**

**categoryName**

The name of the category that is to be removed.

**Examples**

To remove a category `Owner` from the currently open Simulink project, use the following commands.

**1** Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

**2** Remove the category.

```
p.removecategory('Owner');
```

**See Also** `Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.removeFile

**Purpose** (To be removed) Remove a file from the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.removeFileFromProject` will be removed in a future release. Use `removeFile` instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.removeFileFromProject(filePath)
```

**Description**

`p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`p.removeFileFromProject(filePath)` removes a file on the specified `filePath` from the currently open Simulink project.

**Input Argument**

**filePath**

The fully qualified path to the file within the root folder of the project.

**Example**

To remove a file from the currently open Simulink project, use the following commands.

**1** Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

**2** Create a fully qualified path for the file.

---

**Note** The use of the `getDirectory` method in this step is optional.

---

```
file = fullfile(p.getRootDirectory, 'work', 'newshortcut.m');
```

**3** Use the `removeFileFromProject` method.

# Simulink.ModelManagement.Project.CurrentProject.remove

---

```
p.removeFileFromProject(file);
```

## See Also

Simulink.ModelManagement.Project.CurrentProject

# Simulink.ModelManagement.Project.CurrentProject.removeLabel

**Purpose** (To be removed) Remove a label from a category in the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.removeLabel` will be removed in a future release. Use `removeLabel` instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
labelObj =  
Simulink.ModelManagement.Project.Label(categoryName,  
    labelName);  
p.removeLabel(labelObj)
```

**Description** `p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

```
labelObj =  
Simulink.ModelManagement.Project.Label(categoryName,  
labelName);
```

creates a label object named `labelObj` in category `categoryName`.

```
p.removeLabel(labelObj)
```

removes the label from the category.

## Input Argument

### **categoryName**

The name of the category from which the label is to be removed.

### **labelName**

The name of the label.

## Examples

To remove a label `John` from category `Owner` in the currently open Simulink project, use the following commands.

1 Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

# Simulink.ModelManagement.Project.CurrentProject.remove

---

**2** Create a label object.

```
labelObj= Simulink.ModelManagement.Project.Label('Owner','John');
```

**3** Remove the label from the category.

```
p.removeLabel(labelObj);
```

## See Also

Simulink.ModelManagement.Project.CurrentProject

# Simulink.ModelManagement.Project.CurrentProject.setProjectName

**Purpose** (To be removed) Change the name of the currently open Simulink project

---

**Note** `Simulink.ModelManagement.Project.CurrentProject.setProjectName` will be removed in a future release. See “Project Management” for links to project functions.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
p.setProjectName(newName)
```

**Description** `p = Simulink.ModelManagement.Project.CurrentProject()` creates an instance of the `CurrentProject` class.

`p.setProjectName(newName)` changes the name of the currently open Simulink project to the specified `newName`.

The name change occurs immediately within your current project. If you are using a version control tool for your project, you must commit the changes to the `.SimulinkProject` folder to source control.

**Input Argument**

**newName**

The new specified name for an open Simulink project that replaces the existing name.

**Example** To rename the currently open Simulink project to `myProject`, use the following commands.

**1** Create an instance of the `CurrentProject` class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

**2** Use the `setProjectName` method.

```
p.setProjectName('myProject');
```

**See Also** `Simulink.ModelManagement.Project.CurrentProject`

# Simulink.ModelManagement.Project.CurrentProject.export

**Purpose** (To be removed) Export Simulink project to Zip file

---

**Note** Simulink.ModelManagement.Project.CurrentProject.export will be removed in a future release. Use export instead.

---

**Syntax**

```
p = Simulink.ModelManagement.Project.CurrentProject()  
export(p, filename.zip)  
export(p, filename.zip, definitionType)
```

**Description**

p = Simulink.ModelManagement.Project.CurrentProject() creates an instance of the CurrentProject class.

export(p, filename.zip) exports the project p to the Zip file specified in filename. filename can be a file name, in which case Simulink exports the file to the current folder, or a fully qualified path name.

export(p, filename.zip, definitionType) exports the project using the specified definitionType for the project definition files. If you do not specify definitionType, the project's current setting is used. Use the definitionType export option if you want to change project definition file management from the type selected when the project was created. definitionType can be Simulink.ModelManagement.Project.DefinitionFiles.SingleFile or Simulink.ModelManagement.Project.DefinitionFiles.MultiFile. MultiFile is better for avoiding merging issues on shared projects. SingleFile is faster but is likely to cause merge issues when two users both submit changes in the same project to a source control tool.

**Example**

To export the currently open Simulink project to a Zip file, use the following commands.

1 Create an instance of the CurrentProject class.

```
p = Simulink.ModelManagement.Project.CurrentProject();
```

# Simulink.ModelManagement.Project.CurrentProject.export

---

**2** Use the export method.

```
export(p, 'myfilename.zip')
```

## **See Also**

Simulink.ModelManagement.Project.CurrentProject

## Purpose

Specify name, value, units, and other properties of Simulink dual-scaled parameter

## Description

This class extends the `Simulink.Parameter` class so that you can define an object that stores two scaled values of the same physical value. For example, for temperature measurement, you can store a Fahrenheit scale and a Celsius scale with conversion defined by a computational method that you provide. Given one scaled value, the `Simulink.DualScaledParameter` computes the other scaled value using the computational method.

A dual-scaled parameter has:

- A calibration value. The value that you prefer to use.
- A main value. The real-world value that Simulink uses.
- An internal stored integer value. The value that is used in the embedded code.

You can use `Simulink.DualScaledParameter` objects in your model for both simulation and code generation. The parameter computes the internal value before code generation via the computational method. This offline computation results in leaner generated code.

If you provide the calibration value, the parameter computes the main value using the computational method. This method can be a first-order rational function.

$$y = \frac{ax + b}{cx + d}$$

- $x$  is the calibration value.
- $y$  is the main value.
- $a$  and  $b$  are the coefficients of the CalToMain compute numerator.
- $c$  and  $d$  are the coefficients of the CalToMain compute denominator.

If you provide the calibration minimum and maximum values, the parameter computes minimum and maximum values of the main value.

# Simulink.DualScaledParameter

---

Simulink performs range checking of parameter values. The software alerts you when the parameter object value lies outside a range that corresponds to its specified minimum and maximum values and data type.

You can use the `Simulink.DualScaledParameter` dialog box to define a `Simulink.DualScaledParameter` object. To open the dialog box:

- 1** In the Model Explorer, select the base workspace or a model workspace and select **Add > Add Custom**.
- 2** In the Model Explorer — Select Object dialog box, set **Object class** to `Simulink.DualScaledParameter`.

## Property Dialog Box

### Main Attributes Tab

The image shows a dialog box titled "Simulink.DualScaledParameter: param" with a close button (X) in the top right corner. The dialog has two tabs: "Calibration Attributes" and "Main Attributes", with "Main Attributes" currently selected. The "Main Attributes" tab contains the following fields and controls:

- Value:** A text input field containing "[ ]".
- Data type:** A dropdown menu set to "auto" with a right-pointing arrow button ">>".
- Dimensions:** A text input field containing "[0 0]".
- Complexity:** A text input field containing "real".
- Minimum:** A text input field containing "[ ]".
- Maximum:** A text input field containing "[ ]".
- Units:** An empty text input field.
- Code generation options:** A section containing:
  - Storage class:** A dropdown menu set to "Auto".
  - Alignment:** A text input field containing "-1".
- Description:** A large empty text area.

At the bottom of the dialog, there are four buttons: "OK", "Cancel", "Help", and "Apply".

# Simulink.DualScaledParameter

---

This tab shows the properties inherited from the `Simulink.Parameter` class. For more information, see `Simulink.Parameter`.

## Calibration Attributes Tab

The screenshot shows a dialog box titled "Simulink.DualScaledParameter: param" with a close button (X) in the top right corner. The dialog has two tabs: "Calibration Attributes" (selected) and "Main Attributes".

Under the "Calibration Attributes" tab, the following fields are visible:

- Calibration value: [ ]
- Calibration minimum: [ ] Calibration maximum: [ ]
- CalToMain compute numerator: [ ]
- CalToMain compute denominator: [ ]
- Calibration name: ""
- Calibration units: ""

Below these fields is a "Parameter validation" section with a sub-label "Is configuration valid:" and a dropdown menu showing "true".

At the bottom of the dialog is a "Diagnostic message:" label and a large, empty text area.

At the bottom right of the dialog are four buttons: "OK", "Cancel", "Help", and "Apply".

# Simulink.DualScaledParameter

---

## Calibration value

Calibration value of the parameter. The value that you prefer to use. The default value is [ ] (unspecified). Specify a finite, real, double value.

Before specifying **Calibration value**, you must specify **CalToMain compute numerator** and **CalToMain compute denominator** to define the computational method. The parameter uses the computational method and the calibration value to calculate the main value that Simulink uses.

## Calibration minimum

Minimum value for the calibration parameter. The default value is [ ] (unspecified). Specify a finite, real, double scalar value.

Before specifying **Calibration minimum**, you must specify **CalToMain compute numerator** and **CalToMain compute denominator** to define the computational method. The parameter uses the computational method and the calibration minimum value to calculate the minimum or maximum value that Simulink uses. A first order rational function is strictly monotonic, either increasing or decreasing. If it is increasing, setting the calibration minimum sets the main minimum value. If it is decreasing, setting the calibration minimum sets the main maximum.

If the parameter value is less than the minimum value or if the minimum value is outside the range of the parameter data type, Simulink generates a warning. In these cases, when updating the diagram or starting a simulation, Simulink generates an error.

## Calibration maximum

Maximum value for the calibration parameter. The default value is [ ] (unspecified). Specify a finite, real, double scalar value.

Before specifying **Calibration maximum**, you must specify **CalToMain compute numerator** and **CalToMain compute denominator** to define the computational method. The

parameter uses the computational method and the calibration maximum value to calculate the corresponding maximum or minimum value that Simulink uses. A first order rational function is strictly monotonic, either increasing or decreasing. If it is increasing, setting the calibration maximum sets the main maximum value. If it is decreasing, setting the calibration maximum sets the main minimum.

If the parameter value is less than the minimum value or if the minimum value is outside the range of the parameter data type, Simulink generates a warning. In these cases, when updating the diagram or starting a simulation, Simulink generates an error.

### **Cal2Main compute numerator**

Specify the numerator coefficients a and b of the first-order linear equation:

$$y = \frac{ax + b}{cx + d}$$

The default value is [ ] (unspecified). Specify finite, real, double scalar values for a and b. For example, [1 1] or, for reciprocal scaling, 1.

Once you have applied Cal2Main compute numerator, you cannot change it.

### **Cal2Main compute denominator**

Specify the denominator coefficients c and d of the first-order linear equation:

$$y = \frac{ax + b}{cx + d}$$

The default value is [ ] (unspecified). Specify finite, real, double scalar values for c and d. For example, [1 1].

# Simulink.DualScaledParameter

---

Once you have applied Cal2Main compute denominator, you cannot change it.

## Calibration name

Specify the name of the calibration parameter. The default value is ''. Specify a string value, for example, 'T1'.

## Calibration units

Specify the measurement units for this calibration value. This field is intended for use in documenting this parameter. The default value is ''. Specify a string value, for example, 'Fahrenheit'.

## Is configuration valid

Simulink indicates whether the configuration is valid. The default value is `true`. If Simulink detects an issue with the configuration, it sets this field to `false` and provides information in the **Diagnostic message** field. You cannot set this field.

## Diagnostic message

If you specify invalid parameter settings, Simulink displays a message in this field. Use the diagnostic information to help you fix an invalid configuration issue. You cannot set this field.

## Properties

Name	Access	Description
CalibrationValue	RW	Calibration value of this parameter. (Calibration value)
CalibrationMin	RW	Calibration minimum value of this parameter. (Calibration minimum)
CalibrationMax	RW	Calibration maximum value of this parameter. (Calibration maximum)

# Simulink.DualScaledParameter

Name	Access	Description
CalToMainCompuNumerator	RW	Numerator coefficients of the computational method. (CalToMain compute numerator) Once you have applied CalToMainCompuNumerator, you cannot change it.
CalToMainCompuDenominator	RW	Denominator coefficients of the computational method. (CalToMain compute denominator) Once you have applied CalToMainCompuDenominator, you cannot change it.
CalibrationName	RW	Name of the calibration parameter. (Calibration name)
CalibrationDocUnits	RW	Measurement units for this calibration parameter's value. (Calibration units)
IsConfigurationValid	RO	Information about validity of configuration. (Is configuration valid)
DiagnosticMessage	RO	If the configuration is invalid, diagnostic information to help you fix the issue. (Diagnostic message)

## Example

### Create and Update a Dual-Scaled Parameter

Create a `Simulink.DualScaledParameter` object that stores a temperature as both Fahrenheit and Celsius.

Create a `Simulink.DualScaledParameter` object.

```
Temp = Simulink.DualScaledParameter;
```

Set the computational method that converts between Fahrenheit and Celsius.

```
Temp.CalToMainCompuNumerator = [1 -32];
```

# Simulink.DualScaledParameter

---

```
Temp.CalToMainCompuDenominator = [1.8];
```

Set the value of the temperature that you want to see in Fahrenheit.

```
Temp.CalibrationValue = 212
```

```
Temp =
```

DualScaledParameter with properties:

```
    CalibrationValue: 212
    CalibrationMin: []
    CalibrationMax: []
    CalToMainCompuNumerator: [1 -32]
    CalToMainCompuDenominator: 1.8000
    CalibrationName: ''
    CalibrationDocUnits: ''
    IsConfigurationValid: 1
    DiagnosticMessage: ''
    Value: 100
    CoderInfo: [1x1 Simulink.CoderInfo]
    Description: ''
    DataType: 'auto'
    Min: []
    Max: []
    DocUnits: ''
    Complexity: 'real'
    Dimensions: [1 1]
```

The `Simulink.DualScaledParameter` calculates `Temp.Value` which is the value that Simulink uses. `Temp.CalibrationValue` is 212 (degrees Fahrenheit), so `Temp.Value` is 100 (degrees Celsius).

Name the value and specify the units.

```
Temp.CalibrationName = 'TempF';
Temp.CalibrationDocUnits = 'Fahrenheit';
```

Set calibration minimum and maximum values.

```
Temp.CalibrationMin = 0;  
Temp.CalibrationMax = 300;
```

If you specify a calibration value outside this allowable range, Simulink generates a warning.


Specify the units that Simulink uses.

```
Temp.DocUnits = 'Celsius';
```

Open the Simulink.DualScaledParameter dialog box.


```
open Temp
```

# Simulink.DualScaledParameter

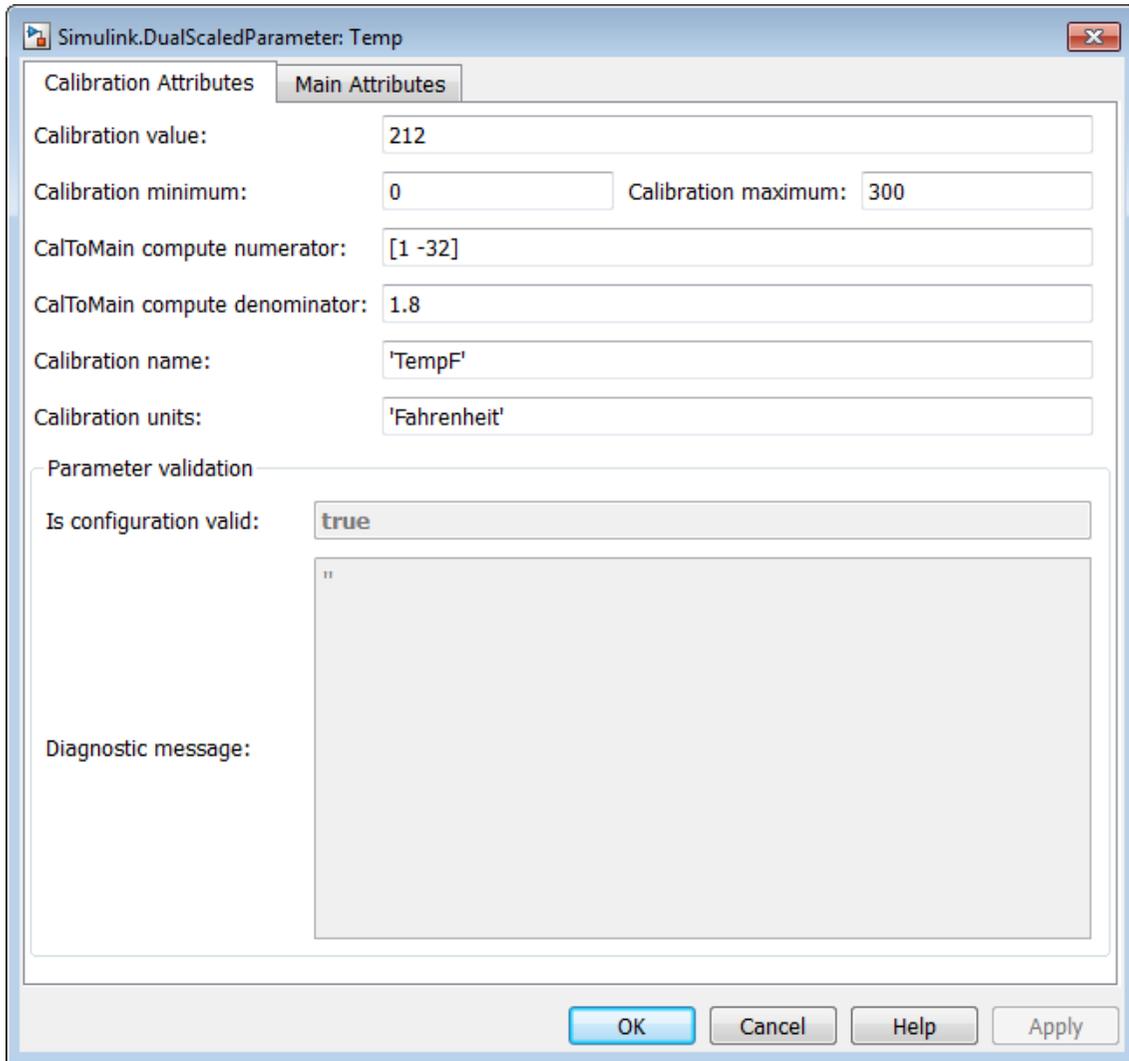

The **Calibration Attributes** tab displays the calibration value and the computational method that you specified.

In the dialog box, click the **Main Attributes** tab.

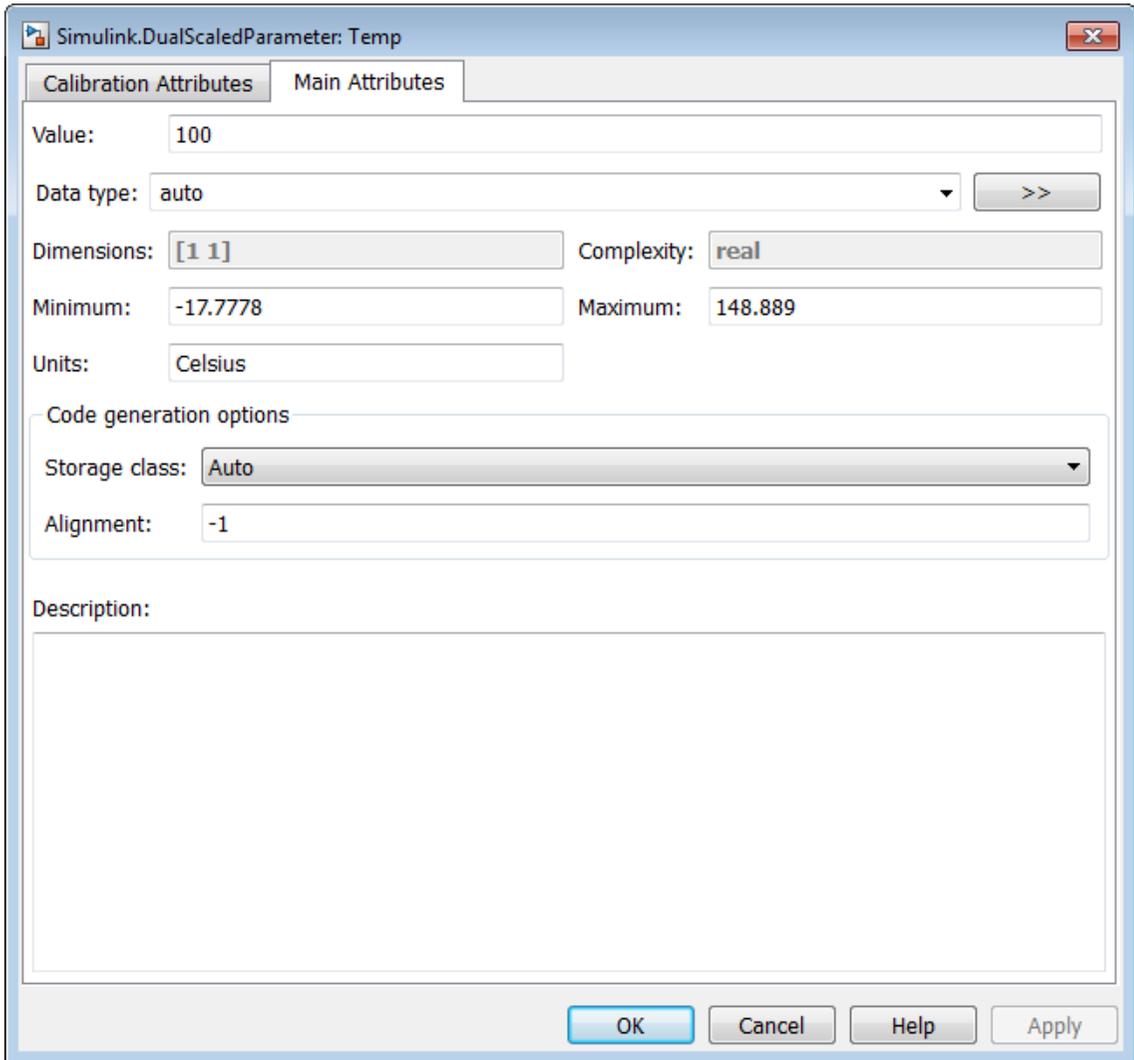

This tab displays information about the value used by Simulink.

# Simulink.DualScaledParameter

---

## See Also

[Simulink.Parameter](#)

<b>Purpose</b>	Control masks programmatically
<b>Description</b>	<p>Use an instance of <code>Simulink.Mask</code> class to perform the following operations:</p> <ul style="list-style-type: none"><li>• Create, copy, and delete masks.</li><li>• Create, edit, and delete mask parameters.</li><li>• Determine the block that owns the mask.</li><li>• Obtain workspace variables defined for a mask.</li></ul>
<b>Properties</b>	<p><b>Type</b></p> <p>Specifies the mask type of the associated block. <b>Type:</b> string <b>Default:</b> Empty String</p> <p><b>Description</b></p> <p>Specifies the block description of the associated block. <b>Type:</b> string <b>Default:</b> Empty String</p> <p><b>Help</b></p> <p>Specifies the help text that is displayed for the mask. <b>Type:</b> string <b>Default:</b> Empty String</p> <p><b>Initialization</b></p> <p>Specifies the initialization commands for the associated block. <b>Type:</b> string <b>Default:</b> Empty String</p>

## **SelfModifiable**

Indicates that the block can modify itself and its content.

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** 'off'

## **Display**

Specifies MATLAB code for drawing the block icon.

**Type:** string

**Default:** Empty String

## **IconFrame**

Sets the visibility of the block frame. (Visible is on, Invisible is off).

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** 'on'

## **IconOpaque**

Sets the transparency of the icon (Opaque is on, Transparent is off).

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** 'on'

## **RunInitForIconRedraw**

Specifies whether Simulink must run mask initialization before executing the mask icon commands.

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** `off`

## **IconRotate**

Sets icon to rotate with the block.

**Type:** enum

**Values:** 'none' | 'port'

**Default:** 'none'

## **PortRotate**

Specifies the port rotation policy for the masked block.

**Type:** enum

**Values:** 'default' | 'physical'

**Default:** 'default'

## **IconUnits**

Specifies the units for the drawing commands.

**Type:** enum

**Values:** 'pixel' | 'autoscale' | 'normalized'

**Default:** 'autoscale'

## **Methods**

addParameter	Add a parameter to a mask
copy	Copy a mask from one block to another
create	Create a mask on a Simulink block
delete	Unmask a block and delete the mask from memory
get	Get a block mask as a mask object

<code>getDialogControl</code>	Search for a specific dialog control on the mask
<code>getDialogControls</code>	Search for all mask dialog controls
<code>getOwner</code>	Determine the block that owns a mask
<code>getParameter</code>	Get a mask parameter using its name
<code>getWorkspaceVariables</code>	Get all the variables defined in the mask workspace for a masked block
<code>numParameters</code>	Determine the number of parameters in a mask
<code>removeAllParameters</code>	Remove all existing parameters from a mask
<code>set</code>	Set the properties of an existing mask

## How To

- “Control Masks Programmatically”

**Purpose** Add a parameter to a mask

**Syntax** `p = Simulink.Mask.get(blockName)`  
`p.addParameter(Name,Value)`

**Description** `p = Simulink.Mask.get(blockName)` gets the mask on the block specified by `blockName` as a mask object.

`p.addParameter(Name,Value)` appends a parameter to the mask. If you do not specify name–value pairs as arguments with this command, Simulink creates an unnamed mask parameter with control type set to `edit`.

**Input Arguments**

**blockName**

The handle to the block or the path to the block inside the model.

**Name-Value Pair Arguments**

Specify optional comma-separated pairs of `Name,Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

**'Type'**

Type of control that is used to specify the value of this parameter.

**Default:** `edit`

**'TypeOptions'**

The options that are displayed within a popup control or in a promoted parameter. This field is a cell array.

**Default:** `empty`

**'Name'**

# Simulink.Mask.addParameter

---

The name of the mask parameter. This name is assigned to the mask workspace variable created for this parameter.

**Default:** empty

## **'Prompt'**

Text that identifies the parameter on the Mask Parameters dialog box.

**Default:** empty

## **'Value'**

The default value of the mask parameter in the Mask Parameters dialog box.

**Default:** Type specific; depends on the Type of the parameter

## **'Evaluate'**

Option to specify whether parameter must be evaluated.

**Default:** 'on'

## **'Tunable'**

Option to specify whether parameter is tunable.

**Default:** 'on'

## **'Enabled'**

Option to specify whether user can set parameter value.

**Default:** 'on'

## **'Visible'**

Option to set whether mask parameter is hidden or visible to the user.

**Default:** 'on'

## 'Callback'

Container for MATLAB code that executes when user makes a change in the Mask Parameters dialog box and clicks **Apply**.

**Default:** empty

## 'TabName'

The name of the tab in the Mask Parameters dialog box where the parameter appears.

**Default:** empty

## Examples

- 1 Get mask as an object using a masked block's path.

```
p = Simulink.Mask.get('myModel/Subsystem');
```

- 2 Add a parameter to the mask without specifying name-value pairs for parameter attributes.

```
p.addParameter;
```

- 3 Add a mask parameter of type popup that cannot be evaluated and appears on a tab named **Properties** in the Mask Parameters dialog box.

```
p.addParameter('Type','popup','TypeOptions',...  
{'Red' 'Blue' 'Green'},'Evaluate','off','TabName','Properties');
```

## See Also

Simulink.Mask

# Simulink.Mask.copy

---

**Purpose** Copy a mask from one block to another

**Syntax**

```
pSource = Simulink.Mask.get(srcBlockName)
pDest = Simulink.Mask.create(destBlockName)
pDest.copy(pSource)
```

**Description**

`pSource = Simulink.Mask.get(srcBlockName)` gets the mask on the source block specified by `blockName` as a mask object.

`pDest = Simulink.Mask.create(destBlockName)` creates an empty mask on the destination block specified by `destBlockName`.

`pDest.copy(pSource)` overwrites the destination mask with the source mask.

## Input Arguments

### **srcBlockName**

The handle to the source block or the path to the source block inside the model.

---

**Note** The source block should be masked.

---

### **destBlockName**

The handle to the destination block or the path to the destination block inside the model.

---

**Note** The destination block should have an empty mask. Otherwise, the copied mask will overwrite the non-empty mask.

---

## Examples

**1** Create an empty mask on the destination block using the block's path.

```
pDest = Simulink.Mask.create('myModel/Subsystem');
```

**2** Get source mask as an object using the source block's path.

```
pSource = Simulink.Mask.get('myModel/Abs');
```

- 3 Make the destination mask a copy of the source mask.

```
pDest.copy(pSource);
```

## See Also

`Simulink.Mask`

# Simulink.Mask.create

---

**Purpose** Create a mask on a Simulink block

**Syntax** `p = Simulink.Mask.create(blockName)`

**Description** `p = Simulink.Mask.create(blockName)` creates an empty mask on the block specified by `blockName`. If the specified block is already masked, an error message appears.

**Input Arguments**

**blockName**  
The handle to the block or the path to the block inside the model.

**Examples**

- 1 Create a mask using a block's handle.

---

**Note** In the model, select the block to be masked.

---

```
p = Simulink.Mask.create(gcbh);
```

- 2 Create a mask using the block's path.

```
p = Simulink.Mask.create('myModel/Subsystem');
```

**See Also** `Simulink.Mask`

<b>Purpose</b>	Unmask a block and delete the mask from memory
<b>Syntax</b>	<pre>p = Simulink.Mask.get(blockName) p.delete</pre>
<b>Description</b>	<p><code>p = Simulink.Mask.get(blockName)</code> gets the mask on the block specified by <code>blockName</code> as a mask object.</p> <p><code>p.delete</code> un.masks the block and deletes the mask from memory.</p>
<b>Input Arguments</b>	<p><b>blockName</b></p> <p>The handle to the block or the path to the block inside the model.</p>
<b>Examples</b>	<ol style="list-style-type: none"><li>1 Get mask as an object using a masked block's path. <pre>p = Simulink.Mask.get('myModel/Subsystem');</pre></li><li>2 Unmask the block using the mask object and delete the mask from memory. <pre>p.delete;</pre></li></ol>
<b>See Also</b>	<code>Simulink.Mask</code>

# Simulink.Mask.get

---

**Purpose** Get a block mask as a mask object

**Syntax** `p = Simulink.Mask.get(blockName)`

**Description** `p = Simulink.Mask.get(blockName)` gets the mask on the block specified by `blockName` as a mask object. If the specified block is not masked, a null value returns.

**Input Arguments** **blockName**  
The handle to the block or the path to the block inside the model.

**Examples** **1** Get mask as an object using a masked block's handle.

---

**Note** In the model, select the masked block.

---

```
p = Simulink.Mask.get(gcbh);
```

**2** Get mask as an object using a masked block's path.

```
p = Simulink.Mask.get('myModel/Subsystem');
```

**See Also** `Simulink.Mask`

<b>Purpose</b>	Search for a specific dialog control on the mask
<b>Syntax</b>	<code>[control, phandle] = handle.getDialogControl(cname)</code>
<b>Description</b>	<code>[control, phandle] = handle.getDialogControl(cname)</code> , search for a specific child dialog control recursively on the mask dialog.
<b>Input Arguments</b>	<b>cname</b> Name of the dialog control being searched on the mask dialog.
<b>Output Arguments</b>	<b>control</b> Target dialog control being searched on the mask dialog. <b>phandle</b> Parent of the dialog control being searched mask dialog.
<b>Examples</b>	<b>Find a dialog control</b> Find a text dialog control on the mask dialog box. <code>maskObj</code> is the handle to the mask object. The <code>getDialogControl</code> method returns the handle to the dialog control ( <code>hdlgctrl</code> ) and handle to the parent dialog control ( <code>phandle</code> ).  <code>[hdlgctrl, phandle] = maskObj.getDialogControl('txt_var')</code>
<b>See Also</b>	<code>Simulink.Mask</code>

# Simulink.Mask.DialogControls

---

**Purpose** Search for all mask dialog controls

**Syntax** `maskObj.getDialogControls`

**Description** `maskObj.getDialogControls` , search for all child dialog controls recursively on the mask.

**Examples** **Find all dialog controls**

Find all dialog controls on the mask dialog box. `maskObj` is the handle to the mask object.

```
maskObj.getDialogControls
```

**See Also** `Simulink.Mask`

**Purpose** Determine the block that owns a mask

**Syntax** `p = Simulink.Mask.get(blockName)`  
`p.getOwner`

**Description** `p = Simulink.Mask.get(blockName)` gets the mask on the block specified by `blockName` as a mask object.

`p.getOwner` returns the interface to the block that owns the mask.

**Input Arguments**

**blockName**

The handle to the block or the path to the block inside the model.

**Examples**

**1** Get mask as an object using a masked block's path.

```
p = Simulink.Mask.get('myModel/Subsystem');
```

**2** Get the interface to the block that owns the mask.

```
p.getOwner;
```

**See Also**

`Simulink.Mask`

# Simulink.Mask.getParameter

---

**Purpose** Get a mask parameter using its name

**Syntax**

```
p = Simulink.Mask.get(blockName)
param = p.getParameter(paramName)
```

**Description** `p = Simulink.Mask.get(blockName)` gets the mask on the block specified by `blockName` as a mask object.

`param = p.getParameter(paramName)` returns the number of parameters in the mask.

## Input Arguments

### **blockName**

The handle to the block or the path to the block inside the model.

### **paramName**

The name of the parameter you want to get.

## Examples

**1** Get mask as an object using a masked block's path.

```
p = Simulink.Mask.get('myModel/Subsystem');
```

**2** Get a mask parameter by using its name.

```
param = p.getParameter('intercept');
```

## See Also

Simulink.Mask

# Simulink.Mask.getWorkspaceVariables

---

**Purpose** Get all the variables defined in the mask workspace for a masked block

**Syntax**

```
p = Simulink.Mask.get(blockName)
vars = p.getWorkspaceVariables
```

**Description**

`p = Simulink.Mask.get(blockName)` gets the mask on the block specified by `blockName` as a mask object.

`vars = p.getWorkspaceVariables` returns as a structure all the variables defined in the mask workspace for the masked block.

**Input Arguments**

**blockName**

The handle to the block or the path to the block inside the model.

**Examples**

**1** Get mask as an object using a masked block's path.

```
p = Simulink.Mask.get('myModel/Subsystem');
```

**2** Get all the variables defined in the mask workspace for the masked block.

```
vars = p.getWorkspaceVariables;
```

**See Also**

Simulink.Mask

# Simulink.Mask.numParameters

---

**Purpose** Determine the number of parameters in a mask

**Syntax** `p = Simulink.Mask.get(blockName)`  
`p.numParameters`

**Description** `p = Simulink.Mask.get(blockName)` gets the mask on the block specified by `blockName` as a mask object.  
`p.numParameters` returns the number of parameters in the mask.

**Input Arguments** **blockName**  
The handle to the block or the path to the block inside the model.

**Examples** **1** Get mask as an object using a masked block's path.

```
p = Simulink.Mask.get('myModel/Subsystem');
```

**2** Get the number of parameters in the mask.

```
p.numParameters;
```

**See Also** `Simulink.Mask`

# Simulink.Mask.removeAllParameters

---

<b>Purpose</b>	Remove all existing parameters from a mask
<b>Syntax</b>	<pre>p = Simulink.Mask.get(blockName) p.removeAllParameters</pre>
<b>Description</b>	<p><code>p = Simulink.Mask.get(blockName)</code> gets the mask on the block specified by <code>blockName</code> as a mask object.</p> <p><code>p.removeAllParameters</code> deletes all existing parameters from the mask.</p>
<b>Input Arguments</b>	<p><b>blockName</b></p> <p>The handle to the block or the path to the block inside the model.</p>
<b>Examples</b>	<ol style="list-style-type: none"><li>1 Get mask as an object using a masked block's path. <pre>p = Simulink.Mask.get('myModel/Subsystem');</pre></li><li>2 Delete all existing parameters from the mask. <pre>p.removeAllParameters;</pre></li></ol>
<b>See Also</b>	<code>Simulink.Mask</code>

# Simulink.Mask.set

---

<b>Purpose</b>	Set the properties of an existing mask
<b>Syntax</b>	<pre>p = Simulink.Mask.get(blockName) p.set(Name,Value)</pre>
<b>Description</b>	<p><code>p = Simulink.Mask.get(blockName)</code> gets the mask on the block specified by <code>blockName</code> as a mask object.</p> <p><code>p.set(Name,Value)</code> sets mask properties that you specify using name–value pairs as arguments.</p>
<b>Input Arguments</b>	<p><b>blockName</b></p> <p>The handle to the block or the path to the block inside the model.</p> <p><b>Name-Value Pair Arguments</b></p> <p>Specify optional comma-separated pairs of <code>Name,Value</code> arguments. <code>Name</code> is the argument name and <code>Value</code> is the corresponding value. <code>Name</code> must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as <code>Name1,Value1,...,NameN,ValueN</code>.</p> <p><b>'Type'</b></p> <p>Text used as title for mask documentation that user sees on clicking <b>Help</b> in the Mask Parameters dialog box.</p> <p><b>Default:</b> empty</p> <p><b>'Description'</b></p> <p>Text used as summary for mask documentation that user sees on clicking <b>Help</b> in the Mask Parameters dialog box.</p> <p><b>Default:</b> empty</p> <p><b>'Help'</b></p>

Text used as body text for mask documentation that user sees on clicking **Help** in the Mask Parameters dialog box.

**Default:** empty

## **'Initialization'**

MATLAB code that initializes the mask.

**Default:** empty

## **'SelfModifiable'**

Option to set whether the mask can modify itself during simulation.

**Default:** 'off'

## **'Display'**

MATLAB code that draws the mask icon.

**Default:** empty

## **'IconFrame'**

Option to specify whether the mask icon appears inside a visible block frame.

**Default:** 'on'

## **'IconOpaque'**

Option to set the mask icon as opaque or transparent.

**Default:** 'on'

## **'RunInitForIconRedraw'**

# Simulink.Mask.set

---

Option to specify whether Simulink should run mask initialization before executing the mask icon commands.

**Default:** 'off'

## 'IconRotate'

Option to specify icon rotation.

**Default:** 'none'

## 'PortRotate'

Option to specify port rotation.

**Default:** 'default'

## 'IconUnits'

Option to specify whether mask icon is autoscaled, normalized, or scaled in pixels.

**Default:** 'autoscale'

## Examples

- 1 Get mask as an object using a masked block's path.

```
p = Simulink.Mask.get('myModel/Subsystem');
```

- 2 Modify the mask so that its mask icon is transparent and its documentation summarizes what it does.

```
p.set('IconOpaque','off','Type','Random number generator','Description','This block generates random numbers.');
```

## See Also

Simulink.Mask

<b>Purpose</b>	Control mask parameters programmatically
<b>Description</b>	Use an instance of <code>Simulink.MaskParameter</code> to set the properties of mask parameters.
<b>Properties</b>	<p><b>Type</b></p> <p>Specifies the mask parameter type.</p> <p><b>Type:</b> string</p> <p><b>Values:</b> 'edit'   'checkbox'   'popup'   'unidt'   'min'   'max'   'promote'</p> <p><b>Default:</b> 'edit'</p> <p><b>TypeOptions</b></p> <p>Specifies the option for the parameter if it exists, otherwise, it is empty. Applicable for parameters of type popup and promote .</p> <p><b>Type:</b> cell array of strings</p> <p><b>Default:</b> { '' }</p> <p><b>Name</b></p> <p>Specifies the name of the mask parameter. This name is assigned to the mask workspace variable created for this parameter.</p> <p><b>Type:</b> string</p> <p><b>Default:</b> Empty String</p> <p><b>Prompt</b></p> <p>Specifies a string that appears as the label associated with the parameter on the mask dialog.</p> <p><b>Type:</b> string</p> <p><b>Default:</b> Empty String</p> <p><b>Value</b></p> <p>Specifies the value of the mask parameter.</p>

# Simulink.MaskParameter

---

**Default:** Depends on the type of the parameter.

## **Evaluate**

Indicates if the parameter value is to be evaluated in MATLAB or treated as a string when the block is evaluated.

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** 'on'

## **Tunable**

Indicates if the parameter value can be changed during simulation.

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** 'on'

## **NeverSave**

Indicates if the parameter value gets saved in the model file.

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** 'off'

## **Internal**

Indicates if the parameter should never show on the mask dialog box.

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** 'off'

## **Enabled**

Indicates if the parameter is enabled in the mask dialog box.

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** 'on'

## **Visible**

Indicates if the parameter is visible in the mask dialog box.

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** 'on'

## **ToolTip**

Indicates if tool tip is enabled for the mask parameter.

**Type:** boolean

**Values:** 'on' | 'off'

**Default:** 'on'

## **Callback**

Specifies the MATLAB code that executes when a user changes the parameter value from the mask dialog box.

**Type:** string

**Default:** Empty String

## **TabName**

Specifies the tab name of the mask dialog box where the parameter is displayed.

**Type:** string

**Default:** Empty String

# Simulink.MaskParameter

---

## Methods

set

Set properties of mask parameters

## How To

- “Control Masks Programmatically”

**Purpose**

Set properties of mask parameters

**Syntax**

`Simulink.MaskParameter.set(Name,Value)`

**Description**

`Simulink.MaskParameter.set(Name,Value)` sets the properties of a mask parameter.

**Input Arguments****Name-Value Pair Arguments**

Specify optional comma-separated pairs of `Name,Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside single quotes ( ' '). You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

**'Type'**

Type of control that is used to specify the value of this parameter.

**Default:** edit

**'TypeOptions'**

The options that are displayed within a popup control or in a promoted parameter. This field is a cell array.

**Default:** empty

**'Name'**

The name of the mask parameter. This name is assigned to the mask workspace variable created for this parameter.

**Default:** empty

**'Prompt'**

Text that identifies the parameter on the Mask Parameters dialog.

# Simulink.MaskParameter.set

---

**Default:** empty

## **'Value'**

The default value of the mask parameter in the Mask Parameters dialog.

**Default:** Type specific; depends on the Type of the parameter

## **'Evaluate'**

Option to specify whether parameter must be evaluated.

**Default:** 'on'

## **'Tunable'**

Option to specify whether parameter is tunable.

**Default:** 'on'

## **'Enabled'**

Option to specify whether user can set parameter value.

**Default:** 'on'

## **'Visible'**

Option to set whether mask parameter is hidden or visible to the user.

**Default:** 'on'

## **'Callback'**

Container for MATLAB code that executes when user makes a change in the Mask Parameters dialog and clicks **Apply**.

**Default:** empty

## 'TabName'

The name of the tab in the Mask Parameters dialog where the parameter appears.

**Default:** empty

## Examples

- 1 Get mask as an object using a masked block's path.

```
p = Simulink.Mask.get('myModel/Subsystem');
```

- 2 Get a mask parameter.

```
a = p.Parameters(1);
```

- 3 Edit mask parameter so it is of type popup, cannot be evaluated, and appears on a tab named **Properties** in the Mask Parameters dialog.

```
a.set('Type','popup','TypeOptions',{'Red' 'Blue' 'Green'},...  
'Evaluate','off','TabName','Properties');
```

## See Also

Simulink.Mask | Simulink.MaskParameter

# coder.BuildConfig

---

**Purpose** Build context during code generation

**Description** The code generation software creates an object of this class to facilitate access to the *build context*. The build context encapsulates the settings used by the code generation software including:

- Target language
- Code generation target
- Target hardware
- Build toolchain

Use `coder.BuildConfig` methods in the methods that you write for the `coder.ExternalDependency` class.

**Construction** The code generation software creates objects of this class.

<b>Methods</b>	<code>getHardwareImplementation</code>	Get handle of copy of hardware implementation object
	<code>getStdLibInfo</code>	Get standard library information
	<code>getTargetLang</code>	Get target code generation language
	<code>getToolchainInfo</code>	Returns handle of copy of toolchain information object
	<code>isCodeGenTarget</code>	Determine if build configuration represents specified target
	<code>isMatlabHostTarget</code>	Determine if hardware implementation object target is MATLAB host computer

**Copy Semantics** Value. To learn how value classes affect copy operations, see Copying Objects in the MATLAB documentation.

## Examples

### Use coder.BuildConfig methods to access the build context in coder.ExternalDependency methods

This example shows how to use coder.BuildConfig methods to access the build context in coder.ExternalDependency methods. In this example, you use:

- coder.BuildConfig.isMatlabHostTarget to verify that the code generation target is the MATLAB host. If the host is not MATLAB report an error.
- coder.BuildConfig.getStdLibInfo to get the link-time and run-time library file extensions. Use this information to update the build information.

Write a class definition file for an external library that contains the function adder.

```

%=====
% This class abstracts the API to an external Adder library.
% It implements static methods for updating the build information
% at compile time and build time.
%=====

classdef AdderAPI < coder.ExternalDependency
    %#codegen

    methods (Static)

        function bName = getDescriptiveName(~)
            bName = 'AdderAPI';
        end

        function tf = isSupportedContext(ctx)
            if ctx.isMatlabHostTarget()
                tf = true;
            else
                error('adder library not available for this target');
            end
        end
    end
end

```

## coder.BuildConfig

---

```
        end
    end

function updateBuildInfo(buildInfo, ctx)
    [~, linkLibExt, execLibExt, ~] = ctx.getStdLibInfo();

    % Header files
    hdrFilePath = fullfile(pwd, 'codegen', 'dll', 'adder');
    buildInfo.addIncludePaths(hdrFilePath);

    % Link files
    linkFiles = strcat('adder', linkLibExt);
    linkPath = hdrFilePath;
    linkPriority = '';
    linkPrecompiled = true;
    linkLinkOnly = true;
    group = '';
    buildInfo.addLinkObjects(linkFiles, linkPath, ...
        linkPriority, linkPrecompiled, linkLinkOnly, group);

    % Non-build files
    nbFiles = 'adder';
    nbFiles = strcat(nbFiles, execLibExt);
    buildInfo.addNonBuildFiles(nbFiles, '', '');
end

%API for library function 'adder'
function c = adder(a, b)
    if coder.target('MATLAB')
        % running in MATLAB, use built-in addition
        c = a + b;
    else
        % running in generated code, call library function
        coder.cinclude('adder.h');

        % Because MATLAB Coder generated adder, use the
        % housekeeping functions before and after calling
```

```
% adder with coder.ceval.  
% Call initialize function before calling adder for the  
% first time.  
  
coder.ceval('adder_initialize');  
c = 0;  
c = coder.ceval('adder', a, b);  
  
% Call the terminate function after  
% calling adder for the last time.  
  
coder.ceval('adder_terminate');  
end  
end  
end  
end
```

## See Also

`coder.target` | `coder.ExternalDependency`

## Related Examples

# coder.ExternalDependency

---

**Purpose** Interface to external code

**Description** `coder.ExternalDependency` is an abstract class for encapsulating the interface between external code and MATLAB code intended for code generation. You define classes that derive from `coder.ExternalDependency` to encapsulate the interface to external libraries, object files, and C/C++ source code. This encapsulation allows you to separate the details of the interface from your MATLAB code. The derived class contains information about external file locations, build information, and the programming interface to external functions.

To define a class, `myclass`, make the following line the first line of your class definition file:

```
classdef myclass < coder.ExternalDependency
```

You must define all of the methods listed in “Methods” on page 6-509. These methods are static and are not compiled. When you write these methods, use `coder.BuildConfig` methods to access build information.

You also define methods that call the external code. These methods are compiled. For each external function that you want to call, write a method to define the programming interface to the function. In the method, use `coder.ceval` to call the external function. Suppose you define the following method for a class named `AdderAPI`:

```
function c = adder(a, b)
    coder.cinclude('adder.h');
    c = 0;
    c = coder.ceval('adder', a, b);
end
```

This method defines the interface to a function `adder` which has two inputs `a` and `b`. In your MATLAB code, call `adder` this way:

```
y = AdderAPI.adder(x1, x2);
```

## Methods

getDescriptiveName	Return descriptive name for external dependency
isSupportedContext	Determine if build context supports external dependency
updateBuildInfo	Update build information

## Examples

### Encapsulate the interface to an external C dynamic linked library

This example shows how to encapsulate the interface to an external C dynamic linked library using `coder.ExternalDependency`.

Write a function `adder` that returns the sum of its inputs.

```
function c = adder(a,b)
    %#codegen
    c = a + b;
end
```

Generate a library that contains `adder`.

```
codegen('adder', '-args', {-2,5}, '-config:dll', '-report');
```

Write the class definition file `AdderAPI.m` to encapsulate the library interface.

```
%=====
% This class abstracts the API to an external Adder library.
% It implements static methods for updating the build information
% at compile time and build time.
%=====

classdef AdderAPI < coder.ExternalDependency
    %#codegen

    methods (Static)
```

# coder.ExternalDependency

---

```
function bName = getDescriptiveName(~)
    bName = 'AdderAPI';
end

function tf = isSupportedContext(ctx)
    if ctx.isMatlabHostTarget()
        tf = true;
    else
        error('adder library not available for this target');
    end
end

function updateBuildInfo(buildInfo, ctx)
    [~, linkLibExt, execLibExt, ~] = ctx.getStdLibInfo();

    % Header files
    hdrFilePath = fullfile(pwd, 'codegen', 'dll', 'adder');
    buildInfo.addIncludePaths(hdrFilePath);

    % Link files
    linkFiles = strcat('adder', linkLibExt);
    linkPath = hdrFilePath;
    linkPriority = '';
    linkPrecompiled = true;
    linkLinkOnly = true;
    group = '';
    buildInfo.addLinkObjects(linkFiles, linkPath, ...
        linkPriority, linkPrecompiled, linkLinkOnly, group);

    % Non-build files
    nbFiles = 'adder';
    nbFiles = strcat(nbFiles, execLibExt);
    buildInfo.addNonBuildFiles(nbFiles, '', '');
end

%API for library function 'adder'
```

```
function c = adder(a, b)
    if coder.target('MATLAB')
        % running in MATLAB, use built-in addition
        c = a + b;
    else
        % running in generated code, call library function
        coder.cinclude('adder.h');

        % Because MATLAB Coder generated adder, use the
        % housekeeping functions before and after calling
        % adder with coder.ceval.
        % Call initialize function before calling adder for the
        % first time.

        coder.ceval('adder_initialize');
        c = 0;
        c = coder.ceval('adder', a, b);

        % Call the terminate function after
        % calling adder for the last time.

        coder.ceval('adder_terminate');
    end
end
end
end
```

Write a function `adder_main` that calls the external library function `adder`.

```
function y = adder_main(x1, x2)
    %#codegen
    y = AdderAPI.adder(x1, x2);
end
```

# coder.ExternalDependency

---

Generate a MEX function for `adder_main`. The MEX Function exercises the `coder.ExternalDependency` methods.

```
codegen('adder_main', '-args', {7,9}, '-report')
```

Copy the library to the current folder using the file extension for your platform.

For Windows®, use:

```
copyfile(fullfile(pwd, 'codegen', 'dll', 'adder', 'adder.dll'));
```

For Linux, use:

```
copyfile(fullfile(pwd, 'codegen', 'dll', 'adder', 'adder.so'));
```

Run the MEX function and verify the result.

```
adder_main_mex(2,3)
```

## See Also

[coder.ceval](#) | [coder.cinclude](#) | [coder.updateBuildInfo](#) | [coder.BuildConfig](#)

## Concepts

- “Encapsulating the Interface to External Code”
- “Best Practices for Using `coder.ExternalDependency`”

# Model and Block Parameters

---

- “Model Parameters” on page 7-2
- “Common Block Properties” on page 7-100
- “Block-Specific Parameters” on page 7-113
- “Mask Parameters” on page 7-265

## Model Parameters

### In this section...

“About Model Parameters” on page 7-2

“Examples of Setting Model Parameters” on page 7-99

### About Model Parameters

You can query and/or modify the properties (parameters) of a Simulink diagram from the command line. Parameters that describe a model are known as model parameters, while parameters that describe a Simulink block are known as block parameters. Block parameters that are common to Simulink blocks are described as common block parameters. There are also block-specific parameters that are specific to particular blocks. Finally, there are mask parameters, which are parameters that describe a masked block.

The model and block properties also include callbacks, which are commands that execute when a certain model or block event occurs. These events include opening a model, simulating a model, copying a block, opening a block, etc.

Parameter values must be specified as quoted strings. The string contents depend on the parameter and can be numeric (scalar, vector, or matrix), a variable name, a filename, or a particular value. The **Values** column shows the type of value required, the possible values (separated with a vertical line), and the default value enclosed in braces.

The following sections list parameters that you can set for Simulink models blocks, or signals, using the `set_param` command.

This table lists and describes, in alphabetical order, parameters that describe a model. The table also includes model callback parameters (see “Callbacks for Customized Model Behavior”). The **Description** column indicates where you can set the value on a dialog box. For examples, see “Examples of Setting Model Parameters” on page 7-99.

## Model Parameters in Alphabetical Order

Parameter	Description	Values
AbsTol	<p>Specify the largest acceptable solver error, as the value of the measured state approaches zero.</p> <p>Set by <b>Absolute tolerance</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — {'auto'}
AccelVerboseBuild	<p>Controls the verbosity level during code generation for Simulink Accelerator mode, model reference Accelerator mode, and Rapid Accelerator mode.</p> <p>Set by <b>Verbose accelerator builds</b> on the <b>Optimization</b> pane of the Configuration Parameters dialog box.</p>	string — {'off'}   'on'
AlgebraicLoopMsg	<p>Specifies diagnostic action to take when there is an algebraic loop.</p> <p>Set by <b>Algebraic loop</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
ArrayBoundsChecking	<p>Select the diagnostic action to take when blocks write data to locations outside the memory allocated to them.</p> <p>Set by <b>Array bounds exceeded</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
ArtificialAlgebraic-LoopMsg	<p>Specifies diagnostic action to take if algebraic loop minimization cannot be performed for a subsystem because an input port of that subsystem has direct feedthrough.</p> <p>Set by <b>Minimize algebraic loop</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
AssertControl	<p>Enable model verification blocks in the current model either globally or locally.</p> <p>Set by <b>Model Verification block enabling</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'UseLocalSettings'}   'EnableAll'   'DisableAll'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
AutoInsertRateTranBlk	<p>Specify whether Simulink software inserts hidden Rate Transition blocks between blocks that have different sample rates.</p> <p>Set by <b>Automatically handle rate transition for data transfer</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — 'on'   {'off'}
BlockDescription-StringDataTip	<p>Specifies whether to display the user description string for a block as a data tip.</p> <p>In the Simulink Editor, set by <b>Description</b> on the <b>Display &gt; Blocks &gt; Block Tool Tip Options</b> menu.</p>	string — 'on'   {'off'}
BlockNameDataTip	<p>Specifies whether to display the block name as a data tip. In the Simulink Editor, set by <b>Block Name</b> on the <b>Display &gt; Blocks &gt; Block Tool Tip Options</b> menu.</p>	string — 'on'   {'off'}
BlockParametersDataTip	<p>Specifies whether to display a block parameter in a data tip.</p> <p>In the Simulink Editor, set by <b>Parameter Names &amp; Values</b> on the <b>Display &gt; Blocks &gt; Block Tool Tip Options</b> menu.</p>	string — 'on'   {'off'}

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
BlockPriorityViolationMsg	<p>Select the diagnostic action to take if Simulink software detects a block priority specification error.</p> <p>Set by <b>Block priority violation</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'warning'}   'error'
BlockReduction	<p>Enables block reduction optimization.</p> <p>Set by <b>Block reduction</b> on the <b>Optimization</b> pane of the Configuration Parameters dialog box.</p>	string — {'on'}   'off'
BlockReductionOpt	See BlockReduction parameter for more information.	
BooleanDataType	<p>Enable Boolean mode.</p> <p>Set by <b>Implement logic signals as Boolean data (vs. double)</b> on the <b>Optimization</b> pane of the Configuration Parameters dialog box.</p>	string — {'on'}   'off'
BrowserLookUnderMasks	<p>Show masked subsystems in the Model Browser.</p> <p>In the Simulink Editor, set by <b>Include Systems with Mask Parameters</b> on the <b>View &gt; Model Browser</b> menu.</p>	string — 'on'   {'off'}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
BrowserShowLibraryLinks	Show library links in the Model Browser.  In the Simulink Editor, set by <b>Include Library Links</b> on the <b>View &gt; Model Browser</b> menu.	string — 'on'   {'off'}
BufferReusableBoundary	For internal use.	
BufferReuse	Enable reuse of block I/O buffers.  Set by <b>Reuse block outputs</b> on the <b>Optimization &gt; Signals and Parameters</b> pane of the Configuration Parameters dialog box.	string — {'on'}   'off'
BusNameAdapt	Repair broken selections in the Bus Selector and Bus Assignment block parameters dialog boxes that are due to upstream bus hierarchy changes.  Set by <b>“Repair bus selections”</b> on the <b>Diagnostics &gt; Connectivity</b> pane of the Configuration Parameters dialog box.	string — {'WarnAndRepair'}   'ErrorWithoutRepair'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
BusObjectLabelMismatch	<p>Select the diagnostic action to take if the name of a bus element does not match the name specified by the corresponding bus object.</p> <p>Set by <b>Element name mismatch</b> on the <b>Diagnostics &gt; Connectivity</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
CheckExecutionContext-PreStartOutputMsg	<p>Specify whether to display a warning if Simulink software detects potential initial output differences from previous releases.</p> <p>Set by <b>Check preactivation output of execution context</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'on'   {'off'}
CheckExecutionContext-RuntimeOutputMsg	<p>Specify whether to display a warning if Simulink software detects potential output differences from previous releases.</p> <p>Set by <b>Check runtime output of execution context</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'on'   {'off'}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
CheckForMatrixSingularity	See CheckMatrixSingularityMsg parameter for more information.	
CheckMatrixSingularityMsg	Select the diagnostic action to take if the Product block detects a singular matrix while inverting one of its inputs in matrix multiplication mode.  Set by <b>Division by singular matrix</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.	string — {'none'}   'warning'   'error'
CheckModelReference-TargetMessage	Select the diagnostic action to take if Simulink software detects a target that needs to be rebuilt.  Set by <b>“Never rebuild diagnostic”</b> on the <b>Model Referencing</b> pane of the Configuration Parameters dialog box.	string — 'none'   'warning'   {'error'}
CheckSSInitialOutputMsg	Enable checking for undefined initial subsystem output.  Set by <b>Check undefined subsystem initial output</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.	string — {'on'}   'off'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
CloseFcn	<p>Set the close callback function, which can be a command or a variable.</p> <p>Set by <b>Model close function</b> on the <b>Callbacks</b> pane of the Model Properties dialog box.</p> <p>See “Create Model Callbacks” for more information.</p>	string — { ' ' }
CompiledBusType	<p>Return information about whether the signal connected to a port is not a bus, or whether it is a virtual or nonvirtual bus.</p> <p>(Read-only) Get with the <code>get_param</code> command. Specify a port or line handle. See “View Information about Buses”.</p>	Return values are 'NOT_BUS', VIRTUAL_BUS, and NON_VIRTUAL_BUS
CompiledModelBlockNormalModeVisibility	<p>For a compiled model that is being simulated or that is in a compiled state, return information about which Model blocks have Normal Mode Visibility enabled.</p>	Return values indicate which Model blocks have Normal Mode Visibility enabled.
ConditionallyExecute-Inputs	<p>Enable conditional input branch execution optimization.</p> <p>Set by <b>Conditional input branch execution</b> on the <b>Optimization</b> pane of the Configuration Parameters dialog box.</p>	string — { 'on' }   'off'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
ConfigurationManager	Configuration manager for this model.	string — {'None'}
ConsecutiveZCsStepRelTol	Relative tolerance associated with the time difference between zero-crossing events.  Set by <b>Time tolerance</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	string — {'10*128*eps'}
ConsistencyChecking	Select the diagnostic action to take if S-functions have continuous sample times, but do not produce consistent results when executed multiple times.  Set by <b>Solver data inconsistency</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.	string — {'none'}   'warning'   'error'
ContinueFcn	Continue simulation callback.  Set by <b>Simulation continue function</b> on the <b>Callbacks</b> pane of the Model Properties dialog box.	string — {''}

**Model Parameters in Alphabetical Order (Continued)**

Parameter	Description	Values
CovCompData	<p>If CovHtmlReporting is set to on and CovCumulativeReport is set to on, this parameter specifies cvdata objects containing additional model coverage data to include in the model coverage report.</p> <p>Set by <b>Additional data to include in report (cvdata objects)</b> on the <b>Reporting</b> pane of the Coverage Settings dialog box.</p>	string — { '' }
CovCumulativeReport	<p>If CovHtmlReporting is set to on, this parameter allows the CovCumulativeReport and CovCompData parameters to specify the number of coverage results displayed in the model coverage report.</p> <p>If set to on, the Simulink Verification and Validation software displays the coverage results from successive simulations in the report.</p> <p>If set to off, the software displays the coverage results for the last simulation in the report.</p> <p>Set by the <b>Cumulative runs</b> (on) / <b>Last run</b> (off) options on the <b>Reporting</b> pane of the Coverage Settings dialog box.</p>	string — 'on'   {'off'}

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
CovCumulativeVarName	<p>If CovSaveCumulativeToWorkspaceVar is set to on, the Simulink Verification and Validation software saves the results of successive simulations in the workspace variable specified by this property.</p> <p>Set by <b>cvdata object name</b> below the selected <b>Save cumulative results in workspace variable</b> check box on the <b>Results</b> pane of the Coverage Settings dialog box.</p>	string — {'covCumulativeData'}
CovExterneMLEnable	<p>Enables coverage for any external MATLAB functions that MATLAB functions for code generation call in your model. The functions can be defined in a MATLAB Function block or in a Stateflow chart. Enable this feature by checking <b>Coverage for MATLAB Files</b> on the Coverage Settings dialog box.</p>	string — 'on'   {'off'}

**Model Parameters in Alphabetical Order (Continued)**

Parameter	Description	Values
CovForceBlockReductionOff	<p>If CovForceBlockReductionOff is set to on, the Simulink Verification and Validation software ignores the value of the Simulink <b>Block reduction</b> parameter. The software provides coverage data for every block in the model that collects coverage.</p>	<p>string — {'on'}   'off'</p>
CovHTMLOptions	<p>If CovHtmlReporting is set to on, use this parameter to select from a set of display options for the resulting model coverage report.</p> <p>On the <b>Reporting</b> pane of the Coverage Settings dialog box, select <b>HTML Settings</b> to open a dialog box for selecting these options.</p>	<p>String of appended character sets separated by a space. HTML options are enabled or disabled through a value of 1 or 0, respectively, in the following character sets (default values shown):</p> <ul style="list-style-type: none"> <li>• '-aTS=1' — Include each test in the model summary</li> <li>• '-bRG=1' — Produce bar graphs in the model summary</li> <li>• '-bTC=0' — Use two color bar graphs (red, blue)</li> <li>• '-hTR=0' — Display hit/count ratio in the model summary</li> <li>• '-nFC=0' — Do not report fully covered model objects</li> <li>• '-scm=1' — Include cyclomatic complexity numbers in summary</li> </ul>

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
		<ul style="list-style-type: none"> <li>'-bcm=1' — Include cyclomatic complexity numbers in block details</li> <li>'-xEv=0' — Filter Stateflow events from report</li> </ul>
CovHtmlReporting	<p>Set to on to tell the Simulink Verification and Validation software to create an HTML report containing the coverage data at the end of simulation.</p> <p>Set by <b>Generate HTML report</b> on the <b>Reporting</b> pane of the Coverage Settings dialog box.</p>	string — { 'on' }   'off'
CovMetricSettings	<p>Selects coverage metrics for a coverage report.</p> <p>Coverage metrics are enabled by selecting the check boxes for individual coverages in the <b>Coverage metrics</b> section of the <b>Coverage</b> pane of the Coverage Settings dialog box.</p> <p>Enable options 's' and 'w' by selecting <b>Treat Simulink Logic blocks as short-circuited</b> and <b>Warn when unsupported blocks exist in model</b>, respectively, on the <b>Options</b> pane of the Coverage Settings dialog box.</p> <p>Disable option 'e' by selecting <b>Display coverage results</b></p>	<p>string — { 'dw' }</p> <p>Each order-independent character in the string enables a coverage metric or option as follows:</p> <ul style="list-style-type: none"> <li>'d' — Enable decision coverage</li> <li>'c' — Enable condition coverage</li> <li>'m' — Enable MCDC coverage</li> <li>'t' — Enable lookup table coverage</li> <li>'r' — Enable signal range coverage</li> </ul>

**Model Parameters in Alphabetical Order (Continued)**

Parameter	Description	Values
	<p><b>using model coloring</b> on the <b>Results</b> pane of the Coverage Settings dialog box.</p>	<ul style="list-style-type: none"> <li>• 'z' — Enable signal size coverage</li> <li>• 'o' — Enable coverage for Simulink Design Verifier™ blocks</li> <li>• 's' — Treat Simulink logic blocks as short-circuited</li> <li>• 'w' — Warn when unsupported blocks exist in model</li> <li>• 'e' — Eliminate model coloring for coverage results</li> </ul>
CovModelRefEnable	<p>If CovModelRefEnable is set to on or all, the Simulink Verification and Validation software generates coverage data for the entire model.</p> <p>Set by <b>Coverage for referenced models</b> on the <b>Coverage</b> pane of the Coverage Settings dialog box.</p>	string — 'on'   {'off'}   'all'   'filtered'
CovModelRefExcluded	<p>If CovModelRefEnable is set to filtered, this parameter stores a comma-separated list of referenced models for which coverage is disabled.</p> <p>Set by selecting <b>Coverage for referenced models</b> on the <b>Coverage</b> pane of the Coverage Settings dialog box and then clicking <b>Select Models</b>.</p>	string — { ' ' }

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
CovNameIncrementing	<p>If CovSaveSingleToWorkspaceVar is set to on, setting CovNameIncrementing to on causes the Simulink Verification and Validation software to append numerals to the workspace variable names for results so that earlier results are not overwritten (for example, covdata1, covdata2, etc.)</p> <p>Set by <b>Increment variable name with each simulation</b> below the selected <b>Save last run in workspace variable</b> check box on the <b>Results</b> pane of the Coverage Settings dialog box.</p>	string — 'on'   {'off'}
CovPath	<p>Model path of the subsystem for which the Simulink Verification and Validation software gathers and reports coverage data.</p> <p>Set by selecting <b>Coverage for this model: &lt;model name&gt;</b> on the <b>Coverage</b> pane of the Coverage Settings dialog box and then clicking <b>Select Subsystem</b>.</p>	string — {'/'}

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
CovReportOnPause	<p>Specifies that when you pause during simulation, the model coverage report appears in updated form, with coverage results up to the current pause or stop time.</p> <p>Set by <b>Update results on pause</b> on the <b>Results</b> pane of the Coverage Settings dialog box.</p>	string — {'on'}   'off'
CovSaveCumulativeToWorkspaceVar	<p>If set to on, the Simulink Verification and Validation software accumulates and saves the results of successive simulations in the workspace variable specified by CovCumulativeVarName.</p> <p>Set by <b>Save cumulative results in workspace variable</b> on the <b>Results</b> pane of the Coverage Settings dialog box.</p>	string — {'on'}   'off'
CovSaveName	<p>If CovSaveSingleToWorkspaceVar is set to on, the Simulink Verification and Validation software saves the results of the last simulation run in the workspace variable specified by this property.</p> <p>Set by <b>cvdata object name</b> below the selected <b>Save last run in workspace variable</b> check box on the <b>Results</b></p>	string — {'covdata'}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
	pane of the Coverage Settings dialog box.	
CovSaveSingleTo-WorkspaceVar	<p>If set to on, the Simulink Verification and Validation software saves the results of the last simulation run in the workspace variable specified by CovSaveName.</p> <p>Set by <b>Save last run in workspace variable</b> on the <b>Results</b> pane of the Coverage Settings dialog box.</p>	string — {'on'}   'off'
Created	<p>Date and time model was created.</p> <p>Set by <b>Created on</b> on the <b>History</b> pane of the Model Properties dialog box.</p> <p>See “Viewing and Editing the Model History Log” for more information.</p>	string
Creator	<p>Name of model creator.</p> <p>Set by <b>Created by</b> on the <b>History</b> pane of the Model Properties dialog box.</p> <p>See “Viewing and Editing the Model History Log” for more information.</p>	string
CurrentBlock	For internal use.	
CurrentOutputPort	For internal use.	

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
DataLoggingOverride	A Simulink.SimulationData.ModelLoggingInfo object that specifies the signal logging override settings for a model.  See “Override Signal Logging Settings”.	Simulink.SimulationData.ModelLoggingInfo   'LogOverrideSignals'   'LogAllAsSpecifiedInModel'
DataTransfer	future reA Simulink.GlobalDataTransfer object that configures data transfers for models configured for concurrent execution.	string — 'on'   {'off'}
DataTypeOverride	Specifies data type used to override fixed-point data types.  Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'
Decimation	Specify that Simulink software output only every N points, where N is the specified decimation factor.  Set by “ <b>Decimation</b> ” on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — {'1'}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
DefaultUnderspecifiedDataType	<p>Specify data type to use if Simulink cannot infer the type of a signal during data type propagation.</p> <p>Set by “<b>Default for underspecified data type</b>” on the <b>Optimization</b> pane of the Configuration Parameters dialog box.</p>	string — {'double'}   'single'
DeleteChildFcn	<p>Delete child callback function.</p> <p>Created on the <b>Callbacks</b> pane of the Block Properties dialog box.</p> <p>See “Create Block Callbacks” for more information.</p>	string — {''}
Description	<p>Description of this model.</p> <p>Set by <b>Model description</b> on the <b>Description</b> pane of the Model Properties dialog box.</p>	string — {''}
Dirty	<p>If the parameter is on, the model has unsaved changes.</p>	string — 'on'   {'off'}
DiscreteInherit-ContinuousMsg	<p>Specifies diagnostic action to take when a Unit Delay block inherits a continuous sample time.</p> <p>Set by <b>Discrete used as continuous</b> on the <b>Sample Time Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
DisplayBdSearchResults	<p>For internal use.</p>	

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
DisplayBlockIO	For internal use.	
DisplayCallgraph-Dominators	For internal use	
DisplayCompileStats	For internal use.	
DisplayCondInputTree	For internal use.	
DisplayCondStIdTree	For internal use.	
DisplayErrorDirections	For internal use.	
DisplayInvisibleSources	For internal use.	
DisplaySortedLists	For internal use.	
DisplayVectorAnd-FunctionCounts	For internal use.	
DisplayVect-PropagationResults	For internal use.	
Echo	For internal use.	
EnableOverflowDetection	For internal use.	
ExecutionContextIcon	Show execution context bars on conditional subsystems that do not propagate execution context across the subsystem boundaries.  In the Simulink Editor, set by <b>Execution Context Indicator</b> on the <b>Display &gt; Signals &amp; Ports</b> menu.	string — 'on'   {'off'}
ExplicitPartitioning	Specifies whether or not to manually map tasks (explicit mapping) or use the rate-based tasks.	string — 'on'   {'off'}

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ExpressionFolding	Enables expression folding. Set by <b>Eliminate superfluous local variables (Expression folding)</b> on the <b>Optimization &gt; Signals and Parameters</b> pane of the Configuration Parameters dialog box.	string — {'on'}   'off'
ExternalInput	Names of MATLAB workspace variables used to designate data and times to be loaded from the workspace. Set by the <b>Input</b> field on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — {'[t, u]}'
ExtMode...	Parameters whose names start with ExtMode apply to Simulink External Mode. For more information, see External Mode.	
ExtrapolationOrder	Extrapolation order of the ode14x implicit fixed-step solver. Set by <b>Extrapolation order</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	integer — 1   2   3   {4}

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
FcnCallInpInside-ContextMsg	<p>Specifies diagnostic action to take when Simulink software must compute any function-call subsystem inputs directly or indirectly during execution of a call to a function-call subsystem.</p> <p>Set by <b>Context-dependent inputs</b> on the <b>Connectivity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	<p>string —                      {'EnableAllAsError'}                        'EnableAllAsWarning'                        'UseLocalSettings'                        'DisableAll'</p> <hr/> <p><b>Note</b> The Use local settings and Disable all settings are maintained for backward compatibility, but may be deprecated in a future release.</p>
FileName	For internal use.	
FinalStateName	<p>Names of final states to save to the workspace after a simulation ends.</p> <p>Set by the <b>Final states</b> field on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	string — {'xFinal'}
FixedStep	<p>Fixed-step size.</p> <p>Set by <b>Fixed step size (fundamental sample time)</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — {'auto'}

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
FixptConstOverflowMsg	<p>Specifies diagnostic action to take when a fixed-point constant underflow occurs during simulation.</p> <p>Set by <b>Detect overflow</b> on the <b>Type Conversion Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
FixptConstPrecisionLossMsg	<p>Specifies diagnostic action to take when a fixed-point constant precision loss occurs during simulation.</p> <p>Set by <b>Detect precision loss</b> on the <b>Type Conversion Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
FixptConstUnderflowMsg	<p>Specifies diagnostic action to take when a fixed-point constant underflow occurs during simulation.</p> <p>Set by <b>Detect underflow</b> on the <b>Type Conversion Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
FixPtInfo	For internal use.	

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
FollowLinksWhen-OpeningFromGotoBlocks	Specifies whether to search for Goto tags in libraries referenced by the model when opening the From block dialog box.	string — 'on'   {'off'}
ForceArrayBoundsChecking	For internal use.	
ForceConsistencyChecking	For internal use.	
ForceModelCoverage	For internal use.	
ForwardingTable	Specifies the forwarding table for this library.  See “Forwarding Tables” for more information.	string — {'old_path_1', 'new_path_1'} ... {'old_path_n', 'new_path_n'}
ForwardingTableString	For internal use.	
GeneratePreprocessorConditionals	<p>Globally controls whether generated code contains preprocessor conditionals. This parameter is relevant only to code generation, and has no effect on the behavior of a model in Simulink.</p> <p>The parameter is available only for an ERT target when <b>Inline parameters</b> is selected. Set by Configuration Parameters &gt; Code Generation &gt; Interface &gt; “<b>Generate preprocessor conditionals</b>”. See “About Variant Systems” for more information.</p>	string — {'Use local settings'}   'off'   'on'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
GridSpacing	Has no effect in Simulink Editor. This parameter will be removed in a future release.	integer — {20}
Handle	Handle of the block diagram for this model.	double
HiliteAncestors	For internal use.	
IgnoreBidirectionalLines	For internal use.	
InheritedTsInSrcMsg	<p>Message behavior when the sample time is inherited.</p> <p>Set by <b>Source block specifies -1 sample time</b> on the <b>Sample Time Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
InitFcn	<p>Function that is called when this model is first compiled for simulation.</p> <p>Set by <b>Model initialization function</b> on the <b>Callbacks</b> pane of the Model Properties dialog box.</p> <p>See “Create Model Callbacks” for more information.</p>	string — {''}
InitialState	<p>Initial state name or values.</p> <p>Set by the <b>Initial state</b> field on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	variable or vector — {'xInitial'}

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
InitialStep	Initial step size.  Set by <b>Initial step size</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	string — {'auto'}
InlineParams	Enable inline of parameters in generated code.  Set by <b>Inline parameters</b> on the <b>Optimization &gt; Signals and Parameters</b> pane of the Configuration Parameters dialog box.	string — 'on'   {'off'}
InsertRTBMode	Control whether the Rate Transition block parameter <b>Ensure deterministic data transfer (maximum delay)</b> is set for auto-inserted Rate Transition blocks.  Set by <b>Deterministic data transfer</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	string — 'Always'   {'Whenever possible'}   'Never (minimum delay)'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
InspectSignalLogs	<p>Enable Simulink software to display logged signals in the Simulation Data Inspector tool at the end of a simulation or whenever you pause the simulation.</p> <p>Set by “<b>Record and inspect simulation output</b>” on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	string — 'on'   {'off'}
Int32ToFloatConvMsg	<p>Specify message behavior when a 32-bit integer is converted to a single-precision float.</p> <p>Set by <b>32-bit integer to single precision float conversion</b> on the <b>Type Conversion Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}
IntegerOverflowMsg	<p>Specify message behavior when an integer overflow occurs.</p> <p>Set by <b>Detect overflow</b> in the <b>Signals</b> section on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
InvalidFcnCallConnMsg	Specify message behavior when an invalid function-call connection exists.  Set by <b>Invalid function-call connection</b> on the <b>Connectivity Diagnostics</b> pane of the Configuration Parameters dialog box.	string — 'none'   'warning'   {'error'}
Jacobian	For internal use.	
LastModifiedBy	User name of the person who last modified this model.	string
LastModifiedDate	Date used for version control.	string
LibraryLinkDisplay	Displays the blocks in the model that are linked or have disabled or modified links.  In the Simulink Editor, set by <b>Library Links</b> on the <b>Display</b> menu.	can'tstring — 'none'   {'disabled'}   'user'   'all'  Set to none, does not display the link badge on the block.  Set to disabled, displays the disabled link badge on the block.  Set to user, displays only links to the user libraries.  Set to all, displays all links.
LibraryType	For internal use.	

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
LifeSpan	Specify how long (in days) an application that contains blocks depending on elapsed or absolute time should be able to execute before timer overflow.  Set by <b>Application lifespan (days)</b> on the <b>Optimization</b> pane of the Configuration Parameters dialog box.	string — {'inf'}   any positive, nonzero scalar value
LimitDataPoints	Specify that the number of data points exported to the MATLAB workspace be limited to the number specified.  Set by the <b>Limit data points to last</b> check box on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — {'on'}   'off'
LinearizationMsg	For internal use.	
Lines	For internal use.	
LoadExternalInput	Load input from workspace.  Set by the <b>Input</b> check box on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — 'on'   {'off'}
LoadInitialState	Load initial state from	string — 'on'   {'off'}
Location	For internal use.	

Set by the **Initial state** check box on the **Data Import/Export** pane of the Configuration Parameters dialog box.

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
Lock	Lock or unlock a block library. Setting this parameter to on prevents a user from inadvertently changing a library.	string — 'on'   {'off'}
LockLinksToLibrary	Lock or unlock links to a library. Setting this parameter to on prevents a user from inadvertently changing linked blocks from the Simulink Editor.	string — 'on'   {'off'}
MAModelExclusionFile	Specifies the location of the Model Advisor exclusion file.  Set by the <b>File Name</b> field on the Model Advisor Exclusion Editor dialog box.	string — { ' ' }
MaxConsecutiveMinStep	Maximum number of minimum step size violations allowed during simulation. This option appears when the solver type is <b>Variable-step</b> and the solver is an ode one.  Set by <b>Number of consecutive min steps</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	string — { '1' }

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
MaxConsecutiveZCs	<p>Maximum number of consecutive zero crossings allowed during simulation. This option appears when the solver type is <b>Variable-step</b> and the solver is an ode one.</p> <p>Set by <b>Number of consecutive zero crossings</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — {'1000'}
MaxConsecutiveZCsMsg	<p>Specifies diagnostic action to take when Simulink software detects the maximum number of consecutive zero crossings allowed. This option appears when the solver type is <b>Variable-step</b> and the solver is an ode one.</p> <p>Set by <b>Consecutive zero crossings violation</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   'warning'   {'error'}
MaxDataPoints	<p>Maximum number of output data points to save.</p> <p>Set by the <b>Limit data points to last</b> field on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	string — {'1000'}

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
MaxMDLFileLineLength	<p>Controls the line lengths in the model file. Use this to avoid line-wrapping, which can be important for source control tools.</p> <p>Specifies the maximum length in bytes, which may differ from the number of characters in Japanese, and is different from the number of columns when tabs are present.</p>	<p>integer — -1 (unlimited) or &gt;= 80.</p> <p>Default is 120.</p>
MaxNumMinSteps	Maximum number of times the solver uses the minimum step size.	string — {'-1'}
MaxOrder	<p>Maximum order for ode15s.</p> <p>Set by <b>Maximum order</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — '1'   '2'   '3'   '4'   {'5'}
MaxStep	<p>Maximum step size.</p> <p>Set by <b>Max step size</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — {'auto'}
MdlSubVersion	For internal use	

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
MergeDetectMultiDriving-BlocksExec	<p>Select the diagnostic action to take when the software detects a Merge block with more than one driving block executing at the same time step.</p> <p>Set by <b>Detect multiple driving blocks executing at the same time step</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
Metadata	<p>Names and attributes of arbitrary data associated with the model. To extract this metadata structure without needing to load the model, use the method <code>Simulink.MDLInfo.getMetadata</code>.</p>	Structure. Fields can be strings, numeric matrices of type "double", or more structures.
MinMaxOverflowArchiveData	For internal use	
MinMaxOverflowArchiveMode	<p>Logging type for fixed-point logging.</p> <p>Set by <b>Overwrite or merge model simulation results</b> in the Fixed-Point Tool.</p>	string — {'Overwrite'}   'Merge'
MinMaxOverflowLogging	<p>Setting for fixed-point logging.</p> <p>Set by <b>Fixed-point instrumentation mode</b> in the Fixed-Point Tool.</p>	string — {'UseLocalSettings'}   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
MinStep	<p>Minimum step size for the solver.</p> <p>Set by <b>Min step size</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — {'auto'}
MinStepSizeMsg	<p>Message shown when minimum step size is violated.</p> <p>Set by <b>Min step size violation</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'warning'}   'error'
ModelBlockNormalModeVisibility	<p>Use with <code>set_param</code> to set Normal Mode Visibility on for the specified Model blocks.</p> <p>You can set this parameter with the Model Block Normal Mode Visibility dialog box. For details, see “Model Block Normal Mode Visibility Dialog Box”.</p>	<p>With <code>set_param</code>, use an array of <code>Simulink.BlockPath</code> objects or cell array of cell arrays of strings, with the strings being paths to individual blocks or models.</p> <p>With <code>set_param</code>, an empty array specifies to use the Simulink default selection for the instance to have Normal Mode Visibility enabled.</p>
ModelBlockNormalModeVisibilityBlockPath	<p>Return information about which Model blocks have Normal Mode Visibility enabled. Use with a model that you are editing.</p>	<p>Return values indicate which Model blocks have Normal Mode Visibility enabled. See “Normal Mode Visibility”.</p>

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
ModelBrowserVisibility	Show the Model Browser. In the Simulink Editor, set by <b>Model Browser</b> on the <b>View</b> menu.	string — 'on'   {'off'}
ModelBrowserWidth	Width of the Model Browser pane in the model window. To display the Model Browser pane, see the ModelBrowserVisibility parameter.	integer — {200}
ModelDataFile	For internal use.	string — {' '}
ModelDependencies	List of model dependencies. Set by <b>Model dependencies</b> on the <b>Model Referencing</b> pane of the Configuration Parameters dialog box.	string — {' '}
ModelReferenceCS-MismatchMessage	Message shown when there is a model configuration mismatch. Set by <b>Model configuration mismatch</b> on the <b>Model Referencing Diagnostics</b> pane of the Configuration Parameters dialog box.	string — {'none'}   'warning'   'error'
ModelReferenceData-LoggingMessage	Message shown when there is unsupported data logging. Set by <b>Unsupported data logging</b> on the <b>Model Referencing Diagnostics</b> pane of the Configuration Parameters dialog box.	string — 'none'   {'warning'}   'error'

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ModelReferenceExtra-NoncontSigs	<p>Specifies diagnostic action to take when a discrete signal appears to pass through a Model block to the input of a block with continuous states.</p> <p>Set by <b>Extraneous discrete derivative signals</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   'warning'   {'error'}
ModelReferenceIO-MismatchMessage	<p>Message shown when there is a port and parameter mismatch.</p> <p>Set by <b>Port and parameter mismatch</b> on the <b>Model Referencing Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
ModelReferenceIOMsg	<p>Message shown when there is an invalid root Inport or Outport block connection.</p> <p>Set by <b>Invalid root Inport/Outport block connection</b> on the <b>Model Referencing Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ModelReferenceMin- AlgLoopOccurrences	Toggles the minimization of algebraic loop occurrences.  Set by <b>Minimize algebraic loop occurrences</b> on the <b>Model Referencing</b> pane of the Configuration Parameters dialog box.	string — 'on'   {'off'}
ModelReferenceNum- InstancesAllowed	Total number of model reference instances allowed per top model.  Set by <b>Total number of instances allowed per top model</b> on the <b>Model Referencing</b> pane of the Configuration Parameters dialog box.	string — 'Zero'   'Single'   {'Multi'}
ModelReferencePass- RootInputsByReference	Toggles the passing of scalar root inputs by value.  Set by “Pass fixed-size scalar root inputs by value for code generation” on the <b>Model Referencing</b> pane of the Configuration Parameters dialog box.	string — {'on'}   'off'
ModelReferenceSim- TargetVerbose	This parameter is deprecated and has no effect. Use <code>AccelVerboseBuild</code> instead.	
ModelReferenceSymbol- NameMessage	For internal use.	
ModelReferenceTargetType	For internal use.	

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ModelReferenceVersionMismatchMessage	<p>Message shown when there is a model block version mismatch.</p> <p>Set by <b>Model block version mismatch</b> on the <b>Model Referencing Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
ModelVersion	Version number of model.	string — {'1.1'}
ModelVersionFormat	<p>Format of model's version number.</p> <p>Set by <b>Model version</b> on the <b>History</b> pane of the Model Properties dialog box.</p> <p>See “Viewing and Editing the Model History Log” for more information.</p>	string — {'1.1.<AutoIncrement: 0>'}
ModelWorkspace	References this model's model workspace object.	an instance of the Simulink.ModelWorkspace class
ModifiedBy	Last person to modify this model.	string

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
ModifiedByFormat	<p>Format for the display of last modifier.</p> <p>Set by <b>Last saved by</b> on the <b>History</b> pane of the Model Properties dialog box.</p> <p>See “Viewing and Editing the Model History Log” for more information.</p> <p>Can also be set by <b>Last saved by</b> on the <b>Model history</b> field on the <b>History</b> pane of the Model Explorer.</p>	string — {'%<Auto>'}
ModifiedComment	Field for user comments.	string — {' '}
ModifiedDate	Date of last model modification.	string
ModifiedDateFormat	<p>Format of modified date.</p> <p>Set by <b>Last saved on</b> on the <b>History</b> pane of the Model Properties dialog box.</p> <p>See “Viewing and Editing the Model History Log” for more information.</p>	string — {'%<Auto>'}

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
ModifiedHistory	<p>Area for keeping notes about the history of the model.</p> <p>Set by the <b>Model history</b> field on the <b>History</b> pane of the Model Properties dialog box.</p> <p>See “Viewing and Editing the Model History Log” for more information.</p> <p>Can also be set by the <b>Model history</b> field on the <b>History</b> pane of the Model Explorer.</p>	string — { '' }
MultiTaskCondExecSysMsg	<p>Select the diagnostic action to take if Simulink software detects a subsystem that might cause data corruption or nondeterministic behavior.</p> <p>Set by <b>Multitask conditionally executed subsystem</b> on the <b>Sample Time Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   'warning'   {'error'}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
MultiTaskDSMMsg	<p>Specifies diagnostic action to take when one task reads data from a Data Store Memory block to which another task writes data.</p> <p>Set by <b>Multitask data store</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   'warning'   {'error'}
MultiTaskRateTransMsg	<p>Specifies diagnostic action to take when an invalid rate transition takes place between two blocks operating in multitasking mode.</p> <p>Set by <b>Multitask rate transition</b> on the <b>Sample Time Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'warning'   {'error'}
Name	Model name.	string
NonBusSignalsTreatedAsBus	<p>Detect when Simulink implicitly converts a non-bus signal to a bus signal to support connecting the signal to a block expecting a bus signal.</p> <p><b>“Non-bus signals treated as bus signals”</b> on the <b>Diagnostics &gt; Connectivity</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
NumberNewtonIterations	<p>Number of Newton's method iterations performed by the ode14x implicit fixed-step solver.</p> <p>Set by <b>Number Newton's iterations</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	integer — {1}
ObjectParameters	Names and attributes of model parameters.	structure
Open	For internal use.	
OptimizeBlockIOStorage	<p>Enables signal storage reuse optimization.</p> <p>Set by <b>Signal storage reuse</b> on the <b>Optimization &gt; Signals and Parameters</b> pane of the Configuration Parameters dialog box.</p>	string — {'on'}   'off'
OutputOption	<p>Time step output options for variable-step solvers.</p> <p>Set by <b>Output options</b> on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	string — 'AdditionalOutputTimes'   {'RefineOutputTimes'}   'SpecifiedOutputTimes'
OutputSaveName	<p>Workspace variable to store the model outputs.</p> <p>Set by the <b>Output</b> field on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	string — {'yout'}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
OutputTimes	<p>Output times set when <b>Output options</b> on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box is set to <b>Produce additional output</b>.</p> <p>Set by <b>Output times</b> on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	string — {'[]'}
PaperOrientation	Printing paper orientation.	string — 'portrait'   {'landscape'}
PaperPosition	When PaperPositionMode is set to manual, this parameter determines the position and size of a diagram on paper and the size of the diagram exported as a graphic file in the units specified by PaperUnits.	vector — [left, bottom, width, height]
PaperPositionMode	<p>Paper position mode.</p> <ul style="list-style-type: none"> <li>• auto</li> </ul> <p>When printing, Simulink software sizes the diagram to fit the printed page. When exporting a diagram as a graphic image, Simulink software sizes the exported image to be the same size as the diagram's normal size on screen.</p>	string — {'auto'}   'manual'   'tiled'

**Model Parameters in Alphabetical Order (Continued)**

Parameter	Description	Values
	<ul style="list-style-type: none"> <li>• manual When printing, Simulink software positions and sizes the diagram on the page as indicated by PaperPosition. When exporting a diagram as a graphic image, Simulink software sizes the exported graphic to have the height and width specified by PaperPosition.</li> <li>• tiled Enables tiled printing. See “Tiled Printing” for more information.</li> </ul>	
PaperSize	Size of PaperType in PaperUnits.	vector — [width height] (read only)
PaperType	Printing paper type.	string — 'usletter'   'uslegal'   'a0'   'a1'   'a2'   'a3'   'a4'   'a5'   'b0'   'b1'   'b2'   'b3'   'b4'   'b5'   'arch-A'   'arch-B'   'arch-C'   'arch-D'   'arch-E'   'A'   'B'   'C'   'D'   'E'   'tabloid'
PaperUnits	Printing paper size units.	string — 'normalized'   {'inches'}   'centimeters'   'points'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
ParameterArgumentNames	<p>List of parameters used as arguments when this model is called as a reference.</p> <p>Set by <b>Model arguments (for referencing this model)</b> in the <b>Model Workspace</b> pane of the Model Explorer.</p>	string — { ' ' }
ParameterDowncastMsg	<p>Specifies diagnostic action to take when a parameter downcast occurs during simulation.</p> <p>Set by <b>Detect downcast</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   'warning'   {'error'}
ParameterOverflowMsg	<p>Specifies diagnostic action to take when a parameter overflow occurs during simulation.</p> <p>Set by <b>Detect overflow</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   'warning'   {'error'}

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ParameterPrecisionLossMsg	<p>Specifies diagnostic action to take when parameter precision loss occurs during simulation.</p> <p>Set by <b>Detect precision loss</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
ParameterTunabilityLossMsg	<p>Specifies diagnostic action to take when a parameter cannot be tuned because it uses unsupported functions or operators.</p> <p>Set by <b>Detect loss of tunability</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
ParameterUnderflowMsg	<p>Specifies diagnostic action to take when a parameter underflow occurs during simulation.</p> <p>Set by <b>Detect underflow</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
ParamWorkspaceSource	For internal use.	

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
Parent	Name of the model or subsystem that owns this object. The value of this parameter for a model is an empty string.	string — { '' }
Pause	Pause simulation callback. Set by <b>Simulation pause function</b> on the <b>Callbacks</b> pane of the Model Properties dialog box.	string — { '' }
PositivePriorityOrder	Choose the appropriate priority ordering for the real-time system targeted by this model. The Simulink Coder software uses this information to implement asynchronous data transfers. Set by <b>Higher priority value indicates higher task priority</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	string — 'on'   {'off'}
PostLoadFcn	Function invoked just after this model is loaded. Set by <b>Model post-load function</b> on the <b>Callbacks</b> pane of the Model Properties dialog box. See “Create Model Callbacks” for more information.	string — { '' }

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
PostSaveFcn	<p>Function invoked just after this model is saved to disk. Not executed for blocks inside library links.</p> <p>Set by <b>Model post-save function</b> on the <b>Callbacks</b> pane of the Model Properties dialog box.</p> <p>See “Create Model Callbacks” for more information.</p>	string — { ' ' }
PreLoadFcn	<p>Preload callback.</p> <p>Set by <b>Model pre-load function</b> on the <b>Callbacks</b> pane of the Model Properties dialog box.</p> <p>See “Create Model Callbacks” for more information.</p>	string — { ' ' }
PreSaveFcn	<p>Function invoked just before this model is saved to disk. Not executed for blocks inside library links, except when you are breaking the link, e.g., with <code>save_system( A, B, 'BreakUserLinks', 'on')</code>.</p> <p>Set by <b>Model pre-save function</b> on the <b>Callbacks</b> pane of the Model Properties dialog box.</p> <p>See “Create Model Callbacks” for more information.</p>	string — { ' ' }

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
ProdBitPerChar	<p>Describes the length in bits of the C char data type supported by the production hardware to be used by this model.</p> <p>Set by <b>Number of bits: char</b> in the <b>Production hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	integer — {8}
ProdBitPerInt	<p>Describes the length in bits of the C int data type supported by the production hardware to be used by this model.</p> <p>Set by <b>Number of bits: int</b> in the <b>Production hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	integer — {32}
ProdBitPerLong	<p>Describes the length in bits of the C long data type supported by the production hardware to be used by this model.</p> <p>Set by <b>Number of bits: long</b> in the <b>Production hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	integer — {32}

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
ProdBitPerLongLong	<p>Describes the length in bits of the C long data type supported by the production hardware to be used by this model.</p> <p>Set by “<b>Number of bits: long long</b>” in the <b>Production hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p> <p>The value of this parameter must be greater than or equal to the value of ProdBitPerLong.</p>	integer — {64}
ProdBitPerShort	<p>Describes the length in bits of the C short data type supported by the production hardware to be used by this model.</p> <p>Set by <b>Number of bits: short</b> in the <b>Production hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	integer — {16}

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ProdEndianess	<p>Describes the significance of the first byte of a data word of the production hardware to be used by this model.</p> <p>Set by <b>Byte ordering</b> in the <b>Production hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — {'Unspecified'}   'LittleEndian'   'BigEndian'
ProdEqTarget	<p>Specifies that the hardware used to test the code generated from this model is the same as the production hardware or has the same characteristics.</p> <p>Set by <b>Test hardware is the same as production hardware</b> in the <b>Test hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — {'on'}   'off'
ProdHWDeviceType	<p>Predefined hardware device to specify the C language constraints for your microprocessor.</p> <p>Set by <b>“Device vendor”</b> and <b>Device type</b> in the <b>Production hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — {'Generic->Unspecified (assume 32-bit Generic)'}

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ProdIntDivRoundTo	<p>Describes how the C compiler that creates production code for this model rounds the result of dividing one signed integer by another to produce a signed integer quotient.</p> <p>Set by <b>Signed integer division rounds to</b> in the <b>Production hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — 'Floor'   'Zero'   {'Undefined'}
ProdLargestAtomicFloat	<p>Specify the largest floating-point data type that can be atomically loaded and stored on the production hardware.</p> <p>Set by <b>“Largest atomic size: floating-point”</b> in the <b>Production hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — 'Float'   'Double'   {'None'}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ProdLargestAtomicInteger	<p>Specify the largest integer data type that can be atomically loaded and stored on the production hardware.</p> <p>Set this parameter to 'LongLong' only if the production hardware supports the C long long data type and you have set ProdLongLongMode to 'on'.</p> <p>Set by “<b>Largest atomic size: integer</b>” in the <b>Production hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	<p>string — {'Char'}   'Short'   'Int'   'Long'   'LongLong'</p>
ProdLongLongMode	<p>Specify that your C compiler supports the C long long data type. Most C99 compilers support long long.</p> <p>Set by “<b>Enable long long</b>” in the <b>Production hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	<p>string — 'on'   {'off'}</p>

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
ProdShiftRightIntArith	<p>Describes whether the C compiler that creates production code for this model implements a signed integer right shift as an arithmetic right shift.</p> <p>Set by <b>Shift right on a signed integer as arithmetic shift</b> in the <b>Production hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — {'on'}   'off'
ProdWordSize	<p>Describes the word length in bits of the production hardware to be used by this model.</p> <p>Set by <b>Number of bits: native</b> in the <b>Production hardware</b> section on the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	integer — {32}
Profile	<p>Enables the simulation profiler for this model.</p> <p>In the Simulink Editor, set by <b>Show Profiler Report</b> on the <b>Analysis</b> menu.</p>	string — 'on'   {'off'}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
PropagateSignalLabelsOutOfModel	<p>Controls propagated signal names to output signals of Model block.</p> <p>Set by <b>Propagate all signal labels out of the model</b> on the <b>Model Referencing</b> pane of the Configuration Parameters dialog box.</p> <p>See “<b>Model Referencing Pane</b>” for more information.</p>	string — 'on'   {'off'}
PropagateVarSize	<p>Select how variable-size signals propagate through referenced models.</p> <p>Set by <b>Propagate sizes of variable-size signals</b> on the <b>Model Referencing</b> pane of the Configuration Parameters dialog box.</p> <p>See “<b>Model Referencing Pane</b>” for more information.</p>	string —   'Infer from blocks in model'   'Only when enabling'   'During execution'
ReadBeforeWriteMsg	<p>Specifies diagnostic action to take when the model attempts to read data from a data store before it has stored data at the current time step.</p> <p>Set by <b>Detect read before write</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'UseLocalSettings'}   'DisableAll'   'EnableAllAsWarning'   'EnableAllAsError'

**Model Parameters in Alphabetical Order (Continued)**

Parameter	Description	Values
RecordCoverage	<p>If RecordCoverage is set to on, Simulink collects and reports model coverage data during simulation. The format of this report is controlled by the values of the following parameters:</p> <ul style="list-style-type: none"> <li>CovCompData</li> <li>CovCumulativeReport</li> <li>CovCumulativeVarName</li> <li>CovHTMLOptions</li> <li>CovHtmlReporting</li> <li>CovMetricSettings</li> <li>CovModelRefEnable</li> <li>CovModelRefExcluded</li> <li>CovNameIncrementing</li> <li>CovPath</li> <li>CovReportOnPause</li> <li>CovSaveCumulativeToWorkSpaceVar</li> <li>CovSaveName</li> <li>CovSaveSingleToWorkspaceVar</li> </ul> <p>If set to off, no model coverage data is collected or reported.</p> <p>Set by <b>Coverage for this model: &lt;model name&gt;</b> on the <b>Coverage</b> pane of the Coverage Settings dialog box.</p>	string — 'on'   {'off'}

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
Refine	Refine factor.  Set by <b>Refine factor</b> on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — {'1'}
RelTol	Relative error tolerance.  Set by <b>Relative tolerance</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	string — {'1e-3'}
ReportName	Name of the associated file for the Report Generator.	string — {'simulink-default.rpt'}
ReqHilite	Highlights all the blocks in the Simulink diagram that have requirements associated with them.  In the Simulink Editor, set by <b>Highlight Model</b> on the <b>Analysis &gt; Requirements</b> menu.	string — 'on'   {'off'}
RequirementInfo	For internal use.	
RootOutportRequire- BusObject	Specifies diagnostic action to take when a bus enters a root model Outport block for which a bus object has not been specified.  Set by <b>Unspecified bus object at root Outport block</b> on the <b>Connectivity Diagnostics</b> pane of the Configuration Parameters dialog box.	string — 'none'   {'warning'}   'error'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
RTPrefix	Specifies diagnostic action to take when Simulink software encounters an object name that begins with rt.  Set by <b>"rt" prefix for identifiers</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.	string — 'none'   'warning'   {'error'}
RTW...	For information about model parameters beginning with RTW, see Configuration Parameters for Simulink Models and Parameter Reference in the Simulink Coder documentation.	
SampleTimeAnnotations	In the Simulink Editor, set by <b>Annotations</b> on the <b>Display &gt; Sample Time</b> menu.	string — 'on'   {'off'}
SampleTimeColors	In the Simulink Editor, set by <b>Colors</b> on the <b>Display &gt; Sample Time Display</b> menu.	string — 'on'   {'off'}
SampleTimeConstraint	This option appears when the solver type is Fixed-step.  Set by <b>Periodic sample time constraint</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	string — {'Unconstrained'}   'STIndependent'   'Specified'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SampleTimeProperty	Specifies and assigns priorities to the sample times implemented by the model. This option appears when <b>Periodic sample time constraint</b> is set to Specified.  Set by <b>Sample time properties</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	Structure containing the fields SampleTime, Offset, and Priority
SavedCharacterEncoding	Specifies the character set used to encode this model. See the slCharacterEncoding command for more information.	string
SaveDefaultBlockParams	For internal use.	
SaveFinalState	Save final states to workspace.  Set by the <b>Final states</b> check box on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — 'on'   {'off'}
SaveFormat	Format used to save data to the MATLAB workspace.  Set by <b>Format</b> on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — {'Array'}   'Structure'   'StructureWithTime'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
SaveOutput	<p>Save simulation output to workspace.</p> <p>Set by the <b>Output</b> check box on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	string — {'on'}   'off'
SaveState	<p>Save states to workspace.</p> <p>Set by the <b>States</b> check box on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	string — 'on'   {'off'}
SaveTime	<p>Save simulation time to workspace.</p> <p>Set by the <b>Time</b> check box on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	string — {'on'}   'off'
SaveWithDisabledLinksMsg	<p>Specifies diagnostic action to take when saving a block diagram having disabled library links.</p> <p>Set by <b>Block diagram contains disabled library links</b> on the <b>Saving Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SaveWithParameterized-LinksMsg	<p>Specifies diagnostic action to take when saving a block diagram having parameterized library links.</p> <p>Set by <b>Block diagram contains parameterized library links</b> on the <b>Saving Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
ScreenColor	<p>Background color of the model window.</p> <p>In the Simulink Editor, set by <b>Canvas Color</b> on the <b>Diagram &gt; Format</b> menu.</p>	string — 'black'   {'white'}   'red'   'green'   'blue'   'cyan'   'magenta'   'yellow'   'gray'   'lightBlue'   'orange'   'darkGreen'   [r,g,b,a] where r, g, b, and a are the red, green, blue, and alpha values of the color normalized to the range 0.0 to 1.0. The alpha value is ignored.
ScrollbarOffset	For internal use.	
SFcnCompatibilityMsg	See SfunCompatibilityCheckMsg parameter for more information.	

**Model Parameters in Alphabetical Order (Continued)**

Parameter	Description	Values
SFInvalidInputDataAccess-InChartInitDiag	<p>Select the diagnostic action to take when a chart:</p> <ul style="list-style-type: none"> <li>• Has the <code>ExecuteAtInitialization</code> property set to true</li> <li>• Accesses input data on a default transition or associated state entry actions, which execute at chart initialization</li> </ul> <p>Set by <b>Invalid input data access in chart initialization</b> on the <b>Diagnostics &gt; Stateflow</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
SFNoUnconditionalDefault-TransitionDiag	<p>Select the diagnostic action to take when a chart does not have an unconditional default transition to a state or a junction.</p> <p>Set by <b>No unconditional default transitions</b> on the <b>Diagnostics &gt; Stateflow</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SFSimEcho	<p>Enables output to appear in the MATLAB Command Window during simulation of a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Echo expressions without semicolons</b> on the <b>Simulation Target</b> pane of the Configuration Parameters dialog box.</p>	string — {'on'}   'off'
SFSimEnableDebug	<p>Enables debugging and animation during simulation of a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Enable debugging/animation</b> on the <b>Simulation Target</b> pane of the Configuration Parameters dialog box.</p>	string — {'on'}   'off'
SFSimOverflowDetection	<p>Enables overflow detection of data during simulation of a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks. Overflow occurs for data when a value assigned to it exceeds the numeric capacity of the data type.</p>	string — {'on'}   'off'

**Model Parameters in Alphabetical Order (Continued)**

Parameter	Description	Values
	<p><b>Note</b> To enable this option, you must also select the <b>Data Range</b> check box in the Stateflow Debugger window.</p> <hr/> <p>Set by <b>Enable overflow detection (with debugging)</b> on the <b>Simulation Target</b> pane of the Configuration Parameters dialog box.</p>	
SFTransitionActionBeforeConditionDiag	<p>Select the diagnostic action to take when a transition action is specified before a condition action in a transition path containing multiple segmented transitions.</p> <p>Set by “<b>Transition action specified before condition action</b>” on the <b>Diagnostics &gt; Stateflow</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
SFTransitionOutsideNaturalParentDiag	<p>Select the diagnostic action to take when a chart contains a transition that loops outside the parent state or junction.</p> <p>Set by <b>Transition outside natural parent</b> on the <b>Diagnostics &gt; Stateflow</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SfunCompatibilityCheckMsg	<p>Specifies diagnostic action to take when S-function upgrades are needed.</p> <p>Set by <b>S-function upgrades needed</b> on the <b>Compatibility Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
SFUnconditionalTransition-ShadowingDiag	<p>Select the diagnostic action to take when a chart contains multiple unconditional transitions that originate from the same state or the same junction.</p> <p>Set by <b>Transition shadowing</b> on the <b>Diagnostics &gt; Stateflow</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
SFUndirectedBroadcast-EventsDiag	<p>Select the diagnostic action to take when a chart contains undirected local event broadcasts.</p> <p>Set by <b>Undirected event broadcasts</b> on the <b>Diagnostics &gt; Stateflow</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
SFUnexpectedBacktracking-Diag	<p>Select the diagnostic action to take when a chart junction:</p> <ul style="list-style-type: none"> <li>• Does not have an unconditional transition path to a state or a terminal junction</li> <li>• Has multiple transition paths leading to it</li> </ul> <p>Set by <b>Unexpected backtracking</b> on the <b>Diagnostics &gt; Stateflow</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
SFUnusedDataAndEventsDiag	<p>Select the diagnostic action to take for detection of unused data and events in a chart.</p> <p>Set by <b>Unused data and events</b> on the <b>Diagnostics &gt; Stateflow</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
ShapePreserveControl	<p>At each time step, use derivative information to improve integration accuracy.</p> <p>Set by <b>Shape preservation</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — 'EnableAll'   {'DisableAll'}
ShowGrid	<p>Has no effect in Simulink Editor. This parameter will be removed in a future release.</p>	string — 'on'   {'off'}

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ShowLinearization-Annotations	Toggles linearization icons in the model.	string — {'on'}   'off'
ShowLineDimensions	Show signal dimensions on this model's block diagram.  In the Simulink Editor, set by <b>Signal Dimensions</b> on the <b>Display &gt; Signal &amp; Ports</b> menu.	string — 'on'   {'off'}
ShowLineDimensionsOnError	For internal use.	
ShowLineWidths	Deprecated. Use ShowLineDimensions instead.	
ShowLoopsOnError	Highlight invalid loops graphically.	string — {'on'}   'off'
ShowModelReferenceBlockIO	Toggles display of I/O mismatch on block.  In the Simulink Editor, set by <b>Block I/O Mismatch for Referenced Model</b> on the <b>Display &gt; Blocks</b> menu.	string — 'on'   {'off'}
ShowModelReference-BlockVersion	Toggles display of version on block.  In the Simulink Editor, set by <b>Block Version for Referenced Models</b> on the <b>Display &gt; Blocks</b> menu.	string — 'on'   {'off'}
Shown	For internal use.	

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
ShowPageBoundaries	Toggles display of page boundaries on the Simulink Editor canvas.  In the Simulink Editor, set by <b>Show Page Boundaries</b> on the <b>File &gt; Print</b> menu.	string — 'on'   {'off'}
ShowPortDataTypes	Show data types of ports on this model's block diagram.  In the Simulink Editor, set by <b>Port Data Types</b> on the <b>Display &gt; Signals &amp; Ports</b> menu.	string — 'on'   {'off'}
ShowPortDataTypesOnError	For internal use.	
ShowStorageClass	Show storage classes of signals on this model's block diagram.  In the Simulink Editor, set by <b>Storage Class</b> on the <b>Format &gt; Signals &amp; Ports</b> menu.	string — 'on'   {'off'}
ShowTestPointIcons	Show test point icons on this model's block diagram.  In the Simulink Editor, set by <b>Testpoint &amp; Logging Indicators</b> on the <b>Display &gt; Signals &amp; Ports</b> menu.	string — {'on'}   'off'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ShowViewerIcons	Show viewer icons on this model's block diagram.  In the Simulink Editor, set by <b>Viewer Indicator</b> on the <b>Display &gt; Signals &amp; Ports</b> menu.	string — {'on'}   'off'
SignalHierarchy	If the signal is a bus, returns the name and hierarchy of the signals in the bus.  (Read-only) Get with the <code>get_param</code> command. Specify a port or line handle. See "View Information about Buses".	Return values reflect the structure of the signal that you specify.
SignalInfNanChecking	Specifies diagnostic action to take when the value of a block output is Inf or NaN at the current time step.  Set by <b>Inf or NaN block output</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.	string — {'none'}   'warning'   'error'
SignalLabelMismatchMsg	Specifies diagnostic action to take when a signal label mismatch occurs.  Set by <b>Signal label mismatch</b> on the <b>Connectivity Diagnostics</b> pane of the Configuration Parameters dialog box.	string — {'none'}   'warning'   'error'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
SignalLogging	Globally enable signal logging for this model.  Set by the <b>Signal logging</b> check box on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — {'on'}   'off'
SignalLoggingName	Name for saving signal logging data to a workspace.  Set by the <b>Signal logging</b> field on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — {'logout'}
SignalLoggingSaveFormat	Format for saving signal logging data.  Set by the “ <b>Signal logging format</b> ” field on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — {'ModelDataLogs'}   'Dataset'
SignalNameFromLabel	Propagate signal names for Bus Creator block input signals whenever you change the name of an input signal programmatically.  Set with the <code>set_param</code> command, using either a port or line handle and a string specifying the signal name to propagate.	string — {' '}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SignalRangeChecking	<p>Select the diagnostic action to take when signals exceed specified minimum or maximum values.</p> <p>Set by <b>Simulation range checking</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
SignalResolutionControl	<p>Control which named states and signals get resolved to Simulink signal objects.</p> <p>Set by <b>Signal resolution</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'UseLocalSettings'}   'TryResolveAll'   'TryResolveAll-WithWarning'
SigSpecEnsureSample-TimeMsg	<p>Specifies diagnostic action to take when the sample time of the source port of a signal specified by a Signal Specification block differs from the signal's destination port.</p> <p>Set by <b>Enforce sample times specified by Signal Specification blocks</b> on the <b>Sample Time Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
SimBuildMode	<p>Specifies how you build the simulation target for a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Simulation target build mode</b> on the <b>Simulation Target</b> pane of the Configuration Parameters dialog box.</p>	<p>string —                      {'sf_incremental_build'}   'sf_nonincremental_build'                        'sf_make'                        'sf_make_clean'                        'sf_make_clean_objects'</p>
SimCompilerOptimization	<p>Specifies the compiler optimization level during acceleration code generation.</p> <p>Set by <b>Compiler optimization level</b> on the <b>Optimization</b> pane of the Configuration Parameters dialog box.</p>	<p>string — 'on'   {'off'}</p>
SimCtrlC	<p>Enables responsiveness checks in code generated for MATLAB Function blocks.</p> <p>Set by <b>“Ensure responsiveness”</b> on the <b>Simulation Target</b> pane of the Configuration Parameters dialog box.</p>	<p>string — {'on'}   'off'</p>

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SimCustomHeaderCode	<p>Enter code lines to appear near the top of a generated header file for a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Header file</b> on the <b>Simulation Target &gt; Custom Code</b> pane of the Configuration Parameters dialog box.</p>	string — { ' ' }
SimCustomInitializer	<p>Enter code statements that execute once at the start of simulation for a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Initialize function</b> on the <b>Simulation Target &gt; Custom Code</b> pane of the Configuration Parameters dialog box.</p>	string — { ' ' }
SimCustomSourceCode	<p>Enter code lines to appear near the top of a generated source code file for a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Source file</b> on the <b>Simulation Target &gt; Custom Code</b> pane of the Configuration Parameters dialog box.</p>	string — { ' ' }

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
SimCustomTerminator	<p>Enter code statements that execute at the end of simulation for a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Terminate function</b> on the <b>Simulation Target &gt; Custom Code</b> pane of the Configuration Parameters dialog box.</p>	string — { '' }
SimIntegrity	<p>Detects violations of memory integrity in code generated for MATLAB Function blocks and stops execution with a diagnostic.</p> <p>Set by “<b>Ensure memory integrity</b>” on the <b>Simulation Target</b> pane of the Configuration Parameters dialog box.</p>	string — { 'on' }   'off'
SimParseCustomCode	<p>Specify whether or not to parse the custom code and report unresolved symbols in the model.</p> <p>Set by <b>Parse custom code symbols</b> on the <b>Simulation Target &gt; Custom Code</b> pane of the Configuration Parameters dialog box.</p>	string — { 'on' }   'off'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SimReservedNameArray	<p>Enter the names of variables or functions in the generated code that match the names of variables or functions specified in custom code. This action prevents naming conflicts between identifiers in the generated code and in custom code for a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Reserved names</b> on the <b>Simulation Target &gt; Symbols</b> pane of the Configuration Parameters dialog box.</p>	string array — <code>{{}}</code>
SimulationCommand	<p>Executes a simulation command.</p> <hr/> <p><b>Note</b> You cannot use <code>set_param</code> to run a simulation in a MATLAB session that does not have a display, i.e., if you used <code>matlab -nodisplay</code> to start the session.</p> <hr/>	string — 'start'   'stop'   'pause'   'continue'   'step'   'update'   'WriteDataLogs'   'SimParamDialog'   'connect'   'disconnect'   'WriteExtModeParamVect'   'AccelBuild'

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
SimulationMode	Indicates whether Simulink software should run in Normal, Accelerator, Rapid Accelerator, or External mode.  In the Simulink Editor, set by the <b>Simulation &gt; Mode</b> menu.	string — {'normal'}   'accelerator'   'rapid-accelerator'   'external'
SimulationStatus	Indicates simulation status.	string — {'stopped'}   'updating'   'initializing'   'running'   'paused'   'terminating'   'external'
SimulationTime	Current time value for the simulation.	double — {0}
SimStateInterfaceChecksumMismatchMsg	Check to ensure that the interface checksum is identical to the model checksum before loading the SimState.	string — 'none'   'warning'   'error'
SimStateOlderReleaseMsg	Check to report that the SimState was generated by an earlier version of Simulink. In the <b>Diagnostics</b> pane of the Configuration Parameters dialog box, configure the diagnostic to allow Simulink to report the message as error or warning.	string — 'error'   'warning'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SimUserIncludeDirs	<p>Enter a space-separated list of directory paths that contain files you include in the compiled target for a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Include directories</b> on the <b>Simulation Target &gt; Custom Code</b> pane of the Configuration Parameters dialog box.</p>	<p>string — { ' ' }</p> <hr/> <p><b>Note</b> If your list includes any Windows path strings that contain spaces, each instance must be enclosed in double quotes within the argument string, for example,</p> <p>'C:\Project "C:\Custom Files"'</p> <hr/>
SimUserLibraries	<p>Enter a space-separated list of static libraries that contain custom object code to link into the target for a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Libraries</b> on the <b>Simulation Target &gt; Custom Code</b> pane of the Configuration Parameters dialog box.</p>	<p>string — { ' ' }</p>

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
SimUserSources	<p>Enter a space-separated list of source files to compile and link into the target for a model that contains MATLAB Function blocks, Stateflow charts, or Truth Table blocks.</p> <p>Set by <b>Source files</b> on the <b>Simulation Target &gt; Custom Code</b> pane of the Configuration Parameters dialog box.</p>	string — { ' ' }
SingleTaskRateTransMsg	<p>Specifies diagnostic action to take when a rate transition takes place between two blocks operating in single-tasking mode.</p> <p>Set by <b>Single task rate transition</b> on the <b>Sample Time Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
Solver	<p>Solver used for the simulation.</p> <p>Set by the <b>Solver</b> drop-down list on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — 'VariableStepDiscrete'   {'ode45'}   'ode23'   'ode113'   'ode15s'   'ode23s'   'ode23t'   'ode23tb'   'FixedStepDiscrete'   'ode8'   'ode5'   'ode4'   'ode3'   'ode2'   'ode1'   'ode14x'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SolverMode	<p>Solver mode for this model. This option appears when the solver type is Fixed-step.</p> <p>Set by <b>Tasking mode for periodic sample times</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — {'Auto'}   'SingleTasking'   'MultiTasking'
SolverName	<p>Solver used for the simulation. See <b>Solver</b> parameter for more information.</p>	
SolverPrmCheckMsg	<p>Enables diagnostics to control when Simulink software automatically selects solver parameters. This option notifies you if:</p> <ul style="list-style-type: none"> <li>• Simulink software changes a user-modified parameter to make it consistent with other model settings</li> <li>• Simulink software automatically selects solver parameters for the model, such as <b>FixedStepSize</b></li> </ul> <p>Set by <b>Automatic solver parameter selection</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SolverResetMethod	<p>This option appears when the solver type is <code>Variable-step</code> and the solver is <code>ode15s</code> (<code>stiff/NDF</code>), <code>ode23t</code> (<code>Mod.stiff/Trapezoidal</code>), or <code>ode23tb</code> (<code>stiff/TR-BDF2</code>).</p> <p>Set by <b>Solver reset method</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — {'Fast'}   'Robust'
SolverType	<p>Solver type used for the simulation.</p> <p>Set by <b>Type</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — {'Variable-step'}   'Fixed-step'
SortedOrder	<p>Show the sorted order of this model's blocks on the block diagram.</p> <p>In the Simulink Editor, set by <b>Sorted Execution Order</b> on the <b>Display &gt; Blocks</b> menu.</p>	string — 'on'   {'off'}
StartFcn	<p>Start simulation callback.</p> <p>Set by <b>Simulation start function</b> on the <b>Callbacks</b> pane of the Model Properties dialog box.</p> <p>See "Create Model Callbacks" for more information.</p>	string — {' '}

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
StartTime	Simulation start time. Set by <b>Start time</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	string — {'0.0'}
StateNameClashWarn	Select the diagnostic action to take when a name is used for more than one state in the model. Set by <b>State name clash</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.	string — 'none'   {'warning'}
StateSaveName	State output name to be saved to workspace. Set by the <b>States</b> field on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.	string — {'xout'}
StatusBar	Has no effect in Simulink Editor. This parameter will be removed in a future release. In the Simulink Editor, set by <b>Status Bar</b> on the <b>View</b> menu.	string — {'on'}   'off'

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
StopFcn	<p>Stop simulation callback.</p> <p>Set by <b>Simulation stop function</b> on the <b>Callbacks</b> pane of the Model Properties dialog box.</p> <p>See “Create Model Callbacks” for more information.</p>	string — { '' }
StopTime	<p>Simulation stop time.</p> <p>Set by <b>Stop time</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	string — { '10.0' }
StrictBusMsg	<p>Specifies diagnostic action to take when Simulink software detects a signal that some blocks treat as a mux or vector, while other blocks treat the signal as a bus.</p> <p>Set by <b>Mux blocks used to create bus signals</b> and <b>Bus signal treated as vector</b> on the <b>Connectivity Diagnostics</b> pane of the Configuration Parameters dialog box.</p> <p>For more information, see “Prevent Bus and Mux Mixtures”.</p>	string — { 'ErrorLevel1' }   'None'   'Warning'   'WarnOnBusTreatedAsVector'   'ErrorOnBusTreatedAsVector'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
SupportModelReferenceSimTargetCustomCodeAccelerator	When Custom Code Accelerator mode code generation, include Stateflow or MATLAB custom code for code generation for a referenced model. Select this option for each referenced model for which you want code generation to include Stateflow or MATLAB code for code generation	string — {'off'}   'on'
Tag	User-specified text that is assigned to the model's Tag parameter and saved with the model.	string — {' '}
TargetBitPerChar	Describes the length in bits of the C char data type supported by the hardware used to test generated code.  Set by <b>Number of bits: char</b> in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.	integer — {8}

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
TargetBitPerInt	<p>Describes the length in bits of the C <code>int</code> data type supported by the hardware used to test generated code.</p> <p>Set by <b>Number of bits: int</b> in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	integer — {32}
TargetBitPerLong	<p>Describes the length in bits of the C <code>long</code> data type supported by the hardware used to test generated code.</p> <p>Set by <b>Number of bits: long</b> in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	integer — {32}
TargetBitPerLongLong	<p>Describes the length in bits of the C <code>long long</code> data type supported by the hardware used to test generated code.</p> <p>Set by “<b>Number of bits: long long</b>” in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p> <p>The value of this parameter must be greater than</p>	integer — {64}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
	or equal to the value of TargetBitPerLong.	
TargetBitPerShort	<p>Describes the length in bits of the C short data type supported by the hardware used to test generated code.</p> <p>Set by <b>Number of bits: short</b> in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	integer — {16}
TargetEndianness	<p>Describes the significance of the first byte of a data word of the hardware used to test generated code.</p> <p>Set by <b>Byte ordering</b> in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — {'Unspecified'   'LittleEndian'   'BigEndian'}
TargetFcnLib	For internal use.	
TargetHWDeviceType	<p>Describes the characteristics of the hardware used to test generated code.</p> <p>Set by <b>Device vendor</b> and <b>Device type</b> in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — {'Generic->Unspecified (assume 32-bit Generic)'} 

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
TargetIntDivRoundTo	<p>Describes how the C compiler that creates test code for this model rounds the result of dividing one signed integer by another to produce a signed integer quotient.</p> <p>Set by <b>Signed integer division rounds to</b> in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — 'Floor'   'Zero'   {'Undefined'}
TargetLargestAtomicFloat	<p>Specify the largest floating-point data type that can be atomically loaded and stored on the hardware used to test code.</p> <p>Set by “<b>Largest atomic size: floating-point</b>” in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — 'Float'   'Double'   {'None'}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
TargetLargestAtomicInteger	<p>Specify the largest integer data type that can be atomically loaded and stored on the hardware used to test code.</p> <p>Set this parameter to 'LongLong' only if the test hardware supports the C long long data type and you have set TargetLongLongMode to 'on'.</p> <p>Set by “<b>Largest atomic size: integer</b>” in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — {'Char'}   'Short'   'Int'   'Long'   'LongLong'
TargetLongLongMode	<p>Specify that your C compiler supports the C long long data type. Most C99 compilers support long long.</p> <p>Set by “<b>Enable long long</b>” in the <b>Production hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — 'on'   {'off'}

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
TargetShiftRightIntArith	<p>Describes whether the C compiler that creates test code for this model implements a signed integer right shift as an arithmetic right shift.</p> <p>Set by <b>Shift right on a signed integer as arithmetic shift</b> in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	string — {'on'}   'off'
TargetTypeEmulationWarnSuppressLevel	<p>Specifies whether Simulink Coder software displays or suppresses warning messages when emulating integer sizes in rapid prototyping environments.</p>	integer — {0}
TargetWordSize	<p>Describes the word length in bits of the hardware used to test generated code.</p> <p>Set by <b>Number of bits: native</b> in the <b>Test hardware</b> section of the <b>Hardware Implementation</b> pane of the Configuration Parameters dialog box.</p>	integer — {32}

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
TasksWithSamePriorityMsg	<p>Specifies diagnostic action to take when tasks have equal priority.</p> <p>Set by <b>Tasks with equal priority</b> on the <b>Sample Time Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
TiledPageScale	Scales the size of the tiled page relative to the model.	string — {'1'}
TiledPaperMargins	Controls the size of the margins associated with each tiled page. Each element in the vector represents a margin at the particular edge.	vector — [left, top, right, bottom]
TimeAdjustmentMsg	<p>Specifies diagnostic action to take if Simulink software makes a minor adjustment to a sample hit time while running the model.</p> <p>Set by <b>Sample hit time adjusting</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'
TimeSaveName	<p>Simulation time name.</p> <p>Set by the <b>Time</b> field on the <b>Data Import/Export</b> pane of the Configuration Parameters dialog box.</p>	variable — {'tout'}

**Model Parameters in Alphabetical Order (Continued)**

<b>Parameter</b>	<b>Description</b>	<b>Values</b>
TLC...	Parameters whose names begin with TLC are used for code generation. See the Simulink Coder documentation for more information.	
ToolBar	Has no effect in Simulink Editor. This parameter will be removed in a future release.  In the Simulink Editor, hide or display all toolbars with <b>Toolbars</b> on the <b>View</b> menu or, hide or display specific toolbars using <b>File &gt; Simulink Preferences &gt; Editor Default</b> toolbar options.	string — {'on'}   'off'
TryForcingSFcnDF	This flag is used for backward compatibility with user S-functions that were written prior to R12.	string — 'on'   {'off'}
TunableVars	List of global (tunable) parameters.  Set in the Model Parameter Configuration dialog box.	string — {' '}
TunableVarsStorageClass	List of storage classes for their respective tunable parameters.  Set in the Model Parameter Configuration dialog box.	string — {' '}

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
TunableVarsTypeQualifier	List of storage type qualifiers for their respective tunable parameters.  Set in the Model Parameter Configuration dialog box.	string — {''}
Type	Simulink object type (read only).	string — {'block_diagram'}
UnconnectedInputMsg	Unconnected input ports diagnostic.  Set by <b>Unconnected block input ports</b> on the <b>Connectivity Diagnostics</b> pane of the Configuration Parameters dialog box.	string — 'none'   {'warning'}   'error'
UnconnectedLineMsg	Unconnected lines diagnostic.  Set by <b>Unconnected line</b> on the <b>Connectivity Diagnostics</b> pane of the Configuration Parameters dialog box.	string — 'none'   {'warning'}   'error'
UnconnectedOutputMsg	Unconnected block output ports diagnostic.  Set by <b>Unconnected block output ports</b> on the <b>Connectivity Diagnostics</b> pane of the Configuration Parameters dialog box.	string — 'none'   {'warning'}   'error'

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
UnderSpecifiedDataTypeMsg	<p>Detect usage of heuristics to assign signal data types.</p> <p>Set by <b>Underspecified data types</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'
UnderspecifiedInitializationDetection	<p>Select how Simulink software handles initialization of initial conditions for conditionally executed subsystems, Merge blocks, subsystem elapsed time, and Discrete-Time Integrator blocks.</p> <p>Set by <b>Underspecified initialization detection</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'classic'}   'simplified'
UniqueDataStoreMsg	<p>Specifies diagnostic action to take when the model contains multiple Data Store Memory blocks that specify the same data store name.</p> <p>Set by <b>Duplicate data store names</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'   'error'

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
UnknownTsInhSupMsg	<p>Detect blocks that have not set whether they allow the model containing them to inherit a sample time.</p> <p>Set by <b>Unspecified inheritability of sample time</b> on the <b>Solver Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — 'none'   {'warning'}   'error'
UnnecessaryDatatype-ConvMsg	<p>Detect unnecessary data type conversion blocks.</p> <p>Set by <b>Unnecessary type conversions</b> on the <b>Type Conversion Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	string — {'none'}   'warning'
UpdateHistory	<p>Specifies when to prompt the user about updating the model history.</p> <p>Set by <b>Prompt to update model history</b> on the <b>History</b> pane of the Model Properties dialog box or <b>Prompt to update model history</b> on the <b>History</b> pane of the Model Explorer.</p> <p>See “Viewing and Editing the Model History Log” for more information.</p>	string — {'UpdateHistoryNever'}   'UpdateHistoryWhenSave'

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
UpdateModelReference-Targets	Specify whether to rebuild simulation and Simulink Coder targets for referenced models before updating, simulating, or generating code for this model.  Set by <b>Rebuild options</b> on the <b>Model Referencing</b> pane of the Configuration Parameters dialog box.	string — 'IfOutOfDate'   'Force'   'AssumeUpToDate'   {'IfOutOfDateOrStructuralChange'}
UseAnalysisPorts	For internal use.	
UseIntDivNetSlope	Use integer division to handle net slopes that are reciprocals of integers.	string — 'on'   {'off'}
VectorMatrixConversionMsg	Detect vector-to-matrix or matrix-to-vector conversions.  Set by <b>Vector/matrix block input conversion</b> on the <b>Type Conversion Diagnostics</b> pane of the Configuration Parameters dialog box.	string — {'none'}   'warning'   'error'
Version	Simulink version you are currently running, e.g., '7.6'. If you are using a service pack, the ver function returns an additional digit, e.g., 7.4.1 (R2009bSP1). To get version information without loading the block diagram into memory, see Simulink.MDLInfo.	double (read only)

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
VersionLoaded	<p>Simulink version that last saved the model, e.g., '7.6'. If you are using a service pack, the <code>ver</code> function returns an additional digit, e.g., 7.4.1 (R2009bSP1). To get version information without loading the block diagram into memory, see <code>Simulink.MDLInfo</code>.</p>	double (read only)
WideLines	<p>Draws lines that carry vector or matrix signals wider than lines that carry scalar signals.</p> <p>In the Simulink Editor, set by <b>Wide Nonscalar Lines</b> on the <b>Display &gt; Signals &amp; Ports</b> menu.</p>	string — 'on'   {'off'}
WideVectorLines	<p>Deprecated. Use <code>WideLines</code> instead.</p>	
WriteAfterReadMsg	<p>Specifies diagnostic action to take when the model attempts to store data in a data store after previously reading data from it in the current time step.</p> <p>Set by <b>Detect write after read</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	<p>string —</p> <p>{'UseLocalSettings'}   'DisableAll'   'EnableAllAsWarning'   'EnableAllAsError'</p>

### Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
WriteAfterWriteMsg	<p>Specifies diagnostic action to take when the model attempts to store data in a data store twice in succession in the current time step.</p> <p>Set by <b>Detect write after write</b> on the <b>Data Validity Diagnostics</b> pane of the Configuration Parameters dialog box.</p>	<p>string —</p> <p>{ 'UseLocalSettings' }   'DisableAll'   'EnableAllAsWarning'   'EnableAllAsError'</p>
ZCThreshold	<p>Specifies the deadband region used during the detection of zero crossings. Signals falling within this region are defined as having crossed through zero.</p> <p>Set by <b>Signal threshold</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	<p>string — { 'auto' }   any real number greater than or equal to zero</p>
ZeroCross	For internal use.	
ZeroCrossAlgorithm	<p>Specifies the algorithm to detect zero crossings when you select a variable-step solver.</p> <p>Set by <b>Algorithm</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.</p>	<p>string — { 'Nonadaptive' }   'Adaptive'</p>

## Model Parameters in Alphabetical Order (Continued)

Parameter	Description	Values
ZeroCrossControl	Enable zero-crossing detection.  Set by <b>Zero-crossing control</b> on the <b>Solver</b> pane of the Configuration Parameters dialog box.	string — { 'UseLocalSettings' }   'EnableAll'   'DisableAll'
ZoomFactor	Zoom factor of the Simulink Editor window expressed as a percentage of normal (100%) or by the keywords <code>FitSystem</code> or <code>FitSelection</code> .  In the Simulink Editor, set by the zoom commands on the <b>View</b> menu.	string — { '100' }   'FitSystem'   'FitSelection'

## Examples of Setting Model Parameters

These examples show how to set model parameters for the `mymodel` system.

This command sets the simulation start and stop times.

```
set_param('mymodel', 'StartTime', '5', 'StopTime', '100')
```

This command sets the solver to `ode15s` and changes the maximum order.

```
set_param('mymodel', 'Solver', 'ode15s', 'MaxOrder', '3')
```

This command associates a `PostSaveFcn` callback.

```
set_param('mymodel', 'PostSaveFcn', 'my_save_cb')
```

## Common Block Properties

### In this section...

“About Common Block Properties” on page 7-100

“Examples of Setting Block Properties” on page 7-111

### About Common Block Properties

This table lists the properties common to all Simulink blocks, including block callback properties (see “Callbacks for Customized Model Behavior”).

Examples of commands that change these properties follow this table (see “Examples of Setting Block Properties” on page 7-111).

#### Common Block Properties

Property	Description	Values
AncestorBlock	Name of the library block that the block is linked to (for blocks with a disabled link).	string
AttributesFormatString	String format specified for block annotations in the Block Parameters dialog box.	string
BackgroundColor	Block background color.	RGB value array string   [r,g,b,a] where r, g, b, and a are the red, green, blue, and alpha values of the color normalized to the range 0.0 to 1.0. The alpha value is ignored.
BlockDescription	Block description shown in the Block Properties dialog box.	string
BlockType	Block type (read only).	string

**Common Block Properties (Continued)**

<b>Property</b>	<b>Description</b>	<b>Values</b>
ClipboardFcn	Function called when block is copied to the clipboard ( <b>Ctrl+C</b> )	string
CloseFcn	Function called when <code>close_system</code> is run on block.	string
Commented	Exclude block from simulation.	{ 'off' }   'on'
CompiledPort-ComplexSignals	Complexity of port signals after updating diagram.	structure array
CompiledPortDataTypes	Data types of port signals after updating diagram.	structure array
CompiledPortDimensions	Dimensions of port signals after updating diagram.	structure array
CompiledPortFrameData	Frame mode of port signals after updating diagram.	structure array
CompiledPortWidths	Structure of port widths after updating diagram.	structure array
CompiledSampleTime	Block sample time after updating diagram.	vector [sample time, offset time]
CopyFcn	Function called when block is copied.	string
DataTypeOverrideCompiled	For internal use.	

**Common Block Properties (Continued)**

<b>Property</b>	<b>Description</b>	<b>Values</b>
DeleteFcn	Function called when block is deleted. If a block is graphically deleted, you can still undo the operation and call the block's UndoDeleteFcn. In addition, for graphically deleted blocks, the block's DestroyFcn is still called when the model is closed or any subsystem containing the block is destroyed using delete_block.	MATLAB expression
DestroyFcn	Function called when block is destroyed. If you run the delete_block command for a block, it first calls the block's DeleteFcn, then calls the DestroyFcn for that block; no undo is possible. The DestroyFcn is also called when you close the model or invoke delete_block on a subsystem containing the block.	MATLAB expression
Description	Description of block. Set by the <b>Description</b> field in the <b>General</b> pane of the Block Properties dialog box.	text and tokens
Diagnostics	For internal use.	
DialogParameters	Names/attributes of parameters in block parameter dialog box.	structure
DropShadow	Display drop shadow.	{'off'}   'on'

**Common Block Properties (Continued)**

<b>Property</b>	<b>Description</b>	<b>Values</b>
ExtModeLoggingSupported	Enable a block to support uploading of signal data in external mode (for example, with a scope block).	{ 'off' }   'on'
ExtModeLoggingTrig	Enable a block to act as the trigger block for external mode signal uploading.	{ 'off' }   'on'
ExtModeUploadOption	Enable a block to upload signal data in external mode when the <b>Select all</b> check box on the External Signal & Triggering dialog box is not selected. A value of <b>log</b> indicates the block uploads signals. A value of <b>none</b> indicates the block does not upload signals. The value <b>monitor</b> is currently not in use. If the <b>Select all</b> check box on the External Signal & Triggering dialog box is selected, it overrides this property setting.	{ 'none' }   'log'   'monitor'
FontAngle	Font angle.	'normal'   'italic'   'oblique'   {'auto'}
FontName	Font.	string
FontSize	Font size. A value of -1 specifies that this block inherits the font size specified by the DefaultBlockFontSize model parameter.	real {'-1'}
FontWeight	Font weight.	'light'   'normal'   'demi'   'bold'   {'auto'}

**Common Block Properties (Continued)**

<b>Property</b>	<b>Description</b>	<b>Values</b>
ForegroundColor	Foreground color of block's icon.	string {'black'}   [r,g,b,a] where r, g, b, and a are the red, green, blue, and alpha values of the color normalized to the range 0.0 to 1.0. The alpha value is ignored.
Handle	Block handle.	real
HiliteAncestors	For internal use.	
InitFcn	Initialization function for a masked block. Created on the <b>Callbacks</b> pane of the Model Properties dialog box. See "Create Model Callbacks" in the Using Simulink documentation for further information.	MATLAB expression
InputSignalNames	Names of input signals.	cell array
IOSignalStrings		list
IOType	Signal & Scope Manager type. For internal use.	
LineHandles	Handles of lines connected to block.	struct
LinkStatus	Link status of block. Updates out-of-date reference blocks when queried using get_param.	{'none'}   'resolved'   'unresolved'   'implicit'   'inactive'   'restore'   'propagate'
LoadFcn	Function called when block is loaded.	MATLAB expression
MinMaxOverflow-Logging_Compiled	For internal use.	

**Common Block Properties (Continued)**

<b>Property</b>	<b>Description</b>	<b>Values</b>
ModelCloseFcn	Function called when model is closed. The ModelCloseFcn is called prior to the block's DeleteFcn and DestroyFcn callbacks, if either are set.	MATLAB expression
ModelParamTableInfo	For internal use.	
MoveFcn	Function called when block is moved.	MATLAB expression
Name	Block name.	string
NameChangeFcn	Function called when block name is changed.	MATLAB expression
NamePlacement	Position of block name.	{'normal'}   'alternate'
ObjectParameters	Names/attributes of block parameters.	structure
OpenFcn	Function called when this Block Parameters dialog box opens.	MATLAB expression
Orientation	Where block faces.	{'right'}   'left'   'up'   'down'
OutputSignalNames	Names of output signals.	cell array
Parent	Name of the system that owns the block.	string {'untitled'}
ParentCloseFcn	Function called when parent subsystem is closed. The ParentCloseFcn of blocks at the root model level is not called when the model is closed.	MATLAB expression

**Common Block Properties (Continued)**

Property	Description	Values
PortConnectivity	<p>The value of this property is an array of structures, each of which describes one of the block's input or output ports. Each port structure has the following fields:</p> <ul style="list-style-type: none"> <li>• Type           <p>Specifies the port's type and/or number. The value of this field can be:</p> <ul style="list-style-type: none"> <li>▪ <math>n</math>, where <math>n</math> is the number of the port for data ports</li> <li>▪ 'enable' if the port is an enable port</li> <li>▪ 'trigger' if the port is a trigger port</li> <li>▪ 'state' for state ports</li> <li>▪ 'ifaction' for action ports</li> <li>▪ 'LConn#' for a left connection port where # is the port's number</li> <li>▪ 'RConn#' for a right connection port where # is the port's number</li> </ul> </li> <li>• Position           <p>The value of this field is a two-element vector, <math>[x\ y]</math>, that specifies the port's position.</p> </li> </ul>	structure array

**Common Block Properties (Continued)**

Property	Description	Values
	<ul style="list-style-type: none"> <li>• SrcBlock Handle of the block connected to this port. This field is null for output ports.</li> <li>• SrcPort Number of the port connected to this port. This field is null for output ports.</li> <li>• DstBlock Handle of the block to which this port is connected. This field is null for input ports.</li> <li>• DstPort Number of the port to which this port is connected. This field is null for input ports.</li> </ul>	
PortHandles	<p>The value of this property is a structure that specifies the handles of the block's ports. The structure has the following fields:</p> <ul style="list-style-type: none"> <li>• Inport Handles of the block's input ports.</li> <li>• Outport Handles of the block's output ports.</li> </ul>	structure array

**Common Block Properties (Continued)**

Property	Description	Values
	<ul style="list-style-type: none"> <li>• Enable Handle of the block's enable port.</li> <li>• Trigger Handle of the block's trigger port.</li> <li>• State Handle of the block's state port.</li> <li>• LConn Handles of the block's left connection ports.</li> <li>• RConn Handles of the block's right connection ports.</li> <li>• Ifaction Handle of the block's action port.</li> </ul>	
Ports	<p>The value of this property is a vector that specifies the numbers of each kind of port. The order of the vector's elements corresponds to the following port types:</p> <ul style="list-style-type: none"> <li>• Inport</li> <li>• Outport</li> <li>• Enable</li> </ul>	vector

**Common Block Properties (Continued)**

Property	Description	Values
	<ul style="list-style-type: none"> <li>• Trigger</li> <li>• State</li> <li>• LConn</li> <li>• RConn</li> <li>• Ifaction</li> </ul>	
Position	Position of block in model window.	vector of coordinates (in pixels) not enclosed in quotation marks: [left top right bottom]  <hr/> <b>Note</b> The origin is located in the upper left corner of the model window. The maximum value for a coordinate is 32767.
PostSaveFcn	Function called after the block is saved. Created on the <b>Callbacks</b> pane of the Model Properties dialog box. See “Create Model Callbacks” in the Using Simulink documentation for further information.	MATLAB expression
PreCopyFcn	Function called before the block is copied. See “Block Callback Parameters” in the Using Simulink documentation for details.	MATLAB expression

**Common Block Properties (Continued)**

<b>Property</b>	<b>Description</b>	<b>Values</b>
PreDeleteFcn	Function called before the block is deleted. See “Block Callback Parameters” in the Using Simulink documentation for details.	MATLAB expression
PreSaveFcn	Function called before the block is saved.	MATLAB expression
Priority	Specifies the block’s order of execution relative to other blocks in the same model. Set by the <b>Priority</b> field on the <b>General</b> pane of the Block Properties dialog box.	string { ' ' }
ReferenceBlock	Name of the library block to which this block links.	string { ' ' }
RequirementInfo	For internal use.	
RTWData	User specified data, used by Simulink Coder software.	
SampleTime	Value of the sample time parameter.	string
Selected	Status of whether or not block is selected.	{ 'on' }   'off'
ShowName	Display block name.	{ 'on' }   'off'
StartFcn	Function called at the start of a simulation.	MATLAB expression

**Common Block Properties (Continued)**

<b>Property</b>	<b>Description</b>	<b>Values</b>
StatePerturbation-ForJacobian	State perturbation size to use during linearization. See “Perturbation Level of Blocks Perturbed During Linearization” in the Simulink Control Design documentation for details.	string
StaticLinkStatus	Link status of block. Does not update out-of-date reference blocks when queried using <code>get_param</code> .	{'none'}   'resolved'   'unresolved'   'implicit'   'inactive'   'restore'   'propagate'
StopFcn	Function called at the termination of a simulation.	MATLAB expression
Tag	Text that appears in the block label that Simulink software generates. Set by the <b>Tag</b> field on the <b>General</b> pane of the Block Properties dialog box.	string { ' ' }
Type	Simulink object type (read only).	'block'
UndoDeleteFcn	Function called when block deletion is undone.	MATLAB expression
UserData	User-specified data that can have any MATLAB data type.	{ '[]' }
UserDataPersistent	Status of whether or not <code>UserData</code> will be saved in the model file.	'on'   {'off'}

**Examples of Setting Block Properties**

These examples illustrate how to change common block properties.

This command changes the orientation of the Gain block in the `mymodel` system so it faces the opposite direction (right to left).

```
set_param('mymodel/Gain','Orientation','left')
```

This command associates an `OpenFcn` callback with the Gain block in the `mymodel` system.

```
set_param('mymodel/Gain','OpenFcn','my_open_cb')
```

This command sets the `Position` property of the Gain block in the `mymodel` system. The block is 75 pixels wide by 25 pixels high. The position vector is *not* enclosed in quotation marks.

```
set_param('mymodel/Gain','Position',[50 250 125 275])
```

## Block-Specific Parameters

You can query and/or modify the properties (parameters) of a Simulink diagram from the command line. Parameters that describe a model are known as model parameters, while parameters that describe a Simulink block are known as block parameters. Block parameters that are common to Simulink blocks are described as common block parameters. There are also block-specific parameters that are specific to particular blocks. Finally, there are mask parameters, which are parameters that describe a masked block.

The model and block properties also include callbacks, which are commands that execute when a certain model or block event occurs. These events include opening a model, simulating a model, copying a block, opening a block, etc.

These tables list block-specific parameters for all Simulink blocks. The type of the block appears in parentheses after the block name. Some Simulink blocks work as masked subsystems. The tables indicate masked blocks by adding the designation "masked subsystem" after the block type.

The type listed for nonmasked blocks is the value of the `BlockType` parameter (see "Common Block Properties" on page 7-100). The type listed for masked blocks is the value of the `MaskType` parameter (see "Mask Parameters" on page 7-265).

The **Dialog Box Prompt** column indicates the text of the prompt for the parameter on the block dialog box. The **Values** column shows the type of value required (scalar, vector, variable), the possible values (separated with a vertical line), and the default value (enclosed in braces).

---

**Tip** For block parameters that accept array values, the number of elements in the array cannot exceed what `int_T` can represent. This limitation applies to both simulation and Simulink Coder code generation.

The maximum number of characters that a parameter edit field can contain is 49,000.

---

- Continuous Library Block Parameters

- Discontinuities Library Block Parameters
- Discrete Library Block Parameters
- Logic and Bit Operations Library Block Parameters
- Lookup Tables Block Parameters
- Math Operations Library Block Parameters
- Model Verification Library Block Parameters
- Model-Wide Utilities Library Block Parameters
- Ports & Subsystems Library Block Parameters
- Signal Attributes Library Block Parameters
- Signal Routing Library Block Parameters
- Sinks Library Block Parameters
- Sources Library Block Parameters
- User-Defined Functions Library Block Parameters
- Additional Discrete Block Library Parameters
- Additional Math: Increment - Decrement Block Parameters

## Continuous Library Block Parameters

Block (Type)/Parameter	Dialog Box Prompt	Values
Derivative (Derivative)		
CoefficientInTFapproximation	Coefficient $c$ in the transfer function approximation $s/(c*s+1)$ used for linearization	string — {'inf'}
Integrator (Integrator)		
ExternalReset	External reset	string — {'none'}   'rising'   'falling'   'either'   'level'   'level hold'

**Continuous Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
InitialConditionSource	Initial condition source	string — {'internal'}   'external'
InitialCondition	Initial condition	scalar or vector — {'0'}
LimitOutput	Limit output	string — {'off'}   'on'
UpperSaturationLimit	Upper saturation limit	scalar or vector — {'inf'}
LowerSaturationLimit	Lower saturation limit	scalar or vector — {'-inf'}
ShowSaturationPort	Show saturation port	string — {'off'}   'on'
ShowStatePort	Show state port	string — {'off'}   'on'
AbsoluteTolerance	Absolute tolerance	string, scalar, or vector — {'auto'}   {' 1'}   any real scalar or vector
IgnoreLimit	Ignore limit and reset when linearizing	string — {'off'}   'on'
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
ContinuousStateAttributes	State Name	string — {' '}   user-defined
<b>Second-Order Integrator (SecondOrderIntegrator)</b>		
ICSourceX	Initial condition source x	string — {'internal'}   'external'
ICX	Initial condition x	scalar or vector — {'0'}
LimitX	Limit x	string — {'off'}   'on'
UpperLimitX	Upper limit x	scalar or vector — {'inf'}
LowerLimitX	Lower limit x	scalar or vector — {'-inf'}
AbsoluteToleranceX	Absolute tolerance x	string, scalar, or vector — {'auto'}   {' 1'}   any real scalar or vector
StateNameX	State name x	string — {}   user-defined

**Continuous Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ICSourceDXDT	Initial condition source dx/dt	string — {'internal'}   'external'
ICDXDT	Initial condition dx/dt	scalar or vector — {'0'}
LimitDXDT	Limit dx/dt	string — {'off'}   'on'
UpperLimitDXDT	Upper limit dx/dt	scalar or vector — {'inf'}
LowerLimitDXDT	Lower limit dx/dt	scalar or vector — {'-inf'}
AbsoluteToleranceDXDT	Absolute tolerance dx/dt	string, scalar, or vector — {'auto'}   {'1'}   any real scalar or vector
StateNameDXDT	State name dx/dt	string — {}   user-defined
ExternalReset	External reset	string — {'none'}   'rising'   'falling'   'either'
ZeroCross	Enable zero-crossing detection	string — {'on'}   'off'
ReinitDXDTwhenXreachesSaturation	Reinitialize dx/dt when x reaches saturation	string — {'off'}   'on'
IgnoreStateLimitsAndResetForLinearization	Ignore state limits and the reset for linearization	string — {'off'}   'on'
ShowOutput	Show output	string — {'both'}   'x'   'dxdt'
<b>State-Space (StateSpace)</b>		
A	A	matrix — {'1'}
B	B	matrix — {'1'}
C	C	matrix — {'1'}
D	D	matrix — {'1'}
X0	Initial conditions	vector — {'0'}

**Continuous Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
AbsoluteTolerance	Absolute tolerance	string, scalar, or vector — {'auto'}   {' 1'}   any real scalar or vector
ContinuousStateAttributes	State Name	string — {' '}   user-defined
<b>Transfer Fcn (TransferFcn)</b>		
Numerator	Numerator coefficients	vector or matrix — {' [1] '}
Denominator	Denominator coefficients	vector — {' [1 1] '}
AbsoluteTolerance	Absolute tolerance	string, scalar, or vector — {'auto'}   {' 1'}   any real scalar or vector
ContinuousStateAttributes	State Name	string — {' '}   user-defined
<b>Transport Delay (TransportDelay)</b>		
DelayTime	Time delay	scalar or vector — {' 1'}
InitialOutput	Initial output	scalar or vector — {' 0'}
BufferSize	Initial buffer size	scalar — {' 1024'}
FixedBuffer	Use fixed buffer size	string — {'off'}   'on'
TransDelayFeedthrough	Direct feedthrough of input during linearization	string — {'off'}   'on'
PadeOrder	Pade order (for linearization)	string — {' 0'}
<b>Variable Time Delay (VariableTimeDelay)</b>		
VariableDelayType	Select delay type	string — 'Variable transport delay'   {'Variable time delay'}
MaximumDelay	Maximum delay	scalar or vector — {' 10'}
InitialOutput	Initial output	scalar or vector — {' 0'}
MaximumPoints	Initial buffer size	scalar — {' 1024'}
FixedBuffer	Use fixed buffer size	string — {'off'}   'on'

**Continuous Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ZeroDelay	Handle zero delay	string — {'off'}   'on'
TransDelayFeedthrough	Direct feedthrough of input during linearization	string — {'off'}   'on'
PadeOrder	Pade order (for linearization)	string — {'0'}
ContinuousStateAttributes	State Name	string — {''}   user-defined
<b>Variable Transport Delay (VariableTransportDelay)</b>		
VariableDelayType	Select delay type	string — {'Variable transport delay'}   'Variable time delay'
MaximumDelay	Maximum delay	scalar or vector — {'10'}
InitialOutput	Initial output	scalar or vector — {'0'}
MaximumPoints	Initial buffer size	scalar — {'1024'}
FixedBuffer	Use fixed buffer size	string — {'off'}   'on'
TransDelayFeedthrough	Direct feedthrough of input during linearization	string — {'off'}   'on'
PadeOrder	Pade order (for linearization)	string — {'0'}
AbsoluteTolerance	Absolute tolerance	string, scalar, or vector — {'auto'}   {'1'}   any positive real scalar or vector
ContinuousStateAttributes	State Name	string — {''}   user-defined
<b>Zero-Pole (ZeroPole)</b>		
Zeros	Zeros	vector — {'[1]'}
Poles	Poles	vector — {'[0 -1]'}
Gain	Gain	vector — {'[1]'}

**Continuous Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
AbsoluteTolerance	Absolute tolerance	string, scalar, or vector — {'auto'}   {'1'}   any positive real scalar or vector
ContinuousStateAttributes	State Name	string — {''}   user-defined

**Discontinuities Library Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Backlash (Backlash)		
BacklashWidth	Deadband width	scalar or vector — {'1'}
InitialOutput	Initial output	scalar or vector — {'0'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Coulomb & Viscous Friction (Coulombic and Viscous Friction) (masked subsystem)		
offset	Coulomb friction value (Offset)	string — {'[1 3 2 0]'}
gain	Coefficient of viscous friction (Gain)	string — {'1'}
Dead Zone (DeadZone)		
LowerValue	Start of dead zone	scalar or vector — {'-0.5'}
UpperValue	End of dead zone	scalar or vector — {'0.5'}
SaturateOnIntegerOverflow	Saturate on integer overflow	string — 'off'   {'on'}
LinearizeAsGain	Treat as gain when linearizing	string — 'off'   {'on'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Dead Zone Dynamic (Dead Zone Dynamic) (masked subsystem)		
Hit Crossing (HitCross)		

**Discontinuities Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
HitCrossingOffset	Hit crossing offset	scalar or vector — {'0'}
HitCrossingDirection	Hit crossing direction	string — 'rising'   'falling'   {'either'}
ShowOutputPort	Show output port	string — 'off'   {'on'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
<b>Quantizer (Quantizer)</b>		
QuantizationInterval	Quantization interval	scalar or vector — {'0.5'}
LinearizeAsGain	Treat as gain when linearizing	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
<b>Rate Limiter (RateLimiter)</b>		
RisingSlewLimit	Rising slew rate	string — {'1'}
FallingSlewLimit	Falling slew rate	string — {'-1'}
SampleTimeMode	Sample time mode	string — 'continuous'   {'inherited'}
InitialCondition	Initial condition	string — {'0'}
LinearizeAsGain	Treat as gain when linearizing	string — 'off'   {'on'}
<b>Rate Limiter Dynamic (Rate Limiter Dynamic) (masked subsystem)</b>		
<b>Relay (Relay)</b>		
OnSwitchValue	Switch on point	string — {'eps'}
OffSwitchValue	Switch off point	string — {'eps'}
OnOutputValue	Output when on	string — {'1'}
OffOutputValue	Output when off	string — {'0'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}

**Discontinuities Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — 'Inherit: Inherit via back propagation'   {'Inherit: All ports same datatype'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
<b>Saturation (Saturate)</b>		
UpperLimit	Upper limit	scalar or vector — {'0.5'}
LowerLimit	Lower limit	scalar or vector — {'-0.5'}
LinearizeAsGain	Treat as gain when linearizing	string — 'off'   {'on'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}

**Discontinuities Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — 'Inherit: Inherit via back propagation'   {'Inherit: Same as input'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
Saturation Dynamic (Saturation Dynamic) (masked subsystem)		
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Same as second input'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutputDataTypeScalingMode	Deprecated in R2007b	
OutDataType	Deprecated in R2007b	
OutScaling	Deprecated in R2007b	

**Discontinuities Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
DoSatur	Saturate on integer overflow	string — {'off'}   'on'
Wrap To Zero (Wrap To Zero) (masked subsystem)		
Threshold	Threshold	string — {'255'}

**Discrete Library Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Delay (Delay)		
DelayLengthSource	Delay length > Source	string — {'Dialog'}   'Input port'
DelayLength	Delay length > Value	string — {'2'}
DelayLengthUpperLimit	Delay length > Upper limit	string — {'100'}
InitialConditionSource	Initial condition > Source	string — {'Dialog'}   'Input port'
InitialCondition	Initial condition > Value	string — {'0.0'}
ExternalReset	External reset	string — {'None'}   'Rising'   'Falling'   'Either'   'Level'   'Level hold'

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
InputProcessing	Input processing	string — 'Columns as channels (frame based)'   {'Elements as channels (sample based)'}   'Inherited'
UseCircularBuffer	Use circular buffer for state	string — {'off'}   'on'
PreventDirectFeedthrough	Prevent direct feedthrough by increasing delay length to lower limit	string — {'off'}   'on'
RemoveProtectionDelayLength	Remove protection against out-of-range delay length in generated code	string — {'off'}   'on'
DiagnosticForOutOfRangeDelayLength	Diagnostic for out-of-range delay length	string — {'None'}   'Warning'   'Error'
SampleTime	Sample time (–1 for inherited)	string — {'-1'}
StateName	State name	string — {''}
StateMustResolveToSignalObject	State name must resolve to Simulink signal object	string — {'off'}   'on'
StateStorageClass	Code generation storage class	string — {'Auto'}   'ExportedGlobal'   'ImportedExtern'   'ImportedExternPointer'
CodeGenStateStorageTypeQualifier	Code generation storage type qualifier	string — {''}
<b>Difference (Difference) (masked subsystem)</b>		
ICPrevInput	Initial condition for previous input	string — {'0.0'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutputDataTypeScalingMode	Deprecated in R2007b	
OutDataType	Deprecated in R2007b	
OutScaling	Deprecated in R2007b	
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
DoSatur	Saturate to max or min when overflows occur	string — {'off'}   'on'
<b>Discrete Derivative (Discrete Derivative) (masked subsystem)</b>		
gainval	Gain value	string — {'1.0'}
ICPrevScaledInput	Initial condition for previous weighted input $K*u/T_s$	string — {'0.0'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutputDataTypeScalingMode	Deprecated in R2007b	
OutDataType	Deprecated in R2007b	
OutScaling	Deprecated in R2007b	
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
DoSatur	Saturate to max or min when overflows occur	string — {'off'}   'on'
<b>Discrete FIR Filter (Discrete FIR Filter)</b>		
CoefSource	Coefficient source	string — {'Dialog parameters'}   'Input port'

## Discrete Library Block Parameters (Continued)

Block (Type)/Parameter	Dialog Box Prompt	Values
FilterStructure	Filter structure	string — {'Direct form'}   'Direct form symmetric'   'Direct form antisymmetric'   'Direct form transposed'   'Lattice MA'  <b>Note</b> You must have a DSP System Toolbox license to use a filter structure other than Direct form.
Coefficients	Coefficients	vector — {'[0.5 0.5]'}  
InputProcessing	Input processing	string — 'Columns as channels (frame based)'   {'Elements as channels (sample based)'}  
InitialStates	Initial states	scalar or vector — {'0'}  
SampleTime	Sample time (-1 for inherited)	string — {'-1'}  
CoefMin	Coefficients minimum	string — {'[]'}  
CoefMax	Coefficients maximum	string — {'[]'}  
OutMin	Output minimum	string — {'[]'}  
OutMax	Output maximum	string — {'[]'}  
TapSumDataTypeStr	Tap sum data type	string — {'Inherit: Same as input'}   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'  

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
CoefDataTypeStr	Coefficients data type	string — {'Inherit: Same word length as input'}   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'
ProductDataTypeStr	Product output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'
AccumDataTypeStr	Accumulator data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'Inherit: Same as product output'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'
StateDataTypeStr	State data type	string — 'Inherit: Same as input'   {'Inherit: Same as accumulator'}   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — 'Inherit: Same as input'   {'Inherit: Same as accumulator'}   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnIntegerOverflow	Saturate on integer overflow	string — {'off'}   'on'
<b>Discrete Filter (DiscreteFilter)</b>		
Numerator	Numerator coefficients	vector — {'[1]'}
Denominator	Denominator coefficients	vector — {'[1 0.5]'}
IC	Initial states	string — {'0'}
SampleTime	Sample time (-1 for inherited)	string — {'1'}
a0EqualsOne	Optimize by skipping divide by leading denominator coefficient (a0)	string — {'off'}   'on'
NumCoefMin	Numerator coefficient minimum	string — {'[]'}
NumCoefMax	Numerator coefficient maximum	string — {'[]'}
DenCoefMin	Denominator coefficient minimum	string — {'[]'}

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
DenCoefMax	Denominator coefficient maximum	string — {'[]'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
StateDataTypeStr	State data type	string — {'Inherit: Same as input'}   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
NumCoefDataTypeStr	Numerator coefficient data type	string — {'Inherit: Inherit via internal rule'}   'int8'   'int16'   'int32'   'fixdt(1,16)'   'fixdt(1,16,0)'
DenCoefDataTypeStr	Denominator coefficient data type	string — {'Inherit: Inherit via internal rule'}   'int8'   'int16'   'int32'   'fixdt(1,16)'   'fixdt(1,16,0)'
NumProductDataTypeStr	Numerator product output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
DenProductDataTypeStr	Denominator product output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'int8'   'int16'   'int32'   'fixdt(1,16,0)'

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
NumAccumDataTypeStr	Numerator accumulator data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'Inherit: Same as product output'   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
DenAccumDataTypeStr	Denominator accumulator data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'Inherit: Same as product output'   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnIntegerOverflow	Saturate on integer overflow	string — {'off'}   'on'
StateIdentifier	State name	string — {''}
StateMustResolveToSignalObject	State name must resolve to Simulink signal object	string — {'off'}   'on'

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
StateStorageClass	Code generation storage class	string — {'Auto'}   'ExportedGlobal'   'ImportedExtern'   'ImportedExternPointer'
RTWStateStorageTypeQualifier	Code generation storage type qualifier	string — {''}
<b>Discrete State-Space (DiscreteStateSpace)</b>		
A	A	matrix — {'1'}
B	B	matrix — {'1'}
C	C	matrix — {'1'}
D	D	matrix — {'1'}
X0	Initial conditions	vector — {'0'}
SampleTime	Sample time (-1 for inherited)	string — {'1'}
StateIdentifier	State name	string — {''}
StateMustResolveToSignalObject	Object name must resolve to Simulink signal object	string — {'off'}   'on'
StateStorageClass	Code generation storage class	string — {'Auto'}   'ExportedGlobal'   'ImportedExtern'   'ImportedExternPointer'
RTWStateStorageTypeQualifier	Code generation storage type qualifier	string — {''}
<b>Discrete Transfer Fcn (DiscreteTransferFcn)</b>		
Numerator	Numerator coefficients	vector — {'[1]'} '[1 0.5]'
Denominator	Denominator coefficients	vector — {'[1 0.5]'} '[1 0.5]'
InitialStates	Initial states	string — {'0'}
SampleTime	Sample time (-1 for inherited)	string — {'1'}

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
a0EqualsOne	Optimize by skipping divide by leading denominator coefficient (a0)	string — {'off'}   'on'
NumCoefMin	Numerator coefficient minimum	string — {'[]'}
NumCoefMax	Numerator coefficient maximum	string — {'[]'}
DenCoefMin	Denominator coefficient minimum	string — {'[]'}
DenCoefMax	Denominator coefficient maximum	string — {'[]'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
StateDataTypeStr	State data type	string — {'Inherit: Same as input'}   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
NumCoefDataTypeStr	Numerator coefficient data type	string — {'Inherit: Inherit via internal rule'}   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
DenCoefDataTypeStr	Denominator coefficient data type	string — {'Inherit: Inherit via internal rule'}   'int8'   'int16'   'int32'   'fixdt(1,16,0)'

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
NumProductDataTypeStr	Numerator product output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
DenProductDataTypeStr	Denominator product output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
NumAccumDataTypeStr	Numerator accumulator data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'Inherit: Same as product output'   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
DenAccumDataTypeStr	Denominator accumulator data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'Inherit: Same as product output'   'int8'   'int16'   'int32'   'fixdt(1,16,0)'
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'int8'   'int16'   'int32'   'fixdt(1,16,0)'

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnIntegerOverflow	Saturate on integer overflow	string — {'off'}   'on'
StateIdentifier	State name	string — {''}
StateMustResolveToSignalObject	State name must resolve to Simulink signal object	string — {'off'}   'on'
StateStorageClass	Code generation storage class	string — {'Auto'}   'ExportedGlobal'   'ImportedExtern'   'ImportedExternPointer'
RTWStateStorageTypeQualifier	Code generation storage type qualifier	string — {''}
<b>Discrete Zero-Pole (DiscreteZeroPole)</b>		
Zeros	Zeros	vector — {'[1]'}
Poles	Poles	vector — {'[0 0.5]'} '[0 0.5]'
Gain	Gain	string — {'1'}
SampleTime	Sample time (-1 for inherited)	string — {'1'}
StateIdentifier	State name	string — {''}
StateMustResolveToSignalObject	State name must resolve to Simulink signal object	string — {'off'}   'on'
StateStorageClass	Code generation storage class	string — {'Auto'}   'ExportedGlobal'   'ImportedExtern'   'ImportedExternPointer'

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RTWStateStorageType Qualifier	Code generation storage type qualifier	string — {''}
Discrete-Time Integrator (DiscreteIntegrator)		
IntegratorMethod	Integrator method	string — {'Integration: Forward Euler'}   'Integration: Backward Euler'   'Integration: Trapezoidal'   'Accumulation: Forward Euler'   'Accumulation: Backward Euler'   'Accumulation: Trapezoidal'
gainval	Gain value	string — {'1.0'}
ExternalReset	External reset	string — {'none'}   'rising'   'falling'   'either'   'level'   'sampled level'
InitialConditionSource	Initial condition source	string — {'internal'}   'external'
InitialCondition	Initial condition	scalar or vector — {'0'}
InitialConditionSetting	Use initial condition as initial and reset value for	string — 'State (most efficient)'   {'Output'}   'Compatibility'
SampleTime	Sample time (-1 for inherited)	string — {'1'}
LimitOutput	Limit output	string — {'off'}   'on'
UpperSaturationLimit	Upper saturation limit	scalar or vector — {'inf'}
LowerSaturationLimit	Lower saturation limit	scalar or vector — {'-inf'}
ShowSaturationPort	Show saturation port	string — {'off'}   'on'

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ShowStatePort	Show state port	string — {'off'}   'on'
IgnoreLimit	Ignore limit and reset when linearizing	string — {'off'}   'on'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
StateIdentifier	State name	string — {''}
StateMustResolveTo SignalObject	State name must resolve to Simulink signal object	string — {'off'}   'on'

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
StateStorageClass	Code generation storage class	string — {'Auto'}   'ExportedGlobal'   'ImportedExtern'   'ImportedExternPointer'
RTWStateStorageType Qualifier	Code generation storage type qualifier	string — {''}
First-Order Hold (First-Order Hold) (masked subsystem)		
Ts	Sample time	string — {'1'}
Memory (Memory)		
X0	Initial condition	scalar or vector — {'0'}
InheritSampleTime	Inherit sample time	string — {'off'}   'on'
LinearizeMemory	Direct feedthrough of input during linearization	string — {'off'}   'on'
LinearizeAsDelay	Treat as a unit delay when linearizing with discrete sample time	string — {'off'}   'on'
StateIdentifier	State name	string — {''}
StateMustResolveTo SignalObject	State name must resolve to Simulink signal object	string — {'off'}   'on'
StateStorageClass	Code generation storage class	string — {'Auto'}   'ExportedGlobal'   'ImportedExtern'   'ImportedExternPointer'
RTWStateStorageType Qualifier	Code generation storage type qualifier	string — {''}
Tapped Delay (S-Function) (Tapped Delay Line) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
samptime	Sample time	string — {'-1'}
NumDelays	Number of delays	string — {'4'}

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
DelayOrder	Order output vector starting with	string — {'Oldest'}   'Newest'
includeCurrent	Include current input in output vector	string — {'off'}   'on'
Transfer Fcn First Order (First Order Transfer Fcn) (masked subsystem)		
PoleZ	Pole (in Z plane)	string — {'0.95'}
ICPrevOutput	Initial condition for previous output	string — {'0.0'}
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
DoSatur	Saturate to max or min when overflows occur	string — {'off'}   'on'
Transfer Fcn Lead or Lag (Lead or Lag Compensator) (masked subsystem)		
PoleZ	Pole of compensator (in Z plane)	string — {'0.95'}
ZeroZ	Zero of compensator (in Z plane)	string — {'0.75'}
ICPrevOutput	Initial condition for previous output	string — {'0.0'}
ICPrevInput	Initial condition for previous input	string — {'0.0'}
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
DoSatur	Saturate to max or min when overflows occur	string — {'off'}   'on'

**Discrete Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Transfer Fcn Real Zero (Transfer Fcn Real Zero) (masked subsystem)		
ZeroZ	Zero (in Z plane)	string — {'0.75'}
ICPrevInput	Initial condition for previous input	string — {'0.0'}
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
DoSatur	Saturate to max or min when overflows occur	string — {'off'}   'on'
Unit Delay (UnitDelay)		
InitialCondition	Initial condition	scalar or vector — {'0'}
InputProcessing	Input processing	string — 'Columns as channels (frame based)'   {'Elements as channels (sample based)'}   'Inherited'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
StateName	State name	string — {''}
StateMustResolveToSignalObject	State name must resolve to Simulink signal object	string — {'off'}   'on'
StateStorageClass	Code generation storage class	string — {'Auto'}   'ExportedGlobal'   'ImportedExtern'   'ImportedExternPointer'
CodeGenStateStorageTypeQualifier	Code generation storage type qualifier	string — {''}
Zero-Order Hold (ZeroOrderHold)		
SampleTime	Sample time (-1 for inherited)	string — {'1'}

**Logic and Bit Operations Library Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Bit Clear (Bit Clear) (masked subsystem)		
iBit	Index of bit (0 is least significant)	string — {'0'}
Bit Set (Bit Set) (masked subsystem)		
iBit	Index of bit (0 is least significant)	string — {'0'}
Bitwise Operator (S-Function) (Bitwise Operator) (masked subsystem)		
logicop	Operator	string — {'AND'   'OR'   'NAND'   'NOR'   'XOR'   'NOT'}
UseBitMask	Use bit mask ...	string — 'off'   {'on'}
NumInputPorts	Number of input ports	string — {'1'}
BitMask	Bit Mask	string — {'bin2dec('11011001')'}
BitMaskRealWorld	Treat mask as	string — 'Real World Value'   {'Stored Integer'}
Combinatorial Logic (CombinatorialLogic)		
TruthTable	Truth table	string — {'[0 0;0 1;0 1;1 0;0 1;1 0;1 0;1 1]'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Compare To Constant (Compare To Constant) (masked subsystem)		
relop	Operator	string — '=='   '~='   '<'   {'<='}   '>='   '>'
const	Constant value	string — {'3.0'}
OutDataTypeStr	Output data type	string — {'boolean'   'uint8'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
Compare To Zero (Compare To Zero) (masked subsystem)		

**Logic and Bit Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
relop	Operator	string — '='   '~='   '<'   {'<='}   '>='   '>'
OutDataTypeStr	Output data type	string — {'boolean'}   'uint8'
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
Detect Change (Detect Change) (masked subsystem)		
vinit	Initial condition	string — {'0'}
OutDataTypeStr	Output data type	string — {'boolean'}   'uint8'
Detect Decrease (Detect Decrease) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
OutDataTypeStr	Output data type	string — {'boolean'}   'uint8'
Detect Fall Negative (Detect Fall Negative) (masked subsystem)		
vinit	Initial condition	string — {'0'}
OutDataTypeStr	Output data type	string — {'boolean'}   'uint8'
Detect Fall Nonpositive (Detect Fall Nonpositive) (masked subsystem)		
vinit	Initial condition	string — {'0'}
OutDataTypeStr	Output data type	string — {'boolean'}   'uint8'
Detect Increase (Detect Increase) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
OutDataTypeStr	Output data type	string — {'boolean'}   'uint8'
Detect Rise Nonnegative (Detect Rise Nonnegative) (masked subsystem)		
vinit	Initial condition	string — {'0'}

**Logic and Bit Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — {'boolean'}   'uint8'
Detect Rise Positive (Detect Rise Positive) (masked subsystem)		
vinit	Initial condition	string — {'0'}
OutDataTypeStr	Output data type	string — {'boolean'}   'uint8'
Extract Bits (Extract Bits) (masked subsystem)		
bitsToExtract	Bits to extract	string — {'Upper half'}   'Lower half'   'Range starting with most significant bit'   'Range ending with least significant bit'   'Range of bits'
numBits	Number of bits	string — {'8'}
bitIdxRange	Bit indices ([start end], 0-based relative to LSB)	string — {'[0 7]'}
outScalingMode	Output scaling mode	string — {'Preserve fixed-point scaling'}   'Treat bit field as an integer'
Interval Test (Interval Test) (masked subsystem)		
IntervalClosedRight	Interval closed on right	string — 'off'   {'on'}
uplimit	Upper limit	string — {'0.5'}
IntervalClosedLeft	Interval closed on left	string — 'off'   {'on'}
lowlimit	Lower limit	string — {'-0.5'}
OutDataTypeStr	Output data type	string — {'boolean'}   'uint8'
Interval Test Dynamic (Interval Test Dynamic) (masked subsystem)		

**Logic and Bit Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
IntervalClosedRight	Interval closed on right	string — 'off'   {'on'}
IntervalClosedLeft	Interval closed on left	string — 'off'   {'on'}
OutDataTypeStr	Output data type	string — {'boolean'}   'uint8'
<b>Logical Operator (Logic)</b>		
Operator	Operator	string — {'AND'}   'OR'   'NAND'   'NOR'   'XOR'   'NXOR'   'NOT'
Inputs	Number of input ports	string — {'2'}
IconShape	Icon shape	string — {'rectangular'}   'distinctive'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
AllPortsSameDT	Require all inputs and output to have the same data type	string — {'off'}   'on'
OutDataTypeStr	Output data type	string — 'Inherit: Logical (see Configuration Parameters: Optimization)'   {'boolean'}   'fixdt(1,16)'
<b>Relational Operator (RelationalOperator)</b>		
Operator	Relational operator	string — '=='   '~='   '<'   {'<='}   '>='   '>'   'isInf'   'isNaN'   'isFinite'
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InputSameDT	Require all inputs to have the same data type	string — {'off'}   'on'

**Logic and Bit Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — 'Inherit: Logical (see Configuration Parameters: Optimization)'   {'boolean'}   'fixdt(1,16)'
Shift Arithmetic (ArithShift)		
BitShiftNumberSource	Bits to shift > Source	string — {'Dialog'}   'Input port'
BitShiftDirection	Bits to shift > Direction	string — 'Left'   'Right'   {'Bidirectional'}
BitShiftNumber	Bits to shift > Number	string — {'8'}
BinPtShiftNumber	Binary points to shift > Number	string — {'0'}
DiagnosticForOORShift	Diagnostic for out-of-range shift value	string — {'None'}   'Warning'   'Error'
CheckOORBitShift	Check for out-of-range 'Bits to shift' in generated code	string — {'off'}   'on'
nBitShiftRight	Deprecated in R2011a	
nBinPtShiftRight	Deprecated in R2011a	

**Lookup Tables Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Cosine (Cosine) (masked subsystem)		
Formula	Output formula	string — 'sin(2*pi*u)'   {'cos(2*pi*u)'}   'exp(j*2*pi*u)'   'sin(2*pi*u) and cos(2*pi*u)'

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
NumDataPoints	Number of data points for lookup table	string — $\{(2^5)+1\}$
OutputWordLength	Output word length	string — $\{16\}$
InternalRulePriority	Internal rule priority for lookup table	string — $\{\text{'Speed'}\}$   $\{\text{'Precision'}\}$
Direct Lookup Table (n-D) (LookupNDDirect)		
NumberOfTableDimensions	Number of table dimensions	string — $\{1\}$   $\{2\}$   $\{3\}$   $\{4\}$
InputsSelectThisObjectFromTables	Inputs select this object from table	string — $\{\text{'Element'}\}$   $\{\text{'Column'}\}$   $\{\text{'2-D Matrix'}\}$
TableIsInput	Make table an input	string — $\{\text{'off'}\}$   $\{\text{'on'}\}$
Table	Table data	string — $\{[4\ 5\ 6;16\ 19\ 20;10\ 18\ 23]\}$
DiagnosticForOutOfRangeInput	Diagnostic for out-of-range input	string — $\{\text{'None'}\}$   $\{\text{'Warning'}\}$   $\{\text{'Error'}\}$
SampleTime	Sample time (-1 for inherited)	string — $\{-1\}$
TableMin	Table minimum	string — $\{[]\}$
TableMax	Table maximum	string — $\{[]\}$
TableDataTypeStr	Table data type	string — $\{\text{'Inherit: Inherit from 'Table data'}\}$   $\{\text{'double'}\}$   $\{\text{'single'}\}$   $\{\text{'int8'}\}$   $\{\text{'uint8'}\}$   $\{\text{'int16'}\}$   $\{\text{'uint16'}\}$   $\{\text{'int32'}\}$   $\{\text{'uint32'}\}$   $\{\text{'boolean'}\}$   $\{\text{'fixdt}(1,16)\}$   $\{\text{'fixdt}(1,16,0)\}$   $\{\text{'fixdt}(1,16,2^0,0)\}$
LockScale	Lock data type settings against changes by the fixed-point tools	string — $\{\text{'off'}\}$   $\{\text{'on'}\}$

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
maskTabDims	Deprecated in R2009b	
explicitNumDims	Deprecated in R2009b	
outDims	Deprecated in R2009b	
tabIsInput	Deprecated in R2009b	
mxTable	Deprecated in R2009b	
clipFlag	Deprecated in R2009b	
samptime	Deprecated in R2009b	
Interpolation Using Prelookup (Interpolation_n-D)		
NumberOfTableDimensions	Number of table dimensions	string — '1'   {'2'}   '3'   '4'
Table	Table data > Value	string — {'sqrt([1:11]' * [1:11])'}
TableSource	Table data > Source	string — {'Dialog'}   'Input port'
InterpMethod	Interpolation method	string — 'Flat'   {'Linear'}
ExtrapMethod	Extrapolation method	string — 'Clip'   {'Linear'}
ValidIndexMayReachLast	Valid index input may reach last index	string — {'off'}   'on'
DiagnosticForOutOfRangeInput	Diagnostic for out-of-range input	string — {'None'}   'Warning'   'Error'
RemoveProtectionIndex	Remove protection against out-of-range index in generated code	string — {'off'}   'on'
NumSelectionDims	Number of sub-table selection dimensions	string — {'0'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
TableDataTypeStr	Table data > Data Type	string — 'Inherit: Inherit from 'Table data'   {'Inherit: Same as output'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
TableMin	Table data > Minimum	string — {'[]'}
TableMax	Table data > Maximum	string — {'[]'}
IntermediateResultsDataTypeStr	Intermediate results > Data Type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as output'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutDataTypeStr	Output > Data Type	string — 'Inherit: Inherit via back propagation'   {'Inherit: Inherit from table data'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutMin	Output > Minimum	string — {'[]'}
OutMax	Output > Maximum	string — {'[]'}
InternalRulePriority	Internal rule priority	string — {'Speed'}   'Precision'

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnIntegerOverflow	Saturate on integer overflow	string — {'off'}   'on'
CheckIndexInCode	Deprecated in R2011a	
1-D Lookup Table (Lookup_n-D)		
NumberOfTableDimensions	Number of table dimensions	string — {'1'}   '2'   '3'   '4'
Table	Table data	string — {'tanh([-5:5])'}
BreakpointsForDimension1	Breakpoints 1	string — {'[-5:5]'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InterpMethod	Interpolation method	string — 'Flat'   {'Linear'}   'Cubic spline'
ExtrapMethod	Extrapolation method	string — 'Clip'   {'Linear'}   'Cubic spline'
UseLastTableValue	Use last table value for inputs at or above last breakpoint	string — {'off'}   'on'
IndexSearchMethod	Index search method	string — 'Evenly spaced points'   'Linear search'   {'Binary search'}
BeginIndexSearchUsingPreviousIndexResult	Begin index search using previous index result	string — {'off'}   'on'

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
UseOneInputPortForAll InputData	Use one input port for all input data	string — {'off'}   'on'
DiagnosticForOutOfRange Input	Diagnostic for out-of-range input	string — {'None'}   'Warning'   'Error'
RemoveProtectionInput	Remove protection against out-of-range input in generated code	string — {'off'}   'on'
TableDataTypeStr	Table data > Data Type	string — 'Inherit: Inherit from 'Table data''   {'Inherit: Same as output'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
TableMin	Table data > Minimum	string — {'[]'}
TableMax	Table data > Maximum	string — {'[]'}
BreakpointsForDimension1 DataTypeStr	Breakpoints 1 > Data Type	string — {'Inherit: Same as corresponding input'}   'Inherit: Inherit from 'Breakpoint data''   'double'   'single'
BreakpointsForDimension1 Min	Breakpoints 1 > Minimum	string — {'[]'}
BreakpointsForDimension1 Max	Breakpoints 1 > Maximum	string — {'[]'}
FractionDataTypeStr	Fraction > Data Type	string — {'Inherit: Inherit via internal rule'}   'double'   'single'   'fixdt(1,16,0)'

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
IntermediateResults DataTypeStr	Intermediate results > Data Type	string — 'Inherit: Inherit via internal rule'   {'Inherit: Same as output'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutDataTypeStr	Output > Data Type	string — 'Inherit: Inherit via back propagation'   'Inherit: Inherit from table data'   {'Inherit: Same as first input'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutMin	Output > Minimum	string — {'[]'}
OutMax	Output > Maximum	string — {'[]'}
InternalRulePriority	Internal rule priority	string — {'Speed'}   'Precision'
InputSameDT	Require all inputs to have the same data type	string — 'off'   {'on'}
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   'Floor'   'Nearest'   'Round'   {'Simplest'}   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
2-D Lookup Table (Lookup_n-D)		

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
NumberOfTableDimensions	Number of table dimensions	string — '1'   {'2'}   '3'   '4'
Table	Table data	string — {'[4 5 6;16 19 20;10 18 23]'} 
BreakpointsForDimension1	Breakpoints 1	string — {'[1:3]'} 
BreakpointsForDimension2	Breakpoints 2	string — {'[1:3]'} 
SampleTime	Sample time (-1 for inherited)	string — {'-1'} 
InterpMethod	Interpolation method	string — 'Flat'   {'Linear'}   'Cubic spline' 
ExtrapMethod	Extrapolation method	string — 'Clip'   {'Linear'}   'Cubic spline' 
UseLastTableValue	Use last table value for inputs at or above last breakpoint	string — {'off'}   'on' 
IndexSearchMethod	Index search method	string — 'Evenly spaced points'   'Linear search'   {'Binary search'} 
BeginIndexSearchUsingPreviousIndexResult	Begin index search using previous index result	string — {'off'}   'on' 
UseOneInputPortForAllInputData	Use one input port for all input data	string — {'off'}   'on' 
DiagnosticForOutOfRangeInput	Diagnostic for out-of-range input	string — {'None'}   'Warning'   'Error' 
RemoveProtectionInput	Remove protection against out-of-range input in generated code	string — {'off'}   'on' 

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
TableDataTypeStr	Table data > Data Type	string — 'Inherit: Inherit from 'Table data'   {'Inherit: Same as output'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
TableMin	Table data > Minimum	string — {'[]'}
TableMax	Table data > Maximum	string — {'[]'}
BreakpointsForDimension1 DataTypeStr	Breakpoints 1 > Data Type	string — {'Inherit: Same as corresponding input'}   'Inherit: Inherit from 'Breakpoint data'   'double'   'single'
BreakpointsForDimension1 Min	Breakpoints 1 > Minimum	string — {'[]'}
BreakpointsForDimension1 Max	Breakpoints 1 > Maximum	string — {'[]'}
BreakpointsForDimension2 DataTypeStr	Breakpoints 2 > Data Type	string — {'Inherit: Same as corresponding input'}   'Inherit: Inherit from 'Breakpoint data'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
BreakpointsForDimension2 Min	Breakpoints 2 > Minimum	string — {'[]'}

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
BreakpointsForDimension2 Max	Breakpoints 2 > Maximum	string — {'[]'}
FractionDataTypeStr	Fraction > Data Type	string — {'Inherit: Inherit via internal rule'}   'double'   'single'   'fixdt(1,16,0)'
IntermediateResults DataTypeStr	Intermediate results > Data Type	string — 'Inherit: Inherit via internal rule'   {'Inherit: Same as output'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutDataTypeStr	Output > Data Type	string — 'Inherit: Inherit via back propagation'   'Inherit: Inherit from table data'   {'Inherit: Same as first input'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutMin	Output > Minimum	string — {'[]'}
OutMax	Output > Maximum	string — {'[]'}
InternalRulePriority	Internal rule priority	string — {'Speed'}   'Precision'
InputSameDT	Require all inputs to have the same data type	string — 'off'   {'on'}
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   'Floor'   'Nearest'   'Round'   {'Simplest'}   'Zero'
SaturateOnIntegerOverflow	Saturate on integer overflow	string — {'off'}   'on'
n-D Lookup Table (Lookup_n-D)		
NumberOfTableDimensions	Number of table dimensions	string — '1'   '2'   {'3'}   '4'
Table	Table data	string — {'reshape(repmat([4 5 6;16 19 20;10 18 23],1,2),[3,3,2])'}
BreakpointsForDimension1	Breakpoints 1	string — {'[10,22,31]'}
BreakpointsForDimension2	Breakpoints 2	string — {'[10,22,31]'}
BreakpointsForDimension3	Breakpoints 3	string — {'[5, 7]'}
...	...	...
BreakpointsForDimension30	Breakpoints 30	string — {'[1:3]'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InterpMethod	Interpolation method	string — 'Flat'   {'Linear'}   'Cubic spline'
ExtrapMethod	Extrapolation method	string — 'Clip'   {'Linear'}   'Cubic spline'
UseLastTableValue	Use last table value for inputs at or above last breakpoint	string — {'off'}   'on'
DiagnosticForOutOfRangeInput	Diagnostic for out-of-range input	string — {'None'}   'Warning'   'Error'

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RemoveProtectionInput	Remove protection against out-of-range input in generated code	string — {'off'}   'on'
IndexSearchMethod	Index search method	string — 'Evenly spaced points'   'Linear search'   {'Binary search'}
BeginIndexSearchUsing PreviousIndexResult	Begin index search using previous index result	string — {'off'}   'on'
UseOneInputPortForAll InputData	Use one input port for all input data	string — {'off'}   'on'
SupportTunableTableSize	Support tunable table size in code generation	string — {'off'}   'on'
MaximumIndicesForEach Dimension	Maximum indices for each dimension	string — {'[]'}
TableDataTypeStr	Table data > Data Type	string — 'Inherit: Inherit from 'Table data''   {'Inherit: Same as output'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
TableMin	Table data > Minimum	string — {'[]'}
TableMax	Table data > Maximum	string — {'[]'}
BreakpointsForDimension1 DataTypeStr	Breakpoints 1 > Data Type	string — {'Inherit: Same as corresponding input'}   'Inherit: Inherit from 'Breakpoint data''   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
BreakpointsForDimension1 Min	Breakpoints 1 > Minimum	string — {'[]'}
BreakpointsForDimension1 Max	Breakpoints 1 > Maximum	string — {'[]'}
BreakpointsForDimension2 DataTypeStr	Breakpoints 2 > Data Type	string — {'Inherit: Same as corresponding input'   'Inherit: Inherit from 'Breakpoint data'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'}
BreakpointsForDimension2 Min	Breakpoints 2 > Minimum	string — {'[]'}
BreakpointsForDimension2 Max	Breakpoints 2 > Maximum	string — {'[]'}
...	...	...
BreakpointsForDimension30 DataTypeStr	Breakpoints 30 > Data Type	string — {'Inherit: Same as corresponding input'   'Inherit: Inherit from 'Breakpoint data'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'}
BreakpointsForDimension30 Min	Breakpoints 30 > Minimum	string — {'[]'}

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
BreakpointsForDimension30 Max	Breakpoints 30 > Maximum	string — {'[]'}
FractionDataTypeStr	Fraction > Data Type	string — {'Inherit: Inherit via internal rule'}   'double'   'single'   'fixdt(1,16,0)'
IntermediateResults DataTypeStr	Intermediate results > Data Type	string — 'Inherit: Inherit via internal rule'   {'Inherit: Same as output'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutDataTypeStr	Output > Data Type	string — 'Inherit: Inherit via back propagation'   'Inherit: Inherit from table data'   {'Inherit: Same as first input'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutMin	Output > Minimum	string — {'[]'}
OutMax	Output > Maximum	string — {'[]'}
InternalRulePriority	Internal rule priority	string — {'Speed'}   'Precision'
InputSameDT	Require all inputs to have the same data type	string — 'off'   {'on'}
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   'Floor'   'Nearest'   'Round'   {'Simplest'}   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
ProcessOutOfRangeInput	Deprecated in R2009b	
Lookup Table Dynamic (Lookup Table Dynamic) (masked subsystem)		
LookUpMeth	Lookup Method	string — 'Interpolation-Extrapolation'   {'Interpolation-Use End Values'}   'Use Input Nearest'   'Use Input Below'   'Use Input Above'
OutDataTypeStr	Output data type	string — {'fixdt('double')}   'Inherit: Inherit via back propagation'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutputDataTypeScaling Mode	Deprecated in R2007b	
OutDataType	Deprecated in R2007b	
OutScaling	Deprecated in R2007b	
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'

**Lookup Tables Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
DoSatur	Saturate to max or min when overflows occur	string — {'off'}   'on'
Prelookup (PreLookup)		
BreakpointsData	Breakpoint data > Value	string — {'[10:10:110]'}
BreakpointsDataSource	Breakpoint data > Source	string — {'Dialog'}   'Input port'
IndexSearchMethod	Index search method	string — 'Evenly spaced points'   'Linear search'   {'Binary search'}
BeginIndexSearchUsingPreviousIndexResult	Begin index search using previous index result	string — {'off'}   'on'
OutputOnlyTheIndex	Output only the index	string — {'off'}   'on'
ExtrapMethod	Extrapolation method	string — 'Clip'   {'Linear'}
UseLastBreakpoint	Use last breakpoint for input at or above upper limit	string — {'off'}   'on'
DiagnosticForOutOfRangeInput	Diagnostic for out-of-range input	string — {'None'}   'Warning'   'Error'
RemoveProtectionInput	Remove protection against out-of-range input in generated code	string — {'off'}   'on'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}

## Lookup Tables Block Parameters (Continued)

Block (Type)/Parameter	Dialog Box Prompt	Values
BreakpointDataTypeStr	Breakpoint > Data Type	string — {'Inherit: Same as input'}   'Inherit: Inherit from 'Breakpoint data''   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
BreakpointMin	Breakpoint > Minimum	string — {'[]'}
BreakpointMax	Breakpoint > Maximum	string — {'[]'}
IndexDataTypeStr	Index > Data Type	string — 'int8'   'uint8'   'int16'   'uint16'   'int32'   {'uint32'}   'fixdt(1,16)'
FractionDataTypeStr	Fraction > Data Type	string — {'Inherit: Inherit via internal rule'}   'double'   'single'   'fixdt(1,16,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
ProcessOutOfRangeInput	Deprecated in R2011a	
Sine (Sine) (masked subsystem)		
Formula	Output formula	string — {'sin(2*pi*u)'}   'cos(2*pi*u)'   'exp(j*2*pi*u)'   'sin(2*pi*u) and cos(2*pi*u)'

**Lookup Tables Block Parameters (Continued)**

Block (Type)/Parameter	Dialog Box Prompt	Values
NumDataPoints	Number of data points for lookup table	string — $\{(2^5)+1\}$
OutputWordLength	Output word length	string — $\{16\}$
InternalRulePriority	Internal rule priority for lookup table	string — $\{\text{'Speed'}\}$   $\{\text{'Precision'}\}$

**Math Operations Library Block Parameters**

Block (Type)/Parameter	Dialog Box Prompt	Values
Abs (Abs)		
ZeroCross	Enable zero-crossing detection	string — $\{\text{'off'}\}$   $\{\text{'on'}\}$
SampleTime	Sample time (-1 for inherited)	string — $\{-1\}$
OutMin	Output minimum	string — $\{[]\}$
OutMax	Output maximum	string — $\{[]\}$
OutDataTypeStr	Output data type	string — $\{\text{'Inherit: Inherit via internal rule'}\}$   $\{\text{'Inherit: Inherit via back propagation'}\}$   $\{\text{'Inherit: Same as input'}\}$   $\{\text{'double'}\}$   $\{\text{'single'}\}$   $\{\text{'int8'}\}$   $\{\text{'uint8'}\}$   $\{\text{'int16'}\}$   $\{\text{'uint16'}\}$   $\{\text{'int32'}\}$   $\{\text{'uint32'}\}$   $\{\text{'fixdt}(1,16,0)\}$   $\{\text{'fixdt}(1,16,2^0,0)\}$
LockScale	Lock output data type setting against changes by the fixed-point tools	string — $\{\text{'off'}\}$   $\{\text{'on'}\}$

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
Add (Sum)		
IconShape	Icon shape	string — {'rectangular'}   'round'
Inputs	List of signs	string — {'++'}
CollapseMode	Sum over	string — {'All dimensions'}   'Specified dimension'
CollapseDim	Dimension	string — {'1'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InputSameDT	Require all inputs to have the same data type	string — {'off'}   'on'
AccumDataTypeStr	Accumulator data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as first input'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'Inherit: Same as first input'   'Inherit: Same as accumulator'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
Algebraic Constraint (Algebraic Constraint) (masked subsystem)		
z0	Initial guess	string — {'0'}
Assignment (Assignment)		
NumberOfDimensions	Number of output dimensions	string — {'1'}
IndexMode	Index mode	string — 'Zero-based'   {'One-based'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutputInitialize	Initialize output (Y)	string — {'Initialize using input port <Y0>'}   'Specify size for each dimension in table'
IndexOptionArray	Index Option	string — 'Assign all'   {'Index vector (dialog)'}   'Index vector (port)'   'Starting index (dialog)'   'Starting index (port)'
IndexParamArray	Index	cell array
OutputSizeArray	Output Size	cell array
DiagnosticForDimensions	Action if any output element is not assigned	string — 'Error'   'Warning'   {'None'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
IndexOptions	See IndexOptionArray parameter for more information.	
Indices	See IndexParamArray parameter for more information.	
OutputSizes	See OutputSizeArray parameter for more information.	
<b>Bias (Bias)</b>		
Bias	Bias	string — {'0.0'}
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
<b>Complex to Magnitude-Angle (ComplexToMagnitudeAngle)</b>		

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Output	Output	string — 'Magnitude'   'Angle'   {'Magnitude and angle'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Complex to Real-Imag (ComplexToRealImag)		
Output	Output	string — 'Real'   'Imag'   {'Real and imag'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Divide (Product)		
Inputs	Number of inputs	string — {'*/'}
Multiplication	Multiplication	string — {'Element-wise(*)'}   'Matrix(*)'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InputSameDT	Require all inputs to have same data type	string — {'off'}   'on'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'Inherit: Same as first input'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
Dot Product (DotProduct)		
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InputSameDT	Require all inputs to have same data type	string — 'off'   {'on'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'Inherit: Same as first input'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutputDataTypeScaling Mode	Deprecated in R2007b	
OutDataType	Deprecated in R2007b	
OutScaling	Deprecated in R2007b	

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
Find (Find)		
IndexOutputFormat	Index output format	string — {'Linear indices'}   'Subscripts'
NumberOfInputDimensions	Number of input dimensions	integer — {'1'}
IndexMode	Index mode	string — {'Zero-based'}   'One-based'
ShowOutputForNonzero InputValues	Show output port for nonzero input values	string — {'off'}   'on'
SampleTime	Sample time (–1 for inherited)	string — {'-1'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'
Gain (Gain)		
Gain	Gain	string — {'1'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Multiplication	Multiplication	string — {'Element-wise(K.*u)'}   'Matrix(K*u)'   'Matrix(u*K)'   'Matrix(K*u) (u vector)'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'Inherit: Same as input'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
ParamMin	Parameter minimum	string — {'[]'}
ParamMax	Parameter maximum	string — {'[]'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ParamDataTypeStr	Parameter data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as input'   'Inherit: Inherit from 'Gain''   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
<b>Magnitude-Angle to Complex (MagnitudeAngleToComplex)</b>		
Input	Input	string — 'Magnitude'   'Angle'   {'Magnitude and angle'}
ConstantPart	Magnitude or Angle	string — {'0'}
ApproximationMethod	Approximation method	string — {'None'}   'CORDIC'
NumberOfIterations	Number of iterations	string — {'11'}
ScaleReciprocalGainFactor	Scale output by reciprocal of gain factor	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
<b>Math Function (Math)</b>		
Operator	Function	string — {'exp'}   'log'   '10^u'   'log10'   'magnitude^2'   'square'   'pow'   'conj'   'reciprocal'   'hypot'   'rem'   'mod'   'transpose'   'hermitian'

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutputSignalType	Output signal type	string — {'auto'}   'real'   'complex'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — 'Inherit: Inherit via internal rule'   'Inherit: Inherit via back propagation'   {'Inherit: Same as first input'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — 'off'   {'on'}
<b>Matrix Concatenate (Concatenate)</b>		
NumInputs	Number of inputs	string — {'2'}
Mode	Mode	string — 'Vector'   {'Multidimensional array'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ConcatenateDimension	Concatenate dimension	string — {'2'}
MinMax (MinMax)		
Function	Function	string — {'min'}   'max'
Inputs	Number of input ports	string — {'1'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InputSameDT	Require all inputs to have the same data type	string — {'off'}   'on'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
MinMax Running Resettable (MinMax Running Resettable) (masked subsystem)		
Function	Function	string — {'min'}   'max'
vinit	Initial condition	string — {'0.0'}
Permute Dimensions (PermuteDimensions)		
Order	Order	string — {'[2,1]'}
Polynomial (Polyval)		
coefs	Polynomial Coefficients	string — {'[ +2.081618890e-019, -1.441693666e-014, +4.719686976e-010, -8.536869453e-006, +1.621573104e-001, -8.087801117e+001 ]'}
Product (Product)		
Inputs	Number of inputs	string — {'2'}
Multiplication	Multiplication	string — {'Element-wise(*)'}   'Matrix(*)'
CollapseMode	Multiply over	string — {'All dimensions'}   'Specified dimension'
CollapseDim	Dimension	string — {'1'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InputSameDT	Require all inputs to have same data type	string — {'off'}   'on'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'Inherit: Same as first input'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   'Floor'   'Nearest'   'Round'   'Simplest'   {'Zero'}
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
<b>Product of Elements (Product)</b>		
Inputs	Number of inputs	string — {'*'}
Multiplication	Multiplication	string — {'Element-wise(*)'}   'Matrix(*)'
CollapseMode	Multiply over	string — {'All dimensions'}   'Specified dimension'
CollapseDim	Dimension	string — {'1'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
InputSameDT	Require all inputs to have same data type	string — {'off'}   'on'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'Inherit: Same as first input'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
<b>Real-Imag to Complex (RealImagToComplex)</b>		
Input	Input	string — 'Real'   'Imag'   {'Real and imag'}
ConstantPart	Real part or Imag part	string — {'0'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
<b>Reciprocal Sqrt (Sqrt)</b>		

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Operator	Function	string — 'sqrt'   'signedSqrt'   {'rSqrt'}
OutputSignalType	Output signal type	string — {'auto'}   'real'   'complex'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — 'Inherit: Inherit via internal rule'   'Inherit: Inherit via back propagation'   {'Inherit: Same as first input'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — 'off'   {'on'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
IntermediateResults DataTypeStr	Intermediate results data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit from input'   'Inherit: Inherit from output'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
AlgorithmType	Method	string — 'Exact'   {'Newton-Raphson'}
Iterations	Number of iterations	string — {'3'}
<b>Reshape (Reshape)</b>		
OutputDimensionality	Output dimensionality	string — {'1-D array'}   'Column vector (2-D)'   'Row vector (2-D)'   'Customize'   'Derive from reference input port'
OutputDimensions	Output dimensions	string — {'[1,1]'}
<b>Rounding Function (Rounding)</b>		
Operator	Function	string — {'floor'}   'ceil'   'round'   'fix'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
<b>Sign (Signum)</b>		
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Signed Sqrt (Sqrt)		
Operator	Function	string — 'sqrt'   {'signedSqrt'}   'rSqrt'
OutputSignalType	Output signal type	string — {'auto'}   'real'   'complex'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — 'Inherit: Inherit via internal rule'   'Inherit: Inherit via back propagation'   {'Inherit: Same as first input'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — 'off'   {'on'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
IntermediateResults DataTypeStr	Intermediate results data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit from input'   'Inherit: Inherit from output'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
AlgorithmType	Method	string — {'Exact'}   'Newton-Raphson'
Iterations	Number of iterations	string — {'3'}
<b>Sine Wave Function (Sin)</b>		
SineType	Sine type	string — {'Time based'}   'Sample based'
TimeSource	Time	string — 'Use simulation time'   {'Use external signal'}
Amplitude	Amplitude	string — {'1'}
Bias	Bias	string — {'0'}
Frequency	Frequency	string — {'1'}
Phase	Phase	string — {'0'}
Samples	Samples per period	string — {'10'}
Offset	Number of offset samples	string — {'0'}
SampleTime	Sample time	string — {'0'}
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Slider Gain (Slider Gain) (masked subsystem)		
low	Low	string — {'0'}
gain	Gain	string — {'1'}
high	High	string — {'2'}
Sqrt (Sqrt)		
Operator	Function	string — {'sqrt'}   'signedSqrt'   'rSqrt'
OutputSignalType	Output signal type	string — {'auto'}   'real'   'complex'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — 'Inherit: Inherit via internal rule'   'Inherit: Inherit via back propagation'   {'Inherit: Same as first input'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — 'off'   {'on'}
IntermediateResults DataTypeStr	Intermediate results data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit from input'   'Inherit: Inherit from output'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
AlgorithmType	Method	string — {'Exact'}   'Newton-Raphson'
Iterations	Number of iterations	string — {'3'}
Squeeze (Squeeze) (masked subsystem)		
None	None	None
Subtract (Sum)		
IconShape	Icon shape	string — {'rectangular'}   'round'
Inputs	List of signs	string — {'+-'}
CollapseMode	Sum over	string — {'All dimensions'}   'Specified dimension'
CollapseDim	Dimension	string — {'1'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InputSameDT	Require all inputs to have the same data type	string — {'off'}   'on'
AccumDataTypeStr	Accumulator data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as first input'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'Inherit: Same as first input'   'Inherit: Same as accumulator'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
Sum (Sum)		
IconShape	Icon shape	string — 'rectangular'   {'round'}
Inputs	List of signs	string — {' ++'}
CollapseMode	Sum over	string — {'All dimensions'}   'Specified dimension'
CollapseDim	Dimension	string — {'1'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InputSameDT	Require all inputs to have the same data type	string — {'off'}   'on'
AccumDataTypeStr	Accumulator data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as first input'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'Inherit: Same as first input'   'Inherit: Same as accumulator'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
Sum of Elements (Sum)		
IconShape	Icon shape	string — {'rectangular'}   'round'
Inputs	List of signs	string — {'+'}
CollapseMode	Sum over	string — {'All dimensions'}   'Specified dimension'
CollapseDim	Dimension	string — {'1'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
InputSameDT	Require all inputs to have the same data type	string — {'off'}   'on'
AccumDataTypeStr	Accumulator data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Same as first input'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'Inherit: Same as first input'   'Inherit: Same as accumulator'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock data type settings against changes by the fixed-point tools	string — {'off'}   'on'

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
Trigonometric Function (Trigonometry)		
Operator	Function	string — {'sin'}   'cos'   'tan'   'asin'   'acos'   'atan'   'atan2'   'sinh'   'cosh'   'tanh'   'asinh'   'acosh'   'atanh'   'sincos'   'cos + jsin'
ApproximationMethod	Approximation method	string — {'None'}   'CORDIC'
NumberOfIterations	Number of iterations	string — {'11'}
OutputSignalType	Output signal type	string — {'auto'}   'real'   'complex'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Unary Minus (UnaryMinus)		
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
Vector Concatenate (Concatenate)		
NumInputs	Number of inputs	string — {'2'}
Mode	Mode	string — {'Vector'}   'Multidimensional array'
Weighted Sample Time Math (SampleTimeMath)		

**Math Operations Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
TsampMathOp	Operation	string — {'+'   '-'   '*'   '/'   'Ts Only'   '1/Ts Only'}
weightValue	Weight value	string — {'1.0'}
TsampMathImp	Implement using	string — {'Online Calculations'}   'Offline Scaling Adjustment'
OutDataTypeStr	Output data type	string — {'Inherit via internal rule'}   'Inherit via back propagation'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
OutputDataTypeScaling Mode	Deprecated in R2009b	
DoSatur	Deprecated in R2009b	

**Model Verification Library Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Assertion (Assertion)		
Enabled	Enable assertion	string — 'off'   {'on'}
AssertionFailFcn	Simulation callback when assertion fails	string — {''}
StopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}

**Model Verification Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Check Dynamic Gap (Checks_DGap) (masked subsystem)		
enabled	Enable assertion	string — 'off'   {'on'}
callback	Simulation callback when assertion fails (optional)	string — {''}
stopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}
export	Output assertion signal	string — {'off'}   'on'
icon	Select icon type	string — {'graphic'}   'text'
Check Dynamic Range (Checks_DRange) (masked subsystem)		
enabled	Enable assertion	string — 'off'   {'on'}
callback	Simulation callback when assertion fails (optional)	string — {''}
stopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}
export	Output assertion signal	string — {'off'}   'on'
icon	Select icon type	string — {'graphic'}   'text'
Check Static Gap (Checks_SGap) (masked subsystem)		
max	Upper bound	string — {'100'}
max_included	Inclusive upper bound	string — 'off'   {'on'}
min	Lower bound	string — {'0'}
min_included	Inclusive lower bound	string — 'off'   {'on'}
enabled	Enable assertion	string — 'off'   {'on'}
callback	Simulation callback when assertion fails (optional)	string — {''}

**Model Verification Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
stopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}
export	Output assertion signal	string — {'off'}   'on'
icon	Select icon type	string — {'graphic'}   'text'
<b>Check Static Range (Checks_SRange) (masked subsystem)</b>		
max	Upper bound	string — {'100'}
max_included	Inclusive upper bound	string — 'off'   {'on'}
min	Lower bound	string — {'0'}
min_included	Inclusive lower bound	string — 'off'   {'on'}
enabled	Enable assertion	string — 'off'   {'on'}
callback	Simulation callback when assertion fails (optional)	string — {''}
stopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}
export	Output assertion signal	string — {'off'}   'on'
icon	Select icon type	string — {'graphic'}   'text'
<b>Check Discrete Gradient (Checks_Gradient) (masked subsystem)</b>		
gradient	Maximum gradient	string — {'1'}
enabled	Enable assertion	string — 'off'   {'on'}
callback	Simulation callback when assertion fails (optional)	string — {''}
stopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}
export	Output assertion signal	string — {'off'}   'on'

**Model Verification Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
icon	Select icon type	string — {'graphic'}   'text'
Check Dynamic Lower Bound (Checks_DMin) (masked subsystem)		
Enabled	Enable assertion	string — 'off'   {'on'}
callback	Simulation callback when assertion fails (optional)	string — {''}
stopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}
export	Output assertion signal	string — {'off'}   'on'
icon	Select icon type	string — {'graphic'}   'text'
Check Dynamic Upper Bound (Checks_DMax) (masked subsystem)		
enabled	Enable assertion	string — 'off'   {'on'}
callback	Simulation callback when assertion fails (optional)	string — {''}
stopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}
export	Output assertion signal	string — {'off'}   'on'
icon	Select icon type	string — {'graphic'}   'text'
Check Input Resolution (Checks_Resolution) (masked subsystem)		
resolution	Resolution	string — {'1'}
enabled	Enable assertion	string — 'off'   {'on'}
callback	Simulation callback when assertion fails (optional)	string — {''}
stopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}
export	Output assertion signal	string — {'off'}   'on'

**Model Verification Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Check Static Lower Bound (Checks_SMin) (masked subsystem)		
min	Lower bound	string — {'0'}
min_included	Inclusive boundary	string — 'off'   {'on'}
enabled	Enable assertion	string — 'off'   {'on'}
callback	Simulation callback when assertion fails (optional)	string — {''}
stopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}
export	Output assertion signal	string — {'off'}   'on'
icon	Select icon type	string — {'graphic'}   'text'
Check Static Upper Bound (Checks_SMax) (masked subsystem)		
max	Upper bound	string — {'0'}
max_included	Inclusive boundary	string — 'off'   {'on'}
enabled	Enable assertion	string — 'off'   {'on'}
callback	Simulation callback when assertion fails (optional)	string — {''}
stopWhenAssertionFail	Stop simulation when assertion fails	string — 'off'   {'on'}
export	Output assertion signal	string — {'off'}   'on'
icon	Select icon type	string — {'graphic'}   'text'

**Model-Wide Utilities Library Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Block Support Table (Block Support Table) (masked subsystem)		
DocBlock (DocBlock) (masked subsystem)		

**Model-Wide Utilities Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ECoderFlag	Embedded Coder Flag	string — {''}
DocumentType	Document Type	string — {'Text'}   'RTF'   'HTML'
Model Info (CMBlock) (masked subsystem)		
InitialSaveTempField	InitialSaveTempField	string — {''}
InitialBlockCM	InitialBlockCM	string — {'None'}
BlockCM	BlockCM	string — {'None'}
Frame	Show block frame	string — 'off'   {'on'}
SaveTempField	SaveTempField	string — {''}
DisplayStringWithTags	DisplayStringWithTags	string — {'Model Info'}
MaskDisplayString	MaskDisplayString	string — {'Model Info'}
HorizontalTextAlignment	Horizontal text alignment	string — {'Center'}
LeftAlignmentValue	LeftAlignmentValue	string — {'0.5'}
SourceBlockDiagram	SourceBlockDiagram	string — {'untitled'}
TagMaxNumber	TagMaxNumber	string — {'20'}
CMTag1	CMTag1	string — {''}
CMTag2	CMTag2	string — {''}
CMTag3	CMTag3	string — {''}
CMTag4	CMTag4	string — {''}
CMTag5	CMTag5	string — {''}
CMTag6	CMTag6	string — {''}
CMTag7	CMTag7	string — {''}
CMTag8	CMTag8	string — {''}
CMTag9	CMTag9	string — {''}
CMTag10	CMTag10	string — {''}

**Model-Wide Utilities Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
CMTag11	CMTag11	string — {''}
CMTag12	CMTag12	string — {''}
CMTag13	CMTag13	string — {''}
CMTag14	CMTag14	string — {''}
CMTag15	CMTag15	string — {''}
CMTag16	CMTag16	string — {''}
CMTag17	CMTag17	string — {''}
CMTag18	CMTag18	string — {''}
CMTag19	CMTag19	string — {''}
CMTag20	CMTag20	string — {''}
Timed-Based Linearization (Timed Linearization) (masked subsystem)		
LinearizationTime	Linearization time	string — {'1'}
SampleTime	Sample time (of linearized model)	string — {'0'}
Trigger-Based Linearization (Triggered Linearization) (masked subsystem)		
TriggerType	Trigger type	string — {'rising'}   'falling'   'either'   'function-call'
SampleTime	Sample time (of linearized model)	string — {'0'}

**Ports & Subsystems Library Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Action Port (ActionPort)		
InitializeStates	States when execution is resumed	string — {'held'}   'reset'

## Ports &amp; Subsystems Library Block Parameters (Continued)

Block (Type)/Parameter	Dialog Box Prompt	Values
PropagateVarSize	Propagate sizes of variable-size signals	string — {'Only when execution is resumed'}   'During execution'
Atomic Subsystem (SubSystem)		
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   {'FromPortIcon'}   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — {''}
TemplateBlock	Template block	string — {''}
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchical Resolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — 'off'   {'on'}
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContext OutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
CheckFcnCallInp InsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {''}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {''}
FunctionWithSeparateData	<p>“Function with separate data” on page 1-1711</p> <p>This parameter requires a license for Embedded Coder software and an ERT-based system target file.</p>	string — {'off'}   'on'
RTWMemSecFuncInitTerm	<p>“Memory section for initialize/terminate functions” on page 1-1714</p> <p>This parameter requires a license for Embedded Coder software and an ERT-based system target file.</p>	string — {'Inherit from model'}   'Default'   list of memory sections from model's package

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RTWMemSecFuncExecute	<p>“Memory section for execution functions” on page 1-1716</p> <p>This parameter requires a license for Embedded Coder software and an ERT-based system target file.</p>	string — {'Inherit from model'}   'Default'   list of memory sections from model's package
RTWMemSecDataConstants	<p>“Memory section for constants” on page 1-1718</p> <p>This parameter requires a license for Embedded Coder software and an ERT-based system target file.</p>	string — {'Inherit from model'}   'Default'   list of memory sections from model's package
RTWMemSecDataInternal	<p>“Memory section for internal data” on page 1-1719</p> <p>This parameter requires a license for Embedded Coder software and an ERT-based system target file.</p>	string — {'Inherit from model'}   'Default'   list of memory sections from model's package
RTWMemSecDataParameters	<p>“Memory section for parameters” on page 1-1720</p> <p>This parameter requires a license for Embedded Coder software and an ERT-based system target file.</p>	string — {'Inherit from model'}   'Default'   list of memory sections from model's package
DataTypeOverride	<p>No dialog box prompt</p> <p>Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.</p>	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'

## Ports &amp; Subsystems Library Block Parameters (Continued)

Block (Type)/Parameter	Dialog Box Prompt	Values
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — { 'UseLocalSettings' }   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
SimViewingDevice	No dialog box prompt If set to 'on', designates the block as a Signal Viewing Subsystem — an atomic subsystem that encapsulates processing and viewing of signals received from the target system in External mode. For more information, see “Signal Viewing Subsystems”.	string — { 'off' }   'on'
IsSubsystemVirtual		boolean — { 'off' }   'on' Read-only
Code Reuse Subsystem (SubSystem)		
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   { 'FromPortIcon' }   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — { '' }
TemplateBlock	Template block	string — { '' }

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchical Resolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — 'off'   {'on'}
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContext OutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInp InsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}
RTWSystemCode	Code generation function packaging	string — 'Auto'   'Inline'   'Nonreusable function'   {'Reusable function'}
RTWFcnNameOpts	Code generation function name options	string — 'Auto'   {'Use subsystem name'}   'User specified'
RTWFcnName	Code generation function name	string — {''}
RTWFileNameOpts	Code generation file name options	string — 'Auto'   {'Use subsystem name'}   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {''}

## Ports &amp; Subsystems Library Block Parameters (Continued)

Block (Type)/Parameter	Dialog Box Prompt	Values
DataTypeOverride	No dialog box prompt Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — { 'UseLocalSettings' }   'ScaledDouble'   'Double'   'Single'   'Off'
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — { 'UseLocalSettings' }   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
IsSubsystemVirtual		boolean — { 'off' }   'on' Read-only
Configurable Subsystem (SubSystem)		
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   { 'FromPortIcon' }   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — { '' }
TemplateBlock	Template block	string — { 'self' }
MemberBlocks	Member blocks	string — { '' }
Permissions	Read/Write permissions	string — { 'ReadWrite' }   'ReadOnly'   'NoReadOrWrite'

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchicalResolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — {'off'}   'on'
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContextOutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInpInsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {''}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {''}

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
DataTypeOverride	No dialog box prompt Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
IsSubsystemVirtual		boolean — {'on'}   'off' Read-only
Enable (EnablePort)		
StatesWhenEnabling	States when enabling	string — {'held'}   'reset'
PropagateVarSize	Propagate sizes of variable-size signals	string — {'Only when enabling'}   'During execution'
ShowOutputPort	Show output port	string — {'off'}   'on'
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
Enabled and Triggered Subsystem (SubSystem)		

**Ports & Subsystems Library Block Parameters (Continued)**

Block (Type)/Parameter	Dialog Box Prompt	Values
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   {'FromPortIcon'}   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — {''}
TemplateBlock	Template block	string — {''}
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchical Resolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — 'off'   {'on'}
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContext OutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInp InsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {''}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {''}
DataTypeOverride	No dialog box prompt Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
IsSubsystemVirtual		boolean — {'off'}   'on' Read-only
Enabled Subsystem (SubSystem)		

## Ports &amp; Subsystems Library Block Parameters (Continued)

Block (Type)/Parameter	Dialog Box Prompt	Values
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   {'FromPortIcon'}   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — {''}
TemplateBlock	Template block	string — {''}
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchicalResolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — 'off'   {'on'}
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContextOutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInpInsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {' '}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {' '}
DataTypeOverride	No dialog box prompt Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
IsSubsystemVirtual		boolean — {'off'}   'on' Read-only
For Each(ForEach)		

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
InputPartition	Partition	cell array of strings
InputPartitionDimension	Partition dimension for input signal	cell array of strings
InputPartitionWidth	Width of partition for input signal	cell array of strings
OutputConcatenationDimension	Concatenation dimension of output signal	cell array of strings
For Iterator (ForIterator)		
ResetStates	States when starting	string — {'held'}   'reset'
IterationSource	Iteration limit source	string — {'internal'}   'external'
IterationLimit	Iteration limit	string — {'5'}
ExternalIncrement	Set next i (iteration variable) externally	string — {'off'}   'on'
ShowIterationPort	Show iteration variable	string — 'off'   {'on'}
IndexMode	Index mode	string — 'Zero-based'   {'One-based'}
IterationVariable DataType	Iteration variable data type	string — {'int32'}   'int16'   'int8'   'double'
For Iterator Subsystem (SubSystem)		

**Ports & Subsystems Library Block Parameters (Continued)**

Block (Type)/Parameter	Dialog Box Prompt	Values
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   {'FromPortIcon'}   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — {''}
TemplateBlock	Template block	string — {''}
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchical Resolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — 'off'   {'on'}
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContext OutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInp InsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {' '}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {' '}
DataTypeOverride	No dialog box prompt Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation . Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
IsSubsystemVirtual		boolean — {'off'}   'on' Read-only
Function-Call Generator (Function-Call Generator) (masked subsystem)		

## Ports &amp; Subsystems Library Block Parameters (Continued)

Block (Type)/Parameter	Dialog Box Prompt	Values
sample_time	Sample time	string — {'1'}
numberOfIterations	Number of iterations	string — {'1'}
Function-Call Subsystem (SubSystem)		
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   {'FromPortIcon'}   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — {''}
TemplateBlock	Template block	string — {''}
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchicalResolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — 'off'   {'on'}
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContextOutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInpInsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {''}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {''}
DataTypeOverride	No dialog box prompt Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
IsSubsystemVirtual		boolean — {'off'}   'on' Read-only

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
If (If)		
NumInputs	Number of inputs	string — {'1'}
IfExpression	If expression (e.g., $u1 \sim= 0$ )	string — {'u1 > 0'}
ElseIfExpressions	Elseif expressions (comma-separated list, e.g., $u2 \sim= 0, u3(2) < u2$ )	string — {''}
ShowElse	Show else condition	string — 'off'   {'on'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
If Action Subsystem (SubSystem)		
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   {'FromPortIcon'}   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — {''}
TemplateBlock	Template block	string — {''}
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
PermitHierarchicalResolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — 'off'   {'on'}
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContextOutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInpInsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {''}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {''}

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
DataTypeOverride	No dialog box prompt Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   {'ScaledDouble'}   {'Double'}   {'Single'}   {'Off'}
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   {'MinMaxAndOverflow'}   {'OverflowOnly'}   {'Off'}
IsSubsystemVirtual		boolean — {'off'}   'on' Read-only
In1 (Inport)		
Port	Port number	string — {'1'}
IconDisplay	Icon display	string — 'Signal name'   {'Port number'}   'Port number and signal name'
LatchByDelayingOutsideSignal	Latch input by delaying outside signal	string — {'off'}   'on'
LatchInputForFeedbackSignals	Latch input for feedback signals of function-call subsystem outputs	string — {'off'}   'on'
Interpolate	Interpolate data	string — 'off'   {'on'}
UseBusObject	Specify properties via bus object	string — {'off'}   'on'
BusObject	Bus object for specifying bus properties	string — {'BusObject'}

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
BusOutputAsStruct	Output as nonvirtual bus	string — {'off'}   'on'
PortDimensions	Port dimensions (-1 for inherited)	string — {'-1'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Minimum	string — {'[]'}
OutMax	Maximum	string — {'[]'}
OutDataTypeStr	Data type	string — {'Inherit: auto'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
SignalType	Signal type	string — {'auto'}   'real'   'complex'
SamplingMode	Sampling mode	string — {'auto'}   'Sample based'   'Frame based'
Model (ModelReference)		

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ModelNameDialog	The name of the referenced model exactly as you typed it in, with any surrounding whitespace removed. When you set ModelNameDialog programmatically or with the GUI, Simulink automatically sets the values of ModelName and ModelFile based on the value of ModelNameDialog.	string — {'<Enter Model Name>'}
ModelName	The value of ModelNameDialog stripped of any filename extension that you provided. For backward compatibility, setting ModelName programmatically actually sets ModelNameDialog, which then sets ModelName as described. You cannot use get_param to obtain the ModelName of a protected model, because the name without a suffix would be ambiguous. Use get_param on ModelFile instead. You can test ProtectedModel to determine programmatically whether a referenced model is protected.	string — Set automatically when ModelNameDialog is set.

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ModelFile	The value of ModelNameDialog with a filename extension. The suffix of the first match Simulink finds becomes the suffix of ModelFile. Setting ModelFile programmatically actually sets ModelNameDialog, which then sets ModelFile as described.	string — Set automatically when ModelNameDialog is set.
ProtectedModel	Read-only boolean indicating whether the model referenced by the block is protected (on) or unprotected (off).	boolean — 'off'   'on' — Set automatically when ModelNameDialog is set.
ParameterArgumentNames	Model arguments	string — {''}
ParameterArgumentValues	Model argument values (for this instance)	string — {''}
SimulationMode	Specifies whether to simulate the model by generating and executing code or by interpreting the model in Simulink software.	string — {'Normal'}   'Accelerator'   'Software-in-the-loop (SIL)'   'Processor-in-the-loop (PIL)'
Variant	Specifies whether the Model block references variant models.	string — {'off'}   'on'

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Variants	An array of <code>variant</code> structures where each element specifies one variant. The structure fields are as follows:	array — [ ]
	<code>variant.Name</code> – The name of the <code>Simulink.Variant</code> object that represents the variant to which this element applies.	string — { ' ' }
	<code>variant.ModelName</code> – The name of the referenced model associated with the specified variant object in this Model block.	string — { ' ' }
	<code>variant.ParameterArgument Names</code> – Noneditable string containing the names of the model arguments for which the Model block must supply values.	string — { ' ' }
	<code>variant.ParameterArgument Values</code> – The values to supply for the model arguments when this variant is the active variant.	string — { ' ' }
	<code>variant.SimulationMode</code> – The execution mode to use when this variant is the active variant.	string — { 'Accelerator'   'Normal'   'Processor-in-the-loop (PIL)' }
<code>OverrideUsingVariant</code>	Whether to override the variant conditions and make a specified variant the active variant, and if so, the name of that variant.	string — { ' ' } The value is the empty string if no overriding variant object is specified; or the name of the overriding object.

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ActiveVariant	The variant that is currently active, either because its variant condition is true or OverrideUsingVariant has overridden the variant conditions and specified this variant.	string — { ' ' } The value is the empty string if no variant is active; or the name of the active variant.
GeneratePreprocessorConditionals	Locally controls whether generated code contains preprocessor conditionals. This parameter applies only to Simulink Coder code generation and has no effect on the behavior of a model in Simulink.  The parameter is available only for an ERT target when you select <b>Inline parameters</b> . For more information, see “Variant Systems”.	string — { 'off' }   'on'
AvailSigsInstanceProps		handle vector — { ' ' }
AvailSigsDefaultProps		handle vector — { ' ' }
DefaultDataLogging		string — { 'off' }   'on'
Out1 (Output)		
Port	Port number	string — { '1' }
IconDisplay	Icon display	string — 'Signal name'   { 'Port number' }   'Port number and signal name'
UseBusObject	Specify properties via bus object	string — { 'off' }   'on'

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
BusObject	Bus object for validating input bus	string — {'BusObject'}
BusOutputAsStruct	Output as nonvirtual bus in parent model	string — {'off'}   'on'
PortDimensions	Port dimensions (-1 for inherited)	string — {'-1'}
VarSizeSig	Variable-size signal	string — {'Inherit'}   'No'   'Yes'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Minimum	string — {'[]'}
OutMax	Maximum	string — {'[]'}
OutDataTypeStr	Data type	string — {'Inherit: auto'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'   'Bus: <object name>'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
SignalType	Signal type	string — {'auto'}   'real'   'complex'
SamplingMode	Sampling mode	string — {'auto'}   'Sample based'   'Frame based'
OutputWhenDisabled	Output when disabled	string — {'held'}   'reset'
InitialOutput	Initial output	string — {'[]'}

**Ports & Subsystems Library Block Parameters (Continued)**

Block (Type)/Parameter	Dialog Box Prompt	Values
Subsystem (SubSystem)		
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   {'FromPortIcon'}   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — {''}
TemplateBlock	Template block	string — {''}
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchicalResolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — {'off'}   'on'
VariantControl	Variant control	string — {'Variant'}   '(default)'
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContextOutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInpInsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {''}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {''}
DataTypeOverride	Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
IsSubsystemVirtual		boolean — {'on'}   'off' Read-only
Virtual	For internal use	

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Switch Case (SwitchCase)		
CaseConditions	Case conditions (e.g., {1,[2,3]})	string — {'{1}'} }
ShowDefaultCase	Show default case	string — 'off'   {'on'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
CaseShowDefault	Deprecated in R2009b	
Switch Case Action Subsystem (SubSystem)		
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   {'FromPortIcon'}   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — {''}
TemplateBlock	Template block	string — {''}
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchical Resolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — 'off'   {'on'}

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContext OutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInp InsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {''}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {''}
DataTypeOverride	No dialog box prompt  Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — { 'UseLocalSettings'   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
IsSubsystemVirtual		boolean — { 'off' }   'on' Read-only
Trigger (TriggerPort)		
TriggerType	Trigger type	string — { 'rising' }   'falling'   'either'   'function-call'
StatesWhenEnabling	States when enabling	string — { 'held' }   'reset'   'inherit'
PropagateVarSize	Propagate sizes of variable-size signals	string — { 'During execution' }   'Only when enabling'
ShowOutputPort	Show output port	string — { 'off' }   'on'
OutputDataType	Output data type	string — { 'auto' }   'double'   'int8'
SampleTimeType	Sample time type	string — { 'triggered' }   'periodic'
SampleTime	Sample time	string — { '1' }
ZeroCross	Enable zero-crossing detection	string — 'off'   { 'on' }
PortDimensions	Port dimensions (-1 for inherited)	string — { '-1' }
TriggerSignalSampleTime	Trigger signal sample time	string — { '-1' }
OutMin	Minimum	string — { '[]' }
OutMax	Maximum	string — { '[]' }

## Ports &amp; Subsystems Library Block Parameters (Continued)

Block (Type)/Parameter	Dialog Box Prompt	Values
OutDataTypeStr	Data type	string — {'Inherit: auto'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'
Interpolate	Interpolate data	string — 'off'   {'on'}
Triggered Subsystem (SubSystem)		
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   {'FromPortIcon'}   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — {''}
TemplateBlock	Template block	string — {''}
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchical Resolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'

## Ports &amp; Subsystems Library Block Parameters (Continued)

Block (Type)/Parameter	Dialog Box Prompt	Values
TreatAsAtomicUnit	Treat as atomic unit	string — 'off'   {'on'}
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContext OutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInp InsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {''}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'
RTWFileName	Code generation file name (no extension)	string — {''}
DataTypeOverride	No dialog box prompt  Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'

## Ports &amp; Subsystems Library Block Parameters (Continued)

Block (Type)/Parameter	Dialog Box Prompt	Values
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — { 'UseLocalSettings' }   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
IsSubsystemVirtual		boolean — { 'off' }   'on' Read-only
While Iterator (WhileIterator)		
MaxIters	Maximum number of iterations (-1 for unlimited)	string — { '5' }
WhileBlockType	While loop type	string — { 'while' }   'do-while'
ResetStates	States when starting	string — { 'held' }   'reset'
ShowIterationPort	Show iteration number port	string — { 'off' }   'on'
OutputDataType	Output data type	string — { 'int32' }   'int16'   'int8'   'double'
While Iterator Subsystem (SubSystem)		
ShowPortLabels	Show port labels  <b>Note</b> The values 'off' and 'on' are for backward compatibility only and should not be used in new models or when updating existing models.	string — 'none'   { 'FromPortIcon' }   'FromPortBlockName'   'SignalName'   'off'   'on'
BlockChoice	Block choice	string — { '' }

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
TemplateBlock	Template block	string — {''}
MemberBlocks	Member blocks	string — {''}
Permissions	Read/Write permissions	string — {'ReadWrite'}   'ReadOnly'   'NoReadOrWrite'
ErrorFcn	Name of error callback function	string — {''}
PermitHierarchical Resolution	Permit hierarchical resolution	string — {'All'}   'ExplicitOnly'   'None'
TreatAsAtomicUnit	Treat as atomic unit	string — 'off'   {'on'}
MinAlgLoopOccurrences	Minimize algebraic loop occurrences	string — {'off'}   'on'
PropExecContext OutsideSubsystem	Propagate execution context across subsystem boundary	string — {'off'}   'on'
CheckFcnCallInp InsideContextMsg	Warn if function-call inputs are context-specific	string — {'off'}   'on'
SystemSampleTime	Sample time (-1 for inherited)	string — {'-1'}
RTWSystemCode	Code generation function packaging	string — {'Auto'}   'Inline'   'Nonreusable function'   'Reusable function'
RTWFcnNameOpts	Code generation function name options	string — {'Auto'}   'Use subsystem name'   'User specified'
RTWFcnName	Code generation function name	string — {''}
RTWFileNameOpts	Code generation file name options	string — {'Auto'}   'Use subsystem name'   'Use function name'   'User specified'

**Ports & Subsystems Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RTWFileName	Code generation file name (no extension)	string — {' '}
DataTypeOverride	No dialog box prompt Specifies data type used to override fixed-point data types. Set by <b>Data type override</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'ScaledDouble'   'Double'   'Single'   'Off'
MinMaxOverflowLogging	No dialog box prompt Setting for fixed-point instrumentation. Set by <b>Fixed-point instrumentation mode</b> on the Fixed-Point Tool.	string — {'UseLocalSettings'}   'MinMaxAndOverflow'   'OverflowOnly'   'ForceOff'
IsSubsystemVirtual		boolean — {'off'}   'on' Read-only

**Signal Attributes Library Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Bus to Vector (BusToVector)		
Data Type Conversion (DataTypeConversion)		
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}

**Signal Attributes Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via back propagation'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
ConvertRealWorld	Input and output to have equal	string — {'Real World Value (RWV)'}   'Stored Integer (SI)'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Data Type Conversion Inherited (Conversion Inherited) (masked subsystem)		
ConvertRealWorld	Input and Output to have equal	string — {'Real World Value'}   'Stored Integer'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'

**Signal Attributes Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
DoSatur	Saturate to max or min when overflows occur	string — {'off'}   'on'
Data Type Duplicate (DataTypeDuplicate)		
NumInputPorts	Number of input ports	string — {'2'}
Data Type Propagation (Data Type Propagation) (masked subsystem)		
PropDataTypeMode	1. Propagated data type	string — 'Specify via dialog'   {'Inherit via propagation rule'}
PropDataType	1.1. Propagated data type (e.g., fixdt(1,16), fixdt('single'))	string — {'fixdt(1,16)'}   {'single'}
IfRefDouble	1.1. If any reference input is double, output is	string — {'double'}   'single'
IfRefSingle	1.2. If any reference input is single, output is	string — 'double'   {'single'}
IsSigned	1.3. Is-Signed	string — 'IsSigned1'   'IsSigned2'   {'IsSigned1 or IsSigned2'}   'TRUE'   'FALSE'
NumBitsBase	1.4.1. Number-of-Bits: Base	string — 'NumBits1'   'NumBits2'   {'max([NumBits1 NumBits2])'}   'min([NumBits1 NumBits2])'   'NumBits1+NumBits2'
NumBitsMult	1.4.2. Number-of-Bits: Multiplicative adjustment	string — {'1'}
NumBitsAdd	1.4.3. Number-of-Bits: Additive adjustment	string — {'0'}

**Signal Attributes Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
NumBitsAllowFinal	1.4.4. Number-of-Bits: Allowable final values	string — {'1:128'}
PropScalingMode	2. Propagated scaling	string — 'Specify via dialog'   {'Inherit via propagation rule'}   'Obtain via best precision'
PropScaling	2.1. Propagated scaling: Slope or [Slope Bias] ex. 2 <sup>-9</sup>	string — {'2 <sup>-10</sup> '}
ValuesUsedBestPrec	2.1. Values used to determine best precision scaling	string — {'[5 -7]'}
SlopeBase	2.1.1. Slope: Base	string — 'Slope1'   'Slope2'   'max([Slope1 Slope2])'   {'min([Slope1 Slope2])'}   'Slope1*Slope2'   'Slope1/Slope2'   'PosRange1'   'PosRange2'   'max([PosRange1 PosRange2])'   'min([PosRange1 PosRange2])'   'PosRange1*PosRange2'   'PosRange1/PosRange2'
SlopeMult	2.1.2. Slope: Multiplicative adjustment	string — {'1'}
SlopeAdd	2.1.3. Slope: Additive adjustment	string — {'0'}

**Signal Attributes Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
BiasBase	2.2.1. Bias: Base	string — {'Bias1'}   'Bias2'   'max([Bias1 Bias2])'   'min([Bias1 Bias2])'   'Bias1*Bias2'   'Bias1/Bias2'   'Bias1+Bias2'   'Bias1-Bias2'
BiasMult	2.2.2. Bias: Multiplicative adjustment	string — {'1'}
BiasAdd	2.2.3. Bias: Additive adjustment	string — {'0'}
Data Type Scaling Strip (Scaling Strip) (masked subsystem)		
IC (InitialCondition)		
Value	Initial value	string — {'1'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Probe (Probe)		
ProbeWidth	Probe width	string — 'off'   {'on'}
ProbeSampleTime	Probe sample time	string — 'off'   {'on'}
ProbeComplexSignal	Detect complex signal	string — 'off'   {'on'}
ProbeSignalDimensions	Probe signal dimensions	string — 'off'   {'on'}
ProbeFramedSignal	Detect framed signal	string — 'off'   {'on'}
ProbeWidthDataType	Data type for width	string — {'double'}   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'Same as input'

**Signal Attributes Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ProbeSampleTimeDataType	Data type for sample time	string — {'double'}   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'Same as input'
ProbeComplexityDataType	Data type for signal complexity	string — {'double'}   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'Same as input'
ProbeDimensionsDataType	Data type for signal dimensions	string — {'double'}   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'Same as input'
ProbeFrameDataType	Data type for signal frames	string — {'double'}   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'Same as input'
<b>Rate Transition (RateTransition)</b>		
Integrity	Ensure data integrity during data transfer	string — 'off'   {'on'}
Deterministic	Ensure deterministic data transfer (maximum delay)	string — 'off'   {'on'}
X0	Initial conditions	string — {'0'}

**Signal Attributes Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutPortSampleTimeOpt	Output port sample time options	string — {'Specify'}   'Inherit'   'Multiple of input port sample time'
OutPortSampleTimeMultiple	Sample time multiple (>0)	string — {'1'}
OutPortSampleTime	Output port sample time	string — {'-1'}
<b>Signal Conversion (SignalConversion)</b>		
ConversionOutput	Output	string — {'Signal copy'}   'Virtual bus'   'Nonvirtual bus'
OutDataTypeStr	Data type	string — {'Inherit: auto'}   'Bus: <object name>'
OverrideOpt	Exclude this block from 'Block reduction' optimization	string — {'off'}   'on'
<b>Signal Specification (SignalSpecification)</b>		
Dimensions	Dimensions (-1 for inherited)	string — {'-1'}
VarSizeSig	Variable-size signal	string — {'Inherit'}   'No'   'Yes'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Minimum	string — {'[]'}
OutMax	Maximum	string — {'[]'}
OutDataTypeStr	Data type	string — {'Inherit: auto'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'   'Bus: <object name>'

**Signal Attributes Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
BusOutputAsStruct	Require nonvirtual bus	string — {'off'}   'on'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
SignalType	Signal type	string — {'auto'}   'real'   'complex'
SamplingMode	Sampling mode	string — {'auto'}   'Sample based'   'Frame based'
Weighted Sample Time (SampleTimeMath)		
TsampMathOp	Operation	string — '+'   '-'   '*'   '/'   {'Ts Only'}   '1/Ts Only'
weightValue	Weight value	string — {'1.0'}
TsampMathImp	Implement using	string — {'Online Calculations'}   'Offline Scaling Adjustment'
OutDataTypeStr	Output data type	string — {'Inherit via internal rule'}   'Inherit via back propagation'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
OutputDataTypeScaling Mode	Deprecated in R2009b	
DoSatur	Deprecated in R2009b	
Width (Width)		

**Signal Attributes Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutputDataTypeScaling Mode	Output data type mode	string — {'Choose intrinsic data type'}   'Inherit via back propagation'   'All ports same datatype'
DataType	Output data type	string — {'double'}   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'

**Signal Routing Library Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Bus Assignment (BusAssignment)		
AssignedSignals	Signals that are being assigned	string — {''}
InputSignals	Signals in the bus	matrix — {'{'}}
Bus Creator (BusCreator)		
Inputs	Number of inputs	string — {'2'}
DisplayOption		string — 'none'   'signals'   {'bar'}
NonVirtualBus	Output as nonvirtual bus	string — {'off'}   'on'
OutDataTypeStr	Data type	string — {'Inherit: auto'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'   'Bus: <object name>'

**Signal Routing Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Bus Selector (BusSelector)		
OutputSignals	Selected signals	string — in the form 'signal1,signal2'
OutputAsBus	Output as bus	string — {'off'}   'on'
InputSignals	Signals in bus	matrix — {'{'}
Data Store Memory (DataStoreMemory)		
DataStoreName	Data store name	string — {'A'}
ReadBeforeWriteMsg	Detect read before write	string — 'none'   {'warning'}   'error'
WriteAfterWriteMsg	Detect write after write	string — 'none'   {'warning'}   'error'
WriteAfterReadMsg	Detect write after read	string — 'none'   {'warning'}   'error'
InitialValue	Initial value	string — {'0'}
StateMustResolveToSignalObject	Data store name must resolve to Simulink signal object	string — {'off'}   'on'
DataLogging	Log Signal Data	string — 'off'   {'on'}
DataLoggingNameMode	Logging Name	string — {'SignalName'}   'Custom'
DataLoggingName	Logging Name	string — {''}
DataLoggingLimitDataPoints	Limit data points to last	string — 'off'   {'on'}
DataLoggingMaxPoints	Limit data points to last	non-zero integer {5000}
DataLoggingDecimateData	Decimation	string — 'off'   {'on'}
DataLoggingLimitDataPoints	Decimation	non-zero integer {2}

**Signal Routing Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
StateStorageClass	Code generation storage class	string — {'Auto'}   'ExportedGlobal'   'ImportedExtern'   'ImportedExternPointer'
RTWStateStorageTypeQualifier	Code generation type qualifier	string — {''}
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}
ShowAdditionalParam	Show additional parameters	string — {'off'}   'on'
OutMin	Minimum	string — {'[]'}
OutMax	Maximum	string — {'[]'}
OutDataTypeStr	Data type	string — {'Inherit: auto'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
SignalType	Signal type	string — {'auto'}   'real'   'complex'
Data Store Read (DataStoreRead)		
DataStoreName	Data store name	string — {'A'}
SampleTime	Sample time	string — {'0'}
Data Store Write (DataStoreWrite)		
DataStoreName	Data store name	string — {'A'}

**Signal Routing Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Demux (Demux)		
Outputs	Number of outputs	string — {'2'}
DisplayOption	Display option	string — 'none'   {'bar'}
BusSelectionMode	Bus selection mode	string — {'off'}   'on'
Environment Controller (Environment Controller) (masked subsystem)		
From (From)		
GotoTag	Goto tag	string — {'A'}
IconDisplay	Icon display	string — 'Signal name'   {'Tag'}   'Tag and signal name'
Goto (Goto)		
GotoTag	Tag	string — {'A'}
IconDisplay	Icon display	string — 'Signal name'   {'Tag'}   'Tag and signal name'
TagVisibility	Tag visibility	string — {'local'}   'scoped'   'global'
Goto Tag Visibility (GotoTagVisibility)		
GotoTag	Goto tag	string — {'A'}
Index Vector (MultiPortSwitch)		
DataPortOrder	Data port order	string — {'Zero-based contiguous'}   'One-based contiguous'   'Specify indices'
Inputs	Number of data ports	string — {'1'}
zeroidx	Deprecated in R2010a	

**Signal Routing Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InputSameDT	Require all data port inputs to have the same data type	string — {'off'}   'on'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
AllowDiffInputSizes	Allow different data input sizes (Results in variable-size output signal)	string — {'off'}   'on'
<b>Manual Switch (Manual Switch) (masked subsystem)</b>		
varsize	Allow different input sizes (Results in variable-size output signal)	string — {'off'}   'on'

**Signal Routing Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Merge (Merge)		
Inputs	Number of inputs	string — {'2'}
InitialOutput	Initial output	string — {'[]'}
AllowUnequalInputPortWidths	Allow unequal port widths	string — {'off'}   'on'
InputPortOffsets	Input port offsets	string — {'[]'}
Multiport Switch (MultiPortSwitch)		
DataPortOrder	Data port order	string — 'Zero-based contiguous'   {'One-based contiguous'}   'Specify indices'
Inputs	Number of data ports	string — {'3'}
zeroidx	Deprecated in R2010a	
DataPortIndices	Data port indices	string — {'{1,2,3}'}
DataPortForDefault	Data port for default case	string — {'Last data port'}   'Additional data port'
DiagnosticForDefault	Diagnostic for default case	string — 'None'   'Warning'   {'Error'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
InputSameDT	Require all data port inputs to have the same data type	string — {'off'}   'on'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}

**Signal Routing Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
AllowDiffInputSizes	Allow different data input sizes (Results in variable-size output signal)	string — {'off'}   'on'
<b>Mux (Mux)</b>		
Inputs	Number of inputs	string — {'2'}
DisplayOption	Display option	string — 'none'   'signals'   {'bar'}
UseBusObject	For internal use	
BusObject	For internal use	
NonVirtualBus	For internal use	
<b>Selector (Selector)</b>		
NumberOfDimensions	Number of input dimensions	string — {'1'}

**Signal Routing Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
IndexMode	Index mode	string — 'Zero-based'   {'One-based'}
IndexOptionArray	Index Option	string — 'Select all'   {'Index vector (dialog)'}   'Index vector (port)'   'Starting index (dialog)'   'Starting index (port)'
IndexParamArray	Index	cell array
OutputSizeArray	Output Size	cell array
InputPortWidth	Input port size	string — {'1'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
IndexOptions	See IndexOptionArray parameter for more information.	
Indices	See IndexParamArray parameter for more information.	
OutputSizes	See OutputSizeArray parameter for more information.	
<b>Switch (Switch)</b>		
Criteria	Criteria for passing first input	string — {'u2 >= Threshold'}   'u2 > Threshold'   'u2 ~= 0'
Threshold	Threshold	string — {'0'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}

**Signal Routing Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
InputSameDT	Require all data port inputs to have the same data type	string — {'off'}   'on'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit via internal rule'}   'Inherit: Inherit via back propagation'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
SaturateOnInteger Overflow	Saturate on integer overflow	string — {'off'}   'on'
AllowDiffInputSizes	Allow different input sizes (Results in variable-size output signal)	string — {'off'}   'on'
<b>Vector Concatenate (Concatenate)</b>		
NumInputs	Number of inputs	string — {'2'}
Mode	Mode	string — {'Vector'}   'Multidimensional array'

**Sinks Library Block Parameters**

Block (Type)/Parameter	Dialog Box Prompt	Values
Display (Display)		
Format	Format	string — {'short'}   'long'   'short_e'   'long_e'   'bank'   'hex (Stored Integer)'   'binary (Stored Integer)'   'decimal (Stored Integer)'   'octal (Stored Integer)'
Decimation	Decimation	string — {'1'}
Floating	Floating display	string — {'off'}   'on'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Floating Scope (Scope)		
Floating		string — 'off'   {'on'}
Location		vector — {'[376 294 700 533]'}
Open		string — {'off'}   'on'
NumInputPorts		Do not change this parameter with the command-line. Instead, use the <b>Number of axes</b> parameter in the Scope parameters dialog.
TickLabels		string — 'on'   'off'   {'OneTimeTick'}
ZoomMode		string — {'on'}   'xonly'   'yonly'
AxesTitles		string
Grid		string — 'off'   {'on'}   'xonly'   'yonly'
TimeRange		string — {'auto'}

**Sinks Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
YMin		string — {'-5'}
YMax		string — {'5'}
SaveToWorkspace		string — {'off'}   'on'
SaveName		string — {'ScopeData'}
DataFormat		string — {'StructureWithTime'}   'Structure'   'Array'
LimitDataPoints		string — 'off'   {'on'}
MaxDataPoints		string — {'5000'}
Decimation		string — {'1'}
SampleInput		string — {'off'}   'on'
SampleTime		string — {'0'}
<b>Out1 (Output)</b>		
Port	Port number	string — {'1'}
IconDisplay	Icon display	string — 'Signal name'   {'Port number'}   'Port number and signal name'
BusOutputAsStruct	Output as nonvirtual bus in parent model	string — {'off'}   'on'
PortDimensions	Port dimensions (-1 for inherited)	string — {'-1'}
VarSizeSig	Variable-size signal	string — {'Inherit'}   'No'   'Yes'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Minimum	string — {'[]'}
OutMax	Maximum	string — {'[]'}

**Sinks Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutDataTypeStr	Data type	string — {'Inherit: auto'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'   'Bus: <object name>'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
SignalType	Signal type	string — {'auto'}   'real'   'complex'
SamplingMode	Sampling mode	string — {'auto'}   'Sample based'   'Frame based'
OutputWhenDisabled	Output when disabled	string — {'held'}   'reset'
InitialOutput	Initial output	string — {'[]'}
Scope (Scope)		
Floating		string — {'off'}   'on'
Location		vector — {'[188 390 512 629]'}
Open		string — {'off'}   'on'
NumInputPorts		Do not change this parameter with the command-line. Instead, use the <b>Number of axes</b> parameter in the Scope parameters dialog.
TickLabels		string — 'on'   'off'   {'OneTimeTick'}

**Sinks Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
ZoomMode		string — {'on'}   'xonly'   'yonly'
AxesTitles		string
Grid		string — 'off'   {'on'}   'xonly'   'yonly'
TimeRange		string — {'auto'}
YMin		string — {'-5'}
YMax		string — {'5'}
SaveToWorkspace		string — {'off'}   'on'
SaveName		string — {'ScopeData1'}
DataFormat		string — {'StructureWithTime'}   'Structure'   'Array'
LimitDataPoints		string — 'off'   {'on'}
MaxDataPoints		string — {'5000'}
Decimation		string — {'1'}
SampleInput		string — {'off'}   'on'
SampleTime		string — {'0'}
Stop Simulation		
Terminator		
To File (ToFile)		
FileName	File name	string — {'untitled.mat'}
MatrixName	Variable name	string — {'ans'}
SaveFormat	Save format	string — {'Timeseries'}   'Array'
Decimation	Decimation	string — {'1'}

**Sinks Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
To Workspace (ToWorkspace)		
VariableName	Variable name	string — {'simout'}
MaxDataPoints	Limit data points to last	string — {'inf'}
Decimation	Decimation	string — {'1'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
SaveFormat	Save format	string — {'Timeseries'}   'Structure With Time'   'Structure'   'Array'
FixptAsFi	Log fixed-point data as an fi object	string — {'off'}   'on'
XY Graph (XY scope) (masked subsystem)		
xmin	x-min	string — {'-1'}
xmax	x-max	string — {'1'}
ymin	y-min	string — {'-1'}
ymax	y-max	string — {'1'}
st	Sample time	string — {'-1'}

**Sources Library Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Band-Limited White Noise (Band-Limited White Noise) (masked subsystem)		
Cov	Noise power	string — {'[0.1]'}
Ts	Sample time	string — {'0.1'}
seed	Seed	string — {'[23341]'}
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}

**Sources Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Chirp Signal (chirp) (masked subsystem)		
f1	Initial frequency	string — {'0.1'}
T	Target time	string — {'100'}
f2	Frequency at target time	string — {'1'}
VectorParams1D	Interpret vectors parameters as 1-D	string — 'off'   {'on'}
Clock (Clock)		
DisplayTime	Display time	string — {'off'}   'on'
Decimation	Decimation	string — {'10'}
Constant (Constant)		
Value	Constant value	string — {'1'}
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}
SamplingMode	Sampling mode	string — {'Sample based'}   'Frame based'
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — {'Inherit: Inherit from 'Constant value''}   'Inherit: Inherit via back propagation'   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'

**Sources Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
SampleTime	Sample time	string — {'inf'}
FramePeriod	Frame period	string — {'inf'}
Counter Free-Running (Counter Free-Running) (masked subsystem)		
NumBits	Number of Bits	string — {'16'}
tsamp	Sample time	string — {'-1'}
Counter Limited (Counter Limited) (masked subsystem)		
uplimit	Upper limit	string — {'7'}
tsamp	Sample time	string — {'-1'}
Digital Clock (DigitalClock)		
SampleTime	Sample time	string — {'1'}
Enumerated Constant (EnumeratedConstant)		
OutDataTypeStr	Output data type	string — {'Enum: S1DemoSign'}
Value	Value	string — {'S1DemoSign.Positive'}   'S1DemoSign.Zero'   'S1DemoSign.Negative'
SampleTime	Sample time	string — {'inf'}
From File (FromFile)		
FileName	File name	string — {'untitled.mat'}
ExtrapolationBeforeFirstDataPoint	Extrapolation before first data point	string — {'Linear extrapolation'}   'Hold first value'   'Ground value'

**Sources Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
InterpolationWithinTimeRange	Data interpolation within time range	string — {'Linear interpolation'}   'Zero order hold'
ExtrapolationAfterLastDataPoint	Data extrapolation after last data point	string — {'Linear extrapolation'}   'Hold last value'   'Ground value'
SampleTime	Sample time	string — {'0'}
From Workspace (FromWorkspace)		
VariableName	Data	string — {'simin'}
OutDataTypeStr	Output Data type	string — {'Inherit: auto'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'   'Bus: <object name>'
SampleTime	Sample time	string — {'0'}
Interpolate	Interpolate data	string — 'off'   {'on'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
OutputAfterFinalValue	Form output after final data value by	string — {'Extrapolation'}   'Setting to zero'   'Holding final value'   'Cyclic repetition'
Ground		
In1 (Inport)		
Port	Port number	string — {'1'}

**Sources Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
IconDisplay	Icon display	string — 'Signal name'   {'Port number'}   'Port number and signal name'
BusOutputAsStruct	Output as nonvirtual bus	string — {'off'}   'on'
PortDimensions	Port dimensions (-1 for inherited)	string — {'-1'}
VarSizeSig	Variable-size signal	string — {'Inherit'}   'No'   'Yes'
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
OutMin	Minimum	string — {'[]'}
OutMax	Maximum	string — {'[]'}
OutDataTypeStr	Data type	string — {'Inherit: auto'}   'double'   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'   'Bus: <object name>'
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
SignalType	Signal type	string — {'auto'}   'real'   'complex'
SamplingMode	Sampling mode	string — {'auto'}   'Sample based'   'Frame based'
LatchByDelaying OutsideSignal	Latch input by delaying outside signal	string — {'off'}   'on'

**Sources Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
LatchInputFor FeedbackSignals	Latch input for feedback signals of function-call subsystem outputs	string — {'off'}   'on'
OutputFunctionCall	Output a function-call trigger signal	string — {'off'}   'on'
Interpolate	Interpolate data	string — 'off'   {'on'}
<b>Pulse Generator (DiscretePulseGenerator)</b>		
PulseType	Pulse type	string — {'Time based'}   'Sample based'
TimeSource	Time (t)	string — {'Use simulation time'}   'Use external signal'
Amplitude	Amplitude	string — {'1'}
Period	Period	string — {'10'}
PulseWidth	Pulse width	string — {'5'}
PhaseDelay	Phase delay	string — {'0'}
SampleTime	Sample time	string — {'1'}
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}
<b>Ramp (Ramp) (masked subsystem)</b>		
slope	Slope	string — {'1'}
start	Start time	string — {'0'}
X0	Initial output	string — {'0'}
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}
<b>Random Number (RandomNumber)</b>		
Mean	Mean	string — {'0'}

**Sources Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Variance	Variance	string — {'1'}
Seed	Seed	string — {'0'}
SampleTime	Sample time	string — {'0.1'}
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}
Repeating Sequence (Repeating table) (masked subsystem)		
rep_seq_t	Time values	string — {'[0 2]'}
rep_seq_y	Output values	string — {'[0 2]'}
Repeating Sequence Interpolated (Repeating Sequence Interpolated) (masked subsystem)		
OutValues	Vector of output values	string — {'[3 1 4 2 1].''}
TimeValues	Vector of time values	string — {'[0 0.1 0.5 0.6 1].''}
LookUpMeth	Lookup Method	string — {'Interpolation-Use End Values'}   'Use Input Nearest'   'Use Input Below'   'Use Input Above'
tsamp	Sample time	string — {'0.01'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — 'Inherit: Inherit via back propagation'   {'double'}   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'

**Sources Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
OutputDataTypeScaling Mode	Deprecated in R2007b	
OutDataType	Deprecated in R2007b	
OutScaling	Deprecated in R2007b	
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
Repeating Sequence Stair (Repeating Sequence Stair) (masked subsystem)		
OutValues	Vector of output values	string — {'[3 1 4 2 1].'}'
tsamp	Sample time	string — {'-1'}
OutMin	Output minimum	string — {'[]'}
OutMax	Output maximum	string — {'[]'}
OutDataTypeStr	Output data type	string — 'Inherit: Inherit via back propagation'   {'double'}   'single'   'int8'   'uint8'   'int16'   'uint16'   'int32'   'uint32'   'boolean'   'fixdt(1,16)'   'fixdt(1,16,0)'   'fixdt(1,16,2^0,0)'   'Enum: <class name>'
OutputDataTypeScaling Mode	Deprecated in R2007b	
OutDataType	Deprecated in R2007b	
ConRadixGroup	Deprecated in R2007b	
OutScaling	Deprecated in R2007b	
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'

**Sources Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Signal Builder (Sigbuilder block) (masked subsystem)		
Signal Generator (SignalGenerator)		
WaveForm	Wave form	string — {'sine'}   'square'   'sawtooth'   'random'
TimeSource	Time (t)	string — {'Use simulation time'}   'Use external signal'
Amplitude	Amplitude	string — {'1'}
Frequency	Frequency	string — {'1'}
Units	Units	string — 'rad/sec'   {'Hertz'}
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}
Sine Wave (Sin)		
SineType	Sine type	string — {'Time based'}   'Sample based'
TimeSource	Time	string — {'Use simulation time'}   'Use external signal'
Amplitude	Amplitude	string — {'1'}
Bias	Bias	string — {'0'}
Frequency	Frequency	string — {'1'}
Phase	Phase	string — {'0'}
Samples	Samples per period	string — {'10'}
Offset	Number of offset samples	string — {'0'}
SampleTime	Sample time	string — {'0'}

**Sources Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}
Step (Step)		
Time	Step time	string — {'1'}
Before	Initial value	string — {'0'}
After	Final value	string — {'1'}
SampleTime	Sample time	string — {'0'}
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}
ZeroCross	Enable zero-crossing detection	string — 'off'   {'on'}
Uniform Random Number (UniformRandomNumber)		
Minimum	Minimum	string — {'-1'}
Maximum	Maximum	string — {'1'}
Seed	Seed	string — {'0'}
SampleTime	Sample time	string — {'0.1'}
VectorParams1D	Interpret vector parameters as 1-D	string — 'off'   {'on'}

**User-Defined Functions Library Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
MATLAB Function (Stateflow) (masked subsystem)		
MATLAB System (MATLABSystem)		
System	System object class name	string — {' '}
Fcn (Fcn)		
Expr	Expression	string — {'sin(u(1)*exp(2.3*(-u(2))))'}

**User-Defined Functions Library Block Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
Level-2 MATLAB S-Function (M-S-Function)		
FunctionName	S-function name	string — {'mlfile'}
Parameters	Parameters	string — {''}
Interpreted MATLAB Function (MATLABFcn)		
MATLABFcn	MATLAB function	string — {'sin'}
OutputDimensions	Output dimensions	string — {'-1'}
OutputSignalType	Output signal type	string — {'auto'}   'real'   'complex'
Output1D	Collapse 2-D results to 1-D	string — 'off'   {'on'}
SampleTime	Sample time (-1 for inherited)	string — {'-1'}
S-Function (S-Function)		
FunctionName	S-function name	string — {'system'}
Parameters	S-function parameters	string — {''}
SFunctionModules	S-function modules	string — {''}
S-Function Builder (S-Function Builder) (masked subsystem)		
FunctionName	S-function name	string — {'system'}
Parameters	S-function parameters	string — {''}
SFunctionModules	S-function modules	string — {''}

**Additional Discrete Block Library Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Fixed-Point State-Space (Fixed-Point State-Space) (masked subsystem)		
A	State Matrix A	string — {'[2.6020 -2.2793 0.6708; 1 0 0; 0 1 0]'} }
B	Input Matrix B	string — {'[ 1; 0; 0]'} }
C	Output Matrix C	string — {'[0.0184 0.0024 0.0055]'} }
D	Direct Feedthrough Matrix D	string — {'[0.0033]'} }
X0	Initial condition for state	string — {'0.0'}
InternalDataType	Data type for internal calculations	string — {'fixdt('double')} }
StateEqScaling	Scaling for State Equation AX+BU	string — {'2^0'}
OutputEqScaling	Scaling for Output Equation CX+DU	string — {'2^0'}
LockScale	Lock output data type setting against changes by the fixed-point tools	string — {'off'}   'on'
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
DoSatur	Saturate to max or min when overflows occur	string — {'off'}   'on'
Transfer Fcn Direct Form II (Transfer Fcn Direct Form II) (masked subsystem)		
NumCoefVec	Numerator coefficients	string — {'[0.2 0.3 0.2]'} }
DenCoefVec	Denominator coefficients excluding lead (which must be 1.0)	string — {'[-0.9 0.6]'} }
vinit	Initial condition	string — {'0.0'}

**Additional Discrete Block Library Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
DoSatur	Saturate to max or min when overflows occur	string — {'off'}   'on'
Transfer Fcn Direct Form II Time Varying (Transfer Fcn Direct Form II Time Varying) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
RndMeth	Integer rounding mode	string — 'Ceiling'   'Convergent'   {'Floor'}   'Nearest'   'Round'   'Simplest'   'Zero'
DoSatur	Saturate to max or min when overflows occur	string — {'off'}   'on'
Unit Delay Enabled (Unit Delay Enabled) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
tsamp	Sample time	string — {'-1'}
Unit Delay Enabled External IC (Unit Delay Enabled External Initial Condition) (masked subsystem)		
tsamp	Sample time	string — {'-1'}
Unit Delay Enabled Resettable (Unit Delay Enabled Resettable) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
tsamp	Sample time	string — {'-1'}
Unit Delay Enabled Resettable External IC (Unit Delay Enabled Resettable External Initial Condition) (masked subsystem)		
tsamp	Sample time	string — {'-1'}
Unit Delay External IC (Unit Delay External Initial Condition) (masked subsystem)		

**Additional Discrete Block Library Parameters (Continued)**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
tsamp	Sample time	string — {'-1'}
Unit Delay Resetable (Unit Delay Resetable) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
tsamp	Sample time	string — {'-1'}
Unit Delay Resetable External IC (Unit Delay Resetable External Initial Condition) (masked subsystem)		
tsamp	Sample time	string — {'-1'}
Unit Delay With Preview Enabled (Unit Delay With Preview Enabled) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
tsamp	Sample time	string — {'-1'}
Unit Delay With Preview Enabled Resetable (Unit Delay With Preview Enabled Resetable) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
tsamp	Sample time	string — {'-1'}
Unit Delay With Preview Enabled Resetable External RV (Unit Delay With Preview Enabled Resetable External RV) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
tsamp	Sample time	string — {'-1'}
Unit Delay With Preview Resetable (Unit Delay With Preview Resetable) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
tsamp	Sample time	string — {'-1'}
Unit Delay With Preview Resetable External RV (Unit Delay With Preview Resetable External RV) (masked subsystem)		
vinit	Initial condition	string — {'0.0'}
tsamp	Sample time	string — {'-1'}

**Additional Math: Increment - Decrement Block Parameters**

<b>Block (Type)/Parameter</b>	<b>Dialog Box Prompt</b>	<b>Values</b>
Decrement Real World (Real World Value Decrement) (masked subsystem)		
Decrement Stored Integer (Stored Integer Value Decrement) (masked subsystem)		
Decrement Time To Zero (Decrement Time To Zero) (masked subsystem)		
Decrement To Zero (Decrement To Zero) (masked subsystem)		
Increment Real World (Real World Value Increment) (masked subsystem)		
Increment Stored Integer (Stored Integer Value Increment) (masked subsystem)		

## Mask Parameters

### About Mask Parameters

This section lists parameters that describe masked blocks. You can use these descriptive parameters with `get_param` and `set_param` to obtain and specify the properties of a block mask.

The descriptive mask parameters listed in this section apply to all masks, and provide access to all mask properties. Be careful not to confuse these descriptive mask parameters with the mask-specific parameters defined for an individual mask in the Mask Editor **Parameters** pane.

See “What Are Masks?” and “Masking” for information about block masks and the Mask Editor.

### Mask Parameters

Parameter	Description/Prompt	Values
Mask	Turns mask on or off.	{ 'on' }   'off'
MaskCallbackString	Mask parameter callbacks that are executed when the respective parameter is changed on the dialog. Set by the <b>Dialog callback</b> field on the <b>Parameters</b> pane of the Mask Editor dialog box.	pipe-delimited string { ' ' }
MaskCallbacks	Cell array version of MaskCallbackString.	cell array { ' []' }
MaskDescription	Block description. Set by the <b>Mask description</b> field on the <b>Documentation</b> pane of the Mask Editor dialog box.	string { ' ' }

**Mask Parameters (Continued)**

<b>Parameter</b>	<b>Description/Prompt</b>	<b>Values</b>
MaskDisplay	Drawing commands for the block icon. Set by the <b>Icon Drawing commands</b> field on the <b>Icon &amp; Ports</b> pane of the Mask Editor dialog box.	string { '' }
MaskEditorHandle	For internal use only.	
MaskEnableString	Option that determines whether a parameter is greyed out in the dialog. Set by the <b>Enable parameter</b> check box on the <b>Parameters</b> pane of the Mask Editor dialog box.	pipe-delimited string { '' }
MaskEnables	Cell array version of MaskEnableString.	cell array of strings, each either 'on' or 'off' { '[]' }
MaskHelp	Block help. Set by the <b>Mask help</b> field on the <b>Documentation</b> pane of the Mask Editor dialog box.	string { '' }
MaskIconFrame	Set the visibility of the icon frame (Visible is on, Invisible is off). Set by the <b>Block Frame</b> option on the <b>Icon &amp; Ports</b> pane of the Mask Editor dialog box.	{ 'on' }   'off'
MaskIconOpaque	Set the transparency of the icon (Opaque is on, Transparent is off). Set by the <b>Icon Transparency</b> option on the <b>Icon &amp; Ports</b> pane of the Mask Editor dialog box.	{ 'on' }   'off'

**Mask Parameters (Continued)**

<b>Parameter</b>	<b>Description/Prompt</b>	<b>Values</b>
MaskIconRotate	Set the rotation of the icon (Rotates is on, Fixed is off). Set by the <b>Icon Rotation</b> option on the <b>Icon &amp; Ports</b> pane of the Mask Editor dialog box.	'on'   {'off'}
MaskIconUnits	Set the units for the drawing commands. Set by the <b>Icon Units</b> option on the <b>Icon &amp; Ports</b> pane of the Mask Editor dialog box.	'pixel'   {'autoscale'}   'normalized'
MaskInitialization	Initialization commands. Set by the <b>Initialization commands</b> field on the <b>Initialization</b> pane of the Mask Editor dialog box.	MATLAB command {''}
MaskNames	Cell array of mask dialog parameter names. Set inside the <b>Variable</b> column in the <b>Parameters</b> pane of the Mask Editor dialog box.	matrix {'[[']}
MaskPortRotate	Specify the port rotation policy for the masked block. Set in the <b>Port Rotation</b> area on the <b>Icon &amp; Ports</b> pane of the Mask Editor dialog box.  For more information, see “Change the Appearance of a Block” in the Simulink documentation.	{'default'}   'physical'

**Mask Parameters (Continued)**

<b>Parameter</b>	<b>Description/Prompt</b>	<b>Values</b>
MaskPrompts	List of dialog parameter prompts (see below). Set inside the <b>Dialog parameters</b> area on the <b>Parameters</b> pane of the Mask Editor dialog box.	cell array of strings {' []'}
MaskPromptString	List of dialog parameter prompts (see below). Set inside the <b>Dialog parameters</b> area on the <b>Parameters</b> pane of the Mask Editor dialog box.	string {' '}
MaskPropertyNameString	Pipe-delimited version of MaskNames.	string {' '}
MaskRunInitForIconRedraw	For internal use only.	
MaskSelfModifiable	Indicates that the block can modify itself. Set by the <b>Allow library block to modify its contents</b> check box on the <b>Initialization</b> pane of the Mask Editor dialog box.	'on'   {'off'}
MaskStyles	Determines whether the dialog parameter is a check box, edit field, or pop-up list. Set by the <b>Type</b> column in the <b>Parameters</b> pane of the Mask Editor dialog box.	cell array {' []'}
MaskStyleString	Comma-separated version of MaskStyles.	string {' '}
MaskTabNameString	For internal use only.	
MaskTabNames	For internal use only.	

**Mask Parameters (Continued)**

<b>Parameter</b>	<b>Description/Prompt</b>	<b>Values</b>
MaskToolTipsDisplay	Determines which mask dialog parameters to display in the data tip for this masked block (see "Block Data Tips" in the Simulink documentation). Specify as a cell array of 'on' or 'off' values, each of which indicates whether to display the parameter named at the corresponding position in the cell array returned by MaskNames.	cell array of 'on' and 'off' {}
MaskToolTipString	Comma-delimited version of MaskToolTipsDisplay.	string { ' ' }
MaskTunableValues	Allows the changing of mask dialog values during simulation. Set by the <b>Tunable</b> column in the <b>Parameters</b> pane of the Mask Editor dialog box.	cell array of strings { ' [ ] ' }
MaskTunableValueString	Comma-delimited string version of MaskTunableValues.	delimited string { ' ' }
MaskType	Mask type. Set by the <b>Mask type</b> field on the <b>Documentation</b> pane of the Mask Editor dialog box.	string { 'Stateflow' }
MaskValues	Dialog parameter values.	cell array { ' [ ] ' }
MaskValueString	Delimited string version of MaskValues.	delimited string { ' ' }

**Mask Parameters (Continued)**

<b>Parameter</b>	<b>Description/Prompt</b>	<b>Values</b>
MaskVarAliases	Specify aliases for a block's mask parameters. The aliases must appear in the same order as the parameters appear in the block's MaskValues parameter.	cell array { ' []' }
MaskVarAliasString	For internal use only.	
MaskVariables	List of the dialog parameters' variables (see below). Set inside the <b>Dialog parameters</b> area on the <b>Parameters</b> pane of the Mask Editor dialog box.	string { ' ' }
MaskVisibilities	Specifies visibility of parameters. Set with the <b>Show parameter</b> check box in the <b>Options for selected parameter</b> area on the <b>Parameters</b> pane of the Mask Editor dialog box.	matrix { ' []' }
MaskVisibilityString	Delimited string version of MaskVisibilities.	string { ' ' }
MaskWSVariables	List of the variables defined in the mask workspace (read only).	matrix { ' []' }

See Control Masks Programmatically, for more information on setting the mask parameters from the MATLAB command line.

# Simulink Identifier

---

## Simulink Identifier

A Simulink Identifier (SID) is a unique identifier automatically assigned to a Simulink block, model annotation, or a Stateflow object within a Stateflow chart. The SID has the following characteristics:

- Persistent within the lifetime of a Simulink block, model annotation, or Stateflow object.
- Saved in the model file.
- If the name of a block or object changes, the SID remains the same.
- You cannot modify the SID.

The SID format is

`model_name:sid_number`

where

- `model_name` is the name of the model where the block, annotation, or object resides
- `sid_number` is a unique number within the model, assigned by Simulink

# Model Advisor Checks

---

## Simulink Checks

<b>In this section...</b>
“Simulink Check Overview” on page 9-5
“Identify unconnected lines, input ports, and output ports” on page 9-7
“Check root model Inport block specifications” on page 9-8
“Check optimization settings” on page 9-9
“Check for parameter tunability information ignored for referenced models” on page 9-12
“Check for implicit signal resolution” on page 9-13
“Check for optimal bus virtuality” on page 9-14
“Check for Discrete-Time Integrator blocks with initial condition uncertainty” on page 9-15
“Identify disabled library links” on page 9-16
“Identify parameterized library links” on page 9-17
“Identify unresolved library links” on page 9-18
“Identify model reference variants and variant subsystems that override variant choice” on page 9-19
“Identify configurable subsystem blocks for converting to variant subsystem blocks” on page 9-20
“Check usage of function-call connections” on page 9-20
“Check signal logging save format” on page 9-21
“Check Data Store Memory blocks for multitasking, strong typing, and shadowing issues” on page 9-23
“Check if read/write diagnostics are enabled for data store blocks” on page 9-25
“Check data store block sample times for modeling errors” on page 9-27
“Check for potential ordering issues involving data store access” on page 9-28
“Check for partial structure parameter usage with bus signals” on page 9-30

**In this section...**

“Check for calls to `slDataTypeAndScale`” on page 9-32

“Check bus usage” on page 9-34

“Check for potentially delayed function-call subsystem return values” on page 9-36

“Identify block output signals with continuous sample time and non-floating point data type” on page 9-37

“Check usage of Merge blocks” on page 9-38

“Check consistency of initialization parameters for Outport and Merge blocks” on page 9-39

“Check for non-continuous signals driving derivative ports” on page 9-57

“Runtime diagnostics for S-functions” on page 9-59

“Check file for foreign characters” on page 9-61

“Check model for known block upgrade issues” on page 9-66

“Check model for known block upgrade issues requiring compile time information” on page 9-67

“Check that the model is saved in SLX format” on page 9-70

“Check Model History properties” on page 9-72

“Check for Mux blocks used to create bus signals” on page 9-73

“Check model and local libraries for legacy Aerospace Blockset blocks” on page 9-74

“Check and update masked blocks in library to use promoted parameters” on page 9-75

“Check and update mask image display commands with unnecessary `imread()` function calls” on page 9-75

“Identify masked blocks that specify tabs in mask dialog using `MaskTabNames` parameter” on page 9-77

“Identify questionable operations for strict single-precision design” on page 9-78

“Check `get_param` calls for block `CompiledSampleTime`” on page 9-79

**In this section...**

“Check Rapid Accelerator signal logging” on page 9-81

“Check for root outports with constant sample time” on page 9-82

“Analyze model hierarchy and continue upgrade sequence” on page 9-83

## **Simulink Check Overview**

Use the Simulink Model Advisor checks to configure your model for simulation.

### **See Also**

- “Consult the Model Advisor”.
- “Simulink Coder Checks”.
- “Simulink Verification and Validation Checks”.



## Identify unconnected lines, input ports, and output ports

Check for unconnected lines or ports.

### Description

This check lists unconnected lines or ports. These can have difficulty propagating signal attributes such as data type, sample time, and dimensions.

---

**Note** Ports connected to ground/terminator blocks will pass this test.

---

### Results and Recommended Actions

Condition	Recommended Action
Lines, input ports, or output ports are unconnected.	Connect the signals. Double-click the list of unconnected items to locate failure.

### Capabilities and Limitations

You can run this check on your library models.

### Tips

Use the PortConnectivity command to obtain an array of structures describing block input or output ports.

### See Also

“Common Block Properties” on page 7-100 for information on the PortConnectivity command.

## Check root model Inport block specifications

Check that root model Inport blocks fully define dimensions, sample time, and data type.

### Description

Using root model Inport blocks that do not fully define dimensions, sample time, or data type can lead to undesired simulation results. Simulink software back-propagates dimensions, sample times and data types from downstream blocks unless you explicitly assign them values.

### Results and Recommended Actions

Condition	Recommended Action
Root-level Inport blocks have undefined attributes.	Fully define the attributes of the root-level Inport blocks.

### See Also

- “Data Types”.
- “Determine Output Signal Dimensions”.
- “Specify Sample Time”.

## Check optimization settings

Check for optimizations that can lead to nonoptimal code generation and simulation.

### Description

This check reviews the status of optimizations that can improve code efficiency and simulation time.

### Results and Recommended Actions

Condition	Recommended Action
<p>The specified optimizations are off.</p>	<p>Select the following optimization check boxes on the <b>Optimization</b> pane in the Configuration Parameters dialog box:</p> <ul style="list-style-type: none"> <li>• “Block reduction”</li> <li>• “Conditional input branch execution”</li> <li>• “Implement logic signals as Boolean data (vs. double)”</li> <li>• “Remove root level I/O zero initialization”</li> <li>• “Remove internal data zero initialization”</li> <li>• “Use memset to initialize floats and doubles to 0.0”</li> <li>• “Remove code from floating-point to integer conversions that wraps out-of-range values” (only if you have a Simulink Coder license)</li> </ul> <p>Select the following optimization check boxes on the <b>Optimization &gt; Signals and Parameters</b> pane in the Configuration Parameters dialog box:</p> <ul style="list-style-type: none"> <li>• “Inline parameters”</li> <li>• “Enable local block outputs”</li> <li>• “Reuse local block outputs”</li> </ul>

Condition	Recommended Action
	<ul style="list-style-type: none"> <li>• <b>“Eliminate superfluous local variables (Expression folding)”</b></li> <li>• <b>“Inline invariant signals”</b> (only if you have a Simulink Coder license)</li> </ul> <p>Select the following optimization check boxes on the <b>Optimization &gt; Stateflow</b> pane in the Configuration Parameters dialog box:</p> <ul style="list-style-type: none"> <li>• <b>“Use bitsets for storing state configuration”</b></li> <li>• <b>“Use bitsets for storing Boolean data”</b></li> </ul>
<p><b>“Application lifespan (days)”</b> is set as infinite. This could lead to expensive 64-bit counter usage.</p>	<p>Choose a stop time if this is not intended.</p>
<p>The specified diagnostics, which can increase the time it takes to simulate your model, are set to warning or error.</p>	<p>Select none for:</p> <ul style="list-style-type: none"> <li>• <b>Diagnostics &gt; Solver &gt; Solver data inconsistency</b></li> <li>• <b>Diagnostics &gt; Data Validity &gt; Array bounds exceeded</b></li> <li>• <b>Diagnostics &gt; Data Validity &gt; Simulation range checking</b></li> </ul>
<p>The specified Embedded Coder parameters are off.</p>	<p>If you have an Embedded Coder license, and you are using an ERT-based system target file, select the following check boxes:</p> <ul style="list-style-type: none"> <li>• <b>Code Generation &gt; Interface &gt; “Single output/update function”</b></li> <li>• <b>Code Generation &gt; General &gt; “Ignore test point signals”</b></li> <li>• <b>Optimization &gt; “Pass reusable subsystem outputs as”</b></li> </ul>

**Tips**

If the system contains Model blocks and the referenced model is in Accelerator mode, simulating the model requires generating and compiling code.

**See Also**

- “Optimization Pane: General”.

## Check for parameter tunability information ignored for referenced models

Checks if parameter tunability information is included in the Model Parameter Configuration dialog box.

### Description

Simulink software ignores tunability information specified in the Model Parameter Configuration dialog box. This check identifies those models containing parameter tunability information that Simulink software will ignore if the model is referenced by other models.

### Results and Recommended Actions

Condition	Recommended Action
Model contains ignored parameter tunability information.	Click the links to convert to equivalent Simulink parameter objects in the MATLAB workspace.

### See Also

“Parameters”.

## Check for implicit signal resolution

Identify models that attempt to resolve named signals and states to Simulink.Signal objects.

### Description

Requiring Simulink software to resolve all named signals and states is inefficient and slows incremental code generation and model reference. This check identifies those signals and states for which you may turn off implicit signal resolution and enforce resolution.

### Results and Recommended Actions

Condition	Recommended Action
Not all signals and states are resolved.	Turn off implicit signal resolution and enforce resolution for each signal and state that does resolve.

### See Also

“Resolve Signal Objects for Output Data”.

## Check for optimal bus virtuality

Identify virtual buses that could be made nonvirtual. Making these buses nonvirtual improves generated code efficiency.

### Description

This check identifies blocks incorporating virtual buses that cross a subsystem boundary. Changing these to nonvirtual improves generated code efficiency.

### Results and Recommended Actions

Condition	Recommended Action
Blocks that specify a virtual bus crossing a subsystem boundary.	Change the highlighted bus to nonvirtual.

### Capabilities and Limitations

You can run this check on your library models.

### See Also

- “Signal Basics”.
- “Virtual and Nonvirtual Buses”.

## Check for Discrete-Time Integrator blocks with initial condition uncertainty

Identify Discrete-Time Integrator blocks with state ports and initial condition ports that are fed by neither an Initial Condition nor a Constant block.

### Description

Discrete-Time Integrator blocks with state port and initial condition ports might not be suitably initialized unless they are fed from an Initial Condition or Constant block. This is more likely to happen when Discrete-Time Integrator blocks are used to model second-order or higher-order dynamic systems.

### Results and Recommended Actions

Condition	Recommended Action
Discrete-Time Integrator blocks are not initialized during the model initialization phase.	Add a Constant or Initial Condition block to feed the external Initial Condition port.

### Capabilities and Limitations

You can run this check on your library models.

### See Also

- IC block
- Discrete-Time Integrator block
- Constant block

## Identify disabled library links

Search model for disabled library links.

### Description

Disabled library links can cause unexpected simulation results. Resolve disabled links before saving a model.

---

**Note** This check may overlap with “Check model for known block upgrade issues” on page 9-66.

---

### Results and Recommended Actions

Condition	Recommended Action
Library links are disabled.	Use <code>Restore Link</code> from the <code>Link Options</code> setting in the context menu.

### Capabilities and Limitations

You can run this check on your library models.

### Tips

- Use the Model Browser to find library links.
- To enable a broken link, right-click a block in your model to display the context menu. Choose `Link Options` and click `Restore Link`.

### See Also

“Restore Disabled or Parameterized Links”.

## Identify parameterized library links

Search model for parameterized library links.

### Description

Parameterized library links that are unintentional can result in unexpected parameter settings in your model. This can result in improper model operation.

### Results and Recommended Actions

Condition	Recommended Action
Parameterized links are listed.	Verify that the links are intended to be parameterized.

### Capabilities and Limitations

You can run this check on your library models.

### Tips

- Right-click a block in your model to display the context menu. Choose **Link Options** and click **Go To Library Block** to see the original block from the library.
- To parameterize a library link, choose **Look Under Mask**, from the context menu and select the parameter.

### See Also

“Restore Disabled or Parameterized Links”.

## Identify unresolved library links

Search the model for unresolved library links, where the specified library block cannot be found.

### Description

Check for unresolved library links. Models do not simulate while there are unresolved library links.

### Results and Recommended Actions

Condition	Recommended Action
Library links are unresolved.	Locate missing library block or an alternative.

### Capabilities and Limitations

You can run this check on your library models.

### See Also

“Fix Unresolved Library Links”

## Identify model reference variants and variant subsystems that override variant choice

Identify model or subsystem for model reference variants and variant subsystems that specify variant choice using the override option instead of using the active variant object.

### Results and Recommended Actions

Condition	Recommended Action
Model reference variants or variant subsystems that override variant choice are identified.	Specify variant choice using active variant object.

### Capabilities and Limitations

You can run this check on your library models.

### See Also

“Set and Open Active Variants”

## Identify configurable subsystem blocks for converting to variant subsystem blocks

Search the model to identify configurable subsystem blocks at the model or subsystem level.

### Results and Recommended Actions

Condition	Recommended Action
Configurable subsystem blocks are identified.	Convert these blocks to variant subsystem blocks to avoid compatibility issues. See “Convert Subsystem Blocks to Variant Subsystem Blocks”

### Capabilities and Limitations

You can run this check on your library models.

### See Also

“Set Up Model Variants”

## Check usage of function-call connections

Check model diagnostic settings that apply to function-call connectivity and that might impact model execution.

### Description

Check for connectivity diagnostic settings that might lead to non-deterministic model execution.

## Results and Recommended Actions

Condition	Recommended Action
<b>Diagnostics &gt; Connectivity &gt; Invalid function-call connection</b> is set to none or warning. This might lead to non-deterministic model execution.	Set <b>Diagnostics &gt; Connectivity &gt; Invalid function-call connection</b> to error.
<b>Diagnostic &gt; Connectivity &gt; Context-dependent inputs</b> is set to Disable All or Use local settings. This might lead to non-deterministic model execution.	Set <b>Diagnostics &gt; Connectivity &gt; Context-dependent inputs</b> to Enable all as errors.

### See Also

Function-Call Subsystem

## Check signal logging save format

Check signal logging save format.

### Description

Check signal logging save format. The signal logging save format ModelDataLogs will be removed in a future release. To take advantage of new functionality, update models using ModelDataLogs format to use Dataset format.

## Results and Recommended Actions

Condition	Recommended Action
The model has the signal logging format set to Dataset.	No action required.
The model has the signal logging format set to ModelDataLogs.	Use the Upgrade Advisor (with the <code>upgradeadvisor</code> function) to upgrade a model to use Dataset format. Enable the <b>Check signal logging save format</b> check, run the check, and click the <b>Update format</b> button.
The model contains Model blocks. Models in the model reference hierarchy require the same signal logging save format.	Use the Upgrade Advisor (with the <code>upgradeadvisor</code> function) to upgrade a model to use Dataset format. Enable the <b>Check signal logging save format</b> check, run the check, and click the <b>Update format</b> button.

### See Also

“Specify the Signal Logging Data Format”

## Check Data Store Memory blocks for multitasking, strong typing, and shadowing issues

Look for modeling issues related to Data Store Memory blocks.

### Description

Checks for multitasking data integrity, strong typing, and shadowing of data stores of higher scope.

### Results and Recommended Actions

Condition	Recommended Action
The <b>Duplicate data store names</b> check is set to none or warning.	Consider setting the “Duplicate data store names” check to error in the Configuration Parameters dialog box, on the <b>Diagnostics &gt; Data Validity</b> pane.
The data store variable names are not strongly typed in one of the following: <ul style="list-style-type: none"> <li>• <b>Signal Attributes</b> pane of the <b>Block Parameters</b> dialog for the Date Store Memory block</li> <li>• Global data store name</li> </ul>	Specify a data type other than auto by taking one of the following actions: <ul style="list-style-type: none"> <li>• Choose a data type other than Inherit: auto on the <b>Signal Attributes</b> pane of the <b>Block Parameters</b> dialog for the Date Store Memory block.</li> <li>• If you are using a global data store name, then specify its data type in the Simulink.Signal object.</li> </ul>
The <b>Multitask data store</b> check is set to none or warning.	Consider setting the “Multitask data store” check to error in the Configuration Parameters dialog box, on the <b>Diagnostics &gt; Data Validity</b> pane.

### See Also

- “About Data Stores”
- “Storage Classes for Data Store Memory Blocks”

- Data Store Memory
- Data Store Read
- Data Store Write
- “Duplicate data store names”
- “Multitask data store”

## Check if read/write diagnostics are enabled for data store blocks

For data store blocks in the model, enable the read-and-write diagnostics order checking to detect run-time issues.

### Description

Check for the read-and-write diagnostics order checking. By enabling the read-and-write diagnostics, you detect potential run-time issues.

### Results and Recommended Actions

Condition	Recommended Action
The <b>Detect read before write</b> check is disabled.	Consider enabling “Detect read before write” in the Configuration Parameter dialog box <b>Diagnostics&gt;Data Validity</b> pane.
The <b>Detect write after read</b> check is disabled.	Consider enabling “Detect write after read” in the Configuration Parameter dialog box <b>Diagnostics&gt;Data Validity</b> pane.
The <b>Detect write after write</b> check is disabled.	Consider enabling “Detect write after write” in the Configuration Parameter dialog box <b>Diagnostics&gt;Data Validity</b> pane.

### Tips

- The run-time diagnostics can slow simulations down considerably. Once you have verified that Simulink does not generate warnings or errors during simulation, set them to **Disable all**.

### See Also

- “About Data Stores”

- Data Store Memory
- Data Store Read
- Data Store Write
- “Detect read before write”
- “Detect write after read”
- “Detect write after write”
- “Check for potential ordering issues involving data store access” on page 9-28

## Check data store block sample times for modeling errors

Identify modeling errors due to the sample times of data store blocks.

### Description

Check data store blocks for continuous or fixed-in-minor-step sample times.

### Results and Recommended Actions

Condition	Recommended Action
Data store blocks in your model have continuous or fixed-in-minor-step sample times.	Consider making the listed blocks discrete or replacing them with either Memory or Goto and From blocks.

### See Also

- “About Data Stores”
- Data Store Memory
- Data Store Read
- Data Store Write
- “Fixed-in-Minor-Step”

## Check for potential ordering issues involving data store access

Look for read/write issues which may cause inaccuracies in the results.

### Description

During an **Update Diagram**, identify potential issues relating to read-before-write, write-after-read, and write-after-write conditions for data store blocks.

### Results and Recommended Actions

Condition	Recommended Action
Reading and writing (read-before-write or write-after-read condition) occur out of order.	Consider restructuring your model so that the Data Store Read block executes before the Data Store Write block.
Multiple writes occur within a single time step.	Change the model to write data only once per time step or refer to the following Tips section.

### Tips

This check performs a static analysis which might not identify every instance of improper usage. Specifically, Function-Call Subsystems, Stateflow Charts, MATLAB for code generation, For Iterator Subsystems, and For Each Subsystems can cause both missed detections and false positives. For a more comprehensive check, consider enabling the following diagnostics on the **Diagnostics > Data Validity** pane in the Configuration Parameters dialog box: “Detect read before write”, “Detect write after read”, and “Detect write after write”.

### See Also

- “About Data Stores”
- Data Store Memory
- Data Store Read

- Data Store Write
- “Detect read before write”
- “Detect write after read”
- “Detect write after write”

## Check for partial structure parameter usage with bus signals

Identify blocks that use partial structures as parameter values for bus signals.

### Description

This check compares structures that provide parameter values for bus signals, to identify partial structures. This check returns a table listing the:

- Paths to blocks that use partial structures as parameter values for bus signals
- Names the block parameters that use the partial structure

For all data stores that you define with a `Simulink.Signal` object that uses a partial structure for its **Initial value** parameter, this check lists the following information, in a second table:

- Name of the signal object
- Workspace (MATLAB or model) of the signal object
- Name of the signal object parameter that uses the partial structure

### Results and Recommended Actions

Condition	Recommended Action
Block using partial structure	Consider using the <code>Simulink.Bus.createMATLABStructure</code> function to convert a partial structure parameter to a full structure of parameter values for the listed blocks.
Signal objects using partial structure	Consider using the <code>Simulink.Bus.createMATLABStructure</code> function to convert a partial structure parameter to a full structure of parameter values for the listed signals.

**Tips**

- Specifying *partial* structures for block parameter values can be useful during the iterative process of creating a model. You can use partial structures to focus on a subset of signals in a bus.
- Specifying *full* structures for code generation offers these advantages:
  - Generated code is more readable than the code generated for partial structures.
  - Supports a modeling style that explicitly initializes unspecified signals. When you use partial structures, Simulink initializes unspecified signals implicitly.

**See Also**

- “Specify Initial Conditions for Bus Signals”
- “Data Stores with Signal Objects”
- `Simulink.Bus.createMATLABStruct`
- `Simulink.Signal`

## Check for calls to `s1DataTypeAndScale`

Identify calls to the internal function `s1DataTypeAndScale`.

### Description

In some previous versions of Simulink, opening a model that had been saved in an earlier version triggers an automatic upgrade to code for data type handling. The automatic upgrade inserts calls to the internal function `s1DataTypeAndScale`. Although Simulink continues to support some uses of the function, if you eliminate calls to it, you get cleaner and faster code.

Simulink does not support calls to `s1DataTypeAndScale` when:

- The first argument is a `Simulink.AliasType` object.
- The first argument is a `Simulink.NumericType` object with property `IsAlias` set to true.

Running **Check for calls to `s1DataTypeAndScale`** identifies calls to `s1DataTypeAndScale` that are required or recommended for replacement. In most cases, running the check and following the recommended action removes the calls. You can ignore calls that remain. Run the check unless you are sure there are not calls to `s1DataTypeAndScale`.

### Results and Recommended Actions

Condition	Recommended Action
Required Replacement Cases	Manually or automatically replace calls to <code>s1DataTypeAndScale</code> . Cases listed require you to replace calls to <code>s1DataTypeAndScale</code> .
Recommended Replacement Cases	For the listed cases, it is recommended that you manually or automatically replace calls to <code>s1DataTypeAndScale</code> .
Manual Inspection Cases	Inspect each listed case to determine whether it should be manually upgraded.

## Tips

- Do not manually insert a call to `slDataTypeAndScale` into a model. The function was for internal use only.
- Running **Check for calls to slDataTypeAndScale** calls the Simulink function `slRemoveDataTypeAndScale`. Calling this function directly provides a wider range of conversion options. However, you very rarely need more conversion options.

## See Also

For more information about upgrading data types and scales, in the MATLAB Command Window, execute the following:

- `help slDataTypeAndScale`
- `help slRemoveDataTypeAndScale`

## Check bus usage

Identify Mux blocks used as a bus creator and bus signal that Simulink treats as a vector.

### Description

Models cannot contain bus signals that Simulink software implicitly converts to vectors. Instead, either insert a Bus to Vector conversion block between the bus signal and the block input port that it feeds, or use the `Simulink.BlockDiagram.addBusToVector` command.

### Results and Recommended Actions

Condition	Recommended Action
Model uses Mux blocks to create bus signals.	Replace Mux blocks with Bus Creator blocks.
Model is not configured to identify Mux blocks used as bus creators.	In the Configuration Parameters dialog box, on the <b>Diagnostics &gt; Connectivity</b> pane, set <b>Mux blocks used to create bus signals</b> to error.
Bus signals are implicitly converted to vectors.	Use <code>Simulink.BlockDiagram.addBusToVector</code> or insert a Bus to Vector block.
Model is not configured to identify bus signals Simulink treats as vectors.	In the Configuration Parameters dialog box, on the <b>Diagnostics &gt; Connectivity</b> pane, set <b>Bus signal treated as vector</b> to error.

### Action Results

Clicking **Modify** causes one of the following:

- Replace Mux blocks with Bus Creator blocks.
- Insert a Bus to Vector block at the input ports of blocks that implicitly convert bus signals to vectors.

## Tips

- The Bus to Vector conversion block resides in the Simulink/Signal Attributes library.
- Run this check before running **Check consistency of initialization parameters for Outport and Merge blocks**.
- The “Non-bus signals treated as bus signals” diagnostic detects when Simulink implicitly converts a non-bus signal to a bus signal to support connecting the signal to a Bus Assignment or Bus Selector block. This diagnostic is in the Configuration Parameters dialog box, on the **Diagnostics > Connectivity** pane.

## See Also

- “Prevent Bus and Mux Mixtures”
- “Bus to Vector Block Compatibility Issues”
- Bus to Vector block
- “Mux blocks used to create bus signals”
- “Bus signal treated as vector”
- “Check consistency of initialization parameters for Outport and Merge blocks” on page 9-39
- `Simulink.BlockDiagram.addBusToVector`

## Check for potentially delayed function-call subsystem return values

Identify function-call return values that might be delayed because Simulink software inserted an implicit Signal Conversion block.

### Description

So that signals reside in contiguous memory, Simulink software can automatically insert an implicit Signal Conversion block in front of function-call initiator block input ports. This can result in a one-step delay in returning signal values from calling function-call subsystems. The delay can be avoided by ensuring the signal originates from a signal block within the function-call system. Or, if the delay is acceptable, insert a Unit Delay block in front of the affected input ports.

### Results and Recommended Actions

Condition	Recommended Action
The listed block input ports could have an implicit Signal Conversion block.	Decide if a one-step delay in returning signal values is acceptable for the listed signals. <ul style="list-style-type: none"> <li>• If the delay is not acceptable, rework your model so that the input signal originates from within the calling subsystem.</li> <li>• If the delay is acceptable, insert a Unit Delay block in front of each listed input port.</li> </ul>

### See Also

Signal Conversion block

Unit Delay block

## Identify block output signals with continuous sample time and non-floating point data type

Find continuous sample time, non-floating-point output signals.

### Description

Non-floating-point signals might not represent continuous variables without loss of information.

### Results and Recommended Actions

Condition	Recommended Action
Signals with continuous sample times have a non-floating-point data type.	On the identified signals, either change the sample time to be discrete or fixed-in-minor-step ([0 1]).

### See Also

“What Is Sample Time?”.

## Check usage of Merge blocks

Analyze Merge blocks in the same tree as a group, and determine the possibility for them to execute at the same time step.

### Description

Blocks that directly drive the same tree of Merge blocks should have mutually exclusive execution in each time step. This check identifies those blocks that drive the same tree of Merge blocks, and so are likely to execute at the same time step.

### Input Parameters

#### Maximum analysis time (seconds)

Provide a maximum analysis time to execute the check.

### Results and Recommended Actions

Condition	Recommended Action
Merge blocks can be interconnected to form a tree structure.	Rework your model so that no blocks drive the same tree of Merge blocks.

### See Also

- Merge block
- “Check consistency of initialization parameters for Outport and Merge blocks” on page 9-39

---

## Check consistency of initialization parameters for Outport and Merge blocks

Identify Outport and Merge blocks with parameter settings that can lead to unexpected initialization behavior, and migrate your model to the simplified initialization mode.

### Description

In R2008b or later versions, you can choose the simplified initialization mode for conditionally executed subsystems, Merge blocks, subsystem elapsed time, and Discrete-Time Integrator blocks. The simplified initialization mode improves the consistency of simulation results. This result is especially true for models that do not specify initial conditions for conditionally executed subsystem output ports, and for models that have conditionally executed subsystem output ports connected to S-functions. For more information, see “Address Classic Mode Issues by Using Simplified Mode”.

---

**Note** Before running this consistency check, verify that your block diagram conforms to the modeling standards set by this diagnostic.

- 1** Run **Check bus usage** in the Model Advisor to check your usage of Mux blocks.
- 2** In the model window, select **Simulation > Model Configuration Parameters > Diagnostics > Connectivity**.
- 3** Set **Mux blocks used to create bus signals** to error and click **OK**.

For more information, see “Diagnostics Pane: Connectivity”.

---

This Model Advisor check identifies settings in your model that can cause problems if you use the simplified initialization mode. The results of the subchecks contain two types of statements: *Failed* and *Warning*. Failed statements identify issues that you must address manually before you can migrate the model to the simplified initialization mode. Warning statements identify issues or changes in behavior that may occur after migration.

After running this Model Advisor consistency check, if you select the **Explore Result** button, then the messages will only pertain to blocks that are not library-linked blocks.

---

**Note** Because it is difficult to undo these changes, use the **Save Restore Point As** feature to back up your model before migrating to the simplified initialization mode.

---

### Results and Recommended Actions

Condition	Recommended Action
Check the run-time diagnostic setting of the Merge block.	<ol style="list-style-type: none"> <li><b>1</b> In the Configuration Parameters dialog box, on the <b>Diagnostics &gt; Data Validity</b> pane, set “Detect multiple driving blocks executing at the same time step” to error.</li> <li><b>2</b> Verify that the model simulates without errors before running this check again.</li> </ol>
Verify that all Model blocks are using the simplified initialization mode.	Migrate the model referenced by the Model block to the simplified initialization mode, then migrate the top model.
Check for Model blocks that are using the PIL simulation mode.	The simplified initialization mode does not support the Processor-in-the-loop (PIL) simulation for model references.
Check for single-input Merge blocks.	Replace both the Mux block used to produce the input signal and the Merge block with one multi-input Merge block. Single-input Merge blocks are not supported in the simplified initialization mode.

Condition	Recommended Action
<p>Check for root Merge blocks that have an unspecified <b>Initial output</b> value.</p>	<p>If you do not specify an explicit value for the <b>Initial output</b> parameter of <i>root Merge blocks</i>, then Simulink uses the default initial value of the output data type.</p> <p>A root Merge block is a Merge block with an output port that does not connect to another Merge block. For information on the default initial value, see “Initializing Signal Values”.</p>
<p>Check for Merge blocks with nonzero input port offsets.</p>	<p>Clear the <b>Allow unequal port widths</b> parameter of the Merge block.</p> <hr/> <p><b>Note</b> Consider using Merge blocks only for signal elements that require true merging. You can combine other elements with merged elements using the Concatenate block.</p> <hr/>
<p>Check for Merge blocks that have unconnected inputs or that have inputs from non-conditionally executed subsystems.</p>	<p>Set the <b>Number of inputs</b> parameter of the Merge block to the number of Merge block inputs. You must connect each input to a signal. Verify that each Merge block input is driven by a conditionally executed subsystem. Merge blocks cannot be driven directly by an Iterator Subsystem or a block that is not a conditionally executed subsystem.</p>

Condition	Recommended Action
<p>Check for Merge blocks with inputs that are combined or reordered outside of conditionally executed subsystems.</p>	<p>Verify that any combination or reordering of Merge block input signals takes place within a conditionally executed subsystem. Such designs may use Mux, Bus Creator, or Selector blocks.</p>
<p>Check for Merge blocks with inconsistent input sample times.</p>	<p>Verify that input signals to each Merge block have the same <b>Sample time</b>.</p> <p>Failure to do so could result in unpredictable behavior. Consequently, the simplified initialization mode does not allow inconsistent sample times.</p>
<p>Check for Merge blocks with multiple input ports that are driven by a single source.</p>	<p>Verify that the Merge block does not have multiple input signals that are driven by the same conditionally executed subsystem or conditionally executed Model block.</p>
<p>Check for Outport blocks that have conflicting signal buffer requirements.</p>	<p>The Outport block has a function-call trigger or function-call data dependency signal passing through it, along with standard data signals. Some of the standard data signals require an explicit signal buffer for the initialization of the output signal of the corresponding subsystem. However, buffering function-call related signals leads to a function-call data dependency violation.</p> <p>Consider modifying the model to pass function-call related signals through a separate Outport block. For examples of function-call data dependency</p>

Condition	Recommended Action
	<p>violations, see the example model <code>sl_subsys_semantics</code>.</p> <p>A standard data signal may require an additional signal copy for one of the following reasons:</p> <ul style="list-style-type: none"> <li>• The Output block is driven by a block with output that cannot be overwritten. The Ground block and the Constant block are examples of such blocks.</li> <li>• The Output block shares the same signal source with another Output block in the same subsystem or in one nested within the current subsystem but having a different initial output value.</li> <li>• The Output block connects to the input of a Merge block</li> <li>• One of the input signals of the Output block is specifying a Simulink.Signal object with an explicit initial value .</li> </ul>
<p>Check for Output blocks that are driven by a bus signal and whose <b>Initial output</b> value is not scalar.</p>	<p>For Output blocks driven by bus signals, classic initialization mode does not support Initial Condition (IC) structures, while simplified initialization mode does. Hence, when migrating a model from classic to simplified mode, specify a scalar for the <b>Initial Output</b> parameter. After migration completes, to specify different initial values for different elements of the bus signal, use IC structures. For more information,</p>

Condition	Recommended Action
	see “Create Initial Condition (IC) Structures”.
<p>Check for Outport blocks that require an explicit signal copy.</p>	<p>An explicit copy of the bus signal driving the Outport block is required for the initialization of the output signal of the corresponding subsystem. Insert a Signal Conversion block before the Outport block, then set the <b>Output</b> parameter of the Signal Conversion block to <code>Bus copy</code>.</p> <p>A standard data signal may require an additional signal copy for one or more of the following reasons:</p> <ul style="list-style-type: none"> <li>• A block with output that cannot be overwritten is driving the Outport block. The Ground block and the Constant block are examples of such blocks.</li> <li>• The Outport block shares the same signal source with another Outport block in the same subsystem or in one nested within the current subsystem but having a different initial output value.</li> <li>• The Outport block connects to the input of a Merge block</li> <li>• One of the input signals of the Outport block is specifying a Simulink.Signal object with an explicit initial value.</li> </ul>

Condition	Recommended Action
Check for merged Outputport blocks that inherit the <b>Initial Output</b> value from Outputport blocks that have been configured to reset when the blocks become disabled.	When Outputport blocks are driving a Merge block, do not set their <b>Output when disabled</b> parameters to reset.
Check for merged Outputport blocks that are driven by nested conditionally executed subsystems.	Determine if the new behavior of the Outputport blocks is acceptable. If it is not acceptable, modify the model to account for the new behavior before migrating to the simplified initialization mode.
Check for merged Outputport blocks that reset when the blocks are disabled.	Set the <b>Output when disabled</b> parameter of the Outputport block to held. This setting is required because the Outputport block connects to a Merge block.  For more information, see Outputport.
Check for Outputport blocks that have an undefined <b>Initial output</b> value with invalid initial condition sources.	Verify that the following behavior is acceptable.  When the <b>Initial output</b> parameter is unspecified ([ ]), it inherits the initial output from the source blocks. If at least one of the sources of the Outputport block is not a valid source to inherit the initial value, the block uses the default initial value for that data type.  For simplified initialization mode, valid sources an Outputport blocks can inherit the <b>Initial output</b> value from are: Constant, Initial Condition, Merge (with initial output), Stateflow chart, function-call model reference, or

Condition	Recommended Action
	conditionally executed subsystem blocks.
<p>Check Outport blocks that have automatic rate transitions.</p>	<p>Simulink has inserted a Rate Transition block at the input of the Outport block. Specify the <b>Initial output</b> parameter for each Outport block.</p> <p>Otherwise, perform the following procedure:</p> <ol style="list-style-type: none"> <li><b>1</b> In the Configuration Parameters dialog box, on the <b>Solver</b> pane, clear the option “Automatically handle rate transition for data transfer”.</li> <li><b>2</b> Run this Model Advisor check again.</li> </ol>
<p>Check Outport blocks that have a special signal storage requirement and have an undefined <b>Initial output</b> value.</p>	<p>Verify that the following behavior is acceptable.</p> <p>Specify the <b>Initial output</b> parameter for the Outport block. Set this value to [ ] (empty matrix) to use the default initial value of the output data type.</p>
<p>Check the 'Initial output' setting of Outport blocks that reset when they are disabled.</p>	<p>Specify the <b>Initial output</b> parameter of the Outport block.</p> <p>You must specify the <b>Initial output</b> value for blocks that are configured to reset when they become disabled.</p>

Condition	Recommended Action
<p>Check the 'Initial output' setting for Outport blocks that pass through a function-call data dependency signal.</p>	<p>You cannot specify an <b>Initial output</b> value for the Outport block because function-call data dependency signals are passing through it. To set the <b>Initial output</b> value:</p> <ol style="list-style-type: none"> <li><b>1</b> Set the <b>Initial output</b> parameter of the Outport block to [ ].</li> <li><b>2</b> Provide the initial value at the source of the data dependency signal rather than at the Outport block.</li> </ol>
<p>Check for blocks inside of the Iterator Subsystem that require elapsed time.</p>	<p>Within an Iterator Subsystem hierarchy, do not use blocks that require a service that maintains the time that has elapsed between two consecutive executions.</p> <p>Since an Iterator Subsystem can execute multiple times at a given time step, the concept of elapsed time is not well-defined between two such executions. Using these blocks inside of an Iterator Subsystem can cause unexpected behavior.</p>

Condition	Recommended Action
<p>Check for Outport blocks that use signal objects to specify the <b>Initial output</b> value.</p>	<p>Verify that the following behavior is acceptable.</p> <p>In the simplified initialization mode, signal objects cannot specify the <b>Initial output</b> parameter of an Outport block. You can still initialize the input or output signals for an Outport block using signal objects, but the initialization results may be overwritten by those of the Outport block.</p> <hr/> <p><b>Note</b> If you are working with a conditionally executed subsystem Outport block, Simulink generates a warning that the initial value of the signal object has been ignored.</p> <hr/>
<p>Check for merged Outport blocks that are either unconnected or connected to a Ground block.</p>	<p>Verify that the following behavior is acceptable.</p> <p>The Outport block is driving a Merge block, but its inputs are either unconnected or connected to Ground blocks. In the classic initialization mode, unconnected or grounded outputs do not update the merge signal even when their parent conditionally executed subsystems are executing. In the simplified initialization mode, however, these outputs will update the merge signal with a value of zero when their parent conditionally executed subsystems are executing.</p>

Condition	Recommended Action
<p>Check for Merge blocks that use signal objects to specify the <b>Initial output</b> value.</p>	<p>Verify that the following behavior is acceptable.</p> <p>In the simplified initialization mode, signal objects cannot specify the <b>Initial output</b> parameter of the Merge block. While you can still initialize the output signal for a Merge block using a signal object, the initialization result may be overwritten by that of the Merge block.</p> <hr/> <p><b>Note</b> Simulink generates a warning that the initial value of the signal object has been ignored.</p> <hr/>
<p>Check for Outport blocks that obtain the <b>Initial output</b> value from an input signal when they are migrated.</p>	<p>Verify that the following behavior is acceptable.</p> <p>The <b>Initial output</b> parameter of the Outport block is not specified. As a result, the simplified initialization mode will assume that the <b>Initial output</b> value for the Outport block is derived from the input signal. This assumption may result in different initialization behavior.</p> <p>If this behavior is not acceptable, modify your model before you migrate to the simplified initialization mode.</p>

Condition	Recommended Action
<p>Check for outer Outport blocks that have an explicit <b>Initial output</b>.</p>	<p>Verify that the following behavior is acceptable.</p> <p>In classic initialization mode, the <b>Initial output</b> and <b>Output when disabled</b> parameters of the Outport block must match those of their source Outport blocks.</p> <p>In simplified initialization mode, Simulink sets the <b>Initial output</b> parameter to [ ] (empty matrix) and <b>Output when disabled</b> parameter to held.</p>
<p>Check for conditionally executed subsystems that propagate execution context across the output boundary.</p>	<p>Verify that the following behavior is acceptable.</p> <p>The <b>Propagate execution context across subsystem boundary</b> parameter is selected for the subsystem. Execution context will still be propagated across input boundaries; however, the propagation will be disabled on the output side for the initialization in the simplified initialization mode.</p>
<p>Check for Discrete-Time Integrator blocks.</p>	<p>Verify that the following behavior is acceptable.</p> <p>Simulink has changed the initialization behavior of the Discrete-Time Integrator block to be more consistent and robust in the simplified initialization mode. These changes include:</p> <ul style="list-style-type: none"> <li>• Elimination of the <b>Use initial condition as initial and reset value for</b> parameter</li> </ul>

Condition	Recommended Action
	<ul style="list-style-type: none"> <li>• Application of the <b>Initial condition</b> parameter only to the integrator output</li> <li>• Simplified enable/disable behavior.</li> </ul> <p>See the Discrete-Time Integrator block documentation for more information on the simplified initialization for the Discrete-Time Integrator.</p>
<p>Check for blocks that read input from conditionally executed subsystems during initialization.</p>	<p>Verify that the following behavior is acceptable.</p> <p>Some blocks, such as the Discrete-Time Integrator block, read their inputs from conditionally executed subsystems during initialization in the classic initialization mode. Simulink performs this step as an optimization technique.</p> <p>This optimization is not allowed in the simplified initialization mode because the output of a conditionally executed subsystem at the first time step after initialization may be different than the initial value declared in the corresponding Output block. In particular, this discrepancy occurs if the subsystem is active at the first time step.</p>
<p>Check for library blocks with instances that cannot be migrated.</p>	<p>Examine the failed subcheck results for each block to determine the corrective actions.</p>

Condition	Recommended Action
<p>Check for library blocks with instances that have warnings.</p>	<p>Examine the warning subcheck results for each block before migrating to the simplified initialization mode.</p>
<p>Check for a migration conflict for Output blocks that use a Dialog as the <b>Source of initial output value</b>.</p>	<p>Other instances of Output blocks with the same library link either cannot be migrated or are being migrated in a different manner. Review the results from the <b>Check for library blocks with instances that cannot be migrated</b> to learn about the different migration paths for other instances of each Output block.</p> <p>The Output block will maintain its current settings and use its specified <b>Initial output</b> value.</p>
<p>Check for a migration conflict for Output blocks that use Input signal as the <b>Source of initial output</b> value.</p>	<p>Other instances of Output blocks with the same library link either cannot be migrated or are being migrated in a different manner. Review the results from the <b>Check for library blocks with instances that cannot be migrated</b> to learn about the different migration paths for other instances of each Output block.</p> <p>The Output block currently specifies an <b>Initial output</b> of [] (empty matrix), and the <b>Output when disabled</b> as held. This means that each output does not perform initialization, but implicitly relies on source blocks to initialize its input signal.</p>

Condition	Recommended Action
	<p>After migration, the parameter <b>Source of initial output value</b> will be set to <code>Input signal</code> to reflect this behavior.</p>
<p>Check for a migration conflict for Outport blocks that have SimEvents semantics.</p>	<p>Other instances of Outport blocks with the same library link either cannot be migrated or are being migrated in a different manner. Review the results from the <b>Check for library blocks with instances that cannot be migrated</b> to learn about the different migration paths for other instances of each Outport block.</p> <p>The Outport blocks will continue to use an <b>Initial output</b> value of <code>[]</code> (empty matrix) and an <b>Output when disabled</b> setting of <code>held</code>. Simulink will maintain these settings because their parent conditionally executed subsystems are connected to SimEvents® blocks.</p>
<p>Check for a migration conflict for innermost Outport blocks with variable-size input and unspecified <b>Initial output</b>.</p>	<p>For these Outport blocks, the signal size varies only when the parent subsystem of the block is re-enabled. Therefore, Simulink implicitly assumes that the <b>Initial output</b> parameter is equal to 0, even though the parameter is unspecified, <code>[]</code>. Consequently, unless you specify the parameter, the Model Advisor will explicitly set the parameter to 0 when the model is migrated to the simplified initialization mode.</p> <p>Other instances of Outport blocks with the same library link either</p>

Condition	Recommended Action
	cannot be migrated or are being migrated in a different manner. Review the results from the <b>Check for library blocks with instances that cannot be migrated</b> to learn about the different migration paths for other instances of each Outport block.
Check for a migration conflict for Outport blocks that use a default ground value as the Initial output.	The parameter <b>Initial output</b> is set to [ ] (empty matrix) and the source of the Outport is an invalid initial condition source. Thus, the block uses the default initial value as the initial output in the simplified initialization mode. Other instances of Outport blocks with the same library link either have errors or are being migrated differently.
Check for a migration conflict for merged Outport blocks without explicit specification of <b>Initial output</b> .	Review the results from the subcheck <b>Check for library blocks with instances that cannot be migrated</b> to learn about different migration paths for other instances of each Outport block. For the remaining Outport blocks, <b>Initial output</b> is set to [ ] (empty matrix) and <b>Output when disabled</b> is set to held respectively, in simplified initialization mode.

**Action Results**

Clicking **Modify Settings** causes the following:

- The Model parameter is set to **simplified**

- If an Output block has the **Initial output** parameter set to the empty string, [], then the `SourceOfInitialOutputValue` parameter is set to **Input signal**.
- If an Output has an empty **Initial output** and a variable-size signal, then the **Initial output** is set to zero.

### See Also

- “Address Classic Mode Issues by Using Simplified Mode”
- “Check bus usage” on page 9-34
- “Mux blocks used to create bus signals”
- “Bus signal treated as vector”
- “Detect multiple driving blocks executing at the same time step”
- “Underspecified initialization detection”



## Check for non-continuous signals driving derivative ports

Identify noncontinuous signals that drive derivative ports.

### Description

Noncontinuous signals that drive derivative ports cause the solver to reset every time the signal changes value, which slows down simulation.

### Results and Recommended Actions

Condition	Recommended Action
There are noncontinuous signals in the model driving derivative ports.	<ul style="list-style-type: none"><li>• Make the specified signals continuous.</li><li>• Replace the continuous blocks receiving these signals with discrete state versions of the blocks.</li></ul>

### See Also

- “Modeling Dynamic Systems”
- “Simulating Dynamic Systems”



## Runtime diagnostics for S-functions

Check array bounds and solver consistency if S-Function blocks are in the model.

### Description

Validates whether S-Function blocks adhere to the ODE solver consistency rules that Simulink applies to its built-in blocks.

### Results and Recommended Actions

Condition	Recommended Action
<b>Solver data inconsistency</b> is set to none.	In the Configuration Parameters dialog box, on the <b>Diagnostics</b> pane, set <b>Solver data inconsistency</b> to warning or error.
<b>Array bounds exceeded</b> is set to none.	In the Configuration Parameters dialog box, on the <b>Diagnostics&gt;Data Validity</b> pane, set <b>Array bounds exceeded</b> to warning or error.

### See Also

- “What Is an S-Function?”
- “How S-Functions Work”



## Check file for foreign characters

Check for characters that are incompatible with the current encoding

### Description

Check for characters in the model file that cannot be represented in the current encoding. These can cause errors during simulation, and may be corrupted when saving the model.

### Results and Recommended Actions

Condition	Recommended Action
Incompatible characters found	Change the current encoding to the encoding specified in the model file, using <code>slCharacterEncoding</code> . To change the current encoding you need to close the models, and this closes the Model Advisor.

### Tips

The Upgrade Advisor report shows the encoding you need, or you can retrieve the encoding from the model using the command:

```
get_param(modelname, 'SavedCharacterEncoding')
```

Use `slCharacterEncoding` to change the encoding. This setting applies to the current MATLAB session, so if you restart MATLAB and want to open the same model, you will need to make the same change to the current encoding again.

For more information see:

- `slCharacterEncoding`
- “Models with Different Character Encodings”
- “Saving Models with Different Character Encodings”

**See Also**

- “Consult the Upgrade Advisor”.
- “Model Upgrades”







## Check model for known block upgrade issues

Uses the `supdate` function to check for common block upgrade issues.

### Description

Check blocks in the model for compatibility issues resulting from using a new version of Simulink software.

### Results and Recommended Actions

Condition	Recommended Action
Blocks with compatibility issues found.	Click <b>Modify</b> to fix the detected block issues.
Check update status for the Level 2 API S-functions.	Consider replacing Level 1 S-functions with Level 2.

### Action Results

Clicking **Modify** replaces blocks from a previous release of Simulink software with the latest versions.

### See Also

- `supdate`.
- “Write Level-2 MATLAB S-Functions”.
- “Consult the Upgrade Advisor”.
- “Model Upgrades”

## Check model for known block upgrade issues requiring compile time information

Uses the `s1update` function to check for common block upgrade issues.

### Description

Check blocks for compatibility issues resulting from upgrading to a new version of Simulink software. Some block upgrades require the collection of information or data when the model is in the compile mode. For this check, the model is set to compiled mode and then checked for upgrades.

### Results and Recommended Actions

Condition	Recommended Action
Model contains Lookup Table or Lookup Table (2-D) blocks and some of the blocks specify <b>Use Input Nearest</b> or <b>Use Input Above</b> for a lookup method.	Replace Lookup Table blocks and Lookup Table (2-D) blocks with n-D Lookup Table blocks. Do not apply <b>Use Input Nearest</b> or <b>Use Input Above</b> for lookup methods; select another option.
Model contains Lookup Table or Lookup Table (2-D) blocks and some blocks perform multiplication first during interpolation.	Replace Lookup Table blocks and Lookup Table (2-D) blocks with n-D Lookup Table blocks. However, because the n-D Lookup Table block performs division first, this replacement might cause a numerical difference in the result.
Model contains Lookup Table or Lookup Table (2-D) blocks. Some of these blocks specify <b>Interpolation-Extrapolation</b> as the <b>Lookup method</b> but their input and output are not the same floating-point type.	Replace Lookup Table blocks and Lookup Table (2-D) blocks with n-D Lookup Table blocks. Then change the extrapolation method or the port data types for block replacement.

### **Action Results**

Clicking **Modify** replaces blocks from a previous release of Simulink software with the latest versions.

### **See Also**

- `slupdate`.
- n-D Lookup Table.
- “Consult the Upgrade Advisor”.
- “Model Upgrades”



## Check that the model is saved in SLX format

Check that the model is saved in SLX format.

### Description

Check whether the model is saved in SLX format.

### Results and Recommended Actions

Condition	Recommended Action
Model not saved in SLX format	Consider upgrading to the SLX file format to use the latest features in Simulink.

### Tips

Simulink Projects can help you upgrade models to SLX format and preserve file revision history in source control. See “Upgrade Model Files to SLX and Preserve Revision History”.

### See Also

- “Saving Models in the SLX File Format”
- “Consult the Upgrade Advisor”.
- “Model Upgrades”



## Check Model History properties

Check for edited model history properties

### Description

Check models for edited Model History property values that could be used with source control tool keyword substitution. This keyword substitution is incompatible with SLX file format.

In the MDL file format you can configure some model properties to make use of source control tool keyword substitution. If you save your model in SLX format, source control tools cannot perform keyword substitution. Information in the model file from such keyword substitution is cached when you first save the MDL file as SLX, and is not updated again. The Model Properties History pane and Model Info blocks in your model show stale information from then on.

### Results and Recommended Actions

Condition	Recommended Action
Edited model history properties	Manually or automatically reset the properties to the default values. Click the button to reset, or to inspect and change these properties manually, open the Model Properties dialog and look in the History pane.

### See Also

- “Consult the Upgrade Advisor”.
- “Model Upgrades”

## Check for Mux blocks used to create bus signals

Identify Mux blocks used as a bus creator.

### Description

Models cannot contain Mux blocks that output bus signals. Instead, replace those Mux blocks with Bus Creator blocks.

### Results and Recommended Actions

Condition	Recommended Action
Model uses Mux blocks to create bus signals.	Replace Mux blocks with Bus Creator blocks.
Model is not configured to identify Mux blocks used as bus creators.	In the Configuration Parameters dialog box, on the <b>Diagnostics &gt; Connectivity</b> pane, set <b>Mux blocks used to create bus signals</b> to error.

### Action Results

Clicking **Modify** replaces Mux blocks with Bus Creator blocks.

### Tip

The “Non-bus signals treated as bus signals” diagnostic detects when Simulink implicitly converts a non-bus signal to a bus signal to support connecting the signal to a Bus Assignment or Bus Selector block. This diagnostic is in the Configuration Parameters dialog box, on the **Diagnostics > Connectivity** pane.

### See Also

- “Prevent Bus and Mux Mixtures”
- “Address Compatibility Issues After Running Upgrade Advisor”
- “Bus to Vector Block Compatibility Issues”
- Bus to Vector block
- “Mux blocks used to create bus signals”

## Check model and local libraries for legacy Aerospace Blockset blocks

Lists blocks configured to use FlightGear versions that are outdated or not supported.

### Description

This check searches and lists blocks configured to use FlightGear versions that are outdated or not supported.

### Results and Recommended Actions

Condition	Recommended Action
Blocks configured with old versions of FlightGear are found.	Click <b>Update FlightGear blocks</b> to change block settings to latest supported version of FlightGear. Then, download latest version of FlightGear that MATLAB supports.

### Action Results

Clicking **Update FlightGear blocks** changes block settings to the latest supported version of FlightGear.

### See Also

- “Flight Simulator Interfaces”

## Check and update masked blocks in library to use promoted parameters

Check for libraries that should be updated to use promoted parameters.

### Description

This check searches libraries created before R2011b for masked blocks that should be updated to use promoted parameters. Since R2011b, if a block parameter is not promoted, its value in the linked block is locked to its value in the library block. This check excludes blocks of type Subsystem, Model reference, S-Function and M-S-Function.

### Results and Recommended Actions

Condition	Recommended Action
Libraries that need to be updated are found	Click <b>Update</b> . Once the libraries have been updated, run the check again

### See Also

- “Consult the Upgrade Advisor”.
- “Model Upgrades”

## Check and update mask image display commands with unnecessary imread() function calls

Check identifies masks using image display commands with unnecessary calls to the `imread()` function.

### Description

This check searches for the mask display commands that make unnecessary calls to the `imread()` function, and updates them with mask display commands that do not call the `imread()` function. Since 2013a, a performance and memory optimization is available for mask images specified using the image path instead of the RGB triple matrix.

### Results and Recommended Actions

Condition	Recommended Action
Mask display commands that make unnecessary calls to the <code>imread()</code> function are found.	Click <b>Update</b> . Once the blocks have been updated, run the check again.

### See Also

- “Consult the Upgrade Advisor”.
- “Model Upgrades”

## Identify masked blocks that specify tabs in mask dialog using MaskTabNames parameter

This check identifies masked blocks that specify tabs in mask dialog using the MaskTabNames parameter.

### Description

This check identifies masked blocks that use the MaskTabNames parameter to programmatically create tabs in the mask dialog. Since R2013b, dialog controls are used to group parameters in a tab on the mask dialog.

### Results and Recommended Actions

Condition	Recommended Action
Masked blocks commands that use the MaskTabNames parameter to programmatically create tabs in the mask dialog are found.	Click <b>Upgrade</b> . Once the blocks have been updated, run the check again.

### See Also

- “Consult the Upgrade Advisor”.
- “Model Upgrades”

## Identify questionable operations for strict single-precision design

For a strict single-precision design, this check identifies the blocks that introduce double-precision operations.

### Description

For a strict single-precision design, this check identifies the blocks that introduce double-precision operations.

### Results and Recommended Actions

Condition	Recommended Action
Double-precision floating-point operations found in model.	Verify that: <ul style="list-style-type: none"> <li>• Block input and output data types are set correctly.</li> <li>• In the Configuration Parameters dialog box, on the <b>Optimization</b> pane, <b>Default for underspecified data type</b> is set to single.</li> <li>• All target-specific math libraries used by the model support single-precision implementations.</li> </ul>

### See Also

- “Consult the Upgrade Advisor”.
- “Model Upgrades”

## Check `get_param` calls for block `CompiledSampleTime`

Use this check to identify MATLAB files in your working environment that contain `get_param` function calls to return the block `CompiledSampleTime` parameter.

### Description

For multi-rate blocks (including subsystems), Simulink returns the block compiled sample time as a cell array of the sample rates in the block. The return value is a cell array of pairs of doubles. MATLAB code that accepts this return value only as pairs of doubles can return an error when called with a multi-rate block. Use this check to identify such code in your environment. Modify these instances of code to accept a cell array of pairs of doubles instead.

For example, consider a variable `blkTs`, which has been assigned the compiled sample time of a multi-rate block.

```
blkTs = get_param(block, 'CompiledSampleTime');
```

Here are some examples in which the original code works only if `blkTs` is a pair of doubles and the block is a single-rate block:

- Example 1

```
if isinf(blkTs(1))
    disp('found constant sample time')
end
```

Since `blkTs` is now a cell array, Simulink gives this error message:

```
Undefined function 'isinf' for input arguments of type 'cell'
```

Instead, use this code, for which `blkTs` can be a cell array or a pair of doubles.

```
if isequal(blkTs, [inf,0])
    disp('found constant sample time')
end
```

- Example 2

```
if all(blkTs == [-1,-1])
    disp('found triggered sample time')
end
```

For the above example, since blkTs is now a cell array, Simulink gives this error:

Undefined function 'eq' for input arguments of type 'cell'

Instead, use this code, for which blkTs can be a cell array or a pair of doubles.

```
if isequal(blkTs, [-1,-1])
    disp('found triggered sample time')
end
```

- Example 3

```
if (blkTs(1) == -1)
    disp('found a triggered context')
end
```

Again, since blkTs is now a cell array, Simulink gives this error:

Undefined function 'eq' for input arguments of type 'cell'

Instead, use this code.

```
if ~iscell(blkTs)
    blkTs = {blkTs};
end
for idx = 1:length(blkTs)
    thisTs = blkTs{idx};
    if (thisTs(1) == -1)
        disp('found a triggered context')
    end
end
```

The above code checks for a triggered type sample time (triggered or async). In cases in which a block has constant sample time ([inf,0]) in addition to triggered or async or when a block has multiple async rates, this alternative property detects the triggered type sample time.

This check scans MATLAB files in your environment. If the check finds instances of MATLAB code that contain `get_param(block,CompiledSampleTime)` calls to output the block compiled sample time, Upgrade Advisor displays these results. It suggests that you modify code that accepts the block compiled sample time from multi-rate blocks.

## Results and Recommended Actions

Condition	Recommended Action
No MATLAB files call <code>get_param(block,CompiledSampleTime)</code>	None
Some MATLAB files call <code>get_param(block,CompiledSampleTime)</code>	If files use the block <code>CompiledSampleTime</code> parameter from multi-rate blocks, modify these files to accept the parameter as a cell array of pairs of doubles.

## See Also

- “Sample Times in Subsystems”
- “Block Compiled Sample Time”

## Check Rapid Accelerator signal logging

When simulating your model in Rapid Accelerator mode, use this check to find signals logged in your model that are globally disabled. Rapid Accelerator mode supports signal logging. Use this check to enable signal logging globally.

## Description

This check scans your model to see if a simulation is in Rapid Accelerator mode and whether the model contains signals with signal logging. If the check finds an instance and signal logging is globally disabled, an option to turn on signal logging globally appears.

## Results and Recommended Actions

Condition	Recommended Action
Simulation mode is not Rapid Accelerator.	None You can enable signal logging in Rapid Accelerator mode.
Simulation mode is Rapid Accelerator. Upgrade Advisor did not find signals with signal logging enabled.	NoneThe model does not use signal logging. Enable signal logging for signals and globally if you want to log signals.
Simulation mode is Rapid Accelerator. Upgrade Advisor found signals with signal logging enabled. However, global setting for signal logging was disabled.	Enable signal logging globally if you want to log signals with signal logging enabled.
Signal logging was already globally enabled.	None

### Action Results

Selecting **Modify** enables signal logging globally in your model.

### See Also

- “Signal Logging in Rapid Accelerator Mode”
- “Consult the Upgrade Advisor”.

## Check for root outports with constant sample time

Use this check to identify root outports with a constant sample time used with an AUTOSAR target, Function Prototype Control, or the model C++ class interface.

### Description

Root outports with constant sample time are not supported when using an AUTOSAR target, Function Prototype Control, or the model C++ class

interface. Use this check to identify root Output blocks with this condition and modify the blocks as recommended.

## Results and Recommended Actions

Condition	Recommended Action
Root output with constant sample time used with an AUTOSAR target, Function Prototype Control or the model C++ class interface.	Consider one of the following: <ul style="list-style-type: none"> <li>• Set the sample time of the block to the fundamental sample time.</li> <li>• Identify the source of the constant sample time and set its sample time to the fundamental sample time.</li> <li>• Place a Rate Transition block with inherited sample time (-1) before the block.</li> </ul>

## See Also

- “Consult the Upgrade Advisor”.

## Analyze model hierarchy and continue upgrade sequence

Check for child models and guide you through upgrade checks.

### Description

This check identifies child models of this model, and guides you through upgrade checks to run both non-compile and compile checks. The Advisor provides tools to help with these tasks:

- If the check finds child models, it offers to run the Upgrade Advisor upon each child model in turn and continue the upgrade sequence. If you have a model hierarchy you need to check and update each child model in turn.

- If there are no child models, you still need to continue the check sequence until you have run both non-compile and compile checks.

You must run upgrade checks in this order: first the checks that do not require compile time information and do not trigger an Update Diagram, then the compile checks.

Click **Continue Upgrade Sequence** to run the next checks. If there are child models, this will open the next model. Keep clicking **Continue Upgrade Sequence** until the check passes.

### Results and Recommended Actions

Condition	Recommended Action
Child models found	Click <b>Continue Upgrade Sequence</b> to run the next checks. If there are child models, this will close the current Upgrade Advisor session, and open Upgrade Advisor for the next model in the hierarchy.
No child models, but more checks to run	If there are no child models, click <b>Continue Upgrade Sequence</b> to refresh the Upgrade Advisor with compilation checks selected. The compile checks trigger an Update Diagram (marked with ^). Run the next checks and take advised actions. When you return to this check, click <b>Continue Upgrade Sequence</b> until this check passes.

## Tips

Best practice for upgrading a model hierarchy is to check and upgrade each model starting at the leaf end and working up to the root model.

When you click **Continue Upgrade Sequence**, the Upgrade Advisor opens the leaf model as far inside the hierarchy as it can find. Subsequent steps guide you through upgrading your hierarchy from leaf to root model.

When you open the Upgrade Advisor, the checks that are selected do not require compile time information and do not trigger an Update Diagram. Checks that trigger an Update Diagram are not selected to run by default, and are marked with ^. When you use the Upgrade Advisor on a hierarchy, keep clicking **Continue Upgrade Sequence** to move through this sequence of analysis:

- 1** The Upgrade Advisor opens each model and library in turn, from leaf to root, and selects the non-compile checks. Run the checks, take any advised actions, then click **Continue Upgrade Sequence** to open the next model and continue.
- 2** When you reach the root end of the hierarchy, the Upgrade Advisor then opens each model again in the same order (but not libraries) and selects only the checks that require a model compile. Run the checks, take any advised actions, then click **Continue Upgrade Sequence** to open the next model. Continue until you reach the end of the hierarchy and this check passes.

## See Also

- “Consult the Upgrade Advisor”.
- “Model Upgrades”



# Model Reference Conversion Advisor

---

## **Model Reference Conversion Advisor**

## Check Conversion Input Parameters

Use input parameters to configure the actions the advisor performs and the output it produces.

You can use the default parameters to run the advisor without changing any parameters.

Input Parameter	Description
<p><b>New model name</b></p>	<p>The advisor provides a model name that is based on the Subsystem block name and is unique in the MATLAB path.</p> <p>The model name cannot exceed 60 characters.</p> <hr/> <p><b>Tip</b> If the advisor generates an error indicating that the target referenced model already exists, then use the <b>New model name</b> parameter to specify a new file name.</p> <hr/>
<p><b>Replace subsystem</b></p>	<p>By default, when the conversion is done, the advisor updates the original model by inserting a Model block where the Subsystem block that you converted was.</p> <p>Clear this parameter to have the advisor open a new Simulink Editor window that contains only a Model block that references the newly created referenced model. The advisor does not update the original model in the other Simulink Editor window.</p>
<p><b>Fix errors automatically</b></p>	<p>By default, if an advisor check finds any errors and the advisor can automatically fix the error, the advisor provides a <b>Fix</b> button that you can click for automatic error fixing.</p> <p>If you enable this parameter, the advisor automatically fixes any errors it can, without displaying the <b>Fix</b> button.</p>

<b>Input Parameter</b>	<b>Description</b>
<b>Save bus objects</b>	<p>By default, the advisor saves bus objects that it produces during the conversion process. Model reference requires the use of bus objects for bus inputs or bus outputs for the referenced model.</p> <p>When <b>Save bus objects</b> is enabled, you can set these parameters:</p> <ul style="list-style-type: none"> <li>• <b>Bus format</b></li> <li>• <b>File name</b></li> </ul> <p>The advisor uses one file to save all bus objects that it creates during conversion.</p> <p>If you clear this parameter, the advisor puts the bus objects in the base workspace. Store the bus objects in a file or otherwise make sure they are available for future simulations of the model.</p>
<b>Bus Format</b>	<p>This parameter is available when you enable <b>Save bus objects</b>.</p> <p>The default format for the saved bus objects is as a MATLAB cell array.</p> <p>To save the bus objects as <code>Simulink.Bus</code> objects, select <code>Object</code>.</p>
<b>File name</b>	<p>This parameter is available when you enable <b>Save bus objects</b>.</p> <p>The advisor provides a file name that includes the Subsystem block name and ends with <code>_bus</code>.</p>
<b>Build target</b>	<p>By default, the advisor does not build a target for the referenced model that it creates.</p>

After you configure the advisor, to start the conversion checks, click **Run this task**.

# Performance Advisor Checks

---

## Simulink Performance Advisor Checks

**In this section...**

“Simulink Performance Advisor Check Overview” on page 11-2

“Baseline” on page 11-3

“Checks that Require Update Diagram” on page 11-3

“Checks that Require Simulation to Run” on page 11-3

“Check Simulation Modes Settings” on page 11-3

“Check Compiler Optimization Settings” on page 11-4

“Create baseline” on page 11-4

“Identify resource-intensive diagnostic settings” on page 11-4

“Check optimization settings” on page 11-5

“Identify inefficient lookup table blocks” on page 11-5

“Check MATLAB System block simulation mode” on page 11-5

“Identify Interpreted MATLAB Function blocks” on page 11-6

“Check MATLAB Function block debug settings” on page 11-7

“Check Stateflow block debug settings” on page 11-7

“Identify simulation target settings” on page 11-7

“Check model reference rebuild setting” on page 11-8

“Check model reference parallel build” on page 11-8

“Check Delay block circular buffer setting” on page 11-10

“Check solver type selection” on page 11-10

“Select simulation mode” on page 11-12

“Select compiler optimizations on or off” on page 11-13

“Final Validation” on page 11-13

### Simulink Performance Advisor Check Overview

Use Performance Advisor checks to improve model simulation time.

**See Also**

“How Performance Advisor Improves Simulation Performance”

**Baseline**

Establish a measurement to compare the performance of a simulation after Performance Advisor implements improvements.

**See Also**

“Create a Performance Advisor Baseline Measurement”

**Checks that Require Update Diagram**

These checks require that **Update Diagram** occurs in order to run.

**See Also**

“How Performance Advisor Improves Simulation Performance”

**Checks that Require Simulation to Run**

These checks require simulation to run in order to collect sufficient performance data. Performance Advisor reports the results after simulation completes.

**See Also**

“How Performance Advisor Improves Simulation Performance”

**Check Simulation Modes Settings**

These checks evaluate simulation modes (Normal, Accelerator, Rapid Accelerator, Rapid Accelerator with up-to-date check off) and identify the optimal mode to achieve fastest simulation.

**See Also**

“What Is Acceleration?”

## Check Compiler Optimization Settings

Use these checks to select compiler optimization settings for improved performance.

### See Also

“Compiler optimization level”

## Create baseline

Select this check to create a baseline when Performance Advisor runs. You can also create a baseline manually. A baseline is the measurement of simulation performance before you run checks in Performance Advisor. The baseline includes the time to run the simulation and the simulation results (signals logged). Before you create a baseline for a model, in the **Data Import/Export** pane of the Configuration Parameters dialog box:

- Select the **States** check box.
- Set the **Format** parameter to `Structure with time`.

### See Also

“Create a Performance Advisor Baseline Measurement”

## Identify resource-intensive diagnostic settings

To improve simulation speed, disable diagnostics where possible. For example, some diagnostics, such as **Solver data inconsistency** or **Array bounds exceeded**, incur run-time overheads during simulations.

### See Also

- “Diagnostics”
- “How Performance Advisor Improves Simulation Performance”

## Check optimization settings

To improve simulation speed, enable optimizations where possible. For example, if some optimizations, such as Block Reduction, are disabled, enable these optimizations to improve simulation speed.

You can also trade off compile-time speed for simulation speed by setting the compiler optimization level. Compiler optimizations for accelerations are disabled by default. Enabling them accelerates simulation runs but results in longer build times. The speed and efficiency of the C compiler used for Accelerator and Rapid Accelerator modes also affects the time required in the compile step.

When you enable Inline Parameters optimization, Simulink uses the numerical values of model parameters instead of their symbolic names. This substitution can improve performance by reducing the parameter tuning computations performed during simulations.

### See Also

- “Optimization Pane: General”
- “How Performance Advisor Improves Simulation Performance”

## Identify inefficient lookup table blocks

To improve simulation speed, use properly configured lookup table blocks.

### See Also

- “Lookup Tables”
- “Optimize Generated Code for Lookup Table Blocks”
- “Optimize Breakpoint Spacing in Lookup Tables”
- “How Performance Advisor Improves Simulation Performance”

## Check MATLAB System block simulation mode

In general, to improve simulation speed, choose Code generation for the **Simulate using** parameter of the MATLAB System block. Because data

exchange between MATLAB and Simulink passes through several software layers, Interpreted execution usually slows simulations, particularly if the model needs many data exchanges.

This check identifies which MATLAB System blocks can generate code and changes the **Simulate using** parameter value to Code generation where possible.

While Code generation does not support all MATLAB functions, the subset of the MATLAB language that it does support is extensive. By using this Code generation, you can improve performance.

### **See Also**

- MATLAB System
- “Simulation Modes”
- “How Performance Advisor Improves Simulation Performance”

### **Identify Interpreted MATLAB Function blocks**

To improve simulation speed, replace Interpreted MATLAB Function blocks with MATLAB Function blocks where possible. Because data exchange between MATLAB and Simulink passes through several software layers, Interpreted MATLAB Function blocks usually slow simulations, particularly if the model needs many data exchanges.

Additionally, because you cannot compile an Interpreted MATLAB Function, an Interpreted MATLAB Function block impedes attempts to use an acceleration mode to speed up simulations.

While MATLAB Function blocks do not support all MATLAB functions, the subset of the MATLAB language that it does support is extensive. By replacing your interpreted MATLAB code with code that uses only this embeddable MATLAB subset, you can improve performance.

### **See Also**

- MATLAB Function

- “How Performance Advisor Improves Simulation Performance”

## Check MATLAB Function block debug settings

After verifying that your MATLAB code works correctly, disable debugging support for MATLAB Function blocks where possible. In the Simulation Target pane of the Configuration Parameters dialog box, disable debugging/animation, overflow detection, and echoing expressions without semicolons.

### See Also

“How Performance Advisor Improves Simulation Performance”

## Check Stateflow block debug settings

By default, Stateflow charts highlight the current active states and transitions as the model runs. This feature is useful for debugging, but it slows the simulation. To accelerate simulations, disable debugging and animation for all Stateflow blocks. Similarly, if you are using Simulink 3D Animation™, SimMechanics™ visualization, FlightGear, or another 3D animation package, consider disabling the animation or reducing scene fidelity to improve performance.

### See Also

- “Speed Up Simulation”
- “How Performance Advisor Improves Simulation Performance”

## Identify simulation target settings

To improve simulation speed, disable simulation target settings where possible. For example, in the Configuration Parameters dialog box, clear the **Simulation Target > Echo expression without semicolons** check box to improve simulation speed.

### See Also

- “Simulation Target Pane: General”

- “How Performance Advisor Improves Simulation Performance”

### **Check model reference rebuild setting**

To improve simulation speed, in the Configuration Parameters dialog box, verify that the **Model Referencing > Rebuild** parameter is set to **If any changes in known dependencies detected**.

#### **See Also**

- “Rebuild”
- “How Performance Advisor Improves Simulation Performance”


### **Check model reference parallel build**

To improve simulation, verify the number of referenced models in the model. If there are two or more referenced models, build the model in parallel if possible.

Performance Advisor analyzes the model and estimates the build time on the current computer as if it were using several cores. It also estimates the parallel build time for the model in the same way an estimation would be performed if Parallel Computing Toolbox™ or MATLAB Distributed Computing Server™ software were installed on the computer. Performance Advisor performs this estimate as follows:

- 1** Search the model for referenced models that do not refer to other referenced models.
- 2** Calculate the average number of blocks in each of the referenced models that do not refer to other referenced models.
- 3** Of the list of referenced models that do not refer to others, select a referenced model whose number of blocks is closest to the calculated average.
- 4** Build this model to obtain the build time.
- 5** Based on the number of blocks and the build time for this referenced model, estimate the build time for all other referenced models.

- 6 Based on these build times, estimate the parallel build time for the top model.

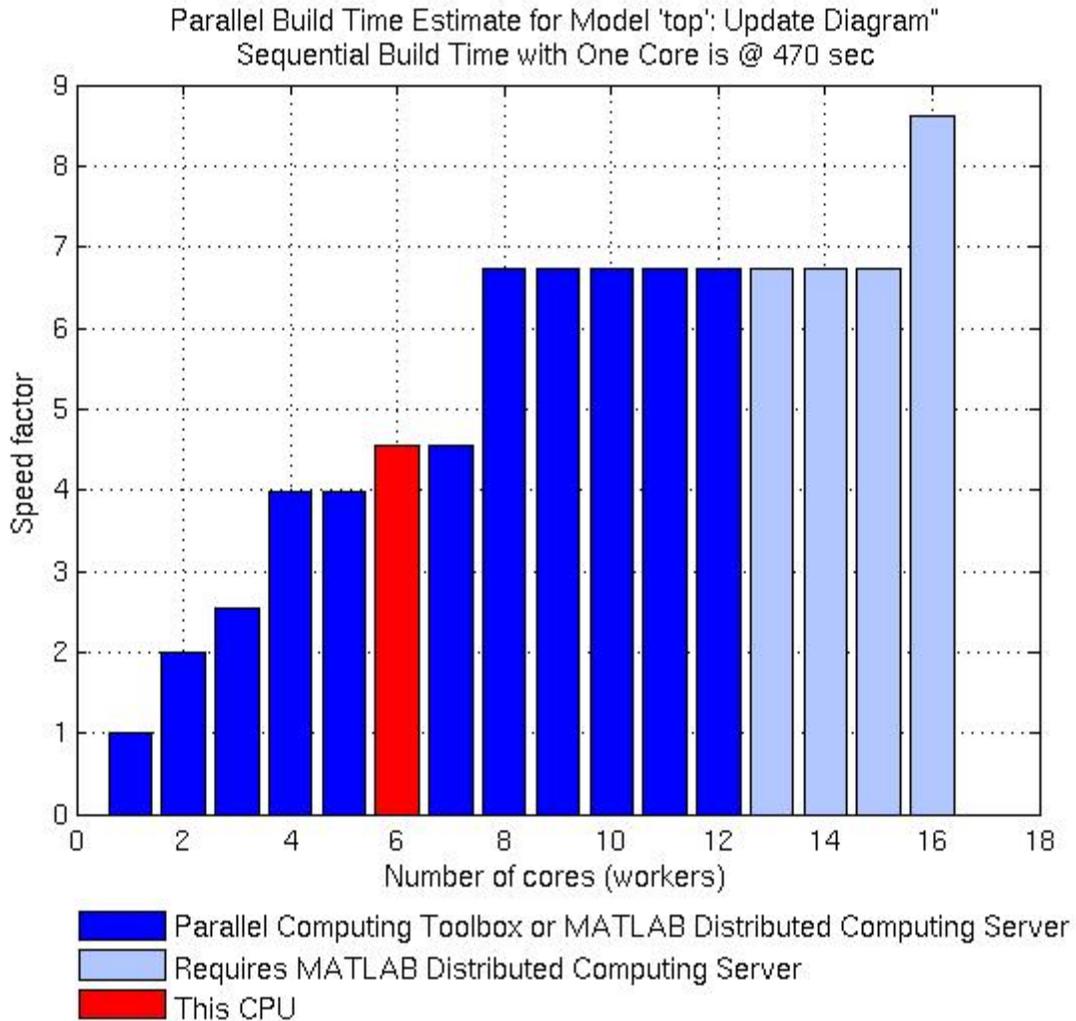

To calculate the overhead time introduced by the parallel build mechanism, set the Parallel Build Overhead Time Estimation Factor. Performance Advisor calculates the estimated build time with overhead as:

$(1 + \text{Parallel Build Overhead Time Estimation Factor}) * (\text{Build time on a single machine})$

### See Also

- “Enable parallel model reference builds”
- “How Performance Advisor Improves Simulation Performance”

### Check Delay block circular buffer setting

To improve simulation, check that each Delay block in the model uses the appropriate buffer type. By default, the block uses an array buffer (the **Use circular buffer for state** option is not selected). However, when the delay length is large, a circular buffer can improve execution speed by keeping the number of copy operations constant.

If the Delay block is currently using an array buffer, and all of the following conditions are true, Performance Advisor selects a circular buffer:

- The Delay block is in sample-based mode, i.e., either the **Input processing** parameter is set to `Elements as channels (sample based)`, or the input signal type is set to `Sample based`.
- The value or upper limit of the delay length is 10 or greater.
- The size of the state—equal to the delay length multiplied by the total of all output signal widths—is 1000 or greater.

### See Also

- Delay
- “How Performance Advisor Improves Simulation Performance”

### Check solver type selection

To improve simulation, check that the model uses the appropriate solver type.

## Explicit vs. Implicit Solvers

Selecting a solver depends on the approximation of the model stiffness at the beginning of the simulation. A stiff system has both slowly and quickly varying continuous dynamics. Implicit solvers are specifically designed for stiff problems, whereas explicit solvers are designed for non-stiff problems. Using non-stiff solvers to solve stiff systems is inefficient and can lead to incorrect results. If a non-stiff solver uses a very small step size to solve your model, check to see if you have a stiff system.

Model	Recommended Solver
Represents a stiff system	ode15s
Does not represent a stiff system	ode45

Performance Advisor uses the heuristic shown in the table to choose between explicit and implicit solvers.

Original Solver	Performance Advisor Action
Variable step solver	<p>Calculates the system stiffness at 0 first. Then:</p> <ul style="list-style-type: none"> <li>• If the stiffness is greater than 1000, Performance Advisor chooses ode15s.</li> <li>• If the stiffness is less than 1000, Performance Advisor chooses ode45.</li> </ul>
Fixed-step continuous solver	<ul style="list-style-type: none"> <li>• If the stiffness is greater than 1000, Performance Advisor chooses ode14x.</li> <li>• If the stiffness is less than 1000, Performance Advisor chooses ode3.</li> </ul>

This heuristic works best if the system stiffness does not vary during simulation. If the system stiffness varies with time, choose the most appropriate solver for that system rather than the one Performance Advisor suggests.

## See Also

- “Choose a Solver”
- “Speed Up Simulation”
- “How Performance Advisor Improves Simulation Performance”

## Select simulation mode

To achieve fastest simulation time, use this check to evaluate the following modes and identify the optimal selection:

- Normal
- Accelerator
- Rapid Accelerator
- Rapid Accelerator with up-to-date check off

In Normal mode, Simulink interprets your model during each simulation run. If you change the model frequently, this is generally the preferred mode to use because it requires no separate compilation step. It also offers the most flexibility to make changes to your model.

In Accelerator mode, Simulink compiles a model into a binary shared library or DLL where possible, eliminating the block-to-block overhead of an interpreted simulation in Normal mode. Accelerator mode supports the debugger and profiler, but not runtime diagnostics.

In Rapid Accelerator mode, simulation speeds are fastest but this mode only works with models where C-code is available for all blocks in the model. Also, this mode does not support the debugger or profiler.

When choosing Rapid Accelerator with up-to-date check off, Performance Advisor does not perform an up-to-date check during simulation. You can run the Rapid Accelerator executable repeatedly while tuning parameters without incurring the overhead of up-to-date checks. For instance, if you have a large model or a model that makes extensive use of model reference, this method of execution can increase efficiency.

For models with 3-D signals, Normal or Accelerator modes work best.

## See Also

- “How Acceleration Modes Work”
- “Choosing a Simulation Mode”
- “Comparing Performance”
- “Run Simulation Using the sim Command”

## Select compiler optimizations on or off

Use this check to determine whether performing compiler optimization can help improve simulation speed. The optimization can only be performed in Accelerator or Rapid Accelerator modes.

---

**Note** This check will be skipped if MATLAB is not configured to use an optimizing compiler.

---

## See Also

- “How Acceleration Modes Work”
- “Choosing a Simulation Mode”
- “Comparing Performance”
- “How Performance Advisor Improves Simulation Performance”

## Final Validation

This check validates the overall performance improvement of simulation time and accuracy in a model. If the performance is worse than the original model, Performance Advisor discards all changes to the model and loads the original model.

Global settings for validation do not apply to this check. If you have not validated the performance improvement from changes resulting from other checks, use this check to perform a final validation of all changes to a model.

### **See Also**

- “Comparing Performance”
- “How Performance Advisor Improves Simulation Performance”

# Simulink Limits

---

## Maximum Size Limits of Simulink Models

The following table documents some limits on the size and complexity of Simulink models.

<b>Model Feature</b>	<b>Limit</b>
Maximum number of levels in a block diagram	1024
Maximum number of branches in a line	1024
Maximum length of a parameter name	63
Maximum length of a parameter string value	32768
Maximum value of a model window coordinate	32768
Maximum number of bytes of logged simulation data	2 <sup>31</sup> -1 bytes on 32-bit systems, 2 <sup>48</sup> -1 bytes on 64-bit systems
Maximum number of bytes for the total block I/O buffer length in a model	2 <sup>31</sup> -1 bytes on 32-bit systems and on 64-bit systems
Maximum length of integer and fixed-point data types	128 bits