


LTE System Toolbox™

Reference

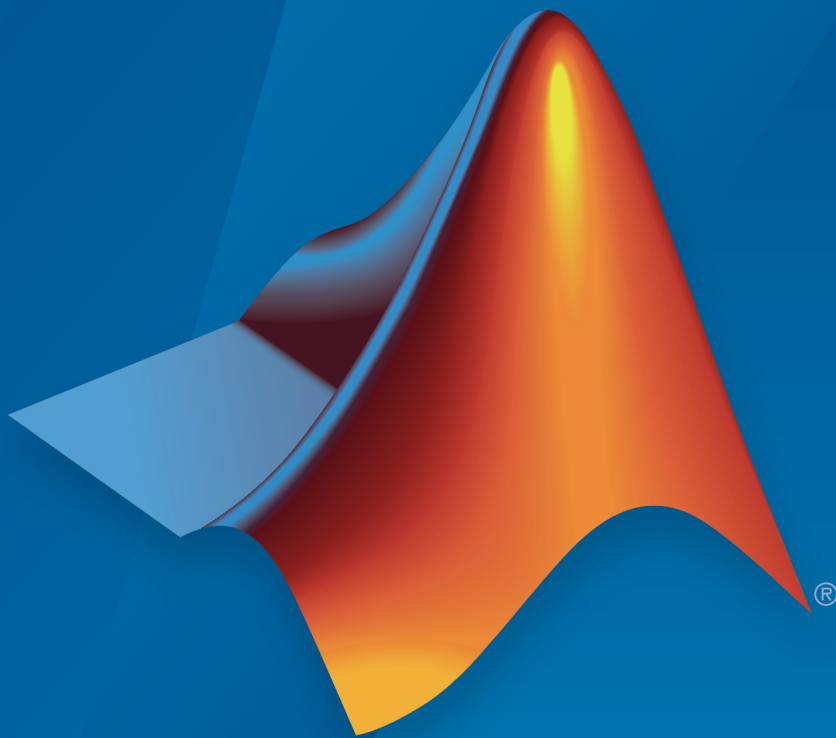

MATLAB®

R2015b

 MathWorks®

How to Contact MathWorks



Latest news: www.mathworks.com
Sales and services: www.mathworks.com/sales_and_services
User community: www.mathworks.com/matlabcentral
Technical support: www.mathworks.com/support/contact_us



Phone: 508-647-7000



The MathWorks, Inc.
3 Apple Hill Drive
Natick, MA 01760-2098

LTE System Toolbox™ Reference

© COPYRIGHT 2013–2015 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

MathWorks products are protected by one or more U.S. patents. Please see www.mathworks.com/patents for more information.

Revision History

September 2013	Online only	Revised for Version 1.0 (Release 2013b)
March 2014	Online only	Revised for Version 1.1 (Release 2014a)
October 2014	Online only	Revised for Version 1.2 (Release 2014b)
March 2015	Online only	Revised for Version 2.0 (Release 2015a)
September 2015	Online only	Revised for Version 2.1 (Release 2015b)

Functions — Alphabetical List

1

Other Reference Pages

2

Resource Grid and Block Diagrams

3

Downlink Physical Channels Grid	3-2
Downlink Physical Signals Grid	3-6
Uplink Physical Channels and Signals Grid	3-9
DCI Processing Functions	3-14
UCI Processing Functions	3-16
PDCCH Processing Functions	3-19
PUCCH Format 1 Processing Functions	3-21
PUCCH Format 2 Processing Functions	3-23
PUCCH Format 3 Processing Functions	3-25
DL-SCH Processing Functions	3-27

UL-SCH Processing Functions	3-29
PDSCH Processing Functions	3-31
PUSCH Processing Functions	3-33
CFI Processing Functions	3-35
PCFICH Processing Functions	3-36
PRACH Processing Functions	3-38
BCH Processing Functions	3-39
PBCH Processing Functions	3-40
PHICH Processing Functions	3-41
Downlink Receiver Functions	3-43
Uplink Receiver Functions	3-45
OFDM Modulation and Propagation Channel Models	3-47
SC-FDMA Modulation and Propagation Channel Models ..	3-48

List of Abbreviations

Selected Bibliography

A

Functions — Alphabetical List

addlteobsolete

Add obsolete LTE Toolbox interface to search path

Syntax

```
addlteobsolete
```

Description

`addlteobsolete` prefixes the directory `matlabroot\toolbox\lte\lteobsolete` to the MATLAB[®] path, which enables the obsolete LTE Toolbox interface.

Note:

- This interface is provided for backwards compatibility. It will now result in runtime errors indicating which new functions to use.
 - You can undo your changes by calling the `rmlteobsolete` function.
-

Examples

 
Add Obsolete LTE Toolbox Interface to Search Path

Add the directory associated with the obsolete LTE Toolbox interface to the MATLAB path.

View the current MATLAB path by calling the `pathtool` function.

```
pathtool
```

The Set Path dialog box appears. Scroll down through the listings to find the LTE System Toolbox™ product directories, as shown in the following figure.

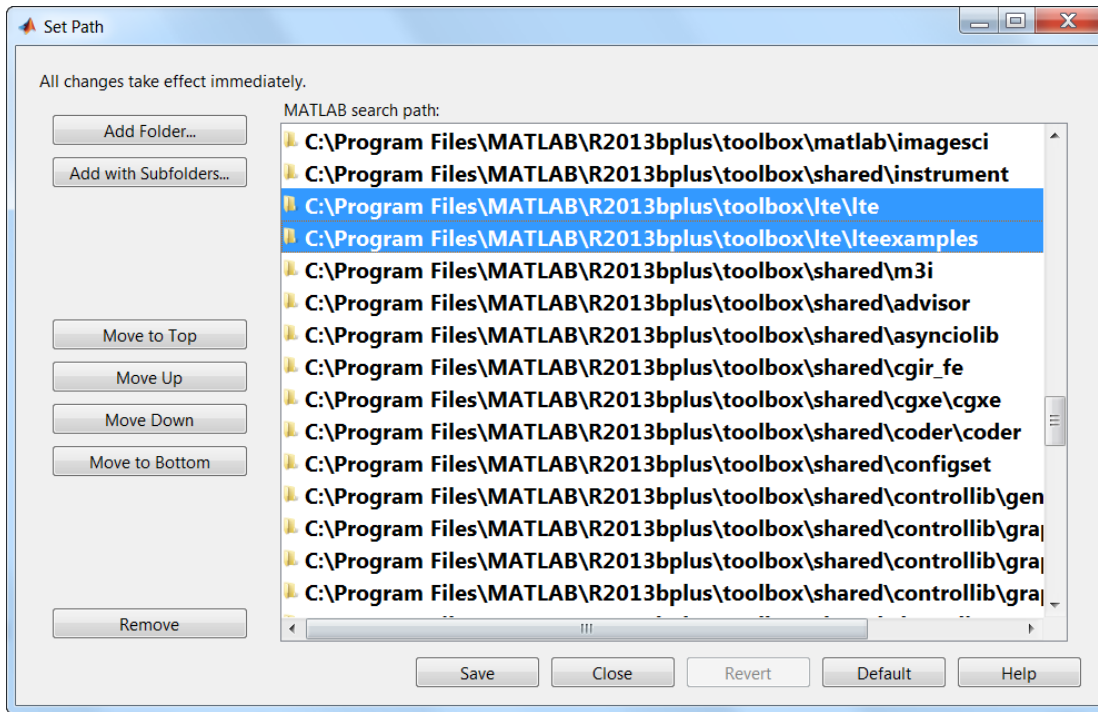

If you see the listing `matlabroot\toolbox\lte\lteobsolete`, you do not need to run the `addlteobsolete` function. Exit this example. Otherwise, click **Close** to close the Set Path dialog box.

 
Add the obsolete LTE Toolbox interface to the path.

```
addlteobsolete
```

To confirm the changes, call the `pathtool` function again.

```
pathtool
```

The Set Path dialog box appears. Find the LTE System Toolbox product directories at the top of the list, as shown in the following figure.

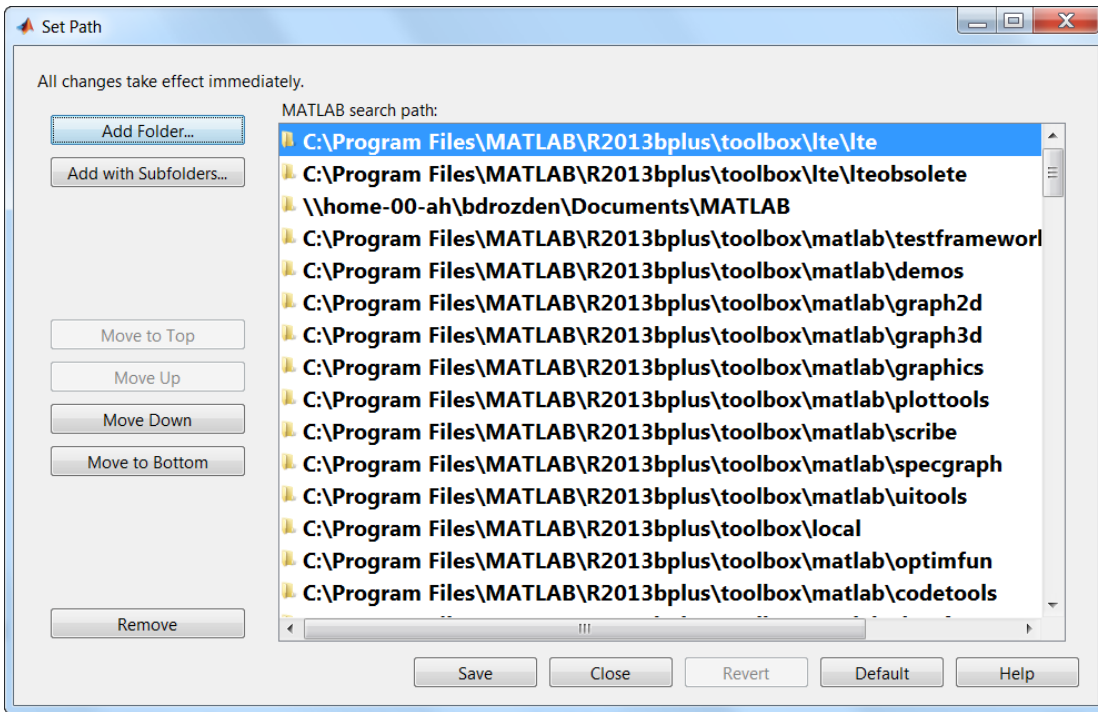

The 2nd listing, `matlabroot\toolbox\lte\lteobsolete`, shows that you have added the obsolete LTE Toolbox interface to the search path. Click **Close** again to close the Set Path dialog box.

See Also

`rmlteobsolete`

Introduced in R2014a

lteACKDecode

HARQ-ACK channel decoding

Syntax

```
out = lteACKDecode(chs,in)
```

Description

`out = lteACKDecode(chs,in)` performs the block decoding on soft input data, `in`, assumed to be encoded using the procedure defined for HARQ-ACK in TS 36.212, Section 5.2.2.6 [1] for given PUSCH channel transmission configuration `chs`. The decoded output, `out`, is a vector of length `OACK`, the number of uncoded HARQ-ACK bits transmitted.

Note: If `NBundled` is 0, TDD ACK-NACK descrambling is disabled.

Multiple codewords can be parameterized by two different forms of the `chs` structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, or 1-by-1, structure. Any scalar field values apply to both codewords and a scalar `chs.NLayers` is the total number. See “UL-SCH Parameterization” for further details.

The block decoding is performed separately on each soft input data codeword using a maximum likelihood (ML) approach, assuming that `in` has been demodulated and equalized to best restore the originally transmitted values.

The HARQ-ACK decoder performs different type of block decoding depending upon the number of uncoded HARQ-ACK bits to be recovered (`OACK`). For `OACK` less than 3 bits, the decoder assumes the bits are encoded using the procedure defined in TS 36.212, Section 5.2.2.6 [1].

For decoding between 3 and 11 HARQ-ACK bits, the decoder assumes the bits are block encoded using the procedure defined in TS 36.212, Section 5.2.2.6.4 [1]. For greater than

11 bits, the decoder performs the inverse procedure described in TS 36.212, Section 5.2.2.6.5 [1].

Examples

Decode HARQ-ACK Channel

This example shows the block decoding of 3 coded HARQ-ACK information bits.

Create input and initialize channel structure. Encode bits and turn logical bits into soft data. Perform bit decoding.

```
in = [1;0;1];  
chs = struct('Modulation','16QAM','QdACK',2,'OACK',length(in));
```

```
encodedBits = lteACKEncode(chs,in);  
encodedBits = (double(encodedBits)-0.5)*sqrt(2.0)
```

```
Warning: Using default value for parameter field NLayers (1)  
Warning: Using default value for parameter field NBundled (0)
```

```
encodedBits =
```

```
    0.7071  
   -0.7071  
    0.7071  
   -0.7071  
   -0.7071  
    0.7071  
   -0.7071  
    0.7071
```

```
decodedBits = lteACKDecode(chs,encodedBits)
```

```
Warning: Using default value for parameter field NLayers (1)  
Warning: Using default value for parameter field NBundled (0)
```

```
decodedBits =
```

```
    1  
    0
```

1

To suppress 'Using default value ...' warnings for LTE parameters, execute `lteWarning('off', 'DefaultValue')` in your MATLAB® command window prior to running code or initialize the parameters in your code workspace.

Input Arguments

chs — PUSCH-specific channel transmission configuration

scalar structure | structure array

PUSCH-specific channel transmission configuration, specified as a structure or a structure array, which contains the following parameter fields.

Parameter Field	Required or Optional	Values	Description
Modulation	Required	('QPSK', '16QAM', '64QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
OACK	Optional	nonnegative scalar integer, 0 (default)	Number of uncoded HARQ-ACK bits. The HARQ-ACK decoder performs different type of block decoding depending upon the number of uncoded HARQ-ACK bits to be recovered (OACK). For OACK less than 3 bits, the decoder assumes the bits are encoded using the procedure defined in TS 36.212, Section 5.2.2.6 [1]. For decoding between 3 and 11 HARQ-ACK bits, the decoder assumes the bits are block encoded using the procedure defined in TS 36.212, Section 5.2.2.6.4 [1]. For greater than 11 bits, the decoder performs the inverse procedure described in TS 36.212, Section 5.2.2.6.5 [1].
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers

Parameter Field	Required or Optional	Values	Description
NBundled	Optional	0 (default), 1, ..., 9	TDD HARQ-ACK bundling scrambling sequence index. When set to 0, the function disables the TDD HARQ-ACK bundling scrambling. Therefore, it is off by default.

in — Soft input data

numeric vector

Soft input data, specified as a numeric vector. The input data is assumed to be encoded using the procedure defined for HARQ-ACK in TS 36.212, Section 5.2.2.6 [1].

Output Arguments

out — Decoded HARQ-ACK channel

numeric column vector

Decoded HARQ-ACK channel output, returned as an OACK-by-1 column vector.

Data Types: double

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteACKEncode | lteCQIDecode | lteRIDecode | lteUCIDecode | lteULSCHDecode
| lteULSCHDeinterleave

Introduced in R2014a

lteACKEncode

HARQ-ACK channel encoding

Syntax

```
out = lteACKEncode(chs,in)
```

Description

`out = lteACKEncode(chs,in)` returns the coded HARQ-ACK information bits after performing block coding defined for HARQ-ACK in TS 36.212, Section 5.2.2.6 [1]. The input argument, `in`, is a vector or cell array containing up to 20 HARQ-ACK information bits. The output argument, `out`, is the encoded bits in the same form.

Multiple codewords can be parameterized by two different forms of the `chs` structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, or 1-by-1, structure. Any scalar field values apply to both codewords and a scalar `NLayers` is the total number. See “UL-SCH Parameterization” for further details.

Since the HARQ-ACK bits are carried on all defined codewords, a single input results in a cell array of encoded outputs if multiple codewords are parameterized. This allows for easy integration with the other toolbox functions.

The HARQ-ACK coder performs different types of block coding depending upon the number of HARQ-ACK bits in vector `in`. If `in` consists of one element, it uses TS 36.212, Table 5.2.2.6-1 [1]. If `in` consists of two elements, it uses TS 36.212, Table 5.2.2.6-2 [1] for encoding. The placeholder bits, x and y in the referenced tables, are represented by -1 and -2 , respectively.

Similarly, for between 3 and 11 bits, the HARQ-ACK encoding is performed as described in section 5.2.2.6.4. For bits greater than 11, the encoding is performed as described in TS 36.212, Section 5.2.2.6.5 [1].

Examples

Encode HARQ-ACK Channel with one codeword

Encode a HARQ-ACK information bit for one codeword with 16QAM modulation.

```
ackbit = 1;
chs.Modulation = '16QAM';
chs.QdACK = 1;
out1 = lteACKEncode(chs,ackbit)
```

```
Warning: Using default value for parameter field NLayers (1)
Warning: Using default value for parameter field NBundled (0)
```

```
out1 =
```

```
    1
   -2
   -1
   -1
```

To suppress 'Using default value ...' warnings for LTE parameters, execute `lteWarning('off','DefaultValue')` in your MATLAB® command window prior to running code or initialize the parameters in your code workspace.

Encode HARQ-ACK Channel with two codewords

Encode a HARQ-ACK information bit for two codewords with differing modulation schemes.

```
ackbit = 1;
chs.Modulation = {'16QAM' '64QAM'};
chs.NLayers = 2;
chs.QdACK = 1;
out2 = lteACKEncode(chs,ackbit)
```

```
Warning: Using default value for parameter field NBundled (0)
```

```
out2 =
```

```
 [4x1 int8]    [6x1 int8]
```

To suppress 'Using default value ...' warnings for LTE parameters, execute `lteWarning('off','DefaultValue')` in your MATLAB® command window prior to running code or initialize the parameters in your code workspace.

Input Arguments

chs — PUSCH-specific channel transmission configuration

scalar structure | structure array

PUSCH-specific channel transmission configuration, specified as a structure or a structure array, which contains the following parameter fields.

Parameter Field	Required or Optional	Values	Description
QdACK	Required	nonnegative scalar integer	Number of coded HARQ-ACK symbols for ACK or NACK (<i>Q'_ACK</i>)
Modulation	Required	('QPSK', '16QAM', '64QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers, total or per codeword
NBundled	Optional	0 (default), 1, ..., 9	TDD HARQ-ACK bundling scrambling sequence index. When set to 0, the function disables the TDD HARQ-ACK bundling scrambling. Therefore, it is off by default.

in — HARQ-ACK information bits

logical vector of length 1 to 20 | cell array of logical vectors

HARQ-ACK information bits, specified as a logical vector or a cell array of logical vectors. Each vector can have a length of up to 20 information bits.

Data Types: logical | double | cell

Output Arguments

out — Encoded HARQ-ACK information bits

integer column vector | cell array of integer column vectors

Encoded HARQ-ACK information bits, returned as either an integer column vector or a cell array of integer column vectors. The encoded bits are in the same form as the input bits. Therefore, if the PUSCH-specific parameter structure, `chs`, defines multiple codewords, `out` is a cell array.

Data Types: `int8` | `cell`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteACKDecode` | `lteCQIEncode` | `lteRIEncode` | `lteUCIEncode` | `lteULSCH` | `lteULSCHInterleave`

Introduced in R2014a

lteBCH

Broadcast channel

Syntax

```
codeblk = lteBCH(enb,trblk)
```

Description

`codeblk = lteBCH(enb,trblk)` returns a vector of BCH transport channel coded bits.

The input argument, `trblk`, is a vector of 24 bits. It represents the information bits delivered to the broadcast channel (BCH) every 40 ms. The coded output vector, `codeblk`, contains 1920 bits for normal cyclic prefix or 1728 bits for extended cyclic prefix.

Given the small input size, which is 24, compared with the large output size, which is 1920 or 1728, the rate matching internal to the coding results in a large number of repetitions of the coded block. This repetition is deliberate so that part of a received block can be successfully decoded in isolation. For example, the receiver can recover the BCH bits from the reception of just one frame, $\frac{1}{4}$ of the transmitted block, rather than waiting 40 ms, or 4 frames, for the full block to be received.

Examples

Encode BCH Information Bits

Generate a BCH-coded block of length 1920.

```
enb = struct('CellRefP',1,'CyclicPrefix','Normal');  
bchCoded = lteBCH(enb,ones(24,1));  
size(bchCoded)
```

1920

1

Input Arguments

enb — eNodeB cell-wide settings

scalar structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

trblk — Transport block

numeric vector

Transport block, specified as a numeric vector of length 24 bits. This argument represents the transport block delivered to the BCH every 40 ms.

Output Arguments

codeblk — BCH transport channel coded bits

numeric column vector

BCH transport channel coded bits, returned as an integer column vector.

Data Types: `int8`

See Also

`lteBCHDecode` | `lteMIB` | `ltePBCH`

Introduced in R2014a

lteBCHDecode

Broadcast channel decoding

Syntax

```
[trblk,cellrefp] = lteBCHDecode(enb,softbits)
```

Description

[trblk,cellrefp] = lteBCHDecode(enb,softbits) returns a vector, trblk, of the decoded information bits (24 bits). cellrefp is the number of cell-specific reference signal antenna ports detected (1,2,4) in the CRC mask for given input, softbits, and the structure, enb.

If the cellrefp value is 0, a CRC error has been detected.

The transport block size, 24, is relatively small when compared to the number of coded bits sent in the BCH transmission, 1920 or 1728. For this reason, the rate matching internal to the BCH coding results in a large number of repetitions of the coded block. Therefore, the decoder can successfully decode blocks whose lengths are much shorter than the length of the full coded block. Consequently, this decoder allows the input argument softbits to be of any length.

Examples

Decode BCH-Encoded Block

Perform BCH encoding of one transport block. Then, perform BCH decoding of part of the encoded block, one quarter the length.

```
enb = lteRMCDL('R.4');
bchCoded = lteBCH(enb,ones(24,1));
out = bchCoded(1:length(bchCoded)/4);
[bchDecoded,cellRefP] = lteBCHDecode(enb,out);
bchDecoded(1:10)
```

1
1
1
1
1
1
1
1
1
1

In a practical system, this approach would be used to attempt BCH decoding on the one quarter part of the encoded block that is transmitted in the first subframe of each frame.

Input Arguments

enb — eNodeB cell-wide settings

scalar structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

softbits — Soft bits to decode

numeric vector

Soft bits to decode, specified as a numeric vector. This vector can have any length.

The transport block size, 24, is relatively small when compared to the number of coded bits sent in the BCH transmission, 1920 or 1728. For this reason, the rate matching internal to the BCH coding results in a large number of repetitions of the coded block. Therefore, the decoder can successfully decode blocks whose lengths are much shorter than the length of the full coded block.

Output Arguments

trblk — Decoded information bits

integer column vector

Decoded information bits, returned as a 24-by-1 integer column vector.

Data Types: `int8`

cellrefp — Number of cell-specific reference signal (CRS) antenna ports

0 | 1 | 2 | 4

Number of cell-specific reference signal (CRS) antenna ports detected, returned as a nonnegative scalar integer. Possible values are 0, 1, 2, and 4. If the value is 0, a CRC error has been detected.

Data Types: `uint32`

See Also

`lteBCH` | `ltePBCHDecode`

Introduced in R2014a

lteCFI

Control format indicator block encoding

Syntax

```
cw = lteCFI(enb)
```

Description

`cw = lteCFI(enb)` returns a 32-element vector, `cw`, that represents the rate 1/16 block encoding of the control format indicator (CFI) value defined in the `CFI` field of the `enb` structure.

The value for CFI can be 1, 2, or 3. This value indicates the time span, in OFDM symbols, of the DCI PDCCH transmission (the control region) in that downlink subframe. For bandwidths in which `NDLRB` is greater than 10 RB, the span of the DCI in OFDM symbols is the same as the actual CFI value. If `NDLRB` is less than or equal to 10 RB, the span is `CFI+1` symbols.

Examples

Encode CFI Value

Generate the 32-element vector that represents block encoding of a CFI value of 2.

```
cw = lteCFI(struct('CFI',2));  
cw(1:10)
```

```
1  
0  
1  
1  
0  
1  
1  
0
```

1
1

Input Arguments

enb — eNodeB cell-wide settings

scalar structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
CFI	Required	1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB') The value for CFI can be 1, 2, or 3. This value indicates the time span, in OFDM symbols, of the DCI PDCCH transmission (the control region) in that downlink subframe. For bandwidths in which NDLRB is greater than 10 RB, the span of the DCI in OFDM symbols is the same as the actual CFI value. If NDLRB is less than or equal to 10 RB, the span is <i>CFI</i> +1 symbols.

Output Arguments

cw — CFI codeword

integer column vector

CFI codeword, returned as an integer column vector of length 32. This vector represents the 1/16 block encoding of the CFI value defined in structure `enb`.

Data Types: `int8`

See Also

`lteCFIDecode` | `ltePCFICH`

Introduced in R2014a

lteCFIDecode

Control format indicator block decoding

Syntax

```
cfi = lteCFIDecode(ibits)
```

Description

`cfi = lteCFIDecode(ibits)` performs the block decoding on soft input data `ibits`, assumed to be encoded using procedure defined in section 5.3.4.1 of [1]. The output, `cfi`, is a scalar representing the control format indicator (CFI) value resulted after performing block decoding on input data. Strictly speaking, `ibits` should be a vector 32 bits long, as per encoded `cfi`. See the `lteCFI` function reference for details. However, this function can take any size segment of encoded data to perform decoding.

The value for CFI can be 1, 2, or 3. This value indicates the time span, in OFDM symbols, of the DCI PDCCH transmission (the control region) in that downlink subframe. For bandwidths in which `NDLRB` is greater than 10 RB, the span of the DCI in OFDM symbols is the same as the actual CFI value. If `NDLRB` is less than or equal to 10 RB, the span is $CFI+1$ symbols.

Examples

Decode CFI Block

Decode a noisy 32-element vector that represents the block encoding of the control format indicator (CFI) value.

```
cw = double(lteCFI(struct('CFI',2)));  
noisycw = cw + 0.4*randn(length(cw),1);  
cfi = lteCFIDecode(noisycw)
```

Input Arguments

ibits — Soft input data

numeric vector

Soft input data, specified as a numeric vector of length 32. This input data is assumed to be encoded using the procedure defined in section 5.3.4.1 of [1].

Output Arguments

cfi — Control format indicator value

1 | 2 | 3

Control format indicator value, returned as a positive scalar integer. This integer represents the CFI value resulting from performing block decoding on a vector of soft input data, `ibits`.

The value for CFI can be 1, 2, or 3. This value indicates the time span, in OFDM symbols, of the DCI PDCCH transmission (the control region) in that downlink subframe. For bandwidths in which `NDLRB` is greater than 10 RB, the span of the DCI in OFDM symbols is the same as the actual CFI value. If `NDLRB` is less than or equal to 10 RB, the span is $CFI+1$ symbols.

Data Types: `int32`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteCFI` | `ltePCFICHDecode`

Introduced in R2014a

lteCQIDecode

Channel quality information channel decoding

Syntax

```
out = lteCQIDecode(chs,in)
```

Description

`out = lteCQIDecode(chs,in)` performs the decoding on soft input data, `in`, assumed to be encoded using the procedure defined for channel quality information (CQI) in TS 36.212, Sections 5.2.2.6 and 5.2.2.6.4 [1] for given channel transmission configuration, `chs`. The decoded output, `out`, is a vector of length `OCQI`, the number of uncoded CQI bits transmitted.

Multiple codewords can be parameterized by two different forms of the `chs` structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, or 1-by-1, structure. Any scalar field values apply to both codewords and a scalar `NLayers` is the total number. See “UL-SCH Parameterization” for further details.

The block decoding is performed separately on each soft input data using a maximum likelihood (ML) approach, which assumes that `in` has been demodulated and equalized to best restore the original transmitted values. The length of CQI bits defines the decoding process.

If the number of CQI bits, `OCQI`, is less than or equal to 11, a block decoding is performed to invert the coding procedure defined in TS 36.212, Section 5.2.2.6.4 [1]. If `OCQI` is greater than 11, the CQI bits are recovered by performing rate matching to `OCQI`, tail-biting Viterbi decoding, and 8-bit CRC decoding.

Examples

Decode CQI bits

Decode encoded CQI bits.

Create input stream and initialize channel settings structures for encoding and decoding. Encode CQI bits and turn logical bits into soft data. Decode the CQI bits.

```

cqi = [0; 1; 0; 1; 0; 1];

chsEnc.Modulation = 'QPSK';
chsEnc.QdCQI = 16;
chsEnc.NLayers = 1;

chsDec.NLayers = 1;
chsDec.OCQI = 6;

enc = lteCQIEncode(chsEnc,cqi);
enc = double(enc)-0.5;

rxCqi = lteCQIDecode(chsDec,enc)

rxCqi =

    0
    1
    0
    1
    0
    1
    
```

Input Arguments

chs — Channel-specific transmission configuration

scalar structure | structure array

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
OCQI	Optional	nonnegative scalar integer, 0 (default)	Number of uncoded channel quality information (CQI) bits
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers

in — Encoded soft input data

numeric vector

Encoded soft input data, specified as a numeric vector.

Output Arguments

out — Decoded output

logical column vector

Decoded output, returned as a logical column vector of length **OCQI**.Data Types: `logical`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteACKDecode` | `lteCQIEncode` | `lteRIDecode` | `lteUCIDecode` | `lteULSCHDecode`**Introduced in R2014a**

lteCQIEncode

Channel quality information channel encoding

Syntax

```
out = lteCQIEncode(chs,in)
```

Description

`out = lteCQIEncode(chs,in)` returns the encoded channel quality information (CQI) bits after performing channel coding defined for CQI in TS 36.212, Sections 5.2.2.6 and 5.2.2.6.4 [1]. `in` should be a vector or cell array containing the CQI bits and `out` is the encoded bits in the same form. `out` is also cell array if the PUSCH-specific parameter structure, `chs`, defines multiple codewords.

Multiple codewords can be parameterized by two different forms of the `chs` structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, or 1-by-1, structure. Any scalar field values apply to both codewords and a scalar `NLayers` is the total number. See “UL-SCH Parameterization” for further details.

While the CQI information bits are carried on one codeword only, a single input still results in a cell array of encoded outputs if multiple codewords are parameterized. In this case, the `QdCQI` field should contain a 0 in the position of the unused codeword. This allows for easy integration with the other toolbox functions.

The CQI coder uses two different coding schemes depending upon the number of CQI bits to be coded. If the number of CQI bits are less than or equal to 11, the channel coding of the CQI bits is performed according to TS 36.212, Section 5.2.2.6.4 [1]. For CQI bits greater than 11, the coding process includes 8-bit CRC attachment, tail-biting convolutional coding and rate matching to the output length deduced from parameters `QdCQI` and `Modulation`.

Examples

Encode CQI Bits for One Codeword

Generate the coded CQI bits for a single codeword.

Create input stream and initialize channel settings structure. Encode CQI bits.

```
in = [0; 1; 0; 1; 0; 1];  
chs1.Modulation = '16QAM';  
chs1.QdCQI = 4;  
chs1.NLayers = 2;  
  
codedCqi1 = lteCQIEncode(chs1,in)
```

```
codedCqi1 =
```

```
1  
1  
1  
1  
0  
1  
0  
1  
0  
1  
1  
0  
0  
1  
1  
0  
0  
0  
1  
1  
0  
0  
0  
1  
0  
0  
1  
0  
0
```

```

0
1
1
0
1
0

```

Encode CQI Bits for Second of Two Codewords

Generate the coded CQI bits for two codewords with CQI on the second codeword.

Create input stream and initialize channel settings structure. Encode CQI bits. In this case the CQI is on the second codeword. The output is a cell array where the first cell is empty.

```

in = [0; 1; 0; 1; 0; 1];
chs2.Modulation = {'16QAM' '16QAM'};
chs2.QdCQI = [0 4];
chs2.NLayers = 2;

codedCqi2 = lteCQIEncode(chs2,in)

```

```

codedCqi2 =
    [0x1 int8]    [16x1 int8]

```

Input Arguments

chs — Channel-specific transmission configuration

scalar structure | structure array

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
QdCQI	Required	nonnegative scalar integer	Number of coded channel quality information (CQI) symbols (Q_CQI)

Parameter Field	Required or Optional	Values	Description
Modulation	Required	('QPSK', '16QAM', '64QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers

in – CQI input bits

numeric vector | cell array of numeric vectors

CQI input bits, specified as a numeric vector or a cell array of numeric vectors.

Output Arguments

out – Encoded CQI output bits

integer vector | cell array of integer vectors

Encoded CQI output bits, returned as an integer vector or a cell array of integer vectors. This argument contains the coded CQI bits after performing channel coding.

Data Types: int8 | cell

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteACKEncode | lteCQIDecode | lteRIEncode | lteUCIEncode | lteULSCH

Introduced in R2014a

lteCQISelect

PDSCH channel quality indication calculation

Syntax

```
[cqi,sinrs] = lteCQISelect(enb,chs,hest,noiseest)
```

Description

[cqi,sinrs] = lteCQISelect(enb,chs,hest,noiseest) calculates PDSCH CQI (Channel Quality Indication) for a given cell wide enb, channel configuration structure chs, channel estimate resource array hest and receiver noise variance noiseest.

The function performs the CQI selection by first obtaining SINR (Signal to Interference and Noise Ratio) estimates for a given configuration from ltePMISelect. Then the function performs a lookup between those SINR estimates and the CQI index. The lookup tables are precomputed and stored in this function. CQI selection is conditioned on the rank indicated by CHS.NLayers, except for the 'TxDiversity' transmission scheme which has a rank of 1. On PUCCH, CQI selection corresponds to Report Type 2 (for reporting Mode1-1) or Report Type 4 (for reporting mode 1-0). On PUSCH, the reporting will be Mode 1-2, Mode 3-0, or Mode 3-1.

A CQI Index is a scalar (0, ..., 15), indicating the selected value of the CQI index. The CQI index is defined as per TS 36.213, [1]. The highest CQI index is when a single PDSCH transport block with a modulation scheme and transport block size of CQI index, and occupying a group of downlink physical resource blocks termed the CSI reference resource, can be received with a transport block error probability not exceeding 0.1. If a CQI index of 1 does not satisfy this condition then, the returned CQI index is 0. The CQI reference resource is defined in TS 36.213, Section 7.2.3, [1]. The relationship between CQI indices, modulation scheme, and code rate (from which transport block size is derived) is described in TS 36.213, Tables 7.2.3-1 and 7.2.3-2, [1].

A subband differential CQI offset level is the difference between a subband CQI index and the corresponding wideband CQI index.

A spatial differential CQI offset level is the difference between the wideband CQI index for codeword 0 and the wideband CQI index for codeword 1.

Within the 3GPP standard, CQI offsets are reported as *CQI values*. These values are nonnegative integers corresponding to single CQI offset level or range of CQI offset levels (see TS 36.213, Tables 7.2-2 and 7.2.1-2, [1]). The CQI offset levels reported here are either the single CQI offset level or the boundary value of the CQI offset level range corresponding to the CQI value reported. For example, for a spatial differential CQI offset level of -6 , reported as a spatial differential CQI value of 4, this function report as a spatial differential offset level of -4 by this function (see TS 36.213, Table 7.2-2, [1]).

For transmission schemes using UE-specific beamforming ('Port 5', 'Port 7-8', 'Port 8', 'Port7-14'), the performance depends on the beamforming used. For this the appropriate value of CHS.SINRs90pc field is provided. If this field is not provided, for single antenna ports, the function uses default SINRs90pc values.

Examples

Calculate CQI

An empty resource grid for RMC R.13 is populated with cell-specific reference signals symbols. The signal is filtered through the channel, demodulated and the corresponding channel is estimated along with an estimate of noise power spectral density on the reference signal subcarriers. The estimates are used for CQI calculation.

Populate an empty resource grid for RMC R.13 with cell-specific reference signal symbols and modulate the waveform. Add noise to txWaveform. Configure an EPA fading channel and filter the signal through this channel.

```
enb = lteRMCDL('R.13');
reGrid = lteResourceGrid(enb);
reGrid(lteCellRSIndices(enb)) = lteCellRS(enb);
[txWaveform,info] = lteOFDMModulate(enb,reGrid);

noise = 0.5*complex(randn(size(txWaveform)),randn(size(txWaveform)));
txWaveform_nz = txWaveform + noise;

chcfg.SamplingRate = info.SamplingRate;
chcfg.DelayProfile = 'EPA';
chcfg.NRxAnts = 4;
chcfg.DopplerFreq = 5;
chcfg.MIMOCorrelation = 'Low';
chcfg.InitTime = 0;
chcfg.Seed = 1;
```

```
rxWaveform = lteFadingChannel(chcfg,txWaveform_nz);
```

```
Warning: Using default value for parameter field InitPhase (Random)
Warning: Using default value for parameter field ModelType (GMEDS)
Warning: Using default value for parameter field NTerms (16)
Warning: Using default value for parameter field NormalizeTxAnts (On)
Warning: Using default value for parameter field NormalizePathGains (On)
```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the following command `lteWarning('off','DefaultValue')`.

Demodulate the received signal. Perform downlink channel estimate and noise power spectral density estimation on the demodulated signal. Use estimates of channel and noise power spectral density for CQI calculation.

```
rxSubframe = lteOFDMDemodulate(enb,rxWaveform);

cec.FreqWindow = 1;
cec.TimeWindow = 15;
cec.InterpType = 'cubic';
cec.PilotAverage = 'UserDefined';
cec.InterpWinSize = 1;
cec.InterpWindow = 'Centered';
[hest, noiseEst] = lteDLChannelEstimate(enb,cec,rxSubframe);

cqi = lteCQISelect(enb,enb.PDSCH,hest,noiseEst)

cqi =

    5
```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings, specified as a structure. The structure contains the following parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ..., 503)	Physical layer cell identity
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters apply when DuplexMode is set to 'TDD'.			
TDDConf	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
NSubframe	Required	Nonnegative scalar integer	Subframe number
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following parameters are apply when chs.TxScheme is set to 'Port7-14'			
CSIRefP	Required	1, 2, 4, 8	Array of number of CSI-RS antenna ports

Parameter Field	Required or Optional	Values	Description
CSIRSCo	Required	scalar integer	Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1.
CSIRSpe	Optional	'On' (default), 'Off', <code>Icsi-rs</code> (0,...,154), [<code>Tcsi-rs</code> <code>Dcsi-rs</code>]. You can also specify values in a cell array of configurations for each resource.	CSI-RS subframe configurations for one or more CSI-RS resources. Multiple CSI-RS resources can be configured from a single common subframe configuration or from a cell array of configurations for each resource.
NFrame	Optional	0 (default), Nonnegative scalar integer	Frame number

chs — Channel-specific transmission configuration

structure | structure array

Channel-specific transmission configuration, specified as a structure or structure array. The structure contains the following parameter fields:

Parameter Field	Required or Optional	Values	Description
NLayers	Required	1, 2, 3, 4, 5, 6, 7, 8	Number of transmission layers
CSIMode	Required	'PUCCH 1-0', 'PUCCH 1-1', 'PUSCH 1-2', 'PUSCH 3-0', 'PUSCH 3-1'	CSI reporting mode
TxScheme	Required	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity',	Transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> 'SpatialMux' — Closed-loop spatial multiplexing.

Parameter Field	Required or Optional	Values	Description
		'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	<ul style="list-style-type: none"> 'Port0' — Single-antenna port, port 0. 'TxDiversity' — Transmit diversity scheme. 'CDD' — Large delay CDD scheme. 'MultiUser' — Multiuser MIMO scheme. 'Port5' — Single-antenna port, port 5. 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). 'Port8' — Single-antenna port, port 8. 'Port7-14' — Up to 8-layer transmission, ports 7–14.
SINRs90pc	Optional	vector double of 15 values, function handle	A vector of 15 SINR values or a function handle to a function of the form f(enb, chs) which returns a vector of 15 SINR values, one for each CQI index 1, ..., 15. These correspond to the lowest SINR for which the throughput of the PDSCH in the CQI/CSI reference resource, for the given configuration and CQI index, is at least 90%. Default is to internally select SINRs based on configuration given in enb and chs, assuming perfect channel estimation and either MMSE equalization or transmit diversity decoding (as appropriate for the transmission scheme) at the receiver.
The following parameters are required only for 'SpatialMux', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14' transmission schemes.			

Parameter Field	Required or Optional	Values	Description
PMISet	Required	Integer vector (0, ..., 15)	Precoder matrix indication (PMI) set. It can contain either a single value, corresponding to single PMI mode, or multiple values, corresponding to multiple or subband PMI mode. The number of values depends on CellRefP, transmission layers and TxScheme. For more information about setting PMI parameters, see <code>ltePMIInfo</code> .
Additionally, one of the following fields must be included			
NCodewords	Required	1, 2	Number of codewords
Modulation	Required	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.

You can specify the number of codewords directly in the `NCodewords` field. Alternatively, if the `Modulation` field is provided, the number of codewords is established from the number of modulation formats. This value lets you establish the correct number of codewords using the channel transmission configuration structure `chs` as provided to `ltePDSCH` function on the transmit side. The `NCodewords` field takes precedence if present.

hest — Channel estimate

multidimensional array

Channel estimate, specified as a multidimensional array. It has size K -by- L -by- $NRxAnts$ -by- P where:

- K is the number of sub-carriers.
- L is the number of OFDM symbols.
- $NRxAnts$ is the number of receive antennas.
- P is the number of transmit antennas.

Data Types: `double`

Complex Number Support: Yes

noiseest — Receiver noise variance

numeric scalar

Receiver noise variance, specified as a numeric scalar. **noiseest** is an estimate of the received noise power spectral density.

Data Types: double

Output Arguments

cqi — Channel quality information

column vector

Channel quality information, returned as a column vector containing a channel quality information report. Report contents depend on the CSI reporting mode.

Report Mode	Reporting Contents
Single codeword:	
'PUCCH 1-0'	A single wideband CQI index
'PUSCH 3-0'	A single wideband CQI index, followed by a subband differential CQI offset level for each subband.
Two codewords:	
'PUCCH 1-1'	A single wideband CQI index for codeword 0, followed by a spatial differential CQI offset level for codeword 1.
'PUSCH 1-2'	A single wideband CQI index for codeword 0, followed by a single wideband CQI index for codeword 1.
'PUSCH 3-1'	A single wideband CQI index for codeword 0, followed by a subband differential CQI offset level for each subband for codeword 0, followed by a single wideband CQI index for codeword 1, followed by a subband differential CQI offset level for each subband for codeword 1.

Note: CSI reporting modes, are separated into those that support one or two codewords, as described by the standard. The CQI select function derives these code words from NCodewords field or Modulation field.

sinrs — signal-to-interference plus noise ratios

matrix

Signal-to-interference plus noise ratios, in dB, returned as a matrix. Each column of the matrix represents a single codeword. If subband CQI reporting is configured, the SINR for the wideband CQI is in the first row, followed by the sinrs for the subband CQIs in subsequent rows. This is an optional output.

References

- [1] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePMISelect | lteRISelect

Introduced in R2014b

lteCRCDecode

Cyclic redundancy check decoding and removal

Syntax

```
[blk,err] = lteCRCDecode(blkcrc,poly)
[blk,err] = lteCRCDecode(blkcrc,poly,mask)
```

Description

`[blk,err] = lteCRCDecode(blkcrc,poly)` checks the input data vector for a CRC error assuming the vector comprises a block of data with the associated CRC bits attached. The data part of the input is returned in vector `blk`. The logical difference (XOR) between the attached CRC and the CRC recalculated across the data part of the input is returned in `uint32` scalar `err`. If `err` is not equal to 0, either an error has occurred or the input CRC has been masked. A logical mask can also be applied directly to `err`. `lteCRCDecode` returns `blk`, the data-only part of the combined data and CRC input vector, `blkcrc`, and the `uint32` `err`, the logical (XOR) CRC difference. The CRC polynomial is defined by a string, which can be either '8', '16', '24A', or '24B'. See section 5.1.1 of [1] for the associated polynomials.

`[blk,err] = lteCRCDecode(blkcrc,poly,mask)` behaves as above except the CRC difference is also XOR-ed with the scalar `mask` parameter before it is returned in `err`. The `mask` value is applied to the CRC bits with the most significant bit (MSB) first and the least significant bit (LSB) last.

Examples

Check Data Vector for CRC Error

Check a data vector for CRC error, by decoding a vector with CRC attached and specifying the optional RNTI value.

First, attach a masked '24A'-type CRC to an all-ones vector of length 100.

```
rnti = 8;
```

```
blkcrc = lteCRCDecode(ones(100,1), '24A', rnti);
```

Call `lteCRCDecode` with the data block with appended CRC and the CRC polynomial.

```
[blk1,e1] = lteCRCDecode(blkcrc, '24A');  
e1
```

Since the CRC has been masked, the returned output, `e1`, is 8, the value of `rnti`. The reason is that the logical difference between the original CRC and recalculated CRC equals the CRC mask.

Next, call `lteCRCDecode` with three input arguments, specifying the `rnti`, or mask, value.

```
[blk2,e2] = lteCRCDecode(blkcrc, '24A', rnti);  
e2
```

The returned output, `e2`, is 0 because the original RNTI mask is XORed with itself.

Input Arguments

blkcrc — CRC input data bit vector

numeric column vector

CRC input data bit vector, specified as a numeric column vector. The function checks the input bit vector for a CRC error assuming that the data consists of a block of data with CRC bits attached.

poly — CRC polynomial

'8' | '16' | '24A' | '24B'

CRC polynomial, specified as a string. See section 5.1.1 of [1] for the associated polynomials.

mask — XOR mask

scalar integer

XOR mask, specified as a scalar integer. The CRC difference is XOR-ed with `mask` before `err` is returned.

Data Types: double

Output Arguments

blk — Data bit vector

column vector

Data bit vector, returned as a column vector. **blk** is the data-only part of the input **blkcrc**.

Data Types: `int8`

err — Logical difference

integer

Logical difference, returned as an integer. **err** is the logical difference between the CRC and CRC recalculated across the data part of the input.

Data Types: `uint32`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteCodeBlockDesegment` | `lteConvolutionalDecode` | `lteCRCEncode`

Introduced in R2014a

lteCRCEncode

Cyclic redundancy check calculation and appending

Syntax

```
blkcrc = lteCRCEncode(blk,poly)
blkcrc = lteCRCEncode(blk,poly,mask)
```

Description

`blkcrc = lteCRCEncode(blk,poly)` calculates a cyclic redundancy check (CRC) for the input data vector and returns a copy of the vector with the CRC attached. To support the correct processing of filler bits, negative input bit values are interpreted as logical 0 for the purposes of the CRC calculation. A value of `-1` is used to represent filler bits. `lteCRCEncode` calculates the CRC defined by `poly` for the input bit vector `blk` and returns a copy of the input with the CRC appended in vector `blkcrc`. Valid options for the CRC polynomial are `'8'`, `'16'`, `'24A'`, or `'24B'`. See section 5.1.1 of [1] for the associated polynomials.

`blkcrc = lteCRCEncode(blk,poly,mask)` XOR masks the appended CRC bits with the integral value of `mask`. The `mask` value is applied to the CRC bits with the most significant bit (MSB) first and the least significant bit (LSB) last.

Examples

Calculate and Append CRC

Calculate and append the CRC associated with an all zero vector, which is also zero.

```
crc1 = lteCRCEncode(zeros(100,1),'24A');
crc1(1:10)

    0
    0
    0
```

```

0
0
0
0
0
0
0
0

```

The result is an all-zeros vector of length 124.

Calculate and Append CRC with MSB First

Mask the CRC bits in an MSB-first order.

Set the XOR mask to 1 to make the appended CRC bits XOR masked from the most significant to least significant bit.

```

crc2 = lteCRCEncode(zeros(100,1), '24A', 1);
crc2(end-10:end)

```

```

0
0
0
0
0
0
0
0
0
0
1

```

The result is all zeros, except for a single one in last element position.

Input Arguments

b1k — Data bit vector

numeric column vector

Data bit vector, specified as a numeric column vector.

poly — CRC polynomial

'8' | '16' | '24A' | '24B'

CRC polynomial, specified as a string. See Section 5.1.1 of [1] for the associated polynomials.

mask — XOR mask

integer

XOR mask, specified as an integer. The appended CRC bits are XOR masked from the most significant to least significant bit.

Output Arguments

blkcrc — Bit vector with CRC

column vector

Bit vector with CRC, returned as a column vector.

Data Types: `int8`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteCodeBlockSegment` | `lteConvolutionalEncode` | `lteCRCDecode`

Introduced in R2014a

lteCSICodebook

Codebook for channel state information reporting

Syntax

```
out = lteCSICodebook(nu,p,n)
out = lteCSICodebook(nu,p,i1,i2)
```

Description

`out = lteCSICodebook(nu,p,n)` returns the precoding matrix, `out`, associated with channel state information (CSI) reporting as defined in TS 36.213, Section 7.2.4 [1]. `out` is of size `p`-by-`nu`, where `p` is the number of transmission antennas and `nu` is the number of transmission layers. Using this syntax, the function accepts a number of antennas, `p`, of 2 or 4, a number of layers, `nu`, of 1, 2, 3, or 4, and a codebook index, `n`. In this syntax, `p` corresponds to the number of cell-specific reference signal antenna ports, `CellRefP`, for the 'Port7-8' transmission scheme and the number of CSI reference signal antenna ports, `CSISRefP`, for the 'Port7-14' transmission scheme. The codebook entries are the same in either case.

`out = lteCSICodebook(nu,p,i1,i2)` returns the precoding matrix `out` for CSI reporting with `p = 8` antennas, where `nu` (1..8) specifies the number of layers and `i1` and `i2` specify the first and second codebook indices respectively. In this syntax, `p` corresponds to the number of CSI reference signal antenna ports, `CSISRefP`, and the 'Port7-14' transmission scheme is implied.

Examples

Create Codebook Entry for CSI Reporting

This example creates a codebook entry for CSI reporting with 2 layers, 4 antennas, and a codebook index of 3.

```
lteCSICodebook(2,4,3)
```

```
ans =  
  
    0.3536 + 0.0000i    0.0000 + 0.3536i  
    0.0000 - 0.3536i    0.3536 + 0.0000i  
   -0.3536 + 0.0000i    0.0000 + 0.3536i  
    0.0000 + 0.3536i    0.3536 + 0.0000i
```

Input Arguments

nu — Number of transmission layers

1 ... 8 | positive scalar integer

Number of transmission layers.

p — Number of transmission antennas

1 ... 8 | positive scalar integer

Number of transmission antennas.

n — Codebook index

0 ... 15 | nonnegative scalar integer

Codebook index.

i1 — First codebook index

0 ... 15 | nonnegative scalar integer

First codebook index.

i2 — Second codebook index

0 ... 15 | nonnegative scalar integer

Second codebook index.

Output Arguments

out — Precoding matrix associated with CSI reporting

complex-valued numeric matrix

Precoding matrix associated with CSI reporting, returned as a complex-valued numeric matrix. `out` is a matrix of size `p-by-nu`, where `p` is the number of transmission antennas and `nu` is the number of transmission layers.

Data Types: `double`

Complex Number Support: Yes

References

- [1] 3GPP TS 36.213. "Physical layer procedures." *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLPrecode` | `ltePDSCH` | `ltePDSCHDecode` | `ltePMIInfo` | `ltePMISelect`

Introduced in R2014a

lteCSIRS

Channel state information reference signal

Syntax

```
sym = lteCSIRS(enb)
sym = lteCSIRS(enb,opts)
```

Description

`sym = lteCSIRS(enb)` returns the channel state information reference signal (CSI-RS) symbols for transmission in a single subframe on up to eight antenna ports ($p = 15, \dots, 22$). See “lteCSIRS Processing” on page 1-54.

`sym = lteCSIRS(enb,opts)` enables control of the contents and format of the returned symbols through a (cell) array of option strings, `opts`.

Examples

Create CSI-RS Symbols and Combine with Resource Grid

This example shows the generation of CSI-RS symbols. Then combines them with a 10 MHz, release 8, port 0 PDSCH subframe resource grid.

Initialize a reference channel structure. Create a 10 MHz, release 8, port 0 PDSCH configuration parameter structure. Set subframe number to 1, number of CSI-RS antenna ports to 8, CSI-RS configuration to 0, and CSIRSPeriod to 6.

```
rmc = lteRMCDL('R.2', 'FDD', 1);
rmc.NSubframe = 1;
rmc.CSISRefP = 8;
rmc.CSIRSConfig = 0;
rmc.CSIRSPeriod = 6;
```

The 8 antenna ports are ports 15 to 22. The setting for `CSIRSPeriod` is `Icsi-rs`, which equals `[Tcsi-rs Dcsi-rs]=[10 1]`.

Create a 3-D resource grid to contain the subframes for all eight CSI-RS ports.

```
rgrid = lteResourceGrid(rmc,rmc.CSIRefP);
```

Write the release 8 port 0 transmission into the first plane of the resource grid.

```
[wave,rgrid(:,:,1)] = lteRMCDLTool(rmc,[1,0,0,1]);
```

Create the CSI-RS symbols for ports 15 to 22. Overwrite all ports included in the port 0 transmission with the actual CSI-RS and unused RE.

```
rgrid(lteCSIRSIndices(rmc,'rs+unused')) = lteCSIRS(rmc,'rs+unused');
```

Warning: Using default value for parameter field ZeroPowerCSIRSPeriod (Off)

Warning: Using default value for parameter field ZeroPowerCSIRSPeriod (Off)

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the command "lteWarning('off','DefaultValue')".

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number

Parameter Field	Required or Optional	Values	Description
NFrame	Optional	0 (default), Nonnegative scalar integer	Frame number
CellRefP is only used when the <i>Indexing format</i> option for indexing generation is 'rs +unused'			
CellRefP	Optional	1 (default), 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters apply when DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
CSIRSPeriod	Optional	'On' (default), 'Off', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]. You can also specify values in a cell array of configurations for each resource. See note 1.	CSI-RS subframe configurations for one or more CSI-RS resources. Multiple CSI-RS resources can be configured from a single common subframe configuration or from a cell array of configurations for each resource.
The following CSI-RS resource parameters apply only when CSIRSPeriod sets one, or more CSI-RS subframe configurations to any value other than 'Off'. Each parameter length must be equal to the number of CSI-RS resources required.			

Parameter Field	Required or Optional	Values	Description
CSIRSConfig	Required	Nonnegative scalar integer	Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1.
CSISRefP	Required	1 (default), 2, 4, 8	Array of number of CSI-RS antenna ports
NCSIID	Optional	Nonnegative scalar integer	CSI-RS scrambling identity. If this field is not present, then NCellID is used as the identity.
ZeroPowerCSIRSPer	Optional	'Off' (default), 'On', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]. You can also specify values in a cell array of configurations for each resource. See note 1.	Zero power CSI-RS subframe configurations for one or more zero power CSI-RS resource configuration index lists. Multiple zero power CSI-RS resource lists can be configured from a single common subframe configuration or from a cell array of configurations for each resource list.

The following zero power CSI-RS resource parameter is only required if one, or more of the above zero power subframe configurations are set to any value other than 'Off'.

Parameter Field	Required or Optional	Values	Description
ZeroPowerCSIR	Required	16-bit bitmap string (truncated if not 16 bits or '0' MSB extended), or a numeric list of CSI-RS configuration indices. You can also specify values in a cell array of configurations for each resource.	Zero power CSI-RS resource configuration index lists (TS 36.211 Section 6.10.5.2). Specify each list as a 16-bit bitmap string (if less than 16 bits, then '0' MSB extended), or as a numeric list of CSI-RS configuration indices from TS 36.211 Table 6.10.5.2-1 in the '4' CSI reference signal column. To specify multiple lists can be defined using a cell array of bitmap strings or numeric lists. [1]

Note:

1 CSIRSPeriod and ZeroPowerCSIRSPeriod parameters control the downlink subframes in which the different CSI-RS resources are present. Valid settings include:

- always 'On'
- always 'Off'
- scalar subframe configuration index `Icsi-rs` from 0 through 154
- explicit subframe periodicity and offset pair [`Tcsi-rs` `Dcsi-rs`]

The subframes containing CSI-RS are located with `NSubframe` and the optional `NFrame` parameters. `NSubframe` can be greater than 10; thus `NSubframe = 11` is equivalent to setting `NSubframe` to 1 and `NFrame` to 1.

For more information, see TS 36.211 [1], Section 6.10.5.3.

opts — Symbol generation option strings

string | cell array of strings

Options to control the content and format of the returned symbols, specified as a string or a cell array of strings. Values for `opts` include:

Option	Values	Description
Symbol style	'ind' (default), 'mat'	<p>Style for returning CSI-RS symbols, specified as one of the following options.</p> <ul style="list-style-type: none"> 'ind' — returns the CSI-RS symbols as a column vector (default) 'mat' — returns the CSI-RS symbols as a matrix, where each column contains symbols for an individual port and CSI-RS configuration. To form a matrix, a column can contain duplicate entries.
Symbol format	'rsonly' (default), 'rs+unused'	<p>Format for the returned symbols, specified as one of the following options.</p> <ul style="list-style-type: none"> 'rsonly' — returns only defined CSI-RS symbols (default), both zero and non-zero 'rs+unused' — also includes zeros for the resource element (RE) locations that should be unused because they are reserved for CSI-RS on another port.

Note: Returned symbols specify the CSI-RS resource values within an N-by-M-by-antennas array. The number of antennas is $\max(\text{CSIRefP})$ or if zero power CSI-RS are also defined number of antennas is $\max(\max(\text{CSIRefP}), 4)$. For the 'rs+unused' option, the number of antennas used to define the empty REs (either because they are zero power or they are unused in another port) is $\max(\max(\text{CSIRefP}), \text{CellRefP})$.

Example: 'rs+unused'

Data Types: char | cell

Output Arguments

sym — CSI-RS symbols

column vector (default) | matrix

CSI-RS symbols for transmission in a single subframe on up to eight antenna ports, returned as a column vector or matrix of concatenated CSI-RS symbol sequences for each of the `enb.CSIRefP` ports based on the cell-wide parameter settings. The length of `sym` is the number of resource elements. See “lteCSIRS Processing” on page 1-54.

Data Types: double

Complex Number Support: Yes

More About

lteCSIRS Processing

The `lteCSIRS` function supports the creation of multiple non-zero power CSI-RS resources and zero power CSI-RS.

By default the output symbols are returned as a column vector and are ordered as they should be mapped into the resource elements along with `lteCSIRSIndices`. If, according to the CSI-RS resource subframe configurations and duplex mode, there are no CSI-RS scheduled in the subframe, then the output is empty. Optionally the returned symbols can also include zeros representing the resource elements which should be unused since they are reserved for CSI-RS symbols in one or more of the other ports. On assignment into a populated subframe grid, these zeros create empty resource elements for both Release 8, and Release 10 and 11 compatibility. When multiple non-zero power resources and zero power CSI-RS are output, the zero power CSI-RS symbols are first in the concatenated output, followed by the symbols for the ordered set of CSI-RS resources.

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteCellRS` | `lteCSIRSIndices` | `lteDMRS` | `lteEPDCCHDMRS` | `ltePRBS` | `ltePRS`

Introduced in R2014a

lteCSIRSIndices

CSI-RS resource element indices

Syntax

```
ind = lteCSIRSIndices(enb)
ind = lteCSIRSIndices(enb,opts)
```

Description

`ind = lteCSIRSIndices(enb)` returns the indices of the channel state information reference signal (CSI-RS) resource elements (RE) for the specified subframe. See “lteCSIRSIndices Processing” on page 1-61.

`ind = lteCSIRSIndices(enb,opts)` enables control of the contents and format of the returned indices through option strings, `opts`.

Examples

Generate Column Vector of CSI-RS RE Indices

This example shows how to generate a column vector of CSI-RS RE linear indices for ports 15 to 22 of a 10 MHz downlink subframe 0 resource grid.

Create a 10 MHz, downlink, subframe 0 configuration parameter structure. Set the number of antenna ports to 8, the CSI-RS configuration to 0, and `Icsi-rs` to 5.

```
rmc = lteRMCDL('R.2');
rmc.CSISRefP = 8;
rmc.CSIRSConfig = 0;
rmc.CSIRSPeriod = 5;
```

The 8 antenna ports are ports 15 to 22. The variable `Icsi-rs = 5` is equivalent to a `[Tcsi-rs Dcsi-rs]` setting of `[10 0]`.

```
csirs1 = lteCSIRSIndices(rmc);
csirs1(1:5)
```

```
Warning: Using default value for parameter field ZeroPowerCSIRSPeriod (Off)
```

```
ans =
```

```
    3010  
    3022  
    3034  
    3046  
    3058
```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the command "lteWarning('off','DefaultValue')."

Generate Matrix of CSI-RS RE Indices

This example shows how to generate a matrix of CSI-RS RE linear indices for ports 15 to 22 of a 10 MHz downlink subframe 0 resource grid.

Create a 10 MHz, downlink, subframe 0 configuration parameter structure. Set the number of antenna ports to 8, the CSI-RS configuration to 0, and `Icsi-rs` to 5.

```
rmc = lteRMCDL('R.2');  
rmc.CSISRefP = 8;  
rmc.CSIRSConfig = 0;  
rmc.CSIRSPeriod = 5;
```

Generate a matrix of linear indices with eight columns.

```
csirs2 = lteCSIRSIndices(rmc,'mat');  
size(csirs2)
```

```
Warning: Using default value for parameter field ZeroPowerCSIRSPeriod (Off)
```

```
ans =
```

```
    88     8
```

Generate Used and Unused CSI-RS RE Indices

This example shows how to generate both used and unused CSI-RS RE linear indices for ports 15 to 22 of a 10 MHz downlink subframe 0 resource grid.

Create a 10 MHz, downlink, subframe 0 configuration parameter structure. Set the number of antenna ports to 8, the CSI-RS configuration to 0, and `Icsi-rs` to 5.

```
rmc = lteRMCDL('R.2');
rmc.CSISRefP = 8;
rmc.CSIRSConfig = 0;
rmc.CSIRSPeriod = 5;
```

The 8 antenna ports are ports 15 to 22. The variable `Icsi-rs = 5` is equivalent to a `[Tcsi-rs Dcsi-rs]` setting of `[10 0]`.

Generate both used and unused CSI-RS RE in all ports.

```
csirs3 = lteCSIRSIndices(rmc, 'rs+unused');
csirs3(1:5)
```

Warning: Using default value for parameter field ZeroPowerCSIRSPeriod (Off)

```
ans =
```

```
3010
3022
3034
3046
3058
```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
		{'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	
NSubframe	Required	Nonnegative scalar integer	Subframe number
NFrame	Optional	0 (default), Nonnegative scalar integer	Frame number
CellRefP is only used when the <i>Indexing format</i> option for indexing generation is 'rs+unused'			
CellRefP	Optional	1 (default), 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following apply when DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
CSIRSPeriod	Optional	'On' (default), 'Off', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]. You can also specify values in a cell array of configurations for each resource. See note 1.	CSI-RS subframe configurations for one or more CSI-RS resources. Multiple CSI-RS resources can be configured from a single common subframe configuration or from a cell array of configurations for each resource.

Parameter Field	Required or Optional	Values	Description
The following CSI-RS resource parameters apply only when CSIRSPeriod sets one, or more CSI-RS subframe configurations to any value other than 'Off'. Each parameter length must be equal to the number of CSI-RS resources required.			
CSIRSConfig	Required	Nonnegative scalar integer	Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1.
CSIRRefP	Required	1 (default), 2, 4, 8	Array of number of CSI-RS antenna ports
ZeroPowerCSIRSPer	Optional	'Off' (default), 'On', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]. You can also specify values in a cell array of configurations for each resource. See note 1	Zero power CSI-RS subframe configurations for one or more zero power CSI-RS resource configuration index lists. Multiple zero power CSI-RS resource lists can be configured from a single common subframe configuration or from a cell array of configurations for each resource list.
The following zero power CSI-RS resource parameter is required only if one, or more of the other zero power subframe configurations are set to any value other than 'Off'.			
ZeroPowerCSIR	Required	16-bit bitmap string (truncated if not 16 bits or '0' MSB extended), or a numeric list of CSI-RS configuration indices. You can also specify values in a cell array of configurations for each resource.	Zero power CSI-RS resource configuration index lists (TS 36.211 Section 6.10.5.2). Specify each list as a 16-bit bitmap string (if less than 16 bits, then '0' MSB extended). or as a numeric list of CSI-RS configuration indices from TS 36.211 Table 6.10.5.2-1 in the '4' CSI reference signal column. To specify multiple lists can be defined using a cell array of bitmap strings or numeric lists.

Parameter Field	Required or Optional	Values	Description
Note:			
1		<p>The <code>CSIRSPeriod</code> and <code>ZeroPowerCSIRSPeriod</code> parameters control the downlink subframes in which the different CSI-RS resources are present. Valid settings include:</p> <ul style="list-style-type: none"> • Always 'On' • Always 'Off' • Scalar subframe configuration index <code>Icsi-rs</code> from 0 through 154 • Explicit subframe periodicity and offset pair [<code>Tcsi-rs</code> <code>Dcsi-rs</code>] <p>To locate the subframes containing CSI-RS, use the <code>Nsubframe</code> parameter and the optional <code>Nframe</code> parameter. <code>Nsubframe</code> can be greater than 10. Thus <code>Nsubframe = 11</code> is equivalent to setting <code>Nsubframe</code> to 1 and <code>Nframe</code> to 1.</p> <p>For more information, see TS 36.211 [1], Section 6.10.5.3.</p>	

opts — Index generation options

string | cell array of strings

Options to control the content and format of the returned indices, specified as a string or a cell array of strings. `opts` can contain the following option strings.

Option	Values	Description
Indexing style	'ind' (default), 'mat', 'sub'	<p>Style for the returned indices, specified as one of the following options.</p> <ul style="list-style-type: none"> • 'ind' — returns the indices as a column vector (default) • 'mat' — returns the indices as a matrix. If not precoded, each column contains indices for an individual layer/port. If precoded, each column contains symbols for a transmit antenna. To form a matrix, a column can contain duplicate entries. • 'sub' — returns the indices in [<code>subcarrier</code>, <code>symbol</code>, <code>antenna</code>] subscript row style. The number of rows in the output, <code>ind</code>, is the number of resource elements (NRE). Thus, <code>ind</code> is an NRE-by-3 matrix.

Option	Values	Description
Index base	'1based' (default), 'Obased'	Base value of the returned indices. Specify '1based' to generate indices where the first value is one. Specify 'Obased' to generate indices where the first value is zero.
Indexing format	'rsonly' (default), 'rs+unused'	Format for the returned locations, specified as one of the following options. <ul style="list-style-type: none"> 'rsonly' — returns only defined CSI-RS locations (default), both zero and non-zero 'rs+unused' — also includes zeros for the resource element (RE) locations that should be unused because they are reserved for CSI-RS on another port.

Note: Returned indices specify the CSI-RS resource values within an N-by-M-by-antennas array. Where the number of antennas is $\max(\text{CSIRefP})$ or if zero power CSI-RS are also defined number of antennas is $\max(\max(\text{CSIRefP}), 4)$. In the case of the 'rs+unused' option, the number of antennas used to define the empty REs (either because they are zero power or they are unused in another port) is $\max(\max(\text{CSIRefP}), \text{CellRefP})$.

Data Types: char | cell

Output Arguments

ind — Channel state information reference signal (CSI-RS) indices

column vector (default) | matrix

Channel state information reference signal (CSI-RS) indices, returned as a vector or matrix. See “lteCSIRSIndices Processing” on page 1-61.

Data Types: uint32

More About

lteCSIRSIndices Processing

The `lteCSIRSIndices` function supports the creation of multiple non-zero power resources and zero power CSI-RS.

By default the output indices are returned as a column vector in one-based linear indexing form, that can directly index elements in an N -by- M -by- $\max(CSIRefP)$ array. These indices represent the subframe grid across $\max(CSIRefP)$ antenna ports ($p = 15, \dots, 22$). Other index representations can also be created as well as whether the output includes the RE that should be empty in a specific port because of CSI-RS transmissions in another port. These indices are ordered as the complex CSI-RS symbols should be mapped and do not include any elements allocated to PBCH, PSS, and SSS. You can define the CSI-RS subframe configuration schedule as required for the CSI-RS resources. If the subframe contains no CSI-RS, then an empty vector is returned. When multiple non-zero power and zero power CSI-RS are returned, the indices for the zero power CSI-RS appear first in the concatenated output, followed by the indices for the ordered set of CSI-RS resources.

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteCellRSIndices` | `lteCSIRS` | `lteDMRSIndices` | `ltePRSIndices`

Introduced in R2014a

lteCellRS

Cell-specific reference signal

Syntax

```
sym = lteCellRS(enb)
sym = lteCellRS(enb,ports)
```

Description

`sym = lteCellRS(enb)` returns cell-specific reference signal symbols for cell-wide settings in the `enb` structure. `sym` is a complex-valued column vector containing cell-specific reference signal symbols. Unlike other physical channels and signals, the symbols for multiple antennas are concatenated into a single column rather than returned in a matrix with a column for each antenna. The reason for this behavior is that the number of symbols varies across the antenna ports.

`sym = lteCellRS(enb,ports)` returns cell-specific reference signal symbols for antenna ports specified in the vector, `ports` (0,1,2,3), and cell-wide settings structure, `enb`. In this case, `CellRefP` is ignored if present in `enb` and `ports` is used instead.

Examples

Find Length of Cell-Specific Reference Signals

This example shows different numbers of cell-specific reference signal symbols transmitted at antenna port 0 and 2.

Initialize cell wide parameter structure, `enb`, to RMC R.6

```
enb = lteRMCDL('R.6');
```

Observe the number of cell-specific reference symbols on port 0

```
cellRefPort0 = length(lteCellRS(enb,0))
```

```
cellRefPort0 =
    200
```

Observe the number of cell-specific reference symbols on port 2

```
cellRefPort2 = length(lteCellIRS(enb,2))
```

```
cellRefPort2 =
    100
```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number

Parameter Field	Required or Optional	Values	Description
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)

ports — Antenna ports

0 (default) | Optional | 1 | 2 | 3 | numeric vector

Antenna ports, specified as a numeric vector whose elements must be (0, 1, 2, 3).

Output Arguments

sym — Cell-specific reference signal symbols

complex-valued numeric column vector

Cell-specific reference signal symbols, returned as a complex-valued numeric column vector. This argument contains cell-specific reference signal symbols for the specified cell-wide settings, `enb`, and optional number of antenna ports, `ports`.

Data Types: `double`

Complex Number Support: Yes

See Also

`lteCellRSIndices` | `lteCSIRS` | `lteDMRS` | `lteEPDCCHDMRS` | `ltePRBS` | `ltePRS`

Introduced in R2014a

lteCellRSIndices

CRS resource element indices

Syntax

```
ind = lteCellRSIndices(enb)
ind = lteCellRSIndices(enb,ports)
ind = lteCellRSIndices(enb,ports,opts)
```

Description

`ind = lteCellRSIndices(enb)` returns a column vector of resource element (RE) indices for the cell-specific reference signal (RS), given the cell-wide settings in the `enb` structure. By default, the indices are returned in 1-based linear indexing form that can directly index elements of a 3-D array representing the subframe resource grid for all antenna ports. These indices are ordered as the reference signal modulation symbols should be mapped. Unlike other physical channels and signals, the indices for multiple antennas are concatenated into a single column rather than returned in a matrix with a column for each antenna. This is because the number of indices varies across the antenna ports.

`ind = lteCellRSIndices(enb,ports)` returns a column vector of RE indices for antenna ports specified in the vector, `ports` (0,1,2,3), and cell-wide settings structure, `enb`. In this case, `CellRefP` is ignored if present in `enb` and `ports` is used instead.

`ind = lteCellRSIndices(enb,ports,opts)` allows control of the format of the returned indices through a cell array of option strings, `opts`. These option strings allow for the generation of alternative indexing formats.

Examples

Generate Cell-Specific Reference Signal RE Indices

Generate 0-based cell-specific reference signal (CRS) resource element (RE) indices in subscript form for antenna port 2.

```
enb = lteRMCDL('R.0');
```

```
enb.NCellID = 10;
ind = lteCellRSIndices(enb,2,{ 'Obased' , 'sub' });
ind(1:4,:)
```

```
     4         1         2
    10         1         2
    16         1         2
    22         1         2
```

In this case, each row of the generated matrix has three columns, which represent subcarrier, symbol, and antenna port, respectively.

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ..., 503)	Physical layer cell identity
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or

Parameter Field	Required or Optional	Values	Description
			<ul style="list-style-type: none"> 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that <code>DuplexMode</code> is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
Nsubframe	Optional	Nonnegative scalar integer	Subframe number

ports — Antenna ports

numeric vector

Antenna ports, specified as a numeric vector whose elements must be (0, 1, 2, 3).

opts — Index generation options

string | cell array of strings

Index generation options, specified as a string or a cell array of strings that can contain the following values.

Option	Values	Description
Indexing style	'ind' (default), 'sub'	Style for the returned indices, specified as one of the following options. <ul style="list-style-type: none"> 'ind' — returns the indices in linear index form as a column vector (default) 'sub' — returns the indices in [subcarrier, symbol, antenna] subscript row style. The number of rows in the output, <code>ind</code>, is the number of resource elements (NRE). Thus, <code>ind</code> is an NRE-by-3 matrix.
Index base	'1based' (default), '0based'	Base value of the returned indices. Specify '1based' to generate indices where the first value is one. Specify '0based' to generate indices where the first value is zero.

Data Types: char | cell

Output Arguments

ind — Cell-specific reference signal RE indices

column vector | numeric matrix

Cell-specific reference signal RE indices, returned as a column vector. Optionally, can be returned as an NRE-by-3 matrix.

Data Types: `uint32`

See Also

`lteCellIRS` | `lteCSIRSIndices` | `lteDMRSIndices` | `ltePRSIndices`

Introduced in R2014a

lteCellSearch

Cell identity search using PSS and SSS

Syntax

```
[cellid,offset,peak] = lteCellSearch(enb,waveform)
[cellid,offset,peak] = lteCellSearch(enb,waveform,alg)
[cellid,offset,peak] = lteCellSearch(enb,waveform,cellids)
```

Description

`[cellid,offset,peak] = lteCellSearch(enb,waveform)` returns the cell identity carried by the PSS and SSS signals in the input waveform, the timing offset to the start of the first frame of the waveform, and the peak correlation magnitude. The cell-wide settings structure, `enb`, defines the link configuration.

`[cellid,offset,peak] = lteCellSearch(enb,waveform,alg)` takes an additional input structure, `alg`, which provides control over the cell search. The input structure, `alg`, contains optional fields to define the SSS detection method, the maximum number of cells to detect, and which cell identities to search.

`[cellid,offset,peak] = lteCellSearch(enb,waveform,cellids)` uses an additional input to constrain the cell search to the list of cell identities specified by `cellids`.

Note: This syntax will be removed in a future release. Instead use the syntax `[cellid,offset,peak] = lteCellSearch(enb,waveform,alg)` and set `alg.CellIDs = cellids`.

Examples

Find Cell Identity

Search for the cell identity (in this case 171) of an R.12 RMC waveform.

Initialize reference channel configuration, `rmc`. Perform cell search on the waveform produced using this configuration.

```
rmc = lteRMCDL('R.12');
rmc.NCellID = 171;
rmc.TotSubframes = 1;

cellID = lteCellSearch(rmc,lteRMCDLTool(rmc,[1;0;0;1]))

cellID =

    171
```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Duplexmode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or

Parameter Field	Required or Optional	Values	Description
			<ul style="list-style-type: none"> 'TDD' for Time Division Duplex

waveform — Time-domain waveform

numeric matrix

Time-domain waveform, specified as a numeric matrix of size T -by- P . Where T is the number of time-domain samples and P is the number of receive antennas. The sampling rate of the time domain waveform must be the same as used in the `lteOFDMModulate` function for the specified number of resource blocks `enb.NDLRB`. The number of time domain samples, T , must be sufficient to provide at least one subframe for FDD (or 2 for TDD since in TDD mode PSS and SSS lie in adjacent subframes). For the cell search to succeed, the waveform provided must contain the PSS and SSS signals.

Note: `enb.NDLRB` is only required to specify the sampling rate of `waveform`.

Data Types: double

Complex Number Support: Yes

alg — Cell search algorithm control

structure

Cell search algorithm control, specified as a structure. `alg` accepts these fields defining optional cell search algorithm settings.

Parameter Field	Required or Optional	Values	Description
SSSDetection	Optional	'PreFFT' (default), 'PostFFT'.	SSS detection method. a
MaxCellCount	Optional	Nonnegative scalar integer. (1, ..., 504), default 1.	The number of cell identities to detect. b

Parameter Field	Required or Optional	Values	Description
CellIDs	Optional	Vector of nonnegative integers, default vector (0:503).	A vector containing the cell identities to use for the cell search. c

- a. 'PostFFT' SSS detection operates in the frequency domain. For 'PostFFT':
- OFDM demodulation is performed using the timing estimate from PSS detection,
 - the demodulated SSS resource elements are correlated with possible SSS sequences to find the cell identity group,
 - and the peak correlation magnitude is the sum of the peak correlation magnitudes from time-domain PSS detection and frequency-domain SSS detection.
- b. When `alg.MaxCellCount > 1`, the returned `cellid`, `offset`, and `peak` are vectors, with each element corresponding to one cell.
- c. If `alg.CellIDs` is absent, the output vectors are sorted by decreasing correlation peak magnitude, that is, decreasing `peak` value. If `alg.CellIDs` is present and `alg.MaxCellCount = numel(alg.CellIDs)`, the output vectors are in the same order as the cell identities in `alg.CellIDs`. Sorting the peaks enables monitoring of the `peak` output for a predetermined set of cells.

cellids – Cell identities

nonnegative scalar integer | vector of nonnegative integers

Cell identities to be used in the cell search, specified as a nonnegative scalar integer or vector of nonnegative integers.

Note: `cellids` and the syntax it is associated with will be removed in a future release. Instead use `alg.CellIDs` and the recommended alternate syntax.

Data Types: double

Output Arguments

cellid – Cell identity

nonnegative scalar integer | vector of nonnegative integers

Physical layer cell identity, returned as a nonnegative scalar integer or vector of nonnegative integers. `cellid` indicates the detected cell identity. The returned `cellid` is a vector when `alg.MaxCellCount > 1` and more than one cell is detected.

The overall physical layer cell identity is $\text{cellid} = (3 * N_{\text{id1}}) + N_{\text{id2}}$. PSS conveys the second cell identity number ($N_{\text{id2}}, (0, 1, 2)$) within a cell identity group and is established via time-domain correlation using the `lteDLFrameOffset` function. SSS conveys the first cell identity number ($N_{\text{id1}}, (0, \dots, 167)$) and is established in a similar fashion.

Data Types: `double`

offset — Timing offset

nonnegative scalar integer | vector of nonnegative integers

Timing offset, returned as a nonnegative scalar integer or vector of nonnegative integers. `offset` indicates the number of samples from the start of the input waveform to the position in that waveform where the first frame begins. The timing offset is calculated by correlating with the detected PSS and SSS. The returned `offset` is a vector when `alg.MaxCellCount > 1` and more than one cell is detected.

Data Types: `double`

peak — Peak magnitude

numeric scalar | vector of numeric values

Peak magnitude of the correlation, returned as a numeric scalar or vector of numeric values, used for cell detection. The returned `peak` is a vector when `alg.MaxCellCount > 1` and more than one cell is detected. The peak correlation magnitude is the sum of the peak correlation magnitudes from PSS and SSS detection. A complete correlation output is available as the output argument, `corr`, from `lteDLFrameOffset`.

See Also

`lteDLFrameOffset` | `lteFrequencyCorrect` | `lteFrequencyOffset` | `lteOFDMDemodulate`

Introduced in R2014a

lteCodeBlockDesegment

Code block desegmentation and CRC decoding

Syntax

```
[blk,err] = lteCodeBlockDesegment(cbs,blklen)
[blk,err] = lteCodeBlockDesegment(cbs)
```

Description

[blk,err] = lteCodeBlockDesegment(cbs,blklen) concatenates the input code block vectors contained in **cbs** into an output vector, **blk**, of length **blklen**. **blklen** is also used to validate the dimensions of the data in **cbs** and to calculate the amount of filler to be removed. If **cbs** is a cell array containing more than one vector, each vector is assumed to have a type-24B CRC attached. This CRC is decoded and stripped from each code block prior to output concatenation and the CRC error result is placed in the associated element of vector **err**. The length of **err** is the number of code blocks. If **cbs** is a single vector or a cell array containing a single vector, no CRC decoding or stripping is performed and **err** is empty. In all cases, the number of filler bits stripped from the beginning of the (first) code block is calculated from **blklen**. **lteCodeBlockDesegment** performs the inverse of the code block segmentation and CRC appending (see **lteCodeBlockSegment**). **lteCodeBlockDesegment** concatenates the input code block segments into a single output data block **blk**, removing any filler and type-24B CRC bits that may be present in the process. The results of code block CRC decoding, if applicable, are available in the **err** vector.

[blk,err] = lteCodeBlockDesegment(cbs) is similar to the above except that no leading filler bits are stripped from the output. The detection and processing of type-24B CRC is carried out as above.

Examples

Desegment Code Block

Perform code block desegmentation and discover when segmentation occurs.

Code block segmentation occurs if the input length is greater than 6144. The input vector of length 6145 is segmented by `lteCodeBlockSegment` into two vectors of length 3072 and 3136. The output of `lteCodeBlockSegment` is a cell array, `cbs`, containing two vectors of lengths 3072 and 3136.

```
cbs = lteCodeBlockSegment(ones(6145,1));
```

Next, perform desegmentation and CRC removal.

```
[blk,err] = lteCodeBlockDesegment(cbs);  
size(blk)  
  
        6160          1
```

The first output, `blk`, is a column vector of length 6160. The second output, `err`, is a column vector of zero values.

Input Arguments

cbs — Code block segments

column vector | cell array

Code block segments, specified as a column vector or cell array of column vectors. If `cbs` is a cell array containing more than one vector, each vector is assumed to have a type-24B CRC attached. This CRC is decoded and stripped from each code block prior to output concatenation and the CRC error result is placed in the associated element of vector `err`. The length of `err` is the number of code blocks. If `cbs` is a single vector or a cell array containing a single vector, no CRC decoding or stripping is performed and `err` is empty. In all cases, the number of filler bits stripped from the beginning of the (first) code block is calculated from `blklen`.

blklen — Block length

nonnegative integer

Block length, specified as a nonnegative integer.

Output Arguments

blk — Output data block

column vector

Output data block, returned as a column vector. The input code blocks are segmented into a single output data block, `blk`, removing any filler and type-24B CRC bits.

Data Types: `int8`

err — Code block CRC decoding errors

column vector | nonnegative integer

Code block CRC decoding errors, returned as a nonnegative integer. The length of `err` is equal to the number of code blocks. If `cbs` is a cell array containing multiple vector elements, `lteCodeBlockDesegment` assumes that each vector has a type-24B CRC attached. The CRC is decoded and stripped from each code block prior to output concatenation and the CRC error result is placed in the associated element of `err`. If `cbs` is a single vector or a cell array containing a single vector, no CRC decoding or stripping is performed and `err` is empty.

Data Types: `int8`

See Also

`lteCodeBlockSegment` | `lteCRCDecode` | `lteDLSCHDecode` | `lteTurboDecode` | `lteULSCHDecode`

Introduced in R2014a

lteCodeBlockSegment

Code block segmentation and CRC attachment

Syntax

```
cbs = lteCodeBlockSegment(blk)
```

Description

`cbs = lteCodeBlockSegment(blk)` splits the input data bit vector `blk` into a cell array `cbs` of code block segments, with filler bits and type-24B CRC appended as appropriate, according to the rules of section 5.1.2 of [1]. Code block segmentation occurs in transport blocks, after initial type-24A CRC appending, for turbo encoded transport channels, including DL-SCH, UL-SCH, PCH, and MCH.

The segmentation and padding operation ensures that code blocks entering the turbo coder are no larger than 6144 in length and are all legal turbo code blocks sizes (only a finite set of code block sizes are supported by the LTE turbo coder). If the input block length is greater than 6144, the input block is split into a cell array of smaller code blocks where each individual block also has a type-24B CRC appended to it. The NULL filler bits, represented by `-1` at the output, are prepended to the first code block so that all blocks in the set have acceptable lengths. If the input block length is less than or equal to 6144, no segmentation occurs and no CRC is appended, but the single output code block may have NULL filler bits prepended. The latter case still results in a cell array output containing a single vector.

Examples

Segment Code Block

Perform code block segmentation, providing two vectors with different lengths.

Code block segmentation occurs if the input length is greater than 6144. For example, provide a vector of length 6144.

```
cbs1 = lteCodeBlockSegment(ones(6144,1))
```

```
[6144x1 int8]
```

No segmentation occurs.

Next, provide a vector of length 6145.

```
cbs2 = lteCodeBlockSegment(ones(6145,1))
```

```
[3072x1 int8] [3136x1 int8]
```

Input Arguments

blk — Data bit vector

column vector

Data bit vector, specified as a column vector.

Output Arguments

cbs — Code block segments

cell array of integer column vectors

Code block segments, returned as a cell array with `int8` column vector elements. If the input block length is less than or equal to 6144, `cbs` is a cell array containing a single column vector. If the input block length is greater than 6144, `cbs` is a cell array of multiple column vectors.

Data Types: `cell`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteCodeBlockDesegment` | `lteCRCEncode` | `lteDLSCH` | `lteDLSCHInfo` | `lteTurboEncode`

Introduced in R2014a

lteConvolutionalDecode

Convolutional decoding

Syntax

```
output = lteConvolutionalDecode(input)
```

Description

`output = lteConvolutionalDecode(input)` performs convolutional decoding of the input data vector, `input`. The input data is assumed to be soft bit data that has been encoded by a tail-biting convolutional code with constraint length 7, coding rate 1/3, and octal polynomials $G0=133$, $G1=171$ and $G2=165$. Since the code is tail-biting, `output` will be 1/3 of the length of the input. The input data vector is assumed to be structured as three encoded parity streams concatenated block-wise. For example, `input` is `[D0 D1 D2]`, where `D0`, `D1`, and `D2` are the separate parity streams resulting from the original encoding with individual polynomials $G0$, $G1$ and $G2$. The decoder uses a soft input *Viterbi* algorithm without any quantization.

Examples

Perform Convolutional Decoding

This example performs convolutional decoding on soft bits.

Generate random bits and convolutionally encode them. QPSK modulate the coded bits and add noise to the received symbols

 
```
txBits = randi([0 1],1000,1);
codedData = lteConvolutionalEncode(txBits);

txSymbols = lteSymbolModulate(codedData, 'QPSK');
noise = 0.5*complex(randn(size(txSymbols)),randn(size(txSymbols)));
rxSymbols = txSymbols + noise;
```

Show `rxSymbols` constellation, setting `txSymbols` as the reference constellation

```
xylimits = [-2.5 2.5];
```

```
hScope = comm.ConstellationDiagram('ReferenceConstellation',txSymbols,'XLimits',xylim  
step(hScope, rxSymbols)
```

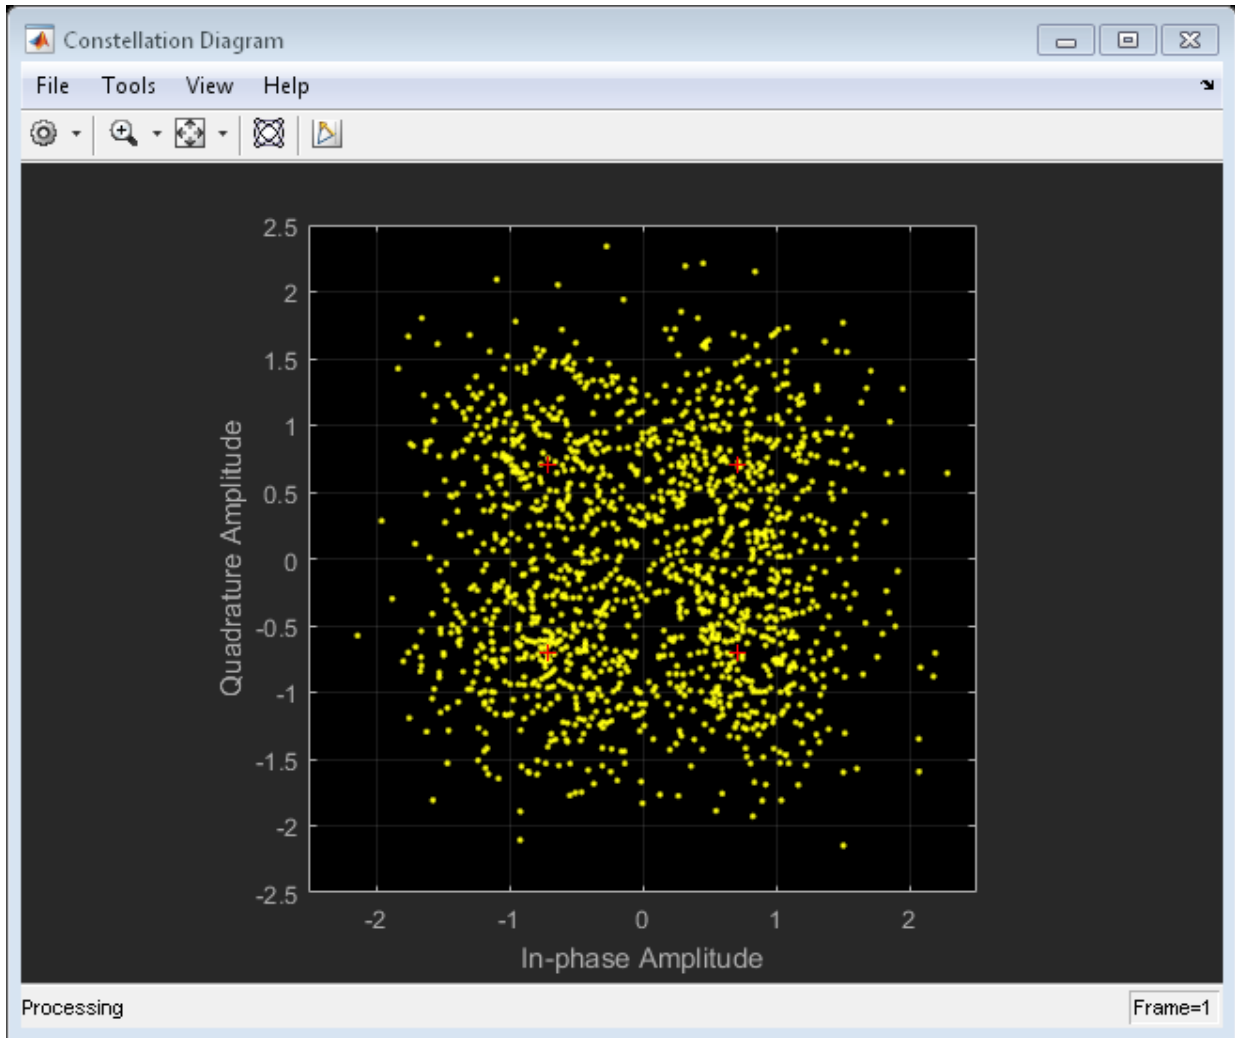

Demodulate the noisy symbols to obtain soft bits. Convolutionally decode the soft bits.
Display the number of erroneous bits

```
softBits = lteSymbolDemodulate(rxSymbols, 'QPSK', 'Soft');
```

```
rxBits = lteConvolutionalDecode(softBits);  
numberErrors = sum(rxBits ~= int8(txBits))  
  
numberErrors =  
    0
```

Input Arguments

input — Input data

column vector

Input data, specified as a column vector. The data is assumed to be soft bit data encoded by a tail-biting convolutional code with constraint length 7, coding rate 1/3 and octal polynomials $G0=133$, $G1=171$ and $G2=165$.

Output Arguments

output — Convolutionally decoded data

column vector

Convolutionally decoded data, specified as a column vector. The decoded data is 1/3 the length of the input `input`.

Data Types: `int8`

See Also

`lteBCHDecode` | `lteConvolutionalEncode` | `lteCQIDecode` | `lteCRCDecode` |
`lteDCIDecode` | `lteRateRecoverConvolutional` | `lteTurboDecode`

Introduced in R2014a

lteConvolutionalEncode

Convolutional encoding

Syntax

```
output = lteConvolutionalEncode(input)
```

Description

`output = lteConvolutionalEncode(input)` returns the result of convolutionally encoding the input data vector `input`. The convolutional code has constraint length 7 and is tail biting with coding rate 1/3 and octal polynomials $G0=133$, $G1=171$ and $G2=165$. Because the code is tail-biting, `output` is 3 times the length of the input. The three encoded parity streams are concatenated block-wise to form the encoded output i.e. `out = [D0 D1 D2]` where `D0`, `D1`, and `D2` are the separate vectors resulting from encoding the input `input` with the individual polynomials $G0$, $G1$, and $G2$.

Examples

Perform Convolutional Encoding

Perform convolutional encoding and compare the length of the input vector to the length of the output vector.

Perform convolutional encoding of a vector of length 100.

```
coded = lteConvolutionalEncode(ones(100,1));  
size(coded)
```

```
300      1
```


The resulting output is a coded vector of length 300, which is three times the length of the input vector, as expected.

Input Arguments

input — Input data vector
column vector

Input data vector, specified as a column vector.

Output Arguments

output — Convolutionally encoded data
column vector

Convolutionally encoded data, returned as a column vector. Because the code is tail biting, **output** is 3 times the length of the input. The three encoded parity streams are concatenated block-wise to form the encoded output i.e. **out** = [D0 D1 D2] where D0, D1, and D2 are the separate vectors resulting from encoding the input **input** with the individual octal polynomials $G0=133$, $G1=171$, and $G2=165$.

Data Types: int8

See Also

lteBCH | lteConvolutionalDecode | lteCRCEncode | lteDCIEncode |
lteRateMatchConvolutional | lteTurboEncode

Introduced in R2014a

lteDCI

Downlink control information format structures and bit payloads

Syntax

```
[dcistr,dcibits] = lteDCI(enb,istr)
[dcistr,dcibits] = lteDCI(istr)
[dcistr,dcibits] = lteDCI(istr,ibits)
```

Description

[dcistr,dcibits] = lteDCI(enb,istr) creates and manipulates downlink control information (DCI) messages of the formats defined in TS 36.212, Section 5.3.3 of [2]. lteDCI creates a DCI message as its output based on the cell-wide settings `enb` and the input structure `istr`. This function returns a DCI message in two forms:

- a structure `dcistr` whose fields match the associated DCI format
- a vector `dcibits` representing the set of message fields mapped to the information bit payload (including any zero padding).

lteDCI can be used to create default DCI or to blindly decode DCI format types.

The field names associated with the `dcistr` output structure depend on the DCI format field in `istr`.

By default, all values are set to zero. However, if any of the DCI fields are already present in the input `istr`, their values are carried forward into `dcistr`. Carrying the values forward allows for easy initialization of DCI field values, particularly the resource allocation type.

Note: Our implementation assumes symmetric link bandwidth unless you specifically assign different values to `NULRB` and `NDLRB`. If the number of resource blocks is only initialized in one link direction then the initialized number of resource blocks (`NULRB` or `NDLRB`) is used for both uplink and downlink. When this mapping is used, no warning is displayed. An error occurs if neither, `NULRB` or `NDLRB`, is defined.

`[dcistr,dcibits] = lteDCI(istr)` creates a DCI message. The fields described in the structure `enb` must be present as part of the input structure `istr`. The `dcistr`, in this case, also carries forward the `NDLRB` and `istr.DCIFormat` fields. This syntax is deprecated and will be removed in a future release.

`[dcistr,dcibits] = lteDCI(istr,ibits)` creates a DCI where all the message fields are initialized from the input bit vector, `ibits`. In this case, `ibits` is treated as the DCI information bit payload; `dcibits` is equal to `ibits`. The length of `ibits` must be one of the valid sizes for the format type and `NULRB/NDLRB` (see `lteDCIInfo` for details). The fields described in the `enb` structure must be present as part of the `istr` input structure. This syntax differs from the previous one in that the `istr` input argument does not require the `DCIFormat` field. If this field is not present, the function attempts to decode the format blindly from the length of the payload vector, `ibits`.

Examples

Create DCI

This example shows the creation of downlink control information (DCI) with Format 1A and distributed virtual resource block (VRB).

Create a DCI with Format 1A and distributed VRB allocation type. A distributed VRB allocation is configured by setting `AllocationType` to 1.

```
enb = struct('NDLRB',50,'CellRefP',1,'DuplexMode','FDD');
istr = struct('DCIFormat','Format1A','AllocationType',1);
dcistr = lteDCI(enb,istr)
```

```
dcistr =
    DCIFormat: 'Format1A'
           CIF: 0
AllocationType: 1
  Allocation: [1x1 struct]
    ModCoding: 0
       HARQNo: 0
      NewData: 0
           RV: 0
    TPCPUCCH: 0
    TDDIndex: 0
```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
CellRefP	Optional	1 (default), 2, 4	Number of cell-specific reference signal (CRS) antenna ports
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex

istr — Input structure

structure

Input structure, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
DCIFormat	Required, except when <code>ibits</code> is input then DCIFormat is optional	'Format0', 'Format1', 'Format1A', 'Format1B', 'Format1C', 'Format1D', 'Format2', 'Format2A', 'Format2B', 'Format2C', 'Format2D', 'Format3', 'Format3A', 'Format4'	Downlink control information (DCI) format type string

ibits – Input bits

vector

Input bits, specified as a column vector. `ibits` is treated as the DCI information bit payload that is, `dcibits == ibits`. The length of `ibits` must be one of the valid sizes for the format type and NULRB/NDLRB (see `lteDCIInfo` for details). When you specify `ibits`, the structure `istr` does not require the `DCIFormat` field. If the `DCIFormat` field is not present, `lteDCI` attempts to decode the format from the length of the payload vector `ibits`.

Data Types: double

Output Arguments

dcistr – DCI message structure

structure

DCI message structure, returned as a structure whose fields match the associated DCI format contents.

The field names associated with `dcistr` depend on the DCI format field in `istr`. By default, all values are set to zero. However, if any of the DCI fields are already present in the input `istr`, their values are carried forward into `dcistr`. Carrying the values forward allows for easy initialization of DCI field values, particularly the resource allocation type. The `dcistr` also carries forward the NDLRB and `DCIFormat` fields supplied in `istr`.

The following table presents the fields associated with each DCI format as defined in TS 36.212, Section 5.3.3 [2].

DCI Formats	DCI Fields	Size	Description
'Format0'	DCIFormat	-	'Format0'
	FreqHopping	1-bit	PUSCH frequency hopping flag
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation, coding scheme and redundancy version
	NewData	1-bit	New data indicator
	TPC	2-bits	PUSCH TPC command
	CShiftDMRS	3-bits	Cyclic shift for DM RS
	CQIReq	1-bit	CQI request
	TDDIndex	2-bits	For TDD config 0, this field is the Uplink Index. For TDD Config 1–6, this field is the Downlink Assignment Index. Not present for FDD.
'Format1'	DCIFormat	-	'Format1'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3 bits (FDD) 4 bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command

DCI Formats	DCI Fields	Size	Description
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1–6, this field is the Downlink Assignment Index. Not present for FDD.
'Format1A'	DCIFormat	-	'Format1A'
	AllocationType	1-bit	VRB assignment flag: 0 (localized), 1 (distributed)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3 bits (FDD) 4 bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1–6, this field is the Downlink Assignment Index. Not present for FDD.
'Format1B'	DCIFormat	-	'Format1B'
	AllocationType	1-bit	VRB assignment flag: 0 (localized), 1 (distributed)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme

DCI Formats	DCISTR Fields	Size	Description
	HARQNo	3 bits (FDD) 4 bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command
	TPMI	2 bits for two antennas 4 bits for four antennas	PMI information
	PMI	1-bit	PMI confirmation
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1–6, this field is the Downlink Assignment Index. Not present for FDD.
'Format1C'	DCIFormat	-	'Format1C'
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
'Format1D'	DCIFormat	-	'Format1D'
	AllocationType	1-bit	VRB assignment flag: 0 (localized), 1 (distributed)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3 bits (FDD) 4 bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator

DCI Formats	DCISTR Fields	Size	Description
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command
	TPMI	2 bits for two antennas 4 bits for four antennas	Precoding TPMI information
	DLPowerOffset	1-bit	Downlink power offset
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1–6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2'	DCIFormat	-	'Format2'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command
	HARQNo	3 bits (FDD) 4 bits (TDD)	HARQ process number
	SwapFlag	1-bit	Transport block to codeword swap flag
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1

DCI Formats	DCISTR Fields	Size	Description
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
	PrecodingInfo	3 bits for two antennas 6 bits for four antennas	Precoding information
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1–6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2A'	DCIFormat	-	'Format2A'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command
	HARQNo	3 bits (FDD) 4 bits (TDD)	HARQ process number
	SwapFlag	1-bit	Transport block to codeword swap flag

DCI Formats	DCISTR Fields	Size	Description
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
	PrecodingInfo	0 bits for two antennas 2 bits for four antennas	Precoding information
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1–6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2B'	DCIFormat	-	'Format2B'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command

DCI Formats	DCISTR Fields	Size	Description
	HARQNo	3 bits (FDD) 4 bits (TDD)	HARQ process number
	ScramblingId	1-bit	Scrambling identity
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1–6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2C'	DCIFormat	-	'Format2C'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command

DCI Formats	DCI Fields	Size	Description
	HARQNo	3 bits (FDD) 4 bits (TDD)	HARQ process number
	TxIndication	3-bits	Antenna port(s), scrambling identity, and number of layers indicator
	SRSRequest	variable	SRS request. Only present for TDD.
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1–6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2D'	DCIFormat	-	'Format2D'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation

DCI Formats	DCI Fields	Size	Description
	TPCPUCCH	2-bits	PUCCH TPC command
	HARQNo	3 bits (FDD)	HARQ process number
		4 bits (TDD)	
	TxIndication	3-bits	Antenna port(s), scrambling identity, and number of layers indicator
	SRSRequest	variable	SRS request. Only present for TDD.
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
REMappingAndQCL	2 bits	PDSCH RE Mapping and Quasi-Co-Location Indicator	
'Format3'	DCIFormat	-	'Format3'
	TPCCommands	variable	TPC commands for PUCCH and PUSCH
'Format3A'	DCIFormat	-	'Format3A'
	TPCCommands	variable	TPC commands for PUCCH and PUSCH
'Format4'	DCIFormat	-	'Format4'
	Allocation	variable	Resource block assignment/ allocation
	TPC	2-bits	PUSCH TPC command

DCI Formats	DCI Fields	Size	Description
	CShiftDMRS	3-bits	Cyclic shift for DM RS
	TDDIndex	2-bits	For TDD config 0, this field is Uplink Index. For TDD Config 1–6, this field is the Downlink Assignment Index. Not present for FDD.
	CQIReq	variable	CQI request
	SRSRequest	2-bits	SRS request
	AllocationType	1-bit	Resource allocation header: non-hopping PUSCH resource allocation type 0, type 1
	ModCoding	5-bits	Modulation, coding scheme and redundancy version
	NewData	1-bit	New data indicator
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	PrecodingInfo	3 bits for two antennas 6 bits for four antennas	Precoding information

The DCIFormat fields in the table take a string indicating the DCI format. All other fields take a string of zeros and ones of the right size.

The ModCoding fields in the table correspond to the variable I_{MCS} defined in TS 36.213, Section 7.1.7, Table 7.1.7.1-1 [3]. This field expects to be assigned a decimal number. The

call to `lteDCI` serializes `ModCoding` into a 5-bit field value. For example, `ModCoding` field for 64QAM modulation (Q_m) and transport block index (I_{TBS}) 15 is assigned 17 (a decimal number).

The fields included in the `Allocation` structure vary based on the format type as outlined in the tables the follow. All fields take a string of zeroes and ones with the bit values.

Resource Allocation type 0			
DCI Formats	Allocation Fields	Size (bits)	Description
'Format1' 'Format2' 'Format2A' 'Format2B'	Bitmap	variable	Bitmap value in terms of RBG, type string

Resource Allocation type 1			
DCI Formats	Allocation Fields	Size (bits)	Description
'Format1' 'Format2' 'Format2A' 'Format2B'	Bitmap	variable	Bitmap value in terms of RBG, type string
	RBSubset	2 bits	Selected resource blocks subset indicator
	Shift	1 bit	Shift of the resource allocation span indicator

Resource Allocation type 2 (localized)			
DCI Formats	Allocation Fields	Size (bits)	Description
'Format1A' 'Format1B' 'Format1C' 'Format1D'	RIV	variable	Resource indication value

Resource Allocation type 2 (distributed)			
DCI Formats	Allocation Fields	Size (bits)	Description
'Format1A' 'Format1B'	RIV	variable	Resource indication value

Resource Allocation type 2 (distributed)			
DCI Formats	Allocation Fields	Size (bits)	Description
'Format1C' 'Format1D'	Gap	1 bit	Gap value: 0 (gap1), 1 (gap2)

Uplink Non-Hopping allocation			
DCI Formats	Allocation Fields	Size (bits)	Description
'Format0'	RIV	variable	Resource indication value

Uplink Hopping allocation			
DCI Formats	Allocation Fields	Size (bits)	Description
'Format0'	RIV	variable	Resource indication value
	HoppingBits	variable	When number of hopping bits is 1, HoppingBits value can be 0 or 1 When number of hopping bits is 2, HoppingBits value can be 00, 01, 10, or 11 See TS 36.213, Table 8.4-2 [3]

Data Types: struct

dcibits – DCI message in bit payload form

vector

DCI message in bit payload form, returned as a column vector. **dcibits** represents the set of message fields mapped to the information bit payload (including any zero-padding).

Data Types: int8

More About

Algorithms

Resource allocation type 0

In type 0 resource allocation, a bit map represents a resource block group (RBG) allocated to a UE. P gives the RBG size, which can be deduced from TS 36.213, Table 7.1.6.1-1 of [3] for given system bandwidth. The numbers of bits in **Bitmap** field are equal to $\lceil NDLRB / P \rceil$. Each bit in the **Bitmap** selects a small contiguous group whose size depends on the bandwidth (RBG: 1...4). The maximum resource block (RB) coverage of any type 0 allocation is the entire bandwidth that is, a type 0 allocation with all the bits in bitmap set to '1' is equivalent to the entire bandwidth.

Example — 50 RB Bandwidth, the number of bits in **Bitmap** are 17. Each bit in the 17-bit bitmap selects a group of three RB (apart from the last group which only contains two RB for this BW). Each bit is associated with a group of RE with the same color.



Resource allocation type 1

In type 1 resource allocation, a bit map indicates physical resource blocks inside a selected resource block group subset p , where $0 \leq p < P$. The maximum resource block (RB) coverage of any type 1 allocation is a subset of entire bandwidth. A type 1 allocation, even with all the bits in the **Bitmap** set to '1' does not span the entire bandwidth. Each bit in the bitmap selects a single RB from 'islands' of small contiguous groups whose size (RBG) and separation depend on the total bandwidth. This grouping provides the provision of selecting a single RB without turning on any other RB.

 
In type 1, the resource block assignment signaling is split into three-parts:

- 1 — the **RBSubset** field part represents the selected resource block group subset
- 2 — the **Shift** field part indicates whether to apply offset when interpreting the bitmap

- 3 — the **Bitmap** field part contains the bitmap that indicates to the UE specific physical resource block inside the resource block group subset.

In comparison to type 0, the bitmap size for type 1 is always short by “ $\lceil \log_2(P) \rceil + 1$ ” number of bits, where P is defined as in resource allocation type 0.

Example – 50 RB Bandwidth, the number of bits in **Bitmap** are 14 (3 bits short as compare to type 0 due to **RBSubset** and **Shift** parameters). Each bit in the 14-bit bitmap selects an individual RB inside a selected subset. The following figure illustrates setting all the bits in **Bitmap** field to ‘1’ for different subsets and offset values.

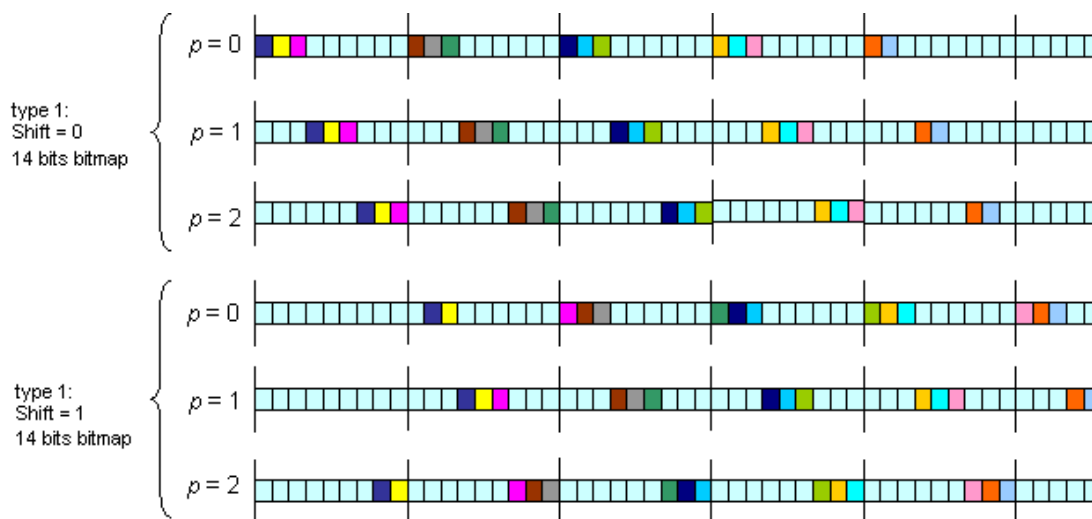

Resource allocation type 2

In type 2 resource allocation, physical resource blocks are not directly allocated. Instead, virtual resource blocks are allocated which are then mapped onto physical resource blocks. type 2 allocation supports both localized and distributed virtual resource block allocation differentiated by one bit-flag. The starting point of virtual resource block and the length in terms of contiguously allocated virtual resource block can be derived from Resource Indication Value (RIV) signaled within the DCI.

Example – 50 RB Bandwidth, a UE is allocated of 25 resource blocks ($L_{CRBs}=25$), starting from resource block 10 ($RB_{start}=10$) in the frequency domain. To calculate the RIV value, refer to the formula given in TS 36.213, Section 7.1.6.3 [3], which yields RIV

= 1210. This RIV is signaled in DCI and the UE could unambiguously derive the starting resource block and the number of allocated resource blocks from RIV again.

Uplink Non-Hopping Resource Allocation

For uplink non-hopping resource allocation, the rules for type 2 localized resource allocation apply for deriving the resource allocation from the RIV value.

Uplink Hopping Resource Allocation

When `FreqHopping` is set to 1, uplink hopping resource allocation is available. For uplink hopping resource allocation, two types of hopping are used, Type 1 PUSCH Hopping and Type 2 PUSCH Hopping. Do not confuse these types with downlink resource allocation type 1 and type 2 described earlier. Type 1 PUSCH Hopping is calculated using the RIV value and a number of parameters signalled by higher layers. Type 2 PUSCH Hopping is calculated using a predefined pattern, a function of the subframe and frame number, which is defined in TS 36.211, Section 5.3.4 [1]. The fundamental set of resource blocks used as part of the hopping is calculated via the rules for type 2 localized resource allocation from the RIV value, except either 1 or 2 (depending on system bandwidth) hopping bits have been deducted from the resource allocation bitmap. These hopping bits specify whether Type 1 or Type 2 PUSCH Hopping is used, and for the case of 2 bits, variations of the position of the Type 1 hopping in the frequency domain. The definition of the hopping bits can be found in TS 36.213, Table 8.4-2 [3]. Bandwidth dependency for number of hopping bits allocated follows the following rule:

- If system BW ($N_{ULRB} \leq 49$), number of hopping bits is 1 and `HoppingBits` value can be 0 or 1
- If system BW ($N_{ULRB} > 49$), number of hopping bits is 2 and `HoppingBits` value can be 00, 01, 10, or 11

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

[3] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteDCIDecode | lteDCIEncode | lteDCIInfo | lteDCIResourceAllocation

Introduced in R2014a

lteDCIDecode

Downlink control information decoding

Syntax

```
[dcibits,crc_rnti] = lteDCIDecode(dcilen,softbits)
[dcibits,crc_rnti] = lteDCIDecode(ue,softbits)
```

Description

`[dcibits,crc_rnti] = lteDCIDecode(dcilen,softbits)` recovers a downlink control information (DCI) message vector of length `dcilen` from the input vector of floating-point soft bits, `softbits`. `lteDCIDecode` performs the inverse DCI processing operation as specified in section 5.3.3 of [1], rate recovery, and Viterbi and CRC decoding. `lteDCIDecode` recovers the DCI message bit vector `dcibits` from an input vector of received soft bits previously coded by the DCI processing. `lteDCIDecode` also returns `crc_rnti`, the 16-bit integer result of the CRC decoder which is equivalent to the RNTI value needed to mask (XOR) the CRC for no CRC error. This fact is used by the system to identify a DCI message with a specific `ue`. The function has two different ways of specifying the length of the DCI information payload to be recovered.

Note: Our implementation assumes symmetric link bandwidth unless you specifically assign different values to `NULRB` and `NDLRB`. If the number of resource blocks is only initialized in one link direction then the initialized number of resource blocks (`NULRB` or `NDLRB`) is used for both uplink and downlink. When this mapping is used, no warning is displayed. An error occurs if neither, `NULRB` or `NDLRB`, is defined.

`[dcibits,crc_rnti] = lteDCIDecode(ue,softbits)` recovers a DCI message vector from the input vector of floating-point soft bits `softbits`. In this case, the length of the recovered message is defined through the `ue` structure in terms of DCI message format and the bandwidth.

Examples

Decode DCI Message

Perform DCI decoding on a sample codeword.

```
dcInfo = lteDCIInfo(struct('NDLRB',50));
dcBits = zeros(dcInfo.Format1,1);
cw = lteDCIEncode(struct('PDCCHFormat',1,'RNTI',10,'NDLRB',50),dcBits);
[dcBits,crcRnti] = lteDCIDecode(dcInfo.Format1,cw);
crcRnti
```

10

The first returned output is `dcBits`, the decoded vector of length 45. The second output, `crc_rnti`, has a value of 10, corresponding to the RNTI values used in CRC masking.

Input Arguments

dcilen — Length of recovered DCI message vector

integer

Length of recovered DCI message vector, specified as a positive integer.

Data Types: `double`

softbits — Floating-point soft bits

vector

Floating-point soft bits, specified as a column vector.

Data Types: `double` | `int8`

ue — DCI message format and bandwidth

structure

DCI message format and bandwidth, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
		6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
DCIFormat	Required	'Format0', 'Format1', 'Format1A', 'Format1B', 'Format1C', 'Format1D', 'Format2', 'Format2A', 'Format2B', 'Format2C', 'Format2D', 'Format3', 'Format3A', 'Format4'	Downlink control information (DCI) format type string
CellRefP	Optional	1 (default), 2, 4	Number of cell-specific reference signal (CRS) antenna ports
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex

Output Arguments

dcibits — Recovered DCI message bit vector

vector

Recovered DCI message bit vector, returned as a column vector. The length of **dcibits** is defined though structure **ue** in terms of DCI message format and the bandwidth.

Data Types: int8

crc_rnti — 16-bit integer result of the CRC decoder

vector

16-bit integer result of the CRC decoder, returned as a column vector. `crc_rnti` is equivalent to the RNTI value that would need to mask (XOR) the CRC for no CRC error.

Data Types: `uint32`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDCI` | `lteDCIEncode` | `lteDCIInfo` | `lteDCIResourceAllocation` | `ltePDCCHDecode`

Introduced in R2014a

lteDCIInfo

Downlink control information message information

Syntax

```
info = lteDCIInfo(enb)
```

Description

`info = lteDCIInfo(enb)` returns a structure `info` containing the payload sizes including padding for all downlink control information (DCI) message formats for the cell-wide settings given in `enb`.

Note: Our implementation assumes symmetric link bandwidth unless you specifically assign different values to `NULRB` and `NDLRB`. If the number of resource blocks is only initialized in one link direction then the initialized number of resource blocks (`NULRB` or `NDLRB`) is used for both uplink and downlink. When this mapping is used, no warning is displayed. An error occurs if neither, `NULRB` or `NDLRB`, is defined.

Examples

Get DCI Message Information

This example shows how to display DCI information using the `lteDCIInfo` function

Find the payload size for all DCI message formats when the `NDLRB` parameter is set to 50.

```
lteDCIInfo(struct('NDLRB',50))
```

```
Warning: Using default value for parameter field DuplexMode (FDD)
```

```
Warning: Using default value for parameter field CellRefP (1)
```

```
ans =
```

```
Format0: 27
```

```
Format1: 31
```

```

Format1A: 27
Format1B: 28
Format1C: 13
Format1D: 28
  Format2: 43
Format2A: 41
Format2B: 41
Format2C: 42
Format2D: 45
  Format3: 27
Format3A: 27
Format4: 39

```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the command "lteWarning('off','DefaultValue')".

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
CellRefP	Optional	1 (default), 2, 4	Number of cell-specific reference signal (CRS) antenna ports

Parameter Field	Required or Optional	Values	Description
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex

Data Types: struct

Output Arguments

info — Payload sizes for all DCI message formats

structure

Payload sizes for all DCI message formats, returned as a structure with the following parameter fields.

Parameter Field	Description	Values	Data Type
Format0	Format0 payload size. Format0 is the DCI format used for the scheduling of PUSCH.	Integer	uint64
Format1	Format1 payload size. Format1 is the DCI format used for the scheduling of one PDSCH codeword.	Integer	uint64
Format1A	Format1A payload size. Format1A is the DCI format used for the compact scheduling of one PDSCH codeword and random access procedure.	Integer	uint64
Format1B	Format1B payload size. Format1B is the DCI format used for the compact scheduling of one PDSCH codeword with precoding information.	Integer	uint64
Format1C	Format1C payload size. Format1C is the DCI format used for very compact scheduling of one PDSCH codeword.	Integer	uint64
Format1D	Format1D payload size. Format1D is the DCI format used for the compact scheduling of one PDSCH codeword with precoding and power offset information.	Integer	uint64

Parameter Field	Description	Values	Data Type
Format2	Format2 payload size. Format2 is the DCI format used for the scheduling of two PDSCH codewords with precoding information for closed-loop spatial multiplexing.	Integer	uint64
Format2A	Format2A payload size. Format2A is the DCI format used for the scheduling of two PDSCH codewords with precoding information for open-loop spatial multiplexing.	Integer	uint64
Format2B	Format2B payload size. Format2B is the DCI format used for the scheduling of dual-layer transmission, for antenna ports 7 and 8.	Integer	uint64
Format2C	Format2C payload size. Format2C is the DCI format used for the scheduling of up to eight layer transmission, for antenna ports 7 to 14, using TM9.	Integer	uint64
Format2D	Format2D payload size. Format2D is the DCI format used for the scheduling of up to eight layer transmission, for antenna ports 7 to 14, using TM10.	Integer	uint64
Format3	Format3 payload size. Format3 is the DCI format used for the transmission of transmit power control (TPC) commands for PUCCH and PUSCH with 2-bit power adjustments.	Integer	uint64
Format3A	Format3A payload size. Format3A is the DCI format used for the transmission of transmit power control (TPC) commands for PUCCH and PUSCH with 1-bit power adjustments.	Integer	uint64
Format4	Format4 payload size. Format4A is the DCI format used for the scheduling of PUSCH with multi-antenna port transmission mode.	Integer	uint64

According to the rules defined in section 5.3.3 of [1], the payload size of DCI Format0 and Format1A should always be the same and either format will be appended with padding bits, if necessary, to fulfill this condition.

None of the DCI format payload sizes should equal the ambiguous sizes defined in table 5.3.3.1.2-1 of [1]. If required, padding bits will be added to the DCI format payload. The ambiguous DCI format payload sizes are 12, 14, 16, 20, 24, 26, 32, 40, 44, and 56.

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDCI` | `lteDCIDecode` | `lteDCIEncode` | `lteDCIResourceAllocation`

Introduced in R2014a

lteDCIEncode

Downlink control information encoding

Syntax

```

cw = lteDCIEncode(ue,dcibits)
cw = lteDCIEncode(ue,dcibits,outlen)

```

Description

`cw = lteDCIEncode(ue,dcibits)` returns the vector resulting from downlink control information (DCI) processing of the input bit vector, `dcibits`, based on field settings in the structure, `ue`. As described in TS 36.212, Section 5.3.3 [1], DCI processing involves CRC attachment with `ue.RNTI` masking of the CRC, convolutional coding, and rate matching to the capacity of the PDCCH format. The DCI processing input is the DCI format message bits, `dcibits`, to be transmitted on a single PDCCH. The length of the output vector, `cw`, is:

length of `cw` = $72 * 2^{ue.PDCCHFormat}$, where $2^{ue.PDCCHFormat}$ represents the number of Control Channel Elements (CCE) and one CCE is 72 bits.

`cw = lteDCIEncode(ue,dcibits,outlen)` rate matches the output to `outlen`. For this syntax, `ue.PDCCHFormat` is ignored if present.

Examples

Encode DCI with Zero RNTI

Perform DCI processing on an all-zero input. This processing results in an all-zero output when you set `RNTI` to 0.

Generate a `dcibits` input vector with zeros for a `Format1` DCI message. `enb` is defined with 50 downlink RBs, 1 cell specific reference signal antenna port and FDD duplex mode.

```
enb = struct('NDRB',50,'CellRefP',1,'DuplexMode','FDD');
```

```
dciInfo = lteDCIInfo(enb);  
dcibits = zeros(dciInfo.Format1,1);
```

Define `ue` parameter structure with PDCCH Format1 and RNTI set to 0.

```
ue = struct('PDCCHFormat',1,'RNTI',0);
```

Encode the DCI bits.

```
cw = lteDCIEncode(ue,dcibits);  
cw(1:10)
```

```
ans =
```

```
0  
0  
0  
0  
0  
0  
0  
0  
0  
0  
0
```

For PDCCH format 1, the output vector length is 144. For this example the output is an all-zero vector since DCI bits were 0 and RNTI was set to 0.

Encode DCI with Unity RNTI

Perform DCI processing on an all-zero input with RNTI set to 1. This processing results in a non-zero output when you set RNTI to 1.

Generate a `dcibits` input vector with zeros for a Format1 DCI message. `enb` is defined with 50 downlink RBs, 1 cell specific reference signal antenna port and FDD duplex mode.

```
enb = struct('NDRB',50,'CellRefP',1,'DuplexMode','FDD');  
dciInfo = lteDCIInfo(enb);  
dcibits = zeros(dciInfo.Format1,1);
```

Define `ue` parameter structure with PDCCH Format1 and RNTI set to 1.


```
ue = struct('PDCCHFormat',1,'RNTI',1);
```

Encode the DCI bits.

```
cw = lteDCIEncode(ue,dcibits);
cw(1:10)
```

```
ans =
```

```
0
0
0
0
0
0
0
0
1
0
0
```

For PDCCH format 1, the output vector length is 144. With RNTI set to 1, for this example the output vector is not all-zeros.

Input Arguments

ue — Parameter structure for DCI processing

structure

Parameter structure for DCI processing, specified as a structure that must the following fields.

Parameter Field	Required or Optional	Values	Description
PDCCHFormat	Required	0, 1, 2, 3	PDCCH format
RNTI	Required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)

dcibits — DCI message bit vector

vector

DCI message bit vector, specified as a column vector.

Data Types: `double` | `int8`

outlen — Output vector length

optional | nonnegative scalar integer

Output vector length, specified as a nonnegative scalar integer. Optional.

Output Arguments

cw — Output vector

vector

Output vector resulting from DCI processing, returned as a column vector. `cw` is the result of DCI processing the input vector, `dcibits`. Depending on the function syntax used, the length of `cw` is either $72 * (2^{\text{ue.PDCCHFormat}})$ elements or rate matched to `outlen`

Data Types: `int8`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDCI` | `lteDCIDecode` | `lteDCIInfo` | `lteDCIResourceAllocation` | `lteEPDCCH`
| `ltePDCCH`

Introduced in R2013b

lteDCIResourceAllocation

DCI message physical resource blocks allocation

Syntax

```
[prbset, nrbg, rbgsize] = lteDCIResourceAllocation(enbue,dcistr)
[prbset, nrbg, rbgsize] = lteDCIResourceAllocation(dcistr)
```

Description

`[prbset, nrbg, rbgsize] = lteDCIResourceAllocation(enbue,dcistr)` returns the 0-based allocated physical resource block indices for the given input DCI message structure. `lteDCIResourceAllocation` returns a matrix `prbset` containing the 0-based physical resource block (PRB) indices, number of resource block groups `nrbg`, and resource block group size `rbgsize`, defined by the resource allocation part of DCI message structure `dcistr` and settings from the structure `enbue`.

The structure `dcistr` is expected to be one of the set of formats generated by the `lteDCI` function. The returned `prbset` will be a single column vector or a two-column matrix depending on whether the allocation type defines a different set of PRB in the first and second slots of the subframe. The allocation type may also define a minimum unit of resource block allocation defined by the resource block group size `rbgsize`. This specifies the number of resource blocks in a group. There are `nrbg` resource block groups in the allocation. The returned `prbset` contains 0-based PRBs.

Unless specifically defined otherwise, it is assumed the system bandwidth (that is, the number of resource blocks specified for allocation) is the same for uplink and downlink. If you specify DCI Format 0 or Format 4 in `dcistr.DCIFormat`, the function sets the system bandwidth based on the number of uplink resource blocks, `enbue.NULRB`. If you do not specify `enbue.NULRB`, the function sets the system bandwidth based on the number of downlink resource blocks, `enbue.NDLRB`. For all other formats, the function first checks `enbue.NDLRB` for the number of resource blocks. If `enbue.NDLRB` is not provided then it will use `enbue.NULRB`. The structure fields `enbue.NDLRB` and `enbue.NULRB` have no default so if neither is initialized an error occurs.

`[prbset, nrbg, rbgsz] = lteDCIResourceAllocation(dcistr)` returns outputs `prbset`, `nrbg`, and `rbgsz` as above, except the fields described in structure `enbue` must be present as part of `dcistr`.

Calling `lteDCIResourceAllocation` specifying the `dcistr` structure as the only input argument is not recommended because this signature will be removed in a future release.

The LTE standard specifies three downlink resource allocation types: type 0, 1, and 2. In terms of the DCI formats, formats 1, 2, 2A, 2B, 2C, and 2D can use either resource allocation type 0 or type 1, with the choice signalled by `dcistr.AllocationType=0` and `dcistr.AllocationType=1` respectively. DCI formats 1A, 1B, 1C, and 1D use resource allocation type 2, which can be configured to be localized or distributed across resource blocks, signalled by `dcistr.AllocationType=0` and `dcistr.AllocationType=1` respectively.

For uplink allocations (specified in DCI format 0 messages), the allocation type is either hopping or non-hopping, signalled by `dcistr.FreqHopping=1` and `dcistr.FreqHopping=0`, respectively. For hopping allocations, there are two types of hopping, Type 1 PUSCH hopping and Type 2 PUSCH hopping. The hopping type is signalled by `dcistr.Allocation.HoppingBits` as described in TS 36.213, Table 8.4-2 [1].

Similarly, for non-hopping there are two types of resource allocation Type 0 and Type 1. These are signalled by `dcistr.AllocationType=0` and `dcistr.AllocationType=1` respectively. In case of DCI format 0 and uplink resource allocation Type 1, the concatenation of the frequency hopping flag field (`dcistr.FreqHopping`) and the resource block assignment and hopping resource allocation field provides the resource allocation field (`dcistr.Allocation`). The DCI format 4 messages can only signal non-hopping resource allocation Type 0 and Type 1.

All allocations define a single set of PRB for both slots in a subframe (`prbset` is a column vector) except for the distributed type 2 and uplink hopping allocations where different PRB sets are used across the slot pair.

Examples

Get Allocated PRB Indices for DCI Message

This example allocates DCI resource and shows the allocation of the DCI resources.

Create a DCI message structure with a system bandwidth of 50 resource blocks and DCI Format 1A.

```
enb = struct('NDRB',50);
dciStr = lteDCI(enb,struct('DCIFormat','Format1A','AllocationType',1));
```

```
Warning: Using default value for parameter field DuplexMode (FDD)
Warning: Using default value for parameter field CellRefP (1)
```

The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the following command `lteWarning('off','DefaultValue')`.

Return allocated physical resource block indices, the number of resource block groups, and the resource block group size.

```
[prbSet, nrBg, rbgSize] = lteDCIResourceAllocation(enb,dciStr)
```

```
prbSet =
```

```
          0          27
```

```
nrBg =
```

```
    17
```

```
rbgSize =
```

```
     3
```

Input Arguments

enbue — DCI message settings

structure

DCI message settings, specified as a structure. **enbue** can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CellRefP	Optional	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as one of the following: <ul style="list-style-type: none"> 'FDD' — Frequency division duplex (default) 'TDD' — Time division duplex
The following parameters apply when <code>dcistr.DCIFormat = 'Format0' or 'Format4'</code>			
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
The following parameters apply when <code>dcistr.FreqHopping = 1</code>			
NCeIIID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
NFrame	Required	0 (default), Nonnegative scalar integer	Frame number
PUSCHHopping	Optional	'Inter' (default), 'InterAndIntra'	Uplink subframe hopping mode
MacTxNumber	Optional	0 (default), 0 ... 27, Nonnegative scalar integer.	Number of the current MAC (re-)transmission, <i>CURRENT_TX_NB</i>

Parameter Field	Required or Optional	Values	Description
NSubbands	Optional	1 (default), 1 ... 4, Nonnegative scalar integer.	Number of subbands.
PUSCHHopping0	Optional	0 (default), 0 ... 98, Nonnegative scalar integer.	PUSCH hopping offset

Data Types: struct

dcistr – DCI message structure

structure

DCI message structure, returned as a structure whose fields match those of the associated DCI format.

The field names associated with **dcistr** are dependent on the DCI format. The format is expected to be one of the formats generated by **lteDCI**.

The following table details the DCI formats and accompanying **dcistr** parameter fields.

DCI Formats	DCISTRFields	Size	Description
'Format0'	DCIFormat	—	'Format0'
	FreqHopping	1-bit	PUSCH frequency hopping flag
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation, coding scheme and redundancy version
	NewData	1-bit	New data indicator
	TPC	2-bits	PUSCH TPC command
	CShiftDMRS	3-bits	Cyclic shift for DM RS
	CQIReq	1-bit	CQI request
	TDDIndex	2-bits	For TDD config 0, this field is the Uplink Index. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.

DCI Formats	DCIFields	Size	Description
'Format1'	DCIFormat	—	'Format1'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3-bits (FDD), 4-bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format1A'	DCIFormat	—	'Format1A'
	AllocationType	1-bit	VRB assignment flag: 0 (localized), 1 (distributed)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3-bits (FDD), 4-bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.

DCI Formats	DCIFields	Size	Description
'Format1B'	DCIFormat	—	'Format1B'
	AllocationType	1-bit	VRB assignment flag: 0 (localized), 1 (distributed)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3-bits (FDD), 4-bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command
	TPMI	2-bits (2 antennas), 4-bits (4 antennas)	PMI information
	PMI	1-bit	PMI confirmation
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format1C'	DCIFormat	—	'Format1C'
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
'Format1D'	DCIFormat	—	'Format1D'
	AllocationType	1-bit	VRB assignment flag: 0 (localized), 1 (distributed)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3-bits (FDD), 4-bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator

DCI Formats	DCIFields	Size	Description
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command
	TPMI	2-bits (2 antennas), 4-bits (4 antennas)	Precoding TPMI information
	DLPowerOffset	1-bit	Downlink power offset
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2'	DCIFormat	—	'Format2'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command
	HARQNo	3-bits (FDD), 4-bits (TDD)	HARQ process number
	SwapFlag	1-bit	Transport block to codeword swap flag
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2

DCI Formats	DCI STR Fields	Size	Description
	PrecodingInfo	3-bits (2-antennas), 6-bits (4-antennas)	Precoding information
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2A'	DCI Format	—	'Format2A'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command
	HARQNo	3-bits (FDD), 4-bits (TDD)	HARQ process number
	SwapFlag	1-bit	Transport block to codeword swap flag
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
	PrecodingInfo	0-bits (2 antennas), 2-bits (4 antennas)	Precoding information

DCI Formats	DCI STR Fields	Size	Description
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2B'	DCIFormat	—	'Format2B'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command
	HARQNo	3-bits (FDD), 4-bits (TDD)	HARQ process number
	ScramblingId	1-bit	Scrambling identity
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2C'	DCIFormat	-	'Format2C'
	CIF	variable	Carrier indicator

DCI Formats	DCI STR Fields	Size	Description
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command
	HARQNo	3-bits (FDD) 4-bits (TDD)	HARQ process number
	TxIndication	3-bits	Antenna port(s), scrambling identity, and number of layers indicator
	SRSRequest	variable	SRS request. Only present for TDD.
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.

DCI Formats	DCI STR Fields	Size	Description
'Format3'	DCIFormat	—	'Format3'
	TPCCommands	variable	TPC commands for PUCCH and PUSCH
'Format3A'	DCIFormat	—	'Format3A'
	TPCCommands	variable	TPC commands for PUCCH and PUSCH
'Format4'	DCIFormat	—	'Format4'
	CIF	variable	Carrier indicator
	Allocation	variable	Resource block assignment/ allocation
	TPC	2-bits	PUSCH TPC command
	CShiftDMRS	3-bits	Cyclic shift for DMRS
	TDDIndex	2-bits	For TDD config 0, this field is Uplink Index. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
	CQIReq	variable	CQI request
	SRSRequest	2-bits	SRS request
	AllocationType	1-bits	Resource allocation header: non-hopping PUSCH resource allocation type 0, type 1
	ModCoding	5-bits	Modulation, coding scheme and redundancy version
	NewData	1-bits	New data indicator
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bits	New data indicator for transport block 1
ModCoding2	5-bits	Modulation and coding scheme for transport block 2	

DCI Formats	DCI Fields	Size	Description
	NewData2	1-bits	New data indicator for transport block 2
	PrecodingInfo	3-bits (2 antennas)	Precoding information
		6-bits (4 antennas)	

Data Types: struct

Output Arguments

prbset — Physical resource block indices

nonnegative integer column vector | nonnegative integer matrix

Physical resource block indices, returned as a nonnegative integer column vector or a nonnegative integer matrix of size N -by-2. These indices are 0-based. The number of columns depends on whether the allocation type defines a different set of physical resource block indices in the first and second slots of the subframe.

Data Types: uint64

nrbg — Number of resource block groups in the allocation

integer

Number of resource block groups in the allocation, returned as an integer.

Data Types: int32

rbgsize — Resource block group size

integer

Number of resource blocks in a group, returned as an integer.

Data Types: int32

References

- [1] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteDCI | lteDLSCH | ltePDCCH

Introduced in R2014a

lteDLChannelEstimate

Downlink channel estimation

Syntax

```
[hest,noisest] = lteDLChannelEstimate(enb,rxgrid)
[hest, noisest] = lteDLChannelEstimate(enb,cec,rxgrid)
[hest, noisest] = lteDLChannelEstimate(enb,chs,cec,rxgrid)
```

Description

[hest,noisest] = lteDLChannelEstimate(enb,rxgrid) returns **hest**, the estimated channel between each transmit and receive antenna and **noisest**, an estimate of the noise power spectral density on the reference signal subcarriers. See “Algorithms” on page 1-142.

[hest, noisest] = lteDLChannelEstimate(enb,cec,rxgrid) returns the estimated channel using the method and parameters defined by the configuration structure **cec**.

[hest, noisest] = lteDLChannelEstimate(enb,chs,cec,rxgrid) returns the estimated channel given the cell-wide settings structure, **enb**, PDSCH transmission configuration, **chs**, and channel estimator configuration, **cec**.

Examples

Estimate Downlink Channel Characteristics

This example sets up and transmits RMC R.12 (4-antenna transmit diversity), models the propagation channel by combining all transmit antennas onto one receive antenna, OFDM demodulates and performs channel estimation.

Initialize cell parameters for transmission of RMC R.12.

Initialize channel estimator configuration (**cec**). The averaging window size is configured in terms of resource elements (REs), in time and frequency. Here cubic interpolation will be used with an averaging window of 1-by-1 REs. Since we are not adding noise and don't

require a noise estimate, there is no need for averaging, so we set the frequency window and time window size to '1'.

Generate a transmit waveform with `lteRMCDLTool` function

```
rc = 'R.12';
enb = lteRMCDL(rc);

cec.FreqWindow = 1;
cec.TimeWindow = 1;
cec.InterpType = 'cubic';
cec.PilotAverage = 'UserDefined';
cec.InterpWinSize = 3;
cec.InterpWindow = 'Causal';

txWaveform = lteRMCDLTool(enb,[1;0;0;1]);
```

Model the propagation channel by combining all transmit antennas onto one receive antenna.

Perform OFDM demodulation.

With the cell parameters defined, channel estimation configured and a received waveform demodulated the channel characteristics for the received resource grid is estimated. Displaying the channel estimate size, we see `hest` is an M-by-N-by-NRxAnts-by-CellRefP array

```
rxWaveform = sum(txWaveform,2);

rxGrid = lteOFDMDemodulate(enb,rxWaveform);

hest = lteDLChannelEstimate(enb,cec,rxGrid);
size(hest)

ans =
```

```
    72    140     1     4
```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
NCellID	Required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following parameters are dependent upon the condition that cec.Reference is set to 'CSIRS'.			

Parameter Field	Required or Optional	Values	Description
CSIRRefP	Required	1 (default), 2, 4, 8	Array of number of CSI-RS antenna ports
CSIRSConfig	Required	scalar integer	Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1.
CSIRSPeriod	Optional	'On' (default), 'Off', <i>Icsi-rs</i> (0,...,154), [<i>Tcsi-rs Dcsi-rs</i>]. You can also specify values in a cell array of configurations for each resource.	CSI-RS subframe configuration.

If `cec.Reference` is set to 'CSIRS', the cell-wide settings structure, `enb`, can contain the additional fields `CSIRRefP`, `CSIRSConfig`, and `CSIRSPeriod`.

CSI-RS-based channel estimation, activated when `cec.Reference` is set to 'CSIRS', is strictly only valid within the standard for the 'Port7-14' transmission scheme. The optional `CSIRSPeriod` parameter controls the downlink subframes in which CSI-RS is present. It is either always 'On' or 'Off', or defined by the scalar subframe configuration index, *Icsi-rs* (0...154), or the explicit subframe periodicity and offset pair, [*Tcsi-rs Dcsi-rs*]. For more information, see TS 36.211, Section 6.10.5.3 [3].

rxgrid — Resource element array

3-D numeric matrix

Resource element array, specified as a 3-D numeric matrix of size *M*-by-*N*-by-*NRxAnts*. The second dimension of `rxgrid` can contain any whole number of subframes worth of OFDM symbols. For a normal cyclic prefix, each subframe contains 14 OFDM symbols; therefore, *N* is a multiple of 14.

Note: To adhere to the estimation method defined in TS 36.104 [1] and TS 36.141 [2], `rxgrid` must contain 10 subframes.

Data Types: double

Complex Number Support: Yes

cec – Channel estimator configuration structure

Channel estimator configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description														
PilotAverage	Required	'UserDefined' (default) 'TestEVM' See footnote 1	Type of pilot averaging														
FreqWindow	Required	Nonnegative scalar integer	Size of window in resource elements used to average over frequency during channel estimation														
TimeWindow	Required	Nonnegative scalar integer	Size of window in resource elements used to average over time during channel estimation														
InterpType	Required	'nearest', 'linear', 'natural', 'cubic', 'v4', 'None' See footnote 2	Type of 2-D interpolation used during interpolation. For details, see <code>griddata</code> . Supported choices are shown in the following table. <table border="1" data-bbox="802 1085 1337 1492"> <thead> <tr> <th>String</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>'nearest'</td> <td>Nearest neighbor interpolation</td> </tr> <tr> <td>'linear'</td> <td>Linear interpolation</td> </tr> <tr> <td>'natural'</td> <td>Natural neighbor interpolation</td> </tr> <tr> <td>'cubic'</td> <td>Cubic interpolation</td> </tr> <tr> <td>'v4'</td> <td>MATLAB 4 <code>griddata</code> method</td> </tr> <tr> <td>'None'</td> <td>Disables interpolation</td> </tr> </tbody> </table>	String	Description	'nearest'	Nearest neighbor interpolation	'linear'	Linear interpolation	'natural'	Natural neighbor interpolation	'cubic'	Cubic interpolation	'v4'	MATLAB 4 <code>griddata</code> method	'None'	Disables interpolation
String	Description																
'nearest'	Nearest neighbor interpolation																
'linear'	Linear interpolation																
'natural'	Natural neighbor interpolation																
'cubic'	Cubic interpolation																
'v4'	MATLAB 4 <code>griddata</code> method																
'None'	Disables interpolation																

The following parameters are only required if `InterpType` is not set to 'None'.

Parameter Field	Required or Optional	Values	Description
InterpWindow	Required	'Causal', 'Non-causal', 'Centred', 'Centered'	Interpolation window type used during channel estimation. Options 'Centred' and 'Centered' are equivalent.
InterpWinSiz	Required	Positive scalar number. If InterpWindow is set to 'Causal' or 'Non-causal', all numbers ≥ 1 . If InterpWindow is set to 'Centred' or 'Centered', only odd integers ≥ 1 .	Window size across which to interpolate. The interpolation window size is specified in number of subframes.
The following parameters are dependent upon the condition that <code>chs.TxScheme</code> is set to 'Port5', 'Port7-8', 'Port8', or 'Port7-14'.			
Reference	Optional	'DMRS' (default), 'CSIRS'	Specifies point of reference (signals to internally generate) for channel estimation

Parameter Field	Required or Optional	Values	Description
1			The 'UserDefined' pilot averaging uses a rectangular kernel of size <code>cec.FreqWindow-by-cec.TimeWindow</code> and performs a 2-D filtering operation upon the pilots. Pilots near the edge of the resource grid are averaged less as they have no neighbors outside of the grid. For <code>cec.FreqWindow = 12×X</code> (i.e. any multiple of 12) and <code>cec.TimeWindow = 1</code> the estimator enters a special case where an averaging window of $(12×X)$ -in-frequency is used to average the pilot estimates; the averaging is always applied across $(12×X)$ subcarriers, even at the upper and lower band edges; therefore the first $(6×X)$ symbols at the upper and lower band edge have the same channel estimate. This operation ensures that averaging is always done on 12 (or a multiple of 12) symbols. This provides the appropriate despreading operation required for the case multi-antenna transmission where the DRS signals associated with each antenna occupy the same time/frequency locations but use different orthogonal cover codes to allow them to be differentiated at the receiver. The 'TestEVM' pilot averaging ignores other structure fields in <code>cec</code> , and follows the method described in TS 36.104/141, Annex E/F for the purposes of transmitter EVM testing.
2			For <code>cec.InterpType = 'None'</code> , no interpolation is performed between pilot symbols and no virtual pilots are created. <code>hest</code> will contain channel estimates in the locations of transmitted reference symbols for each received antenna and all other elements of <code>hest</code> are zero. The averaging of pilot symbols estimates described by <code>cec.TimeWindow</code> and <code>cec.FreqWindow</code> are still performed.

chs — PDSCH-specific channel transmission configuration structure

PDSCH-specific channel transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
TxScheme	Required	Default <code>TxScheme</code> is RMC-dependent. Valid values include: 'SpatialMux',	Transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> 'SpatialMux' — Closed-loop spatial multiplexing. 'Port0' — Single-antenna port, port 0. 'TxDiversity' — Transmit diversity scheme.

Parameter Field	Required or Optional	Values	Description
		'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	<ul style="list-style-type: none"> 'CDD' — Large delay CDD scheme. 'MultiUser' — Multiuser MIMO scheme. 'Port5' — Single-antenna port, port 5. 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). 'Port8' — Single-antenna port, port 8. 'Port7-14' — Up to 8-layer transmission, ports 7–14.
PRBSet	Required	1- or 2-column integer matrix	<p>Zero-based physical resource block (PRB) indices corresponding to the slot wise resource allocations for this PDSCH. PRBSet can be assigned as:</p> <ul style="list-style-type: none"> a column vector, the resource allocation is the same in both slots of the subframe, a two-column matrix, this parameter specifies different PRBs for each slot in a subframe, a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>
RNTI	Required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)
The following parameters are dependent upon the condition that <code>chs.TxScheme</code> is set to 'Port5', 'Port7-8', 'Port8', or 'Port7-14'.			
NLayers	Required	1,2,3,4	Number of transmission layers

When `TxScheme` is set to 'Port5', 'Port7-8', 'Port8', or 'Port7-14' and `cec.Reference` is set to 'DMRS', the channel estimation is performed using UE-

specific reference signals and the size of the returned channel estimate is M -by- N -by-NRxAnts-by-NLayers. Alternatively, when `cec.Reference` is set to 'CSIRS', the channel estimation is performed using the CSI reference signals (CSI) and the size of the returned channel estimate is M -by- N -by-NRxAnts-by-CSIRefP. For other transmission schemes, the channel estimation is performed using cell-specific reference signals. The size of the returned channel estimate is M -by- N -by-NRxAnts-by-CellRefP.

When `TxScheme` is set to 'Port7-8' or 'Port7-14' and `cec.PilotAverage` is set to 'UserDefined', if `cec.TimeWindow` is 2 or 4 and `cec.FreqWindow` is 1, the estimator enters a special case where an averaging window of two or four pilots in time is used to average the pilot estimates. The averaging is always applied across two or four pilots, regardless of their separation in OFDM symbols. This operation ensures that averaging is always done on two or four pilots. It also provides the appropriate “despreading” operation required for the case of UE-RS ports / CSI-RS ports which occupy the same time/frequency locations but use different orthogonal covers to allow them to be differentiated at the receiver. For the CSI-RS and any number of configured CSI-RS ports, given by `enb.CSIRefP`, the pilot REs occur in pairs, one pair per subframe, that require averaging with `cec.TimeWindow = 2` and results in a single estimate per subframe. For the UE-RS with from 1 through 4 layers (given by `chs.NLayers`), the pilot REs occur in pairs, repeated in each slot, that require averaging with `cec.TimeWindow = 2` and results in two estimates per subframe, one for each slot. For from 5 through 8 layers, the pairs are distinct between the slots of the subframe and the required averaging is `cec.TimeWindow = 4`, resulting in one estimate per subframe. In these cases, `rxgrid` must contain only one subframe because only a single subframe can be estimated.

Output Arguments

hest — Estimated channel between transmit and receive antennas

4-D numeric array

Estimated channel between transmit and receive antennas, returned as a 4-D numeric array of size M -by- N -by-NRxAnts-by-CellRefP. Optionally, for UE-specific beamforming transmission schemes, the array is of size M -by- N -by-NRxAnts-by-NLayers. Where M is the number of subcarriers, N is the number of OFDM symbols, NRxAnts is the number of receive antennas, CellRefP is the number of cell-specific reference signal antenna ports, and NLayers is the number of transmission layers.

Data Types: double

Complex Number Support: Yes

noisest — Power spectral density estimate on reference signal subcarriers

numeric scalar

Power spectral density estimate on reference signal subcarriers, specified as a real-valued numeric scalar.

Data Types: `double`

More About

Algorithms

The channel estimation algorithm functions as described in the following steps:

- 1 Extract the reference signals, or pilot symbols, for a transmit-receive antenna pair from the received grid. Use the reference signals to calculate the least-squares estimates of the channel response at the pilot symbol positions within a received grid.
- 2 Average the least-squares estimates to reduce any unwanted noise from the pilot symbols.
- 3 Using the cleaned pilot symbol estimates, interpolate to obtain an estimate of the channel for the entire number of subframes passed into the function.

Least-Squares Estimation

The least-squares estimates of the reference signals are obtained by dividing the received pilot symbols by their expected value. The least-squares estimates are affected by any system noise. This noise needs to be removed or reduced to achieve a reasonable estimation of the channel at pilot symbol locations.

Noise Reduction and Interpolation

To minimize the effects of noise on the pilot symbol estimates, the least-squares estimates are averaged using an averaging window. This simple method produces a substantial reduction in the level of noise found on the pilot symbols. The two pilot symbol averaging methods, which also define the interpolation method performed to obtain the channel estimate, are `'TestEVM'` and `'UserDefined'`.

- `'TestEVM'` — follows the method described in TS 36.141, Annex F.3.4 [2]. Time averaging is performed across each pilot symbol carrying subcarrier, resulting in

a column vector containing the time averaged estimates of the channel. Frequency averaging is then performed using a moving window, maximum size 19. Linear interpolation is used to estimate the values between the pilot symbols. The estimated vector is then replicated and used as the entire channel estimate.

Note: For 'TestEVM', there are no user-defined parameters. Estimation behaves as described in TS 36.141 [2].

The algorithm differs from the implementation described in TS 36.141 [2] due to the number of subframes across which time-averaging is performed. In TS 36.141 [2], the method requires 10 subframes to be used. The function `lteDLChannelEstimate` performs time averaging across the total number of subframes contained in `rxgrid`.

- 'UserDefined' — uses an averaging window defined by you. The averaging window size is in resource elements. Any pilot symbols located within the window are used to average the value of the pilot symbol found at the center of the window. The averaged pilot symbol estimates are then used to perform a 2-D interpolation across a window of subframes. The location of pilot symbols within the subframe is not ideally suited to interpolation. To account for this, virtual pilots are created and placed out with the area of the current subframe. This approach allows complete and accurate interpolation to be performed. The subframe window can be specified to be `causal`, `non-causal`, or `centered`, depending on the data available.
- “Channel Estimation”

References

- [1] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.141. “Base Station (BS) conformance testing.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`griddata` | `lteDLPerfectChannelEstimate` | `lteEqualizeMIMO` |
`lteEqualizeMMSE` | `lteEqualizeZF` | `lteOFDMDemodulate`

Introduced in R2013b

lteDLConformanceTestTool

Downlink PDSCH demodulation conformance test tool

Syntax

lteDLConformanceTestTool

Description

lteDLConformanceTestTool launches a graphical user interface (GUI) to carry out the simulation for a given parameterization. The tool performs the PDSCH demodulation performance test as defined in [1]. The various test setups can easily be configured via the user interface. This tool supports both frame structures—frame structure type-1 (FDD) and type-2 (TDD).

The throughput performance graphs updates dynamically during the simulation run and provides help in an early understanding to the behavior of system for given setup. The graphical throughput visualization is divided in two parts: one updates the cumulative throughput per given signal-to-noise (SNR) ratio for the number of simulated frames and the other holds the trend of throughput curve for each SNR distinguished by a distinct color.

The tool is able to utilize user-defined configuration structure. This is done by selecting **User defined** from the reference channel pop-up menu, which prompts you for a configuration structure name. The tool expects this variable to be present in the MATLAB base workspace. You can create the basic configuration structure with the function `lteRMCDL` by choosing the closely matched RMC and modifying to meet your requirements.

The simulation result is stored in a user-defined variable specified via the GUI in the base workspace.

 
Examples

Launch PDSCH Demodulation Conformance Test Tool

Launch the tool to perform the downlink PDSCH demodulation conformance test.

```
lteDLConformanceTestTool;
```

The LTE PDSCH Conformance Testing dialog box appears.

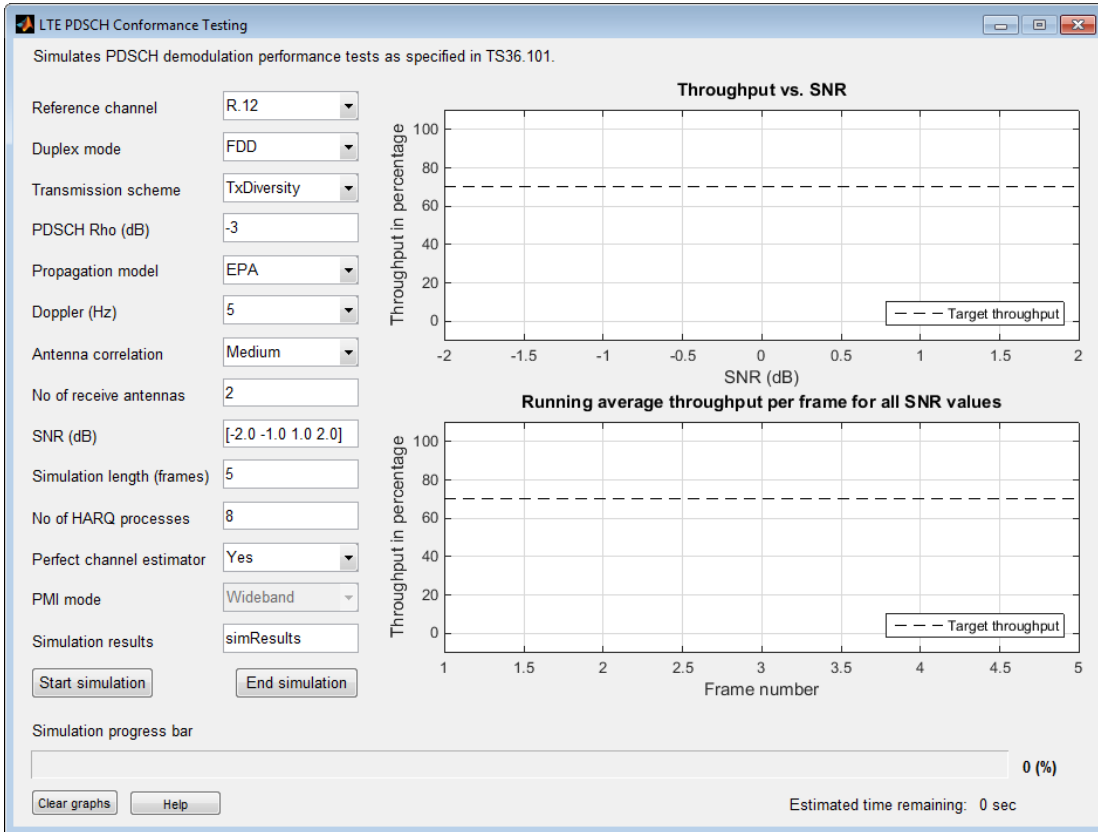

- “Analyze Throughput for PDSCH Demodulation Performance Test”

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteRMCDLTool | lteRMCULTool | lteTestModel

Introduced in R2014a

lteDLDeprcode

Downlink deprecoding onto transmission layers

Syntax

```
out = lteDLDeprcode(in,nu,txscheme,codebook)
out = lteDLDeprcode(enb,chs,in)
```

Description

`out = lteDLDeprcode(in,nu,txscheme,codebook)` performs deprecoding using matrix pseudo-inversion to undo processing described in [1], section 6.3.4. The function returns an M -by- NU matrix `out` containing `nu` layers, with M symbols in each layer. The overall operation of the deprecoder is to transpose what is defined in the specification. The symbols for layers and antennas lie in columns rather than in rows.

`out = lteDLDeprcode(enb,chs,in)` performs deprecoding of the precoded symbol matrix, `in`, according to cell-wide settings `enb` and `chs` (channel transmission configurations).

Examples

Perform Deprecoding on Identity Matrix

Decode a precoded identity matrix having codebook index 1 for three layers and four antennas.

```
in = lteDLPrecode(eye(3),4,'SpatialMux',1);
out = lteDLDeprcode(in,3,'SpatialMux',1)
```

```
out =
```

```
1.0000 + 0.0000i    0.0000 - 0.0000i   -0.0000 + 0.0000i
0.0000 - 0.0000i    1.0000 + 0.0000i    0.0000 + 0.0000i
-0.0000 + 0.0000i    0.0000 - 0.0000i    1.0000 + 0.0000i
```


Input Arguments

in — Precoded input symbols

numeric matrix

Precoded input symbols, specified as numeric matrix. The size of the matrix is N -by- P , where P is the number of transmission antennas and N is the number of symbols per antenna. Generate matrix by extracting a PDSCH using `ltePDSCHIndices` function on a received resource array. You can perform a similar extraction using the index generator for any other downlink channel that utilizes precoding.

nu — Number of layers

positive scalar integer (1, ..., 8)

Number of layers, specified as a positive scalar integer between 1 and 8. The maximum number of layers depends on the string specified for the transmission scheme, `txscheme`.

txscheme — Transmission scheme

string

Transmission scheme, specified as a string.

String	Description
'Port0'	Single-antenna port, port 0
'TxDiversity'	Transmit diversity scheme
'CDD'	Large delay CDD scheme
'SpatialMux'	Closed-loop spatial multiplexing scheme
'MultiUser'	Multiuser MIMO (multiple-input multiple-output) scheme
'Port5'	Single-antenna port, port 5
'Port7-8'	Single-antenna port, port 7 (when <code>NLayers</code> = 1); dual-layer transmission, ports 7 and 8 (when <code>NLayers</code> = 2)
'Port8'	Single-antenna port, Port 8
'Port7-14'	Up to 8 layer transmission, ports 7-14

codebook — Codebook index

scalar integer (0, ..., 15)

Codebook index to use during decoding, specified as a scalar integer between 0 and 15. This input is ignored for the 'Port0', 'TxDiversity', and 'CDD' transmission schemes. You can find codebook matrix corresponding to a particular index in [1], section 6.3.4.

Data Types: double

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings, specified as a structure that can contain the following parameter fields:

Parameter Field	Required or Optional	Values	Description
The following parameters apply when <code>chs.TxScheme</code> is set to 'SpatialMux' or 'MultiUser'.			
NCe11ID	Required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CFI	Required	1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB')

Parameter Field	Required or Optional	Values	Description
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters apply when DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)

Data Types: struct

chs — Channel-specific transmission configuration

structure

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields:

Parameter Field	Required or Optional	Values	Description
TxScheme	Required	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5',	Transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> 'SpatialMux' — Closed-loop spatial multiplexing.

Parameter Field	Required or Optional	Values	Description
		'Port7-8', 'Port8', 'Port7-14'	<ul style="list-style-type: none"> 'Port0' — Single-antenna port, port 0. 'TxDiversity' — Transmit diversity scheme. 'CDD' — Large delay CDD scheme. 'MultiUser' — Multiuser MIMO scheme. 'Port5' — Single-antenna port, port 5. 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). 'Port8' — Single-antenna port, port 8. 'Port7-14' — Up to 8-layer transmission, ports 7–14.
NLayers	Required	1, ..., 8	Number of transmission layers
<p>The following parameters are apply when TxScheme is set to 'SpatialMux' or 'MultiUser'. You must include either CodebookIdx field or both PMISet and PRBSet fields. For more information, see Algorithms.</p>			
CodebookIdx	Required	Nonnegative scalar integer (0, ..., 15)	Codebook index used during precoding

Parameter Field	Required or Optional	Values	Description
PMISet	Required	Integer vector (0, ..., 15)	Precoder matrix indication (PMI) set. It can contain either a single value, corresponding to single PMI mode, or multiple values, corresponding to multiple or subband PMI mode. The number of values depends on CellRefP, transmission layers and TxScheme. For more information about setting PMI parameters, see ltePMIInfo . For more information, see ltePMIInfo .

Parameter Field	Required or Optional	Values	Description
PRBSet	Required	1- or 2-column integer matrix	<p>Zero-based physical resource block (PRB) indices corresponding to the slot wise resource allocations for this PDSCH. PRBSet can be assigned as:</p> <ul style="list-style-type: none"> • a column vector, the resource allocation is the same in both slots of the subframe, • a two-column matrix, this parameter specifies different PRBs for each slot in a subframe, • a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>

The fields PMISet and PRBSet are used to determine the frequency-domain position that each precoded symbol in out occupies. This step is performed to apply the correct subband precoder when multiple PMI mode is used. Alternatively, you can provide the CodebookIdx parameter field. CodebookIdx is a scalar specifying the codebook index

to use across the entire bandwidth. Therefore, the `CodebookIdx` field does not support subband precoding. The relationship between PMI values and codebook index is given in [2], Section 7.2.4.

Output Arguments

out — Deprecoded downlink output

numeric matrix

Deprecoded downlink output, returned as M -by- NU numeric matrix, containing NU layers, with M symbols in each layer.

More About

Algorithms

For transmission schemes 'CDD', 'SpatialMux', and 'MultiUser', and degenerately 'Port0', precoding involves multiplying a $P \times v$ precoding matrix, F , by a $v \times M$ matrix, representing M symbols on each of v transmission layers. This multiplication yields a $P \times M$ matrix, representing M precoded symbols on each of P antenna ports. Depending on the transmission scheme, the precoding matrix can be composed of multiple matrices multiplied together. But the size of the product, F , is always $P \times v$.

For the 'TxDiversity' transmission scheme, a $P^2 \times 2v$ precoding matrix, F , is multiplied by a $2v \times M$ matrix, formed by splitting the real and imaginary components of a $v \times M$ matrix of symbols on layers. This multiplication yields a $P^2 \times M$ matrix of precoded symbols, which is then reshaped into a $P \times PM$ matrix for transmission. Since v is P for the 'TxDiversity' transmission scheme, F is of size $P^2 \times 2P$, rather than $P^2 \times 2v$.

When v is P in 'CDD', 'SpatialMux', and 'MultiUser' transmission schemes, and when P and v are 2 in the 'TxDiversity' transmission scheme, the precoding matrix, F , is square. Its size is $2P \times 2P$ for the transmit diversity scheme and $P \times P$ otherwise. In this case, the deprecoder takes the matrix inversion of the precoding matrix to yield the deprecoding matrix F^{-1} . The matrix inversion is computed using LU decomposition with partial pivoting (row exchange):

- 1 Perform LU decomposition $P_x F = LU$.
- 2 Solve $LY = I$ using forward substitution.
- 3 Solve $UX = Y$ using back substitution.
- 4 $F^{-1} = XP_x$.

The degenerate case of the 'Port0' transmission scheme falls into this category, with $P = v = 1$.

For the 'CDD', 'SpatialMux', and 'MultiUser' transmission schemes, the deprecoding is then performed by multiplying F^{-1} by the transpose of the input **symbols** (**symbols** is size $M \times P$, so its transpose is size $P \times M$). This multiplication recovers the $v \times M$ (equals $P \times M$) matrix of transmission layers. For the 'TxDiversity' transmission scheme, the deprecoding is performed, multiplying F^{-1} by the transpose of the input **symbols** (**symbols** is size $PM \times P$, so its transpose is size $P \times PM$), having first been reshaped into a $2P \times M$ matrix. This multiplication yields a $2v \times M$, matrix which is then split into two $v \times M$ matrices. The second matrix is multiplied by j and then the two matrices are added together (thus recombining real and imaginary parts) to recover the $v \times M$ matrix of transmission layers.

For the other cases that is 'CDD', 'SpatialMux', and 'MultiUser' transmission schemes with $v \neq P$ and the 'TxDiversity' transmission scheme with $P = 4$, the precoding matrix F is not square. Instead, the matrix is rectangular with size $P \times v$, except in the case of 'TxDiversity' transmission scheme with $P = 4$, where it is of size $P^2 \times 2P = 16 \times 8$. The number of rows is always greater than the number of columns that is the matrix F is size $m \times n$ with $m > n$.

In this case, the deprecoder takes the matrix pseudo-inversion of the precoding matrix to yield the deprecoding matrix F^+ . The matrix pseudo-inversion is computed as follows.

- 1 Perform LU decomposition $P_x F = LU$.
- 2 Remove the last $m - n$ rows of U to give \bar{U} .
- 3 Remove the last $m - n$ columns of L to give \bar{L} .
- 4 $X = \bar{U}^H (\bar{U}\bar{U}^H)^{-1} (\bar{L}^H \bar{L})^{-1} \bar{L}^H$ (the matrix inversions are carried out as in the previous steps).
- 5 $F^+ = XP_x$

The application of the deprecoding matrix F^+ is the same process as described for deprecoding the square matrix case with F^+ in place of F^{-1} .

This method of pseudo-inversion is based on [3], chapter 3.4, equation (56),.

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] Strang, Gilbert. *Linear Algebra and Its Application*. Academic Press, 1980. 2nd Edition.

See Also

lteDLPrecode | lteLayerDemap

Introduced in R2014a

lteDLFrameOffset

Downlink frame timing estimate

Syntax

```
offset=lteDLFrameOffset(enb,waveform)
[offset,corr]=lteDLFrameOffset(enb,waveform)
[offset,corr]=lteDLFrameOffset(enb,waveform,corrcfg)
[offset,corr]=lteDLFrameOffset(enb,waveform,'TestEVM')
```

Description

`offset=lteDLFrameOffset(enb,waveform)` returns the timing offset, in symbols, between the start of the input `waveform` and the start of the first frame. `offset` is measured using the reference signals defined in the LTE standard.

`lteDLFrameOffset` performs synchronization using the PSS and SSS for the time-domain waveform, given cell-wide settings structure, `enb`. It does not perform PSS/SSS cell identity search. Use `lteCellSearch` to perform cell identity search and provide it to `lteDLFrameOffset` as an input parameter in the cell-wide settings, `enb`.

`[offset,corr]=lteDLFrameOffset(enb,waveform)` also returns a complex matrix, `corr`, of the same dimensions as the input `waveform`.

`[offset,corr]=lteDLFrameOffset(enb,waveform,corrcfg)` provides control over which reference signals are used for timing estimation, as specified in the input structure, `corrcfg`.

`[offset,corr]=lteDLFrameOffset(enb,waveform,'TestEVM')`, provides the string `'TestEVM'` to stipulate alignment of the correlation configuration with TS 36.104, Annex E [1].

Examples

Synchronize and Demodulate Test Model Output

Synchronization and demodulation of Test Model output which has been delayed by five samples.

Initialize cell-wide parameters structure. Generate waveform for test model 1.1 with 5MHz bandwidth. A five sample delay is achieved by inserting five zeros at beginning of waveform. Compute and display the offset. Perform demodulation of the waveform accounting for the offset delay by adjusting waveform start index.

```
enb = lteTestModel('1.1','5MHz');
tx = [0; 0; 0; 0; 0; 0; lteTestModelTool(enb)];

offset = lteDLFrameOffset(enb,tx)
rxGrid = lteOFDMDemodulate(enb,tx(1+offset:end));

offset =

    5
```

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a structure. **enb** can contain these fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
		{'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
The following parameters are only required for <code>CellRS = 'On'</code> or <code>'OmitEdgeRBs'</code> . See <code>corrcfg</code> .			
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
The following parameters are only required when <code>DuplexMode = 'TDD'</code> and <code>CellRS = 'On'</code> or <code>'OmitEdgeRBs'</code> . See <code>corrcfg</code> .			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)

Data Types: struct

waveform — Time-domain waveform

numeric matrix

Time-domain waveform, specified as a T -by- P numeric matrix, where T is the number of time-domain samples and P is the number of receive antennas. Use `lteOFDMModulate` or one of the channel model functions (`lteFadingChannel`, `lteHSTChannel`, or `lteMovingChannel`) to generate this matrix.

Data Types: double | single

corrcfg — Control reference signals used for timing estimation

scalar structure

Control reference signals used for timing estimation, specified as a structure containing any or all of these fields.

Parameter Field	Required or Optional	Values	Description
PSS	Optional	'On' (default), 'Off'	Primary synchronization signal (PSS) correlation mode
SSS	Optional	'On' (default), 'Off'	Secondary synchronization signal (SSS) correlation mode
CellRS	Optional	'Off' (default), 'OmitEdgeRBs', 'On'	Cell-specific reference signal (CRS) correlation mode

For the `corrcfg` fields, `lteDLFrameOffset` uses the reference signals, (PSS, SSS, or CellRS) as configured by initializing particular reference signal correlation mode(s) to 'On'. For CellRS, using the mode setting, 'OmitEdgeRBs', instead of 'On', removes the uppermost and lowermost resource block of reference signals from the correlation. The 'OmitEdgeRBs' method is specified for EVM testing in TS 36.104, Annex E [1]. Omitting band edge RBs removes potential transmit filtering nonlinear phase response and the resulting influence on group delay response for the overall band.

Data Types: struct

'TestEVM' — Test EVM setting

'TestEVM'

Test EVM setting. As called for in TS 36.104, Annex E [1], specifying the 'TestEVM' input string, sets correlation with:

- PSS to 'On',
- SSS to 'Off', and
- CellRS to 'OmitEdgeRBs'.

Data Types: char

Output Arguments

offset — Timing offset from the start of the input waveform to the start of the first frame
numeric scalar

Timing offset from the start of the input waveform to the start of the first frame, returned as a numeric scalar. It indicates the number of samples from the start of `waveform`, to the position in `waveform` where the first frame begins. `offset` is computed by extracting the timing of the peak of the correlation between `waveform` and the internally generated time-domain reference waveforms containing PSS and SSS signals. The correlation is performed separately for each antenna. `lteDLFrameOffset` uses the antenna with the earliest correlation peak and a correlation peak magnitude at least 50% of the maximum across the antennas to compute `offset`.

Data Types: `double`

corr — Signal used to extract timing offset
complex numeric matrix

Signal used to extract the timing offset, returned as a complex numeric matrix of the same size as `waveform`. Each column of `corr` is the correlation for each column (antenna) of `waveform`.

Data Types: `double`

Complex Number Support: Yes

References

- [1] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteCellSearch` | `lteFadingChannel` | `lteFrequencyCorrect` |
`lteFrequencyOffset` | `lteHSTChannel` | `lteMovingChannel` |
`lteOFDMDemodulate`

Introduced in R2014a

lteDLPerfectChannelEstimate

Downlink perfect channel estimation

Syntax

```
h = lteDLPerfectChannelEstimate(enb,chs)
h = lteDLPerfectChannelEstimate(enb,chs,toffset)
```

Description

`h = lteDLPerfectChannelEstimate(enb,chs)` performs perfect channel estimation for a system configuration given by cell-wide settings, `enb`, and channel configuration structure, `chs`. It produces a perfect channel estimate, `h`. The perfect channel estimates are only produced for the fading channel model created using the `lteFadingChannel` function. The `lteDLPerfectChannelEstimate` function provides a perfect MIMO channel estimate after OFDM modulation. Perfect channel estimation is achieved by setting the channel with the desired configuration and sending a set of known symbols through it for each transmit antenna in turn.

`chs` is the fading channel configuration structure. It must include all the fields required to parameterize `lteFadingChannel`, except for the `SamplingRate` field. `lteDLPerfectChannelEstimate` sets `SamplingRate` internally to the sampling rate of the time domain waveform passed to `lteFadingChannel` for channel filtering.

`h = lteDLPerfectChannelEstimate(enb,chs,toffset)` takes the additional parameter, `toffset`. This parameter allows `h` to be the precise channel resulting when the receiver is precisely synchronized. Use `lteDLFrameOffset` to derive `toffset`.

Examples

Perform Perfect DL Channel Estimation

Perform perfect channel estimation for a given propagation channel configuration in the downlink

Initialize eNodeB & propagation channel configuration structures, then compute channel estimate

```

enb.NDLRB = 6;
enb.CyclicPrefix = 'Normal';
enb.CellRefP = 4;
enb.TotSubframes = 1;

chs.Seed = 1;
chs.DelayProfile = 'EPA';
chs.NRxAnts = 2;
chs.DopplerFreq = 5.0;
chs.MIMOCorrelation = 'Low';
chs.InitPhase = 'Random';
chs.InitTime = 0.0;
chs.ModelType = 'GMEDS';
chs.NTerms = 16;
chs.NormalizeTxAnts = 'On';
chs.NormalizePathGains = 'On';

H = lteDLPerfectChannelEstimate(enb,chs);
sizeH = size(H)

```

```

sizeH =

    72    14     2     4

```

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a structure with the following fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
		also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
TotSubfra	Required	Nonnegative scalar integer	Total number of subframes to generate

Data Types: struct

chs – Channel configuration structure

Channel configuration, specified as a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
NRxAnts	Required	Positive scalar integer	Number of receive antennas
MIMOCorre	Required	'Low', 'Medium', 'UplinkMedium', 'High', 'Custom'	Correlation between UE and eNodeB antennas <ul style="list-style-type: none"> 'Low' correlation is equivalent to no correlation between antennas. 'Medium' correlation level is applicable to tests defined in TS 36.101 [1].

Parameter Field	Required or Optional	Values	Description
			<ul style="list-style-type: none"> 'UplinkMedium' correlation level is applicable to tests defined in TS 36.104 [2].
Normalize	Optional	'On' (default), 'Off'	<p>Transmit antenna number normalization, specified as a string.</p> <ul style="list-style-type: none"> 'On', <code>lteDLPerfectChannelEstimate</code> normalizes the model output by $1/\sqrt{P}$, where P is the number of transmit antennas. Normalization by the number of transmit antennas ensures that the output power per receive antenna is unaffected by the number of transmit antennas. 'Off', normalization is not performed.
DelayProfile	Required	'EPA', 'EVA', 'ETU', 'Custom', 'Off'	<p>Delay profile model.</p> <p>Setting <code>DelayProfile</code> to 'Off' switches off fading completely and implements a static MIMO channel model. In this case, the antenna geometry corresponds to <code>chs.MIMOCorrelation</code>, <code>chs.NRxAnts</code>, and the number of transmit antennas. The temporal part of the model for each link between transmit and receive antennas consists of a single path with zero delay and constant unit gain.</p>
<p>The following fields are required or optional (as indicated) when <code>DelayProfile</code> is set to a value other than 'Off'.</p>			

Parameter Field	Required or Optional	Values	Description
Doppl	Required	Scalar value	Maximum <i>Doppler</i> frequency, in Hertz.
InitT	Required	Numeric scalar	Fading process time offset, in seconds.
NTerm	Optional	16 (default) scalar power of 2	Number of oscillators used in fading path modeling.
Model	Optional	'GMEDS' (default), 'Dent'	<p>Rayleigh fading model type.</p> <ul style="list-style-type: none"> 'GMEDS', the Rayleigh fading is modeled using the Generalized Method of Exact Doppler Spread (GMEDS), as described in [4]. 'Dent', the Rayleigh fading is modeled using the modified Jakes fading model described in [3]. <hr/> <p>Note: <code>ModelType = 'Dent'</code> is not recommended. Use <code>ModelType = 'GMEDS'</code> instead.</p>
Norma	Optional	'On' (default), 'Off'	<p>Model output normalization.</p> <ul style="list-style-type: none"> 'On', the model output is normalized such that the average power is unity. 'Off', the average output power is the sum of the powers of the taps of the delay profile.

Parameter Field	Required or Optional	Values	Description
InitPhase	Optional	'Random' (default), scalar value (in Radians), or <i>N</i> -by- <i>L</i> -by- <i>P</i> -by-NRxAnts array	<p>Phase initialization for the sinusoidal components of the model, may be set as follows:</p> <ul style="list-style-type: none"> the string 'Random', the phases are randomly initialized according to Seed. a scalar value, assumed to be in radians, is used to initialize the phases of all components. an <i>N</i>-by-<i>L</i>-by-<i>P</i>-by-NRxAnts array which is used to explicitly initialize the phase in radians of each component. In this case, <i>N</i> is the number of phase initialization values per path, <i>L</i> is the number of paths, <i>P</i> is the number of transmit antennas, and NRxAnts is the number of receive antennas. <hr/> <p>Note:</p> <ul style="list-style-type: none"> When ModelType is set to 'GMEDS', $N = 2 \times N_{Terms}$. When ModelType is set to 'Dent', $N = N_{Terms}$.
<p>The following field is required when DelayProfile is set to a value other than 'Off' and InitPhase is set to 'Random'.</p>			

Parameter Field	Required or Optional	Values	Description
Seed	Required	Scalar value	Random number generator seed. To use a random seed, set Seed to zero. Note: MathWorks® recommends using Seed values in the range $0 \dots 2^{31} - 1 - (K(K - 1)/2)$, where $K = P \times \text{model.NRxAnts}$, the product of the number of transmit and receive antennas. Seed values outside of this range are not guaranteed to give distinct results.
The following fields are required when DelayProfile is set to 'Custom'.			
AverageGain	Required	Vector	Average gains of the discrete paths, expressed in dB.
PathDelay	Required	Vector	Delays of the discrete paths, expressed in seconds. This vector must have the same size as AveragePathGain .
The following fields are required when MIMOCorrelation is set to 'Custom'.			
TxCORR	Required	Matrix	Correlation between each of the transmit antennas, specified as a P -by- P complex matrix.
RxCORR	Required	Matrix	Correlation between each of the receive antennas, specified as a complex matrix of size NRxAnts -by- NRxAnts .

Data Types: struct

toffset – Timing offset

nonnegative numeric scalar

Timing offset from the start of the output of the channel to the OFDM demodulation starting point, specified as a nonnegative numeric scalar.

Data Types: `double`

Output Arguments

h — Perfect channel estimate

numeric matrix

Perfect channel estimate, returned as a numeric matrix of size M -by- N -by-`NRxAnts`-by-`CellRefP`. Where M is the number of subcarriers, N is the number of OFDM symbols, `NRxAnts` is the number of receive antennas, and `CellRefP` is the number of cell-specific reference signal antenna ports.

Data Types: `double`

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] Dent, P., G. E. Bottomley, and T. Croft. “Jakes Fading Model Revisited.” *Electronics Letters*. Vol. 29, 1993, Number 13, pp. 1162–1163.
- [4] Pätzold, Matthias, Cheng-Xiang Wang, and Bjørn Olav Hogstad. “Two New Sum-of-Sinusoids-Based Methods for the Efficient Generation of Multiple Uncorrelated Rayleigh Fading Waveforms.” *IEEE Transactions on Wireless Communications*. Vol. 8, 2009, Number 6, pp. 3122–3131.

See Also

`lteDLChannelEstimate` | `lteEqualizeMMSE` | `lteEqualizeZF` | `lteFadingChannel` | `lteOFDMDemodulate`

Introduced in R2013b

lteDLPrecode

Downlink precoding of transmission layers

Syntax

```
out = lteDLPrecode(in,p,txscheme,codebook)
out = lteDLPrecode(enb,chs,in)
```

Description

`out = lteDLPrecode(in,p,txscheme,codebook)` performs precoding according to [1], section 6.3.4. This function returns a M -by- P matrix, where P is the number of transmission antennas and M is the number of symbols per antenna. The matrix returned is identical to the matrix returned by `ltePDSCH` for the same set of parameters. The overall operation of the precoder is the transpose of that defined in the specification. The symbols for layers and antennas lie in columns rather than rows.

This function performs precoding of the matrix of layers, `in`, onto P antennas, using the transmission scheme specified by string `txscheme`.

`in` is an N -by- NU matrix, consisting of the N modulation symbols for transmission on NU layers. This matrix is generated using `lteLayerMap` function.

`codebook` is a scalar integer specifying the codebook index to be used during precoding. This input argument is ignored for the 'Port0', 'TxDiversity', and 'CDD' transmission schemes. You can find codebook matrix corresponding to a particular index can be found in [1], section 6.3.4. Since `codebook` is a scalar, this syntax does not support subband precoding or multiple PMI mode.

`out = lteDLPrecode(enb,chs,in)` performs precoding of the matrix of layers, `in`, according to cell-wide settings `enb` and channel transmission configurations `chs`.

Examples

Perform Downlink Precoding on Identity Matrix

Perform downlink precoding using an identity matrix as input.

By precoding an identity matrix, you can gain access to the precoding matrices. Obtain the precoding matrix having codebook index 1 for three layers and four antennas.

```
out = lteDLPrecode(eye(3),4,'SpatialMux',1).'
```

```
out =
```

```
    0.2887 + 0.0000i    0.0000 - 0.2887i   -0.2887 + 0.0000i
    0.0000 + 0.2887i    0.2887 + 0.0000i    0.0000 + 0.2887i
   -0.2887 + 0.0000i    0.0000 - 0.2887i    0.2887 + 0.0000i
    0.0000 - 0.2887i    0.2887 + 0.0000i    0.0000 - 0.2887i
```

Input Arguments

in — Input layers

numeric matrix

Input layers, specified as a N -by- NU numeric matrix, consisting of the N modulation symbols for transmission on NU layers. Generate this matrix using `lteLayerMap`.

Data Types: double

Complex Number Support: Yes

p — Number of antennas

positive numeric scalar

Number of antennas, specified as a positive numeric scalar.

Data Types: double

txscheme — Transmission scheme

'Port0' | 'TxDiversity' | 'CDD' | 'SpatialMux' | 'MultiUser' | 'Port5' | 'Port7-8' | 'Port8' | 'Port7-14'

Transmission scheme, specified as a string.

String	Description
'Port0'	Single-antenna port, port 0
'TxDiversity'	Transmit diversity scheme

String	Description
'CDD'	Large delay CDD scheme
'SpatialMux'	Closed-loop spatial multiplexing scheme
'MultiUser'	Multiuser MIMO scheme
'Port5'	Single-antenna port, port 5
'Port7-8'	Single-antenna port, port 7 (when NLayers = 1); Dual layer transmission, ports 7 and 8 (when NLayers = 2)
'Port8'	Single-antenna port, port 8
'Port7-14'	Up to 8 layer transmission, ports 7-14

Data Types: char

codebook — Codebook matrix

nonnegative scalar integer (0, ..., 15)

Codebook matrix to use during precoding, specified as a nonnegative scalar integer between 0 and 15. This input is ignored for the 'Port0', 'TxDiversity', and 'CDD' transmission schemes. You can find the codebook matrix corresponding to a particular index can be found in the [1], section 6.3.4. Since codebook is a scalar, the syntax that includes this parameter does not support subband precoding or multiple PMI mode.

Data Types: double

enb — eNodeB cell-wide settings

structure

eNodeB cell wide settings, specified as a scalar structure. The structure contains the following parameter fields:

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
		the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	
NCellID	Required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
CFI	Required	1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB')
NSubframe	Required	Nonnegative scalar integer	Subframe number
The following parameters apply when DuplexMode is set to TDD.			
TDDConf	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)

chs — Channel-specific transmission configuration

structure | structure array

Channel specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
TxScheme	Optional	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	Transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> • 'SpatialMux' — Closed-loop spatial multiplexing. • 'Port0' — Single-antenna port, port 0. • 'TxDiversity' — Transmit diversity scheme. • 'CDD' — Large delay CDD scheme. • 'MultiUser' — Multiuser MIMO scheme. • 'Port5' — Single-antenna port, port 5. • 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). • 'Port8' — Single-antenna port, port 8. • 'Port7-14' — Up to 8-layer transmission, ports 7–14.
The following parameters are dependant upon the condition that TXscheme is set to 'SpatialMux' or 'MultiUser'. You must include either Codebook filed or both PMISet and PRBSet fields.			
Codebookid	Optional	Nonnegative scalar integer (0, ..., 15)	Codebook index used during precoding
PMISet	Optional	Integer vector (0, ..., 15)	Precoder matrix indication (PMI) set. It can contain either a single value, corresponding to single PMI mode,

Parameter Field	Required or Optional	Values	Description
			or multiple values, corresponding to multiple or subband PMI mode. The number of values depends on CellRefP, transmission layers and TxScheme. For more information about setting PMI parameters, see <code>ltePMIInfo</code> .
PRBSet	Optional	1- or 2-column integer matrix	<p>Zero-based physical resource block (PRB) indices corresponding to the slot wise resource allocations for this PDSCH. PRBSet can be assigned as:</p> <ul style="list-style-type: none"> • a column vector, the resource allocation is the same in both slots of the subframe, • a two-column matrix, this parameter specifies different PRBs for each slot in a subframe, • a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>

The fields **PMISet** and **PRBSet** determine the frequency-domain position that each precoded symbol in **out** occupies in order to apply the correct subband precoder when multiple PMI mode is being used. Alternatively, you can provide **CodebookIdx** field. **CodebookIdx** is a scalar specifying the codebook index to use across the entire bandwidth. Therefore, the **CodebookIdx** field does not support subband precoding. The relationship between PMI values and codebook indices is given by [2], Section 7.2.4.

Output Arguments

out — Precoded downlink output

numeric matrix

Precoded downlink output, returned as an M -by- P numeric matrix, where P is the number of transmission antennas and M is the number of symbols per antenna.

Data Types: double

More About

Algorithms

For transmission schemes 'CDD', 'SpatialMux', and 'MultiUser', and degenerately 'Port0', precoding involves multiplying a $P \times v$ precoding matrix, denoted as F , by a $v \times M$ matrix, representing M symbols on each of v transmission layers, to yield a $P \times M$ matrix, consisting of M precoded symbols on each of P antenna ports. Depending on the transmission scheme, the precoding matrix can be composed of multiple matrices multiplied together, but the size of the product, F , is always $P \times v$.

For the 'TxDiversity' transmission scheme, a $P^2 \times 2v$ precoding matrix F is multiplied by a $2v \times M$ matrix, formed by splitting the real and imaginary components of a $v \times M$ matrix of symbols on layers, to yield a $P^2 \times M$ matrix of precoded symbols, which is then reshaped into a $P \times PM$ matrix for transmission. As $v = P$ for the 'TxDiversity' transmission scheme, we can consider F be of size $P^2 \times 2P$ rather than $P^2 \times 2v$.

For the other cases i.e. 'CDD', 'SpatialMux', and 'MultiUser' transmission schemes with $v \neq P$ and the 'TxDiversity' transmission scheme with $P = 4$, the precoding matrix F is not square; it is rectangular with size $P \times v$ except for the 'TxDiversity' transmission scheme with $P = 4$ where it is of size $P^2 \times 2P = 16 \times 8$. The number of rows is always greater than the number of columns i.e. the matrix F is size $m \times n$ with $m > n$.

References

- [1] 3GPP TS 36.211. "Physical Channels and Modulation." *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

[2] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteDLDeprecode | lteLayerMap

Introduced in R2014a

lteDLResourceGrid

Downlink subframe resource array

Syntax

```
grid = lteDLResourceGrid(enb)
grid = lteDLResourceGrid(enb,p)
```

Description

`grid = lteDLResourceGrid(enb)` returns an empty 3-D array used to represent the resource elements for one subframe across all configured antenna ports, as described in “Data Structures”. It returns the resource array generated from the cell-wide settings structure, `enb`.

The size of `grid` is N -by- M -by-`CellRefP`, where N is the number of subcarriers ($12 \times \text{NDLRB}$), M is the number of OFDM symbols in a subframe (14 for normal cyclic prefix and 12 for extended cyclic prefix), and `CellRefP` is the number of transmit antenna ports.

`grid = lteDLResourceGrid(enb,p)` returns a resource array where the number of antenna planes in the array is specified directly by the parameter `p`. In this syntax, `CellRefP` is not required as a structure field of `enb`.

Examples

Create Empty Resource Array

Create an empty resource array representing the resource elements for 10MHz bandwidth, one subframe, and two antennas.

```
rgrid = lteDLResourceGrid(struct('NDLRB',50,'CellRefP',2));
size(rgrid)
```

600 14 2

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure having the following fields.

NDLRB — Number of downlink resource blocks

positive scalar integer

Number of downlink resource blocks, specified as a positive scalar integer.

Data Types: double

CyclicPrefix — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

Data Types: char

CellRefP — Number of cell-specific reference signal antenna ports

1 | 2 | 4

Number of cell-specific reference signal antenna ports, specified as 1, 2, or 4.

Data Types: double

Data Types: struct

p — Number of antenna planes

positive scalar integer

Number of antenna planes, specified as a positive scalar integer.

Data Types: double

Output Arguments

grid — Empty downlink resource grid

3-D numeric array

Empty downlink resource grid, returned as a 3-D numeric array. This array is used to represent the resource elements for one subframe across all configured antenna ports. It has dimensions of:

- N -by- M -by-CellRefP, where N is the number of subcarriers ($12 \times \text{NDLRB}$), M is the number of OFDM symbols in a subframe (14 for normal cyclic prefix and 12 for extended cyclic prefix), and CellRefP is the number of transmit antenna ports. This applies when the function has a single input argument, `enb`.
- N -by- M -by- p , where p is the number of antenna planes. This applies when the function has two input arguments, `enb` and p .

Data Types: `double`

See Also

`lteDLResourceGridSize` | `lteOFDMModulate` | `lteResourceGrid` |
`lteResourceGridSize` | `lteULResourceGrid` | `lteULResourceGridSize`

Introduced in R2014a

lteDLResourceGridSize

Size of downlink subframe resource array

Syntax

```
d = lteDLResourceGridSize(enb)
d = lteDLResourceGridSize(enb,p)
```

Description

`d = lteDLResourceGridSize(enb)` returns a three-element row vector of dimension lengths for the multidimensional array used to represent the resource elements for one subframe across all configured antenna ports, as described in “Data Structures”. It returns a 3-element row vector of dimension lengths for the resource array generated from the cell-wide settings structure, `enb`.

The vector `d` is `[N M CellRefP]`, where `N` is the number of subcarriers ($12 \times \text{NDLRB}$), `M` is the number of OFDM or SC-FDMA symbols in a subframe, 14 for normal cyclic prefix and 12 for extended cyclic prefix, and `CellRefP` is the number of transmit antenna ports.

`d = lteDLResourceGridSize(enb,p)` returns a three-element row vector as above, except the number of antenna planes in the array is specified directly by parameter `p`. In this syntax, `CellRefP` is not required as a structure field of `enb`.

Examples

Determine Downlink Subframe Resource Array Size

Determine the size of a downlink subframe resource array.

Determine the dimensions of a downlink subframe resource array, using cell-wide settings, `enb`. Then, use the returned vector directly to create a resource grid as a multidimensional array.

```
enb = struct('NDLRB',50,'CellRefP',2,'CyclicPrefix','Normal');
```

```
rgrid = zeros(lteDLResourceGridSize(enb));
size(rgrid)
```

```
ans =
```

```
    600    14     2
```

The same result can be obtained by calling the `lteDLResourceGrid` function.

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure having the following fields.

NDRB — Number of downlink resource blocks

positive scalar integer (6,...,110)

Number of downlink resource blocks, specified as a positive scalar integer between 6 and 110. Standard bandwidth values are 6, 15, 25, 50, 75, and 100.

Data Types: double

CellRefP — Number of cell-specific reference signal antenna ports

1 | 2 | 4

Number of cell-specific reference signal antenna ports, specified as 1, 2, or 4.

Data Types: double

CyclicPrefix — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

Data Types: char

Data Types: struct

p — Number of antenna planes

positive scalar integer

Number of antenna planes, specified as a positive scalar integer. This argument directly specifies the number of antenna planes in the array.

Data Types: `double`

Output Arguments

d — Downlink resource grid dimensions

numeric 1-by-3 row vector

Downlink resource grid dimensions, returned as a numeric 1-by-3 row vector. When the function has a single argument, **d** is `[N M CellRefP]`, where **N** is the number of subcarriers ($12 \times \text{NDLRB}$), **M** is the number of OFDM or SC-FDMA symbols in a subframe, and **CellRefP** is the number of transmit antenna ports. When the number of antenna planes, **p**, is specified as the second input argument, then **d** is `[N M p]` and the input field **CellRefP** of **enb** is not required.

Data Types: `double`

See Also

`lteDLResourceGrid` | `lteResourceGridSize` | `lteULResourceGridSize`

Introduced in R2014a

lteDLSCH

Downlink shared channel

Syntax

```
[cwout, chinfo] = lteDLSCH(enb, chs, outlen, trblkIn)
```

Description

[cwout, chinfo] = lteDLSCH(enb, chs, outlen, trblkIn) applies the complete DL-SCH transport channel coding chain to the input data, trblkIn, and returns the codewords in cwout. The encoding process includes type-24A CRC calculation, code block segmentation and type-24B CRC attachment, if any, turbo encoding, rate matching with RV, and code block concatenation. Additional information about the encoding process is returned in the fields of structure chinfo. For the case of spatial multiplexing schemes transmitting two codewords, lteDLSCH processes a single transport block or pairs of blocks, contained in a cell array. The data type for cwout matches the input, trblkIn. Thus, if trblkIn is a cell array containing one or two transport blocks, cwout is a cell array of one or two codewords. If trblkIn is a vector of information bits, cwout is a vector also. Define pairs of modulation schemes and RV indicators in the appropriate parameter fields to encode a pair of transport blocks.

Examples

Generate DL-SCH Codewords

Generate the DL-SCH codeword as defined by TS36.101 RMC R.7 for FDD duplexing mode

Initialize the rmc structure and generate transport block data. Generate the DL-SCH codewords and view the first ten.

```
rmc = lteRMCDL('R.7');
data = randi([0,1],rmc.PDSCH.TrBlkSizes(1),1);
codeWord = lteDLSCH(rmc,rmc.PDSCH,rmc.PDSCH.CodedTrBlkSizes(1),data);
```

```
codeWord(1:10)
```

```
ans =
```

```

1
0
0
1
1
1
0
0
0
0

```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
When DuplexMode is set to 'TDD' include:			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
When chs.TxScheme is set to 'TxDiversity' include:			
CellRefP	Optional	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports

chs — Channel configuration

structure

Channel configuration, specified as a structure. It defines aspects of the PDSCH onto which the codewords are mapped. It also defines the DL-SCH soft buffer size and redundancy versions of the generated codewords.

chs can contain the following fields.

Parameter Field	Required or Optional	Values	Description
Modulation	Required	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
NLayers	Required	1, ..., 8	Total number of transmission layers associated with the transport block or blocks.
TxScheme	Required	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	Transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> 'SpatialMux' — Closed-loop spatial multiplexing. 'Port0' — Single-antenna port, port 0. 'TxDiversity' — Transmit diversity scheme. 'CDD' — Large delay CDD scheme. 'MultiUser' — Multiuser MIMO scheme. 'Port5' — Single-antenna port, port 5. 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). 'Port8' — Single-antenna port, port 8. 'Port7-14' — Up to 8-layer transmission, ports 7–14.
RV	Required	Integer vector (0,1,2,3) ^a	Specifies the redundancy version for one or two codewords used in the initial subframe number, NSubframe . This parameter field is only for informational purposes and is Read-Only.

Parameter Field	Required or Optional	Values	Description
NSoftbits	Optional	Nonnegative scalar integer (default 0)	Total number of soft buffer bits. The default setting of 0 signifies that there is no buffer limit.

- a. A one or two column matrix (for one or two codewords)

outlen — Codeword length

numeric vector of one or two elements

Codeword length, specified as a numeric vector of one or two elements. This vector defines the codeword lengths to which the input transport blocks should be rate matched. It represents the PDSCH capacity for the associated codeword. Therefore, it also represents the lengths of the vectors in `cwout`.

trblkinfo — Transport block information bits to be encoded

numeric vector | cell array of one or two numeric vectors

Transport block information bits to be encoded, specified as a numeric vector or a cell array of numeric vectors. `trblkinfo` is an input parameter containing the transport block information bits to be encoded. If it is a cell array, all rate matching calculations assume that the pair is transmitting on a single PDSCH, distributed across the total number of layers defined in `chs`, as per TS 36.211 [2]. The lowest order information bit of `trblkinfo` maps to the most significant bit of the transport block, as defined in TS 36.321, Section 6.1.1 [3].

Output Arguments

cwout — DL-SCH encoded codewords

numeric column vector | cell array of one or two numeric column vectors

DL-SCH encoded codewords, returned as a numeric column vector or a cell array of one or two numeric column vectors. It reflects the data type and size of the input data, `trblkinfo`.

Data Types: `int8` | `cell`

chinfo — Additional information about encoding process

structure array | optional

Additional information about encoding process, returned as a structure array. It contains parameter fields related to code block segmentation and rate matching. If two transport blocks are encoded, `chinfo` is a structure array of two elements, with one element for each block. The code block segmentation fields in this structure can also be created independently using the `lteDLSCHInfo` function.

`chinfo` contains the following fields.

Parameter Field	Description	Values	Data Type
C	Total number of code blocks	Nonnegative scalar integer	int32
Km	Lower code block size (K^-)	Nonnegative scalar integer	int32
Cm	Number of code blocks of size K_m (C^-)	Nonnegative scalar integer	int32
Kp	Upper code block size (K^+)	Nonnegative scalar integer	int32
Cp	Number of code blocks of size K_p (C^+)	Nonnegative scalar integer	int32
F	Number of filler bits in first block	Nonnegative scalar integer	int32
L	Number of segment cyclic redundancy check (CRC) bits	Nonnegative scalar integer	int32
Bout	Total number of bits in all segments	Nonnegative scalar integer	int32
Qm	Bits per symbol variable used in rate matching calculation	Nonnegative scalar integer	int32
NL	Number of layers used in rate matching calculation	Nonnegative scalar integer	int32
NLayers	Number of transmission layers	Nonnegative scalar integer	int32
NIR	Number of soft bits associated with transport block. Soft buffer size for entire input transport block	Nonnegative scalar integer	int32

Parameter Field	Description	Values	Data Type
RV	Specifies the redundancy version for one or two codewords used in the initial subframe number, <code>NSubframe</code> . This parameter field is only for informational purposes and is Read-Only.	Integer vector (0,1,2,3) ^a	int32

a. A one or two column matrix (for one or two codewords)

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] 3GPP TS 36.321. “Medium Access Control (MAC) Protocol Specification.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLSCHDecode` | `lteDLSCHInfo` | `ltePDSCH`

Introduced in R2014a

lteDLSCHDecode

Downlink shared channel decoding

Syntax

```
[trblkout,blkcrc,stateout] = lteDLSCHDecode(enb,chs,trblklen,cwin,
statein)
```

Description

[trblkout,blkcrc,stateout] = lteDLSCHDecode(enb,chs,trblklen,cwin,statein) returns the information bits, trblkout, decoded from the input soft LLR codeword data, cwin. The DL-SCH decoder includes rate recovery, turbo decoding, block concatenation, and CRC calculations. The function also returns the type-24A transport block CRC decoding result in blkcrc and the HARQ process decoding state in stateout. The initial HARQ process state can be provided as the optional statein parameter. The function is capable of processing both a single codeword or pairs of codewords, contained in a cell array, for the case of spatial multiplexing schemes transmitting two codewords. The type of the return variable, trblkout, is the same as the input, cwin. If cwin is a cell array containing one or two codewords, trblkout is a cell array of one or two transport blocks. If cwin is a vector of soft data, trblkout is a vector also. If you are decoding a pair of codewords, you must provide pairs of modulation schemes and RV indicators in the appropriate parameter fields.

enb is an input parameter structure that may include optional fields defining the duplex mode. Since the duplex mode defaults to 'FDD', if the 'DuplexMode' field is absent, enb can be an empty structure.

chs is an input parameter structure defining aspects of the PDSCH onto which the codewords are mapped and the DL-SCH soft buffer size and redundancy versions of the received codewords.

trblklen is an input vector, one or two elements in length, defining the transport block lengths to which the input code blocks are rate recovered and decoded.

cwin is an input parameter containing the floating point soft LLR data of the codewords to be decoded. It is either a single vector or a cell array containing one or two vectors. If it is a cell array, all rate matching calculations assume that the pair is transmitting on

a single PDSCH, distributed across the total number of layers defined in `chs`, as per TS 36.211 [1].

`statein` is an optional input structure array, empty or one or two elements, which can input the current decoder buffer state for each transport block in an active HARQ process. If `statein` is not an empty array and it contains a non-empty field, `CBSBuffers`, this field should contain a cell array of vectors representing the LLR soft buffer states for the set of code blocks at the input to the turbo decoder, after explicit rate recovery. The updated buffer states after decoding are returned in the `CBSBuffers` field in the output parameter, `stateout`. The `statein` array would normally be generated and recycled from the `stateout` of previous calls to `lteDLSCHDecode` as part of a sequence of HARQ transmissions.

`trblkout` is the output parameter containing the decoded information bits. It is either a single vector or a cell array containing one or two vectors, depending on the class and dimensionality of `cwin`.

`blkcrc` is an output array, one or two elements, containing the result of the type-24A transport block CRC decoding for the transport blocks.

`stateout`, the final output parameter, is a one- or two-element structure array containing the internal state of each transport block decoder. The `stateout` array is normally reapplied via the `statein` variable of subsequent `lteDLSCHDecode` function calls as part of a sequence of HARQ retransmissions.

Examples

Generate and Decode DL-SCH Transmissions

This example generates and decodes 2 transmissions, one with RV set to 0 and one with RV set to 1, as part of a single codeword HARQ process for RMC R.7.

Set subframe number. Get the definition of RMC R.7. Generate transport block data. Apply DL-SCH transport channel coding chain to `trBlkData`. Create a codeword with RV = 0. Turn logical bits into 'LLR' data

```
nsf = 1;  
  
rmc = lteRMCDL('R.7');  
  
trBlkSize = rmc.PDSCH.TrBlkSizes(nsf);  
codedTrBlkSize = rmc.PDSCH.CodedTrBlkSizes(nsf);
```

```

trBlkData = randi([0,1],trBlkSize,1);

rmc.PDSCH.RV = 0;
cw = lteDLSCH(rmc,rmc.PDSCH,codedTrBlkSize,trBlkData);

cw(cw == 0) = -1;

```

Initialize the decoder states for the first HARQ transmission. The returned `decState` contains the decoder buffer state for each transport block for an active HARQ process with RV = 1

```

decState = [];
[rxTrBlk,~,decState] = lteDLSCHDecode(rmc,rmc.PDSCH,trBlkSize,cw,decState);

```

Create a second retransmitted codeword. Turn logical bits into 'LLR' data. Use the previous transmission decoder buffer state, `decState`, as part of the sequence of active HARQ transmissions

```

rmc.PDSCH.RV = 1;
cw = lteDLSCH(rmc,rmc.PDSCH,codedTrBlkSize,trBlkData);

cw(cw == 0) = -1;
rxTrBlk = lteDLSCHDecode(rmc,rmc.PDSCH,trBlkSize,cw,decState);

size(rxTrBlk)
rxTrBlk(1:10)

```

```
ans =
```

```
    28336         1
```

```
ans =
```

```

1
1
0
1
1
0
0
1
1
1

```

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a structure with the following fields.

Parameter Field	Required or Optional	Values	Description
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex Because the duplex mode defaults to 'FDD', if this field is absent, enb can be an empty structure.
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration Only required for 'TDD' duplex mode.

Data Types: struct

chs — Channel configuration

structure

Channel configuration, specified as a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
Modulation	Required	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type associated with each transport block, specified as a string or a cell array of strings if there are 2 blocks.

Parameter Field	Required or Optional	Values	Description
NLayers	Required	1, 2, 3, 4	Total number of transmission layers associated with the transport block or blocks.
RV	Required	0, 1, 2, 3 2-element numeric vector	Redundancy version indicator, specified as a numeric vector of 1 or 2 values. Possible values are 0, 1, 2, or 3.
TxScheme	Required	'Port0', 'TxDiversity', 'CDD', 'SpatialMux', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	PDSCH transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> • 'Port0' — Single-antenna port, port 0 • 'TxDiversity' — Transmit diversity scheme • 'CDD' — Large delay CDD scheme • 'SpatialMux' — Closed-loop spatial multiplexing • 'MultiUser' — Multiuser MIMO scheme • 'Port5' — Single-antenna port, port 5 • 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). • 'Port8' — Single-antenna port, port 8 • 'Port7-14' — Up to eight-layer transmission, ports 7–14

Parameter Field	Required or Optional	Values	Description
NSoftbits	Optional	Nonnegative scalar integer (default 0)	Total number of soft buffer bits. The default setting of 0 signifies that there is no buffer limit. If NSoftbits is absent, no limit is placed on the number of soft bits.
NTurboDec	Optional	5 (default) Positive scalar integer	Number of turbo decoder iteration cycles

Data Types: struct

trblklen — Transport block lengths

one- or two-element numeric vector

Transport block lengths, specified as a one- or two-element numeric vector. It defines the transport block lengths to which the input code blocks should be rate-recovered and decoded.

Data Types: double | single | uint8 | uint16 | uint32 | uint64 | int8 | int16 | int32 | int64

cwin — Soft LLR codeword data

numeric vector | cell array of one or two numeric vectors

Soft LLR data of the codewords to be decoded, specified as either a numeric vector or a cell array containing one or two vectors.

Data Types: double | single | uint8 | uint16 | uint32 | uint64 | int8 | int16 | int32 | int64 | cell

statein — Initial HARQ process state

Optional | structure array

Initial HARQ process state, specified as a structure array. Optional. This structure array, which can be empty or contain one or two elements, can input the current decoder buffer state for each transport block in an active HARQ process.

Data Types: struct

Output Arguments

trblkout – Decoded information bits

numeric vector | cell array of one or two numeric vectors

Decoded information bits, returned as a numeric vector or a cell array of one or two numeric vectors. **trblkout** reflects the data type and size of **cwin**.

Data Types: `int8` | `cell`

blkcrc – Type-24A transport block CRC decoding result

logical vector of one or two elements

Type-24A transport block CRC decoding result, returned as a logical vector of one or two elements.

Data Types: `logical`

stateout – HARQ process decoding state

structure array of one or two elements

HARQ process decoding state, returned as a structure array of one or two elements. It contains the internal state of each transport block in the following fields.

Parameter Field	Required or Optional	Values	Description
CBSBuffer		Cell array of vectors	Cell array of vectors representing the LLR soft buffer states for the set of code blocks associated with a single transport block. The buffers are positioned at the input to the turbo decoder, after explicit rate recovery.
CBSCRC		Logical vector	Array of type-24B code block set CRC decoding results
BLKCRC		Logical scalar	Type-24A transport block CRC decoding error

Data Types: `struct`

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLSCH` | `lteDLSCHInfo` | `ltePDSCHDecode`

Introduced in R2014a

lteDLSCHInfo

DL-SCH segmentation information

Syntax

```
info = lteDLSCHInfo(blklen)
```

Description

`info = lteDLSCHInfo(blklen)` returns a structure, `info`, containing the Downlink Shared Channel (DL-SCH) code block segmentation information for given transport block length, `blklen`.

Examples

Display DL-SCH Segmentation Information

Show the sizing information before turbo coding for an input transport block of length 132. The `info` structure fields shows that there are 4 filler bits and the total size of the one segment after CRC addition is 160.

```
lteDLSCHInfo(132)
```

```
ans =
```

```
    C: 1  
   Km: 0  
   Cm: 0  
   Kp: 160  
   Cp: 1  
    F: 4  
    L: 0  
  Bout: 160
```

Input Arguments

blklen — Transport block length

positive scalar integer

Transport block length, specified as a positive integer.

Data Types: double

Output Arguments

info — DL-SCH code block segmentation information

structure

DL-SCH code block segmentation information, returned as a structure including the following fields.

Parameter Field	Description	Values	Data Type
C	Total number of code blocks	Nonnegative scalar integer	int32
Km	Lower code block size (K^-)	Nonnegative scalar integer	int32
Cm	Number of code blocks of size K_m (C^-)	Nonnegative scalar integer	int32
Kp	Upper code block size (K^+)	Nonnegative scalar integer	int32
Cp	Number of code blocks of size K_p (C^+)	Nonnegative scalar integer	int32
F	Number of filler bits in first block	Nonnegative scalar integer	int32
L	Number of segment cyclic redundancy check (CRC) bits	Nonnegative scalar integer	int32
Bout	Total number of bits in all segments	Nonnegative scalar integer	int32

See Also

lteDLSCH | lteDLSCHDecode

Introduced in R2014a

lteDMRS

UE-specific demodulation reference signals

Syntax

```
sym = lteDMRS(enb,chs)
sym = lteDMRS(enb,chs,opts)
```

Description

`sym = lteDMRS(enb,chs)` returns the downlink UE-specific reference signal (DM-RS) symbols for transmission in a single subframe and supports precoded and non-precoded DM-RS transmitted on DM-RS antenna ports $p=5,7,8, and $7,\dots,(N\text{Layers}+6)$. These DM-RS are for use with Release 8, 9, and 10 non-codebook-based PDSCH transmission schemes. By default, the symbols are returned as a column vector and are always ordered as they should be mapped using `lteDMRSIndices` into a N -by- M -by- P array representing the subframe grid across either the non-precoded PDSCH layers or precoded transmit antennas. Other output representations can also be generated.$

`lteDMRS` returns a column vector of length `NRE` containing the non-precoded or precoded DM-RS symbol sequences concatenated for all layers/ports or transmit antennas for the transmission scheme. Input parameters are the cell-wide settings structure, `enb`, and the PDSCH parameter structure, `chs`.

If the `TxScheme` parameter is not set to one of the schemes related to DM-RS, such as 'SpatialMux', `sym` is empty. If the scheme is single port, `NLayers` is 1 implicitly. If the W precoding matrix field is not present or is empty, as by default, `sym` contains only the concatenated non-precoded DM-RS symbols for the `NLayers` ports. Otherwise, `sym` contains all DM-RS symbol values after they are precoded using the `NLayers`-by-`NTxAnts` beamforming matrix, W , onto `NTxAnts` transmit antennas. They are ordered by the concatenation of DM-RS symbols per layer/port if not precoded or projected layers per transmit antenna is precoded.

`sym = lteDMRS(enb,chs,opts)` allows additional control of the contents and format of the symbols through a cell array, `opts`.

Examples

Map Non-Precoded DM-RS Symbols to Grid

This example maps non-precoded DM-RS symbols onto an 8 layer grid, and clears the REs which should not be used because of the DM-RS of other ports.

Initialize cellwide settings for RMC 'R.1' (10 MHz bandwidth, 1 Rb allocation) and change to Release 10 transmission ('Port7-14'). Generate and map DM-RS clearing the REs that should not be because of the DM-RS on other ports.

```
enb = lteRMCDL('R.1');
enb.PDSCH.TxScheme = 'Port7-14';
enb.PDSCH.NLayers = 8;

subframe = ones(lteResourceGridSize(enb,enb.PDSCH.NLayers));
dmrsInd = lteDMRSIndices(enb,enb.PDSCH,'rs+unused');
dmrs = lteDMRS(enb,enb.PDSCH,'rs+unused');
subframe(dmrsInd) = dmrs;
```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NCellID	required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
NSubframe	required	Nonnegative scalar integer	Subframe number

Parameter Field	Required or Optional	Values	Description
CyclicPrefix	optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that DuplexMode is set to 'TDD'.			
TDDConfig	optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)

chs — PDSCH-specific channel transmission configuration structure

PDSCH-specific channel transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
PRBSet	required	1- or 2-column integer matrix	Zero-based physical resource block (PRB) indices corresponding to the slot wise resource allocations for this PDSCH. PRBSet can be assigned as: <ul style="list-style-type: none"> a column vector, the resource allocation is the same in both slots of the subframe, a two-column matrix, this parameter specifies different PRBs for each slot in a subframe,

Parameter Field	Required or Optional	Values	Description
			<ul style="list-style-type: none"> a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>
TxScheme	optional	'Port5' (default), 'Port7-8', 'Port8', 'Port7-14'	<p>DM-RS-specific transmission scheme, specified as one of the following options.</p> <ul style="list-style-type: none"> 'Port5' — Rel-8 single-antenna port, port 5 (default) 'Port7-8' — Rel-9 single-antenna port, port 7 if NLayers is 1. Rel-9 dual-layer transmission, ports 7 and 8 if NLayers is 2. 'Port8' — Rel-9 single-antenna port, port 8 'Port7-14' — Rel-10 up to 8 layer transmission, ports 7–14 if NLayers is 1,...,8.
NLayers	optional	1 (default), 2, 3, 4, 5, 6, 7, 8	Number of transmission layers
W	optional	Numeric matrix, [] (default)	Precoding matrix for the wideband UE-specific beamforming of the DM-RS, of size NLayers-by-NTxAnts. An empty matrix, [], signifies no precoding.
The following parameter is dependent upon the condition that TxScheme is set to 'Port7-8', 'Port8', or 'Port7-14'.			
NSCID	optional	0 (default), 1	Scrambling identity (ID)

Parameter Field	Required or Optional	Values	Description
The following parameter is dependent upon the condition that TxScheme is set to 'Port5'.			
RNTI	required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)

opts — Symbol generation option strings

string | cell array of strings

Symbol generation option strings, specified as a string or a cell array of strings that can contain the following values.

Option	Values	Description
Symbol style	'ind' (default), 'mat'	Style for returning DM-RS symbols, specified as one of the following options. <ul style="list-style-type: none"> 'ind' — returns the DM-RS symbols as a column vector (default) 'mat' — returns the DM-RS symbols as a matrix. If not precoded, each column contains symbols for an individual port or layer. <p>To form a matrix, a column may contain duplicate entries.</p>
Symbol format	'rsonly' (default), 'rs+unused'	Format for returning DM-RS symbols, specified as one of the following options. <ul style="list-style-type: none"> 'rsonly' — returns only active DM-RS symbols (default) 'rs+unused' — returns include zeros for the RE locations that should be unused because of DM-RS transmission on another port or layer. This format is equivalent to precoding with W set to eye (NLayers).

Data Types: char | cell

Output Arguments

sym — DM-RS symbol sequences

numeric column vector | numeric matrix

DM-RS symbol sequences, returned as a numeric column vector or a numeric matrix. Its length is the number of resource elements (NRE). It contains the non-precoded or precoded DM-RS symbol sequences concatenated for all layers or ports or transmit antennas for the transmission scheme.

Data Types: `double`

Complex Number Support: Yes

See Also

`lteEPDCCHDMRS` | `ltePRBS` | `lteCellIRS` | `lteCSIRS` | `lteDMRSIndices` | `ltePDSCH` | `ltePRS`

Introduced in R2014a

lteDMRSIndices

UE-specific DM-RS resource element indices

Syntax

```
ind = lteDMRSIndices(enb,chs)
ind = lteDMRSIndices(enb,chs,opts)
```

Description

`ind = lteDMRSIndices(enb,chs)` returns the indices of the downlink UE-specific reference signal (DM-RS) resource elements (RE) in a subframe and supports precoded and non-precoded DM-RS transmitted on antenna ports, $p=5,7,8$, and $7,\dots,(N\text{Layers}+6)$. By default, `ind` is a column vector of indices in 1-based linear indexing form that can directly index the DM-RS elements in a N -by- M -by- P array, representing the subframe grid across either the non-precoded PDSCH layers or precoded transmit antennas. Alternative index representations can also be generated. The order of the indices is the same as how the complex DM-RS symbols should be mapped. The DM-RS symbols are generated by `lteDMRS` and do not include any elements allocated to PBCH, PSS, and SSS. If the subframe contains no DM-RS, an empty vector is returned.

The output, `ind`, is a column vector of 1-based linear indices for the precoded or non-precoded DM-RS resource elements in the subframe, given the cell-wide settings parameter structure, `enb` and the PDSCH parameter structure, `chs`. Its length is the number of resource elements (NRE).

If the `TxScheme` parameter is not set to one of the DM-RS related schemes, such as 'Port0', `ind` is empty. If the `NTxAnts` parameter field is not present or is set to 0, as by default, `ind` contains only the indices of the actual DM-RS REs in the non-precoded N -by- M -by- $N\text{Layers}$ resource grid. Otherwise, `ind` contains the locations of all precoded DM-RS symbol values after they are precoded into a N -by- M -by- $N\text{TxAnts}$ transmit antenna grid. Since precoding projects the DM-RS in each PDSCH layer onto all `NTxAnts` transmit antennas, `ind` contains the concatenation of all DM-RS locations across all layers, which are then duplicated in all `NTxAnts` planes of the 3-D grid.

`ind = lteDMRSIndices(enb,chs,opts)` allows additional control of the contents and format of the indices through a cell array of option strings, `opts`.

Examples

Generate Zero-Based DM-RS Indices

This example generates 0-based Resource Element indices in subscript form for RMC R.28. The resultant matrix has three columns, with each row representing [subcarrier, symbol, antenna port].

Initialize cell-wide parameters to RMC R.28 using the `lteRMCDL` function

```
enb = lteRMCDL('R.28');
```

Generate zero-based RE indices in subscript form

```
ind = lteDMRSIndices(enb,enb.PDSCH,{'0based','sub'});
```

View first four rows of index matrix

```
ind(1:4,:)
```

```
ans =
```

```

     0     3     0
     4     3     0
     8     3     0
     2     6     0

```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
		standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following parameter is only required when TxScheme is set to 'Port5'.			
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity

chs — PDSCH-specific channel transmission configuration structure

PDSCH-specific channel transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
PRBSet	Required	1- or 2-column integer matrix	Zero-based physical resource block (PRB) indices corresponding to the

Parameter Field	Required or Optional	Values	Description
			<p>slot wise resource allocations for this PDSCH. PRBSet can be assigned as:</p> <ul style="list-style-type: none"> • a column vector, the resource allocation is the same in both slots of the subframe, • a two-column matrix, this parameter specifies different PRBs for each slot in a subframe, • a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>
TxScheme	Optional	'Port5' (default), 'Port7-8', 'Port8', 'Port7-14'	<p>DM-RS-specific transmission scheme, specified as one of the following options.</p> <ul style="list-style-type: none"> • 'Port5' — Rel-8 single-antenna port, port 5 (default) • 'Port7-8' — Rel-9 single-antenna port, port 7 if NLayers is 1. Rel-9 dual-layer transmission, ports 7 and 8 if NLayers is 2. • 'Port8' — Rel-9 single-antenna port, port 8 • 'Port7-14' — Rel-10 up to 8 layer transmission, ports 7–14 if NLayers is 1,...,8.

Parameter Field	Required or Optional	Values	Description
NLayers	Optional	1 (default), 2, 3, 4, 5, 6, 7, 8	Number of transmission layers
NTxAnts	Optional	0 (default), 1, 2, ...	Number of transmission antenna ports. This argument is only present for UE-specific demodulation reference symbols.

opts — Index generation options

string | cell array of strings

Index generation options, specified as a string or a cell array of strings that can contain the following values.

Option	Values	Description
Indexing style	'ind' (default), 'mat', 'sub'	Style for the returned indices, specified as one of the following options. <ul style="list-style-type: none"> 'ind' — returns the indices as a column vector (default) 'mat' — returns the indices as a matrix. If not precoded, each column contains indices for an individual layer/port. If precoded, each column contains symbols for a transmit antenna. To form a matrix, a column can contain duplicate entries. 'sub' — returns the indices in [subcarrier, symbol, antenna] subscript row style. The number of rows in the output, <code>ind</code>, is the number of resource elements (NRE). Thus, <code>ind</code> is an NRE-by-3 matrix.
Index base	'1based' (default), '0based'	Base value of the returned indices. Specify '1based' to generate indices where the first value is one. Specify '0based' to generate indices where the first value is zero.
Indexing format	'rsonly' (default), 'rs+unused'	Format for the returned indices, specified as one of the following options. <ul style="list-style-type: none"> 'rsonly' — returns only active DM-RS symbols (default) 'rs+unused' — also includes zeros for the resource element (RE) locations that should be unused because of DM-RS transmission on another port or layer. This format is equivalent to precoding with <code>NTxAnts</code> set to <code>NLayers</code>.

Data Types: char | cell

Output Arguments

ind — DM-RS resource element indices

numeric column vector | numeric 3-column matrix

DM-RS resource element indices, returned as a numeric column vector or a numeric 3-column matrix. By default, it is a column vector whose length is the number of resource elements (NRE), and the indices are in 1-based linear indexing form. It can directly index the DM-RS elements in a N -by- M -by- P array, representing the subframe grid across either the non-precoded PDSCH layers or precoded transmit antennas.

Data Types: uint32

See Also

lteCellRSIndices | lteCSIRSIndices | lteDMRS | ltePRSIndices | lteSRSIndices

Introduced in R2014a

lteDuplexingInfo

Duplexing information

Syntax

```
info = lteDuplexingInfo(enb)
```

Description

`info = lteDuplexingInfo(enb)` returns a structure, `info`, providing information on the duplexing arrangement.

Examples

Get Duplexing Information

Get duplexing information to determine if a subframe is used for downlink transmission.

Determine if a subframe is used for downlink transmission by observing whether it has a nonzero number of symbols available for transmission.

```
enb = lteRMCDL('R.0');  
duplexingInfo = lteDuplexingInfo(enb);  
duplexingInfo.NSymbolsDL
```

14

The number of symbols used for transmission in the downlink, `info.NSymbolsDL` is nonzero for all subframes in FDD and for downlink or special subframes in TDD. Thus, this subframe is used for downlink transmission.

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure with these fields. The `TDDConfig`, `SSC`, and `NSubframe` parameter fields are only required if `DuplexMode` is set to 'TDD'.

CyclicPrefix — Cyclic prefix length in downlink

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length in downlink, specified as a string. Optional.

Data Types: char

CyclicPrefixUL — Cyclic prefix length in uplink

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length in uplink, specified as a string. Optional.

Data Types: char

DuplexMode — Duplexing mode

'FDD' (default) | Optional | 'TDD'

Duplexing mode, specified as a string. Optional.

Data Types: double

TDDConfig — Uplink or downlink configuration

0 (default) | Optional | nonnegative scalar integer (0..6)

Uplink or downlink configuration, specified as a nonnegative scalar integer between 0 and 6. Optional. Only required if `DuplexMode` is set to 'TDD'.

Data Types: double

SSC — Special subframe configuration

0 (default) | Optional | nonnegative scalar integer (0..9)

Special subframe configuration, specified as a nonnegative scalar integer between 0 and 9. Optional. Only required if `DuplexMode` is set to 'TDD'.

Data Types: double

NSubframe — Subframe number

nonnegative scalar integer

Subframe number, specified as a nonnegative scalar integer. Only required if `DuplexMode` is set to 'TDD'.

Data Types: double

Data Types: struct

Output Arguments

info — Duplexing information

structure

Duplexing information, returned as a structure having the following fields.

NSymbols — Total number of symbols in subframe

nonnegative scalar integer

Total number of symbols in subframe, returned as a nonnegative scalar integer.

Data Types: int32

SubframeType — Type of subframe

'Downlink' | 'Uplink' | 'Special'

Type of subframe, returned as a string.

Data Types: char

NSymbolsDL — Number of symbols used for transmission in downlink

nonnegative scalar integer

Number of symbols used for transmission in downlink (DL), returned as a nonnegative scalar integer.

Data Types: int32

NSymbolsGuard — Number of symbols in the guard period

nonnegative scalar integer

Number of symbols in the guard period, returned as a nonnegative scalar integer.

Data Types: int32

NSymbolsUL — Number of symbols used for transmission in uplink

nonnegative scalar integer

Number of symbols used for transmission in uplink (UL), returned as a nonnegative scalar integer.

Data Types: int32

See Also

lteDLResourceGrid | lteResourceGrid | lteULResourceGrid

Introduced in R2014a

lteEPDCCH

Enhanced physical downlink control channel

Syntax

```
sym = lteEPDCCH(enb,chs,cw)
```

Description

`sym = lteEPDCCH(enb,chs,cw)` returns a vector `sym` of complex modulation symbols associated with a single Enhanced Physical Downlink Control Channel (EPDCCH) transmission in a subframe. The channel processing includes the stages of scrambling and QPSK modulation. The function is initialized according to the cell-wide settings, `enb`, and the channel transmission configuration, `chs`. For a given input bit vector, `cw`, the column output, `sym`, contains the QPSK symbols ready to be mapped into the resource elements indicated by `lteEPDCCHIndices`.

This function performs no precoding. If necessary, apply precoding externally.

You can obtain the EPDCCH transmission capacity from the `info` structure produced by `lteEPDCCHIndices`.

Examples

Generate Complex Modulated EPDCCH Symbols

Specify the cell-wide settings and channel transmission configuration in parameter structures `enb` and `chs`.

```
enb.NSubframe = 4;  
chs.EPDCCHNID = 7;
```

Generate EPDCCH symbols by encoding the input `cw` into QPSK symbols.

```
cw = randi([0 1],100,1);  
sym = lteEPDCCH(enb,chs,cw);
```

Display the size and the first 10 indices of `sym`. Because these are QPSK symbols, `sym` contains half as many symbols as the number of bits that can be transmitted on the EPDCCH.

```
size(sym)
sym(1:10)
```

```
ans =
```

```
    50     1
```

```
ans =
```

```
-0.7071 + 0.7071i
 0.7071 + 0.7071i
-0.7071 + 0.7071i
-0.7071 - 0.7071i
-0.7071 + 0.7071i
 0.7071 - 0.7071i
-0.7071 - 0.7071i
-0.7071 - 0.7071i
-0.7071 - 0.7071i
 0.7071 - 0.7071i
```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings, specified as a structure. This argument must contain the following parameter field.

Nsubframe — Subframe number

nonnegative scalar integer

Subframe number, specified as a nonnegative scalar integer.

Data Types: double

Data Types: struct

chs — Channel-specific transmission configuration

structure

Channel-specific transmission configuration, specified as a structure. This argument must contain the following parameter field.

EPDCCHNID — EPDCCH scrambling sequence initialization

nonnegative scalar integer

EPDCCH nID parameter for scrambling sequence initialization, specified as a nonnegative scalar integer.

Data Types: `double`

Data Types: `struct`

cw — Input bit vector

vector

Input bit vector containing the bit values of the EPDCCH codeword for modulation.

Output Arguments

sym — EPDCCH modulation symbols

complex-vector

Given an input bit vector, `cw`, the output, `sym`, is returned as a vector of complex modulation symbols associated with a single EPDCCH transmission in a subframe. `sym` contains the QPSK symbols ready to be mapped into the resource elements indicated by `lteEPDCCHIndices`.

See Also

`lteDCIEncode` | `lteEPDCCHIndices` | `lteEPDCCHPRBS` | `ltePDCCH`

Introduced in R2014b

lteEPDCCHDMRS

EPDCCH demodulation reference signals

Syntax

```
sym = lteEPDCCHDMRS(enb,chs)
sym = lteEPDCCHDMRS(enb,chs,opts)
```

Description

`sym = lteEPDCCHDMRS(enb,chs)` returns the Enhanced Physical Downlink Control Channel Demodulation Reference Signal (EPDCCH DM-RS) symbols for transmission in a single subframe. By default the symbols are returned as a column vector. The order of the symbols is the same as the order that results when you use `lteEPDCCHDMRSIndices` to map them into an N -by- M -by-4 array. This array represents the resource element subframe grid across the four possible EPDCCH antenna ports ($p = 107...110$).

The symbols are parameterized in terms of a configured PRB pair set which defines:

- the overall set of possible EPDCCH candidates and
- the aggregation of one or more consecutive enhanced control channel elements (ECCE). This aggregation identifies the specific EPDCCH instance that the DM-RS is associated with.

The DM-RS symbols are created only for the specific PRB pairs and antenna ports that the corresponding EPDCCH is mapped to.

For a localized EPDCCH transmission, the EPDCCH is associated with a single antenna port from $p = 107...110$, dependent on the `chs.RNTI` and ECCEs selected. Thus, the DM-RS antenna port symbols are output only for that single port.

For a distributed transmission, the EPDCCH is mapped to two antenna ports in an alternating fashion. Therefore, the DM-RS symbols are generated for the PRBs in both ports: $p = 107,109$ for normal cyclic prefix and $p = 107,108$ for extended cyclic prefix. The output is ordered so that the symbols for the lowest antenna ports index come first. This order matches that of the DM-RS RE indices produced by `lteEPDCCHDMRSIndices`.

`sym = lteEPDCCHDMRS(enb,chs,opts)` enables additional control over the contents and format of the symbols through a cell array of option strings, `opts`. You can use this syntax to return the symbols as a numeric matrix, where each column contains symbols for an active antenna port.

This function performs no precoding. If necessary, apply precoding externally.

Examples

Generate EPDCCH DM-RS Symbols

Specify the cell-wide settings and channel transmission configuration in parameter structures `enb` and `chs`.

```
enb.NDLRB = 6;
enb.NSubframe = 0;
chs.EPDCCHCECCE = [0 7];
chs.EPDCCHType = 'Localized';
chs.EPDCCHPRBSet = 2:3;
chs.EPDCCHNID = 0;
chs.RNTI = 1;
```

Generate EPDCCH demodulation reference signal symbols.

```
sym = lteEPDCCHDMRS(enb,chs)
```

```
Warning: Using default value for parameter field CyclicPrefix (Normal)
Warning: Using default value for parameter field DuplexMode (FDD)
```

```
sym =
    0.7071 - 0.7071i
    0.7071 + 0.7071i
    0.7071 + 0.7071i
   -0.7071 + 0.7071i
    0.7071 - 0.7071i
    0.7071 - 0.7071i
    0.7071 + 0.7071i
    0.7071 - 0.7071i
    0.7071 + 0.7071i
   -0.7071 - 0.7071i
    0.7071 - 0.7071i
```

```
0.7071 - 0.7071i
```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings, precede code with the following command:
`lteWarning('off', 'DefaultValue')`

Generate DM-RS Symbols for EPDCCH Having a Distributed Transmission

Specify the cell-wide settings and channel transmission configuration in parameter structures `enb` and `chs`.

```
enb.NDLRB = 6;
enb.NSubframe = 0;
chs.EPDCCHCCE = [0,7];
chs.EPDCCHType = 'Distributed';
chs.EPDCCHPRBSet = 2:3;
chs.EPDCCHNID = 0;
chs.RNTI = 1;
```

Generate DM-RS symbols for an EPDCCH having a distributed transmission. Return the symbols as a matrix, where each column contains symbols for an active antenna.

```
sym = lteEPDCCHDMRS(enb,chs,'mat')
```

```
Warning: Using default value for parameter field CyclicPrefix (Normal)
```

```
Warning: Using default value for parameter field DuplexMode (FDD)
```

```
sym =
```

```
0.7071 - 0.7071i    0.7071 - 0.7071i
-0.7071 - 0.7071i  -0.7071 - 0.7071i
0.7071 + 0.7071i    0.7071 + 0.7071i
0.7071 - 0.7071i    0.7071 - 0.7071i
0.7071 - 0.7071i    0.7071 - 0.7071i
-0.7071 + 0.7071i  -0.7071 + 0.7071i
-0.7071 - 0.7071i  -0.7071 - 0.7071i
0.7071 - 0.7071i    0.7071 - 0.7071i
-0.7071 - 0.7071i  -0.7071 - 0.7071i
-0.7071 - 0.7071i  -0.7071 - 0.7071i
-0.7071 + 0.7071i  -0.7071 + 0.7071i
0.7071 - 0.7071i    0.7071 - 0.7071i
```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings, precede code with the following command:
`lteWarning('off', 'DefaultValue')`

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NSubframe	Required	Nonnegative scalar integer	Subframe number
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as one of the following: <ul style="list-style-type: none"> 'FDD' — Frequency division duplex (default) 'TDD' — Time division duplex
The following parameters apply when DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)

chs — Channel-specific channel transmission configuration

structure

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
EPDCCHECCE	Required	1-element or 2-element vector specifying the 0-based ECCE index or inclusive [begin, end] ECCE index range according to the aggregation level L ($L = \text{end} - \text{begin} + 1$). The number of ECCEs in the candidate must be a power of 2. If no transmission is required, leave this parameter empty.	The set of one or several consecutive ECCEs defining the EPDCCH transmission candidate in the overall EPDCCH set.
EPDCCHType	Required	'Localized', 'Distributed'	EPDCCH transmission type
EPDCCHPRBSet	Required	Vector of zero-based indices for the PRB pairs corresponding to the EPDCCH PRB set. The number of PRB pair indices must be a power of 2. If no transmission is required, leave this parameter empty.	EPDCCH PRB pair indices
EPDCCHNID	Required	Nonnegative scalar integer	EPDCCH nID parameter for scrambling sequence initialization

Parameter Field	Required or Optional	Values	Description
The following parameters apply when EPDCCHType is set to 'Localized'.			
RNTI	Required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)

opts — Symbol generation option strings

string | cell array of strings

Symbol generation option strings, specified as a string or a cell array of strings that can contain the following values.

Option	Values	Description
Symbol style	'ind' (default), 'mat'	Style for the returned symbols, specified as one of the following: <ul style="list-style-type: none"> 'ind' — returns the symbols as a column vector (default) 'mat' — returns the symbols as a matrix in which each column contains symbols for an active antenna port from the set $p = 107...110$
Symbol format	'rsonly' (default), 'rs+unused'	Format of the returned symbols. <ul style="list-style-type: none"> 'rsonly' — returns only active DM-RS symbols (default) 'rs+unused' — also returns zeros for the RE locations, which should be unused because of EPDCCH DM-RS transmission on other EPDCCH antenna ports $p = 107...110$ that are not used by this EPDCCH transmission.

Data Types: char | cell

Output Arguments

sym — EPDCCH DM-RS symbols

numeric column vector | numeric matrix

EPDCCH demodulation reference signal symbols, returned as a column vector containing the non-precoded DM-RS symbol sequences concatenated for all active PRB pairs and

antenna ports. Optionally, the function returns `sym` as a numeric matrix, where each column contains symbols for an active antenna port.

Data Types: `double`

See Also

`lteCellIRS` | `lteCSIRS` | `lteDMRS` | `lteEPDCCH` | `lteEPDCCHDMRSIndices` | `ltePRBS` | `ltePRS`

Introduced in R2014b

lteEPDCCHDMRSIndices

EPDCCH DM-RS resource element indices

Syntax

```
ind = lteEPDCCHDMRSIndices(enb,chs)
ind = lteEPDCCHDMRSIndices(enb,chs,opts)
```

Description

`ind = lteEPDCCHDMRSIndices(enb,chs)` returns indices of the Enhanced Physical Downlink Control Channel Demodulation Reference Signal (EPDCCH DM-RS) resource elements (RE) associated with an EPDCCH transmission candidate in a subframe. By default, `ind` is a column vector of indices in one-based linear indexing form. Use this form to directly index the EPDCCH DM-RS REs of an N -by- M -by-4 array that represents the subframe resource grid across the four possible EPDCCH antenna ports ($p = 107 \dots 110$). You can also generate alternative index representations. The order of the indices is the same as required for the complex EPDCCH DM-RS symbols mapping. `lteEPDCCHDMRS` generates these symbols.

The indices are parameterized in terms of a configured PRB pair set which defines:

- the overall set of possible EPDCCH candidates and
- the aggregation of one or more consecutive enhanced control channel elements (ECCE). This aggregation identifies the specific EPDCCH instance that the DM-RS are associated with.

The DM-RS indices are created only for the specific PRB pairs and antenna ports that the corresponding EPDCCH is mapped to. They do not account for any external precoding operations.

For a localized EPDCCH transmission, the EPDCCH is associated with a single antenna port from $p = 107 \dots 110$, dependent on the RNTI and ECCEs selected. Thus, the DM-RS antenna port indices (1...4 respectively, if one-based) are output for that single port.

For a distributed transmission, the EPDCCH is mapped to two antenna ports in an alternating fashion. Therefore, the DM-RS indices are generated for the PRBs in both ports: $p = 107, 109$ for normal cyclic prefix and $p = 107, 108$ for extended cyclic prefix.

The output is ordered so that the symbols for the lowest antenna index plane come first. These indices are suitable for indexing an N -by- M -by-4 array representing the subframe resource grid across the four possible EPDCCH antenna ports ($p = 107...110$).

This syntax returns an NRE length column vector of one-based linear indices for the DM-RS resource elements associated with a particular EPDCCH candidate. The function is initialized according to the cell-wide settings, `enb`, and the EPDCCH transmission configuration, `chs`.

`ind = lteEPDCCHDMRSIndices(enb,chs,opts)` enables additional control over the contents and format of the indices through a cell array of option strings, `opts`.

Examples

Generate EPDCCH DM-RS Indices

Specify the cell-wide settings and channel transmission configuration in parameter structures `enb` and `chs`.

```
enb = struct('CyclicPrefix','Normal','DuplexMode','FDD');
enb.NDLRB = 6;
enb.NSubframe = 0;
chs.EPDCCHCECCE = [0 7];
chs.EPDCCHType = 'Localized';
chs.EPDCCHPRBSet = 2:3;
chs.RNTI = 1;
```

Create the EPDCCH DM-RS indices for an EPDCCH having eight ECCEs.

```
ind = lteEPDCCHDMRSIndices(enb,chs)
```

```
ind =
```

```
    1898
    1903
    1908
    1910
    1915
    1920
    1970
    1975
    1980
```

1982
1987
1992

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NSubframe	Required	Nonnegative scalar integer	Subframe number
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as one of the following: <ul style="list-style-type: none"> 'FDD' — Frequency division duplex (default) 'TDD' — Time division duplex
The following parameters apply when DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)

chs — Channel-specific transmission configuration

structure

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
EPDCCHECCE	Required	1-element or 2-element vector specifying the 0-based ECCE index or inclusive [begin , end] ECCE index range according to the aggregation level L ($L = \text{end} - \text{begin} + 1$). The number of ECCEs in the candidate must be a power of 2. If no transmission is required, leave this parameter empty.	The set of one or several consecutive ECCEs defining the EPDCCH transmission candidate in the overall EPDCCH set.
EPDCCHType	Required	'Localized', 'Distributed'	EPDCCH transmission type
EPDCCHPRBSet	Required	Vector of zero-based indices for the PRB pairs corresponding to the EPDCCH PRB set. The number of PRB pair indices must be a power of 2. If no transmission is required, leave this parameter empty.	EPDCCH PRB pair indices
The following parameters apply when EPDCCHType is set to 'Localized'.			
RNTI	Required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)

opts — Index generation options

string | cell array of strings

Index generation options, specified as a string or a cell array of strings that can contain the following values.

Option	Values	Description
Indexing style	'ind' (default), 'mat', 'sub'	Style for the returned indices, specified as one of the following: <ul style="list-style-type: none"> 'ind' — returns the indices in linear index form as a column vector (default) 'mat' — returns the indices in linear index form as a matrix, where each column contains indices for an individual port. 'sub' — returns the indices in [subcarrier, symbol, antenna] subscript row style. The number of rows in the output, ind, is the number of resource elements (NRE). Thus, ind is an NRE-by-3 matrix.
Index base	'1based' (default), '0based'	Base value of the returned indices. Specify '1based' to generate indices where the first value is one. Specify '0based' to generate indices where the first value is zero.
Indexing format	'rsonly' (default), 'rs+unused'	RE locations mode of the returned indices. <ul style="list-style-type: none"> 'rsonly' — returns only active DM-RS locations (default) 'rs+unused' — also includes all RE locations, which should be unused because of DM-RS transmission on other EPDCCH antenna ports $p = 107...110$ that are not used by this EPDCCH transmission

Data Types: char | cell

Output Arguments

ind — EPDCCH DM-RS RE indices

numeric column vector | numeric matrix

EPDCCH DM-RS resource element indices, returned by default as a numeric vector of length NRE-by-1. Optionally, for subscript-specific indexing style [subcarrier,

symbol, antenna], ind is returned as an NRE-by-3 numeric matrix. NRE is the number of subframe resource elements. You can also return the indices in a linear indexing matrix, where each column contains indices for an individual antenna port. By default, the indices are returned in one-based linear indexing form, which you can use to directly index the EPDCCH DM-RS resource elements.

Data Types: double

See Also

lteDMRSIndices | lteEPDCCHDMRS | lteEPDCCHIndices

Introduced in R2014b

lteEPDCCHIndices

Enhanced physical downlink control channel (EPDCCH) resource element indices

Syntax

```
[ind,info] = lteEPDCCHIndices(enb,chs)
[ind,info] = lteEPDCCHIndices(enb,chs,opts)
```

Description

[ind,info] = lteEPDCCHIndices(enb,chs) returns the subframe resource element (RE) indices for the Enhanced Physical Downlink Control Channel (EPDCCH). By default, ind is a vector of indices in a one-based linear indexing style. Use this indexing style to index the subframe resource grid directly. The grid comprises the four possible antenna ports ($p = 107 \dots 110$) and is represented as an N -by- M -by-4 array. The indices are for a single transmission instance of the EPDCCH. The order of the indices is the same as required for the complex EPDCCH symbols mapping. Generate these symbols using lteEPDCCH.

The indices are parameterized in terms of a configured PRB pair set that defines:

- the overall set of possible EPDCCH candidates and
- the aggregation of one or more consecutive enhanced control channel elements (ECCE). This aggregation identifies the specific EPDCCH instance within the set of EPDCCH candidates.

The EPDCCH can use either localized or distributed transmission, differing in the mapping of ECCEs to REs, active PRB pairs, and antenna ports.

This syntax returns an NRE-by-1 vector of one-based linear indexing RE indices, given the cell-wide settings structure enb, and the EPDCCH transmission configuration chs.

[ind,info] = lteEPDCCHIndices(enb,chs,opts) enables additional control over the format of the returned indices through a cell array of option strings, opts.

Examples

Generate RE Indices of Localized Transmission

This example generates RE Indices of localized transmission in default and subscripted formats.

Specify the cell-wide settings in parameter structure, `enb`.

```
enb.NDLRB = 6;
enb.NSubframe = 0;
enb.NCellID = 0;
enb.CellRefP = 1;
enb.CyclicPrefix = 'Normal';
enb.DuplexMode = 'FDD';
enb.NFrame = 0;
enb.CSIRSPeriod = 'Off';
enb.ZeroPowerCSIRSPeriod = 'Off';
```

Specify the channel transmission configuration in parameter structure, `chs`.

```
chs.EPDCCHCCE = [0 7];
chs.EPDCCHType = 'Localized';
chs.EPDCCHPRBSet = 2:3;
chs.EPDCCHStart = 2;
chs.RNTI = 1;
```

Generate 1-based linear resource element indices of a localized transmission.

```
[ind,info] = lteEPDCCHIndices(enb,chs);
size(ind)
```

```
ans =
```

```
    228     1
```

Display the size and the first 10 indices of `ind`.

```
ind(1:10)
```

```
ans =  
    1177  
    1178  
    1179  
    1180  
    1181  
    1182  
    1183  
    1184  
    1185  
    1186
```

Generate 1-based resource element indices in the subscript format [subcarrier, symbol, antenna].

```
[ind,info] = lteEPDCCHIndices(enb,chs,'sub');  
size(ind)
```

```
ans =  
    228     3
```

Display the size and the first 10 indices of `ind`.

```
ind(1:10,:)
```

```
ans =  
    25     3     2  
    26     3     2  
    27     3     2  
    28     3     2  
    29     3     2  
    30     3     2  
    31     3     2  
    32     3     2  
    33     3     2  
    34     3     2
```


Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ..., 503)	Physical layer cell identity
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
NSubframe	Required	Nonnegative scalar integer	Subframe number
The following parameter is only read when <code>chs.EPDCCHStart</code> is absent.			
CFI	Required	1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB')
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as one of the following: <ul style="list-style-type: none"> 'FDD' — Frequency division duplex (default)

Parameter Field	Required or Optional	Values	Description
			<ul style="list-style-type: none"> 'TDD' — Time division duplex
The following parameters apply when DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
NFrame	Optional	0 (default), Nonnegative scalar integer	Frame number
CSIRSPeriod	Optional	'Off' (default), 'On', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]. You can also specify values in a cell array of configurations for each resource.	CSI-RS subframe configurations for one or more CSI-RS resources. Multiple CSI-RS resources can be configured from a single common subframe configuration or from a cell array of configurations for each resource.
The following CSI-RS resource parameters apply only when CSIRSPeriod sets one or more CSI-RS subframe configurations to any value other than 'Off'. Each parameter length must be equal to the number of CSI-RS resources required.			
CSIRSConfig	Required	Nonnegative scalar integer	Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1. [1]
CSIRRefP	Required	1 (default), 2, 4, 8	Array of number of CSI-RS antenna ports

Parameter Field	Required or Optional	Values	Description
ZeroPowerCSIRS	Optional	'Off' (default), 'On', I_{csi-rs} (0,...,154), [T_{csi-rs} D_{csi-rs}]. You can also specify values in a cell array of configurations for each resource.	Zero power CSI-RS subframe configurations for one or more zero power CSI-RS resource configuration index lists. Multiple zero power CSI-RS resource lists can be configured from a single common subframe configuration or from a cell array of configurations for each resource list.
The following zero power CSI-RS resource parameter is only required if one or more of the above zero power subframe configurations is set to any value other than 'Off'.			
ZeroPowerCS	Required	16-bit bitmap string (truncated if not 16 bits or '0' MSB extended), or a numeric list of CSI-RS configuration indices. You can also specify values in a cell array of configurations for each resource.	Zero power CSI-RS resource configuration index lists (TS 36.211 Section 6.10.5.2). Specify each list as a 16-bit bitmap string (if less than 16 bits, then '0' MSB extended), or as a numeric list of CSI-RS configuration indices from TS 36.211 Table 6.10.5.2-1 in the '4' CSI reference signal column. To specify multiple lists can be defined using a cell array of bitmap strings or numeric lists. [1]

chs — EPDCCH-specific channel transmission configuration structure

EPDCCH-specific channel transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
EPDCCHECCE	Required	1- or 2- element vector specifying the zero-	The set of one of several consecutive ECCEs

Parameter Field	Required or Optional	Values	Description
		<p>based ECCE index or inclusive [begin, end] ECCE index range according to the aggregation level L ($L = \text{end} - \text{begin} + 1$). The number of ECCEs in the candidate must be a power of 2.</p> <p>If no transmission is required, leave this parameter empty.</p>	defining the EPDCCH transmission candidate in the overall EPDCCH set.
EPDCCHType	Required	'Localized', 'Distributed'	EPDCCH transmission type
EPDCCHPRBSet	Required	<p>Vector of zero-based indices for the PRB pairs corresponding to the EPDCCH PRB set. The number of PRB pair indices must be a power of 2.</p> <p>If no transmission is required, leave this parameter empty.</p>	EPDCCH PRB pair indices
EPDCCHStart	Optional	<p>0...4</p> <p>If this parameter is not present, then the cell-wide CFI parameter is used for the starting symbol.</p>	EPDCCH starting symbol
The following parameters apply when EPDCCHType is set to 'Localized'.			
RNTI	Required only for the 'Localized' transmission type	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)

opts — Index generation options

string | cell array of strings

Index generation options, specified as a string or a cell array of strings that can contain the following values.

Option	Values	Description
Indexing style	'ind' (default), 'sub'	Style for the returned indices, specified as one of the following options. <ul style="list-style-type: none"> 'ind' — returns the indices in linear index form as a column vector (default) 'sub' — returns the indices in [subcarrier, symbol, antenna] subscript row style. The number of rows in the output, <code>ind</code>, is the number of resource elements (NRE). Thus, <code>ind</code> is an NRE-by-3 matrix.
Index base	'1based' (default), '0based'	Base value of the returned indices. Specify '1based' to generate indices where the first value is one. Specify '0based' to generate indices where the first value is zero.

Whether in linear or subscript format style, the indices are always formed out of [subcarrier, symbol, antenna] subscripts. These subscripts identify the used resource elements in each subframe resource grid per antenna port.

For the EPDCCH, the antenna subscripts have the possible range 1...4 (if index is one-based), which represents antenna ports $p = 107...110$. For a localized EPDCCH transmission, the antenna subscripts are a single value out of 1...4, dependent on the RNTI and ECCEs selected. For a distributed EPDCCH transmission, the antenna subscripts alternate between one of two values: {1,3} ($p = 107, 109$) for normal cyclic prefix, and {1,2} ($p = 107, 108$) for extended cyclic prefix. See TS 36.211, Section 6.8A.5 [1]. Use these indices to index the subframe grid directly. The grid comprises the four possible EPDCCH antenna ports ($p = 107...110$) and is represented as an N -by- M -by-4 array.

Data Types: char | cell

Output Arguments**ind — Subframe EPDCCH RE indices**

numeric column vector | 3-column numeric matrix

EPDCCH subframe resource element indices, returned by default as a numeric column vector of length NRE-by-1. Optionally, for subscript-specific indexing style [`subcarrier`, `symbol`, `antenna`], `ind` is returned as a numeric matrix of size NRE-by-3. NRE is the number of subframe resource elements. By default, the indices are returned in one-based linear indexing form, which you can use to directly index the EPDCCH subframe resource elements.

Data Types: `double`

info — Information related to EPDCCH indices
 scalar structure

Dimensional information related to EPDCCH indices, returned as a scalar structure. The structure `info` contains the following fields.

Parameter Field	Description	Values	Data Type
EPDCCHG	EPDCCH data bit capacity	Integer	int32
EPDCCHGd	EPDCCH QPSK symbol capacity	Integer	int32
nEPDCCH	Number of REs in a PRB pair configured for possible EPDCCH transmission. See section 6.8A.1 in TS 36.211. [1]	Integer	int32
NECCE	Number of ECCE available for transmission of EPDCCHs in the PRB pair set	Integer	int32
NECCEPerPRB	Number of ECCE per PRB pair	Integer	int32
NEREGPerECCE	Number of EREG per ECCE	Integer	int32

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteEPDCCH | lteEPDCCHDMRSIndices | lteEPDCCHIndices

Introduced in R2014b

lteEPDCCHPRBS

EPDCCH pseudorandom scrambling sequence

Syntax

```
seq = lteEPDCCHPRBS(enb,chs,n)
seq = lteEPDCCHPRBS(enb,chs,n,mapping)
```

Description

`seq = lteEPDCCHPRBS(enb,chs,n)` returns the first `n` outputs of the Enhanced Physical Downlink Control Channel (EPDCCH) scrambling sequence. The function is initialized according to the cell-wide settings structure, `enb`, and the channel transmission configuration structure, `chs`.

`seq = lteEPDCCHPRBS(enb,chs,n,mapping)` allows additional control over the format of the returned sequence, `seq`, through the string `mapping`. Valid formats are 'binary' (default) and 'signed'. The 'binary' format maps `true` to 1 and `false` to 0. The 'signed' format maps `true` to -1 and `false` to 1.

Examples

Generate the EPDCCH Scrambling Sequence

Specify the cell-wide settings and channel transmission configuration in parameter structures `enb` and `chs`.

```
enb.NSubframe = 0;
chs.EPDCCHNID = 0;
```

Create the codeword and generate the EPDCCH scrambling sequence.

```
cw = randi([0 1],100,1);
prbs = lteEPDCCHPRBS(enb,chs,length(cw));
```

Scramble the DCI coded bits.


```
scrambled = xor(prbs,cw);  
prbs(1:20)
```

```
ans =
```

```
0  
0  
0  
0  
0  
0  
1  
0  
0  
0  
0  
1  
1  
0  
1  
0  
0  
0  
0  
1
```

Generate the EPDCCH scrambling sequence using the 'signed' sequence format.

```
prbs = lteEPDCCHPRBS(enb,chs,length(cw),'signed');  
prbs(1:20)
```

```
ans =
```

```
1  
1  
1  
1  
1  
1  
1  
-1  
1  
1
```

1
1
-1
-1
1
-1
1
1
1
1
-1

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings, specified as a structure. This argument contains the following parameter field.

NSubframe — Subframe number

nonnegative scalar integer

Subframe number, specified as a nonnegative scalar integer.

Data Types: double

Data Types: struct

chs — Channel-specific transmission configuration

structure

Channel-specific transmission configuration, specified as a structure. This argument contains the following parameter field.

EPDCCHNID — EPDCCH scrambling sequence initialization

nonnegative scalar integer

EPDCCH nID parameter for scrambling sequence initialization, specified as a nonnegative scalar integer.

Data Types: double

Data Types: `struct`

n — Number of elements in returned sequence

numeric scalar

Number of elements in returned sequence `seq`, specified as a numeric scalar.

Data Types: `double`

mapping — Output sequence format

'binary' (default) | 'signed'

Format of the returned sequence `seq`, specified as the string 'binary' or 'signed'.

- 'binary' maps `true` to 1 and `false` to 0.
- 'signed' maps `true` to -1 and `false` to 1.

Data Types: `char`

Output Arguments

seq — EPDCCH pseudorandom scrambling sequence

logical column vector | numeric column vector

EPDCCH pseudorandom scrambling sequence, returned as a logical column vector or a numeric column vector. This argument contains the first `n` outputs of the EPDCCH scrambling sequence, when initialized according to the cell-wide settings structure `enb` and the channel transmission configuration `chs`. If you set `mapping` to 'signed', the output data type is `double`. Otherwise, the output data type is `logical`.

Data Types: `logical` | `double`

See Also

`lteEPDCCH` | `lteEPDCCHIndices`

Introduced in R2014b

lteEVM

Error vector magnitude calculation

Syntax

```
evm = lteEVM(x,r)  
evm = lteEVM(ev)
```

Description

`evm = lteEVM(x,r)` returns a structure, `evm`, containing error vector magnitude (EVM) information for the input vector, `x`, given the reference signal vector, `r`. The EVM is defined using the error, or difference, between the input values, `x`, and the reference signal, `r`.

The EVM values in the **RMS** and **Peak** structure fields are linear EVM, not EVM as a percentage. To obtain EVM as a percentage, multiply the value of the **RMS** and **Peak** structure fields by 100.

`evm = lteEVM(ev)` returns a structure, `evm`, for the input vector, `ev`, which is taken to be the normalized error vector given by the expression $ev = (x - r) / \sqrt{\text{mean}(\text{abs}(r.^2))}$. This syntax allows for peak and RMS EVM calculation for preexisting normalized error vectors. For example, it can be used to calculate the EVM across an array of previous EVM results, by extracting and concatenating the EV fields from the array to form the `ev` input vector.

Examples

Measure EVM of Random QPSK Constellation

Create a random QPSK constellation.

```
txSym = lteSymbolModulate(randi([0,1],10000,1), 'QPSK');
```

Specify an error vector magnitude (EVM) percentage, `evmPercent`.

```
evmPc = 14.0;
```

Create noisy received symbols, using the EVM percentage. Then, measure the EVM.

```
noise = complex(randn(size(txSym)),randn(size(txSym)))*(evmPc/100)/sqrt(2);
rxSym = txSym + noise;
```

Finally, measure the EVM. Display the information structure and the root mean square (RMS) EVM as a percentage.

```
evm = lteEVM(rxSym,txSym)
evm.RMS*100
```

```
    Peak: 0.4249
    RMS: 0.1378
    EV: [5000x1 double]
```

```
13.7831
```

Input Arguments

x — Input vector

numeric column vector

Input vector, specified as a numeric column vector.

Data Types: `double` | `single`

Complex Number Support: Yes

r — Reference signal vector

numeric column vector

Reference signal vector, specified as a numeric column vector.

Data Types: `double` | `single`

Complex Number Support: Yes

ev — Normalized error vector

numeric column vector

Normalized error vector, specified as a numeric column vector.

Data Types: `double` | `single`

Complex Number Support: Yes

Output Arguments

evm — EVM information

structure

EVM information, returned as structure. `evm` contains the following fields.

RMS — Root mean square (RMS) EVM

positive numeric scalar

Root mean square (RMS) EVM, specified as a positive numeric scalar. It is the square root of the mean of the squares of all the values of the EVM.

Data Types: `double` | `single`

Peak — Peak EVM

positive numeric scalar

Peak EVM, returned as a positive numeric scalar. It is the largest single EVM value calculated across all input values.

Data Types: `double` | `single`

EV — Normalized error vector

numeric column vector

Normalized error vector, returned as a numeric column vector.

Data Types: `double` | `single`

Complex Number Support: Yes

Data Types: `struct`

See Also

`lteSymbolDemodulate`

Introduced in R2014a

lteEqualizeMIMO

MMSE-based joint downlink equalization and combining

Syntax

```
[out,csi] = lteEqualizeMIMO(enb,chs,in,hest,noiseest)
```

Description

`[out,csi] = lteEqualizeMIMO(enb,chs,in,hest,noiseest)` performs joint equalization and combining of the received PDSCH symbols in `in`, given cell-wide settings structure, `enb`, PDSCH configuration structure, `chs`, channel estimate, `hest`, and noise power estimate, `noiseest`. MMSE equalization is performed on the product of the channel matrix and precoding matrices. Thus, it performs MMSE equalization between transmit and receive layers and returns the result, `out`.

Examples

Equalize and Decode PDSCH Symbols

This example shows generation of a resource grid for RMC R.11 in a MIMO configuration. The PDSCH symbols are extracted from this transmit grid. An ideal (identity) channel estimate and ideal (zero) noise estimate are created. The channel and noise estimates are used to equalize and decode the PDSCH symbols.

Initialize cell-wide configuration structure, `enb`. Generate and populate grid for RMC R.11.

```
rmccfg.RC = 'R.11';
ncodewords = 2;
enb = lteRMCDL(rmccfg, ncodewords);
enb.TotSubframes = 1;
[~,txGrid] = lteRMCDLTool(enb, {[1;0] [0;1]});
```

Extract the PDSCH symbols from this transmit grid.

```
[ind,indInfo] = ltePDSCHIndices(enb, enb.PDSCH, enb.PDSCH.PRBSset);
```

```
pdschSym = txGrid(ind);
```

Create an ideal, or identity, channel estimate and an ideal, or zero, noise estimate.

```
hest = permute(repmat(eye(enb.CellRefP), [1 1 indInfo.Gd]), [3 1 2]);
nest = 0.0;
```

Equalize and deprecoding the PDSCH symbols, using the channel and noise estimates.

```
[out,csi] = lteEqualizeMIMO(enb, enb.PDSCH, pdschSym, hest, nest);
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure with the following fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports

Parameter Field	Required or Optional	Values	Description
NSubframe	Required	Nonnegative scalar integer	Subframe number
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that <code>enb.DuplexMode</code> is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following parameter fields are dependent upon the condition that <code>chs.TxScheme</code> is set to 'SpatialMux' or 'MultiUser'.			
CFI	Required	1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB')

Data Types: struct

chs — PDSCH configuration

structure

PDSCH configuration, specified as a structure with the following fields.

Parameter Field	Required or Optional	Values	Description
NLayers	Required	1, ..., 8	Number of transmission layers (downlink modulation)
RNTI	Required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)

Parameter Field	Required or Optional	Values	Description
TxScheme	Required	'CDD', 'SpatialMux', 'MultiUser'	<p>Transmission scheme, specified as one of the following options.</p> <ul style="list-style-type: none"> 'CDD' — Large delay CDD scheme. 'SpatialMux' — Closed-loop spatial multiplexing. 'MultiUser' — Multiuser MIMO scheme.
<p>The following parameters are dependent upon the condition that TxScheme is set to 'SpatialMux' or 'MultiUser'.</p>			
PMISet	Required	Integer vector (0, ..., 15)	<p>Precoder matrix indication (PMI) set. It can contain either a single value, corresponding to single PMI mode, or multiple values, corresponding to multiple or subband PMI mode. The number of values depends on CellRefP, transmission layers and TxScheme. For more information about setting PMI parameters, see ltePMIInfo.</p>

Parameter Field	Required or Optional	Values	Description
PRBSet	Required	1- or 2-column integer matrix	<p>Zero-based physical resource block (PRB) indices corresponding to the slot wise resource allocations for this PDSCH. PRBSet can be assigned as:</p> <ul style="list-style-type: none"> • a column vector, the resource allocation is the same in both slots of the subframe, • a two-column matrix, this parameter specifies different PRBs for each slot in a subframe, • a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>

Data Types: struct

in — Received PDSCH input symbols

numeric matrix

Received PDSCH input symbols, specified as a numeric matrix of size M -by- $NRxAnts$, where M is the number of received symbols for each of $NRxAnts$ receive antennas.

Data Types: double

Complex Number Support: Yes

hest — Channel estimate

3-D numeric array

Channel estimate, specified as a 3-D numeric array of size M -by- $NRxAnts$ -by- $enb.CellRefP$, where:

- M is the number of received symbols in **in**,

- `NRxAnts` is the number of receive antennas,
- `enb.CellRefP` is the number of cell-specific reference signal antenna ports.

Data Types: `double`

noiseest — Noise power estimate

numeric scalar

Noise power estimate, specified as a numeric scalar. This argument is an estimate of the noise power spectral density per RE on `rxgrid`. Such an estimate is provided by the `lteDLChannelEstimate` function.

Data Types: `double`

Output Arguments

out — Equalized output symbols

numeric matrix

Equalized output symbols, returned as a numeric matrix of size M -by- NU , where

- M is the number of received symbols for each receive antenna
- NU is the number of transmit layers

Data Types: `double`

Complex Number Support: Yes

csi — Soft channel state information

numeric matrix

Soft channel state information, returned as a numeric matrix of size M -by- NU , the same size as `out`. This argument contains soft channel state information and provides an estimate, via MMSE, of the received gain for each received layer.

Data Types: `double`

See Also

`lteDLChannelEstimate` | `lteDLPrecode` | `lteEqualizeMMSE` |
`lteEqualizeULMIMO` | `lteEqualizeZF` | `ltePDSCHDecode`

Introduced in R2014a

lteEqualizeMMSE

MMSE equalization

Syntax

```
[out,csi] = lteEqualizeMMSE(rxgrid,channelest,noiseest)
```

Description

`[out,csi] = lteEqualizeMMSE(rxgrid,channelest,noiseest)` returns equalized data in multidimensional array, `out`. MMSE equalization is applied to the received data resource grid in the matrix, `rxgrid`, using the channel information in the `channelest` matrix. `noiseest` is an estimate of the received noise power spectral density.

Alternatively, the input `channelest` can be provided as a 3-D array of size NRE -by- $NRxAnts$ -by- P , and the input `rxgrid` can be provided as a matrix of size NRE -by- $NRxAnts$. In this case, the first two dimensions have been reduced to one dimension by appropriate indexing through the frequency and time locations of the resource elements of interest, typically for a single physical channel. The outputs, `out` and `csi`, are of size $(N \times M)$ -by- P .

Examples

Equalize MMSE for RMC R.5

This example applies MMSE equalization on the received signal for reference measurement channel (RMC) R.5, after channel estimation.

Set the DL reference measurement channel to R.5

```
enb = lteRMCDL('R.5');
```

Set channel estimator configuration `PilotAverage` field to `UserDefined`. as follows: averaging window of 9 resource elements in both frequency and time domain, cubic interpolation with a casual window.

```
cec = struct('FreqWindow',9,'TimeWindow',9,'InterpType','cubic');  
cec.PilotAverage = 'UserDefined';  
cec.InterpWinSize = 1;  
cec.InterpWindow = 'Causal';
```

Generate the txWaveform.

```
txWaveform = lteRMCDLTool(enb,[1;0;0;1]);  
n = length(txWaveform);
```

Apply some random noise to the transmitted signal and save as the rxWaveform.

```
rxWaveform = repmat(txWaveform,1,2)+complex(randn(n,2),randn(n,2))*1e-3;
```

Next, demodulate the received data.

```
rxGrid = lteOFDMDemodulate(enb,rxWaveform);
```

Then, perform channel estimation.

 
```
[hest,n0] = lteDLChannelEstimate(enb,cec,rxGrid);
```

Finally, apply the MMSE equalization.

```
out = lteEqualizeMMSE(rxGrid,hest,n0);
```

Show scatter plot of one component carrier.

```
scatterplot(out(:,1))
```

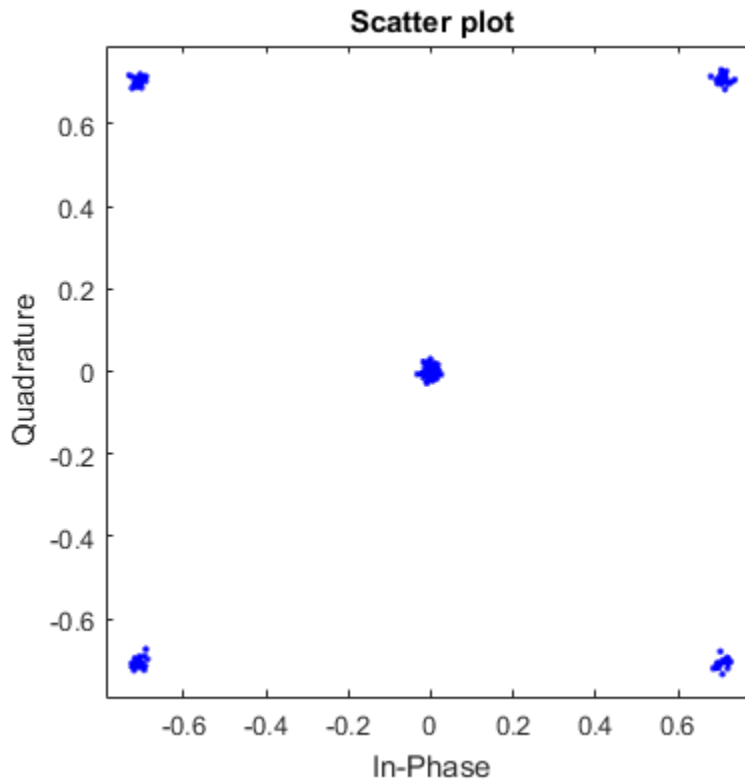

Input Arguments

rxgrid — Received data resource grid

3-D numeric array | 2-D numeric matrix

Received data resource grid, specified as a 3-D numeric array or a 2-D numeric matrix. As a 3-D numeric array, it has size N -by- M -by- $NRxAnts$, where N is the number of subcarriers, M is the number of OFDM symbols, and $NRxAnts$ is the number of receive antennas.

Alternatively, as a 2-D numeric matrix, it has size NRE -by- $NRxAnts$. In this case, the first two dimensions have been reduced to one dimension by appropriate indexing

through the frequency and time locations of the resource elements of interest, typically for a single physical channel.

Data Types: `double`

Complex Number Support: Yes

channelEst – Channel information

4-D numeric array | 3-D numeric array

Channel information, specified as a 4-D numeric array or a 3-D numeric array. As a 4-D numeric array, it has size N -by- M -by- $NRxAnts$ -by- P . N is the number of subcarriers, M is the number of OFDM symbols, $NRxAnts$ is the number of receive antennas, and P is the number of transmit antennas. Each element is a complex number representing the narrowband channel for each resource element and for each link between transmit and receive antennas. This matrix can be obtained using the channel estimation command `lteDLChannelEstimate`.

Alternatively, as a 3-D numeric array, it has size NRE -by- $NRxAnts$ -by- P . In this case, the first two dimensions have been reduced to one dimension by appropriate indexing through the frequency and time locations of the resource elements of interest, typically for a single physical channel.

Data Types: `double`

Complex Number Support: Yes

noiseEst – Noise power estimate

numeric scalar

Noise power estimate, specified as a numeric scalar. It is an estimate of the received noise power spectral density per RE on `rxgrid`.

Data Types: `double`

Output Arguments

out – Equalized output data

3-D numeric array | 2-D numeric matrix

Equalized output data, returned as a 3-D numeric array or a 2-D numeric matrix. As a 3-D numeric array, it has size N -by- M -by- P , where N is the number of subcarriers, M is the number of OFDM symbols, and P is the number of transmit antennas.

Alternatively, if `channelest` is provided as a 3-D array, `out` is a 2-D numeric matrix of size $(N \times M)$ -by- P . In this case, the first two dimensions have been reduced to one dimension by appropriate indexing through the frequency and time locations of the resource elements of interest, typically for a single physical channel.

Data Types: `double`

Complex Number Support: Yes

csi — Soft channel state information

3-D numeric array | 2-D numeric matrix

Soft channel state information, returned as a 3-D numeric array of the same size as `out`. As a 3-D numeric array, it has size N -by- M -by- P , where N is the number of subcarriers, M is the number of OFDM symbols, and P is the number of transmit antennas. `csi` provides an estimate (via MMSE) of the received RE gain for each received RE.

Alternatively, if `channelest` is provided as a 3-D array, `csi` is a 2-D numeric matrix of size $(N \times M)$ -by- P . In this case, the first two dimensions have been reduced to one dimension by appropriate indexing through the frequency and time locations of the resource elements of interest, typically for a single physical channel.

Data Types: `double`

See Also

`lteDLChannelEstimate` | `lteEqualizeMIMO` | `lteEqualizeULMIMO`
| `lteEqualizeZF` | `lteOFDMDemodulate` | `lteSCFDMADemodulate` |
`lteULChannelEstimate`

Introduced in R2014a

lteEqualizeULMIMO

MMSE-based joint uplink equalization and combining

Syntax

```
[out,csi] = lteEqualizeULMIMO(ue,chs,in,hest,noiseest)
```

Description

`[out,csi] = lteEqualizeULMIMO(ue,chs,in,hest,noiseest)` performs joint equalization and combining of the received PUSCH symbols in `in`, given UE-specific settings structure, `ue`, PUSCH configuration structure, `chs`, channel estimate, `hest` and noise power estimate, `noiseest`. MMSE equalization is performed on the product of the channel matrix and precoding matrices, thus performing MMSE equalization between transmit and receive layers and returning the result in `out`.

Examples

Equalize and Decode PUSCH Symbols

Extract, equalize, and decode PUSCH symbols from an RMC A3-2 grid.

Generate a resource grid using multiple antennas to transmit a single PUSCH codeword.

```
ue = lteRMCUL('A3-2');
ue.TotSubframes = 1;
ue.NTxAnts = 2;
ue.PUSCH.NLayers = 2;
[~,txGrid] = lteRMCULTool(ue,[1;0;0;1]);
```

Extract the PUSCH symbols from this transmit grid.

```
[ind,indInfo] = ltePUSCHIndices(ue,ue.PUSCH);
puschSym = txGrid(ind);
```

Create an ideal, or identity, channel estimate and an ideal, or zero, noise estimate.

```
hest = permute(repmat(eye(ue.NTxAnts),[1,1,indInfo.Gd]),[3,1,2]);
nest = 0.0;
```

Equalize and decode the PUSCH symbols, using the channel and noise estimates.

```
[out,csi] = lteEqualizeULMIMO(ue,ue.PUSCH,puschSym,hest,nest);
```

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas

Data Types: `struct`

chs — PUSCH configuration structure

structure

PUSCH configuration structure, specified as a structure that can contain the following fields. The PMI parameter field is only required if `ue.NTxAnts` is set to 2 or 4.

Parameter Field	Required or Optional	Values	Description
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers
The following parameter is required only when <code>ue.NTxAnts</code> is set to 2 or 4.			
PMI	Required	Nonnegative scalar integer (0...23)	Precoder matrix indication, specified as a nonnegative scalar integer between 0 (default) and 23. This PMI is to be used during precoding of the DRS reference symbols. For more information, see <code>lteULPMIInfo</code> .

Data Types: struct

in — Received PUSCH input symbols

numeric matrix

Received PUSCH input symbols, specified as a numeric matrix of size M -by-`NRxAnts`, where M is the number of received symbols for each of the `NRxAnts` receive antennas.

Data Types: double

Complex Number Support: Yes

hest — Channel estimate

3-D numeric array

Channel estimate, specified as a 3-D numeric array of size M -by-`NRxAnts`-by-`NTxAnts`, where M is the number of received symbols in `in`, `NRxAnts` is the number of receive antennas, and `NTxAnts` is the number of transmit antenna ports, given by `ue.NTxAnts`.

Data Types: double

noiseest — Noise power estimate

numeric scalar

Noise power estimate as power spectral density per RE on `rxgrid`, specified as a numeric scalar. Such an estimate is provided by the `lteULChannelEstimate` function.

Data Types: double

Output Arguments

out — Equalized output symbols

complex-valued numeric matrix

Equalized output symbols, returned as a complex-valued numeric matrix of size M -by- NU , where M is the number of received symbols for each receive antenna and NU is the number of transmit layers.

Data Types: double

Complex Number Support: Yes

csi — Soft channel state information

numeric matrix

Soft channel state information, returned as a numeric matrix of the same size as `out`, M -by- NU . This output provides an estimate, via MMSE, of the received gain for each received layer.

Data Types: `double`

See Also

`lteEqualizeMIMO` | `lteEqualizeMMSE` | `lteEqualizeZF` | `ltePUSCHDecode` | `ltePUSCHPrecode` | `lteULChannelEstimate`

Introduced in R2013b

lteEqualizeZF

Zero-forcing equalization

Syntax

```
[out,csi] = lteEqualizeZF(rxgrid,channelest)
```

Description

`[out,csi] = lteEqualizeZF(rxgrid,channelest)` returns equalized data in multidimensional array, `out`, by applying MIMO zero-forcing equalization to the received data resource grid in matrix `rxgrid`, using the channel information in the `channelest` input matrix.

For each resource element, the function calculates the pseudoinverse of the channel and equalizes the corresponding received signal.

Alternatively, the `channelest` input can be provided as a 3-D array of size NRE -by- $NR \times Ants$ -by- P and the `rxgrid` input can be provided as a matrix of size NRE -by- $NR \times Ants$. In this case, the first two dimensions have been reduced to one dimension by appropriate indexing through the frequency and time locations of the resource elements of interest, typically for a single physical channel. The outputs, `out` and `csi`, are of size $(N \times M)$ -by- P .

Examples

Perform Zero-Forcing Equalization for RMC R.5

Perform zero-forcing equalization for a reference measurement channel (RMC) R.5 after channel estimation.

```
enb = lteRMCDL('R.5');
cec = struct('FreqWindow',9,'TimeWindow',9,'InterpType','cubic');
cec.PilotAverage = 'UserDefined';
cec.InterpWinSize = 1;
```

```
cec.InterpWindow = 'Causal';  
txWaveform = lteRMCDLTool(enb,[1;0;0;1]);  
n = length(txWaveform);  
rxWaveform = repmat(txWaveform,1,2)+complex(randn(n,2),randn(n,2))*1e-4;  
rxGrid = lteOFDMDemodulate(enb,rxWaveform);  
hest = lteDLChannelEstimate(enb,cec,rxGrid);  
out = lteEqualizeZF(rxGrid,hest);
```

Input Arguments

rxgrid — Received data resource grid

3-D numeric array | 2-D numeric matrix

Received data resource grid, specified as a 3-D numeric array or a 2-D numeric matrix. As a 3-D numeric array, it has size N -by- M -by- $NRxAnts$, where N is the number of subcarriers, M is the number of OFDM symbols, and $NRxAnts$ is the number of receive antennas.

Alternatively, as a 2-D numeric matrix, it has size NRE -by- $NRxAnts$. In this case, the first two dimensions have been reduced to one dimension by appropriate indexing through the frequency and time locations of the resource elements of interest, typically for a single physical channel.

Data Types: `double`

Complex Number Support: Yes

channelEst — Channel information

4-D numeric array | 3-D numeric array

Channel information, specified as a 4-D numeric array or a 3-D numeric array. As a 4-D numeric array, it has size N -by- M -by- $NRxAnts$ -by- P . N is the number of subcarriers, M is the number of OFDM symbols, $NRxAnts$ is the number of receive antennas, and P is the number of transmit antennas. Each element is a complex number representing the narrowband channel for each resource element and for each link between transmit and receive antennas. This matrix can be obtained using a channel estimation function, such as `lteDLChannelEstimate`.

Alternatively, as a 3-D numeric array, it has size NRE -by- $NRxAnts$ -by- P . In this case, the first two dimensions have been reduced to one dimension by appropriate indexing through the frequency and time locations of the resource elements of interest, typically for a single physical channel.

Data Types: `double`
Complex Number Support: Yes

Output Arguments

out — Equalized output data

3-D numeric array | 2-D numeric matrix

Equalized output data, returned as a 3-D numeric array or a 2-D numeric matrix. As a 3-D numeric array, it has size N -by- M -by- P . N is the number of subcarriers, M is the number of OFDM symbols, and P is the number of transmit antennas.

Alternatively, if `channelest` is provided as a 3-D array, `out` is a 2-D numeric matrix of size $(N \times M)$ -by- P . In this case, the first two dimensions have been reduced to one dimension by appropriate indexing through the frequency and time locations of the resource elements of interest, typically for a single physical channel.

Data Types: `double`
Complex Number Support: Yes

csi — Soft channel state information

3-D numeric array | 2-D numeric matrix

Soft channel state information, returned as a 3-D numeric array or a 2-D numeric matrix of the same size as `out`. As a 3-D numeric array, it has size N -by- M -by- P . N is the number of subcarriers, M is the number of OFDM symbols, and P is the number of transmit antennas. `csi` provides an estimate of the received RE gain for each received RE.

Alternatively, if `channelest` is provided as a 3-D array, `csi` is a 2-D numeric matrix of size $(N \times M)$ -by- P . In this case, the first two dimensions have been reduced to one dimension by appropriate indexing through the frequency and time locations of the resource elements of interest, typically for a single physical channel.

Data Types: `double`

See Also

`lteDLChannelEstimate` | `lteEqualizeMIMO` | `lteEqualizeMMSE` |
`lteEqualizeULMIMO` | `lteOFDMDemodulate` | `lteSCFDMADemodulate` |
`lteULChannelEstimate`

Introduced in R2014a

lteExtractResources

Resource elements extraction

 
Syntax

```
[re,reind] = lteExtractResources(ind,grid)
[re1, re2,...,reN,reind1, reind2, ...,reindN]= lteExtractResources(
ind,grid1,grid2, ....,gridN)
re = lteExtractResources(...,opts)
```

Description

[re,reind] = lteExtractResources(ind,grid) returns resource elements **re** and indices of the extracted resource elements **reind** from a resource array, **grid**, using resource elements indices **ind**. You can extract resource elements from a resource grid with different dimensionality than the resource grid addressed by the indices. The indices specified and returned are in 1-based linear indexing form. Other indexing options are available. The resource extraction process is further explained in “Algorithms” on page 1-284.

In LTE System Toolbox, indices are generated for mapping sequences of physical channel and signal symbols to a resource grid. These indices are generated using channel-or signal-specific functions and address resource elements in an array sized, M -by- N -by- P . M is the number of subcarriers, N is the number of OFDM or SC-FDMA symbols and P is the number of planes. The diagram highlights the resource elements of a resource grid addressed by indices, **ind**. The indices are in a 1-based linear indexing form. $P = 2$ is the number of antenna ports.

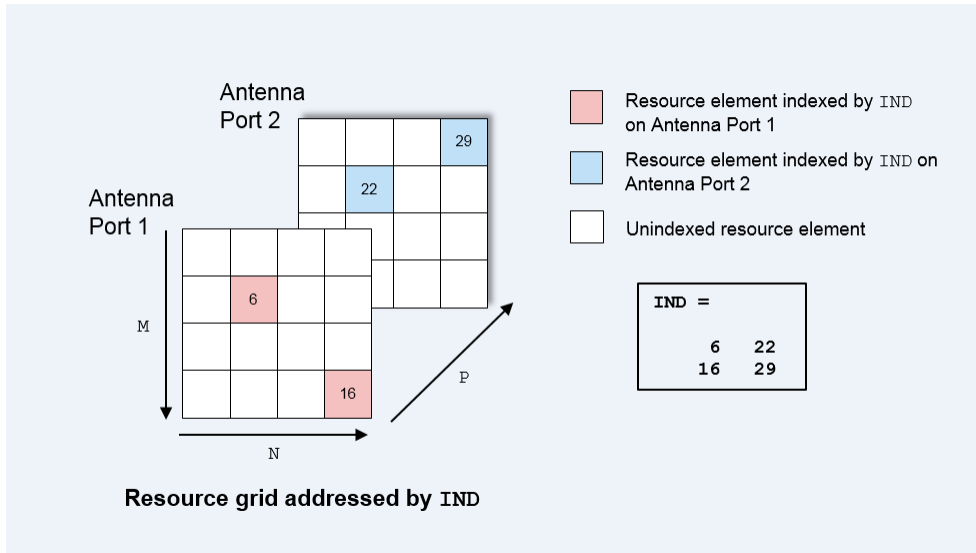

Typically the resource array extracts resource elements from one of the following:

- A 3-D received grid, sized M -by- N -by- $NRxAnts$. $NRxAnts$ is the number of receive antennas. This grid is created after OFDM or SC-FDMA demodulation.
- A 4-D channel estimation grid, sized M -by- N -by- $NRxAnts$ -by- P . This grid is created by channel estimation functions (refer “Channel Estimation”).

You can describe the size of the 3D received grid as a 4D grid that has a trailing singleton dimension.

`[re1, re2, ..., reN, reind1, reind2, ..., reindN] = lteExtractResources(ind, grid1, grid2, ..., gridN)` extracts resource elements from multiple resource arrays using the indices `ind`.

`re = lteExtractResources(..., opts)` enables control over the format of the indices and the extraction method used through a cell array of option strings, `opts`.

Examples

Extract PDCCH Symbols and Channel Estimates for Decoding

Extract PDCCH symbols from a received grid and associated channel estimates in preparation for decoding.

Create a transmit waveform for one subframe.

```
enb = lteRMCDL('R.12');
enb.TotSubframes = 1;
txWaveform = lteRMCDLTool(enb,[1;0;0;1]);
```

Receive sum of transmit antenna waveforms on three receive antennas.

```
NRxAnts = 3;
rxWaveform = repmat(sum(txWaveform,2),1,NRxAnts);
rxGrid = lteOFDMDemodulate(enb,rxWaveform);
```

Compute the channel estimation.

```
cec.FreqWindow = 1;
cec.TimeWindow = 1;
cec.InterpType = 'cubic';
cec.PilotAverage = 'UserDefined';
cec.InterpWinSize = 3;
cec.InterpWindow = 'Causal';
[hEstGrid,nEst] = lteDLChannelEstimate(enb,cec,rxGrid);
```

Generate PDCCH indices and extract symbols from received and channel estimate grids in preparation for PDCCH decoding.

```
ind = ltePDCCHIndices(enb);
[pdccchRxSym,pdccchHestSym] = lteExtractResources(ind,rxGrid,hEstGrid);
```

pdccchRxSym is sized NRE-by-NRxAnts and pdccchHestSym is sized NRE-by-NRxAnts-by-CellRefP.

```
rxSymSize = size(pdccchRxSym)
hestSymSize = size(pdccchHestSym)
```

```
rxSymSize =  
    212    3
```

```
hestSymSize =  
    212    3    4
```

Decode PDCCH with extracted resource elements.

```
pdccchBits = ltePDCCHDecode(enb, pdccchRxSym, pdccchHestSym, nEst);
```

Extract Resources From 3D Receive Grid and 4D Channel Estimate Grid

Extract resources from a 3D receive grid and 4D channel estimate grid. Show the location of the indices within the grid. This replicates the diagrams shown in “Algorithms” on page 1-284.

Setup sizes of the grids.

```
M = 4;           % Subcarriers  
N = 4;           % OFDM symbols  
P = 2;           % Antenna ports  
NRxAnts = 3;    % Receive antennas
```

 
Create indices and show the locations within the transmit grid addressed by these indices. As you will notice, different resource elements are addressed on each antenna port.

```
ind = [6 22; 16 29];  
txGrid = zeros(M,N,P);  
txGrid(ind) = 1; % Addressed resource element locations contain 1
```

Visualize locations of indexed resource elements in the transmit grid.

```
visualizeGrid = zeros(M+1,N+1,P);  
visualizeGrid(1:M,1:N,:) = txGrid;  
figure;  
subplot(321);  
pcolor(visualizeGrid(:,:,1));  
title('Port: 1'); xlabel('N'); ylabel('M');
```

```
subplot(323);
pcolor(visualizeGrid(:, :, 2));
title('Port: 2'); xlabel('N'); ylabel('M');
```

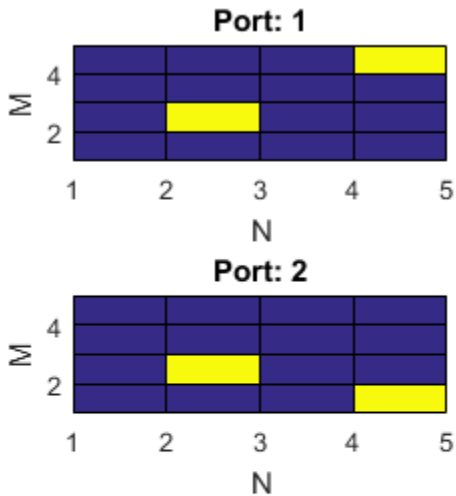

Create a 3D received grid to extract resource elements.

 
 
 
```
rxGrid = zeros(M,N,NRxAnts);
```

Extract resource elements from the received grid. Show the locations of these extracted resource elements.

```
[re, indOut] = lteExtractResources(ind,rxGrid);
rxGrid(indOut) = 1; % Addressed resource element locations contain 1
```

Visualize locations of indexed resource elements in the receive grid.

```
figure;
visualizeGrid = zeros(M+1,N+1,NRxAnts);
visualizeGrid(1:M,1:N,:) = rxGrid;
subplot(321); pcolor(visualizeGrid(:,:,1));
title('Allplanes, RxAnt: 1'); xlabel('N'); ylabel('M');
subplot(323); pcolor(visualizeGrid(:,:,2));
title('Allplanes, RxAnt: 2'); xlabel('N'); ylabel('M');
subplot(325); pcolor(visualizeGrid(:,:,3));
title('Allplanes, RxAnt: 3'); xlabel('N'); ylabel('M');
```

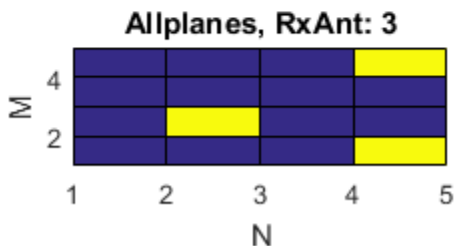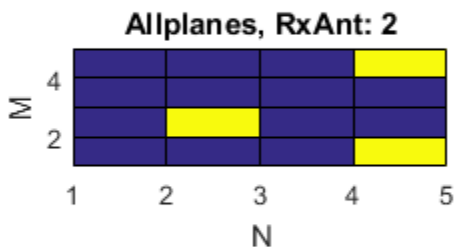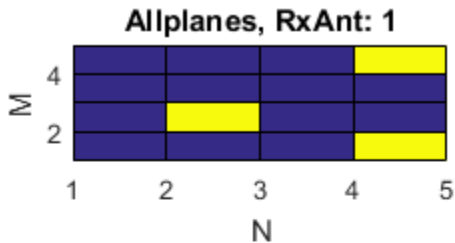

Create a 4D channel estimate grid to extract resource elements.

 

```
hEstGrid = zeros(M,N,NRxAnts,P);
```

Extract resource elements from the channel estimate grid. Show the locations of these extracted resource elements.

```
[re, indOut] = lteExtractResources(ind,hEstGrid);
hEstGrid(indOut) = 1; % Addressed resource element locations contain 1
```

Visualize locations of the resource elements extracted using 'allplanes' mode from 3D receive grid.

```
figure;
visualizeGrid = zeros(M+1,N+1,NRxAnts,P);
visualizeGrid(1:M,1:N,:,:) = hEstGrid;
subplot(321); pcolor(visualizeGrid(:,:,1,1));
title('Allplanes, RxAnt: 1, Port: 1'); xlabel('N'); ylabel('M');
subplot(323); pcolor(visualizeGrid(:,:,2,1));
title('Allplanes, RxAnt: 2, Port: 1'); xlabel('N'); ylabel('M');
subplot(325); pcolor(visualizeGrid(:,:,3,1));
title('Allplanes, RxAnt: 3, Port: 1'); xlabel('N'); ylabel('M');
subplot(322); pcolor(visualizeGrid(:,:,1,2));
title('Allplanes, RxAnt: 1, Port: 2'); xlabel('N'); ylabel('M');
subplot(324); pcolor(visualizeGrid(:,:,2,2));
title('Allplanes, RxAnt: 2, Port: 2'); xlabel('N'); ylabel('M');
subplot(326); pcolor(visualizeGrid(:,:,3,2));
title('Allplanes, RxAnt: 3, Port: 2'); xlabel('N'); ylabel('M');
```

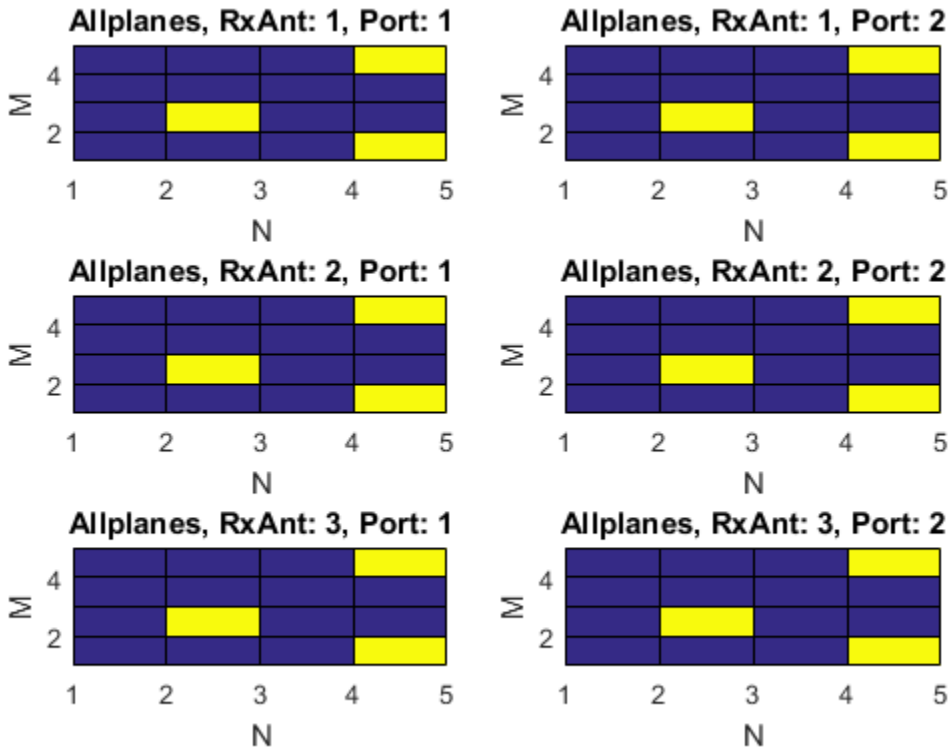

Create a 4D channel estimate grid to extract resource elements.

```
hEstGridDirect = zeros(M,N,NRxAnts,P);
```

 
Extract resource elements from the channel estimate grid using 'direct' extraction mode. Show the locations of these extracted resource elements.

```
[re, indOut] = lteExtractResources(ind,hEstGridDirect,'direct');
hEstGridDirect(indOut) = 1;% Addressed resource element locations contain 1
```

Visualize locations of the resource elements extracted using 'direct' mode from 4D channel estimate grid.

```
figure;
visualizeGrid = zeros(M+1,N+1,NRxAnts,P);
```

```
visualizeGrid(1:M,1:N,,:) = hEstGridDirect;
subplot(321); pcolor(visualizeGrid(:,:,1,1));
title('Direct, RxAnt: 1, Port: 1'); xlabel('N'); ylabel('M');
subplot(323); pcolor(visualizeGrid(:,:,2,1));
title('Direct, RxAnt: 1, Port: 1'); xlabel('N'); ylabel('M');
subplot(325); pcolor(visualizeGrid(:,:,3,1));
title('Direct, RxAnt: 1, Port: 1'); xlabel('N'); ylabel('M');
subplot(322); pcolor(visualizeGrid(:,:,1,2));
title('Direct, RxAnt: 1, Port: 1'); xlabel('N'); ylabel('M');
subplot(324); pcolor(visualizeGrid(:,:,2,2));
title('Direct, RxAnt: 1, Port: 1'); xlabel('N'); ylabel('M');
subplot(326); pcolor(visualizeGrid(:,:,3,2));
title('Direct, RxAnt: 1, Port: 1'); xlabel('N'); ylabel('M');
```

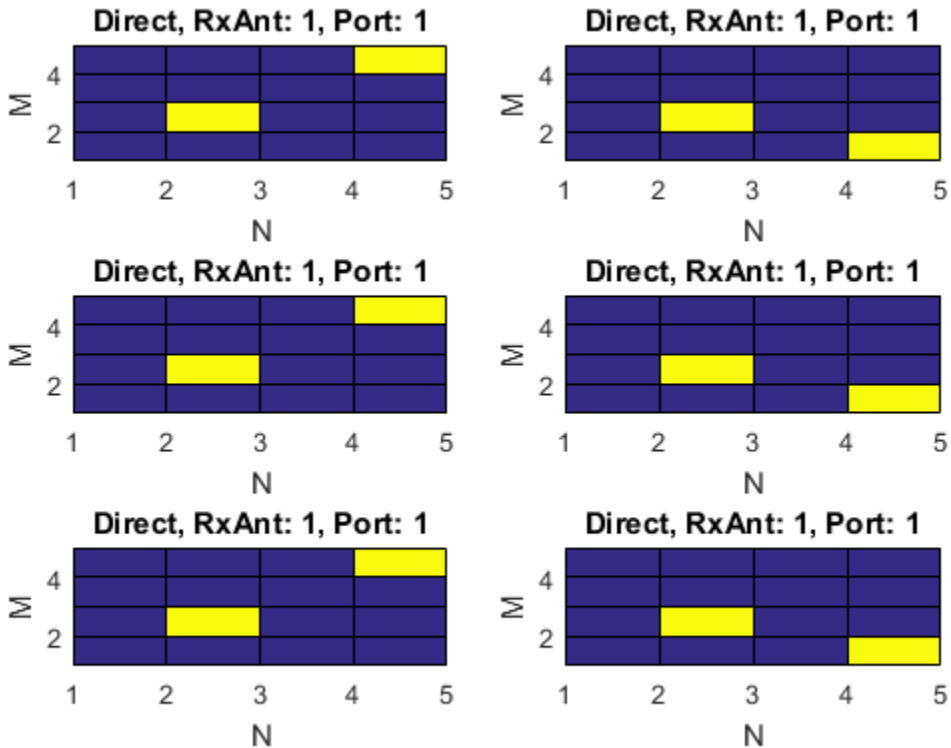

Extract Cell-Specific Reference Signal (CRS) Symbols

Use 'direct' and 'allplanes' extraction methods and subscript indices to extract cell-specific reference signal (CRS) symbols in subcarrier 7 from grid.

Generate a resource grid and CRS indices in the subscript form: [subcarrier, OFDM symbol, CRS port].

```
enb = lteRMCDL('R.12');
enb.TotSubframes = 1;
enb.CellRefP = 2;
enb.PDSCH.NLayers = 2;
[waveform,grid] = lteRMCDLTool(enb,[1;0;0;1]);
crsInd = lteCellRSIndices(enb,'sub');
```

There are 2 resource elements used on CRS ports 1 & 2; all are on different OFDM symbols (1, 5, 8, 12).

```
crsIndSC7 = crsInd(crsInd(:,1)==7,:)
```

```
crsIndSC7 =
```

```

     7         1         1
     7         8         1
     7         5         2
     7        12         2

```

Use 'direct' method to extract resource elements. The extracted resource element indices are same as the generated CRS indices as the resource array indexed by `crsInd` in `grid`.

```
[dirREs,dirInd] = lteExtractResources(crsInd,grid,{'direct','sub'});
directIndSC7 = dirInd(dirInd(:,1)==7,:)
```

```
directIndSC7 =
```

```

     7         1         1
     7         8         1
     7         5         2
     7        12         2

```

Use 'allplanes' method to extract resource elements. There are 4 extracted CRS indices as per the CRS port on subcarrier 7. Indices addressing unique OFDM symbols in the indexed resource grid are used to extract resource elements from all the CRS ports in 'grid'. Therefore indices are extracted at OFDM symbols (1, 5, 8,12) on both CRS ports.

```
[apREs,apInd] = lteExtractResources(crsInd,grid,{'allplanes','sub'});
allPlanesIndSC7 = apInd(apInd(:,1)==7,:)
```

```
allPlanesIndSC7 =
```

```

     7         1         1
     7         8         1
     7         5         1
     7        12         1
     7         1         2

```

7	8	2
7	5	2
7	12	2

Input Arguments

ind — Resource elements indices

numeric array

Resource elements indices, specified as a numeric array. The indices address elements of a N -by- M -by- P resource array. M is the number of subcarriers, N is the number of OFDM or SC-FDMA symbols, and P is the number of planes.

grid — Resource array

3-D numeric array (default) | 4-D numeric array

Resource array, specified as a 3-D or 4-D numeric array. Typically the resource array to extract resource elements from in one of the following:

- A 3-D received grid, sized M -by- N -by- $NRxAnts$. $NRxAnts$ is the number of receive antennas. This grid is created after OFDM or SC-FDMA demodulation.
- A 4-D channel estimation grid, sized M -by- N -by- $NRxAnts$ -by- P . This grid is created by channel estimation functions (refer “Channel Estimation”).

You can describe the size of the 3D received grid as a 4D grid that has a trailing singleton dimension.

Data Types: `double`

opts — Resource elements extraction options

string | cell array of strings

Resource elements extraction options, specified as a string or cell array of strings. `opts` can contain the following values:

Parameter Field	Required or Optional	Values	Description
Indexing Style	Required	'ind' (default) or 'sub'	Indexing style of the specified or returned indices, <code>ind</code> and <code>reind</code> , specified as one of the following options:

Parameter Field	Required or Optional	Values	Description
			<ul style="list-style-type: none"> 'ind' — linear index form 'sub' — subscript form
Index Base	Required	'1based' (default) or '0based'	Base value of the specified or returned indices, <code>ind</code> and <code>reind</code> , specified as one of the following options: <ul style="list-style-type: none"> '1based' — the first value of index sequence is one '0based' — the first value of the index sequence is zero
Extraction Method	Required	'allplanes' (default) or 'direct'	Resource element extraction methods. The methods are described in “Algorithms” on page 1-284. <ul style="list-style-type: none"> 'allplanes' — uses indices addressing unique subcarrier and symbol location over all planes of the indexed resource array for extraction. 'direct' — only resource elements relevant to each plane of the indexed resource grid are extracted.

Output Arguments

re — Extracted resource elements

column vector | numeric array

Extracted resource elements, returned as a column vector or numeric array.

When 'allplanes' extraction method is used, the extracted resource elements array is of size NRE -by- $NR \times Ants$ -by- P where:

- NRE is the number of resource elements per M -by- N plane of `grid`.
- M is the number of subcarriers.

- N is the number of OFDM or SC-FDMA symbols.
- P is the number of planes.

When using 'direct' extraction method, the size of the extracted resource elements array, `re`, depends on the number of indices addressing each plane of the indexed source grid:

- If the same number of indices address each plane then `re` is of size NRE -by- $NRxAnts$ -by- P .
- If a different number of indices address each plane then `re` is a column vector containing all extracted resource elements.

reind — Indices of extracted resource elements

numeric array

Indices of extracted resource elements within `grid`, returned as numeric array. `reind` is the same size as extracted resource elements array `re`.

More About

Algorithms

`lteExtractResources` can extract resource elements using one of two methods. The 'allplanes' method is used by default. You can optionally specify 'direct' extraction method.


All Planes Extraction Method

The 'allplanes' method extracts resource elements from each M -by- N plane within `grid` using indices that address unique subcarrier and symbol locations over all the planes of the indexed resource array.


The following diagrams illustrate the resource extraction process for a 3D received grid and a 4D channel estimation grid. The example, “Extract Resources From 3D Receive Grid and 4D Channel Estimate Grid” on page 1-274 recreates these diagrams.

Indices addressed by unique subcarrier and symbol locations across all planes of the indexed resource grid are used for the extraction. The diagram highlights the indices

 
used to extract resource elements address the resource grid with $P = 2$. In this case, P is the number of antenna ports.

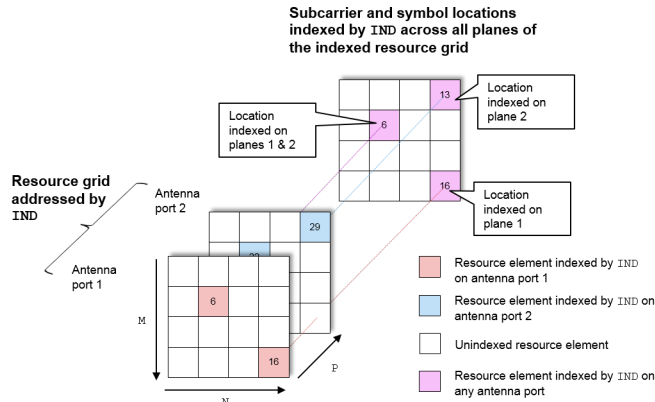

 Resource elements are extracted from **grid** at the symbol and subcarrier locations. The following diagrams illustrate the resource element extraction from a 3D received grid, **grid**, with $NRxAnts = 3$.

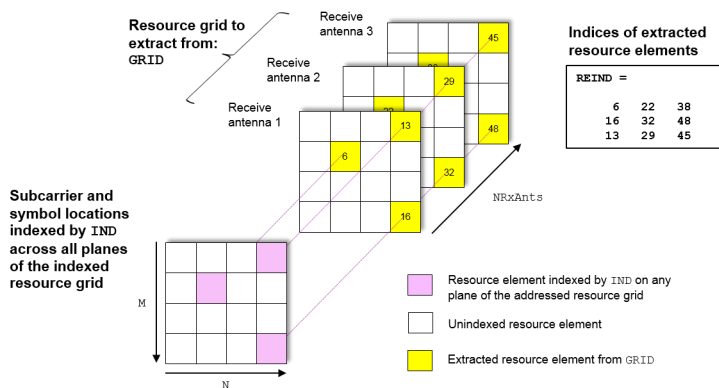

The following diagram shows the extraction process for a 4D channel estimate grid, **grid**, with $NRxAnts = 3$ and $P = 2$. In this case, P is the number for antenna ports. The 4D resource grid consists of P M -by- N -by- $NRxAnts$ arrays, each associated with an antenna port. Resource elements are extracted from all planes within these arrays.

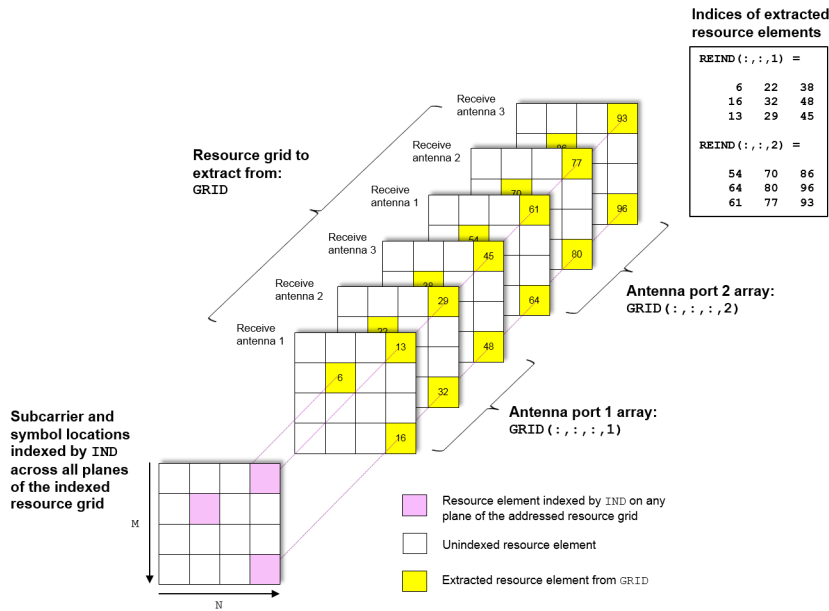 


Direct Extraction Method

The 'direct' method extracts resource elements from `grid` with the assumption that third and fourth dimension of the `grid` represents the same property as the planes of the indexed resource array such as antenna ports, layers, transmit antennas. Therefore the only resource elements relevant to each plane of the indexed resource grid are extracted:

- For a 3D `grid`, the 'direct' method extracts elements from each M -by- N plane of `grid` using indices addressing the same plane of the indexed resource array. This is the same as the standard MATLAB operation `re = grid(ind)`. Therefore `reind = ind`.
- For a 4D `grid`, the 'direct' method extracts elements from each M -by- N -by- $NRxAnts$ array of `grid` using indices addressing the same plane of the indexed resource array. Therefore it is assumed the property represented by the planes of the indexed resource array is the same as the fourth dimension of `grid`.

The extraction of a 4D estimation grid, `grid`, using the 'direct' method is illustrated in the following diagram with $NRxAnts = 3$ and $P = 2$, which is the number of antenna ports. The 4D resource grid consists of P M -by- N -by- $NRxAnts$ arrays, each associated

 with an antenna port. Therefore the indices corresponding to each individual antenna port in the indexed resource array are used to extract resource elements from each of these arrays. The example, “Extract Resources From 3D Receive Grid and 4D Channel Estimate Grid” on page 1-274 creates a version of this diagram.

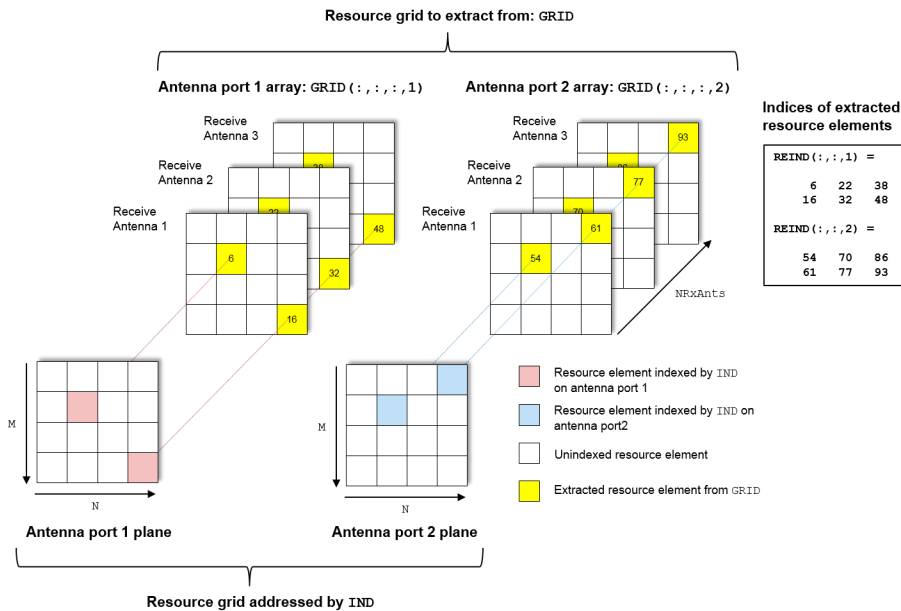

See Also

[lteCellRSIndices](#) | [lteDLChannelEstimate](#) | [lteDLResourceGrid](#) |
[lteOFDMDemodulate](#) | [ltePBCHDecode](#) | [ltePBCHIndices](#) | [ltePCFICHDecode](#) |
[ltePCFICHIndices](#) | [ltePDCCHDecode](#) | [ltePDCCHDecode](#) | [ltePDCCHIndices](#) |
[ltePDCCHIndices](#) | [ltePDSCHDecode](#) | [ltePDSCHIndices](#) | [ltePHICHDecode](#) |
[ltePHICHIndices](#) | [ltePUCCH1Decode](#) | [ltePUCCH1Indices](#) | [ltePUCCH2Decode](#) |
[ltePUCCH2Indices](#) | [ltePUCCH3Decode](#) | [ltePUCCH3Indices](#) | [ltePUSCHDecode](#) |
[ltePUSCHIndices](#) | [lteSCFDMADemodulate](#) | [lteULChannelEstimate](#) |
[lteULChannelEstimatePUCCH1](#) | [lteULChannelEstimatePUCCH2](#) |
[lteULChannelEstimatePUCCH3](#) | [lteULResourceGrid](#)

Introduced in R2014b

lteFadingChannel

Multipath fading MIMO channel propagation conditions

Syntax

```
[out,info] = lteFadingChannel(model,in)
```

Description

`[out,info] = lteFadingChannel(model,in)` implements the MIMO multipath fading channel model, as specified in TS 36.101 [1] and TS 36.104 [2]. Each column of the input matrix, `in`, corresponds to the waveform at each of the transmit antennas. The transmitted waveform passes through the multipath Rayleigh fading channel model specified by the input structure `model`. The delay profile of `model` is resampled to match the input signal sampling rate.

Examples

Transmit Two Consecutive Frames over Fading Channel

The first frame is transmitted at time $t = 0$ sec. Hence the channel is initialized with `InitTime` parameter of 0 sec. The second frame is transmitted at time $t = 10$ msec, hence the channel fading process has to be initialized to that value. This guarantees continuity of the fading process between the end of the first frame and the beginning of the second.

Initialize a resource grid to RMC R.10 and generate a transmit waveform for first frame. Initialize propagation channel configuration structure and set the start time for first frame. Pass first frame through the channel.

```
rmc = lteRMCDL('R.10');  
[txWaveform,txGrid,info] = lteRMCDLTool(rmc,[1;0;1]);  
  
chcfg.DelayProfile = 'EPA';  
chcfg.NRxAnts = 1;  
chcfg.DopplerFreq = 5;  
chcfg.MIMOCorrelation = 'Low';  
chcfg.SamplingRate = info.SamplingRate;
```

```

chcfg.Seed = 1;
chcfg.InitPhase = 'Random';
chcfg.ModelType = 'GMEDS';
chcfg.NTerms = 16;
chcfg.NormalizeTxAnts = 'On';
chcfg.NormalizePathGains = 'On';

chcfg.InitTime = 0;

rxWaveform = lteFadingChannel(chcfg,txWaveform);

```

Update frame number and generate a transmit waveform for second frame. Set the start time for second frame to 10 msec. Pass second frame through the channel.

```

rmc.NFrame = 1;
[txWaveform,txGrid] = lteRMCDLTool(rmc,[1;0;1]);

chcfg.InitTime = 10e-3;
rxWaveform = lteFadingChannel(chcfg,txWaveform);

```

Input Arguments

model — Multipath fading channel model

structure

Multipath fading channel model, specified as a structure. **model** must contain the following fields.

Parameter Field	Required or Optional	Values	Description
NRxAnts	Required	Positive scalar integer	Number of receive antennas
MIMOCorr	Required	'Low', 'Medium', 'UplinkMedium', 'High', 'Custom'	Correlation between UE and eNodeB antennas <ul style="list-style-type: none"> 'Low' correlation is equivalent to no correlation between antennas. 'Medium' correlation level is applicable to tests defined in TS 36.101 [2]

Parameter Field	Required or Optional	Values	Description
			<ul style="list-style-type: none"> 'UplinkMedium' correlation level is applicable to tests defined in TS 36.104 [2].
Normalize	Optional	'On' (default), 'Off'	<p>Transmit antenna number normalization, specified as a string.</p> <ul style="list-style-type: none"> 'On', <code>lteFadingChannel</code> normalizes the model output by $1/\sqrt{P}$, where P is the number of transmit antennas. Normalization by the number of transmit antennas ensures that the output power per receive antenna is unaffected by the number of transmit antennas. 'Off', normalization is not performed.
DelayProfile	Required	'EPA', 'EVA', 'ETU', 'Custom', 'Off'	<p>Delay profile model.</p> <p>Setting <code>DelayProfile</code> to 'Off' switches off fading completely and implements a static MIMO channel model. In this case, the antenna geometry corresponds to the number of transmit antennas (that is, the number of columns in the input <code>in</code>), the number of receive antennas, <code>model.NRxAnts</code>, and the MIMO correlation, <code>model.MIMOCorrelation</code>. The temporal part of the model for each link between transmit and receive antennas consists of a single path with zero delay and constant unit gain.</p>

Parameter Field	Required or Optional	Values	Description
The following fields are required or optional (as indicated) when <code>DelayProfile</code> is set to a value other than 'Off'.			
Doppler	Required	Scalar value	Maximum <i>Doppler</i> frequency, in Hertz.
Samplin	Required	Numeric scalar	Input signal sampling rate, the rate of each sample in the rows of the input matrix, <i>in</i>
InitTim	Required	Numeric scalar	Fading process time offset, in seconds.
NTerms	Optional	16 (default) scalar power of 2	Number of oscillators used in fading path modeling.
ModelTy	Optional	'GMEDS' (default), 'Dent'	<p>Rayleigh fading model type.</p> <ul style="list-style-type: none"> 'GMEDS', the Rayleigh fading is modeled using the Generalized Method of Exact Doppler Spread (GMEDS), as described in [4]. 'Dent', the Rayleigh fading is modeled using the modified Jakes fading model described in [3]. <p>Note: <code>ModelType = 'Dent'</code> is not recommended. Use <code>ModelType = 'GMEDS'</code> instead.</p>
Normali	Optional	'On' (default), 'Off'	<p>Model output normalization.</p> <ul style="list-style-type: none"> 'On', the model output is normalized such that the average power is unity. 'Off', the average output power is the sum of the powers of the taps of the delay profile.

Parameter Field	Required or Optional	Values	Description
InitPhase	Optional	'Random' (default), scalar value (in Radians), or a numeric array	<p>Phase initialization for the sinusoidal components of the model, may be set as follows:</p> <ul style="list-style-type: none"> the string 'Random', the phases are randomly initialized according to Seed. a scalar value, assumed to be in radians, is used to initialize the phases of all components. an N-by-L-by-P-by-$NR \times Ants$ numeric array, used to explicitly initialize the phase in radians of each component. In this case, N is the number of phase initialization values per path, L is the number of paths, P is the number of transmit antennas, and $NR \times Ants$ is the number of receive antennas. <hr/> <p>Note:</p> <ul style="list-style-type: none"> When ModelType is set to 'GMEDS', $N = 2 \times NTerms$. When ModelType is set to 'Dent', $N = NTerms$.
<p>The following field is required when DelayProfile is set to a value other than 'Off' and InitPhase is set to 'Random'.</p>			

Parameter Field	Required or Optional	Values	Description
Seed	Required	Scalar value	<p>Random number generator seed. To use a random seed, set Seed to zero.</p> <hr/> <p>Note: To produce distinct results, use Seed values in the range</p> $0 \dots 2^{31} - 1 - \left(\frac{K(K-1)}{2}\right)$ <p>Where $K = P \times \text{model.NRxAnts}$, the product of the number of transmit and receive antennas. Seed values outside of this recommended range should be avoided as they may result in random sequences that repeat results produced using Seed values inside the recommended range.</p>
The following fields are required when DelayProfile is set to 'Custom'.			
Average	Required	Vector	Average gains of the discrete paths, expressed in dB.
PathDel	Required	Vector	Delays of the discrete paths, expressed in seconds. This vector must have the same size as AveragePathGaindB .
The following fields are required when MIMOCorrelation is set to 'Custom'.			
TxCorre	Required	Matrix	Correlation between each of the transmit antennas, specified as a P -by- P complex matrix.
RxCorre	Required	Matrix	Correlation between each of the receive antennas, specified as a complex matrix of size NRxAnts -by- NRxAnts .

Data Types: struct

in — Input samples

numeric matrix

Input samples, specified as a numeric matrix of size T -by- P . Where P is the number of transmit antennas and T is the number of time-domain samples. Each column of **in** corresponds to the waveform at each of the transmit antennas.

Data Types: double | single

Complex Number Support: Yes

Output Arguments

out — Channel output signal

numeric matrix

Channel output signal, returned as a numeric matrix. Each column of **out** corresponds to the waveform at each of the receive antennas. **out** has the same number of rows as the input, **in**.

Data Types: double | single

Complex Number Support: Yes

info — Channel modeling information

structure

Channel modeling information, returned as a structure. **info** contains the following fields.

Parameter Field	Values	Description
ChannelFilterDelay	Scalar value	The implementation delay of the internal channel filtering
PathGains	Numeric array	Complex gain of the discrete channel paths specified as a numeric array of size T -by- L -by- P -by- $NR \times Ants$. Where T is the number of output samples, L is the number of paths, P is the number of transmit antennas, and $NR \times Ants$ is the number of receive antennas

Parameter Field	Values	Description
PathSampleDelays	Row vector	Delays of the discrete channel paths. The delays are expressed in samples at the sampling rate specified in <code>model.SamplingRate</code> .

Data Types: `struct`

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] Dent, P., G. E. Bottomley, and T. Croft. “Jakes Fading Model Revisited.” *Electronics Letters*. Vol. 29, 1993, Number 13, pp. 1162–1163.
- [4] Pätzold, Matthias, Cheng-Xiang Wang, and Bjørn Olav Hogstad. “Two New Sum-of-Sinusoids-Based Methods for the Efficient Generation of Multiple Uncorrelated Rayleigh Fading Waveforms.” *IEEE Transactions on Wireless Communications*. Vol. 8, 2009, Number 6, pp. 3122–3131.

See Also

`lteDLPerfectChannelEstimate` | `lteHSTChannel` | `lteMovingChannel` | `lteOFDMModulate` | `lteSCFDMAModulate`

Introduced in R2013b

lteFrequencyCorrect

Frequency offset correction

Syntax

```
out = lteFrequencyCorrect(cfg,in,foffset)
```

Description

`out = lteFrequencyCorrect(cfg,in,foffset)` corrects for a specified frequency offset, `foffset`, in the time-domain waveform, `in`, by performing simple frequency modulation (FM). The parameters of the waveform, `in`, are specified in a settings structure, `cfg`, which must contain either the field `NDLRB` or `NULRB` to control whether a downlink or uplink signal is expected in `in`.

The input, `foffset` is the frequency offset, in hertz, present on the waveform, `in`. Therefore, the correction applied is FM modulation by `-foffset`.

Examples

Correct for Specified Frequency Offset

Perform frequency offset estimation and correction on an uplink signal, to which a frequency offset has been applied.

Generate uplink RMC A3-2.

```
[txWaveform,rgrid,cfg] = lteRMCULTool('A3-2',[1;0;0;1],'Fdd',2);
```

Apply an arbitrary frequency offset of 51.2 Hz.

```
t = (0:length(txWaveform)-1) ./ cfg.SamplingRate;  
txWaveform = txWaveform .* exp(1i*2*pi*51.2*t);
```

Estimate and display the frequency offset.

```
offset = lteFrequencyOffset(cfg,txWaveform);
fprintf('Frequency offset: %0.2fHz\n',offset);
```

Frequency offset: 51.20Hz

Correct for the frequency offset.

```
rxWaveform = lteFrequencyCorrect(cfg,txWaveform,offset);
```

Finally, perform SC-FDMA demodulation.

```
rxGrid = lteSCFDMADemodulate(cfg,rxWaveform);
```

Input Arguments

cfg — Waveform parameter settings

structure

Waveform parameter settings, specified as a structure. **cfg** must contain either the field **NDLRB**, to specify a downlink configuration, or the field **NULRB**, to specify an uplink configuration.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Positive scalar integer	Number of downlink (DL) resource blocks (RBs) You must set this parameter field to specify a downlink configuration.
CyclicPre	Required	'Normal' (default), 'Extended'	Cyclic prefix length in the downlink Only set this parameter field if you are specifying a downlink configuration.
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs) You must set this parameter field to specify a uplink configuration.

Parameter Field	Required or Optional	Values	Description
CyclicPre	Required	'Normal' (default), 'Extended'	Uplink cyclic prefix length. Only set this parameter field if you are specifying an uplink configuration.

Data Types: `struct`

in — Time-domain waveform

numeric column vector

Time-domain waveform, specified as a numeric column vector.

Data Types: `double` | `single`

Complex Number Support: Yes

offset — Waveform frequency offset

scalar value

Waveform frequency offset, specified as a scalar value expressed in Hertz. The correction applied to `in` is FM modulation by `-offset`.

Data Types: `double`

Output Arguments

out — Offset-corrected waveform

numeric column vector

Offset-corrected waveform, returned as a numeric column vector.

Data Types: `double` | `single`

Complex Number Support: Yes

See Also

`lteCellSearch` | `lteDLFrameOffset` | `lteFrequencyOffset` | `lteOFDMDemodulate` | `lteSCFDMADemodulate` | `lteULFrameOffset`

Introduced in R2014a

lteFrequencyOffset

Frequency offset estimation using cyclic prefix

Syntax

```
foffset = lteFrequencyOffset(cfgdl,waveform)
foffset = lteFrequencyOffset(cfgul,waveform)
[foffset, corr] = lteFrequencyOffset( ___ )
[foffset, corr] = lteFrequencyOffset( ___,toffset)
```

Description

`foffset = lteFrequencyOffset(cfgdl,waveform)` estimates the average frequency offset, `foffset`, of the time-domain waveform, `waveform`, by calculating correlation of the cyclic prefix. The parameters of `waveform` are given in the downlink settings structure, `cfgdl`. `cfgdl` must contain the field `NDLRB` to specify that a downlink signal is expected in `waveform`.

`foffset = lteFrequencyOffset(cfgul,waveform)` estimates the average frequency offset, `foffset`, of the time-domain waveform, `waveform`, by calculating correlation of the cyclic prefix. The parameters of `waveform` are given in the uplink settings structure, `cfgul`. `cfgul` must contain the field `NULRB` to specify that an uplink signal is expected in `waveform`.

`[foffset, corr] = lteFrequencyOffset(___)` also returns a complex matrix, `corr`, spanning one slot and containing the same number of antennas, or columns, as `waveform`. `corr` is the signal used to extract the timing of the correlation for the estimation of the frequency offset.

`[foffset, corr] = lteFrequencyOffset(___,toffset)` provides control over the position in the correlator output used to estimate the frequency offset. When present `toffset` is the timing offset in samples from the start of the correlator output to the position used for the frequency offset estimation. This input allows a timing offset to be calculated externally on a signal of longer duration than the input `waveform`. Which allows a short-term frequency offset estimate to be obtained while retaining the benefit of a longer-term timing estimate.

Note: If `toffset` is absent, the quality of the internal timing estimate is subject to the length and signal quality of the input `waveform` and, therefore, it may result in inaccurate frequency offset measurements.

Examples

Estimate Frequency Offset

Perform frequency offset estimation and correction on an uplink signal, to which a frequency offset has been applied.

Generate uplink RMC A3-2.

```
[txWaveform,rgrid,cfg] = lteRMCULTool('A3-2',[1;0;0;1],'Fdd',2);
```

Apply an arbitrary frequency offset of 51.2 Hz.

```
t = (0:length(txWaveform)-1) ./ cfg.SamplingRate;  
txWaveform = txWaveform .* exp(1i*2*pi*51.2*t);
```

Estimate and display the frequency offset.

```
offset = lteFrequencyOffset(cfg,txWaveform);  
fprintf('Frequency offset: %0.2fHz\n',offset);
```

```
Frequency offset: 51.20Hz
```

Correct for frequency offset.

```
rxWaveform = lteFrequencyCorrect(cfg,txWaveform,offset);
```

Perform SC-FDMA demodulation.

```
rxGrid = lteSCFDMADemodulate(cfg,rxWaveform);
```

Input Arguments

cfgd1 — Downlink configuration

structure

Downlink configuration, specified as a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
The following apply when DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
NSubframe	Optional	Nonnegative scalar integer	Subframe number

Data Types: struct

cfgu1 – Uplink configuration

structure

Uplink configuration, specified as a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
The following apply when DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
NSubframe	Optional	Nonnegative scalar integer	Subframe number

Data Types: `struct`

waveform — Input time-domain waveform

numeric column vector

Input time-domain waveform, specified as a numeric column vector.

Data Types: `double` | `single`

Complex Number Support: Yes

toffset — Timing offset

scalar value

Timing offset, specified as a scalar value expressed in samples. Use `TOFFSET` to control the position in the correlator output used to estimate the frequency offset. If `TOFFSET` is absent, or empty, the position of the peak magnitude of the correlator output is used.

Data Types: `double` | `single`

Output Arguments

foffset — Average frequency offset estimate

scalar value

Average frequency offset estimate, returned as a scalar value expressed in hertz.

Data Types: `double` | `single`

corr — Correlation timing signal

numeric matrix

Correlation timing signal, returned as a numeric matrix. `corr` is a complex matrix that spans 1 slot and contains the same number of antennas, or columns, as `waveform`. It is the signal used to extract the timing of the correlation for the frequency offset estimation.

Data Types: `double` | `single`

Complex Number Support: Yes

See Also

`lteCellSearch` | `lteDLFrameOffset` | `lteFrequencyCorrect` |
`lteOFDMDemodulate` | `lteSCFDMADemodulate` | `lteULFrameOffset`

Introduced in R2014a

lteHSTChannel

High-speed train MIMO channel propagation conditions

Syntax

```
out = lteHSTChannel(model,in)
```

Description

`out = lteHSTChannel(model,in)` implements the high-speed train (HST) MIMO channel model specified in TS 36.101 [1] and TS 36.104 [2]. The high-speed train propagation condition is composed of a non-fading single path of unit amplitude and zero phase with a changing Doppler shift. The columns of matrix `in` correspond to the channel input waveforms at each transmit antenna. The channel model filters `in` with the characteristics specified in structure `model`. The matrix `out` stores the filtered waveform. Each column of `out` corresponds to the waveform at one of the receive antennas.

Examples

Model High-Speed Train Propagation Channel

Generate a frame and filter it with the high-speed train channel model.

```
rmc = lteRMCDL('R.10');  
[txWaveform,txGrid,info] = lteRMCDLTool(rmc,[1;0;1]);  
chcfg.NRxAnts = 1;  
chcfg.Ds = 100;  
chcfg.Dmin = 500;  
chcfg.Velocity = 350;  
chcfg.DopplerFreq = 5;  
chcfg.SamplingRate = info.SamplingRate;  
chcfg.InitTime = 0;  
rxWaveform = lteHSTChannel(chcfg,txWaveform);
```

Warning: Using default value for parameter field NormalizeTxAnts (On)

To suppress 'Using default value ...' warnings for LTE parameters, execute `lteWarning('off','DefaultValue')` in your MATLAB® command window prior to running code or initialize the parameters in your code workspace.

Input Arguments

model — High-speed train propagation channel model

structure

High-speed train propagation channel model, specified as a structure. `model` must contain the following fields.

Parameter Field	Required or Optional	Values	Description
NRxAnts	Required	Positive scalar integer	Number of receive antennas
Ds	Required	Numeric scalar	Train-to-eNodeB double initial distance, in meters. Ds/2 is initial distance between train and eNodeB, in meters
Dmin	Required	Scalar value	eNodeB to railway track distance, in meters
Velocity	Required	Scalar value	Train velocity, in kilometers per hour
DopplerFr	Required	Scalar value	Maximum <i>Doppler</i> frequency, in Hertz.
SamplingF	Required	Scalar value	Input signal sampling rate, the rate of each sample in the rows of the input matrix, <i>in</i>
InitTime	Required	Scalar value	<i>Doppler</i> shift timing offset, in seconds
Normalize	Optional	'On' (default), 'Off'	Transmit antenna number normalization, specified as a string. <ul style="list-style-type: none"> 'On', <code>lteHSTChannel</code> normalizes the model output

Parameter Field	Required or Optional	Values	Description
			by $1/\sqrt{P}$, where P is the number of transmit antennas. Normalization by the number of transmit antennas ensures that the output power per receive antenna is unaffected by the number of transmit antennas. <ul style="list-style-type: none"> 'Off', normalization is not performed.

Data Types: `struct`

in — Channel input waveforms at transmit antennas

numeric matrix

Channel input waveforms at transmit antennas, specified as a numeric matrix. `in` has size T -by- P , where P is the number of antennas and T is the number of time-domain samples. These waveforms are filtered with the high-speed train channel model with the Doppler shift as specified in parameter structure `model`.

Data Types: `double` | `single`

Complex Number Support: Yes

Output Arguments

out — Filtered waveform

numeric matrix

Filtered waveform, returned as a numeric matrix. Each column of `out` corresponds to the waveform at one of the receive antennas.

Data Types: `double` | `single`

Complex Number Support: Yes

References

[1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access*

Network; Evolved Universal Terrestrial Radio Access (E-UTRA). URL: <http://www.3gpp.org>.

- [2] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteFadingChannel | lteMovingChannel | lteOFDMDemodulate |
lteSCFDMADemodulate

Introduced in R2013b

lteLayerDemap

Layer demapping onto scrambled and modulated codewords

Syntax

```
out = lteLayerDemap(in,ncw)
out = lteLayerDemap(in,ncw,txscheme)
out = lteLayerDemap(chs,in)
```

Description

`out = lteLayerDemap(in,ncw)` performs the layer demapping required to undo the processing described in TS 36.211, Sections 5.3.2A and 6.3.3 [1]. The function returns `out`, a cell array containing one, or two vectors of modulation symbols, one for each codeword. The function demaps the NU layers specified in the M -by- NU matrix `in` into `ncw` codewords using 'Port0' transmission scheme if $NU = 1$ and 'SpatialMux' transmission scheme otherwise.

`out = lteLayerDemap(in,ncw,txscheme)` performs the layer demapping using the transmission scheme, `txscheme`.

`out = lteLayerDemap(chs,in)` demaps the NU layers specified in the M -by- NU matrix `in` into codeword vectors `out`, according to the parameters specified in the channel transmission configuration structure, `chs`.

The number of codewords is established from the number of modulation formats in the `Modulation` field. This value enables you to return the correct number of codewords when using `chs` specified in `ltePDSCH` or `ltePUSCH` on the transmit side. Alternatively, you can specify the number of codewords directly in the `NCodewords` field. The `NCodewords` field takes precedence if present.

Examples

Demap Codeword for Transmit Diversity

Map a codeword onto four symbols for 'TxDiversity' transmission scheme. Recover the codeword by demapping the four layers onto one codeword.


```

nCodewords = 1;
codeword = ones(16,1);
nLayers = 4;
txScheme = 'TxDiversity';

layerMap = lteLayerMap(codeword,nLayers,txScheme);

out = lteLayerDemap(layerMap,nCodewords,txScheme);

```

Input Arguments

in — Modulation symbols

numeric matrix

Modulation symbols, specified as an M -by- NU numeric matrix consisting of M modulation symbols for NU transmission layers. You can generate this matrix by `lteDLDeprecode` or `ltePUSCHDeprecode`.

Data Types: double

Complex Number Support: Yes

ncw — Number of codewords

1 | 2

Number of codewords, specified as 1 or 2.

Data Types: double

txscheme — Transmission scheme

'Port0' (default) | 'TxDiversity' | 'CDD' | 'SpatialMux' | 'MultiUser' | 'Port5' | 'Port7-8' | 'Port8' | 'Port7-14'

Transmission scheme, specified as one of the following options.

- 'SpatialMux' — Closed-loop spatial multiplexing.
- 'Port0' — Single-antenna port, port 0.
- 'TxDiversity' — Transmit diversity scheme.
- 'CDD' — Large delay CDD scheme.
- 'MultiUser' — Multiuser MIMO scheme.
- 'Port5' — Single-antenna port, port 5.

- 'Port7-8' — Single-antenna port, port 7 (**NLayers** = 1). Dual layer transmission, ports 7 and 8 (**NLayers** = 2).
- 'Port8' — Single-antenna port, port 8.
- 'Port7-14' — Up to 8-layer transmission, ports 7–14.

Data Types: char

chs — Channel-specific transmission configuration structure

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
TxScheme	Optional	'Port0' (default), 'TxDiversity', 'CDD', 'SpatialMux' (default), 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	<p>Transmission scheme, specified as one of the following options.</p> <ul style="list-style-type: none"> • 'SpatialMux' — Closed-loop spatial multiplexing. • 'Port0' — Single-antenna port, port 0. • 'TxDiversity' — Transmit diversity scheme. • 'CDD' — Large delay CDD scheme. • 'MultiUser' — Multiuser MIMO scheme. • 'Port5' — Single-antenna port, port 5. • 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). • 'Port8' — Single-antenna port, port 8. • 'Port7-14' — Up to 8-layer transmission, ports 7–14.

Parameter Field	Required or Optional	Values	Description
Also specify one of these fields:			
Modulation	Required if NCodewords is not set	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
NCodewords	Required if Modulation is not set	1, 2	Number of codewords

Output Arguments

out — Modulation symbols

cell array of one or two vectors

Modulation symbols, specified as a cell array of one or two vectors. The cell array contains one or two vectors of symbols, one for each codeword.

Data Types: `cell`

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLDeprecode` | `lteLayerMap` | `ltePHICHDeprecode` | `ltePUSCHDeprecode` | `lteSymbolDemodulate` | `lteULDeprecode`

Introduced in R2014a

lteLayerMap

Layer mapping of modulated and scrambled codewords

Syntax

```
out = lteLayerMap(in,nu)
out = lteLayerMap(in,nu,txscheme)
out = lteLayerMap(chs,in)
```

Description

`out = lteLayerMap(in,nu)` performs layer mapping of codeword or codewords, `in`, onto `nu` layers. It carries out the layer mapping according to Section 5.3.2A and 6.3.3 of [1]. The function returns an M -by- nu matrix consisting of the modulation symbols for transmission upon `nu` layers. These transmission layers are formed by multiplexing the modulation symbols from either one or two codewords. The overall operation of the layer mapper is the transpose of that defined in the specification. In other words, the symbols for layers lie in columns rather than rows.

`out = lteLayerMap(in,nu,txscheme)` performs layer mapping using the transmission scheme, `txscheme`.

`out = lteLayerMap(chs,in)` performs layer mapping of codeword or codewords, `in`, according to the parameters in the channel transmission configuration structure, `chs`.

Examples

Map Codeword for Transmit Diversity

Map one codeword to four layers for the transmit diversity transmission scheme.

```
out1 = lteLayerMap(ones(40,1),4,'TxDiversity');
size(out1)
```

```
10     4
```

Map Codeword for Spatial Multiplexing

Map one codeword to four layers for the spatial multiplexing transmission scheme.

```
out2 = lteLayerMap(ones(40,1),4);
size(out2)
```

```
10     4
```

Input Arguments

in — Scrambled and modulated codeword or codewords

numeric vector | cell array of numeric vectors

Scrambled and modulated codeword or codewords, specified as a numeric vector or a cell array of numeric vectors. As a cell array, **in** contains one or two vectors of modulation symbols that result from the scrambling and modulation of DL-SCH or UL-SCH codewords.

nu — Number of transmission layers

1,...,8

Number of transmission layers, specified as a positive scalar integer between 1 and 8.

Data Types: double

txscheme — Transmission scheme

'Port0' (default) | 'TxDiversity' | 'CDD' | 'SpatialMux' | 'MultiUser' | 'Port5' | 'Port7-8' | 'Port8' | 'Port7-14'

Transmission scheme, specified as one of the following option strings.

- 'Port0' — Single-antenna port, port 0. Default if **NLayers** is 1.
- 'TxDiversity' — Transmit diversity scheme
- 'CDD' — Large delay CDD scheme
- 'SpatialMux' — Closed-loop spatial multiplexing. Default if **NLayers** is not 1.
- 'MultiUser' — Multiuser MIMO scheme

- 'Port5' — Single-antenna port, port 7, if NLayers is 1. Dual layer transmission, port 7 and 8, if NLayers is 2.
- 'Port7-8' — Single-antenna port, port 0
- 'Port8' — Single-antenna port, port 8
- 'Port7-14' — Up to 8-layer transmission, ports 7–14

Data Types: char

chs — Channel-specific transmission configuration

structure

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
NLayers	Required	1, ..., 8	Number of transmission layers
TxScheme	Optional	'Port0' (default), 'TxDiversity', 'CDD', 'SpatialMux' (default), 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	<p>Transmission scheme, specified as one of the following option strings.</p> <ul style="list-style-type: none"> • 'Port0' — Single-antenna port, port 0. Default if NLayers is 1. • 'TxDiversity' — Transmit diversity scheme • 'CDD' — Large delay CDD scheme • 'SpatialMux' — Closed-loop spatial multiplexing. Default if NLayers is not 1. • 'MultiUser' — Multiuser MIMO scheme • 'Port5' — Single-antenna port, port 7, if NLayers is 1. Dual layer transmission, port 7 and 8, if NLayers is 2. • 'Port7-8' — Single-antenna port, port 0 • 'Port8' — Single-antenna port, port 8 • 'Port7-14' — Up to 8-layer transmission, ports 7–14

Output Arguments

out — Modulation symbols

numeric matrix

Modulation symbols, returned as a numeric matrix. **out** is an M -by- nu matrix consisting of the modulation symbols for transmission upon nu layers.

Data Types: `double`

Complex Number Support: Yes

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLPrecode` | `lteLayerDemap` | `ltePHICHPrecode` | `ltePUSCHPrecode` | `lteSymbolModulate` | `lteULPrecode`

Introduced in R2014a

lteMCS

Modulation and code scheme lookup

Use `lteMCS` to look up the Modulation and Coding Scheme (MCS) information as defined by MCS index mapping to modulation and TBS index tables in TS 36.213 Tables 7.1.7.1–1, 7.1.7.1-1A, and Table 8.6.1-1 [1].

Syntax

```
[itbs,mod,rv]=lteMCS()  
[itbs,mod,rv]=lteMCS(imcs)  
  
[itbs,mod,rv]= lteMCS(table)  
[itbs,mod,rv]=lteMCS(imcs,table)
```

Description

`[itbs,mod,rv]=lteMCS()` returns the MCS information for the PDSCH for all 32 `imcs` entries in TS 36.213, Table 7.1.7.1-1 [1].

`[itbs,mod,rv]=lteMCS(imcs)` returns the MCS information for the PDSCH for one or more rows of the TS 36.213, Table 7.1.7.1-1 [1] as specified by the `imcs` vector.

`[itbs,mod,rv]= lteMCS(table)` returns the MCS information associated with `table` specified. TS 36.213 [1] defines MCS index mapping to modulation and TBS index for:

- PDSCH in Table 7.1.7.1-1
- Table 2 for PDSCH in Table 7.1.7.1-1A
- PUSCH in Table 8.6.1-1

The columns of the indexed MCS table entries are returned as separate outputs given by the transport block size index `itbs` (0,...,33), modulation type `mod` ('QPSK','16QAM','64QAM','256QAM') and in the case of PUSCH, the redundancy version index `rv`. Reserved values of `itbs` are returned as NaN and reserved values of `mod` are returned as the empty string. The `rv` index is not defined in the PDSCH tables and this value is set to 0 in these cases.

`[itbs,mod,rv]=lteMCS(imcs,table)` returns one or more rows of the specified `table` as indicated in the vector `imcs`. The values of `imcs` must be in the range 0, ..., 31. If `imcs = -1`, the function interprets the value as a discontinuous transmission (DTX), indicating no data should be sent. See TS 36.101, Annex A.4 [2]. For `imcs = -1`, values of `itbs = -1` (for which `lteTBS` yields `tbs = 0`) and `mod = 'QPSK'` are returned. For convenience, if `imcs` is scalar then `mod` is returned as a single string rather than a single element cell array of strings.

Examples

Return the Transport Block Size Modulation Order

Return the Transport Block Size index and modulation order for IMCS=17.

```
[ITBS,Modulation] = lteMCS(17)
```

```
ITBS =
```

```
    15
```

```
Modulation =
```

```
64QAM
```

Get MCS from PDSCH Table 2

Return the PDSCH transport block size index and modulation scheme for the set of indices `imcs = 20,...,27` used to configure a first transport block transmission with Release 12 256QAM modulation.

```
[ITBS,Modulation] = lteMCS(20:27,'PDSCHTable2')
```

```
ITBS =
```

```
    25    27    28    29    30    31    32    33
```

```
Modulation =
```

Columns 1 through 6

```
'256QAM' '256QAM' '256QAM' '256QAM' '256QAM' '256QAM'
```

Columns 7 through 8

```
'256QAM' '256QAM'
```

Input Arguments

imcs — Modeling and coding scheme indices

vector | 0, ..., 31 | -1

Modeling and coding scheme indices, specified as a vector of values in the range 0, ..., 31.

If `imcs = -1`, the function interprets the value as a discontinuous transmission (DTX) where `itbs = -1` and `mod = 'QPSK'`. If `imcs` is scalar, `mod` is returned as a single string instead of a single element cell array of strings.

Data Types: double

table — MCS index mapping table

string | 'PDSCH' | 'PDSCHTable2' | 'PUSCH'

MCS index mapping table, specified as a string, identifies the desired table from TS 36.213 [1]:

- 'PDSCH' indicates PDSCH, Table 7.1.7.1-1
- 'PDSCHTable2' indicates Table 2 for PDSCH, Table 7.1.7.1-1A.¹
- 'PUSCH' indicates PUSCH, Table 8.6.1-1

Output Arguments

itbs — Transport block size indices

column vector | 0,...,33 | -1

1. TS 36.213 [1], Table 7.1.7.1-1A was added in 3GPP Release 12.

Transport block size indices, returned as a column vector. If `imcs = -1`, the function interprets the value as a discontinuous transmission (DTX), where `itbs = -1`, for which `lteTBS` yields `tbs = 0`.

mod — Modulation orders

1-column cell array of strings | 'QPSK' | '16QAM' | '64QAM' | '256QAM'

Modulation orders, returned as a single column cell array of strings. `imcs = -1`, is interpreted as a discontinuous transmission (DTX), and the value of `mod= 'QPSK'`. If `imcs` is a scalar, `mod` is returned as a single string instead of a single element cell array of strings.

rv — Redundancy version

column vector | 0 | 1 | 2 | 3

Redundancy version, returned as a column vector, specified as (0, 1, 2, or 3), associated with specified `imcs` from TS 36.213, Table 8.6.1-1 [1].

References

- [1] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.101. “User Equipment (UE) radio transmission and reception” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLSCH` | `lteDLSCHDecode` | `lteTBS` | `lteULSCH` | `lteULSCHDecode`

Introduced in R2014b

lteMIB

Master information block encoding and decoding

Syntax

```
mib = lteMIB(enb)
enb = lteMIB(mib)
enb = lteMIB(mib,enb)
```

Description

`mib = lteMIB(enb)` allows encoding and decoding of the master information block (MIB) broadcast control channel (BCCH) message from cell-wide settings.

It creates the 24-bit-long MIB message, `mib`, from the fields of cell-wide settings structure, `enb`. See TS 36.331, Sections 5.2.1.1 and 6.2.2 [1] for further description of the MIB.

`enb = lteMIB(mib)` performs the inverse processing of the preceding syntax, taking as input the MIB message bits, `mib`, and creating the cell-wide settings structure, `enb`.

`enb = lteMIB(mib,enb)` includes in the `enb` output structure any fields contained in the `enb` input structure. For any of the fields already present in the input structure, the value decoded from the MIB replaces the existing value.

Note: Within the MIB, the system frame number (SFN) is stored as `floor(SFN/4)`. Therefore, when `enb` is created from an MIB bit sequence, `enb.NFrame` satisfies `mod(enb.NFrame,4)==0` and the frame number modulo 4 must be established by other means. For example, this can be done by using the `nfmod4` output of `ltePBCHDecode`.

Examples

Decode MIB Message Bits

This example shows decoding a set of master information block (MIB) message bits

Decode the MIB message bits in the column vector `mib`

```
mib = [0,1,0,0,1,0,1,1,0,0,1,1,1,1,0,0,0,0,0,0,0,0,0,0].';
enb = lteMIB(mib)
```

```
enb =
```

```
        NDLRB: 25
    PHICHDuration: 'Normal'
           Ng: 'One'
        NFrame: 828
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. `enb` can contain the following fields.

NDLRB — Number of downlink resource blocks

scalar value (6...110)

Number of downlink resource blocks, specified as a positive integer scalar value. `NDLRB` must be between 6 and 110.

Note: If `NDLRB` is a nonstandard bandwidth, not one of the set {6,15,25,50,75,100}, all ones are inserted into the first 3 bits, the *dl-Bandwidth* bit field, of the MIB message, `mib`.

Data Types: double

Ng — HICH group multiplier

'Sixth' (default) | Optional | 'Half' | 'One' | 'Two'

HICH group multiplier, specified as a string.

Data Types: char

NFrame — Frame number

0 (default) | Optional | nonnegative scalar integer

Frame number, specified as a nonnegative scalar integer.

Data Types: double

PHICHDuration — PHICH duration

'Normal' (default) | Optional | 'Extended'

PHICH duration, specified as a string.

Data Types: char

Data Types: struct

mib — MIB message bit sequence

24-bit column vector

MIB message bit sequence, specified as a 24-bit column vector.

Note: If the first 3 bits, the *dl-Bandwidth* bit field, of the MIB message do not contain the equivalent of a decimal between 0 and 5 (MSB first, corresponding to the RB set {6,15,25,50,75,100}), the returned NDLRB is 0.

Data Types: double | int8 | logical

Output Arguments

mib — MIB message

24-bit column vector

MIB message, returned as a 24-bit column vector.

Note: If the `enb.NDLRB` input parameter field is a nonstandard bandwidth, not one of the set {6,15,25,50,75,100}, the first 3 bits of `mib`, the *dl-Bandwidth* bit field, are all ones.

Data Types: int8

enb — Cell-wide settings created from MIB

structure

Cell-wide settings created from MIB, returned as a structure. `enb` contains the following fields.

NDLRB — Number of downlink resource blocks

nonnegative scalar integer

Number of downlink resource blocks, returned as a nonnegative scalar integer.

Note: If the first 3 bits, the *dl-Bandwidth* bit field, of the input MIB message, `mib`, do not contain the equivalent of a decimal between 0 and 5 (MSB first, corresponding to the RB set {6,15,25,50,75,100}), NDLRB is 0. The MIB message should have 24 bits. Longer messages are truncated to 24 elements, while shorter messages are zero padded.

Data Types: int32

PHICHDuration — PHICH duration

'Normal' | 'Extended'

PHICH duration, returned as a string.

Data Types: char

Ng — HICH group multiplier

'Sixth' | 'Half' | 'One' | 'Two'

HICH group multiplier, specified as a string.

Data Types: char

NFrame — Frame number

scalar value

Frame number, specified as a scalar value.

Data Types: int32

Data Types: struct

References

- [1] 3GPP TS 36.331. “Radio Resource Control (RRC); Protocol specification.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteBCH | lteBCHDecode

Introduced in R2014a

lteMovingChannel

Moving channel propagation conditions

Syntax

```
out = lteMovingChannel(model,in)
```

Description

`out = lteMovingChannel(model,in)` implements the moving propagation conditions specified in TS 36.104 [1]. The filtered waveform is stored in matrix `OUT`, where each column corresponds to the waveform at each of the receive antennas. The columns of matrix `in` correspond to the channel input waveforms at each transmit antenna. The input waveforms are filtered with the delay profiles as specified in the parameter structure `model`. The delay profiles are resampled to match the input signal sampling rate. The modeling process introduces delay on top of the channel group delay.

The time difference between the first multipath component and the reference time (assumed to be 0) follows a sinusoidal characteristic.

$$\Delta\tau = \frac{A}{2}(1 + \sin(\Delta\omega(t + t_0)))$$

Where the offset t_0 is

$$t_0 = \text{InitTime} + \frac{3\pi}{2(\Delta\omega)}$$

If `model.InitTime` is 0, the delay of the first multipath component is 0. If $t = 0$, $\Delta\tau = 0$. Relative delay between all multipath components is fixed.

Two moving propagation scenarios are specified in TS 36.104 [1], Annex B.4:

- Scenario 1 implements an extended typical urban with 200 Hz Doppler shift (ETU200) Rayleigh fading model with changing delays. The Rayleigh fading model can be modeled using two different methods as described in `model.ModelType`. For

Scenario 1, `model.InitTime` also controls the fading process timing offset. Changing this value produces parts of the fading process at different points in time.

- Scenario 2 consists of a single non-fading path with unit amplitude and zero phase degrees with changing delay. No AWGN is introduced internally in this model.

Examples

Model Moving Propagation Channel

Generate a frame and filter it with the LTE moving propagation channel.

```
rmc = lteRMCDL('R.10');
[txWaveform,txGrid,info] = lteRMCDLTool(rmc,[1;0;1]);
chcfg.Seed = 1;
chcfg.NRxAnts = 1;
chcfg.MovingScenario = 'Scenario1';
chcfg.SamplingRate = 100000;
chcfg.InitTime = 0;
rxWaveform = lteMovingChannel(chcfg,txWaveform);
```

```
Warning: Using default value for parameter field NormalizeTxAnts (On)
Warning: Using default value for parameter field ModelType (GMEDS)
Warning: Using default value for parameter field NTerms (16)
Warning: Using default value for parameter field NormalizePathGains (On)
```

To suppress 'Using default value ...' warnings for LTE parameters, execute `lteWarning('off','DefaultValue')` in your MATLAB® command window prior to running code or initialize the parameters in your code workspace.

Input Arguments

`model` — Moving channel model

structure

Moving channel model, specified as a structure. `model` must contain the following fields.

Parameter Field	Required or Optional	Values	Description
Seed	Required	Scalar value	Random number generator seed. To use a random seed, set Seed to zero.

Parameter Field	Required or Optional	Values	Description
			<p>Note: To produce distinct results, use Seed values in the range</p> $0 \dots 2^{31} - 1 - \binom{K(K-1)}{2}$ <p>Where $K = P \times \text{model.NRxAnts}$, the product of the number of transmit and receive antennas. Seed values outside of this recommended range should be avoided as they may result in random sequences that repeat results produced using Seed values inside the recommended range.</p>
NRxAnts	Required	Positive scalar integer	Number of receive antennas
MovingScenario	Required	'Scenario1', 'Scenario2'	Moving channel scenario
SamplingRate	Required	Numeric scalar	Input signal sampling rate, the rate of each sample in the rows of the input matrix, <i>in</i>
InitTime	Required	Scalar value	Fading process and timing adjustment offset, in seconds

Parameter Field	Required or Optional	Values	Description
Normalize	Optional	'On' (default), 'Off'	<p>Transmit antenna number normalization, specified as a string.</p> <ul style="list-style-type: none"> 'On', <code>lteFadingChannel</code> normalizes the model output by $1/\sqrt{P}$, where P is the number of transmit antennas. Normalization by the number of transmit antennas ensures that the output power per receive antenna is unaffected by the number of transmit antennas. 'Off', normalization is not performed.
<p>The following fields are required or optional (as indicated) only if <code>MovingScenario</code> is set to 'Scenario1'.</p>			
NTerms	Optional	16 (default) scalar power of 2	Number of oscillators used in fading path modeling.
ModelType	Optional	'GMEDS' (default), 'Dent'	<p>Rayleigh fading model type.</p> <ul style="list-style-type: none"> 'GMEDS', the Rayleigh fading is modeled using the Generalized Method of Exact Doppler Spread (GMEDS), as described in [3]. 'Dent', the Rayleigh fading is modeled using the modified Jakes fading model described in [2] <p>Note: <code>ModelType = 'Dent'</code> is not recommended. Use <code>ModelType = 'GMEDS'</code> instead.</p>

Parameter Field	Required or Optional	Values	Description
Normali	Optional	'On' (default), 'Off'	Model output normalization. <ul style="list-style-type: none"> 'On', the model output is normalized such that the average power is unity. 'Off', the average output power is the sum of the powers of the taps of the delay profile.

Data Types: `struct`

in — Input samples

numeric matrix

Input samples, specified as a numeric matrix. `in` has size T -by- P , where P is the number of transmit antennas and T is the number of time-domain samples. These waveforms are filtered with the delay profiles as specified in the parameter structure `model`. These delay profiles are resampled to match the input signal sampling rate. Each column of `in` corresponds to the waveform at each of the transmit antennas.

Data Types: `double` | `single`

Complex Number Support: Yes

Output Arguments

out — Filtered waveform

numeric matrix

Filtered waveform, returned as a numeric matrix. Each column of `out` corresponds to the waveform at each of the receive antennas.

Data Types: `double` | `single`

Complex Number Support: Yes

References

- [1] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access*

Network; Evolved Universal Terrestrial Radio Access (E-UTRA). URL: <http://www.3gpp.org>.

- [2] Dent, P., G. E. Bottomley, and T. Croft. “Jakes Fading Model Revisited.” *Electronics Letters*. Vol. 29, 1993, Number 13, pp. 1162–1163.
- [3] Pätzold, Matthias, Cheng-Xiang Wang, and Bjørn Olav Hogstad. “Two New Sum-of-Sinusoids-Based Methods for the Efficient Generation of Multiple Uncorrelated Rayleigh Fading Waveforms.” *IEEE Transactions on Wireless Communications*. Vol. 8, 2009, Number 6, pp. 3122–3131.

See Also

`lteFadingChannel` | `lteHSTChannel` | `lteOFDMModulate` | `lteSCFDMAModulate`

Introduced in R2013b

lteOFDMDemodulate

OFDM demodulation

Syntax

```
grid = lteOFDMDemodulate(enb,waveform)
grid = lteOFDMDemodulate(enb,waveform,cpfraction)
```

Description

`grid = lteOFDMDemodulate(enb,waveform)` performs OFDM demodulation of the time-domain waveform, `waveform`, given the cell-wide settings structure, `enb`.

The demodulation performs one FFT operation per received OFDM symbol in order to recover the received subcarrier values. These values are then used to construct each column of the output resource array, `grid`. The FFT is positioned partway through the cyclic prefix to allow for a certain degree of channel delay spread while avoiding the overlap between adjacent OFDM symbols. The particular position of the FFT chosen here avoids the OFDM symbol overlapping used in `lteOFDMModulate`. Since the FFT is performed away from the original zero phase point on the transmitted subcarriers, a phase correction is applied to each subcarrier after the FFT. Then, the received subcarriers are extracted from the FFT bins, skipping unused frequency bins at either end of the spectrum and the central DC frequency bin. These extracted subcarriers form the columns of the output `grid`.

The sampling rate of the time-domain waveform, `waveform`, must be the same as used in `lteOFDMModulate` for the specified number of resource blocks, `NDLRB`. `waveform` must also be time-aligned such that the first sample is the first sample of the cyclic prefix of the first OFDM symbol in a subframe. This alignment can be achieved by using `lteDLFrameOffset`.

`grid = lteOFDMDemodulate(enb,waveform,cpfraction)` allows specification of the position of the demodulation through the cyclic prefix.

Examples

Perform OFDM Demodulation

Perform modulation and demodulation of Test Model 1.1 5MHz.

```
cfg = lteTestModel('1.1','5MHz');
txWaveform = lteTestModelTool(cfg);
rxGrid = lteOFDMDemodulate(cfg,txWaveform);
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. **enb** contains the following fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Data Types: struct

waveform — Time-domain waveform

numeric matrix

Time-domain waveform, specified as a numeric matrix of size T -by- P , where P is the number of antennas and T is the number of time-domain samples. T is given by $T = K \times 30720 / 2048 \times N_{\text{fft}}$, where N_{fft} is the IFFT size and K is the number of subframes

in the input, `grid.waveform` must be time-aligned such that the first sample is the first sample of the cyclic prefix of the first OFDM symbol in a subframe.

Data Types: `double`

Complex Number Support: Yes

cpfraction — Demodulation position

0.55 (default) | scalar value

Demodulation position, specified as a scalar between 0 and 1, with 0 representing the start of the cyclic prefix and 1 representing the end of the cyclic prefix. The default value, 0.55, allows for the default level of windowing in `lteOFDMModulate`

Data Types: `double`

Output Arguments

grid — Resource elements

3-D numeric array

Resource elements, returned as a 3-D numeric array. `grid` stores the resource elements for a number of subframes across all configured antenna ports. It is an $M \times N \times P$ array, where M is the number of subcarriers, N is the number of OFDM symbols, and P is the number of antennas.

Data Types: `double`

Complex Number Support: Yes

See Also

`lteDLChannelEstimate` | `lteDLFrameOffset` | `lteDLPerfectChannelEstimate` | `lteOFDMInfo` | `lteOFDMModulate`

Introduced in R2014a

lteOFDMModulate

OFDM modulation

Syntax

```
[waveform,info] = lteOFDMModulate(enb,grid)
[waveform,info] = lteOFDMModulate(enb,grid>windowing)
```

Description

`[waveform,info] = lteOFDMModulate(enb,grid)` performs DC subcarrier insertion, inverse fast Fourier transform (IFFT) calculation, cyclic prefix insertion, and optional raised cosine windowing and overlapping of adjacent OFDM symbols of the complex symbols in the resource array, `grid`. `grid` is a 3-D array containing the resource elements (REs) for a number of subframes across all configured antenna ports, as described in “Data Structures”. It could also be multiple concatenated matrices to give multiple subframes, using concatenation across the columns or second dimension. The antenna planes in `grid` are each OFDM modulated to yield the columns of `waveform`.

`grid` is an $M \times N \times P$ array, where M is the number of subcarriers, N is the number of OFDM symbols, and P is the number of antennas. M must be $12 \times \text{enb.NDLRB}$, where enb.NDLRB must be between 6 and 110. N must be a multiple of the number of symbols in a subframe, L , where L is 14 for normal cyclic prefix and 12 for extended cyclic prefix.

`waveform` is a T -by- P matrix, where P is the number of antennas and T is the number of the time-domain samples.

`grid` can span multiple subframes. Windowing and overlapping are applied between all adjacent OFDM symbols, including the last of one subframe and the first of the next. Therefore, a different result is obtained than if `lteOFDMModulate` is called on individual subframes and then those time-domain waveforms are concatenated. In that case, the resulting waveform has discontinuities at the start or end of each subframe. It is recommended that all subframes for OFDM modulation first be concatenated prior to calling `lteOFDMModulate` on the resulting multi-subframe array. However, individual subframes can be OFDM modulated and the resulting multisubframe time-domain waveform created by manual overlapping.

[waveform,info] = lteOFDMModulate(enb,grid>windowing) allows control of the number of windowed and overlapped samples used in the time-domain windowing, specified by the windowing parameter. The value of enb.Windowing, if present, is ignored, and the output, info.Windowing is set to windowing.

Examples

Perform OFDM Modulation

Perform OFDM modulation of one subframe of random uniformly-distributed noise using a 10MHz two-antenna configuration.

```
enb = struct('NDRB',50,'CyclicPrefix','Normal','CellRefP',2);
d = lteDLResourceGridSize(enb);
rgrid = complex(rand(d)-0.5,rand(d)-0.5);
waveform = lteOFDMModulate(enb,rgrid);
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. enb can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NDRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Parameter Field	Required or Optional	Values	Description
Windowing	Optional	Nonnegative scalar integer	Number of time-domain samples over which windowing and overlapping of OFDM symbols is applied See Note

Note: If `enb.Windowing` is absent, a default value for the number of windowed and overlapped samples is used. The default value is chosen as a function of `enb.NDLRB` to compromise between the effective duration of cyclic prefix, and thus the channel delay spread tolerance, and the spectral characteristics of the transmitted signal, not considering any additional FIR filtering. The value used is returned in `info.Windowing`. If `enb.Windowing` is present, it must be even. The issues concerning concatenation of subframes before OFDM modulation do not apply when `enb.Windowing` is zero.

Data Types: struct

grid — Resource elements

3-D numeric array

Resource elements, specified as a 3-D numeric array. `grid` stores the resource elements for a number of subframes across all configured antenna ports. `grid` is an $M \times N \times P$ array, where M is the number of subcarriers, N is the number of OFDM symbols, and P is the number of antennas.

Data Types: double

Complex Number Support: Yes

windowing — OFDM sample span

even scalar integer

OFDM sample span, specified as an even scalar integer. This input argument controls the number of windowed and overlapped samples used in the time-domain windowing. This value overwrites the value of the parameter field `enb.Windowing`, if present.

Data Types: double

Output Arguments

waveform — OFDM modulated waveform

numeric matrix

OFDM modulated waveform, returned as a numeric matrix of size T -by- P , where P is the number of antennas and T is the number of time-domain samples. $T = K \times 30720 / 2048 \times N_{\text{fft}}$ where N_{fft} is the IFFT size and K is the number of subframes in the input `grid`. N_{fft} is a function of the number of resource blocks (NRB), as shown in the following table.

NRB	N_{fft}
6	128
15	256
25	512
50	1024
75	2048
100	2048

In general, N_{fft} is the smallest power of 2 greater than or equal to $12 \cdot \text{NRB} / 0.85$. It is the smallest FFT that spans all subcarriers and results in a bandwidth occupancy, $12 \cdot \text{NRB} / N_{\text{fft}}$, of no more than 85%.

Data Types: double

Complex Number Support: Yes

info — OFDM modulated waveform information

structure

OFDM modulated waveform information, returned as a structure. `info` contains the following fields.

SamplingRate — Time-domain waveform sampling rate

scalar value

Time-domain waveform sampling rate, returned as a scalar value.

$\text{SamplingRate} = 30.72 \text{ MHz} / 2048 \times N_{\text{fft}}$.

Data Types: double

Nfft — Number of FFT points

scalar power of 2

Number of FFT points, returned as a scalar power of 2. `Nfft` is the smallest power of 2 greater than or equal to $12 \times \text{NDLRB} / 0.85$. It is the smallest FFT that spans all subcarriers and results in a bandwidth occupancy ($12 \times \text{NDLRB} / N_{\text{fft}}$) of no more than 85%.

Data Types: uint32

Windowing — OFDM sample span

even integer scalar

OFDM sample span, returned as an even integer scalar. This parameter is the number of time-domain samples over which windowing and overlapping of OFDM symbols are applied.

Data Types: int32

CyclicPrefixLengths — Cyclic prefix length

even integer scalar

Cyclic prefix length (in samples) of each OFDM symbol in a subframe.

info.Nfft	CyclicPrefixLengths	
	for CyclicPrefix = 'Normal'	for CyclicPrefix = 'Extended'
2048	[160 144 144 144 144 144 144 144 160 144 144 144 144 144 144]	[512 512 512 512 512 512 512 512 512 512 512 512 512]
1024	[80 72 72 72 72 72 72 80 72 72 72 72 72]	[256 256 256 256 256 256 256 256 256 256 256 256]
512	[40 36 36 36 36 36 36 40 36 36 36 36 36]	[128 128 128 128 128 128 128 128 128 128 128 128]
256	[20 18 18 18 18 18 18 20 18 18 18 18 18]	[64 64 64 64 64 64 64 64 64 64 64 64 64 64]
128	[10 9 9 9 9 9 9 10 9 9 9 9 9 9]	[32 32 32 32 32 32 32 32 32 32 32 32 32 32]

Note: As shown in table above, for `info.Nfft < 2048`, `info.CyclicPrefixLengths` are the `CyclicPrefixLengths` for `info.Nfft = 2048` scaled by `info.Nfft / 2048`.

Data Types: `uint32`

Data Types: `struct`

More About

Algorithms

Windowing

The use of the IFFT within the OFDM modulator constitutes the use of a rectangular pulse shape. This means that discontinuities occur from one OFDM symbol to the next, resulting in out of band emissions. (Alternatively, considering the frequency domain, the frequency response of this rectangular pulse shape is a sinc pulse.) The discontinuities between OFDM symbols can be reduced by using windowing, which smooths the transitions between OFDM symbols. Within LTE System Toolbox, the windowing is performed as follows:

For **Windowing** = N samples, the cyclic prefix added to the nominal OFDM symbol is further extended by N samples.

This extended waveform is windowed by pointwise multiplication in the time domain with a raised cosine window, which applies a taper to the first N and last N samples, with all other values being 1. The values, y , in the first N samples are given by:

 
$$y = \frac{1}{2} \left(1 - \sin \left(\pi \frac{N + 1 - 2i}{2N} \right) \right), \text{ where } i = 1 \dots N$$

The values in the last N samples are the same values in reverse order.

The windowed OFDM symbols are then overlapped by commencing transmission of each windowed OFDM symbol N samples prior to the end of the previous OFDM symbol. This ensures that the time between OFDM symbols is maintained as required by the standard. Note that the taper at the start of the first OFDM symbol for transmission is removed and is overlapped with the taper at the end of the last OFDM symbol.

Processing

The processing performed by this function is illustrated in the following diagram.

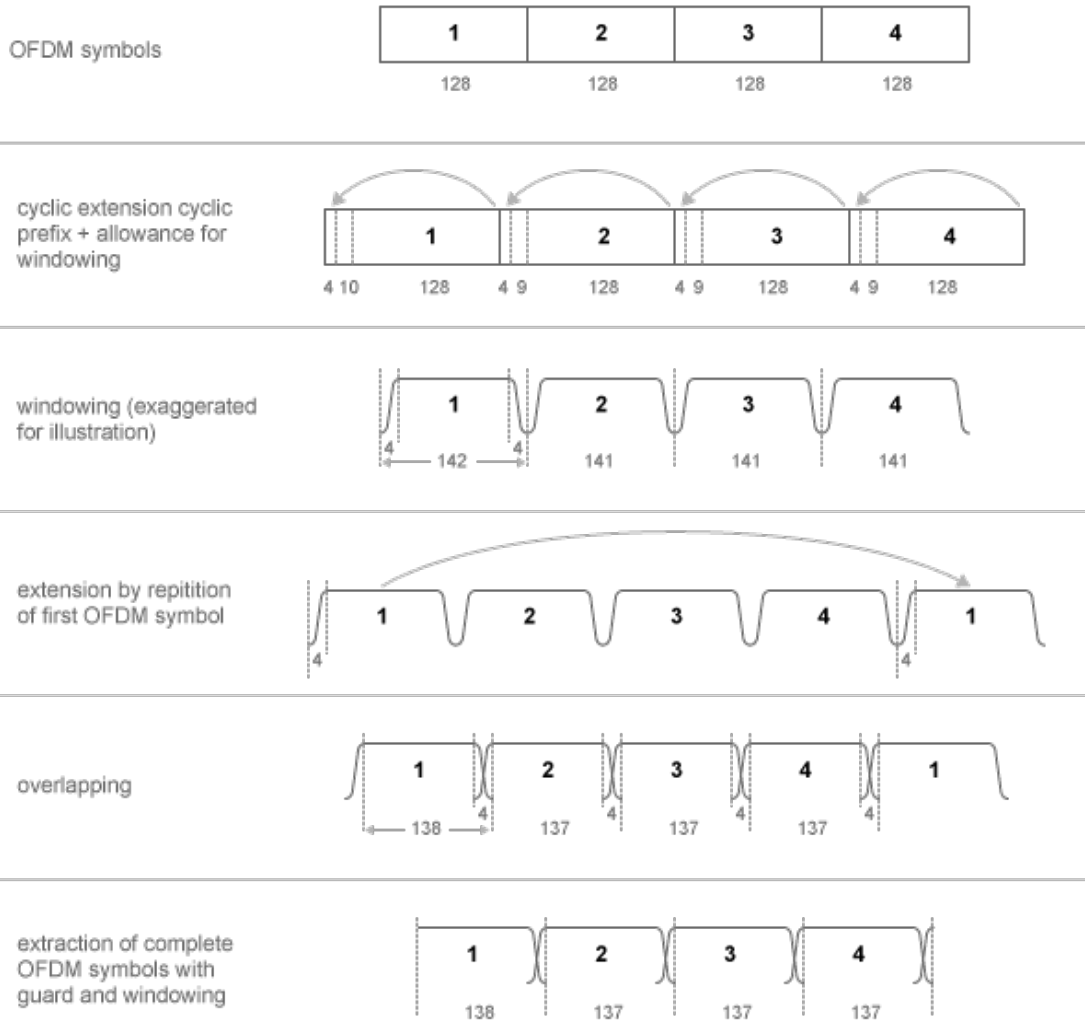

The number of samples used for windowing depends on the cyclic prefix length, normal or extended, and the number of resource blocks. The number of samples is chosen in accordance with the *maximum* values implied by tables F.5.3-1 and F.5.4-1 in [1].

Number of resource blocks (NRB)	Windowing samples for normal cyclic prefix	Windowing samples for extended cyclic prefix
6	4	4
15	6	6
25	4	4
50	6	6
75	8	8
100	8	8

The number of windowing samples is a compromise between the effective duration of cyclic prefix, and therefore the channel delay spread tolerance, and the spectral characteristics of the transmitted signal, not considering any additional FIR filtering. For a larger amount of windowing, the effective duration of the cyclic prefix is reduced but the transmitted signal spectrum has smaller out-of-band emissions.

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteDLResourceGrid | lteFadingChannel | lteHSTChannel | lteMovingChannel
| lteOFDMDemodulate | lteOFDMInfo

Introduced in R2014a

lteOFDMInfo

OFDM modulation related information

Syntax

```
info = lteOFDMInfo(enb)
```

Description

`info = lteOFDMInfo(enb)` provides information related to the OFDM modulation performed by `lteOFDMModulate`, given the cell-wide settings structure, `enb`.

Examples

Get Information Related to OFDM Modulation

Find the sampling rate of a 50RB, or 10MHz, waveform after OFDM modulation.

```
enb = struct('NDRB',50,'CyclicPrefix','Normal');  
lteOFDMInfo(enb)
```

```
    SamplingRate: 15360000  
           Nfft: 1024  
    Windowing: 6
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. `enb` contains the following fields.

Parameter Field	Required or Optional	Values	Description
NDRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
		are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Windowing	Optional	Nonnegative scalar integer	Number of time-domain samples over which windowing and overlapping of OFDM symbols is applied

Data Types: struct

Output Arguments

info — OFDM information

structure

OFDM information, returned as a structure. `info` contains the following fields.

SamplingRate — Sampling rate of the OFDM modulator

integer scalar value

Sampling rate of the OFDM modulator, returned as an integer scalar value.

Data Types: double

Nfft — Number of FFT points

scalar power of 2

Number of FFT points used in the OFDM modulator, returned as a scalar power of 2.

Data Types: uint32

Windowing — OFDM sample span

even integer scalar

OFDM sample span, returned as an even integer scalar Number of time-domain samples over which windowing and overlapping of OFDM symbols are applied.

If `enb.Windowing` is absent, `info.Windowing` returns a default value chosen as a function of `enb.NDLRB` to compromise between the effective duration of cyclic prefix (and therefore the channel delay spread tolerance) and the spectral characteristics of the transmitted signal (not considering any additional FIR filtering). See `lteOFDMModulate` for details.

Data Types: `int32`

CyclicPrefixLengths — Cyclic prefix length

even integer scalar

Cyclic prefix length (in samples) of each OFDM symbol in a subframe.

info.Nfft	CyclicPrefixLengths	
	for CyclicPrefix = 'Normal'	for CyclicPrefix = 'Extended'
2048	[160 144 144 144 144 144 144 144 160 144 144 144 144 144 144]	[512 512 512 512 512 512 512 512 512 512 512 512 512]
1024	[80 72 72 72 72 72 72 80 72 72 72 72 72 72]	[256 256 256 256 256 256 256 256 256 256 256 256]
512	[40 36 36 36 36 36 36 40 36 36 36 36 36]	[128 128 128 128 128 128 128 128 128 128 128 128]
256	[20 18 18 18 18 18 18 20 18 18 18 18 18]	[64 64 64 64 64 64 64 64 64 64 64 64]
128	[10 9 9 9 9 9 10 9 9 9 9 9]	[32 32 32 32 32 32 32 32 32 32 32 32]

Note: As shown in table above, for `info.Nfft < 2048`, `info.CyclicPrefixLengths` are the `CyclicPrefixLengths` for `info.Nfft = 2048` scaled by `info.Nfft / 2048`.

Data Types: `uint32`

Data Types: `struct`

See Also

lteDLResourceGridSize | lteOFDMModulate

Introduced in R2014a

ltePBCH

Physical broadcast channel

Syntax

```
sym = ltePBCH(enb,cw)
```

Description

`sym = ltePBCH(enb,cw)` returns a matrix containing the complex symbols of the Physical Broadcast Channel (PBCH) for cell-wide settings structure, `enb`, and codeword, `cw`. The function performs all physical channel processing steps, including the stages of scrambling, QPSK modulation, layer mapping, and precoding. The size of the output matrix, `sym`, is N -by-`CellRefP`, where N is the number of modulation symbols for one antenna port and `CellRefP` is the number of antenna ports.

The BCH transport channel consumes information bits every 40 ms. The coded transport block is then passed to PBCH for physical channel processing. The PBCH is transmitted in the first subframe of every frame, so four successive frames are required to transmit one transport block. As the scrambling sequence is initialized at the boundary of every 40 ms, this function expects 40 ms worth of data. For example, it expects 1920 bits for normal cyclic prefix, or 1728 bits for extended cyclic prefix. The output of this function then needs to be demultiplexed into quarter length blocks for carriage on the first subframe in each 10 ms frame.

`cw` is a vector containing the bit values of the PBCH codeword for modulation.

Examples

Generate PBCH Symbols

Generate physical broadcast channel (PBCH) symbols using the master information block (MIB).

First, generate the MIB for the reference measurement channel (RMC) R.0, as specified in [1], for cell-wide settings, `enb`. Pass the MIB through broadcast channel (BCH) transport channel coding. Finally, generate and display the PBCH symbols.

```

enb = lteRMCDL('R.0');
mib = lteMIB(enb);
bchCoded = lteBCH(enb,mib);
pbchSymbols = ltePBCH(enb,bchCoded);
pbchSymbols(1:10)

    0.7071 + 0.7071i
    0.7071 - 0.7071i
    0.7071 + 0.7071i
   -0.7071 + 0.7071i
   -0.7071 + 0.7071i
    0.7071 + 0.7071i
   -0.7071 + 0.7071i
   -0.7071 + 0.7071i
   -0.7071 + 0.7071i
   -0.7071 - 0.7071i

```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. **enb** must contain the following fields.

NCellID — Physical layer cell identity

scalar integer

Physical layer cell identity, specified as a scalar integer.

Data Types: double

CellRefP — Number of cell-specific reference signal antenna ports

1 | 2 | 4

Number of cell-specific reference signal antenna ports, specified as 1, 2, or 4.

Data Types: double

Data Types: struct

cw — PBCH codeword

vector

PBCH codeword, specified as a vector. `cw` contains the bit values of the PBCH codeword for modulation.

Data Types: `double` | `single` | `uint8` | `uint16` | `uint32` | `uint64` | `int8` | `int16` | `int32` | `int64`

Output Arguments

sym — PBCH symbols

numeric matrix

PBCH symbols, returned as a numeric matrix. `sym` contains the complex symbols of the Physical Broadcast Channel (PBCH) for cell-wide settings, `enb`, and codeword, `cw`. Its size is N -by-`CellRefP`, where N is the number of modulation symbols for one antenna port and `CellRefP` is the number of antenna ports.

Data Types: `double`

Complex Number Support: Yes

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteBCH` | `ltePBCHDecode` | `ltePBCHIndices` | `ltePBCHPRBS`

Introduced in R2014a

ltePBCHDecode

Physical broadcast channel decoding

Syntax

```
[bits,symbols,nfmod4,trblk,cellrefp] = ltePBCHDecode(enb,sym)
[bits,symbols,nfmod4,trblk,cellrefp] = ltePBCHDecode(enb,sym,hest,
noiseest)
[bits,symbols,nfmod4,trblk,cellrefp] = ltePBCHDecode(enb,sym,hest,
noiseest,alg)
```

Description

[bits,symbols,nfmod4,trblk,cellrefp] = ltePBCHDecode(enb,sym) returns a vector of soft bits, **bits**, a vector of received constellation complex symbols, **symbols**, frame number (modulo 4), **nfmod4**, decoded BCH information bits, **trblk**, and number of cell-specific reference signal antenna ports, **cellrefp**. TS 36.211, Section 6.6 [2] defines the inverse of Physical Broadcast Channel (PBCH) processing of **bits** and **symbols**. TS 36.212, Section 5.3.1 [3] defines the inverse Broadcast Channel (BCH) processing used to decode **nfmod4**, **trblk**, and **cellrefp**. Also see ltePBCH.

The function performs the inverse of PBCH processing on the matrix of complex modulated PBCH symbols, **sym**, given a cell-wide settings structure, **enb**. The channel inverse processing includes decoding, symbol demodulation, and descrambling.

sym must be a matrix of NRE-by-NRxAnts complex modulated PBCH symbols. NRE is the number of QPSK symbols per antenna assigned to the PBCH and NRxAnts is the number of receive antennas. **sym** can contain 1–4 subframes with PBCH data. The function decodes PBCH data scrambled with any scrambling sequence phase. The scrambling sequence gets initialized every 40 ms. but there is no restriction on the input **sym** to be aligned at the 40 ms boundary.

bits is a vector of soft bits and **symbols** is a vector of received constellation complex symbols. If **alg.CSI** is 'On', **bits** gets scaled by the channel state information (CSI) calculated during the equalization process. **nfmod4** is the system frame number modulo 4, $\text{mod}(\text{NFrame}, 4)$, obtained when determining the scrambling phase of the input PBCH symbols, **sym**. **trblk** is the decoded BCH information bits (24 bits) and **cellrefp**

is the number of cell-specific reference signal antenna ports determined during the BCH decoding process. After successful synchronization with the scrambling sequence, `nfmod4`, `trblk`, and `cellrefp` are determined. The true number of transmitted cell-specific reference signals is returned in `cellrefp`, and is searched for by attempting decoding with `cellrefp` equal to 1, 2, or 4. If provided, `enb.CellRefP` is attempted first to ensure that `symbols` contains the expected constellation and `bits` contains the expected soft bit estimates for the specified value. Under good conditions, successful decoding is possible with a different value of `cellrefp`, but results in unexpected `bits` and `symbols`. If `enb.CellRefP` is not provided, the search establishes the true number of transmitted cell-specific reference signals and returns it in `cellrefp`.

`[bits,symbols,nfmod4,trblk,cellrefp] = ltePBCHDecode(enb,sym,hest,noiseest)` decodes the complex PBCH symbols, `sym`, using cell-wide settings, `enb`, the channel estimate, `hest`, and the noise estimate, `noiseest`. For the TxDiversity transmission scheme (`cellrefp = 2` or `cellrefp = 4`), the reception is performed using an OSFBC (Orthogonal Space Frequency Block Code) decoder. For the Port0 transmission scheme (`cellrefp = 1`), the reception is performed using MMSE equalization.

`hest` is a 3-D NRE-by-NRxAnts-by- P array, where

- NRE are the frequency and time locations corresponding to the PBCH resource element positions (a total of NRE positions),
- NRxAnts is the number of receive antennas,
- P is the number of cell-specific reference signal antennas.

`noiseest` is an estimate of the noise power spectral density per resource element on the received subframe. This estimate is provided by `lteDLChannelEstimate`.

`[bits,symbols,nfmod4,trblk,cellrefp] = ltePBCHDecode(enb,sym,hest,noiseest,alg)` provides control over weighting the output soft bits, `bits`, with channel state information (CSI) calculated during the equalization stage using the algorithmic configuration structure, `alg`.

Examples

Decode CellRefP from MIB

This example shows use of `ltePBCHDecode` to decode the number of cell-specific reference ports from the Master Information Block (MIB):

Initialize cell-wide configuration structure, `enb` with RMC 'R.14'. Generate MIB and the broadcast channel bits

```
enb = lteRMCDL('R.14');
mib = lteMIB(enb);
bchBits = lteBCH(enb,mib);
```

`lteBCH` generates bits for a 40ms period, intended for 4 frames. Since PBCH is transmitted every frame, one quarter of these bits are encoded and transmitted each frame. In this example we encode the PBCH for a single frame. So, we only map and encode one quarter of the `bchbits` to PBCH. We then decode the PBCH symbols specifying `cellrefp` as an output. Looking at the number of cell-specific reference ports, `cellrefp`, we see it matches number of antenna ports specified in TS 36.101 Annex 3.3.2 for RMC R.14

```
quarterLen = length(bchBits)/4;
pbchSymbols = ltePBCH(enb,bchBits(1:quarterLen));
[bits,symbols,nfmod4,trblk,cellrefp] = ltePBCHDecode(enb,pbchSymbols);
```

```
cellrefp
```

```
cellrefp =
```

```
4
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. `enb` contains the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
CellRefP	Optional	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports

Parameter Field	Required or Optional	Values	Description
			The default is to establish <code>cellrefp</code> by decoding the input symbols, <code>sym</code>
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Data Types: `struct`

sym — Complex modulated PBCH symbols

numeric matrix

Complex modulated PBCH symbols, specified as a numeric matrix. `sym` must have size `NRE-by-NRxAnts`, where `NRE` is the number of QPSK symbols per antenna assigned to the PBCH and `NRxAnts` is the number of receive antennas. `sym` can contain 1–4 subframes with PBCH data.

Data Types: `double`

Complex Number Support: Yes

hest — Channel estimate

3-D array

Channel estimate is a 3-D array of size `NRE-by-NRxAnts-by-P`, where

- `NRE` are the frequency and time locations corresponding to the PBCH resource element positions (a total of `NRE` positions),
- `NRxAnts` is the number of receive antennas,
- `P` is the number of cell-specific reference signal antennas.

Data Types: `double`

Complex Number Support: Yes

noiseest — Noise estimate

numeric scalar

Noise estimate, specified as a numeric scalar. It is an estimate of the noise power spectral density per resource element on the received subframe. This estimate is provided by the `lteDLChannelEstimate` function.

Data Types: double

alg — Algorithmic configuration

structure

Algorithmic configuration, specified as a structure. The structure must have the following field.

Parameter Field	Required or Optional	Values	Description
CSI	Optional	'On' (default), 'Off'	Flag to control whether output bits get weighted with channel state information (CSI) calculated during the equalization stage. If 'On', soft bits are weighted by CSI.

Data Types: struct

Output Arguments

bits — Decoded PBCH soft bits

numeric column vector

Decoded PBCH soft bits, returned as a numeric column vector. If **alg.CSI** is 'On', **bits** gets scaled by channel state information.

Data Types: double

symbols — Received constellation of complex symbols

complex numeric column vector

Received constellation of complex symbols, returned as a complex numeric column vector.

Data Types: double

Complex Number Support: Yes

nfmod4 — System frame number modulo 4

integer scalar

System frame number modulo 4, $\text{mod}(\text{NFrame}, 4)$, returned as an integer scalar. `nfmod4` is obtained when determining the scrambling phase of the input PBCH symbols, `sym`.

Data Types: `double`

trblk — Decoded BCH information bits

24-by-1 numeric column vector

Decoded BCH information bits, returned as a 24-by-1 numeric column vector.

Data Types: `int8`

cellrefp — Number of cell-specific reference signal antenna ports

Optional | 1 | 2 | 4

Number of cell-specific signal antenna ports, returned as determined during the BCH decoding.

Data Types: `uint32`

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteBCHDecode` | `ltePBCH` | `ltePBCHIndices` | `ltePBCHPRBS`

Introduced in R2014a

ltePBCHIndices

PBCH resource element indices

Syntax

```
ind = ltePBCHIndices(enb)
ind = ltePBCHIndices(enb,opts)
```

Description

`ind = ltePBCHIndices(enb)` returns an N -by-CellRefP matrix of resource element (RE) indices for the Physical Broadcast Channel (PBCH) given the parameter fields of structure `enb`. By default, the indices are returned in 1-based linear indexing form that can directly index elements of a 3-D array representing the subframe resource grid for CellRefP antennas. These indices are ordered as the PBCH modulation symbols should be mapped. Alternative indexing formats can also be generated. The PBCH is only transmitted in first subframe of each frame.

`ind = ltePBCHIndices(enb,opts)` allows control of the format of the returned indices through a cell array, `opts`, of option strings.

Examples

Generate PBCH RE Indices

Generate 0-based physical broadcast channel (PBCH) resource element (RE) indices in linear form.

```
enb = lteRMCDL('R.14');
ind = ltePBCHIndices(enb,{'0based'});
ind(1:4,:)
    4465    12865    21265    29665
    4466    12866    21266    29666
    4468    12868    21268    29668
    4469    12869    21269    29669
```

For the 4 antenna case, the result has four columns.

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. **enb** contains the following fields.

NDLRB — Number of downlink resource blocks

scalar value

Number of downlink resource blocks, specified as a scalar value.

NCellID — Physical layer cell identity

scalar integer

Physical layer cell identity, specified as a scalar integer.

CyclicPrefix — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

CellRefP — Number of cell-specific reference signal antenna ports

1 (default) | Optional | 2 | 4

Number of cell-specific reference signal antenna ports, specified as 1, 2, or 4. Optional.

NSubframe — Subframe number

0 (default) | Optional | scalar integer

Subframe number, specified as a scalar integer. Optional.

Data Types: struct

opts — Index formatting options

cell array

Index formatting options, specified as a cell array. **opts** can contain the following option strings.

Indexing style — Form of returned indices

'ind' (default) | 'sub'

Form of returned indices, specified as 'ind' for linear indexing or 'sub' for [subcarrier, symbol, antenna] subscript row style.

Index base — Index base of returned indices

'1based' (default) | 'Obased'

Index base of returned indices, specified as '1based' for 1-based indices or 'Obased' for 0-based indices.

Data Types: char | cell

Output Arguments

ind — PBCH resource element indices

numeric matrix

PBCH resource element indices, returned as a numeric matrix of size N -by-CellRefP.

Data Types: double

See Also

ltePBCH | ltePBCHDecode | ltePBCHPRBS

Introduced in R2014a

ltePBCHPRBS

PBCH pseudorandom scrambling sequence

Syntax

```
seq = ltePBCHPRBS(enb,n)
seq = ltePBCHPRBS(enb,n,mapping)
```

Description

`seq = ltePBCHPRBS(enb,n)` returns a vector with the first `n` outputs of the Physical Broadcast Channel (PBCH) scrambling sequence when initialized with the structure `enb`.

`seq = ltePBCHPRBS(enb,n,mapping)` allows control over the format of the returned sequence, `seq`, through the string `mapping`. Valid formats are 'binary', the default, and 'signed'. The 'binary' format maps true to 1 and false to 0. The 'signed' format maps true to -1 and false to 1.

Examples

Compare Pseudorandom Scrambling Sequences

Compare the PBCH scrambling sequence generated using both generic and PBCH-specific pseudorandom binary sequence generators.

```
enb = lteRMCDL('R.0');
prbsSeq = ltePRBS(enb.NCellID,5);
pbchPrbsSeq = ltePBCHPRBS(enb,5);
isequal(prbsSeq,pbchPrbsSeq)
```

1

The generic pseudorandom binary scrambling sequence equals the PBCH-specific pseudorandom binary scrambling sequence.

Generate PBCH Pseudorandom Scrambling Sequence from MIB

Generate the PBCH scrambling sequence for a cell-wide settings structure, `enb`. The length of the scrambling sequence is the number of BCH transport bits.

```

enb = lteRMCDL('R.0');
mib = lteMIB(enb);
bchBits=lteBCH(enb,mib);
pbchPrbsSeq = ltePBCHPRBS(enb,length(bchBits));
pbchPrbsSeq(1:10)

0
0
0
0
0
0
1
0
0
0

```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. **enb** must contain the following field.

NCellID — Physical layer cell identity

scalar integer

Physical layer cell identity, specified as a scalar integer.

Data Types: double

Data Types: struct

n — Number of outputs

numeric scalar

Number of outputs, specified as a numeric scalar.

Data Types: double

mapping — Output sequence formatting

'binary' (default) | 'signed'

Output sequence formatting, specified as a string. Valid formats are 'binary' and 'signed'. 'binary' maps true to 1 and false to 0. 'signed' maps true to -1 and false to 1.

Data Types: char

Output Arguments

seq — PBCH pseudorandom scrambling sequence

logical column vector | numeric column vector

PBCH pseudorandom scrambling sequence, specified as a logical column vector or a numeric column vector. **seq** contains the first *n* outputs of the physical broadcast channel (PBCH) scrambling sequence. If *n* is set to 'signed', **seq** is a vector of data type double. Otherwise, it is a vector of data type logical.

Data Types: logical | double

See Also

ltePBCH | ltePBCHDecode | ltePBCHIndices

Introduced in R2014a

ltePCFICH

Physical control format indicator channel

Syntax

```
sym = ltePCFICH(enb,cw)
```

Description

`sym = ltePCFICH(enb,cw)` returns the matrix of complex modulation symbols generated by the Physical Control Format Indicator Channel (PCFICH). The channel processing includes the stages of scrambling, QPSK modulation, layer mapping and precoding. Given input bit vector `cw`, each column of the 16-by-`CellRefP` matrix `sym` contains the 16 QPSK symbols carried by the PCFICH on each of `CellRefP` transmit antenna ports. The channel is parameterized by structure `enb`.

The PCFICH is intended to carry the 32-bit block encoding of the CFI. For more information, see `lteCFI`. The channel expects the input bit vector, `cw`, to be 32 elements in length. If `length(cw) < 32`, `cw` is padded with zeros prior to channel processing. If `length(cw) > 32`, only the first 32 elements are used.

Examples

Generate PCFICH Symbols

Generate PCFICH symbols, using a control format indicator (CFI) value of 1 and using 2 antenna ports for transmit diversity.

```
enb = struct('CellRefP',2,'NCellID',0,'NSubframe',0);
cfiCodeword = lteCFI(struct('CFI',1));
pcfichSymbols = ltePCFICH(enb,cfiCodeword);
size(pcfichSymbols)
```

16 2

Input Arguments

enb — Cell-wide settings structure

Scalar structure

`enb` is a structure having the following fields.

NCellID — Physical layer cell identity

0...503

Physical layer cell identity, specified as an integer in the range of [0,503].

CellRefP — Number of cell-specific reference signal (CRS) antenna ports

1 (default) | 2 | 4

Number of cell-specific reference signal (CRS) antenna ports, specified as one of the set (1, 2, 4).

NSubframe — Subframe number

scalar

Subframe number, specified as an integer.

Data Types: `struct`

cw — Input bit vector

vector

Input bit vector that is 32 elements in length, specified as a vector. If `length(cw) < 32`, `cw` is padded with zeros prior to channel processing. If `length(cw) > 32`, only the first 32 elements are used.

Example: `cw = lteCFI(struct('CFI',1));`

Data Types: `int8`

Output Arguments

sym — Complex modulation symbols generated by the PCFICH

numeric matrix

Complex modulation symbols generated by the PCFICH, returned as a numeric matrix of size 16-by-CellRefP. The channel processing includes the stages of scrambling, QPSK modulation, layer mapping and precoding. Given input bit vector `cw`, each column of the 16-by-CellRefP matrix `sym` contains the 16 QPSK symbols carried by the PCFICH on each of the CellRefP transmit antenna ports. The channel is parameterized by structure `enb`.

Data Types: `double`

Complex Number Support: Yes

See Also

`lteCFI` | `ltePCFICHDecode` | `ltePCFICHIndices` | `ltePCFICHInfo` | `ltePCFICHPRBS`

Introduced in R2014a

ltePCFICHDecode

Physical control format indicator channel decoding

Syntax

```
[bits,symbols] = ltePCFICHDecode(enb,sym)
[bits,symbols] = ltePCFICHDecode(enb,sym,hest,noiseest)
[bits,symbols] = ltePCFICHDecode(enb,sym,hest,noiseest,alg)
```

Description

[bits,symbols] = ltePCFICHDecode(enb,sym) performs the inverse of Physical Control Format Indicator Channel (PCFICH) processing on the matrix of complex modulated PCFICH symbols, **sym**, using cell-wide settings structure, **enb**. It returns a column vector of soft bits, **bits**, and received constellation of complex symbol vector, **symbols**. The channel inverse processing includes deprecoding, symbol demodulation, and descrambling. See TS 36.211, Section 6.7 [1] or **ltePCFICH** for details.

The input argument, **sym**, must be a matrix of **NRE**-by-**NRxAnts** complex modulated PCFICH symbols. **NRE** is the number of QPSK symbols per antenna assigned to the PCFICH (16) and **NRxAnts** is the number of receive antennas.

[bits,symbols] = ltePCFICHDecode(enb,sym,hest,noiseest) decodes the complex PCFICH symbols, **sym**, using cell-wide settings, **enb**, the channel estimate, **hest**, and the noise estimate, **noiseest**. For the 'TxDiversity' transmission scheme, when **CellRefP** is 2 or 4, the reception is performed using an orthogonal space frequency block code (OSFBC) decoder. For the 'Port0' transmission scheme, when **CellRefP** is 1, the reception is performed using MMSE equalization.

hest is a 3-D **NRE**-by-**NRxAnts**-by-**enb.CellRefP** array. **NRE** contains the frequency and time locations corresponding to the PCFICH RE positions for a total of **NRE** positions. **NRxAnts** is the number of receive antennas, and **enb.CellRefP** is the number of cell-specific reference signal antennas.

noiseest is an estimate of the noise power spectral density per RE in the received subframe. The **lteDLChannelEstimate** function produces this estimate.

[bits,symbols] = ltePCFICHDecode(enb,sym,hest,noiseest,alg) same as prior except this syntax provides control over weighting the output soft bits, bits. If alg.CSI is 'On', bits get scaled by the channel state information (CSI) calculated during the equalization stage.

Examples

Decode PCFICH Symbols

This example shows decoding of symbols to recover CFI value.

Initialize a cell wide configuration structure, `enb`. Encode a CFI value and perform physical channel coding to create a vector of symbols, `pcfichSym`.

```
enb.NCellID = 0;
enb.NSubframe = 0;
enb.CellRefP = 1;
enb.CFI = 3;
cw = lteCFI(enb);
pcfichSym = ltePCFICH(enb,cw);
```

Demodulate and decode the symbols to recover the CFI value

```
cfiSoftBits = ltePCFICHDecode(enb,pcfichSym);
rxCFI = lteCFIDecode(cfiSoftBits)
```

```
rxCFI =
```

```
3
```

Confirm recovered CFI value matches the setting in `enb`

```
enb.CFI
```

```
ans =
```

```
3
```

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. **enb** contains the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
NSubframe	Required	Nonnegative scalar integer	Subframe number

Data Types: `struct`

sym — Complex modulated PCFICH symbols

numeric matrix

Complex modulated PCFICH symbols, specified as a numeric matrix of size `NRE`-by-`NRxAnts`. `NRE` is the number of QPSK symbols per antenna assigned to the PCFICH (16). `NRxAnts` is the number of receive antennas.

Data Types: `double`

Complex Number Support: Yes

hest — Channel estimate

3-D numeric array

Channel estimate, specified as a 3-D numeric array of size `NRE`-by-`NRxAnts`-by-`enb.CellRefP`, where:

- `NRE` contains the frequency and time locations corresponding to the PCFICH RE positions (a total of `NRE` positions).

- `NRxAnts` is the number of receive antennas.
- `enb.CellRefP` is the number of cell-specific reference signal antennas.

Data Types: `double`

Complex Number Support: Yes

noiseest – Noise estimate

scalar

Estimate of the noise power spectral density per RE on received subframe. Such an estimate is provided by the `lteDLChannelEstimate` function.

Data Types: `double`

alg – Algorithmic configuration

structure

Algorithmic configuration, specified as a structure. It contains the following fields.

Parameter Field	Required or Optional	Values	Description
CSI	Optional	'On' (default), 'Off'	Flag to control whether output <code>bits</code> get weighted with channel state information (CSI) calculated during the equalization stage. If 'On', soft bits are weighted by CSI.

Data Types: `struct`

Output Arguments

bits – Soft bits

numeric column vector

Soft bits, returned as a numeric column vector. If the input `alg.CSI` field is 'On', `bits` gets scaled by channel state information (CSI) calculated during the equalization process.

Data Types: `double`

symbols — Received constellation symbols

complex numeric column vector

Received constellation symbols, returned as a complex numeric column vector.

Data Types: double

Complex Number Support: Yes

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteCFIDecode | ltePCFICH | ltePCFICHIndices | ltePCFICHInfo |
ltePCFICHPRBS

Introduced in R2014a

ltePCFICHIndices

PCFICH resource element indices

Syntax

```
ind = ltePCFICHIndices(enb)
ind = ltePCFICHIndices(enb,opts)
```

Description

`ind = ltePCFICHIndices(enb)` returns the 16-by-`CellRefP` matrix of subframe resource element (RE) indices for the physical control format indicator channel (PCFICH), given the `enb` input structure. By default, the indices are returned in 1-based linear indexing form that directly indexes elements of a 3-D array representing the subframe resource grid for `CellRefP` antenna ports. Each column of `ind` contains per-antenna indices for 16 resource elements in one of the `CellRefP` array planes. The rows are ordered as the PCFICH modulation symbols should be mapped. The indices can also be returned in a number of alternative indexing formats.

The PCFICH is always transmitted on 16 resource elements, or 4 resource element groups (REG), in the first OFDM symbol of a subframe however their locations depend on the `NCellID` and `NDLRB` parameters.

`ind = ltePCFICHIndices(enb,opts)` allows control of the format of the returned indices through `opts`, a cell array of option strings.

Examples

Generate PCFICH RE Indices

This example generates physical CFI channel (PCFICH) resource element (RE) indices for two different physical layer cell identity values.

To show the effects of the physical layer cell identity, `NCellID` on the indices, first set it to 0. Then, generate and display the PCFICH indices.

```
enb.NDLRB = 50;
enb.NCellID = 0;
enb.CyclicPrefix = 'Normal';
enb.CellRefP = 1;
ind = ltePCFICHIndices(enb,{'Obased','reg'})
```

```
ind =
```

```
    0
   150
   300
   450
```

Next, set the physical layer cell identity, |NCellID|, to 1. Regenerate and display the PCFICH indices.

```
enb.NCellID = 1;
ind = ltePCFICHIndices(enb,{'Obased','reg'})
```

```
ind =
```

```
    6
   156
   306
   456
```

Input Arguments

enb — eNodeB cell-wide settings

scalar structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
		will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
CellRefP	Optional	1 (default), 2, 4	Number of cell-specific reference signal (CRS) antenna ports

opts — Index generation options

cell array

Index generation options, specified as a string or a cell array of strings that can contain the following values.

Option	Values	Description
Indexing style	'ind' (default), 'sub'	Style for the returned indices, specified as one of the following options. <ul style="list-style-type: none"> 'ind' — returns the indices in linear index form as a column vector (default) 'sub' — returns the indices in [subcarrier, symbol, antenna] subscript row style. The number of rows in the output, ind, is the number of resource elements (NRE). Thus, ind is an NRE-by-3 matrix.
Index base	'1based' (default), '0based'	Base value of the returned indices. Specify '1based' to generate indices where the first value is one. Specify '0based' to generate indices where the first value is zero.
Indexing unit	're' (default), 'reg'	Unit of the returned indices. Specify 're' to indicate that the returned values

Option	Values	Description
		correspond to individual resource elements (REs). Specify 'reg' to indicate that the returned values correspond to resource element groups (REGs).

Data Types: char | cell

Output Arguments

ind — Subframe PCFICH RE indices

numeric matrix

Subframe PCFICH RE indices, returned as a numeric matrix of size 16-by-CellRefP. Each column of **ind** contains per-antenna indices for 16 resource elements in one of the CellRefP array planes. The rows are ordered as the PCFICH modulation symbols should be mapped.

See Also

lteDLResourceGrid | ltePCFICH | ltePCFICHInfo | ltePDCCHIndices | ltePHICHIndices

Introduced in R2014a

ltePCFICHInfo

PCFICH resource information

Syntax

```
info = ltePCFICHInfo
```

Description

`info = ltePCFICHInfo` returns a structure `info` containing the Physical Control Format Indicator Channel (PCFICH) subframe resources.

For the PCFICH, $NREG = 4$ and $NRE = 16 = 4 \times NREG$. These values are fixed for the system.

Examples

Get PCFICH Resource Information

Display information about the PCFICH subframe resources.

```
info = ltePCFICHInfo
```

```
    NREG: 4  
    NRE: 16
```

Output Arguments

info — PCFICH resource information

scalar structure

PCFICH resource information, returned as a scalar structure. It can contain the following fields.

Parameter Field	Description	Values	Data Type
NRE	Number of resource elements (REs) assigned to PCFICH (4×NREG)	Nonnegative scalar integer	uint64
NREG	Number of resource element groups (REGs) assigned to PCFICH	Nonnegative scalar integer	uint64

See Also

ltePCFICH | ltePCFICHDecode | ltePCFICHIndices | ltePCFICHPRBS

Introduced in R2014a

ltePCFICHPRBS

PCFICH pseudorandom scrambling sequence

Syntax

```
seq = ltePCFICHPRBS(enb,n)
seq = ltePCFICHPRBS(enb,n,mapping)
```

Description

`seq = ltePCFICHPRBS(enb,n)` returns a vector containing the first `n` outputs of the physical control format indicator channel (PCFICH) scrambling sequence when initialized according to cell-wide settings structure, `enb`.

`seq = ltePCFICHPRBS(enb,n,mapping)` allows control over the format of the returned sequence, `seq`, through the `mapping` string.

Examples

Generate PCFICH Pseudorandom Scrambling Sequence

Generate a pseudorandom scrambling sequence for the PCFICH. Each resource element (RE) in the PCFICH is QPSK-modulated, resulting in two bits-per-symbol mapping on each resource element.

```
enb = lteRMCDL('R.14');
info = ltePCFICHInfo;
pcfichPrbsSeq = ltePCFICHPRBS(enb,info.NRE*2);
size(pcfichPrbsSeq)
pcfichPrbsSeq(1:10)
```

```
32      1
      0
      1
      0
```

```
0
0
0
0
1
1
0
```

The returned output is a 32-by-1 logical column vector containing zeros and ones.

Generate Signed PCFICH Pseudorandom Scrambling Sequence

Generate a signed pseudorandom scrambling sequence for the PCFICH. Each resource element (RE) in the PCFICH is QPSK-modulated, resulting in two bits-per-symbol mapping on each resource element.

```
enb = lteRMCDL('R.14');
info = ltePCFICHInfo;
pcfichPrbsSeq = ltePCFICHPRBS(enb,info.NRE*2,'signed');
size(pcfichPrbsSeq)
pcfichPrbsSeq(1:10)
```

```
32      1
1
-1
1
1
1
1
1
1
-1
-1
1
```

The returned output is a 32-by-1 numeric column vector containing ones and negative ones.

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. `enb` contains the following fields.

NCe11ID — Physical layer cell identity

0...503

Physical layer cell identity, specified as a nonnegative scalar integer in the range of 0 to 503.

Data Types: `double`

NSubframe — Subframe number

positive scalar integer

Subframe number, specified as a positive scalar integer greater than 0.

Data Types: `double`

Data Types: `struct`

n — Length of scrambling sequence

positive scalar integer

Length of scrambling sequence, specified as a positive scalar integer greater than 0. This argument determines the number of elements in the output vector, `seq`.

Data Types: `double`

mapping — Controls the format of the returned sequence

'binary' (default) | 'signed'

Controls the format of the returned sequence, specified as either binary or signed. Valid formats are ('binary' (default), 'signed'). 'binary' maps true to 1 and false to 0, and 'signed' maps true to -1 and false to 1.

Data Types: `char`

Output Arguments

seq — PCFICH pseudorandom scrambling sequence

logical column vector | numeric column vector

PCFICH pseudorandom scrambling sequence, returned as a logical column vector or a numeric column vector. This argument contains the first `n` outputs of the PCFICH

scrambling sequence when initialized according to cell-wide settings structure, `enb`. If you set `mapping` to `'signed'`, the output is of data type `double`. Otherwise, it is of data type `logical`.

Data Types: `logical` | `double`

See Also

`ltePCFICH` | `ltePCFICHDecode` | `ltePCFICHIndices` | `ltePCFICHInfo` | `ltePRBS`

Introduced in R2014a

ltePDCCH

Physical downlink control channel

Syntax

```
[sym,info] = ltePDCCH(enb,cw)
[sym,info] = ltePDCCH(enb,cw,NREG)
[sym,info] = ltePDCCH(enb,cw,NREG,CCEGAINS)
```

Description

[sym,info] = ltePDCCH(enb,cw) returns an NRE-by-CellRefP complex matrix sym of modulation symbols given the input bit vector cw.

The function returns a matrix (sym) of complex modulation symbols generated by the set of Physical Downlink Control Channels (PDCCH) in a subframe. The channel processing includes the stages of scrambling, QPSK modulation, layer mapping and precoding, followed by REG interleaving and cyclic shifting. For a given input bit vector (typically the PDCCH multiplex), the output matrix sym will contain the QPSK symbols in column-wise antenna form. Any input bits with value < 0 are turned into <NIL> ('0') symbols. The optional structure info returns control resourcing information about the output symbols (see ltePDCCHInfo for details).

[sym,info] = ltePDCCH(enb,cw,NREG) returns matrix sym. With this syntax, the number of output QPSK symbols, NRE, is fixed by the NREG input value (NRE=4×NREG) instead of being calculated from the parameters of the enb structure. These sizes are reflected in the info structure.

[sym,info] = ltePDCCH(enb,cw,NREG,CCEGAINS) returns matrix sym. With this syntax, the CCEGAINS vector parameter allows control of the QPSK symbol gains on a per CCE basis.

Examples

Generate PDCCH Symbols

Generate complex modulated symbols for the PDCCH. The length of the input bit vector, `cw`, is the maximum number of input bits that can be transmitted on the PDCCH.

```
enb = lteRMCDL('R.0');
pdcchInfo = ltePDCCHInfo(enb);
cw = randi([0,1],pdcchInfo.MTot,1);
[pdcchSym,info] = ltePDCCH(enb,cw);
size(pdcchSym)
pdcchSym(1:10)
```

```
452      1

0.7071 - 0.7071i
-0.7071 - 0.7071i
0.7071 - 0.7071i
-0.7071 + 0.7071i
0.7071 - 0.7071i
0.7071 - 0.7071i
0.7071 + 0.7071i
0.7071 - 0.7071i
-0.7071 - 0.7071i
-0.7071 + 0.7071i
```

The first output, `pdcchSym`, is a 452-by-1 column vector of complex modulated PDCCH symbols.

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. `enb` contains the following fields.

Parameter Field	Required or Optional	Values	Description
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Integer greater than 0	Subframe number
NDLRB	Required	Integer within the range 6 to 110	Number of downlink (DL) resource blocks (RBs)
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
CFI	Required	1, 2, or 3	Control format indicator value
Ng	Required	'Sixth', 'Half', 'One', 'Two'	PHICH group multiplier
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following field is required when DuplexMode is set to 'TDD'.			
TDDConf	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration

Data Types: struct

cw — Input bit vector

vector

Input bit vector that is 32 elements in length, specified as a vector. If `length(cw) < 32`, `cw` is padded with zeros prior to channel processing. If `length(cw) > 32`, only the first 32 elements are used.

Example: `cw = lteCFI(struct('CFI',1));`

Data Types: int8

NREG — Resource element groups (REGs) assigned to PDCCH

scalar

Resource element groups (REGs) assigned to PDCCH.

CCEGAINS — Vector that controls the QPSK symbol gains on a per CCE basis

vector

Vector that controls the QPSK symbol gains on a per CCE basis. Each CCE (Control Channel Element) is a group of 36 QPSK symbols (72 bits) and is the minimum unit that a single coded DCI can be mapped to. The number of complete CCE, $NCCE = \text{floor}(NREG/9)$, is available via the `NCCE` field in `info`. Each element of `CCEGAINS` acts as a linear multiplier to all 36 symbols generated from the associated block of 72 input bits. If `CCEGAINS` does not cover all the NREG symbols i.e. $\text{length}(CCEGAINS) < NCCE$, then the uncovered CCE will receive zero power. Note that all symbols are interleaved prior to output.

Data Types: double

Complex Number Support: Yes

Output Arguments

sym — PDCCH modulation symbols

Complex matrix

PDCCH modulation symbols, given the input bit vector `cw`, returned as a `NRE-by-CellRefP` complex matrix. `NRE` is the number of QPSK symbols per antenna and `CellRefP` is the number of TX antenna ports. `NRE` corresponds to the number of control region resource elements assigned to the PDCCH given the structure `enb`.

Data Types: double

Complex Number Support: Yes

info — Information for various PDCCH resourcing quantities

Structure

Information for various PDCCH resourcing quantities, returned as a structure. It contains fields including `NRE`, `NREG` and `MTot`.

`MTot` is the maximum number of input bits that can be transmitted on the `NRE` symbols ($MTot = 2 \times NRE = 8 \times NREG$). If $\text{length}(cw) < MTot$, the input is padded with `(MTot-`

length(*cw*) <NIL> elements which translate to 0 valued symbols. Any elements of input vector *cw* valued < 0 are also treated as <NIL> elements. If length(*cw*) > *MTot* then only the first *MTot* bits are used.

Data Types: struct

See Also

lteDCIEncode | ltePDCCHDecode | ltePDCCHIndices | ltePDCCHInfo |
ltePDCCHInterleave | ltePDCCHPRBS | ltePDCCHSearch | ltePDCCHSpace

Introduced in R2014a

ltePDCCHDecode

Physical downlink control channel decoding

Syntax

```
[bits,symbols] = ltePDCCHDecode(enb,sym)
[bits,symbols] = ltePDCCHDecode(enb,sym,hest,noiseest)
[bits,symbols] = ltePDCCHDecode(enb,sym,hest,noiseest,alg)
```

Description

`[bits,symbols] = ltePDCCHDecode(enb,sym)` performs the inverse of Physical Downlink Control Channel (PDCCH) processing on the matrix of complex modulated PDCCH symbols, `sym`, and cell-wide settings structure, `enb`. The channel inverse processing includes resource element group deinterleaving and cyclic shifting, deprecoding, symbol demodulation, and descrambling.

The function returns a column vector of soft bits, `bits`, and received constellation of complex symbol vector, `symbols`, resulting from performing the inverse of PDCCH processing. See [1] or `ltePDCCH` for details.

`[bits,symbols] = ltePDCCHDecode(enb,sym,hest,noiseest)` performs the decoding of the complex PDCCH symbols, `sym`, using cell-wide settings, `enb`, the channel estimate, `hest`, and the noise estimate, `noiseest`. For the `TxDiversity` transmission scheme, when `CellRefP` is 2 or 4, the reception is performed using an orthogonal space frequency block code (OSFBC) decoder. For the `Port0` transmission scheme, when `CellRefP` is 1, the reception is performed using minimum mean square error (MMSE) equalization.

`[bits,symbols] = ltePDCCHDecode(enb,sym,hest,noiseest,alg)` provides control over weighting the output soft bits, `bits`, with channel state information (CSI) calculated during the equalization stage using algorithmic configuration structure, `alg`. When `alg.CSI` is 'On', `bits` is scaled by channel state information calculated during the equalization process.

Examples

Decode PDCCH Symbols

Generate and decode the complex PDCCH modulated symbols for RMC R.0 from cell-wide settings structure, `enb`.

```
enb = lteRMCDL('R.0');
pdccchInfo = ltePDCCHInfo(enb);
codewordBits = randi([0,1],pdccchInfo.MTot,1);
pdccchSym = ltePDCCH(enb,codewordBits);
[softBits,symbols] = ltePDCCHDecode(enb,pdccchSym);
```

Input Arguments

`enb` — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. `enb` contains the following fields.

Parameter Field	Required or Optional	Values	Description
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number

Data Types: struct

`sym` — PDCCH modulation symbols

complex numeric matrix

PDCCH modulation symbols, specified as a complex numeric matrix of size `NRE-by-NRxAnts`. `NRE` is the number of QPSK symbols per antenna assigned to the PDCCH

(i.e. the number of control region resource elements) and `NRxAnts` is the number of receive antennas.

Data Types: `double`

Complex Number Support: Yes

hest — Channel estimate

3-D numeric array

Channel estimate, specified as a 3-D numeric array of size `NRE`-by-`NRxAnts`-by-`CellRefP`. `NRE` are the frequency and time locations corresponding to the PDCCH RE positions (a total of `NRE` positions), `NRxAnts` is the number of receive antennas, and `CellRefP` is the number of cell-specific reference signal antennas, given by `enb.CellRefP`.

Data Types: `double`

Complex Number Support: Yes

noiseest — Noise estimate

numeric scalar

Noise estimate, specified as a numeric scalar. This input argument is an estimate of the noise power spectral density per RE on received subframe. This estimate is produced by the `lteDLChannelEstimate` function.

Data Types: `double`

a1g — Algorithmic configuration to calculate CSI for weighting soft bits

structure

Algorithmic configuration to calculate CSI for weighting soft bits, specified as a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
CSI	Optional	'On' (default), 'Off'	Flag to control whether output bits get weighted with channel state information (CSI) calculated during the equalization stage. If 'On', soft bits are weighted by CSI.

Data Types: `struct`

Output Arguments

bits — Soft bits

numeric column vector

Soft bits, returned as a numeric column vector. **bits** is the received PDCCH payload containing coded downlink control information (DCI) messages. It is optionally scaled by channel state information (CSI) calculated during the equalization process.

Data Types: `double`

symbols — Received constellation symbols

complex numeric column vector

Received constellation symbols, returned as a complex numeric column vector.

Data Types: `double`

Complex Number Support: Yes

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDCIDecode` | `ltePDCCH` | `ltePDCCHDeinterleave` | `ltePDCCHIndices` | `ltePDCCHInfo` | `ltePDCCHPRBS` | `ltePDCCHSearch` | `ltePDCCHSpace`

Introduced in R2014a

ltePDCCHDeinterleave

PDCCH deinterleaving and cyclic shifting

Syntax

```
out = ltePDCCHDeinterleave(enb,in)
```

Description

`out = ltePDCCHDeinterleave(enb,in)` performs the PDCCH Resource Element Groups (REGs) deinterleaving and cyclic shifting to undo the processing described in section 6.8.5 of [1]. This function takes PDCCH complex modulated symbols in an M -by- P matrix `in`. M is the number of modulated symbols and P is the number of transmit antennas. The M modulated symbols specified in input matrix `in` must be a concatenation of symbol quadruplets. If the input `in` is a vector, it deinterleaves the elements of the vector. If `in` is a matrix, it deinterleaves the rows.

The cyclic shifting process is the reverse of the `NCe11ID` dependent cyclic shift carried out during PDCCH coding to avoid intercell interference. The de-interleaving is performed to reverse the permutation operation described in section 5.1.4.2.1 of [2] while making the exception that “bits” are replaced by “symbol quadruplets.”

Examples

Deinterleave PDCCH Symbols

Perform PDCCH resource element group (REG) deinterleaving.

First, interleave the PDCCH symbol bits, `cw`. Then, deinterleave the output and compare it with the input bit vector, `cw`.

```
enb = lteRMCDL('R.0');  
pdcchInfo = ltePDCCHInfo(enb);  
cw = randi([0,1],pdcchInfo.MTot,1);  
interleavedBits = ltePDCCHInterleave(enb,cw);
```



```
deinterleavedBits = ltePDCCHDeinterleave(enb,interleavedBits);
isequal(cw,deinterleavedBits)
```

1

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. **enb** can contain the following fields.

NCellID — Physical layer cell identity

integer (0...503)

Physical layer cell identity, specified as an integer in the range of 0 to 503.

Data Types: struct

in — PDCCH complex modulated input symbols

numeric matrix

PDCCH complex modulated input symbols, specified as a numeric matrix of size M -by- P , where M is the number of modulated symbols and P is the number of transmit antennas. The M modulated symbols specified in input matrix **in** must be a concatenation of symbol quadruplets. If the input **in** is a vector, it deinterleaves the elements of the vector. If **in** is a matrix, it deinterleaves the rows.

Data Types: double

Complex Number Support: Yes

Output Arguments

out — Deinterleaved output

numeric column vector

Deinterleaved output, returned as a numeric column vector.

Data Types: double

Complex Number Support: Yes

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`ltePDCCH` | `ltePDCCHDecode` | `ltePDCCHIndices` | `ltePDCCHInfo` |
`ltePDCCHInterleave` | `ltePDCCHPRBS` | `ltePDCCHSearch` | `ltePDCCHSpace`

Introduced in R2014a

ltePDCCHIndices

PDCCH resource element indices

Syntax

```
ind = ltePDCCHIndices(enb)
ind = ltePDCCHIndices(enb,opts)
ind = ltePDCCHIndices(enb,exreg,opts)
```

Description

`ind = ltePDCCHIndices(enb)` returns a *NRE-by-CellRefP* matrix of 1-based linear indexing RE indices given the structure `enb`. It returns the subframe resource element (RE) indices for the physical downlink control channels (PDCCH). By default, `ind` is a *NRE-by-CellRefP* matrix of indices in a 1-based linear indexing style which can directly index elements of a *N-by-M-by-CellRefP* array representing the subframe grid across *CellRefP* antenna ports. Each column of `ind` identifies the same set of *NRE* subframe resource elements but with indices offset to select them in a different antenna “page” of the 3-D resource array.

The *NRE* indices returned cover all PDCCH resources in the control region not already assigned to PCFICH or PHICH (see `ltePDCCHInfo`). They are ordered as the complete block of padded, interleaved and shifted PDCCH modulation symbols that should then be mapped, as described in section 6.8.5 of [1].

`ind = ltePDCCHIndices(enb,opts)` allows control of the format of the returned indices through a cell array `opts`.

`ind = ltePDCCHIndices(enb,exreg,opts)` will return a matrix of indices as above where the resources not to be assigned to PDCCH are defined explicitly by vector `exreg` rather than taken to be the PCFICH and PHICH configured by `enb`. The `exreg` must contain valid resource element group (REG) indices but can be either 0 or 1-based throughout, and indices which do not fall within the control region are ignored.

Examples

Get PDCCH Resource Element Indices

Retrieve PDCCH resource element (RE) indices.

Create an RMC R.0 configuration structure and find its PDCCH RE indices. Display the size of the indices.

```
enb = lteRMCDL('R.0');
ind = ltePDCCHIndices(enb);
size(ind)

    452     1
```

Get PDCCH Indices and Exclude Resources

Explicitly exclude resources when retrieving PDCCH indices.

First, do not exclude any resources. Call the `ltePDCCHIndices` function and provide an empty matrix for the argument `exreg`.

```
enb = lteRMCDL('R.0');
ind = ltePDCCHIndices(enb,[],'re');
size(ind)

    480     1
```

All RE indices are returned in the required mapping order.

Next, explicitly exclude the PCFICH and PHICH indices.

```
enb = lteRMCDL('R.0');
exreg = [ltePCFICHIndices(enb,'reg'); ltePHICHIndices(enb,'reg')];
ind = ltePDCCHIndices(enb,exreg,'re');
size(ind)

    452     1
```

This call returns the same result as the default syntax call, `ltePDCCHIndices(enb)`.

Input Arguments

enb — Cell-wide settings
structure

enb is a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Integer within the range 6 to 110	Number of downlink (DL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CFI	Required	1, 2, or 3	Control format indicator value
Ng	Required	'Sixth', 'Half', 'One', 'Two'	HICH group multiplier
PHICHDur	Optional	'Normal' (default), 'Extended'	PHICH duration
DuplexMod	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following field is required when DuplexMode is set to 'TDD'.			
TDDConf	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
NSubframe	Required	Integer greater than 0	Subframe number

Data Types: struct

opts — Option strings for symbol formatting

string | cell array of strings

Option strings for symbol formatting, specified as a string or a cell array of strings. `opts` can contain the following option strings.

Indexing unit — Format of the returned indices

're' (default) | 'reg'

Format of the returned indices, specified as a string. This parameter indicates that the returned values correspond to either individual resource elements (REs) or resource element groups (REGs).

Data Types: char

Indexing style — Style of the returned indices

'ind' (default) | 'sub'

Style of the returned indices, specified as a string. This parameter indicates the style of returned indices as either linear index form or [*subcarrier*, *symbol*, *antenna*] subscript row form.

Data Types: char

Index base — Index base of the returned indices

'1based' (default) | '0based'

Index base of the returned indices, specified as a string. This parameter indicates the index base of returned indices as either 1-based or 0-based.

Data Types: char

Data Types: char | cell

exreg — Resources excluded from PDCCH

vector

Resources excluded from PDCCH, specified as a vector. This vector explicitly defines those resources not to be assigned to PDCCH. `exreg` must contain valid resource element group (REG) indices but can be either 0- or 1-based throughout. Indices which do not fall within the control region are ignored.

Data Types: double

Output Arguments

ind — PDCCH RE indices

numeric matrix

PDCCH RE indices, returned as a numeric matrix of size `NRE-by-CellRefP`. The matrix contains 1-based linear indexing RE indices. Each column of `ind` identifies the same set of NRE subframe resource elements but with indices offset to select them in a different antenna “page” of the 3-D resource array.

Data Types: double

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`ltePDCCH` | `ltePDCCHDecode` | `ltePDCCHDeinterleave` | `ltePDCCHInfo` | `ltePDCCHInterleave` | `ltePDCCHSearch` | `ltePDCCHSpace`

Introduced in R2014a

ltePDCCHInfo

PDCCH resource information

Syntax

```
info = ltePDCCHInfo(enb)
```

Description

`info = ltePDCCHInfo(enb)` returns a structure `info` containing information about the Physical Downlink Control Channel (PDCCH) subframe resources.

Within a non-MBMS downlink subframe, the first `info.NSymbols` OFDM symbols represent its *control region* and carry the PCFICH, PHICH and PDCCH. The non-reference resource elements (RE) not assigned to the PCFICH or PHICH are associated with PDCCH transmission and their number is given by `info.NRE`. These resources carry the set of PDCCH where each PDCCH carries a single encoded DCI message. Each PDCCH can be transmitted on 1,2,4 or 8 Control Channel Elements (CCE) where 1 CCE = 9 REG = 36 RE = 72 bits. As such, not all of the NRE elements can carry actual PDCCH instances, with (`info.NRE — info.NREUsed`) being unavailable for PDCCH transmission.

Examples

Get PDCCH Information

Get information about the PDCCH subframe resources for RMC R.0.

```
enb = lteRMCDL('R.0');  
info = ltePDCCHInfo(enb)
```

```
    NREG: 113  
    NRE: 452  
    NCCE: 12
```


NREGUsed: 108
 NREUsed: 432
 MTot: 904
 NSymbols: 3

Input Arguments

enb — Cell-wide settings structure

scalar structure

Cell-wide settings, specified as a scalar structure. **enb** is a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
NDRB	Required	Integer within the range 6 to 110	Number of downlink (DL) resource blocks (RBs)
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CFI	Required	1, 2, 3	Control format indicator value
Ng	Required	'Sixth', 'Half', 'One', 'Two'	PHICH group multiplier
DuplexMod	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
NSubframe	Required	Nonnegative scalar integer	Subframe number
The following field is required when DuplexMode is set to 'TDD'.			
TDDConf	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration

Data Types: struct

Output Arguments

info — PDCCH subframe resource information structure

PDCCH subframe resource information, returned as a structure. `info` contains the following fields.

Parameter Field	Required or Optional	Values	Description
NRE	Required	Numeric scalar	Total number of resource elements (REs) associated with PDCCHs ($4 \times \text{NREG}$)
NREG	Required	Numeric scalar	Total number of resource element groups (REGs) associated with PDCCHs ($4 \times \text{NRE}$)
MTot	Required	Numeric scalar	Total number of bits associated with PDCCHs ($8 \times \text{NRE}$) Total number of bits associated with PDCCHs, returned as a numeric scalar ($8 \times \text{NREG}$). MTot is the maximum number of input bits that can be transmitted on the NRE symbols ($\text{MTot} = 2 \times \text{NRE} = 8 \times \text{NREG}$).
NCCE	Required	Numeric scalar	Number of control channel elements available for actual PDCCH usage
NREGUsed	Required	Numeric scalar	Number of resource element groups (REGs) available for actual PDCCH usage
NREUsed	Required	Numeric scalar	Number of resource elements (REs) available for actual PDCCH usage
NSymbols	Required	Numeric scalar	Total number of OFDM symbols spanned by the PDCCH

Data Types: struct

See Also

ltePDCCH | ltePDCCHDecode | ltePDCCHDeinterleave | ltePDCCHIndices |
ltePDCCHInterleave | ltePDCCHPRBS | ltePDCCHSearch | ltePDCCHSpace

Introduced in R2014a

ltePDCCHInterleave

PDCCH interleaving and cyclic shift

Syntax

```
out = ltePDCCHInterleave(enb,in)
```

Description

`out = ltePDCCHInterleave(enb,in)` performs the interleaving and cyclic shifting on PDCCH resource element groups (REGs) as described in section 6.8.5 of [1]. This function takes PDCCH complex modulated symbols in an M -by- P matrix, `in`. M is the number of modulated symbols and P is the number of transmit antennas. The M modulated symbols, specified in input matrix `in`, must be a concatenation of symbol quadruplets. If the input, `in`, is a vector, it interleaves the elements of the vector. Otherwise, if the input, `in`, is a matrix, it interleaves the rows.

The permutation, or interleaving, operation is performed as described in section 5.1.4.2.1 of [2], with the exception that “bits” are replaced by “symbol quadruplets.” Then, the block of PDCCH-modulated symbol quadruplets are cyclically shifted with `NCellID` to avoid intercell interference.

Examples

Perform PDCCH Interleaving

Interleave a sequential input.

```
enb = lteRMCDL('R.0');  
info = ltePDCCHInfo(enb);  
out = ltePDCCHInterleave(enb,(1:info.MTot).');  
out(1:10)
```

```
13  
14  
15
```

16
141
142
143
144
269
270

The resulting output is a vector concatenated input quadruplets.

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. **enb** contains the following fields.

NCellID — Physical layer cell identity

0...503

Physical layer cell identity, specified as an integer in the range of [0,503].

Data Types: struct

in — PDCCH complex modulated input symbols

complex-valued numeric matrix | numeric vector

PDCCH complex modulated input symbols, specified in a complex-valued numeric matrix or a numeric vector. As a matrix, its size is M -by- P , where M is the number of modulated symbols and P is the number of transmit antennas. The M modulated symbols specified in input matrix, **in**, must be a concatenation of symbol quadruplets. If the input, **in**, is a vector, it interleaves the elements of the vector. If **in** is a matrix, it interleaves the rows.

Data Types: double

Complex Number Support: Yes

Output Arguments

out — Interleaved output

Numeric vector

Interleaved output, returned as a numeric vector.

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

[ltePDCCH](#) | [ltePDCCHDecode](#) | [ltePDCCHDeinterleave](#) | [ltePDCCHIndices](#) | [ltePDCCHInfo](#) | [ltePDCCHPRBS](#) | [ltePDCCHSearch](#) | [ltePDCCHSpace](#)

Introduced in R2014a

ltePDCCHPRBS

PDCCH pseudorandom scrambling sequence

Syntax

```
seq = ltePDCCHPRBS(enb,n)
seq = ltePDCCHPRBS(enb,n,mapping)
```

Description

`seq = ltePDCCHPRBS(enb,n)` returns a column vector containing the first `n` outputs of the Physical Downlink Control Channel (PDCCH) scrambling sequence when initialized according to cell-wide settings structure, `enb`.

`seq = ltePDCCHPRBS(enb,n,mapping)` allows control over the format of the returned sequence, `seq`, through the `mapping` string. Valid formats are 'binary', which is the default, and 'signed'. 'binary' maps true to 1 and false to 0. 'signed' maps true to -1 and false to 1.

Examples

Return Signed PDCCH Scrambling Sequence

```
enb = lteRMCDL('R.0');
seq = ltePDCCHPRBS(enb,7,'signed')
```

```
1
1
1
1
1
1
1
-1
```

Return Binary PDCCH Scrambling Sequence

```
enb = lteRMCDL('R.0');
```

```
seq = ltePDCCHPRBS(enb,7)
    0
    0
    0
    0
    0
    0
    1
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. This argument contains the following fields.

NCellID — Physical layer cell identity

0...503

Physical layer cell identity, specified as a nonnegative scalar integer in the range of 0 to 503.

Data Types: double

NSubframe — Subframe number

positive scalar integer

Subframe number, specified as a positive scalar integer greater than 0.

Data Types: double

Data Types: struct

n — Number of elements in returned sequence

numeric scalar

Number of elements in returned sequence, `seq`, specified as a numeric scalar.

Data Types: double

mapping — Sequence format

'binary' (default) | 'signed'

String that controls the format of the returned sequence `seq`. The string 'binary' maps true to 1 and false to 0. The string 'signed' maps true to -1 and false to 1.

Data Types: char

Output Arguments

seq — PDCCH pseudorandom scrambling sequence

logical column vector | numeric column vector

PDCCH pseudorandom scrambling sequence, returned as a logical column vector or a numeric column vector. This argument contains the first `n` outputs of the PDCCH scrambling sequence when initialized according to cell-wide settings structure, `enb`. If you set `mapping` to 'signed', the output data type is double. Otherwise, the output data type is logical.

Data Types: logical | double

See Also

ltePDCCH | ltePDCCHDecode | ltePDCCHDeinterleave | ltePDCCHIndices | ltePDCCHInfo | ltePDCCHInterleave | ltePDCCHSearch | ltePDCCHSpace

Introduced in R2014a

ltePDCCHSearch

PDCCH downlink control information search

Syntax

```
[dcistr,dcibits] = ltePDCCHSearch(enb,chs,softbits)
```

Description

[dcistr,dcibits] = ltePDCCHSearch(enb,chs,softbits) recovers downlink control information (DCI) message structures, `dcistr`, and corresponding vectors of DCI message bits, `dcibits`, after blind decoding the multiplexed physical downlink control channels (PDCCHs) within the control region given by input vector of soft bits, `softbits`, cell-wide settings `enb` and user equipment (UE)-related configuration structure, `chs`.

The UE is required to monitor multiple PDCCHs within the control region. The UE is only informed of the width, in OFDM symbols, of the control region within a subframe, and is not aware of the exact location of PDCCHs relevant to it. The UE finds the PDCCHs relevant to it by monitoring a set of PDCCH candidates, a set of consecutive control candidate elements (CCEs) on which PDCCH could be mapped, in every subframe. For details, see `ltePDCCHSpace`. This process is referred to as *blind decoding*.

To simplify the decoding task at the UE, the whole control region is subdivided into common and UE-specific search spaces which the UE monitors (monitor implies attempting to decode each PDCCH). Each search space comprises 2, 4 or 6 PDCCH candidates whose data length depends on its corresponding PDCCH format; each PDCCH must be transmitted on 1, 2, 4 or 8 CCE (1 CCE = 72 bits). The common search space is limited to only two aggregation levels, 4 and 8, while the UE-specific search space can have an aggregation level of 1, 2, 4, or 8.

The common search space carries control information common to all UEs and is therefore monitored by all UEs within a cell. The common control information carries initial important information including paging information, system information and random access procedures. The UE monitors the common search space by de-masking each PDCCH candidate with different RNTIs e.g. P-RNTI, SI-RNTI, RA-RNTI etc.

In the UE-specific search space the UE finds the PDCCH relevant to it by monitoring a set of PDCCH candidates in every subframe. If no CRC error is detected when the UE demasks a PDCCH candidate with its RNTI (16-bit C-RNTI value), the UE determines that the PDCCH candidate carries its own control information.

The number and location of candidates within a search space is different for each PDCCH format. There are four PDCCH formats (i.e., 0, 1, 2 or 3). If the UE fails to decode any PDCCH candidates for a given PDCCH format, it tries to decode candidates for another PDCCH format.

DCI messages are blindly decoded on the basis of their lengths. The lengths and order in which they are searched for is provided by `lteDCIInfo`. If one or more messages have the same length then the message format that is first in the list is used to decode the message. The other potential message formats are ignored. The transmission mode (TM) is not taken into account during blind search and no DCI message format is filtered on the basis of transmission mode. Format 3 and 3A (power adjustment commands for PUSCH and PUCCH) are not searched by this function.

This function returns the DCI messages in two forms:

- `dcistr` is a cell array of structures. Each structure represents a successfully decoded DCI whose fields match those of the associated DCI format. Each structure contains the fields associated with one or more decoded DCI messages. Since multiple PDCCHs can be transmitted in a subframe, the UE has to monitor all possible PDCCHs directed at it. If more than one PDCCHs is directed to the UE or successfully decoded then DCISTR will contain that number of decoded DCI messages.
- `dcibits` is a cell array containing one or more vectors. Each vector contains the bit stream of a recovered DCI message including any zero-padding. Each vector of bit values corresponds to successfully decoded DCI messages. For details, see `lteDCI`.

Examples

Get DCI Message Structure and Bits

Extract the PDCCH symbols from the transmit resource grid and decode them.

```
rmc = lteRMCDL('R.0');
[~,txGrid] = lteRMCDLTool(rmc,[1;0;0;1]);
pdccchSymbols = txGrid(ltePDCCHIndices(rmc));
rxPdcchBits = ltePDCCHDecode(rmc,pdccchSymbols);
```

The UE monitors the common search space by demasking the PDCCH candidate with RNTIs. Perform blind decoding of the multiplexed PDCCH within the control region. Recover the DCI cell array, `rxDCI`, and the corresponding vector of DCI message bits, `rxDCIBits`.

```
ueConfig.RNTI = rmc.PDSCH.RNTI;
[rxDCI,rxDCIBits] = ltePDCCHSearch(rmc,ueConfig,rxPdcchBits);
```

Display the first successfully decoded DCI, `decDCI`, a structure whose fields match those of the associated DCI format. Also, get the bit stream of the first recovered DCI message, including any zero-padding.

```
decDCI = rxDCI{1}
decDCIBits = rxDCIBits{1};

    DCIFormat: 'Format1'
        CIF: 0
AllocationType: 1
Allocation: [1x1 struct]
ModCoding: 14
    HARQNo: 0
    NewData: 1
        RV: 0
    TPCPUCCH: 0
    TDDIndex: 0
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure with these fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set	Number of downlink (DL) resource blocks (RBs) See Note

Parameter Field	Required or Optional	Values	Description
		{'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs) See Note
NSubframe	Required	Nonnegative scalar integer	Subframe number
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as one of the following: <ul style="list-style-type: none"> 'FDD' — Frequency division duplex (default) 'TDD' — Time division duplex

Note: Note that at least one of the NDLRB and NULRB parameter pair must be provided. If either is not provided then the function assumes symmetric link bandwidth where NDLRB and NULRB are equal. No warning message will be displayed in this event.

Data Types: `struct`

chs — User Equipment (UE) related configuration

structure

User Equipment (UE) related configuration, specified as a structure containing the following field.

RNTI — Radio network temporary identifier

1 (default) | numeric scalar

Radio network temporary identifier value, specified as a numeric scalar.

Data Types: `double`

Data Types: struct

softbits — Input vector of soft bits

numeric column vector

Input vector of soft bits, specified as a column vector of double values.

Data Types: double

Output Arguments

dcistr — DCI message structures

cell array of structures

DCI message structures, returned as a cell array of structures where each structure represents a successfully decoded DCI whose fields match those of the associated DCI format. Each structure contains the fields associated with one or more decoded DCI messages. Since multiple PDCCHs can be transmitted in a subframe, the UE must monitor all possible PDCCHs directed at it. If more than one PDCCH is directed to UE or successfully decoded, DCISTR contains that number of decoded DCI messages.

Each cell contains a structure with these fields.

DCIFormat — Downlink control information (DCI) format type

'Format0' | 'Format1' | 'Format1A' | 'Format1B' | 'Format1C' | 'Format1D'
 | 'Format2' | 'Format2A' | 'Format2B' | 'Format2C' | 'Format3' |
 'Format3A' | 'Format4'

Downlink control information (DCI) format type, specified as a string. The following table presents the fields associated with each DCI format.

DCI Formats	DCISTR Fields	Size	Description
'Format0'	DCIFormat	-	'Format0'
	FreqHopping	1-bit	PUSCH frequency hopping flag
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation, coding scheme and redundancy version
	NewData	1-bit	New data indicator

DCI Formats	DCI Fields	Size	Description
	TPC	2-bits	PUSCH TPC command
	CShiftDMRS	3-bits	Cyclic shift for DM RS
	CQIReq	1-bit	CQI request
	TDDIndex	2-bits	For TDD config 0, this field is the Uplink Index. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format1'	DCIFormat	-	'Format1'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3-bits (FDD) 4-bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format1A'	DCIFormat	-	'Format1A'

DCI Formats	DCISTR Fields	Size	Description
	AllocationType	1-bit	VRB assignment flag: 0 (localized), 1 (distributed)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3-bits (FDD) 4-bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format1B'	DCIFormat	-	'Format1B'
	AllocationType	1-bit	VRB assignment flag: 0 (localized), 1 (distributed)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3-bits (FDD) 4-bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator
	RV	2-bits	Redundancy version
	TPCPUCCH	2-bits	PUCCH TPC command

DCI Formats	DCISTR Fields	Size	Description
	TPMI	2-bits (2 antennas) 4-bits (4 antennas)	PMI information
	PMI	1-bit	PMI confirmation
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format1C'	DCIFormat	-	'Format1C'
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
'Format1D'	DCIFormat	-	'Format1D'
	AllocationType	1-bit	VRB assignment flag: 0 (localized), 1 (distributed)
	Allocation	variable	Resource block assignment/ allocation
	ModCoding	5-bits	Modulation and coding scheme
	HARQNo	3-bits (FDD) 4-bits (TDD)	HARQ process number
	NewData	1-bit	New data indicator
	RV	2-bits	Redundancy version
TPCPUCCH	2-bits	PUCCH TPC command	

DCI Formats	DCISTR Fields	Size	Description
	TPMI	2-bits (2 antennas) 4-bits (4 antennas)	Precoding TPMI information
	DLPowerOffset	1-bit	Downlink power offset
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2'	DCIFormat	-	'Format2'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command
	HARQNo	3-bits (FDD) 4-bits (TDD)	HARQ process number
	SwapFlag	1-bit	Transport block to codeword swap flag
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1

DCI Formats	DCISTR Fields	Size	Description
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
	PrecodingInfo	3-bits (2-antennas) 6-bits (4-antennas)	Precoding information
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2A'	DCIFormat	-	'Format2A'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command
	HARQNo	3-bits (FDD) 4-bits (TDD)	HARQ process number
	SwapFlag	1-bit	Transport block to codeword swap flag
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1

DCI Formats	DCISTR Fields	Size	Description
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
	PrecodingInfo	0-bits (2 antennas) 2-bits (4 antennas)	Precoding information
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format2B'	DCIFormat	-	'Format2B'
	AllocationType	1-bit	Resource allocation header: type 0, type 1 (only if downlink bandwidth is >10 PRBs)
	Allocation	variable	Resource block assignment/ allocation
	TPCPUCCH	2-bits	PUCCH TPC command
	HARQNo	3-bits (FDD) 4-bits (TDD)	HARQ process number

DCI Formats	DCI Fields	Size	Description
	ScramblingId	1-bit	Scrambling identity
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	RV1	2-bits	Redundancy version for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	RV2	2-bits	Redundancy version for transport block 2
	TDDIndex	2-bits	For TDD config 0, this field is not used. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
'Format3'	DCIFormat	-	'Format3'
	TPCCommands	variable	TPC commands for PUCCH and PUSCH
'Format3A'	DCIFormat	-	'Format3A'
	TPCCommands	variable	TPC commands for PUCCH and PUSCH
'Format4'	DCIFormat	-	'Format4'
	CIF	variable	Carrier indicator
	Allocation	variable	Resource block assignment/ allocation
	TPC	2-bits	PUSCH TPC command
	CShiftDMRS	3-bits	Cyclic shift for DM RS

DCI Formats	DCI STR Fields	Size	Description
	TDDIndex	2-bits	For TDD config 0, this field is Uplink Index. For TDD Config 1-6, this field is the Downlink Assignment Index. Not present for FDD.
	CQIReq	variable	CQI request
	SRSRequest	2-bits	SRS request
	AllocationType	1-bit	Resource allocation header: non-hopping PUSCH resource allocation type 0, type 1
	ModCoding	5-bits	Modulation, coding scheme and redundancy version
	NewData	1-bit	New data indicator
	ModCoding1	5-bits	Modulation and coding scheme for transport block 1
	NewData1	1-bit	New data indicator for transport block 1
	ModCoding2	5-bits	Modulation and coding scheme for transport block 2
	NewData2	1-bit	New data indicator for transport block 2
	PrecodingInfo	3-bits (2 antennas) 6-bits (4 antennas)	Precoding information

Data Types: char

Data Types: cell

dcibits — DCI message bits

cell array of numeric vectors

DCI message bits, returned as a cell array of one or more numeric vectors. Each vector contains the bit stream of a recovered DCI message including any zero-padding. Each vector of bit values corresponds to successfully decoded DCI messages. For details, see `lteDCI`.

Data Types: `cell`

See Also

`ltePDCCH` | `ltePDCCHDecode` | `ltePDCCHDeinterleave` | `ltePDCCHIndices` | `ltePDCCHInfo` | `ltePDCCHInterleave` | `ltePDCCHPRBS` | `ltePDCCHSpace`

Introduced in R2014a

ltePDCCHSpace

PDCCH search space candidates

Syntax

```
ind = ltePDCCHSpace(enb,ue)
ind = ltePDCCHSpace(enb,ue,opts)
```

Description

`ind = ltePDCCHSpace(enb,ue)` returns the (0,2,4,6)-by-2 matrix `ind` of search space PDCCH candidate indices given the structures `enb` and `ue`. Depending on input parameters each search space will contain (0,2,4,6) PDCCH candidate locations defined by the rows of `ind`. Each two-element row contains the inclusive [`begin`,`end`] indices of a single PDCCH candidate location. By default, the 1-based indices define the PDCCH locations in the block of all multiplexed PDCCH data bits to be transmitted in that subframe. The indices can also be returned in a number of alternative formats.

The control region of a downlink subframe comprises the multiplexing of all PDCCHs bits into a single block of data which is subsequently processed and interleaved prior to PDCCH resource mapping. A UE has to blindly decode individual PDCCH directed at it and this task is simplified by subdividing the whole region into common and UE-specific search spaces which the UE should monitor. Each space comprises 2, 4, or 6 PDCCH candidates whose data length depends on its PDCCH format; each PDCCH must be transmitted on 1, 2, 4, or 8 control channel elements (CCE) (1 CCE = 72 bits).

The returned search space is of the UE-specific type unless the `RNTI` field is missing from the structure `ue` when a common search space is returned. The search space will always contain 2, 4, or 6 candidates; therefore, `ind` has 2, 4, or 6 rows, unless the parameter combinations are not valid, in which case `ind` will be empty. For more information, see section 9.1.1 of [1]. The candidates in a space need not be unique, especially for smaller bandwidths.

`ind = ltePDCCHSpace(enb,ue,opts)` allows control of the format of the returned indices through a cell array of option strings, `opts`.

Examples

Get PDCCH Search Space Candidates

Find and use PDCCH search space candidates.

To illustrate the search space structuring of the PDCCH, set up a cell wide parameter structure, `enb`, with the following field values.

```
enb.NDLRB = 50;
enb.CFI = 2;
enb.CellRefP = 2;
enb.Ng = 'Sixth';
enb.NSubframe = 0;
```

This configuration defines a control region with the following information.

```
resInfo = ltePDCCHInfo(enb)
```

```
    NREG: 240
    NRE: 960
    NCCE: 26
  NREGUsed: 234
  NREUsed: 936
    MTot: 1920
  NSymbols: 2
```

The entire data block of padded, multiplexed PDCCHs needs to be 1920 bits, `resInfo.MTot`, in length. Using `-1` to represent <NIL> padding bits, create an “empty” multiplex.

```
pdccchs = -1*ones(1,resInfo.MTot);
```

Suppose you want to transmit all zeros in the first candidate of the UE-specific search space for PDCCH format 2 and the UE's RNTI = 1. For this format, a PDCCH spans 4 CCE or 288 bits, and the UE-specific search space contains two PDCCH candidates.

```
candidates = ltePDCCHSpace(enb,struct('PDCCHFormat',2,'RNTI',1))
```

```
    1441    1728
     1     288
```

These location values arise for `enb.NSubframe = 0`. They change in a pseudorandom fashion as the subframe number increases. Since the default candidate indices define

inclusive, 1-based bounds, we can use them to index the PDCCH data multiplex directly by using the MATLAB colon operator.

```
pdcchs(candidates(1,1):candidates(1,2)) = 0;
```

This command sets the 288 bits of the first PDCCH candidate to all zeros. The second candidate actually falls within the common search space also.

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure with these fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Numeric scalar value 6, 15, 25, 50, 75, and 100	Number of downlink (DL) resource blocks (RBs)
CFI	Required	1, 2, 3	Control format indicator value, specified as a double value.
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
Ng	Required	'Sixth', 'Half', 'One', 'Two'	HICH group multiplier
NSubframe	Required	Nonnegative scalar integer 0 is default	Subframe number
NREG	Optional	Nonnegative scalar integer	Total number of resource element groups (REGs) associated with PDCCHs, specified as a nonnegative scalar integer. Optional. If the NREG field is absent, enb must contain the following fields.

Parameter Field	Required or Optional	Values	Description
			<ul style="list-style-type: none"> • CyclicPrefix • CellRefP • CFI • Ng • DuplexMode • TDDConfig, but only for 'TDD' duplex mode
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMod	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
The following field is required only when DuplexMode is set to 'TDD'.			
TDDConf	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration

Data Types: struct

ue — UE-specific cell-wide settings

structure

UE-specific cell-wide settings, specified as a structure with the following fields.

Parameter Field	Required or Optional	Values	Description
PDCCHFor	Required	0, 1, 2, 3	PDCCH format
RNTI	Required	Scalar integer 1 is default	Radio network temporary identifier (RNTI) value (16 bits)

Data Types: struct

opts — Format of the returned indices

cell array of strings

Format of the returned indices, specified as a cell array of these option strings.

Index base — Index base of returned indices

'1based' (default) | 'Obased'

Index base of returned indices, specified as a string.

Data Types: char

Indexing unit — Index unit of returned values

'bits' (default) | 'cce'

Index unit of the returned values, specified as a string corresponding to bit indices or control channel elements (CCEs) indices.

Data Types: char

Data Types: cell

Output Arguments

ind — Search space PDCCH candidate indices

(0,2,4,6)-by-2 matrix

Search space PDCCH candidate indices, returned as a (0,2,4,6)-by-2 matrix given the structures `enb` and `ue`. It is a matrix of indices identifying a common or UE-specific PDCCH search space. Each 2-element row contains the inclusive $[begin, end]$ indices of a single PDCCH candidate location. By default, the 1-based indices define the PDCCH locations in the block of all multiplexed PDCCH data bits to be transmitted in that subframe. The indices can also be returned in a number of alternative formats.

Data Types: double

References

- [1] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePDCCH | ltePDCCHDecode | ltePDCCHDeinterleave | ltePDCCHIndices |
ltePDCCHInfo | ltePDCCHInterleave | ltePDCCHPRBS | ltePDCCHSearch

Introduced in R2014a

ltePDSCH

Physical downlink shared channel

Syntax

```
sym = ltePDSCH(enb,chs,cws)
```

Description

`sym = ltePDSCH(enb,chs,cws)` returns a matrix containing the physical downlink shared channel (PDSCH) complex symbols for cell-wide settings, `enb`, channel transmission configuration, `chs`, and the codeword or codewords contained in `cws`. The channel processing includes the stages of scrambling, symbol modulation, layer mapping, and precoding.

Examples

Generate PDSCH symbols for Test Model E-TM1.1 10MHz

This example generates the configuration structure for Test Model E-TM1.1 10 MHz, as specified in TS36.141

Initialize the test model. Generate information related to PDSCH indices. Execute `lteDLCH` to create the codeword, then generate the PDSCH symbols.

```
tm = lteTestModel('1.1','10MHz');  
tm.PDSCH.RNTI = 0;  
tm.PDSCH.RV = 0;  
  
prbset = (0:tm.NDLRB-1)';  
[ind,info] = ltePDSCHIndices(tm,tm.PDSCH,prbset);  
  
trBlk = randi([0,1],info.Gd,1);  
cw = lteDLCH(tm,tm.PDSCH,info.G,trBlk);
```

```
pdschSym = ltePDSCH(tm,tm.PDSCH,cw);
```

Generate PDSCH for Test 5.3

Specify cell-wide settings in parameter structure `enb`.

```
enb.NDLRB = 50;
enb.NCellID = 1;
enb.CellRefP = 2;
enb.NSubframe = 0;
enb.CFI = 2;
```

Specify channel configuration settings in `cfg`.

```
cfg.TxScheme = 'SpatialMux';
cfg.NLayers = 2;
cfg.Modulation = {'16QAM' '16QAM'};
cfg.PMISet = [0,1,0,1,0,1,0,1,0];
cfg.PRBSset = [(0:49)',(0:49)'];
cfg.RNTI = 1;
cfg.RV = [0,0];
```

Perform DL-SCH coding and PDSCH modulation for Test 5.3: RMC FDD R.11 10MHz 16QAM 2-layer spatial multiplexing, frequency selective precoding (Subframe 0), as specified in [1].

```
trData = {round(rand(1,12960)),round(rand(1,12960))};
cws = lteDLSCH(enb,cfg,[24768,24768],trData);
sym = ltePDSCH(enb,cfg,cws);
```

Input Arguments

`enb` — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NCellID	required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
NSubframe	required	Nonnegative scalar integer	Subframe number

Parameter Field	Required or Optional	Values	Description
CellRefP	required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
DuplexMode	optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that DuplexMode is set to 'TDD'.			
TDDConfig	optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following parameter fields are dependent upon the condition that chs.TxScheme is set to 'SpatialMux' or 'MultiUser'.			
CFI	required	1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB')
NDLRB	required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CyclicPrefix	optional	'Normal' (default), 'Extended'	Cyclic prefix length

chs — Channel-specific transmission configuration structure

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
Modulation	required	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
RNTI	required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)
TxScheme	required	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	Transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> 'SpatialMux' — Closed-loop spatial multiplexing. 'Port0' — Single-antenna port, port 0. 'TxDiversity' — Transmit diversity scheme. 'CDD' — Large delay CDD scheme. 'MultiUser' — Multiuser MIMO scheme. 'Port5' — Single-antenna port, port 5. 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). 'Port8' — Single-antenna port, port 8. 'Port7-14' — Up to 8-layer transmission, ports 7–14.

Parameter Field	Required or Optional	Values	Description
NLayers	required	1,...,8, depending on TxScheme	Number of transmission layers (downlink modulation)
The following parameters are dependent upon the condition that TxScheme is set to 'SpatialMux' or 'MultiUser'.			
PMISet	required	Integer vector (0, ..., 15)	Precoder matrix indication (PMI) set. It can contain either a single value, corresponding to single PMI mode, or multiple values, corresponding to multiple or subband PMI mode. The number of values depends on CellRefP, transmission layers and TxScheme. For more information about setting PMI parameters, see ltePMIInfo.
PRBSet	required	1- or 2-column integer matrix	<p>Zero-based physical resource block (PRB) indices corresponding to the slot wise resource allocations for this PDSCH. PRBSet can be assigned as:</p> <ul style="list-style-type: none"> • a column vector, the resource allocation is the same in both slots of the subframe, • a two-column matrix, this parameter specifies different PRBs for each slot in a subframe, • a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>
The following parameters are dependent upon the condition that TxScheme is set to 'Port5', 'Port7-8', 'Port8', or 'Port7-14'.			

Parameter Field	Required or Optional	Values	Description
W	optional	Numeric matrix, [] (default)	<p>Present only for wideband UE-specific beamforming ('Port5', 'Port7-8', 'Port8', 'Port7-14'). The NLayers-by-NTxAnts precoding matrix chosen according to TS 36.101 Annex B.4. The resulting precoding matrix is randomly selected from:</p> <ul style="list-style-type: none"> the set defined in TS 36.211 Section 6.3.4 for 'Port5', 'Port7-8' and 'Port8' transmission schemes or from the set associated with CSI reporting as defined in TS 36.213 Section 7.2.4 for the 'Port7-14' transmission scheme. <p>For R.48, the precoding matrix corresponding to PMI=0 is used.</p>

cws — Codeword or codewords

numeric vector | cell array

Codeword or codewords, specified as a vector of bit values for one codeword to be modulated, or a cell array containing one or two vectors of bit values corresponding to the one or two codewords to be modulated.

Output Arguments

sym — PDSCH symbols

complex numeric matrix

PDSCH symbols, returned as a complex numeric matrix. It has size N -by- P , where N is the number of modulation symbols for one antenna port and P is the number of transmission antennas. The complex symbols are generated using cell-wide settings, `enb`, channel transmission configuration, `chs`, and the codeword or codewords contained in `cws`.

Data Types: `double`

Complex Number Support: Yes

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.141. “Base Station (BS) conformance testing.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLSCH` | `ltePDSCHDecode` | `ltePDSCHIndices` | `ltePDSCHPRBS`

Introduced in R2014a

ltePDSCHDecode

Physical downlink shared channel decoding

Syntax

```
[cws, symbols] = ltePDSCHDecode(enb, chs, sym)
[cws, symbols] = ltePDSCHDecode(enb, chs, sym, hest, noiseest)
[cws, symbols] = ltePDSCHDecode(enb, chs, rxgrid, hest, noiseest)
```

Description

[cws, symbols] = ltePDSCHDecode(enb, chs, sym) performs the inverse of physical downlink shared channel (PDSCH) processing on the matrix of complex modulated PDSCH symbols, **sym**, using cell-wide settings structure, **enb**, and channel-specific configuration structure, **chs**. The channel inverse processing includes inverting the channel precoding, layer demapping and codeword separation, soft demodulation, and descrambling. Inverting the precoding is accomplished by matrix pseudoinversion of the precoding matrices. It returns a cell array, **cws**, of soft bit vectors, or codewords, and a cell array, **symbols**, of received constellation symbol vectors resulting from performing the inverse of Physical Downlink Shared Channel (PDSCH) processing. For details, see section 6.4 of [1] and ltePDSCH. **cws** is optionally scaled by channel state information (CSI) calculated during the equalization process.

[cws, symbols] = ltePDSCHDecode(enb, chs, sym, hest, noiseest) performs the decoding of the complex modulated PDSCH symbols **sym** using cell-wide settings, **enb**, channel-specific configuration, **chs**, channel estimate, **hest**, and the noise estimate, **noiseest**.

The behavior varies based on the **chs.TxScheme** setting. For the **TxDiversity** transmission scheme, the precoding inversion is performed using an orthogonal space frequency block code (OSFBC) decoder. For the **SpatialMux**, **CDD**, and **MultiUser** transmission schemes, the precoding inversion is performed using a multiple-input, multiple-output (MIMO) minimum mean square error (MMSE) equalizer, equalizing between transmitted and received layers. For the 'Port0', 'Port5', 'Port7-8', 'Port8', and 'Port7-14' transmission schemes, the reception is performed using MMSE equalization. The input channel estimate, **hest**, is assumed to be with reference

to the transmission layers, using the UE-specific reference signals, so the MMSE equalization will produce MMSE equalized layers.

`noiseest` is an estimate of the noise power spectral density per RE on the received subframe. This estimate is provided by the `lteDLChannelEstimate` function.

`[cws,symbols] = ltePDSCHDecode(enb,chs,rxgrid,hest,noiseest)` accepts the full received resource grid, `rxgrid`, for one subframe, in place of the `sym` input; the decoder will internally extract the PDSCH REs to obtain the complex modulated PDSCH symbols. `rxgrid` is a 3-D M -by- N -by-`NRxAnts` array of resource elements, where M and N are the number of subcarriers and symbols for one subframe for cell-wide settings `enb` and `NRxAnts` is the number of receive antennas. In this case, `hest` is a 4-D M -by- N -by-`NRxAnts`-by-`CellRefP` array where M and N are the number of subcarriers and symbols for one subframe for cell-wide settings `enb`, `NRxAnts` is the number of receive antennas, and `CellRefP` is the number of cell-specific reference signal antenna ports, given by `enb.CellRefP`. `hest` is processed to extract the channel estimates relevant to the PDSCH, those in the time and frequency locations corresponding to the PDSCH REs in `rxgrid`.

Examples

Decode PDSCH Symbols

This example shows steps to generate , then decode PDSCH symbols

Initialize cell parameter structure `enb` for RMC R.0.

```
enb = lteRMCDL('R.0');
```

Populate a complex codeword matrix.

```
codewordBits = randi([0,1],enb.PDSCH.CodedTrBlkSizes(1),1);
```

Generate modulated PDSCH symbols

```
pdschSym = ltePDSCH(enb,enb.PDSCH,codewordBits);
```

 
Decode the PDSCH symbols.

```
[rxCws,symbols] = ltePDSCHDecode(enb,enb.PDSCH,pdschSym);
```

Plot of decoded PDSCH symbols

```
plot (symbols{:},'k.')
```

```
title('decoded PDSCH symbols')
```

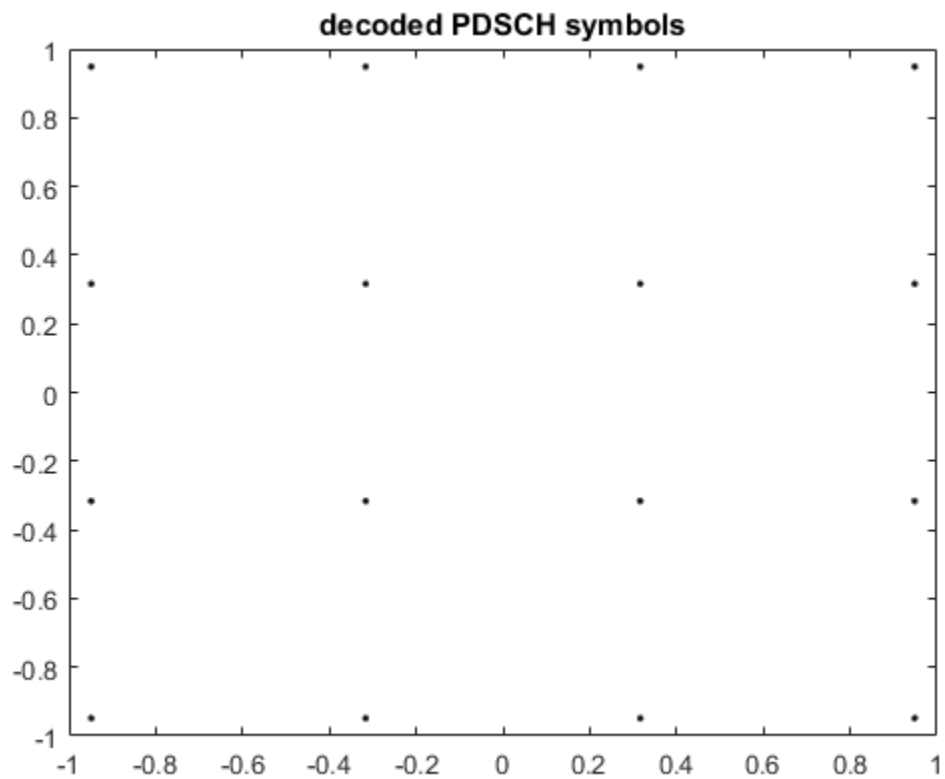

Show size and first 5 elements of output codewords to be modulated, rxCws.

```
size(rxCws{:})  
rxCws{1}(1:1:5)
```

```
ans =
```

```
504    1
```

```
ans =
```

```

0.9487
0.9487
-0.3162
0.3162
0.3162

```

Show size and first 5 elements of output received symbols, `symbols`.

```

size(symbols{:})
symbols{1}(1:5)

```

```
ans =
```

```
126    1
```

```
ans =
```

```

-0.9487 - 0.9487i
-0.3162 + 0.9487i
-0.3162 - 0.9487i
-0.3162 - 0.3162i
0.9487 - 0.9487i

```

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NCellID	required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
NSubframe	required	Nonnegative scalar integer	Subframe number
CellRefP	required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports

Parameter Field	Required or Optional	Values	Description
DuplexMode	optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that DuplexMode is set to 'TDD'.			
TDDConfig	optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following parameter fields are dependent upon the condition that chs.TxScheme is set to 'SpatialMux' or 'MultiUser'.			
NDLRB	required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CFI	required	1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB')
CyclicPrefix	optional	'Normal' (default), 'Extended'	Cyclic prefix length

chs — Channel-specific transmission configuration

structure

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
Modulation	required	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
RNTI	required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)
TxScheme	required	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	Transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> • 'SpatialMux' — Closed-loop spatial multiplexing. • 'Port0' — Single-antenna port, port 0. • 'TxDiversity' — Transmit diversity scheme. • 'CDD' — Large delay CDD scheme. • 'MultiUser' — Multiuser MIMO scheme. • 'Port5' — Single-antenna port, port 5. • 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). • 'Port8' — Single-antenna port, port 8. • 'Port7-14' — Up to 8-layer transmission, ports 7–14.

Parameter Field	Required or Optional	Values	Description
NLayers	required	1,...,8, depending on TxScheme	Number of transmission layers (downlink modulation)
CSI	optional	'Off' (default), 'On'	Flag to control whether output bits get weighted with channel state information (CSI) calculated during the equalization stage. If 'On', soft bits are weighted by CSI.
The following parameters are dependent upon the condition that TxScheme is set to 'SpatialMux' or 'MultiUser'.			
PMISet	required	Integer vector (0, ..., 15)	Precoder matrix indication (PMI) set. It can contain either a single value, corresponding to single PMI mode, or multiple values, corresponding to multiple or subband PMI mode. The number of values depends on CellRefP, transmission layers and TxScheme. For more information about setting PMI parameters, see ltePMIInfo.

Parameter Field	Required or Optional	Values	Description
PRBSet	required	1- or 2-column integer matrix	<p>Zero-based physical resource block (PRB) indices corresponding to the slot wise resource allocations for this PDSCH. PRBSet can be assigned as:</p> <ul style="list-style-type: none"> • a column vector, the resource allocation is the same in both slots of the subframe, • a two-column matrix, this parameter specifies different PRBs for each slot in a subframe, • a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>
<p>The following parameters are dependent upon the condition that TxScheme is set to 'Port5', 'Port7-8', 'Port8', or 'Port7-14'.</p>			

Parameter Field	Required or Optional	Values	Description
W	optional	Numeric matrix, [] (default)	<p>Present only for wideband UE-specific beamforming ('Port5', 'Port7-8', 'Port8', 'Port7-14'). The NLayers-by-NTxAnts precoding matrix chosen according to TS 36.101 Annex B.4. The resulting precoding matrix is randomly selected from:</p> <ul style="list-style-type: none"> the set defined in TS 36.211 Section 6.3.4 for 'Port5', 'Port7-8' and 'Port8' transmission schemes or from the set associated with CSI reporting as defined in TS 36.213 Section 7.2.4 for the 'Port7-14' transmission scheme. <p>For R.48, the precoding matrix corresponding to PMI=0 is used.</p>

sym – Complex modulated PDSCH symbols

Numeric matrix

Complex modulated PDSCH symbols, specified as a numeric matrix of size NRE-by-NRxAnts. NRE is the number of QAM symbols per antenna assigned to the PDSCH and NRxAnts is the number of receive antennas.

Data Types: double

Complex Number Support: Yes

hest – Channel estimate

3-D numeric array | 4-D numeric array

Channel estimate, specified as a 3-D or 4-D numeric array. For the 'Port0', 'TxDiversity', 'SpatialMux', 'CDD', and 'MultiUser' transmission schemes, the array size is NRE-by-NRxAnts-by-CellRefP, where NRE is the number of QAM symbols per antenna assigned to the PDSCH, NRxAnts is the number of receive antennas, and CellRefP is the number of cell-specific reference signal antennas, given by enb.CellRefP. For the 'Port5', 'Port7-8', 'Port8', and 'Port7-14' transmission

schemes, the array size is `NRE-by-NRxAnts-by-NLayers`, where `NLayers` is the number of transmission layers given by `chs.NLayers`.

When `rxgrid` is supplied, `hest` is a 4-D numeric array of size `M-by-N-by-NRxAnts-by-CellRefP`, where `M` and `N` are the number of subcarriers and symbols for one subframe for cell-wide settings, `enb`, `NRxAnts` is the number of receive antennas, and `CellRefP` is the number of cell-specific reference signal antenna ports, given by `enb.CellRefP`.

Data Types: `double`

noiseest — Noise estimate

numeric array

Noise estimate of the noise power spectral density per RE on the received subframe, specified as a numeric array.

Data Types: `double`

rxgrid — Full received resource grid

numeric array

Full received resource grid, specified as a 3-D `M-by-N-by-NRxAnts` array of resource elements, where `M` and `N` are the number of subcarriers and symbols for one subframe for cell-wide settings `enb` and `NRxAnts` is the number of receive antennas.

Data Types: `double`

Complex Number Support: Yes

Output Arguments

cws — Codeword or codewords

numeric vector | cell array

Codeword or codewords, returned as a vector of bit values for one codeword to be modulated, or a cell array containing one or two vectors of bit values corresponding to the one or two codewords to be modulated.

Data Types: `double`

symbols — Received constellation symbols

Cell array of column vectors

Received constellation symbols, returned as a cell array of complex double column vectors, resulting from performing the inverse of PDSCH processing.

Data Types: `cell`

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLSCHDecode` | `ltePDSCH` | `ltePDSCHIndices` | `ltePDSCHPRBS`

Introduced in R2014a

ltePDSCHIndices

Physical downlink shared channel (PDSCH) resource element indices

Syntax

```
[ind,info] = ltePDSCHIndices(enb,chs,prbset)
[ind,info] = ltePDSCHIndices(enb,chs,prbset,opts)
```

Description

`[ind,info] = ltePDSCHIndices(enb,chs,prbset)` returns a matrix, `ind`, containing physical downlink shared channel (PDSCH) resource element (RE) indices and a structure, `info`, containing information related to the PDSCH indices. By default, the output indices are a one-based linear indexed 3D array representing the subframe resource element grid for all antenna ports. You can use `ind` to index elements of the subframe resource grid directly for all antenna ports. This function is initialized with cell-wide settings, `enb`, channel transmission configuration, `chs`, and physical resource block indices, `prbset`.

`prbset` contains the Physical Resource Block (PRB) indices corresponding to the resource allocation for this PDSCH transmission. You can specify `prbset` as either a column vector or a two-column matrix. If you specify a column vector, the resource allocation is the same in both slots of the subframe. If the PRBs in the first and second slots of the subframe differ, you can use the two-column matrix to specify PRBs. The PRB indices are zero-based.

Each column of the returned N -by- P matrix, `ind`, contains the per-antenna indices for the N resource elements in each of the P resource array planes. For the 'Port0', 'TxDiversity', 'CDD', 'SpatialMux', and 'MultiUser' transmission schemes, $P = \text{enb.CellRefP}$. For the other transmission schemes, $P = \text{chs.NTxAnts}$. If `chs.NTxAnts = 0` or is absent, `ind` is an N -by- NU matrix containing the per-layer indices for the N resource elements in each of NU resource array planes. The planes are associated with the layers, where $NU = \text{chs.NLayers}$.

The `info` structure contains parameter fields `G` and `Gd`. `info.G` provides the appropriate size of the DL-SCH coder output, which is required as the parameter `outlen` provided to the `lteDLSCH` function. `info.Gd` is the number of coded and rate-matched DL-SCH

data symbols per layer, equal to the number of rows in the PDSCH indices. To provide accurate information in `info`, the `Modulation`, `TxScheme`, and `Nlayers` fields are required in `chs`.

Note: The `Modulation` and `Nlayers` fields are required only if the `info` output is assigned when you call the function.

`[ind,info] = ltePDSCHIndices(enb,chs,prbset,opts)` enables control over the format of the returned indices with strings provided in cell array `opts`.

Examples

Generate PDSCH RE Indices

This example generates the 0-based PDSCH resource element (RE) indices mapping in linear index form for the 4-antenna case.

Create the cell-wide settings structure, `enb`.

```
enb = lteRMCDL('R.14');
enb.NDLRB = 6;
enb.CFI = 1;
enb.PDSCH.PRBSets = (1:enb.NDLRB-1).';
```

Generate PDSCH RE indices, specifying the 0-based and linear options.

```
ind = ltePDSCHIndices(enb,enb.PDSCH, ...
    enb.PDSCH.PRBSets,{'0based','ind'});
ind(1:10,:)
```

`ans =`

156	1164	2172	3180
157	1165	2173	3181
158	1166	2174	3182
159	1167	2175	3183
160	1168	2176	3184
161	1169	2177	3185
162	1170	2178	3186
163	1171	2179	3187

164	1172	2180	3188
165	1173	2181	3189

The result, `ind`, is a matrix of 0-based mapping indices in linear index form. Since this is example is for the 4-antenna case, `ind`, has 4 columns.

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
NSubframe	Required	Nonnegative scalar integer	Subframe number
CFI	Required	1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB')

Parameter Field	Required or Optional	Values	Description
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as one of the following: <ul style="list-style-type: none"> 'FDD' — Frequency division duplex (default) 'TDD' — Time division duplex
The following apply when DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)

The following table shows **enb** structure fields only required when the transmission scheme **chs.TxScheme** is set to 'Port7-14'.

Parameter Field	Required or Optional	Values	Description
NFrame	Optional	0 (default), Nonnegative scalar integer	Frame number
CSIRSPeriod	Optional	'Off' (default), 'On', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]. You can also specify values in a cell array of configurations for each resource.	CSI-RS subframe configurations for one or more CSI-RS resources. Multiple CSI-RS resources can be configured from a single common subframe configuration or from a cell array of configurations for each resource.
The following CSI-RS resource parameters apply only when CSIRSPeriod sets one or more CSI-RS subframe configurations to any value other than 'Off'. Each parameter length must be equal to the number of CSI-RS resources required.			
CSIRSConfig	Required	Nonnegative scalar integer	Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1.

Parameter Field	Required or Optional	Values	Description
CSISRefP	Required	1 (default), 2, 4, 8	Array of number of CSI-RS antenna ports
ZeroPowerCSIRSPer	Optional	'Off' (default), 'On', <code>Icsi-rs</code> (0,...,154), [<code>Tcsi-rs</code> <code>Dcsi-rs</code>]. You can also specify values in a cell array of configurations for each resource.	Zero power CSI-RS subframe configurations for one or more zero power CSI-RS resource configuration index lists. Multiple zero power CSI-RS resource lists can be configured from a single common subframe configuration or from a cell array of configurations for each resource list.
The following zero power CSI-RS resource parameter is only required if one or more of the above zero power subframe configurations is set to any value other than 'Off'.			
ZeroPowerCSIR	Required	16-bit bitmap string (truncated if not 16 bits or '0' MSB extended), or a numeric list of CSI-RS configuration indices. You can also specify values in a cell array of configurations for each resource.	Zero power CSI-RS resource configuration index lists (TS 36.211 Section 6.10.5.2). Specify each list as a 16-bit bitmap string (if less than 16 bits, then '0' MSB extended), or as a numeric list of CSI-RS configuration indices from TS 36.211 Table 6.10.5.2-1 in the '4' CSI reference signal column. To specify multiple lists can be defined using a cell array of bitmap strings or numeric lists. [1]

Data Types: struct

chs — PDSCH-specific channel transmission configuration
structure

PDSCH-specific channel transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
TxScheme	Optional	'Port0' (default), 'TxDiversity', 'CDD', 'SpatialMux', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	Transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> • 'Port0' — Single-antenna port, port 0 (default). • 'TxDiversity' — Transmit diversity scheme. • 'CDD' — Large delay CDD scheme. • 'SpatialMux' — Closed-loop spatial multiplexing. • 'MultiUser' — Multiuser MIMO scheme. • 'Port5' — Single-antenna port, port 5. • 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). • 'Port8' — Single-antenna port, port 8. • 'Port7-14' — Up to eight-layer transmission, ports 7–14.
The following parameters apply when TxScheme is set to 'Port5', 'Port7-8', 'Port8', or 'Port7-14'.			
NTxAnts	Optional	Nonnegative integer, 0 (default)	Number of transmission antenna ports. This argument is only present for UE-specific demodulation reference symbols.
To provide accurate information in info , you are required to define TxScheme and the following additional parameters. These fields are only required when info is output.			

Parameter Field	Required or Optional	Values	Description
Modulation	Optional	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Codeword modulation format, specified as a string or a cell array of one or two strings. To specify the modulation format for one codeword, use a string. To specify the modulation formats for two codewords, use a cell array of two strings.
NLayers	Optional	1 (default), 2, 3, 4, 5, 6, 7, 8	Number of transmission layers

Data Types: struct

prbset — Physical resource block indices

column vector | 2-column numeric matrix

Physical resource block indices, specified as a column vector or a two-column numeric matrix. This argument contains the Physical Resource Block (PRB) indices corresponding to the resource allocation for this PDSCH transmission. If you specify a column vector, the resource allocation is the same in both slots of the subframe. If the PRBs in the first and second slots of the subframe differ, you can use the two-column matrix to specify PRBs. The PRB indices are zero-based.

Data Types: double

opts — Index generation options

string | cell array of strings

Index generation options, specified as a string or a cell array of strings that can contain the following values.

Option	Values	Description
Indexing style	'ind' (default), 'sub'	Style for the returned indices, specified as one of the following options. <ul style="list-style-type: none"> 'ind' — returns the indices in linear index form as a column vector (default) 'sub' — returns the indices in [subcarrier, symbol, antenna] subscript row style. The number of rows in the output,

Option	Values	Description
		<code>ind</code> , is the number of resource elements (NRE). Thus, <code>ind</code> is an NRE-by-3 matrix.
Index base	'1based' (default), 'Obased'	Base value of the returned indices. Specify '1based' to generate indices where the first value is one. Specify 'Obased' to generate indices where the first value is zero.

Data Types: char | cell

Output Arguments

ind — Physical downlink shared channel (PDSCH) resource element (RE) indices matrix

Physical downlink shared channel (PDSCH) resource element (RE) indices, specified as a matrix. Each column of the N -by- P matrix, `ind`, contains the per-antenna indices for the N resource elements in each of the P resource array planes. For the 'Port0', 'TxDiversity', 'CDD', 'SpatialMux', and 'MultiUser' transmission schemes, $P = \text{enb.CellRefP}$. For the other transmissions schemes, $P = \text{chs.NTxAnts}$. If $\text{chs.NTxAnts} = 0$ or is absent, the `ind` matrix is of size N -by- NU . In this case, `ind` contains the per-layer indices for the N resource elements in each of NU resource array planes associated with the layers, where $NU = \text{chs.NLayers}$. You can return the indices in alternative indexing formats using the argument `opts`.

Note: The active or zero-power CSI-RS resource elements are excluded from the output indices only for the Release 10/11, 'Port7-14' transmission scheme. For all other schemes, the CSI-RS resource element indices are not avoided, which results in a Release 8/9 compatible PDSCH. Any active or zero-power CSI-RS would overwrite the associated PDSCH REs later in the subframe construction.

info — Information related to PDSCH indices structure

Information related to PDSCH indices, returned as a structure. To provide accurate information in `info`, the channel transmission configuration structure, `chs`, must contain the fields `TxScheme`, `Modulation`, and `NLayers`. The structure `info` has the following fields.

Parameter Field	Description	Values	Data Type
G	Number of coded and rate-matched DL-SCH data bits for each codeword.	one or two element vector	uint32
Gd	Number of coded and rate-matched DL-SCH data symbols per layer.	Integer equal to the number of rows in the PDSCH indices	uint32

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePDSCH | ltePDSCHDecode | ltePDSCHPRBS

Introduced in R2014a

ltePDSCHPRBS

PDSCH pseudorandom scrambling sequence

Syntax

```
seq = ltePDSCHPRBS(enb,rnti,ncw,n)
seq = ltePDSCHPRBS(enb,rnti,ncw,n,mapping)
```

Description

`seq = ltePDSCHPRBS(enb,rnti,ncw,n)` returns a column vector containing the first `n` outputs of the Physical Downlink Shared Channel (PDSCH) scrambling sequence when initialized according to cell-wide settings, `enb`, 16-bit `rnti`, and `ncw`, which is either 0 or 1, indicating which codeword this sequence would scramble.

`seq = ltePDSCHPRBS(enb,rnti,ncw,n,mapping)` allows control over the format of the returned sequence `seq` through the string `mapping`. Valid formats are 'binary', the default, and 'signed'. The 'binary' format maps true to 1 and false to 0. The 'signed' format maps true to -1 and false to 1.

Examples

Generate PDSCH Pseudorandom Binary Scrambling Sequence

Generate a physical downlink shared channel (PDSCH) pseudorandom scrambling sequence for two different codeword numbers.

When transmitting multiple codewords via spatial multiplexing, each codeword uses a different scrambling sequence. Generate the first 10 values of the PRBS sequence for the first codeword. Set `ncw` to 0, and set `rnti` to 11.

```
enb = lteRMCDL('R.0');
pdschPrbsSeq1 = ltePDSCHPRBS(enb,11,0,10)
```

```
0
1
```

```
1  
1  
0  
1  
0  
1  
0  
1
```

Next, generate the first 10 values of the PRBS sequence for the second codeword. To do so, set `ncw` to 1.

```
pdschPrbsSeq2 = ltePDSCHPRBS(enb,11,1,10)
```

```
0  
0  
1  
1  
0  
0  
0  
1  
0  
1
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. `enb` contains the following fields.

NCellID — Physical layer cell identity

nonnegative integer

Physical layer cell identity, specified as a nonnegative integer.

Data Types: double

NSubframe — Subframe number

nonnegative integer

Subframe number, specified as a nonnegative integer.

Data Types: double

Data Types: struct

rnti — Radio network temporary identifier

nonnegative integer

Radio network temporary identifier, specified as nonnegative integer.

Data Types: double

ncw — Number of codewords

0 | 1

Number of codewords, specified as a 0 or 1. This input indicates which codeword this sequence scrambles.

Data Types: double

n — Length of scrambling sequence

positive integer

Length of scrambling sequence, specified as a positive integer.

Data Types: double

mapping — Format of returned sequence

'binary' (default) | 'signed'

Format of returned sequence, specified as a string. This input controls the format of the returned sequence, `seq`. The string 'binary' maps true to 1 and false to 0. The string 'signed' maps true to -1 and false to 1.

Data Types: char

Output Arguments

seq — PDSCH scrambling sequence

logical column vector | numeric column vector

PDSCH scrambling sequence, returned as a numeric column vector. This output argument contains the first `n` outputs of the PDSCH pseudorandom scrambling sequence.

Data Types: logical | double

See Also

`ltePDSCH` | `ltePDSCHDecode` | `ltePDSCHIndices`

Introduced in R2014a

ltePHICH

Physical hybrid ARQ indicator channel

Syntax

```
[sym,info] = ltePHICH(enb,hiset)
```

Description

[sym,info] = ltePHICH(enb,hiset) returns a matrix, **sym**, of complex modulation symbols generated by the set of Physical Hybrid ARQ Indicator Channels (PHICH) in a subframe. The channel processing includes the stages of BPSK modulation, scrambling, orthogonal sequence spreading, REG alignment, layer mapping and precoding, followed by PHICH group summation and mapping unit creation. The optional returned structure, **info**, contains control resourcing information about the output symbols. See ltePHICHInfo for details and further background.

The control region of a subframe can contain up to *NPHICH* separate PHICH, each carrying a single hybrid ARQ (HARQ) acknowledgment (ACK) or negative acknowledgment (NACK). The number of rows of **sym** is the number of resource elements (NRE). Each column of the NRE-by-CellRefP matrix **sym** contains the per-antenna symbols for the combined set of PHICHs, where *NPHICH*, returned as **info.NPHICH**, is defined via the settings in the **enb** structure.

The *R*-by-3 input matrix, **hiset**, configures up to *NPHICH* individual PHICH that are combined together in the output. Each row of **hiset** defines a single PHICH in terms of [nGroup, nSeq, hi], where nGroup is the PHICH group index number, nSeq is the sequence index number within the group, and hi is 1 or 0 representing ACK or NACK, respectively. These indices are 0-based. In terms of **info** structure fields, the following conditions apply.

- $R < \text{info.NPHICH}$
- $\text{nGroup} < \text{info.NGroups}$
- $\text{nSeq} < \text{info.NSequences}$

The output matrix, **sym**, always contains **info.NRE** symbols to map into the total PHICH resource allocation, even if less than the full set of *NPHICH* channels are configured.

Examples

Generate PHICH Complex Modulation Symbols

Generate physical HARQ indicator channel (PHICH) complex modulation symbols for three different HARQ indicator (HI) sets. An HI set is comprised of the PHICH group index number, the sequence number within the group, and an ACK/NACK.

In a system subframe (normal CP) with `enb.NDLRB = 50` and `enb.Ng = 'Half'`, 16 PHICH are available split between 2 PHICH groups of 8 sequences. These are mapped to `NRE=24` resource elements. Modulate a NACK (`hi=0`) onto the third orthogonal sequence (`nSeq=2`) of the second group (`nGroup=1`).

```
enb = lteRMCDL('R.7');  
out1 = ltePHICH(enb,[1,2,0]);  
out1(1:4)
```

```
0  
0  
0  
0
```

Next, add in an ACK on the last sequence of the first group.

```
enb = lteRMCDL('R.7');  
out2 = ltePHICH(enb,[1,2,0;0,7,1]);  
out2(1:4)
```

```
0.7071 - 0.7071i  
0.7071 - 0.7071i  
-0.7071 + 0.7071i  
0.7071 - 0.7071i
```

Finally, provide an empty matrix for `hiset`.

```
enb = lteRMCDL('R.7');  
out3 = ltePHICH(enb,[]);  
size(out3)
```

```
24    1
```

The result is a 24-by-`enb.CellRefP` matrix of zeros.

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. `enb` contains the following fields. The `TDDConfig` parameter field is only required if `DuplexMode` is set to `'TDD'`.

NDLRB — Number of downlink resource blocks

positive integer

Number of downlink resource blocks, specified as a positive integer.

Data Types: `double`

NCellID — Physical layer cell identity

nonnegative integer

Physical layer cell identity, specified as a nonnegative integer.

Data Types: `double`

CellRefP — Number of cell-specific reference signal antenna ports

1 | 2 | 4

Number of cell-specific reference signal antenna ports, specified as 1, 2, or 4.

Data Types: `double`

CyclicPrefix — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as 'Normal' or 'Extended'. Optional.

Data Types: `char`

NSubframe — Subframe number

nonnegative integer

Subframe number, specified as a nonnegative integer.

Data Types: double

Ng — HICH group multiplier

'Sixth' | 'Half' | 'One' | 'Two'

HICH group multiplier, specified as a string.

Data Types: char

DuplexMode — Duplex mode

'FDD' (default) | Optional | 'TDD'

Duplex mode, specified as 'FDD' or 'TDD'. Optional.

Data Types: char

TDDConfig — Uplink or downlink configuration

0 (default) | Optional | 1 | 2 | 3 | 4 | 5 | 6

Uplink or downlink configuration, specified as a nonnegative scalar integer between 0 and 6. Optional. Only required if `DuplexMode` is set to 'TDD'.

Data Types: double

Data Types: struct

hiset — HARQ indicator set

numeric matrix

HARQ indicator set, specified as a numeric matrix of size R -by-3. With this input matrix, you can configure up to `NPHICH` individual PHICH that are combined together in the output. Each row of `hiset` defines a single PHICH in terms of $[nGroup, nSeq, hi]$, where `nGroup` is the PHICH group index number, `nSeq` is the sequence index number within the group and `hi` is 1 or 0 representing ACK or NACK, respectively. These indices are 0-based.

Data Types: double

Complex Number Support: Yes

Output Arguments

sym — PHICH complex modulation symbols

numeric matrix

PHICH complex modulation symbols, returned as a numeric matrix. Each column of this NRE-by-CellRefP matrix contains the per-antenna symbols for the combined set of PHICHs, where `info.NPHICH` is defined via the settings in the `enb` structure.

Data Types: `double`

Complex Number Support: Yes

info — Control resourcing information about output symbols

scalar structure

Control resourcing information about the output symbols, returned as a scalar structure. `info` contains the following fields.

NRE — Number of resource elements assigned to all PHICH

positive integer

Number of resource elements assigned to all PHICH, returned as a positive integer.

Data Types: `uint64`

NREG — Number of resource element groups assigned to all PHICH

positive integer

Number of resource element groups assigned to all PHICH, returned as a positive integer.

Data Types: `uint64`

NPHICH — Number of individual PHICH available

positive integer

Number of individual PHICH available, returned as a positive integer.

Data Types: `uint64`

NGroups — Number of PHICH groups

positive integer

Number of PHICH groups, returned as a positive integer.

Data Types: `int8`

NMappingUnits — Number of PHICH mapping units

positive integer

Number of PHICH mapping units, returned as a positive integer.

Data Types: `int8`

NSequences — Number of orthogonal sequences in each PHICH group

positive integer

Number of orthogonal sequences in each PHICH group, returned as a positive integer.

Data Types: `int8`

PHICHDuration — PHICH duration

integer

PHICH duration, returned as an integer.

Data Types: `int8`

Data Types: `struct`

See Also

`ltePHICHDecode` | `ltePHICHIndices` | `ltePHICHInfo` | `ltePHICHPRBS` | `ltePHICHPrecode`

Introduced in R2014a

ltePHICHDecode

Physical hybrid ARQ indicator channel decoding

Syntax

```
[hi,symbols] = ltePHICHDecode(enb, hires, sym)
[hi,symbols] = ltePHICHDecode(enb, hires, sym, hest, noiseest)
[hi,symbols] = ltePHICHDecode(enb, hires, sym, hest, noiseest, alg)
```

Description

[hi,symbols] = ltePHICHDecode(enb,hires,sym) performs the inverse of Physical Hybrid ARQ Indicator Channel (PHICH) processing. Input values for this syntax include a cell-wide settings structure, **enb**, PHICH resources, **hires**, and the matrix of complex modulated PHICH symbols, **sym**. The channel inverse processing includes deprecoding, symbol demodulation and descrambling. It returns a column vector of soft hybrid ARQ indicator values, **hi**, and the received constellation of complex symbol vector, **symbols**. For details, see TS 36.211, Section 6.9 [1] and ltePHICH.

hires is an R -by-2 matrix configuring up to **NPHICH** individual PHICH decoded by ltePHICHDecode. Each row of **hires** defines a single PHICH in terms of [nGroup, nSeq] where **nGroup** is the PHICH group index number and **nSeq** is the sequence index number. These indices are zero-based. In terms of ltePHICHInfo info structure fields, the following conditions apply:

```
 $R < \text{info.NPHICH}$ 
nGroup < info.NGroups
nSeq < info.NSequences
```

sym must be a matrix of NRE-by-NRxAnts complex modulated PHICH symbols. **NRE** is the number of BPSK symbols per antenna assigned to the PHICH and **NRxAnts** is the number of receive antennas. Ensure the input matrix **sym** contains **info.NRE** symbols corresponding to the total PHICH resource allocation, even if less than the full set of **NPHICH** channels were configured.

[hi,symbols] = ltePHICHDecode(enb,hires,sym,hest,noiseest) decodes the complex PHICH symbols, **sym**, using cell-wide settings, **enb**, PHICH resources,

`hires`, the channel estimate, `hest`, and the noise estimate, `noiseest`. For the `TxDiversity` transmission scheme (`CellRefP=2` or `CellRefP=4`), the reception is performed using an Orthogonal Space Frequency Block Code (OSFBC) decoder. For the 'Port0' transmission scheme (`CellRefP=1`), the reception is performed using MMSE equalization.

`hest` is a 3-D `NRE-by-NRxAnts-by-enb.CellRefP` array. `NRE` contains the frequency and time locations corresponding to the PHICH RE positions (a total of `NRE` positions). `NRxAnts` is the number of receive antennas. `CellRefP` is the number of cell-specific reference signal antennas, given by `enb.CellRefP`.

`noiseest` is an estimate of the noise power spectral density per RE on received subframe; such an estimate is provided by the `lteDLChannelEstimate` function.

`[hi,symbols] = ltePHICHDecode(enb,hires,sym,hest,noiseest,alg)` same as prior except this syntax provides control over weighting the output soft bits values, `hi`. `hi` with Channel State Information (CSI) calculated during the equalization stage using algorithmic configuration structure, `alg`. If the `alg.CSI` field is set to 'On', `hi` gets scaled by channel state information (CSI) calculated during the equalization process.

Examples

DecodeHARQ

This example shows decoding of the HARQ bits given PHICH symbols. In this example two HARQ bits are encoded into PHICH symbols. This is achieved by using a `hiset` matrix, where each row is used to define an individual PHICH. The generated PHICH symbols are then decoded with the same parameters used to define the PHICHs in the encoder.

Initialize cell-wide configuration structure, `enb` for RMC R.1

```
rc = 'R.1';  
enb = lteRMCDL(rc);
```

Initialize `hiset` input and generate PHICH symbols. First PHICH: [`nGroup=1 nSeq=1 hi=1`] Second PHICH: [`nGroup=1 nSeq=2 hi=0`]

```
hiset = [ 1 1 1; 1 2 0 ];  
phichSym = ltePHICH(enb,hiset);
```

Initialize hires input. PHICH resources: same as the encoder First PHICH: [nGroup=1 nSeq=1] Second PHICH: [nGroup=1 nSeq=2]

```
hires = [ 1 1; 1 2];
```

decode PHICH

```
hi = ltePHICHDecode(enb,hires,phichSym);
```

Check decoded hi bits are the same as encoded bits

```
isequal(hi,hiset(:,3))
```

```
ans =
```

```
1
```

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. **enb** is a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Data Types: struct

hires — PHICH resources

numeric matrix

PHICH resources, specified as a numeric matrix of size R -by-2. This matrix configures up to N_{PHICH} individual PHICH for decoding. Each row of `hires` defines a single PHICH in terms of $[nGroup, nSeq]$, where $nGroup$ is the PHICH group index number and $nSeq$ is the sequence index number. These indices are zero-based.

Data Types: double

Complex Number Support: Yes

sym — Complex modulated PHICH symbols

numeric matrix

Complex modulated PHICH symbols, specified as a numeric matrix of size NRE -by- $NRxAnts$. NRE is the number of BPSK symbols per antenna assigned to the PHICH and $NRxAnts$ is the number of receive antennas. Even if less than the full set of N_{PHICH} channels were configured, ensure the `sym` input matrix contains `info.NRE` symbols corresponding to the total PHICH resource allocation.

Data Types: double

Complex Number Support: Yes

hest — Channel estimate

3-D numeric array

Channel estimate, specified as a 3-D numeric array of size NRE -by- $NRxAnts$ -by-`enb.CellRefP`, where:

- NRE contains the frequency and time locations corresponding to the PCFICH RE positions (a total of NRE positions).
- $NRxAnts$ is the number of receive antennas.
- `enb.CellRefP` is the number of cell-specific reference signal antennas.

Data Types: double

Complex Number Support: Yes

noiseest — Noise estimate

numeric scalar

Noise estimate, specified as a numeric scalar. This input argument is an estimate of the noise power spectral density per RE on received subframe. Such an estimate is provided by the `lteDLChannelEstimate` function.

Data Types: `double`

alg – Weighting algorithm

structure

Weighting algorithm, specified as a structure. This input argument controls weighting output soft bits, `bits`, with CSI. `alg` contains the following fields.

Parameter Field	Required or Optional	Values	Description
CSI	Optional	'On' (default), 'Off'	Flag to control whether output <code>bits</code> get weighted with channel state information (CSI) calculated during the equalization stage. If 'On', soft bits are weighted by CSI.

Data Types: `struct`

Output Arguments

hi – Soft hybrid ARQ indicator values

numeric column vector

Soft hybrid ARQ indicator values, returned as a numeric column vector. Each row of the output `hi` represents the received Hybrid ARQ indicator values for the PHICH defined in the corresponding row of `hires`.

Data Types: `double`

symbols – Received constellation of complex symbols

numeric matrix

Received constellation of complex symbols, returned as a numeric matrix. Each row of the symbol matrix output `symbols` contains the received constellation symbols (after despreading) for the corresponding row of `hires`.

Data Types: `double`

Complex Number Support: Yes

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePHICH | ltePHICHDeprecode | ltePHICHIndices | ltePHICHInfo |
ltePHICHPRBS | ltePHICHTransmitDiversityDecode

Introduced in R2014a

ltePHICHDeprecode

PHICH deprecoding

Syntax

```
out = ltePHICHDeprecode(in,cp,ngroup)
out = ltePHICHDeprecode(enb,ngroup,in)
```

Description

`out = ltePHICHDeprecode(in,cp,ngroup)` performs deprecoding of the N -by- P matrix of antennas, `in`, onto $NU=P$ layers, given cyclic prefix length, `cp`, and PHICH group, `ngroup`. N is the number of symbols per antenna. It performs PHICH deprecoding using matrix pseudoinversion to undo the processing described in TS 36.211, Section 6.9.2 [1]. This function returns `out`, an M -by- NU matrix, where NU is the number of transmission layers and M is the number of symbols per layer.

`out = ltePHICHDeprecode(enb,ngroup,in)` performs deprecoding of the N -by- P matrix of antennas, `in`, onto $NU=P$ layers, for PHICH group, `ngroup`, using the cell-wide settings structure, `enb`.

Examples

Deprecode PHICH symbols2

This example shows the deprecoding of a set of physical HARQ indicator channel (PHICH) symbols for reference measurement channel (RMC) R.11.

Initialize a cell-wide parameter configuration structure, `enb`, for RMC R.11

```
rc = 'R.11';
enb = lteRMCDL(rc);
nLayers = enb.PDSCH.NLayers;
```

Generate an arbitrary set of input symbols as the PHICH symbols

```
re = randi([0,1],40,nLayers);  
im = randi([0,1],40,nLayers);  
symbols = complex(re, im);
```

Precode the PHICH symbols using normal cyclic prefix (setting for `enb.CyclicPrefix` as per R.11) and PHICH group 1

```
nGroup = 1;  
precodedSym = ltePHICHPrecode(symbols ,enb.CyclicPrefix,nGroup);
```

Deprecode the precoded PHICH symbols using normal cyclic prefix and PHICH group 1

```
out = ltePHICHDeprecode(precodedSym,enb.CyclicPrefix,nGroup);
```

Check PHICH symbols vs. deprecated PHICH symbols

```
isequal(symbols,out)
```

```
ans =
```

```
1
```

Input Arguments

in — Precoded input symbols

complex-valued numeric matrix

Precoded input symbols, specified as a complex-valued numeric matrix of antennas. It has size N -by- P , where N is the number of symbols per antenna and P is the number of antennas. The number of input symbols, N , must be a multiple of the number of antennas, P .

Data Types: `double`

Complex Number Support: Yes

cp — Cyclic prefix length

'Normal' | 'Extended'

Cyclic prefix length, specified as a string.

Data Types: `char`

ngroup — PHICH group numberpositive scalar integer (≥ 1)

PHICH group number, specified as a positive scalar integer of 1 or more.

Data Types: double

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. **enb** contains the following fields.

Parameter Field	Required or Optional	Values	Description
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Data Types: struct

Output Arguments

out — Decoded output symbols

numeric matrix

Decoded output symbols, returned as a numeric matrix. It has size M -by- NU , where M is the number of symbols per layer and NU is the number of transmission layers.

Data Types: double

Complex Number Support: Yes

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteLayerDemap | ltePHICHDecode | ltePHICHIndices | ltePHICHInfo |
ltePHICHPRBS | ltePHICHPrecode | ltePHICHTransmitDiversityDecode

Introduced in R2014a

ltePHICHIndices

PHICH resource element indices

Syntax

```
ind = ltePHICHIndices(enb)
ind = ltePHICHIndices(enb,opts)
```

Description

`ind = ltePHICHIndices(enb)` returns the subframe resource element (RE) indices, `ind`, for the Physical Hybrid-ARQ Indicator Channels (PHICH), given the parameter fields of cell-wide settings structure, `enb`. By default, the number of rows of `ind` is the number of resource elements (NRE), and `ind` is an NRE-by-CellRefP matrix of indices in a 1-based linear indexing style. These indices can directly index elements of an N -by- M -by-CellRefP array that represents the subframe resource grid across CellRefP antenna ports. Each column of `ind` identifies the same set of NRE resource elements, but with indices offset to select them in a different antenna “page” of the 3-D resource array.

The indices returned are for all PHICH groups in a subframe, where the number of groups depends on the bandwidth and PHICH Ng parameter. See `ltePHICHInfo` for details. The indices are ordered as the modulation symbols should be mapped for the set of consecutive PHICH groups. The PHICH resources are normally all assigned in the first OFDM symbol of a subframe, unless the PHICH duration is of the extended type.

`ind = ltePHICHIndices(enb,opts)` allows control of the format of the returned indices through a cell array of option strings, `opts`.

Examples

Generate PHICH Indices

Generate PHICH resource element (RE) indices in linear form and resource element group (REG) indices in subscript form.

Get 1-based PHICH resource element (RE) indices in linear form.

```
enb = lteRMCDL('R.14');
enb.NDLRB = 6;
ind = ltePHICHIndices(enb,{'ind','re'})
```

8	1016	2024	3032
9	1017	2025	3033
11	1019	2027	3035
12	1020	2028	3036
26	1034	2042	3050
27	1035	2043	3051
29	1037	2045	3053
30	1038	2046	3054
50	1058	2066	3074
51	1059	2067	3075
53	1061	2069	3077
54	1062	2070	3078

Get 0-based PHICH resource element group (REG) indices in subscript form, where each column of `ind` corresponds to a dimension of the 3-D resource grid array—subcarrier, OFDM symbol, and antenna port.

```
ind = ltePHICHIndices(enb,{'0based','sub','reg'})
```

6	0	0
24	0	0
48	0	0
6	0	1
24	0	1
48	0	1
6	0	2
24	0	2
48	0	2
6	0	3
24	0	3
48	0	3

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. `enb` can contain the following fields. The `TDDConfig` and `NSubframe` parameter fields are only required if `DuplexMode` is set to `'TDD'`.

NDLRB — Number of downlink resource blocks

positive integer

Number of downlink resource blocks, specified as a positive integer.

Data Types: double

NCellID — Physical layer cell identity

nonnegative integer

Physical layer cell identity, specified as a nonnegative integer.

Data Types: double

CyclicPrefix — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as 'Normal' or 'Extended'. Optional.

Data Types: char

CellRefP — Number of cell-specific reference signal antenna ports

1 | 2 | 4

Number of cell-specific reference signal antenna ports, specified as 1, 2, or 4.

Data Types: double

Ng — HICH group multiplier

'Sixth' | 'Half' | 'One' | 'Two'

HICH group multiplier, specified as a string.

Data Types: char

PHICHDuration — PHICH duration

'Normal' (default) | Optional | 'Extended'

PHICH duration, specified as a string. Optional.

Data Types: char

DuplexMode — Duplex mode

'FDD' (default) | Optional | 'TDD'

Duplex mode, specified as a string. Optional.

Data Types: char

TDDConfig — Uplink or downlink configuration

0 (default) | Optional | 1 | 2 | 3 | 4 | 5 | 6

Uplink or downlink configuration, specified as a nonnegative scalar integer between 0 and 6. Optional. Only required if DuplexMode is set to 'TDD'.

Data Types: double

NSubframe — Subframe number

nonnegative integer

Subframe number, specified as a nonnegative integer. Only required if DuplexMode is set to 'TDD'.

Data Types: double

Data Types: struct

opts — Format options of returned indices

string | cell array of strings

Format options of returned indices, specified as a string or a cell array of strings. opts can contain the following option strings.

Example: {'Obased', 'ind'}

Example: 'Obased'

Indexing unit — Indexing unit of returned indices

're' (default) | 'reg'

Indexing unit of returned indices, specified as 're' or 'reg'. If 're', the returned index values correspond to resource elements (REs). If 'reg', the returned index values correspond to resource element groups (REGs).

Data Types: char

Indexing style — Indexing style of returned indices

'ind' (default) | 'sub'

Indexing style of returned indices, specified as 'ind' or 'sub'. If 'ind', the form of the returned indices is linear index form. If 'sub', the form of the returned indices is [subcarrier, symbol, antenna] subscript row form.

Data Types: char

Index base — Index base of returned indices

'1based' (default) | '0based'

Index base of returned indices, specified as '1based' or '0based'. If '1based', the minimum index value is 1. If '0based', the minimum index value is 0.

Data Types: char

Data Types: char | cell

Output Arguments

ind — PHICH resource element indices

numeric matrix

PHICH resource element indices, returned as a numeric matrix. The size of the matrix is NRE-by-CellRefP. By default, it contains 1-based linear indexing RE indices.

Data Types: uint32

See Also

ltePHICH | ltePHICHDecode | ltePHICHDeprecode | ltePHICHInfo |
ltePHICHPRBS | ltePHICHPrecode

Introduced in R2014a

ltePHICHInfo

PHICH resource information

Syntax

```
info = ltePHICHInfo(enb)
```

Description

`info = ltePHICHInfo(enb)` returns a structure, `info`, containing information about the physical hybrid ARQ indicator channel (PHICH) subframe resources.

Examples

Get PHICH Resource Information

This example shows that in a normal cyclic prefix system subframe, with 50 DL resource blocks and HICH group multiplier set to 'Sixth' there are 16 PHICH available, split between two PHICH groups of 8 sequences.

Initialize the cell-wide configuration structure, `enb`

```
enb.NDLRB = 50;  
enb.Ng = 'Sixth';
```

Display the PHICH information

```
info = ltePHICHInfo(enb)
```

```
Warning: Using default value for parameter field CyclicPrefix (Normal)  
Warning: Using default value for parameter field DuplexMode (FDD)  
Warning: Using default value for parameter field PHICHDuration (Normal)
```

```
info =
```

```
      NREG: 6  
      NRE: 24  
      NPHICH: 16
```

```

    NGroups: 2
  NMappingUnits: 2
    NSequences: 8
  PHICHDuration: 1

```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the command "lteWarning('off','DefaultValue')."

Get PHICH Resource Information from RMC

This example shows that for RMC R.14, there are 16 PHICH available, split between two PHICH groups of 8 sequences.

Initialize the cell-wide configuration structure, `enb`, using RMC R.14

```

rc = 'R.14';
enb = lteRMCDL(rc);

```

Display the PHICH information

```

info = ltePHICHInfo(enb)

```

```

info =

```

```

    NREG: 6
    NRE: 24
    NPHICH: 16
    NGroups: 2
  NMappingUnits: 2
    NSequences: 8
  PHICHDuration: 1

```

Input Arguments

enb — eNodeB cell-wide settings

scalar structure

eNodeB cell-wide settings structure that can contain these parameter fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Ng	Required	'Sixth', 'Half', 'One', 'Two'	HICH group multiplier
PHICHDuration	Optional	Nonnegative scalar integer	PHICH duration
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
NSubframe	Required	Nonnegative scalar integer	Subframe number

Output Arguments

info — PHICH subframe resource information

scalar structure

PHICH subframe resource information, returned as a scalar structure. **info** contains the following fields.

Parameter Field	Description	Values	Data Type
NRE	Number of resource elements (REs) assigned to all PHICH	Nonnegative scalar integer	uint64
NREG	Number of resource element groups assigned to all PHICH	Nonnegative scalar integer	uint64
NPHICH	Number of individual PHICH available	Nonnegative scalar integer	uint64
NGroups	Number of PHICH groups	Nonnegative scalar integer	int8
NMappingUnits	Number of PHICH mapping units	Nonnegative scalar integer	int8
NSequences	Number of orthogonal sequences in each PHICH group	Nonnegative scalar integer	int8
PHICHDuration	PHICH duration	Nonnegative scalar integer	int8

The control region of a subframe can contain up to **NPHICH** separate PHICHs with each carrying a single hybrid ARQ ACK or NACK. Multiple PHICHs can be mapped to the same set of resource elements through PHICH groups. Each PHICH in a group is carried on one of **NSequences** orthogonal sequences. For mapping to resources, the groups are combined into mapping units where each unit spans three resource element groups. Thus, **NREG** is $3 \times \text{NMappingUnits}$ and **NRE** is $4 \times 3 \times \text{NMappingUnits}$. The **Ng** parameter controls the number of groups available for a given bandwidth.

See Also

ltePHICH | ltePHICHDecode | ltePHICHDeprecode | ltePHICHIndices | ltePHICHPRBS | ltePHICHPrecode | ltePHICHTransmitDiversityDecode

Introduced in R2014a

ltePHICHPRBS

PHICH pseudorandom scrambling sequence

Syntax

```
seq = ltePHICHPRBS(enb,n)
seq = ltePHICHPRBS(enb,n,mapping)
```

Description

`seq = ltePHICHPRBS(enb,n)` returns a column vector containing the first `n` outputs of the Physical Hybrid ARQ Indicator Channel (PHICH) scrambling sequence when initialized according to cell-wide settings structure, `enb`.

`seq = ltePHICHPRBS(enb,n,mapping)` allows control over the format of the returned sequence, `seq`, through the `mapping` string. Valid formats are 'binary', which is the default, and 'signed'. 'binary' maps true to 1 and false to 0. 'signed' maps true to -1 and false to 1.

Examples

Generate PHICH Pseudorandom Scrambling Sequence

Generate the pseudorandom scrambling sequence for the PHICH. Using RMC R.0 results in 12 BPSK modulated symbols, where 1 bit per symbol is mapped onto a single resource element (RE).

```
enb = lteRMCDL('R.0');
phichInfo = ltePHICHInfo(enb);
phichPrbsSeq = ltePHICHPRBS(enb,phichInfo.NRE);
```

Input Arguments

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. `enb` contains the following fields.

NCellID — Physical layer cell identity

nonnegative integer

Physical layer cell identity, specified as a nonnegative integer.

Data Types: double

NSubframe — Subframe number

nonnegative integer

Subframe number, specified as a nonnegative integer.

Data Types: double

Data Types: struct

n — Length of PHICH scrambling sequence

positive scalar integer

Length of PHICH scrambling sequence, specified as a positive scalar integer of 1 or more.

Data Types: double

mapping — Format of returned sequence

'binary' (default) | 'signed'

Format of returned sequence, specified as a string. This argument controls the format of the returned sequence, `seq`. The string 'binary' maps true to 1 and false to 0. The string 'signed' maps true to -1 and false to 1.

Data Types: char

Output Arguments

seq — PHICH pseudorandom scrambling sequence

logical column vector | numeric column vector

PHICH pseudorandom scrambling sequence, returned as a logical column vector or a numeric column vector. This argument contains the first `n` outputs of the PHICH scrambling sequence.

Data Types: logical | double

See Also

ltePHICH | ltePHICHDecode | ltePHICHDeprecode | ltePHICHIndices |
ltePHICHInfo | ltePHICHPrecode | ltePHICHTransmitDiversityDecode

Introduced in R2014a

ltePHICHPrecode

PHICH precoding

Syntax

```
out = ltePHICHPrecode(in,cp,ngroup)
out = ltePHICHPrecode(enb,ngroup,in)
```

Description

`out = ltePHICHPrecode(in,cp,ngroup)` precodes the N -by- NU matrix of layers, `in`, onto $P=NU$ antennas, given cyclic prefix length, `cp`, and PHICH group, `ngroup`. It performs PHICH precoding according to TS 36.211, Section 6.9.2 [1]. This function returns an M -by- P matrix, where P is the number of transmission antennas and M is the number of symbols per antenna.

`out = ltePHICHPrecode(enb,ngroup,in)` precodes the N -by- NU matrix of layers, `in`, onto $P=NU$ antennas for PHICH group, `ngroup`, using the cell-wide settings structure, `enb`.

Examples

Precode PHICH symbols

This example shows precoding of an arbitrary set of PHICH symbols for reference measurement channel (RMC) R.11, PHICH group 1.

Initialize a cell-wide parameter configuration structure, `enb`, for RMC R.11

```
rc = 'R.11';
enb = lteRMCDL(rc);
nLayers = enb.PDSCH.NLayers;
```

Generate an arbitrary set of input symbols as the PHICH symbols

```
re = randi([0,1], 40, nLayers);
im = randi([0,1], 40, nLayers);
```

```
symbols = complex(re, im);
```

Precode the PHICH symbols using normal cyclic prefix (set in `enb.CyclicPrefix` as per R.11), and PHICH group 1

```
nGroup = 1;
precodedSym = ltePHICHPrecode(symbols ,enb.CyclicPrefix, nGroup);
```

Have a peek at the first 5 precoded symbols of the output, columns represent the number of transmit antennas, for this example there are two transmit antennas

```
precodedSym(1:5, :)
```

```
ans =
```

```
0.7071 + 0.0000i    0.0000 + 0.0000i
0.0000 + 0.0000i    0.7071 + 0.0000i
0.7071 + 0.7071i    0.0000 + 0.7071i
0.0000 + 0.7071i    0.7071 - 0.7071i
0.0000 + 0.7071i   -0.7071 + 0.0000i
```

Input Arguments

in — PHICH input symbols

complex-valued numeric matrix

PHICH input symbols, specified as a complex-valued numeric matrix. `in` is a matrix of N -by- NU layers.

Data Types: double

Complex Number Support: Yes

cp — Cyclic prefix length

'Normal' | 'Extended'

Cyclic prefix length, specified as a string.

Data Types: char

ngroup — PHICH group

positive scalar integer

PHICH group number, specified as a positive scalar integer of 1 or more.

Data Types: double

enb — Cell-wide settings

scalar structure

Cell-wide settings, specified as a scalar structure. `enb` can contain the following field.

Parameter Field	Required or Optional	Values	Description
CyclicPrefix	Optional	'Normal ' (default), 'Extended '	Cyclic prefix length

Data Types: struct

Output Arguments

out — Precoded output

numeric matrix

Precoded output, returned as a numeric matrix of size M -by- P . M is the number of symbols per antenna and P is the number of transmission antennas.

Data Types: double

Complex Number Support: Yes

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteLayerMap | ltePHICH | ltePHICHDeprecode | ltePHICHIndices | ltePHICHInfo | ltePHICHPRBS

Introduced in R2014a

ltePHICHTransmitDiversityDecode

PHICH OSFBC decoding

Syntax

```
[out,CSI]=ltePHICHTransmitDiversityDecode(in,cp,ngroup,hest)
```

Description

`[out,CSI]=ltePHICHTransmitDiversityDecode(in,cp,ngroup,hest)` returns Orthogonal Space Frequency Block Code (OSFBC) decoded symbols `out` and channel state information `CSI` given received PHICH symbols `in` along with cyclic prefix length `cp` ('Normal', 'Extended'), PHICH resource group number `ngroup` and channel estimate `hest`.

`out` is of size M -by-1, where M is the number of received symbols for each receive antenna. `CSI` is of size M -by-1, the same as `out`, containing soft channel state information; the `CSI` provides an estimate of the received RE gain for each received RE. `in` is an M -by-`NRxAnts` matrix of received symbols, where M is the number of received symbols for each of `NRxAnts` receive antennas.

`hest` is a 3-D M -by-`NRxAnts`-by-`NTxAnts` array, where M is the number of received symbols in `in`, `NRxAnts` is the number of receive antennas, and `NTxAnts` is the number of transmit antennas.

Examples

Deprecode PHICH Symbols

This example generates the PHICH symbols for multiple antennas using RMC R.11.

Initialize cell-wide settings.

```
enb = lteRMCDL('R.11');  
phichInfo = ltePHICHInfo(enb);  
hisset = [1,1,1;1,2,0];  
phichSym = ltePHICH(enb,hisset);
```

Create an ideal, or identity, channel estimate.

```
hest = permute( repmat( eye( enb.CellRefP ), ...
    [1,1,phichInfo.NRE] ), [3,1,2] );
```

Decode the received symbols, using the channel estimates.

```
ng = phichInfo.NGroups;
out = ltePHICHTransmitDiversityDecode( phichSym, ...
    enb.CyclicPrefix, ng, hest )
```

out =

```
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
0.0000 + 0.0000i
-1.4142 - 1.4142i
-1.4142 - 1.4142i
0.0000 + 0.0000i
0.0000 + 0.0000i
1.4142 + 1.4142i
-1.4142 - 1.4142i
0.0000 + 0.0000i
0.0000 + 0.0000i
1.4142 + 1.4142i
-1.4142 - 1.4142i
0.0000 + 0.0000i
```

Input Arguments

in — Received PHICH symbols
numeric matrix

Received PHICH symbols, specified as a numeric matrix of size M -by-`NRxAnts`, where M is the number of received symbols for each of `NRxAnts` receive antennas.

Data Types: `double`

Complex Number Support: Yes

cp — Cyclic prefix length

'Normal' | 'Extended'

Cyclic prefix length, specified as a string.

Data Types: `char`

ngroup — PHICH group number

positive scalar integer (≥ 1)

PHICH group number, specified as a positive scalar integer of 1 or more.

Data Types: `double`

Complex Number Support: Yes

hest — Channel estimate

3-D numeric array

Channel estimate, specified as a 3-D numeric array of size M -by-`NRxAnts`-by-`NTxAnts`, where M is the number of received symbols in `in`, `NRxAnts` is the number of receive antennas, and `NTxAnts` is the number of transmit antennas.

Data Types: `double`

Complex Number Support: Yes

Output Arguments

out — OSFBC decoded symbols

numeric matrix

OSFBC decoded symbols, returned as a numeric matrix of size M -by-1, where M is the number of received symbols for each receive antenna.

Data Types: `double`

Complex Number Support: Yes

CSI — Soft channel state information

numeric matrix

Soft channel state information, returned as a numeric matrix of size M -by-1. It provides an estimate of the received RE gain for each received RE.

Data Types: `double`

Complex Number Support: Yes

See Also

`ltePHICH` | `ltePHICHDecode` | `ltePHICHDeprecode` | `ltePHICHIndices` |
`ltePHICHInfo` | `ltePHICHPRBS`

Introduced in R2014a

ltePMIInfo

Precoder matrix indication reporting information

Syntax

```
info = ltePMIInfo(enb,chs)
```

Description

`info = ltePMIInfo(enb,chs)` returns a structure, `info`, containing information related to precoder matrix indication (PMI) reporting. This information is in terms of the subband size in resource blocks, the number of subbands for PMI reporting, the maximum permitted PMI value for the given configuration, and the size of the codebook subset restriction bitmap.

You can use `info.NSubbands` to determine the correct size of the `PMISet` vector required for closed-loop spatial multiplexing operation. `PMISet` is a column vector with `info.NSubbands` rows. For CSI reporting, (`CSISrefP = 8`), `info.NSubbands` indicates the number of second codebook indices, i_2 , in the report. The first codebook index, i_1 , is always chosen in a wideband fashion, and is therefore a scalar. `PMIMode = 'Wideband'` corresponds to PUSCH reporting Mode 1-2 or PUCCH reporting Mode 1-1 (PUCCH Report Type 2). `PMIMode = 'Subband'` corresponds to PUSCH reporting Mode 3-1.

Examples

PMI Reporting Information

Get the PMI reporting information for RMC R.13.

```
enb = lteRMCDL('R.13');  
pmiInfo = ltePMIInfo(enb, enb.PDSCH)
```

```
pmiInfo =
```



```

k: 50
NSubbands: 1
MaxPMI: 15
CodebookSubsetSize: 16

```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a scalar structure. The structure contains the following fields:

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CellRefP	Optional	1 (default), 2, 4	Number of cell-specific reference signal (CRS) antenna ports
The following parameters apply when <code>chs.Txscheme</code> is set to <code>Port7-14</code> .			
CSIRefP	Optional	1 (default), 2, 4, 8	Array of number of CSI-RS antenna ports

Data Types: struct

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure containing the following fields.

Parameter Field	Required or Optional	Values	Description
NLayers	Optional	1 (default), 2, 3, 4, 5, 6, 7, 8	Number of transmission layers
PMIMode	Optional	'Wideband' (default), 'Subband'	PMI reporting mode
TxScheme	Optional	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	<p>Transmission scheme, specified as one of the following options.</p> <ul style="list-style-type: none"> • 'SpatialMux' — Closed-loop spatial multiplexing. • 'Port0' — Single-antenna port, port 0. • 'TxDiversity' — Transmit diversity scheme. • 'CDD' — Large delay CDD scheme. • 'MultiUser' — Multiuser MIMO scheme. • 'Port5' — Single-antenna port, port 5. • 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). • 'Port8' — Single-antenna port, port 8. • 'Port7-14' — Up to 8-layer transmission, ports 7–14.

Data Types: struct

Output Arguments

info — Information related to PMI reporting

structure

Information related to PMI reporting, returned as a structure containing the following fields:

Parameter Field	Description	Values
k	Subband size, in resource blocks (equal to NRB for wideband PMI reporting or transmission schemes without PMI reporting).	numeric scalar
NSubbands	Number of subbands for PMI reporting (equal to 1 for wideband PMI reporting) or transmission schemes without PMI reporting.	numeric scalar
MaxPMI	Maximum permitted PMI value for the given configuration. Valid PMI values range from 0 to MaxPMI. For CSI reporting, when CSISRefP = 8, MaxPMI is a 2–element vector, indicating the maximum permissible values of $i1$ and $i2$, the first and second codebook indices. For transmission schemes without PMI reporting, MaxPMI = 0.	nonnegative numeric scalar
CodeBookSubset	Size of the codebook subset restriction bitmap. For transmission schemes without PMI reporting, CodebookSubsetSize=0.	scalar

See Also

lteCSICodebook | lteDLPrecode | ltePDSCH | ltePDSCHDecode | ltePMISelect

Introduced in R2014a

ltePMISelect

PDSCH precoder matrix indicator calculation

Syntax

```
[pmiset,info,sinrs,subbandsinrs] = ltePMISelect(enb,chs,hest,noiseest)
```

Description

[pmiset,info,sinrs,subbandsinrs] = ltePMISelect(enb,chs,hest,noiseest) performs PDSCH precoder matrix indication (PMI) set calculation for the given cell-wide settings, **enb**, channel configuration structure, **chs**, channel estimate resource array, **hest**, and receiver noise variance, **noiseest**.

The PMI selection is performed using the codebooks specified in TS 36.213, Section 7.2.4 [2]. For the 'Port7-14' transmission scheme, the CSI reporting codebook is used when CSI-RS ports are equal to 8. For other numbers of CSI-RS ports in the 'Port7-14' transmission scheme and for other transmission schemes, the PMI selection is performed using the codebook for closed-loop spatial multiplexing. This term is defined in TS 36.211, Tables 6.3.4.2.3-1 and 6.3.4.2.3-2 [1].

PMIMode= 'Wideband' corresponds to PUSCH reporting Mode 1-2 or PUCCH reporting Mode 1-1 (PUCCH Report Type 2). PMIMode= 'Subband' corresponds to PUSCH reporting Mode 3-1. PMI selection is based on the rank indicated by **chs.NLayers**, except for the 'TxDiversity' transmission scheme, where the rank is 1. In PUCCH reporting Mode 1-1, you can achieve codebook subsampling for submode 2 (TS 36.213, Table 7.2.2-1D [2]) with an appropriate **chs.CodebookSubset**.

Examples

PMI Selection

This example shows PMI selection and configuration of a downlink transmission with the selected PMI set.

Populate an empty resource grid for RMC R.13 with cell specific reference signal symbols. OFDM modulate the grid to create `txWaveform`. Initialize channel configuration structure. Pass `txWaveform` through channel and demodulate `rxWaveform` to recover `rxSubframe`

```
enb = lteRMCDL('R.13');
enb.PDSCH.PMIMode = 'Subband';
reGrid = lteResourceGrid(enb);
reGrid(lteCellRSIndices(enb)) = lteCellRS(enb);

[txWaveform,info] = lteOFDMModulate(enb,reGrid);

chcfg.SamplingRate = info.SamplingRate;
chcfg.DelayProfile = 'EPA';
chcfg.NRxAnts = 4;
chcfg.DopplerFreq = 5;
chcfg.MIMOCorrelation = 'Low';
chcfg.InitTime = 0;
chcfg.Seed = 1;

rxWaveform = lteFadingChannel(chcfg,txWaveform);
rxSubframe = lteOFDMDemodulate(enb,rxWaveform);
```

```
Warning: Using default value for parameter field InitPhase (Random)
Warning: Using default value for parameter field ModelType (GMEDS)
Warning: Using default value for parameter field NTerms (16)
Warning: Using default value for parameter field NormalizeTxAnts (On)
Warning: Using default value for parameter field NormalizePathGains (On)
```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the following command `lteWarning('off','DefaultValue')`.

Initialize channel estimation structure. Perform channel estimation. Use estimates of the channel and noise power spectral density for PMI selection. This PMI set is then used to configure a downlink transmission.

```
cec.FreqWindow = 1;
cec.TimeWindow = 31;
cec.InterpType = 'cubic';
cec.PilotAverage = 'UserDefined';
cec.InterpWinSize = 1;
cec.InterpWindow = 'Centered';
```

```
[hest, noiseEst] = lteDLChannelEstimate(enb,cec,rxSubframe);
```

```
pmi = ltePMISelect(enb,enb.PDSCH,hest,noiseEst)
enb.PDSCH.PMISet = pmi;
txWaveform = lteRMCDLTool(enb,[1;0;0;1]);
```

Warning: Using default value for parameter field CodebookSubset (1111111111111111)

```
pmi =
```

```

1
1
6
2
12
12
12
12
12
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure containing the following fields:

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
		{'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	
NCellID	Required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
CellRefP	Required	1 (default), 2, 4, 8	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters apply when DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
NSubframe	Required	Nonnegative scalar integer	Subframe number
The following parameters apply when chs.TxScheme is set to 'Port7-14' transmission scheme.			
CSISRefP	Required	1, 2, 4	Array of number of CSI-RS antenna ports
CSIRSConf	Required	scalar integer	Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1. [1]
CSIRSPeri	Optional	'On' (default), 'Off', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]. You can also specify values in a cell array of configurations for each resource.	CSI-RS subframe configurations for one or more CSI-RS resources. Multiple CSI-RS resources can be configured from a single common subframe configuration or from a cell array of configurations for each resource.

Parameter Field	Required or Optional	Values	Description
Nframe	Optional	0 (default), Nonnegative scalar integer	Frame number

Data Types: struct

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure containing the following fields:

Parameter Field	Required or Optional	Values	Description
NLayers	Required	1, 2, 3, 4, 5, 6, 7, 8	Number of transmission layers
PMIMode	Optional	'Wideband' (default), 'Subband'	PMI reporting mode
TxScheme	Optional	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	Transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> • 'SpatialMux' — Closed-loop spatial multiplexing. • 'Port0' — Single-antenna port, port 0. • 'TxDiversity' — Transmit diversity scheme. • 'CDD' — Large delay CDD scheme. • 'MultiUser' — Multiuser MIMO scheme. • 'Port5' — Single-antenna port, port 5. • 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). • 'Port8' — Single-antenna port, port 8. • 'Port7-14' — Up to 8-layer transmission, ports 7–14.

Parameter Field	Required or Optional	Values	Description
CodebookSubs	Optional	String or vector, all ones (default)	Codebook subset restriction, specified as a string bitmap. The default values are all ones, permitting all PMI values. This parameter is configured by higher layers and indicates the values of PMI that can be reported. The bitmap, defined in TS 36.213, Section 7.2, is arranged $a_{A-1}, a_{A-2}, \dots, a_0$. For example, the element CodebookSubset(1) corresponds to a_{A-1} and the element CodebookSubset(end) corresponds to a_0 . The length of the bitmap is given by the info.CodebookSubsetSize field returned by ltePMIInfo. You can also specify the bitmap in a hexadecimal form by prefixing the string with '0x'. Alternatively, you can specify a numeric array identical to the PMISET output, indicating to restrict the selection to only those PMISET values. Specifying the parameter in this way enables you to obtain SINR estimates against an existing reported PMI for RI and CQI selection. If this parameter field is defined but is empty, no codebook subset restriction is applied. (codebookSubsetRestriction)

Data Types: struct

hest – Channel estimate

multidimensional array

Channel estimate, specified as a multidimensional array of size K -by- L -by- $NRxAnts$ -by- P where:

- K is the number of subcarriers.
- L is the number of OFDM symbols.
- $NRxAnts$ is the number of received antennas.
- P is the number of planes.

Data Types: double

Complex Number Support: Yes

noiseest — Receiver noise variance

numeric scalar

Receiver noise variance, specified as a numeric scalar. This input argument specifies an estimate of the received noise power spectral density.

Data Types: double

Output Arguments

pmiset — PMI set selected

column vector | integer

Precoder matrix indications (PMI) set selected, returned as a column vector or an integer. For the 'Port7-14' transmission scheme with eight CSI-RS ports, `pmiset` has `info.NSubbands + 1` rows. The first row indicates wideband codebook index $i1$. The subsequent `info.NSubbands` rows indicate the subband codebook indices $i2$ or if `info.NSubbands=1`, the wideband codebook index $i2$. For other numbers of CSI-RS ports in the 'Port7-14' transmission scheme, and for other transmission schemes, `pmiset` has '`info.NSubbands`' rows. Each row gives the subband codebook index for that subband. For wideband reporting (`info.NSubbands = 1`), `pmiset` is a scalar specifying the selected wideband codebook index.

Note: `pmiset` is empty if the noise estimate, `noiseest`, is zero or NaN, or if the channel estimate, `hest`, contains any NaNs in the locations of the reference signal REs used for PMI estimation.

info — Information related to PMI reporting

structure

Information related to PMI reporting, returned as a scalar structure. `info` contains the following fields:

Parameter Field	Description	Values
k	Subband size, in resource blocks (equal to <code>NRB</code> for wideband PMI reporting or transmission schemes without PMI reporting).	numeric scalar

Parameter Field	Description	Values
NSubbands	Number of subbands for PMI reporting (equal to 1 for wideband PMI reporting) or transmission schemes without PMI reporting.	numeric scalar
MaxPMI	Maximum permitted PMI value for the given configuration. Valid PMI values range from 0 to MaxPMI. For CSI reporting, when CSIRefP = 8, MaxPMI is a 2–element vector, indicating the maximum permissible values of $i1$ and $i2$, the first and second codebook indices. For transmission schemes without PMI reporting, MaxPMI = 0.	nonnegative numeric scalar
CodeBookSubs	Size of the codebook subset restriction bitmap. For transmission schemes without PMI reporting, CodebookSubsetSize=0.	scalar

sinrs — Signal-to-interference plus noise ratios

multidimensional array

Signal to interference plus noise ratios, returned as a multidimensional array of size K -by- L -by- $N1$ -by- $N2$, where:

- K is the number of subcarriers
- L is the number of OFDM symbols
- Definition of $N1$ and $N2$ depends on the CSI-RS ports:
 - For the 'Port7-14' transmission scheme with eight CSI-RS ports, $N1$ and $N2$ are the number of possible first and second codebook indices:
 - $N1$ is `info.MaxPMI (1)+1`
 - $N2$ is `info.MaxPMI (2)+1`
 - For other numbers of CSI-RS ports in the 'Port7-14' transmission scheme, and for other transmission schemes:
 - $N1$ is 1
 - $N2$ is `info.MaxPMI +1`

The array contains non-NaN values in the time and frequency locations (first two dimensions) of the reference signal REs. This array is used for PMI estimation for all

possible codebook indices (last two dimensions). These values are the calculated `sinrs` in the reference signal RE locations for each codebook index combination. You can obtain the values using a linear MMSE SINR metric. All locations not corresponding to a reference signal RE are set to NaN.

subbandsinrs — Subband signal-to-interference plus noise ratios

multidimensional array

Subband signal-to-interference plus noise ratios (`sinrs`), returned as a multidimensional array. The size of the array is `INFO.NSubbands`-by-`N1`-by-`N2`-by-`chs.NLayers`. This array indicates the average linear SINR in the subband specified for each possible PMI value (`N1` and `N2` dimensions) and each layer. The `sinrs` output is formed by summing a 5-dimensional `K`-by-`L`-by-`N1`-by-`N2`-by-`chs.NLayers` estimate of the `sinrs` across all of the layers. `subbandsinrs` is formed by averaging that same five-dimensional estimate across each subband that is in the appropriate region of the `K` dimension and across the `L` dimension.

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteCQISelect` | `lteCSICodebook` | `lteDLPrecode` | `ltePDSCH` | `ltePDSCHDecode`
| `ltePMIInfo` | `lteRISelect`

Introduced in R2014a

ltePRACH

Physical random access channel

Syntax

```
[waveform,info]=ltePRACH(ue,chs)
```

Description

[waveform,info]=ltePRACH(ue,chs) returns a column vector, waveform, containing complex symbols of the Physical Random Access Channel given UE-specific settings structure, ue, and channel transmission configuration structure, chs. PRACH information is returned in a structure, info, as described in ltePRACHInfo. waveform is N -by-1, where $N=\text{info.SamplingRate}\times\text{info.TotSubframes}\times 0.001$, and contains the time-domain PRACH signal spanning info.TotSubframes, as described in TS 211, Section 5.7 [2]. The waveform consists of a period of zeros (for the case of a time offset or Preamble Format 4), a cyclic prefix, the “useful” part of the PRACH signal, and a period of zeros to extend the waveform to span info.TotSubframes. The duration of the PRACH is a function of the Preamble Format as described in TS 36.211, Table 5.7.1-1 [2]. Depending on the configuration given in ue and chs, it is possible that no PRACH are generated; in this case info.PRBSets is empty to signal this condition, and waveform consists of all zeros. The conditions under which no PRACH are generated are described in the help for ltePRACHInfo.

chs.PreambleIdx can be a vector in the functions ltePRACHInfo and ltePRACHDetect. This assists with modelling of an eNodeB receiver searching for multiple preambles. However, this function, ltePRACH only generates a single PRACH and therefore chs.PreambleIdx should be a scalar. If chs.PreambleIdx is a vector, the first element is used.

By default, for the given ue.NULRB, the waveform output, is sampled at the same sampling rate as other uplink channels (PUCCH, PUSCH, and SRS) using the lteSCFDMAmodulate modulator.

If the value of chs.PreambleIdx is such that an insufficient quantity of cyclic shifts are available at the configured logical root index, chs.SeqIdx, the logical root index

number needs to be incremented. As such, the physical root used, `info.RootSeq`, differs from the physical root configured by `chs.SeqIdx`. The cyclic shift corresponding to `chs.PreambleIdx` can be found in `info.CyclicShift`. For High Speed mode, when `info.CyclicShift = -1`, the PRACH waveform is generated with no cyclic shift.

Examples

Generate PRACH Symbols

This example generates PRACH symbols of format 0 in an ue.NULRB=9 bandwidth, leaving all other parameters at their default values.

Initialize ue-specific settings and channel transmission configuration.

```
ue.DuplexMode = 'FDD';
ue.NULRB = 6;
chs.Format = 0;
chs.HighSpeed = 0;
chs.CyclicShiftIdx = 0;
chs.FreqOffset = 0;
chs.SeqIdx = 0;
chs.PreambleIdx = [ 0 ];
```

Generate PRACH symbols and PRACH info.

```
[prachSym,prachInfo] = ltePRACH(ue,chs);
prachInfo
```

```
prachInfo =

    NZC: 839
  SubcarrierSpacing: 1250
        Phi: 7
          K: 12
  TotSubframes: 1
    Fields: [0 3168 24576 2976]
    PRBSet: [6x1 uint32]
      NCS: 0
  CyclicShift: 0
    RootSeq: 129
  SamplingRate: 1920000
    BaseOffset: 0
```

Input Arguments

ue — UE-specific settings
scalar structure

UE-specific settings, specified as a scalar structure. **ue** can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following parameter fields are dependent upon the condition that DuplexMode is set to 'TDD' or when chs.ConfigIdx is present.			
NSubframe	Optional	0 (default), Nonnegative scalar integer	Subframe number
NFrame	Optional	0 (default), Nonnegative scalar integer	Frame number
The following parameter fields are dependent upon the condition that the Preamble Format (chs.Format) is set to '4'.			
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Data Types: struct

chs — Channel transmission configuration

scalar structure

Channel transmission configuration, specified as a scalar structure. chs can contain the following fields.

Parameter Field	Required or Optional	Values	Description
Format	Optional	0, 1, 2, 3, 4 (default is determined by ConfigIdx field if present). However, the Format field must be specified if the ConfigIdx field is not specified.	Preamble format See Note 1.
SeqIdx	Optional	0 (default), 0 ... 837 Nonnegative scalar integer.	Logical root sequence index (<i>RACH_ROOT_SEQUENCE</i>)
ConfigIdx	Optional	0 (default), 0 ... 63, Nonnegative scalar integer. Default is determined by Format field, if present. However, the ConfigIdx field must be specified if the Format field is not specified.	PRACH Configuration Index (<i>prach-ConfigurationIndex</i>) See Note 1.
PreambleIdx	Optional	0 (default), 0 ... 63, Nonnegative scalar integer or vector.	Preamble index within cell (<i>ra-PreambleIndex</i>)
CyclicShiftIdx	Optional	0 (default), 0 ... 15, Nonnegative scalar integer.	Cyclic shift configuration index (<i>zeroCorrelationZoneConfig</i> , yields <i>N_CS</i>)

Parameter Field	Required or Optional	Values	Description
HighSpeed	Optional	0 (default) or 1	High Speed flag (<i>highSpeedFlag</i>). A value of 1 signifies a restricted set. A value of 0 signifies an unrestricted set.
TimingOffset	Optional	0.0 (default), Numeric scalar	PRACH timing offset, in microseconds See Note 2.
The following parameters are dependent upon the condition that <code>ueDuplexMode</code> is set to 'TDD'.			
FreqIdx	Optional	0 (default), 0 ... 5 Nonnegative scalar integer.	Frequency resource index (<i>f_RA</i>). Only required for 'TDD' duplexing mode.
The following parameter fields are dependent upon the condition that the Preamble Format (<code>chs.Format</code>) is set to 0, 1, 2, or 3.			
FreqOffset	Optional	0 (default), 0 ... 94 Nonnegative scalar integer.	PRACH frequency offset (<i>n_PRBOffset</i>). Only required for Preamble format 0–3.
Note:			
<ol style="list-style-type: none"> 1 Although the parameters <code>chs.Format</code> and <code>chs.ConfigIdx</code> are both described as 'Optional', at least one of these parameters must be specified. If both parameters are present then <code>chs.Format</code> is used and <code>chs.ConfigIdx</code> is ignored. 2 The parameter <code>chs.TimingOffset</code> is not a genuine parameter of the PRACH generation as defined in the standard. It is provided to allow easy generation of a delayed PRACH output for use in testing, to simulate the effect of the distance between UE and eNodeB. The maximum value of <code>chs.TimingOffset</code> that yields a complete PRACH transmission in the output waveform is a timing offset equal to the duration of the last field of <code>info.Fields</code>; this timing offset corresponds to the maximum cell size and hence maximum distance between UE and eNodeB. If this maximum timing offset is exceeded, part of the PRACH signal is lost. The end of the useful part of the PRACH signal is out with the span of waveform. 			

Data Types: struct

Output Arguments

waveform — PRACH waveform symbols

complex-valued numeric column vector

PRACH waveform symbols, returned as a complex-valued numeric column vector. It has size N -by-1, where $N=(\text{info.SamplingRate} \times \text{info.TotSubframes} \times 0.001)$. It contains the time-domain PRACH signal spanning info.TotSubframes .

Data Types: double

Complex Number Support: Yes

info — PRACH information

scalar structure

PRACH information, returned as a scalar structure. It contains the following fields.

NZC — Zadoff-Chu sequence length

positive integer

Zadoff-Chu sequence length, returned as a positive integer. (N_{ZC})

Data Types: double

SubcarrierSpacing — Subcarrier spacing of PRACH preamble

positive integer

Subcarrier spacing of PRACH preamble, in Hz, returned as a positive integer. (deltaf_{RA})

Data Types: double

Phi — Frequency-domain location offset

positive integer

Frequency-domain location offset, returned as a positive integer. (phi)

Data Types: double

K — Ratio of uplink data to PRACH subcarrier spacing

numeric scalar

Ratio of uplink data to PRACH subcarrier spacing, returned as a numeric scalar. (K)

Data Types: double

TotSubframes — Number of subframes duration of PRACH

numeric scalar

Number of subframes duration of the PRACH, returned as a numeric scalar. Each subframe lasts 30720 fundamental periods, therefore `TotSubframes` is $\text{ceil}(\text{sum}(\text{Fields})/30720)$, the number of subframes required to hold the entire PRACH waveform. The duration of the PRACH is a function of the Preamble Format as described in TS 36.211, Table 5.7.1-1 [2].

Data Types: double

Fields — PRACH field lengths

1-by-4 numeric vector

PRACH field lengths, returned as a 1-by-4 numeric vector. The elements are [*OFFSET* *T_CP* *T_SEQ* *GUARD*]. *T_CP* and *T_SEQ* are the lengths in fundamental time periods (*T_s*), of cyclic prefix and PRACH sequence, respectively. *OFFSET* is the number of fundamental time periods from the start of configured subframe to the start of the cyclic prefix, and is nonzero only for TDD special subframes. *GUARD* is the number of fundamental time periods from the end of the PRACH sequence to the end of the number of subframes spanned by the PRACH.

Data Types: double

PRBSet — PRBs occupied by PRACH preamble

nonnegative integer column vector

PRBs occupied by PRACH preamble, returned as a nonnegative integer column vector. (starts at *n_{PRB}*, 0-based).

- An empty `info.PRBSet` indicates that the PRACH is not present and the waveform generated by ltePRACH consists of all zeros.
- An `info.PRBSet` that contains six consecutive Physical Resource Block numbers indicates the frequency domain location of the PRACH.

Note: The PRACH uses a different SC-FDMA symbol construction from the other channels (PUCCH, PUSCH and SRS) and therefore the `PRBSet` indicates the frequency range (180kHz per RB) that the PRACH occupies, it does not occupy the set of 12 subcarriers in each RB in the same fashion as other channels. The PRACH occupies a bandwidth approximately equal to 1.08MHz = 6RBs.

Data Types: `uint32`

NCS — Length of zero correlation zone plus 1

positive integer

Length of zero correlation zone plus 1, specified as a positive integer (N_{CS}). **NCS** corresponds to the complete extent of autocorrelation lags (0 and $N_{CS}-1$ nonzero) that exhibit perfect correlation properties (1 at 0 lag, 0 at nonzero lags). **NCS** is expressed directly, as in the standard, related to the fundamental Zadoff-Chu sequence construction. The actual sample span of the zero correlation zone in the waveform generated by `ltePRACH` is a function of the sampling rate.

Data Types: `double`

CyclicShift — Cyclic shift or shifts of Zadoff-Chu sequence

numeric row vector

Cyclic shift or shifts of Zadoff-Chu sequence, returned as a numeric row vector. (C_v). For High Speed mode, any element of **CyclicShift** equal to -1 indicates that there are no cyclic shifts in the restricted set for the corresponding preamble index.

Data Types: `double`

RootSeq — Physical root Zadoff-Chu sequence index or indices

numeric row vector

Physical root Zadoff-Chu sequence index or indices, returned as a numeric row vector. (u)

Data Types: `double`

CyclicOffset — Cyclic shift or shifts corresponding to Doppler Shift

vector

Cyclic shift or shifts corresponding to Doppler Shift of ($1/T_{SEQ}$), returned as a vector. This parameter is present for High Speed mode. (d_u)

Data Types: `double`

SamplingRate — Sampling rate of PRACH modulator

numeric scalar

Sampling rate of the PRACH modulator, returned as a numeric scalar.

Data Types: `double`

BaseOffset — Base timing offset

numeric scalar

Base timing offset, in microseconds, returned as a numeric scalar. This parameter field is used for the detection test in TS 36.104 [1]. (duration of $N_{CS}/2$)

Data Types: double

Data Types: struct

References

- [1] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePRACHDetect | ltePRACHInfo

Introduced in R2014a

ltePRACHDetect

Physical random access channel detection

Syntax

```
[indout,offset] = ltePRACHDetect(ue,chs,waveform,indin)
```

Description

`[indout,offset] = ltePRACHDetect(ue,chs,waveform,indin)` performs PRACH detection given UE-specific settings structure, `ue`, channel configuration structure, `chs`, received signal potentially containing a PRACH transmission, `waveform`, and range of preamble indices for which to search, specified in `indin`. The detector performs each distinct correlation required to cover all preamble indices, specified in `indin`, and searches the output of the correlations for peaks which exceed a detection threshold. The position of the peak in the correlator output is used to determine the preamble index detected and its associated timing offset. The preamble index and timing offset are returned in `indout` and `offset` respectively.

`waveform` is an N -by- P matrix containing the received time-domain signal in which to search for PRACH transmissions, where N is the number of time-domain samples and P is the number of receive antennas. Such a waveform is generated by the `ltePRACH` function, with $P=1$. Waveforms with, for example, $P=2$ or $P=4$ antennas can be created using one of the channel model functions, `lteFadingChannel`, `lteHSTChannel`, or `lteMovingChannel`. Any other waveform provided must be sampled at the same sampling rate that `ltePRACH` would produce for the same configuration i.e. the same value of `ue.NULRB` as configured here. The appropriate sampling rate can be found in the `SamplingRate` field of the output of `ltePRACHInfo`. It is assumed that any PRACH signal in `waveform` is synchronized such that the first sample of `waveform` corresponds to the start of an uplink subframe, therefore any delay from the start of `waveform` to the first sample of the PRACH therein (except for the case of the appropriate delay to position the transmission of Preamble Format 4 in the UpPTS for TDD special subframes) is interpreted by the detector as a timing offset.

The detector first calls `info=ltePRACHInfo` to establish the set of root sequences `info.RootSeq` required to cover all preamble indices in `indin`. A correlation is then

performed for each distinct value in `info.RootSeq`, with the inputs to the correlation being the input `waveform` and a locally generated PRACH waveform. The correlation is performed in the frequency domain. Multiplication of the FFT of the useful part of the locally generated PRACH waveform by a portion of the input `waveform` extracted with the same timing as the useful part of the locally generated PRACH waveform, followed by an IFFT to give the correlation. Further fields from `info` are then used to establish the length of the window of the correlator output that corresponds to each preamble index, the zero correlation zone. The preamble index is established by testing of the position of the peak in the correlator output to determine if it lies in the window of the correlator output given by the cyclic shift for each preamble index in turn, with the offset within the window being used to compute the timing offset.

Examples

Detect PRACH Preamble

Detect a PRACH preamble that has been delayed by 7 samples.

```
ue = struct('NULRB',9);
config = struct('Format',0,'CyclicShiftIdx',1,'PreambleIdx',44);
tx = ltePRACH(ue,config);
rx = [zeros(7,1); tx];
[index,offset] = ltePRACHDetect(ue,config,rx,(0:63).')
```

```
44
```

```
7.1895
```

Input Arguments

ue — UE-specific settings

structure array

UE-specific settings, specified as a structure array. `ue` contains the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters are dependent upon the condition that DuplexMode is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following parameter fields are dependent upon the condition that DuplexMode is set to 'TDD' or when chs.ConfigIdx is present.			
NSubframe	Optional	0 (default), Nonnegative scalar integer	Subframe number
NFrame	Optional	0 (default), Nonnegative scalar integer	Frame number
The following parameter fields are dependent upon the condition that the Preamble Format (chs.Format) is set to '4'.			
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Data Types: struct

chs — Channel transmission configuration

structure array

Channel transmission configuration, specified as a structure array. chs contains the following fields.

Parameter Field	Required or Optional	Values	Description
Format	Optional	0, 1, 2, 3, 4 (default is determined by	Preamble format See Note.

Parameter Field	Required or Optional	Values	Description
		ConfigIdx field if present). However, the Format field must be specified if the ConfigIdx field is not specified.	
SeqIdx	Optional	0 (default), 0 ... 837 Nonnegative scalar integer.	Logical root sequence index (<i>RACH_ROOT_SEQUENCE</i>)
ConfigIdx	Optional	0 (default), 0 ... 63, Nonnegative scalar integer. Default is determined by Format field, if present. However, the ConfigIdx field must be specified if the Format field is not specified.	PRACH Configuration Index (<i>prach-ConfigurationIndex</i>) See Note.
CyclicShiftIdx	Optional	0 (default), 0 ... 15, Nonnegative scalar integer.	Cyclic shift configuration index (<i>zeroCorrelationZoneConfig</i> , yields <i>N_CS</i>)
HighSpeed	Optional	0 (default) or 1	High Speed flag (<i>highSpeedFlag</i>). A value of 1 signifies a restricted set. A value of 0 signifies an unrestricted set.
The following parameters are dependent upon the condition that <i>ue.DuplexMode</i> is set to 'TDD'.			
FreqIdx	Optional	0 (default), 0 ... 5 Nonnegative scalar integer.	Frequency resource index (<i>f_RA</i>). Only required for 'TDD' duplexing mode.
The following parameter fields are dependent upon the condition that the Preamble Format (<i>chs.Format</i>) is set to 0, 1, 2, or 3.			
FreqOffset	Optional	0 (default), 0 ... 94 Nonnegative scalar integer.	PRACH frequency offset (<i>n_PRBOffset</i>). Only required for Preamble format 0–3.

Parameter Field	Required or Optional	Values	Description
<p>Note: Although the parameters <code>chs.Format</code> and <code>chs.ConfigIdx</code> are both described as ‘Optional’, at least one of these parameters must be specified. If both parameters are present then <code>chs.Format</code> is used and <code>chs.ConfigIdx</code> is ignored.</p>			

Data Types: `struct`

waveform — Received signal potentially containing PRACH transmission

numeric matrix

Received signal potentially containing PRACH transmission, specified as a numeric matrix of size N -by- P . This matrix contains the received time-domain signal in which to search for PRACH transmissions. N is the number of time-domain samples. P is the number of receive antennas.

Data Types: `double`

Complex Number Support: Yes

indin — Range of preamble indices within the cell for which to search

column vector

Range of preamble indices within the cell for which to search, specified as a column vector. It can be between 1 and 64 in length, containing values between 0 and 63.

Data Types: `double`

Output Arguments

indout — Preamble index

scalar | [], empty

Preamble index, returned as a scalar, if an index from `indin` results in the maximum correlation above detection threshold. `indout` is empty if no index from `indin` results in the maximum correlation above the detection threshold or the maximum correlation was obtained for an index not included in `indin`.

Data Types: `double`

offset — Timing offset

scalar | [], empty

Timing offset expressed in samples at the input sampling rate, returned as a scalar, if an index from `indin` results in the maximum correlation above detection threshold. The timing offset estimate has an integer part corresponding to the correlation peak sample position and a fractional part estimating the fractional delay present in the correlation peak. The cyclic shift in the frequency domain present in the PRACH preamble can contribute to this fractional delay.

`offset` is empty if no index from `indin` results in the maximum correlation above the detection threshold or the maximum correlation was obtained for an index not included in `indin`.

Data Types: `double`

See Also

`ltePRACH` | `ltePRACHInfo`

Introduced in R2014a

ltePRACHInfo

PRACH resource information

Syntax

```
info = ltePRACHInfo(ue,chs)
```

Description

`info = ltePRACHInfo(ue,chs)` returns a structure, `info`, containing PRACH resource information given UE-specific settings structure, `ue`, and channel transmission configuration structure, `chs`.

The parameters “PRACH Mask Index” and “PRACH Resource Index,” described in TS 36.321 [3], are not explicit in the configuration, but are implicit in the choice of `ue.NSubframe` and `ue.NFrame`.

The PRACH will always be generated provided it fits with the overall duplexing arrangement. For FDD, the PRACH is generated in any subframe. For TDD, the PRACH is generated only in special subframes for Preamble Format 4, and in uplink subframes for Preamble Format 0-3, provided there are `info.TotSubframes` consecutive uplink subframes for the chosen TDD configuration starting from the current subframe.

If `chs.ConfigIdx` is present, further validation is used to comply with TS 36.211, Table 5.7.1-2 for FDD and Table 5.7.1-4 for TDD [2]. Specifically, `chs.Format`, if present, is validated against `chs.ConfigIdx` and a preamble is only generated in appropriate frames and subframes. For contradictory values of `chs.Format` and `chs.ConfigIdx`, a warning is issued. If `chs.Format` is absent, the format is inferred, if possible, from `chs.ConfigIdx`. If the entry in TS 36.211, Table 5.7.1-2 for FDD or Table 5.7.1-4 for TDD [2] indicates “N/A” for the preamble format, an error is issued.

For TDD, if a combination of `chs.ConfigIdx`, `ue.TDDConfig`, `t_RA0`, `t_RA1`, `t_RA2` given by `ue.NSubframe` and `ue.NFrame` and `chs.FreqIdx` appears in TS 36.211, Table 5.7.1-4 [2], the PRACH is generated. `chs.FreqIdx` corresponds to the first entry in the quadruples in TS 36.211, Table 5.7.1-4 [2]. The other three entries (`t_RA0`, `t_RA1`, `t_RA2`) in the quadruple are completely specified by `ue.NSubframe` and `ue.NFrame`.

Note: In accordance with the above logic,

- `ue.NSubframe` and `ue.NFrame` are not required at all for FDD if `chs.ConfigIdx` is absent.
 - In the case that a preamble is not generated under the above rules, `info.PRBSets` is empty and the waveform generated by `ltePRACH` consists of all zeros.
-

Examples

Find Root Zadoff-Chu Sequences from PRACH Information

Find the set of root Zadoff-Chu sequences required for all preamble indices (0...63) in a cell.

```
ue.NULRB = 6;
config.Format = 0;
config.CyclicShiftIdx = 8;
config.PreambleIdx = (0:63);
prachInfo = ltePRACHInfo(ue,config);
unique(prachInfo.RootSeq)

    129    140    699    710
```

Input Arguments

ue — UE-specific settings

structure array

UE-specific settings, specified as a structure array. `ue` can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex

Parameter Field	Required or Optional	Values	Description
The following parameters are dependent upon the condition that <code>DuplexMode</code> is set to 'TDD'.			
TDDConfig	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following parameter fields are dependent upon the condition that <code>DuplexMode</code> is set to 'TDD' or when <code>chs.ConfigIdx</code> is present.			
NSubframe	Optional	0 (default), Nonnegative scalar integer	Subframe number
NFrame	Optional	0 (default), Nonnegative scalar integer	Frame number
The following parameter fields are dependent upon the condition that the Preamble Format (<code>chs.Format</code>) is set to '4'.			
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Data Types: struct

chs — Channel transmission configuration

scalar structure

Channel transmission configuration, specified as a scalar structure. `chs` contains the following fields.

Parameter Field	Required or Optional	Values	Description
Format	Optional	0, 1, 2, 3, 4 (default is determined by <code>ConfigIdx</code> field if present). However, the <code>Format</code> field must be specified if	Preamble format See Note.

Parameter Field	Required or Optional	Values	Description
		the <code>ConfigIdx</code> field is not specified.	
SeqIdx	Optional	0 (default), 0 ... 837 Nonnegative scalar integer.	Logical root sequence index (<i>RACH_ROOT_SEQUENCE</i>)
ConfigIdx	Optional	0 (default), 0 ... 63, Nonnegative scalar integer. Default is determined by <code>Format</code> field, if present. However, the <code>ConfigIdx</code> field must be specified if the <code>Format</code> field is not specified.	PRACH Configuration Index (<i>prach-ConfigurationIndex</i>) See Note.
PreambleIdx	Optional	0 (default), 0 ... 63, Nonnegative scalar integer or vector.	Preamble index within cell (<i>ra-PreambleIndex</i>)
CyclicShiftIdx	Optional	0 (default), 0 ... 15, Nonnegative scalar integer.	Cyclic shift configuration index (<i>zeroCorrelationZoneConfig</i> , yields <i>N_CS</i>)
HighSpeed	Optional	0 (default) or 1	High Speed flag (<i>highSpeedFlag</i>). A value of 1 signifies a restricted set. A value of 0 signifies an unrestricted set.
The following parameters are dependent upon the condition that <code>ueDuplexMode</code> is set to 'TDD'.			
FreqIdx	Optional	0 (default), 0 ... 5 Nonnegative scalar integer.	Frequency resource index (<i>f_RA</i>). Only required for 'TDD' duplexing mode.
The following parameter fields are dependent upon the condition that the Preamble Format (<code>chs.Format</code>) is set to 0, 1, 2, or 3.			
FreqOffset	Optional	0 (default), 0 ... 94 Nonnegative scalar integer.	PRACH frequency offset (<i>n_PRBOffset</i>). Only required for Preamble format 0–3.

Parameter Field	Required or Optional	Values	Description
<p>Note: Although the parameters <code>chs.Format</code> and <code>chs.ConfigIdx</code> are both described as ‘Optional’, at least one of these parameters must be specified. If both parameters are present then <code>chs.Format</code> is used and <code>chs.ConfigIdx</code> is ignored.</p>			

Data Types: `struct`

Output Arguments

info — PRACH resource information

scalar structure

PRACH resource information, returned as a scalar structure. `info` contains the following fields.

NZC — Zadoff-Chu sequence length

positive integer

Zadoff-Chu sequence length, returned as a positive integer. (N_{ZC})

Data Types: `double`

SubcarrierSpacing — Subcarrier spacing of PRACH preamble

positive integer

Subcarrier spacing of PRACH preamble, in Hz, returned as a positive integer. (Δf_{RA})

Data Types: `double`

Phi — Frequency-domain location offset

positive integer

Frequency-domain location offset, returned as a positive integer. (ϕ)

Data Types: `double`

K — Ratio of uplink data to PRACH subcarrier spacing

numeric scalar

Ratio of uplink data to PRACH subcarrier spacing, returned as a numeric scalar. (*K*)

Data Types: double

TotSubframes — Number of subframes duration of PRACH

numeric scalar

Number of subframes duration of the PRACH, returned as a numeric scalar. Each subframe lasts 30720 fundamental periods, therefore **TotSubframes** is $\text{ceil}(\text{sum}(\text{Fields})/30720)$, the number of subframes required to hold the entire PRACH waveform. The duration of the PRACH is a function of the Preamble Format as described in TS 36.211, Table 5.7.1-1 [2].

Data Types: double

Fields — PRACH field lengths

1-by-4 numeric vector

PRACH field lengths, returned as a 1-by-4 numeric vector. The elements are [*OFFSET* *T_CP* *T_SEQ* *GUARD*]. *T_CP* and *T_SEQ* are the lengths in fundamental time periods (*T_s*), of cyclic prefix and PRACH sequence, respectively. *OFFSET* is the number of fundamental time periods from the start of configured subframe to the start of the cyclic prefix, and is non-zero only for TDD special subframes. *GUARD* is the number of fundamental time periods from the end of the PRACH sequence to the end of the number of subframes spanned by the PRACH.

Data Types: double

PRBSet — PRBs occupied by PRACH preamble

nonnegative integer column vector

PRBs occupied by PRACH preamble, returned as a nonnegative integer column vector. (starts at *n_{PRB}*, 0-based).

- If no PRACH is present, the `info.PRBSet` field is empty.
- If PRACH is present, the `info.PRBSet` field contains 6 consecutive Physical Resource Block (PRB) indices, indicating the frequency-domain location of the PRACH.

Note: The PRACH uses a different SC-FDMA symbol construction from the other channels, PUCCH, PUSCH, and SRS. Specifically, the PRACH does not occupy the set of 12 subcarriers in each RB in the same fashion as other channels. Therefore, the **PRBSet**

indicates the frequency range, 180kHz per RB, occupied by the PRACH; The PRACH occupies a bandwidth approximately equal to 1.08MHz, or 6RBs.

Data Types: `uint32`

NCS — Length of zero correlation zone plus 1

positive integer

Length of zero correlation zone plus 1, specified as a positive integer (N_{CS}). `NCS` corresponds to the complete extent of autocorrelation lags (0 and $N_{CS}-1$ non-zero) that exhibit perfect correlation properties (1 at 0 lag, 0 at non-zero lags). `NCS` is expressed directly, as in the standard, related to the fundamental Zadoff-Chu sequence construction. The actual sample span of the zero correlation zone in the waveform generated by `ltePRACH` is a function of the sampling rate.

Data Types: `double`

CyclicShift — Cyclic shift or shifts of Zadoff-Chu sequence

numeric row vector

Cyclic shift or shifts of Zadoff-Chu sequence, returned as a numeric row vector. (C_v).

For High Speed mode, any element of `CyclicShift` equal to -1 indicates that there are no cyclic shifts in the restricted set for the corresponding preamble index.

Data Types: `double`

RootSeq — Physical root Zadoff-Chu sequence index or indices

numeric row vector

Physical root Zadoff-Chu sequence index or indices, required to generate the PRACH for each of the configured set of preamble indices returned as a numeric row vector. (u) `RootSeq` is either a vector or a scalar aligned with the configuration of `chs.PreambleIdx`

Data Types: `double`

CyclicOffset — Cyclic shift or shifts corresponding to Doppler Shift

vector

`CyclicOffset` values are cyclic shifts corresponding to a Doppler Shift of $1/T_{SEQ}$ (d_u).

For High Speed mode, the field `CyclicOffset` is present. It contains cyclic offset values for each of the configured set of preamble indices. `CyclicOffset` is either a vector or a scalar aligned with the configuration of `chs.PreambleIdx`.

Data Types: `double`

SamplingRate — Sampling rate of PRACH modulator

numeric scalar

Sampling rate of the PRACH modulator, returned as a numeric scalar.

Data Types: `double`

BaseOffset — Base timing offset

numeric scalar

Base timing offset, in microseconds. This field is used for the detection test in TS 36.104 [1]. (duration of $N_{CS}/2$)

Data Types: `double`

Data Types: `struct`

References

- [1] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] 3GPP TS 36.321. “Medium Access Control (MAC) protocol specification.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePRACH | ltePRACHDetect

Introduced in R2014a

ltePRBS

Pseudorandom binary sequence

Syntax

```
seq = ltePRBS(cinit,n)
seq = ltePRBS(cinit,n,mapping)
```

Description

`seq = ltePRBS(cinit,n)` returns an n -element column vector containing the first n elements of the pseudorandom binary sequence (PRBS) generator when initialized with 32-bit integer, `cinit`. PRBS sequences are used for scrambling of physical channels for interference mitigation.

`seq = ltePRBS(cinit,n,mapping)` allows control over the format of the returned sequence `seq` through the string `mapping`. Valid formats are 'binary' and 'signed'. The 'binary' format maps true to 1 and false to 0. The 'signed' format maps true to -1 and false to 1.

Examples

Generate Pseudorandom Binary Sequence

Generate an unsigned pseudorandom binary sequence.

```
seq = ltePRBS(162,4);
seq(1:4)
```

```
1
0
1
1
```

Generate Signed Pseudorandom Binary Sequence

Generate a signed pseudorandom binary sequence.

```
seq = ltePRBS(162,4, 'signed');
seq(1:4)

-1
 1
-1
-1
```

Generate PRBS from Physical Layer Cell Identity

Generate a pseudorandom binary sequence based on physical layer cell identity for RMC R.0.

Create a reference measurement channel (RMC) for configuration R.0. Use the physical layer cell identity, `NCellID`, as an initial value to generate the pseudorandom binary sequence.

```
enb = lteRMCDL('R.0');
prbsSeq = ltePRBS(enb.NCellID,5)

0
0
0
0
0
```

Input Arguments

cinit — Initialization value

32-bit integer

32-bit integer initialization value

Data Types: `int32` | `uint32` | `double`

n — Number of outputs

positive scalar integer

Number of outputs, specified as a positive scalar integer

Data Types: `double`

mapping — Format of returned sequence

'binary' (default) | 'signed'

Format of returned sequence, specified as a string. This string controls the format of the returned sequence, `seq`. The string 'binary' maps true to 1 and false to 0. The string 'signed' maps true to -1 and false to 1.

Data Types: char

Output Arguments

seq — Pseudorandom binary sequence

logical column vector | numeric column vector

Pseudorandom binary sequence, returned as a logical column vector or a numeric column vector. The vector contains the first `n` elements of the PRBS generator, when initialized with 32-bit integer `cinit`. If the sequence is binary, the values are of data type logical. If the sequence is signed, the values are of data type double.

Data Types: logical | double

See Also

ltePBCHPRBS | ltePCFICHPRBS | ltePDCCHPRBS | ltePDSCHPRBS | ltePHICHPRBS
| ltePUCCH2PRBS | ltePUCCH3PRBS

Introduced in R2014a

ltePRS

Positioning reference signal

Syntax

```
sym = ltePRS(enb)
```

Description

`sym = ltePRS(enb)` returns a column vector containing the positioning reference signal (PRS) symbols for transmission in a single subframe on antenna port 6. These symbols are ordered as they should be mapped into the resource elements along with `ltePRSIndices`. If, according to the PRS subframe configuration and duplex mode, there are no PRS scheduled in the subframe, then the output vector is empty.

The optional `PRSPeriod` parameter controls the downlink subframes in which PRS is present. See the `ltePRSIndices` function reference page for details.

Examples

Generate Positioning Reference Signal Symbols

Generate the PRS symbols for subframe 0 of a 10MHz downlink.

```
rmc = lteRMCDL('R.2');  
rmc.NPRSRB = rmc.NDLRB;  
rmc.PRSPeriod = 0;  
prsSymbols = ltePRS(rmc);  
prsSymbols(1:4)
```

```
0.7071 + 0.7071i  
0.7071 + 0.7071i  
0.7071 + 0.7071i
```


0.7071 + 0.7071i

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. **enb** contains the following parameter fields.

The parameters **TDDConfig** and **SSC** are only required if **DuplexMode** is set to 'TDD'.

NDLRB — Number of downlink resource blocks

positive scalar integer (6...110)

Number of downlink resource blocks, specified as a positive scalar integer between 6 and 110.

Example: 45

Data Types: double

CellRefP — Number of cell-specific reference signal antenna ports

1 | 2 | 4

Number of cell-specific reference signal antenna ports, specified as a 1, 2, or 4.

Example: 1

Data Types: double

NCellID — Physical layer cell identity number

nonnegative scalar integer

Physical layer cell identity number, specified as a nonnegative scalar integer.

Example: 4

Data Types: double

NSubframe — Subframe number

nonnegative scalar integer

Subframe number, specified as nonnegative scalar integer.

Example: 5

Data Types: double

NFrame — Frame number

0 (default) | Optional | nonnegative scalar integer

Frame number, specified as nonnegative scalar integer. Optional.

Example: 6

Data Types: double

CyclicPrefix — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional. Valid values include 'Normal' or 'Extended'.

Data Types: char

DuplexMode — Duplex mode type

'FDD' (default) | Optional | 'TDD'

Duplex mode type, specified as 'FDD' or 'TDD'. Optional. Used for separating the transmission signals.

Data Types: char

TDDConfig — Uplink or downlink configuration for TDD

0 (default) | Optional | nonnegative scalar integer (0...6)

Uplink or downlink configuration for TDD, specified as a nonnegative scalar integer between 0 and 6. Optional. Required only for 'TDD' duplex mode.

Example: 4

Data Types: double

SSC — Special subframe configuration

0 (default) | Optional | nonnegative scalar integer (0...9)

Special subframe configuration, specified as nonnegative scalar integer between 0 and 9. Optional. Required only for 'TDD' duplex mode.

Example: 6

Data Types: double

NPRSRB — Number of PRS physical resource blocks

0...NDLRB

Number of PRS physical resource blocks, specified as nonnegative scalar integer between 0 and NDLRB.

Example: 8

Data Types: double

PRSPeriod — Positioning reference signal (PRS) period

'On' (default) | Optional | 'Off' | [Iprs] | [Tprs Dprs]

Positioning reference signal (PRS) period, specified as 'On', 'Off', a numeric scalar, or a 1-by-2 vector. Optional. This parameter controls the downlink subframes in which PRS will be present. For details, see `ltePRSIndices`.

Example: 0

Example: [160 0]

Data Types: char | double

Output Arguments

sym — Positioning Reference Signal (PRS) symbols

complex numeric column vector

Positioning Reference Signal (PRS) symbols, returned as complex numeric column vector, for transmission in a single subframe on antenna port 6.

Example: $0.7071 + 0.7071i$

Data Types: double

Complex Number Support: Yes

See Also

`lteCellIRS` | `lteCSIRS` | `lteDMRS` | `lteEPDCCHDMRS` | `ltePRBS` | `ltePRSIndices`

Introduced in R2014a

ltePRSIndices

PRS resource element indices

Syntax

```
ind = ltePRSIndices(enb)  
ind = ltePRSIndices(enb,opts)
```

Description

`ind = ltePRSIndices(enb)` returns a column vector of 1-based linear indices for the PRS elements in the subframe, given the cell-wide settings parameter structure, `enb`. The length of `ind` is the number of resource elements (NRE). It returns the indices for the Positioning Reference Signal (PRS) resource element (RE) locations transmitted on antenna port 6. By default, these indices are in 1-based linear indexing form that can directly index elements in a matrix representing a single subframe of the port 6 resource grid. Other index representations can also be created. These indices are ordered as the complex PRS symbols should be mapped and will not include any elements allocated to PBCH, PSS, and SSS. A PRS subframe configuration schedule can be defined as required. If the subframe contains no PRS, `ind` is an empty vector.

The optional `enb.PRSPeriod` parameter controls the downlink subframes in which PRS will be present, either always 'On' or 'Off', or defined by the scalar subframe configuration index, `Iprs` (0...2399), or the explicit subframe periodicity and offset pair, `[Tprs Dprs]`, as listed in section 6.10.4.3 of [1]. The PRS containing subframes are located in conjunction with the parameters `enb.NSubframe` and optional `enb.NFrame`. `NSubframe` can be greater than 10; thus, setting `NSubframe` to 11 is equivalent to setting `NSubframe` to 1 and `NFrame` to 1.

`ind = ltePRSIndices(enb,opts)` allows control of the format of the returned indices through a cell array `opts` of option strings.

Examples

Generate PRS Resource Element Indices

Generate the PRS resource element (RE) indices for subframe 0 of a 10 MHz downlink.

```

rmc = lteRMCDL('R.2');
rmc.NPRSRB = rmc.NDLRB;
rmc.PRSPeriod = 0;
prsIndices = ltePRSIndices(rmc, 'ind');
prsIndices(1:4)

    1804
    1810
    1816
    1822

```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. **enb** contains the following fields.

The parameters `TDDConfig` and `SSC` are only required if `DuplexMode` is set to 'TDD'.

NDLRB — Number of downlink resource blocks

6...110

Number of downlink resource blocks, specified as a nonnegative scalar integer between 6 and 110.

Example: 50

Data Types: double

CellRefP — Number of cell-specific reference signal antenna ports

1 (default) | 2 | 4

Number of cell-specific reference signal antenna ports, specified as 1, 2, or 4.

Example: 1

Data Types: double

NCellID — Physical layer cell identity

nonnegative scalar integer

Physical layer cell identity, specified as a nonnegative scalar integer.

Example: 3

Data Types: double

NSubframe — Subframe number

nonnegative scalar integer

Subframe number, specified as a nonnegative scalar integer.

Example: 3

Data Types: double

NFrame — Frame number

0 (default) | Optional | nonnegative scalar integer

Frame number, specified as a nonnegative scalar integer. Optional.

Example: 3

Data Types: double

CyclicPrefix — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as 'Normal' or 'Extended'. Optional.

Data Types: char

DuplexMode — Duplex mode type

'FDD' (default) | Optional | 'TDD'

Duplex mode type, specified as 'FDD' or 'TDD'. Optional.

Data Types: char

TDDConfig — Uplink or downlink configuration for TDD

0 (default) | Optional | 0...6

Uplink or downlink configuration for TDD, specified as a nonnegative scalar integer between 0 and 6. Optional. Required only for 'TDD' duplex mode.

Example: 4

Data Types: double

SSC — Special subframe configuration for TDD

0 (default) | Optional | 0...9

Example: 5

Special subframe configuration for TDD, specified as a nonnegative scalar integer between 0 and 9. Optional. Required only for 'TDD' duplex mode.

Data Types: double

NPRSRB — Number of PRS physical resource blocks

0...NDLRB

Number of PRS physical resource blocks, specified as a nonnegative scalar integer between 0 and NDLRB.

Example: 32

Data Types: double

PRSPeriod — Positioning reference signal (PRS) period

'On' (default) | Optional | 'Off' | [Iprs] | [Tprs Dprs]

Positioning reference signal (PRS) period, specified as 'On', 'Off', a numeric scalar, or a 1-by-2 vector. Optional. This parameter controls the downlink subframes in which PRS will be present. For details, see `ltePRSIndices`.

Example: 0

Example: [160 0]

Data Types: char | double

opts — Options to control format of returned indices

string | cell array of strings

Options to control format of returned indices, specified as a string or a cell array of strings. `opts` can contain the following option strings.

Indexing style — Indexing style of returned indices

'ind' (default) | 'sub'

Cell array option, specified as 'ind' or 'sub'. If 'ind', the returned indices are in linear index form. If 'sub', the indices are in [subcarrier, symbol, antenna] subscript form. In this case, ind is a matrix of size *NRE*-by-3.

Data Types: char

Index base — Index base of returned indices

'1based' (default) | '0based'

Index base of returned indices, specified as '1based' or '0based'. This option controls whether the returned indices are 1-based or 0-based.

Data Types: char

Data Types: char | cell

Output Arguments

ind — PRS resource element indices

integer column vector | integer matrix

PRS resource element indices, returned as an integer column vector of length *NRE* or an integer matrix of size *NRE*-by-3. These indices are for the PRS resource element (RE) locations transmitted on antenna port 6.

Example: 1804

Data Types: uint32

References

[1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteCellRSIndices | lteCSIRSIndices | lteDMRSIndices | ltePRS

Introduced in R2014a

ltePSS

Primary synchronization signal

Syntax

```
s = ltePSS(enb)
```

Description

`s = ltePSS(enb)` returns a complex column vector containing the primary synchronization signal (PSS) values for cell-wide settings in the `enb` structure.

This signal is only defined for subframes 0 and 5 in FDD, and subframes 1 and 6 in TDD. Therefore, an empty vector is returned for other values of `NSubframe`. This behavior allows this function and the corresponding sequence function `ltePSSIndices` to index the resource grid for any subframe number as described in “Resource Grid Indexing”. However, the resource grid is only modified in subframes 0 and 5 in FDD, or subframes 1 and 6 in TDD.

Examples

Generate Primary Synchronization Signal Values

Generate the primary synchronization signal (PSS) values, providing cell-wide settings.

```
pss = ltePSS(struct('NCellID',1,'NSubframe',0));
pss(1:4)

    1.0000 + 0.0000i
   -0.9691 - 0.2468i
   -0.7331 - 0.6802i
    0.0747 + 0.9972i
```

Input Arguments

enb — Cell-wide settings
structure

Cell-wide settings, specified as a structure. `enb` contains the following fields.

NCellID — Physical layer cell identity number

nonnegative scalar integer

Physical layer cell identity number, specified as a nonnegative scalar integer.

Example: 6

Data Types: double

NSubframe — Subframe number

0 (default) | Optional | nonnegative scalar integer

Subframe number, specified as nonnegative scalar integer. Optional.

Example: 8

Data Types: double

DuplexMode — Duplex mode type

'FDD' (default) | Optional | 'TDD'

Duplex mode type, specified as 'FDD' or 'TDD'. Optional. Used for separating the transmission signals.

Data Types: char

Output Arguments

s — Primary synchronization signal (PSS) values

complex-valued numeric column vector

Primary synchronization signal (PSS) values, returned as a complex-valued numeric column vector. These value are created for the cell-wide settings in the `enb` structure.

Example: $1.0000 + 0.0000i$

Data Types: double

Complex Number Support: Yes

See Also

`ltePSSIndices` | `lteSSS`

Introduced in R2014a

ltePSSIndices

PSS resource element indices

Syntax

```
ind = ltePSSIndices(enb)
ind = ltePSSIndices(enb,port)
ind = ltePSSIndices(enb,port,opts)
```

Description

`ind = ltePSSIndices(enb)` returns a column vector, `ind`, of resource element (RE) indices, Port 0 oriented, for the Primary Synchronization Signal (PSS), using the cell-wide settings structure, `enb`. By default, the indices are returned in 1-based linear indexing form that can directly index elements of a 3-D array representing the resource array. These indices are ordered as the PSS modulation symbols should be mapped. Alternative indexing formats can also be generated.

`ind = ltePSSIndices(enb,port)` returns indices appropriate for antenna port, `port`, which must be either 0, 1, 2, or 3.

`ind = ltePSSIndices(enb,port,opts)` allows control of the format of the returned indices through a cell array `opts` of option strings.

These indices are only defined for subframes 0 and 5 in FDD, and subframes 1 and 6 in TDD. Therefore, an empty vector is returned for other values of `NSubframe`. This behavior allows this function and the corresponding sequence function `ltePSS` to index the resource grid for any subframe number as described in “Resource Grid Indexing”. However, the resource grid is only modified in subframes 0 and 5 in FDD, or subframes 1 and 6 in TDD.

Examples

Get PSS Resource Element Indices

Get 0-based PSS resource element indices in linear form for antenna port 0.

```
enb = lteRMCDL('R.4');
ind = ltePSSIndices(enb,0,{'0based','ind'});
ind(1:4)
```

```
437
438
439
440
```

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. **enb** contains the following fields.

NDLRB — Number of downlink resource blocks

6...110

Number of downlink resource blocks, specified as nonnegative scalar integer.

Example: 9

Data Types: double

CyclicPrefix — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as 'Normal' or 'Extended'. Optional.

Data Types: char

NSubframe — Subframe number

0 (default) | Optional | nonnegative scalar integer

Subframe number, specified as nonnegative scalar integer. Optional.

Example: 9

Data Types: double

DuplexMode — Duplex mode type

'FDD' (default) | Optional | 'TDD'

Duplex mode type, specified as 'FDD' or 'TDD'. Optional.

Data Types: char

port — Antenna port number

0 (default) | 1 | 2 | 3

Antenna port number, specified as nonnegative scalar integer.

Example: 0

Data Types: double

opts — Options to control format of returned indices

string | cell array of strings

Options to control format of returned indices, specified as a string or a cell array of strings. **opts** can contain the following option strings.

Indexing style — Indexing style of returned indices

'ind' (default) | 'sub'

Cell array option, specified as 'ind' or 'sub'. If 'ind', the returned indices are in linear index form. If 'sub', the indices are in [subcarrier, symbol, antenna] subscript form.

Data Types: char

Index base — Index base of returned indices

'1based' (default) | '0based'

Index base of returned indices, specified as '1based' or '0based'. This option string controls whether the returned indices are 1-based or 0-based.

Data Types: char

Data Types: char | cell

Output Arguments

ind — PSS resource element indices

integer column vector | 3-column integer matrix

PSS resource element indices, returned as an integer column vector or a 3-column integer matrix. This output is generated using the cell-wide settings structure, **enb**.

Data Types: uint32

See Also

ltePSS | lteSSSIndices

Introduced in R2014a

ltePUCCH1

Physical uplink control channel format 1

Syntax

```
[sym,info] = ltePUCCH1(ue,chs,ack)
```

Description

[sym,info] = ltePUCCH1(ue,chs,ack) returns a complex matrix, **sym**, containing Physical Uplink Control Channel (PUCCH) format 1 symbols and information structure array, **info**, for UE-specific settings, **ue**, channel transmission configuration, **chs**, and vector of hybrid ARQ (HARQ) indicator values, **ack**. The symbols for each antenna are in the columns of **sym**, with the number of columns determined by the number of PUCCH resource indices specified in the **chs** structure.

For shortened transmissions, when **ue.Shortened** is 1, the second column of **info.OrthSeq** has a zero in the last row because in this case, the spreading factor for the second slot is 3, rather than 4.

This function can also be used to generate a Scheduling Request (SR) if the configured PUCCH resource indices match indices configured for a Scheduling Request (See TS 36.213 [1], Section 10.1.5).

Examples

Generate PUCCH Format 1 Symbols

Generate the physical uplink control channel (PUCCH) format 1 symbols for UE-specific settings.

```
ue.NCellID = 1;  
ue.NSubframe = 0;  
chs.ResourceIdx = 0;  
pucch1Sym = ltePUCCH1(ue,chs,[]);
```



```
Warning: Using default value for parameter field CyclicPrefixUL (Normal)
Warning: Using default value for parameter field Hopping (Off)
Warning: Using default value for parameter field DeltaShift (1)
Warning: Using default value for parameter field CyclicShifts (0)
Warning: Using default value for parameter field Shortened (0)
```

To suppress 'Using default value ...' warnings for LTE parameters, execute `lteWarning('off', 'DefaultValue')` in your MATLAB® command window prior to running code or initialize the parameters in your code workspace.

Input Arguments

ue — UE-specific settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

Data Types: `struct`

chs — Channel transmission configuration

structure

PUCCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 2047, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n1_pucch</i>)
DeltaShift	Optional	1 (default), 2, 3	(<i>delta_shift</i>)
DeltaOffset	Optional	0 (default), 1, 2	<i>delta_offset</i> Warning: The use of this parameter field is deprecated. It only applies to 3GPP releases prior to v8.5.0. This parameter will be removed in a future release.
CyclicShifts	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH (<i>N1cs</i>)

ack — Hybrid ARQ indicator values

0 (default) | nonnegative integer vector (0, 1, 2)

Hybrid ARQ indicator values, specified as nonnegative integer vector with values of 0, 1, or 2. The corresponding PUCCH transmission is of format 1, 1a, or 1b, respectively. This vector is denoted “block of bits $b(0), \dots, b(M_{\text{bit}}-1)$ ” in TS 36.211 [2], Section 5.4.1. An M_{bit} value of 0, 1, or 2 corresponds to PUCCH format 1, 1a, or 1b, respectively, as described in TS 36.211 [2], Table 5.4-1.

Example: [0,1,2]

Data Types: double

Output Arguments

sym — PUCCH format 1 symbols

complex numeric column vector

PUCCH format 1 symbols, returned as complex numeric column vector.

Example: $0.7071 + 0.7071i$

Data Types: double

Complex Number Support: Yes

info — PUCCH format 1 resource information

structure array

PUCCH format 1 resource information, returned as a structure array. `info` is a structure array having the following fields.

Alpha — Reference signal cyclic shift for OFDM symbol

two-column row vector

Reference signal cyclic shift, returned as two-column row vector, for each OFDM symbol.

Data Types: double

SeqGroup — PUCCH base sequence group number for each slot

two-column row vector

PUCCH base sequence group number for each slot, returned as two-column row vector. (u)

Data Types: double

SeqIdx — PUCCH base sequence group number indices

two-column row vector

PUCCH base sequence group number indices, returned as two-column row vector, for each slot. (v)

Data Types: double

NResourceIdx — PUCCH resource indices for each slot

two-column row vector

PUCCH resource indices for each slot, returned as a two-column row vector. (n)

Data Types: double

NCellCyclicShift — Cell-specific cyclic shift for each OFDM symbol

row vector

Cell-specific cyclic shift for each OFDM symbol, returned as a row vector. (*n_{cell_cs}*)

Data Types: double

OrthSeqIdx — Orthogonal sequence index for each slot

row vector

Orthogonal sequence index for each slot, returned as a two-column row vector. (*n_{oc}*)

Data Types: double

Symbols — Modulated data symbols for each OFDM symbol

row vector

Modulated data symbols for each OFDM symbol, returned as row vector. (*d(0)*)

Data Types: double

OrthSeq — Orthogonal sequence of each slot

numeric matrix

Orthogonal sequence of each slot, returned as numeric matrix. Each column in the matrix contains the orthogonal sequence (*w_{n_oc}*) for each slot.

For shortened transmissions, when `ue.Shortened` is 1, the second column of `info.OrthSeq` has a zero in the last row because in this case, the spreading factor for the second slot is 3, rather than 4.

Data Types: double

ScrambSeq — Scrambling value

two-column row vector

Scrambling value for each slot (*S*), returned as two-column row vector.

Data Types: double

References

- [1] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

[2] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePUCCH1Decode | ltePUCCH1DRS | ltePUCCH1DRSIndices | ltePUCCH1Indices
| ltePUCCH2 | ltePUCCH3

Introduced in R2014a

ltePUCCH1Decode

Physical uplink control channel format 1 decoding

Syntax

```
ack = ltePUCCH1Decode(ue,chs,oack,sym)
```

Description

`ack = ltePUCCH1Decode(ue,chs,oack,sym)` returns a vector of hybrid-ARQ (HARQ) indicator values, `ack`, obtained by performing PUCCH Format 1 decoding of the complex matrix `sym`. The decoder uses a maximum likelihood (ML) approach, assuming that `sym` has already been equalized to best restore the original transmitted complex values. The symbols for each antenna are in the columns of `sym`. The number of columns in `sym` should match the number of PUCCH resource indices specified in the structure `chs`.

The output argument `ack` is a vector containing `oack` hybrid-ARQ indicator values.

Examples

Decode PUCCH Format 1B Symbols

Decoding of a PUCCH Format 1b received symbol vector `pucch1Sym`.

Initialize a UE-specific configuration structure (`ue`), channel configuration structure (`chs`) and ACK vector (`txAck`)

```
ue.NCellID = 0;  
ue.NSubframe = 0;  
ue.CyclicPrefixUL = 'Normal';  
ue.Hopping = 'Off';  
ue.Shortened = 0;  
  
chs.DeltaShift = 1;  
chs.ResourceIdx = 0;  
chs.CyclicShifts = 0;
```

```
txAck = [0;1];
```

Generate PUCCH symbols. Then decode the symbols and verify that the Rx ACK vector matches the Tx ACK vector.

```
pucch1Sym = ltePUCCH1(ue,chs,txAck);
```

```
rxAck = ltePUCCH1Decode(ue,chs,length(txAck),pucch1Sym)
```

```
rxAck =
```

```
0
1
```

Input Arguments

ue — UE-specific settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

Data Types: struct

chs — Channel transmission configuration

structure

PUCCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 2047, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n1_pucch</i>)
DeltaShift	Optional	1 (default), 2, 3	(<i>delta_shift</i>)
DeltaOffset	Optional	0 (default), 1, 2	<i>delta_offset</i> Warning: The use of this parameter field is deprecated. It only applies to 3GPP releases prior to v8.5.0. This parameter will be removed in a future release.
CyclicShifts	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH (<i>N1cs</i>)

Data Types: struct

oack — Number of uncoded HARQ-ACK bits

0 (default) | nonnegative integer vector

Uncoded HARQ-ACK bits, specified as a nonnegative integer vector. **oack** specifies the number of Hybrid ARQ indicator values expected: 1 (PUCCH Format 1a) or 2 (PUCCH Format 1b).

Data Types: double

sym — Symbols of each antenna

complex numeric matrix

Symbols for each antenna, specified as complex numeric matrix. The number of columns in `sym` should match the number of PUCCH resource indices specified in the structure, `chs`.

Example: $0.25881 + 0.9659i$

Data Types: `double`

Complex Number Support: Yes

Output Arguments

ack — Hybrid ARQ indicator values

logical column vector or matrix

`oack` Hybrid ARQ indicator values, specified as a logical column vector or matrix. This vector is obtained by performing PUCCH Format 1 decoding of the complex matrix, `sym`. A Scheduling Request (SR), which is transmitted on PUCCH Format 1 (no ACK bits), can be detected by setting `oack = 1`; in this case the received Hybrid ARQ indicator value, `ack`, is expected to be zero.

If multiple decoded Hybrid ARQ indicator vectors have a likelihood equal to the maximum, `ack` is a matrix where each column represents one of the equally likely Hybrid ARQ indicator vectors. If a minimum likelihood threshold is not met, `ack` is empty.

Data Types: `logical`

See Also

`ltePUCCH1` | `ltePUCCH1DRS` | `ltePUCCH1DRSIndices` | `ltePUCCH1Indices` |

`ltePUCCH2Decode` | `ltePUCCH3Decode`

Introduced in R2014a

ltePUCCH1DRS

PUCCH format 1 demodulation reference signal

Syntax

```
[seq,info] = ltePUCCH1DRS(ue,chs)
```

Description

`[seq,info] = ltePUCCH1DRS(ue,chs)` returns a complex matrix, `seq`, containing PUCCH Format 1 demodulation reference signal (DRS) values and information structure array, `info`, for UE-specific settings, `ue`, and channel transmission configuration, `chs`. The symbols for each antenna are in the columns of `seq`, with the number of columns determined by the number of PUCCH resource indices specified in the `chs` structure.

Examples

Generate PUCCH Format 1 DRS

Generate PUCCH format 1 demodulation reference signal (DRS) values for UE-specific settings.

Initialize Ue-specific and channel configuration structures (`ue` and `chs`). Generate PUCCH format 1 DRS values (`drsSeq`).

```
ue.NCellID = 1;  
ue.NSubframe = 0;  
ue.CyclicPrefixUL = 'Normal';  
ue.Hopping = 'Off';
```

```
chs.ResourceIdx = 0;  
chs.DeltaShift = 1;  
chs.CyclicShifts = 0;
```

```
drsSeq = ltePUCCH1DRS(ue,chs);
```

Generate PUCCH Format 1 DRS Using Virtual Cell ID

Demonstrate Uplink Release 11 coordinated multipoint (CoMP) operation. Intercell interference can be avoided by using a virtual cell identity and a distinct DMRS cyclic shift hopping identity for a potentially interfering UE in a neighboring cell.

Configuration for UE of interest, UE 1 in cell 1.

```
ue1.NCellID = 1;
ue1.NSubframe = 0;
ue1.CyclicPrefixUL = 'Normal';
ue1.Hopping = 'Off';
```

```
chs1.ResourceIdx = 0;
chs1.DeltaShift = 1;
chs1.CyclicShifts = 0;
```

Configuration for interferer, UE 2 in cell 2.

```
ue2.NCellID = 2;
ue2.NSubframe = 0;
ue2.CyclicPrefixUL = 'Normal';
ue2.Hopping = 'Off';
```

```
chs2.ResourceIdx = 1;
chs2.DeltaShift = 1;
chs2.CyclicShifts = 0;
```

Measure the interference between the DRS signals.

```
interferenceNoCoMP = abs(sum(ltePUCCH1DRS(ue1,chs1).*conj(ltePUCCH1DRS(ue2,chs2))))
```

```
interferenceNoCoMP =
```

```
2.0706
```

Reconfigure interferer for CoMP operation: use virtual cell identity equal to the cell identity for the UE of interest.

```
ue2.NPUCCHID = ue1.NCellID;
```

Measure the interference between the DRS signals when using CoMP:

$$\text{interferenceUsingCoMP} = \text{abs}(\text{sum}(\text{ltePUCCH1DRS}(\text{ue1}, \text{chs1}) .* \text{conj}(\text{ltePUCCH1DRS}(\text{ue2}, \text{chs2}))))$$

$$\text{interferenceUsingCoMP} = 2.4990\text{e-}14$$

Compare the correlations between the DRS signals for two UEs with and without CoMP, `interferenceUsingCoMP` and `interferenceNoCoMP` respectively. Using CoMP, the interference is reduced to effectively zero.

Input Arguments

ue — UE-specific settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
NPUCCHID	Optional	Nonnegative scalar integer (0, ...,503)	PUCCH virtual cell identity. If this field is not present, NCellID is used as the identity.

chs — Channel transmission configuration

structure

PUCCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 2047, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n1_pucch</i>)
ResourceSize	Optional	0 (default), 0 ... 98, Nonnegative scalar integer.	Size of resource allocated to PUCCH Format 2 (<i>N2RB</i>)
DeltaShift	Optional	1 (default), 2, 3	(<i>delta_shift</i>)
DeltaOffset	Optional	0 (default), 1, 2	<i>delta_offset</i> Warning: The use of this parameter field is deprecated. It only applies to 3GPP releases prior to v8.5.0. This parameter will be removed in a future release.
CyclicShifts	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH (<i>N1cs</i>)

Output Arguments

seq – PUCCH format 1 DRS values

complex numeric matrix

PUCCH format 1 DRS values, returned as a complex numeric matrix. The symbols for each antenna are in the columns of **seq**, with the number of columns determined by the number of PUCCH resource indices specified in the structure, **chs**.

Data Types: double

Complex Number Support: Yes

info – PUCCH format 1 DRS information

structure array

PUCCH format 1 DRS information, returned as a structure array. `info` contains the following fields.

Alpha — Reference signal cyclic shift for each OFDM symbol

two-column row vector

Reference signal cyclic shift for each OFDM symbol, returned as a two-column row vector.

Data Types: double

SeqGroup — PUCCH base sequence group number for each slot

two-column row vector

PUCCH base sequence group number for each slot, returned as two-column row vector. (u)

Data Types: double

SeqIdx — PUCCH base sequence number for each slot

two-column row vector

PUCCH base sequence number for each slot, returned as two-column row vector. (v)

Data Types: double

NResourceIdx — PUCCH resource indices for each slot

row vector

PUCCH resource indices for each slot, returned as two-column row vector. (n')

Data Types: double

NCellCyclicShift — Cell-specific cyclic shift for each OFDM symbol

row vector

Cell-specific cyclic shift for each OFDM symbol, returned as row vector. ($ncell_cs$)

Data Types: double

OrthSeqIdx — Orthogonal sequence index for each slot

two-column row vector

Orthogonal sequence index for each slot, returned as two-column row vector. (n_{oc})

Data Types: double

Symbols — Modulated data symbols

row vector

Modulated data symbols, returned as row vector. There is one element for each OFDM symbol.

Data Types: double

Complex Number Support: Yes

OrthSeq — Orthogonal sequence for each slot

numeric matrix

Orthogonal sequence for each slot, returned as a numeric matrix. (*wbar*)

Data Types: double

Complex Number Support: Yes

See Also

ltePUCCH1 | ltePUCCH1Decode | ltePUCCH1DRSIndices | ltePUCCH1Indices |
ltePUCCH2DRS | ltePUCCH3DRS

Introduced in R2014a

ltePUCCH1DRSIndices

PUCCH format 1 DRS resource element indices

Syntax

```
[ind,info] = ltePUCCH1DRSIndices(ue,chs)
[ind,info] = ltePUCCH1DRSIndices(ue,chs,opts)
```

Description

`[ind,info] = ltePUCCH1DRSIndices(ue,chs)` returns a matrix of resource element indices given the UE-specific settings structure `ue` and channel transmission configuration `chs`. It returns a matrix of resource element (RE) indices and information structure array `info` for the demodulation reference signal (DRS) associated with PUCCH format 1 transmission. By default the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix. These indices are ordered as the PUCCH format 1 DRS modulation symbols should be mapped. Alternative indexing formats can also be generated. The indices for each antenna are in the columns of `ind`, with the number of columns determined by the number of PUCCH Resource Indices specified.

`[ind,info] = ltePUCCH1DRSIndices(ue,chs,opts)` allows control of the format of the returned indices through a cell array `opts` of option strings.

Examples

Generate PUCCH Format 1 DRS Indices

Generate PUCCH format 1 demodulation reference signal (DRS) resource element (RE) indices for 1.4 MHz bandwidth, PUCCH resource index 0, and using default values for all other parameters.

```
ind = ltePUCCH1DRSIndices(struct('NULRB',6),struct('ResourceIdx',0));
ind(1:4)
```

```
145
146
```


147

148

Input Arguments

ue — UE-specific settings

structure

ue is a structure having the following fields.

NULRB — Number of uplink resource blocks

0 (default) | nonnegative scalar integer

Number of uplink resource blocks, specified as a nonnegative scalar integer.

Data Types: double

CyclicPrefixUL — Cyclic prefix length

'Normal' (default) | optional | 'Extended'

Cyclic prefix length, specified as 'Normal' or 'Extended', for uplink channels. Optional.

Data Types: char

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure. **chs** contains the following fields.

ResourceIdx — PUCCH resource indices

0 (default) | optional | 0...2047

PUCCH resource indices, specified as nonnegative vector, with one element for each transmission antenna. These indices determine the cyclic shift and orthogonal cover used for transmission. (*n1_pucch*)

Example: 78

Data Types: double

ResourceSize — Size of resources allocated to PUCCH format 2

0 (default) | optional | 0...98

Size of resources allocated to PUCCH format 2, specified as nonnegative scalar integer. This parameter affects location of this transmission. (*N2RB*)

Data Types: double

DeltaShift — Delta shift

1 (default) | optional | 2 | 3

Delta shift, specified as 1, 2, or 3. (*delta_shift*)

Data Types: double

CyclicShifts — Number of cyclic shifts for format 1 resource blocks

0 (default) | optional | 0...7

Number of cyclic shifts for format 1 resource blocks, in RBs, specified as a nonnegative scalar integer. Optional. This parameter can be used in a mixture of format 1 and format 2 PUCCH. (*N1cs*)

Data Types: double

Data Types: struct

opts — Options to control format of returned indices

string | cell array of strings

Options to control format of returned indices, specified as a string or a cell array of strings. It can contain the following option strings.

Indexing style — Indexing style of returned indices

'ind' (default) | 'sub'

Indexing style of returned indices, specified as 'ind' or 'sub'. If 'ind', the returned indices are in linear index form. If 'sub', the returned indices are in [*subcarrier*, *symbol*, *antenna*] subscript form.

Data Types: char

Index base — Index base of returned indices

'1based' (default) | '0based'

Index base of returned indices, specified as '1based' or '0based'. This parameter controls whether the returned indices are 1-based or 0-based.

Data Types: char

Data Types: char | cell

Output Arguments

ind — PUCCH format 1 resource element indices

integer column vector | 3-column integer matrix

PUCCH format 1 resource element indices, returned as an integer column vector or a 3-column integer matrix. By default, the indices are returned in 1-based linear indexing form, which can be used to directly index elements of a resource grid.

Example: 145,146,147....

Data Types: uint32

info — PUCCH format 1 DRS information

structure array

PUCCH format 1 DRS information, returned as a structure array. `info` can contain the following fields.

PRBSet — Indices occupied by PRB in each slot of subframe

numeric row vector

Indices occupied by PRB in each slot of subframe, returned as a numeric row vector. By default, the indices are 0-based.

Data Types: double

RBIIdx — PUCCH logical resource block index

numeric scalar

PUCCH logical resource block index, returned as a numeric scalar. (*m*)

Data Types: double

Data Types: struct

See Also

ltePUCCH1 | ltePUCCH1Decode | ltePUCCH1DRS | ltePUCCH1Indices | ltePUCCH2DRSIndices | ltePUCCH3DRSIndices

Introduced in R2014a

ltePUCCH1Indices

PUCCH format 1 resource element indices

Syntax

```
[ind,info] = ltePUCCH1Indices(ue,chs)
[ind,info] = ltePUCCH1Indices(ue,chs,opts)
```

Description

`[ind,info] = ltePUCCH1Indices(ue,chs)` returns a matrix of resource element indices given the UE-specific settings structure `ue` and channel transmission configuration `chs`. `ue` and `chs` must be structures. It returns a matrix of resource element (RE) indices and information structure array `info` for the Physical Uplink Control Channel (PUCCH) format 1. By default, the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix. These indices are ordered as the PUCCH format 1 modulation symbols should be mapped. Alternative indexing formats can also be generated. The indices for each antenna are in the columns of `ind`, with the number of columns determined by the number of PUCCH Resource Indices specified.

`[ind,info] = ltePUCCH1Indices(ue,chs,opts)` allows control of the format of the returned indices through a cell array of option strings, `opts`.

Examples

Create PUCCH Format 1 Indices

Create PUCCH format 1 resource element indices for 1.4 MHz bandwidth, PUCCH Resource Index 0.

Set the number of uplink RBs to 6 and the resource index to 0. Use default values for all other parameters.

```
ind = ltePUCCH1Indices(struct('NULRB',6),struct('ResourceIdx',0));
ind(1:4)
```

1
2
3
4

Input Arguments

ue — UE-specific settings

structure

ue is a structure having the following fields.

NULRB — Number of uplink resource blocks

0 (default) | nonnegative scalar integer

Number of uplink resource blocks, specified as nonnegative scalar integer.

Example: 4

Data Types: double

CyclicPrefixUL — Cyclic prefix length for uplink channels

'Normal' (default) | optional | 'Extended'

Cyclic prefix length for uplink channels, specified as 'Normal' or 'Extended'.

Data Types: char

Shortened — Shorten subframe flag

0 (default) | optional | 1

Shorten subframe flag, specified as a 0 or 1. This parameter is required for subframes with possible SRS transmission. If 1, the last symbol of the subframe is not used.

Data Types: double

Data Types: struct

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure. chs contains the following fields.

ResourceIdx — PUCCH resource indices

0 (default) | optional | 0...2047

PUCCH resource indices, specified as nonnegative vector. There is one index for each transmission antenna. These indices determine the cyclic shift and orthogonal cover used for transmission. (*n1_pucch*)

Example: 78

Data Types: double

ResourceSize — Size of resources allocated to PUCCH format 2

0 (default) | optional | 0...98

Size of resources allocated to PUCCH format 2, specified as nonnegative scalar integer. This parameter affects location of this transmission. (*N2RB*)

Data Types: double

DeltaShift — Delta shift

1 (default) | optional | 2 | 3

Delta shift, specified as 1, 2, or 3. (*delta_shift*)

Data Types: double

CyclicShifts — Number of cyclic shifts for format 1 resource blocks

0 (default) | optional | 0...7

Number of cyclic shifts for format 1 resource blocks, in RBs, specified as a nonnegative scalar integer. This parameter can be used in a mixture of format 1 and format 2 PUCCH. (*N1cs*)

Data Types: double

opts — Format options for control of the returned indices

string | cell array of strings

Format options for control of the returned indices, specified as a string or a cell array of strings. It may include the following option strings.

Indexing style — Controls the indexing style of the indices

'ind' (default) | 'sub'

Cell array option, specified as 'ind' or 'sub', returns the indices linear index form or [sub-carrier, symbol, antenna] subscript form.

Data Types: char

Index base — Controls the index base of the indices

'1based' (default) | '0based'

Cell array option, specified as 1based or 0based, returns the indices as 1-based or 0-based.

Data Types: char

Output Arguments

ind — Resource element indices

linear matrix

Resource element (RE) indices, returned as 1 linear matrix. By default the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix.

Example: 1,2,3,4...

Data Types: double

info — PUCCH format 1 information

structure array

PUCCH format 1 information, returned as a structure array. `info` is a structure array having the following fields.

PRBSet — Set of PRB indices

one- or two-column matrix

Set of PRB indices, returned as a one- or two-column matrix. This field contains the physical resource block indices (PRBs) corresponding to the resource allocations. If a column vector, the resource allocation is the same in both slots of the subframe; the two-column matrix can be used to specify differing PRBs for each slot in a subframe. The PRB indices are 0-based.

Example: [0,5]

Data Types: double

RBI_{dx} — PUCCH logical resource block index

nonnegative scalar integer

PUCCH logical resource block index. (*m*)

Example: 0

Data Types: double

See Also

ltePUCCH1 | ltePUCCH1Decode | ltePUCCH1DRS | ltePUCCH1DRSIndices |
ltePUCCH2Indices | ltePUCCH3Indices

Introduced in R2014a

ltePUCCH2

Physical uplink control channel format 2

Syntax

```
[sym,info] = ltePUCCH2(ue,chs,bits)
```

Description

[sym,info] = ltePUCCH2(ue,chs,bits) returns a complex matrix containing Physical Uplink Control Channel Format 2 symbols and an information structure array. Inputs include a structures for UE-specific settings and channel transmission configuration, and a vector of coded CQI/PMI or RI bits.

Examples

Generate PUCCH Format2 symbols

Generate PUCCH format 2 symbol values, setting NCellID to 1 and NSubframe to 0.

Initialize ue and chs configuration structures. Generate symbols.

```
ue.NCellID = 1;  
ue.NSubframe = 0;  
ue.RNTI = 1;  
ue.CyclicPrefixUL = 'Normal';  
ue.Hopping = 'Off';  
  
chs.ResourceIdx = 0;  
chs.ResourceSize = 0;  
chs.CyclicShifts = 0;  
  
sym = ltePUCCH2(ue,chs,ones(20,1));  
sym(1:5)
```

ans =

```

0.0000 + 1.0000i
-0.5000 - 0.8660i
-0.5000 + 0.8660i
-0.0000 - 1.0000i
0.5000 + 0.8660i

```

Input Arguments

ue — UE-specific settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
RNTI	Required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method

chs — Channel transmission configuration

structure

PUCCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 1185, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which

Parameter Field	Required or Optional	Values	Description
			determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission ($n2_pucch$)
ResourceSize	Optional	0 (default), 0 ... 98, Nonnegative scalar integer.	Size of resource allocated to PUCCH Format 2 ($N2RB$)
CyclicShifts	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH ($N1cs$)

bits — Coded CQI/PMI or RI bits

vector

bits is a vector of coded CQI/PMI or RI bits (coded UCI), formed by performing UCI encoding of a bit vector representing the CQI/PMI or RI information fields described in TS 36.212, Section 5.2.3.3 [2]. This coded bit vector must be 20 bits long. This vector is denoted “block of bits $b(0), \dots, b(19)$ ” in TS 36.211, Section 5.4.2 [1]. If M_{bit} is 21 or 22, corresponding to PUCCH format 2a or 2b, respectively, as described in TS 36.211, Table 5.4-1 [1], the further bits, $b(20), \dots, b(M_{bit}-1)$, should be provided as input to the `ltePUCCH2DRS` function for transmission. An M_{bit} value of 20 corresponds to PUCCH format 2, with no additional bits being transmitted on the PUCCH format 2 DRS.

Data Types: logical | double

Output Arguments

sym — PUCCH format 2 symbols

complex numeric column vector

PUCCH format 2 symbols, returned as complex numeric column vector. The symbols for each antenna are in the columns of **sym**. The number of PUCCH Resource Indices specified in the structure **chs** determines the number of columns in **sym**.

Example: $0.7071 + 0.7071i$

Data Types: double

Complex Number Support: Yes

info — PUCCH format 2 information

structure array

PUCCH format 2 information, returned as a structure array. `info` is a structure array having the following fields.

Alpha — Reference signal cyclic shift for each OFDM symbol

two-column row vector

Reference signal cyclic shift for each OFDM symbol, returned as two-column row vector.

Data Types: double

SeqGroup — PUCCH base sequence group number for each slot

two-column row vector

PUCCH base sequence group number, returned as a two-column row vector. (u)

Data Types: double

SeqIdx — PUCCH base sequence group number indices for each slot

two-column row vector

PUCCH base sequence group number indices for each slot, returned as a two-column row vector. (v)

Data Types: double

NResourceIdx — PUCCH resource indices for each slot

two-column row vector

PUCCH resource indices for each slot, returned as two-column row vector. (n)

Data Types: double

NCellCyclicShift — Cell-specific cyclic shift

numeric row vector

Cell-specific cyclic shift, returned as a numeric row vector. There is one element for each OFDM symbol. ($ncell_cs$)

Data Types: double

Symbols — Modulated data symbols

complex numeric row vector

Modulated data symbols, returned as a complex numeric row vector. There is one element for each OFDM symbol. ($d(0)$)

Data Types: double

Complex Number Support: Yes

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

[ltePUCCH1](#) | [ltePUCCH2Decode](#) | [ltePUCCH2DRS](#) | [ltePUCCH2DRSIndices](#) | [ltePUCCH2Indices](#) | [ltePUCCH3](#) | [lteUCIEncode](#)

Introduced in R2014a

ltePUCCH2DRS

PUCCH format 2 demodulation reference signal

Syntax

`[seq,info] = ltePUCCH2DRS(ue,chs,ack)`

Description

`[seq,info] = ltePUCCH2DRS(ue,chs,ack)` returns a complex matrix `seq` containing PUCCH Format 2 Demodulation Reference Signal (DRS) values and information structure array, `info`, for UE-specific settings, `ue`, channel transmission configuration, `chs`, and vector of hybrid ARQ (HARQ) indicator values, `ack`. The symbols for each antenna are in the columns of `seq`, with the number of columns determined by the number of PUCCH Resource Indices specified in the structure `chs`.

`ack` is a vector containing 0, 1, or 2 hybrid ARQ indicator values; the corresponding PUCCH transmission is of format 2, 2a, or 2b, respectively. The standard does not support format 2a or 2b transmission with extended cyclic prefix; in these cases, the function returns an empty matrix. This vector is denoted “block of bits $b(20), \dots, b(M_{\text{bit}} - 1)$ ” in TS 36.211, Section 5.4.2 [1]. An M_{bit} value of 20, 21, or 22 corresponds to PUCCH format 2, 2a, or 2b, respectively, as described in TS 36.211, Table 5.4-1 [1].

When configured for format 2a or 2b transmission with extended cyclic prefix, the `info` structure contains all fields, but each field is empty.

Examples

Generate PUCCH Format 2 DRS

Generate PUCCH Format 2 DRS symbols for UE specific settings.

Initialize input configuration structures (`ue` and `chs`). Here no HARQ bits will be sent by inputting an empty `ack` vector. Generate the PUCCH Format 2 DRS symbols.

```
ue.NCellID = 1;
```

```
ue.NSubframe = 0;  
ue.CyclicPrefixUL = 'Normal';  
ue.Hopping = 'Off';  
  
chs.ResourceIdx = 0;  
chs.ResourceSize = 0;  
chs.CyclicShifts = 0;  
  
sym = ltePUCCH2DRS(ue,chs,[]);
```

Generate PUCCH Format 2 DRS Using Virtual Cell ID

Demonstrate Uplink Release 11 coordinated multipoint (CoMP) operation. Intercell interference can be avoided by using a virtual cell identity for a potentially interfering UE in a neighboring cell.

Configuration for UE of interest, UE 1 in cell 1.

```
ue1.NCellID = 1;  
ue1.NSubframe = 0;  
ue1.CyclicPrefixUL = 'Normal';  
ue1.Hopping = 'Off';  
  
chs1.ResourceIdx = 0;  
chs1.ResourceSize = 0;  
chs1.CyclicShifts = 0;  
  
ack1 = 0;
```

Configuration for interferer, UE 2 in cell 2.

```
ue2.NCellID = 2;  
ue2.NSubframe = 0;  
ue2.CyclicPrefixUL = 'Normal';  
ue2.Hopping = 'Off';  
  
chs2.ResourceIdx = 1;  
chs2.ResourceSize = 0;  
chs2.CyclicShifts = 0;  
  
ack2 = 0;
```

Measure the interference between the DRS signals.

```
interferenceNoCoMP = abs(sum(ltePUCCH2DRS(ue1,chs1,ack1).*conj(ltePUCCH2DRS(ue2,chs2,ack2))));
```



```
interferenceNoCoMP =
```

```
5.4903
```

Reconfigure interferer for CoMP operation: use virtual cell identity equal to the cell identity for the UE of interest.

```
ue2.NPUCCHID = ue1.NCellID;
```

Measure the interference between the DRS signals when using CoMP.

```
interferenceUsingCoMP = abs(sum(ltePUCCH2DRS(ue1,chs1,ack1).*conj(ltePUCCH2DRS(ue2,chs1,ack2))));
```

```
interferenceUsingCoMP =
```

```
3.9627e-15
```

Comparing the correlations between the DRS signals for two UEs with and without CoMP, `interferenceUsingCoMP` and `interferenceNoCoMP` respectively. Using CoMP, the interference is reduced to effectively zero.

Input Arguments

ue — UE-specific settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Parameter Field	Required or Optional	Values	Description
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
NPUCCHID	Optional	Nonnegative scalar integer (0, ...,503)	PUCCH virtual cell identity. If this field is not present, NCellID is used as the identity.

Data Types: struct

chs — Channel transmission configuration
structure

PUCCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 1185, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n2_pucch</i>)
ResourceSize	Optional	0 (default), 0 ... 98, Nonnegative scalar integer.	Size of resource allocated to PUCCH Format 2 (<i>N2RB</i>)
CyclicShifts	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH (<i>N1cs</i>)

ack — Hybrid ARQ indicator values
0, 1, 2

Hybrid ARQ indicator values, specified as nonnegative integer vector with values of 0, 1, or 2. The corresponding PUCCH transmission is of format 2, 2a, or 2b, respectively. The standard does not support format 2a or 2b transmission with extended cyclic prefix; in these cases, the function returns an empty matrix. This vector is denoted “block of bits $b(20), \dots, b(M_{\text{bit}}-1)$ ” in TS 36.211, Section 5.4.2 of [1]. An M_{bit} value of 20, 21, or 22

corresponds to PUCCH format 2, 2a, or 2b, respectively, as described in TS 36.211, Table 5.4-1 of [1].

Example: 0,1,2

Data Types: double

Output Arguments

seq — PUCCH Format 1 DRS sequence

complex numeric matrix

PUCCH Format 1 DRS sequence, returned as a complex numeric matrix. The symbols for each antenna are in the columns of **seq**, with the number of columns determined by the number of PUCCH Resource Indices specified in the structure **chs**.

Data Types: double

Complex Number Support: Yes

info — PUCCH format 2 information

structure array

PUCCH format 2 information, returned as a structure array. **info** contains the following fields.

Alpha — Reference signal cyclic shift for OFDM symbol

two-column row vector

Reference signal cyclic shift for OFDM symbol, returned as two-column row vector, for each OFDM symbol.

Data Types: double

SeqGroup — PUCCH base sequence group number for each slot

two-column row vector

PUCCH base sequence group number for each slot, returned as two-column row vector. (*u*)

Data Types: double

SeqIdx — PUCCH base sequence group number indices for each slot

two-column row vector

PUCCH base sequence group number indices for each slot, returned as two-column row vector. (*v*)

Data Types: double

NResourceIdx — PUCCH resource indices

two-column row vector

PUCCH resource indices, returned as two-column row vector, for each slot. (*n*)

Data Types: double

NCellCyclicShift — Cell-specific cyclic shift

row vector

Cell-specific cyclic shift for each OFDM symbol, returned as row vector. (*ncell_cs*)

Data Types: double

Symbols — Modulated data symbols

row vector

Modulated data symbols, returned as a row vector for each OFDM symbol. (*d(0)*)

Data Types: double

OrthSeq — Orthogonal sequence of each slot

4-by-2 numeric matrix

Orthogonal sequence of each slot, returned as a 4-by-2 numeric matrix.

Data Types: double

Data Types: struct

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePUCCH1DRS | ltePUCCH2 | ltePUCCH2Decode | ltePUCCH2DRSDecode | ltePUCCH2DRSIndices | ltePUCCH2Indices | ltePUCCH3DRS

Introduced in R2014a

ltePUCCH2DRSDecode

PUCCH format 2 DRS decoding

Syntax

```
ack = ltePUCCH2DRSDecode(ue,chs,oack,sym)
```

Description

`ack = ltePUCCH2DRSDecode(ue,chs,oack,sym)` returns a vector of hybrid automatic repeat request (HARQ) indicator values, `ack`, obtained by performing PUCCH format 2 DRS decoding of the complex matrix, `sym`. The decoder uses a maximum likelihood (ML) approach, assuming that `sym` has already been equalized, to best restore the originally transmitted complex values. The symbols for each antenna are in the columns of `sym`. The number of columns in `sym` should match the number of PUCCH resource indices specified in the `chs` structure.

`oack` specifies the number of HARQ indicator values expected.

`ack` is a column vector containing `oack` HARQ indicator (HI) values.

Examples

Decode PUCCH Format 2A DRS

Decode a PUCCH format 2A DRS from a synchronized and equalized resource array.

Initialize input configuration structures demonstrating use of 'Name',Value pair assignment and direct field assignment.

```
ue = struct('NULRB',6,'NCellID',0,'NSubframe',0,'Hopping','Off');  
pucch2 = struct('ResourceIdx',0);
```

```
ue.CyclicPrefixUL = 'Normal';  
ue.NTxAnts = 1;
```

```
pucch2.ResourceSize = 0;
pucch2.CyclicShifts = 0;
```

For the transmitter, create the PUCCH format 2A DRS.

```
reGrid = lteULResourceGrid(ue);
drsIndices = ltePUCCH2DRSIndices(ue,pucch2);
txAck = [1;0];
reGrid(drsIndices) = ltePUCCH2DRS(ue,pucch2,txAck);
```

On the receiver side, decode the PUCCH format 2 DRS symbols and view rxAck to confirm it matches txAck

```
drsSymbols = reGrid(drsIndices);
rxAck = ltePUCCH2DRSDecode(ue,pucch2,length(txAck),drsSymbols)
```

```
rxAck =
```

```
    1
    0
```

Input Arguments

ue — UE-specific settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method

Parameter Field	Required or Optional	Values	Description
NPUCCHID	Optional	Nonnegative scalar integer (0, ...,503)	PUCCH virtual cell identity. If this field is not present, NCellID is used as the identity.

chs — Channel transmission configuration structure

PUCCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 1185, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n2_pucch</i>)
ResourceSize	Optional	0 (default), 0 ... 98, Nonnegative scalar integer.	Size of resource allocated to PUCCH Format 2 (<i>N2RB</i>)
CyclicShifts	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH (<i>N1cs</i>)

oack — Number of uncoded HARQ-ACK bits

1 | 2

oack specifies the number of HARQ indicator values expected, specified as nonnegative integer vector. The number of HARQ indicator values is 1 for PUCCH format 2A and 2 for PUCCH format 2B.

Data Types: double

sym — Symbols of each antenna

complex numeric matrix

Symbols for each antenna, specified as complex numeric matrix. The number of columns in `sym` should match the number of PUCCH resource indices specified in the `chs` structure.

Example: $0.25881 + 0.9659i$

Data Types: `double`

Complex Number Support: Yes

Output Arguments

ack — Hybrid ARQ indicator values

logical column vector

Hybrid ARQ indicator values, returned as a logical column vector. This output is obtained by performing PUCCH format 1 decoding of the complex matrix, `sym`.

Data Types: `logical`

See Also

`ltePUCCH1DRS` | `ltePUCCH2` | `ltePUCCH2Decode` | `ltePUCCH2DRS` |
`ltePUCCH2DRSIndices` | `ltePUCCH2Indices` | `ltePUCCH2PRBS` | `ltePUCCH3DRS`

Introduced in R2014a

ltePUCCH2DRSIndices

PUCCH format 2 DRS resource element indices

Syntax

```
[ind,info] = ltePUCCH2DRSIndices(ue,chs)
[ind,info] = ltePUCCH2DRSIndices(ue,chs,opts)
```

Description

`[ind,info] = ltePUCCH2DRSIndices(ue,chs)` returns a matrix of resource element indices given the UE-specific settings structure `ue`, and channel transmission configuration `chs`. It returns a matrix of resource element (RE) indices and information structure array `info` for the Demodulation Reference Signal (DRS) associated with PUCCH Format 2 transmission. By default the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix. These indices are ordered as the PUCCH format 2 DRS modulation symbols should be mapped. Alternative indexing formats can also be generated. The indices for each antenna are in the columns of `ind`, with the number of columns determined by the number of PUCCH Resource Indices specified.

`[ind,info] = ltePUCCH2DRSIndices(ue,chs,opts)` allows control of the format of the returned indices through a cell array of option strings, `opts`.

Examples

Generate PUCCH Format 2 DRS Indices

Generate PUCCH format 2 demodulation reference signal (DRS) indices for 1.4 MHz bandwidth, PUCCH resource index 0.

```
ind = ltePUCCH2DRSIndices(struct('NULRB',6),struct('ResourceIdx',0));
ind(1:4)
```

74
75
76

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. **ue** contains the following fields.

NULRB — Number of uplink resource blocks

nonnegative scalar integer

Number of uplink resource blocks, specified as a nonnegative scalar integer.

Example: 4

Data Types: double

CyclicPrefixUL — Cyclic prefix length for uplink channels

'Normal' (default) | optional | 'Extended'

Cyclic prefix length for uplink channels, specified as 'Normal' or 'Extended'.
Optional.

Data Types: char

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure. **chs** contains the following fields.

ResourceIdx — PUCCH resource indices

0 (default) | optional | 0...1185

PUCCH resource indices, specified as nonnegative vector with one element for each transmission antenna. These indices determine the cyclic shift and orthogonal cover used for transmission. (*n_{2_pucch}*). This input argument is optional.

Example: 78

Data Types: double

opts — Format options for control of the returned indices

string | cell array of strings

Format options for control of the returned indices, specified as a string or a cell array of strings. It can contain the following option strings.

Indexing style — Indexing style of the returned indices

'ind' (default) | 'sub'

Indexing style of the returned indices, specified as 'ind' or 'sub'. If 'ind', the returned indices are in linear index form. If 'sub', the returned indices are in [subcarrier, symbol, antenna] subscript form.

Data Types: char

Index base — Index base of the returned indices

'1based' (default) | '0based'

Index base of the returned indices, specified as '1based' or '0based'. If '1based', the lowest index is 1. If '0based', the lowest index is 0.

Data Types: char

Output Arguments

ind — Resource element indices

linear matrix

Resource element (RE) indices, returned as 1 linear matrix. By default the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix.

Example: 145,146,147....

Data Types: double

info — PUCCH format 2 DRS information

structure array

PUCCH format 2 DRS information, returned as a structure array. `info` is a structure array having these fields:

PRBSet — PRBs occupied by indices in each slot of the subframe

numeric row vector

PRBs occupied by indices in each slot of the subframe, returned as a numeric row vector.

Data Types: double

RBIIdx — PUCCH logical resource block index

numeric scalar

PUCCH logical resource block index, returned as a numeric scalar. (*m*)

Data Types: double

Data Types: struct

See Also

ltePUCCH1DRSIndices | ltePUCCH2 | ltePUCCH2Decode | ltePUCCH2DRS
| ltePUCCH2DRSDecode | ltePUCCH2Indices | ltePUCCH2PRBS |
ltePUCCH3DRSIndices

Introduced in R2014a

ltePUCCH2Decode

Physical uplink control channel format 2 decoding

Syntax

```
out = ltePUCCH2Decode(ue,chs,sym)
```

Description

`out = ltePUCCH2Decode(ue,chs,sym)` performs decoding of the PUCCH format 2 given UE-specific settings `ue` and channel transmission configuration `chs`. `out` is a soft bit vector consisting of 20 bits, formed by decoding complex symbol matrix `sym`, performing demodulation with the PUCCH format 2 reference sequence, QPSK demodulation, and descrambling. The symbols for each antenna are in the columns of `sym`, and the number of columns should match the number of PUCCH Resource Indices specified in the structure, `chs`.

Examples

Decode PUCCH Format 2 Signal

Decode a PUCCH format 2 signal from an equalized resource array, `grid`.

First, create a UE configuration structure, `ue`, and a PUCCH configuration structure, `pucch2`.

```
ue = struct('NULRB',6,'NCellID',0,'NSubframe',0,'RNTI',1);  
pucch2 = struct('ResourceIdx',0);
```

For the transmitter, create a PUCCH format 2 resource grid.

```
rgrid = lteULResourceGrid(ue);  
pucch2Indices = ltePUCCH2Indices(ue,pucch2);  
tx = [1;0;0;0;0;1];  
encoded = lteUCIEncode(tx);  
rgrid(pucch2Indices) = ltePUCCH2(ue,pucch2,encoded);
```

On the receiver side, decode the PUCCH format 2 signal contained in equalized resource array, `grid`. Also decode the UCI bits.

```
rx = ltePUCCH2Decode(ue,pucch2,rgrid(pucch2Indices));
decoded = lteUCIDecode(rx,length(tx))
```

```
1
0
0
0
0
1
```

Input Arguments

ue — UE-specific settings

structure

`ue` is a structure having the following fields.

NCellID — Cell identity number

0 (default)

Physical layer cell identity number, specified as a nonnegative scalar integer.

Example: 4

Data Types: `double`

NSubframe — Subframe number

0 (default)

Position reference signal subframe number, specified as a nonnegative scalar integer.

Example: 8

Data Types: `double`

RNTI — Radio network temporary identifier (16-bit)

scalar integer

Radio network temporary identifier (16-bit), specified as a scalar integer.

Data Types: `double`

CyclicPrefixUL — Cyclic prefix length for uplink channels

'Normal' (default) | optional | 'Extended'

Cyclic prefix length for uplink channels, specified as 'Normal' or 'Extended'.
Optional.

Data Types: char

Hopping — Uplink frequency hopping

'Off' (default) | optional | 'Group'

Uplink frequency hopping, specified as 'Off' or 'Group'. Optional.

Data Types: char

Data Types: struct

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure. chs contains the following fields.

ResourceIdx — PUCCH resource indices

0 (default) | optional | 0...1185

PUCCH resource indices, specified as a nonnegative vector with one element for each transmission antenna. These indices determine the cyclic shift and orthogonal cover used for transmission. (*n2_pucch*)

Example: 78

Data Types: double

ResourceSize — Size of resources allocated to PUCCH format 2

0 (default) | optional | 0...98

Size of resources allocated to PUCCH format 2, specified as nonnegative scalar integer. This parameter affects location of this transmission. (*N2RB*)

Data Types: double

CyclicShifts — Number of cyclic shifts for format 1 resource blocks

0 (default) | optional | 0...7

Number of cyclic shifts for format 1 resource blocks, in RBs, specified as a nonnegative scalar integer. This parameter can be used in a mixture of format 1 and format 2 PUCCH. (*N_{1cs}*)

Example: 7

Data Types: double

sym — Symbols of each antenna

complex numeric matrix

Symbols for each antenna, specified as complex numeric matrix. The number of columns should match the number of PUCCH resource indices specified in the channel transmission configuration structure, *chs*.

Example: 0.25881 + 0.9659i

Data Types: double

Complex Number Support: Yes

Output Arguments

out — PUCCH format 2 decoded soft bit output

logical column vector

PUCCH format 2 decoded soft bit output, returned as a logical column vector. This output contains the result of decoding *sym*.

Data Types: logical

See Also

ltePUCCH1Decode | ltePUCCH2 | ltePUCCH2DRS | ltePUCCH2DRSDecode
| ltePUCCH2DRSIndices | ltePUCCH2Indices | ltePUCCH2PRBS |
ltePUCCH3Decode | lteUCIDecode

Introduced in R2014a

ltePUCCH2Indices

PUCCH format 2 resource element indices

Syntax

```
[ind,info] = ltePUCCH2Indices(ue,chs)
[ind,info] = ltePUCCH2Indices(ue,chs,opts)
```

Description

`[ind,info] = ltePUCCH2Indices(ue,chs)` returns a matrix of resource element indices given the UE-specific settings structure `ue` and channel transmission configuration `chs`. It returns a matrix of resource element (RE) indices and information structure array `info` for the Physical Uplink Control Channel (PUCCH) Format 2. By default the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix. These indices are ordered as the PUCCH format 2 modulation symbols should be mapped. Alternative indexing formats can also be generated. The indices for each antenna are in the columns of `ind`, with the number of columns determined by the number of PUCCH Resource Indices specified.

`[ind,info] = ltePUCCH2Indices(ue,chs,opts)` allows control of the format of the returned indices through a cell array `opts` of option strings.

Examples

Generate PUCCH Format 2 Indices

Create indices for 1.4 MHz bandwidth, PUCCH resource index 0, using default values for all other parameters.

```
ind = ltePUCCH2Indices(struct('NULRB',6),struct('ResourceIdx',0));
ind(1:4)
```

```
1
2
```

3
4

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. `ue` can contain the following fields.

NULRB — Number of uplink resource blocks

nonnegative scalar integer

Number of uplink resource blocks, specified as a nonnegative scalar integer.

Example: 4,5,...

Data Types: double

CyclicPrefixUL — Cyclic prefix length for uplink channels

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length for uplink channels, specified as 'Normal' or 'Extended'.
Optional.

Data Types: char

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure. `chs` contains the following fields.

ResourceIdx — PUCCH resource indices

nonnegative integer vector | 0...2047

PUCCH resource indices, specified as nonnegative integer vector between 0 and 2047. There is one index for each transmission antenna. These indices determine the cyclic shift and orthogonal cover used for transmission.

Example: 78

Data Types: double

opts — Options to control the format of the returned indices

cell array of strings | string

Options to control the format of the returned indices, specified as a string or a cell array of strings. The following option strings are accepted.

Indexing style — Form of returned indices

'ind' (default) | 'sub'

Form of returned indices, specified as 'ind' or 'sub'. 'ind' denotes linear index form. 'sub' denotes [*subcarrier*, *symbol*, *antenna*] subscript row style.

Data Types: char

Index base — Index base of returned indices

'1based' (default) | '0based'

Index base of returned indices, specified as '1based' or '0based'. This option controls whether indices start at 1 or 0.

Data Types: char

Output Arguments

ind — Resource element indices

linear matrix

Resource element (RE) indices, returned as 1 linear matrix. By default the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix.

Example: 1,2,3,4...

Data Types: double

info — PUCCH format 2 information

structure array

PUCCH format 2 information, returned as a structure array. `info` contains the following fields.

PRBSet — Set of PRBs occupied by the indices in each slot of the subframe

numeric row vector

Set of PRBs occupied by the indices in each slot of the subframe, returned as a numeric row vector.

Data Types: `double`

RBIIdx — PUCCH logical resource block index

numeric scalar

PUCCH logical resource block index, returned as a numeric scalar. (*m*)

Data Types: `double`

See Also

`ltePUCCH1Indices` | `ltePUCCH2` | `ltePUCCH2Decode` | `ltePUCCH2DRS`
| `ltePUCCH2DRSDecode` | `ltePUCCH2DRSIndices` | `ltePUCCH2PRBS` |
`ltePUCCH3Indices`

Introduced in R2014a

ltePUCCH2PRBS

PUCCH format 2 pseudorandom scrambling sequence

Syntax

```
seq = ltePUCCH2PRBS(ue,n)
seq = ltePUCCH2PRBS(ue,n,mapping)
```

Description

`seq = ltePUCCH2PRBS(ue,n)` returns a column vector containing the first `n` outputs of the Physical Uplink Control Channel (PUCCH) Format 2 scrambling sequence when initialized according to UE-specific settings, `ue`.

`seq = ltePUCCH2PRBS(ue,n,mapping)` allows control over the format of the returned sequence, `seq`, through the `mapping` string. Valid formats are 'binary', which is the default, and 'signed'. The 'binary' format maps true to 1 and false to 0. The 'signed' format maps true to -1 and false to 1.

Examples

Generate PUCCH Format 2 Pseudorandom Scrambling Sequence

This example shows the generation of unsigned and signed PUCCH format 2 pseudorandom scrambling sequences.

Generate a PUCCH format 2 pseudorandom scrambling sequence.

```
seq = ltePUCCH2PRBS(struct('NCellID',1,'NSubframe', ...
    0,'RNTI',1),5)
```

```
seq =
```

```
    1
    1
    0
    0
```

1

Generate a signed PUCCH format 2 pseudorandom scrambling sequence.

```
seq = ltePUCCH2PRBS(struct('NCellID',1,'NSubframe', ...
    0,'RNTI',1),5,'signed')
```

```
seq =
```

```
-1
-1
 1
 1
-1
```

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. **ue** contains the following fields.

NCellID — Physical layer cell identity number

nonnegative scalar integer

Physical layer cell identity number, specified as a nonnegative scalar integer.

Example: 1

Data Types: double

NSubframe — Subframe number

nonnegative scalar integer

Subframe number, specified as a nonnegative scalar integer.

Example: 0

Data Types: double

RNTI — Radio network temporary identifier

scalar integer

Radio network temporary identifier (16-bit), specified as a scalar integer.

Example: 1

Data Types: double

n — Length of PUCCH format 2 scrambling sequence

nonnegative scalar integer

Length of PUCCH format 2 scrambling sequence, specified as a nonnegative scalar integer.

Example: 10

Data Types: double

mapping — Control format of the returned sequence

'binary' (default) | 'signed'

Control format of the returned sequence, specified as a string. Valid formats are 'binary', which is the default, and 'signed'. The 'binary' format maps true to 1 and false to 0. The 'signed' format maps true to -1 and false to 1.

Data Types: char

Output Arguments

seq — PUCCH format 2 pseudorandom scrambling sequence

logical column vector | numeric column vector

PUCCH format 2 pseudorandom scrambling sequence, returned as a logical column vector or a numeric column vector. The length of this sequence is given by the input argument, n. If you set mapping to 'signed', the output data type is double. Otherwise, the output data type is logical.

Data Types: logical | double

See Also

ltePUCCH2 | ltePUCCH2Decode | ltePUCCH2DRS | ltePUCCH2DRSDecode
| ltePUCCH2DRSIndices | ltePUCCH2Indices | ltePUCCH3Indices |
ltePUCCH3PRBS

Introduced in R2014a

ltePUCCH3

Physical uplink control channel format 3

Syntax

```
[sym,info] = ltePUCCH3(ue,chs,bits)
```

Description

[*sym*,*info*] = ltePUCCH3(*ue*,*chs*,*bits*) returns a complex matrix *sym* containing Physical Uplink Control Channel (PUCCH) format 3 symbols and information structure array, *info*, for UE-specific settings, *ue*, channel transmission configuration, *chs* and vector of coded hybrid ARQ (HARQ) values, *bits*. The symbols for each antenna are in the columns of *sym*, with the number of columns determined by the number of PUCCH Resource Indices specified in the *chs* structure.

For shortened transmissions, when *ue.Shortened* = 1, the second column of *info.OrthSeq* has a zero in the last row because the spreading factor for the second slot is 4 instead of 5.

Examples

Generate PUCCH Format 3 Symbols

Generate PUCCH format 3 modulated symbols.

Initialize configuration structures (*ue* and *chs*). Generate and view PUCCH Format 3 symbols.

```
ue.NCellID = 0;  
ue.NSubframe = 0;  
ue.RNTI = 1;  
ue.CyclicPrefixUL = 'Normal';  
ue.Shortened = 0;  
  
chs.ResourceIdx = 0;
```

```
sym = ltePUCCH3(ue,chs,ones(48,1));
sym(1:5)
```

```
ans =
```

```
1.6330 - 1.2247i
-0.7071 + 0.7071i
-0.5577 + 0.1494i
0.4082 - 0.0000i
-0.5577 - 0.9659i
```

Input Arguments

ue — UE-specific settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
RNTI	Required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

UE-specific settings, specified as a structure. **ue** can contain the following fields.

Data Types: `struct`

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure having the following fields.

ResourceIdx — PUCCH Resource Indices

0 (default) | column vector of integers with values from 0 to 549

PUCCH Resource Indices, specified as a column vector of integers with values from 0 to 549. There is one entry for each transmission antenna. These determine the cyclic shift and orthogonal cover used for transmission (n_3_pucch). This input argument is optional.

Data Types: `double`

Data Types: `struct`

bits — Coded HARQ-ACK bits

nonnegative integer column vector of length 48

Coded HARQ-ACK bits, specified as a nonnegative integer column vector of length 48. TS 36.211 [1], Table 5.4-1 specifies the vector length for PUCCH format 3 is $M_{bit} = 48$. `bits` is expected to be the “block of bits $b(0)..b(M_{bit}-1)$ ” specified in TS 36.211 [1], Section 5.4.2A. `bits` is also expected to be generated by performing uplink control information (UCI) channel coding as described TS 36.212 [2], Section 5.2.3.1. For PUCCH format 3, UCI includes encoding of concatenated HARQ-ACK bits and any appended periodic CSI bits plus Scheduling Request (SR) bit when present.

Data Types: `double`

Output Arguments

sym — PUCCH format 3 symbols

complex-valued matrix

PUCCH format 3 symbols, returned as complex-valued matrix. The symbols for each antenna are in the columns of `sym`, with the number of columns determined by the number of PUCCH Resource Indices specified in the structure `chs`.

Data Types: `double`

Complex Number Support: Yes

info — PUCCH format 3 information

structure

PUCCH format 3 information, returned as a structure having the following fields.

NCellCyclicShift — Cell-specific cyclic shift

row vector of integers

Cell-specific cyclic shift for each OFDM symbol, returned as a row vector of integers, (*n_{cell_cs}*).

Data Types: double

OrthSeqIdx — Orthogonal sequence index

row vector of integers

Orthogonal sequence index, returned as a row vector of integers. The vector contains one entry for each slot, (*n_{oc}*).

Data Types: double

Symbols — Modulated data symbols

complex-valued row vector

Modulated data symbols, returned as a complex-valued row vector, (*d*).

Data Types: double

OrthSeq — Orthogonal sequence for each slot

complex-valued matrix

Orthogonal sequence, returned as a complex-valued matrix. Each column contains the orthogonal sequence for each slot, (*w_{n_oc}*).

Data Types: double

NSymbSlot — Number of OFDM symbols in each slot

row vector of integers

The number of OFDM symbols in each slot, (*[N_SF, 0_PUCCH N_SF, 1_PUCCH]*), returned as a row vector.

Data Types: double

Data Types: struct

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`ltePUCCH3Decode` | `ltePUCCH3DRS` | `ltePUCCH3DRSIndices` | `ltePUCCH3Indices`
| `ltePUCCH3PRBS` | `lteUCI3Encode`

Introduced in R2014a

ltePUCCH3Decode

Physical uplink control channel format 3 decoding

Syntax

```
out = ltePUCCH3Decode(ue,chs,sym)
```

Description

`out = ltePUCCH3Decode(ue,chs,sym)` decodes the PUCCH format 3 given UE-specific settings, `ue`, and channel transmission configuration, `chs`. `out` is a soft bit vector of coded UCI consisting of 48 bits, formed by decoding the complex symbol matrix, `sym`. The symbol decoding steps are SC-FDMA deprecoding, demodulation with the PUCCH Format 3 reference sequence, QPSK demodulation, and descrambling. The symbols for each antenna are in the columns of `sym`, and the number of columns should match the number of PUCCH Resource Indices specified in the structure `chs`.

Examples

Decode PUCCH Format 3 Signal

Decode a PUCCH format 3 signal contained in an equalized resource array for a given UE configuration structure 'ue' and PUCCH configuration structure 'pucch3'.

```
ue.NULRB = 6;  
ue.NCellID = 0;  
ue.RNTI = 1;  
ue.CyclicPrefixUL = 'Normal';  
ue.NTxAnts = 1;  
ue.Shortened = 0;  
ue.NSubframe = 0;  
  
pucch3.ResourceIdx = 0;
```

To model the transmitter, create an uplink resource grid and populate it with PUCCH format 3 symbols.

```

reGrid = lteULResourceGrid(ue);
pucch3Indices = ltePUCCH3Indices(ue,pucch3);
tx = [1; 0; 0; 1; 1; 1];
encoded = lteUCI3Encode(tx);
reGrid(pucch3Indices) = ltePUCCH3(ue,pucch3,encoded);

```

To model the receiver, decode the PUCCH format 3 symbols contained in an equalized resource array. Decode and display the UCI. Verify received decoded bits match tx bits.

```

eqGrid = reGrid;
rx = ltePUCCH3Decode(ue,pucch3,eqGrid(pucch3Indices));
decoded = lteUCI3Decode(rx,length(tx))

```

```

decoded =

```

```

    1
    0
    0
    1
    1
    1

```

Input Arguments

ue — UE-specific settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
RNTI	Required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)
NSubframe	Required	Nonnegative scalar integer	Subframe number

Parameter Field	Required or Optional	Values	Description
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

Data Types: `struct`

chs — Channel transmission configuration
structure

PUCCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 549, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n3_pucch</i>)

Data Types: `struct`

sym — PUCCH format 3 symbols
complex-valued matrix

PUCCH format 3 symbols, specified as a complex-valued matrix. The symbols for each antenna are in the columns of `sym`, and the number of columns should match the number of PUCCH resource indices specified in the structure `chs`.

Data Types: `double`
Complex Number Support: Yes

Output Arguments

out — Soft bit vector

48-by-1 real-valued column vector

Soft bit vector consisting of 48 bits, returned as a 48-by-1 real-valued column vector. The number of PUCCH Resource Indices specified in the structure `chs` determines the number of columns in `out`.

Data Types: `double`

See Also

`ltePUCCH3` | `ltePUCCH3DRS` | `ltePUCCH3DRSIndices` | `ltePUCCH3Indices` | `ltePUCCH3PRBS` | `lteUCI3Decode`

Introduced in R2014a

ltePUCCH3DRS

PUCCH format 3 demodulation reference signal

Syntax

```
[seq,info] = ltePUCCH3DRS(ue,chs)
```

Description

[seq,info] = ltePUCCH3DRS(ue,chs) returns a complex matrix seq containing PUCCH format 3 demodulation reference signal (DRS) values and information structure array, info, for UE-specific settings, ue, and channel transmission configuration, chs.

Examples

Generate PUCCH Format 3 DRS

Generate the PUCCH Format 3 Demodulation Reference Signal (DRS) values for UE-specific settings.

Initialize UE specific (ue) and channel (chs) configuration structures. Generate PUSCH DRS values.

```
ue.NCellID = 1;
ue.NSubframe = 0;
ue.CyclicPrefixUL = 'Normal';
ue.Hopping = 'Off';
ue.Shortened = 0;

chs.ResourceIdx = 0;
chs.CyclicShifts = 0;

pucch3RefSig = ltePUCCH3DRS(ue,chs);
pucch3RefSig(1:4)
```

```
ans =
```

```
0.7071 + 0.7071i
0.2588 + 0.9659i
-0.9659 - 0.2588i
-0.7071 - 0.7071i
```

Generate PUCCH Format 3 DRS Using Virtual Cell ID

Demonstrate Uplink Release 11 coordinated multipoint (CoMP) operation. Intercell interference can be avoided by using a virtual cell identity for a potentially interfering UE in a neighboring cell.

Configuration for UE of interest, UE 1 in cell 1.

```
ue1.NCellID = 1;
ue1.NSubframe = 0;
ue1.CyclicPrefixUL = 'Normal';
ue1.Hopping = 'Off';
ue1.Shortened = 0;
```

```
chs1.ResourceIdx = 0;
```

Configuration for interferer, UE 2 in cell 2.

```
ue2.NCellID = 2;
ue2.NSubframe = 0;
ue2.CyclicPrefixUL = 'Normal';
ue2.Hopping = 'Off';
ue2.Shortened = 0;
```

```
chs2.ResourceIdx = 1;
```

Measure the interference between the DRS signals.

```
interferenceNoCoMP = abs(sum(1tePUCCH3DRS(ue1,chs1).*conj(1tePUCCH3DRS(ue2,chs2))))
```

```
interferenceNoCoMP =
```

```
6.3246
```

Reconfigure interferer for CoMP operation: use virtual cell identity equal to the cell identity for the UE of interest.

```
ue2.NPUCCHID = ue1.NCellID;
```

Measure the interference between the DRS signals when using CoMP.

```
interferenceUsingCoMP = abs(sum(ltePUCCH3DRS(ue1,chs1).*conj(ltePUCCH3DRS(ue2,chs2))))
```

```
interferenceUsingCoMP =
```

```
8.5919e-15
```

Comparing the correlations between the DRS signals for two UEs with and without CoMP, `interferenceUsingCoMP` and `interferenceNoCoMP` respectively. Using CoMP, the interference is reduced to effectively zero.

Input Arguments

ue — UE-specific settings

structure

UE-specific cell-wide settings, specified as a structure with the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer 0 (default)	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

Parameter Field	Required or Optional	Values	Description
NPUCCHID	Optional	Nonnegative scalar integer (0, ...,503)	PUCCH virtual cell identity. If this field is not present, NCellID is used as the identity.

Data Types: `struct`

chs — Channel transmission configuration

structure

PUCCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 549, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n3_pucch</i>)

Data Types: `struct`

Output Arguments

seq — PUCCH format 3 DRS values

complex-valued matrix

PUCCH format 3 DRS values, returned as a complex-valued matrix. The symbols for each antenna are in the columns of `seq`. The number of columns in `seq` is determined by the number of PUCCH Resource Indices specified in the structure `chs`.

Data Types: `double`

info — Information structure array

structure array

Information structure array, returned as a structure array having the following fields.

Alpha — Reference signal cyclic shift for each OFDM symbol

real-valued row vector

Reference signal cyclic shift for each OFDM symbol, returned as a real-valued row vector. (*alpha*)

Data Types: double

SeqGroup — Base sequence group number for each slot

integer row vector

Base sequence group number for each slot, returned as an integer row vector. (*u*)

Data Types: double

SeqIdx — Base sequence number for each slot

integer row vector

Base sequence number for each slot, returned as an integer row vector. (*v*)

Data Types: double

NResourceIdx — Resource indices for each slot

integer row vector

Resource indices for each slot, returned as an integer row vector. (*n*)

Data Types: double

NCellCyclicShift — Cell-specific cyclic shift for each OFDM symbol

integer row vector

Cell-specific cyclic shift for each OFDM symbol, returned as an integer row vector. (*n_{cell_cs}*)

Data Types: double

OrthSeqIdx — Orthogonal sequence index for each slot

integer row vector

Orthogonal sequence index for each slot, returned as an integer row vector. (*n_{oc}*)

Data Types: double

Symbols — Modulated data symbols for each OFDM symbol

complex-valued row vector

Modulated data symbols for each OFDM symbol, returned as a complex-valued row vector. (*z*)

Data Types: double

Complex Number Support: Yes

OrthSeq — Orthogonal sequence

complex-valued matrix

Orthogonal sequence, returned as a complex-valued matrix. Each column contains the orthogonal sequence for each slot. (*w bar*)

Data Types: double

NSymbSlot — Number of OFDM symbols in each slot

integer row vector

Number of OFDM symbols in each slot, returned as an integer row vector. (*[N_SF,0_PUCCH, N_SF,1_PUCCH]*)

Data Types: double

Data Types: struct

See Also

[ltePUCCH1DRS](#) | [ltePUCCH2DRS](#) | [ltePUCCH3](#) | [ltePUCCH3Decode](#) | [ltePUCCH3DRSIndices](#) | [ltePUCCH3Indices](#) | [ltePUCCH3PRBS](#)

Introduced in R2014a

ltePUCCH3DRSIndices

PUCCH format 3 DRS resource element indices

Syntax

```
[ind,info] = ltePUCCH3DRSIndices(ue,chs)
[ind,info] = ltePUCCH3DRSIndices(ue,chs,opts)
```

Description

`[ind,info] = ltePUCCH3DRSIndices(ue,chs)` returns a matrix of resource element indices, `ind`, given the UE-specific settings structure, `ue`, and channel transmission configuration, `chs`. It returns a matrix of resource element indices, `ind`, and information structure array, `info`, for the Demodulation Reference Signal (DRS) associated with PUCCH Format 3 transmission. By default, the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix. These indices are ordered as the PUCCH format 3 DRS modulation symbols should be mapped. Alternative indexing formats can also be generated. The indices for each antenna are in the columns of `ind`, with the number of columns determined by the number of PUCCH resource indices specified.

`[ind,info] = ltePUCCH3DRSIndices(ue,chs,opts)` allows control of the format of the returned indices through a cell array, `opts`, of option strings.

Examples

Generate PUCCH Format 3 DRS Indices

Generate indices for the demodulation reference signal (DRS) associated with a PUCCH format 3 transmission of 1.4 MHz bandwidth, using PUCCH Resource Index 0.

```
ind = ltePUCCH3DRSIndices(struct('NULRB',6),struct('ResourceIdx',0));
ind(1:4)
```

74
75
76

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. `ue` can contain the following fields.

NULRB — Number of uplink resource blocks

scalar integer

Number of uplink resource blocks, specified as a scalar integer.

Data Types: `double`

CyclicPrefixUL — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length for uplink, specified as either 'Normal' or 'Extended'. Optional.

Data Types: `char`

Data Types: `struct`

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure having the following fields.

ResourceIdx — PUCCH Resource Indices

column vector of integers with values ranging from 0 to 549

PUCCH Resource Indices, specified as a column vector of integers with values from 0...549. There is one index for each transmission antenna. The indices determine the physical resource blocks used for transmission. (*n3_pucch*). This input argument is optional.

Data Types: `double`

Data Types: `struct`

opts — Format control for returned element resource indices

'ind', '1based' (default) | 'sub' | 'Obased'

Format control for returned element resource indices, specified as a string or a cell array of strings. The option strings can contain values from the *Indexing Style* and *Index base* categories.

Category	Options	Description
Indexing style	'ind' (default)	The returned indices are in linear index form.
	'sub'	The returned indices are in [subcarrier, symbol, port] subscript row form.
Index base	'1based' (default)	Indices returned are 1-based.
	'Obased'	Indices returned are 0-based.

Data Types: char | cell

Output Arguments

ind — Resource element indices

matrix of integer values

Resource element indices, returned as a matrix of integer values. The indices for each antenna form the columns of `ind`, with the number of columns determined by the number of PUCCH Resource Indices specified.

Data Types: uint32

info — Information associated with PUCCH format 3 transmission

scalar structure | structure array

Information associated with PUCCH format 3 transmission, returned as a scalar structure or a structure array. It contains the following fields.

PRBSet — PRBs occupied by indices

row vector of integers

PRBs occupied by the indices in each slot of the subframe (0-based), specified as a row vector of integers.

Data Types: `double`

RBI`dx` — PUCCH logical resource block index

scalar integer

PUCCH logical resource block index (m), specified as a scalar integer.

Data Types: `double`

Data Types: `struct`

See Also

`ltePUCCH1DRSIndices` | `ltePUCCH2DRSIndices` | `ltePUCCH3` | `ltePUCCH3Decode`
| `ltePUCCH3DRS` | `ltePUCCH3Indices` | `ltePUCCH3PRBS`

Introduced in R2014a

ltePUCCH3Indices

PUCCH format 3 resource element indices

Syntax

```
[ind,info] = ltePUCCH3Indices(ue,chs)
[ind,info] = ltePUCCH3Indices(ue,chs,opts)
```

Description

`[ind,info] = ltePUCCH3Indices(ue,chs)` returns a column vector of resource element indices given the UE-specific settings structure, `ue`, and channel transmission configuration, `chs`. It returns a matrix of resource element (RE) indices and information structure array, `info`, for the Physical Uplink Control Channel (PUCCH) format 3. By default, the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix. These indices are ordered as the PUCCH format 3 modulation symbols, `sym`, should be mapped. Alternative indexing formats can also be generated. The indices for each antenna are in the columns of `sym`, with the number of columns determined by the number of PUCCH resource indices specified.

`[ind,info] = ltePUCCH3Indices(ue,chs,opts)` allows control of the format of the returned indices through a cell array, `opts`, of option strings.

Examples

Generate PUCCH Format 3 RE Indices

Generate the indices of resource elements for PUCCH format 3, using 1.4MHz bandwidth and PUCCH Resource Index 0.

```
ind = ltePUCCH3Indices(struct('NULRB',6),struct('ResourceIdx',0));
ind(1:4)
```

```
1
2
```

3
4

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. `ue` can contain the following fields.

NULRB — Number of uplink resource blocks

integer

Number of uplink resource blocks, specified as a integer.

Data Types: `double`

CyclicPrefixUL — Cyclic prefix length for uplink

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as either 'Normal' or 'Extended'. Optional.

Data Types: `char`

Shortened — Shortened subframe flag

0 (default) | Optional | 1

Shortened subframe flag, specified as 0 or 1. Optional. When the value is 1, the last symbol of the subframe is not used. This value is required for subframes with possible SRS transmission.

Data Types: `double`

Data Types: `struct`

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure having the following fields.

ResourceIdx — PUCCH resource indices

column vector of integers with values ranging from 0 to 549

PUCCH resource indices, specified as a column vector of integers with values from 0...549. There is one index for each transmission antenna. The indices determine the Physical Resource Blocks used for transmission (*n3_pucch*). This input argument is optional.

Data Types: double

Data Types: struct

opts — Format control for returned element resource indices

string | cell array of strings

Format control for returned element resource indices, specified as a string or a cell array of strings. The option strings can contain values from the *Indexing Style* and *Index base* categories.

Category	Options	Description
Indexing style	'ind' (default)	The returned indices are in linear index form
	'sub'	The returned indices are in [subcarrier, symbol, port] subscript row form
Index base	'1based' (default)	Indices returned are 1-based
	'0based'	Indices returned are 0-based

Data Types: char | cell

Output Arguments

ind — Resource element indices

column vector of integer values

Resource element indices, returned as a column vector of integer values.

Data Types: int32

info — Information associated with PUCCH format 3 transmission

scalar structure | structure array

Information associated with PUCCH format 3 transmission, returned as a scalar structure or a structure array. It contains the following fields.

PRBSet — PRBs occupied by indices in each slot of the subframe

integer row vector

PRBs occupied by the indices in each slot of the subframe (0-based), specified as an integer row vector.

Data Types: double

RBIIdx — PUCCH logical resource block index

scalar integer

PUCCH logical resource block index, specified as a scalar integer. (*m*)

Data Types: double

NSymbSlot — Number of OFDM symbols in each slot

integer row vector

Number of OFDM symbols in each slot, specified as an integer row vector.
(*N_SF,0_PUCCH N_SF,1_PUCCH*)

Data Types: double

Data Types: struct

See Also

ltePUCCH1Indices | ltePUCCH2Indices | ltePUCCH3 | ltePUCCH3Decode |
ltePUCCH3DRS | ltePUCCH3DRSIndices | ltePUCCH3PRBS

Introduced in R2014a

ltePUCCH3PRBS

PUCCH format 3 pseudorandom scrambling sequence

Syntax

```
seq = ltePUCCH3PRBS(ue,n)
seq = ltePUCCH3PRBS(ue,n,mapping)
```

Description

`seq = ltePUCCH3PRBS(ue,n)` returns a column vector containing the first `n` outputs of the Physical Uplink Control Channel (PUCCH) format 3 scrambling sequence when initialized according to UE-specific settings, `ue`, which must be a structure.

`seq = ltePUCCH3PRBS(ue,n,mapping)` allows control over the format of the returned sequence, `seq`, through the string `mapping`. Valid formats are `'binary'`, the default, and `'signed'`. The `'binary'` format maps true to 1 and false to 0. The `'signed'` format maps true to -1 and false to 1.

Examples

Generate PUCCH Format 3 Pseudorandom Scrambling Sequence

This example shows the generation of unsigned and signed PUCCH format 3 pseudorandom scrambling sequences.

Initialize ue specific parameters.

```
ue = struct('NCellID',1,'NSubframe',0,'RNTI',1);
```

Generate a PUCCH format 3 pseudorandom scrambling sequence.

```
pucch3Seq = ltePUCCH3PRBS(ue,5)
```

```
pucch3Seq =
```

```
1  
1  
0  
0  
1
```

Generate a signed PUCCH format 3 pseudorandom scrambling sequence.

```
pucch3Seq = ltePUCCH3PRBS(ue,5,'signed')
```

```
pucch3Seq =
```

```
-1  
-1  
1  
1  
-1
```

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure having the following fields.

NCellID — Physical layer cell identity

integer (0...503)

Physical layer cell identity, specified as an integer between 0 and 503.

Data Types: double

NSubframe — Subframe number

integer

Subframe number, specified as an integer.

Data Types: double

RNTI — Radio Network Temporary Identifier

integer

Radio Network Temporary Identifier (16-bit), specified as an integer.

Data Types: `double`

Data Types: `struct`

n — Length of PUCCH Format 3 scrambling sequence

integer

Length of PUCCH Format 3 scrambling sequence, specified as an integer. This parameter determines the length of the output argument vector, `seq`.

Example: 3

Data Types: `double`

mapping — Format control of the returned sequence

'binary' (default) | 'signed'

Format control of the returned sequence, specified as either the string 'binary' or the string 'signed'. The format 'binary' maps `true` to 1 and `false` to 0. The format 'signed' maps `true` to -1 and `false` to 1.

Example: 'signed'

Data Types: `char`

Output Arguments

seq — PUCCH format 3 scrambling sequence

logical column vector | numeric column vector

PUCCH format 3 scrambling sequence, returned as a logical column vector or a numeric column vector of size `n-by-1`. The number of elements returned is determined by the argument `n`. If you set `mapping` to 'signed', the output data type is `double`. Otherwise, the output data type is `logical`.

Data Types: `logical` | `double`

See Also

`ltePRBS` | `ltePUCCH2PRBS` | `ltePUCCH3` | `ltePUCCH3Decode` | `ltePUCCH3DRS` | `ltePUCCH3DRSIndices` | `ltePUCCH3Indices`

Introduced in R2014a

ltePUSCH

Physical uplink shared channel

Syntax

```
sym=ltePUSCH(ue,chs,cws)
```

Description

`sym=ltePUSCH(ue,chs,cws)` returns a vector containing the Physical Uplink Shared Channel (PUSCH) complex symbols for UE-specific settings, `ue`, PUSCH channel-specific configuration, `chs`, and the codeword or codewords contained in `cws`. The size of the matrix `sym` is N -by- P . Where N is the number of modulation symbols for one antenna port and P is the number of transmission antennas.

Examples

Create PUSCH Complex Symbols

Generate PUSCH symbols for TS36.104 Uplink FRC A3-3 with 3MHz bandwidth.

Initialize UE specific (`ue`) and channel (`pusch`) configuration structures, and fixed reference channel (`frc`).

```
ue.NCellID = 1;
ue.NSubframe = 0;
ue.RNTI = 1;

pusch.Modulation = 'QPSK';
pusch.PRBSset = [0:14].';
pusch.RV = 0;

frc = lteRMCUL('A3-3');
```

Generate transport block (`trBlk`), UL-SCH codewords (`cw`), and PUSCH symbols (`puschSym`).

```
trBlk = randi([0,1],frc.PUSCH.TrBlkSizes(1),1);
cw = lteULSCH(ue,pusch,trBlk );
puschSym = ltePUSCH(ue,pusch,cw);
```

```
Warning: Using default value for parameter field CyclicPrefixUL (Normal)
Warning: Using default value for parameter field Shortened (0)
Warning: Using default value for parameter field NLayers (1)
Warning: Using default value for parameter field NTxAnts (1)
Warning: Using default value for parameter field NLayers (1)
```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the command "lteWarning('off','DefaultValue')".

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative integer	Physical layer cell identity
NSubframe	Required	Integer	Subframe number
RNTI	Required	Integer	Radio network temporary identifier (RNTI) value (16 bits)
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas

Data Types: struct

chs — PUSCH channel-specific configuration

structure

PUSCH channel-specific configuration, specified as a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
Modulation	Required	'QPSK', '16QAM', '64QAM'	Modulation format, specified as a character string for one codeword or a cell array of one or more strings for one or two codewords
PRBSet	Required	1- or 2-column integer matrix	Physical Resource Block (PRB) indices, specified as a column vector or two-column matrix, corresponding to the slot wise resource allocations for this PUSCH. If a column vector is provided for PRBSet , the resource allocation is the same in both slots of the subframe. The two-column matrix can be used to specify differing PRBs for each slot in a subframe. The PRB indices are zero-based.
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers
The following field is required only when <code>ue.NTxAnts</code> is set to 2 or 4. Acceptable values for PMI depend upon <code>ue.NTxAnts</code> and <code>NLayers</code> .			
PMI	Optional	Numeric scalar (0...23) 0 (default)	Scalar precoder matrix indication (PMI) to be used during precoding

Data Types: struct

cws — Codeword bit values

vector | cell array

Codeword bit values to be modulated, specified as a vector of bit values for one codeword, or a cell array containing one or two vectors of bit values corresponding to the one or two codewords.

Data Types: double

Output Arguments

sym — PUSCH symbols

complex-valued numeric matrix

PUSCH symbols, returned as a complex-valued numeric matrix of size N -by- P . N is the number of modulation symbols for one antenna port. P is the number of transmission antennas.

Data Types: `double`

Complex Number Support: Yes

References

- [1] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`ltePUSCHDecode` | `ltePUSCHDRS` | `ltePUSCHDRSIndices` | `ltePUSCHIndices` | `ltePUSCHPrecode` | `lteULPMIInfo` | `lteULPrecode` | `lteULSCH` | `lteULScramble`

Introduced in R2013b

ltePUSCHDecode

Physical uplink shared channel decoding

Syntax

```
[cws,symbols] = ltePUSCHDecode(ue,chs,sym)
[cws,symbols] = ltePUSCHDecode(ue,chs,sym,hest,noiseest)
[cws,symbols] = ltePUSCHDecode(ue,chs,sym,hest,noiseest,alg)
```

Description

[cws,symbols] = ltePUSCHDecode(ue,chs,sym) returns a soft bit vector, or cell array of soft bit vectors, *cws*, containing the received codeword estimates and received constellation of complex symbol vector, *symbols*. The output results from decoding of the Physical Uplink Shared Channel (PUSCH) complex symbols, *sym*, for UE-specific settings, *ue*, and channel transmission configuration structure or structure array, *chs*. It performs the inverse of the Physical Uplink Shared Channel (PUSCH) processing. See TS 36.211, Section 5.3 [1] or `ltePUSCH` for details.

Multiple codewords can be parameterized by two different forms of the *chs* structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, or 1-by-1, structure. Any scalar field values apply to both codewords and a scalar *NLayers* is the total number. For details, see “UL-SCH Parameterization” .

If UCI control information, such as RI or HARQ-ACK, is present in the received complex PUSCH symbols, then this function performs the descrambling of the placeholder bits by establishing the correct locations with the help of the UCI-related parameters present in *chs*.

sym is an *M*-by-*P* matrix or *M*-by-*NU* matrix. Where *M* is the number of symbols per antenna or layer, *P* is the number of transmission antennas, *NTxAnts*, and *NU* is the number of transmission layers, *NLayers*.

- For a single-antenna transmission (*NTxAnts* = 1), both *P* and *NU* are 1: *sym* must be *M*-by-1 and contain the single-antenna PUSCH symbols for decoding.

- When P is greater than 1 and `sym` is M -by- P : Decoding is performed using pseudoinverse-based deprecoding for spatial multiplexing.
- When P is greater than 1 and `sym` is M -by- NU : `sym` is assumed to be deprecoded, so decoding is performed without deprecoding. For example, by having performed channel estimation against the transmit layer DRS sequences and equalizing the received symbols using that channel estimate to yield `sym`.

Note: This function does apply deprecoding. when the need for deprecoding is ambiguous, such as when $P > 1$ and $P = NU$.

`[cws,symbols] = ltePUSCHDecode(ue,chs,sym,hest,noiseest)` uses additional inputs (`hest,noiseest`). The channel estimate, `hest`, and the noise estimate `noiseest`. In this case, `sym` is an M -by-`NRxAnts` matrix, where M is the number of symbols per antenna and `NRxAnts` is the number of receive antennas. When `ue.NTxAnts` is greater than 1, the reception is performed using an MMSE equalizer, equalizing between transmitted and received layers. When `ue.NTxAnts` is 1, the reception is performed using MMSE equalization on the received antennas.

`[cws,symbols] = ltePUSCHDecode(ue,chs,sym,hest,noiseest,alg)` provides control over weighting the output soft bits with Channel State Information (CSI) calculated during the equalization stage using algorithmic configuration structure, `alg`.

Examples

Decode PUSCH Symbols from FRC

Decode the PUSCH modulation symbols contained in the output of a Fixed Reference Channel (FRC).

```
frc = lteRMCUL('A3-2');
trData = randi([0,1],frc.PUSCH.TrBlkSizes(1),1);
[waveform,reGrid] = lteRMCULTool(frc,trData);
puschIndices = ltePUSCHIndices(frc,frc.PUSCH);
rxCw = ltePUSCHDecode(frc,frc.PUSCH,reGrid(puschIndices));
```

```
Warning: Using default value for parameter field ORI (0)
Warning: Using default value for parameter field OACK (0)
Warning: Using default value for parameter field QdRI (0)
Warning: Using default value for parameter field QdACK (0)
```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the command "lteWarning('off','DefaultValue')."

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
NCe11ID	Required	Integer	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
RNTI	Required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length.
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

Data Types: struct

chs — Channel transmission configuration

scalar structure | structure array

Channel transmission configuration, specified as a scalar structure or a structure array. chs is the PUSCH channel-specific structure having these fields. If UCI is present in the

transmitted PUSCH to be decoded, the optional fields, ORI, OACK, QdRI, and QdACK, must be configured in the chs structure.

Parameter Field	Required or Optional	Values	Description
Modulation	Required	'QPSK', '16QAM', '64QAM'	Modulation format
PRBSet	Required	1- or 2-column integer matrix	Physical Resource Block (PRB) indices, specified as a column vector or two-column matrix, corresponding to the slot wise resource allocations for this PUSCH. If a column vector is provided for PRBSet, the resource allocation is the same in both slots of the subframe. The two-column matrix can be used to specify differing PRBs for each slot in a subframe. The PRB indices are zero-based.
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers
The following field is required only when ue.NTxAnts is set to 2 or 4. Acceptable values for PMI depend upon ue.NTxAnts and NLayers.			
PMI	Optional	Numeric scalar (0...23) 0 (default)	Scalar precoder matrix indication (PMI) to be used during precoding
ORI	Optional	Integer 0 (default)	Number of uncoded RI bits
OACK	Optional	nonnegative scalar integer, 0 (default)	Number of uncoded HARQ-ACK bits.
QdRI	Optional	Integer 0 (default)	Number of coded RI symbols in UL-SCH, specified as an integer. Optional. (<i>Q'RI</i>)

Parameter Field	Required or Optional	Values	Description
QdACK	Optional	nonnegative scalar integer 0 (default)	Number of coded HARQ-ACK symbols in UL-SCH (Q'_{ACK}), specified as an integer. Optional.

Data Types: struct

sym — PUSCH symbols

complex-valued numeric matrix

PUSCH symbols, specified as a complex-valued numeric matrix of size M -by- P or M -by- NU . Where M is the number of symbols per antenna or layer, P is the number of transmission antennas, `NTxAnts`, and NU is the number of transmission layers, `NLayers`.

Data Types: double

Complex Number Support: Yes

hest — Channel estimate

3-D numeric array

Channel estimate, specified as a 3-D numeric array of size M -by-`NRxAnts`-by-`NTxAnts`. Where M is the number of symbols per antenna, `NRxAnts` is the number of receive antennas, and `NTxAnts` is the number of transmit antennas ports, given by `ue.NTxAnts`.

Data Types: double

noiseest — Noise estimate

numeric scalar

Noise estimate, specified as a numeric scalar. This argument is an estimate of the noise power spectral density per RE on received subframe. The `lteULChannelEstimate` function provides such an estimate.

Data Types: double

a1g — Algorithmic configuration

structure

Algorithmic configuration, specified as a structure having the following field.

Parameter Field	Required or Optional	Values	Description
CSI	Optional	'On' (default), 'Off'	Flag to control whether output bits get weighted with channel state information (CSI) calculated during the equalization stage. If 'On', soft bits are weighted by CSI.

Data Types: `struct`

Output Arguments

cws — Codewords

column vector | cell array of column vectors

Codewords, returned as a column vector or a cell array of column vectors. The soft bit vectors contain the received codeword estimates.

Data Types: `double`

symbols — Received constellation of symbols

complex-valued column vector

Received constellation of symbols, received as a complex-valued column vector.

Data Types: `double`

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`ltePUSCH` | `ltePUSCHDecode` | `ltePUSCHDRS` | `ltePUSCHDRSIndices` | `ltePUSCHIndices` | `lteULDecode` | `lteULDescramble` | `lteULPMIInfo` | `lteULSCHDecode`

Introduced in R2013b

ltePUSCHDeprecode

PUSCH MIMO deprecoding onto transmission layers

Syntax

```
out = ltePUSCHDeprecode(in,nu,codebook)
out = ltePUSCHDeprecode(chs,in)
```

Description

`out = ltePUSCHDeprecode(in,nu,codebook)` deprecodes the precoded symbol matrix, `in`, onto `nu` layers. It performs deprecoding using matrix pseudo inversion, to undo the processing described in TS 36.211, Section 5.3.3A [1]. This function returns an M -by-`nu` matrix, `out`, containing `nu` layers with M symbols in each layer. The decoder transposes the operation defined in TS 36.211, Section 5.3.3A, specifically the symbols for layers and antennas lie in columns rather than rows. The input argument `in` is an N -by- P matrix, where P is the number of transmission antennas and N is the number of symbols per antenna. When P is 2 or 4, deprecoding for spatial multiplexing is applied with the scalar codebook index, `codebook`. TS 36.211, Section 5.3.3A [1] specifies the codebook matrix corresponding to a particular index.

`out = ltePUSCHDeprecode(chs,in)` deprecodes the precoded symbol matrix, `in`, according to channel transmission configuration, `chs`.

Examples

Deprecode PUSCH Symbols

By precoding with an identity matrix, we can gain access to the precoding matrices themselves. The precoded matrix is first generated with codebook index 0 for 4 layers and 4 antennas. The precoded matrix is then deprecoded, resulting in an identity matrix.

```
nLayers = 4;
nAntennas = 4;
codeBookIdx = 0;
precodingMatrix = ltePUSCHPrecode(eye(nLayers),nAntennas,codeBookIdx);
```

```
out = ltePUSCHDecode(precodingMatrix,nLayers,codeBookIdx)
```

```
out =
```

```
1.0000 + 0.0000i    0.0000 + 0.0000i    0.0000 + 0.0000i    0.0000 + 0.0000i
0.0000 + 0.0000i    1.0000 + 0.0000i    0.0000 + 0.0000i    0.0000 + 0.0000i
0.0000 + 0.0000i    0.0000 + 0.0000i    1.0000 + 0.0000i    0.0000 + 0.0000i
0.0000 + 0.0000i    0.0000 + 0.0000i    0.0000 + 0.0000i    1.0000 + 0.0000i
```

Input Arguments

in — Precoded symbol input

complex-valued numeric matrix

Precoded symbol input, specified as an N -by- P complex-valued numeric matrix. Where P is the number of transmission antennas and N is the number of symbols per antenna.

Example: `[0.5000 + 0.0000i 0.5000 + 0.0000i; 0.5000 + 0.0000i -0.5000 + 0.0000i]`

Data Types: double

Complex Number Support: Yes

nu — Number of layers

1 | 2 | 3 | 4

Number of layers, specified as 1, 2, 3, or 4.

Example: 2

Data Types: double

codebook — Codebook index

numeric scalar

Codebook index, specified as a numeric scalar. When the number of transmit antennas, P , is 1, this input argument is ignored.

Data Types: double

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure having the following fields.

NLayers — Number of transmission layers

1 (default) | optional | 2 | 3 | 4

Number of transmission layers, specified as an integer from 1 through 4. Optional.

Data Types: double

PMI — Precoder matrix indication

0 (default) | optional | numeric scalar (0...23)

Precoder matrix indication, specified as a numeric scalar between 0 (default) and 23. Only required if the number of transmission antennas, P , is 2 or 4. Acceptable values for PMI depend upon P and the number of transmission layers, **NLayers**. The scalar PMI is used during decoding.

Data Types: double

Data Types: struct

Output Arguments

out — Decoded output

numeric matrix

Decoded output, returned as an M -by- nu matrix, containing nu layers with M symbols in each layer.

Data Types: double

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePUSCH | ltePUSCHDecode | ltePUSCHDRS | ltePUSCHDRSIndices | ltePUSCHIndices | ltePUSCHPrecode | lteULDecode | lteULPMIInfo

Introduced in R2013b

ltePUSCHDRS

PUSCH demodulation reference signal

Syntax

```
[seq,info,layers] = ltePUSCHDRS(ue,chs)
```

Description

[seq,info,layers] = ltePUSCHDRS(ue,chs) returns complex matrices, **seq**, and **layers** containing PUSCH Demodulation Reference Signal (DRS) values, and information structure, **info**, for UE-specific settings, **ue**, and channel transmission configuration, **chs**. **seq** is of size M -by- P . Where M is the number of DRS symbols per antenna and P is the number of transmission antennas. When P is greater than 1, the DRS is precoded using spatial multiplexing. **layers** is a matrix of size M -by- NU , where M is the number of DRS symbols per layer and NU is the number of transmission layers.

For short base reference sequences, such as those used with PUSCH allocations of 1 or 2 PRBs, Zadoff-Chu sequences are not used. In this case, **RootSeq** and **NZC** are set to -1 . If **seq** output is empty, such as when the input **PRBSet** is empty, the **info** structure contains all fields, but each field is either empty for vector fields or -1 for scalar fields.

Examples

Generate PUSCH DRS

Generated the PUSCH Demodulation Reference Signal (DRS) values for UE-specific settings.

Initialize UE specific (**ue**) and channel (**chs**) configuration structures. Generate PUSCH DRS values.

```
ue.NCellID = 1;
ue.NSubframe = 0;
ue.CyclicPrefixUL = 'Normal';
```

```
ue.Hopping = 'Off';
ue.SeqGroup = 0;
ue.CyclicShift = 0;
ue.NTxAnts = 1;

chs.PRBSets = (0:5).';
chs.NLayers = 1;
chs.OrthCover = 'Off';
chs.DynCyclicShift = 0;

puschSeq = ltePUSCHDRS(ue,chs);
puschSeq(1:10)

ans =

    1.0000 + 0.0000i
   -0.0810 + 0.9967i
   -0.9610 + 0.2766i
   -0.8839 - 0.4677i
   -0.6886 - 0.7251i
   -0.7692 - 0.6390i
   -0.9912 - 0.1324i
   -0.6447 + 0.7645i
    0.6779 + 0.7352i
    0.4872 - 0.8733i
```

Generate PUSCH DRS Using Alternate IDs

Demonstrate Uplink Release 11 coordinated multipoint (CoMP) operation. Intercell interference can be avoided by using a virtual cell identity and a distinct DMRS cyclic shift hopping identity for a potentially interfering UE in a neighboring cell.

Configuration for UE of interest, UE 1 in cell 1

```
ue1.NCellID = 1;
ue1.NSubframe = 0;
ue1.CyclicPrefixUL = 'Normal';
ue1.NTxAnts = 1;
ue1.Hopping = 'Off';
ue1.SeqGroup = 0;
ue1.CyclicShift = 0;

chs1.PRBSets = (0:5).';
```

```

chs1.NLayers = 1;
chs1.DynCyclicShift = 0;
chs1.OrthCover = 'Off';

```

Configuration for interferer, UE 2 in cell 2

```

ue2.NCellID = 2;
ue2.NSubframe = 0;
ue2.CyclicPrefixUL = 'Normal';
ue2.NTxAnts = 1;
ue2.Hopping = 'Off';
ue2.SeqGroup = 0;
ue2.CyclicShift = 0;

```

```

chs2.PRBSset = (0:5).';
chs2.NLayers = 1;
chs2.DynCyclicShift = 0;
chs2.OrthCover = 'Off';

```

Measure the interference between the DRS signals:

```
interferenceNoCoMP = abs(sum(ltePUSCHDRS(ue1,chs1).*conj(ltePUSCHDRS(ue2,chs2))))
```

```
interferenceNoCoMP =
```

```
21.3188
```

Reconfigure for CoMP operation: use virtual cell identity equal to the cell identity for the UE of interest, and configure the two UEs with different cyclic shift hopping patterns via the DMRS identity parameter:

```

ue1.NDMRSID = 1;
ue2.NPUSCHID = ue1.NCellID;
ue2.NDMRSID = 2;

```

Measure the interference between the DRS signals when using CoMP:

```
interferenceUsingCoMP = abs(sum(ltePUSCHDRS(ue1,chs1).*conj(ltePUSCHDRS(ue2,chs2))))
```

```
interferenceUsingCoMP =
```

```
1.0313e-13
```

Compare the correlations between the DRS signals for two UEs with and without CoMP, `interferenceUsingCoMP` and `interferenceNoCoMP` respectively. With CoMP, the interference is reduced to effectively zero.

Input Arguments

ue — UE-specific settings
structure

UE-specific configuration, specified as a structure. `ue` can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	6, 15, 25, 50, 75, 100	Number of uplink (UL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length for uplink, specified as a string.
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Hopping	Optional	'Off' (default), 'Group', or 'Sequence'	Frequency hopping method
SeqGroup	Optional	0 (default), 0 ... 29, Nonnegative scalar integer.	PUSCH sequence group assignment (<i>delta_{SS}</i>) Only used if <code>NDMRSID</code> or <code>NPUSCHID</code> is absent
CyclicShi	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for PUSCH DRS (yields <i>n₁_DMRS</i>)

Parameter Field	Required or Optional	Values	Description
NPUSCHID	Optional	0 (default), Nonnegative scalar integer from 0 to 509.	PUSCH virtual cell identity. If this field is not present, NCellID is used for group hopping sequence-shift pattern initialization. See footnote 1
NDMRSID	Optional	0 (default), Nonnegative scalar integer from 0 to 509.	DMRS identity for cyclic shift hopping (Ncsh_DMRSID). If this field is not present, NCellID is used for cyclic shift hopping initialization. See footnote 1
<p>1 The pseudo-random sequence generator for cyclic shift hopping is initialized according to NDMRSID, if present, otherwise it is initialized according to the cell identity NCellID and the sequence group assignment SeqGroup. Similarly, the sequence-shift pattern for group hopping is initialized according to NPUSCHID, if present, otherwise it is initialized according to NCellID and SeqGroup.</p>			

Data Types: struct

chs — Channel transmission configuration

structure

PUSCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
PRBSet	Required	1- or 2-column integer matrix	Physical resource block set, specified as a 1-column or 2-column matrix. This parameter field contains the zero-based physical resource block (PRB) indices corresponding to the slot-wise resource allocations for this PUSCH. If PRBSet is a column vector, the resource allocation is the same in both slots of the subframe. To specify

Parameter Field	Required or Optional	Values	Description
			differing PRBs for each slot in a subframe, use a 2-column matrix. The PRB indices are zero based.
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers
DynCyclicSh	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Cyclic shift for DMRS (yields $n2_DMRS$)
OrthoCover	Optional	'Off' (default), 'On'	Applies ('On'), or does not apply ('Off'), orthogonal cover sequence, w (<i>Activate-DMRS-with OCC</i>)
The following field is required only when <code>ue.NTxAnts</code> is set to 2 or 4.			
PMI	Optional	nonnegative scalar integer (0...23) 0 (default)	Scalar precoder matrix indication (PMI) to be used during precoding of the DRS reference symbols

Data Types: struct

Output Arguments

seq — PUSCH DRS sequence

M -by- P complex-valued matrix

PUSCH DRS sequence values, returned as an M -by- P complex-valued matrix. Where M is the number of DRS symbols per antenna and P is the number of transmission antennas.

Data Types: double

Complex Number Support: Yes

info — Information about PUSCH DRS

structure array

Information about PUSCH DRS, returned as a structure array, with one element per transmission layer, having the following fields.

Alpha — Reference signal cyclic shift

row vector

Reference signal cyclic shift (*alpha*) for each slot, specified as a row vector.

Data Types: double

SeqGroup — Base sequence group number

row vector

Base sequence group number (*u*) for each slot, specified as a row vector.

Data Types: double

SeqIdx — Base sequence number

row vector

Base sequence number (*v*) for each slot, specified as a row vector.

Data Types: double

RootSeq — Root Zadoff-Chu sequence index

row vector

Root Zadoff-Chu sequence index (*q*) for each slot, specified as a row vector.

Data Types: double

NZC — Zadoff-Chu sequence length

integer

Zadoff-Chu sequence length (*NRS_ZC*), specified as an integer.

Data Types: double

N1DMRS — Component of reference signal cyclic shift

integer

Component of the reference signal cyclic shift signaled from higher layers, specified as an integer. (*n1_DMRS*)

Data Types: double

N2DMRS — Component of the reference signal cyclic shift

integer

Component of the reference signal cyclic shift signalled from the most recent DCI format 0 message, specified as an integer. (*n2_DMRS*)

Data Types: `double`

NPRS — Cell-specific component of reference signal cyclic shift

row vector

Cell-specific component of the reference signal cyclic shift (*n_PRS*) for each slot, specified as a row vector.

Data Types: `double`

OrthSeq — Orthogonal cover value

row vector

Vector containing the orthogonal cover value (*w*) for each slot, specified as a row vector.

Data Types: `double`

Data Types: `struct`

layers — PUSCH DRS sequence by layers

M-by-*NU* complex-valued matrix

PUSCH DRS sequence by layers, returned as an *M*-by-*NU* complex matrix. Where *M* is the number of DRS symbols per layer and *NU* is the number of transmission layers. If *P* is greater than 1, the DRS is precoded using spatial multiplexing.

Data Types: `double`

Complex Number Support: Yes

See Also

`ltePUSCH` | `ltePUSCHDecode` | `ltePUSCHDecode` | `ltePUSCHDRSIndices` | `ltePUSCHIndices` | `ltePUSCHPrecode` | `lteULPMIInfo`

Introduced in R2013b

ltePUSCHDRSIndices

PUSCH DRS resource element indices

Syntax

```
ind = ltePUSCHDRSIndices(ue,chs)
ind = ltePUSCHDRSIndices(ue,chs,opts)
```

Description

`ind = ltePUSCHDRSIndices(ue,chs)` returns a matrix of resource element (RE) indices for the Demodulation Reference Signal (DRS) associated with PUSCH transmission, `ind`, given the UE-specific settings structure, `ue`, and channel transmission configuration, `chs`. By default, the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix. These indices are ordered as the PUSCH DRS modulation symbols should be mapped. Alternative indexing formats can also be generated. `ind` is of size M -by- P , where M is the number of DRS indices per antenna and P is the number of transmission antennas.

If indices for a number of layers, NU , are required, rather than indices for `NTxAnts`, the first NU columns of the output can be used. The first NU columns of `ind` are the appropriate indices for the `layers` output from the `ltePUSCHDRS` function.

`ind = ltePUSCHDRSIndices(ue,chs,opts)` allows control of the format of the returned indices through a cell array, `opts`, of option strings.

Examples

Generate PUSCH DRS RE Indices

Generate the 0-based PUSCH DRS resource element indices in linear form for the uplink reference measurement channel (RMC), A3-3.

```
ue = lteRMCUL('A3-3');
puschInd = ltePUSCHDRSIndices(ue,ue.PUSCH,{'0based','ind'});
```

puschInd(1:4)

540

541

542

543

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure having the following fields.

NULRB — Number of uplink resource blocks

integer

Number of uplink resource blocks, specified as a integer.

Data Types: double

CyclicPrefixUL — Cyclic prefix length for uplink

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as either 'Normal' or 'Extended'. Optional.

Data Types: char

NTxAnts — Number of transmission antennas

1 (default) | Optional | 2 | 4

Number of transmission antennas specified as either 1, 2, or 4. Optional.

Data Types: double

Data Types: struct

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure having the following fields.

PRBSet — Physical Resource Block indices

column vector | 2-column matrix

Physical Resource Block indices (PRBs), specified as a column vector or 2-column matrix. The PRBs correspond to the resource allocations for this PUSCH.

Data Types: `double`

Data Types: `struct`

opts — Format control for returned element resource indices

'ind', '1based' (default) | 'sub' | '0based'

Format control for returned element resource indices, specified as a string or a cell array of strings. The option strings can contain values from the *Indexing Style* and *Index base* categories.

Category	Options	Description
Indexing style	'ind' (default)	The returned indices are in linear index form
	'sub'	The returned indices are in [subcarrier, symbol, port] subscript row form
Index base	'1based' (default)	Indices returned are 1-based
	'0based'	Indices returned are 0-based

Data Types: `char` | `cell`

Output Arguments

ind — PUSCH DRS resource element indices

M -by- P numeric matrix

PUSCH DRS resource element indices, returned as an M -by- P numeric matrix, where M is the number of DRS indices per antenna and P is the number of transmission antennas. The resource element (RE) indices for the Demodulation Reference Signal (DRS) are associated with PUSCH transmission. By default, the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix. These indices are ordered as the PUSCH DRS modulation symbols should be mapped. Alternative indexing formats can also be generated.

Data Types: `uint32`

See Also

[ltePUSCH](#) | [ltePUSCHDecode](#) | [ltePUSCHDeprecode](#) | [ltePUSCHDRS](#) |
[ltePUSCHIndices](#) | [ltePUSCHPrecode](#)

Introduced in R2014a

ltePUSCHIndices

PUSCH resource element indices

Syntax

```
[ind,info] = ltePUSCHIndices(ue,chs)
[ind,info] = ltePUSCHIndices(ue,chs,opts)
```

Description

`[ind,info] = ltePUSCHIndices(ue,chs)` returns a column vector of resource element indices given the UE-specific settings structure, `ue`, and channel transmission configuration, `chs`. It returns a column vector of Physical Uplink Shared Channel (PUSCH) resource element (RE) indices and a structure, `info`, containing information related to the PUSCH indices. By default, the indices are returned in 1-based linear indexing form that can directly index elements of a resource matrix. These indices are ordered as the PUSCH modulation symbols should be mapped. Alternative indexing formats can also be generated.

Support of PUSCH frequency hopping is provided by the function `lteDCIResourceAllocation`, which creates `PRBSet` from a DCI Format 0 message.

`[ind,info] = ltePUSCHIndices(ue,chs,opts)` allows control of the format of the returned indices through a cell array, `opts`, of option strings.

Examples

Generate PUSCH RE Indices

Generate 0-based PUSCH resource element (RE) indices in linear form.

```
frc = lteRMCUL('A1-1');
puschIndices = ltePUSCHIndices(frc,frc.PUSCH,{'0based','ind'});
puschIndices(1:4)

    0
    1
    2
```

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length.
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

Data Types: struct

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure. It contains the following fields.

Parameter Field	Required or Optional	Values	Description
PRBSet	Required	1- or 2-column integer matrix	PRB indices, specified as a column vector or a 2-column matrix, containing the Physical Resource Block indices (PRBs) corresponding to the resource allocations for this PUSCH.

Parameter Field	Required or Optional	Values	Description
Modulation	Optional	('QPSK', '16QAM', '64QAM') String or cell array of strings.	Modulation format, specified as a character string for one codeword or a cell array of one or more strings for one or two codewords.
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers

Data Types: struct

opts — Format control for returned element resource indices

'ind', '1based' (default) | 'sub' | '0based'

Format control for returned element resource indices, specified as a string or a cell array of strings. The option strings can contain values from the *Indexing Style* and *Index base* categories.

Category	Options	Description
Indexing style	'ind' (default)	The returned indices are in linear index form
	'sub'	The returned indices are in [subcarrier, symbol, port] subscript row form
Index base	'1based' (default)	Indices returned are 1-based
	'0based'	Indices returned are 0-based

Data Types: cell

Output Arguments

ind — PUSCH resource element indices

column vector of integers

PUSCH resource element (RE) indices, returned as column vector of integers.

Data Types: uint32

info — Information related to PUSCH indices

structure

Information related to the PUSCH indices, returned as a structure having the following fields.

Parameter Field	Required or Optional	Values	Description
G		1- or 2-element vector of integers	A one- or two-element vector, specifying the number of coded and rate matched UL-SCH data bits for each codeword
Gd		Integer	Number of coded and rate matched UL-SCH data symbols, equal to the number of rows in the PUSCH indices

Data Types: struct

See Also

lteDCIResourceAllocation | ltePUSCH | ltePUSCHDecode | ltePUSCHDeprecode | ltePUSCHDRS | ltePUSCHDRSIndices | ltePUSCHPrecode

Introduced in R2014a

ltePUSCHPrecode

PUSCH MIMO precoding of transmission layers

Syntax

```
out = ltePUSCHPrecode(in,p,codebook)
out = ltePUSCHPrecode(ue,chs,in)
```

Description

`out = ltePUSCHPrecode(in,p,codebook)` precodes the matrix of layers, `in`, onto `p` antennas. When `p` is 2 or 4, precoding for spatial multiplexing is applied with the scalar codebook index, `codebook`. It performs precoding according to TS 36.211, Section 5.3.3A [1]. This function returns an M -by- P matrix. Where M is the number of symbols per antenna and P is the number of transmission antennas. The precoder transposes the operation defined in TS 36.211, Section 5.3.3A, specifically the symbols for layers and antennas lie in columns rather than rows.

`out = ltePUSCHPrecode(ue,chs,in)` precodes the matrix of layers, `in`, according to UE-specific settings, `ue`, and channel transmission configuration, `chs`.

Examples

Perform PUSCH MIMO Precoding

Generate a PUSCH precoding matrix with codebook index 1 for 3 layers and 4 antennas. By precoding an identity matrix, we can gain access to the precoding matrices themselves.

```
nLayers = 3;
nAntennas = 4;
codeBookIdx = 1;
out = ltePUSCHPrecode(eye(nLayers),nAntennas,codeBookIdx)
```

out =

```

0.5000 + 0.0000i  -0.5000 + 0.0000i  0.0000 + 0.0000i  0.0000 + 0.0000i
0.0000 + 0.0000i  0.0000 + 0.0000i  0.5000 + 0.0000i  0.0000 + 0.0000i
0.0000 + 0.0000i  0.0000 + 0.0000i  0.0000 + 0.0000i  0.5000 + 0.0000i

```

Input Arguments

in — Transmission input layers

numeric matrix

Transmission input layers, specified as a numeric matrix of size N -by- NU . **in** consists of the N modulation symbols for transmission upon NU layers. The `lteLayerMap` function generates such a matrix.

Example: [1 0 0; 0 1 0; 0 0 1]

Data Types: double

Complex Number Support: Yes

p — Number of transmission antennas

1 | 2 | 4

Number of transmission antennas, specified as an integer having the values 1, 2, or 4.

Example: 1

Data Types: double

codebook — Codebook index

scalar integer

codebook is a scalar integer specifying the codebook index to be used during precoding. This input is ignored when **p** is 1. The codebook matrix corresponding to a particular index can be found in TS 36.211, Section 5.3.3A [1].

Data Types: double

ue — UE-specific settings

structure

UE-specific settings, specified as a structure having the following fields.

NTxAnts — Number of transmission antennas

1 (default) | optional | 2 | 4

Number of transmission antennas, specified as 1, 2, or 4. Optional.

Data Types: double

Data Types: struct

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure. `chs` can contain the following field. The PMI parameter field is only required if `ue.NTxAnts` is set to 2 or 4.

PMI — Precoder matrix indication

0 (default) | optional | numeric scalar (0...23)

Precoder matrix indication, specified as a numeric scalar between 0 (default) and 23. Only required if `ue.NTxAnts` is set to 2 or 4. Acceptable values for PMI depend upon `ue.NTxAnts` and the number of layers, NU . The scalar PMI is used during precoding.

Data Types: double

Data Types: struct

Output Arguments

out — Precoded output symbols M -by- P numeric matrix

Precoded output symbols, returned as a numeric matrix of size M -by- P . Where M is the number of symbols per antenna and P is the number of transmission antennas.

Data Types: double

Complex Number Support: Yes

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePUSCH | ltePUSCHDecode | ltePUSCHDecode | ltePUSCHDRS |
ltePUSCHDRSIndices | ltePUSCHIndices | lteULPMIInfo | lteULPrecode

Introduced in R2013b

lteRIDecode

Rank indication channel decoding

Syntax

```
out = lteRIDecode(chs,in)
```

Description

`out = lteRIDecode(chs,in)` performs the block decoding on soft input data, `in`. The input is assumed to be encoded using the procedure defined for RI in TS 36.212, Section 5.2.2.6 [1] for given channel transmission configuration, `chs`. The function returns the decoded output, `out`, as a vector of length `ORI`, the number of uncoded RI bits transmitted.

The block decoding will be performed separately on each soft input data using a maximum likelihood (ML) approach, assuming that `in` has been demodulated and equalized to best restore the originally transmitted values.

The RI decoder performs different type of block decoding depending upon the number of uncoded RI bits to be recovered. For `ORI` less than 3 bits, the decoder assumed the bits are encoded using the procedure defined in TS 36.212, Section 5.2.2.6 [1]. For decoding 3 to 11 RI bits, the decoder assumes the bits are block encoded using the procedure defined in TS 36.212, Section 5.2.2.6.4 [1]. For decoding greater than 11 bits, the decoder performs the inverse procedure described in TS 36.212, Section 5.2.2.6.5 [1].

Examples

Decode RI Bits for 64QAM

Decode coded rank indication (RI) soft input bits for a 64QAM channel transmission configuration.

Generate rank indication bits and initialize the channel transmission configuration structure. Encode logical RI bits and turn logical bits into 'LLR' data. Decode the RI bits.

```
ri = [1;0;1];
```

```
chs.Modulation = '64QAM';
chs.QdRI = 1;
chs.ORI = length(ri);
chs.NLayers = 1;

codedRI = lteRIEncode(chs,ri);
codedRI(codedRI == 0) = -1
```

```
codedRI =
```

```
    1
   -1
    1
   -1
   -1
    1
```

```
decRI = lteRIDecode(chs, codedRI)
```

```
decRI =
```

```
    1
    0
    1
```

Input Arguments

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure. Multiple codewords can be parameterized by two different forms of the **chs** structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, or 1-by-1, structure. Any scalar field values apply to both codewords and a scalar **NLayers** is the total number. See “UL-SCH Parameterization” for further details.

Modulation — Modulation format

'QPSK' | '16QAM' | '64QAM' | cell array of strings

Modulation scheme type, specified as a string or cell array of strings. If there are two blocks and you provide a cell array with two strings, each string is associated with a transport block.

Data Types: char | cell

ORI — Number of uncoded RI bits

0 (default) | Optional | nonnegative integer

Number of uncoded RI bits, specified as a nonnegative integer. Optional. The RI decoder performs different type of block decoding depending upon the number of uncoded RI bits to be recovered.

For ORI less than 3 bits, the decoder assumed the bits are encoded using the procedure defined in TS 36.212, Section 5.2.2.6 [1].

For decoding 3 to 11 RI bits, the decoder assumes the bits are block encoded using the procedure defined in TS 36.212, Section 5.2.2.6.4 [1]. For decoding greater than 11 bits, the decoder performs the inverse procedure described in TS 36.212, Section 5.2.2.6.5 [1].

Data Types: double

NLayers — Number of transmission layers

1 (default) | Optional | 2 | 3 | 4

Number of transmission layers, specified as a positive scalar integer. Possible values are 1, 2, 3, or 4. Optional.

Data Types: double

Data Types: struct

in — RI input bits

numeric vector | cell array of numeric vectors

RI input bits, specified as a numeric vector or a cell array of numeric vectors. The block decoding will be performed separately on each soft input data using a maximum likelihood (ML) approach assuming that in has been demodulated and equalized to best restore the originally transmitted values.

Data Types: double | cell

Output Arguments

out — Decoded output

logical column vector

Decoded output, returned as a logical column vector. The vector length is determined by the value of ORI.

Data Types: `logical`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteACKDecode` | `lteCQIDecode` | `lteRIEncode` | `lteULSCHDecode` | `lteULSCHDeinterleave`

Introduced in R2014a

lteRIEncode

Rank indication channel encoding

Syntax

```
out = lteRIEncode(chs,in)
```

Description

`out = lteRIEncode(chs,in)` returns the coded rank indication (RI) bits after performing block coding, as defined for RI in TS 36.212, Section 5.2.2.6 [1]. `in` should be a vector or cell array containing up to 15 RI bits. `out` contains the encoded bits in the same form.

Multiple codewords can be parameterized by two different forms of the `chs` structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, or 1-by-1, structure. Any scalar field values apply to both codewords and a scalar `NLayers` is the total number. See “UL-SCH Parameterization” for further details.

Since the RI bits are carried on all defined codewords, a single input will result in a cell array of encoded outputs if multiple codewords are parameterized. This allows for easy integration with the other functions.

The RI coder performs different types of block coding depending upon the number of RI bits in vector `in`. If `in` consists of one element, it uses table 5.2.2.6-3 of [1]. If `in` consists of two elements, it uses TS 36.212, Table 5.2.2.6-4 [1] for encoding. The placeholder bits, x and y in the tables, are represented by -1 and -2 , respectively.

Similarly, for 3 to 11 bits, the RI encoding is performed as per TS 36.212, Section 5.2.2.6.4 [1]. For greater than 11 bits, the encoding is performed as described in TS 36.212, Section 5.2.2.6.5 [1].

Examples

Encode RI Bits for One Codeword

Generate the coded rank indication (RI) bits for a single codeword.

```
riBit = 0;
chs.Modulation = '64QAM';
chs.QdRI = 1;
chs.NLayers = 1;

codedRi = lteRIEncode(chs,riBit)
```

```
codedRi =

     0
    -2
    -1
    -1
    -1
    -1
```

Encode RI Bits for Two Codewords

Generate the coded rank indication (RI) bits for a two codewords on 3 layers.

```
riBit = 0;
chs.Modulation = {'64QAM' '64QAM'};
chs.QdRI = 1;
chs.NLayers = 3;

codedRi = lteRIEncode(chs,riBit)
codedRi{:}
```

```
codedRi =

    [6x1 int8]    [12x1 int8]

ans =

     0
```

```

-2
-1
-1
-1
-1

ans =

0
-2
-1
-1
-1
-1
0
-2
-1
-1
-1
-1

```

Input Arguments

chs — PUSCH-specific parameter structure

scalar structure | structure array

PUSCH-specific parameter structure, specified as a scalar structure or a structure array. **chs** contains the following fields.

QdRI — Number of coded RI symbols

nonnegative numeric scalar | nonnegative numeric vector

Number of coded RI symbols, specified as a nonnegative numeric scalar or vector (Q'_R).

Data Types: double

Modulation — Modulation format

'QPSK' | '16QAM' | '64QAM' | cell array of strings

Modulation format, specified as a string or cell array of strings. If there are 2 blocks, each string in the cell array is associated with each transport block.

Data Types: `char` | `cell`

NLayers — Number of transmission layers

1 (default) | Optional | 2 | 3 | 4

Number of transmission layers, specified as a positive numeric scalar. Optional.

Data Types: `double`

Data Types: `struct`

in — RI input bits

logical vector of length 1 to 15 | cell array of logical vectors

RI input bits, specified as a logical vector of length 1 to 15 or a cell array of logical vectors. Each vector can contain up to 15 RI bits apiece.

Data Types: `cell` | `double`

Output Arguments

out — Encoded output bits

integer column vector | cell array of integer column vectors

Encoded output bits, returned as a integer column vector or a cell array of integer column vectors, in same form as `in`. If the PUSCH-specific parameter structure `chs` defines multiple codewords, `out` is a cell array.

Data Types: `int8` | `cell`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteACKEncode` | `lteCQIEncode` | `lteRIDecode` | `lteULSCH` | `lteULSCHInterleave`

Introduced in R2014a

lteRMCDL

Downlink reference measurement channel configuration

Syntax

```
rmccfgout = lteRMCDL(rc,duplexmode,totsubframes)
rmccfgout = lteRMCDL(rmccfg,ncodewords)
```

Description

`rmccfgout = lteRMCDL(rc,duplexmode,totsubframes)` returns a configuration structure for the reference channel defined by `rc`. This structure uses a channel-specific default configuration. The structure contains the configuration parameters required to generate a given reference channel waveform using the reference measurement channel (RMC) generator tool, `lteRMCDLTool`. The field names and default values comply with the definition found in TS 36.101, Annex A.3 [1]. `duplexmode` and `totsubframes` are optional input parameters that define the duplexing mode and total number of subframes to generate, respectively.

`rmccfgout = lteRMCDL(rmccfg,ncodewords)` returns a configuration structure for the reference channel partially, or wholly, defined by the input structure, `rmccfg`. `ncodewords` is an optional input argument defining the number of PDSCH codewords to modulate. The input structure, `rmccfg`, can define any of the listed fields or substructure fields. The output structure, `rmccfgout`, returns a fully configured structure retaining the defined fields. Any undefined fields are assigned based on the setting indicated by the field `rc`. If the `rc` field is undefined, the 'R.0' RMC configuration is used as the default. The values of `RVSeq`, `TrBlkSizes`, and `CodedTrBlkSizes` are set according to the modulation scheme and the code rate for the RMC. The RMC generator tool can use the `rmccfgout` structure to generate a waveform.

Examples

Generate RMC configuration for RMC structure variable

This example shows creation of a configuration structure for reference measurement channel R.11 as specified in TS 36.101.

Create a configuration structure for RC R.11 as specified in TS 36.101

```
rmc.RC = 'R.11';  
rmc.NCellID = 100;  
rmc.PDSCH.TxScheme = 'SpatialMux';  
rmcOut = lteRMCDL(rmc,2)
```

```
rmcOut =
```

```
          RC: 'R.11'  
        NDLRB: 50  
      CellRefP: 2  
      NCellID: 100  
CyclicPrefix: 'Normal'  
          CFI: 2  
          Ng: 'Sixth'  
PHICHDuration: 'Normal'  
          NFrame: 0  
          NSubframe: 0  
    TotSubframes: 10  
    Windowing: 0  
    DuplexMode: 'FDD'  
          PDSCH: [1x1 struct]  
OCNGPDCCHEnable: 'Off'  
OCNGPDCCHPower: 0  
OCNGPDSCHEnable: 'Off'  
OCNGPDSCHPower: 0  
    OCNGPDSCH: [1x1 struct]
```

Display the contents of the PDSCH substructure

```
rmcOut.PDSCH
```

```
ans =
```

```
    TxScheme: 'SpatialMux'  
Modulation: {'16QAM' '16QAM'}  
    NLayers: 2  
        Rho: 0  
        RNTI: 1  
    RVSeq: [2x4 double]  
        RV: [0 0]
```



```

NHARQProcesses: 8
NTurboDecIts: 5
  PRBSet: [50x1 double]
  TrBlkSizes: [2x10 double]
CodedTrBlkSizes: [2x10 double]
  DCIFormat: 'Format2'
  PDCCHFormat: 2
  PDCCHPower: 0
  CSIMode: 'PUSCH 3-1'
  PMIMode: 'Wideband'
  PMISet: 0

```

Generate an RMC configuration where the CFI varies per subframe

This example shows creation of a configuration structure for reference measurement channel R.0 in TDD mode as specified in TS 36.101. For this RMC and duplex mode combination, the value of CFI varies per subframe.

Set input arguments.

```

rc = 'R.0';
duplexmode = 'TDD';

```

Generate the configuration structure.

```

rmcOut = lteRMCDL(rc,duplexmode)

```

```

rmcOut =

```

```

      RC: 'R.0'
      NDLRB: 15
      CellRefP: 1
      NCellID: 0
      CyclicPrefix: 'Normal'
      CFI: [3 2 3 3 3 3 2 3 3 3]
      Ng: 'Sixth'
      PHICHDuration: 'Normal'
      NFrame: 0
      NSubframe: 0
      TotSubframes: 10
      Windowing: 0
      DuplexMode: 'TDD'
      PDSCH: [1x1 struct]

```

```

OCNGPDCCHEnable: 'Off'
OCNGPDCCHPower: 0
OCNGPDSCHEnable: 'Off'
OCNGPDSCHPower: 0
    OCNGPDSCH: [1x1 struct]
        SSC: 4
    TDDConfig: 1

```

In TDD mode, looking at the `rmcOut.CFI` vector, we see variation which corresponds to per subframe CFI adjustment

```
rmcOut.CFI
```

```
ans =
```

```

    3     2     3     3     3     3     2     3     3     3

```

Generate an RMC config varying resource allocation per SF

This example shows creation of a configuration structure for reference measurement channel R.44 as specified in TS 36.101.

Set input arguments and generate the configuration structure.

```

rc = 'R.44';
rmcOut = lteRMCDL(rc);

```

For this RMC, the size of the resource allocation varies per subframe. Evidence of this is seen by viewing the `PRBSet` and observing that the length of resource allocation vectors in the `PRBSet` cell array vary per subframe

```
rmcOut.PDSCH.PRBSet
```

```
ans =
```

```

Columns 1 through 4
    [41x1 double]    [50x1 double]    [50x1 double]    [50x1 double]

```

Columns 5 through 9

```
[50x1 double]    []    [50x1 double]    [50x1 double]    [50x1 double]
```

Column 10

```
[50x1 double]
```

Generate an RMC config and override a default setting

Create a new customized parameter set by overriding selected values of an existing preset RMC. To define a single codeword full-band 10MHz PDSCH using 4 CRS port spatial multiplexing and 64QAM modulation, begin by initializing an RMC configuration structure to R.13. Looking at TS 36.101, Table A.3.1.1-1, see the RMC R.13 matches desired configuration except the default QPSK modulation must be adjusted.

Create an R.13 RMC configured structure and display `rmc.PDSCH`.

```
rmcOverride.RC = 'R.13';
rmc = lteRMCDL(rmcOverride,1);
rmc.PDSCH
```

ans =

```

    TxScheme: 'SpatialMux'
    Modulation: {'QPSK'}
    NLayers: 1
        Rho: 0
        RNTI: 1
        RVSeq: [0 12 3]
        RV: 0
    NHARQProcesses: 8
    NTurboDecIts: 5
    PRBSet: [50x1 double]
    TrBlkSizes: [3624 4392 4392 4392 4392 0 4392 4392 4392 4392]
    CodedTrBlkSizes: [12032 12800 12800 12800 12800 0 12800 12800 12800 12800]
    DCIFormat: 'Format2'
    PDCCHFormat: 2
    PDCCHPower: 0
    CSIMode: 'PUSCH 1-2'
    PMIMode: 'Wideband'
    PMISet: 0
```

Override the default modulation, execute `lteRMCDL` and display `rmc.PDSCH` again. The returned PDSCH transport block sizes and physical channel capacities are updated to maintain the $R=1/3$ coding rate when the modulation is overridden.

```
rmcOverride.PDSCH.Modulation = '64QAM';
rmc = lteRMCDL(rmcOverride,1);
rmc.PDSCH
```

ans =

```

    TxScheme: 'SpatialMux'
  Modulation: {'64QAM'}
    NLayers: 1
      Rho: 0
    RNTI: 1
    RVSeq: [0 0 1 2]
      RV: 0
  NHARQProcesses: 8
  NTurboDecIts: 5
    PRBSet: [50x1 double]
  TrBlkSizes: [15264 15264 15264 15264 15264 0 15264 15264 15264 15264]
  CodedTrBlkSizes: [36096 38400 38400 38400 38400 0 38400 38400 38400 38400]
    DCIFormat: 'Format2'
  PDCCHFormat: 2
  PDCCHPower: 0
    CSIMode: 'PUSCH 1-2'
    PMIMode: 'Wideband'
    PMISet: 0
```

Note the RV sequence is also updated to reflect that defined for the 64QAM modulation.

Input Arguments

rc — Reference measurement channel

```
'R.0' | 'R.1' | 'R.2' | 'R.3' | 'R.4' | 'R.5' | 'R.6' | 'R.7' | 'R.8' | 'R.9'
| 'R.10' | 'R.11' | 'R.12' | 'R.13' | 'R.14' | 'R.25' | 'R.26' | 'R.27' |
|R.28' | 'R.43' | 'R.44' | 'R.45' | 'R.45-1' | 'R.48' | 'R.50' | 'R.51' |
|R.6-27RB' | 'R.12-9RB' | 'R.11-45RB'
```

Reference measurement channel, specified as a one of the strings listed in the table, as defined in TS 36.101, [1]. The given rc defaults to the transmission scheme shown.

Transmission Scheme	Duplex Mode	RMC Number
'Port0' — Single-antenna port, Port 0	'FDD' or 'TDD'	'R.0', 'R.1', 'R.2', 'R.3', 'R.4', 'R.5', 'R.6', 'R.7', 'R.8', 'R.9', 'R.6-27RB'
'TxDiversity' — Transmit diversity scheme	'FDD' or 'TDD'	'R.10', 'R.11', 'R.11-45RB', 'R.12', 'R.12-9RB'
'SpatialMux' — Closed-loop spatial multiplexing scheme	'FDD' or 'TDD'	'R.13', 'R.14'
	'TDD'	'R.43'
'MultiUser' — Multi-user MIMO scheme	'FDD' or 'TDD'	- -
'Port5' — Single-antenna port, Port 5 (UE-specific beamforming)	'FDD' or 'TDD'	'R.25', 'R.26', 'R.27', 'R.28'
'Port7-14' — Up to eight-layer transmission, ports 7–14.	'FDD'	'R.43', 'R.44', 'R.45', 'R.45-1', 'R.48', 'R.50', 'R.51'
	'TDD'	'R.44', 'R.45', 'R.45-1', 'R.48', 'R.50', 'R.51'

Note: Reference channels 'R.6-27RB', 'R.12-9RB', and 'R.11-45RB' are custom RMCs that are configured for non-standard bandwidths but maintain the same code rate as the standard versions.

Data Types: char

duplexmode — Duplexing mode

'FDD' (default) | optional | 'TDD'

Duplexing mode, specified as a string. It represents the frame structure type.

Data Types: char

totsubframes — Total number of subframes

10 (default) | optional | positive numeric scalar

`totsubframes` specifies the total number of subframes that form the resource grid, used by `lteRMCDLTool`, to generate the waveform.

Data Types: double

rmccfg — Reference channel configuration

structure

Reference channel configuration, specified as a structure. The structure defines any, or all, of the fields or subfields contained in the output structure, `rmccfgout`. Any undefined fields are given appropriate default values. `rmccfg` must contain at least the `RC` field.

Parameter Field	Required or Optional	Values	Description
RC	Optional	'R0' (default), 'R1', 'R2', 'R3', 'R4', 'R5', 'R6', 'R7', 'R8', 'R9', 'R10', 'R11', 'R12', 'R13', 'R14', 'R25', 'R26', 'R27', 'R28', 'R43', 'R44', 'R45', 'R45-1', 'R48', 'R50', 'R51', 'R6-27RB', 'R12-9RB', 'R11-45RB'	Reference measurement channel (RMC) number or type, as specified in TS 36.101, Annex A.3

Data Types: struct

ncodewords — Number of PDSCH codewords to modulate

optional | 1 | 2

Number of PDSCH codewords to modulate. `ncodewords` can be 1 or 2. The default used is the value defined in TS 36.101, [1] for the RMC configuration given by `RC`.

Data Types: double

Output Arguments

rmccfgout — RMC configuration output structure

RMC configuration output structure

Returned as a scalar structure. The RMC generator tool can use the `rmccfgout` structure to generate a waveform. `rmccfgout` contains these fields.

Parameter Field	Values	Description
RC	'R0' (default), 'R1', 'R2', 'R3', 'R4', 'R5', 'R6', 'R7', 'R8', 'R9', 'R10', 'R11', 'R12', 'R13', 'R14', 'R25', 'R26', 'R27', 'R28', 'R43', 'R44', 'R45', 'R45-1', 'R48', 'R50', 'R51', 'R6-27RB', 'R12-9RB', 'R11-45RB'	Reference measurement channel (RMC) number or type, as specified in TS 36.101, Annex A.3. 'R.6-27RB', 'R.12-9RB', and 'R.11-45RB' are custom RMC configured for non-standard bandwidths but with the same code rate as the standardized versions
NDLRB	Positive scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB also accepts the standardized bandwidths in string format from the set {'1.4MHz', '3MHz',	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Values	Description
	'5MHz', '10MHz', '15MHz', '20MHz'.	
CellRefP	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
NCellID	Nonnegative scalar integer (0, ..., 503)	Physical layer cell identity
CyclicPrefix	'Normal' (default), 'Extended'	Cyclic prefix length
CFI	1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB') See footnote 1
Ng	'Sixth', 'Half', 'One', 'Two'	HICH group multiplier
PHICHDuration	'Normal', 'Extended'	PHICH duration
NFrame	0 (default), nonnegative scalar integer	Frame number
NSubFrame	0 (default), nonnegative scalar integer	Subframe number
TotSubFrames	Positive scalar integer	Total number of subframes to generate
Windowing	Nonnegative scalar integer	Number of time-domain samples over which windowing and overlapping of OFDM symbols is applied
DuplexMode	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
The following fields are only present when DuplexMode is 'TDD'.		
TDDConf	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration

Parameter Field	Values	Description
SSC	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following field is only present for 'Port7-14' transmission scheme		
CSIRSPer	'On' (default), 'Off', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]	CSI-RS subframe configurations for one or more CSI-RS resources. Multiple CSI-RS resources can be configured from a single common subframe configuration or from a cell array of configurations for each resource.
The following fields are only present for 'Port7-14' transmission scheme and only required if CSIRSPeriod is not set to 'Off'.		
CSIRSCon	Scalar integer	Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1.
CSIRRefP	1 (default), 2, 4, 8	Array of number of CSI-RS antenna ports
The following field is only present for 'Port7-14' transmission scheme		
ZeroPowe	'Off' (default), 'On', Icsi-rs, (0,...,154), [Tcsi-rs Dcsi-rs]	Cell array of zero-power CSI-RS resource subframe configuration
The following field is only present for 'Port7-14' transmission scheme and only required if ZeroPowerCSIRSPeriod is not set to 'Off'.		
ZeroPowe	16-bit bitmap string (truncated if not 16 bits or '0' MSB extended), or a numerical list of CSI-RS configuration indices.	Zero-power CSI-RS resource configuration index list. See TS 36.211, Section 6.10.5.2 and the 4 CSI reference signal column in Tables 6.10.5.2-1 and 6.10.5.2-2.
PDSCH	Scalar structure	PDSCH transmission configuration substructure
OCNGPDCCHen	'Off', 'On'	Enable PDCCH OCNG See footnote 2
OCNGPDCCHPo	Scalar integer, 0 (default)	PDCCH OCNG power in dB

Parameter Field	Values	Description
OCNGPDSCHEn	'Off', 'On'	Enable PDSCH OCNG
OCNGPDSCHPow	Scalar integer, defaults to PDSCH.Rho (default)	PDSCH OCNG power in dB
OCNGPDSCH	Scalar structure	PDSCH OCNG configuration substructure
OCNG	'Off', 'On', 'Disable' and 'Enable' are also accepted.	OFDMA channel noise generator. Note: This parameter will be removed in a future release. Use the PDCCH and PDSCH-specific OCNG parameters instead.
<p>1 CFI is equal to the number of symbols allocated to:</p> <ul style="list-style-type: none"> • PDCCH - 1 for $NDLRB < 10$ • PDCCH for $NDLRB \geq 10$ <p>For the RMCs, the number of symbols allocated to PDCCH varies with channel bandwidth setting,</p> <ul style="list-style-type: none"> • Two symbols for 20 MHz, 15 MHz, and 10 MHz • Three symbols for 5 MHz and 3 MHz • Four symbols for 1.4 MHz <p>In the TDD mode, only two OFDM symbols are allocated to PDCCH in subframes 1 and 6 irrespective of the channel bandwidth. Therefore, the CFI value varies per subframe for the 5 MHz, 3 MHz and 1.4 MHz channel bandwidths. Specifically, for bandwidths where PDCCH symbol allocation is not two in other subframes.</p> <p>2 The PDCCH OCNG fills the unused PDCCH resource elements with QPSK symbols using either single port or transmit diversity depending on the number of cell RS ports.</p>		

PDSCH substructure

The substructure PDSCH relates to the physical channel configuration and contains these fields:

Parameter Field	Values	Description
TxScheme	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	<p>PDSCH transmission scheme, specified as one of the following options.</p> <ul style="list-style-type: none"> 'Port0' — Single-antenna port, port 0 'TxDiversity' — Transmit diversity scheme 'CDD' — Large delay CDD scheme 'SpatialMux' — Closed-loop spatial multiplexing 'MultiUser' — Multiuser MIMO scheme 'Port5' — Single-antenna port, port 5 'Port7-8' — Single-antenna port, port 7 (when NLayers = 1). Dual layer transmission, ports 7 and 8 (when NLayers = 2). 'Port8' — Single-antenna port, port 8 'Port7-14' — Up to eight-layer transmission, ports 7–14
Modulation	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
NLayers	1 (default), 2, 3, 4, 5, 6, 7, 8	Number of transmission layers
NTxAnts	Nonnegative scalar integer	Number of transmission antenna ports. This argument is only present for UE-specific demodulation reference symbols.
Rho	0 (default), Scalar	PDSCH resource element power allocation, in dB
RNTI	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)

Parameter Field	Values	Description
RVSeq	Integer vector (0,1,2,3) ^a	Specifies the sequence of Redundancy Version (RV) indicators for each HARQ process. The number of elements in each row is equal to the number of transmissions in each HARQ process. If RVSeq is a row vector in a two codeword transmission, then the same RV sequence is applied to both codewords
RV	Integer vector (0,1,2,3) ^b	Specifies the redundancy version for one or two codewords used in the initial subframe number, <code>NSubframe</code> . This parameter field is only for informational purposes and is Read-Only.
NHARQProcesses	(1, 2, 3, 4, 5, 6, 7, 8) Nonnegative scalar integer	Number of HARQ processes
NTurboDecoderIterations	5 (default), Nonnegative scalar integer	Number of turbo decoder iteration cycles

Parameter Field	Values	Description
PRBSet	Column vector or cell array.	<p>Zero-based physical resource block (PRB) indices corresponding to the slot wise resource allocations for this PDSCH. PRBSet can be assigned as:</p> <ul style="list-style-type: none"> • a column vector, the resource allocation is the same in both slots of the subframe, • a two-column matrix, this parameter specifies different PRBs for each slot in a subframe, • a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>
TrBlkSizes	One or two row numeric matrix	Transport block sizes for each subframe in a frame
CodedTrBlks	One or two row numeric matrix	Coded transport block sizes for one or two codewords. This parameter field is only for informational purposes.

Parameter Field	Values	Description
DCIFormat	'Format0', 'Format1', 'Format1A', 'Format1B', 'Format1C', 'Format1D', 'Format2', 'Format2A', 'Format2B', 'Format2C', 'Format2D', 'Format3', 'Format3A', 'Format4'	Downlink control information (DCI) format type string of PDCCH associated with the PDSCH. See <code>lteDCI</code> .
PDCCHFormat	0, 1, 2, 3	Aggregation level of PDCCH associated with PDSCH
PDCCHPower	Scalar	PDCCH power in dB
CSIMode	'PUCCH 1-0', 'PUCCH 1-1', 'PUSCH 1-2', 'PUSCH 3-0', 'PUSCH 3-1'	CSI reporting mode
PMIMode	'Wideband' (default), 'Subband'	PMI reporting mode
The following field is only present for <code>TxScheme = 'SpatialMux'</code> .		
PMISet	Integer vector (0, ..., 15)	Precoder matrix indication (PMI) set. It can contain either a single value, corresponding to single PMI mode, or multiple values, corresponding to multiple or subband PMI mode. The number of values depends on <code>CellRefP</code> , transmission layers and <code>TxScheme</code> . For more information about setting PMI parameters, see <code>ltePMIInfo</code> .
The following field is only present for <code>TxScheme = 'Port7-8', 'Port8', or 'Port7-14'</code> .		

Parameter Field	Values	Description
NSCID	0 (default), 1	Scrambling identity (ID) Present only for 'Port7-8', 'Port8', and 'Port7-14' transmission schemes.
The following field is only present for UE-specific beamforming ('Port5', 'Port7-8', 'Port8', or 'Port7-14').		
W	Numeric matrix, [] (default)	Present only for wideband UE-specific beamforming ('Port5', 'Port7-8', 'Port8', 'Port7-14'). The NLayers-by-NTxAnts precoding matrix chosen according to TS 36.101 Annex B.4. The resulting precoding matrix is randomly selected from: <ul style="list-style-type: none"> the set defined in TS 36.211 Section 6.3.4 for 'Port5', 'Port7-8' and 'Port8' transmission schemes or from the set associated with CSI reporting as defined in TS 36.213 Section 7.2.4 for the 'Port7-14' transmission scheme. For R. 48, the precoding matrix corresponding to PMI=0 is used.

- a. A one or two row matrix (for one or two codewords)
- b. A one or two column matrix (for one or two codewords)
- c. The function returns valid TrBlkSizes and CodedTrBlkSizes set to 0 when PRBSet is empty, indicating there is no PDSCH allocation in this frame.

OCNGPDSCH substructure

The substructure, OCNGPDSCH, defines the OCNG patterns in associated RMCs and tests according to TS 36.101, Section A.5 [1]. OCNGPDSCH contains these fields which can also be customized with the full range of PDSCH-specific values.

Parameter Field	Values	Description
Modulation	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
TxScheme	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	OCNG transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> • 'Port0' — Single-antenna port, port 0 • 'TxDiversity' — Transmit diversity scheme • 'CDD' — Large delay CDD scheme • 'SpatialMux' — Closed-loop spatial multiplexing • 'MultiUser' — Multiuser MIMO scheme • 'Port5' — Single-antenna port, port 5 • 'Port7-8' — Single-antenna port, port 7 (when NLayers = 1). Dual layer transmission, ports 7 and 8 (when NLayers = 2). • 'Port8' — Single-antenna port, port 8 • 'Port7-14' — Up to eight-layer transmission, ports 7–14
RNTI	Scalar integer default 0	Radio network temporary identifier (RNTI) value (16 bits) for OCNG

References

- [1] 3GPP TS 36.101. “User Equipment (UE) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

- [2] 3GPP TS 36.211. “Physical channels and modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [4] 3GPP TS 36.321. “Medium Access Control (MAC) protocol specification.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteRMCDLTool | lteRMCUL | lteTestModel

Introduced in R2014a

lteRISelect

PDSCH rank indication calculation

Syntax

```
[ri,pmiset] = lteRISelect(enb,chs,hest,noiseest)
```

Description

[ri,pmiset] = lteRISelect(enb,chs,hest,noiseest) calculates PDSCH RI (Rank Indication) for a given cell wide `enb`, channel configuration structure `chs`, channel estimate resource array `hest`, and receiver noise variance `noiseest`.

The RI selection process consists of using `ltePMISelect` for each possible value of `NLayers` (the number of transmission layers) and then selecting the `NLayers` value that maximizes the SINR of the transmission for the selected PMI. The RI selection excludes layers below an SINR threshold of 0dB. RI selection corresponds to Report Type 3 (for reporting Mode 1-0 or Mode 1-1) on the PUCCH or reporting Mode 1-2 or Mode 3-1 on the PUSCH.

Perform PMI selection using the codebooks specified in TS 36.213, Section 7.2.4 [1]. For the 'Port 7-14' transmission scheme, the CSI reporting codebook is used when the number of CSI-RS ports is 8. For other numbers of CSI-RS ports in the 'Port 7-14' transmission scheme and for other transmission schemes, in the PMI selection will be performed using the codebook for closed-loop spatial multiplexing defined in TS 36.211, Tables 6.3.4.2.3-1 and 6.3.4.2.3-2 [2]. `PMIMode = 'Wideband'` corresponds to PUSCH reporting Mode 1-2 or PUCCH reporting Mode 1-1 (PUCCH Report Type 2). `PMIMode = 'Subband'` corresponds to PUSCH reporting Mode 3-1.

Examples

Rank indication example

This example shows how to populate an empty resource grid for RMC R.13 with cell-specific reference signal symbols. The signal is passed through a channel and OFDM demodulated. Estimates of the channel and noise power spectral density are used for

RI and PMI calculation. A CodebookSubset bitmap of all ones means that no codebook subset restriction is applied, allowing any PMI/RI combination applicable for the configured transmission scheme to be selected during RI selection.

Create empty resource grid and populate with cell specific reference symbols. Set `enb.PDSCH.CodebookSubset` to all ones so the PMI selection is unconstrained

```
enb = lteRMCDL('R.13');
enb.PDSCH.CodebookSubset = '1111111111111111';
reGrid = lteResourceGrid(enb);
reGrid(lteCellRSIndices(enb)) = lteCellRS(enb);
[txWaveform,txInfo] = lteOFDMModulate(enb,reGrid);
```

Initialize the configuration structure (`chcfg`), filter the signal through a channel and demodulate the signal.

```
chcfg.DelayProfile = 'EPA';
chcfg.NRxAnts = 4;
chcfg.DopplerFreq = 5;
chcfg.MIMOCorrelation = 'Low';
chcfg.SamplingRate = txInfo.SamplingRate;
chcfg.Seed = 1;
chcfg.InitPhase = 'Random';
chcfg.ModelType = 'GMEDS';
chcfg.NTerms = 16;
chcfg.NormalizeTxAnts = 'On';
chcfg.NormalizePathGains = 'On';
chcfg.InitTime = 0;
rxWaveform = lteFadingChannel(chcfg,txWaveform);
rxSubframe = lteOFDMDemodulate(enb,rxWaveform);
```

Estimate corresponding channel, including noise spectral density and reference signal subcarriers. Use `lteRISelect` to calculate RI & PMI

```
cec.FreqWindow = 1;
cec.TimeWindow = 15;
cec.InterpType = 'cubic';
cec.PilotAverage = 'UserDefined';
cec.InterpWinSize = 1;
cec.InterpWindow = 'Centered';
[hest,noiseEst] = lteDLChannelEstimate(enb,cec,rxSubframe);
[ri,pmi] = lteRISelect(enb,enb.PDSCH,hest,noiseEst)
```

```
ri =
```

3

pmi =

13

Input Arguments

enb — eNodeB cell-wide settings

structure

eNodeB cell wide settings, specified as a structure containing the following parameter fields:

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Parameter Field	Required or Optional	Values	Description
DuplexMode	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
The following parameters apply when DuplexMode is set to, TDD.			
TDDConf	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
NSubframe	Required	Nonnegative scalar integer	Subframe number
The following parameters apply when chs.TxScheme is set to 'Port7-14'.			
CSIRefP	Required	1 (default), 2, 4, 8	Array of number of CSI-RS antenna ports
CSIRSCo	Required	scalar integer	Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1.
CSIRSPe	Optional	'On' (default), 'Off', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]. You can also specify values in a cell array of configurations for each resource.	CSI-RS subframe configurations for one or more CSI-RS resources. Multiple CSI-RS resources can be configured from a single common subframe configuration or from a cell array of configurations for each resource.
NFrame	Optional	0 (default), Nonnegative scalar integer	Frame number

chs — Channel-specific transmission configuration

structure | structure array

Channel specific transmission configuration, specified as scalar structure or structure array containing the following parameter fields:

Parameter Field	Required or Optional	Values	Description
PMIMode	Optional	'Wideband' (default), 'Subband'	PMI reporting mode
TxScheme	Optional	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	<p>Transmission scheme, specified as one of the following options.</p> <ul style="list-style-type: none"> • 'SpatialMux' — Closed-loop spatial multiplexing. • 'Port0' — Single-antenna port, port 0. • 'TxDiversity' — Transmit diversity scheme. • 'CDD' — Large delay CDD scheme. • 'MultiUser' — Multiuser MIMO scheme. • 'Port5' — Single-antenna port, port 5. • 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). • 'Port8' — Single-antenna port, port 8. • 'Port7-14' — Up to 8-layer transmission, ports 7–14.

Parameter Field	Required or Optional	Values	Description
CodebookSubsetRestriction	Optional	String or vector, all ones (default)	Codebook subset restriction, specified as a string bitmap. The default values are all ones, permitting all PMI values. This parameter is configured by higher layers and indicates the values of PMI that can be reported. The bitmap, defined in TS 36.213, Section 7.2, is arranged $a_{A-1}, a_{A-2}, \dots, a_0$. For example, the element CodebookSubset(1) corresponds to a_{A-1} and the element CodebookSubset(end) corresponds to a_0 . The length of the bitmap is given by the info.CodebookSubsetSize field returned by ltePMIInfo. You can also specify the bitmap in a hexadecimal form by prefixing the string with '0x'. Alternatively, you can specify a numeric array identical to the PMISSET output, indicating to restrict the selection to only those PMISSET values. Specifying the parameter in this way enables you to obtain SINR estimates against an existing reported PMI for RI and CQI selection. If this parameter field is defined but is empty, no codebook subset restriction is applied. (codebookSubsetRestriction)

hest – Channel estimate

multidimensional array

Channel estimate, specified as a multidimensional array of size K -by- L -by- $NRxAnts$ -by- P where:

- K is the number of sub.carriers.
- L is the number of OFDM symbols
- $NRxAnts$ is the number of receive antennas

- P is the number of transmit antennas.

Data Types: `double`

Complex Number Support: Yes

noiseest — Receiver noise variance

numeric scalar

Receiver noise variance, specified as numeric scalar. It is an estimate of the received noise power spectral density.

Data Types: `double`

Output Arguments

ri — Rank indication

scalar

Rank indication, returned as a scalar, indicates the optimal number of layers to use for transmission to maximize SINR.

pmiset — Precoder matrix indications

column vector

Precoder matrix indications, returned as a column vector.

For the 'Port7-14' transmission scheme with 8 CSI-RS ports, PMISet has `INFO.NSubbands + 1` rows. The first row indicates wideband codebook index $i1$. The subsequent `INFO.NSubbands` rows indicate the subband codebook indices $i2$ or, if `INFO.NSubbands = 1`, wideband codebook index $i2$. For other numbers of CSI-RS ports in the 'Port7-14' transmission scheme, and for other transmission schemes, PMISet has `INFO.NSubbands` rows, each row returns the subband codebook index for that subband. For wideband reporting (`INFO.NSubbands = 1`), PMISet is a scalar specifying the selected wideband codebook index.

References

- [1] 3GPP TS 36.213. "Physical layer procedures." *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

[2] 3GPP TS 36.211. "Physical channels and modulation." *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteCQISelect | ltePMIInfo | ltePMISelect

Introduced in R2014b

lteRMCDLTool

Downlink RMC waveform generation

Syntax

```
[waveform,grid,rmccfgout] = lteRMCDLTool  
[waveform,grid,rmccfgout] = lteRMCDLTool(rc,trdata,duplexmode,  
totsubframes)  
[waveform,grid,rmccfgout] = lteRMCDLTool(rmccfg,trdata)
```

Description

[waveform,grid,rmccfgout] = lteRMCDLTool starts a user interface for the parameterization and generation of the reference measurement channel (RMC) waveforms. The main function outputs are specified in the GUI but can also be assigned to variables. **waveform**, the generated reference measurement channel waveform, is a T -by- P matrix. Where T is the number of time-domain samples and P is the number of antennas. **grid** represents the populated resource grid for all the physical channels specified in TS 36.101, annex A.3, [1]. It is a 3-D array of resource elements for several subframes across all configured antenna ports, as described in “Data Structures”. **rmccfgout** is a structure containing information about the OFDM modulated waveform, as described in lteOFDMInfo, and the RMC-specific configuration parameters, as described in lteRMCDL.

[waveform,grid,rmccfgout] = lteRMCDLTool(rc,trdata,duplexmode,totsubframes) returns waveform, grid, and rmccfgout for the default reference measurement channel defined by rc, using the information bits trdata. duplexmode and totsframes are optional input arguments, and define the duplex mode of the generated waveform and total number of subframes that make up the grid.

[waveform,grid,rmccfgout] = lteRMCDLTool(rmccfg,trdata) generates the waveform, grid, and rmccfgout as in the prior syntax except this syntax takes the user-defined reference channel structure rmccfg as input parameter. The reference configuration structure with default parameters can easily be created using lteRMCDL. The function lteRMCDL is designed to generate RMC configuration structures defined

in TS 36.101, Annex A.3, [1]. You can use the `lteRMCDL` output configuration structure without change or modify it to align with your simulation requirements to generate the output waveform. SIB1 messages and the associated PDSCH and PDCCH can be added to the output waveform by adding the substructure `rmccfg.SIB`.

 
Examples

Launch LTE Downlink RMC Generator Tool

This example launches the tool to generate a downlink reference measurement channel waveform.

The LTE Downlink RMC Generator dialog box appears when you execute the `lteRMCDLTool` function with no input arguments

```
lteRMCDLTool;
```

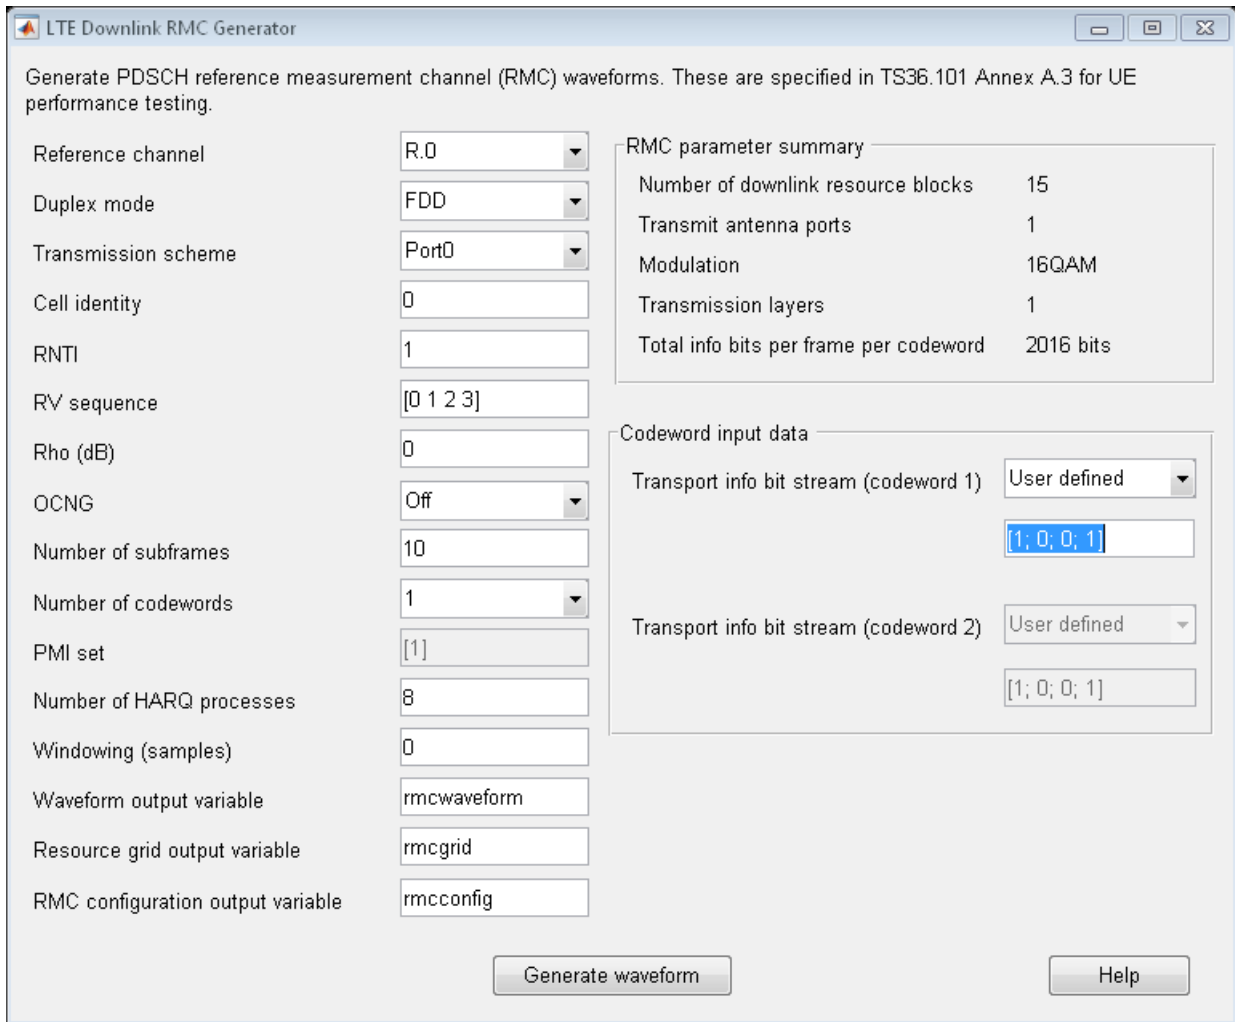

Use the GUI interface to generate the default waveform or adjust default settings prior to waveform generation

Generate LTE DL RMC R.12

This example generates a time domain signal, txWaveform, and a 3-dimensional array of the resource elements, txGrid, for RMC R.12 as specified in TS 36.101. This transmission

modifies the standard R.12 RMC to use 16QAM modulation scheme instead of the default QPSK.

Generate rmc configuration structure using lteRMCDL specifying the RMC 'R.12'

```
rc = 'R.12';
rmc = lteRMCDL(rc);
```

Change the modulation scheme to '16QAM'

```
rmc.PDSCH.Modulation = '16QAM';
```

Generate the tx waveform, RE grid and also output the RMC configuration structure

```
txData = [1;0;0;1];
[txWaveform, txGrid, rmcCfgOut] = lteRMCDLTool(rmc, txData);
```

Review the rmcCfgOut structure and PDSCH substructure

```
rmcCfgOut
rmcCfgOut.PDSCH
```

```
rmcCfgOut =
    RC: 'R.12'
    NDLRB: 6
    CellRefP: 4
    NCellID: 0
    CyclicPrefix: 'Normal'
    CFI: 3
    Ng: 'Sixth'
    PHICHDuration: 'Normal'
    NFrame: 0
    NSubframe: 0
    TotSubframes: 10
    Windowing: 0
    DuplexMode: 'FDD'
    PDSCH: [1x1 struct]
    OCNGPDCCHEnable: 'Off'
    OCNGPDCCHPower: 0
    OCNGPDSCHEnable: 'Off'
    OCNGPDSCHPower: 0
    OCNGPDSCH: [1x1 struct]
```

```
SerialCat: 1
SamplingRate: 1920000
Nfft: 128
```

```
ans =
```

```
    TxScheme: 'TxDiversity'
  Modulation: '16QAM'
    NLayers: 4
      Rho: 0
    RNTI: 1
    RVSeq: [0 1 2 3]
      RV: 0
  NHARQProcesses: 8
  NTurboDecIts: 5
    PRBSet: [6x1 double]
  TrBlkSizes: [152 408 408 408 408 0 408 408 408 408]
  CodedTrBlkSizes: [960 2496 2496 2496 2496 0 2496 2496 2496 2496]
    DCIFormat: 'Format1'
  PDCCHFormat: 2
  PDCCHPower: 0
    CSIMode: 'PUCCH 1-1'
    PMIMode: 'Wideband'
```

 
Generate RMC R.3 with SIB

This example shows use of `lteRMCDLTool` to generate a tx waveform with SIB transmission enabled using `DCIFormat1A` and localized allocation.

Specify desired RMC, initialize configuration structure and define `txData`. Generate `txGrid` and plot it.

```
rc = 'R.3';
rmc = lteRMCDL(rc);

txData = [1;0;0;1];
[~,txGrid,~] = lteRMCDLTool(rmc, txData);
mesh(abs(txGrid))
view(2)
```

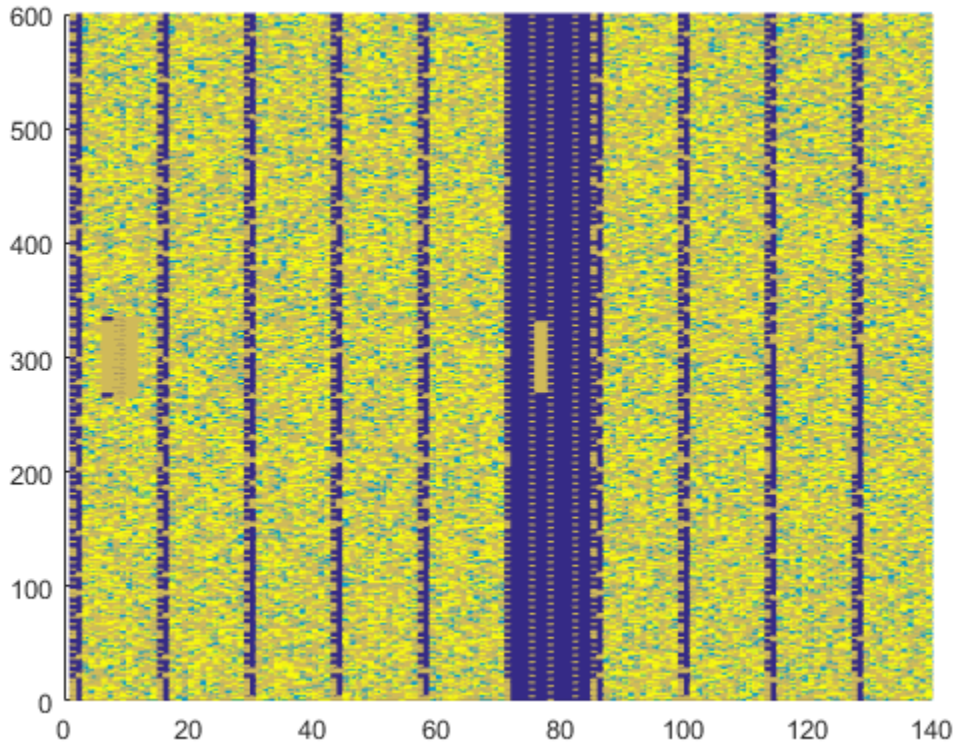

To insert SIB1 message into the output waveform, initialize SIB substructure, enable SIB transmission, adjust other defaults, and regenerate txGrid. Plot txGrid to illustrate the presence of SIB1 message in subframe 5

 
```

rmc.SIB.Enable = 'On';
rmc.SIB.DCIFormat = 'Format1A';
rmc.SIB.AllocationType = 0;
rmc.SIB.VRBStart = 8;
rmc.SIB.VRBLength = 8;
rmc.SIB.Data = randi([0 1],144,1);

[txWaveform,txGrid,rmcCfgOut] = lteRMCDLTool(rmc, txData);
figure
mesh(abs(txGrid))

```

view(2)

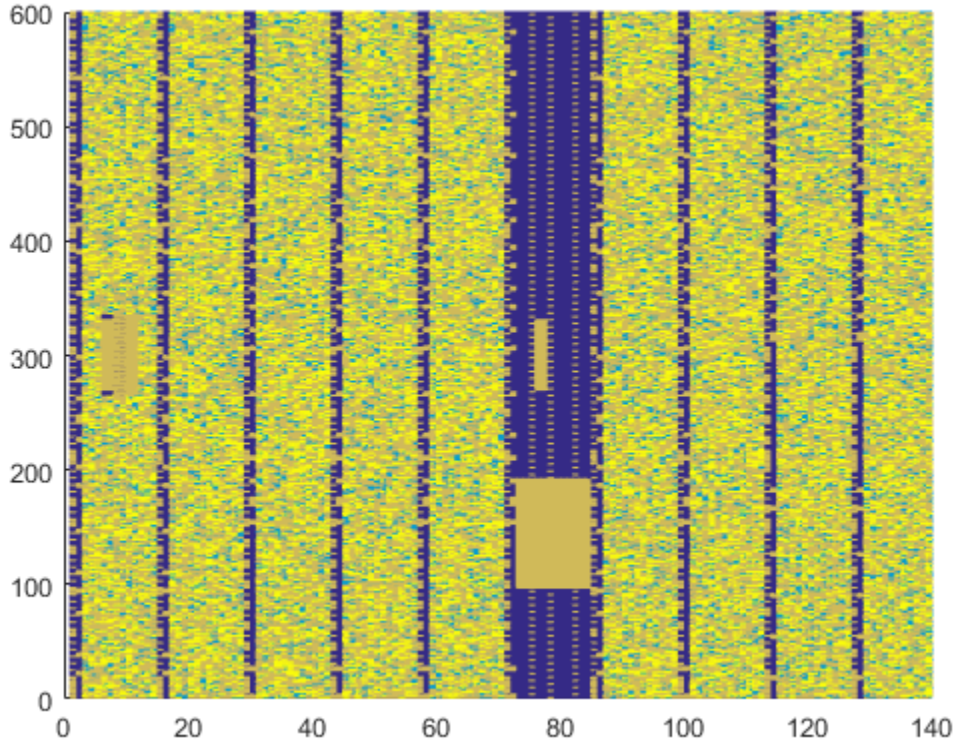

- “Generate LTE Downlink RMC Waveforms”

Input Arguments

rc — Reference channel

'R.0' | 'R.1' | 'R.2' | 'R.3' | 'R.4' | 'R.5' | 'R.6' | 'R.7' | 'R.8' | 'R.9'
 | 'R.10' | 'R.11' | 'R.12' | 'R.13' | 'R.14' | 'R.25' | 'R.26' | 'R.27' |
 'R.28' | 'R.43' | 'R.44' | 'R.45' | 'R.45-1' | 'R.48' | 'R.50' | 'R.51' |
 'R.6-27RB' | 'R.12-9RB' | 'R.11-45RB'

Reference channel, specified as a string. This argument identifies the reference measurement channel (RMC) number, as specified in TS 36.101, [1]. A given rc takes a default transmission scheme as shown in the following table.

Transmission Scheme	Duplex Mode	RMC Number
'Port0' — Single-antenna port, Port 0	'FDD' or 'TDD'	'R.0', 'R.1', 'R.2', 'R.3', 'R.4', 'R.5', 'R.6', 'R.7', 'R.8', 'R.9', 'R.6-27RB'
'TxDiversity' — Transmit diversity scheme	'FDD' or 'TDD'	'R.10', 'R.11', 'R.11-45RB', 'R.12', 'R.12-9RB'
'SpatialMux' — Closed-loop spatial multiplexing scheme	'FDD' or 'TDD'	'R.13', 'R.14'
	'TDD'	'R.43'
'MultiUser' — Multi-user MIMO scheme	'FDD' or 'TDD'	--
'Port5' — Single-antenna port, Port 5 (UE-specific beamforming)	'FDD' or 'TDD'	'R.25', 'R.26', 'R.27', 'R.28'
'Port7-14' — Up to eight-layer transmission, ports 7–14.	'FDD'	'R.43', 'R.44', 'R.45', 'R.45-1', 'R.48', 'R.50', 'R.51'
	'TDD'	'R.44', 'R.45', 'R.45-1', 'R.48', 'R.50', 'R.51'

Note: Reference channels 'R.6-27RB', 'R.12-9RB', and 'R.11-45RB' are custom RMCs configured for non-standard bandwidths but maintaining the same code rate as the standard versions.

Data Types: char

trdata — Information bits

vector | cell array containing one or two vectors

Information bits, specified as a vector or cell array containing one or two vectors of bit values. Each vector contains the information bits stream to be coded across the duration

of the generation, which represents multiple concatenated transport blocks. If the number of bits required across all subframes of the generation exceeds the length of the vectors provided, the `txdata` vector is looped internally. This feature allows you to enter a short pattern, such as `[1;0;0;1]`, which is repeated as the input to the transport coding. In each subframe of generation, the number of data bits taken from this stream comes from the elements of the `rmccfgout.PDSCH.TrBlkSizes` matrix.

When the `trdata` input contains empty vectors, there is no transport data. The transmission of PDSCH and its corresponding PDCCH are skipped in the `waveform` when the `trdata` contains empty vectors. The other physical channels and signals are transmitted as normal in generated `waveform`.

Example: `[1;0;0;1]`

Data Types: `double` | `cell`

Complex Number Support: Yes

duplexmode — Duplexing mode

'FDD' (default) | optional | 'TDD'

Duplexing mode, specified as a string. Optional. This string represents the frame structure type of the generated waveform.

Data Types: `char`

totsubframes — Total number of subframes

10 (default) | optional | positive numeric scalar

Total number of subframes, specified as a numeric scalar. Optional. This argument specifies the total number of subframes that form the resource grid.

Data Types: `double`

rmccfg — Reference channel configuration

structure

RMC configuration input structure

Reference channel configuration, specified as a structure. The structure defines any (or all) of the fields or subfields. The reference configuration structure with default parameters can easily be created using the `lteRMCDL` function. `lteRMCDL` generates

the various RMC configuration structures as defined in TS 36.101, Annex A.3, [1]. The configuration structure output by lteRMCDL can be used without change or modified as desired to generate an output waveform. rmccfg can contain these fields.

Parameter Field	Required or Optional	Values	Description
RC	Optional	'R0' (default), 'R1', 'R2', 'R3', 'R4', 'R5', 'R6', 'R7', 'R8', 'R9', 'R10', 'R11', 'R12', 'R13', 'R14', 'R25', 'R26', 'R27', 'R28', 'R43', 'R44', 'R45', 'R45-1', 'R48', 'R50', 'R51', 'R6-27RB', 'R12-9RB', 'R11-45RB'	Reference measurement channel (RMC) number or type, as specified in TS 36.101, Annex A.3
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports

Parameter Field	Required or Optional	Values	Description
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
CFI	Required	1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB') ^a
Ng	Required	'Sixth', 'Half', 'One', 'Two'	HICH group multiplier
PHICHDura	Required	Nonnegative scalar integer	PHICH duration
NFrame	Optional	0 (default), Nonnegative scalar integer	Frame number
NSubFrame	Required	Nonnegative scalar integer	Subframe number
TotSubFra	Required	Nonnegative scalar integer	Total number of subframes to generate
Windowing	Required	Nonnegative scalar integer	Number of time-domain samples over which windowing and overlapping of OFDM symbols is applied
DuplexMod	Optional	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
The following fields are only present when DuplexMode is 'TDD'.			

Parameter Field	Required or Optional	Values	Description
TDDCo	Optional	0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
SSC	Optional	0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
The following field is only present for 'Port7-14' transmission scheme			
CSIRS	Optional	'On' (default), 'Off', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]. You can also specify values in a cell array of configurations for each resource.	CSI-RS subframe configurations for one or more CSI-RS resources. Multiple CSI-RS resources can be configured from a single common subframe configuration or from a cell array of configurations for each resource.
The following fields are only present for 'Port7-14' transmission scheme and only required if CSIRSPeriod is not set to 'Off'.			
CSIRS	Required	scalar integer	Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1.
CSIRe	Optional	1 (default), 2, 4, 8	Array of number of CSI-RS antenna ports
The following field is only present for 'Port7-14' transmission scheme			
ZeroP	Optional	'Off' (default), 'On', Icsi-rs (0,...,154), [Tcsi-rs Dcsi-rs]. You can also specify values in a cell array of configurations for each resource.	Zero power CSI-RS subframe configurations for one or more zero power CSI-RS resource configuration index lists. Multiple zero power CSI-RS resource lists can be configured from a single common subframe configuration or from a cell array of configurations for each resource list.
The following field is only present for 'Port7-14' transmission scheme and only required if CSIRSPeriod is not set to 'Off'.			

Parameter Field	Required or Optional	Values	Description
ZeroP	Required	16-bit bitmap string (truncated if not 16 bits or '0' MSB extended), or a numeric list of CSI-RS configuration indices. You can also specify values in a cell array of configurations for each resource.	Zero power CSI-RS resource configuration index lists (TS 36.211 Section 6.10.5.2). Specify each list as a 16-bit bitmap string (if less than 16 bits, then '0' MSB extended). or as a numeric list of CSI-RS configuration indices from TS 36.211 Table 6.10.5.2-1 in the '4' CSI reference signal column. To specify multiple lists can be defined using a cell array of bitmap strings or numeric lists.
PDSCH	Required	Scalar structure	PDSCH transmission configuration substructure
SIB	Optional	Scalar structure	Include a SIB message by adding the SIB substructure to the <code>lteRMCDL</code> function configuration output structure, <code>rmccfgout</code> , after it is generated and before using the <code>rmccfgout</code> structure as input to <code>lteRMCDLTool</code> .
OCNGPDCCH	Required	'Off', 'On'	Enable PDCCH OFDMA channel noise generator (OCNG). b
OCNGPDCCH	Required	Scalar integer, 0 (default)	PDCCH OCNG power in dB
OCNGPDSCH	Required	'Off', 'On'	Enable PDSCH OCNG
OCNGPDSCH	Required	Scalar integer, defaults to <code>PDSCH.Rho</code> (default)	PDSCH OCNG power in dB
OCNGPDSCH	Required	scalar structure	PDSCH OCNG configuration substructure

Parameter Field	Required or Optional	Values	Description
OCNG	—	'Off', 'On', 'Disable' and 'Enable' are also accepted.	OFDMA channel noise generator Note: This parameter will be removed in a future release. Use the PDCCH and PDSCH-specific OCNG parameters instead.

a. CFI is equal to the number of symbols allocated to:

- PDCCH - 1 for $NDLRB < 10$
- PDCCH for $NDLRB \geq 10$

For the RMCs, the number of symbols allocated to PDCCH varies with channel bandwidth setting,

- 2 symbols for 20 MHz, 15 MHz, and 10 MHz
- 3 symbols for 5 MHz and 3 MHz
- 4 symbols for 1.4 MHz

In the TDD mode, only two OFDM symbols are allocated to PDCCH in subframes 1 and 6 irrespective of the channel bandwidth. Therefore, the CFI value varies per subframe for the 5 MHz and 3 MHz and 1.4 MHz channel bandwidths, that is for bandwidths where PDCCH symbol allocation is not two for other subframes.

b. The PDCCH ONCG fills the unused PDCCH resource elements with QPSK symbols using either single port or transmit diversity depending on the number of cell RS ports.

PDSCH substructure

The substructure PDSCH relates to the physical channel configuration and contains these fields:

Parameter Field	Required or Optional	Values	Description
TxScheme	Optional	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0',	PDSCH transmission scheme, specified as one of the following options. <ul style="list-style-type: none"> • 'Port0' — Single-antenna port, port 0

Parameter Field	Required or Optional	Values	Description
		'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	<ul style="list-style-type: none"> • 'TxDiversity' — Transmit diversity scheme • 'CDD' — Large delay CDD scheme • 'SpatialMux' — Closed-loop spatial multiplexing • 'MultiUser' — Multiuser MIMO scheme • 'Port5' — Single-antenna port, port 5 • 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). • 'Port8' — Single-antenna port, port 8 • 'Port7-14' — Up to eight-layer transmission, ports 7–14
Modulation	Required	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
NLayers	Optional	1 (default), 2, 3, 4, 5, 6, 7, 8	Number of transmission layers
NTxAnts	Required	Nonnegative scalar integer	Number of transmission antenna ports. This argument is only present for UE-specific demodulation reference symbols.
Rho	Optional	0 (default), Scalar	PDSCH resource element power allocation, in dB

Parameter Field	Required or Optional	Values	Description
RNTI	Required	Scalar integer	Radio network temporary identifier (RNTI) value (16 bits)
RVSeq	Required	Integer vector (0,1,2,3) ^a	Specifies the sequence of Redundancy Version (RV) indicators for each HARQ process. The number of elements in each row is equal to the number of transmissions in each HARQ process. If RVSeq is a row vector in a two codeword transmission, then the same RV sequence is applied to both codewords
RV	Required	Integer vector (0,1,2,3) ^b	Specifies the redundancy version for one or two codewords used in the initial subframe number, NSubframe . This parameter field is only for informational purposes and is Read-Only.
NHARQProc	Required	Nonnegative scalar integer (1..8)	Number of HARQ processes
NSubFrame	Required	Nonnegative scalar integer	Subframe number
NTurboDec	Optional	5 (default), Nonnegative scalar integer	Number of turbo decoder iteration cycles

Parameter Field	Required or Optional	Values	Description
PRBSet	Required	1- or 2-column integer matrix	<p>Zero-based physical resource block (PRB) indices corresponding to the slot wise resource allocations for this PDSCH. PRBSet can be assigned as:</p> <ul style="list-style-type: none"> • a column vector, the resource allocation is the same in both slots of the subframe, • a two-column matrix, this parameter specifies different PRBs for each slot in a subframe, • a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>
TrBlkSize	Required	One or two row numeric matrix	Transport block sizes for each subframe in a frame
CodedTrBlkSize	Required	One or two row numeric matrix	Coded transport block sizes for one or two codewords. This parameter field is only for informational purposes.
CSIMode	Required	'PUCCH 1-0', 'PUCCH 1-1', 'PUSCH 1-2', 'PUSCH 3-0', 'PUSCH 3-1'	CSI reporting mode

Parameter Field	Required or Optional	Values	Description
PMIMode	Optional	'Wideband ' (default), 'Subband '	PMI reporting mode
PMISet	Required	Integer vector (0, ..., 15)	Precoder matrix indication (PMI) set. It can contain either a single value, corresponding to single PMI mode, or multiple values, corresponding to multiple or subband PMI mode. The number of values depends on CellRefP, transmission layers and TxScheme. For more information about setting PMI parameters, see <code>ltePMIInfo</code> .
NSCID	Optional	0 (default), 1	Scrambling identity (ID) Present only for 'Port7-8', 'Port8' and 'Port7-14' transmission schemes.

Parameter Field	Required or Optional	Values	Description
W	Optional	Numeric matrix, [] (default)	<p>Present only for wideband UE-specific beamforming ('Port5', 'Port7-8', 'Port8', 'Port7-14'). The <i>NLayers-by-NTxAnts</i> precoding matrix chosen according to TS 36.101 Annex B.4. The resulting precoding matrix is randomly selected from:</p> <ul style="list-style-type: none"> the set defined in TS 36.211 Section 6.3.4 for 'Port5', 'Port7-8' and 'Port8' transmission schemes or from the set associated with CSI reporting as defined in TS 36.213 Section 7.2.4 for the 'Port7-14' transmission scheme. <p>For R. 48, the precoding matrix corresponding to PMI=0 is used.</p>

- a. A one or two row matrix (for one or two codewords)
- b. A one or two column matrix (for one or two codewords)

SIB substructure

If the substructure **SIB** has been added to *rmccfg*, SIB1 messages and the associated PDSCH and PDCCH can be generated. The **SIB** substructure includes these fields:

Parameter Field	Required or Optional	Values	Description
Data	Required	(0,1), bit array	SIB1 transport block information bits
VRBStart	Required	variable, see rules in TS 36.213 Section 7.1.6.3	Virtual RB allocation starting resource block, RB_{start} .

Parameter Field	Required or Optional	Values	Description
VRBLength	Required	variable, see rules in TS 36.213 Section 7.1.6.3	Length in terms of virtually contiguously allocated resource blocks, L_{CRBs} .
Enable	Optional	'On' (default), 'Off'	Enable/Disable SIB generation
DCIFormat	Optional	'Format1A' (default) or 'Format1C'	Downlink control information (DCI) format type string
AllocationType	Optional	0 (default) or 1, single bit flag	Localized (0) or distributed (1) allocation of virtual resource blocks for Resource allocation type 2
The following parameter is only required for (DCIFormat = 'Format1A')			
N1APRB	Optional	2 or 3	Transport block set selection parameter, N_{PRB}^{1A} Indicates the column in TS 36.213, Table 7.1.7.2.1-1 for transport block size selection. The default is the smallest transport block size, in either column 2 or 3, that provides a valid transport block size bigger than or equal to the length of the Data field. Also see TS 36.212 Section 5.3.3.1.3 and TS 36.213 Section 7.1.7.
The following parameter is only required for distributed allocation (AllocationType = 1)			
Gap	Required	0 or 1	Distributed allocation gap, '0' for $N_{gap,1}$ or '1' for $N_{gap,2}$

The set of valid transport block sizes is specified in TS 36.213, Table 7.1.7.2.1-1, [4]. Only columns 2 and 3 apply to the SIB DL-SCH. The Data field is padded with zeros to the closest valid size from this table.

Note:

- Per TS 36.321, Section 6.1.1 [5], the lowest order information bit of the `SIB.Data` field is mapped to the most significant bit of the SIB1 transport block.
- For subframe 5, per TS 36.101, Annex A.3 [1], reference PDSCH transmissions are not scheduled in subframe 5 except for the SIB1 associated PDSCH.
- Setting the `OCNG` parameter field 'On' fills all unused, unscheduled PDSCH resource elements with QPSK modulated random data.
- The values for CFI and PRBSet can vary per subframe. If these parameters are arrays, then the function cyclically steps through the elements of the array starting with the index given by $\text{mod}(\text{NSubframe}, \text{length}(\text{parameter}))$. When 'parameter' is PRBSet, the parameter must be a cell array of column vectors or slot-wise matrices.
- The PHICH symbols carry a single ACK on the first PHICH instance in each PHICH group.

OCNGPDSCH substructure

The substructure, `OCNGPDSCH`, defines the OCNG patterns in associated RMCs and tests according to TS 36.101, Section A.5 [1]. `OCNGPDSCH` contains these fields which can also be customized with the full range of PDSCH-specific values.

Parameter Field	Required or Optional	Values	Description
Modulation	Required	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
TxScheme	Required	Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity',	OCNG transmission scheme, specified as one of these options. <ul style="list-style-type: none"> • 'Port0' — Single-antenna port, port 0 • 'TxDiversity' — Transmit diversity scheme

Parameter Field	Required or Optional	Values	Description
		'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	<ul style="list-style-type: none"> • 'CDD' — Large delay CDD scheme • 'SpatialMux' — Closed-loop spatial multiplexing • 'MultiUser' — Multiuser MIMO scheme • 'Port5' — Single-antenna port, port 5 • 'Port7-8' — Single-antenna port, port 7 (when NLayers = 1). Dual layer transmission, ports 7 and 8 (when NLayers = 2). • 'Port8' — Single-antenna port, port 8 • 'Port7-14' — Up to eight-layer transmission, ports 7–14
RNTI	Required	Scalar integer default 0	Radio network temporary identifier (RNTI) value (16 bits) for OCNG

Data Types: struct

Output Arguments

waveform — Generated RMC time-domain waveform

numeric matrix

Generated RMC time-domain waveform, returned as a numeric matrix of size T -by- P . Where T is the number of time-domain samples and P is the number of antennas.

Data Types: double

Complex Number Support: Yes

grid — Populated resource grid

numeric 3-D array

Populated resource grid, returned as a numeric 3-D array of resource elements for several subframes across all configured antenna ports.

Data Types: `double`

Complex Number Support: Yes

rmccfgout — Reference channel configuration

scalar structure

Reference channel configuration, returned as a scalar structure. `rmccfgout` contains information about the OFDM-modulated waveform and RMC-specific configuration parameters. Structure contents and definitions align with `rmccfg`.

Data Types: `struct`

References

- [1] 3GPP TS 36.101. “User Equipment (UE) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.211. “Physical channels and modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [4] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [5] 3GPP TS 36.321. “Medium Access Control (MAC) protocol specification.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLConformanceTestTool` | `lteRMCDL` | `lteRMCULTool` | `lteTestModelTool`

Introduced in R2014a

lteRMCUL

Uplink reference measurement channel or FRC configuration

Syntax

```
rmccfgout = lteRMCUL(rc,duplexmode,totsubframes)
rmccfgout = lteRMCUL(rmccfg)
```

Description

`rmccfgout = lteRMCUL(rc,duplexmode,totsubframes)` returns `rmccfgout`, a configuration structure for the reference channel defined by `rc` using a channel-specific default configuration. It returns `rmccfgout`, a structure containing the configuration parameters required to generate a given reference channel waveform using fixed reference channel (FRC) generator tool, `lteRMCULTool`. The field names and default values of FRCs are in accordance with the definition found in TS 36.104, Annex A [1]. `duplexmode` and `totsubframes` are optional input parameters which define the duplexing mode and total number of subframes to be generated.

`rmccfgout = lteRMCUL(rmccfg)` returns `rmccfgout`, a configuration structure for the reference channel partially, or wholly, defined by the input structure, `rmccfg`. The input structure, `rmccfg`, can define any, or all, of the parameters or substructure parameters, and the output structure, `rmccfgout` retains the defined parameters. The undefined fields are given appropriate default values. The `rmccfgout` structure can be used by the FRC generator tool to generate a waveform. `rmccfg` must contain at least the `RC` field.

Examples

Create Uplink RMC Configuration

Create a configuration structure for RC A1-1 as specified in TS 36.104.

```
rmc.RC = 'A1-1';
```

```
rmc.NCellID = 100;
rmc.PUSCH.Modulation = 'QPSK';
rmcOut = lteRMCUL(rmc)
rmcOut.PUSCH
```

```
rmcOut =
```

```
          RC: 'A1-1'
          NULRB: 6
          NCellID: 100
          NFrame: 0
          NSubframe: 0
CyclicPrefixUL: 'Normal'
CyclicShift: 0
Shortened: 0
Hopping: 'Off'
SeqGroup: 0
TotSubframes: 10
          RNTI: 1
          NTxAnts: 1
          Windowing: 0
          DuplexMode: 'FDD'
          PUSCH: [1x1 struct]
```

```
ans =
```

```
          Modulation: 'QPSK'
          NLayers: 1
DynCyclicShift: 0
          NBundled: 0
          BetaACK: 2
          BetaCQI: 2
          BetaRI: 2
NHARQProcesses: 8
          RVSeq: [0 2 3 1]
          RV: 0
          NTurboDecIts: 5
          OrthCover: 'On'
          PMI: 0
          PRBSet: [6x1 double]
          TrBlkSizes: [600 600 600 600 600 600 600 600 600 600]
          CodedTrBlkSizes: [1728 1728 1728 1728 1728 1728 1728 1728 1728 1728]
```

Input Arguments

rc — Reference channel number

'A1-1' | 'A1-2' | 'A1-3' | 'A1-4' | 'A1-5' | 'A2-1' | 'A2-2' | 'A2-3' |
'A3-1' | 'A3-2' | 'A3-3' | 'A3-4' | 'A3-5' | 'A3-6' | 'A3-7' | 'A4-1' |
'A4-2' | 'A4-3' | 'A4-4' | 'A4-5' | 'A4-6' | 'A4-7' | 'A4-8' | 'A5-1' |
'A5-2' | 'A5-3' | 'A5-4' | 'A5-5' | 'A5-6' | 'A5-7' | 'A7-1' | 'A7-2' |
'A7-3' | 'A7-4' | 'A7-5' | 'A7-6' | 'A8-1' | 'A8-2' | 'A8-3' | 'A8-4' |
'A8-5' | 'A8-6' | 'A3-2-9RB' | 'A4-3-9RB'

Reference channel number, specified as a string. This argument represents the reference measurement channel (RMC) number, or fixed reference channel (FRC), as described in TS 36.104[1].

Data Types: char

duplexmode — Duplexing mode

'FDD' (default) | optional | 'TDD'

Duplexing mode, specified as a string. It represents the frame structure type.

Data Types: char

totsubframes — Total number of subframes

10 (default) | optional | positive numeric scalar

Total number of subframes, specified as a numeric scalar. Optional. This argument specifies the total number of subframes that form the resource grid.

Data Types: double

rmccfg — RMC configuration

Structure

RMC configuration, specified as a structure. `rmccfg` must contain at least the RC field. `rmccfg` can contain the following fields.

Parameter Field	Required or Optional	Values	Description
RC	Required	'A1-1', 'A1-2', 'A1-3', 'A1-4', 'A1-5', 'A2-1', 'A2-2', 'A2-3', 'A3-1', 'A3-2', 'A3-3', 'A3-4', 'A3-5', 'A3-6', 'A3-7', 'A4-1', 'A4-2', 'A4-3', 'A4-4', 'A4-5', 'A4-6', 'A4-7', 'A4-8', 'A5-1', 'A5-2', 'A5-3', 'A5-4', 'A5-5', 'A5-6', 'A5-7', 'A7-1', 'A7-2', 'A7-3', 'A7-4', 'A7-5', 'A7-6', 'A8-1', 'A8-2', 'A8-3', 'A8-4', 'A8-5', 'A8-6', 'A3-2-9RB', 'A4-3-9RB'	Reference measurement channel (RMC) number or type, as specified in TS 36.101, Annex A.3 Reference measurement channel (RMC) number or type, as specified in TS 36.104 Annex A. [1].
SRS	Optional	'off' (default), 'on'	String to enable SRS related configuration parameters (set SRS to 'on') for RMCs which optionally support SRS, or a complete or part SRS structure. If absent, no SRS configuration is created.

Data Types: struct

Output Arguments

rmccfgout — Configuration parameters

Structure

Configuration parameters structure

Configuration parameters, returned as a structure. `rmccfgout` contains the following fields.

Parameter Field	Values	Description
RC	'A1-1', 'A1-2', 'A1-3', 'A1-4', 'A1-5', 'A2-1', 'A2-2', 'A2-3', 'A3-1', 'A3-2', 'A3-3', 'A3-4', 'A3-5', 'A3-6', 'A3-7', 'A4-1', 'A4-2', 'A4-3', 'A4-4', 'A4-5', 'A4-6', 'A4-7', 'A4-8', 'A5-1', 'A5-2', 'A5-3', 'A5-4', 'A5-5', 'A5-6', 'A5-7', 'A7-1', 'A7-2', 'A7-3', 'A7-4', 'A7-5', 'A7-6', 'A8-1', 'A8-2', 'A8-3', 'A8-4', 'A8-5', 'A8-6', 'A3-2-9RB', 'A4-3-9RB'	Reference channel number
NULRB	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
NCellID	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
NSubFrame	0 (default) Nonnegative scalar integer	Initial subframe number
CyclicPrefix	'Normal' (default), 'Extended'	Cyclic prefix length

Parameter Field	Values	Description
CyclicShift	0, 1, 2, 3, 4, 5, 6, 7	Cyclic shift. This argument yields <i>n1_DMRS</i> .
Shortened	0 (default), 1	Subframe shortened flag. If the function sets the flag to 1, the last symbol of the subframe is not used. Subframes with possible SRS transmission require this flag to be set.
Hopping	'Off' (default), 'Group', or 'Sequence'	Hopping type
SeqGroup	0 (default), 0 ... 29, Nonnegative scalar integer.	PUSCH sequence group assignment (<i>delta_SS</i>)
TotSubFrames	10 (default) Positive scalar integer	Total number of subframes to generate This argument specifies the total number of subframes that form the resource grid.
RNTI	1 (default) Numeric scalar	Radio network temporary identifier (RNTI) value (16 bits)
NTxAnts	1, 2, 4	Number of transmission antennas
Windowing	Nonnegative scalar integer	The number of time-domain samples over which windowing and overlapping of SC-FDMA symbols is applied
DuplexMode	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex It represents the frame structure type.
PUSCH	Structure	PUSCH transmission configuration
SRS	Structure	Sounding Reference Signal (SRS) configuration

PUSCH substructure

The substructure PUSCH relates to the physical channel configuration and contains these fields:

Parameter Field	Values	Description
Modulation	'QPSK', '16QAM', '64QAM'	Modulation format
NLayers	1, 2, 3, 4	Number of transmission layers
DynCyclicSh	0, 1, 2, 3, 4, 5, 6, 7	Cyclic shift for DMRS (yields $n2_DMRS$)
NBundled	0, 1, 2, 3, 4, 5, 6, 7, 8, 9	HARQ-ACK bundling scrambling sequence index
BetaACK	Scalar integer	Modulation and coding scheme (MCS) offset for HARQ-ACK bits, returned as a scalar integer.
BetaCQI	Scalar integer	Modulation and coding scheme (MCS) offset for CQI and PMI bits
BetaRI	Scalar integer	Modulation and coding scheme (MCS) offset for RI bits
NHARQProces	1, 2, 3, 4, 5, 6, 7, 8	Number of HARQ processes
RVSeq	Numeric matrix	Redundancy version (RV) indicator, returned as a numeric matrix. This argument is a 1- or 2-row matrix that specifies the redundancy version (RV) indicator for one or two codewords. The RV indicator specified in each column is applied to the transmission in a HARQ process. The number of transmissions in a HARQ process equals the number of columns in RVSeq , where the row defines the RV indicator for one or two codewords. In a two-codeword transmission, if RVSeq is a row vector, the same RV indicator is applied to both codewords.
RV	Numeric matrix	Redundancy version (RV) indicator in initial subframe, returned as a

Parameter Field	Values	Description
		numeric matrix. This argument is a 1- or 2-column vector that specifies the redundancy version for one or two codewords used in the initial subframe number, <i>NSubframe</i> . This parameter field is only for informational purposes and is read-only.
NTurboDecIt	Positive scalar integer	Number of turbo decoder iteration cycles
OrthCover	'Off' (default), 'On'	Orthogonal cover sequence flag. Applies ('On'), or does not apply ('Off'), orthogonal cover sequence, <i>w</i> (<i>Activate-DMRS-with OCC</i>)
PMI	0 ... 23	Scalar precoder matrix indication (PMI) to be used during precoding
PRBSet	Numeric matrix	Physical resource block set of indices, returned as a numeric matrix. This argument is a 1- or 2-column matrix that contains the 0-based physical resource block indices (PRBs) corresponding to the resource allocations for this PUSCH.
TrBlkSizes	Numeric vector	Transport block sizes for each subframe in a frame
CodedTrBlkS	Numeric vector	Coded transport block sizes for each a subframe in a frame, returned as a numeric vector. This parameter field is only for informational purposes and is read-only.

SRS substructure

The substructure SRS contains these fields:

Parameter Field	Values	Description
NTxAnts	1 (default), 2, 4	Number of transmission antennas
BWConfig	0, 1, 2, 3, 4, 5, 6, 7	Cell-specific SRS Bandwidth Configuration value (C_{SRS})
BW	0, 1, 2, 3	UE-specific SRS Bandwidth value (B_{SRS})
ConfigIdx	0,...,644	Configuration index (I_{SRS}) for UE-specific periodicity (T_{SRS}) and subframe offset (T_{offset}).
TxComb	0 or 1	Transmission comb. Controls SRS positions; SRS is transmitted in 6 carriers per resource block on odd (1) and even (0) resource indices.
HoppingBW	0, 1, 2, 3	SRS Frequency hopping configuration index (b_{hop})
FreqPosition	0,...,23	Frequency domain position (n_{RRC})
CyclicShift	0 (default), 0 ... 7, Nonnegative scalar integer.	UE-specific cyclic shift (n_{SRS}^{cs})
SeqGroup	0 (default), 0 ... 29, Nonnegative scalar integer.	SRS sequence group number (u)
SeqIdx	0 or 1	Base sequence number (v)
SubframeCon	0,...,15	Sounding reference signal (SRS) subframe configuration
The following fields are present only when DuplexMode is set to 'TDD'.		
NF4RachPre	0, 1, 2, 3, 4, 5,6	Number of RACH preamble frequency resources of Format 4 in $UpPTS$
OffsetIdx	0 or 1	Choice of SRS Subframe Offset in the case of 2 ms SRS periodicity. This parameter indexes the two SRS Subframe Offset entries in the row specified by the ConfigIdx parameter in table 8.2-2 of TS 36.213 for the SRS Configuration Index.

References

- [1] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

- [2] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteRMCDL | lteRMCULTool | lteTestModel

Introduced in R2014a

lteRMCULTool

Uplink RMC or FRC waveform generation

Syntax

```
[waveform,grid,rmccfgout] = lteRMCULTool  
[waveform,grid,rmccfgout] = lteRMCULTool(rc,trdata,duplexmode,  
totsubframes)  
[waveform,grid,rmccfgout] = lteRMCULTool(rmccfg,trdata)  
[waveform,grid,rmccfgout] = lteRMCULTool(rmccfg,trdata,cqi,ri,ack)
```

Description

[waveform,grid,rmccfgout] = lteRMCULTool launches a graphical user interface (GUI) for the parameterization and generation of the reference measurement channel (RMC) waveforms. The main function output variables are specified in the GUI but they can also be assigned to the `waveform`, `grid`, and `rmccfgout` function output variables, representing the time-domain waveform, resource grid, and RMC configuration structure, respectively. If assigning output variables, it returns `waveform`, the generated reference measurement channel waveform and `grid` representing the populated resource grid for all the physical channels specified in TS 36.104, Annex A [1]. `rmccfgout` is a structure containing information about the SC-FDMA modulated waveform as described in `lteSCFDMAInfo` in addition to the RMC specific configuration parameters as described in `lteRMCUL`. The RMC waveform can be configured via a GUI or by passing the required input parameters in a function call.

`waveform` is a T -by- P matrix, where T is the number of time-domain samples and P is the number of antennas. `grid` is a 3-D array of resource elements for a number of subframes across all configured antenna ports, as described in “Data Structures”. `rmccfgout` is a structure containing information about the SC-FDMA modulated waveform as well as RMC configuration parameters.

[waveform,grid,rmccfgout] = lteRMCULTool(rc,trdata,duplexmode,totsubframes) returns the `waveform`, `grid`, and `rmccfgout` for the default reference measurement channel defined by `rc`, using the information bits, `trdata`. `duplexmode`

and `totsubframes` are optional input arguments and define the duplex mode of the generated waveform and total number of subframes that make up the `grid`.

`[waveform,grid,rmccfgout] = lteRMCCULTool(rmccfg,trdata)` generates the `waveform`, `grid` and `rmccfgout` in the same way as above except it takes the user defined reference channel structure `rmccfg` as input parameter. The reference configuration structure with default parameters can easily be created with the function `lteRMCCUL` which is designed to generate the various RMC configuration structures as per TS 36.104, Annex A [1]. This configuration structure then can be modified as per requirement and can be used in the generation of `waveform`.

`[waveform,grid,rmccfgout] = lteRMCCULTool(rmccfg,trdata,cqi,ri,ack)` generates the `waveform`, `grid` and `rmccfgout` in the same way as above but with support for control information transmission on PUSCH specified in vectors `cqi`, `ri`, and `ack`. Together, these three fields form UCI. The vectors `cqi`, `ri`, and `ack` can be empty vectors if these particular control information bits are not present in this transmission. The UCI is encoded for PUSCH transmission using the processing defined in TS 36.212, Section 5.2.4 [2], consisting of UCI coding and channel interleaving. The vectors `cqi`, `ri`, and `ack` are not treated as data streams. Thus, each subframe will contain the same CQI, RI, and ACK information bits.

Examples

Generate Uplink RMC Waveform

 
Generate a time-domain signal and a 2-D array of the resource elements for a modified A1-1 fixed reference channel.

Initialize the `frc` configuration structure and change the modulation scheme to '16QAM'. Generate the `txWaveform`, `txGrid`, and output the configuration structure. Create a spectrum analyzer object, setting the sampling rate. Use the `step` method to plot the waveform.

```
frc = lteRMCCUL('A1-1');
frc.PUSCH.Modulation = '16QAM';

[txWaveform,txGrid,rmcCfgOut] = lteRMCCULTool(frc,[1;0;0;1]);

h = dsp.SpectrumAnalyzer('SampleRate', rmcCfgOut.SamplingRate);
step(h,txWaveform);
```

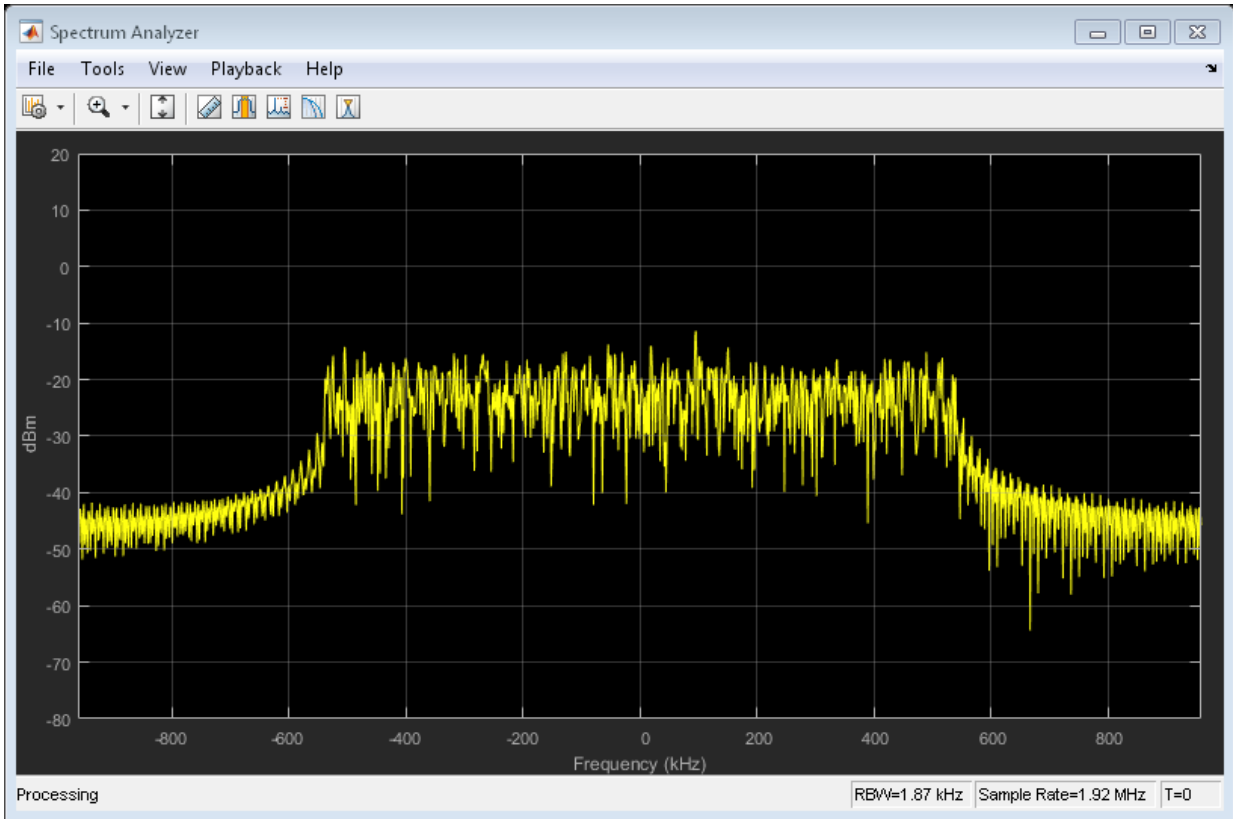

Launch LTE Downlink RMC Generator Tool

This example launches the tool to generate a downlink reference measurement channel waveform.

The LTE Downlink RMC Generator dialog box appears when you execute the `lteRMCDLTool` function with no input arguments

```
lteRMCDLTool;
```

LTE Downlink RMC Generator

Generate PDSCH reference measurement channel (RMC) waveforms. These are specified in TS36.101 Annex A.3 for UE performance testing.

Reference channel	R.0	RMC parameter summary
Duplex mode	FDD	
Transmission scheme	Port0	Number of downlink resource blocks 15
Cell identity	0	Transmit antenna ports 1
RNTI	1	Modulation 16QAM
RV sequence	[0 1 2 3]	Transmission layers 1
Rho (dB)	0	Total info bits per frame per codeword 2016 bits
OCNG	Off	Codeword input data
Number of subframes	10	
Number of codewords	1	Transport info bit stream (codeword 1) User defined
PMI set	[1]	[1; 0; 0; 1]
Number of HARQ processes	8	Transport info bit stream (codeword 2) User defined
Windowing (samples)	0	[1; 0; 0; 1]
Waveform output variable	rmcwaveform	
Resource grid output variable	rmcgrid	
RMC configuration output variable	rmcconfig	

Use the GUI interface to generate the default waveform or adjust default settings prior to waveform generation

- “Generate LTE Uplink RMC Waveforms”

Input Arguments

rc — Reference measurement channel

'A1-1' | 'A1-2' | 'A1-3' | 'A1-4' | 'A1-5' | 'A2-1' | 'A2-2' | 'A2-3' |
'A3-1' | 'A3-2' | 'A3-3' | 'A3-4' | 'A3-5' | 'A3-6' | 'A3-7' | 'A4-1' |
'A4-2' | 'A4-3' | 'A4-4' | 'A4-5' | 'A4-6' | 'A4-7' | 'A4-8' | 'A5-1' |
'A5-2' | 'A5-3' | 'A5-4' | 'A5-5' | 'A5-6' | 'A5-7' | 'A7-1' | 'A7-2' |
'A7-3' | 'A7-4' | 'A7-5' | 'A7-6' | 'A8-1' | 'A8-2' | 'A8-3' | 'A8-4' |
'A8-5' | 'A8-6' | 'A3-2-9RB' | 'A4-3-9RB'

String representing reference measurement channel number, as specified in TS 36.104 [1].

Data Types: char

trdata — Information bits

column vector | cell array of one or two column vectors

Information bits, specified as a column vector or a cell array containing one or two column vectors of bit values. Each vector contains the information bits stream to be coded across the duration of the generation, which represents multiple concatenated transport blocks. Internally these vectors are looped if the number of bits required across all subframes of the generation exceeds the length of the vectors provided. This allows for the user to enter a short pattern, such as [1;0;0;1], that is repeated as the input to the transport coding. In each subframe of generation, the number of data bits taken from this stream is given by the elements of the `TrBlkSizes` matrix, a field of the `PUSCH` substructure of the `RMC` configuration structure, `rmccfgout`.

Data Types: double | cell

duplexmode — Duplexing mode

'FDD' (default) | Optional | 'TDD'

Duplexing mode, specified as a string. Optional. This string represents the frame structure type of the generated waveform.

Data Types: char

totsubframes — Total number of subframes

10 (default) | Optional | positive numeric scalar

Total number of subframes, specified as a numeric scalar. Optional. This argument specifies the total number of subframes that form the resource grid.

Data Types: double

rmccfg — Reference channel configuration

structure

Reference channel configuration, specified as a structure. The structure defines any, or all, of the fields or subfields.

Data Types: struct

cqi — CQI information bits

numeric vector

CQI information bits, specified as a numeric vector. CQI stands for channel quality information. **cqi** can be empty if these particular control information bits are not present in the transmission. **cqi** is not treated as a data stream, and thus each subframe will contain the same CQI information bits.

Data Types: double

ri — RI information bits

numeric vector

RI information bits, specified as a numeric vector. RI stands for rank indication. **ri** can be empty if these particular control information bits are not present in the transmission. **ri** is not treated as a data stream, and thus each subframe will contain the same RI information bits.

Data Types: double

ack — ACK information bits

numeric vector

ACK information bits, specified as a numeric vector. ACK stands for acknowledgement in automatic repeat request (ARQ) protocols. **ack** can be empty if these particular control information bits are not present in the transmission. **ack** is not treated as a data stream, and thus each subframe will contain the same ACK information bits.

Data Types: double

Output Arguments

waveform — Generated RMC time-domain waveform

numeric matrix

Generated RMC time-domain waveform, returned as a numeric matrix of size T -by- P , where T is the number of time-domain samples and P is the number of antennas.

Data Types: `double`

Complex Number Support: Yes

grid — Populated resource grid

numeric 3-D array

Populated resource grid, returned as a numeric 3-D array of resource elements for a number of subframes across all configured antenna ports.

Data Types: `double`

Complex Number Support: Yes

rmccfgout — RMC configuration

structure

RMC configuration, returned as a structure. The structure contains information about the SC-FDMA modulated waveform, as described in `lteSCFDMAInfo`, and the RMC-specific configuration parameters, as described in `lteRMCUL`. The RMC waveform can be configured via a graphical user interface (GUI) or by passing the required input parameters in a function call.

Data Types: `struct`

References

- [1] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLConformanceTestTool` | `lteRMCDLTool` | `lteRMCUL` | `lteTestModelTool`

Introduced in R2014a

lteRateMatchConvolutional

Convolutional rate matching

Syntax

```
out = lteRateMatchConvolutional(in,outlen)
```

Description

`out = lteRateMatchConvolutional(in,outlen)` rate matches the input data vector, `in`, to create an output vector, `out`, of length `outlen`. This function includes the stages of subblock interleaving, bit collection and bit selection, and pruning defined for convolutionally encoded data. For more information, see section 5.1.4.2 of [1]. The input data is assumed to comprise a concatenation of 3 subblocks, each of which is then interleaved prior to virtual circular buffer creation. No special processing is given to input filler bits.

Examples

Perform Convolutional Rate Matching

Perform convolutional rate matching of a coded block vector of length 132, with the output length set to 50.

```
rateMatched = lteRateMatchConvolutional(ones(132,1),50);  
size(rateMatched)
```

```
ans =
```

```
50     1
```

Input Arguments

in — Input data

numeric column vector

Input data, specified as a complex-valued column vector. Input data is assumed to comprise a concatenation of 3 subblocks each of which is then interleaved prior to virtual circular buffer creation. No special processing is given to input filler bits.

Example: `ones(5,1)`

Data Types: `double` | `uint8` | `uint16` | `uint32` | `uint64` | `int8` | `int16` | `int32` | `int64`

outLen — Output vector length

nonnegative scalar integer

Output vector length, specified as a nonnegative scalar integer.

Data Types: `double`

Output Arguments

out — Rate matched output

numeric column vector

Rate matched output, returned as numeric column vector.

Data Types: `double` | `uint8` | `uint16` | `uint32` | `uint64` | `int8` | `int16` | `int32` | `int64`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteBCH` | `lteConvolutionalEncode` | `lteDCIEncode` | `lteRateMatchTurbo` | `lteRateRecoverConvolutional`

Introduced in R2014a

lteRateMatchTurbo

Turbo rate matching

Syntax

```
out = lteRateMatchTurbo(in,outlen,rv)
out = lteRateMatchTurbo(in,outlen,rv,chs)
```

Description

`out = lteRateMatchTurbo(in,outlen,rv)` performs rate matching of the input data, `in`, to create the output vector, `out`, of length `outlen`. The input data could be a vector or a cell array. This function includes the stages of subblock interleaving, bit collection and bit selection, and pruning defined for turbo encoded data. For more information, see section 5.1.4.1 of TS 36.212 [1].

The input data can be a single vector or a cell array of vectors assumed to be code blocks. In the cell array case, each vector is rate matched separately and the results are concatenated into the single output vector, `out`. The length of each nonempty input vector must be an integer multiple of 3. The parameter `rv` controls the redundancy version of the output. The bit selection stage assumes a QPSK transmission mapped onto a single layer. It also assumes no restriction on the number of soft bits, as in an uplink UL-SCH transport channel.

`out = lteRateMatchTurbo(in,outlen,rv,chs)` allows additional control of the bit selection stage through selection of parameters for the soft buffer size and physical channel configuration in the `chs` input structure.

Examples

Perform Turbo Rate Matching

Rate match an input vector of 132 bits to a length of 100 with the RV parameter set to 0.

```
codedBlklen = 132;
invec = ones(codedBlklen,1);
```

```

outlen = 100;
rv = 0;

rmatched = lteRateMatchTurbo(invec,outlen,rv);
size(rmatched)

ans =

    100     1

```

Input Arguments

in — Input data

vector | cell array of vectors

Input data, specified as a single vector or a cell array of vectors, assumed to be code blocks. In the cell array case, each vector is rate matched separately and the results are concatenated into the single output vector, **out**. The length of each nonempty input vector must be an integer multiple of 3.

Example: `ones(132,1)`

Data Types: double | uint8 | uint16 | uint32 | uint64 | int8 | int16 | int32 | int64 | cell

outlen — Output vector length

nonnegative integer

Output vector length, specified as a nonnegative integer.

Example: 3

Data Types: double

rv — Redundancy version control

0 | 1 | 2 | 3

Redundancy version control, specified as 0, 1, 2, or 3.

Example: 1

Data Types: double

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure. It allows additional control of the bit selection stage through parameters for the soft buffer size and physical channel configuration.

For downlink turbo coded transport channels, you can control the soft buffer dimensions by including either `NIR` or the combined set of `NSoftbits`, `TxScheme`, and `DuplexMode`. If `DuplexMode` is 'TDD', also specify `TDDConfig`. If included, `NIR`, takes precedence for controlling the soft buffer dimensions. When neither of these optional `chs` fields (`NIR` or the set including `NSoftbits`) are present, the function assumes an uplink turbo coded transport channel and places no limit on the number of soft bits.

`chs` can contain the following fields.

Modulation — Modulation scheme

'QPSK' | '16QAM' | '64QAM' | '256QAM'

Modulation scheme, specified as a string. Accepted values are 'QPSK', '16QAM', '64QAM', and '256QAM'.

Data Types: char

NLayers — Number of transmission layers for transport block

1 (default) | 2 | 3 | 4

Number of transmission layers for transport block, specified as 1 (default), 2, 3, or 4. Not necessary if `TxScheme` is set to 'Port0', 'TxDiversity', or 'Port5'.

Data Types: double

TxScheme — Transmission scheme

'Port0' (default) | optional | 'TxDiversity' | 'CDD' | 'SpatialMux' | 'MultiUser' | 'Port5' | 'Port7-8' | 'Port8' | 'Port7-14'

Downlink rate matching only. Transmission scheme, specified as a string. Optional. Accepted values and their descriptions are shown in the following table.

Transmission scheme	Description
'Port0'	Single antenna port, port 0. Default.
'TxDiversity'	Transmit diversity

Transmission scheme	Description
'CDD'	Large delay CDD
'SpatialMux'	Closed loop spatial multiplexing
'MultiUser'	Multi-user MIMO
'Port5'	Single-antenna port, Port 5
'Port7-8'	Single-antenna port, port 7, if NLayers is set to 1. Dual layer transmission, port 7 and 8, if NLayers is set to 2.
'Port8'	Single-antenna port, Port 8
'Port7-14'	Up to eight layer transmission, ports 7–14

NIR — Soft buffer size for entire input transport block

nonnegative integer

Soft buffer size for entire input transport block, specified as a nonnegative integer.

Data Types: double

NSoftbits — Total number of soft channel bits

nonnegative integer

Total number of soft channel bits, specified as a nonnegative integer.

Data Types: double

DuplexMode — Duplex mode

'FDD' (default) | optional | 'TDD'

Duplex mode, specified as a string. Optional. Accepted values are 'FDD' and 'TDD'.

Data Types: char

TDDConfig — Uplink or downlink configuration

0 (default) | optional | nonnegative scalar integer (0..6)

Uplink or downlink configuration, specified as a nonnegative scalar integer from 0 through 6. Optional. Only required if DuplexMode is set to 'TDD'.

Data Types: double

Data Types: struct

Output Arguments

out — Turbo rate matched output

numeric column vector

Turbo rate matched output, returned as a numeric column vector.

Data Types: double | uint8 | uint16 | uint32 | uint64 | int8 | int16 | int32 | int64

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteDLSCH | lteRateMatchConvolutional | lteRateRecoverTurbo | lteTurboEncode | lteULSCH

Introduced in R2013b

lteRateRecoverConvolutional

Convolutional rate matching recovery

Syntax

```
out = lteRateRecoverConvolutional(in,outlen)
```

Description

`out = lteRateRecoverConvolutional(in,outlen)` performs rate recovery of the input data vector, `in`, to create an output vector, `out`, of length `outlen`. This function is the inverse of the rate matching operation for convolutionally encoded data. For more information, see `lteRateMatchConvolutional`. This function includes the inverses of the subblock interleaving, bit collection and bit selection, and pruning stages. This function also implements additive soft combining of the input data elements in the case where repetition occurred during the original rate matching.

Examples

Perform Convolutional Rate Recovery

Perform rate recovery after rate matching. The returned vector has the same length as the input to rate matching.

```
codedBlklen = 132;  
rateMatched = lteRateMatchConvolutional(ones(codedBlklen ,1),50);  
rateRecovered = lteRateRecoverConvolutional(rateMatched,codedBlklen);  
size(rateRecovered)
```

```
132    1
```

The output variable, `rateRecovered`, is a vector of the same length as the input to `rate matching`.

Input Arguments

in — Input data

numeric column vector

Input data, specified as a numeric column vector.

Data Types: `double` | `uint8` | `uint16` | `uint32` | `uint64` | `int8` | `int16` | `int32` | `int64`

outLen — Output vector length

nonnegative scalar integer

Output vector length, specified as a nonnegative scalar integer.

Example: 50

Data Types: `double`

Output Arguments

out — Rate recovered output

numeric column vector

Rate recovered output, returned as a numeric column vector.

Data Types: `double` | `uint8` | `uint16` | `uint32` | `uint64` | `int8` | `int16` | `int32` | `int64`

See Also

`lteBCHDecode` | `lteConvolutionalDecode` | `lteDCIDeCode` | `lteRateMatchConvolutional` | `lteRateRecoverTurbo`

Introduced in R2014a

lteRateRecoverTurbo

Turbo rate recovery

Syntax

```
out = lteRateRecoverTurbo(in, trblklen, rv)
out = lteRateRecoverTurbo(in, trblklen, rv, chs, cbsbuffers)
```

Description

`out = lteRateRecoverTurbo(in, trblklen, rv)` performs rate recovery of the input vector, `in`, creating a cell array of vectors, `out`. `out` represents the turbo encoded code blocks before concatenation. This function is the inverse of the rate matching operation for turbo encoded data. For more information, see `lteRateMatchTurbo` and TS 36.212, Section 5.1.4.1 [1]. This function includes the inverses of the subblock interleaving, bit collection, and bit selection and pruning stages. The dimensions of `out` are deduced from `trblklen`, which represents the length of the original encoded transport block. This parameterization is required to recover the original number of code blocks, their encoded lengths, and the locations of any filler bits. The parameter `rv` controls the redundancy version of the output. The bit selection recovery assumes a QPSK transmission mapped onto a single layer. It also assumes no restriction on the number of soft bits, as in an uplink UL-SCH transport channel.

`out = lteRateRecoverTurbo(in, trblklen, rv, chs, cbsbuffers)` specifies two additional inputs. The `chs` input structure allows additional control of the bit selection recovery stage through parameters for the soft buffer size and physical channel configuration. The `cbsbuffers` input allows combining with pre-existing soft information for the HARQ process.

Examples

Perform Turbo Rate Recovery

Create a codeword from a transport block then rate recover the codeword back into a set of coded code blocks. The transport block is originally segmented into a single code block

so the `rateRecovered` output variable is a cell array containing a single turbo coded code block.

Define the transport block length prior to CRC and turbo coding, code word length, redundancy version, and CRC polynomial. Use these parameters to perform coding operations.

```
trBlkLen = 135;
codewordLen = 450;
rv = 0;
crcPoly = '24A';

trblockwithcrc = lteCRCEncode(zeros(trBlkLen,1),crcPoly);
codeblocks = lteCodeBlockSegment(trblockwithcrc);
turbocodedblocks = lteTurboEncode(codeblocks);
codeword = lteRateMatchTurbo(turbocodedblocks,codewordLen,rv);
rateRecovered = lteRateRecoverTurbo(codeword,trBlkLen,rv)

rateRecovered =

    [492x1 int8]
```

`rateRecovered` is a cell array with a single coded code block of size indicated above.

Further turbo decoding, desegmentation and CRC decoding of `rateRecovered` would result in a decoded transport block of length equal to the original transport block. Note that the `trBlkLen` parameter of the `lteRateRecoverTurbo` function is the transport block length before CRC and turbo coding, not the length after turbo coding or rate matching.

Input Arguments

in — Input data

numeric vector

Input data, specified as a numeric vector.

Data Types: `double` | `uint8` | `uint16` | `uint32` | `uint64` | `int8` | `int16` | `int32` | `int64`

trblklen — Length of original encoded transport block before encoding

numeric value

Length of the original encoded transport block before encoding, specified as a numeric value.

Data Types: double

rv — Redundancy version used to recover data

0 | 1 | 2 | 3

Redundancy version used to recover data, specified as 0, 1, 2, or 3.

Data Types: double

chs — Channel transmission configuration

structure

Channel transmission configuration, specified as a structure. It allows additional control of the bit selection stage through parameters for the soft buffer size and physical channel configuration.

For downlink turbo coded transport channels, you can control the soft buffer dimensions by including either `NIR` or the combined set of `NSoftbits`, `TxScheme`, and `DuplexMode`. If `DuplexMode` is 'TDD', also specify `TDDConfig`. If included, `NIR`, takes precedence for controlling the soft buffer dimensions. When neither of these optional `chs` fields (`NIR` or the set including `NSoftbits`) are present, the function assumes an uplink turbo coded transport channel and places no limit on the number of soft bits.

`chs` can contain the following fields.

Modulation — Modulation scheme

'QPSK' | '16QAM' | '64QAM' | '256QAM'

Modulation scheme, specified as a string. Accepted values are 'QPSK', '16QAM', '64QAM', and '256QAM'.

Data Types: char

NLayers — Number of transmission layers for transport block

1 (default) | 2 | 3 | 4

Number of transmission layers for transport block, specified as 1 (default), 2, 3, or 4. Not necessary if `TxScheme` is set to 'Port0', 'TxDiversity', or 'Port5'.

Data Types: double

TxScheme — Transmission scheme

'Port0' (default) | optional | 'TxDiversity' | 'CDD' | 'SpatialMux' | 'MultiUser' | 'Port5' | 'Port7-8' | 'Port8' | 'Port7-14'

Downlink rate matching only. Transmission scheme, specified as a string. Optional. Accepted values and their descriptions are shown in the following table

Transmission scheme	Description
'Port0'	Single antenna port, port 0. Default
'TxDiversity'	Transmit diversity
'CDD'	Large delay CDD
'SpatialMux'	Closed loop spatial multiplexing
'MultiUser'	Multi-user MIMO
'Port5'	Single-antenna port, Port 5
'Port7-8'	Single-antenna port, port 7, if NLayers is set to 1. Dual layer transmission, port 7 and 8, if NLayers is set to 2.
'Port8'	Single-antenna port, Port 8
'Port7-14'	Up to eight layer transmission, ports 7–14

Data Types: char

NIR — Soft buffer size for entire input transport block

nonnegative integer

Soft buffer size for entire input transport block, specified as a nonnegative integer.

Data Types: double

NSoftbits — Total number of soft channel bits

nonnegative integer

Total number of soft channel bits, specified as a nonnegative integer.

Data Types: double

DuplexMode — Duplex mode

'FDD' (default) | optional | 'TDD'

Duplex mode, specified as a string. Optional. Accepted values are 'FDD' and 'TDD'.

Data Types: char

TDDConfig — Uplink or downlink configuration

0 (default) | optional | nonnegative scalar integer (0...6)

Uplink or downlink configuration, specified as a nonnegative scalar integer from 0 through 6. Optional. Only required if DuplexMode is set to 'TDD'.

Data Types: double

Data Types: struct

cbsbuffers — Code block soft information buffers

cell array of numeric vectors | empty cell array | cell array of numeric scalar elements

Code block soft information buffers, specified as a cell array. This input argument represents any pre-existing code block-oriented soft information to be additively combined with the recovered turbo encoded code blocks. It allows the direct soft combining of consecutive HARQ retransmissions and is typically returned by a previous call to the function to recover an earlier transmission of the same transport block. The **cbsbuffers** cell array either:

- dimensionally matches the output code blocks, **out**
- can be empty to represent the processing of an initial HARQ transmission
- or can be scalar to add a constant offset to all the deinterleaved soft data in a code block.

Data Types: cell

Output Arguments

out — Turbo encoded code blocks before concatenation

cell array of numeric column vectors

Turbo encoded code blocks before concatenation, returned as a cell array of numeric column vectors. The dimensions of **out** are deduced from **trblklen**, which represents the length of the original encoded transport block.

Data Types: cell

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteDLSCHDecode` | `lteDLSCHInfo` | `lteRateMatchTurbo` |
`lteRateRecoverConvolutional` | `lteTurboDecode` | `lteULSCHDecode` |
`lteULSCHInfo`

Introduced in R2013b

lteResourceGrid

Subframe resource array

Syntax

```
grid = lteResourceGrid(cfg)
grid = lteResourceGrid(cfg,p)
```

Description

`grid = lteResourceGrid(cfg)` returns an empty resource array generated from the configuration settings structure, `cfg`. To create a downlink resource array, `cfg` must contain the `NDLRB` and `CellRefP` fields. To create an uplink resource array, `cfg` must contain the `NULRB` field. The presence of field `NDLRB` takes precedence over the field `NULRB`. To specifically create a downlink or uplink resource array, use `lteDLResourceGrid` or `lteULResourceGrid`.

`lteResourceGrid` returns an empty multidimensional array used to represent the resource elements for one subframe across all configured antenna ports, as described in “Data Structures”.

The size of `grid` is N -by- M -by- P . The variable N is the number of subcarriers, $12 \times \text{NDLRB}$. The variable M is the number of OFDM or SC-FDMA symbols in a subframe, 14 for normal cyclic prefix and 12 for extended cyclic prefix. The variable P is the number of transmit antenna ports, which is `cfg.CellRefP` in the downlink and `cfg.NTxAnts` in the uplink.

`grid = lteResourceGrid(cfg,p)` returns a resource array where the number of antenna planes in the array is specified directly by the parameter `p`.

Examples

Create Downlink Subframe Resource Array

Create an empty resource array that represents the downlink resource elements for 10MHz bandwidth, one subframe, and two antennas.

```
gridd1 = lteResourceGrid(struct('NDLRB',50,'CellRefP',2));
size(gridd1)
```

```
600    14    2
```

Create Uplink Subframe Resource Array

Create an empty resource array that represents the uplink resource elements for 10MHz bandwidth, one subframe, and two antennas.

```
gridul = lteResourceGrid(struct('NULRB',50,'NTxAnts',2));
size(gridul)
```

```
600    14    2
```

Input Arguments

cfg — Configuration settings

scalar structure

Configuration settings, specified as a scalar structure. For the downlink, `cfg` can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

For the uplink, `cfg` can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Current cyclic prefix length
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antenna ports. This argument is only present for UE-specific demodulation reference symbols.

p — Number of antenna planes in the output array

nonnegative scalar integer

Number of antenna planes in the output array, specified as a nonnegative scalar integer.

Data Types: double

Output Arguments

grid — Empty multidimensional resource grid

3-D numeric array

Empty multidimensional resource grid, returned as a 3-D numeric array. This argument is generated from the settings structure. It represents the resource elements for one subframe across all configured antenna ports. Its size is N -by- M -by- P . The variable N is the number of subcarriers, $12 \times \text{NDLRB}$. The variable M is the number of OFDM or SC-FDMA symbols in a subframe, 14 for normal cyclic prefix and 12 for extended cyclic prefix. The variable P is the number of transmit antenna ports, `cfg.CellRefP` in the downlink and `cfg.NTxAnts` in the uplink.

Data Types: double

See Also

`lteDLResourceGrid` | `lteOFDMModulate` | `lteResourceGridSize` |
`lteSCFDMAModulate` | `lteULResourceGrid`

Introduced in R2014a

lteResourceGridSize

Size of subframe resource array

Syntax

```
d = lteResourceGridSize(cfg)
d = lteResourceGridSize(cfg,p)
```

Description

`d = lteResourceGridSize(cfg)` returns a 3-element row vector of dimension lengths for the resource array generated from the settings structure, `cfg`. To create a downlink resource array, `cfg` must contain the `NDLRB` and `CellRefP` fields. To create an uplink resource array, `cfg` must contain the `NULRB` field. If both `NDLRB` and `NULRB` fields are defined, the presence of the field `NDLRB` takes precedence over the field `NULRB`. To get the dimension lengths specifically for a downlink or uplink resource array, use the function `lteDLResourceGridSize` or `lteULResourceGridSize` respectively. The function returns a 3-element row vector of dimension lengths for multidimensional array used to represent the resource elements for one subframe across all configured antenna ports, as described in “Data Structures”.

The vector `d` is $[N M P]$. The variable N is the number of subcarriers, $12 \times \text{NDLRB}$. The variable M is the number of OFDM symbols in a subframe, 14 for normal cyclic prefix and 12 for extended cyclic prefix. The variable P is the number of transmit antenna ports, which is `cfg.CellRefP` in the downlink and `cfg.NTxAnts` in the uplink.

`d = lteResourceGridSize(cfg,p)` returns a 3-element row vector where the number of antenna planes in the array is specified directly by parameter `p`.

Examples

Get Downlink Subframe Resource Array Size

Get the downlink subframe resource array size from a downlink configuration structure. Then, use the returned vector to directly create a MATLAB array.

```
cfgdl = struct('NDLRB',6,'CellRefP',2,'CyclicPrefix','Normal');
```

```
griddl = zeros(lteResourceGridSize(cfgdl));
size(griddl)

    72    14     2
```

The result, `griddl`, is a resource array. This resource array could also be obtained in a similar manner using the `lteResourceGrid` function.

Get Uplink Subframe Resource Array Size

Get the uplink subframe resource array size from an uplink configuration structure. Then, use the returned vector to directly create a MATLAB array.

```
cfgul = struct('NULRB',6,'NTxAnts',2,'CyclicPrefixUL','Normal');
gridul = zeros(lteResourceGridSize(cfgul));
size(gridul)

    72    14     2
```

The result, `gridul`, is an uplink resource array. This resource array could also be obtained in a similar manner using the `lteResourceGrid` function.

Input Arguments

cfg — Configuration settings

scalar structure

Configuration settings, specified as a scalar structure. For the downlink, `cfg` can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NDLRB	Required	Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)

Parameter Field	Required or Optional	Values	Description
CellRefP	Required	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CyclicPrefix	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

For the uplink, `cfg` can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Current cyclic prefix length
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antenna ports. This argument is only present for UE-specific demodulation reference symbols.

p – Number of antenna planes

positive scalar integer

Number of antenna planes, specified as a positive scalar integer.

Data Types: `double`

Output Arguments

d – Dimension lengths of resource grid

numeric vector

Dimension lengths of resource grid, returned as a numeric vector of length 3. The elements are $[N M P]$. The variable N is the number of subcarriers, $12 \times \text{NDLRB}$. The variable M is the number of OFDM or SC-FDMA symbols in a subframe, 14 for normal cyclic prefix and 12 for extended cyclic prefix. The variable P is the number of transmit antenna ports, `cfg.CellRefP` in the downlink and `cfg.NTxAnts` in the uplink.

Data Types: `double`

See Also

`lteDLResourceGridSize` | `lteResourceGrid` | `lteULResourceGridSize`

Introduced in R2014a

lteSCFDMADemodulate

SC-FDMA demodulation

Syntax

```
grid = lteSCFDMADemodulate(ue,waveform)
grid = lteSCFDMADemodulate(ue,waveform,cpfraction)
```

Description

`grid = lteSCFDMADemodulate(ue,waveform)` performs SC-FDMA demodulation of the time-domain waveform, `waveform`, given UE-specific settings structure, `ue`.

The demodulation performs one FFT operation per received SC-FDMA symbol. It recovers the received subcarrier values, which are then used to construct each column of the output resource array, `grid`. The FFT is positioned partway through the cyclic prefix, to allow for a certain degree of channel delay spread while avoiding the overlap between adjacent OFDM symbols. The input FFT is also shifted by half of one subcarrier. The particular position of the FFT chosen here avoids the SC-FDMA symbol overlapping used in the `lteSCFDMAModulate` function. Since the FFT is performed away from the original zero phase point on the transmitted subcarriers, a phase correction is applied to each subcarrier after the FFT.

`grid = lteSCFDMADemodulate(ue,waveform,cpfraction)` allows the specification of the position of the demodulation through the cyclic prefix.

Examples

Perform SC-FDMA Demodulation

Perform SC-FDMA demodulation of uplink fixed reference channel (FRC) A3-2.

```
frc = lteRMCUL('A3-2');
waveform = lteRMCULTool(frc,randi([0,1],frc.PUSCH.TrBlkSizes(1),1));
```

```
rgrid = lteSCFDMADemodulate(frc,waveform);
```

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. **ue** contains the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length

Data Types: `struct`

waveform — Time-domain waveform

numeric matrix

Time-domain waveform, specified as a numeric matrix. The sampling rate of the time domain waveform **waveform** must be the same as used in the `lteSCFDMAModulate` modulator function for the specified number of resource blocks **NULRB**. **waveform** must also be time-aligned such that the first sample is the first sample of the cyclic prefix of the first SC-FDMA symbol in a subframe.

Data Types: `double`

Complex Number Support: Yes

cpfraction — Cyclic prefix fraction

0.55 (default) | positive numeric scalar

Cyclic prefix fraction, specified as a positive numeric scalar between 0 and 1. This argument specifies the position of the demodulation through the cyclic prefix. A value of 0 represents the start of the cyclic prefix. A value of 1 represents the end of the cyclic prefix. The default value of 0.55 allows for the default level of windowing in the `lteSCFDMAModulate` function.

Data Types: double

Output Arguments

grid — Output resource array

numeric matrix

Output resource array, returned as a numeric matrix.

Data Types: double

Complex Number Support: Yes

See Also

lteSCFDMAInfo | lteSCFDMAModulate | lteULChannelEstimate |
lteULChannelEstimatePUCCH1 | lteULChannelEstimatePUCCH2 |
lteULChannelEstimatePUCCH3 | lteULFrameOffset | lteULFrameOffsetPUCCH1
| lteULFrameOffsetPUCCH2 | lteULFrameOffsetPUCCH3 |
lteULPerfectChannelEstimate

Introduced in R2014a

lteSCFDMAModulate

SC-FDMA modulation

Syntax

```
[waveform,info] = lteSCFDMAModulate(ue,grid)
[waveform,info] = lteSCFDMAModulate(ue,grid>windowing)
```

Description

`[waveform,info] = lteSCFDMAModulate(ue,grid)` performs IFFT calculation, half-subcarrier shifting, and cyclic prefix insertions. It optionally performs raised-cosine windowing and overlapping of adjacent SC-FDMA symbols of the complex symbols in the resource array, `grid`.

For a block diagram that illustrates the steps in SC-FDMA modulation, see “Algorithms” on page 1-775.

`[waveform,info] = lteSCFDMAModulate(ue,grid>windowing)` allows control of the number of windowed and overlapped samples used in the time-domain windowing. If the value in `ue.Windowing` is present, it is ignored and the output, `info.Windowing`, equals `windowing`.

Examples

Perform SC-FDMA Modulation

Perform SC-FDMA modulation of one subframe of random uniformly-distributed noise, using a 10MHz configuration.

```
ue = struct('NULRB',50);
d = lteULResourceGridSize(ue);
rgrid = complex(rand(d)-0.5,rand(d)-0.5);
```

```
waveform = lteSCFDMAModulate(ue,rgrid);
```

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. `ue` contains the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Windowing	Optional	Nonnegative scalar integer Default value is absent.	The number of time-domain samples over which windowing and overlapping of SC-FDMA symbols is applied See Note

Note: If `ue.Windowing` is absent, `info.Windowing` will return a default value chosen as a function of `ue.NULRB` to compromise between the effective duration of cyclic prefix (and therefore the channel delay spread tolerance) and the spectral characteristics of the transmitted signal (not considering any additional FIR filtering). `ue.Windowing` must be even. With a value of zero, the issues above concerning concatenation of subframes before SC-FDMA modulation do not apply.

The number of samples used for windowing depends on the cyclic prefix length (normal or extended) and the number of resource blocks, and is chosen in accordance with the maximum values implied in TS 36.104, Tables E.5.1-1 and E.5.1-2 [1]. The number of windowing samples is a compromise between the effective duration of cyclic prefix (and therefore the channel delay spread tolerance) and the spectral characteristics of the transmitted signal (not considering any additional FIR filtering). For a larger amount of windowing, the effective duration of the cyclic prefix is reduced but the transmitted signal spectrum will have smaller out of band emissions.

Number of resource blocks NULRB	Windowing samples for normal cyclic prefix	Windowing samples for extended cyclic prefix
6	4	4
15	6	6
25	4	4
50	6	6
75	8	8
100	8	8

Data Types: `struct`

grid — Resource grid

M-by-*N*-by-*P* numeric array

Resource grid, specified as an *M*-by-*N*-by-*P* numeric array array. The grid input contains *M* number of subcarriers, *N* number of SC-FDMA symbols, and *P* number of transmission antennas. The array contains resource elements (REs) for a number of subframes across all configured antenna ports, as described in “Data Structures”. Alternatively, it contains multiple such matrices concatenated to give multiple subframes (concatenation across the columns or 2nd dimension). The antenna planes in `grid` are each OFDM modulated to give the columns of `waveform`.

Dimension *M* must be $12 \times \text{NULRB}$ where NULRB must be (6 . . . 110). Dimension *N* must be a multiple number of symbols in a subframe *L*, where $L=14$ for normal cyclic prefix and $L=12$ for extended cyclic prefix. Dimension *P* must be (1, 2, 4).

Note that `grid` can span multiple subframes and windowing and overlapping is applied between all adjacent SC-FDMA symbols, including the last of one subframe and the first of the next. Therefore a different result is obtained than if `lteSCFDMAModulate` is called on individual subframes and then those time-domain waveforms concatenated. The resulting waveform in that case would have discontinuities at the start/end of each subframe. Therefore it is recommended that all subframes for SC-FDMA modulation first be concatenated prior to calling `lteSCFDMAModulate` on the resulting multi-subframe array. However, individual subframes can be OFDM modulated and the resulting multi-subframe time-domain waveform created by manually overlapping.

Data Types: `double`

Complex Number Support: Yes

windowing — Number of windowed and overlapped samples

positive scalar integer

Number of windowed and overlapped samples, specified as a positive scalar integer. This argument controls the number of windowed and overlapped samples used in time-domain windowing. If present it is used for the SC-FMDA modulation (instead of `ue.Windowing`) and it is the value output for `info.Windowing`.

Data Types: double

Output Arguments

waveform — SC-FDMA modulated waveform

Numeric matrix

SC-FDMA modulated waveform, returned as a numeric matrix of size T -by- P , where T is the number of time-domain samples and P is the number of transmission antennas.

$T = K \times 30720 / 2048 \times N_{fft}$ where N_{fft} is the IFFT size and K is the number of subframes in the input `grid`. N_{fft} is a function of the Number of Resource Blocks (NRB).

NRB	N_{fft}
6	128
15	256
25	512
50	1024
75	2048
100	2048

In general, N_{fft} is the smallest power of 2 greater than or equal to $12 \times \text{NRB} / 0.85$. It is the smallest FFT that spans all subcarriers and results in a bandwidth occupancy ($12 \times \text{NRB} / N_{fft}$) of no more than 85%.

Data Types: double

Complex Number Support: Yes

info — Information about SC-FDMA modulated waveform

Scalar structure

Information about SC-FDMA modulated waveform, returned as a scalar structure. `info` contains the following fields.

SamplingRate — Sampling rate of time-domain waveform

positive numeric scalar

Sampling rate of time-domain waveform, `waveform`, returned as a positive numeric scalar. This argument is given by the equation: $SamplingRate = 30.72MHz / 2048 \times N_{fft}$.

Data Types: double

Nfft — Number of FFT points

positive scalar integer

Number of FFT points, returned as a positive scalar integer.

Data Types: double

Windowing — Number of time-domain samples over which windowing and overlapping of SC-FDMA symbols is applied

positive scalar integer

Number of time-domain samples over which windowing and overlapping of SC-FDMA symbols is applied, returned as a positive scalar integer.

Data Types: double

CyclicPrefixLengths — Cyclic prefix length

even integer scalar

Cyclic prefix length (in samples) of each OFDM symbol in a subframe.

info.Nfft	CyclicPrefixLengths	
	for CyclicPrefix = 'Normal'	for CyclicPrefix = 'Extended'
2048	[160 144 144 144 144 144 144 160 144 144 144 144 144]	[512 512 512 512 512 512 512 512 512 512 512 512]
1024	[80 72 72 72 72 72 72 80 72 72 72 72 72]	[256 256 256 256 256 256 256 256 256 256 256 256]
512	[40 36 36 36 36 36 36 40 36 36 36 36 36]	[128 128 128 128 128 128 128 128 128 128 128 128]

info.Nfft	CyclicPrefixLengths	
	for CyclicPrefix = 'Normal'	for CyclicPrefix = 'Extended'
256	[20 18 18 18 18 18 18 20 18 18 18 18 18]	[64 64 64 64 64 64 64 64 64 64 64 64]
128	[10 9 9 9 9 9 9 10 9 9 9 9 9]	[32 32 32 32 32 32 32 32 32 32 32 32]

Note: As shown in table above, for `info.Nfft < 2048`, `info.CyclicPrefixLengths` are the `CyclicPrefixLengths` for `info.Nfft = 2048` scaled by `info.Nfft / 2048`.

Data Types: `int32`


Data Types: `struct`

More About

Algorithms

The following diagram illustrates the processing performed by SC-FDMA modulation.

 SC-FDMA symbols




cyclic extension:
cyclic prefix +
allowance for windowing




windowing
(exaggerated for
illustration)



 extension by
repetition of
first OFDM
symbol

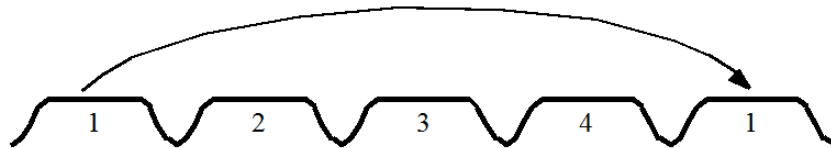

overlapping

 

extraction of complete
SC-FDMA symbols with
guard and windowing



References

- [1] 3GPP TS 36.104. "Base Station (BS) radio transmission and reception." *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteFadingChannel | lteHSTChannel | lteMovingChannel |
lteSCFDMADemodulate | lteSCFDMAInfo | lteULResourceGrid |
lteULResourceGridSize

Introduced in R2014a

lteSCFDMAInfo

SC-FDMA modulation information

Syntax

```
info = lteSCFDMAInfo(ue)
```

Description

`info = lteSCFDMAInfo(ue)` provides information related to the SC-FDMA modulation performed by `lteSCFDMAModulate`, given the UE-specific settings structure, `ue`.

Examples

Get SC-FDMA Modulation Information

Using `lteSCFDMAInfo` to get Get SC-FDMA modulation information

Initialize `ue` configuration structure with bandwidth specified in resource blocks.

```
ue = struct('NULRB',50);  
info = lteSCFDMAInfo(ue);  
info.SamplingRate
```

```
Warning: Using default value for parameter field CyclicPrefixUL (Normal)  
Warning: Using default value for parameter field CyclicPrefixUL (Normal)
```

```
ans =  
  
    15360000
```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress

warnings for defaulted lte parameter settings precede code with the command "lteWarning('off','DefaultValue')."

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. **ue** is a structure having these fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
Windowing	Optional	Nonnegative scalar integer	The number of time-domain samples over which windowing and overlapping of SC-FDMA symbols is applied See Note

Note: If the **ue.Windowing** field is absent, **info.Windowing** returns a default value chosen as a function of the **ue.NULRB** field. This mechanism acts as a compromise between the effective duration of cyclic prefix (and therefore the channel delay spread tolerance) and the spectral characteristics of the transmitted signal (not considering any additional FIR filtering). See **lteSCFDMAmodulate** for details.

Data Types: `struct`

Output Arguments

info — Information related to SC-FDMA modulation

structure array

Information related to SC-FDMA modulation, returned as a structure array. The structure contains these fields.

SamplingRate — Sampling rate

numeric scalar

Sampling rate, returned as a numeric scalar. The function computes the sampling rate of the time domain waveform using the following equation: $\text{SamplingRate} = 30720000 \div 2048 \times N_{\text{fft}}$

Data Types: double

Nfft — Number of FFT points

numeric scalar

Number of FFT points used in the SC-FDMA modulator, returned as a numeric scalar.

Data Types: double

Windowing — Number of time-domain windowing samples

scalar integer

Number of time-domain windowing samples, returned as a scalar integer. This field represents the number of time-domain samples over which windowing and overlapping of SC-FDMA symbols is applied.

Data Types: double

CyclicPrefixLengths — Cyclic prefix length

even integer scalar

Cyclic prefix length (in samples) of each OFDM symbol in a subframe.

info.Nfft	CyclicPrefixLengths	
	for CyclicPrefix = 'Normal'	for CyclicPrefix = 'Extended'
2048	[160 144 144 144 144 144 144 160 144 144 144 144 144 144]	[512 512 512 512 512 512 512 512 512 512 512 512]
1024	[80 72 72 72 72 72 72 80 72 72 72 72 72 72]	[256 256 256 256 256 256 256 256 256 256 256 256]
512	[40 36 36 36 36 36 36 40 36 36 36 36 36 36]	[128 128 128 128 128 128 128 128 128 128 128 128]

info.Nfft	CyclicPrefixLengths	
	for CyclicPrefix = 'Normal'	for CyclicPrefix = 'Extended'
256	[20 18 18 18 18 18 18 20 18 18 18 18 18 18]	[64 64 64 64 64 64 64 64 64 64 64 64]
128	[10 9 9 9 9 9 9 10 9 9 9 9 9]	[32 32 32 32 32 32 32 32 32 32 32 32]

Note: As shown in table above, for `info.Nfft < 2048`, `info.CyclicPrefixLengths` are the `CyclicPrefixLengths` for `info.Nfft = 2048` scaled by `info.Nfft / 2048`.

Data Types: `uint32`

Data Types: `struct`

See Also

`lteOFDMInfo` | `lteSCFDMA demodulate` | `lteSCFDMA modulate` | `lteULResourceGridSize`

Introduced in R2014a

lteSRS

Uplink sounding reference signal

Syntax

```
[seq,info] = lteSRS(ue,chs)
```

Description

`[seq,info] = lteSRS(ue,chs)` returns a complex matrix, `seq`, containing Uplink sounding reference signal (SRS) values and information structure array, `info`. The function returns these values for UE-specific settings, `ue`, and signal transmission configuration, `chs`. The symbols for each antenna are in the columns of `seq`, with the number of columns determined by the number of transmission antennas configured.

Type 1 triggered SRS transmission corresponds with aperiodic SRS triggered by DCI formats 0/4/1A for FDD or 0/4/1A/2B/2C for TDD. For this case, the parameter `chs.ConfigIdx` indexes trigger type 1 UE-specific periodicity $T_{SRS,1}$, and subframe offset, $T_{offset,1}$. Also, the valid range of `chs.ConfigIdx` (I_{SRS}) is from 0 through 16 for FDD and from 0 through 24 for TDD.

If the `NTxAnts` parameter field is present in the `chs` structure, the function uses its value for the number of transmission antennas. Otherwise, the function uses the value of the same parameter field in the `ue` structure instead.

For short base reference sequences, used with SRS transmissions spanning 4 PRBs, Zadoff-Chu sequences are not used. In this case, `RootSeq` and `NZC` are set to -1 . For cases where the `seq` output is empty, as is the case when the SRS is not scheduled for transmission in the subframe, the `info` structure contains all fields, but each field is set to -1 .

Note: UE-specific configurations as defined in TS 36.213 [1], Section 8.2 determine the operation of `lteSRS`. `lteSRS` may generate an SRS signal even in a subframe that, based on cell-specific SRS subframe configuration, is not an SRS subframe. `lteSRS` returns an empty vector if no SRS is scheduled for a given UE-specific configuration.

Use the field `info.IsSRSSubframe` returned by `lteSRSInfo` to control whether to call `lteSRS` in a subframe.

Examples

Generate Uplink SRS Values

This example generates SRS values for 1.4 MHz bandwidth using the default SRS configuration.

Set the signal transmission configuration, `chs` structure fields.

```
chs.BWConfig = 7;  
chs.BW = 0;  
chs.CyclicShift = 0;  
chs.SeqGroup = 0;  
chs.SeqIdx = 0;  
chs.ConfigIdx = 7;
```

Set `ue` structure fields.

```
ue.DuplexMode = 'FDD';  
ue.CyclicPrefixUL = 'Normal';  
ue.NTxAnts = 1;  
ue.NFrame = 0;  
ue.NULRB = 6;  
ue.NSubframe = 0;
```

Generate Uplink SRS resource element values.

```
srs = lteSRS(ue,chs);  
srs(1:4)
```

```
ans =
```

```
0.7071 - 0.7071i  
-0.7071 + 0.7071i  
0.7071 + 0.7071i  
-0.7071 - 0.7071i
```

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. The structure contains the following fields.

NULRB — Number of uplink resource blocks

positive scalar integer

Number of uplink resource blocks, specified as a positive scalar integer.

Data Types: double

NSubframe — Subframe number

0 (default) | optional | scalar integer

Subframe number, specified as a scalar integer. Optional.

Data Types: double

NTxAnts — Number of transmission antennas

1 (default) | optional | 2 | 4

Number of transmission antennas, specified as 1, 2, or 4. Optional.

Data Types: double

CyclicPrefixUL — Cyclic prefix length for uplink

'Normal' (default) | optional | 'Extended'

Cyclic prefix length for uplink, specified as a string. Optional.

Data Types: char

NFrame — Initial frame number

0 (default) | optional | numeric scalar

Initial frame number, specified as a numeric scalar. Optional.

Data Types: double

DuplexMode — Duplexing mode

'FDD' (default) | optional | 'TDD'

Duplexing mode, specified as a string. Optional. This string represents the frame structure type of the generated waveform.

Example: 'TDD'

Data Types: char

TDDConfig — Uplink or downlink configuration

0 (default) | optional | (0..6)

Uplink or downlink configuration, specified as a nonnegative scalar integer from 0 through 6. Optional. Only required for TDD duplex mode.

Data Types: double

SSC — Special subframe configuration

0 (default) | optional | (0..9)

Special subframe configuration, specified as a nonnegative scalar integer from 0 through 9. Optional. Only required for TDD duplex mode.

Data Types: double

CyclicPrefix — Cyclic prefix length in the downlink

'Normal' (default) | optional | 'Extended'

Cyclic prefix length in the downlink, specified as a string. Optional.

Data Types: char

Data Types: struct

chs — Signal transmission configuration

structure

Signal transmission configuration, specified as a structure. The structure contains these fields.

NTxAnts — Number of transmission antennas

1 (default) | optional | 2 | 4

Number of transmission antennas, specified as 1, 2, or 4. Optional.

Data Types: double

BWConfig — SRS bandwidth configuration

7 (default) | optional | 0..7

SRS bandwidth configuration, specified as a nonnegative scalar integer from 0 through 7. Optional. The default is 7. (*C_SRS*)

Data Types: double

BW — UE-specific SRS bandwidth

0 (default) | optional | 0..3

UE-specific SRS bandwidth, specified as a nonnegative scalar integer from 0 through 3. Optional. The default is 0. (*B_SRS*)

Data Types: double

ConfigIdx — Configuration index for UE-specific periodicity

7 (default) | optional | 0..644

Configuration index for UE-specific periodicity, specified as a nonnegative scalar integer from 0 through 644. Optional. This parameter contains the configuration index for UE-specific periodicity (*T_SRS*) and subframe offset (*T_offset*).

Data Types: double

CyclicShift — UE-specific cyclic shift

0 (default) | optional | 0..7

UE-specific cyclic shift, specified as a nonnegative scalar integer from 0 through 7. Optional. The default is 0. (n_{SRS}^{cs})

Data Types: double

SeqGroup — SRS sequence group number

0 (default) | optional | 0..29

SRS sequence group number, specified as a nonnegative scalar integer from 0 through 29. Optional. (*u*)

Data Types: double

SeqIdx — Base sequence number

0 (default) | optional | 1

Base sequence number, specified as either 0 or 1. Optional. (*v*)

Data Types: `double` | `logical`

OffsetIdx — SRS subframe offset

0 (default) | optional | 1

SRS subframe offset choice for 2 ms SRS periodicity, specified as 0 or 1. Optional. Only required for 'TDD' duplex mode. This parameter indexes the two SRS subframe offset entries in the row of TS 36.213 [1], Table 8.2-2 for the SRS configuration index specified by the `ConfigIdx` parameter.

Data Types: `double`

Data Types: `struct`

Output Arguments

seq — Uplink SRS values

complex matrix

Uplink SRS values, returned as a complex matrix. The symbols for each antenna are in the columns of the matrix, `seq`. The number of transmission antennas configured determines the number of columns.

Data Types: `double`

Complex Number Support: Yes

info — Information related to SRS

structure

Information related to SRS, returned as a structure. The structure contains the following fields.

Alpha — Reference signal cyclic shift

numeric scalar

Reference signal cyclic shift, returned as a numeric scalar. (*alpha*)

Data Types: `double`

SeqGroup — SRS sequence group number

(0...29)

SRS sequence group number, returned as a nonnegative scalar integer from 0 through 29. (*u*)

Data Types: double

SeqIdx — Base sequence number

0 | 1

Base sequence number, returned as 0 or 1. (*v*)

Data Types: double

RootSeq — Root Zadoff-Chu sequence index

numeric scalar

Root Zadoff-Chu sequence index, returned as numeric scalar. (*q*)

Data Types: double

NZC — Zadoff-Chu sequence length

numeric scalar

Zadoff-Chu sequence length, returned as a numeric scalar. (*NRS_ZC*)

Data Types: double

Data Types: struct

References

- [1] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteCellIRS | lteCSIRS | lteDMRS | ltePRS | lteSRSIndices | lteSRSInfo

Introduced in R2014a

lteSRSIndices

Uplink SRS resource element indices

Syntax

```
[ind,info] = lteSRSIndices(ue,chs)
[ind,info] = lteSRSIndices(ue,chs,opts)
```

Description

`[ind,info] = lteSRSIndices(ue,chs)` returns a column vector of resource element (RE) indices given the UE-specific settings structure, `ue`, and signal transmission configuration, `chs`. It returns a matrix of resource element (RE) indices and information structure array, `info`, for the Uplink sounding reference signal (SRS). By default, the indices are returned in one-based linear indexing form that can directly index elements of a resource matrix. These indices are ordered according to SRS modulation symbolsmapping. Alternative indexing formats can also be generated. The indices for each antenna are in the columns of `ind`, with the number of columns determined by the number of transmission antennas configured.

Type 1 triggered SRS transmission corresponds with aperiodic SRS triggered by DCI formats 0/4/1A for FDD or 0/4/1A/2B/2C for TDD. For this case, the parameter `chs.ConfigIdx` indexes trigger type 1 UE-specific periodicity $T_{SRS,1}$, and subframe offset, $T_{offset,1}$. Also, the valid range of `chs.ConfigIdx` (I_{SRS}) is from 0 through 16 for FDD and from 0 through 24 for TDD.

For type 1 triggered SRS transmission, frequency hopping is not permitted. Therefore, set `chs.HoppingBW` (b_{hop}) such that `chs.HoppingBW` \geq `BW` (B_{SRS}).

The UE-specific SRS periodicity, `info.UePeriod`, and subframe offset, `info.UeOffset`, are distinct from the cell-specific SRS periodicity and subframe offset returned from the `lteSRSInfo` function.

For SRS transmission on multiple antennas, when `chs.NTxAnts` is set to 2 or 4, the value of `info.Port` simply matches the position in the structure array, $0 \dots \text{NTxAnts} - 1$. If `chs.NTxAnts` is set to 1, `info.Port` is used to indicate the port chosen by SRS transmit antenna selection. `info.Port` is 0 or 1 indicating the selected antenna port. If

the `NTxAnts` parameter field is not present in the `chs` structure, the function uses the value of the same parameter field in the `ue` structure instead. If the `NTxAnts` parameter field is not present in the `ue` structure, the function assumes one antenna.

For cases where the `ind` output is empty, as is the case when the SRS is not scheduled for transmission in the subframe, the `info` structure still contains all fields. Undefined scalar fields (`FreqStart`, `KTxComb`, and `BaseFreq`) are set to `-1`. Undefined vector fields (`PRBSet`, `FreqIdx`, and `HoppingOffset`) are empty.

Note: UE-specific configurations as defined in TS 36.213 [1], Section 8.2 determine the operation of `lteSRSIndices`. `lteSRSIndices` may generate an SRS signal even in a subframe that, based on cell-specific SRS subframe configuration, is not an SRS subframe. `lteSRSIndices` returns an empty vector if no SRS is scheduled for a given UE-specific configuration.

Use the field `info.IsSRSSubframe` returned by `lteSRSInfo` to control whether to call the `lteSRSIndices` and `lteSRS` functions in a subframe.

`[ind,info] = lteSRSIndices(ue,chs,opts)` allows control of the format of the returned indices through a cell array, `opts`, of option strings.

Examples

Generate Uplink SRS Indices

This example creates SRS indices for 3 MHz bandwidth using the default SRS configuration.

Set the signal transmission configuration, `chs` structure fields.

```
chs.NTxAnts = 1;  
chs.BWConfig = 7;  
chs.BW = 0;  
chs.ConfigIdx = 7;  
chs.TxComb = 0;  
chs.HoppingBW = 0;  
chs.FreqPosition = 0;
```

Set `ue` structure fields.

```

ue.DuplexMode = 'FDD';
ue.CyclicPrefixUL = 'Normal';
ue.NFrame = 0;
ue.NULRB = 15;
ue.NSubframe = 0;

```

Generate the Uplink SRS resource element indices.

```

srsIndices = lteSRSIndices(ue,chs);
srsIndices(1:4)

```

```

ans =

```

```

    2401
    2403
    2405
    2407

```

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. The structure contains the following fields.

NULRB — Number of uplink resource blocks

positive scalar integer

Number of uplink resource blocks, specified as a positive scalar integer.

Data Types: double

NSubframe — Number of subframes

0 (default) | optional | numeric scalar

Number of subframes, specified as a numeric scalar. Optional.

Data Types: double

NTxAnts — Number of transmission antennas

1 (default) | optional | 2 | 4

Number of transmission antennas, specified as a 1, 2, or 4. Optional.

Data Types: double

CyclicPrefixUL — Cyclic prefix length

'Normal' (default) | optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

Data Types: char

NFrame — Initial frame number

0 (default) | optional | numeric scalar

Initial frame number, returned as a numeric scalar. Optional.

Data Types: double

DuplexMode — Duplexing mode

'FDD' (default) | optional | 'TDD'

Duplexing mode, specified as a string. Optional. This string represents the frame structure type of the generated waveform.

Data Types: char

TDDConfig — Uplink or downlink configuration

0 (default) | optional | 0...6

Uplink or downlink configuration, returned as a nonnegative scalar integer from 0 through 6. Optional. Only required for 'TDD' duplex mode.

Data Types: double

SSC — Special subframe configuration

0 (default) | optional | 0...9

Special subframe configuration, returned as a nonnegative scalar integer from 0 through 9. Optional. Only required for 'TDD' duplex mode.

Data Types: double

CyclicPrefix — Cyclic prefix length

'Normal' (default) | optional | 'Extended'

Cyclic prefix length, returned as a string. Optional. Only required for 'TDD' duplex mode.

Data Types: char

Data Types: struct

chs — Signal transmission configuration

structure

Signal transmission configuration, specified as a structure. The structure contains these fields.

NTxAnts — Number of transmission antennas

1 (default) | optional | 2 | 4

Number of transmission antennas, specified as a 1, 2, or 4. Optional.

Data Types: double

BWConfig — Cell-specific SRS bandwidth configuration

7 (default) | optional | 0...7

Cell-specific SRS bandwidth configuration, specified as a nonnegative scalar integer from 0 through 7. Optional. (*C_SRS*)

Data Types: double

BW — UE-specific SRS bandwidth

0 (default) | optional | 0...3

UE-specific SRS bandwidth, specified as a nonnegative scalar integer from 0 through 3. Optional. (*B_SRS*)

Data Types: double

ConfigIdx — Configuration index for UE-specific periodicity

7 (default) | optional | 0...644

Configuration index for UE-specific periodicity, specified as a nonnegative scalar integer from 0 through 644. Optional. This parameter contains the configuration index for UE-specific periodicity (*T_SRS*) and subframe offset (*T_offset*).

Data Types: double

TxComb — Transmission comb

0 (default) | optional | 1

Transmission comb, specified as a 0 or 1. Optional. This parameter controls SRS positions. SRS is transmitted in six carriers per resource block on odd (1) and even (0) resource indices.

Data Types: `double` | `logical`

HoppingBW — SRS frequency hopping configuration index

0 (default) | optional | 0...3

SRS frequency hopping configuration index, specified as a nonnegative scalar integer from 0 through 3. Optional. (*b_hop*)

Data Types: `double`

FreqPosition — Frequency-domain position

0 (default) | optional | 0...23

Frequency-domain position, specified as a nonnegative scalar integer from 0 through 23. Optional. (*n_RRC*)

Data Types: `double`

CyclicShift — UE-specific cyclic shift

0 (default) | optional | 0...7

UE-specific cyclic shift, specified as a nonnegative scalar integer from 0 through 7. Optional. This parameter applies only when `NTxAnts` is 4. (*n_SRS^cs*)

Data Types: `double`

NF4RachPreambles — Number of RACH preamble frequency resources of format 4 in UpPTS

0 (default) | optional | 0...6

Number of RACH preamble frequency resources of format 4 in UpPTS, specified as a nonnegative scalar integer from 0 through 6. Optional. Only required for 'TDD' duplex mode.

Data Types: `double`

OffsetIdx — SRS subframe offset

0 (default) | optional | 1

SRS subframe offset choice for 2 ms SRS periodicity, specified as 0 or 1. Optional. Only required for 'TDD' duplex mode. This parameter indexes the two SRS subframe offset

entries in the row of TS 36.213 [1], Table 8.2-2 for the SRS configuration index specified by the `ConfigIdx` parameter.

Data Types: `double`

MaxUpPts — Reconfiguration enable and disable

1 (default) | optional | 0

Reconfiguration enable and disable, specified as 0 or 1. Optional. Only required for 'TDD' duplex mode. Enables (1) or disables (0) reconfiguration of $m_SRS,0^{max}$ in UpPTS. (*srs-MaxUpPts*)

Data Types: `double` | `logical`

Data Types: `struct`

opts — Option strings for format of returned indices

string | cell array of strings

Option strings for format of returned indices, specified as a string or a cell array of strings. It can include the following option strings.

Indexing style — Form of returned indices

'ind' (default) | 'sub'

Form of returned indices, specified as 'ind' or 'sub'. The options are linear index form or [*subcarrier, symbol, port*] subscript row form.

Data Types: `char`

Index base — Index base of returned indices

'1based' (default) | '0based'

Index base of returned indices, specified as '1based' or '0based'.

Data Types: `char`

Data Types: `char` | `cell`

Output Arguments

ind — Antenna indices

numeric matrix

Antenna indices, returned as a numeric matrix. Each column of RE indices corresponds to a transmission antenna.

Data Types: `uint32`

info — Information related to SRS

structure array

Information related to SRS, returned as a structure array. The structure contains the following fields.

UePeriod — UE-specific SRS periodicity

2 | 5 | 10 | 20 | 40 | 80 | 160 | 320

UE-specific SRS periodicity, in ms, returned as a positive scalar integer.

Data Types: `double`

UeOffset — UE-specific SRS offset

0...319

UE-specific SRS offset, returned as a nonnegative scalar integer between 0 and 319.

Data Types: `double`

PRBSet — Physical resource block set

numeric vector

Physical resource block set, returned as a numeric vector. `PRBSet` specifies the PRBs occupied by the indices (zero-based).

Data Types: `double`

FreqStart — Frequency-domain starting position

numeric scalar

Frequency-domain starting position (k_0), returned as a numeric scalar. This argument is the zero-based subcarrier index of the lowest SRS subcarrier.

Data Types: `double`

KTxComb — Offset to the frequency-domain starting position

numeric scalar

Offset to the frequency-domain starting position (k_{TC}), returned as a numeric scalar. This argument is a function of the transmission comb parameter.

Data Types: double

BaseFreq — Base frequency-domain starting position

numeric scalar

Base (cell-specific) frequency-domain starting position (k_0 bar), returned as a numeric scalar. This UE-specific SRS is offset as a function of the UE-specific SRS bandwidth value, B_{SRS} . UE-specific SRS configuration cannot result in a frequency-domain starting position (k_0) lower than this value, given the cell-specific SRS bandwidth configuration value, C_{SRS} .

Data Types: double

FreqIdx — Frequency position index

numeric vector

Frequency position index, returned as a numeric vector. This argument specifies the frequency position index (n_b) for each b in the range $0 \dots B_{SRS}$.

Data Types: double

HoppingOffset — Offset term due to frequency hopping

numeric vector

Offset term due to frequency hopping, returned as a numeric vector. This argument specifies the offset term due to frequency hopping (F_b), used in the calculation of n_b .

Data Types: double

NSRSTx — Number of UE-specific SRS transmissions

positive scalar integer

Number of UE-specific SRS transmissions (n_{SRS}), returned as a positive scalar integer.

Data Types: double

Port — Antenna port number used for transmission

positive scalar integer

Antenna port number used for transmission (p), returned as a positive scalar integer.

Data Types: double

Data Types: struct

References

- [1] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteCellRSIndices | lteCSIRSIndices | lteDMRSIndices | ltePRSIndices | lteSRS | lteSRSInfo

Introduced in R2014a

lteSRSInfo

Uplink SRS information

Syntax

```
info = lteSRSInfo(ue,chs)
```

Description

`info = lteSRSInfo(ue,chs)` returns information related to the sounding reference signal (SRS) configuration determined by UE-specific settings, `ue`, and signal transmission configuration, `chs`. The information returned relates to the cell-specific SRS subframe configuration as described in TS 36.211[1], Section 5.5.3.3.

Information relating to a particular UE, such as UE-specific SRS configuration defined in TS 36.213[2], Section 8.2, is output by the `lteSRSIndices` and `lteSRS` functions. For a given configuration, if either of these components returns an empty vector, the SRS is not transmitted for that UE in the specified subframe.

Note: `lteSRSIndices` and `lteSRS` may generate an SRS signal and indices even in a subframe that, based on the cell-specific SRS subframe configuration, is not an SRS subframe. Use the field `info.IsSRSSubframe` returned by `lteSRSInfo` to control whether to call the `lteSRSIndices` and `lteSRS` functions in a subframe.

Examples

Get Information Related to SRS

Adjust the length of the PUCCH to allow for SRS transmission using the shortened field.

The setup in this example is consistent with `Simultaneous-ACK/NACK-and-SRS` set to `'True'` as described in TS36.213, Section 8.2. Generate `pucchSymbols`, using `ue.Shortened=1`.

```
ue = lteRMCUL('A1-1');
```

```
srs.SubframeConfig = 0;
srsInfo = lteSRSInfo(ue,srs);
ue.Shortened = srsInfo.IsSRSSubframe;
harqValues = [];

pucchSymbols = ltePUCCH1(ue,ue.PUSCH,harqValues);

Warning: Using default value for parameter field ResourceIdx ([ 0 ])
Warning: Using default value for parameter field DeltaShift (1)
Warning: Using default value for parameter field CyclicShifts (0)
```

For the default case, Simultaneous-ACK/NACK-and-SRS is 'False', and the PUCCH is transmitted with `ue.Shortened=0`.

To suppress 'Using default value ...' warnings for LTE parameters, execute `lteWarning('off','DefaultValue')` in your MATLAB® command window prior to running code or initialize the parameters in your code workspace.

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure. `ue` contains the following fields.

NSubframe — Subframe number

optional | numeric scalar

Subframe number, specified as a numeric scalar. Optional.

Data Types: double

DuplexMode — Duplex mode

'FDD' (default) | optional | 'TDD'

Duplex mode, specified as a string. Optional.

Data Types: char

Data Types: struct

chs — Signal transmission configuration

structure

Signal transmission configuration, specified as a structure. `chs` contains the following fields.

SubframeConfig — SRS subframe configuration

0...15

SRS subframe configuration, specified as a nonnegative scalar integer from 0 through 15.

Data Types: `double`

Data Types: `struct`

Output Arguments

info — Information related to the SRS configuration

structure

Information related to the SRS configuration, returned as a structure. `info` contains the following fields.

CellPeriod — Cell-specific SRS periodicity

1 | 2 | 5 | 10

Cell-specific SRS periodicity, in ms, returned as 1, 2, 5, or 10.

Data Types: `uint32`

CellOffset — Cell-specific SRS offsets

0...9

Cell-specific SRS offsets, returned as a nonnegative scalar integer from 0 through 9.

Data Types: `int32`

IsSRSSubframe — SRS subframe flag

1 | 0

SRS subframe flag, returned as 1 or 0. Present only if `ue` contains `NSubframe`. If `NSubframe` satisfies the expression $\text{mod}(\text{NSubframe}, \text{CellPeriod}) == \text{CellOffset}$, this value is 1. Otherwise, this value is 0.

Data Types: `uint32`

Data Types: `struct`

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteSRS | lteSRSIndices

Introduced in R2014a

lteSSS

Secondary synchronization signal

Syntax

```
sss = lteSSS(enb)
```

Description

`sss = lteSSS(enb)` returns a complex column vector containing the secondary synchronization signal (SSS) values for cell-wide settings in structure `enb`.

This signal is only defined for subframes 0 and 5; therefore, an empty vector is returned for other values of `NSubframe`. This allows this function and the corresponding indices function `lteSSSIndices` to be used to index the resource grid, as described in “Resource Grid Indexing”, for any subframe number, but the resource grid is only modified in subframes 0 and 5.

Examples

Generate SSS Values

Generate secondary synchronization signal (SSS) values for a physical layer cell identity of 1.

```
sss = lteSSS(struct('NCellID',1,'NSubframe',0));
sss(1:4)

     1
    -1
     1
     1
```

Input Arguments

enb — Cell-wide settings
structure

Cell-wide settings, specified as a structure. This structure can contain the following fields.

NCellID — Physical layer cell identity

integer

Physical layer cell identity, specified as an integer.

Data Types: double

NSubframe — Subframe number

0 (default) | Optional | integer

Subframe number, specified as an integer.

Data Types: double

Data Types: struct

Output Arguments

sss — Secondary synchronization signal

complex column vector

Secondary synchronization signal (SSS), returned as a complex column vector. The vector contains the SSS values for cell-wide settings in the `enb` structure.

Data Types: double

Complex Number Support: Yes

See Also

`ltePSS` | `lteSSSIndices`

Introduced in R2014a

lteSSSIndices

SSS resource element indices

Syntax

```
ind = lteSSSIndices(enb)
ind = lteSSSIndices(enb,port)
ind = lteSSSIndices( ____,opts)
```

Description

`ind = lteSSSIndices(enb)` returns a column vector of resource element indices, port 0 oriented, given the parameter fields of structure, `enb`. It returns a column vector of resource element (RE) indices for the Secondary Synchronization Signal (SSS). By default, the indices are returned in 1-based linear indexing form that can directly index elements of a 3-D array representing the resource array. These indices are ordered as the SSS modulation symbols should be mapped. Alternative indexing formats can also be generated.

These indices are only defined for subframes 0 and 5; therefore, an empty vector is returned for other values of `Nsubframe`. This allows this function and the corresponding sequence function, `lteSSS`, to be used to index the resource grid, as described in “Resource Grid Indexing”, for any subframe number. However, the resource grid is only modified in subframes 0 and 5.

`ind = lteSSSIndices(enb,port)` returns indices appropriate for an antenna port, `port`, which must be either 0, 1, 2, or 3.

`ind = lteSSSIndices(____,opts)` allows control of the format of the returned indices through a cell array, `opts`, of option strings.

Examples

Generate SSS RE Indices in Linear Form

Get 0-based SSS resource element indices in linear form for antenna port 0.

```
enb = lteRMCDL('R.4');
sssIndices = lteSSSIndices(enb,0,{'Obased','ind'});
sssIndices(1:4)
```

```
365
366
367
368
```

Generate SSS RE Indices in Subscript Form

Generate 0-based SSS resource element indices in subscript form for antenna port 0. In this case, a matrix is generated where each row has three columns representing subcarrier, symbol, and antenna port.

Generate 0-based SSS resource element indices in subscript form for antenna port 0.

```
enb = lteRMCDL('R.4');
sssIndices = lteSSSIndices(enb,0,{'Obased','sub'});
sssIndices(1:4,:)
```

```
5         5         0
6         5         0
7         5         0
8         5         0
```

The first column of the output represents subcarrier. The second column represents symbol. The third column represents antenna port.

Input Arguments

enb — Cell-wide settings

structure

Cell-wide settings, specified as a structure. It contains the following fields.

NDLRB — Number of downlink resource blocks

positive integer (6...110)

Number of downlink resource blocks, specified as an integer between 6 and 110.

Data Types: double

CyclicPrefix — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

Data Types: char

NSubframe — Subframe number

0 (default) | Optional | integer

Subframe number, specified as an integer. Optional.

Data Types: double

DuplexMode — Duplex mode

'FDD' (default) | Optional | 'TDD'

Duplex mode, specified as 'FDD' or 'TDD'. Optional.

Data Types: char

Data Types: struct

port — Antenna port

0 | 1 | 2 | 3

Antenna port, specified as 0, 1, 2, or 3.

Data Types: double

opts — Format options for control of returned indices

string | cell array of strings

Format options for control of returned indices, specified as a string or a cell array strings. It can contain the following option strings.

Indexing style — Form of returned indices

'ind' (default) | 'sub'

Form of returned indices, specified as 'ind' or 'sub'. The 'ind' options represents the linear index form, and the 'sub' string represents the subcarrier, symbol, antenna subscript row form.

Data Types: char

Index base — Index base of returned indices

'1based' (default) | '0based'

Index base of returned indices, specified as '1based' or '0based'.

Data Types: char

Data Types: char | cell

Output Arguments

ind — SSS resource element (RE) indices

column vector

SSS resource element (RE) indices, returned as a column vector. By default, the indices are returned in 1-based linear indexing form that can directly index elements of a 3D array representing the resource array. These indices are ordered as the SSS modulation symbols should be mapped. Alternative indexing formats can also be generated.

Data Types: double

See Also

ltePSSIndices | lteSSS

Introduced in R2014a

lteSymbolDemodulate

Demodulation and symbol to bit conversion

Syntax

```
out = lteSymbolDemodulate(in,mod)
out = lteSymbolDemodulate(in,mod,dec)
```

Description

`out = lteSymbolDemodulate(in,mod)` returns a column vector containing bits resulting from soft constellation demodulation of complex values in vector `in`. The demodulation algorithm assumes the vector of received symbols are normalized to fall on constellation points as defined by `in`. `lteSymbolModulate` provides an output with the expected constellation scaling.

`out = lteSymbolDemodulate(in,mod,dec)` allows the decision mode, `dec`, to be specified as either 'Hard' or 'Soft'.

Examples

Demodulate Complex-Valued Symbols

Use 'Hard' decision to demodulate complex valued symbols.

```
out = lteSymbolDemodulate([0.7 - 0.7i; -0.7 + 0.7i], 'QPSK', 'Hard')
```

```
out =
```

```
0
1
1
0
```

Input Arguments

in — Input symbols to demodulate

numeric column vector

Input symbols to demodulate, specified as a column vector of complex numeric values. Demodulation is performed assuming the input constellation power normalization in accordance with TS 36.211, Section 7.1 [2], as follows:

- $1/\sqrt{2}$ for 'BPSK' and 'QPSK'
- $1/\sqrt{10}$ for '16QAM'
- $1/\sqrt{42}$ for '64QAM'
- $1/\sqrt{170}$ for '256QAM'

Example: For 'BPSK' and 'QPSK' [0.707 - 0.707i; -0.707 + 0.707i]

Data Types: double

Complex Number Support: Yes

mod — Modulation format

'BPSK' | 'QPSK' | '16QAM' | '64QAM' | '256QAM'

Modulation format, specified as a string.

Data Types: char

dec — Decision mode

'Hard' | 'Soft'

Decision mode, specified as a string.

Data Types: char

Output Arguments

out — Demodulated output bits

numeric column vector

Demodulated output bits, returned as a numeric column vector. This argument contains bits resulting from soft constellation demodulation of complex values vector, `in`.

'Hard' decision mode results in the output containing the bit sequences corresponding to the closest constellation points to the input.

'Soft' decision mode results in the output indicating the bit values using the sign (-ve for 0, +ve for 1). For 'Soft' decision mode, the magnitude of the output gives a piecewise linear approximation to the log likelihood ratio (LLR) of the demodulated bits. The algorithm used for the LLR approximation is described in [1]. The returned LLRs are scaled such that for a input signal lying on the constellation points in the preceding description, the output values lie on the points with the following magnitudes.

- 1 for 'BPSK'
- $1/\sqrt{2}$ for 'QPSK'
- $[1\ 3]/\sqrt{10}$ for '16QAM'
- $[1\ 3\ 5\ 7]/\sqrt{42}$ for '64QAM'
- $[1\ 3\ 5\ 7\ 9\ 11\ 13\ 15]/\sqrt{170}$ for '256QAM'

Data Types: `double`

References

- [1] Tosato, F., and Bisaglia, P. "Simplified soft-output demapper for binary interleaved COFDM with application to HIPERLAN/2." *IEEE International Conference on Communications (ICC) 2002, Vol. 2*. pp. 664-668.
- [2] 3GPP TS 36.211. "Physical Channels and Modulation." *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteLayerDemap` | `lteSymbolModulate` | `lteULDescramble`

Introduced in R2014a

lteSymbolModulate

Symbol modulation

Syntax

```
out = lteSymbolModulate(in,mod)
```

Description

`out = lteSymbolModulate(in,mod)` maps the bit values, `in`, to complex modulation symbols with the modulation scheme specified in the `mod` string.

Examples

Generate QPSK Modulated Symbols

Map bit values to QPSK modulated symbols.

```
out = lteSymbolModulate([0; 1; 1; 0], 'QPSK')
```

```
out =
```

```
    0.7071 - 0.7071i  
   -0.7071 + 0.7071i
```

Input Arguments

in — Input bits

column vector

Input bits, specified as a column vector, where each bit is either 0 or 1. The vector length must be a multiple of 2 for QPSK modulation, 4 for 16QAM modulation, 6 for 64QAM modulation and 8 for 256QAM. The bit values must be 0 or 1.

Data Types: double

mod — Modulation scheme

'BPSK' | 'QPSK' | '16QAM' | '64QAM' | '256QAM'

Modulation scheme, specified as a string. Valid values are 'BPSK', QPSK, 16QAM, 64QAM, and 256QAM.

Data Types: char

Output Arguments

out — Complex modulated output symbols

column vector

Complex modulated output symbols, returned as a column vector. The symbols use the modulation scheme specified in `mod`.

Data Types: double

Complex Number Support: Yes

See Also

lteDLPrecode | lteLayerMap | lteSymbolDemodulate | lteULScramble

Introduced in R2014a

lteTBS

Transport block size lookup

Use `lteTBS` to look up transport block sizes as defined in TS 36.213, Section 7.1.7.2 [1] tables. The tables are Release 12 compliant and contain 34 TBS values for each of the 111 number of physical resource blocks entries. The first 27 table entries are the Release 8–Release 11 compatible TBSs.

Syntax

```
tbs = lteTBS(nprb)
tbs = lteTBS(nprb,itbs)
tbs = lteTBS(nprb,itbs,smnlayer)
```

Description

`tbs = lteTBS(nprb)` returns the column of TS 36.213, Table 7.1.7.2.1-1 [1] for the number of physical resource blocks, `nprb`, specified. Table 7.1.7.2.1-1 is for transport blocks not mapped to two or more spatial multiplexing layers. The returned column vector, `tbs`, has 34 elements, corresponding to transport block size indices from 0 to 33.

`tbs = lteTBS(nprb,itbs)` uses an additional input, `itbs` (a vector of transport block size indices from 0 to 33) to restrict returned vector of values. A value in the `itbs` vector equal to `-1`, indicates a discontinuous transmission (DTX) and `lteTBS` produces a corresponding `tbs` value of 0.

`tbs = lteTBS(nprb,itbs,smnlayer)` uses an additional input, `smnlayer` to indicate the number of spatial multiplexing layers to which the transport block is mapped. This combines TS 36.213, Table 7.1.7.2.1-1 [1] with the appropriate spatial layer TBS translation table:

- For 2-layer spatial multiplexing, the function follows the rules in TS 36.213, Section 7.1.7.2.2 [1].
- For 3-layer spatial multiplexing, the function follows the rules in TS 36.213, Section 7.1.7.2.4 [1].
- For 4-layer spatial multiplexing, the function follows the rules in TS 36.213, Section 7.1.7.2.5 [1].

For transmission schemes that do not support spatial multiplexing ('Port0', 'TxDiversity', 'Port5', 'Port8'), set `smnlayer = 1`.

Examples

Generate Transport Block Sizes for Release 12

Generate the set of 34 transport block sizes from TS 36.213, Table 7.1.7.2.1-1 (Release 12) that are valid for a single PRB allocation.

```
tbs = lteTBS(1)
```

```
tbs =
```

```
    16  
    24  
    32  
    40  
    56  
    72  
   328  
   104  
   120  
   136  
   144  
   176  
   208  
   224  
   256  
   280  
   328  
   336  
   376  
   408  
   440  
   488  
   520  
   552  
   584  
   616  
   712  
   648
```

680
712
776
808
840
968

Generate Transport Block Sizes for Three Spatial Layers

Generate the set of 27 Release 8-Release 11 transport block sizes for a single PRB allocation and 3 spatial layers.

```
nprb = 1;  
itbs = 0:26;  
smnlayer = 3;
```

```
tbs = lteTBS(nprb, itbs, smnlayer)
```

```
tbs =
```

56
88
144
176
208
224
256
328
392
456
504
584
680
744
840
904
968
1064
1160
1288
1384
1480
1608

1736
1800
1864
2216

Input Arguments

nprb — Number of physical resource blocks

1,...,110

Number of physical resource blocks, specified as a positive scalar integer from 1 to 110.

Data Types: double

itbs — Transport block size indices

numeric vector

Transport block size indices, specified as a numeric vector.

Data Types: double

smn1ayer — Number of spatial multiplexing layers to which transport block is mapped

1,...,4

Number of spatial multiplexing layers to which transport block is mapped, specified as a positive scalar integer from 1 to 4.

Data Types: double

Output Arguments

tbs — Transport block size or sizes

column vector | nonnegative integer

Transport block size or sizes, returned as a column vector of nonnegative integers from the transport block size table in TS 36.213, Section 7.1.7.2 [1]. This vector contains up to 34 rows, corresponding to TBS indices from 0 to 33.

Data Types: int32

References

- [1] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteDLSCH | lteMCS | ltePDSCH | ltePUSCH | lteULSCH

Introduced in R2014a

lteTestModel

Downlink test model configuration structure

Syntax

```
tm = lteTestModel(tmn,bw)
tm = lteTestModel(tmn,bw,ncellid,duplexmode)
tm = lteTestModel(tmcfg)
```

Description

`tm = lteTestModel(tmn,bw)` returns the E-UTRA test model (E-TM) configuration structure, `tm` for given test model number, `tmn`, and bandwidth, `bw`, as specified in TS 36.141 Section 6 [1]. `tm` is a structure that contains the configuration parameters required to generate a given downlink E-TM waveform using the generator tool, `lteTestModelTool`. The field names and default values are in accordance with the definition found in TS 36.141 Section 6 [1].

The `PDSCH` is a substructure relating to the physical channel configuration and contains the fields `NLayers`, `TxScheme`, and `Modulation`.

`tm = lteTestModel(tmn,bw,ncellid,duplexmode)` controls the configuration of the physical cell identity, `ncellid`, and duplex mode, `duplexmode`.

`tm = lteTestModel(tmcfg)` returns `tm`, a configuration structure for the test model partially (or wholly) defined by the input structure `tmcfg`. The input structure `tmcfg` can define any (or all) of the parameters or substructure parameters and the output structure `tm` retains the defined parameters. The undefined fields are given appropriate default values.

The `tm` structure can be used with the E-TM generator tool to generate a waveform. `tm` must contain at least the `TMN` and `BW` fields.

Examples

Create Downlink E-TM Configuration Structure

Create the configuration structure for Test Model TS 36.141 E-TM 3.2, 20MHz.

Specify test model number and bandwidth for `tm` configuration structure to be initialized. Create `tm` and view contents.

```
tmn = '3.2';  
bw = '20MHz';  
  
tm = lteTestModel(tmn, bw)  
tm.PDSCH  
  
tm =  
  
          TMN: '3.2'  
          BW: '20MHz'  
          NDLRB: 100  
          CellRefP: 1  
          NCellID: 1  
          CyclicPrefix: 'Normal'  
          CFI: 1  
          Ng: 'Sixth'  
          PHICHDuration: 'Normal'  
          NSubframe: 0  
          TotSubframes: 10  
          Windowing: 0  
          DuplexMode: 'FDD'  
          PDSCH: [1x1 struct]  
          CellRSPower: 0  
          PSSPower: 2.4260  
          SSSPower: 2.4260  
          PBCHPower: 2.4260  
          PCFICHPower: 0  
          NAllocatedPDCCHREG: 180  
          PDCCHPower: 1.1950  
          PDSCHPowerBoosted: 2.4260  
          PDSCHPowerDeboosted: -3  
  
ans =
```



```
TxScheme: 'Port0'
Modulation: {'16QAM' 'QPSK'}
NLayers: 1
```

Input Arguments

tmn — Test model number

'1.1' | '1.2' | '2' | '3.1' | '3.2' | '3.3'

Test model number, specified as a string. See TS 36.141 [1] for information on the types.

Data Types: char

bw — Channel bandwidth type

'1.4MHz' | '3MHz' | '5MHz' | '10MHz' | '15MHz' | '20MHz' | '9RB' | '11RB' |
'27RB' | '45RB' | '64RB' | '91RB'

Channel bandwidth type, specified as a string. You can set the nonstandard bandwidths, '9RB', '11RB', '27RB', '45RB', '64RB', and '91RB', only when `tmn` is '1.1'. These nonstandard bandwidths specify custom test models.

Data Types: char

ncellid — Physical layer cell identity

1 for standard bandwidths and 10 for non-standard bandwidths (default) | optional |
scalar integer | 0,...,503

Physical layer cell identity, specified as a scalar integer. If not specified, defaults to 1 for standard bandwidths and 10 for non-standard bandwidths.

Data Types: double

duplexmode — Duplex mode

'FDD' (default) | 'TDD' | optional

Duplex mode, specified as a string.

Data Types: char

tmcfg — Test model configuration

scalar structure

Test model configuration, specified as a scalar structure. Refer to the output `tm` for structure fields. Define any or all listed parameters or substructure parameters in the input structure, `tmcfg`. The output structure, `tm`, retains the defined parameters and appropriate defaults are assigned for undefined fields.

Data Types: `struct`

Output Arguments

`tm` — E-UTRA test model (E-TM) configuration

scalar structure

E-UTRA test model (E-TM) configuration, returned as a scalar structure. `tm` contains the following fields.

Parameter Field	Values	Description
TMN	'1.1', '1.2', '2', '3.1', '3.2', '3.3'	Test model number type, returned as a string.
BW	'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz', '9RB', '11RB', '27RB', '45RB', '64RB', '91RB',	Channel bandwidth type, in MHz, returned as a string. Non-standard bandwidths, '9RB', '11RB', '27RB', '45RB', '64RB', and '91RB', specify custom test models.
NDLRB	Nonnegative scalar integer	Number of downlink (DL) resource blocks (RBs)
CellRefP	1	Number of cell-specific reference signal antenna ports, returned as 1. This argument is for informational purposes and is read-only.
NCellID	Nonnegative scalar integer (0,...,503)	Physical layer cell identity
CyclicPref	'Normal'	Cyclic prefix length, returned as the string, 'Normal'. This argument is for informational purposes and is read-only.
CFI	1, 2, or 3	Control format indicator value, returned as a positive scalar integer.

Parameter Field	Values	Description
Ng	'Sixth', 'Half', 'One', 'Two'	HICH group multiplier
PHICHDurat	'Normal', 'Extended'	PHICH duration
NSubframe	Nonnegative scalar integer	Subframe number
TotSubfram	Nonnegative scalar integer	Total number of subframes to generate
Windowing	Nonnegative scalar integer	Number of time-domain samples over which windowing and overlapping of OFDM symbols is applied
DuplexMode	'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> 'FDD' for Frequency Division Duplex or 'TDD' for Time Division Duplex
CellRSPowe	Numeric scalar	Cell-specific reference symbol power adjustment, in dB
PSSPower	Numeric scalar	Primary synchronization signal (PSS) symbol power adjustment, in dB
SSSPower	Numeric scalar	Secondary synchronization signal (SSS) symbol power adjustment, in dB
PBCHPower	Numeric scalar	PBCH symbol power adjustment, in dB
PCFICHPower	Numeric scalar	PCFICH symbol power adjustment, in dB
NAAllocated	Nonnegative scalar integer	Number of allocated PDCCH REGs, returned as a nonnegative scalar integer. This argument is derived from t_{mn} and BW.
PDCCHPower	Numeric scalar	PDCCH symbol power adjustment, in dB
PDSCHPower	Numeric scalar	PDSCH symbol power adjustment, in dB, for the boosted physical resource blocks (PRBs)
PDSCHPower	Numeric scalar	PDSCH symbol power adjustment, in dB, for the de-boosted physical resource blocks (PRBs)

Parameter Field	Values	Description
The following fields are present only when <code>DuplexMode</code> is set to 'TDD'.		
TDDConfig	Numeric scalar 3 (default) 1,...,6	Uplink or downlink configuration TDDConfig enumerates the subframe uplink-downlink configuration to be used in this frame. TS 36.211, Section 4.2 [2] specifies uplink-downlink configurations (uplink, downlink, and special subframe combinations).
SSC	Numeric scalar 8 (default) 1,...,9	Special subframe configuration (SSC) SSC enumerates the special subframe configuration. TS 36.211, Section 4.2 [2] specifies the special subframe configurations (lengths of DwPTS, GP, and UpPTS).
PDSCH	Scalar structure	PDSCH transmission configuration substructure

PDSCH substructure

The substructure PDSCH relates to the physical channel configuration and contains these fields:

Parameter Field	Values	Description
NLayers	1	Number of transmission layers, returned as 1. This argument is for informational purposes and is read-only.
TxScheme	'Port0'	Transmission scheme, returned as the string 'Port0'. This argument is for informational purposes and is read-only. The E-TMs have a single antenna port, Port 0.
Modulation	('QPSK', '16QAM', '64QAM', '256QAM') Cell array of one or two strings.	Modulation formats, returned as a cell array of one or two strings specifying the modulation formats for boosted and deboosted PRBs.

Data Types: struct

References

- [1] 3GPP TS 36.141. “Base Station (BS) conformance testing.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.211. “Physical channels and modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteRMCDL | lteRMCUL | lteTestModelTool

Introduced in R2014a

lteTestModelTool

Downlink test model waveform generation

Syntax

```
[waveform,grid,tm] = lteTestModelTool  
[waveform,grid,tm] = lteTestModelTool(tmn,bw,ncellid,duplexmode)  
[waveform,grid,tm] = lteTestModelTool(tm)
```

Description

`[waveform,grid,tm] = lteTestModelTool` starts a user interface for the parameterization and generation of the E-UTRA test model (E-TM) waveforms. The main function outputs are specified in the GUI but can also be assigned to variables. `waveform` represents the generated E-TM time-domain waveform. It is a T -by- P array, where T is the number of time-domain samples and P is the number of antennas. TS 36.141, Section 6 [1] fixes $P = 1$, making `waveform` a T -by-1 column vector. `grid`, the populated resource grid, is a 2-D array of resource elements for a number of subframes (10 for FDD and 20 for TDD) across a single antenna port, as specified in TS 36.141, Section 6 [1] and described in “Data Structures”. `tm` is a structure containing information about the OFDM modulated waveform as described in `lteOFDMInfo` and test model specific configuration parameters as described in `lteTestModel`.

`[waveform,grid,tm] = lteTestModelTool(tmn,bw,ncellid,duplexmode)` returns the `waveform`, `grid`, and `tm` for the test model number `tmn` and channel bandwidth `bw`. The `ncellid` and `duplexmode` are the optional input parameters and define the physical cell identity and duplex mode of the generated waveform, respectively.

The input `tmn` is a string identifying the test model number as per [1].

`[waveform,grid,tm] = lteTestModelTool(tm)` where the input is the user-defined test model configuration structure `tm` as input parameter.

 
Examples

Generate Downlink E-TM Waveform

Generate a time domain signal, `txWaveform`, and a 2-dimensional array of the Resource Elements, `txGrid`, for Test Model TS36.141 E-TM3.2 with 15MHz bandwidth.

Specify test model number and bandwidth for `tmCfg` configuration structure and create it. Generate `txWaveform`. View the waveform with a spectrum analyzer.

```
tmn = '3.2';  
bw = '15MHz';  
tmCfg = lteTestModel(tm, bw);  
  
[txWaveform, txGrid, tm] = lteTestModelTool(tmCfg);  
  
h = dsp.SpectrumAnalyzer('SampleRate', tm.SamplingRate);  
step(h, txWaveform);
```

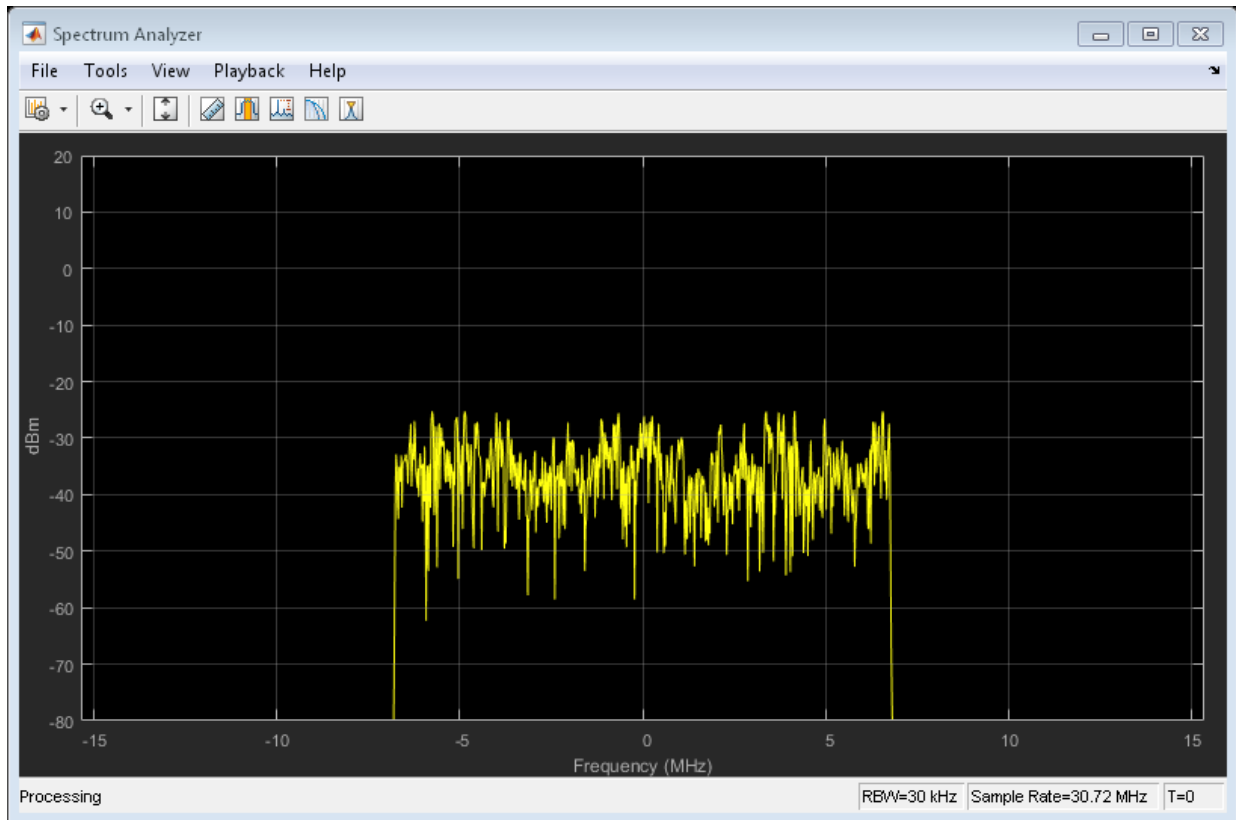


Launch LTE Test Model Generator Tool

Launch the tool to generate an E-UTRA Test Model (E-TM) waveform.

The LTE Downlink E-TM Generator dialog box appears for you to adjust as desired to generate E-TM waveforms.
 
```
lteTestModelTool;
```

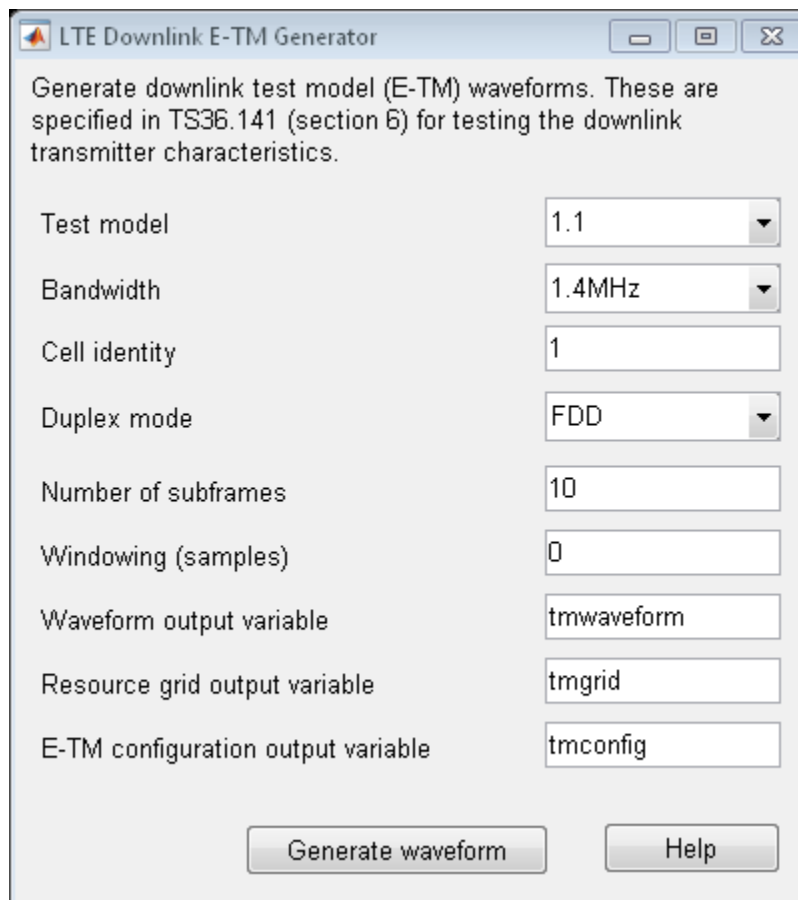- “Generate a Test Model”
- “Generate LTE Test Model Waveforms”

Input Arguments

tmn — Test model number

'1.1' | '1.2' | '2' | '3.1' | '3.2' | '3.3'

Test model number, specified as a string. For more information on these test model numbers, see [1].

Example: '3.2'

Data Types: char

bw — Channel bandwidth

'1.4MHz' | '3MHz' | '5MHz' | '10MHz' | '15MHz' | '20MHz' | '9RB' | '11RB' | '27RB' | '45RB' | '64RB' | '91RB'

Channel bandwidth, specified as a string. You can set the nonstandard bandwidths, '9RB', '11RB', '27RB', '45RB', '64RB', and '91RB', only when `tmn` is '1.1'. These nonstandard bandwidths specify custom test models.

Example: '15MHz'

Data Types: char

ncellid — Physical layer cell identity

1 or 10 (default) | optional | scalar integer

Physical layer cell identity, specified as a scalar integer. Optional. If you do not specify this argument, the default is 1 for standard bandwidths and 10 for non-standard bandwidths.

Example: 1

Data Types: double

duplexmode — Duplex mode of the generated waveform

'FDD' (default) | optional | 'TDD'

Duplex mode of the generated waveform, specified as a string. Optional.

Example: 'FDD'

Data Types: char

tm — User-defined test model configuration

scalar structure

User-defined test model configuration, specified as a scalar structure. You can use `lteTestModel` generates the various `tm` configuration structures as per TS 36.141, Section 6 [1]. This configuration structure then can be modified as per requirements and used to generate the waveform.

Data Types: struct

Output Arguments

waveform — Generated E-TM time-domain waveform

numeric matrix

Generated E-TM time-domain waveform, returned as a numeric matrix of size T -by- P . Where P is the number of antennas and T is the number of time-domain samples.

Data Types: double

Complex Number Support: Yes

grid — Resource grid

numeric matrix

Resource grid, returned as a numeric matrix. This argument is a 2 - D array of resource elements for a number of subframes across a single antenna port.

Data Types: double

Complex Number Support: Yes

tm — Test model configuration

scalar structure

Test model configuration, returned as a scalar structure. This argument contains information about the OFDM modulated waveform and test model configuration parameters. `tm` contains the following fields.

TMN — Test model number type

'1.1' | '1.2' | '2' | '3.1' | '3.2' | '3.3'

Test model number type, returned as a string.

Data Types: char

BW — Channel bandwidth type

'1.4MHz' | '3MHz' | '5MHz' | '10MHz' | '15MHz' | '20MHz' | '9RB' | '11RB' | '27RB' | '45RB' | '64RB' | '91RB'

Channel bandwidth type, in MHz, returned as a string. Non-standard bandwidths, '9RB', '11RB', '27RB', '45RB', '64RB', and '91RB', specify custom test models.

Data Types: char

NDLRB — Number of downlink resource blocks

100 | nonnegative scalar integer

Number of downlink resource blocks, returned as a nonnegative scalar integer.

Data Types: double

CellRefP — Number of cell-specific reference signal antenna ports

1

Number of cell-specific reference signal antenna ports, returned as 1. This argument is for informational purposes and is read-only.

Data Types: double

NCe11ID — Physical layer cell identity

scalar integer

Physical layer cell identity, returned as a scalar integer.

Data Types: double

CyclicPrefix — Cyclic prefix length

'Normal'

Cyclic prefix length, returned as the string, 'Normal'. This argument is for informational purposes and is read-only.

Data Types: char

CFI — Control format indicator value

1 | 2 | 3

Control format indicator value, returned as a positive scalar integer. Valid values are 1, 2, and 3.

Data Types: double

Ng — HICH group multiplier

'Sixth' | 'Half' | 'One' | 'Two'

HICH group multiplier, returned as a string.

Data Types: char

PHICHDuration — PHICH duration

'Normal' | 'Extended'

PHICH duration, returned as a string.

Data Types: char

NSubframe — Subframe number

nonnegative scalar integer

Subframe number, returned as a nonnegative scalar integer.

Data Types: double

TotSubframes — Total number of subframes to be generated

nonnegative scalar integer

Total number of subframes to be generated, returned as a nonnegative scalar integer.

Data Types: double

Windowing — Number of windowing samples

nonnegative scalar integer

Number of windowing samples, returned as a nonnegative scalar integer. This argument is the number of time-domain samples over which windowing and overlapping of OFDM symbols is applied.

Data Types: double

DuplexMode — Duplex mode

'FDD' (default) | optional | 'TDD'

Duplex mode, returned as a string. Optional.

Data Types: char

TDDConfig — Present only for TDD duplex mode. Uplink/Downlink Configuration

3 (default) | numeric scalar | 1..6

TDDConfig enumerates the subframe uplink-downlink configuration to be used in this frame. TS 36.211, Section 4.2 [2] specifies uplink-downlink configurations (uplink, downlink, and special subframe combinations).

Data Types: double

SSC — Present only for TDD duplex mode. Special Subframe Configuration

8 (default) | numeric scalar | 1, ..., 9

SSC enumerates the special subframe configuration. TS 36.211, Section 4.2 [2] specifies the special subframe configurations (lengths of DwPTS, GP, and UpPTS).

Data Types: double

PDSCH — PDSCH transmission configuration

scalar structure

PDSCH transmission configuration, returned as a scalar structure. PDSCH contains the following fields.

NLayers — Number of transmission layers

1

Number of transmission layers, returned as 1. This argument is for informational purposes and is read-only.

Data Types: double

TxScheme — Transmission scheme

'Port0'

Transmission scheme, returned as the string 'Port0'. This argument is for informational purposes and is read-only. The E-TMs have a single antenna port, Port 0.

Data Types: char

Modulation — Modulation formats

{ 'QPSK' } | { '16QAM' } | { '64QAM' } | { '256QAM' } | cell array of one or two strings

Modulation formats, returned as a cell array of one or two strings specifying the modulation formats for boosted and deboosted PRBs.

Data Types: cell

Data Types: struct

CellRSPower — Cell-specific reference symbol power adjustment

numeric scalar

Cell-specific reference symbol power adjustment, in dB, returned as a numeric scalar.

Data Types: double

PSSPower — PSS symbol power adjustment

numeric scalar

PSS symbol power adjustment, in dB, returned as a numeric scalar.

Data Types: double

SSSPower — SSS symbol power adjustment

numeric scalar

SSS symbol power adjustment, in dB, returned as a numeric scalar.

Data Types: double

PBCHPower — PBCH symbol power adjustment

numeric scalar

PBCH symbol power adjustment, in dB, returned as a numeric scalar.

Data Types: double

PCFICHPower — PCFICH symbol power adjustment

numeric scalar

PCFICH symbol power adjustment, in dB, returned as a numeric scalar.

Data Types: double

NA1locatedPDCCHREG — Number of allocated PDCCH REGs

nonnegative scalar integer

Number of allocated PDCCH REGs, returned as a nonnegative scalar integer. This argument is derived from TMN and BW.

Data Types: double

PDCCHPower — PDCCH symbol power adjustment

numeric scalar

PDCCH symbol power adjustment, in dB, returned as a numeric scalar.

Data Types: double

PDSCHPowerBoosted — PDSCH symbol power adjustment for boosted PRBs

numeric scalar

PDSCH symbol power adjustment for boosted PRBs, in dB, returned as a numeric scalar.

Data Types: double

PDSCHPowerDeboosted — PDSCH symbol power adjustment for de-boosted PRBs

numeric scalar

PDSCH symbol power adjustment for de-boosted PRBs, in dB, returned as a numeric scalar.

Data Types: double

AllocatedPRB — Allocated PRB list

numeric scalar

Allocated PRB list, returned as a numeric scalar array.

Data Types: double

SamplingRate — Sampling rate

numeric scalar

Sampling rate, returned as a numeric scalar value.

Data Types: double

Nfft — Number of FFT points

128 (default) | numeric scalar

Number of FFT points, returned as an unsigned integer.

Data Types: uint32

Data Types: struct

References

- [1] 3GPP TS 36.141. “Base Station (BS) conformance testing.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

[2] 3GPP TS 36.211. "Physical channels and modulation." *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteDLConformanceTestTool | lteRMCDLTool | lteRMCULTool | lteTestModel

Introduced in R2014a

lteTurboDecode

Turbo decoding

Syntax

```
out = lteTurboDecode(in)
out = lteTurboDecode(in,nturbodecits)
```

Description

`out = lteTurboDecode(in)` returns the result of turbo decoding the input data `in`. The function can decode single data vectors or cell arrays of data vectors. In the case of cell array input, the output is a cell array containing the separately decoded input array vectors. The input data is assumed to be soft bit data that has been encoded with the parallel concatenated convolutional code (PCCC), as defined in section 5.1.3.2 of [1]. Each input data vector is assumed to be structured as three encoded parity streams concatenated in a block-wise fashion, `[S P1 P2]`, where `S` is the vector of systematic bits, `P1` is the vector of encoder 1 bits, and `P2` is the vector of encoder 2 bits. The decoder uses a default value of 5 iteration cycles. It returns the decoded bits in output vector `out` after performing turbo decoding using a sub-log-MAP (Max-Log-MAP) algorithm.

`out = lteTurboDecode(in,nturbodecits)` provides control over the number of turbo decoding iteration cycles via parameter `nturbodecits`. The `nturbodecits` is an optional parameter. If it is not provided, it uses the default value of 5 iteration cycles.

Examples

Turbo Decode Input Data

Perform turbo decoding for a cell array input.

```
turboEncoded = lteTurboEncode({ones(40,1),ones(6144,1)});
turboDecoded = lteTurboDecode(turboEncoded)
```

[40x1 int8] [6144x1 int8]

Input Arguments

in — Soft bit input data

numeric vector | numeric cell array of vectors

Soft bit input data, specified as a numeric vector or a cell array of vectors. The decoder expects the input bits to be encoded with the parallel concatenated convolutional code (PCCC), as defined in section 5.1.3.2 of [1].

Data Types: int8 | double | cell

nturbodecits — Number of turbo decoding iteration cycles

5 (default) | Optional | positive scalar integer (1...30)

Number of turbo decoder iteration cycles, specified as a positive scalar integer between 1 and 30. Optional.

Data Types: double

Output Arguments

out — Turbo decoded bits

integer column vector | cell array of integer column vectors

Turbo decoded bits, returned as an integer column vector or a cell array of integer column vectors.

Data Types: int8 | cell

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteCodeBlockDesegment | lteConvolutionalDecode | lteDLSCHDecode | lteRateRecoverTurbo | lteTurboEncode | lteULSCHDecode

Introduced in R2014a

lteTurboEncode

Turbo encoding

Syntax

```
out = lteTurboEncode(in)
```

Description

`out = lteTurboEncode(in)` returns the result of turbo encoding the input data, `in`. Only a finite number of acceptable data vector lengths can be coded. For more information, see table 5.1.3-3 of [1]. Filler bits are supported through negative input values.

The encoder is a parallel concatenated convolutional code (PCCC) with two 8-state constituent encoders and a contention-free interleaver. The coding rate of turbo encoder is 1/3. The three encoded parity streams are concatenated block-wise to form the encoded output, $[S \ P1 \ P2]$, where S is the vector of systematic bits, $P1$ is the vector of encoder 1 bits, and $P2$ is the vector of encoder 2 bits. To support the correct processing of filler bits, negative input bit values are specially processed. They are treated as logical 0 at the input to both encoders but their negative values are passed directly through to the associated output positions in subblocks S and $P1$.

Examples

Turbo Encode Input Data

Perform turbo encoding for a cell array input.

```
turboEncoded = lteTurboEncode({ones(40,1),ones(6144,1)})
```

[132x1 int8] [18444x1 int8]

Input Arguments

in — Input data

numeric vector | numeric cell array of vectors

Input data, specified as a numeric vector or a cell array of vectors.

Data Types: int8 | double | cell

Output Arguments

out — Turbo encoded bits

integer column vector | cell array of integer column vectors

Turbo encoded bits, returned as an integer column vector or a cell array of integer column vectors. If the input is a cell array, the output is a cell array containing the separately encoded input array vectors.

Data Types: int8 | cell

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteCodeBlockSegment | lteConvolutionalEncode | lteDLSCH |
lteRateMatchTurbo | lteTurboDecode | lteULSCH

Introduced in R2014a

lteTransmitDiversityDecode

Orthogonal space frequency block code decoding

Syntax

```
[out,csi] = lteTransmitDiversityDecode(in,hest)
```

Description

`[out,csi] = lteTransmitDiversityDecode(in,hest)` performs orthogonal space frequency block code (OSFBC) decoding of received symbols, `in`, and channel estimate, `hest`, returning the result in `out`.

Examples

Perform OSFBC decoding of PDSCH symbols

This example shows orthogonal space frequency block code (OSFBC) decoding of PDSCH symbols, using ideal channel estimates.

Generate a resource grid using multiple antennas to transmit a single PDSCH codeword.

```
enb = lteRMCDL('R.11');
enb.TotSubframes = 1;
[~,txGrid] = lteRMCDLTool(enb,[1;0;0;1]);
```

Extract the PDSCH symbols from this transmit grid

```
[ind,indInfo] = ltePDSCHIndices(enb,enb.PDSCH,enb.PDSCH.PRBSets);
pdschSym = txGrid(ind);
```

Create an ideal (identity) channel estimate

```
hest = permute( repmat(eye(enb.CellRefP),[1 1 indInfo.Gd]),[3 1 2]);
```

Decode the PDSCH symbols using the channel estimates

```
[out,csi] = lteTransmitDiversityDecode(pdschSym,hest);
```

Input Arguments

in — Received input symbols

numeric matrix

Received input symbols, specified as a numeric matrix. It has size M -by- $NRxAnts$, where M is the number of received symbols for each of $NRxAnts$ receive antennas.

Data Types: `double`

Complex Number Support: Yes

hest — Channel estimate

3-D numeric array

Channel estimate, specified as a 3-D numeric array. It has size M -by- $NRxAnts$ -by- $CellRefP$. M is the number of received symbols in `in`. $NRxAnts$ is the number of receive antennas. $CellRefP$ is the number of cell-specific reference signal antenna ports.

Data Types: `double`

Complex Number Support: Yes

Output Arguments

out — Decoded received symbols

complex-valued numeric column vector

Decoded received symbols, returned as a complex-valued numeric column vector. It has size M -by-1, where M is the number of received symbols for each receive antenna.

Data Types: `double`

Complex Number Support: Yes

csi — Soft channel state information

numeric column vector

Soft channel state information (CSI), returned as a numeric column vector. It has size M -by-1, where M is the number of received symbols for each receive antenna. `csi` provides an estimate of the received RE gain for each received RE.

Data Types: double

See Also

lteDLDeprecode

Introduced in R2014a

lteUCI3Decode

PUCCH format 3 transmission UCI decoding

Syntax

```
ucibits = lteUCI3Decode(cw,n)
```

Description

`ucibits = lteUCI3Decode(cw,n)` returns a column vector of decoded UCI bits, `ucibits`, resulting from decoding the soft bit column vector, `cw`. Where the output vector `ucibits` is expected to contain `n` bits. `ucibits` is empty if no HARQ-ACK bits are detected.

The decoder uses a maximum likelihood (ML) approach, assuming that `cw` has been demodulated using `ltePUCCH3Decode`, whose input had already been equalized to best restore the originally transmitted complex values. Specifically, this function assumes that `cw` is properly scaled to reflect a QPSK constellation ($\pm \sqrt{2}/2$ amplitude for real and imaginary parts). If multiple decoded UCI bit vectors have a likelihood equal to the maximum, `ucibits` is a matrix where each column represents one of the equally likely bit vectors. If a minimum likelihood threshold is not met, `ucibits` is empty.

Examples

Encoding and decoding HARQ-ACK feedback for PUCCH Format 3

This example shows how to encode and decode an ACK using PUCCH format 3 transmission UCI decoding.

Create a Tx ACK vector. Encode the vector using PUCCH format 3. Convert the logical bits into soft data.

```
txAck = [1;0;0;1];  
cw = lteUCI3Encode(txAck);
```

```
cw = (double(cw)-0.5)*sqrt(2.0);
```

Decode the received data using the PUCCH format 3 UCI decoder. Verify that the Rx ACK vector matches the Tx ACK vector.

```
rxAck = lteUCI3Decode(cw,length(txAck))
```

```
rxAck =
```

```
    1
    0
    0
    1
```

Input Arguments

cw — Soft bits to decode

numeric column vector

Soft bits to decode, specified as a numeric column vector.

Data Types: int8 | double

n — Number of bits to return

positive scalar integer (1...22)

Number of bits to return, specified as a positive scalar integer from 1 through 22.

Data Types: double

Output Arguments

ucibits — Concatenated HARQ-ACK bits, periodic CSI bits, and Scheduling Request (SR) bit

logical column vector

Concatenated HARQ-ACK bits, periodic CSI bits, and Scheduling Request (SR) bit, returned as a logical column vector. **ucibits** represents the $[a_0, a_1, \dots, a_{N-1}]$ bit sequence as described in TS 36.212 [1], Section 5.2.3.1. The number of bits returned, N , is defined by the input argument n .

ucibits is empty if no UCI bits are detected.

Data Types: `logical`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`ltePUCCH3Decode` | `lteUCI3Encode`

Introduced in R2014a

lteUCI3Encode

PUCCH format 3 transmission UCI encoding

Syntax

```
cw = lteUCI3Encode(ucibits)
```

Description

`cw = lteUCI3Encode(ucibits)` returns a column vector of coded UCI bits, `cw`, resulting from processing of control information, `ucibits` for PUCCH format 3. The `ucibits` is a vector of concatenated HARQ-ACK bits and any appended periodic CSI bits and/or scheduling request (SR) bits.

The UCI processing is defined in TS 36.212 [1], Section 5.2.3.1, and consists of a $(32, O)$ block code, where O is the number of bits in `ucibits`. The coded bit vector, `cw`, is 48 bits long.

Examples

Encode HARQ-ACK Feedback for PUCCH Format 3

Encode and decode HARQ-ACK feedback for PUCCH format 3.

Create a Tx ACK vector. Encode the vector using PUCCH format 3. Turn logical bits into 'LLR' data.

```
txAck = [1;0;0;1];  
cw = lteUCI3Encode(txAck);  
cw(cw == 0) = -1;
```

Decode the received data using the PUCCH format 3 UCI decoder. Verify that the Rx ACK vector matches the Tx ACK vector.

```
rxAck = lteUCI3Decode(cw,length(txAck))
```

```
rxAck =  
  
    1  
    0  
    0  
    1
```

Input Arguments

ucibits — Concatenated HARQ-ACK bits, periodic CSI bits, and Scheduling Request (SR) bit
logical vector of length 1–22

Concatenated HARQ-ACK bits, periodic CSI bits, and Scheduling Request (SR) bit, specified as a logical vector containing from 1 to 22 bits. **ucibits** represents the $[a_0, a_1, \dots, a_{N-1}]$ bit sequence as described in TS 36.212 [1], Section 5.2.3.1.

Data Types: `logical` | `double`

Output Arguments

cw — Coded UCI bits
48-by-1 integer column vector

Coded UCI bits, returned as a 48-by-1 integer column vector. This coded bit vector is 48 bits long.

Data Types: `int8`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`ltePUCCH3` | `lteUCI3Decode`

Introduced in R2014a

lteUCIDecode

PUCCH format 2, 2a, and 2b transmission UCI decoding

Syntax

```
ucibits = lteUCIDecode(cw,n)
```

Description

`ucibits = lteUCIDecode(cw,n)` returns a vector of decoded UCI bits, `ucibits`, resulting from decoding the soft bit column vector, `cw`, where the output vector, `ucibits`, is expected to contain `n` bits. `ucibits` is a column vector of CQI/PMI or RI bits (UCI), representing the CQI/PMI or RI information fields described in section 5.2.3.3 of [1]. `n` must be between 1 and 13. The decoder uses a maximum likelihood approach assuming that `cw` has been demodulated using `ltePUCCH2Decode` whose input had already been equalized to best restore the originally transmitted complex values. If multiple decoded UCI bit vectors have a likelihood equal to the maximum, `UCIBITS` will be a matrix where each column represents one of the equally likely bit vectors

Examples

Decode UCI Bits for PUCCH Format 2 Transmission

Decode UCI bits representing an RI value of 3.

For more information, see table 5.2.3.3.1-3 of [1].

```
uci = lteUCIDecode(ones(20,1)/sqrt(2),2)
```

```
    1
    0
```

Input Arguments

cw — Codeword of soft bits
numeric column vector

Codeword of soft bits, specified as a numeric column vector.

Data Types: `logical` | `double`

n — Number of bits

1...11

Number of bits, specified as a scalar integer from 1 to 11.

Data Types: `double`

Output Arguments

ucibits — Decoded UCI bits

logical column vector

Decoded UCI bits, returned as a logical column vector. UCI bits are CQI/PMI or RI information.

Data Types: `logical`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`ltePUCCH2Decode` | `lteUCI3Encode` | `lteUCIEncode`

Introduced in R2014a

lteUCIEncode

PUCCH format 2, 2a, and 2b transmission UCI encoding

Syntax

```
cw = lteUCIEncode(ucibits)
```

Description

`cw = lteUCIEncode(ucibits)` returns a column vector of coded UCI bits, `cw`, resulting from processing of control information, `ucibits`. `ucibits` is a column vector of CQI/PMI or RI bits (UCI), representing the CQI/PMI or RI information fields described in section 5.2.3.3 of [1]. `ucibits` should be a vector containing up to 13 bits. For PUCCH formats 2a and 2b with extended cyclic prefix, this vector should also contain the appended 1 or 2 HARQ-ACK bits for joint encoding.

The UCI processing is defined in section 5.2.3 of [1], and consists of a $(20,A)$ block code, where A is the number of bits in `ucibits`. The coded bit vector, `cw`, is 20 bits long.

Examples

Encode UCI Bits for PUCCH Format 2 Transmission

Encode UCI bits that represent an RI value of 3.

For more information, see table 5.2.3.3.1-3 of [1].

```
cw = lteUCIEncode([1;0])
```

```
1
1
1
1
1
1
1
1
1
1
```

1
1
1
1
1
1
1
1
1
1
1
1

Input Arguments

ucibits — Control information bits

logical vector of length 1 to 13

Control information bits, specified as a logical vector of length 1 to 13. This vector contains the CQI/PMI or RI logical bits (UCI), representing the CQI/PMI or RI information fields. It should be up to 13 bits in length. For PUCCH formats 2a and 2b with extended cyclic prefix, this vector should also contain the appended 1 or 2 HARQ-ACK bits for joint encoding.

Data Types: `logical`

Output Arguments

cw — Coded UCI bits

20-by-1 integer column vector

Coded UCI bits, returned as a 20-by-1 integer column vector. The coded bit vector is 20 bits long.

Data Types: `int8`

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePUCCH2 | lteUCI3Decode | lteUCIDecode

Introduced in R2014a

lteULChannelEstimate

PUSCH uplink channel estimation

Syntax

```
[hest, noiseest] = lteULChannelEstimate(ue,chs,rxgrid)
[hest, noiseest] = lteULChannelEstimate(ue,chs,cec,rxgrid)
[hest, noiseest] = lteULChannelEstimate(ue,chs,cec,rxgrid,refgrid)
[hest, noiseest] = lteULChannelEstimate(ue,chs,rxgrid,refgrid)
```

Description

`[hest, noiseest] = lteULChannelEstimate(ue,chs,rxgrid)` returns an estimate for the channel by averaging the least squares estimates of the reference symbols across time and copying these estimates across the allocated resource elements within the time frequency grid. It returns the estimated channel between each transmit and receive antenna and an estimate of the noise power spectral density. See “Algorithms” on page 1-864.

`[hest, noiseest] = lteULChannelEstimate(ue,chs,cec,rxgrid)` returns the estimated channel using the method and parameters defined by the user in the channel estimator configuration `cec` structure.

`[hest, noiseest] = lteULChannelEstimate(ue,chs,cec,rxgrid,refgrid)` returns the estimated channel using the method and parameters defined by the channel estimation configuration structure and the additional information about the transmitted symbols found in `refgrid`.

When `cec.InterpType` is set to 'None', values in `refgrid` are treated as reference symbols and the resulting `hest` contains non-zero values in their locations.

`[hest, noiseest] = lteULChannelEstimate(ue,chs,rxgrid,refgrid)` returns the estimated channel using the estimation method as described in TS 36.101, Annex F4 [1]. The method described utilizes extra channel information obtained through information of the transmitted symbols found in `refgrid`. This additional information allows for an improved estimate of the channel and is required for accurate EVM

measurements. `rxgrid` and `refgrid` must only contain a whole subframe worth of SC-FDMA symbols. For normal cyclic prefix, each subframe contains 14 SC-FDMA symbols. Therefore, N is 14.

Examples

Estimate Channel Characteristics for PUSCH

Use `lteULChannelEstimate` to estimate the channel characteristics for a received resource grid.

Initialize a UE configuration structure to RMC A3-2. Initialize the channel estimation configuration structure. Generate a transmission waveform. For the purpose of this example, we bypass the channel stage of the system model and copy `txWaveform` to `rxWaveform`.

```
ue = lteRMCUL('A3-2');
ue.TotSubframes = 1;
cec = struct('FreqWindow',7,'TimeWindow',1,'InterpType','cubic');
txWaveform = lteRMCULTool(ue,[1;0;0;1]);
rxWaveform = txWaveform;
```

Demodulate the SC-FDMA waveform and perform channel estimation operation on `rxGrid`.

```
rxGrid = lteSCFDMADemodulate(ue,rxWaveform);
hest = lteULChannelEstimate(ue,ue.PUSCH,cec,rxGrid);
```

```
Warning: Using default value for parameter field PilotAverage ('UserDefined')
Warning: Using default value for parameter field Reference ('Antennas')
```

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the command `"lteWarning('off','DefaultValue')"`.

Input Arguments

ue — UE-specific configuration structure

UE-specific configuration, specified as a structure. **ue** can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	6, 15, 25, 50, 75, 100	Number of uplink (UL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length for uplink, specified as a string.
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Hopping	Optional	'Off' (default), 'Group', or 'Sequence'	Frequency hopping method
SeqGroup	Optional	0 (default), 0 ... 29, Nonnegative scalar integer.	PUSCH sequence group assignment (<i>delta_SS</i>) Only used if NDMRSID or NPUSCHID is absent
CyclicShi	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for PUSCH DRS (yields <i>n1_DMRS</i>)
NPUSCHID	Optional	0 (default), Nonnegative scalar integer from 0 to 509.	PUSCH virtual cell identity. If this field is not present, NCellID is used for group hopping sequence-shift pattern initialization. See footnote 1
NDMRSID	Optional	0 (default), Nonnegative scalar integer from 0 to 509.	DMRS identity for cyclic shift hopping (Ncsh_DMRSID). If this field is not present, NCellID is used for cyclic shift hopping initialization.

Parameter Field	Required or Optional	Values	Description
			See footnote 1
1			The pseudo-random sequence generator for cyclic shift hopping is initialized according to NDMRSID, if present, otherwise it is initialized according to the cell identity NCellID and the sequence group assignment SeqGroup. Similarly, the sequence-shift pattern for group hopping is initialized according to NPUSCHID, if present, otherwise it is initialized according to NCellID and SeqGroup.

Data Types: struct

chs — PUSCH channel settings

structure

PUSCH channel settings, specified as a structure that can contain the following fields. The parameter field PMI is only required if ue.NTxAnts is set to 2 or 4.

Parameter Field	Required or Optional	Values	Description
PRBSet	Required	1- or 2-column integer matrix	Physical resource block set, specified as a 1-column or 2-column matrix. This parameter field contains the zero-based physical resource block (PRB) indices corresponding to the slot-wise resource allocations for this PUSCH. If PRBSet is a column vector, the resource allocation is the same in both slots of the subframe. To specify differing PRBs for each slot in a subframe, use a 2-column matrix. The PRB indices are zero based.
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers
DynCyclicSh	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Cyclic shift for DMRS (yields $n2_DMRS$)
OrthoCover	Optional	'Off' (default), 'On'	Applies ('On'), or does not apply ('Off'), orthogonal cover sequence, w (<i>Activate-DMRS-with OCC</i>)

The following field is required only when ue.NTxAnts is set to 2 or 4.

Parameter Field	Required or Optional	Values	Description
PMI	Optional	nonnegative scalar integer (0,...,23) 0 (default)	Scalar precoder matrix indication (PMI) to be used during precoding of the DRS reference symbols

Data Types: struct

rxgrid — Resource elements grid

3-D numeric array

Resource elements grid, specified as a 3-D numeric array of size M -by- N -by- $NRxAnts$. The second dimension of `rxgrid` contains one or more whole subframes worth of SC-FDMA symbols. For example, for normal cyclic prefix, each subframe contains 14 SC-FDMA symbols. Therefore, N is equal to $14 \times TotalNoSubframes$. If `TotalNoSubframes` is greater than one, the correct region is extracted from the returned `hest` array. The location of the estimated subframe within `hest` is specified using the `cec.Window` parameter field.

Data Types: double

Complex Number Support: Yes

cec — Channel estimator configuration

structure

Channel estimator configuration, specified as a structure with these fields.

Parameter Field	Required or Optional	Values	Description
FreqWindow	Required	Nonnegative scalar integer	Size of window in resource elements used to average over frequency during channel estimation The window size must be either an odd number or a multiple of 12.
TimeWindow	Required	Nonnegative scalar integer	Size of window in resource elements used to average over time during channel estimation

Parameter Field	Required or Optional	Values	Description														
			The window size must be an odd number.														
InterpType	Required	'nearest', 'linear', 'natural', 'cubic', 'v4', 'None' See footnote 1	Type of 2-D interpolation used during interpolation. For details, see <code>griddata</code> . Supported choices are shown in the following table.														
			<table border="1"> <thead> <tr> <th>String</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>'nearest'</td> <td>Nearest neighbor interpolation</td> </tr> <tr> <td>'linear'</td> <td>Linear interpolation</td> </tr> <tr> <td>'natural'</td> <td>Natural neighbor interpolation</td> </tr> <tr> <td>'cubic'</td> <td>Cubic interpolation</td> </tr> <tr> <td>'v4'</td> <td>MATLAB 4 <code>griddata</code> method</td> </tr> <tr> <td>'None'</td> <td>Disables interpolation</td> </tr> </tbody> </table>	String	Description	'nearest'	Nearest neighbor interpolation	'linear'	Linear interpolation	'natural'	Natural neighbor interpolation	'cubic'	Cubic interpolation	'v4'	MATLAB 4 <code>griddata</code> method	'None'	Disables interpolation
			String	Description													
			'nearest'	Nearest neighbor interpolation													
			'linear'	Linear interpolation													
			'natural'	Natural neighbor interpolation													
			'cubic'	Cubic interpolation													
'v4'	MATLAB 4 <code>griddata</code> method																
'None'	Disables interpolation																
PilotAverag	Optional	'UserDefined' 'TestEVM' See footnote 2	Type of pilot averaging														
Reference	Optional	'Antennas' (default), 'Layers', 'None' 3	Specifies point of reference (signals to internally generate) for channel estimation														
The following field is required only when <code>rxgrid</code> contains more than one subframe.																	
See footnote 4																	
Window	Optional	'Left', 'Right', 'Centred', 'Centered'	If more than one subframe is input this parameter is required to indicate the position of the subframe from <code>rxgrid</code> and <code>refgrid</code> containing the desired channel estimate. Only channel estimates for this subframe will be returned. For the 'Centred' and 'Centered' settings, the window size must be odd.														

Parameter Field	Required or Optional	Values	Description
1			For <code>cec.InterpType = 'None'</code> , no interpolation is performed between pilot symbols and no virtual pilots are created. <code>hest</code> will contain channel estimates in the locations of transmitted reference symbols for each received antenna and all other elements of <code>hest</code> are zero. The averaging of pilot symbols estimates described by <code>cec.TimeWindow</code> and <code>cec.FreqWindow</code> are still performed.
2			The 'UserDefined' pilot averaging uses a rectangular kernel of size <code>cec.FreqWindow-by-cec.TimeWindow</code> and performs a 2-D filtering operation upon the pilots. Pilots near the edge of the resource grid are averaged less as they have no neighbors outside of the grid. For <code>cec.FreqWindow = 12×X</code> (i.e. any multiple of 12) and <code>cec.TimeWindow = 1</code> the estimator enters a special case where an averaging window of $(12×X)$ -in-frequency is used to average the pilot estimates; the averaging is always applied across $(12×X)$ subcarriers, even at the upper and lower band edges; therefore the first $(6×X)$ symbols at the upper and lower band edge have the same channel estimate. This operation ensures that averaging is always done on 12 (or a multiple of 12) symbols. This provides the appropriate despreading operation required for the case multi-antenna transmission where the DRS signals associated with each antenna occupy the same time/frequency locations but use different orthogonal cover codes to allow them to be differentiated at the receiver. The 'TestEVM' pilot averaging ignores other structure fields in <code>cec</code> , and follows the method described in TS 36.101, Annex F for the purposes of transmitter EVM testing.
			[1]
3			Setting <code>cec.Reference</code> to 'Antennas' uses the PUSCH DMRS after precoding onto the transmission antennas as the reference for channel estimation. In this case, the precoding matrix indicated in <code>chs.PMI</code> is used to precode the DMRS layers onto antennas, and the channel estimate, <code>hest</code> , is a matrix of size M -by- N -by- $NRxAnts$ -by- <code>chs.NTxAnts</code> . Setting <code>cec.Reference</code> to 'Layers' uses the PUSCH DMRS without precoding as the reference for channel estimation. The channel estimate, <code>hest</code> , is of size M -by- N -by- $NRxAnts$ -by- <code>chs.NLayers</code> . Setting <code>cec.Reference</code> to 'None' generates no internal reference signals, and the channel estimation can be performed on arbitrary known REs as given by the <code>refgrid</code> argument. This approach can be used to provide a <code>refgrid</code> containing the SRS signals created on all <code>NTxAnts</code> , allowing for full-rank channel estimation for the purposes of PMI selection when the PUSCH is transmitted with less than full rank.
4			When <code>rxgrid</code> contains more than one subframe, <code>cec.Window</code> provides control of the location of the subframe for which channel estimation is performed. This allows channel estimation for the subframe of interest to be aided by the presence of pilot symbols occupying

Parameter Field	Required or Optional	Values	Description
			<p>the same resource block in subframes before and/or after that subframe. For example, if <code>rxgrid</code> contains five subframes, 'Left' estimates the last first subframe in <code>rxgrid</code>, 'Centred'/'Centered' estimates the third (middle) subframe, and 'Right' estimates the last subframe. The parameter <code>ue.NSubframe</code> corresponds to the chosen subframe. So, with three subframes and <code>cec.Window = 'Right'</code>, <code>rxgrid</code> corresponds to subframes (<code>ue.NSubframe-2</code>, <code>ue.NSubframe-1</code>, <code>ue.NSubframe</code>). The <code>hest</code> output will be the same size as <code>rxgrid</code> and will correspond to the same subframe numbers. All locations other than the estimated subframe will contain zeros.</p>

Data Types: `struct`

refgrid — Reference array of known transmitted data symbols in their correct locations

3-D numeric array

Reference array of known transmitted data symbols in their correct locations, specified as a 3-D numeric array of size M -by- N -by- $NTxAnts$. Represent all other locations, such as DRS Symbols and unknown data symbol locations, by NaN. `rxgrid` and `refgrid` must have the same dimensions.

A typical use for `refgrid` is to provide values of the SRS transmitted at some point during the time span of `rxgrid`. The SRS values can be used to enhance the channel estimation.

Data Types: `double`

Complex Number Support: Yes

Output Arguments

hest — Channel estimate between each transmit and receive antenna

4-D numeric array

Channel estimate between each transmit and receive antenna, returned as a 4-D numeric array of size M -by- N -by- $NRxAnts$ -by- $NTxAnts$. M is the total number of subcarriers, N is the number of SC-FDMA symbols, $NRxAnts$ is the number of receive antennas, and $NTxAnts$ is the number of transmit antennas. Optionally, the channel estimator can be configured to use the DMRS layers as the reference signal. In this case,

the array is an M -by- N -by- $NRxAnts$ -by- $NLayers$ array, where $NLayers$ is the number of transmission layers.

Data Types: `double`

Complex Number Support: Yes

noiseest — Noise estimate

numeric scalar

Noise estimate, returned as the power spectral density of the noise present on the estimated channel response coefficients, returned as a numeric scalar.

Data Types: `double`

More About

Algorithms

The channel estimation algorithm is described in the following steps.

- 1 Extract the demodulation reference signals, or pilot symbols, for a transmit-receive antenna pair from the allocated physical resource blocks within the received subframe.
- 2 Average the least-squares estimates to reduce any unwanted noise from the pilot symbols.
- 3 Using the cleaned pilot symbol estimates, interpolate to obtain an estimate of the channel for the entire number of subframes passed into the function.

Least-Squares Estimation

The least-squares estimates of the reference signals are obtained by dividing the received pilot symbols by their expected value. The least-squares estimates are affected by any system noise. This noise needs to be removed or reduced to achieve a reasonable estimation of the channel at pilot symbol locations.

Noise Reduction and Interpolation

To minimize the effects of noise on the pilot symbol estimates, the least-squares estimates are averaged. This simple method produces a substantial reduction in the

level of noise found on the pilot symbols. The pilot symbol averaging method uses an averaging window defined by the user. The averaging window size is measured in resource elements; any pilot symbols located within the window are used to average the value of the pilot symbol found at the center of the window.

Then, the averaged pilot symbol estimates are used to perform a 2-D interpolation across allocated physical resource blocks. The location of pilot symbols within the subframe is not ideally suited to interpolation. To account for this positioning, virtual pilots are created and placed out with the area of the current subframe. This placement allows complete and accurate interpolation to be performed.

Note: The PUSCH channel estimator is only able to deal with contiguous allocation of resource blocks in time and frequency.

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`griddata` | `lteEqualizeMIMO` | `lteEqualizeMMSE` | `lteEqualizeULMIMO`
| `lteEqualizeZF` | `lteSCFDMADemodulate` | `lteULFrameOffset` |
`lteULPerfectChannelEstimate`

Introduced in R2013b

lteULChannelEstimatePUCCH1

PUCCH format 1 uplink channel estimation

Syntax

```
[hest,noiseest] = lteULChannelEstimatePUCCH1(ue,chs,rxgrid)
[hest,noiseest] = lteULChannelEstimatePUCCH1(ue,chs,cec,rxgrid)
[hest,noiseest] = lteULChannelEstimatePUCCH1(ue,chs,cec,rxgrid,
refgrid)
[hest,noiseest] = lteULChannelEstimatePUCCH1(ue,chs,rxgrid,refgrid)
```

Description

[hest,noiseest] = lteULChannelEstimatePUCCH1(ue,chs,rxgrid) returns an estimate for the channel by averaging the least squares estimates of the reference symbols across time and copying these across the allocated resource elements within the time frequency grid. lteULChannelEstimatePUCCH1 returns **hest**, the estimated channel between each transmit and receive antenna and **noiseest**, an estimate of the noise power spectral density.

[hest,noiseest] = lteULChannelEstimatePUCCH1(ue,chs,cec,rxgrid) returns the estimated channel using the method and parameters defined by the user in the channel estimator configuration structure, **cec**.

[hest,noiseest] = lteULChannelEstimatePUCCH1(ue,chs,cec,rxgrid,refgrid) returns the estimated channel using the method and parameters defined by the channel estimation configuration structure and the additional information about the transmitted symbols found in **refgrid**. **refgrid** is an M -by- N -by- $NTxAnts$ array containing known transmitted data symbols in their correct locations. All other locations, i.e. DRS Symbols and unknown data symbol locations, should be represented by a NaN. The **rxgrid** and **refgrid** inputs must have the same dimensions. For **cec.InterpType** = 'None', values in **refgrid** are treated as reference symbols and the resulting **hest** will contain non-zero values in their locations.

[hest,noiseest] = lteULChannelEstimatePUCCH1(ue,chs,rxgrid,refgrid) returns the estimated channel using the estimation method as described in TS 36.101,

Annex F4 [1]. The method described utilizes extra channel information obtained through information of the transmitted symbols found in `refgrid`. This additional information allows for an improved estimate of the channel and is required for accurate EVM measurements. `rxgrid` and `refgrid` must only contain a whole subframe worth of SC-FDMA symbols i.e. for normal cyclic prefix each subframe contains 14 SC-FDMA symbols. Therefore, N is 14.

Examples

Estimate Channel Characteristics for PUCCH Format 1

Use the `lteULChannelEstimatePUCCH1` function to estimate channel characteristics for PUCCH Format 1

Initialize a UE configuration structure, PUCCH settings, and create a resource grid.

```
ue = struct('NULRB',6,'NCellID',0,'NSubframe',0,'Hopping','Off');
ue.CyclicPrefixUL = 'Normal';
ue.NTxAnts =1;
pucch1.ResourceIdx = 0;
pucch1.DeltaShift = 1;
pucch1.CyclicShifts = 0;
reGrid = lteULResourceGrid(ue);
reGrid(ltePUCCH1DRSIndices(ue,pucch1)) = ltePUCCH1DRS(ue,pucch1);
```

Warning: Using default value for parameter field ResourceSize (0)

For the purpose of this example, we skip SC-FDMA modulation, channel and SC-FDMA demodulation stages of the system model and use `reGrid` as the received resource grid. Initialize the channel estimation configuration structure and perform channel estimation operation on `reGrid`.

```
cec = struct('FreqWindow',12,'TimeWindow',1,'InterpType','Cubic');
hest = lteULChannelEstimatePUCCH1(ue,pucch1,cec,reGrid);
```

Warning: Using default value for parameter field PilotAverage ('UserDefined')
Warning: Using default value for parameter field ResourceSize (0)

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress

warnings for defaulted lte parameter settings precede code with the command "lteWarning('off','DefaultValue')."

Input Arguments

ue — UE-specific configuration settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
NPUCCHID	Optional	Nonnegative scalar integer (0, ...,503)	PUCCH virtual cell identity. If this field is not present, NCellID is used as the identity.

Data Types: struct

chs — PUCCH settings

structure

PUCCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 2047, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n1_pucch</i>)
ResourceSize	Optional	0 (default), 0 ... 98, Nonnegative scalar integer.	Size of resource allocated to PUCCH Format 2 (<i>N2RB</i>)
DeltaShift	Optional	1 (default), 2, 3	(<i>delta_shift</i>)
DeltaOffset	Optional	0 (default), 1, 2	<i>delta_offset</i> Warning: The use of this parameter field is deprecated. It only applies to 3GPP releases prior to v8.5.0. This parameter will be removed in a future release.
CyclicShifts	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH (<i>N1cs</i>)

Data Types: `struct`

rxgrid — Received resource element grid

3-D numeric array

Received resource element grid, specified as a 3-D numeric array of size *M*-by-*N*-by-*NRxAnts*. The second dimension of `rxgrid` contains one or more whole subframes worth of SC-FDMA symbols. e.g., for normal cyclic prefix each subframe contains 14 SC-FDMA symbols. Therefore, *N* is equal to $14 \times \text{TotalNoSubframes}$. If `TotalNoSubframes` is greater than one, the correct region is extracted from the returned `hest` array. The location of the estimated subframe within `hest` is specified using the parameter field `cec.Window`.

Data Types: `double`

Complex Number Support: Yes

cec — Channel estimator configuration

structure

Channel estimator configuration, specified as a structure with these fields.

Parameter Field	Required or Optional	Values	Description														
FreqWindow	Optional	Odd scalar integer or a multiple of 12	Size of window used to average over frequency, in resource elements (REs), specified as a scalar integer.														
TimeWindow	Optional	Odd scalar integer	Size of window used to average over time, in resource elements (REs), specified as a scalar integer.														
InterpType	Optional	'nearest', 'linear', 'natural', 'cubic', 'v4', 'None' See footnote 1	Type of 2-D interpolation used during interpolation. For details, see <code>griddata</code> . Supported choices are shown in the following table. <table border="1" data-bbox="937 961 1338 1402"> <thead> <tr> <th>String</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>'nearest'</td> <td>Nearest neighbor interpolation</td> </tr> <tr> <td>'linear'</td> <td>Linear interpolation</td> </tr> <tr> <td>'natural'</td> <td>Natural neighbor interpolation</td> </tr> <tr> <td>'cubic'</td> <td>Cubic interpolation</td> </tr> <tr> <td>'v4'</td> <td>MATLAB 4 <code>griddata</code> method</td> </tr> <tr> <td>'None'</td> <td>Disables interpolation</td> </tr> </tbody> </table>	String	Description	'nearest'	Nearest neighbor interpolation	'linear'	Linear interpolation	'natural'	Natural neighbor interpolation	'cubic'	Cubic interpolation	'v4'	MATLAB 4 <code>griddata</code> method	'None'	Disables interpolation
String	Description																
'nearest'	Nearest neighbor interpolation																
'linear'	Linear interpolation																
'natural'	Natural neighbor interpolation																
'cubic'	Cubic interpolation																
'v4'	MATLAB 4 <code>griddata</code> method																
'None'	Disables interpolation																
PilotAverage	Optional	'UserDefined' (default), 'TestEVM' See footnote 2	Type of pilot averaging														

Parameter Field	Required or Optional	Values	Description
The following parameter is required only if <i>rxgrid</i> contains more than one subframe.			
See footnote 3			
Window	Optional	'Left', 'Right', 'Centred', 'Centered'	If more than one subframe is input this parameter is required to indicate the position of the subframe from <i>rxgrid</i> and <i>refgrid</i> containing the desired channel estimate. Only channel estimates for this subframe will be returned. For the 'Centred' and 'Centered' settings, the window size must be odd.

Parameter Field	Required or Optional	Values	Description
1			For <code>cec.InterpType = 'None'</code> , no interpolation is performed between pilot symbols and no virtual pilots are created. <code>hest</code> will contain channel estimates in the locations of transmitted reference symbols for each received antenna and all other elements of <code>hest</code> are zero. The averaging of pilot symbols estimates described by <code>cec.TimeWindow</code> and <code>cec.FreqWindow</code> are still performed.
2			The 'UserDefined' pilot averaging uses a rectangular kernel of size <code>cec.FreqWindow-by-cec.TimeWindow</code> and performs a 2-D filtering operation upon the pilots. Pilots near the edge of the resource grid are averaged less as they have no neighbors outside of the grid. For <code>cec.FreqWindow = 12×X</code> (i.e. any multiple of 12) and <code>cec.TimeWindow = 1</code> the estimator enters a special case where an averaging window of $(12×X)$ -in-frequency is used to average the pilot estimates; the averaging is always applied across $(12×X)$ subcarriers, even at the upper and lower band edges; therefore the first $(6×X)$ symbols at the upper and lower band edge have the same channel estimate. This operation ensures that averaging is always done on 12 (or a multiple of 12) symbols. This provides the appropriate despreading operation required for the case multi-antenna transmission where the DRS signals associated with each antenna occupy the same time/frequency locations but use different orthogonal cover codes to allow them to be differentiated at the receiver. The 'TestEVM' pilot averaging ignores other structure fields in <code>cec</code> , and follows the method described in TS 36.101, Annex F for the purposes of transmitter EVM testing.
3			When <code>rxgrid</code> contains more than one subframe, <code>cec.Window</code> provides control of the location of the subframe for which channel estimation is performed. This allows channel estimation for the subframe of interest to be aided by the presence of pilot symbols occupying the same resource block in subframes before and/or after that subframe. For example, if <code>rxgrid</code> contains five subframes, 'Left' estimates the last first subframe in <code>rxgrid</code> , 'Centred'/'Centered' estimates the third (middle) subframe, and 'Right' estimates the last subframe. The parameter <code>ue.NSubframe</code> corresponds to the chosen subframe. So, with three subframes and <code>cec.Window = 'Right'</code> , <code>rxgrid</code> corresponds to subframes $(ue.NSubframe - 2, ue.NSubframe - 1, ue.NSubframe)$. The <code>hest</code> output will be the same size as <code>rxgrid</code> and will correspond to the same subframe numbers. All locations other than the estimated subframe will contain zeros.

Data Types: struct

refgrid — Reference array of known transmitted data symbols

3-D numeric array

Reference array of known transmitted data symbols in their correct locations, specified as a 3-D numeric array of size M -by- N -by- $NTxAnts$. All other locations, such as DRS symbols and unknown data symbol locations, should be represented by a NaN. `rxgrid` and `refgrid` must have the same dimensions.

Data Types: `double`

Complex Number Support: Yes

Output Arguments

hest — Channel estimate between each transmit and receive antenna

3-D numeric array

Channel estimate between each transmit and receive antenna, returned as a 3-D numeric array of size M -by- N -by- $NRxAnts$. M is the total number of subcarriers, N is the number of SC-FDMA symbols, and $NRxAnts$ is the number of receive antennas.

Data Types: `double`

noiseest — Noise estimate

numeric scalar

Noise estimate, returned as a numeric scalar. It is the power spectral density of the noise present on the estimated channel response coefficients.

Data Types: `double`

More About

Algorithms

The channel estimation algorithm functions as described in the following steps.

- 1 Extract the PUCCH format 1 demodulation reference signals (DRS), or pilot symbols, for a transmit-receive antenna pair from the allocated physical resource blocks within the received subframe.
- 2 Average the least-squares estimates to reduce any unwanted noise from the pilot symbols.
- 3 Using the cleaned pilot symbol estimates, interpolate to obtain an estimate of the channel for the allocated subframe slot passed into the function.

Least-Squares Estimation

The least-squares estimates of the reference signals are obtained by dividing the received pilot symbols by their expected value. The least-squares estimates are affected by any system noise. This noise needs to be removed or reduced to achieve a reasonable estimation of the channel at pilot symbol locations.

Noise Reduction and Interpolation

To minimize the effects of noise on the pilot symbol estimates, the least-squares estimates are averaged. This simple method produces a substantial reduction in the level of noise found on the pilot symbols. The pilot symbol averaging method uses an averaging window defined by the user. The averaging window size is measured in resource elements; any pilot symbols located within the window are used to average the value of the pilot symbol found at the center of the window.

Then, the averaged pilot symbol estimates are used to perform a 2-D interpolation across the slot of the subframe that was allocated to the PUCCH format 1 data. The location of pilot symbols within the subframe is not ideally suited to interpolation. To account for this positioning, virtual pilots are created and placed out with the area of the current subframe. This placement allows complete and accurate interpolation to be performed.

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`griddata` | `lteSCFDMADemodulate` | `lteULChannelEstimate` | `lteULFrameOffsetPUCCH1` | `lteULPerfectChannelEstimate`

Introduced in R2013b

lteULChannelEstimatePUCCH2

PUCCH format 2 uplink channel estimation

Syntax

```
[hest,noiseest] = lteULChannelEstimatePUCCH2(ue,chs,rxgrid,rxack2)
[hest,noiseest] = lteULChannelEstimatePUCCH2(ue,chs,cec,rxgrid,
rxack2)
[hest,noiseest] = lteULChannelEstimatePUCCH2(ue,chs,cec,rxgrid,
rxack2,refgrid)
[hest,noiseest] = lteULChannelEstimatePUCCH2(ue,chs,rxgrid,rxack2,
refgrid)
```

Description

[hest,noiseest] = lteULChannelEstimatePUCCH2(ue,chs,rxgrid,rxack2) returns an estimate for the channel by averaging the least squares estimates of the reference symbols across time and copying these across the allocated resource elements within the time frequency grid. It returns **hest**, the estimated channel between each transmit and receive antenna and **noiseest**, an estimate of the noise power spectral density.

[hest,noiseest] = lteULChannelEstimatePUCCH2(ue,chs,cec,rxgrid,rxack2) returns the estimated channel using the method and parameters defined by the user in the channel estimator configuration structure, **cec**.

[hest,noiseest] = lteULChannelEstimatePUCCH2(ue,chs,cec,rxgrid,rxack2,refgrid) returns the estimated channel using the method and parameters defined by the channel estimation configuration structure (**cec**), and the additional information about the transmitted symbols found in **refgrid**. For **cec.InterpType** = 'None', values in **refgrid** are treated as reference symbols and the resulting **hest** contains non-zero values in their locations.

[hest,noiseest] = lteULChannelEstimatePUCCH2(ue,chs,rxgrid,rxack2,refgrid) returns the estimated channel using the estimation method, as described

in TS 36.101, Annex F4 [1]. The method described utilizes extra channel information obtained through information of the transmitted symbols found in `refgrid`. This additional information allows for an improved estimate of the channel and is required for accurate EVM measurements.

Examples

Estimate Channel Characteristics for PUCCH Format 2

Use the `lteULChannelEstimatePUCCH2` function to estimate channel characteristics for PUCCH Format 2

Initialize a UE configuration structure, PUCCH settings, and create a resource grid. For the purpose of this example, we bypass the SC-FDMA modulation, channel and SC-FDMA demodulation stages of the system model and copy the `txGrid` to an `rxGrid`.

```
ue = struct('NULRB',6,'NCellID',0,'NSubframe',0,'Hopping','Off');
ue.CyclicPrefixUL = 'Normal';
ue.NTxAnts =1;
pucch2.ResourceIdx = 0;
pucch2.ResourceSize = 0;
pucch2.CyclicShifts = 0;
txGrid = lteULResourceGrid(ue);
txAck = [1;1];
drsIndices = ltePUCCH2DRSIndices(ue,pucch2);

txGrid(drsIndices) = ltePUCCH2DRS(ue,pucch2,txAck);
rxGrid = txGrid;
```

The channel estimator uses the PUCCH Format 2 DRS to estimate the channel, so decode the hybrid ARQ indicators from the PUCCH Format 2 DRS. Initialize the channel estimation configuration structure and perform channel estimation operation on `rxGrid`.

```
rxAck = ltePUCCH2DRSDecode(ue,pucch2,length(txAck),rxGrid(drsIndices));
cec = struct('FreqWindow',12,'TimeWindow',1,'InterpType','cubic');
hest = lteULChannelEstimatePUCCH2(ue,pucch2,cec,rxGrid,rxAck);
```

Warning: Using default value for parameter field `PilotAverage` ('UserDefined')

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress

warnings for defaulted lte parameter settings precede code with the command "lteWarning('off','DefaultValue')."

Input Arguments

ue — UE-specific configuration settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
NPUCCHID	Optional	Nonnegative scalar integer (0, ...,503)	PUCCH virtual cell identity. If this field is not present, NCellID is used as the identity.

Data Types: struct

chs — PUCCH channel settings

structure

PUCCH channel settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 1185, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n2_pucch</i>)
ResourceSize	Optional	0 (default), 0 ... 98, Nonnegative scalar integer.	Size of resource allocated to PUCCH Format 2 (<i>N2RB</i>)
CyclicShifts	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH (<i>N1cs</i>)

Data Types: struct

rxgrid — Received resource element grid

3-D numeric array

Received resource element grid, specified as a 3-D numeric array of size *M*-by-*N*-by-*NRxAnts*. The second dimension of *rxgrid* contains one or more whole subframes worth of SC-FDMA symbols. For example, for normal cyclic prefix each subframe contains 14 SC-FDMA symbols. Therefore, *N* is equal to $14 \times \text{TotalNoSubframes}$. If *TotalNoSubframes* is greater than one, the correct region is extracted from the returned *hest* array. The location of the estimated subframe within *hest* is specified using the parameter field *cec.Window*.

Data Types: double

Complex Number Support: Yes

rxack2 — Hybrid ARQ indicators

logical value

Hybrid ARQ indicators, specified as a row vector of either 1 or 2 indicators, decoded from the PUCCH Format 2 DRS. This is required as the channel estimator uses the PUCCH Format 2 DRS to estimate the channel. *rxack2* can be obtained for example by using the `lteULFrameOffsetPUCCH2` function.

Data Types: logical

cec — Channel estimator configuration
structure

Channel estimator configuration, specified as a structure with these fields.

Parameter Field	Required or Optional	Values	Description														
FreqWindow	Optional	Odd scalar integer or a multiple of 12	Size of window used to average over frequency, in resource elements (REs), specified as a scalar integer.														
TimeWindow	Optional	Odd scalar integer	Size of window used to average over time, in resource elements (REs), specified as a scalar integer.														
InterpType	Optional	'nearest', 'linear', 'natural', 'cubic', 'v4', 'None' See footnote 1	Type of 2-D interpolation used during interpolation. For details, see <code>griddata</code> . Supported choices are shown in the following table. <table border="1" data-bbox="937 1025 1337 1465"> <thead> <tr> <th>String</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>'nearest'</td> <td>Nearest neighbor interpolation</td> </tr> <tr> <td>'linear'</td> <td>Linear interpolation</td> </tr> <tr> <td>'natural'</td> <td>Natural neighbor interpolation</td> </tr> <tr> <td>'cubic'</td> <td>Cubic interpolation</td> </tr> <tr> <td>'v4'</td> <td>MATLAB 4 <code>griddata</code> method</td> </tr> <tr> <td>'None'</td> <td>Disables interpolation</td> </tr> </tbody> </table>	String	Description	'nearest'	Nearest neighbor interpolation	'linear'	Linear interpolation	'natural'	Natural neighbor interpolation	'cubic'	Cubic interpolation	'v4'	MATLAB 4 <code>griddata</code> method	'None'	Disables interpolation
String	Description																
'nearest'	Nearest neighbor interpolation																
'linear'	Linear interpolation																
'natural'	Natural neighbor interpolation																
'cubic'	Cubic interpolation																
'v4'	MATLAB 4 <code>griddata</code> method																
'None'	Disables interpolation																
PilotAverage	Optional	'UserDefined' (default), 'TestEVM'	Type of pilot averaging														

Parameter Field	Required or Optional	Values	Description
		See footnote 2	
The following parameter is required only if <i>rxgrid</i> contains more than one subframe.			
See footnote 3			
Window	Optional	'Left', 'Right', 'Centred', 'Centered'	If more than one subframe is input this parameter is required to indicate the position of the subframe from <i>rxgrid</i> and <i>refgrid</i> containing the desired channel estimate. Only channel estimates for this subframe will be returned. For the 'Centred' and 'Centered' settings, the window size must be odd.

Parameter Field	Required or Optional	Values	Description
1			For <code>cec.InterpType = 'None'</code> , no interpolation is performed between pilot symbols and no virtual pilots are created. <code>hest</code> will contain channel estimates in the locations of transmitted reference symbols for each received antenna and all other elements of <code>hest</code> are zero. The averaging of pilot symbols estimates described by <code>cec.TimeWindow</code> and <code>cec.FreqWindow</code> are still performed.
2			The 'UserDefined' pilot averaging uses a rectangular kernel of size <code>cec.FreqWindow-by-cec.TimeWindow</code> and performs a 2-D filtering operation upon the pilots. Pilots near the edge of the resource grid are averaged less as they have no neighbors outside of the grid. For <code>cec.FreqWindow = 12×X</code> (i.e. any multiple of 12) and <code>cec.TimeWindow = 1</code> the estimator enters a special case where an averaging window of $(12×X)$ -in-frequency is used to average the pilot estimates; the averaging is always applied across $(12×X)$ subcarriers, even at the upper and lower band edges; therefore the first $(6×X)$ symbols at the upper and lower band edge have the same channel estimate. This operation ensures that averaging is always done on 12 (or a multiple of 12) symbols. This provides the appropriate despreading operation required for the case multi-antenna transmission where the DRS signals associated with each antenna occupy the same time/frequency locations but use different orthogonal cover codes to allow them to be differentiated at the receiver. The 'TestEVM' pilot averaging ignores other structure fields in <code>cec</code> , and follows the method described in TS 36.101, Annex F for the purposes of transmitter EVM testing.
3			When <code>rxgrid</code> contains more than one subframe, <code>cec.Window</code> provides control of the location of the subframe for which channel estimation is performed. This allows channel estimation for the subframe of interest to be aided by the presence of pilot symbols occupying the same resource block in subframes before and/or after that subframe. For example, if <code>rxgrid</code> contains five subframes, 'Left' estimates the last first subframe in <code>rxgrid</code> , 'Centred'/'Centered' estimates the third (middle) subframe, and 'Right' estimates the last subframe. The parameter <code>ue.NSubframe</code> corresponds to the chosen subframe. So, with three subframes and <code>cec.Window = 'Right'</code> , <code>rxgrid</code> corresponds to subframes $(ue.NSubframe - 2, ue.NSubframe - 1, ue.NSubframe)$. The <code>hest</code> output will be the same size as <code>rxgrid</code> and will correspond to the same subframe numbers. All locations other than the estimated subframe will contain zeros.

Data Types: struct

refgrid – Reference array of known transmitted data symbols in their correct locations

3-D numeric array

Reference array of known transmitted data symbols in their correct locations, specified as a 3-D numeric array of size M -by- N -by- $NTxAnts$. All other locations, such as DRS Symbols and unknown data symbol locations, should be represented by a NaN. `rxgrid` and `refgrid` must have the same dimensions.

Data Types: `double`

Complex Number Support: Yes

Output Arguments

hest — Channel estimate between each transmit and receive antenna

3-D numeric array

Channel estimate between each transmit and receive antenna, returned as a 3-D numeric array of size M -by- N -by- $NRxAnts$. M is the total number of subcarriers, N is the number of SC-FDMA symbols, and $NRxAnts$ is the number of receive antennas.

Data Types: `double`

noiseest — Noise estimate

numeric scalar

Noise estimate, returned as a numeric scalar. This output is the power spectral density of the noise present on the estimated channel response coefficients.

Data Types: `double`

More About

Algorithms

The channel estimation algorithm functions as described in the following steps.

- 1 Extract the PUCCH format 2 demodulation reference signals (DRS), or pilot symbols, for a transmit-receive antenna pair from the allocated physical resource blocks within the received subframe.
- 2 Average the least-squares estimates to reduce any unwanted noise from the pilot symbols.
- 3 Using the cleaned pilot symbol estimates, interpolate to obtain an estimate of the channel for the allocated subframe slot.

Least-Squares Estimation

The least-squares estimates of the reference signals are obtained by dividing the received pilot symbols by their expected value. The least-squares estimates are affected by any system noise. This noise needs to be removed or reduced to achieve a reasonable estimation of the channel at pilot symbol locations.

Noise Reduction and Interpolation

To minimize the effects of noise on the pilot symbol estimates, the least-squares estimates are averaged. This simple method produces a substantial reduction in the level of noise found on the pilot symbols. The pilot symbol averaging method uses an averaging window defined by the user. The averaging window size is measured in resource elements; any pilot symbols located within the window are used to average the value of the pilot symbol found at the center of the window.

Then, the averaged pilot symbol estimates are used to perform a 2-D interpolation across the slot of the subframe that was allocated to the PUCCH format 2 data. The location of pilot symbols within the subframe is not ideally suited to interpolation. To account for this positioning, virtual pilots are created and placed out with the area of the current subframe. This placement allows complete and accurate interpolation to be performed.

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

griddata | lteSCFDMADemodulate | lteULChannelEstimate | lteULFrameOffsetPUCCH2 | lteULPerfectChannelEstimate

Introduced in R2013b

lteULChannelEstimatePUCCH3

PUCCH format 3 uplink channel estimation

Syntax

```
[hest,noiseest] = lteULChannelEstimatePUCCH3(ue,chs,rxgrid)
[hest,noiseest] = lteULChannelEstimatePUCCH3(ue,chs,cec,rxgrid)
[hest,noiseest] = lteULChannelEstimatePUCCH3(ue,chs,cec,rxgrid,
refgrid)
[hest,noiseest] = lteULChannelEstimatePUCCH3(ue,chs,rxgrid,refgrid)
```

Description

[hest,noiseest] = lteULChannelEstimatePUCCH3(ue,chs,rxgrid) returns an estimate for the channel by averaging the least squares estimates of the reference symbols across time and copying these across the allocated resource elements within the time frequency grid. It returns **hest**, the estimated channel between each transmit and receive antenna and **noiseest**, an estimate of the noise power spectral density.

[hest,noiseest] = lteULChannelEstimatePUCCH3(ue,chs,cec,rxgrid) returns the estimated channel using the method and parameters defined by the user in the channel estimator configuration structure, **cec**.

[hest,noiseest] = lteULChannelEstimatePUCCH3(ue,chs,cec,rxgrid,refgrid) returns the estimated channel using the method and parameters defined by the channel estimation configuration structure and the additional information about the transmitted symbols found in **refgrid**. **rxgrid** and **refgrid** must have the same dimensions. For **cec.InterpType = 'None'**, values in **refgrid** are treated as reference symbols and the resulting **hest** contains non-zero values in their locations.

[hest,noiseest] = lteULChannelEstimatePUCCH3(ue,chs,rxgrid,refgrid) returns the estimated channel using the estimation method, as described in TS 36.101, Annex F4 [1]. The method described utilizes extra channel information obtained through information of the transmitted symbols found in **refgrid**. This additional information allows for an improved estimate of the channel and is required for accurate EVM measurements. **rxgrid** and **refgrid** must have the same dimensions. **rxgrid** and **refgrid** must only contain a whole subframe worth of SC-FDMA symbols. For example,

for normal cyclic prefix, each subframe contains 14 SC-FDMA symbols. Therefore, N is 14.

Examples

Estimate Channel Characteristics for PUCCH Format 3

Use the `lteULChannelEstimatePUCCH3` function to estimate channel characteristics for PUCCH Format 3

Initialize a UE configuration structure, PUCCH settings, and create a resource grid. For the purpose of this example, we bypass the SC-FDMA modulation, channel and SC-FDMA demodulation stages of the system model and copy the `txGrid` to an `rxGrid`.

```
ue = struct('NULRB',6,'NCellID',0,'NSubframe',0,'Hopping','Off');
ue.CyclicPrefixUL = 'Normal';
ue.NTxAnts =1;
pucch3 = struct('ResourceIdx',0);
txGrid = lteULResourceGrid(ue);
txGrid(ltePUCCH3DRSIndices(ue,pucch3)) = ltePUCCH3DRS(ue,pucch3);
rxGrid = txGrid;
```

Warning: Using default value for parameter field Shortened (0)

Initialize the channel estimation configuration structure and perform channel estimation operation on `rxGrid`.

```
cec = struct('FreqWindow',12,'TimeWindow',1,'InterpType','Cubic');
hest = lteULChannelEstimatePUCCH3(ue,pucch3,cec,rxGrid);
```

Warning: Using default value for parameter field PilotAverage ('UserDefined')
Warning: Using default value for parameter field Shortened (0)

Note: The warning messages generated simply advise you that default values are available and being used for uninitialized parameters. To suppress warnings for defaulted lte parameter settings precede code with the command `"lteWarning('off','DefaultValue')"`.

Input Arguments

ue — UE-specific cell-wide settings
structure

UE-specific cell-wide settings, specified as a structure with the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.
NPUCCHID	Optional	Nonnegative scalar integer (0, ...,503)	PUCCH virtual cell identity. If this field is not present, NCellID is used as the identity.

Data Types: struct

chs — PUCCH channel settings

structure

PUCCH channel settings, specified as a structure with the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 549, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical

Parameter Field	Required or Optional	Values	Description
			resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n3_pucch</i>)

Data Types: struct

rxgrid – Received resource element grid

3-D numeric array

Received resource element grid, specified as a 3-D numeric array of size M -by- N -by- $NRxAnts$. The second dimension of **rxgrid** contains one or more whole subframes worth of SC-FDMA symbols. For example, for normal cyclic prefix, each subframe contains 14 SC-FDMA symbols. Therefore, N is equal to $14 \times TotalNoSubframes$. If **TotalNoSubframes** is greater than one, the correct region is extracted from the returned **hest** array. The location of the estimated subframe within **hest** is specified using the parameter field **cec.Window**.

If **refgrid** is also input, **rxgrid** and **refgrid** must have the same dimensions.

Data Types: double

Complex Number Support: Yes

cec – Channel estimator configuration

structure

Channel estimator configuration, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
FreqWindow	Optional	Odd scalar integer or a multiple of 12	Size of window used to average over frequency, in resource elements (REs), specified as a scalar integer.
TimeWindow	Optional	Odd scalar integer	Size of window used to average over time, in resource elements (REs), specified as a scalar integer.

Parameter Field	Required or Optional	Values	Description														
InterpType	Optional	'nearest', 'linear', 'natural', 'cubic', 'v4', 'None' See footnote 1	Type of 2-D interpolation used during interpolation. For details, see <code>griddata</code> . Supported choices are shown in the following table.														
			<table border="1"> <thead> <tr> <th>String</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>'nearest'</td> <td>Nearest neighbor interpolation</td> </tr> <tr> <td>'linear'</td> <td>Linear interpolation</td> </tr> <tr> <td>'natural'</td> <td>Natural neighbor interpolation</td> </tr> <tr> <td>'cubic'</td> <td>Cubic interpolation</td> </tr> <tr> <td>'v4'</td> <td>MATLAB 4 <code>griddata</code> method</td> </tr> <tr> <td>'None'</td> <td>Disables interpolation</td> </tr> </tbody> </table>	String	Description	'nearest'	Nearest neighbor interpolation	'linear'	Linear interpolation	'natural'	Natural neighbor interpolation	'cubic'	Cubic interpolation	'v4'	MATLAB 4 <code>griddata</code> method	'None'	Disables interpolation
			String	Description													
			'nearest'	Nearest neighbor interpolation													
			'linear'	Linear interpolation													
			'natural'	Natural neighbor interpolation													
			'cubic'	Cubic interpolation													
			'v4'	MATLAB 4 <code>griddata</code> method													
'None'	Disables interpolation																
PilotAverage	Optional	'UserDefined' (default), 'TestEVM' See footnote 2	Type of pilot averaging														
The following parameter is required only if <code>rxgrid</code> contains more than one subframe.																	
See footnote 3																	

Parameter Field	Required or Optional	Values	Description
Window	Optional	'Left', 'Right', 'Centred', 'Centered'	If more than one subframe is input this parameter is required to indicate the position of the subframe from <i>rxgrid</i> and <i>refgrid</i> containing the desired channel estimate. Only channel estimates for this subframe will be returned. For the 'Centred' and 'Centered' settings, the window size must be odd.

Parameter Field	Required or Optional	Values	Description
1			For <code>cec.InterpType = 'None'</code> , no interpolation is performed between pilot symbols and no virtual pilots are created. <code>hest</code> will contain channel estimates in the locations of transmitted reference symbols for each received antenna and all other elements of <code>hest</code> are zero. The averaging of pilot symbols estimates described by <code>cec.TimeWindow</code> and <code>cec.FreqWindow</code> are still performed.
2			The 'UserDefined' pilot averaging uses a rectangular kernel of size <code>cec.FreqWindow-by-cec.TimeWindow</code> and performs a 2-D filtering operation upon the pilots. Pilots near the edge of the resource grid are averaged less as they have no neighbors outside of the grid. For <code>cec.FreqWindow = 12×X</code> (i.e. any multiple of 12) and <code>cec.TimeWindow = 1</code> the estimator enters a special case where an averaging window of $(12×X)$ -in-frequency is used to average the pilot estimates; the averaging is always applied across $(12×X)$ subcarriers, even at the upper and lower band edges; therefore the first $(6×X)$ symbols at the upper and lower band edge have the same channel estimate. This operation ensures that averaging is always done on 12 (or a multiple of 12) symbols. This provides the appropriate despreading operation required for the case multi-antenna transmission where the DRS signals associated with each antenna occupy the same time/frequency locations but use different orthogonal cover codes to allow them to be differentiated at the receiver. The 'TestEVM' pilot averaging ignores other structure fields in <code>cec</code> , and follows the method described in TS 36.101, Annex F for the purposes of transmitter EVM testing.
3			When <code>rxgrid</code> contains more than one subframe, <code>cec.Window</code> provides control of the location of the subframe for which channel estimation is performed. This allows channel estimation for the subframe of interest to be aided by the presence of pilot symbols occupying the same resource block in subframes before and/or after that subframe. For example, if <code>rxgrid</code> contains five subframes, 'Left' estimates the last first subframe in <code>rxgrid</code> , 'Centred'/'Centered' estimates the third (middle) subframe, and 'Right' estimates the last subframe. The parameter <code>ue.NSubframe</code> corresponds to the chosen subframe. So, with three subframes and <code>cec.Window = 'Right'</code> , <code>rxgrid</code> corresponds to subframes $(ue.NSubframe - 2, ue.NSubframe - 1, ue.NSubframe)$. The <code>hest</code> output will be the same size as <code>rxgrid</code> and will correspond to the same subframe numbers. All locations other than the estimated subframe will contain zeros.

Data Types: struct

refgrid — Reference array of known transmitted data symbols in their correct locations

3-D numeric array

Reference array of known transmitted data symbols in their correct locations, specified as a 3-D numeric array of size M -by- N -by- $NTxAnts$. All other locations, such as DRS Symbols and unknown data symbol locations, should be represented by a NaN. `rxgrid` and `refgrid` must have the same dimensions.

Data Types: double

Complex Number Support: Yes

Output Arguments

hest — Channel estimate between each transmit and receive antenna

3-D numeric array

Channel estimate between each transmit and receive antenna, returned as a 3-D numeric array of size M -by- N -by- $NRxAnts$. M is the total number of subcarriers, N is the number of SC-FDMA symbols, and $NRxAnts$ is the number of receive antennas.

Data Types: double

noiseest — Noise estimate

numeric scalar

Noise estimate, returned as a numeric scalar. This output is the power spectral density of the noise present on the estimated channel response coefficients, returned as a numeric array.

Data Types: double

More About

Algorithms

The channel estimation algorithm functions as described in the following steps.

- 1 Extract the PUCCH format 3 demodulation reference signals (DRS), or pilot symbols, for a transmit-receive antenna pair from the allocated physical resource blocks within the received subframe.
- 2 Average the least-squares estimates to reduce any unwanted noise from the pilot symbols.

- 3 Using the cleaned pilot symbol estimates, interpolate to obtain an estimate of the channel for the allocated subframe slot.

Least-Squares Estimation

The least-squares estimates of the reference signals are obtained by dividing the received pilot symbols by their expected value. The least-squares estimates are affected by any system noise. This noise needs to be removed or reduced to achieve a reasonable estimation of the channel at pilot symbol locations.

Noise Reduction and Interpolation

To minimize the effects of noise on the pilot symbol estimates, the least-squares estimates are averaged. This simple method produces a substantial reduction in the level of noise found on the pilot symbols. The pilot symbol averaging method uses an averaging window defined by the user. The averaging window size is measured in resource elements; any pilot symbols located within the window are used to average the value of the pilot symbol found at the center of the window.

Then, the averaged pilot symbol estimates are used to perform a 2-D interpolation across the slot of the subframe that was allocated to the PUCCH format 3 data. The location of pilot symbols within the subframe is not ideally suited to interpolation. To account for this positioning, virtual pilots are created and placed out with the area of the current subframe. This placement allows complete and accurate interpolation to be performed.

References

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`griddata` | `lteSCFDMADemodulate` | `lteULChannelEstimate` | `lteULFrameOffsetPUCCH3` | `lteULPerfectChannelEstimate`

Introduced in R2013b

lteULDeprecode

SC-FDMA deprecoding

Syntax

```
out = lteULDeprecode(in,nrb)
```

Description

`out = lteULDeprecode(in,nrb)` performs SC-FDMA deprecoding of the complex modulation symbols `in` for PUSCH configuration with a bandwidth of `nrb` resource blocks. `in` is a *M_{symb}-by-N_{Layers}* matrix of values and `out` has the same dimensions.

Examples

Deprecode PUSCH Symbols

Perform the deprecoding of precoded PUSCH symbols, `precodedSym`, providing the number of uplink resource blocks (RBs), `ue.NULRB`.

```
ue = lteRMCUL('A3-2');
ueDim = lteULResourceGridSize(ue);
mSymb = ue.NULRB*ueDim(1)*ueDim(2);
realIn = randi([0,1],mSymb,ue.PUSCH.NLayers);
imagIn = randi([0,1],mSymb,ue.PUSCH.NLayers);
precodedSym = lteULPrecode(complex(realIn,imagIn),ue.NULRB);
dePrecodedSym = lteULDeprecode(precodedSym,ue.NULRB);
```

Input Arguments

in — Complex modulation symbols

numeric matrix

Complex modulation symbols, specified as a numeric matrix of size *M_{symb}-by-N_{Layers}*.

Data Types: `double` | `single`
Complex Number Support: Yes

nrb — Number of resource blocks

scalar integer

Number of resource blocks, specified as a scalar integer.

Data Types: `double`

Output Arguments

out — Decoded PUSCH output symbols

numeric matrix

Decoded PUSCH output symbols, returned as a numeric matrix of size M_{symb} -by- N_{Layers} .

Data Types: `double`

Complex Number Support: Yes

See Also

`lteLayerDemap` | `ltePUSCHDecode` | `ltePUSCHDecode` | `lteULPrecode`

Introduced in R2014a

lteULDescramble

PUSCH descrambling

Syntax

```
out = lteULDescramble(ue,chs,in)
out = lteULDescramble(ue,in)
out = lteULDescramble(in,nsubframe,cellid,rnti)
```

Description

`out = lteULDescramble(ue,chs,in)` performs PUSCH descrambling of the soft bit vector, `in`, or cell array in case of two codewords, according to UE-specific settings in the `ue` structure and UL-SCH related parameters in the `chs` structure. It performs PUSCH descrambling to undo the processing described in section 5.3.1 of [1] and returns a soft bit vector or cell array of vectors, `out`. This syntax supports the descrambling of control information bits if they are present in the soft bits `in` in conjunction with information bits. The descrambling of the control information bits is done by establishing the correct locations of placeholder bits with the help of UL-SCH-related parameters present in `chs`. The descrambler skips the 'x' placeholder bits to undo the processing defined in section 5.3.1 of [1].

Multiple codewords can be parameterized by two different forms of the `chs` structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, 1-by-1, structure. In the latter case, any scalar field values apply to both codewords and a scalar `NLayers` is the total number. For further details, see “UL-SCH Parameterization”.

`out = lteULDescramble(ue,in)` performs PUSCH descrambling of the soft bit input, `in`, but takes only the UE-specific settings in the `ue` structure. The `in` input should contain only the scrambled data bits resulting in descrambling of transport data only. The `ue` structure must include the `NCellID`, `NSubframe`, and `RNTI` fields.

`out = lteULDescramble(in,nsubframe,cellid,rnti)` performs PUSCH descrambling of soft bits, `in`, for subframe number, `nsubframe`, cell identity, `cellid`, and specified radio network temporary identifier (RNTI), `rnti`. This syntax performs

only block descrambling and expects the input, `in`, to contain only the scrambled data bits. If the `in` vector contains placeholder bits, they are not descrambled correctly because the placeholder bits are not skipped during the descrambling process. Thus, this function syntax descrambles only the transport data bits.

Examples

Scramble and Descramble PUSCH Vector

Perform scrambling and descrambling of a PUSCH soft bit vector.

Scramble a vector of ones, `x`. Then, descramble it and display the results.

```
x = ones(10,1);  
ue = struct('NCellID',100,'NSubframe',0,'RNTI',61);  
scram = double(lteULScramble(ue,x))-0.5;  
descram = lteULDescramble(ue,scram)
```

```
0.5000  
0.5000  
0.5000  
0.5000  
0.5000  
0.5000  
0.5000  
0.5000  
0.5000  
0.5000
```

Input Arguments

ue — UE-specific settings

scalar structure

UE-specific settings, specified as a scalar structure that can contain the following fields.

NCellID — Physical layer cell identity

scalar integer

Physical layer cell identity, specified as a scalar integer.

Data Types: double

NSubframe — Subframe number

scalar integer

Subframe number, specified as a scalar integer.

Data Types: double

RNTI — Radio network temporary identifier

numeric scalar

Radio network temporary identifier, 16-bit, specified as a numeric scalar.

Data Types: double

CyclicPrefixUL — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

Data Types: char

Shortened — Shorten subframe flag

0 (default) | Optional | 1

Shorten subframe flag, specified as 0 or 1. Optional. If 1, the last symbol of the subframe is not used and rate matching is adjusted accordingly. This setting is required for subframes with possible SRS transmission.

Data Types: logical | double

Data Types: struct

chs — UL-SCH channel-specific settings

structure

UL-SCH channel-specific settings, specified as a structure that can contain the following fields.

Modulation — Modulation scheme associated with each transport block

'QPSK' | '16QAM' | '64QAM'

Modulation scheme associated with each transport block, specified as a string.

Data Types: char

NLayers — Number of transmission layers

1 (default) | Optional | 2 | 3 | 4

Number of transmission layers, total or per codeword, specified as 1, 2, 3, or 4. Optional.

Data Types: double

ORI — Number of uncoded RI bits

0 (default) | Optional | nonnegative scalar integer

Number of uncoded RI bits, specified as a nonnegative scalar integer. Optional.

Data Types: double

OACK — Number of uncoded HARQ-ACK bits

0 (default) | Optional | nonnegative scalar integer

Number of uncoded HARQ-ACK bits, specified as a nonnegative scalar integer. Optional.

Data Types: double

QdRI — Number of coded RI symbols in UL-SCH

0 (default) | Optional | nonnegative scalar integer

Number of coded RI symbols in UL-SCH, specified as a nonnegative scalar integer. Optional. (Q'_{RI})

Data Types: double

QdACK — Number of coded HARQ-ACK symbols in UL-SCH

0 (default) | Optional | nonnegative scalar integer

Number of coded HARQ-ACK symbols in UL-SCH, specified as a nonnegative scalar integer. Optional. (Q'_{ACK})

Data Types: double

Data Types: struct

in — Soft bit input data

numeric column vector | cell array of numeric column vectors

Soft bit input data, specified as a numeric column vector or cell array of numeric column vectors. This argument contains one or two vectors corresponding to the number of codewords to be scrambled.

Data Types: double | cell

nsubframe — Subframe number

scalar integer

Subframe number, specified as a scalar integer.

Data Types: double

cellid — Physical layer cell identity

scalar integer

Physical layer cell identity, specified as a scalar integer.

Data Types: double

rnti — Radio network temporary identifier

numeric scalar

Radio network temporary identifier, 16-bit, specified as a numeric scalar.

Data Types: double

Output Arguments

out — PUSCH descrambled output bits

numeric column vector | cell array of numeric column vectors

PUSCH descrambled output bits, returned as a numeric column vector or cell array of numeric column vectors.

Data Types: double

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePUSCHDecode | lteSymbolDemodulate | lteULScramble

Introduced in R2014a

lteULFrameOffset

PUSCH DRS uplink frame timing estimate

Syntax

```
offset = lteULFrameOffset(ue,chs,waveform)
[offset,corr] = lteULFrameOffset(ue,chs,waveform)
```

Description

`offset = lteULFrameOffset(ue,chs,waveform)` performs synchronization using PUSCH DRS signals for the time-domain waveform, `waveform`, given UE-specific settings, `ue`, and PUSCH configuration, `chs`.

The returned value `offset` indicates the number of samples from the start of the waveform, `waveform`, to the position in that waveform where the first subframe begins.

`offset` provides subframe timing; frame timing can be achieved by using `offset` with the subframe number, `ue.NSubframe`. This information is consistent with real-world operation, since the base station knows when, or in which subframe, to expect uplink transmissions.

`[offset,corr] = lteULFrameOffset(ue,chs,waveform)` also returns a complex matrix `corr` of the same dimensions as `waveform` which is the signal used to extract the timing offset. That is, `offset` is the position of `max(abs(corr))`.

Examples

Synchronize and SCFDMA Demodulate Delayed Transmission

Synchronization and demodulation of transmission which has been delayed by 5 samples.

Initialize waveform. Determine `offset` and demodulate the waveform.

```
ue = lteRMCUL('A3-2');
waveform = lteRMCULTool(ue,[1;0;0;1]);
```

```
tx = [0;0;0;0;0; waveform];

offset = lteULFrameOffset(ue,ue.PUSCH,tx)
rxGrid = lteSCFDMADemodulate(ue,tx(1+offset:end));

offset =

    5
```

Input Arguments

ue — UE-specific settings

scalar structure

UE-specific settings, specified as a scalar structure with the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Hopping	Optional	'Off' (default), 'Group', or 'Sequence'	Frequency hopping method
SeqGroup	Optional	0 (default), 0 ... 29, Nonnegative scalar integer.	PUSCH sequence group assignment (<i>delta_SS</i>) Only used if NDMRSID or NPUSCHID is absent
CyclicShift	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for PUSCH DRS (yields <i>n1_DMRS</i>)

Parameter Field	Required or Optional	Values	Description
NPUSCHID	Optional	0 (default), Nonnegative scalar integer from 0 to 509.	PUSCH virtual cell identity. If this field is not present, NCellID is used for group hopping sequence-shift pattern initialization. See footnote 1
NDMRSID	Optional	0 (default), Nonnegative scalar integer from 0 to 509.	DMRS identity for cyclic shift hopping (Ncsh_DMRSID). If this field is not present, NCellID is used for cyclic shift hopping initialization. See footnote 1
<p>1 The pseudo-random sequence generator for cyclic shift hopping is initialized according to NDMRSID, if present, otherwise it is initialized according to the cell identity NCellID and the sequence group assignment SeqGroup. Similarly, the sequence-shift pattern for group hopping is initialized according to NPUSCHID, if present, otherwise it is initialized according to NCellID and SeqGroup.</p>			

Data Types: struct

chs — PUSCH configuration

scalar structure

PUSCH configuration, specified as a scalar structure with the following fields.

Parameter Field	Required or Optional	Values	Description
PRBSet	Required	1- or 2-column integer matrix	0-based physical resource block indices (PRBs) for the slots of the current PUSCH resource allocation. As a column vector, the resource allocation is the same in both slots of the subframe. As a two-column matrix, it specifies

Parameter Field	Required or Optional	Values	Description
			different PRBs for each slot in a subframe.
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers
DynCyclicShift	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Cyclic shift for DMRS (yields <i>n2_DMRS</i>)
OrthCover	Optional	'Off' (default), 'On'	Applies ('On'), or does not apply ('Off'), orthogonal cover sequence, <i>w</i> (<i>Activate-DMRS-with OCC</i>)
The following field is required only when <code>ue.NTxAnts</code> is set to 2 or 4.			
PMI	Optional	0 (default), nonnegative scalar integer from 0 to 23.	Scalar precoder matrix indication (PMI) to be used during precoding See <code>lteULPMIInfo</code> .

Data Types: `struct`

waveform — Time-domain waveform

numeric matrix

Time-domain waveform, specified as a numeric matrix. `waveform` must be a T -by- P matrix where T is the number of time-domain samples, and P is the number of receive antennas.

Generate `waveform` by SC-FDMA modulation of a resource matrix using the `lteSCFDMAmodulate` function, or by using one of the channel model functions, `lteFadingChannel`, `lteHSTChannel`, or `lteMovingChannel`.

Data Types: `double`

Complex Number Support: Yes

Output Arguments

offset — Offset number of samples

scalar integer

Offset number of samples, returned as a scalar integer. This output is the number of samples from the start of the waveform to the position in that waveform where the first subframe begins. `offset` is computed by extracting the timing of the peak of the correlation between `waveform` and internally generated reference waveforms containing DRS signals. The correlation is performed separately for each antenna and the antenna with the strongest correlation is used to compute `offset`.

Data Types: `double`

`corr` — Signal used to extract the timing offset

complex-valued numeric matrix

Signal used to extract the timing offset, returned as a complex-valued numeric matrix. `corr` has the same dimensions as `waveform`.

Data Types: `double`

Complex Number Support: Yes

See Also

`lteFadingChannel` | `lteFrequencyCorrect` | `lteFrequencyOffset` |
`lteHSTChannel` | `lteMovingChannel` | `lteSCFMDemodulate`

Introduced in R2014a

lteULFrameOffsetPUCCH1

PUCCH format 1 DRS uplink frame timing estimate

Syntax

```
offset = lteULFrameOffsetPUCCH1(ue,chs,waveform)
[offset,corr] = lteULFrameOffsetPUCCH1(ue,chs,waveform)
```

Description

`offset = lteULFrameOffsetPUCCH1(ue,chs,waveform)` performs synchronization using PUCCH format 1 demodulation reference signals (DRS) for the time-domain waveform, `waveform`, given UE-specific settings, `ue`, and PUCCH format 1 configuration, `chs`.

The returned value `offset` indicates the number of samples from the start of the waveform `waveform` to the position in that waveform where the first subframe begins.

`offset` provides subframe timing. Frame timing can be achieved by using `offset` with the subframe number, `ue.NSubframe`. This behavior is consistent with real-world operation because the base station knows when, or in which subframe, to expect uplink transmissions.

`[offset,corr] = lteULFrameOffsetPUCCH1(ue,chs,waveform)` also returns a complex matrix `corr` of the same dimensions as `waveform` which is the signal used to extract the timing offset. That is, `offset` is the position of `max(abs(corr))`.

Examples

Synch and Demod Using PUCCH Format 1 DRS

Synchronization and demodulation of transmission which has been delayed by four samples using the PUCCH Format 1 demodulation reference signals.

Initialize configuration structures (`ue` and `pucch1`).

```
ue = struct('NULRB',6,'NCellID',0,'NSubframe',0,'Hopping','Off');
ue.CyclicPrefixUL = 'Normal';
```

```

ue.NTxAnts = 1;

pucch1 = struct('ResourceIdx',0);
pucch1.CyclicShifts = 0;
pucch1.DeltaShift = 1;
pucch1.ResourceSize =0;

```

On the transmit side, populate `reGrid`, generate `waveform`, and insert a delay of four samples.

```

reGrid = lteULResourceGrid(ue);
reGrid(ltePUCCH1DRSIndices(ue,pucch1)) = ltePUCCH1DRS(ue,pucch1);
waveform = lteSCFDMAModulate(ue,reGrid);
tx = [0;0;0;0; waveform];

```

On the receive side, perform synchronization using PUCCH format 1 demodulation reference signals (DRS) for the time-domain waveform and demodulate adjusting for the frame timing estimate. Show estimated frame timing offset.

```

fOffset = lteULFrameOffsetPUCCH1(ue,pucch1,tx)
rxGrid = lteSCFDMADemodulate(ue,tx(1+fOffset:end));

```

```
fOffset =
```

```
4
```

Input Arguments

ue — UE-specific settings

scalar structure

UE-specific settings, specified as a scalar structure with the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number

Parameter Field	Required or Optional	Values	Description
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
NPUCCHID	Optional	Nonnegative scalar integer (0, ...,503)	PUCCH virtual cell identity. If this field is not present, NCellID is used as the identity.

Data Types: struct

chs — PUCCH Format 1 configuration

scalar structure

PUCCH Format 1 configuration, specified as a scalar structure with the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 2047, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n1_pucch</i>)
ResourceSize	Optional	0 (default), 0 ... 98, Nonnegative scalar integer.	Size of resource allocated to PUCCH Format 2 (<i>N2RB</i>)
DeltaShift	Optional	1 (default), 2, 3	(<i>delta_shift</i>)
DeltaOffset	Optional	0 (default), 1, 2	<i>delta_offset</i> Warning: The use of this parameter field is deprecated. It only applies to 3GPP releases prior to v8.5.0. This parameter will be removed in a future release.

Parameter Field	Required or Optional	Values	Description
CyclicShifts	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH (N_{1cs})

Data Types: struct

waveform — Time-domain waveform

numeric matrix

Time-domain waveform, specified as a numeric matrix. **waveform** must be a T -by- P matrix where T is the number of time-domain samples and P is the number of receive antennas.

Generate **waveform** by SC-FDMA modulation of a resource matrix using `lteSCFDMAModulate` function, or by using one of the channel model functions (`lteFadingChannel`, `lteHSTChannel`, or `lteMovingChannel`).

Data Types: double

Complex Number Support: Yes

Output Arguments

offset — Number of samples from the start of the waveform to the position in that waveform where the first subframe begins

scalar integer

Number of samples from the start of the waveform to the position in that waveform where the first subframe begins, returned as a scalar integer. **offset** is computed by extracting the timing of the peak of the correlation between **waveform** and internally generated reference waveforms containing DRS signals. The correlation is performed separately for each antenna and the antenna with the strongest correlation is used to compute **offset**.

corr — Signal used to extract the timing offset

numeric matrix

Signal used to extract the timing offset, returned as a complex numeric matrix. **corr** has the same dimensions as **waveform**.

See Also

`lteFadingChannel` | `lteHSTChannel` | `lteMovingChannel` |
`lteSCFDMADemodulate` | `lteULFrameOffset` | `lteULFrameOffsetPUCCH2` |
`lteULFrameOffsetPUCCH3`

Introduced in R2014a

lteULFrameOffsetPUCCH2

PUCCH format 2 DRS uplink frame timing estimate

Syntax

```
offset = lteULFrameOffsetPUCCH2(ue,chs,waveform,oack)
[offset ack] = lteULFrameOffsetPUCCH2(ue,chs,waveform,oack)
[offset ack corr] = lteULFrameOffsetPUCCH2(ue,chs,waveform,oack)
```

Description

`offset = lteULFrameOffsetPUCCH2(ue,chs,waveform,oack)` performs synchronization using PUCCH format 2 demodulation reference signals (DRS) for the time-domain waveform, `waveform`, given UE-specific settings, `ue`, PUCCH format 2 configuration `chs`, and the number of Hybrid ARQ indicators `oack`.

The returned value `offset` indicates the number of samples from the start of the waveform `waveform` to the position in that waveform where the first subframe begins.

`offset` provides subframe timing; frame timing can be achieved by using `offset` with the subframe number, `ueNSubframe`. This behavior is consistent with real-world operation because the base station knows when, in which subframe, to expect uplink transmissions.

`[offset ack] = lteULFrameOffsetPUCCH2(ue,chs,waveform,oack)` also returns a vector `ack` of decoded PUCCH Format 2 Hybrid ARQ indicators.

`[offset ack corr] = lteULFrameOffsetPUCCH2(ue,chs,waveform,oack)` also returns a complex matrix `corr` of the same dimensions as `waveform`. `corr` is the signal used to extract the timing offset. `offset` is the position of `max(abs(corr))`.

Examples

Synchronize and Demodulate Delayed Transmission

This example performs synchronization and demodulation of a transmission that has been delayed by 5 samples.

Initialize ue specific parameter structure, PUCCH2 structure, UL resource grid and txAck parameter.

```
ue.NULRB = 6;  
ue.NCellID = 0;  
ue.NSubframe = 0;  
ue.Hopping = 'Off';  
ue.CyclicPrefixUL = 'Normal';  
ue.NTxAnts = 1;  
pucch2.ResourceIdx = 0;  
pucch2.ResourceSize = 0;  
pucch2.CyclicShifts = 0;  
rgrid = lteULResourceGrid(ue);  
txAck = [1;1];  
rgrid(ltePUCCH2DRSIndices(ue,pucch2)) = ...  
    ltePUCCH2DRS(ue,pucch2,txAck);
```

Generate modulated waveform

```
waveform = lteSCFDMAModulate(ue,rgrid);  
tx = [0;0;0;0;0;waveform];
```

Estimate UL frame offset timing

```
offset = lteULFrameOffsetPUCCH2(ue,pucch2,tx,length(txAck))
```

```
offset =  
    5
```

Perform demodulation

```
rxGrid = lteSCFDMADemodulate(ue,tx(1+offset:end));
```

Input Arguments

ue — UE-specific settings

scalar structure

UE-specific settings, specified as a scalar structure with the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
NPUCCID	Optional	Nonnegative scalar integer (0, ...,503)	PUCCH virtual cell identity. If this field is not present, NCellID is used as the identity.

Data Types: struct

chs — PUCCH Format 2 configuration

scalar structure

PUCCH Format 2 configuration, specified as a scalar structure with the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 1185, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n2_pucch</i>)
ResourceSize	Optional	0 (default), 0 ... 98, Nonnegative scalar integer.	Size of resource allocated to PUCCH Format 2 (<i>N2RB</i>)

Parameter Field	Required or Optional	Values	Description
CyclicShifts	Optional	0 (default), 0 ... 7, Nonnegative scalar integer.	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH (<i>N_{1cs}</i>)

Data Types: `struct`

waveform — Time-domain waveform

numeric matrix

Time-domain waveform, specified as a numeric matrix. `waveform` must be a T -by- P matrix where T is the number of time-domain samples and P is the number of receive antennas.

Generate `waveform` by SC-FDMA modulation of a resource matrix using the `lteSCFDMAModulate` function, or by using one of the channel model functions, `lteFadingChannel`, `lteHSTChannel`, or `lteMovingChannel`.

Data Types: `double`

Complex Number Support: Yes

oack — Number of uncoded Hybrid ARQ bits

1 | 2

Number of uncoded Hybrid ARQ bits expected, 1 (PUCCH Format 2a) or 2 (PUCCH Format 2b).

Data Types: `double`

Output Arguments

offset — Number of samples from the start of the waveform to the position in that waveform where the first subframe begins

scalar integer

Number of samples from the start of the waveform to the position in that waveform where the first subframe begins, returned as a scalar integer. `offset` is computed by extracting the timing of the peak of the correlation between `waveform` and internally

generated reference waveforms containing DRS signals. The correlation is performed separately for each antenna and the antenna with the strongest correlation is used to compute `offset`. This process is repeated for either one or two Hybrid ARQ indicators combination as specified by the parameter `oack`. This correlation amounts to a maximum likelihood (ML) decoding of the Hybrid ARQ indicators, which are conveyed on the PUCCH Format 2 DRS.

ack — Decoded PUCCH Format 2 Hybrid ARQ bits

numeric vector or matrix

Decoded PUCCH Format 2 Hybrid ARQ bits, returned as a vector. If multiple decoded Hybrid ARQ indicator vectors have a likelihood equal to the maximum, `ack` is a matrix where each column represents one of the equally likely Hybrid ARQ indicator vectors.

Data Types: `double`

corr — Signal used to extract the timing offset

numeric matrix

Signal used to extract the timing offset, returned as a complex numeric matrix. `corr` has the same dimensions as `waveform`.

See Also

`lteFadingChannel` | `lteHSTChannel` | `lteMovingChannel` |
`lteSCFDMADemodulate` | `lteULFrameOffset` | `lteULFrameOffsetPUCCH1` |
`lteULFrameOffsetPUCCH3`

Introduced in R2014a

lteULFrameOffsetPUCCH3

PUCCH format 3 DRS uplink frame timing estimate

Syntax

```
offset = lteULFrameOffsetPUCCH3(ue,chs,waveform)
[offset corr] = lteULFrameOffsetPUCCH3(ue,chs,waveform)
```

Description

`offset = lteULFrameOffsetPUCCH3(ue,chs,waveform)` performs synchronization using PUCCH format 3 demodulation reference signals (DRS) for the time-domain waveform, `waveform`, given UE-specific settings, `ue`, and PUCCH format 3 configuration, `chs`.

The returned value, `offset`, indicates the number of samples from the start of the waveform, `waveform`, to the position in that waveform where the first subframe begins.

`offset` provides subframe timing; frame timing can be achieved by using `offset` with the subframe number, `ue.NSubframe`. This behavior is consistent with real-world operation because the base station knows when, or in which subframe, to expect uplink transmissions.

`[offset corr] = lteULFrameOffsetPUCCH3(ue,chs,waveform)` also returns a complex-valued matrix `corr` of the same dimensions as `waveform` which is the signal used to extract the timing offset. `offset` is the position of `max(abs(corr))`.

Examples

Synch and Demod Using PUCCH Format 3 DRS

Synchronization and demodulation of transmission which has been delayed by seven samples using the PUCCH Format 3 demodulation reference signals.

Initialize configuration structures (`ue` and `pucch3`).

```
ue = struct('NULRB',6,'NCellID',0,'NSubframe',0,'Hopping','Off');
```



```

ue.CyclicPrefixUL = 'Normal';
ue.NTxAnts = 1;
ue.Shortened = 0;

pucch3 = struct('ResourceIdx',0);

```

On the transmit side, populate `reGrid`, generate `waveform`, and insert a delay of seven samples.

```

reGrid = lteULResourceGrid(ue);
reGrid(ltePUCCH3DRSIndices(ue,pucch3)) = ltePUCCH3DRS(ue,pucch3);
waveform = lteSCFDMAModulate(ue,reGrid);
tx = [0;0;0;0;0;0;0; waveform];

```

On the receive side, perform synchronization using PUCCH format 3 demodulation reference signals (DRS) for the time-domain waveform and demodulate adjusting for the frame timing estimate. Show estimated frame timing offset.

```

fOffset = lteULFrameOffsetPUCCH3(ue,pucch3,tx)
rxGrid = lteSCFDMADemodulate(ue,tx(1+fOffset:end));

```

```
fOffset =
```

```
7
```

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure with the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB	Required	Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
NCellID	Required	Nonnegative scalar integer (0, ...,503)	Physical layer cell identity
NSubframe	Required	Nonnegative scalar integer	Subframe number

Parameter Field	Required or Optional	Values	Description
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Cyclic prefix length
NTxAnts	Optional	1 (default), 2, 4	Number of transmission antennas
Hopping	Optional	'Off' (default), or 'Group'	Frequency hopping method
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.
NPUCCHID	Optional	Nonnegative scalar integer (0, ...,503)	PUCCH virtual cell identity. If this field is not present, NCellID is used as the identity.

Data Types: struct

chs — PUCCH Format 3 configuration

scalar structure

PUCCH Format 3 configuration, specified as a scalar structure with the following fields.

Parameter Field	Required or Optional	Values	Description
ResourceIdx	Optional	0 (default), 0 ... 549, Nonnegative scalar integer.	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n3_pucch</i>)

Data Types: struct

waveform — Time-domain waveform

numeric matrix

Time-domain waveform, specified as a numeric matrix. `waveform` must be a T -by- P matrix where T is the number of time-domain samples and P is the number of receive antennas.

Generate `waveform` by SC-FDMA modulation of a resource matrix using the `lteSCFDMAmodulate` function, or by using one of the channel model functions, `lteFadingChannel`, `lteHSTChannel`, or `lteMovingChannel`.

Data Types: `double`

Complex Number Support: Yes

Output Arguments

`offset` — Number of samples from the start of the waveform to the position in that waveform where the first subframe begins

scalar integer

Number of samples from the start of the waveform to the position in that waveform where the first subframe begins, returned as a scalar integer. `offset` is computed by extracting the timing of the peak of the correlation between `waveform` and internally generated reference waveforms containing DRS signals. The correlation is performed separately for each antenna and the antenna with the strongest correlation is used to compute `offset`.

Data Types: `double`

`corr` — Signal used to extract the timing offset

numeric matrix

Signal used to extract the timing offset, returned as a numeric matrix. `corr` has the same dimensions as `waveform`.

Data Types: `double`

Complex Number Support: Yes

See Also

`lteFadingChannel` | `lteHSTChannel` | `lteMovingChannel` |
`lteSCFDMAdeModulate` | `lteULFrameOffset` | `lteULFrameOffsetPUCCH1` |
`lteULFrameOffsetPUCCH2`

Introduced in R2014a

lteULPMIInfo

PUSCH precoder matrix indication reporting information

Syntax

```
info=lteULPMIInfo(ue,chs)
```

Description

`info=lteULPMIInfo(ue,chs)` returns a structure `info` containing information related to precoder matrix indication (PMI) reporting.

You can use `info.NSubbands` to determine the correct size of the vector PMI required for closed-loop spatial multiplexing operation. PMI is a column vector with `info.NSubbands` rows. Currently, only wideband PMI reporting is defined by the standard. Thus, the number of subbands, `info.NSubbands`, is always 1. This field and `info.k` are provided for consistency with the downlink version of this function, `ltePMIInfo`.

Examples

Get PUSCH PMI Reporting Information

Display the PMI reporting information for RMC A3-2.

```
ue = lteRMCUL('A3-2');  
pmiInfo = lteULPMIInfo(ue,ue.PUSCH)
```

```
         k: 6  
NSubbands: 1  
MaxPMI: 0
```

Input Arguments

ue — UE-specific configuration
structure

UE-specific configuration, specified as a structure. `ue` can contain the following fields.

NULRB — Number of uplink resource blocks

6 | 15 | 25 | 50 | 75 | 100

Number of uplink resource blocks, specified as a positive scalar integer.

Data Types: `double`

NTxAnts — Number of transmission antennas

1 (default) | Optional | 2 | 4

Number of transmission antennas, specified as a positive scalar integer. Optional. Valid values are 1, 2, and 4.

Data Types: `double`

Data Types: `struct`

chs — PUSCH channel settings

structure

PUSCH channel settings, specified as a structure with the following fields.

NLayers — Number of transmission layers

1 (default) | Optional | 2 | 3 | 4

Number of transmission layers, specified as 1, 2, 3, or 4. Optional.

Data Types: `double`

Data Types: `struct`

Output Arguments

info — Information related to PMI reporting

structure

Information related to PMI reporting, returned as a structure with these fields.

k — Subband size

scalar integer

Subband size, in resource blocks (RBs), returned as a scalar integer. This parameter is equal to NULRB.

Data Types: double

NSubbands — Number of subbands for PMI reporting

scalar integer

Number of subbands for PMI reporting, returned as a scalar integer. This parameter is equal to 1 for wideband PMI.

Data Types: double

MaxPMI — Maximum permitted PMI value for the given configuration

scalar integer

Maximum permitted PMI value for the given configuration, returned as a scalar integer. Valid PMI values range from 0 to MaxPMI.

Data Types: double

See Also

`ltePUSCH` | `ltePUSCHPrecode` | `lteULPMISelect`

Introduced in R2014a

lteULPMISelect

PUSCH precoder matrix indication calculation

Syntax

```
pmi = lteULPMISelect(ue,chs,hest,noiseest)
pmi = lteULPMISelect(ue,chs,hest,noiseest,refgrid)
pmi = lteULPMISelect(ue,chs,hest,noiseest,refgrid,cec)
```

Description

`pmi = lteULPMISelect(ue,chs,hest,noiseest)` performs PUSCH precoder matrix indication (PMI) calculation for given UE-specific settings, `ue`, channel configuration structure, `chs`, channel estimate resource array, `hest`, and receiver noise variance, `noiseest`. The output, `pmi`, is a scalar containing the PMI selected for closed-loop transmission.

`hest` is a 4-D array of size M -by- N -by- $NRxAnts$ -by- $NTxAnts$, where M is the number of subcarriers, N is the number of SC-FDMA symbols, $NRxAnts$ is the number of receive antennas, and $NTxAnts$ is the number of transmit antennas.

`noiseest` is a scalar, an estimate of the received noise power spectral density.

`pmi = lteULPMISelect(ue,chs,hest,noiseest,refgrid)` provides an additional input `refgrid`, a 3-D M -by- N -by- $NTxAnts$ array containing known transmitted data symbols in their correct locations. All other locations i.e. DRS Symbols and unknown data symbol locations should be represented by a NaN. This is the same array as the additional `refgrid` input described for the `lteULChannelEstimate` function. For PMI selection the symbols in `refgrid` are ignored, but the non-NaN RE locations are used as RE locations at which to sample the channel estimate and perform PMI estimation. This approach can be used to provide a `refgrid` containing for example the SRS RE locations created on all $NTxAnts$, allowing for full-rank channel estimation for the purposes of PMI selection when the PUSCH is transmitted with less than full rank.

`pmi = lteULPMISelect(ue,chs,hest,noiseest,refgrid,cec)` accepts channel estimator configuration structure `cec` containing the field `Reference`.

`Reference = 'None'` will generate no internal reference signals, and the PMI estimation can be performed on arbitrary known REs as given by the `refgrid` argument. This approach can be used to provide a `refgrid` containing for example the SRS signals created on all `NTxAnts`, allowing for full-rank PMI estimation for the purposes of PMI selection when the PUSCH is transmitted with less than full rank. `Reference = 'Antennas'` or `Reference = 'Layers'` will use the PUSCH DMRS RE indices as reference locations for PMI estimation; additional references can still be provided in `refgrid`.

Examples

Calculate PUSCH PMI

This example creates an empty resource grid for RMC A3-2 and amend it for MIMO configuration.

Initialize `ue` specific parameter structure and create an empty resource grid for RMC A3-2 and amend it for MIMO configuration.

```
ue = lteRMCUL('A3-2');
ue.NTxAnts = 4;
ue.PUSCH.NLayers = 2;
rgrid = lteULResourceGrid(ue);
rgrid(ltePUSCHDRSIndices(ue,ue.PUSCH)) = ...
    ltePUSCHDRS(ue,ue.PUSCH);
```

Generate modulated waveform.

```
txWaveform = lteSCFDMAModulate(ue,rgrid);
```

Configure a fading channel.

```
chcfg.Seed = 100;
chcfg.DelayProfile = 'EPA';
chcfg.NRxAnts = 2;
chcfg.InitTime = 100;
chcfg.InitPhase = 'Random';
chcfg.ModelType = 'GMEDS';
chcfg.NTerms = 16;
chcfg.NormalizeTxAnts = 'On';
chcfg.NormalizePathGains = 'On';
chcfg.DopplerFreq = 50.0;
```



```
chcfg.MIMOCorrelation = 'Low';
chcfg.SamplingRate = 15360000;
```

Filter the transmit waveform through a fading channel and perform SC-FDMA demodulation.

```
rxWaveform = lteFadingChannel(chcfg,txWaveform);
rxSubframe = lteSCFDMADemodulate(ue,rxWaveform);
```

Estimate the corresponding channel and the noise power spectral density on the reference signal subcarriers.

```
cec = struct('FreqWindow',12,'TimeWindow',1,'InterpType','cubic');
cec.PilotAverage = 'UserDefined';
cec.Reference = 'Antennas';
```

```
[hest,noiseEst] = lteULChannelEstimate(ue,ue.PUSCH,cec,rxSubframe);
```

Use this estimate to calculate the precoder matrix indication (PMI).

```
pmi = lteULPMISelect(ue,ue.PUSCH,hest,noiseEst)
```

```
pmi =
```

```
4
```

Input Arguments

ue — UE-specific settings

scalar structure

UE-specific settings, specified as a scalar structure with the following fields.

NULRB — Number of uplink (UL) resource blocks (RBs)

scalar integer

Number of uplink (UL) resource blocks (RBs), specified as a scalar integer.

Data Types: double

CyclicPrefixUL — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

Data Types: char

NTxAnts — Number of transmission antennas

1 (default) | Optional | 2 | 4

Number of transmission antennas, specified as 1, 2, or 4. Optional.

Data Types: double

Data Types: struct

chs — Channel configuration structure

scalar structure

Channel configuration structure, specified as a scalar structure with the following fields.

PRBSet — Physical Resource Block indices

numeric column matrix

Physical Resource Block indices, specified as a numeric column matrix. **PRBSet** can be a 1- or 2-column matrix, containing the 0-based Physical Resource Block indices (PRBs) corresponding to the resource allocations for this PUSCH.

Data Types: double

NLayers — Number of transmission layers

1 (default) | Optional | 2 | 3 | 4

Number of transmission layers, specified as 1, 2, 3, or 4. Optional.

Data Types: double

Data Types: struct

hest — Channel estimate

4-D numeric array

Channel estimate, specified as a 4-D numeric array of size M -by- N -by- $NRxAnts$ -by- $NTxAnts$. M is the number of subcarriers, N is the number of SC-FDMA symbols, $NRxAnts$ is the number of receive antennas and $NTxAnts$ is the number of transmit antennas.

Data Types: double

Complex Number Support: Yes

noiseest — Receiver noise variance

numeric scalar

Receiver noise variance, specified as a numeric scalar. It is an estimate of the received noise power spectral density.

Data Types: double

refgrid — Transmitted data symbols

3-D numeric array

Transmitted data symbols, specified as a 3-D numeric array. `refgrid` is an M -by- N -by-`NTxAnts` array containing known symbols in their correct locations.

Data Types: double

Complex Number Support: Yes

cec — Channel estimator configuration

scalar structure

Channel estimator configuration, specified as a scalar structure with the following fields.

Reference — Point of reference (indices to internally generate) for PMI estimation

'Antennas' (default) | Optional | 'Layers' | 'None'

Point of reference (indices to internally generate) for PMI estimation. `Reference` = 'None' generates no internal reference signals, and the PMI estimation can be performed on arbitrary known REs as given by the `refgrid` argument. `Reference` = 'Antennas' or `Reference` = 'Layers' uses the PUSCH DMRS RE indices as reference locations for PMI estimation; additional references can still be provided in `refgrid`.
Optional.

Data Types: char

Data Types: struct

Output Arguments

pmi — Precoder matrix indication selected for closed-loop transmission

numeric scalar (0...23)

Precoder matrix indication selected for closed-loop transmission, returned as a numeric scalar between 0 and 23.

See Also

`ltePUSCH` | `ltePUSCHPrecode` | `lteULPMIInfo`

Introduced in R2014a

lteULPerfectChannelEstimate

Uplink perfect channel estimation

Syntax

```
h = lteULPerfectChannelEstimate(ue,chs)
h = lteULPerfectChannelEstimate(ue,chs,toffset)
```

Description

`h = lteULPerfectChannelEstimate(ue,chs)` performs perfect channel estimation for a system configuration given by UE-specific settings, `ue`, and channel configuration structure, `chs`. It produces a perfect channel estimate, `h`, which is a 4-D array of size M -by- N -by-`NRxAnts`-by-`NTxAnts`. Where M is the number of subcarriers, N is the number of SC-FDMA symbols, `NRxAnts` is the number of receive antennas, and `NTxAnts` is the number of transmit antennas. The perfect channel estimates are only produced for the fading channel model created using the `lteFadingChannel` toolbox function. This function provides a perfect MIMO channel estimate after SC-FDMA modulation. Perfect channel estimation is achieved by setting the channel with the desired configuration and sending a set of known symbols through it, for each transmit antenna in turn.

`h = lteULPerfectChannelEstimate(ue,chs,toffset)` adds the timing offset, `toffset`, input parameter. This parameter allows `h` to be the precise channel that results when the receiver is precisely synchronized, as for example by using the `lteULFrameOffset` function.

Examples

Perform Perfect Channel Estimation

Perform perfect channel estimation for a given propagation channel configuration.

Initialize structures for UE configuration and propagation channel configuration.

```
ue.NULRB = 6;
```

```

ue.CyclicPrefixUL = 'Normal';
ue.NTxAnts = 2;
ue.TotSubframes = 1;

chs.Seed = 1;
chs.DelayProfile = 'EPA';
chs.NRxAnts = 4;
chs.DopplerFreq = 5.0;
chs.MIMOCorrelation = 'Low';
chs.InitPhase = 'Random';
chs.InitTime = 0.0;
chs.ModelType = 'GMEDS';
chs.NTerms = 16;
chs.NormalizeTxAnts = 'On';
chs.NormalizePathGains = 'On';

```

Perform perfect channel estimation and display dimension of channel estimate array.

```

H = lteULPerfectChannelEstimate(ue, chs);
sizeH = size(H)

```

```
sizeH =
```

```
    72    14     4     2
```

Input Arguments

ue — UE-specific settings

scalar structure

UE-specific settings, specified as a scalar structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
NULRB		Positive scalar integer	Number of uplink (UL) resource blocks (RBs)
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length.

Parameter Field	Required or Optional	Values	Description
NTxAnts		1 (default), 2, 4	Number of transmission antennas
TotSubfra		Nonnegative scalar integer	Total number of subframes to generate

Data Types: struct

chs — Channel configuration structure

scalar structure

Channel configuration structure, specified as a scalar structure. **chs** must contain the following fields and must also include sufficient fields for `lteFadingChannel` to be configured. Before execution of the channel itself, `chs.SamplingRate` is set to the sampling rate of the time-domain waveform passed to it for channel filtering.

Parameter Field	Required or Optional	Values	Description
NRxAnts		1, 2, 4	Number of receive antennas

Data Types: struct

toffset — Timing offset

scalar integer

Timing offset, specified as a scalar integer. The timing offset is specified from the start of the output of the channel to the estimated SC-FDMA demodulation starting point.

Data Types: double

Output Arguments

h — Perfect channel estimate

4-D complex-valued numeric array

Perfect channel estimate, returned as a 4-D complex-valued numeric array of size M -by- N -by-`NRxAnts`-by-`NTxAnts`. Where M is the number of subcarriers, N is the number of OFDM symbols, `NRxAnts` is the number of receive antennas, and `NTxAnts` is the number of transmit antennas.

Data Types: `double`

Complex Number Support: Yes

See Also

`lteULChannelEstimate` | `lteULChannelEstimatePUCCH1` |

`lteULChannelEstimatePUCCH2` | `lteULChannelEstimatePUCCH3`

Introduced in R2014a

lteULPrecode

SC-FDMA precoding

Syntax

```
out = lteULPrecode(in,nrb)
```

Description

`out = lteULPrecode(in,nrb)` performs SC-FDMA precoding of the complex modulation symbols `in` for PUSCH configuration with a bandwidth of `nrb` resource blocks. `in` is a *MSymb*-by-*NLayers* matrix of values and `out` has the same dimensions.

Examples

Perform SC-FDMA Precoding on Complex Modulation Symbols

Generate the complex modulated symbols for RMC A3-2. The symbol matrix has size *MSymb*-by-*NLayers*, where *MSymb* represents the total number of RE in a grid. Then, perform SC-FDMA precoding on the symbols for PUSCH configuration.

```
ue = lteRMCUL('A3-2');
ueDim = lteULResourceGridSize(ue);
mSymb = ue.NULRB*ueDim(1)*ueDim(2);
realIn = randi([0,1],mSymb,ue.PUSCH.NLayers);
imagIn = randi([0,1],mSymb,ue.PUSCH.NLayers);
out = lteULPrecode(complex(realIn,imagIn),ue.NULRB);
size(out)
```

6048

1

Input Arguments

in — Complex modulation symbols
numeric matrix

Complex modulation symbols, specified as a numeric matrix of size *MSymb*-by-*NLayers*.

Data Types: `double` | `single` | `uint8` | `uint16` | `uint32` | `uint64` | `int8` | `int16` | `int32` | `int64`

Complex Number Support: Yes

nrb — Number of resource blocks

scalar integer

Number of resource blocks, specified as a scalar integer.

Data Types: `double`

Output Arguments

out — Precoded PUSCH output symbols

numeric matrix

Precoded PUSCH output symbols, returned as a numeric matrix of size *MSymb*-by-*NLayers*.

Data Types: `double` | `single` | `uint8` | `uint16` | `uint32` | `uint64` | `int8` | `int16` | `int32` | `int64`

Complex Number Support: Yes

See Also

`lteLayerMap` | `ltePUSCH` | `ltePUSCHPrecode` | `lteULDeprecode`

Introduced in R2014a

lteULResourceGrid

Uplink subframe resource array

Syntax

```
grid = lteULResourceGrid(ue)
grid = lteULResourceGrid(ue,P)
```

Description

`grid = lteULResourceGrid(ue)` returns an empty resource array generated from the UE-specific settings structure `ue`. It returns an empty multidimensional array used to represent the resource elements for one subframe across all configured antenna ports, as described in “Data Structures”.

The size of `grid` is N -by- M -by- P , where N is the number of subcarriers, $12 \times \text{NULRB}$, M is the number of SC-FDMA symbols in a subframe, 14 for normal cyclic prefix and 12 for extended cyclic prefix, and P is the number of transmission antennas.

`grid = lteULResourceGrid(ue,P)` returns a resource array as above, except the number of antenna planes in the array is specified directly by parameter `P`. In this case, `NTxAnts` is not required as a structure field of `ue`.

Examples

Create Resource Array

Create an empty resource array representing the resource elements for 10 MHz bandwidth.

```
rgrid = lteULResourceGrid(struct('NULRB',50));
```

Input Arguments

ue — UE-specific settings
scalar structure

UE-specific settings, specified as a scalar structure with the following fields.

NULRB — Number of uplink (UL) resource blocks (RBs)

scalar integer

Number of uplink (UL) resource blocks (RBs), specified as a scalar integer.

Data Types: double

CyclicPrefixUL — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

Data Types: char

NTxAnts — Number of transmission antennas

1 (default) | Optional | 2 | 4

Number of transmission antennas, specified as a positive scalar integer. Optional.

Data Types: double

Data Types: struct

P — Number of antenna planes in the return array

scalar integer

Number of antenna planes in the return array, specified as a scalar integer.

Data Types: double

Output Arguments

grid — Empty resource grid

multidimensional numeric array

Empty resource grid, returned as a multidimensional numeric array. It is used to represent the resource elements for one subframe across all configured antenna ports. Its size is N -by- M -by- P . N is the number of subcarriers ($12 \times \text{NULRB}$), M is the number of SC-FDMA symbols in a subframe, 14 for normal cyclic prefix and 12 for extended cyclic prefix, and P is the number of transmission antennas.

Data Types: double

See Also

lteDLResourceGrid | lteResourceGrid | lteSCFDMAModulate |
lteULResourceGridSize

Introduced in R2014a

lteULResourceGridSize

Size of uplink subframe resource array

Syntax

```
D = lteULResourceGridSize(ue)
D = lteULResourceGridSize(ue,P)
```

Description

`D = lteULResourceGridSize(ue)` returns a 3-element row vector of dimension lengths for the resource array generated from the UE-specific settings structure `ue`. It returns a 3-element row vector of dimension lengths for the multidimensional array used to represent the resource elements for one subframe across all configured antenna ports, as described in “Data Structures”.

The vector `D` is $[N M P]$, where N is the number of subcarriers, $12 \times \text{NULRB}$, M is the number of SC-FDMA symbols in a subframe, 14 for normal cyclic prefix and 12 for extended cyclic prefix, and P is the number of transmission antennas.

`D = lteULResourceGridSize(ue,P)` returns a 3-element row vector as above, except the number of antenna planes in the array is specified directly by parameter `P`. In this case, `NTxAnts` is not required as a structure field of `ue`.

Examples

Get Size of Uplink Subframe Resource Array

Use the returned vector to directly create MATLAB® arrays.

```
ue = struct('NULRB',6,'CyclicPrefixUL','Normal','NTxAnts',1);
rgrid = zeros(lteULResourceGridSize(ue));
size(rgrid)
```

```
ans =
```

This result is the same matrix as the one obtained using the `lteULResourceGrid` function.

Input Arguments

ue — UE-specific settings

scalar structure

UE-specific settings, specified as a scalar structure with the following fields.

NULRB — Number of uplink (UL) resource blocks (RBs)

scalar integer

Number of uplink (UL) resource blocks (RBs), specified as a scalar integer.

Data Types: `double`

CyclicPrefixUL — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

Data Types: `char`

NTxAnts — Number of transmission antennas

1 (default) | Optional | 2 | 4

Number of transmission antennas, specified as 1, 2, or 4. Optional.

Data Types: `double`

Data Types: `struct`

P — Number of antenna planes in the return array

scalar integer

Number of antenna planes in the return array, specified as a scalar integer.

Data Types: `double`

Output Arguments

D — Dimension lengths

3-element row vector

Dimension lengths, returned as a 3-element row vector $[N M P]$. N is the number of subcarriers ($12 \times \text{NULRB}$), M is the number of SC-FDMA symbols in a subframe (14 for normal cyclic prefix and 12 for extended cyclic prefix) and P is the number of transmission antennas.

Data Types: double

See Also

`lteDLResourceGridSize` | `lteResourceGridSize` | `lteULResourceGrid`

Introduced in R2014a

lteULSCH

Uplink shared channel

Syntax

```
[cwout, chinfo] = lteULSCH(ue, chs, trblkIn)
[cwout, chinfo] = lteULSCH(ue, chs, trblkIn, opts)
[cwout, chinfo] = lteULSCH(ue, chs, trblkIn, cqi, ri, ack, opts)
```

Description

[cwout, chinfo] = lteULSCH(ue, chs, trblkIn) performs complete UL-SCH transport coding and UCI coding on the input information bits, trblkIn, and returns the complete codewords in the output, cwout. It encodes both a single transport block or pair of blocks, contained in a cell array, for the case of spatial multiplexing schemes transmitting two codewords, represented by input trblkIn without any UCI data. The lowest order information bit of trblkIn should be mapped to the most significant bit of the transport block, as defined in TS 36.321 Section 6.1.1 [3]. The encoding process also includes the channel interleaving. It The transport encoding includes type-24A CRC calculation, code block segmentation and type-24B CRC attachment, turbo encoding, rate matching, block concatenation, and channel interleaving. For more information, see TS 36.212 Sections 5.2.2.1 to 5.2.2.5 and 5.2.2.8 [2]. Parameter information relating to the underlying UL-SCH and UCI coding is available in structure chinfo.

The output chinfo is a structure containing information related to the UL-SCH coding process.

For multiple transport blocks, each structure in the array corresponds to one of the blocks. This output is also available from the lteULSCHInfo function.

[cwout, chinfo] = lteULSCH(ue, chs, trblkIn, opts) allows for the merging of the input chs structure fields into chinfo at the output.

If the UL-SCH encoding is for a retransmission of a previously sent transport block, use the three “Init” fields, 'InitPRBSet', 'InitCyclicPrefixUL', and 'InitShortened'. If any of these fields are absent, their values are assumed to be the same as the values for the associated current subframe fields, 'PRBSet', 'CyclicPrefixUL', and 'Shortened'.

`opts` is an optional input string, or cell array, parameter which enables the concatenation or merging of the `chs` input structure fields into the fields returned by `chinfo`. This parameter is useful for combining the high-level configuration parameters with the fine-grained ones used in the encoding process.

`opts` allows additional control of the contents and format of the `chinfo` output through a cell array of option strings.

`[cwout, chinfo] = lteULSCH(ue, chs, trblkIn, cqi, ri, ack, opts)` encodes and multiplexes the UCI input data, CQI, RI, and ACK, along with the information bits, `trblkIn`, in the codeword, `cwout`. For more information, see TS 36.212 Sections 5.2.2.6 to 5.2.2.8 [2]. Any of the `trblkIn`, `cqi`, `ri`, or `ack` vectors can be empty if that data is not present. If `trblkIn` is empty, only UCI on UL-SCH/PUSCH is processed, according to TS 36.212 Section 5.2.4 [2]. The coding of the UCI can be controlled through the additional fields, `BetaACK`, `BetaCQI`, `BetaRI`, and `NBundled`, in the `chs` input structure. Setting `NBundled` to 0 disables the TDD HARQ-ACK bundling scrambling; therefore, it is off by default.

Examples

Create Coded Information Bits for UL-SCH

Create coded information bits for uplink FRC A3-3, 3MHz, as specified in [1].

```
rmc = lteRMCUL('A3-3');
rmc.PUSCH.PRBSset = (0:14).';
cw = lteULSCH(struct(), rmc.PUSCH, randi([0,1], rmc.PUSCH.TrBlkSizes(1), 1));
```

Input Arguments

`ue` — UE-specific settings

structure

UE-specific settings, specified as a structure with the following fields.

Parameter Field	Required or Optional	Values	Description
<code>CyclicPrefixUL</code>	Optional	'Normal' (default), 'Extended'	Current cyclic prefix length

Parameter Field	Required or Optional	Values	Description
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

chs – Channel-specific transmission configuration

scalar structure

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
Modulation	Required	('QPSK', '16QAM', '64QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
NLayers	Optional	1 (default), 2, 3, 4	Total number of transmission layers associated with the transport block or blocks.
RV	Required	Integer vector (0,1,2,3) ^a	Specifies the redundancy version for one or two codewords used in the initial subframe number, <code>NSubframe</code> . This parameter field is only for informational purposes and is Read-Only. This parameter field is not required if <code>trblkin</code> is [], which signifies that the UL-SCH is carrying only UCI and no transport data.
PRBSet	Required	1- or 2-column integer matrix	0-based physical resource block indices (PRBs) for the

Parameter Field	Required or Optional	Values	Description
			slots of the current PUSCH resource allocation. As a column vector, the resource allocation is the same in both slots of the subframe. As a two-column matrix, it specifies different PRBs for each slot in a subframe.
The following three 'Init' fields should be used if the UL-SCH encoding is for a retransmission of a previously sent transport block. If any of these fields are absent, its value is assumed to be the same as the value for its associated current subframe field.			
InitPRBSet	Optional	1- or 2-column integer matrix, PRBSet (default)	PRB indices used in the initial transmission PUSCH allocation. If this field is absent, its value is assumed to be the same as the value for the associated current subframe field, PRBSet.
InitCyclicPrefixUL	Optional	'Normal', 'Extended', CyclicPrefixUL (default)	Cyclic prefix length of initial transmit subframe. This is the length used during the first transmission of this transport block. If this field is absent, its value is assumed to be the same as the value for the associated current subframe field, CyclicPrefixUL.
InitShortened	Optional	0, 1, Shortened (default)	Initial transmit subframe shortened flag. If 1, the initial transmit subframe was shortened for possible SRS. If this field is absent, its value is assumed to be the same as the value for the associated current subframe field, Shortened.
The coding of the UCI can be controlled through the following additional fields.			

Parameter Field	Required or Optional	Values	Description
BetaCQI	Optional	numeric scalar, 2.0 (default)	Modulation and coding scheme (MCS) offset for CQI and PMI bits
BetaRI	Optional	numeric scalar, 2.0 (default)	Modulation and coding scheme (MCS) offset for RI bits
BetaACK	Optional	numeric scalar, 2.0 (default)	Modulation and coding scheme (MCS) offset for HARQ-ACK bits. This field was previously named BetaHI ; if this field is absent but BetaHI is present, it is used as before.
NBundled	Optional	0 (default), 1, ..., 9	TDD HARQ-ACK bundling scrambling sequence index. When set to 0, the function disables the TDD HARQ-ACK bundling scrambling. Therefore, it is off by default.

- a. A one or two column matrix (for one or two codewords)

trblkIn – Input transport blocks

numeric vector | cell array of numeric vectors

Input transport blocks, specified as a numeric vector or a cell array of numeric vectors.

Data Types: `double` | `cell`

opts – Options to control output contents and format

string | cell array of strings

Options to control output contents and format, specified as a string or a cell array of strings. You may choose any of the option strings listed in the following table.

Option	Values	Description
Channel parameter merging	'nochsconcat' (default)	Do not concatenate <code>chs</code> input structure into <code>chinfo</code> .
	'chsconcat'	Concatenate <code>chs</code> input structure into <code>chinfo</code> .

Option	Values	Description
Output structure format	'cwseparate' (default)	Information values for each codeword are output in separate elements of the 1-by- <i>ncodewords</i> structure array <code>chinfo</code> .
	'cwcombined'	Information values for each codeword are combined into the fields of a single scalar, or 1-by-1, structure.

Data Types: char | cell

cqi — CQI input data

numeric vector

CQI input data, specified as a numeric vector. Part of the UCI data.

Data Types: double

ri — RI input data

numeric vector

RI input data, specified as a numeric vector. Part of the UCI data.

Data Types: double

ack — HARQ-ACK input data

numeric vector

HARQ-ACK input data, specified as a numeric vector. Part of the UCI data.

Data Types: double

Output Arguments

cwout — Complete output codewords

integer column vector | cell array of integer column vectors

Complete output codewords, returned as an integer column vector or a cell array of integer column vectors.

Data Types: int8 | cell

chinfo — Parameter information relating to the underlying UL-SCH and UCI coding

structure | structure array

Parameter information relating to the underlying UL-SCH and UCI coding, returned as a structure or a structure array. If two transport blocks are encoded, `chinfo` is a structure array of two elements, one for each block. Alternatively, you can create code block segmentation fields in this structure independently, by calling the `lteULSCHInfo` function. `chinfo` contains the following fields.

Parameter Field	Description	Values	Data Type
C	Total number of code blocks	nonnegative scalar integer	int32
Km	Lower code block size (K^-)	nonnegative scalar integer	int32
Cm	Number of code blocks of size K_m (C^-)	nonnegative scalar integer	int32
Kp	Upper code block size (K^+)	nonnegative scalar integer	int32
Cp	Number of code blocks of size K_p (C^+)	nonnegative scalar integer	int32
F	Number of filler bits in first block	nonnegative scalar integer	int32
L	Number of segment cyclic redundancy check (CRC) bits	nonnegative scalar integer	int32
Bout	Total number of bits in all segments	nonnegative scalar integer	int32
G	Number of coded and rate matched UL-SCH data bits	nonnegative scalar integer	int32
Qm	Number of bits per symbol	nonnegative scalar integer	int32
Gd	Number of coded and rate matched UL-SCH data symbols (G')	nonnegative scalar integer	int32
OCQI	Number of uncoded channel quality information (CQI) bits	nonnegative scalar integer	int32
ORI	Number of uncoded symbols for RI	nonnegative scalar integer	int32
OACK	Number of uncoded symbols for ACK/NACK	nonnegative scalar integer	int32

Parameter Field	Description	Values	Data Type
QdCQI	Number of coded symbols for CQI (Q'_CQI)	nonnegative scalar integer	int32
QdRI	Number of coded symbols for RI (Q'_RI)	nonnegative scalar integer	int32
QdACK	Number of coded symbols for ACK/NACK (Q'_ACK)	nonnegative scalar integer	int32
NRE	Number of resource elements (REs) used for PUSCH transmission	nonnegative scalar integer	int32
NLayers	Number of layers associated with one codeword	nonnegative scalar integer	int32
Modulation	Modulation scheme associated with one codeword	'QPSK', '16QAM', '64QAM'	char
RV	RV value associated with one codeword	scalar integer	int32

References

- [1] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] 3GPP TS 36.321. “Medium Access Control (MAC) protocol specification.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePUSCH | lteULSCHDecode | lteULSCHInfo | lteULSCHInterleave

Introduced in R2014a

lteULSCHDecode

Uplink shared channel decoding

Syntax

```
[trblkout,blkcrc,stateout] = lteULSCHDecode(ue,chs,trblklen,cwin,
statein)
```

Description

[trblkout,blkcrc,stateout] = lteULSCHDecode(ue,chs,trblklen,cwin,statein) returns the information bits **trblkout** decoded from the input soft LLR codewords data **cwin**. The UL-SCH decoder includes channel deinterleaver, rate recovery, turbo decoding, block concatenation and CRC calculations. The function also returns the type-24A transport block CRC decoding result in **blkcrc** and the HARQ process decoding state in **stateout**. The initial HARQ process state can be input via the optional **statein** parameter. The function is capable of processing both a single codeword or pairs of codewords, contained in a cell array, for the case of spatial multiplexing schemes transmitting two codewords. The type of the return variable **trblkout** is the same as input **cwin**. If **cwin** is a cell array containing one or two codewords, **trblkout** returns a cell array of one or two transport blocks. If **cwin** is a vector of soft data, **trblkout** returns a vector too. If decoding a pair of codewords, pairs of modulation schemes and RV indicators are required to be defined in the associated parameter fields below. This function only decodes the information bits, but supports the presence of UCI data, CQI, RI, and HARQ-ACK, in the input codeword. UCI should be demultiplexed then decoded separately.

Strictly speaking, because all the fields in structure **ue** are optional, it is legal for this parameter to be an empty structure.

Multiple codewords can be parameterized by two different forms of the **chs** structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, or 1-by-1, structure. Any scalar field values apply to both codewords and a scalar **NLayers** is the total number. See “UL-SCH Parameterization” for more details.

`trblklen` is an input vector (one or two elements in length) defining the transport block lengths that the input code blocks should be rate recovered and decoded to.

`cwin` is an input parameter containing the floating point soft LLR data of the codewords to be decoded. It can either be a single vector or a cell array containing one or two vectors. If the latter, then all rate matching calculations assume that the pair were transmitting on a single PUSCH, distributed across the total number of layers defined in `chs`, as per TS 36.211 [1].

`statein` is an optional input structure array (empty or one or two elements) which can input the current decoder buffer state for each transport block in an active HARQ process. If `statein` is not an empty array and it contains a non-empty field `CBSBuffers` then this field should contain a cell array of vectors representing the LLR soft buffer states for the set of code blocks at the input to the turbo decoder i.e. after explicit rate recovery. The updated buffer states after decoding are returned in the `CBSBuffers` field in the output parameter `stateout`. The `statein` array would normally be generated and recycled from the `stateout` of previous calls to `lteULSCHDecode` as part of a sequence of HARQ transmissions.

`trblkout` is the output parameter containing the decoded information bits. It is either a single vector or a cell array containing one or two vectors, depending on the class and dimensionality of `cwin`.

`blkcrc` is an output array (one or two elements) containing the result of the type-24A transport block CRC decoding for the transport blocks.

`stateout`, the final output parameter, is a one element structure array containing the internal state of each transport block decoder in the fields `CBSBuffers`, `CBSCRC`, `blkcrc`.

The `stateout` array would normally be reapplied via the `statein` variable of subsequent `lteULSCHDecode` function calls as part of a sequence of HARQ retransmissions.

Examples

Decode UL-SCH

Generate and decode 2 transmissions (RV=0 then RV=2) as part of a single codeword HARQ process for the A3-3 FRC.

Initialize one subframe of an FRC A3-3 transmission. Create a codeword with RV = 0. Turn logical bits into 'LLR' data. Initialize the decoder states for the first HARQ transmission. The returned `decState` contains the decoder buffer state for each transport block for an active HARQ process.

```
nsf = 1;
frc = lteRMCUL('A3-3');
trBlkLen = frc.PUSCH.TrBlkSizes(nsf);
trBlkData = randi([0,1],trBlkLen,1);

frc.PUSCH.RV = 0;
cw = lteULSCH(frc,frc.PUSCH,trBlkData);

cw(cw == 0) = -1;

decState = [];
[rxTrBlk,~,decState] = lteULSCHDecode(frc,frc.PUSCH,trBlkLen,cw,decState);

Warning: Using default value for parameter field QdRI (0)
Warning: Using default value for parameter field QdACK (0)
Warning: Using default value for parameter field QdCQI (0)
```

Create a second retransmitted codeword with RV = 2. Turn logical bits into 'LLR' data. The previous transmission decoder buffer state, `decState`, is used as part of the sequence of active HARQ transmissions.

```
frc.PUSCH.RV = 2;
cWord = lteULSCH(frc,frc.PUSCH,trBlkData);

cWord(cWord == 0) = -1;

rxTrBlk = lteULSCHDecode(frc,frc.PUSCH,trBlkLen,cWord,decState);

Warning: Using default value for parameter field QdRI (0)
Warning: Using default value for parameter field QdACK (0)
Warning: Using default value for parameter field QdCQI (0)
```

To suppress 'Using default value ...' warnings for LTE parameters, execute `lteWarning('off','DefaultValue')` in your MATLAB® command window prior to running code or initialize the parameters in your code workspace.

Input Arguments

ue — UE-specific settings

scalar structure

UE-specific settings, specified as a scalar structure with the following fields. Because all the fields in structure `ue` are optional, this parameter can be an empty structure.

Parameter Field	Required or Optional	Values	Description
CyclicPre	Optional	'Normal' (default), 'Extended'	Cyclic prefix length.
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

Data Types: struct

chs — UL-SCH related parameters

scalar structure

UL-SCH related parameters, specified as a scalar structure with the following fields.

Parameter Field	Required or Optional	Values	Description
Modulation	Required	'QPSK', '16QAM', '64QAM'	Modulation scheme associated with each transport block, specified as a string or, if there are 2 blocks, as a cell array of strings.
NLayers	Optional	1 (default), 2, 3, 4	Number of transmission layers (total or per codeword)
RV	Required	0, 1, 2, 3	Redundancy version indicators, specified as a vector of 1 or 2 indicators.
QdCQI	Optional	nonnegative scalar integer	Number of coded channel quality information (CQI) symbols (Q_CQI)
QdRI	Optional	Nonnegative scalar integer	Number of coded symbols for RI (Q_RI)

Parameter Field	Required or Optional	Values	Description
		0 (default)	
QdACK	Optional	nonnegative scalar integer 0 (default)	Number of coded ACK symbols (Q_ACK)
NTurboDec	Optional	Scalar integer 5 (default)	Number of turbo decoder iteration cycles

Data Types: struct

trblklen — Transport block length

numeric vector

Transport block length, specified as a numeric vector (one or two elements in length) defining the transport block lengths that the input code blocks should be rate recovered and decoded to.

Data Types: double

cwin — Soft LLR codeword data

numeric column vector | cell array of one or two column vectors

Soft LLR codeword data, specified as a numeric column vector or a cell array of one or two column vectors. This argument contains the floating point soft LLR data of the codeword or codewords to be decoded. It can either be a single vector or a cell array containing one or two vectors. If a cell array, all rate matching calculations assume that the pair were transmitting on a single PUSCH, distributed across the total number of layers defined in `chs`, as specified in [1].

Data Types: int8 | cell

statein — Initial HARQ process state

Optional | structure array

Initial HARQ process state, specified as a structure array. Optional. It can be empty or have one or two elements, which can input the current decoder buffer state for each transport block in an active HARQ process.

Data Types: `double`

Output Arguments

trblkout — Decoded information bits

numeric vector | cell array

Decoded information bits, returned as a numeric vector or cell array. `trblkout` contains decoded transport data blocks. It is either a single vector or a cell array containing one or two vectors, depending on the class and dimensionality of `cwin`.

Data Types: `double` | `cell`

blkcrc — Type 24A transport block CRC decoding result

0 or 1

Type 24A transport block CRC decoding result, returned as 0 or 1.

Data Types: `logical`

stateout — HARQ process decoding state

structure | structure array

HARQ process decoding state, returned as a one-element structure array. It contains the internal state of each transport block decoder. It contains the following parameter fields.

Parameter Field	Description	Values	Data Type
CBSBuffers	LLR soft buffer states for the set of code blocks associated with a single transport block. The buffers are positioned at the input to the turbo decoder, or after explicit rate recovery.	Cell array of numeric vectors	<code>cell</code>
CBSCRS	Type-24B code block set CRC decoding results	Numeric vector	<code>int8</code>
BLKCRC	Type-24A transport block CRC decoding error	One- or two-element numeric vector	<code>logical</code>

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePUSCHDecode | lteULSCH | lteULSCHDeinterleave | lteULSCHInfo

Introduced in R2014a

lteULSCHDeinterleave

UL-SCH deinterleaving

Syntax

```
[cdata,ccqi,cri,cack] = lteULSCHDeinterleave(ue,chs,in)
```

Description

[cdata,ccqi,cri,cack] = lteULSCHDeinterleave(ue,chs,in) returns the deinterleaved data vector **cdata**, encoded UCI vectors, **ccqi**, **cri**, and **cack**, or cell array of vectors, after performing the demultiplexing and UL-SCH channel deinterleaving to undo the processing described in TS 36.212 Sections 5.2.2.7 and 5.2.2.8 [1] for UE-specific settings, **ue**, and UL-SCH channel specific configuration, **chs**.

The function expects the input **in** to be multiplexed and interleaved as per defined in TS 36.212 Sections 5.2.2.7 and 5.2.2.8 [1]. This input can be a vector or a cell array of vectors, deinterleaved and demultiplexed separately, and the outputs are of the same form. The size of the coded CQI symbols and codeword number with it is multiplexed, to correctly perform the demultiplexing, are deduced using the channel specific structure **chs** via the **Modulation** and **QdCQI** parameters. The presence or absence of **ccqi** in the transmission is signaled via **QdCQI** parameter with nonzero (number of coded CQI symbols) or zero value, respectively.

Multiple codewords can be parameterized by two different forms of the **chs** structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, or 1-by-1, structure. Any scalar field values apply to both codewords and a scalar **NLayers** is the total number. See “UL-SCH Parameterization” for more details.

Examples

Deinterleave Vector of Interleaver Input Bit Indices

Perform back-to-back interleaving and deinterleaving of a vector of interleaver input bit indices.


```
chs = struct('Modulation','QPSK');
interleave = lteULSCHInterleave(struct(),chs,(1:288).');
deinterleave = lteULSCHDeinterleave(struct(),chs,interleave);
deinterleave(1:10)
```

```
1
2
3
4
5
6
7
8
9
10
```

For verification purposes, see that the result, `deint`, has the same values as the ones you input.

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure with the following fields.

CyclicPrefixUL — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

Data Types: char

Shortened — Shorten subframe flag

0 (default) | Optional | 1

Shorten subframe flag, specified as 0 or 1. Optional. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

Data Types: logical | double

Data Types: struct

chs — UL-SCH related parameters

structure

UL-SCH related parameters, specified as a structure with the following fields.

Modulation — Modulation format

'QPSK' | '16QAM' | '64QAM' | string | cell array of strings

Modulation format. Specified as a string or cell array of strings.

Data Types: char

NLayers — Number of transmission layers

1 (default) | Optional | 2 | 3 | 4

Number of transmission layers, total or per codeword, specified as a positive scalar integer. Optional.

Data Types: double

QdCQI — Number of coded symbols for CQI

0 (default) | Optional | nonnegative scalar integer

Number of coded symbols for CQI, specified as a nonnegative scalar integer. Optional. (*Q'_CQI*)

Data Types: double

QdRI — Number of coded symbols for RI

0 (default) | Optional | nonnegative scalar integer

Number of coded symbols for RI, specified as a nonnegative scalar integer. Optional. (*Q'_RI*)

Data Types: double

QdACK — Number of coded symbols for ACK/NACK

0 (default) | Optional | nonnegative scalar integer

Number of coded symbols for ACK/NACK, specified as a nonnegative scalar integer. Optional. (*Q'_ACK*)

Data Types: double

Data Types: struct

in — Input data

column vector | cell array of column vectors

Input data specified as a column vector or a cell array of column vectors.

Data Types: double | cell

Output Arguments

cdata — Deinterleaved data

column vector | cell array of column vectors

Deinterleaved data, returned as a column vector or cell array of column vectors.

Data Types: double | cell

ccqi — Encoded UCI

vector | cell array of vectors

Encoded UCI, returned as a vector or cell array of vectors.

Data Types: double | cell

cri — Encoded UCI

vector | cell array of vectors

Encoded UCI, returned as a vector or cell array of vectors.

Data Types: double | cell

cack — Encoded UCI

vector | cell array of vectors

Encoded UCI, returned as a vector or cell array of vectors.

Data Types: double | cell

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteACKDecode | lteCQIDecode | lteRateRecoverTurbo | lteRIDecode |
lteULSCH | lteULSCHInfo | lteULSCHInterleave

Introduced in R2014a

lteULSCHInfo

UL-SCH coding information

Syntax

```
info = lteULSCHInfo(ue,chs,blklen)
info = lteULSCHInfo(ue,chs,blklen,opts)
info = lteULSCHInfo(ue,chs,blklen,ocqi,ori,oack)
info = lteULSCHInfo(ue,chs,blklen,ocqi,ori,oack,opts)
```

Description

`info = lteULSCHInfo(ue,chs,blklen)` provides information related to the entire UL-SCH coding process, for UL-SCH data without UCI. It returns a structure array with fields covering the transport channel (TrCH) encoding and UCI multiplexing. When UCI is present, it includes the coded symbol capacities given UCI sizes, PUSCH resource allocations, and *Beta* offset values, which can be useful in a number of UL-SCH- and PUSCH-related functions. These symbol capacities are calculated from the Q' formulae in TS 36.212, Sections 5.2.2.6 and 5.2.4.1 [1]. The one- or two-element vector, `blklen`, defines the length of the transmitted transport blocks.

By default, in the case of multiple transport blocks or codewords, each structure in the array corresponds to one of the blocks. Note that the `NLayers`, `Modulation`, and `RV` fields at the output contain only the value for the associated codeword and therefore have a different form to those given in the input. In the case of `NLayers` the output returns the number of layers per codeword where the input field represents the total number of transmission layers across all codewords.

If the UL-SCH encoding is for a retransmission of a previously sent transport block, use the three “Init” fields, `'InitPRBSet'`, `'InitCyclicPrefixUL'`, and `'InitShortened'`. If any of these fields are absent, their values are assumed to be the same as the values for the associated current subframe fields, `'PRBSet'`, `'CyclicPrefixUL'`, and `'Shortened'`.

`info = lteULSCHInfo(ue,chs,blklen,opts)` controls the contents and format of the output `info` through a cell array of option strings, `opts`. The optional parameter `opts` allows for the merging of the input `chs` structure fields into `info` at the output.

`info = lteULSCHInfo(ue,chs,blklen,ocqi,ori,oack)` supports the multiplexing of both transport and UCI data, CQI, RI, and HARQ-ACK, or UCI only. The number of uncoded UCI bits is given by `ocqi`, `ori` and `oack` respectively. Any of the data length parameters can be zero if the associated data is not present. The coding of the UCI can be controlled through the additional `BetaACK`, `BetaCQI`, and `BetaRI` fields in the `chs` input structure.

`info = lteULSCHInfo(ue,chs,blklen,ocqi,ori,oack,opts)` supports the multiplexing of both transport and UCI data (CQI, RI, HARQ-ACK) or UCI only, and controls the contents and format of the output `info` through a cell array of option strings, `opts`. The optional parameter `opts` allows for the merging of the input `chs` structure fields into `info` at the output.

Examples

Obtain UL-SCH Information for One Transport Block

Obtain information for UL-SCH coding of a single transport block of length 6712 bits.

```
pusch = struct('Modulation','QPSK','NLayers',1,'PRBSet',(0:74).');  
info = lteULSCHInfo(struct(),pusch,6712)
```

```
info =
```

```
      C: 2  
     Km: 3328  
     Cm: 0  
     Kp: 3392  
     Cp: 2  
      F: 0  
      L: 24  
    Bout: 6784  
      G: 21600  
     Qm: 2  
     Gd: 10800  
    OCQI: 0  
     ORI: 0  
    OACK: 0  
   QdCQI: 0  
    QdRI: 0  
   QdACK: 0  
     NRE: 10800
```

```

    NLayers: 1
    Modulation: 'QPSK'

```

Obtain UL-SCH Information for 2 Transport blocks in Structure Array

Obtain information for the UL-SCH coding of two transport blocks with UCI, specifying 3-bit RI and 2-bit HARQ-ACK.

```

pusch.Modulation = {'QPSK', '16QAM'};
pusch.NLayers = 3;
pusch.PRBSets = (0:74).';
info = lteULSCHInfo(struct(), pusch, [6712, 6712], 0, 3, 2)

info =

```

1x2 struct array with fields:

```

    C
    Km
    Cm
    Kp
    Cp
    F
    L
    Bout
    G
    Qm
    Gd
    OCQI
    ORI
    OACK
    QdCQI
    QdRI
    QdACK
    NRE
    NLayers
    Modulation

```

Obtain UL-SCH Information for 2 Transport Blocks in Scalar Structure

Obtain information in a single scalar structure for the UL-SCH coding of two transport blocks with UCI, specifying 3-bit RI and 2-bit HARQ-ACK.

Obtain dimension information for UL-SCH coding of a single transport block of length 6712 bits.

```

pusch.Modulation = {'QPSK', '16QAM'};
pusch.NLayers = 3;
pusch.PRBSset = (0:74).';
info = lteULSCHInfo(struct(), pusch, [6712, 6712], 0, 3, 2, 'cwcombined')

info =

    C: [2 2]
    Km: [3328 3328]
    Cm: [0 0]
    Kp: [3392 3392]
    Cp: [2 2]
    F: [0 0]
    L: [24 24]
    Bout: [6784 6784]
    G: [21590 86360]
    Qm: [2 4]
    Gd: [10795 21590]
    OCQI: 0
    ORI: 3
    OACK: 2
    QdCQI: [0 0]
    QdRI: [5 5]
    QdACK: [4 4]
    NRE: [10800 21600]
    NLayers: [1 2]
    Modulation: {'QPSK' '16QAM'}

```

Input Arguments

ue — UE-specific configuration settings

structure

UE-specific configuration settings, specified as a structure that can contain the following fields.

Parameter Field	Required or Optional	Values	Description
CyclicPrefixUL	Optional	'Normal' (default), 'Extended'	Current cyclic prefix length
Shortened	Optional	0 (default), 1	Shorten subframe flag. If 1, the last symbol of the

Parameter Field	Required or Optional	Values	Description
			subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

chs — Channel-specific transmission configuration structure

Channel-specific transmission configuration, specified as a structure that can contain the following parameter fields.

Parameter Field	Required or Optional	Values	Description
Modulation	Required	('QPSK', '16QAM', '64QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
NLayers	Optional	1 (default), 2, 3, 4	Total number of transmission layers associated with the transport block or blocks.
PRBSet	Required	1- or 2-column integer matrix	0-based physical resource block indices (PRBs) for the slots of the current PUSCH resource allocation. As a column vector, the resource allocation is the same in both slots of the subframe. As a two-column matrix, it specifies different PRBs for each slot in a subframe.
RV	Required	Integer vector (0,1,2,3) ^a	Specifies the redundancy version for one or two codewords used in the initial subframe number, NSubframe . This parameter field is only for informational purposes and is Read-Only.

Parameter Field	Required or Optional	Values	Description
<p>The following three 'Init' fields should be used if the UL-SCH encoding is for a retransmission of a previously sent transport block. If any of these fields are absent, its value is assumed to be the same as the value for its associated current subframe field.</p>			
InitPRBSet	Optional	1- or 2-column integer matrix, PRBSet (default)	PRB indices used in the initial transmission PUSCH allocation. If this field is absent, its value is assumed to be the same as the value for the associated current subframe field, PRBSet.
InitCyclicPrefixU	Optional	'Normal', 'Extended', CyclicPrefixUL (default)	Cyclic prefix length of initial transmit subframe. This is the length used during the first transmission of this transport block. If this field is absent, its value is assumed to be the same as the value for the associated current subframe field, CyclicPrefixUL.
InitShortened	Optional	0, 1, Shortened (default)	Initial transmit subframe shortened flag. If 1, the initial transmit subframe was shortened for possible SRS. If this field is absent, its value is assumed to be the same as the value for the associated current subframe field, Shortened.
<p>The coding of the UCI can be controlled through the following additional fields.</p>			
BetaCQI	Optional	numeric scalar, 2.0 (default)	Modulation and coding scheme (MCS) offset for CQI and PMI bits
BetaRI	Optional	numeric scalar, 2.0 (default)	Modulation and coding scheme (MCS) offset for RI bits

Parameter Field	Required or Optional	Values	Description
BetaACK	Optional	numeric scalar, 2.0 (default)	Modulation and coding scheme (MCS) offset for HARQ-ACK bits. This field was previously named BetaHI ; if this field is absent but BetaHI is present, it is used as before.

- a. A one or two column matrix (for one or two codewords)

blklen — Length of transmitted transport blocks

numeric vector

Length of the transmitted transport blocks, specified as a one or two element numeric vector.

Data Types: double

opts — Format options

string | cell array of strings

Format options of `chinfo` output, specified as a string or a cell array of strings.

Option	Values	Description
Channel parameter merging	'nochsconcat' (default)	Do not concatenate <code>chs</code> input structure into <code>chinfo</code> .
	'chsconcat'	Concatenate <code>chs</code> input structure into <code>chinfo</code> .
Output structure format	'cwseparate' (default)	Information values for each codeword are output in separate elements of the 1-by-ncodewords structure array <code>chinfo</code> .
	'cwcombined'	Information values for each codeword are combined into the fields of a single scalar, or 1-by-1, structure.

Data Types: char | cell

ocqi — Number of uncoded CQI bits

numeric scalar

Number of uncoded CQI bits, specified as a numeric scalar.

Data Types: double

ori — Number of uncoded RI bits

numeric scalar

Number of uncoded RI bits, specified as a numeric scalar.

Data Types: double

oack — Number of uncoded HARQ-ACK bits

numeric scalar

Number of uncoded HARQ-ACK bits, specified as a numeric scalar.

Data Types: double

Output Arguments

info — UL-SCH information

structure | structure array

UL-SCH information, returned as a structure or a structure array. If two transport blocks are encoded, `info` is a structure array of two elements, one for each block. , It contains the following parameter fields.

Parameter Field	Description	Values	Data Type
C	Total number of code blocks	nonnegative scalar integer	int32
Km	Lower code block size (K^-)	nonnegative scalar integer	int32
Cm	Number of code blocks of size K_m (C^-)	nonnegative scalar integer	int32
Kp	Upper code block size (K^+)	nonnegative scalar integer	int32
Cp	Number of code blocks of size K_p (C^+)	nonnegative scalar integer	int32
F	Number of filler bits in first block	nonnegative scalar integer	int32

Parameter Field	Description	Values	Data Type
L	Number of segment cyclic redundancy check (CRC) bits	nonnegative scalar integer	int32
Bout	Total number of bits in all segments	nonnegative scalar integer	int32
G	Number of coded and rate matched UL-SCH data bits	nonnegative scalar integer	int32
Qm	Number of bits per symbol	nonnegative scalar integer	int32
Gd	Number of coded and rate matched UL-SCH data symbols (G')	nonnegative scalar integer	int32
OCQI	Number of uncoded channel quality information (CQI) bits	nonnegative scalar integer	int32
ORI	Number of uncoded symbols for RI	nonnegative scalar integer	int32
OACK	Number of uncoded symbols for ACK/NACK	nonnegative scalar integer	int32
QdCQI	Number of coded symbols for CQI (Q'_{CQI})	nonnegative scalar integer	int32
QdRI	Number of coded symbols for RI (Q'_{RI})	nonnegative scalar integer	int32
QdACK	Number of coded symbols for ACK/NACK (Q'_{ACK})	nonnegative scalar integer	int32
NRE	Number of resource elements (REs) used for PUSCH transmission	nonnegative scalar integer	int32
NLayers	Number of layers associated with one codeword	nonnegative scalar integer	int32
Modulation	Modulation scheme associated with one codeword	'QPSK', '16QAM', '64QAM'	char
RV	RV value associated with one codeword	scalar integer	int32

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

`lteACKEncode` | `lteCQIEncode` | `ltePUSCHDecode` | `lteRIEncode` | `lteULSCH` | `lteULSCHDecode` | `lteULSCHInterleave`

Introduced in R2014a

lteULSCHInterleave

UL-SCH interleaving

Syntax

```
out = lteULSCHInterleave(ue,chs,cdata)
out = lteULSCHInterleave(ue,chs,cdata,ccqi,cri,cack)
```

Description

`out = lteULSCHInterleave(ue,chs,cdata)` performs the UL-SCH channel interleaving on input `cdata` containing encoded transport channel (TrCH) data without UCI. It performs the UL-SCH data and UCI multiplexing and interleaving as defined in TS 36.212 Sections 5.2.2.7 and 5.2.2.8 [1]. This input can be a vector or a cell array of vectors, interleaved separately, and the output is of the same form.

Multiple codewords can be parameterized by two different forms of the `chs` structure. Each codeword can be defined by separate elements of a 1-by-2 structure array, or the codeword parameters can be combined together in the fields of a single scalar, or 1-by-1, structure. Any scalar field values apply to both codewords and a scalar `NLayers` is the total number. See “UL-SCH Parameterization” for more details.

`out = lteULSCHInterleave(ue,chs,cdata,ccqi,cri,cack)` is as above except it also supports UL-SCH channel interleaving on both `cdata` and encoded UCI in `ccqi`, `cri` and `cack`. If any of these inputs are cell arrays, the output has the same form and any vector inputs are interleaved into the first cell of the output only. Any of the input cells or arrays can be empty if the associated input is not transmitted on one or more codewords.

Examples

PUSCH Interleave

Interleave two PUSCH RBs worth of bits for QPSK modulation. Considering the REs reserved for PUSCH DRS, there are 144 REs available for PUSCH data per RB.

Therefore, two RBs contain 288 PUSCH symbols. This results in 2×288 bits to QPSK modulate after interleaving.

Initialize UE specific and UL-SCH related parameter structures. Generate data for QPSK modulation of PUSCH symbols in two RBs. For QPSK, there are two bits per symbol. Perform interleaving and symbol modulation.

```
ue.CyclicPrefixUL = 'Normal';
ue.Shortened = 0;

chs.Modulation = 'QPSK';
chs.NLayers = 1;

numRB = 2;
numREperRB = 144;
bitsPerSymbol = 2;
numBits = numRB * numREperRB * bitsPerSymbol;
cdata = randi([0 1], numBits, 1);

interleaved = lteULSCHInterleave(ue, chs, cdata);
symbols = lteSymbolModulate(interleaved, 'QPSK');
```

Input Arguments

ue — UE-specific settings

structure

UE-specific settings, specified as a structure with the following fields.

CyclicPrefixUL — Cyclic prefix length

'Normal' (default) | Optional | 'Extended'

Cyclic prefix length, specified as a string. Optional.

Data Types: char

Shortened — Shorten subframe

0 (default) | Optional | 1

Shorten subframe, specified as 0 or 1. Optional. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.

Data Types: logical

Data Types: struct

chs — UL-SCH related parameters

scalar structure

UL-SCH related parameters, specified as a scalar structure with the following fields.

Modulation — Modulation format

'QPSK' | '16QAM' | '64QAM' | string

Modulation format. Specified as a string or cell array of strings.

Data Types: char

NLayers — Number of transmission layers (total or per codeword)

1 (default) | Optional | 2 | 3 | 4

Number of transmission layers (total or per codeword), specified as a positive scalar integer. Optional.

Data Types: double

Data Types: struct

cdata — Encoded TrCH data

column vector | cell array of column vectors

Encoded TrCH data, specified as a column vector or a cell array of column vectors.

Data Types: double | cell

ccqi — Encoded CQI

vector

Encoded CQI, specified as a vector.

Data Types: double

cri — Encoded RI

vector

Encoded RI, specified as a vector.

Data Types: double

cack — Encoded ACK

vector

Encoded ACK, specified as a vector.

Data Types: double

Output Arguments

out — Interleaved UL-SCH output

numeric column vector | cell array of numeric column vectors

Interleaved UL-SCH output, returned as a numeric column vector or a cell array of numeric column vectors.

Data Types: double | cell

References

- [1] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

lteACKEncode | lteCQIEncode | lteRateMatchTurbo | lteRIEncode | lteULSCH
| lteULSCHDeinterleave | lteULSCHInfo

Introduced in R2014a

lteULScramble

PUSCH scrambling

Syntax

```
out = lteULScramble(in, nsubframe, cellid, rnti)
out = lteULScramble(ue, in)
```

Description

`out = lteULScramble(in, nsubframe, cellid, rnti)` performs PUSCH scrambling of bit vector, `in`, for subframe number, `nsubframe`, cell identity, `cellid`, and specified RNTI, `rnti`. It performs PUSCH scrambling according to section 5.3.1 of [1]. Placeholder bits, denoted by x , are represented by -1 in the input vector or cell array of vectors. Repetition placeholder bits, y , are represented by -2 . This function substitutes these placeholders as part of its scrambling operation.

`in` is a vector or a cell array containing one or two vectors corresponding to the number of codewords to be scrambled.

`out = lteULScramble(ue, in)` performs PUSCH scrambling of the `in` according to UE-specific settings in structure, `ue`.

Examples

Perform PUSCH Scrambling

```
in = ones(10,1);
bits = lteULScramble(struct('NCellID',100,'NSubframe',0,'RNTI',61),in)
```

```
0
1
0
0
0
1
```

0
0
1
1

Input Arguments

in — Bit input data

numeric column vector | cell array of numeric column vectors

Bit input data, specified as a numeric column vector or cell array of numeric column vectors. This argument contains one or two vectors corresponding to the number of codewords to be scrambled.

Data Types: `double` | `cell`

Complex Number Support: Yes

nsubframe — Subframe number

numeric scalar

Subframe number, specified as a numeric scalar.

Data Types: `double`

cellid — Physical layer cell identity

numeric scalar

Physical layer cell identity, specified as a numeric scalar.

Data Types: `double`

rnti — Radio Network Temporary Identifier (16-bit)

numeric scalar

Radio Network Temporary Identifier (16-bit). specified as a numeric scalar.

Data Types: `double`

ue — UE-specific settings

structure

UE-specific settings, specified as a structure with the following fields.

NCellID — Physical layer cell identity

numeric scalar

Physical layer cell identity, specified as a numeric scalar.

Data Types: double

NSubframe — Subframe number

numeric scalar

Subframe number, specified as a numeric scalar.

Data Types: double

RNTI — Radio Network Temporary Identifier (16-bit)

numeric scalar

Radio Network Temporary Identifier (16-bit). specified as a numeric scalar.

Data Types: double

Data Types: struct

Output Arguments

out — PUSCH scrambled output bits

Numeric column vector | Cell array of numeric column vectors

PUSCH scrambled output bits, returned as a numeric column vector or a cell array of numeric column vectors.

References

- [1] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

See Also

ltePUSCH | lteSymbolModulate | lteULDescramble

Introduced in R2014a

lteWarning

Enable and disable warnings for LTE System Toolbox product

Syntax

```
lteWarning('OFF',msgname)  
lteWarning('ON',msgname)
```

Description

`lteWarning('OFF',msgname)` and `lteWarning('ON',msgname)` disable and enable the display of any warning messages of type `msgname`, specific to the LTE System Toolbox product.

Examples

Disable and Enable Warnings

Disable and enable warnings about using default values for optional parameters.

Turn off the warning about default values.

```
lteWarning('off','DefaultValue')  
bch = lteBCH(struct('CellRefP',1),ones(24,1));  
bch(1:4)
```

```
1  
1  
1  
0
```

Notice that the warning about default values is not displayed.

Next, turn on the warning about default values again.

```
lteWarning('on','DefaultValue')  
bch = lteBCH(struct('CellRefP',1),ones(24,1));
```

```
bch(1:4)
```

```
Warning: Using default value for parameter field CyclicPrefix (Normal)
    1
    1
    1
    0
```

Notice that the warning about default values is displayed again.

Input Arguments

msgname — Message name

'defaultValue' | 'deprecated'

Message name, specified as a string. The following strings are valid values for msgname.

Option	Warning Message
'defaultValue'	This warning occurs when an optional parameter value or parameter structure field is not defined and the default value is used instead.
'deprecated'	This warning occurs for deprecated functionality of the LTE System Toolbox product. For example, it occurs when the user calls a function using a deprecated syntax option. This warning indicates that the functionality may be removed in a later release.

Data Types: char

See Also

warning

Introduced in R2014a

umtsDownlinkReferenceChannels

UMTS downlink measurement channel definition

Syntax

```
config = umtsDownlinkReferenceChannels(rc)
config = umtsDownlinkReferenceChannels(rc,modulation)
```

Description

`config = umtsDownlinkReferenceChannels(rc)` uses the input reference channel string, `rc`, to produce a downlink reference channel definition structure, `config`. The configuration parameters required by `umtsDownlinkWaveformGenerator` to generate a downlink reference channel waveform are included in `config`.

For all syntaxes, `umtsDownlinkReferenceChannels` uses the input, `rc`, to initialize a configuration data structure compliant with one of the reference channels defined in the following 3GPP standards:

- Downlink W-CDMA reference measurement channel (RMC) waveforms, as defined in TS 25.101, Annex A3 [1]
- HSDPA fixed reference channel (FRC) H-Set waveforms, as defined in TS 25.101, Annex A7 [1]
- Downlink test model waveforms, as defined in TS 25.141, Section 6.1.1 [2]

`config = umtsDownlinkReferenceChannels(rc,modulation)` gives you the option of changing the default modulation scheme when `rc` specifies initialization of an FRC H-Set configuration. See the table of valid H-Set/modulation combinations in the description of the `modulation` input.

Examples

UMTS Downlink Reference Channel Initialization

Initialize a 'QPSK' 'RMC12.2kbps' reference channel.

Generate the configuration structure, `rmcStruct`


```
rc = 'RMC12.2kbps';
modulation = 'QPSK';
rmcStruct = umtsDownlinkReferenceChannels(rc, modulation);
```

The output from `umtsDownlinkReferenceChannels` provides the input required to generate the desired UMTS waveform corresponding to these settings.

Examine the `DPCH` field in `rmcStruct`. This field has a nested structure defining this physical channel for the 'RMC12.2kbps' reference channel with 'QPSK' modulation.

```
rmcStruct
rmcStruct.DPCH
rmcStruct.DPCH.CCTrCH
rmcStruct.DPCH.CCTrCH.TrCH(1)
rmcStruct.DPCH.CCTrCH.TrCH(1).DynamicPart
rmcStruct.DPCH.CCTrCH.TrCH(2)
rmcStruct.DPCH.CCTrCH.TrCH(2).DynamicPart
```

```
rmcStruct =
```

```

    TotFrames: 1
  PrimaryScramblingCode: 0
    FilterType: 'RRC'
  OversamplingRatio: 4
    NormalizedPower: 'Off'
      DPCH: [1x1 struct]
      PCCPCH: [1x1 struct]
      SCCPCH: [1x1 struct]
      PCPICH: [1x1 struct]
      SCPICH: [1x1 struct]
      PSCH: [1x1 struct]
      SSCH: [1x1 struct]
      PICH: [1x1 struct]
      HSDPA: [1x1 struct]
      OCNS: [1x1 struct]
```

```
ans =
```

```

    Enable: 'On'
  SlotFormat: 11
  SpreadingCode: 6
    NMulticodes: 1
  SecondaryScramblingCode: 1
```

```
TimingOffset: 0
Power: 0
TPCData: 0
TCFI: 0
DataSource: 'CCTrCH'
CCTrCH: [1x1 struct]
```

ans =

```
Name: 'DCH'
DTXPosition: 'fixed'
TrCH: [1x2 struct]
```

ans =

```
Name: 'DTCH'
CRC: '16'
CodingType: 'conv3'
RMA: 256
TTI: 20
DataSource: 'PN9-ITU'
ActiveDynamicPart: 1
DynamicPart: [1x1 struct]
```

ans =

```
BlockSize: 244
BlockSetSize: 244
```

ans =

```
Name: 'DCCH'
CRC: '12'
CodingType: 'conv3'
RMA: 256
TTI: 40
DataSource: 'PN9-ITU'
ActiveDynamicPart: 1
DynamicPart: [1x1 struct]
```

ans =

```
    BlockSize: 100
    BlockSetSize: 100
```

Input Arguments

rc — Reference channel configuration

char

Reference channel, specified as a string that identifies which RMC, H-Set, or test model to configure.

Parameter Field	Required or Optional	Values	Description
rc	Required	Reference Measurement Channels: 'RMC0kbps', 'RMC12.2kbps', 'RMC64kbps', 'RMC144kbps', 'RMC384kbps'	Reference channel, specified as a string that identifies the W-CDMA downlink RMC configuration, as defined in TS 25.101, Annex A3 [1]. See Note for details specific to RMC0kbps
		Fixed Reference Channel H-Sets: 'H-Set1', 'H-Set2', 'H-Set3', 'H-Set4', 'H-Set5', 'H-Set6', 'H-Set7', 'H-Set8', 'H-Set10', 'H-Set12'.	Reference channel, specified as a string that identifies the HSDPA and HSPA+ FRC H-Set configuration, as defined in TS 25.101, Annex A7 [1].
		Test Models: 'TM1_4DPCH', 'TM1_8DPCH', 'TM1_16DPCH', 'TM1_32DPCH', 'TM1_64DPCH', 'TM2_3DPCH', 'TM3_4DPCH', 'TM3_8DPCH', 'TM3_16DPCH',	Reference channel, specified as a string that identifies the test model physical channel configuration, as defined in TS 25.141, Section 6.1.1 [2].

Parameter Field	Required or Optional	Values	Description
		'TM3_32DPCH', 'TM4', 'TM5_4DPCH_4HSPDSCH', 'TM5_6DPCH_2HSPDSCH', 'TM5_14DPCH_4HSPDSCH', 'TM5_30DPCH_8HSPDSCH', 'TM6_4DPCH_4HSPDSCH', 'TM6_30DPCH_8HSPDSCH'	

Data Types: char

modulation — Modulation scheme for FRC H-Set being configured

H-Set dependent (default) | optional | 'QPSK' | '16QAM' | '64QAM'

If rc specifies an FRC H-Set configuration, the modulation scheme specified as a character string can be included. The table here identifies valid H-Set/Modulation combinations and the default if modulation is not specified.

Valid Combinations rc	modulation			Default modulation (if not specified)
	'QPSK'	'16QAM'	'64QAM'	
'H-Set1'	✓	✓	—	'QPSK'
'H-Set2'	✓	✓	—	'QPSK'
'H-Set3'	✓	✓	—	'QPSK'
'H-Set4'	✓	—	—	'QPSK'
'H-Set5'	✓	—	—	'QPSK'
'H-Set6'	✓	✓	—	'QPSK'
'H-Set7'	✓	—	—	'QPSK'
'H-Set8'	—	—	✓	'64QAM'
'H-Set10'	✓	✓	—	'QPSK'
'H-Set12'	✓	—	—	'QPSK'

Data Types: char

Output Arguments

config — Definition of the channels included for the waveform generator structure

Top-Level Parameters and Substructures

Definition of the channels included for the waveform generator, returned as a structure.

Parameter Field	Required or Optional	Values	Description
TotFrames	Required	Nonnegative scalar integer	Total number of frames to be generated
PrimaryScramblingCode	Required	Scalar integer (0 ... 511)	Primary scrambling code index
FilterType	Required	'RRC' (default), 'Off'	String to enable the RRC filter
OversamplingRatio	Required	Nonnegative scalar integer	Oversampling ratio
NormalizedPower	Required	Float (-inf to +inf) or string 'Off' to disable power normalization	Overall waveform power in dBW relative to 1 ohm
DPCH	Optional	Not present, single structure, or structure array	See DPCH Substructure.
PCCPCH	Optional	Not present or single structure	See PCCPCH Substructure.
SCCPCH	Optional	Not present or single structure	See SCCPCH Substructure.
PCPICH	Optional	Not present or single structure	See PCPICH Substructure.
SCPICH	Optional	Not present or single structure	See SCPICH Substructure.
PSCH	Optional	Not present or single structure	See PSCH Substructure.

Parameter Field	Required or Optional	Values	Description
SSCH	Optional	Not present or single structure	See SSCH Substructure.
PICH	Optional	Not present or single structure	See PICH Substructure.
HSDPA	Optional	Not present or single structure	See HSDPA Substructure
OCNS	Optional	Not present or single structure	See OCNS Substructure.

DPCH Substructure

Include the DPCH substructure in the `config` structure to add dedicated physical channels to the output structure. The DPCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SlotFormat	Required	Scalar integer (0 ... 16)	DPCH slot format number
SpreadingCode	Required	Scalar integer (0 ... 511)	DPCH spreading code, for multicode transmission it is the first DPCH code
NMulticodes	Required	Scalar integer (1, 2, 3, 4, 5, 6)	Number of DPCHs
SecondaryScramblingCode	Required	Scalar integer (0 ... 15)	DPCH secondary scrambling code index
TimingOffset	Required	Scalar integer (0 ... 149)	The timing offset in terms of the number of chips ($\times 256T_{chip}$)
Power	Required	Float (-inf to +inf)	Channel power in dB
TPCData	Required	0 or 1	Scalar or vector of Transmit Power Control data
TFCI	Required	Scalar integer (0 ... 1023)	Transport Format Combination Indicator

Parameter Field	Required or Optional	Values	Description
DataSource	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'. If no seed is specified, the shift register is initialized with all ones. Using Transport channel: 'CCTrCH'	DPCH data source. The data source can be defined as a transport channel (which enables transport channel coding), as one of the PN sequences or as a binary scalar or vector.
CCTrCH	Optional	Structure	See CCTrCH Substructure.

CCTrCH Substructure

Include a CCTrCH substructure instance individually for DPCH, PCCPCH, and/or SCCPCH substructures. Separate instances of a coded composite transport channel are added to the output structures of the DPCH, P-CCPCH, and/or S-CCPCH physical channel definitions. When the CCTrCH substructure is included, it contains the following fields.

Parameter Field	Required or Optional	Values	Description
Name	Optional	String (default depends on the physical channel specified)	Name assigned to the CCTrCH. Functions do not use the Name is field. Therefore, you can redefine the content with no consequence.
DTXPosition	Required	'fixed', 'flexible'	String specifying the DTX position

Parameter Field	Required or Optional	Values	Description
TrCH	Required	Structure or structure array	An array of structures that defines multiple transport channels in the CCTrCH
TrCH.Name	Required	String, default depends on the physical channel specified.	Name assigned to the TrCH. Functions do not use the Name field. Therefore, you can redefine the content with no consequence.
TrCH.CRC	Required	String '0', '8', '12', '16', '24'	String specifying the CRC polynomial
TrCH.TTI	Required	Scalar integer (10, 20, 40, 80)	TTI in ms
TrCH.CodingTy	Required	String 'turbo', 'conv2', 'conv3'	String specifying channel coding type and rate
TrCH.RMA	Required	Scalar integer (1 ... 256)	Rate matching attribute value
TrCH.DataSour	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'. If no seed is specified, the shift register is initialized with all ones.	Transport channel data source. The data source can be defined either as one of the standard PN sequences or as a binary scalar or vector.

Parameter Field	Required or Optional	Values	Description
		<p>Examples for setting the <code>DataSource</code> field include:</p> <ul style="list-style-type: none"> • <code>...CCTrCH.TrCh(1).DataSource = [1 0 0 1]</code> generates a physical channel data block by looping the vector <code>[1 0 0 1]</code>. • <code>...CCTrCH.TrCh(1).DataSource = 'PN9'</code> generates a physical channel data block with random seed = 511. • <code>...CCTrCH.TrCh(1).DataSource = {'PN9', 5}</code> generates a physical channel data block with seed = 5. • <code>...CCTrCH.TrCh(1).DataSource = 'CCTrCH'</code> causes the physical channel to carry the transport channel that is defined by the <code>CCTrCH</code> substructure. 	
TrCH.ActiveDynamicPart	Required	Scalar integer, in the range 1 through <code>length(DynamicPart)</code>	Scalar or vector specifying the active dynamic part
		The <code>ActiveDynamicPart</code> field indicates the <code>DynamicPart</code> array index for the active transport format (<code>Blockset</code> , <code>BlockSetSize</code>) from available combinations defined in <code>DynamicPart</code> . The selected transport format is used for data transmission in the current TTI.	
TrCH.DynamicPart	Required	Structure or structure array	Structure specifying size of each transport block
		The <code>DynamicPart</code> fields, <code>BlockSize</code> and <code>BlockSetSize</code> , define the size of each transport block and the total bits per transport block set. As a pair (<code>BlockSize</code> , <code>BlockSetSize</code>) describe a transport format set. <code>DynamicPart</code> defines one or multiple transport format sets.	
TrCH.DynamicPart	Required	Positive scalar integer	Transport block length
TrCH.DynamicPart	Required	Scalar integer, multiple of <code>BlockSize</code>	Total number of bits in the transport block set. Implementation does not support multiple transport blocks, so by definition <code>BlockSet</code> is equal to <code>BlockSetSize</code> .

Note: When configuring the output structure to transmit the RMC 0kbps, as defined in TS 25.101, Section A.3.0 [1], a transport channel CRC is defined for transmission. The standard indicates DTCH transport block size = 0 and transport block set size = 0. Our implementation requires signalling transmission of a transport block to transmit a CRC. In the `umtsDownlinkWaveformGenerator`, one transport block of size zero is signaled by setting either `BlockSize` or `BlockSetSize` to '0'.

In our implementation, setting both `BlockSize` and `BlockSetSize` to zero signals transmission of zero transport blocks and a transport block size of zero and causes a transmission with no CRC.

PCCPCH Substructure

Include the PCCPCH substructure in the `config` structure to add the primary common control physical channel to the output structure. The PCCPCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	P-CCPCH power in dB
DataSource	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'. If no seed is specified, the shift register is initialized with all ones. Using transport channel: 'CCTrCH'	PCCPCH data source. The data source can be defined as a transport channel (which enables BCH transport channel coding), as one of the PN sequences or as a binary scalar or vector

Parameter Field	Required or Optional	Values	Description
CCTrCH	Optional	Structure	See CCTrCH Substructure.

SCCPCH Substructure

Include the SCCPCH substructure in the `config` structure to add the secondary common control physical channel to the output structure. The SCCPCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SlotFormat	Required	Scalar integer (0 ... 17)	S-CCPCH slot format number
SpreadingCode	Required	Scalar integer (0 ... 255) Valid range depends on slot format	S-CCPCH spreading code
SecondaryScramblingCode	Required	Scalar integer (0 ... 15)	S-CCPCH secondary scrambling code index
TimingOffset	Required	Scalar integer (0 ... 149)	The timing offset in terms of the number of chips (x256Tchip)
Power	Required	Float (-inf to +inf)	S-CCPCH power in dB
TFCI	Required	Scalar integer (0 ... 1023)	Transport format combination indicator
DataSource	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.	S-CCPCH data source. The data source can be defined as a transport channel (which enables PCH/FACH transport channel coding), as one of the PN sequences, or as a binary scalar or vector.

Parameter Field	Required or Optional	Values	Description
		If no seed is specified, the shift register is initialized with all ones. Using Transport channel: 'CCTrCH'	
CCTrCH	Optional	Structure	See CCTrCH Substructure.

PCPICH Substructure

Include the PCPICH substructure in the `config` structure to add the primary common pilot channel to the output structure. The PCPICH substructure contains the following fields.

Parameter Field	Required or Optional	Values / Ranges / Notes	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	P-CPICH power in dB

SCPICH Substructure

Include the SCPICH substructure in the `config` structure to add the secondary common pilot channel to the output structure. The SCPICH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SpreadingCode	Required	Scalar integer (0 ... 255)	S-CPICH spreading code

Parameter Field	Required or Optional	Values	Description
SecondaryScrambl	Required	Scalar integer (0 ... 15)	S-CPICH secondary scrambling code index
Power	Required	Float (-inf to +inf)	S-CPICH power in dB

PSCH Substructure

Include the PSCH substructure in the `config` structure to add the physical shared channel to the output structure. The PSCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	P-SCH power in dB

SSCH Substructure

Include the SSCH substructure in the `config` structure to add the secondary synchronization channel to the output structure. The SSCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	S-SCH power in dB

PICH Substructure

Include the PICH substructure in the `config` structure to add the page indicator channel to the output structure. The PICH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SpreadingCode	Required	Scalar integer (0 ... 255)	PICH spreading code
TimingOffset	Required	Scalar integer (0 ... 149)	The timing offset in terms of the number of chips (x256Tchip)
Power	Required	Float (-inf to +inf)	PICH power in dB
DataSource	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'. If no seed is specified, the shift register is initialized with all ones. Using paging data: 'PagingData'	PICH data source. The data source can be defined as paging data, as one of the PN sequences or as a binary scalar or vector.
Np	Required	Scalar integer (18, 36, 72, 144)	Number of paging indicators per frame

HSDPA Substructure

Include the HSDPA substructure in the `config` structure to add high-speed downlink protocol access information and channels to the output structure. The HSDPA substructure contains the following fields.

Parameter Field	Required or Optional	Values / Ranges / Notes	Description
Enable	Required	'On', 'Off'	String to enable or disable the HSDPA channels (HS-PDSCHs and HS-SCCH)
CodeGroup	Required	Scalar integer (0 ... 16)	Number of channelization codes used simultaneously for HS-PDSCHs
CodeOffset	Required	Scalar integer (0 ... 15)	Offset to the first channelization code to use for HS-PDSCHs
Modulation	Required	'QPSK', '16QAM', '64QAM'	String specifying symbol modulation
VirtualBufferCap	Required	Nonnegative scalar integer	Size of virtual IR buffer
InterTTIDistance	Required	Scalar integer (1 ... 8)	TTI interval in ms
NHARQProcesses	Required	Scalar integer (1 ... 8)	Total number of HARQ Processes
XrvSequence	Required	Scalar integer (0 ... 7)	Redundancy and constellation version coding sequence
UEId	Required	Scalar integer (0 ... 65535)	UE identifier
TransportBlockSi	Required	Scalar integer (0 ... 63)	Transport block size ID
HSSCHSpreadingC	Required	Scalar integer (0 ... 127)	HS-SCCH spreading code
SecondaryScrambl	Required	Scalar integer (0 ... 15)	Secondary scrambling code index for HS-PDSCH and HS-SCCH channels
HSPDSCHPower	Required	Float (-inf to +inf)	HS-PDSCH power in dB
HSSCHPower	Required	Float (-inf to +inf)	HS-SCCH power in dB

Parameter Field	Required or Optional	Values / Ranges / Notes	Description
DataSource	Required	<p>Scalar, vector, string, or cell</p> <p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p> <p>Using transport channel: 'HSDSCH'</p>	HSDPA data source. The data source can be defined as a transport channel (enables HS-DSCH transport channel coding), as one of the PN sequences, or as a binary scalar or vector
HSDSCH	Optional	Not present or a structure	
The following fields are required only if the HSDSCH substructure is present.			
HSDSCH.BlockSize	Required	Nonnegative scalar integer	Transport block size
HSDSCH.DataSource	Required	<p>Scalar, vector, string, or cell</p> <p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p>	HSDSCH transport data source. The data source can be defined either as one of the standard PN sequences or as a binary scalar or vector.

OCNS Substructure

Include the OCNS substructure in the `config` structure to add orthogonal channel noise source information to the output structure. The OCNS substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	OCNS overall power in dB
OCNSType	Required	<p>For RMCs and H-Sets:</p> <p>'RMC_16DPCH', 'H-Set_6DPCH', 'H-Set_4DPCH'</p> <p>For Test Model DPCH and HS-PDSCH/HS-SCCH sets:</p> <p>'TM1_4DPCH', 'TM1_8DPCH', 'TM1_16DPCH', 'TM1_32DPCH', 'TM1_64DPCH', 'TM2_3DPCH', 'TM3_4DPCH', 'TM3_8DPCH', 'TM3_16DPCH', 'TM3_32DPCH', 'TM5_4DPCH_4HSPDSCH', 'TM5_6DPCH_2HSPDSCH', 'TM5_14DPCH_4HSPDSCH', 'TM5_30DPCH_8HSPDSCH', 'TM6_4DPCH_4HSPDSCH', 'TM6_30DPCH_8HSPDSCH'</p>	<p>If OCNS is enabled, OCNSType specifies which OCNS configuration to use. The OCNS substructure and OCNSType field are used to generate</p> <ul style="list-style-type: none"> • DPCHs, defined as OCNS channels in TS 25.101 • DPCHs, HS-PDSCHs, and HS-SCCHs, defined for test models in TS 25.141, Section 6 <p>For test model generation, set the corresponding channel configuration Enable field to 'Off'.</p>

More About

- “Downlink Reference Channel and Waveform Generation Parameter Structures”

References

- [1] 3GPP TS 25.101. “User Equipment (UE) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 25.141. “Base Station (BS) conformance testing (FDD).” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network*. URL: <http://www.3gpp.org>.

See Also

`umtsDownlinkWaveformGenerator` | `umtsUplinkReferenceChannels` | `umtsUplinkWaveformGenerator`

Introduced in R2015a

umtsDownlinkWaveformGenerator

UMTS downlink waveform generation

Syntax

```
waveform = umtsDownlinkWaveformGenerator(config)
```

Description

`waveform = umtsDownlinkWaveformGenerator(config)` returns the UMTS downlink waveform, `waveform`, defined by the configuration structure, `config`. This function supports W-CDMA, HSDPA, and HSPA+ waveform generation. The top-level parameters and lower-level substructures of `config` characterize the waveform and channel properties of the `umtsDownlinkWaveformGenerator` function output. The `config` input is generated using the `umtsDownlinkReferenceChannels` function. `config` includes top-level parameters and substructures to describe the different channels to include in the waveform. The top-level parameters of `config` are: `TotFrames`, `PrimaryScramblingCode`, `FilterType`, `OversamplingRatio`, and `NormalizedPower`. To enable the specific channels you can add associated substructures: `DPCH`, `PCCPCH`, `SCCPCH`, `PCPICH`, `SCPICH`, `PSCH`, `SSCH`, `PICH`, `HSDPA`, and `OCNS`.

Note: Include an interfering downlink 3GPP technology noise source by initializing the `OCNS` substructure. Specify the orthogonal channel noise source (`OCNS`) parameters using the appropriate 3GPP definition,

- RMC `OCNS` channels are defined in TS 25.101, Table C.6 [1]
 - H-Set `OCNS` channels are defined in TS 25.141, Tables C.13, and C.13A [2]
 - Test model `DPCHs` and `HS-PDSCH/HS-SCCH` channels are defined in TS 25.141, Section 6.1.1 [2]
-

Examples

UMTS Downlink Waveform Generation

 
Initialize a 'QPSK', 'H-Set1' FRC reference channel and generate the UMTS waveform that corresponds to these settings.

Generate the configuration structure, `frcStruct`,

```
rc = 'H-Set1';  
modulation = 'QPSK';  
frcStruct = umtsDownlinkReferenceChannels(rc, modulation);
```

Generate the desired waveform using `frcStruct` as the input to the waveform generation function. Create a spectrum analyzer object sampling at `chiprate x OversamplingRatio`. Use the `step` method to plot the waveform.

```
waveform = umtsDownlinkWaveformGenerator(frcStruct);  
h = dsp.SpectrumAnalyzer('SampleRate', 3.84e6*frcStruct.OversamplingRatio);  
step(h,waveform);
```

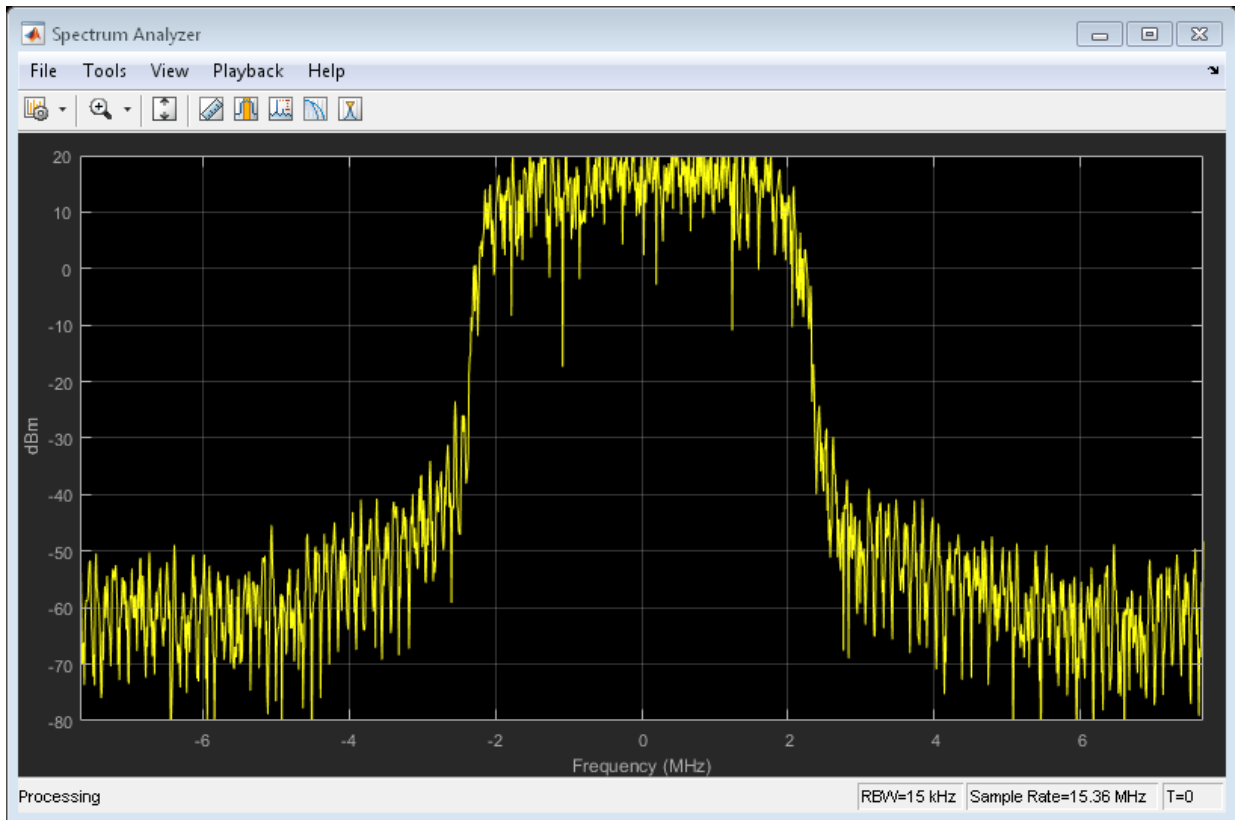

Input Arguments

config — Definition of the channels included by waveform generator
structure

Top-Level Parameters and Substructures

Definition of the channels included by the waveform generator, specified as a structure.

Parameter Field	Required or Optional	Values	Description
TotFrames	Required	Nonnegative scalar integer	Total number of frames to be generated
PrimaryScrambling	Required	Scalar integer (0 ... 511)	Primary scrambling code index
FilterType	Required	'RRC' (default), 'Off'	String to enable the RRC filter
OversamplingRatio	Required	Nonnegative scalar integer	Oversampling ratio
NormalizedPower	Required	Float (-inf to +inf) or string 'Off' to disable power normalization	Overall waveform power in dBW relative to 1 ohm
DPCH	Optional	Not present, structure, or structure array	See DPCH Substructure.
PCCPCH	Optional	Not present or structure	See PCCPCH Substructure.
SCCPCH	Optional	Not present or structure	See SCCPCH Substructure.
PCPICH	Optional	Not present or structure	See PCPICH Substructure.
SCPICH	Optional	Not present or structure	See SCPICH Substructure.
PSCH	Optional	Not present or structure	See PSCH Substructure.
SSCH	Optional	Not present or structure	See SSCH Substructure.
PICH	Optional	Not present or structure	See PICH Substructure.
HSDPA	Optional	Not present or structure	See HSDPA Substructure.
OCNS	Optional	Not present or structure	See OCNS Substructure.

DPCH Substructure

Include the DPCH substructure in the `config` structure to add dedicated physical channels to the output structure. The DPCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SlotFormat	Required	Scalar integer (0 ... 16)	DPCH slot format number
SpreadingCode	Required	Scalar integer (0 ... 511)	DPCH spreading code, for multicode transmission it is the first DPCH code
NMulticodes	Required	Scalar integer (1, 2, 3, 4, 5, 6)	Number of DPCHs
SecondaryScramblingCode	Required	Scalar integer (0 ... 15)	DPCH secondary scrambling code index
TimingOffset	Required	Scalar integer (0 ... 149)	The timing offset in terms of the number of chips (x256Tchip)
Power	Required	Float (-inf to +inf)	Channel power in dB
TPCData	Required	0 or 1	Scalar or vector of Transmit Power Control data
TFCI	Required	Scalar integer (0 ... 1023)	Transport Format Combination Indicator
DataSource	Required	<p>Scalar, vector, string, or cell</p> <p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9 - ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p> <p>Using Transport channel: 'CCTrCH'</p>	DPCH data source. The data source can be defined as a transport channel (which enables transport channel coding), as one of the PN sequences or as a binary scalar or vector.
CCTrCH	Optional	Structure	See CCTrCH Substructure.

CCTrCH Substructure

Include a CCTrCH substructure instance individually for DPCH, PCCPCH, and/or SCCPCH substructures. Separate instances of a coded composite transport channel are added to the output structures of the DPCH, P-CCPCH, and/or S-CCPCH physical channel definitions. When the CCTrCH substructure is included, it contains the following fields.

Parameter Field	Required or Optional	Values	Description
Name	Optional	String (default depends on the physical channel specified)	Name assigned to the CCTrCH. Functions do not use the Name is field. Therefore, you can redefine the content with no consequence.
DTXPosition	Required	'fixed', 'flexible'	String specifying the DTX position
TrCH	Required	Structure or structure array	An array of structures that defines multiple transport channels in the CCTrCH
TrCH.Name	Required	String, default depends on the physical channel specified.	Name assigned to the TrCH. Functions do not use the Name field. Therefore, you can redefine the content with no consequence.
TrCH.CRC	Required	String '0', '8', '12', '16', '24'	String specifying the CRC polynomial
TrCH.TTI	Required	Scalar integer (10, 20, 40, 80)	TTI in ms
TrCH.CodingTy	Required	String 'turbo', 'conv2', 'conv3'	String specifying channel coding type and rate
TrCH.RMA	Required	Scalar integer (1 ... 256)	Rate matching attribute value
TrCH.DataSour	Required	Scalar, vector, string, or cell	Transport channel data source. The data source can be defined either as one of the standard PN sequences or as a binary scalar or vector.

Parameter Field	Required or Optional	Values	Description
		<p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p>	
		<p>Examples for setting the DataSource field include:</p> <ul style="list-style-type: none"> • ...CCTrCH.TrCh(1).DataSource = [1 0 0 1] generates a physical channel data block by looping the vector [1 0 0 1]. • ...CCTrCH.TrCh(1).DataSource = 'PN9' generates a physical channel data block with random seed = 511. • ...CCTrCH.TrCh(1).DataSource = {'PN9',5} generates a physical channel data block with seed = 5. • ...CCTrCH.TrCh(1).DataSource = 'CCTrCH' causes the physical channel to carry the transport channel that is defined by the CCTrCH substructure. 	
TrCH.ActiveDynamicPart	Required	Scalar integer, in the range 1 through length(DynamicPart)	Scalar or vector specifying the active dynamic part
		The ActiveDynamicPart field indicates the DynamicPart array index for the active transport format (Blockset, BlocksetSize) from available combinations defined in DynamicPart. The selected transport format is used for data transmission in the current TTI.	
TrCH.DynamicPart	Required	Structure or structure array	Structure specifying size of each transport block

Parameter Field	Required or Optional	Values	Description
		The <code>DynamicPart</code> fields, <code>BlockSize</code> and <code>BlockSetSize</code> , define the size of each transport block and the total bits per transport block set. As a pair (<code>BlockSize</code> , <code>BlockSetSize</code>) describe a transport format set. <code>DynamicPart</code> defines one or multiple transport format sets.	
TrCH.DynamicP	Required	Positive scalar integer	Transport block length
TrCH.DynamicP	Required	Scalar integer, multiple of <code>BlockSize</code>	Total number of bits in the transport block set. Implementation does not support multiple transport blocks, so by definition <code>BlockSet</code> is equal to <code>BlockSetSize</code> .

Note: When configuring the output structure to transmit the RMC 0kbps as defined in TS 25.101, Section A.3.0 [1], a transport channel CRC is defined for transmission. The standard indicates DTCH transport block size = 0 and transport block set size = 0. Our implementation requires signalling transmission of a transport block to transmit a CRC. In the `umtsDownlinkWaveformGenerator`, one transport block of size zero is signaled by setting either `BlockSize` or `BlockSetSize` to '0'. Setting both `BlockSize` and `BlockSetSize` to '0' signals '0' transport block of size '0' and no CRC is transmitted.

PCCPCH Substructure

Include the PCCPCH substructure in the `config` structure to add the primary common control physical channel to the output structure. The PCCPCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	P-CCPCH power in dB

Parameter Field	Required or Optional	Values	Description
DataSource	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'. If no seed is specified, the shift register is initialized with all ones. Using transport channel: 'CCTrCH'	PCCPCH data source. The data source can be defined as a transport channel (which enables BCH transport channel coding), as one of the PN sequences or as a binary scalar or vector
CCTrCH	Optional	Structure	See CCTrCH Substructure.

SCCPCH Substructure

Include the SCCPCH substructure in the `config` structure to add the secondary common control physical channel to the output structure. The SCCPCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SlotFormat	Required	Scalar integer (0 ... 17)	S-CCPCH slot format number
SpreadingCode	Required	Scalar integer (0 ... 255) Valid range depends on slot format	S-CCPCH spreading code

Parameter Field	Required or Optional	Values	Description
SecondaryScrambl	Required	Scalar integer (0 ... 15)	S-CCPCH secondary scrambling code index
TimingOffset	Required	Scalar integer (0 ... 149)	The timing offset in terms of the number of chips (x256Tchip)
Power	Required	Float (-inf to +inf)	S-CCPCH power in dB
TFCI	Required	Scalar integer (0 ... 1023)	Transport format combination indicator
DataSource	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'. If no seed is specified, the shift register is initialized with all ones. Using Transport channel: 'CCTrCH'	S-CCPCH data source. The data source can be defined as a transport channel (which enables PCH/FACH transport channel coding), as one of the PN sequences, or as a binary scalar or vector.
CCTrCH	Optional	Structure	See CCTrCH Substructure.

PCPICH Substructure

Include the PCPICH substructure in the `config` structure to add the primary common pilot channel to the output structure. The PCPICH substructure contains the following fields.

Parameter Field	Required or Optional	Values / Ranges / Notes	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	P-CPICH power in dB

SCPICH Substructure

Include the SCPICH substructure in the `config` structure to add the secondary common pilot channel to the output structure. The SCPICH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SpreadingCode	Required	Scalar integer (0 ... 255)	S-CPICH spreading code
SecondaryScramblingCode	Required	Scalar integer (0 ... 15)	S-CPICH secondary scrambling code index
Power	Required	Float (-inf to +inf)	S-CPICH power in dB

PSCH Substructure

Include the PSCH substructure in the `config` structure to add the physical shared channel to the output structure. The PSCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	P-SCH power in dB

SSCH Substructure

Include the SSCH substructure in the `config` structure to add the secondary synchronization channel to the output structure. The SSCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	S-SCH power in dB

PICH Substructure

Include the PICH substructure in the `config` structure to add the page indicator channel to the output structure. The PICH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SpreadingCode	Required	Scalar integer (0 ... 255)	PICH spreading code
TimingOffset	Required	Scalar integer (0 ... 149)	The timing offset in terms of the number of chips (x256Tchip)
Power	Required	Float (-inf to +inf)	PICH power in dB
DataSource	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.	PICH data source. The data source can be defined as paging data, as one of the PN sequences or as a binary scalar or vector.

Parameter Field	Required or Optional	Values	Description
		If no seed is specified, the shift register is initialized with all ones. Using paging data: 'PagingData'	
Np	Required	Scalar integer (18, 36, 72, 144)	Number of paging indicators per frame

HSDPA Substructure

Include the HSDPA substructure in the `config` structure to add high-speed downlink protocol access information and channels to the output structure. The HSDPA substructure contains the following fields.

Parameter Field	Required or Optional	Values / Ranges / Notes	Description
Enable	Required	'On', 'Off'	String to enable or disable the HSDPA channels (HS-PDSCHs and HS-SCCH)
CodeGroup	Required	Scalar integer (0 ... 16)	Number of channelization codes used simultaneously for HS-PDSCHs
CodeOffset	Required	Scalar integer (0 ... 15)	Offset to the first channelization code to use for HS-PDSCHs
Modulation	Required	'QPSK', '16QAM', '64QAM'	String specifying symbol modulation
VirtualBufferCap	Required	Nonnegative scalar integer	Size of virtual IR buffer
InterTTIDistance	Required	Scalar integer (1 ... 8)	TTI interval in ms
NHARQProcesses	Required	Scalar integer (1 ... 8)	Total number of HARQ Processes
XrvSequence	Required	Scalar integer (0 ... 7)	Redundancy and constellation version coding sequence

Parameter Field	Required or Optional	Values / Ranges / Notes	Description
UEId	Required	Scalar integer (0 ... 65535)	UE identifier
TransportBlockSize	Required	Scalar integer (0 ... 63)	Transport block size ID
HSSCCHSpreadingCode	Required	Scalar integer (0 ... 127)	HS-SCCH spreading code
SecondaryScramblingCode	Required	Scalar integer (0 ... 15)	Secondary scrambling code index for HS-PDSCH and HS-SCCH channels
HSPDSCHPower	Required	Float (-inf to +inf)	HS-PDSCH power in dB
HSSCCHPower	Required	Float (-inf to +inf)	HS-SCCH power in dB
DataSource	Required	<p>Scalar, vector, string, or cell</p> <p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p> <p>Using transport channel: 'HSDSCH'</p>	HSDPA data source. The data source can be defined as a transport channel (enables HS-DSCH transport channel coding), as one of the PN sequences, or as a binary scalar or vector
HSDSCH	Optional	Not present or a structure	
The following fields are required only if the HSDSCH substructure is present.			
HSDSCH.BlockSize	Required	Nonnegative scalar integer	Transport block size

Parameter Field	Required or Optional	Values / Ranges / Notes	Description
HSDSCH.DataSource	Required	<p>Scalar, vector, string, or cell</p> <p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p>	HSDSCH transport data source. The data source can be defined either as one of the standard PN sequences or as a binary scalar or vector.

OCNS Substructure

Include the OCNS substructure in the `config` structure to add orthogonal channel noise source information to the output structure. The OCNS substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	OCNS overall power in dB
OCNSType	Required	<p>For RMCs and H-Sets:</p> <p>'RMC_16DPCH', 'H-Set_6DPCH', 'H-Set_4DPCH'</p> <p>For Test Model DPCH and HS-PDSCH/HS-SCCH sets:</p>	<p>If OCNS is enabled, <code>OCNSType</code> specifies which OCNS configuration to use. The OCNS substructure and <code>OCNSType</code> field are used to generate</p> <ul style="list-style-type: none"> DPCHs, defined as OCNS channels in TS 25.101

Parameter Field	Required or Optional	Values	Description
		'TM1_4DPCH', 'TM1_8DPCH', 'TM1_16DPCH', 'TM1_32DPCH', 'TM1_64DPCH', 'TM2_3DPCH', 'TM3_4DPCH', 'TM3_8DPCH', 'TM3_16DPCH', 'TM3_32DPCH', 'TM5_4DPCH_4HSPDSCH', 'TM5_6DPCH_2HSPDSCH', 'TM5_14DPCH_4HSPDSCH', 'TM5_30DPCH_8HSPDSCH', 'TM6_4DPCH_4HSPDSCH', 'TM6_30DPCH_8HSPDSCH'	<ul style="list-style-type: none"> DPCHs, HS-PDSCHs, and HS-SCCHs, defined for test models in TS 25.141, Section 6 <p>For test model generation, set the corresponding channel configuration Enable field to 'Off'.</p>

Output Arguments

waveform — Modulated baseband waveform conveying the UTRA physical channels
complex vector array

Modulated baseband waveform conveying the UTRA physical channels, returned as a complex vector array.

More About

- “Downlink Reference Channel and Waveform Generation Parameter Structures”

References

- [1] 3GPP TS 25.101. “User Equipment (UE) Radio Transmission and Reception (FDD).” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network*. URL: <http://www.3gpp.org>.

[2] 3GPP TS 25.141. “Base Station (BS) conformance testing (FDD).” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network*. URL: <http://www.3gpp.org>.

See Also

umtsDownlinkReferenceChannels | umtsUplinkReferenceChannels |
umtsUplinkWaveformGenerator

Introduced in R2015a

umtsUplinkReferenceChannels

UMTS uplink measurement channel definition

Syntax

```
config = umtsUplinkReferenceChannels(rc)
```

Description

`config = umtsUplinkReferenceChannels(rc)` returns a structure containing the configuration parameters for the UMTS uplink reference channel defined by `rc`. The output structure, `config`, contains the configuration parameters required by `umtsUplinkWaveformGenerator` to generate an uplink reference channel waveform. `umtsUplinkReferenceChannels` uses, `rc`, to initialize a configuration data structure that is compliant with one of the reference channels defined in the following 3GPP standards:

- Uplink RMC configurations are defined in TS 25.101, Annex A.2 [1].
- Uplink E-DPDCH FRC configurations are as defined in TS 25.141, Annex 10 [2].

Examples

UMTS Uplink Reference Channel Initialization

Initialize a 'RMC12.2kbps' reference channel.

Generate the configuration structure, `config`.

```
rc = 'RMC12.2kbps';  
config = umtsUplinkReferenceChannels(rc);
```

The output from `umtsUplinkReferenceChannels` provides the input required to generate the desired UMTS waveform corresponding to these settings.

Examine the `DPDCH` field in `config`. This field uses a nested structure to define this physical channel for the 'RMC12.2kbps' reference channel.

```
config
```

```
config.DPDCH
config.DPDCH.CCTrCH
config.DPDCH.CCTrCH.TrCH(1)
config.DPDCH.CCTrCH.TrCH(1).DynamicPart
config.DPDCH.CCTrCH.TrCH(2)
config.DPDCH.CCTrCH.TrCH(2).DynamicPart
```

```
config =
```

```
    TotFrames: 1
    ScramblingCode: 1
    FilterType: 'RRC'
    OversamplingRatio: 4
    NormalizedPower: 'Off'
        DPDCH: [1x1 struct]
        DPCCH: [1x1 struct]
        HSUPA: [1x1 struct]
        HSDPCCH: [1x1 struct]
```

```
ans =
```

```
    Enable: 'On'
    SlotFormat: 2
    CodeCombination: 64
    Power: 0
    DataSource: 'CCTrCH'
    CCTrCH: [1x1 struct]
```

```
ans =
```

```
    Name: 'DCH'
    TrCH: [1x2 struct]
```

```
ans =
```

```
    Name: 'DTCH'
    CRC: '16'
    CodingType: 'conv3'
    RMA: 256
    TTI: 20
    DataSource: 'PN9-ITU'
```

```

ActiveDynamicPart: 1
    DynamicPart: [1x1 struct]

ans =

    BlockSize: 244
    BlockSetSize: 244

ans =

    Name: 'DCCH'
    CRC: '12'
    CodingType: 'conv3'
    RMA: 256
    TTI: 40
    DataSource: 'PN9-ITU'
    ActiveDynamicPart: 1
    DynamicPart: [1x1 struct]

ans =

    BlockSize: 100
    BlockSetSize: 100

```

Input Arguments

rc — Reference channel configuration

char

Reference channel, specified as a string that identifies which RMC or E-DPDCH FRC to configure.

Parameter Field	Required or Optional	Values	Description
rc	Required	Reference measurement channels:	Reference channel, specified as a string that identifies the W-CDMA

Parameter Field	Required or Optional	Values	Description
		'RMC12.2kbps', 'RMC64kbps', 'RMC144kbps', 'RMC384kbps'	uplink RMC configuration set-up as defined in TS 25.101, Annex A.2 [1].
		E-DPDCH Fixed Reference Channels: 'FRC1', 'FRC2', 'FRC3', 'FRC4', 'FRC5', 'FRC6', 'FRC7', 'FRC8'	Reference channel, specified as a string that identifies the E-DPDCH FRC configuration as defined in TS 25.141, Annex A.10 [2].

Note: Additional standards-based reference channels can be configured by executing `lteUplinkReferenceChannels` and then adjusting parameters to match configurations defined in TS 25.141 [2]. For example:

- To generate the HS-DPCCH RMC, use 'RMC12.2kbps' and set `HSDPCCH.Enable = 'On'`.
- To generate the 12.2 kbps RMC defined in TS 25.141 [2], use 'RMC12.2kbps'. Using this value the function initializes `config` to generate the TS 25.101 [1] 12.2 kbps RMC). After `config` is generated, adjust the DPDCH and DPCCH parameters to align with the settings in TS 25.141 [2].

Output Arguments

config — Definition of the channels included for the waveform generator structure

Top-Level Parameters and Substructures

Definition of the channels included for the waveform generator, returned as a structure.

Parameter Field	Required or Optional	Values	Description
TotFrames	Required	Positive scalar integer	Total number of frames to be generated
ScramblingCode	Required	Scalar integer $0 - (2^{24} - 1)$	Scrambling code index used by UE
FilterType	Required	'RRC', 'Off'	String to enable the RRC filter
OversamplingRatio	Required	Positive scalar integer	Oversampling ratio
NormalizedPower	Required	Float (-inf to +inf) or string 'Off' to disable power normalization	Overall waveform power in dBW relative to 1 ohm
DPDCH	Optional	Not present or single structure	See DPDCH Substructure.
DPCCH	Optional	Not present or single structure	See DPCCH Substructure.
HSUPA	Optional	Not present or single structure	See HSUPA Substructure.
HSDPCCH	Optional	Not present or single structure	See HSDPCCH Substructure.

DPDCH Substructure

Include the DPDCH substructure in the `config` structure to add the dedicated physical data channel to the output structure. The DPDCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SlotFormat	Required	Scalar integer (0, 1, 2, 3, 4, 5, 6)	DPDCH slot format number

Parameter Field	Required or Optional	Values	Description
CodeCombination	Required	Scalar integer or vector (256, 128, 64, 32, 16, 8, 4)	Scalar or vector of valid spreading factors
Power	Required	Float (-inf to +inf)	Channel power in dB
DataSource	Required	<p>Scalar, vector, string, or cell</p> <p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p> <p>Using Transport channel: 'CCTrCH'</p>	DPDCH data source. The data source can be the transport channel (which enables transport channel coding), one of the PN sequences, or a binary scalar or vector.
CCTrCH	Optional	Structure	See CCTrCH Substructure.

CCTrCH Substructure

The CCTrCH substructure is associated with the DPDCH physical channel definition substructures. The CCTrCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Name	Optional	String (default depends on the physical channel specified)	Name assigned to the CCTrCH. Functions do not use the Name is field. Therefore, you can redefine the content with no consequence.
TrCH	Required	Structure or structure array	An array of structures that defines multiple transport channels in the CCTrCH
TrCH.Name	Required	String (default depends on the physical channel specified)	Name assigned to the TrCH. Functions do not use the Name is field. Therefore, you can redefine the content with no consequence.
TrCH.CRC	Required	String '0', '8', '12', '16', '24'	String specifying the CRC polynomial
TrCH.TTI	Required	Scalar integer (10, 20, 40, 80)	Transmission Time Interval (TTI) in ms
TrCH.CodingType	Required	String 'turbo', 'conv2', 'conv3'	String specifying channel coding type and rate
TrCH.RMA	Required	Scalar integer (1 ... 256)	Rate matching attribute value

Parameter Field	Required or Optional	Values	Description
TrCH.DataSource	Required	<p>Scalar, vector, string, or cell</p> <p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p>	<p>Transport channel data source. The data source can be defined either as one of the standard PN sequences, or as a binary scalar or vector.</p>
<p>Examples for setting the DataSource field include:</p> <ul style="list-style-type: none"> • ...CCTrCH.TrCh(1).DataSource = [1 0 0 1], generates a physical channel data block by looping the vector [1 0 0 1]. • ...CCTrCH.TrCh(1).DataSource = 'PN9', generates a physical channel data block with random seed = 511. • ...CCTrCH.TrCh(1).DataSource = {'PN9',5}, generates a physical channel data block with seed = 5. • ...CCTrCH.TrCh(1).DataSource = 'CCTrCH', causes the physical channel to carry the transport channel that is defined by the CCTrCH substructure. 			
TrCH.ActiveDyna	Required	<p>Scalar integer in the range 1 through length(DynamicPart)</p>	<p>Scalar or vector specifying the active dynamic part</p> <p>The ActiveDynamicPart field indicates the DynamicPart array index for the active transport format (Blockset, BlocksetSize) from available combinations defined in DynamicPart. The selected transport format is used for data transmission in the current TTI.</p>

Parameter Field	Required or Optional	Values	Description
TrCH.DynamicPar	Required	Structure or structure array	Structure specifying size of each transport block
		The DynamicPart fields, BlockSize and BlockSetSize , define the size of each transport block and the total bits per transport block set. As a pair (BlockSize , BlockSetSize) describe a transport format set. DynamicPart defines one or multiple transport format sets.	
TrCH.DynamicPar	Required	Positive scalar integer	Transport block length
TrCH.DynamicPar	Required	Scalar integer, multiple of BlockSize	Total number of bits in the transport block set. Implementation does not support multiple transport blocks, so by definition BlockSet is equal to BlockSetSize .

DPCCH Substructure

Include the DPCCH substructure in the `config` structure to add the dedicated physical control channel to the output structure. The DPCCH substructure contains the following fields.

Parameter Field	Required or Optional	Values / Ranges / Notes	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SlotFormat	Required	Scalar integer (0, 1, 2, 3, 4, 5)	DPCCH slot format number
Power	Required	Float (-inf to +inf)	DPCCH power in dB
TPCData	Required	0 or 1	Scalar or vector of transmit power control data
TFCI	Required	Scalar integer (0 ... 1023)	Transport format combination indicator
FBIData	Required	0 or 1	Scalar or vector of feedback information data

HSUPA Substructure

Include the HSUPA substructure in the `config` structure to add the high speed uplink packet access information and channels to the output structure. The HSUPA substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
CodeCombination	Required	Scalar integer (2 ... 256)	Valid one-code combination: 256, 128, 64, 32, 16, 8, 4 for BPSK modulation Valid two-code combinations: [4 4], [2 2] for BPSK modulation Valid four—code combinations: [2 2 4 4] for BPSK and 4PAM modulation
EDPDCHPower	Required	Float (-inf to +inf)	E-DPDCH channel power in dB
EDPCCHPower	Required	Float (-inf to +inf)	E-DPCCH channel power in dB
RSNSequence	Required	Scalar integer (0, 1, 2, 3)	Vector of retransmission sequence numbers. The length of this vector determines the number of retransmissions.
ETFCI	Required	Scalar integer (0 ... 127)	E-TFCI value
HappyBit	Required	0 or 1	Happy bit
DataSource	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.	E-DPDCH data source. The data source can be defined as the transport channel (which enables transport channel coding), as one of the PN sequences, or as a binary scalar or vector.

Parameter Field	Required or Optional	Values	Description
		<p>If no seed is specified, the shift register is initialized with all ones.</p> <p>Using Transport channel:</p> <p>'EDCH'</p>	
EDCH	Required		Single structure
EDCH.BlockSize	Required	Nonnegative scalar integer	Transport block size
EDCH.TTI	Required	Scalar integer (2 or 10)	Transmission Time Interval (TTI) in ms
EDCH.Modulation	Required	'BPSK', '4PAM'	String specifying the modulation scheme
EDCH.DataSource	Required	<p>Scalar, vector, string, or cell</p> <p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p>	E-DCH transport data source. The data source can be defined as one of the PN sequences or as a binary scalar or vector.

HSDPCCH Substructure

Include HSDPCCH substructure in `config` structure to add the high speed dedicated physical control channel to the output structure. The HSDPCCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	HS-DPCCH channel power in dB
CQI	Required	Scalar integer or vector (0 ... 30)	CQI values
HARQACK	Required	Scalar integer or vector (0, 1, 2, 3)	HARQACK messages
UEMIMO	Required	0 or 1	Flag to indicate MIMO mode

More About

- “Uplink Reference Channel and Waveform Generation Parameter Structures”

References

- [1] 3GPP TS 25.101. “User Equipment (UE) Radio Transmission and Reception (FDD).” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 25.141. “Base Station (BS) conformance testing (FDD).” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network*. URL: <http://www.3gpp.org>.

See Also

`umtsDownlinkReferenceChannels` | `umtsDownlinkWaveformGenerator` | `umtsUplinkWaveformGenerator`

Introduced in R2015a

umtsUplinkWaveformGenerator

UMTS uplink waveform generation

Syntax

```
waveform = umtsUplinkWaveformGenerator(config)
```

Description

`waveform = umtsUplinkWaveformGenerator(config)` returns the UMTS uplink waveform defined by the configuration structure, `config`. This function supports W-CDMA, HSUPA and HSPA+ waveform generation. The top-level parameters and lower-level substructures of `config` characterize the waveform and channel properties of the `umtsUplinkWaveformGenerator` function output. The `config` input is generated using the `umtsUplinkReferenceChannels` function. `config` includes top-level parameters and substructures to describe the different channels to include in the waveform. The top-level parameters of `config` are: `TotFrames`, `ScramblingCode`, `FilterType`, `OversamplingRatio`, and `NormalizedPower`. To enable the specific channels you can add associated substructures: `DPDCH`, `DPCCH`, `HSUPA`, and `HSDPCCH`.

Examples

UMTS Uplink Waveform Generation

Initialize an 'RMC384kbps' reference channel and generate the UMTS waveform that corresponds to these settings.

Generate the configuration structure, `config`.

 
```
rc = 'RMC384kbps';  
config = umtsUplinkReferenceChannels(rc);
```

Generate the desired waveform using `config` as the input to the waveform generation function. Create a spectrum analyzer object sampling at `chiprate x OversamplingRatio`. Use the `step` method to plot the waveform.

```
waveform = umtsUplinkWaveformGenerator(config);
```



```
h = dsp.SpectrumAnalyzer('SampleRate', 3.84e6*config.OversamplingRatio);  
step(h,waveform);
```

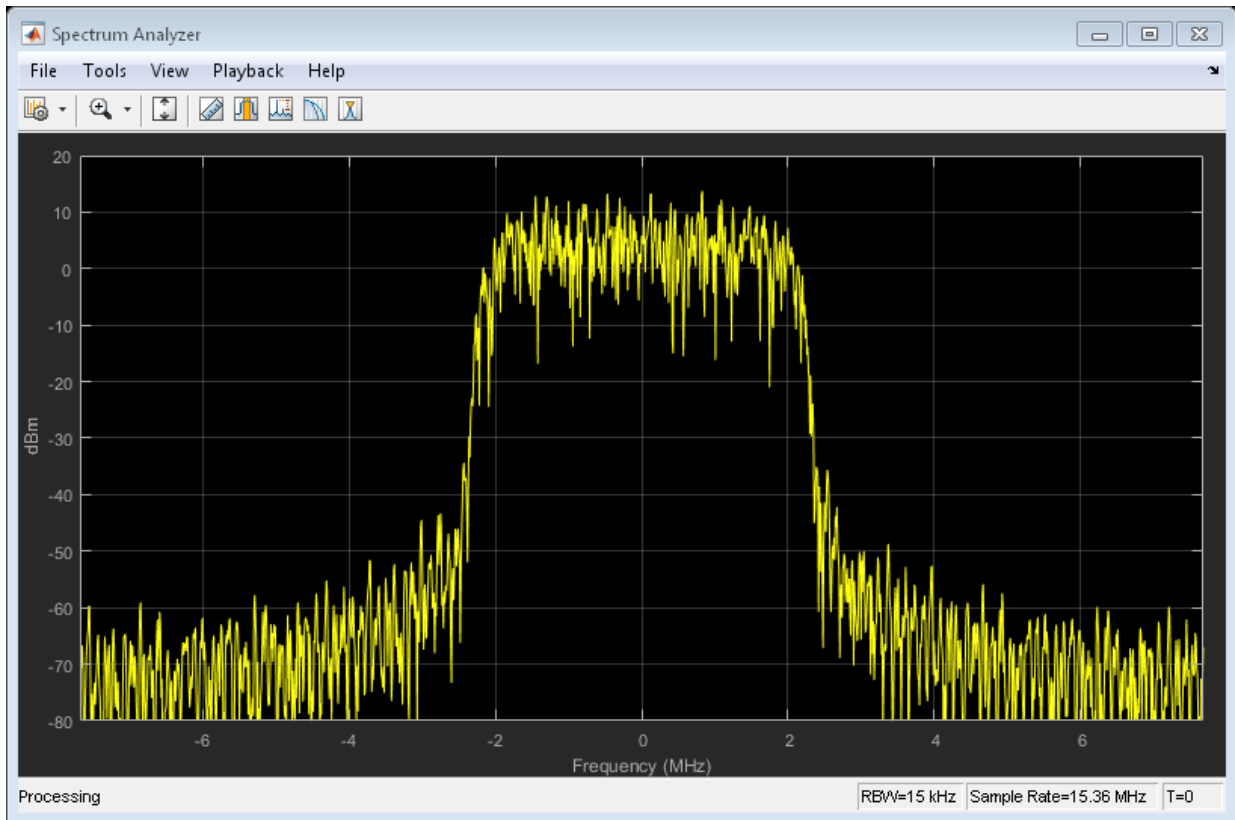

Input Arguments

config — Definition of the channels included for the waveform generator
structure

Top-Level parameters and substructures

Definition of the channels included by the waveform generator, specified as a structure.

Parameter Field	Required or Optional	Values	Description
TotFrames	Required	Positive scalar integer	Total number of frames to be generated
ScramblingCode	Required	Scalar integer $0 - (2^{24} - 1)$	Scrambling code index used by UE
FilterType	Required	'RRC' (default), 'Off'	String to enable the RRC Filter
OversamplingRatio	Required	Positive scalar integer	Oversampling ratio
NormalizedPower	Required	Float (-inf to +inf) or string 'Off' to disable power normalization	Overall waveform power in dBW relative to 1 ohm
DPDCH	Optional	Not present or structure	See DPDCH Substructure.
DPCCH	Optional	Not present or structure	See DPCCH Substructure.
HSUPA	Optional	Not present or structure	See HSUPA Substructure.
HSDPCCH	Optional	Not present or structure	See HSDPCCH Substructure.

DPDCH Substructure

Include the DPDCH substructure in the `config` structure to add the dedicated physical data channel to the output structure. The DPDCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SlotFormat	Required	Scalar integer (0, 1, 2, 3, 4, 5, 6)	DPDCH slot format number

Parameter Field	Required or Optional	Values	Description
CodeCombination	Required	Scalar integer or vector (256, 128, 64, 32, 16, 8, 4)	Scalar or vector of valid spreading factors
Power	Required	Float (-inf to +inf)	Channel power in dB
DataSource	Required	<p>Scalar, vector, string, or cell</p> <p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p> <p>Using Transport channel: 'CCTrCH'</p>	DPDCH data source. The data source can be the transport channel (which enables transport channel coding), one of the PN sequences, or a binary scalar or vector.
CCTrCH	Optional	Structure	See CCTrCH Substructure.

Note: See CCTrCH substructure

CCTrCH Substructure

The CCTrCH substructure is associated with the DPDCH physical channel definition substructures. The CCTrCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Name	Optional	String (default depends on the physical channel specified)	Name assigned to the CCTrCH. Functions do not use the Name is field. Therefore, you can redefine the content with no consequence.
TrCH	Required	Structure or structure array	An array of structures that defines multiple transport channels in the CCTrCH
TrCH.Name	Required	String (default depends on the physical channel specified)	Name assigned to the TrCH. Functions do not use the Name is field. Therefore, you can redefine the content with no consequence.
TrCH.CRC	Required	String '0', '8', '12', '16', '24'	String specifying the CRC polynomial
TrCH.TTI	Required	Scalar integer (10, 20, 40, 80)	Transmission Time Interval (TTI) in ms
TrCH.CodingType	Required	String 'turbo', 'conv2', 'conv3'	String specifying channel coding type and rate
TrCH.RMA	Required	Scalar integer (1 ... 256)	Rate matching attribute value

Parameter Field	Required or Optional	Values	Description
TrCH.DataSource	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'. If no seed is specified, the shift register is initialized with all ones.	Transport channel data source. The data source can be defined either as one of the standard PN sequences, or as a binary scalar or vector.
		Examples for setting the DataSource field include: <ul style="list-style-type: none"> • ...CCTrCH.TrCh(1).DataSource = [1 0 0 1], generates a physical channel data block by looping the vector [1 0 0 1]. • ...CCTrCH.TrCh(1).DataSource = 'PN9', generates a physical channel data block with random seed = 511. • ...CCTrCH.TrCh(1).DataSource = {'PN9',5}, generates a physical channel data block with seed = 5. • ...CCTrCH.TrCh(1).DataSource = 'CCTrCH', causes the physical channel to carry the transport channel that is defined by the CCTrCH substructure. 	
TrCH.ActiveDyna	Required	Scalar integer in the range 1 through length(DynamicPart)	Scalar or vector specifying the active dynamic part
		The ActiveDynamicPart field indicates the DynamicPart array index for the active transport format (Blockset, BlocksetSize) from available combinations defined in DynamicPart. The selected transport format is used for data transmission in the current TTI.	

Parameter Field	Required or Optional	Values	Description
TrCH.DynamicPar	Required	Structure or structure array	Structure specifying size of each transport block
		The DynamicPart fields, BlockSize and BlockSetSize , define the size of each transport block and the total bits per transport block set. As a pair (BlockSize , BlockSetSize) describe a transport format set. DynamicPart defines one or multiple transport format sets.	
TrCH.DynamicPar	Required	Positive scalar integer	Transport block length
TrCH.DynamicPar	Required	Scalar integer, multiple of BlockSize	Total number of bits in the transport block set. Implementation does not support multiple transport blocks, so by definition BlockSet is equal to BlockSetSize .

DPCCH Substructure

Include the DPCCH substructure in the `config` structure to add the dedicated physical control channel to the output structure. The DPCCH substructure contains the following fields.

Parameter Field	Required or Optional	Values / Ranges / Notes	Description
Enable	Required	'On', 'Off'	String to enable or disable the channel
SlotFormat	Required	Scalar integer (0, 1, 2, 3, 4, 5)	DPCCH slot format number
Power	Required	Float (-inf to +inf)	DPCCH power in dB
TPCData	Required	0 or 1	Scalar or vector of transmit power control data
TFCI	Required	Scalar integer (0 ... 1023)	Transport format combination indicator
FBIData	Required	0 or 1	Scalar or vector of feedback information data

HSUPA Substructure

Include the HSUPA substructure in the `config` structure to add the high speed uplink packet access information and channels to the output structure. The HSUPA substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On ', 'Off '	String to enable or disable the channel
CodeCombination	Required	Scalar integer (2 ... 256)	Valid one-code combination: 256, 128, 64, 32, 16, 8, 4 for BPSK modulation Valid two-code combinations: [4 4], [2 2] for BPSK modulation Valid four—code combinations: [2 2 4 4] for BPSK and 4PAM modulation
EDPDCHPower	Required	Float (-inf to +inf)	E-DPDCH channel power in dB
EDPCCHPower	Required	Float (-inf to +inf)	E-DPCCH channel power in dB
RSNSequence	Required	Scalar integer (0, 1, 2 ,3)	Vector of retransmission sequence numbers. The length of this vector determines the number of retransmissions.
ETFCI	Required	Scalar integer (0 ... 127)	E-TFCI value
HappyBit	Required	0 or 1	Happy bit
DataSource	Required	Scalar, vector, string, or cell Using standard PN sequences: {PN, seed} PN options include: 'PN9-ITU ', 'PN9 ', 'PN11 ', 'PN15 ', 'PN23 '.	E-DPDCH data source. The data source can be defined as the transport channel (which enables transport channel coding), as one of the PN sequences, or as a binary scalar or vector.

Parameter Field	Required or Optional	Values	Description
		<p>If no seed is specified, the shift register is initialized with all ones.</p> <p>Using Transport channel:</p> <p>'EDCH'</p>	
EDCH	Required		Single structure
EDCH.BlockSize	Required	Nonnegative scalar integer	Transport block size
EDCH.TTI	Required	Scalar integer (2 or 10)	Transmission Time Interval (TTI) in ms
EDCH.Modulation	Required	'BPSK', '4PAM'	String specifying the modulation scheme
EDCH.DataSource	Required	<p>Scalar, vector, string, or cell</p> <p>Using standard PN sequences: {PN, seed}</p> <p>PN options include: 'PN9-ITU', 'PN9', 'PN11', 'PN15', 'PN23'.</p> <p>If no seed is specified, the shift register is initialized with all ones.</p>	E-DCH transport data source. The data source can be defined as one of the PN sequences or as a binary scalar or vector.

HSDPCCH Substructure

Include HSDPCCH substructure in `config` structure to add the high speed dedicated physical control channel to the output structure. The HSDPCCH substructure contains the following fields.

Parameter Field	Required or Optional	Values	Description
Enable	Required	'On ', 'Off '	String to enable or disable the channel
Power	Required	Float (-inf to +inf)	HS-DPCCH channel power in dB
CQI	Required	Scalar integer or vector (0 ... 30)	CQI values
HARQACK	Required	Scalar integer or vector (0, 1, 2, 3)	HARQACK messages
UEMIMO	Required	0 or 1	Flag to indicate MIMO mode

Output Arguments

waveform — Modulated baseband waveform conveying the UTRA physical channels
complex vector array

Modulated baseband waveform conveying the UTRA physical channels, returned as a complex vector array.

More About

- “Uplink Reference Channel and Waveform Generation Parameter Structures”

References

- [1] 3GPP TS 25.101. “User Equipment (UE) Radio Transmission and Reception (FDD).” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network*. URL: <http://www.3gpp.org>.

[2] 3GPP TS 25.141. “Base Station (BS) conformance testing (FDD).” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network*. URL: <http://www.3gpp.org>.

See Also

`umtsDownlinkReferenceChannels` | `umtsDownlinkWaveformGenerator` | `umtsUplinkReferenceChannels`

Introduced in R2015a

rmlteobsolete

Remove obsolete LTE Toolbox interface from search path

Syntax

```
rmlteobsolete
```

Description

`rmlteobsolete` removes the `matlabroot\toolbox\lte\lteobsolete` directory from the MATLAB path, which disables the obsolete LTE Toolbox interface.

Note:

- This interface is provided for backwards compatibility. It will now result in runtime errors indicating which new functions to use.
 - You can undo your changes by calling the `rmlteobsolete` function.
-

Examples

 
Remove Obsolete LTE Toolbox Interface from Search Path

Remove the directory associated with the obsolete LTE Toolbox interface from the MATLAB path.

View the current MATLAB path by calling the `pathtool` command.

```
pathtool
```

The Set Path dialog box appears. Scroll down through the listings to find the LTE System Toolbox product directories, as shown in the following figure.

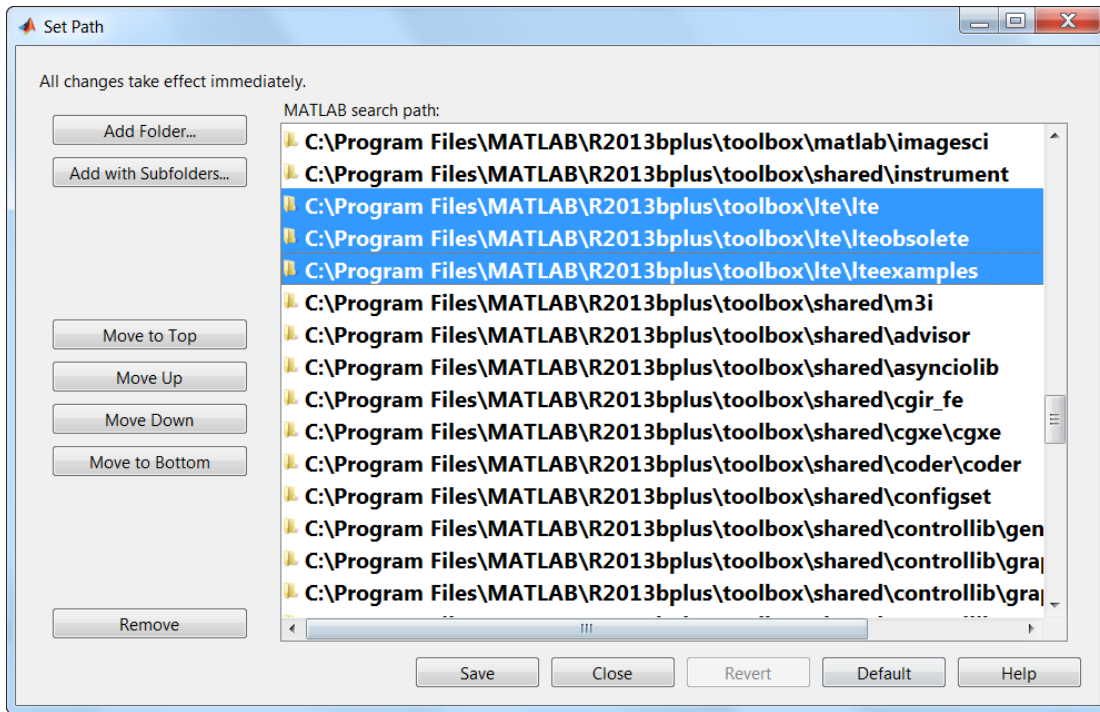

If you do not see the listing `matlabroot\toolbox\lte\lteobsolete`, you do not need to run the `rmlteobsolete` function. Exit this example. Otherwise, click **Close** to close the Set Path dialog box.

 
Remove the obsolete LTE Toolbox interface from the path.

```
rmlteobsolete
```

To confirm the changes, call the `pathtool` command again.

```
pathtool
```

The Set Path dialog box appears. Scroll down through the listings to find the LTE System Toolbox product directories, as shown in the following figure.

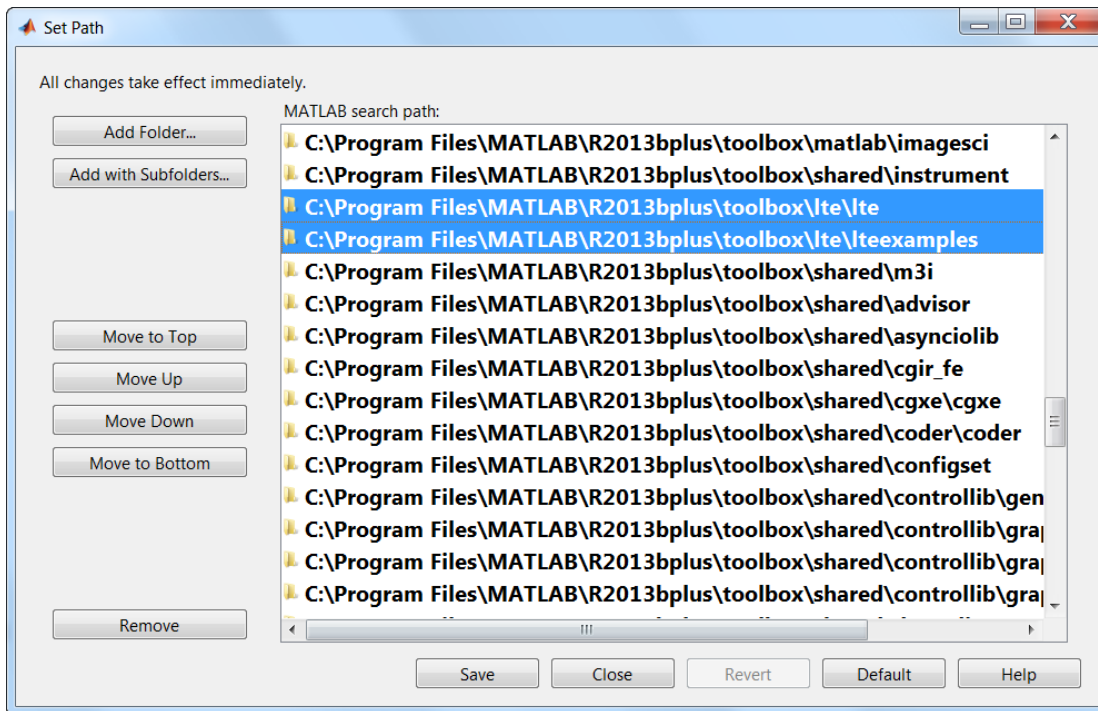

The absence of the listing `matlabroot\toolbox\lte\lteobsolete` shows that you have successfully removed the obsolete LTE Toolbox interface from the search path. Click **Close** again to close the Set Path dialog box.

See Also

`addlteobsolete`

Introduced in R2014a

Other Reference Pages

Parameter Field Names

Find names of fields to populate parameter structures

List of Structure Field Names

An alphabetical list of all field names used within the LTE System Toolbox product functions, their descriptions, their valid values, default values, and in which functions they are used is shown in the following table.

Field name	Used by Functions	Values	Description
Alpha	lteSRS		Reference signal cyclic shift (<i>alpha</i>)
	lteSRS, ltePUCCH1, ltePUCCH1DRS, ltePUCCH2, ltePUCCH2DRS		A row vector, containing the reference signal cyclic shift (<i>alpha</i>) for each OFDM symbol
	ltePUSCHDRS		A two-column row vector, containing the reference signal cyclic shift (<i>alpha</i>) for each slot
BaseFreq			Base (cell-specific) frequency domain starting position (<i>k₀ bar</i>), from which this UE-specific SRS is offset as a function of the UE-specific SRS Bandwidth value, <i>B_{SRS}</i> . UE-specific SRS configuration cannot result in a frequency domain starting position (<i>k₀</i>) lower than this, given the cell-specific SRS bandwidth configuration value, <i>C_{SRS}</i> .
BaseOffset			Base timing offset, in microseconds, for detection test in TS 36.104 (duration of <i>N_{CS}/2</i>)

Field name	Used by Functions	Values	Description
BetaACK		numeric scalar, 2.0 (default)	Modulation and coding scheme (MCS) offset for HARQ-ACK bits. This field was previously named BetaHI ; if this field is absent but BetaHI is present, it is used as before.
BetaCQI		numeric scalar, 2.0 (default)	Modulation and coding scheme (MCS) offset for CQI and PMI bits
BetaHI			Modulation and Coding Scheme (MCS) offset for HARQ-ACK bits. Note: The field name BetaHI is deprecated and should be replaced with BetaACK .
BetaRI		numeric scalar, 2.0 (default)	Modulation and coding scheme (MCS) offset for RI bits
BLKCRC			Type-24A transport block CRC decoding error
Bout			Total number of bits in all segments
BW	lteSRS, lteSRSIndices, lteRMCUL, lteRMCULTool	0...3	UE-specific SRS Bandwidth value (B_{SRS})
	lteTestModelTool, lteTestModel		Channel bandwidth type string when generating test model waveforms
BWConfig		0...7	Cell-specific SRS Bandwidth Configuration value (C_{SRS})
C			Total number of code blocks
CarrierFreq			Carrier frequency, in hertz

Field name	Used by Functions	Values	Description
CBSBuffers			Cell array of vectors representing the LLR soft buffer states for the set of code blocks associated with a single transport block. The buffers are positioned at the input to the turbo decoder, after explicit rate recovery.
CBSCRC			Array of type-24B code block set CRC decoding results
CellOffset		0...9	Cell-specific sounding reference signal (SRS) offsets
CellPeriod		1, 2, 5, 10	Cell-specific sounding reference signal (SRS) periodicity, in milliseconds
CellRefP	lteBCH	1, 2, 4	Number of cell-specific reference signal (CRS) antenna ports
CellRS		'Off', 'OmitEdgeRBs', 'On'	Cell-specific reference signal (CRS) correlation mode
CellRSPower			Cell-specific reference symbol power adjustment, in dB
CFI		1, 2, or 3. scalar or if the CFI varies per subframe, a vector of length 10 (corresponding to a frame).	Control format indicator (CFI) value. In TDD mode, CFI varies per subframe for the RMCs ('R.0', 'R.5', 'R.6', 'R.6-27RB', 'R.12-9RB')
ChannelFilterDelay			The implementation delay of the internal channel filtering
Cm			Number of code blocks of size K_m ($C-$)

Field name	Used by Functions	Values	Description
CodebookIdx		0...15	Codebook index used during precoding
CodedTrBlkSizes			Coded transport block sizes for one or two codewords. This parameter field is only for informational purposes.
ConfigIdx	lteSRS, lteSRSIndices, lteRMCUL, lteRMCULTool	0...636	Configuration index for UE-specific periodicity and subframe offset
	ltePRACH, ltePRACHInfo	0...63	PRACH Configuration Index (<i>prach-ConfigurationIndex</i>)
Cp			Number of code blocks of size K_p ($C+$)
CSI		'Off', 'On'	Flag to control whether output bits get weighted with channel state information (CSI) calculated during the equalization stage. If 'On', soft bits are weighted by CSI.
CSIRefP		1, 2, 4, 8	Array of number of CSI-RS antenna ports
CSIRSConfig			Array CSI-RS configuration indices. See TS 36.211, Table 6.10.5.2-1.
CSIRSPeriod		'On', 'Off', Icsi-rs, [Tcsi-rs Dcsi-rs]	CSI-RS subframe configurations for one or more CSI-RS resources. Multiple CSI-RS resources can be configured from a single common subframe configuration or from a cell array of configurations for each resource.

Field name	Used by Functions	Values	Description
CyclicOffset			For High Speed mode, cyclic shift or shifts corresponding to a Doppler Shift of $1/T_{SEQ}$ (d_u)
CyclicPrefix	Downlink functions (lteBCH, lteBCHDecode))	'Normal ' (default), 'Extended '	Cyclic prefix length
	Uplink functions	'Normal ' (default), 'Extended '	Cyclic prefix length in the downlink
CyclicPrefixUL	Uplink functions	'Normal ' (default), 'Extended '	Current cyclic prefix length
CyclicShift	ltePUSCHDRS, lteRMCUL, lteRMCULTool, lteULFrameOffset	0...7	Number of cyclic shifts used for PUSCH DRS (yields $n1_{DMRS}$)
	ltePRACH, ltePRACHInfo		Cyclic shift or shifts of Zadoff-Chu sequence (C_v)
	lteSRS, lteSRSIndices, lteRMCUL, lteRMCULTool	0...7	UE-specific cyclic shift (n_{SRS}^{cs})
CyclicShiftIdx		0...15	Cyclic shift configuration index (<i>zeroCorrelationZoneConfig</i> , yields N_{CS})
CyclicShifts		0...7	Number of cyclic shifts used for Format 1 in resource blocks (RBs) with a mixture of Format 1 and Format 2 PUCCH (N_{1cs})
DCIFormat			Downlink control information (DCI) format type string

Field name	Used by Functions	Values	Description
DelayProfile		'EPA', 'EVA', 'ETU'	Delay profile model.
DeltaOffset		0, 1, 2	<i>delta_offset</i> Warning: The use of this parameter field is deprecated. It only applies to 3GPP releases prior to v8.5.0. This parameter will be removed in a future release.
DeltaShift		1, 2, 3	(<i>delta_shift</i>)
Dmin			eNodeB to railway track distance, in meters
DopplerFreq			Maximum <i>Doppler</i> frequency, in Hertz.
Ds			DS/2 is initial distance between train and eNodeB, in meters
DuplexMode		'FDD' (default), 'TDD'	Duplexing mode, specified as: <ul style="list-style-type: none"> • 'FDD' for Frequency Division Duplex or • 'TDD' for Time Division Duplex
DynCyclicShift		0...7	Cyclic shift for DMRS (yields <i>n2_DMRS</i>)
EV			Normalized error vector
F			Number of filler bits in first block

Field name	Used by Functions	Values	Description
Fields			A 1-by-4 vector of PRACH field lengths, [<i>OFFSET</i> <i>T_CP</i> <i>T_SEQ</i> <i>GUARD</i>], where <i>T_CP</i> and <i>T_SEQ</i> are the length of cyclic prefix and PRACH sequence in fundamental time periods (<i>T_s</i>), <i>OFFSET</i> is the number of fundamental time periods from the start of configured subframe to the start of the cyclic prefix (non-zero only for TDD special subframes), and <i>GUARD</i> is the number of fundamental time periods from the end of the PRACH sequence to the end of the number of subframes spanned by the PRACH
Format		0...4	Preamble format
FreqIdx	ltePRACH, ltePRACHDetect, ltePRACHInfo	0...5	Frequency resource index (<i>f_RA</i>). Only required for 'TDD' duplexing mode.
	lteSRSIndices	0... <i>B_SRS</i>	A vector specifying the frequency position index (<i>n_b</i>) for each <i>b</i>
FreqOffset		0...94	PRACH frequency offset (<i>n_PRBoffset</i>). Only required for Preamble format 0–3.
FreqPosition		0...23	Frequency domain position (<i>n_RRC</i>)
FreqStart			Frequency domain starting position (<i>k_0</i>), the 0-based subcarrier index of the lowest SRS subcarrier

Field name	Used by Functions	Values	Description
FreqWindow			Size of window in resource elements used to average over frequency during channel estimation
G	ltePDSCHIndices		A one- or two-element vector, specifying the number of coded and rate matched DL-SCH data bits for each codeword
	ltePUSCHIndices, lteULSCH, lteULSCHInfo		A one- or two-element vector, specifying the number of coded and rate matched UL-SCH data bits for each codeword
Gd	ltePDSCHIndices		Number of coded and rate matched DL-SCH data symbols, equal to the number of rows in the PDSCH indices
	ltePUSCHIndices		Number of coded and rate matched UL-SCH data symbols, equal to the number of rows in the PUSCH indices
	lteULSCH, lteULSCHInfo		Number of coded and rate matched UL-SCH data symbols
HighSpeed		0...1	High Speed flag (<i>highSpeedFlag</i>). A value of 1 signifies a restricted set. A value of 0 signifies an unrestricted set.
Hopping	ltePUCCH1, ltePUCCH2, ltePUCCH3	'Off', 'Group'	Frequency hopping method
	ltePUSCH	'Off', 'Group', 'Sequence'	Frequency hopping method

Field name	Used by Functions	Values	Description
HoppingBW		0...3	SRS Frequency hopping configuration index (b_{hop})
HoppingOffset			A vector specifying the offset term due to frequency hopping (F_b), used in calculation of n_b
InitCyclicPrefixUL		'Normal', 'Extended', CyclicPrefixUL (default)	Cyclic prefix length of initial transmit subframe. This is the length used during the first transmission of this transport block. If this field is absent, its value is assumed to be the same as the value for the associated current subframe field, CyclicPrefixUL.
InitPRBSet		1- or 2-column integer matrix, PRBSet (default)	PRB indices used in the initial transmission PUSCH allocation. If this field is absent, its value is assumed to be the same as the value for the associated current subframe field, PRBSet.
InitShortened		0, 1, Shortened (default)	Initial transmit subframe shortened flag. If 1, the initial transmit subframe was shortened for possible SRS. If this field is absent, its value is assumed to be the same as the value for the associated current subframe field, Shortened.
InitTime	lteFadingChannel		Fading process time offset, in seconds
	lteHSTChannel		<i>Doppler</i> shift timing offset, in seconds

Field name	Used by Functions	Values	Description														
	lteMovingChannel		Fading process and timing adjustment offset, in seconds														
InterpType	lteDLChannelEstima lteULChannelEstima lteULChannelEstima lteULChannelEstima lteULChannelEstima	'nearest', 'linear', 'natural', 'cubic', 'v4'	Type of 2-D interpolation used during interpolation. For details, see <code>griddata</code> . Supported choices are shown in the following table. <table border="1" data-bbox="951 564 1334 1003"> <thead> <tr> <th>String</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>'nearest'</td> <td>Nearest neighbor interpolation</td> </tr> <tr> <td>'linear'</td> <td>Linear interpolation</td> </tr> <tr> <td>'natural'</td> <td>Natural neighbor interpolation</td> </tr> <tr> <td>'cubic'</td> <td>Cubic interpolation</td> </tr> <tr> <td>'v4'</td> <td>MATLAB 4 <code>griddata</code> method</td> </tr> <tr> <td>'None'</td> <td>Disables interpolation</td> </tr> </tbody> </table>	String	Description	'nearest'	Nearest neighbor interpolation	'linear'	Linear interpolation	'natural'	Natural neighbor interpolation	'cubic'	Cubic interpolation	'v4'	MATLAB 4 <code>griddata</code> method	'None'	Disables interpolation
String	Description																
'nearest'	Nearest neighbor interpolation																
'linear'	Linear interpolation																
'natural'	Natural neighbor interpolation																
'cubic'	Cubic interpolation																
'v4'	MATLAB 4 <code>griddata</code> method																
'None'	Disables interpolation																
InterpWindow		'Causal', 'Non-causal', 'Centred'	Interpolation window type used during channel estimation. Options 'Centred' and 'Centered' are equivalent.														
InterpWinSize			Window size across which to interpolate. The interpolation window size is specified in number of subframes.														

Field name	Used by Functions	Values	Description
IsSRSSubframe			This field is present only if the UE contains NSubframe. Value is 1 if NSubframe satisfies the equation: $\text{mod}(\text{NSubframe}, \text{CellPeriod}) = \text{CellOffset}$. Value is 0 otherwise.
k			Subband size, in resource blocks (equal to NRB for wideband PMI reporting or transmission schemes without PMI reporting).
K			Ratio of uplink data to PRACH subcarrier spacing (K)
Km			Lower code block size ($K-$)
Kp			Upper code block size ($K+$)
KTxComb			Offset to the frequency domain starting position (k_{TC}), a function of the transmission comb parameter
L			Number of segment cyclic redundancy check (CRC) bits
MacTxNumber		0...27	Number of the current MAC (re-)transmission, <i>CURRENT_TX_NB</i>

Field name	Used by Functions	Values	Description
MaxPMI	ltePMIInfo		Maximum permitted PMI value for the given configuration. Valid PMI values range from 0 to MaxPMI. For CSI reporting, when CSISRefP = 8, MaxPMI is a 2–element vector, indicating the maximum permissible values of $i1$ and $i2$, the first and second codebook indices. For transmission schemes without PMI reporting, MaxPMI = 0.
	lteULPMIInfo		Indicates the maximum permitted PMI value for the given configuration. Valid PMI values range from 0 to MaxPMI.
MIMOCorrelation		'Low', 'Medium', 'High'	Correlation between UE and eNodeB antennas
ModelType	lteFadingChannel	'Dent', 'GMEDS'	<i>Rayleigh</i> fading model type
Modulation	lteACKDecode, lteACKEncode	('QPSK', '16QAM', '64QAM', '256QAM') String or cell array of strings.	Modulation type, specified as a string or cell array of strings. If 2 blocks, each cell is associated with a transport block.
		'QPSK', '16QAM', '64QAM'	Modulation scheme associated with one codeword
MovingScenario		'Scenario1', 'Scenario2'	Moving channel scenario

Field name	Used by Functions	Values	Description
MTot			Total number of bits associated with PDCCHs (8×NRE)
NAllocatedPDCCHREG			Number of allocated PDCCH REGs as per Test Model number and BW
N1DMRS			Component of the reference signal cyclic shift, signaled from higher layers (<i>n1_DMRS</i>)
N2DMRS			Component of the reference signal cyclic shift, signaled from the most recent DCI format 0 message (<i>n2_DMRS</i>)
NBundled	lteACKDecode, lteACKEncode	0 (default), 1, ..., 9	TDD HARQ-ACK bundling scrambling sequence index. When set to 0, the function disables the TDD HARQ-ACK bundling scrambling. Therefore, it is off by default.
NCCE			Number of control channel elements available for actual PDCCH usage
NCellCyclicShift			A row vector, containing the cell-specific cyclic shift (<i>n_{cell_cs}</i>) for each OFDM symbol
NCellID			Physical layer cell identity
NCodewords		1, 2	Number of codewords
NCS			Length of zero correlation zone, plus 1 (<i>N_CS</i>)

Field name	Used by Functions	Values	Description
NDLRB		Scalar integer (6, ..., 110). Standard bandwidth values are 6, 15, 25, 50, 75, and 100. NDLRB will also accept the standardized bandwidths in string format from the set {'1.4MHz', '3MHz', '5MHz', '10MHz', '15MHz', '20MHz'}.	Number of downlink (DL) resource blocks (RBs)
NF4RachPreambles		0...27	Number of RACH preamble frequency resources of Format 4 in <i>UpPTS</i>
Nfft			Number of fast <i>Fourier</i> transform (FFT) points
NFrame			Frame number
Ng		'Sixth', 'Half', 'One', 'Two'	HICH group multiplier
Nggroups			Number of PHICH groups
NHARQProcesses		1...8	Number of HARQ processes
NIR			Number of soft bits associated with transport block. Soft buffer size for entire input transport block
NL			Number of layers used in rate matching calculation

Field name	Used by Functions	Values	Description
NLayers	lteDLSCH, lteDLSCHDecode, lteULSCH, lteULSCHDecode	1 (default), 2, 3, 4, 5, 6, 7, 8	Total number of transmission layers associated with the transport block or blocks.
	Downlink modulation	1,...,8, depending on TxScheme	Number of transmission layers (downlink modulation)
	Uplink modulation (lteACKDecode, lteACKEncode)	1 (default), 2, 3, 4	Number of transmission layers, total or per codeword
NMappingUnits			Number of PHICH mapping units
NPHICH			Number of individual PHICH available
NPRS			A two-column row vector, containing the cell-specific component of the reference signal cyclic shift (n_{PRS}) for each slot
NPRSRB		0...NDLRB	Number of PRS physical resource blocks
NRE	ltePCFICHInfo		Number of resource elements (REs) assigned to PCFICH ($4 \times NREG$)
	ltePDCCHInfo		Total number of resource elements (REs) associated with PDCCHs ($4 \times NREG$)
	ltePHICHInfo		Number of resource elements (REs) assigned to all PHICH
	lteULSCH, lteULSCHInfo		Number of resource elements (REs) used for PUSCH transmission

Field name	Used by Functions	Values	Description
NREG	ltePCFICHInfo		Number of resource element groups (REGs) assigned to PCFICH
	ltePDCCHInfo, ltePDCCHSpace		Total number of resource element groups (REGs) associated with PDCCHs ($4 \times \text{NRE}$)
	ltePHICHInfo		Number of resource element groups assigned to all PHICH
NREGUsed			Number of resource element groups (REGs) available for actual PDCCH usage
NResourceIdx			A two-column row vector, containing the resource indices (n') for each slot
NREUsed			Number of resource elements (REs) available for actual PDCCH usage
NRxAnts		1 or more	Number of receive antennas
NSCID		0, 1	Scrambling identity (ID)
NSequences			Number of orthogonal sequences in each PHICH group
NSoftbits		Nonnegative scalar integer (default 0)	Total number of soft buffer bits. The default setting of 0 signifies that there is no buffer limit.
NSRSTx			Number of UE-specific SRS transmissions (n_{SRS})
NSubbands	ltePMIInfo, lteULPMIInfo		Number of subbands for PMI reporting (equal to 1 for wideband PMI reporting) or transmission schemes without PMI reporting.

Field name	Used by Functions	Values	Description
NSubframe			Subframe number
NSymbols	lteDuplexingInfo		Total number of symbols in the subframe
	ltePDCCHInfo		Total number of OFDM symbols spanned by the PDCCH
NSymbolsDL			Number of symbols used for transmission in the downlink (DL)
NSymbolsGuard			Number of symbols in the guard period
NSymbolsUL			Number of symbols used for transmission in the uplink (UL)
NSymbSlot			A vector indicating the number of OFDM symbols in each slot ($[N_{SF,0_PUCCH} \ N_{SF,1_PUCCH}]$)
NTerms		power of 2	Number of oscillators used in fading path modeling
NTurboDecIts			Number of turbo decoder iteration cycles
NTxAnts	lteDMRSIndices, ltePDSCHIndices	0 or more	Number of transmission antenna ports. This argument is only present for UE-specific demodulation reference symbols.
	Uplink modulation	1, 2, 4	Number of transmission antennas
NULRB			Number of uplink (UL) resource blocks (RBs)
NZC	ltePRACHDetect, ltePRACHInfo		Zadoff-Chu sequence length (N_{ZC})

Field name	Used by Functions	Values	Description
	ltePUSCHDRS, lteSRS		Zadoff-Chu sequence length (<i>NRS_ZC</i>)
OACK	lteACKDecode	nonnegative scalar integer, 0 (default)	Number of uncoded HARQ- ACK bits.
			Number of uncoded symbols for ACK/NACK
OCQI	lteCQIDecode	nonnegative scalar integer, 0 (default)	Number of uncoded channel quality information (CQI) bits
			Number of coded channel quality information (CQI) symbols in UL-SCH
OCNG		'Disable', 'Enable'	OFDMA channel noise generator
OdACK			Number of coded symbols for ACK/NACK (<i>Q'_ACK</i>)
OdCQI			Number of coded symbols for CQI (<i>Q'_CQI</i>)
OdRI			Number of coded symbols for RI (<i>Q'_RI</i>)
OffsetIdx		0...1	Choice of SRS Subframe Offset in the case of 2 ms SRS periodicity. This parameter indexes the two SRS Subframe Offset entries in the row specified by the <i>ConfigIdx</i> parameter in table 8.2-2 of TS 36.213 for the SRS Configuration Index.
ORI			Number of uncoded symbols for RI
			Number of uncoded RI bits

Field name	Used by Functions	Values	Description
OrthCover		'On', 'Off'	Applies ('On'), or does not apply ('Off'), orthogonal cover sequence, w (<i>Activate-DMRS-with OCC</i>)
OrthSeq	ltePUCCH1, ltePUCCH3		A 4-by-2 matrix where each column contains the orthogonal sequence ($w_{n_{oc}}$) for each slot
	ltePUCCH1DRS, ltePUCCH2DRS, ltePUCCH3DRS		A two-column matrix where each column contains the orthogonal sequence (w_{bar}) for each slot
	ltePUSCHDRS		A vector containing the orthogonal cover value (w) for each slot
OrthSeqIdx	ltePUCCH1, ltePUCCH3, ltePUCCH3DRS		A two-column row vector, containing the orthogonal sequence index (n_{oc}) for each slot
	ltePUCCH1DRS		A two-column row vector, containing the orthogonal sequence index ($n_{oc\ bar}$) for each slot
PBCHPower			PBCH symbol power adjustment, in dB
PCFICHPower			PCFICH symbol power adjustment, in dB
PDCCHFormat		0, 1, 2, 3	PDCCH format
PDCCHPower			PDCCH symbol power adjustment, in dB
PDSCH			PDSCH transmission configuration substructure

Field name	Used by Functions	Values	Description
PDSCHPowerBoosted			PDSCH symbol power adjustment, in dB, for the boosted physical resource blocks (PRBs)
PDSCHPowerDeboosted			PDSCH symbol power adjustment, in dB, for the de-boosted physical resource blocks (PRBs)
Peak			Peak error vector magnitude (EVM), the largest single EVM value calculated across all input values
Phi			Frequency domain location offset (phi)
PHICHDuration		'Normal', 'Extended'	PHICH duration
PilotAverage		'TestEVM', 'UserDefined'	Type of pilot averaging
PMI		0...23	Scalar precoder matrix indication (PMI) to be used during precoding
PMIMode		'Wideband', 'Subband'	PMI reporting mode
PMISet		Integer vector (0, ..., 15)	Precoder matrix indication (PMI) set. It can contain either a single value, corresponding to single PMI mode, or multiple values, corresponding to multiple or subband PMI mode. The number of values depends on CellRefP, transmission layers and TxScheme. For more information about setting PMI parameters, see <code>ltePMIInfo</code> .

Field name	Used by Functions	Values	Description
Port			Antenna port number used for transmission (<i>p</i>)
PRBSet	Downlink modulation	1- or 2-column integer matrix	<p>Zero-based physical resource block (PRB) indices corresponding to the slot wise resource allocations for this PDSCH. PRBSet can be assigned as:</p> <ul style="list-style-type: none"> • a column vector, the resource allocation is the same in both slots of the subframe, • a two-column matrix, this parameter specifies different PRBs for each slot in a subframe, • a cell array of length 10 (corresponding to a frame, if the allocated physical resource blocks vary across subframes). <p>PRBSet varies per subframe for the RMCs 'R.25' (TDD), 'R.26' (TDD), 'R.27' (TDD), 'R.43' (FDD), 'R.44', 'R.45', 'R.48', 'R.50', and 'R.51'.</p>

Field name	Used by Functions	Values	Description
	Uplink modulation	1- or 2-column integer matrix	0-based physical resource block indices (PRBs) for the slots of the current PUSCH resource allocation. As a column vector, the resource allocation is the same in both slots of the subframe. As a two-column matrix, it specifies different PRBs for each slot in a subframe.
	ltePRACHInfo		PRBs occupied by PRACH preamble (starts at n_PRB , 0-based)
	lteSRSIndices		A vector specifying the PRBs occupied by the indices in each slot of the subframe (0-based)
PreambleIdx		0...63	Preamble index within cell (<i>ra-PreambleIndex</i>)
PRSPeriod		'On', 'Off', Iprs, [Tprs Dprs]	Positioning reference signal (PRS) subframe configuration
PSS		'Off', 'On'	Primary synchronization signal (PSS) correlation mode
PSSPower			Primary synchronization signal (PSS) symbol power adjustment, in dB
PUSCH			PUSCH transmission configuration structure
PUSCHHopping		'Inter', 'InterAndIntra'	Uplink subframe hopping mode
PUSCHHoppingOffset		0...98	PUSCH hopping offset
QdACK	lteACKEncode	nonnegative scalar integer	Number of coded HARQ-ACK symbols for ACK or NACK (Q_ACK)

Field name	Used by Functions	Values	Description
QdCQI	lteCQIEncode	nonnegative scalar integer	Number of coded channel quality information (CQI) symbols (Q_CQI)
QdRI			Number of coded symbols for RI (Q_RI)
Qm			Bits per symbol variable used in rate matching calculation
			Number of bits per symbol
RBIdx			PUCCH logical resource block index (m)
RC			Reference measurement channel (RMC) number or type, as specified in TS 36.101, Annex A.3
Reference	lteDLChannelEstimate	'DMRS', 'CSIRS'	Specifies point of reference (signals to internally generate) for channel estimation
	lteULChannelEstimate lteULPMISelect	'Antennas', 'Layers', 'None'	Specifies point of reference (signals to internally generate)
ResourceIdx	ltePUCCH1, ltePUCCH1Decode, ltePUCCH1DRS, ltePUCCH1DRSIndices, ltePUCCH1Indices, lteULChannelEstimate lteULFrameOffsetPU	0...2047	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission ($n1_pucch$)

Field name	Used by Functions	Values	Description
	ltePUCCH2, ltePUCCH2Decode, ltePUCCH2DRS, ltePUCCH2DRSDecode ltePUCCH2DRSIndices, ltePUCCH2Indices, lteULChannelEstima lteULFrameOffsetPU	0...1185	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n2_pucch</i>)
	ltePUCCH3, ltePUCCH3Decode, ltePUCCH3DRS, ltePUCCH3DRSIndices, ltePUCCH3Indices, lteULChannelEstima lteULFrameOffsetPU	0...549	A vector of PUCCH Resource Indices, one for each transmission antenna, which determine the physical resource blocks, cyclic shift, and orthogonal cover used for transmission (<i>n3_pucch</i>)
ResourceSize		0...63	Size of resource allocated to PUCCH Format 2 (<i>N2RB</i>)
Rho			PDSCH resource element power allocation, in dB
RMS			Root mean square (RMS) error vector magnitude (EVM), the square root of the mean square of the EVM across all input values
RNTI			Radio network temporary identifier (RNTI) value (16 bits)
RootSeq	ltePRACH, ltePRACHDetect, ltePRACHInfo		Physical root Zadoff-Chu sequence index or indices (<i>u</i>)
	lteSRS		Root Zadoff-Chu sequence index (<i>q</i>)

Field name	Used by Functions	Values	Description
	ltePUSCHDRS		A two-column row vector, containing the Root Zadoff Chu sequence index (q) for each slot
RV		Integer vector (0,1,2,3) ^a	Specifies the redundancy version for one or two codewords used in the initial subframe number, NSubframe. This parameter field is only for informational purposes and is Read-Only.
		0, 1, 2, 3	RV value associated with one codeword
RVSeq			Specifies the sequence of Redundancy Version (RV) indicators for each HARQ process. The number of elements in each row is equal to the number of transmissions in each HARQ process. If RVSeq is a row vector in a two codeword transmission, then the same RV sequence is applied to both codewords
SamplingRate	lteOFDMModulate, lteOFDMInfo, lteSCFDMAModulate, lteSCFDMAInfo		Sampling rate of the time-domain waveform
	ltePRACH, ltePRACHDetect, ltePRACHInfo		Sampling rate of the PRACH modulator
	lteSRS		Input signal sampling rate, the rate of each sample in the rows of the input matrix, in

Field name	Used by Functions	Values	Description
ScrambSeq			A two-column row vector, containing the scrambling value (<i>S</i>) for each slot
Seed			Random number generator seed for channel models. Set to zero for a random seed.
SeqGroup	lteSRS	0...29	SRS sequence group number (<i>u</i>)
	ltePUSCHDRS, lteRMCUL, lteRMCULTool, lteULFrameOffset	0...29	PUSCH sequence group assignment (<i>delta_SS</i>)
	ltePUCCH1, ltePUCCH1DRS, ltePUCCH2, ltePUCCH2DRS, ltePUCCH3DRS, ltePUSCHDRS		A two-column row vector, containing the base sequence group number (<i>u</i>) for each slot
	lteSRS		Base sequence group number (<i>u</i>)
SeqIdx	lteSRS	0, 1	Base sequence number (<i>v</i>)
	ltePUCCH1, ltePUCCH1DRS, ltePUCCH2, ltePUCCH2DRS, ltePUCCH3DRS, ltePUSCHDRS		A two-column row vector, containing the base sequence number (<i>v</i>) for each slot
	ltePRACH, ltePRACHDetect, ltePRACHInfo	0...837	Logical root sequence index (<i>RACH_ROOT_SEQUENCE</i>)

Field name	Used by Functions	Values	Description
Shortened		0 (default), 1	Shorten subframe flag. If 1, the last symbol of the subframe is not used. It should be set if the current subframe contains a possible SRS transmission.
SRS		'on'	String to enable SRS related configuration parameters (set SRS to 'on') for RMCs which optionally support SRS, or a complete or part SRS structure. If absent, no SRS configuration is created.
SSC		0 (default), 1, 2, 3, 4, 5, 6, 7, 8, 9	Special subframe configuration (SSC)
SSS		'Off', 'On'	Secondary synchronization signal (SSS) correlation mode
SSSPower			Secondary synchronization signal (SSS) symbol power adjustment, in dB
SubcarrierSpacing			Subcarrier spacing of PRACH preamble, in Hz (Δf_{RA})
SubframeConfig		0...15	Sounding reference signal (SRS) subframe configuration
SubframeType		'Downlink', 'Uplink', 'Special'	Type of subframe
Symbols	ltePUCCH1		A row vector containing the modulated data symbols ($d(0)$) for each OFDM symbol
	ltePUCCH1DRS, ltePUCCH2DRS, ltePUCCH3DRS		A row vector containing the modulated data symbols (z) for each OFDM symbol

Field name	Used by Functions	Values	Description
	ltePUCCH2, ltePUCCH3		A row vector containing the modulated data symbols (d) for each OFDM symbol
TDDConfig		0 (default), 1, 2, 3, 4, 5, 6	Uplink or downlink configuration
TimeWindow			Size of window in resource elements used to average over time during channel estimation
TimingOffset			PRACH timing offset, in microseconds
TMN			Test model number, as specified in TS 36.141, a type string used when generating test model waveforms
TotSubframes	lteDLPerfectChannel, lteRMCDL, lteRMCDLTool, lteRMCUL, lteRMCULTool, lteULPerfectChannel		Total number of subframes to generate
	ltePRACHInfo		The number of subframes duration of the PRACH. Each subframe lasts 30,720 fundamental periods; therefore, TotSubframes is $\text{ceil}(\text{sum}(\text{Fields})/30720)$, the number of subframes required to hold the entire PRACH waveform. The duration of the PRACH is a function of the Preamble Format as described in table 5.7.1-1 of TS 36.211.
TrBlkSizes			Transport block sizes for each subframe in a frame

Field name	Used by Functions	Values	Description
TxComb		0, 1	Transmission comb. Controls SRS positions; SRS is transmitted in 6 carriers per resource block on odd (1) and even (0) resource indices.
TxScheme		Default TxScheme is RMC-dependent. Valid values include: 'SpatialMux', 'Port0', 'TxDiversity', 'CDD', 'MultiUser', 'Port5', 'Port7-8', 'Port8', 'Port7-14'	<p>Transmission scheme, specified as one of the following options.</p> <ul style="list-style-type: none"> • 'SpatialMux' — Closed-loop spatial multiplexing. • 'Port0' — Single-antenna port, port 0. • 'TxDiversity' — Transmit diversity scheme. • 'CDD' — Large delay CDD scheme. • 'MultiUser' — Multiuser MIMO scheme. • 'Port5' — Single-antenna port, port 5. • 'Port7-8' — Single-antenna port, port 7 (NLayers = 1). Dual layer transmission, ports 7 and 8 (NLayers = 2). • 'Port8' — Single-antenna port, port 8. • 'Port7-14' — Up to 8-layer transmission, ports 7–14.
UeOffset		0...319	UE-specific SRS offset
UePeriod		2, 5, 10, 20, 40, 80, 160, 320	UE-specific SRS periodicity, in milliseconds

Field name	Used by Functions	Values	Description
Velocity	lteHSTChannel		Train velocity, in kilometers per hour
W	lteDMRS		Precoding matrix for the wideband UE-specific beamforming of the DM-RS, of size NLayers-by-NTxAnts. An empty matrix, [], signifies no precoding.
	ltePDSCH	Numeric matrix, [] (default)	<p>Present only for wideband UE-specific beamforming ('Port5', 'Port7-8', 'Port8', 'Port7-14'). The NLayers-by-NTxAnts precoding matrix chosen according to TS 36.101 Annex B.4. The resulting precoding matrix is randomly selected from:</p> <ul style="list-style-type: none"> the set defined in TS 36.211 Section 6.3.4 for 'Port5', 'Port7-8' and 'Port8' transmission schemes or from the set associated with CSI reporting as defined in TS 36.213 Section 7.2.4 for the 'Port7-14' transmission scheme. <p>For R. 48, the precoding matrix corresponding to PMI=0 is used.</p>

Field name	Used by Functions	Values	Description
Window		'Left', 'Right', 'Centred', 'Centered'	If more than one subframe is input this parameter is required to indicate the position of the subframe from <i>rxgrid</i> and <i>refgrid</i> containing the desired channel estimate. Only channel estimates for this subframe will be returned. For the 'Centred' and 'Centered' settings, the window size must be odd.
Windowing	lteOFDMModulate, lteOFDMInfo, lteRMCDL, lteTestModel		Number of time-domain samples over which windowing and overlapping of OFDM symbols is applied
	lteRMCUL, lteSCFDMAModulate, lteSCFDMAInfo		The number of time-domain samples over which windowing and overlapping of SC-FDMA symbols is applied

- a. A one or two column matrix (for one or two codewords)

References

- [1] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.141. “Base Station (BS) conformance testing.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

- [4] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

Related Examples

 
- “Parameterization”
- “UL-SCH Parameterization”

Resource Grid and Block Diagrams

- “Downlink Physical Channels Grid” on page 3-2
- “Downlink Physical Signals Grid” on page 3-6
- “Uplink Physical Channels and Signals Grid” on page 3-9
- “DCI Processing Functions” on page 3-14
- “UCI Processing Functions” on page 3-16
- “PDCCH Processing Functions” on page 3-19
- “PUCCH Format 1 Processing Functions” on page 3-21
- “PUCCH Format 2 Processing Functions” on page 3-23
- “PUCCH Format 3 Processing Functions” on page 3-25
- “DL-SCH Processing Functions” on page 3-27
- “UL-SCH Processing Functions” on page 3-29
- “PDSCH Processing Functions” on page 3-31
- “PUSCH Processing Functions” on page 3-33
- “CFI Processing Functions” on page 3-35
- “PCFICH Processing Functions” on page 3-36
- “PRACH Processing Functions” on page 3-38
- “BCH Processing Functions” on page 3-39
- “PBCH Processing Functions” on page 3-40
- “PHICH Processing Functions” on page 3-41
- “Downlink Receiver Functions” on page 3-43
- “Uplink Receiver Functions” on page 3-45
- “OFDM Modulation and Propagation Channel Models” on page 3-47
- “SC-FDMA Modulation and Propagation Channel Models” on page 3-48

Downlink Physical Channels Grid

The downlink physical channels, their associated functions, and their locations on the resource grid are shown in the following figure.

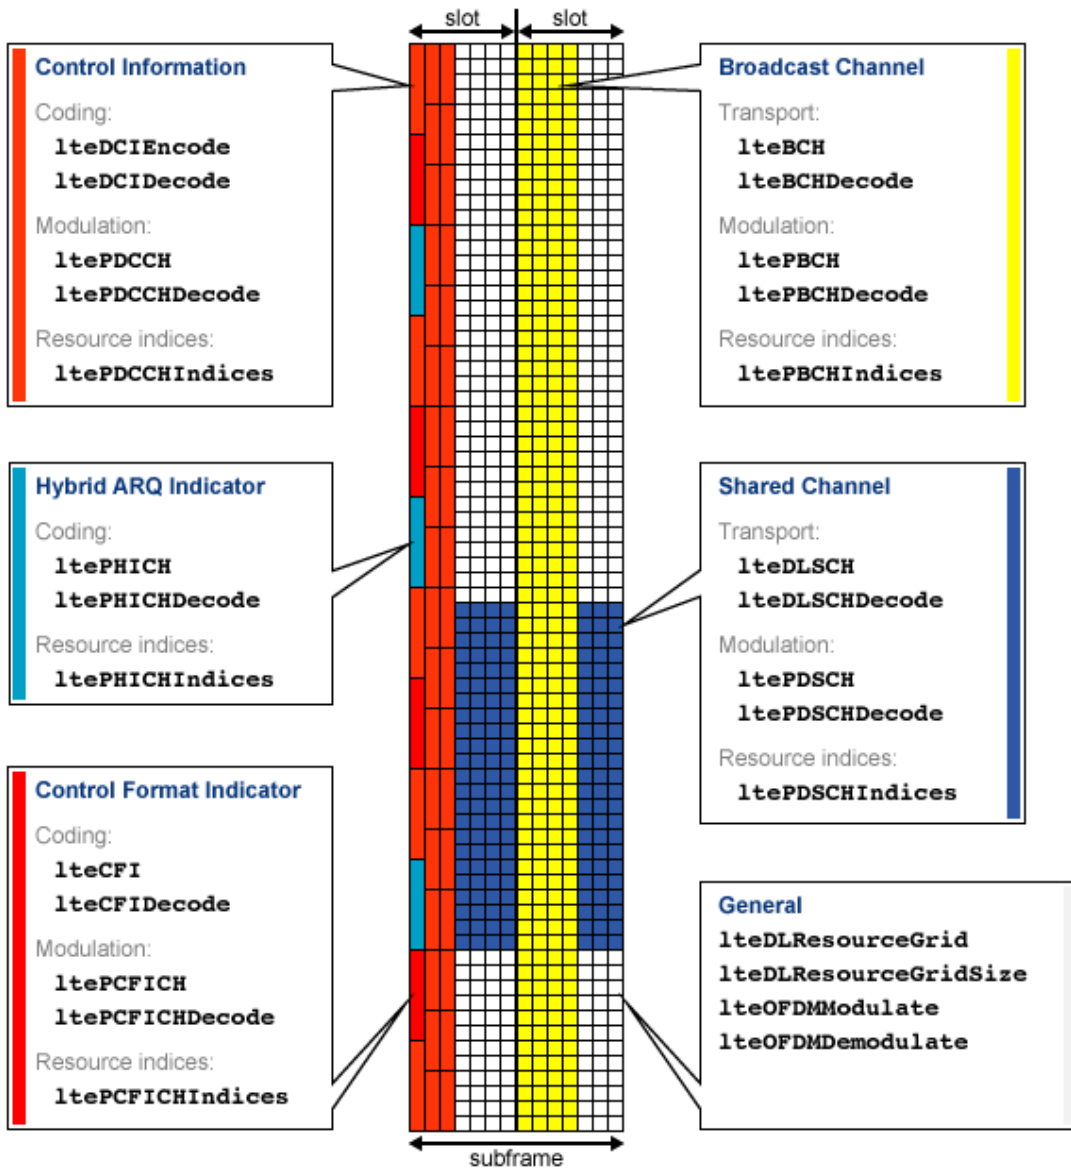


- Control Information

- Coding
 - lteDCIEncode
 - lteDCIDecode
- Modulation
 - ltePDCCH
 - ltePDCCHDecode
 - Resource Indices — ltePDCCHIndices
- Hybrid ARQ Indicator
 - Coding
 - ltePHICH
 - ltePHICHDecode
 - Resource Indices — ltePHICHIndices
- Control Format Indicator
 - Coding
 - lteCFI
 - lteCFIDecode
 - Modulation
 - ltePCFICH
 - ltePCFICHDecode
 - Resource Indices — ltePCFICHIndices
- Broadcast Channel
 - Transport
 - lteBCH
 - lteBCHDecode
 - Modulation
 - ltePBCH

- ltePBCHDecode
- Resource Indices — ltePBCHIndices
- Shared Channel
 - Transport
 - lteDLSCH
 - lteDLSCHDecode
 - Modulation
 - ltePDSCH
 - ltePDSCHDecode
 - Resource Indices — ltePDSCHIndices
- General
 - lteDLResourceGrid
 - lteDLResourceGridSize
 - lteOFDMModulate
 - lteOFDMDemodulate

Downlink Physical Signals Grid

 The downlink physical signals, their associated functions, and their locations on the resource grid are shown in the following figure.

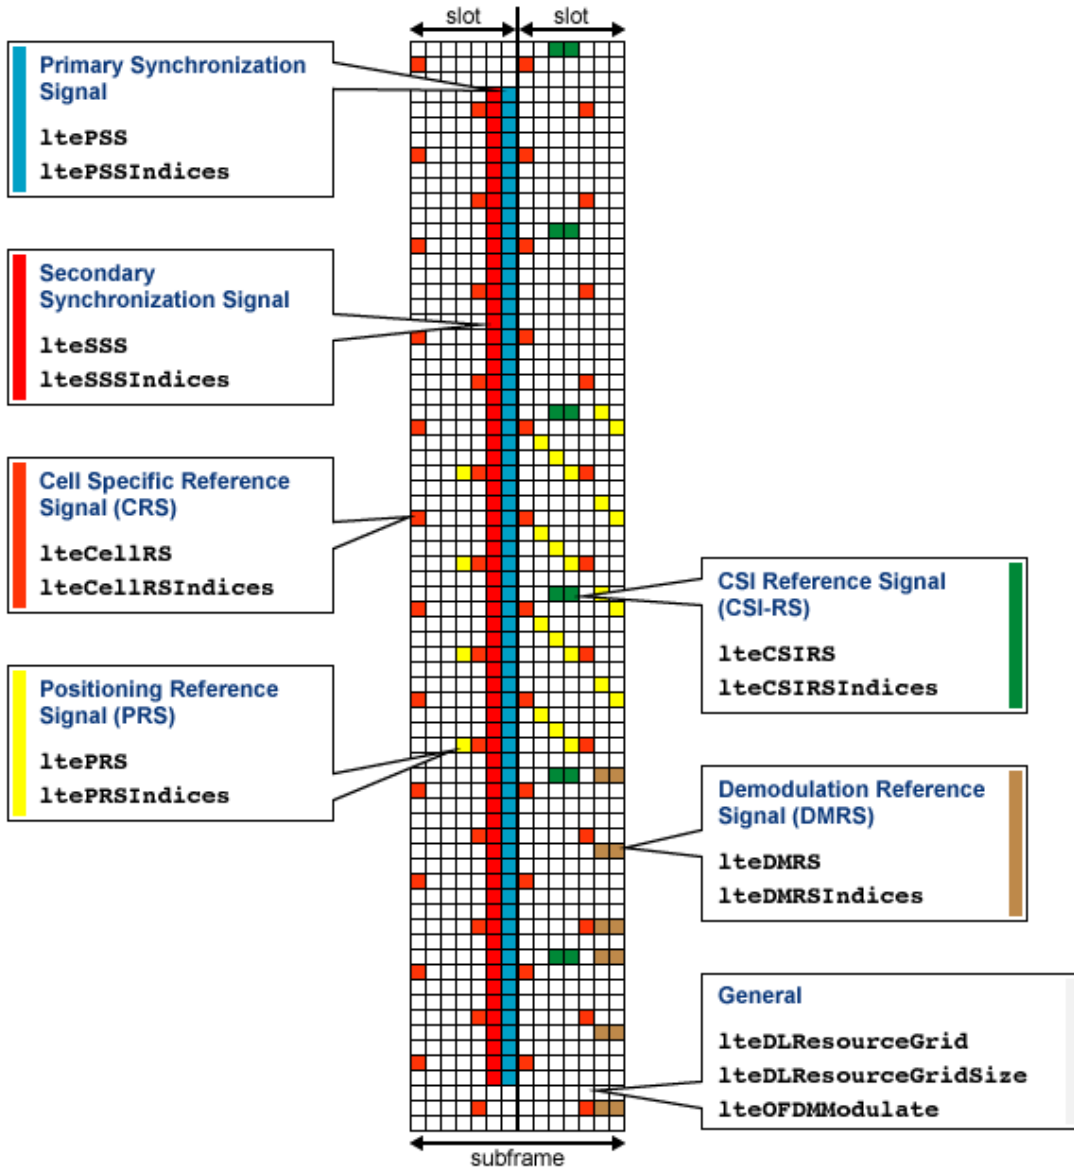


- Primary Synchronization Signal (PSS)

- ltePSS
- ltePSSIndices
- Secondary Synchronization Signal (SSS)
 - lteSSS
 - lteSSSIndices
- Cell-specific Reference Signal (CRS)
 - lteCellRS
 - lteCellRSIndices
- Positioning Reference Signal (PRS)
 - ltePRS
 - ltePRSIndices
- Channel State Information Reference Signal (CSI-RS)
 - lteCSIRS
 - lteCSIRSIndices
- Demodulation Reference Signal (DMRS)
 - lteDMRS
 - lteDMRSIndices
- General
 - lteDLResourceGrid
 - lteDLResourceGridSize
 - lteOFDMModulate

Uplink Physical Channels and Signals Grid

 The uplink physical channels and signals, their associated functions, and their locations on the resource grid are shown in the following figure.

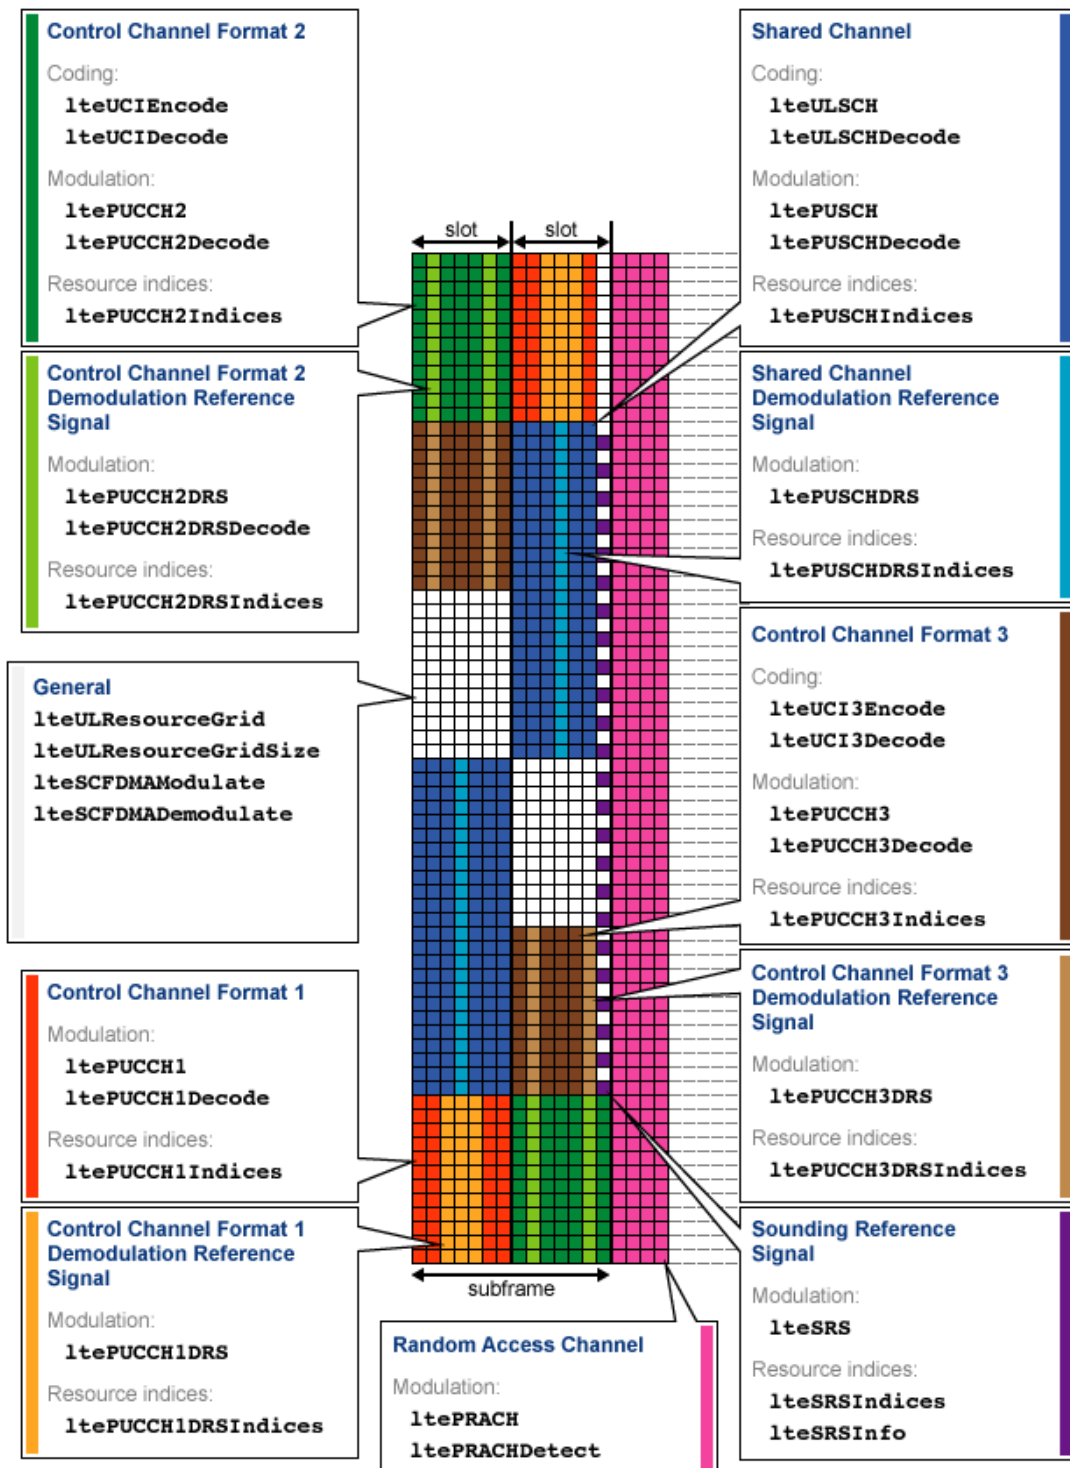


- Control Channel Format 1
 - Modulation
 - ltePUCCH1
 - ltePUCCH1Decode
 - Resource Indices — ltePUCCH1Indices
- Control Channel Format 2
 - Coding
 - lteUCIEncode
 - lteUCIDecode
 - Modulation
 - ltePUCCH2
 - ltePUCCH2Decode
 - Resource Indices — ltePUCCH2Indices
- Control Channel Format 3
 - Coding
 - lteUCI3Encode
 - lteUCI3Decode
 - Modulation
 - ltePUCCH3
 - ltePUCCH3Decode
 - Resource Indices — ltePUCCH3Indices
- Random Access Channel
 - Modulation
 - ltePRACH
 - ltePRACHDetect
 - General — ltePRACHInfo
- Shared Channel

- Transport
 - lteULSCH
 - lteULSCHDecode
- Modulation
 - ltePUSCH
 - ltePUSCHDecode
- Resource Indices
 - ltePUSCHIndices
- Control Channel Format 1 Demodulation Reference Signal
 - Modulation — ltePUCCH1DRS
 - Resource Indices — ltePUCCH1DRSIndices
- Control Channel Format 2 Demodulation Reference Signal
 - Modulation
 - ltePUCCH2DRS
 - ltePUCCH2DRSDecode
 - Resource Indices — ltePUCCH2DRSIndices
- Control Channel Format 3 Demodulation Reference Signal
 - Modulation — ltePUCCH3DRS
 - Resource Indices — ltePUCCH3DRSIndices
- Sounding Reference Signal
 - Modulation — lteSRS
 - Resource Indices — lteSRSIndices
 - General — lteSRSInfo
- Shared Channel Demodulation Reference Signal
 - Modulation — ltePUSCHDRS
 - Resource Indices — ltePUSCHDRSIndices
- General

- lteULResourceGrid
- lteULResourceGridSize
- lteSCFDMAModulate
- lteSCFDMADemodulate

DCI Processing Functions

 The complete downlink control information process and associated low-level and mid-level DCI functions are shown in the following block diagram.

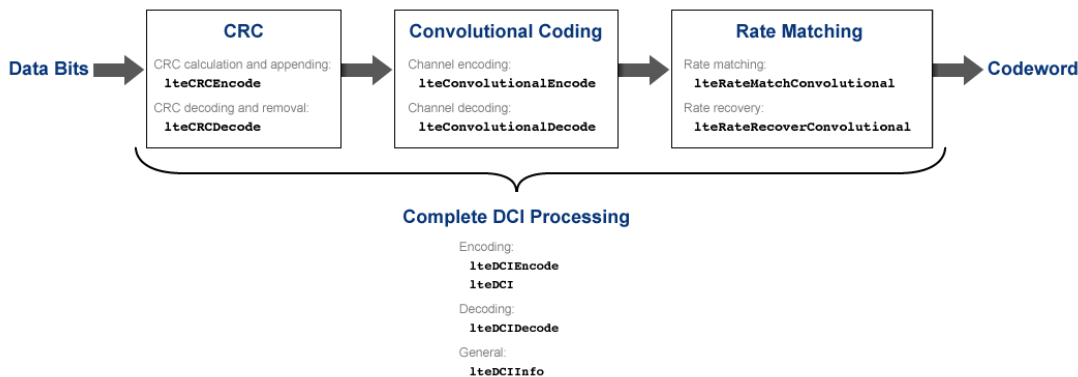

- Cyclic redundancy check (CRC)
 - CRC calculation and appending — lteCRCEncode
 - CRC decoding and removal — lteCRCDecode
- Convolutional channel coding
 - Channel encoding — lteConvolutionalEncode
 - Channel decoding — lteConvolutionalDecode
- Rate matching and recovery
 - Rate matching — lteRateMatchConvolutional
 - Rate recovery — lteRateRecoverConvolutional
- Complete DCI processing
 - Encoding
 - lteDCIEncode
 - lteDCI
 - Decoding — lteDCIDecode

- General — lteDCIInfo

Related Examples

- “Model DCI and PDCCH”

More About

- “Downlink Control Channel”

 
UCI Processing Functions

The uplink control information process for PUCCH format 1, 2, and 3 and associated mid-level UCI functions are shown in the following block diagram.


PUCCH Format 1:



PUCCH Format 2:

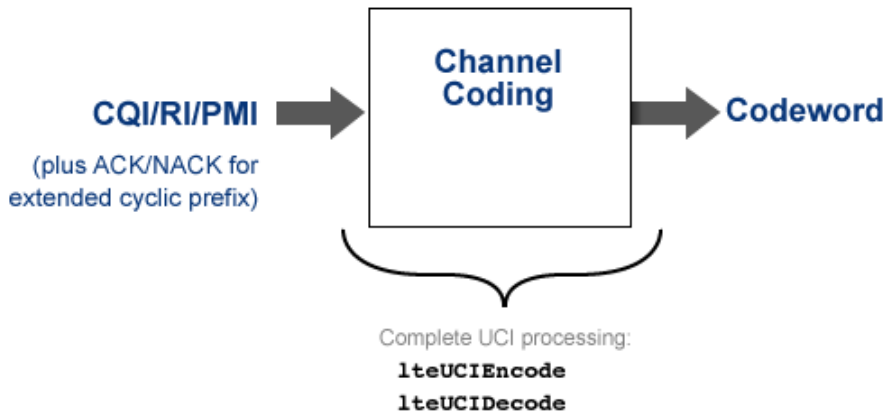

PUCCH Format 3:

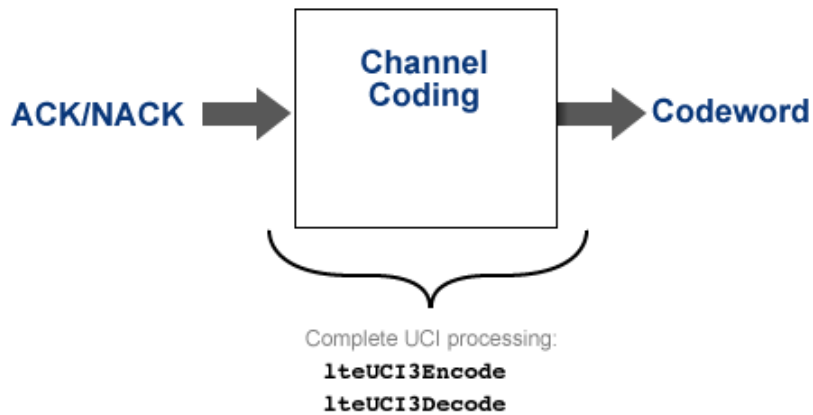 

- PUCCH format 2 complete UCI processing
 - lteUCIEncode
 - lteUCIDecode
- PUCCH format 3 complete UCI processing
 - lteUCI3Encode
 - lteUCI3Decode

Related Examples

 
- “Model PUCCH Format 2”

More About

- “Uplink Control Channel Format 1”
- “Uplink Control Channel Format 2”

PDCCH Processing Functions

The complete physical downlink control channel process and associated low-level and mid-level PDCCH functions are shown in the following block diagram.

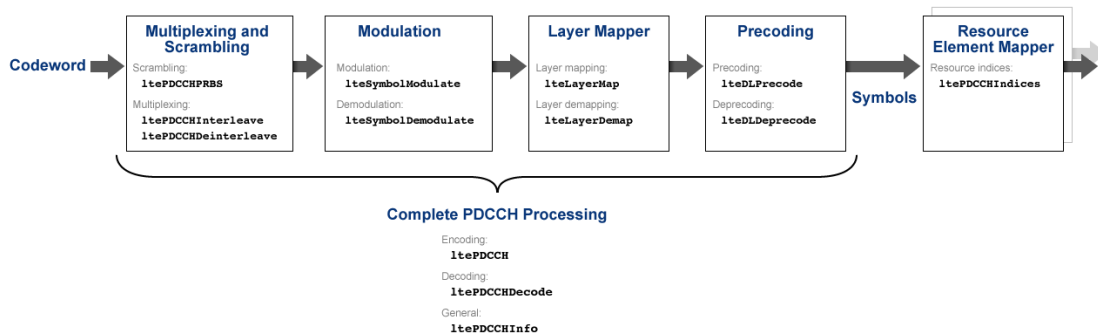

- Multiplexing and scrambling
 - Scrambling — `ltePDCCHPRBS`
 - Multiplexing
 - `ltePDCCHInterleave`
 - `ltePDCCHDeinterleave`
- Symbol modulation and demodulation
 - Modulation — `lteSymbolModulate`
 - Demodulation — `lteSymbolDemodulate`
- Layer mapper and de-mapper
 - Layer mapping — `lteLayerMap`
 - Layer demapping — `lteLayerDemap`
- Precoding and deprecoding
 - Precoding — `lteDLPrecode`
 - Deprecoding — `lteDLDeprecode`
- Resource element mapper

- Resource indices — `ltePDCCHIndices`
- Complete PDCCH processing
 - Encoding — `ltePDCCH`
 - Decoding — `ltePDCCHDecode`
 - General — `ltePDCCHInfo`

Related Examples

 
- “Model DCI and PDCCH”

More About

- “Downlink Control Channel”

PUCCH Format 1 Processing Functions

The complete physical uplink control channel format 1 process and associated low-level and mid-level PUCCH format 1 functions are shown in the following block diagram.

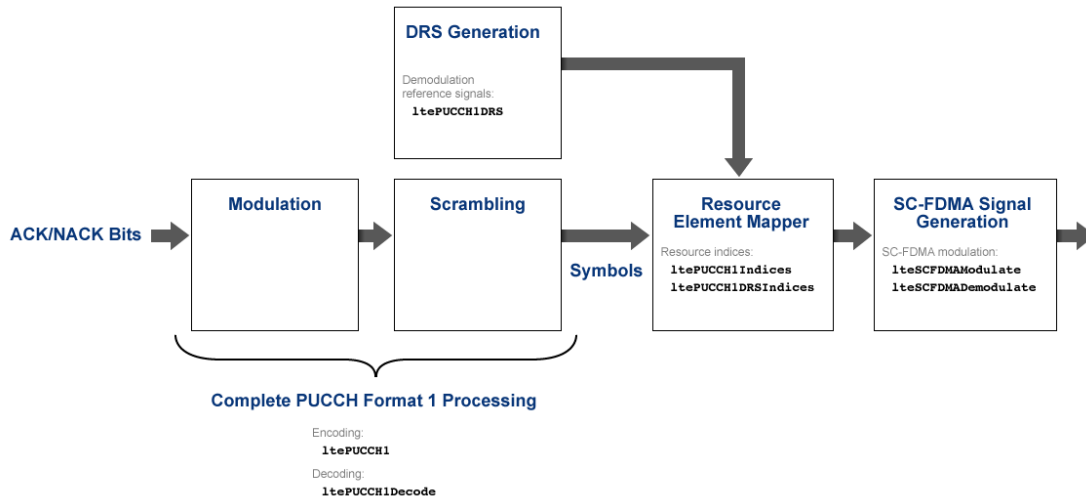

- Demodulation reference signal (DRS) generation
 - Demodulation reference signals — `ltePUCCH1DRS`
- Resource element mapper
 - Resource indices — `ltePUCCH1Indices`
 - DRS resource indices — `ltePUCCH1DRSIndices`
- SC-FDMA signal generation
 - SC-FDMA modulation — `lteSCFDMAModulate`
 - SC-FDMA demodulation — `lteSCFDMADemodulate`
- Complete PUCCH format 1 processing
 - Encoding — `ltePUCCH1`
 - Decoding — `ltePUCCH1Decode`

Related Examples

 
- “Model PUCCH Format 1”
- “PUCCH1a ACK Missed Detection Probability Conformance Test”
- “PUCCH1a Multi User ACK Missed Detection Probability Conformance Test”

More About

- “Uplink Control Channel Format 1”

PUCCH Format 2 Processing Functions

The complete physical uplink control channel format 2 process and associated low-level and mid-level PUCCH format 2 functions are shown in the following block diagram.

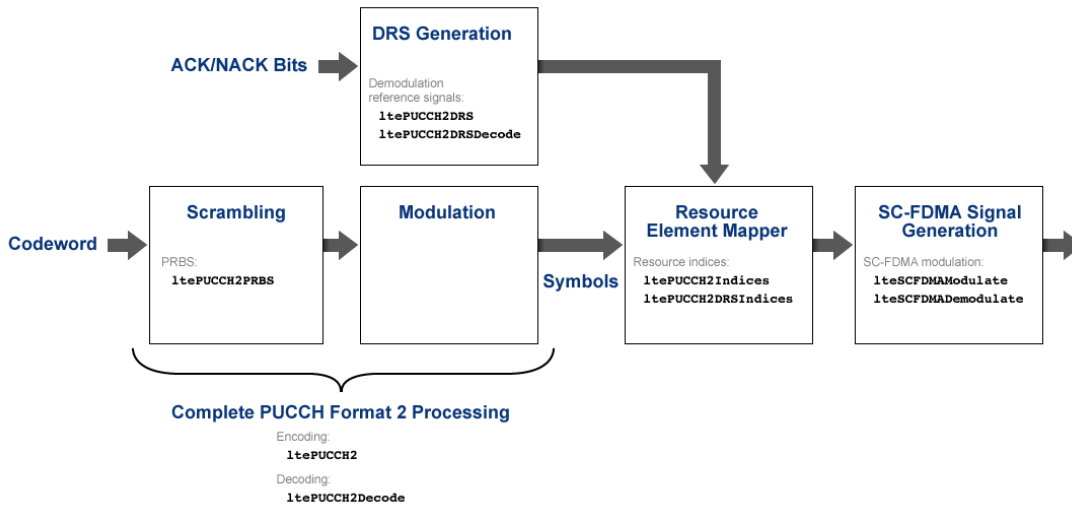

- Scrambling
 - Pseudo-random binary sequence (PRBS) — `ltePUCCH2PRBS`
- Demodulation reference signal (DRS) generation
 - Demodulation reference signals — `ltePUCCH2DRS`
 - Demodulation reference signal decoding — `ltePUCCH2DRSDecode`
- Resource element mapper
 - Resource indices — `ltePUCCH2Indices`
 - DRS resource indices — `ltePUCCH2DRSIndices`
- SC-FDMA signal generation
 - SC-FDMA modulation — `lteSCFDMAModulate`
 - SC-FDMA demodulation — `lteSCFDMADemodulate`
- Complete PUCCH format 2 processing

- Encoding — ltePUCCH2
- Decoding — ltePUCCH2Decode

Related Examples

 
- “Model PUCCH Format 2”

More About

- “Uplink Control Channel Format 2”

PUCCH Format 3 Processing Functions

The complete physical uplink control channel format 3 process and associated low-level and mid-level PUCCH format 3 functions are shown in the following block diagram.

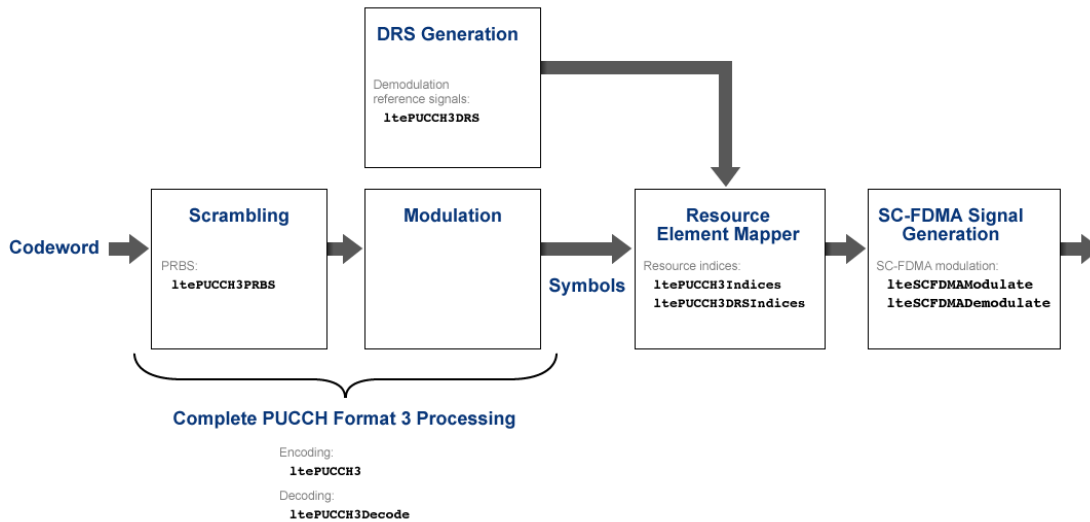


- Scrambling
 - Pseudo-random binary sequence (PRBS) — `ltePUCCH3PRBS`
- Demodulation reference signal (DRS) generation
 - Demodulation reference signals — `ltePUCCH3DRS`
- Resource element mapper
 - Resource indices — `ltePUCCH3Indices`
 - DRS resource indices — `ltePUCCH3DRSIndices`
- SC-FDMA signal generation
 - SC-FDMA modulation — `lteSCFDMAModulate`
 - SC-FDMA demodulation — `lteSCFDMADemodulate`
- Complete PUCCH format 3 processing

- Encoding — ltePUCCH3
- Decoding — ltePUCCH3Decode

DL-SCH Processing Functions

 The complete downlink shared channel process and associated low-level and mid-level DL-SCH functions are shown in the following block diagram.

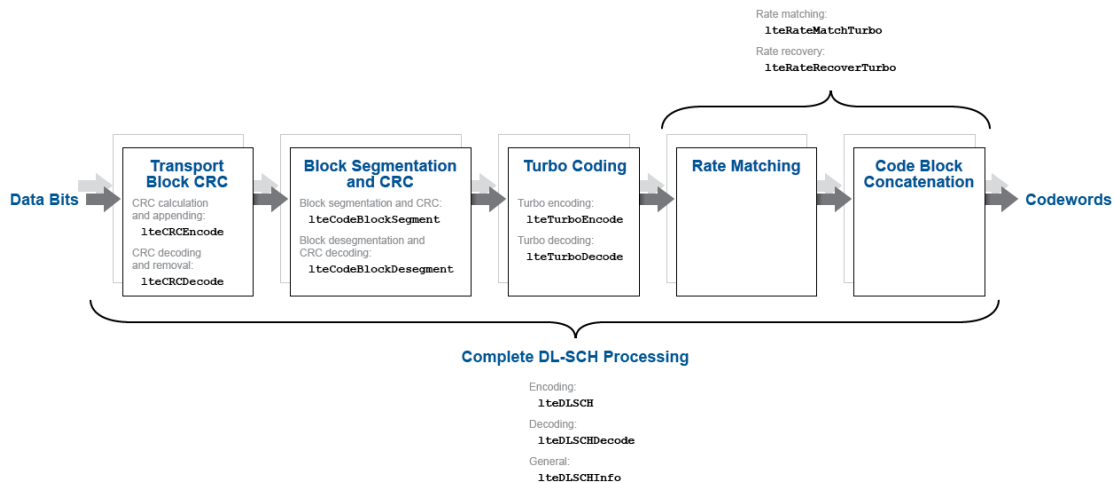

- Transport block cyclic redundancy check (CRC)
 - CRC calculation and appending — `lteCRCEncode`
 - CRC decoding and removal — `lteCRCDecode`
- Block segmentation and CRC
 - Block segmentation and CRC attachment — `lteCodeBlockSegment`
 - Block desegmentation and CRC decoding — `lteCodeBlockDesegment`
- Turbo encoding and decoding
 - `lteTurboEncode`
 - `lteTurboDecode`
- Rate matching and recovery
 - Rate matching — `lteRateMatchTurbo`
 - Rate recovery — `lteRateRecoverTurbo`
- Complete DL-SCH processing

- Encoding — lteDLSCH
- Decoding — lteDLSCHDecode
- General — lteDLSCHInfo

Related Examples

 
- “Model DL-SCH and PDSCH”
- “DL-SCH HARQ Modeling”

More About

- “Downlink Shared Channel”

UL-SCH Processing Functions

The complete uplink shared channel process and associated low-level and mid-level UL-SCH functions are shown in the following block diagram.

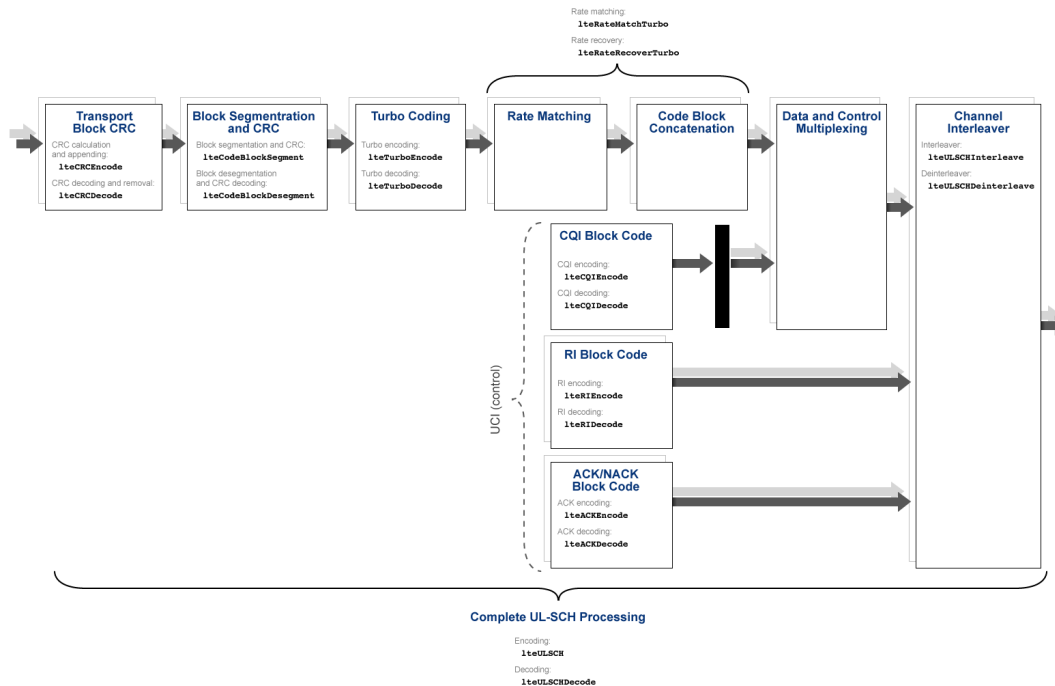

- Transport block cyclic redundancy check (CRC)
 - CRC calculation and appending — `lteCRCEncode`
 - CRC decoding and removal — `lteCRCDecode`
- Block segmentation and CRC
 - Block segmentation and CRC attachment — `lteCodeBlockSegment`
 - Block desegmentation and CRC decoding — `lteCodeBlockDesegment`
- Turbo encoding and decoding
 - `lteTurboEncode`

- `lteTurboDecode`
- Rate matching and recovery
 - Rate matching — `lteRateMatchTurbo`
 - Rate recovery — `lteRateRecoverTurbo`
- Uplink control information (UCI)
 - Channel quality information (CQI) block code
 - CQI encoding — `lteCQIEncode`
 - CQI decoding — `lteCQIDecode`
 - Rank indicator (RI) block code
 - RI encoding — `lteRIEncode`
 - RI decoding — `lteRIDecode`
 - Acknowledgement (ACK) or Negative acknowledgement (NACK) block code
 - ACK encoding — `lteACKEncode`
 - ACK decoding — `lteACKDecode`
- Channel interleaver
 - Interleaver — `lteULSCHInterleave`
 - Deinterleaver — `lteULSCHDeinterleave`
- Complete UL-SCH processing
 - Encoding — `lteULSCH`
 - Decoding — `lteULSCHDecode`

Related Examples

 
- “Model UL-SCH and PUSCH”

More About

- “Uplink Shared Channel”

PDSCH Processing Functions

The complete physical downlink shared channel process and associated low-level and mid-level PDSCH functions are shown in the following block diagram.

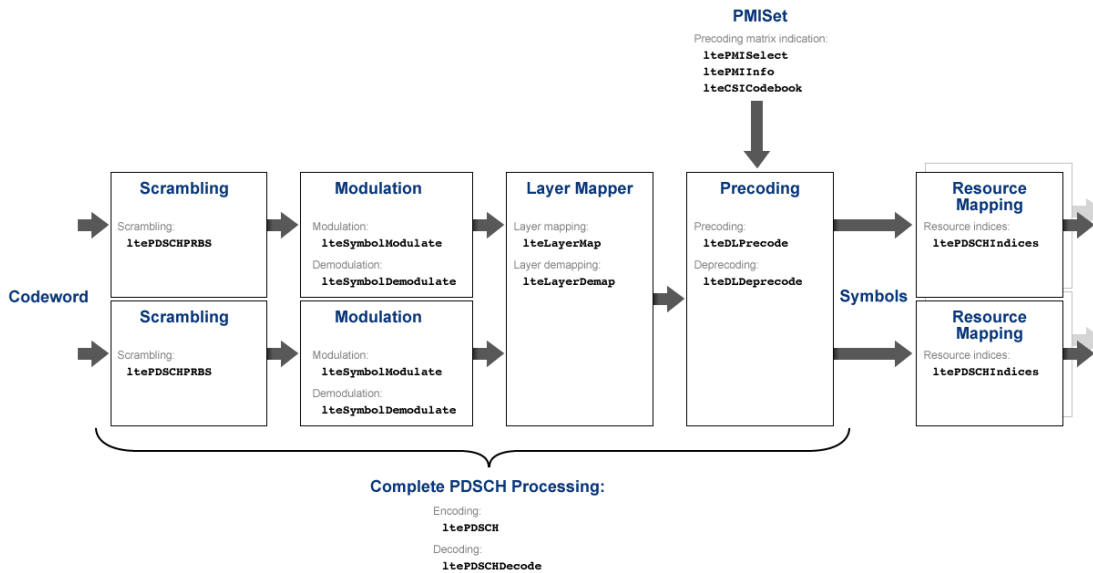

- Scrambling — `ltePDSCHPRBS`
- Symbol modulation and demodulation
 - Modulation — `lteSymbolModulate`
 - Demodulation — `lteSymbolDemodulate`
- Layer mapping
 - Layer mapping — `lteLayerMap`
 - Layer demapping — `lteLayerDemap`
- Precoding and deprecoding
 - Precoding — `lteDLPrecode`
 - Deprecoding — `lteDLDeprecode`
- Downlink precoding matrix indication (PMI)

- ltePMISelect
- ltePMIInfo
- lteCSICodebook
- Resource mapping
 - Resource indices — ltePDSCHIndices
- Complete PDSCH processing
 - Encoding — ltePDSCH
 - Decoding — ltePDSCHDecode

Related Examples

 
- “Model DL-SCH and PDSCH”
- “PDSCH Bit Error Rate Curve Generation”

More About

- “Downlink Shared Channel”

PUSCH Processing Functions

The complete physical uplink shared channel process and associated low-level and mid-level PUSCH functions are shown in the following block diagram.

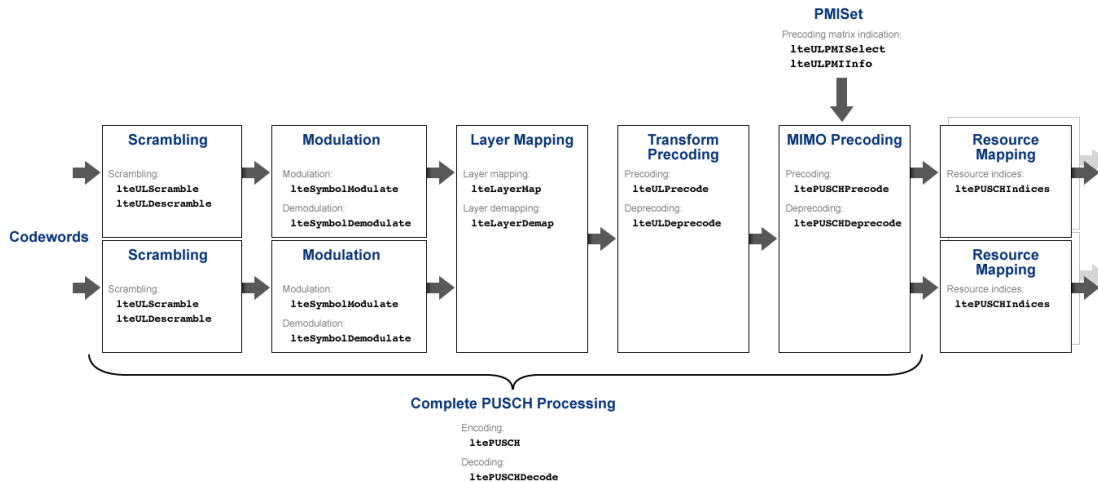

- Scrambling
 - Scrambling — `lteULScramble`
 - Descrambling — `lteULDescramble`
- Symbol modulation and demodulation
 - Modulation — `lteSymbolModulate`
 - Demodulation — `lteSymbolDemodulate`
- Layer mapping
 - Layer mapping — `lteLayerMap`
 - Layer demapping — `lteLayerDemap`
- Transform precoding and deprecoding
 - Transform precoding — `lteULPrecode`
 - Transform deprecoding — `lteULDeprecode`

- Multiple-input multiple-output (MIMO) precoding and deprecoding
 - MIMO precoding — `ltePUSCHPrecode`
 - MIMO deprecoding — `ltePUSCHDeprecode`
- Uplink (UL) precoding matrix indication (PMI)
 - `lteULPMISelect`
 - `lteULPMIInfo`
- Resource mapping
 - Resource indices — `ltePUSCHIndices`
- Complete PUSCH processing
 - Encoding — `ltePUSCH`
 - Decoding — `ltePUSCHDecode`

Related Examples

 
- “Model UL-SCH and PUSCH”

More About

- “Uplink Shared Channel”

CFI Processing Functions

The complete control format information process and associated low-level and mid-level CFI functions are shown in the following block diagram.

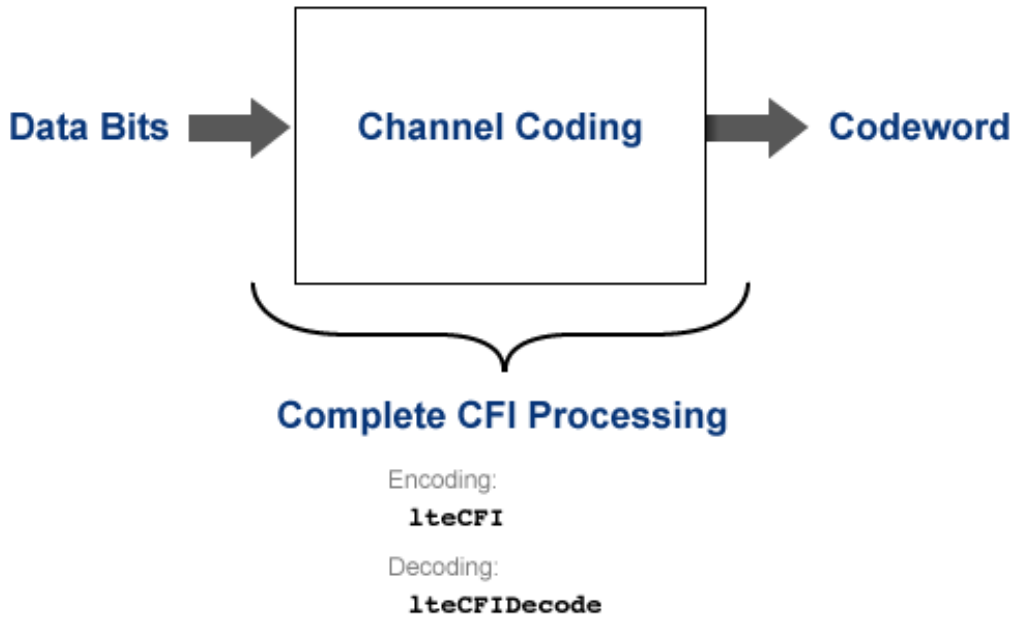

- Complete CFI processing
 - Encoding — **lteCFI**
 - Decoding — **lteCFIDecode**

Related Examples

 
- “Model CFI and PCFICH”

More About

- “Control Format Indicator (CFI) Channel”

PCFICH Processing Functions

The complete physical downlink control format indicator channel process and associated low-level and mid-level PCFICH functions are shown in the following block diagram.

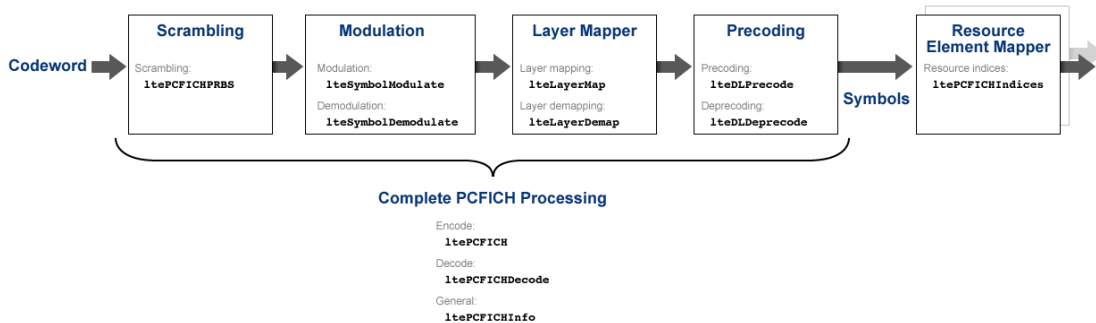

- Scrambling — ltePCFICHPRBS
- Symbol modulation and demodulation
 - Modulation — lteSymbolModulate
 - Demodulation — lteSymbolDemodulate
- Layer mapper and demapper
 - Layer mapping — lteLayerMap
 - Layer demapping — lteLayerDemap
- Precoding and deprecoding
 - Precoding — lteDLPrecode
 - Deprecoding — lteDLDeprecode
- Resource element mapper
 - Resource indices — ltePCFICHIndices
- Complete PCFICH processing
 - Encoding — ltePCFICH
 - Decoding — ltePCFICHDecode
 - General — ltePCFICHInfo

Related Examples

 
- “Model CFI and PCFICH”

More About

- “Control Format Indicator (CFI) Channel”

PRACH Processing Functions

The random access channel process and associated PRACH functions are shown in the following block diagram.

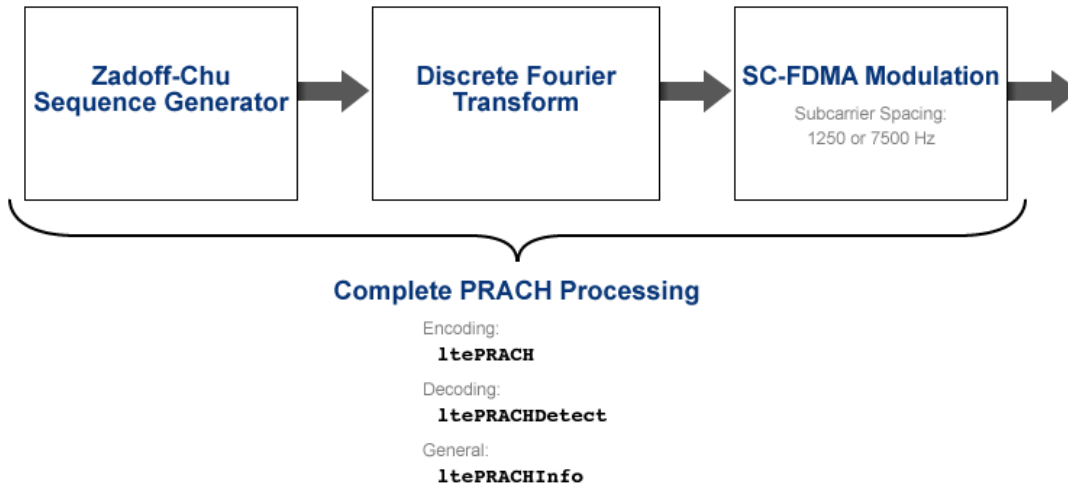

- Complete PRACH processing
 - Encoding — `ltePRACH`
 - Decoding — `ltePRACHDetect`
 - General — `ltePRACHInfo`

Related Examples

 
- “PRACH False Alarm Probability Conformance Test”
- “PRACH Detection Conformance Test”

More About

- “Random Access Channel”

BCH Processing Functions


The complete broadcast channel process and associated low-level and mid-level BCH functions are shown in the following block diagram.

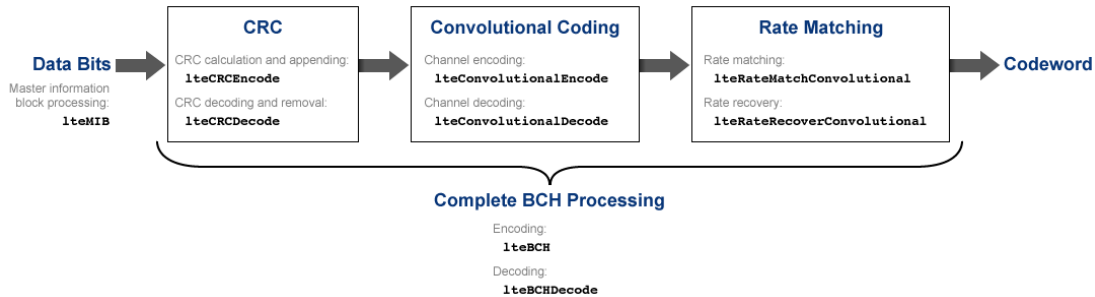

- Cyclic redundancy check (CRC)
 - CRC calculation and appending — `lteCRCEncode`
 - CRC decoding and removal — `lteCRCDecode`
- Convolutional channel encoding and decoding
 - `lteConvolutionalEncode`
 - `lteConvolutionalDecode`
- Rate matching and recovery
 - Rate matching — `lteRateMatchConvolutional`
 - Rate recovery — `lteRateRecoverConvolutional`
- Master information block (MIB) processing — `lteMIB`
- Complete BCH processing
 - Encoding — `lteBCH`
 - Decoding — `lteBCHDecode`

PBCH Processing Functions

 
The complete physical broadcast channel process and associated low-level and mid-level PBCH functions are shown in the following block diagram.

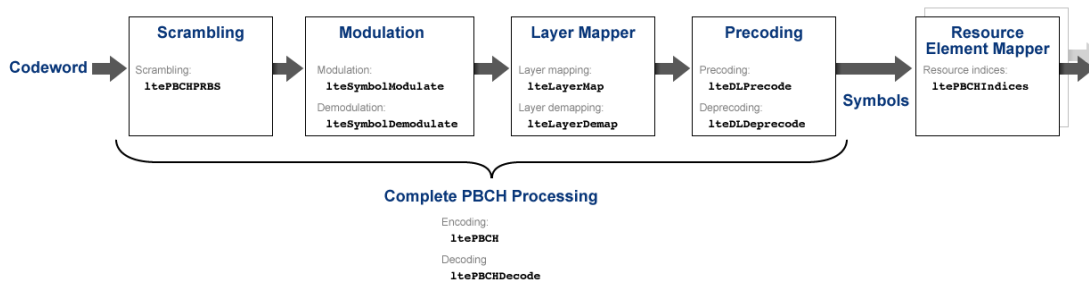

- Scrambling — ltePBCHPRBS
- Symbol modulation and demodulation
 - Modulation — lteSymbolModulate
 - Demodulation — lteSymbolDemodulate
- Layer mapper and demapper
 - Layer mapping — lteLayerMap
 - Layer demapping — lteLayerDemap
- Precoding and deprecoding
 - Precoding — lteDLPrecode
 - Deprecoding — lteDLDeencode
- Resource element mapper
 - Resource indices — ltePBCHIndices
- Complete PBCH processing
 - Encoding — ltePBCH
 - Decoding — ltePBCHDecode

PHICH Processing Functions

 The complete physical hybrid automatic repeat request (HARQ) indicator channel process and associated low-level and mid-level PHICH functions are shown in the following block diagram.

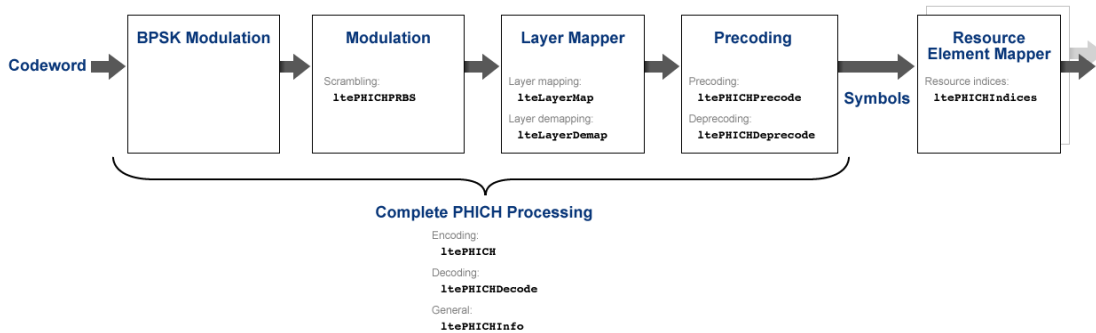

- Scrambling — ltePHICHPRBS
- Layer mapper and demapper
 - Layer mapping — lteLayerMap
 - Layer demapping — lteLayerDemap
- Precoding and deprecoding
 - Precoding — ltePHICHPrecode
 - Deprecoding — ltePHICHDeprecode
- Resource element mapper
 - Resource indices — ltePHICHIndices
- Complete PBCH processing
 - Encoding — ltePHICH
 - Decoding — ltePHICHDecode
 - General — ltePHICHInfo

Related Examples

 
- “Model HARQ Indicator and PHICH”

More About

- “HARQ Indicator (HI) Channel”

Downlink Receiver Functions

The complete downlink (DL) receiver process and associated functions are shown in the following block diagram.

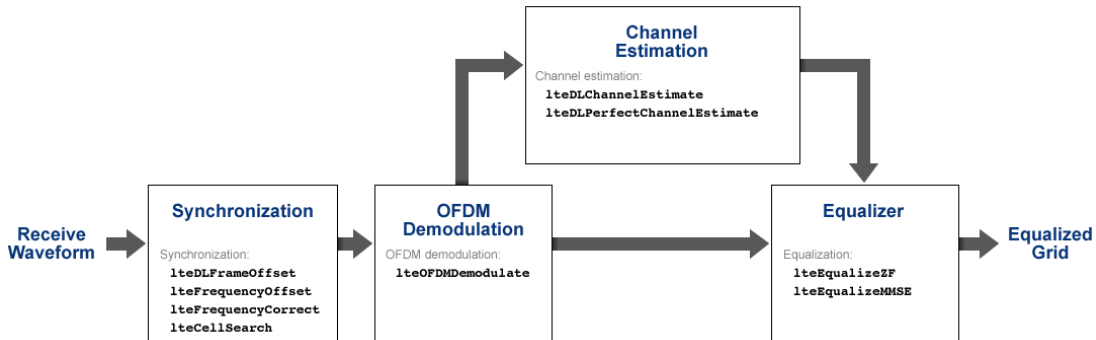

- Synchronization
 - lteDLFrameOffset
 - lteFrequencyOffset
 - lteFrequencyCorrect
 - lteCellSearch
- OFDM demodulation — lteOFDMDemodulate
- Channel estimation
 - lteDLChannelEstimate
 - lteDLPerfectChannelEstimate
- Equalization
 - lteEqualizeZF
 - lteEqualizeMMSE

Related Examples

 
- “LTE Downlink Channel Estimation and Equalization”

More About

- “Channel Estimation”

Uplink Receiver Functions

The complete uplink (UL) receiver process and associated functions are shown in the following block diagram.

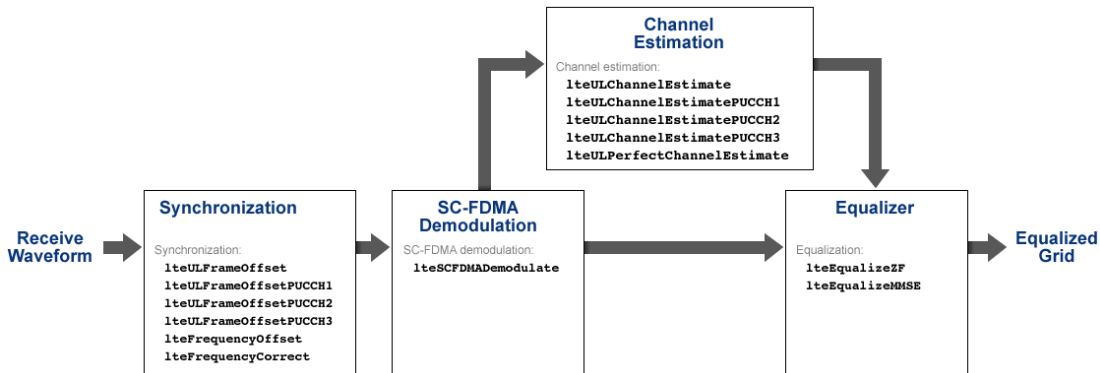

- Synchronization
 - lteULFrameOffset
 - lteULFrameOffsetPUCCH1
 - lteULFrameOffsetPUCCH2
 - lteULFrameOffsetPUCCH3
 - lteFrequencyOffset
 - lteFrequencyCorrect
- SC-FDMA demodulation — lteSCFDMADemodulate
- Channel estimation
 - lteULChannelEstimate
 - lteULChannelEstimatePUCCH1
 - lteULChannelEstimatePUCCH2
 - lteULChannelEstimatePUCCH3
 - lteULPerfectChannelEstimate
- Equalization

- lteEqualizeZF
- lteEqualizeMMSE

Related Examples

 
- “PUCCH2 CQI BLER Conformance Test”

More About

- “Channel Estimation”

OFDM Modulation and Propagation Channel Models

The orthogonal frequency-division multiplexing (OFDM) modulation process, propagation channel models, and their associated functions are shown in the following block diagram.

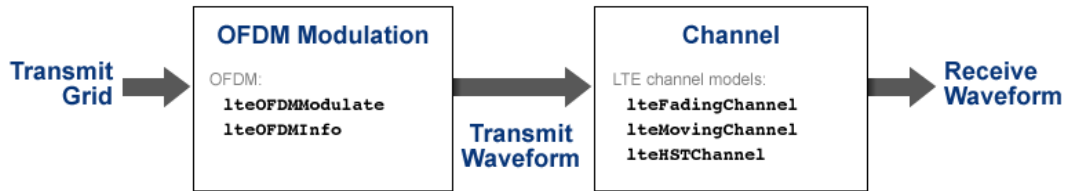

- OFDM modulation
 - `lteOFDMModulate`
 - `lteOFDMInfo`
- LTE propagation channel models
 - `lteFadingChannel`
 - `lteMovingChannel`
 - `lteHSTChannel`

Related Examples

 
- “Simulate Propagation Channels”
- “Find Channel Impulse Response”

More About

- “Propagation Channel Models”

SC-FDMA Modulation and Propagation Channel Models

The single-carrier frequency-division multiple access (SC-FDMA) modulation process, propagation channel models, and their associated functions are shown in the following block diagram.

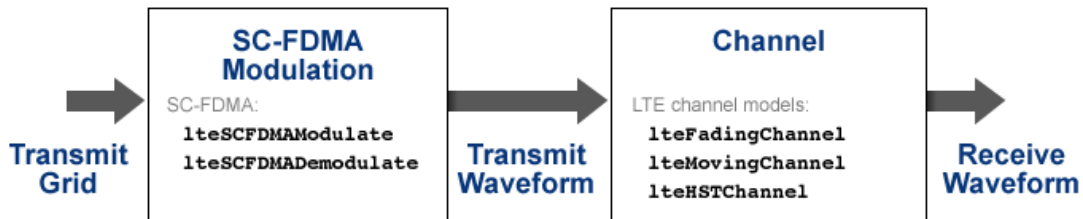

- SC-FDMA modulation
 - lteSCFDMAModulate
 - lteSCFDMADemodulate
- LTE propagation channel models
 - lteFadingChannel
 - lteMovingChannel
 - lteHSTChannel

Related Examples

- “Simulate Propagation Channels”
- “Find Channel Impulse Response”

More About

- “Propagation Channel Models”

This list defines commonly used LTE abbreviations and acronyms. These terms may appear in some or all of the documents that describe MathWorks products that model communications and LTE.

3G	Third Generation
3GPP	Third Generation Partnership Project
4G	Fourth Generation
ACK	Acknowledgement — in ARQ protocols
ACLR	Adjacent Channel Leakage Power Ratio Adjacent Channel Leakage Ratio
ARQ	Automatic Repeat Request
AWGN	Additive White Gaussian Noise
BCCH	Broadcast Control Channel
BCH	Broadcast Channel
BER	Bit Error Rate Bit Error Ratio
BLER	Block Error Rate Block Error Ratio
BPSK	Binary Phase-Shift Keying
BS	Base Station
BW	Bandwidth
CA	Carrier Aggregation
CDMA	Code Division Multiple Access
CellRS	Cell-specific Reference Signal

CFI	Control Format Indicator
CP	Cyclic Prefix
CQI	Channel Quality Indicator Channel Quality Information
CRC	Cyclic Redundancy Check
CRS	Cell-specific Reference Signal
CSI	Channel State Information
CSI-RS	CSI Reference Signals
DCI	Downlink Control Information
DL	Downlink
DL-SCH	Downlink Shared Channel
DM-RS	Demodulation Reference Signal
DRS	Demodulation Reference Signal
DwPTS	Downlink Pilot Time Slot — the downlink part of the special subframe, for TDD operation
eICIC	Enhanced Inter-Cell Interference Coordination
eMBMS	Evolved Multimedia Broadcast and Multicast Service
eNB	eNodeB
eNodeB	E-UTRAN NodeB
EPA	Extended Pedestrian A
EPC	Evolved Packet Core
EPDCCH	Enhanced Physical Downlink Control Channel
EPS	Evolved Packet System

E-TM	E-UTRA Test Model
ETU	Extended Typical Urban model
E-UTRA	Evolved UTRA
E-UTRAN	Evolved UTRAN
EVA	Extended Vehicular A
EVM	Error Vector Magnitude
FDD	Frequency Division Duplex
FDM	Frequency Division Multiplex
FDMA	Frequency Division Multiple Access
FFT	Fast Fourier Transform
FRC	Fixed Reference Channel
GP	Guard Period
GPRS	General Packet Radio Service
GSM	Global System for Mobile communications
HARQ	Hybrid ARQ
HetNets	Heterogeneous Networks
HI	HARQ Indicator
HST	High Speed Train
ICIC	Inter-Cell Interference Coordination
IFFT	Inverse Fast Fourier Transform
IP	Internet Protocol
LCS	Location Services

LLR	Log-Likelihood Ratio
LTE	Long Term Evolution
MAC	Medium Access Control
MIB	Master Information Block
MIMO	Multiple-Input Multiple-Output
ML	Maximum Likelihood
MMSE	Minimum Mean Square Error
NACK	Negative Acknowledgement — in ARQ protocols
NAK	Negative Acknowledgement — in ARQ protocols
NodeB	A logical node handling transmission and reception in multiple cells. A NodeB commonly, but not necessarily, corresponds to a base station.
NRE	Number of Resource Elements
OFDM	Orthogonal Frequency Division Multiplexing
OFDMA	Orthogonal Frequency Division Multiple Access
OSFBC	Orthogonal Space Frequency Block Code
PBCH	Physical Broadcast Channel
PCFICH	Physical Control Format Indicator Channel
PDCCH	Physical Downlink Control Channel
PDCP	Packet Data Convergence Protocol
PDSCH	Physical Downlink Shared Channel
PHICH	Physical Hybrid-ARQ Indicator Channel
PHY	Physical layer

PLMN	Public Land Mobile Network
PMI	Precoding Matrix Indicator
PRACH	Physical Random Access Channel
PRB	Physical Resource Block
PRBS	Pseudorandom Binary Sequence
PRS	Positioning Reference Signal
PSD	Power Spectral Density
PSS	Primary Synchronization Signal
PUCCH	Physical Uplink Control Channel
PUSCH	Physical Uplink Shared Channel
QAM	Quadrature Amplitude Modulation
QPSK	Quadrature Phase Shift Keying Quaternary Phase Shift Keying
RACH	Random Access Channel
RB	Resource Block
RE	Resource Element
REG	Resource Element Group
RI	Rank Indication Rank Indicator
RLC	Radio Link Control
RMC	Reference Measurement Channel
RMS	Root Mean Square

RNTI	Radio Network Temporary Identifier
RS	Reference Symbol
RV	Redundancy Version
RX	Receive
	Receiver
SC-FDMA	Single Carrier Frequency Division Multiple Access
SFN	System Frame Number
SI	System Information
SIB	System Information Block
SIB1	System Information Block type 1
SRS	Sounding Reference Signal
SSS	Secondary Synchronization Signal
TBS	Transport Block Size
TDD	Time Division Duplex
TDMA	Time Division Multiple Access
TDOA	Time Difference of Arrival
TPC	Transmit Power Control
TS	Technical Specification
TX	Transmit
	Transmitter
UCI	Uplink Control Information
UE	User Equipment — the 3GPP name for the mobile terminal

UE-RS	UE-specific Reference Signal
UL	Uplink
UL-SCH	Uplink Shared Channel
UMTS	Universal Mobile Telecommunication System
UpPTS	Uplink Pilot Time Slot — the uplink part of the special subframe, for TDD operation
UTRA	Universal Terrestrial Radio Access
UTRAN	Universal Terrestrial Radio Access Network
WiMAX	Worldwide interoperability for Microwave Access
ZF	Zero Forcing

Selected Bibliography

- [1] 3GPP TS 36.101. “User Equipment (UE) Radio Transmission and Reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [2] 3GPP TS 36.104. “Base Station (BS) radio transmission and reception.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [3] 3GPP TS 36.141. “Base Station (BS) conformance testing.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [4] 3GPP TS 36.211. “Physical Channels and Modulation.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [5] 3GPP TS 36.212. “Multiplexing and channel coding.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [6] 3GPP TS 36.213. “Physical layer procedures.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [7] 3GPP TS 36.214. “Physical layer — Measurements.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.
- [8] 3GPP TS 36.321. “Medium Access Control (MAC) protocol specification.” *3rd Generation Partnership Project; Technical Specification Group Radio Access Network; Evolved Universal Terrestrial Radio Access (E-UTRA)*. URL: <http://www.3gpp.org>.

- [9] 3GPP TR 21.905. “Vocabulary for 3GPP Specifications.” *3rd Generation Partnership Project; Technical Specification Group Services*. URL: <http://www.3gpp.org>.
- [10] Chu, D. C. “Polyphase codes with good periodic correlation properties.” *IEEE Trans. Inf. Theory*. Vol. 18, Number 4, July 1972, pp. 531–532.
- [11] Dahlman, E., Parkvall, S., and Sköld, J.. *4G LTE / LTE-Advanced for Mobile Broadband*. Kidlington, Oxford: Academic Press, 2011. p. 112.
- [12] Dent, P., G. E. Bottomley, and T. Croft. “Jakes Fading Model Revisited.” *Electronics Letters*. Vol. 29, 1993, Number 13, pp. 1162–1163.
- [13] Nohrborg, Magdalena, for 3GPP. “LTE Overview.” *3GPP, A Global Initiative, THE Mobile Broadband Standard*, August 2013. <http://www.3gpp.org/LTE>.
- [14] Pätzold, Matthias, Cheng-Xiang Wang, and Bjørn Olav Hogstad. “Two New Sum-of-Sinusoids-Based Methods for the Efficient Generation of Multiple Uncorrelated Rayleigh Fading Waveforms.” *IEEE Transactions on Wireless Communications*. Vol. 8, 2009, Number 6, pp. 3122–3131.
- [15] Strang, Gilbert. *Linear Algebra and Its Application*. Academic Press, 1980. 2nd Edition.