


Robotics System Toolbox™

Reference

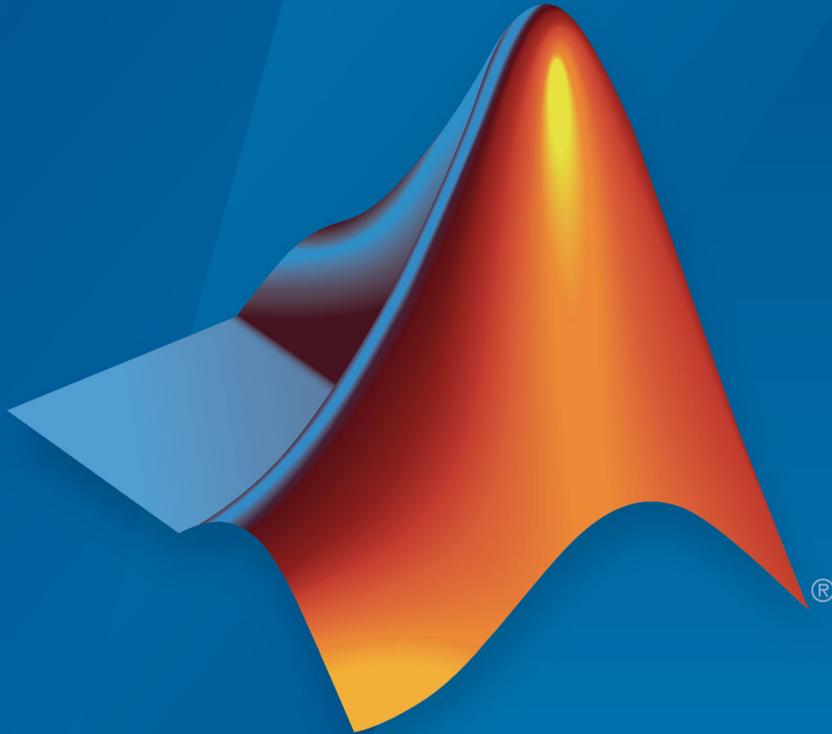

MATLAB® & SIMULINK®

R2019b



How to Contact MathWorks



Latest news: www.mathworks.com
Sales and services: www.mathworks.com/sales_and_services
User community: www.mathworks.com/matlabcentral
Technical support: www.mathworks.com/support/contact_us



Phone: 508-647-7000



The MathWorks, Inc.
1 Apple Hill Drive
Natick, MA 01760-2098

Robotics System Toolbox™ Reference

© COPYRIGHT 2015–2019 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

MathWorks products are protected by one or more U.S. patents. Please see www.mathworks.com/patents for more information.

Revision History

March 2015	Online only	New for Version 1.0 (R2015a)
September 2015	Online only	Revised for Version 1.1 (R2015b)
October 2015	Online only	Rereleased for Version 1.0.1 (Release 2015aSP1)
March 2016	Online only	Revised for Version 1.2 (R2016a)
September 2016	Online only	Revised for Version 1.3 (R2016b)
March 2017	Online only	Revised for Version 1.4 (R2017a)
September 2017	Online only	Revised for Version 1.5 (R2017b)
March 2018	Online only	Revised for Version 2.0 (R2018a)
September 2018	Online only	Revised for Version 2.1 (R2018b)
March 2019	Online only	Revised for Version 2.2 (R2019a)
September 2019	Online only	Revised for Version 3.0 (R2019b)

1 | Classes – Alphabetical List

2 | Functions – Alphabetical List

3 | Methods – Alphabetical List

4 | Blocks – Alphabetical List


Classes — Alphabetical List

ackermannKinematics

Car-like steering vehicle model

Description

`ackermannKinematics` creates a car-like vehicle model that uses Ackermann steering. This model represents a vehicle with two axles separated by the distance, `Wheelbase`. The state of the vehicle is defined as a four-element vector, $[x \ y \ \theta \ \psi]$, with a global xy -position, specified in meters. The vehicle heading, θ , and steering angle, ψ are specified in radians. The vehicle heading is defined at the center of the rear axle. Angles are given in radians. To compute the time derivative states for the model, use the derivative function with input steering commands and the current robot state.

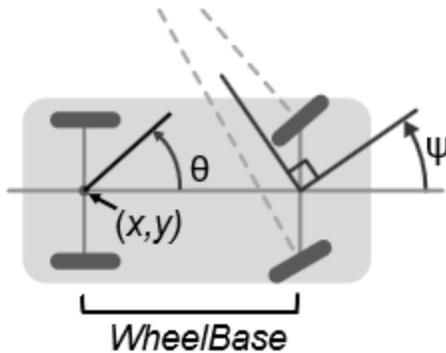

Creation

Syntax

```
kinematicModel = ackermannKinematics
```

```
kinematicModel = ackermannKinematics(Name,Value)
```

Description

`kinematicModel = ackermannKinematics` creates an Ackermann kinematic model object with default property values.

`kinematicModel = ackermannKinematics(Name,Value)` sets additional properties to the specified values. You can specify multiple properties in any order.

Properties

WheelBase — Distance between front and rear axles

1 (default) | positive numeric scalar

The wheel base refers to the distance between the front and rear axles, specified in meters.

WheelSpeedRange — Range of vehicle wheel speeds

[-Inf Inf] (default) | two-element vector

The vehicle speed range is a two-element vector that provides the minimum and maximum vehicle speeds, [*MinSpeed MaxSpeed*], specified in meters per second.

Object Functions

`derivative` Time derivative of vehicle state

Examples

Plot Path of Ackermann Kinematic Robot

Create a Robot

Define a robot and set the initial starting position and orientation.

```
kinematicModel = ackermannKinematics;  
initialState = [0 0 0 0];
```


Simulate Robot Motion

Set the timespan of the simulation to 1 s with 0.05 s timesteps and the input commands to 10 m/s and left turn. Simulate the motion of the robot by using the ode45 solver on the derivative function.

```
tspan = 0:0.05:1;  
cmds = [10 1]; % 10m/s velocity and left turn  
[t,y] = ode45(@(t,y)derivative(kinematicModel,y,cmds),tspan,initialState);
```

Plot path

```
figure  
plot(y(:,1),y(:,2))
```

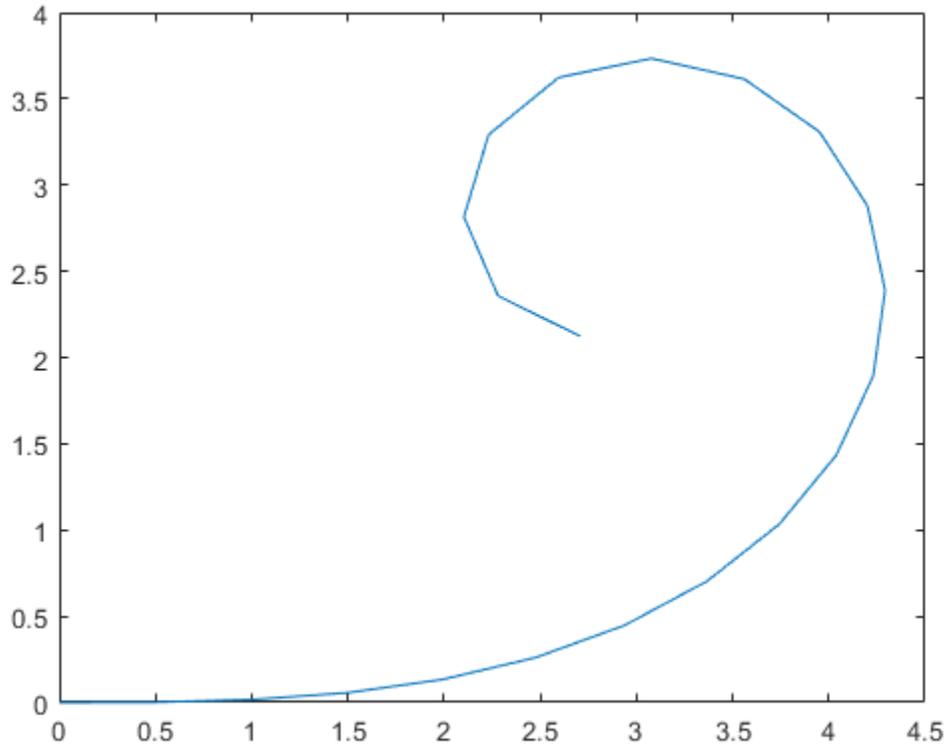

References

- [1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning, and Control* 1st ed. Cambridge, MA: Cambridge University Press, 2017.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

bicycleKinematics | differentialDriveKinematics | unicycleKinematics

Blocks

Ackermann Kinematic Model

Functions

derivative


Introduced in R2019b

bicycleKinematics

Bicycle vehicle model

Description

`bicycleKinematics` creates a bicycle vehicle model to simulate simplified car-like vehicle dynamics. This model represents a vehicle with two axles separated by a distance, `WheelBase`. The state of the vehicle is defined as a three-element vector, $[x \ y \ \theta]$, with a global xy -position, specified in meters, and a vehicle heading angle, θ , specified in radians. The front wheel can be turned with steering angle ψ . The vehicle heading, θ , is defined at the center of the rear axle. To compute the time derivative states of the model, use the `derivative` function with input commands and the current robot state.

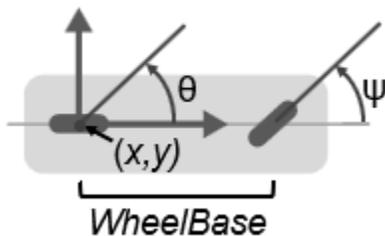

Creation

Syntax

```
kinematicModel = bicycleKinematics
```

```
kinematicModel = bicycleKinematics(Name, Value)
```

Description

`kinematicModel = bicycleKinematics` creates a bicycle kinematic model object with default property values.

`kinematicModel = bicycleKinematics(Name, Value)` sets additional properties to the specified values. You can specify multiple properties in any order.

Properties

WheelBase — Distance between front and rear axles

1 (default) | positive numeric scalar

The wheel base refers to the distance between the front and rear vehicle axles, specified in meters.

VehicleSpeedRange — Range of vehicle speeds

[- Inf Inf] (default) | positive numeric scalar

The vehicle speed range is a two-element vector that provides the minimum and maximum vehicle speeds, [*MinSpeed MaxSpeed*], specified in meters per second.

MaxSteeringAngle — Maximum steering angle

$\pi/4$ (default) | numeric scalar

The maximum steering angle, *psi*, refers to the maximum angle the vehicle can be steered to the right or left, specified in radians. A value of $\pi/2$ provides the vehicle with a minimum turning radius of 0. This property is used to validate the user-provided state input.

MinimumTurningRadius — Minimum vehicle turning radius

1.0000 (default) | numeric scalar

This read-only property returns the minimum vehicle turning radius in meters. The minimum radius is computed using the wheel base and the maximum steering angle.

VehicleInputs — Type of motion inputs for vehicle

"VehicleSpeedSteeringAngle" (default) | character vector | string scalar

The `VehicleInputs` property specifies the format of the model input commands when using the derivative function. The property has two valid options, specified as a string or character vector:

- "VehicleSpeedSteeringAngle" — Vehicle speed and steering angle
- "VehicleSpeedHeadingRate" — Vehicle speed and heading angular velocity

Object Functions

`derivative` Time derivative of vehicle state

Examples

Plot Path of Bicycle Kinematic Robot

Create a Robot

Define a robot and set the initial starting position and orientation.

```
kinematicModel = bicycleKinematics;  
initialState = [0 0 0];
```


Simulate Robot Motion

Set the timespan of the simulation to 1 s with 0.05 s timesteps and the input commands to 2 m/s and left turn. Simulate the motion of the robot by using the `ode45` solver on the derivative function.

```
tspan = 0:0.05:1;  
inputs = [2 pi/4]; %Turn left  
[t,y] = ode45(@(t,y)derivative(kinematicModel,y,inputs),tspan,initialState);
```

Plot path

```
figure  
plot(y(:,1),y(:,2))
```

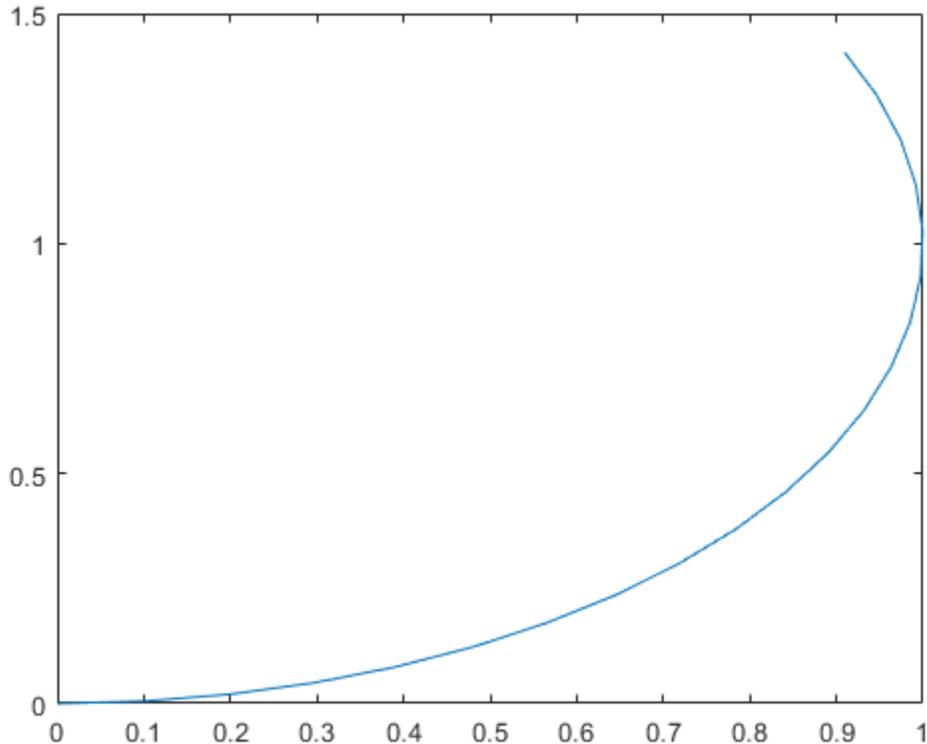

References

- [1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning, and Control* 1st ed. Cambridge, MA: Cambridge University Press, 2017.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

[ackermannKinematics](#) | [differentialDriveKinematics](#) | [unicycleKinematics](#)

Blocks

Bicycle Kinematic Model

Functions

[derivative](#)

Topics

[“Simulate Different Kinematic Models for Mobile Robots”](#)

Introduced in R2019b

binaryOccupancyMap

Create occupancy grid with binary values

Description

The `binaryOccupancyMap` creates a 2-D occupancy map object, which you can use to represent and visualize a robot workspace, including obstacles. The integration of sensor data and position estimates create a spatial representation of the approximate locations of the obstacles.

Occupancy grids are used in robotics algorithms such as path planning. They are also used in mapping applications, such as for finding collision-free paths, performing collision avoidance, and calculating localization. You can modify your occupancy grid to fit your specific application.

Each cell in the occupancy grid has a value representing the occupancy status of that cell. An occupied location is represented as `true` (1) and a free location is represented as `false` (0).

The object keeps track of three reference frames: world, local, and grid. The world frame origin is defined by `GridLocationInWorld`, which defines the bottom-left corner of the map relative to the world frame. The `LocalOriginInWorld` property specifies the location of the origin of the local frame relative to the world frame. The first grid location with index (1, 1) begins in the top-left corner of the grid.

Note This object was previously named `robotics.BinaryOccupancyGrid`.

Creation

Syntax

```
map = binaryOccupancyMap  
map = binaryOccupancyMap(width,height)
```

```
map = binaryOccupancyMap(width,height,resolution)
```

```
map = binaryOccupancyMap(rows,cols,resolution,"grid")
```

```
map = binaryOccupancyMap(p)
```

```
map = binaryOccupancyMap(p,resolution)
```

```
map = binaryOccupancyMap(p,resolution)
```

```
map = binaryOccupancyMap(sourcemap)
```

```
map = binaryOccupancyMap(sourcemap,resolution)
```

Description

`map = binaryOccupancyMap` creates a 2-D binary occupancy grid with a width and height of 10m. The default grid resolution is one cell per meter.

`map = binaryOccupancyMap(width,height)` creates a 2-D binary occupancy grid representing a work space of width and height in meters. The default grid resolution is one cell per meter.

`map = binaryOccupancyMap(width,height,resolution)` creates a grid with the `Resolution` property specified in cells per meter. The map is in world coordinates by default.

`map = binaryOccupancyMap(rows,cols,resolution,"grid")` creates a 2-D binary occupancy grid of size (rows,cols).

`map = binaryOccupancyMap(p)` creates a grid from the values in matrix `p`. The size of the grid matches the size of the matrix, with each cell value interpreted from its location in the matrix. `p` contains any numeric or logical type with zeros (0) and ones (1).

`map = binaryOccupancyMap(p,resolution)` creates a map from a matrix with the `Resolution` property specified in cells per meter.

`map = binaryOccupancyMap(p,resolution)` creates an object with the `Resolution` property specified in cells per meter.

`map = binaryOccupancyMap(sourcemap)` creates an object using values from another `binaryOccupancyMap` object.

`map = binaryOccupancyMap(sourcemap, resolution)` creates an object using values from another `binaryOccupancyMap` object, but resamples the matrix to have the specified resolution.

Input Arguments

width — Map width

positive scalar

Map width, specified as a positive scalar in meters.

height — Map height

positive scalar

Map height, specified as a positive scalar in meters.

p — Map grid values

matrix

Map grid values, specified as a matrix.

sourcemap — Occupancy map object

`binaryOccupancyMap` object

Occupancy map object, specified as a `binaryOccupancyMap` object.

Properties

GridSize — Number of rows and columns in grid

two-element horizontal vector

This property is read-only.

Number of rows and columns in grid, stored as a two-element horizontal vector of the form `[rows cols]`.

Resolution — Grid resolution

1 (default) | scalar in cells per meter

This property is read-only.

Grid resolution, stored as a scalar in cells per meter.

XLocalLimits — Minimum and maximum values of x-coordinates in local frame

two-element vector

This property is read-only.

Minimum and maximum values of x-coordinates in local frame, stored as a two-element horizontal vector of the form [min max]. Local frame is defined by LocalOriginInWorld property.

YLocalLimits — Minimum and maximum values of y-coordinates in local frame

two-element vector

This property is read-only.

Minimum and maximum values of y-coordinates in local frame, stored as a two-element horizontal vector of the form [min max]. Local frame is defined by LocalOriginInWorld property.

XWorldLimits — Minimum and maximum values of x-coordinates in world frame

two-element vector

This property is read-only.

Minimum and maximum values of x-coordinates in world frame, stored as a two-element horizontal vector of the form [min max]. These values indicate the world range of the x-coordinates in the grid.

YWorldLimits — Minimum and maximum values of y-coordinates

two-element vector

This property is read-only.

Minimum and maximum values of y-coordinates, stored as a two-element vector of the form [min max]. These values indicate the world range of the y-coordinates in the grid.

GridLocationInWorld — Location of the grid in world coordinates

[0 0] (default) | two-element vector | [xGrid yGrid]

Location of the bottom-left corner of the grid in world coordinates, specified as a two-element vector, [xGrid yGrid].

LocalOriginInWorld — Location of the local frame in world coordinates

[0 0] (default) | two-element vector | [xWorld yWorld]

Location of the origin of the local frame in world coordinates, specified as a two-element vector, [xLocal yLocal]. Use the move function to shift the local frame as your vehicle moves.

GridOriginInLocal — Location of the grid in local coordinates

[0 0] (default) | two-element vector | [xLocal yLocal]

Location of the bottom-left corner of the grid in local coordinates, specified as a two-element vector, [xLocal yLocal].

DefaultValue — Default value for unspecified map locations

0 (default) | 1

Default value for unspecified map locations including areas outside the map, specified as 0 or 1.

Object Functions

checkOccupancy	Check occupancy values for locations
getOccupancy	Get occupancy value of locations
grid2local	Convert grid indices to local coordinates
grid2world	Convert grid indices to world coordinates
inflate	Inflate each occupied grid location
insertRay	Insert ray from laser scan observation
local2grid	Convert local coordinates to grid indices
local2world	Convert local coordinates to world coordinates
move	Move map in world frame
occupancyMatrix	Convert occupancy grid to matrix
raycast	Compute cell indices along a ray
rayIntersection	Find intersection points of rays and occupied map cells
setOccupancy	Set occupancy value of locations
show	Show occupancy grid values
syncWith	Sync map with overlapping map
world2grid	Convert world coordinates to grid indices
world2local	Convert world coordinates to local coordinates

Examples


Create and Modify Binary Occupancy Grid

Create a 10m x 10m empty map.

```
map = binaryOccupancyMap(10,10,10);
```


Set occupancy of world locations and show map.

```
x = [1.2; 2.3; 3.4; 4.5; 5.6];  
y = [5.0; 4.0; 3.0; 2.0; 1.0];  
  
setOccupancy(map, [x y], ones(5,1))  
figure  
show(map)
```

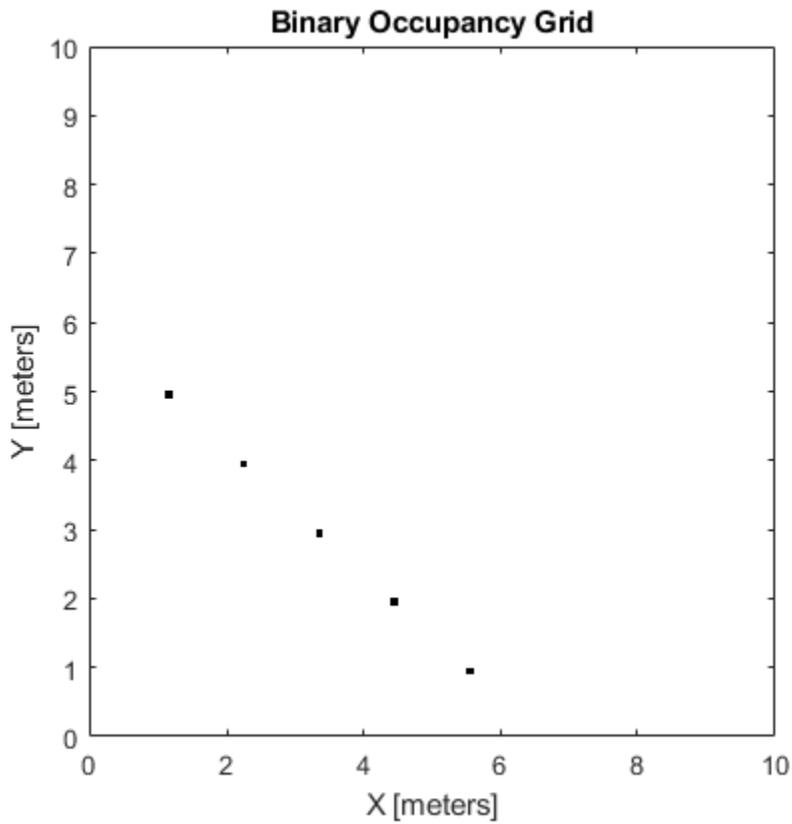

Inflate occupied locations by a given radius.

```
inflate(map, 0.5)  
figure  
show(map)
```

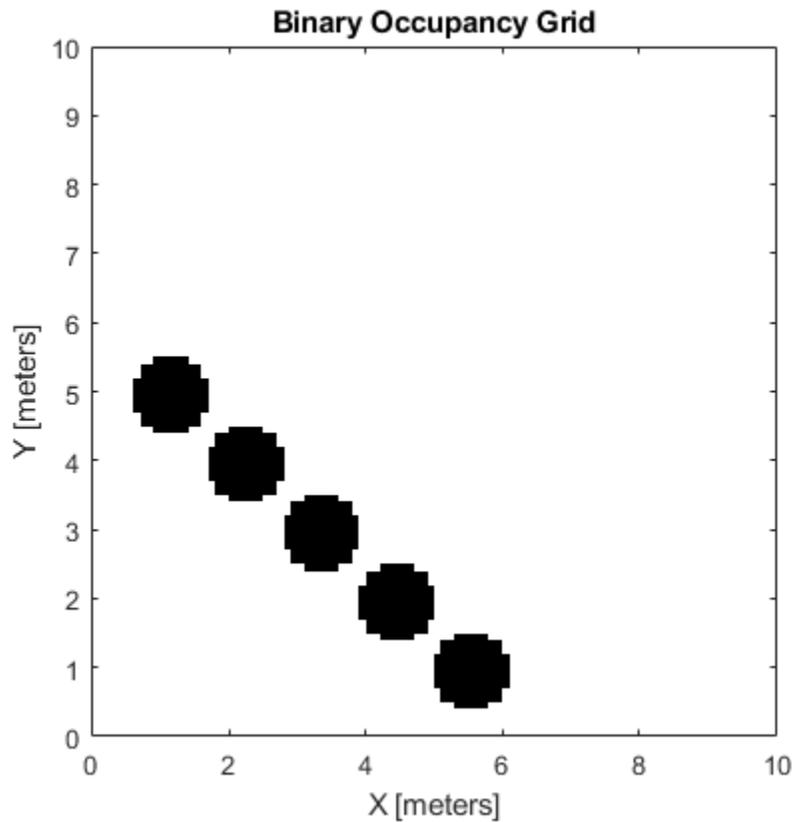

Get grid locations from world locations.

```
ij = world2grid(map, [x y]);
```

Set grid locations to free locations.

```
setOccupancy(map, ij, zeros(5,1), 'grid')
```

```
figure
```

```
show(map)
```

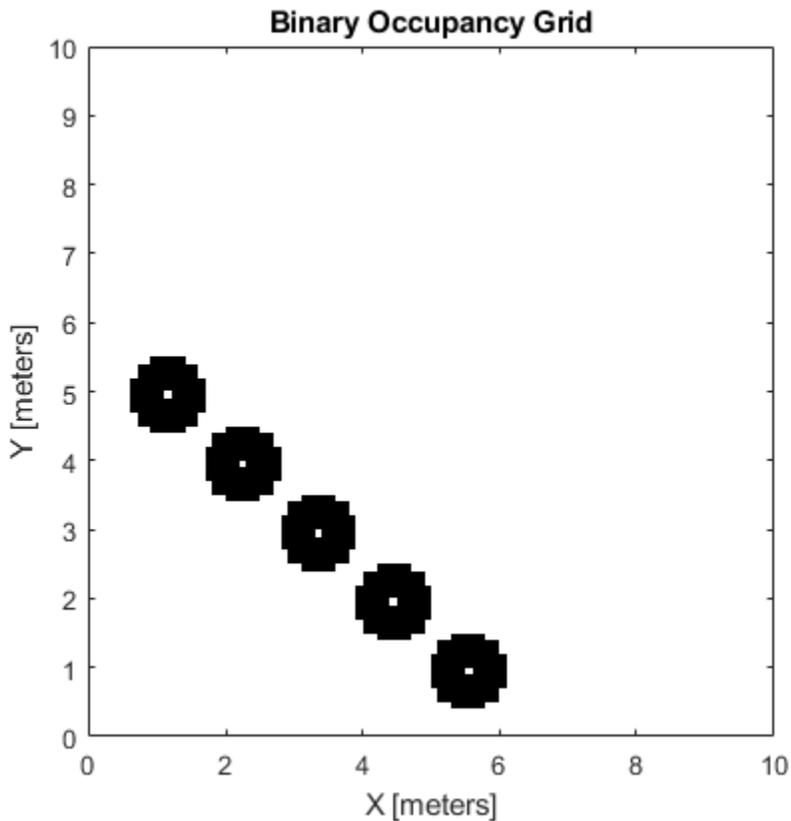


Image to Binary Occupancy Grid Example

This example shows how to convert an image to a binary occupancy grid for using with mapping and path planning.

Import image.


```
image = imread('imageMap.png');
```

Convert to grayscale and then black and white image based on given threshold value.

```
grayimage = rgb2gray(image);  
bwimage = grayimage < 0.5;
```

Use black and white image as matrix input for binary occupancy grid.

```
grid = binaryOccupancyMap(bwimage);  
show(grid)
```

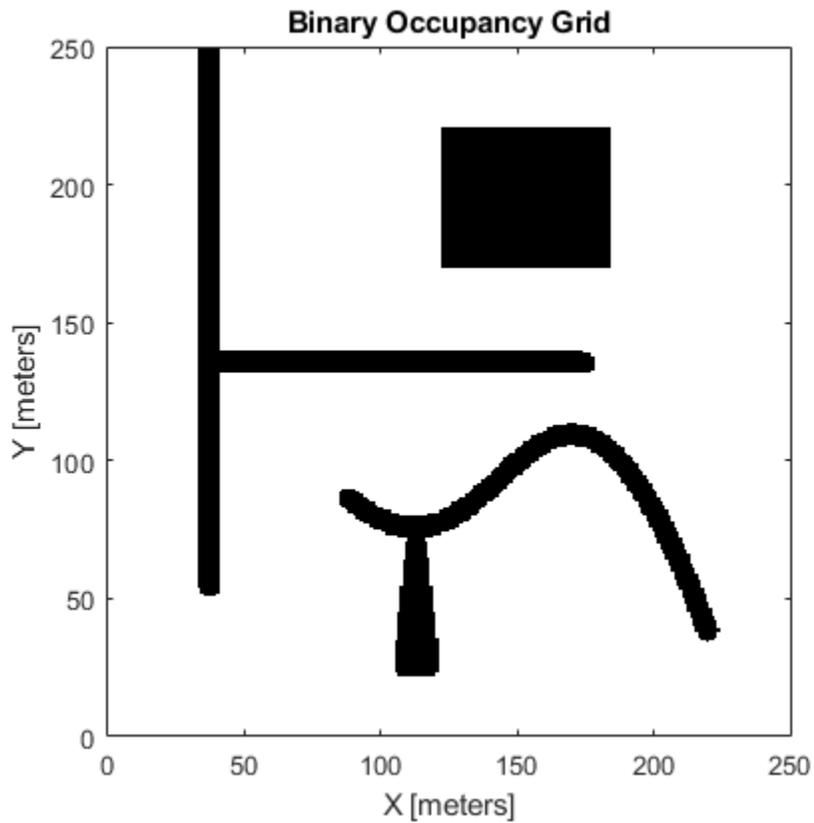


Convert PGM Image to Map

This example shows how to convert a .pgm file into a `binaryOccupancyMap` object for use in MATLAB.


Import image using `imread`. The image is quite large and should be cropped to the relevant area.

```
image = imread('playpen_map.pgm');  
imageCropped = image(750:1250,750:1250);  
imshow(imageCropped)
```

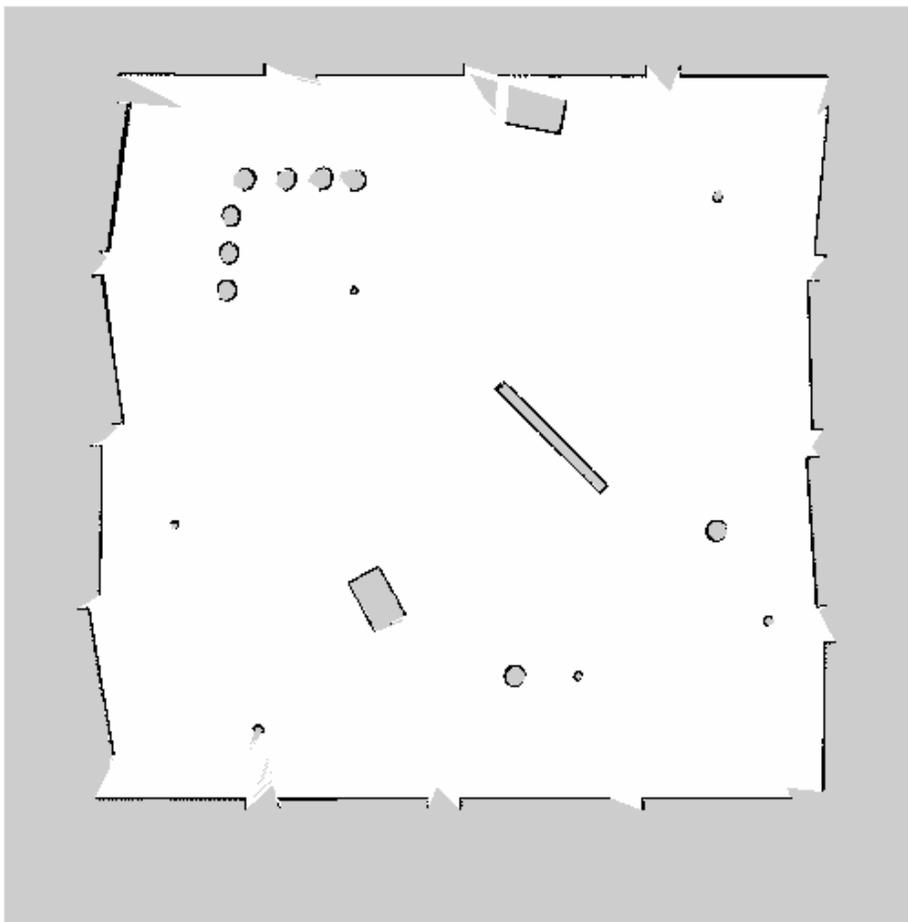


Unknown areas (gray) should be removed and treated as free space. Create a logical matrix based on a threshold. Depending on your image, this value could be different. Occupied space should be set as 1 (white in image).

```
imageBW = imageCropped < 100;  
imshow(imageBW)
```

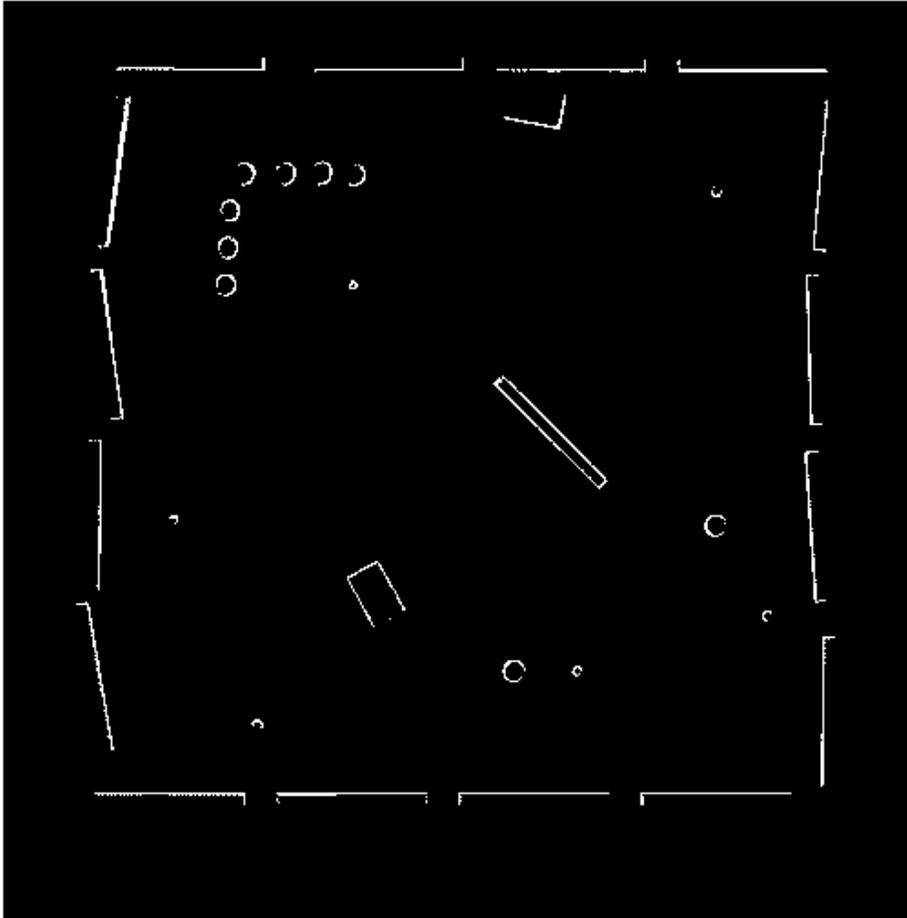

Create `binaryOccupancyMap` object using adjusted map image.

```
map = binaryOccupancyMap(imageBW);  
show(map)
```

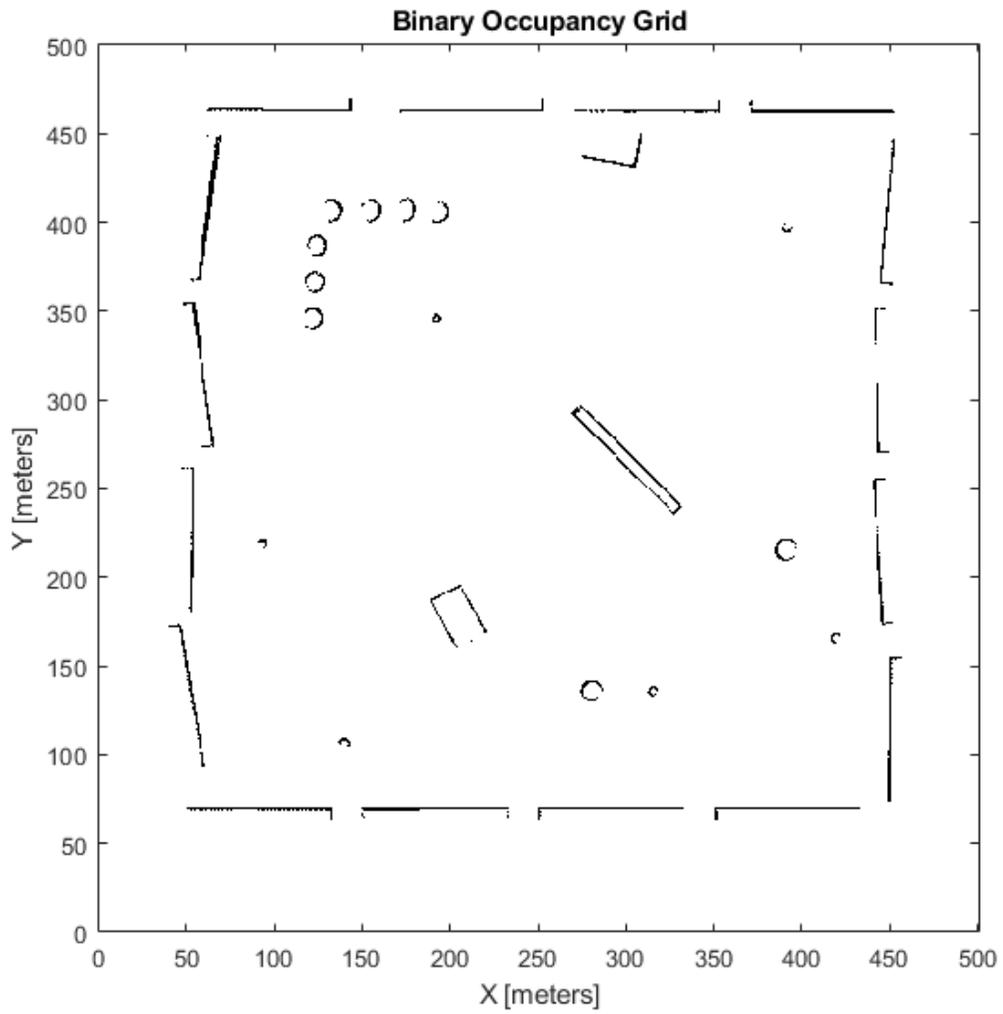

Compatibility Considerations

binaryOccupancyMap was renamed

Behavior change in future release

The `binaryOccupancyMap` object was renamed from `robotics.BinaryOccupancyGrid`. Use `binaryOccupancyMap` for all object creation.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`controllerPurePursuit` | `mobileRobotPRM`

Topics

“Occupancy Grids”

Introduced in R2015a

collisionBox

Create box collision geometry

Description

Use `collisionBox` to create a box collision geometry centered at the origin.

Creation

Syntax

```
BOX = collisionBox(X,Y,Z)
```

Description

`BOX = collisionBox(X,Y,Z)` creates an axis-aligned box collision geometry centered at the origin with X, Y, and Z as its side lengths along the corresponding axes in the geometry-fixed frame. By default, the geometry-fixed frame collocates with the world frame.

Properties

X — Side length of box geometry

positive scalar

Side length of box geometry along the x-axis, specified as a positive scalar. Units are in meters.

Data Types: double

Y — Side length of box geometry

positive scalar

Side length of box geometry along the y-axis, specified as a positive scalar. Units are in meters.

Data Types: double

Z — Side length of box geometry

positive scalar

Side length of box geometry along the z-axis, specified as a positive scalar. Units are in meters.

Data Types: double

Pose — Pose

eye(4) (default) | real-valued matrix

Pose of the collision geometry relative to the world frame, specified as a 4-by-4 homogeneous matrix. You can change the pose after you create the collision geometry.

Data Types: double

Object Functions

show Show collision geometry

Examples

Create and Visualize Box Collision Geometry

Create a box collision geometry centered at the origin. The side lengths in the x-, y-, and z-directions are 3, 1, and 2 meters, respectively.

```
box = collisionBox(3,1,2)
```

```
box =  
    collisionBox with properties:
```

```
    X: 3
```


```
    Y: 1
```

```
    Z: 2
```

```
    Pose: [4x4 double]
```

Visualize the box.

```
show(box)
title('Box')
```

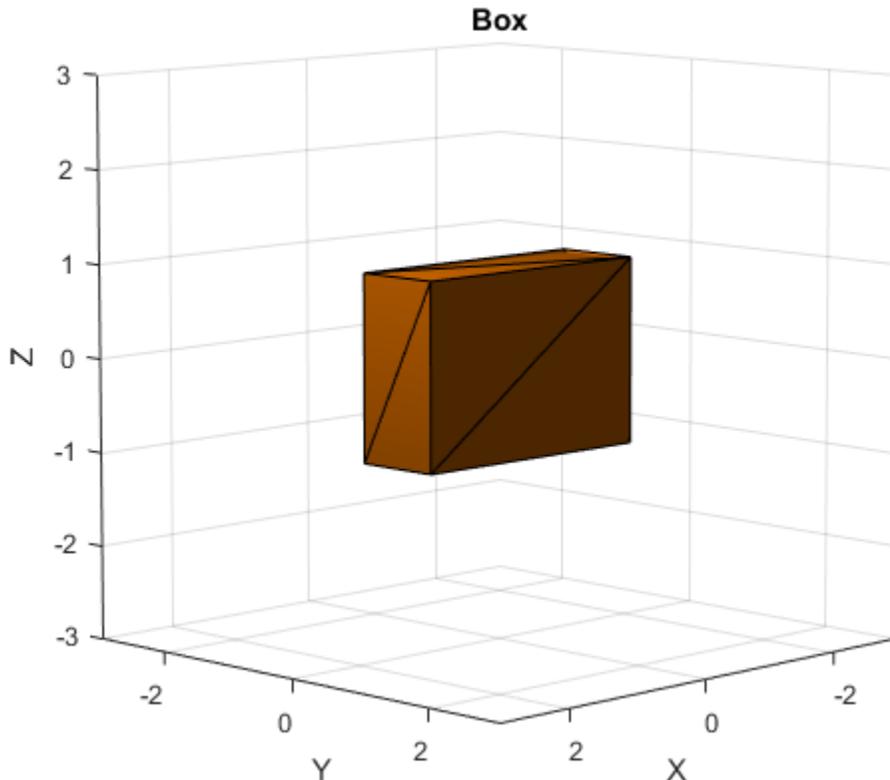


Create two homogeneous transformation matrices. The first matrix is a rotation about the z -axis by $\pi/2$ radians, and the second matrix is a rotation about the x -axis of $\pi/8$ radians.

```
matZ = axang2tform([0 0 1 pi/2]);
matX = axang2tform([1 0 0 pi/8]);
```

Create a second box collision geometry with the same dimensions as the first. Change its pose to the product of the two matrices. The product corresponds to first rotation about the z -axis followed by rotation about the x -axis. Visualize the result.

```
box2 = collisionBox(3,1,2);  
box2.Pose = matZ*matX;  
show(box2)  
title('Box2')
```

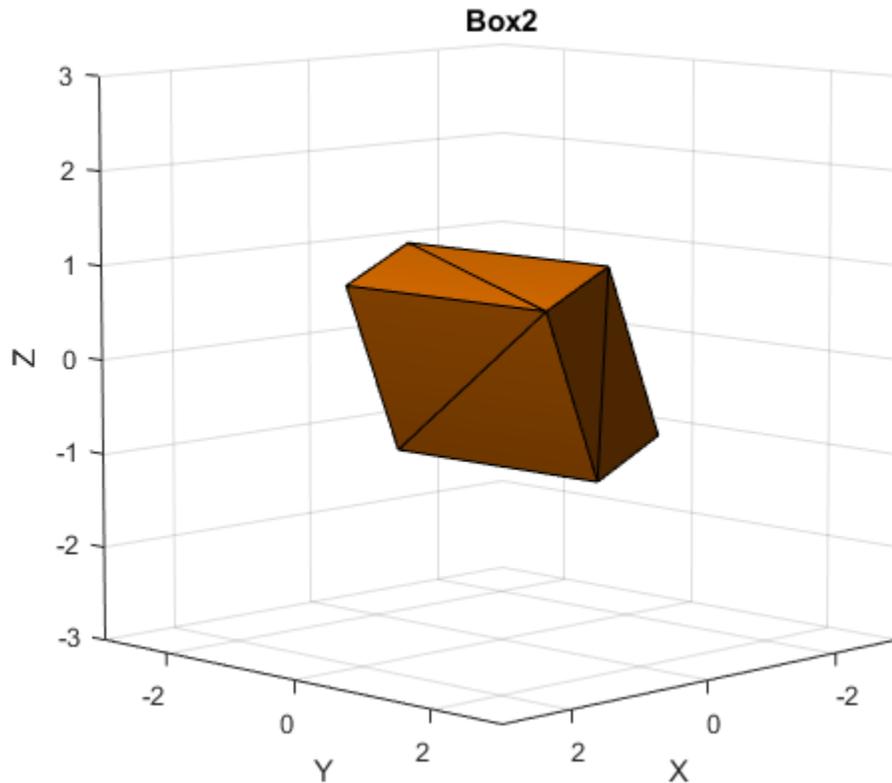

See Also

[checkCollision](#) | [collisionCylinder](#) | [collisionMesh](#) | [collisionSphere](#)

Introduced in R2019b

collisionCylinder

Create collision cylinder geometry

Description

Use `collisionCylinder` to create a cylinder collision geometry centered at the origin.

Creation

Syntax

```
CYL = collisionCylinder(Radius,Length)
```

Description

`CYL = collisionCylinder(Radius,Length)` creates a cylinder collision geometry with a specified `Radius` and `Length`. The cylinder is axis-aligned with its own body-fixed frame. The side of the cylinder lies along the `z`-axis. The origin of the body-fixed frame is at the center of the cylinder.

Properties

Radius — Radius

positive scalar

Radius of cylinder, specified as a positive scalar. Units are in meters.

Data Types: `double`

Length — Length

positive scalar

Length of cylinder, specified as a positive scalar. Units are in meters.

Data Types: double

Pose — Pose

`eye(4)` (default) | real-valued matrix

Pose of the collision geometry relative to the world frame, specified as a 4-by-4 homogeneous matrix. You can change the pose after you create the collision geometry.

Data Types: double

Object Functions

`show` Show collision geometry

Examples

Create and Visualize Cylinder Collision Geometry


Create a cylinder collision geometry centered at the origin. The cylinder is 4 meters long with a radius of 1 meter.

```
rad = 1;
len = 4;
cyl = collisionCylinder(rad,len)

cyl =
    collisionCylinder with properties:
        Radius: 1
        Length: 4
        Pose: [4x4 double]
```


Visualize the cylinder.

```
show(cyl)
title('Cylinder')
```

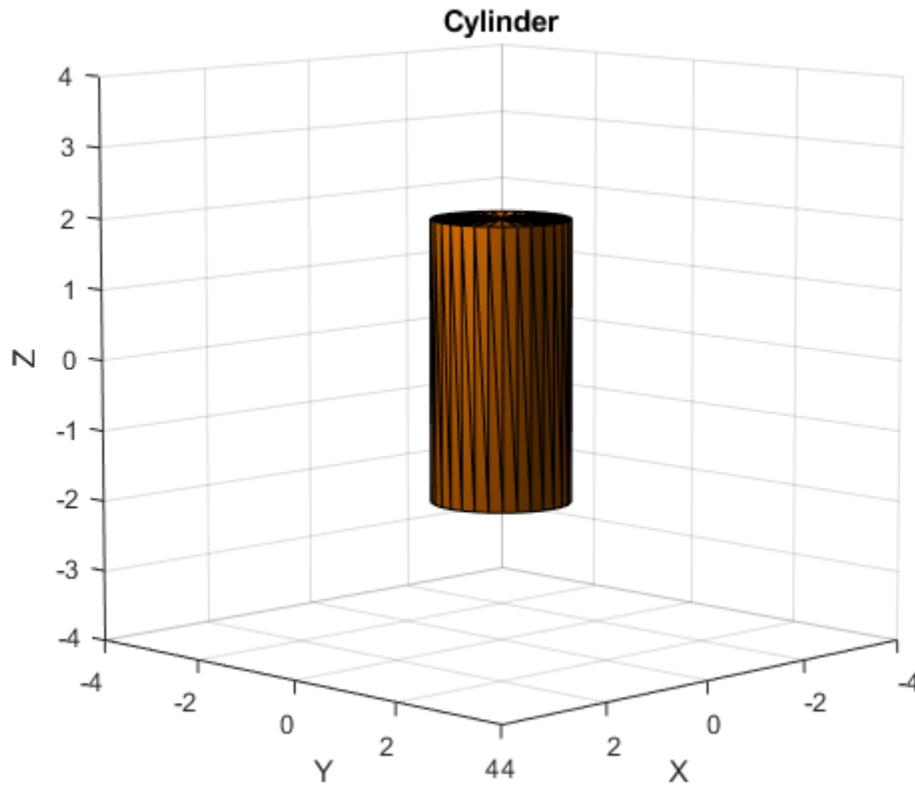

Create a homogeneous transformation that corresponds to a clockwise rotation of $\pi/4$ radians about the y-axis. Set the cylinder pose to the new matrix. Show the cylinder.

```
ang = pi/4;  
mat = axang2tform([0 1 0 ang]);  
cyl.Pose = mat;  
show(cyl)
```

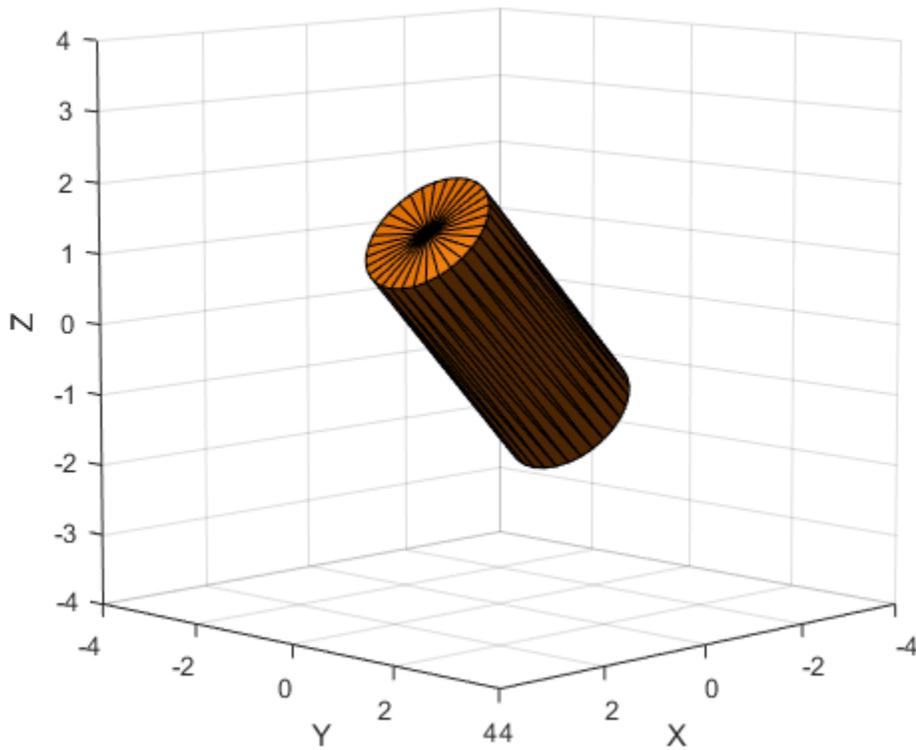

See Also

[checkCollision](#) | [collisionBox](#) | [collisionMesh](#) | [collisionSphere](#)

Introduced in R2019b

collisionMesh

Create convex mesh collision geometry

Description

Use `collisionMesh` to create a collision geometry as a convex mesh.

Creation

Syntax

```
MSH = collisionMesh(Vertices)
```

Description

`MSH = collisionMesh(Vertices)` creates a convex mesh collision geometry from the list of 3-D `Vertices`. The vertices are specified relative to a frame of choice (collision geometry frame). By default, the collision geometry frame collocates with the world frame.

Properties

Vertices — Vertices

3-D real-valued array

Vertices of a mesh, specified as an N -by-3 array, where N is the number of vertices. Each row of `Vertices` represents the coordinates of a point in 3-D space. Note that some of the points can be inside the constructed convex mesh.

Data Types: double

Pose — Pose

`eye(4)` (default) | real-valued matrix

Pose of the collision geometry relative to the world frame, specified as a 4-by-4 homogeneous matrix. You can change the pose after you create the collision geometry.

Data Types: double

Object Functions

`show` Show collision geometry

Examples


Create and Visualize Mesh Collision Geometry

Create an array consisting of the coordinates of ten points randomly chosen on the unit sphere. For reproducibility, set the random seed to the default value.

```
rng default
n = 10;
pts = zeros(n,3);
for k = 1:n
    ph = 2*pi*rand(1);
    th = pi*rand(1);
    pts(k,:) = [cos(th)*sin(ph) sin(th)*sin(ph) cos(ph)];
end
```

Create a convex mesh collision geometry from the array. Visualize the collision geometry.

```
m = collisionMesh(pts);
show(m)
```

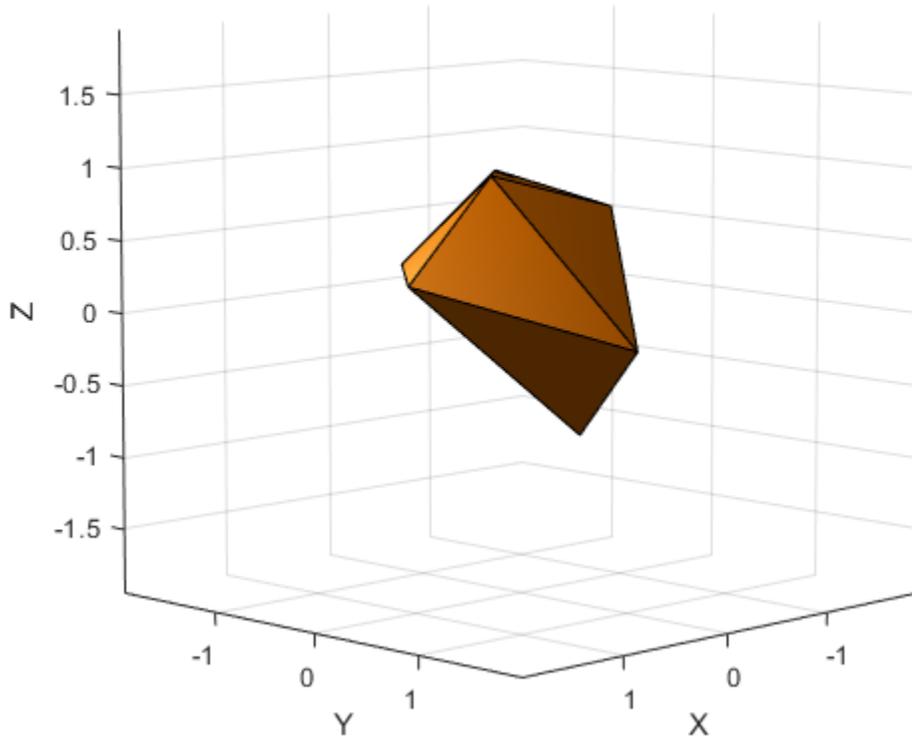


Create a second array similar to the first, but this time consisting of 1000 points randomly chosen on the unit sphere.

```
n = 1000;
pts2 = zeros(n,3);
for k = 1:n
    ph = 2*pi*rand(1);
    th = pi*rand(1);
    pts2(k,:) = [cos(th)*sin(ph) sin(th)*sin(ph) cos(ph)];
end
```

Create and visualize a mesh collision geometry from the array. Observe that choosing more points on the sphere results in a sphere-like mesh.

```
m2 = collisionMesh(pts2);  
show(m2)
```

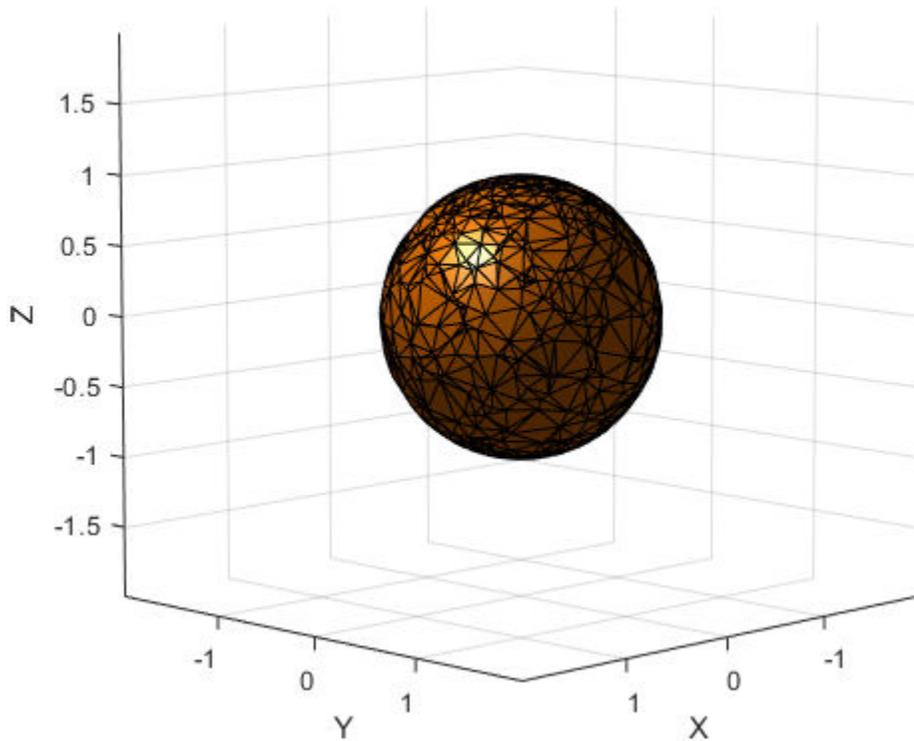

Create an array consisting of the coordinates of the eight corners of a cube. The cube is centered at the origin and has side length 4.

```
cubeCorners = [-2 -2 -2 ; -2 2 -2 ; 2 -2 -2 ; 2 2 -2 ; ...  
              -2 -2 2 ; -2 2 2 ; 2 -2 2 ; 2 2 2]
```


```
cubeCorners = 8×3
```

```
-2    -2    -2  
-2     2    -2  
 2    -2    -2
```

```
2     2     -2
-2    -2     2
-2     2     2
2     -2     2
2     2     2
```

Append `cubeCorners` to `pts2`. Create and visualize the mesh collision geometry from the new array. Because the cube contains the sphere, the sphere points that are interior to the cube are disregarded when creating the geometry.

```
pts3 = [pts2;cubeCorners];
m3 = collisionMesh(pts3);
show(m3)
```

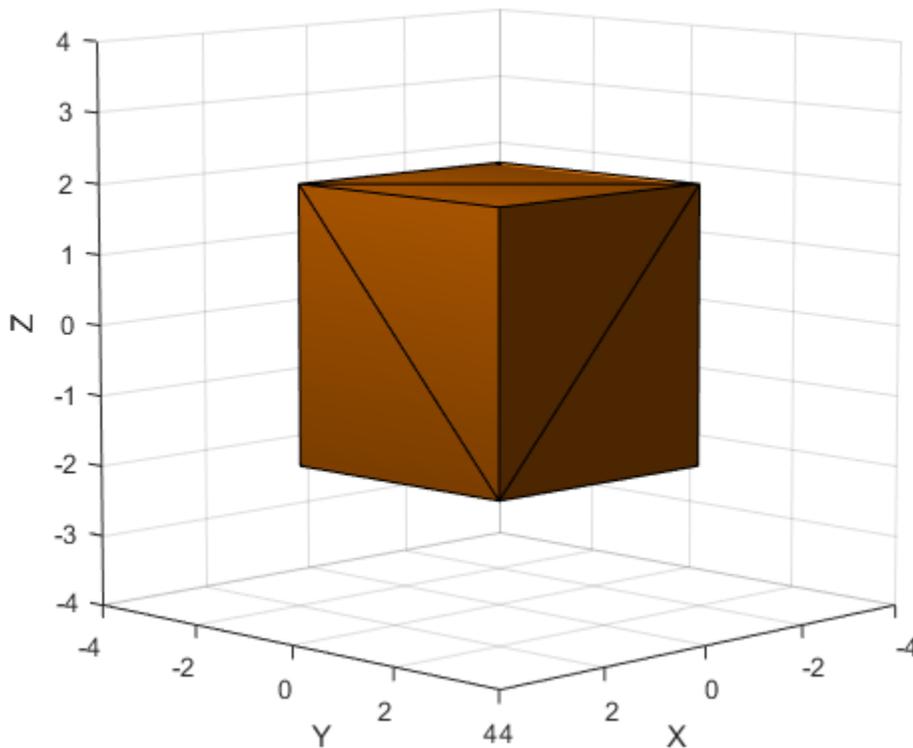

See Also

`checkCollision` | `collisionBox` | `collisionCylinder` | `collisionSphere`

Introduced in R2019b

collisionSphere

Create sphere collision geometry

Description

Use `collisionSphere` to create a sphere collision geometry centered at the origin.

Creation

Syntax

```
sph = collisionSphere(Radius)
```

Description

`sph = collisionSphere(Radius)` creates a sphere collision geometry with a specified `Radius`. The origin of the geometry-fixed frame is at the center of the sphere.

Properties

Radius — Radius

positive scalar

Radius of sphere, specified as a positive scalar. Units are in meters.

Data Types: `double`

Pose — Pose

`eye(4)` (default) | real-valued matrix

Pose of the collision geometry relative to the world frame, specified as a 4-by-4 homogeneous matrix. You can change the pose after you create the collision geometry.

Data Types: `double`

Object Functions

show Show collision geometry

Examples

Create and Visualize Sphere Collision Geometry

Create a sphere collision geometry centered at the origin. The sphere has a radius of 1 meter.


```
rad = 1;
sph = collisionSphere(rad)

sph =
  collisionSphere with properties:

    Radius: 1
    Pose: [4x4 double]
```

Visualize the sphere.

```
show(sph)
title('Sphere')
```

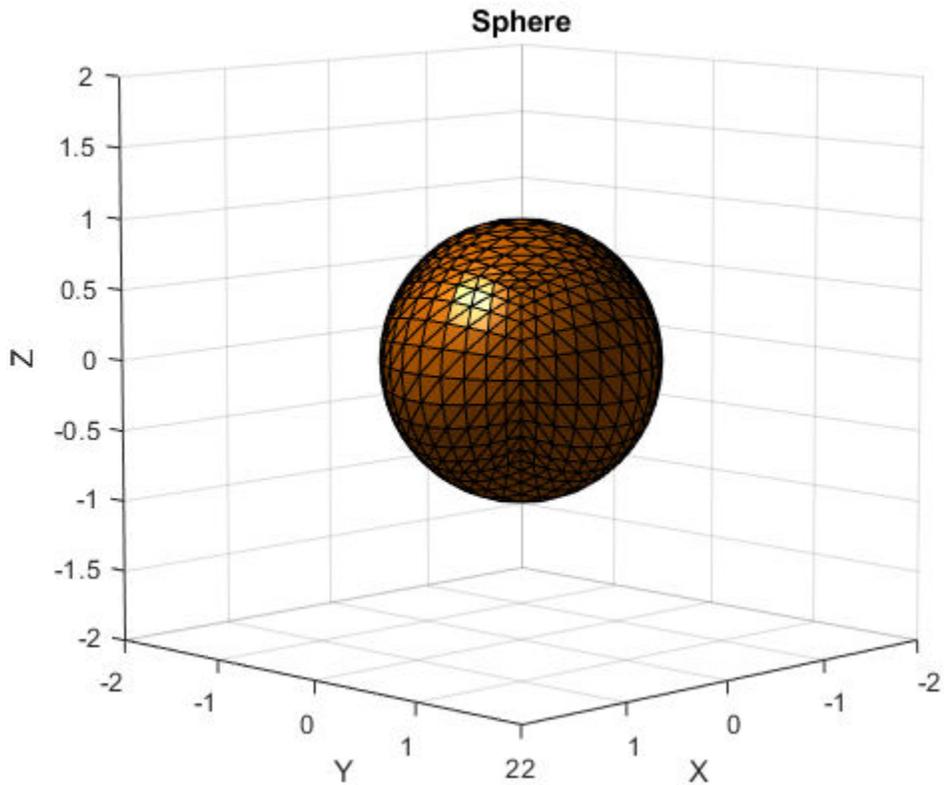


Create a cylinder collision geometry of radius 1 meter and length 3 meters.

```
cyl = collisionCylinder(1,3);
```

Create a homogeneous transformation that corresponds to a translation of 2.5 meters up the z-axis. Set the pose of the sphere to the matrix. Show the sphere and the cylinder.

```
mat = trvec2tform([0 0 2.5]);
sph.Pose = mat;
show(sph)
hold on
show(cyl)
view(90,0)
zlim([-2 4])
```

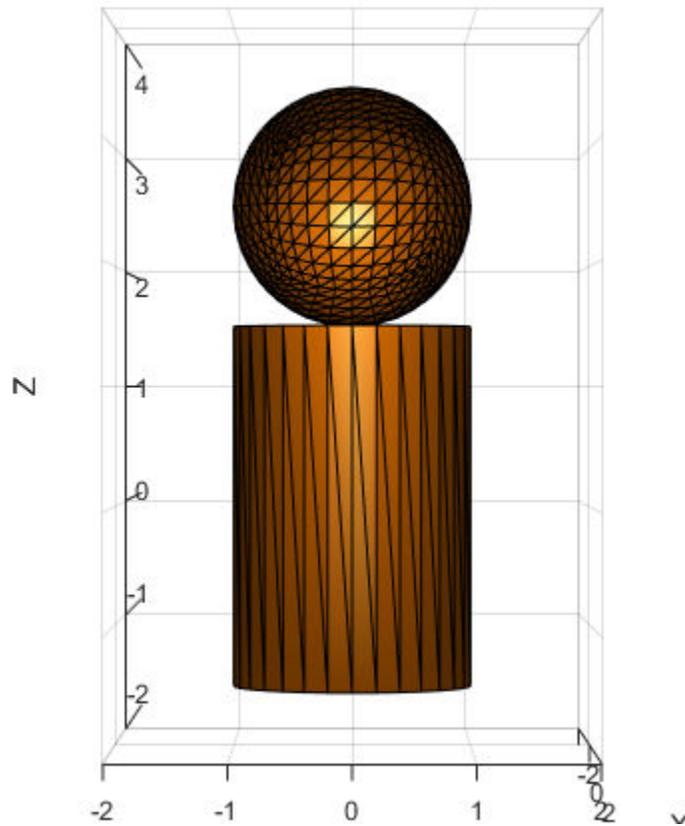

See Also

[checkCollision](#) | [collisionBox](#) | [collisionCylinder](#) | [collisionMesh](#)

Introduced in R2019b

constraintAiming class

Create aiming constraint for pointing at a target location

Description

The `constraintAiming` object describes a constraint that requires the z -axis of one body (the end effector) to aim at a target point on another body (the reference body). This constraint is satisfied if the z -axis of the end-effector frame is within an angular tolerance in any direction of the line connecting the end-effector origin and the target point. The position of the target point is defined relative to the reference body.

Constraint objects are used in `GeneralizedInverseKinematics` objects to specify multiple kinematic constraints on a robot.

For an example that uses multiple constraint objects, see “Plan a Reaching Trajectory With Multiple Kinematic Constraints”.

Construction

`aimConst = constraintAiming(endeffector)` returns an aiming constraint object that represents a constraint on a body specified by `endeffector`.

`aimConst = constraintAiming(endeffector, Name, Value)` returns an aiming constraint object with each specified property name set to the specified value by one or more `Name, Value` pair arguments.

Input Arguments

endeffector — End-effector name

string scalar | character vector

End-effector name, specified as a string scalar or character vector. When using this constraint with `GeneralizedInverseKinematics`, the name must match a body specified in the robot model (`RigidBodyTree`).

Example: "left_palm"

Data Types: char | string

Properties

EndEffector — Name of the end effector

string scalar | character vector

Name of the end effector, specified as a string scalar or character vector. When using this constraint with `GeneralizedInverseKinematics`, the name must match a body specified in the robot model (`RigidBodyTree`).

Example: "left_palm"

Data Types: char | string

ReferenceBody — Name of the reference body frame

' ' (default) | string scalar | character vector

Name of the reference body frame, specified as a string scalar or character vector. The default ' ' indicates that the constraint is relative to the base of the robot model. When using this constraint with `GeneralizedInverseKinematics`, the name must match a body specified in the robot model (`RigidBodyTree`).

Data Types: char | string

TargetPoint — Position of the target relative to the reference body

[0 0 0] (default) | [x y z] vector

Position of the target relative to the reference body, specified as an [x y z] vector. The constraint uses the line between the origin of the `EndEffector` body frame and this target point for maintaining the specified `AngularTolerance`.

AngularTolerance — Maximum allowed angle

0 (default) | numeric scalar

Maximum allowed angle between the z-axis of the end-effector frame and the line connecting the end-effector origin to the target point, specified as a numeric scalar in radians.

Weights — Weight of the constraint

1 (default) | numeric scalar

Weight of the constraint, specified as a numeric scalar. This weight is used with the `Weights` property of all the constraints specified in `GeneralizedInverseKinematics` to properly balance each constraint.

Compatibility Considerations

constraintAiming was renamed

Behavior change in future release

The `constraintAiming` object was renamed from `robotics.AimingConstraint`. Use `constraintAiming` for all object creation.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

`constraintOrientationTarget` | `constraintPoseTarget` |
`constraintPositionTarget` | `generalizedInverseKinematics`

Topics

“Plan a Reaching Trajectory With Multiple Kinematic Constraints”

Introduced in R2017a

constraintCartesianBounds

Create constraint to keep body origin inside Cartesian bounds

Description

The `constraintCartesianBounds` object describes a constraint on the position of one body (the end effector) relative to a target frame fixed on another body (the reference body). This constraint is satisfied if the position of the end-effector origin relative to the target frame remains within the `Bounds` specified. The `TargetTransform` property is the homogeneous transform that converts points in the target frame to points in the `ReferenceBody` frame.

Constraint objects are used in `GeneralizedInverseKinematics` objects to specify multiple kinematic constraints on a robot.

For an example that uses multiple constraint objects, see “Plan a Reaching Trajectory With Multiple Kinematic Constraints”.

Creation

Syntax

```
cartConst = constraintCartesianBounds(endeffector)  
cartConst = constraintCartesianBounds(endeffector,Name,Value)
```

Description

`cartConst = constraintCartesianBounds(endeffector)` returns a Cartesian bounds object that represents a constraint on the body of the robot model specified by `endeffector`.

`cartConst = constraintCartesianBounds(endeffector,Name,Value)` returns a Cartesian bounds object with each specified property name set to the specified value by one or more `Name,Value` pair arguments.

Input Arguments

endeffector — End-effector name

string scalar | character vector

End-effector name, specified as a string scalar or character vector. When using this constraint with `GeneralizedInverseKinematics`, the name must match a body specified in the robot model (`RigidBodyTree`).

Example: "left_palm"

Data Types: char | string

Properties

EndEffector — Name of the end effector

string scalar | character vector

Name of the end effector, specified as a string scalar or character vector. When using this constraint with `GeneralizedInverseKinematics`, the name must match a body specified in the robot model (`RigidBodyTree`).

Example: "left_palm"

Data Types: char | string

ReferenceBody — Name of the reference body frame

' ' (default) | string scalar | character vector

Name of the reference body frame, specified as a string scalar or character vector. The default ' ' indicates that the constraint is relative to the base of the robot model. When using this constraint with `GeneralizedInverseKinematics`, the name must match a body specified in the robot model (`RigidBodyTree`).

TargetTransform — Pose of the target frame relative to the reference body

eye(4) (default) | matrix

Pose of the target frame relative to the reference body, specified as a matrix. The matrix is a homogeneous transform that specifies the relative transformation to convert a point in the target frame to the reference body frame.

Example: [1 0 0 1; 0 1 0 1; 0 0 1 1; 0 0 0 1]

Bounds — Bounds on end-effector position relative to target frame

`zeros(3,2)` (default) | `[xMin xMax; yMin yMax; zMin zMax]` vector

Bounds on end-effector position relative to target frame, specified as a 3-by-2 vector, `[xMin xMax; yMin yMax; zMin zMax]`. Each row defines the minimum and maximum values for the xyz-coordinates respectively.

Weights — Weights of the constraint

`[1 1 1]` (default) | `[x y z]` vector

Weights of the constraint, specified as an `[x y z]` vector. Each element of the vector corresponds to the weight for the xyz-coordinates, respectively. These weights are used with the `Weights` property of all the constraints specified in `GeneralizedInverseKinematics` to properly balance each constraint.

Examples

Plan a Reaching Trajectory With Multiple Kinematic Constraints

This example shows how to use generalized inverse kinematics to plan a joint-space trajectory for a robotic manipulator. It combines multiple constraints to generate a trajectory that guides the gripper to a cup resting on a table. These constraints ensure that the gripper approaches the cup in a straight line and that the gripper remains at a safe distance from the table, without requiring the poses of the gripper to be determined in advance.

Set Up the Robot Model

This example uses a model of the KUKA LBR iiwa, a 7 degree-of-freedom robot manipulator. `importrobot` generates a `rigidBodyTree` model from a description stored in a Unified Robot Description Format (URDF) file.

```
lbr = importrobot('iiwa14.urdf'); % 14 kg payload version
lbr.DataFormat = 'row';
gripper = 'iiwa_link_ee_kuka';
```

Define dimensions for the cup.

```
cupHeight = 0.2;
cupRadius = 0.05;
cupPosition = [-0.5, 0.5, cupHeight/2];
```

Add a fixed body to the robot model representing the center of the cup.

```
body = rigidBody('cupFrame');
setFixedTransform(body.Joint, trvec2tform(cupPosition))
addBody(lbr, body, lbr.BaseName);
```

Define the Planning Problem

The goal of this example is to generate a sequence of robot configurations that satisfy the following criteria:

- Start in the home configuration
- No abrupt changes in robot configuration
- Keep the gripper at least 5 cm above the "table" ($z = 0$)
- The gripper should be aligned with the cup as it approaches
- Finish with the gripper 5 cm from the center of the cup

This example utilizes constraint objects to generate robot configurations that satisfy these criteria. The generated trajectory consists of five configuration waypoints. The first waypoint, q_0 , is set as the home configuration. Pre-allocate the rest of the configurations in $qWaypoints$ using `repmat`.

```
numWaypoints = 5;
q0 = homeConfiguration(lbr);
qWaypoints = repmat(q0, numWaypoints, 1);
```

Create a `generalizedInverseKinematics` solver that accepts the following constraint inputs:

- Cartesian bounds - Limits the height of the gripper
- A position target - Specifies the position of the cup relative to the gripper.
- An aiming constraint - Aligns the gripper with the cup axis
- An orientation target - Maintains a fixed orientation for the gripper while approaching the cup
- Joint position bounds - Limits the change in joint positions between waypoints.

```
gik = generalizedInverseKinematics('RigidBodyTree', lbr, ...
    'ConstraintInputs', {'cartesian', 'position', 'aiming', 'orientation', 'joint'})
gik =
    generalizedInverseKinematics with properties:
```

```
    NumConstraints: 5
    ConstraintInputs: {1x5 cell}
        RigidBodyTree: [1x1 rigidBodyTree]
    SolverAlgorithm: 'BFGSGradientProjection'
    SolverParameters: [1x1 struct]
```

Create Constraint Objects

Create the constraint objects that are passed as inputs to the solver. These object contain the parameters needed for each constraint. Modify these parameters between calls to the solver as necessary.

Create a Cartesian bounds constraint that requires the gripper to be at least 5 cm above the table (negative z direction). All other values are given as `inf` or `-inf`.

```
heightAboveTable = constraintCartesianBounds(gripper);
heightAboveTable.Bounds = [-inf, inf; ...
                           -inf, inf; ...
                           0.05, inf]
```

```
heightAboveTable =
    constraintCartesianBounds with properties:
```

```
    EndEffector: 'iiwa_link_ee_kuka'
    ReferenceBody: ''
    TargetTransform: [4x4 double]
    Bounds: [3x2 double]
    Weights: [1 1 1]
```

Create a constraint on the position of the cup relative to the gripper, with a tolerance of 5 mm.

```
distanceFromCup = constraintPositionTarget('cupFrame');
distanceFromCup.ReferenceBody = gripper;
distanceFromCup.PositionTolerance = 0.005
```

```
distanceFromCup =
    constraintPositionTarget with properties:
```

```
    EndEffector: 'cupFrame'
    ReferenceBody: 'iiwa_link_ee_kuka'
    TargetPosition: [0 0 0]
```

```

PositionTolerance: 0.0050
Weights: 1

```

Create an aiming constraint that requires the z-axis of the `iiwa_link_ee` frame to be approximately vertical, by placing the target far above the robot. The `iiwa_link_ee` frame is oriented such that this constraint aligns the gripper with the axis of the cup.

```

alignWithCup = constraintAiming('iiwa_link_ee');
alignWithCup.TargetPoint = [0, 0, 100]

```

```

alignWithCup =
  constraintAiming with properties:

```

```

    EndEffector: 'iiwa_link_ee'
  ReferenceBody: ''
    TargetPoint: [0 0 100]
  AngularTolerance: 0
    Weights: 1

```

Create a joint position bounds constraint. Set the `Bounds` property of this constraint based on the previous configuration to limit the change in joint positions.

```

limitJointChange = constraintJointBounds(lbr)

```

```

limitJointChange =
  constraintJointBounds with properties:

```

```

    Bounds: [7x2 double]
  Weights: [1 1 1 1 1 1 1]

```

Create an orientation constraint for the gripper with a tolerance of one degree. This constraint requires the orientation of the gripper to match the value specified by the `TargetOrientation` property. Use this constraint to fix the orientation of the gripper during the final approach to the cup.

```

fixOrientation = constraintOrientationTarget(gripper);
fixOrientation.OrientationTolerance = deg2rad(1)

```

```

fixOrientation =
  constraintOrientationTarget with properties:

```

```

    EndEffector: 'iiwa_link_ee_kuka'

```

```
ReferenceBody: ''
TargetOrientation: [1 0 0 0]
OrientationTolerance: 0.0175
Weights: 1
```

Find a Configuration That Points at the Cup

This configuration should place the gripper at a distance from the cup, so that the final approach can be made with the gripper properly aligned.

```
intermediateDistance = 0.3;
```

Constraint objects have a `Weights` property which determines how the solver treats conflicting constraints. Setting the weights of a constraint to zero disables the constraint. For this configuration, disable the joint position bounds and orientation constraint.

```
limitJointChange.Weights = zeros(size(limitJointChange.Weights));
fixOrientation.Weights = 0;
```

Set the target position for the cup in the gripper frame. The cup should lie on the z-axis of the gripper at the specified distance.

```
distanceFromCup.TargetPosition = [0,0,intermediateDistance];
```

Solve for the robot configuration that satisfies the input constraints using the `gik` solver. You must specify all the input constraints. Set that configuration as the second waypoint.

```
[qWaypoints(2,:),solutionInfo] = gik(q0, heightAboveTable, ...
    distanceFromCup, alignWithCup, fixOrientation, ...
    limitJointChange);
```

Find Configurations That Move Gripper to the Cup Along a Straight Line

Re-enable the joint position bound and orientation constraints.

```
limitJointChange.Weights = ones(size(limitJointChange.Weights));
fixOrientation.Weights = 1;
```

Disable the align-with-cup constraint, as the orientation constraint makes it redundant.

```
alignWithCup.Weights = 0;
```

Set the orientation constraint to hold the orientation based on the previous configuration (`qWaypoints(2, :)`). Get the transformation from the gripper to the base of the robot model. Convert the homogeneous transformation to a quaternion.

```
fixOrientation.TargetOrientation = ...
    tform2quat(getTransform(lbr, qWaypoints(2, :), gripper));
```

Define the distance between the cup and gripper for each waypoint

```
finalDistanceFromCup = 0.05;
distanceFromCupValues = linspace(intermediateDistance, finalDistanceFromCup, numWaypoints);
```

Define the maximum allowed change in joint positions between each waypoint.

```
maxJointChange = deg2rad(10);
```

Call the solver for each remaining waypoint.

```
for k = 3:numWaypoints
    % Update the target position.
    distanceFromCup.TargetPosition(3) = distanceFromCupValues(k-1);
    % Restrict the joint positions to lie close to their previous values.
    limitJointChange.Bounds = [qWaypoints(k-1,:) - maxJointChange, ...
                               qWaypoints(k-1,:) + maxJointChange];
    % Solve for a configuration and add it to the waypoints array.
    [qWaypoints(k,:), solutionInfo] = gik(qWaypoints(k-1,:), ...
                                         heightAboveTable, ...
                                         distanceFromCup, alignWithCup, ...
                                         fixOrientation, limitJointChange);
end
```

Visualize the Generated Trajectory


Interpolate between the waypoints to generate a smooth trajectory. Use `pchip` to avoid overshoots, which might violate the joint limits of the robot.

```
framerate = 15;
r = rateControl(framerate);
tFinal = 10;
tWaypoints = [0, linspace(tFinal/2, tFinal, size(qWaypoints, 1) - 1)];
numFrames = tFinal * framerate;
qInterp = pchip(tWaypoints, qWaypoints', linspace(0, tFinal, numFrames))';
```

Compute the gripper position for each interpolated configuration.

Animate the manipulator and plot the gripper position.

```
hold on
for k = 1:size(qInterp,1)
    show(lbr, qInterp(k,:), 'PreservePlot', false);
    p.XData(k) = gripperPosition(k,1);
    p.YData(k) = gripperPosition(k,2);
    p.ZData(k) = gripperPosition(k,3);
    waitfor(r);
end
hold off
```

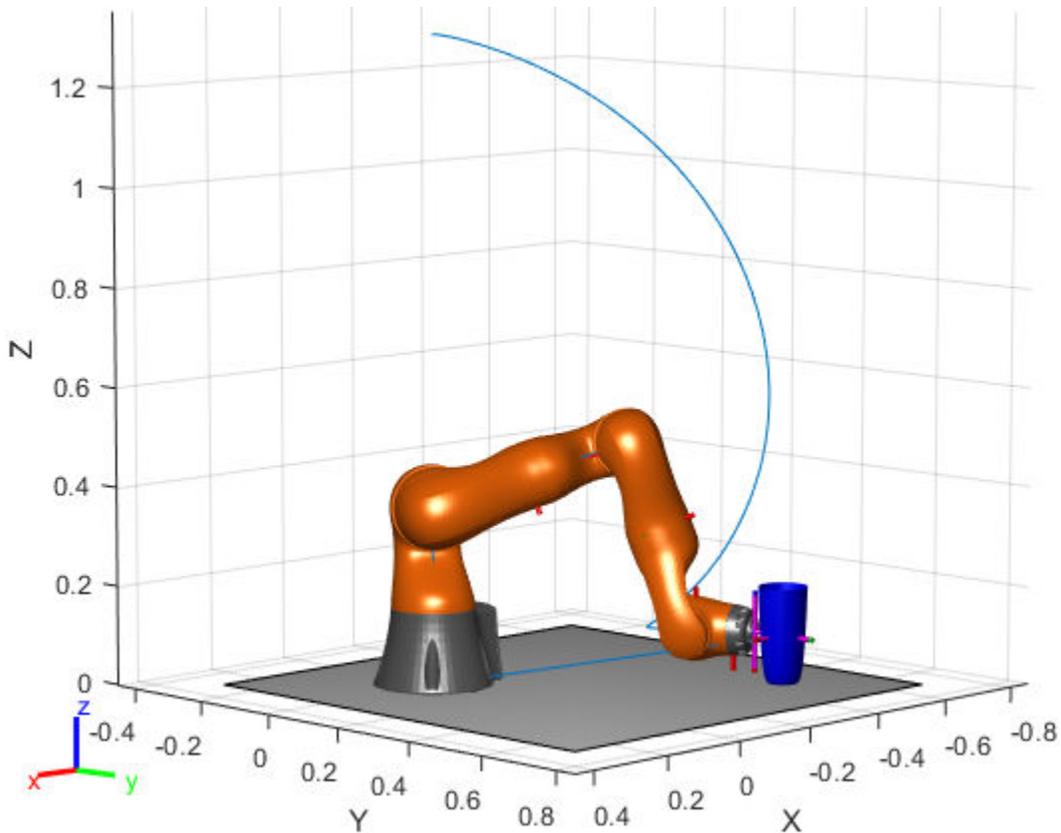

If you want to save the generated configurations to a MAT-file for later use, execute the following:

```
>> save('lbr_trajectory.mat', 'tWaypoints', 'qWaypoints');
```

Compatibility Considerations

constraintCartesianBounds was renamed

Behavior change in future release

The `constraintCartesianBounds` object was renamed from `robotics.CartesianBounds`. Use `constraintCartesianBounds` for all object creation.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

`constraintOrientationTarget` | `constraintPoseTarget` |
`constraintPositionTarget` | `generalizedInverseKinematics`

Topics

“Plan a Reaching Trajectory With Multiple Kinematic Constraints”

Introduced in R2017a

constraintJointBounds

Create constraint on joint positions of robot model

Description

The `constraintJointBounds` object describes a constraint on the joint positions of a rigid body tree. This constraint is satisfied if the robot configuration vector maintains all joint positions within the `Bounds` specified. The configuration vector contains positions for all nonfixed joints in a `rigidBodyTree` object.

Constraint objects are used in `generalizedInverseKinematics` objects to specify multiple kinematic constraints on a robot.

For an example that uses multiple constraint objects, see “Plan a Reaching Trajectory With Multiple Kinematic Constraints”.

Creation

Syntax

```
jointConst = constraintJointBounds(robot)
jointConst = constraintJointBounds(robot,Name,Value)
```

Description

`jointConst = constraintJointBounds(robot)` returns a joint position bounds object that represents a constraint on the configuration vector of the robot model specified by `robot`.

`jointConst = constraintJointBounds(robot,Name,Value)` returns a joint position bounds object with each specified property name set to the specified value by one or more `Name,Value` pair arguments.

Input Arguments

robot — Rigid body tree model

rigidBodyTree object

Rigid body tree model, specified as a *rigidBodyTree* object.

Properties

Bounds — Bounds on the configuration vector

n-by-2 matrix

Bounds on the configuration vector, specified as an *n*-by-2 matrix. Each row of the array corresponds to a nonfixed joint on the robot model and gives the minimum and maximum position for that joint. By default, the bounds are set based on the `PositionLimits` property of each *rigidBodyJoint* object within the input rigid body tree model, `robot`.

Weights — Weights of the constraint

`ones(1, n)` (default) | *n*-element vector

Weights of the constraint, specified as an *n*-element vector, where each element corresponds to a row in `Bounds` and gives relative weights for each bound. The default is a vector of ones to give equal weight to all joint positions. These weights are used with the `Weights` property of all the constraints specified in `generalizedInverseKinematics` to properly balance each constraint

Examples

Plan a Reaching Trajectory With Multiple Kinematic Constraints

This example shows how to use generalized inverse kinematics to plan a joint-space trajectory for a robotic manipulator. It combines multiple constraints to generate a trajectory that guides the gripper to a cup resting on a table. These constraints ensure that the gripper approaches the cup in a straight line and that the gripper remains at a safe distance from the table, without requiring the poses of the gripper to be determined in advance.

Set Up the Robot Model

This example uses a model of the KUKA LBR iiwa, a 7 degree-of-freedom robot manipulator. `importrobot` generates a `rigidBodyTree` model from a description stored in a Unified Robot Description Format (URDF) file.

```
lbr = importrobot('iiwa14.urdf'); % 14 kg payload version
lbr.DataFormat = 'row';
gripper = 'iiwa_link_ee_kuka';
```

Define dimensions for the cup.

```
cupHeight = 0.2;
cupRadius = 0.05;
cupPosition = [-0.5, 0.5, cupHeight/2];
```

Add a fixed body to the robot model representing the center of the cup.

```
body = rigidBody('cupFrame');
setFixedTransform(body.Joint, trvec2tform(cupPosition))
addBody(lbr, body, lbr.BaseName);
```

Define the Planning Problem

The goal of this example is to generate a sequence of robot configurations that satisfy the following criteria:

- Start in the home configuration
- No abrupt changes in robot configuration
- Keep the gripper at least 5 cm above the "table" ($z = 0$)
- The gripper should be aligned with the cup as it approaches
- Finish with the gripper 5 cm from the center of the cup

This example utilizes constraint objects to generate robot configurations that satisfy these criteria. The generated trajectory consists of five configuration waypoints. The first waypoint, `q0`, is set as the home configuration. Pre-allocate the rest of the configurations in `qWaypoints` using `repmat`.

```
numWaypoints = 5;
q0 = homeConfiguration(lbr);
qWaypoints = repmat(q0, numWaypoints, 1);
```

Create a `generalizedInverseKinematics` solver that accepts the following constraint inputs:

- Cartesian bounds - Limits the height of the gripper
- A position target - Specifies the position of the cup relative to the gripper.
- An aiming constraint - Aligns the gripper with the cup axis
- An orientation target - Maintains a fixed orientation for the gripper while approaching the cup
- Joint position bounds - Limits the change in joint positions between waypoints.

```
gik = generalizedInverseKinematics('RigidBodyTree', lbr, ...  
    'ConstraintInputs', {'cartesian', 'position', 'aiming', 'orientation', 'joint'})
```

```
gik =  
    generalizedInverseKinematics with properties:
```

```
    NumConstraints: 5  
    ConstraintInputs: {1x5 cell}  
    RigidBodyTree: [1x1 rigidBodyTree]  
    SolverAlgorithm: 'BFGSGradientProjection'  
    SolverParameters: [1x1 struct]
```

Create Constraint Objects

Create the constraint objects that are passed as inputs to the solver. These object contain the parameters needed for each constraint. Modify these parameters between calls to the solver as necessary.

Create a Cartesian bounds constraint that requires the gripper to be at least 5 cm above the table (negative z direction). All other values are given as `inf` or `-inf`.

```
heightAboveTable = constraintCartesianBounds(gripper);  
heightAboveTable.Bounds = [-inf, inf; ...  
    -inf, inf; ...  
    0.05, inf]
```

```
heightAboveTable =  
    constraintCartesianBounds with properties:
```

```
    EndEffector: 'iiwa_link_ee_kuka'  
    ReferenceBody: ''  
    TargetTransform: [4x4 double]
```

```

Bounds: [3x2 double]
Weights: [1 1 1]

```

Create a constraint on the position of the cup relative to the gripper, with a tolerance of 5 mm.

```

distanceFromCup = constraintPositionTarget('cupFrame');
distanceFromCup.ReferenceBody = gripper;
distanceFromCup.PositionTolerance = 0.005

```

```

distanceFromCup =
  constraintPositionTarget with properties:
      EndEffector: 'cupFrame'
      ReferenceBody: 'iiwa_link_ee_kuka'
      TargetPosition: [0 0 0]
      PositionTolerance: 0.0050
      Weights: 1

```

Create an aiming constraint that requires the z-axis of the `iiwa_link_ee` frame to be approximately vertical, by placing the target far above the robot. The `iiwa_link_ee` frame is oriented such that this constraint aligns the gripper with the axis of the cup.

```

alignWithCup = constraintAiming('iiwa_link_ee');
alignWithCup.TargetPoint = [0, 0, 100]

```

```

alignWithCup =
  constraintAiming with properties:
      EndEffector: 'iiwa_link_ee'
      ReferenceBody: ''
      TargetPoint: [0 0 100]
      AngularTolerance: 0
      Weights: 1

```

Create a joint position bounds constraint. Set the `Bounds` property of this constraint based on the previous configuration to limit the change in joint positions.

```

limitJointChange = constraintJointBounds(lbr)

limitJointChange =
  constraintJointBounds with properties:

```

```
Bounds: [7x2 double]
Weights: [1 1 1 1 1 1 1]
```

Create an orientation constraint for the gripper with a tolerance of one degree. This constraint requires the orientation of the gripper to match the value specified by the `TargetOrientation` property. Use this constraint to fix the orientation of the gripper during the final approach to the cup.

```
fixOrientation = constraintOrientationTarget(gripper);
fixOrientation.OrientationTolerance = deg2rad(1)
```

```
fixOrientation =
  constraintOrientationTarget with properties:
```

```
    EndEffector: 'iiwa_link_ee_kuka'
    ReferenceBody: ''
    TargetOrientation: [1 0 0 0]
    OrientationTolerance: 0.0175
    Weights: 1
```

Find a Configuration That Points at the Cup

This configuration should place the gripper at a distance from the cup, so that the final approach can be made with the gripper properly aligned.

```
intermediateDistance = 0.3;
```

Constraint objects have a `Weights` property which determines how the solver treats conflicting constraints. Setting the weights of a constraint to zero disables the constraint. For this configuration, disable the joint position bounds and orientation constraint.

```
limitJointChange.Weights = zeros(size(limitJointChange.Weights));
fixOrientation.Weights = 0;
```

Set the target position for the cup in the gripper frame. The cup should lie on the z-axis of the gripper at the specified distance.

```
distanceFromCup.TargetPosition = [0,0,intermediateDistance];
```

Solve for the robot configuration that satisfies the input constraints using the `gik` solver. You must specify all the input constraints. Set that configuration as the second waypoint.

```
[qWaypoints(2,:),solutionInfo] = gik(q0, heightAboveTable, ...
    distanceFromCup, alignWithCup, fixOrientation, ...
    limitJointChange);
```

Find Configurations That Move Gripper to the Cup Along a Straight Line

Re-enable the joint position bound and orientation constraints.

```
limitJointChange.Weights = ones(size(limitJointChange.Weights));
fixOrientation.Weights = 1;
```

Disable the align-with-cup constraint, as the orientation constraint makes it redundant.

```
alignWithCup.Weights = 0;
```

Set the orientation constraint to hold the orientation based on the previous configuration (`qWaypoints(2,:)`). Get the transformation from the gripper to the base of the robot model. Convert the homogeneous transformation to a quaternion.

```
fixOrientation.TargetOrientation = ...
    tform2quat(getTransform(lbr,qWaypoints(2,:),gripper));
```

Define the distance between the cup and gripper for each waypoint

```
finalDistanceFromCup = 0.05;
distanceFromCupValues = linspace(intermediateDistance, finalDistanceFromCup, numWaypoints);
```

Define the maximum allowed change in joint positions between each waypoint.

```
maxJointChange = deg2rad(10);
```

Call the solver for each remaining waypoint.

```
for k = 3:numWaypoints
    % Update the target position.
    distanceFromCup.TargetPosition(3) = distanceFromCupValues(k-1);
    % Restrict the joint positions to lie close to their previous values.
    limitJointChange.Bounds = [qWaypoints(k-1,:) - maxJointChange, ...
        qWaypoints(k-1,:) + maxJointChange];
    % Solve for a configuration and add it to the waypoints array.
    [qWaypoints(k,:),solutionInfo] = gik(qWaypoints(k-1,:), ...
        heightAboveTable, ...
        distanceFromCup, alignWithCup, ...
        fixOrientation, limitJointChange);
end
```

Visualize the Generated Trajectory

Interpolate between the waypoints to generate a smooth trajectory. Use `pchip` to avoid overshoots, which might violate the joint limits of the robot.


```
framerate = 15;
r = rateControl(framerate);
tFinal = 10;
tWaypoints = [0, linspace(tFinal/2, tFinal, size(qWaypoints, 1) - 1)];
numFrames = tFinal * framerate;
qInterp = pchip(tWaypoints, qWaypoints', linspace(0, tFinal, numFrames))';
```

Compute the gripper position for each interpolated configuration.

```
gripperPosition = zeros(numFrames, 3);
for k = 1:numFrames
    gripperPosition(k, :) = tform2trvec(getTransform(lbr, qInterp(k, :), ...
                                                    gripper));
end
```


Show the robot in its initial configuration along with the table and cup

```
figure;
show(lbr, qWaypoints(1, :), 'PreservePlot', false);
hold on
exampleHelperPlotCupAndTable(cupHeight, cupRadius, cupPosition);
p = plot3(gripperPosition(1, 1), gripperPosition(1, 2), gripperPosition(1, 3));
```

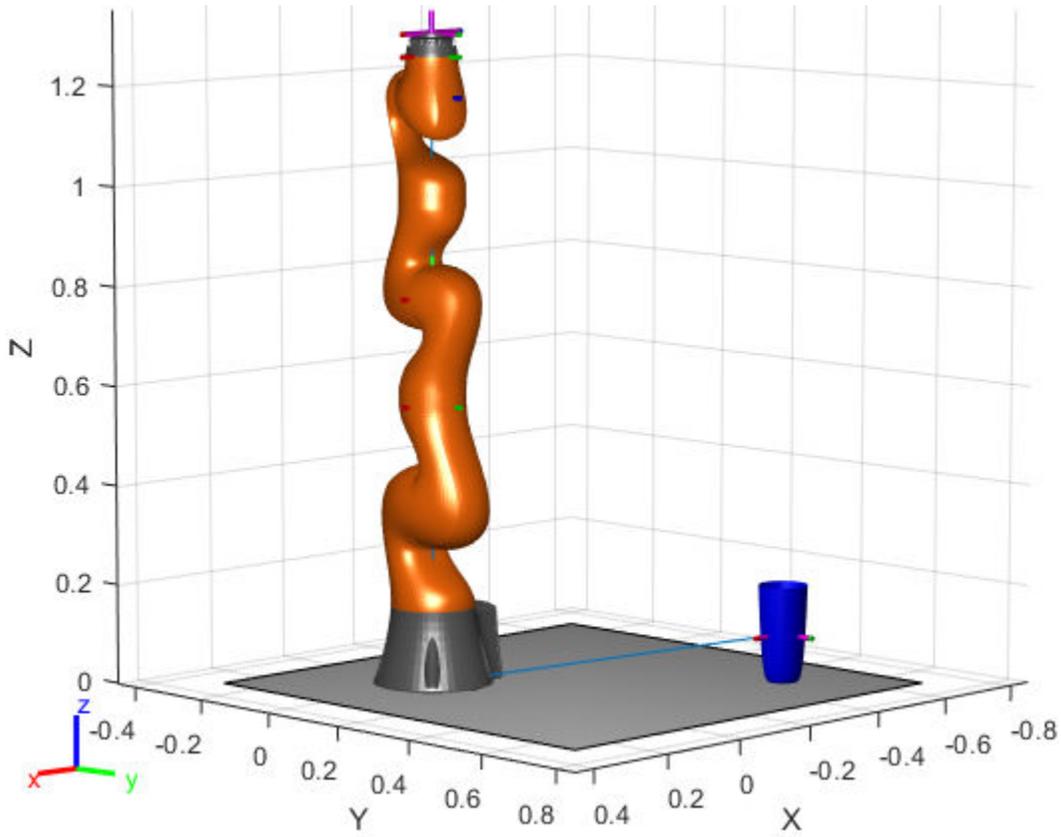

Animate the manipulator and plot the gripper position.

```
hold on
for k = 1:size(qInterp,1)
    show(lbr, qInterp(k,:), 'PreservePlot', false);
    p.XData(k) = gripperPosition(k,1);
    p.YData(k) = gripperPosition(k,2);
    p.ZData(k) = gripperPosition(k,3);
    waitfor(r);
end
hold off
```

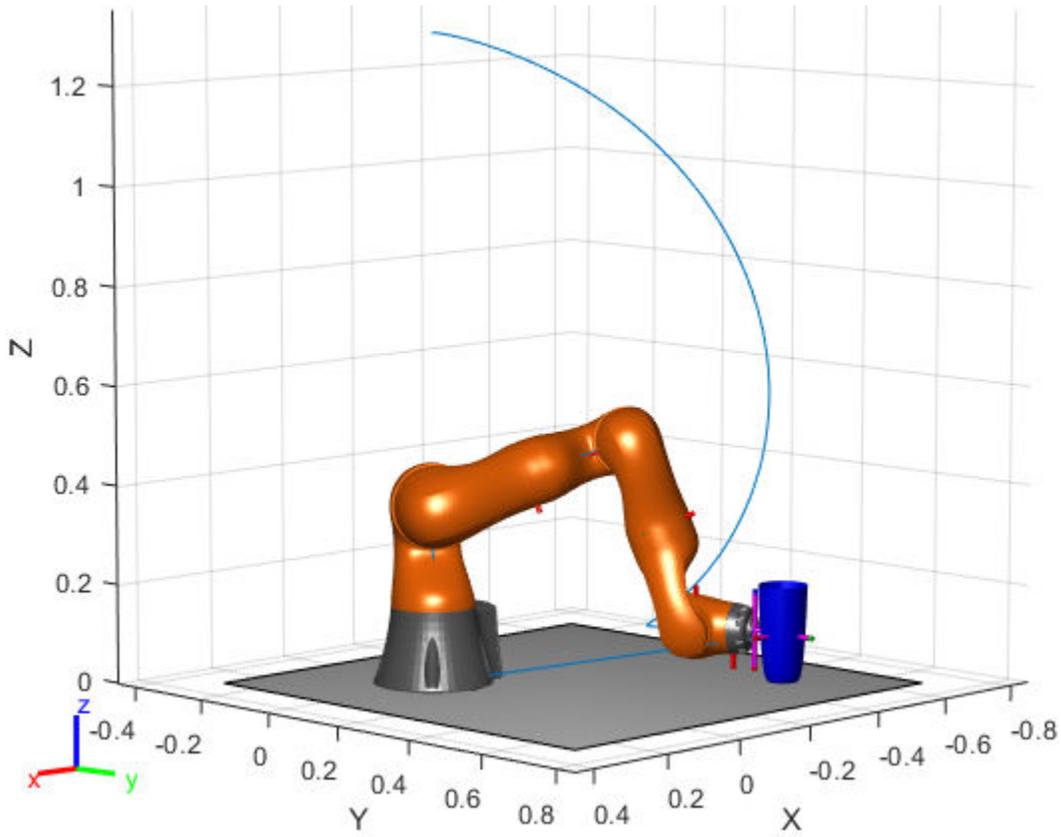

If you want to save the generated configurations to a MAT-file for later use, execute the following:

```
>> save('lbr_trajectory.mat', 'tWaypoints', 'qWaypoints');
```

Compatibility Considerations

constraintJointBounds was renamed

Behavior change in future release

The `constraintJointBounds` object was renamed from `robotics.JointPositionBounds`. Use `constraintJointBounds` for all object creation.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

`constraintOrientationTarget` | `constraintPoseTarget` |
`constraintPositionTarget` | `generalizedInverseKinematics`

Topics

“Plan a Reaching Trajectory With Multiple Kinematic Constraints”

Introduced in R2017a

constraintOrientationTarget

Create constraint on relative orientation of body

Description

The `constraintOrientationTarget` object describes a constraint that requires the orientation of one body (the end effector) to match a target orientation within an angular tolerance in any direction. The target orientation is specified relative to the body frame of the reference body.

Constraint objects are used in `generalizedInverseKinematics` objects to specify multiple kinematic constraints on a robot.

For an example that uses multiple constraint objects, see “Plan a Reaching Trajectory With Multiple Kinematic Constraints”.

Creation

Syntax

```
orientationConst = constraintOrientationTarget(endeffector)
orientationConst = constraintOrientationTarget(endeffector,
Name, Value)
```

Description

`orientationConst = constraintOrientationTarget(endeffector)` returns an orientation target object that represents a constraint on a body of the robot model specified by `endeffector`.

`orientationConst = constraintOrientationTarget(endeffector, Name, Value)` returns an orientation target object with each specified property name set to the specified value by one or more `Name, Value` pair arguments.

Input Arguments

endeffector — End-effector name

string scalar | character vector

End-effector name, specified as a string scalar or character vector. When using this constraint with `generalizedInverseKinematics`, the name must match a body specified in the robot model (`rigidBodyTree`).

Example: "left_palm"

Data Types: char | string

Properties

EndEffector — Name of the end effector

string scalar | character vector

Name of the end effector, specified as a string scalar or character vector. When using this constraint with `generalizedInverseKinematics`, the name must match a body specified in the robot model (`rigidBodyTree`).

Example: "left_palm"

Data Types: char | string

ReferenceBody — Name of the reference body frame

' ' (default) | string scalar | character vector

Name of the reference body frame, specified as a string scalar or character vector. The default ' ' indicates that the constraint is relative to the base of the robot model. When using this constraint with `generalizedInverseKinematics`, the name must match a body specified in the robot model (`rigidBodyTree`).

Data Types: char | string

TargetOrientation — Target orientation of the end effector relative to the reference body

[1 0 0 0] (default) | four-element vector

Target orientation of the end effector relative to the reference body, specified as four-element vector that represents a unit quaternion. The orientation of the end effector

relative to the reference body frame is the orientation that converts a direction specified in the end-effector frame to the same direction specified in the reference body frame.

OrientationTolerance — Maximum allowed rotation angle

θ (default) | numeric scalar

Maximum allowed rotation angle in radians, specified as a numeric scalar. This value is the upper bound on the magnitude of the rotation required to make the end-effector orientation match the target orientation.

Weights — Weight of the constraint

1 (default) | numeric scalar

Weight of the constraint, specified as a numeric scalar. This weight is used with the `Weights` property of all the constraints specified in `generalizedInverseKinematics` to properly balance each constraint.

Examples

Plan a Reaching Trajectory With Multiple Kinematic Constraints

This example shows how to use generalized inverse kinematics to plan a joint-space trajectory for a robotic manipulator. It combines multiple constraints to generate a trajectory that guides the gripper to a cup resting on a table. These constraints ensure that the gripper approaches the cup in a straight line and that the gripper remains at a safe distance from the table, without requiring the poses of the gripper to be determined in advance.

Set Up the Robot Model

This example uses a model of the KUKA LBR iiwa, a 7 degree-of-freedom robot manipulator. `importrobot` generates a `rigidBodyTree` model from a description stored in a Unified Robot Description Format (URDF) file.

```
lbr = importrobot('iiwa14.urdf'); % 14 kg payload version
lbr.DataFormat = 'row';
grripper = 'iiwa_link_ee_kuka';
```

Define dimensions for the cup.

```
cupHeight = 0.2;
cupRadius = 0.05;
cupPosition = [-0.5, 0.5, cupHeight/2];
```

Add a fixed body to the robot model representing the center of the cup.

```
body = rigidBody('cupFrame');
setFixedTransform(body.Joint, trvec2tform(cupPosition))
addBody(lbr, body, lbr.BaseName);
```

Define the Planning Problem

The goal of this example is to generate a sequence of robot configurations that satisfy the following criteria:

- Start in the home configuration
- No abrupt changes in robot configuration
- Keep the gripper at least 5 cm above the "table" ($z = 0$)
- The gripper should be aligned with the cup as it approaches
- Finish with the gripper 5 cm from the center of the cup

This example utilizes constraint objects to generate robot configurations that satisfy these criteria. The generated trajectory consists of five configuration waypoints. The first waypoint, q_0 , is set as the home configuration. Pre-allocate the rest of the configurations in $qWaypoints$ using `repmat`.

```
numWaypoints = 5;
q0 = homeConfiguration(lbr);
qWaypoints = repmat(q0, numWaypoints, 1);
```

Create a `generalizedInverseKinematics` solver that accepts the following constraint inputs:

- Cartesian bounds - Limits the height of the gripper
- A position target - Specifies the position of the cup relative to the gripper.
- An aiming constraint - Aligns the gripper with the cup axis
- An orientation target - Maintains a fixed orientation for the gripper while approaching the cup
- Joint position bounds - Limits the change in joint positions between waypoints.

```
gik = generalizedInverseKinematics('RigidBodyTree', lbr, ...
    'ConstraintInputs', {'cartesian', 'position', 'aiming', 'orientation', 'joint'})

gik =
    generalizedInverseKinematics with properties:

        NumConstraints: 5
    ConstraintInputs: {1x5 cell}
        RigidBodyTree: [1x1 rigidBodyTree]
    SolverAlgorithm: 'BFGSGradientProjection'
    SolverParameters: [1x1 struct]
```

Create Constraint Objects

Create the constraint objects that are passed as inputs to the solver. These object contain the parameters needed for each constraint. Modify these parameters between calls to the solver as necessary.

Create a Cartesian bounds constraint that requires the gripper to be at least 5 cm above the table (negative z direction). All other values are given as `inf` or `-inf`.

```
heightAboveTable = constraintCartesianBounds(gripper);
heightAboveTable.Bounds = [-inf, inf; ...
    -inf, inf; ...
    0.05, inf]
```

```
heightAboveTable =
    constraintCartesianBounds with properties:

        EndEffector: 'iiwa_link_ee_kuka'
    ReferenceBody: ''
    TargetTransform: [4x4 double]
        Bounds: [3x2 double]
        Weights: [1 1 1]
```

Create a constraint on the position of the cup relative to the gripper, with a tolerance of 5 mm.

```
distanceFromCup = constraintPositionTarget('cupFrame');
distanceFromCup.ReferenceBody = gripper;
distanceFromCup.PositionTolerance = 0.005

distanceFromCup =
    constraintPositionTarget with properties:
```

```

        EndEffector: 'cupFrame'
        ReferenceBody: 'iiwa_link_ee_kuka'
        TargetPosition: [0 0 0]
        PositionTolerance: 0.0050
        Weights: 1

```

Create an aiming constraint that requires the z-axis of the `iiwa_link_ee` frame to be approximately vertical, by placing the target far above the robot. The `iiwa_link_ee` frame is oriented such that this constraint aligns the gripper with the axis of the cup.

```

alignWithCup = constraintAiming('iiwa_link_ee');
alignWithCup.TargetPoint = [0, 0, 100]

```

```

alignWithCup =
    constraintAiming with properties:

```

```

        EndEffector: 'iiwa_link_ee'
        ReferenceBody: ''
        TargetPoint: [0 0 100]
        AngularTolerance: 0
        Weights: 1

```

Create a joint position bounds constraint. Set the `Bounds` property of this constraint based on the previous configuration to limit the change in joint positions.

```

limitJointChange = constraintJointBounds(lbr)

```

```

limitJointChange =
    constraintJointBounds with properties:

```

```

        Bounds: [7x2 double]
        Weights: [1 1 1 1 1 1 1]

```

Create an orientation constraint for the gripper with a tolerance of one degree. This constraint requires the orientation of the gripper to match the value specified by the `TargetOrientation` property. Use this constraint to fix the orientation of the gripper during the final approach to the cup.

```

fixOrientation = constraintOrientationTarget(gripper);
fixOrientation.OrientationTolerance = deg2rad(1)

```

```
fixOrientation =  
    constraintOrientationTarget with properties:  
  
        EndEffector: 'iiwa_link_ee_kuka'  
        ReferenceBody: ''  
        TargetOrientation: [1 0 0 0]  
        OrientationTolerance: 0.0175  
        Weights: 1
```

Find a Configuration That Points at the Cup

This configuration should place the gripper at a distance from the cup, so that the final approach can be made with the gripper properly aligned.

```
intermediateDistance = 0.3;
```

Constraint objects have a `Weights` property which determines how the solver treats conflicting constraints. Setting the weights of a constraint to zero disables the constraint. For this configuration, disable the joint position bounds and orientation constraint.

```
limitJointChange.Weights = zeros(size(limitJointChange.Weights));  
fixOrientation.Weights = 0;
```

Set the target position for the cup in the gripper frame. The cup should lie on the z-axis of the gripper at the specified distance.

```
distanceFromCup.TargetPosition = [0,0,intermediateDistance];
```

Solve for the robot configuration that satisfies the input constraints using the `gik` solver. You must specify all the input constraints. Set that configuration as the second waypoint.

```
[qWaypoints(2,:),solutionInfo] = gik(q0, heightAboveTable, ...  
    distanceFromCup, alignWithCup, fixOrientation, ...  
    limitJointChange);
```

Find Configurations That Move Gripper to the Cup Along a Straight Line

Re-enable the joint position bound and orientation constraints.

```
limitJointChange.Weights = ones(size(limitJointChange.Weights));  
fixOrientation.Weights = 1;
```

Disable the align-with-cup constraint, as the orientation constraint makes it redundant.

```
alignWithCup.Weights = 0;
```

Set the orientation constraint to hold the orientation based on the previous configuration (`qWaypoints(2,:)`). Get the transformation from the gripper to the base of the robot model. Convert the homogeneous transformation to a quaternion.

```
fixOrientation.TargetOrientation = ...
    tform2quat(getTransform(lbr,qWaypoints(2,:),gripper));
```

Define the distance between the cup and gripper for each waypoint

```
finalDistanceFromCup = 0.05;
distanceFromCupValues = linspace(intermediateDistance, finalDistanceFromCup, numWaypoints);
```

Define the maximum allowed change in joint positions between each waypoint.

```
maxJointChange = deg2rad(10);
```

Call the solver for each remaining waypoint.

```
for k = 3:numWaypoints
    % Update the target position.
    distanceFromCup.TargetPosition(3) = distanceFromCupValues(k-1);
    % Restrict the joint positions to lie close to their previous values.
    limitJointChange.Bounds = [qWaypoints(k-1,:) - maxJointChange, ...
                              qWaypoints(k-1,:) + maxJointChange];
    % Solve for a configuration and add it to the waypoints array.
    [qWaypoints(k,:),solutionInfo] = gik(qWaypoints(k-1,:), ...
                                         heightAboveTable, ...
                                         distanceFromCup, alignWithCup, ...
                                         fixOrientation, limitJointChange);
end
```

Visualize the Generated Trajectory

Interpolate between the waypoints to generate a smooth trajectory. Use `pchip` to avoid overshoots, which might violate the joint limits of the robot.


```
framerate = 15;
r = rateControl(framerate);
tFinal = 10;
tWaypoints = [0,linspace(tFinal/2,tFinal,size(qWaypoints,1)-1)];
numFrames = tFinal*framerate;
qInterp = pchip(tWaypoints,qWaypoints',linspace(0,tFinal,numFrames))';
```

Compute the gripper position for each interpolated configuration.

```
gripperPosition = zeros(numFrames,3);  
for k = 1:numFrames  
    gripperPosition(k,:) = tform2trvec(getTransform(lbr,qInterp(k,:), ...  
                                             gripper));  
end
```


Show the robot in its initial configuration along with the table and cup

```
figure;  
show(lbr, qWaypoints(1,:), 'PreservePlot', false);  
hold on  
exampleHelperPlotCupAndTable(cupHeight, cupRadius, cupPosition);  
p = plot3(gripperPosition(1,1), gripperPosition(1,2), gripperPosition(1,3));
```

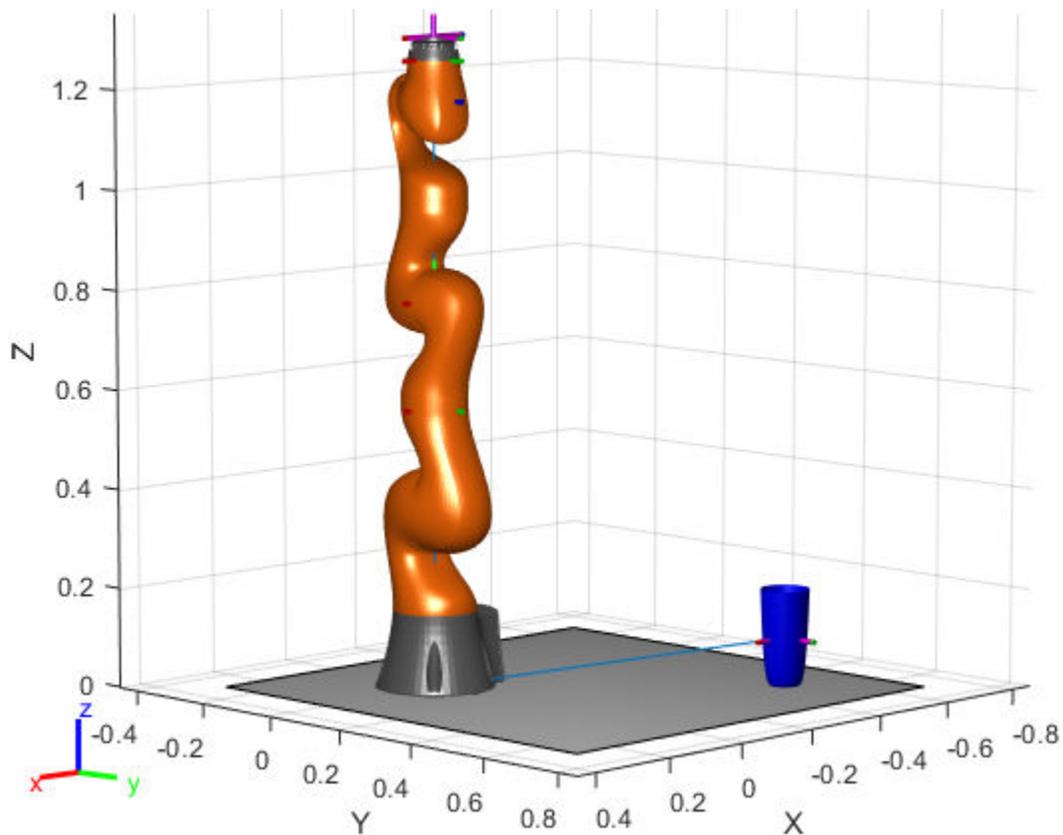

Animate the manipulator and plot the gripper position.

```
hold on
for k = 1:size(qInterp,1)
    show(lbr, qInterp(k,:), 'PreservePlot', false);
    p.XData(k) = gripperPosition(k,1);
    p.YData(k) = gripperPosition(k,2);
    p.ZData(k) = gripperPosition(k,3);
    waitfor(r);
end
hold off
```

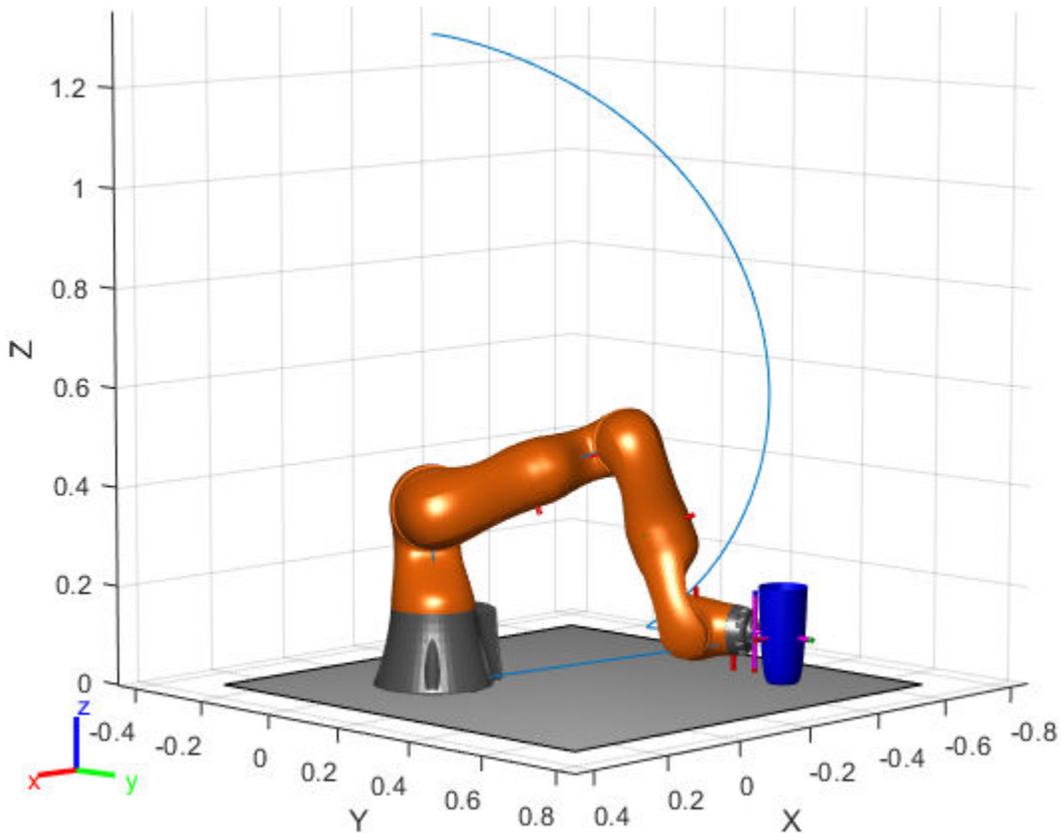

If you want to save the generated configurations to a MAT-file for later use, execute the following:

```
>> save('lbr_trajectory.mat', 'tWaypoints', 'qWaypoints');
```

Compatibility Considerations

constraintOrientationTarget was renamed

Behavior change in future release

The `constraintOrientationTarget` object was renamed from `robotics.OrientationTarget`. Use `constraintOrientationTarget` for all object creation.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

`constraintJointBounds` | `constraintPoseTarget` | `constraintPositionTarget` | `generalizedInverseKinematics`

Topics

“Plan a Reaching Trajectory With Multiple Kinematic Constraints”

Introduced in R2017a

constraintPoseTarget

Create constraint on relative pose of body

Description

The `constraintPoseTarget` object describes a constraint that requires the pose of one body (the end effector) to match a target pose within a distance and angular tolerance in any direction. The target pose is specified relative to the body frame of the reference body.

Constraint objects are used in `generalizedInverseKinematics` objects to specify multiple kinematic constraints on a robot.

For an example that uses multiple constraint objects, see “Plan a Reaching Trajectory With Multiple Kinematic Constraints”.

Creation

Syntax

```
poseConst = constraintPoseTarget(endeffector)
poseConst = constraintPoseTarget(endeffector, Name, Value)
```

Description

`poseConst = constraintPoseTarget(endeffector)` returns a pose target object that represents a constraint on the body of the robot model specified by `endeffector`.

`poseConst = constraintPoseTarget(endeffector, Name, Value)` returns a pose target object with each specified property name set to the specified value by one or more `Name, Value` pair arguments.

Input Arguments

endeffector — End-effector name

string scalar | character vector

End-effector name, specified as a string scalar or character vector. When using this constraint with `generalizedInverseKinematics`, the name must match a body specified in the robot model (`rigidBodyTree`).

Example: "left_palm"

Data Types: char | string

Properties

EndEffector — Name of the end effector

string scalar | character vector

Name of the end effector, specified as a string scalar or character vector. When using this constraint with `generalizedInverseKinematics`, the name must match a body specified in the robot model (`rigidBodyTree`).

Example: "left_palm"

Data Types: char | string

ReferenceBody — Name of the reference body frame

' ' (default) | string scalar | character vector

Name of the reference body frame, specified as a string scalar or character vector. The default ' ' indicates that the constraint is relative to the base of the robot model. When using this constraint with `generalizedInverseKinematics`, the name must match a body specified in the robot model (`rigidBodyTree`).

Example:

Data Types: char | string

TargetTransform — Pose of the target frame relative to the reference body

eye(4) (default) | matrix

Pose of the target frame relative to the reference body, specified as a matrix. The matrix is a homogeneous transform that specifies the relative transformation to convert a point in the target frame to the reference body frame.

Example: `[1 0 0 1; 0 1 0 1; 0 0 1 1; 0 0 0 1]`

OrientationTolerance — Maximum allowed rotation angle

θ (default) | numeric scalar

Maximum allowed rotation angle in radians, specified as a numeric scalar. This value is the upper bound on the magnitude of the rotation required to make the end-effector orientation match the target orientation.

Example:

PositionTolerance — Maximum allowed distance from target

θ (default) | numeric scalar in meters

Maximum allowed distance from target, specified as a numeric scalar in meters. This value is the upper bound on the distance between the end-effector origin and the target position.

Example:

Weights — Weights of the constraint

`[1 1]` (default) | two-element vector

Weights of the constraint, specified as a two-element vector. Each element of the vector corresponds to the weight for the `PositionTolerance` and `OrientationTolerance` respectively. These weights are used with the `Weights` of all the constraints specified in `generalizedInverseKinematics` to properly balance each constraint.

Example:

Examples

Plan a Reaching Trajectory With Multiple Kinematic Constraints

This example shows how to use generalized inverse kinematics to plan a joint-space trajectory for a robotic manipulator. It combines multiple constraints to generate a trajectory that guides the gripper to a cup resting on a table. These constraints ensure

that the gripper approaches the cup in a straight line and that the gripper remains at a safe distance from the table, without requiring the poses of the gripper to be determined in advance.

Set Up the Robot Model

This example uses a model of the KUKA LBR iiwa, a 7 degree-of-freedom robot manipulator. `importrobot` generates a `rigidBodyTree` model from a description stored in a Unified Robot Description Format (URDF) file.

```
lbr = importrobot('iiwa14.urdf'); % 14 kg payload version
lbr.DataFormat = 'row';
gripper = 'iiwa_link_ee_kuka';
```

Define dimensions for the cup.

```
cupHeight = 0.2;
cupRadius = 0.05;
cupPosition = [-0.5, 0.5, cupHeight/2];
```

Add a fixed body to the robot model representing the center of the cup.

```
body = rigidBody('cupFrame');
setFixedTransform(body.Joint, trvec2tform(cupPosition))
addBody(lbr, body, lbr.BaseName);
```

Define the Planning Problem

The goal of this example is to generate a sequence of robot configurations that satisfy the following criteria:

- Start in the home configuration
- No abrupt changes in robot configuration
- Keep the gripper at least 5 cm above the "table" ($z = 0$)
- The gripper should be aligned with the cup as it approaches
- Finish with the gripper 5 cm from the center of the cup

This example utilizes constraint objects to generate robot configurations that satisfy these criteria. The generated trajectory consists of five configuration waypoints. The first waypoint, q_0 , is set as the home configuration. Pre-allocate the rest of the configurations in `qWaypoints` using `repmat`.

```
numWaypoints = 5;
q0 = homeConfiguration(lbr);
qWaypoints = repmat(q0, numWaypoints, 1);
```

Create a `generalizedInverseKinematics` solver that accepts the following constraint inputs:

- Cartesian bounds - Limits the height of the gripper
- A position target - Specifies the position of the cup relative to the gripper.
- An aiming constraint - Aligns the gripper with the cup axis
- An orientation target - Maintains a fixed orientation for the gripper while approaching the cup
- Joint position bounds - Limits the change in joint positions between waypoints.

```
gik = generalizedInverseKinematics('RigidBodyTree', lbr, ...
    'ConstraintInputs', {'cartesian', 'position', 'aiming', 'orientation', 'joint'})
```

```
gik =
    generalizedInverseKinematics with properties:
```

```
    NumConstraints: 5
    ConstraintInputs: {1x5 cell}
    RigidBodyTree: [1x1 rigidBodyTree]
    SolverAlgorithm: 'BFGSGradientProjection'
    SolverParameters: [1x1 struct]
```

Create Constraint Objects

Create the constraint objects that are passed as inputs to the solver. These object contain the parameters needed for each constraint. Modify these parameters between calls to the solver as necessary.

Create a Cartesian bounds constraint that requires the gripper to be at least 5 cm above the table (negative z direction). All other values are given as `inf` or `-inf`.

```
heightAboveTable = constraintCartesianBounds(gripper);
heightAboveTable.Bounds = [-inf, inf; ...
    -inf, inf; ...
    0.05, inf]
```

```
heightAboveTable =
    constraintCartesianBounds with properties:
```

```
EndEffector: 'iiwa_link_ee_kuka'  
ReferenceBody: ''  
TargetTransform: [4x4 double]  
Bounds: [3x2 double]  
Weights: [1 1 1]
```

Create a constraint on the position of the cup relative to the gripper, with a tolerance of 5 mm.

```
distanceFromCup = constraintPositionTarget('cupFrame');  
distanceFromCup.ReferenceBody = gripper;  
distanceFromCup.PositionTolerance = 0.005
```

```
distanceFromCup =  
    constraintPositionTarget with properties:
```

```
EndEffector: 'cupFrame'  
ReferenceBody: 'iiwa_link_ee_kuka'  
TargetPosition: [0 0 0]  
PositionTolerance: 0.0050  
Weights: 1
```

Create an aiming constraint that requires the z-axis of the `iiwa_link_ee` frame to be approximately vertical, by placing the target far above the robot. The `iiwa_link_ee` frame is oriented such that this constraint aligns the gripper with the axis of the cup.

```
alignWithCup = constraintAiming('iiwa_link_ee');  
alignWithCup.TargetPoint = [0, 0, 100]
```

```
alignWithCup =  
    constraintAiming with properties:
```

```
EndEffector: 'iiwa_link_ee'  
ReferenceBody: ''  
TargetPoint: [0 0 100]  
AngularTolerance: 0  
Weights: 1
```

Create a joint position bounds constraint. Set the `Bounds` property of this constraint based on the previous configuration to limit the change in joint positions.

```
limitJointChange = constraintJointBounds(lbr)
```

```
limitJointChange =  
    constraintJointBounds with properties:
```

```
    Bounds: [7x2 double]  
    Weights: [1 1 1 1 1 1 1]
```

Create an orientation constraint for the gripper with a tolerance of one degree. This constraint requires the orientation of the gripper to match the value specified by the `TargetOrientation` property. Use this constraint to fix the orientation of the gripper during the final approach to the cup.

```
fixOrientation = constraintOrientationTarget(gripper);  
fixOrientation.OrientationTolerance = deg2rad(1)
```

```
fixOrientation =  
    constraintOrientationTarget with properties:
```

```
        EndEffector: 'iiwa_link_ee_kuka'  
        ReferenceBody: ''  
        TargetOrientation: [1 0 0 0]  
        OrientationTolerance: 0.0175  
        Weights: 1
```

Find a Configuration That Points at the Cup

This configuration should place the gripper at a distance from the cup, so that the final approach can be made with the gripper properly aligned.

```
intermediateDistance = 0.3;
```

Constraint objects have a `Weights` property which determines how the solver treats conflicting constraints. Setting the weights of a constraint to zero disables the constraint. For this configuration, disable the joint position bounds and orientation constraint.

```
limitJointChange.Weights = zeros(size(limitJointChange.Weights));  
fixOrientation.Weights = 0;
```

Set the target position for the cup in the gripper frame. The cup should lie on the z-axis of the gripper at the specified distance.

```
distanceFromCup.TargetPosition = [0,0,intermediateDistance];
```

Solve for the robot configuration that satisfies the input constraints using the `gik` solver. You must specify all the input constraints. Set that configuration as the second waypoint.

```
[qWaypoints(2,:),solutionInfo] = gik(q0, heightAboveTable, ...  
                                   distanceFromCup, alignWithCup, fixOrientation, ...  
                                   limitJointChange);
```

Find Configurations That Move Gripper to the Cup Along a Straight Line

Re-enable the joint position bound and orientation constraints.

```
limitJointChange.Weights = ones(size(limitJointChange.Weights));  
fixOrientation.Weights = 1;
```

Disable the align-with-cup constraint, as the orientation constraint makes it redundant.

```
alignWithCup.Weights = 0;
```

Set the orientation constraint to hold the orientation based on the previous configuration (`qWaypoints(2,:)`). Get the transformation from the gripper to the base of the robot model. Convert the homogeneous transformation to a quaternion.

```
fixOrientation.TargetOrientation = ...  
    tform2quat(getTransform(lbr,qWaypoints(2,:),gripper));
```

Define the distance between the cup and gripper for each waypoint

```
finalDistanceFromCup = 0.05;  
distanceFromCupValues = linspace(intermediateDistance, finalDistanceFromCup, numWaypoints);
```

Define the maximum allowed change in joint positions between each waypoint.

```
maxJointChange = deg2rad(10);
```

Call the solver for each remaining waypoint.

```
for k = 3:numWaypoints  
    % Update the target position.  
    distanceFromCup.TargetPosition(3) = distanceFromCupValues(k-1);  
    % Restrict the joint positions to lie close to their previous values.  
    limitJointChange.Bounds = [qWaypoints(k-1,:) - maxJointChange, ...  
                              qWaypoints(k-1,:) + maxJointChange];  
    % Solve for a configuration and add it to the waypoints array.  
    [qWaypoints(k,:),solutionInfo] = gik(qWaypoints(k-1,:), ...  
                                         heightAboveTable, ...
```

```

distanceFromCup, alignWithCup, ...
fixOrientation, limitJointChange);
end

```

Visualize the Generated Trajectory

Interpolate between the waypoints to generate a smooth trajectory. Use `pchip` to avoid overshoots, which might violate the joint limits of the robot.

```

framerate = 15;
r = rateControl(framerate);
tFinal = 10;
tWaypoints = [0, linspace(tFinal/2, tFinal, size(qWaypoints, 1) - 1)];
numFrames = tFinal * framerate;
qInterp = pchip(tWaypoints, qWaypoints', linspace(0, tFinal, numFrames))';

```

Compute the gripper position for each interpolated configuration.

```

gripperPosition = zeros(numFrames, 3);
for k = 1:numFrames
    gripperPosition(k, :) = tform2trvec(getTransform(lbr, qInterp(k, :), ...
                                                    gripper));
end


```

Show the robot in its initial configuration along with the table and cup

```

figure;
show(lbr, qWaypoints(1, :), 'PreservePlot', false);
hold on
exampleHelperPlotCupAndTable(cupHeight, cupRadius, cupPosition);
p = plot3(gripperPosition(1, 1), gripperPosition(1, 2), gripperPosition(1, 3));

```

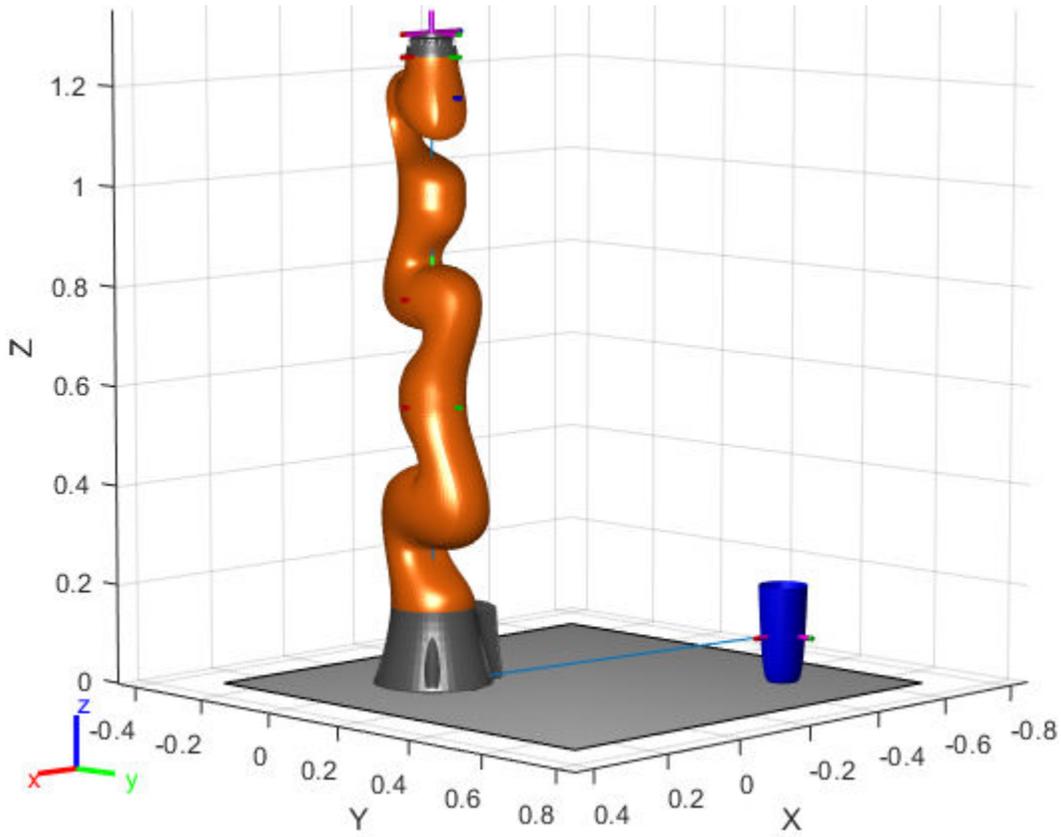


Animate the manipulator and plot the gripper position.

```

hold on
for k = 1:size(qInterp,1)
    show(lbr, qInterp(k,:), 'PreservePlot', false);
    p.XData(k) = gripperPosition(k,1);
    p.YData(k) = gripperPosition(k,2);
    p.ZData(k) = gripperPosition(k,3);
    waitfor(r);
end
hold off

```

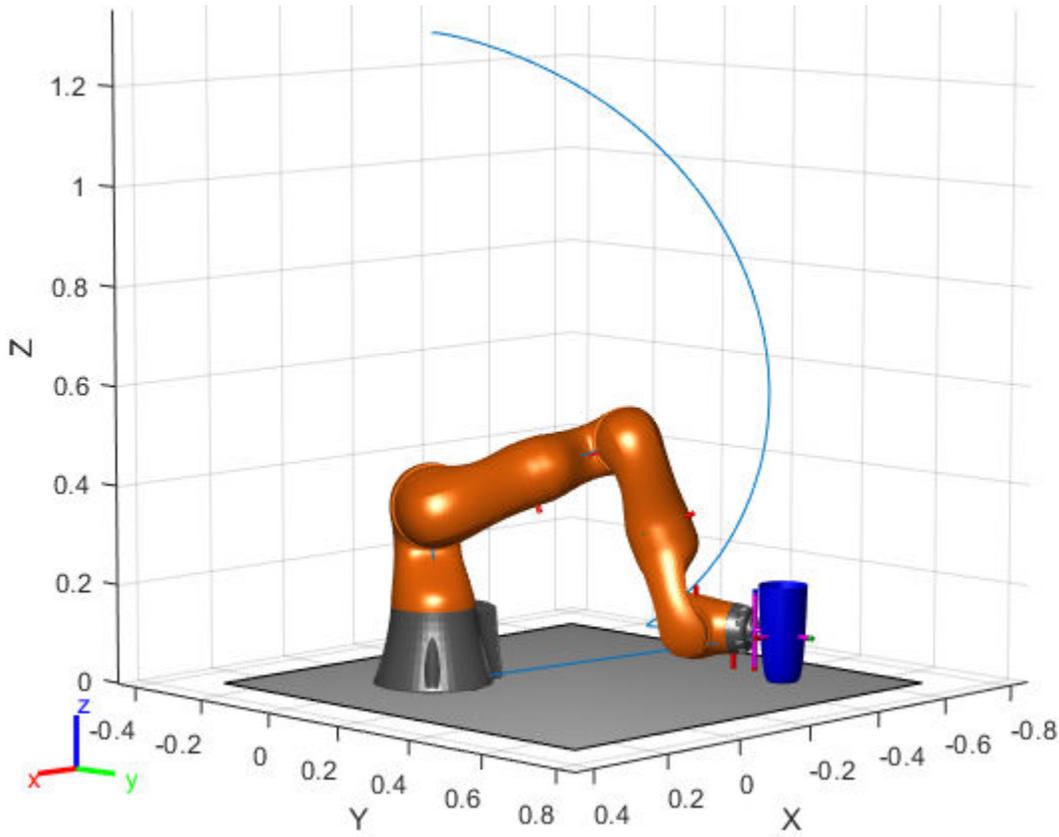

If you want to save the generated configurations to a MAT-file for later use, execute the following:

```
>> save('lbr_trajectory.mat', 'tWaypoints', 'qWaypoints');
```

Compatibility Considerations

constraintPoseTarget was renamed

Behavior change in future release

The `constraintPoseTarget` object was renamed from `robotics.PoseTarget`. Use `constraintPoseTarget` for all object creation.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

`constraintCartesianBounds` | `constraintOrientationTarget` |
`constraintPositionTarget` | `generalizedInverseKinematics`

Topics

“Plan a Reaching Trajectory With Multiple Kinematic Constraints”

Introduced in R2017a

constraintPositionTarget

Create constraint on relative position of body

Description

The `constraintPositionTarget` object describes a constraint that requires the position of one body (the end effector) to match a target position within a distance tolerance in any direction. The target position is specified relative to the body frame of the reference body.

Constraint objects are used in `generalizedInverseKinematics` objects to specify multiple kinematic constraints on a robot.

For an example that uses multiple constraint objects, see “Plan a Reaching Trajectory With Multiple Kinematic Constraints”.

Creation

Syntax

```
positionConst = constraintPositionTarget(endeffector)  
positionConst = constraintPositionTarget(endeffector,Name,Value)
```

Description

`positionConst = constraintPositionTarget(endeffector)` returns a position target object that represents a constraint on the body of the robot model specified by `endeffector`.

`positionConst = constraintPositionTarget(endeffector,Name,Value)` returns a position target object with each specified property name set to the specified value by one or more `Name,Value` pair arguments.

Input Arguments

endeffector — End-effector name

string scalar | character vector

End-effector name, specified as a string scalar or character vector. When using this constraint with `generalizedInverseKinematics`, the name must match a body specified in the robot model (`rigidBodyTree`).

Example: "left_palm"

Data Types: char | string

Properties

EndEffector — Name of the end effector

string scalar | character vector

Name of the end effector, specified as a string scalar or character vector. When using this constraint with `generalizedInverseKinematics`, the name must match a body specified in the robot model (`rigidBodyTree`).

Example: "left_palm"

Data Types: char | string

ReferenceBody — Name of the reference body frame

' ' (default) | character vector

Name of the reference body frame, specified as a character vector. The default ' ' indicates that the constraint is relative to the base of the robot model. When using this constraint with `generalizedInverseKinematics`, the name must match a body specified in the robot model (`rigidBodyTree`).

Example:

TargetPosition — Position of the target relative to the reference body

[0 0 0] (default) | [x y z] vector

Position of the target relative to the reference body, specified as an [x y z] vector. The target position is a point specified in the reference body frame.

Example:

PositionTolerance — Maximum allowed distance from target

0 (default) | numeric scalar

Maximum allowed distance from target in meters, specified as a numeric scalar. This value is the upper bound on the distance between the end-effector origin and the target position.

Example:

Weights — Weight of the constraint

1 (default) | numeric scalar

Weight of the constraint, specified as a numeric scalar. This weight is used with the `Weights` property of all the constraints specified in `generalizedInverseKinematics` to properly balance each constraint.

Example:

Examples

Plan a Reaching Trajectory With Multiple Kinematic Constraints

This example shows how to use generalized inverse kinematics to plan a joint-space trajectory for a robotic manipulator. It combines multiple constraints to generate a trajectory that guides the gripper to a cup resting on a table. These constraints ensure that the gripper approaches the cup in a straight line and that the gripper remains at a safe distance from the table, without requiring the poses of the gripper to be determined in advance.

Set Up the Robot Model

This example uses a model of the KUKA LBR iiwa, a 7 degree-of-freedom robot manipulator. `importrobot` generates a `rigidBodyTree` model from a description stored in a Unified Robot Description Format (URDF) file.

```
lbr = importrobot('iiwa14.urdf'); % 14 kg payload version
lbr.DataFormat = 'row';
gripper = 'iiwa_link_ee_kuka';
```

Define dimensions for the cup.

```
cupHeight = 0.2;
cupRadius = 0.05;
cupPosition = [-0.5, 0.5, cupHeight/2];
```

Add a fixed body to the robot model representing the center of the cup.

```
body = rigidBody('cupFrame');
setFixedTransform(body.Joint, trvec2tform(cupPosition))
addBody(lbr, body, lbr.BaseName);
```

Define the Planning Problem

The goal of this example is to generate a sequence of robot configurations that satisfy the following criteria:

- Start in the home configuration
- No abrupt changes in robot configuration
- Keep the gripper at least 5 cm above the "table" ($z = 0$)
- The gripper should be aligned with the cup as it approaches
- Finish with the gripper 5 cm from the center of the cup

This example utilizes constraint objects to generate robot configurations that satisfy these criteria. The generated trajectory consists of five configuration waypoints. The first waypoint, q_0 , is set as the home configuration. Pre-allocate the rest of the configurations in $qWaypoints$ using `repmat`.

```
numWaypoints = 5;
q0 = homeConfiguration(lbr);
qWaypoints = repmat(q0, numWaypoints, 1);
```

Create a `generalizedInverseKinematics` solver that accepts the following constraint inputs:

- Cartesian bounds - Limits the height of the gripper
- A position target - Specifies the position of the cup relative to the gripper.
- An aiming constraint - Aligns the gripper with the cup axis
- An orientation target - Maintains a fixed orientation for the gripper while approaching the cup
- Joint position bounds - Limits the change in joint positions between waypoints.

```

gik = generalizedInverseKinematics('RigidBodyTree', lbr, ...
    'ConstraintInputs', {'cartesian', 'position', 'aiming', 'orientation', 'joint'})

gik =
    generalizedInverseKinematics with properties:

        NumConstraints: 5
    ConstraintInputs: {1x5 cell}
        RigidBodyTree: [1x1 rigidBodyTree]
    SolverAlgorithm: 'BFGSGradientProjection'
    SolverParameters: [1x1 struct]

```

Create Constraint Objects

Create the constraint objects that are passed as inputs to the solver. These object contain the parameters needed for each constraint. Modify these parameters between calls to the solver as necessary.

Create a Cartesian bounds constraint that requires the gripper to be at least 5 cm above the table (negative z direction). All other values are given as `inf` or `-inf`.

```

heightAboveTable = constraintCartesianBounds(gripper);
heightAboveTable.Bounds = [-inf, inf; ...
    -inf, inf; ...
    0.05, inf]

```

```

heightAboveTable =
    constraintCartesianBounds with properties:

        EndEffector: 'iiwa_link_ee_kuka'
    ReferenceBody: ''
    TargetTransform: [4x4 double]
        Bounds: [3x2 double]
        Weights: [1 1 1]

```

Create a constraint on the position of the cup relative to the gripper, with a tolerance of 5 mm.

```

distanceFromCup = constraintPositionTarget('cupFrame');
distanceFromCup.ReferenceBody = gripper;
distanceFromCup.PositionTolerance = 0.005

distanceFromCup =
    constraintPositionTarget with properties:

```

```
        EndEffector: 'cupFrame'  
        ReferenceBody: 'iiwa_link_ee_kuka'  
        TargetPosition: [0 0 0]  
        PositionTolerance: 0.0050  
        Weights: 1
```

Create an aiming constraint that requires the z-axis of the `iiwa_link_ee` frame to be approximately vertical, by placing the target far above the robot. The `iiwa_link_ee` frame is oriented such that this constraint aligns the gripper with the axis of the cup.

```
alignWithCup = constraintAiming('iiwa_link_ee');  
alignWithCup.TargetPoint = [0, 0, 100]
```

```
alignWithCup =  
    constraintAiming with properties:
```

```
        EndEffector: 'iiwa_link_ee'  
        ReferenceBody: ''  
        TargetPoint: [0 0 100]  
        AngularTolerance: 0  
        Weights: 1
```

Create a joint position bounds constraint. Set the `Bounds` property of this constraint based on the previous configuration to limit the change in joint positions.

```
limitJointChange = constraintJointBounds(lbr)
```

```
limitJointChange =  
    constraintJointBounds with properties:
```

```
        Bounds: [7x2 double]  
        Weights: [1 1 1 1 1 1 1]
```

Create an orientation constraint for the gripper with a tolerance of one degree. This constraint requires the orientation of the gripper to match the value specified by the `TargetOrientation` property. Use this constraint to fix the orientation of the gripper during the final approach to the cup.

```
fixOrientation = constraintOrientationTarget(gripper);  
fixOrientation.OrientationTolerance = deg2rad(1)
```

```

fixOrientation =
    constraintOrientationTarget with properties:
        EndEffector: 'iiwa_link_ee_kuka'
        ReferenceBody: ''
        TargetOrientation: [1 0 0 0]
        OrientationTolerance: 0.0175
        Weights: 1

```

Find a Configuration That Points at the Cup

This configuration should place the gripper at a distance from the cup, so that the final approach can be made with the gripper properly aligned.

```
intermediateDistance = 0.3;
```

Constraint objects have a `Weights` property which determines how the solver treats conflicting constraints. Setting the weights of a constraint to zero disables the constraint. For this configuration, disable the joint position bounds and orientation constraint.

```
limitJointChange.Weights = zeros(size(limitJointChange.Weights));
fixOrientation.Weights = 0;
```

Set the target position for the cup in the gripper frame. The cup should lie on the z-axis of the gripper at the specified distance.

```
distanceFromCup.TargetPosition = [0,0,intermediateDistance];
```

Solve for the robot configuration that satisfies the input constraints using the `gik` solver. You must specify all the input constraints. Set that configuration as the second waypoint.

```
[qWaypoints(2,:),solutionInfo] = gik(q0, heightAboveTable, ...
    distanceFromCup, alignWithCup, fixOrientation, ...
    limitJointChange);
```

Find Configurations That Move Gripper to the Cup Along a Straight Line

Re-enable the joint position bound and orientation constraints.

```
limitJointChange.Weights = ones(size(limitJointChange.Weights));
fixOrientation.Weights = 1;
```

Disable the align-with-cup constraint, as the orientation constraint makes it redundant.

```
alignWithCup.Weights = 0;
```

Set the orientation constraint to hold the orientation based on the previous configuration (`qWaypoints(2,:)`). Get the transformation from the gripper to the base of the robot model. Convert the homogeneous transformation to a quaternion.

```
fixOrientation.TargetOrientation = ...  
    tform2quat(getTransform(lbr,qWaypoints(2,:),gripper));
```

Define the distance between the cup and gripper for each waypoint

```
finalDistanceFromCup = 0.05;  
distanceFromCupValues = linspace(intermediateDistance, finalDistanceFromCup, numWaypoints);
```

Define the maximum allowed change in joint positions between each waypoint.

```
maxJointChange = deg2rad(10);
```

Call the solver for each remaining waypoint.

```
for k = 3:numWaypoints  
    % Update the target position.  
    distanceFromCup.TargetPosition(3) = distanceFromCupValues(k-1);  
    % Restrict the joint positions to lie close to their previous values.  
    limitJointChange.Bounds = [qWaypoints(k-1,:) - maxJointChange, ...  
                              qWaypoints(k-1,:) + maxJointChange];  
    % Solve for a configuration and add it to the waypoints array.  
    [qWaypoints(k,:),solutionInfo] = gik(qWaypoints(k-1,:), ...  
                                       heightAboveTable, ...  
                                       distanceFromCup, alignWithCup, ...  
                                       fixOrientation, limitJointChange);  
end
```

Visualize the Generated Trajectory

Interpolate between the waypoints to generate a smooth trajectory. Use `pchip` to avoid overshoots, which might violate the joint limits of the robot.

```
framerate = 15;  
r = rateControl(framerate);  
tFinal = 10;  
tWaypoints = [0,linspace(tFinal/2,tFinal,size(qWaypoints,1)-1)];  
numFrames = tFinal*framerate;  
qInterp = pchip(tWaypoints,qWaypoints',linspace(0,tFinal,numFrames))';
```

Compute the gripper position for each interpolated configuration.

```

gripperPosition = zeros(numFrames,3);
for k = 1:numFrames
    gripperPosition(k,:) = tform2trvec(getTransform(lbr,qInterp(k,:), ...
                                                gripper));
end


```

Show the robot in its initial configuration along with the table and cup

```


figure;
show(lbr, qWaypoints(1,:), 'PreservePlot', false);
hold on
exampleHelperPlotCupAndTable(cupHeight, cupRadius, cupPosition);
p = plot3(gripperPosition(1,1), gripperPosition(1,2), gripperPosition(1,3));

```

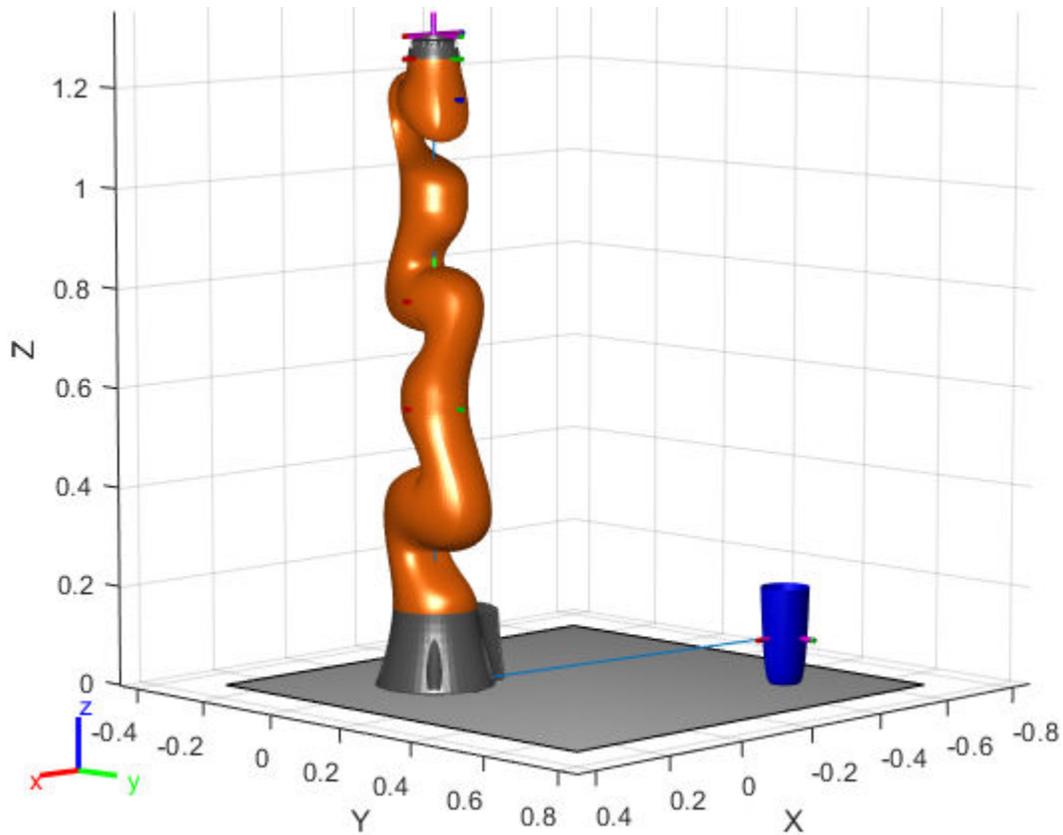

Animate the manipulator and plot the gripper position.

```
hold on
for k = 1:size(qInterp,1)
    show(lbr, qInterp(k,:), 'PreservePlot', false);
    p.XData(k) = gripperPosition(k,1);
    p.YData(k) = gripperPosition(k,2);
    p.ZData(k) = gripperPosition(k,3);
    waitfor(r);
end
hold off
```

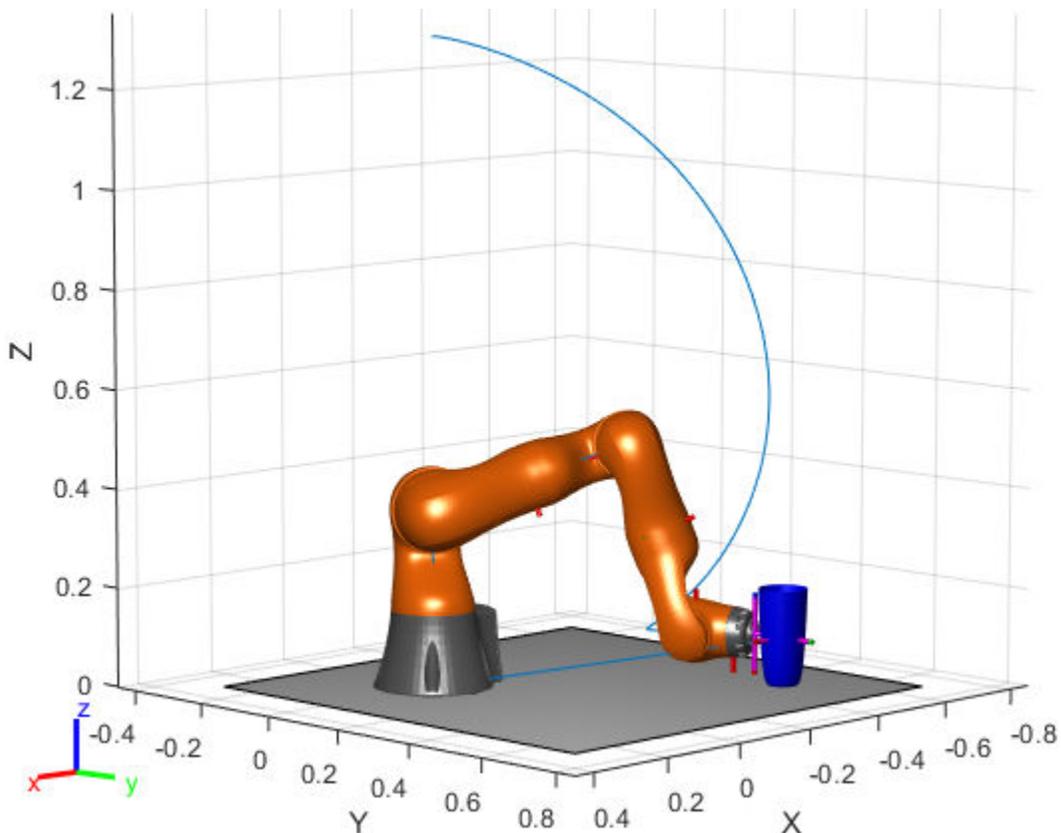

If you want to save the generated configurations to a MAT-file for later use, execute the following:

```
>> save('lbr_trajectory.mat', 'tWaypoints', 'qWaypoints');
```

Compatibility Considerations

constraintPositionTarget was renamed

Behavior change in future release

The `constraintPositionTarget` object was renamed from `robotics.PositionTarget`. Use `constraintPositionTarget` for all object creation.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

`constraintCartesianBounds` | `constraintOrientationTarget` |
`constraintPoseTarget` | `generalizedInverseKinematics`

Topics

“Plan a Reaching Trajectory With Multiple Kinematic Constraints”

Introduced in R2017a

controllerPurePursuit

Create controller to follow set of waypoints

Description

The `controllerPurePursuit` System object™ creates a controller object used to make a differential-drive vehicle follow a set of waypoints. The object computes the linear and angular velocities for the vehicle given the current pose. Successive calls to the object with updated poses provide updated velocity commands for the vehicle. Use the `MaxAngularVelocity` and `DesiredLinearVelocity` properties to update the velocities based on the vehicle's performance.

The `LookaheadDistance` property computes a look-ahead point on the path, which is a local goal for the vehicle. The angular velocity command is computed based on this point. Changing `LookaheadDistance` has a significant impact on the performance of the algorithm. A higher look-ahead distance results in a smoother trajectory for the vehicle, but can cause the vehicle to cut corners along the path. A low look-ahead distance can result in oscillations in tracking the path, causing unstable behavior. For more information on the pure pursuit algorithm, see “Pure Pursuit Controller”.

Note Starting in R2016b, instead of using the `step` method to perform the operation defined by the System object, you can call the object with arguments, as if it were a function. For example, `y = step(obj,x)` and `y = obj(x)` perform equivalent operations.

To compute linear and angular velocity control commands:

- 1** Create the `controllerPurePursuit` object and set its properties.
- 2** Call the object with arguments, as if it were a function.

To learn more about how System objects work, see [What Are System Objects? \(MATLAB\)](#).

Creation

Syntax

```
controller = controllerPurePursuit
```

```
controller = controllerPurePursuit(Name,Value)
```

Description

`controller = controllerPurePursuit` creates a pure pursuit object that uses the pure pursuit algorithm to compute the linear and angular velocity inputs for a differential drive vehicle.

`controller = controllerPurePursuit(Name,Value)` creates a pure pursuit object with additional options specified by one or more `Name,Value` pairs. `Name` is the property name and `Value` is the corresponding value. `Name` must appear inside single quotes (' '). You can specify several name-value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`. Properties not specified retain their default values.

Example: `controller = controllerPurePursuit('DesiredLinearVelocity', 0.5)`

Properties

DesiredLinearVelocity — Desired constant linear velocity

0.1 (default) | scalar in meters per second

Desired constant linear velocity, specified as a scalar in meters per second. The controller assumes that the vehicle drives at a constant linear velocity and that the computed angular velocity is independent of the linear velocity.

Data Types: `double`

LookaheadDistance — Look-ahead distance

1.0 (default) | scalar in meters

Look-ahead distance, specified as a scalar in meters. The look-ahead distance changes the response of the controller. A vehicle with a higher look-ahead distance produces smooth

paths but takes larger turns at corners. A vehicle with a smaller look-ahead distance follows the path closely and takes sharp turns, but potentially creating oscillations in the path.

Data Types: double

MaxAngularVelocity — Maximum angular velocity

1.0 (default) | scalar in radians per second

Maximum angular velocity, specified a scalar in radians per second. The controller saturates the absolute angular velocity output at the given value.

Data Types: double

Waypoints — Waypoints

[] (default) | n -by-2 array

Waypoints, specified as an n -by-2 array of $[x \ y]$ pairs, where n is the number of waypoints. You can generate the waypoints from the `mobileRobotPRM` class or from another source.

Data Types: double

Usage

Syntax

```
[vel,angvel] = controller(pose)
[vel,angvel,lookaheadpoint] = controller(pose)
```

Description

`[vel,angvel] = controller(pose)` processes the vehicle's position and orientation, pose, and outputs the linear velocity, `vel`, and angular velocity, `angvel`.

`[vel,angvel,lookaheadpoint] = controller(pose)` returns the look-ahead point, which is a location on the path used to compute the velocity commands. This location on the path is computed using the `LookaheadDistance` property on the controller object.

Input Arguments

pose — Position and orientation of vehicle

3-by-1 vector in the form [x y theta]

Position and orientation of vehicle, specified as a 3-by-1 vector in the form [x y theta]. The vehicle pose is an x and y position with angular orientation θ (in radians) measured from the x-axis.

Output Arguments

vel — Linear velocity

scalar in meters per second

Linear velocity, specified as a scalar in meters per second.

Data Types: double

angvel — Angular velocity

scalar in radians per second

Angular velocity, specified as a scalar in radians per second.

Data Types: double

lookaheadpoint — Look-ahead point on path

[x y] vector

Look-ahead point on the path, returned as an [x y] vector. This value is calculated based on the LookaheadDistance property.

Object Functions

To use an object function, specify the System object as the first input argument. For example, to release system resources of a System object named `obj`, use this syntax:

```
release(obj)
```

Specific to controllerPurePursuit

info Characteristic information about controllerPurePursuit object

Common to All System Objects

step	Run System object algorithm
release	Release resources and allow changes to System object property values and input characteristics
reset	Reset internal states of System object

Examples

Get Additional Pure Pursuit Object Information

Use the `info` method to get more information about a `controllerPurePursuit` object. The `info` function returns two fields, `RobotPose` and `LookaheadPoint`, which correspond to the current position and orientation of the robot and the point on the path used to compute outputs from the last call of the object.

Create a `controllerPurePursuit` object.

```
pp = controllerPurePursuit;
```

Assign waypoints.

```
pp.Waypoints = [0 0;1 1];
```

Compute control commands using the `pp` object with the initial pose `[x y theta]` given as the input.

```
[v,w] = pp([0 0 0]);
```

Get additional information.

```
s = info(pp)
```

```
s = struct with fields:  
    RobotPose: [0 0 0]  
    LookaheadPoint: [0.7071 0.7071]
```

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

Use in a MATLAB Function block is not supported.

For additional information about code generation for System objects, see “System Objects in MATLAB Code Generation” (MATLAB Coder)

See Also

[binaryOccupancyMap](#) | [mobileRobotPRM](#) | [occupancyMap](#)

Topics

“Path Following for a Differential Drive Robot”

“Pure Pursuit Controller”


Introduced in R2019b

differentialDriveKinematics

Differential-drive vehicle model

Description

`differentialDriveKinematics` creates a differential-drive vehicle model to simulate simplified vehicle dynamics. This model approximates a vehicle with a single fixed axle and wheels separated by a specified track width. The wheels can be driven independently. Vehicle speed and heading is defined from the axle center. The state of the vehicle is defined as a three-element vector, $[x \ y \ \theta]$, with a global xy -position, specified in meters, and a vehicle heading, θ , specified in radians. To compute the time derivative states for the model, use the `derivative` function with input commands and the current robot state.

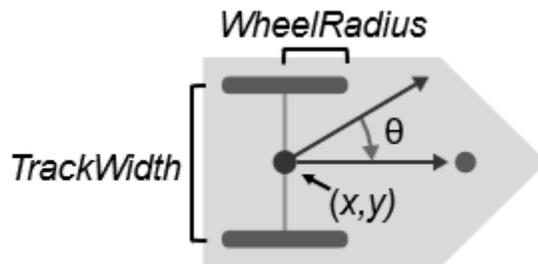

Creation

Syntax

```
kinematicModel = differentialDriveKinematics
```

```
kinematicModel = differentialDriveKinematics(Name, Value)
```

Description

`kinematicModel = differentialDriveKinematics` creates a differential drive kinematic model object with default property values.

`kinematicModel = differentialDriveKinematics(Name, Value)` sets properties on the object to the specified value. You can specify multiple properties in any order.

Properties

WheelRadius — Wheel radius of vehicle

0.05 (default) | positive numeric scalar

The wheel radius of the vehicle, specified in meters.

WheelSpeedRange — Range of vehicle wheel speeds

[-Inf Inf] (default) | two-element vector

The vehicle speed range is a two-element vector that provides the minimum and maximum vehicle speeds, [*MinSpeed MaxSpeed*], specified in meters per second.

TrackWidth — Distance between wheels on axle

0.2 (default) | positive numeric scalar

The vehicle track width refers to the distance between the wheels, or the axle length, specified in meters.

VehicleInputs — Type of motion inputs for vehicle

"WheelSpeeds" (default) | character vector | string scalar

The `VehicleInputs` property specifies the format of the model input commands when using the `derivative` function. Options are specified as one of the following strings:

- "WheelSpeeds" — Angular speeds for each of the wheels, specified in radians per second.
- "VehicleSpeedHeadingRate" — Vehicle speed and heading angular velocity, specified in meters per second and radians per second respectively.

Object Functions

derivative Time derivative of vehicle state

Examples

Plot Path of Differential-Drive Kinematic Robot

Create a Robot

Define a robot and set the initial starting position and orientation.

```
kinematicModel = differentialDriveKinematics;  
initialState = [0 0 0];
```


Simulate Robot Motion

Set the timespan of the simulation to 1 s with 0.05 s timesteps and the input commands to 2 m/s and left turn. Simulate the motion of the robot by using the `ode45` solver on the derivative function.

```
tspan = 0:0.05:1;  
inputs = [50 40]; %Left wheel is spinning faster  
[t,y] = ode45(@(t,y)derivative(kinematicModel,y,inputs),tspan,initialState);
```

Plot Path

```
figure  
plot(y(:,1),y(:,2))
```

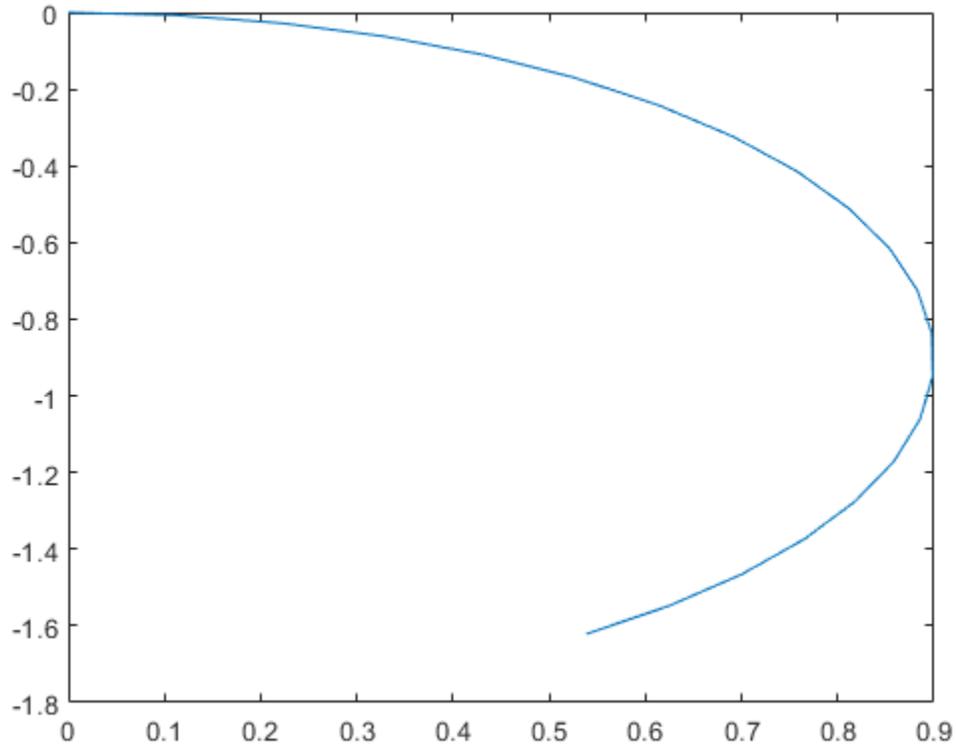

References

- [1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning, and Control* 1st ed. Cambridge, MA: Cambridge University Press, 2017.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

`ackermannKinematics` | `bicycleKinematics` | `unicycleKinematics`

Blocks

Differential Drive Kinematic Model

Functions

`derivative`

Topics

“Path Following for a Differential Drive Robot”

“Simulate Different Kinematic Models for Mobile Robots”

Introduced in R2019b

fixedwing

Guidance model for fixed-wing UAVs

Description

A `fixedwing` object represents a reduced-order guidance model for an unmanned aerial vehicle (UAV). The model approximates the behavior of a closed-loop system consisting of an autopilot controller and a fixed-wing kinematic model for 3-D motion.

Note This object requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

For multicopter UAVs, see `multicopter`.

Creation

`model = fixedwing` creates a fixed-wing motion model with `double` precision values for inputs, outputs, and configuration parameters of the guidance model.

`model = fixedwing(DataType)` specifies the data type precision (`DataType` property) for the inputs, outputs, and configurations parameters of the guidance model.

Properties

Name — Name of UAV

"Unnamed" (default) | string scalar

Name of the UAV, used to differentiate it from other models in the workspace, specified as a string scalar.

Example: "myUAV1"

Data Types: string

Configuration — UAV controller configuration

structure

UAV controller configuration, specified as a structure of parameters. Specify these parameters to tune the internal control behavior of the UAV. Specify the proportional (P) and derivative (D) gains for the dynamic model and other UAV parameters. The structure for fixed-wing UAVs contains these fields with defaults listed:

- 'PDRoll' - [3402.97 116.67]
- 'PHeight' - 3.9
- 'PFlightPathAngle' - 39
- 'PAirspeed' - 0.39
- 'FlightPathAngleLimits' - [-pi/2 pi/2] ([min max] angle in radians)

Example: `struct('PDRoll', [3402.97,116.67], 'PHeight',3.9, 'PFlightPathAngle',39, 'PAirSpeed',0.39, 'FlightPathAngleLimits',[-pi/2 pi/2])`

Data Types: struct

ModelType — UAV guidance model type

'FixedWingGuidance' (default)

This property is read-only.

UAV guidance model type, specified as 'FixedWingGuidance'.

Data Type — Input and output numeric data types

'double' (default) | 'single'

Input and output numeric data types, specified as either 'double' or 'single'. Choose the data type based on possible software or hardware limitations.

Object Functions

control	Control commands for UAV
derivative	Time derivative of UAV states
environment	Environmental inputs for UAV
state	UAV state vector

Examples

Simulate A Fixed-Wing Control Command

This example shows how to use the `fixedwing` guidance model to simulate the change in state of a UAV due to a command input.

Note: To use UAV algorithms, you must install the UAV Library for Robotics System Toolbox®. To install, use `roboticsAddons`.

Create the fixed-wing guidance model.

```
model = fixedwing;
```

Set the air speed of the vehicle by modifying the structure from the `state` function.

```
s = state(model);
s(4) = 5; % 10 m/s
```

Specify a control command, `u`, that maintains the air speed and gives a roll angle of $\pi/12$.

```
u = control(model);
u.RollAngle = pi/12;
u.AirSpeed = 5;
```

Create a default environment without wind.

```
e = environment(model);
```

Compute the time derivative of the state given the current state, control command, and environment.

```
sdot = derivative(model,s,u,e);
```

Simulate the UAV state using `ode45` integration. The `y` field outputs the fixed-wing UAV states based on this simulation.


```
simOut = ode45(@(~,x)derivative(model,x,u,e), [0 50], s);
size(simOut.y)
```

```
ans = 1x2
```

8 904


Plot the change in roll angle based on the simulation output. The roll angle is the 7th row of the `simOut.y` output.

```
plot(simOut.y(7,:))
```

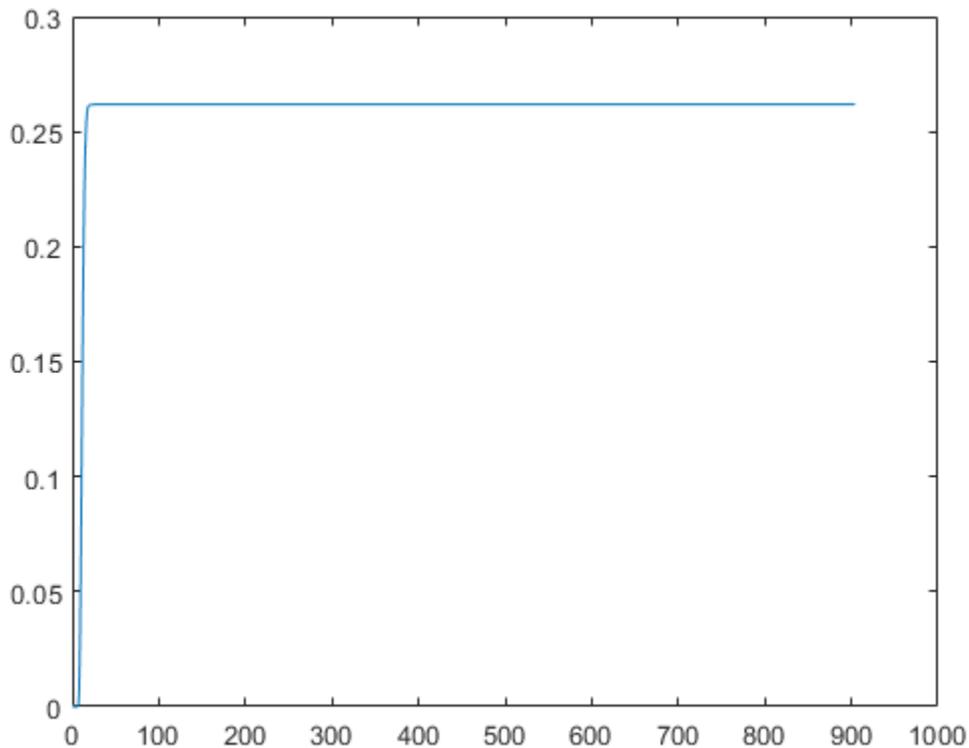

You can also plot the fixed-wing trajectory using `plotTransforms`. Create the translation and rotation vectors from the simulated state. Downsample (every 30th element) and transpose the `simOut` elements, and convert the Euler angles to quaternions. Specify the mesh as the `fixedwing.stl` file and the positive Z-direction as "down". The displayed view shows the UAV making a constant turn based on the constant roll angle.

```
downsample = 1:30:size(simOut.y,2);
translations = simOut.y(1:3,downsample)'; % xyz-position
rotations = eul2quat([simOut.y(5,downsample)',simOut.y(6,downsample)',simOut.y(7,downsample)']');
plotTransforms(translations,rotations,...
    'MeshFilePath','fixedwing.stl','InertialZDirection',"down")
hold on
plot3(simOut.y(1,:),-simOut.y(2,:),simOut.y(3,:),'--b') % full path
xlim([-10.0 10.0])
ylim([-20.0 5.0])
zlim([-0.5 4.00])
view([-45 90])
hold off
```

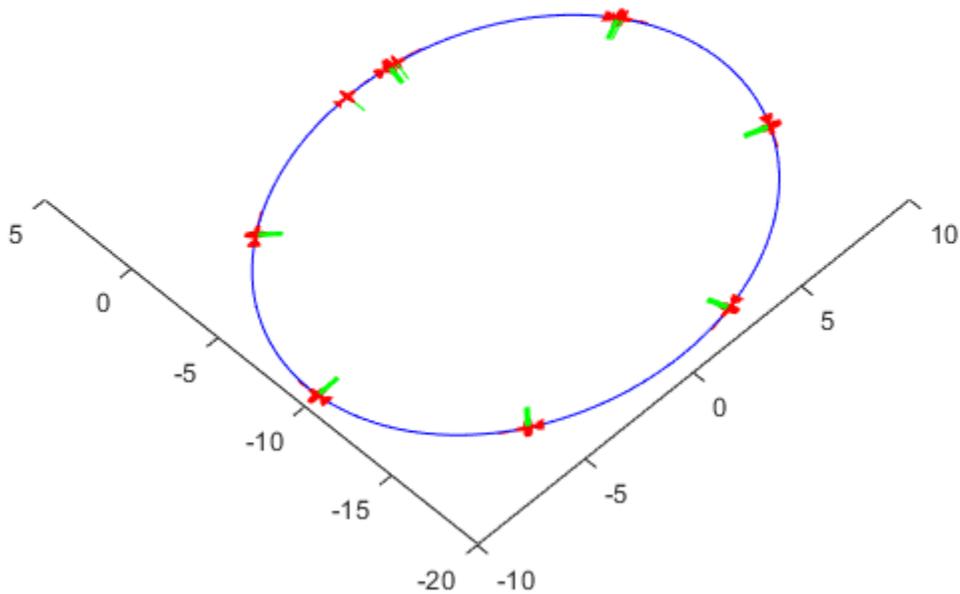

More About

UAV Coordinate Systems

The UAV Library for Robotics System Toolbox uses the North-East-Down (NED) coordinate system convention, which is also sometimes called the local tangent plane (LTP). The UAV position vector consists of three numbers for position along the northern-axis, eastern-axis, and vertical position. The down element complies with the right-hand rule and results in negative values for altitude gain.

The ground plane, or earth frame (NE plane, $D = 0$), is assumed to be an inertial plane that is flat based on the operation region for small UAV control. The earth frame coordinates are $[x_e, y_e, z_e]$. The body frame of the UAV is attached to the center of mass with coordinates $[x_b, y_b, z_b]$. x_b is the preferred forward direction of the UAV, and z_b is perpendicular to the plane that points downwards when the UAV travels during perfect horizontal flight.

The orientation of the UAV (body frame) is specified in ZYX Euler angles. To convert from the earth frame to the body frame, we first rotate about the z_e -axis by the yaw angle, ψ . Then, rotate about the intermediate y -axis by the pitch angle, ϕ . Then, rotate about the intermediate x -axis by the roll angle, θ .

The angular velocity of the UAV is represented by $[r, p, q]$ with respect to the body axes, $[x_b, y_b, z_b]$.

UAV Fixed-Wing Guidance Model Equations

For fixed-wing UAVs, the following equations are used to define the guidance model of the UAV. Use the `derivative` function to calculate the time-derivative of the UAV state using these governing equations. Specify the inputs using the `state`, `control`, and `environment` functions.

The UAV position in the earth frame is $[x_e, y_e, h]$ with orientation as heading angle, flight path angle, and roll angle, $[\chi, \gamma, \phi]$ in radians.

The model assumes that the UAV is flying under a coordinated-turn condition, with zero side-slip. The autopilot controls airspeed, altitude, and heading angle. The corresponding equations of motion are:

$$\begin{aligned}
\dot{x}_e &= V_g \cos \chi \cos \gamma \\
\dot{y}_e &= V_g \sin \chi \cos \gamma \\
\dot{h} &= V_g \sin \gamma \\
\dot{\chi} &= \frac{g \cos(\chi - \psi)}{V_g} \tan \phi \\
V_g \sin(\gamma^c) &= \min(\max(k_h(h^c - h), -V_g), V_g) \\
\dot{\gamma} &= k_\gamma(\gamma^c - \gamma) \\
\dot{V}_a &= k_{V_a}(V_a^c - V_a) \\
\frac{g \cos(\chi - \psi)}{V_g} \tan(\phi^c) &= k_\chi(\chi^c - \chi) \\
\ddot{\phi} &= k_{P\phi}(\phi^c - \phi) + k_{D\phi}(-\dot{\phi})
\end{aligned}$$

V_a and V_g denote the UAV air and ground speeds.

The wind speed is specified as $[V_{w_n}, V_{w_e}, V_{w_d}]$ for the north, east, and down directions. To generate the structure for these inputs, use the `environment` function.

k_* are controller gains. To specify these gains, use the `Configuration` property of the `fixedwing` object.

From these governing equations, the model gives the following variables:

$$[x_e \ y_e \ h \ V_a \ \chi \ \gamma \ \phi \ \dot{\phi}]$$

These variables match the output of the `state` function.

References

[1] Randal W. Beard and Timothy W. McLain. "Chapter 9." *Small Unmanned Aircraft Theory and Practice*, NJ: Princeton University Press, 2012.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`control` | `derivative` | `environment` | `ode45` | `plotTransforms` | `roboticsAddons` | `state`

Objects

`multirotor` | `uavWaypointFollower`

Blocks

UAV Guidance Model | Waypoint Follower

Topics

"Approximate High-Fidelity UAV model with UAV Guidance Model block"

"Tuning Waypoint Follower for Fixed-Wing UAV"

Introduced in R2018b

generalizedInverseKinematics

Create multiconstraint inverse kinematics solver

Description

The `generalizedInverseKinematics` System object uses a set of kinematic constraints to compute a joint configuration for the rigid body tree model specified by a `RigidBodyTree` object. The `GeneralizedInverseKinematics` object uses a nonlinear solver to satisfy the constraints or reach the best approximation.

Specify the constraint types, `ConstraintInputs`, before calling the object. To change constraint inputs after calling the object, call `release(gik)`.

Specify the constraint inputs as constraint objects and call `GeneralizedInverseKinematics` with these objects passed into it. To create constraint objects, use the following objects:

- `constraintCartesianBounds`
- `constraintJointBounds`
- `constraintOrientationTarget`
- `constraintPoseTarget`
- `constraintPositionTarget`

If your only constraint is the end-effector position and orientation, consider using `InverseKinematics` as your solver instead.

To solve the generalized inverse kinematics constraints:

- 1 Create the `generalizedInverseKinematics` object and set its properties.
- 2 Call the object with arguments, as if it were a function.

To learn more about how System objects work, see [What Are System Objects? \(MATLAB\)](#).

Creation

Syntax

```
gik = generalizedInverseKinematics
gik = generalizedInverseKinematics('RigidBodyTree',rigidbodytree,'
ConstraintInputs',inputTypes)
gik = generalizedInverseKinematics(Name,Value)
```

Description

`gik = generalizedInverseKinematics` returns a generalized inverse kinematics solver with no rigid body tree model specified. Specify a `RigidBodyTree` model and the `ConstraintInputs` property before using this solver.

`gik = generalizedInverseKinematics('RigidBodyTree',rigidbodytree,'ConstraintInputs',inputTypes)` returns a generalized inverse kinematics solver with the rigid body tree model and the expected constraint inputs specified.

`gik = generalizedInverseKinematics(Name,Value)` returns a generalized inverse kinematics solver with each specified property name set to the specified value by one or more `Name,Value` pair arguments. `Name` must appear inside single quotes (' '). You can specify several name-value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

Properties

Unless otherwise indicated, properties are *nontunable*, which means you cannot change their values after calling the object. Objects lock when you call them, and the `release` function unlocks them.

If a property is *tunable*, you can change its value at any time.

For more information on changing property values, see *System Design in MATLAB Using System Objects* (MATLAB).

NumConstraints — Number of constraint inputs

scalar

This property is read-only.

Number of constraint inputs, specified as a scalar. The value of this property is the number of constraint types specified in the `ConstraintInputs` property.

ConstraintInputs — Constraint input types

cell array of character vectors

Constraint input types, specified as a cell array of character vectors. The possible constraint input types with their associated constraint objects are:

- 'orientation' — `OrientationTarget`
- 'position' — `PositionTarget`
- 'pose' — `PoseTarget`
- 'aiming' — `AimingConstraint`
- 'cartesian' — `CartesianBounds`
- 'joint' — `JointPositionBounds`

Use the constraint objects to specify the required parameters and pass those object types into the object when you call it. For example:

Create the generalized inverse kinematics solver object. Specify the `RigidBodyTree` and `ConstraintInputs` properties.

```
gik = generalizedInverseKinematics(...
    'RigidBodyTree',rigidbodytree,
    'ConstraintInputs',{'position','aiming'});
```

Create the corresponding constraint objects.

```
positionTgt = constraintPositionTarget('left_palm');
aimConst = constraintAiming('right_palm');
```

Pass the constraint objects into the solver object with an initial guess.

```
configSol = gik(initialGuess,positionTgt,aimConst);
```

RigidBodyTree — Rigid body tree model

`RigidBodyTree` object

Rigid body tree model, specified as a `RigidBodyTree` object. Define this property before using the solver. If you modify your rigid body tree model, reassign the rigid body tree to this property. For example:

Create IK solver and specify the rigid body tree.

```
gik = generalizedInverseKinematics(...  
    'RigidBodyTree',rigidbodytree,  
    'ConstraintInputs',{ 'position', 'aiming' });
```

Modify the rigid body tree model.

```
addBody(rigidbodytree,rigidBody('body1'),'base')
```

Reassign the rigid body tree to the IK solver. If the solver or the `step` function is called before modifying the rigid body tree model, use `release` to allow the property to be changed.

```
gik.RigidBodyTree = rigidbodytree;
```

SolverAlgorithm — Algorithm for solving inverse kinematics

'BFGSGradientProjection' (default) | 'LevenbergMarquardt'

Algorithm for solving inverse kinematics, specified as either 'BFGSGradientProjection' or 'LevenbergMarquardt'. For details of each algorithm, see “Inverse Kinematics Algorithms”.

SolverParameters — Parameters associated with algorithm

structure

Parameters associated with the specified algorithm, specified as a structure. The fields in the structure are specific to the algorithm. See “Solver Parameters”.

Usage

Syntax

```
[configSol,solInfo] = gik(initialguess,  
constraintObj,...,constraintObjN)
```

Description

`[configSol,solInfo] = gik(initialguess, constraintObj,...,constraintObjN)` finds a joint configuration, `configSol`, based on the initial guess and a comma-separated list of constraint description objects. The number of constraint descriptions depends on the `ConstraintInputs` property.

Input Arguments

initialguess — Initial guess of robot configuration

structure array | vector

Initial guess of robot configuration, specified as a structure array or vector. The value of `initialguess` depends on the `DataFormat` property of the object specified in the `RigidBodyTree` property specified in `gik`.

Use this initial guess to guide the solver to the target robot configuration. However, the solution is not guaranteed to be close to this initial guess.

constraintObj,...,constraintObjN — Constraint descriptions

constraint objects

Constraint descriptions defined by the `ConstraintInputs` property of `gik`, specified as one or more of these constraint objects:

- `constraintAiming`
- `constraintCartesianBounds`
- `constraintJointBounds`
- `constraintOrientationTarget`
- `constraintPoseTarget`
- `constraintPositionTarget`

Output Arguments

configSol — Robot configuration solution

structure array | vector

Robot configuration solution, returned as a structure array or vector, depends on the `DataFormat` property of the object specified in the `RigidBodyTree` property specified in `gik`.

The structure array contains these fields:

- `JointName` — Character vector for the name of the joint specified in the `RigidBodyTree` robot model
- `JointPosition` — Position of the corresponding joint

The vector output is an array of the joint positions that would be given in `JointPosition` for a structure output.

This joint configuration is the computed solution that achieves the target end-effector pose within the solution tolerance.

solInfo — Solution information

structure

Solution information, returned as a structure containing these fields:

- `Iterations` — Number of iterations run by the solver.
- `NumRandomRestarts` — Number of random restarts because the solver got stuck in a local minimum.
- `ConstraintViolation` — Information about the constraint, returned as a structure array. Each structure in the array has these fields:
 - `Type`: Type of the corresponding constraint input, as specified in the `ConstraintInputs` property.
 - `Violation`: Vector of constraint violations for the corresponding constraint type. 0 indicates that the constraint is satisfied.
- `ExitFlag` — Code that gives more details on the solver execution and what caused it to return. For the exit flags of each solver type, see “Exit Flags”.
- `Status` — Character vector describing whether the solution is within the tolerances defined by each constraint ('success'). If the solution is outside the tolerance, the best possible solution that the solver could find is given ('best available').

Object Functions

To use an object function, specify the System object as the first input argument. For example, to release system resources of a System object named `obj`, use this syntax:

```
release(obj)
```

Common to All System Objects

<code>step</code>	Run System object algorithm
<code>release</code>	Release resources and allow changes to System object property values and input characteristics
<code>reset</code>	Reset internal states of System object

Examples

Solve Generalized Inverse Kinematics for a Set of Constraints

Create a generalized inverse kinematics solver that holds a robotic arm at a specific location and points toward the robot base. Create the constraint objects to pass the necessary constraint parameters into the solver.

Load predefined KUKA LBR robot model, which is specified as a `rigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Create the System object™ for solving generalized inverse kinematics.

```
gik = generalizedInverseKinematics;
```

Configure the System object to use the KUKA LBR robot.

```
gik.RigidBodyTree = lbr;
```

Tell the solver to expect a `PositionTarget` object and a `constraintAiming` and `constraintPositionTarget` object as the constraint inputs.

```
gik.ConstraintInputs = {'position', 'aiming'};
```

Create the two constraint objects.

- 1 The origin of the body named `tool0` is located at `[0.0 0.5 0.5]` relative to the robot's base frame.
- 2 The z -axis of the body named `tool0` points toward the origin of the robot's base frame.

```
posTgt = constraintPositionTarget('tool0');  
posTgt.TargetPosition = [0.0 0.5 0.5];
```



```
aimCon = constraintAiming('tool0');  
aimCon.TargetPoint = [0.0 0.0 0.0];
```

Find a configuration that satisfies the constraints. You must pass the constraint objects into the `System` object in the order in which they were specified in the `ConstraintInputs` property. Specify an initial guess at the robot configuration.

```
q0 = homeConfiguration(lbr); % Initial guess for solver  
[q,solutionInfo] = gik(q0,posTgt,aimCon);
```



Visualize the configuration returned by the solver.

```
show(lbr,q);  
title(['Solver status: ' solutionInfo.Status])  
axis([-0.75 0.75 -0.75 0.75 -0.5 1])
```

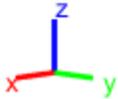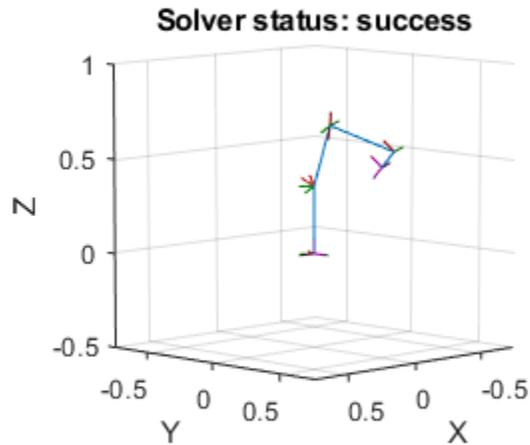

Plot a line segment from the target position to the origin of the base. The origin of the `tool0` frame coincides with one end of the segment, and its z-axis is aligned with the segment.

```
hold on
plot3([0.0 0.0],[0.5 0.0],[0.5 0.0], '--o')
hold off
```

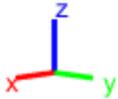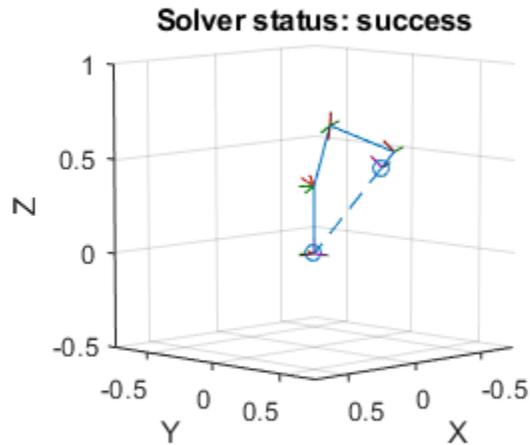

Compatibility Considerations

generalizedInverseKinematics was renamed

Behavior change in future release

The `generalizedInverseKinematics` object was renamed from `robotics.GeneralizedInverseKinematics`. Use `generalizedInverseKinematics` for all object creation.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

When using code generation, you must specify the `ConstraintInputs` and `RigidBodyTree` properties on construction of the object. For example:

```
gik = generalizedInverseKinematics(...  
    'ConstraintInputs',{ 'pose', 'position' },...  
    'RigidBodyTree', rigidbodytree);
```

You also cannot change the `SolverAlgorithm` property after creation. To specify the solver algorithm on creation, use:

```
gik = generalizedInverseKinematics(...  
    'ConstraintInputs',{ 'pose', 'position' },...  
    'RigidBodyTree', rigidbodytree,...  
    'SolverAlgorithm', 'LevenbergMarquardt');
```

See Also

Classes

`constraintAiming` | `constraintCartesianBounds` | `constraintJointBounds` |
`constraintOrientationTarget` | `constraintPoseTarget` |
`constraintPositionTarget` | `inverseKinematics`

Topics

“Control PR2 Arm Movements Using ROS Actions and Inverse Kinematics”
“Plan a Reaching Trajectory With Multiple Kinematic Constraints”

Introduced in R2017a

inverseKinematics

Create inverse kinematic solver

Description

The `inverseKinematics` System object creates an inverse kinematic (IK) solver to calculate joint configurations for a desired end-effector pose based on a specified rigid body tree model. Create a rigid body tree model for your robot using the `rigidBodyTree` class. This model defines all the joint constraints that the solver enforces. If a solution is possible, the joint limits specified in the robot model are obeyed.

To specify more constraints besides the end-effector pose, including aiming constraints, position bounds, or orientation targets, consider using `generalizedInverseKinematics`. This class allows you to compute multiconstraint IK solutions.

To compute joint configurations for a desired end-effector pose:

- 1 Create the `inverseKinematics` object and set its properties.
- 2 Call the object with arguments, as if it were a function.

To learn more about how System objects work, see [What Are System Objects? \(MATLAB\)](#).

Creation

Syntax

```
ik = inverseKinematics  
ik = inverseKinematics(Name,Value)
```

Description

`ik = inverseKinematics` creates an inverse kinematic solver. To use the solver, specify a rigid body tree model in the `RigidBodyTree` property.

`ik = inverseKinematics(Name,Value)` creates an inverse kinematic solver with additional options specified by one or more `Name,Value` pair arguments. `Name` is a property name and `Value` is the corresponding value. `Name` must appear inside single quotes (`' '`). You can specify several name-value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

Properties

Unless otherwise indicated, properties are *nontunable*, which means you cannot change their values after calling the object. Objects lock when you call them, and the `release` function unlocks them.

If a property is *tunable*, you can change its value at any time.

For more information on changing property values, see [System Design in MATLAB Using System Objects \(MATLAB\)](#).

RigidBodyTree — Rigid body tree model

`rigidBodyTree` object

Rigid body tree model, specified as a `rigidBodyTree` object. If you modify your rigid body tree model, reassign the rigid body tree to this property. For example:

Create IK solver and specify the rigid body tree.

```
ik = inverseKinematics('RigidBodyTree',rigidbodytree)
```

Modify the rigid body tree model.

```
addBody(rigidbodytree,rigidBody('body1'),'base')
```

Reassign the rigid body tree to the IK solver. If the solver or the `step` function is called before modifying the rigid body tree model, use `release` to allow the property to be changed.

```
ik.RigidBodyTree = rigidbodytree;
```

SolverAlgorithm — Algorithm for solving inverse kinematics

'BFGSGradientProjection' (default) | 'LevenbergMarquardt'

Algorithm for solving inverse kinematics, specified as either 'BFGSGradientProjection' or 'LevenbergMarquardt'. For details of each algorithm, see “Inverse Kinematics Algorithms”.

SolverParameters — Parameters associated with algorithm

structure

Parameters associated with the specified algorithm, specified as a structure. The fields in the structure are specific to the algorithm. See “Solver Parameters”.

Usage

Syntax

```
[configSol,solInfo] = ik(endeffector,pose,weights,initialguess)
```

Description

`[configSol,solInfo] = ik(endeffector,pose,weights,initialguess)` finds a joint configuration that achieves the specified end-effector pose. Specify an initial guess for the configuration and your desired weights on the tolerances for the six components of pose. Solution information related to execution of the algorithm, `solInfo`, is returned with the joint configuration solution, `configSol`.

Input Arguments

endeffector — End-effector name

character vector

End-effector name, specified as a character vector. The end effector must be a body on the `rigidBodyTree` object specified in the `inverseKinematics` System object.

pose — End-effector pose

4-by-4 homogeneous transform

End-effector pose, specified as a 4-by-4 homogeneous transform. This transform defines the desired position and orientation of the rigid body specified in the `endeffector` property.

weights — Weight for pose tolerances

six-element vector

Weight for pose tolerances, specified as a six-element vector. The first three elements correspond to the weights on the error in orientation for the desired pose. The last three elements correspond to the weights on the error in xyz position for the desired pose.

initialguess — Initial guess of robot configuration

structure array | vector

Initial guess of robot configuration, specified as a structure array or vector. Use this initial guess to help guide the solver to a desired robot configuration. The solution is not guaranteed to be close to this initial guess.

To use the vector form, set the `DataFormat` property of the object assigned in the `RigidBodyTree` property to either `'row'` or `'column'`.

Output Arguments

configSol — Robot configuration solution

structure array | vector

Robot configuration, returned as a structure array. The structure array contains these fields:

- `JointName` — Character vector for the name of the joint specified in the `RigidBodyTree` robot model
- `JointPosition` — Position of the corresponding joint

This joint configuration is the computed solution that achieves the desired end-effector pose within the solution tolerance.

To use the vector form, set the `DataFormat` property of the object assigned in the `RigidBodyTree` property to either `'row'` or `'column'`.

solInfo — Solution information

structure

Solution information, returned as a structure. The solution information structure contains these fields:

- **Iterations** — Number of iterations run by the algorithm.
- **NumRandomRestarts** — Number of random restarts because algorithm got stuck in a local minimum.
- **PoseErrorNorm** — The magnitude of the pose error for the solution compared to the desired end-effector pose.
- **ExitFlag** — Code that gives more details on the algorithm execution and what caused it to return. For the exit flags of each algorithm type, see “Exit Flags”.
- **Status** — Character vector describing whether the solution is within the tolerance ('success') or the best possible solution the algorithm could find ('best available').

Object Functions

To use an object function, specify the System object as the first input argument. For example, to release system resources of a System object named `obj`, use this syntax:

```
release(obj)
```

Common to All System Objects

<code>step</code>	Run System object algorithm
<code>release</code>	Release resources and allow changes to System object property values and input characteristics
<code>reset</code>	Reset internal states of System object

Examples

Generate Joint Positions to Achieve End-Effector Position

Generate joint positions for a robot model to achieve a desired end-effector position. The `inverseKinematics` system object uses inverse kinematic algorithms to solve for valid joint positions.

Load example robots. The puma1 robot is a rigidBodyTree model of a six-axis robot arm with six revolute joints.

```
load exampleRobots.mat
showdetails(puma1)
```


```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	jnt3	revolute	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

Generate a random configuration. Get the transformation from the end effector (L6) to the base for that random configuration. Use this transform as a goal pose of the end effector. Show this configuration.

```
randConfig = puma1.randomConfiguration;
tform = getTransform(puma1,randConfig,'L6','base');

show(puma1,randConfig);
```

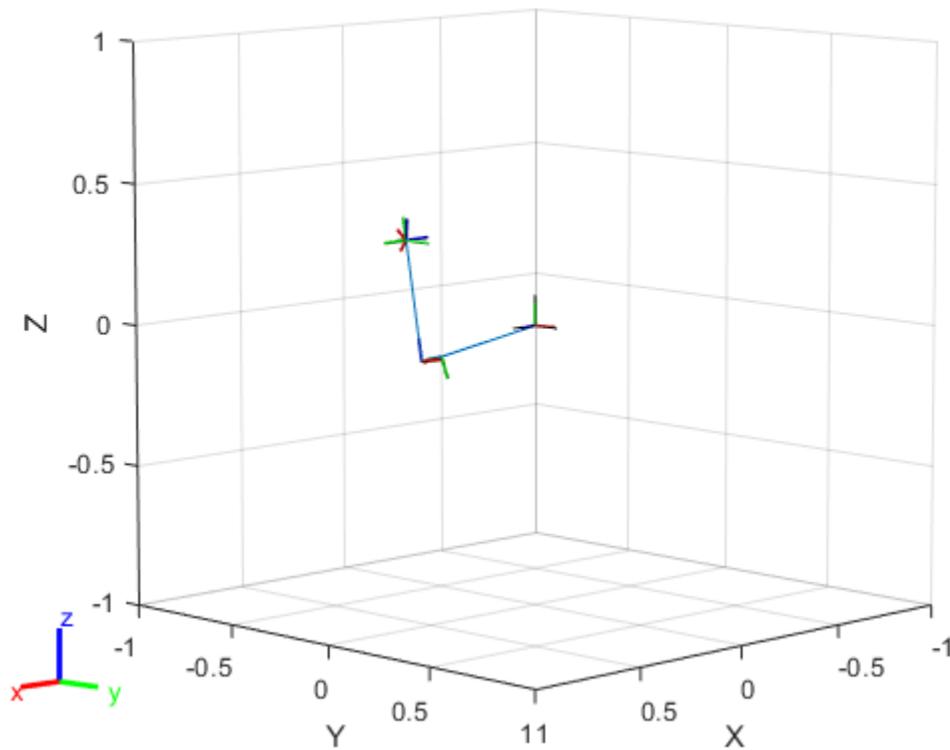

Create an `inverseKinematics` object for the `puma1` model. Specify weights for the different components of the pose. Use a lower magnitude weight for the orientation angles than the position components. Use the home configuration of the robot as an initial guess.


```
ik = inverseKinematics('RigidBodyTree',puma1);  
weights = [0.25 0.25 0.25 1 1 1];  
initialguess = puma1.homeConfiguration;
```

Calculate the joint positions using the `ik` object.

```
[configSoln,solnInfo] = ik('L6',tform,weights,initialguess);
```

Show the newly generated solution configuration. The solution is a slightly different joint configuration that achieves the same end-effector position. Multiple calls to the ik object can give similar or very different joint configurations.

```
show(puma1,configSoln);
```

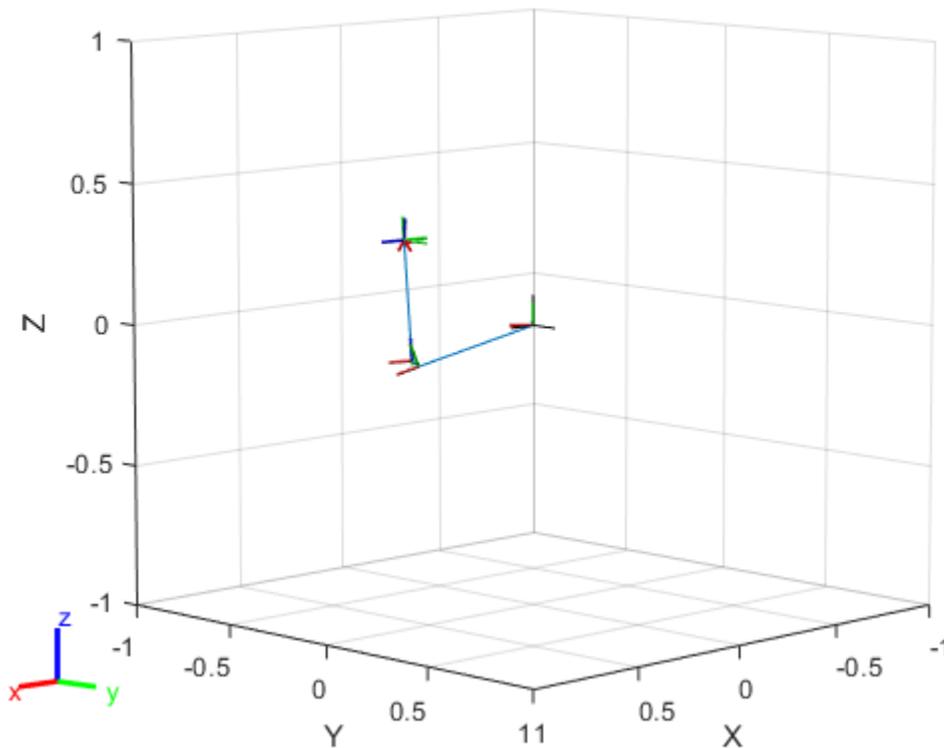

Compatibility Considerations

inverseKinematics was renamed

Behavior change in future release

The `inverseKinematics` object was renamed from `robotics.InverseKinematics`. Use `inverseKinematics` for all object creation.

References

- [1] Badreddine, Hassan, Stefan Vandewalle, and Johan Meyers. "Sequential Quadratic Programming (SQP) for Optimal Control in Direct Numerical Simulation of Turbulent Flow." *Journal of Computational Physics*. 256 (2014): 1-16. doi:10.1016/j.jcp.2013.08.044.
- [2] Bertsekas, Dimitri P. *Nonlinear Programming*. Belmont, MA: Athena Scientific, 1999.
- [3] Goldfarb, Donald. "Extension of Davidon's Variable Metric Method to Maximization Under Linear Inequality and Equality Constraints." *SIAM Journal on Applied Mathematics*. Vol. 17, No. 4 (1969): 739-64. doi:10.1137/0117067.
- [4] Nocedal, Jorge, and Stephen Wright. *Numerical Optimization*. New York, NY: Springer, 2006.
- [5] Sugihara, Tomomichi. "Solvability-Unconcerned Inverse Kinematics by the Levenberg-Marquardt Method." *IEEE Transactions on Robotics* Vol. 27, No. 5 (2011): 984-91. doi:10.1109/tro.2011.2148230.
- [6] Zhao, Jianmin, and Norman I. Badler. "Inverse Kinematics Positioning Using Nonlinear Programming for Highly Articulated Figures." *ACM Transactions on Graphics* Vol. 13, No. 4 (1994): 313-36. doi:10.1145/195826.195827.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

When using code generation, you must specify the `RigidBodyTree` property to define the robot on construction of the object. For example:

```
ik = inverseKinematics('RigidBodyTree',robotModel);
```

You also cannot change the SolverAlgorithm property after creation. To specify the solver algorithm on creation, use:

```
ik = inverseKinematics('RigidBodyTree',robotModel,...  
    'SolverAlgorithm','LevenbergMarquardt');
```

See Also

[generalizedInverseKinematics](#) | [rigidBody](#) | [rigidBodyJoint](#) | [rigidBodyTree](#)

Topics

[“Control PR2 Arm Movements Using ROS Actions and Inverse Kinematics”](#)

[“Inverse Kinematics Algorithms”](#)

[Class Attributes \(MATLAB\)](#)

[Property Attributes \(MATLAB\)](#)

Introduced in R2016b

jointSpaceMotionModel

Model rigid body tree motion given joint-space inputs

Description

The `jointSpaceMotionModel` object models the closed-loop joint-space motion of a manipulator robot, specified as a `rigidBodyTree` object. The motion model behavior is defined by the `MotionType` property.

Creation

Syntax

```
motionModel = jointSpaceMotionModel
motionModel = jointSpaceMotionModel("RigidBodyTree",tree)
motionModel = jointSpaceMotionControlModel(Name,Value)
```

Description

`motionModel = jointSpaceMotionModel` creates a motion model for a default two-joint manipulator.

`motionModel = jointSpaceMotionModel("RigidBodyTree",tree)` creates a motion model for the specified `rigidBodyTree` object.

`motionModel = jointSpaceMotionControlModel(Name,Value)` sets additional properties specified as name-value pairs. You can specify multiple properties in any order.

Properties

RigidBodyTree — Rigid body tree robot model

`rigidBodyTree` object

Rigid body tree robot model, specified as a `rigidBodyTree` object that defines the inertial and kinematic properties of the manipulator.

NaturalFrequency — Natural frequency of error dynamics

[10 10] (default) | n -element vector | scalar

Natural frequency of error dynamics, specified as a scalar or n -element vector in Hz, where n is the number of nonfixed joints in the associated `rigidBodyTree` object in the `RigidBodyTree` property.

Dependencies

To use this property, set the `MotionType` property to "ComputedTorqueControl" or "IndependentJointMotion".

DampingRatio — Damping ratio of error dynamics

[1 1] (default) | n -element vector | scalar

Damping ratio of the second-order error dynamics, specified as a scalar or n -element vector of real values, where n is the number of nonfixed joints in the associated `rigidBodyTree` object in the `RigidBodyTree` property. If a scalar is specified, then `DampingRatio` becomes an n -element vector of value s , where s is the specified scalar.

Dependencies

To use this property, set the `MotionType` property to "ComputedTorqueControl" or "IndependentJointMotion".

Kp — Proportional gain for PD control

100*eye(2) (default) | n -by- n | scalar

Proportional gain for proportional-derivative (PD) control, specified as a scalar or n -by- n matrix, where n is the number of nonfixed joints in the associated `rigidBodyTree` object in the `RigidBodyTree` property. You must set the `MotionType` property to "PDControl". If a scalar is specified, then `Kp` becomes $s \cdot \text{eye}(n)$, where s is the specified scalar.

Dependencies

To use this property, set the `MotionType` property to "PDControl".

Kd — Derivative gain for PD control

10*eye(2) (default) | n -by- n | scalar

Derivative gain for PD control, specified as a scalar or n -by- n matrix, where n is the number of nonfixed joints in the `rigidBodyTree` object in the `RigidBodyTree` property. If a scalar is specified, then K_p becomes $s \cdot \text{eye}(n)$, where s is the specified scalar.

Dependencies

To use this property, set the `MotionType` property to `"PDControl"`.

MotionType — Type of motion computed by the motion model

`"ComputedTorqueControl"` (default) | `"IndependentJointMotion"` | `"PDControl"`

Type of motion, specified as a string scalar or character vector that defines the closed-loop joint-space behavior that the object models. Options are:

- `"ComputedTorqueControl"` — Compensates for full-body dynamics and assigns the error dynamics specified in the `NaturalFrequency` and `DampingRatio` properties.
- `"IndependentJointMotion"` — Models each joint as an independent second-order system using the error dynamics specified by the `NaturalFrequency` and `DampingRatio` properties.
- `"PDControl"` — Uses proportional-derivative control on the joints based on the specified K_p and K_d properties.

Object Functions

`derivative`

Time derivative of manipulator model states

`updateErrorDynamicsFromStep`

Update values of `NaturalFrequency` and `DampingRatio` properties given desired step response

Examples

Create Joint-Space Motion Model

This example shows how to create and use a `jointSpaceMotionModel` object for a manipulator robot in joint-space.

Create the Robot

```
robot = loadrobot("kinovaGen3", "DataFormat", "column", "Gravity", [0 0 -9.81]);
```

Set Up the Simulation

Set the timespan to be 1 s with a timestep size of 0.01 s. Set the initial state to be the robots, home configuration with a velocity of zero.

```
tspan = 0:0.01:1;
initialState = [homeConfiguration(robot); zeros(7,1)];
```

Define the a reference state with a target position, zero velocity, and zero acceleration.

```
targetState = [pi/4; pi/3; pi/2; -pi/3; pi/4; -pi/4; 3*pi/4; zeros(7,1); zeros(7,1)];
```

Create the Motion Model

Model the system with computed torque control and error dynamics defined by a moderately fast step response with 5% overshoot.

```
motionModel = jointSpaceMotionModel("RigidBodyTree", robot);
updateErrorDynamicsFromStep(motionModel, .3, .05);
```

Simulate the Robot


Use the derivative function of the model as the input to the `ode45` solver to simulate the behavior over 1 second.

```
[t, robotState] = ode45(@(t, state) derivative(motionModel, state, targetState), tspan, initialState);
```

Plot the Response

Plot the positions of all the joints actuating to their target state. Joints with a higher displacement between the starting position and the target position actuate to the target at a faster rate than those with a lower displacement. This leads to an overshoot, but all of the joints have the same settling time.

```
figure
plot(t, robotState(:, 1:motionModel.NumJoints));
hold all;
plot(t, targetState(1:motionModel.NumJoints)*ones(1, length(t)), "--");
title("Joint Position (Solid) vs Reference (Dashed)");
xlabel("Time (s)");
ylabel("Position (rad)");
```

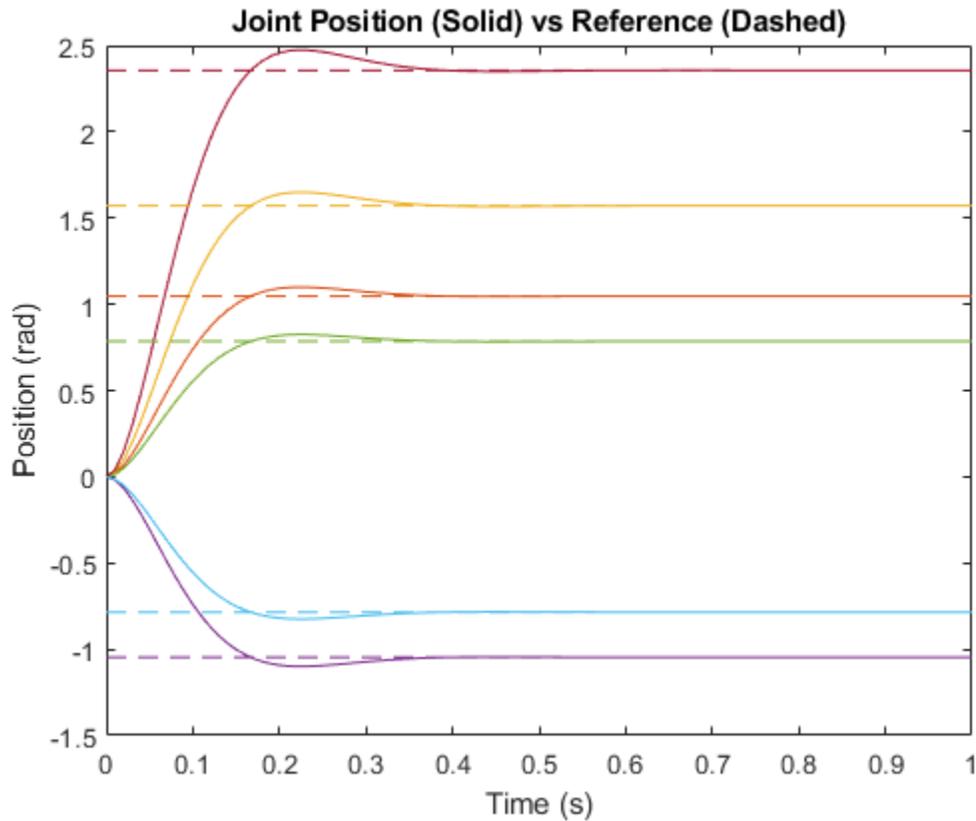

References

- [1] Craig, John J. *Introduction to Robotics: Mechanics and Control*. Upper Saddle River, NJ: Pearson Education, 2005.
- [2] Spong, Mark W., Seth Hutchinson, and Mathukumalli Vidyasagar. *Robot Modeling and Control*. Hoboken, NJ: Wiley, 2006.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

`taskSpaceMotionModel`

Blocks

Joint Space Motion Model

Functions

`derivative` | `updateErrorDynamicsFromStep`

Topics

“Simulate Joint-Space Trajectory Tracking in MATLAB”

“Plan and Execute Task- and Joint-space Trajectories using KINOVA Gen3 Manipulator”

Introduced in R2019b

lidarScan

Create object for storing 2-D lidar scan

Description

A `lidarScan` object contains data for a single 2-D lidar (light detection and ranging) scan. The lidar scan is a laser scan for a 2-D plane with distances (`Ranges`) measured from the sensor to obstacles in the environment at specific angles (`Angles`). Use this laser scan object as an input to other robotics algorithms such as `matchScans`, `controllerVFH`, or `monteCarloLocalization`.

Creation

Syntax

```
scan = lidarScan(ranges,angles)
scan = lidarScan(cart)
```

Description

`scan = lidarScan(ranges,angles)` creates a `lidarScan` object from the `ranges` and `angles`, that represent the data collected from a lidar sensor. The `ranges` and `angles` inputs are vectors of the same length and are set directly to the `Ranges` and `Angles` properties.

`scan = lidarScan(cart)` creates a `lidarScan` object using the input Cartesian coordinates as an n -by-2 matrix. The `Cartesian` property is set directly from this input.

`scan = lidarScan(scanMsg)` creates a `lidarScan` object from a `LaserScan` ROS message object.

Properties

Ranges — Range readings from lidar

vector

Range readings from lidar, specified as a vector. This vector is the same length as `Angles`, and the vector elements are measured in meters.

Data Types: `single` | `double`

Angles — Angle of readings from lidar

vector

Angle of range readings from lidar, specified as a vector. This vector is the same length as `Ranges`, and the vector elements are measured in radians. Angles are measured counter-clockwise around the positive z -axis.

Data Types: `single` | `double`

Cartesian — Cartesian coordinates of lidar readings

[x y] matrix

Cartesian coordinates of lidar readings, returned as an [x y] matrix. In the lidar coordinate frame, positive x is forward and positive y is to the left.

Data Types: `single` | `double`

Count — Number of lidar readings

scalar

Number of lidar readings, returned as a scalar. This scalar is also equal to the length of the `Ranges` and `Angles` vectors or the number of rows in `Cartesian`.

Data Types: `double`

Object Functions

<code>plot</code>	Display laser or lidar scan readings
<code>removeInvalidData</code>	Remove invalid range and angle data
<code>transformScan</code>	Transform laser scan based on relative pose
<code>plot</code>	Display laser or lidar scan readings

Examples


Plot Lidar Scan and Remove Invalid Points

Specify lidar data as vectors of ranges and angles. These values include readings outside of the sensors range.

```
x = linspace(-2,2);  
ranges = abs((1.5).*x.^2 + 5);  
ranges(45:55) = 3.5;  
angles = linspace(-pi/2,pi/2,numel(ranges));
```


Create a lidar scan by specifying the ranges and angles. Plot all points of the lidar scan.

```
scan = lidarScan(ranges,angles);  
plot(scan)
```

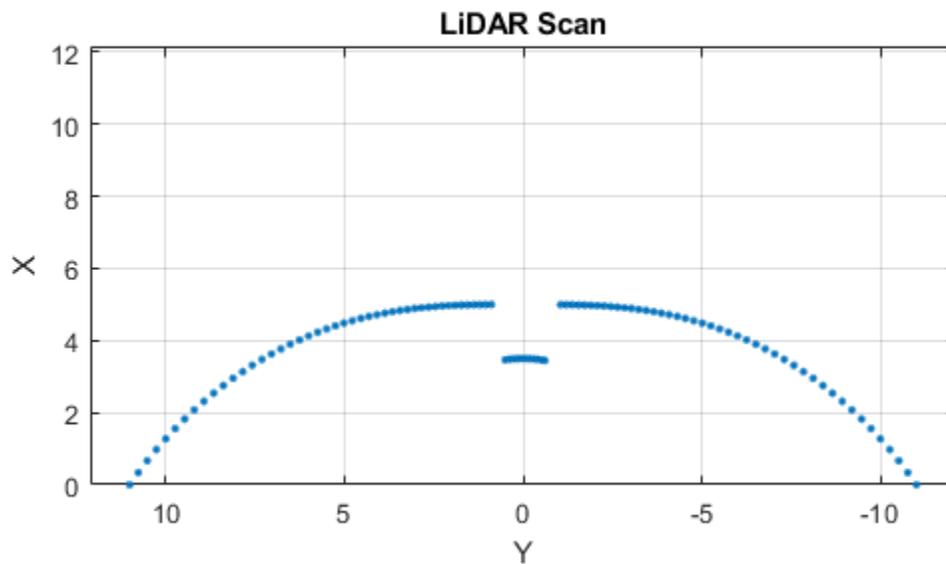

Remove invalid points based on a specified minimum and maximum range.

```
minRange = 0.1;  
maxRange = 7;  
scan2 = removeInvalidData(scan, 'RangeLimits', [minRange maxRange]);  
hold on  
plot(scan2)  
legend('All Points', 'Valid Points')
```

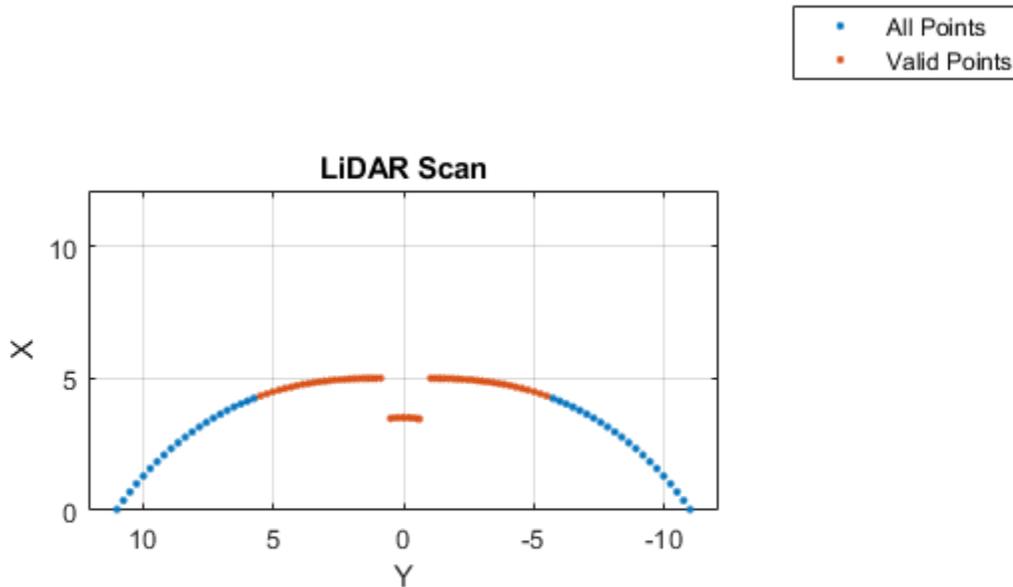

Transform Laser Scans

Create a `lidarScan` object. Specify the ranges and angles as vectors.

```
refRanges = 5*ones(1,300);  
refAngles = linspace(-pi/2,pi/2,300);  
refScan = lidarScan(refRanges,refAngles);
```

Translate the laser scan by an `[x y]` offset of `(0.5,0.2)`.

```
transformedScan = transformScan(refScan,[0.5 0.2 0]);
```

Rotate the laser scan by 20 degrees.

```
rotateScan = transformScan(refScan,[0,0,deg2rad(20)]);
```

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

Lidar scans require a limited size in code generation. The lidar scans are limited to 4000 points (range and angles) as a maximum.

See Also

`transformScan`

Introduced in R2019b

mavlinkdialect

Parse and store MAVLink dialect XML

Description

The `mavlinkdialect` object parses and stores message and enum definitions extracted from a MAVLink message definition file (`.xml`). The message definition files define the messages supported for this specific dialect. The structure of the message definitions is defined by the MAVLink message protocol.

Note This object requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Creation

Syntax

```
dialect = mavlinkdialect("common.xml")
dialect = mavlinkdialect(dialectXML)
dialect = mavlinkdialect(dialectXML,version)
```

Description

`dialect = mavlinkdialect("common.xml")` creates a MAVLink dialect using the `common.xml` file for standard MAVLink messages.

`dialect = mavlinkdialect(dialectXML)` specifies the XML file for parsing the message definitions. The input sets the `DialectXML` property.

`dialect = mavlinkdialect(dialectXML,version)` additionally specifies the MAVLink protocol version. The inputs set the `DialectXML` and `Version` properties, respectively.

Properties

DialectXML — MAVLink dialect name

string

MAVLink dialect name, specified as a string. This name is based on the XML file name.

Example: "ardupilotmega"

Data Types: char | string

Version — MAVLink protocol version

2 (default) | 1

MAVLink protocol version, specified as either 1 or 2.

Data Types: double

Object Functions

createcmd	Create MAVLink command message
createmsg	Create MAVLink message
deserializemsg	Deserialize MAVLink message from binary buffer
msginfo	Message definition for message ID
enuminfo	Enum definition for enum ID
enum2num	Enum value for given entry
num2enum	Enum entry for given value

Examples

Parse and Use MAVLink Dialect

This example shows how to parse a MAVLink XML file and create messages and commands from the definitions.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Parse and store the MAVLink dialect XML. Specify the XML path. The default "common.xml" dialect is provided. This XML file contains all the message and enum definitions.

```
dialect = mavlinkdialect("common.xml");
```

Create a MAVLink command from the MAV_CMD enum, which is an enum of MAVLink commands to send to the UAV. Specify the setting as "int" or "long", and the type as an integer or string.

```
cmdMsg = createcmd(dialect,"long",22)
```

```
cmdMsg = struct with fields:  
    MsgID: 76  
    Payload: [1x1 struct]
```

Verify the command name using num2enum. Command 22 is a take-off command for the UAV. You can convert back to an ID using enum2num. Your dialect can contain many different enums with different names and IDs.

```
cmdName = num2enum(dialect,"MAV_CMD",22)
```

```
cmdName =  
"MAV_CMD_NAV_TAKEOFF"
```

```
cmdID = enum2num(dialect,"MAV_CMD",cmdName)
```

```
cmdID = 22
```

Use enuminfo to view the table of the MAV_CMD enum entries.

```
info = enuminfo(dialect,"MAV_CMD");  
info.Entries{}
```

```
ans=133x3 table
```

Name	Value	
"MAV_CMD_NAV_WAYPOINT"	16	"Navigate to waypoint."
"MAV_CMD_NAV_LOITER_UNLIM"	17	"Loiter around this waypoint an u
"MAV_CMD_NAV_LOITER_TURNS"	18	"Loiter around this waypoint for
"MAV_CMD_NAV_LOITER_TIME"	19	"Loiter around this waypoint for
"MAV_CMD_NAV_RETURN_TO_LAUNCH"	20	"Return to launch location"
"MAV_CMD_NAV_LAND"	21	"Land at location"

"MAV_CMD_NAV_TAKEOFF"	22	"Takeoff from ground / hand"
"MAV_CMD_NAV_LAND_LOCAL"	23	"Land at local position (local fr
"MAV_CMD_NAV_TAKEOFF_LOCAL"	24	"Takeoff from local position (loc
"MAV_CMD_NAV_FOLLOW"	25	"Vehicle following, i.e. this way
"MAV_CMD_NAV_CONTINUE_AND_CHANGE_ALT"	30	"Continue on the current course a
"MAV_CMD_NAV_LOITER_TO_ALT"	31	"Begin loiter at the specified La
"MAV_CMD_DO_FOLLOW"	32	"Being following a target"
"MAV_CMD_DO_FOLLOW_REPOSITION"	33	"Reposition the MAV after a follo
"MAV_CMD_DO_ORBIT"	34	"Start orbiting on the circumfere
"MAV_CMD_NAV_ROI"	80	"Sets the region of interest (ROI
:		

Query the dialect for a specific message ID. Create a blank MAVLink message using the message ID.

```
info = msginfo(dialect, "HEARTBEAT")
```

```
info=1x4 table
```

MessageID	MessageName	
0	"HEARTBEAT"	"The heartbeat message shows that a system is present a

```
msg = createmsg(dialect, info.MessageID);
```

See Also

[mavlinkclient](#) | [mavlinkio](#) | [mavlinksub](#)

Topics

"Use a MAVLink Parameter Protocol for Tuning UAV Parameters in MATLAB"

External Websites

[MAVLink Developer Guide](#)

Introduced in R2019a

mavlinkclient

MAVLink client information

Description

The `mavlinkclient` object stores MAVLink client information for connecting to UAVs (unmanned aerial vehicles) that utilize the MAVLink communication protocol. Connect with a MAVLink client using `mavlinkio` and use this object for saving the component and system information.

Note This object requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Creation

Syntax

```
client = mavlinkclient(mavlink,sysID,compID)
```

Description

`client = mavlinkclient(mavlink,sysID,compID)` creates a MAVLink client interface for a MAVLink component. Connect to a MAVLink client using `mavlinkio` and specify the object in `mavlink`. When a heartbeat is received by the client, the `ComponentType` and `AutoPilotType` properties are updated automatically. Specify the `SystemID` and `ComponentID` as integers.

Properties

SystemID — MAVLink system ID

positive integer between 1 and 255

MAVLink system ID, specified as a positive integer between 1 and 255. MAVLink protocol only supports up to 255 systems. Usually, each UAV has its own system ID, but multiple UAVs could be considered one system.

Example: 1

Data Types: uint8

ComponentID — MAVLink component ID

positive integer between 1 and 255

MAVLink component ID, specified as a positive integer between 1 and 255.

Example: 2

Data Types: uint8

ComponentType — MAVLink component type

"Unknown" (default) | string

MAVLink component type, specified as a string. This value is automatically updated to the correct type if a heartbeat message is received by the client with the matching system ID and component ID. You must be connected to a client using `mavlinkio`.

Example: "MAV_TYPE_GCS"

Data Types: string

AutoPilot — Autopilot type for UAV

"Unknown" (default) | string

Autopilot type for UAV, specified as a string. This value is automatically updated to the correct type if a heartbeat message is received by the client with the matching system ID and component ID. You must be connected to a client using `mavlinkio`.

Example: "MAV_AUTOPILOT_INVALID"

Data Types: string

Examples

Store MAVLink Client Information

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client.

```
mavlink = mavlinkio("common.xml");  
connect(mavlink, "UDP");
```

Create the object for storing the client information. Specify the system and component ID.

```
client = mavlinkclient(mavlink,1,1)
```

```
client =  
    mavlinkclient with properties:
```

```
        SystemID: 1  
        ComponentID: 1  
        ComponentType: "Unknown"  
        AutopilotType: "Unknown"
```

Disconnect from client.

```
disconnect(mavlink)
```

See Also

`mavlinkdialect` | `mavlinkio` | `mavlinksub`

Topics

“Use a MAVLink Parameter Protocol for Tuning UAV Parameters in MATLAB”

External Websites

MAVLink Developer Guide

Introduced in R2019a

mavlinkio

Connect with MAVLink clients to exchange messages

Description

The `mavlinkio` object connects with MAVLink clients through UDP ports to exchange messages with UAVs (unmanned aerial vehicles) using the MAVLink communication protocols.

Note This object requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Creation

Syntax

```
mavlink = mavlinkio(msgDefinitions)
mavlink = mavlinkio(dialectXML)
mavlink = mavlinkio(dialectXML,version)
mavlink = mavlinkio( ____,Name,Value)
```

Description

`mavlink = mavlinkio(msgDefinitions)` creates an interface to connect with MAVLink clients using the input `mavlinkdialect` object, which defines the message definitions. This dialect object is set directly to the `Dialect` property.

`mavlink = mavlinkio(dialectXML)` directly specifies the XML file for the message definitions as a file name. A `mavlinkdialect` is created using this XML file and set to the `Dialect` property

`mavlink = mavlinkio(dialectXML,version)` additionally specifies the MAVLink protocol version as either 1 or 2.

`mavlink = mavlinkio(____, Name, Value)` additionally specifies arguments using the following name-value pairs.

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

The name-value pairs directly set the MAVLink client information in the `LocalClient` property. See `LocalClient` for more info on what values can be set.

Properties

Dialect — MAVLink dialect

`mavlinkdialect` object

MAVLink dialect, specified as a `mavlinkdialect` object. The dialect specifies the message structure for the MAVLink protocol.

LocalClient — Local client information

structure

This property is read-only.

Local client information, specified as a structure. The local client is setup in MATLAB® to communicate with other MAVLink clients. The structure contains the following fields:

- `SystemID`
- `ComponentID`
- `ComponentType`
- `AutopilotType`

To set these values when creating the `mavlinkio` object, use name-value pairs. For example:

```
mavlink = mavlinkio("common.xml", "SystemID", 1, "ComponentID", 1)
```

This property is nontunable when you are connected to a MAVLink client. For more information, see `mavlinkclient`.

Data Types: `struct`

Object Functions

connect	Connect to MAVLink clients through UDP port
disconnect	Disconnect from MAVLink clients
sendmsg	Send MAVLink message
sendudpmsg	Send MAVLink message to UDP port
serializemsg	Serialize MAVLink message to binary buffer
listConnections	List all active MAVLink connections
listClients	List all connected MAVLink clients
listTopics	List all topics received by MAVLink client

Examples

Store MAVLink Client Information

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client.

```
mavlink = mavlinkio("common.xml");  
connect(mavlink, "UDP");
```

Create the object for storing the client information. Specify the system and component ID.

```
client = mavlinkclient(mavlink, 1, 1)
```

```
client =  
    mavlinkclient with properties:
```

```
        SystemID: 1  
        ComponentID: 1  
        ComponentType: "Unknown"  
        AutopilotType: "Unknown"
```

Disconnect from client.

```
disconnect(mavlink)
```

Work with MAVLink Connection

This example shows how to connect to MAVLink clients, inspect the list of topics, connections, and clients, and send messages through UDP ports using the MAVLink communication protocol.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client using the "common.xml" dialect. This local client communicates with any other clients through a UDP port.

```
dialect = mavlinkdialect("common.xml");  
mavlink = mavlinkio(dialect);  
connect(mavlink, "UDP")
```

```
ans =  
"Connection1"
```

You can list all the active clients, connections, and topics for the MAVLink connection. Currently, there is only one client connection and no topics have received messages.

```
listClients(mavlink)
```

```
ans=1x4 table  
  SystemID  ComponentID  ComponentType  AutopilotType  
-----  
      255         1  "MAV_TYPE_GCS"  "MAV_AUTOPILOT_INVALID"
```

```
listConnections(mavlink)
```

```
ans=1x2 table  
  ConnectionName  ConnectionInfo  
-----  
  "Connection1"  "UDP@0.0.0.0:58715"
```

```
listTopics(mavlink)
```

```
ans =  
0x5 empty table
```

Create a subscriber for receiving messages on the client. This subscriber listens for the "HEARTBEAT" message topic with ID equal to 0.

```
sub = mavlinksub(mavlink,0);
```

Create a "HEARTBEAT" message using the `mavlinkdialect` object. Specify payload information and send the message over the MAVLink client.

```
msg = createmsg(dialect,"HEARTBEAT");  
msg.Payload.type(:) = enum2num(dialect,'MAV_TYPE','MAV_TYPE_QUADROTOR');  
sendmsg(mavlink,msg)
```

Disconnect from the client.

```
disconnect(mavlink)
```

See Also

`connect` | `mavlinkclient` | `mavlinkdialect` | `mavlinksub`

Topics

"Use a MAVLink Parameter Protocol for Tuning UAV Parameters in MATLAB"

External Websites

MAVLink Developer Guide

Introduced in R2019a

mavlinksub

Receive MAVLink messages

Description

The `mavlinksub` object subscribes to topics from the connected MAVLink clients using a `mavlinkio` object. Use the `mavlinksub` object to obtain the most recently received messages and call functions to process newly received messages.

Note This object requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Creation

Syntax

```
sub = mavlinksub(mavlink)
sub = mavlinksub(mavlink,topic)
sub = mavlinksub(mavlink,client)
sub = mavlinksub(mavlink,client,topic)
sub = mavlinksub( ___,Name,Value)
```

Description

`sub = mavlinksub(mavlink)` subscribes to all topics from all clients connected via the `mavlinkio` object. This syntax sets the `Client` property to "Any".

`sub = mavlinksub(mavlink,topic)` subscribes to a specific topic, specified as a string or integer, from all clients connected via the `mavlinkio` object. The function sets the `topic` input to the `Topic` property.

`sub = mavlinksub(mavlink, client)` subscribes to all topics from the client specified as a `mavlinkclient` object. The function sets the `Client` property to this input client.

`sub = mavlinksub(mavlink, client, topic)` subscribes to a specific topic on a specific client. The function sets the `Client` and `Topic` properties.

`sub = mavlinksub(____, Name, Value)` additionally specifies the `BufferSize` or `NewMessageFcn` properties using name-value pairs and the previous syntaxes. The `Name` input is one of the property names.

Specify optional comma-separated pairs of `Name, Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Properties

Client — Client information of received message

"Any" (default) | `mavlinkclient` object

Client information of the received message, specified as a `mavlinkclient` object. The default value of "Any" means the subscriber is listening to all clients connected via the `mavlinkio` object.

Topic — Topic name

"Any" (default) | string

Topic name the subscriber listens to, specified as a string. The default value of "Any" means the subscriber is listening to all topics on the client.

Example: "HEARTBEAT"

Data Types: `char` | `string`

BufferSize — Length of message buffer

1 (default) | positive integer

Length of message buffer, specified as a positive integer. This value is the maximum number of messages that can be stored in this subscriber.

Data Types: `double`

NewMessageFcn — Callback function for new messages

[] (default) | function handle

Callback function for new messages, specified as a function handle. This function is called when a new message is received by the client. The function handle has the following syntax:

```
callback(sub,msg)
```

`sub` is a structure with fields for the `Client`, `Topic`, and `BufferSize` properties of the `mavlinksub` object. `msg` is the message received as a structure with the fields:

- `MsgID` -- Positive integer for message ID.
- `SystemID` -- System ID of MAVLink client that sent message.
- `ComponentID`-- Component ID of MAVLink client that sent message.
- `Payload` -- Structure containing fields based on the message definition.
- `Seq` -- Positive integer for sequence of message.

The `Payload` is a structure defined by the message definition for the MAVLink dialect.

Data Types: `function_handle`

Object Functions

`latestmsgs` Received messages from MAVLink subscriber

Examples

Subscribe to MAVLink Topic

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client.

```
mavlink = mavlinkio("common.xml")
```

```
mavlink =  
    mavlinkio with properties:
```

```
Dialect: [1x1 mavlinkdialect]
LocalClient: [1x1 struct]
```

```
connect(mavlink, "UDP")
```

```
ans =
"Connection1"
```

Get the client information.

```
client = mavlinkclient(mavlink,1,1);
```

Subscribe to the "HEARTBEAT" topic.

```
heartbeat = mavlinksub(mavlink,client, 'HEARTBEAT');
```

Get the latest message. You must wait for a message to be received. Currently, no heartbeat message has been received on the mavlink object.

```
latestmsgs(heartbeat,1)
```

```
ans =
```

```
1x0 empty struct array with fields:
```

```
MsgID
SystemID
ComponentID
Payload
Seq
```

Disconnect from client.

```
disconnect(mavlink)
```

See Also

[latestmsgs](#) | [mavlinkclient](#) | [mavlinkdialect](#) | [mavlinkio](#)

Topics

“Use a MAVLink Parameter Protocol for Tuning UAV Parameters in MATLAB”

External Websites

MAVLink Developer Guide

Introduced in R2019a

mavlinktlog

Read MAVLink message from TLOG file

Description

The `mavlinktlog` object reads all messages from a telemetry log or TLOG file (`.tlog`). The object gives you information about the file, including the start and end time, number of messages, available topics, and packet loss percentage. You can specify a MAVLink dialect for parsing the messages or use the `common.xml` dialect.

Creation

`tlogReader = mavlinktlog(filePath)` reads all messages from the `tlog` file at the given file path and returns an object summarizing the file. This syntax uses the `common.xml` dialect for the MAVLink protocol (Version 2.0) for parsing the messages. The information in `filePath` is used to set the `FileName` property.

`tlogReader = mavlinktlog(filePath, dialect)` reads the MAVLink messages based on the dialect specified as a `mavlinkdialect` object or string scalar specifying the XML file path. `dialect` sets the `Dialect` property.

Properties

FileName — Name of TLOG file

string scalar | character vector

This property is read-only.

Name of the TLOG file, specified as a string scalar or character vector. The name is the last part of the path given in the `filePath` input.

Example: `'flightlog.tlog'`

Data Types: string | char

Dialect — MAVLink dialect

'common.xml' (default) | mavlinkdialect object

This property is read-only.

MAVLink dialect used for parsing the message data, specified as a `mavlinkdialect` object.

StartTime — Time of first message recorded

`datetime` object

This property is read-only.

Time of the first message recorded in the TLOG file, specified as a `datetime` object.

Data Types: `datetime`

EndTime — Time of last message recorded

`datetime` object

This property is read-only.

Time of the last message recorded in the TLOG file, specified as a `datetime` object.

Data Types: `datetime`

NumMessages — Number of MAVLink messages in TLOG file

numeric scalar

This property is read-only.

Number of MAVLink messages in the TLOG file, specified as a numeric scalar.

Data Types: `double`

AvailableTopics — List of different message types

table

This property is read-only.

List of different messages, specified as a table that contains:

- MessageID

- MessageName
- SystemID
- ComponentID
- NumMessages

Data Types: table

NumPacketsLost — Percentage of packets lost

numeric scalar from 0 through 100

This property is read-only.

Percentage of packets lost, specified as a numeric scalar from 0 through 100.

Data Types: double

Object Functions

`readmsg` Read specific messages from TLOG file

Examples

Read Messages from MAVLink TLOG File

This example shows how to load a MAVLink TLOG file and select a specific message type.

Load the TLOG file. Specify the relative path of the file name.

```
tlogReader = mavlinktlog('flight.tlog');
```

Read the 'REQUEST_DATA_STREAM' messages from the file.

```
msgData = readmsg(result, 'MessageName', 'REQUEST_DATA_STREAM');
```

See Also

`mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `readmsg`

Topics

“Load and Playback MAVLink TLOG”

Introduced in R2019a

mobileRobotPRM

Create probabilistic roadmap path planner

Description

The `mobileRobotPRM` object is a roadmap path planner object for the environment map specified in the `Map` property. The object uses the map to generate a roadmap, which is a network graph of possible paths in the map based on free and occupied spaces. You can customize the number of nodes, `NumNodes`, and the connection distance, `ConnectionDistance`, to fit the complexity of the map and find an obstacle-free path from a start to an end location.

After the map is defined, the `mobileRobotPRM` path planner generates the specified number of nodes throughout the free spaces in the map. A connection between nodes is made when a line between two nodes contains no obstacles and is within the specified connection distance.

After defining a start and end location, to find an obstacle-free path using this network of connections, use the `findpath` method. If `findpath` does not find a connected path, it returns an empty array. By increasing the number of nodes or the connection distance, you can improve the likelihood of finding a connected path, but tuning these properties is necessary. To see the roadmap and the generated path, use the visualization options in `show`. If you change any of the `mobileRobotPRM` properties, call `update`, `show`, or `findpath` to recreate the roadmap.

Creation

Syntax

```
planner = mobileRobotPRM
```

```
planner = mobileRobotPRM(map)
```

```
planner = mobileRobotPRM(map,numnodes)
```

Description

`planner = mobileRobotPRM` creates an empty roadmap with default properties. Before you can use the roadmap, you must specify a `binaryOccupancyMap` object in the `Map` property.

`planner = mobileRobotPRM(map)` creates a roadmap with `map` set as the `Map` property, where `map` is a `binaryOccupancyMap` object.

`planner = mobileRobotPRM(map, numnodes)` sets the maximum number of nodes, `numnodes`, to the `NumNodes` property.

Input Arguments

map — Map representation

`binaryOccupancyMap` object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the robot. The object is a matrix grid with binary values indicating obstacles as `true` (1) and free locations as `false` (0).

numnodes — Maximum number of nodes in roadmap

50 (default) | scalar

Maximum number of nodes in roadmap, specified as a scalar. By increasing this value, the complexity and computation time for the path planner increases.

Properties

ConnectionDistance — Maximum distance between two connected nodes

`inf` (default) | scalar in meters

Maximum distance between two connected nodes, specified as the comma-separated pair consisting of "ConnectionDistance" and a scalar in meters. This property controls whether nodes are connected based on their distance apart. Nodes are connected only if no obstacles are directly in the path. By decreasing this value, the number of connections is lowered, but the complexity and computation time decreases as well.

Map — Map representation

`binaryOccupancyMap` object | `occupancyMap` object

Map representation, specified as the comma-separated pair consisting of "Map" and a `binaryOccupancyMap` or `occupancyMap` object. This object represents the environment of the robot. The object is a matrix grid with values indicating the occupancy of locations in the map.

NumNodes — Number of nodes in the map

50 (default) | scalar

Number of nodes in the map, specified as the comma-separated pair consisting of "NumNodes" and a scalar. By increasing this value, the complexity and computation time for the path planner increases.

Object Functions

<code>findpath</code>	Find path between start and goal points on roadmap
<code>show</code>	Show map, roadmap, and path
<code>update</code>	Create or update roadmap

Compatibility Considerations

mobileRobotPRM was renamed

Behavior change in future release

The `mobileRobotPRM` object was renamed from `robotics.PRM`. Use `mobileRobotPRM` for all object creation.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

The map input must be specified on creation of the `mobileRobotPRM` object.

See Also

`binaryOccupancyMap` | `controllerPurePursuit` | `occupancyMap`

Topics

“Path Planning in Environments of Different Complexity”

“Probabilistic Roadmaps (PRM)”

Introduced in R2019b

multirotor

Guidance model for multirotor UAVs

Description

A `multirotor` object represents a reduced-order guidance model for an unmanned aerial vehicle (UAV). The model approximates the behavior of a closed-loop system consisting of an autopilot controller and a multirotor kinematic model for 3-D motion.

Note This object requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

For fixed-wing UAVs, see `fixedwing`.

Creation

`model = multirotor` creates a multirotor motion model with `double` precision values for inputs, outputs, and configuration parameters of the guidance model.

`model = multirotor(DataType)` specifies the data type precision (`DataType` property) for the inputs, outputs, and configurations parameters of the guidance model.

Properties

Name — Name of UAV

"Unnamed" (default) | string scalar

Name of the UAV, used to differentiate it from other models in the workspace, specified as a string scalar.

Example: "myUAV1"

Data Types: string

Configuration — UAV controller configuration

structure

UAV controller configuration, specified as a structure of parameters. Specify these parameters to tune the internal control behaviour of the UAV. Specify the proportional (P) and derivative (D) gains for the dynamic model and other UAV parameters. For multirotor UAVs, the structure contains these fields with defaults listed:

- 'PDRoll' - [3402.97 116.67]
- 'PDPitch' - [3402.97 116.67]
- 'PYawRate' - 1950
- 'PThrust' - 3900
- 'Mass' - 0.1 (measured in kg)

Example: `struct('PDRoll',[3402.97,116.67],'PDPitch',[3402.97,116.67],'PYawRate',1950,'PThrust',3900,'Mass',0.1)`

Data Types: `struct`

ModelType — UAV guidance model type

'MultirotorGuidance' (default)

This property is read-only.

UAV guidance model type, specified as 'MultirotorGuidance'.

DataType — Input and output numeric data types

'double' (default) | 'single'

Input and output numeric data types, specified as either 'double' or 'single'. Choose the data type based on possible software or hardware limitations. Specify `DataType` when first creating the object.

Object Functions

<code>control</code>	Control commands for UAV
<code>derivative</code>	Time derivative of UAV states
<code>environment</code>	Environmental inputs for UAV
<code>state</code>	UAV state vector

Examples

Simulate A Multirotor Control Command

This example shows how to use the `multirotor` guidance model to simulate the change in state of a UAV due to a command input.

Note: To use UAV algorithms, you must install the UAV Library for Robotics System Toolbox®. To install, use `roboticsAddons`.

Create the multirotor guidance model.

```
model = multirotor;
```

Create a state structure. Specify the location in world coordinates.

```
s = state(model);
s(1:3) = [3;2;1];
```

Specify a control command, `u`, that specified the roll and thrust of the multirotor.

```
u = control(model);
u.Roll = pi/12;
u.Thrust = 1;
```

Create a default environment without wind.

```
e = environment(model);
```

Compute the time derivative of the state given the current state, control command, and environment.

```
sdot = derivative(model,s,u,e);
```

Simulate the UAV state using `ode45` integration. The `y` field outputs the fixed-wing UAV states as a 13-by- n matrix.

```
simOut = ode45(@(~,x)derivative(model,x,u,e), [0 3], s);
size(simOut.y)
```


```
ans = 1×2
```

13

3536

Plot the change in roll angle based on the simulation output. The roll angle (the X Euler angle) is the 9th row of the `simOut.y` output.


```
plot(simOut.y(9,:))
```

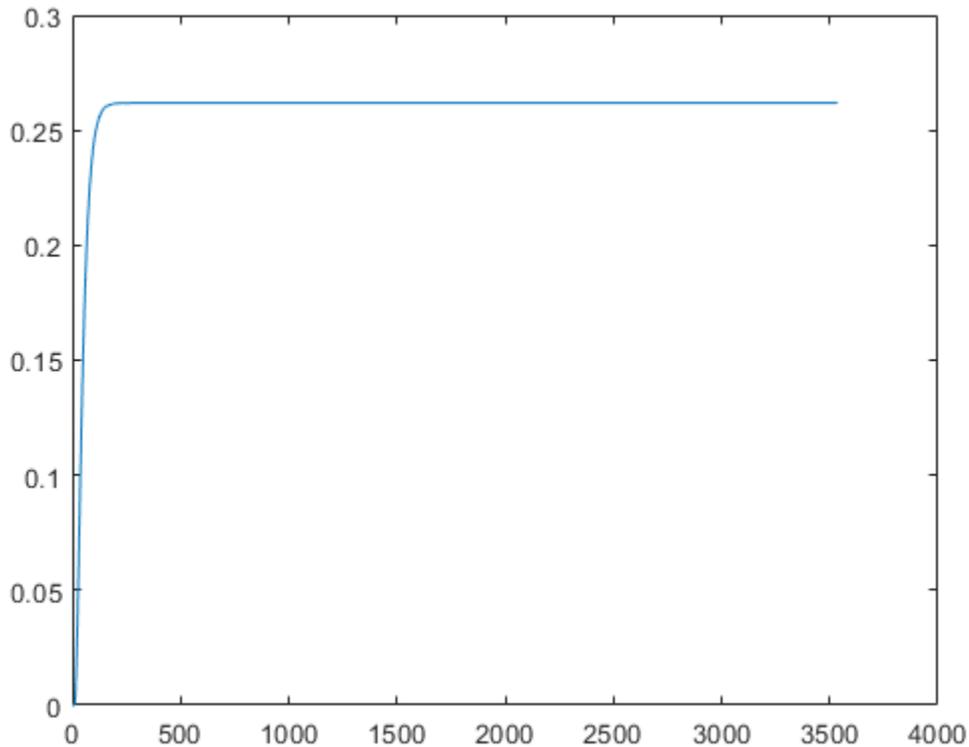

Plot the change in the Y and Z positions. With the specified thrust and roll angle, the multirotor should fly over and lose some altitude. A positive value for Z is expected as positive Z is down.


```
figure  
plot(simOut.y(2,:));  
hold on  
plot(simOut.y(3,:));
```

```
legend('Y-position','Z-position')
hold off
```

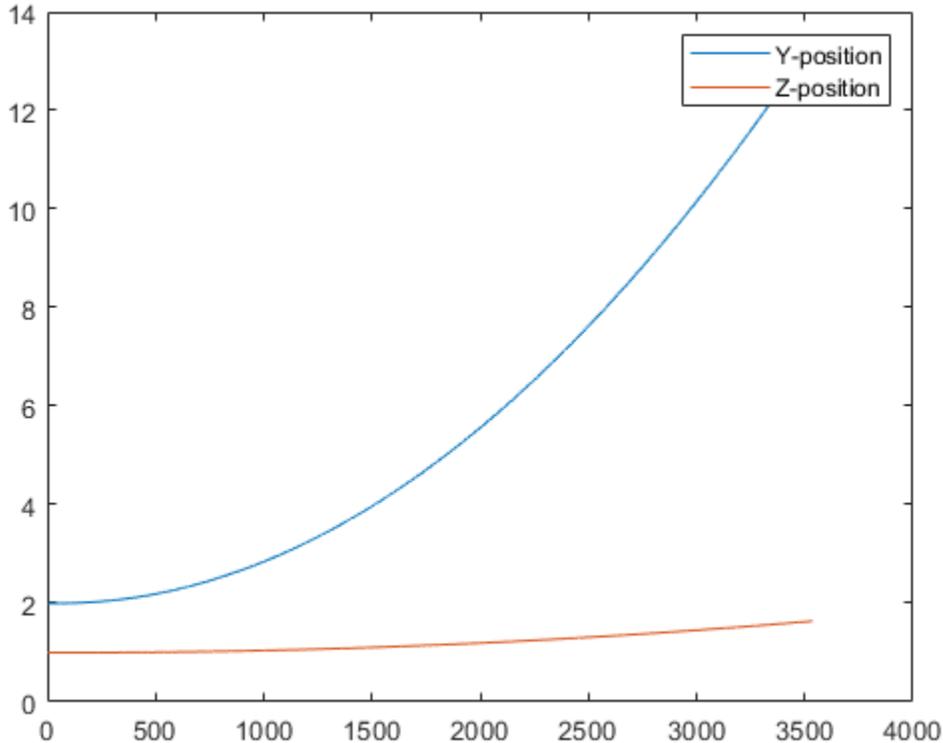

You can also plot the multirotor trajectory using `plotTransforms`. Create the translation and rotation vectors from the simulated state. Downsample (every 300th element) and transpose the `simOut` elements, and convert the Euler angles to quaternions. Specify the mesh as the `multirotor.stl` file and the positive Z-direction as "down". The displayed view shows the UAV translating in the Y-direction and losing altitude.

```
translations = simOut.y(1:3,1:300:end)'; % xyz position
rotations = eul2quat(simOut.y(7:9,1:300:end)'); % ZYX Euler
plotTransforms(translations,rotations,...
    'MeshFilePath','multirotor.stl','InertialZDirection','down')
view([90.00 -0.60])
```

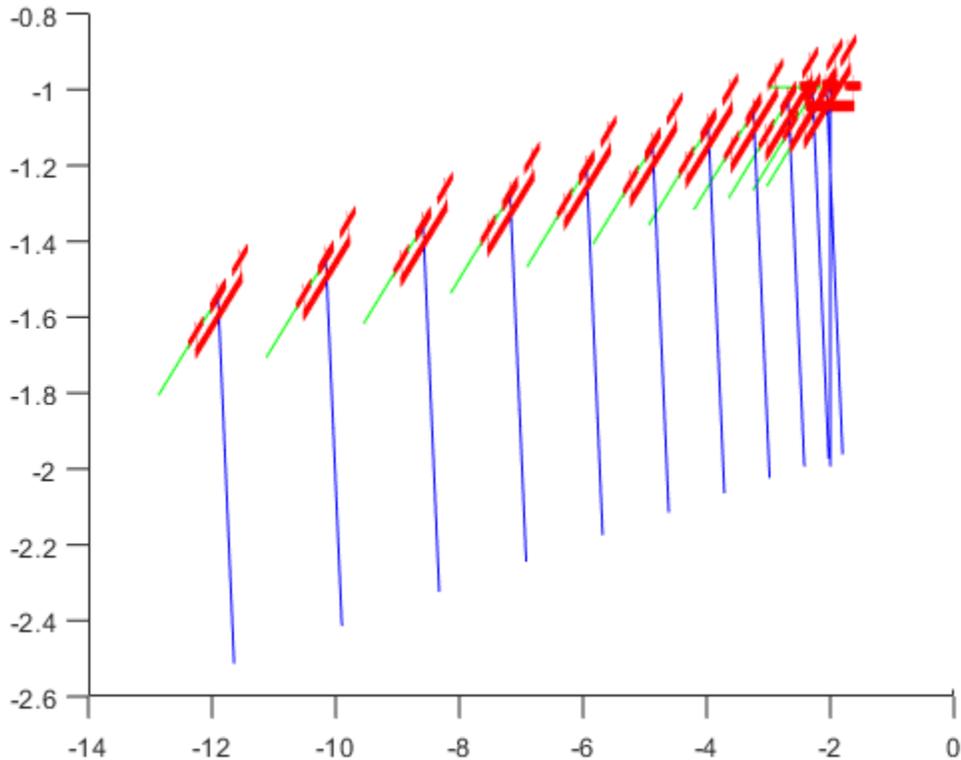

More About

UAV Coordinate Systems

The UAV Library for Robotics System Toolbox uses the North-East-Down (NED) coordinate system convention, which is also sometimes called the local tangent plane (LTP). The UAV position vector consists of three numbers for position along the northern-axis, eastern-axis, and vertical position. The down element complies with the right-hand rule and results in negative values for altitude gain.

The ground plane, or earth frame (NE plane, $D = 0$), is assumed to be an inertial plane that is flat based on the operation region for small UAV control. The earth frame coordinates are $[x_e, y_e, z_e]$. The body frame of the UAV is attached to the center of mass with coordinates $[x_b, y_b, z_b]$. x_b is the preferred forward direction of the UAV, and z_b is perpendicular to the plane that points downwards when the UAV travels during perfect horizontal flight.

The orientation of the UAV (body frame) is specified in ZYX Euler angles. To convert from the earth frame to the body frame, we first rotate about the z_e -axis by the yaw angle, ψ . Then, rotate about the intermediate y -axis by the pitch angle, ϕ . Then, rotate about the intermediate x -axis by the roll angle, θ .

The angular velocity of the UAV is represented by $[r, p, q]$ with respect to the body axes, $[x_b, y_b, z_b]$.

UAV Multirotor Guidance Model Equations

For multirotors, the following equations are used to define the guidance model of the UAV. To calculate the time-derivative of the UAV state using these governing equations, use the derivative function. Specify the inputs using `state`, `control`, and `environment`.

The UAV position in the earth frame is $[x_e, y_e, z_e]$ with orientation as ZYX Euler angles, $[\psi, \theta, \phi]$ in radians. Angular velocities are $[p, q, r]$ in radians per second.

The UAV body frame uses coordinates as $[x_b, y_b, z_b]$.

When converting coordinates from the world (earth) frame to the body frame of the UAV, the rotation matrix is:

$$R_b^e = \begin{bmatrix} c_\theta c_\psi & c_\psi s_\phi s_\theta - c_\phi s_\psi & c_\phi c_\psi s_\theta + s_\phi s_\psi \\ c_\theta s_\psi & c_\phi c_\psi + s_\phi s_\theta s_\psi & -c_\psi s_\phi + c_\phi s_\theta s_\psi \\ -s_\theta & c_\theta s_\phi & c_\phi c_\theta \end{bmatrix}$$

The $\cos(x)$ and $\sin(x)$ are abbreviated as c_x and s_x .

The acceleration of the UAV center of mass in earth coordinates is governed by:

$$m \begin{bmatrix} \ddot{x}_e \\ \ddot{y}_e \\ \ddot{z}_e \end{bmatrix} = \begin{bmatrix} 0 \\ 0 \\ mg \end{bmatrix} + R_b^e \begin{bmatrix} 0 \\ 0 \\ -F_{thrust} \end{bmatrix}$$

m is the UAV mass, g is gravity, and F_{thrust} is the total force created by the propellers applied to the multirotor along the $-z_b$ axis (points upwards in a horizontal pose).

The closed-loop roll-pitch attitude controller is approximated by the behavior of 2 independent PD controllers for the two rotation angles, and 2 independent P controllers for the yaw rate and thrust. The angular velocity, angular acceleration, and thrust are governed by:

$$J = \begin{bmatrix} 1 & \sin \phi \tan \theta & \cos \phi \tan \theta \\ 0 & \cos \phi & -\sin \phi \\ 0 & \frac{\sin \phi}{\cos \theta} & \frac{\cos \phi}{\cos \theta} \end{bmatrix}$$

$$\begin{bmatrix} \dot{\phi} \\ \dot{\theta} \\ \dot{\psi} \end{bmatrix} = J \begin{bmatrix} p \\ q \\ r \end{bmatrix}$$

$$\begin{bmatrix} \dot{p} \\ \dot{q} \\ \dot{r} \end{bmatrix} = \begin{bmatrix} 1 & 0 & -\sin \theta \\ 0 & \cos \phi & \sin \phi \cos \theta \\ 0 & -\sin \phi & \cos \phi \cos \theta \end{bmatrix} \begin{bmatrix} KP_\phi(\phi^c - \phi) + KD_\phi(-\dot{\phi}) \\ KP_\theta(\theta^c - \theta) + KD_\theta(-\dot{\theta}) \\ KP_\psi(\dot{\psi}^c - \dot{\psi}) \end{bmatrix}$$

$$\dot{F}_{thrust} = KP_F(F_{thrust}^c - F_{thrust})$$

This model assumes the autopilot takes in commanded roll, pitch, yaw angles, $[\psi^c, \theta^c, \phi^c]$ and a commanded total thrust force, F_{thrust}^c . The structure to specify these inputs is generated from control.

The P and D gains for the control inputs are specified as KP_α and KD_α , where α is either the rotation angle or thrust. These gains along with the UAV mass, m , are specified in the Configuration property of the multirotor object.

From these governing equations, the model gives the following variables:

$$[x_e \ y_e \ z_e \ \dot{x}_e \ \dot{y}_e \ \dot{z}_e \ \psi \ \theta \ \phi \ r \ p \ q \ F_{thrust}]$$

These variables match the output of the state function.

References

- [1] Mellinger, Daniel, and Nathan Michael. "Trajectory Generation and Control for Precise Aggressive Maneuvers with Quadrotors." *The International Journal of Robotics Research*. 2012, pp. 664-74.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

control | derivative | environment | ode45 | plotTransforms | roboticsAddons | state

Objects

fixedwing | uavWaypointFollower

Blocks

UAV Guidance Model | Waypoint Follower

Topics

"Approximate High-Fidelity UAV model with UAV Guidance Model block"

“Tuning Waypoint Follower for Fixed-Wing UAV”

Introduced in R2018b

quaternion

Create a quaternion array


Description

A quaternion is a four-part hyper-complex number used in three-dimensional rotations and orientations.

A quaternion number is represented in the form $a + bi + cj + dk$, where a , b , c , and d parts are real numbers, and i , j , and k are the basis elements, satisfying the equation: $i^2 = j^2 = k^2 = ijk = -1$.

The set of quaternions, denoted by \mathbf{H} , is defined within a four-dimensional vector space over the real numbers, \mathbf{R}^4 . Every element of \mathbf{H} has a unique representation based on a linear combination of the basis elements, i , j , and k .

All rotations in 3-D can be described by an axis of rotation and angle about that axis. An advantage of quaternions over rotation matrices is that the axis and angle of rotation is easy to interpret. For example, consider a point in \mathbf{R}^3 . To rotate the point, you define an axis of rotation and an angle of rotation.

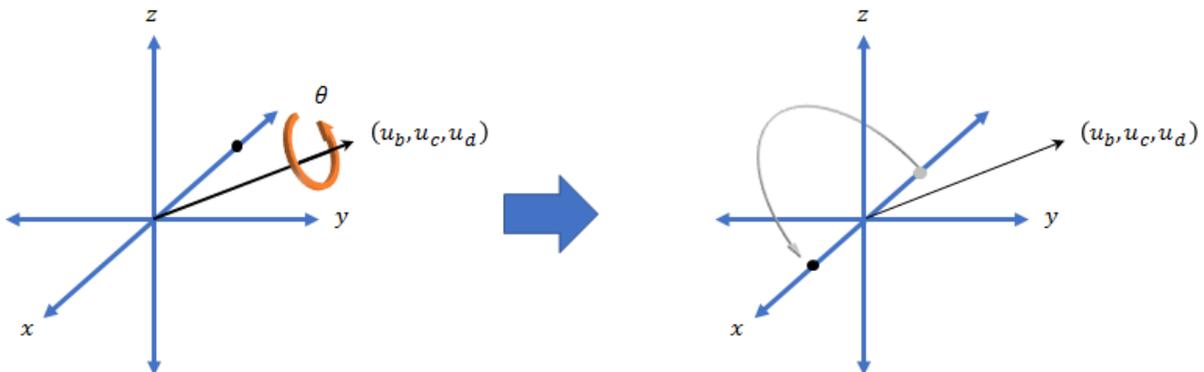

The quaternion representation of the rotation may be expressed as

$q = \cos(\theta/2) + \sin(\theta/2)(u_b i + u_c j + u_d k)$, where θ is the angle of rotation and $[u_b, u_c, \text{ and } u_d]$ is the axis of rotation.

Creation

Syntax

```
quat = quaternion()  
quat = quaternion(A,B,C,D)  
quat = quaternion(matrix)  
quat = quaternion(RV, 'rotvec')  
quat = quaternion(RV, 'rotvecd')  
quat = quaternion(RM, 'rotmat', PF)  
quat = quaternion(E, 'euler', RS, PF)  
quat = quaternion(E, 'eulerd', RS, PF)
```

Description

`quat = quaternion()` creates an empty quaternion.

`quat = quaternion(A,B,C,D)` creates a quaternion array where the four quaternion parts are taken from the arrays A, B, C, and D. All the inputs must have the same size and be of the same data type.

`quat = quaternion(matrix)` creates an N -by-1 quaternion array from an N -by-4 matrix, where each column becomes one part of the quaternion.

`quat = quaternion(RV, 'rotvec')` creates an N -by-1 quaternion array from an N -by-3 matrix of rotation vectors, RV. Each row of RV represents a rotation vector in radians.

`quat = quaternion(RV, 'rotvecd')` creates an N -by-1 quaternion array from an N -by-3 matrix of rotation vectors, RV. Each row of RV represents a rotation vector in degrees.

`quat = quaternion(RM, 'rotmat', PF)` creates an N -by-1 quaternion array from the 3-by-3-by- N array of rotation matrices, `RM`. `PF` can be either `'point'` if the Euler angles represent point rotations or `'frame'` for frame rotations.

`quat = quaternion(E, 'euler', RS, PF)` creates an N -by-1 quaternion array from the N -by-3 matrix, `E`. Each row of `E` represents a set of Euler angles in radians. The angles in `E` are rotations about the axes in sequence `RS`.

`quat = quaternion(E, 'eulerd', RS, PF)` creates an N -by-1 quaternion array from the N -by-3 matrix, `E`. Each row of `E` represents a set of Euler angles in degrees. The angles in `E` are rotations about the axes in sequence `RS`.

Input Arguments

A, B, C, D — Quaternion parts

comma-separated arrays of the same size

Parts of a quaternion, specified as four comma-separated scalars, matrices, or multi-dimensional arrays of the same size.

Example: `quat = quaternion(1,2,3,4)` creates a quaternion of the form $1 + 2i + 3j + 4k$.

Example: `quat = quaternion([1,5],[2,6],[3,7],[4,8])` creates a 1-by-2 quaternion array where `quat(1,1) = 1 + 2i + 3j + 4k` and `quat(1,2) = 5 + 6i + 7j + 8k`

Data Types: `single` | `double`

matrix — Matrix of quaternion parts

N -by-4 matrix

Matrix of quaternion parts, specified as an N -by-4 matrix. Each row represents a separate quaternion. Each column represents a separate quaternion part.

Example: `quat = quaternion(rand(10,4))` creates a 10-by-1 quaternion array.

Data Types: `single` | `double`

RV — Matrix of rotation vectors

N -by-3 matrix

Matrix of rotation vectors, specified as an N -by-3 matrix. Each row of RV represents the [X Y Z] elements of a rotation vector. A rotation vector is a unit vector representing the axis of rotation scaled by the angle of rotation in radians or degrees.

To use this syntax, specify the first argument as a matrix of rotation vectors and the second argument as the 'rotvec' or 'rotvecd'.

Example: `quat = quaternion(rand(10,3), 'rotvec')` creates a 10-by-1 quaternion array.

Data Types: `single` | `double`

RM — Rotation matrices

3-by-3 matrix | 3-by-3-by- N array

Array of rotation matrices, specified by a 3-by-3 matrix or 3-by-3-by- N array. Each page of the array represents a separate rotation matrix.

Example: `quat = quaternion(rand(3), 'rotmat', 'point')`

Example: `quat = quaternion(rand(3), 'rotmat', 'frame')`

Data Types: `single` | `double`

PF — Type of rotation matrix

'point' | 'frame'

Type of rotation matrix, specified by 'point' or 'frame'.

Example: `quat = quaternion(rand(3), 'rotmat', 'point')`

Example: `quat = quaternion(rand(3), 'rotmat', 'frame')`

Data Types: `char` | `string`

E — Matrix of Euler angles

N -by-3 matrix

Matrix of Euler angles, specified by an N -by-3 matrix. If using the 'euler' syntax, specify E in radians. If using the 'eulerd' syntax, specify E in degrees.

Example: `quat = quaternion(E, 'euler', 'YZY', 'point')`

Example: `quat = quaternion(E, 'euler', 'XYZ', 'frame')`

Data Types: `single` | `double`

RS — Rotation sequence

character vector | scalar string

Rotation sequence, specified as a three-element character vector:

- 'YZY'
- 'YXY'
- 'ZYZ'
- 'ZXZ'
- 'XYX'
- 'XZX'
- 'XYZ'
- 'YZX'
- 'ZXY'
- 'XZY'
- 'ZYX'
- 'YXZ'

Assume you want to determine the new coordinates of a point when its coordinate system is rotated using frame rotation. The point is defined in the original coordinate system as:

```
point = [sqrt(2)/2, sqrt(2)/2, 0];
```


In this representation, the first column represents the x-axis, the second column represents the y-axis, and the third column represents the z-axis.

You want to rotate the point using the Euler angle representation [45,45,0]. Rotate the point using two different rotation sequences:

- If you create a quaternion rotator and specify the 'ZYX' sequence, the frame is first rotated 45° around the z-axis, then 45° around the new y-axis.

```
quatRotator = quaternion([45,45,0], 'eulerd', 'ZYX', 'frame');
newPointCoordinate = rotateframe(quatRotator, point)
```


```
newPointCoordinate =
    0.7071    -0.0000    0.7071
```

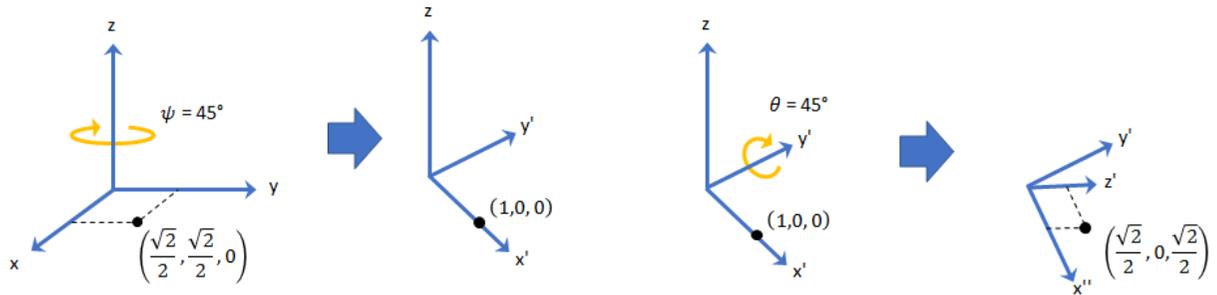

- If you create a quaternion rotator and specify the 'YZX' sequence, the frame is first rotated 45° around the y-axis, then 45° around the new z-axis.

```
quatRotator = quaternion([45,45,0], 'eulerd', 'YZX', 'frame');
newPointCoordinate = rotateframe(quatRotator, point)
```

```
newPointCoordinate =
    0.8536    0.1464    0.5000
```

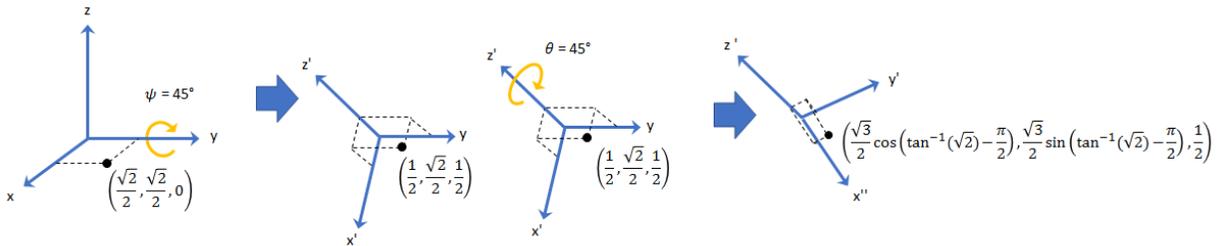

Data Types: char | string

Object Functions

classUnderlying	Class of parts within quaternion
compact	Convert quaternion array to N-by-4 matrix
conj	Complex conjugate of quaternion
ctranspose	Complex conjugate transpose of quaternion array
dist	Angular distance in radians
euler	Convert quaternion to Euler angles (radians)

eulerd	Convert quaternion to Euler angles (degrees)
exp	Exponential of quaternion array
log	Natural logarithm of quaternion array
meanrot	Quaternion mean rotation
minus, -	Quaternion subtraction
mtimes, *	Quaternion multiplication
norm	Quaternion norm
normalize	Quaternion normalization
ones	Create quaternion array with real parts set to one and imaginary parts set to zero
parts	Extract quaternion parts
power, .^	Element-wise quaternion power
prod	Product of a quaternion array
randrot	Uniformly distributed random rotations
rotateframe	Quaternion frame rotation
rotatepoint	Quaternion point rotation
rotmat	Convert quaternion to rotation matrix
rotvec	Convert quaternion to rotation vector (radians)
rotvecd	Convert quaternion to rotation vector (degrees)
slerp	Spherical linear interpolation
times, *	Element-wise quaternion multiplication
rdivide, ./	Element-wise quaternion right division
ldivide, .\	Element-wise quaternion left division
transpose	Transpose a quaternion array
uminus, -	Quaternion unary minus
zeros	Create quaternion array with all parts set to zero

Examples

Create Empty Quaternion

```
quat = quaternion()
quat =
    0x0 empty quaternion array
```

By default, the underlying class of the quaternion is a double.

```
classUnderlying(quat)
```

```
ans =  
'double'
```

Create Quaternion by Specifying Individual Quaternion Parts

You can create a quaternion array by specifying the four parts as comma-separated scalars, matrices, or multidimensional arrays of the same size.

Define quaternion parts as scalars.

```
A = 1.1;  
B = 2.1;  
C = 3.1;  
D = 4.1;  
quatScalar = quaternion(A,B,C,D)
```

```
quatScalar = quaternion  
    1.1 + 2.1i + 3.1j + 4.1k
```

Define quaternion parts as column vectors.

```
A = [1.1;1.2];  
B = [2.1;2.2];  
C = [3.1;3.2];  
D = [4.1;4.2];  
quatVector = quaternion(A,B,C,D)
```

```
quatVector=2×1 object  
    1.1 + 2.1i + 3.1j + 4.1k  
    1.2 + 2.2i + 3.2j + 4.2k
```

Define quaternion parts as matrices.

```
A = [1.1,1.3; ...  
    1.2,1.4];  
B = [2.1,2.3; ...  
    2.2,2.4];  
C = [3.1,3.3; ...  
    3.2,3.4];  
D = [4.1,4.3; ...
```

```

    4.2,4.4];
quatMatrix = quaternion(A,B,C,D)

quatMatrix=2x2 object
    1.1 + 2.1i + 3.1j + 4.1k    1.3 + 2.3i + 3.3j + 4.3k
    1.2 + 2.2i + 3.2j + 4.2k    1.4 + 2.4i + 3.4j + 4.4k

```

Define quaternion parts as three dimensional arrays.

```

A = randn(2,2,2);
B = zeros(2,2,2);
C = zeros(2,2,2);
D = zeros(2,2,2);
quatMultiDimArray = quaternion(A,B,C,D)

quatMultiDimArray = 2x2x2 quaternion array
quatMultiDimArray(:,:,1) =

    0.53767 +    0i +    0j +    0k    -2.2588 +    0i +    0j +
    1.8339 +    0i +    0j +    0k    0.86217 +    0i +    0j +

quatMultiDimArray(:,:,2) =

    0.31877 +    0i +    0j +    0k    -0.43359 +    0i +    0j +
   -1.3077 +    0i +    0j +    0k    0.34262 +    0i +    0j +

```

Create Quaternion by Specifying Quaternion Parts Matrix

You can create a scalar or column vector of quaternions by specify an N -by-4 matrix of quaternion parts, where columns correspond to the quaternion parts A, B, C, and D.

Create a column vector of random quaternions.

```

quatParts = rand(3,4)

quatParts = 3x4

    0.8147    0.9134    0.2785    0.9649
    0.9058    0.6324    0.5469    0.1576
    0.1270    0.0975    0.9575    0.9706

```

```
quat = quaternion(quatParts)
quat=3x1 object
    0.81472 + 0.91338i + 0.2785j + 0.96489k
    0.90579 + 0.63236i + 0.54688j + 0.15761k
    0.12699 + 0.09754i + 0.95751j + 0.97059k
```

To retrieve the `quatParts` matrix from quaternion representation, use `compact`.

```
retrievedquatParts = compact(quat)
retrievedquatParts = 3x4
    0.8147    0.9134    0.2785    0.9649
    0.9058    0.6324    0.5469    0.1576
    0.1270    0.0975    0.9575    0.9706
```

Create Quaternion by Specifying Rotation Vectors

You can create an N -by-1 quaternion array by specifying an N -by-3 matrix of rotation vectors in radians or degrees. Rotation vectors are compact spatial representations that have a one-to-one relationship with normalized quaternions.

Rotation Vectors in Radians

Create a scalar quaternion using a rotation vector and verify the resulting quaternion is normalized.

```
rotationVector = [0.3491,0.6283,0.3491];
quat = quaternion(rotationVector,'rotvec')
quat = quaternion
    0.92124 + 0.16994i + 0.30586j + 0.16994k

norm(quat)
ans = 1.0000
```

You can convert from quaternions to rotation vectors in radians using the `rotvec` function. Recover the `rotationVector` from the quaternion, `quat`.

```
rotvec(quat)
ans = 1×3
    0.3491    0.6283    0.3491
```

Rotation Vectors in Degrees

Create a scalar quaternion using a rotation vector and verify the resulting quaternion is normalized.

```
rotationVector = [20,36,20];
quat = quaternion(rotationVector,'rotvecd')

quat = quaternion
    0.92125 + 0.16993i + 0.30587j + 0.16993k
```

```
norm(quat)
ans = 1
```

You can convert from quaternions to rotation vectors in degrees using the `rotvecd` function. Recover the `rotationVector` from the quaternion, `quat`.

```
rotvecd(quat)
ans = 1×3
    20.0000    36.0000    20.0000
```

Create Quaternion by Specifying Rotation Matrices

You can create an N-by-1 quaternion array by specifying a 3-by-3-by-N array of rotation matrices. Each page of the rotation matrix array corresponds to one element of the quaternion array.

Create a scalar quaternion using a 3-by-3 rotation matrix. Specify whether the rotation matrix should be interpreted as a frame or point rotation.

```
rotationMatrix = [1 0          0; ...
                  0 sqrt(3)/2 0.5; ...
```

```
        0 -0.5      sqrt(3)/2];
quat = quaternion(rotationMatrix,'rotmat','frame')

quat = quaternion
    0.96593 + 0.25882i +      0j +      0k
```

You can convert from quaternions to rotation matrices using the `rotmat` function. Recover the `rotationMatrix` from the quaternion, `quat`.

```
rotmat(quat,'frame')

ans = 3x3

    1.0000         0         0
         0     0.8660     0.5000
         0    -0.5000     0.8660
```

Create Quaternion by Specifying Euler Angles

You can create an N -by-1 quaternion array by specifying an N -by-3 array of Euler angles in radians or degrees.

Euler Angles in Radians

Use the `euler` syntax to create a scalar quaternion using a 1-by-3 vector of Euler angles in radians. Specify the rotation sequence of the Euler angles and whether the angles represent a frame or point rotation.

```
E = [pi/2,0,pi/4];
quat = quaternion(E,'euler','ZYX','frame')

quat = quaternion
    0.65328 + 0.2706i + 0.2706j + 0.65328k
```

You can convert from quaternions to Euler angles using the `euler` function. Recover the Euler angles, `E`, from the quaternion, `quat`.

```
euler(quat,'ZYX','frame')
```

```
ans = 1×3
      1.5708      0      0.7854
```

Euler Angles in Degrees

Use the `eulerd` syntax to create a scalar quaternion using a 1-by-3 vector of Euler angles in degrees. Specify the rotation sequence of the Euler angles and whether the angles represent a frame or point rotation.

```
E = [90,0,45];
quat = quaternion(E,'eulerd','ZYX','frame')

quat = quaternion
      0.65328 + 0.2706i + 0.2706j + 0.65328k
```

You can convert from quaternions to Euler angles in degrees using the `eulerd` function. Recover the Euler angles, `E`, from the quaternion, `quat`.

```
eulerd(quat,'ZYX','frame')

ans = 1×3
      90.0000      0      45.0000
```

Quaternion Algebra

Quaternions form a noncommutative associative algebra over the real numbers. This example illustrates the rules of quaternion algebra.

Addition and Subtraction

Quaternion addition and subtraction occur part-by-part, and are commutative:

```
Q1 = quaternion(1,2,3,4)

Q1 = quaternion
      1 + 2i + 3j + 4k

Q2 = quaternion(9,8,7,6)
```

$$Q2 = \textit{quaternion}$$
$$9 + 8i + 7j + 6k$$

$$Q1\textit{plus}Q2 = Q1 + Q2$$

$$Q1\textit{plus}Q2 = \textit{quaternion}$$
$$10 + 10i + 10j + 10k$$

$$Q2\textit{plus}Q1 = Q2 + Q1$$

$$Q2\textit{plus}Q1 = \textit{quaternion}$$
$$10 + 10i + 10j + 10k$$

$$Q1\textit{minus}Q2 = Q1 - Q2$$

$$Q1\textit{minus}Q2 = \textit{quaternion}$$
$$-8 - 6i - 4j - 2k$$

$$Q2\textit{minus}Q1 = Q2 - Q1$$

$$Q2\textit{minus}Q1 = \textit{quaternion}$$
$$8 + 6i + 4j + 2k$$

You can also perform addition and subtraction of real numbers and quaternions. The first part of a quaternion is referred to as the *real* part, while the second, third, and fourth parts are referred to as the *vector*. Addition and subtraction with real numbers affect only the real part of the quaternion.

$$Q1\textit{plus}RealNumber = Q1 + 5$$

$$Q1\textit{plus}RealNumber = \textit{quaternion}$$
$$6 + 2i + 3j + 4k$$

$$Q1\textit{minus}RealNumber = Q1 - 5$$

$$Q1\textit{minus}RealNumber = \textit{quaternion}$$
$$-4 + 2i + 3j + 4k$$

Multiplication

Quaternion multiplication is determined by the products of the basis elements and the distributive law. Recall that multiplication of the basis elements, i , j , and k , are not commutative, and therefore quaternion multiplication is not commutative.

$$Q1 \text{ times } Q2 = Q1 * Q2$$

$$Q1 \text{ times } Q2 = \text{quaternion} \\ -52 + 16i + 54j + 32k$$

$$Q2 \text{ times } Q1 = Q2 * Q1$$

$$Q2 \text{ times } Q1 = \text{quaternion} \\ -52 + 36i + 14j + 52k$$

$$\text{isequal}(Q1 \text{ times } Q2, Q2 \text{ times } Q1)$$

$$\text{ans} = \text{logical} \\ 0$$

You can also multiply a quaternion by a real number. If you multiply a quaternion by a real number, each part of the quaternion is multiplied by the real number individually:

$$Q1 \text{ times } 5 = Q1 * 5$$

$$Q1 \text{ times } 5 = \text{quaternion} \\ 5 + 10i + 15j + 20k$$

Multiplying a quaternion by a real number is commutative.

$$\text{isequal}(Q1 * 5, 5 * Q1)$$

$$\text{ans} = \text{logical} \\ 1$$

Conjugation

The complex conjugate of a quaternion is defined such that each element of the vector portion of the quaternion is negated.

Q1

```
Q1 = quaternion
     1 + 2i + 3j + 4k
```

conj(Q1)

```
ans = quaternion
     1 - 2i - 3j - 4k
```

Multiplication between a quaternion and its conjugate is commutative:

```
isequal(Q1*conj(Q1),conj(Q1)*Q1)
```

```
ans = logical
     1
```

Quaternion Array Manipulation

You can organize quaternions into vectors, matrices, and multidimensional arrays. Built-in MATLAB® functions have been enhanced to work with quaternions.

Concatenate

Quaternions are treated as individual objects during concatenation and follow MATLAB rules for array manipulation.

```
Q1 = quaternion(1,2,3,4);
Q2 = quaternion(9,8,7,6);
```

```
qVector = [Q1,Q2]
```

```
qVector=1x2 object
     1 + 2i + 3j + 4k     9 + 8i + 7j + 6k
```

```
Q3 = quaternion(-1,-2,-3,-4);
Q4 = quaternion(-9,-8,-7,-6);
```

```
qMatrix = [qVector;Q3,Q4]
```

```
qMatrix=2x2 object
    1 + 2i + 3j + 4k    9 + 8i + 7j + 6k
   -1 - 2i - 3j - 4k   -9 - 8i - 7j - 6k
```

```
qMultiDimensionalArray(:,:,1) = qMatrix;
qMultiDimensionalArray(:,:,2) = qMatrix
```

```
qMultiDimensionalArray = 2x2x2 quaternion array
qMultiDimensionalArray(:,:,1) =
```

```
    1 + 2i + 3j + 4k    9 + 8i + 7j + 6k
   -1 - 2i - 3j - 4k   -9 - 8i - 7j - 6k
```

```
qMultiDimensionalArray(:,:,2) =
```

```
    1 + 2i + 3j + 4k    9 + 8i + 7j + 6k
   -1 - 2i - 3j - 4k   -9 - 8i - 7j - 6k
```

Indexing

To access or assign elements in a quaternion array, use indexing.

```
qLoc2 = qMultiDimensionalArray(2)
```

```
qLoc2 = quaternion
   -1 - 2i - 3j - 4k
```

Replace the quaternion at index two with a quaternion one.

```
qMultiDimensionalArray(2) = ones('quaternion')
```

```
qMultiDimensionalArray = 2x2x2 quaternion array
qMultiDimensionalArray(:,:,1) =
```

```
    1 + 2i + 3j + 4k    9 + 8i + 7j + 6k
    1 + 0i + 0j + 0k   -9 - 8i - 7j - 6k
```

```
qMultiDimensionalArray(:,:,2) =
```

```
    1 + 2i + 3j + 4k    9 + 8i + 7j + 6k
```

$$-1 - 2i - 3j - 4k \quad -9 - 8i - 7j - 6k$$

Reshape

To reshape quaternion arrays, use the `reshape` function.

```
qMatReshaped = reshape(qMatrix,4,1)
```

```
qMatReshaped=4x1 object
  1 + 2i + 3j + 4k
 -1 - 2i - 3j - 4k
  9 + 8i + 7j + 6k
 -9 - 8i - 7j - 6k
```

Transpose

To transpose quaternion vectors and matrices, use the `transpose` function.

```
qMatTransposed = transpose(qMatrix)
```

```
qMatTransposed=2x2 object
  1 + 2i + 3j + 4k   -1 - 2i - 3j - 4k
  9 + 8i + 7j + 6k   -9 - 8i - 7j - 6k
```

Permute

To permute quaternion vectors, matrices, and multidimensional arrays, use the `permute` function.

```
qMultiDimensionalArray
```

```
qMultiDimensionalArray = 2x2x2 quaternion array
qMultiDimensionalArray(:,:,1) =
```

$$\begin{array}{cc} 1 + 2i + 3j + 4k & 9 + 8i + 7j + 6k \\ 1 + 0i + 0j + 0k & -9 - 8i - 7j - 6k \end{array}$$

```
qMultiDimensionalArray(:,:,2) =
```

$$\begin{array}{cc} 1 + 2i + 3j + 4k & 9 + 8i + 7j + 6k \\ -1 - 2i - 3j - 4k & -9 - 8i - 7j - 6k \end{array}$$

```
qMatPermute = permute(qMultiDimensionalArray,[3,1,2])
```

```
qMatPermute = 2x2x2 quaternion array
```

```
qMatPermute(:,:,1) =
```

$$\begin{array}{cc} 1 + 2i + 3j + 4k & 1 + 0i + 0j + 0k \\ 1 + 2i + 3j + 4k & -1 - 2i - 3j - 4k \end{array}$$

```
qMatPermute(:,:,2) =
```

$$\begin{array}{cc} 9 + 8i + 7j + 6k & -9 - 8i - 7j - 6k \\ 9 + 8i + 7j + 6k & -9 - 8i - 7j - 6k \end{array}$$

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

rateControl

Execute loop at fixed frequency

Description

The `rateControl` object enables you to run a loop at a fixed frequency. It also collects statistics about the timing of the loop iterations. Use `waitfor` in the loop to pause code execution until the next time step. The loop operates every `DesiredPeriod` seconds, unless the enclosed code takes longer to operate. The object uses the `OverrunAction` property to determine how it handles longer loop operation times. The default setting, `'slip'`, immediately executes the loop if `LastPeriod` is greater than `DesiredPeriod`. Using `'drop'` causes the `waitfor` method to wait until the next multiple of `DesiredPeriod` is reached to execute the next loop.

Tip The scheduling resolution of your operating system and the level of other system activity can affect rate execution accuracy. As a result, accurate rate timing is limited to 100 Hz for execution of MATLAB code. To improve performance and execution speeds, use code generation.

Creation

Syntax

```
rateObj = rateControl(desiredRate)
```

Description

`rateObj = rateControl(desiredRate)` creates an object that operates loops at a fixed-rate based on your system time and directly sets the `DesireRate` property.

Properties

DesiredRate — Desired execution rate

scalar

Desired execution rate of loop, specified as a scalar in Hz. When using `waitfor`, the loop operates every `DesiredRate` seconds, unless the loop takes longer. It then begins the next loop based on the specified `OverrunAction`.

DesiredPeriod — Desired time period between executions

scalar

Desired time period between executions, specified as a scalar in seconds. This property is equal to the inverse of `DesiredRate`.

TotalElapsedTime — Elapsed time since construction or reset

scalar

Elapsed time since construction or reset, specified as a scalar in seconds.

LastPeriod — Elapsed time between last two calls to waitfor

NaN (default) | scalar


Elapsed time between last two calls to `waitfor`, specified as a scalar. By default, `LastPeriod` is set to NaN until `waitfor` is called for the first time. After the first call, `LastPeriod` equals `TotalElapsedTime`.

OverrunAction — Method for handling overruns

'slip' (default) | 'drop'

Method for handling overruns, specified as one of these character vectors:

- 'drop' — waits until the next time interval equal to a multiple of `DesiredPeriod`
- 'slip' — immediately executes the loop again

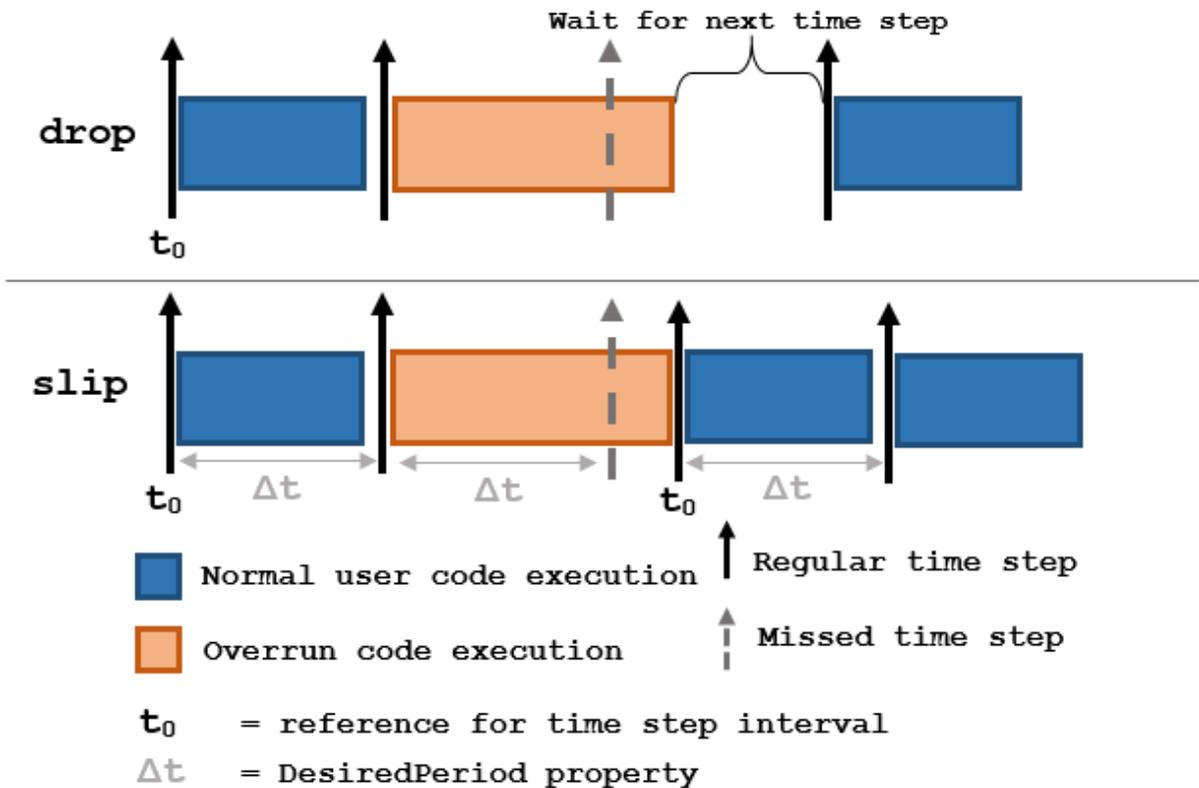

Each code section calls wait for at the end of execution.

Object Functions

waitfor Pause code execution to achieve desired execution rate
 statistics Statistics of past execution periods
 reset Reset Rate object

Examples

Run Loop at Fixed Rate

Create a rate object that runs at 1 Hz.

```
r = rateControl(1);
```

Start a loop using the `rateControl` object inside to control the loop execution. Reset the object prior to the loop execution to reset timer. Print the iteration and time elapsed.

```
reset(r)
for i = 1:10
    time = r.TotalElapsedTime;
    fprintf('Iteration: %d - Time Elapsed: %f\n',i,time)
    waitfor(r);
end
```

```
Iteration: 1 - Time Elapsed: 0.008895
Iteration: 2 - Time Elapsed: 1.005288
Iteration: 3 - Time Elapsed: 2.006203
Iteration: 4 - Time Elapsed: 3.010300
Iteration: 5 - Time Elapsed: 4.005049
Iteration: 6 - Time Elapsed: 5.004715
Iteration: 7 - Time Elapsed: 6.003483
Iteration: 8 - Time Elapsed: 7.003705
Iteration: 9 - Time Elapsed: 8.004860
Iteration: 10 - Time Elapsed: 9.003329
```

Each iteration executes at a 1-second interval.

Get Statistics From Rate Object Execution

Create a `rateControl` object for running at 20 Hz.

```
r = rateControl(20);
```

Start a loop and control operation using the `rateControl` object.

```
for i = 1:30
    % Your code goes here
    waitfor(r);
end
```

Get Rate object statistics after loop operation.

```
stats = statistics(r)
```

```
stats = struct with fields:
    Periods: [1x30 double]
    NumPeriods: 30
    AveragePeriod: 0.0500
    StandardDeviation: 5.1280e-04
    NumOverruns: 0
```

Run Loop At Fixed Rate and Reset Rate Object

Create a `rateControl` object for running at 20 Hz.

```
r = rateControl(2);
```

Start a loop and control operation using the `Rate` object.

```
for i = 1:30
    % Your code goes here
    waitfor(r);
end
```

Display the `rateControl` object properties after loop operation.

```
disp(r)

rateControl with properties:

    DesiredRate: 2
    DesiredPeriod: 0.5000
    OverrunAction: 'slip'
    TotalElapsedTime: 15.0120
    LastPeriod: 0.4992
```

Reset the object to restart the time statistics.

```
reset(r);
disp(r)

rateControl with properties:

    DesiredRate: 2
    DesiredPeriod: 0.5000
    OverrunAction: 'slip'
    TotalElapsedTime: 0.0061
    LastPeriod: NaN
```

Compatibility Considerations

rateControl was renamed

Behavior change in future release

The `rateControl` object was renamed from `robotics.Rate`. Use `rateControl` for all object creation.

See Also

`reset` | `rosclock` | `statistics` | `waitfor`

Topics

“Execute Code at a Fixed-Rate”

Introduced in R2016a

resamplingPolicyPF

Create resampling policy object with resampling settings

Description

The `resamplingPolicyPF` object stores settings for when resampling should occur when using a particle filter for state estimation. The object contains the method that triggers resampling and the relevant threshold for this resampling. Use this object as the `ResamplingPolicy` property of the `stateEstimatorPF` object.

Creation

Syntax

```
policy = resamplingPolicyPF
```

Description

`policy = resamplingPolicyPF` creates a `navParticleResamplingPolicy` object which contains properties to be modified to control when resampling should be triggered. Use this object as the `ResamplingPolicy` property of the `stateEstimatorPF` object.

Properties

TriggerMethod — Method for determining if resampling should occur

'ratio' (default) | character vector

Method for determining if resampling should occur, specified as a character vector. Possible choices are 'ratio' and 'interval'. The 'interval' method triggers resampling at regular intervals of operating the particle filter. The 'ratio' method triggers resampling based on the ratio of effective total particles.

SamplingInterval — Fixed interval between resampling

1 (default) | scalar

Fixed interval between resampling, specified as a scalar. This interval determines during which correction steps the resampling is executed. For example, a value of 2 means the resampling is executed every second correction step. A value of `inf` means that resampling is never executed.

This property only applies with the `TriggerMethod` is set to `'interval'`.

MinEffectiveParticleRatio — Minimum desired ratio of effective to total particles

0.5 (default) | scalar

Minimum desired ratio of effective to total particles, specified as a scalar. The effective number of particles is a measure of how well the current set of particles approximates the posterior distribution. A lower effective particle ratio means less particles are contributing to the estimation and resampling might be required. If the ratio of effective particles to total particles falls below the `MinEffectiveParticleRatio`, a resampling step is triggered.

See Also

correct | stateEstimatorPF

Topics

"Track a Car-Like Robot Using Particle Filter"

Introduced in R2019b

rigidBody

Create a rigid body

Description

The `rigidBody` object represents a rigid body. A rigid body is the building block for any tree-structured robot manipulator. Each `rigidBody` has a `rigidBodyJoint` object attached to it that defines how the rigid body can move. Rigid bodies are assembled into a tree-structured robot model using `rigidBodyTree`.

Set a joint object to the `Joint` property before calling `addBody` to add the rigid body to the robot model. When a rigid body is in a rigid body tree, you cannot directly modify its properties because it corrupts the relationships between bodies. Use `replaceJoint` to modify the entire tree structure.

Creation

Syntax

```
body = rigidBody(name)
```

Description

`body = rigidBody(name)` creates a rigid body with the specified name. By default, the body comes with a fixed joint.

Input Arguments

name — Name of rigid body

string scalar | character vector

Name of the rigid body, specified as a string scalar or character vector. This name must be unique to the body so that it can be accessed in a `rigidBodyTree` object.

Properties

Name — Name of rigid body

string scalar | character vector

Name of the rigid body, specified as a string scalar or character vector. This name must be unique to the body so that it can be found in a `rigidBodyTree` object.

Data Types: char | string

Joint — rigidBodyJoint object

handle

`rigidBodyJoint` object, specified as a handle. By default, the joint is 'fixed' type.

Mass — Mass of rigid body

1 kg (default) | numeric scalar

Mass of rigid body, specified as a numeric scalar in kilograms.

CenterOfMass — Center of mass position of rigid body

[0 0 0] m (default) | [x y z] vector

Center of mass position of rigid body, specified as an [x y z] vector. The vector describes the location of the center of mass relative to the body frame in meters.

Inertia — Inertia of rigid body

[1 1 1 0 0 0] kg•m² (default) | [Ixx Iyy Izz Iyz Ixz Ixy] vector

Inertia of rigid body, specified as a [Ixx Iyy Izz Iyz Ixz Ixy] vector relative to the body frame in kilogram square meters. The first three elements of the vector are the diagonal elements of the inertia tensor. The last three elements are the off-diagonal elements of the inertia tensor. The inertia tensor is a positive definite symmetric matrix:

$$\begin{pmatrix} I_{xx} & I_{xy} & I_{xz} \\ I_{xy} & I_{yy} & I_{yz} \\ I_{xz} & I_{yz} & I_{zz} \end{pmatrix}$$

Parent — Rigid body parent

`rigidBody` object handle

Rigid body parent, specified as a `rigidBody` object handle. The rigid body joint defines how this body can move relative to the parent. This property is empty until the rigid body is added to a `rigidBodyTree` robot model.

Children — Rigid body children

cell array of `rigidBody` object handles

Rigid body children, specified as a cell array of `rigidBody` object handles. These rigid body children are all attached to this rigid body object. This property is empty until the rigid body is added to a `rigidBodyTree` robot model, and at least one other body is added to the tree with this body as its parent.

Visuals — Visual geometries

cell array of string scalars | cell array of character vectors

Visual geometries, specified as a cell array of string scalars or character vectors. Each character vector describes a type and source of a visual geometry. For example, if a mesh file, `link_0.stl`, is attached to the rigid body, the visual would be `Mesh:link_0.stl`. Visual geometries are added to the rigid body using `addVisual`.

Object Functions

`copy` Create a deep copy of rigid body

Examples

Attach Rigid Body and Joint to Rigid Body Tree

Add a rigid body and corresponding joint to a rigid body tree. Each `rigidBody` object contains a `rigidBodyJoint` object and must be added to the `rigidBodyTree` using `addBody`.

Create a rigid body tree.

```
rbtree = rigidBodyTree;
```

Create a rigid body with a unique name.

```
body1 = rigidBody('b1');
```

Create a revolute joint. By default, the `rigidBody` object comes with a fixed joint. Replace the joint by assigning a new `rigidBodyJoint` object to the `body1.Joint` property.

```
jnt1 = rigidBodyJoint('jnt1','revolute');
body1.Joint = jnt1;
```

Add the rigid body to the tree. Specify the body name that you are attaching the rigid body to. Because this is the first body, use the base name of the tree.

```
basename = rbtree.BaseName;
addBody(rbtree,body1,basename)
```

Use `showdetails` on the tree to confirm the rigid body and joint were added properly.

```
showdetails(rbtree)
```

```
-----
Robot: (1 bodies)

  Idx   Body Name   Joint Name   Joint Type   Parent Name(Idx)   Children Name(s)
  ---   -
    1     b1         jnt1        revolute        base(0)
```

Build Manipulator Robot Using Denavit-Hartenberg Parameters

Use the Denavit-Hartenberg (DH) parameters of the Puma560® robot to build a robot. Each rigid body is added one at a time, with the child-to-parent transform specified by the joint object.

The DH parameters define the geometry of the robot with relation to how each rigid body is attached to its parent. For convenience, setup the parameters for the Puma560 robot in a matrix. The Puma robot is a serial chain manipulator. The DH parameters are relative to the previous line in the matrix, corresponding to the previous joint attachment.

```
dhparams = [0      pi/2   0      0;
            0.4318  0      0      0;
            0.0203  -pi/2  0.15005  0;
            0      pi/2   0.4318  0;
            0      -pi/2  0      0;
            0      0      0      0];
```

Create a rigid body tree object to build the robot.

```
robot = rigidBodyTree;
```

Create the first rigid body and add it to the robot. To add a rigid body:

- 1 Create a `rigidBody` object and give it a unique name.
- 2 Create a `rigidBodyJoint` object and give it a unique name.
- 3 Use `setFixedTransform` to specify the body-to-body transformation using DH parameters. The last element of the DH parameters, `theta`, is ignored because the angle is dependent on the joint position.
- 4 Call `addBody` to attach the first body joint to the base frame of the robot.

```
body1 = rigidBody('body1');  
jnt1 = rigidBodyJoint('jnt1','revolute');  
  
setFixedTransform(jnt1,dhparams(1,),'dh');  
body1.Joint = jnt1;  
  
addBody(robot,body1,'base')
```

Create and add other rigid bodies to the robot. Specify the previous body name when calling `addBody` to attach it. Each fixed transform is relative to the previous joint coordinate frame.

```
body2 = rigidBody('body2');  
jnt2 = rigidBodyJoint('jnt2','revolute');  
body3 = rigidBody('body3');  
jnt3 = rigidBodyJoint('jnt3','revolute');  
body4 = rigidBody('body4');  
jnt4 = rigidBodyJoint('jnt4','revolute');  
body5 = rigidBody('body5');  
jnt5 = rigidBodyJoint('jnt5','revolute');  
body6 = rigidBody('body6');  
jnt6 = rigidBodyJoint('jnt6','revolute');  
  
setFixedTransform(jnt2,dhparams(2,),'dh');  
setFixedTransform(jnt3,dhparams(3,),'dh');  
setFixedTransform(jnt4,dhparams(4,),'dh');  
setFixedTransform(jnt5,dhparams(5,),'dh');  
setFixedTransform(jnt6,dhparams(6,),'dh');  
  
body2.Joint = jnt2;
```

```

body3.Joint = jnt3;
body4.Joint = jnt4;
body5.Joint = jnt5;
body6.Joint = jnt6;

addBody(robot,body2,'body1')
addBody(robot,body3,'body2')
addBody(robot,body4,'body3')
addBody(robot,body5,'body4')
addBody(robot,body6,'body5')

```

Verify that your robot was built properly by using the `showdetails` or `show` function. `showdetails` lists all the bodies in the MATLAB® command window. `show` displays the robot with a given configuration (home by default). Calls to `axis` modify the axis limits and hide the axis labels.

```
showdetails(robot)
```

```

-----
Robot: (6 bodies)

```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	body1	jnt1	revolute	base(0)	body2(2)
2	body2	jnt2	revolute	body1(1)	body3(3)
3	body3	jnt3	revolute	body2(2)	body4(4)
4	body4	jnt4	revolute	body3(3)	body5(5)
5	body5	jnt5	revolute	body4(4)	body6(6)
6	body6	jnt6	revolute	body5(5)	

```



-----

```

```

show(robot);
axis([-0.5,0.5,-0.5,0.5,-0.5,0.5])
axis off

```

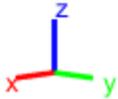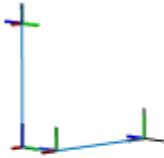

Compatibility Considerations

rigidBody was renamed

Behavior change in future release

The `rigidBody` object was renamed from `robotics.RigidBody`. Use `rigidBody` for all object creation.

References

- [1] Craig, John J. *Introduction to Robotics: Mechanics and Control*. Reading, MA: Addison-Wesley, 1989.
- [2] Siciliano, Bruno. *Robotics: Modelling, Planning and Control*. London: Springer, 2009.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

[addBody](#) | [replaceJoint](#) | [rigidBodyJoint](#) | [rigidBodyTree](#)

Topics

“Build a Robot Step by Step”
“Rigid Body Tree Robot Model”

Introduced in R2016b

rigidBodyJoint

Create a joint

Description

The `rigidBodyJoint` objects defines how a rigid body moves relative to an attachment point. In a tree-structured robot, a joint always belongs to a specific rigid body, and each rigid body has one joint.

The `rigidBodyJoint` object can describe joints of various types. When building a rigid body tree structure with `rigidBodyTree`, you must assign the `Joint` object to a rigid body using the `rigidBody` class.

The different joint types supported are:

- `fixed` — Fixed joint that prevents relative motion between two bodies.
- `revolute` — Single degree of freedom (DOF) joint that rotates around a given axis. Also called a pin or hinge joint.
- `prismatic` — Single DOF joint that slides along a given axis. Also called a sliding joint.

Each joint type has different properties with different dimensions, depending on its defined geometry.

Creation

Syntax

```
jointObj = rigidBodyJoint(jname)  
jointObj = rigidBodyJoint(jname,jtype)
```

Description

`jointObj = rigidBodyJoint(jname)` creates a fixed joint with the specified name.

`jointObj = rigidBodyJoint(jname, jtype)` creates a joint of the specified type with the specified name.

Input Arguments

jname — Joint name

string scalar | character vector

Joint name, specified as a string scalar or character vector. The joint name must be unique to access it off the rigid body tree.

Example: "elbow_right"

Data Types: char | string

jtype — Joint type

'fixed' (default) | string scalar | character vector

Joint type, specified as a string scalar or character vector. The joint type predefines certain properties when creating the joint.

The different joint types supported are:

- **fixed** — Fixed joint that prevents relative motion between two bodies.
- **revolute** — Single degree of freedom (DOF) joint that rotates around a given axis. Also called a pin or hinge joint.
- **prismatic** — Single DOF joint that slides along a given axis. Also called a sliding joint.

Example:

Data Types: char | string

Properties

Type — Joint type

'fixed' (default) | string scalar | character vector

This property is read-only.

Joint type, returned as a string scalar or character vector. The joint type predefines certain properties when creating the joint.

The different joint types supported are:

- `fixed` — Fixed joint that prevents relative motion between two bodies.
- `revolute` — Single degree of freedom (DOF) joint that rotates around a given axis. Also called a pin or hinge joint.
- `prismatic` — Single DOF joint that slides along a given axis. Also called a sliding joint.

If the rigid body that contains this joint is added to a robot model, the joint type must be changed by replacing the joint using `replaceJoint`.

Example:

Data Types: `char` | `string`

Name — Joint name

`string scalar` | `character vector`

Joint name, returned as a string scalar or character vector. The joint name must be unique to access it off the rigid body tree. If the rigid body that contains this joint is added to a robot model, the joint name must be changed by replacing the joint using `replaceJoint`.

Example: `"elbow_right"`

Data Types: `char` | `string`

PositionLimits — Position limits of joint

`vector`

Position limits of the joint, specified as a vector of `[min max]` values. Depending on the type of joint, these values have different definitions.

- `fixed` — `[NaN NaN]` (default). A fixed joint has no joint limits. Bodies remain fixed between each other.
- `revolute` — `[-pi pi]` (default). The limits define the angle of rotation around the axis in radians.
- `prismatic` — `[-0.5 0.5]` (default). The limits define the linear motion along the axis in meters.

Example:

HomePosition — Home position of joint

scalar

Home position of joint, specified as a scalar that depends on your joint type. The home position must fall in the range set by `PositionLimits`. This property is used by `homeConfiguration` to generate the predefined home configuration for an entire rigid body tree.

Depending on the joint type, the home position has a different definition.

- `fixed` — 0 (default). A fixed joint has no relevant home position.
- `revolute` — 0 (default). A revolute joint has a home position defined by the angle of rotation around the joint axis in radians.
- `prismatic` — 0 (default). A prismatic joint has a home position defined by the linear motion along the joint axis in meters.

Example:

JointAxis — Axis of motion for joint

[NaN NaN NaN] (default) | three-element unit vector

Axis of motion for joint, specified as a three-element unit vector. The vector can be any direction in 3-D space in local coordinates.

Depending on the joint type, the joint axis has a different definition.

- `fixed` — A fixed joint has no relevant axis of motion.
- `revolute` — A revolute joint rotates the body in the plane perpendicular to the joint axis.
- `prismatic` — A prismatic joint moves the body in a linear motion along the joint axis direction.

Example:

JointToParentTransform — Fixed transform from joint to parent frame

`eye(4)` (default) | 4-by-4 homogeneous transform matrix

This property is read-only.

Fixed transform from joint to parent frame, returned as a 4-by-4 homogeneous transform matrix. The transform converts the coordinates of points in the joint predecessor frame to the parent body frame.

Example:

ChildToJointTransform — Fixed transform from child body to joint frame
eye(4) (default) | 4-by-4 homogeneous transform matrix

This property is read-only.

Fixed transform from child body to joint frame, returned as a 4-by-4 homogeneous transform matrix. The transform converts the coordinates of points in the child body frame to the joint successor frame.

Example:

Object Functions

copy Create copy of joint
setFixedTransform Set fixed transform properties of joint

Examples

Attach Rigid Body and Joint to Rigid Body Tree

Add a rigid body and corresponding joint to a rigid body tree. Each rigidBody object contains a rigidBodyJoint object and must be added to the rigidBodyTree using addBody.

Create a rigid body tree.

```
rbtree = rigidBodyTree;
```

Create a rigid body with a unique name.

```
body1 = rigidBody('b1');
```

Create a revolute joint. By default, the rigidBody object comes with a fixed joint. Replace the joint by assigning a new rigidBodyJoint object to the body1.Joint property.

```
jnt1 = rigidBodyJoint('jnt1','revolute');
body1.Joint = jnt1;
```

Add the rigid body to the tree. Specify the body name that you are attaching the rigid body to. Because this is the first body, use the base name of the tree.

```
basename = rbtree.BaseName;
addBody(rbtree,body1,basename)
```

Use `showdetails` on the tree to confirm the rigid body and joint were added properly.

```
showdetails(rbtree)
```

```
-----
Robot: (1 bodies)

  Idx   Body Name   Joint Name   Joint Type   Parent Name(Idx)   Children Name(s)
  ---   -
    1      b1         jnt1        revolute        base(0)
-----
```

Build Manipulator Robot Using Denavit-Hartenberg Parameters

Use the Denavit-Hartenberg (DH) parameters of the Puma560® robot to build a robot. Each rigid body is added one at a time, with the child-to-parent transform specified by the joint object.

The DH parameters define the geometry of the robot with relation to how each rigid body is attached to its parent. For convenience, setup the parameters for the Puma560 robot in a matrix. The Puma robot is a serial chain manipulator. The DH parameters are relative to the previous line in the matrix, corresponding to the previous joint attachment.

```
dhparams = [0      pi/2    0      0;
            0.4318  0      0      0
            0.0203  -pi/2   0.15005  0;
            0      pi/2    0.4318  0;
            0      -pi/2   0      0;
            0      0      0      0];
```

Create a rigid body tree object to build the robot.

```
robot = rigidBodyTree;
```

Create the first rigid body and add it to the robot. To add a rigid body:

- 1 Create a `rigidBody` object and give it a unique name.
- 2 Create a `rigidBodyJoint` object and give it a unique name.
- 3 Use `setFixedTransform` to specify the body-to-body transformation using DH parameters. The last element of the DH parameters, `theta`, is ignored because the angle is dependent on the joint position.
- 4 Call `addBody` to attach the first body joint to the base frame of the robot.

```
body1 = rigidBody('body1');
jnt1 = rigidBodyJoint('jnt1','revolute');

setFixedTransform(jnt1,dhparams(1,:), 'dh');
body1.Joint = jnt1;

addBody(robot,body1, 'base')
```

Create and add other rigid bodies to the robot. Specify the previous body name when calling `addBody` to attach it. Each fixed transform is relative to the previous joint coordinate frame.

```
body2 = rigidBody('body2');
jnt2 = rigidBodyJoint('jnt2','revolute');
body3 = rigidBody('body3');
jnt3 = rigidBodyJoint('jnt3','revolute');
body4 = rigidBody('body4');
jnt4 = rigidBodyJoint('jnt4','revolute');
body5 = rigidBody('body5');
jnt5 = rigidBodyJoint('jnt5','revolute');
body6 = rigidBody('body6');
jnt6 = rigidBodyJoint('jnt6','revolute');

setFixedTransform(jnt2,dhparams(2,:), 'dh');
setFixedTransform(jnt3,dhparams(3,:), 'dh');
setFixedTransform(jnt4,dhparams(4,:), 'dh');
setFixedTransform(jnt5,dhparams(5,:), 'dh');
setFixedTransform(jnt6,dhparams(6,:), 'dh');

body2.Joint = jnt2;
body3.Joint = jnt3;
body4.Joint = jnt4;
body5.Joint = jnt5;
body6.Joint = jnt6;
```

```

addBody(robot,body2,'body1')
addBody(robot,body3,'body2')
addBody(robot,body4,'body3')
addBody(robot,body5,'body4')
addBody(robot,body6,'body5')

```

Verify that your robot was built properly by using the `showdetails` or `show` function. `showdetails` lists all the bodies in the MATLAB® command window. `show` displays the robot with a given configuration (home by default). Calls to `axis` modify the axis limits and hide the axis labels.

```
showdetails(robot)
```



```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	body1	jnt1	revolute	base(0)	body2(2)
2	body2	jnt2	revolute	body1(1)	body3(3)
3	body3	jnt3	revolute	body2(2)	body4(4)
4	body4	jnt4	revolute	body3(3)	body5(5)
5	body5	jnt5	revolute	body4(4)	body6(6)
6	body6	jnt6	revolute	body5(5)	

```

show(robot);
axis([-0.5,0.5,-0.5,0.5,-0.5,0.5])
axis off

```

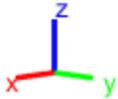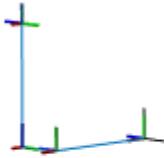

Modify a Robot Rigid Body Tree Model

Make changes to an existing `rigidBodyTree` object. You can get replace joints, bodies and subtrees in the rigid body tree.

Load example robots as `rigidBodyTree` objects.

```
load exampleRobots.mat
```

View the details of the Puma robot using `showdetails`.

```
showdetails(puma1)
```

```

-----
Robot: (6 bodies)

  Idx   Body Name   Joint Name   Joint Type   Parent Name(Idx)   Children Name(s)
-----
    1         L1       jnt1       revolute       base(0)           L2(2)
    2         L2       jnt2       revolute       L1(1)             L3(3)
    3         L3       jnt3       revolute       L2(2)             L4(4)
    4         L4       jnt4       revolute       L3(3)             L5(5)
    5         L5       jnt5       revolute       L4(4)             L6(6)
    6         L6       jnt6       revolute       L5(5)
-----

```

Get a specific body to inspect the properties. The only child of the L3 body is the L4 body. You can copy a specific body as well.

```

body3 = getBody(puma1, 'L3');
childBody = body3.Children{1}

childBody =
  rigidBody with properties:

      Name: 'L4'
      Joint: [1x1 rigidBodyJoint]
      Mass: 1
  CenterOfMass: [0 0 0]
      Inertia: [1 1 1 0 0 0]
      Parent: [1x1 rigidBody]
  Children: {[1x1 rigidBody]}
  Visuals: {}

```

```
body3Copy = copy(body3);
```

Replace the joint on the L3 body. You must create a new Joint object and use `replaceJoint` to ensure the downstream body geometry is unaffected. Call `setFixedTransform` if necessary to define a transform between the bodies instead of with the default identity matrices.

```

newJoint = rigidBodyJoint('prismatic');
replaceJoint(puma1, 'L3', newJoint);

showdetails(puma1)

```

```

-----
Robot: (6 bodies)

```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	prismatic	fixed	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

Remove an entire body and get the resulting subtree using `removeBody`. The removed body is included in the subtree.

```
subtree = removeBody(puma1, 'L4')
```

```
subtree =
  rigidBodyTree with properties:
```

```
  NumBodies: 3
  Bodies: {[1x1 rigidBody] [1x1 rigidBody] [1x1 rigidBody]}
  Base: [1x1 rigidBody]
  BodyNames: {'L4' 'L5' 'L6'}
  BaseName: 'L3'
  Gravity: [0 0 0]
  DataFormat: 'struct'
```

Remove the modified L3 body. Add the original copied L3 body to the L2 body, followed by the returned subtree. The robot model remains the same. See a detailed comparison through `showdetails`.

```
removeBody(puma1, 'L3');
addBody(puma1, body3Copy, 'L2')
addSubtree(puma1, 'L3', subtree)
```

```
showdetails(puma1)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)

3	L3	jnt3	revolute	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

Compatibility Considerations

rigidBodyJoint was renamed

Behavior change in future release

The rigidBodyJoint object was renamed from robotics.Joint. Use rigidBodyJoint for all object creation.

References

- [1] Craig, John J. *Introduction to Robotics: Mechanics and Control*. Reading, MA: Addison-Wesley, 1989.
- [2] Siciliano, Bruno. *Robotics: Modelling, Planning and Control*. London: Springer, 2009.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

rigidBody | rigidBodyTree

Topics

“Build a Robot Step by Step”
 “Rigid Body Tree Robot Model”

Introduced in R2016b

rigidBodyTree

Create tree-structured robot

Description

The `rigidBodyTree` is a representation of the connectivity of rigid bodies with joints. Use this class to build robot manipulator models in MATLAB. If you have a robot model specified using the Unified Robot Description Format (URDF), use `importrobot` to import your robot model.

A rigid body tree model is made up of rigid bodies as `RigidBody` objects. Each rigid body has a `rigidBodyJoint` object associated with it that defines how it can move relative to its parent body. Use `setFixedTransform` to define the fixed transformation between the frame of a joint and the frame of one of the adjacent bodies. You can add, replace, or remove rigid bodies from the model using the methods of the `RigidBodyTree` class.

Robot dynamics calculations are also possible. Specify the `Mass`, `CenterOfMass`, and `Inertia` properties for each `rigidBody` in the robot model. You can calculate forward and inverse dynamics with or without external forces and compute dynamics quantities given robot joint motions and joint inputs. To use the dynamics-related functions, set the `DataFormat` property to "row" or "column".

For a given rigid body tree model, you can also use the robot model to calculate joint angles for desired end-effector positions using the robotics inverse kinematics algorithms. Specify your rigid body tree model when using `inverseKinematics` or `generalizedInverseKinematics`.

The `show` method supports visualization of body meshes. Meshes are specified as `.stl` files and can be added to individual rigid bodies using `addVisual`. Also, by default, the `importrobot` function loads all the accessible `.stl` files specified in your URDF robot model.

Creation

Syntax

```
robot = rigidBodyTree  
robot = rigidBodyTree("MaxNumBodies",N,"DataFormat",dataFormat)
```

Description

`robot = rigidBodyTree` creates a tree-structured robot object. Add rigid bodies to it using `addBody`.

`robot = rigidBodyTree("MaxNumBodies",N,"DataFormat",dataFormat)` specifies an upper bound on the number of bodies allowed in the robot when generating code. You must also specify the `DataFormat` property as a name-value pair.

Properties

NumBodies — Number of bodies

integer

This property is read-only.

Number of bodies in the robot model (not including the base), returned as an integer.

Bodies — List of rigid bodies

cell array of handles

This property is read-only.

List of rigid bodies in the robot model, returned as a cell array of handles. Use this list to access specific `RigidBody` objects in the model. You can also call `getBody` to get a body by its name.

BodyNames — Names of rigid bodies

cell array of string scalars | cell array of character vectors

This property is read-only.

Names of rigid bodies, returned as a cell array of character vectors.

BaseName — Name of robot base

'base' (default) | string scalar | character vector

Name of robot base, returned as a string scalar or character vector.

Gravity — Gravitational acceleration experienced by robot

[0 0 0] m/s² (default) | [x y z] vector

Gravitational acceleration experienced by robot, specified as an [x y z] vector in meters per second squared. Each element corresponds to the acceleration of the base robot frame in that direction.

DataFormat — Input/output data format for kinematics and dynamics functions

"struct" (default) | "row" | "column"

Input/output data format for kinematics and dynamics functions, specified as "struct", "row", or "column". To use dynamics functions, you must use either "row" or "column".

Object Functions

addBody	Add body to robot
addSubtree	Add subtree to robot
centerOfMass	Center of mass position and Jacobian
copy	Copy robot model
externalForce	Compose external force matrix relative to base
forwardDynamics	Joint accelerations given joint torques and states
geometricJacobian	Geometric Jacobian for robot configuration
gravityTorque	Joint torques that compensate gravity
getBody	Get robot body handle by name
getTransform	Get transform between body frames
homeConfiguration	Get home configuration of robot
inverseDynamics	Required joint torques for given motion
massMatrix	Joint-space mass matrix
randomConfiguration	Generate random configuration of robot
removeBody	Remove body from robot
replaceBody	Replace body on robot
replaceJoint	Replace joint on body

show	Show robot model in a figure
showdetails	Show details of robot model
subtree	Create subtree from robot model
velocityProduct	Joint torques that cancel velocity-induced forces

Examples

Attach Rigid Body and Joint to Rigid Body Tree

Add a rigid body and corresponding joint to a rigid body tree. Each `rigidBody` object contains a `rigidBodyJoint` object and must be added to the `rigidBodyTree` using `addBody`.

Create a rigid body tree.

```
rbtree = rigidBodyTree;
```

Create a rigid body with a unique name.

```
body1 = rigidBody('b1');
```

Create a revolute joint. By default, the `rigidBody` object comes with a fixed joint. Replace the joint by assigning a new `rigidBodyJoint` object to the `body1.Joint` property.

```
jnt1 = rigidBodyJoint('jnt1','revolute');  
body1.Joint = jnt1;
```

Add the rigid body to the tree. Specify the body name that you are attaching the rigid body to. Because this is the first body, use the base name of the tree.

```
basename = rbtree.BaseName;  
addBody(rbtree,body1,basename)
```

Use `showdetails` on the tree to confirm the rigid body and joint were added properly.

```
showdetails(rbtree)
```

```
-----  
Robot: (1 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	b1	jnt1	revolute	base(0)	

Build Manipulator Robot Using Denavit-Hartenberg Parameters

Use the Denavit-Hartenberg (DH) parameters of the Puma560® robot to build a robot. Each rigid body is added one at a time, with the child-to-parent transform specified by the joint object.

The DH parameters define the geometry of the robot with relation to how each rigid body is attached to its parent. For convenience, setup the parameters for the Puma560 robot in a matrix. The Puma robot is a serial chain manipulator. The DH parameters are relative to the previous line in the matrix, corresponding to the previous joint attachment.

```
dhparams = [0      pi/2    0      0;
            0.4318  0      0      0;
            0.0203 -pi/2   0.15005  0;
            0      pi/2    0.4318  0;
            0      -pi/2   0      0;
            0      0      0      0];
```

Create a rigid body tree object to build the robot.

```
robot = rigidBodyTree;
```

Create the first rigid body and add it to the robot. To add a rigid body:

- 1 Create a `rigidBody` object and give it a unique name.
- 2 Create a `rigidBodyJoint` object and give it a unique name.
- 3 Use `setFixedTransform` to specify the body-to-body transformation using DH parameters. The last element of the DH parameters, `theta`, is ignored because the angle is dependent on the joint position.
- 4 Call `addBody` to attach the first body joint to the base frame of the robot.

```
body1 = rigidBody('body1');
jnt1 = rigidBodyJoint('jnt1','revolute');
setFixedTransform(jnt1,dhparams(1,:), 'dh');
```

```
body1.Joint = jnt1;

addBody(robot,body1,'base')
```

Create and add other rigid bodies to the robot. Specify the previous body name when calling `addBody` to attach it. Each fixed transform is relative to the previous joint coordinate frame.

```
body2 = rigidBody('body2');
jnt2 = rigidBodyJoint('jnt2','revolute');
body3 = rigidBody('body3');
jnt3 = rigidBodyJoint('jnt3','revolute');
body4 = rigidBody('body4');
jnt4 = rigidBodyJoint('jnt4','revolute');
body5 = rigidBody('body5');
jnt5 = rigidBodyJoint('jnt5','revolute');
body6 = rigidBody('body6');
jnt6 = rigidBodyJoint('jnt6','revolute');

setFixedTransform(jnt2,dhparams(2,:), 'dh');
setFixedTransform(jnt3,dhparams(3,:), 'dh');
setFixedTransform(jnt4,dhparams(4,:), 'dh');
setFixedTransform(jnt5,dhparams(5,:), 'dh');
setFixedTransform(jnt6,dhparams(6,:), 'dh');

body2.Joint = jnt2;
body3.Joint = jnt3;
body4.Joint = jnt4;
body5.Joint = jnt5;
body6.Joint = jnt6;

addBody(robot,body2,'body1')
addBody(robot,body3,'body2')
addBody(robot,body4,'body3')
addBody(robot,body5,'body4')
addBody(robot,body6,'body5')
```

Verify that your robot was built properly by using the `showdetails` or `show` function. `showdetails` lists all the bodies in the MATLAB® command window. `show` displays the robot with a given configuration (home by default). Calls to `axis` modify the axis limits and hide the axis labels.



```
showdetails(robot)
```

```
-----  
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	body1	jnt1	revolute	base(0)	body2(2)
2	body2	jnt2	revolute	body1(1)	body3(3)
3	body3	jnt3	revolute	body2(2)	body4(4)
4	body4	jnt4	revolute	body3(3)	body5(5)
5	body5	jnt5	revolute	body4(4)	body6(6)
6	body6	jnt6	revolute	body5(5)	

```
-----
```

```
show(robot);  
axis([-0.5,0.5,-0.5,0.5,-0.5,0.5])  
axis off
```

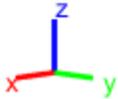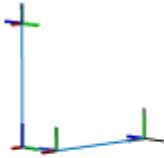

Modify a Robot Rigid Body Tree Model

Make changes to an existing `rigidBodyTree` object. You can get replace joints, bodies and subtrees in the rigid body tree.

Load example robots as `rigidBodyTree` objects.

```
load exampleRobots.mat
```

View the details of the Puma robot using `showdetails`.

```
showdetails(puma1)
```

```

-----
Robot: (6 bodies)

  Idx   Body Name   Joint Name   Joint Type   Parent Name(Idx)   Children Name(s)
-----
    1      L1       jnt1       revolute      base(0)           L2(2)
    2      L2       jnt2       revolute      L1(1)             L3(3)
    3      L3       jnt3       revolute      L2(2)             L4(4)
    4      L4       jnt4       revolute      L3(3)             L5(5)
    5      L5       jnt5       revolute      L4(4)             L6(6)
    6      L6       jnt6       revolute      L5(5)
-----

```

Get a specific body to inspect the properties. The only child of the L3 body is the L4 body. You can copy a specific body as well.

```

body3 = getBody(puma1, 'L3');
childBody = body3.Children{1}

childBody =
  rigidBody with properties:

      Name: 'L4'
      Joint: [1x1 rigidBodyJoint]
      Mass: 1
  CenterOfMass: [0 0 0]
      Inertia: [1 1 1 0 0 0]
      Parent: [1x1 rigidBody]
  Children: {[1x1 rigidBody]}
  Visuals: {}

```

```
body3Copy = copy(body3);
```

Replace the joint on the L3 body. You must create a new `Joint` object and use `replaceJoint` to ensure the downstream body geometry is unaffected. Call `setFixedTransform` if necessary to define a transform between the bodies instead of with the default identity matrices.

```

newJoint = rigidBodyJoint('prismatic');
replaceJoint(puma1, 'L3', newJoint);

showdetails(puma1)

```

```

-----
Robot: (6 bodies)

```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	prismatic	fixed	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

Remove an entire body and get the resulting subtree using `removeBody`. The removed body is included in the subtree.

```
subtree = removeBody(puma1, 'L4')
```

```
subtree =
  rigidBodyTree with properties:
```

```
  NumBodies: 3
  Bodies: {[1x1 rigidBody] [1x1 rigidBody] [1x1 rigidBody]}
  Base: [1x1 rigidBody]
  BodyNames: {'L4' 'L5' 'L6'}
  BaseName: 'L3'
  Gravity: [0 0 0]
  DataFormat: 'struct'
```

Remove the modified L3 body. Add the original copied L3 body to the L2 body, followed by the returned subtree. The robot model remains the same. See a detailed comparison through `showdetails`.

```
removeBody(puma1, 'L3');
addBody(puma1, body3Copy, 'L2')
addSubtree(puma1, 'L3', subtree)
```

```
showdetails(puma1)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)

3	L3	jnt3	revolute	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

Specify Dynamics Properties to Rigid Body Tree

To use dynamics functions to calculate joint torques and accelerations, specify the dynamics properties for the `rigidBodyTree` object and `rigidBody`.

Create a rigid body tree model. Create two rigid bodies to attach to it.

```
robot = rigidBodyTree('DataFormat','row');
body1 = rigidBody('body1');
body2 = rigidBody('body2');
```

Specify joints to attach to the bodies. Set the fixed transformation of `body2` to `body1`. This transform is 1m in the x-direction.

```
joint1 = rigidBodyJoint('joint1','revolute');
joint2 = rigidBodyJoint('joint2');
setFixedTransform(joint2,trvec2tform([1 0 0]))
body1.Joint = joint1;
body2.Joint = joint2;
```

Specify dynamics properties for the two bodies. Add the bodies to the robot model. For this example, basic values for a rod (`body1`) with an attached spherical mass (`body2`) are given.


```
body1.Mass = 2;
body1.CenterOfMass = [0.5 0 0];
body1.Inertia = [0.167 0.001 0.167 0 0 0];

body2.Mass = 1;
body2.CenterOfMass = [0 0 0];
body2.Inertia = 0.0001*[4 4 4 0 0 0];

addBody(robot,body1,'base');
addBody(robot,body2,'body1');
```

Compute the center of mass position of the whole robot. Plot the position on the robot.
Move the view to the xy plane.


```
comPos = centerOfMass(robot);  
  
show(robot);  
hold on  
plot(comPos(1), comPos(2), 'or')  
view(2)
```

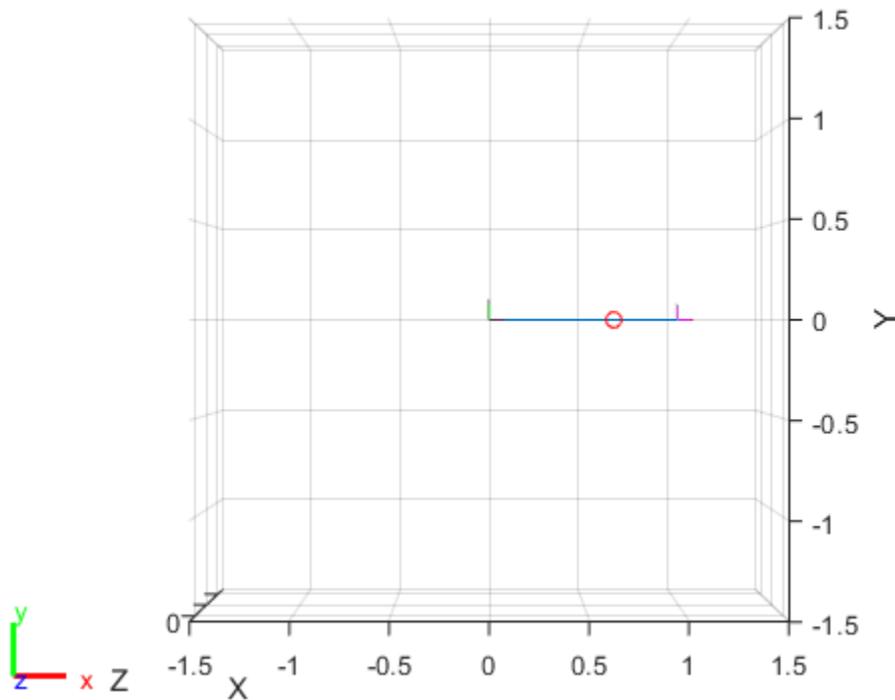

Change the mass of the second body. Notice the change in center of mass.

```
body2.Mass = 20;  
replaceBody(robot, 'body2', body2)
```

```
comPos2 = centerOfMass(robot);  
plot(comPos2(1),comPos2(2),'*g')  
hold off
```

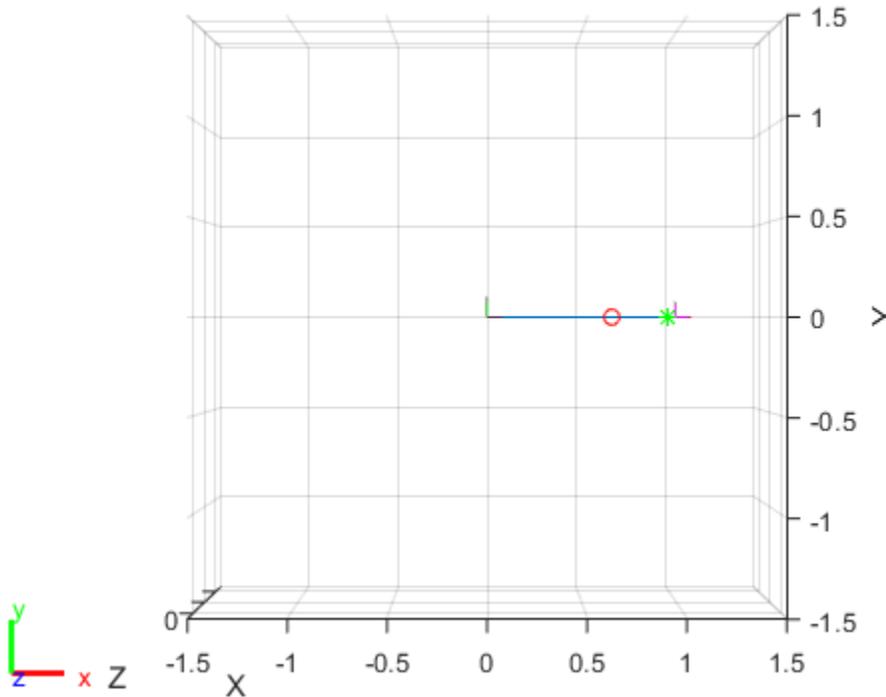

Compute Forward Dynamics Due to External Forces on Rigid Body Tree Model

Calculate the resultant joint accelerations for a given robot configuration with applied external forces and forces due to gravity. A wrench is applied to a specific body with the gravity being specified for the whole robot.

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Set the gravity. By default, gravity is assumed to be zero.

```
lbr.Gravity = [0 0 -9.81];
```

Get the home configuration for the `lbr` robot.

```
q = homeConfiguration(lbr);
```

Specify the wrench vector that represents the external forces experienced by the robot. Use the `externalForce` function to generate the external force matrix. Specify the robot model, the end effector that experiences the wrench, the wrench vector, and the current robot configuration. `wrench` is given relative to the 'tool0' body frame, which requires you to specify the robot configuration, `q`.

```
wrench = [0 0 0.5 0 0 0.3];  
fext = externalForce(lbr, 'tool0', wrench, q);
```

Compute the resultant joint accelerations due to gravity, with the external force applied to the end-effector 'tool0' when `lbr` is at its home configuration. The joint velocities and joint torques are assumed to be zero (input as an empty vector []).

```
qddot = forwardDynamics(lbr, q, [], [], fext);
```

Compute Inverse Dynamics from Static Joint Configuration

Use the `inverseDynamics` function to calculate the required joint torques to statically hold a specific robot configuration. You can also specify the joint velocities, joint accelerations, and external forces using other syntaxes.

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Set the Gravity property to give a specific gravitational acceleration.

```
lbr.Gravity = [0 0 -9.81];
```

Generate a random configuration for lbr.

```
q = randomConfiguration(lbr);
```

Compute the required joint torques for lbr to statically hold that configuration.

```
tau = inverseDynamics(lbr,q);
```

Compute Joint Torque to Counter External Forces

Use the `externalForce` function to generate force matrices to apply to a rigid body tree model. The force matrix is an m -by-6 vector that has a row for each joint on the robot to apply a six-element wrench. Use the `externalForce` function and specify the end effector to properly assign the wrench to the correct row of the matrix. You can add multiple force matrices together to apply multiple forces to one robot.

To calculate the joint torques that counter these external forces, use the `inverseDynamics` function.

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Set the Gravity property to give a specific gravitational acceleration.

```
lbr.Gravity = [0 0 -9.81];
```

Get the home configuration for `lbr`.

```
q = homeConfiguration(lbr);
```

Set external force on `link1`. The input wrench vector is expressed in the base frame.

```
fext1 = externalForce(lbr, 'link_1', [0 0 0.0 0.1 0 0]);
```

Set external force on the end effector, `tool0`. The input wrench vector is expressed in the `tool0` frame.

```
fext2 = externalForce(lbr, 'tool0', [0 0 0.0 0.1 0 0], q);
```

Compute the joint torques required to balance the external forces. To combine the forces, add the force matrices together. Joint velocities and accelerations are assumed to be zero (input as []).

```
tau = inverseDynamics(lbr, q, [], [], fext1+fext2);
```

Display Robot Model with Visual Geometries


You can import robots that have `.stl` files associated with the Unified Robot Description format (URDF) file to describe the visual geometries of the robot. Each rigid body has an individual visual geometry specified. The `importrobot` function parses the URDF file to get the robot model and visual geometries. Use the `show` function to visualize the robot model in a figure. You can then interact with the model by clicking components to inspect them and right-clicking to toggle visibility.

Import a robot model as a URDF file. The `.stl` file locations must be properly specified in this URDF. To add other `.stl` files to individual rigid bodies, see `addVisual`.

```
robot = importrobot('iiwa14.urdf');
```

Visualize the robot with the associated visual model. Click bodies or frames to inspect them. Right-click bodies to toggle visibility for each visual geometry.

```
show(robot);
```

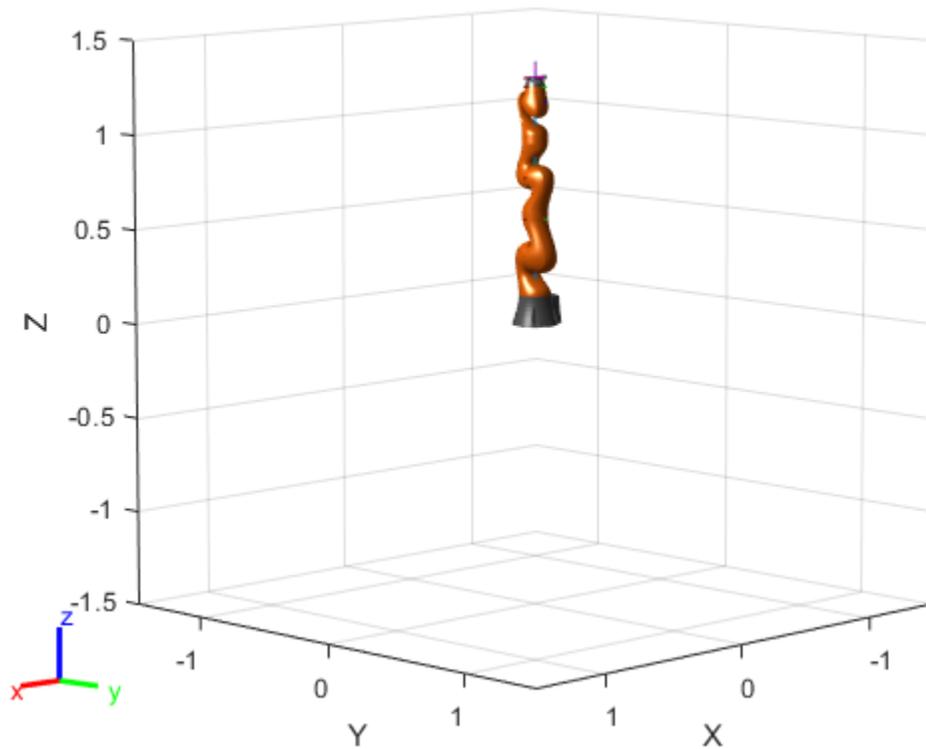

Compatibility Considerations

rigidBodyTree was renamed

Behavior change in future release

The `rigidBodyTree` object was renamed from `robotics.RigidBodyTree`. Use `rigidBodyTree` for all object creation.

References

- [1] Craig, John J. *Introduction to Robotics: Mechanics and Control*. Reading, MA: Addison-Wesley, 1989.
- [2] Siciliano, Bruno, Lorenzo Sciavicco, Luigi Villani, and Giuseppe Oriolo. *Robotics: Modelling, Planning and Control*. London: Springer, 2009.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

Use the syntax that specifies the `MaxNumBodies` as an upper bound for adding bodies to the robot model. You must also specify the `DataFormat` property as a name-value pair. For example:

```
robot = rigidBodyTree("MaxNumBodies",15,"DataFormat","row")
```

To minimize data usage, limit the upper bound to a number close to the expected number of bodies in the model. All data formats are supported for code generation. To use the dynamics functions, the data format must be set to "row" or "column".

Also, the `show` and `showdetails` functions do not support code generation.

See Also

`generalizedInverseKinematics` | `importrobot` | `inverseKinematics` | `rigidBody` | `rigidBodyJoint`

Topics

"Build a Robot Step by Step"

"Rigid Body Tree Robot Model"

"Solve Inverse Kinematics for a Four-Bar Linkage"

"Control PR2 Arm Movements Using ROS Actions and Inverse Kinematics"

“Plan a Reaching Trajectory With Multiple Kinematic Constraints”
“Control LBR Manipulator Motion Through Joint Torque Commands”

Introduced in R2016b

rigidBodyTreeImportInfo

Object for storing rigidBodyTree import information

Description

The `rigidBodyTreeImportInfo` object is created by the `importrobot` function when converting a Simulink® model using Simscape™ Multibody™ components. Get import information for specific bodies, joints, or blocks using the object functions. Changes to the Simulink model are not reflected in this object after initially calling `importrobot`.

Creation

`[robot,importInfo] = importrobot(model)` imports a Simscape Multibody model and returns an equivalent `rigidBodyTree` object, `robot`, and info about the import in `importInfo`. Only fixed, prismatic, and revolute joints are supported in the output `rigidBodyTree` object.

If you are importing a model that uses other joint types, constraint blocks, or variable inertias, use the “Simscape Multibody Model Import” on page 2-0 name-value pairs to disable errors.

Properties

SourceModelName — Name of source model from Simscape Multibody

character vector

This property is read-only.

Name of the source model from Simscape Multibody, specified as a character vector. This property matches the name of the input `model` when calling `importrobot`.

Example: `'sm_import_humanoid_urdf'`

Data Types: `char`

RigidBodyTree — Robot model

rigidBodyTree object

This property is read-only.

Robot model, returned as a rigidBodyTree object.

BlockConversionInfo — List of blocks that were converted

structure

This property is read-only.

List of blocks that were converted from Simscape Multibody blocks to preserve compatibility, specified as a structure with the nested fields:

- **AddedBlocks**
 - **ImplicitJoints** — Cell array of implicit joints added during the conversion process.
- **ConvertedBlocks**
 - **Joints** — Cell array of joint blocks that were converted to fixed joints.
 - **JointSourceType** — `containers.Map` object that associates converted joint blocks to their original joint type.
- **RemovedBlocks**
 - **ChainClosureJoints** — Cell array of joint blocks removed to open closed chains.
 - **SMConstraints** — Cell array of constraint blocks that were removed.
 - **VariableInertias** — Cell array of variable inertia blocks that were removed.

Object Functions

<code>bodyInfo</code>	Import information for body
<code>bodyInfoFromBlock</code>	Import information for block name
<code>bodyInfoFromJoint</code>	Import information for given joint name
<code>showdetails</code>	Display details of imported robot

Compatibility Considerations

rigidBodyTreeImportInfo was renamed

Behavior change in future release

The `rigidBodyTreeImportInfo` object was renamed from `robotics.RigidBodyTreeImportInfo`. Use `rigidBodyTreeImportInfo` for all object creation.

See Also

`importrobot` | `rigidBodyTree`

Topics

“Rigid Body Tree Robot Model”

Introduced in R2018b

stateEstimatorPF

Create particle filter state estimator

Description

The `stateEstimatorPF` object is a recursive, Bayesian state estimator that uses discrete particles to approximate the posterior distribution of the estimated state.

The particle filter algorithm computes the state estimate recursively and involves two steps: prediction and correction. The prediction step uses the previous state to predict the current state based on a given system model. The correction step uses the current sensor measurement to correct the state estimate. The algorithm periodically redistributes, or resamples, the particles in the state space to match the posterior distribution of the estimated state.

The estimated state consists of state variables. Each particle represents a discrete state hypothesis of these state variables. The set of all particles is used to help determine the final state estimate.

You can apply the particle filter to arbitrary nonlinear system models. Process and measurement noise can follow arbitrary non-Gaussian distributions.

For more information on the particle filter workflow and setting specific parameters, see:

- “Particle Filter Workflow”
- “Particle Filter Parameters”

Creation

Syntax

```
pf = stateEstimatorPF
```

Description

`pf = stateEstimatorPF` creates an object that enables the state estimation for a simple system with three state variables. Use the `initialize` method to initialize the particles with a known mean and covariance or uniformly distributed particles within defined bounds. To customize the particle filter's system and measurement models, modify the `StateTransitionFcn` and `MeasurementLikelihoodFcn` properties.

After you create the object, use `initialize` to initialize the `NumStateVariables` and `NumParticles` properties. The `initialize` function sets these two properties based on your inputs.

Properties

NumStateVariables — Number of state variables

3 (default) | scalar

This property is read-only.

Number of state variables, specified as a scalar. This property is set based on the inputs to the `initialize` method. The number of states is implicit based on the specified matrices for initial state and covariance.

NumParticles — Number of particles used in the filter

1000 (default) | scalar

This property is read-only.

Number of particles using in the filter, specified as a scalar. You can specify this property only by calling the `initialize` method.

StateTransitionFcn — Callback function for determining the state transition between particle filter steps

function handle

Callback function for determining the state transition between particle filter steps, specified as a function handle. The state transition function evolves the system state for each particle. The function signature is:

```
function predictParticles = stateTransitionFcn(pf,prevParticles,varargin)
```

The callback function accepts at least two input arguments: the `stateEstimatorPF` object, `pf`, and the particles at the previous time step, `prevParticles`. These specified particles are the `predictParticles` returned from the previous call of the object. `predictParticles` and `prevParticles` are the same size: `NumParticles-by-NumStateVariables`.

You can also use `varargin` to pass in a variable number of arguments from the `predict` function. When you call:

```
predict(pf, arg1, arg2)
```

MATLAB essentially calls `stateTransitionFcn` as:

```
stateTransitionFcn(pf, prevParticles, arg1, arg2)
```

MeasurementLikelihoodFcn — Callback function calculating the likelihood of sensor measurements

function handle

Callback function calculating the likelihood of sensor measurements, specified as a function handle. Once a sensor measurement is available, this callback function calculates the likelihood that the measurement is consistent with the state hypothesis of each particle. You must implement this function based on your measurement model. The function signature is:

```
function likelihood = measurementLikelihoodFcn(PF, predictParticles, measurement, varargin)
```

The callback function accepts at least three input arguments:

- 1** `pf` - The associated `stateEstimatorPF` object
- 2** `predictParticles` - The particles that represent the predicted system state at the current time step as an array of size `NumParticles-by-NumStateVariables`
- 3** `measurement` - The state measurement at the current time step

You can also use `varargin` to pass in a variable number of arguments. These arguments are passed by the `correct` function. When you call:

```
correct(pf, measurement, arg1, arg2)
```

MATLAB essentially calls `measurementLikelihoodFcn` as:

```
measurementLikelihoodFcn(pf, predictParticles, measurement, arg1, arg2)
```

The callback needs to return exactly one output, `likelihood`, which is the likelihood of the given measurement for each particle state hypothesis.

IsStateVariableCircular — Indicator if state variables have a circular distribution

`[0 0 0]` (default) | logical array

Indicator if state variables have a circular distribution, specified as a logical array. Circular (or angular) distributions use a probability density function with a range of $[-\pi, \pi]$. If the object has multiple state variables, then `IsStateVariableCircular` is a row vector. Each vector element indicates if the associated state variable is circular. If the object has only one state variable, then `IsStateVariableCircular` is a scalar.

ResamplingPolicy — Policy settings that determine when to trigger resampling object

Policy settings that determine when to trigger resampling, specified as an object. You can trigger resampling either at fixed intervals, or you can trigger it dynamically, based on the number of effective particles. See `resamplingPolicyPF` for more information.

ResamplingMethod — Method used for particle resampling

`'multinomial'` (default) | `'residual'` | `'stratified'` | `'systematic'`

Method used for particle resampling, specified as `'multinomial'`, `'residual'`, `'stratified'`, and `'systematic'`.

StateEstimationMethod — Method used for state estimation

`'mean'` (default) | `'maxweight'`

Method used for state estimation, specified as `'mean'` and `'maxweight'`.

Particles — Array of particle values

`NumParticles-by-NumStateVariables` matrix

Array of particle values, specified as a `NumParticles-by-NumStateVariables` matrix. Each row corresponds to the state hypothesis of a single particle.

Weights — Particle weights

`NumParticles-by-1` vector

Particle weights, specified as a `NumParticles-by-1` vector. Each weight is associated with the particle in the same row in the `Particles` property.

State — Best state estimate

vector

This property is read-only.

Best state estimate, returned as a vector with length `NumStateVariables`. The estimate is extracted based on the `StateEstimationMethod` property.

State Covariance — Corrected system covariance*N*-by-*N* matrix | []

This property is read-only.

Corrected system variance, returned as an *N*-by-*N* matrix, where *N* is equal to the `NumStateVariables` property. The corrected state is calculated based on the `StateEstimationMethod` property and the `MeasurementLikelihoodFcn`. If you specify a state estimate method that does not support covariance, then the property is set to [].

Object Functions

<code>initialize</code>	Initialize the state of the particle filter
<code>getStateEstimate</code>	Extract best state estimate and covariance from particles
<code>predict</code>	Predict state of robot in next time step
<code>correct</code>	Adjust state estimate based on sensor measurement

Examples

Particle Filter Prediction and Correction

Create a `stateEstimatorPF` object, and execute a prediction and correction step for state estimation. The particle filter gives a predicted state estimate based on the return value of `StateTransitionFcn`. It then corrects the state based on a given measurement and the return value of `MeasurementLikelihoodFcn`.

Create a particle filter with the default three states.

```
pf = stateEstimatorPF
```

```
pf =
  stateEstimatorPF with properties:

    NumStateVariables: 3
    NumParticles: 1000
    StateTransitionFcn: @nav.algs.gaussianMotion
    MeasurementLikelihoodFcn: @nav.algs.fullStateMeasurement
    IsStateVariableCircular: [0 0 0]
    ResamplingPolicy: [1x1 resamplingPolicyPF]
    ResamplingMethod: 'multinomial'
    StateEstimationMethod: 'mean'
    StateOrientation: 'row'
    Particles: [1000x3 double]
    Weights: [1000x1 double]
    State: 'Use the getStateEstimate function to see the value.'
    StateCovariance: 'Use the getStateEstimate function to see the value.'
```

Specify the mean state estimation method and systematic resampling method.

```
pf.StateEstimationMethod = 'mean';
pf.ResamplingMethod = 'systematic';
```

Initialize the particle filter at state [4 1 9] with unit covariance (`eye(3)`). Use 5000 particles.

```
initialize(pf,5000,[4 1 9],eye(3));
```

Assuming a measurement [4.2 0.9 9], run one predict and one correct step.

```
[statePredicted,stateCov] = predict(pf);
[stateCorrected,stateCov] = correct(pf,[4.2 0.9 9]);
```

Get the best state estimate based on the `StateEstimationMethod` algorithm.

```
stateEst = getStateEstimate(pf)
```

```
stateEst = 1x3
```

```
    4.1562    0.9185    9.0202
```

Estimate Robot Position in a Loop Using Particle Filter

Use the `stateEstimatorPF` object to track a robot as it moves in a 2-D space. The measured position has random noise added. Using `predict` and `correct`, track the robot based on the measurement and on an assumed motion model.

Initialize the particle filter and specify the default state transition function, the measurement likelihood function, and the resampling policy.

```
pf = stateEstimatorPF;
pf.StateEstimationMethod = 'mean';
pf.ResamplingMethod = 'systematic';
```

Sample 1000 particles with an initial position of [0 0] and unit covariance.

```
initialize(pf,1000,[0 0],eye(2));
```

Prior to estimation, define a sine wave path for the dot to follow. Create an array to store the predicted and estimated position. Define the amplitude of noise.


```
t = 0:0.1:4*pi;
dot = [t; sin(t)]';
robotPred = zeros(length(t),2);
robotCorrected = zeros(length(t),2);
noise = 0.1;
```

Begin the loop for predicting and correcting the estimated position based on measurements. The resampling of particles occurs based on the `ResamplingPolicy` property. The robot moves based on a sine wave function with random noise added to the measurement.

```
for i = 1:length(t)
    % Predict next position. Resample particles if necessary.
    [robotPred(i,:),robotCov] = predict(pf);
    % Generate dot measurement with random noise. This is
    % equivalent to the observation step.
    measurement(i,:) = dot(i,:) + noise*(rand([1 2])-noise/2);
    % Correct position based on the given measurement to get best estimation.
    % Actual dot position is not used. Store corrected position in data array.
    [robotCorrected(i,:),robotCov] = correct(pf,measurement(i,:));
end
```

Plot the actual path versus the estimated position. Actual results may vary due to the randomness of particle distributions.

```
plot(dot(:,1),dot(:,2),robotCorrected(:,1),robotCorrected(:,2),'or')
xlim([0 t(end)])
ylim([-1 1])
legend('Actual position','Estimated position')
grid on
```

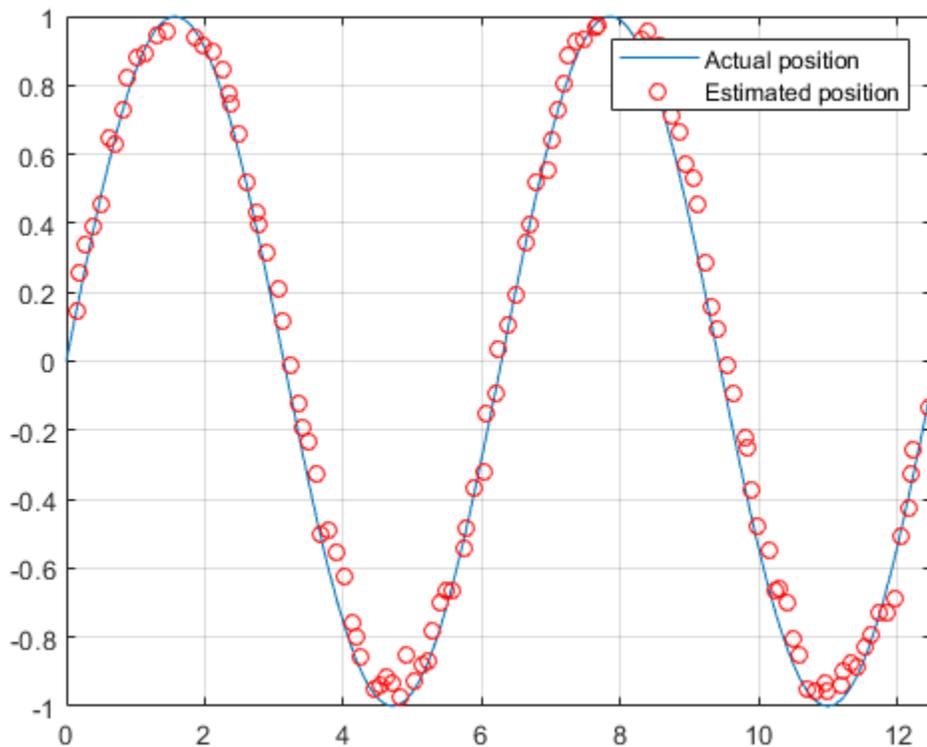

The figure shows how close the estimate state matches the actual position of the robot. Try tuning the number of particles or specifying a different initial position and covariance to see how it affects tracking over time.

Compatibility Considerations

stateEstimatorPF was renamed

Behavior change in future release

The stateEstimatorPF object was renamed from robotics.ParticleFilter. Use stateEstimatorPF for all object creation.

References

- [1] Arulampalam, M.S., S. Maskell, N. Gordon, and T. Clapp. "A Tutorial on Particle Filters for Online Nonlinear/Non-Gaussian Bayesian Tracking." *IEEE Transactions on Signal Processing*. Vol. 50, No. 2, Feb 2002, pp. 174-188.
- [2] Chen, Z. "Bayesian Filtering: From Kalman Filters to Particle Filters, and Beyond." *Statistics*. Vol. 182, No. 1, 2003, pp. 1-69.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`correct` | `getStateEstimate` | `initialize` | `predict` | `resamplingPolicyPF`

Topics

"Track a Car-Like Robot Using Particle Filter"

"Particle Filter Parameters"

"Particle Filter Workflow"

Introduced in R2016a

taskSpaceMotionModel

Model rigid body tree motion given task-space reference inputs

Description

The `taskSpaceMotionModel` object models the closed-loop task-space motion of a manipulator, specified as a rigid body tree object. The motion model behavior is defined by the `MotionType` property.

Creation

Syntax

```
motionModel = taskSpaceMotionModel
```

```
motionModel = taskSpaceMotionModel("RigidBodyTree", tree)
```

```
motionModel = taskSpaceMotionControlModel(Name, Value)
```

Description

`motionModel = taskSpaceMotionModel` creates a motion model for a default two-joint manipulator.

`motionModel = taskSpaceMotionModel("RigidBodyTree", tree)` creates a motion model for the specified `rigidBodyTree` object.

`motionModel = taskSpaceMotionControlModel(Name, Value)` sets additional properties specified as name-value pairs. You can specify multiple properties in any order.

Properties

RigidBodyTree — Rigid body tree robot model

`rigidBodyTree` object

Rigid body tree robot model, specified as a `rigidBodyTree` object that defines the inertial and kinematic properties of the manipulator.

EndEffectorName — End effector body

'tool' (default) | string scalar | character vector

This property defines the body that will be used as the end effector, and for which the task space motion is defined. The property must correspond to a body name in the `rigidBodyTree` object of the `RigidBodyTree` property. If the rigid body tree is updated without also updating the end effector, the body with the highest index becomes the end-effector body by default.

Kp — Proportional gain for PD Control

$500 \times \text{eye}(6)$ (default) | 6-by-6 matrix

Proportional gain for PD control, specified as a 6-by-6 matrix.

Kd — Derivative gain for PD control

$100 \times \text{eye}(6)$ (default) | 6-by-6 matrix

Derivative gain for proportional-derivative (PD) control, specified as a 6-by-6 matrix.

JointDamping — Damping ratios

[1 1] (default) | n -element vector | scalar

Damping ratios on each joint, specified as a scalar or n -element vector, where n is the number of nonfixed joints in the `rigidBodyTree` object in the `RigidBodyTree` property. If a scalar is specified, then `DampingRatio` becomes an n -element vector of value s , where s is the specified scalar

MotionType — Type of motion computed by the motion model

"PDControl" (default)

Type of motion, specified as "PDControl", which uses proportional-derivative (PD) control mapped to the joints via a Jacobian-Transpose controller. The control is based on the specified `Kp` and `Kd` properties.

Object Functions

derivative	Time derivative of manipulator model states
updateErrorDynamicsFromStep	Update values of NaturalFrequency and DampingRatio properties given desired step response

Examples

Create Task-Space Motion Model

This example shows how to create and use a `taskSpaceMotionModel` object for a manipulator robot arm in task-space.

Create the Robot

```
robot = loadrobot("kinovaGen3", "DataFormat", "column", "Gravity", [0 0 -9.81]);
```

Set Up the Simulation

Set the time span to be 1 second with a timestep size of 0.02 seconds. Set the initial state to the home configuration of the robot, with a velocity of zero.

```
tspan = 0:0.02:1;  
initialState = [homeConfiguration(robot); zeros(7,1)];
```

Define a reference state with a target position and zero velocity.

```
refPose = trvec2tform([0.6 -.1 0.5]);  
refVel = zeros(6,1);
```

Create the Motion Model

Model the behavior as a system under proportional-derivative (PD) control.

```
motionModel = taskSpaceMotionModel("RigidBodyTree", robot, "EndEffectorName", "EndEffector");
```

Simulate the Robot

Simulate the behavior over 1 second using a stiff solver to more efficiently capture the robot dynamics. Using `ode15s` enables higher precision around the areas with a high rate of change.

```
[t,robotState] = ode15s(@(t,state)derivative(motionModel,state,refPose,refVel),tspan,i
```


Plot the Response

Plot the robot's initial position and mark the target with an X.

```
figure
show(robot,initialState(1:7));
hold all
plot3(refPose(1,4),refPose(2,4),refPose(3,4),"x","MarkerSize",20)
```

Observe the response by plotting the robot in a 5 Hz loop.

```
r = rateControl(5);
for i = 1:size(robotState,1)
    show(robot,robotState(i,1:7)',"PreservePlot",false);
    waitfor(r);
end
```

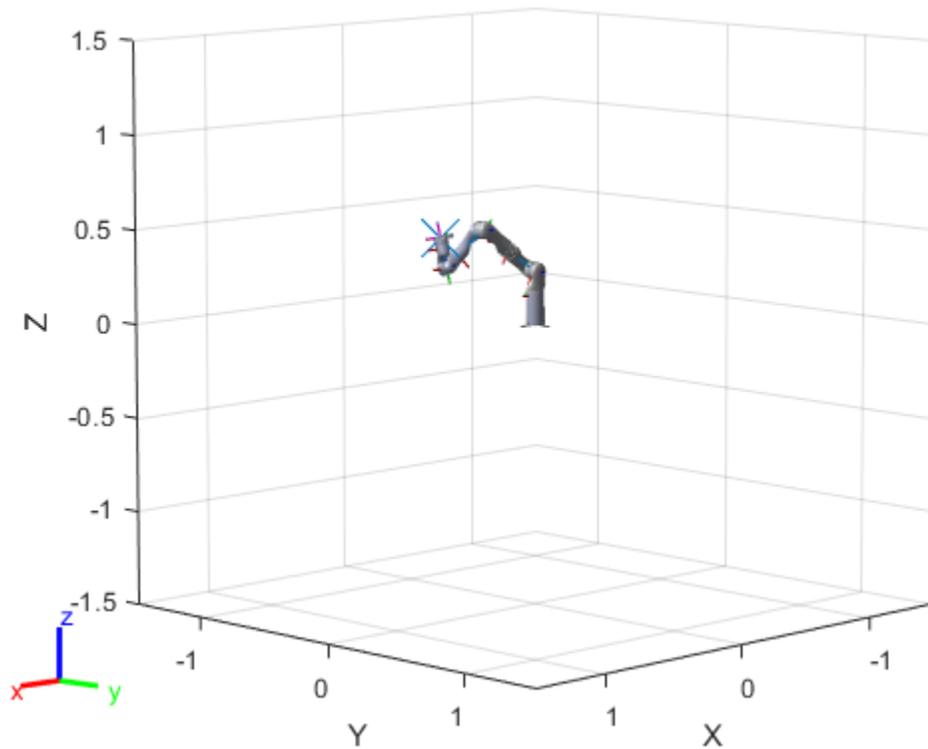

References

- [1] Craig, John J. *Introduction to Robotics: Mechanics and Control*. Upper Saddle River, NJ: Pearson Education, 2005.
- [2] Spong, Mark W., Seth Hutchinson, and Mathukumalli Vidyasagar. *Robot Modeling and Control*. Hoboken, NJ: Wiley, 2006.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

`jointSpaceMotionModel`

Blocks

Task Space Motion Model

Functions

`derivative`

Topics

“Plan and Execute Task- and Joint-space Trajectories using KINOVA Gen3 Manipulator”

Introduced in R2019b

uavDubinsConnection

Dubins path connection for UAV

Description

The `uavDubinsConnection` object holds information for computing a `uavDubinsPathSegment` path segment to connect start and goal poses of a UAV.

A UAV Dubins path segment connects two poses as a sequence of motions in the north-east-down coordinate system.

The motion options are:

- Straight
- Left turn (counterclockwise)
- Right turn (clockwise)
- Helix left turn (counterclockwise)
- Helix right turn (clockwise)
- No motion

The turn direction is defined as viewed from the top of the UAV. Helical motions are used to ascend or descend.

Use this connection object to define parameters for a UAV motion model, including the minimum turning radius and options for path types. To generate a path segment between poses using this connection type, call the `connect` function.

Creation

Syntax

```
connectionObj = uavDubinsConnection  
connectionObj = uavDubinsConnection(Name,Value)
```

Description

`connectionObj = uavDubinsConnection` creates an object using default property values.

`connectionObj = uavDubinsConnection(Name, Value)` specifies property values using name-value pairs. To set multiple properties, specify multiple name-value pairs.

Properties

AirSpeed — Airspeed of UAV

10 (default) | positive numeric scalar

Airspeed of the UAV, specified as a positive numeric scalar in m/s.

Data Types: double

MaxRollAngle — Maximum roll angle

0.5 (default) | positive numeric scalar

Maximum roll angle to make the UAV turn left or right, specified as a positive numeric scalar in radians.

Note The minimum and maximum values for `MaxRollAngle` are greater than 0 and less than $\pi/2$, respectively.

Data Types: double

FlightPathAngleLimit — Minimum and maximum flight path angles

[-0.5 0.5] (default) | two-element numeric vector

Flight path angle limits, specified as a two-element numeric vector [*min max*] in radians.

min is the minimum flight path angle the UAV takes to lose altitude, and *max* is the maximum flight path angle to gain altitude.

Note The minimum and maximum values for `FlightPathAngleLimit` are greater than $-\pi/2$ and less than $\pi/2$, respectively.

Data Types: double

DisabledPathTypes — Path types to disable

{ } (default) | cell array of four-element character vectors | vector of four-element string scalars

UAV Dubins path types to disable, specified as a cell array of four-element character vectors or vector of string scalars. The cell array defines the four prohibited sequences of motions.

Motion Type	Description
"S"	Straight
"L"	Left turn (counterclockwise)
"R"	Right turn (clockwise)
"Hl"	Helix left turn (counterclockwise)
"Hr"	Helix right turn (clockwise)
"N"	No motion

Note The no motion segment "N" is used as a filler at the end when only three path segments are needed.

To see all available path types, see the AllPathTypes property.

Example: {'RLRN'}

Data Types: string | cell

MinTurningRadius — Minimum turning radius

positive numeric scalar

This property is read-only.

Minimum turning radius of the UAV, specified as a positive numeric scalar in meters. This value corresponds to the radius of the circle at the maximum roll angle and a constant airspeed of the UAV.

Data Types: double

AllPathTypes — All possible path types

cell array of character vectors

This property is read-only.

All possible path types, returned as a cell array of character vectors. This property lists all types. To disable certain types, specify types from this list in the DisabledPathTypes property.

For UAV Dubins connections, the available path types are: {'LSLN'} {'LSRN'} {'RSLN'} {'RSRN'} {'RLRN'} {'LRLN'} {'HLLSL'} {'HLLSR'} {'HrRSL'} {'HrRSR'} {'HrRLR'} {'HLLRL'} {'LSLHL'} {'LSRHR'} {'RSLHL'} {'RSRHR'} {'RLRHR'} {'LRLHL'} {'LRSL'} {'LRSR'} {'LRLR'} {'RLSR'} {'RLRL'} {'RLSL'} {'LSRL'} {'RSRL'} {'LSLR'} {'RSLR'}.

Data Types: cell

Object Functions

connect Connect poses with UAV Dubins connection path

Examples

Connect Poses Using UAV Dubins Connection Path

This example shows how to calculate a UAV Dubins path segment and connect poses using the uavDubinsConnection object.

Create a uavDubinsConnection object.

```
connectionObj = uavDubinsConnection;
```

Define start and goal poses as [x, y, z, headingAngle] vectors.


```
startPose = [0 0 0 0]; % [meters, meters, meters, radians]
goalPose = [0 0 20 pi];
```

Calculate a valid path segment and connect the poses. Returns a path segment object with the lowest path cost.

```
[pathSegObj,pathCosts] = connect(connectionObj,startPose,goalPose);
```

Show the generated path.

```
show(pathSegObj{1})
```

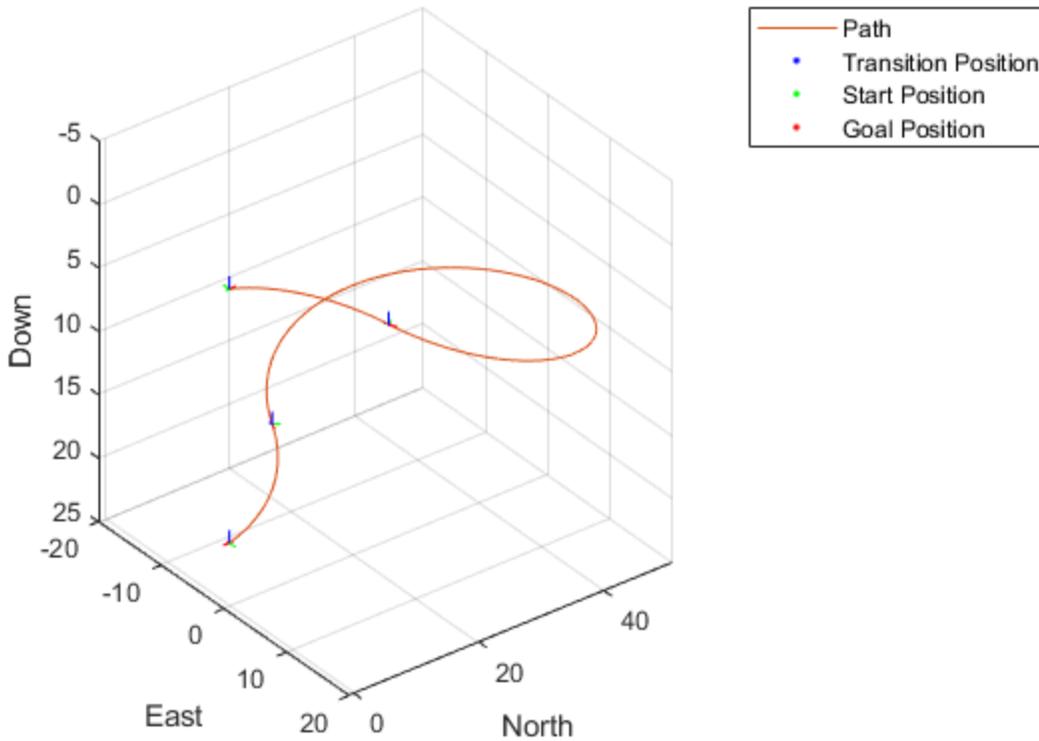

Display the motion type and the path cost of the generated path.

```
fprintf('Motion Type: %s\nPath Cost: %f\n', strjoin(pathSegObj{1}.MotionTypes), pathCost)
```

```
Motion Type: R L R N  
Path Cost: 138.373157
```

Modify Connection Types for UAV Dubins Connection Path

This example shows how to modify an existing UAV Dubins path segment.

Create a `uavDubinsConnection` object.

```
connectionObj = uavDubinsConnection;
```

Define start and goal poses as `[x, y, z, headingAngle]` vectors.


```
startPose = [0 0 0 0]; % [meters, meters, meters, radians]  
goalPose = [0 0 20 pi];
```

Calculate a valid path segment and connect the poses. Returns a path segment object with the lowest path cost.

```
[pathSegObj, pathCosts] = connect(connectionObj, startPose, goalPose);
```

Show the generated path.

```
show(pathSegObj{1})
```

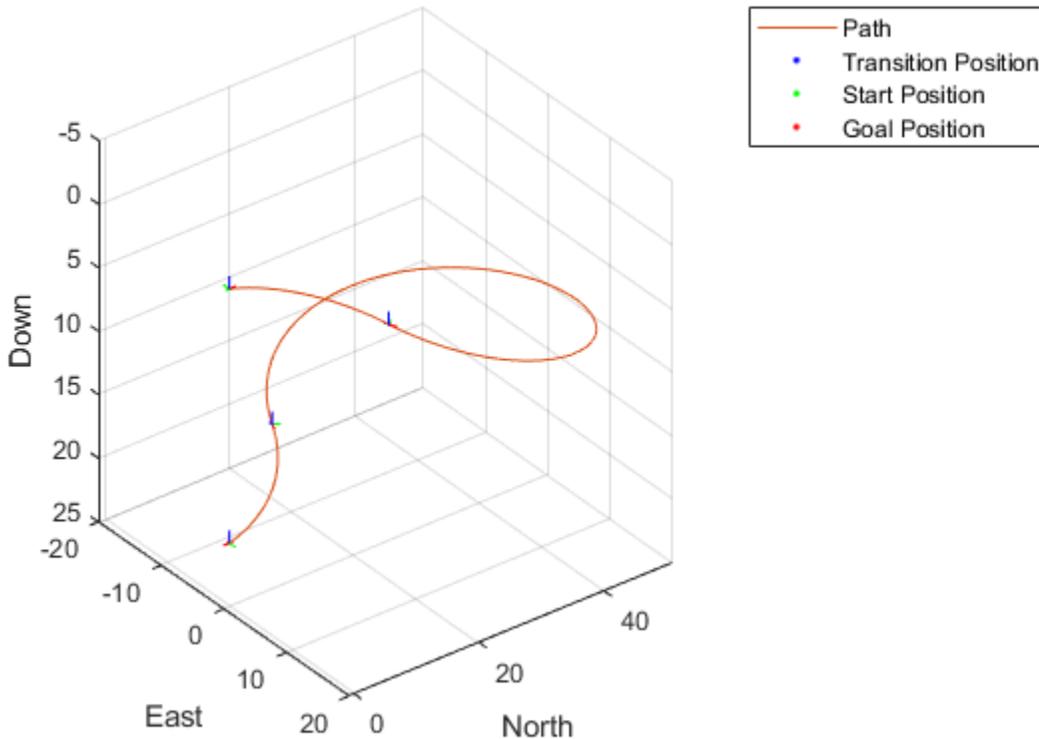

Verify the motion type and the path cost of the returned path segment.

```
fprintf('Motion Type: %s\nPath Cost: %f\n', strjoin(pathSegObj{1}.MotionTypes), pathCost);
```

```
Motion Type: R L R N
Path Cost: 138.373157
```

Disable this specific motion sequence in a new connection object. Specify the `AirSpeed`, `MaxRollAngle`, and `FlightPathAngleLimit` properties of the connection object.


```
connectionObj = uavDubinsConnection('DisabledPathTypes', {'RLRN'});
connectionObj.AirSpeed = 15;
connectionObj.MaxRollAngle = 0.8;
connectionObj.FlightPathAngleLimit = [-1.47 1.47];
```

Connect the poses again to get a different path. Returns a path segment object with the next lowest path cost.

```
[pathSegObj, pathCosts] = connect(connectionObj, startPose, goalPose);
```

Show the modified path.

```
show(pathSegObj{1})
```

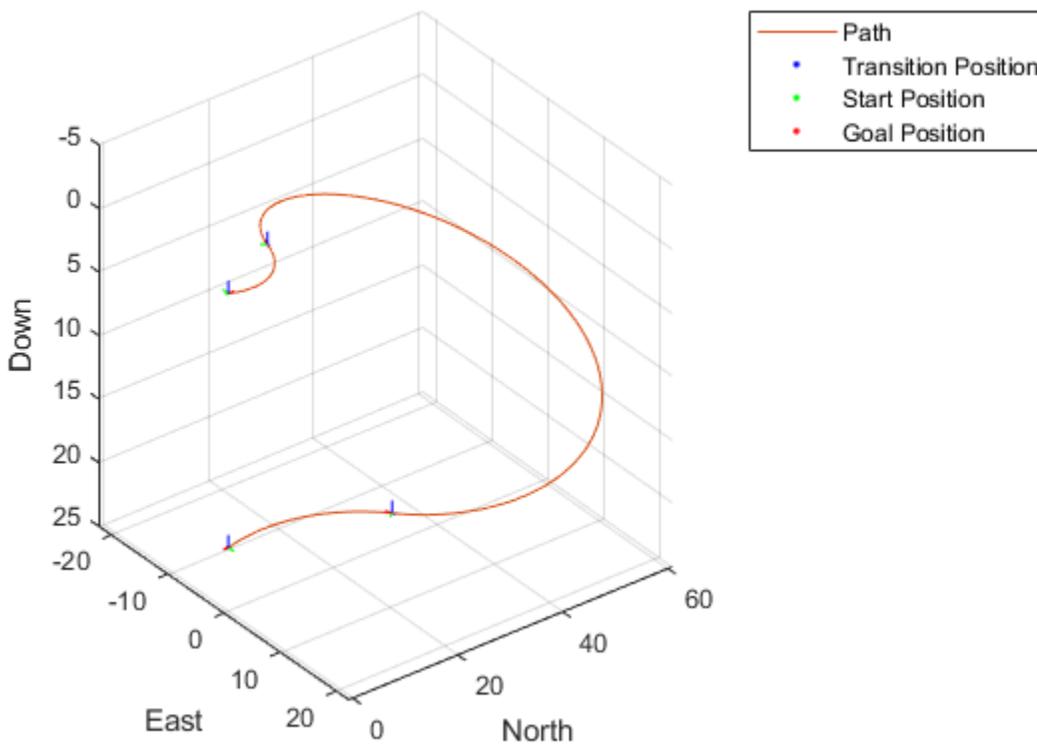

Verify the motion type and the path cost of the modified path segment.

```
fprintf('Motion Type: %s\nPath Cost: %f\n', strjoin(pathSegObj{1}.MotionTypes), pathCosts)
```

Motion Type: L R L N
Path Cost: 164.674067

References

- [1] Owen, Mark, Randal W. Beard, and Timothy W. McLain. "Implementing Dubins Airplane Paths on Fixed-Wing UAVs." *Handbook of Unmanned Aerial Vehicles*, 2015, pp. 1677-1701.

See Also

dubinsConnection | dubinsPathSegment | uavDubinsPathSegment

Introduced in R2019b

uavDubinsPathSegment

Dubins path segment connecting two poses of UAV

Description

The `uavDubinsPathSegment` object holds information for a Dubins path segment that connects start and goal poses of a UAV as a sequence of motions in the north-east-down coordinate system.

The motion options are:

- Straight
- Left turn (counterclockwise)
- Right turn (clockwise)
- Helix left turn (counterclockwise)
- Helix right turn (clockwise)
- No motion

The turn direction is defined as viewed from the top of the UAV. Helical motions are used to ascend or descend.

Creation

Syntax

```
pathSegObj = connect(connectionObj, start, goal)
```

```
pathSegObj = uavDubinsPathSegment(connectionObj, start, goal)
```

```
pathSegObj = uavDubinsPathSegment(connectionObj, start, goal,  
motionTypes)
```

```
pathSegObj = uavDubinsPathSegment(start, goal, flightPathAngle,  
airSpeed, minTurningRadius, helixRadius, motionTypes, motionLengths)
```

Description

To generate a `uavDubinsPathSegment` object, use the `connect` function with a `uavDubinsConnection` object:

`pathSegObj = connect(connectionObj, start, goal)` connects the start and goal poses using the specified `uavDubinsConnection` object. The `start` and `goal` inputs set the value of the properties `StartPose` and `GoalPose`, respectively.

To specifically define a path segment:

`pathSegObj = uavDubinsPathSegment(connectionObj, start, goal)` creates a Dubins path segment to connect start and goal poses of a UAV. The `uavDubinsConnection` object provides the minimum turning radius and flight path angle. It internally computes the optimal path and assigns it to `pathSegObj`.

`pathSegObj = uavDubinsPathSegment(connectionObj, start, goal, motionTypes)` creates a Dubins path segment to connect start and goal poses of a UAV with the given `motionTypes`. The `motionTypes` input sets the value of the `MotionTypes` property.

`pathSegObj = uavDubinsPathSegment(start, goal, flightPathAngle, airSpeed, minTurningRadius, helixRadius, motionTypes, motionLengths)` creates a Dubins path segment to connect start and goal poses of a UAV by explicitly specifying all the parameters. The input values are set to their corresponding properties in the object.

Properties

StartPose — Initial pose of UAV

four-element numeric vector

This property is read-only.

Initial pose of the UAV at the start of the path segment, specified as a four-element numeric vector [*x*, *y*, *z*, *headingAngle*].

x, *y*, and *z* specify the position in meters. *headingAngle* specifies the heading angle in radians.

Data Types: double

GoalPose — Goal pose of UAV

four-element numeric vector

This property is read-only.

Goal pose of the UAV at the end of the path segment, specified as a four-element numeric vector $[x, y, z, headingAngle]$.

x , y , and z specify the position in meters. *headingAngle* specifies the heading angle in radians.

Data Types: double

MinTurningRadius — Minimum turning radius

positive numeric scalar

This property is read-only.

Minimum turning radius of the UAV, specified as a positive numeric scalar in meters. This value corresponds to the radius of the circle at the maximum roll angle and a constant airspeed of the UAV.

Data Types: double

HelixRadius — Helical path radius

positive numeric scalar

This property is read-only.

Helical path radius of the UAV, specified as a positive numeric scalar in meters.

Data Types: double

FlightPathAngle — Flight path angle

positive numeric scalar

This property is read-only.

Flight path angle of the UAV to reach the goal altitude, specified as a positive numeric scalar in radians.

Data Types: double

AirSpeed — Airspeed of UAV

positive numeric scalar

This property is read-only.

Airspeed of the UAV, specified as a positive numeric scalar in m/s.

Data Types: double

MotionLengths — Length of each motion

four-element numeric vector

This property is read-only.

Length of each motion in the path segment, specified as a four-element numeric vector in meters. Each motion length corresponds to a motion type specified in the MotionTypes property.

Data Types: double

MotionTypes — Type of each motion

four-element string cell array

This property is read-only.

Type of each motion in the path segment, specified as a three-element string cell array.

Motion Type	Description
"S"	Straight
"L"	Left turn (counterclockwise)
"R"	Right turn (clockwise)
"Hl"	Helix left turn (counterclockwise)
"Hr"	Helix right turn (clockwise)
"N"	No motion

Note The no motion segment "N" is used as a filler at the end when only three path segments are needed.

Each motion type corresponds to a motion length specified in the MotionLengths property.

For UAV Dubins connections, the available path types are: {'LSLN'} {'LSRN'} {'RSLN'} {'RSRN'} {'RLRN'} {'LRLN'} {'HLLSL'} {'HLLSR'} {'HrRSL'}

```
{'HrRSR'} {'HrRLR'} {'HLLRL'} {'LSLHL'} {'LSRHR'} {'RSLHL'}
{'RSRHR'} {'RLRHR'} {'LRLHL'} {'LRSL'} {'LRSR'} {'LRLR'} {'RLSR'}
{'RLRL'} {'RLSL'} {'LSRL'} {'RSRL'} {'LSLR'} {'RSLR'}.
```

Example: {'L', 'R', 'L', 'N'}

Data Types: cell

Length — Length of path segment

positive numeric scalar

This property is read-only.

Length of the path segment or the flight path, specified as a positive numeric scalar in meters. This length is the sum of the elements in the MotionLengths vector.

Data Types: double

Object Functions

interpolate Interpolate poses along UAV Dubins path segment
show Visualize UAV Dubins path segment

Examples

Specify Motion Type for UAV Dubins Path

This example shows how to calculate a UAV Dubins path segment and connect poses using the uavDubinsConnection object for a specified motion type.

Create a uavDubinsConnection object.

```
connectionObj = uavDubinsConnection;
```

Define start and goal poses as [x, y, z, headingAngle] vectors.


```
startPose = [0 0 0 0]; % [meters, meters, meters, radians]
goalPose = [0 0 20 pi];
```

Calculate a valid path segment and connect the poses for a specified motion type.

```
pathSegObj = uavDubinsPathSegment(connectionObj, startPose, goalPose, {'L', 'S', 'L', 'N'});
```

Show the generated path.

```
show(pathSegObj)
```

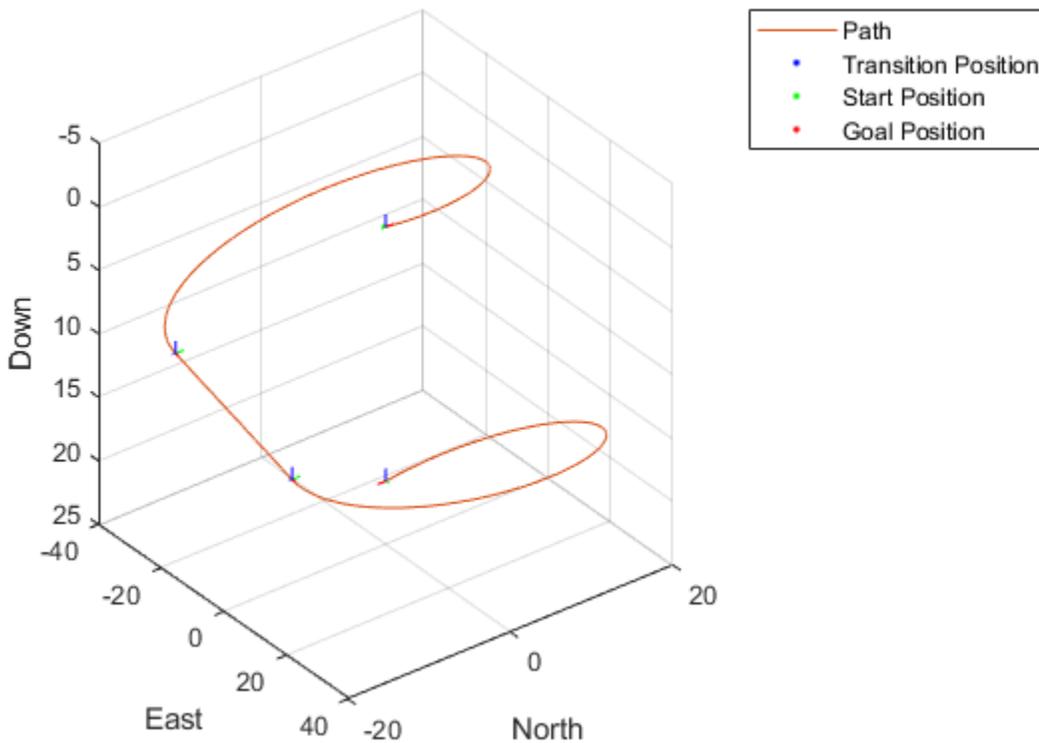

Verify the motion type of the returned path segment.

```
fprintf('Motion Type: %s\n',strjoin(pathSegObj.MotionTypes));
```

```
Motion Type: L S L N
```

See Also

[dubinsPathSegment](#) | [reedsSheppPathSegment](#)

Introduced in R2019b

uavOrbitFollower

Orbit location of interest using a UAV

Description

The `uavOrbitFollower` object is a 3-D path follower for unmanned aerial vehicles (UAVs) to follow circular paths that is based on a lookahead distance. Given the circle center, radius, and the pose, the orbit follower computes a desired yaw and heading to follow a lookahead point on the path. The object also computes the cross-track error from the UAV pose to the path and tracks how many times the circular orbit has been completed.

Tune the `lookaheadDistance` input to help improve path tracking. Decreasing the distance can improve tracking, but may lead to oscillations in the path.

To orbit a location using a UAV:

- 1 Create the `uavOrbitFollower` object and set its properties.
- 2 Call the object with arguments, as if it were a function.

To learn more about how System objects work, see [What Are System Objects? \(MATLAB\)](#).

Creation

Syntax

```
orbit = uavOrbitFollower
orbit = uavOrbitFollower(Name,Value)
```

Description

`orbit = uavOrbitFollower` returns an orbit follower object with default property values.

`orbit = uavOrbitFollower(Name, Value)` creates an orbit follower with additional options specified by one or more `Name, Value` pair arguments.

`Name` is a property name and `Value` is the corresponding value. `Name` must appear inside single quotes (`' '`). You can specify several name-value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Properties

Unless otherwise indicated, properties are *nontunable*, which means you cannot change their values after calling the object. Objects lock when you call them, and the `release` function unlocks them.

If a property is *tunable*, you can change its value at any time.

For more information on changing property values, see System Design in MATLAB Using System Objects (MATLAB).

UAV type — Type of UAV

`'fixed-wing'` (default) | `'multirotor'`

Type of UAV, specified as either `'fixed-wing'` or `'multirotor'`.

OrbitCenter — Center of orbit

`[x y z]` vector

Center of orbit, specified as an `[x y z]` vector. `[x y z]` is the orbit center position in NED-coordinates (north-east-down) specified in meters.

Example: `[5,5,-10]`

Data Types: `single` | `double`

OrbitRadius — Radius of orbit

positive scalar

Radius of orbit, specified as a positive scalar in meters.

Example: `5`

Data Types: `single` | `double`

TurnDirection — Direction of orbit

scalar

Direction of orbit, specified as a scalar. Positive values indicate a clockwise turn as viewed from above. Negative values indicate a counter-clockwise turn. A value of 0 automatically determines the value based on the input Pose.

Example: -1

Data Types: single | double

Usage

Syntax

```
[lookaheadPoint,desiredHeading,desiredYaw,crossTrackError,numTurns]  
= orbit(currentPose,lookaheadDistance)
```

Description

[lookaheadPoint,desiredHeading,desiredYaw,crossTrackError,numTurns]
= orbit(currentPose,lookaheadDistance) follows the set of waypoints specified in the waypoint follower object. The object takes the current position and lookahead distance to compute the lookahead point on the path. The desired heading, yaw, and cross track error are also based on this lookahead point compared to the current position. status returns zero until the UAV has navigated all the waypoints.

Input Arguments

currentPose — Current UAV pose

[x y z heading] vector

Current UAV pose, specified as a [x y z heading] vector. This pose is used to calculate the lookahead point based on the input LookaheadDistance. [x y z] is the current position in meters. heading is the current heading in radians. The UAV heading is the angle of direction of the velocity vector relative to north measured in radians.

Data Types: single | double

lookaheadDistance — Lookahead distance

positive numeric scalar

Lookahead distance along the path, specified as a positive numeric scalar in meters.

Data Types: `single` | `double`**Output Arguments****lookaheadPoint — Lookahead point on path**`[x y z]` position vector

Lookahead point on path, returned as an `[x y z]` position vector in meters.

Data Types: `double`**desiredHeading — Desired heading**

numeric scalar

Desired heading, returned as numeric scalar in radians in the range of `[-pi, pi]`. The UAV heading is the angle of direction of the velocity vector relative to north measured in radians.

Data Types: `double`**desiredYaw — Desired yaw**

numeric scalar

Desired yaw, returned as numeric scalar in radians in the range of `[-pi, pi]`. The UAV yaw is the forward direction of the UAV regardless of the velocity vector relative to north measured in radians.

Data Types: `double`**crossTrackError — Cross track error from UAV position to path**

positive numeric scalar

Cross track error from UAV position to path, returned as a positive numeric scalar in meters. The error measures the perpendicular distance from the UAV position to the closest point on the path.

Data Types: `double`

numTurns — Number of times the UAV has completed the orbit

numeric scalar

Number of times the UAV has completed the orbit, specified as a numeric scalar. As the UAV circles the center point, this value increases or decreases based on the specified `Turn Direction` property. Decimal values indicate partial completion of a circle. If the UAV cross track error exceeds the lookahead distance, the number of turns is not updated.

NumTurns is reset whenever `Center`, `Radius`, or `TurnDirection` properties are changed.

Object Functions

To use an object function, specify the System object as the first input argument. For example, to release system resources of a System object named `obj`, use this syntax:

```
release(obj)
```

Common to All System Objects

<code>step</code>	Run System object algorithm
<code>release</code>	Release resources and allow changes to System object property values and input characteristics
<code>reset</code>	Reset internal states of System object

Examples

Generate Control Commands for Orbit Following

This example shows how to use the `uav0orbitFollower` to generate heading and yaw commands for orbiting a location of interest with a UAV.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Create the orbit follower. Set the center of the location of interest and the radius of orbit. Set a `TurnDirection` of 1 for counter-clockwise rotation around the location.

```
orbFollower = uavOrbitFollower;  
  
orbFollower.OrbitCenter = [1 1 5]';  
orbFollower.OrbitRadius = 2.5;  
orbFollower.TurnDirection = 1;
```

Specify the pose of the UAV and the lookahead distance for tracking the path.

```
pose = [0;0;5;0];  
lookaheadDistance = 2;
```

Call the `orbFollower` object with the pose and lookahead distance. The object returns a lookahead point on the path, the desired heading, and yaw. You can use the desired heading and yaw to generate control commands for the UAV.

```
[lookaheadPoint,desiredHeading,desiredYaw,~,~] = orbFollower(pose,lookaheadDistance);
```

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

[control](#) | [derivative](#) | [environment](#) | [plotTransforms](#) | [roboticsAddons](#) | [state](#)

Objects

[fixedwing](#) | [multirotor](#) | [uavWaypointFollower](#)

Blocks

[Orbit Follower](#) | [UAV Guidance Model](#) | [Waypoint Follower](#)

Introduced in R2019a

uavWaypointFollower

Follow waypoints for UAV

Description

The `uavWaypointFollower` System object follows a set of waypoints for an unmanned aerial vehicle (UAV) using a lookahead point. The object calculates the lookahead point, desired heading, and desired yaw given a UAV position, a set of waypoints, and a lookahead distance. Specify a set of waypoints and tune the `lookAheadDistance` input argument and `TransitionRadius` property for navigating the waypoints. The object supports both multirotor and fixed-wing UAV types.

To follow a set of waypoints:

- 1 Create the `uavWaypointFollower` object and set its properties.
- 2 Call the object with arguments, as if it were a function.

To learn more about how System objects work, see [What Are System Objects? \(MATLAB\)](#).

Creation

Syntax

```
wpFollowerObj = uavWaypointFollower  
wpFollowerObj = uavWaypointFollower(Name,Value)
```

Description

`wpFollowerObj = uavWaypointFollower` creates a UAV waypoint follower with default properties.

`wpFollowerObj = uavWaypointFollower(Name,Value)` creates a UAV waypoint follower with additional options specified by one or more `Name, Value` pair arguments.

Name is a property name and Value is the corresponding value. Name must appear inside single quotes (' '). You can specify several name-value pair arguments in any order as Name1, Value1, . . . , NameN, ValueN.

Properties

Unless otherwise indicated, properties are *nontunable*, which means you cannot change their values after calling the object. Objects lock when you call them, and the `release` function unlocks them.

If a property is *tunable*, you can change its value at any time.

For more information on changing property values, see System Design in MATLAB Using System Objects (MATLAB).

UAV type — Type of UAV

'fixed-wing' (default) | 'multirotor'

Type of UAV, specified as either 'fixed-wing' or 'multirotor'.

StartFrom — Waypoint start behavior

'first' (default) | 'closest'

Waypoint start behavior, specified as either 'first' or 'closest'.

When set to 'first', the UAV flies to the first path segment between waypoints listed in `Waypoints`. When set to 'closest', the UAV flies to the closest path segment between waypoints listed in `Waypoints`. When the waypoints input changes, the UAV recalculates the closest path segment.

Waypoints — Set of waypoints

n -by-3 matrix of [x y z] vectors

Set of waypoints for UAV to follow, specified as a n -by-3 matrix of [x y z] vectors in meters.

Data Types: `single` | `double`

YawAngles — Yaw angle for each waypoint

scalar | n -element column vector | []

Yaw angle for each waypoint, specified as a scalar or n -element column vector in radians. A scalar is applied to each waypoint in `Waypoints`. An input of `[]` keeps the yaw aligned with the desired heading based on the lookahead point.

Data Types: `single` | `double`

TransitionRadius — Transition radius for each waypoint

numeric scalar | n -element column vector

Transition radius for each waypoint, specified as a scalar or n -element vector in meter. When specified as a scalar, this parameter is applied to each waypoint in `Waypoints`. When the UAV is within the transition radius, the object transitions to following the next path segment between waypoints.

Data Types: `single` | `double`

Usage

Syntax

```
[lookaheadPoint,desiredHeading,desiredYaw,crossTrackError,status] =  
wpFollowerObj(currentPose,lookaheadDistance)
```

Description

`[lookaheadPoint,desiredHeading,desiredYaw,crossTrackError,status] = wpFollowerObj(currentPose,lookaheadDistance)` follows the set of waypoints specified in the waypoint follower object. The object takes the current position and lookahead distance to compute the lookahead point on the path. The desired heading, yaw, and cross track error are also based on this lookahead point compared to the current position. `status` returns zero until the UAV has navigated all the waypoints.

Input Arguments

currentPose — Current UAV pose

`[x y z chi]` vector

Current UAV pose, specified as a $[x \ y \ z \ \text{chi}]$ vector. This pose is used to calculate the lookahead point based on the input `lookaheadDistance`. $[x \ y \ z]$ is the current position in meters. `chi` is the current heading in radians.

Data Types: `single` | `double`

lookaheadDistance — Lookahead distance

positive numeric scalar

Lookahead distance along the path, specified as a positive numeric scalar in meters.

Data Types: `single` | `double`

Output Arguments

lookaheadPoint — Lookahead point on path

$[x \ y \ z]$ position vector

Lookahead point on path, returned as an $[x \ y \ z]$ position vector in meters.

Data Types: `single` | `double`

desiredHeading — Desired heading

numeric scalar

Desired heading, returned as a numeric scalar in radians in the range of $[-\pi, \pi]$. The UAV heading is the direction of the velocity vector.

Data Types: `single` | `double`

desiredYaw — Desired yaw

numeric scalar

Desired yaw, returned as a numeric scalar in radians in the range of $[-\pi, \pi]$. The UAV yaw is the angle of the forward direction of the UAV regardless of the velocity vector.

Data Types: `single` | `double`

crossTrackError — Cross track error from UAV position to path

positive numeric scalar

Cross track error from UAV position to path, returned as a positive numeric scalar in meters. The error measures the perpendicular distance from the UAV position to the closest point on the path.

Data Types: `single` | `double`

status — Status of waypoint navigation

`0` | `1`

Status of waypoint navigation, returned as `0` or `1`. When the follower has navigated all waypoints, the object outputs `1`. Otherwise, the object outputs `0`.

Data Types: `uint8`

Object Functions

To use an object function, specify the System object as the first input argument. For example, to release system resources of a System object named `obj`, use this syntax:

```
release(obj)
```


Common to All System Objects

<code>step</code>	Run System object algorithm
<code>release</code>	Release resources and allow changes to System object property values and input characteristics
<code>reset</code>	Reset internal states of System object

More About

Waypoint Hyperplane Condition

When following a set of waypoints, the first waypoint may be ignored based on the pose of the UAV. Due to the nature of the lookahead distance used to track the path, the waypoint follower checks if the UAV is near the next waypoint to transition to the next path segment using a transition region. However, there is also a condition where the UAV transitions when outside of this region. A 3-D hyperplane is drawn at the next waypoint. If the UAV pose is inside this hyperplane, the waypoint follower transitions to the next waypoint. This behavior helps to ensure the UAV follows an achievable path.

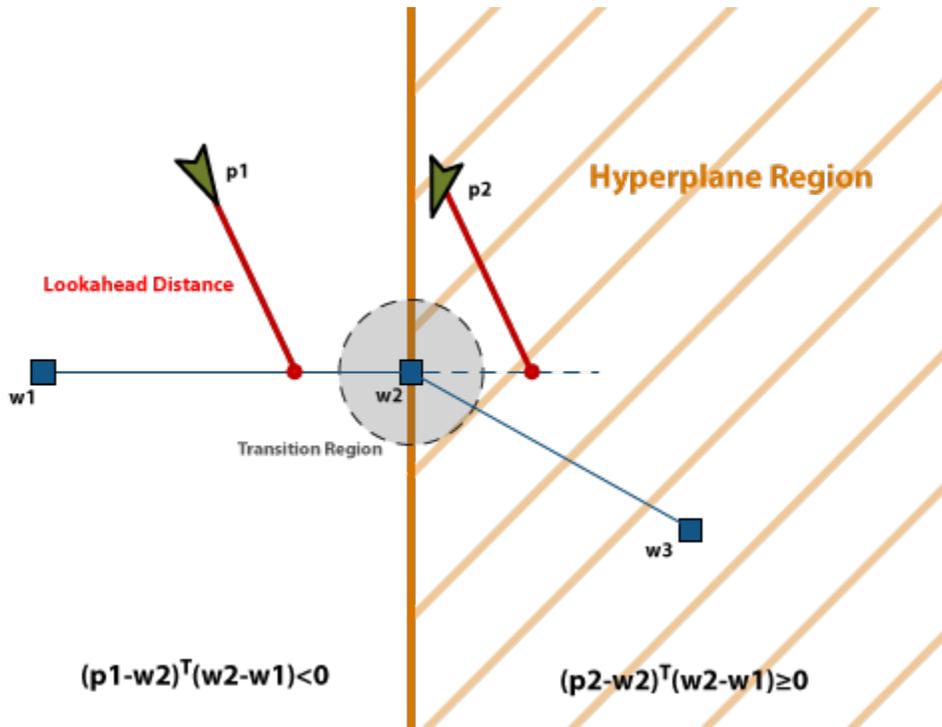

The hyperplane condition is satisfied if:

$$(p - w_1)^T (w_2 - w_1) \geq 0$$

p is the UAV position, and w_1 and w_2 are sequential waypoint positions.

If you find this behavior limiting, consider adding more waypoints based on your initial pose to force the follower to navigate towards your initial waypoint.

References

- [1] Park, Sanghyuk, John Deyst, and Jonathan How. "A New Nonlinear Guidance Logic for Trajectory Tracking." *AIAA Guidance, Navigation, and Control Conference and Exhibit*, 2004.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`control` | `derivative` | `environment` | `plotTransforms` | `roboticsAddons` | `state`

Objects

`fixedwing` | `multirotor` | `uavOrbitFollower`

Blocks

UAV Guidance Model

Topics

“Approximate High-Fidelity UAV model with UAV Guidance Model block”

“Tuning Waypoint Follower for Fixed-Wing UAV”


Introduced in R2018b

unicycleKinematics

Unicycle vehicle model

Description

`unicycleKinematics` creates a unicycle vehicle model to simulate simplified car-like vehicle dynamics. The state of the vehicle is defined as a three-element vector, $[x \ y \ \theta]$, with a global xy -position, specified in meters, and a vehicle heading angle, θ , specified in radians. This model approximates a unicycle vehicle with a given wheel radius, `WheelRadius`, that can spin in place according to a heading angle, θ . To compute the time derivative states for the model, use the `derivative` function with input commands and the current robot state.

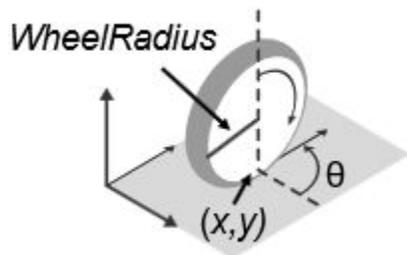

Creation

Syntax

```
kinematicModel = unicycleKinematics
```

```
kinematicModel = unicycleKinematics(Name,Value)
```

Description

`kinematicModel = unicycleKinematics` creates a unicycle kinematic model object with default property values.

`kinematicModel = unicycleKinematics(Name, Value)` sets additional properties to the specified values. You can specify multiple properties in any order.

Properties

WheelRadius — Wheel radius of vehicle

0.1 (default) | positive numeric scalar

The wheel radius of the vehicle, specified in meters.

WheelSpeedRange — Range of vehicle wheel speeds

[-Inf Inf] (default) | two-element vector

The vehicle speed range is a two-element vector that provides the minimum and maximum vehicle speeds, [*MinSpeed* *MaxSpeed*], specified in meters per second.

VehicleInputs — Type of motion inputs for vehicle

"WheelSpeedHeadingRate" (default) | character vector | string scalar

The `VehicleInputs` property specifies the format of the model input commands when using the `derivative` function. Options are specified as one of the following strings:

- "WheelSpeedHeadingRate" — Wheel speed and heading angular velocity, specified in radians per second.
- "VehicleSpeedHeadingRate" — Vehicle speed and heading angular velocity, specified in radians per second.

Object Functions

`derivative` Time derivative of vehicle state

Examples

Plot Path of Unicycle Kinematic Robot

Create a Robot

Define a robot and set the initial starting position and orientation.

```
kinematicModel = unicycleKinematics;  
initialState = [0 0 0];
```


Simulate Robot Motion

Set the timespan of the simulation to 1 s with 0.05 s timesteps and the input commands to 10 m/s and left turn. Simulate the motion of the robot by using the `ode45` solver on the derivative function.

```
tspan = 0:0.05:1;  
inputs = [10 1]; %Constant speed and turning left  
[t,y] = ode45(@(t,y)derivative(kinematicModel,y,inputs),tspan,initialState);
```

Plot path

```
figure  
plot(y(:,1),y(:,2))
```

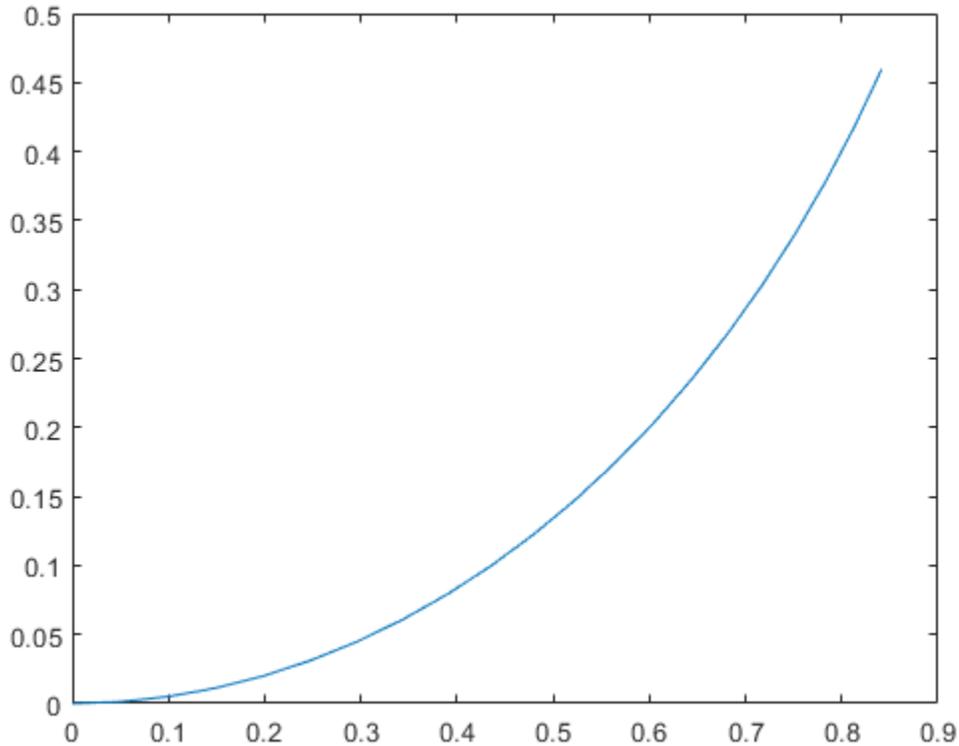

References

- [1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning, and Control* 1st ed. Cambridge, MA: Cambridge University Press, 2017.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Classes

[ackermannKinematics](#) | [bicycleKinematics](#) | [differentialDriveKinematics](#)

Blocks

Unicycle Kinematic Model

Functions

[derivative](#)

Topics

[“Simulate Different Kinematic Models for Mobile Robots”](#)

Introduced in R2019b

Functions — Alphabetical List

angdiff

Difference between two angles

Syntax

```
delta = angdiff(alpha,beta)
```

```
delta = angdiff(alpha)
```

Description

`delta = angdiff(alpha,beta)` calculates the difference between the angles `alpha` and `beta`. This function subtracts `alpha` from `beta` with the result wrapped on the interval $[-\pi, \pi]$. You can specify the input angles as single values or as arrays of angles that have the same number of values.

`delta = angdiff(alpha)` returns the angular difference between adjacent elements of `alpha` along the first dimension whose size does not equal 1. If `alpha` is a vector of length n , the first entry is subtracted from the second, the second from the third, etc. The output, `delta`, is a vector of length $n-1$. If `alpha` is an m -by- n matrix with m greater than 1, the output, `delta`, will be a matrix of size $m-1$ -by- n .

Examples

Calculate Difference Between Two Angles

```
d = angdiff(pi,2*pi)
```

```
d = 3.1416
```

Calculate Difference Between Two Angle Arrays

```
d = angdiff([pi/2 3*pi/4 0],[pi pi/2 -pi])  
  
d = 1×3  
    1.5708    -0.7854    -3.1416
```

Calculate Angle Differences of Adjacent Elements

```
angles = [pi pi/2 pi/4 pi/2];  
d = angdiff(angles)  
  
d = 1×3  
   -1.5708   -0.7854    0.7854
```

Input Arguments

alpha — Angle in radians

scalar | vector | matrix | multidimensional array

Angle in radians, specified as a scalar, vector, matrix, or multidimensional array. This is the angle that is subtracted from **beta** when specified.

Example: `pi/2`

beta — Angle in radians

scalar | vector | matrix | multidimensional array

Angle in radians, specified as a scalar, vector, matrix, or multidimensional array of the same size as **alpha**. This is the angle that **alpha** is subtracted from when specified.

Example: `pi/2`

Output Arguments

delta — Difference between two angles

scalar | vector | matrix | multidimensional array

Angular difference between two angles, returned as a scalar, vector, or array. `delta` is wrapped to the interval $[-\pi, \pi]$.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Introduced in R2015a

axang2quat

Convert axis-angle rotation to quaternion

Syntax

```
quat = axang2quat(axang)
```

Description

`quat = axang2quat(axang)` converts a rotation given in axis-angle form, `axang`, to quaternion, `quat`.

Examples

Convert Axis-Angle Rotation to Quaternion

```
axang = [1 0 0 pi/2];  
quat = axang2quat(axang)
```

```
quat = 1×4
```

```
    0.7071    0.7071         0         0
```

Input Arguments

axang — Rotation given in axis-angle form

n-by-4 matrix

Rotation given in axis-angle form, specified as an *n*-by-4 matrix of *n* axis-angle rotations. The first three elements of every row specify the rotation axis, and the last element defines the rotation angle (in radians).

Example: `[1 0 0 pi/2]`

Output Arguments

quat — Unit quaternion

n-by-4 matrix

Unit quaternion, returned as an *n*-by-4 matrix containing *n* quaternions. Each quaternion, one per row, is of the form $q = [w \ x \ y \ z]$, with *w* as the scalar number.

Example: `[0.7071 0.7071 0 0]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`quat2axang`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

axang2rotm

Convert axis-angle rotation to rotation matrix

Syntax

```
rotm = axang2rotm(axang)
```

Description

`rotm = axang2rotm(axang)` converts a rotation given in axis-angle form, `axang`, to an orthonormal rotation matrix, `rotm`. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Examples

Convert Axis-Angle Rotation to Rotation Matrix

```
axang = [0 1 0 pi/2];  
rotm = axang2rotm(axang)
```

```
rotm = 3×3
```

```
    0.0000         0    1.0000  
         0    1.0000         0  
   -1.0000         0    0.0000
```

Input Arguments

axang — Rotation given in axis-angle form
n-by-4 matrix

Rotation given in axis-angle form, specified as an n -by-4 matrix of n axis-angle rotations. The first three elements of every row specify the rotation axis, and the last element defines the rotation angle (in radians).

Example: `[1 0 0 pi/2]`

Output Arguments

rotm — Rotation matrix

3-by-3-by- n matrix

Rotation matrix, returned as a 3-by-3-by- n matrix containing n rotation matrices. Each rotation matrix has a size of 3-by-3 and is orthonormal. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Example: `[0 0 1; 0 1 0; -1 0 0]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`rotm2axang`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

axang2tform

Convert axis-angle rotation to homogeneous transformation

Syntax

```
tform = axang2tform(axang)
```

Description

`tform = axang2tform(axang)` converts a rotation given in axis-angle form, `axang`, to a homogeneous transformation matrix, `tform`. When using the transformation matrix, premultiply it with the coordinates to be transformed (as opposed to postmultiplying).

Examples

Convert Axis-Angle Rotation to Homogeneous Transformation

```
axang = [1 0 0 pi/2];  
tform = axang2tform(axang)
```

```
tform = 4x4
```

```
1.0000    0    0    0  
0    0.0000 -1.0000    0  
0    1.0000  0.0000    0  
0    0    0    1.0000
```

Input Arguments

axang — Rotation given in axis-angle form
n-by-4 matrix

Rotation given in axis-angle form, specified as an n -by-4 matrix of n axis-angle rotations. The first three elements of every row specify the rotation axis, and the last element defines the rotation angle (in radians).

Example: `[1 0 0 pi/2]`

Output Arguments

tform — Homogeneous transformation

4-by-4-by- n matrix

Homogeneous transformation matrix, specified by a 4-by-4-by- n matrix of n homogeneous transformations. When using the transformation matrix, premultiply it with the coordinates to be formed (as opposed to postmultiplying).

Example: `[0 0 1 0; 0 1 0 0; -1 0 0 0; 0 0 0 1]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`tform2axang`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

bsplinepolytraj

Generate polynomial trajectories using B-splines

Syntax

```
[q,qd,qdd,pp] = bsplinepolytraj(controlPoints,tInterval,tSamples)
```

Description

`[q,qd,qdd,pp] = bsplinepolytraj(controlPoints,tInterval,tSamples)` generates a piecewise cubic B-spline trajectory that falls in the control polygon defined by `controlPoints`. The trajectory is uniformly sampled between the start and end times given in `tInterval`. The function returns the positions, velocities, and accelerations at the input time samples, `tSamples`. The function also returns the piecewise polynomial `pp` form of the polynomial trajectory with respect to time.

Examples

Compute B-Spline Trajectory for 2-D Planar Motion

Use the `bsplinepolytraj` function with a given set of 2-D xy control points. The B-spline uses these control points to create a trajectory inside the polygon. Time points for the waypoints are also given.


```
cpts = [1 4 4 3 -2 0; 0 1 2 4 3 1];
tpts = [0 5];
```

Compute the B-spline trajectory. The function outputs the trajectory positions (`q`), velocity (`qd`), acceleration (`qdd`), time vector (`tvec`), and polynomial coefficients (`pp`) of the polynomial that achieves the waypoints using trapezoidal velocities.

```
tvec = 0:0.01:5;
[q, qd, qdd, pp] = bsplinepolytraj(cpts,tpts,tvec);
```

Plot the results. Show the control points and the resulting trajectory inside them.


```
figure
plot(cpts(1,:),cpts(2,:), 'xb-')
hold all
plot(q(1,:), q(2,:))
xlabel('X')
ylabel('Y')
hold off
```

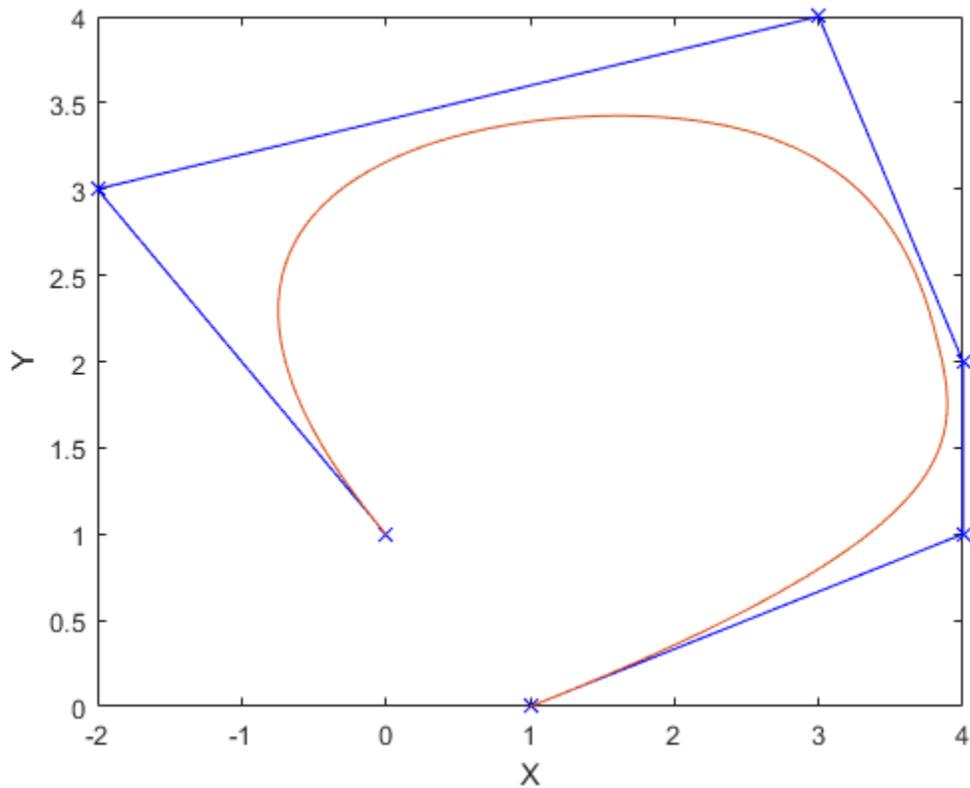

Plot the position of each element of the B-spline trajectory. These trajectories are cubic piecewise polynomials parameterized in time.

```
figure
plot(tvec,q)
hold all
```

```
plot([0:length(cpts)-1],cpts,'x')
xlabel('t')
ylabel('Position Value')
legend('X-positions','Y-positions')
hold off
```

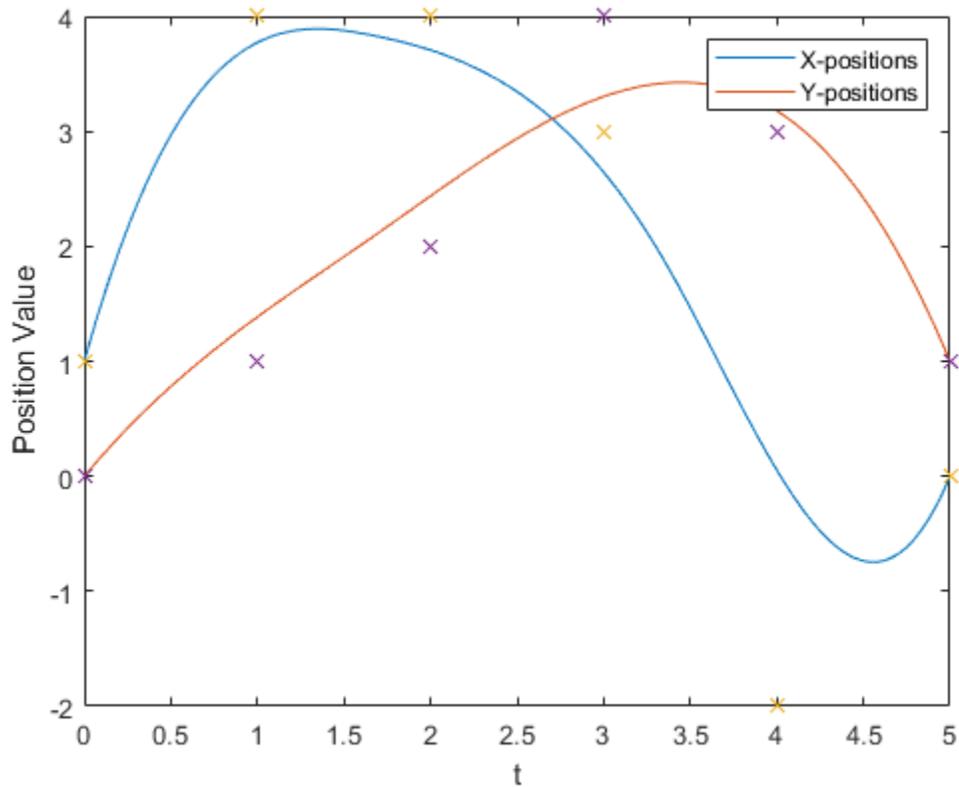

Input Arguments

controlPoints — Points for control polygon

n-by-*p* matrix

Points for control polygon of B-spline trajectory, specified as an n -by- p matrix, where n is the dimension of the trajectory and p is the number of control points.

Example: [1 4 4 3 -2 0; 0 1 2 4 3 1]

Data Types: single | double

tInterval — Start and end times for trajectory

two-element vector

Start and end times for the trajectory, specified as a two-element vector.

Example: [0 10]

Data Types: single | double

tSamples — Time samples for trajectory

vector

Time samples for the trajectory, specified as a vector. The output position, q , velocity, qd , and accelerations, qdd , are sampled at these time intervals.

Example: 0:0.01:10

Data Types: single | double

Output Arguments

q — Positions of trajectory

vector

Positions of the trajectory at the given time samples in `tSamples`, returned as a vector.

Data Types: single | double

qd — Velocities of trajectory

vector

Velocities of the trajectory at the given time samples in `tSamples`, returned as a vector.

Data Types: single | double

qdd — Accelerations of trajectory

vector

Accelerations of the trajectory at the given time samples in `tSamples`, returned as a vector.

Data Types: `single` | `double`

pp — Piecewise-polynomial structure

Piecewise-polynomial, returned as a structure that defines the polynomial for each section of the piecewise trajectory. You can build your own piecewise polynomials using `mkpp`, or evaluate the polynomial at specified times using `ppval`. The structure contains the fields:

- `form`: 'pp'.
- `breaks`: p -element vector of times when the piecewise trajectory changes forms. p is the number of waypoints.
- `coefs`: $n(p-1)$ -by-order matrix for the coefficients for the polynomials. $n(p-1)$ is the dimension of the trajectory times the number of pieces. Each set of n rows defines the coefficients for the polynomial that described each variable trajectory.
- `pieces`: $p-1$. The number of breaks minus 1.
- `order`: Degree of the polynomial + 1. For example, cubic polynomials have an order of 4.
- `dim`: n . The dimension of the control point positions.

References

- [1] Farin, Gerald E. *Curves and Surfaces for Computer Aided Geometric Design: A Practical Guide*. San Diego, CA: Academic Press, 1993.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`cubicpolytraj` | `quinticpolytraj` | `rottraj` | `transformtraj` | `trapveltraj`

Introduced in R2019a

cart2hom

Convert Cartesian coordinates to homogeneous coordinates

Syntax

```
hom = cart2hom(cart)
```

Description

`hom = cart2hom(cart)` converts a set of points in Cartesian coordinates to homogeneous coordinates.

Examples

Convert 3-D Cartesian Points to Homogeneous Coordinates

```
c = [0.8147 0.1270 0.6324; 0.9058 0.9134 0.0975];  
h = cart2hom(c)
```

```
h = 2×4
```

```
    0.8147    0.1270    0.6324    1.0000  
    0.9058    0.9134    0.0975    1.0000
```

Input Arguments

cart — Cartesian coordinates

n-by- $(k-1)$ matrix

Cartesian coordinates, specified as an *n*-by- $(k-1)$ matrix, containing *n* points. Each row of `cart` represents a point in $(k-1)$ -dimensional space. *k* must be greater than or equal to 2.

Example: [0.8147 0.1270 0.6324; 0.9058 0.9134 0.0975]

Output Arguments

hom — Homogeneous points

n-by-*k* matrix

Homogeneous points, returned as an *n*-by-*k* matrix, containing *n* points. *k* must be greater than or equal to 2.

Example: [0.2785 0.9575 0.1576 0.5; 0.5469 0.9649 0.9706 0.5]

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

hom2cart

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

checkCollision

Check if two geometries are in collision

Syntax

```
collisionStatus = checkCollision(geom1,geom2)  
[collisionStatus,sepdist,witnesspts] = checkCollision(geom1,geom2)
```

Description

`collisionStatus = checkCollision(geom1,geom2)` returns the collision status between the two convex geometries `geom1` and `geom2`. If the two geometries are in collision at their specified poses, `checkCollision` is equal to 1. If no collision is found, `collisionStatus` is equal to 0.

`[collisionStatus,sepdist,witnesspts] = checkCollision(geom1,geom2)` also returns the minimal distance and witness points of each geometry, `sepdist` and `witnesspts`, respectively, when no collision is found between the two geometries.

Examples

Check Geometry Collision Status

This example shows how to check the collision status of two collision geometries.

Create a box collision geometry.

```
bx = collisionBox(1,2,3);
```

Create a cylinder collision geometry.


```
cy = collisionCylinder(3,1);
```

Translate the cylinder along the x-axis by 2.

```
T = trvec2tform([2 0 0]);  
cy.Pose = T;
```

Plot the two geometries.

```
show(cy)  
hold on  
show(bx)  
xlim([-5 5])  
ylim([-5 5])  
zlim([-5 5])  
hold off
```

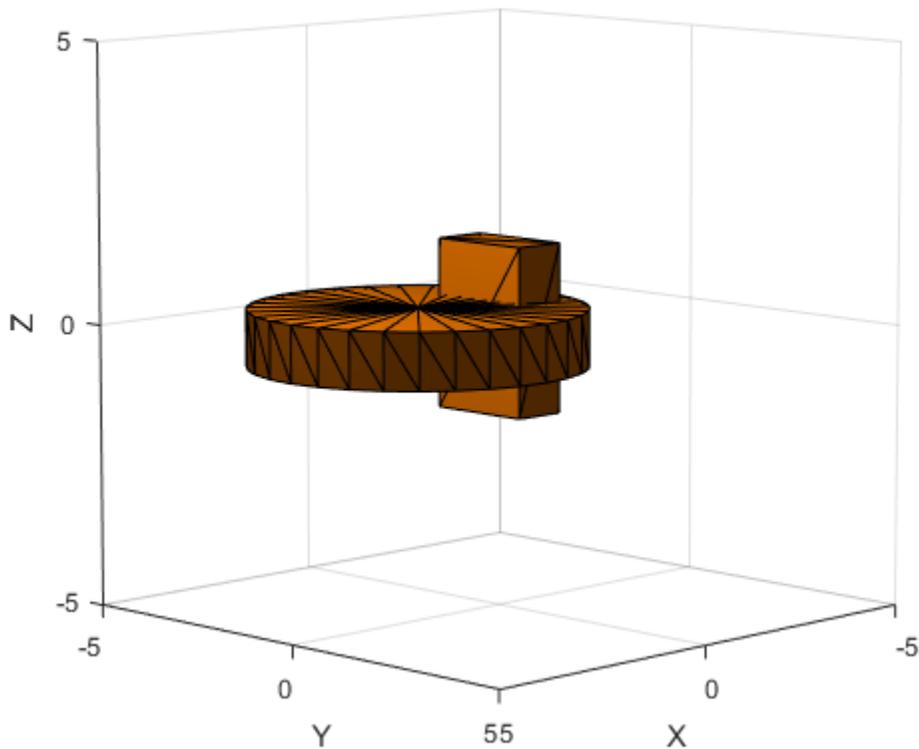

Check the collision status. Confirm the status is consistent with the plot.

```
[areIntersecting,dist,witnessPoints] = checkCollision(bx,cy)
```

```
areIntersecting = 1
```

```
dist = NaN
```

```
witnessPoints = 3x2
```

```
NaN NaN
NaN NaN
NaN NaN
```

Translate the box along the x-axis by 3 and down the z-axis by 4. Confirm the box and cylinder are not colliding.

```
T = trvec2tform([0 3 -4]);
```

```
bx.Pose = T;
```

```
[areIntersecting,dist,witnessPoints] = checkCollision(bx,cy)
```

```
areIntersecting = 0
```

```
dist = 2
```

```
witnessPoints = 3x2
```

```
0.4687 0.4687
2.0627 2.0627
-2.5000 -0.5000
```

Plot the box, cylinder, and the line segment representing the minimum distance between the two geometries.

```
show(cy)
```

```
hold on
```

```
show(bx)
```

```
wp = witnessPoints;
```


```
plot3([wp(1,1) wp(1,2)], [wp(2,1) wp(2,2)], [wp(3,1) wp(3,2)], 'bo-')
```

```
xlim([-5 5])
```

```
ylim([-5 5])
```

```
zlim([-5 5])
```

```
hold off
```

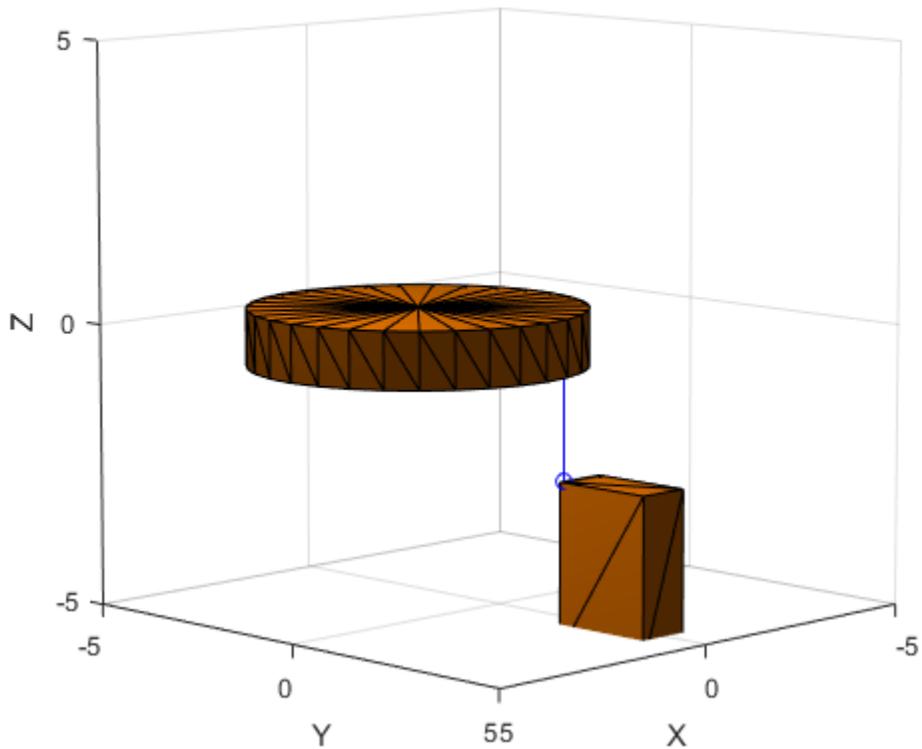

Input Arguments

geom1 — Collision geometry

collision geometry object

Collision geometry, specified as one of the following:

- collisionBox
- collisionCylinder
- collisionMesh

- collisionSphere

geom2 — Collision geometry

collision geometry object

Collision geometry, specified as one of the following:

- collisionBox
- collisionCylinder
- collisionMesh
- collisionSphere

Output Arguments

collisionStatus — Collision status

0 | 1

Collision status, returned as 0 or 1. If the two geometries are in collision, collisionStatus is equal to 1. Otherwise, the value is 0.

Data Types: double

sepdist — Minimal distance

real number | NaN

Minimal distance between two collision geometries, returned as a real number or NaN. The line segment that connects the witness points (witnesspts) realizes the minimal distance between the two geometries. When the two geometries are in collision, sepdist is set to NaN.

Data Types: double | NaN

witnesspts — Witness points

3-by-2 matrix

Witness points on each geometry, returned as a 3-by-2 matrix. Each column corresponds to the witness point on geom1 and geom2, respectively. The line segment that connects the two witness points has length sepdist. When the two geometries are in collision, witnesspts is set to nan(3,2).

Data Types: double | NaN

Limitations

- Collision checking results are no longer reliable when the minimal distance falls below 10^{-5} m.

See Also

`collisionBox` | `collisionCylinder` | `collisionMesh` | `collisionSphere`

Introduced in R2019b

classUnderlying

Class of parts within quaternion

Syntax

```
underlyingClass = classUnderlying(quat)
```

Description

`underlyingClass = classUnderlying(quat)` returns the name of the class of the parts of the quaternion `quat`.

Examples

Get Underlying Class of Quaternion

A quaternion is a four-part hyper-complex number used in three-dimensional representations. The four parts of the quaternion are of data type `single` or `double`.

Create two quaternions, one with an underlying data type of `single`, and one with an underlying data type of `double`. Verify the underlying data types by calling `classUnderlying` on the quaternions.

```
qSingle = quaternion(single([1,2,3,4]))
```

```
qSingle = quaternion  
1 + 2i + 3j + 4k
```

```
classUnderlying(qSingle)
```

```
ans =  
'single'
```

```
qDouble = quaternion([1,2,3,4])
```

```
qDouble = quaternion  
1 + 2i + 3j + 4k
```

```
classUnderlying(qDouble)
```

```
ans =  
'double'
```

You can separate quaternions into their parts using the `parts` function. Verify the parts of each quaternion are the correct data type. Recall that `double` is the default MATLAB® type.

```
[aS,bS,cS,dS] = parts(qSingle)
```

```
aS = single  
1
```

```
bS = single  
2
```

```
cS = single  
3
```

```
dS = single  
4
```

```
[aD,bD,cD,dD] = parts(qDouble)
```

```
aD = 1
```

```
bD = 2
```

```
cD = 3
```

```
dD = 4
```

Quaternions follow the same implicit casting rules as other data types in MATLAB. That is, a quaternion with underlying data type `single` that is combined with a quaternion with underlying data type `double` results in a quaternion with underlying data type `single`. Multiply `qDouble` and `qSingle` and verify the resulting underlying data type is `single`.

```
q = qDouble*qSingle;  
classUnderlying(q)
```

```
ans =  
'single'
```

Input Arguments

quat — Quaternion to investigate

scalar | vector | matrix | multi-dimensional array

Quaternion to investigate, specified as a quaternion or array of quaternions.

Data Types: quaternion

Output Arguments

underlyingClass — Underlying class of quaternion object

'single' | 'double'

Underlying class of quaternion, returned as the character vector 'single' or 'double'.

Data Types: char

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

Objects

Introduced in R2018a

compact

Convert quaternion array to N -by-4 matrix

Syntax

```
matrix = compact(quat)
```

Description

`matrix = compact(quat)` converts the quaternion array, `quat`, to an N -by-4 matrix. The columns are made from the four quaternion parts. The i^{th} row of the matrix corresponds to `quat(i)`.

Examples

Convert Quaternion Array to Compact Representation of Parts

Create a scalar quaternion with random parts. Convert the parts to a 1-by-4 vector using `compact`.

```
randomParts = randn(1,4)
```

```
randomParts = 1×4
```

```
    0.5377    1.8339   -2.2588    0.8622
```

```
quat = quaternion(randomParts)
```

```
quat = quaternion
```

```
    0.53767 + 1.8339i - 2.2588j + 0.86217k
```

```
quatParts = compact(quat)
```

```
quatParts = 1×4
    0.5377    1.8339   -2.2588    0.8622
```

Create a 2-by-2 array of quaternions, then convert the representation to a matrix of quaternion parts. The output rows correspond to the linear indices of the quaternion array.

```
quatArray = [quaternion([1:4;5:8]), quaternion([9:12;13:16])]
```

```
quatArray=2×2 object
    1 + 2i + 3j + 4k    9 + 10i + 11j + 12k
    5 + 6i + 7j + 8k    13 + 14i + 15j + 16k
```

```
quatArrayParts = compact(quatArray)
```

```
quatArrayParts = 4×4
    1     2     3     4
    5     6     7     8
    9    10    11    12
   13    14    15    16
```

Input Arguments

quat — Quaternion to convert

scalar | vector | matrix | multidimensional array

Quaternion to convert, specified as scalar, vector, matrix, or multidimensional array of quaternions.

Data Types: quaternion

Output Arguments

matrix — Quaternion in matrix form

N-by-4 matrix

Quaternion in matrix form, returned as an N -by-4 matrix, where $N = \text{numel}(\text{quat})$.

Data Types: `single` | `double`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

Objects

Introduced in R2018a

conj

Complex conjugate of quaternion

Syntax

```
quatConjugate = conj(quat)
```

Description

`quatConjugate = conj(quat)` returns the complex conjugate of the quaternion, `quat`.

If $q = a + bi + cj + dk$, the complex conjugate of q is $q^* = a - bi - cj - dk$. Considered as a rotation operator, the conjugate performs the opposite rotation. For example,

```
q = quaternion(deg2rad([16 45 30]), 'rotvec');
a = q*conj(q);
rotatepoint(a,[0,1,0])
```

```
ans =
```

```
    0    1    0
```

Examples

Complex Conjugate of Quaternion

Create a quaternion scalar and get the complex conjugate.

```
q = normalize(quaternion([0.9 0.3 0.3 0.25]))
```

```
q = quaternion
    0.87727 + 0.29242i + 0.29242j + 0.24369k
```

```
qConj = conj(q)
```

```
qConj = quaternion
    0.87727 - 0.29242i - 0.29242j - 0.24369k
```

Verify that a quaternion multiplied by its conjugate returns a quaternion one.

```
q*qConj
```

```
ans = quaternion
    1 + 0i + 0j + 0k
```

Input Arguments

quat — Quaternion

scalar | vector | matrix | multidimensional array

Quaternion to conjugate, specified as a scalar, vector, matrix, or array of quaternions.

Data Types: quaternion

Output Arguments

quatConjugate — Quaternion conjugate

scalar | vector | matrix | multidimensional array

Quaternion conjugate, returned as a quaternion or array of quaternions the same size as `quat`.

Data Types: quaternion

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

Objects

Introduced in R2018a

control

Package: robotics

Control commands for UAV

Syntax

```
controlStruct = control(uavGuidanceModel)
```

Description

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

`controlStruct = control(uavGuidanceModel)` returns a structure that captures all the relevant control commands for the specified UAV guidance model. Use the output of this function to ensure you have the proper fields for your control. Use the control commands as an input to the `derivative` function to get the state time-derivative of the UAV.

Examples

Simulate A Multirotor Control Command

This example shows how to use the `multirotor` guidance model to simulate the change in state of a UAV due to a command input.

Note: To use UAV algorithms, you must install the UAV Library for Robotics System Toolbox®. To install, use `roboticsAddons`.

Create the multirotor guidance model.

```
model = multirotor;
```

Create a state structure. Specify the location in world coordinates.

```
s = state(model);
s(1:3) = [3;2;1];
```

Specify a control command, *u*, that specified the roll and thrust of the multirotor.

```
u = control(model);
u.Roll = pi/12;
u.Thrust = 1;
```

Create a default environment without wind.

```
e = environment(model);
```

Compute the time derivative of the state given the current state, control command, and environment.

```
sdot = derivative(model,s,u,e);
```

Simulate the UAV state using `ode45` integration. The *y* field outputs the fixed-wing UAV states as a 13-by-*n* matrix.


```
simOut = ode45(@(~,x)derivative(model,x,u,e), [0 3], s);
size(simOut.y)
```

```
ans = 1×2
```

```
13      3536
```


Plot the change in roll angle based on the simulation output. The roll angle (the X Euler angle) is the 9th row of the `simOut.y` output.

```
plot(simOut.y(9,:))
```

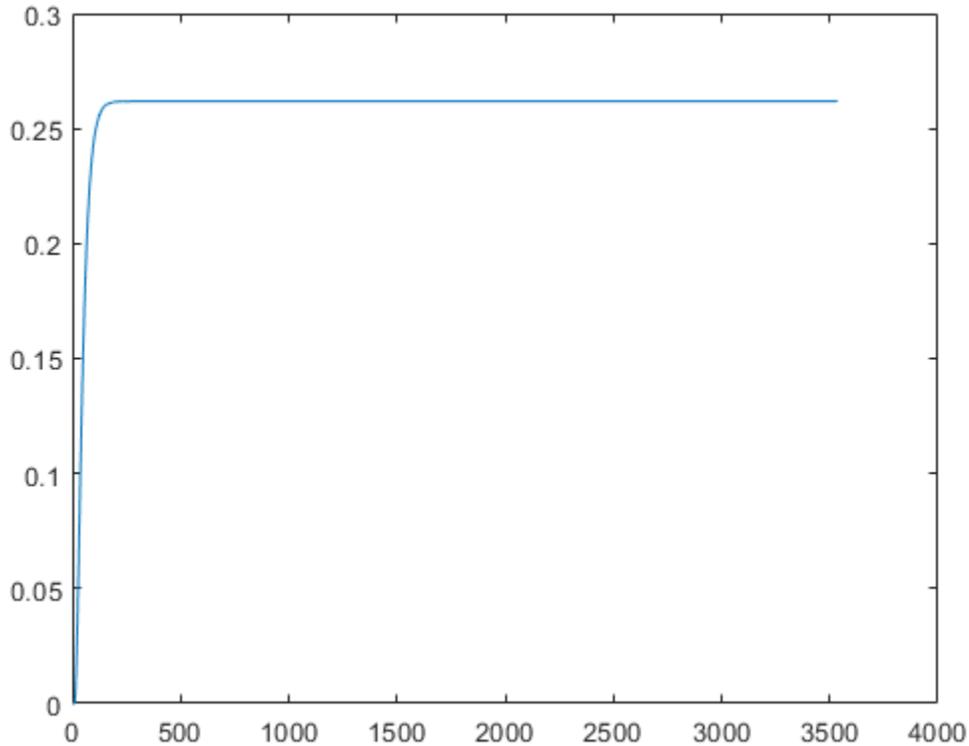


Plot the change in the Y and Z positions. With the specified thrust and roll angle, the multirotor should fly over and lose some altitude. A positive value for Z is expected as positive Z is down.

```
figure
plot(simOut.y(2,:));
hold on
plot(simOut.y(3,:));
legend('Y-position', 'Z-position')
hold off
```

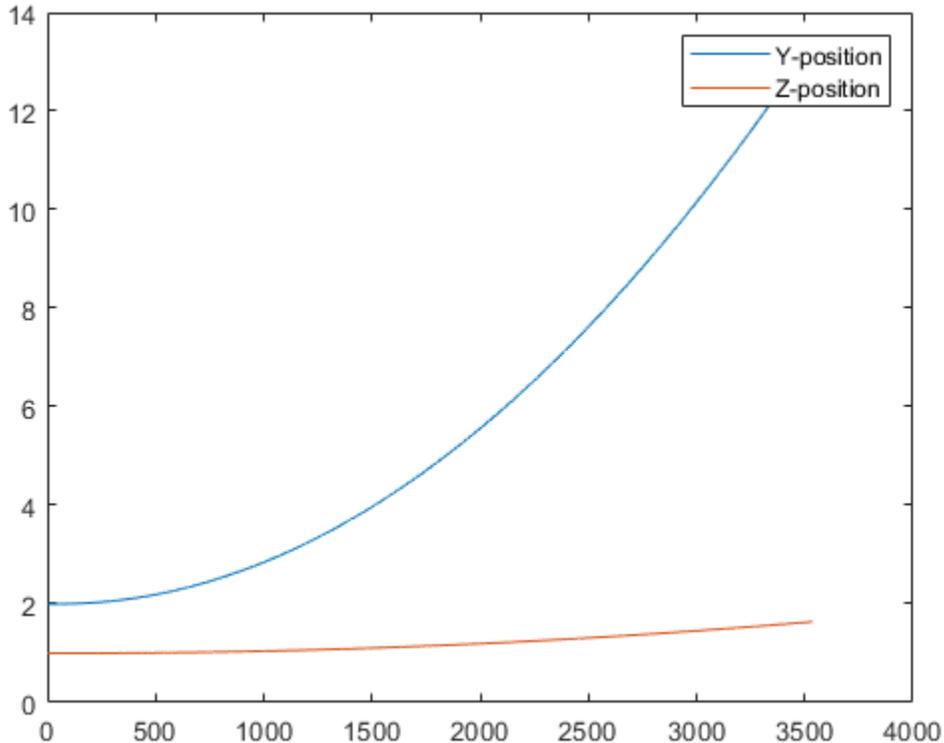

You can also plot the multirotor trajectory using `plotTransforms`. Create the translation and rotation vectors from the simulated state. Downsample (every 300th element) and transpose the `simOut` elements, and convert the Euler angles to quaternions. Specify the mesh as the `multirotor.stl` file and the positive Z-direction as "down". The displayed view shows the UAV translating in the Y-direction and losing altitude.

```
translations = simOut.y(1:3,1:300:end)'; % xyz position
rotations = eul2quat(simOut.y(7:9,1:300:end)'); % ZYX Euler
plotTransforms(translations,rotations,...
'MeshFilePath','multirotor.stl','InertialZDirection','down')
view([90.00 -0.60])
```

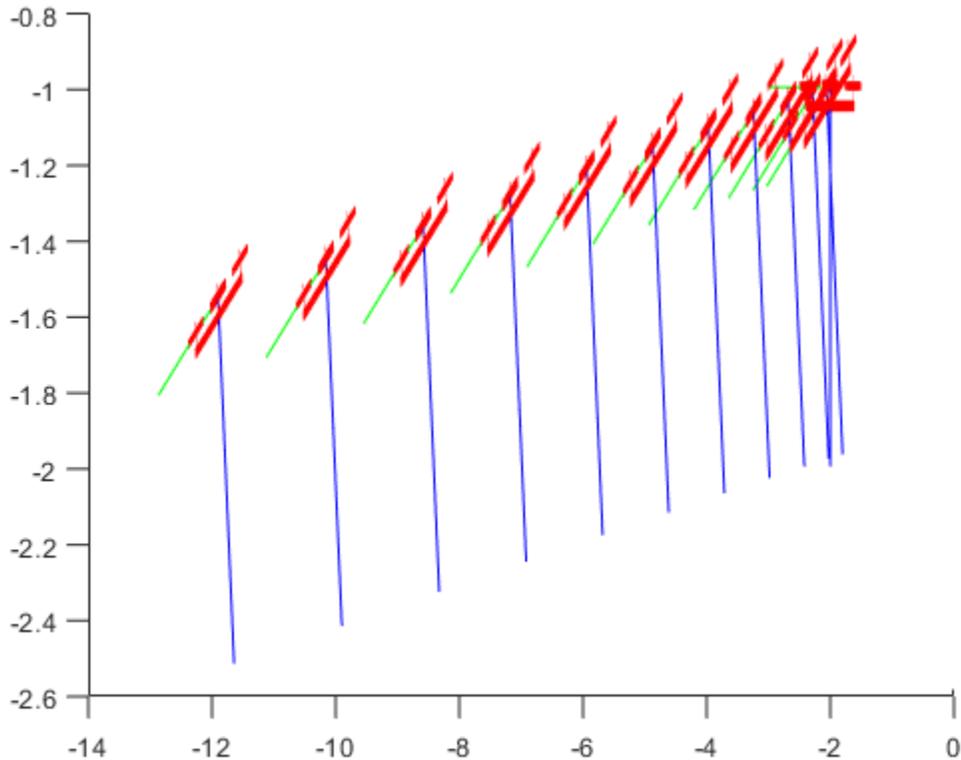

Simulate A Fixed-Wing Control Command

This example shows how to use the `fixedwing` guidance model to simulate the change in state of a UAV due to a command input.

Note: To use UAV algorithms, you must install the UAV Library for Robotics System Toolbox®. To install, use `roboticsAddons`.

Create the fixed-wing guidance model.

```
model = fixedwing;
```

Set the air speed of the vehicle by modifying the structure from the state function.

```
s = state(model);  
s(4) = 5; % 10 m/s
```

Specify a control command, `u`, that maintains the air speed and gives a roll angle of $\pi/12$.

```
u = control(model);  
u.RollAngle = pi/12;  
u.AirSpeed = 5;
```

Create a default environment without wind.

```
e = environment(model);
```

Compute the time derivative of the state given the current state, control command, and environment.

```
sdot = derivative(model,s,u,e);
```

Simulate the UAV state using `ode45` integration. The `y` field outputs the fixed-wing UAV states based on this simulation.


```
simOut = ode45(@(~,x)derivative(model,x,u,e), [0 50], s);  
size(simOut.y)
```

```
ans = 1x2
```

```
8 904
```

Plot the change in roll angle based on the simulation output. The roll angle is the 7th row of the `simOut.y` output.


```
plot(simOut.y(7,:))
```

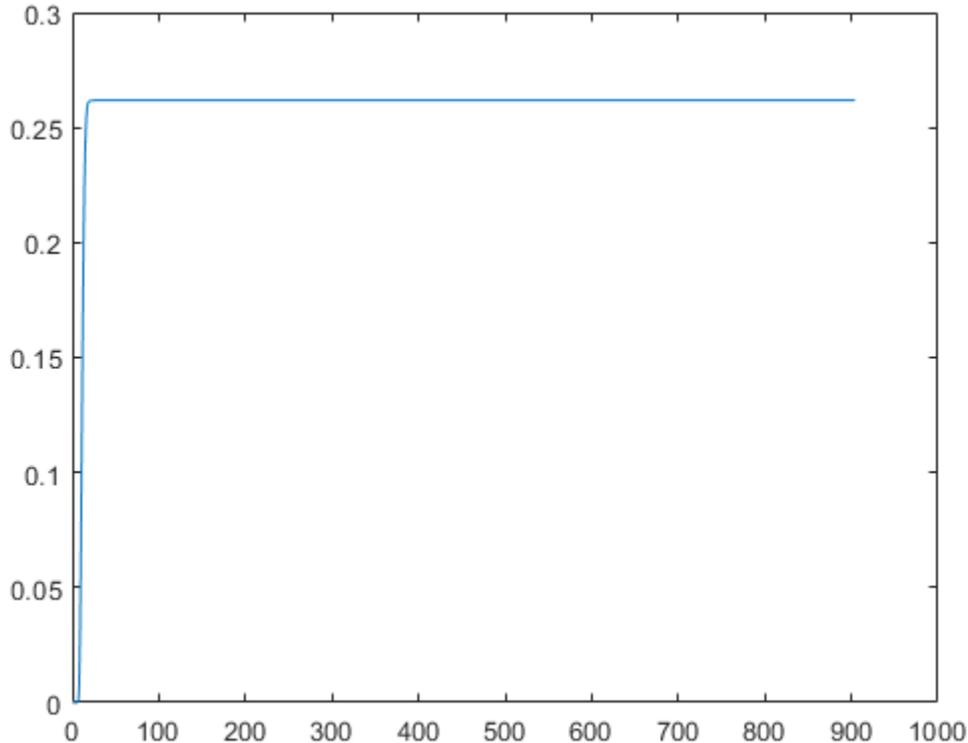

You can also plot the fixed-wing trajectory using `plotTransforms`. Create the translation and rotation vectors from the simulated state. Downsample (every 30th element) and transpose the `simOut` elements, and convert the Euler angles to quaternions. Specify the mesh as the `fixedwing.stl` file and the positive Z-direction as "down". The displayed view shows the UAV making a constant turn based on the constant roll angle.

```
downsample = 1:30:size(simOut.y,2);
translations = simOut.y(1:3,downsample)'; % xyz-position
rotations = eul2quat([simOut.y(5,downsample)',simOut.y(6,downsample)',simOut.y(7,downsample)']');
plotTransforms(translations,rotations,...
    'MeshFilePath','fixedwing.stl','InertialZDirection',"down")
hold on
plot3(simOut.y(1,:),-simOut.y(2,:),simOut.y(3,:),'--b') % full path
xlim([-10.0 10.0])
```

```
ylim([-20.0 5.0])  
zlim([-0.5 4.00])  
view([-45 90])  
hold off
```

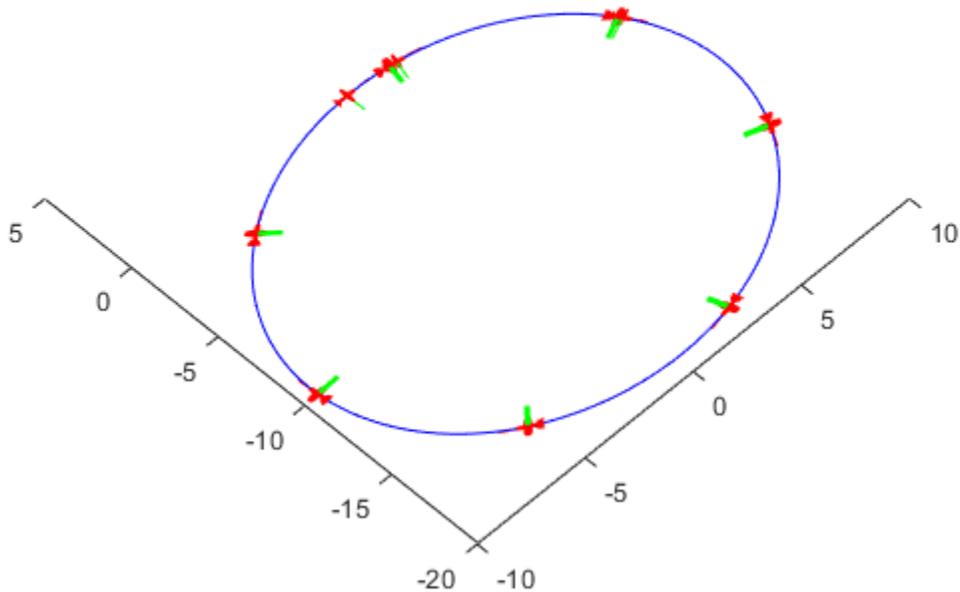

Input Arguments

uavGuidanceModel — UAV guidance model

fixedwing object | multirotor object

UAV guidance model, specified as a `fixedwing` or `multirotor` object.

Output Arguments

controlStruct — Control commands for UAV

structure

Control commands for UAV, returned as a structure.

For multirotor UAVs, the guidance model is approximated as separate PD controllers for each command. The elements of the structure are control commands:

- `Roll` - Roll angle in radians.
- `Pitch` - Pitch angle in radians.
- `YawRate` - Yaw rate in radians per second. (D = 0. P only controller)
- `Thrust` - Vertical thrust of the UAV in Newtons. (D = 0. P only controller)

For fixed-wing UAVs, the model assumes the UAV is flying under the coordinated-turn condition. The guidance model equations assume zero side-slip. The elements of the structure are:

- `Height` - Altitude above the ground in meters.
- `Airspeed` - UAV speed relative to wind in meters per second.
- `RollAngle` - Roll angle along body forward axis in radians. Because of the coordinated-turn condition, the heading angular rate is based on the roll angle.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`derivative` | `environment` | `ode45` | `plotTransforms` | `roboticsAddons` | `state`

Objects

fixedwing | multicopter

Blocks

UAV Guidance Model | Waypoint Follower

Topics

“Approximate High-Fidelity UAV model with UAV Guidance Model block”

“Tuning Waypoint Follower for Fixed-Wing UAV”

Introduced in R2018b

ctranspose, '

Complex conjugate transpose of quaternion array

Syntax

```
quatTransposed = quat'
```

Description

`quatTransposed = quat'` returns the complex conjugate transpose of the quaternion, `quat`.

Examples

Vector Complex Conjugate Transpose

Create a vector of quaternions and compute its complex conjugate transpose.

```
quat = quaternion(randn(4,4))
```

```
quat=4×1 object
```

```
0.53767 + 0.31877i + 3.5784j + 0.7254k  
1.8339 - 1.3077i + 2.7694j - 0.063055k  
-2.2588 - 0.43359i - 1.3499j + 0.71474k  
0.86217 + 0.34262i + 3.0349j - 0.20497k
```

```
quatTransposed = quat'
```

```
quatTransposed=1×4 object
```

```
0.53767 - 0.31877i - 3.5784j - 0.7254k      1.8339 + 1.3077i - 2.7694j
```

Matrix Complex Conjugate Transpose

Create a matrix of quaternions and compute its complex conjugate transpose.

```
quat = [quaternion(randn(2,4)), quaternion(randn(2,4))]
```

```
quat=2x2 object
```

```
0.53767 - 2.2588i + 0.31877j - 0.43359k      3.5784 - 1.3499i + 0.7254j
1.8339 + 0.86217i - 1.3077j + 0.34262k      2.7694 + 3.0349i - 0.063055j
```

```
quatTransposed = quat'
```

```
quatTransposed=2x2 object
```

```
0.53767 + 2.2588i - 0.31877j + 0.43359k      1.8339 - 0.86217i + 1.3077j
3.5784 + 1.3499i - 0.7254j - 0.71474k      2.7694 - 3.0349i + 0.063055j
```

Input Arguments

quat — Quaternion to transpose

scalar | vector | matrix

Quaternion to transpose, specified as a vector or matrix or quaternions. The complex conjugate transpose is defined for 1-D and 2-D arrays.

Data Types: quaternion

Output Arguments

quatTransposed — Conjugate transposed quaternion

scalar | vector | matrix

Conjugate transposed quaternion, returned as an N -by- M array, where `quat` was specified as an M -by- N array.

Data Types: quaternion

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

cubicpolytraj

Generate third-order polynomial trajectories

Syntax

```
[q,qd,qdd,pp] = cubicpolytraj(wayPoints,timePoints,tSamples)  
[q,qd,qdd,pp] = cubicpolytraj( ____,Name,Value)
```

Description

`[q,qd,qdd,pp] = cubicpolytraj(wayPoints,timePoints,tSamples)` generates a third-order polynomial that achieves a given set of input waypoints with corresponding time points. The function outputs positions, velocities, and accelerations at the given time samples, `tSamples`. The function also returns the piecewise polynomial `pp` form of the polynomial trajectory with respect to time.

`[q,qd,qdd,pp] = cubicpolytraj(____,Name,Value)` specifies additional parameters as `Name,Value` pair arguments using any combination of the previous syntaxes.

Examples

Compute Cubic Trajectory for 2-D Planar Motion

Use the `cubicpolytraj` function with a given set of 2-D `xy` waypoints. Time points for the waypoints are also given.

```
wpts = [1 4 4 3 -2 0; 0 1 2 4 3 1];  
tpts = 0:5;
```

Specify a time vector for sampling the trajectory. Sample at a smaller interval than the specified time points.


```
tvec = 0:0.01:5;
```

Compute the cubic trajectory. The function outputs the trajectory positions (q), velocity ($q\dot{d}$), acceleration ($q\ddot{d}$), and polynomial coefficients (pp) of the cubic polynomial.

```
[q, qd, qdd, pp] = cubicpolytraj(wpts, tpts, tvec);
```


Plot the cubic trajectories for the x - and y -positions. Compare the trajectory with each waypoint.

```
plot(tvec, q)
hold all
plot(tpts, wpts, 'x')
xlabel('t')
ylabel('Positions')
legend('X-positions', 'Y-positions')
hold off
```

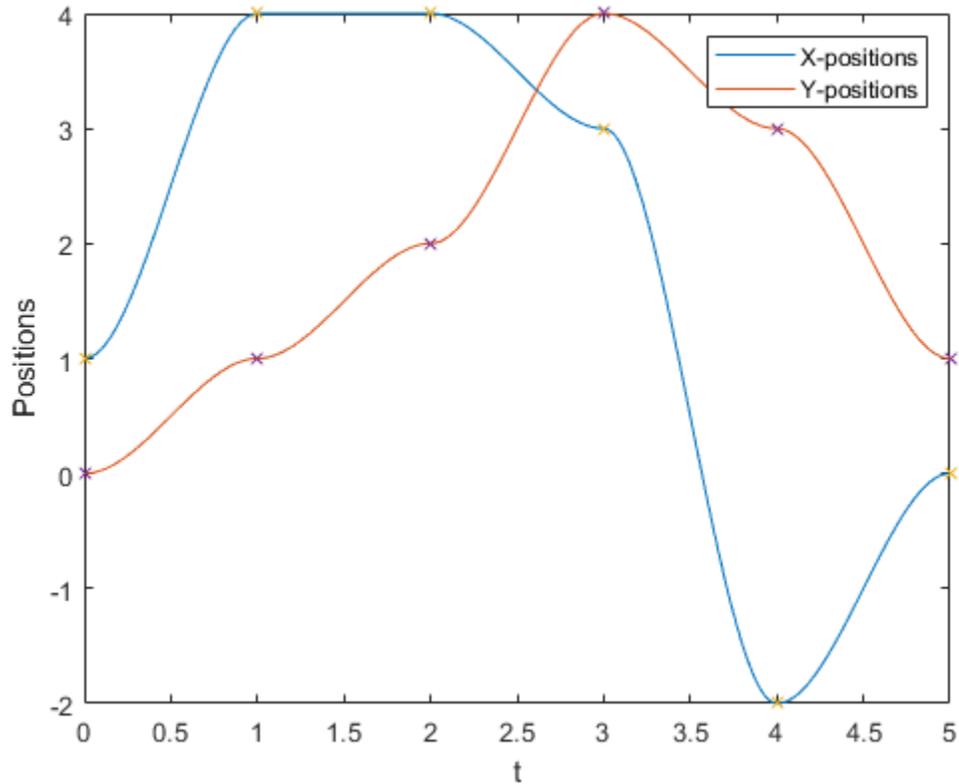

You can also verify the actual positions in the 2-D plane. Plot the separate rows of the q vector and the waypoints as x - and y -positions.

```
figure
plot(q(1,:),q(2,:), '-b', wpts(1,:),wpts(2,:), 'or')
xlabel('X')
ylabel('Y')
```

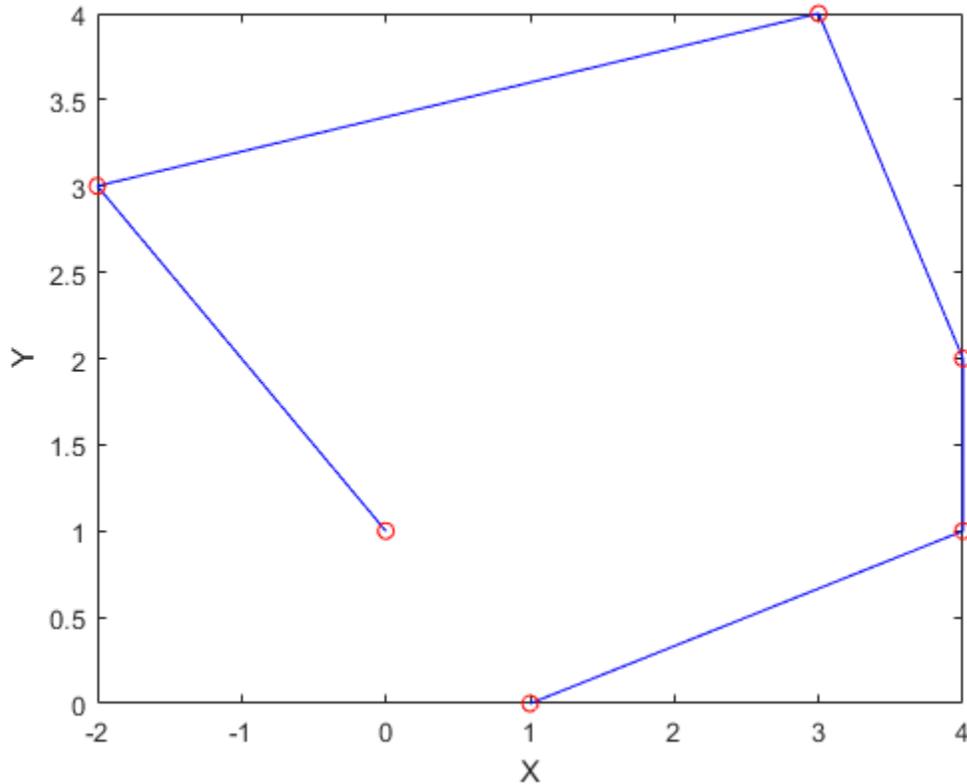

Input Arguments

wayPoints — Waypoints for trajectory

n-by-*p* matrix

Points for waypoints of trajectory, specified as an *n*-by-*p* matrix, where *n* is the dimension of the trajectory and *p* is the number of waypoints.

Example: [1 4 4 3 -2 0; 0 1 2 4 3 1]

Data Types: single | double

timesteps — Time points for waypoints of trajectory*p*-element vectorTime points for waypoints of trajectory, specified as a *p*-element vector.

Example: [0 2 4 5 8 10]

Data Types: single | double

tSamples — Time samples for trajectory*m*-element vectorTime samples for the trajectory, specified as an *m*-element vector. The output position, *q*, velocity, *qd*, and accelerations, *qdd*, are sampled at these time intervals.

Example: 0:0.01:10

Data Types: single | double

Name-Value Pair ArgumentsSpecify optional comma-separated pairs of *Name*, *Value* arguments. *Name* is the argument name and *Value* is the corresponding value. *Name* must appear inside quotes. You can specify several name and value pair arguments in any order as *Name1*, *Value1*, ..., *NameN*, *ValueN*.

Example: 'VelocityBoundaryCondition',[1 0 -1 -1 0 0; 1 1 1 -1 -1 -1]

VelocityBoundaryCondition — Velocity boundary conditions for each waypoint*zeroes*(*n*,*p*) (default) | *n*-by-*p* matrixVelocity boundary conditions for each waypoint, specified as the comma-separated pair consisting of 'VelocityBoundaryCondition' and an *n*-by-*p* matrix. Each row corresponds to the velocity at all *p* waypoints for the respective variable in the trajectory.

Example: [1 0 -1 -1 0 0; 1 1 1 -1 -1 -1]

Data Types: single | double

Output Arguments**q** — Positions of trajectory*m*-element vector

Positions of the trajectory at the given time samples in `tSamples`, returned as an m -element vector, where m is the length of `tSamples`.

Data Types: `single` | `double`

qd — Velocities of trajectory

vector

Velocities of the trajectory at the given time samples in `tSamples`, returned as a vector.

Data Types: `single` | `double`

qdd — Accelerations of trajectory

vector

Accelerations of the trajectory at the given time samples in `tSamples`, returned as a vector.

Data Types: `single` | `double`

pp — Piecewise-polynomial

structure

Piecewise-polynomial, returned as a structure that defines the polynomial for each section of the piecewise trajectory. You can build your own piecewise polynomials using `mkpp`, or evaluate the polynomial at specified times using `ppval`. The structure contains the fields:

- `form`: 'pp'.
- `breaks`: p -element vector of times when the piecewise trajectory changes forms. p is the number of waypoints.
- `coefs`: $n(p-1)$ -by-order matrix for the coefficients for the polynomials. $n(p-1)$ is the dimension of the trajectory times the number of pieces. Each set of n rows defines the coefficients for the polynomial that described each variable trajectory.
- `pieces`: $p-1$. The number of breaks minus 1.
- `order`: Degree of the polynomial + 1. For example, cubic polynomials have an order of 4.
- `dim`: n . The dimension of the control point positions.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

[bsplinepolytraj](#) | [quinticpolytraj](#) | [rottraj](#) | [transformtraj](#) | [trapveltraj](#)

Introduced in R2019a

derivative

Package: robotics

Time derivative of UAV states

Syntax

```
stateDerivative = derivative(uavGuidanceModel, state, control,  
environment)
```

Description

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

`stateDerivative = derivative(uavGuidanceModel, state, control, environment)` determines the time derivative of the state of the UAV guidance model using the current state, control commands, and environmental inputs. Use the state and time derivative with `ode45` to simulate the UAV.

Examples

Simulate A Multirotor Control Command

This example shows how to use the `multirotor` guidance model to simulate the change in state of a UAV due to a command input.

Note: To use UAV algorithms, you must install the UAV Library for Robotics System Toolbox®. To install, use `roboticsAddons`.

Create the multirotor guidance model.

```
model = multirotor;
```

Create a state structure. Specify the location in world coordinates.

```
s = state(model);
s(1:3) = [3;2;1];
```

Specify a control command, *u*, that specified the roll and thrust of the multirotor.

```
u = control(model);
u.Roll = pi/12;
u.Thrust = 1;
```

Create a default environment without wind.

```
e = environment(model);
```

Compute the time derivative of the state given the current state, control command, and environment.

```
sdot = derivative(model,s,u,e);
```

Simulate the UAV state using `ode45` integration. The *y* field outputs the fixed-wing UAV states as a 13-by-*n* matrix.


```
simOut = ode45(@(~,x)derivative(model,x,u,e), [0 3], s);
size(simOut.y)
```

```
ans = 1×2
```

```
13      3536
```


Plot the change in roll angle based on the simulation output. The roll angle (the X Euler angle) is the 9th row of the `simOut.y` output.

```
plot(simOut.y(9,:))
```

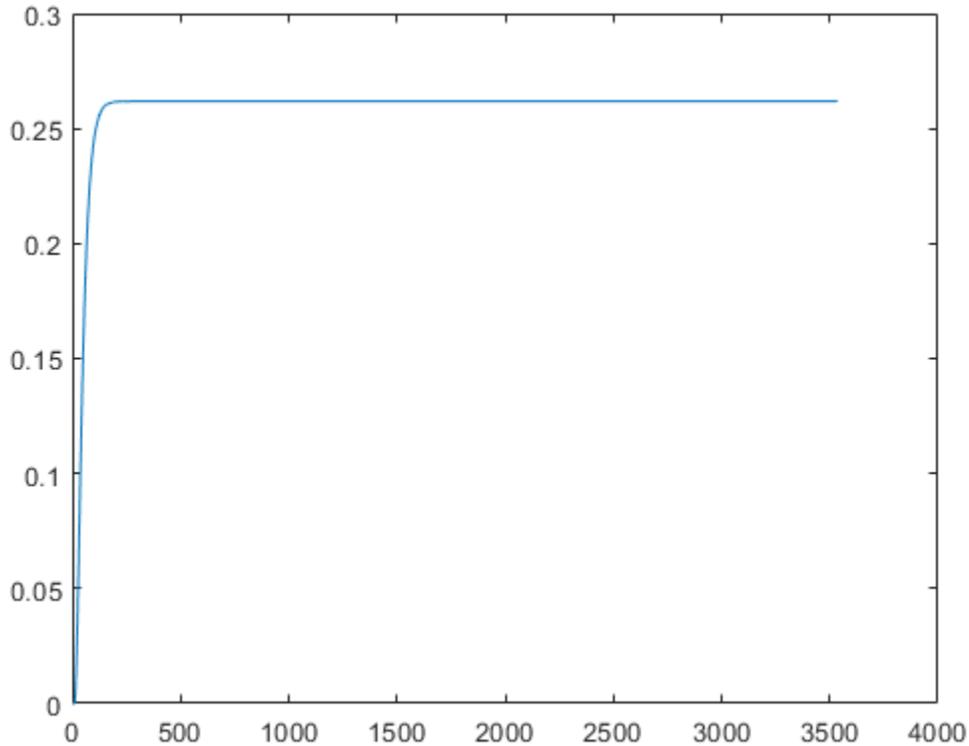


Plot the change in the Y and Z positions. With the specified thrust and roll angle, the multirotor should fly over and lose some altitude. A positive value for Z is expected as positive Z is down.

```
figure
plot(simOut.y(2,:));
hold on
plot(simOut.y(3,:));
legend('Y-position', 'Z-position')
hold off
```

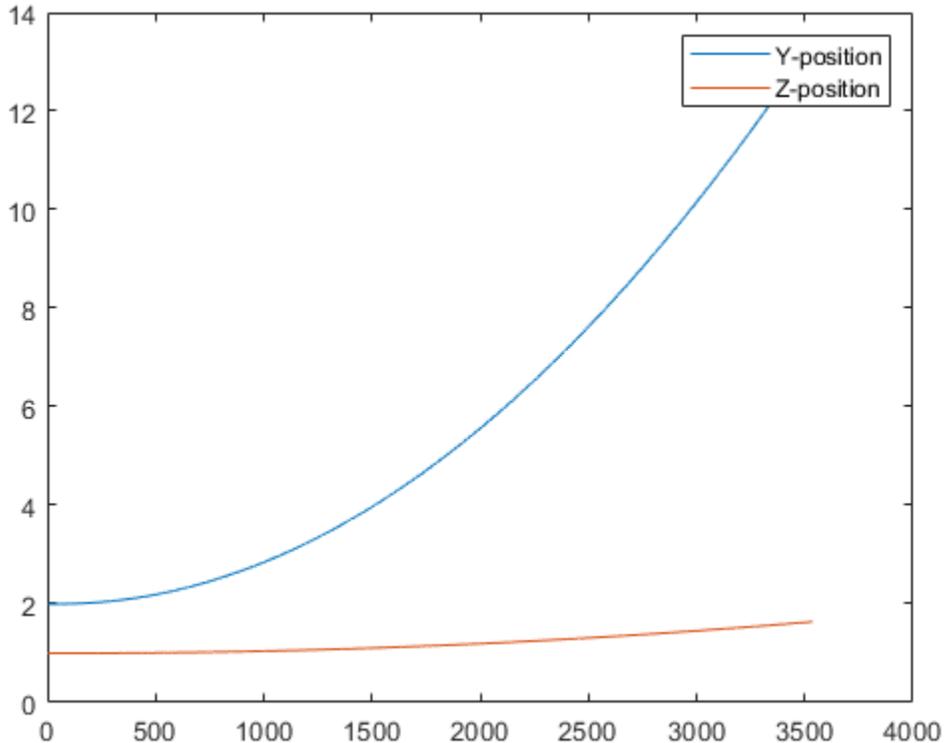

You can also plot the multirotor trajectory using `plotTransforms`. Create the translation and rotation vectors from the simulated state. Downsample (every 300th element) and transpose the `simOut` elements, and convert the Euler angles to quaternions. Specify the mesh as the `multirotor.stl` file and the positive Z-direction as "down". The displayed view shows the UAV translating in the Y-direction and losing altitude.

```
translations = simOut.y(1:3,1:300:end)'; % xyz position
rotations = eul2quat(simOut.y(7:9,1:300:end)'); % ZYX Euler
plotTransforms(translations,rotations,...
'MeshFilePath','multirotor.stl','InertialZDirection','down')
view([90.00 -0.60])
```

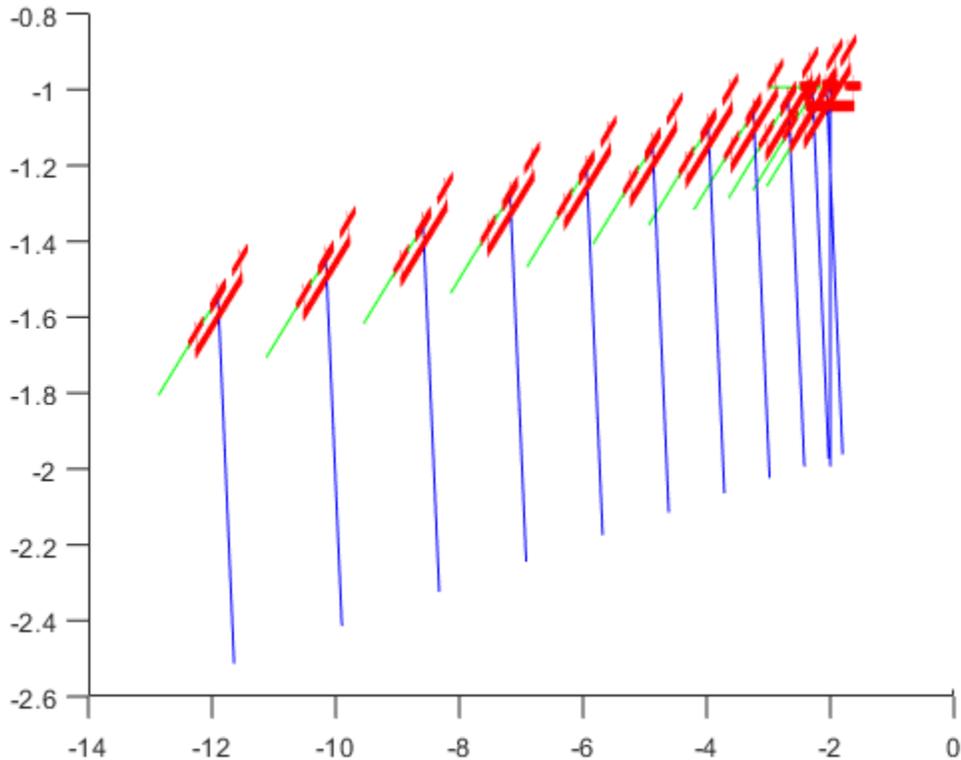

Simulate A Fixed-Wing Control Command

This example shows how to use the `fixedwing` guidance model to simulate the change in state of a UAV due to a command input.

Note: To use UAV algorithms, you must install the UAV Library for Robotics System Toolbox®. To install, use `roboticsAddons`.

Create the fixed-wing guidance model.

```
model = fixedwing;
```

Set the air speed of the vehicle by modifying the structure from the state function.

```
s = state(model);  
s(4) = 5; % 10 m/s
```

Specify a control command, `u`, that maintains the air speed and gives a roll angle of $\pi/12$.

```
u = control(model);  
u.RollAngle = pi/12;  
u.AirSpeed = 5;
```

Create a default environment without wind.

```
e = environment(model);
```

Compute the time derivative of the state given the current state, control command, and environment.

```
sdot = derivative(model,s,u,e);
```

Simulate the UAV state using `ode45` integration. The `y` field outputs the fixed-wing UAV states based on this simulation.


```
simOut = ode45(@(~,x)derivative(model,x,u,e), [0 50], s);  
size(simOut.y)
```

```
ans = 1x2
```

```
8 904
```

Plot the change in roll angle based on the simulation output. The roll angle is the 7th row of the `simOut.y` output.

```
plot(simOut.y(7,:))
```

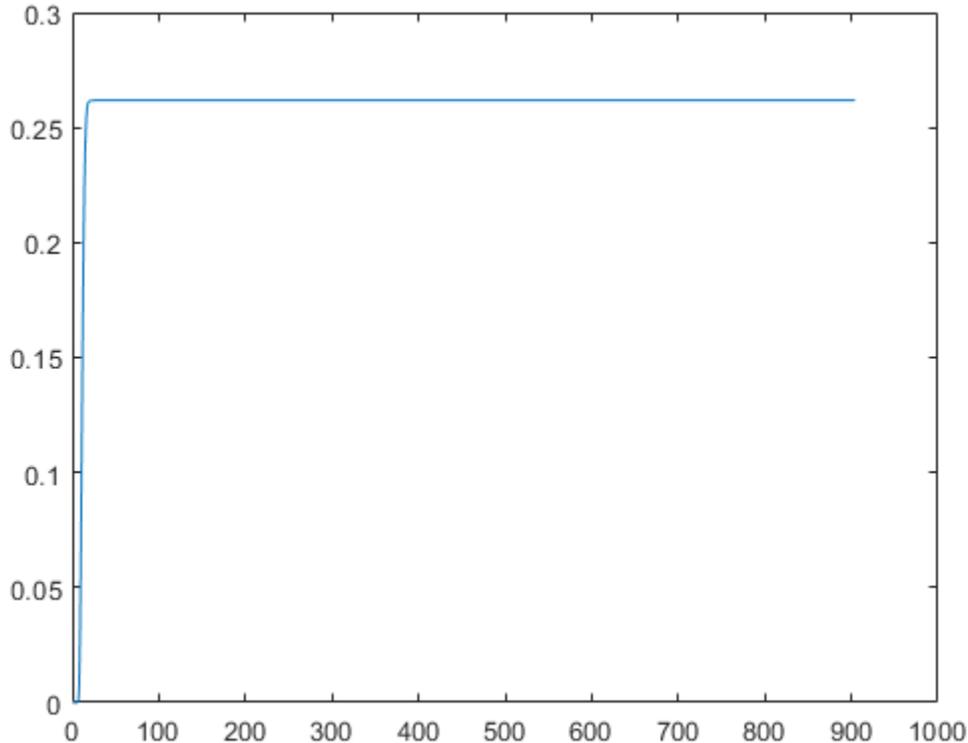


You can also plot the fixed-wing trajectory using `plotTransforms`. Create the translation and rotation vectors from the simulated state. Downsample (every 30th element) and transpose the `simOut` elements, and convert the Euler angles to quaternions. Specify the mesh as the `fixedwing.stl` file and the positive Z-direction as "down". The displayed view shows the UAV making a constant turn based on the constant roll angle.

```

downsample = 1:30:size(simOut.y,2);
translations = simOut.y(1:3,downsample)'; % xyz-position
rotations = eul2quat([simOut.y(5,downsample)',simOut.y(6,downsample)',simOut.y(7,downsample)']');
plotTransforms(translations,rotations,...
    'MeshFilePath','fixedwing.stl','InertialZDirection',"down")
hold on
plot3(simOut.y(1,:),-simOut.y(2,:),simOut.y(3,:),'--b') % full path
xlim([-10.0 10.0])

```

```
ylim([-20.0 5.0])  
zlim([-0.5 4.00])  
view([-45 90])  
hold off
```

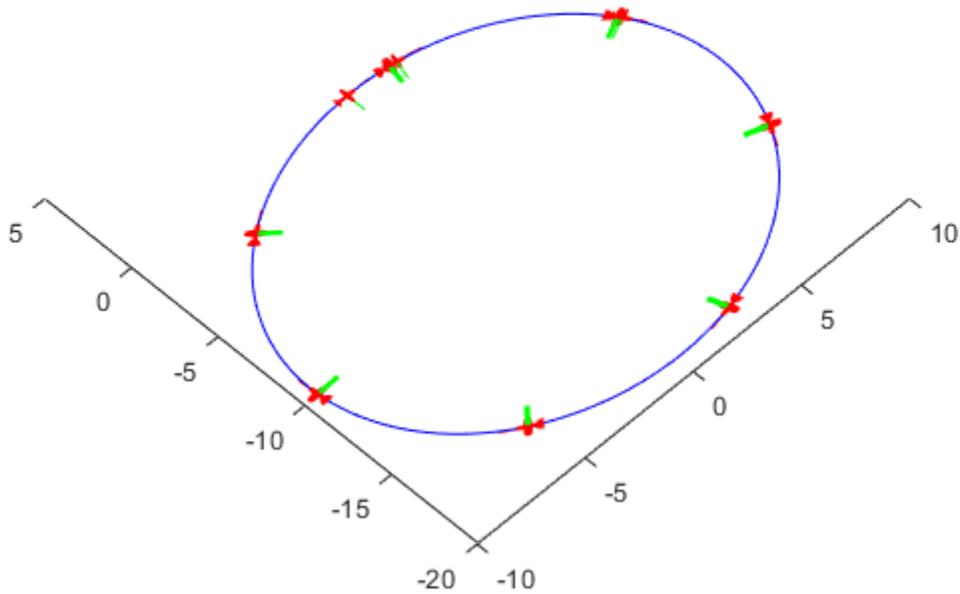

Input Arguments

uavGuidanceModel — UAV guidance model

fixedwing object | multirotor object

UAV guidance model, specified as a `fixedwing` or `multirotor` object.

state — State vector

eight-element vector | thirteen-element vector

State vector, specified as a eight-element or thirteen-element vector. The vector is always filled with zeros. Use this function to ensure you have the proper size for your state vector.

For fixed-wing UAVs, the state is an eight-element vector:

- **North** - Position in north direction in meters.
- **East** - Position in east direction in meters.
- **Height** - Height above ground in meters.
- **AirSpeed** - Speed relative to wind in meters per second.
- **HeadingAngle** - Angle between ground velocity and north direction in radians per second.
- **FlightPathAngle** - Angle between ground velocity and north-east plane in meters per second.
- **RollAngle** - Angle of rotation along body x-axis in radians per second.
- **RollAngleRate** - Angular velocity of rotation along body x-axis in radians per second.

For multirotor UAVs, the state is a thirteen-element vector in this order:

- **World Position** - [x y z] in meters.
- **World Velocity** - [vx vy vz] in meters per second.
- **Euler Angles (ZYX)** - [psi theta phi] in radians.
- **Body Angular Rates** - [r p q] in radians per second.
- **Thrust** - F in Newtons.

environment — Environmental input parameters

structure

Environmental input parameters, returned as a structure. To generate this structure, use `environment`.

For fixed-wing UAVs, the fields of the structure are `WindNorth`, `WindEast`, `WindDown`, and `Gravity`. Wind speeds are in meters per second, and negative speeds point in the opposite direction. Gravity is in meters per second squared (default 9.81).

For multirotor UAVs, the only element of the structure is `Gravity` (default 9.81) in meters per second squared.

control — Control commands for UAV

structure

Control commands for UAV, specified as a structure. To generate this structure, use `control`.

For multirotor UAVs, the guidance model is approximated as separate PD controllers for each command. The elements of the structure are control commands:

- `Roll` - Roll angle in radians.
- `Pitch` - Pitch angle in radians.
- `YawRate` - Yaw rate in radians per second. (D = 0. P only controller)
- `Thrust` - Vertical thrust of the UAV in Newtons. (D = 0. P only controller)

For fixed-wing UAVs, the model assumes the UAV is flying under the coordinated-turn condition. The Guidance Model equations assume zero side-slip. The elements of the bus are:

- `Height` - Altitude above the ground in meters.
- `Airspeed` - UAV speed relative to wind in meters per second.
- `RollAngle` - Roll angle along body forward axis in radians. Because of the coordinated-turn condition, the heading angular rate is based on the roll angle.

Output Arguments

stateDerivative — Time derivative of state

vector

Time derivative of state, returned as a vector. The time derivative vector has the same length as the input state.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`control` | `derivative` | `environment` | `ode45` | `plotTransforms` | `roboticsAddons` | `state`

Objects

`fixedwing` | `multirotor`

Blocks

UAV Guidance Model | Waypoint Follower

Topics

“Approximate High-Fidelity UAV model with UAV Guidance Model block”

“Tuning Waypoint Follower for Fixed-Wing UAV”

Introduced in R2018b

dist

Angular distance in radians

Syntax

```
distance = dist(quatA,quatB)
```

Description

`distance = dist(quatA,quatB)` returns the angular distance in radians between the quaternion rotation operators for `quatA` and `quatB`.

Examples

Calculate Quaternion Distance

Calculate the quaternion distance between a single quaternion and each element of a vector of quaternions. Define the quaternions using Euler angles.

```
q = quaternion([0,0,0], 'eulerd', 'zyx', 'frame')
```

```
q = quaternion
    1 + 0i + 0j + 0k
```

```
qArray = quaternion([0,45,0;0,90,0;0,180,0;0,-90,0;0,-45,0], 'eulerd', 'zyx', 'frame')
```

```
qArray = 5x1 quaternion array
    0.92388 +          0i +    0.38268j +          0k
    0.70711 +          0i +    0.70711j +          0k
    6.1232e-17 +        0i +          1j +          0k
    0.70711 +          0i -    0.70711j +          0k
    0.92388 +          0i -    0.38268j +          0k
```

```
quaternionDistance = rad2deg(dist(q,qArray))
quaternionDistance = 5×1

45.0000
90.0000
180.0000
90.0000
45.0000
```

If both arguments to `dist` are vectors, the quaternion distance is calculated between corresponding elements. Calculate the quaternion distance between two quaternion vectors.

```
angles1 = [30,0,15; ...
           30,5,15; ...
           30,10,15; ...
           30,15,15];
angles2 = [30,6,15; ...
           31,11,15; ...
           30,16,14; ...
           30.5,21,15.5];

qVector1 = quaternion(angles1,'eulerd','zyx','frame');
qVector2 = quaternion(angles2,'eulerd','zyx','frame');

rad2deg(dist(qVector1,qVector2))

ans = 4×1

6.0000
6.0827
6.0827
6.0287
```

Note that a quaternion represents the same rotation as its negative. Calculate a quaternion and its negative.

```
qPositive = quaternion([30,45,-60],'eulerd','zyx','frame')
qPositive = quaternion
0.72332 - 0.53198i + 0.20056j + 0.3919k
```

```
qNegative = -qPositive
```

```
qNegative = quaternion
    -0.72332 + 0.53198i - 0.20056j - 0.3919k
```

Find the distance between the quaternion and its negative.

```
dist(qPositive,qNegative)
```

```
ans = 0
```

The components of a quaternion may look different from the components of its negative, but both expressions represent the same rotation.

Input Arguments

quatA, quatB — Quaternions to calculate distance between

scalar | vector | matrix | multidimensional array

Quaternions to calculate distance between, specified as comma-separated quaternions or arrays of quaternions. `quatA` and `quatB` must have compatible sizes:

- `size(quatA) == size(quatB)`, or
- `numel(quatA) == 1`, or
- `numel(quatB) == 1`, or
- if `[Adim1,...,AdimN] = size(quatA)` and `[Bdim1,...,BdimN] = size(quatB)`, then for `i = 1:N`, either `Adimi==Bdimi` or `Adim==1` or `Bdim==1`.

If one of the quaternion arguments contains only one quaternion, then this function returns the distances between that quaternion and every quaternion in the other argument.

Data Types: quaternion

Output Arguments

distance — Angular distance (radians)

scalar | vector | matrix | multidimensional array

Angular distance in radians, returned as an array. The dimensions are the maximum of the union of `size(quatA)` and `size(quatB)`.


Data Types: `single` | `double`

Algorithms

The `dist` function returns the angular distance between two quaternion rotation operators.

A quaternion may be defined by an axis (u_b, u_c, u_d) and angle of rotation θ_q :

$$q = \cos\left(\frac{\theta_q}{2}\right) + \sin\left(\frac{\theta_q}{2}\right)(u_b i + u_c j + u_d k).$$

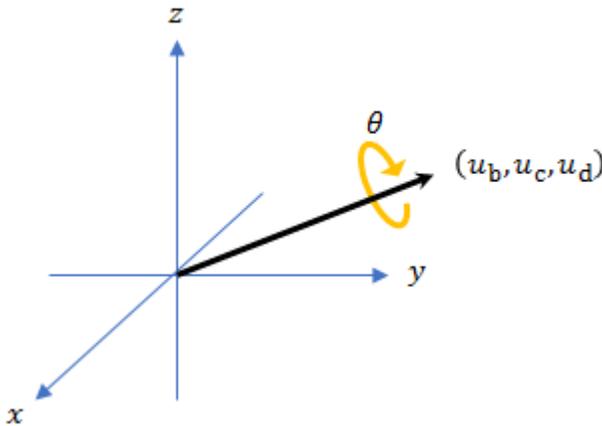

Given a quaternion in the form, $q = a + bi + cj + dk$, where a is the real part, you can solve for θ_q : $\theta_q = 2\cos^{-1}(a)$.

Consider two quaternions, p and q , and the product $z = p * \text{conjugate}(q)$. In a rotation operator, z rotates by p and derotates by q . As p approaches q , the angle of z goes to 0, and the product approaches the unit quaternion.

The angular distance between two quaternions can be expressed as $\theta_z = 2\cos^{-1}(\text{real}(z))$.

Using the quaternion data type syntax, angular distance is calculated as:

```
angularDistance = 2*acos(parts(p*conj(q)));
```

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

eul2quat

Convert Euler angles to quaternion

Syntax

```
quat = eul2quat(eul)
quat = eul2quat(eul, sequence)
```

Description

`quat = eul2quat(eul)` converts a given set of Euler angles, `eul`, to the corresponding quaternion, `quat`. The default order for Euler angle rotations is "ZYX".

`quat = eul2quat(eul, sequence)` converts a set of Euler angles into a quaternion. The Euler angles are specified in the axis rotation sequence, `sequence`. The default order for Euler angle rotations is "ZYX".

Examples

Convert Euler Angles to Quaternion

```
eul = [0 pi/2 0];
qZYX = eul2quat(eul)
```

```
qZYX = 1×4
```

```
    0.7071         0    0.7071         0
```

Convert Euler Angles to Quaternion Using Default ZYZ Axis Order

```
eul = [pi/2 0 0];
qZYZ = eul2quat(eul, 'ZYZ')

qZYZ = 1x4

    0.7071         0         0         0.7071
```

Input Arguments

eul — Euler rotation angles

n-by-3 matrix

Euler rotation angles in radians, specified as an *n*-by-3 array of Euler rotation angles. Each row represents one Euler angle set.

Example: [0 0 1.5708]

sequence — Axis rotation sequence

"ZYX" (default) | "ZYZ" | "XYZ"

Axis rotation sequence for the Euler angles, specified as one of these string scalars:

- "ZYX" (default) - The order of rotation angles is *z*-axis, *y*-axis, *x*-axis.
- "ZYZ" - The order of rotation angles is *z*-axis, *y*-axis, *z*-axis.
- "XYZ" - The order of rotation angles is *x*-axis, *y*-axis, *z*-axis.

Data Types: string | char

Output Arguments

quat — Unit quaternion

n-by-4 matrix

Unit quaternion, returned as an *n*-by-4 matrix containing *n* quaternions. Each quaternion, one per row, is of the form $q = [w \ x \ y \ z]$, with *w* as the scalar number.

Example: [0.7071 0.7071 0 0]

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

quat2eul | quaternion

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

eul2rotm

Convert Euler angles to rotation matrix

Syntax

```
rotm = eul2rotm(eul)
rotm = eul2rotm(eul,sequence)
```

Description

`rotm = eul2rotm(eul)` converts a set of Euler angles, `eul`, to the corresponding rotation matrix, `rotm`. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying). The default order for Euler angle rotations is "ZYX".

`rotm = eul2rotm(eul,sequence)` converts Euler angles to a rotation matrix, `rotm`. The Euler angles are specified in the axis rotation sequence, `sequence`. The default order for Euler angle rotations is "ZYX".

Examples

Convert Euler Angles to Rotation Matrix

```
eul = [0 pi/2 0];
rotmZYX = eul2rotm(eul)
```

```
rotmZYX = 3×3
```

```
    0.0000    0    1.0000
         0    1.0000    0
   -1.0000    0    0.0000
```

Convert Euler Angles to Rotation Matrix Using ZYZ Axis Order

```
eul = [0 pi/2 pi/2];  
rotmZYZ = eul2rotm(eul, 'ZYZ')
```

```
rotmZYZ = 3×3
```

```
    0.0000    -0.0000    1.0000  
    1.0000     0.0000     0  
   -0.0000     1.0000     0.0000
```

Input Arguments

eul — Euler rotation angles

n-by-3 matrix

Euler rotation angles in radians, specified as an *n*-by-3 array of Euler rotation angles. Each row represents one Euler angle set.

Example: [0 0 1.5708]

sequence — Axis rotation sequence

"ZYX" (default) | "ZYZ" | "XYZ"

Axis rotation sequence for the Euler angles, specified as one of these string scalars:

- "ZYX" (default) - The order of rotation angles is *z*-axis, *y*-axis, *x*-axis.
- "ZYZ" - The order of rotation angles is *z*-axis, *y*-axis, *z*-axis.
- "XYZ" - The order of rotation angles is *x*-axis, *y*-axis, *z*-axis.

Data Types: string | char

Output Arguments

rotm — Rotation matrix

3-by-3-by-*n* matrix

Rotation matrix, returned as a 3-by-3-by- n matrix containing n rotation matrices. Each rotation matrix has a size of 3-by-3 and is orthonormal. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Example: $[0 \ 0 \ 1; \ 0 \ 1 \ 0; \ -1 \ 0 \ 0]$

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

rotm2eul

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

eul2tform

Convert Euler angles to homogeneous transformation

Syntax

```
eul = eul2tform(eul)
tform = eul2tform(eul,sequence)
```

Description

`eul = eul2tform(eul)` converts a set of Euler angles, `eul`, into a homogeneous transformation matrix, `tform`. When using the transformation matrix, premultiply it with the coordinates to be transformed (as opposed to postmultiplying). The default order for Euler angle rotations is "ZYX".

`tform = eul2tform(eul,sequence)` converts Euler angles to a homogeneous transformation. The Euler angles are specified in the axis rotation sequence, `sequence`. The default order for Euler angle rotations is "ZYX".

Examples

Convert Euler Angles to Homogeneous Transformation Matrix

```
eul = [0 pi/2 0];
tformZYX = eul2tform(eul)
```

```
tformZYX = 4x4
```

```
    0.0000         0    1.0000         0
         0    1.0000         0         0
   -1.0000         0    0.0000         0
         0         0         0    1.0000
```

Convert Euler Angles to Homogeneous Transformation Matrix Using ZYZ Axis Order

```
eul = [0 pi/2 pi/2];
tformZYZ = eul2tform(eul, 'ZYZ')
```

```
tformZYZ = 4x4
```

```
    0.0000    -0.0000    1.0000         0
    1.0000     0.0000         0         0
   -0.0000     1.0000     0.0000         0
         0         0         0     1.0000
```

Input Arguments

eul — Euler rotation angles

n-by-3 matrix

Euler rotation angles in radians, specified as an *n*-by-3 array of Euler rotation angles. Each row represents one Euler angle set.

Example: [0 0 1.5708]

sequence — Axis rotation sequence

"ZYX" (default) | "ZYZ" | "XYZ"

Axis rotation sequence for the Euler angles, specified as one of these string scalars:

- "ZYX" (default) - The order of rotation angles is *z*-axis, *y*-axis, *x*-axis.
- "ZYZ" - The order of rotation angles is *z*-axis, *y*-axis, *z*-axis.
- "XYZ" - The order of rotation angles is *x*-axis, *y*-axis, *z*-axis.

Data Types: string | char

Output Arguments

tform — Homogeneous transformation

4-by-4-by- n matrix

Homogeneous transformation matrix, specified by a 4-by-4-by- n matrix of n homogeneous transformations. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Example: `[0 0 1 0; 0 1 0 0; -1 0 0 0; 0 0 0 1]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`tform2eul`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

euler

Convert quaternion to Euler angles (radians)

Syntax

```
eulerAngles = euler(quat, rotationSequence, rotationType)
```

Description

`eulerAngles = euler(quat, rotationSequence, rotationType)` converts the quaternion, `quat`, to an N -by-3 matrix of Euler angles.

Examples

Convert Quaternion to Euler Angles in Radians

Convert a quaternion frame rotation to Euler angles in radians using the 'ZYX' rotation sequence.

```
quat = quaternion([0.7071 0.7071 0 0]);  
eulerAnglesRadians = euler(quat, 'ZYX', 'frame')
```

```
eulerAnglesRadians = 1×3  
    0         0    1.5708
```

Input Arguments

quat — Quaternion to convert to Euler angles

scalar | vector | matrix | multidimensional array

Quaternion to convert to Euler angles, specified as a scalar, vector, matrix, or multidimensional array of quaternions.

Data Types: quaternion

rotationSequence — Rotation sequence

'ZYX' | 'YZZ' | 'ZXY' | 'ZXZ' | 'YXZ' | 'YXY' | 'YZX' | 'XYZ' | 'XYX' | 'XZY' | 'XZX'

Rotation sequence of Euler representation, specified as a character vector or string.

The rotation sequence defines the order of rotations about the axes. For example, if you specify a rotation sequence of 'YZX':

- 1 The first rotation is about the y-axis.
- 2 The second rotation is about the new z-axis.
- 3 The third rotation is about the new x-axis.

Data Types: char | string


rotationType — Type of rotation

'point' | 'frame'


Type of rotation, specified as 'point' or 'frame'.

In a point rotation, the frame is static and the point moves. In a frame rotation, the point is static and the frame moves. Point rotation and frame rotation define equivalent angular displacements but in opposite directions.

Point Rotation

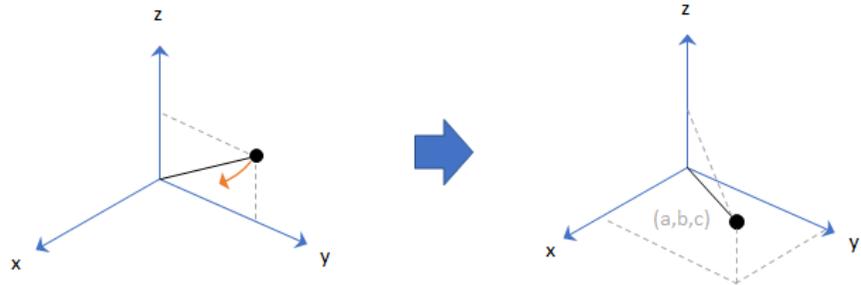

Frame Rotation

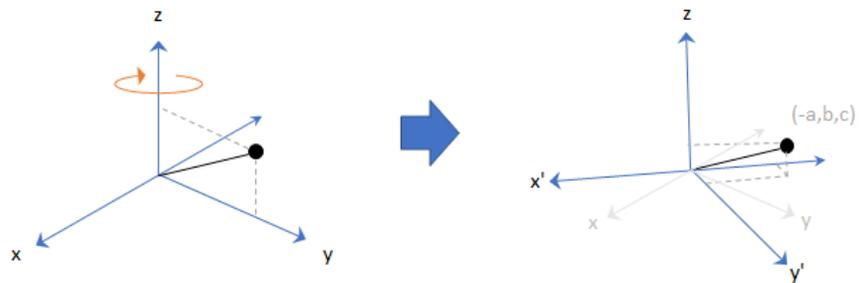

Data Types: char | string

Output Arguments

eulerAngles — Euler angle representation (radians)

N-by-3 matrix

Euler angle representation in radians, returned as a *N*-by-3 matrix. *N* is the number of quaternions in the `quat` argument.

For each row of `eulerAngles`, the first element corresponds to the first axis in the rotation sequence, the second element corresponds to the second axis in the rotation sequence, and the third element corresponds to the third axis in the rotation sequence.

The data type of the Euler angles representation is the same as the underlying data type of `quat`.

Data Types: single | double

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

eulerd

Convert quaternion to Euler angles (degrees)

Syntax

```
eulerAngles = eulerd(quat, rotationSequence, rotationType)
```

Description

`eulerAngles = eulerd(quat, rotationSequence, rotationType)` converts the quaternion, `quat`, to an N -by-3 matrix of Euler angles in degrees.

Examples

Convert Quaternion to Euler Angles in Degrees

Convert a quaternion frame rotation to Euler angles in degrees using the 'ZYX' rotation sequence.

```
quat = quaternion([0.7071 0.7071 0 0]);  
eulerAnglesDegrees = eulerd(quat, 'ZYX', 'frame')
```

```
eulerAnglesDegrees = 1×3  
    0         0    90.0000
```

Input Arguments

quat — Quaternion to convert to Euler angles

scalar | vector | matrix | multidimensional array

Quaternion to convert to Euler angles, specified as a scalar, vector, matrix, or multidimensional array of quaternions.

Data Types: quaternion

rotationSequence — Rotation sequence

'ZYX' | 'YZZ' | 'ZXY' | 'ZXZ' | 'YXZ' | 'YXY' | 'YZX' | 'XYZ' | 'XYX' | 'XZY' | 'XZX'

Rotation sequence of Euler angle representation, specified as a character vector or string.

The rotation sequence defines the order of rotations about the axes. For example, if you specify a rotation sequence of 'YZX':

- 1 The first rotation is about the y-axis.
- 2 The second rotation is about the new z-axis.
- 3 The third rotation is about the new x-axis.

Data Types: char | string


rotationType — Type of rotation

'point' | 'frame'


Type of rotation, specified as 'point' or 'frame'.

In a point rotation, the frame is static and the point moves. In a frame rotation, the point is static and the frame moves. Point rotation and frame rotation define equivalent angular displacements but in opposite directions.

Point Rotation

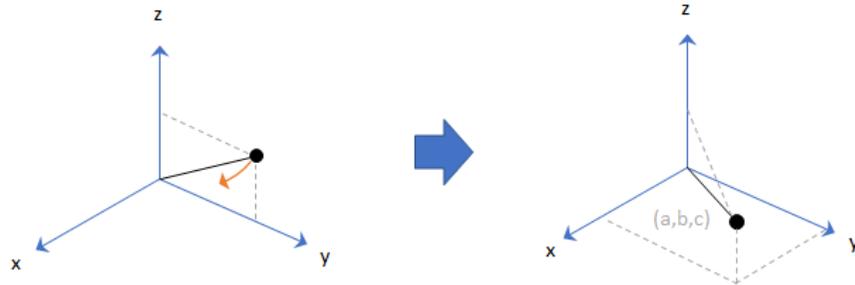

Frame Rotation

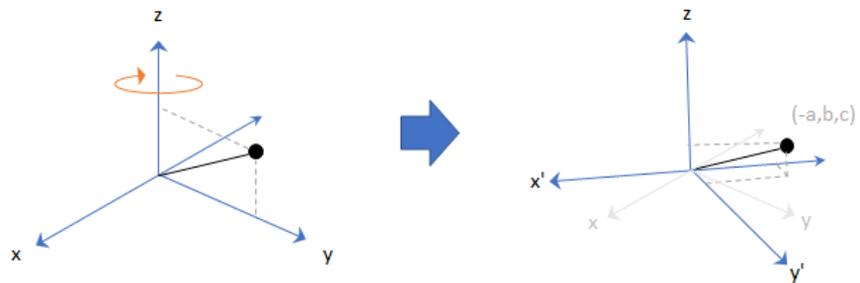

Data Types: char | string

Output Arguments

eulerAngles — Euler angle representation (degrees)

N-by-3 matrix

Euler angle representation in degrees, returned as a *N*-by-3 matrix. *N* is the number of quaternions in the `quat` argument.

For each row of `eulerAngles`, the first column corresponds to the first axis in the rotation sequence, the second column corresponds to the second axis in the rotation sequence, and the third column corresponds to the third axis in the rotation sequence.

The data type of the Euler angles representation is the same as the underlying data type of `quat`.

Data Types: single | double

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

euler | rotateframe | rotatepoint

Objects

quaternion

Introduced in R2018a

environment

Package: robotics

Environmental inputs for UAV

Syntax

```
envStruct = environment(uavGuidanceModel)
```

Description

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

`envStruct = environment(uavGuidanceModel)` returns a structure that captures all the relevant environmental variables for the specified UAV guidance model. Use this function to ensure you have the proper fields for your environmental parameters. Use the environmental inputs as an input to the `derivative` function to get the state time-derivative of the UAV.

Examples

Simulate A Multirotor Control Command

This example shows how to use the `multirotor` guidance model to simulate the change in state of a UAV due to a command input.

Note: To use UAV algorithms, you must install the UAV Library for Robotics System Toolbox®. To install, use `roboticsAddons`.

Create the multirotor guidance model.

```
model = multirotor;
```

Create a state structure. Specify the location in world coordinates.

```
s = state(model);  
s(1:3) = [3;2;1];
```

Specify a control command, *u*, that specified the roll and thrust of the multirotor.

```
u = control(model);  
u.Roll = pi/12;  
u.Thrust = 1;
```

Create a default environment without wind.

```
e = environment(model);
```

Compute the time derivative of the state given the current state, control command, and environment.

```
sdot = derivative(model,s,u,e);
```

Simulate the UAV state using `ode45` integration. The *y* field outputs the fixed-wing UAV states as a 13-by-*n* matrix.


```
simOut = ode45(@(~,x)derivative(model,x,u,e), [0 3], s);  
size(simOut.y)
```

```
ans = 1×2
```

```
13      3536
```


Plot the change in roll angle based on the simulation output. The roll angle (the X Euler angle) is the 9th row of the `simOut.y` output.

```
plot(simOut.y(9,:))
```

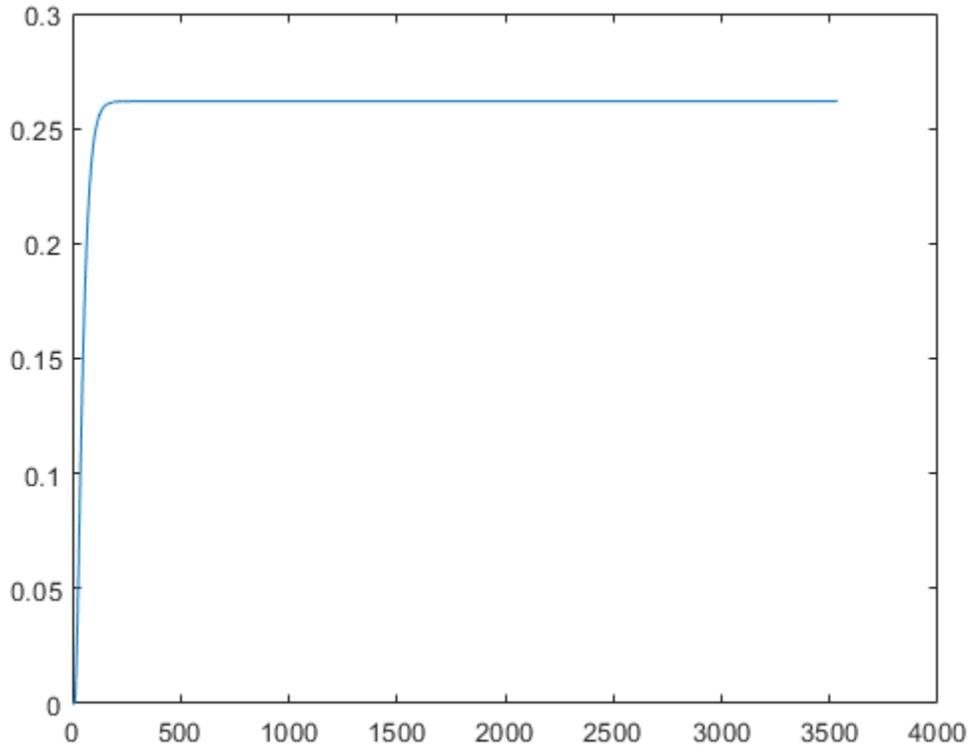


Plot the change in the Y and Z positions. With the specified thrust and roll angle, the multicopter should fly over and lose some altitude. A positive value for Z is expected as positive Z is down.

```
figure
plot(simOut.y(2,:));
hold on
plot(simOut.y(3,:));
legend('Y-position','Z-position')
hold off
```

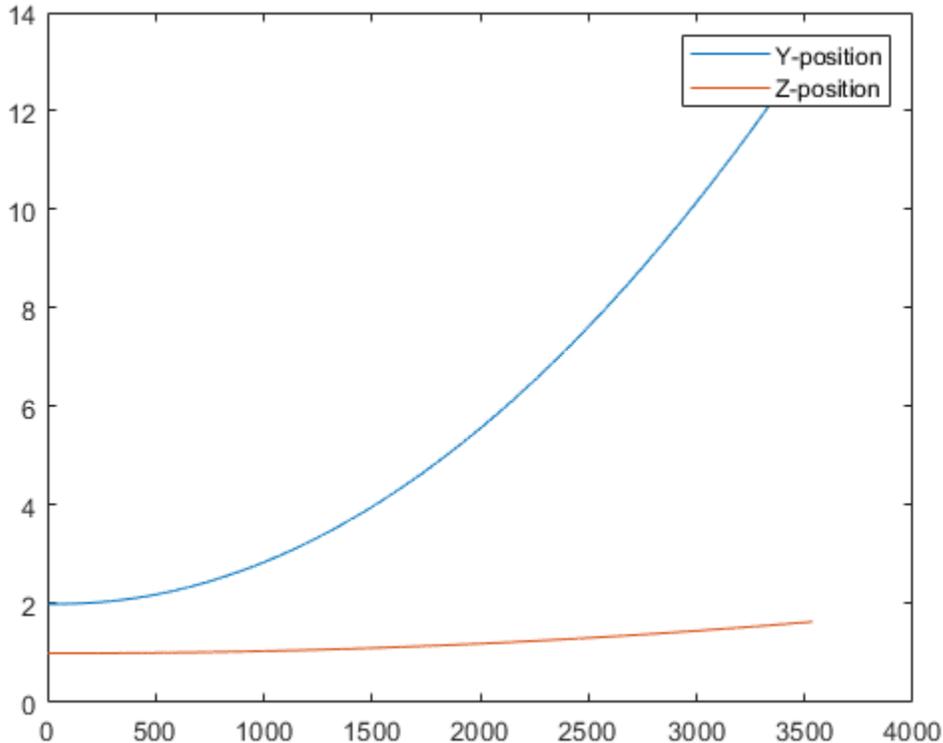

You can also plot the multirotor trajectory using `plotTransforms`. Create the translation and rotation vectors from the simulated state. Downsample (every 300th element) and transpose the `simOut` elements, and convert the Euler angles to quaternions. Specify the mesh as the `multirotor.stl` file and the positive Z-direction as "down". The displayed view shows the UAV translating in the Y-direction and losing altitude.

```
translations = simOut.y(1:3,1:300:end)'; % xyz position
rotations = eul2quat(simOut.y(7:9,1:300:end)'); % ZYX Euler
plotTransforms(translations,rotations,...
'MeshFilePath','multirotor.stl','InertialZDirection','down')
view([90.00 -0.60])
```

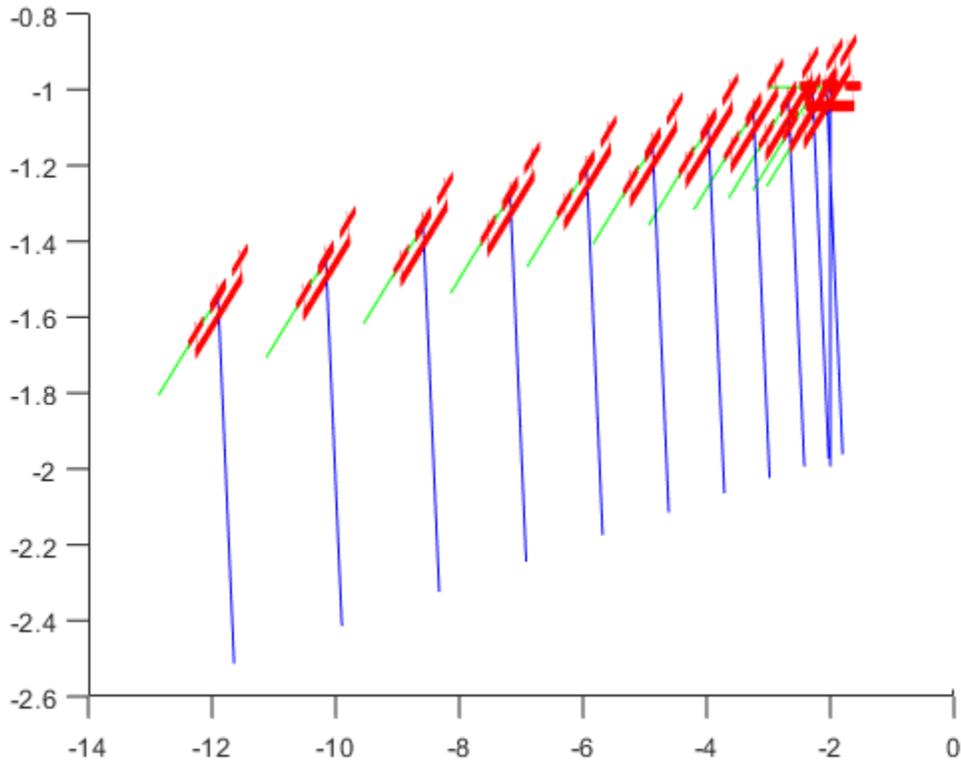

Simulate A Fixed-Wing Control Command

This example shows how to use the `fixedwing` guidance model to simulate the change in state of a UAV due to a command input.

Note: To use UAV algorithms, you must install the UAV Library for Robotics System Toolbox®. To install, use `roboticsAddons`.

Create the fixed-wing guidance model.

```
model = fixedwing;
```

Set the air speed of the vehicle by modifying the structure from the `state` function.

```
s = state(model);  
s(4) = 5; % 10 m/s
```

Specify a control command, `u`, that maintains the air speed and gives a roll angle of $\pi/12$.

```
u = control(model);  
u.RollAngle = pi/12;  
u.AirSpeed = 5;
```

Create a default environment without wind.

```
e = environment(model);
```

Compute the time derivative of the state given the current state, control command, and environment.

```
sdot = derivative(model,s,u,e);
```

Simulate the UAV state using `ode45` integration. The `y` field outputs the fixed-wing UAV states based on this simulation.


```
simOut = ode45(@(~,x)derivative(model,x,u,e), [0 50], s);  
size(simOut.y)
```

```
ans = 1x2
```

```
8 904
```

Plot the change in roll angle based on the simulation output. The roll angle is the 7th row of the `simOut.y` output.

```
plot(simOut.y(7,:))
```

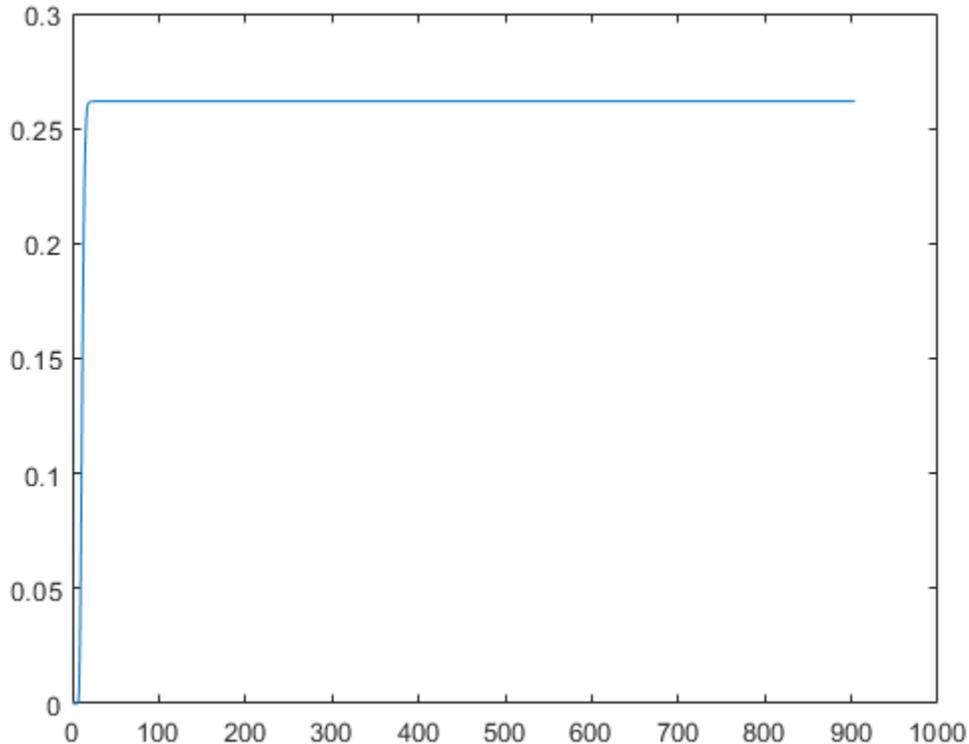


You can also plot the fixed-wing trajectory using `plotTransforms`. Create the translation and rotation vectors from the simulated state. Downsample (every 30th element) and transpose the `simOut` elements, and convert the Euler angles to quaternions. Specify the mesh as the `fixedwing.stl` file and the positive Z-direction as "down". The displayed view shows the UAV making a constant turn based on the constant roll angle.

```

downsample = 1:30:size(simOut.y,2);
translations = simOut.y(1:3,downsample)'; % xyz-position
rotations = eul2quat([simOut.y(5,downsample)',simOut.y(6,downsample)',simOut.y(7,downsample)']');
plotTransforms(translations,rotations,...
    'MeshFilePath','fixedwing.stl','InertialZDirection',"down")
hold on
plot3(simOut.y(1,:),-simOut.y(2,:),simOut.y(3,:),'--b') % full path
xlim([-10.0 10.0])

```

```
ylim([-20.0 5.0])  
zlim([-0.5 4.00])  
view([-45 90])  
hold off
```

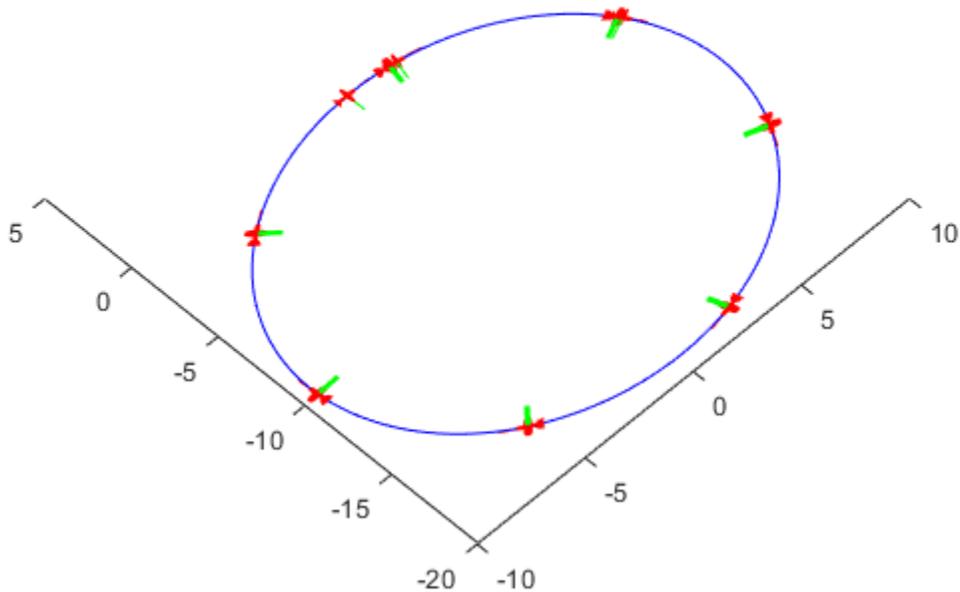

Input Arguments

uavGuidanceModel — UAV guidance model

fixedwing object | multirotor object

UAV guidance model, specified as a `fixedwing` or `multirotor` object.

Output Arguments

envStruct — Environmental input parameters

structure

Environmental input parameters, returned as a structure.

For fixed-wing UAVs, the fields of the structure are `WindNorth`, `WindEast`, `WindDown`, and `Gravity`. Wind speeds are in meters per second and negative speeds point in the opposite direction. Gravity is in meters per second squared (default 9.81).

For multirotor UAVs, the only element of the structure is `Gravity` (default 9.81) in meters per second.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`control` | `derivative` | `ode45` | `plotTransforms` | `roboticsAddons` | `state`

Objects

`fixedwing` | `multirotor`

Blocks

UAV Guidance Model | Waypoint Follower

Topics

“Approximate High-Fidelity UAV model with UAV Guidance Model block”

“Tuning Waypoint Follower for Fixed-Wing UAV”

Introduced in R2018b

exp

Exponential of quaternion array

Syntax

`B = exp(A)`

Description

`B = exp(A)` computes the exponential of the elements of the quaternion array `A`.

Examples

Exponential of Quaternion Array

Create a 4-by-1 quaternion array `A`.

```
A = quaternion(magic(4))
```

A=4×1 object

```
16 + 2i + 3j + 13k
 5 + 11i + 10j + 8k
 9 + 7i + 6j + 12k
 4 + 14i + 15j + 1k
```

Compute the exponential of `A`.

```
B = exp(A)
```

B=4×1 object

```
5.3525e+06 + 1.0516e+06i + 1.5774e+06j + 6.8352e+06k
-57.359 - 89.189i - 81.081j - 64.865k
-6799.1 + 2039.1i + 1747.8j + 3495.6k
-6.66 + 36.931i + 39.569j + 2.6379k
```

Input Arguments

A — Input quaternion

scalar | vector | matrix | multidimensional array

Input quaternion, specified as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

Output Arguments

B — Result

scalar | vector | matrix | multidimensional array

Result of quaternion exponential, returned as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

Algorithms

Given a quaternion $A = a + bi + cj + dk = a + \bar{v}$, the exponential is computed by

$$\exp(A) = e^a \left(\cos\|\bar{v}\| + \frac{\bar{v}}{\|\bar{v}\|} \sin\|\bar{v}\| \right)$$

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

log | power, .^

Objects

quaternion

Introduced in R2018b

hom2cart

Convert homogeneous coordinates to Cartesian coordinates

Syntax

```
cart = hom2cart(hom)
```

Description

`cart = hom2cart(hom)` converts a set of homogeneous points to Cartesian coordinates.

Examples

Convert Homogeneous Points to 3-D Cartesian Points

```
h = [0.2785 0.9575 0.1576 0.5; 0.5469 0.9649 0.9706 0.5];
```

```
c = hom2cart(h)
```

```
c = 2×3
```

```
    0.5570    1.9150    0.3152  
    1.0938    1.9298    1.9412
```

Input Arguments

hom — Homogeneous points

n-by-*k* matrix

Homogeneous points, specified as an *n*-by-*k* matrix, containing *n* points. *k* must be greater than or equal to 2.

Example: `[0.2785 0.9575 0.1576 0.5; 0.5469 0.9649 0.9706 0.5]`

Output Arguments

cart — Cartesian coordinates

n -by- $(k-1)$ matrix

Cartesian coordinates, returned as an n -by- $(k-1)$ matrix, containing n points. Each row of `cart` represents a point in $(k-1)$ -dimensional space. k must be greater than or equal to 2.

Example: [0.8147 0.1270 0.6324; 0.9058 0.9134 0.0975]

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`cart2hom`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

importrobot

Import rigid body tree model from URDF file, text, or Simscape Multibody model

Syntax

```
robot = importrobot(filename)
robot = importrobot(URDFtext)

[robot,importInfo] = importrobot(model)
___ = importrobot( ___,Name,Value)
```

Description

`robot = importrobot(filename)` returns a `rigidBodyTree` object by parsing the Unified Robot Description Format (URDF) file specified by `filename`.

`robot = importrobot(URDFtext)` parses the URDF text. Specify `URDFtext` as a string scalar or character vector.

`[robot,importInfo] = importrobot(model)` imports a Simscape Multibody model and returns an equivalent `rigidBodyTree` object and info about the import in `importInfo`. Only fixed, prismatic, and revolute joints are supported in the output `rigidBodyTree` object. Use the “Simscape Multibody Model Import” on page 2-0 name-value pairs to import a model that uses other joint types, constraint blocks, or variable inertias.

`___ = importrobot(___,Name,Value)` provides additional options specified by `Name,Value` pair arguments. Use any of the previous syntaxes. Only certain name-value pairs apply depending on whether you convert from a URDF file or a Simscape Multibody model.

Examples

Import Robot from URDF File


Import a URDF file as a `rigidBodyTree` object.

```
robot = importrobot('iiwa14.urdf')
```

```
robot =  
    rigidBodyTree with properties:
```

```
    NumBodies: 10  
    Bodies: {1x10 cell}  
    Base: [1x1 rigidBody]  
    BodyNames: {1x10 cell}  
    BaseName: 'world'  
    Gravity: [0 0 0]  
    DataFormat: 'struct'
```

```
show(robot)
```

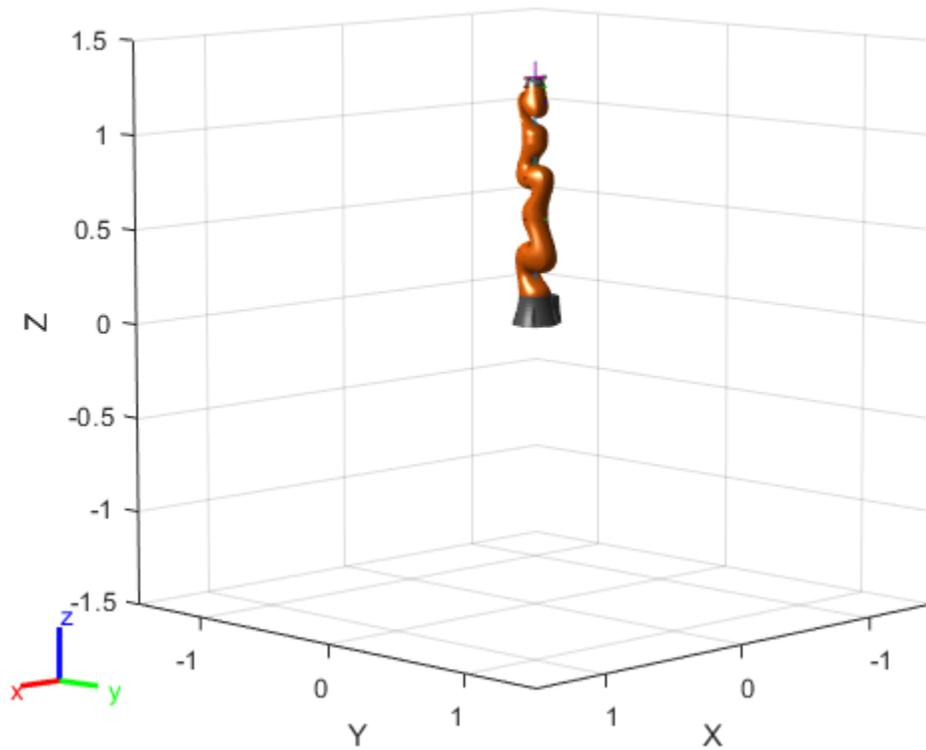

```
ans =  
  Axes (Primary) with properties:  
    XLim: [-1.5000 1.5000]  
    YLim: [-1.5000 1.5000]  
    XScale: 'linear'  
    YScale: 'linear'  
    GridLineStyle: '-'  
    Position: [0.1300 0.1100 0.7750 0.8150]  
    Units: 'normalized'
```

Show all properties

Import Robot from URDF Character Vector

Specify the URDF character vector. This character vector is a minimalist description for creating a valid robot model.

```
URDFtext = '<?xml version="1.0" ?><robot name="min"><link name="L0"/></robot>';
```

Import the robot model. The description creates a `rigidBodyTree` object that has only a robot base link named 'L0'.

```
robot = importrobot(URDFtext)

robot =
  rigidBodyTree with properties:

    NumBodies: 0
    Bodies: {1x0 cell}
    Base: [1x1 rigidBody]
    BodyNames: {1x0 cell}
    BaseName: 'L0'
    Gravity: [0 0 0]
    DataFormat: 'struct'
```

Display Robot Model with Visual Geometries


You can import robots that have `.stl` files associated with the Unified Robot Description format (URDF) file to describe the visual geometries of the robot. Each rigid body has an individual visual geometry specified. The `importrobot` function parses the URDF file to get the robot model and visual geometries. Use the `show` function to visualize the robot model in a figure. You can then interact with the model by clicking components to inspect them and right-clicking to toggle visibility.

Import a robot model as a URDF file. The `.stl` file locations must be properly specified in this URDF. To add other `.stl` files to individual rigid bodies, see `addVisual`.

```
robot = importrobot('iiwa14.urdf');
```

Visualize the robot with the associated visual model. Click bodies or frames to inspect them. Right-click bodies to toggle visibility for each visual geometry.

```
show(robot);
```

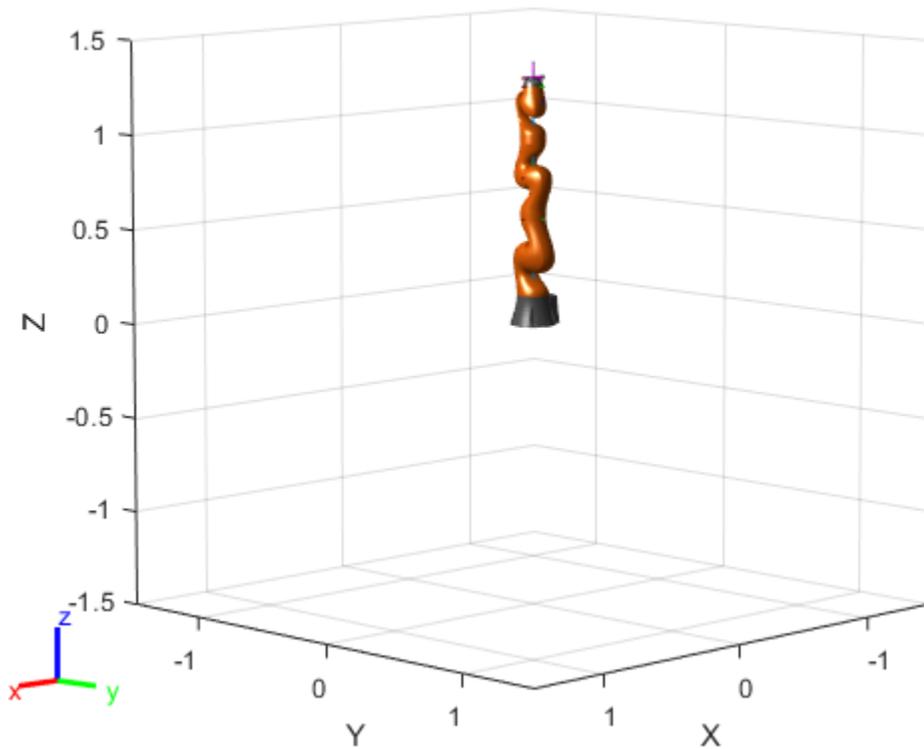

Import Simscape™ Multibody™ model to RigidBodyTree Object

Import an existing Simscape™ Multibody™ robot model into the Robotics System Toolbox™ as a `rigidBodyTree` object.

Open the Simscape™ Multibody™ model. This is a model for a humanoid robot.

```
open_system('example_smhumanoidrobot.slx')
```

Import the model.

```
[robot,importInfo] = importrobot(gcs)
```

```

robot =
  rigidBodyTree with properties:

    NumBodies: 21
    Bodies: {1x21 cell}
    Base: [1x1 rigidBody]
    BodyNames: {1x21 cell}
    BaseName: 'Base'
    Gravity: [0 0 -9.8066]
    DataFormat: 'struct'

importInfo =
  rigidBodyTreeImportInfo with properties:

    SourceModelName: 'example_smhumanoidrobot'
    RigidBodyTree: [1x1 rigidBodyTree]
    BlockConversionInfo: [1x1 struct]

```

Display details about the created `rigidBodyTree` object.

```
showdetails(importInfo)
```

```
-----
Robot: (21 bodies)
```

Idx	Body Name	Simulink Source Blocks	Joint Name	Simulink Source Blocks
1	Body01	Info List Highlight	Joint01	Info List Highlight
2	Body02	Info List Highlight	Joint02	Info List Highlight
3	Body03	Info List Highlight	Joint03	Info List Highlight
4	Body04	Info List Highlight	Joint04	Info List Highlight
5	Body05	Info List Highlight	Joint05	Info List Highlight
6	Body06	Info List Highlight	Joint06	Info List Highlight
7	Body07	Info List Highlight	Joint07	Info List Highlight
8	Body08	Info List Highlight	Joint08	Info List Highlight
9	Body09	Info List Highlight	Joint09	Info List Highlight
10	Body10	Info List Highlight	Joint10	Info List Highlight
11	Body11	Info List Highlight	Joint11	Info List Highlight
12	Body12	Info List Highlight	Joint12	Info List Highlight
13	Body13	Info List Highlight	Joint13	Info List Highlight
14	Body14	Info List Highlight	Joint14	Info List Highlight
15	Body15	Info List Highlight	Joint15	Info List Highlight
16	Body16	Info List Highlight	Joint16	Info List Highlight

17	Body17	Info		List		Highlight	Joint17	Info		List		Highlight
18	Body18	Info		List		Highlight	Joint18	Info		List		Highlight
19	Body19	Info		List		Highlight	Joint19	Info		List		Highlight
20	Body20	Info		List		Highlight	Joint20	Info		List		Highlight
21	Body21	Info		List		Highlight	Joint21	Info		List		Highlight

Input Arguments

filename — Name of URDF file

string scalar | character vector

Name of URDF file, specified as a string scalar or character vector. This file must be a valid URDF robot description.

Example: "robot_file.urdf"

Data Types: char | string

URDFtext — URDF text

string scalar | character vector

URDF robot text, specified as a string scalar or character vector.

Example: "<?xml version="1.0" ?><robot name="min"><link name="L0"/></robot>"

Data Types: char | string

model — Simscape Multibody model

model handle | string scalar | character vector

Simscape Multibody model, specified as a model handle, string scalar, or character vector.

Data Types: double | char | string

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

Example: `"MeshPath", {"../arm_meshes", "../body_meshes"}`

URDF File Import

MeshPath — Relative search paths for mesh files

string scalar | character vector | cell array of string scalars or character vectors

Relative search paths for mesh files, specified as a string scalar, character vector, or cell array of string scalars or character vectors. Mesh files must still be specified inside the URDF file, but `MeshPath` defines the relative paths for these specified files. When using this function, the URDF importer searches for the mesh files specified in the URDF using all the specified relative paths.

Data Types: `char` | `string` | `cell`

Simscape Multibody Model Import

BreakChains — Indicates whether to break closed chains

`"error"` (default) | `"remove-joints"`

Indicates whether to break closed chains in the given `model` input, specified as `"error"` or `"remove-joints"`. If you specify `"remove-joints"`, the resulting robot output has chain closure joints removed. Otherwise, the function throws an error.

Data Types: `char` | `string`

ConvertJoints — Indicates whether to convert unsupported joints to fixed

`"error"` (default) | `"convert-to-fixed"`

Indicates whether to convert unsupported joints to fixed joints in the given `model` input, specified as `"error"` or `"convert-to-fixed"`. If you specify `"convert-to-fixed"`, the resulting robot output has any unsupported joints converted to fixed joints. Only fixed, prismatic, and revolute joints are supported in the output `rigidBodyTree` object. Otherwise, if the `model` contains unsupported joints, the function throws an error.

Data Types: `char` | `string`

SMConstraints — Indicates whether to remove constraint blocks

`"error"` (default) | `"remove"`

Indicates whether to remove constraint blocks in the given `model` input, specified as `"error"` or `"remove"`. If you specify `"remove"`, the resulting robot output has the constraints removed. Otherwise, if the `model` contains constraint blocks, the function throws an error.

Data Types: char | string

VariableInertias — Indicates whether to remove variable inertia blocks

"error" (default) | "remove"

Indicates whether to remove variable inertia blocks in the given model input, specified as "error" or "remove". If you specify "remove", the resulting robot output has the variable inertias removed. Otherwise, if the model contains variable inertia blocks, the function throws an error.

Data Types: char | string

Output Arguments

robot — Robot model

rigidBodyTree object

Robot model, returned as a rigidBodyTree object.

Note If the gravity is not specified in the URDF file, the default Gravity property is set to [0 0 0]. Simscape Multibody uses a default of [0 0 -9.80665]m/s² when using `smimport` to import a URDF.

importInfo — Object for storing import information

rigidBodyTreeImportInfo object

Object for storing import information, returned as a rigidBodyTreeImportInfo object. This object contains the relationship between the input model and the resulting robot output.

Use `showdetails` to list all the import info for each body in the robot. Links to display the rigid body info, their corresponding blocks in the model, and highlighting specific blocks in the model are output to the command window.

Use `bodyInfo`, `bodyInfoFromBlock`, or `bodyInfoFromJoint` to get information about specific components in either the robot output or the model input.

Tips

When importing a robot model with visual meshes, the `importrobot` function searches for the `.stl` files to assign to each rigid body using these rules:

- The function searches the raw mesh path for a specified rigid body from the URDF file. References to ROS packages have the `package:\\<pkg_name>` removed.
- Absolute paths are checked directly with no modification.
- Relative paths are checked using the following directories in order:
 - User-specified `MeshPath`
 - Current folder
 - MATLAB path
 - The folder containing the URDF file
 - One level above the folder containing the URDF file
- `s`
- The file name from the mesh path in the URDF file is appended to the `MeshPath` input argument.

If the mesh file is still not found, the parser ignores the mesh file and returns a `rigidBodyTree` object without visual.

See Also

`rigidBodyTree` | `rigidBodyTreeImportInfo`

Topics

“Rigid Body Tree Robot Model”

Introduced in R2017a

loadrobot

Load rigid body tree robot model

Syntax

```
robotRBT = loadrobot(robotname)
[robotRBT,metaData] = loadrobot(robotname)
[robotRBT,metaData] = loadrobot(robotname,Name,Value)
```

Description

`robotRBT = loadrobot(robotname)` loads a robot model as a `rigidBodyTree` object based on the specified robot name. To import your own robot model as a URDF file or Simscape Multibody model, see `importrobot`

`[robotRBT,metaData] = loadrobot(robotname)` returns additional information about the source of the robot model in `metaData`.

`[robotRBT,metaData] = loadrobot(robotname,Name,Value)` specifies additional options for the returned rigid body tree model.

Examples


Load Provided Robot Model

This example shows how to load an included robot using `loadrobot`. Specify one of the select robot names to get a `rigidBodyTree` robot model that contains kinematic and dynamic constraints and visual meshes for the robot geometry.

```
gen3 = loadrobot("kinovaGen3");
```

Visualize the robot model.

```
show(gen3);
```

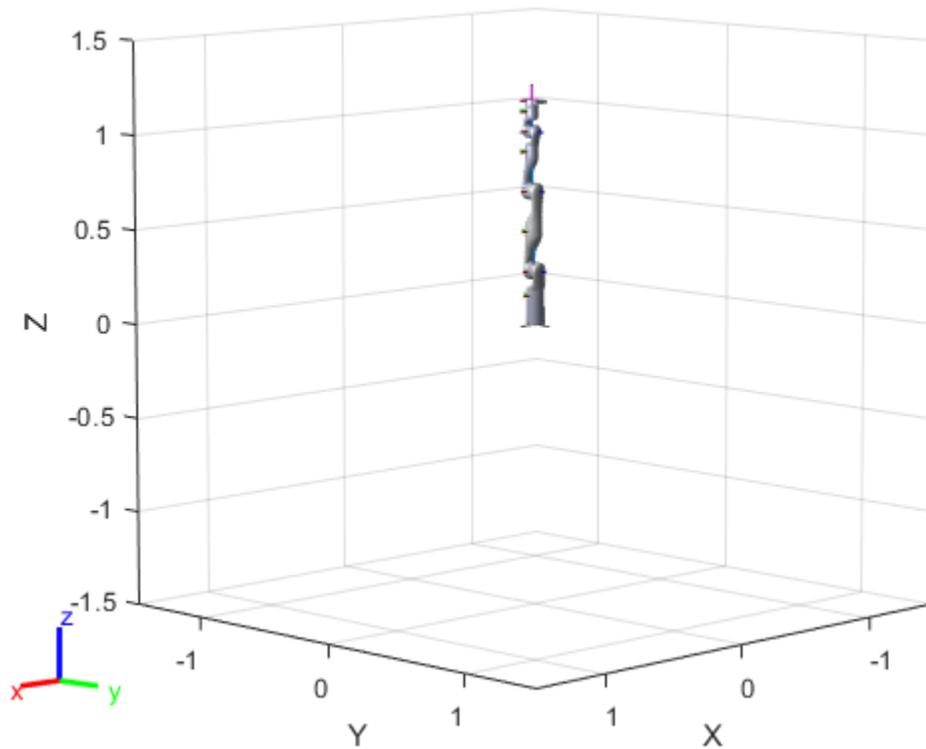

Input Arguments

robotname — Name of robot model

string scalar | character vector

Name of robot model, specified as a string scalar or character vector. Available robot models are:

- "abbIrb120" -- ABB IRB 120 6-axis robot
- "abbIrb120T" -- ABB IRB 120T 6-axis robot

- "kinovaGen3" -- KINOVA® Gen3 robot
- "kinovaJacoJ2N6S200" -- KINOVA JACO® 2-fingered 6 DOF robot with non-spherical wrist
- "kinovaJacoJ2N6S300" -- KINOVA JACO® 3-fingered 6 DOF robot with non-spherical wrist
- "kinovaJacoJ2N7S300" -- KINOVA JACO® 3-fingered 7 DOF robot with non-spherical wrist
- "kinovaJacoJ2S6S300" -- KINOVA JACO® 3-fingered 6 DOF robot with spherical wrist
- "kinovaJacoJ2S7S300" -- KINOVA JACO® 3-fingered 7 DOF robot with spherical wrist
- "kinovaJacoTwoArmExample" -- Two KINOVA JACO® 3 Fingered 6 DOF robots with non-spherical wrist
- "kinovaMicoM1N4S200" -- KINOVA MICO® 4 DOF 2-fingered robot
- "kinovaMicoM1N6S200" -- KINOVA MICO® 6 DOF 2-fingered robot
- "kinovaMicoM1N6S300" -- KINOVA MICO® 6 DOF 3-fingered robot
- "rethinkBaxter" -- Rethink Robotics Baxter 2-armed robot
- "willowgaragePR2" -- Willow Garage PR2 2-armed robot

Data Types: `char` | `string`

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Example: `"Gravity", [0 0 -9.81]` sets the gravity property to -9.8 m/s in the z-direction for the robot model.

DataFormat — Input/output data format for kinematics and dynamics functions of robot model

`"struct"` (default) | `"row"` | `"column"`

Input/output data format for kinematics and dynamics functions of robot model, `robotRBT`, specified as `"struct"`, `"row"`, or `"column"`. To use dynamics functions, you must use either `"row"` or `"column"`.

Gravity — Gravitational acceleration experienced by robot`[0 0 0] m/s2 (default) | [x y z] vector`

Gravitational acceleration experienced by robot, specified as an [x y z] vector in meters per second squared. Each element corresponds to the acceleration of the base robot frame in that direction.

Output Arguments

robotRBT — Robot rigid body tree model`rigidBodyTree object`

Robot rigid body tree model, returned as a `rigidBodyTree` object. This model contains all the kinematic and dynamic constraints based on the robot source files specified in `metaData`. Some models also contain visual meshes for visualizing robot trajectories.

metaData — Robot model source information`structure`

Robot model source information, returned as a structure. The structure contains the fields:

- `RobotName` -- Name of the returned robot model.
- `FilePath` -- File path of the Unified Robot Description Format (URDF) file that is used to create the rigid body tree model.
- `Source` -- URL for source of the robot model.

Data Types: `struct`

See Also

`importrobot | inverseKinematics | rigidBodyTree`

Introduced in R2019b

ldivide, .

Element-wise quaternion left division

Syntax

```
C = A.\B
```

Description

`C = A.\B` performs quaternion element-wise division by dividing each element of quaternion B by the corresponding element of quaternion A.

Examples

Divide a Quaternion Array by a Real Scalar

Create a 2-by-1 quaternion array, and divide it element-by-element by a real scalar.

```
A = quaternion([1:4;5:8])
```

```
A=2×1 object
```

```
1 + 2i + 3j + 4k  
5 + 6i + 7j + 8k
```

```
B = 2;
```

```
C = A.\B
```

```
C=2×1 object
```

```
0.066667 - 0.13333i - 0.2j - 0.26667k  
0.057471 - 0.068966i - 0.08046j - 0.091954k
```

Divide a Quaternion Array by Another Quaternion Array

Create a 2-by-2 quaternion array, and divide it element-by-element by another 2-by-2 quaternion array.

```
q1 = quaternion([1:4;2:5;4:7;5:8]);
A = reshape(q1,2,2)
```

```
A=2×2 object
    1 + 2i + 3j + 4k    4 + 5i + 6j + 7k
    2 + 3i + 4j + 5k    5 + 6i + 7j + 8k
```

```
q2 = quaternion(magic(4));
B = reshape(q2,2,2)
```

```
B=2×2 object
    16 + 2i + 3j + 13k    9 + 7i + 6j + 12k
    5 + 11i + 10j + 8k    4 + 14i + 15j + 1k
```

```
C = A.\B
```

```
C=2×2 object
    2.7 - 1.9i - 0.9j - 1.7k    1.5159 - 0.37302i - 0.15079j
    2.2778 + 0.46296i - 0.57407j + 0.092593k    1.2471 + 0.91379i - 0.33908j
```

Input Arguments

A — Divisor

scalar | vector | matrix | multidimensional array

Divisor, specified as a quaternion, an array of quaternions, a real scalar, or an array of real numbers.

A and B must have compatible sizes. In the simplest cases, they can be the same size or one can be a scalar. Two inputs have compatible sizes if, for every dimension, the dimension sizes of the inputs are the same or one of the dimensions is 1.

Data Types: quaternion | single | double

B — Dividend

scalar | vector | matrix | multidimensional array

Dividend, specified as a quaternion, an array of quaternions, a real scalar, or an array of real numbers.

A and B must have compatible sizes. In the simplest cases, they can be the same size or one can be a scalar. Two inputs have compatible sizes if, for every dimension, the dimension sizes of the inputs are the same or one of the dimensions is 1.

Data Types: quaternion | single | double

Output Arguments

C — Result

scalar | vector | matrix | multidimensional array

Result of quaternion division, returned as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

Algorithms

Quaternion Division

Given a quaternion $A = a_1 + a_2i + a_3j + a_4k$ and a real scalar p ,

$$C = p.\backslash A = \frac{a_1}{p} + \frac{a_2}{p}i + \frac{a_3}{p}j + \frac{a_4}{p}k$$

Note For a real scalar p , $A./p = A.\backslash p$.

Quaternion Division by a Quaternion Scalar

Given two quaternions A and B of compatible sizes, then

$$C = A \setminus B = A^{-1} .* B = \left(\frac{\text{conj}(A)}{\text{norm}(A)^2} \right) .* B$$

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

conj | norm | rdivide, ./ | times, .*

Objects

quaternion

Introduced in R2018b

log

Natural logarithm of quaternion array

Syntax

$B = \log(A)$

Description

$B = \log(A)$ computes the natural logarithm of the elements of the quaternion array A .

Examples

Logarithmic Values of Quaternion Array

Create a 3-by-1 quaternion array A .

$A = \text{quaternion}(\text{randn}(3,4))$

```
A=3×1 object
    0.53767 + 0.86217i - 0.43359j + 2.7694k
    1.8339 + 0.31877i + 0.34262j - 1.3499k
   -2.2588 - 1.3077i + 3.5784j + 3.0349k
```

Compute the logarithmic values of A .

$B = \log(A)$

```
B=3×1 object
    1.0925 + 0.40848i - 0.20543j + 1.3121k
    0.8436 + 0.14767i + 0.15872j - 0.62533k
    1.6807 - 0.53829i + 1.473j + 1.2493k
```

Input Arguments

A — Input array

scalar | vector | matrix | multidimensional array

Input array, specified as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

Output Arguments

B — Logarithm values

scalar | vector | matrix | multidimensional array

Quaternion natural logarithm values, returned as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

Algorithms

Given a quaternion $A = a + \bar{v} = a + bi + cj + dk$, the logarithm is computed by

$$\log(A) = \log\|A\| + \frac{\bar{v}}{\|\bar{v}\|} \arccos \frac{a}{\|A\|}$$

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`exp` | `power`, `.^`

Objects

`quaternion`

Introduced in R2018b

meanrot

Quaternion mean rotation

Syntax

```
quatAverage = meanrot(quat)
quatAverage = meanrot(quat,dim)
quatAverage = meanrot( ____,nanflag)
```

Description

`quatAverage = meanrot(quat)` returns the average rotation of the elements of `quat` along the first array dimension whose size not does equal 1.

- If `quat` is a vector, `meanrot(quat)` returns the average rotation of the elements.
- If `quat` is a matrix, `meanrot(quat)` returns a row vector containing the average rotation of each column.
- If `quat` is a multidimensional array, then `meanrot(quat)` operates along the first array dimension whose size does not equal 1, treating the elements as vectors. This dimension becomes 1 while the sizes of all other dimensions remain the same.

The `meanrot` function normalizes the input quaternions, `quat`, before calculating the mean.

`quatAverage = meanrot(quat,dim)` return the average rotation along dimension `dim`. For example, if `quat` is a matrix, then `meanrot(quat,2)` is a column vector containing the mean of each row.

`quatAverage = meanrot(____,nanflag)` specifies whether to include or omit NaN values from the calculation for any of the previous syntaxes. `meanrot(quat,'includenan')` includes all NaN values in the calculation while `mean(quat,'omitnan')` ignores them.

Examples

Quaternion Mean Rotation

Create a matrix of quaternions corresponding to three sets of Euler angles.

```
eulerAngles = [40 20 10; ...  
              50 10 5; ...  
              45 70 1];
```

```
quat = quaternion(eulerAngles, 'eulerd', 'ZYX', 'frame');
```

Determine the average rotation represented by the quaternions. Convert the average rotation to Euler angles in degrees for readability.

```
quatAverage = meanrot(quat)
```

```
quatAverage = quaternion  
    0.88863 - 0.062598i + 0.27822j + 0.35918k
```

```
eulerAverage = eulerd(quatAverage, 'ZYX', 'frame')
```

```
eulerAverage = 1×3  
    45.7876    32.6452    6.0407
```


Average Out Rotational Noise

Use `meanrot` over a sequence of quaternions to average out additive noise.

Create a vector of $1e6$ quaternions whose distance, as defined by the `dist` function, from `quaternion(1,0,0,0)` is normally distributed. Plot the Euler angles corresponding to the noisy quaternion vector.

```
nrows = 1e6;  
ax = 2*rand(nrows,3) - 1;  
ax = ax./sqrt(sum(ax.^2,2));  
ang = 0.5*randn(size(ax,1),1);
```

```
q = quaternion(ax.*ang , 'rotvec');  
noisyEulerAngles = eulerd(q, 'ZYX', 'frame');  
figure(1)  
subplot(3,1,1)  
plot(noisyEulerAngles(:,1))  
title('Z-Axis')  
ylabel('Rotation (degrees)')  
hold on  
  
subplot(3,1,2)  
plot(noisyEulerAngles(:,2))  
title('Y-Axis')  
ylabel('Rotation (degrees)')  
hold on  
  
subplot(3,1,3)  
plot(noisyEulerAngles(:,3))  
title('X-Axis')  
ylabel('Rotation (degrees)')  
hold on
```

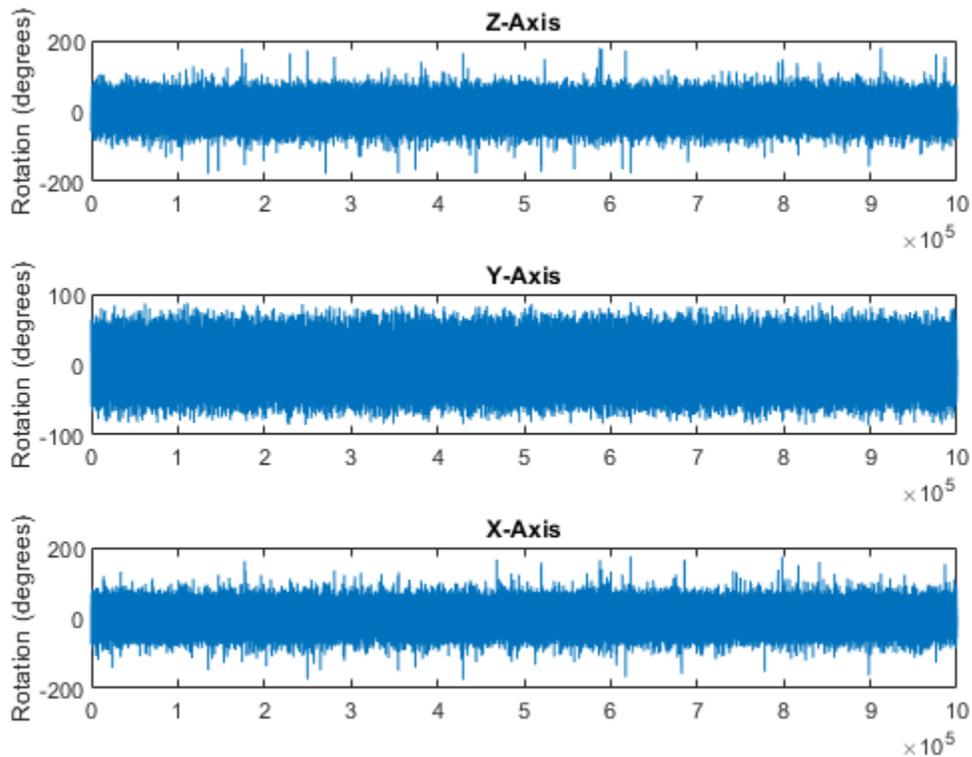


Use `meanrot` to determine the average quaternion given the vector of quaternions. Convert to Euler angles and plot the results.

```
qAverage = meanrot(q);
qAverageInEulerAngles = eulerd(qAverage, 'ZYX', 'frame');
figure(1)
subplot(3,1,1)
plot(ones(nrows,1)*qAverageInEulerAngles(:,1))
title('Z-Axis')
subplot(3,1,2)
```

```
plot(ones(nrows,1)*qAverageInEulerAngles(:,2))  
title('Y-Axis')
```

```
subplot(3,1,3)  
plot(ones(nrows,1)*qAverageInEulerAngles(:,3))  
title('X-Axis')
```

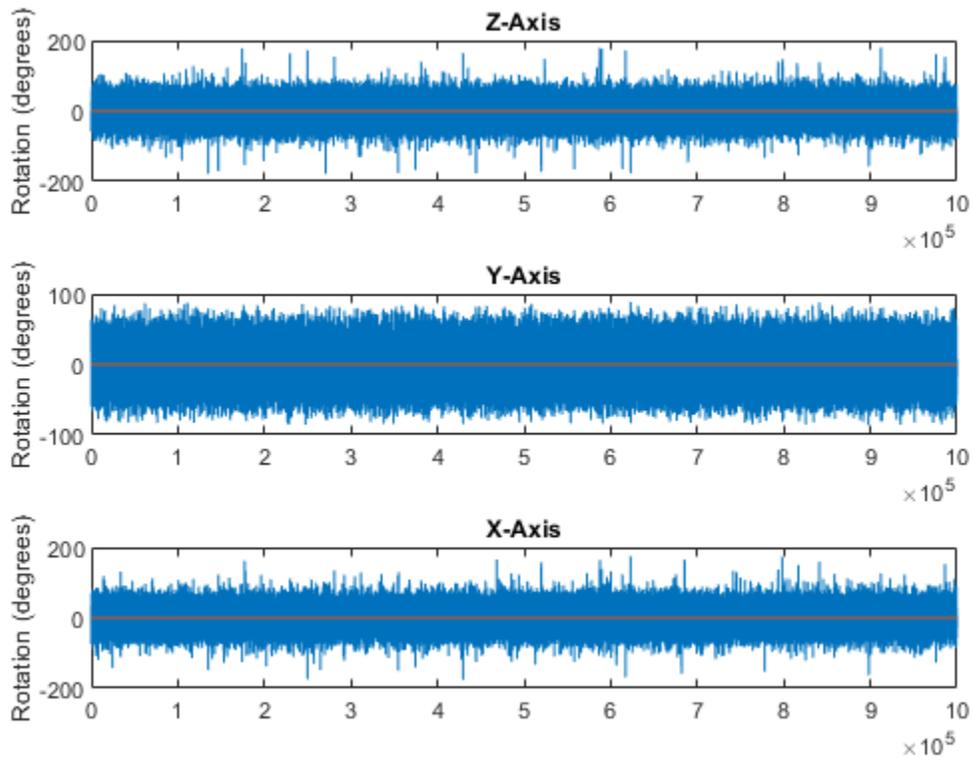

The meanrot Algorithm and Limitations

The meanrot Algorithm

The `meanrot` function outputs a quaternion that minimizes the squared Frobenius norm of the difference between rotation matrices. Consider two quaternions:

- `q0` represents no rotation.
- `q90` represents a 90 degree rotation about the x-axis.

```
q0 = quaternion([0 0 0], 'eulerd', 'ZYX', 'frame');  
q90 = quaternion([0 0 90], 'eulerd', 'ZYX', 'frame');
```

Create a quaternion sweep, `qSweep`, that represents rotations from 0 to 180 degrees about the x-axis.


```
eulerSweep = (0:1:180)';  
qSweep = quaternion([zeros(numel(eulerSweep),2),eulerSweep], ...  
    'eulerd', 'ZYX', 'frame');
```

Convert `q0`, `q90`, and `qSweep` to rotation matrices. In a loop, calculate the metric to minimize for each member of the quaternion sweep. Plot the results and return the value of the Euler sweep that corresponds to the minimum of the metric.

```
r0 = rotmat(q0, 'frame');  
r90 = rotmat(q90, 'frame');  
rSweep = rotmat(qSweep, 'frame');
```

```
metricToMinimize = zeros(size(rSweep,3),1);  
for i = 1:numel(qSweep)  
    metricToMinimize(i) = norm((rSweep(:,:,i) - r0), 'fro').^2 + ...  
        norm((rSweep(:,:,i) - r90), 'fro').^2;  
end
```

```
plot(eulerSweep,metricToMinimize)  
xlabel('Euler Sweep (degrees)')  
ylabel('Metric to Minimize')
```

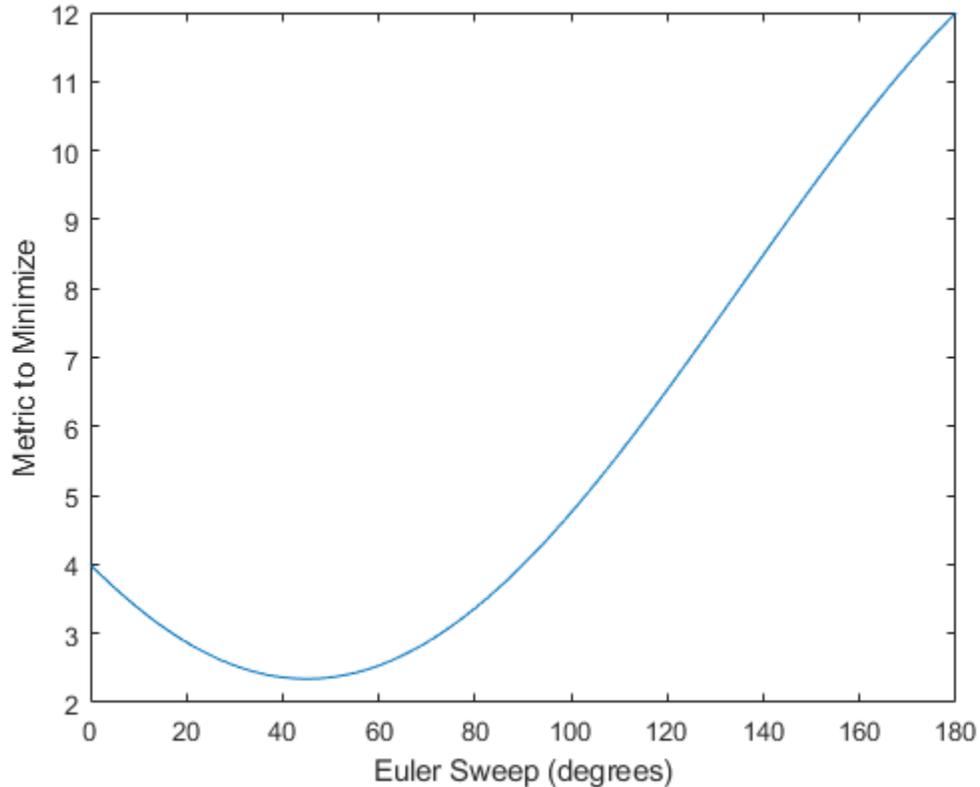

```
[~,eulerIndex] = min(metricToMinimize);
eulerSweep(eulerIndex)
```

```
ans = 45
```

The minimum of the metric corresponds to the Euler angle sweep at 45 degrees. That is, `meanrot` defines the average between `quaternion([0 0 0], 'ZYX', 'frame')` and `quaternion([0 0 90], 'ZYX', 'frame')` as `quaternion([0 0 45], 'ZYX', 'frame')`. Call `meanrot` with `q0` and `q90` to verify the same result.

```
eulerd(meanrot([q0,q90]), 'ZYX', 'frame')
```

```
ans = 1x3
```

```
0      0  45.0000
```


Limitations

The metric that `meanrot` uses to determine the mean rotation is not unique for quaternions significantly far apart. Repeat the experiment above for quaternions that are separated by 180 degrees.

```
q180 = quaternion([0 0 180], 'eulerd', 'ZYX', 'frame');
r180 = rotmat(q180, 'frame');

for i = 1:numel(qSweep)
    metricToMinimize(i) = norm((rSweep(:, :, i) - r0), 'fro').^2 + ...
        norm((rSweep(:, :, i) - r180), 'fro').^2;
end

plot(eulerSweep, metricToMinimize)
xlabel('Euler Sweep (degrees)')
ylabel('Metric to Minimize')
```

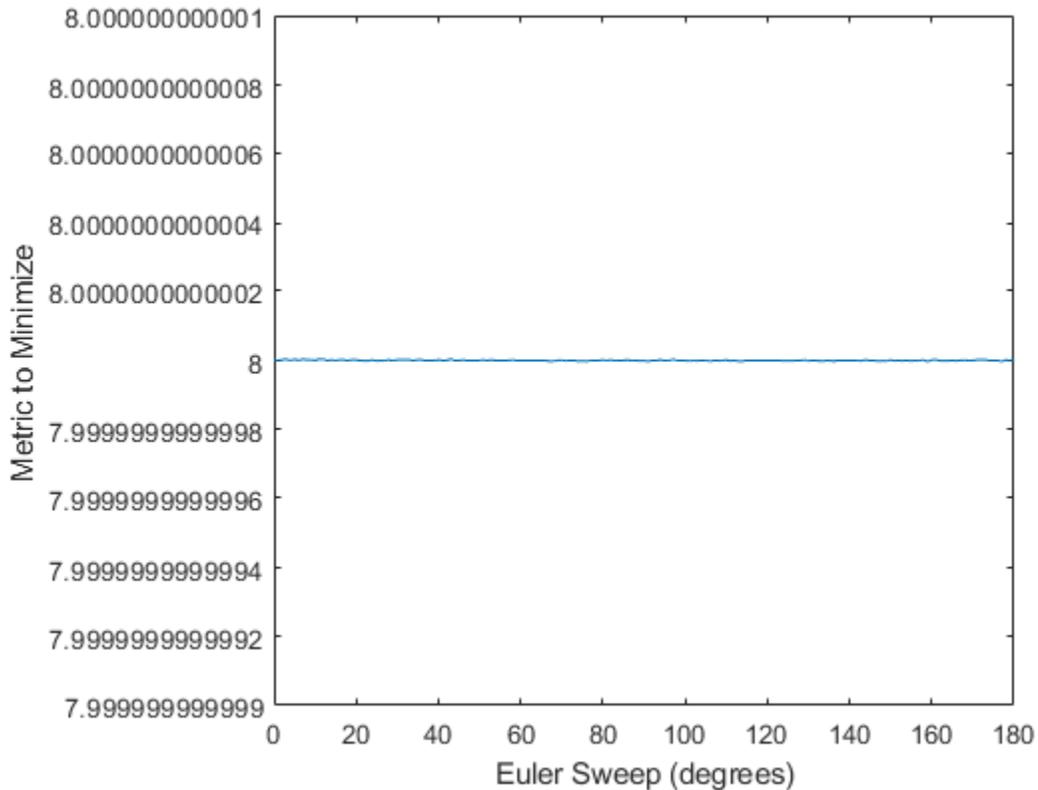

```
[~,eulerIndex] = min(metricToMinimize);
eulerSweep(eulerIndex)
```

```
ans = 159
```

Quaternion means are usually calculated for rotations that are close to each other, which makes the edge case shown in this example unlikely in real-world applications. To average two quaternions that are significantly far apart, use the `slerp` function. Repeat the experiment using `slerp` and verify that the quaternion mean returned is more intuitive for large distances.

```
qMean = slerp(q0,q180,0.5);
q0_q180 = eulerd(qMean, 'ZYX', 'frame')
```

```
q0_q180 = 1x3
          0          0  90.0000
```

Input Arguments

quat — Quaternion

scalar | vector | matrix | multidimensional array

Quaternion for which to calculate the mean, specified as a scalar, vector, matrix, or multidimensional array of quaternions.

Data Types: quaternion

dim — Dimension to operate along

positive integer scalar

Dimension to operate along, specified as a positive integer scalar. If no value is specified, then the default is the first array dimension whose size does not equal 1.

Dimension `dim` indicates the dimension whose length reduces to 1. The `size(quatAverage,dim)` is 1, while the sizes of all other dimensions remain the same.

Data Types: double | single

nanflag — NaN condition

'includenan' (default) | 'omitnan'

NaN condition, specified as one of these values:

- 'includenan' -- Include NaN values when computing the mean rotation, resulting in NaN.
- 'omitnan' -- Ignore all NaN values in the input.

Data Types: char | string

Output Arguments

quatAverage — Quaternion average rotation

scalar | vector | matrix | multidimensional array

Quaternion average rotation, returned as a scalar, vector, matrix, or multidimensional array.

Data Types: `single` | `double`

Algorithms

meanrot determines a quaternion mean, \bar{q} , according to [1] (Sensor Fusion and Tracking Toolbox). \bar{q} is the quaternion that minimizes the squared Frobenius norm of the difference between rotation matrices:

$$\bar{q} = \arg \min_{q \in S^3} \sum_{i=1}^n \|A(q) - A(q_i)\|_F^2$$

References

- [1] Markley, F. Landis, Yang Chen, John Lucas Crassidis, and Yaakov Oshman. "Average Quaternions." *Journal of Guidance, Control, and Dynamics*. Vol. 30, Issue 4, 2007, pp. 1193-1197.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`dist` | `slerp`

Objects

`quaternion`

Introduced in R2018b

minus, -

Quaternion subtraction

Syntax

$$C = A - B$$

Description

$C = A - B$ subtracts quaternion B from quaternion A using quaternion subtraction. Either A or B may be a real number, in which case subtraction is performed with the real part of the quaternion argument.

Examples

Subtract a Quaternion from a Quaternion

Quaternion subtraction is defined as the subtraction of the corresponding parts of each quaternion. Create two quaternions and perform subtraction.

```
Q1 = quaternion([1,0,-2,7]);  
Q2 = quaternion([1,2,3,4]);
```

```
Q1minusQ2 = Q1 - Q2
```

```
Q1minusQ2 = quaternion  
    0 - 2i - 5j + 3k
```

Subtract a Real Number from a Quaternion

Addition and subtraction of real numbers is defined for quaternions as acting on the real part of the quaternion. Create a quaternion and then subtract 1 from the real part.

```
Q = quaternion([1,1,1,1])
```

```
Q = quaternion  
    1 + 1i + 1j + 1k
```

```
Qminus1 = Q - 1
```

```
Qminus1 = quaternion  
    0 + 1i + 1j + 1k
```

Input Arguments

A — Input

scalar | vector | matrix | multidimensional array

Input, specified as a quaternion, array of quaternions, real number, or array of real numbers.

Data Types: quaternion | single | double

B — Input

scalar | vector | matrix | multidimensional array

Input, specified as a quaternion, array of quaternions, real number, or array of real numbers.

Data Types: quaternion | single | double

Output Arguments

C — Result

scalar | vector | matrix | multidimensional array

Result of quaternion subtraction, returned as a scalar, vector, matrix, or multidimensional array of quaternions.

Data Types: quaternion

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

Objects

Introduced in R2018a

mtimes, *

Quaternion multiplication

Syntax

```
quatC = A*B
```

Description

`quatC = A*B` implements quaternion multiplication if either A or B is a quaternion. Either A or B must be a scalar.

You can use quaternion multiplication to compose rotation operators:

- To compose a sequence of frame rotations, multiply the quaternions in the order of the desired sequence of rotations. For example, to apply a p quaternion followed by a q quaternion, multiply in the order pq . The rotation operator becomes $(pq)^*v(pq)$, where v represents the object to rotate specified in quaternion form. $*$ represents conjugation.
- To compose a sequence of point rotations, multiply the quaternions in the reverse order of the desired sequence of rotations. For example, to apply a p quaternion followed by a q quaternion, multiply in the reverse order, qp . The rotation operator becomes $(qp)v(qp)^*$.

Examples

Multiply Quaternion Scalar and Quaternion Vector

Create a 4-by-1 column vector, A, and a scalar, b. Multiply A times b.

```
A = quaternion(randn(4,4))
```

```
A=4×1 object  
0.53767 + 0.31877i + 3.5784j + 0.7254k
```

```

1.8339 - 1.3077i + 2.7694j - 0.063055k
-2.2588 - 0.43359i - 1.3499j + 0.71474k
0.86217 + 0.34262i + 3.0349j - 0.20497k

```

```
b = quaternion(randn(1,4))
```

```
b = quaternion
-0.12414 + 1.4897i + 1.409j + 1.4172k

```

```
C = A*b
```

```
C=4x1 object
-6.6117 + 4.8105i + 0.94224j - 4.2097k
-2.0925 + 6.9079i + 3.9995j - 3.3614k
1.8155 - 6.2313i - 1.336j - 1.89k
-4.6033 + 5.8317i + 0.047161j - 2.791k

```

Input Arguments

A — Input

scalar | vector | matrix | multidimensional array

Input to multiply, specified as a quaternion, array of quaternions, real scalar, or array of real scalars.

If B is nonscalar, then A must be scalar.

Data Types: quaternion | single | double

B — Input

scalar | vector | matrix | multidimensional array

Input to multiply, specified as a quaternion, array of quaternions, real scalar, or array of real scalars.

If A is nonscalar, then B must be scalar.

Data Types: quaternion | single | double

Output Arguments

quatC — Quaternion product

scalar | vector | matrix | multidimensional array

Quaternion product, returned as a quaternion or array of quaternions.

Data Types: quaternion

Algorithms

Quaternion Multiplication by a Real Scalar

Given a quaternion

$$q = a_q + b_q i + c_q j + d_q k,$$

the product of q and a real scalar β is

$$\beta q = \beta a_q + \beta b_q i + \beta c_q j + \beta d_q k$$

Quaternion Multiplication by a Quaternion Scalar

The definition of the basis elements for quaternions,

$$i^2 = j^2 = k^2 = ijk = -1,$$

can be expanded to populate a table summarizing quaternion basis element multiplication:

	1	i	j	k
1	1	i	j	k
i	i	-1	k	-j
j	j	-k	-1	i
k	k	j	-i	-1

When reading the table, the rows are read first, for example: $ij = k$ and $ji = -k$.

Given two quaternions, $q = a_q + b_q i + c_q j + d_q k$, and $p = a_p + b_p i + c_p j + d_p k$, the multiplication can be expanded as:

$$\begin{aligned} z = pq &= (a_p + b_p i + c_p j + d_p k)(a_q + b_q i + c_q j + d_q k) \\ &= a_p a_q + a_p b_q i + a_p c_q j + a_p d_q k \\ &\quad + b_p a_q i + b_p b_q i^2 + b_p c_q ij + b_p d_q ik \\ &\quad + c_p a_q j + c_p b_q ji + c_p c_q j^2 + c_p d_q jk \\ &\quad + d_p a_q k + d_p b_q ki + d_p c_q kj + d_p d_q k^2 \end{aligned}$$

You can simplify the equation using the quaternion multiplication table:

$$\begin{aligned} z = pq &= a_p a_q + a_p b_q i + a_p c_q j + a_p d_q k \\ &\quad + b_p a_q i - b_p b_q + b_p c_q k - b_p d_q j \\ &\quad + c_p a_q j - c_p b_q k - c_p c_q + c_p d_q i \\ &\quad + d_p a_q k + d_p b_q j - d_p c_q i - d_p d_q \end{aligned}$$

References

- [1] Kuipers, Jack B. *Quaternions and Rotation Sequences: A Primer with Applications to Orbits, Aerospace, and Virtual Reality*. Princeton, NJ: Princeton University Press, 2007.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

Objects

Introduced in R2018a

norm

Quaternion norm

Syntax

`N = norm(quat)`

Description

`N = norm(quat)` returns the norm of the quaternion, `quat`.

Given a quaternion of the form $Q = a + bi + cj + dk$, the norm of the quaternion is defined as $\text{norm}(Q) = \sqrt{a^2 + b^2 + c^2 + d^2}$.

Examples

Calculate Quaternion Norm

Create a scalar quaternion and calculate its norm.

```
quat = quaternion(1,2,3,4);  
norm(quat)
```

```
ans = 5.4772
```

The quaternion norm is defined as the square root of the sum of the quaternion parts squared. Calculate the quaternion norm explicitly to verify the result of the `norm` function.

```
[a,b,c,d] = parts(quat);  
sqrt(a^2+b^2+c^2+d^2)
```

```
ans = 5.4772
```

Input Arguments

quat — Quaternion

scalar | vector | matrix | multidimensional array

Quaternion for which to calculate the norm, specified as a scalar, vector, matrix, or multidimensional array of quaternions.

Data Types: quaternion

Output Arguments

N — Quaternion norm

scalar | vector | matrix | multidimensional array

Quaternion norm. If the input `quat` is an array, the output is returned as an array the same size as `quat`. Elements of the array are real numbers with the same data type as the underlying data type of the quaternion, `quat`.

Data Types: single | double

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

normalize

Quaternion normalization

Syntax

```
quatNormalized = normalize(quat)
```

Description

`quatNormalized = normalize(quat)` normalizes the quaternion.

Given a quaternion of the form $Q = a + bi + cj + dk$, the normalized quaternion is defined as $Q/\sqrt{a^2 + b^2 + c^2 + d^2}$.

Examples

Normalize Elements of Quaternion Vector

Quaternions can represent rotations when normalized. You can use `normalize` to normalize a scalar, elements of a matrix, or elements of a multi-dimensional array of quaternions. Create a column vector of quaternions, then normalize them.

```
quatArray = quaternion([1,2,3,4; ...
                       2,3,4,1; ...
                       3,4,1,2]);
quatArrayNormalized = normalize(quatArray)
```

```
quatArrayNormalized=3x1 object
    0.18257 + 0.36515i + 0.54772j + 0.7303k
    0.36515 + 0.54772i + 0.7303j + 0.18257k
    0.54772 + 0.7303i + 0.18257j + 0.36515k
```

Input Arguments

quat — Quaternion to normalize

scalar | vector | matrix | multidimensional array

Quaternion to normalize, specified as a scalar, vector, matrix, or multidimensional array of quaternions.

Data Types: quaternion

Output Arguments

quatNormalized — Normalized quaternion

scalar | vector | matrix | multidimensional array

Normalized quaternion, returned as a quaternion or array of quaternions the same size as `quat`.

Data Types: quaternion

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

ones

Create quaternion array with real parts set to one and imaginary parts set to zero

Syntax

```
quat0nes = ones('quaternion')
quat0nes = ones(n,'quaternion')
quat0nes = ones(sz,'quaternion')
quat0nes = ones(sz1,...,szN,'quaternion')

quat0nes = ones( ___, 'like', prototype, 'quaternion')
```

Description

`quat0nes = ones('quaternion')` returns a scalar quaternion with the real part set to 1 and the imaginary parts set to 0.

Given a quaternion of the form $Q = a + bi + cj + dk$, a quaternion one is defined as $Q = 1 + 0i + 0j + 0k$.

`quat0nes = ones(n,'quaternion')` returns an n-by-n quaternion matrix with the real parts set to 1 and the imaginary parts set to 0.

`quat0nes = ones(sz,'quaternion')` returns an array of quaternion ones where the size vector, `sz`, defines `size(q0nes)`.

Example: `ones([1,4,2],'quaternion')` returns a 1-by-4-by-2 array of quaternions with the real parts set to 1 and the imaginary parts set to 0.

`quat0nes = ones(sz1,...,szN,'quaternion')` returns a `sz1`-by-...-by-`szN` array of ones where `sz1`, ..., `szN` indicates the size of each dimension.

`quat0nes = ones(___, 'like', prototype, 'quaternion')` specifies the underlying class of the returned quaternion array to be the same as the underlying class of the quaternion prototype.

Examples

Quaternion Scalar One

Create a quaternion scalar one.

```
quat0nes = ones('quaternion')  
  
quat0nes = quaternion  
1 + 0i + 0j + 0k
```

Square Matrix of Quaternion Ones

Create an n-by-n matrix of quaternion ones.

```
n = 3;  
quat0nes = ones(n, 'quaternion')  
  
quat0nes=3x3 object  
1 + 0i + 0j + 0k    1 + 0i + 0j + 0k    1 + 0i + 0j + 0k  
1 + 0i + 0j + 0k    1 + 0i + 0j + 0k    1 + 0i + 0j + 0k  
1 + 0i + 0j + 0k    1 + 0i + 0j + 0k    1 + 0i + 0j + 0k
```

Multidimensional Array of Quaternion Ones

Create a multidimensional array of quaternion ones by defining array dimensions in order. In this example, you create a 3-by-1-by-2 array. You can specify dimensions using a row vector or comma-separated integers. Specify the dimensions using a row vector and display the results:

```
dims = [3,1,2];  
quat0nesSyntax1 = ones(dims, 'quaternion')  
  
quat0nesSyntax1 = 3x1x2 quaternion array  
quat0nesSyntax1(:,:,1) =
```

```

1 + 0i + 0j + 0k
1 + 0i + 0j + 0k
1 + 0i + 0j + 0k

```

```
quat0nesSyntax1(:, :, 2) =
```

```

1 + 0i + 0j + 0k
1 + 0i + 0j + 0k
1 + 0i + 0j + 0k

```

Specify the dimensions using comma-separated integers, and then verify the equivalency of the two syntaxes:

```

quat0nesSyntax2 = ones(3,1,2,'quaternion');
isequal(quat0nesSyntax1,quat0nesSyntax2)

```

```

ans = logical
     1

```

Underlying Class of Quaternion Ones

A quaternion is a four-part hyper-complex number used in three-dimensional rotations and orientations. You can specify the underlying data type of the parts as `single` or `double`. The default is `double`.

Create a quaternion array of ones with the underlying data type set to `single`.

```
quat0nes = ones(2,'like',single(1),'quaternion')
```

```

quat0nes=2×2 object
    1 + 0i + 0j + 0k    1 + 0i + 0j + 0k
    1 + 0i + 0j + 0k    1 + 0i + 0j + 0k

```

Verify the underlying class using the `classUnderlying` function.

```
classUnderlying(quat0nes)
```

```

ans =
'single'

```

Input Arguments

n — Size of square quaternion matrix

integer value

Size of square quaternion matrix, specified as an integer value.

If *n* is zero or negative, then `quatOnes` is returned as an empty matrix.

Example: `ones(4, 'quaternion')` returns a 4-by-4 matrix of quaternions with the real parts set to 1 and the imaginary parts set to 0.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

sz — Output size

row vector of integer values

Output size, specified as a row vector of integer values. Each element of *sz* indicates the size of the corresponding dimension in `quatOnes`. If the size of any dimension is 0 or negative, then `quatOnes` is returned as an empty array.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

prototype — Quaternion prototype

variable

Quaternion prototype, specified as a variable.

Example: `ones(2, 'like', quat, 'quaternion')` returns a 2-by-2 matrix of quaternions with the same underlying class as the prototype quaternion, `quat`.

Data Types: `quaternion`

sz1, ..., szN — Size of each dimension

two or more integer values

Size of each dimension, specified as two or more integers. If the size of any dimension is 0 or negative, then `quatOnes` is returned as an empty array.

Example: `ones(2,3, 'quaternion')` returns a 2-by-3 matrix of quaternions with the real parts set to 1 and the imaginary parts set to 0.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

Output Arguments

quat0nes — Quaternion ones

scalar | vector | matrix | multidimensional array

Quaternion ones, returned as a scalar, vector, matrix, or multidimensional array of quaternions.

Given a quaternion of the form $Q = a + bi + cj + dk$, a quaternion one is defined as $Q = 1 + 0i + 0j + 0k$.

Data Types: `quaternion`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

parts

Extract quaternion parts

Syntax

```
[a,b,c,d] = parts(quat)
```

Description

`[a,b,c,d] = parts(quat)` returns the parts of the quaternion array as arrays, each the same size as `quat`.

Examples

Convert Quaternion to Matrix of Quaternion Parts

Convert a quaternion representation to parts using the `parts` function.

Create a two-element column vector of quaternions by specifying the parts.

```
quat = quaternion([1:4;5:8])
```

```
quat=2×1 object
    1 + 2i + 3j + 4k
    5 + 6i + 7j + 8k
```

Recover the parts from the quaternion matrix using the `parts` function. The parts are returned as separate output arguments, each the same size as the input 2-by-1 column vector of quaternions.

```
[qA,qB,qC,qD] = parts(quat)
```

```
qA = 2×1
```

1
5

qB = 2×1

2
6

qC = 2×1

3
7

qD = 2×1

4
8

Input Arguments

quat — Quaternion

scalar | vector | matrix | multidimensional array

Quaternion, specified as a quaternion or array of quaternions.

Data Types: quaternion

Output Arguments

[a, b, c, d] — Quaternion parts

scalar | vector | matrix | multidimensional array

Quaternion parts, returned as four arrays: a, b, c, and d. Each part is the same size as quat.

Data Types: single | double

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

compact

Introduced in R2018a

plotTransforms

Plot 3-D transforms from translations and rotations

Syntax

```
ax = plotTransforms(translations,rotations)
ax = plotTransforms(translations,rotations,Name,Value)
```

Description

`ax = plotTransforms(translations,rotations)` draws transform frames in a 3-D figure window using the specified translations and rotations. The z-axis always points upward.

`ax = plotTransforms(translations,rotations,Name,Value)` specifies additional options using name-value pair arguments. Specify multiple name-value pairs to set multiple options.

Input Arguments

translations — xyz-positions

[x y z] vector | matrix of [x y z] vectors

xyz-positions specified as a vector or matrix of [x y z] vectors. Each row represents a new frame to plot with a corresponding orientation in rotations.

Example: [1 1 1; 2 2 2]

rotations — Rotations of xyz-positions

quaternion array | matrix of [w x y z] quaternion vectors

Rotations of xyz-positions specified as a quaternion array or n -by-4 matrix of [w x y z] quaternion vectors. Each element of the array or each row of the matrix represents the rotation of the xyz-positions specified in translations.

Example: [1 1 1 0; 1 3 5 0]

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Example: `'FrameSize', 5`

FrameSize — Size of frames and attached meshes

positive numeric scalar

Size of frame and attached meshes, specified as positive numeric scalar.

InertialZDirection — Direction of positive z-axis of inertial frame

"up" (default) | "down"

Direction of the positive z-axis of inertial frame, specified as either "up" or "down". In the plot, the positive z-axis always points up.

MeshFilePath — File path of mesh file attached to frames

character vector | string scalar

File path of mesh file attached to frames, specified as either a character vector or string scalar. The mesh is attached to each plotted frame at the specified position and orientation. Provided `.stl` are

- `"fixedwing.stl"`
- `"multirotor.stl"`
- `"groundvehicle.stl"`

Example: `'fixedwing.stl'`

MeshColor — Color of attached mesh

"red" (default) | RGB triplet | string scalar

Color of attached mesh, specified as an RGB triple or string scalar.

Example: `[0 0 1]` or `"green"`

Parent — Axes used to plot transforms

Axes object | UIAxes object

Axes used to plot the pose graph, specified as the comma-separated pair consisting of 'Parent' and either an Axes or UIAxes object. See axes or uiaxes.

Output Arguments

ax — Axes used to plot transforms

Axes object | UIAxes object

Axes used to plot the pose graph, specified as the comma-separated pair consisting of 'Parent' and either an Axes or UIAxes object. See axes or uiaxes.

See Also

eul2quat | hom2cart | quaternion | rotm2quat | tform2quat

Introduced in R2018b

power, .^

Element-wise quaternion power

Syntax

```
C = A.^b
```

Description

`C = A.^b` raises each element of `A` to the corresponding power in `b`.

Examples

Raise a Quaternion to a Real Scalar Power

Create a quaternion and raise it to a real scalar power.

```
A = quaternion(1,2,3,4)
```

```
A = quaternion  
    1 + 2i + 3j + 4k
```

```
b = 3;  
C = A.^b
```

```
C = quaternion  
   -86 - 52i - 78j - 104k
```

Raise a Quaternion Array to Powers from a Multidimensional Array

Create a 2-by-1 quaternion array and raise it to powers from a 2-D array.

```
A = quaternion([1:4;5:8])
```

```
A=2×1 object
```

```
1 + 2i + 3j + 4k
5 + 6i + 7j + 8k
```

```
b = [1 0 2; 3 2 1]
```

```
b = 2×3
```

```
1    0    2
3    2    1
```

```
C = A.^b
```

```
C=2×3 object
```

```
1 + 2i + 3j + 4k      1 + 0i + 0j + 0k      -28 + 4i +
-2110 - 444i - 518j - 592k  -124 + 60i + 70j + 80k      5 + 6i +
```

Input Arguments

A — Base

scalar | vector | matrix | multidimensional array

Base, specified as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion | single | double

b — Exponent

scalar | vector | matrix | multidimensional array

Exponent, specified as a real scalar, vector, matrix, or multidimensional array.

Data Types: single | double

Output Arguments

C — Result

scalar | vector | matrix | multidimensional array

Each element of quaternion A raised to the corresponding power in b , returned as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

Algorithms

The polar representation of a quaternion $A = a + bi + cj + dk$ is given by

$$A = \|A\|(\cos\theta + \hat{u}\sin\theta)$$

where θ is the angle of rotation, and \hat{u} is the unit quaternion.

Quaternion A raised by a real exponent b is given by

$$P = A.^b = \|A\|^b(\cos(b\theta) + \hat{u}\sin(b\theta))$$

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`exp` | `log`

Objects

quaternion

Introduced in R2018b

prod

Product of a quaternion array

Syntax

```
quatProd = prod(quat)
quatProd = prod(quat,dim)
```

Description

`quatProd = prod(quat)` returns the quaternion product of the elements of the array.

`quatProd = prod(quat,dim)` calculates the quaternion product along dimension `dim`.

Examples

Product of Quaternions in Each Column

Create a 3-by-3 array whose elements correspond to their linear indices.

```
A = reshape(quaternion(randn(9,4)),3,3)
```

A=3×3 object

```
0.53767 + 2.7694i + 1.409j - 0.30344k    0.86217 + 0.7254i - 1.2075j
1.8339 - 1.3499i + 1.4172j + 0.29387k    0.31877 - 0.063055i + 0.71724j
-2.2588 + 3.0349i + 0.6715j - 0.78728k    -1.3077 + 0.71474i + 1.6302j
```

Find the product of the quaternions in each column. The length of the first dimension is 1, and the length of the second dimension matches `size(A,2)`.

```
B = prod(A)
```

B=1×3 object

```
-19.837 - 9.1521i + 15.813j - 19.918k    -5.4708 - 0.28535i + 3.077j - 1.2
```

Product of Specified Dimension of Quaternion Array

You can specify which dimension of a quaternion array to take the product of.

Create a 2-by-2-by-2 quaternion array.

```
A = reshape(quaternion(randn(8,4)),2,2,2);
```

Find the product of the elements in each page of the array. The length of the first dimension matches `size(A,1)`, the length of the second dimension matches `size(A,2)`, and the length of the third dimension is 1.

```
dim = 3;  
B = prod(A,dim)
```

```
B=2×2 object  
-2.4847 + 1.1659i - 0.37547j + 2.8068k    0.28786 - 0.29876i - 0.51231j - 4.2  
0.38986 - 3.6606i - 2.0474j - 6.047k    -1.741 - 0.26782i + 5.4346j + 4.1
```

Input Arguments

quat — Quaternion

scalar | vector | matrix | multidimensional array

Quaternion, specified as scalar, vector, matrix, or multidimensional array of quaternions.

Example: `qProd = prod(quat)` calculates the quaternion product along the first non-singleton dimension of `quat`.

Data Types: quaternion

dim — Dimension

first non-singleton dimension (default) | positive integer

Dimension along which to calculate the quaternion product, specified as a positive integer. If `dim` is not specified, `prod` operates along the first non-singleton dimension of `quat`.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

Output Arguments

quatProd — Quaternion product

positive integer

Quaternion product, returned as quaternion array with one less non-singleton dimension than `quat`.

For example, if `quat` is a 2-by-2-by-5 array,

- `prod(quat,1)` returns a 1-by-2-by-5 array.
- `prod(quat,2)` returns a 2-by-1-by-5 array.
- `prod(quat,3)` returns a 2-by-2 array.

Data Types: `quaternion`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

quat2axang

Convert quaternion to axis-angle rotation

Syntax

```
axang = quat2axang(quat)
```

Description

`axang = quat2axang(quat)` converts a quaternion, `quat`, to the equivalent axis-angle rotation, `axang`.

Examples

Convert Quaternion to Axis-Angle Rotation

```
quat = [0.7071 0.7071 0 0];  
axang = quat2axang(quat)
```

```
axang = 1×4
```

```
    1.0000         0         0    1.5708
```

Input Arguments

quat — Unit quaternion

n-by-4 matrix | *n*-element vector of quaternion objects

Unit quaternion, specified as an *n*-by-4 matrix or *n*-element vector of quaternion objects containing *n* quaternions. If the input is a matrix, each row is a quaternion vector of the form $q = [w \ x \ y \ z]$, with *w* as the scalar number.

Example: [0.7071 0.7071 0 0]

Output Arguments

axang — Rotation given in axis-angle form

n-by-4 matrix

Rotation given in axis-angle form, returned as an *n*-by-4 matrix of *n* axis-angle rotations. The first three elements of every row specify the rotation axis, and the last element defines the rotation angle (in radians).

Example: [1 0 0 pi/2]

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

axang2quat | quaternion

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

quat2eul

Convert quaternion to Euler angles

Syntax

```
eul = quat2eul(quat)
eul = quat2eul(quat,sequence)
```

Description

`eul = quat2eul(quat)` converts a quaternion rotation, `quat`, to the corresponding Euler angles, `eul`. The default order for Euler angle rotations is "ZYX".

`eul = quat2eul(quat,sequence)` converts a quaternion into Euler angles. The Euler angles are specified in the axis rotation sequence, `sequence`. The default order for Euler angle rotations is "ZYX".

Examples

Convert Quaternion to Euler Angles

```
quat = [0.7071 0.7071 0 0];
eulZYX = quat2eul(quat)
```

```
eulZYX = 1×3
         0         0    1.5708
```

Convert Quaternion to Euler Angles Using ZYZ Axis Order

```
quat = [0.7071 0.7071 0 0];
eulZYZ = quat2eul(quat, 'ZYZ')

eulZYZ = 1×3

    1.5708    -1.5708    -1.5708
```

Input Arguments

quat — Unit quaternion

n-by-4 matrix | *n*-element vector of quaternion objects

Unit quaternion, specified as an *n*-by-4 matrix or *n*-element vector of quaternion objects containing *n* quaternions. If the input is a matrix, each row is a quaternion vector of the form $q = [w \ x \ y \ z]$, with w as the scalar number.

Example: `[0.7071 0.7071 0 0]`

sequence — Axis rotation sequence

"ZYX" (default) | "ZYZ" | "XYZ"

Axis rotation sequence for the Euler angles, specified as one of these string scalars:

- "ZYX" (default) - The order of rotation angles is *z*-axis, *y*-axis, *x*-axis.
- "ZYZ" - The order of rotation angles is *z*-axis, *y*-axis, *z*-axis.
- "XYZ" - The order of rotation angles is *x*-axis, *y*-axis, *z*-axis.

Data Types: string | char

Output Arguments

eul — Euler rotation angles

n-by-3 matrix

Euler rotation angles in radians, returned as an *n*-by-3 array of Euler rotation angles. Each row represents one Euler angle set.

Example: [0 0 1.5708]

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

eul2quat | quaternion

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

quat2rotm

Convert quaternion to rotation matrix

Syntax

```
rotm = quat2rotm(quat)
```

Description

`rotm = quat2rotm(quat)` converts a quaternion `quat` to an orthonormal rotation matrix, `rotm`. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Examples

Convert Quaternion to Rotation Matrix

```
quat = [0.7071 0.7071 0 0];  
rotm = quat2rotm(quat)
```

```
rotm = 3×3
```

```
    1.0000         0         0  
         0   -0.0000   -1.0000  
         0    1.0000   -0.0000
```

Input Arguments

quat — Unit quaternion

n-by-4 matrix | *n*-element vector of quaternion objects

Unit quaternion, specified as an n -by-4 matrix or n -element vector of quaternion objects containing n quaternions. If the input is a matrix, each row is a quaternion vector of the form $q = [w \ x \ y \ z]$, with w as the scalar number.

Example: `[0.7071 0.7071 0 0]`

Output Arguments

rotm — Rotation matrix

3-by-3-by- n matrix

Rotation matrix, returned as a 3-by-3-by- n matrix containing n rotation matrices. Each rotation matrix has a size of 3-by-3 and is orthonormal. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Example: `[0 0 1; 0 1 0; -1 0 0]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`quaternion` | `rotm2quat`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

quat2tform

Convert quaternion to homogeneous transformation

Syntax

```
tform = quat2tform(quat)
```

Description

`tform = quat2tform(quat)` converts a quaternion, `quat`, to a homogeneous transformation matrix, `tform`. When using the transformation matrix, premultiply it with the coordinates to be transformed (as opposed to postmultiplying).

Examples

Convert Quaternion to Homogeneous Transformation

```
quat = [0.7071 0.7071 0 0];  
tform = quat2tform(quat)
```

```
tform = 4×4
```

```
    1.0000         0         0         0  
         0   -0.0000   -1.0000         0  
         0    1.0000   -0.0000         0  
         0         0         0    1.0000
```

Input Arguments

quat — Unit quaternion

n-by-4 matrix | *n*-element vector of quaternion objects

Unit quaternion, specified as an n -by-4 matrix or n -element vector of quaternion objects containing n quaternions. If the input is a matrix, each row is a quaternion vector of the form $q = [w \ x \ y \ z]$, with w as the scalar number.

Example: `[0.7071 0.7071 0 0]`

Output Arguments

tform — Homogeneous transformation

4-by-4-by- n matrix

Homogeneous transformation matrix, returned as a 4-by-4-by- n matrix of n homogeneous transformations. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Example: `[0 0 1 0; 0 1 0 0; -1 0 0 0; 0 0 0 1]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`quaternion` | `tform2quat`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

rdivide, ./

Element-wise quaternion right division

Syntax

$C = A ./ B$

Description

$C = A ./ B$ performs quaternion element-wise division by dividing each element of quaternion A by the corresponding element of quaternion B.

Examples

Divide a Quaternion Array by a Real Scalar

Create a 2-by-1 quaternion array, and divide it element-by-element by a real scalar.

```
A = quaternion([1:4;5:8])
```

A=2×1 object

```
1 + 2i + 3j + 4k
5 + 6i + 7j + 8k
```

```
B = 2;
```

```
C = A./B
```

C=2×1 object

```
0.5 + 1i + 1.5j + 2k
2.5 + 3i + 3.5j + 4k
```

Divide a Quaternion Array by Another Quaternion Array

Create a 2-by-2 quaternion array, and divide it element-by-element by another 2-by-2 quaternion array.

```
q1 = quaternion(magic(4));  
A = reshape(q1,2,2)
```

```
A=2×2 object  
    16 + 2i + 3j + 13k    9 + 7i + 6j + 12k  
    5 + 11i + 10j + 8k   4 + 14i + 15j + 1k
```

```
q2 = quaternion([1:4;3:6;2:5;4:7]);  
B = reshape(q2,2,2)
```

```
B=2×2 object  
    1 + 2i + 3j + 4k    2 + 3i + 4j + 5k  
    3 + 4i + 5j + 6k    4 + 5i + 6j + 7k
```

```
C = A./B
```

```
C=2×2 object  
    2.7 - 0.1i - 2.1j - 1.7k    2.2778 + 0.092593i - 0.46296j  
    1.8256 - 0.081395i + 0.45349j - 0.24419k    1.4524 - 0.5i + 1.0238j
```

Input Arguments

A — Dividend

scalar | vector | matrix | multidimensional array

Dividend, specified as a quaternion, an array of quaternions, a real scalar, or an array of real numbers.

A and B must have compatible sizes. In the simplest cases, they can be the same size or one can be a scalar. Two inputs have compatible sizes if, for every dimension, the dimension sizes of the inputs are the same or one of the dimensions is 1.

Data Types: quaternion | single | double

B — Divisor

scalar | vector | matrix | multidimensional array

Divisor, specified as a quaternion, an array of quaternions, a real scalar, or an array of real numbers.

A and B must have compatible sizes. In the simplest cases, they can be the same size or one can be a scalar. Two inputs have compatible sizes if, for every dimension, the dimension sizes of the inputs are the same or one of the dimensions is 1.

Data Types: quaternion | single | double

Output Arguments

C — Result

scalar | vector | matrix | multidimensional array

Result of quaternion division, returned as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

Algorithms

Quaternion Division

Given a quaternion $A = a_1 + a_2i + a_3j + a_4k$ and a real scalar p ,

$$C = A ./ p = \frac{a_1}{p} + \frac{a_2}{p}i + \frac{a_3}{p}j + \frac{a_4}{p}k$$

Note For a real scalar p , $A ./ p = A ./ p$.

Quaternion Division by a Quaternion Scalar

Given two quaternions A and B of compatible sizes,

$$C = A ./ B = A .* B^{-1} = A .* \left(\frac{\text{conj}(B)}{\text{norm}(B)^2} \right)$$

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`conj` | `ldivide`, `.\` | `norm` | `times`, `.*`

Objects

`quaternion`

Introduced in R2018b

quinticpolytraj

Generate fifth-order trajectories

Syntax

```
[q,qd,qdd,pp] = quinticpolytraj(wayPoints,timePoints,tSamples)  
[q,qd,qdd,pp] = quinticpolytraj( ____,Name,Value)
```

Description

`[q,qd,qdd,pp] = quinticpolytraj(wayPoints,timePoints,tSamples)` generates a fifth-order polynomial that achieves a given set of input waypoints with corresponding time points. The function outputs positions, velocities, and accelerations at the given time samples, `tSamples`. The function also returns the piecewise polynomial `pp` form of the polynomial trajectory with respect to time.

`[q,qd,qdd,pp] = quinticpolytraj(____,Name,Value)` specifies additional parameters as `Name,Value` pair arguments using any combination of the previous syntaxes.

Examples

Compute Quintic Trajectory for 2-D Planar Motion

Use the `quinticpolytraj` function with a given set of 2-D `xy` waypoints. Time points for the waypoints are also given.

```
wpts = [1 4 4 3 -2 0; 0 1 2 4 3 1];  
tpts = 0:5;
```

Specify a time vector for sampling the trajectory. Sample at a smaller interval than the specified time points.


```
tvec = 0:0.01:5;
```

Compute the quintic trajectory. The function outputs the trajectory positions (q), velocity (qd), acceleration (qdd), and polynomial coefficients (pp) of the quintic polynomial.

```
[q, qd, qdd, pp] = quinticpolytraj(wpts, tpts, tvec);
```


Plot the quintic trajectories for the x - and y -positions. Compare the trajectory with each waypoint.

```
plot(tvec, q)
hold all
plot(tpts, wpts, 'x')
xlabel('t')
ylabel('Positions')
legend('X-positions', 'Y-positions')
hold off
```

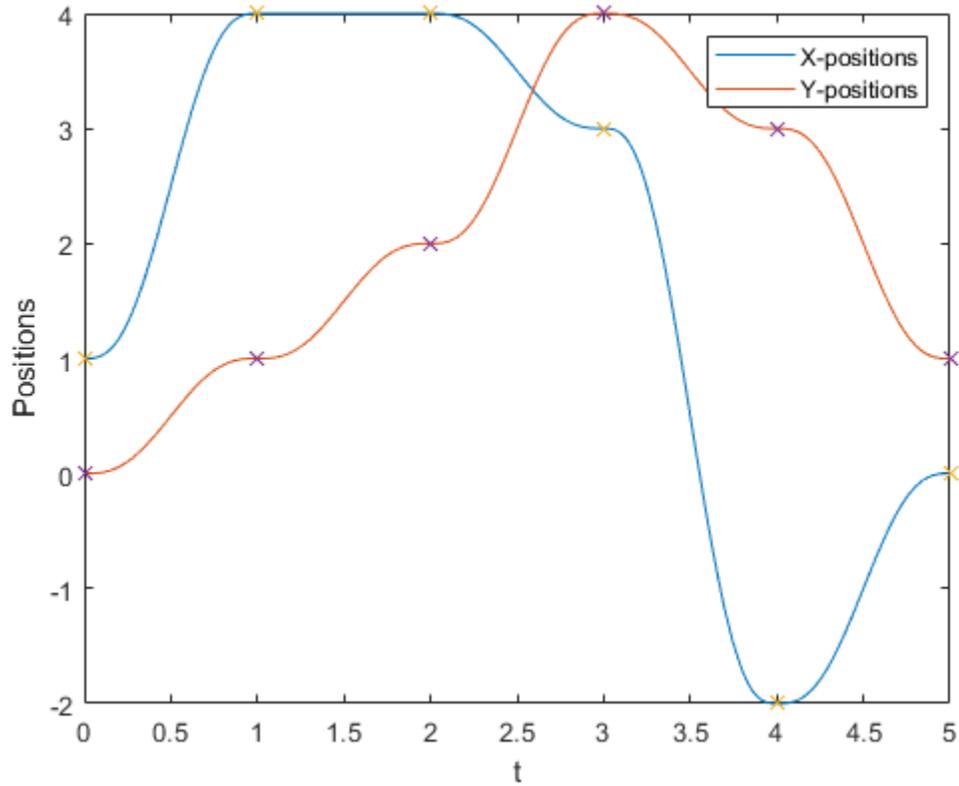

You can also verify the actual positions in the 2-D plane. Plot the separate rows of the q vector and the waypoints as x - and y - positions.

```
figure
plot(q(1,:),q(2,:),'.b',wpts(1,:),wpts(2,:),'or')
xlabel('X')
ylabel('Y')
```

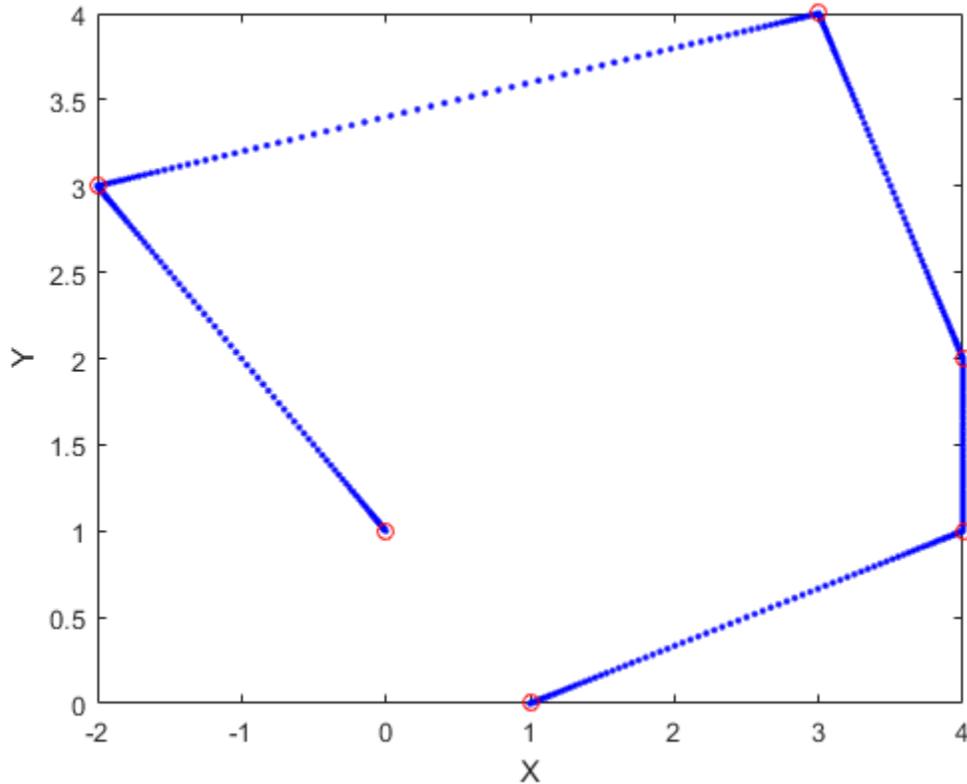

Input Arguments

wayPoints — Waypoints for trajectory

n-by-*p* matrix

Points for waypoints of trajectory, specified as an *n*-by-*p* matrix, where *n* is the dimension of the trajectory and *p* is the number of waypoints.

Example: [1 4 4 3 -2 0; 0 1 2 4 3 1]

Data Types: single | double

timePoints — Time points for waypoints of trajectory*p*-element vector

Time points for waypoints of trajectory, specified as a *p*-element vector.

Example: [0 2 4 5 8 10]

Data Types: single | double

tSamples — Time samples for trajectory*m*-element vector

Time samples for the trajectory, specified as an *m*-element vector. The output position, *q*, velocity, *qd*, and accelerations, *qdd*, are sampled at these time intervals.

Example: 0:0.01:10

Data Types: single | double

Name-Value Pair Arguments

Specify optional comma-separated pairs of *Name*, *Value* arguments. *Name* is the argument name and *Value* is the corresponding value. *Name* must appear inside quotes. You can specify several name and value pair arguments in any order as *Name1*, *Value1*, ..., *NameN*, *ValueN*.

Example: 'VelocityBoundaryCondition',[1 0 -1 -1 0 0; 1 1 1 -1 -1 -1]

VelocityBoundaryCondition — Velocity boundary conditions for each waypoint*zeroes*(*n*,*p*) (default) | *n*-by-*p* matrix

Velocity boundary conditions for each waypoint, specified as the comma-separated pair consisting of 'VelocityBoundaryCondition' and an *n*-by-*p* matrix. Each row corresponds to the velocity at all of *p* waypoints for the respective variable in the trajectory.

Example: [1 0 -1 -1 0 0; 1 1 1 -1 -1 -1]

Data Types: single | double

AccelerationBoundaryCondition — Acceleration boundary conditions for each waypoint*zeroes*(*n*,*p*) (default) | *n*-by-*p* matrix

Acceleration boundary conditions for each waypoint, specified as the comma-separated pair consisting of 'VelocityBoundaryCondition' and an n -by- p matrix. Each row corresponds to the acceleration at all of p waypoints for the respective variable in the trajectory.

Example: [1 0 -1 -1 0 0; 1 1 1 -1 -1 -1]

Data Types: single | double

Output Arguments

q — Positions of trajectory

m -element vector

Positions of the trajectory at the given time samples in `tSamples`, returned as an m -element vector, where m is the length of `tSamples`.

Data Types: single | double

qd — Velocities of trajectory

vector

Velocities of the trajectory at the given time samples in `tSamples`, returned as a vector.

Data Types: single | double

qdd — Accelerations of trajectory

vector

Accelerations of the trajectory at the given time samples in `tSamples`, returned as a vector.

Data Types: single | double

pp — Piecewise-polynomial

structure

Piecewise-polynomial, returned as a structure that defines the polynomial for each section of the piecewise trajectory. You can build your own piecewise polynomials using `mkpp`, or evaluate the polynomial at specified times using `ppval`. The structure contains the fields:

- `form`: 'pp'.

- **breaks**: p -element vector of times when the piecewise trajectory changes forms. p is the number of waypoints.
- **coefs**: $n(p-1)$ -by-order matrix for the coefficients for the polynomials. $n(p-1)$ is the dimension of the trajectory times the number of **pieces**. Each set of n rows defines the coefficients for the polynomial that described each variable trajectory.
- **pieces**: $p-1$. The number of breaks minus 1.
- **order**: Degree of the polynomial + 1. For example, cubic polynomials have an order of 4.
- **dim**: n . The dimension of the control point positions.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

[bsplinepolytraj](#) | [cubicpolytraj](#) | [rottraj](#) | [transformtraj](#) | [trapveltraj](#)

Introduced in R2019a

randrot

Uniformly distributed random rotations

Syntax

```
R = randrot
R = randrot(m)
R = randrot(m1, ..., mN)
R = randrot([m1, ..., mN])
```

Description

`R = randrot` returns a unit quaternion drawn from a uniform distribution of random rotations.

`R = randrot(m)` returns an m -by- m matrix of unit quaternions drawn from a uniform distribution of random rotations.

`R = randrot(m1, ..., mN)` returns an $m1$ -by-...-by- mN array of random unit quaternions, where $m1, \dots, mN$ indicate the size of each dimension. For example, `randrot(3, 4)` returns a 3-by-4 matrix of random unit quaternions.

`R = randrot([m1, ..., mN])` returns an $m1$ -by-...-by- mN array of random unit quaternions, where $m1, \dots, mN$ indicate the size of each dimension. For example, `randrot([3, 4])` returns a 3-by-4 matrix of random unit quaternions.

Examples

Matrix of Random Rotations


Generate a 3-by-3 matrix of uniformly distributed random rotations.

```
r = randrot(3)
```

Create Uniform Distribution of Random Rotations

Create a vector of 500 random quaternions. Use rotatepoint on page 2-202 to visualize the distribution of the random rotations applied to point (1, 0, 0).

```
q = randrot(500,1);  
pt = rotatepoint(q, [1 0 0]);  
  
figure  
scatter3(pt(:,1), pt(:,2), pt(:,3))  
axis equal
```

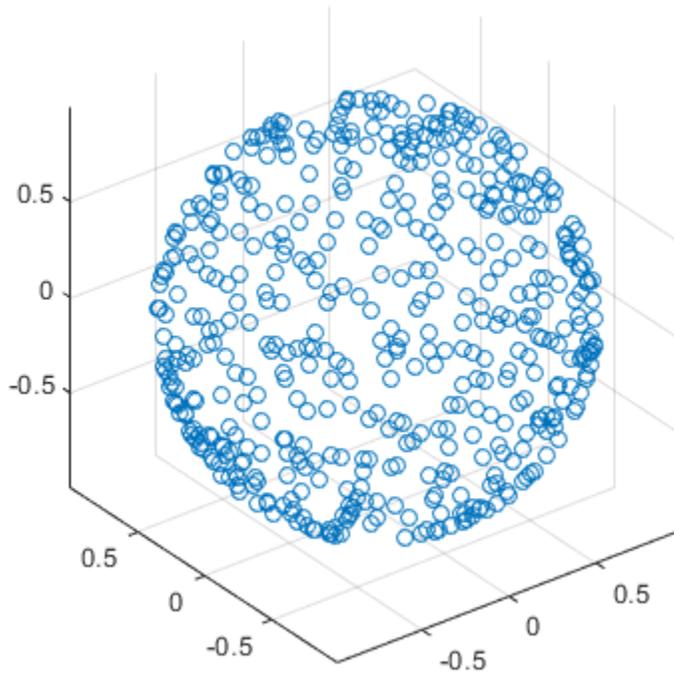

Input Arguments

m — Size of square matrix

integer

Size of square quaternion matrix, specified as an integer value. If m is 0 or negative, then R is returned as an empty matrix.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

m1, . . . , mN — Size of each dimension

two or more integer values

Size of each dimension, specified as two or more integer values. If the size of any dimension is 0 or negative, then R is returned as an empty array.

Example: `randrot(2,3)` returns a 2-by-3 matrix of random quaternions.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

[m1, . . . , mN] — Vector of size of each dimension

row vector of integer values

Vector of size of each dimension, specified as a row vector of two or more integer values. If the size of any dimension is 0 or negative, then R is returned as an empty array.

Example: `randrot([2,3])` returns a 2-by-3 matrix of random quaternions.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

Output Arguments

R — Random quaternions

scalar | vector | matrix | multidimensional array

Random quaternions, returned as a quaternion or array of quaternions.

Data Types: `quaternion`

References

- [1] Shoemake, K. "Uniform Random Rotations." *Graphics Gems III* (K. David, ed.). New York: Academic Press, 1992.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

quaternion

Introduced in R2019a

readBinaryOccupancyGrid

Read binary occupancy grid

Syntax

```
map = readBinaryOccupancyGrid(msg)
map = readBinaryOccupancyGrid(msg, thresh)
map = readBinaryOccupancyGrid(msg, thresh, val)
```

Description

`map = readBinaryOccupancyGrid(msg)` returns a `binaryOccupancyMap` object by reading the data inside a ROS message, `msg`, which must be a `'nav_msgs/OccupancyGrid'` message. All message data values greater than or equal to the occupancy threshold are set to occupied, 1, in the map. All other values, including unknown values (-1) are set to unoccupied, 0, in the map.

`map = readBinaryOccupancyGrid(msg, thresh)` specifies a threshold, `thresh`, for occupied values. All values greater than or equal to the threshold are set to occupied, 1. All other values are set to unoccupied, 0.

`map = readBinaryOccupancyGrid(msg, thresh, val)` specifies a value to set for unknown values (-1). By default, all unknown values are set to unoccupied, 0.

Examples

Read Binary Occupancy Data from ROS Message


Create a occupancy grid message and populate it with data.

```
msg = rosmassage('nav_msgs/OccupancyGrid');
msg.Info.Height = 10;
msg.Info.Width = 10;
```

```
msg.Info.Resolution = 0.1;  
msg.Data = 100*rand(100,1);
```

Read data from message. Show the map.

```
map = readBinaryOccupancyGrid(msg);  
show(map)
```

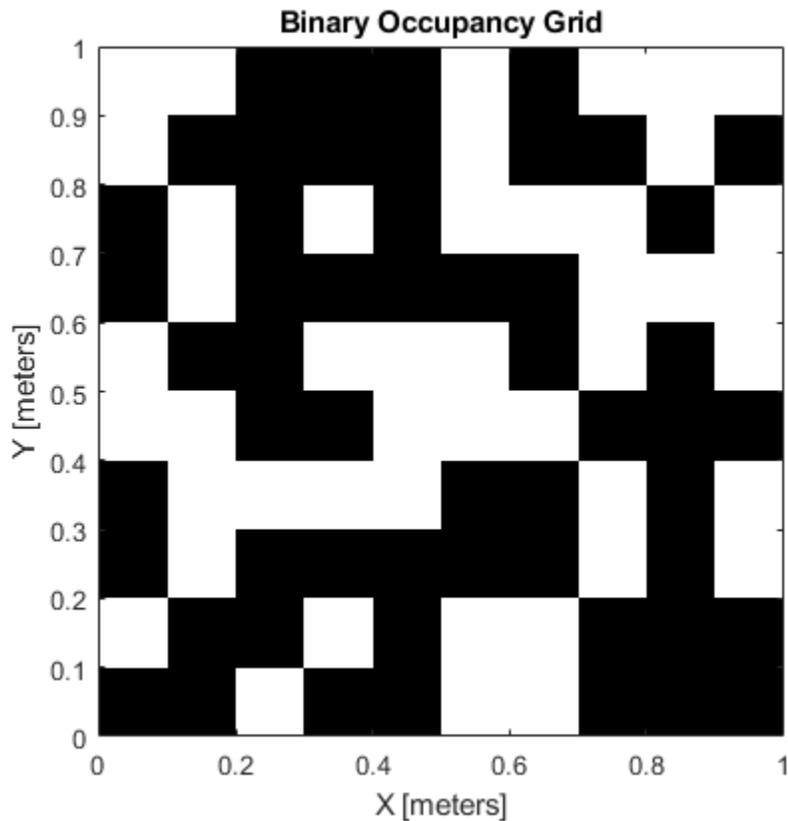

Read Binary Occupancy Data from ROS Message Using Threshold and Unknown Value Replacement

Create a occupancy grid message and populate it with data.

Input Arguments

msg — 'nav_msgs/OccupancyGrid' ROS message

OccupancyGrid object handle

'nav_msgs/OccupancyGrid' ROS message, specified as a OccupancyGrid object handle.

thresh — Threshold for occupied values

50 (default) | scalar

Threshold for occupied values, specified as a scalar. Any value greater than or equal to the threshold is set to occupied, 1. All other values are set to unoccupied, 0.

Data Types: double

val — Value to replace unknown values

0 (default) | 1

Value to replace unknown values, specified as either 0 or 1. Unknown message values (-1) are set to the given value.

Data Types: double | logical

Output Arguments

map — Binary occupancy grid

binaryOccupancyMap object handle

Binary occupancy grid, returned as a binaryOccupancyMap object handle. map is converted from a 'nav_msgs/OccupancyGrid' message on the ROS network. It is an object with a grid of binary values, where 1 indicates an occupied location and 0 indications an unoccupied location.

See Also

binaryOccupancyMap | mobileRobotPRM

Introduced in R2015a

roboticsAddons

Install add-ons for robotics

Syntax

```
roboticsAddons
```

Description

`roboticsAddons` allows you to download and install add-ons for Robotics System Toolbox. Use this function to open the Add-ons Explorer to browse the available add-ons.

Examples

Install Add-ons for Robotics System Toolbox™

```
roboticsAddons
```

See Also

Topics

- “Install Robotics System Toolbox Add-ons”
- “ROS Custom Message Support” (ROS Toolbox)
- “Get and Manage Add-Ons” (MATLAB)

Introduced in R2016a

roboticsSupportPackages

Download and install support packages for Robotics System Toolbox

Note `roboticsSupportPackages` has been removed. Use `roboticsAddons` instead.

Syntax

`roboticsSupportPackages`

Description

`roboticsSupportPackages` opens the Support Package Installer to download and install support packages for Robotics System Toolbox. For more details, see “Install Robotics System Toolbox Add-ons”.

Examples

Open Robotics System Toolbox Support Package Installer

`roboticsSupportPackages`

Introduced in R2015a

rotateframe


Quaternion frame rotation

Syntax

```
rotationResult = rotateframe(quat, cartesianPoints)
```

Description

`rotationResult = rotateframe(quat, cartesianPoints)` rotates the frame of reference for the Cartesian points using the quaternion, `quat`. The elements of the quaternion are normalized before use in the rotation.

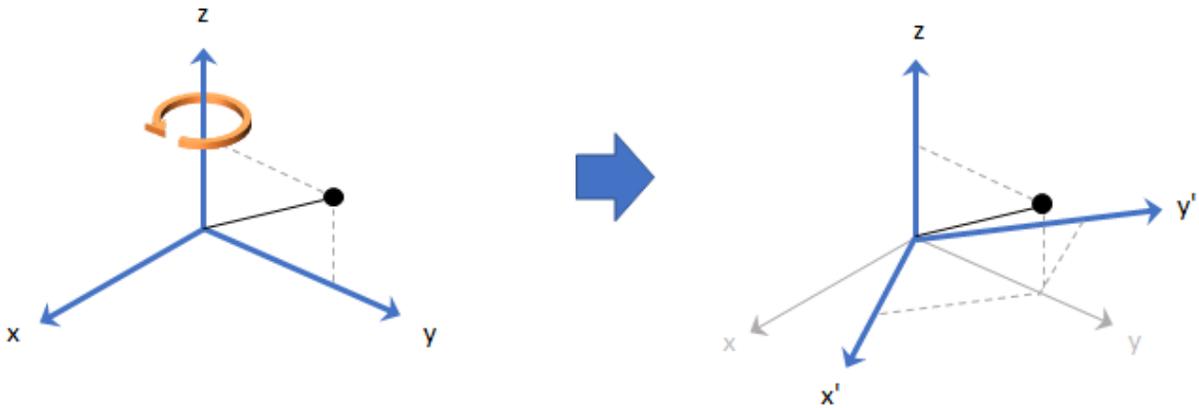


Examples

Rotate Frame Using Quaternion Vector

Define a point in three dimensions. The coordinates of a point are always specified in the order x , y , and z . For convenient visualization, define the point on the x - y plane.

```
x = 0.5;  
y = 0.5;  
z = 0;  
plot(x,y, 'ko')  
hold on  
axis([-1 1 -1 1])
```

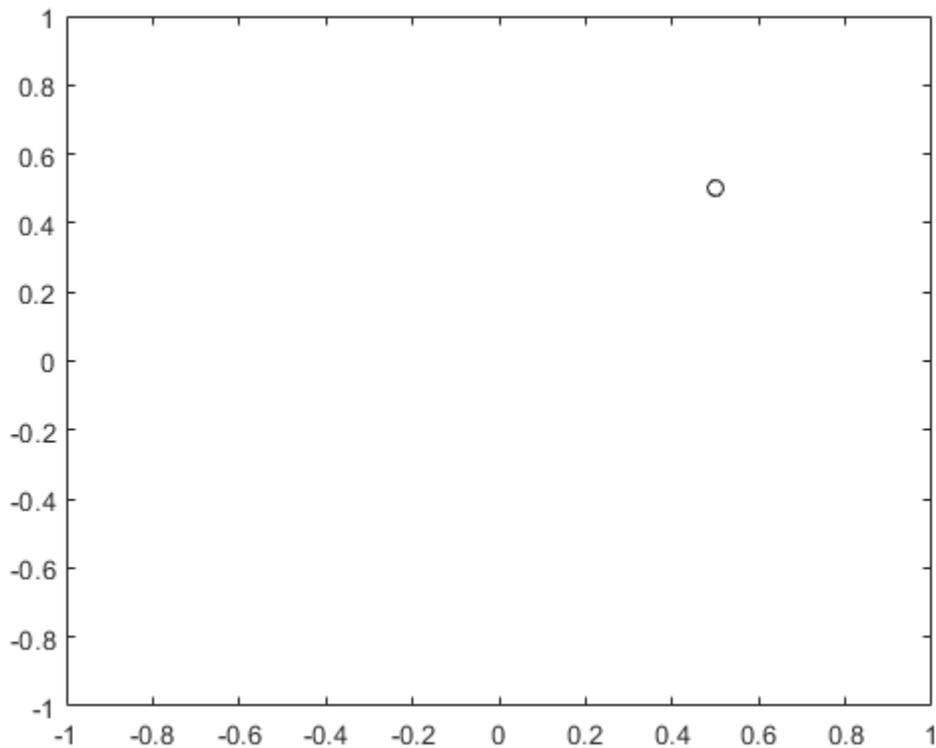

Create a quaternion vector specifying two separate rotations, one to rotate the frame 45 degrees and another to rotate the point -90 degrees about the z-axis. Use `rotateframe` to perform the rotations.

```
quat = quaternion([0,0,pi/4; ...  
                 0,0,-pi/2], 'euler', 'XYZ', 'frame');
```


```
rereferencedPoint = rotateframe(quat,[x,y,z])
```

```
rereferencedPoint = 2×3
```

```
    0.7071    -0.0000         0  
   -0.5000     0.5000         0
```

Plot the rereferenced points.

```
plot(rereferencedPoint(1,1),rereferencedPoint(1,2),'bo')  
plot(rereferencedPoint(2,1),rereferencedPoint(2,2),'go')
```

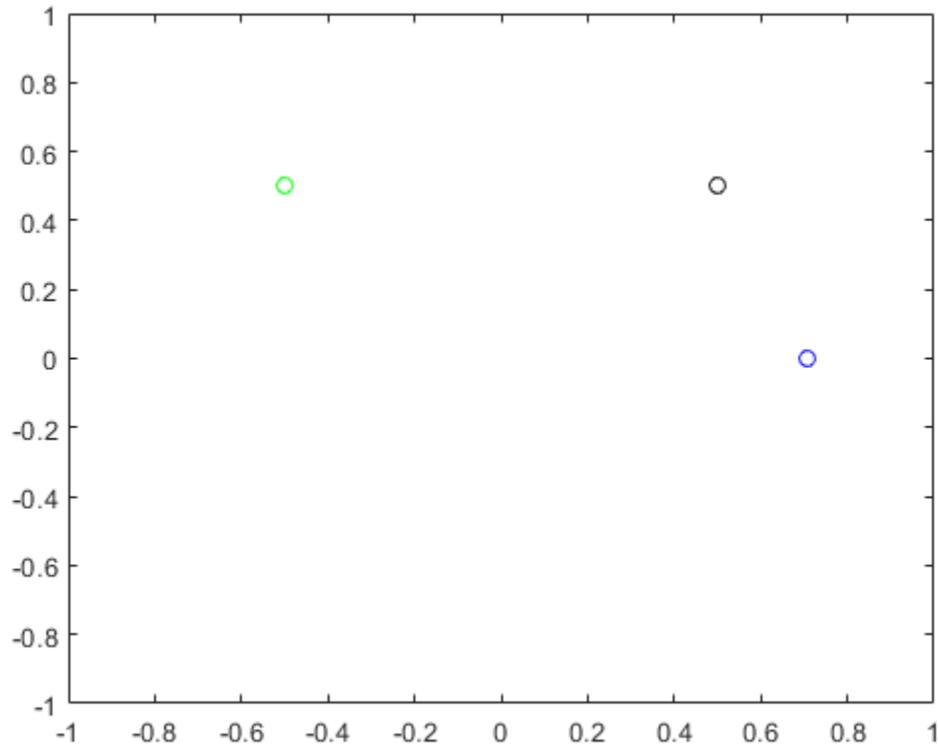

Rereference Group of Points using Quaternion

Define two points in three-dimensional space. Define a quaternion to rereference the points by first rotating the reference frame about the z-axis 30 degrees and then about the new y-axis 45 degrees.


```
a = [1,0,0];  
b = [0,1,0];  
quat = quaternion([30,45,0], 'eulerd', 'ZYX', 'point');
```

Use `rotateframe` to reference both points using the quaternion rotation operator. Display the result.

```
rP = rotateframe(quat,[a;b])  
  
rP = 2×3  
  
    0.6124    -0.3536    0.7071  
    0.5000    0.8660   -0.0000
```

Visualize the original orientation and the rotated orientation of the points. Draw lines from the origin to each of the points for visualization purposes.

```
plot3(a(1),a(2),a(3), 'bo');  
  
hold on  
grid on  
axis([-1 1 -1 1 -1 1])  
xlabel('x')  
ylabel('y')  
zlabel('z')  
  
plot3(b(1),b(2),b(3), 'ro');  
plot3(rP(1,1),rP(1,2),rP(1,3), 'bd')  
plot3(rP(2,1),rP(2,2),rP(2,3), 'rd')  
  
plot3([0;rP(1,1)],[0;rP(1,2)],[0;rP(1,3)], 'k')  
plot3([0;rP(2,1)],[0;rP(2,2)],[0;rP(2,3)], 'k')  
plot3([0;a(1)],[0;a(2)],[0;a(3)], 'k')  
plot3([0;b(1)],[0;b(2)],[0;b(3)], 'k')
```

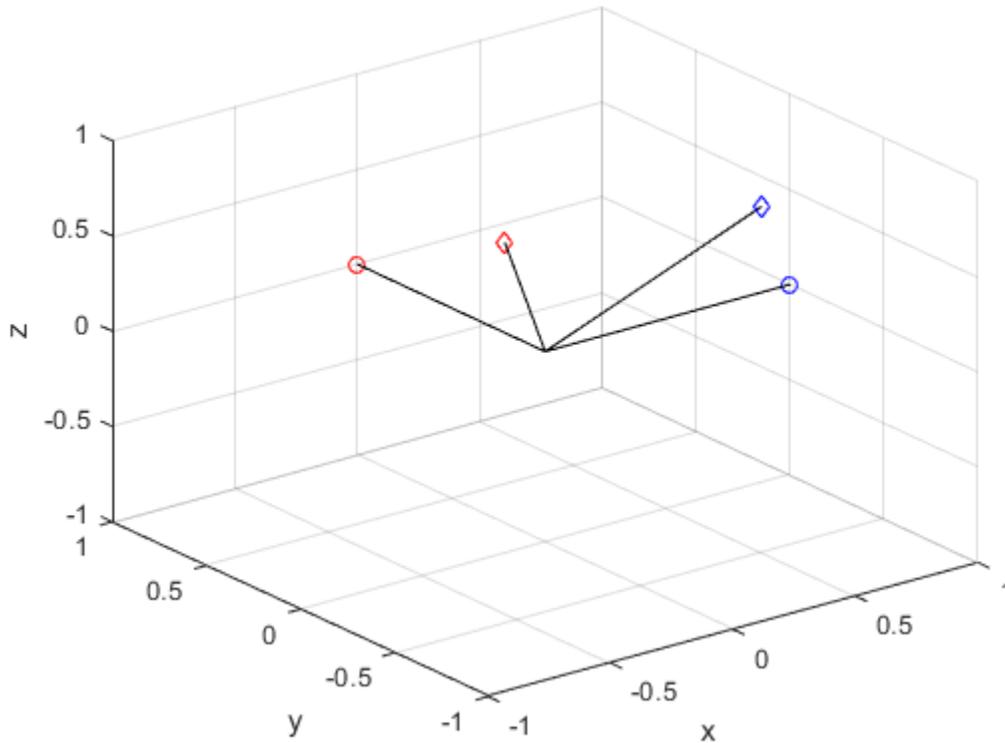

Input Arguments

quat — Quaternion that defines rotation

scalar | vector

Quaternion that defines rotation, specified as a scalar quaternion or vector of quaternions.

Data Types: quaternion

cartesianPoints — Three-dimensional Cartesian points

1-by-3 vector | N -by-3 matrix

Three-dimensional Cartesian points, specified as a 1-by-3 vector or N -by-3 matrix.

Data Types: `single` | `double`

Output Arguments

rotationResult — Re-referenced Cartesian points

vector | matrix

Cartesian points defined in reference to rotated reference frame, returned as a vector or matrix the same size as `cartesianPoints`.

The data type of the re-referenced Cartesian points is the same as the underlying data type of `quat`.

Data Types: `single` | `double`

Algorithms

Quaternion frame rotation re-references a point specified in \mathbf{R}^3 by rotating the original frame of reference according to a specified quaternion:

$$L_q(u) = q*uq$$

where q is the quaternion, $*$ represents conjugation, and u is the point to rotate, specified as a quaternion.

For convenience, the `rotateframe` function takes a point in \mathbf{R}^3 and returns a point in \mathbf{R}^3 . Given a function call with some arbitrary quaternion, $q = a + bi + cj + dk$, and arbitrary coordinate, $[x,y,z]$,

```
point = [x,y,z];  
rereferencedPoint = rotateframe(q,point)
```

the `rotateframe` function performs the following operations:

- 1 Converts point $[x,y,z]$ to a quaternion:

$$u_q = 0 + xi + yj + zk$$

- 2 Normalizes the quaternion, q :

$$q_n = \frac{q}{\sqrt{a^2 + b^2 + c^2 + d^2}}$$

- 3 Applies the rotation:

$$v_q = q^* u_q q$$

- 4 Converts the quaternion output, v_q , back to \mathbf{R}^3

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Introduced in R2018a

rotatepoint


Quaternion point rotation

Syntax

```
rotationResult = rotatepoint(quat, cartesianPoints)
```

Description

`rotationResult = rotatepoint(quat, cartesianPoints)` rotates the Cartesian points using the quaternion, `quat`. The elements of the quaternion are normalized before use in the rotation.

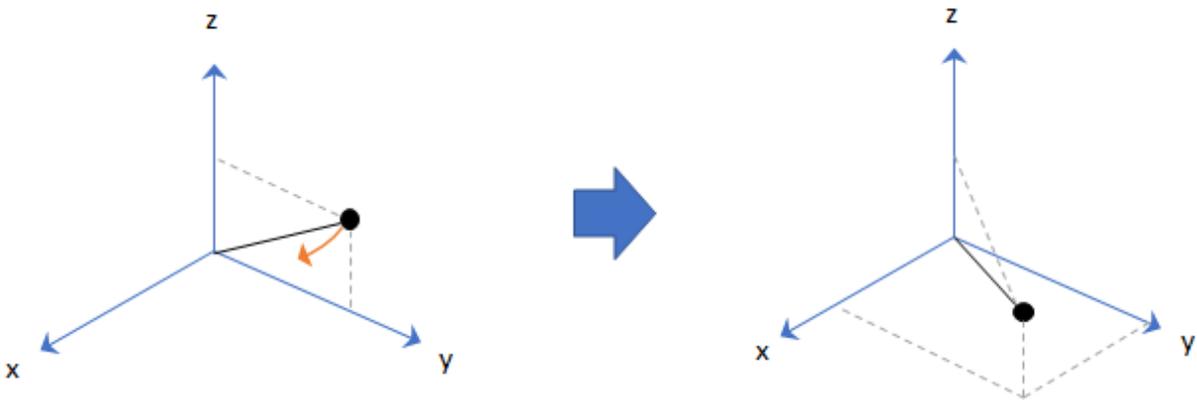


Examples

Rotate Point Using Quaternion Vector

Define a point in three dimensions. The coordinates of a point are always specified in order `x`, `y`, `z`. For convenient visualization, define the point on the `x-y` plane.

```
x = 0.5;
y = 0.5;
z = 0;

plot(x,y,'ko')
hold on
axis([-1 1 -1 1])
```

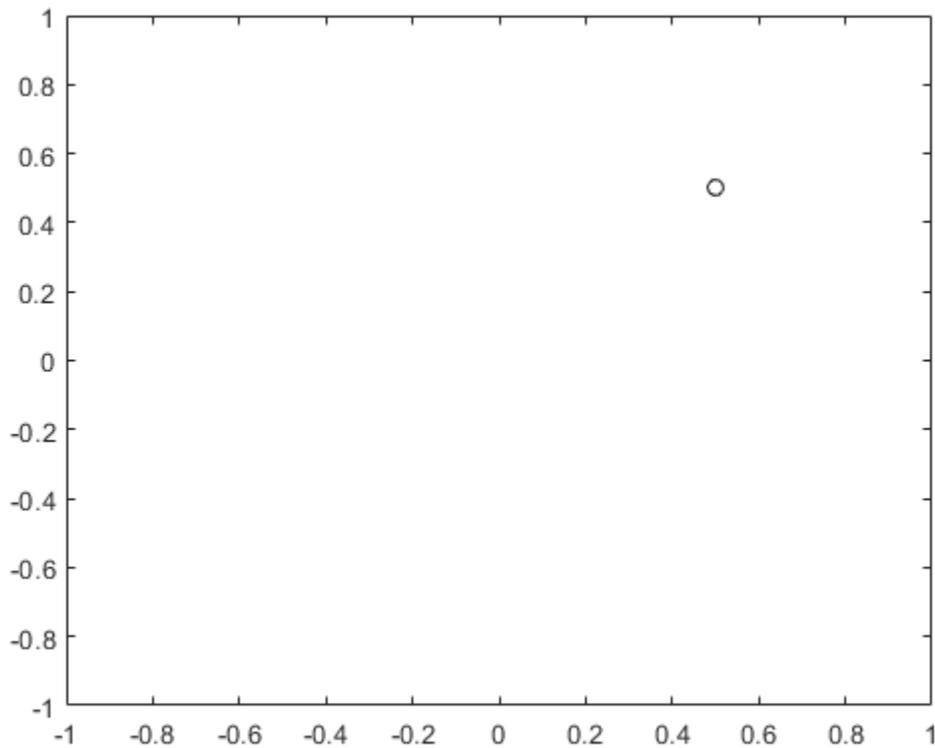

Create a quaternion vector specifying two separate rotations, one to rotate the point 45 degrees and another to rotate the point -90 degrees about the z-axis. Use `rotatepoint` to perform the rotation.

```
quat = quaternion([0,0,pi/4; ...
                  0,0,-pi/2], 'euler', 'XYZ', 'point');
```


```
rotatedPoint = rotatepoint(quat,[x,y,z])
```

```
rotatedPoint = 2×3
```

```
-0.0000    0.7071    0  
0.5000   -0.5000    0
```

Plot the rotated points.

```
plot(rotatedPoint(1,1),rotatedPoint(1,2),'bo')  
plot(rotatedPoint(2,1),rotatedPoint(2,2),'go')
```

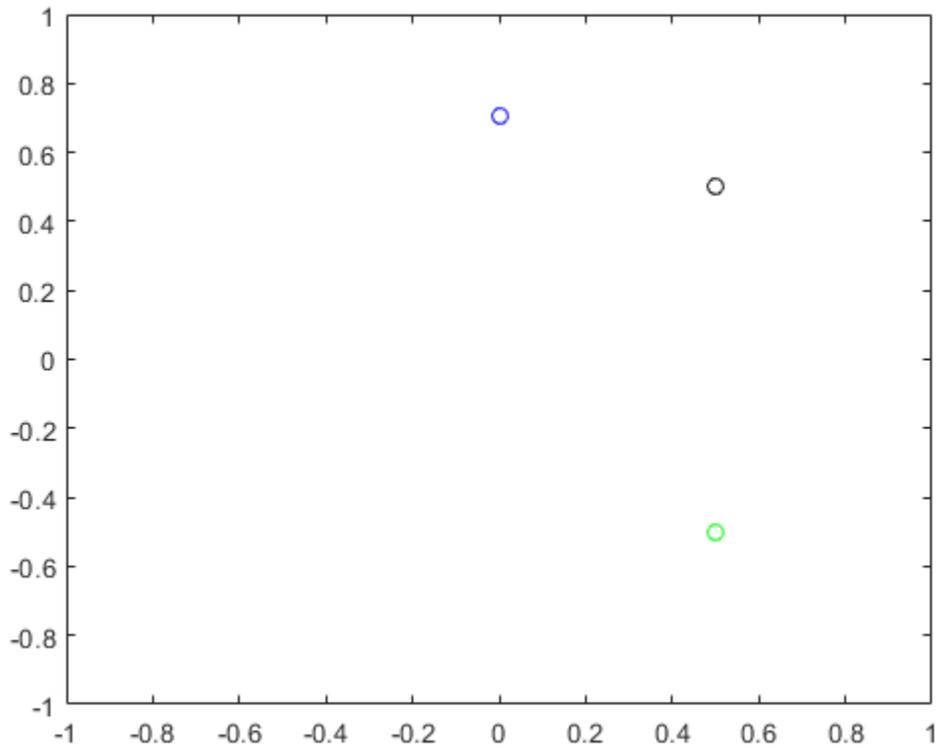

Rotate Group of Points Using Quaternion

Define two points in three-dimensional space. Define a quaternion to rotate the point by first rotating about the z-axis 30 degrees and then about the new y-axis 45 degrees.

```
a = [1,0,0];
b = [0,1,0];
quat = quaternion([30,45,0], 'eulerd', 'ZYX', 'point');
```

Use `rotatepoint` to rotate both points using the quaternion rotation operator. Display the result.

```
rP = rotatepoint(quat, [a;b])
```

```
rP = 2×3
```

```
    0.6124    0.5000   -0.6124
   -0.3536    0.8660    0.3536
```


Visualize the original orientation and the rotated orientation of the points. Draw lines from the origin to each of the points for visualization purposes.

```
plot3(a(1),a(2),a(3), 'bo');

hold on
grid on
axis([-1 1 -1 1 -1 1])
xlabel('x')
ylabel('y')
zlabel('z')

plot3(b(1),b(2),b(3), 'ro');
plot3(rP(1,1),rP(1,2),rP(1,3), 'bd')
plot3(rP(2,1),rP(2,2),rP(2,3), 'rd')

plot3([0;rP(1,1)], [0;rP(1,2)], [0;rP(1,3)], 'k')
plot3([0;rP(2,1)], [0;rP(2,2)], [0;rP(2,3)], 'k')
plot3([0;a(1)], [0;a(2)], [0;a(3)], 'k')
plot3([0;b(1)], [0;b(2)], [0;b(3)], 'k')
```

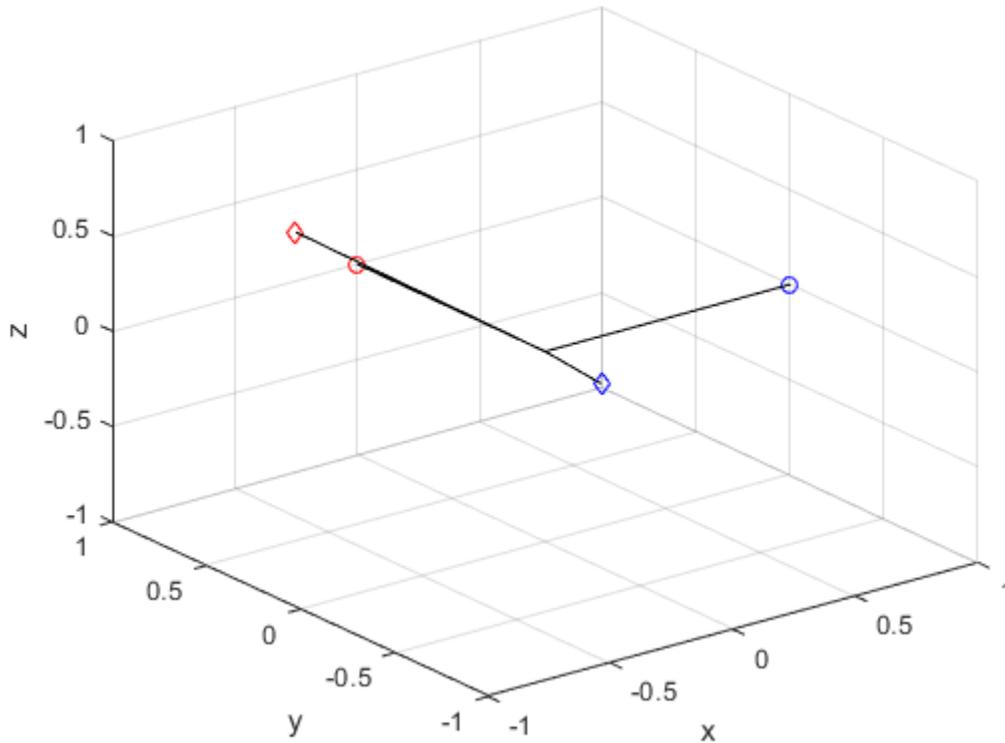

Input Arguments

quat — Quaternion that defines rotation

scalar | vector

Quaternion that defines rotation, specified as a scalar quaternion, row vector of quaternions, or column vector of quaternions.

Data Types: quaternion

cartesianPoints — Three-dimensional Cartesian points

1-by-3 vector | N -by-3 matrix

Three-dimensional Cartesian points, specified as a 1-by-3 vector or N -by-3 matrix.

Data Types: `single` | `double`

Output Arguments

rotationResult — Repositioned Cartesian points

vector | matrix

Rotated Cartesian points defined using the quaternion rotation, returned as a vector or matrix the same size as `cartesianPoints`.

Data Types: `single` | `double`

Algorithms

Quaternion point rotation rotates a point specified in \mathbf{R}^3 according to a specified quaternion:

$$L_q(u) = quq^*$$

where q is the quaternion, $*$ represents conjugation, and u is the point to rotate, specified as a quaternion.

For convenience, the `rotatepoint` function takes in a point in \mathbf{R}^3 and returns a point in \mathbf{R}^3 . Given a function call with some arbitrary quaternion, $q = a + bi + cj + dk$, and arbitrary coordinate, $[x,y,z]$, for example,

```
rereferencedPoint = rotatepoint(q,[x,y,z])
```

the `rotatepoint` function performs the following operations:

- 1 Converts point $[x,y,z]$ to a quaternion:

$$u_q = 0 + xi + yj + zk$$

- 2 Normalizes the quaternion, q :

$$q_n = \frac{q}{\sqrt{a^2 + b^2 + c^2 + d^2}}$$

- 3** Applies the rotation:

$$v_q = qu_qq^*$$

- 4** Converts the quaternion output, v_q , back to \mathbf{R}^3

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

rotm2axang

Convert rotation matrix to axis-angle rotation

Syntax

```
axang = rotm2axang(rotm)
```

Description

`axang = rotm2axang(rotm)` converts a rotation given as an orthonormal rotation matrix, `rotm`, to the corresponding axis-angle representation, `axang`. The input rotation matrix must be in the premultiply form for rotations.

Examples

Convert Rotation Matrix to Axis-Angle Rotation

```
rotm = [1 0 0 ; 0 -1 0; 0 0 -1];  
axang = rotm2axang(rotm)
```

```
axang = 1×4
```

```
    1.0000         0         0    3.1416
```

Input Arguments

rotm — Rotation matrix

3-by-3-by-*n* matrix

Rotation matrix, specified as a 3-by-3-by- n matrix containing n rotation matrices. Each rotation matrix has a size of 3-by-3 and must be orthonormal. The input rotation matrix must be in the premultiply form for rotations.

Note Rotation matrices that are slightly non-orthonormal can give complex outputs. Consider validating your matrix before inputting to the function.

Example: `[0 0 1; 0 1 0; -1 0 0]`

Output Arguments

axang — Rotation given in axis-angle form

n -by-4 matrix

Rotation given in axis-angle form, returned as an n -by-4 matrix of n axis-angle rotations. The first three elements of every row specify the rotation axis, and the last element defines the rotation angle (in radians).

Example: `[1 0 0 pi/2]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`axang2rotm`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

rotm2eul

Convert rotation matrix to Euler angles

Syntax

```
eul = rotm2eul(rotm)
eul = rotm2eul(rotm,sequence)
```

Description

`eul = rotm2eul(rotm)` converts a rotation matrix, `rotm`, to the corresponding Euler angles, `eul`. The input rotation matrix must be in the premultiply form for rotations. The default order for Euler angle rotations is "ZYX".

`eul = rotm2eul(rotm,sequence)` converts a rotation matrix to Euler angles. The Euler angles are specified in the axis rotation sequence, `sequence`. The default order for Euler angle rotations is "ZYX".

Examples

Convert Rotation Matrix to Euler Angles

```
rotm = [0 0 1; 0 1 0; -1 0 0];
eulZYX = rotm2eul(rotm)
```

```
eulZYX = 1×3
```

```
    0    1.5708    0
```

Convert Rotation Matrix to Euler Angles Using ZYZ Axis Order

```
rotm = [0 0 1; 0 -1 0; -1 0 0];  
eulZYZ = rotm2eul(rotm, 'ZYZ')
```

```
eulZYZ = 1×3
```

```
    -3.1416    -1.5708    -3.1416
```

Input Arguments

rotm — Rotation matrix

3-by-3-by-*n* matrix

Rotation matrix, specified as a 3-by-3-by-*n* matrix containing *n* rotation matrices. Each rotation matrix has a size of 3-by-3 and is orthonormal. The input rotation matrix must be in the premultiply form for rotations.

Note Rotation matrices that are slightly non-orthonormal can give complex outputs. Consider validating your matrix before inputting to the function.

Example: [0 0 1; 0 1 0; -1 0 0]

sequence — Axis rotation sequence

"ZYX" (default) | "YZZ" | "XYZ"

Axis rotation sequence for the Euler angles, specified as one of these string scalars:

- "ZYX" (default) - The order of rotation angles is z-axis, y-axis, x-axis.
- "YZZ" - The order of rotation angles is z-axis, y-axis, z-axis.
- "XYZ" - The order of rotation angles is x-axis, y-axis, z-axis.

Data Types: string | char

Output Arguments

eul — Euler rotation angles

n-by-3 matrix

Euler rotation angles in radians, returned as an *n*-by-3 array of Euler rotation angles. Each row represents one Euler angle set.

Example: [0 0 1.5708]

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

eul2rotm

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

rotm2quat

Convert rotation matrix to quaternion

Syntax

```
quat = rotm2quat(rotm)
```

Description

`quat = rotm2quat(rotm)` converts a rotation matrix, `rotm`, to the corresponding unit quaternion representation, `quat`. The input rotation matrix must be in the premultiply form for rotations.

Examples

Convert Rotation Matrix to Quaternion

```
rotm = [0 0 1; 0 1 0; -1 0 0];  
quat = rotm2quat(rotm)
```

```
quat = 1×4
```

```
    0.7071         0    0.7071         0
```

Input Arguments

rotm — Rotation matrix

3-by-3-by-*n* matrix

Rotation matrix, specified as a 3-by-3-by- n matrix containing n rotation matrices. Each rotation matrix has a size of 3-by-3 and is orthonormal. The input rotation matrix must be in the premultiply form for rotations.

Note Rotation matrices that are slightly non-orthonormal can give complex outputs. Consider validating your matrix before inputting to the function.

Example: `[0 0 1; 0 1 0; -1 0 0]`

Output Arguments

quat — Unit quaternion

n -by-4 matrix

Unit quaternion, returned as an n -by-4 matrix containing n quaternions. Each quaternion, one per row, is of the form $q = [w \ x \ y \ z]$, with w as the scalar number.

Example: `[0.7071 0.7071 0 0]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`quat2rotm`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

rotm2tform

Convert rotation matrix to homogeneous transformation

Syntax

```
tform = rotm2tform(rotm)
```

Description

`tform = rotm2tform(rotm)` converts the rotation matrix, `rotm`, into a homogeneous transformation matrix, `tform`. The input rotation matrix must be in the premultiply form for rotations. When using the transformation matrix, premultiply it with the coordinates to be transformed (as opposed to postmultiplying).

Examples

Convert Rotation Matrix to Homogeneous Transformation

```
rotm = [1 0 0 ; 0 -1 0; 0 0 -1];  
tform = rotm2tform(rotm)
```

```
tform = 4×4
```

```
    1    0    0    0  
    0   -1    0    0  
    0    0   -1    0  
    0    0    0    1
```

Input Arguments

rotm — Rotation matrix

3-by-3-by-*n* matrix

Rotation matrix, specified as a 3-by-3-by- n matrix containing n rotation matrices. Each rotation matrix has a size of 3-by-3 and is orthonormal. The input rotation matrix must be in the premultiply form for rotations.

Note Rotation matrices that are slightly non-orthonormal can give complex outputs. Consider validating your matrix before inputting to the function.

Example: $[0 \ 0 \ 1; \ 0 \ 1 \ 0; \ -1 \ 0 \ 0]$

Output Arguments

tform — Homogeneous transformation

4-by-4-by- n matrix

Homogeneous transformation matrix, specified by a 4-by-4-by- n matrix of n homogeneous transformations. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Example: $[0 \ 0 \ 1 \ 0; \ 0 \ 1 \ 0 \ 0; \ -1 \ 0 \ 0 \ 0; \ 0 \ 0 \ 0 \ 1]$

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

tform2rotm

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

rotmat

Convert quaternion to rotation matrix

Syntax

```
rotationMatrix = rotmat(quat,rotationType)
```

Description

`rotationMatrix = rotmat(quat,rotationType)` converts the quaternion, `quat`, to an equivalent rotation matrix representation.

Examples

Convert Quaternion to Rotation Matrix for Point Rotation

Define a quaternion for use in point rotation.

```
theta = 45;  
gamma = 30;  
quat = quaternion([0,theta,gamma], 'eulerd', 'ZYX', 'point')  
  
quat = quaternion  
      0.8924 + 0.23912i + 0.36964j + 0.099046k
```

Convert the quaternion to a rotation matrix.

```
rotationMatrix = rotmat(quat, 'point')  
  
rotationMatrix = 3×3  
  
    0.7071    -0.0000    0.7071  
    0.3536     0.8660   -0.3536  
   -0.6124     0.5000     0.6124
```

To verify the rotation matrix, directly create two rotation matrices corresponding to the rotations about the y - and x -axes. Multiply the rotation matrices and compare to the output of `rotmat`.

```
theta = 45;
gamma = 30;

ry = [cosd(theta)  0      sind(theta) ; ...
      0            1      0            ; ...
      -sind(theta) 0      cosd(theta)];

rx = [1      0      0      ; ...
      0      cosd(gamma) -sind(gamma) ; ...
      0      sind(gamma)  cosd(gamma)];

rotationMatrixVerification = rx*ry

rotationMatrixVerification = 3x3

    0.7071         0    0.7071
    0.3536    0.8660   -0.3536
   -0.6124    0.5000    0.6124
```

Convert Quaternion to Rotation Matrix for Frame Rotation

Define a quaternion for use in frame rotation.

```
theta = 45;
gamma = 30;
quat = quaternion([0,theta,gamma], 'eulerd', 'ZYX', 'frame')

quat = quaternion
    0.8924 + 0.23912i + 0.36964j - 0.099046k
```

Convert the quaternion to a rotation matrix.

```
rotationMatrix = rotmat(quat, 'frame')

rotationMatrix = 3x3
```

```
0.7071    -0.0000    -0.7071
0.3536    0.8660    0.3536
0.6124    -0.5000    0.6124
```

To verify the rotation matrix, directly create two rotation matrices corresponding to the rotations about the y - and x -axes. Multiply the rotation matrices and compare to the output of `rotmat`.

```
theta = 45;
gamma = 30;

ry = [cosd(theta)  0          -sind(theta) ; ...
      0            1          0           ; ...
      sind(theta)  0          cosd(theta)];

rx = [1           0           0           ; ...
      0           cosd(gamma) sind(gamma) ; ...
      0           -sind(gamma) cosd(gamma)];

rotationMatrixVerification = rx*ry

rotationMatrixVerification = 3x3

0.7071         0    -0.7071
0.3536    0.8660    0.3536
0.6124    -0.5000    0.6124
```

Convert Quaternion Vector to Rotation Matrices

Create a 3-by-1 normalized quaternion vector.

```
qVec = normalize( quaternion( randn(3,4)) );
```

Convert the quaternion array to rotation matrices. The pages of `rotmatArray` correspond to the linear index of `qVec`.

```
rotmatArray = rotmat(qVec, 'frame');
```

Assume `qVec` and `rotmatArray` correspond to a sequence of rotations. Combine the quaternion rotations into a single representation, then apply the quaternion rotation to arbitrarily initialized Cartesian points.

```
loc = normalize(randn(1,3));
quat = prod(qVec);
rotateframe(quat,loc)
```

```
ans = 1×3
    0.9524    0.5297    0.9013
```

Combine the rotation matrices into a single representation, then apply the rotation matrix to the same initial Cartesian points. Verify the quaternion rotation and rotation matrix result in the same orientation.

```
totalRotMat = eye(3);
for i = 1:size(rotmatArray,3)
    totalRotMat = rotmatArray(:,:,i)*totalRotMat;
end
totalRotMat*loc'
```

```
ans = 3×1
    0.9524
    0.5297
    0.9013
```

Input Arguments

quat — Quaternion to convert

scalar | vector | matrix | multidimensional array

Quaternion to convert, specified as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

rotationType — Type or rotation

'frame' | 'point'

Type of rotation represented by the `rotationMatrix` output, specified as 'frame' or 'point'.

Data Types: `char` | `string`

Output Arguments

rotationMatrix — Rotation matrix representation

3-by-3 matrix | 3-by-3-by-*N* multidimensional array

Rotation matrix representation, returned as a 3-by-3 matrix or 3-by-3-by-*N* multidimensional array.

- If `quat` is a scalar, `rotationMatrix` is returned as a 3-by-3 matrix.
- If `quat` is non-scalar, `rotationMatrix` is returned as a 3-by-3-by-*N* multidimensional array, where `rotationMatrix(:, :, i)` is the rotation matrix corresponding to `quat(i)`.

The data type of the rotation matrix is the same as the underlying data type of `quat`.

Data Types: `single` | `double`

Algorithms

Given a quaternion of the form

$$q = a + bi + cj + dk,$$

the equivalent rotation matrix for frame rotation is defined as

$$\begin{bmatrix} 2a^2 - 1 + 2b^2 & 2bc + 2ad & 2bd - 2ac \\ 2bc - 2ad & 2a^2 - 1 + 2c^2 & 2cd + 2ab \\ 2bd + 2ac & 2cd - 2ab & 2a^2 - 1 + 2d^2 \end{bmatrix}.$$

The equivalent rotation matrix for point rotation is the transpose of the frame rotation matrix:

$$\begin{bmatrix} 2a^2 - 1 + 2b^2 & 2bc - 2ad & 2bd + 2ac \\ 2bc + 2ad & 2a^2 - 1 + 2c^2 & 2cd - 2ab \\ 2bd - 2ac & 2cd + 2ab & 2a^2 - 1 + 2d^2 \end{bmatrix}.$$

References

- [1] Kuipers, Jack B. *Quaternions and Rotation Sequences: A Primer with Applications to Orbits, Aerospace, and Virtual Reality*. Princeton, NJ: Princeton University Press, 2007.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

rottraj

Generate trajectories between orientation rotation matrices

Syntax

```
[R,omega,alpha] = rottraj(r0,rF,tInterval,tSamples)
[R,omega,alpha] = rottraj(r0,rF,tInterval,tSamples,Name,Value)
```

Description

`[R,omega,alpha] = rottraj(r0,rF,tInterval,tSamples)` generates a trajectory that interpolates between two orientations, `r0` and `rF`, with points based on the time interval and given time samples.

`[R,omega,alpha] = rottraj(r0,rF,tInterval,tSamples,Name,Value)` specifies additional parameters using `Name,Value` pair arguments.

Examples

Interpolate Trajectory Between Quaternions

Define two quaternion waypoints to interpolate between.

```
q0 = quaternion([0 pi/4 -pi/8], 'euler', 'ZYX', 'point');
qF = quaternion([3*pi/2 0 -3*pi/4], 'euler', 'ZYX', 'point');
```

Specify a vector of times to sample the quaternion trajectory.

```
tvec = 0:0.01:5;
```


Generate the trajectory. Plot the results.

```
[qInterp1,w1,a1] = rottraj(q0,qF,[0 5],tvec);
plot(tvec,compact(qInterp1))
```

```

title('Quaternion Interpolation (Uniform Time Scaling)')
xlabel('t')
ylabel('Quaternion Values')
legend('W', 'X', 'Y', 'Z')

```

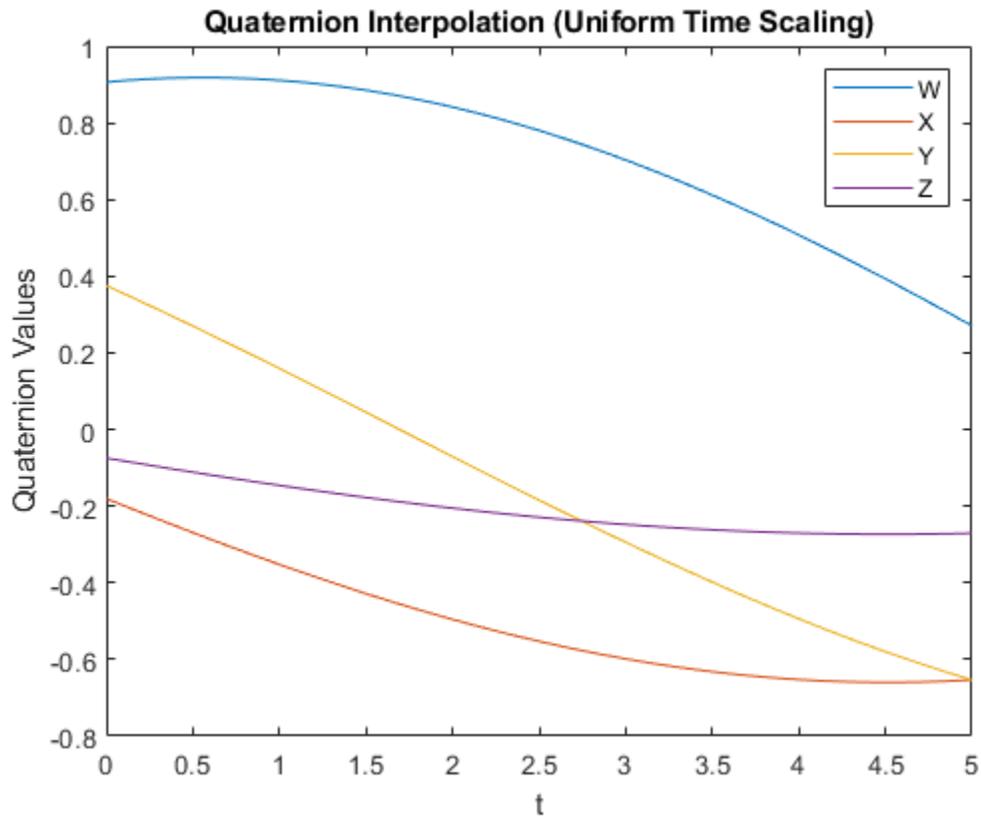

Interpolate Trajectory Between Rotation Matrices

Define two rotation matrix waypoints to interpolate between.

```

r0 = [1 0 0; 0 1 0; 0 0 1];
rF = [0 0 1; 1 0 0; 0 0 0];

```

Specify a vector of times to sample the quaternion trajectory.

```
tvec = 0:0.1:1;
```

Generate the trajectory. Plot the results using `plotTransforms`. Convert the rotation matrices to quaternions and specify zero translation. The figure shows all the intermediate rotations of the coordinate frame.

```
[rInterpl,w1,a1] = rottraj(r0,rF,[0 1],tvec);
```

```
rotations = rotm2quat(rInterpl);
```

```
zeroVect = zeros(length(rotations),1);
```


```
translations = [zeroVect,zeroVect,zeroVect];
```

```
plotTransforms(translations,rotations)
```

```
xlabel('X')
```

```
ylabel('Y')
```

```
zlabel('Z')
```

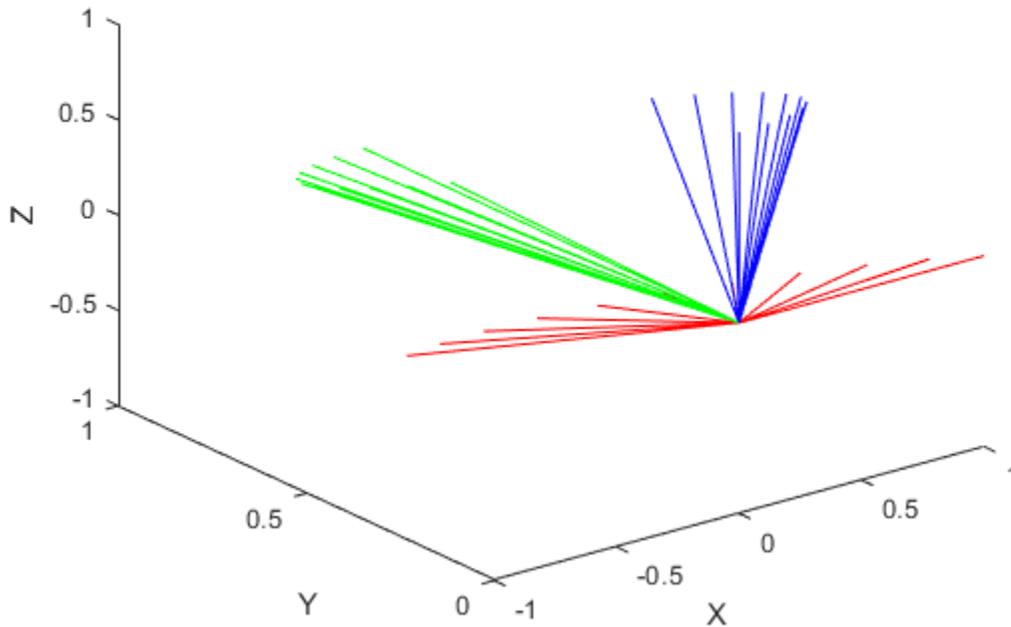

Input Arguments

r0 — Initial orientation

3-by-3 rotation matrix | quaternion object

Initial orientation, specified as a 3-by-3 rotation matrix or quaternion object. The function generates a trajectory that starts at the initial orientation, r_0 , and goes to the final orientation, r_f .

Example: `quaternion([0 pi/4 -pi/8], 'euler', 'ZYX', 'point');`

Data Types: single | double

rF — Final orientation

3-by-3 rotation matrix | quaternion object

Final orientation, specified as a 3-by-3 rotation matrix or quaternion object. The function generates a trajectory that starts at the initial orientation, `r0`, and goes to the final orientation, `rF`.

Example: `quaternion([3*pi/2 0 -3*pi/4], 'euler', 'ZYX', 'point')`

Data Types: `single` | `double`

tInterval — Start and end times for trajectory

two-element vector

Start and end times for the trajectory, specified as a two-element vector.

Example: `[0 10]`

Data Types: `single` | `double`

tSamples — Time samples for trajectory

m -element vector

Time samples for the trajectory, specified as an m -element vector. The output trajectory, `rotVector`, is a vector of orientations.

Example: `0:0.01:10`

Data Types: `single` | `double`

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

Example: `'TimeScaling', [0 1 2; 0 1 0; 0 0 0]`

TimeScaling — Time scaling vector and first two derivatives

3-by- m vector

Time scaling vector and the first two derivatives, specified as the comma-separated pair of `'TimeScaling'` and a 3-by- m vector, where m is the length of `tSamples`. By default, the time scaling is a linear time scaling between the time points in `tInterval`.

For a nonlinear time scaling, specify the values of the time points in the first row. The second and third rows are the velocity and acceleration of the time points, respectively. For example, to follow the path with a linear velocity to the halfway point, and then jump to the end, the time-scaling would be:

```
s(1,:) = [0 0.25 0.5 1 1 1] % Position
s(2,:) = [1 1 1 0 0 0] % Velocity
s(3,:) = [0 0 0 0 0 0] % Acceleration
```

Data Types: `single` | `double`

Output Arguments

R — Orientation trajectory

3-by-3-by- m rotation matrix array | quaternion object array

Orientation trajectory, returned as a 3-by-3-by- m rotation matrix array or quaternion object array, where m is the number of points in `tSamples`. The output type depends on the inputs from `r0` and `rF`.

omega — Orientation angular velocity

3-by- m matrix

Orientation angular velocity, returned as a 3-by- m matrix, where m is the number of points in `tSamples`.

alpha — Orientation angular acceleration

3-by- m matrix

Orientation angular acceleration, returned as a 3-by- m matrix, where m is the number of points in `tSamples`

Limitations

- When specifying your `r0` and `rF` input arguments as a 3-by-3 rotation matrix, they are converted to a quaternion object before interpolating the trajectory. If your rotation matrix does not follow a right-handed coordinate system or does not have a direct conversion to quaternions, this conversion may result in different initial and final rotations in the output trajectory.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`bsplinepolytraj` | `cubicpolytraj` | `quaternion` | `quinticpolytraj` | `transformtraj` | `trapveltraj`

Introduced in R2019a

rotvec

Convert quaternion to rotation vector (radians)

Syntax

```
rotationVector = rotvec(quat)
```

Description

`rotationVector = rotvec(quat)` converts the quaternion array, `quat`, to an N -by-3 matrix of equivalent rotation vectors in radians. The elements of `quat` are normalized before conversion.

Examples

Convert Quaternion to Rotation Vector in Radians

Convert a random quaternion scalar to a rotation vector in radians

```
quat = quaternion(randn(1,4));  
rotvec(quat)
```

```
ans = 1×3
```

```
    1.6866   -2.0774    0.7929
```

Input Arguments

quat — Quaternion to convert

scalar | vector | matrix | multidimensional array

Quaternion to convert, specified as scalar quaternion, vector, matrix, or multidimensional array of quaternions.

Data Types: quaternion

Output Arguments

rotationVector — Rotation vector (radians)

N-by-3 matrix

Rotation vector representation, returned as an *N*-by-3 matrix of rotations vectors, where each row represents the [X Y Z] angles of the rotation vectors in radians. The *i*th row of `rotationVector` corresponds to the element `quat(i)`.

The data type of the rotation vector is the same as the underlying data type of `quat`.

Data Types: single | double

Algorithms

All rotations in 3-D can be represented by a three-element axis of rotation and a rotation angle, for a total of four elements. If the rotation axis is constrained to be unit length, the rotation angle can be distributed over the vector elements to reduce the representation to three elements.

Recall that a quaternion can be represented in axis-angle form

$$q = \cos(\theta/2) + \sin(\theta/2)(xi + yj + zk),$$

where θ is the angle of rotation and $[x,y,z]$ represent the axis of rotation.

Given a quaternion of the form

$$q = a + bi + cj + dk,$$

you can solve for the rotation angle using the axis-angle form of quaternions:

$$\theta = 2\cos^{-1}(a).$$

Assuming a normalized axis, you can rewrite the quaternion as a rotation vector without loss of information by distributing θ over the parts b , c , and d . The rotation vector representation of q is

$$q_{rv} = \frac{\theta}{\sin(\theta/2)}[b, c, d].$$

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

rotvecd

Convert quaternion to rotation vector (degrees)

Syntax

```
rotationVector = rotvecd(quat)
```

Description

`rotationVector = rotvecd(quat)` converts the quaternion array, `quat`, to an N -by-3 matrix of equivalent rotation vectors in degrees. The elements of `quat` are normalized before conversion.

Examples

Convert Quaternion to Rotation Vector in Degrees

Convert a random quaternion scalar to a rotation vector in degrees.

```
quat = quaternion(randn(1,4));  
rotvecd(quat)
```

```
ans = 1×3
```

```
    96.6345  -119.0274   45.4312
```

Input Arguments

quat — Quaternion to convert

scalar | vector | matrix | multidimensional array

Quaternion to convert, specified as scalar, vector, matrix, or multidimensional array of quaternions.

Data Types: quaternion

Output Arguments

rotationVector — Rotation vector (degrees)

N-by-3 matrix

Rotation vector representation, returned as an *N*-by-3 matrix of rotation vectors, where each row represents the [*x y z*] angles of the rotation vectors in degrees. The *i*th row of **rotationVector** corresponds to the element **quat**(*i*).

The data type of the rotation vector is the same as the underlying data type of **quat**.

Data Types: single | double

Algorithms

All rotations in 3-D can be represented by four elements: a three-element axis of rotation and a rotation angle. If the rotation axis is constrained to be unit length, the rotation angle can be distributed over the vector elements to reduce the representation to three elements.

Recall that a quaternion can be represented in axis-angle form

$$q = \cos(\theta/2) + \sin(\theta/2)(xi + yj + zk),$$

where θ is the angle of rotation in degrees, and [*x,y,z*] represent the axis of rotation.

Given a quaternion of the form

$$q = a + bi + cj + dk,$$

you can solve for the rotation angle using the axis-angle form of quaternions:

$$\theta = 2\cos^{-1}(a).$$

Assuming a normalized axis, you can rewrite the quaternion as a rotation vector without loss of information by distributing θ over the parts b , c , and d . The rotation vector representation of q is

$$q_{rv} = \frac{\theta}{\sin(\theta/2)}[b, c, d].$$

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

euler | eulerd | rotvec

Objects

quaternion

Introduced in R2018a

slerp

Spherical linear interpolation

Syntax

```
q0 = slerp(q1,q2,T)
```

Description

`q0 = slerp(q1,q2,T)` spherically interpolates between `q1` and `q2` by the interpolation coefficient `T`.

Examples

Interpolate Between Two Quaternions

Create two quaternions with the following interpretation:

- 1 `a` = 45 degree rotation around the z-axis
- 2 `c` = -45 degree rotation around the z-axis

```
a = quaternion([45,0,0], 'eulerd', 'ZYX', 'frame');  
c = quaternion([-45,0,0], 'eulerd', 'ZYX', 'frame');
```

Call `slerp` with the quaternions `a` and `c` and specify an interpolation coefficient of 0.5.

```
interpolationCoefficient = 0.5;
```

```
b = slerp(a,c,interpolationCoefficient);
```

The output of `slerp`, `b`, represents an average rotation of `a` and `c`. To verify, convert `b` to Euler angles in degrees.

```
averageRotation = eulerd(b, 'ZYX', 'frame')
```

```
averageRotation = 1×3
    0    0    0
```

The interpolation coefficient is specified as a normalized value between 0 and 1, inclusive. An interpolation coefficient of 0 corresponds to the `a` quaternion, and an interpolation coefficient of 1 corresponds to the `c` quaternion. Call `slerp` with coefficients 0 and 1 to confirm.

```
b = slerp(a,c,[0,1]);
eulerd(b,'ZYX','frame')
```

```
ans = 2×3
    45.0000    0    0
   -45.0000    0    0
```

You can create smooth paths between quaternions by specifying arrays of equally spaced interpolation coefficients.

```
path = 0:0.1:1;
interpolatedQuaternions = slerp(a,c,path);
```

For quaternions that represent rotation only about a single axis, specifying interpolation coefficients as equally spaced results in quaternions equally spaced in Euler angles. Convert `interpolatedQuaternions` to Euler angles and verify that the difference between the angles in the path is constant.

```
k = eulerd(interpolatedQuaternions,'ZYX','frame');
abc = abs(diff(k))
```

```
abc = 10×3
    9.0000    0    0
    9.0000    0    0
    9.0000    0    0
    9.0000    0    0
    9.0000    0    0
    9.0000    0    0
    9.0000    0    0
    9.0000    0    0
    9.0000    0    0
    9.0000    0    0
```

```
9.0000      0      0
```

Alternatively, you can use the `dist` function to verify that the distance between the interpolated quaternions is consistent. The `dist` function returns angular distance in radians; convert to degrees for easy comparison.

```
def = rad2deg(dist(interpolatedQuaternions(2:end),interpolatedQuaternions(1:end-1)))
```

```
def = 1×10
```

```
9.0000    9.0000    9.0000    9.0000    9.0000    9.0000    9.0000    9.0000    9.0000
```

SLERP Minimizes Great Circle Path

The SLERP algorithm interpolates along a great circle path connecting two quaternions. This example shows how the SLERP algorithm minimizes the great circle path.

Define three quaternions:

- 1 `q0` - quaternion indicating no rotation from the global frame
- 2 `q179` - quaternion indicating a 179 degree rotation about the z-axis
- 3 `q180` - quaternion indicating a 180 degree rotation about the z-axis
- 4 `q181` - quaternion indicating a 181 degree rotation about the z-axis

```
q0 = ones(1, 'quaternion');
```

```
q179 = quaternion([179,0,0], 'eulerd', 'ZYX', 'frame');
```

```
q180 = quaternion([180,0,0], 'eulerd', 'ZYX', 'frame');
```

```
q181 = quaternion([181,0,0], 'eulerd', 'ZYX', 'frame');
```

Use `slerp` to interpolate between `q0` and the three quaternion rotations. Specify that the paths are traveled in 10 steps.

```
T = linspace(0,1,10);
```


```
q179path = slerp(q0,q179,T);
```

```
q180path = slerp(q0,q180,T);  
q181path = slerp(q0,q181,T);
```

Plot each path in terms of Euler angles in degrees.

```
q179pathEuler = eulerd(q179path, 'ZYX', 'frame');  
q180pathEuler = eulerd(q180path, 'ZYX', 'frame');  
q181pathEuler = eulerd(q181path, 'ZYX', 'frame');
```

```
plot(T,q179pathEuler(:,1), 'bo', ...  
     T,q180pathEuler(:,1), 'r*', ...  
     T,q181pathEuler(:,1), 'gd');  
legend('Path to 179 degrees', ...  
       'Path to 180 degrees', ...  
       'Path to 181 degrees')  
xlabel('Interpolation Coefficient')  
ylabel('Z-Axis Rotation (Degrees)')
```

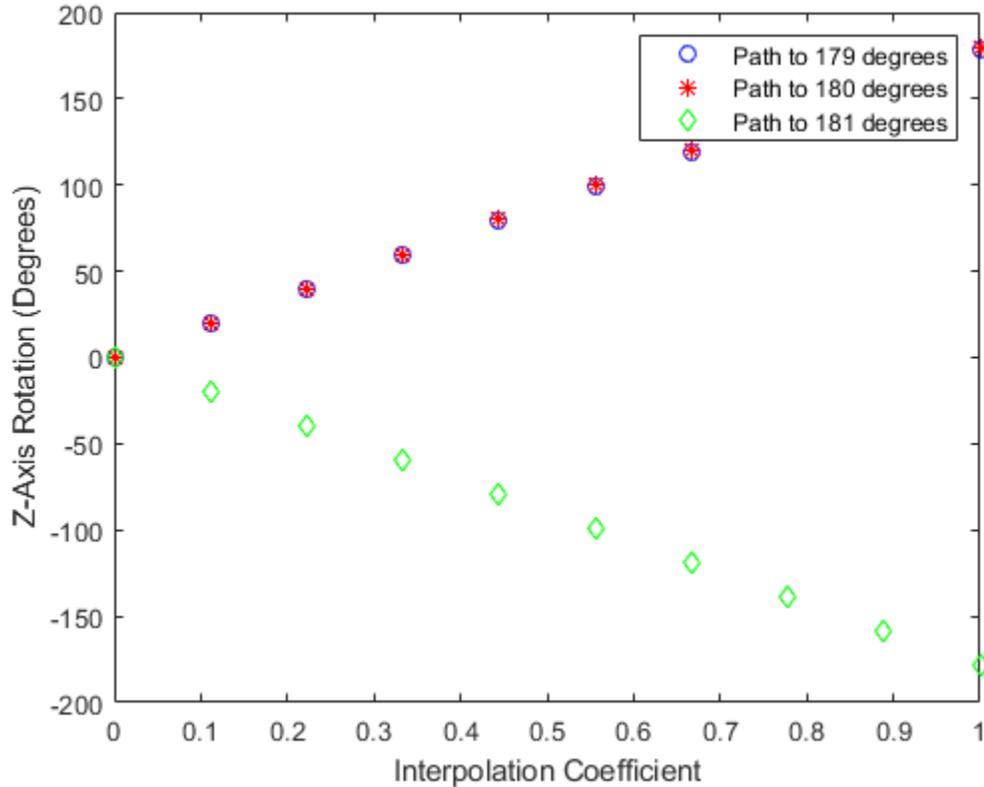

The path between q_0 and q_{179} is clockwise to minimize the great circle distance. The path between q_0 and q_{181} is counterclockwise to minimize the great circle distance. The path between q_0 and q_{180} can be either clockwise or counterclockwise, depending on numerical rounding.

Input Arguments

q1 — Quaternion

scalar | vector | matrix | multidimensional array

Quaternion to interpolate, specified as a scalar, vector, matrix, or multidimensional array of quaternions.

q1, q2, and T must have compatible sizes. In the simplest cases, they can be the same size or any one can be a scalar. Two inputs have compatible sizes if, for every dimension, the dimension sizes of the inputs are either the same or one of them is 1.

Data Types: quaternion

q2 — Quaternion

scalar | vector | matrix | multidimensional array

Quaternion to interpolate, specified as a scalar, vector, matrix, or multidimensional array of quaternions.

q1, q2, and T must have compatible sizes. In the simplest cases, they can be the same size or any one can be a scalar. Two inputs have compatible sizes if, for every dimension, the dimension sizes of the inputs are either the same or one of the dimension sizes is 1.

Data Types: quaternion

T — Interpolation coefficient

scalar | vector | matrix | multidimensional array

Interpolation coefficient, specified as a scalar, vector, matrix, or multidimensional array of numbers with each element in the range [0,1].

q1, q2, and T must have compatible sizes. In the simplest cases, they can be the same size or any one can be a scalar. Two inputs have compatible sizes if, for every dimension, the dimension sizes of the inputs are either the same or one of the dimension sizes is 1.

Data Types: single | double

Output Arguments

q0 — Interpolated quaternion

scalar | vector | matrix | multidimensional array

Interpolated quaternion, returned as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

Algorithms

Quaternion **spherical linear interpolation** (SLERP) is an extension of linear interpolation along a plane to spherical interpolation in three dimensions. The algorithm was first proposed in [1] (Sensor Fusion and Tracking Toolbox). Given two quaternions, q_1 and q_2 , SLERP interpolates a new quaternion, q_0 , along the great circle that connects q_1 and q_2 . The interpolation coefficient, T , determines how close the output quaternion is to either q_1 and q_2 .

The SLERP algorithm can be described in terms of sinusoids:

$$q_0 = \frac{\sin((1 - T)\theta)}{\sin(\theta)}q_1 + \frac{\sin(T\theta)}{\sin(\theta)}q_2$$

where q_1 and q_2 are normalized quaternions, and θ is half the angular distance between q_1 and q_2 .

References

- [1] Shoemake, Ken. "Animating Rotation with Quaternion Curves." *ACM SIGGRAPH Computer Graphics* Vol. 19, Issue 3, 1985, pp. 345-354.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

dist | meanrot

Objects

quaternion

Introduced in R2018b

state

Package: robotics

UAV state vector

Syntax

```
stateVec = state(uavGuidanceModel)
```

Description

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

`stateVec = state(uavGuidanceModel)` returns a state vector for the specified UAV guidance model. The vector is always filled with zeros. Use this function to ensure you have the proper size for your state vector. Use the state vector as an input to the derivative function or when simulating the UAV using `ode45`.

Examples

Simulate A Multirotor Control Command

This example shows how to use the `multirotor` guidance model to simulate the change in state of a UAV due to a command input.

Note: To use UAV algorithms, you must install the UAV Library for Robotics System Toolbox®. To install, use `roboticsAddons`.

Create the multirotor guidance model.

```
model = multirotor;
```

Create a state structure. Specify the location in world coordinates.

```
s = state(model);  
s(1:3) = [3;2;1];
```

Specify a control command, `u`, that specified the roll and thrust of the multicopter.

```
u = control(model);  
u.Roll = pi/12;  
u.Thrust = 1;
```

Create a default environment without wind.

```
e = environment(model);
```

Compute the time derivative of the state given the current state, control command, and environment.

```
sdot = derivative(model,s,u,e);
```

Simulate the UAV state using `ode45` integration. The `y` field outputs the fixed-wing UAV states as a 13-by- n matrix.


```
simOut = ode45(@(~,x)derivative(model,x,u,e), [0 3], s);  
size(simOut.y)
```

```
ans = 1×2
```

```
13      3536
```


Plot the change in roll angle based on the simulation output. The roll angle (the X Euler angle) is the 9th row of the `simOut.y` output.

```
plot(simOut.y(9,:))
```

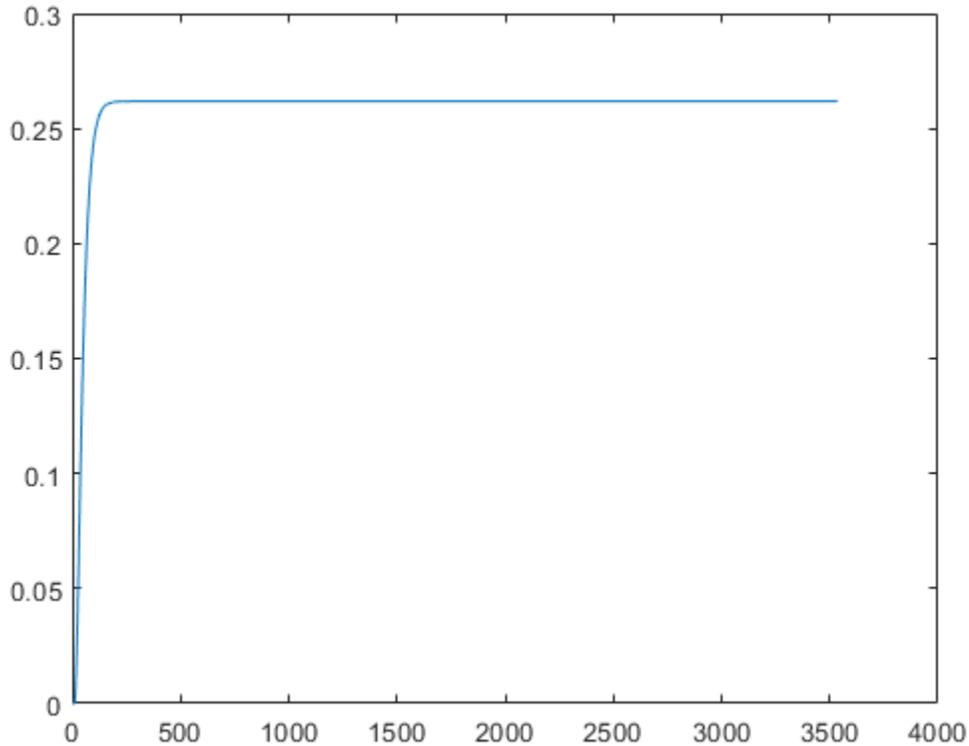


Plot the change in the Y and Z positions. With the specified thrust and roll angle, the multicopter should fly over and lose some altitude. A positive value for Z is expected as positive Z is down.

```
figure
plot(simOut.y(2,:));
hold on
plot(simOut.y(3,:));
legend('Y-position','Z-position')
hold off
```

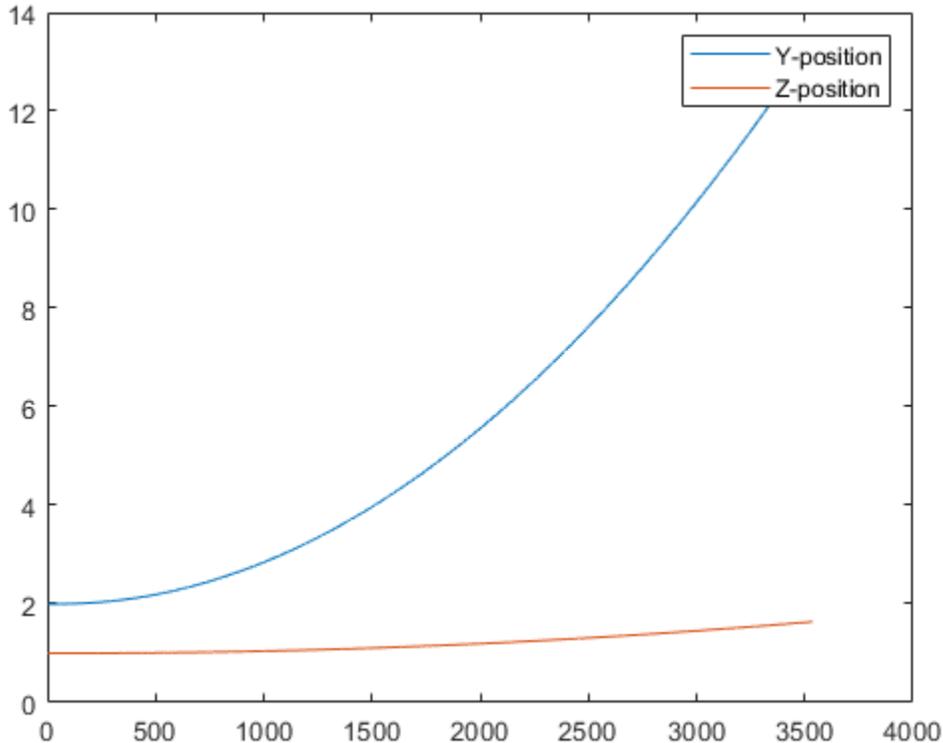

You can also plot the multirotor trajectory using `plotTransforms`. Create the translation and rotation vectors from the simulated state. Downsample (every 300th element) and transpose the `simOut` elements, and convert the Euler angles to quaternions. Specify the mesh as the `multirotor.stl` file and the positive Z-direction as "down". The displayed view shows the UAV translating in the Y-direction and losing altitude.

```
translations = simOut.y(1:3,1:300:end)'; % xyz position
rotations = eul2quat(simOut.y(7:9,1:300:end)'); % ZYX Euler
plotTransforms(translations,rotations,...
'MeshFilePath','multirotor.stl','InertialZDirection','down')
view([90.00 -0.60])
```

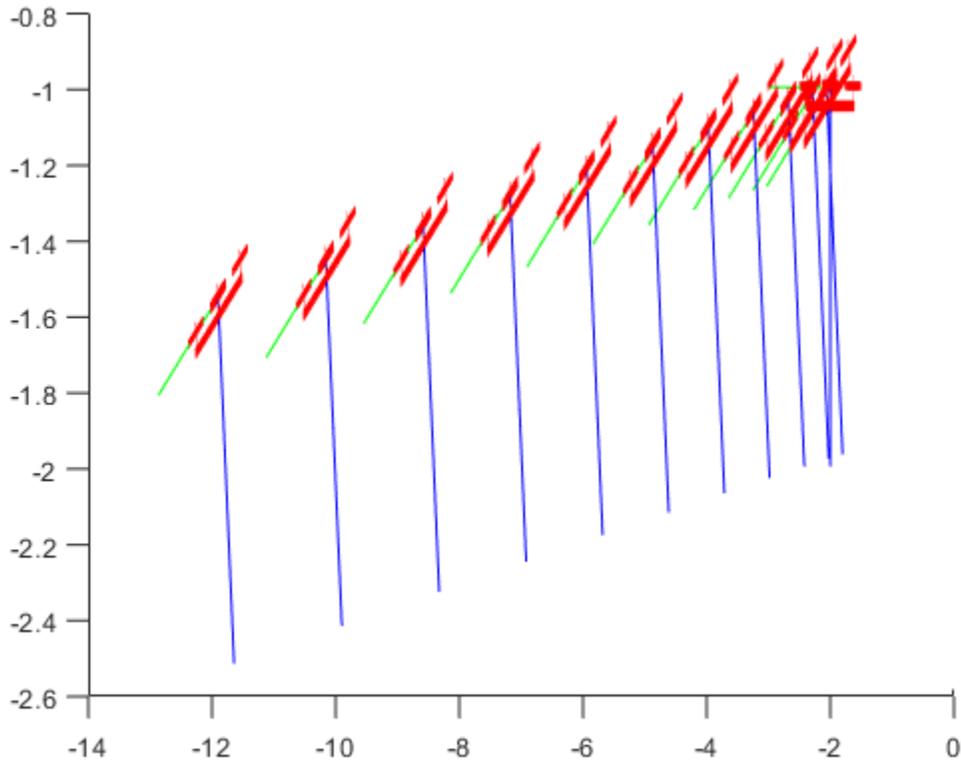

Simulate A Fixed-Wing Control Command

This example shows how to use the `fixedwing` guidance model to simulate the change in state of a UAV due to a command input.

Note: To use UAV algorithms, you must install the UAV Library for Robotics System Toolbox®. To install, use `roboticsAddons`.

Create the fixed-wing guidance model.

```
model = fixedwing;
```

Set the air speed of the vehicle by modifying the structure from the `state` function.

```
s = state(model);  
s(4) = 5; % 10 m/s
```

Specify a control command, `u`, that maintains the air speed and gives a roll angle of $\pi/12$.

```
u = control(model);  
u.RollAngle = pi/12;  
u.AirSpeed = 5;
```

Create a default environment without wind.

```
e = environment(model);
```

Compute the time derivative of the state given the current state, control command, and environment.

```
sdot = derivative(model,s,u,e);
```

Simulate the UAV state using `ode45` integration. The `y` field outputs the fixed-wing UAV states based on this simulation.


```
simOut = ode45(@(~,x)derivative(model,x,u,e), [0 50], s);  
size(simOut.y)
```

```
ans = 1x2
```

```
8 904
```

Plot the change in roll angle based on the simulation output. The roll angle is the 7th row of the `simOut.y` output.

```
plot(simOut.y(7,:))
```

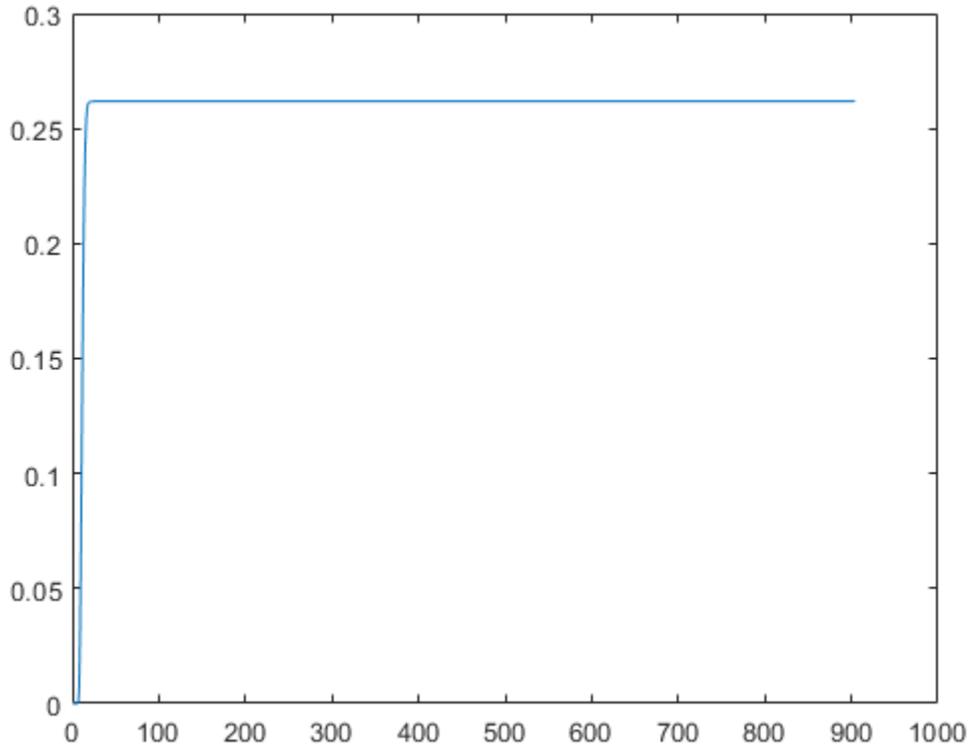


You can also plot the fixed-wing trajectory using `plotTransforms`. Create the translation and rotation vectors from the simulated state. Downsample (every 30th element) and transpose the `simOut` elements, and convert the Euler angles to quaternions. Specify the mesh as the `fixedwing.stl` file and the positive Z-direction as "down". The displayed view shows the UAV making a constant turn based on the constant roll angle.

```

downsample = 1:30:size(simOut.y,2);
translations = simOut.y(1:3,downsample)'; % xyz-position
rotations = eul2quat([simOut.y(5,downsample)',simOut.y(6,downsample)',simOut.y(7,downsample)']');
plotTransforms(translations,rotations,...
    'MeshFilePath','fixedwing.stl','InertialZDirection',"down")
hold on
plot3(simOut.y(1,:),-simOut.y(2,:),simOut.y(3,:),'--b') % full path
xlim([-10.0 10.0])

```

```
ylim([-20.0 5.0])  
zlim([-0.5 4.00])  
view([-45 90])  
hold off
```

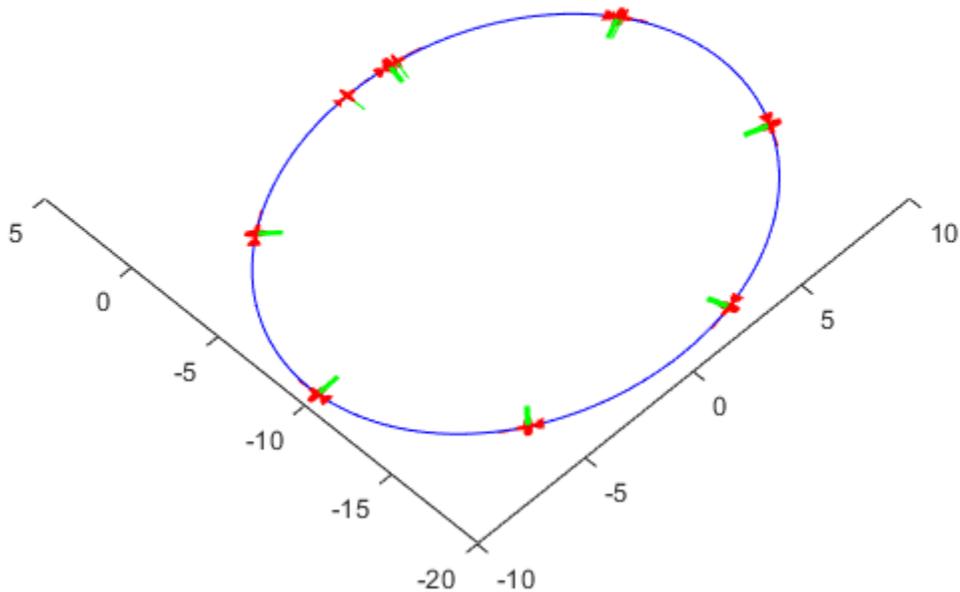

Input Arguments

uavGuidanceModel — UAV guidance model

fixedwing object | multirotor object

UAV guidance model, specified as a `fixedwing` or `multirotor` object.

Output Arguments

stateVec — State vector

`zeros(7,1) | zeros(13,1)`

State vector, returned as a seven-element or thirteen-element vector. The vector is always filled with zeros. Use this function to ensure you have the proper size for your state vector.

For fixed-wing UAVs, the state is an eight-element vector:

- **North** - Position in north direction in meters.
- **East** - Position in east direction in meters.
- **Height** - Height above ground in meters.
- **AirSpeed** - Speed relative to wind in meters per second.
- **HeadingAngle** - Angle between ground velocity and north direction in radians.
- **FlightPathAngle** - Angle between ground velocity and north-east plane in radians.
- **RollAngle** - Angle of rotation along body x-axis in radians.
- **RollAngleRate** - Angular velocity of rotation along body x-axis in radians per second.

For multicopter UAVs, the state is a thirteen-element vector in this order:

- **World Position** - [x y z] in meters.
- **World Velocity** - [vx vy vz] in meters per second.
- **Euler Angles (ZYX)** - [psi theta phi] in radians.
- **Body Angular Rates** - [r p q] in radians per second.
- **Thrust** - F in Newtons.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

control | derivative | environment | ode45 | plotTransforms | roboticsAddons
| state

Objects

fixedwing | multirotor

Blocks

UAV Guidance Model | Waypoint Follower

Topics

“Approximate High-Fidelity UAV model with UAV Guidance Model block”

“Tuning Waypoint Follower for Fixed-Wing UAV”

Introduced in R2018b

tform2axang

Convert homogeneous transformation to axis-angle rotation

Syntax

```
axang = tform2axang(tform)
```

Description

`axang = tform2axang(tform)` converts the rotational component of a homogeneous transformation, `tform`, to an axis-angle rotation, `axang`. The translational components of `tform` are ignored. The input homogeneous transformation must be in the premultiply form for transformations.

Examples

Convert Homogeneous Transformation to Axis-Angle Rotation

```
tform = [1 0 0 0; 0 0 -1 0; 0 1 0 0; 0 0 0 1];  
axang = tform2axang(tform)
```

```
axang = 1×4
```

```
    1.0000         0         0    1.5708
```

Input Arguments

tform — Homogeneous transformation

4-by-4-by-*n* matrix

Homogeneous transformation, specified by a 4-by-4-by- n matrix of n homogeneous transformations. The input homogeneous transformation must be in the premultiply form for transformations.

Example: `[0 0 1 0; 0 1 0 0; -1 0 0 0; 0 0 0 1]`

Output Arguments

axang — Rotation given in axis-angle form

n -by-4 matrix

Rotation given in axis-angle form, specified as an n -by-4 matrix of n axis-angle rotations. The first three elements of every row specify the rotation axes, and the last element defines the rotation angle (in radians).

Example: `[1 0 0 pi/2]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`axang2tform`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

tform2eul

Extract Euler angles from homogeneous transformation

Syntax

```
eul = tform2eul(tform)
eul = tform2eul(tform, sequence)
```

Description

`eul = tform2eul(tform)` extracts the rotational component from a homogeneous transformation, `tform`, and returns it as Euler angles, `eul`. The translational components of `tform` are ignored. The input homogeneous transformation must be in the premultiply form for transformations. The default order for Euler angle rotations is "ZYX".

`eul = tform2eul(tform, sequence)` extracts the Euler angles, `eul`, from a homogeneous transformation, `tform`, using the specified rotation sequence, `sequence`. The default order for Euler angle rotations is "ZYX".

Examples

Extract Euler Angles from Homogeneous Transformation Matrix

```
tform = [1 0 0 0.5; 0 -1 0 5; 0 0 -1 -1.2; 0 0 0 1];
eulZYX = tform2eul(tform)
```

```
eulZYX = 1×3
          0          0    3.1416
```

Extract Euler Angles from Homogeneous Transformation Matrix Using ZYZ Rotation

```
tform = [1 0 0 0.5; 0 -1 0 5; 0 0 -1 -1.2; 0 0 0 1];  
eulZYZ = tform2eul(tform, 'ZYZ')
```

```
eulZYZ = 1×3  
         0   -3.1416   3.1416
```

Input Arguments

tform — Homogeneous transformation

4-by-4-by-*n* matrix

Homogeneous transformation, specified by a 4-by-4-by-*n* matrix of *n* homogeneous transformations. The input homogeneous transformation must be in the premultiply form for transformations.

Example: [0 0 1 0; 0 1 0 0; -1 0 0 0; 0 0 0 1]

sequence — Axis rotation sequence

"ZYX" (default) | "YZZ" | "XYZ"

Axis rotation sequence for the Euler angles, specified as one of these string scalars:

- "ZYX" (default) - The order of rotation angles is z-axis, y-axis, x-axis.
- "YZZ" - The order of rotation angles is z-axis, y-axis, z-axis.
- "XYZ" - The order of rotation angles is x-axis, y-axis, z-axis.

Data Types: string | char

Output Arguments

eul — Euler rotation angles

n-by-3 matrix

Euler rotation angles in radians, returned as an n -by-3 array of Euler rotation angles. Each row represents one Euler angle set.

Example: [0 0 1.5708]

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

eul2tform

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

tform2quat

Extract quaternion from homogeneous transformation

Syntax

```
quat = tform2quat(tform)
```

Description

`quat = tform2quat(tform)` extracts the rotational component from a homogeneous transformation, `tform`, and returns it as a quaternion, `quat`. The translational components of `tform` are ignored. The input homogeneous transformation must be in the premultiply form for transformations.

Examples

Extract Quaternion from Homogeneous Transformation

```
tform = [1 0 0 0; 0 -1 0 0; 0 0 -1 0; 0 0 0 1];  
quat = tform2quat(tform)
```

```
quat = 1×4
```

```
    0    1    0    0
```

Input Arguments

tform — Homogeneous transformation

4-by-4-by-*n* matrix

Homogeneous transformation, specified by a 4-by-4-by- n matrix of n homogeneous transformations. The input homogeneous transformation must be in the premultiply form for transformations.

Example: `[0 0 1 0; 0 1 0 0; -1 0 0 0; 0 0 0 1]`

Output Arguments

quat — Unit quaternion

n -by-4 matrix

Unit quaternion, returned as an n -by-4 matrix containing n quaternions. Each quaternion, one per row, is of the form $q = [w \ x \ y \ z]$, with w as the scalar number.

Example: `[0.7071 0.7071 0 0]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`quat2tform`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

tform2rotm

Extract rotation matrix from homogeneous transformation

Syntax

```
rotm = tform2rotm(tform)
```

Description

`rotm = tform2rotm(tform)` extracts the rotational component from a homogeneous transformation, `tform`, and returns it as an orthonormal rotation matrix, `rotm`. The translational components of `tform` are ignored. The input homogeneous transformation must be in the pre-multiply form for transformations. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Examples

Convert Homogeneous Transformation to Rotation Matrix

```
tform = [1 0 0 0; 0 -1 0 0; 0 0 -1 0; 0 0 0 1];  
rotm = tform2rotm(tform)
```

```
rotm = 3×3
```

```
    1     0     0  
    0    -1     0  
    0     0    -1
```

Input Arguments

tform — Homogeneous transformation

4-by-4-by- n matrix

Homogeneous transformation matrix, specified by a 4-by-4-by- n matrix of n homogeneous transformations. The input homogeneous transformation must be in the pre-multiply form for transformations.

Example: `[0 0 1 0; 0 1 0 0; -1 0 0 0; 0 0 0 1]`

Output Arguments

rotm — Rotation matrix

3-by-3-by- n matrix

Rotation matrix, returned as a 3-by-3-by- n matrix containing n rotation matrices. Each rotation matrix has a size of 3-by-3 and is orthonormal. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Example: `[0 0 1; 0 1 0; -1 0 0]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`rotm2tform`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

tform2trvec

Extract translation vector from homogeneous transformation

Syntax

```
trvec = tform2trvec(tform)
```

Description

`trvec = tform2trvec(tform)` extracts the Cartesian representation of translation vector, `trvec`, from a homogeneous transformation, `tform`. The rotational components of `tform` are ignored. The input homogeneous transformation must be in the premultiply form for transformations.

Examples

Extract Translation Vector from Homogeneous Transformation

```
tform = [1 0 0 0.5; 0 -1 0 5; 0 0 -1 -1.2; 0 0 0 1];  
trvec = tform2trvec(tform)
```

```
trvec = 1×3
```

```
    0.5000    5.0000   -1.2000
```

Input Arguments

tform — Homogeneous transformation

4-by-4-by-*n* matrix

Homogeneous transformation, specified by a 4-by-4-by- n matrix of n homogeneous transformations. The input homogeneous transformation must be in the premultiply form for transformations.

Example: `[0 0 1 0; 0 1 0 0; -1 0 0 0; 0 0 0 1]`

Output Arguments

tvec — Cartesian representation of a translation vector

n -by-3 matrix

Cartesian representation of a translation vector, returned as an n -by-3 matrix containing n translation vectors. Each vector is of the form $t = [x \ y \ z]$.

Example: `[0.5 6 100]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`tvec2tform`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

times, .*

Element-wise quaternion multiplication

Syntax

```
quatC = A.*B
```

Description

`quatC = A.*B` returns the element-by-element quaternion multiplication of quaternion arrays.

You can use quaternion multiplication to compose rotation operators:

- To compose a sequence of frame rotations, multiply the quaternions in the same order as the desired sequence of rotations. For example, to apply a p quaternion followed by a q quaternion, multiply in the order pq . The rotation operator becomes $(pq)^*v(pq)$, where v represents the object to rotate in quaternion form. $*$ represents conjugation.
- To compose a sequence of point rotations, multiply the quaternions in the reverse order of the desired sequence of rotations. For example, to apply a p quaternion followed by a q quaternion, multiply in the reverse order, qp . The rotation operator becomes $(qp)v(qp)^*$.

Examples

Multiply Two Quaternion Vectors

Create two vectors, A and B, and multiply them element by element.

```
A = quaternion([1:4;5:8]);  
B = A;  
C = A.*B
```

```
C=2×1 object
    -28 + 4i + 6j + 8k
   -124 + 60i + 70j + 80k
```

Multiply Two Quaternion Arrays

Create two 3-by-3 arrays, A and B, and multiply them element by element.

```
A = reshape( quaternion( randn(9,4) ), 3,3 );
B = reshape( quaternion( randn(9,4) ), 3,3 );
C = A.*B
```

```
C=3×3 object
    0.60169 + 2.4332i - 2.5844j + 0.51646k   -0.49513 + 1.1722i + 4.4401j - 1.7288k
   -4.2329 + 2.4547i + 3.7768j + 0.77484k   -0.65232 - 0.43112i - 1.4645j - 0.9000k
   -4.4159 + 2.1926i + 1.9037j - 4.0303k    -2.0232 + 0.4205i - 0.17288j + 3.8161k
```

Note that quaternion multiplication is not commutative:

```
isequal(C,B.*A)
```

```
ans = logical
      0
```

Multiply Quaternion Row and Column Vectors

Create a row vector **a** and a column vector **b**, then multiply them. The 1-by-3 row vector and 4-by-1 column vector combine to produce a 4-by-3 matrix with all combinations of elements multiplied.

```
a = [zeros('quaternion'),ones('quaternion'),quaternion(randn(1,4))]
```

```
a=1×3 object
      0 +      0i +      0j +      0k      1 +      0i +      0j +
```

```
b = quaternion(randn(4,4))
```

```

b=4×1 object
  0.31877 + 3.5784i + 0.7254j - 0.12414k
 -1.3077 + 2.7694i - 0.063055j + 1.4897k
-0.43359 - 1.3499i + 0.71474j + 1.409k
  0.34262 + 3.0349i - 0.20497j + 1.4172k

```

a.*b

```

ans=4×3 object
  0 + 0i + 0j + 0k 0.31877 + 3.5784i + 0.7254j
  0 + 0i + 0j + 0k -1.3077 + 2.7694i - 0.063055j
  0 + 0i + 0j + 0k -0.43359 - 1.3499i + 0.71474j
  0 + 0i + 0j + 0k 0.34262 + 3.0349i - 0.20497j

```

Input Arguments

A — Array to multiply

scalar | vector | matrix | multidimensional array

Array to multiply, specified as a quaternion, an array of quaternions, a real scalar, or an array of real numbers.

A and B must have compatible sizes. In the simplest cases, they can be the same size or one can be a scalar. Two inputs have compatible sizes if, for every dimension, the dimension sizes of the inputs are the same or one of them is 1.

Data Types: quaternion | single | double

B — Array to multiply

scalar | vector | matrix | multidimensional array

Array to multiply, specified as a quaternion, an array of quaternions, a real scalar, or an array of real numbers.

A and B must have compatible sizes. In the simplest cases, they can be the same size or one can be a scalar. Two inputs have compatible sizes if, for every dimension, the dimension sizes of the inputs are the same or one of them is 1.

Data Types: quaternion | single | double

Output Arguments

quatC — Quaternion product

scalar | vector | matrix | multidimensional array

Quaternion product, returned as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

Algorithms

Quaternion Multiplication by a Real Scalar

Given a quaternion,

$$q = a_q + b_q i + c_q j + d_q k,$$

the product of q and a real scalar β is

$$\beta q = \beta a_q + \beta b_q i + \beta c_q j + \beta d_q k$$

Quaternion Multiplication by a Quaternion Scalar

The definition of the basis elements for quaternions,

$$i^2 = j^2 = k^2 = ijk = -1,$$

can be expanded to populate a table summarizing quaternion basis element multiplication:

	1	i	j	k
1	1	i	j	k
i	i	-1	k	-j
j	j	-k	-1	i
k	k	j	-i	-1

When reading the table, the rows are read first, for example: $ij = k$ and $ji = -k$.

Given two quaternions, $q = a_q + b_q i + c_q j + d_q k$, and $p = a_p + b_p i + c_p j + d_p k$, the multiplication can be expanded as:

$$\begin{aligned} z = pq &= (a_p + b_p i + c_p j + d_p k)(a_q + b_q i + c_q j + d_q k) \\ &= a_p a_q + a_p b_q i + a_p c_q j + a_p d_q k \\ &\quad + b_p a_q i + b_p b_q i^2 + b_p c_q ij + b_p d_q ik \\ &\quad + c_p a_q j + c_p b_q ji + c_p c_q j^2 + c_p d_q jk \\ &\quad + d_p a_q k + d_p b_q ki + d_p c_q kj + d_p d_q k^2 \end{aligned}$$

You can simplify the equation using the quaternion multiplication table.

$$\begin{aligned} z = pq &= a_p a_q + a_p b_q i + a_p c_q j + a_p d_q k \\ &\quad + b_p a_q i - b_p b_q + b_p c_q k - b_p d_q j \\ &\quad + c_p a_q j - c_p b_q k - c_p c_q + c_p d_q i \\ &\quad + d_p a_q k + d_p b_q j - d_p c_q i - d_p d_q \end{aligned}$$

References

- [1] Kuipers, Jack B. *Quaternions and Rotation Sequences: A Primer with Applications to Orbits, Aerospace, and Virtual Reality*. Princeton, NJ: Princeton University Press, 2007.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

transformScan

Transform laser scan based on relative pose

Syntax

```
transScan = transformScan(scan, relPose)
```

```
[transRanges, transAngles] = transformScan(ranges, angles, relPose)
```

Description

`transScan = transformScan(scan, relPose)` transforms the laser scan specified in `scan` by using the specified relative pose, `relPose`.

`[transRanges, transAngles] = transformScan(ranges, angles, relPose)` transforms the laser scan specified in `ranges` and `angles` by using the specified relative pose, `relPose`.

Examples

Transform Laser Scans

Create a `lidarScan` object. Specify the ranges and angles as vectors.

```
refRanges = 5*ones(1,300);  
refAngles = linspace(-pi/2,pi/2,300);  
refScan = lidarScan(refRanges,refAngles);
```

Translate the laser scan by an `[x y]` offset of `(0.5, 0.2)`.

```
transformedScan = transformScan(refScan,[0.5 0.2 0]);
```

Rotate the laser scan by 20 degrees.

```
rotateScan = transformScan(refScan,[0,0,deg2rad(20)]);
```

Input Arguments

scan — Lidar scan readings

lidarScan object

Lidar scan readings, specified as a lidarScan object.

ranges — Range values from scan data

vector

Range values from scan data, specified as a vector in meters. These range values are distances from a sensor at specified angles. The vector must be the same length as the corresponding angles vector.

angles — Angle values from scan data

vector

Angle values from scan data, specified as a vector in radians. These angle values are the specific angles of the specified ranges. The vector must be the same length as the corresponding ranges vector.

relPose — Relative pose of current scan

[x y theta]

Relative pose of current scan, specified as [x y theta], where [x y] is the translation in meters and theta is the rotation in radians.

Output Arguments

transScan — Transformed lidar scan readings

lidarScan object

Transformed lidar scan readings, specified as a lidarScan object.

transRanges — Range values of transformed scan

vector

Range values of transformed scan, returned as a vector in meters. These range values are distances from a sensor at specified `transAngles`. The vector is the same length as the corresponding `transAngles` vector.

`transAngles` — Angle values from scan data

vector

Angle values of transformed scan, returned as a vector in radians. These angle values are the specific angles of the specified `transRanges`. The vector is the same length as the corresponding `transRanges` vector.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`transformScan`

Introduced in R2017a

transformtraj

Generate trajectories between two transformations

Syntax

```
[tforms,vel,acc] = transformtraj(T0,TF,tInterval,tSamples)
[tforms,vel,acc] = transformtraj(T0,TF,tInterval,
tSamples,Name,Value)
```

Description

`[tforms,vel,acc] = transformtraj(T0,TF,tInterval,tSamples)` generates a trajectory that interpolates between two 4-by-4 homogeneous transformations, `T0` and `TF`, with points based on the time interval and given time samples.

`[tforms,vel,acc] = transformtraj(T0,TF,tInterval,tSamples,Name,Value)` specifies additional parameters using `Name, Value` pair arguments.

Examples


Interpolate Between Homogenous Transformations

Build transformations from two orientations and positions. Specify the time interval and vector of times for interpolating.

```
t0 = axang2tform([0 1 1 pi/4])*trvec2tform([0 0 0]);
tF = axang2tform([1 0 1 6*pi/5])*trvec2tform([1 1 1]);
tInterval = [0 1];
tvec = 0:0.01:1;
```

Interpolate between the points. Plot the trajectory using `plotTransforms`. Convert the transformations to quaternion rotations and linear transitions. The figure shows all the intermediate transformations of the coordinate frame.

```
[tfInterp, v1, a1] = transformtraj(t0,tF,tInterval,tvec);  
  
rotations = tform2quat(tfInterp);  
translations = tform2trvec(tfInterp);  
  
plotTransforms(translations,rotations)  
xlabel('X')  
ylabel('Y')  
zlabel('Z')
```

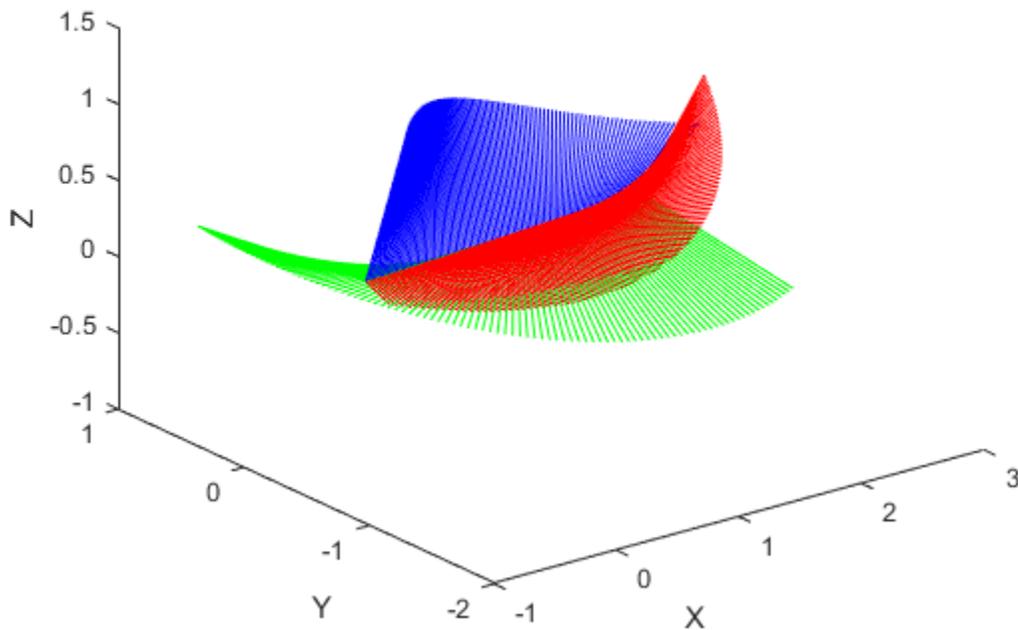

Input Arguments

T0 — Initial transformation

4-by-4 homogeneous transformation

Initial transformation, specified as a 4-by-4 homogeneous transformation. The function generates a trajectory that starts at the initial transformation, `T0`, and goes to the final transformation, `TF`.

Data Types: `single` | `double`

TF — Final transformation

4-by-4 homogeneous transformation

Final transformation, specified as a 4-by-4 homogeneous transformation. The function generates a trajectory that starts at the initial transformation, `T0`, and goes to the final transformation, `TF`.

Data Types: `single` | `double`

tInterval — Start and end times for trajectory

two-element vector

Start and end times for the trajectory, specified as a two-element vector.

Example: `[0 10]`

Data Types: `single` | `double`

tSamples — Time samples for trajectory

m-element vector

Time samples for the trajectory, specified as an *m*-element vector. The output trajectory, `rotVector`, is a vector of orientations

Example: `0:0.01:10`

Data Types: `single` | `double`

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes.

You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

Example: `'TimeScaling', [0 1 2; 0 1 0; 0 0 0]`

TimeScaling — Time scaling vector and first two derivatives

3-by- m vector

Time scaling vector and the first two derivatives, specified as a 3-by- m vector, where m is the length of `tSamples`. By default, the time scaling is a linear time scaling between the time points in `tInterval`.

For a nonlinear time scaling, specify the values of the time points in the first row. The second and third rows are the velocity and acceleration of the time points, respectively. For example, to follow the path with a linear velocity to the halfway point, and then jump to the end, the time-scaling would be:

```
s(1,:) = [0 0.25 0.5 1 1 1] % Position
s(2,:) = [1 1 1 0 0 0] % Velocity
s(3,:) = [0 0 0 0 0 0] % Acceleration
```

Data Types: `single` | `double`

Output Arguments

tforms — Transformation trajectory

4-by-4-by- m homogeneous transformation matrix array

Transformation trajectory, returned as a 4-by-4-by- m homogeneous transformation matrix array, where m is the number of points in `tSamples`.

vel — Transformation velocities

6-by- m matrix

Transformation velocities, returned as a 6-by- m matrix, where m is the number of points in `tSamples`. The first three elements are the angular velocities, and the second three elements are the velocities in time.

acc — Transformation accelerations

6-by- m matrix

Transformation accelerations, returned as a 6-by- m matrix, where m is the number of points in `tSamples`. The first three elements are the angular accelerations, and the second three elements are the accelerations in time.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`bsplinepolytraj` | `cubicpolytraj` | `quinticpolytraj` | `rottraj` | `transformtraj` | `trapveltraj`

Introduced in R2019a

transpose, .'

Transpose a quaternion array

Syntax

```
Y = quat.'
```

Description

`Y = quat.'` returns the non-conjugate transpose of the quaternion array, `quat`.

Examples

Vector Transpose

Create a vector of quaternions and compute its nonconjugate transpose.

```
quat = quaternion(randn(4,4))
```

```
quat=4×1 object
```

```
0.53767 + 0.31877i + 3.5784j + 0.7254k  
1.8339 - 1.3077i + 2.7694j - 0.063055k  
-2.2588 - 0.43359i - 1.3499j + 0.71474k  
0.86217 + 0.34262i + 3.0349j - 0.20497k
```

```
quatTransposed = quat.'
```

```
quatTransposed=1×4 object
```

```
0.53767 + 0.31877i + 3.5784j + 0.7254k 1.8339 - 1.3077i + 2.7694j
```

Matrix Transpose

Create a matrix of quaternions and compute its nonconjugate transpose.

```
quat = [quaternion(randn(2,4)),quaternion(randn(2,4))]
```

```
quat=2x2 object
    0.53767 - 2.2588i + 0.31877j - 0.43359k    3.5784 - 1.3499i + 0.7254j
    1.8339 + 0.86217i - 1.3077j + 0.34262k    2.7694 + 3.0349i - 0.063055j
```

```
quatTransposed = quat.'
```

```
quatTransposed=2x2 object
    0.53767 - 2.2588i + 0.31877j - 0.43359k    1.8339 + 0.86217i - 1.3077j
    3.5784 - 1.3499i + 0.7254j + 0.71474k    2.7694 + 3.0349i - 0.063055j
```

Input Arguments

quat — Quaternion array to transpose

vector | matrix

Quaternion array to transpose, specified as a vector or matrix of quaternions. `transpose` is defined for 1-D and 2-D arrays. For higher-order arrays, use `permute`.

Data Types: quaternion

Output Arguments

Y — Transposed quaternion array

vector | matrix

Transposed quaternion array, returned as an N -by- M array, where `quat` was specified as an M -by- N array.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

trapveltraj

Generate trajectories with trapezoidal velocity profiles

Syntax

```
[q,qd,qdd,tSamples,pp] = trapveltraj(wayPoints,numSamples)
[q,qd,qdd,tSamples,pp] = trapveltraj(wayPoints,numSamples,
Name,Value)
```

Description

`[q,qd,qdd,tSamples,pp] = trapveltraj(wayPoints,numSamples)` generates a trajectory through a given set of input waypoints that follow a trapezoidal velocity profile. The function outputs positions, velocities, and accelerations at the given time samples, `tSamples`, based on the specified number of samples, `numSamples`. The function also returns the piecewise polynomial `pp` form of the polynomial trajectory with respect to time.

`[q,qd,qdd,tSamples,pp] = trapveltraj(wayPoints,numSamples, Name,Value)` specifies additional parameters using `Name,Value` pair arguments.

Examples

Compute Trapezoidal Velocity Trajectory for 2-D Planar Motion

Use the `trapveltraj` function with a given set of 2-D `xy` waypoints. Time points for the waypoints are also given.


```
wpts = [0 45 15 90 45; 90 45 -45 15 90];
```

Compute the trajectory for a given number of samples (501). The function outputs the trajectory positions (`q`), velocity (`qd`), acceleration (`qdd`), time vector (`tvec`), and polynomial coefficients (`pp`) of the polynomial that achieves the waypoints using trapezoidal velocities.

```
[q, qd, qdd, tvec, pp] = trapveltraj(wpts, 501);
```


Plot the trajectories for the x- and y-positions and the trapezoidal velocity profile between each waypoint.

```
subplot(2,1,1)
plot(tvec, q)
xlabel('t')
ylabel('Positions')
legend('X', 'Y')
subplot(2,1,2)
plot(tvec, qd)
xlabel('t')
ylabel('Velocities')
legend('X', 'Y')
```

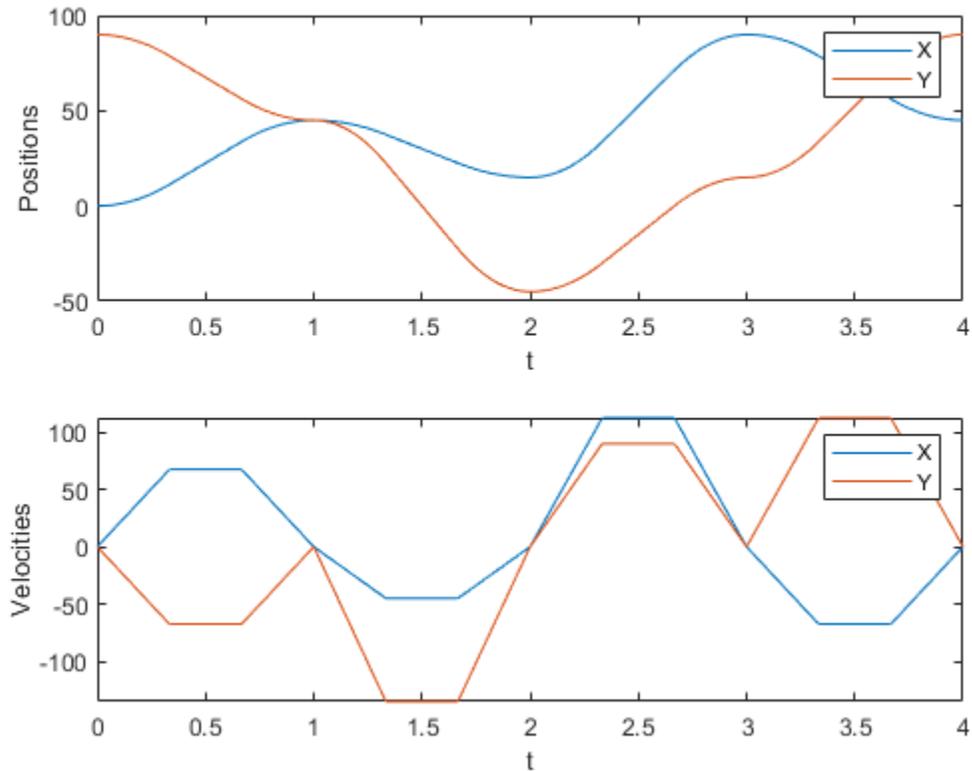

You can also verify the actual positions in the 2-D plane. Plot the separate rows of the q vector and the waypoints as x- and y-positions.

```
figure
plot(q(1,:),q(2:,:), '-b', wpts(1,:), wpts(2,:), 'or')
```

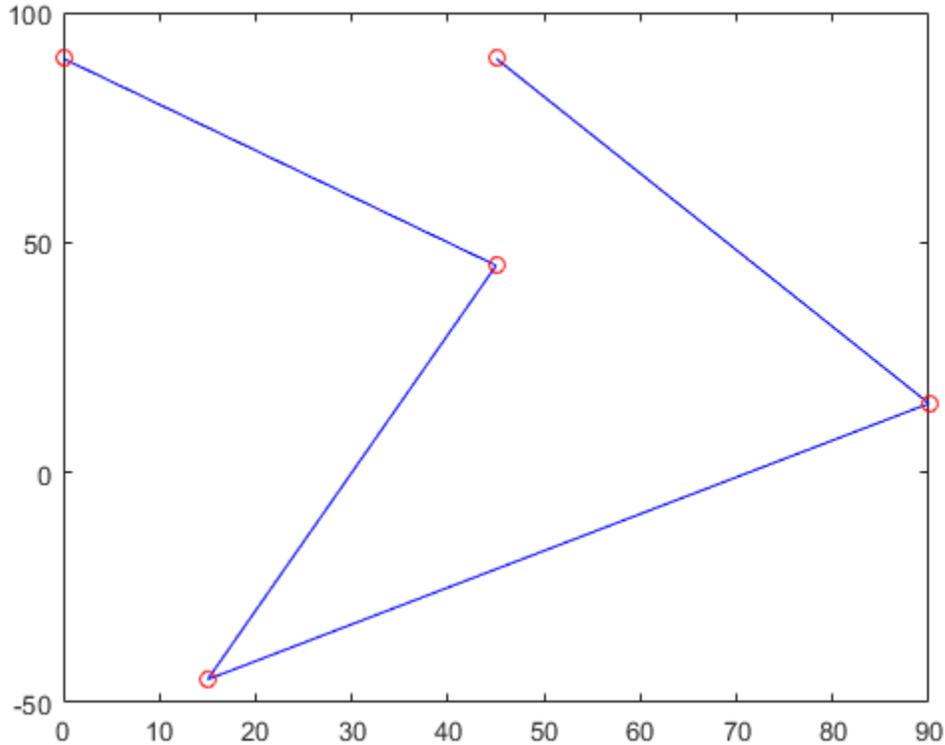

Input Arguments

wayPoints — Waypoints for trajectory

n-by-*p* matrix

Points for waypoints of trajectory, specified as an *n*-by-*p* matrix, where *n* is the dimension of the trajectory and *p* is the number of waypoints.

Example: [1 4 4 3 -2 0; 0 1 2 4 3 1]

Data Types: single | double

numSamples — Number of samples in output trajectory

positive integer

Number of samples in output trajectory, specified as a positive integer.

Data Types: `single` | `double`

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

Note Due to the nature of the trapezoidal velocity profile, you can only set at most two of the following parameters.

Example: `'PeakVelocity',5`

PeakVelocity — Peak velocity of the velocity profilescalar | n -element vector | n -by- $(p-1)$ matrix

Peak velocity of the profile segment, specified as the comma-separated pair consisting of `'PeakVelocity'` and a scalar, vector, or matrix. This peak velocity is the highest velocity achieved during the trapezoidal velocity profile.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p-1)$ matrix is applied to each element of the trajectory for each waypoint.

Data Types: `single` | `double`

Acceleration — Acceleration of velocity profilescalar | n -element vector | n -by- $(p-1)$ matrix

Acceleration of the velocity profile, specified as the comma-separated pair consisting of `'Acceleration'` and a scalar, vector, or matrix. This acceleration defines the constant acceleration from zero velocity to the `PeakVelocity` value.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p-1)$ matrix is applied to each element of the trajectory for each waypoint.

Data Types: `single` | `double`

EndTime — Duration of each trajectory segment

scalar | n -element vector | n -by- $(p-1)$ matrix

Duration of each of the $p-1$ trajectory segments, specified as the comma-separated pair consisting of 'EndTime' and a scalar, vector, or matrix.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p-1)$ matrix is applied to each element of the trajectory for each waypoint.

Data Types: `single` | `double`

AccelTime — Duration of acceleration phase of velocity profile

scalar | n -element vector | n -by- $(p-1)$ matrix

Duration of acceleration phase of velocity profile, specified as the comma-separated pair consisting of 'EndTime' and a scalar, vector, or matrix.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p-1)$ matrix is applied to each element of the trajectory for each waypoint.

Data Types: `single` | `double`

Output Arguments

q — Positions of trajectory

n -by- m matrix

Positions of the trajectory at the given time samples in `tSamples`, returned as n -by- m matrix, where n is the dimension of the trajectory, and m is equal to `numSamples`.

Data Types: `single` | `double`

qd — Velocities of trajectory

n -by- m matrix

Velocities of the trajectory at the given time samples in `tSamples`, returned as n -by- m matrix, where n is the dimension of the trajectory, and m is equal to `numSamples`.

Data Types: `single` | `double`

qdd — Accelerations of trajectory

n -by- m matrix

Accelerations of the trajectory at the given time samples in `tSamples`, returned as n -by- m matrix, where n is the dimension of the trajectory, and m is equal to `numSamples`.

Data Types: `single` | `double`

tSamples — Time samples for trajectory

m -element vector

Time samples for the trajectory, returned as an m -element vector. The output position, `q`, velocity, `qd`, and accelerations, `qdd` are sampled at these time intervals.

Example: `0:0.01:10`

Data Types: `single` | `double`

pp — Piecewise polynomials

cell array or structures

Piecewise polynomials, returned as a cell array of structures that defines the polynomial for each section of the piecewise trajectory. If all the elements of the trajectory share the same breaks, the cell array is a single piecewise polynomial structure. Otherwise, the cell array has n elements, which correspond to each of the different trajectory elements (dimensions). Each structure contains the fields:

- `form`: 'pp'.
- `breaks`: p -element vector of times when the piecewise trajectory changes forms. p is the number of waypoints.
- `coefs`: $n(p-1)$ -by-order matrix for the coefficients for the polynomials. $n(p-1)$ is the dimension of the trajectory times the number of pieces. Each set of n rows defines the coefficients for the polynomial that described each variable trajectory.
- `pieces`: $p-1$. The number of breaks minus 1.
- `order`: Degree of the polynomial + 1. For example, cubic polynomials have an order of 4.

- `dim`: n . The dimension of the control point positions.

You can build your own piecewise polynomials using `mkpp`, or evaluate the polynomial at specified times using `ppval`.

pp — Piecewise-polynomial

structure

Piecewise-polynomial, returned as a structure that defines the polynomial for each section of the piecewise trajectory. You can build your own piecewise polynomials using `mkpp`, or evaluate the polynomial at specified times using `ppval`. The structure contains the fields:

- `form`: 'pp'.
- `breaks`: p -element vector of times when the piecewise trajectory changes forms. p is the number of waypoints.
- `coefs`: $n(p-1)$ -by-order matrix for the coefficients for the polynomials. $n(p-1)$ is the dimension of the trajectory times the number of pieces. Each set of n rows defines the coefficients for the polynomial that described each variable trajectory.
- `pieces`: $p-1$. The number of breaks minus 1.
- `order`: Degree of the polynomial + 1. For example, cubic polynomials have an order of 4.
- `dim`: n . The dimension of the control point positions.

References

- [1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning and Control*. Cambridge: Cambridge University Press, 2017.
- [2] Spong, Mark W., Seth Hutchinson, and M. Vidyasagar. *Robot Modeling and Control*. John Wiley & Sons, 2006.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

[bsplinepolytraj](#) | [cubicpolytraj](#) | [quinticpolytraj](#) | [rottraj](#) | [transformtraj](#) | [trapveltraj](#)

Introduced in R2019a

trvec2tform

Convert translation vector to homogeneous transformation

Syntax

```
tform = trvec2tform(trvec)
```

Description

`tform = trvec2tform(trvec)` converts the Cartesian representation of a translation vector, `trvec`, to the corresponding homogeneous transformation, `tform`. When using the transformation matrix, premultiply it with the coordinates to be transformed (as opposed to postmultiplying).

Examples

Convert Translation Vector to Homogeneous Transformation

```
trvec = [0.5 6 100];  
tform = trvec2tform(trvec)
```

```
tform = 4×4
```

```
    1.0000         0         0     0.5000  
         0     1.0000         0     6.0000  
         0         0     1.0000    100.0000  
         0         0         0         1.0000
```

Input Arguments

trvec — Cartesian representation of a translation vector
n-by-3 matrix

Cartesian representation of a translation vector, specified as an n -by-3 matrix containing n translation vectors. Each vector is of the form $t = [x \ y \ z]$.

Example: `[0.5 6 100]`

Output Arguments

tform — Homogeneous transformation

4-by-4-by- n matrix

Homogeneous transformation matrix, returned as a 4-by-4-by- n matrix of n homogeneous transformations. When using the rotation matrix, premultiply it with the coordinates to be rotated (as opposed to postmultiplying).

Example: `[0 0 1 0; 0 1 0 0; -1 0 0 0; 0 0 0 1]`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`tform2trvec`

Topics

“Coordinate Transformations in Robotics”

Introduced in R2015a

uminus, -

Quaternion unary minus

Syntax

mQuat = -quat

Description

mQuat = -quat negates the elements of quat and stores the result in mQuat.

Examples

Negate Elements of Quaternion Matrix

Unary minus negates each part of a the quaternion. Create a 2-by-2 matrix, Q.

```
Q = quaternion(randn(2), randn(2), randn(2), randn(2))
```

Q=2×2 *object*

```
0.53767 + 0.31877i + 3.5784j + 0.7254k    -2.2588 - 0.43359i - 1.3499j  
1.8339 - 1.3077i + 2.7694j - 0.063055k    0.86217 + 0.34262i + 3.0349j
```

Negate the parts of each quaternion in Q.

```
R = -Q
```

R=2×2 *object*

```
-0.53767 - 0.31877i - 3.5784j - 0.7254k    2.2588 + 0.43359i + 1.3499j  
-1.8339 + 1.3077i - 2.7694j + 0.063055k    -0.86217 - 0.34262i - 3.0349j
```

Input Arguments

quat — Quaternion array

scalar | vector | matrix | multidimensional array

Quaternion array, specified as a scalar, vector, matrix, or multidimensional array.

Data Types: quaternion

Output Arguments

mQuat — Negated quaternion array

scalar | vector | matrix | multidimensional array

Negated quaternion array, returned as the same size as `quat`.

Data Types: quaternion

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

updateErrorDynamicsFromStep

Update values of NaturalFrequency and DampingRatio properties given desired step response

Syntax

```
updateErrorDynamicsFromStep(motionModel,settlingTime,overshoot)
updateErrorDynamicsFromStep(motionModel,settlingTime,overshoot,
jointIndex)
```

Description

updateErrorDynamicsFromStep(motionModel,settlingTime,overshoot) updates the values of the NaturalFrequency and DampingRatio properties of the given jointSpaceMotionModel object given the desired step response.

updateErrorDynamicsFromStep(motionModel,settlingTime,overshoot, jointIndex) updates the NaturalFrequency and DampingRatio properties for a specific joint. In this case, the values of SettlingTime and Overshoot must be provided as scalars because they apply to a single joint.

Examples

Create Joint-Space Motion Model

This example shows how to create and use a jointSpaceMotionModel object for a manipulator robot in joint-space.

Create the Robot

```
robot = loadrobot("kinovaGen3","DataFormat","column","Gravity",[0 0 -9.81]);
```

Set Up the Simulation

Set the timespan to be 1 s with a timestep size of 0.01 s. Set the initial state to be the robots, home configuration with a velocity of zero.

```
tspan = 0:0.01:1;
initialState = [homeConfiguration(robot); zeros(7,1)];
```

Define the a reference state with a target position, zero velocity, and zero acceleration.

```
targetState = [pi/4; pi/3; pi/2; -pi/3; pi/4; -pi/4; 3*pi/4; zeros(7,1); zeros(7,1)];
```

Create the Motion Model

Model the system with computed torque control and error dynamics defined by a moderately fast step response with 5% overshoot.

```
motionModel = jointSpaceMotionModel("RigidBodyTree", robot);
updateErrorDynamicsFromStep(motionModel, .3, .05);
```

Simulate the Robot


Use the derivative function of the model as the input to the `ode45` solver to simulate the behavior over 1 second.

```
[t, robotState] = ode45(@(t, state) derivative(motionModel, state, targetState), tspan, initialState);
```

Plot the Response

Plot the positions of all the joints actuating to their target state. Joints with a higher displacement between the starting position and the target position actuate to the target at a faster rate than those with a lower displacement. This leads to an overshoot, but all of the joints have the same settling time.

```
figure
plot(t, robotState(:, 1:motionModel.NumJoints));
hold all;
plot(t, targetState(1:motionModel.NumJoints)*ones(1, length(t)), "--");
title("Joint Position (Solid) vs Reference (Dashed)");
xlabel("Time (s)");
ylabel("Position (rad)");
```

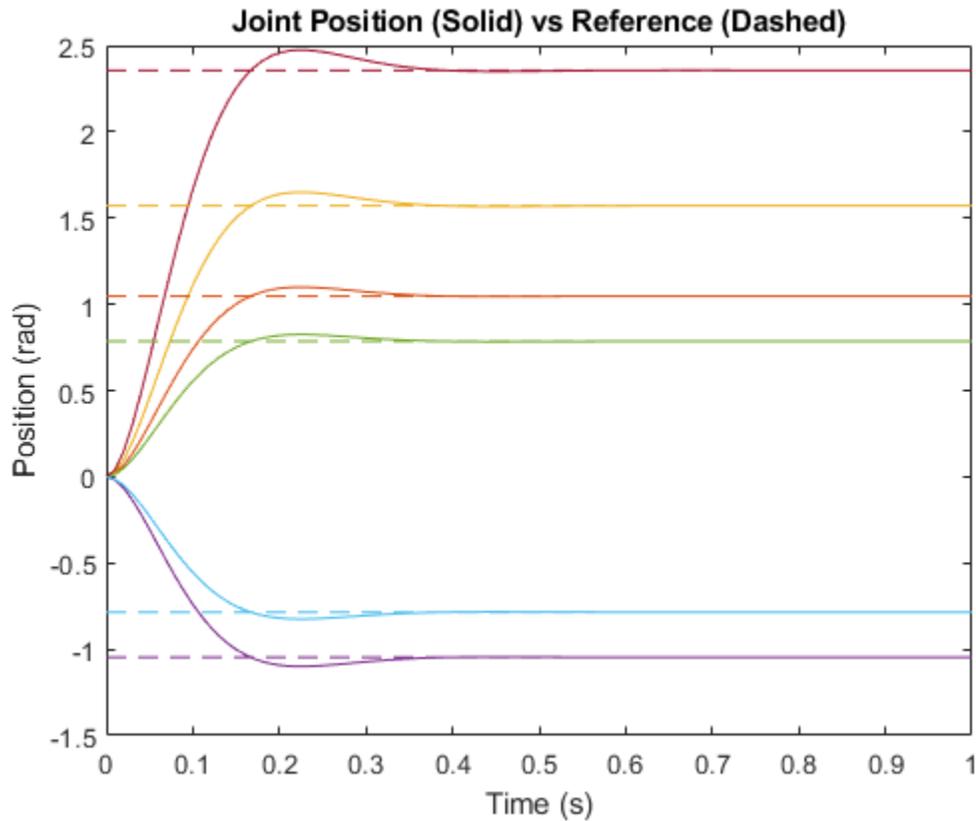

Input Arguments

motionModel — `jointSpaceMotionModel` object

`jointSpaceMotionModel` object

The `jointSpaceMotionModel` object, which defines the properties of the motion model.

settlingTime — Settling time of system

n -element vector

Settling time required to reach a 2% tolerance band in seconds, specified as a scalar or an n -element vector. n is the number of nonfixed joints in the `rigidBodyTree` of the `jointSpaceMotionModel` in the `motionModel` argument.

overshoot — Overshoot of system

n -element vector

The overshoot relative to a unit step, specified as a scalar or an n -element vector. n is the number of nonfixed joints in the `rigidBodyTree` of the `jointSpaceMotionModel` in the `motionModel` argument.

jointIndex — Joint index

scalar

The index of the joint for which `NaturalFrequency` and `DampingRatio` is updated given the unit-step error dynamics. In this case, settling time and overshoot must be specified as scalars.

References

[1] Ogata, Katsuhiko. *Modern Control Engineering* 4th ed. Englewood Cliffs, NJ: Prentice-Hall, 2002.

See Also**Classes**

`jointSpaceMotionModel` | `taskSpaceMotionModel`

Introduced in R2019b

writeBinaryOccupancyGrid

Write values from grid to ROS message

Syntax

```
writeBinaryOccupancyGrid(msg, map)
```

Description

`writeBinaryOccupancyGrid(msg, map)` writes occupancy values and other information to the ROS message, `msg`, from the binary occupancy grid, `map`.

Examples

Write Binary Occupancy Map Information to ROS Message

Create occupancy grid and message. Write the map onto the message.

```
map = binaryOccupancyMap(randi([0,1], 10));  
msg = rosmessage('nav_msgs/OccupancyGrid');  
writeBinaryOccupancyGrid(msg, map);
```

Input Arguments

map — Binary occupancy grid

`binaryOccupancyMap` object handle

Binary occupancy grid, specified as a `binaryOccupancyMap` object handle. `map` is converted to a `'nav_msgs/OccupancyGrid'` message on the ROS network. `map` is an object with a grid of binary values, where 1 indicates an occupied location and 0 indicates an unoccupied location.

msg — 'nav_msgs/OccupancyGrid' ROS message

OccupancyGrid object handle

'nav_msgs/OccupancyGrid' ROS message, specified as a OccupancyGrid object handle.

See Also

binaryOccupancyMap | mobileRobotPRM

Introduced in R2015a

zeros

Create quaternion array with all parts set to zero

Syntax

```
quatZeros = zeros('quaternion')
quatZeros = zeros(n,'quaternion')
quatZeros = zeros(sz,'quaternion')
quatZeros = zeros(sz1,...,szN,'quaternion')

quatZeros = zeros( ____, 'like', prototype, 'quaternion')
```

Description

`quatZeros = zeros('quaternion')` returns a scalar quaternion with all parts set to zero.

`quatZeros = zeros(n,'quaternion')` returns an n-by-n matrix of quaternions.

`quatZeros = zeros(sz,'quaternion')` returns an array of quaternions where the size vector, `sz`, defines `size(quatZeros)`.

`quatZeros = zeros(sz1,...,szN,'quaternion')` returns a `sz1`-by-...-by-`szN` array of quaternions where `sz1,...,szN` indicates the size of each dimension.

`quatZeros = zeros(____, 'like', prototype, 'quaternion')` specifies the underlying class of the returned quaternion array to be the same as the underlying class of the quaternion prototype.

Examples

Quaternion Scalar Zero

Create a quaternion scalar zero.

```
quatZeros = zeros('quaternion')
```

```
quatZeros = quaternion
           0 + 0i + 0j + 0k
```

Square Matrix of Quaternions

Create an n-by-n array of quaternion zeros.

```
n = 3;
quatZeros = zeros(n, 'quaternion')
```

```
quatZeros=3x3 object
           0 + 0i + 0j + 0k           0 + 0i + 0j + 0k           0 + 0i + 0j + 0k
           0 + 0i + 0j + 0k           0 + 0i + 0j + 0k           0 + 0i + 0j + 0k
           0 + 0i + 0j + 0k           0 + 0i + 0j + 0k           0 + 0i + 0j + 0k
```

Multidimensional Array of Quaternion Zeros

Create a multidimensional array of quaternion zeros by defining array dimensions in order. In this example, you create a 3-by-1-by-2 array. You can specify dimensions using a row vector or comma-separated integers.

Specify the dimensions using a row vector and display the results:

```
dims = [3,1,2];
quatZerosSyntax1 = zeros(dims, 'quaternion')
```

```
quatZerosSyntax1 = 3x1x2 quaternion array
quatZerosSyntax1(:,:,1) =
```

```
           0 + 0i + 0j + 0k
           0 + 0i + 0j + 0k
           0 + 0i + 0j + 0k
```

```
quatZerosSyntax1(:,:,2) =
```

```
0 + 0i + 0j + 0k
0 + 0i + 0j + 0k
0 + 0i + 0j + 0k
```

Specify the dimensions using comma-separated integers, and then verify the equivalence of the two syntaxes:

```
quatZerosSyntax2 = zeros(3,1,2,'quaternion');
isequal(quatZerosSyntax1,quatZerosSyntax2)

ans = logical
     1
```

Underlying Class of Quaternion Zeros

A quaternion is a four-part hyper-complex number used in three-dimensional representations. You can specify the underlying data type of the parts as `single` or `double`. The default is `double`.

Create a quaternion array of zeros with the underlying data type set to `single`.

```
quatZeros = zeros(2,'like',single(1),'quaternion')

quatZeros=2×2 object
    0 + 0i + 0j + 0k    0 + 0i + 0j + 0k
    0 + 0i + 0j + 0k    0 + 0i + 0j + 0k
```

Verify the underlying class using the `classUnderlying` function.

```
classUnderlying(quatZeros)

ans =
'single'
```

Input Arguments

n — Size of square quaternion matrix

integer value

Size of square quaternion matrix, specified as an integer value. If n is 0 or negative, then `quatZeros` is returned as an empty matrix.

Example: `zeros(4, 'quaternion')` returns a 4-by-4 matrix of quaternion zeros.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

sz — Output size

row vector of integer values

Output size, specified as a row vector of integer values. Each element of `sz` indicates the size of the corresponding dimension in `quatZeros`. If the size of any dimension is 0 or negative, then `quatZeros` is returned as an empty array.

Example: `zeros([1,4,2], 'quaternion')` returns a 1-by-4-by-2 array of quaternion zeros.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

prototype — Quaternion prototype

variable

Quaternion prototype, specified as a variable.

Example: `zeros(2, 'like', quat, 'quaternion')` returns a 2-by-2 matrix of quaternions with the same underlying class as the prototype quaternion, `quat`.

Data Types: `quaternion`

sz1, ..., szN — Size of each dimension

two or more integer values

Size of each dimension, specified as two or more integers.

- If the size of any dimension is 0, then `quatZeros` is returned as an empty array.
- If the size of any dimension is negative, then it is treated as 0.

Example: `zeros(2,3,'quaternion')` returns a 2-by-3 matrix of quaternion zeros.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `int64` | `uint8` | `uint16` | `uint32` | `uint64`

Output Arguments

quatZeros — Quaternion zeros

scalar | vector | matrix | multidimensional array

Quaternion zeros, returned as a quaternion or array of quaternions.

Given a quaternion of the form $Q = a + bi + cj + dk$, a quaternion zero is defined as $Q = 0 + 0i + 0j + 0k$.

Data Types: `quaternion`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Introduced in R2018a

Methods — Alphabetical List

checkOccupancy

Check occupancy values for locations

Syntax

```
occVal = checkOccupancy(map,xy)
occVal = checkOccupancy(map,xy,"local")
occVal = checkOccupancy(map,ij,"grid")
[occVal,validPts] = checkOccupancy( ___ )
```

```
occMatrix = checkOccupancy(map)
occMatrix = checkOccupancy(map,bottomLeft,matSize)
occMatrix = checkOccupancy(map,bottomLeft,matSize,"local")
occMatrix = checkOccupancy(map,topLeft,matSize,"grid")
```

Description

`occVal = checkOccupancy(map,xy)` returns an array of occupancy values at the `xy` locations in the world frame. Obstacle-free cells return 0, occupied cells return 1. Unknown locations, including outside the map, return -1.

`occVal = checkOccupancy(map,xy,"local")` returns an array of occupancy values at the `xy` locations in the local frame. The local frame is based on the `LocalOriginInWorld` property of the map.

`occVal = checkOccupancy(map,ij,"grid")` specifies `ij` grid cell indices instead of `xy` locations. Grid indices start at (1,1) from the top left corner.

`[occVal,validPts] = checkOccupancy(___)` also outputs an `n`-element vector of logical values indicating whether input coordinates are within the map limits.

`occMatrix = checkOccupancy(map)` returns a matrix that contains the occupancy status of each location. Obstacle-free cells return 0, occupied cells return 1. Unknown locations, including outside the map, return -1.

`occMatrix = checkOccupancy(map, bottomLeft, matSize)` returns a matrix of occupancy values by specifying the bottom-left corner location in world coordinates and the matrix size in meters.

`occMatrix = checkOccupancy(map, bottomLeft, matSize, "local")` returns a matrix of occupancy values by specifying the bottom-left corner location in local coordinates and the matrix size in meters.

`occMatrix = checkOccupancy(map, topLeft, matSize, "grid")` returns a matrix of occupancy values by specifying the top-left cell index in grid coordinates and the matrix size.


Examples

Get Occupancy Values and Check Occupancy Status

Access occupancy values and check their occupancy status based on the occupied and free thresholds of the `occupancyMap` object.

Create a matrix and populate it with values. Use this matrix to create an occupancy map.

```
p = zeros(20,20);  
p(11:20,11:20) = ones(10,10);  
map = binaryOccupancyMap(p,10);  
show(map)
```

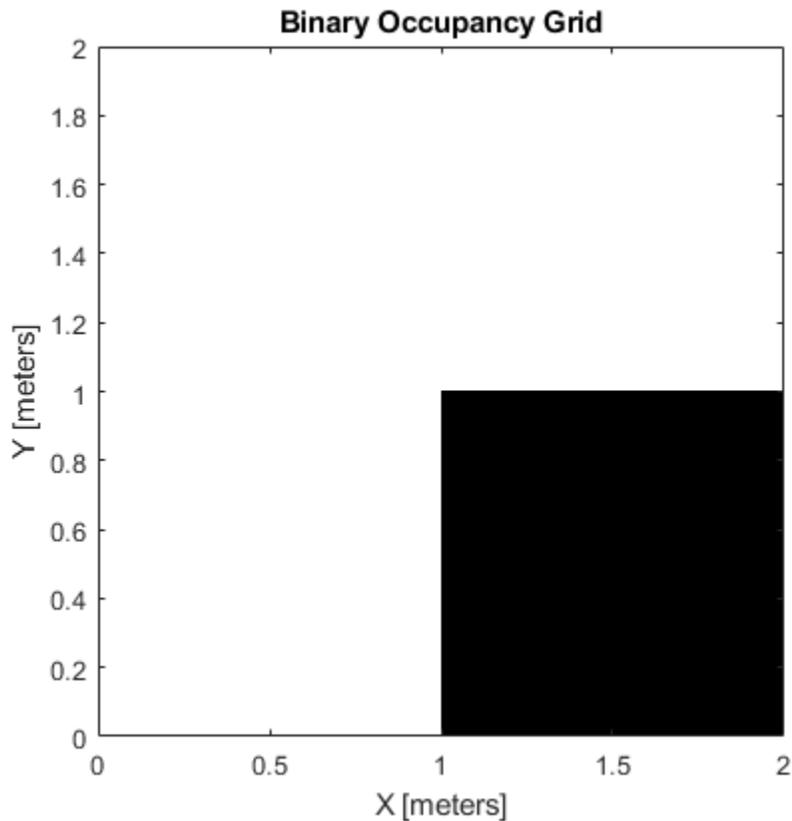

Get the occupancy of different locations and check their occupancy statuses. The occupancy status returns 0 for free space and 1 for occupied space. Unknown values return -1.

```
pocc = getOccupancy(map, [1.5 1]);  
occupied = checkOccupancy(map, [1.5 1]);  
pocc2 = getOccupancy(map, [5 5], 'grid');
```

Input Arguments

map — Map representation
binaryOccupancyMap object

Map representation, specified as a `binaryOccupancyMap` object.

xy — Coordinates in the map

n-by-2 matrix

Coordinates in the map, specified as an *n*-by-2 matrix of [*x y*] pairs, where *n* is the number of coordinates. Coordinates can be world or local coordinates depending on the syntax.

Data Types: double

ij — Grid locations in the map

n-by-2 matrix

Grid locations in the map, specified as an *n*-by-2 matrix of [*i j*] pairs, where *n* is the number of locations. Grid locations are given as [*row col*].

Data Types: double

bottomLeft — Location of output matrix in world or local

two-element vector | [*xCoord yCoord*]

Location of bottom left corner of output matrix in world or local coordinates, specified as a two-element vector, [*xCoord yCoord*]. Location is in world or local coordinates based on syntax.

Data Types: double

matSize — Output matrix size

two-element vector | [*xLength yLength*] | [*gridRow gridCol*]

Output matrix size, specified as a two-element vector, [*xLength yLength*], or [*gridRow gridCol*]. Size is in world, local, or grid coordinates based on syntax.

Data Types: double

topLeft — Location of grid

two-element vector | [*iCoord jCoord*]

Location of top left corner of grid, specified as a two-element vector, [*iCoord jCoord*].

Data Types: double

Output Arguments

occVal — Occupancy values

n-by-1 column vector

Occupancy values, returned as an *n*-by-1 column vector equal in length to *xy* or *ij* input. Occupancy values can be obstacle free (0), occupied (1), or unknown (-1).

validPts — Valid map locations

n-by-1 column vector

Valid map locations, returned as an *n*-by-1 column vector equal in length to *xy* or *ij*. Locations inside the map return a value of 1. Locations outside the map limits return a value of 0.

occMatrix — Matrix of occupancy values

matrix

Matrix of occupancy values, returned as matrix with size equal to `matSize` or the size of your map. Occupancy values can be obstacle free (0), occupied (1), or unknown (-1).

See Also

`binaryOccupancyMap` | `getOccupancy` | `occupancyMap`

Introduced in R2019b

getOccupancy

Get occupancy value of locations

Syntax

```
occVal = getOccupancy(map, xy)
occVal = getOccupancy(map, xy, "local")
occVal = getOccupancy(map, ij, "grid")
[occVal, validPts] = getOccupancy( ___ )

occMatrix = getOccupancy(map)
occMatrix = getOccupancy(map, bottomLeft, matSize)
occMatrix = getOccupancy(map, bottomLeft, matSize, "local")
occMatrix = getOccupancy(map, topLeft, matSize, "grid")
```

Description

`occVal = getOccupancy(map, xy)` returns an array of occupancy values at the `xy` locations in the world frame. Unknown locations, including outside the map, return `map.DefaultValue`.

`occVal = getOccupancy(map, xy, "local")` returns an array of occupancy values at the `xy` locations in the local frame.

`occVal = getOccupancy(map, ij, "grid")` specifies `ij` grid cell indices instead of `xy` locations.

`[occVal, validPts] = getOccupancy(___)` additionally outputs an `n`-element vector of logical values indicating whether input coordinates are within the map limits.

`occMatrix = getOccupancy(map)` returns all occupancy values in the map as a matrix.

`occMatrix = getOccupancy(map, bottomLeft, matSize)` returns a matrix of occupancy values by specifying the bottom-left corner location in world coordinates and the matrix size in meters.

`occMatrix = getOccupancy(map, bottomLeft, matSize, "local")` returns a matrix of occupancy values by specifying the bottom-left corner location in local coordinates and the matrix size in meters.

`occMatrix = getOccupancy(map, topLeft, matSize, "grid")` returns a matrix of occupancy values by specifying the top-left cell index in grid indices and the matrix size.

Examples

Insert Laser Scans into Binary Occupancy Map

Create an empty binary occupancy grid map.

```
map = binaryOccupancyMap(10,10,20);
```

Input pose of the vehicle, ranges, angles, and the maximum range of the laser scan.

```
pose = [5,5,0];  
ranges = 3*ones(100,1);  
angles = linspace(-pi/2,pi/2,100);  
maxrange = 20;
```

Create a `lidarScan` object with the specified ranges and angles.


```
scan = lidarScan(ranges,angles);
```

Insert the laser scan data into the occupancy map.

```
insertRay(map,pose,scan,maxrange);
```

Show the map to see the results of inserting the laser scan.

```
show(map)
```

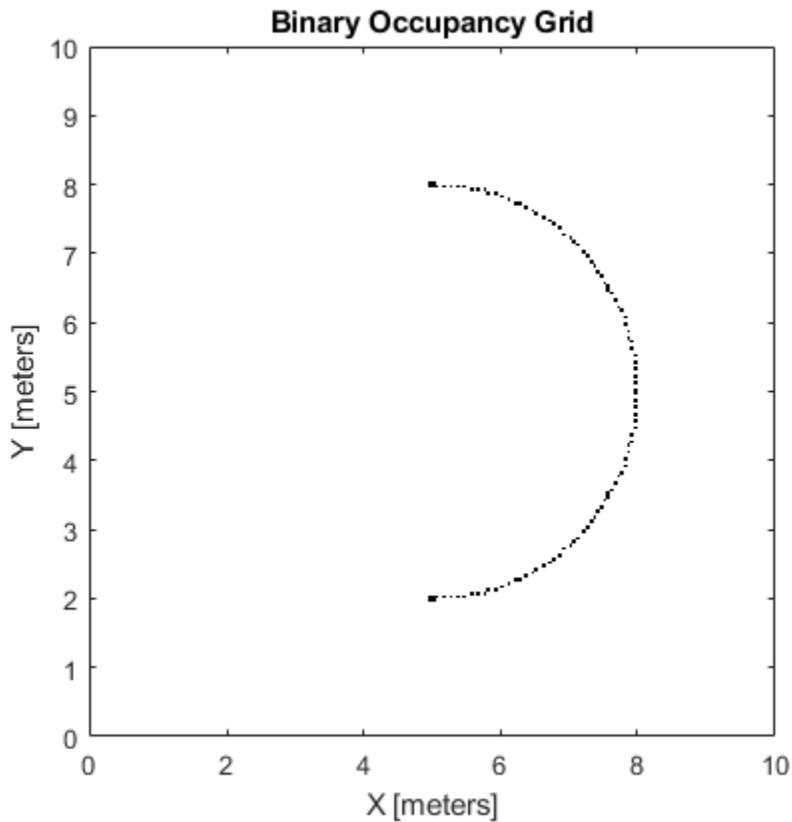

Check the occupancy of the spot directly in front of the vehicle.

```
getOccupancy(map, [8 5])
```


```
ans = logical  
     1
```

Get Occupancy Values and Check Occupancy Status

Access occupancy values and check their occupancy status based on the occupied and free thresholds of the occupancyMap object.

Create a matrix and populate it with values. Use this matrix to create an occupancy map.

```
p = zeros(20,20);  
p(11:20,11:20) = ones(10,10);  
map = binaryOccupancyMap(p,10);  
show(map)
```

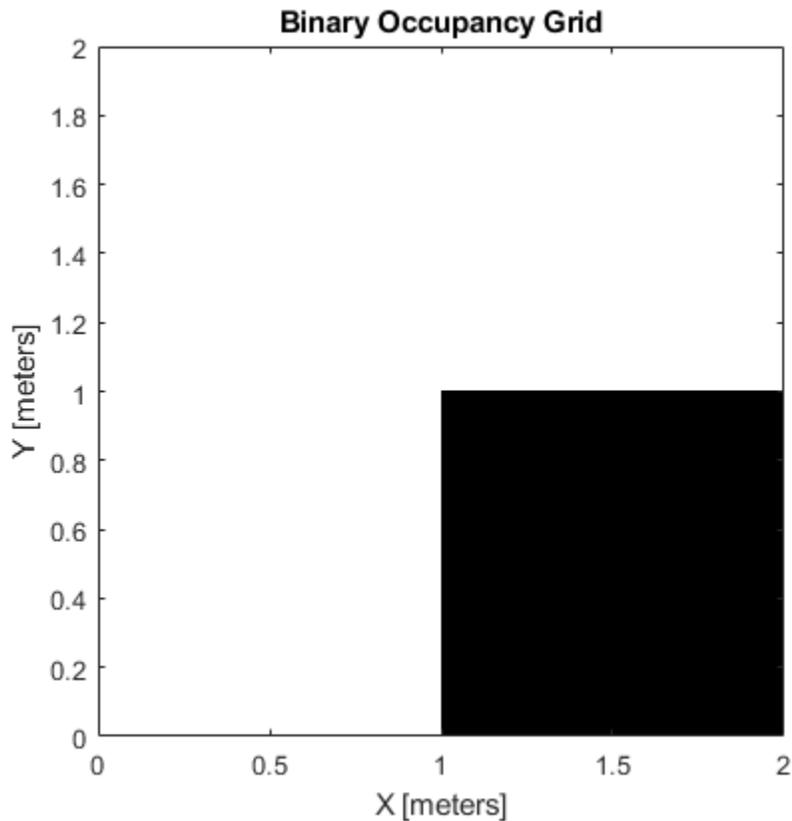

Get the occupancy of different locations and check their occupancy statuses. The occupancy status returns 0 for free space and 1 for occupied space. Unknown values return -1.

```
pocc = getOccupancy(map,[1.5 1]);  
occupied = checkOccupancy(map,[1.5 1]);  
pocc2 = getOccupancy(map,[5 5], 'grid');
```

Input Arguments

map — Map representation

`binaryOccupancyMap` object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the vehicle.

xy — Coordinates in the map

n -by-2 matrix

Coordinates in the map, specified as an n -by-2 matrix of $[x \ y]$ pairs, where n is the number of coordinates. Coordinates can be world or local coordinates depending on the syntax.

Data Types: `double`

ij — Grid locations in the map

n -by-2 matrix

Grid locations in the map, specified as an n -by-2 matrix of $[i \ j]$ pairs, where n is the number of locations. Grid locations are given as `[row col]`.

Data Types: `double`

bottomLeft — Location of output matrix in world or local

two-element vector | `[xCoord yCoord]`

Location of bottom left corner of output matrix in world or local coordinates, specified as a two-element vector, `[xCoord yCoord]`. Location is in world or local coordinates based on syntax.

Data Types: `double`

matSize — Output matrix size

two-element vector | `[xLength yLength]` | `[gridRow gridCol]`

Output matrix size, specified as a two-element vector, `[xLength yLength]` or `[gridRow gridCol]`. The size is in world coordinates, local coordinates, or grid indices based on syntax.

Data Types: `double`

topLeft — Location of grid

two-element vector | [iCoord jCoord]

Location of top left corner of grid, specified as a two-element vector, [iCoord jCoord].

Data Types: double

Output Arguments

occVal — Occupancy values

n-by-1 column vector

Occupancy values, returned as an *n*-by-1 column vector equal in length to *xy* or *ij*. Occupancy values can be obstacle free (0) or occupied (1).

validPts — Valid map locations

n-by-1 column vector

Valid map locations, returned as an *n*-by-1 column vector equal in length to *xy* or *ij*. Locations inside the map return a value of 1. Locations outside the map limits return a value of 0.

occMatrix — Matrix of occupancy values

matrix

Matrix of occupancy values, returned as matrix with size equal to *matSize* or the size of *map*.

See Also

`binaryOccupancyMap` | `setOccupancy`

Topics

“Occupancy Grids”

Introduced in R2015a

grid2local

Convert grid indices to local coordinates

Syntax

```
xy = grid2local(map,ij)
```

Description

`xy = grid2local(map,ij)` converts a `[row col]` array of grid indices, `ij`, to an array of local coordinates, `xy`.

Input Arguments

map — Map representation

binaryOccupancyMap object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the robot. The object contains a matrix grid with binary values indicating obstacles as `true` (1) and free locations as `false` (0).

ij — Grid positions

n-by-2 vertical array

Grid positions, specified as an *n-by-2* vertical array of `[i j]` pairs in `[rows cols]` format, where *n* is the number of grid positions.

Output Arguments

xy — Local coordinates

n-by-2 vertical array

Local coordinates, specified as an *n-by-2* vertical array of `[x y]` pairs, where *n* is the number of local coordinates.

See Also

`binaryOccupancyMap` | `world2grid`

Introduced in R2019b

grid2world

Convert grid indices to world coordinates

Syntax

```
xy = grid2world(map,ij)
```

Description

`xy = grid2world(map,ij)` converts a `[row col]` array of grid indices, `ij`, to an array of world coordinates, `xy`.

Input Arguments

map — Map representation

binaryOccupancyMap object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the robot. The object contains a matrix grid with binary values indicating obstacles as `true` (1) and free locations as `false` (0).

ij — Grid positions

n-by-2 vertical array

Grid positions, specified as an *n-by-2* vertical array of `[i j]` pairs in `[rows cols]` format, where *n* is the number of grid positions.

Output Arguments

xy — World coordinates

n-by-2 vertical array

World coordinates, specified as an *n-by-2* vertical array of `[x y]` pairs, where *n* is the number of world coordinates.

See Also

`binaryOccupancyMap` | `grid2local` | `world2grid`

Introduced in R2015a

inflate

Inflate each occupied grid location

Syntax

```
inflate(map,radius)
inflate(map,gridradius,'grid')
```

Description

`inflate(map,radius)` inflates each occupied position of the map by the radius given in meters. `radius` is rounded up to the nearest cell equivalent based on the resolution of the map. Every cell within the radius is set to `true` (1).

`inflate(map,gridradius,'grid')` inflates each occupied position by the radius given in number of cells.

Examples

Create and Modify Binary Occupancy Grid


Create a 10m x 10m empty map.

```
map = binaryOccupancyMap(10,10,10);
```

Set occupancy of world locations and show map.


```
x = [1.2; 2.3; 3.4; 4.5; 5.6];
y = [5.0; 4.0; 3.0; 2.0; 1.0];

setOccupancy(map, [x y], ones(5,1))
figure
show(map)
```

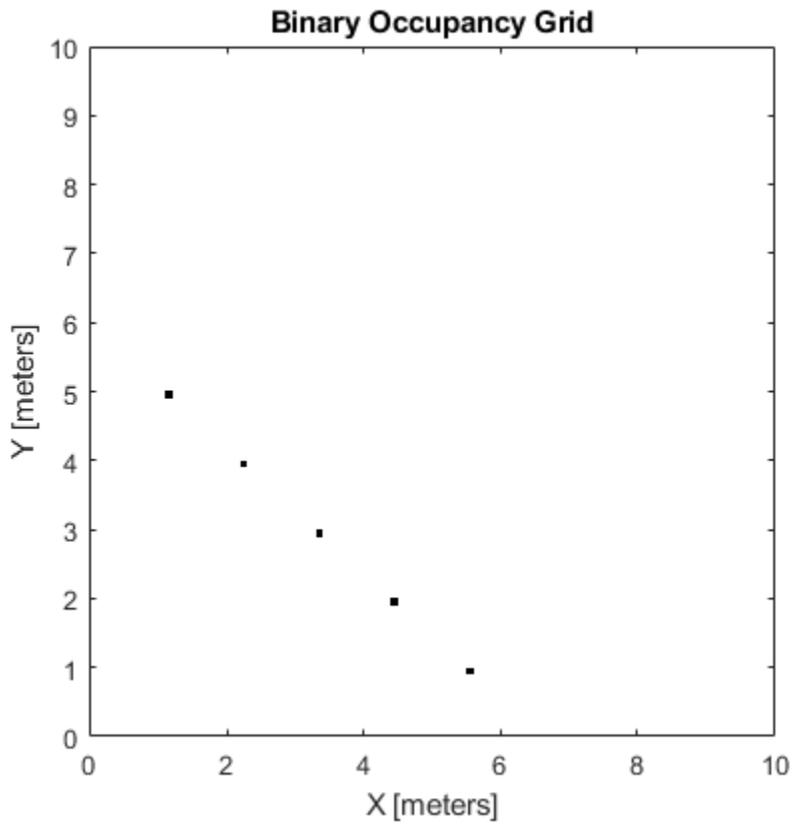

Inflate occupied locations by a given radius.

```
inflate(map, 0.5)  
figure  
show(map)
```

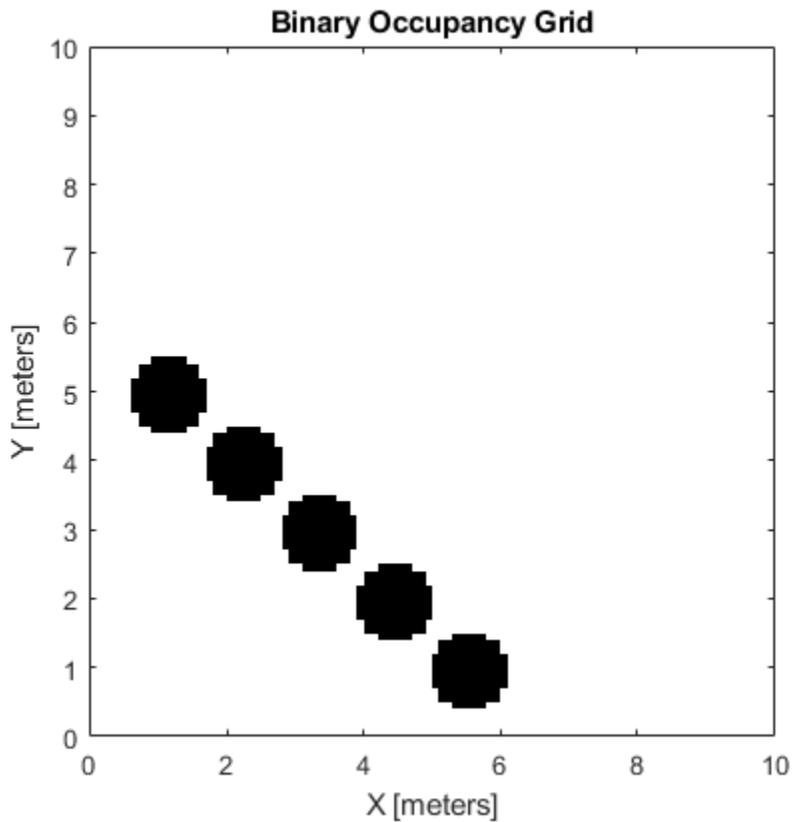

Get grid locations from world locations.


```
ij = world2grid(map, [x y]);
```

Set grid locations to free locations.

```
setOccupancy(map, ij, zeros(5,1), 'grid')
```

```
figure
```

```
show(map)
```

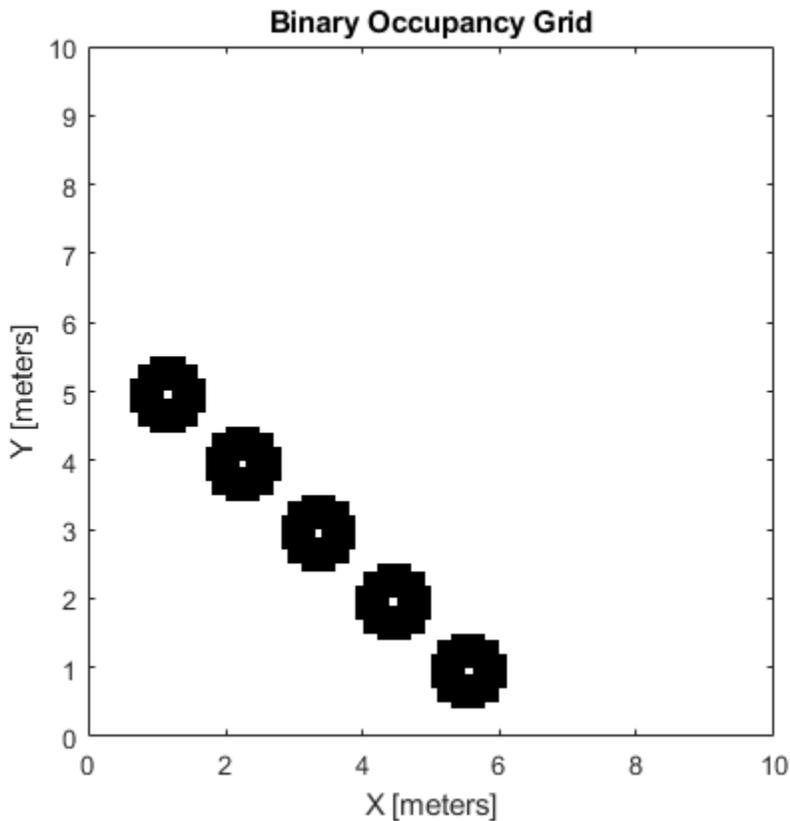

Input Arguments

map — Map representation

`binaryOccupancyMap` object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the robot. The object contains a matrix grid with binary values indicating obstacles as `true` (1) and free locations as `false` (0).

radius — Dimension that defines how much to inflate occupied locations

scalar

Dimension that defines how much to inflate occupied locations, specified as a scalar. `radius` is rounded up to the nearest cell value.

Data Types: `double`

`gridradius` — Dimension the defines how much to inflate occupied locations

positive scalar

Dimension that defines how much to inflate occupied locations, specified as a positive scalar. `gridradius` is the number of cells to inflate the occupied locations.

Data Types: `double`

See Also

`binaryOccupancyMap` | `setOccupancy`

Topics

“Occupancy Grids”

Introduced in R2015a

insertRay

Insert ray from laser scan observation

Syntax

```
insertRay(map, pose, scan, maxrange)
insertRay(map, pose, ranges, angles, maxrange)
insertRay(map, startpt, endpoints)
```

Description

`insertRay(map, pose, scan, maxrange)` inserts one or more lidar scan sensor observations in the occupancy grid, `map`, using the input `lidarScan` object, `scan`, to get ray endpoints. End point locations are updated with an occupied value. If the ranges are above `maxrange`, the ray endpoints are considered free space. All other points along the ray are treated as obstacle-free.

`insertRay(map, pose, ranges, angles, maxrange)` specifies the range readings as vectors defined by the input `ranges` and `angles`.

`insertRay(map, startpt, endpoints)` inserts observations between the line segments from the start point to the end points. The endpoints are updated as occupied space and other points along the line segments are updated as free space.

Examples

Insert Laser Scans into Binary Occupancy Map

Create an empty binary occupancy grid map.

```
map = binaryOccupancyMap(10, 10, 20);
```

Input pose of the vehicle, `ranges`, `angles`, and the maximum range of the laser scan.

```
pose = [5,5,0];  
ranges = 3*ones(100,1);  
angles = linspace(-pi/2,pi/2,100);  
maxrange = 20;
```

Create a `lidarScan` object with the specified ranges and angles.


```
scan = lidarScan(ranges,angles);
```

Insert the laser scan data into the occupancy map.

```
insertRay(map,pose,scan,maxrange);
```

Show the map to see the results of inserting the laser scan.

```
show(map)
```

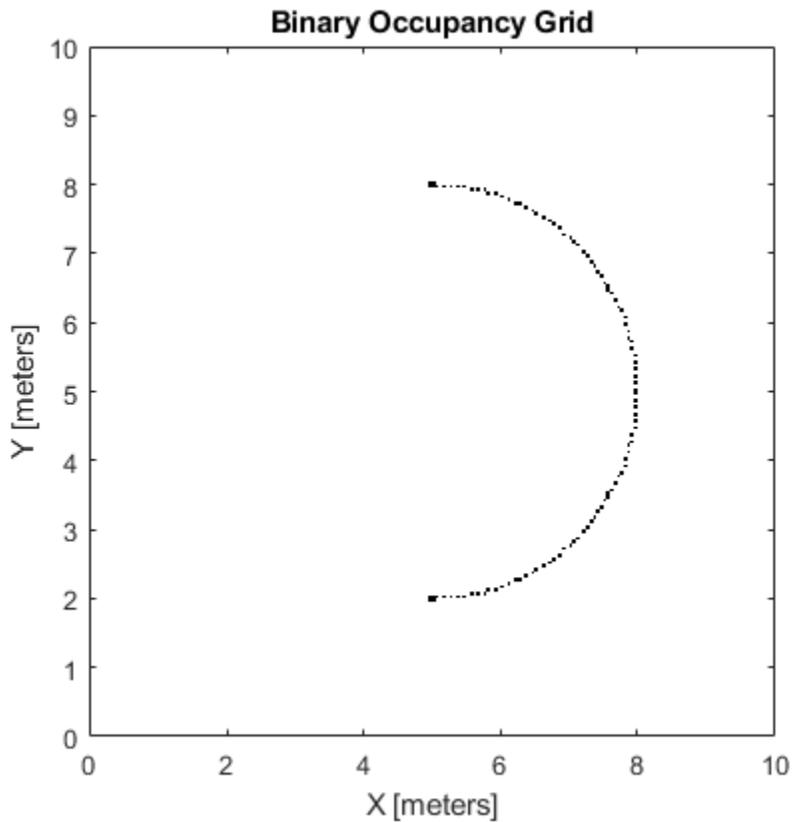

Check the occupancy of the spot directly in front of the vehicle.

```
getOccupancy(map, [8 5])
```

```
ans = logical  
     1
```

Input Arguments

map — Map representation

binaryOccupancyMap object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the robot. The object contains a matrix grid with binary values indicating obstacles as `true` (1) and free locations as `false` (0).

pose — Position and orientation of vehicle

three-element vector

Position and orientation of vehicle, specified as an $[x \ y \ \theta]$ vector. The vehicle pose is an x and y position with angular orientation θ (in radians) measured from the x -axis.

scan — Lidar scan readings

`lidarScan` object

Lidar scan readings, specified as a `lidarScan` object.

ranges — Range values from scan data

vector

Range values from scan data, specified as a vector of elements measured in meters. These range values are distances from a sensor at given angles. The vector must be the same length as the corresponding `angles` vector.

angles — Angle values from scan data

vector

Angle values from scan data, specified as a vector of elements measured in radians. These angle values correspond to the given `ranges`. The vector must be the same length as the corresponding `ranges` vector.

maxrange — Maximum range of sensor

scalar

Maximum range of laser range sensor, specified as a scalar in meters. Range values greater than or equal to `maxrange` are considered free along the whole length of the ray, up to `maxrange`.

startpt — Start point for rays

two-element vector

Start point for rays, specified as a two-element vector, $[x \ y]$, in the world coordinate frame. All rays are line segments that originate at this point.

endpoints — Endpoints for rays

n-by-2 matrix

Endpoints for rays, specified as an *n*-by-2 matrix of [x y] pairs in the world coordinate frame, where *n* is the length of `ranges` or `angles`. All rays are line segments that originate at `startpt`.

See Also

`binaryOccupancyMap` | `lidarScan` | `lidarScan` | `occupancyMap`

Topics

“Occupancy Grids”

Introduced in R2019b

local2grid

Convert local coordinates to grid indices

Syntax

```
ij = local2grid(map,xy)
```

Description

`ij = local2grid(map,xy)` converts an array of local coordinates, `xy`, to an array of grid indices, `ij` in `[row col]` format.

Input Arguments

map — Map representation

`binaryOccupancyMap` object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the vehicle.

xy — Local coordinates

`n-by-2` matrix

Local coordinates, specified as an `n-by-2` matrix of `[x y]` pairs, where `n` is the number of local coordinates.

Data Types: `double`

Output Arguments

ij — Grid positions

`n-by-2` matrix

Grid positions, returned as an n -by-2 matrix of $[i\ j]$ pairs in $[row\ col]$ format, where n is the number of grid positions. The grid cell locations are counted from the top left corner of the grid.

Data Types: `double`

See Also

`binaryOccupancyMap` | `grid2local` | `grid2local` | `occupancyMap`

Topics

“Occupancy Grids”

Introduced in R2019b

local2world

Convert local coordinates to world coordinates

Syntax

```
xyWorld = local2world(map, xy)
```

Description

`xyWorld = local2world(map, xy)` converts an array of local coordinates to world coordinates.

Input Arguments

map — Map representation

binaryOccupancyMap object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the vehicle.

xy — Local coordinates

n-by-2 matrix

Local coordinates, specified as an *n*-by-2 matrix of $[x \ y]$ pairs, where *n* is the number of local coordinates.

Data Types: double

Output Arguments

xyWorld — World coordinates

n-by-2 matrix

World coordinates, specified as an n -by-2 matrix of $[x \ y]$ pairs, where n is the number of world coordinates.

Data Types: double

See Also

[binaryOccupancyMap](#) | [grid2world](#) | [occupancyMap](#) | [world2local](#)

Topics

“Occupancy Grids”

Introduced in R2019b

move

Move map in world frame

Syntax

```
move(map,moveValue)  
move(map,moveValue,Name,Value)
```

Description

`move(map,moveValue)` moves the local origin of the map to an absolute location, `moveValue`, in the world frame, and updates the map limits. Move values are truncated based on the resolution of the map. By default, newly revealed regions are set to `map.DefaultValue`.

`move(map,moveValue,Name,Value)` specifies additional options specified by one or more name-value pair arguments.


Examples

Move Local Map and Sync with World Map

This example shows how to move a local egocentric map and sync it with a larger world map. This process emulates a vehicle driving in an environment and getting updates on obstacles in the new areas.


Load example maps. Create a binary occupancy map from the `complexMap`.

```
load exampleMaps.mat  
map = binaryOccupancyMap(complexMap);  
show(map)
```

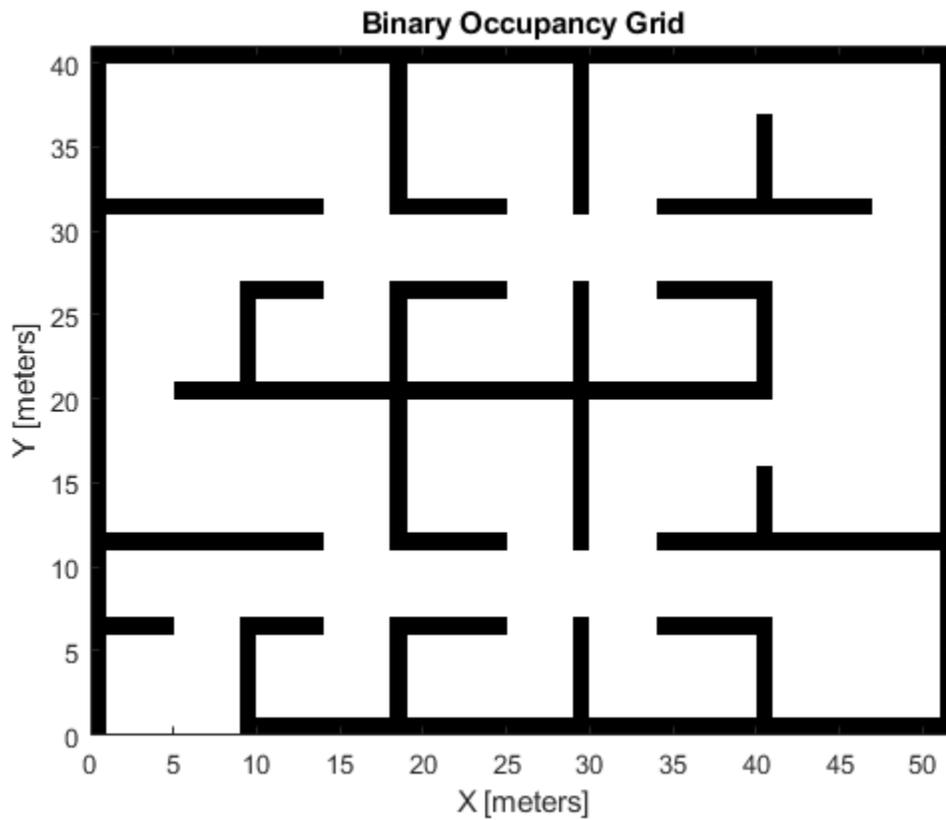

Create a smaller local map.


```
mapLocal = binaryOccupancyMap(complexMap(end-20:end,1:20));  
show(mapLocal)
```

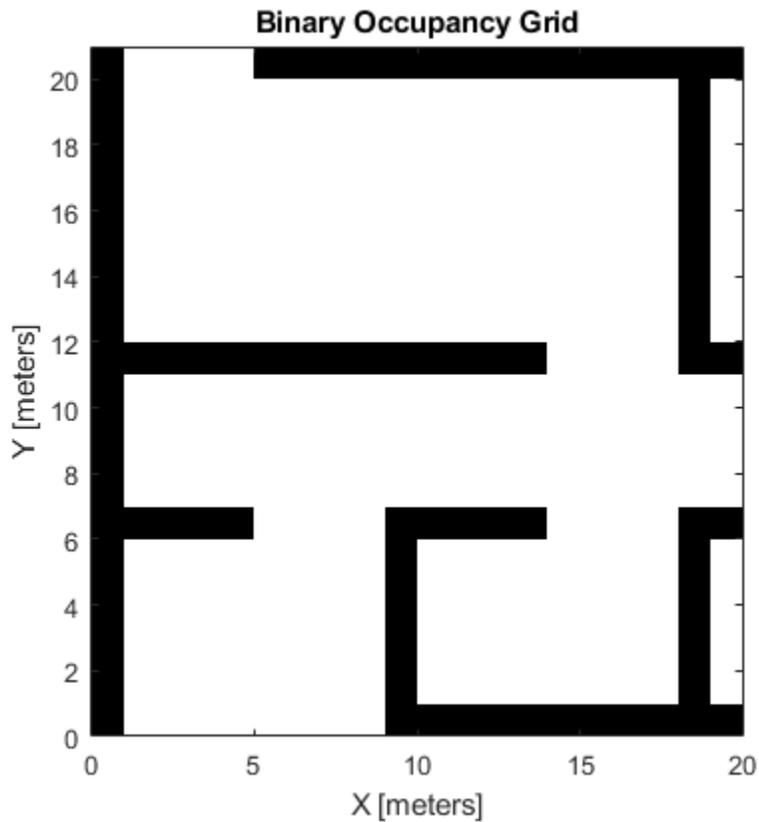

Follow a path planned in the world map and update the local map as you move your local frame.

Specify path locations and plot on the map.

```
path = [5 2
        8 2
        8 8
        30 8];
show(map)
hold on
plot(path(:,1),path(:,2))
hold off
```

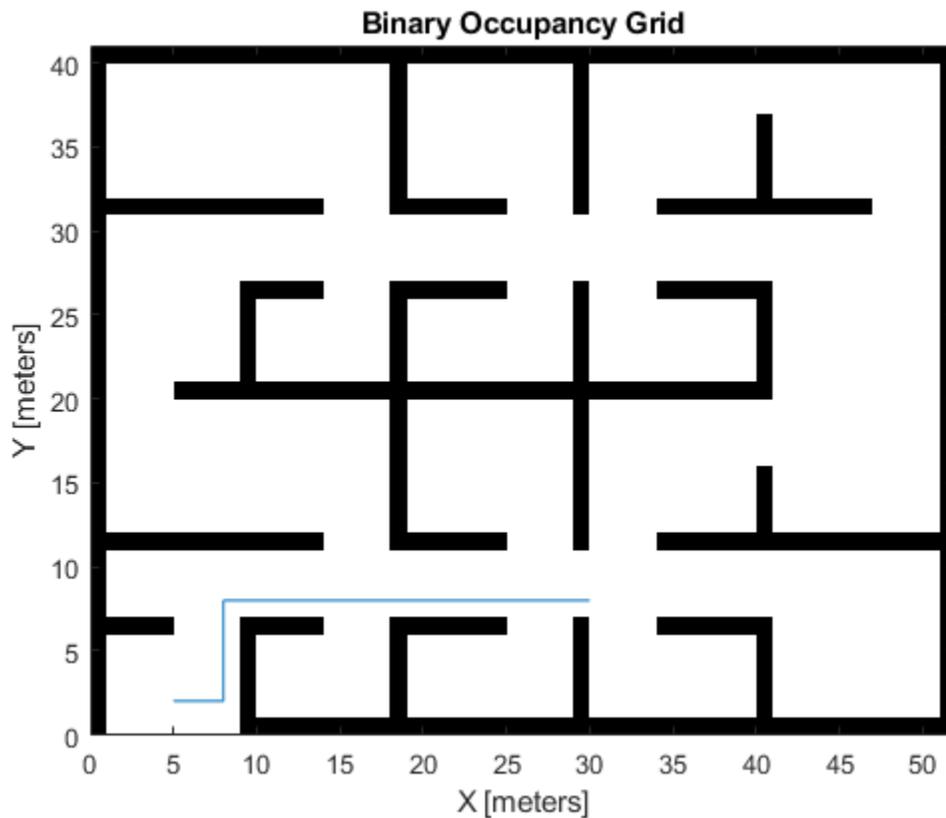


Create a loop for moving between points by the map resolution. Divide the difference between points by the map resolution to see how many incremental moves you can make.

```
for i = 1:length(path)-1
    moveAmount = (path(i+1,:)-path(i,:))/map.Resolution;
    for j = 1:abs(moveAmount(1)+moveAmount(2))
        moveValue = sign(moveAmount).*map.Resolution;
        move(mapLocal,moveValue, ...
            "MoveType", "relative", "SyncWith", map)

        show(mapLocal)
        drawnow limitrate
        pause(0.2)
    end
end
```

end
end

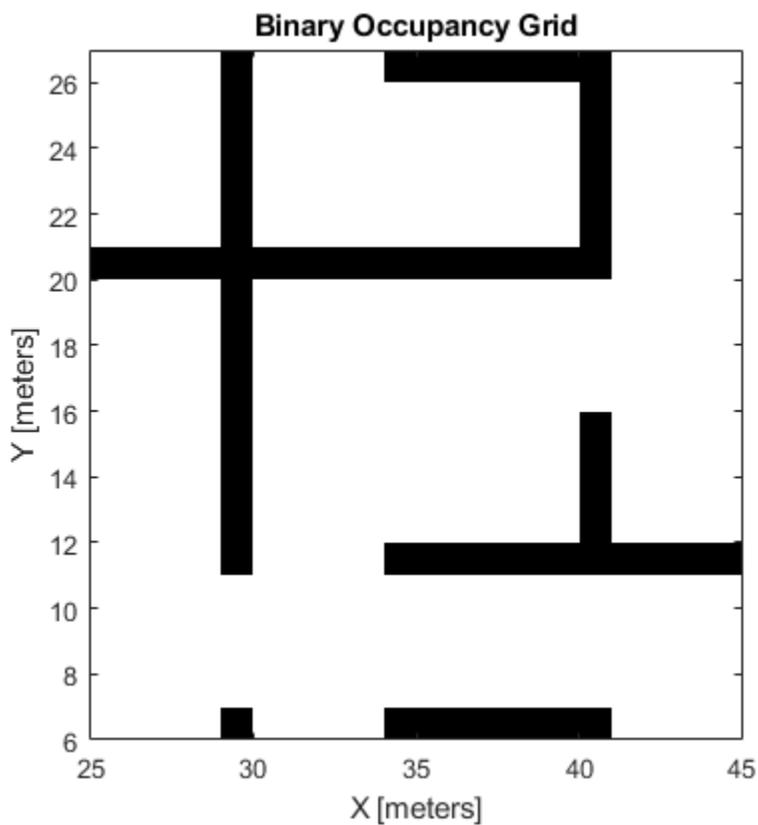

Input Arguments

map — Map representation

`binaryOccupancyMap` object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the vehicle.

moveValue — Local map origin move value

[x y] vector

Local map origin move value, specified as an [x y] vector. By default, the value is an absolute location to move the local origin to in the world frame. Use the `MoveType` name-value pair to specify a relative move.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Example: `'MoveType', 'relative'`

MoveType — Type of move

'absolute' (default) | 'relative'

Type of move, specified as 'absolute' or 'relative'. For relative moves, specify a relative [x y] vector for `moveValue` based on your current local frame.

FillValue — Fill value for revealed locations

0 (default) | 1

Fill value for revealed locations because of the shifted map limits, specified as 0 or 1.

SyncWith — Secondary map to sync with

`binaryOccupancyMap` object

Secondary map to sync with, specified as a `binaryOccupancyMap` object. Any revealed locations based on the move are updated with values in this map using the world coordinates.

See Also

`binaryOccupancyMap` | `occupancyMap` | `occupancyMatrix`

Introduced in R2019b

occupancyMatrix

Convert occupancy grid to matrix

Syntax

```
mat = binaryOccupancyMatrix(map)
```

Description

`mat = binaryOccupancyMatrix(map)` returns occupancy values stored in the occupancy grid object as a matrix.

Input Arguments

map — Map representation

`binaryOccupancyMap` object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the robot. The object contains a matrix grid with binary values indicating obstacles as `true` (1) and free locations as `false` (0).

Output Arguments

mat — Occupancy values

matrix

Occupancy values, returned as an h -by- w matrix, where h and w are defined by the two elements of the `GridSize` property of the occupancy grid object.

Data Types: `double`

See Also

binaryOccupancyMap | occupancyMap

Topics

“Occupancy Grids”

Introduced in R2016b

raycast

Compute cell indices along a ray

Syntax

```
[endpoints,midpoints] = raycast(map,pose,range,angle)
[endpoints,midpoints] = raycast(map,p1,p2)
```

Description

`[endpoints,midpoints] = raycast(map,pose,range,angle)` returns cell indices of the specified map for all cells traversed by a ray originating from the specified `pose` at the specified `angle` and `range` values. `endpoints` contains all indices touched by the end of the ray, with all other points included in `midpoints`.

`[endpoints,midpoints] = raycast(map,p1,p2)` returns the cell indices of the line segment between the two specified points.

Input Arguments

map — Map representation

`binaryOccupancyMap` object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the robot. The object contains a matrix grid with binary values indicating obstacles as `true` (1) and free locations as `false` (0).

pose — Position and orientation of sensor

three-element vector

Position and orientation of sensor, specified as an `[x y theta]` vector. The sensor pose is an `x` and `y` position with angular orientation `theta` (in radians) measured from the `x`-axis.

range — Range of ray

scalar

Range of ray, specified as a scalar in meters.

angle — Angle of ray

scalar

Angle of ray, specified as a scalar in radians. The angle value is for the corresponding range.

p1 — Starting point of ray

two-element vector

Starting point of ray, specified as an $[x \ y]$ two-element vector. Points are defined with respect to the world-frame.

p2 — Endpoint of ray

two-element vector

Endpoint of ray, specified as an $[x \ y]$ two-element vector. Points are defined with respect to the world-frame.

Output Arguments

endpoints — Endpoint grid indices

n -by-2 matrix

Endpoint indices, returned as an n -by-2 matrix of $[i \ j]$ pairs, where n is the number of grid indices. The endpoints are where the `range` value hits at the specified `angle`. Multiple indices are returned when the endpoint lies on the boundary of multiple cells.

midpoints — Midpoint grid indices

n -by-2 matrix

Midpoint indices, returned as an n -by-2 matrix of $[i \ j]$ pairs, where n is the number of grid indices. This argument includes all grid indices the ray intersects, excluding the endpoint.

See Also

`binaryOccupancyMap` | `insertRay` | `occupancyMap`

Introduced in R2019b

rayIntersection

Find intersection points of rays and occupied map cells

Syntax

```
intersectionPts = rayIntersection(map,pose,angles,maxrange)
```

Description


`intersectionPts = rayIntersection(map,pose,angles,maxrange)` returns intersection points of rays and occupied cells in the specified map. Rays emanate from the specified pose and angles. Intersection points are returned in the world coordinate frame. If there is no intersection up to the specified maxrange, [NaN NaN] is returned.

Examples

Get Ray Intersection Points on Occupancy Map

Create a binary occupancy grid map. Add obstacles and inflate them. A lower resolution map is used to illustrate the importance of the size of your grid cells. Show the map.

```
map = binaryOccupancyMap(10,10,2);  
obstacles = [4 10; 3 5; 7 7];  
setOccupancy(map,obstacles,ones(length(obstacles),1))  
inflate(map,0.25)  
show(map)
```

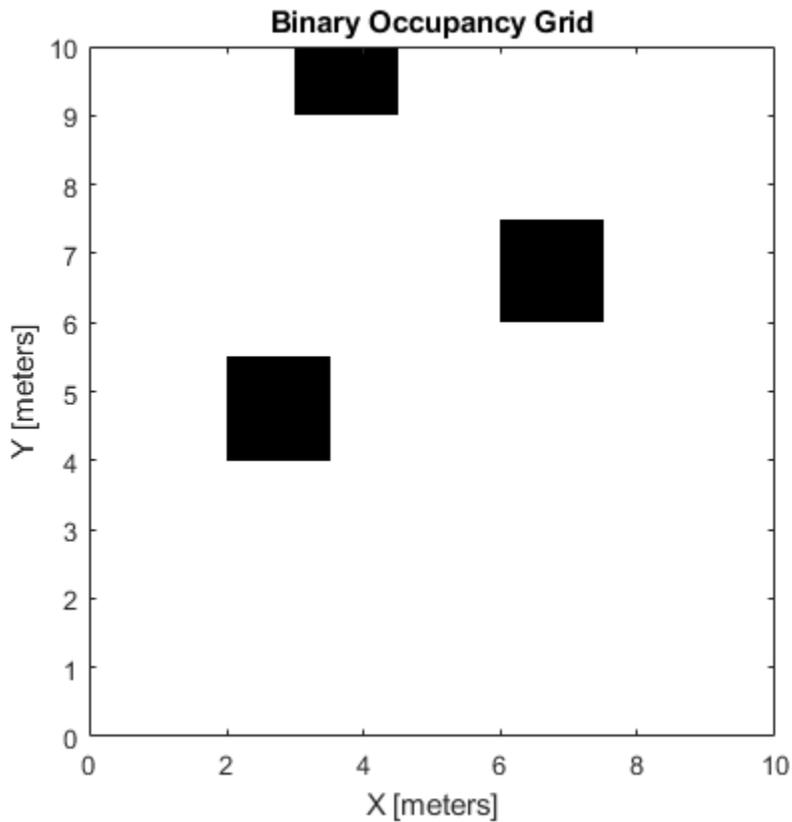

Find the intersection points of occupied cells and rays that emit from the given vehicle pose. Specify the max range and angles for these rays. The last ray does not intersect with an obstacle within the max range, so it has no collision point.

```
maxrange = 6;
angles = [pi/4, -pi/4, 0, -pi/8];
vehiclePose = [4, 4, pi/2];
intsectionPts = rayIntersection(map, vehiclePose, angles, maxrange)
```

```
intsectionPts = 4x2

    3.5000    4.5000
    6.0000    6.0000
    4.0000    9.0000
```


NaN NaN

Plot the intersection points and rays from the pose.

```

hold on
plot(intsectionPts(:,1),intsectionPts(:,2),'*r') % Intersection points
plot(vehiclePose(1),vehiclePose(2),'ob') % Vehicle pose
for i = 1:3
    plot([vehiclePose(1),intsectionPts(i,1)],...
         [vehiclePose(2),intsectionPts(i,2)],'-b') % Plot intersecting rays
end
plot([vehiclePose(1),vehiclePose(1)-6*sin(angles(4))],...
     [vehiclePose(2),vehiclePose(2)+6*cos(angles(4))],'-b') % No intersection ray

```

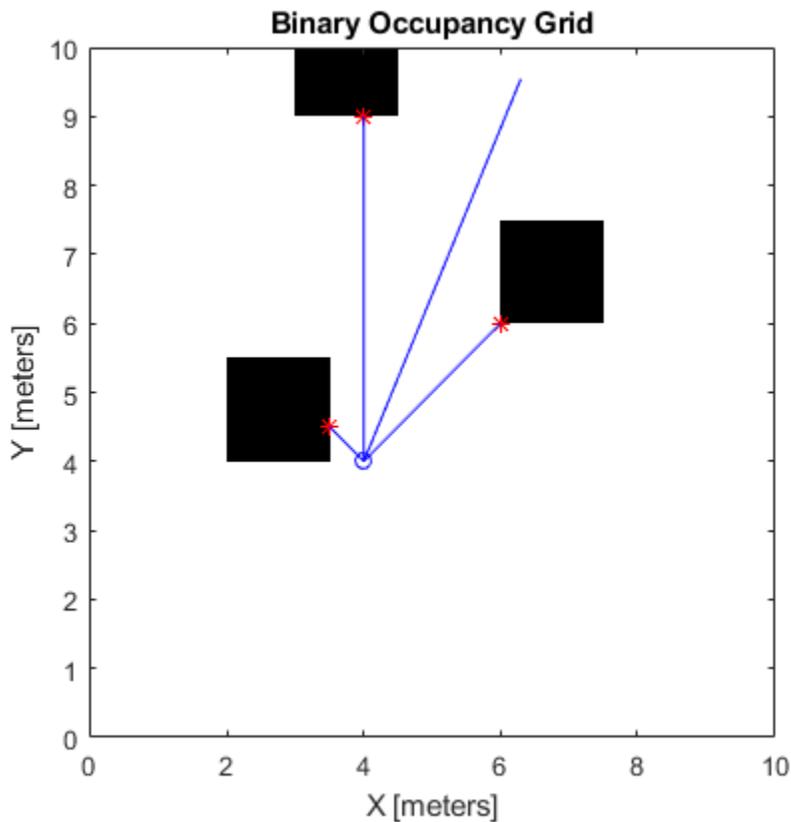

Input Arguments

map — Map representation

`binaryOccupancyMap` object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the robot. The object contains a matrix grid with binary values indicating obstacles as `true` (1) and free locations as `false` (0).

pose — Position and orientation of sensor

three-element vector

Position and orientation of the sensor, specified as an `[x y theta]` vector. The sensor pose is an x and y position with angular orientation *theta* (in radians) measured from the x -axis.

angles — Ray angles emanating from sensor

vector

Ray angles emanating from the sensor, specified as a vector with elements in radians. These angles are relative to the specified sensor pose.

maxrange — Maximum range of sensor

scalar

Maximum range of laser range sensor, specified as a scalar in meters. Range values greater than or equal to `maxrange` are considered free along the whole length of the ray, up to `maxrange`.

Output Arguments

intersectionPts — Intersection points

n -by-2 matrix

Intersection points, returned as n -by-2 matrix of `[x y]` pairs in the world coordinate frame, where n is the length of `angles`.

See Also

`binaryOccupancyMap` | `occupancyMap`

Topics

“Occupancy Grids”

“Occupancy Grids”

Introduced in R2019b

setOccupancy

Set occupancy value of locations

Syntax

```
setOccupancy(map,xy,occval)
setOccupancy(map,xy,occval,"local")
setOccupancy(map,ij,occval,"grid")
validPts = setOccupancy( ___ )
```

```
setOccupancy(map,bottomLeft,inputMatrix)
setOccupancy(map,bottomLeft,inputMatrix,"local")
setOccupancy(map,topLeft,inputMatrix,"grid")
```

Description

`setOccupancy(map,xy,occval)` assigns occupancy values, `occval`, to the input array of world coordinates, `xy` in the occupancy grid, `map`. Each row of the array, `xy`, is a point in the world and is represented as an `[x y]` coordinate pair. `occval` is either a scalar or a single column array of the same length as `xy`. An occupied location is represented as `true` (1), and a free location is represented as `false` (0).

`setOccupancy(map,xy,occval,"local")` assigns occupancy values, `occval`, to the input array of local coordinates, `xy`, as local coordinates.

`setOccupancy(map,ij,occval,"grid")` assigns occupancy values, `occval`, to the input array of grid indices, `ij`, as `[rows cols]`.

`validPts = setOccupancy(___)` outputs an `n`-element vector of logical values indicating whether input coordinates are within the map limits.

`setOccupancy(map,bottomLeft,inputMatrix)` assigns a matrix of occupancy values by specifying the bottom-left corner location in world coordinates.

`setOccupancy(map,bottomLeft,inputMatrix,"local")` assigns a matrix of occupancy values by specifying the bottom-left corner location in local coordinates.

`setOccupancy(map, topLeft, inputMatrix, "grid")` assigns a matrix of occupancy values by specifying the top-left cell index in grid indices and the matrix size.

Examples


Create and Modify Binary Occupancy Grid

Create a 10m x 10m empty map.

```
map = binaryOccupancyMap(10,10,10);
```


Set occupancy of world locations and show map.

```
x = [1.2; 2.3; 3.4; 4.5; 5.6];  
y = [5.0; 4.0; 3.0; 2.0; 1.0];  
  
setOccupancy(map, [x y], ones(5,1))  
figure  
show(map)
```

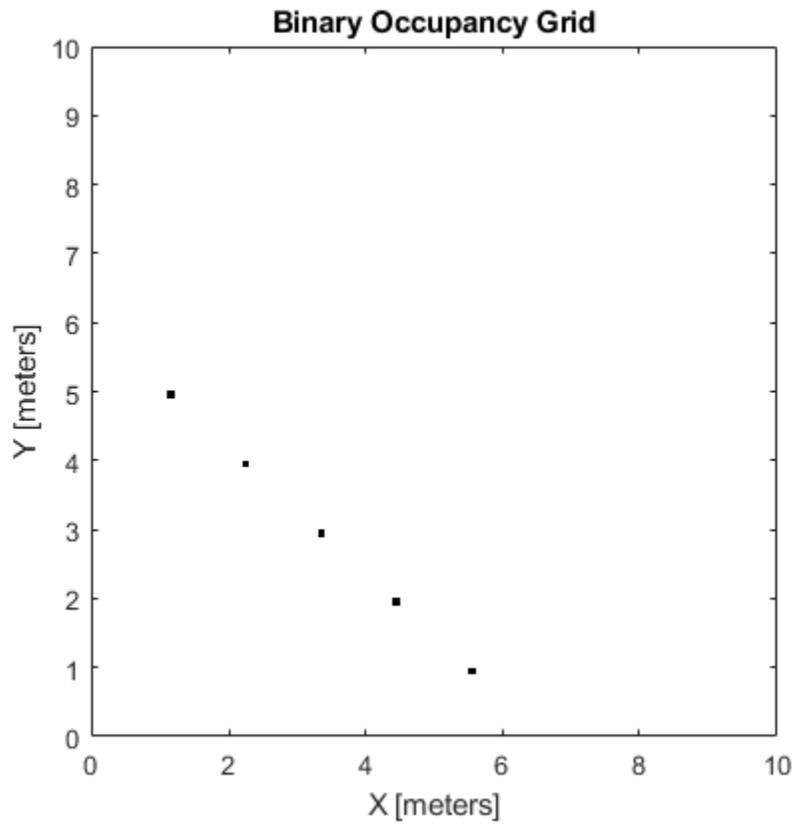

Inflate occupied locations by a given radius.

```
inflate(map, 0.5)  
figure  
show(map)
```

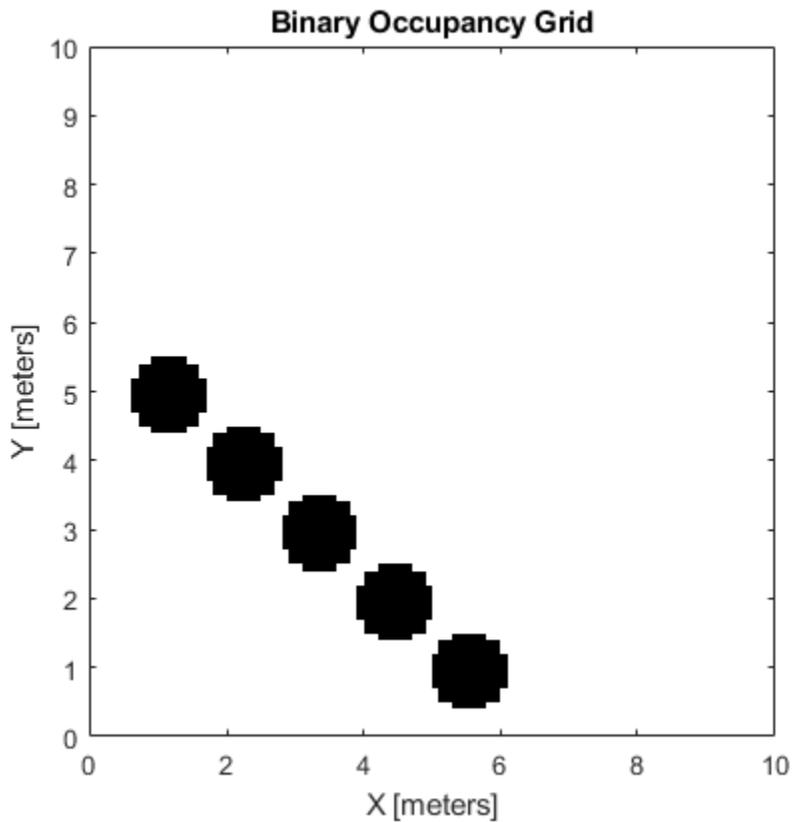

Get grid locations from world locations.


```
ij = world2grid(map, [x y]);
```

Set grid locations to free locations.

```
setOccupancy(map, ij, zeros(5,1), 'grid')
```

```
figure
```

```
show(map)
```

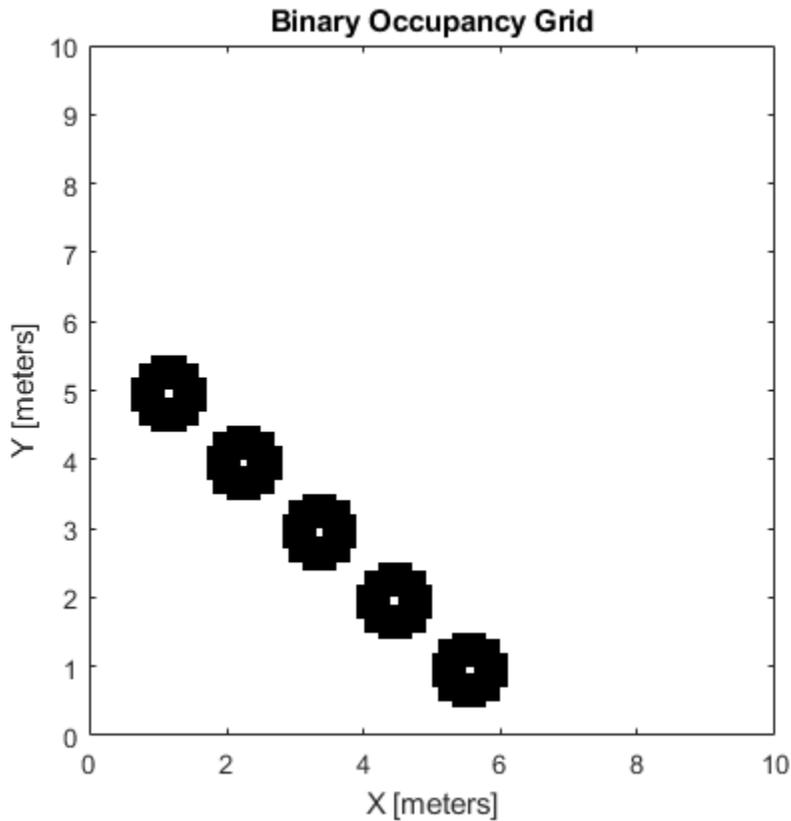

Input Arguments

map — Map representation

binaryOccupancyMap object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the robot. The object contains a matrix grid with binary values indicating obstacles as `true` (1) and free locations as `false` (0).

xy — World coordinates

n-by-2 vertical array

World coordinates, specified as an n -by-2 vertical array of $[x\ y]$ pairs, where n is the number of world coordinates.

Data Types: double

ij — Grid positions

n -by-2 vertical array

Grid positions, specified as an n -by-2 vertical array of $[i\ j]$ pairs in $[\text{rows}\ \text{cols}]$ format, where n is the number of grid positions.

Data Types: double

occval — Occupancy values

n -by-1 vertical array

Occupancy values of the same length as either xy or ij , returned as an n -by-1 vertical array, where n is the same n in either xy or ij . Values are given between 0 and 1 inclusively.

inputMatrix — Occupancy values

matrix

Occupancy values, specified as a matrix. Values are given between 0 and 1 inclusively.

bottomLeft — Location of output matrix in world or local

two-element vector | $[x\text{Coord}\ y\text{Coord}]$

Location of bottom left corner of output matrix in world or local coordinates, specified as a two-element vector, $[x\text{Coord}\ y\text{Coord}]$. Location is in world or local coordinates based on syntax.

Data Types: double

topLeft — Location of grid

two-element vector | $[i\text{Coord}\ j\text{Coord}]$

Location of top left corner of grid, specified as a two-element vector, $[i\text{Coord}\ j\text{Coord}]$.

Data Types: double

Output Arguments

validPts — Valid map locations

n-by-1 column vector

Valid map locations, returned as an *n*-by-1 column vector equal in length to `xy` or `ij`. Locations inside the map return a value of 1. Locations outside the map limits return a value of 0.

See Also

`binaryOccupancyMap` | `getOccupancy` | `occupancyMap`

Introduced in R2015a

show

Show occupancy grid values

Syntax

```
show(map)
show(map, "local")
show(map, "grid")
show( ____, Name, Value)
mapImage = show( ____ )
```

Description

`show(map)` displays the binary occupancy grid map in the current axes, with the axes labels representing the world coordinates.

`show(map, "local")` displays the binary occupancy grid map in the current axes, with the axes labels representing the local coordinates instead of world coordinates.

`show(map, "grid")` displays the binary occupancy grid map in the current axes, with the axes labels representing the grid coordinates.

`show(____, Name, Value)` specifies additional options specified by one or more name-value pair arguments.

`mapImage = show(____)` returns the handle to the image object created by `show`.


Examples

Move Local Map and Sync with World Map

This example shows how to move a local egocentric map and sync it with a larger world map. This process emulates a vehicle driving in an environment and getting updates on obstacles in the new areas.


Load example maps. Create a binary occupancy map from the `complexMap`.

```
load exampleMaps.mat  
map = binaryOccupancyMap(complexMap);  
show(map)
```

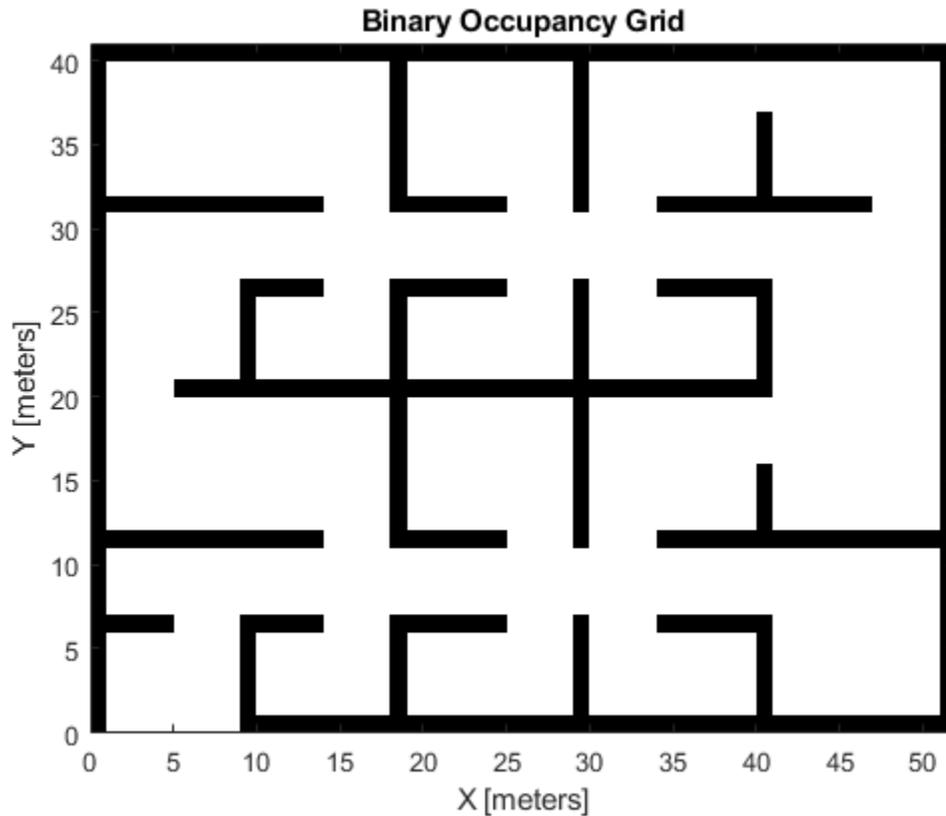

Create a smaller local map.


```
mapLocal = binaryOccupancyMap(complexMap(end-20:end,1:20));  
show(mapLocal)
```

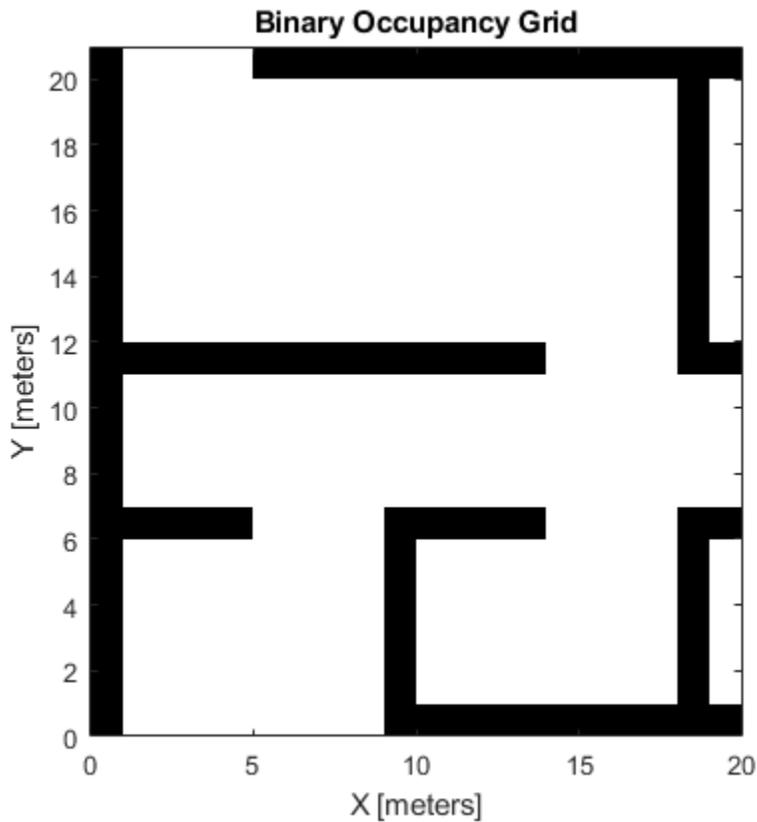

Follow a path planned in the world map and update the local map as you move your local frame.

Specify path locations and plot on the map.

```
path = [5 2
        8 2
        8 8
        30 8];
show(map)
hold on
plot(path(:,1),path(:,2))
hold off
```

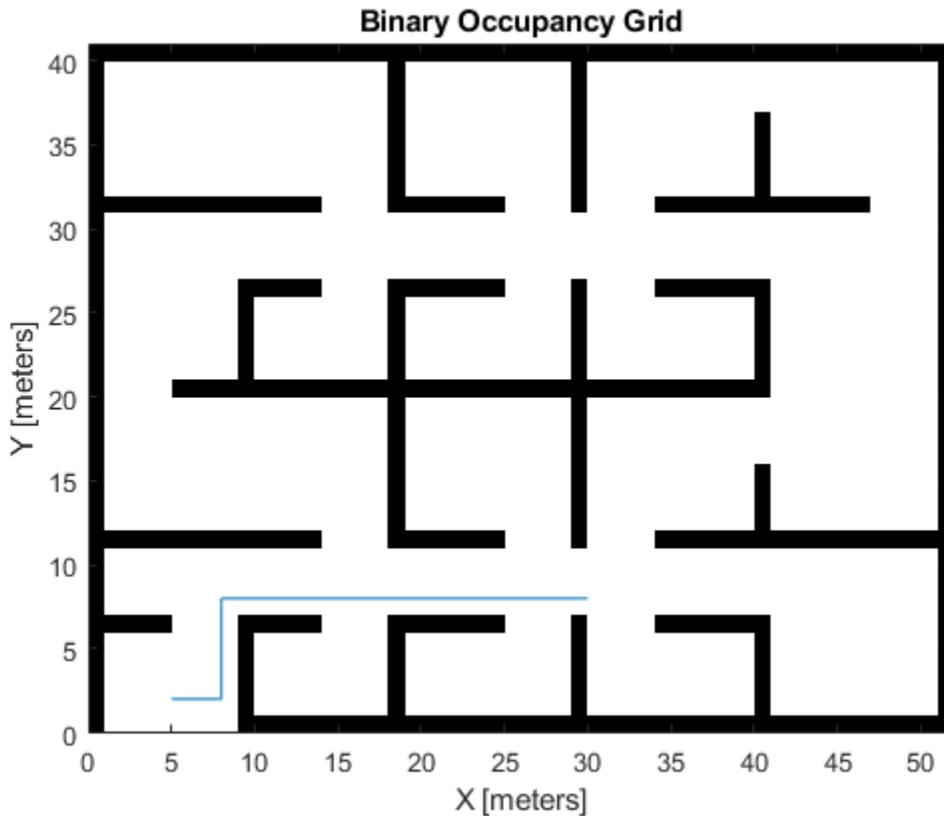


Create a loop for moving between points by the map resolution. Divide the difference between points by the map resolution to see how many incremental moves you can make.

```
for i = 1:length(path)-1
    moveAmount = (path(i+1,:)-path(i,:))/map.Resolution;
    for j = 1:abs(moveAmount(1)+moveAmount(2))
        moveValue = sign(moveAmount).*map.Resolution;
        move(mapLocal,moveValue, ...
            "MoveType", "relative", "SyncWith", map)

        show(mapLocal)
        drawnow limitrate
        pause(0.2)
    end
end
```

```
end  
end
```

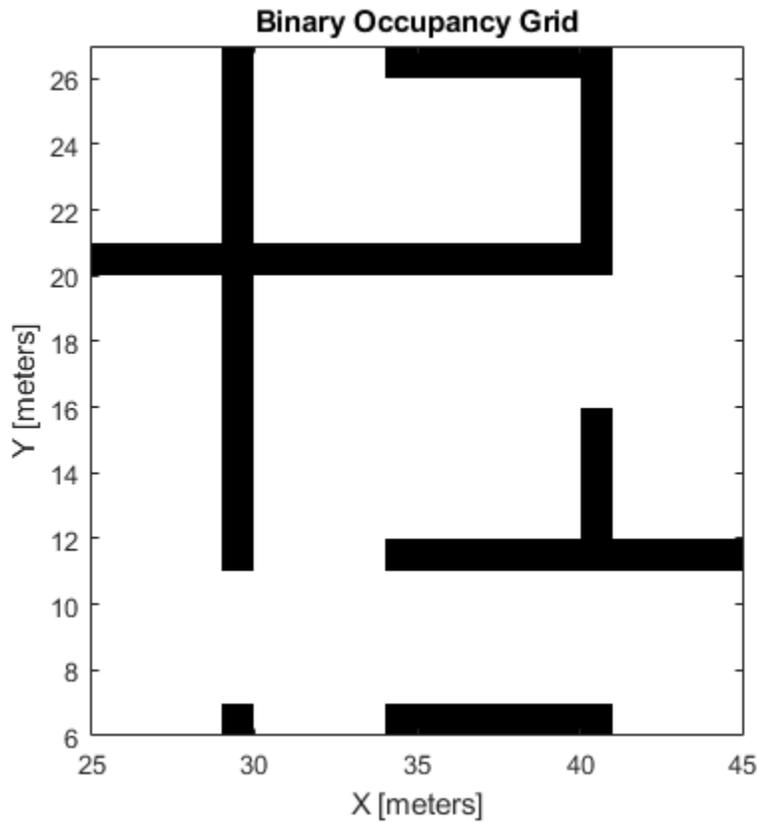

Input Arguments

map — Map representation
binaryOccupancyMap object

Map representation, specified as a `binaryOccupancyMap` object. This object represents the environment of the vehicle.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Example: `'Parent', axHandle`

Parent — Axes to plot the map

Axes object | UIAxes object

Axes to plot the map specified as either an Axes or UIAxes object. See `axes` or `uiaxes`.

FastUpdate — Update existing map plot

0 (default) | 1

Update existing map plot, specified as 0 or 1. If you previously plotted your map on your figure, set to 1 for a faster update to the figure. This is useful for updating the figure in a loop for fast animations.

See Also

`occupancyMap` | `binaryOccupancyMap`

Introduced in R2015a

syncWith

Sync map with overlapping map

Syntax

```
mat = syncWith(map, sourcemap)
```

Description

`mat = syncWith(map, sourcemap)` updates `map` with data from another `binaryOccupancyMap` object, `sourcemap`. Locations in `map` that are also found in `sourcemap` are updated. All other cells in `map` are set to `map.DefaultValue`.


Examples

Move Local Map and Sync with World Map

This example shows how to move a local egocentric map and sync it with a larger world map. This process emulates a vehicle driving in an environment and getting updates on obstacles in the new areas.


Load example maps. Create a binary occupancy map from the `complexMap`.

```
load exampleMaps.mat  
map = binaryOccupancyMap(complexMap);  
show(map)
```

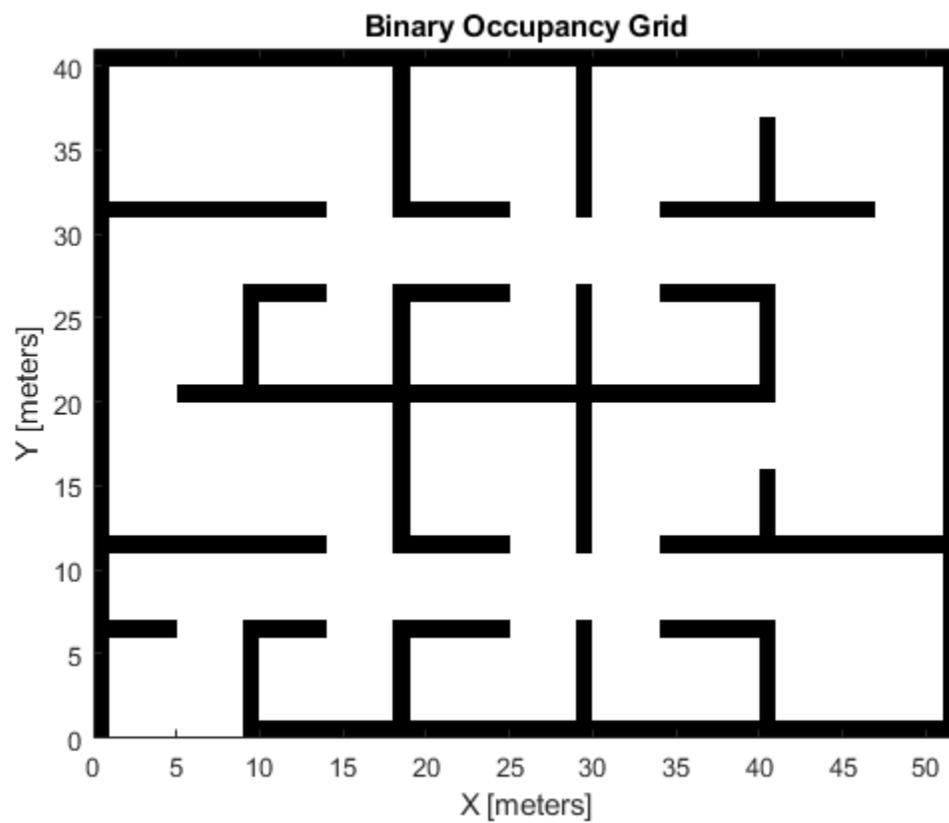

Create a smaller local map.


```
mapLocal = binaryOccupancyMap(complexMap(end-20:end,1:20));  
show(mapLocal)
```

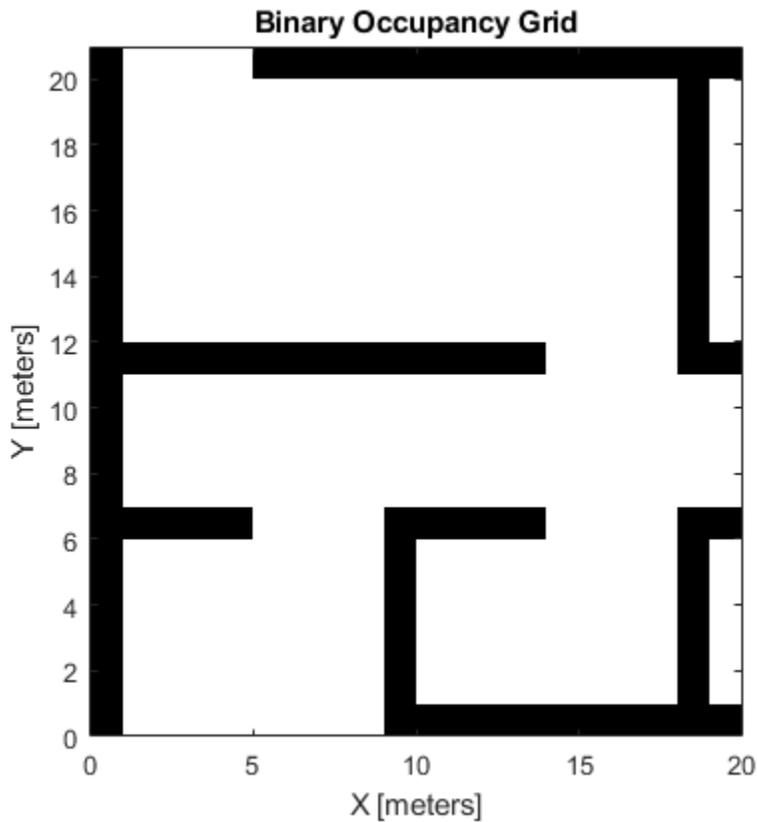

Follow a path planned in the world map and update the local map as you move your local frame.

Specify path locations and plot on the map.

```
path = [5 2
        8 2
        8 8
        30 8];
show(map)
hold on
plot(path(:,1),path(:,2))
hold off
```

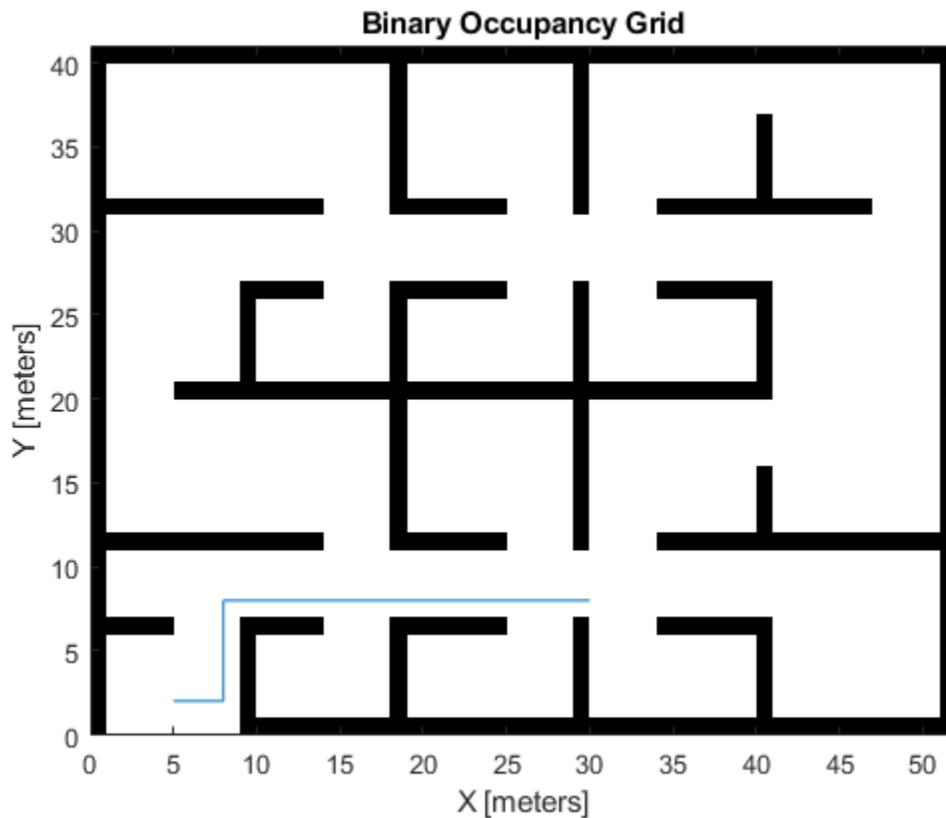


Create a loop for moving between points by the map resolution. Divide the difference between points by the map resolution to see how many incremental moves you can make.

```
for i = 1:length(path)-1
    moveAmount = (path(i+1,:)-path(i,:))/map.Resolution;
    for j = 1:abs(moveAmount(1)+moveAmount(2))
        moveValue = sign(moveAmount).*map.Resolution;
        move(mapLocal,moveValue, ...
            "MoveType", "relative", "SyncWith", map)

        show(mapLocal)
        drawnow limitrate
        pause(0.2)
    end
end
```

```
end  
end
```

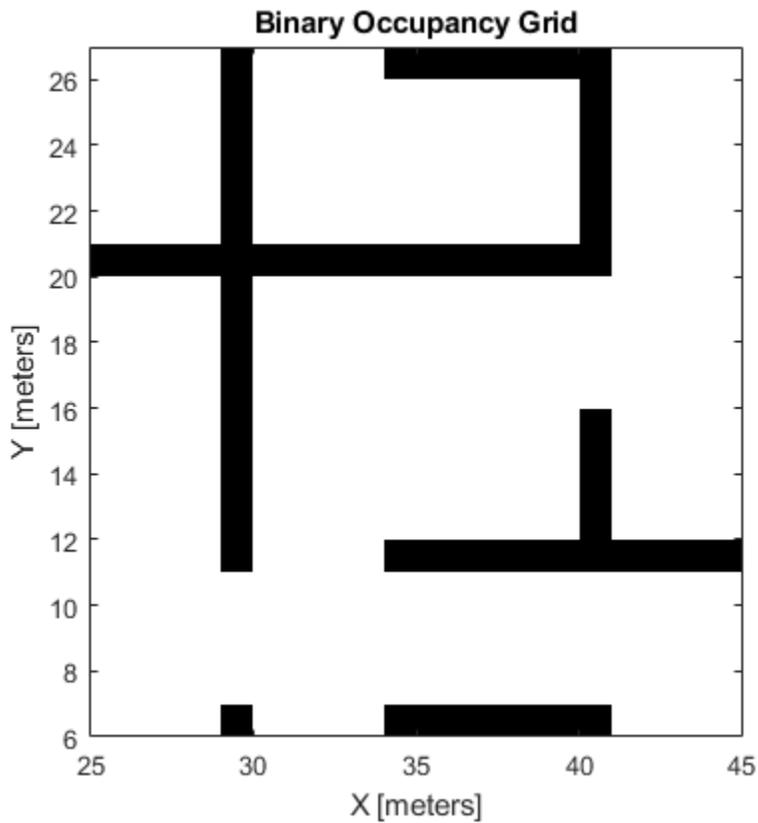

Input Arguments

map — Map representation

`binaryOccupancyMap` object

Map representation, specified as a `binaryOccupancyMap` object.

sourcemap — Map representation

`binaryOccupancyMap` object

Map representation, specified as a `binaryOccupancyMap` object.

See Also

`binaryOccupancyMap` | `occupancyMap`

Topics

“Occupancy Grids”

Introduced in R2019b

world2grid

Convert world coordinates to grid indices

Syntax

```
ij = world2grid(map,xy)
```

Description

`ij = world2grid(map,xy)` converts an array of world coordinates, `xy`, to a `[rows cols]` array of grid indices, `ij`.

Input Arguments

map — Map representation

binaryOccupancyMap object

Map representation, specified as a *binaryOccupancyMap* object.

xy — World coordinates

n-by-2 vertical array

World coordinates, specified as an *n-by-2* vertical array of `[x y]` pairs, where *n* is the number of world coordinates.

Output Arguments

ij — Grid indices

n-by-2 vertical array

Grid indices, specified as an *n-by-2* vertical array of `[i j]` pairs in `[rows cols]` format, where *n* is the number of grid positions.

See Also

`binaryOccupancyMap` | `grid2world`

Introduced in R2015a

world2local

Convert world coordinates to local coordinates

Syntax

```
xyLocal = world2local(map, xy)
```

Description

`xyLocal = world2local(map, xy)` converts an array of world coordinates to local coordinates.

Input Arguments

map — Map representation

binaryOccupancyMap object

Map representation, specified as a *binaryOccupancyMap* object.

xy — World coordinates

n-by-2 vertical array

World coordinates, specified as an *n-by-2* vertical array of [x y] pairs, where *n* is the number of world coordinates.

Output Arguments

xyLocal — Local coordinates

n-by-2 vertical array

Local coordinates, specified as an *n-by-2* vertical array of [x y] pairs, where *n* is the number of local coordinates.

See Also

`binaryOccupancyMap` | `grid2world` | `local2world`

Introduced in R2019b

show

Show collision geometry

Syntax

```
ax = show(geom)  
[ax,patchobj] = show(geom)
```

```
show(geom)  
show(geom, 'Parent', AX)
```

Description

`ax = show(geom)` returns the axes under which the collision geometry is plotted.

`[ax,patchobj] = show(geom)` returns the `patchobj` graphic object that represents the collision geometry in the plot.

`show(geom)` shows the collision geometry in the current figure at its current pose. The tessellation is generated automatically.

`show(geom, 'Parent', AX)` specifies the axes `AX` in which to plot the collision geometry.

Examples


Show Collision Geometry

Create a cylinder collision geometry. The cylinder has a length of 3 meters and a radius of 1 meter.

```
cyl = collisionCylinder(1,3);
```


Show the cylinder.

```
show(cyl)
view(45,30)
```

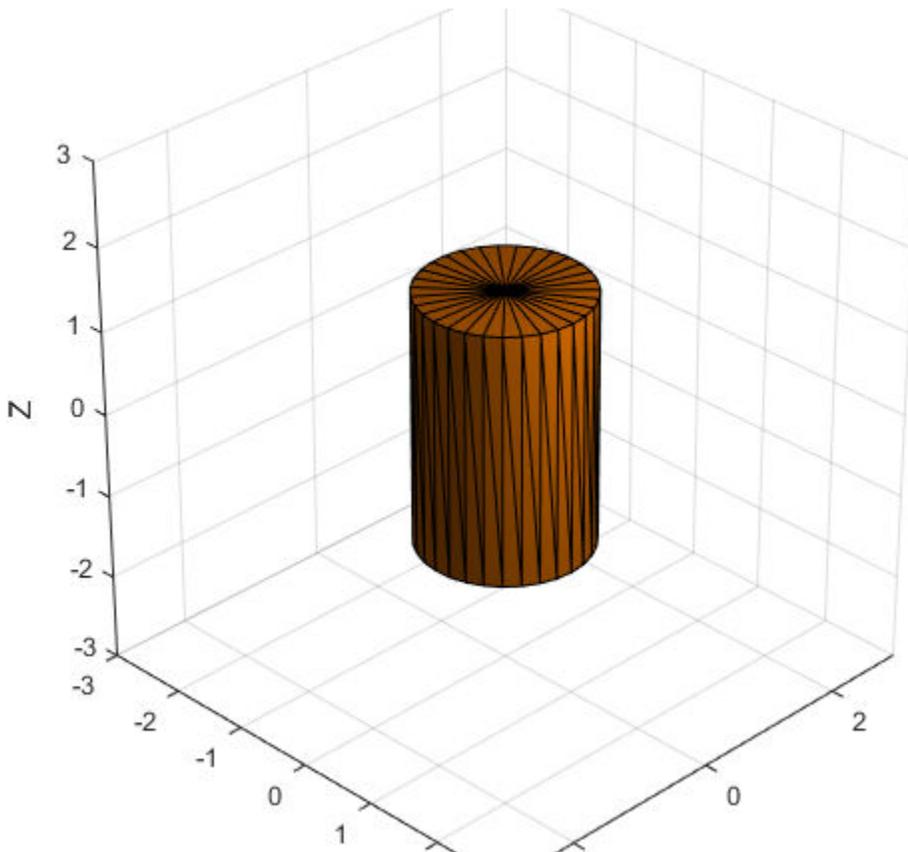

Show the cylinder in a new figure, and return the patch object that represents the cylinder. Change the cylinder color to cyan by changing the RGB value of the FaceColor field in the patch object. Hide the edges by setting EdgeColor to 'none'.

```
figure
[~,patchObj] = show(cyl);
view(45,30)
patchObj.FaceColor = [0 1 1];
patchObj.EdgeColor = 'none';
```

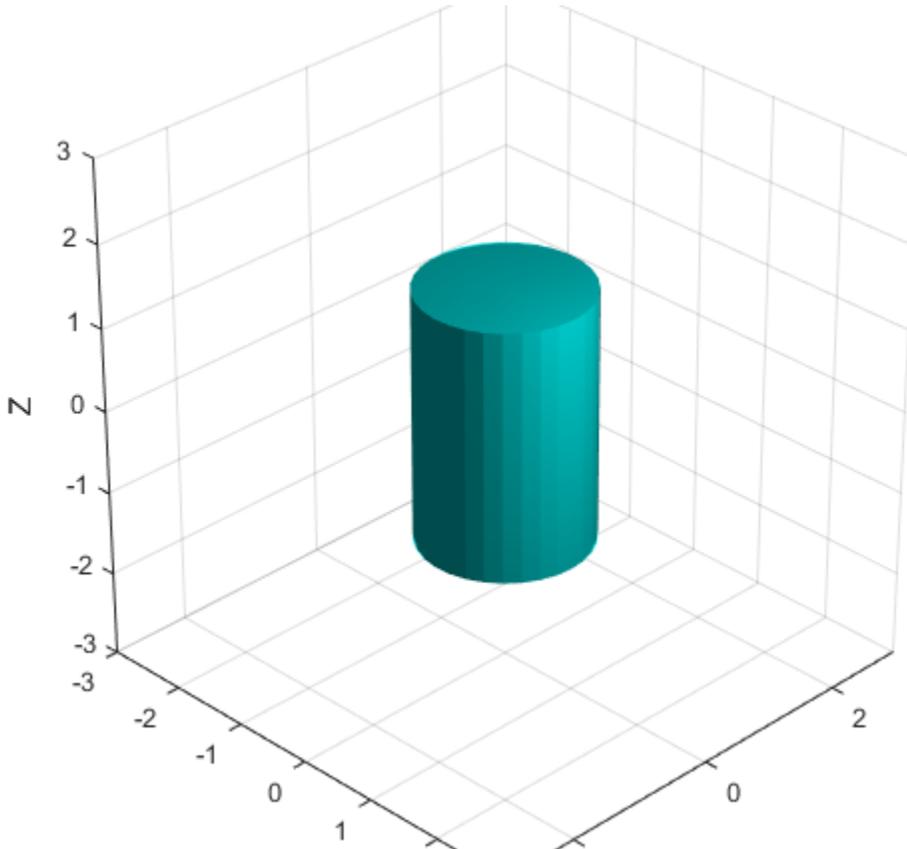

Input Arguments

geom — Collision geometry

`collisionBox` object | `collisionCylinder` object | `collisionMesh` object | `collisionSphere` object

Collision geometry to show.

AX — Axes on which to plot

`Axes` object

Axes in which to plot the collision geometry, specified as an `Axes` object.

Output Arguments

ax — Axes

Axes object

Axes under which the collision geometry `geom` is shown, returned as an Axes object. For more information, see [Axes Properties](#).

patchobj — Graphic object

Patch object

Graphic object that represents the collision geometry, returned as a Patch object. For more information, see [Patch Properties](#).

See Also

[collisionBox](#) | [collisionCylinder](#) | [collisionMesh](#) | [collisionSphere](#)

Introduced in R2019b

info

Characteristic information about `controllerPurePursuit` object

Syntax

```
controllerInfo = info(controller)
```

Description

`controllerInfo = info(controller)` returns a structure, `controllerInfo`, with additional information about the status of the `controllerPurePursuit` object, `controller`. The structure contains the fields, `RobotPose` and `LookaheadPoint`.

Examples

Get Additional Pure Pursuit Object Information

Use the `info` method to get more information about a `controllerPurePursuit` object. The `info` function returns two fields, `RobotPose` and `LookaheadPoint`, which correspond to the current position and orientation of the robot and the point on the path used to compute outputs from the last call of the object.

Create a `controllerPurePursuit` object.

```
pp = controllerPurePursuit;
```

Assign waypoints.

```
pp.Waypoints = [0 0;1 1];
```

Compute control commands using the `pp` object with the initial pose `[x y theta]` given as the input.

```
[v,w] = pp([0 0 0]);
```

Get additional information.

```
s = info(pp)

s = struct with fields:
    RobotPose: [0 0 0]
    LookaheadPoint: [0.7071 0.7071]
```

Input Arguments

controller — Pure pursuit controller

controllerPurePursuit object

Pure pursuit controller, specified as a controllerPurePursuit object.

Output Arguments

controllerInfo — Information on the controllerPurePursuit object

structure

Information on the controllerPurePursuit object, returned as a structure. The structure contains two fields:

- **RobotPose** - A three-element vector in the form [x y theta] that corresponds to the x-y position and orientation of the vehicle. The angle, theta, is measured in radians with positive angles measured counterclockwise from the x-axis.
- **LookaheadPoint**- A two-element vector in the form [x y]. The location is a point on the path that was used to compute outputs of the last call to the object.

See Also

controllerPurePursuit

Topics

“Pure Pursuit Controller”

Introduced in R2019b

removeInvalidData

Remove invalid range and angle data

Syntax

```
validScan = removeInvalidData(scan)
validScan = removeInvalidData(scan,Name,Value)
```

Description

`validScan = removeInvalidData(scan)` returns a new `lidarScan` object with all `Inf` and `NaN` values from the input `scan` removed. The corresponding angle readings are also removed.

`validScan = removeInvalidData(scan,Name,Value)` provides additional options specified by one or more `Name, Value` pairs.

Examples


Plot Lidar Scan and Remove Invalid Points

Specify lidar data as vectors of ranges and angles. These values include readings outside of the sensors range.

```
x = linspace(-2,2);
ranges = abs((1.5).*x.^2 + 5);
ranges(45:55) = 3.5;
angles = linspace(-pi/2,pi/2,numel(ranges));
```


Create a lidar scan by specifying the ranges and angles. Plot all points of the lidar scan.

```
scan = lidarScan(ranges,angles);
plot(scan)
```

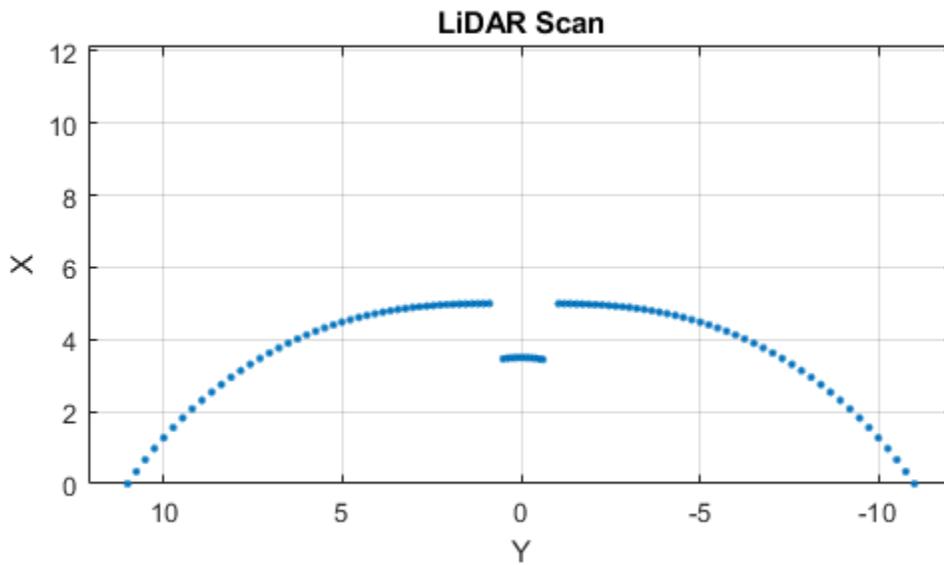

Remove invalid points based on a specified minimum and maximum range.

```
minRange = 0.1;  
maxRange = 7;  
scan2 = removeInvalidData(scan, 'RangeLimits', [minRange maxRange]);  
hold on  
plot(scan2)  
legend('All Points', 'Valid Points')
```

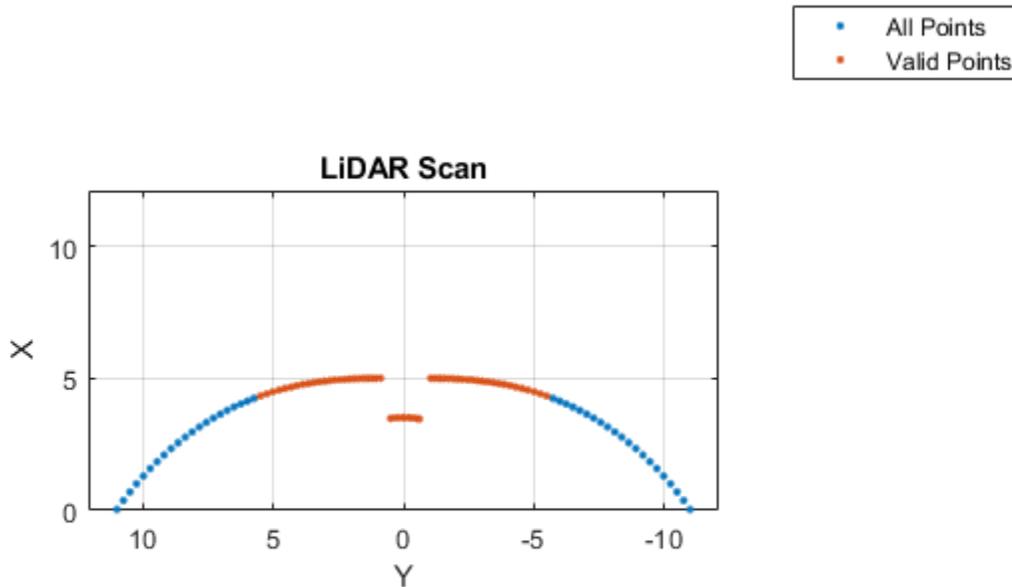

Input Arguments

scan — Lidar scan readings

lidarScan object

Lidar scan readings, specified as a lidarScan object.

Name-Value Pair Arguments

Specify optional comma-separated pairs of Name, Value arguments. Name is the argument name and Value is the corresponding value. Name must appear inside quotes.

You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Example: `["RangeLimits", [0.05 2]]`

RangeLimits — Range reading limits

two-element vector

Range reading limits, specified as a two-element vector, `[minRange maxRange]`, in meters. All range readings and corresponding angles outside these range limits are removed

Data Types: `single | double`

AngleLimits — Angle limits

two-element vector

Angle limits, specified as a two-element vector, `[minAngle maxAngle]` in radians. All angles and corresponding range readings outside these angle limits are removed.

Angles are measured counter-clockwise around the positive z-axis.

Data Types: `single | double`

Output Arguments

validScan — Lidar scan readings

lidarScan object


Lidar scan readings, specified as a `lidarScan` object. All invalid lidar scan readings are removed.

See Also

`transformScan`


Introduced in R2017b


```
scan = lidarScan(ranges,angles);  
plot(scan)
```

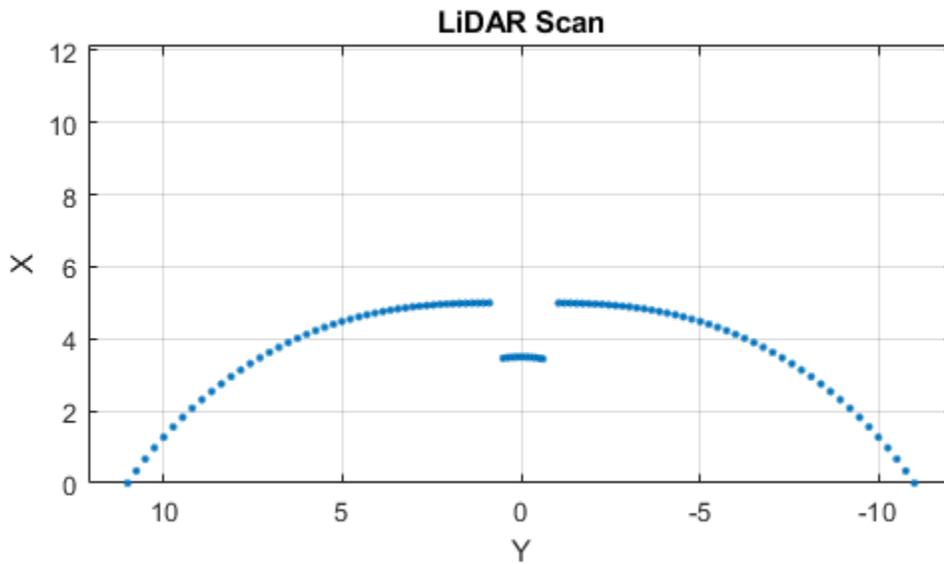

Remove invalid points based on a specified minimum and maximum range.

```
minRange = 0.1;  
maxRange = 7;  
scan2 = removeInvalidData(scan, 'RangeLimits', [minRange maxRange]);  
hold on  
plot(scan2)  
legend('All Points', 'Valid Points')
```

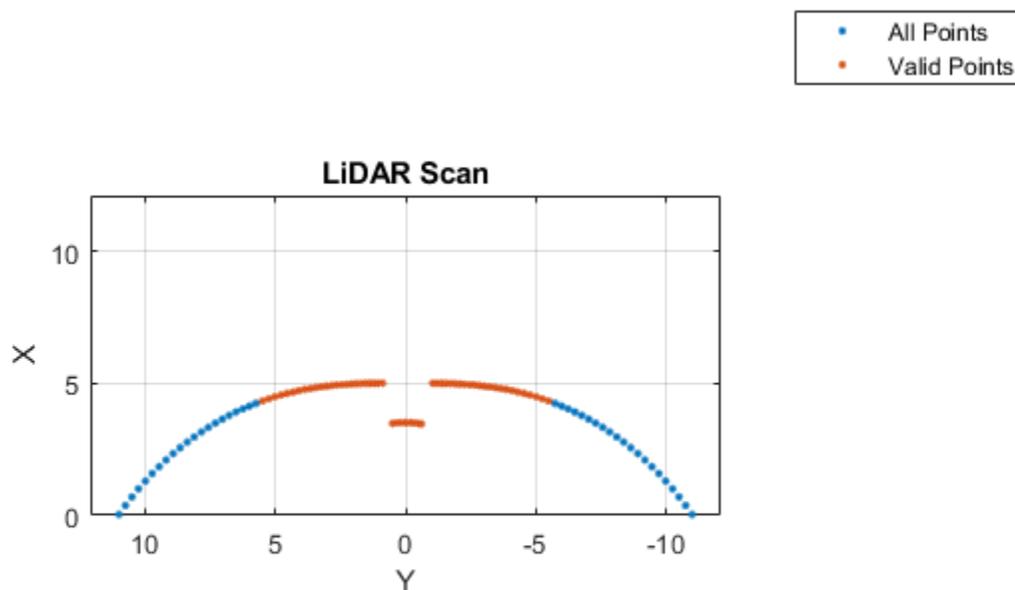

Input Arguments

scanObj — Lidar scan readings

lidarScan object

Lidar scan readings, specified as a lidarScan object.

Name-Value Pair Arguments

Specify optional comma-separated pairs of Name, Value arguments. Name is the argument name and Value is the corresponding value. Name must appear inside quotes.

You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Example: `"MaximumRange", 5`

Parent — Parent of axes

`axes` object

Parent of axes, specified as the comma-separated pair consisting of "Parent" and an axes object in which the laser scan is drawn. By default, the laser scan is plotted in the currently active axes.

MaximumRange — Range of laser scan

`scan.RangeMax` (default) | scalar

Range of laser scan, specified as the comma-separated pair consisting of "MaximumRange" and a scalar. When you specify this name-value pair argument, the minimum and maximum x-axis and the maximum y-axis limits are set based on specified value. The minimum y-axis limit is automatically determined by the opening angle of the laser scanner.

This name-value pair only works when you input `scanMsg` as the laser scan.

Outputs

linehandle — One or more chart line objects

scalar | vector

One or more chart line objects, returned as a scalar or a vector. These are unique identifiers, which you can use to query and modify properties of a specific chart line.

See Also

`transformScan`

Introduced in R2015a

derivative

Time derivative of manipulator model states

Syntax

```
stateDot = derivative(taskMotionModel, state, refPose, refVel)
stateDot = derivative(taskMotionModel, state, refPose, refVel, fExt)
```

```
stateDot = derivative(jointMotionModel, state, cmds)
stateDot = derivative(jointMotionModel, state, cmds, fExt)
```

Description

`stateDot = derivative(taskMotionModel, state, refPose, refVel)` computes the time derivative of the motion model based on the current state and motion commands using a task-space model.

`stateDot = derivative(taskMotionModel, state, refPose, refVel, fExt)` computes the time derivative based on the current state, motion commands, and any external forces on the manipulator using a task space model.

`stateDot = derivative(jointMotionModel, state, cmds)` computes the time derivative of the motion model based on the current state and motion commands using a joint-space model.

`stateDot = derivative(jointMotionModel, state, cmds, fExt)` computes the time derivative based on the current state, motion commands, and any external forces on the manipulator using a joint-space model.

Examples

Create Joint-Space Motion Model

This example shows how to create and use a `jointSpaceMotionModel` object for a manipulator robot in joint-space.

Create the Robot

```
robot = loadrobot("kinovaGen3", "DataFormat", "column", "Gravity", [0 0 -9.81]);
```

Set Up the Simulation

Set the timespan to be 1 s with a timestep size of 0.01 s. Set the initial state to be the robots, home configuration with a velocity of zero.

```
tspan = 0:0.01:1;  
initialState = [homeConfiguration(robot); zeros(7,1)];
```

Define the a reference state with a target position, zero velocity, and zero acceleration.

```
targetState = [pi/4; pi/3; pi/2; -pi/3; pi/4; -pi/4; 3*pi/4; zeros(7,1); zeros(7,1)];
```

Create the Motion Model

Model the system with computed torque control and error dynamics defined by a moderately fast step response with 5% overshoot.

```
motionModel = jointSpaceMotionModel("RigidBodyTree", robot);  
updateErrorDynamicsFromStep(motionModel, .3, .05);
```

Simulate the Robot

Use the derivative function of the model as the input to the `ode45` solver to simulate the behavior over 1 second.


```
[t, robotState] = ode45(@(t, state) derivative(motionModel, state, targetState), tspan, initialState);
```

Plot the Response

Plot the positions of all the joints actuating to their target state. Joints with a higher displacement between the starting position and the target position actuate to the target at a faster rate than those with a lower displacement. This leads to an overshoot, but all of the joints have the same settling time.

```
figure  
plot(t, robotState(:, 1:motionModel.NumJoints));
```

```
hold all;  
plot(t,targetState(1:motionModel.NumJoints)*ones(1,length(t)),"--");  
title("Joint Position (Solid) vs Reference (Dashed)");  
xlabel("Time (s)")  
ylabel("Position (rad)");
```

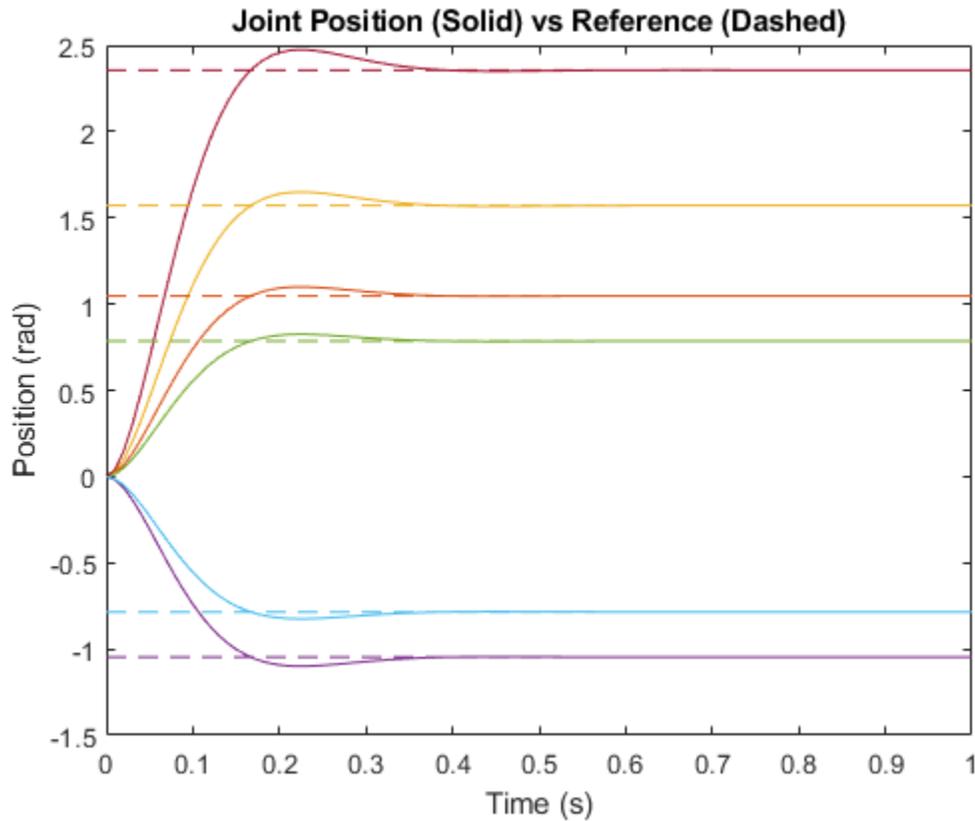

Create Task-Space Motion Model

This example shows how to create and use a `taskSpaceMotionModel` object for a manipulator robot arm in task-space.

Create the Robot

```
robot = loadrobot("kinovaGen3", "DataFormat", "column", "Gravity", [0 0 -9.81]);
```

Set Up the Simulation

Set the time span to be 1 second with a timestep size of 0.02 seconds. Set the initial state to the home configuration of the robot, with a velocity of zero.

```
tspan = 0:0.02:1;  
initialState = [homeConfiguration(robot); zeros(7,1)];
```

Define a reference state with a target position and zero velocity.

```
refPose = trvec2tform([0.6 -.1 0.5]);  
refVel = zeros(6,1);
```

Create the Motion Model

Model the behavior as a system under proportional-derivative (PD) control.

```
motionModel = taskSpaceMotionModel("RigidBodyTree", robot, "EndEffectorName", "EndEffector");
```

Simulate the Robot

Simulate the behavior over 1 second using a stiff solver to more efficiently capture the robot dynamics. Using `ode15s` enables higher precision around the areas with a high rate of change.

```
[t, robotState] = ode15s(@(t, state) derivative(motionModel, state, refPose, refVel), tspan, initialState);
```

Plot the Response


Plot the robot's initial position and mark the target with an X.

```
figure  
show(robot, initialState(1:7));  
hold all  
plot3(refPose(1,4), refPose(2,4), refPose(3,4), "x", "MarkerSize", 20)
```

Observe the response by plotting the robot in a 5 Hz loop.

```
r = rateControl(5);  
for i = 1:size(robotState,1)  
    show(robot, robotState(i,1:7)', "PreservePlot", false);  
end
```

```
    waitfor(r);  
end
```

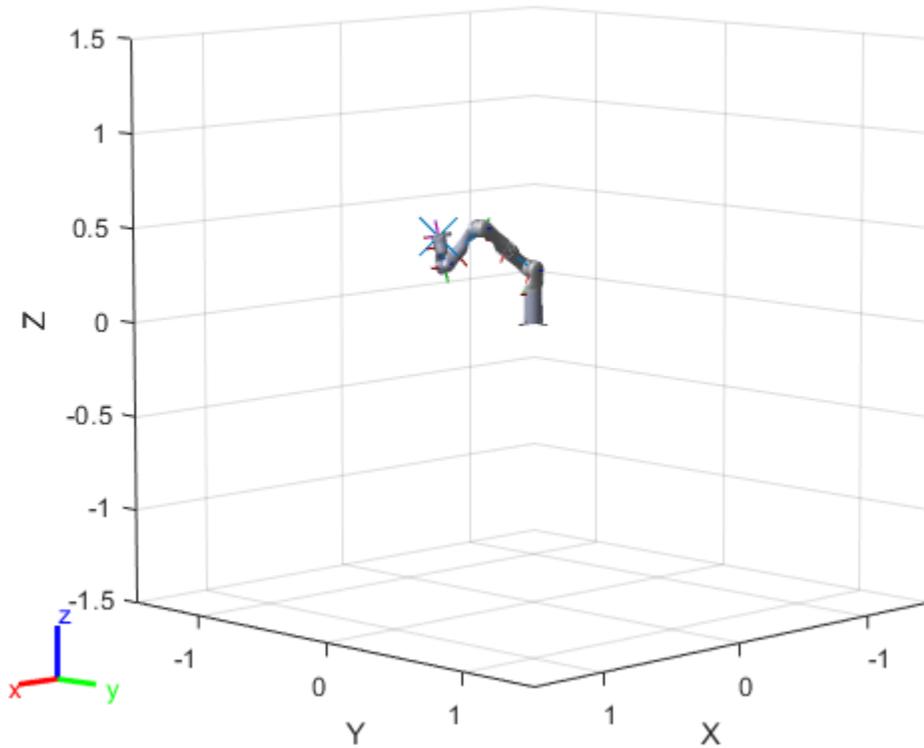

Input Arguments

taskMotionModel – **taskSpaceMotionModel** object

taskSpaceMotionModel object

taskSpaceMotionModel object, which defines the properties of the motion model.

jointMotionModel – **jointSpaceMotionModel** object

jointSpaceMotionModel object

`jointSpaceMotionModel` object, which defines the properties of the motion model.

state — Joint positions and velocities

1-by- $2n$ -element vector

Joint positions and velocities represented as a $2n$ -element vector, specified as $[q; qDot]$. n is the number of joints in the associated `rigidBodyTree` of the `motionModel`. q , represents the position of each joint, specified in radians. $qDot$ represents the velocity of each joint, specified in radians per second.

refPose — Robot pose

4-by-4 matrix

The reference pose of the end effector in the task-space in meters, specified as an 4-by-4 homogeneous transformation matrix.

refVel — Joint velocities

six-element row vector

The reference velocities of the end effector in the task space, specified as a six-element vector of real values, specified as $[\omega \ v]$. ω represents a row vector of three angular velocities about the x, y, and z axes, specified in radians per second, and v represents a row vector of three linear velocities along the x, y, and z axes, specified in meters per second.

cmds — Control commands indicating desired motion

2-by- n matrix | 3-by- n matrix

Control commands indicating desired motion. The dimensions of `cmds` depend on the `MotionType` property of the motion model. For "PDControl", `cmds` is a vector with 2-by- n matrix, $[qRef; qRefDot]$, for joint positions and velocities. For "ComputedTorqueControl" and "IndependentJointMotion", `cmds` is a 3-by- n matrix, $[qRef; qRefDot; qRefDDot]$, which includes joint accelerations.

- "PDControl" — 2-by- n matrix. The first and second columns represent joint positions, and joint velocities, respectively.
- "ComputedTorqueControl" — 3-by- n matrix. The first, second, and third column represent joint positions, joint velocities, and joint accelerations respectively.
- "IndependentJointMotion" — 3-by- n matrix. The first, second, and third column represent joint positions, joint velocities, and joint accelerations respectively.

fExt — Joint positions and velocities*m*-element vector

External forces, specified as an *m*-element vector, where *m* is the number of bodies in the associated `rigidBodyTree` object.

Output Arguments

stateDot — Time derivative of current state*2*-by-*n* matrix

Time derivative based on current state and specified control commands, returned as a 2-by-*n* matrix of real values, [*qDot*; *qDDot*], where *qDot* is an *n*-element row vector of joint velocities, and *qDDot* is an *n*-element row vector of joint accelerations. *n* is the number of joints in the associated `rigidBodyTree` of the `motionModel`.

See Also

Classes`jointSpaceMotionModel` | `taskSpaceMotionModel`**Introduced in R2019b**

createcmd

Create MAVLink command message

Syntax

```
cmdMsg = createcmd(dialect,cmdSetting,cmdType)
```

Description

`cmdMsg = createcmd(dialect,cmdSetting,cmdType)` returns a blank `COMMAND_INT` or `COMMAND_LONG` message structure based on the command setting and type. The command definitions are contained in the `mavlinkdialect` object, `dialect`.

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Examples

Parse and Use MAVLink Dialect

This example shows how to parse a MAVLink XML file and create messages and commands from the definitions.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Parse and store the MAVLink dialect XML. Specify the XML path. The default "common.xml" dialect is provided. This XML file contains all the message and enum definitions.

```
dialect = mavlinkdialect("common.xml");
```

Create a MAVLink command from the MAV_CMD enum, which is an enum of MAVLink commands to send to the UAV. Specify the setting as "int" or "long", and the type as an integer or string.

```
cmdMsg = createcmd(dialect, "long", 22)
```

```
cmdMsg = struct with fields:
    MsgID: 76
    Payload: [1x1 struct]
```

Verify the command name using num2enum. Command 22 is a take-off command for the UAV. You can convert back to an ID using enum2num. Your dialect can contain many different enums with different names and IDs.

```
cmdName = num2enum(dialect, "MAV_CMD", 22)
```

```
cmdName =
"MAV_CMD_NAV_TAKEOFF"
```

```
cmdID = enum2num(dialect, "MAV_CMD", cmdName)
```

```
cmdID = 22
```

Use enuminfo to view the table of the MAV_CMD enum entries.

```
info = enuminfo(dialect, "MAV_CMD");
info.Entries{:}
```

```
ans=133x3 table
```

Name	Value	
"MAV_CMD_NAV_WAYPOINT"	16	"Navigate to waypoint."
"MAV_CMD_NAV_LOITER_UNLIM"	17	"Loiter around this waypoint an u
"MAV_CMD_NAV_LOITER_TURNS"	18	"Loiter around this waypoint for
"MAV_CMD_NAV_LOITER_TIME"	19	"Loiter around this waypoint for
"MAV_CMD_NAV_RETURN_TO_LAUNCH"	20	"Return to launch location"
"MAV_CMD_NAV_LAND"	21	"Land at location"
"MAV_CMD_NAV_TAKEOFF"	22	"Takeoff from ground / hand"
"MAV_CMD_NAV_LAND_LOCAL"	23	"Land at local position (local fr
"MAV_CMD_NAV_TAKEOFF_LOCAL"	24	"Takeoff from local position (loc
"MAV_CMD_NAV_FOLLOW"	25	"Vehicle following, i.e. this way
"MAV_CMD_NAV_CONTINUE_AND_CHANGE_ALT"	30	"Continue on the current course a
"MAV_CMD_NAV_LOITER_TO_ALT"	31	"Begin loiter at the specified La

```

"MAV_CMD_DO_FOLLOW"           32      "Being following a target"
"MAV_CMD_DO_FOLLOW_REPOSITION" 33      "Reposition the MAV after a follow
"MAV_CMD_DO_ORBIT"           34      "Start orbiting on the circumference
"MAV_CMD_NAV_ROI"            80      "Sets the region of interest (ROI)
:"

```

Query the dialect for a specific message ID. Create a blank MAVLink message using the message ID.

```
info = msginfo(dialect, "HEARTBEAT")
```

```
info=1x4 table
```

MessageID	MessageName	
0	"HEARTBEAT"	"The heartbeat message shows that a system is present a

```
msg = createmsg(dialect, info.MessageID);
```

Input Arguments

dialect — MAVLink dialect

mavlinkdialect object

MAVLink dialect, specified as a mavlinkdialect object. The dialect specifies the message structure for the MAVLink protocol.

cmdSetting — Command setting

"int" | "long"

Command setting, specified as either "int" or "long" for either a COMMAND_INT or COMMAND_LONG command.

cmdType — Command type

positive integer | string

Command type, specified as either a positive integer or string. If specified as an integer, the command definition with the matching ID from the MAV_CMD enum in dialect is returned. If specified as a string, the command with the matching name is returned.

To get the command types for the MAV_CMD enum, use `enuminfo`:

```
enumTable = enuminfo(dialect, "MAV_CMD")  
enumTable.Entries{1}
```

Output Arguments

cmdMsg — MAVLink command message

structure

MAVLink command message, returned as a structure with the fields:

- **MsgID**: Positive integer for message ID.
- **Payload**: Structure containing fields for the specific message definition.

See Also

Functions

`createmsg` | `enum2num` | `enuminfo` | `msginfo` | `num2enum`

Objects

`mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `mavlinksub`

Introduced in R2019a

createmsg

Create MAVLink message

Syntax

```
msg = createmsg(dialect,msgID)
```

Description

`msg = createmsg(dialect,msgID)` returns a blank message structure based on the message definitions specified in the `mavlinkdialect` object, `dialect`, and the input message ID, `msgID`.

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Examples

Parse and Use MAVLink Dialect

This example shows how to parse a MAVLink XML file and create messages and commands from the definitions.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Parse and store the MAVLink dialect XML. Specify the XML path. The default "common.xml" dialect is provided. This XML file contains all the message and enum definitions.

```
dialect = mavlinkdialect("common.xml");
```

Create a MAVLink command from the MAV_CMD enum, which is an enum of MAVLink commands to send to the UAV. Specify the setting as "int" or "long", and the type as an integer or string.

```
cmdMsg = createcmd(dialect, "long", 22)
```

```
cmdMsg = struct with fields:
    MsgID: 76
    Payload: [1x1 struct]
```

Verify the command name using num2enum. Command 22 is a take-off command for the UAV. You can convert back to an ID using enum2num. Your dialect can contain many different enums with different names and IDs.

```
cmdName = num2enum(dialect, "MAV_CMD", 22)
```

```
cmdName =
"MAV_CMD_NAV_TAKEOFF"
```

```
cmdID = enum2num(dialect, "MAV_CMD", cmdName)
```

```
cmdID = 22
```

Use enuminfo to view the table of the MAV_CMD enum entries.

```
info = enuminfo(dialect, "MAV_CMD");
info.Entries{:}
```

```
ans=133x3 table
```

Name	Value	
"MAV_CMD_NAV_WAYPOINT"	16	"Navigate to waypoint."
"MAV_CMD_NAV_LOITER_UNLIM"	17	"Loiter around this waypoint an u
"MAV_CMD_NAV_LOITER_TURNS"	18	"Loiter around this waypoint for
"MAV_CMD_NAV_LOITER_TIME"	19	"Loiter around this waypoint for
"MAV_CMD_NAV_RETURN_TO_LAUNCH"	20	"Return to launch location"
"MAV_CMD_NAV_LAND"	21	"Land at location"
"MAV_CMD_NAV_TAKEOFF"	22	"Takeoff from ground / hand"
"MAV_CMD_NAV_LAND_LOCAL"	23	"Land at local position (local fr
"MAV_CMD_NAV_TAKEOFF_LOCAL"	24	"Takeoff from local position (loc
"MAV_CMD_NAV_FOLLOW"	25	"Vehicle following, i.e. this way
"MAV_CMD_NAV_CONTINUE_AND_CHANGE_ALT"	30	"Continue on the current course a
"MAV_CMD_NAV_LOITER_TO_ALT"	31	"Begin loiter at the specified La

```
"MAV_CMD_DO_FOLLOW"           32      "Being following a target"  
"MAV_CMD_DO_FOLLOW_REPOSITION" 33      "Reposition the MAV after a follow"  
"MAV_CMD_DO_ORBIT"           34      "Start orbiting on the circumference"  
"MAV_CMD_NAV_ROI"            80      "Sets the region of interest (ROI)"  
:
```

Query the dialect for a specific message ID. Create a blank MAVLink message using the message ID.

```
info = msginfo(dialect, "HEARTBEAT")
```

```
info=1x4 table
```

MessageID	MessageName	
0	"HEARTBEAT"	"The heartbeat message shows that a system is present and available"

```
msg = createmsg(dialect, info.MessageID);
```

Input Arguments

dialect — MAVLink dialect

mavlinkdialect object

MAVLink dialect, specified as a `mavlinkdialect` object. The dialect specifies the message structure for the MAVLink protocol.

msgID — Message ID

positive integer | string

Message ID, specified as either a positive integer or string. If specified as an integer, the message definition with the matching ID from the `dialect` is returned. If specified as a string, the message with the matching name is returned.

Output Arguments

msg — MAVLink message

structure

MAVLink message, returned as a structure with the fields:

- **MsgID**: Positive integer for message ID.
- **Payload**: Structure containing fields for the specific message definition.

See Also

Functions

`createcmd` | `enum2num` | `enuminfo` | `msginfo` | `num2enum`

Objects

`mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `mavlinksub`

Topics

“Use a MAVLink Parameter Protocol for Tuning UAV Parameters in MATLAB”

Introduced in R2019a

enum2num

Enum value for given entry

Syntax

```
enumValue = enum2num(dialect,enum,entry)
```

Description

`enumValue = enum2num(dialect,enum,entry)` returns the value for the given entry in the enum.

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Examples

Parse and Use MAVLink Dialect

This example shows how to parse a MAVLink XML file and create messages and commands from the definitions.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Parse and store the MAVLink dialect XML. Specify the XML path. The default "common.xml" dialect is provided. This XML file contains all the message and enum definitions.

```
dialect = mavlinkdialect("common.xml");
```

Create a MAVLink command from the MAV_CMD enum, which is an enum of MAVLink commands to send to the UAV. Specify the setting as "int" or "long", and the type as an integer or string.

```
cmdMsg = createcmd(dialect, "long", 22)
```

```
cmdMsg = struct with fields:
    MsgID: 76
    Payload: [1x1 struct]
```

Verify the command name using num2enum. Command 22 is a take-off command for the UAV. You can convert back to an ID using enum2num. Your dialect can contain many different enums with different names and IDs.

```
cmdName = num2enum(dialect, "MAV_CMD", 22)
```

```
cmdName =
"MAV_CMD_NAV_TAKEOFF"
```

```
cmdID = enum2num(dialect, "MAV_CMD", cmdName)
```

```
cmdID = 22
```

Use enuminfo to view the table of the MAV_CMD enum entries.

```
info = enuminfo(dialect, "MAV_CMD");
info.Entries{:}
```

```
ans=133x3 table
```

Name	Value	
"MAV_CMD_NAV_WAYPOINT"	16	"Navigate to waypoint."
"MAV_CMD_NAV_LOITER_UNLIM"	17	"Loiter around this waypoint an u
"MAV_CMD_NAV_LOITER_TURNS"	18	"Loiter around this waypoint for
"MAV_CMD_NAV_LOITER_TIME"	19	"Loiter around this waypoint for
"MAV_CMD_NAV_RETURN_TO_LAUNCH"	20	"Return to launch location"
"MAV_CMD_NAV_LAND"	21	"Land at location"
"MAV_CMD_NAV_TAKEOFF"	22	"Takeoff from ground / hand"
"MAV_CMD_NAV_LAND_LOCAL"	23	"Land at local position (local fr
"MAV_CMD_NAV_TAKEOFF_LOCAL"	24	"Takeoff from local position (loc
"MAV_CMD_NAV_FOLLOW"	25	"Vehicle following, i.e. this way
"MAV_CMD_NAV_CONTINUE_AND_CHANGE_ALT"	30	"Continue on the current course a
"MAV_CMD_NAV_LOITER_TO_ALT"	31	"Begin loiter at the specified La

```
"MAV_CMD_DO_FOLLOW"           32      "Being following a target"  
"MAV_CMD_DO_FOLLOW_REPOSITION" 33      "Reposition the MAV after a follow"  
"MAV_CMD_DO_ORBIT"           34      "Start orbiting on the circumference"  
"MAV_CMD_NAV_ROI"            80      "Sets the region of interest (ROI)"  
:
```

Query the dialect for a specific message ID. Create a blank MAVLink message using the message ID.

```
info = msginfo(dialect, "HEARTBEAT")
```

```
info=1x4 table  
  MessageID  MessageName  
-----  
          0      "HEARTBEAT"      "The heartbeat message shows that a system is present and  
operational"
```

```
msg = createmsg(dialect, info.MessageID);
```

Input Arguments

dialect — MAVLink dialect

mavlinkdialect object

MAVLink dialect, specified as a mavlinkdialect object, which contains a parsed dialect XML for MAVLink message definitions.

enum — MAVLink enum name

string

MAVLink enum name, specified as a string.

entry — MAVLink enum entry name

string

MAVLink enum entry name, specified as a string.

Output Arguments

enumValue — Enum value

integer

Enum value, returned as an integer.

See Also

[enuminfo](#) | [mavlinkclient](#) | [mavlinkdialect](#) | [mavlinkio](#) | [mavlinksub](#) | [msginfo](#)
| [num2enum](#)

External Websites

[MAVLink Developer Guide](#)

Introduced in R2019a

enuminfo

Enum definition for enum ID

Syntax

```
enumTable = enuminfo(dialect,enumID)
```

Description

`enumTable = enuminfo(dialect,enumID)` returns a table detailing the enumeration definition based on the given `enumID`.

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Examples

Parse and Use MAVLink Dialect

This example shows how to parse a MAVLink XML file and create messages and commands from the definitions.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Parse and store the MAVLink dialect XML. Specify the XML path. The default "common.xml" dialect is provided. This XML file contains all the message and enum definitions.

```
dialect = mavlinkdialect("common.xml");
```

Create a MAVLink command from the MAV_CMD enum, which is an enum of MAVLink commands to send to the UAV. Specify the setting as "int" or "long", and the type as an integer or string.

```
cmdMsg = createcmd(dialect, "long", 22)
```

```
cmdMsg = struct with fields:
    MsgID: 76
    Payload: [1x1 struct]
```

Verify the command name using num2enum. Command 22 is a take-off command for the UAV. You can convert back to an ID using enum2num. Your dialect can contain many different enums with different names and IDs.

```
cmdName = num2enum(dialect, "MAV_CMD", 22)
```

```
cmdName =
"MAV_CMD_NAV_TAKEOFF"
```

```
cmdID = enum2num(dialect, "MAV_CMD", cmdName)
```

```
cmdID = 22
```

Use enuminfo to view the table of the MAV_CMD enum entries.

```
info = enuminfo(dialect, "MAV_CMD");
info.Entries{:}
```

```
ans=133x3 table
```

Name	Value	
"MAV_CMD_NAV_WAYPOINT"	16	"Navigate to waypoint."
"MAV_CMD_NAV_LOITER_UNLIM"	17	"Loiter around this waypoint an u
"MAV_CMD_NAV_LOITER_TURNS"	18	"Loiter around this waypoint for
"MAV_CMD_NAV_LOITER_TIME"	19	"Loiter around this waypoint for
"MAV_CMD_NAV_RETURN_TO_LAUNCH"	20	"Return to launch location"
"MAV_CMD_NAV_LAND"	21	"Land at location"
"MAV_CMD_NAV_TAKEOFF"	22	"Takeoff from ground / hand"
"MAV_CMD_NAV_LAND_LOCAL"	23	"Land at local position (local fr
"MAV_CMD_NAV_TAKEOFF_LOCAL"	24	"Takeoff from local position (loc
"MAV_CMD_NAV_FOLLOW"	25	"Vehicle following, i.e. this way
"MAV_CMD_NAV_CONTINUE_AND_CHANGE_ALT"	30	"Continue on the current course a
"MAV_CMD_NAV_LOITER_TO_ALT"	31	"Begin loiter at the specified La

```
"MAV_CMD_DO_FOLLOW"           32      "Being following a target"  
"MAV_CMD_DO_FOLLOW_REPOSITION" 33      "Reposition the MAV after a follow"  
"MAV_CMD_DO_ORBIT"           34      "Start orbiting on the circumference"  
"MAV_CMD_NAV_ROI"            80      "Sets the region of interest (ROI)"  
:
```

Query the dialect for a specific message ID. Create a blank MAVLink message using the message ID.

```
info = msginfo(dialect, "HEARTBEAT")
```

```
info=1x4 table  
  MessageID  MessageName  
-----  
          0      "HEARTBEAT"      "The heartbeat message shows that a system is present a
```

```
msg = createmsg(dialect, info.MessageID);
```

Input Arguments

dialect — MAVLink dialect

mavlinkdialect object

MAVLink dialect, specified as a mavlinkdialect object, which contains a parsed dialect XML for MAVLink message definitions.

enumID — MAVLink enum ID

string

MAVLink enum ID, specified as a string.

Output Arguments

enumTable — Enum definition

table

Enum definition, returned as a table containing the message ID, name, description, and entries. The entries are given as another table with their own information listed. All this information is defined by dialect XML file.

See Also

`mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `mavlinksub` | `msginfo`

External Websites

MAVLink Developer Guide

Introduced in R2019a

msginfo

Message definition for message ID

Syntax

```
msgTable = msginfo(dialect,messageID)
```

Description

`msgTable = msginfo(dialect,messageID)` returns a table detailing the message definition based on the given `messageID`.

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Examples

Parse and Use MAVLink Dialect

This example shows how to parse a MAVLink XML file and create messages and commands from the definitions.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Parse and store the MAVLink dialect XML. Specify the XML path. The default "common.xml" dialect is provided. This XML file contains all the message and enum definitions.

```
dialect = mavlinkdialect("common.xml");
```

Create a MAVLink command from the MAV_CMD enum, which is an enum of MAVLink commands to send to the UAV. Specify the setting as "int" or "long", and the type as an integer or string.

```
cmdMsg = createcmd(dialect, "long", 22)

cmdMsg = struct with fields:
    MsgID: 76
    Payload: [1x1 struct]
```

Verify the command name using num2enum. Command 22 is a take-off command for the UAV. You can convert back to an ID using enum2num. Your dialect can contain many different enums with different names and IDs.

```
cmdName = num2enum(dialect, "MAV_CMD", 22)

cmdName =
"MAV_CMD_NAV_TAKEOFF"

cmdID = enum2num(dialect, "MAV_CMD", cmdName)

cmdID = 22
```

Use enuminfo to view the table of the MAV_CMD enum entries.

```
info = enuminfo(dialect, "MAV_CMD");
info.Entries{:}
```

```
ans=133x3 table
```

Name	Value	
"MAV_CMD_NAV_WAYPOINT"	16	"Navigate to waypoint."
"MAV_CMD_NAV_LOITER_UNLIM"	17	"Loiter around this waypoint an u
"MAV_CMD_NAV_LOITER_TURNS"	18	"Loiter around this waypoint for
"MAV_CMD_NAV_LOITER_TIME"	19	"Loiter around this waypoint for
"MAV_CMD_NAV_RETURN_TO_LAUNCH"	20	"Return to launch location"
"MAV_CMD_NAV_LAND"	21	"Land at location"
"MAV_CMD_NAV_TAKEOFF"	22	"Takeoff from ground / hand"
"MAV_CMD_NAV_LAND_LOCAL"	23	"Land at local position (local fr
"MAV_CMD_NAV_TAKEOFF_LOCAL"	24	"Takeoff from local position (loc
"MAV_CMD_NAV_FOLLOW"	25	"Vehicle following, i.e. this way
"MAV_CMD_NAV_CONTINUE_AND_CHANGE_ALT"	30	"Continue on the current course a
"MAV_CMD_NAV_LOITER_TO_ALT"	31	"Begin loiter at the specified La

```
"MAV_CMD_DO_FOLLOW"           32      "Being following a target"  
"MAV_CMD_DO_FOLLOW_REPOSITION" 33      "Reposition the MAV after a follow"  
"MAV_CMD_DO_ORBIT"           34      "Start orbiting on the circumference"  
"MAV_CMD_NAV_ROI"            80      "Sets the region of interest (ROI)"  
:
```

Query the dialect for a specific message ID. Create a blank MAVLink message using the message ID.

```
info = msginfo(dialect, "HEARTBEAT")
```

```
info=1x4 table  
  MessageID  MessageName  
-----  
      0      "HEARTBEAT"      "The heartbeat message shows that a system is present and  
operational"
```

```
msg = createmsg(dialect, info.MessageID);
```

Input Arguments

dialect — MAVLink dialect

mavlinkdialect object

MAVLink dialect, specified as a mavlinkdialect object, which contains a parsed dialect XML for MAVLink message definitions.

messageID — MAVLink message ID or name

integer | string

MAVLink message ID or name, specified as an integer or string.

Output Arguments

msgTable — Message definition

table

Message definition, returned as a table containing the message ID, name, description, and fields. The fields are given as another table with their own information. All this information is defined by dialect XML file.

See Also

`createmsg` | `enuminfo` | `mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `mavlinksub`

External Websites

MAVLink Developer Guide

Introduced in R2019a

connect

Connect to MAVLink clients through UDP port

Syntax

```
connectionName = connect(mavlink,"UDP")  
connectionName = connect( ____,Name,Value)
```

Description

`connectionName = connect(mavlink,"UDP")` connects to the `mavlinkio` client through a UDP port.

`connectionName = connect(____,Name,Value)` additionally specifies arguments using name-value pairs.

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1,Value1, . . . ,NameN,ValueN`.

Examples

Store MAVLink Client Information

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client.

```
mavlink = mavlinkio("common.xml");  
connect(mavlink,"UDP");
```

Create the object for storing the client information. Specify the system and component ID.

```

client = mavlinkclient(mavlink,1,1)

client =
  mavlinkclient with properties:

      SystemID: 1
      ComponentID: 1
      ComponentType: "Unknown"
      AutopilotType: "Unknown"

```

Disconnect from client.

```
disconnect(mavlink)
```

Work with MAVLink Connection

This example shows how to connect to MAVLink clients, inspect the list of topics, connections, and clients, and send messages through UDP ports using the MAVLink communication protocol.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client using the "common.xml" dialect. This local client communicates with any other clients through a UDP port.

```

dialect = mavlinkdialect("common.xml");
mavlink = mavlinkio(dialect);
connect(mavlink,"UDP")

```

```

ans =
"Connection1"

```

You can list all the active clients, connections, and topics for the MAVLink connection. Currently, there is only one client connection and no topics have received messages.

```
listClients(mavlink)
```

```

ans=1x4 table
  SystemID   ComponentID   ComponentType   AutopilotType
  _____   _____   _____   _____

```

```
255          1          "MAV_TYPE_GCS"      "MAV_AUTOPILOT_INVALID"
```

```
listConnections(mavlink)
```

```
ans=1x2 table
```

ConnectionName	ConnectionInfo
"Connection1"	"UDP@0.0.0.0:58715"

```
listTopics(mavlink)
```

```
ans =
```

```
0x5 empty table
```

Create a subscriber for receiving messages on the client. This subscriber listens for the "HEARTBEAT" message topic with ID equal to 0.

```
sub = mavlinksub(mavlink,0);
```

Create a "HEARTBEAT" message using the `mavlinkdialect` object. Specify payload information and send the message over the MAVLink client.

```
msg = createmsg(dialect,"HEARTBEAT");  
msg.Payload.type(:) = enum2num(dialect,'MAV_TYPE','MAV_TYPE_QUADROTOR');  
sendmsg(mavlink,msg)
```

Disconnect from the client.

```
disconnect(mavlink)
```

Input Arguments

mavlink — MAVLink client connection

mavlinkio object

MAVLink client connection, specified as a mavlinkio object.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

Example: `'LocalPort',12345`

ConnectionName — Identifying connection name

`"Connection#" (default) | string scalar`

Identifying connection name, specified as the comma-separated pair consisting of `'ConnectionName'` and a string scalar. The default connection name is `"Connection#"`.

Data Types: `string`

LocalPort — Local port for UDP connection

`0 (default) | numeric scalar`

Local port for UDP connection, specified as a numeric scalar. A value of `0` binds to a random open port.

Data Types: `double`

Output Arguments

connectionName — Identifying connection name

`"Connection#" (default) | string scalar`

Identifying connection name, specified as a string scalar. The default connection name is `"Connection#"`, where `#` is an integer starting at 1 and increases with each new connection created.

Data Types: `string`

See Also

`disconnect` | `mavlinkclient` | `mavlinkdialect` | `mavlinksub`

Topics

“Use a MAVLink Parameter Protocol for Tuning UAV Parameters in MATLAB”

External Websites

MAVLink Developer Guide

Introduced in R2019a

disconnect

Disconnect from MAVLink clients

Syntax

```
disconnect(mavlink)
disconnect(mavlink,connection)
```

Description

`disconnect(mavlink)` disconnects from all MAVLink clients connected through the `mavlinkio` client.

`disconnect(mavlink,connection)` disconnects from the specific client connection name.

Examples

Store MAVLink Client Information

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client.

```
mavlink = mavlinkio("common.xml");
connect(mavlink,"UDP");
```

Create the object for storing the client information. Specify the system and component ID.

```
client = mavlinkclient(mavlink,1,1)
```

```
client =
    mavlinkclient with properties:
```

```
SystemID: 1
ComponentID: 1
ComponentType: "Unknown"
AutopilotType: "Unknown"
```

Disconnect from client.

```
disconnect(mavlink)
```

Work with MAVLink Connection

This example shows how to connect to MAVLink clients, inspect the list of topics, connections, and clients, and send messages through UDP ports using the MAVLink communication protocol.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client using the "common.xml" dialect. This local client communicates with any other clients through a UDP port.

```
dialect = mavlinkdialect("common.xml");
mavlink = mavlinkio(dialect);
connect(mavlink, "UDP")
```

```
ans =
"Connection1"
```

You can list all the active clients, connections, and topics for the MAVLink connection. Currently, there is only one client connection and no topics have received messages.

```
listClients(mavlink)
```

```
ans=1x4 table
```

SystemID	ComponentID	ComponentType	AutopilotType
255	1	"MAV_TYPE_GCS"	"MAV_AUTOPILOT_INVALID"

```
listConnections(mavlink)
```

```
ans=1x2 table
  ConnectionName      ConnectionInfo
  _____      _____
  "Connection1"      "UDP@0.0.0.0:58715"
```

```
listTopics(mavlink)
```

```
ans =
```

```
0x5 empty table
```

Create a subscriber for receiving messages on the client. This subscriber listens for the "HEARTBEAT" message topic with ID equal to 0.

```
sub = mavlinksub(mavlink,0);
```

Create a "HEARTBEAT" message using the `mavlinkdialect` object. Specify payload information and send the message over the MAVLink client.

```
msg = createmsg(dialect,"HEARTBEAT");
msg.Payload.type(:) = enum2num(dialect,'MAV_TYPE','MAV_TYPE_QUADROTOR');
sendmsg(mavlink,msg)
```

Disconnect from the client.

```
disconnect(mavlink)
```

Input Arguments

mavlink — MAVLink client connection

`mavlinkio` object

MAVLink client connection, specified as a `mavlinkio` object.

connection — Connection name

string scalar

Connection name, specified as a string scalar.

See Also

`connect` | `mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `mavlinksub`

Topics

“Use a MAVLink Parameter Protocol for Tuning UAV Parameters in MATLAB”

External Websites

MAVLink Developer Guide

Introduced in R2019a

listClients

List all connected MAVLink clients

Syntax

```
clientTable = listConnections(mavlink)
```

Description

`clientTable = listConnections(mavlink)` lists all active connections for the mavlinkio client connection.

Examples

Work with MAVLink Connection

This example shows how to connect to MAVLink clients, inspect the list of topics, connections, and clients, and send messages through UDP ports using the MAVLink communication protocol.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client using the "common.xml" dialect. This local client communicates with any other clients through a UDP port.

```
dialect = mavlinkdialect("common.xml");  
mavlink = mavlinkio(dialect);  
connect(mavlink, "UDP")
```

```
ans =  
"Connection1"
```

You can list all the active clients, connections, and topics for the MAVLink connection. Currently, there is only one client connection and no topics have received messages.

```
listClients(mavlink)
```

```
ans=1x4 table
```

<u>SystemID</u>	<u>ComponentID</u>	<u>ComponentType</u>	<u>AutopilotType</u>
255	1	"MAV_TYPE_GCS"	"MAV_AUTOPILOT_INVALID"

```
listConnections(mavlink)
```

```
ans=1x2 table
```

<u>ConnectionName</u>	<u>ConnectionInfo</u>
"Connection1"	"UDP@0.0.0.0:58715"

```
listTopics(mavlink)
```

```
ans =
```

```
0x5 empty table
```

Create a subscriber for receiving messages on the client. This subscriber listens for the "HEARTBEAT" message topic with ID equal to 0.

```
sub = mavlinksub(mavlink,0);
```

Create a "HEARTBEAT" message using the `mavlinkdialect` object. Specify payload information and send the message over the MAVLink client.

```
msg = createmsg(dialect,"HEARTBEAT");  
msg.Payload.type(:) = enum2num(dialect,'MAV_TYPE','MAV_TYPE_QUADROTOR');  
sendmsg(mavlink,msg)
```

Disconnect from the client.

```
disconnect(mavlink)
```

Input Arguments

mavlink — MAVLink client connection

mavlinkio object

MAVLink client connection, specified as a mavlinkio object.

Output Arguments

clientTable — Active client info

table

Active connection info, returned as a table with SystemID, ComponentID, ConnectionType, and AutopilotType fields for each active client.

See Also

[connect](#) | [listConnections](#) | [listTopics](#) | [mavlinkclient](#) | [mavlinkdialect](#) | [mavlinkio](#) | [mavlinksub](#)

External Websites

[MAVLink Developer Guide](#)

Introduced in R2019a

listConnections

List all active MAVLink connections

Syntax

```
connectionTable = listConnections(mavlink)
```

Description

`connectionTable = listConnections(mavlink)` lists all active connections for the mavlinkio client connection.

Examples

Work with MAVLink Connection

This example shows how to connect to MAVLink clients, inspect the list of topics, connections, and clients, and send messages through UDP ports using the MAVLink communication protocol.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client using the "common.xml" dialect. This local client communicates with any other clients through a UDP port.

```
dialect = mavlinkdialect("common.xml");  
mavlink = mavlinkio(dialect);  
connect(mavlink, "UDP")
```

```
ans =  
"Connection1"
```

You can list all the active clients, connections, and topics for the MAVLink connection. Currently, there is only one client connection and no topics have received messages.

```
listClients(mavlink)
```

```
ans=1x4 table
```

SystemID	ComponentID	ComponentType	AutopilotType
255	1	"MAV_TYPE_GCS"	"MAV_AUTOPILOT_INVALID"

```
listConnections(mavlink)
```

```
ans=1x2 table
```

ConnectionName	ConnectionInfo
"Connection1"	"UDP@0.0.0.0:58715"

```
listTopics(mavlink)
```

```
ans =
```

```
0x5 empty table
```

Create a subscriber for receiving messages on the client. This subscriber listens for the "HEARTBEAT" message topic with ID equal to 0.

```
sub = mavlinksub(mavlink,0);
```

Create a "HEARTBEAT" message using the `mavlinkdialect` object. Specify payload information and send the message over the MAVLink client.

```
msg = createmsg(dialect,"HEARTBEAT");
msg.Payload.type(:) = enum2num(dialect,'MAV_TYPE','MAV_TYPE_QUADROTOR');
sendmsg(mavlink,msg)
```

Disconnect from the client.

```
disconnect(mavlink)
```

Input Arguments

mavlink — MAVLink client connection

mavlinkio object

MAVLink client connection, specified as a mavlinkio object.

Output Arguments

connectionTable — Active connection info

table

Active connection info, returned as a table with ConnectionName and ConnectionInfo fields for each active connection.

See Also

[connect](#) | [listClients](#) | [listTopics](#) | [mavlinkclient](#) | [mavlinkdialect](#) | [mavlinkio](#) | [mavlinksub](#)

External Websites

[MAVLink Developer Guide](#)

Introduced in R2019a

listTopics

List all topics received by MAVLink client

Syntax

```
topicTable = listTopics(mavlink)
```

Description

`topicTable = listTopics(mavlink)` returns a table of topics received on the connected mavlinkio client with information on the message frequency.

Examples

Work with MAVLink Connection

This example shows how to connect to MAVLink clients, inspect the list of topics, connections, and clients, and send messages through UDP ports using the MAVLink communication protocol.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client using the "common.xml" dialect. This local client communicates with any other clients through a UDP port.

```
dialect = mavlinkdialect("common.xml");  
mavlink = mavlinkio(dialect);  
connect(mavlink, "UDP")
```

```
ans =  
"Connection1"
```

You can list all the active clients, connections, and topics for the MAVLink connection. Currently, there is only one client connection and no topics have received messages.

```
listClients(mavlink)
```

```
ans=1×4 table
```

<u>SystemID</u>	<u>ComponentID</u>	<u>ComponentType</u>	<u>AutopilotType</u>
255	1	"MAV_TYPE_GCS"	"MAV_AUTOPILOT_INVALID"

```
listConnections(mavlink)
```

```
ans=1×2 table
```

<u>ConnectionName</u>	<u>ConnectionInfo</u>
"Connection1"	"UDP@0.0.0.0:58715"

```
listTopics(mavlink)
```

```
ans =
```

```
0×5 empty table
```

Create a subscriber for receiving messages on the client. This subscriber listens for the "HEARTBEAT" message topic with ID equal to 0.

```
sub = mavlinksub(mavlink,0);
```

Create a "HEARTBEAT" message using the `mavlinkdialect` object. Specify payload information and send the message over the MAVLink client.

```
msg = createmsg(dialect,"HEARTBEAT");  
msg.Payload.type(:) = enum2num(dialect,'MAV_TYPE','MAV_TYPE_QUADROTOR');  
sendmsg(mavlink,msg)
```

Disconnect from the client.

```
disconnect(mavlink)
```

Input Arguments

mavlink — MAVLink client connection

mavlinkio object

MAVLink client connection, specified as a mavlinkio object.

Output Arguments

topicTable — Topic info

table

Topic info, returned as a table with SystemID, ComponentID, MessageID, MessageName, and MessageFrequency fields for each topic receiving messages on the client.

See Also

[connect](#) | [listClients](#) | [listConnections](#) | [mavlinkclient](#) | [mavlinkdialect](#) | [mavlinkio](#) | [mavlinksub](#)

External Websites

[MAVLink Developer Guide](#)

Introduced in R2019a

sendmsg

Send MAVLink message

Syntax

```
sendmsg(mavlink,msg)
sendmsg(mavlink,msg,client)
```

Description

`sendmsg(mavlink,msg)` sends a message to all connected MAVLink clients in the `mavlinkio` object.

`sendmsg(mavlink,msg,client)` sends a message to the MAVLink client specified as a `mavlinkclient` object. If the client is not connected, no message is sent.

Examples

Work with MAVLink Connection

This example shows how to connect to MAVLink clients, inspect the list of topics, connections, and clients, and send messages through UDP ports using the MAVLink communication protocol.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client using the "common.xml" dialect. This local client communicates with any other clients through a UDP port.

```
dialect = mavlinkdialect("common.xml");
mavlink = mavlinkio(dialect);
connect(mavlink,"UDP")
```

```
ans =
"Connection1"
```

You can list all the active clients, connections, and topics for the MAVLink connection. Currently, there is only one client connection and no topics have received messages.

```
listClients(mavlink)
```

```
ans=1x4 table
  SystemID  ComponentID  ComponentType  AutopilotType
  _____  _____  _____  _____
      255         1      "MAV_TYPE_GCS"  "MAV_AUTOPILOT_INVALID"
```

```
listConnections(mavlink)
```

```
ans=1x2 table
  ConnectionName  ConnectionInfo
  _____  _____
  "Connection1"  "UDP@0.0.0.0:58715"
```

```
listTopics(mavlink)
```

```
ans =
  0x5 empty table
```

Create a subscriber for receiving messages on the client. This subscriber listens for the "HEARTBEAT" message topic with ID equal to 0.

```
sub = mavlinksub(mavlink,0);
```

Create a "HEARTBEAT" message using the `mavlinkdialect` object. Specify payload information and send the message over the MAVLink client.

```
msg = createmsg(dialect,"HEARTBEAT");
msg.Payload.type(:) = enum2num(dialect,'MAV_TYPE','MAV_TYPE_QUADROTOR');
sendmsg(mavlink,msg)
```

Disconnect from the client.

```
disconnect(mavlink)
```

Input Arguments

mavlink — MAVLink client connection

mavlinkio object

MAVLink client connection, specified as a mavlinkio object.

msg — MAVLink message

structure

MAVLink message, specified as a structure with the fields:

- **MsgID**: Positive integer for message ID.
- **Payload**: Structure containing fields for the specific message definition.

To create a blank message, use the `createmsg` with a `mavlinkdialect` object.

client — MAVLink client information

mavlinkclient object

MAVLink client information, specified as a mavlinkclient object.

See Also

`connect` | `listClients` | `listConnections` | `mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `mavlinksub`

Topics

“Use a MAVLink Parameter Protocol for Tuning UAV Parameters in MATLAB”

External Websites

MAVLink Developer Guide

Introduced in R2019a

serializemsg

Serialize MAVLink message to binary buffer

Syntax

```
buffer = serializemsg(mavlink,msg)
```

Description

`buffer = serializemsg(mavlink,msg)` serializes a MAVLink message structure to a binary buffer for transmission. This buffer is for manual transmission using your own communication channel. To send over UDP, see `sendmsg`.

Input Arguments

mavlink — MAVLink client connection

`mavlinkio` object

MAVLink client connection, specified as a `mavlinkio` object.

msg — MAVLink message

structure

MAVLink message, specified as a structure with the fields:

- **MsgID**: Positive integer for message ID.
- **Payload**: Structure containing fields for the specific message definition.

To create a blank message, use the `createmsg` with a `mavlinkdialect` object.

Output Arguments

buffer — Serialized message

vector of `uint8` integers

Serialized message, returned as vector of `uint8` integers.

Data Types: `uint8`

See Also

`connect` | `listClients` | `listConnections` | `mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `mavlinksub` | `sendmsg`

External Websites

MAVLink Developer Guide

Introduced in R2019a

sendudpmsg

Send MAVLink message to UDP port

Syntax

```
sendudpmsg(mavlink, msg, remoteHost, remotePort)
```

Description

`sendudpmsg(mavlink, msg, remoteHost, remotePort)` sends the message, `msg`, to the remote UDP port specified by the host name, `remoteHost`, and port number, `remotePort`.

Input Arguments

mavlink — MAVLink client connection

`mavlinkio` object

MAVLink client connection, specified as a `mavlinkio` object.

msg — MAVLink message

structure

MAVLink message, specified as a structure with the fields:

- **MsgID**: Positive integer for message ID.
- **Payload**: Structure containing fields for the specific message definition.

To create a blank message, use the `createmsg` with a `mavlinkdialect` object.

remoteHost — Remote host IP address

string

Remote host IP address, specified as a string.

Example: "192.168.1.10"

remotePort — Remote host port

five-digit numeric scalar

Remote host IP address, specified as a five-digit numeric scalar.

Example: 14550

See Also

[connect](#) | [listClients](#) | [listConnections](#) | [mavlinkclient](#) | [mavlinkdialect](#) | [mavlinkio](#) | [mavlinksub](#) | [sendmsg](#)

Topics

"Use a MAVLink Parameter Protocol for Tuning UAV Parameters in MATLAB"

External Websites

[MAVLink Developer Guide](#)

Introduced in R2019a

latestmsgs

Received messages from MAVLink subscriber

Syntax

```
msgs = latestmsgs(sub,count)
```

Description

`msgs = latestmsgs(sub,count)` returns the latest received messages for the `mavlinksub` object. The messages are in a structure array in reverse-chronological order with the most recent being first. If `count` is larger than the number of stored messages, the structure array contains only the number of stored messages.

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Examples

Subscribe to MAVLink Topic

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Connect to a MAVLink client.

```
mavlink = mavlinkio("common.xml")

mavlink =
    mavlinkio with properties:
        Dialect: [1x1 mavlinkdialect]
        LocalClient: [1x1 struct]
```

```
connect(mavlink, "UDP")
```

```
ans =  
"Connection1"
```

Get the client information.

```
client = mavlinkclient(mavlink,1,1);
```

Subscribe to the "HEARTBEAT" topic.

```
heartbeat = mavlinksub(mavlink,client, 'HEARTBEAT');
```

Get the latest message. You must wait for a message to be received. Currently, no heartbeat message has been received on the mavlink object.

```
latestmsgs(heartbeat,1)
```

```
ans =
```

```
  1x0 empty struct array with fields:
```

```
  MsgID  
  SystemID  
  ComponentID  
  Payload  
  Seq
```

Disconnect from client.

```
disconnect(mavlink)
```

Input Arguments

sub — MAVLink subscriber

mavlinksub object

MAVLink subscriber, specified as a mavlinksub object.

count — Number of messages

positive integer

Number of messages, specified as a positive integer. If `count` is larger than the number of stored messages, the structure array is padded with empty structs.

Output Arguments

msgs — Recently received messages

structure array

Recently received messages, returned as a structure array. Each structure has the fields:

- `MsgID`
- `SystemID`
- `ComponentID`
- `Payload`

The `Payload` is a structure defined by the message definition for the MAVLink dialect.

If `count` is larger than the number of stored messages, the structure array contains only the number of stored messages..

See Also

`mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `mavlinksub`

Introduced in R2019a

num2enum

Enum entry for given value

Syntax

```
entry = num2enum(dialect,enum,enumValue)
```

Description

`entry = num2enum(dialect,enum,enumValue)` returns the value for the given entry in the enum.

Note This function requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

Examples

Parse and Use MAVLink Dialect

This example shows how to parse a MAVLink XML file and create messages and commands from the definitions.

NOTE: This example requires you to install the UAV Library for Robotics System Toolbox®. Call `roboticsAddons` to open the Add-ons Explorer and install the library.

Parse and store the MAVLink dialect XML. Specify the XML path. The default "common.xml" dialect is provided. This XML file contains all the message and enum definitions.

```
dialect = mavlinkdialect("common.xml");
```

Create a MAVLink command from the MAV_CMD enum, which is an enum of MAVLink commands to send to the UAV. Specify the setting as "int" or "long", and the type as an integer or string.

```
cmdMsg = createcmd(dialect, "long", 22)
```

```
cmdMsg = struct with fields:
    MsgID: 76
    Payload: [1x1 struct]
```

Verify the command name using num2enum. Command 22 is a take-off command for the UAV. You can convert back to an ID using enum2num. Your dialect can contain many different enums with different names and IDs.

```
cmdName = num2enum(dialect, "MAV_CMD", 22)
```

```
cmdName =
"MAV_CMD_NAV_TAKEOFF"
```

```
cmdID = enum2num(dialect, "MAV_CMD", cmdName)
```

```
cmdID = 22
```

Use enuminfo to view the table of the MAV_CMD enum entries.

```
info = enuminfo(dialect, "MAV_CMD");
info.Entries{:}
```

```
ans=133x3 table
```

Name	Value	
"MAV_CMD_NAV_WAYPOINT"	16	"Navigate to waypoint."
"MAV_CMD_NAV_LOITER_UNLIM"	17	"Loiter around this waypoint an u
"MAV_CMD_NAV_LOITER_TURNS"	18	"Loiter around this waypoint for
"MAV_CMD_NAV_LOITER_TIME"	19	"Loiter around this waypoint for
"MAV_CMD_NAV_RETURN_TO_LAUNCH"	20	"Return to launch location"
"MAV_CMD_NAV_LAND"	21	"Land at location"
"MAV_CMD_NAV_TAKEOFF"	22	"Takeoff from ground / hand"
"MAV_CMD_NAV_LAND_LOCAL"	23	"Land at local position (local fr
"MAV_CMD_NAV_TAKEOFF_LOCAL"	24	"Takeoff from local position (loc
"MAV_CMD_NAV_FOLLOW"	25	"Vehicle following, i.e. this way
"MAV_CMD_NAV_CONTINUE_AND_CHANGE_ALT"	30	"Continue on the current course a
"MAV_CMD_NAV_LOITER_TO_ALT"	31	"Begin loiter at the specified La

```
"MAV_CMD_DO_FOLLOW"           32      "Being following a target"  
"MAV_CMD_DO_FOLLOW_REPOSITION" 33      "Reposition the MAV after a follow"  
"MAV_CMD_DO_ORBIT"           34      "Start orbiting on the circumference"  
"MAV_CMD_NAV_ROI"            80      "Sets the region of interest (ROI)"  
:
```

Query the dialect for a specific message ID. Create a blank MAVLink message using the message ID.

```
info = msginfo(dialect, "HEARTBEAT")
```

```
info=1x4 table  
  MessageID  MessageName  
-----  
          0      "HEARTBEAT"      "The heartbeat message shows that a system is present and  
operational"
```

```
msg = createmsg(dialect, info.MessageID);
```

Input Arguments

dialect — MAVLink dialect

mavlinkdialect object

MAVLink dialect, specified as a mavlinkdialect object, which contains a parsed dialect XML for MAVLink message definitions.

enum — MAVLink enum name

string

MAVLink enum name, specified as a string.

enumValue — Enum value

integer

Enum value, specified as an integer.

Output Arguments

entry — MAVLink enum entry name

string

MAVLink enum entry name, returned as a string.

See Also

enum2num | enuminfo | mavlinkclient | mavlinkdialect | mavlinkio |
mavlinksub | msginfo

External Websites

MAVLink Developer Guide

Introduced in R2019a

readmsg

Read specific messages from TLOG file

Syntax

```
msgTable = readmsg(tlogReader)
msgTable = readmsg(tlogReader,Name,Value)
```

Description

`msgTable = readmsg(tlogReader)` reads all message data from the specified `mavlinkdialect` object and returns a table, `msgTable`, that contains all the messages separated by message type, system ID, and component ID.

`msgTable = readmsg(tlogReader,Name,Value)` reads specific messages based on the specified name-value pairs for filtering specific properties of the messages. You can filter by message name, system ID, component ID, and time.

Examples

Read Messages from MAVLink TLOG File

This example shows how to load a MAVLink TLOG file and select a specific message type.

Load the TLOG file. Specify the relative path of the file name.

```
tlogReader = mavlinktlog('flight.tlog');
```

Read the 'REQUEST_DATA_STREAM' messages from the file.

```
msgData = readmsg(result, 'MessageName', 'REQUEST_DATA_STREAM');
```

Input Arguments

tlogReader — MAVLink TLOG reader

mavlinktlog object

MAVLink TLOG reader, specified as a mavlinktlog object.

Name-Value Pair Arguments

Specify optional comma-separated pairs of Name, Value arguments. Name is the argument name and Value is the corresponding value. Name must appear inside quotes. You can specify several name and value pair arguments in any order as Name1, Value1, . . . , NameN, ValueN.

Example: 'MessageID', 22

MessageName — Name of message in tlog

string scalar | character vector

Name of message in TLOG, specified as string scalar or character vector.

Data Types: char | string

SystemID — MAVLink system ID

positive integer from 1 through 255

MAVLink system ID, specified as a positive integer from 1 through 255. MAVLink protocol only supports up to 255 systems. Usually, each UAV has its own system ID, but multiple UAVs could be considered one system.

ComponentID — MAVLink component ID

positive integer from 1 through 255

MAVLink system ID, specified as a positive integer from 1 through 255.

Time — Time interval

two-element vector

Time interval between which to select messages, specified as a two-element vector in seconds.

Output Arguments

msgTable — Table of messages

table

Table of messages with columns:

- MessageID
- MessageName
- ComponentID
- SystemID
- Messages

Each row of Messages is a timetable containing the message Payload and the associated timestamp.

See Also

`mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `mavlinktlog`

Topics

“Load and Playback MAVLink TLOG”

Introduced in R2019a

deserializemsg

Deserialize MAVLink message from binary buffer

Syntax

```
msg = deserializemsg(dialect,buffer)
```

Description

`msg = deserializemsg(dialect,buffer)` deserializes binary buffer data specified in `buffer` based on the specified MAVLink dialect. If a message is received as multiple buffers, you can combine them by concatenating the vectors in the proper order to get a valid message.

Input Arguments

dialect — MAVLink dialect

`mavlinkdialect` object

MAVLink dialect, specified as a `mavlinkdialect` object, which contains a parsed dialect XML for MAVLink message definitions.

buffer — Serialized message

vector of `uint8` integers

Serialized message, specified as vector of `uint8` integers.

Data Types: `uint8`

Output Arguments

msg — MAVLink message

structure

MAVLink message, returned as a structure with the fields:

- `MsgID`: Positive integer for message ID.
- `Payload`: Structure containing fields for the specific message definition.

See Also

Functions

`createcmd` | `createmsg` | `enum2num` | `enuminfo` | `msginfo` | `num2enum`

Objects

`mavlinkclient` | `mavlinkdialect` | `mavlinkio` | `mavlinksub`

Introduced in R2019a

derivative

Time derivative of vehicle state

Syntax

```
stateDot = derivative(motionModel, state, cmds)
```

Description

`stateDot = derivative(motionModel, state, cmds)` returns the current state derivative, `stateDot`, as a three-element vector [*xDot* *yDot* *thetaDot*] if the motion model is a `bicycleKinematics`, `differentialDriveKinematics`, or `unicycleKinematics` object. It returns `state` as a four-element vector, [*xDot* *yDot* *thetaDot* *psiDot*], if the motion model is a `ackermannKinematics` object. *xDot* and *yDot* refer to the vehicle velocity, specified in meters per second. *thetaDot* is the angular velocity of the vehicle heading and *psiDot* is the angular velocity of the vehicle steering, both specified in radians per second.

Examples

Simulate Different Kinematic Models for Mobile Robots

This example shows how to model different robot kinematics models in an environment and compare them.

Define Mobile Robots with Kinematic Constraints

There are a number of ways to model the kinematics of mobile robots. All dictate how the wheel velocities are related to the robot state: [*x* *y* *theta*], as *xy*-coordinates and a robot heading, *theta*, in radians.

Unicycle Kinematic Model

The simplest way to represent mobile robot vehicle kinematics is with a unicycle model, which has a wheel speed set by a rotation about a central axle, and can pivot about its z-

axis. Both the differential-drive and bicycle kinematic models reduce down to unicycle kinematics when inputs are provided as vehicle speed and vehicle heading rate and other constraints are not considered.

```
unicycle = unicycleKinematics("VehicleInputs", "VehicleSpeedHeadingRate");
```

Differential-Drive Kinematic Model

The differential drive model uses a rear driving axle to control both vehicle speed and head rate. The wheels on the driving axle can spin in both directions. Since most mobile robots have some interface to the low-level wheel commands, this model will again use vehicle speed and heading rate as input to simplify the vehicle control.

```
diffDrive = differentialDriveKinematics("VehicleInputs", "VehicleSpeedHeadingRate");
```

To differentiate the behavior from the unicycle model, add a wheel speed velocity constraint to the differential-drive kinematic model

```
diffDrive.WheelSpeedRange = [-10 10]*2*pi;
```

Bicycle Kinematic Model

The bicycle model treats the robot as a car-like model with two axles: a rear driving axle, and a front axle that turns about the z-axis. The bicycle model works under the assumption that wheels on each axle can be modeled as a single, centered wheel, and that the front wheel heading can be directly set, like a bicycle.

```
bicycle = bicycleKinematics("VehicleInputs", "VehicleSpeedHeadingRate", "MaxSteeringAngle");
```

Other Models

The Ackermann kinematic model is a modified car-like model that assumes Ackermann steering. In most car-like vehicles, the front wheels do not turn about the same axis, but instead turn on slightly different axes to ensure that they ride on concentric circles about the center of the vehicle's turn. This difference in turning angle is called Ackermann steering, and is typically enforced by a mechanism in actual vehicles. From a vehicle and wheel kinematics standpoint, it can be enforced by treating the steering angle as a rate input.

```
carLike = ackermannKinematics;
```

Set up Simulation Parameters

These mobile robots will follow a set of waypoints that is designed to show some differences caused by differing kinematics.

```
waypoints = [0 0; 0 10; 10 10; 5 10; 11 9; 4 -5];
% Define the total time and the sample rate
sampleTime = 0.05;           % Sample time [s]
tVec = 0:sampleTime:20;     % Time array

initPose = [waypoints(1,:)'; 0]; % Initial pose (x y theta)
```

Create a Vehicle Controller

The vehicles follow a set of waypoints using a Pure Pursuit controller. Given a set of waypoints, the robot current state, and some other parameters, the controller outputs vehicle speed and heading rate.

```
% Define a controller. Each robot requires its own controller
controller1 = controllerPurePursuit("Waypoints",waypoints,"DesiredLinearVelocity",3,"M
controller2 = controllerPurePursuit("Waypoints",waypoints,"DesiredLinearVelocity",3,"M
controller3 = controllerPurePursuit("Waypoints",waypoints,"DesiredLinearVelocity",3,"M
```

Simulate the Models Using an ODE Solver

The models are simulated using the `derivative` function to update the state. This example uses an ordinary differential equation (ODE) solver to generate a solution. Another way would be to update the state using a loop, as shown in “Path Following for a Differential Drive Robot”.

Since the ODE solver requires all outputs to be provided as a single output, the pure pursuit controller must be wrapped in a function that outputs the linear velocity and heading angular velocity as a single output. An example helper, `exampleHelperMobileRobotController`, is used for that purpose. The example helper also ensures that the robot stops when it is within a specified radius of the goal.

```
goalPoints = waypoints(end,:)';
goalRadius = 1;
```

`ode45` is called once for each type of model. The derivative function computes the state outputs with initial state set by `initPose`. Each derivative accepts the corresponding kinematic model object, the current robot pose, and the output of the controller at that pose.

```
% Compute trajectories for each kinematic model under motion control
[tUnicycle,unicyclePose] = ode45(@(t,y)derivative(unicycle,y,exampleHelperMobileRobotC
[tBicycle,bicyclePose] = ode45(@(t,y)derivative(bicycle,y,exampleHelperMobileRobotCont
[tDiffDrive,diffDrivePose] = ode45(@(t,y)derivative(diffDrive,y,exampleHelperMobileRobo
```

Plot Results

The results of the ODE solver can be easily viewed on a single plot using `plotTransforms` to visualize the results of all trajectories at once.

The pose outputs must first be converted to indexed matrices of translations and quaternions.


```
unicycleTranslations = [unicyclePose(:,1:2) zeros(length(unicyclePose),1)];
unicycleRot = axang2quat([repmat([0 0 1],length(unicyclePose),1) unicyclePose(:,3)]);

bicycleTranslations = [bicyclePose(:,1:2) zeros(length(bicyclePose),1)];
bicycleRot = axang2quat([repmat([0 0 1],length(bicyclePose),1) bicyclePose(:,3)]);

diffDriveTranslations = [diffDrivePose(:,1:2) zeros(length(diffDrivePose),1)];
diffDriveRot = axang2quat([repmat([0 0 1],length(diffDrivePose),1) diffDrivePose(:,3)]);
```

Next, the set of all transforms can be plotted and viewed from the top. The paths of the unicycle, bicycle, and differential-drive robots are red, blue, and green, respectively. To simplify the plot, only show every tenth output.

```
figure
plot(waypoints(:,1),waypoints(:,2),"kx-","MarkerSize",20);
hold all
plotTransforms(unicycleTranslations(1:10:end,:),unicycleRot(1:10:end:),'MeshFilePath',
plotTransforms(bicycleTranslations(1:10:end,:),bicycleRot(1:10:end:),'MeshFilePath',
plotTransforms(diffDriveTranslations(1:10:end,:),diffDriveRot(1:10:end:),'MeshFilePath',
view(0,90)
```

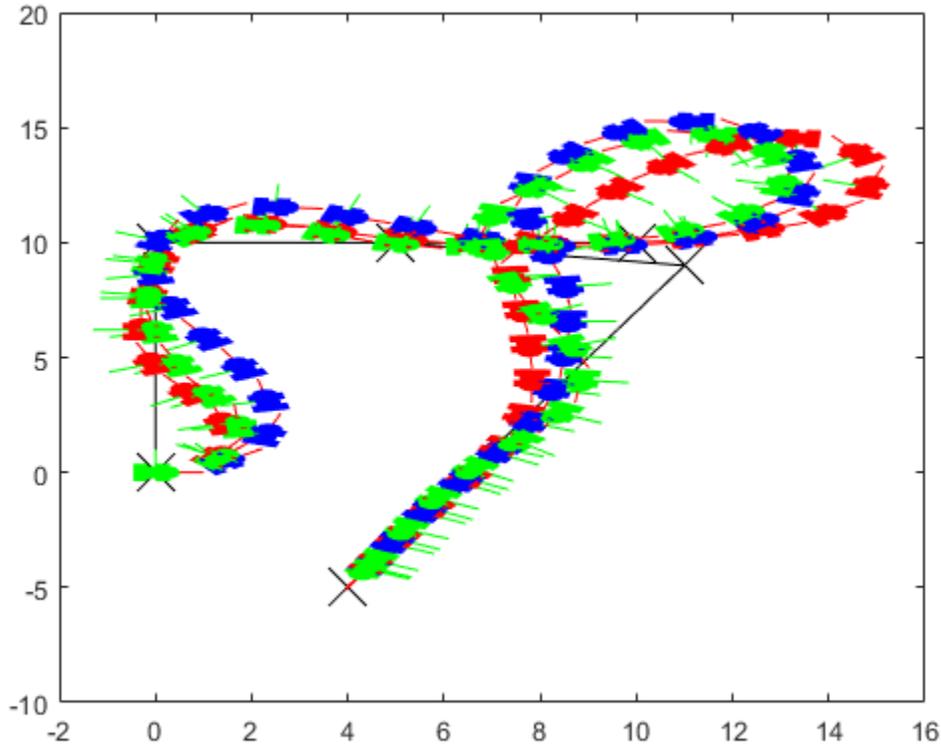

Input Arguments

motionModel — Mobile kinematic model object

`ackermannKinematics` object | `bicycleKinematics` object |
`differentialDriveKinematics` object | `unicycleKinematics` object

The mobile kinematics model object, which defines the properties of the motion model. It can be an `ackermannKinematics`, `bicycleKinematics`, `differentialDriveKinematics`, or a `unicycleKinematics` object.

state — Position, orientation, and heading of vehicle

three-element vector | four-element vector

The current state of the vehicle, which can be either a three-element vector, or a four-element vector. `state` is a three-element vector, specified as $[x \ y \ \theta]$ if the `motionModel` argument is a `bicycleKinematics`, `differentialDriveKinematics`, or `unicycleKinematics` object. It returns `stateDot` as a four-element vector, $[x \ y \ \theta \ \psi]$, if the `motionModel` argument is a `ackermannKinematics` object. x and y refer to the xy -position of the vehicle, specified in meters. θ is the angle of the vehicle heading and ψ is the angle of the vehicle steering, both specified in radians.

cmds — Input commands to motion model

two-element vector

A two-element vector of input commands, specified as $[v \ \dot{\psi}]$, where v is the vehicle speed in meters per second and $\dot{\psi}$ is the steering angular velocity in radians per second.

Output Arguments

stateDot — State derivative of current state

three-element vector | four-element vector

The current state derivative returned as a three-element vector $[x\dot{\ } \ y\dot{\ } \ \theta\dot{\ }]$ if the motion model is a `bicycleKinematics`, `differentialDriveKinematics`, or `unicycleKinematics` object. It is returned as a four-element vector, $[x\dot{\ } \ y\dot{\ } \ \theta\dot{\ } \ \psi\dot{\ }]$, if the motion model is a `ackermannKinematics` object. $x\dot{\ }$ and $y\dot{\ }$ refer to the vehicle velocity, specified in meters per second. $\theta\dot{\ }$ is the angular velocity of the vehicle heading and $\psi\dot{\ }$ is the angular velocity of the vehicle steering, both specified in radians per second.

References

- [1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning, and Control*. 1st ed. Cambridge, MA: Cambridge University Press, 2017.

See Also

`ackermannKinematics` | `bicycleKinematics` | `differentialDriveKinematics` | `unicycleKinematics`

Introduced in R2019b

findpath

Find path between start and goal points on roadmap

Syntax

```
xy = findpath(prm,start,goal)
```

Description

`xy = findpath(prm,start,goal)` finds an obstacle-free path between `start` and `goal` locations within `prm`, a roadmap object that contains a network of connected points.

If any properties of `prm` change, or if the roadmap is not created, `update` is called.

Input Arguments

prm — Roadmap path planner

`mobileRobotPRM` object

Roadmap path planner, specified as a `mobileRobotPRM` object.

start — Start location of path

1-by-2 vector

Start location of path, specified as a 1-by-2 vector representing an $[x \ y]$ pair.

Example: `[0 0]`

goal — Final location of path

1-by-2 vector

Final location of path, specified as a 1-by-2 vector representing an $[x \ y]$ pair.

Example: `[10 10]`

Output Arguments

xy — Waypoints for a path between start and goal

n-by-2 column vector

Waypoints for a path between start and goal, specified as a *n*-by-2 column vector of [x y] pairs, where *n* is the number of waypoints. These pairs represent the solved path from the start and goal locations, given the roadmap from the `prm` input object.

See Also

`mobileRobotPRM` | `show` | `update`

Introduced in R2019b

show

Show map, roadmap, and path

Syntax

```
show(prm)
show(prm,Name,Value)
```

Description

`show(prm)` shows the map and the roadmap, specified as `prm` in a figure window. If no roadmap exists, `update` is called. If a path is computed before calling `show`, the path is also plotted on the figure.

`show(prm,Name,Value)` sets the specified `Value` to the property `Name`.

Input Arguments

prm — Roadmap path planner

`mobileRobotPRM` object

Roadmap path planner, specified as a `mobileRobotPRM` object.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name, Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

Example: `'Path', 'off'`

Parent — Axes to plot the map

`Axes` object | `UIAxes` object

Axes to plot the map specified as a comma-separated pair consisting of "Parent" and either an Axes or UIAxesobject. See axes or uiaxes.

Map — Map display option

"on" (default) | "off"

Map display option, specified as the comma-separated pair consisting of "Map" and either "on" or "off".

Roadmap — Roadmap display option

"on" (default) | "off"

Roadmap display option, specified as the comma-separated pair consisting of "Roadmap" and either "on" or "off".

Path — Path display option

"on" (default) | "off"

Path display option, specified as "on" or "off". This controls whether the computed path is shown in the plot.

See Also

findpath | mobileRobotPRM | update

Topics

"Path Following for a Differential Drive Robot"

Introduced in R2019b

update

Create or update roadmap

Syntax

```
update(prm)
```

Description

`update(prm)` creates a roadmap if called for the first time after creating the `mobileRobotPRM` object, `prm`. Subsequent calls of `update` recreate the roadmap by resampling the map. `update` creates the new roadmap using the `Map`, `NumNodes`, and `ConnectionDistance` property values specified in `prm`.

Input Arguments

prm — Roadmap path planner

`mobileRobotPRM` object

Roadmap path planner, specified as a `mobileRobotPRM` object.

See Also

`findpath` | `mobileRobotPRM` | `show`

Introduced in R2019b

reset

Reset Rate object

Syntax

```
reset(rate)
```

Description

`reset(rate)` resets the state of the `Rate` object, including the elapsed time and all statistics about previous periods. `reset` is useful if you want to run multiple successive loops at the same rate, or if the object is created before the loop is executed.

Input Arguments

rate — Rate object

`handle`

Rate object, specified as a handle. This object contains the information for the desired rate and other information about the execution. See `rateControl` for more information.

Examples

Run Loop At Fixed Rate and Reset Rate Object

Create a `rateControl` object for running at 20 Hz.

```
r = rateControl(2);
```

Start a loop and control operation using the `Rate` object.

```
for i = 1:30
    % Your code goes here
    waitfor(r);
end
```

Display the `rateControl` object properties after loop operation.

```
disp(r)
```

```
rateControl with properties:
```

```
    DesiredRate: 2
    DesiredPeriod: 0.5000
    OverrunAction: 'slip'
    TotalElapsedTime: 15.0120
    LastPeriod: 0.4992
```

Reset the object to restart the time statistics.

```
reset(r);
disp(r)
```

```
rateControl with properties:
```

```
    DesiredRate: 2
    DesiredPeriod: 0.5000
    OverrunAction: 'slip'
    TotalElapsedTime: 0.0061
    LastPeriod: NaN
```

See Also

`rateControl` | `rateControl` | `waitfor`

Topics

“Execute Code at a Fixed-Rate”

Introduced in R2016a

statistics

Statistics of past execution periods


Syntax

```
stats = statistics(rate)
```

Description

`stats = statistics(rate)` returns statistics of previous periods of code execution. `stats` is a struct with these fields: `Periods`, `NumPeriods`, `AveragePeriod`, `StandardDeviation`, and `NumOverruns`.

Here is a sample execution graphic using the default setting, 'slip', for the `OverrunAction` property in the `Rate` object. See `OverrunAction` for more information on overrun code execution.

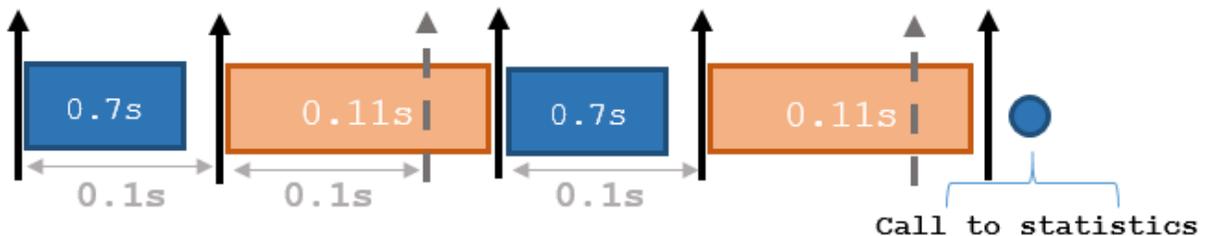

The output of `statistics` is:

```
stats =
    Periods: [0.7 0.11 0.7 0.11]
    NumPeriods: 4
    AveragePeriod: 0.09
    StandardDeviation: 0.0231
    NumOverruns: 2
```

Input Arguments

rate — Rate object

handle

Rate object, specified as an object handle. This object contains the information for the `DesiredRate` and other info about the execution. See `rateControl` for more information.

Output Arguments

stats — Time execution statistics

structure

Time execution statistics, returned as a structure. This structure contains the following fields:

- `Period` — All time periods (returned in seconds) used to calculate statistics as an indexed array. `stats.Period(end)` is the most recent period.
- `NumPeriods` — Number of elements in `Periods`
- `AveragePeriod` — Average time in seconds
- `StandardDeviation` — Standard deviation of all periods in seconds, centered around the mean stored in `AveragePeriod`
- `NumOverruns` — Number of periods with overrun

Examples

Get Statistics From Rate Object Execution

Create a `rateControl` object for running at 20 Hz.

```
r = rateControl(20);
```

Start a loop and control operation using the `rateControl` object.

```
for i = 1:30  
    % Your code goes here
```

```
    waitfor(r);  
end
```

Get Rate object statistics after loop operation.

```
stats = statistics(r)
```

```
stats = struct with fields:  
    Periods: [1x30 double]  
    NumPeriods: 30  
    AveragePeriod: 0.0500  
    StandardDeviation: 5.1280e-04  
    NumOverruns: 0
```

See Also

[rateControl](#) | [rateControl](#) | [waitfor](#)

Topics

“Execute Code at a Fixed-Rate”

Introduced in R2016a

waitfor

Package: robotics

Pause code execution to achieve desired execution rate

Syntax

```
waitfor(rate)
numMisses = waitfor(rate)
```

Description

`waitfor(rate)` pauses execution until the code reaches the desired execution rate. The function accounts for the time that is spent executing code between `waitfor` calls.

`numMisses = waitfor(rate)` returns the number of iterations missed while executing code between calls.

Examples

Run Loop at Fixed Rate

Create a rate object that runs at 1 Hz.

```
r = rateControl(1);
```

Start a loop using the `rateControl` object inside to control the loop execution. Reset the object prior to the loop execution to reset timer. Print the iteration and time elapsed.

```
reset(r)
for i = 1:10
    time = r.TotalElapsedTime;
    fprintf('Iteration: %d - Time Elapsed: %f\n',i,time)
    waitfor(r);
end
```

```
Iteration: 1 - Time Elapsed: 0.008895
Iteration: 2 - Time Elapsed: 1.005288
Iteration: 3 - Time Elapsed: 2.006203
Iteration: 4 - Time Elapsed: 3.010300
Iteration: 5 - Time Elapsed: 4.005049
Iteration: 6 - Time Elapsed: 5.004715
Iteration: 7 - Time Elapsed: 6.003483
Iteration: 8 - Time Elapsed: 7.003705
Iteration: 9 - Time Elapsed: 8.004860
Iteration: 10 - Time Elapsed: 9.003329
```

Each iteration executes at a 1-second interval.

Input Arguments

rate — Rate object

handle

Rate object, specified as a handle. This object contains the information for the desired rate and other information about the execution. See `robotics.Rate` for more information.

Output Arguments

numMisses — Number of missed task executions

scalar

Number of missed task executions, returned as a scalar. `waitfor` returns the number of times the task was missed in the Rate object based on the `LastPeriod` time. For example, if the desired rate is 1 Hz and the last period was 3.2 seconds, `numMisses` returns 3.

See Also

`rateControl` | `rateControl`

Topics

“Execute Code at a Fixed-Rate”

Introduced in R2016a

addVisual

Add visual geometry data to rigid body

Syntax

```
addVisual(body, "Mesh", filename)
addVisual(body, "Mesh", filename, tform)
```

Description

`addVisual(body, "Mesh", filename)` adds a polygon mesh on top of any current visual geometry using the specified `.stl` file, `filename`. Multiple visual geometries can be added to a single body. The coordinate frame is assumed to coincide with the frame of body. You can view the meshes for an entire rigid body tree using `show`.

`addVisual(body, "Mesh", filename, tform)` specifies a homogeneous transformation for the polygon mesh relative to the body frame.

Input Arguments

body — RigidBody object

handle

RigidBody object, specified as a handle. Create a rigid body object using `rigidBody`.

filename — .stl file name

string scalar | character vector

.stl file name, specified as a string scalar or character vector.

Data Types: char | string

tform — Polygon mesh transformation

4-by-4 homogeneous transformation

Mesh transformation relative to the body coordinate frame, specified as a 4-by-4 homogeneous transformation.

See Also

`clearVisual` | `rigidBodyTree` | `show`

Introduced in R2017b

clearVisual

Clear all visual geometries

Syntax

```
clearVisual(body)
```

Description

`clearVisual(body)` clears all visual geometries attached to the given rigid body object.

Input Arguments

body — RigidBody object

handle

RigidBody object, specified as a handle. Create a rigid body object using `rigidBody`.

See Also

`addVisual` | `rigidBodyTree` | `show`

Introduced in R2017b

copy

Create a deep copy of rigid body

Syntax

```
copyObj = copy(bodyObj)
```

Description

`copyObj = copy(bodyObj)` creates a copy of the rigid body object with the same properties.

Input Arguments

bodyObj — RigidBody object

handle

RigidBody object, specified as a handle. Create a rigid body object using `rigidBody`.

Output Arguments

copyObj — RigidBody object

handle

RigidBody object, returned as a handle. Create a rigid body object using `rigidBody`.

See Also

`rigidBodyJoint` | `rigidBodyTree`

Introduced in R2016b

copy

Create copy of joint

Syntax

```
jCopy = copy(jointObj)
```

Description

`jCopy = copy(jointObj)` creates a copy of the `rigidBodyJoint` object with the same properties.

Input Arguments

jointObj — `rigidBodyJoint` object

handle

`rigidBodyJoint` object, specified as a handle.

Output Arguments

jCopy — `rigidBodyJoint` object

handle

`rigidBodyJoint` object, returned as a handle. This copy has the same properties.

See Also

`rigidBody` | `rigidBodyJoint` | `rigidBodyTree`

Introduced in R2016b

setFixedTransform

Set fixed transform properties of joint

Syntax

```
setFixedTransform(jointObj,tform)
```

```
setFixedTransform(jointObj,dhparams,"dh")  
setFixedTransform(jointObj,mdhparams,"mdh")
```

Description

`setFixedTransform(jointObj,tform)` sets the `JointToParentTransform` property of the `rigidBodyJoint` object directly with the supplied homogenous transformation.

`setFixedTransform(jointObj,dhparams,"dh")` sets the `ChildToJointTransform` property using Denavit-Hartenberg (DH) parameters. The `JointToParentTransform` property is set to an identity matrix. DH parameters are given in the order [a alpha d theta].

The `theta` input is ignored when specifying the fixed transformation between joints because that angle is dependent on the joint configuration. For more information, see “Rigid Body Tree Robot Model”.

`setFixedTransform(jointObj,mdhparams,"mdh")` sets the `JointToParentTransform` property using modified DH parameters. The `ChildToJointTransform` property is set to an identity matrix. Modified DH parameters are given in the order [a alpha d theta].

Examples

Build Manipulator Robot Using Denavit-Hartenberg Parameters

Use the Denavit-Hartenberg (DH) parameters of the Puma560® robot to build a robot. Each rigid body is added one at a time, with the child-to-parent transform specified by the joint object.

The DH parameters define the geometry of the robot with relation to how each rigid body is attached to its parent. For convenience, setup the parameters for the Puma560 robot in a matrix. The Puma robot is a serial chain manipulator. The DH parameters are relative to the previous line in the matrix, corresponding to the previous joint attachment.

```
dhparams = [0      pi/2    0      0;
            0.4318  0      0      0
            0.0203  -pi/2   0.15005  0;
            0      pi/2    0.4318  0;
            0      -pi/2   0      0;
            0      0      0      0];
```

Create a rigid body tree object to build the robot.

```
robot = rigidBodyTree;
```

Create the first rigid body and add it to the robot. To add a rigid body:

- 1 Create a `rigidBody` object and give it a unique name.
- 2 Create a `rigidBodyJoint` object and give it a unique name.
- 3 Use `setFixedTransform` to specify the body-to-body transformation using DH parameters. The last element of the DH parameters, `theta`, is ignored because the angle is dependent on the joint position.
- 4 Call `addBody` to attach the first body joint to the base frame of the robot.

```
body1 = rigidBody('body1');
jnt1 = rigidBodyJoint('jnt1','revolute');

setFixedTransform(jnt1,dhparams(1,:), 'dh');
body1.Joint = jnt1;

addBody(robot,body1, 'base')
```

Create and add other rigid bodies to the robot. Specify the previous body name when calling `addBody` to attach it. Each fixed transform is relative to the previous joint coordinate frame.

```

body2 = rigidBody('body2');
jnt2 = rigidBodyJoint('jnt2','revolute');
body3 = rigidBody('body3');
jnt3 = rigidBodyJoint('jnt3','revolute');
body4 = rigidBody('body4');
jnt4 = rigidBodyJoint('jnt4','revolute');
body5 = rigidBody('body5');
jnt5 = rigidBodyJoint('jnt5','revolute');
body6 = rigidBody('body6');
jnt6 = rigidBodyJoint('jnt6','revolute');

setFixedTransform(jnt2,dhparams(2,),'dh');
setFixedTransform(jnt3,dhparams(3,),'dh');
setFixedTransform(jnt4,dhparams(4,),'dh');
setFixedTransform(jnt5,dhparams(5,),'dh');
setFixedTransform(jnt6,dhparams(6,),'dh');

body2.Joint = jnt2;
body3.Joint = jnt3;
body4.Joint = jnt4;
body5.Joint = jnt5;
body6.Joint = jnt6;

addBody(robot,body2,'body1')
addBody(robot,body3,'body2')
addBody(robot,body4,'body3')
addBody(robot,body5,'body4')
addBody(robot,body6,'body5')

```

Verify that your robot was built properly by using the `showdetails` or `show` function. `showdetails` lists all the bodies in the MATLAB® command window. `show` displays the robot with a given configuration (home by default). Calls to `axis` modify the axis limits and hide the axis labels.



```
showdetails(robot)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
---	-----	-----	-----	-----	-----
1	body1	jnt1	revolute	base(0)	body2(2)
2	body2	jnt2	revolute	body1(1)	body3(3)
3	body3	jnt3	revolute	body2(2)	body4(4)
4	body4	jnt4	revolute	body3(3)	body5(5)

```
5      body5      jnt5      revolute      body4(4)  body6(6)
6      body6      jnt6      revolute      body5(5)
```

```
show(robot);
axis([-0.5,0.5,-0.5,0.5,-0.5,0.5])
axis off
```

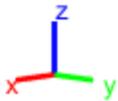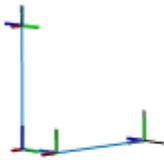

Input Arguments

jointObj — rigidBodyJoint object

handle

rigidBodyJoint object, specified as a handle.

tform — Homogeneous transform

4-by-4 matrix

Homogeneous transform, specified as a 4-by-4 matrix. The transform is set to the `ChildToJointTransform` property. The `JointToParentTransform` property is set to an identity matrix.

dhparams — Denavit-Hartenberg (DH) parameters

four-element vector

Denavit-Hartenberg (DH) parameters, specified as a four-element vector, [`a` `alpha` `d` `theta`]. These parameters are used to set the `ChildToJointTransform` property. The `JointToParentTransform` property is set to an identity matrix.

The `theta` input is ignored when specifying the fixed transformation between joints because that angle is dependent on the joint configuration. For more information, see “Rigid Body Tree Robot Model”.

mdhparams — Modified Denavit-Hartenberg (DH) parameters

four-element vector

Modified Denavit-Hartenberg (DH) parameters, specified as a four-element vector, [`a` `alpha` `d` `theta`]. These parameters are used to set the `JointToParentTransform` property. The `ChildToJointTransform` is set to an identity matrix.

The `theta` input is ignored when specifying the fixed transformation between joints because that angle is dependent on the joint configuration. For more information, see “Rigid Body Tree Robot Model”.

References

- [1] Craig, John J. *Introduction to Robotics: Mechanics and Control*. Reading, MA: Addison-Wesley, 1989.

[2] Siciliano, Bruno. *Robotics: Modelling, Planning and Control*. London: Springer, 2009.

See Also

[rigidBody](#) | [rigidBodyJoint](#) | [rigidBodyTree](#)

Introduced in R2016b

addBody

Add body to robot

Syntax

```
addBody( robot , body , parentname )
```

Description

`addBody(robot , body , parentname)` adds a rigid body to the robot object and is attached to the rigid body parent specified by `parentname`. The `body` property defines how this body moves relative to the parent body.

Examples

Attach Rigid Body and Joint to Rigid Body Tree

Add a rigid body and corresponding joint to a rigid body tree. Each `rigidBody` object contains a `rigidBodyJoint` object and must be added to the `rigidBodyTree` using `addBody`.

Create a rigid body tree.

```
rbtree = rigidBodyTree;
```

Create a rigid body with a unique name.

```
body1 = rigidBody('b1');
```

Create a revolute joint. By default, the `rigidBody` object comes with a fixed joint. Replace the joint by assigning a new `rigidBodyJoint` object to the `body1.Joint` property.

```
jnt1 = rigidBodyJoint('jnt1','revolute');  
body1.Joint = jnt1;
```

Add the rigid body to the tree. Specify the body name that you are attaching the rigid body to. Because this is the first body, use the base name of the tree.

```
basename = rbtree.BaseName;
addBody(rbtree,body1,basename)
```

Use `showdetails` on the tree to confirm the rigid body and joint were added properly.

```
showdetails(rbtree)
```

```
-----
Robot: (1 bodies)

  Idx   Body Name   Joint Name   Joint Type   Parent Name(Idx)   Children Name(s)
  ---   -
    1     b1         jnt1        revolute    base(0)
-----
```

Build Manipulator Robot Using Denavit-Hartenberg Parameters

Use the Denavit-Hartenberg (DH) parameters of the Puma560® robot to build a robot. Each rigid body is added one at a time, with the child-to-parent transform specified by the joint object.

The DH parameters define the geometry of the robot with relation to how each rigid body is attached to its parent. For convenience, setup the parameters for the Puma560 robot in a matrix. The Puma robot is a serial chain manipulator. The DH parameters are relative to the previous line in the matrix, corresponding to the previous joint attachment.

```
dhparams = [0      pi/2    0      0;
            0.4318  0      0      0
            0.0203  -pi/2   0.15005  0;
            0      pi/2    0.4318  0;
            0      -pi/2   0      0;
            0      0      0      0];
```

Create a rigid body tree object to build the robot.

```
robot = rigidBodyTree;
```

Create the first rigid body and add it to the robot. To add a rigid body:

- 1 Create a `rigidBody` object and give it a unique name.
- 2 Create a `rigidBodyJoint` object and give it a unique name.
- 3 Use `setFixedTransform` to specify the body-to-body transformation using DH parameters. The last element of the DH parameters, `theta`, is ignored because the angle is dependent on the joint position.
- 4 Call `addBody` to attach the first body joint to the base frame of the robot.

```
body1 = rigidBody('body1');
jnt1 = rigidBodyJoint('jnt1','revolute');

setFixedTransform(jnt1,dhparams(1,),'dh');
body1.Joint = jnt1;

addBody(robot,body1,'base')
```

Create and add other rigid bodies to the robot. Specify the previous body name when calling `addBody` to attach it. Each fixed transform is relative to the previous joint coordinate frame.

```
body2 = rigidBody('body2');
jnt2 = rigidBodyJoint('jnt2','revolute');
body3 = rigidBody('body3');
jnt3 = rigidBodyJoint('jnt3','revolute');
body4 = rigidBody('body4');
jnt4 = rigidBodyJoint('jnt4','revolute');
body5 = rigidBody('body5');
jnt5 = rigidBodyJoint('jnt5','revolute');
body6 = rigidBody('body6');
jnt6 = rigidBodyJoint('jnt6','revolute');

setFixedTransform(jnt2,dhparams(2,),'dh');
setFixedTransform(jnt3,dhparams(3,),'dh');
setFixedTransform(jnt4,dhparams(4,),'dh');
setFixedTransform(jnt5,dhparams(5,),'dh');
setFixedTransform(jnt6,dhparams(6,),'dh');

body2.Joint = jnt2;
body3.Joint = jnt3;
body4.Joint = jnt4;
body5.Joint = jnt5;
body6.Joint = jnt6;

addBody(robot,body2,'body1')
```

```

addBody(robot, body3, 'body2')
addBody(robot, body4, 'body3')
addBody(robot, body5, 'body4')
addBody(robot, body6, 'body5')

```

Verify that your robot was built properly by using the `showdetails` or `show` function. `showdetails` lists all the bodies in the MATLAB® command window. `show` displays the robot with a given configuration (home by default). Calls to `axis` modify the axis limits and hide the axis labels.

```
showdetails(robot)
```

```

-----
Robot: (6 bodies)

```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	body1	jnt1	revolute	base(0)	body2(2)
2	body2	jnt2	revolute	body1(1)	body3(3)
3	body3	jnt3	revolute	body2(2)	body4(4)
4	body4	jnt4	revolute	body3(3)	body5(5)
5	body5	jnt5	revolute	body4(4)	body6(6)
6	body6	jnt6	revolute	body5(5)	

```



-----

```

```

show(robot);
axis([-0.5,0.5,-0.5,0.5,-0.5,0.5])
axis off

```

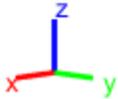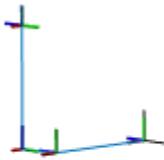

Modify a Robot Rigid Body Tree Model

Make changes to an existing `rigidBodyTree` object. You can get replace joints, bodies and subtrees in the rigid body tree.

Load example robots as `rigidBodyTree` objects.

```
load exampleRobots.mat
```

View the details of the Puma robot using `showdetails`.

```
showdetails(puma1)
```

```

-----
Robot: (6 bodies)

  Idx   Body Name   Joint Name   Joint Type   Parent Name(Idx)   Children Name(s)
-----
    1      L1       jnt1     revolute      base(0)      L2(2)
    2      L2       jnt2     revolute      L1(1)        L3(3)
    3      L3       jnt3     revolute      L2(2)        L4(4)
    4      L4       jnt4     revolute      L3(3)        L5(5)
    5      L5       jnt5     revolute      L4(4)        L6(6)
    6      L6       jnt6     revolute      L5(5)
-----

```

Get a specific body to inspect the properties. The only child of the L3 body is the L4 body. You can copy a specific body as well.

```

body3 = getBody(puma1, 'L3');
childBody = body3.Children{1}

childBody =
  rigidBody with properties:

      Name: 'L4'
      Joint: [1x1 rigidBodyJoint]
      Mass: 1
  CenterOfMass: [0 0 0]
      Inertia: [1 1 1 0 0 0]
      Parent: [1x1 rigidBody]
  Children: {[1x1 rigidBody]}
  Visuals: {}

```

```
body3Copy = copy(body3);
```

Replace the joint on the L3 body. You must create a new Joint object and use `replaceJoint` to ensure the downstream body geometry is unaffected. Call `setFixedTransform` if necessary to define a transform between the bodies instead of with the default identity matrices.

```

newJoint = rigidBodyJoint('prismatic');
replaceJoint(puma1, 'L3', newJoint);

showdetails(puma1)

```

```

-----
Robot: (6 bodies)

```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	prismatic	fixed	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

Remove an entire body and get the resulting subtree using `removeBody`. The removed body is included in the subtree.

```
subtree = removeBody(puma1, 'L4')
```

```
subtree =
  rigidBodyTree with properties:
```

```
  NumBodies: 3
  Bodies: {[1x1 rigidBody] [1x1 rigidBody] [1x1 rigidBody]}
  Base: [1x1 rigidBody]
  BodyNames: {'L4' 'L5' 'L6'}
  BaseName: 'L3'
  Gravity: [0 0 0]
  DataFormat: 'struct'
```

Remove the modified L3 body. Add the original copied L3 body to the L2 body, followed by the returned subtree. The robot model remains the same. See a detailed comparison through `showdetails`.

```
removeBody(puma1, 'L3');
addBody(puma1, body3Copy, 'L2')
addSubtree(puma1, 'L3', subtree)
```

```
showdetails(puma1)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)

3	L3	jnt3	revolute	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object.

body — Rigid body

`rigidBody` object

Rigid body, specified as a `rigidBodyTree` object.

parentname — Parent body name

`string` scalar | character vector

Parent body name, specified as a string scalar or character vector. This parent body must already exist in the robot model. The new body is attached to this parent body.

Data Types: `char` | `string`

See Also

`removeBody` | `replaceBody` | `rigidBody` | `rigidBodyJoint`

Introduced in R2016b

addSubtree

Add subtree to robot

Syntax

```
addSubtree(robot, parentname, subtree)
```

Description

`addSubtree(robot, parentname, subtree)` attaches the robot model, `newSubtree`, to an existing robot model, `robot`, at the body specified by `parentname`. The subtree base is not added as a body.

Examples

Modify a Robot Rigid Body Tree Model

Make changes to an existing `rigidBodyTree` object. You can get replace joints, bodies and subtrees in the rigid body tree.

Load example robots as `rigidBodyTree` objects.

```
load exampleRobots.mat
```

View the details of the Puma robot using `showdetails`.

```
showdetails(puma1)
```

```
-----  
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
---	-----	-----	-----	-----	-----
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)

```

3          L3          jnt3      revolute          L2(2)  L4(4)
4          L4          jnt4      revolute          L3(3)  L5(5)
5          L5          jnt5      revolute          L4(4)  L6(6)
6          L6          jnt6      revolute          L5(5)
-----

```

Get a specific body to inspect the properties. The only child of the L3 body is the L4 body. You can copy a specific body as well.

```

body3 = getBody(puma1, 'L3');
childBody = body3.Children{1}

childBody =
  rigidBody with properties:

      Name: 'L4'
      Joint: [1x1 rigidBodyJoint]
      Mass: 1
  CenterOfMass: [0 0 0]
      Inertia: [1 1 1 0 0 0]
      Parent: [1x1 rigidBody]
  Children: {[1x1 rigidBody]}
  Visuals: {}

```

```
body3Copy = copy(body3);
```

Replace the joint on the L3 body. You must create a new `Joint` object and use `replaceJoint` to ensure the downstream body geometry is unaffected. Call `setFixedTransform` if necessary to define a transform between the bodies instead of with the default identity matrices.

```

newJoint = rigidBodyJoint('prismatic');
replaceJoint(puma1, 'L3', newJoint);

```

```
showdetails(puma1)
```

```

-----
Robot: (6 bodies)

```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	prismatic	fixed	L2(2)	L4(4)

```

4          L4          jnt4          revolute          L3(3)  L5(5)
5          L5          jnt5          revolute          L4(4)  L6(6)
6          L6          jnt6          revolute          L5(5)
-----

```

Remove an entire body and get the resulting subtree using `removeBody`. The removed body is included in the subtree.

```
subtree = removeBody(puma1, 'L4')
```

```
subtree =
  rigidBodyTree with properties:

  NumBodies: 3
    Bodies: {[1x1 rigidBody] [1x1 rigidBody] [1x1 rigidBody]}
    Base: [1x1 rigidBody]
  BodyNames: {'L4' 'L5' 'L6'}
  BaseName: 'L3'
  Gravity: [0 0 0]
  DataFormat: 'struct'

```

Remove the modified L3 body. Add the original copied L3 body to the L2 body, followed by the returned subtree. The robot model remains the same. See a detailed comparison through `showdetails`.

```
removeBody(puma1, 'L3');
addBody(puma1, body3Copy, 'L2')
addSubtree(puma1, 'L3', subtree)
```

```
showdetails(puma1)
```

```

-----
Robot: (6 bodies)

```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	jnt3	revolute	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

```

-----

```

Input Arguments

robot — Robot model

RigidBodyTree object

Robot model, specified as a rigidBodyTree object.

parentname — Parent body name

string scalar | character vector

Parent body name, specified as a string scalar or character vector. This parent body must already exist in the robot model. The new body is attached to this parent body.

Data Types: char | string

subtree — Subtree robot model

rigidBodyTree object

Subtree robot model, specified as a rigidBodyTree object.

See Also

addBody | removeBody | replaceBody | rigidBody | rigidBodyJoint

Introduced in R2016b

centerOfMass

Center of mass position and Jacobian

Syntax

```
com = centerOfMass(robot)
com = centerOfMass(robot,configuration)
[com,comJac] = centerOfMass(robot,configuration)
```

Description

`com = centerOfMass(robot)` computes the center of mass position of the robot model at its home configuration, relative to the base frame.

`com = centerOfMass(robot,configuration)` computes the center of mass position of the robot model at the specified joint configuration, relative to the base frame.

`[com,comJac] = centerOfMass(robot,configuration)` also returns the center of mass Jacobian, which relates the center of mass velocity to the joint velocities.

Examples

Calculate Center of Mass and Jacobian for Robot Configuration

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Compute the center of mass position and Jacobian at the home configuration of the robot.

```
[comLocation,comJac] = centerOfMass(lbr);
```

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object. To use the `centerOfMass` function, set the `DataFormat` property to either `'row'` or `'column'`.

configuration — Robot configuration

vector

Robot configuration, specified as a vector with positions for all nonfixed joints in the robot model. You can generate a configuration using `homeConfiguration(robot)`, `randomConfiguration(robot)`, or by specifying your own joint positions. To use the vector form of configuration, set the `DataFormat` property for the robot to either `'row'` or `'column'`.

Output Arguments

com — Center of mass location

`[x y z]` vector

Center of mass location, returned as an `[x y z]` vector. The vector describes the location of the center of mass for the specified `configuration` relative to the body frame, in meters.

comJac — Center of mass Jacobian

3-by-*n* matrix

Center of mass Jacobian, returned as a 3-by-*n* matrix, where *n* is the robot velocity degrees of freedom.

See Also

`gravityTorque` | `massMatrix` | `rigidBodyTree` | `velocityProduct`

Introduced in R2017a

copy

Copy robot model

Syntax

```
newrobot = copy(robot)
```

Description

`newrobot = copy(robot)` creates a deep copy of `robot` with the same properties. Any changes in `newrobot` are not reflected in `robot`.

Examples

Modify a Robot Rigid Body Tree Model

Make changes to an existing `rigidBodyTree` object. You can get replace joints, bodies and subtrees in the rigid body tree.

Load example robots as `rigidBodyTree` objects.

```
load exampleRobots.mat
```

View the details of the Puma robot using `showdetails`.

```
showdetails(puma1)
```

```
-----  
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	jnt3	revolute	L2(2)	L4(4)

```

4          L4          jnt4      revolute          L3(3)  L5(5)
5          L5          jnt5      revolute          L4(4)  L6(6)
6          L6          jnt6      revolute          L5(5)
-----

```

Get a specific body to inspect the properties. The only child of the L3 body is the L4 body. You can copy a specific body as well.

```

body3 = getBody(puma1, 'L3');
childBody = body3.Children{1}

```

```

childBody =
  rigidBody with properties:

      Name: 'L4'
      Joint: [1x1 rigidBodyJoint]
      Mass: 1
  CenterOfMass: [0 0 0]
      Inertia: [1 1 1 0 0 0]
      Parent: [1x1 rigidBody]
  Children: {[1x1 rigidBody]}
  Visuals: {}

```

```

body3Copy = copy(body3);

```

Replace the joint on the L3 body. You must create a new `Joint` object and use `replaceJoint` to ensure the downstream body geometry is unaffected. Call `setFixedTransform` if necessary to define a transform between the bodies instead of with the default identity matrices.

```

newJoint = rigidBodyJoint('prismatic');
replaceJoint(puma1, 'L3', newJoint);

```

```

showdetails(puma1)

```

```

-----
Robot: (6 bodies)

```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	prismatic	fixed	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)

```

5          L5          jnt5          revolute          L4(4)  L6(6)
6          L6          jnt6          revolute          L5(5)
-----

```

Remove an entire body and get the resulting subtree using `removeBody`. The removed body is included in the subtree.

```
subtree = removeBody(puma1, 'L4')
```

```
subtree =
  rigidBodyTree with properties:

  NumBodies: 3
  Bodies: {[1x1 rigidBody] [1x1 rigidBody] [1x1 rigidBody]}
  Base: [1x1 rigidBody]
  BodyNames: {'L4' 'L5' 'L6'}
  BaseName: 'L3'
  Gravity: [0 0 0]
  DataFormat: 'struct'
```

Remove the modified L3 body. Add the original copied L3 body to the L2 body, followed by the returned subtree. The robot model remains the same. See a detailed comparison through `showdetails`.

```
removeBody(puma1, 'L3');
addBody(puma1, body3Copy, 'L2')
addSubtree(puma1, 'L3', subtree)
```

```
showdetails(puma1)
```

```

-----
Robot: (6 bodies)

  Idx   Body Name   Joint Name   Joint Type   Parent Name(Idx)   Children Name(s)
  ---   -
  1     L1             jnt1        revolute    base(0)            L2(2)
  2     L2             jnt2        revolute    L1(1)              L3(3)
  3     L3             jnt3        revolute    L2(2)              L4(4)
  4     L4             jnt4        revolute    L3(3)              L5(5)
  5     L5             jnt5        revolute    L4(4)              L6(6)
  6     L6             jnt6        revolute    L5(5)
-----

```

Input Arguments

robot — Robot model
rigidBodyTree object

Robot model, specified as a rigidBodyTree object.

Output Arguments

newrobot — Robot model
rigidBodyTree object

Robot model, returned as a rigidBodyTree object.

See Also

rigidBody | rigidBodyJoint | rigidBodyTree

Introduced in R2016b

externalForce

Compose external force matrix relative to base

Syntax

```
fext = externalForce(robot,bodyname,wrench)
fext = externalForce(robot,bodyname,wrench,configuration)
```

Description

`fext = externalForce(robot,bodyname,wrench)` composes the external force matrix, which you can use as inputs to `inverseDynamics` and `forwardDynamics` to apply an external force, `wrench`, to the body specified by `bodyname`. The `wrench` input is assumed to be in the base frame.

`fext = externalForce(robot,bodyname,wrench,configuration)` composes the external force matrix assuming that `wrench` is in the `bodyname` frame for the specified configuration. The force matrix `fext` is given in the base frame.

Examples

Compute Forward Dynamics Due to External Forces on Rigid Body Tree Model

Calculate the resultant joint accelerations for a given robot configuration with applied external forces and forces due to gravity. A wrench is applied to a specific body with the gravity being specified for the whole robot.

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Set the gravity. By default, gravity is assumed to be zero.

```
lbr.Gravity = [0 0 -9.81];
```

Get the home configuration for the `lbr` robot.

```
q = homeConfiguration(lbr);
```

Specify the wrench vector that represents the external forces experienced by the robot. Use the `externalForce` function to generate the external force matrix. Specify the robot model, the end effector that experiences the wrench, the wrench vector, and the current robot configuration. `wrench` is given relative to the `'tool0'` body frame, which requires you to specify the robot configuration, `q`.

```
wrench = [0 0 0.5 0 0 0.3];  
fext = externalForce(lbr, 'tool0', wrench, q);
```

Compute the resultant joint accelerations due to gravity, with the external force applied to the end-effector `'tool0'` when `lbr` is at its home configuration. The joint velocities and joint torques are assumed to be zero (input as an empty vector `[]`).

```
qddot = forwardDynamics(lbr, q, [], [], fext);
```

Compute Joint Torque to Counter External Forces

Use the `externalForce` function to generate force matrices to apply to a rigid body tree model. The force matrix is an m -by-6 vector that has a row for each joint on the robot to apply a six-element wrench. Use the `externalForce` function and specify the end effector to properly assign the wrench to the correct row of the matrix. You can add multiple force matrices together to apply multiple forces to one robot.

To calculate the joint torques that counter these external forces, use the `inverseDynamics` function.

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Set the Gravity property to give a specific gravitational acceleration.

```
lbr.Gravity = [0 0 -9.81];
```

Get the home configuration for lbr.

```
q = homeConfiguration(lbr);
```

Set external force on link1. The input wrench vector is expressed in the base frame.

```
fext1 = externalForce(lbr, 'link_1', [0 0 0.0 0.1 0 0]);
```

Set external force on the end effector, tool0. The input wrench vector is expressed in the tool0 frame.

```
fext2 = externalForce(lbr, 'tool0', [0 0 0.0 0.1 0 0], q);
```

Compute the joint torques required to balance the external forces. To combine the forces, add the force matrices together. Joint velocities and accelerations are assumed to be zero (input as []).

```
tau = inverseDynamics(lbr, q, [], [], fext1+fext2);
```

Input Arguments

robot — Robot model

rigidBodyTree object

Robot model, specified as a rigidBodyTree object. To use the externalForce function, set the DataFormat property to either "row" or "column".

bodyname — Name of body to which external force is applied

string scalar | character vector

Name of body to which the external force is applied, specified as a string scalar or character vector. This body name must match a body on the robot object.

Data Types: `char` | `string`

wrench — Torques and forces applied to body

`[Tx Ty Tz Fx Fy Fz]` vector

Torques and forces applied to the body, specified as a `[Tx Ty Tz Fx Fy Fz]` vector. The first three elements of the wrench correspond to the moments around xyz-axes. The last three elements are linear forces along the same axes. Unless you specify the robot configuration, the wrench is assumed to be relative to the base frame.

configuration — Robot configuration

vector

Robot configuration, specified as a vector with positions for all nonfixed joints in the robot model. You can generate a configuration using `homeConfiguration(robot)`, `randomConfiguration(robot)`, or by specifying your own joint positions. To use the vector form of configuration, set the `DataFormat` property for the robot to either `"row"` or `"column"`.

Output Arguments

fext — External force matrix

`n-by-6` matrix | `6-by-n` matrix

External force matrix, returned as either an `n-by-6` or `6-by-n` matrix, where `n` is the velocity number (degrees of freedom) of the robot. The shape depends on the `DataFormat` property of robot. The `"row"` data format uses an `n-by-6` matrix. The `"column"` data format uses a `6-by-n`.

The composed matrix lists only values other than zero at the locations relevant to the body specified. You can add force matrices together to specify multiple forces on multiple bodies. Use the external force matrix to specify external forces to dynamics functions `inverseDynamics` and `forwardDynamics`.

See Also

`forwardDynamics` | `inverseDynamics` | `rigidBodyTree`

Topics

“Control LBR Manipulator Motion Through Joint Torque Commands”

Introduced in R2017a

forwardDynamics

Joint accelerations given joint torques and states

Syntax

```
jointAccel = forwardDynamics(robot)
jointAccel = forwardDynamics(robot,configuration)
jointAccel = forwardDynamics(robot,configuration,jointVel)
jointAccel = forwardDynamics(robot,configuration,jointVel,jointTorq)
jointAccel = forwardDynamics(robot,configuration,jointVel,jointTorq,
fext)
```

Description

`jointAccel = forwardDynamics(robot)` computes joint accelerations due to gravity at the robot home configuration, with zero joint velocities and no external forces.

`jointAccel = forwardDynamics(robot,configuration)` also specifies the joint positions of the robot configuration.

To specify the home configuration, zero joint velocities, or zero torques, use `[]` for that input argument.

`jointAccel = forwardDynamics(robot,configuration,jointVel)` also specifies the joint velocities of the robot.

`jointAccel = forwardDynamics(robot,configuration,jointVel,jointTorq)` also specifies the joint torques applied to the robot.

`jointAccel = forwardDynamics(robot,configuration,jointVel,jointTorq,fext)` also specifies an external force matrix that contains forces applied to each joint.

Examples

Compute Forward Dynamics Due to External Forces on Rigid Body Tree Model

Calculate the resultant joint accelerations for a given robot configuration with applied external forces and forces due to gravity. A wrench is applied to a specific body with the gravity being specified for the whole robot.

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Set the gravity. By default, gravity is assumed to be zero.

```
lbr.Gravity = [0 0 -9.81];
```

Get the home configuration for the `lbr` robot.

```
q = homeConfiguration(lbr);
```

Specify the wrench vector that represents the external forces experienced by the robot. Use the `externalForce` function to generate the external force matrix. Specify the robot model, the end effector that experiences the wrench, the wrench vector, and the current robot configuration. `wrench` is given relative to the 'tool0' body frame, which requires you to specify the robot configuration, `q`.

```
wrench = [0 0 0.5 0 0 0.3];  
fext = externalForce(lbr, 'tool0', wrench, q);
```

Compute the resultant joint accelerations due to gravity, with the external force applied to the end-effector 'tool0' when `lbr` is at its home configuration. The joint velocities and joint torques are assumed to be zero (input as an empty vector []).

```
qddot = forwardDynamics(lbr, q, [], [], fext);
```

Input Arguments

robot — Robot model

RigidBodyTree object

Robot model, specified as a `rigidBodyTree` object. To use the `forwardDynamics` function, set the `DataFormat` property to either `'row'` or `'column'`.

configuration — Robot configuration

vector

Robot configuration, specified as a vector with positions for all nonfixed joints in the robot model. You can generate a configuration using `homeConfiguration(robot)`, `randomConfiguration(robot)`, or by specifying your own joint positions. To use the vector form of configuration, set the `DataFormat` property for the robot to either `'row'` or `'column'`.

jointVel — Joint velocities

vector

Joint velocities, specified as a vector. The number of joint velocities is equal to the degrees of freedom of the robot. To use the vector form of `jointVel`, set the `DataFormat` property for the robot to either `'row'` or `'column'`.

jointTorq — Joint torques

vector

Joint torques, specified as a vector. Each element corresponds to a torque applied to a specific joint. To use the vector form of `jointTorq`, set the `DataFormat` property for the robot to either `'row'` or `'column'`.

fext — External force matrix

n -by-6 matrix | 6-by- n matrix

External force matrix, specified as either an n -by-6 or 6-by- n matrix, where n is the number of bodies of the robot. The shape depends on the `DataFormat` property of `robot`. The `'row'` data format uses an n -by-6 matrix. The `'column'` data format uses a 6-by- n .

The matrix lists only values other than zero at the locations relevant to the body specified. You can add force matrices together to specify multiple forces on multiple bodies.

To create the matrix for a specified force or torque, see `externalForce`.

Output Arguments

jointAccel – Joint accelerations

vector

Joint accelerations, returned as a vector. The dimension of the joint accelerations vector is equal to the degrees of freedom of the robot. Each element corresponds to a specific joint on the robot.

See Also

`externalForce` | `inverseDynamics` | `rigidBodyTree`

Topics

“Control LBR Manipulator Motion Through Joint Torque Commands”

Introduced in R2017a

geometricJacobian

Geometric Jacobian for robot configuration

Syntax

```
jacobian = geometricJacobian(robot,configuration,endeffectorname)
```

Description

```
jacobian = geometricJacobian(robot,configuration,endeffectorname)
```

computes the geometric Jacobian relative to the base for the specified end-effector name and configuration for the robot model.

Examples

Geometric Jacobian for Robot Configuration

Calculate the geometric Jacobian for a specific end effector and configuration of a robot.

Load a Puma robot, which is specified as a RigidBodyTree object.

```
load exampleRobots.mat puma1
```

Calculate the geometric Jacobian of body 'L6' on the Puma robot for a random configuration.

```
geoJacob = geometricJacobian(puma1,randomConfiguration(puma1),'L6')
```

```
geoJacob = 6×6
```

```
-0.0000    0.9826    0.9826    0.0286   -0.9155    0.2045  
-0.0000    0.1859    0.1859   -0.1512    0.3929    0.2690  
1.0000   -0.0000   -0.0000    0.9881    0.0866    0.9412  
0.4175    0.0530    0.0799    0.0000         0         0  
0.2317   -0.2802   -0.4223    0.0000         0         0
```

0 -0.4532 -0.0464 0.0000 0 0

Input Arguments

robot — Robot model

rigidBodyTree object

Robot model, specified as a rigidBodyTree object.

configuration — Robot configuration

vector | structure

Robot configuration, specified as a vector of joint positions or a structure with joint names and positions for all the bodies in the robot model. You can generate a configuration using `homeConfiguration(robot)`, `randomConfiguration(robot)`, or by specifying your own joint positions in a structure. To use the vector form of `configuration`, set the `DataFormat` property for the robot to either "row" or "column" .

endeffectorname — End-effector name

string scalar | character vector

End-effector name, specified as a string scalar or character vector. An end effector can be any body in the robot model.

Data Types: char | string

Output Arguments

jacobian — Geometric Jacobian

6-by- n matrix

Geometric Jacobian of the end effector with the specified `configuration`, returned as a 6-by- n matrix, where n is the number of degrees of freedom for the end effector. The Jacobian maps the joint-space velocity to the end-effector velocity, relative to the base coordinate frame. The end-effector velocity equals:

$$V_{EE} = \begin{bmatrix} \omega_x \\ \omega_y \\ \omega_z \\ v_x \\ v_y \\ v_z \end{bmatrix} = J\dot{q} = J \begin{bmatrix} \dot{q}_1 \\ \vdots \\ \dot{q}_n \end{bmatrix}$$

ω is the angular velocity, v is the linear velocity, and \dot{q} is the joint-space velocity.

See Also

`getTransform` | `homeConfiguration` | `randomConfiguration` | `rigidBody` | `rigidBodyJoint`

Introduced in R2016b

gravityTorque

Joint torques that compensate gravity

Syntax

```
gravTorq = gravityTorque(robot)
gravTorq = gravityTorque(robot,configuration)
```

Description

`gravTorq = gravityTorque(robot)` computes the joint torques required to hold the robot at its home configuration.

`gravTorq = gravityTorque(robot,configuration)` specifies a joint configuration for calculating the gravity torque.

Examples

Compute Gravity Torque for Robot Configuration

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'. Set the Gravity property.

```
lbr.DataFormat = 'row';
lbr.Gravity = [0 0 -9.81];
```

Get a random configuration for `lbr`.

```
q = randomConfiguration(lbr);
```

Compute the gravity-compensating torques for each joint.

```
gtau = gravityTorque(lbr,q);
```

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object. To use the `gravityTorque` function, set the `DataFormat` property to either `'row'` or `'column'`.

configuration — Robot configuration

vector

Robot configuration, specified as a vector with positions for all nonfixed joints in the robot model. You can generate a configuration using `homeConfiguration(robot)`, `randomConfiguration(robot)`, or by specifying your own joint positions. To use the vector form of configuration, set the `DataFormat` property for the robot to either `'row'` or `'column'`.

Output Arguments

gravTorq — Gravity-compensating torque for each joint

vector

Gravity-compensating torque for each joint, returned as a vector.

See Also

`inverseDynamics` | `rigidBodyTree` | `velocityProduct`

Topics

“Control LBR Manipulator Motion Through Joint Torque Commands”

Introduced in R2017a

getBody

Get robot body handle by name

Syntax

```
body = getBody(robot, bodyname)
```

Description

`body = getBody(robot, bodyname)` gets a body handle by name from the robot model.

Examples

Modify a Robot Rigid Body Tree Model

Make changes to an existing `rigidBodyTree` object. You can get replace joints, bodies and subtrees in the rigid body tree.

Load example robots as `rigidBodyTree` objects.

```
load exampleRobots.mat
```

View the details of the Puma robot using `showdetails`.

```
showdetails(puma1)
```

```
-----  
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	jnt3	revolute	L2(2)	L4(4)

```

4          L4          jnt4    revolute          L3(3)  L5(5)
5          L5          jnt5    revolute          L4(4)  L6(6)
6          L6          jnt6    revolute          L5(5)
-----

```

Get a specific body to inspect the properties. The only child of the L3 body is the L4 body. You can copy a specific body as well.

```

body3 = getBody(puma1, 'L3');
childBody = body3.Children{1}

```

```

childBody =
  rigidBody with properties:

      Name: 'L4'
      Joint: [1x1 rigidBodyJoint]
      Mass: 1
  CenterOfMass: [0 0 0]
      Inertia: [1 1 1 0 0 0]
      Parent: [1x1 rigidBody]
  Children: {[1x1 rigidBody]}
  Visuals: {}

```

```

body3Copy = copy(body3);

```

Replace the joint on the L3 body. You must create a new `Joint` object and use `replaceJoint` to ensure the downstream body geometry is unaffected. Call `setFixedTransform` if necessary to define a transform between the bodies instead of with the default identity matrices.

```

newJoint = rigidBodyJoint('prismatic');
replaceJoint(puma1, 'L3', newJoint);

```

```

showdetails(puma1)

```

```

-----
Robot: (6 bodies)

```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name
---	-----	-----	-----	-----	-----
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	prismatic	fixed	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)

```

5          L5          jnt5          revolute          L4(4)  L6(6)
6          L6          jnt6          revolute          L5(5)
-----

```

Remove an entire body and get the resulting subtree using `removeBody`. The removed body is included in the subtree.

```
subtree = removeBody(puma1, 'L4')
```

```
subtree =
  rigidBodyTree with properties:

  NumBodies: 3
  Bodies: {[1x1 rigidBody] [1x1 rigidBody] [1x1 rigidBody]}
  Base: [1x1 rigidBody]
  BodyNames: {'L4' 'L5' 'L6'}
  BaseName: 'L3'
  Gravity: [0 0 0]
  DataFormat: 'struct'
```

Remove the modified L3 body. Add the original copied L3 body to the L2 body, followed by the returned subtree. The robot model remains the same. See a detailed comparison through `showdetails`.

```
removeBody(puma1, 'L3');
addBody(puma1, body3Copy, 'L2')
addSubtree(puma1, 'L3', subtree)
```

```
showdetails(puma1)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	jnt3	revolute	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

```
-----
```

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object.

bodyname — Body name

string scalar | character vector

Body name, specified as a string scalar or character vector. A body with this name must be on the robot model specified by `robot`.

Data Types: `char` | `string`

Output Arguments

body — Rigid body

`rigidBody` object

Rigid body, returned as a `rigidBody` object. The returned `rigidBodyTree` object is still a part of the `rigidBodyTree` robot model. Use `replaceBody` with a new body to modify the body in the robot model.

See Also

`addBody` | `replaceBody` | `rigidBody` | `rigidBodyJoint`

Introduced in R2016b

getTransform

Get transform between body frames

Syntax

```
transform = getTransform(robot, configuration, bodyname)
transform = getTransform(robot, configuration, sourcebody, targetbody)
```

Description

`transform = getTransform(robot, configuration, bodyname)` computes the transform that converts points in the `bodyname` frame to the robot base frame, using the specified robot configuration.

`transform = getTransform(robot, configuration, sourcebody, targetbody)` computes the transform that converts points from the source body frame to the target body frame, using the specified robot configuration.

Examples

Get Transform Between Frames for Robot Configuration

Get the transform between two frames for a specific robot configuration.

Load a sample robots that include the `puma1` robot.

```
load exampleRobots.mat
```

Get the transform between the 'L2' and 'L6' bodies of the `puma1` robot given a specific configuration. The transform converts points in 'L6' frame to the 'L2' frame.

```
transform = getTransform(puma1, randomConfiguration(puma1), 'L2', 'L6')
```

```
transform = 4x4
```

-0.2232	0.4179	0.8807	0.0212
-0.8191	0.4094	-0.4018	0.1503
-0.5284	-0.8111	0.2509	-0.4317
0	0	0	1.0000

Input Arguments

robot — Robot model

rigidBodyTree object

Robot model, specified as a rigidBodyTree object.

configuration — Robot configuration

structure array

Robot configuration, specified as a structure array with joint names and positions for all the bodies in the robot model. You can generate a configuration using `homeConfiguration(robot)`, `randomConfiguration(robot)`, or by specifying your own joint names and positions in a structure array.

bodyname — Body name

string scalar | character vector

Body name, specified as a string scalar or character vector. This body must be on the robot model specified in `robot`.

Data Types: char | string

targetbody — Target body name

string scalar | character vector

Target body name, specified as a character vector. This body must be on the robot model specified in `robot`. The target frame is the coordinate system you want to transform points into.

Data Types: char | string

sourcebody — Body name

string scalar | character vector

Body name, specified as a string scalar or character vector. This body must be on the robot model specified in `robot`. The source frame is the coordinate system you want points transformed from.

Data Types: `char` | `string`

Output Arguments

transform — Homogeneous transform

4-by-4 matrix

Homogeneous transform, returned as a 4-by-4 matrix.

See Also

`geometricJacobian` | `homeConfiguration` | `randomConfiguration` | `rigidBody` | `rigidBodyJoint`

Introduced in R2016b

homeConfiguration

Get home configuration of robot

Syntax

```
configuration = homeConfiguration(robot)
```

Description

`configuration = homeConfiguration(robot)` returns the home configuration of the robot model. The home configuration is the ordered list of `HomePosition` properties of each nonfixed joint.

Examples

Visualize Robot Configurations

Show different configurations of a robot created using a `RigidBodyTree` model. Use the `homeConfiguration` or `randomConfiguration` functions to generate the structure that defines all the joint positions.

Load example robots as `RigidBodyTree` objects.

```
load exampleRobots.mat
```


Create a structure for the home configuration of a Puma robot. The structure has joint names and positions for each body on the robot model.

```
config = homeConfiguration(puma1)
```

```
config=6x2 struct  
    JointName  
    JointPosition
```


Show the home configuration using `show`. You do not need to specify a configuration input.

```
show(puma1);
```

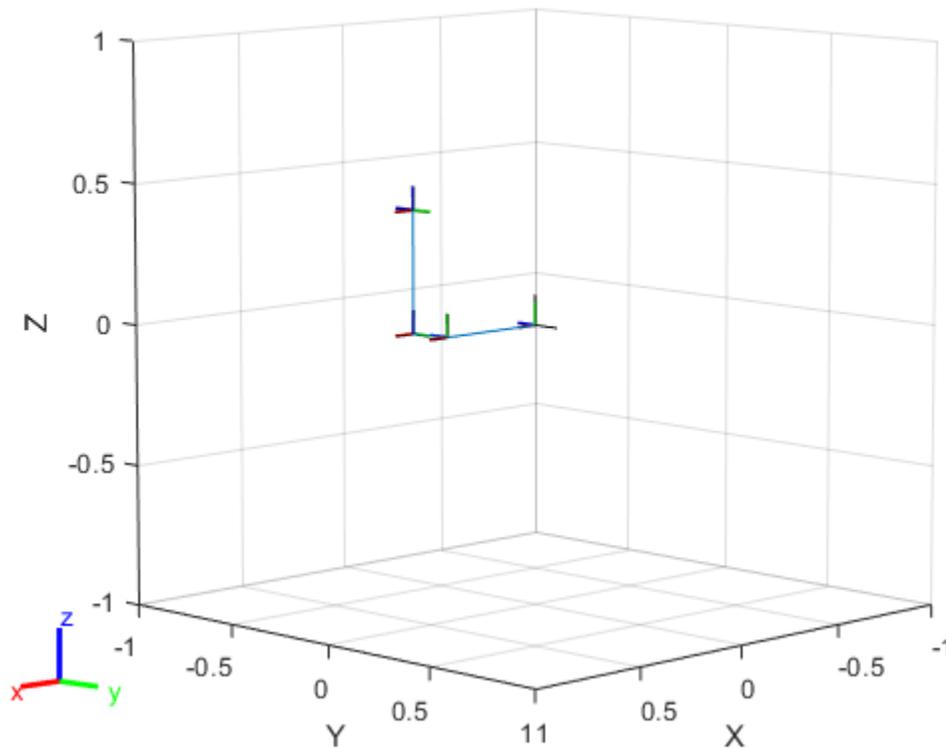


Modify the configuration and set the second joint position to $\pi/2$. Show the resulting change in the robot configuration.

```
config(2).JointPosition = pi/2;  
show(puma1,config);
```

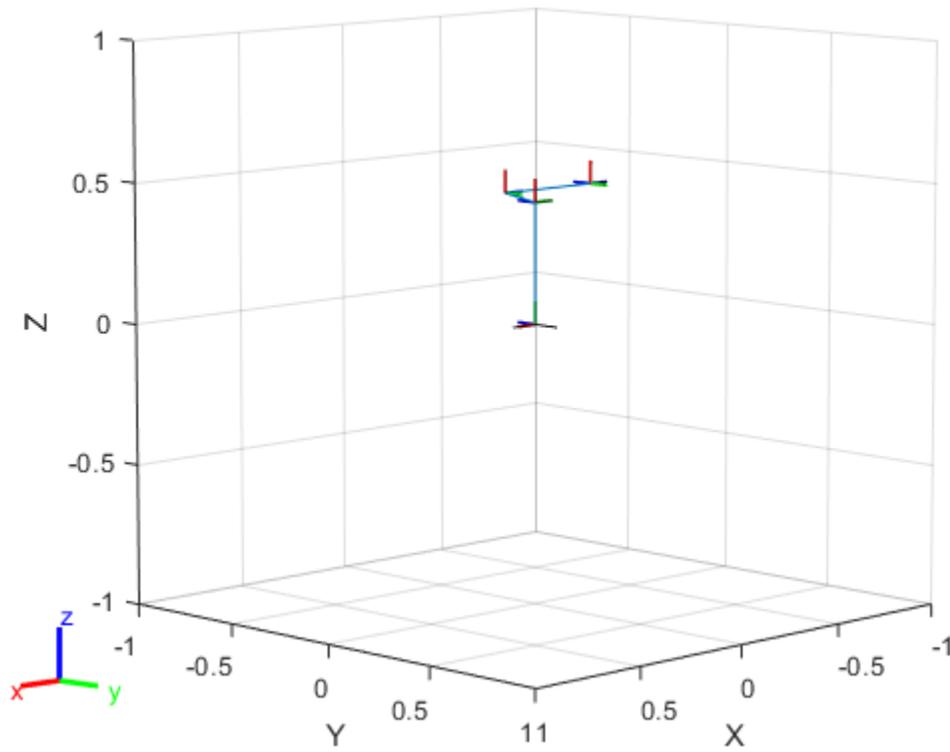

Create random configurations and show them.

```
show(puma1,randomConfiguration(puma1));
```

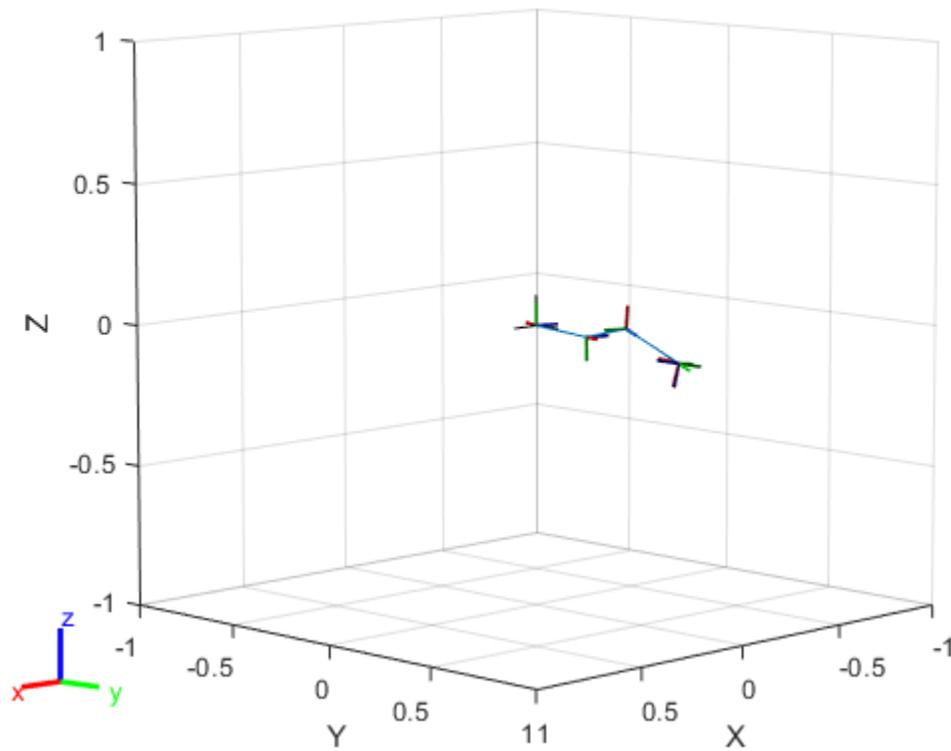

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object.

Output Arguments

configuration — Robot configuration

vector | structure

Robot configuration, returned as a vector of joint positions or a structure with joint names and positions for all the bodies in the robot model. You can generate a configuration using `homeConfiguration(robot)`, `randomConfiguration(robot)`, or by specifying your own joint positions in a structure. To use the vector form of `configuration`, set the `DataFormat` property for the robot to either `'row'` or `'column'`.

See Also

`geometricJacobian` | `getTransform` | `randomConfiguration`

Introduced in R2016b

inverseDynamics

Required joint torques for given motion

Syntax

```
jointTorq = inverseDynamics(robot)
jointTorq = inverseDynamics(robot,configuration)
jointTorq = inverseDynamics(robot,configuration,jointVel)
jointTorq = inverseDynamics(robot,configuration,jointVel,jointAccel)
jointTorq = inverseDynamics(robot,configuration,jointVel,jointAccel,
fext)
```

Description

`jointTorq = inverseDynamics(robot)` computes joint torques required for the robot to statically hold its home configuration with no external forces applied.

`jointTorq = inverseDynamics(robot,configuration)` computes joint torques to hold the specified robot configuration.

`jointTorq = inverseDynamics(robot,configuration,jointVel)` computes joint torques for the specified joint configuration and velocities with zero acceleration and no external forces.

`jointTorq = inverseDynamics(robot,configuration,jointVel,jointAccel)` computes joint torques for the specified joint configuration, velocities, and accelerations with no external forces. To specify the home configuration, zero joint velocities, or zero accelerations, use `[]` for that input argument.

`jointTorq = inverseDynamics(robot,configuration,jointVel,jointAccel,fext)` computes joint torques for the specified joint configuration, velocities, accelerations, and external forces. Use the `externalForce` function to generate `fext`.

Examples

Compute Inverse Dynamics from Static Joint Configuration

Use the `inverseDynamics` function to calculate the required joint torques to statically hold a specific robot configuration. You can also specify the joint velocities, joint accelerations, and external forces using other syntaxes.

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Set the Gravity property to give a specific gravitational acceleration.

```
lbr.Gravity = [0 0 -9.81];
```

Generate a random configuration for `lbr`.

```
q = randomConfiguration(lbr);
```

Compute the required joint torques for `lbr` to statically hold that configuration.

```
tau = inverseDynamics(lbr,q);
```

Compute Joint Torque to Counter External Forces

Use the `externalForce` function to generate force matrices to apply to a rigid body tree model. The force matrix is an m -by-6 vector that has a row for each joint on the robot to apply a six-element wrench. Use the `externalForce` function and specify the end effector to properly assign the wrench to the correct row of the matrix. You can add multiple force matrices together to apply multiple forces to one robot.

To calculate the joint torques that counter these external forces, use the `inverseDynamics` function.

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Set the Gravity property to give a specific gravitational acceleration.

```
lbr.Gravity = [0 0 -9.81];
```

Get the home configuration for lbr.

```
q = homeConfiguration(lbr);
```

Set external force on link1. The input wrench vector is expressed in the base frame.

```
fext1 = externalForce(lbr, 'link_1', [0 0 0.0 0.1 0 0]);
```

Set external force on the end effector, tool0. The input wrench vector is expressed in the tool0 frame.

```
fext2 = externalForce(lbr, 'tool0', [0 0 0.0 0.1 0 0], q);
```

Compute the joint torques required to balance the external forces. To combine the forces, add the force matrices together. Joint velocities and accelerations are assumed to be zero (input as []).

```
tau = inverseDynamics(lbr, q, [], [], fext1+fext2);
```

Input Arguments

robot — Robot model

rigidBodyTree object

Robot model, specified as a rigidBodyTree object. To use the inverseDynamics function, set the DataFormat property to either 'row' or 'column'.

configuration — Robot configuration

vector

Robot configuration, specified as a vector with positions for all nonfixed joints in the robot model. You can generate a configuration using homeConfiguration(robot),

`randomConfiguration(robot)`, or by specifying your own joint positions. To use the vector form of configuration, set the `DataFormat` property for the `robot` to either `'row'` or `'column'`.

jointVel — Joint velocities

vector

Joint velocities, specified as a vector. The number of joint velocities is equal to the velocity degrees of freedom of the robot. To use the vector form of `jointVel`, set the `DataFormat` property for the `robot` to either `'row'` or `'column'`.

jointAccel — Joint accelerations

vector

Joint accelerations, returned as a vector. The dimension of the joint accelerations vector is equal to the velocity degrees of freedom of the robot. Each element corresponds to a specific joint on the `robot`. To use the vector form of `jointAccel`, set the `DataFormat` property for the `robot` to either `'row'` or `'column'`.

fext — External force matrix

n -by-6 matrix | 6-by- n matrix

External force matrix, specified as either an n -by-6 or 6-by- n matrix, where n is the velocity degrees of freedom of the robot. The shape depends on the `DataFormat` property of `robot`. The `'row'` data format uses an n -by-6 matrix. The `'column'` data format uses a 6-by- n .

The matrix lists only values other than zero at the locations relevant to the body specified. You can add force matrices together to specify multiple forces on multiple bodies.

To create the matrix for a specified force or torque, see `externalForce`.

Output Arguments

jointTorq — Joint torques

vector

Joint torques, returned as a vector. Each element corresponds to a torque applied to a specific joint.

See Also

`externalForce` | `forwardDynamics` | `rigidBodyTree`

Topics

“Control LBR Manipulator Motion Through Joint Torque Commands”

Introduced in R2017a

massMatrix

Joint-space mass matrix

Syntax

```
H = massMatrix(robot)
H = massMatrix(robot, configuration)
```

Description

`H = massMatrix(robot)` returns the joint-space mass matrix of the home configuration of a robot.

`H = massMatrix(robot, configuration)` returns the mass matrix for a specified robot configuration.

Examples

Calculate The Mass Matrix For A Robot Configuration

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Generate a random configuration for `lbr`.

```
q = randomConfiguration(lbr);
```

Get the mass matrix at configuration `q`.

```
H = massMatrix(lbr,q);
```

Input Arguments

robot — Robot model

rigidBodyTree object

Robot model, specified as a rigidBodyTree object. To use the massMatrix function, set the DataFormat property to either 'row' or 'column'.

configuration — Robot configuration

vector

Robot configuration, specified as a vector with positions for all nonfixed joints in the robot model. You can generate a configuration using homeConfiguration(robot), randomConfiguration(robot), or by specifying your own joint positions. To use the vector form of configuration, set the DataFormat property for the robot to either 'row' or 'column'.

Output Arguments

H — Mass matrix

positive-definite symmetric matrix

Mass matrix of the robot, returned as a positive-definite symmetric matrix with size n -by- n , where n is the velocity degrees of freedom of the robot.

See Also

gravityTorque | homeConfiguration | rigidBodyTree | velocityProduct

Topics

“Control LBR Manipulator Motion Through Joint Torque Commands”

Introduced in R2017a

randomConfiguration

Generate random configuration of robot

Syntax

```
configuration = randomConfiguration(robot)
```

Description

`configuration = randomConfiguration(robot)` returns a random configuration of the specified robot. Each joint position in this configuration respects the joint limits set by the `PositionLimits` property of the corresponding `rigidBodyJoint` object in the robot model.

Examples

Visualize Robot Configurations

Show different configurations of a robot created using a `RigidBodyTree` model. Use the `homeConfiguration` or `randomConfiguration` functions to generate the structure that defines all the joint positions.

Load example robots as `RigidBodyTree` objects.

```
load exampleRobots.mat
```


Create a structure for the home configuration of a Puma robot. The structure has joint names and positions for each body on the robot model.

```
config = homeConfiguration(puma1)
```

```
config=6x2 struct
  JointName
  JointPosition
```


Show the home configuration using show. You do not need to specify a configuration input.

```
show(puma1);
```

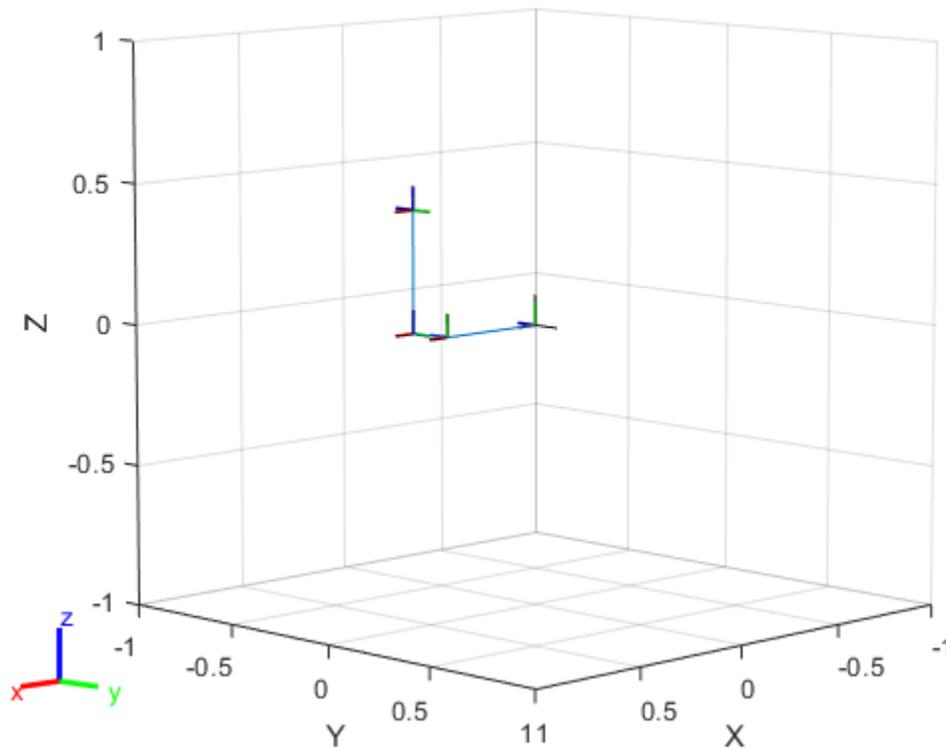


Modify the configuration and set the second joint position to $\pi/2$. Show the resulting change in the robot configuration.

```
config(2).JointPosition = pi/2;  
show(puma1,config);
```

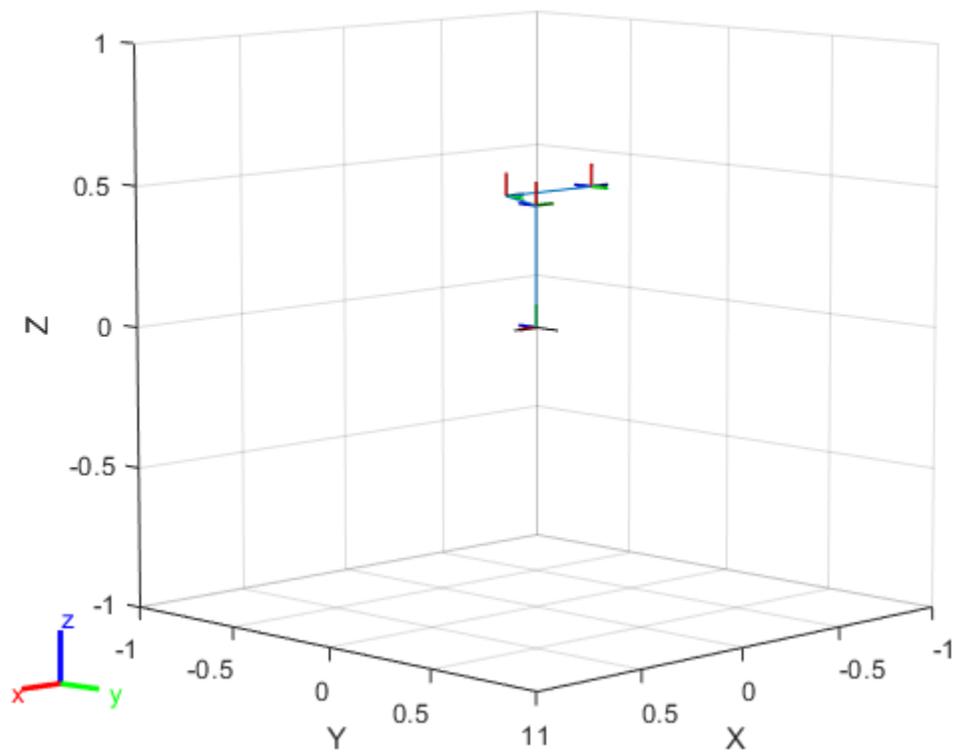

Create random configurations and show them.

```
show(puma1,randomConfiguration(puma1));
```

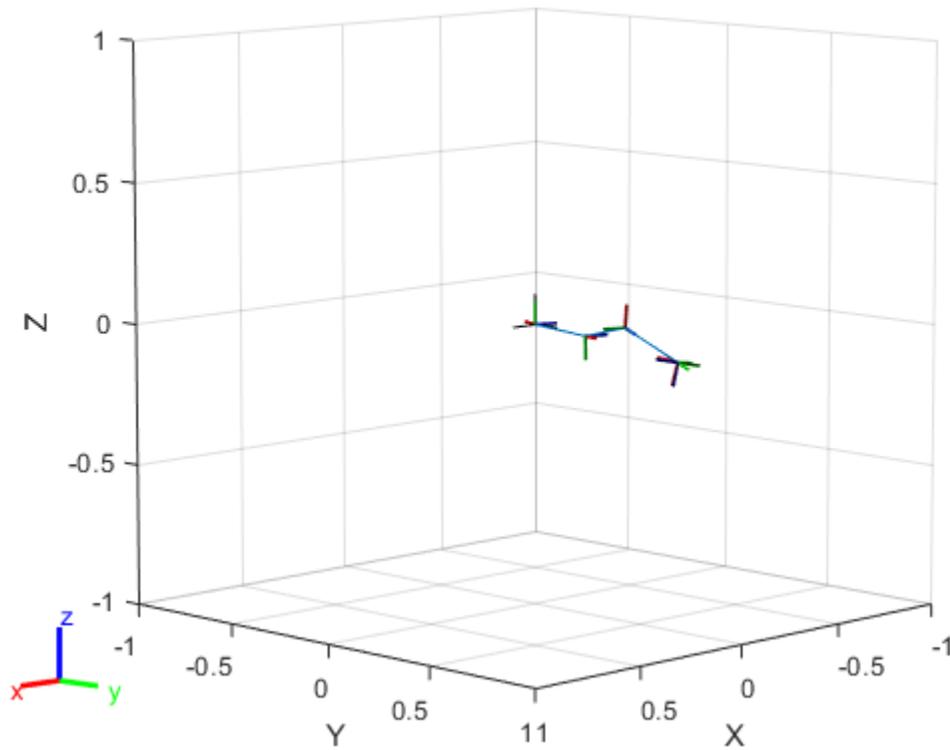

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object.

Output Arguments

configuration — Robot configuration

vector | structure

Robot configuration, returned as a vector of joint positions or a structure with joint names and positions for all the bodies in the robot model. You can generate a configuration using `homeConfiguration(robot)`, `randomConfiguration(robot)`, or by specifying your own joint positions in a structure. To use the vector form of `configuration`, set the `DataFormat` property for the robot to either `'row'` or `'column'`.

See Also

`geometricJacobian` | `getTransform` | `homeConfiguration`

Introduced in R2016b

removeBody

Remove body from robot

Syntax

```
removeBody(robot, bodyname)
newSubtree = removeBody(robot, bodyname)
```

Description

`removeBody(robot, bodyname)` removes the body and all subsequently attached bodies from the robot model.

`newSubtree = removeBody(robot, bodyname)` returns the subtree created by removing the body and all subsequently attached bodies from the robot model.

Examples

Modify a Robot Rigid Body Tree Model

Make changes to an existing `rigidBodyTree` object. You can get replace joints, bodies and subtrees in the rigid body tree.

Load example robots as `rigidBodyTree` objects.

```
load exampleRobots.mat
```

View the details of the Puma robot using `showdetails`.

```
showdetails(puma1)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
-----	-----------	------------	------------	------------------	------------------

```

-----
1          L1          jnt1    revolute          base(0)  L2(2)
2          L2          jnt2    revolute          L1(1)   L3(3)
3          L3          jnt3    revolute          L2(2)   L4(4)
4          L4          jnt4    revolute          L3(3)   L5(5)
5          L5          jnt5    revolute          L4(4)   L6(6)
6          L6          jnt6    revolute          L5(5)
-----

```

Get a specific body to inspect the properties. The only child of the L3 body is the L4 body. You can copy a specific body as well.

```
body3 = getBody(puma1, 'L3');
childBody = body3.Children{1}
```

```
childBody =
  rigidBody with properties:

      Name: 'L4'
      Joint: [1x1 rigidBodyJoint]
      Mass: 1
  CenterOfMass: [0 0 0]
      Inertia: [1 1 1 0 0 0]
      Parent: [1x1 rigidBody]
  Children: {[1x1 rigidBody]}
  Visuals: {}

```

```
body3Copy = copy(body3);
```

Replace the joint on the L3 body. You must create a new Joint object and use `replaceJoint` to ensure the downstream body geometry is unaffected. Call `setFixedTransform` if necessary to define a transform between the bodies instead of with the default identity matrices.

```
newJoint = rigidBodyJoint('prismatic');
replaceJoint(puma1, 'L3', newJoint);
```

```
showdetails(puma1)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name
-----	-----------	------------	------------	------------------	---------------

1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	prismatic	fixed	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

Remove an entire body and get the resulting subtree using `removeBody`. The removed body is included in the subtree.

```
subtree = removeBody(puma1, 'L4')
```

```
subtree =
  rigidBodyTree with properties:
```

```
  NumBodies: 3
  Bodies: {[1x1 rigidBody] [1x1 rigidBody] [1x1 rigidBody]}
  Base: [1x1 rigidBody]
  BodyNames: {'L4' 'L5' 'L6'}
  BaseName: 'L3'
  Gravity: [0 0 0]
  DataFormat: 'struct'
```

Remove the modified L3 body. Add the original copied L3 body to the L2 body, followed by the returned subtree. The robot model remains the same. See a detailed comparison through `showdetails`.

```
removeBody(puma1, 'L3');
addBody(puma1,body3Copy, 'L2')
addSubtree(puma1, 'L3', subtree)
```

```
showdetails(puma1)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
---	-----	-----	-----	-----	-----
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	jnt3	revolute	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)

6

L6

jnt6

revolute

L5(5)

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object.

bodyname — Body name

`string` scalar | character vector

Body name, specified as a string scalar character vector. This body must be on the robot model specified in `robot`.

Data Types: `char` | `string`

Output Arguments

newSubtree — Robot subtree

`rigidBodyTree` object

Robot subtree, returned as a `rigidBodyTree` object. This new subtree uses the parent name of the body specified by `bodyname` as the base name. All bodies that are attached in the previous robot model (including the body with `bodyname` specified) are added to the subtree.

See Also

`addBody` | `replaceBody` | `rigidBody` | `rigidBodyJoint`

Introduced in R2016b

replaceBody

Replace body on robot

Syntax

```
replaceBody(robot, bodyname, newbody)
```

Description

`replaceBody(robot, bodyname, newbody)` replaces the body in the robot model with the new body. All properties of the body are updated accordingly, except the Parent and Children properties. The rest of the robot model is unaffected.

Examples

Specify Dynamics Properties to Rigid Body Tree

To use dynamics functions to calculate joint torques and accelerations, specify the dynamics properties for the `rigidBodyTree` object and `rigidBody`.

Create a rigid body tree model. Create two rigid bodies to attach to it.

```
robot = rigidBodyTree('DataFormat', 'row');  
body1 = rigidBody('body1');  
body2 = rigidBody('body2');
```

Specify joints to attach to the bodies. Set the fixed transformation of `body2` to `body1`. This transform is 1m in the x-direction.

```
joint1 = rigidBodyJoint('joint1', 'revolute');  
joint2 = rigidBodyJoint('joint2');  
setFixedTransform(joint2, trvec2tform([1 0 0]))  
body1.Joint = joint1;  
body2.Joint = joint2;
```

Specify dynamics properties for the two bodies. Add the bodies to the robot model. For this example, basic values for a rod (`body1`) with an attached spherical mass (`body2`) are given.


```
body1.Mass = 2;  
body1.CenterOfMass = [0.5 0 0];  
body1.Inertia = [0.167 0.001 0.167 0 0 0];
```

```
body2.Mass = 1;  
body2.CenterOfMass = [0 0 0];  
body2.Inertia = 0.0001*[4 4 4 0 0 0];
```

```
addBody(robot, body1, 'base');  
addBody(robot, body2, 'body1');
```

Compute the center of mass position of the whole robot. Plot the position on the robot. Move the view to the `xy` plane.


```
comPos = centerOfMass(robot);  
  
show(robot);  
hold on  
plot(comPos(1), comPos(2), 'or')  
view(2)
```

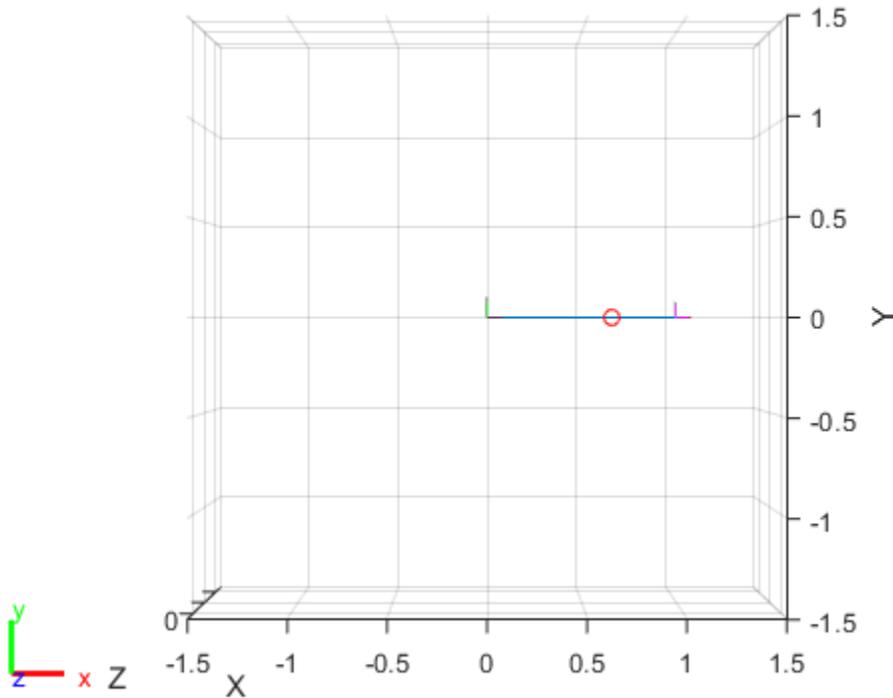

Change the mass of the second body. Notice the change in center of mass.

```
body2.Mass = 20;
replaceBody(robot, 'body2', body2)
```

```
comPos2 = centerOfMass(robot);
plot(comPos2(1), comPos2(2), '*g')
hold off
```

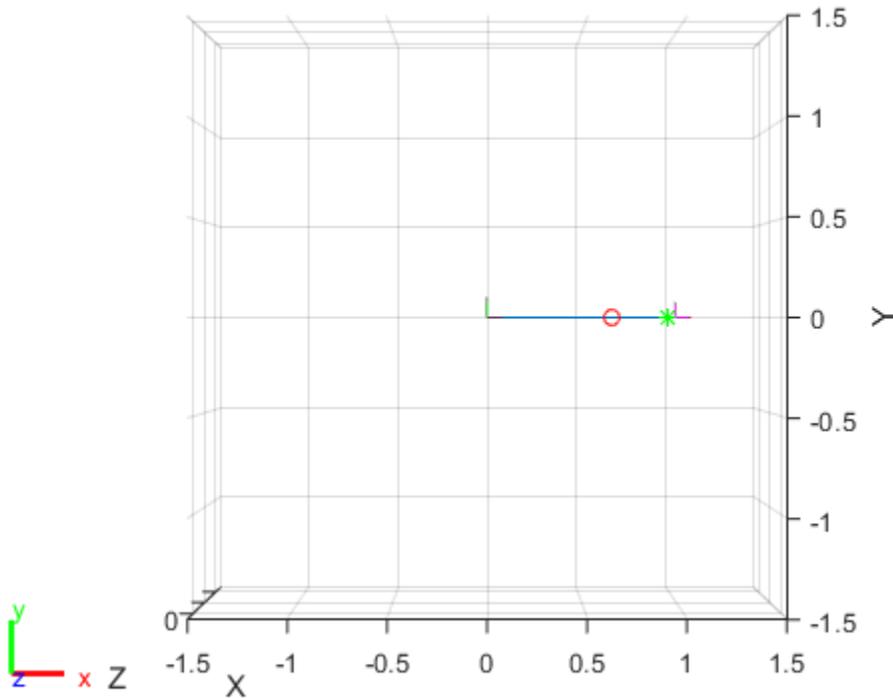

Input Arguments

robot — Robot model
rigidBodyTree object

Robot model, specified as a rigidBodyTree object. The rigid body is added to this object and attached at the rigid body specified by bodyname.

bodyname — Body name
string scalar | character vector

Body name, specified as a string scalar or character vector. This body must be on the robot model specified in `robot`.

Data Types: `char` | `string`

newbody — Rigid body

`rigidBody` object

Rigid body, specified as a `rigidBody` object.

See Also

`addBody` | `removeBody` | `replaceJoint` | `rigidBody` | `rigidBodyJoint`

Introduced in R2016b

replaceJoint

Replace joint on body

Syntax

```
replaceJoint(robot, bodyname, joint)
```

Description

`replaceJoint(robot, bodyname, joint)` replaces the joint on the specified body in the robot model if the body is a part of the robot model. This method is the only way to change joints in a robot model. You cannot directly assign the `Joint` property of a rigid body.

Examples

Modify a Robot Rigid Body Tree Model

Make changes to an existing `rigidBodyTree` object. You can get replace joints, bodies and subtrees in the rigid body tree.

Load example robots as `rigidBodyTree` objects.

```
load exampleRobots.mat
```

View the details of the Puma robot using `showdetails`.

```
showdetails(puma1)
```

```
-----  
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
---	-----	-----	-----	-----	-----
1	L1	jnt1	revolute	base(0)	L2(2)

```

2         L2         jnt2     revolute           L1(1)  L3(3)
3         L3         jnt3     revolute           L2(2)  L4(4)
4         L4         jnt4     revolute           L3(3)  L5(5)
5         L5         jnt5     revolute           L4(4)  L6(6)
6         L6         jnt6     revolute           L5(5)
-----

```

Get a specific body to inspect the properties. The only child of the L3 body is the L4 body. You can copy a specific body as well.

```

body3 = getBody(puma1, 'L3');
childBody = body3.Children{1}

childBody =
  rigidBody with properties:

      Name: 'L4'
      Joint: [1x1 rigidBodyJoint]
      Mass: 1
  CenterOfMass: [0 0 0]
      Inertia: [1 1 1 0 0 0]
      Parent: [1x1 rigidBody]
      Children: {[1x1 rigidBody]}
      Visuals: {}

```

```
body3Copy = copy(body3);
```

Replace the joint on the L3 body. You must create a new `Joint` object and use `replaceJoint` to ensure the downstream body geometry is unaffected. Call `setFixedTransform` if necessary to define a transform between the bodies instead of with the default identity matrices.

```

newJoint = rigidBodyJoint('prismatic');
replaceJoint(puma1, 'L3', newJoint);

```

```
showdetails(puma1)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name
---	-----	-----	-----	-----	-----
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)

```

3          L3          prismatic          fixed          L2(2)  L4(4)
4          L4          jnt4             revolute        L3(3)  L5(5)
5          L5          jnt5             revolute        L4(4)  L6(6)
6          L6          jnt6             revolute        L5(5)
-----

```

Remove an entire body and get the resulting subtree using `removeBody`. The removed body is included in the subtree.

```
subtree = removeBody(puma1, 'L4')
```

```
subtree =
  rigidBodyTree with properties:
```

```

  NumBodies: 3
    Bodies: {[1x1 rigidBody] [1x1 rigidBody] [1x1 rigidBody]}
    Base: [1x1 rigidBody]
  BodyNames: {'L4' 'L5' 'L6'}
  BaseName: 'L3'
  Gravity: [0 0 0]
  DataFormat: 'struct'

```

Remove the modified L3 body. Add the original copied L3 body to the L2 body, followed by the returned subtree. The robot model remains the same. See a detailed comparison through `showdetails`.

```

removeBody(puma1, 'L3');
addBody(puma1, body3Copy, 'L2')
addSubtree(puma1, 'L3', subtree)

```

```
showdetails(puma1)
```

```

-----
Robot: (6 bodies)

```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	jnt3	revolute	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

```

-----

```

Input Arguments

robot — Robot model

rigidBodyTree object

Robot model, specified as a rigidBodyTree object.

bodyname — Body name

string scalar | character vector

Body name, specified as a string scalar or character vector. This body must be on the robot model specified in `robot`.

Data Types: char | string

joint — Replacement joint

rigidBodyJoint object

Replacement joint, specified as a rigidBodyJoint object.

See Also

addBody | replaceBody | rigidBody | rigidBodyJoint

Introduced in R2016b

show

Show robot model in a figure

Syntax

```
show(robot)
show(robot, configuration)
show( ____, Name, Value)
ax = show( ____ )
```

Description

`show(robot)` plots the body frames of the robot model in a figure with the predefined home configuration. Both `Frames` and `Visuals` are displayed automatically.

`show(robot, configuration)` uses the joint positions specified in `configuration` to show the robot body frames.

`show(____, Name, Value)` provides additional options specified by one or more `Name, Value` pair arguments.

`ax = show(____)` returns the axes handle the robot is plotted on.

Examples

Display Robot Model with Visual Geometries


You can import robots that have `.stl` files associated with the Unified Robot Description format (URDF) file to describe the visual geometries of the robot. Each rigid body has an individual visual geometry specified. The `import robot` function parses the URDF file to get the robot model and visual geometries. Use the `show` function to visualize the robot model in a figure. You can then interact with the model by clicking components to inspect them and right-clicking to toggle visibility.

Import a robot model as a URDF file. The `.stl` file locations must be properly specified in this URDF. To add other `.stl` files to individual rigid bodies, see `addVisual`.

```
robot = importrobot('iiwa14.urdf');
```

Visualize the robot with the associated visual model. Click bodies or frames to inspect them. Right-click bodies to toggle visibility for each visual geometry.

```
show(robot);
```

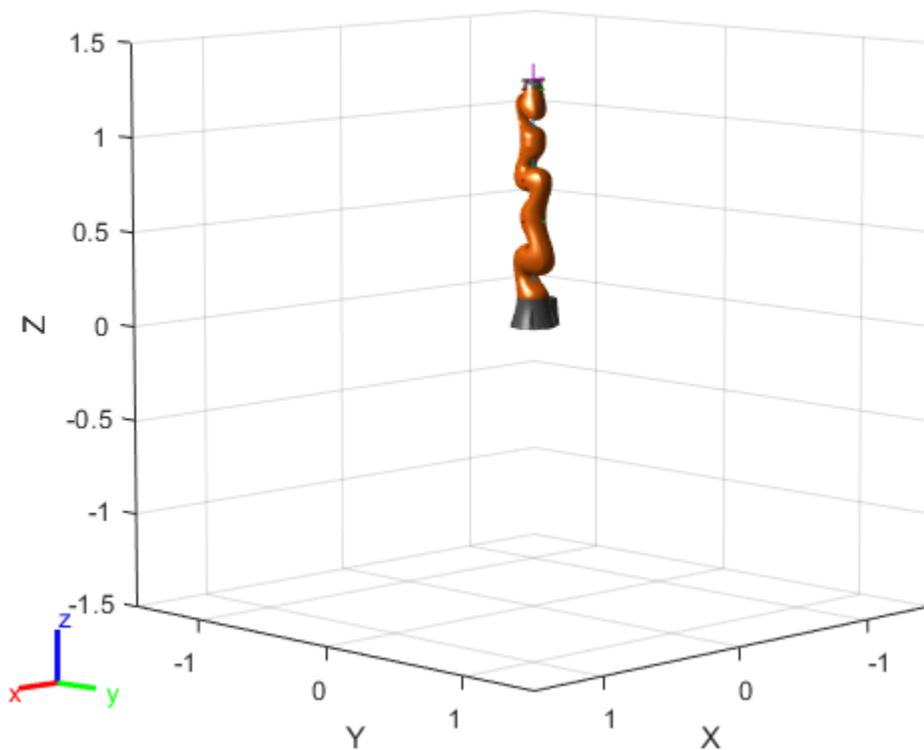

Visualize Robot Configurations

Show different configurations of a robot created using a `RigidBodyTree` model. Use the `homeConfiguration` or `randomConfiguration` functions to generate the structure that defines all the joint positions.

Load example robots as `RigidBodyTree` objects.

```
load exampleRobots.mat
```


Create a structure for the home configuration of a Puma robot. The structure has joint names and positions for each body on the robot model.

```
config = homeConfiguration(puma1)
```

```
config=6x2 struct  
  JointName  
  JointPosition
```


Show the home configuration using `show`. You do not need to specify a configuration input.

```
show(puma1);
```

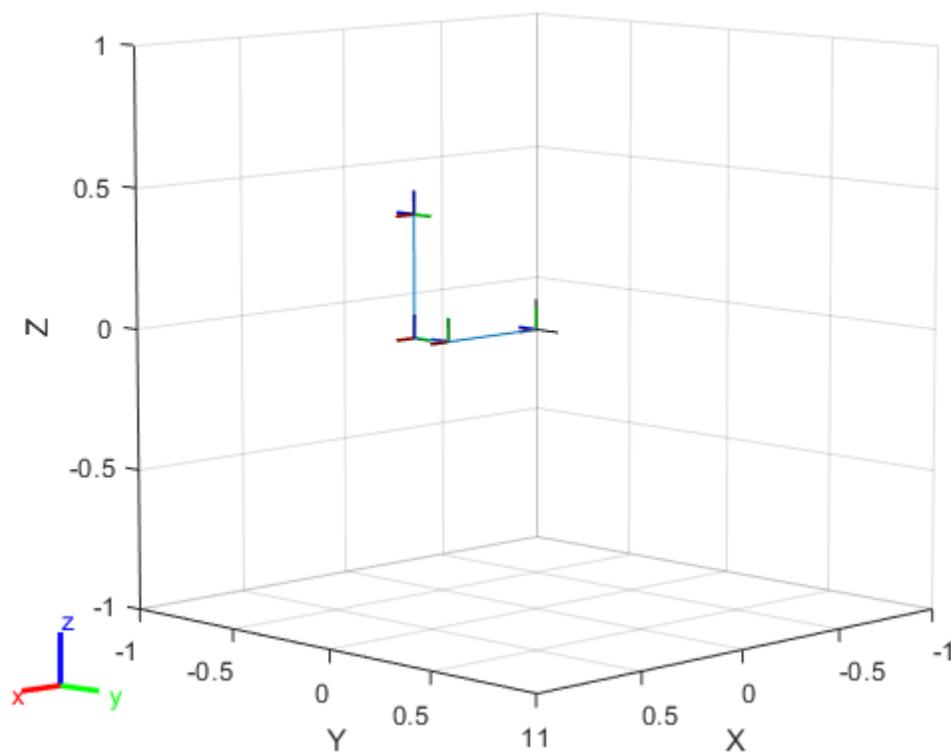


Modify the configuration and set the second joint position to $\pi/2$. Show the resulting change in the robot configuration.

```
config(2).JointPosition = pi/2;  
show(puma1,config);
```

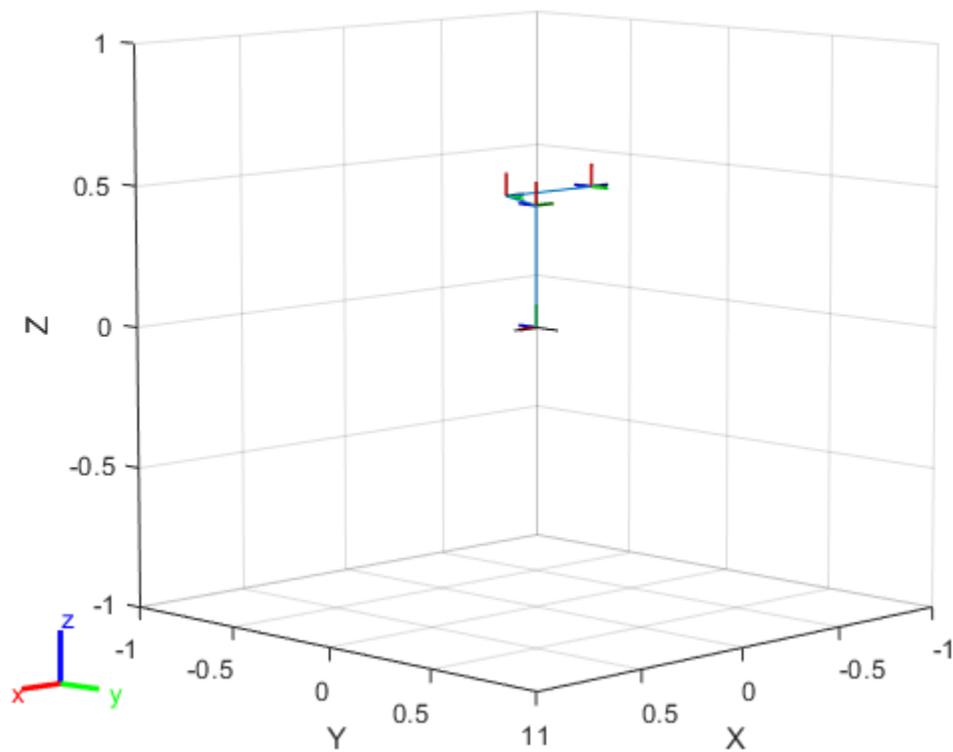

Create random configurations and show them.

```
show(puma1,randomConfiguration(puma1));
```

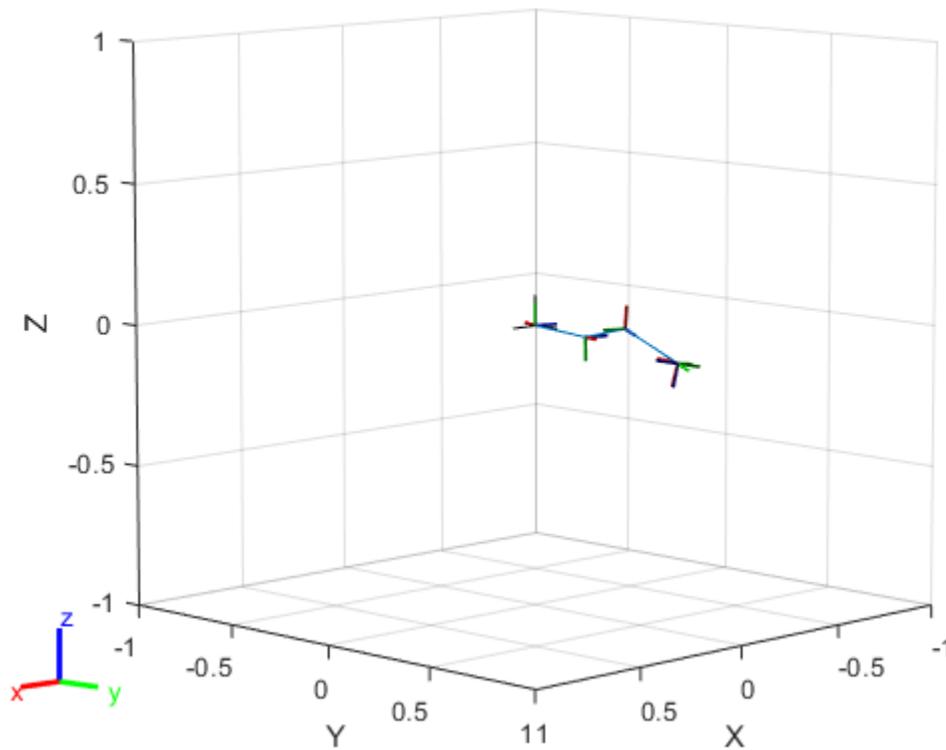

Build Manipulator Robot Using Denavit-Hartenberg Parameters

Use the Denavit-Hartenberg (DH) parameters of the Puma560® robot to build a robot. Each rigid body is added one at a time, with the child-to-parent transform specified by the joint object.

The DH parameters define the geometry of the robot with relation to how each rigid body is attached to its parent. For convenience, setup the parameters for the Puma560 robot in a matrix. The Puma robot is a serial chain manipulator. The DH parameters are relative to the previous line in the matrix, corresponding to the previous joint attachment.

```
dhparams = [0      pi/2    0      0;
            0.4318  0      0      0;
            0.0203 -pi/2   0.15005 0;
            0      pi/2    0.4318 0;
            0      -pi/2   0      0;
            0      0      0      0];
```

Create a rigid body tree object to build the robot.

```
robot = rigidBodyTree;
```

Create the first rigid body and add it to the robot. To add a rigid body:

- 1 Create a `rigidBody` object and give it a unique name.
- 2 Create a `rigidBodyJoint` object and give it a unique name.
- 3 Use `setFixedTransform` to specify the body-to-body transformation using DH parameters. The last element of the DH parameters, `theta`, is ignored because the angle is dependent on the joint position.
- 4 Call `addBody` to attach the first body joint to the base frame of the robot.

```
body1 = rigidBody('body1');
jnt1 = rigidBodyJoint('jnt1','revolute');

setFixedTransform(jnt1,dhparams(1,:), 'dh');
body1.Joint = jnt1;

addBody(robot,body1,'base')
```

Create and add other rigid bodies to the robot. Specify the previous body name when calling `addBody` to attach it. Each fixed transform is relative to the previous joint coordinate frame.

```
body2 = rigidBody('body2');
jnt2 = rigidBodyJoint('jnt2','revolute');
body3 = rigidBody('body3');
jnt3 = rigidBodyJoint('jnt3','revolute');
body4 = rigidBody('body4');
jnt4 = rigidBodyJoint('jnt4','revolute');
body5 = rigidBody('body5');
jnt5 = rigidBodyJoint('jnt5','revolute');
body6 = rigidBody('body6');
jnt6 = rigidBodyJoint('jnt6','revolute');
```

```

setFixedTransform(jnt2,dhparams(2,:), 'dh');
setFixedTransform(jnt3,dhparams(3,:), 'dh');
setFixedTransform(jnt4,dhparams(4,:), 'dh');
setFixedTransform(jnt5,dhparams(5,:), 'dh');
setFixedTransform(jnt6,dhparams(6,:), 'dh');

body2.Joint = jnt2;
body3.Joint = jnt3;
body4.Joint = jnt4;
body5.Joint = jnt5;
body6.Joint = jnt6;

addBody(robot,body2, 'body1')
addBody(robot,body3, 'body2')
addBody(robot,body4, 'body3')
addBody(robot,body5, 'body4')
addBody(robot,body6, 'body5')

```

Verify that your robot was built properly by using the `showdetails` or `show` function. `showdetails` lists all the bodies in the MATLAB® command window. `show` displays the robot with a given configuration (home by default). Calls to `axis` modify the axis limits and hide the axis labels.

```
showdetails(robot)
```

```

-----
Robot: (6 bodies)



  Idx   Body Name   Joint Name   Joint Type   Parent Name(Idx)   Children Name(s)
  ---   -
  1     body1         jnt1         revolute     base(0)            body2(2)
  2     body2         jnt2         revolute     body1(1)           body3(3)
  3     body3         jnt3         revolute     body2(2)           body4(4)
  4     body4         jnt4         revolute     body3(3)           body5(5)
  5     body5         jnt5         revolute     body4(4)           body6(6)
  6     body6         jnt6         revolute     body5(5)
-----

```

```

show(robot);
axis([-0.5,0.5,-0.5,0.5,-0.5,0.5])
axis off

```

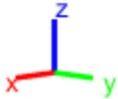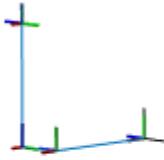

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object.

configuration — Robot configuration

vector | structure

Robot configuration, specified as a vector of joint positions or a structure with joint names and positions for all the bodies in the robot model. You can generate a configuration using

`homeConfiguration(robot)`, `randomConfiguration(robot)`, or by specifying your own joint positions in a structure. To use the vector form of `configuration`, set the `DataFormat` property for the robot to either "row" or "column" .

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Example: 'Frames', 'off'

Parent — Parent of axes

Axes object

Parent of axes, specified as the comma-separated pair consisting of `Parent` and an `Axes` object in which to draw the robot. By default, the robot is plotted in the active axes.

PreservePlot — Preserve robot plot

true (default) | false

Option to reserve robot plot, specified as the comma-separated pair consisting of "PreservePlot" and true or false. When this property is set to true, previous plots displayed by calling `show` are not overwritten. This setting functions similar to calling `hold on` for a standard MATLAB figure, but is limited to the robot body frames. When this property is set to false, previous plots of the robot are overwritten.

Frames — Display body frames

"on" (default) | "off"

Display body frames, specified as "on" or "off". These frames are the coordinate frames of individual bodies on the rigid body tree.

Visuals — Display visual geometries

"on" (default) | "off"

Display visual geometries, specified as "on" or "off". Individual visual geometries can also be turned off by right-clicking them in the figure.

You can either specify individual visual geometries using `addVisual` or by using the `importrobot` to import a robot model with `.stl` files specified.

Output Arguments

ax — Axes graphic handle


Axes object

Axes graphic handle, returned as an Axes object. This object contains the properties of the figure that the robot is plotted onto.


Tips

Your robot model has visual components associated with it. Each `rigidBody` object contains a coordinate frame that is displayed as the body frame. Each body also can have visual meshes associated with them. By default, both of these components are displayed automatically. You can inspect or modify the visual components of the rigid body tree display. Click body frames or visual meshes to highlight them in yellow and see the associated body name, index, and joint type. Right-click to toggle visibility of individual components.


- **Body Frames:** Individual body frames are displayed as a 3-axis coordinate frame. Fixed frames are pink frames. Movable joint types are displayed as RGB axes. You can click a body frame to see the axis of motion. Prismatic joints show a yellow arrow in the direction of the axis of motion and, revolute joints show a circular arrow around the rotation axis.

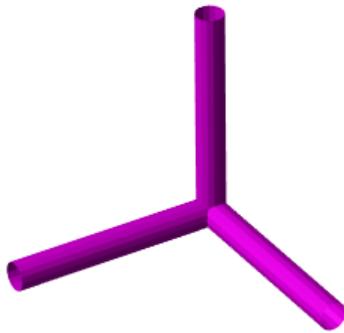

Fixed Joint Frame

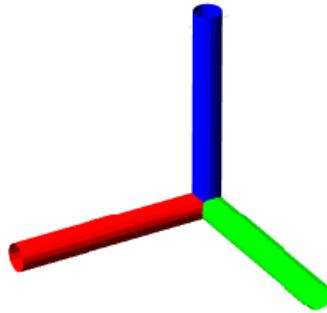


Moveable Joint Frame

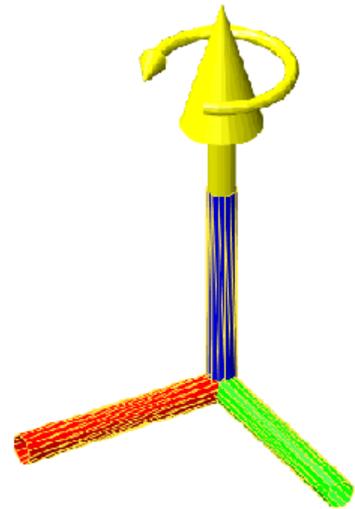

Selected Revolute Joint

- **Visual Meshes:** Individual visual geometries are specified using `addVisual` or by using the `importrobot` to import a robot model with `.stl` files specified. By right-clicking individual bodies in a figure, you can turn off their meshes or specify the `Visuals` name-value pair to hide all visual geometries.

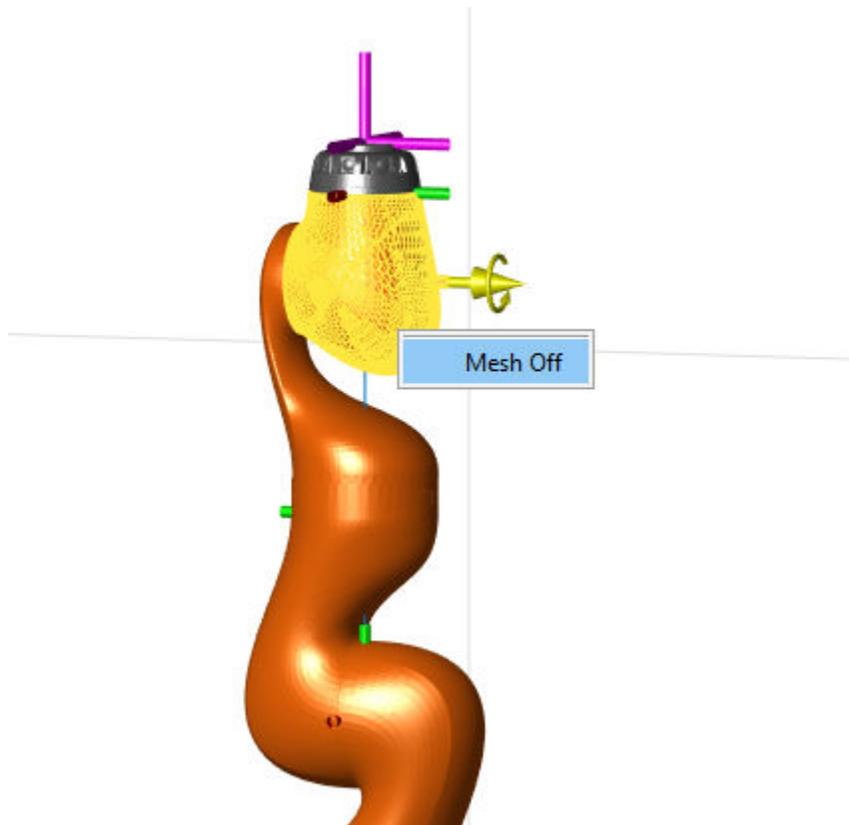

See Also

`importrobot` | `randomConfiguration` | `showdetails`

Introduced in R2016b

showdetails

Show details of robot model

Syntax

```
showdetails(robot)
```

Description

`showdetails(robot)` displays in the MATLAB command window the details of each body in the robot model. These details include the body name, associated joint name, joint type, parent name, and children names.

Examples

Attach Rigid Body and Joint to Rigid Body Tree

Add a rigid body and corresponding joint to a rigid body tree. Each `rigidBody` object contains a `rigidBodyJoint` object and must be added to the `rigidBodyTree` using `addBody`.

Create a rigid body tree.

```
rmtree = rigidBodyTree;
```

Create a rigid body with a unique name.

```
body1 = rigidBody('b1');
```

Create a revolute joint. By default, the `rigidBody` object comes with a fixed joint. Replace the joint by assigning a new `rigidBodyJoint` object to the `body1.Joint` property.

```
jnt1 = rigidBodyJoint('jnt1','revolute');  
body1.Joint = jnt1;
```

Add the rigid body to the tree. Specify the body name that you are attaching the rigid body to. Because this is the first body, use the base name of the tree.

```
basename = rbtree.BaseName;  
addBody(rbtree,body1,basename)
```

Use `showdetails` on the tree to confirm the rigid body and joint were added properly.

```
showdetails(rbtree)
```

```
-----  
Robot: (1 bodies)  
  
  Idx   Body Name   Joint Name   Joint Type   Parent Name(Idx)   Children Name(s)  
  ---   -  
    1      b1        jnt1        revolute        base(0)  
-----
```

Modify a Robot Rigid Body Tree Model

Make changes to an existing `rigidBodyTree` object. You can get replace joints, bodies and subtrees in the rigid body tree.

Load example robots as `rigidBodyTree` objects.

```
load exampleRobots.mat
```

View the details of the Puma robot using `showdetails`.

```
showdetails(puma1)
```

```
-----  
Robot: (6 bodies)  
  
  Idx   Body Name   Joint Name   Joint Type   Parent Name(Idx)   Children Name(s)  
  ---   -  
    1      L1        jnt1        revolute        base(0)           L2(2)  
    2      L2        jnt2        revolute        L1(1)             L3(3)  
    3      L3        jnt3        revolute        L2(2)             L4(4)  
    4      L4        jnt4        revolute        L3(3)             L5(5)  
    5      L5        jnt5        revolute        L4(4)             L6(6)  
    6      L6        jnt6        revolute        L5(5)  
-----
```

Get a specific body to inspect the properties. The only child of the L3 body is the L4 body. You can copy a specific body as well.

```
body3 = getBody(puma1, 'L3');
childBody = body3.Children{1}

childBody =
  rigidBody with properties:

      Name: 'L4'
      Joint: [1x1 rigidBodyJoint]
      Mass: 1
  CenterOfMass: [0 0 0]
      Inertia: [1 1 1 0 0 0]
      Parent: [1x1 rigidBody]
  Children: {[1x1 rigidBody]}
  Visuals: {}
```

```
body3Copy = copy(body3);
```

Replace the joint on the L3 body. You must create a new Joint object and use `replaceJoint` to ensure the downstream body geometry is unaffected. Call `setFixedTransform` if necessary to define a transform between the bodies instead of with the default identity matrices.

```
newJoint = rigidBodyJoint('prismatic');
replaceJoint(puma1, 'L3', newJoint);
```

```
showdetails(puma1)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	prismatic	fixed	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

Remove an entire body and get the resulting subtree using `removeBody`. The removed body is included in the subtree.

```
subtree = removeBody(puma1, 'L4')
```

```
subtree =
  rigidBodyTree with properties:

    NumBodies: 3
    Bodies: {[1x1 rigidBody] [1x1 rigidBody] [1x1 rigidBody]}
    Base: [1x1 rigidBody]
    BodyNames: {'L4' 'L5' 'L6'}
    BaseName: 'L3'
    Gravity: [0 0 0]
    DataFormat: 'struct'
```

Remove the modified L3 body. Add the original copied L3 body to the L2 body, followed by the returned subtree. The robot model remains the same. See a detailed comparison through `showdetails`.

```
removeBody(puma1, 'L3');
addBody(puma1, body3Copy, 'L2')
addSubtree(puma1, 'L3', subtree)
```

```
showdetails(puma1)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
1	L1	jnt1	revolute	base(0)	L2(2)
2	L2	jnt2	revolute	L1(1)	L3(3)
3	L3	jnt3	revolute	L2(2)	L4(4)
4	L4	jnt4	revolute	L3(3)	L5(5)
5	L5	jnt5	revolute	L4(4)	L6(6)
6	L6	jnt6	revolute	L5(5)	

Build Manipulator Robot Using Denavit-Hartenberg Parameters

Use the Denavit-Hartenberg (DH) parameters of the Puma560® robot to build a robot. Each rigid body is added one at a time, with the child-to-parent transform specified by the joint object.

The DH parameters define the geometry of the robot with relation to how each rigid body is attached to its parent. For convenience, setup the parameters for the Puma560 robot in a matrix. The Puma robot is a serial chain manipulator. The DH parameters are relative to the previous line in the matrix, corresponding to the previous joint attachment.

```
dhparams = [0      pi/2    0      0;
            0.4318  0      0      0
            0.0203  -pi/2   0.15005  0;
            0      pi/2    0.4318  0;
            0      -pi/2   0      0;
            0      0      0      0];
```

Create a rigid body tree object to build the robot.

```
robot = rigidBodyTree;
```

Create the first rigid body and add it to the robot. To add a rigid body:

- 1 Create a `rigidBody` object and give it a unique name.
- 2 Create a `rigidBodyJoint` object and give it a unique name.
- 3 Use `setFixedTransform` to specify the body-to-body transformation using DH parameters. The last element of the DH parameters, `theta`, is ignored because the angle is dependent on the joint position.
- 4 Call `addBody` to attach the first body joint to the base frame of the robot.

```
body1 = rigidBody('body1');
jnt1 = rigidBodyJoint('jnt1','revolute');

setFixedTransform(jnt1,dhparams(1,:),'dh');
body1.Joint = jnt1;

addBody(robot,body1,'base')
```

Create and add other rigid bodies to the robot. Specify the previous body name when calling `addBody` to attach it. Each fixed transform is relative to the previous joint coordinate frame.

```

body2 = rigidBody('body2');
jnt2 = rigidBodyJoint('jnt2','revolute');
body3 = rigidBody('body3');
jnt3 = rigidBodyJoint('jnt3','revolute');
body4 = rigidBody('body4');
jnt4 = rigidBodyJoint('jnt4','revolute');
body5 = rigidBody('body5');
jnt5 = rigidBodyJoint('jnt5','revolute');
body6 = rigidBody('body6');
jnt6 = rigidBodyJoint('jnt6','revolute');

setFixedTransform(jnt2,dhparams(2,:), 'dh');
setFixedTransform(jnt3,dhparams(3,:), 'dh');
setFixedTransform(jnt4,dhparams(4,:), 'dh');
setFixedTransform(jnt5,dhparams(5,:), 'dh');
setFixedTransform(jnt6,dhparams(6,:), 'dh');

body2.Joint = jnt2;
body3.Joint = jnt3;
body4.Joint = jnt4;
body5.Joint = jnt5;
body6.Joint = jnt6;

addBody(robot,body2,'body1')
addBody(robot,body3,'body2')
addBody(robot,body4,'body3')
addBody(robot,body5,'body4')
addBody(robot,body6,'body5')

```

Verify that your robot was built properly by using the `showdetails` or `show` function. `showdetails` lists all the bodies in the MATLAB® command window. `show` displays the robot with a given configuration (home by default). Calls to `axis` modify the axis limits and hide the axis labels.



```
showdetails(robot)
```

```
-----
Robot: (6 bodies)
```

Idx	Body Name	Joint Name	Joint Type	Parent Name(Idx)	Children Name(s)
---	-----	-----	-----	-----	-----
1	body1	jnt1	revolute	base(0)	body2(2)
2	body2	jnt2	revolute	body1(1)	body3(3)
3	body3	jnt3	revolute	body2(2)	body4(4)
4	body4	jnt4	revolute	body3(3)	body5(5)

5	body5	jnt5	revolute	body4(4)	body6(6)
6	body6	jnt6	revolute	body5(5)	

```
show(robot);  
axis([-0.5,0.5,-0.5,0.5,-0.5,0.5])  
axis off
```

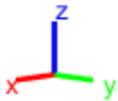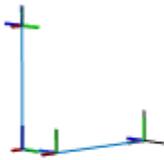

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object.

See Also

`replaceBody` | `replaceJoint` | `show`

Introduced in R2016b

subtree

Create subtree from robot model

Syntax

```
newSubtree = subtree(robot, bodyname)
```

Description

`newSubtree = subtree(robot, bodyname)` creates a new robot model using the parent name of the body specified by `bodyname` as the base name. All subsequently attached bodies (including the body with `bodyname` specified) are added to the subtree. The original robot model is unaffected.

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object.

bodyname — Body name

`string scalar` | `character vector`

Body name, specified as a `string scalar` or `character vector`. This body must be on the robot model specified in `robot`.

Data Types: `char` | `string`

Output Arguments

newSubtree — Robot subtree

`rigidBodyTree` object

Robot subtree, returned as a `rigidBodyTree` object. This new subtree uses the parent name of the body specified by `bodyname` as the base name. All bodies that are attached in the previous robot model (including the body with `bodyname` specified) are added to the subtree.

See Also

`addBody` | `replaceBody` | `rigidBody` | `rigidBodyJoint`

Introduced in R2016b

velocityProduct

Joint torques that cancel velocity-induced forces

Syntax

```
jointTorq = velocityProduct(robot, configuration, jointVel)
```

Description

`jointTorq = velocityProduct(robot, configuration, jointVel)` computes the joint torques required to cancel the forces induced by the specified joint velocities under a certain joint configuration. Gravity torque is not included in this calculation.

Examples

Compute Velocity-Induced Joint Torques

Load a predefined KUKA LBR robot model, which is specified as a `RigidBodyTree` object.

```
load exampleRobots.mat lbr
```

Set the data format to 'row'. For all dynamics calculations, the data format must be either 'row' or 'column'.

```
lbr.DataFormat = 'row';
```

Set the joint velocity vector.

```
qdot = [0 0 0.2 0.3 0 0.1 0];
```

Compute the joint torques required to cancel the velocity-induced joint torques at the robot home configuration (`[]` input). The velocity-induced joint torques equal the negative of the `velocityProduct` output.

```
tau = -velocityProduct(lbr,[],qdot);
```

Input Arguments

robot — Robot model

`rigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object. To use the `velocityProduct` function, set the `DataFormat` property to either `'row'` or `'column'`.

configuration — Robot configuration

vector

Robot configuration, specified as a vector with positions for all nonfixed joints in the robot model. You can generate a configuration using `homeConfiguration(robot)`, `randomConfiguration(robot)`, or by specifying your own joint positions. To use the vector form of configuration, set the `DataFormat` property for the robot to either `'row'` or `'column'`.

jointVel — Joint velocities

vector

Joint velocities, specified as a vector. The number of joint velocities is equal to the velocity degrees of freedom of the robot. To use the vector form of `jointVel`, set the `DataFormat` property for the robot to either `'row'` or `'column'`.

Output Arguments

jointTorq — Joint torques

vector

Joint torques, specified as a vector. Each element corresponds to a torque applied to a specific joint.

See Also

`gravityTorque` | `inverseDynamics` | `massMatrix` | `rigidBodyTree`

Topics

“Control LBR Manipulator Motion Through Joint Torque Commands”

Introduced in R2017a

bodyInfo

Import information for body

Syntax

```
info = bodyInfo(importInfo,bodyName)
```

Description

`info = bodyInfo(importInfo,bodyName)` returns the import information for a body in a `rigidBodyTree` object that is created from calling `importrobot`. Specify the `rigidBodyTreeImportInfo` object from the import process.

Input Arguments

importInfo — Robot import information

`rigidBodyTreeImportInfo` object

Robot import information, specified as a `rigidBodyTreeImportInfo` object. This object is returned when you use `importrobot`.

bodyName — Name of body

character vector | string scalar

Name of a body in the `rigidBodyTree` object that was created using `importrobot`, specified as a character vector or string scalar. Partial string matching is accepted and returns a cell array of structures that match the partial string.

Example: 'Body01'

Data Types: char | string

Output Arguments

info — Import information for specific component

structure | cell array of structures

Import information for specific component, returned as a structure or cell array of structures. This structure contains the information about the imported blocks from Simscape Multibody and the associated components in the `rigidBodyTree` object. The fields of each structure are:

- **BodyName** — Name of the body in the `rigidBodyTree` object.
- **JointName** — Name of the joint associated with **BodyName**.
- **BodyBlocks** — Blocks used from the Simscape Multibody model.
- **JointBlocks** — Joint blocks used from the Simscape Multibody model.

See Also

`importrobot` | `rigidBodyTree` | `rigidBodyTreeImportInfo` | `showdetails`

Introduced in R2018b

bodyInfoFromBlock

Import information for block name

Syntax

```
info = bodyInfo(importInfo,blockName)
```

Description

`info = bodyInfo(importInfo,blockName)` returns the import information for a block in a Simscape Multibody model that is imported from calling `importrobot`. Specify the `rigidBodyTreeImportInfo` object from the import process.

Input Arguments

importInfo — Robot import information

`rigidBodyTreeImportInfo` object

Robot import information, specified as a `rigidBodyTreeImportInfo` object. This object is returned when you use `importrobot`.

blockName — Name of block

character vector | string scalar

Name of a block in the Simscape Multibody model that was imported using `importrobot`, specified as a character vector or string scalar. Partial string matching is accepted and returns a cell array of structures that match the partial string.

Example: 'Prismatic Joint 2'

Data Types: char | string

Output Arguments

info — Import information for specific component

structure | cell array of structures

Import information for specific component, returned as a structure or cell array of structures. This structure contains the information about the imported blocks from Simscape Multibody and the associated components in the `rigidBodyTree` object. The fields of each structure are:

- **BodyName** — Name of the body in the `rigidBodyTree` object.
- **JointName** — Name of the joint associated with **BodyName**.
- **BodyBlocks** — Blocks used from the Simscape Multibody model.
- **JointBlocks** — Joint blocks used from the Simscape Multibody model.

See Also

`importrobot` | `rigidBodyTree` | `rigidBodyTreeImportInfo` | `showdetails`

Introduced in R2018b

bodyInfoFromJoint

Import information for given joint name

Syntax

```
info = bodyInfo(importInfo, jointName)
```

Description

`info = bodyInfo(importInfo, jointName)` returns the import information for a joint in a `rigidBodyTree` object that is created from calling `importrobot`. Specify the `rigidBodyTreeImportInfo` object from the import process.

Input Arguments

importInfo — Robot import information

`rigidBodyTreeImportInfo` object

Robot import information, specified as a `rigidBodyTreeImportInfo` object. This object is returned when you use `importrobot`.

jointName — Name of joint

character vector | string scalar

Name of a joint in the `rigidBodyTree` object that was created using `importrobot`, specified as a character vector or string scalar. Partial string matching is accepted and returns a cell array of structures that match the partial string.

Example: 'Joint01'

Data Types: char | string

Output Arguments

info — Import information for specific component

structure | cell array of structures

Import information for specific component, specified as a structure or cell array of structures. This structure contains the information about the imported blocks from Simscape Multibody and the associated components in the `rigidBodyTree` object. The fields of each structure are:

- **BodyName** — Name of the body in the `rigidBodyTree` object.
- **JointName** — Name of the joint associated with **BodyName**.
- **BodyBlocks** — Blocks used from the Simscape Multibody model.
- **JointBlocks** — Joint blocks used from the Simscape Multibody model.

See Also

`importrobot` | `rigidBodyTree` | `rigidBodyTreeImportInfo`

Introduced in R2018b

showdetails

Display details of imported robot

Syntax

```
showdetails(importInfo)
```

Description

`showdetails(importInfo)` displays the details of each body in the `rigidBodyTree` object that is created from calling `importrobot`. Specify the `rigidBodyTreeImportInfo` object from the import process.

The list shows the bodies with their associated joint name, joint type, source blocks, parent body name, and children body names. The list also provides highlight links to the associated blocks used in the Simscape Multibody model.

Note The Highlight links assume the block names are unchanged.

Input Arguments

importInfo — Robot import information

`rigidBodyTreeImportInfo` object

Robot import information, specified as a `rigidBodyTreeImportInfo` object. This object is returned when you use `importrobot`.

See Also

`importrobot` | `rigidBodyTree` | `rigidBodyTreeImportInfo`

Introduced in R2018b

copy

Create copy of particle filter

Syntax

```
b = copy(a)
```

Description

`b = copy(a)` copies each element in the array of handles, `a`, to the new array of handles, `b`.

The `copy` method does not copy dependent properties. MATLAB does not call `copy` recursively on any handles contained in property values. MATLAB also does not call the class constructor or property-set methods during the copy operation.

Input Arguments

a — Object array

handle

Object array, specified as a handle.

Output Arguments

b — Object array containing copies of the objects in `a`

handle

Object array containing copies of the object in `a`, specified as a handle.

`b` has the same number of elements and is the same size and class of `a`. `b` is the same class as `a`. If `a` is empty, `b` is also empty. If `a` is heterogeneous, `b` is also heterogeneous. If `a` contains deleted handles, then `copy` creates deleted handles of the same class in `b`.

Dynamic properties and listeners associated with objects in **a** are not copied to objects in **b**.

See Also

`correct` | `getStateEstimate` | `initialize` | `predict` | `resamplingPolicyPF` | `stateEstimatorPF`

Topics

“Track a Car-Like Robot Using Particle Filter”
“Particle Filter Parameters”
“Particle Filter Workflow”

Introduced in R2016a

correct

Adjust state estimate based on sensor measurement

Syntax

```
[stateCorr, stateCov] = correct(pf, measurement)
[stateCorr, stateCov] = correct(pf, measurement, varargin)
```

Description

`[stateCorr, stateCov] = correct(pf, measurement)` calculates the corrected system state and its associated uncertainty covariance based on a sensor measurement at the current time step. `correct` uses the `MeasurementLikelihoodFcn` property from the particle filter object, `pf`, as a function to calculate the likelihood of the sensor measurement for each particle. The two inputs to the `MeasurementLikelihoodFcn` function are:

- 1 `pf` - The `stateEstimatorPF` object, which contains the particles of the current iteration
- 2 `measurement` - The sensor measurements used to correct the state estimate

The `MeasurementLikelihoodFcn` function then extracts the best state estimate and covariance based on the setting in the `StateEstimationMethod` property.

`[stateCorr, stateCov] = correct(pf, measurement, varargin)` passes all additional arguments in `varargin` to the underlying `MeasurementLikelihoodFcn` after the first three required inputs.

Examples

Particle Filter Prediction and Correction

Create a `stateEstimatorPF` object, and execute a prediction and correction step for state estimation. The particle filter gives a predicted state estimate based on the return

value of `StateTransitionFcn`. It then corrects the state based on a given measurement and the return value of `MeasurementLikelihoodFcn`.

Create a particle filter with the default three states.

```
pf = stateEstimatorPF
```

```
pf =
```

```
stateEstimatorPF with properties:
```

```
    NumStateVariables: 3
      NumParticles: 1000
    StateTransitionFcn: @nav.algs.gaussianMotion
MeasurementLikelihoodFcn: @nav.algs.fullStateMeasurement
  IsStateVariableCircular: [0 0 0]
    ResamplingPolicy: [1x1 resamplingPolicyPF]
    ResamplingMethod: 'multinomial'
  StateEstimationMethod: 'mean'
    StateOrientation: 'row'
      Particles: [1000x3 double]
      Weights: [1000x1 double]
        State: 'Use the getStateEstimate function to see the value.'
    StateCovariance: 'Use the getStateEstimate function to see the value.'
```

Specify the mean state estimation method and systematic resampling method.

```
pf.StateEstimationMethod = 'mean';
pf.ResamplingMethod = 'systematic';
```

Initialize the particle filter at state [4 1 9] with unit covariance (`eye(3)`). Use 5000 particles.

```
initialize(pf,5000,[4 1 9],eye(3));
```

Assuming a measurement [4.2 0.9 9], run one predict and one correct step.

```
[statePredicted,stateCov] = predict(pf);
[stateCorrected,stateCov] = correct(pf,[4.2 0.9 9]);
```

Get the best state estimate based on the `StateEstimationMethod` algorithm.

```
stateEst = getStateEstimate(pf)
```

```
stateEst = 1x3
```

4.1562 0.9185 9.0202

Input Arguments

pf — stateEstimatorPF object

handle

stateEstimatorPF object, specified as a handle. See stateEstimatorPF for more information.

measurement — Sensor measurements

array

Sensor measurements, specified as an array. This input is passed directly into the MeasurementLikelihoodFcn property of pf. It is used to calculate the likelihood of the sensor measurement for each particle.

varargin — Variable-length input argument list

comma-separated list

Variable-length input argument list, specified as a comma-separated list. This input is passed directly into the MeasurementLikelihoodFcn property of pf. It is used to calculate the likelihood of the sensor measurement for each particle. When you call:

```
correct(pf,measurement,arg1,arg2)
```

MATLAB essentially calls measurementLikelihoodFcn as:

```
measurementLikelihoodFcn(pf,measurement,arg1,arg2)
```

Output Arguments

stateCorr — Corrected system state

vector with length NumStateVariables

Corrected system state, returned as a row vector with length NumStateVariables. The corrected state is calculated based on the StateEstimationMethod algorithm and the MeasurementLikelihoodFcn.

stateCov — Corrected system covariance

N-by-*N* matrix | []

Corrected system variance, returned as an *N*-by-*N* matrix, where *N* is the value of `NumStateVariables` property from `pf`. The corrected state is calculated based on the `StateEstimationMethod` algorithm and the `MeasurementLikelihoodFcn`. If you specify a state estimate method that does not support covariance, then the function returns `stateCov` as [].

See Also

`correct` | `getStateEstimate` | `initialize` | `predict` | `resamplingPolicyPF` | `stateEstimatorPF`

Topics

“Track a Car-Like Robot Using Particle Filter”

“Particle Filter Parameters”

“Particle Filter Workflow”

Introduced in R2016a

getStateEstimate

Extract best state estimate and covariance from particles

Syntax

```
stateEst = getStateEstimate(pf)
[stateEst, stateCov] = getStateEstimate(pf)
```

Description

`stateEst = getStateEstimate(pf)` returns the best state estimate based on the current set of particles. The estimate is extracted based on the `StateEstimationMethod` property from the `stateEstimatorPF` object, `pf`.

`[stateEst, stateCov] = getStateEstimate(pf)` also returns the covariance around the state estimate. The covariance is a measure of the uncertainty of the state estimate. Not all state estimate methods support covariance output. In this case, `getStateEstimate` returns `stateCov` as `[]`.

Examples

Particle Filter Prediction and Correction

Create a `stateEstimatorPF` object, and execute a prediction and correction step for state estimation. The particle filter gives a predicted state estimate based on the return value of `StateTransitionFcn`. It then corrects the state based on a given measurement and the return value of `MeasurementLikelihoodFcn`.

Create a particle filter with the default three states.

```
pf = stateEstimatorPF
pf =
    stateEstimatorPF with properties:
```

```
    NumStateVariables: 3
      NumParticles: 1000
    StateTransitionFcn: @nav.algs.gaussianMotion
    MeasurementLikelihoodFcn: @nav.algs.fullStateMeasurement
    IsStateVariableCircular: [0 0 0]
      ResamplingPolicy: [1x1 resamplingPolicyPF]
      ResamplingMethod: 'multinomial'
    StateEstimationMethod: 'mean'
      StateOrientation: 'row'
        Particles: [1000x3 double]
        Weights: [1000x1 double]
        State: 'Use the getStateEstimate function to see the value.'
      StateCovariance: 'Use the getStateEstimate function to see the value.'
```

Specify the mean state estimation method and systematic resampling method.

```
pf.StateEstimationMethod = 'mean';
pf.ResamplingMethod = 'systematic';
```

Initialize the particle filter at state [4 1 9] with unit covariance (`eye(3)`). Use 5000 particles.

```
initialize(pf,5000,[4 1 9],eye(3));
```

Assuming a measurement [4.2 0.9 9], run one predict and one correct step.

```
[statePredicted,stateCov] = predict(pf);
[stateCorrected,stateCov] = correct(pf,[4.2 0.9 9]);
```

Get the best state estimate based on the `StateEstimationMethod` algorithm.

```
stateEst = getStateEstimate(pf)
```

```
stateEst = 1x3
```

```
    4.1562    0.9185    9.0202
```

Input Arguments

pf — stateEstimatorPF object
handle

stateEstimatorPF object, specified as a handle. See stateEstimatorPF for more information.

Output Arguments

stateEst — Best state estimate
vector

Best state estimate, returned as a row vector with length NumStateVariables. The estimate is extracted based on the StateEstimationMethod algorithm specified in pf.

stateCov — Corrected system covariance
N-by-*N* matrix | []

Corrected system variance, returned as an *N*-by-*N* matrix, where *N* is the value of NumStateVariables property from pf. The corrected state is calculated based on the StateEstimationMethod algorithm and the MeasurementLikelihoodFcn. If you specify a state estimate method that does not support covariance, then the function returns stateCov as [].

See Also

correct | getStateEstimate | initialize | predict | resamplingPolicyPF | stateEstimatorPF

Topics

“Track a Car-Like Robot Using Particle Filter”

“Particle Filter Parameters”

“Particle Filter Workflow”

Introduced in R2016a

initialize

Initialize the state of the particle filter

Syntax

```
initialize(pf,numParticles,mean,covariance)  
initialize(pf,numParticles,stateBounds)  
initialize( ____,Name,Value)
```

Description

`initialize(pf,numParticles,mean,covariance)` initializes the particle filter object, `pf`, with a specified number of particles, `numParticles`. The initial states of the particles in the state space are determined by sampling from the multivariate normal distribution with the specified `mean` and `covariance`.

`initialize(pf,numParticles,stateBounds)` determines the initial location of the particles by sample from the multivariate uniform distribution within the specified `stateBounds`.

`initialize(____,Name,Value)` initializes the particles with additional options specified by one or more `Name,Value` pair arguments.

Examples

Particle Filter Prediction and Correction

Create a `stateEstimatorPF` object, and execute a prediction and correction step for state estimation. The particle filter gives a predicted state estimate based on the return value of `StateTransitionFcn`. It then corrects the state based on a given measurement and the return value of `MeasurementLikelihoodFcn`.

Create a particle filter with the default three states.

```

pf = stateEstimatorPF

pf =
  stateEstimatorPF with properties:
      NumStateVariables: 3
      NumParticles: 1000
      StateTransitionFcn: @nav.algs.gaussianMotion
      MeasurementLikelihoodFcn: @nav.algs.fullStateMeasurement
      IsStateVariableCircular: [0 0 0]
      ResamplingPolicy: [1x1 resamplingPolicyPF]
      ResamplingMethod: 'multinomial'
      StateEstimationMethod: 'mean'
      StateOrientation: 'row'
      Particles: [1000x3 double]
      Weights: [1000x1 double]
      State: 'Use the getStateEstimate function to see the value.'
      StateCovariance: 'Use the getStateEstimate function to see the value.'

```

Specify the mean state estimation method and systematic resampling method.

```

pf.StateEstimationMethod = 'mean';
pf.ResamplingMethod = 'systematic';

```

Initialize the particle filter at state [4 1 9] with unit covariance (`eye(3)`). Use 5000 particles.

```
initialize(pf,5000,[4 1 9],eye(3));
```

Assuming a measurement [4.2 0.9 9], run one predict and one correct step.

```
[statePredicted,stateCov] = predict(pf);
[stateCorrected,stateCov] = correct(pf,[4.2 0.9 9]);
```

Get the best state estimate based on the StateEstimationMethod algorithm.

```
stateEst = getStateEstimate(pf)
```

```
stateEst = 1x3
```

```
    4.1562    0.9185    9.0202
```

Input Arguments

pf — **stateEstimatorPF** object

handle

stateEstimatorPF object, specified as a handle. See stateEstimatorPF for more information.

numParticles — **Number of particles used in the filter**

scalar

Number of particles used in the filter, specified as a scalar.

mean — **Mean of particle distribution**

vector

Mean of particle distribution, specified as a vector. The NumStateVariables property of pf is set based on the length of this vector.

covariance — **Covariance of particle distribution**

N-by-*N* matrix

Covariance of particle distribution, specified as an *N*-by-*N* matrix, where *N* is the value of NumStateVariables property from pf.

stateBounds — **Bounds of state variables**

n-by-2 matrix

Bounds of state variables, specified as an *n*-by-2 matrix. The NumStateVariables property of pf is set based on the value of *n*. Each row corresponds to the lower and upper limit of the corresponding state variable.

Name-Value Pair Arguments

Specify optional comma-separated pairs of Name, Value arguments. Name is the argument name and Value is the corresponding value. Name must appear inside quotes. You can specify several name and value pair arguments in any order as Name1, Value1, ..., NameN, ValueN.

Example: "CircularVariables", [0 0 1]

CircularVariables – Circular variables

logical vector

Circular variables, specified as a logical vector. Each state variable that uses circular or angular coordinates is indicated with a 1. The length of the vector is equal to the NumStateVariables property of pf.

See Also

correct | getStateEstimate | initialize | predict | resamplingPolicyPF | stateEstimatorPF

Topics

“Track a Car-Like Robot Using Particle Filter”
“Particle Filter Parameters”
“Particle Filter Workflow”

Introduced in R2016a

predict

Predict state of robot in next time step

Syntax

```
[statePred, stateCov] = predict(pf)
[statePred, stateCov] = predict(pf, varargin)
```

Description

`[statePred, stateCov] = predict(pf)` calculates the predicted system state and its associated uncertainty covariance. `predict` uses the `StateTransitionFcn` property of `stateEstimatorPF` object, `pf`, to evolve the state of all particles. It then extracts the best state estimate and covariance based on the setting in the `StateEstimationMethod` property.

`[statePred, stateCov] = predict(pf, varargin)` passes all additional arguments specified in `varargin` to the underlying `StateTransitionFcn` property of `pf`. The first input to `StateTransitionFcn` is the set of particles from the previous time step, followed by all arguments in `varargin`.

Examples

Particle Filter Prediction and Correction

Create a `stateEstimatorPF` object, and execute a prediction and correction step for state estimation. The particle filter gives a predicted state estimate based on the return value of `StateTransitionFcn`. It then corrects the state based on a given measurement and the return value of `MeasurementLikelihoodFcn`.

Create a particle filter with the default three states.

```
pf = stateEstimatorPF
```

```

pf =
  stateEstimatorPF with properties:

      NumStateVariables: 3
      NumParticles: 1000
      StateTransitionFcn: @nav.algs.gaussianMotion
      MeasurementLikelihoodFcn: @nav.algs.fullStateMeasurement
      IsStateVariableCircular: [0 0 0]
      ResamplingPolicy: [1x1 resamplingPolicyPF]
      ResamplingMethod: 'multinomial'
      StateEstimationMethod: 'mean'
      StateOrientation: 'row'
      Particles: [1000x3 double]
      Weights: [1000x1 double]
      State: 'Use the getStateEstimate function to see the value.'
      StateCovariance: 'Use the getStateEstimate function to see the value.'

```

Specify the mean state estimation method and systematic resampling method.

```

pf.StateEstimationMethod = 'mean';
pf.ResamplingMethod = 'systematic';

```

Initialize the particle filter at state [4 1 9] with unit covariance (`eye(3)`). Use 5000 particles.

```

initialize(pf,5000,[4 1 9],eye(3));

```

Assuming a measurement [4.2 0.9 9], run one predict and one correct step.

```

[statePredicted,stateCov] = predict(pf);
[stateCorrected,stateCov] = correct(pf,[4.2 0.9 9]);

```

Get the best state estimate based on the `StateEstimationMethod` algorithm.

```

stateEst = getStateEstimate(pf)

```

```

stateEst = 1x3

```

```

    4.1562    0.9185    9.0202

```

Input Arguments

pf — **stateEstimatorPF** object

handle

stateEstimatorPF object, specified as a handle. See stateEstimatorPF for more information.

varargin — **Variable-length input argument list**

comma-separated list

Variable-length input argument list, specified as a comma-separated list. This input is passed directly into the StateTransitionFcn property of pf to evolve the system state for each particle. When you call:

```
predict(pf, arg1, arg2)
```

MATLAB essentially calls the stateTranstionFcn as:

```
stateTransitionFcn(pf, prevParticles, arg1, arg2)
```

Output Arguments

statePred — **Predicted system state**

vector

Predicted system state, returned as a vector with length NumStateVariables. The predicted state is calculated based on the StateEstimationMethod algorithm.

stateCov — **Corrected system covariance**

N -by- N matrix | []

Corrected system variance, returned as an N -by- N matrix, where N is the value of NumStateVariables property from pf. The corrected state is calculated based on the StateEstimationMethod algorithm and the MeasurementLikelihoodFcn. If you specify a state estimate method that does not support covariance, then the function returns stateCov as [].

See Also

`correct` | `getStateEstimate` | `initialize` | `predict` | `resamplingPolicyPF` | `stateEstimatorPF`

Topics

“Track a Car-Like Robot Using Particle Filter”

“Particle Filter Parameters”

“Particle Filter Workflow”

Introduced in R2016a

connect

Connect poses with UAV Dubins connection path

Syntax

```
[pathSegObj,pathCost] = connect(connectionObj,start,goal)
[pathSegObj,pathCost] = connect(connectionObj,start,
goal,'PathSegments','all')
```

Description

[pathSegObj,pathCost] = connect(connectionObj,start,goal) connects the start and goal poses using the specified uavDubinsConnection object. The path segment object with the lowest cost is returned.

[pathSegObj,pathCost] = connect(connectionObj,start,goal,'PathSegments','all') returns all possible path segments as a cell array with their associated costs.

Examples

Connect Poses of All Valid UAV Dubins Paths

This example shows how to calculate all valid UAV Dubins path segment and connect poses using the uavDubinsConnection object.

Create a uavDubinsConnection object.

```
connectionObj = uavDubinsConnection;
```

Define start and goal poses as [x, y, z, headingAngle] vectors.


```
startPose = [0 0 0 0]; % [meters, meters, meters, radians]
goalPose = [0 0 20 pi];
```


Calculate all possible path segment and connect the poses.

```
[pathSegObj,pathCosts] = connect(connectionObj,startPose,goalPose,'PathSegments','all');
```


Check the validity of all the possible path segments and display the valid paths along with their motion type and path cost.

```
for i = 1:length(pathSegObj)
    if ~isnan(pathSegObj{i}.Length)
        figure
        show(pathSegObj{i})
        fprintf('Motion Type: %s\nPath Cost: %f\n',strjoin(pathSegObj{i}.MotionTypes),pathCosts{i})
    end
end
```

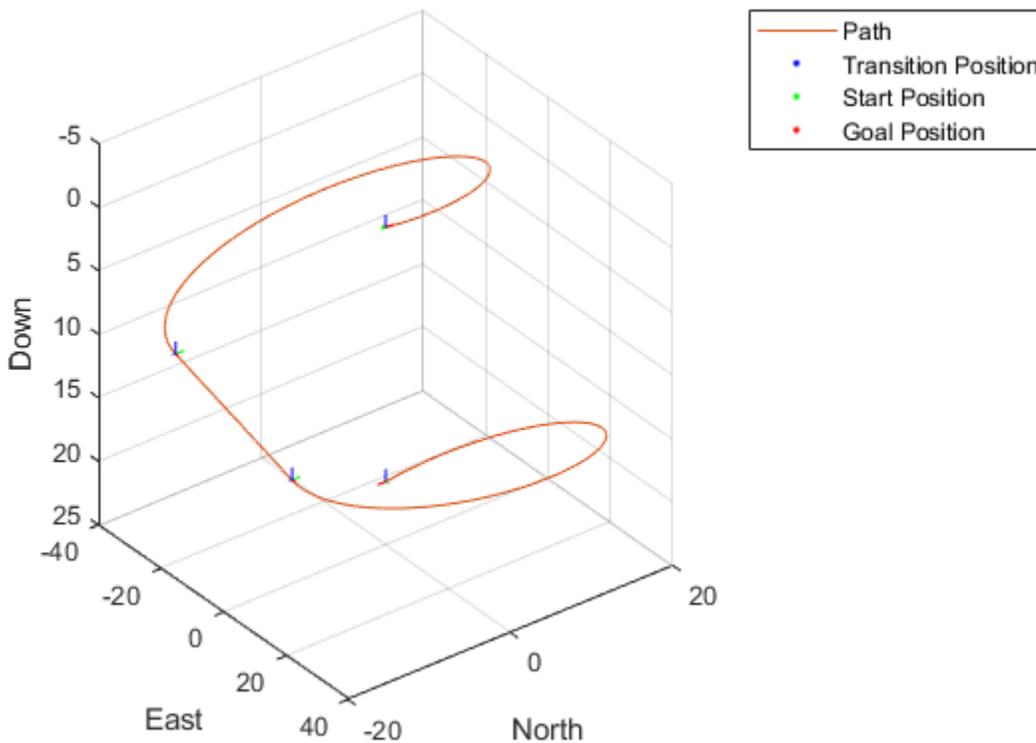

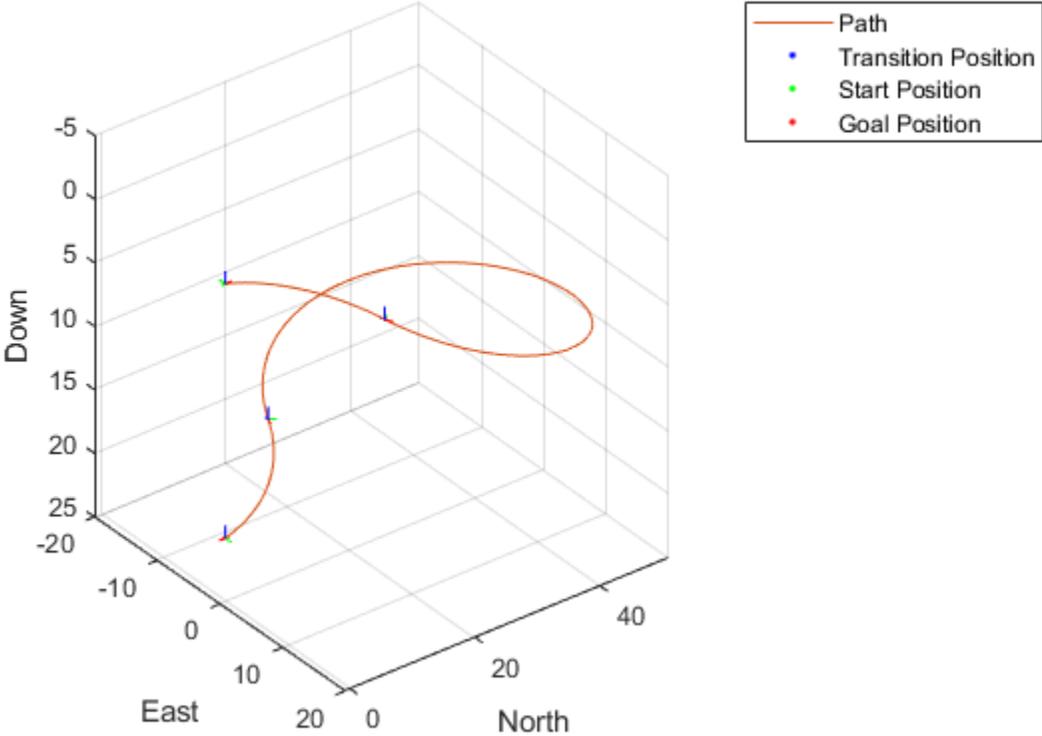

Motion Type: R L R N
Path Cost: 138.373157

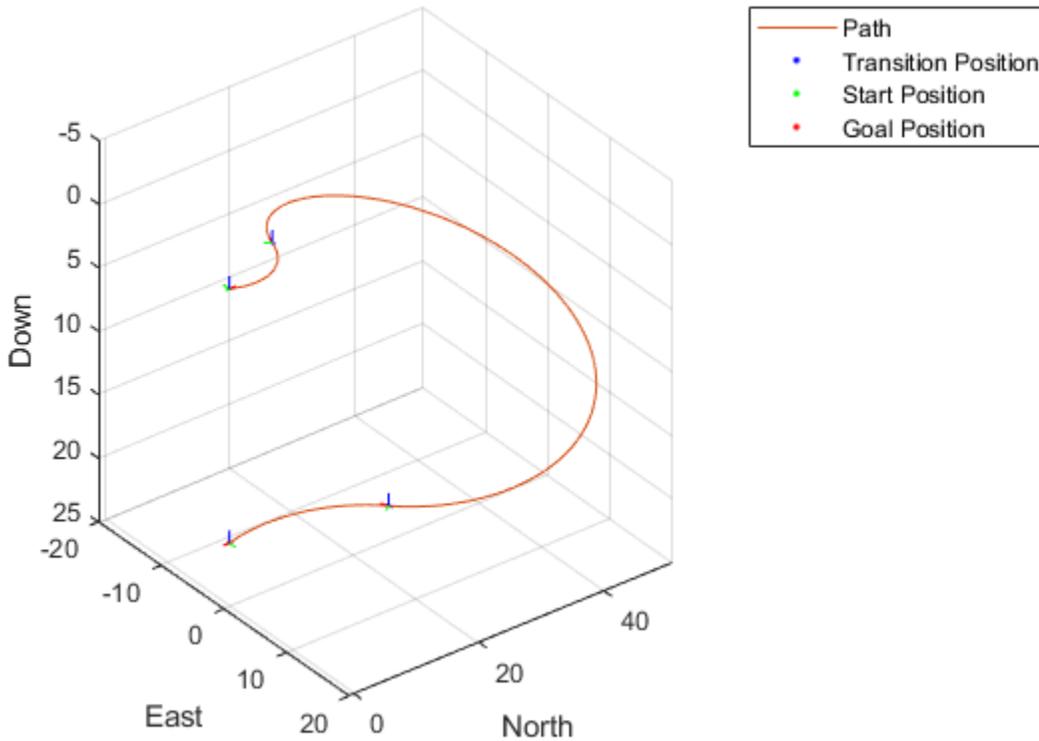

Motion Type: L R L N
Path Cost: 138.373157

Input Arguments

connectionObj — Path connection type

uavDubinsConnection object

Path connection type, specified as a uavDubinsConnection object. This object defines the parameters of the connection.

start — Initial pose of UAV

four-element numeric vector or matrix

Initial pose of the UAV at the start of the path segment, specified as a four-element numeric vector or matrix $[x, y, z, headingAngle]$.

x , y , and z specify the position in meters. *headingAngle* specifies the heading angle in radians. The heading angle is measured clockwise from north to east. Each row of the matrix corresponds to a different start pose.

The pose follows the north-east-down coordinate system.

The `start` and `goal` pose inputs can be any of these combinations:

- Single start pose with single goal pose.
- Multiple start poses with single goal pose.
- Single start pose with multiple goal poses.
- Multiple start poses with multiple goal poses.

goal — Goal pose of UAV

four-element numeric vector or matrix

Goal pose of the UAV at the end of the path segment, specified as a four-element numeric vector or matrix $[x, y, z, headingAngle]$.

x , y , and z specify the position in meters. *headingAngle* specifies the heading angle in radians. The heading angle is measured clockwise from north to east. Each row of the matrix corresponds to a different goal pose.

The pose follows the north-east-down coordinate system.

The `start` and `goal` pose inputs can be any of these combinations:

- Single start pose with single goal pose.
- Multiple start poses with single goal pose.
- Single start pose with multiple goal poses.
- Multiple start poses with multiple goal poses.

Output Arguments

pathSegObj — Path segments

cell array of `uavDubinsPathSegment` objects

Path segments, returned as a cell array of `uavDubinsPathSegment` objects. The type of object depends on the input `connectionObj`. The size of the cell array depends on whether you use single or multiple `start` and `goal` poses.

By default, the function returns the path with the lowest cost for each `start` and `goal` pose.

When calling the `connect` function using the `'PathSegments'`, `'all'` name-value pair, the cell array contains all valid path segments between the specified `start` and `goal` poses.

pathCost — Cost of path segment

positive numeric scalar | positive numeric vector | positive numeric matrix

Cost of path segments, returned either as a positive numeric scalar, vector, or matrix. Each element of the cost vector corresponds to a path segment in `pathSegObj`.

By default, the function returns the path with the lowest cost for each `start` and `goal` pose.

See Also

`dubinsConnection` | `reedsSheppConnection` | `uavDubinsPathSegment`

Introduced in R2019b

interpolate

Interpolate poses along UAV Dubins path segment

Syntax

```
poses = interpolate(pathSegObj, lengths)
```

Description

`poses = interpolate(pathSegObj, lengths)` interpolates poses along the path segment at the specified path lengths. Transitions between motion types are always included.

Examples

Interpolate Poses for UAV Dubins Path

This example shows how to connect poses using the `uavDubinsConnection` object and interpolate the poses along the path segment at the specified path lengths.

Create a `uavDubinsConnection` object.

```
connectionObj = uavDubinsConnection;
```

Define start and goal poses as `[x, y, z, headingAngle]` vectors.


```
startPose = [0 0 0 0]; % [meters, meters, meters, radians]  
goalPose = [0 0 20 pi];
```

Calculate a valid path segment and connect the poses.

```
[pathSegObj, pathCosts] = connect(connectionObj, startPose, goalPose);
```

Show the generated path.

```
show(pathSegObj{1})
```

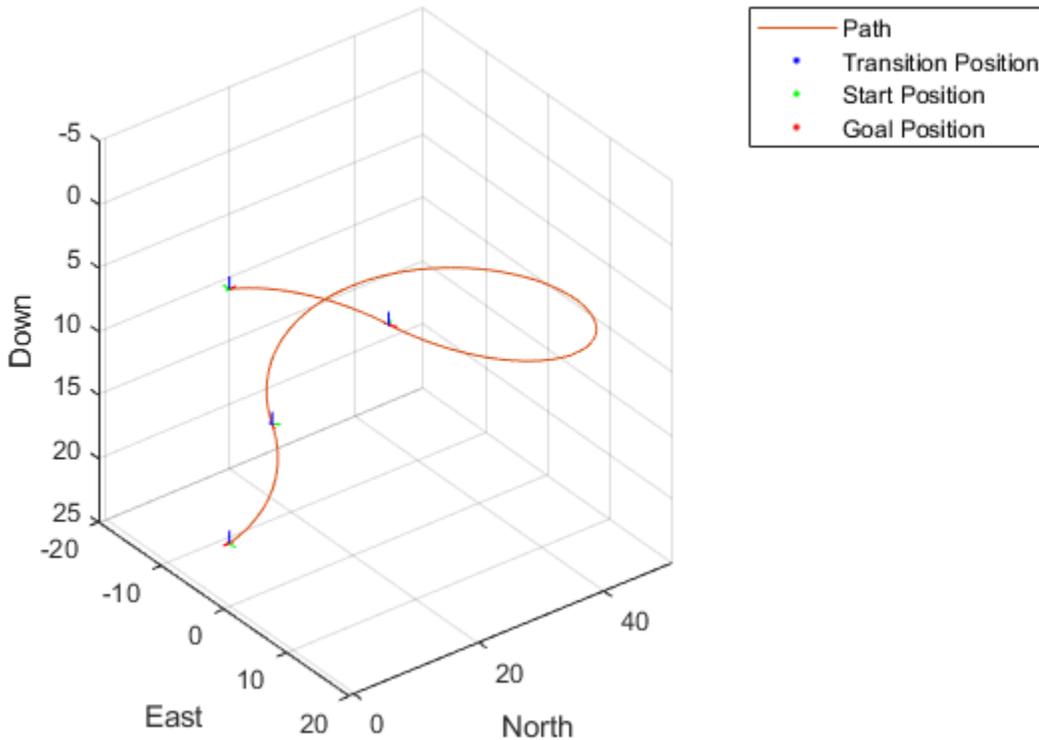

Specify the interval to interpolate along the path.

```
stepSize = pathSegObj{1}.Length/10;
lengths = 0:stepSize:pathSegObj{1}.Length;
```

Interpolate the poses along the path segment at the specified path lengths.

```
poses = interpolate(pathSegObj{1},lengths); % [x, y, z, headingAngle, flightPathAngle,
```

Compute the translation and rotation matrix of the transition poses, excluding the start and goal poses. The `posesTranslation` matrix consists of the first three columns of the `poses` matrix specifying the position `x`, `y`, and `z`.


```
posesTranslation = poses(2:end-1,1:3); % [x, y, z]
```

Increment the elements of the fourth column of the poses matrix specifying the headingAngle by π and assign it as the first column of the rotation matrix posesEulRot in ZYX Euler angle representation. A column of π and a column of zeros forms the second and the third columns of the posesEulRot matrix, respectively. Convert the posesEulRot matrix from Euler angles to quaternion and assign to posesRotation.

```
N = size(poses,1)-2;  
posesEulRot = [poses(2:end-1,4)+pi, ones(N,1)*pi, zeros(N,1)]; % [headingAngle + pi, pi,  
posesRotation = quaternion(eul2quat(posesEulRot, 'ZYX'));
```

Plot transform frame of the transition poses by specifying their translations and rotations using plotTransforms.

```
hold on  
plotTransforms(posesTranslation,posesRotation, 'MeshFilePath', 'fixedwing.stl', 'MeshColor
```

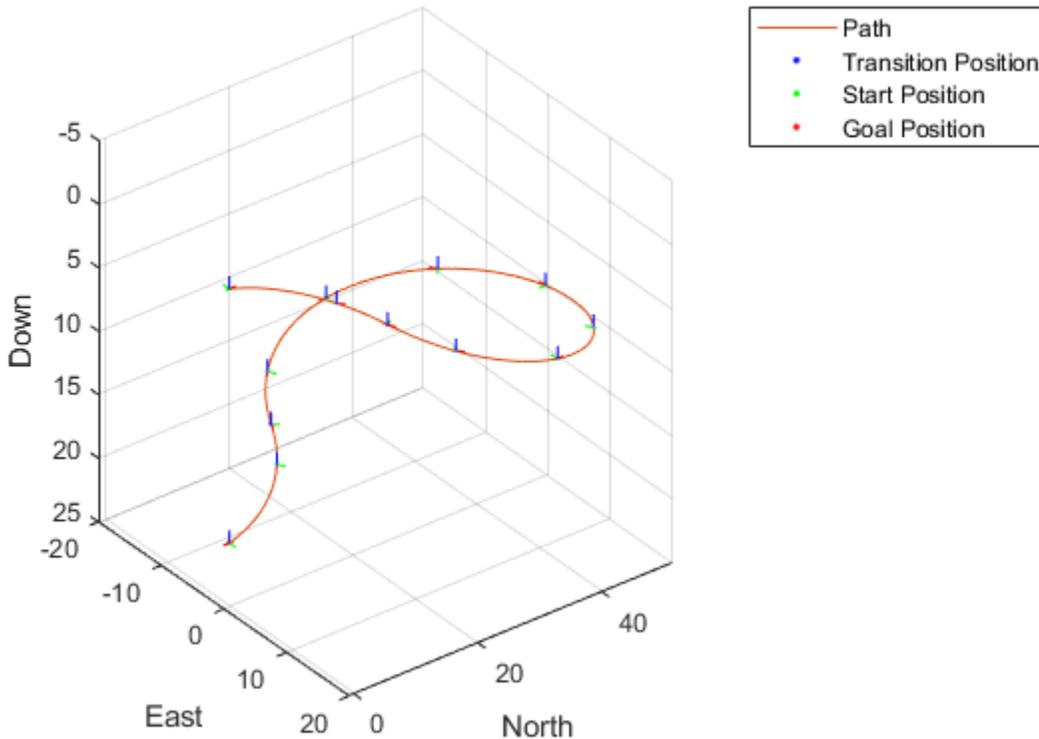

Input Arguments

pathSegObj — Path segment

`uavDubinsPathSegment` object

Path segment, specified as a `uavDubinsPathSegment` object.

lengths — Lengths along path to interpolate poses

positive numeric vector

Lengths along path to interpolate poses, specified as a positive numeric vector in meters.

For example, specify $\theta : stepSize : pathSegObj \{1\} . Length$ to interpolate at the interval specified by *stepSize* along the path. Transitions between motion types are always included.

Data Types: `double`

Output Arguments

poses — Interpolated poses

six-element numeric matrix

Interpolated poses along the path segment, returned as a six-element numeric matrix [*x*, *y*, *z*, *headingAngle*, *flightPathAngle*, *rollAngle*]. Each row of the matrix corresponds to a different interpolated pose along the path.

x, *y*, and *z* specify the position in meters. *headingAngle*, *flightPathAngle*, and *rollAngle* specify the orientation in radians.

See Also

`dubinsPathSegment` | `reedsSheppPathSegment`

Introduced in R2019b

show

Visualize UAV Dubins path segment

Syntax

```
axHandle = show(pathSegObj)
axHandle = show(pathSegObj, Name, Value)
```

Description

`axHandle = show(pathSegObj)` plots the path segment with start and goal positions and the transitions between the motion types.

Note Plotting uses only the position and the yaw angle.

`axHandle = show(pathSegObj, Name, Value)` specifies additional name-value pair arguments to control display settings.

Examples

Connect Poses Using UAV Dubins Connection Path

This example shows how to calculate a UAV Dubins path segment and connect poses using the `uavDubinsConnection` object.

Create a `uavDubinsConnection` object.

```
connectionObj = uavDubinsConnection;
```

Define start and goal poses as `[x, y, z, headingAngle]` vectors.


```
startPose = [0 0 0 0]; % [meters, meters, meters, radians]
goalPose = [0 0 20 pi];
```

Calculate a valid path segment and connect the poses. Returns a path segment object with the lowest path cost.

```
[pathSegObj, pathCosts] = connect(connectionObj, startPose, goalPose);
```

Show the generated path.

```
show(pathSegObj{1})
```

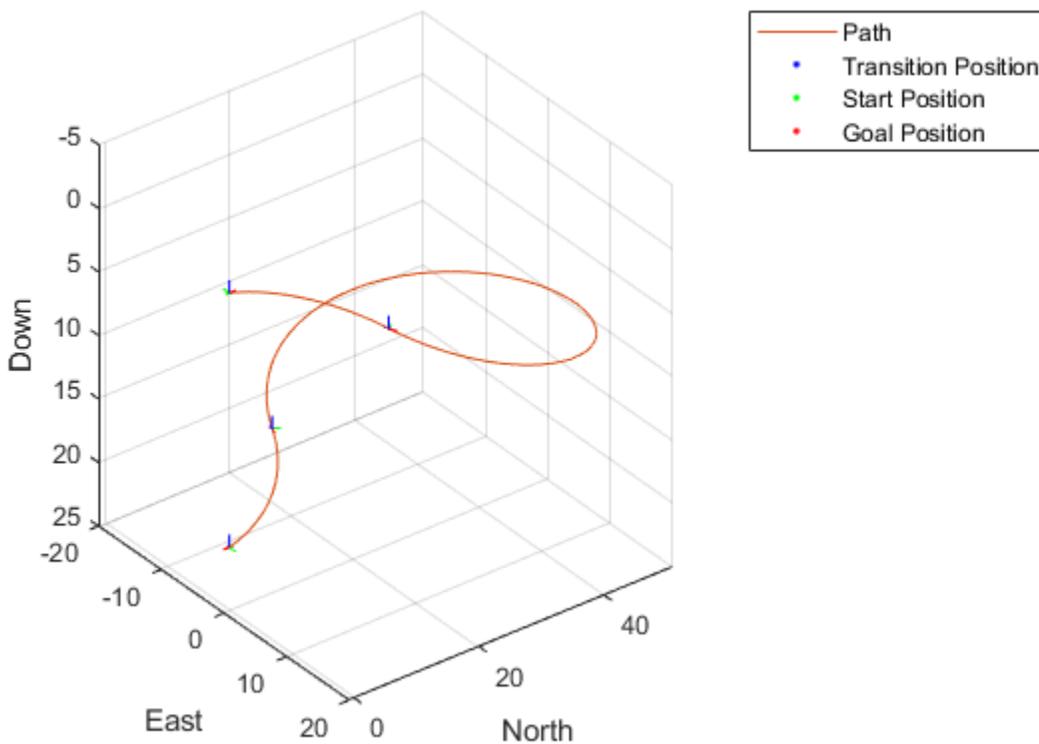

Display the motion type and the path cost of the generated path.

```
fprintf('Motion Type: %s\nPath Cost: %f\n', strjoin(pathSegObj{1}.MotionTypes), pathCosts)
```

Motion Type: R L R N
Path Cost: 138.373157

Input Arguments

pathSegObj — Path segment

`uavDubinsPathSegment` object

Path segment, specified as a `uavDubinsPathSegment` object.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

Example: `'Positions', {'start', 'goal'}`

Parent — Axes used to plot path

`Axes` object

Axes used to plot path, specified as the comma-separated pair consisting of `'Parent'` and an axes object.

Example: `'Parent', axHandle`

Positions — Positions to display

`{'start', 'goal', 'transitions'}` (default) | cell array of string or character vectors or vector of string scalars

Positions to display, specified as the comma-separated pair consisting of `'Positions'` and a cell array of string or character vectors or a vector of string scalars.

Options are any combination of `'start'`, `'goal'`, and `'transitions'`.

To disable all position displays, specify either as an empty cell array `{}` or empty vector `[]`.

Output Arguments

axHandle — Axes used to plot path

Axes object

Axes used to plot path, returned as an axes object.

See Also

[dubinsPathSegment](#) | [plotTransforms](#) | [reedsSheppPathSegment](#)


Introduced in R2019b

Blocks — Alphabetical List

Ackermann Kinematic Model

Car-like vehicle motion using Ackermann kinematic model

Library: Robotics System Toolbox / Mobile Robot Algorithms

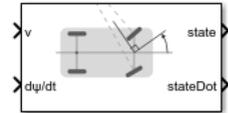

Description

The Ackermann Kinematic Model block creates a car-like vehicle model that uses Ackermann steering. This model represents a vehicle with two axles separated by the distance, `Wheel base`. The state of the vehicle is defined as a four-element vector, $[x \ y \ \theta \ \psi]$, with an global xy -position, vehicle heading, θ , and steering angle, ψ . The vehicle heading is defined at the center of the rear axle. Angles are specified in radians. The steering input for the vehicle is given as $d\psi/dt$, in radians per second.

Ports

Input

v — Vehicle speed

numeric scalar

Vehicle speed, specified in meters per second.

dpsi/dt — Steering angular velocity

numeric scalar

Angular velocity of the vehicle, specified in radians per second.

Output

state — State of vehicle

four-element vector

Current xy -position, orientation, and steering angle, specified as $[x\ y\ \theta\ \psi]$, in meters and radians.

stateDot — Derivatives of state output

four-element vector

The linear and angular velocities of the vehicle, specified as a $[xDot\ yDot\ \thetaDot\ \psiDot]$ vector in meters per second and radians per second. The linear and angular velocities are calculated by taking the time derivatives of the state output.

Parameters

Wheel base — Distance between front and rear axles

1 (default) | positive numeric scalar

The wheel base refers to the distance between the front and rear vehicle axles, specified in meters.

Vehicle speed range — Minimum and maximum vehicle speeds

$[-\text{Inf}\ \text{Inf}]$ (default) | two-element vector

The wheel speed range is a two-element vector that provides the minimum and maximum vehicle wheel speeds, $[\text{MinSpeed}\ \text{MaxSpeed}]$, specified in radians per second.

Maximum steering angle — Distance between front and rear axles

$\pi/4$ (default) | positive numeric scalar

The maximum steering angle, refers to the maximum amount the vehicle can be steered to the right or left, specified in radians. The default value, $\pi/4$ provides the vehicle with minimum turning radius, 0.

Initial state — Initial state of vehicle

$[0; 0; 0; 0]$ (default) | four-element vector

The initial x -, y -position, heading angle, θ , and steering angle, ψ , of the vehicle.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- Interpreted execution — Simulate model using the MATLAB interpreter. For more information, see “Simulation Modes” (Simulink).

- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change.

Tunable: No

References

[1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning, and Control*. 1st ed. Cambridge, MA: Cambridge University Press, 2017.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Bicycle Kinematic Model | Differential Drive Kinematic Model | Unicycle Kinematic Model

Classes


ackermannKinematics

Introduced in R2019b

Bicycle Kinematic Model

Compute car-like vehicle motion using bicycle kinematic model

Library: Robotics System Toolbox / Mobile Robot Algorithms

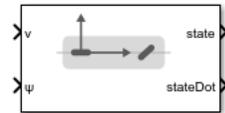

Description

The Bicycle Kinematic Model block creates a bicycle vehicle model to simulate simplified car-like vehicle dynamics. This model represents a vehicle with two axles defined by the length between the axles, `Wheel base`. The front wheel can be turned with steering angle ψ . The vehicle heading θ is defined at the center of the rear axle.

Ports

Input

v — Vehicle speed

numeric scalar

Vehicle speed, specified in meters per second.

psi — Steering angle

numeric scalar

Steering angle of the vehicle, specified in radians.

Dependencies

To enable this port, set the `Vehicle inputs` parameter to `Vehicle Speed & Steering Angle`.

omega — Steering angular velocity

numeric scalar

Angular velocity of the vehicle, specified in radians per second. A positive value steers the vehicle left and negative values steer the vehicle right.

Dependencies

To enable this port, set the `Vehicle inputs` parameter to `Vehicle Speed & Heading Angular Velocity`.

Output

state — Pose of vehicle

three-element vector

Current xy-position and orientation of the vehicle, specified as a $[x \ y \ \theta]$ vector in meters and radians.

stateDot — Derivatives of state output

three-element vector

The linear and angular velocities of the vehicle, specified as a $[x\dot{\ } \ y\dot{\ } \ \theta\dot{\ }]$ vector in meters per second and radians per second. The linear and angular velocities are calculated by taking the derivative of the `state` output.

Parameters

Vehicle inputs — Type of speed and directional inputs for vehicle

Vehicle Speed & Steering Angle (default) | Vehicle Speed & Heading Angular Velocity

placeholder:

- `Vehicle Speed & Steering Angle` — Vehicle speed in meters per second with a steering angle in radians.
- `Vehicle Speed & Heading Angular Velocity` — Vehicle speed in meters per second with a heading angular velocity in radians per second.

Wheel base — Distance between front and rear axles

1 (default) | positive numeric scalar

The wheel base refers to the distance between the front and rear vehicle axles, specified in meters.

Vehicle speed range — Minimum and maximum vehicle speeds

`[-Inf Inf]` (default) | two-element vector

The wheel speed range is a two-element vector that provides the minimum and maximum vehicle wheel speeds, [*MinSpeed MaxSpeed*], specified in radians per second.

Maximum steering angle — Max turning radius

`pi/4` (default) | numeric scalar

The maximum steering angle, refers to the maximum amount the vehicle can be steered to the right or left, specified in radians. The default value, `pi/4` provides the vehicle with minimum turning radius, θ . This property is used to validate the user-provided state input.

Initial state — Initial pose of vehicle

`[0;0;0]` (default) | three-element vector

The initial x -, y -position and orientation, *theta*, of the vehicle.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. For more information, see “Simulation Modes” (Simulink).
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change.

Tunable: No

References

- [1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning, and Control* 1st ed. Cambridge, MA: Cambridge University Press, 2017.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Ackermann Kinematic Model | Differential Drive Kinematic Model | Unicycle Kinematic Model

Classes


bicycleKinematics

Introduced in R2019b

Coordinate Transformation Conversion

Convert to a specified coordinate transformation representation

Library: Robotics System Toolbox / Utilities
 Navigation Toolbox / Utilities
 ROS Toolbox / Utilities

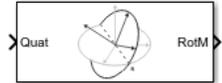

Description

The Coordinate Transformation Conversion block converts a coordinate transformation from the input representation to a specified output representation. The input and output representations use the following forms:

- Axis-Angle (AxAng) - [x y z theta]
- Euler Angles (Eu1) - [z y x], [z y z], or [x y z]
- Homogeneous Transformation (TForm) - 4-by-4 matrix
- Quaternion (Quat) - [w x y z]
- Rotation Matrix (RotM) - 3-by-3 matrix
- Translation Vector (TrVec) - [x y z]

All vectors must be **column vectors**.

To accommodate representations that only contain position or orientation information (TrVec or Eu1, for example), you can specify two inputs or outputs to handle all transformation information. When you select the Homogeneous Transformation as an input or output, an optional Show TrVec input/output port parameter can be selected on the block mask to toggle the multiple ports.

Ports

Input

Input transformation — Coordinate transformation

column vector | 3-by-3 matrix | 4-by-4 matrix

Input transformation, specified as a coordinate transformation. The following representations are supported:

- Axis-Angle (AxAng) - [x y z theta]
- Euler Angles (Eul) - [z y x], [z y z], or [x y z]
- Homogeneous Transformation (TForm) - 4-by-4 matrix
- Quaternion (Quat) - [w x y z]
- Rotation Matrix (RotM) - 3-by-3 matrix
- Translation Vector (TrVec) - [x y z]

All vectors must be **column vectors**.

To accommodate representations that only contain position or orientation information (TrVec or Eul, for example), you can specify two inputs or outputs to handle all transformation information. When you select the Homogeneous Transformation as an input or output, an optional Show TrVec input/output port parameter can be selected on the block mask to toggle the multiple ports.

TrVec — Translation vector

3-element column vector

Translation vector, specified as a 3-element column vector, [x y z], which corresponds to a translation in the x, y, and z axes respectively. This port can be used to input or output the translation information separately from the rotation vector.

Dependencies

You must select Homogeneous Transformation (TForm) for the opposite transformation port to get the option to show the additional TrVec port. Enable the port by clicking Show TrVec input/output port.

Output Arguments

Output transformation — Coordinate transformation

column vector | 3-by-3 matrix | 4-by-4 matrix

Output transformation, specified as a coordinate transformation with the specified representation. The following representations are supported:

- Axis-Angle (AxAng) - [x y z theta]
- Euler Angles (Eu1) - [z y x], [z y z], or [x y z]
- Homogeneous Transformation (TForm) - 4-by-4 matrix
- Quaternion (Quat) - [w x y z]
- Rotation Matrix (RotM) - 3-by-3 matrix
- Translation Vector (TrVec) - [x y z]

To accommodate representations that only contain position or orientation information (TrVec or Eu1, for example), you can specify two inputs or outputs to handle all transformation information. When you select the Homogeneous Transformation as an input or output, an optional `Show TrVec input/output port` parameter can be selected on the block mask to toggle the multiple ports.

TrVec — Translation vector

three-element column vector

Translation vector, specified as a three-element column vector, [x y z], which corresponds to a translation in the x, y, and z axes respectively. This port can be used to input or output the translation information separately from the rotation vector.

Dependencies

You must select Homogeneous Transformation (TForm) for the opposite transformation port to get the option to show the additional TrVec port. Enable the port by clicking `Show TrVec input/output port`.

Parameters

Representation — Input or output representation

Axis-Angle | Euler Angles | Homogeneous Transformation | Rotation Matrix | Translation Vector | Quaternion

Select the representation for both the input and output port for the block. If you are using a transformation with only orientation information, you can also select the `Show TrVec input/output port` when converting to or from a homogeneous transformation.

Show TrVec input/output port — Toggle TrVec port

off (default) | on

Toggle the TrVec input or output port when you want to specify or receive a separate translation vector for position information along with an orientation representation.

Dependencies

You must select Homogeneous Transformation (TForm) for the opposite transformation port to get the option to show the additional TrVec port.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

[axang2quat](#) | [eul2tform](#) | [trvec2tform](#)

Topics


“Coordinate Transformations in Robotics”

Introduced in R2017b

Differential Drive Kinematic Model

Compute vehicle motion using differential drive kinematic model

Library: Robotics System Toolbox / Mobile Robot Algorithms

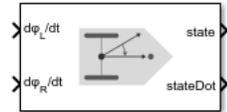

Description

The Differential Drive Kinematic Model block creates a differential-drive vehicle model to simulate simplified vehicle dynamics. This model approximates a vehicle with a single fixed axle and wheels separated by a specified track width `Track width`. Each of the wheels can be driven independently using speed inputs, $d\phi_L/dt$ and $d\phi_R/dt$, for the left and right wheels respectively. Vehicle speed and heading is defined from the axle center.

Ports

Input

$d\phi_L/dt$ — Left wheel speed

numeric scalar

Left wheel speed of the vehicle, specified in radians per second.

Dependencies

To enable this port, set the `Vehicle inputs` parameter to `Wheel Speeds`.

$d\phi_R/dt$ — Right wheel speed

numeric scalar

Right wheel speed of the vehicle, specified in radians per second.

Dependencies

To enable this port, set the `Vehicle inputs` parameter to `Wheel Speeds`.

v — Vehicle speed

numeric scalar

Vehicle speed, specified in meters per second.

Dependencies

To enable this port, set the `Vehicle inputs` parameter to `Vehicle Speed & Heading Angular Velocity`.

omega — Angular velocity of vehicle

numeric scalar

Angular velocity of the vehicle, specified in radians per second. A positive value steers the vehicle left and negative values steer the vehicle right.

Dependencies

To enable this port, set the `Vehicle inputs` parameter to `Vehicle Speed & Heading Angular Velocity`.

Output

state — Pose of vehicle

three-element vector

Current position and orientation of the vehicle, specified as a $[x \ y \ \theta]$ vector in meters and radians.

stateDot — Derivatives of state output

three-element vector

The current linear and angular velocities of the vehicle specified as a $[x\dot{\ } \ y\dot{\ } \ \theta\dot{\ }]$ vector in meters per second and radians per second. The linear and angular velocities are calculated by taking the derivative of the state output.

Parameters

Vehicle inputs — Type of speed and directional inputs for vehicle

Wheel Speeds (default) | Vehicle Speed & Heading Angular Velocity

The format of the model input commands

- **Wheel Speeds** — Angular speeds of the two wheels in radians per second.
- **Vehicle Speed & Heading Angular Velocity** — Vehicle speed in meters per second with a heading angular velocity in radians per second.

Wheel radius — Wheel radius of vehicle

0.05 (default) | positive numeric scalar

The radius of the wheels on the vehicle, specified in meters.

Wheel speed range — Minimum and maximum vehicle speeds

[-Inf Inf] (default) | two-element vector

The wheel speed range is a two-element vector that provides the minimum and maximum vehicle wheel speeds, [*MinSpeed MaxSpeed*], specified in radians per second.

Track width — Track length of vehicle from wheel to wheel

0.2 (default) | numeric scalar

Length of the track from the left wheel to right wheel, specified in meters.

Initial state — Initial pose of the vehicle

[0;0;0] (default) | three-element vector

The initial xy-position and orientation, θ , of the vehicle.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. For more information, see “Simulation Modes” (Simulink).
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change.

Tunable: No

References

- [1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning, and Control* 1st ed. Cambridge, MA: Cambridge University Press, 2017.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Ackermann Kinematic Model | Bicycle Kinematic Model | Unicycle Kinematic Model

Classes

`differentialDriveKinematics`

Topics


“Control A Differential-Drive Robot in Gazebo With Simulink”

Introduced in R2019b

Forward Dynamics

Joint accelerations given joint torques and states

Library: Robotics System Toolbox / Manipulator Algorithms

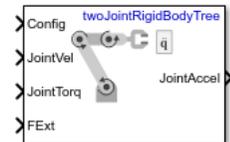

Description

The Forward Dynamics block computes joint accelerations for a robot model given a robot state that is made up of joint torques, joint states, and external forces. To get the joint accelerations, specify the robot configuration (joint positions), joint velocities, applied torques, and external forces.

Specify the robot model in the **Rigid body tree** parameter as a `RigidBodyTree` object, and set the Gravity property on the object. You can also import a robot model from an URDF (Unified Robot Description Formation) file using `importrobot`.

Ports

Input

Config — Robot configuration

vector

Robot configuration, specified as a vector of positions for all nonfixed joints in the robot model, as set by the **Rigid body tree** parameter. You can also generate this vector for a complex robot using the `homeConfiguration` or `randomConfiguration` functions inside a Constant or MATLAB Function block.

JointVel — Joint velocities

vector

Joint velocities, specified as a vector. The number of joint velocities is equal to the degrees of freedom (number of nonfixed joints) of the robot.

JointTorq — Joint torques

vector

Joint torques, specified as a vector. Each element corresponds to a torque applied to a specific joint. The number of joint torques is equal to the degrees of freedom (number of nonfixed joints) of the robot.

FExt — External force matrix

6-by- n matrix

External force matrix, specified as a 6-by- n matrix, where n is the number of bodies in the robot model. The matrix contains nonzero values in the rows corresponding to specific bodies. Each row is a vector of applied forces and torques that act as a wrench for that specific body. Generate this matrix using `externalForce` with a MATLAB Function block

Output

JointAccel — Joint accelerations

vector

Joint accelerations, returned as a vector. The number of joint accelerations is equal to the degrees of freedom of the robot.

Parameters

Rigid body tree — Robot model

`twoJointRigidBodyTree` (default) | `RigidBodyTree` object

Robot model, specified as a `RigidBodyTree` object. You can also import a robot model from an URDF (Unified Robot Description Formation) file using `importrobot`.

The default robot model, `twoJointRigidBodyTree`, is a robot with revolute joints and two degrees of freedom.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than `Code generation`. In this mode, you can debug the source code of the block.

- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to Interpreted execution.

Tunable: No

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

[Get Jacobian](#) | [Get Transform](#) | [Gravity Torque](#) | [Inverse Dynamics](#) | [Joint Space Mass Matrix](#) | [Velocity Product Torque](#)

Classes

[RigidBodyTree](#)

Functions

[externalForce](#) | [forwardDynamics](#) | [homeConfiguration](#) | [importrobot](#) | [randomConfiguration](#)

Topics

[“Perform Safe Trajectory Tracking Control Using Robotics Manipulator Blocks”](#)

Introduced in R2018a

Gazebo Apply Command

Send command to Gazebo simulator

Library: Robotics System Toolbox / Gazebo Co-Simulation



Description

The Apply Command block sends commands to a Gazebo simulation. The block accepts a command message, input as a bus signal, and sends the command to the Gazebo server.

To send command messages, connect to a Gazebo simulation. Open the block mask and click **Configure Gazebo network and simulation settings**.

This block is part of a co-simulation interface between MATLAB and Gazebo for exchanging data and sending commands. To see a basic example, check “Perform Co-Simulation between Simulink and Gazebo”.

Ports

Input

Cmd — Gazebo Command

bus

Gazebo command message, specified as a bus. The command is an instruction for a specified model link or joint. Specify the model name as part of the bus signal using the Gazebo Select Entity block.

There are two different command types with specific fields:

- ApplyLinkWrench:

- `model_name` -- Variable-size `uint8` array representing the name of the model in the Gazebo simulator. You can specify this field using the Gazebo Select Entity block.
 - `link_name` -- Variable-size `uint8` array representing the name of the link in the model in the Gazebo simulator. You can specify this field using the Gazebo Select Entity block.
 - `force_type` -- Variable-size `uint8` array specified as 'SET' or 'ADD'. 'SET' overwrites any existing force command for the specified duration. 'ADD' adds the value with existing commands.
 - `Fx`, `fy`, `fz` -- `double` values specifying the amount of force applied to the Gazebo model link in world coordinates and Newtons.
 - `torque_type` -- Variable-size `uint8` array specified as 'SET' or 'ADD'. 'SET' overwrites any existing torque command for the specified duration. 'ADD' adds the value with existing commands.
 - `Tx`, `ty`, `tz` -- `double` values specifying the amount of torque applied to the Gazebo model link in world coordinates and Newton-meters.
 - `duration` -- Bus containing seconds and nanoseconds as `double` integers, which specify how long to apply the torque in simulation time.
- **ApplyJointTorque:**
 - `model_name` -- Variable-size `uint8` array representing the name of the model in the Gazebo simulator. You can specify this field using the Gazebo Select Entity block.
 - `joint_name` -- Variable-size `uint8` array representing the name of the joint in the model in the Gazebo simulator. You can specify this field using the Gazebo Select Entity block.
 - `index` -- `uint32` integer that identifies which joint axis the torque should be applied to.
 - `effort` -- `double` scalar value specifying the amount of torque or force to apply to the joint.
 - `duration` -- Bus containing seconds and nanoseconds as `double` integers, which specify how long to apply the torque in simulation time.

Data Types: bus

Parameters

Command type — Type of command

ApplyLinkWrench (default) | ApplyJointTorque

Choose the command type for applying a torque or wrench. The input Cmd must contain the correct command message structure that matches this type.

Sample time — Sampling time of input

0.001 (default) | positive

Sample time indicates the interval which commands are sent to the Gazebo simulator.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Gazebo Blank Message | Gazebo Pacer | Gazebo Read | Gazebo Select Entity

Topics

“Perform Co-Simulation between Simulink and Gazebo”

“Control A Differential-Drive Robot in Gazebo With Simulink”

Introduced in R2019b

Gazebo Blank Message

Create blank Gazebo command

Library: Robotics System Toolbox / Gazebo Co-Simulation



Description

The Gazebo Blank Message block creates a blank Gazebo message or command based on the specified type. The block output is a bus signal that contains the required elements for the type of command. Use a Bus Assignment block to modify specific fields in the bus signal. The bus signal initializes with zero value (ground).

This block is part of a co-simulation interface between MATLAB and Gazebo for exchanging data and sending commands. To see a basic example, check “Perform Co-Simulation between Simulink and Gazebo”.

Ports

Output

Cmd — Blank command signal

bus

Blank command signal, output as a bus signal. A command gives instructions for processing in Gazebo. By default, the command type is `Gazebo_SL_Bus_gazebo_msgs_ApplyLinkWrench`.

Data Types: bus

Parameters

Command type — Type of command

ApplyLinkWrench (default) | ApplyJointTorque

Choose the command type for applying a torque or wrench.

Sample time — Sampling time of input

0.001 (default) | positive

Sample time indicates when, during simulation, the block produces outputs and if appropriate, updates its internal state.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Gazebo Apply Command | Gazebo Pacer | Gazebo Read | Gazebo Select Entity

Topics

“Control A Differential-Drive Robot in Gazebo With Simulink”

Introduced in R2019b

Gazebo Pacer

Settings for synchronized stepping between Gazebo and Simulink

Library: Robotics System Toolbox / Gazebo Co-Simulation



Description

The Gazebo Pacer block synchronizes the simulation times between Gazebo and Simulink. Synchronization is important for ensuring your Simulink model and the Gazebo simulation behave correctly. The block outputs a Boolean indicating successful synchronization. Synchronized stepping is only supported for one Gazebo simulation. Your entire model, including referenced models, can only contain one Gazebo Pacer block.

To ensure successful synchronization, connect to a Gazebo simulation. Open the block mask and click **Configure Gazebo network and simulation settings**.

Select the **Reset** behavior to reset the Gazebo simulation on model restart or only reset simulation time.

This block is part of a co-simulation interface between MATLAB and Gazebo for exchanging data and sending commands. To see a basic example, check “Perform Co-Simulation between Simulink and Gazebo”.

Ports

Output

Status — Status of synchronization

0 | 1

Status of synchronization, output as either 0 or 1. A value of 0 indicates successful time syncing. A value of 1 means the simulations are out of sync.

Data Types: uint8

Parameters

Reset behavior — Reset simulation time or scene

Reset Gazebo simulation time (default) | Reset Gazebo simulation time and scene

Select from the Reset behavior drop-down. Choose to reset the Gazebo simulator time only, or both the simulator time and scene.

Sample time — Sampling time of input

0.001 (default) | positive

Set the Sample time parameter to step the Gazebo simulation at the given rate. This parameter must be a multiple of the maximum step size of the Gazebo solver.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Gazebo Apply Command | Gazebo Blank Message | Gazebo Read | Gazebo Select Entity

Topics

“Control A Differential-Drive Robot in Gazebo With Simulink”

Introduced in R2019b

Gazebo Read

Receive messages from Gazebo server

Library: Robotics System Toolbox / Gazebo Co-Simulation



Description

The Gazebo Read block receives messages from the Gazebo server based on the topic and message type that the block specifies. The block outputs the latest message received as a bus signal, `Msg`, and a Boolean, `IsNew`, which indicates whether a message was received during the previous time step.

This block is part of a co-simulation interface between MATLAB and Gazebo for exchanging data and sending commands. To see a basic example, check “Perform Co-Simulation between Simulink and Gazebo”

Ports

Output

IsNew — Status of messages in the previous time step

0 (default) | 1

Status of the message received, output as a Boolean, which indicates whether the block output `Msg` was received in the previous time step.

Data Types: Boolean

Msg — Gazebo message

bus

Gazebo message, output as a bus signal, with elements relevant to the specific Topic and Message type.

The Msg output always outputs the most recent message received.

Data Types: bus

Parameters

Topic source — Source for specifying topic

From Gazebo (default) | Specify your own

To get a topic from an existing Gazebo simulation, select **From Gazebo**. Click the **Select** button to see a list of available topics. To connect to a Gazebo simulation, click **Configure Gazebo network and simulation settings** in the block mask.

To enter a custom topic without an active Gazebo connection, select **Specify your own**. Use the **Topic** parameter to type the name of the message.

Topic — Topic name of message

/my_topic (default) | string

Topic name of message, specified as a string.

To get a topic from an existing Gazebo simulation, select **From Gazebo**. Click the **Select** button to see a list of available topics. To connect to a Gazebo simulation, click **Configure Gazebo network and simulation settings** in the block mask.

To specify a topic without connecting, select **Specify your own**.

Message type — Gazebo message type

gazebo_msgs/Pose (default) | string

Click **Select** to get a list of message types available in Gazebo. If you choose your **Topic** from a connected Gazebo simulation, this parameter is set automatically.

Sample time — Sampling time of input

0.001 (default) | positive

Sample time indicates when, during simulation, the block produces outputs and if appropriate, updates its internal state.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

[Gazebo Apply Command](#) | [Gazebo Blank Message](#) | [Gazebo Pacer](#) | [Gazebo Select Entity](#)

Topics

[“Control A Differential-Drive Robot in Gazebo With Simulink”](#)

Introduced in R2019b

Gazebo Select Entity

Select a Gazebo entity

Library: Robotics System Toolbox / Gazebo Co-Simulation



Description

The Gazebo Select Entity block retrieves the model name of a Gazebo entity, such as a link or joint, from a simulated environment. The block outputs a string for both the model and associated joint or link name. Use both these names when specifying commands using the Gazebo Apply Command block.

Before selecting an entity, connect to a Gazebo simulation. Open the block mask and click **Configure Gazebo network and simulation settings**.

This block is part of a co-simulation interface between MATLAB and Gazebo for exchanging data and sending commands. To see a basic example, check “Perform Co-Simulation between Simulink and Gazebo”

Ports

Output

model — Model name of entity

model1 (default) | string (uint8[])

Model name of entity, output as string scalar. Strings are output as a variable-size `uint8` array for Gazebo.

Data Types: `uint8`

Joint/Link — Associated joint or link name of entity

joint1 (default) | string (uint8[])

Associated joint or link, output as a string scalar. Strings are output as a `uint8` array for Gazebo.

Data Types: `uint8`

Parameters

Model Name — Choose model name

'model1/joint1' (default) | string scalar

Choose a model by clicking **Select**, which brings up a list of available names available on the Gazebo server. The block assumes you are already connected to a Gazebo simulation. If not, click **Configure Gazebo network and simulation settings** in the block mask.

Output vector size upper bound — Upper limit of output array

128 (default)

Upper limit of the size of the output `uint8` arrays, `Model Name` and `Joint/Link`. Increase the upper bound when the names are longer than the default value 128.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Gazebo Apply Command | Gazebo Blank Message | Gazebo Pacer | Gazebo Read | Gazebo Select Entity

Topics


“Control A Differential-Drive Robot in Gazebo With Simulink”

Introduced in R2019b

Get Jacobian

Geometric Jacobian for robot configuration

Library: Robotics System Toolbox / Manipulator Algorithms

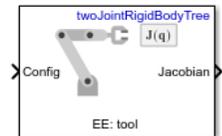

Description

The Get Jacobian block returns the geometric Jacobian relative to the base for the specified end effector at the given configuration of a RigidBodyTree robot model.

The Jacobian maps the joint-space velocity to the end-effector velocity relative to the base coordinate frame. The end-effector velocity equals:

$$V_{EE} = \begin{bmatrix} \omega_x \\ \omega_y \\ \omega_z \\ v_x \\ v_y \\ v_z \end{bmatrix} = J\dot{q} = J \begin{bmatrix} \dot{q}_1 \\ \vdots \\ \dot{q}_n \end{bmatrix}$$

ω is the angular velocity, v is the linear velocity, and \dot{q} is the joint-space velocity.

Ports

Input

Config — Robot configuration

vector

Robot configuration, specified as a vector of positions for all nonfixed joints in the robot model, as set by the **Rigid body tree** parameter. You can also generate this vector for a complex robot using the `homeConfiguration` or `randomConfiguration` functions inside a Constant or MATLAB Function block.

Output

Jacobian — Geometric Jacobian of end effector

6-by- n matrix

Geometric Jacobian of the end effector with the specified configuration, **Config**, returned as a 6-by- n matrix, where n is the number of degrees of freedom of the end effector. The Jacobian maps the joint-space velocity to the end-effector velocity relative to the base coordinate frame. The end-effector velocity equals:

$$V_{EE} = \begin{bmatrix} \omega_x \\ \omega_y \\ \omega_z \\ v_x \\ v_y \\ v_z \end{bmatrix} = J\dot{q} = J \begin{bmatrix} \dot{q}_1 \\ \vdots \\ \dot{q}_n \end{bmatrix}$$

ω is the angular velocity, v is the linear velocity, and \dot{q} is the joint-space velocity.

Parameters

Rigid body tree — Robot model

`twoJointRigidBodyTree` (default) | `RigidBodyTree` object

Robot model, specified as a `RigidBodyTree` object. You can also import a robot model from an URDF (Unified Robot Description Formation) file using `importrobot`.

The default robot model, `twoJointRigidBodyTree`, is a robot with revolute joints and two degrees of freedom.

End effector — End effector for Jacobian

body name

End effector for `Jacobian`, specified as a body name from the **Rigid body tree** robot model. To access body names from the robot model, click **Select body**.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than **Code generation**. In this mode, you can debug the source code of the block.
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to **Interpreted execution**.

Tunable: No

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

[Forward Dynamics](#) | [Get Transform](#) | [Gravity Torque](#) | [Inverse Dynamics](#) | [Joint Space Mass Matrix](#) | [Velocity Product Torque](#)

Classes

[RigidBodyTree](#)

Functions


[geometricJacobian](#) | [homeConfiguration](#) | [importrobot](#) | [randomConfiguration](#)

Introduced in R2018a

Get Transform

Get transform between body frames

Library: Robotics System Toolbox / Manipulator Algorithms

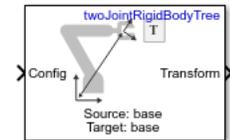

Description

The Get Transform block returns the homogeneous transformation between body frames on the **Rigid body tree** robot model. Specify a `RigidBodyTree` object for the robot model, and select a source and target body in the block.

The block uses **Config**, the robot configuration (joint positions) input, to calculate the transformation from the source body to the target body. This transformation is used to convert coordinates from the source to the target body. To convert to base coordinates, use the base body name as the **Target body** parameter.

Ports

Input

Config — Robot configuration

vector

Robot configuration, specified as a vector of positions for all nonfixed joints in the robot model, as set by the **Rigid body tree** parameter. You can also generate this vector for a complex robot using the `homeConfiguration` or `randomConfiguration` functions inside a Constant or MATLAB Function block.

Output

Transform — Homogeneous transform

4-by-4 matrix

Homogeneous transform, returned as a 4-by-4 matrix.

Parameters

Rigid body tree — Robot model

`twoJointRigidBodyTree` (default) | `RigidBodyTree` object

Robot model, specified as a `RigidBodyTree` object. You can also import a robot model from an URDF (Unified Robot Description Formation) file using `importrobot`.

The default robot model, `twoJointRigidBodyTree`, is a robot with revolute joints and two degrees of freedom.

Target body — Target body name

body name

Target body name, specified as a body name from the robot model specified in **Rigid body tree**. To access body names from the robot model, click **Select body**. The target frame is the coordinate system you want to transform points into.

Source body — Source body name

body name

Source body name, specified as a body name from the robot model specified in **Rigid body tree**. To access body names from the robot model, click **Select body**. The source frame is the coordinate system you want points transformed from.

Simulate using — Type of simulation to run

`Interpreted execution` (default) | `Code generation`

- **Interpreted execution** — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than **Code generation**. In this mode, you can debug the source code of the block.
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to **Interpreted execution**.

Tunable: No

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Get Jacobian | Gravity Torque | Inverse Dynamics | Joint Space Mass Matrix | Velocity Product Torque

Classes

RigidBodyTree

Functions

getTransform | homeConfiguration | importrobot | randomConfiguration

Topics


“Perform Safe Trajectory Tracking Control Using Robotics Manipulator Blocks”

Introduced in R2018a

Gravity Torque

Joint torques that compensate gravity

Library: Robotics System Toolbox / Manipulator Algorithms

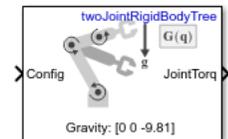

Description

The Gravity Torque block returns the joint torques required to hold the robot at a given configuration with the current Gravity setting on the **Rigid body tree** robot model.

Ports

Input

Config — Robot configuration

vector

Robot configuration, specified as a vector of positions for all nonfixed joints in the robot model, as set by the **Rigid body tree** parameter. You can also generate this vector for a complex robot using the `homeConfiguration` or `randomConfiguration` functions inside a Constant or MATLAB Function block.

Output

JointTorq — Joint torques

vector

Joint torques, specified as a vector. Each element corresponds to a torque applied to a specific joint. The number of joint torques is equal to the degrees of freedom (number of nonfixed joints) of the robot.

Parameters

Rigid body tree — Robot model

`twoJointRigidBodyTree` (default) | `RigidBodyTree` object

Robot model, specified as a `RigidBodyTree` object. You can also import a robot model from an URDF (Unified Robot Description Formation) file using `importrobot`.

The default robot model, `twoJointRigidBodyTree`, is a robot with revolute joints and two degrees of freedom.

Simulate using — Type of simulation to run

`Interpreted execution` (default) | `Code generation`

- `Interpreted execution` — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than `Code generation`. In this mode, you can debug the source code of the block.
- `Code generation` — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to `Interpreted execution`.

Tunable: No

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

[Forward Dynamics](#) | [Get Jacobian](#) | [Inverse Dynamics](#) | [Joint Space Mass Matrix](#) | [Velocity Product Torque](#)

Classes

RigidBodyTree

Functions


gravityTorque | homeConfiguration | importRobot | randomConfiguration

Introduced in R2018a

Inverse Dynamics

Required joint torques for given motion

Library: Robotics System Toolbox / Manipulator Algorithms

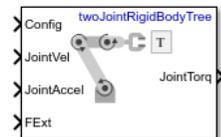

Description

The Inverse Dynamics block returns the joint torques required for the robot to maintain the specified robot state. To get the required joint torques, specify the robot configuration (joint positions), joint velocities, joint accelerations, and external forces.

Ports

Input

Config — Robot configuration

vector

Robot configuration, specified as a vector of positions for all nonfixed joints in the robot model, as set by the **Rigid body tree** parameter. You can also generate this vector for a complex robot using the `homeConfiguration` or `randomConfiguration` functions inside a Constant or MATLAB Function block.

JointVel — Joint velocities

vector

Joint velocities, specified as a vector. The number of joint velocities is equal to the degrees of freedom (number of nonfixed joints) of the robot.

JointAccel — Joint accelerations

vector

Joint accelerations, specified as a vector. The number of joint accelerations is equal to the degrees of freedom of the robot.

FExt — External force matrix

6-by- n matrix

External force matrix, specified as a 6-by- n matrix, where n is the number of bodies in the robot model. The matrix contains nonzero values in the rows corresponding to specific bodies. Each row is a vector of applied forces and torques that act as a wrench for that specific body. Generate this matrix using `externalForce` with a MATLAB Function block

Output

JointTorq — Joint torques

vector

Joint torques, returned as a vector. Each element corresponds to a torque applied to a specific joint. The number of joint torques is equal to the degrees of freedom (number of nonfixed joints) of the robot.

Parameters

Rigid body tree — Robot model

`twoJointRigidBodyTree` (default) | `RigidBodyTree` object

Robot model, specified as a `RigidBodyTree` object. You can also import a robot model from an URDF (Unified Robot Description Formation) file using `importrobot`.

The default robot model, `twoJointRigidBodyTree`, is a robot with revolute joints and two degrees of freedom.

Simulate using — Type of simulation to run

`Interpreted execution` (default) | `Code generation`

- `Interpreted execution` — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than `Code generation`. In this mode, you can debug the source code of the block.
- `Code generation` — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for

subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to Interpreted execution.

Tunable: No

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Forward Dynamics | Get Jacobian | Gravity Torque | Joint Space Mass Matrix | Velocity Product Torque

Classes

RigidBodyTree

Functions


externalForce | homeConfiguration | importrobot | inverseDynamics | randomConfiguration

Introduced in R2018a

Inverse Kinematics

Compute joint configurations to achieve an end-effector pose

Library: Robotics System Toolbox / Manipulator Algorithms

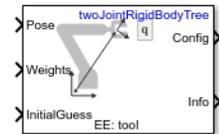

Description

The Inverse Kinematics block uses an inverse kinematic (IK) solver to calculate joint configurations for a desired end-effector pose based on a specified rigid body tree model. Create a rigid body tree model for your robot using the `rigidBodyTree` class. The rigid body tree model defines all the joint constraints that the solver enforces.

Specify the `RigidBodyTree` parameter and the desired end effector inside the block mask. You can also tune the algorithm parameters in the **Solver Parameters** tab.

Input the desired end-effector **Pose**, the **Weights** on pose tolerance, and an **InitialGuess** for the joint configuration. The solver outputs a robot configuration, **Config**, that satisfies the end-effector pose within the tolerances specified in the **Solver Parameters** tab.

Ports

Input

Pose — End-effector pose

4-by-4 homogeneous transform

End-effector pose, specified as a 4-by-4 homogeneous transform. This transform defines the desired position and orientation of the rigid body specified in the **End effector** parameter.

Data Types: `single` | `double`

Weights — Weights for pose tolerances

six-element vector

Weights for pose tolerances, specified as a six-element vector. The first three elements of the vector correspond to the weights on the error in orientation for the desired pose. The last three elements of the vector correspond to the weights on the error in the xyz position for the desired pose.

Data Types: `single` | `double`

InitialGuess — Initial guess of robot configuration

vector

Initial guess of robot configuration, specified as a vector of joint positions. The number of positions is equal to the number of nonfixed joints in the **Rigid body tree** parameter. Use this initial guess to help guide the solver to a desired robot configuration. However, the solution is not guaranteed to be close to this initial guess.

Data Types: `single` | `double`

Output

Config — Robot configuration solution

vector

Robot configuration that solves the desired end-effector pose, specified as a vector. A robot configuration is a vector of joint positions for the rigid body tree model. The number of positions is equal to the number of nonfixed joints in the **Rigid body tree** parameter.

Data Types: `single` | `double`

Info — Solution information

bus

Solution information, returned as a bus. The solution information bus contains these elements:

- **Iterations** — Number of iterations run by the algorithm.
- **PoseErrorNorm** — The magnitude of the error between the pose of the end effector in the solution and the desired end-effector pose.
- **ExitFlag** — Code that gives more details on the algorithm execution and what caused it to return. For the exit flags of each algorithm type, see “Exit Flags”.

- **Status** — Character vector describing whether the solution is within the tolerance (1) or is the best possible solution the algorithm could find (2).

Parameters

Block Parameters

Rigid body tree — Rigid body tree model

twoJointRigidBodyTree (default) | rigidBodyTree object

Rigid body tree model, specified as a rigidBodyTree object. Create the robot model in the MATLAB workspace before specifying in the block mask.

End effector — End-effector name

'tool' | Select body

End-effector name for desired pose. To see a list of bodies on the rigidBodyTree object, specify the **Rigid body tree** parameter, then click **Select body**.

Show solution diagnostic outputs — Enable info port

on (default) | off

Select to enable the **Info** port and get diagnostic info for the solver solution.

Solver Parameters

Solver — Algorithm for solving inverse kinematics

'BFGSGradientProjection' (default) | 'LevenbergMarquardt'

Algorithm for solving inverse kinematics, specified as either 'BFGSGradientProjection' or 'LevenbergMarquardt'. For details of each algorithm, see “Inverse Kinematics Algorithms”.

Enforce joint limits — Enforce rigid body tree joint limits

on (default) | off

Select to enforce the joint limits specified in the **Rigid body tree** model.

Maximum iterations — Maximum number of iterations

1500 (default) | positive integer

Maximum number of iterations to optimize the solution, specified as a positive integer. Increasing the number of iterations can improve the solution at the cost of execution time.

Maximum time — Maximum time

10 (default) | positive scalar

Maximum number of seconds that the algorithm runs before timing out, specified as a positive scalar. Increasing the maximum time can improve the solution at the cost of execution time.

Gradient tolerance — Threshold on gradient of cost function

1e-7 (default) | positive scalar

Threshold on the gradient of the cost function, specified as a positive scalar. The algorithm stops if the magnitude of the gradient falls below this threshold. A low gradient magnitude usually indicates that the solver has converged to a solution.

Solution tolerance — Threshold on pose error

1e-6 (default) | positive scalar

Threshold on the magnitude of the error between the end-effector pose generated from the solution and the desired pose, specified as a positive scalar. The `Weights` specified for each component of the pose are included in this calculation.

Step tolerance — Minimum step size

1e-14 (default) | positive scalar

Minimum step size allowed by the solver, specified as a positive scalar. Smaller step sizes usually mean that the solution is close to convergence.

Error change tolerance — Threshold on change in pose error

1e-12 (default) | positive scalar

Threshold on the change in end-effector pose error between iterations, specified as a positive scalar. The algorithm returns if the changes in all elements of the pose error are smaller than this threshold.

Dependencies

This parameter is enabled when the `Solver` is Levenberg-Marquadt.

Use error damping — Enable error damping

on (default) | off

Select the check box to enable error damping, then specify the **Damping bias** parameter.

Dependencies

This parameter is enabled when the **Solver** is Levenberg-Marquadt.

Damping bias — Damping on cost function

0.0025 (default) | positive scalar

Damping on cost function, specified as a positive scalar. The Levenberg-Marquadt algorithm has a damping feature controlled by this scalar that works with the cost function to control the rate of convergence.

Dependencies

This parameter is enabled when the **Solver** is Levenberg-Marquadt and **Use error damping** is on.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than **Code generation**. In this mode, you can debug the source code of the block.
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to **Interpreted execution**.

Tunable: No

References

- [1] Badreddine, Hassan, Stefan Vandewalle, and Johan Meyers. "Sequential Quadratic Programming (SQP) for Optimal Control in Direct Numerical Simulation of Turbulent Flow." *Journal of Computational Physics*. 256 (2014): 1-16. doi:10.1016/j.jcp.2013.08.044.

- [2] Bertsekas, Dimitri P. *Nonlinear Programming*. Belmont, MA: Athena Scientific, 1999.
- [3] Goldfarb, Donald. "Extension of Davidon's Variable Metric Method to Maximization Under Linear Inequality and Equality Constraints." *SIAM Journal on Applied Mathematics*. Vol. 17, No. 4 (1969): 739–64. doi:10.1137/0117067.
- [4] Nocedal, Jorge, and Stephen Wright. *Numerical Optimization*. New York, NY: Springer, 2006.
- [5] Sugihara, Tomomichi. "Solvability-Unconcerned Inverse Kinematics by the Levenberg-Marquardt Method." *IEEE Transactions on Robotics*. Vol. 27, No. 5 (2011): 984–91. doi:10.1109/tro.2011.2148230.
- [6] Zhao, Jianmin, and Norman I. Badler. "Inverse Kinematics Positioning Using Nonlinear Programming for Highly Articulated Figures." *ACM Transactions on Graphics*. Vol. 13, No. 4 (1994): 313–36. doi:10.1145/195826.195827.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Objects

[generalizedInverseKinematics](#) | [inverseKinematics](#) | [rigidBodyTree](#)

Blocks

[Get Transform](#) | [Inverse Dynamics](#)

Topics

["Trajectory Control Modeling With Inverse Kinematics"](#)

["Control PR2 Arm Movements Using ROS Actions and Inverse Kinematics"](#)


["Inverse Kinematics Algorithms"](#)

Introduced in R2018b

Joint Space Mass Matrix

Joint-space mass matrix for robot configuration

Library: Robotics System Toolbox / Manipulator Algorithms

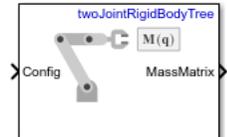

Description

The Joint Space Mass Matrix block returns the joint-space mass matrix for the given robot configuration (joint positions) for the **Rigid body tree** robot model.

Ports

Input

Config — Robot configuration

vector

Robot configuration, specified as a vector of positions for all nonfixed joints in the robot model, as set by the **Rigid body tree** parameter. You can also generate this vector for a complex robot using the `homeConfiguration` or `randomConfiguration` functions inside a Constant or MATLAB Function block.

Output

MassMatrix — Joint-space mass matrix for configuration

positive-definite symmetric matrix

Joint-space mass matrix for the given robot configuration, returned as a positive-definite symmetric matrix.

Parameters

Rigid body tree — Robot model

`twoJointRigidBodyTree` (default) | `RigidBodyTree` object

Robot model, specified as a `RigidBodyTree` object. You can also import a robot model from an URDF (Unified Robot Description Formation) file using `importrobot`.

The default robot model, `twoJointRigidBodyTree`, is a robot with revolute joints and two degrees of freedom.

Simulate using — Type of simulation to run

`Interpreted execution` (default) | `Code generation`

- `Interpreted execution` — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than `Code generation`. In this mode, you can debug the source code of the block.
- `Code generation` — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to `Interpreted execution`.

Tunable: No

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Forward Dynamics | Get Jacobian | Gravity Torque | Inverse Dynamics | Velocity Product Torque

Classes

RigidBodyTree

Functions


homeConfiguration | importrobot | massMatrix | randomConfiguration

Introduced in R2018a

Joint Space Motion Model

Model rigid body tree motion given joint-space inputs

Library: Robotics System Toolbox / Manipulator Algorithms

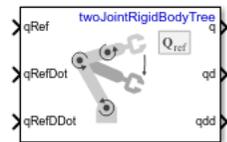

Description

The Joint Space Motion Model block models the closed-loop joint-space motion of a manipulator robot, specified as a `rigidBodyTree` object. The motion model behavior is defined by the `Motion Type` parameter.

Ports

Input

qRef — Joint positions

n-element vector

n-element vector representing the desired joint positions of radians, where *n* is the number of nonfixed joints in the `rigidBodyTree` object of the `Rigid body tree` parameter.

Dependencies

To enable this port, set the `Motion Type` parameter to `Computed Torque Control`, `PD Control`, or `Independent Joint Motion`.

qRefDot — Joint velocities

n-element vector

n-element vector representing the desired joint velocities of radians per second, where *n* is the number of nonfixed joints in the `rigidBodyTree` object of the `Rigid body tree` parameter.

Dependencies

To enable this port, set the `Motion Type` parameter to `Computed Torque Control`, or `Independent Joint Motion`.

qRefDDot — Joint accelerations

n-element vector

n-element vector representing the desired joint velocities of radians per second squared, where *n* is the number of nonfixed joints in the `rigidBodyTree` object of the `Rigid body tree` parameter.

Dependencies

To enable this port, set the `Motion Type` parameter to `Computed Torque Control`, `PD Control`, or `Independent Joint Motion`.

FExt — External forces acting on system

6-by-*m* matrix

A 6-by-*m* matrix of external forces for the *m* bodies in the `rigidBodyTree` object of the `Rigid body tree` parameter.

Dependencies

To enable this port, set the `Show external force input` parameter to `on`.

Output

q — Joint positions

n-element vector

Joint positions output as an *n*-element vector in radians or meters, where *n* is the number of nonfixed joints in the `rigidBodyTree` object of the `Rigid body tree` parameter.

qd — Joint velocities

n-element vector

Joint velocities output as an *n*-element vector in radians per second or meters per second, where *n* is the number of nonfixed joints in the `rigidBodyTree` object of the `Rigid body tree` parameter.

qdd — Joint accelerations*n*-element vector

Joint accelerations output as an *n*-element vector in radians per second squared or meters per second squared, where *n* is the number of nonfixed joints in the `rigidBodyTree` object of the `Rigid body tree` parameter

Parameters

Rigid body tree — Robot model`twoJointRigidBodyTree` (default) | `RigidBodyTree` object

Robot model, specified as a `rigidBodyTree` object. You can also import a robot model from an URDF (Unified Robot Description Formation) file using `importrobot`.

The default robot model, `twoJointRigidBodyTree`, is a manipulator with revolute joints and two degrees of freedom.

Motion Type — Type of motion computed by motion model`Computed Torque Control` (default) | `Independent Joint Motion` | `PD Control` | `Open Loop Dynamics`

Type of motion, specified as a string scalar or character vector that defines the closed-loop joint-space behavior that the object models. Options are:

- `Computed Torque Control` — Compensates for full-body dynamics and assigns the error dynamics specified in the `Natural frequency` and `Damping ratio` parameters.
- `Independent Joint Motion` — Models each joint as an independent second order system using the error dynamics specified by the `Natural frequency` and `Damping ratio` parameters.
- `PD Control` — Uses proportional-derivative (PD) control on the joints based on the specified `Proportional gain` and `Derivative gain` parameters.
- `Open Loop Dynamics` — Disables inputs except for FExt if `Show external force input` is enabled. This is an open-loop configuration.

Specification format — Inputs to control robot`Damping Ratio / Natural Frequency` (default) | `Step Response`

Inputs to control the robot system. Options are:

- **Damping Ratio / Natural Frequency** — Setting the natural frequency using the `Natural frequency` parameter of the system in Hz, and the damping ratio using the `Damping ratio` parameter.
- **Step Response** — Model at discrete time-steps with a fixed settling time and overshoot using the `Settling time` and the `Overshoot` parameters.

Dependencies

To enable this parameter, set the `Motion Type` parameter to `Computed Torque Control` or `Independent Joint Motion`.

Damping ratio — Damping ratio of system

1 (default) | numeric scalar

Damping ratio use to decay system oscillations. A value of 1 results in no damping, whereas 0 fully dampens the system.

Dependencies

To enable this parameter, set the `Specification format` parameter to `Damping Ratio / Natural Frequency`.

Natural frequency — Natural frequency of system

10 (default) | numeric scalar

Frequency of the system oscillations if unimpeded, specified in Hz.

Dependencies

To enable this parameter, set the `Specification format` parameter to `Damping Ratio / Natural Frequency`.

Settling time — Settling time of system

0.59 (default) | numeric scalar

The time taken for each joint to reach steady state, measured in seconds.

Dependencies

To enable this parameter, set the `Specification format` parameter to `Step Response`.

Overshoot — System overshoot

0.0 (default) | numeric scalar

The maximum value that the system exceeds the target position.

Dependencies

To enable this parameter, set the `Specification` format parameter to `Step Response`.

Proportional gain — Proportional gain for PD Control

100 (default) | n -by- n matrix | scalar

Proportional gain for proportional-derivative (PD) control, specified as a scalar or n -by- n matrix, where n is the number of nonfixed joints in the `rigidBodyTree` object of the `Rigid body tree` parameter.

Dependencies

To enable this parameter, set the `Specification` format parameter to `PD Control`.

Derivative gain — Derivative gain for PD control

10 (default) | n -by- n matrix | scalar

Derivative gain for proportional-derivative (PD) control, specified as a scalar or n -by- n matrix, where n is the number of nonfixed joints in the `rigidBodyTree` object of the `Rigid body tree` parameter.

Dependencies

To enable this parameter, set the `Specification` format parameter to `PD Control`.

Show external force input — Display FExt port

off (default) | on

Enable this parameter to input external forces using the `FExt` port.

Dependencies

To enable this parameter, set the `Motion Type` parameter to `Computed Torque Control`, `PD Control`, or `Open Loop Dynamics`.

Initial joint configuration — Initial joint positions

0 (default) | n -element vector | scalar

Initial joint positions, specified as a n -element vector or scalar in radians. n is the number of nonfixed joints in the `rigidBodyTree` object in the `Rigid body tree` parameter.

Initial joint velocities — Initial joint velocities

0 (default) | n -element vector | scalar

Initial joint velocities, specified as a n -element vector or scalar in radians per second. n is the number of nonfixed joints in the `rigidBodyTree` object in the `Rigid body tree` parameter.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. For more information, see “Simulation Modes” (Simulink).
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change.

Tunable: No

References

[1] Craig, John J. *Introduction to Robotics: Mechanics and Control*. Upper Saddle River, NJ: Pearson Education, 2005.

[2] Spong, Mark W., Seth Hutchinson, and Mathukumalli Vidyasagar. *Robot Modeling and Control*. Hoboken, NJ: Wiley, 2006.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Task Space Motion Model

Classes


jointSpaceMotionModel | taskSpaceMotionModel

Introduced in R2019b

Orbit Follower

Orbit location of interest using UAV

Library: Robotics System Toolbox UAV Library

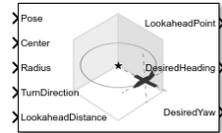

Description

The Orbit Follower block generates heading and yaw controls for following a circular orbit around a location of interest based on the unmanned aerial vehicle's (UAV's) current pose. Select a **UAV type** of fixed-wing or multirotor UAVs. You can specify any orbit center location, orbit radius, and turn direction. A lookahead distance, **LookaheadDistance**, is used for tuning the path tracking and generating the **LookaheadPoint** output.

Ports

Input

Pose — Current UAV pose

[x y z heading] vector

Current UAV pose, specified as an [x y z heading] vector. [x y z] is the UAV's position in NED coordinates (north-east-down) specified in meters. heading is the angle between ground velocity and north direction in radians per second.

Example: [1, 1, -10, pi/4]

Data Types: single | double

Center — Center of orbit

[x y z] vector

Center of orbit, specified as an [x y z] vector. [x y z] is the orbit center position in NED coordinates (north-east-down) specified in meters.

Example: [5,5,-10]

Data Types: single | double

Radius — Radius of orbit

positive scalar

Radius of orbit, specified as a positive scalar in meters.

Example: 5

Data Types: single | double

TurnDirection — Direction of orbit

scalar

Direction of orbit, specified as a scalar. Positive values indicate a clockwise turn as viewed from above. Negative values indicate a counter-clockwise turn. A value of 0 automatically determines the value based on the input to **Pose**.

Example: -1

Data Types: single | double

LookaheadDistance — Lookahead distance for tracking orbit

positive scalar

Lookahead distance for tracking the orbit, specified as a positive scalar. Tuning this value helps adjust how tightly the UAV follows the orbit circle. Smaller values improve tracking, but can lead to oscillations in the path.

Example: 2

Data Types: single | double

ResetNumTurns — Reset for counting turns

numeric signal

Reset for counting turns, specified as a numeric signal. Any rising signal triggers a reset of the **NumTurns** output.

Example: 2

Dependencies

To enable this input, select rising for **External reset**.

Data Types: single | double

Output

LookaheadPoint — Lookahead point on path

[x y z] position vector

Lookahead point on path, returned as an [x y z] position vector in meters.

Data Types: double

DesiredHeading — Desired heading

numeric scalar

Desired heading, returned as numeric scalar in radians in the range of $[-\pi, \pi]$. The UAV heading is the angle of direction of the velocity vector relative to north measured in radians.

Data Types: double

DesiredYaw — Desired yaw

numeric scalar

Desired yaw, returned as numeric scalar in radians in the range of $[-\pi, \pi]$. The UAV yaw is the forward direction of the UAV (regardless of the velocity vector) relative to north measured in radians.

Data Types: double

CrossTrackError — Cross track error from UAV position to path

positive numeric scalar

Cross track error from UAV position to path, returned as a positive numeric scalar in meters. The error measures the perpendicular distance from the UAV position to the closest point on the path.

Dependencies

This port is only visible if **Show CrossTrackError output port** is checked.

Data Types: double

NumTurns — Number of times the UAV has completed the orbit

numeric scalar

Number of times the UAV has completed the orbit, returned as a numeric scalar. As the UAV circles the center point, this value increases or decreases based on the specified **Turn Direction**. Decimal values indicate partial completion of a circle. If the UAV cross track error exceeds the lookahead distance, the number of turns is not updated.

NumTurns is reset whenever **Center**, **Radius**, or **TurnDirection** are changed. You can also use the **ResetNumTurns** input.

Dependencies

This port is only visible if **Show NumTurns output port** is checked.

Parameters

UAV type — Type of UAV

`fixed-wing (default) | multicopter`

Type of UAV, specified as either `fixed-wing` or `multicopter`.

This parameter is non-tunable.

External reset — Reset trigger source

`none (default) | rising`

Select `rising` to enable the **ResetNumTurns** block input.

This parameter is non-tunable.

Show CrossTrackError output port — Output cross track error

`off (default) | on`

Output cross track error from the **CrossTrackError** port.

This parameter is non-tunable.

Show NumTurns output port — Output UAV waypoint status

`off (default) | on`

Output UAV waypoint status from the **Status** port.

This parameter is non-tunable.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

UAV Guidance Model | Waypoint Follower

Functions

control | derivative | environment | ode45 | plotTransforms | roboticsAddons
| state

Objects

fixedwing | multicopter | uavOrbitFollower | uavWaypointFollower

Topics

“Approximate High-Fidelity UAV model with UAV Guidance Model block”


“Tuning Waypoint Follower for Fixed-Wing UAV”

Introduced in R2019a

Polynomial Trajectory

Generate polynomial trajectories through waypoints

Library: Robotics System Toolbox / Utilities

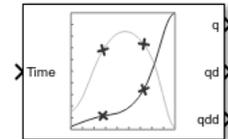

Description

The Polynomial Trajectory block generates trajectories to travel through waypoints at the given time points using either cubic, quintic, or B-spline polynomials. The block outputs positions, velocities, and accelerations for achieving this trajectory based on the **Time** input. For B-spline polynomials, the waypoints actually define the control points for the convex hull of the B-spline instead of the actual waypoints, but the first and last waypoint are still met.

The initial and final values are held constant outside the time period defined in **Time points**.

Ports

Input

Time — Time point along trajectory

scalar | vector

Time point along the trajectory, specified as a scalar or vector. In general, when specified as a scalar, this value is synced with simulation time and is used to specify the time point for sampling the trajectory. The block outputs a vector of the trajectory variables at that instant in time. If the time is specified as a vector, the block outputs a matrix with each column corresponding to each element of the vector.

Data Types: single | double

Waypoints — Waypoint positions along trajectory

n-by-*p* matrix

Positions of waypoints of the trajectory at given time points, specified as an *n*-by-*p* matrix, where *n* is the dimension of the trajectory and *p* is the number of waypoints. If you specify the **Method** as B-spline, these waypoints actually define the control points for the convex hull of the B-spline, but the first and last waypoint are still met.

Dependencies

To enable this input, set **Waypoint Source** to External.

TimePoints — Time points for waypoints of trajectory

p-element vector

Time points for waypoints of trajectory, specified as a *p*-element vector.

Dependencies

To enable this input, set **Waypoint Source** to External.

VelBC — Velocity boundary conditions for waypoints

n-by-*p* matrix

Velocity boundary conditions for waypoints, specified as an *n*-by-*p* matrix. Each row corresponds to the velocity at each of the *p* waypoints for the respective variable in the trajectory.

Dependencies

To enable this input, set **Method** to Cubic Polynomial or Quintic Polynomial and **Parameter Source** to External.

AccelBC — Acceleration boundary conditions for trajectory

n-by-*p* matrix

Acceleration boundary conditions for waypoints, specified as an *n*-by-*p* matrix. Each row corresponds to the acceleration at each of the *p* waypoints for the respective variable in the trajectory.

Dependencies

To enable this parameter, set **Method** to Quintic Polynomial and **Parameter Source** to External.

Output

q — Position of trajectory

scalar | vector | matrix

Position of the trajectory, specified as a scalar, vector, or matrix. If you specify a scalar for the **Time** input with an n -dimensional trajectory, the output is a vector with n elements. If you specify a vector of m elements for the **Time** input, the output is an n -by- m matrix.

Data Types: single | double

qd — Velocity of trajectory

scalar | vector | matrix

Velocity of the trajectory, specified as a scalar, vector, or matrix. If you specify a scalar for the **Time** input with an n -dimensional trajectory, the output is a vector with n elements. If you specify a vector of m elements for the **Time** input, the output is an n -by- m matrix.

Data Types: single | double

qdd — Acceleration of trajectory

scalar | vector | matrix

Acceleration of the trajectory, specified as a scalar, vector, or matrix. If you specify a scalar for the **Time** input with an n -dimensional trajectory, the output is a vector with n elements. If you specify a vector of m elements for the **Time** input, the output is an n -by- m matrix.

Data Types: single | double

Parameters

Waypoint source — Source for waypoints

Internal (default) | External

Specify **External** to specify the **Waypoints** and **Time points** parameters as block inputs instead of block parameters.

Waypoints — Waypoint positions along trajectory

n -by- p matrix

Positions of waypoints of the trajectory at given time points, specified as an n -by- p matrix, where n is the dimension of the trajectory and p is the number of waypoints. If you specify

the **Method** as B-spline, these waypoints actually define the control points for the convex hull of the B-spline, but the first and last waypoint are still met.

Dependencies

To specify this parameter in the block mask, set **Waypoint Source** to Internal.

Time points — Time points for waypoints of trajectory

p-element vector

Time points for waypoints of trajectory, specified as a *p*-element vector, where *p* is the number of waypoints.

Dependencies

To specify this parameter in the block mask, set **Waypoint Source** to Internal.

Method — Method for trajectory generation

Cubic Polynomial (default) | Quintic Polynomial | B-Spline

Method for trajectory generation, specified as either Cubic Polynomial, Quintic Polynomial, or B-Spline.

Parameter source — Source for waypoints

Internal (default) | External

Specify External to specify the **Velocity boundary conditions** and **Acceleration boundary conditions** parameters as block inputs instead of block parameters.

Velocity boundary conditions — Velocity boundary conditions for waypoints

zeroes(2,5) (default) | *n*-by-*p* matrix

Velocity boundary conditions for waypoints, specified as an *n*-by-*p* matrix. Each row corresponds to the velocity at each of the *p* waypoints for the respective variable in the trajectory.

Dependencies

To enable this input, set **Method** to Cubic Polynomial or Quintic Polynomial.

Acceleration boundary conditions — Acceleration boundary conditions for trajectory

n-by-*p* matrix

Acceleration boundary conditions for waypoints, specified as an n -by- p matrix. Each row corresponds to the acceleration at each of the p waypoints for the respective variable in the trajectory.

Dependencies

To enable this parameter, set **Method** to `Quintic Polynomial`.

Simulate using — Type of simulation to run

`Interpreted execution (default)` | `Code generation`

- `Interpreted execution` — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than `Code generation`. In this mode, you can debug the source code of the block.
- `Code generation` — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to `Interpreted execution`.

References

- [1] Farin, Gerald E. *Curves and Surfaces for Computer Aided Geometric Design: A Practical Guide*. San Diego, CA: Academic Press, 1993.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

`Rotation Trajectory` | `Transform Trajectory` | `Trapezoidal Velocity Profile Trajectory`

Functions


bsplinepolytraj | cubicpolytraj | quinticpolytraj | rottraj |
transformtraj | trapveltraj

Introduced in R2019a

Pure Pursuit

Linear and angular velocity control commands

Library: Robotics System Toolbox / Mobile Robot Algorithms /
Navigation Toolbox / Control Algorithms

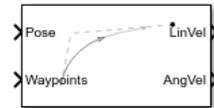

Description

The Pure Pursuit block computes linear and angular velocity commands for following a path using a set of waypoints and the current pose of a differential drive vehicle. The block takes updated poses to update velocity commands for the vehicle to follow a path along a desired set of waypoints. Use the **Max angular velocity** and **Desired linear velocity** parameters to update the velocities based on the performance of the vehicle.

The **Lookahead distance** parameter computes a look-ahead point on the path, which is an instantaneous local goal for the vehicle. The angular velocity command is computed based on this point. Changing **Lookahead distance** has a significant impact on the performance of the algorithm. A higher look-ahead distance results in a smoother trajectory for the vehicle, but can cause the vehicle to cut corners along the path. Too low of a look-ahead distance can result in oscillations in tracking the path, causing unstable behavior. For more information on the pure pursuit algorithm, see “Pure Pursuit Controller”.

Input/Output Ports

Input

Pose — Current vehicle pose

[x y theta] vector

Current vehicle pose, specified as an [x y theta] vector, which corresponds to the x-y position and orientation angle, *theta*. Positive angles are measured counterclockwise from the positive x-axis.

Waypoints — Waypoints

[] (default) | n -by-2 array

Waypoints, specified as an n -by-2 array of [x y] pairs, where n is the number of waypoints. You can generate the waypoints using path planners like `mobileRobotPRM` or specify them as an array in Simulink.

Output

LinVel — Linear velocity

scalar in meters per second

Linear velocity, specified as a scalar in meters per second.

Data Types: `double`

AngVel — Angular velocity

scalar in radians per second

Angular velocity, specified as a scalar in radians per second.

Data Types: `double`

TargetDir — Target direction for vehicle

scalar in radians

Target direction for the vehicle, specified as a scalar in radians. The forward direction of the vehicle is considered zero radians, with positive angles measured counterclockwise. This output can be used as the input to the **TargetDir** port for the Vector Field Histogram block.

Dependencies

To enable this port, select the **Show TargetDir output port** parameter.

Parameters

Desired linear velocity (m/s) — Linear velocity

0.1 (default) | scalar

Desired linear velocity, specified as a scalar in meters per second. The controller assumes that the vehicle drives at a constant linear velocity and that the computed angular velocity is independent of the linear velocity.

Maximum angular velocity (rad/s) – Angular velocity

1.0 (default) | scalar

Maximum angular velocity, specified as a scalar in radians per second. The controller saturates the absolute angular velocity output at the given value.

Lookahead distance (m) – Look-ahead distance

1.0 (default) | scalar

Look-ahead distance, specified as a scalar in meters. The look-ahead distance changes the response of the controller. A vehicle with a higher look-ahead distance produces smooth paths but takes larger turns at corners. A vehicle with a smaller look-ahead distance follows the path closely and takes sharp turns, but oscillate along the path. For more information on the effects of look-ahead distance, see “Pure Pursuit Controller”.

Show TargetDir output port – Target direction indicator

off (default) | on

Select this parameter to enable the **TargetDir** out port. This port gives the target direction as an angle in radians from the forward position, with positive angles measured counterclockwise.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Classes

binaryOccupancyMap | mobileRobotPRM | occupancyMap

Topics

“Path Following for a Differential Drive Robot”

“Plan Path for a Differential Drive Robot in Simulink”

“Path Following with Obstacle Avoidance in Simulink®” (Navigation Toolbox)


“Pure Pursuit Controller”

Introduced in R2019b

Rotation Trajectory

Generate trajectory between two orientations

Library: Robotics System Toolbox / Utilities

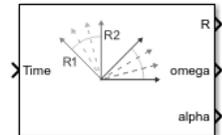

Description

The Rotation Trajectory block generates an interpolated trajectory between two rotation matrices. The block outputs the rotation at the times given by the **Time** input, which can be a scalar or vector.

The trajectory is computed using quaternion spherical linear interpolation (SLERP) and finds the shortest path between points. Select the **Use custom time scaling** check box to compute using a custom time scaling. The block uses linear time scaling by default.

The initial and final values are held constant outside the time period defined in the **Time interval** parameter.

Ports

Input

Time — Time point along trajectory

scalar | vector

Time point along the trajectory, specified as a scalar or vector. In general, when specified as a scalar, this value is synced with simulation time and is used to specify the time point for sampling the trajectory. The block outputs a vector of the trajectory variables at that instant in time. If the time is specified as a vector, the block outputs a matrix with each column corresponding to each element of the vector.

Data Types: single | double

R0 — Initial orientation

four-element quaternion vector | 3-by-3 rotation matrix

Initial orientation, specified as a four-element quaternion vector or 3-by-3 rotation matrix. The function generates a trajectory that starts at the initial orientation, **R0**, and goes to the final orientation, **RF**.

Example: `[1 0 0 0]'`

Dependencies

To enable this input, set the **Waypoint source** to External.

To specify quaternions, set **Rotation Format** parameter to Quaternion.

To specify rotation matrices, set **Rotation Format** parameter to Rotation.

Data Types: `single` | `double`

RF — Final orientation

four-element vector | 3-by-3 rotation matrix

Initial orientation, specified as a four-element vector or 3-by-3 rotation matrix. The function generates a trajectory that starts at the initial orientation, **R0**, and goes to the final orientation, **RF**.

Example: `[0 0 1 0]'`

Dependencies

To enable this input, set the **Waypoint source** to External.

To specify quaternions, set **Rotation Format** parameter to Quaternion.

To specify rotation matrices, set **Rotation Format** parameter to Rotation.

Data Types: `single` | `double`

TimeInterval — Start and end times for trajectory

two-element vector

Start and end times for the trajectory, specified as a two-element vector.

Example: `[0 10]`

Dependencies

To enable this input, set the **Waypoint source** to External.

Data Types: single | double

TSTime — Time scaling time points

scalar | p -element vector

Time scaling time points, specified as a scalar or n p -element vector, where p is the number of points for time scaling. By default, the time scaling is a linear time scaling spanning the **TimeInterval**. Specify the actual time scaling values in **TimeScaling**.

If the **Time** input is specified at a time not specified by these points, interpolation is used to find the right scaling time.

Dependencies

To enable this parameter, select the **Use custom time scaling** check box and set **Parameter source** to External.

To specify a scalar, the **Time** input must be a scalar.

Data Types: single | double

TimeScaling — Time scaling vector and first two derivatives

three-element vector | 3-by- p matrix

Time scaling vector and its first two derivatives, specified as a three element vector or a 3-by- p matrix, where m is the length of **TSTime**. By default, the time scaling is a linear time scaling spanning the **TimeInterval**.

For a nonlinear time scaling, specify the values of the time points in the first row. The second and third rows are the velocity and acceleration of the time points, respectively. For example, to follow the path with a linear velocity to the halfway point, and then jump to the end, the time-scaling would be:

```
s(1,:) = [0 0.25 0.5 1 1 1] % Position
s(2,:) = [1 1 1 0 0 0] % Velocity
s(3,:) = [0 0 0 0 0 0] % Acceleration
```

Dependencies

To enable this parameter, select the **Use custom time scaling** check box and set **Parameter source** to External.

To specify a three-element vector, the **Time** and **TSTime** inputs must be a scalar.

Data Types: `single` | `double`

Output

R — Orientation vectors

4-by- m quaternion array | 3-by-3-by- m rotation matrix array

Orientation vectors, returned as a 4-by- m quaternion array or 3-by-3-by- m rotation matrix array, where m is the number of points in the input to **Time**.

Dependencies

To get a quaternion array, set **Rotation Format** parameter to `Quaternion`.

To get a rotation matrix array, set **Rotation Format** parameter to `Rotation`.

omega — Orientation angular velocity

3-by- m matrix

Orientation angular velocity, returned as a 3-by- m matrix, where m is the number of points in the input to **Time**.

alpha — Orientation angular acceleration

3-by- m matrix

Orientation angular acceleration, returned as a 3-by- m matrix, where m is the number of points in the input to **Time**.

Parameters

Rotation format — Format for orientations

`Quaternion` (default) | `Rotation Matrix`

Select `Rotation Matrix` to specify the **Initial rotation** and **Final rotation** as 3-by-3 rotation matrices and get the orientation output (port **R**) as a rotation matrix array. By default, the initial and final rotations are specified as four-element quaternion vectors.

Waypoint source — Source for waypoints

`Internal` (default) | `External`

Specify External to specify the **Initial rotation**, **Final rotation**, and **Time interval** parameters as block inputs instead of block parameters.

Initial rotation – Initial orientation

[1 0 0 0]' (default) | four-element quaternion vector | 3-by-3 rotation matrix

Initial orientation, specified as a four-element quaternion vector or 3-by-3 rotation matrix. The function generates a trajectory that starts at the **Initial rotation** and goes to the **Final rotation**.

Dependencies

To specify quaternions, set **Rotation Format** parameter to Quaternion.

To specify rotation matrices, set **Rotation Format** parameter to Rotation.

Data Types: single | double

Final rotation – Final orientation

[0 0 1 0]' (default) | four-element vector | 3-by-3 rotation matrix

Final orientation, specified as a four-element vector or 3-by-3 rotation matrix. The function generates a trajectory that starts at the **Initial rotation** and goes to the **Final rotation**.

Dependencies

To specify quaternions, set **Rotation Format** parameter to Quaternion.

To specify rotation matrices, set **Rotation Format** parameter to Rotation.

Data Types: single | double

Time interval – Start and end times for trajectory

[0 10] (default) | two-element vector

Start and end times for the trajectory, specified as a two-element vector.

Data Types: single | double

Use custom time scaling – Enable custom time scaling

off (default) | on

Enable to specify custom time scaling for the trajectory using the **Parameter Source**, **Time scaling time**, and **Time scaling values** parameters.

Parameter source — Source for waypoints

Internal (default) | External

Specify **External** to specify the **Time scaling time** and **Time scaling values** parameters as block inputs instead of block parameters.

Dependencies

To enable this parameter, select the **Use custom time scaling** check box.

Time scaling time — Time scaling time points2:0.1:3 (default) | scalar | p -element vector

Time scaling time points, specified as a scalar or p -element vector, where p is the number of points for time scaling. By default, the time scaling is a linear time scaling spanning the **Time interval**. Specify the actual time scaling values in **Time scaling values**.

If the **Time** input is specified at a time not specified by these points, interpolation is used to find the right scaling time.

Dependencies

To enable this parameter, select the **Use custom time scaling** check box.

To specify a scalar, the **Time** input must be a scalar.

Data Types: single | double

Time scaling values — Time scaling vector and first two derivatives[0:0.1:1; ones(1,11); zeros(1,11)] (default) | three-element vector | 3-by- m matrix

Time scaling vector and its first two derivatives, specified as a three-element vector or 3-by- p matrix, where p is the length of **Time scaling time**. By default, the time scaling is a linear time scaling spanning the **Time interval**.

For a nonlinear time scaling, specify the values of the time points in the first row. The second and third rows are the velocity and acceleration of the time points, respectively. For example, to follow the path with a linear velocity to the halfway point, and then jump to the end, the time-scaling would be:

```
s(1,:) = [0 0.25 0.5 1 1 1] % Position
s(2,:) = [1 1 1 0 0 0] % Velocity
s(3,:) = [0 0 0 0 0 0] % Acceleration
```

Dependencies

To enable this parameter, select the **Use custom time scaling** checkbox.

To specify a three-element vector, the **Time** and **TSTime** inputs must be a scalar.

Data Types: `single` | `double`

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than **Code generation**. In this mode, you can debug the source code of the block.
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to **Interpreted execution**.

Tunable: No

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Polynomial Trajectory | Transform Trajectory | Trapezoidal Velocity Profile Trajectory

Functions


`bsplinepolytraj` | `cubicpolytraj` | `quinticpolytraj` | `rottraj` | `transformtraj` | `trapveltraj`

Introduced in R2019a

Task Space Motion Model

Model rigid body tree motion given task-space inputs

Library: Robotics System Toolbox / Manipulator Algorithms

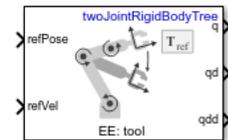

Description

The Task Space Motion Model block models the closed-loop task-space motion of a manipulator, specified as a `rigidBodyTree` object. The motion model behavior is defined using proportional-derivative (PD) control.

Ports

Input

refPose — End-effector pose

4-by-4 matrix

Homogenous transformation matrix representing the desired end effector pose, specified in meters.

refVel — Joint velocities

6-element vector

6-element vector representing the desired linear and angular velocities of the end effector, specified in meters per second and radians per second.

FExt — External forces

6-by- m matrix

6-by- m matrix representing external forces, specified in meters per second. m is the number of bodies in the `rigidBodyTree` object in the `Rigid body tree` parameter.

Dependencies

To enable this port, set the `Show external force input` parameter to `on`.

Output

q — Joint positions

n-element vector

Joint positions output as an *n*-element vector in radians or meters, where *n* is the number of nonfixed joints in the `rigidBodyTree` object in the `Rigid body tree` parameter.

qd — Joint velocities

n-element

Joint velocities output as an *n*-element vector in radians per second or meters per second, where *n* is the number of nonfixed joints in the `rigidBodyTree` object in the `Rigid body tree` parameter.

qdd — Joint accelerations

n-element

Joint accelerations output as an *n*-element in radians per second squared or meters per second squared, where *n* is the number of nonfixed joints in the `rigidBodyTree` object in the `Rigid body tree` parameter.

Parameters

Rigid body tree — Rigid body tree

`twoJointRigidBodyTree` object (default) | `RigidBodyTree` object

Robot model, specified as a `RigidBodyTree` object. You can also import a robot model from an URDF (Unified Robot Description Formation) file using `importrobot`.

The default robot model, `twoJointRigidBodyTree`, is a robot with revolute joints and two degrees of freedom.

End effector — End effector body

`tool` (default)

This parameter defines the body that will be used as the end effector, and for which the task space motion is defined. The property must correspond to a body name in the `rigidBodyTree` object of the property. Click **Select body** to select a body from the `rigidBodyTree`. If the `rigidBodyTree` is updated without also updating the end effector, the body with the highest index is assigned by default.

Proportional gain — Proportional gain for PD Control

500*eye(6) (default) | 6-by-6 matrix

Proportional gain for proportional-derivative (PD) control, specified as a 6-by-6 matrix.

Derivative gain — Derivative gain for PD Control

100*eye(6) (default) | 6-by-6 matrix

Derivative gain for proportional-derivative (PD) control, specified as a 6-by-6 matrix.

Joint damping — Damping ratios

[1 1] (default) | n -element vector | scalar

Damping ratios on each joint, specified as a scalar or n -element vector, where n is the number of nonfixed joints in the `rigidBodyTree` object in the `Rigid body tree` parameter.

Show external force input — Display FExt port

off (default) | on

Click the check-box to enable this parameter to input external forces using the FExt port.

Initial joint configuration — Initial joint positions

0 (default) | n -element vector | scalar

Initial joint positions, specified as a n -element vector or scalar in radians. n is the number of nonfixed joints in the `rigidBodyTree` object in the `Rigid body tree` parameter.

Initial joint velocities — Initial joint velocities

0 (default) | n -element vector | scalar

Initial joint velocities, specified as a n -element vector or scalar in radians per second. n is the number of nonfixed joints in the `rigidBodyTree` object in the `Rigid body tree` parameter.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. For more information, see “Simulation Modes” (Simulink).
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change.

Tunable: No

References

- [1] Craig, John J. *Introduction to Robotics: Mechanics and Control*. Upper Saddle River, NJ: Pearson Education, 2005.
- [2] Spong, Mark W., Seth Hutchinson, and Mathukumalli Vidyasagar. *Robot Modeling and Control*. Hoboken, NJ: Wiley, 2006.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Joint Space Space Motion Model

Classes


jointSpaceMotionModel | taskSpaceMotionModel

Introduced in R2019b

Transform Trajectory

Generate trajectory between two homogeneous transforms

Library: Robotics System Toolbox / Utilities

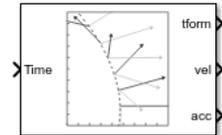

Description

The Transform Trajectory block generates an interpolated trajectory between two homogenous transformation matrices. The block outputs the transform at the times given by the **Time** input, which can be a scalar or vector.

The trajectory is computed using quaternion spherical linear interpolation (SLERP) for the rotation and linear interpolation for the translation. This method finds the shortest path between positions and rotations of the transformation. Select the **Use custom time scaling** check box to compute the trajectory using a custom time scaling. The block uses linear time scaling by default.

The initial and final values are held constant outside the time period defined in **Time interval**.

Ports

Input

Time — Time point along trajectory

scalar | vector

Time point along trajectory, specified as a scalar or vector. In general, when specified as a scalar, this value is synced with simulation time and is used to specify the time point for sampling the trajectory. The block outputs a vector of the trajectory variables at that instant in time. If the time is specified as a vector, the block outputs a matrix with each column corresponding to each element of the vector.

Data Types: `single` | `double`

T0 — Initial transformation matrix

4-by-4 homogeneous transformation

Initial transformation matrix, specified as a 4-by-4 homogeneous transformation. The function generates a trajectory that starts at the initial orientation, **T0**, and goes to the final orientation, **TF**.

Example: `trvec2tform([1 10 -1])`

Dependencies

To enable this parameter, set the **Waypoint source** to `External`.

Data Types: `single` | `double`

TF — Final transformation matrix

4-by-4 homogeneous transformation

Final transformation matrix, specified as a 4-by-4 homogeneous transformation. The function generates a trajectory that starts at the initial orientation, **T0**, and goes to the final orientation, **TF**.

Example: `trvec2tform([1 10 -1])`

Dependencies

To enable this parameter, set the **Waypoint source** to `External`.

Data Types: `single` | `double`

TimeInterval — Start and end times for trajectory

two-element vector

Start and end times for the trajectory, specified as a two-element vector.

Example: `[0 10]`

Dependencies

To enable this parameter, set the **Waypoint source** to `External`.

Data Types: `single` | `double`

TSTime — Time scaling time points

scalar | p -element vector

Time scaling time points, specified as a scalar or n p -element vector, where p is the number of points for time scaling. By default, the time scaling is a linear time scaling spanning the **TimeInterval**. Specify the actual time scaling values in **TimeScaling**.

If the **Time** input is specified at a time not specified by these points, interpolation is used to find the right scaling time.

Dependencies

To enable this parameter, select the **Use custom time scaling** check box and set **Parameter source** to External.

To specify a scalar, the **Time** input must be a scalar.

Data Types: `single` | `double`

TimeScaling — Time scaling vector and first two derivatives

three-element vector | 3-by- p matrix

Time scaling vector and its first two derivatives, specified as a three element vector or a 3-by- p matrix, where m is the length of **TSTime**. By default, the time scaling is a linear time scaling spanning the **TimeInterval**.

For a nonlinear time scaling, specify the values of the time points in the first row. The second and third rows are the velocity and acceleration of the time points, respectively. For example, to follow the path with a linear velocity to the halfway point, and then jump to the end, the time-scaling would be:

```
s(1,:) = [0 0.25 0.5 1 1 1] % Position
s(2,:) = [1 1 1 0 0 0] % Velocity
s(3,:) = [0 0 0 0 0 0] % Acceleration
```

Dependencies

To enable this parameter, select the **Use custom time scaling** check box and set **Parameter source** to External.

To specify a three-element vector, the **Time** and **TSTime** inputs must be a scalar.

Data Types: `single` | `double`

Output

tform — Homogeneous transformation matrices

4-by-4-by- m homogenous matrix array

Homogeneous transformation matrices, returned as a 4-by-4-by- m homogenous matrix array, where m is the number of points input to **Time**.

vel — Transform velocities

6-by- m matrix

Transform velocities, returned as a 6-by- m matrix, where m is the number of points input to **Time**. Each row of the vector is the angular and linear velocity of the transform as $[w_x \ w_y \ w_z \ v_x \ v_y \ v_z]$. w represents an angular velocity and v represents a linear velocity.

alpha — Transform accelerations

6-by- m matrix

Transform velocities, returned as a 6-by- m matrix, where m is the number of points input to **Time**. Each row of the vector is the angular and linear acceleration of the transform as $[\alpha_x \ \alpha_y \ \alpha_z \ a_x \ a_y \ a_z]$. α represents an angular acceleration and a represents a linear acceleration.

Parameters

Waypoint source — Source for waypoints

Internal (default) | External

Specify **External** to specify the **Waypoints** and **Time points** parameters as block inputs instead of block parameters.

Initial transform — Initial transformation matrix

`trvec2tform([1 10 -1])` (default) | 4-by-4 homogeneous transformation

Initial transformation matrix, specified as a 4-by-4 homogeneous transformation. The function generates a trajectory that starts at the **Initial transform** and goes to the **Final transform**.

Data Types: `single` | `double`

Final transform — Final transformation matrix

`eul2tform([0 pi pi/2])` (default) | 4-by-4 homogeneous transformation

Final transformation matrix, specified as a 4-by-4 homogeneous transformation. The function generates a trajectory that starts at the **Initial transform** and goes to the **Final transform**.

Data Types: `single` | `double`

Time interval — Start and end times for trajectory

`[2 3]` | two-element vector

Start and end times for the trajectory, specified as a two-element vector in seconds.

Data Types: `single` | `double`

Use custom time scaling — Enable custom time scaling

`off` (default) | `on`

Enable to specify custom time scaling for the trajectory using the **Parameter Source**, **Time scaling time**, and **Time scaling values** parameters.

Parameter source — Source for waypoints

`Internal` (default) | `External`

Specify `External` to specify the **Time scaling time** and **Time scaling values** parameters as block inputs instead of block parameters.

Dependencies

To enable this parameter, select the **Use custom time scaling** check box.

Time scaling time — Time scaling time points

`2:0.1:3` (default) | scalar | p -element vector

Time scaling time points, specified as a scalar or p -element vector, where p is the number of points for time scaling. By default, the time scaling is a linear time scaling spanning the **Time interval**. Specify the actual time scaling values in **Time scaling values**.

If the **Time** input is specified at a time not specified by these points, interpolation is used to find the right scaling time.

Dependencies

To enable this parameter, select the **Use custom time scaling** check box.

To specify a scalar, the **Time** input must be a scalar.

Data Types: `single` | `double`

Time scaling values — Time scaling vector and first two derivatives

`[0:0.1:1; ones(1,11); zeros(1,11)]` (default) | three-element vector | 3-by-*m* matrix

Time scaling vector and its first two derivatives, specified as a three-element vector or 3-by-*p* matrix, where *p* is the length of **Time scaling time**. By default, the time scaling is a linear time scaling spanning the **Time interval**.

For a nonlinear time scaling, specify the values of the time points in the first row. The second and third rows are the velocity and acceleration of the time points, respectively. For example, to follow the path with a linear velocity to the halfway point, and then jump to the end, the time-scaling would be:

```
s(1,:) = [0 0.25 0.5 1 1 1] % Position
s(2,:) = [1 1 1 0 0 0] % Velocity
s(3,:) = [0 0 0 0 0 0] % Acceleration
```

Dependencies

To enable this parameter, select the **Use custom time scaling** checkbox.

To specify a three-element vector, the **Time** and **TSTime** inputs must be a scalar.

Data Types: `single` | `double`

Simulate using — Type of simulation to run

`Interpreted execution` (default) | `Code generation`

- **Interpreted execution** — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than **Code generation**. In this mode, you can debug the source code of the block.
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to **Interpreted execution**.

Tunable: No

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Polynomial Trajectory | Rotation Trajectory | Trapezoidal Velocity Profile Trajectory

Functions


bsplinepolytraj | cubicpolytraj | quinticpolytraj | rottraj | transformtraj | trapveltraj

Introduced in R2019a

Trapezoidal Velocity Profile Trajectory

Generate trajectories through multiple waypoints using trapezoidal velocity profiles

Library: Robotics System Toolbox / Utilities

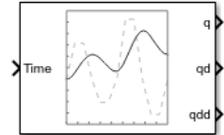

Description

The Trapezoidal Velocity Profile Trajectory block generates a trajectory through a given set of waypoints that follow a trapezoidal velocity profile. The block outputs positions, velocities, and accelerations for a trajectory based on the given waypoints and velocity profile parameters.

Ports

Input

Time — Time point along trajectory

scalar | vector

Time point along trajectory, specified as a scalar or vector. In general, when specified as a scalar, this value is synced with simulation time and is used to specify the time point for sampling the trajectory. The block outputs a vector of the trajectory variables at that instant in time. If the time is specified as a vector, the block outputs a matrix with each column corresponding to each element of the vector.

Data Types: single | double

Waypoints — Waypoint positions along trajectory

n -by- p matrix

Positions of waypoints of the trajectory at given time points, specified as an n -by- p matrix, where n is the dimension of the trajectory and p is the number of waypoints.

Dependencies

To enable this input, set **Waypoint source** to External.

PeakVelocity — Peak velocity of the velocity profile

[1;2] (default) | scalar | n -element vector | n -by- $(p - 1)$ matrix

Peak velocity of the profile segment, specified as a scalar, vector, or matrix. This peak velocity is the highest velocity achieved during the trapezoidal velocity profile.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p - 1)$ matrix is applied to each element of the trajectory for each waypoint.

Dependencies

To enable this parameter, set **Number of parameters** to 1 or 2. Set **Parameter 1** or **Parameter 2** to Peak Velocity. Then, set **Parameter source** to External.

Data Types: single | double

Acceleration — Acceleration of the velocity profile

[2;2] (default) | scalar | n -element vector | n -by- $(p - 1)$ matrix

Acceleration of the velocity profile, specified as a scalar, vector, or matrix. This acceleration defines the constant acceleration from zero velocity to the **PeakVelocity** value.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p - 1)$ matrix is applied to each element of the trajectory for each waypoint.

Dependencies

To enable this parameter, set **Number of parameters** to 1 or 2. Set **Parameter 1** or **Parameter 2** to Acceleration. Then, set **Parameter source** to External.

Data Types: single | double

EndTime — Duration of trajectory segment

[1;2] (default) | scalar | n -element vector | n -by- $(p - 1)$ matrix

Duration of trajectory segment, specified as a scalar, vector, or matrix.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p - 1)$ matrix is applied to each element of the trajectory for each waypoint.

Dependencies

To enable this parameter, set **Number of parameters** to 1 or 2. set **Parameter 1** or **Parameter 2** to End Time. Then, set **Parameter source** to External.

Data Types: single | double

Acceleration Time — Duration of acceleration phase of velocity profile

[1;1] (default) | scalar | n -element vector | n -by- $(p - 1)$ matrix

Duration of acceleration phase of velocity profile, specified as a scalar, vector, or matrix.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p - 1)$ matrix is applied to each element of the trajectory for each waypoint.

Dependencies

To enable this parameter, set **Number of parameters** to 1 or 2. set **Parameter 1** or **Parameter 2** to Acceleration Time. Then, set **Parameter source** to External.

Data Types: single | double

Output

q — Position of trajectory

scalar | vector | matrix

Position of the trajectory, specified as a scalar, vector, or matrix. If you specify a scalar for the Time input with an n -dimensional trajectory, the output is a vector with n elements. If you specify a vector of m elements for the Time input, the output is an n -by- m matrix.

Data Types: single | double

qd — Velocity of trajectory

scalar | vector | matrix

Velocity of the trajectory, specified as a scalar, vector, or matrix. If you specify a scalar for the Time input with an n -dimensional trajectory, the output is a vector with n elements. If you specify a vector of m elements for the Time input, the output is an n -by- m matrix.

Data Types: `single` | `double`

qdd — Acceleration of trajectory

`scalar` | `vector` | `matrix`

Acceleration of the trajectory, specified as a scalar, vector, or matrix. If you specify a scalar for the `Time` input with an n -dimensional trajectory, the output is a vector with n elements. If you specify a vector of m elements for the `Time` input, the output is an n -by- m matrix.

Data Types: `single` | `double`

Parameters

Waypoint source — Source for waypoints

`Internal` (default) | `External`

Specify `External` to specify the **Waypoints** and **Time points** parameters as block inputs instead of block parameters.

Waypoints — Waypoint positions along trajectory

n -by- p matrix

Positions of waypoints of the trajectory at given time points, specified as an n -by- p matrix, where n is the dimension of the trajectory and p is the number of waypoints.

Number of parameters — Number of velocity profile parameters

0 (default) | 1 | 2

Number of velocity profile parameters, specified as 0, 1, or 2. Increasing this value adds **Parameter 1** and **Parameter 2** for specifying parameters for the velocity profile.

Parameter 1 — Velocity profile parameter

`Peak Velocity` | `Acceleration` | `End Time` | `Acceleration Time`

Velocity profile parameter, specified as `Peak Velocity`, `Acceleration`, `End Time`, or `Acceleration Time`. Setting this parameter creates a parameter in the mask with this value as its name.

Dependencies

To enable this parameter, set **Number of parameters** to 1 or 2.

If **Parameter Source** is set to `Internal`, this parameter creates a parameter in the mask with this value as its name.

If **Parameter Source** is set to `External`, this parameter creates an input port based on this value.

Parameter 2 — Velocity profile parameter

`Peak Velocity` | `Acceleration` | `End Time` | `Acceleration Time`

Velocity profile parameter, specified as `Peak Velocity`, `Accleration`, `End Time`, or `Acceleration Time`. Setting this parameter creates a parameter in the mask with this value as its name.

Dependencies

To enable this parameter, set **Number of parameters** to 2.

If **Parameter Source** is set to `Internal`, this parameter creates a parameter in the mask with this value as its name.

If **Parameter Source** is set to `External`, this parameter creates an input port based on this value.

Parameter source — Source for waypoints

`Internal` (default) | `External`

Specify `External` to specify the velocity profile parameters as block inputs instead of block parameters.

Dependencies

To enable this parameter, set **Number of parameters** to 1 or 2.

PeakVelocity — Peak velocity of the velocity profile

`[1; 2]` (default) | scalar | n -element vector | n -by- $(p - 1)$ matrix

Peak velocity of the profile segment, specified as a scalar, vector, or matrix. This peak velocity is the highest velocity achieved during the trapezoidal velocity profile.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p - 1)$ matrix is applied to each element of the trajectory for each waypoint.

Dependencies

To enable this parameter, set **Number of parameters** to 1 or 2. Then, set **Parameter 1** or **Parameter 2** to Peak Velocity.

Data Types: single | double

Acceleration — Acceleration of the velocity profile

[2;2] (default) | scalar | n -element vector | n -by- $(p - 1)$ matrix

Acceleration of the velocity profile, specified as a scalar, vector, or matrix. This acceleration defines the constant acceleration from zero velocity to the **PeakVelocity** value.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p - 1)$ matrix is applied to each element of the trajectory for each waypoint.

Dependencies

To enable this parameter, set **Number of parameters** to 1 or 2. Then, set **Parameter 1** or **Parameter 2** to Acceleration.

Data Types: single | double

EndTime — Duration of trajectory segment

[1;2] (default) | scalar | n -element vector | n -by- $(p - 1)$ matrix

Duration of trajectory segment, specified as a scalar, vector, or matrix.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p - 1)$ matrix is applied to each element of the trajectory for each waypoint.

Dependencies

To enable this parameter, set **Number of parameters** to 1 or 2. Then, set **Parameter 1** or **Parameter 2** to End Time.

Data Types: single | double

Acceleration Time — Duration of acceleration phase of velocity profile

[1;1] (default) | scalar | n -element vector | n -by- $(p - 1)$ matrix

Duration of acceleration phase of velocity profile, specified as a scalar, vector, or matrix.

A scalar value is applied to all elements of the trajectory and between all waypoints. An n -element vector is applied to each element of the trajectory between all waypoints. An n -by- $(p - 1)$ matrix is applied to each element of the trajectory for each waypoint.

Dependencies

To enable this parameter, set **Number of parameters** to 1 or 2. Then, set **Parameter 1** or **Parameter 2** to Acceleration Time.

Data Types: `single` | `double`

Simulate using — Type of simulation to run

`Interpreted execution (default)` | `Code generation`

- **Interpreted execution** — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than **Code generation**. In this mode, you can debug the source code of the block.
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to **Interpreted execution**.

Tunable: No

References

- [1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning and Control*. Cambridge: Cambridge University Press, 2017.
- [2] Spong, Mark W., Seth Hutchinson, and M. Vidyasagar. *Robot Modeling and Control*. John Wiley & Sons, 2006.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Polynomial Trajectory | Rotation Trajectory | Transform Trajectory

Functions


bsplinepolytraj | cubicpolytraj | quinticpolytraj | rottraj |
transformtraj | trapveltraj

Introduced in R2019a

UAV Animation

Animate UAV flight path using translations and rotations

Library: Robotics System Toolbox UAV Library

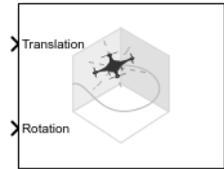

Description

Note This block requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

The UAV Animation block animates a unmanned aerial vehicle (UAV) flight path based on an input array of translations and rotations. A visual mesh is displayed for either a fixed-wing or multirotor at the given position and orientation. Click the **Show animation** button in the block mask to bring up the figure after simulating.

Ports

Input

Translation — xyz-positions

[x y z] vector

xyz-positions specified as an [x y z] vector.

Example: [1 1 1]

Rotation — Rotations of UAV body frames

[w x y z] quaternion vector

Rotations of UAV body frames relative to the inertial frame, specified as a [w x y z] quaternion vector.

Example: [1 0 0 0]

Parameters

UAV type — Type of UAV mesh to display

Multirotor (default) | FixedWing

Type of UAV mesh to display, specified as either FixedWing or Multirotor.

UAV size — Size of frame and attached mesh

1 (default) | positive numeric scalar

Size of frame and attached mesh, specified as positive numeric scalar.

Inertial frame z-axis direction — Direction of positive z-axis of inertial frame

Down (default) | Up

Direction of the positive z-axis of inertial frame, specified as either Up or Down. In the plot, the positive z-axis always points up. The parameter defines the rotation between the inertia frame and plot frame. Set this parameter to Down if the inertial frame is following 'North-East-Down' configuration.

Sample time — Interval between outputs

-1 (default) | scalar

Interval between outputs, specified as a scalar. In simulation, the sample time follows simulation time and not actual wall-block time.

This default value indicates that the block sample time is *inherited*.

For more information about the inherited sample time type, see “Specify Sample Time” (Simulink).

See Also

Functions

`plotTransforms` | `roboticsAddons` | `state`

Objects

`robotics.FixedWingGuidanceModel` | `robotics.MulticopterGuidanceModel` |
`robotics.WaypointFollower`

Blocks

Waypoint Follower

Topics

“Approximate High-Fidelity UAV model with UAV Guidance Model block”


“Tuning Waypoint Follower for Fixed-Wing UAV”

Introduced in R2018b

UAV Guidance Model

Reduced-order model for UAV

Library: Robotics System Toolbox UAV Library

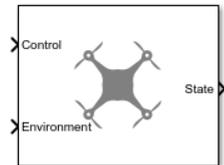

Description

Note This block requires you to install the UAV Library for Robotics System Toolbox. To install add-ons, use `roboticsAddons` and select the desired add-on.

The UAV Guidance Model block represents a small unmanned aerial vehicle (UAV) guidance model that estimates the UAV state based on control and environmental inputs. The model approximates the behavior of a closed-loop system consisting of an autopilot controller and a fixed-wing or multirotor kinematic model for 3-D motion. Use this block as a reduced-order guidance model to simulate your fixed-wing or multirotor UAV. Specify the **ModelType** to select your UAV type. Use the **Initial State** tab to specify the initial state of the UAV depending on the model type. The **Configuration** tab defines the control parameters and physical parameters of the UAV.

Ports

Input

Control — Control commands

bus

Control commands sent to the UAV model, specified as a bus. The name of the input bus is specified in **Input/Output Bus Names**.

For multirotor UAVs, the model is approximated as separate PD controllers for each command. The elements of the bus are control command:

- **Roll** - Roll angle in radians.
- **Pitch** - Pitch angle in radians.
- **YawRate** - Yaw rate in radians per second. (D = 0. P only controller)
- **Thrust** - Vertical thrust of the UAV in Newtons. (D = 0. P only controller)

For fixed-wing UAVs, the model assumes the UAV is flying under the coordinated-turn condition. The guidance model equations assume zero side-slip. The elements of the bus are:

- **Height** - Altitude above the ground in meters.
- **Airspeed** - UAV speed relative to wind in meters per second.
- **RollAngle** - Roll angle along body forward axis in radians. Because of the coordinated-turn condition, the heading angular rate is based on the roll angle.

Environment — Environmental inputs

bus

Environmental inputs, specified as a bus. The model compensates for these environmental inputs when trying to achieve the commanded controls.

For fixed-wing UAVs, the elements of the bus are **WindNorth**, **WindEast**, **WindDown**, and **Gravity**. Wind speeds are in meters per second and negative speeds point in the opposite direction. Gravity is in meters per second squared.

For multirotor UAVs, the only element of the bus is **Gravity** in meters per second squared.

Data Types: bus

Output

State — Simulated UAV state

bus

Simulated UAV state, returned as a bus. The block uses the **Control** and **Environment** inputs with the guidance model equations to simulate the UAV state.

For multirotor UAVs, the state is a five-element bus:

- **WorldPosition** - [x y z] in meters.
- **WorldVelocity** - [vx vy vz] in meters per second.
- **EulerZYX** - [psi phi theta] Euler angles in radians.
- **BodyAngularRateRPY** - [r p q] in radians per second along the xyz-axes of the UAV.
- **Thrust** - F in Newtons.

For fixed-wing UAVs, the state is an eight-element bus:

- **North** - Position in north direction in meters.
- **East** - Position in east direction in meters.
- **Height** - Height above ground in meters.
- **AirSpeed** - Speed relative to wind in meters per second.
- **HeadingAngle** - Angle between ground velocity and north direction in radians per second.
- **FlightPathAngle** - Angle between ground velocity and north-east plane in meters per second.
- **RollAngle** - Angle of rotation along body x-axis in radians per second.
- **RollAngleRate** - Angular velocity of rotation along body x-axis in radians per second.

Data Types: bus

Parameters

ModelType — UAV guidance model type

MulticopterGuidance (default) | FixedWingGuidance

UAV guidance model type, specified as `MulticopterGuidance` or `FixedWingGuidance`. The model type determines the elements of the UAV State and the required Control and Environment inputs.

Tunable: No

Data Type — Input and output numeric data types

double (default) | single

Input and output numeric data types, specified as either `double` or `single`. Choose the data type based on possible software or hardware limitations.

Tunable: No

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to Interpreted execution.
- **Interpreted execution** — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than Code generation. In this mode, you can debug the source code of the block.

Tunable: No

Initial State — Initial UAV state tab

multiple table entries

Initial UAV state tab, specified as multiple table entries. All entries on this tab are nontunable.

For multicopter UAVs, the initial state is:

- **World Position** - [x y z] in meters.
- **World Velocity** - [vx vy vz] in meters per second.
- **Euler Angles (ZYX)** - [psi phi theta] in radians.
- **Body Angular Rates** - [r p q] in radians per second.
- **Thrust** - F in Newtons.

For fixed-wing UAVs, the initial state is:

- **North** - Position in north direction in meters.
- **East** - Position in east direction in meters.
- **Height** - Height above ground in meters.
- **Air Speed** - Speed relative to wind in meters per second.

- **Heading Angle** - Angle between ground velocity and north direction in radians per second.
- **Flight Path Angle** - Angle between ground velocity and north-east plane in meters per second.
- **Roll Angle** - Angle of rotation along body x-axis in radians per second.
- **Roll Angle Rate** - Angular velocity of rotation along body x-axis in radians per second.

Tunable: No

Configuration — UAV controller configuration tab

multiple table entries

UAV controller configuration tab, specified as multiple table entries. This tab allows you to configure the parameters of the internal control behaviour of the UAV. Specify the proportional (P) and derivative (D) gains for the dynamic model and the UAV mass in kilograms (for multirotor).

For multirotor UAVs, the parameters are:

- **PD Roll**
- **PD Pitch**
- **P YawRate**
- **P Thrust**
- **Mass(kg)**

For fixed-wing UAVs, the parameters are:

- **P Height**
- **P Flight Path Angle**
- **PD Roll**
- **P Air Speed**
- **Min/Max Flight Path Angle** ([min max] angle in radians)

Tunable: No

Input/Output Bus Names — Simulink bus signal names tab

multiple entries of character vectors

Simulink bus signal names tab, specified as multiple entries of character vectors. These buses have a default name based on the UAV model and input type. To use multiple guidance models in the same Simulink model, specify different bus names that do not intersect. All entries on this tab are nontunable.

More About

UAV Coordinate Systems

The UAV Library for Robotics System Toolbox uses the North-East-Down (NED) coordinate system convention, which is also sometimes called the local tangent plane (LTP). The UAV position vector consists of three numbers for position along the northern-axis, eastern-axis, and vertical position. The down element complies with the right-hand rule and results in negative values for altitude gain.

The ground plane, or earth frame (NE plane, $D = 0$), is assumed to be an inertial plane that is flat based on the operation region for small UAV control. The earth frame coordinates are $[x_e, y_e, z_e]$. The body frame of the UAV is attached to the center of mass with coordinates $[x_b, y_b, z_b]$. x_b is the preferred forward direction of the UAV, and z_b is perpendicular to the plane that points downwards when the UAV travels during perfect horizontal flight.

The orientation of the UAV (body frame) is specified in ZYX Euler angles. To convert from the earth frame to the body frame, we first rotate about the z_e -axis by the yaw angle, ψ . Then, rotate about the intermediate y -axis by the pitch angle, ϕ . Then, rotate about the intermediate x -axis by the roll angle, θ .

The angular velocity of the UAV is represented by $[r, p, q]$ with respect to the body axes, $[x_b, y_b, z_b]$.

UAV Fixed-Wing Guidance Model Equations

For fixed-wing UAVs, the following equations are used to define the guidance model of the UAV. Use the `derivative` function to calculate the time-derivative of the UAV state using these governing equations. Specify the inputs using the `state`, `control`, and `environment` functions.

The UAV position in the earth frame is $[x_e, y_e, h]$ with orientation as heading angle, flight path angle, and roll angle, $[\chi, \gamma, \phi]$ in radians.

The model assumes that the UAV is flying under a coordinated-turn condition, with zero side-slip. The autopilot controls airspeed, altitude, and heading angle. The corresponding equations of motion are:

$$\begin{aligned}\dot{x}_e &= V_g \cos \chi \cos \gamma \\ \dot{y}_e &= V_g \sin \chi \cos \gamma \\ \dot{h} &= V_g \sin \gamma \\ \dot{\chi} &= \frac{g \cos(\chi - \psi)}{V_g} \tan \phi \\ V_g \sin(\gamma^c) &= \min(\max(k_h(h^c - h), -V_g), V_g) \\ \dot{\gamma} &= k_\gamma(\gamma^c - \gamma) \\ \dot{V}_a &= k_{V_a}(V_a^c - V_a) \\ \frac{g \cos(\chi - \psi)}{V_g} \tan(\phi^c) &= k_\chi(\chi^c - \chi) \\ \ddot{\phi} &= k_{P\phi}(\phi^c - \phi) + k_{D\phi}(-\dot{\phi})\end{aligned}$$

V_a and V_g denote the UAV air and ground speeds.

The wind speed is specified as $[V_{w_n}, V_{w_e}, V_{w_d}]$ for the north, east, and down directions. To generate the structure for these inputs, use the `environment` function.

k_* are controller gains. To specify these gains, use the `Configuration` property of the `fixedwing` object.

From these governing equations, the model gives the following variables:

$$[x_e \ y_e \ h \ V_a \ \chi \ \gamma \ \phi \ \dot{\phi}]$$

These variables match the output of the `state` function.

UAV Multirotor Guidance Model Equations

For multirotors, the following equations are used to define the guidance model of the UAV. To calculate the time-derivative of the UAV state using these governing equations, use the derivative function. Specify the inputs using `state`, `control`, and `environment`.

The UAV position in the earth frame is $[x_e, y_e, z_e]$ with orientation as ZYX Euler angles, $[\psi, \theta, \phi]$ in radians. Angular velocities are $[p, q, r]$ in radians per second.

The UAV body frame uses coordinates as $[x_b, y_b, z_b]$.

When converting coordinates from the world (earth) frame to the body frame of the UAV, the rotation matrix is:

$$R_b^e = \begin{bmatrix} c_\theta c_\psi & c_\psi s_\phi s_\theta - c_\phi s_\psi & c_\phi c_\psi s_\theta + s_\phi s_\psi \\ c_\theta s_\psi & c_\phi c_\psi + s_\phi s_\theta s_\psi & -c_\psi s_\phi + c_\phi s_\theta s_\psi \\ -s_\theta & c_\theta s_\phi & c_\phi c_\theta \end{bmatrix}$$

The $\cos(x)$ and $\sin(x)$ are abbreviated as c_x and s_x .

The acceleration of the UAV center of mass in earth coordinates is governed by:

$$m \begin{bmatrix} \ddot{x}_e \\ \ddot{y}_e \\ \ddot{z}_e \end{bmatrix} = \begin{bmatrix} 0 \\ 0 \\ mg \end{bmatrix} + R_b^e \begin{bmatrix} 0 \\ 0 \\ -F_{thrust} \end{bmatrix}$$

m is the UAV mass, g is gravity, and F_{thrust} is the total force created by the propellers applied to the multirotor along the $-z_b$ axis (points upwards in a horizontal pose).

The closed-loop roll-pitch attitude controller is approximated by the behavior of 2 independent PD controllers for the two rotation angles, and 2 independent P controllers for the yaw rate and thrust. The angular velocity, angular acceleration, and thrust are governed by:

$$J = \begin{bmatrix} 1 & \sin \phi \tan \theta & \cos \phi \tan \theta \\ 0 & \cos \phi & -\sin \phi \\ 0 & \frac{\sin \phi}{\cos \theta} & \frac{\cos \phi}{\cos \theta} \end{bmatrix}$$

$$\begin{bmatrix} \dot{\phi} \\ \dot{\theta} \\ \dot{\psi} \end{bmatrix} = J \begin{bmatrix} p \\ q \\ r \end{bmatrix}$$

$$\begin{bmatrix} \dot{p} \\ \dot{q} \\ \dot{r} \end{bmatrix} = \begin{bmatrix} 1 & 0 & -\sin \theta \\ 0 & \cos \phi & \sin \phi \cos \theta \\ 0 & -\sin \phi & \cos \phi \cos \theta \end{bmatrix} \begin{bmatrix} KP_{\phi}(\phi^c - \phi) + KD_{\phi}(-\dot{\phi}) \\ KP_{\theta}(\theta^c - \theta) + KD_{\theta}(-\dot{\theta}) \\ KP_{\psi}(\psi^c - \psi) \end{bmatrix}$$

$$\dot{F}_{thrust} = KP_F(F_{thrust}^c - F_{thrust})$$

This model assumes the autopilot takes in commanded roll, pitch, yaw angles, $[\psi^c, \theta^c, \phi^c]$ and a commanded total thrust force, F_{thrust}^c . The structure to specify these inputs is generated from control.

The P and D gains for the control inputs are specified as KP_{α} and KD_{α} , where α is either the rotation angle or thrust. These gains along with the UAV mass, m , are specified in the Configuration property of the multicopter object.

From these governing equations, the model gives the following variables:

$$[x_e \ y_e \ z_e \ \dot{x}_e \ \dot{y}_e \ \dot{z}_e \ \psi \ \theta \ \phi \ r \ p \ q \ F_{thrust}]$$

These variables match the output of the state function.

References

- [1] Randal W. Beard and Timothy W. McLain. "Chapter 9." *Small Unmanned Aircraft Theory and Practice*, NJ: Princeton University Press, 2012.

[2] Mellinger, Daniel, and Nathan Michael. "Trajectory Generation and Control for Precise Aggressive Maneuvers with Quadrotors." *The International Journal of Robotics Research*. 2012, pp. 664-74.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Functions

`control` | `derivative` | `environment` | `ode45` | `plotTransforms` | `roboticsAddons` | `state`

Objects

`fixedwing` | `multirotor` | `uavWaypointFollower`

Blocks

Waypoint Follower

Topics

"Approximate High-Fidelity UAV model with UAV Guidance Model block"


"Tuning Waypoint Follower for Fixed-Wing UAV"

Introduced in R2018b

Unicycle Kinematic Model

Compute vehicle motion using unicycle kinematic model

Library: Robotics System Toolbox / Mobile Robot Algorithms

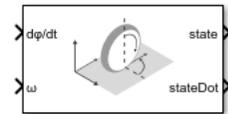

Description

The Unicycle Kinematic Model block creates a unicycle vehicle model to simulate simplified car-like vehicle dynamics. This model approximates a vehicle as a unicycle with a given wheel radius, `WheelRadius`, that can spin in place according to a steering angular velocity, ω .

Ports

Input

$d\phi/dt$ — Angular velocity of wheel

numeric scalar

Angular velocity of the wheel in radians per second.

Dependencies

To enable this port, set the `VehicleInputs` parameter to `Wheel Speed & Heading Angular Velocity`.

v — Vehicle speed

numeric scalar

Vehicle speed, specified in meters per second.

Dependencies

To enable this port, set the `VehicleInputs` parameter to `Vehicle Speed & Heading Angular Velocity`.

ω — Steering angular velocity

numeric scalar

Angular velocity of the vehicle, specified in radians per second. A positive value steers the vehicle left and negative values steer the vehicle right.

Output

state — Pose of vehicle

three-element vector

Current xy -position and orientation of the vehicle, specified as a $[x \ y \ \theta]$ vector in meters and radians.

stateDot — Derivatives of state output

three-element vector

The linear and angular velocities of the vehicle, specified as a $[xDot \ yDot \ \thetaDot]$ vector in meters per second and radians per second. The linear and angular velocities are calculated by taking the derivative of the `state` output.

Parameters

Vehicle inputs — Type of speed and directional inputs for vehicle

Vehicle Speed & Heading Angular Velocity (default) | Wheel Speed & Heading Angular Velocity

Type of speed and directional inputs to control the vehicle. Options are:

- **Vehicle Speed & Heading Angular Velocity** — Vehicle speed in meters per second with a heading angular velocity in radians per second..
- **Wheel Speed & Heading Angular Velocity** — Wheel speed in radians per second with a heading angular velocity in radians per second.

Wheel radius — Wheel radius of vehicle

0.1 (default) | positive numeric scalar

The wheel radius of the vehicle, specified in meters.

Wheel speed range — Minimum and Maximum vehicle speeds

[-Inf Inf] (default) | two-element vector

The minimum and maximum wheel speeds, specified in radians per second.

Initial state — Distance between front and rear axles

[0;0;0] (default) | three-element vector

The initial x -, y -position and orientation, θ , of the vehicle.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. For more information, see “Simulation Modes” (Simulink).
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change.

Tunable: No**References**

- [1] Lynch, Kevin M., and Frank C. Park. *Modern Robotics: Mechanics, Planning, and Control* 1st ed. Cambridge, MA: Cambridge University Press, 2017.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Ackermann Kinematic Model | Bicycle Kinematic Model | Differential Drive Kinematic Model

Classes


unicycleKinematics

Introduced in R2019b

Velocity Product Torque

Joint torques that cancel velocity-induced forces

Library: Robotics System Toolbox / Manipulator Algorithms

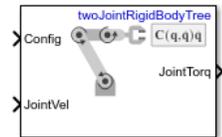

Description

The Velocity Product Torque block returns the torques that cancel the velocity-induced forces for the given robot configuration (joint positions) and joint velocities for the **Rigid body tree** robot model.

Ports

Input

Config — Robot configuration

vector

Robot configuration, specified as a vector of positions for all nonfixed joints in the robot model, as set by the **Rigid body tree** parameter. You can also generate this vector for a complex robot using the `homeConfiguration` or `randomConfiguration` functions inside a Constant or MATLAB Function block.

JointVel — Joint velocities

vector

Joint velocities, specified as a vector. The number of joint velocities is equal to the degrees of freedom (number of nonfixed joints) of the robot.

Output

JointTorq — Joint torques

vector

Joint torques, specified as a vector. Each element corresponds to a torque applied to a specific joint. The number of joint torques is equal to the degrees of freedom (number of nonfixed joints) of the robot.

Parameters

Rigid body tree — Robot model

twoJointRigidBodyTree (default) | RigidBodyTree object

Robot model, specified as a RigidBodyTree object. You can also import a robot model from an URDF (Unified Robot Description Formation) file using `importrobot`.

The default robot model, `twoJointRigidBodyTree`, is a robot with revolute joints and two degrees of freedom.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than **Code generation**. In this mode, you can debug the source code of the block.
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time, but the speed of the subsequent simulations is comparable to **Interpreted execution**.

Tunable: No

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Forward Dynamics | Get Jacobian | Gravity Torque | Inverse Dynamics | Joint Space Mass Matrix

Classes

RigidBodyTree

Functions


homeConfiguration | importrobot | randomConfiguration | velocityProduct

Introduced in R2018a

Waypoint Follower

Follow waypoints for UAV

Library: Robotics System Toolbox UAV Library

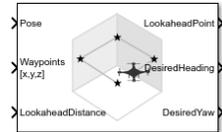

Description

The Waypoint Follower block follows a set of waypoints for an unmanned aerial vehicle (UAV) using a lookahead point. The block calculates the lookahead point, desired heading, and desired yaw given a UAV position, a set of waypoints, and a lookahead distance. Specify a set of waypoints and tune the lookahead distance and transition radius parameters for navigating the waypoints. The block supports both multirotor and fixed-wing UAV types.

Ports

Input

Pose — Current UAV pose

[x y z chi] vector

Current UAV pose, specified as a [x y z chi] vector. This pose is used to calculate the lookahead point based on the input to the **LookaheadDistance** port. [x y z] is the current position in meters. chi is the current heading in radians.

Example: [0.5;1.75;-2.5;pi]

Data Types: single | double

Waypoints — Set of waypoints

n -by-3 matrix | n -by-4 matrix | n -by-5 matrix

Set of waypoints for the UAV to follow, specified as a matrix with number of rows, n , equal to the number of waypoints. The number of columns depend on the **Show Yaw input variable** and the **Transition radius source** parameter.

Each row in the matrix has the first three elements as an $[x \ y \ z]$ position in the sequence of waypoints.

If **Show Yaw input variable** is checked, specify the desired yaw angle, yaw , as the fourth element in radians.

If **Show Yaw input variable** is unchecked, and **Transition radius source** is external, the transition radius is the fourth element of the vector in meters.

If **Show Yaw input variable** is checked, and **Transition radius source** is external, the transition radius is the fifth element of the vector in meters.

The block display updates as the size of the waypoint matrix changes.

Data Types: `single` | `double`

LookaheadDistance — Lookahead distance

positive numeric scalar

Lookahead distance along the path, specified as a positive numeric scalar in meters.

Data Types: `single` | `double`

Output

LookaheadPoint — Lookahead point on path

$[x \ y \ z]$ position vector

Lookahead point on path, returned as an $[x \ y \ z]$ position vector in meters.

Data Types: `single` | `double`

DesiredHeading — Desired heading

numeric scalar

Desired heading, returned as numeric scalar in radians in the range of $[-\pi, \pi]$. The UAV heading is the angle of direction of the velocity vector relative to north measured in radians.

Data Types: `single` | `double`

DesiredYaw — Desired yaw

numeric scalar

Desired yaw, returned as numeric scalar in radians in the range of $[-\pi, \pi]$. The UAV yaw is the forward direction of the UAV regardless of the velocity vector relative to north measured in radians.

Data Types: `single` | `double`

CrossTrackError — Cross track error from UAV position to path

positive numeric scalar

Cross track error from UAV position to path, returned as a positive numeric scalar in meters. The error measures the perpendicular distance from the UAV position to the closest point on the path.

Dependencies

This port is only visible if **Show CrossTrackError output port** is checked.

Data Types: `single` | `double`

Status — Status of waypoint navigation

0 | 1

Status of waypoint navigation, returned as 0 or 1. When the follower has navigated all waypoints, the block outputs 1. Otherwise, the block outputs 0.

Dependencies

This port is only visible if **Show UAV Status output port** is checked.

Parameters

UAV type — Type of UAV

`fixed-wing` (default) | `multirotor`

Type of UAV, specified as either `fixed-wing` or `multirotor`.

This parameter is non-tunable.

StartFrom — Waypoint start behavior

`first` (default) | `closest`

Waypoint start behavior, specified as either `first` or `closest`.

When set to `first`, the UAV flies to the first path segment between waypoints. If the set of waypoints input in **Waypoints** changes, the UAV restarts at the first path segment.

When set to `closest`, the UAV flies to the closest path segment between waypoints. When the waypoints input changes, the UAV recalculates the closest path segment.

This parameter is non-tunable.

Transition radius source – Source of transition radius

`internal` (default) | `external`

Source of transition radius, specified as either `internal` or `external`. If specified as `internal`, the transition radius for each waypoint is set using the **Transition radius (r)** parameter in the block mask. If specified as `external`, specify each waypoints transition radius independently using the input from the **Waypoints** port.

When the UAV is within the transition radius, the block transitions to following the next path segment between waypoints.

This parameter is non-tunable.

Transition radius (r) – Transition radius for waypoints

`10` (default) | positive numeric scalar

Transition radius for waypoints, specified as a positive numeric scalar in meters.

When the UAV is within the transition radius, the block transitions to following the next path segment between waypoints.

This parameter is non-tunable.

Show Yaw input variable – Accept yaw input for waypoints

`off` (default) | `on`

Accept yaw inputs for waypoints when selected. If selected, the **Waypoints** input accepts yaw inputs for each waypoint.

Show CrossTrackError output port – Output cross track error

`off` (default) | `on`

Output cross track error from the **CrossTrackError** port.

This parameter is non-tunable.

Show UAV Status output port — Output UAV waypoint status

off (default) | on

Output UAV waypoint status from the **Status** port.

This parameter is non-tunable.

Simulate using — Type of simulation to run

Interpreted execution (default) | Code generation

- **Interpreted execution** — Simulate model using the MATLAB interpreter. This option shortens startup time but has a slower simulation speed than **Code generation**. In this mode, you can debug the source code of the block.
- **Code generation** — Simulate model using generated C code. The first time you run a simulation, Simulink generates C code for the block. The C code is reused for subsequent simulations, as long as the model does not change. This option requires additional startup time but the speed of the subsequent simulations is comparable to **Interpreted execution**.


This parameter is non-tunable.

Tunable: No

More About

Waypoint Hyperplane Condition

When following a set of waypoints, the first waypoint may be ignored based on the pose of the UAV. Due to the nature of the lookahead distance used to track the path, the waypoint follower checks if the UAV is near the next waypoint to transition to the next path segment using a transition region. However, there is also a condition where the UAV transitions when outside of this region. A 3-D hyperplane is drawn at the next waypoint. If the UAV pose is inside this hyperplane, the waypoint follower transitions to the next waypoint. This behavior helps to ensure the UAV follows an achievable path.

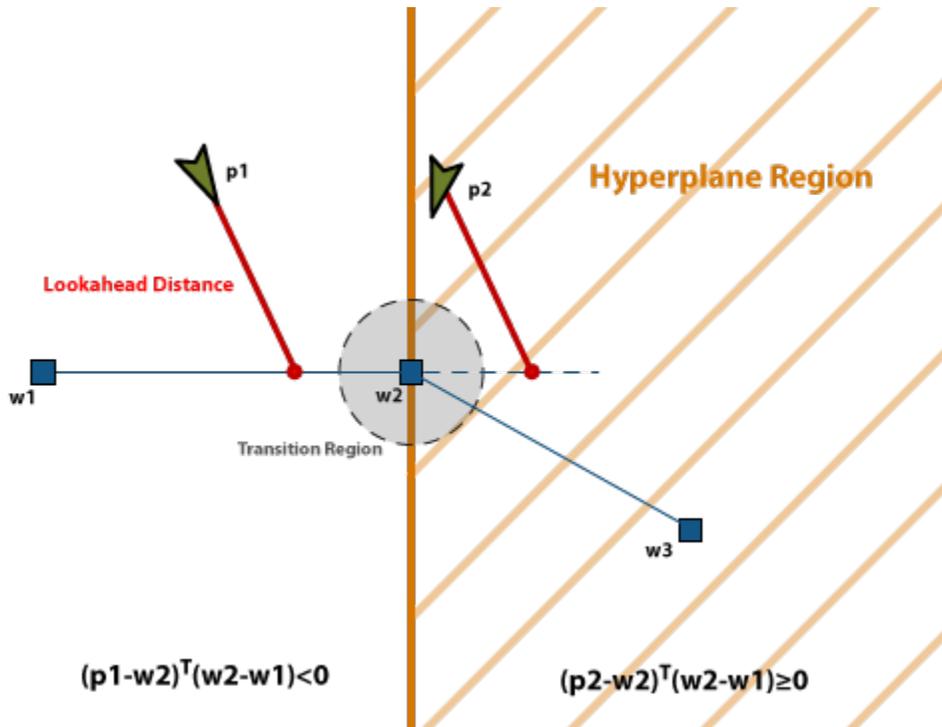

The hyperplane condition is satisfied if:

$$(p - w_1)^T (w_2 - w_1) \geq 0$$

p is the UAV position, and w_1 and w_2 are sequential waypoint positions.

If you find this behavior limiting, consider adding more waypoints based on your initial pose to force the follower to navigate towards your initial waypoint.

References

- [1] Park, Sanghyuk, John Deyst, and Jonathan How. "A New Nonlinear Guidance Logic for Trajectory Tracking." *AIAA Guidance, Navigation, and Control Conference and Exhibit*, 2004.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Orbit Follower | UAV Guidance Model

Functions

control | derivative | environment | ode45 | plotTransforms | roboticsAddons
| state

Objects

robotics.FixedWingGuidanceModel | robotics.MulticopterGuidanceModel |
uavWaypointFollower

Topics

“Approximate High-Fidelity UAV model with UAV Guidance Model block”

“Tuning Waypoint Follower for Fixed-Wing UAV”

Introduced in R2018b