

ROS Toolbox
Reference



MATLAB® & SIMULINK®

R2021b



How to Contact MathWorks



Latest news: www.mathworks.com
Sales and services: www.mathworks.com/sales_and_services
User community: www.mathworks.com/matlabcentral
Technical support: www.mathworks.com/support/contact_us



Phone: 508-647-7000



The MathWorks, Inc.
1 Apple Hill Drive
Natick, MA 01760-2098

ROS Toolbox Reference

© COPYRIGHT 2019–2021 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

Trademarks

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See www.mathworks.com/trademarks for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

Patents

MathWorks products are protected by one or more U.S. patents. Please see www.mathworks.com/patents for more information.

Revision History

September 2019	Online only	New for Version 1.0 (R2019b)
March 2020	Online only	Revised for Version 1.1 (R2020a)
September 2020	Online only	Revised for Version 1.2 (R2020b)
March 2021	Online only	Revised for Version 1.3 (R2021a)
September 2021	Online only	Revised for Version 1.4 (R2021b)

1	<hr/>	Functions
2	<hr/>	Classes
3	<hr/>	Methods
4	<hr/>	Blocks

Functions

apply

Transform message entities into target frame

Syntax

```
tfentity = apply(tfmsg,entity)
```

Description

`tfentity = apply(tfmsg,entity)` applies the transformation represented by the 'TransformStamped' ROS message to the input message object `entity`.

This function determines the message type of `entity` and applies the appropriate transformation method to it. If the object cannot handle a particular message type, then MATLAB® displays an error message.

If you want to use only the most current transformation, call `transform` instead. If you want to store a transformation message for later use, call `getTransform`, and then call `apply`.

Note `apply` will be removed. Use `rosApplyTransform` instead. For more information, see “ROS Message Structure Functions” on page 1-3

Examples

Apply A Transformation To A Point

Connect to a ROS network to get a TransformStamped ROS message. Specify the IP address to connect. Create a transformation tree and get the transformation between desired frames.

```
rosinit('192.168.17.129')  
  
Initializing global node /matlab_global_node_73610 with NodeURI http://192.168.17.1:55060/  
  
tftree = rostf;  
pause(1);  
tform = getTransform(tftree,'base_link','camera_link',...  
                    rostime('now'),'Timeout',5);
```

Create a ROS Point message and apply the transformation. You could also get point messages off the ROS network.

```
pt = rosmesssage('geometry_msgs/PointStamped');  
pt.Header.FrameId = 'camera_link';  
pt.Point.X = 3;  
pt.Point.Y = 1.5;  
pt.Point.Z = 0.2;
```

```
tfpt = apply(tform,pt);
```

Shut down ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_73610 with NodeURI http://192.168.17.1:55060/
```

Input Arguments

tfmsg – Transformation message

TransformStamped ROS message handle

Transformation message, specified as a TransformStamped ROS message handle. The `tfmsg` is a ROS message of type: `geometry_msgs/TransformStamped`.

entity – ROS message

Message object handle

ROS message, specified as a Message object handle.

Supported messages are:

- `geometry_msgs/PointStamped`
- `geometry_msgs/PoseStamped`
- `geometry_msgs/PointCloud2`
- `geometry_msgs/QuaternionStamped`
- `geometry_msgs/Vector3Stamped`

Output Arguments

tfentity – Transformed ROS message

Message object handle

Transformed ROS message, returned as a Message object handle.

Compatibility Considerations

ROS Message Structure Functions

Not recommended starting in R2021a

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	readImage	rosReadImage
CompressedImage	writeImage	rosWriteImage
LaserScan	readCartesian readScanAngles lidarScan plot	rosReadCartesian rosReadScanAngles rosReadLidarScan rosPlot
PointCloud2	apply readXYZ readRGB readAllFieldNames readField scatter3	rosApplyTransform rosReadXYZ rosReadRGB rosReadAllFieldNames rosReadField rosPlot
Quaternion	readQuaternion	rosReadQuaternion
OccupancyGrid	readBinaryOccupancyGrid readOccupancyGrid writeBinaryOccupancyGrid writeOccupancyGrid	rosReadOccupancyGrid rosReadBinaryOccupancyGrid rosReadOccupancyGrid rosWriteBinaryOccupancyGrid rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D
PointStamped PoseStamped QuaternionStamped Vector3Stamped TransformStamped	apply	rosApplyTransform
All messages	showdetails	rosShowDetails

See Also

rosApplyTransform

Introduced in R2019b

call

Call ROS or ROS 2 service server and receive a response

Syntax

```
response = call(serviceclient)
response = call(serviceclient,requestmsg)
[response,status,statustext] = call( ___ )
response = call( ___ ,Name,Value)
```

Description

`response = call(serviceclient)` sends a default service request message and waits for a service response. The default service request message is an empty message of type `serviceclient.ServiceType`.

`response = call(serviceclient,requestmsg)` specifies a service request message, `requestmsg`, to be sent to the service.

`[response,status,statustext] = call(___)` returns a `status` indicating whether a response has been received successfully, and a `statustext` that captures additional information about the `status`, using any of the arguments from the previous syntaxes. If the call fails, the `status` will be `false` with an empty default response message, and this function will not display an error.

`response = call(___ ,Name,Value)` provides additional options specified by one or more `Name, Value` pair arguments, using any of the arguments from the previous syntaxes.

Examples

Call Service Client with Default Message

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
```

```
..Done in 2.6477 seconds.
```

```
Initializing ROS master on http://172.30.135.140:53192.
```

```
Initializing global node /matlab_global_node_86810 with NodeURI http://bat6340win64:55093/
```

Set up a service server. Use structures for the ROS message data format.

```
server = rossvcserver('/test', 'std_srvs/Empty', @exampleHelperROSEmptyCallback,...
                    'DataFormat','struct');
client = rossvcclient('/test','DataFormat','struct');
```

Check whether the service server is available. If it is, wait for the service client to connect to the server.

```
if(isServerAvailable(client))
    [connectionStatus,connectionStatustext] = waitForServer(client)
end

connectionStatus = logical
    1
```

```
connectionStatustext =
'success'
```

Call service server with default message.

```
response = call(client)

response = struct with fields:
    MessageType: 'std_srvs/EmptyResponse'
```

If the `call` function above fails, it results in an error. Instead of an error, if you would prefer to react to a call failure using conditionals, return the `status` and `statustext` outputs from the `call` function. The `status` output indicates if the call succeeded, while `statustext` provides additional information.

```
numCallFailures = 0;
[response,status,statustext] = call(client,"Timeout",3);
if ~status
    numCallFailures = numCallFailures + 1;
    fprintf("Call failure number %d. Error cause: %s\n",numCallFailures,statustext)
else
    disp(response)
end

    MessageType: 'std_srvs/EmptyResponse'
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_86810 with NodeURI http://bat6340win64:55093/
Shutting down ROS master on http://172.30.135.140:53192.
```

Call for Response Using Specific Request Message

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
...Done in 3.1235 seconds.
Initializing ROS master on http://172.30.135.140:55307.
Initializing global node /matlab_global_node_68747 with NodeURI http://bat6340win64:65047/
```

Set up a service server and client. This server calculates the sum of two integers and is based on a ROS service tutorial.

```
sumserver = rossvcserver('/sum', 'roscpp_tutorials/TwoInts', @exampleHelperROSSumCallback);
sumclient = rossvcclient('/sum');
```

Get the request message for the client and modify the parameters.

```
reqMsg = rosmesssage(sumclient);
reqMsg.A = 2;
reqMsg.B = 1;
```

Call service and get a response. The response should be the sum of the two integers given in the request message. Wait 5 seconds for the service to time out.

```
response = call(sumclient, reqMsg, 'Timeout', 5)
```

```
response =
  ROS TwoIntsResponse message with properties:
    MessageType: 'roscpp_tutorials/TwoIntsResponse'
    Sum: 3
```

Use `showdetails` to show the contents of the message

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_68747 with NodeURI http://bat6340win64:65047/
Shutting down ROS master on http://172.30.135.140:55307.
```

Call ROS 2 Service Client With a Custom Callback Function

Create a sample ROS 2 network with two nodes.

```
node_1 = ros2node("node_1");
node_2 = ros2node("node_2");
```

Set up a service server and attach it to a ROS 2 node. Specify the callback function `flipstring`, which flips the input string. The callback function is defined at the end of this example.

```
server = ros2svcsrv(server, '/test', 'test_msgs/BasicTypes', @flipString);
```

Set up a service client of the same service type and attach it to a different node.

```
client = ros2svcc(client, '/test', 'test_msgs/BasicTypes');
```

Wait for the service client to connect to the server.

```
[connectionStatus, connectionStatustext] = waitForServer(client)
```

```
connectionStatus = logical
    1
```

```
connectionStatustext =
'success'
```

Create a request message based on the client. Assign the string to the corresponding field in the message, `string_value`.

```
request = ros2message(client);
request.string_value = 'hello world';
```

Check whether the service server is available. If it is, send a service request and wait for a response. Specify that the service waits 3 seconds for a response.

```
if(isServerAvailable(client))
    response = call(client,request,'Timeout',3);
end
```

The response is a flipped string from the request message which you see in the `string_value` field.

```
response.string_value
```

```
ans =
'dlrow olleh'
```

If the `call` function above fails, it results in an error. Instead of an error, if you would prefer to react to a call failure using conditionals, return the `status` and `statustext` outputs from the `call` function. The `status` output indicates if the call succeeded, while `statustext` provides additional information.

```
numCallFailures = 0;
[response,status,statustext] = call(client,request,"Timeout",3);
if ~status
    numCallFailures = numCallFailures + 1;
    fprintf("Call failure number %d. Error cause: %s\n",numCallFailures,statustext)
else
    disp(response.string_value)
end
```

```
dlrow olleh
```

The callback function used to flip the string is defined below.

```
function resp = flipString(req,resp)
% FLIPSTRING Reverses the order of a string in REQ and returns it in RESP.
resp.string_value = fliplr(req.string_value);
end
```

Input Arguments

serviceclient — Service client

`ros.ServiceClient` object handle | `ros2serviceclient` object handle

ROS or ROS 2 service client, specified as a `ros.ServiceClient` or `ros2serviceclient` object handle, respectively.

requestmsg — Request message

Message object handle | structure

Request message, specified as a Message object handle or structure. The default message type is `serviceclient.ServiceType`.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 1-10.

Name-Value Pair Arguments

Specify optional comma-separated pairs of **Name**, **Value** arguments. **Name** is the argument name and **Value** is the corresponding value. **Name** must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Example: "Timeout", 5

Timeout — Timeout for service response in seconds

inf (default) | scalar

Timeout for service response in seconds, specified as a comma-separated pair consisting of "Timeout" and a scalar. If the service client does not receive a service response and the timeout period elapses, `call` displays an error message and lets MATLAB continue running the current program. The default value of `inf` prevents MATLAB from running the current program until the service client receives a service response.

DataFormat — Message format for ROS service clients

"object" (default) | "struct"

Message format for ROS service clients, specified as "object" or "struct". Set this property on creation of the service client using the name-value input. For more information, see "ROS Message Structures" on page 1-10. This argument applies to ROS service clients only.

Output Arguments

response — Response message

Message object handle | structure

Response message sent by the service server, returned as a `Message` object handle or structure.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 1-10.

status — Status of the service call

logical scalar

Status of the service call, returned as a `logical` scalar. If the call fails, status will be `false`.

Note Use the `status` output argument when you use `call` in the entry-point function for code generation. This will avoid runtime errors outputs the status instead, which can be reacted to in the calling code.

statustext — Status text associated with the service call status

character vector

Status text associated with the service call status, returned as one of the following:

- 'success' — The service response was successfully received.
- 'input' — The input to the function is invalid.
- 'timeout' — The service response was not received within the specified timeout.
- 'unknown' — The service response was not received due to unknown errors.

Tips

- ROS 2 service servers cannot communicate errors in callback execution directly to clients. In such situations, the servers only return the default response without any indication of failure. Hence, it is recommended to use try-catch blocks within the callback function, and set specific fields in the response message to communicate the success/failure of the callback execution on the server side.

Compatibility Considerations**ROS Message Structures***Behavior change in future release*

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")  
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")  
...  
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see "Improve Performance of ROS Using Message Structures".

Extended Capabilities**C/C++ Code Generation**

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- ROS 2 service clients are not supported.
- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

[rossvcclient](#) | [ros2svcclient](#) | [rosmessage](#) | [ros2message](#)

Topics

["Call and Provide ROS Services"](#)

["Call and Provide ROS 2 Services"](#)

Introduced in R2019b

cancelAllGoals

Cancel all goals on action server

Syntax

```
cancelAllGoals(client)
```

Description

`cancelAllGoals(client)` sends a request from the specified client to the ROS action server to cancel all currently pending or active goals, including goals from other clients.

Examples

Send and Cancel ROS Action Goals

This example shows how to send and cancel goals for ROS actions. Action types must be setup beforehand with an action server running.

You must have set up the `/fibonacci` action type. To run this action server, use the following command on the ROS system:

```
roslaunch actionlib_tutorials fibonacci_server
```

First, set up a ROS action client. Then, send a goal message with modified parameters. Finally, cancel your goal and all goals on the action server.

Connect to a ROS network with a specified IP address. Create a ROS action client connected to the ROS network using `roslaunch`. Specify the action name. Wait for the client to be connected to the server.

```
rosinit('192.168.203.133',11311)
```

```
Initializing global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

```
[actClient,goalMsg] = roslaunch('/fibonacci','DataFormat','struct');
waitForServer(actClient);
```

Send a goal message with modified parameters. Wait for the goal to finish executing.

```
goalMsg.Order = int32(4);
[resultMsg,resultState] = sendGoalAndWait(actClient,goalMsg)
```

```
resultMsg = struct with fields:
  MessageType: 'actionlib_tutorials/FibonacciResult'
  Sequence: [0 1 1 2 3]
```

```
resultState =
'succeeded'
```

```
roslaunchDetails(resultMsg)
```



```
ans =
,
  MessageType : actionlib_tutorials/FibonacciResult
  Sequence    : [0, 1, 1, 2, 3]'
```

Send a new goal message without waiting.

```
goalMsg.Order = int32(5);
sendGoal(actClient,goalMsg)
```

Cancel the goal on the ROS action client, `actClient`.

```
cancelGoal(actClient)
```

Cancel all the goals on the action server that `actClient` is connected to.

```
cancelAllGoals(actClient)
```

Delete the action client.

```
delete(actClient)
```

Disconnect from the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

Input Arguments

client — ROS action client

`SimpleActionClient` object handle

ROS action client, specified as a `SimpleActionClient` object handle. This simple action client enables you to track a single goal at a time.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

`cancelGoal` | `rosaction` | `sendGoal` | `sendGoalAndWait`

Topics

“ROS Actions Overview”

“Move a Turtlebot Robot Using ROS Actions”

Introduced in R2019b

cancelGoal

Cancel last goal sent by client

Syntax

```
cancelGoal(client)
```

Description

`cancelGoal(client)` sends a cancel request for the tracked goal, which is the last one sent to the action server. The specified client sends the request.

If the goal is in the 'active' state, the server preempts the execution of the goal. If the goal is 'pending', it is recalled. If this client has not sent a goal, or if the previous goal was achieved, this function returns immediately.

Examples

Send and Cancel ROS Action Goals

This example shows how to send and cancel goals for ROS actions. Action types must be setup beforehand with an action server running.

You must have set up the '/fibonacci' action type. To run this action server, use the following command on the ROS system:

```
roslaunch actionlib_tutorials fibonacci_server
```

First, set up a ROS action client. Then, send a goal message with modified parameters. Finally, cancel your goal and all goals on the action server.

Connect to a ROS network with a specified IP address. Create a ROS action client connected to the ROS network using `rosactionclient`. Specify the action name. Wait for the client to be connected to the server.

```
rosinit('192.168.203.133', 11311)
```

```
Initializing global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

```
[actClient,goalMsg] = rosactionclient('/fibonacci','DataFormat','struct');
waitForServer(actClient);
```

Send a goal message with modified parameters. Wait for the goal to finish executing.

```
goalMsg.Order = int32(4);
[resultMsg,resultState] = sendGoalAndWait(actClient,goalMsg)
```

```
resultMsg = struct with fields:
  MessageType: 'actionlib_tutorials/FibonacciResult'
  Sequence: [0 1 1 2 3]
```

```
resultState =  
'succeeded'  
  
rosShowDetails(resultMsg)  
  
ans =  
,  
    MessageType : actionlib_tutorials/FibonacciResult  
    Sequence    : [0, 1, 1, 2, 3]'
```

Send a new goal message without waiting.

```
goalMsg.Order = int32(5);  
sendGoal(actClient,goalMsg)
```

Cancel the goal on the ROS action client, `actClient`.

```
cancelGoal(actClient)
```

Cancel all the goals on the action server that `actClient` is connected to.

```
cancelAllGoals(actClient)
```

Delete the action client.

```
delete(actClient)
```

Disconnect from the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

Input Arguments

client – ROS action client

`SimpleActionClient` object handle

ROS action client, specified as a `SimpleActionClient` object handle. This simple action client enables you to track a single goal at a time.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

`cancelAllGoals` | `roaction` | `sendGoal` | `sendGoalAndWait`

Topics

“ROS Actions Overview”

“Move a Turtlebot Robot Using ROS Actions”

Introduced in R2019b

canTransform

Verify if transformation is available

Syntax

```
isAvailable = canTransform(tftree, targetframe, sourceframe)
isAvailable = canTransform(tftree, targetframe, sourceframe, sourcetime)

isAvailable = canTransform(bagSel, targetframe, sourceframe)
isAvailable = canTransform(bagSel, targetframe, sourceframe, sourcetime)

isAvailable = canTransform(bagreader, targetframe, sourceframe)
isAvailable = canTransform(bagreader, targetframe, sourceframe, sourcetime)
```

Description

TransformationTree Object

`isAvailable = canTransform(tftree, targetframe, sourceframe)` verifies if a transformation between the source frame and target frame is available at the current time in `tftree`. Create the `tftree` object using `rostdf`, which requires a connection to a ROS network.

`isAvailable = canTransform(tftree, targetframe, sourceframe, sourcetime)` verifies if a transformation is available for the source time. If `sourcetime` is outside the buffer window, the function returns `false`.

BagSelection Object

`isAvailable = canTransform(bagSel, targetframe, sourceframe)` verifies if a transformation is available in a rosbag in `bagSel`. To get the `bagSel` input, load a rosbag using `rosbag`.

`isAvailable = canTransform(bagSel, targetframe, sourceframe, sourcetime)` verifies if a transformation is available in a rosbag for the source time. If `sourcetime` is outside the buffer window, the function returns `false`.

rosbagreader Object

`isAvailable = canTransform(bagreader, targetframe, sourceframe)` verifies if a transformation is available in a rosbag in `bagreader`.

`isAvailable = canTransform(bagreader, targetframe, sourceframe, sourcetime)` verifies if a transformation is available in a rosbag for the source time. If `sourcetime` is outside the buffer window, the function returns `false`.

Examples

Send a Transformation to ROS Network

This example shows how to create a transformation and send it over the ROS network.

Create a ROS transformation tree. Use `rosinit` to connect a ROS network. Replace `ipaddress` with your ROS network address.

```
rosinit;
```

```
Launching ROS Core...
...Done in 4.1192 seconds.
Initializing ROS master on http://192.168.125.1:56090.
Initializing global node /matlab_global_node_16894 with NodeURI http://HYD-KVENNAPU:63122/
```

```
tftree = rostf;
pause(2)
```

Verify the transformation you want to send over the network does not already exist. The `canTransform` function returns false if the transformation is not immediately available.

```
canTransform(tftree, 'new_frame', 'base_link')
```

```
ans = logical
      0
```

Create a `TransformStamped` message. Populate the message fields with the transformation information.

```
tform = rosmessage('geometry_msgs/TransformStamped');
tform.ChildFrameId = 'new_frame';
tform.Header.FrameId = 'base_link';
tform.Transform.Translation.X = 0.5;
tform.Transform.Rotation.X = 0.5;
tform.Transform.Rotation.Y = 0.5;
tform.Transform.Rotation.Z = 0.5;
tform.Transform.Rotation.W = 0.5;
```

Send the transformation over the ROS network.

```
sendTransform(tftree, tform)
```

Verify the transformation is now on the ROS network.

```
canTransform(tftree, 'new_frame', 'base_link')
```

```
ans = logical
      1
```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_16894 with NodeURI http://HYD-KVENNAPU:63122/
Shutting down ROS master on http://192.168.125.1:56090.
```

Get ROS Transformations and Apply to ROS Messages

This example shows how to set up a ROS transformation tree and transform frames based on transformation tree information. It uses time-buffered transformations to access transformations at different times.

Create a ROS transformation tree. Use `rosinit` to connect to a ROS network. Replace `ipaddress` with your ROS network address.

```
ipaddress = '192.168.17.129';
rosinit(ipaddress,11311)
```

```
Initializing global node /matlab_global_node_14346 with NodeURI http://192.168.17.1:56312/
```

```
tftree = rostf;
pause(1)
```

Look at the available frames on the transformation tree.

```
tftree.AvailableFrames
```

```
ans = 36x1 cell
    {'base_footprint'      }
    {'base_link'          }
    {'camera_depth_frame' }
    {'camera_depth_optical_frame'}
    {'camera_link'        }
    {'camera_rgb_frame'   }
    {'camera_rgb_optical_frame' }
    {'caster_back_link'   }
    {'caster_front_link'  }
    {'cliff_sensor_front_link' }
    {'cliff_sensor_left_link' }
    {'cliff_sensor_right_link' }
    {'gyro_link'          }
    {'mount_asus_xtion_pro_link' }
    {'odom'               }
    {'plate_bottom_link'  }
    {'plate_middle_link'  }
    {'plate_top_link'     }
    {'pole_bottom_0_link' }
    {'pole_bottom_1_link' }
    {'pole_bottom_2_link' }
    {'pole_bottom_3_link' }
    {'pole_bottom_4_link' }
    {'pole_bottom_5_link' }
    {'pole_kinect_0_link' }
    {'pole_kinect_1_link' }
    {'pole_middle_0_link' }
    {'pole_middle_1_link' }
    {'pole_middle_2_link' }
    {'pole_middle_3_link' }
    :
```

Check if the desired transformation is now available. For this example, check for the transformation from `'camera_link'` to `'base_link'`.

```
canTransform(tftree, 'base_link', 'camera_link')
```



```
ans = logical
     1
```

Get the transformation for 3 seconds from now. The `getTransform` function will wait until the transformation becomes available with the specified timeout.

```
desiredTime = rostime('now') + 3;
tform = getTransform(tftree, 'base_link', 'camera_link', ...
                    desiredTime, 'Timeout', 5);
```

Create a ROS message to transform. Messages can also be retrieved off the ROS network.

```
pt = rosmesssage('geometry_msgs/PointStamped');
pt.Header.FrameId = 'camera_link';
pt.Point.X = 3;
pt.Point.Y = 1.5;
pt.Point.Z = 0.2;
```

Transform the ROS message to the 'base_link' frame using the desired time previously saved.

```
tfpt = transform(tftree, 'base_link', pt, desiredTime);
```

Optional: You can also use `apply` with the stored `tform` to apply this transformation to the `pt` message.

```
tfpt2 = apply(tform, pt);
```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_14346 with NodeURI http://192.168.17.1:56312/
```

Get Transformations from rosbag File

Get transformations from rosbag (.bag) files by loading the rosbag and checking the available frames. From these frames, use `getTransform` to query the transformation between two coordinate frames.

Load the rosbag.

```
bag = rosbag('ros_turtlesim.bag');
```

Get a list of available frames.

```
frames = bag.AvailableFrames;
```

Get the latest transformation between two coordinate frames.

```
tf = getTransform(bag, 'world', frames{1});
```

Check for a transformation available at a specific time and retrieve the transformation. Use `canTransform` to check if the transformation is available. Specify the time using `rostime`.

```
tfTime = rostime(bag.StartTime + 1);
if (canTransform(bag, 'world', frames{1}, tfTime))
```

```
tf2 = getTransform(bag, 'world', frames{1}, tfTime);  
end
```

Get Transformations from rosbag File Using rosbagreader Object

Get transformations from rosbag (.bag) files by loading the rosbag and checking the available frames. From these frames, use `getTransform` to query the transformation between two coordinate frames.

Load the rosbag.

```
bagMsgs = rosbagreader("ros_turtlesim.bag")
```

```
bagMsgs =  
  rosbagreader with properties:
```

```
      FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex81142742\ros_tur  
      StartTime: 1.5040e+09  
      EndTime: 1.5040e+09  
      NumMessages: 6089  
      AvailableTopics: [6x3 table]  
      AvailableFrames: {2x1 cell}  
      MessageList: [6089x4 table]
```

Get a list of available frames.

```
frames = bagMsgs.AvailableFrames
```

```
frames = 2x1 cell  
    {'turtle1'}  
    {'world' }
```

Get the latest transformation between two coordinate frames.

```
tf = getTransform(bagMsgs, 'world', frames{1})
```

```
tf =  
  ROS TransformStamped message with properties:
```

```
      MessageType: 'geometry_msgs/TransformStamped'  
      Header: [1x1 Header]  
      Transform: [1x1 Transform]  
      ChildFrameId: 'turtle1'
```

Use `showdetails` to show the contents of the message

Check for a transformation available at a specific time and retrieve the transformation. Use `canTransform` to check if the transformation is available. Specify the time using `rostime`.

```
tfTime = rostime(bagMsgs.StartTime + 1);  
if (canTransform(bagMsgs, 'world', frames{1}, tfTime))  
    tf2 = getTransform(bagMsgs, 'world', frames{1}, tfTime);  
end
```

Input Arguments

tftree — ROS transformation tree

TransformationTree object

ROS transformation tree, specified as a TransformationTree object. Create a transformation tree by calling the `rostopic` function.

bagSel — Selection of rosbag messages

BagSelection object

Selection of rosbag messages, specified as a BagSelection object. To create a selection of rosbag messages, use `rostopic`.

bagreader — Index of messages in rosbag

rosbagreader object

Index of the messages in the rosbag, specified as a rosbagreader object.

targetframe — Target coordinate frame

string scalar | character vector

Target coordinate frame, specified as a string scalar or character vector. You can view the frames available for transformation by calling `tftree.AvailableFrames` or `bagSel.AvailableFrames`.

sourceframe — Initial coordinate frame

string scalar | character vector

Initial coordinate frame, specified as a string scalar or character vector. You can view the available frames for transformation by calling `tftree.AvailableFrames` or `bagSel.AvailableFrames`.

sourcetime — ROS or system time

scalar | Time object handle

ROS or system time, specified as a scalar or Time object handle. The scalar input is converted to a Time object using `rostopic`.

Output Arguments

isAvailable — Indicator if transform exists

boolean

Indicator if transform exists, returned as a boolean. The function returns `false` if:

- `sourcetime` is outside the buffer window for a `tftree` object.
- `sourcetime` is outside the time of the `bagSel` or `bagreader` object.
- `sourcetime` is in the future.
- The transformation is not published yet.

See Also

`getTransform` | `transform` | `rostopic` | `rostopic` | `waitForTransform` | `rosbagreader`

Introduced in R2019b

definition

Retrieve definition of ROS message type

Syntax

```
def = definition(msg)
```

Description

`def = definition(msg)` returns the ROS definition of the message type associated with the message object, `msg`. The details of the message definition include the structure, property data types, and comments from the authors of that specific message.

Examples

Access ROS Message Definition for Message

Create a Point Message.

```
point = rosmessage('geometry_msgs/Point');
```

Access the definition.

```
def = definition(point)

def =
  '% This contains the position of a point in free space
  double X
  double Y
  double Z
  '
```

Input Arguments

msg — ROS message

Message object handle

ROS message, specified as a Message object handle. This message can be created using the `rosmessage` function.

Output Arguments

def — Details of message definition

character vector

Details of the information inside the ROS message definition, returned as a character vector.

See Also

rosmesssage | rosmmsg

Introduced in R2019b

del

Delete a ROS parameter

Syntax

```
del(ptree,paramname)
del(ptree,namespace)
```

Description

`del(ptree,paramname)` deletes a parameter with name `paramname` from the parameter tree, `ptree`. The parameter is also deleted from the ROS parameter server. If the specified `paramname` does not exist, the function displays an error.

`del(ptree,namespace)` deletes from the parameter tree all parameter values under the specified namespace.

Examples

Delete Parameter on ROS Master

Connect to the ROS network. Create a parameter tree and a 'MyParam' parameter. Check that the parameter exists.

```
rosinit
```

```
Launching ROS Core...
...Done in 4.3156 seconds.
Initializing ROS master on http://172.30.135.140:52063.
Initializing global node /matlab_global_node_17126 with NodeURI http://bat6340win64:61823/
```

```
ptree = rosparam;
set(ptree,'MyParam','test')
has(ptree,'MyParam')
```

```
ans = logical
      1
```

Delete the parameter. Verify it was deleted. Shut down the ROS network.

```
del(ptree,'MyParam')
has(ptree,'MyParam')
```

```
ans = logical
      0
```

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_17126 with NodeURI http://bat6340win64:61823/
Shutting down ROS master on http://172.30.135.140:52063.
```

Input Arguments

ptree — Parameter tree

ParameterTree object handle

Parameter tree, specified as a ParameterTree object handle. Create this object using the `rosparam` function.

paramname — ROS parameter name

string scalar | character vector

ROS parameter name, specified as a string scalar or character vector. This string must match the parameter name exactly.

namespace — ROS parameter namespace

string scalar | character vector

ROS parameter namespace, specified as a string scalar or character vector. All parameter names starting with this string are listed when calling `rosparam("list", namespace)`.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`set` | `has` | `rosparam`

Introduced in R2019b

deleteFile

Delete file from device

Syntax

```
deleteFile(device,filename)
```

Description

`deleteFile(device,filename)` deletes the specified file from the ROS or ROS 2 device.

Examples

Put, Get, and Delete Files on ROS Device

Put a file from your host computer onto a ROS device, get it back, and then delete it.

Connect to a ROS device. Specify the device address, user name, and password of your ROS device.

```
d = rosdevice('192.168.17.128','user','password');
```

Put a new text file that is in the MATLAB(R) current folder onto the ROS device. The destination folder must exist.

```
putFile(d,'test_file.txt','/home/user/test_folder')
```

Get a text file from the ROS device. You can get any file, not just ones added from MATLAB(R). By default, the file is added to the MATLAB current folder.

```
getFile(d,'/home/user/test_folder/test_file.txt')
```

Delete the text file on the ROS device.

```
deleteFile(d,'/home/user/test_folder/test_file.txt')
```

Put, Get, and Delete Files on ROS Device Using Wildcards

Put a file from your host computer onto a ROS device, get it back, and then delete it. Use wildcards to search for all matching files.

Note: You must have a valid ROS device to connect to at the IP address specified in the example.

Connect to a ROS device. Specify the device address, user name, and password of your ROS device.

```
d = rosdevice('192.168.17.128','user','password');
```

Put all text files at the specified path onto the ROS device. The destination folder must exist.

```
putFile(d,'C:/MATLAB/*.txt','/home/user/test_folder')
```

Get all text files from the ROS device. You can get any files, not just ones added from MATLAB(R). By default, the files are added to the MATLAB current folder.

```
getFile(d, '/home/user/test_folder/*.txt')
```

Delete all text files on the ROS device at the specified folder.

```
deleteFile(d, '/home/user/test_folder/*.txt')
```

Input Arguments

device — ROS or ROS 2 device

rosdevice object | ros2device object

ROS or ROS 2 device, specified as a rosdevice or ros2device object, respectively.

filename — File to delete

character vector

File to delete, specified as a character vector. When you specify the file name, you can use path information and wildcards.

Example: '/home/user/image.jpg'

Example: '/home/user/*.jpg'

Data Types: cell

See Also

rosdevice | ros2device | putFile | getFile | dir | openShell | system

Introduced in R2019b

dir

List folder contents on device

Syntax

```
dir(device, folder)
clist = dir(device, folder)
```

Description

`dir(device, folder)` lists the files in a folder on the ROS or ROS 2 device. Wildcards are supported.

`clist = dir(device, folder)` stores the list of files as a structure.

Examples

View Folder Contents on ROS Device

Connect to a ROS device and list the contents of a folder.

Connect to a ROS device. Specify the device address, user name, and password of your ROS device.

```
d = rosdevice('192.168.17.129', 'user', 'password');
```

Get the folder list of a Catkin workspace on your ROS device. View the folder as a table.

```
flist = dir(d, '/home/user/Documents/mw_catkin_ws/');
ftable = struct2table(flist)
```

```
ftable=6x4 table
          name                folder                isdir  bytes
-----
{ '.'          } { '/home/user/Documents/mw_catkin_ws' } true    0
{ '..         } { '/home/user/Documents/mw_catkin_ws' } true    0
{ '.catkin_workspace' } { '/home/user/Documents/mw_catkin_ws' } false   98
{ 'build'     } { '/home/user/Documents/mw_catkin_ws' } true    0
{ 'devel'     } { '/home/user/Documents/mw_catkin_ws' } true    0
{ 'src'       } { '/home/user/Documents/mw_catkin_ws' } true    0
```

Input Arguments

device — ROS or ROS 2 device

rosdevice object | ros2device object

ROS or ROS 2 device, specified as a `rosdevice` or `ros2device` object, respectively.

folder — Folder name

character vector

Name of the folder to list the contents of, specified as a character vector.

Output Arguments**cList — Contents list**

structure

Contents list, returned as a structure. The structure contains these fields:

- `name` — File name (char)
- `folder` — Absolute path (char)
- `bytes` — Size of the file in bytes (double)
- `isdir` — Indicator of whether name is a folder (logical)

See Also

`rosdevice` | `ros2device` | `putFile` | `getFile` | `deleteFile` | `openShell` | `system`

Introduced in R2019b

get

Get ROS parameter value

Syntax

```
pvalue = get(ptree)
pvalue = get(ptree,paramname)
pvalue = get(ptree,namespace)
[pvalue,status] = get(ptree,paramname)
pvalue = get(ptree,paramname,"DataType",ptype)
```

Description

`pvalue = get(ptree)` returns a dictionary of parameter values under the root namespace: `/`. The dictionary is stored in a structure.

`pvalue = get(ptree,paramname)` gets the value of the parameter with the name `paramname` from the parameter tree object `ptree`.

`pvalue = get(ptree,namespace)` returns a dictionary of parameter values under the specified namespace.

The following ROS data types are supported as values of parameters. For each ROS data type, the corresponding MATLAB data type is also listed.

- 32-bit integer — `int32`
- Boolean — `logical`
- double — `double`
- strings — string scalar, `string`, or character vector, `char`
- list — cell array (`cell`)
- dictionary — structure (`struct`)

`[pvalue,status] = get(ptree,paramname)` returns the parameter values and the associated status. `status` indicates whether the `pvalue` successfully returned.

`pvalue = get(ptree,paramname,"DataType",ptype)` specifies the ROS parameter data type when generating code. The input parameter type value must match the existing parameter type else the function returns the `pvalue` as empty, `[]`, for the requested type.

Examples

Set and Get Parameter Value

Create the parameter tree. A ROS network must be available using `rosinit`.

```
rosinit
```

```
Launching ROS Core...
...Done in 3.2604 seconds.
Initializing ROS master on http://172.30.135.140:58729.
Initializing global node /matlab_global_node_73144 with NodeURI http://bat6340win64:52580/
```

```
ptree = rosparam;
```

Set a parameter value. You can also use the simplified version without a parameter tree:

```
rosparam set 'DoubleParam' 1.0
```

```
set(ptree, 'DoubleParam', 1.0)
```

Get the parameter value.

```
get(ptree, 'DoubleParam')
```

```
ans = 1
```

Alternatively, use the simplified versions without using the parameter tree.

```
rosparam set 'DoubleParam' 2.0
```

```
rosparam get 'DoubleParam'
```

```
2
```

Disconnect from ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_73144 with NodeURI http://bat6340win64:52580/
Shutting down ROS master on http://172.30.135.140:58729.
```

Input Arguments

ptree — Parameter tree

ParameterTree object handle

Parameter tree, specified as a ParameterTree object handle. Create this object using the `rosparam` function.

paramname — ROS parameter name

string scalar | character vector

ROS parameter name, specified as a character vector. This string must match the parameter name exactly.

namespace — ROS parameter namespace

string scalar | character vector

ROS parameter namespace, specified as a string scalar or character vector. All parameter names starting with this string are listed when calling `rosparam("list", namespace)`.

ptype — ROS parameter data type

'int32' | 'logical' | 'double' | 'char'

ROS parameter data type, specified as either 'int32', 'logical', 'double', or 'char'.

Output Arguments

pvalue — ROS parameter value or dictionary of values

`int32` | `logical` | `double` | character vector | cell array | structure

ROS parameter value, returned as a supported MATLAB data type. When specifying the `namespace` input argument, `pvalue` is returned as a dictionary of parameter values under the specified namespace. The dictionary is represented in MATLAB as a structure.

The following ROS data types are supported as values of parameters. For each ROS data type, the corresponding MATLAB data type is also listed.

- 32-bit integer — `int32`
- Boolean — `logical`
- double — `double`
- string — character vector (`char`)
- list — cell array (`cell`)
- dictionary — structure (`struct`)

status — Status of ROS parameter value

`true` | `false`

Status of ROS parameter value, returned as `true` or `false`. If the status is `false`, the `pvalue` value is returned as empty, `[]`.

Data Types: `logical`

Limitations

Base64-encoded binary data and iso 8601 data from ROS are not supported.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

This function supports C/C++ code generation with the limitations:

For code generation, only the following ROS data types are supported as values of parameters,

- 32-bit integer — `int32`
- Boolean — `logical`
- double — `double`
- strings — string scalar, `string`, or character vector, `char`

See Also

`set` | `rosparam`

Introduced in R2019b

getFile

Get file from device

Syntax

```
getFile(device,remoteSource)
getFile(device,remoteSource,localDestination)
```

Description

`getFile(device,remoteSource)` copies the specified file from the ROS or ROS 2 device to the MATLAB current folder. Wildcards are supported.

`getFile(device,remoteSource,localDestination)` copies the remote file to a destination path. Specify a file name at the end of the destination path to copy with a custom file name.

Examples

Put, Get, and Delete Files on ROS Device

Put a file from your host computer onto a ROS device, get it back, and then delete it.

Connect to a ROS device. Specify the device address, user name, and password of your ROS device.

```
d = rosdevice('192.168.17.128','user','password');
```

Put a new text file that is in the MATLAB(R) current folder onto the ROS device. The destination folder must exist.

```
putFile(d,'test_file.txt','/home/user/test_folder')
```

Get a text file from the ROS device. You can get any file, not just ones added from MATLAB(R). By default, the file is added to the MATLAB current folder.

```
getFile(d,'/home/user/test_folder/test_file.txt')
```

Delete the text file on the ROS device.

```
deleteFile(d,'/home/user/test_folder/test_file.txt')
```

Put, Get, and Delete Files on ROS Device Using Wildcards

Put a file from your host computer onto a ROS device, get it back, and then delete it. Use wildcards to search for all matching files.

Note: You must have a valid ROS device to connect to at the IP address specified in the example.

Connect to a ROS device. Specify the device address, user name, and password of your ROS device.


```
d = rosdevice('192.168.17.128', 'user', 'password');
```

Put all text files at the specified path onto the ROS device. The destination folder must exist.

```
putFile(d, 'C:/MATLAB/*.txt', '/home/user/test_folder')
```

Get all text files from the ROS device. You can get any files, not just ones added from MATLAB(R). By default, the files are added to the MATLAB current folder.

```
getFile(d, '/home/user/test_folder/*.txt')
```

Delete all text files on the ROS device at the specified folder.

```
deleteFile(d, '/home/user/test_folder/*.txt')
```

Input Arguments

device — ROS or ROS 2 device

`rosdevice` object | `ros2device` object

ROS or ROS 2 device, specified as a `rosdevice` or `ros2device` object, respectively.

remoteSource — Path and name of file on the device

source path

Path and name of the file on the device. Specify the path as a character vector. You can use an absolute path or a relative path from the MATLAB current folder. Use the path and file naming conventions of the operating system on your host computer.

Example: `'/home/user/test_folder/test_file.txt'`

Data Types: `char`

localDestination — Destination folder path and optional file name

character vector

Destination folder path and optional file name, specified as a character vector. Specify a file name at the end of the destination path to copy with a custom file name. Use the host computer path and file naming conventions.

Example: `'C:/User/username/test_folder'`

Data Types: `char`

See Also

`rosdevice` | `ros2device` | `putFile` | `deleteFile` | `dir` | `openShell` | `system`

Introduced in R2019b

getTransform

Retrieve transformation between two coordinate frames

Syntax

```
tf = getTransform(tftree, targetframe, sourceframe)
tf = getTransform(tftree, targetframe, sourceframe, sourcetime)
tf = getTransform( ____, "Timeout", timeout)

tf = getTransform(bagSel, targetframe, sourceframe)
tf = getTransform(bagSel, targetframe, sourceframe, sourcetime)

tf = getTransform(bagreader, targetframe, sourceframe)
tf = getTransform(bagreader, targetframe, sourceframe, sourcetime)
```

Description

TransformationTree Object

`tf = getTransform(tftree, targetframe, sourceframe)` returns the latest known transformation between two coordinate frames in `tftree`. Create the `tftree` object using `rostopf`, which requires a connection to a ROS network.

Transformations are structured as a 3-D translation (three-element vector) and a 3-D rotation (quaternion).

`tf = getTransform(tftree, targetframe, sourceframe, sourcetime)` returns the transformation from `tftree` at the given source time. If the transformation is not available at that time, the function returns an error.

`tf = getTransform(____, "Timeout", timeout)` also specifies a timeout period, in seconds, to wait for the transformation to be available. If the transformation does not become available in the timeout period, the function returns an error. Use this syntax with any of the input arguments in previous syntaxes.

BagSelection Object

`tf = getTransform(bagSel, targetframe, sourceframe)` returns the latest transformation between two frames in the rosbag in `bagSel`. To get the `bagSel` input, load a rosbag using `rosbag`.

`tf = getTransform(bagSel, targetframe, sourceframe, sourcetime)` returns the transformation at the specified `sourcetime` in the rosbag in `bagSel`.

rosbagreader Object

`tf = getTransform(bagreader, targetframe, sourceframe)` returns the latest transformation between two frames in the rosbag in `bagreader`.

`tf = getTransform(bagreader, targetframe, sourceframe, sourcetime)` returns the transformation at the specified `sourcetime` in the rosbag in `bagreader`.

Examples

Get ROS Transformations and Apply to ROS Messages

This example shows how to set up a ROS transformation tree and transform frames based on transformation tree information. It uses time-buffered transformations to access transformations at different times.

Create a ROS transformation tree. Use `rosinit` to connect to a ROS network. Replace `ipaddress` with your ROS network address.

```
ipaddress = '192.168.17.129';
rosinit(ipaddress,11311)
```

```
Initializing global node /matlab_global_node_14346 with NodeURI http://192.168.17.1:56312/
```

```
tftree = rostf;
pause(1)
```

Look at the available frames on the transformation tree.

```
tftree.AvailableFrames
```

```
ans = 36x1 cell
    {'base_footprint'      }
    {'base_link'          }
    {'camera_depth_frame' }
    {'camera_depth_optical_frame'}
    {'camera_link'        }
    {'camera_rgb_frame'   }
    {'camera_rgb_optical_frame' }
    {'caster_back_link'   }
    {'caster_front_link'  }
    {'cliff_sensor_front_link' }
    {'cliff_sensor_left_link' }
    {'cliff_sensor_right_link' }
    {'gyro_link'          }
    {'mount_asus_xtion_pro_link' }
    {'odom'               }
    {'plate_bottom_link'  }
    {'plate_middle_link'  }
    {'plate_top_link'     }
    {'pole_bottom_0_link' }
    {'pole_bottom_1_link' }
    {'pole_bottom_2_link' }
    {'pole_bottom_3_link' }
    {'pole_bottom_4_link' }
    {'pole_bottom_5_link' }
    {'pole_kinect_0_link' }
    {'pole_kinect_1_link' }
    {'pole_middle_0_link' }
    {'pole_middle_1_link' }
    {'pole_middle_2_link' }
    {'pole_middle_3_link' }
    :
```

Check if the desired transformation is now available. For this example, check for the transformation from 'camera_link' to 'base_link'.

```
canTransform(tftree, 'base_link', 'camera_link')
```

```
ans = logical  
     1
```

Get the transformation for 3 seconds from now. The `getTransform` function will wait until the transformation becomes available with the specified timeout.

```
desiredTime = rostime('now') + 3;  
tform = getTransform(tftree, 'base_link', 'camera_link', ...  
                    desiredTime, 'Timeout', 5);
```

Create a ROS message to transform. Messages can also be retrieved off the ROS network.

```
pt = rosmesssage('geometry_msgs/PointStamped');  
pt.Header.FrameId = 'camera_link';  
pt.Point.X = 3;  
pt.Point.Y = 1.5;  
pt.Point.Z = 0.2;
```

Transform the ROS message to the 'base_link' frame using the desired time previously saved.

```
tfpt = transform(tftree, 'base_link', pt, desiredTime);
```

Optional: You can also use `apply` with the stored `tform` to apply this transformation to the `pt` message.

```
tfpt2 = apply(tform, pt);
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_14346 with NodeURI http://192.168.17.1:56312/
```

Get Buffered Transformations from ROS Network

This example shows how to access time-buffered transformations on the ROS network. Access transformations for specific times and modify the `BufferTime` property based on your desired times.

Create a ROS transformation tree. Use `rosinit` to connect to a ROS network. Replace `ipaddress` with your ROS network address.

```
ipaddress = '192.168.17.129';  
rosinit(ipaddress, 11311)
```

```
Initializing global node /matlab_global_node_78006 with NodeURI http://192.168.17.1:56344/
```

```
tftree = rostf;  
pause(2);
```

Get the transformation from 1 second ago.

```
desiredTime = rostime('now') - 1;
tform = getTransform(tftree, 'base_link', 'camera_link', desiredTime);
```

The transformation buffer time is 10 seconds by default. Modify the `BufferTime` property of the transformation tree to increase the buffer time and wait for that buffer to fill.

```
tftree.BufferTime = 15;
pause(15);
```

Get the transformation from 12 seconds ago.

```
desiredTime = rostime('now') - 12;
tform = getTransform(tftree, 'base_link', 'camera_link', desiredTime);
```

You can also get transformations at a time in the future. The `getTransform` function will wait until the transformation is available. You can also specify a timeout to error if no transformation is found. This example waits 5 seconds for the transformation at 3 seconds from now to be available.

```
desiredTime = rostime('now') + 3;
tform = getTransform(tftree, 'base_link', 'camera_link', desiredTime, 'Timeout', 5);
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_78006 with NodeURI http://192.168.17.1:56344/
```

Get Transformations from rosbag File

Get transformations from rosbag (.bag) files by loading the rosbag and checking the available frames. From these frames, use `getTransform` to query the transformation between two coordinate frames.

Load the rosbag.

```
bag = rosbag('ros_turtlesim.bag');
```

Get a list of available frames.

```
frames = bag.AvailableFrames;
```

Get the latest transformation between two coordinate frames.

```
tf = getTransform(bag, 'world', frames{1});
```

Check for a transformation available at a specific time and retrieve the transformation. Use `canTransform` to check if the transformation is available. Specify the time using `rostime`.

```
tfTime = rostime(bag.StartTime + 1);
if (canTransform(bag, 'world', frames{1}, tfTime))
    tf2 = getTransform(bag, 'world', frames{1}, tfTime);
end
```

Get Transformations from rosbag File Using rosbagreader Object

Get transformations from rosbag (.bag) files by loading the rosbag and checking the available frames. From these frames, use `getTransform` to query the transformation between two coordinate frames.

Load the rosbag.

```
bagMsgs = rosbagreader("ros_turtlesim.bag")
```

```
bagMsgs =  
  rosbagreader with properties:
```

```
      FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex81142742\ros_tur  
      StartTime: 1.5040e+09  
      EndTime: 1.5040e+09  
      NumMessages: 6089  
      AvailableTopics: [6x3 table]  
      AvailableFrames: {2x1 cell}  
      MessageList: [6089x4 table]
```

Get a list of available frames.

```
frames = bagMsgs.AvailableFrames
```

```
frames = 2x1 cell  
  {'turtle1'}  
  {'world' }
```

Get the latest transformation between two coordinate frames.

```
tf = getTransform(bagMsgs, 'world', frames{1})
```

```
tf =  
  ROS TransformStamped message with properties:
```

```
      MessageType: 'geometry_msgs/TransformStamped'  
      Header: [1x1 Header]  
      Transform: [1x1 Transform]  
      ChildFrameId: 'turtle1'
```

Use `showdetails` to show the contents of the message

Check for a transformation available at a specific time and retrieve the transformation. Use `canTransform` to check if the transformation is available. Specify the time using `rostime`.

```
tfTime = rostime(bagMsgs.StartTime + 1);  
if (canTransform(bagMsgs, 'world', frames{1}, tfTime))  
  tf2 = getTransform(bagMsgs, 'world', frames{1}, tfTime);  
end
```

Input Arguments

tftree — ROS transformation tree

TransformationTree object

ROS transformation tree, specified as a TransformationTree object. You can create a transformation tree by calling the `rostopic` function.

bagSel — Selection of rosbag messages

BagSelection object

Selection of rosbag messages, specified as a BagSelection object. To create a selection of rosbag messages, use `rostopic`.

bagreader — Index of messages in rosbag

rostopic object

Index of the messages in the rosbag, specified as a rostopic object.

targetframe — Target coordinate frame

string scalar | character vector

Target coordinate frame, specified as a string scalar or character vector. You can view the available frames for transformation by calling `tftree.AvailableFrames`.

sourceframe — Initial coordinate frame

string scalar | character vector

Initial coordinate frame, specified as a string scalar or character vector. You can view the available frames for transformation by calling `tftree.AvailableFrames`.

sourcetime — ROS or system time

Time object handle

ROS or system time, specified as a Time object handle. By default, `sourcetime` is the ROS simulation time published on the `clock` topic. If you set the `use_sim_time` ROS parameter to `true`, `sourcetime` returns the system time. You can create a Time object using `rostopic`.

timeout — Timeout for receiving transform

0 (default) | scalar in seconds

Timeout for receiving the transform, specified as a scalar in seconds. The function returns an error if the timeout is reached and no transform becomes available.

Output Arguments

tf — Transformation between coordinate frames

TransformStamped object handle

Transformation between coordinate frames, returned as a TransformStamped object handle. Transformations are structured as a 3-D translation (three-element vector) and a 3-D rotation (quaternion).

Compatibility Considerations

Empty Transforms

Behavior change in future release

The behavior of `getTransform` changed in R2018a. When using the `tftree` input argument, the function no longer returns an empty transform when the transform is unavailable and no `sourcetime` is specified. If `getTransform` waits for the specified timeout period and the transform is still not available, the function returns an error. The timeout period is 0 by default.

See Also

`transform` | `waitForTransform` | `rostopic` | `canTransform` | `rosviz` | `rosviz` | `rosviz`

Introduced in R2019b

has

Check if ROS parameter name exists

Syntax

```
exists = has(ptree,paramname)
```

Description

`exists = has(ptree,paramname)` checks if the parameter with name `paramname` exists in the parameter tree, `ptree`.

Examples

Check If ROS Parameter Exists

Connect to a ROS network. Create a parameter tree and check for the 'MyParam' parameter.

```
rosinit

Launching ROS Core...
..Done in 2.6436 seconds.
Initializing ROS master on http://172.30.135.140:56816.
Initializing global node /matlab_global_node_17362 with NodeURI http://bat6340win64:55616/

ptree = rosparam;
has(ptree, 'MyParam')

ans = logical
     0
```

Set the 'MyParam' parameter and verify it exists. Disconnect from ROS network.

```
set(ptree, 'MyParam', 'test')
has(ptree, 'MyParam')

ans = logical
     1
```

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_17362 with NodeURI http://bat6340win64:55616/
Shutting down ROS master on http://172.30.135.140:56816.
```

Input Arguments

ptree — Parameter tree
ParameterTree object handle

Parameter tree, specified as a `ParameterTree` object handle. Create this object using the `rosparam` function.

paramname — ROS parameter name

string scalar | character vector

ROS parameter name, specified as a string scalar or character vector. This string must match the parameter name exactly.

Output Arguments

exists — Flag indicating whether the parameter exists

true | false

Flag indicating whether the parameter exists, returned as `true` or `false`.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`get` | `search` | `set` | `rosparam`

Introduced in R2019b

isCoreRunning

Determine if ROS core is running

Syntax

```
running = isCoreRunning(device)
```

Description

`running = isCoreRunning(device)` determines if the ROS core is running on the connected device.

Examples

Run ROS Core on ROS Device

Connect to a remote ROS device and start a ROS core. The ROS core is needed to run ROS nodes to communicate via a ROS network. You can run and stop a ROS core or node and check their status using a `rosdevice` object.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device contains information about the ROS device, including the available ROS nodes that can be run using `runNode`.

```
ipaddress = '192.168.203.131';
d = rosdevice(ipaddress, 'user', 'password')

d =
  rosdevice with properties:

    DeviceAddress: '192.168.203.131'
    Username: 'user'
    ROSFolder: '/opt/ros/indigo'
    CatkinWorkspace: '~/catkin_ws'
    AvailableNodes: {'voxel_grid_filter_sl'}
```

Run a ROS core and check if it is running.

```
runCore(d)
```

Another `roscore` / ROS master is already running on the ROS device. Use the `'stopCore'` function to

```
running = isCoreRunning(d)
```

```
running = logical
         1
```

Stop the ROS core and confirm that it is no longer running.

```
stopCore(d)
pause(2)
running = isCoreRunning(d)

running = logical
         0
```

Input Arguments

device – ROS device

rosdevice object

ROS device, specified as a *rosdevice* object.

Output Arguments

running – Status of whether ROS core is running

true | *false*

Status of whether ROS core is running, returned as *true* or *false*.

See Also

rosdevice | *runCore* | *stopCore*

Topics

“Generate a Standalone ROS Node from Simulink®”

Introduced in R2019b

isNodeRunning

Determine if ROS or ROS 2 node is running

Syntax

```
running = isNodeRunning(device,modelName)
```

Description

`running = isNodeRunning(device,modelName)` determines if the ROS or ROS 2 node associated with the specified Simulink® model is running on the specified `rosdevice` or `ros2device`, `device`.

Examples

Run ROS Node on ROS Device

Connect to a remote ROS device and start a ROS node. Run a ROS core so that ROS nodes can communicate via a ROS network. You can run and stop a ROS core or node and check their status using a `rosdevice` object.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device already contains the available ROS nodes that can be run using `runNode`.

```
ipaddress = '192.168.203.129';
d = rosdevice(ipaddress,'user','password');
d.ROSFolder = '/opt/ros/indigo';
d.CatkinWorkspace = '~/catkin_ws_test'

d =
  rosdevice with properties:

      DeviceAddress: '192.168.203.129'
      Username: 'user'
      ROSFolder: '/opt/ros/indigo'
      CatkinWorkspace: '~/catkin_ws_test'
      AvailableNodes: {'robotcontroller' 'robotcontroller2'}
```

Run a ROS core. Connect MATLAB® to the ROS master using `rosinit`. This core enables you to run ROS nodes on your ROS device.

```
runCore(d)
rosinit(d.DeviceAddress,11311)
```

```
Initializing global node /matlab_global_node_84497 with NodeURI http://192.168.203.1:56034/
```

Check the available ROS nodes on the connected ROS device. These nodes listed were generated from Simulink® models following the process in the “Get Started with ROS in Simulink®” example.

```
d.AvailableNodes
```

```
ans = 1x2 cell
      {'robotcontroller'}   {'robotcontroller2'}
```

Run a ROS node and specify the node name. Check if the node is running.

```
runNode(d, 'RobotController')
running = isNodeRunning(d, 'RobotController')

running = logical
         1
```

Stop the ROS node. Disconnect from the ROS network. Stop the ROS core.

```
stopNode(d, 'RobotController')
rosshutdown
```

```
Shutting down global node /matlab_global_node_84497 with NodeURI http://192.168.203.1:56034/
stopCore(d)
```

Input Arguments

device — ROS or ROS 2 device

rosdevice object | ros2device object

ROS or ROS 2 device, specified as a rosdevice or ros2device object, respectively.

modelName — Name of the deployed Simulink model

character vector

Name of the deployed Simulink model, specified as a character vector. If the model name is not valid, the function returns false.

Output Arguments

running — Status of whether the ROS or ROS 2 node is running

true | false

Status of whether the ROS or ROS 2 node is running, returned as true or false.

See Also

rosdevice | ros2device | runNode | stopNode

Topics

“Generate a Standalone ROS Node from Simulink®”

“Generate a Standalone ROS 2 Node from Simulink®”

Introduced in R2019b

isServerAvailable

Determine if ROS or ROS 2 service server is available

Syntax

```
status = isServerAvailable(client)
```

Description

`status = isServerAvailable(client)` determines whether a service server with the same service name as `client` is available and returns a `status` accordingly.

Examples

Call Service Client with Default Message

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
```

```
..Done in 2.6477 seconds.
```

```
Initializing ROS master on http://172.30.135.140:53192.
```

```
Initializing global node /matlab_global_node_86810 with NodeURI http://bat6340win64:55093/
```

Set up a service server. Use structures for the ROS message data format.

```
server = rossvcserver('/test', 'std_srvs/Empty', @exampleHelperROSEmptyCallback, ...
                    'DataFormat','struct');
client = rossvcclient('/test','DataFormat','struct');
```

Check whether the service server is available. If it is, wait for the service client to connect to the server.

```
if(isServerAvailable(client))
    [connectionStatus,connectionStatustext] = waitForServer(client)
end
```

```
connectionStatus = logical
    1
```

```
connectionStatustext =
'success'
```

Call service server with default message.

```
response = call(client)
```

```
response = struct with fields:
    MessageType: 'std_srvs/EmptyResponse'
```

If the `call` function above fails, it results in an error. Instead of an error, if you would prefer to react to a call failure using conditionals, return the `status` and `statustext` outputs from the call function. The `status` output indicates if the call succeeded, while `statustext` provides additional information.

```
numCallFailures = 0;
[response,status,statustext] = call(client,"Timeout",3);
if ~status
    numCallFailures = numCallFailures + 1;
    fprintf("Call failure number %d. Error cause: %s\n",numCallFailures,statustext)
else
    disp(response)
end
```

```
    MessageType: 'std_srvs/EmptyResponse'
```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_86810 with NodeURI http://bat6340win64:55093/
Shutting down ROS master on http://172.30.135.140:53192.
```

Call ROS 2 Service Client With a Custom Callback Function

Create a sample ROS 2 network with two nodes.

```
node_1 = ros2node("node_1");
node_2 = ros2node("node_2");
```

Set up a service server and attach it to a ROS 2 node. Specify the callback function `flipstring`, which flips the input string. The callback function is defined at the end of this example.

```
server = ros2svcsrvserver(node_1, '/test', 'test_msgs/BasicTypes', @flipString);
```

Set up a service client of the same service type and attach it to a different node.

```
client = ros2svcclient(node_2, '/test', 'test_msgs/BasicTypes');
```

Wait for the service client to connect to the server.

```
[connectionStatus,connectionStatustext] = waitForServer(client)
```

```
connectionStatus = logical
    1
```

```
connectionStatustext =
'success'
```

Create a request message based on the client. Assign the string to the corresponding field in the message, `string_value`.

```
request = ros2message(client);
request.string_value = 'hello world';
```


Check whether the service server is available. If it is, send a service request and wait for a response. Specify that the service waits 3 seconds for a response.

```
if(isServerAvailable(client))
    response = call(client,request,'Timeout',3);
end
```

The response is a flipped string from the request message which you see in the `string_value` field.

```
response.string_value
```

```
ans =
'dlrow olleh'
```

If the `call` function above fails, it results in an error. Instead of an error, if you would prefer to react to a call failure using conditionals, return the `status` and `statustext` outputs from the `call` function. The `status` output indicates if the call succeeded, while `statustext` provides additional information.

```
numCallFailures = 0;
[response,status,statustext] = call(client,request,"Timeout",3);
if ~status
    numCallFailures = numCallFailures + 1;
    fprintf("Call failure number %d. Error cause: %s\n",numCallFailures,statustext)
else
    disp(response.string_value)
end
```

```
dlrow olleh
```

The callback function used to flip the string is defined below.

```
function resp = flipString(req,resp)
% FLIPSTRING Reverses the order of a string in REQ and returns it in RESP.
resp.string_value = fliplr(req.string_value);
end
```

Input Arguments

client — ROS service client

`ros.ServiceClient` object handle | `ros2serviceclient` object handle

ROS or ROS 2 service client, specified as a `ros.ServiceClient` or `ros2serviceclient` object handle, respectively. This service client enables you to send requests to the service server.

Output Arguments

status — Status of service server availability

`logical` scalar

Status of service server availability, returned as a `logical` scalar. If a server of the same name and type as `client` is not available, `status` will be `false`.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- ROS 2 service clients are not supported.
- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

`rossvcclient` | `rossvcserver` | `ros2svcclient` | `ros2svcserver` | `call` | `rosservice`

Topics

“Call and Provide ROS Services”

“Call and Provide ROS 2 Services”

Introduced in R2021b

openShell

Open interactive command shell to device

Syntax

```
openShell(device)
```

Description

`openShell(device)` opens an SSH terminal on your host computer that provides encrypted access to the Linux[®] command shell on the ROS or ROS 2 device. When prompted, enter a user name and password.

Examples

Open Command Shell on ROS Device


Connect to a ROS device and open the command shell on your host computer.

Connect to a ROS device. Specify the device address, user name, and password of your ROS device.

```
d = rosdevice('192.168.17.128', 'user', 'password');
```

Open the command shell.

```
openShell(d);
```

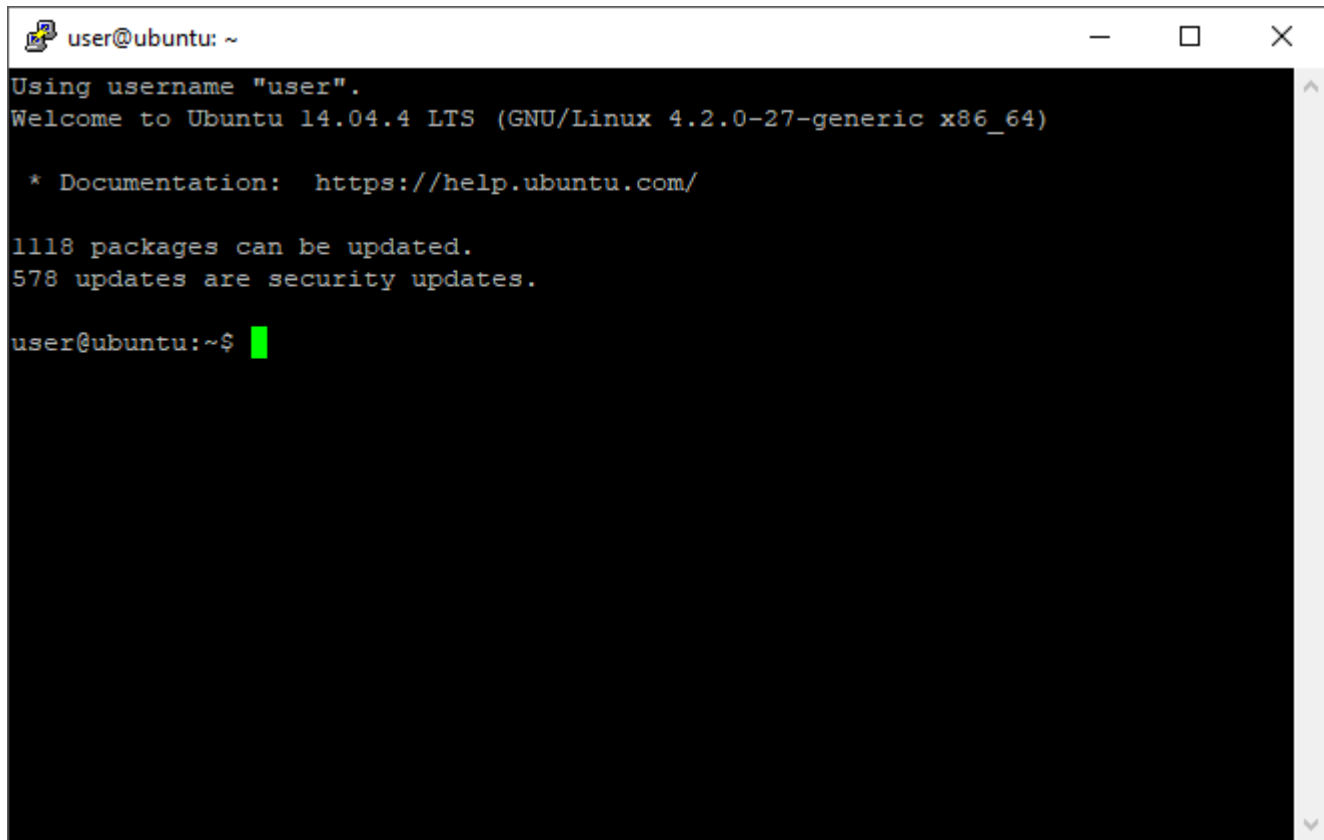

```
user@ubuntu: ~  
Using username "user".  
Welcome to Ubuntu 14.04.4 LTS (GNU/Linux 4.2.0-27-generic x86_64)  
  
* Documentation:  https://help.ubuntu.com/  
  
1118 packages can be updated.  
578 updates are security updates.  
  
user@ubuntu:~$
```

Input Arguments

device — ROS or ROS 2 device

rosdevice object | ros2device object

ROS or ROS 2 device, specified as a rosdevice or ros2device object, respectively.

See Also

rosdevice | ros2device | putFile | getFile | deleteFile | dir | system

Introduced in R2019b

plot

Display laser or lidar scan readings

Syntax

```
plot(scanMsg)
plot(scanObj)
plot( ____, Name, Value)
linehandle = plot( ____)
```

Description

`plot(scanMsg)` plots the laser scan readings specified in the input `LaserScan` object message. Axes are automatically scaled to the maximum range that the laser scanner supports.

Note `plot` will be removed. Use `plotLaserScan` instead. For more information, see “ROS Message Structure Functions” on page 1-62

`plot(scanObj)` plots the lidar scan readings specified in `scanObj`.

`plot(____, Name, Value)` provides additional options specified by one or more `Name, Value` pair arguments.

`linehandle = plot(____)` returns a column vector of line series handles, using any of the arguments from previous syntaxes. Use `linehandle` to modify properties of the line series after it is created.

When plotting ROS laser scan messages, MATLAB follows the standard ROS convention for axis orientation. This convention states that **positive x is forward, positive y is left, and positive z is up**. For more information, see [Axis Orientation on the ROS Wiki](#).

Examples

Plot Laser Scan Message

Connect to ROS network. Subscribe to a laser scan topic, and receive a message.


```
rosinit('192.168.17.129')
```

```
Initializing global node /matlab_global_node_90279 with NodeURI http://192.168.17.1:50889/
```

```
sub = rossubscriber('/scan');
scan = receive(sub);
```

Plot the laser scan.

```
plot(scan)
```

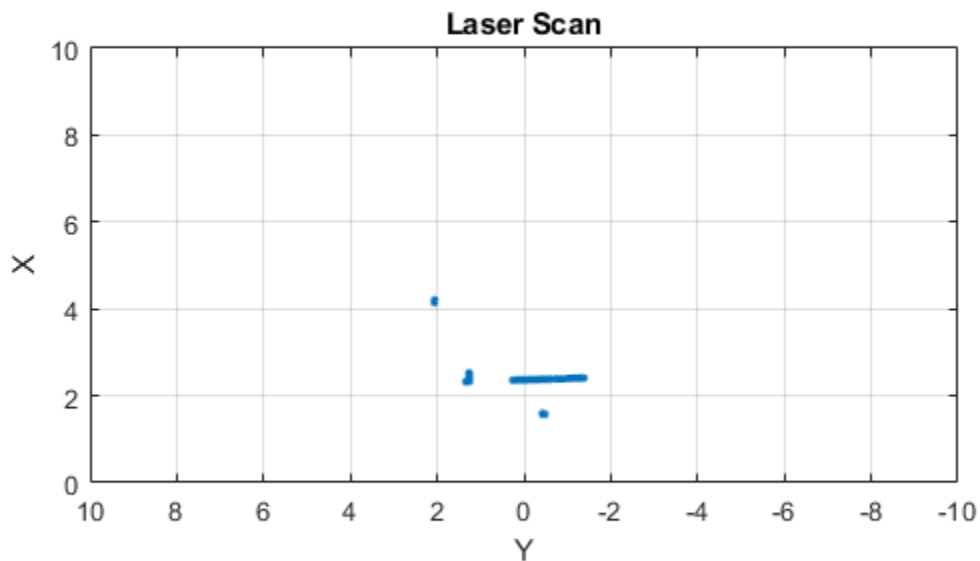

Shutdown ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_90279 with NodeURI http://192.168.17.1:50889/
```

Plot Laser Scan Message With Maximum Range

Connect to ROS network. Subscribe to a laser scan topic, and receive a message.


```
rosinit('192.168.17.129')
```

```
Initializing global node /matlab_global_node_31712 with NodeURI http://192.168.17.1:51463/
```

```
sub = rossubscriber('/scan');  
scan = receive(sub);
```

Plot the laser scan specifying the maximum range.

```
plot(scan, 'MaximumRange', 6)
```

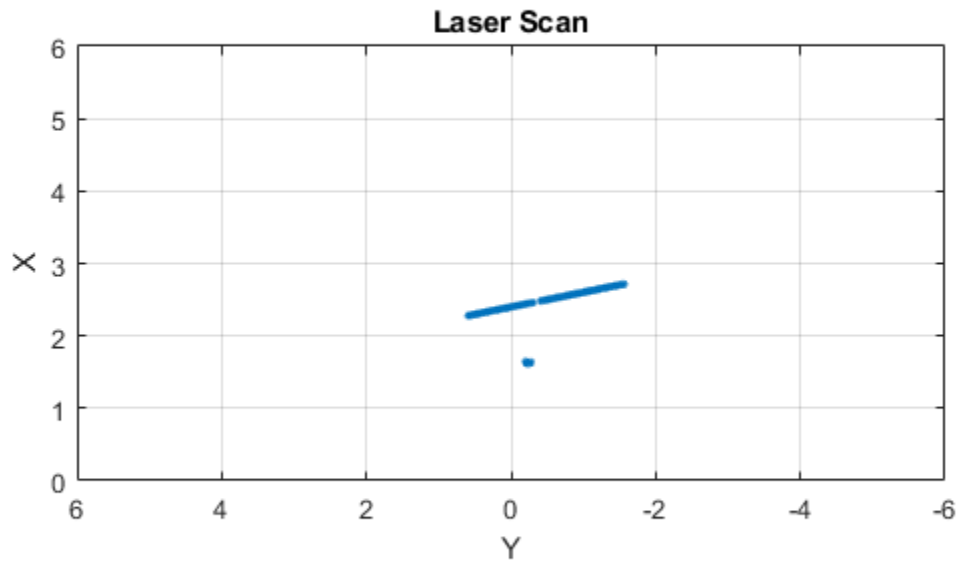

Shutdown ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_31712 with NodeURI http://192.168.17.1:51463/
```


Plot Lidar Scan and Remove Invalid Points

Specify lidar data as vectors of ranges and angles. These values include readings outside of the sensor range.

```
x = linspace(-2,2);
ranges = abs((1.5).*x.^2 + 5);
ranges(45:55) = 3.5;
angles = linspace(-pi/2,pi/2,numel(ranges));
```


Create a lidar scan by specifying the ranges and angles. Plot all points of the lidar scan.

```
scan = lidarScan(ranges,angles);
plot(scan)
```

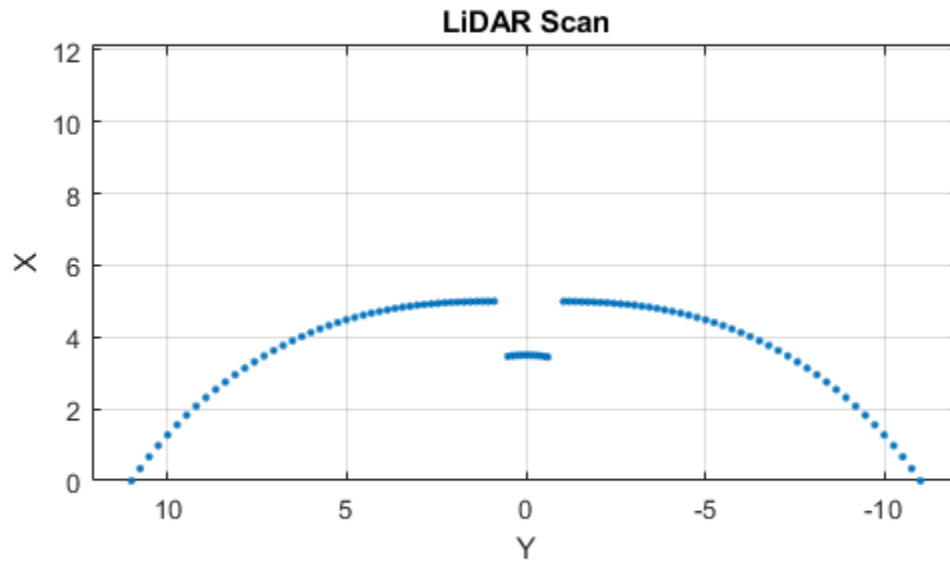

Remove invalid points based on a specified minimum and maximum range.

```
minRange = 0.1;  
maxRange = 7;  
scan2 = removeInvalidData(scan, 'RangeLimits', [minRange maxRange]);  
hold on  
plot(scan2)  
legend('All Points', 'Valid Points')
```

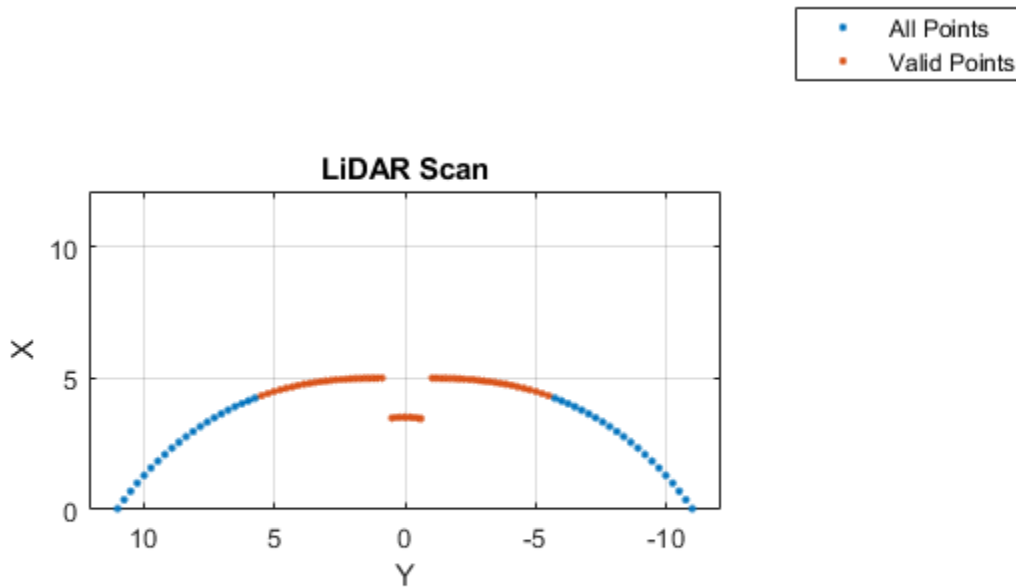Input Arguments

scanMsg — Laser scan message

LaserScan object handle

sensor_msgs/LaserScan ROS message, specified as a LaserScan object handle.

scanObj — Lidar scan readings

lidarScan object

Lidar scan readings, specified as a lidarScan object.

Name-Value Pair Arguments

Specify optional comma-separated pairs of **Name**, **Value** arguments. **Name** is the argument name and **Value** is the corresponding value. **Name** must appear inside quotes. You can specify several name and value pair arguments in any order as **Name1**, **Value1**, ..., **NameN**, **ValueN**.

Example: "MaximumRange", 5

Parent — Parent of axes

axes object

Parent of axes, specified as the comma-separated pair consisting of "Parent" and an axes object in which the laser scan is drawn. By default, the laser scan is plotted in the currently active axes.

MaximumRange — Range of laser scan

`scan.RangeMax` (default) | scalar

Range of laser scan, specified as the comma-separated pair consisting of "MaximumRange" and a scalar. When you specify this name-value pair argument, the minimum and maximum x-axis and the maximum y-axis limits are set based on a specified value. The minimum y-axis limit is automatically determined by the opening angle of the laser scanner.

This name-value pair works only when you input `scanMsg` as the laser scan.

Outputs**linehandle — One or more chart line objects**

scalar | vector

One or more chart line objects, returned as a scalar or a vector. These are unique identifiers, which you can use to query and modify properties of a specific chart line.

Compatibility Considerations**ROS Message Structure Functions**

Not recommended starting in R2021a

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	<code>readImage</code>	<code>rosReadImage</code>
CompressedImage	<code>writeImage</code>	<code>rosWriteImage</code>
LaserScan	<code>readCartesian</code>	<code>rosReadCartesian</code>
	<code>readScanAngles</code>	<code>rosReadScanAngles</code>
	<code>lidarScan</code>	<code>rosReadLidarScan</code>
	<code>plot</code>	<code>rosPlot</code>

Message Types	Object Function Name	New Function Name
PointCloud2	apply readXYZ readRGB readAllFieldNames readField scatter3	rosApplyTransform rosReadXYZ rosReadRGB rosReadAllFieldNames rosReadField rosPlot
Quaternion	readQuaternion	rosReadQuaternion
OccupancyGrid	readBinaryOccupancyGrid readOccupancyGrid writeBinaryOccupancyGrid writeOccupancyGrid	rosReadOccupancyGrid rosReadBinaryOccupancyGrid rosReadOccupancyGrid rosWriteBinaryOccupancyGrid rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D
PointStamped PoseStamped QuaternionStamped Vector3Stamped TransformStamped	apply	rosApplyTransform
All messages	showdetails	rosShowDetails

See Also

rosReadLidarScan | rosReadCartesian | rosPlot

Introduced in R2019b

putFile

Copy file to device

Syntax

```
putFile(device,localSource)
putFile(device,localSource,remoteDestination)
```

Description

`putFile(device,localSource)` copies the specified source file from the MATLAB current folder to the print working directory (pwd) on the ROS device or the home directory on the ROS 2 device. Wildcards are supported.

`putFile(device,localSource,remoteDestination)` copies the file to a destination path. Specify a file name at the end of the destination path to copy with a custom file name.

Examples

Put, Get, and Delete Files on ROS Device

Put a file from your host computer onto a ROS device, get it back, and then delete it.

Connect to a ROS device. Specify the device address, user name, and password of your ROS device.

```
d = rosdevice('192.168.17.128','user','password');
```

Put a new text file that is in the MATLAB(R) current folder onto the ROS device. The destination folder must exist.

```
putFile(d,'test_file.txt','/home/user/test_folder')
```

Get a text file from the ROS device. You can get any file, not just ones added from MATLAB(R). By default, the file is added to the MATLAB current folder.

```
getFile(d,'/home/user/test_folder/test_file.txt')
```

Delete the text file on the ROS device.

```
deleteFile(d,'/home/user/test_folder/test_file.txt')
```

Put, Get, and Delete Files on ROS Device Using Wildcards

Put a file from your host computer onto a ROS device, get it back, and then delete it. Use wildcards to search for all matching files.

Note: You must have a valid ROS device to connect to at the IP address specified in the example.

Connect to a ROS device. Specify the device address, user name, and password of your ROS device.

```
d = rosdevice('192.168.17.128', 'user', 'password');
```

Put all text files at the specified path onto the ROS device. The destination folder must exist.

```
putFile(d, 'C:/MATLAB/*.txt', '/home/user/test_folder')
```

Get all text files from the ROS device. You can get any files, not just ones added from MATLAB(R). By default, the files are added to the MATLAB current folder.

```
getFile(d, '/home/user/test_folder/*.txt')
```

Delete all text files on the ROS device at the specified folder.

```
deleteFile(d, '/home/user/test_folder/*.txt')
```

Input Arguments

device — ROS or ROS 2 device

rosdevice object | ros2device object

ROS or ROS 2 device, specified as a rosdevice or ros2device object, respectively.

localSource — Path and name of file on host computer

character vector

Path and name of the file on the host computer, specified as a character vector. You can use an absolute path or a path relative from the MATLAB current folder. Use the path and file naming conventions of the operating system on your host computer.

Example: 'C:\Work\profile'

Data Types: char

remoteDestination — Destination folder path and optional file name

character vector

Destination folder path and optional file name, specified as a character vector. Specify a file name at the end of the destination path to copy with a custom file name. Use the Linux path and file naming conventions.

Example: '/home/user/profile'

Data Types: char

See Also

rosdevice | ros2device | getFile | deleteFile | dir | openShell | system

Introduced in R2019b

readAllFieldNames

Get all available field names from ROS point cloud

Syntax

```
fieldnames = readAllFieldNames(pcloud)
```

Description

`fieldnames = readAllFieldNames(pcloud)` gets the names of all point fields that are stored in the `PointCloud2` object message, `pcloud`, and returns them in `fieldnames`.

Note `readAllFieldNames` will be removed. Use `rosReadAllFieldNames` instead. For more information, see “ROS Message Structure Functions” on page 1-67

Examples

Read All Fields From Point Cloud Message

Load sample ROS messages including a ROS point cloud message, `ptcloud`.

```
exampleHelperROSLoadMessages
```

Read all the field names available on the point cloud message.

```
fieldnames = readAllFieldNames(ptcloud)
```

```
fieldnames = 1x4 cell  
    {'x'}    {'y'}    {'z'}    {'rgb'}
```

Input Arguments

pcloud — Point cloud

`PointCloud2` object handle

Point cloud, specified as a `PointCloud2` object handle for a 'sensor_msgs/PointCloud2' ROS message.

Output Arguments

fieldnames — List of field names in `PointCloud2` object

cell array of character vectors

List of field names in `PointCloud2` object, returned as a cell array of character vectors. If no fields exist in the object, `fieldname` returns an empty cell array.

Compatibility Considerations

ROS Message Structure Functions

Not recommended starting in R2021a

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	readImage	rosReadImage
CompressedImage	writeImage	rosWriteImage
LaserScan	readCartesian readScanAngles lidarScan plot	rosReadCartesian rosReadScanAngles rosReadLidarScan rosPlot
PointCloud2	apply readXYZ readRGB readAllFieldNames readField scatter3	rosApplyTransform rosReadXYZ rosReadRGB rosReadAllFieldNames rosReadField rosPlot
Quaternion	readQuaternion	rosReadQuaternion
OccupancyGrid	readBinaryOccupancyGrid readOccupancyGrid writeBinaryOccupancyGrid writeOccupancyGrid	rosReadOccupancyGrid rosReadBinaryOccupancyGrid rosReadOccupancyGrid rosWriteBinaryOccupancyGrid rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D

Message Types	Object Function Name	New Function Name
PointStamped	apply	rosApplyTransform
PoseStamped		
QuaternionStamped		
Vector3Stamped		
TransformStamped		
All messages	showdetails	rosShowDetails

See Also

[rosReadXYZ](#) | [rosReadField](#) | [rosReadRGB](#) | [rosReadCartesian](#)

Introduced in R2019b

readBinaryOccupancyGrid

Read binary occupancy grid

Syntax

```
map = readBinaryOccupancyGrid(msg)
map = readBinaryOccupancyGrid(msg, thresh)
map = readBinaryOccupancyGrid(msg, thresh, val)
```

Description

`map = readBinaryOccupancyGrid(msg)` returns a object by reading the data inside a ROS message, `msg`, which must be a `'nav_msgs/OccupancyGrid'` message. All message data values greater than or equal to the occupancy threshold are set to occupied, `1`, in the map. All other values, including unknown values (`-1`) are set to unoccupied, `0`, in the map.

`map = readBinaryOccupancyGrid(msg, thresh)` specifies a threshold, `thresh`, for occupied values. All values greater than or equal to the threshold are set to occupied, `1`. All other values are set to unoccupied, `0`.

`map = readBinaryOccupancyGrid(msg, thresh, val)` specifies a value to set for unknown values (`-1`). By default, all unknown values are set to unoccupied, `0`.

Input Arguments

msg — `'nav_msgs/OccupancyGrid'` ROS message
OccupancyGrid object handle

`'nav_msgs/OccupancyGrid'` ROS message, specified as a OccupancyGrid object handle.

thresh — **Threshold for occupied values**
50 (default) | scalar

Threshold for occupied values, specified as a scalar. Any value greater than or equal to the threshold is set to occupied, `1`. All other values are set to unoccupied, `0`.

Data Types: double

val — **Value to replace unknown values**
0 (default) | 1

Value to replace unknown values, specified as either `0` or `1`. Unknown message values (`-1`) are set to the given value.

Data Types: double | logical

Output Arguments

map — **Binary occupancy grid**
binaryOccupancyMap object handle

Binary occupancy grid, returned as a object handle. map is converted from a 'nav_msgs/OccupancyGrid' message on the ROS network. The object is a grid of binary values, where 1 indicates an occupied location and 0 indicates an unoccupied location.

See Also

Objects

OccupancyGrid | occupancyMap

Functions

rosReadOccupancyGrid | rosWriteBinaryOccupancyGrid | rosWriteOccupancyGrid

Introduced in R2015a

readCartesian

Read laser scan ranges in Cartesian coordinates

Syntax

```
cart = readCartesian(scan)
cart = readCartesian( ____, Name, Value)
[cart, angles] = readCartesian( ____ )
```

Description

`cart = readCartesian(scan)` converts the polar measurements of the laser scan object, `scan`, into Cartesian coordinates, `cart`. This function uses the metadata in the message, such as angular resolution and opening angle of the laser scanner, to perform the conversion. Invalid range readings, usually represented as NaN, are ignored in this conversion.

Note `readCartesian` will be removed. Use `rosReadCartesian` instead. For more information, see “ROS Message Structure Functions” on page 1-74

`cart = readCartesian(____, Name, Value)` provides additional options specified by one or more `Name, Value` pair arguments. `Name` must appear inside single quotes (' '). You can specify several name-value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

`[cart, angles] = readCartesian(____)` returns the scan angles, `angles`, that are associated with each Cartesian coordinate. Angles are measured counterclockwise around the positive z-axis, with the zero angle along the x-axis. The `angles` is returned in radians and wrapped to the `[-pi, pi]` interval.

Examples

Get Cartesian Coordinates from Laser Scan

Connect to ROS network. Subscribe to a laser scan topic, and receive a message.


```
rosinit('192.168.17.129')
```

```
Initializing global node /matlab_global_node_40737 with NodeURI http://192.168.17.1:56343/
```

```
sub = rossubscriber('/scan');
scan = receive(sub);
```

Read the Cartesian points from the laser scan. Plot the laser scan.

```
cart = readCartesian(scan);
plot(cart(:,1), cart(:,2))
```

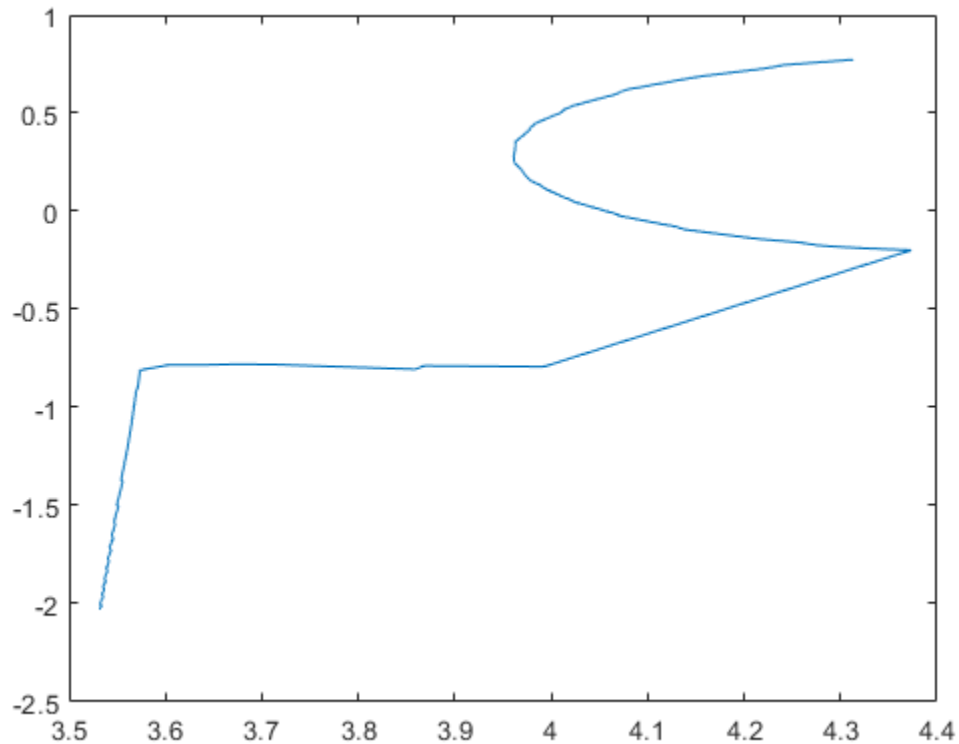

Shutdown ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_40737 with NodeURI http://192.168.17.1:56343/
```

Get Cartesian Coordinates from Laser Scan With Scan Range

Connect to ROS network. Subscribe to a laser scan topic, and receive a message.


```
rosinit('192.168.17.129')
```

```
Initializing global node /matlab_global_node_12735 with NodeURI http://192.168.17.1:56572/
```

```
sub = rossubscriber('/scan');  
scan = receive(sub);
```

Read the Cartesian points from the laser scan with specified range limits. Plot the laser scan.

```
cart = readCartesian(scan, 'RangeLimit', [0.5 6]);  
plot(cart(:,1), cart(:,2))
```

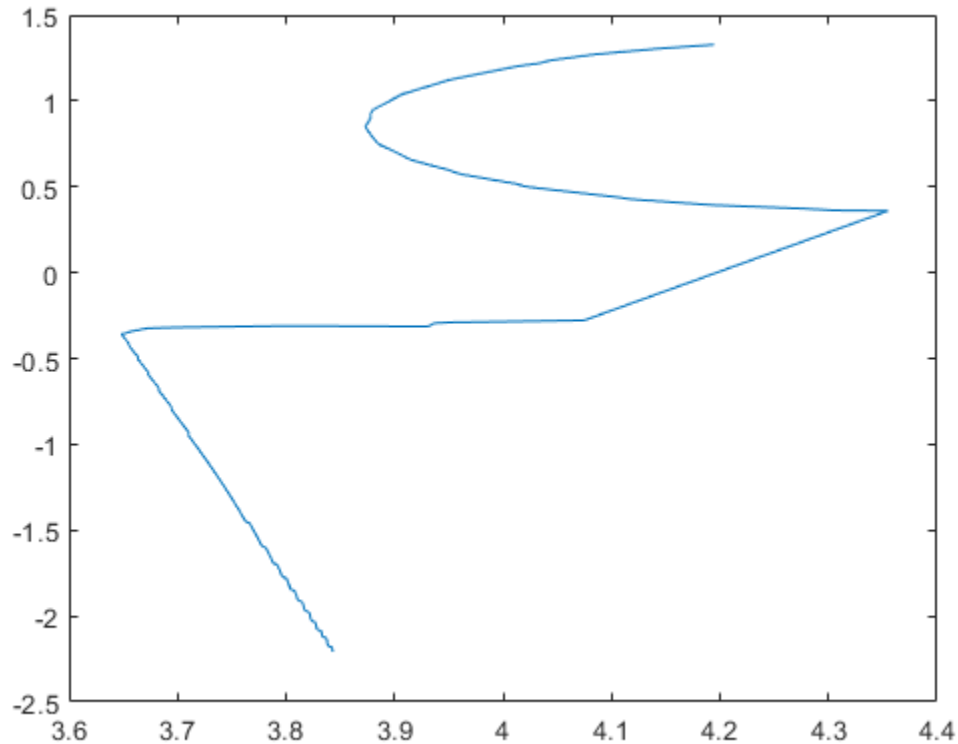

Shutdown ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_12735 with NodeURI http://192.168.17.1:56572/
```

Input Arguments

scan — Laser scan message

LaserScan object handle

'sensor_msgs/LaserScan' ROS message, specified as a LaserScan object handle.

Name-Value Pair Arguments

Specify optional comma-separated pairs of **Name**, **Value** arguments. **Name** is the argument name and **Value** is the corresponding value. **Name** must appear inside quotes. You can specify several name and value pair arguments in any order as **Name1**, **Value1**, ..., **NameN**, **ValueN**.

Example: 'RangeLimits', [-2 2]

RangeLimits — Minimum and maximum range for scan in meters

[scan.RangeMin scan.RangeMax] (default) | 2-element [min max] vector

Minimum and maximum range for a scan in meters, specified as a 2-element [min max] vector. All ranges smaller than min or larger than max are ignored during the conversion to Cartesian coordinates.

Output Arguments

cart — Cartesian coordinates of laser scan

n-by-2 matrix in meters

Cartesian coordinates of laser scan, returned as an *n*-by-2 matrix in meters.

angles — Scan angles for laser scan data

n-by-1 matrix in radians

Scan angles for laser scan data, returned as an *n*-by-1 matrix in radians. Angles are measured counterclockwise around the positive *z*-axis, with the zero angle along the *x*-axis. The `angles` is returned in radians and wrapped to the `[-pi, pi]` interval.

Compatibility Considerations

ROS Message Structure Functions

Not recommended starting in R2021a

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	readImage	rosReadImage
CompressedImage	writeImage	rosWriteImage
LaserScan	readCartesian	rosReadCartesian
	readScanAngles	rosReadScanAngles
	lidarScan	rosReadLidarScan
	plot	rosPlot

Message Types	Object Function Name	New Function Name
PointCloud2	apply readXYZ readRGB readAllFieldNames readField scatter3	rosApplyTransform rosReadXYZ rosReadRGB rosReadAllFieldNames rosReadField rosPlot
Quaternion	readQuaternion	rosReadQuaternion
OccupancyGrid	readBinaryOccupancyGrid readOccupancyGrid writeBinaryOccupancyGrid writeOccupancyGrid	rosReadOccupancyGrid rosReadBinaryOccupancyGrid rosReadOccupancyGrid rosWriteBinaryOccupancyGrid rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D
PointStamped PoseStamped QuaternionStamped Vector3Stamped TransformStamped	apply	rosApplyTransform
All messages	showdetails	rosShowDetails

See Also

rosReadCartesian | rosReadXYZ | rosPlot

Introduced in R2019b

readField

Read point cloud data based on field name

Syntax

```
fielddata = readField(pcloud,fieldname)
```

Description

`fielddata = readField(pcloud,fieldname)` reads the point field from the `PointCloud2` object, `pcloud`, specified by `fieldname` and returns it in `fielddata`. If `fieldname` does not exist, the function displays an error. To preserve the structure of the point cloud data, see “Preserving Point Cloud Structure” on page 1-77.

Note `readField` will be removed. Use `rosReadField` instead. For more information, see “ROS Message Structure Functions” on page 1-77

Examples

Read Specific Field From Point Cloud Message

Load sample ROS messages including a ROS point cloud message, `ptcloud`.

```
exampleHelperROSLoadMessages
```

Read the 'x' field name available on the point cloud message.

```
x = readField(ptcloud,'x');
```

Input Arguments

pcloud — Point cloud

`PointCloud2` object handle

Point cloud, specified as a `PointCloud2` object handle for a `sensor_msgs/PointCloud2` ROS message.

fieldname — Field name of point cloud data

string scalar | character vector

Field name of point cloud data, specified as a string scalar or character vector. This string must match the field name exactly. If `fieldname` does not exist, the function displays an error.

Output Arguments

fielddata — List of field values from point cloud

matrix

List of field values from point cloud, returned as a matrix. Each row of the matrix is a point cloud reading, where n is the number of points and c is the number of values for each point. If the point cloud object being read has the `PreserveStructureOnRead` property set to `true`, the points are returned as an h -by- w -by- c matrix. For more information, see “Preserving Point Cloud Structure” on page 1-77.

Preserving Point Cloud Structure

Point cloud data can be organized in either 1-D lists or in 2-D image styles. 2-D image styles usually come from depth sensors or stereo cameras. The input `PointCloud2` object contains a `PreserveStructureOnRead` property that is either `true` or `false` (default). Suppose you set the property to `true`.

```
pcloud.PreserveStructureOnRead = true;
```

Now calling any read functions (`readXYZ`, `readRGB`, or `readField`) preserves the organizational structure of the point cloud. When you preserve the structure, the output matrices are of size m -by- n -by- d , where m is the height, n is the width, and d is the number of return values for each point. Otherwise, all points are returned as a x -by- d list. This structure can be preserved only if the point cloud is organized.

Compatibility Considerations

ROS Message Structure Functions

Not recommended starting in R2021a

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	<code>readImage</code>	<code>rosReadImage</code>
CompressedImage	<code>writeImage</code>	<code>rosWriteImage</code>
LaserScan	<code>readCartesian</code>	<code>rosReadCartesian</code>
	<code>readScanAngles</code>	<code>rosReadScanAngles</code>
	<code>lidarScan</code>	<code>rosReadLidarScan</code>
	<code>plot</code>	<code>rosPlot</code>

Message Types	Object Function Name	New Function Name
PointCloud2	apply	rosApplyTransform
	readXYZ	rosReadXYZ
	readRGB	rosReadRGB
	readAllFieldNames	rosReadAllFieldNames
	readField	rosReadField
	scatter3	rosPlot
Quaternion	readQuaternion	rosReadQuaternion
OccupancyGrid	readBinaryOccupancyGrid	rosReadOccupancyGrid
	readOccupancyGrid	rosReadBinaryOccupancyGrid
	writeBinaryOccupancyGrid	rosReadOccupancyGrid
	writeOccupancyGrid	rosWriteBinaryOccupancyGrid
		rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D
PointStamped	apply	rosApplyTransform
PoseStamped		
QuaternionStamped		
Vector3Stamped		
TransformStamped		
All messages	showdetails	rosShowDetails

See Also

PointCloud2 | readAllFieldNames

Introduced in R2019b

readImage

Convert ROS image data into MATLAB image

Syntax

```
img = readImage(msg)
[img,alpha] = readImage(msg)
```

Description

`img = readImage(msg)` converts the raw image data in the message object, `msg`, into an image matrix, `img`. You can call `readImage` using either `'sensor_msgs/Image'` or `'sensor_msgs/CompressedImage'` messages.

ROS image message data is stored in a format that is not compatible with further image processing in MATLAB. Based on the specified encoding, this function converts the data into an appropriate MATLAB image and returns it in `img`.

Note `readImage` will be removed. Use `rosReadImage` instead. For more information, see “ROS Message Structure Functions” on page 1-81

`[img,alpha] = readImage(msg)` returns the alpha channel of the image in `alpha`. If the image does not have an alpha channel, then `alpha` is empty.

Examples

Read ROS Image Data

Load sample ROS messages including a ROS image message, `img`.


```
exampleHelperROSLoadMessages
```

Read the ROS image message as a MATLAB® image.

```
image = readImage(img);
```

Display the image.

```
imshow(image)
```

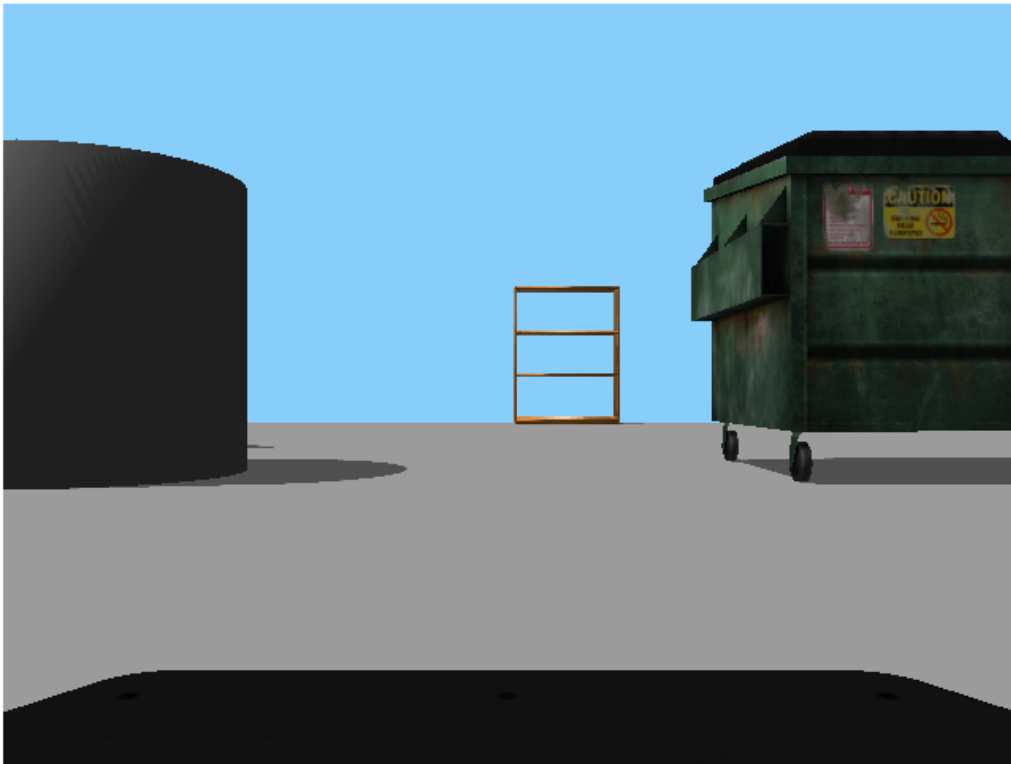

Input Arguments

msg – ROS image message

Image object handle | CompressedImage object handle

'sensor_msgs/Image' or 'sensor_msgs/CompressedImage' ROS image message, specified as an Image or Compressed Image object handle.

Output Arguments

img – Image

grayscale image matrix | RGB image matrix | *m-by-n-by-3* array

Image, returned as a matrix representing a grayscale or RGB image or as an *m-by-n-by-3* array, depending on the sensor image.

alpha – Alpha channel

uint8 grayscale image

Alpha channel, returned as a uint8 grayscale image. If no alpha channel exists, alpha is empty.

Note For CompressedImage messages, you cannot output an Alpha channel.

Supported Image Encodings

ROS image messages can have different encodings. The encodings supported for images are different for 'sensor_msgs/Image' and 'sensor_msgs/CompressedImage' message types. Fewer compressed images are supported. The following encodings for raw images of size M -by- N are supported using the 'sensor_msgs/Image' message type ('**sensor_msgs/CompressedImage**' support is in bold):

- **rgb8, rgba8, bgr8, bgra8**: img is an rgb image of size M -by- N -by-3. The alpha channel is returned in alpha. Each value in the outputs is represented as a uint8.
- **rgb16, rgba16, bgr16, and bgra16**: img is an RGB image of size M -by- N -by-3. The alpha channel is returned in alpha. Each value in the output is represented as a uint16.
- **mono8** images are returned as grayscale images of size M -by- N -by-1. Each pixel value is represented as a uint8.
- **mono16** images are returned as grayscale images of size M -by- N -by-1. Each pixel value is represented as a uint16.
- **32fcX** images are returned as floating-point images of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a single.
- **64fcX** images are returned as floating-point images of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a double.
- **8ucX** images are returned as matrices of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a uint8.
- **8scX** images are returned as matrices of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a int8.
- **16ucX** images are returned as matrices of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a int16.
- **16scX** images are returned as matrices of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a int16.
- **32scX** images are returned as matrices of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a int32.
- **bayer_X** images are returned as either Bayer matrices of size M -by- N -by-1, or as a converted image of size M -by- N -by-3 (Image Processing Toolbox™ is required).

The following encoding for raw images of size M -by- N is supported using the '**sensor_msgs/CompressedImage**' message type:

- **rgb8, rgba8, bgr8, and bgra8**: img is an rgb image of size M -by- N -by-3. The alpha channel is returned in alpha. Each output value is represented as a uint8.

Compatibility Considerations

ROS Message Structure Functions

Not recommended starting in R2021a

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but

message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	readImage	rosReadImage
CompressedImage	writeImage	rosWriteImage
LaserScan	readCartesian readScanAngles lidarScan plot	rosReadCartesian rosReadScanAngles rosReadLidarScan rosPlot
PointCloud2	apply readXYZ readRGB readAllFieldNames readField scatter3	rosApplyTransform rosReadXYZ rosReadRGB rosReadAllFieldNames rosReadField rosPlot
Quaternion	readQuaternion	rosReadQuaternion
OccupancyGrid	readBinaryOccupancyGrid readOccupancyGrid writeBinaryOccupancyGrid writeOccupancyGrid	rosReadOccupancyGrid rosReadBinaryOccupancyGrid rosReadOccupancyGrid rosWriteBinaryOccupancyGrid rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D

Message Types	Object Function Name	New Function Name
PointStamped	apply	rosApplyTransform
PoseStamped		
QuaternionStamped		
Vector3Stamped		
TransformStamped		
All messages	showdetails	rosShowDetails

See Also

[rosReadImage](#) | [rosWriteImage](#) | [readRGB](#)

Introduced in R2019b

readMessages

Read messages from rosbag

Syntax

```
msgs = readMessages(bag)
msgs = readMessages(bag, rows)
msgs = readMessages( ____, "DataFormat", Format)
```

Description

`msgs = readMessages(bag)` returns data from all the messages in the `BagSelection` or `rosbagreader` object `bag`. The messages are returned in a cell array of messages. To get a `BagSelection` object, use `rosbag`.

`msgs = readMessages(bag, rows)` returns data from messages in the rows specified by `rows`. The range of the rows is `[1, bag.NumMessages]`.

`msgs = readMessages(____, "DataFormat", Format)` returns data as a cell array of structures or cell array of message objects using either set of the previous input arguments. Specify `Format` as either `"struct"` or `"object"`.

Using structures can be significantly faster than using message objects, and custom message data can be read directly without loading message definitions using `rosgenmsg`.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the `"DataFormat"` name-value argument to `"struct"`. For more information, see ["ROS Message Structures"](#) on page 1-88.

Examples

Return ROS Messages as a Cell Array

Read rosbag and filter by topic and time.

```
bagselect = rosbag('ex_multiple_topics.bag');
bagselect2 = select(bagselect, 'Time', ...
[bagselect.StartTime bagselect.StartTime + 1], 'Topic', '/odom');
```

Return all messages as a cell array.

```
allMsgs = readMessages(bagselect2);
```

Return the first ten messages as a cell array.

```
firstMsgs = readMessages(bagselect2, 1:10);
```


Read Messages from a rosbag as a Structure

Load the rosbag.

```
bag = rosbag('ros_turtlesim.bag');
```

Select a specific topic.

```
bSel = select(bag, 'Topic', '/turtle1/pose');
```

Read messages as a structure. Specify the `DataFormat` name-value pair when reading the messages. Inspect the first structure in the returned cell array of structures.


```
msgStructs = readMessages(bSel, 'DataFormat', 'struct');  
msgStructs{1}
```

```
ans = struct with fields:  
    MessageType: 'turtlesim/Pose'  
        X: 5.5016  
        Y: 6.3965  
    Theta: 4.5377  
    LinearVelocity: 1  
    AngularVelocity: 0
```

Extract the xy points from the messages and plot the robot trajectory.

Use `cellfun` to extract all the X and Y fields from the structure. These fields represent the xy positions of the robot during the rosbag recording.

```
xPoints = cellfun(@(m) double(m.X),msgStructs);  
yPoints = cellfun(@(m) double(m.Y),msgStructs);  
plot(xPoints,yPoints)
```

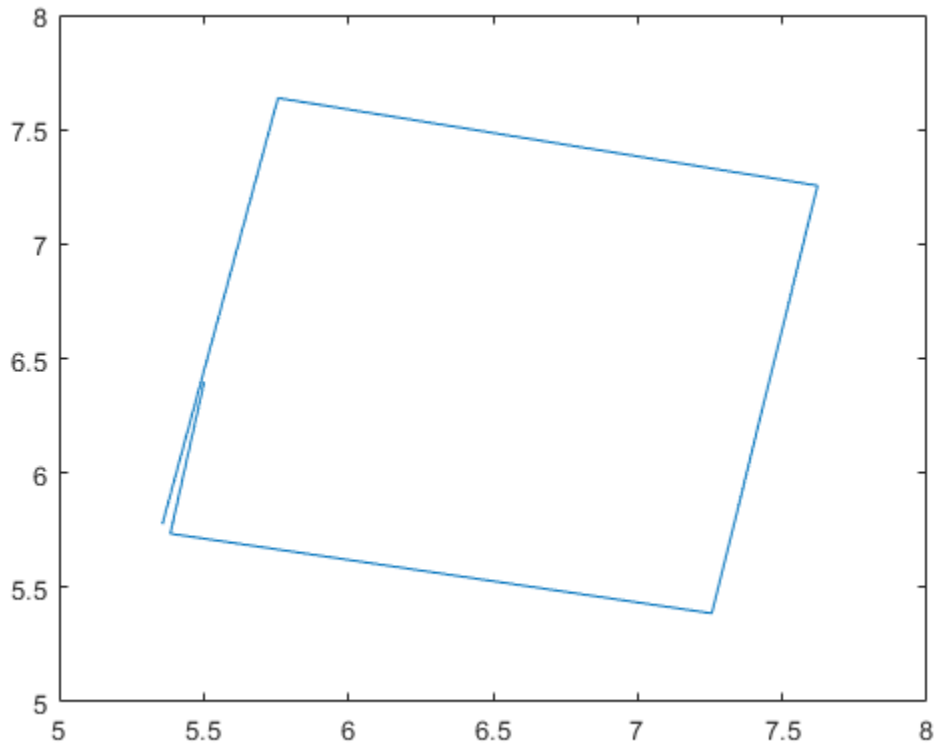

Create rosbag Selection Using rosbagreader Object

Load a rosbag log file and parse out specific messages based on the selected criteria.

Create a rosbagreader object of all the messages in the rosbag log file.

```
bagMsgs = rosbagreader("ros_multi_topics.bag")
```

```
bagMsgs =  
    rosbagreader with properties:
```

```
        FilePath: 'B:\matlab\toolbox\robotics\robotexamples\ros\data\bags\ros_multi_topics.ba  
        StartTime: 201.3400  
        EndTime: 321.3400  
        NumMessages: 36963  
        AvailableTopics: [4x3 table]  
        AvailableFrames: {0x1 cell}  
        MessageList: [36963x4 table]
```

Select a subset of the messages based on their timestamp and topic.

```
bagMsgs2 = select(bagMsgs,...  
    Time=[bagMsgs.StartTime bagMsgs.StartTime + 1],...  
    Topic='/odom')
```


Index of the messages in the rosbag, specified as a `BagSelection` or `rosbagreader` object.

rows — Rows of BagSelection or rosbagreader object

n-element vector

Rows of the `BagSelection` or `rosbagreader` object, specified as an *n*-element vector, where *n* is the number of rows to retrieve messages from. Each entry in the vector corresponds to a numbered message in the bag. The range of the rows is `[1, bag.NumMessage]`.

Output Arguments

msgs — ROS message data

object | cell array of message objects | cell array of structures

ROS message data, returned as an object, cell array of message objects, or cell array of structures. Data comes from either the `BagSelection` object created using `rosbag` or the `rosbagreader` object.

You must specify `"DataFormat", "struct"` in the function to get messages as a cell array of structures. Using structures can be significantly faster than using message objects, and custom message data can be read directly without loading message definitions using `rosgenmsg`.

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the `"DataFormat"` name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as `"struct"` for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see “Improve Performance of ROS Using Message Structures”.

See Also

`select` | `rosbag` | `timeseries` | `rosbagreader`

Introduced in R2019b

readOccupancyGrid

Read occupancy grid message

Syntax

```
map = readOccupancyGrid(msg)
```

Description

`map = readOccupancyGrid(msg)` returns an `occupancyMap` object by reading the data inside a ROS message, `msg`, which must be a `'nav_msgs/OccupancyGrid'` message. All message data values are converted to probabilities from 0 to 1. The unknown values (-1) in the message are set as 0.5 in the map.

Input Arguments

msg — `'nav_msgs/OccupancyGrid'` ROS message

`OccupancyGrid` object handle

`'nav_msgs/OccupancyGrid'` ROS message, specified as an `OccupancyGrid` ROS message object handle.

Output Arguments

map — **Occupancy map**

`occupancyMap` object handle

Occupancy map, returned as an `occupancyMap` object handle.

See Also

Functions

`rosReadBinaryOccupancyGrid` | `rosReadOccupancyMap3D` | `rosWriteBinaryOccupancyGrid` | `rosWriteOccupancyGrid`

Introduced in R2016b

readOccupancyMap3D

Read 3-D map from Octomap ROS message

Syntax

```
map = readOccupancyMap3D(msg)
```

Description

`map = readOccupancyMap3D(msg)` reads the data inside a ROS 'octomap_msgs/Octomap' message to return an `occupancyMap3D` object. All message data values are converted to probabilities from 0 to 1.

Input Arguments

msg — Octomap ROS message
structure

Octomap ROS message, specified as a structure of message type 'octomap_msgs/Octomap'. Get this message by subscribing to an 'octomap_msgs/Octomap' topic using `rossubscriber` on a live ROS network or by creating your own message using `rosmessage`.

Output Arguments

map — 3-D occupancy map
`occupancyMap3D` object handle

3-D occupancy map, returned as an `occupancyMap3D` object handle.

See Also

`occupancyMap3D` | `rosmessage` | `rossubscriber`

Introduced in R2021a

readRGB

Extract RGB values from point cloud data

Syntax

```
rgb = readRGB(pcloud)
```

Description

`rgb = readRGB(pcloud)` extracts the [r g b] values from all points in the `PointCloud2` object, `pcloud`, and returns them as an n -by-3 of n 3-D point coordinates. If the point cloud does not contain the RGB field, this function displays an error. To preserve the structure of the point cloud data, see “Preserving Point Cloud Structure” on page 1-93.

Note `readRGB` will be removed. Use `rosReadRGB` instead. For more information, see “ROS Message Structure Functions” on page 1-93

Examples

Read RGB Values from ROS Point Cloud Message

Load sample ROS messages including a ROS point cloud message, `ptcloud`.

```
exampleHelperROSLoadMessages
```

Read the RGB values from the point cloud.

```
rgb = readRGB(ptcloud);
```

Input Arguments

pcloud — Point cloud

`PointCloud2` object handle

Point cloud, specified as a `PointCloud2` object handle for a 'sensor_msgs/PointCloud2' ROS message.

Output Arguments

rgb — List of RGB values from point cloud

matrix

List of RGB values from point cloud, returned as a matrix. By default, this is an n -by-3 matrix. If the point cloud object being read has the `PreserveStructureOnRead` property set to true, the points are returned as an h -by- w -by-3 matrix. For more information, see “Preserving Point Cloud Structure” on page 1-93.

Preserving Point Cloud Structure

Point cloud data can be organized in either 1-D lists or in 2-D image styles. 2-D image styles usually come from depth sensors or stereo cameras. The input `PointCloud2` object contains a `PreserveStructureOnRead` property that is either `true` or `false` (default). Suppose that you set the property to `true`.

```
pcloud.PreserveStructureOnRead = true;
```

Now calling any read functions (`readXYZ`, `readRGB`, or `readField`) preserves the organizational structure of the point cloud. When you preserve the structure, the output matrices are of size m -by- n -by- d , where m is the height, n is the width, and d is the number of return values for each point. Otherwise, all points are returned as an x -by- d list. This structure can be preserved only if the point cloud is organized.

Compatibility Considerations

ROS Message Structure Functions

Not recommended starting in R2021a

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	<code>readImage</code>	<code>rosReadImage</code>
CompressedImage	<code>writeImage</code>	<code>rosWriteImage</code>
LaserScan	<code>readCartesian</code>	<code>rosReadCartesian</code>
	<code>readScanAngles</code>	<code>rosReadScanAngles</code>
	<code>lidarScan</code>	<code>rosReadLidarScan</code>
	<code>plot</code>	<code>rosPlot</code>

Message Types	Object Function Name	New Function Name
PointCloud2	apply	rosApplyTransform
	readXYZ	rosReadXYZ
	readRGB	rosReadRGB
	readAllFieldNames	rosReadAllFieldNames
	readField	rosReadField
	scatter3	rosPlot
Quaternion	readQuaternion	rosReadQuaternion
OccupancyGrid	readBinaryOccupancyGrid	rosReadOccupancyGrid
	readOccupancyGrid	rosReadBinaryOccupancyGrid
	writeBinaryOccupancyGrid	rosReadOccupancyGrid
	writeOccupancyGrid	rosWriteBinaryOccupancyGrid
		rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D
PointStamped	apply	rosApplyTransform
PoseStamped		
QuaternionStamped		
Vector3Stamped		
TransformStamped		
All messages	showdetails	rosShowDetails

See Also

PointCloud2 | readXYZ | PointCloud2

Introduced in R2019b

readScanAngles

Return scan angles for laser scan range readings

Syntax

```
angles = readScanAngles(scan)
```

Description

`angles = readScanAngles(scan)` calculates the scan angles, `angles`, corresponding to the range readings in the laser scan message, `scan`. Angles are measured counterclockwise around the positive *z*-axis, with the zero angle along the *x*-axis. The `angles` is returned in radians and wrapped to the $[-\pi, \pi]$ interval.

Note `readScanAngles` will be removed. Use `rosReadScanAngles` instead. For more information, see “ROS Message Structure Functions” on page 1-96

Examples

Read Scan Angles from ROS Laser Scan Message

Load sample ROS messages including a ROS laser scan message, `scan`.

```
exampleHelperROSLoadMessages
```

Read the scan angles from the laser scan.

```
angles = readScanAngles(scan)
```

```
angles = 640×1
```

```
-0.5467  
-0.5450  
-0.5433  
-0.5416  
-0.5399  
-0.5382  
-0.5364  
-0.5347  
-0.5330  
-0.5313  
⋮
```

Input Arguments

scan — Laser scan message

LaserScan object handle

'sensor_msgs/LaserScan' ROS message, specified as a LaserScan object handle.

Output Arguments

angles — Scan angles for laser scan data

n-by-1 matrix in radians

Scan angles for laser scan data, returned as an *n*-by-1 matrix in radians. Angles are measured counter-clockwise around the positive *z*-axis, with the zero angle along the *x*-axis. The `angles` is returned in radians and wrapped to the `[-pi, pi]` interval.

Compatibility Considerations

ROS Message Structure Functions

Not recommended starting in R2021a

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	readImage	rosReadImage
CompressedImage	writeImage	rosWriteImage
LaserScan	readCartesian	rosReadCartesian
	readScanAngles	rosReadScanAngles
	lidarScan	rosReadLidarScan
	plot	rosPlot
PointCloud2	apply	rosApplyTransform
	readXYZ	rosReadXYZ
	readRGB	rosReadRGB
	readAllFieldNames	rosReadAllFieldNames
	readField	rosReadField
	scatter3	rosPlot
Quaternion	readQuaternion	rosReadQuaternion

Message Types	Object Function Name	New Function Name
OccupancyGrid	readBinaryOccupancyGrid readOccupancyGrid writeBinaryOccupancyGrid writeOccupancyGrid	rosReadOccupancyGrid rosReadBinaryOccupancyGrid rosReadOccupancyGrid rosWriteBinaryOccupancyGrid rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D
PointStamped PoseStamped QuaternionStamped Vector3Stamped TransformStamped	apply	rosApplyTransform
All messages	showdetails	rosShowDetails

See Also

[rosReadCartesian](#) | [rosReadXYZ](#) | [rosPlot](#)

Introduced in R2019b

readXYZ

Extract XYZ coordinates from point cloud data

Syntax

```
xyz = readXYZ(pcloud)
```

Description

`xyz = readXYZ(pcloud)` extracts the [x y z] coordinates from all points in the `PointCloud2` object, `pcloud`, and returns them as an n -by-3 matrix of n 3-D point coordinates. If the point cloud does not contain the `x`, `y`, and `z` fields, this function returns an error. Points that contain NaN are preserved in the output. To preserve the structure of the point cloud data, see “Preserving Point Cloud Structure” on page 1-99.

Note `readXYZ` will be removed. Use `rosReadXYZ` instead. For more information, see “ROS Message Structure Functions” on page 1-99

Examples

Read XYZ Values from ROS Point Cloud Message

Load sample ROS messages including a ROS point cloud message, `ptcloud`.

```
exampleHelperROSLoadMessages
```

Read the XYZ values from the point cloud.

```
xyz = readXYZ(ptcloud);
```

Input Arguments

pcloud — Point cloud

`PointCloud2` object handle

Point cloud, specified as a `PointCloud2` object handle for a 'sensor_msgs/PointCloud2' ROS message.

Output Arguments

xyz — List of XYZ values from point cloud

matrix

List of XYZ values from point cloud, returned as a matrix. By default, this is a n -by-3 matrix. If the point cloud object being read has the `PreserveStructureOnRead` property set to true, the points

are returned as an h -by- w -by-3 matrix. For more information, see “Preserving Point Cloud Structure” on page 1-99.

Preserving Point Cloud Structure

Point cloud data can be organized in either 1-D lists or in 2-D image styles. 2-D image styles usually come from depth sensors or stereo cameras. The input `PointCloud2` object contains a `PreserveStructureOnRead` property that is either `true` or `false` (default). Suppose you set the property to `true`.

```
pcloud.PreserveStructureOnRead = true;
```

Now calling any read functions (`readXYZ`, `readRGB`, or `readField`) preserves the organizational structure of the point cloud. When you preserve the structure, the output matrices are of size m -by- n -by- d , where m is the height, n is the width, and d is the number of return values for each point. Otherwise, all points are returned as a x -by- d list. This structure can be preserved only if the point cloud is organized.

Compatibility Considerations

ROS Message Structure Functions

Not recommended starting in R2021a

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	<code>readImage</code>	<code>rosReadImage</code>
CompressedImage	<code>writeImage</code>	<code>rosWriteImage</code>
LaserScan	<code>readCartesian</code>	<code>rosReadCartesian</code>
	<code>readScanAngles</code>	<code>rosReadScanAngles</code>
	<code>lidarScan</code>	<code>rosReadLidarScan</code>
	<code>plot</code>	<code>rosPlot</code>

Message Types	Object Function Name	New Function Name
PointCloud2	apply	rosApplyTransform
	readXYZ	rosReadXYZ
	readRGB	rosReadRGB
	readAllFieldNames	rosReadAllFieldNames
	readField	rosReadField
	scatter3	rosPlot
Quaternion	readQuaternion	rosReadQuaternion
OccupancyGrid	readBinaryOccupancyGrid	rosReadOccupancyGrid
	readOccupancyGrid	rosReadBinaryOccupancyGrid
	writeBinaryOccupancyGrid	rosReadOccupancyGrid
	writeOccupancyGrid	rosWriteBinaryOccupancyGrid
		rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D
PointStamped	apply	rosApplyTransform
PoseStamped		
QuaternionStamped		
Vector3Stamped		
TransformStamped		
All messages	showdetails	rosShowDetails

See Also

rosReadRGB | rosReadCartesian | rosReadAllFieldNames

Introduced in R2019b

receive

Wait for new ROS message

Syntax

```
msg = receive(sub)
msg = receive(sub,timeout)
[msg,status,statustext] = receive( __ )
```

Description

`msg = receive(sub)` waits for MATLAB to receive a topic message from the specified subscriber, `sub`, and returns it as `msg`.

`msg = receive(sub,timeout)` specifies in `timeout` the number of seconds to wait for a message. If a message is not received within the timeout limit, this function will display an error.

`[msg,status,statustext] = receive(__)` returns a `status` indicating whether a message has been received successfully, and a `statustext` that captures additional information about the `status`, using any of the arguments from the previous syntaxes. If an error condition occurs, such as no message received within the specified timeout, the `status` will be `false`, and this function will not display an error.

Examples

Create A Subscriber and Get Data From ROS

Connect to a ROS network. Set up a sample ROS network. The `'/scan'` topic is being published on the network.

```
rosinit
```

```
Launching ROS Core...
..Done in 2.6834 seconds.
Initializing ROS master on http://172.30.135.140:50646.
Initializing global node /matlab_global_node_49537 with NodeURI http://bat6340win64:51147/
```

```
exampleHelperROSCreateSampleNetwork
```

Create a subscriber for the `'/scan'` topic using message structures. Wait for the subscriber to register with the master.

```
sub = rossubscriber('/scan','DataFormat','struct');
pause(1);
```

Receive data from the subscriber as a ROS message structure. Specify a 10-second timeout.

```
[msg2,status,statustext] = receive(sub,10)

msg2 = struct with fields:
    MessageType: 'sensor_msgs/LaserScan'
```

```
Header: [1x1 struct]
AngleMin: -0.5467
AngleMax: 0.5467
AngleIncrement: 0.0017
TimeIncrement: 0
ScanTime: 0.0330
RangeMin: 0.4500
RangeMax: 10
Ranges: [640x1 single]
Intensities: []
```

```
status = logical
        1
```

```
statustext =
'success'
```

Shutdown the timers used by sample network.

```
exampleHelperROSShutdownSampleNetwork
```

Shut down ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_49537 with NodeURI http://bat6340win64:51147/
Shutting down ROS master on http://172.30.135.140:50646.
```

Input Arguments

sub — ROS subscriber

Subscriber object handle

ROS subscriber, specified as a `Subscriber` object handle. You can create the subscriber using `rossubscriber`.

timeout — Timeout for receiving a message

scalar in seconds

Timeout for receiving a message, specified as a scalar in seconds.

Output Arguments

msg — ROS message

Message object handle | structure

ROS message, returned as a `Message` object handle or structure.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 1-103.

status — Status of the message reception

logical scalar

Status of the message reception, returned as a `logical` scalar. If no message is received, status will be `false`.

Note Use the `status` output argument when you use `receive` in the entry-point function for code generation. This will avoid runtime errors outputs the status instead, which can be reacted to in the calling code.

statustext — Status text associated with the message reception status

character vector

Status text associated with the message reception, returned as one of the following:

- `'success'` — The message was successfully received.
- `'timeout'` — The message was not received within the specified timeout.
- `'unknown'` — The message was not received due to unknown errors.

Tips

For code generation:

- Use the `status` output argument when you call `receive` in the entry-point function. This will avoid runtime errors and instead, outputs the status of message reception, which can be reacted to in the calling code.

Compatibility Considerations**ROS Message Structures**

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the `"DataFormat"` name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as `"struct"` for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see “Improve Performance of ROS Using Message Structures”.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for `struct` messages.
- To monitor the message reception status and react in the calling code, use the `status` output argument. This will avoid runtime errors when no message is received.

See Also

`send` | `rosmessage` | `rostopic` | `rossubscriber` | `rospublisher`

Topics

“Exchange Data with ROS Publishers and Subscribers”

Introduced in R2019b

ros2

Retrieve information about ROS 2 network

Syntax

```
ros2 msg list
ros2 msg show msgType
ros2 node list
ros2 topic list
ros2 service list
ros2 service type svcname
ros2 bag info folderpath
msgList = ros2("msg","list")
msgInfo = ros2("msg","show",msgType)
nodeList = ros2("node","list")
topicList = ros2("topic","list")
serviceList = ros2("service","list")
serviceTypes = ros2("service","type",svcname)
nodeList = ros2("node","list","DomainID",ID)
topicList = ros2("topic","list","DomainID",ID)
bag2info = ros2("bag","info",folderpath)
```

Description

`ros2 msg list` returns a list of all available ROS 2 message types that can be used in MATLAB.

`ros2 msg show msgType` provides the definition of the ROS 2 message, `msgType`.

`ros2 node list` lists nodes on the ROS 2 network.

`ros2 topic list` lists topic names with registered publishers or subscribers on the ROS 2 network.

`ros2 service list` lists service names that are registered on the ROS 2 network through either servers or clients.

`ros2 service type svcname` lists service types that are registered on the ROS 2 network for the provided `svcname`.

`ros2 bag info folderpath` displays the information about the contents of the `ros2bag` at `folderpath` in the MATLAB Command Window. The information include the contents of the `bag2info` structure.

Note If the ROS 2 bag log file contains custom messages, generate MATLAB interfaces to ROS 2 custom messages using `ros2genmsg` function before using this command.

`msgList = ros2("msg","list")` returns a list of all available ROS 2 message types that can be used in MATLAB.

`msgInfo = ros2("msg","show",msgType)` provides the definition of the ROS 2 message, `msgType`.

`nodeList = ros2("node","list")` lists nodes on the ROS 2 network.

`topicList = ros2("topic","list")` lists topic names with registered publishers or subscribers on the ROS 2 network.

`serviceList = ros2("service","list")` lists service names that are registered on the ROS 2 network through either servers or clients.

`serviceTypes = ros2("service","type",svcname)` lists service types that are registered on the ROS 2 network for the provided `svcname`.

`nodeList = ros2("node","list","DomainID",ID)` lists nodes on the ROS 2 network for the specified network domain ID. By default, the value of "DomainID" is 0 unless otherwise specified by the `ROS_DOMAIN_ID` environment variable.

`topicList = ros2("topic","list","DomainID",ID)` lists topic names with registered publishers or subscribers on the ROS 2 network for the specified network domain ID.

Note The "DomainID" name-value pair applies only to information gathered from the active network, such as the node and topic list, and not to static ROS 2 data such as message information.

The first time `ros2` is called for a specific domain ID not all information on the network may be immediately available. If incomplete network information is returned from `ros2`, wait for a short time before trying again.

`bag2info = ros2("bag","info",folderpath)` returns information about the contents of the `ros2bag` as a structure, `bag2info` at `folderpath`.

Note If the ROS 2 bag log file contains custom messages, generate MATLAB interfaces to ROS 2 custom messages using `ros2genmsg` function before using this function.

Examples

Get Definition of ROS 2 Message

Show the definition of the `geometry_msgs/Accel` message.

```
ros2 msg show geometry_msgs/Accel
```

```
# This expresses acceleration in free space broken into its linear and angular parts.
Vector3 linear
Vector3 angular
```

Get Definition of ROS 2 Message

Show the definition of the `geometry_msgs/Accel` message.

```
ros2 msg show geometry_msgs/Accel
```

```
# This expresses acceleration in free space broken into its linear and angular parts.
Vector3 linear
Vector3 angular
```

Get List of ROS 2 Nodes

Create sample node, myNode, on the ROS 2 network.

```
node = ros2node("myNode");
```

Lists the nodes on the network.

```
ros2 node list
```

```
/myNode
```

Remove myNode from the network.

```
delete(node)
```

Get List of ROS 2 Topics

List the available ROS 2 topics.

```
ros2 topic list
```

```
/parameter_events
```

Input Arguments

msgType — Message type

string scalar | character vector

Message type, specified as a string scalar or character vector. The string is case-sensitive and no partial matches are allowed. It must match a message on the list given by calling `ros2("msg","list")`.

Function syntax:

```
Example: ros2("msg","show","sensor_msgs/LaserScan")
```

Command syntax:

```
Example: ros2 msg show sensor_msgs/LaserScan
```

Data Types: char | string

svcname — Service name

string scalar | character vector

Service name, specified as a string or character vector. The string is case-sensitive and no partial matches are allowed. It must match a service on the list given by calling `ros2("service","list")`.

Function syntax:

```
Example: ros2("service","type","/example_service")
```

Command syntax:

```
Example: ros2 service type /example_service
```

Data Types: char | string

folderpath — Path to ros2bag files

string scalar | character vector

Path to the ros2bag files, specified as a string scalar or character vector.

Note folderpath location must contain ROS 2 bag file (.db3) and metadata.yaml, which holds the meta information about the bag file. The folder name must be same as the ROS 2 bag file name.

Function syntax:

```
Example: ros2("bag","info","C:\Users\Jack\MATLAB\EM\alltopics")
```

Command syntax:

```
Example: ros2 bag info C:\Users\Jack\MATLAB\EM\alltopics
```

Data Types: char | string

ID — Domain identification of the network

non-negative scalar integer between 0 and 232

The domain identification of the ROS 2 network, specified as a non-negative scalar integer between 0 and 232.

Example: 2

Data Types: double

Output Arguments

msgList — List of all message types available in MATLAB

cell array of character vectors

List of all message types available in MATLAB, returned as a cell array of character vectors.

msgInfo — Details of message definition

character vector

Details of the information inside the ROS message definition, returned as a character vector.

topicList — List of topics on the ROS 2 network

cell array of character vectors

List of topics on the ROS 2 network, returned as a cell array of character vectors.

serviceList – List of services on the ROS 2 network

cell array of character vectors

List of services on the ROS 2 network, returned as a cell array of character vectors.

nodeList – List of node names available

cell array of character vectors

List of node names available, returned as a cell array of character vectors.

bag2info – Information about contents of ros2bag

structure

Information about contents of the ros2bag, returned as a structure. This structure contains fields related to the ros2bag log file and its contents. A sample output for a ros2bag as a structure is:

```

    Path: 'C:\Users\Jack\MATLAB\EM\alltopics\alltopics.db3'
    Version: '1'
    StorageId: 'sqlite3'
    Duration: 102.396644003
        Start: [1x1 struct]
        End: [1x1 struct]
    Size: 4965433
    Messages: 36503
        Types: [5x1 struct]
        Topics: [5x1 struct]

```

Data Types: struct

See Also

[ros2node](#) | [ros2publisher](#) | [ros2subscriber](#) | [ros2message](#)

Introduced in R2019b

ros2genmsg

Generate custom messages from ROS 2 definitions

Syntax

```
ros2genmsg(folderpath)
ros2genmsg(folderpath,Name,Value)
```

Description

`ros2genmsg(folderpath)` generates ROS 2 custom messages in MATLAB by reading ROS 2 custom messages and service definitions in the specified folder path. The function expects one or more ROS 2 package folders inside the folder path. These packages contain the message definitions in `.msg` files and the service definitions in `.srv` files.

After calling this function, you can send and receive your custom messages in MATLAB like all other supported messages. You can create these messages using `ros2message` or view the list of messages by calling `ros2 msg list`.

Note

- When generating custom messages for ROS 2, you must build the ROS 2 packages. This requires you to have CMake and a C++ compiler for your platform. For more information, see “ROS System Requirements”
 - The custom messages from the ROS 2 definitions have to be regenerated for every new release.
-

`ros2genmsg(folderpath,Name,Value)` specifies additional options using one or more name-value pair arguments.

Examples


ROS 2 Custom Message Support

Custom messages are user-defined messages that you can use to extend the set of message types currently supported in ROS 2. If you are sending and receiving supported message types, you do not need to use custom messages. To see a list of supported message types, call `ros2 msg list` in the MATLAB® Command Window. For more information about supported ROS 2 messages, see “Work with Basic ROS 2 Messages”.

If this is your first time working with ROS 2 custom messages, check the “ROS System Requirements”.

Custom messages Contents

ROS 2 custom messages are specified in ROS 2 package folders that contain a `msg` directory. The `msg` folder contains all your custom message type definitions. For example, the package `example_b_msgs`, within the `custom` folder, has the below folder and file structure.

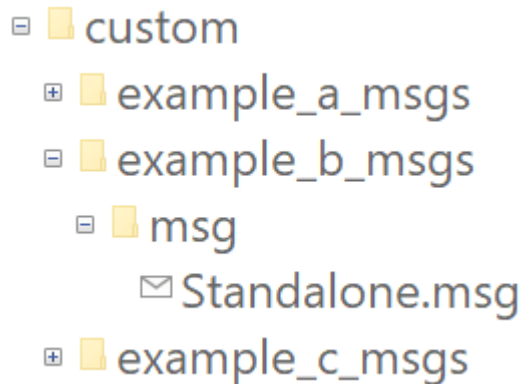

The package contains one custom message type, `Standalone.msg`. MATLAB uses these files to generate the necessary files for using the custom messages contained in the package. For more information on message naming conventions, see ROS 2 Interface Definition.

In this example, you go through the procedure for creating ROS 2 custom messages in MATLAB®. You must have a ROS 2 package that contains the required `msg` file.

After ensuring that your custom message package is correct, note the folder path location, and then, call `ros2genmsg` with the specified path. The following example provided three messages `example_package_a`, `example_package_b`, and `example_package_c` that have dependencies. This example also illustrates that you can use a folder containing multiple messages and generate them all at the same time.

To set up custom messages in MATLAB, open MATLAB in a new session. Place your custom message folder in a location and note the folder path. In this example, the custom message interface folder is present in the current directory. If you are creating custom message packages in a separate location, provide the appropriate path to the folder that contains the custom message packages.

```
folderPath = fullfile(pwd,"custom");
copyfile("example_*_msgs",folderPath);
```

Specify the folder path for custom message files and call `ros2genmsg` to create custom messages for MATLAB.

```
ros2genmsg(folderPath)
```

```
Identifying message files in folder 'U:/Documents/MATLAB/Examples/ros-ex44405863/custom'.Done.
Validating message files in folder 'U:/Documents/MATLAB/Examples/ros-ex44405863/custom'.Done.
[3/3] Generating MATLAB interfaces for custom message packages... Done.
Running colcon build in folder 'U:/Documents/MATLAB/Examples/ros-ex44405863/custom/matlab_msg_gen'
Build in progress. This may take several minutes...
Build succeeded.build log
```

Call `ros2 msg list` to verify creation of new custom messages.

You can now use the above created custom message as the standard messages. For more information on sending and receiving messages, see “Exchange Data with ROS 2 Publishers and Subscribers”.

Create a publisher to use `example_package_b/StandAlone` message.

```
node = ros2node("/node_1");
pub = ros2publisher(node, "/example_topic", "example_b_msgs/StandAlone");
```

Create a subscriber on the same topic.

```
sub = ros2subscriber(node, "/example_topic");
```

Create a message and send the message.

```
custom_msg = ros2message("example_b_msgs/StandAlone");
custom_msg.int_property = uint32(12);
custom_msg.string_property='This is ROS 2 custom message example';
send(pub, custom_msg);
pause(3)    % Allow a few seconds for the message to arrive
```

Use `LatestMessage` field to know the recent message received by the subscriber.

```
sub.LatestMessage

ans = struct with fields:
  int_property: 12
  string_property: 'This is ROS 2 custom message example'
```

Remove the created ROS objects.

```
clear node pub sub
```

Input Arguments

folderpath — Path to ROS interfaces folder

string scalar | character vector

Path to the ROS interfaces folder, which is the parent folder of ROS message packages, specified as a string scalar or character vector. The parent folder should contain a `package.xml` file and package folders. These folders contain a `/msg` folder with `.msg` files for message definitions and a `/srv` folder with `.srv` files for service definitions. For more information, see About ROS 2 Interfaces.

Example: `"/opt/ros2/dashing/share"`

Data Types: `char` | `string`

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

Example: `'BuildConfiguration', 'fasterruns'`

BuildConfiguration — Build configuration

`'fasterbuilds'` (default) | `'fasterruns'`

Build configuration, specified as the comma-separated pair consisting of 'BuildConfiguration' and a character vector or string scalar containing 'fasterbuilds' or 'fasterruns'.

- 'fasterbuilds' — Build the message libraries with compiler optimizations for shorter build times.
- 'fasterruns' — Build the message libraries with compiler optimizations for faster execution.

Example: `ros2genmsg("/opt/ros2/dashing/share", 'BuildConfiguration', 'fasterruns')`

Data Types: char | string

Limitations

Restart Nodes

- After generating custom messages, restart any existing ROS 2 nodes.

Code Generation with custom messages:

- Custom message and service types can be used with ROS 2 functionality for generating C++ code for a standalone ROS 2 node. The generated code (.tgz archive) will include definitions for the custom messages, but it will not include the ROS 2 custom message packages. When the generated code is built in the destination, it expects the custom message packages to be available in the colcon workspace which should be your current working directory. Please ensure that you either install or copy the custom message package to your system before building the generated code.

MATLAB Compiler

- ROS 2 custom messages and the `ros2genmsg` function are not supported with MATLAB Compiler™.

See Also

`ros2message` | `ros2`

Topics

“ROS Custom Message Support”

“ROS 2 Custom Message Support”

External Websites

About ROS 2 Interfaces

Download Python

Download CMake

Introduced in R2019b

ros2message

Create ROS 2 message structures

Syntax

```
msg = ros2message(msgType)
```

Description

`msg = ros2message(msgType)` creates a structure compatible with ROS 2 messages of type `msgType`.

Examples

Create a String Message

Create a ROS 2 string message.

```
strMsg = ros2message('std_msgs/String')  
  
strMsg = struct with fields:  
  MessageType: 'std_msgs/String'  
  data: ''
```

Create an empty laser scan message

Create an empty ROS 2 laser scan message.

```
scanMsg = ros2message("sensor_msgs/LaserScan")  
  
scanMsg = struct with fields:  
  MessageType: 'sensor_msgs/LaserScan'  
  header: [1x1 struct]  
  angle_min: 0  
  angle_max: 0  
  angle_increment: 0  
  time_increment: 0  
  scan_time: 0  
  range_min: 0  
  range_max: 0  
  ranges: 0  
  intensities: 0
```

Input Arguments

msgType — Message type for a ROS 2 topic

character vector

Message type for a ROS 2 topic, specified as a character vector.

Output Arguments

msg — ROS 2 message for a given topic

object handle

ROS 2 message for a given topic, returned as an object handle.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

This function supports C/C++ code generation with the limitations:

- For messages with fields containing cell array of strings, such as `sensor_msgs/JointState`, accessing those fields in the MATLAB function is not supported.

See Also

`ros2node` | `ros2publisher` | `ros2subscriber` | `ros2`

Introduced in R2019b

rosaction

Retrieve information about ROS actions

Syntax

```
rosaction list
rosaction info actionname
rosaction type actionname

actionlist = rosaction("list")
actioninfo = rosaction("info",actionname)
actiontype = rosaction("type",actionname)
```

Description

`rosaction list` returns a list of available ROS actions from the ROS network.

`rosaction info actionname` returns the action type, message types, action server, and action clients for the specified action name.

`rosaction type actionname` returns the action type for the specified action name.

`actionlist = rosaction("list")` returns a list of available ROS actions from the ROS network.

`actioninfo = rosaction("info",actionname)` returns a structure containing the action type, message types, action server, and action clients for the specified action name.

`actiontype = rosaction("type",actionname)` returns the action type for the specified action name.

Examples

Get Information About ROS Actions

Get information about ROS actions that are available from the ROS network. You must be connected to a ROS network using `rosinit`.

Action types must be set up beforehand with a ROS action server running on the network. You must have the set up `'/fibonacci'` action type. To run this action server, use the following command on the ROS system:

```
roslaunch actionlib_tutorials fibonacci_server
```

Connect to a ROS network. You must be connected to a ROS network to gather information about what actions are available. Replace `ipaddress` with your network address.

```
ipaddress = '192.168.17.129';
rosinit(ipaddress,11311)
```

```
Initializing global node /matlab_global_node_04165 with NodeURI http://192.168.17.1:60617/
```


List the actions available on the network. The only action set up on this network is the '/fibonacci' action.

```
rosaction list
```

```
/fibonacci
```

Get information about a specific ROS action type. The action type, message types, action server, and clients are displayed.

```
rosaction info /fibonacci
```

```
Action Type: actionlib_tutorials/Fibonacci
```

```
Goal Message Type: actionlib_tutorials/FibonacciGoal
```

```
Feedback Message Type: actionlib_tutorials/FibonacciFeedback
```

```
Result Message Type: actionlib_tutorials/FibonacciResult
```

```
Action Server:
```

```
* /fibonacci (http://192.168.17.129:34793/)
```

```
Action Clients: None
```

Disconnect from the ROS network.

```
roshUTDOWN
```

```
Shutting down global node /matlab_global_node_04165 with NodeURI http://192.168.17.1:60617/
```

Input Arguments

actionname — ROS action name

string scalar | character vector

ROS action name, specified as a string scalar or character vector. The action name must match one of the topics that `rosaction("list")` outputs.

Output Arguments

actionlist — List of actions available

cell array of character vectors

List of actions available on the ROS network, returned as a cell array of character vectors.

actioninfo — Information about a ROS action

structure

Information about a ROS action, returned as a structure. `actioninfo`, which contains the following fields:

- ActionType
- GoalMessageType
- FeedbackMessageType

- ResultMessageType
- ActionServer
- ActionClients

For more information about ROS actions, see “ROS Actions Overview”.

actiontype – Type of ROS action

character vector

Type of ROS action, returned as a character vector.

See Also

sendGoal | cancelGoal | waitForServer | rosmmessage | rostopic

Topics

“ROS Actions Overview”

“Move a Turtlebot Robot Using ROS Actions”

Introduced in R2019b

rosAddons

Install add-ons for ROS

Syntax

```
rosAddons
```

Description

rosAddons allows you to download and install add-ons for ROS Toolbox. Use this function to open the Add-on Explorer to browse the available add-ons.

Examples

Install Add-ons for ROS Toolbox™

```
rosAddons
```

See Also

Topics

“ROS Custom Message Support”

“Get and Manage Add-Ons”

“Manage Add-Ons”

Introduced in R2019b

rosApplyTransform

Transform message entities into target frame

Syntax

```
tfentity = rosApplyTransform(tfmsg,entity)
```

Description

`tfentity = rosApplyTransform(tfmsg,entity)` applies the transformation represented by the 'TransformStamped' ROS message to the input message object `entity`.

This function determines the message type of `entity` and applies the appropriate transformation method to it.

Input Arguments

tfmsg — Transformation message

TransformStamped ROS message structure

Transformation message, specified as a TransformStamped ROS message handle. The `tfmsg` is a ROS message of type: 'geometry_msgs/TransformStamped'.

entity — ROS message

message structure

ROS message, specified as a message structure.

Supported messages are:

- geometry_msgs/PointStamped
- sensor_msgs/PointCloud2
- geometry_msgs/PoseStamped
- geometry_msgs/QuaternionStamped
- geometry_msgs/Vector3Stamped

Output Arguments

tfentity — Transformed ROS message

message structure

Transformed ROS message, returned as a message structure.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Usage in MATLAB Function block is not supported.

See Also

rostf | rosbag

Introduced in R2021a

rosbag

Open and parse rosbag log file

Syntax

```
bag = rosbag(filename)

bagInfo = rosbag('info',filename)
rosbag info filename
```

Description

`bag = rosbag(filename)` creates an indexable `BagSelection` object, `bag`, that contains all the message indexes from the rosbag at path `filename`. To get a `BagSelection` object, use `rosbag`. To access the data, call `readMessages` or `timeseries` to extract relevant data.

A rosbag, or bag, is a file format for storing ROS message data. They are used primarily to log messages within the ROS network. You can use these bags for offline analysis, visualization, and storage. See the ROS Wiki page for more information about rosbags.

`bagInfo = rosbag('info',filename)` returns information as a structure, `bagInfo`, which is about the contents of the rosbag at `filename`.

`rosbag info filename` displays information in the MATLAB Command Window about the contents of the rosbag at `filename`. The information includes the number of messages, start and end times, topics, and message types.

Examples

Retrieve Information from rosbag

Retrieve information from the rosbag. Specify the full path to the rosbag if it is not already available on the MATLAB® path.

```
bagselect = rosbag('ex_multiple_topics.bag');
```

Select a subset of the messages, filtered by time and topic.

```
bagselect2 = select(bagselect, 'Time', ...
    [bagselect.StartTime bagselect.StartTime + 1], 'Topic', '/odom');
```

Display rosbag Information from File

To view information about a rosbag log file, use `rosbag info filename`, where `filename` is a rosbag (.bag) file.

```
rosbag info 'ex_multiple_topics.bag'
```

```

Path:      C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex32890909\ex_multiple_topics.
Version:   2.0
Duration:  2:00s (120s)
Start:     Dec 31 1969 19:03:21.34 (201.34)
End:       Dec 31 1969 19:05:21.34 (321.34)
Size:      23.6 MB
Messages:  36963
Types:     gazebo_msgs/LinkStates [48c080191eb15c41858319b4d8a609c2]
           nav_msgs/Odometry      [cd5e73d190d741a2f92e81eda573aca7]
           rosgraph_msgs/Clock    [a9c97c1d230cfc112e270351a944ee47]
           sensor_msgs/LaserScan  [90c7ef2dc6895d81024acba2ac42f369]
Topics:    /clock                    12001 msgs : rosgraph_msgs/Clock
           /gazebo/link_states    11999 msgs : gazebo_msgs/LinkStates
           /odom                  11998 msgs : nav_msgs/Odometry
           /scan                   965 msgs  : sensor_msgs/LaserScan

```

Get Transformations from rosvbag File

Get transformations from rosvbag (.bag) files by loading the rosvbag and checking the available frames. From these frames, use `getTransform` to query the transformation between two coordinate frames.

Load the rosvbag.

```
bag = rosvbag('ros_turtlesim.bag');
```

Get a list of available frames.

```
frames = bag.AvailableFrames;
```

Get the latest transformation between two coordinate frames.

```
tf = getTransform(bag, 'world', frames{1});
```

Check for a transformation available at a specific time and retrieve the transformation. Use `canTransform` to check if the transformation is available. Specify the time using `rostime`.

```
tfTime = rostime(bag.StartTime + 1);
if (canTransform(bag, 'world', frames{1}, tfTime))
    tf2 = getTransform(bag, 'world', frames{1}, tfTime);
end
```

Read Messages from a rosvbag as a Structure

Load the rosvbag.

```
bag = rosvbag('ros_turtlesim.bag');
```

Select a specific topic.

```
bSel = select(bag, 'Topic', '/turtle1/pose');
```

Read messages as a structure. Specify the `DataFormat` name-value pair when reading the messages. Inspect the first structure in the returned cell array of structures.


```
msgStructs = readMessages(bSel, 'DataFormat', 'struct');
msgStructs{1}
```

```
ans = struct with fields:
  MessageType: 'turtlesim/Pose'
  X: 5.5016
  Y: 6.3965
  Theta: 4.5377
  LinearVelocity: 1
  AngularVelocity: 0
```

Extract the xy points from the messages and plot the robot trajectory.

Use `cellfun` to extract all the X and Y fields from the structure. These fields represent the xy positions of the robot during the rosbag recording.

```
xPoints = cellfun(@(m) double(m.X),msgStructs);
yPoints = cellfun(@(m) double(m.Y),msgStructs);
plot(xPoints,yPoints)
```

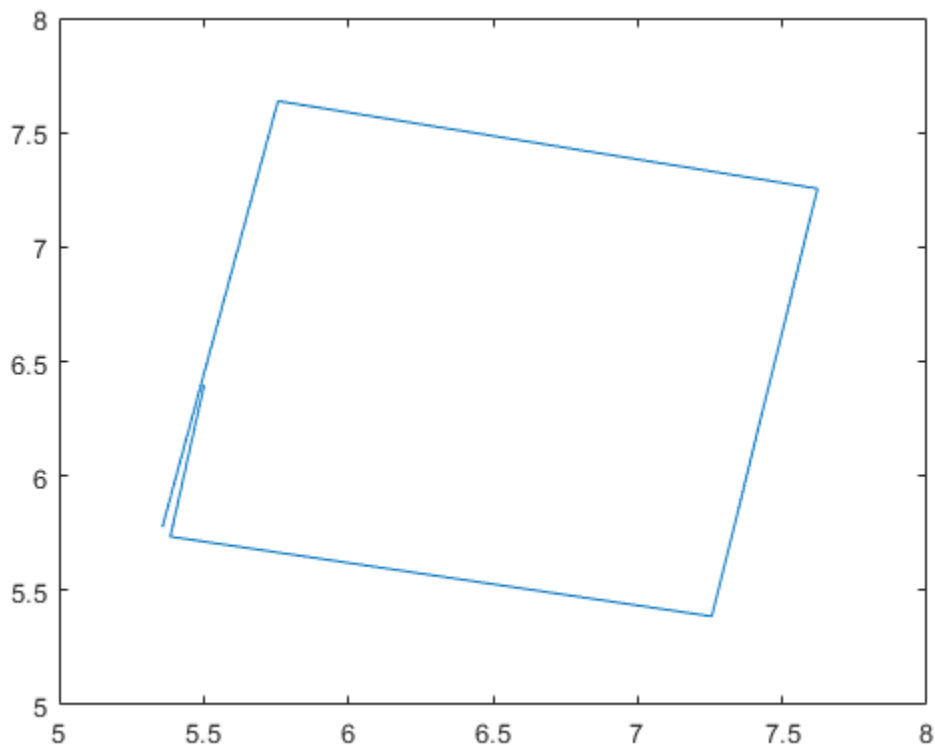

Input Arguments

filename — Name of rosbag file and path

string scalar | character vector

Name of file and path for the rosbag you want to access, specified as a string scalar or character vector. This path can be relative or absolute.

Output Arguments

bag — Selection of rosvbag messages

BagSelection object handle

Selection of rosvbag messages, returned as a BagSelection object handle.

bagInfo — Information about contents of rosvbag

structure

Information about the contents of the rosvbag, returned as a structure. This structure contains fields related to the rosvbag file and its contents. A sample output for a rosvbag as a structure is:

```
Path:      \ros\data\ex_multiple_topics.bag
Version:   2.0
Duration:  2:00s (120s)
Start:     Dec 31 1969 19:03:21.34 (201.34)
End:       Dec 31 1969 19:05:21.34 (321.34)
Size:      23.6 MB
Messages:  36963
Types:     gazebo_msgs/LinkStates [48c080191eb15c41858319b4d8a609c2]
           nav_msgs/Odometry      [cd5e73d190d741a2f92e81eda573aca7]
           rosvgraph_msgs/Clock   [a9c97c1d230cfc112e270351a944ee47]
           sensor_msgs/LaserScan  [90c7ef2dc6895d81024acba2ac42f369]
Topics:    /clock                 12001 msgs  : rosvgraph_msgs/Clock
           /gazebo/link_states    11999 msgs  : gazebo_msgs/LinkStates
           /odom                  11998 msgs  : nav_msgs/Odometry
           /scan                   965 msgs   : sensor_msgs/LaserScan
```

See Also

[select](#) | [readMessages](#) | [canTransform](#) | [getTransform](#) | [timeseries](#) | [BagSelection](#)

Introduced in R2019b

rostduration

Create a ROS duration object

Syntax

```
dur = rostduration
dur = rostduration(totalSecs)
dur = rostduration(secs,nsecs)
dur = rostduration ( ____, "DataFormat", "struct")
```

Description

`dur = rostduration` returns a default ROS duration object. The properties for seconds and nanoseconds are set to 0.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 1-129.

`dur = rostduration(totalSecs)` initializes the time values for seconds and nanoseconds based on `totalSecs`, which represents the time in seconds as a floating-point number.

`dur = rostduration(secs,nsecs)` initializes the time values for seconds and nanoseconds individually. Both inputs must be integers. Large values for `nsecs` are wrapped automatically with the remainder added to `secs`.

`dur = rostduration (____, "DataFormat", "struct")` uses message structures instead of objects with any of the arguments in previous syntaxes. For more information, see "ROS Message Structures" on page 1-129.

Examples

Work with ROS Duration Objects

Create ROS Duration objects, perform addition and subtraction, and compare duration objects. You can also add duration objects to ROS Time objects to get another Time object.

Create a duration using seconds and nanoseconds.

```
dur1 = rostduration(100,2000000)
```

```
dur1 =
  ROS Duration with properties:
```

```
    Sec: 100
```

```
Nsec: 2000000
```

Create a duration using a floating-point value. This sets the seconds using the integer portion and nanoseconds with the remainder.

```
dur2 = rosduration(20.5)
```

```
dur2 =  
  ROS Duration with properties:  
  
    Sec: 20  
    Nsec: 500000000
```

Add the two durations together to get a single duration.

```
dur3 = dur1 + dur2
```

```
dur3 =  
  ROS Duration with properties:  
  
    Sec: 120  
    Nsec: 502000000
```

Subtract durations and get a negative duration. You can initialize durations with negative values as well.

```
dur4 = dur2 - dur1
```

```
dur4 =  
  ROS Duration with properties:  
  
    Sec: -80  
    Nsec: 498000000
```

```
dur5 = rosduration(-1,2000000)
```

```
dur5 =  
  ROS Duration with properties:  
  
    Sec: -1  
    Nsec: 2000000
```

Compare durations.

```
dur1 > dur2
```

```
ans = logical  
     1
```

Initialize a ROS network.

```
rosinit
```

```
Launching ROS Core...  
...Done in 3.2516 seconds.
```

```
Initializing ROS master on http://172.30.135.140:60398.  
Initializing global node /matlab_global_node_95136 with NodeURI http://bat6340win64:63000/
```

Add a duration to a ROS Time object.

```
time = rostime('now','system')
```

```
time =  
  ROS Time with properties:  
  
    Sec: 1.6305e+09  
    Nsec: 641071000
```

```
timeFuture = time + dur3
```

```
timeFuture =  
  ROS Time with properties:  
  
    Sec: 1.6305e+09  
    Nsec: 143071000
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_95136 with NodeURI http://bat6340win64:63000/  
Shutting down ROS master on http://172.30.135.140:60398.
```

Input Arguments

totalSecs — Total time

0 (default) | scalar

Total time, specified as a floating-point scalar. The integer portion is set to the Sec property with the remainder applied to the Nsec property of the Duration object.

secs — Whole seconds

0 (default) | integer

Whole seconds, specified as an integer. This value is directly set to the Sec property of the Duration object.

Note The maximum and minimum values for secs are [-2147483648, 2147483647].

nsecs — Nanoseconds

0 (default) | positive integer

Nanoseconds, specified as a positive integer. This value is directly set to the NSec property of the Duration object unless it is greater than or equal to 10^9 . The value is then wrapped and the remainders are added to the value of secs.

Output Arguments

dur — Duration

ROS Duration object | structure

Duration, returned as a ROS Duration object or message structure with fields Sec and NSec

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see "Improve Performance of ROS Using Message Structures".

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

rostime | rosmessage

Introduced in R2019b

rosgenmsg

Generate custom messages from ROS definitions

Syntax

```
rosgenmsg(folderpath)
rosgenmsg(folderpath,Name,Value)
```

Description

`rosgenmsg(folderpath)` generates ROS custom messages in MATLAB by reading ROS custom messages, service definitions, and action definitions in the specified folder path. The function expects one or more ROS package folders inside the folder path. These packages contain the message definitions in `.msg` files, the service definitions in `.srv` files, and the action definitions in `.action` files.

After calling this function, you can send and receive your custom messages in MATLAB like all other supported messages. You can create these messages using `rosmessage` or view the list of messages by calling `rosmmsg list`.

Note

- When generating custom messages for ROS, you must build the ROS packages. This requires you to have CMake and a C++ compiler for your platform. For more information, see “ROS System Requirements”
 - The custom messages from the ROS definitions have to be regenerated for every new release.
-

`rosgenmsg(folderpath,Name,Value)` specifies additional options using one or more name-value pair arguments.

Examples

Generate MATLAB Code for ROS Custom Messages

After you install the support package and prepare your custom message package folder, specify the path to the parent folder and call `rosgenmsg`.

Note You must set the `folderpath` based on your ROS package setup.

```
folderpath = "C:/Users/user1/Documents/robot_custom_msg/";  
rosgenmsg(folderpath)
```

Input Arguments

folderpath — Path to ROS package folders

string scalar | character vector

Path to the parent folder of ROS message packages, specified as a string scalar or character vector. The parent folder should contain package folders. These folders contain a /msg folder with .msg files for message definitions, a /srv folder with .srv files for service definitions, and a /action folder with .action files for action definitions.

Example: "/opt/ros/melodic/share"

Data Types: char | string

Name-Value Pair Arguments

Specify optional comma-separated pairs of Name, Value arguments. Name is the argument name and Value is the corresponding value. Name must appear inside quotes. You can specify several name and value pair arguments in any order as Name1, Value1, ..., NameN, ValueN.

Example: 'BuildConfiguration', 'fasterruns'

BuildConfiguration — Build configuration

'fasterbuilds' (default) | 'fasterruns'

Build configuration, specified as the comma-separated pair consisting of 'BuildConfiguration' and a character vector or string scalar containing 'fasterbuilds' or 'fasterruns'.

- 'fasterbuilds' — Build the message libraries with compiler optimizations for shorter build times.
- 'fasterruns' — Build the message libraries with compiler optimizations for faster execution.

Example: rosgenmsg("/opt/ros/melodic/share", 'BuildConfiguration', 'fasterruns')

Data Types: char | string

Limitations

- ROS custom messages and the rosgenmsg function are not supported with MATLAB Compiler.

See Also

rosmessage | rosmsg

Topics

“Create Custom Messages from ROS Package”

“ROS Custom Message Support”

External Websites

ROS Tutorials: Defining Custom Messages

ROS Tutorials: Creating a ROS msg and srv

Introduced in R2019b

rosinit

Connect to ROS network

Syntax

```
rosinit
rosinit(hostname)
rosinit(hostname,port)
rosinit(URI)
rosinit( __ ,Name,Value)
```

Description

`rosinit` starts the global ROS node with a default MATLAB name and tries to connect to a ROS master running on `localhost` and port `11311`. If the global ROS node cannot connect to the ROS master, `rosinit` also starts a ROS core in MATLAB, which consists of a ROS master, a ROS parameter server, and a `rosout` logging node.

Note The first time you connect to a ROS network, you must install and setup Python 2.7. To check your Python version in MATLAB, use the `pyenv` function. For more information, see “ROS System Requirements”.

`rosinit(hostname)` tries to connect to the ROS master at the host name or IP address specified by `hostname`. This syntax uses `11311` as the default port number.

`rosinit(hostname,port)` tries to connect to the host name or IP address specified by `hostname` and the port number specified by `port`.

`rosinit(URI)` tries to connect to the ROS master at the given resource identifier, `URI`, for example, “`http://192.168.1.1:11311`”.

`rosinit(__ ,Name,Value)` provides additional options specified by one or more `Name,Value` pair arguments.

Using `rosinit` is a prerequisite for most ROS-related tasks in MATLAB because:

- Communicating with a ROS network requires a ROS node connected to a ROS master.
- By default, ROS functions in MATLAB operate on the global ROS node, or they operate on objects that depend on the global ROS node.

For example, after creating a global ROS node with `rosinit`, you can subscribe to a topic on the global ROS node. When another node on the ROS network publishes messages on that topic, the global ROS node receives the messages.

If a global ROS node already exists, then `rosinit` restarts the global ROS node based on the new set of arguments.

For more advanced ROS networks, connecting to multiple ROS nodes or masters is possible using the `Node` object.

Examples

Start ROS Core and Global Node

```
rosinit
```

```
Launching ROS Core...  
..Done in 2.6741 seconds.  
Initializing ROS master on http://172.30.135.140:52261.  
Initializing global node /matlab_global_node_50000 with NodeURI http://bat6340win64:56224/
```

When you are finished, shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_50000 with NodeURI http://bat6340win64:56224/  
Shutting down ROS master on http://172.30.135.140:52261.
```

Start Node and Connect to ROS Master at Specified IP Address

```
rosinit('192.168.17.128')
```

```
Initializing global node /matlab_global_node_57409 with NodeURI http://192.168.17.1:57782/
```

Shut down the ROS network when you are finished.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_57409 with NodeURI http://192.168.17.1:57782/
```

Start Global Node at Given IP and NodeName

```
rosinit('192.168.17.128', 'NodeHost', '192.168.17.1', 'NodeName', '/test_node')
```

```
Initializing global node /test_node with NodeURI http://192.168.17.1:57633/
```

Shut down the ROS network when you are finished.

```
rosshutdown
```

```
Shutting down global node /test_node with NodeURI http://192.168.17.1:57633/
```

Input Arguments

hostname — Host name or IP address

string scalar | character vector

Host name or IP address, specified as a string scalar or character vector.

port — Port number

numeric scalar

Port number used to connect to the ROS master, specified as a numeric scalar.

URI — URI for ROS master

string scalar | character vector

URI for ROS master, specified as a string scalar or character vector. Standard format for URIs is either `http://ipaddress:port` or `http://hostname:port`

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Example: `"NodeHost", "192.168.1.1"`

NodeHost — Host name or IP address

character vector

Host name or IP address under which the node advertises itself to the ROS network, specified as the comma-separated pair consisting of `"NodeHost"` and a character vector.

Example: `"comp-home"`

NodeName — Global node name

character vector

Global node name, specified as the comma-separated pair consisting of `"NodeName"` and a character vector. The node that is created through `rosinit` is registered on the ROS network with this name.

Example: `"NodeName", "/test_node"`

See Also

Node | `roshutdown`

Topics

“Connect to a ROS Network”

“ROS System Requirements”

Introduced in R2019b

rosmessage

Create ROS messages

Syntax

```
msg = rosmessage(msgtype)

msg = rosmessage(pub)
msg = rosmessage(sub)
msg = rosmessage(client)
msg = rosmessage(server)
msg = rosmessage( __ , "DataFormat", "struct")
```

Description

`msg = rosmessage(msgtype)` creates an empty ROS message object with message type. The `msgtype` string scalar is case-sensitive and no partial matches are allowed. It must match a message on the list given by calling `rosmmsg("list")`.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 1-139.

`msg = rosmessage(pub)` creates an empty message determined by the topic published by `pub`.

`msg = rosmessage(sub)` creates an empty message determined by the subscribed topic of `sub`.

`msg = rosmessage(client)` creates an empty message determined by the service associated with `client`.

`msg = rosmessage(server)` creates an empty message determined by the service type of `server`.

`msg = rosmessage(__ , "DataFormat", "struct")` creates an empty message as a message structure with any of the arguments in previous syntaxes. For more information, see "ROS Message Structures" on page 1-139.

Examples

Create Empty String Message

Create a ROS message as a structure with the `std_msgs/String` message type.

```
strMsg = rosmessage("std_msgs/String", "DataFormat", "struct")
```

```
strMsg = struct with fields:
    MessageType: 'std_msgs/String'
```

```
Data: ''
```

Create ROS Publisher and Send Data

Start ROS master.

```
rosinit
```

```
Launching ROS Core...
...Done in 3.2519 seconds.
Initializing ROS master on http://172.30.135.140:50635.
Initializing global node /matlab_global_node_65514 with NodeURI http://bat6340win64:49385/
```

Create publisher for the `/chatter` topic with the `std_msgs/String` message type. Set the "DataFormat" name-value argument to structure ROS messages.

```
chatpub = rospublisher("/chatter","std_msgs/String","DataFormat","struct");
```

Create a message to send. Specify the Data property with a character vector.

```
msg = rosmessage(chatpub);
msg.Data = 'test phrase';
```

Send the message via the publisher.

```
send(chatpub,msg);
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_65514 with NodeURI http://bat6340win64:49385/
Shutting down ROS master on http://172.30.135.140:50635.
```

Create and Access Array of ROS Messages

You can create an structure array to store multiple messages. The array is indexable, similar to any other array. You can modify properties of each object or access specific properties from each element using dot notation.

Create an array of two messages. Specify the `DataFormat` name-value argument to use structures for ROS messages.

```
blankMsg = rosmessage("std_msgs/String","DataFormat","struct")
```

```
blankMsg = struct with fields:
  MessageType: 'std_msgs/String'
  Data: ''
```

```
msgArray = [blankMsg blankMsg]
```

```
msgArray=1x2 struct array with fields:
  MessageType
```

Data

Assign data to individual message fields in the array.

```
msgArray(1).Data = 'Some string';  
msgArray(2).Data = 'Other string';
```

Read all the Data fields from the messages into a cell array.

```
allData = {msgArray.Data}  
  
allData = 1x2 cell  
    {'Some string'}    {'Other string'}
```

Preallocate ROS Message Array

To preallocate an array using ROS messages as objects, use the `arrayfun` or `cellfun` functions instead of `repmat`. These functions properly create object or cell arrays for handle classes.

Note: *In a future release, ROS message objects will be removed. To use ROS messages as structures and utilize structure arrays, specify the `DataFormat` name-value pair when calling the `rosmesssage` function.*

Preallocate an object array of ROS messages.

```
msgArray = arrayfun(@(~) rosmesssage("std_msgs/String"),zeros(1,50));
```

Preallocate a cell array of ROS messages.

```
msgCell = cellfun(@(~) rosmesssage("std_msgs/String"),cell(1,50),"UniformOutput",false);
```

Input Arguments

messagetype – Message type

string scalar | character vector

Message type, specified as a string scalar or character vector. The string is case-sensitive and no partial matches are allowed. It must match a message on the list given by calling `rosmesssage("list")`.

pub – ROS publisher

Publisher object handle

ROS publisher, specified as a `Publisher` object handle. You can create the object using `rospublisher`.

sub – ROS subscriber

Subscriber object handle

ROS subscriber, specified as a `Subscriber` object handle. You can create the object using `rossubscriber`.

client – ROS service client

`ServiceClient` object handle

ROS service client, specified as a `ServiceClient` object handle. You can create the object using `rossvcclient`.

server — ROS service server

`ServiceServer` object handle

ROS service server, specified as a `ServiceServer` object handle. You can create the object using `rossvcserver`.

Output Arguments

msg — ROS message

Message object handle | structure

ROS message, returned as a `Message` object handle or a structure.

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see "Improve Performance of ROS Using Message Structures".

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for `struct` messages.
- For messages with fields containing cell array of strings, such as `sensor_msgs/JointState`, accessing those fields in the MATLAB function is not supported.

See Also

Functions

`rostopic` | `rosmg`

Objects

`rospublisher` | `rossubscriber`

Topics

“Work with Basic ROS Messages”

“Built-In Message Support”

Introduced in R2019b

rosmg

Retrieve information about ROS messages and message types

Syntax

```
rosmg show msgtype
rosmg md5 msgtype
rosmg list
```

```
msginfo = rosmg("show", msgtype)
msgmd5 = rosmg("md5", msgtype)
msglist = rosmg("list")
```

Description

`rosmg show msgtype` returns the definition of the `msgtype` message.

`rosmg md5 msgtype` returns the MD5 checksum of the `msgtype` message.

`rosmg list` returns all available message types that you can use in MATLAB.

`msginfo = rosmg("show", msgtype)` returns the definition of the `msgtype` message as a character vector.

`msgmd5 = rosmg("md5", msgtype)` returns the 'MD5' checksum of the `msgtype` message as a character vector.

`msglist = rosmg("list")` returns a cell array containing all available message types that you can use in MATLAB.

Examples

Retrieve Message Type Definition

```
msgInfo = rosmg('show', 'geometry_msgs/Point')
msgInfo =
    '% This contains the position of a point in free space
    double X
    double Y
    double Z
    '
```

Get the MD5 Checksum of Message Type

```
msgMd5 = rosmg('md5', 'geometry_msgs/Point')
```

```
msgMd5 =  
'4a842b65f413084dc2b10fb484ea7f17'
```

Input Arguments

msgtype — ROS message type

character vector

ROS message type, specified as a character vector. `msgType` must be a valid ROS message type from ROS that MATLAB supports.

Example: "std_msgs/Int8"

Output Arguments

msginfo — Details of message definition

character vector

Details of the information inside the ROS message definition, returned as a character vector.

msgmd5 — MD5 checksum hash value

character vector

MD5 checksum hash value, returned as a character vector. The MD5 output is a character vector representation of the 16-byte hash value that follows the MD5 standard.

msglist — List of all message types available in MATLAB

cell array of character vectors

List of all message types available in MATLAB, returned as a cell array of character vectors.

Introduced in R2019b

rosnode

Retrieve information about ROS network nodes

Syntax

```
rosnode list
rosnode info nodename
rosnode ping nodename

nodelist = rosnode("list")
nodeinfo = rosnode("info",nodename)
rosnode("ping",nodename)
```

Description

`rosnode list` returns a list of all nodes registered on the ROS network. Use these nodes to exchange data between MATLAB and the ROS network.

`rosnode info nodename` returns a structure containing the name, URI, publications, subscriptions, and services of a specific ROS node, `nodename`.

`rosnode ping nodename` pings a specific node, `nodename`, and displays the response time.

`nodelist = rosnode("list")` returns a cell array of character vectors containing the nodes registered on the ROS network.

`nodeinfo = rosnode("info",nodename)` returns a structure containing the name, URI, publications, subscriptions, and services of a specific ROS node, `nodename`.

`rosnode("ping",nodename)` pings a specific node, `nodename` and displays the response time.

Examples

Retrieve List of ROS Nodes

Note: This example requires a valid ROS network to be active with ROS nodes previously set up.

Connect to the ROS network. Specify the IP address for your specific network.

```
rosinit('192.168.17.128')
```

```
Initializing global node /matlab_global_node_99071 with NodeURI http://192.168.17.1:64076/
```

List the nodes available from the ROS master.

```
rosnode list

/gazebo
/laserscan_nodelet_manager
/matlab_global_node_99071
```

```
/mobile_base_nodelet_manager  
/robot_state_publisher  
/rosout
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_99071 with NodeURI http://192.168.17.1:64076/
```

Retrieve ROS Node Information

Connect to the ROS network. Specify the IP address for your specific network.

```
rosinit('192.168.17.128')
```

```
Initializing global node /matlab_global_node_96994 with NodeURI http://192.168.17.1:64267/
```

Get information on the '/robot_state_publisher' node. This node is available on the ROS master.

```
nodeinfo = rosnode('info', '/robot_state_publisher')
```

```
nodeinfo = struct with fields:  
  NodeName: '/robot_state_publisher'  
  URI: 'http://192.168.17.128:43330/'  
  Publications: [3×1 struct]  
  Subscriptions: [2×1 struct]  
  Services: [2×1 struct]
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_96994 with NodeURI http://192.168.17.1:64267/
```

Ping ROS Node

Connect to the ROS network. Specify the IP address for your specific network.

```
rosinit('192.168.17.128')
```

```
Initializing global node /matlab_global_node_59489 with NodeURI http://192.168.17.1:64471/
```

Ping the '/robot_state_publisher' node. This node is available on the ROS master.

```
nodeinfo = rosnode('info', '/robot_state_publisher')
```

```
nodeinfo = struct with fields:  
  NodeName: '/robot_state_publisher'  
  URI: 'http://192.168.17.128:43330/'  
  Publications: [3×1 struct]  
  Subscriptions: [2×1 struct]  
  Services: [2×1 struct]
```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_59489 with NodeURI http://192.168.17.1:64471/
```

Input Arguments

nodename — Name of node

string scalar | character vector

Name of node, specified as a string scalar or character vector. The name of the node must match the name given in ROS.

Output Arguments

nodeinfo — Information about ROS node

structure

Information about ROS node, returned as a structure containing these fields: `nodeName`, `URI`, `Publications`, `Subscriptions`, and `Services`. Access these properties using dot syntax, for example, `nodeinfo.NodeName`.

odelist — List of node names available

cell array of character vectors

List of node names available, returned as a cell array of character vectors.

See Also

`rosinit` | `rostopic`

Introduced in R2019b

rosparam

Access ROS parameter server values

Syntax

```
list = rosparam("list")
list = rosparam("list",namespace)
pvalOut = rosparam("get",pname)
pvalOut = rosparam("get",namespace)
rosparam("set",pname,pval)
rosparam("delete",pname)
rosparam("delete",namespace)

ptree = rosparam
```

Description

`list = rosparam("list")` returns the list of all ROS parameter names from the ROS master.

Simplified form: `rosparam list`

`list = rosparam("list",namespace)` returns the list of all parameter names under the specified ROS namespace.

Simplified form: `rosparam list namespace`

`pvalOut = rosparam("get",pname)` retrieves the value of the specified parameter.

Simplified form: `rosparam get pname`

`pvalOut = rosparam("get",namespace)` retrieves the values of all parameters under the specified namespace as a structure.

Simplified form: `rosparam get namespace`

`rosparam("set",pname,pval)` sets a value for a specified parameter name. If the parameter name does not exist, the function adds a new parameter in the parameter tree.

Simplified form: `rosparam set pname pval`

See "Limitations" on page 1-151 for limitations on `pval`.

`rosparam("delete",pname)` deletes a parameter from the parameter tree. If the parameter does not exist, the function displays an error.

Simplified form: `rosparam delete pname`

`rosparam("delete",namespace)` deletes all parameters under the given namespace from the parameter tree.

Simplified form: `rosparam delete namespace`

`ptree = rosparam` creates a parameter tree object, `ptree`. After `ptree` is created, the connection to the parameter server remains persistent until the object is deleted or the ROS master becomes unavailable.

A ROS parameter tree communicates with the ROS parameter server. The ROS parameter server can store strings, integers, doubles, Booleans and cell arrays. The parameters are accessible by every node in the ROS network. Use the parameters to store static data such as configuration parameters. Use the `get`, `set`, `has`, `search`, and `del` functions to manipulate and view parameter values.

The following ROS data types are supported as values of parameters. For each ROS data type, the corresponding MATLAB data type is also listed.

- 32-bit integer — `int32`
- Boolean — `logical`
- double — `double`
- string — character vector (`char`)
- list — cell array (`cell`)
- dictionary — structure (`struct`)

Examples

Get and Set Parameter Values

Connect to a ROS network to set and get ROS parameter values on the ROS parameter tree. You can get lists of parameters in their given namespaces as well. This example uses the simplified form that mimics the ROS command-line interface.

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
```

```
...Done in 3.91 seconds.
```

```
Initializing ROS master on http://172.30.135.140:52135.
```

```
Initializing global node /matlab_global_node_53702 with NodeURI http://bat6340win64:53042/
```

Set parameter values.

```
rosparam set /string_param 'param_value'
rosparam set /double_param 1.2
```

To set a list parameter, use the functional form.

```
rosparam('set', '/list_param', {int32(5), 124.1, -20, 'some_string'});
```

Get the list of parameters using the command-line form.

```
rosparam list
```

```
/double_param
```

```
/list_param
```

```
/string_param
```

List parameters in a specific namespace.

```
rosparam list /double
```

```
/double_param
```

Get the value of a parameter.

```
rosparam get /list_param
```

```
{5, 124.1, -20, some_string}
```

Delete a parameter. List the parameters to verify it was deleted.

```
rosparam delete /double_param
```

```
rosparam list
```

```
/list_param
```

```
/string_param
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_53702 with NodeURI http://bat6340win64:53042/  
Shutting down ROS master on http://172.30.135.140:52135.
```

Create Parameter Tree Object and View Parameters

Connect to the ROS network. ROS parameters should already be available on the ROS master.

```
rosinit('192.168.17.128')
```

```
Initializing global node /matlab_global_node_91663 with NodeURI http://192.168.17.1:52951/
```

Create a ParameterTree object using rosparam.

```
ptree = rosparam;
```

List the available parameters on the ROS master.

```
ptree.AvailableParameters
```

```
ans = 33x1 cell array  
    {'/bumper2pointcloud/pointcloud_radius' }  
    {'/camera/imager_rate' }  
    {'/camera/rgb/image_raw/compressed/format' }  
    {'/camera/rgb/image_raw/compressed/jpeg_quality'}  
    {'/camera/rgb/image_raw/compressed/png_level' }  
    {'/cmd_vel_mux/yaml_cfg_file' }  
    {'/depthimage_to_laserscan/output_frame_id' }  
    {'/depthimage_to_laserscan/range_max' }  
    {'/depthimage_to_laserscan/range_min' }  
    {'/depthimage_to_laserscan/scan_height' }  
    {'/depthimage_to_laserscan/scan_time' }  
    {'/gazebo/auto_disable_bodies' }  
    {'/gazebo/cfm' }  
    {'/gazebo/contact_max_correcting_vel' }  
    {'/gazebo/contact_surface_layer' }
```



```

{/gazebo/erp' }
{/gazebo/gravity_x' }
{/gazebo/gravity_y' }
{/gazebo/gravity_z' }
{/gazebo/max_contacts' }
{/gazebo/max_update_rate' }
{/gazebo/sor_pgs_iters' }
{/gazebo/sor_pgs_precon_iters' }
{/gazebo/sor_pgs_rms_error_tol' }
{/gazebo/sor_pgs_w' }
{/gazebo/time_step' }
{/robot_description' }
{/robot_state_publisher/publish_frequency' }
{/roscdistro' }
{/roslaunch/uris/host_192_168_17_128__34863' }
{/rosversion' }
{/run_id' }
{/use_sim_time' }

```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_91663 with NodeURI http://192.168.17.1:52951/
```

Set A Dictionary Of Parameter Values

Use structures to specify a dictionary of ROS parameters under a specific namespace.

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
```

```
...Done in 4.0269 seconds.
```

```
Initializing ROS master on http://192.168.88.1:57165.
```

```
Initializing global node /matlab_global_node_09024 with NodeURI http://ah-avijayar:60223/
```

Create a dictionary of parameter values. This dictionary contains the information relevant to an image. Display the structure to verify values.

```
image = imread('peppers.png');
```

```
pval.ImageWidth = size(image,1);
pval.ImageHeight = size(image,2);
pval.ImageTitle = 'peppers.png';
disp(pval)
```

```

ImageWidth: 384
ImageHeight: 512
ImageTitle: 'peppers.png'

```

Set the dictionary of values using the desired namespace.

```
rosparam('set', 'ImageParam', pval)
```

Get the parameters using the namespace. Verify the values.

```
pval2 = rosparam('get','ImageParam')
```

```
pval2 = struct with fields:  
    ImageHeight: 512  
    ImageTitle: 'peppers.png'  
    ImageWidth: 384
```

Shut down ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_09024 with NodeURI http://ah-avijayar:60223/  
Shutting down ROS master on http://192.168.88.1:57165.
```

Input Arguments

namespace — ROS parameter namespace

string scalar | character vector

ROS parameter namespace, specified as a string scalar or character vector. All parameter names starting with this string are listed when calling `rosparam("list",namespace)`.

pname — ROS parameter name

string scalar | character vector

ROS parameter name, specified as a string scalar or character vector.

pval — ROS parameter value or dictionary of values

int32 | logical | double | string scalar | character vector | cell array | structure

ROS parameter value or dictionary of values, specified as a supported data type.

The following ROS data types are supported as values of parameters. For each ROS data type, the corresponding MATLAB data type is also listed:

- 32-bit integers — `int32`
- Booleans — `logical`
- doubles — `double`
- strings — string scalar, `string`, or character vector, `char`
- lists — cell array
- dictionaries — structure

Output Arguments

list — Parameter list

cell array of character vectors

Parameter list, returned as a cell array of character vectors. This is a list of all parameters available on the ROS master.

ptree — Parameter tree

ParameterTree object handle

Parameter tree, returned as a ParameterTree object handle. Use this object to reference parameter information, for example, ptree.AvailableFrames.

pvalOut — ROS parameter value or dictionary of values

int32 | logical | double | character vector | cell array | structure

ROS parameter value, specified as a supported MATLAB data type. When specifying the namespace input argument, pvalOut is returned as a structure of parameter value under the given namespace.

The following ROS data types are supported as values of parameters. For each ROS data type, the corresponding MATLAB data type is also listed.

ROS Data Type	MATLAB Data Type
32-bit integer	int32
Boolean	logical
double	double
string	character vector (char)
list	cell array (cell)
dictionary	structure (struct)

Limitations

- **Unsupported Data Types:** Base64-encoded binary data and iso8601 data from ROS are not supported.
- **Simplified Commands:** When using the simplified command `rosparam set pname pval`, the parameter value is interpreted as:
 - `logical` — If `pval` is "true" or "false"
 - `int32` — If `pval` is an integer, for example, 5
 - `double` — If `pval` is a fractional number, for example, 1.256
 - `character vector` — If `pval` is any other value

Extended Capabilities**C/C++ Code Generation**

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

For code generation, only the following ROS data types are supported as values of parameters,

- 32-bit integer — `int32`
- Boolean — `logical`
- double — `double`
- strings — string scalar, `string`, or character vector, `char`

See Also

Functions

get | set | has | search | del

Objects

ParameterTree

Introduced in R2019b

rosReadAllFieldNames

Get all available field names from ROS point cloud

Syntax

```
names = readAllFieldNames(pcloud)
```

Description

`names = readAllFieldNames(pcloud)` returns all the fields that are stored in the `PointCloud2` ROS message, `pcloud`, and returns them in `names`.

Input Arguments

pcloud — Point cloud

`PointCloud2` message structure

Point cloud, specified as a `PointCloud2` message structure for a 'sensor_msgs/PointCloud2' ROS or ROS 2 message.

Output Arguments

names — List of field names in `PointCloud2` object

cell array of character vectors

List of field names in `PointCloud2` message, returned as a cell array of character vectors. If no fields exist in the message, `fieldname` returns an empty cell array.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Usage in MATLAB Function block is not supported.

See Also

`rosReadXYZ` | `rosReadField` | `rosReadRGB` | `rosReadCartesian`

Introduced in R2021a

rosReadBinaryOccupancyGrid

Read binary occupancy grid

Syntax

```
map = rosReadBinaryOccupancyGrid(msg)
map = rosReadBinaryOccupancyGrid(msg, thresh)
map = rosReadBinaryOccupancyGrid(msg, thresh, val)
```

Description

`map = rosReadBinaryOccupancyGrid(msg)` returns a `binaryOccupancyGrid` object by reading the data inside a ROS message, `msg`, which must be a `'nav_msgs/OccupancyGrid'` message. All message data values greater than or equal to the occupancy threshold are set to occupied, `1`, in the map. All other values, including unknown values (`-1`) are set to unoccupied, `0`, in the map.

`map = rosReadBinaryOccupancyGrid(msg, thresh)` specifies a threshold, `thresh`, for occupied values. All values greater than or equal to the threshold are set to occupied, `1`. All other values are set to unoccupied, `0`.

`map = rosReadBinaryOccupancyGrid(msg, thresh, val)` specifies a value to set for unknown values (`-1`). By default, all unknown values are set to unoccupied, `0`.

Input Arguments

msg — **'nav_msgs/OccupancyGrid' ROS message**
OccupancyGrid message structure

'nav_msgs/OccupancyGrid' ROS message, specified as a OccupancyGrid message structure.

thresh — **Threshold for occupied values**
50 (default) | scalar

Threshold for occupied values, specified as a scalar. Any value greater than or equal to the threshold is set to occupied, `1`. All other values are set to unoccupied, `0`.

Data Types: double

val — **Value to replace unknown values**
0 (default) | 1

Value to replace unknown values, specified as either `0` or `1`. Unknown message values (`-1`) are set to the given value.

Data Types: double | logical

Output Arguments

map — **Binary occupancy grid**
binaryOccupancyMap object handle

Binary occupancy grid, returned as a `binaryOccupancyMap` object handle. `map` contains the occupancy data from a `'nav_msgs/OccupancyGrid'` message converted to binary values. The object stores a grid of binary values, where 1 indicates an occupied location and 0 indicates an unoccupied location.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`rosReadOccupancyGrid` | `rosReadOccupancyMap3D` | `rosWriteBinaryOccupancyGrid` | `rosWriteOccupancyGrid`

Introduced in R2021a

rosReadCartesian

Read laser scan ranges in Cartesian coordinates

Syntax

```
cart = rosReadCartesian(scan)
cart = rosReadCartesian( ____, Name, Value)
[cart, angles] = rosReadCartesian( ____ )
```

Description

`cart = rosReadCartesian(scan)` converts the polar measurements of the laser scan structure, `scan`, into Cartesian coordinates, `cart`. This function uses the metadata in the message, such as angular resolution and opening angle of the laser scanner, to perform the conversion. Invalid range readings, usually represented as `NaN`, are ignored in this conversion.

`cart = rosReadCartesian(____, Name, Value)` provides additional options specified by one or more `Name, Value` pair arguments. You can specify several name-value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

`[cart, angles] = rosReadCartesian(____)` returns the scan angles, `angles`, that are associated with each Cartesian coordinate. Angles are measured counterclockwise around the positive z-axis, with the zero angle along the x-axis. The `angles` is returned in radians and wrapped to the `[-pi, pi]` interval.

Input Arguments

scan — Laser scan message

LaserScan structure

'sensor_msgs/LaserScan' ROS message, specified as a LaserScan structure.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name, Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

Example: 'RangeLimits', [0.05 2] sets the range limits for the scan in meters

RangeLimits — Minimum and maximum range for scan in meters

[scan.RangeMin scan.RangeMax] (default) | 2-element [min max] vector

Minimum and maximum range for a scan in meters, specified as a 2-element [min max] vector. All ranges smaller than `min` or larger than `max` are ignored during the conversion to Cartesian coordinates.

Output Arguments

cart — Cartesian coordinates of laser scan

n-by-2 matrix in meters

Cartesian coordinates of laser scan, returned as an *n*-by-2 matrix in meters.

angles — Scan angles for laser scan data

n-by-1 matrix in radians

Scan angles for laser scan data, returned as an *n*-by-1 matrix in radians. Angles are measured counterclockwise around the positive *z*-axis, with the zero angle along the *x*-axis. The `angles` is returned in radians and wrapped to the $[-\pi, \pi]$ interval.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`rosReadScanAngles` | `rosReadXYZ` | `rosPlot`

Introduced in R2021a

rosReadField

Read point cloud data based on field name

Syntax

```
fielddata = rosReadField(pcloud,fieldname)
fielddata = rosReadField(pcloud,fieldname,"PreserveStructureOnRead",true)
```

Description

`fielddata = rosReadField(pcloud,fieldname)` reads the point field from the `PointCloud2` ROS or ROS 2 message, `pcloud`, specified by `fieldname` and returns it in `fielddata`.

`fielddata = rosReadField(pcloud,fieldname,"PreserveStructureOnRead",true)` preserves the organizational structure of the point cloud field data returned in the `fielddata` output. For more information, see “Preserving Point Cloud Structure” on page 1-158.

Input Arguments

pcloud — Point cloud

`PointCloud2` message structure

Point cloud, specified as a `PointCloud2` message structure for a 'sensor_msgs/PointCloud2' ROS message.

fieldname — Field name of point cloud data

string scalar | character vector

Field name of point cloud data, specified as a string scalar or character vector. This string must match the field name exactly. If `fieldname` does not exist, the function displays an error.

Output Arguments

fielddata — List of field values from point cloud

matrix

List of field values from point cloud, returned as a matrix. Each row of the matrix is a point cloud reading, where n is the number of points and c is the number of values for each point.

If the `PreserveStructureOnRead` name-value pair argument is set to `true`, the points are returned as an h -by- w -by- c matrix.

Preserving Point Cloud Structure

Point cloud data can be organized in either 1-D lists or in 2-D image styles. 2-D image styles usually come from depth sensors or stereo cameras. The input `PointCloud2` object contains a `PreserveStructureOnRead` property that is either `true` or `false` (default). Suppose you set the property to `true`.

```
pcloud.PreserveStructureOnRead = true;
```

Now calling any read functions (`rosReadXYZ`, `rosReadRGB`, or `rosReadField`) preserves the organizational structure of the point cloud. When you preserve the structure, the output matrices are of size m -by- n -by- d , where m is the height, n is the width, and d is the number of return values for each point. Otherwise, all points are returned as a x -by- d list. This structure can be preserved only if the point cloud is organized.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Usage in MATLAB Function block is not supported.

See Also

[PointCloud2](#) | [readAllFieldNames](#)

Introduced in R2021a

rosReadImage

Convert ROS image data into MATLAB image

Syntax

```
img = rosReadImage(msg)
msgOut = rosReadImage( ___, "Encoding", encodingParam)
[img, alpha] = rosReadImage( ___ )
```

Description

`img = rosReadImage(msg)` converts the raw image data in the message structure, `msg`, into an image matrix, `img`. You can call `rosReadImage` using either `'sensor_msgs/Image'` or `'sensor_msgs/CompressedImage'` messages.

ROS image message data is stored in a format that is not compatible with further image processing in MATLAB. Based on the specified encoding, this function converts the data into an appropriate MATLAB image and returns it in `img`.

`msgOut = rosReadImage(___, "Encoding", encodingParam)` specifies the encoding of the image message as a name-value argument using any of the previous input arguments. If the `Encoding` field of the message is not set, use this syntax to set the field.

`[img, alpha] = rosReadImage(___)` returns the alpha channel of the image in `alpha`. If the image does not have an alpha channel, then `alpha` is empty.

Input Arguments

msg — ROS image message

Image message structure | `CompressedImage` message structure

`'sensor_msgs/Image'` or `'sensor_msgs/CompressedImage'` ROS image message, specified as an `Image` or `Compressed Image` message structure.

encodingParam — Encoding of image message

`"rgb8"` | `"rgba8"` | `"rgb16"` | string scalar

Encoding of image message, specified as a string scalar. Using this input argument overwrites the `Encoding` field of the input `msg`. For more information, see “Supported Image Encodings” on page 1-161.

Output Arguments

img — Image

grayscale image matrix | RGB image matrix | m -by- n -by-3 array

Image, returned as a matrix representing a grayscale or RGB image or as an m -by- n -by-3 array, depending on the sensor image.

alpha — Alpha channel

uint8 grayscale image

Alpha channel, returned as a uint8 grayscale image. If no alpha channel exists, alpha is empty.

Note For CompressedImage messages, you cannot output an Alpha channel.

Supported Image Encodings

ROS image messages can have different encodings. The encodings supported for images are different for 'sensor_msgs/Image' and 'sensor_msgs/CompressedImage' message types. Fewer compressed images are supported. The following encodings for raw images of size M -by- N are supported using the 'sensor_msgs/Image' message type ('**sensor_msgs/CompressedImage**' support is in bold):

- **rgb8, rgba8, bgr8, bgra8**: img is an rgb image of size M -by- N -by-3. The alpha channel is returned in alpha. Each value in the outputs is represented as a uint8.
- **rgb16, rgba16, bgr16, and bgra16**: img is an RGB image of size M -by- N -by-3. The alpha channel is returned in alpha. Each value in the output is represented as a uint16.
- **mono8** images are returned as grayscale images of size M -by- N -by-1. Each pixel value is represented as a uint8.
- **mono16** images are returned as grayscale images of size M -by- N -by-1. Each pixel value is represented as a uint16.
- **32fcX** images are returned as floating-point images of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a single.
- **64fcX** images are returned as floating-point images of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a double.
- **8ucX** images are returned as matrices of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a uint8.
- **8scX** images are returned as matrices of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a int8.
- **16ucX** images are returned as matrices of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a int16.
- **16scX** images are returned as matrices of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a int16.
- **32scX** images are returned as matrices of size M -by- N -by- D , where D is 1, 2, 3, or 4. Each pixel value is represented as a int32.
- **bayer_X** images are returned as either Bayer matrices of size M -by- N -by-1, or as a converted image of size M -by- N -by-3 (Image Processing Toolbox is required).

The following encoding for raw images of size M -by- N is supported using the '**sensor_msgs/CompressedImage**' message type:

- **rgb8, rgba8, bgr8, and bgra8**: img is an rgb image of size M -by- N -by-3. The alpha channel is returned in alpha. Each output value is represented as a uint8.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Not supported for `CompressedImage` messages.
- Specify the "Encoding",`encodParam` name-value argument when generating code.

See Also

`rosWriteImage` | `readRGB`

Introduced in R2021a

rosReadLidarScan

Display lidar scan or point cloud from ROS message structures

Syntax

```
scans = rosReadLidarScan(scanMsg)
```

Description

`scans = rosReadLidarScan(scanMsg)` creates a `lidarScan` object from a `LaserScan` ROS message structure

Input Arguments

scanMsg — ROS laser scan message

`LaserScan` message structure

ROS laser scan message with type `sensor_msgs/LaserScan`, specified as a `LaserScan` message structure.

Outputs

scans — Lidar scan readings

`lidarScan` object

Lidar scan readings, returned as a `lidarScan` object.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`rosReadCartesian`

Introduced in R2021a

rosReadOccupancyGrid

Read occupancy grid message

Syntax

```
map = rosReadOccupancyGrid(msg)
```

Description

`map = rosReadOccupancyGrid(msg)` returns an `occupancyMap` object by reading the data inside a ROS message, `msg`, which must be a `'nav_msgs/OccupancyGrid'` message. All message data values are converted to probabilities from 0 to 1. The unknown values (-1) in the message are set as 0.5 in the map.

Input Arguments

msg — `'nav_msgs/OccupancyGrid'` ROS message

`OccupancyGrid` object handle

`'nav_msgs/OccupancyGrid'` ROS message, specified as an `OccupancyGrid` ROS message object handle.

Output Arguments

map — **Occupancy map**

`occupancyMap` object handle

Occupancy map, returned as an `occupancyMap` object handle.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

Functions

`rosReadBinaryOccupancyGrid` | `rosReadOccupancyMap3D` | `rosWriteBinaryOccupancyGrid` | `rosWriteOccupancyGrid`

Introduced in R2021a

rosReadOccupancyMap3D

Read 3-D map from Octomap ROS message

Syntax

```
map = rosReadOccupancyMap3D(msg)
```

Description

`map = rosReadOccupancyMap3D(msg)` reads the data inside a ROS 'octomap_msgs/Octomap' message to return an `occupancyMap3D` object. All message data values are converted to probabilities from 0 to 1.

Input Arguments

msg — Octomap ROS message
structure

Octomap ROS message, specified as a structure of message type 'octomap_msgs/Octomap'. Get this message by subscribing to an 'octomap_msgs/Octomap' topic using `rossubscriber` on a live ROS network or by creating your own message using `rosmessage`.

Output Arguments

map — 3-D occupancy map
`occupancyMap3D` object handle

3-D occupancy map, returned as an `occupancyMap3D` object handle.

See Also

`occupancyMap3D` | `rosmessage` | `rossubscriber` | `rosReadOccupancyGrid` | `rosReadOccupancyMap3D` | `rosWriteOccupancyGrid`

Introduced in R2021a

rosPlot

Display lidar scan or point cloud from ROS message structures

Syntax

```
rosPlot(scanMsg)
rosPlot(ptcloudMsg)
rosPlot( ____, Name, Value)
linehandle = plot( ____, Name, Value)
```

Description

`rosPlot(scanMsg)` plots the laser scan readings specified in the input `LaserScan` message structure. Axes are automatically scaled to the maximum range of the sensor.

`rosPlot(ptcloudMsg)` plots the point cloud readings specified in the input `PointCloud2` message structure.

`rosPlot(____, Name, Value)` provides additional options specified by one or more `Name, Value` pair arguments.

`linehandle = plot(____, Name, Value)` returns a column vector of line series handles, using any of the arguments from previous syntaxes. Use `linehandle` to modify properties of the line series after it is created.

When plotting ROS laser scan messages, MATLAB follows the standard ROS convention for axis orientation. This convention states that **positive x is forward, positive y is left, and positive z is up**. For more information, see [Axis Orientation](#) on the ROS Wiki.

Input Arguments

scanMsg — Laser scan message

`LaserScan` message structure

ROS message with type `sensor_msgs/LaserScan`, specified as a `LaserScan` message structure.

ptcloudMsg — Point cloud message

message structure

ROS message with type `sensor_msgs/PointCloud2`, specified as a message structure.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name, Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

Example: "MaximumRange", 5

Parent — Parent of axes

axes object

Parent of axes, specified as the comma-separated pair consisting of "Parent" and an axes object in which the laser scan is drawn. By default, the laser scan is plotted in the currently active axes.

MaximumRange — Range of laser scan

`scan.RangeMax` (default) | scalar

Range of laser scan, specified as the comma-separated pair consisting of "MaximumRange" and a scalar. When you specify this name-value pair argument, the minimum and maximum x-axis and the maximum y-axis limits are set based on a specified value. The minimum y-axis limit is automatically determined by the opening angle of the laser scanner.

This name-value pair works only when you input `scanMsg` as the laser scan.

Outputs**linehandle — One or more chart line objects**

scalar | vector

One or more chart line objects, returned as a scalar or a vector. These are unique identifiers, which you can use to query and modify properties of a specific chart line.

See Also

`rosReadCartesian`

Introduced in R2021a

rosReadQuaternion

Display lidar scan or point cloud from ROS message structures

Syntax

```
q = rosReadQuaternion(quatMsg)
```

Description

`q = rosReadQuaternion(quatMsg)` creates a quaternion object from a Quaternion ROS message structure

Input Arguments

quatMsg — Quaternion ROS message

message structure

ROS message with type `geometry_msgs/Quaternion`, specified as a message structure.

Outputs

q — Quaternion

quaternion object

Quaternion, returned as a quaternion object.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`rosReadCartesian` | `quaternion`

Introduced in R2021a

rosReadRGB

Extract RGB values from point cloud data

Syntax

```
rgb = rosReadRGB(pcloud)
rgb = rosReadRGB(pcloud, "PreserveStructureOnRead", true)
```

Description

`rgb = rosReadRGB(pcloud)` extracts the `[r g b]` values from all points in the `PointCloud2` ROS or ROS 2 message, `pcloud`, and returns them as an n -by-3 of n 3-D point coordinates.

`rgb = rosReadRGB(pcloud, "PreserveStructureOnRead", true)` preserves the organizational structure of the point cloud returned in the `rgb` output. For more information, see “Preserving Point Cloud Structure” on page 1-169.

Input Arguments

`pcloud` — Point cloud

`PointCloud2` message structure

Point cloud, specified as a `PointCloud2` message structure for a `'sensor_msgs/PointCloud2'` ROS or ROS 2 message.

Output Arguments

`rgb` — List of RGB values from point cloud

matrix

List of RGB values from point cloud, returned as a matrix. By default, this is a n -by-3 matrix.

If the `PreserveStructureOnRead` name-value pair argument is set to `true`, the points are returned as an h -by- w -by-3 matrix.

Preserving Point Cloud Structure

Point cloud data can be organized in either 1-D lists or in 2-D image styles. 2-D image styles usually come from depth sensors or stereo cameras. The input `PointCloud2` object contains a `PreserveStructureOnRead` property that is either `true` or `false` (default). Suppose you set the property to `true`.

```
pcloud.PreserveStructureOnRead = true;
```

Now calling any read functions (`rosReadXYZ`, `rosReadRGB`, or `rosReadField`) preserves the organizational structure of the point cloud. When you preserve the structure, the output matrices are of size m -by- n -by- d , where m is the height, n is the width, and d is the number of return values for each point. Otherwise, all points are returned as a x -by- d list. This structure can be preserved only if the point cloud is organized.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Usage in MATLAB Function block is not supported.

See Also

[PointCloud2](#) | [readXYZ](#) | [PointCloud2](#)

Introduced in R2021a

rosReadScanAngles

Return scan angles for laser scan range readings

Syntax

```
angles = rosReadScanAngles(scan)
```

Description

`angles = rosReadScanAngles(scan)` calculates the scan angles, `angles`, corresponding to the range readings in the laser scan message, `scan`. Angles are measured counterclockwise around the positive z -axis, with the zero angle along the x -axis. The `angles` is returned in radians and wrapped to the $[-\pi, \pi]$ interval.

Input Arguments

scan — Laser scan message

LaserScan message structure

Laser scan message of type 'sensor_msgs/LaserScan', specified as a LaserScan message structure.

Output Arguments

angles — Scan angles for laser scan data

n -by-1 matrix in radians

Scan angles for laser scan data, returned as an n -by-1 matrix in radians. Angles are measured counter-clockwise around the positive z -axis, with the zero angle along the x -axis. The `angles` is returned in radians and wrapped to the $[-\pi, \pi]$ interval.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`rosReadCartesian` | `rosReadXYZ` | `rosPlot`

Introduced in R2021a

rosReadXYZ

Extract XYZ coordinates from point cloud data

Syntax

```
xyz = rosReadXYZ(pcloud)
xyz = rosReadXYZ(pcloud, "PreserveStructureOnRead", true)
```

Description

`xyz = rosReadXYZ(pcloud)` extracts the $[x \ y \ z]$ coordinates from all points in the `PointCloud2` ROS or ROS 2 message, `pcloud`, and returns them as an n -by-3 matrix of n 3-D point coordinates. If the point cloud does not contain the x , y , and z fields, this function returns an error. Points that contain NaN are preserved in the output.

`xyz = rosReadXYZ(pcloud, "PreserveStructureOnRead", true)` preserves the organizational structure of the point cloud returned in the `xyz` output. For more information, see “Preserving Point Cloud Structure” on page 1-172.

Input Arguments

pcloud — Point cloud

`PointCloud2` message structure

Point cloud, specified as a `PointCloud2` message structure for a 'sensor_msgs/PointCloud2' ROS or ROS 2 message.

Output Arguments

xyz — List of XYZ values from point cloud

n -by-3 matrix | h -by- w -by-3 matrix

List of XYZ values from point cloud, returned as a matrix. By default, this is a n -by-3 matrix.

If the `PreserveStructureOnRead` name-value pair argument is set to `true`, the points are returned as an h -by- w -by-3 matrix.

Preserving Point Cloud Structure

Point cloud data can be organized in either 1-D lists or in 2-D image styles. 2-D image styles usually come from depth sensors or stereo cameras. The input `PointCloud2` object contains a `PreserveStructureOnRead` property that is either `true` or `false` (default). Suppose you set the property to `true`.

```
pcloud.PreserveStructureOnRead = true;
```

Now calling any read functions (`rosReadXYZ`, `rosReadRGB`, or `rosReadField`) preserves the organizational structure of the point cloud. When you preserve the structure, the output matrices are of size m -by- n -by- d , where m is the height, n is the width, and d is the number of return values for

each point. Otherwise, all points are returned as a x -by- d list. This structure can be preserved only if the point cloud is organized.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Usage in MATLAB Function block is not supported.

See Also

[rosReadRGB](#) | [rosReadCartesian](#) | [rosReadAllFieldNames](#)

Introduced in R2021a

rosservice

Retrieve information about services in ROS network

Syntax

```
rosservice list
rosservice info svcname
rosservice type svcname
rosservice uri svcname
```

```
svclist = rosservice("list")
svcinfo = rosservice("info",svcname)
svctype = rosservice("type",svcname)
svcuri = rosservice("uri",svcname)
```

Description

`rosservice list` returns a list of service names for all of the active service servers on the ROS network.

`rosservice info svcname` returns information about the specified service, `svcname`.

`rosservice type svcname` returns the service type.

`rosservice uri svcname` returns the URI of the service.

`svclist = rosservice("list")` returns a list of service names for all of the active service servers on the ROS network. `svclist` contains a cell array of service names.

`svcinfo = rosservice("info",svcname)` returns a structure of information, `svcinfo`, about the service, `svcname`.

`svctype = rosservice("type",svcname)` returns the service type of the service as a character vector.

`svcuri = rosservice("uri",svcname)` returns the URI of the service as a character vector.

Examples

View List of ROS Services

Connect to the ROS network. Specify the IP address of your specific network.

```
rosinit('192.168.17.128')
```

```
Initializing global node /matlab_global_node_23375 with NodeURI http://192.168.17.1:64875/
```

List the services available on the ROS master.

```
rosservice list
```

```
/camera/rgb/image_raw/compressed/set_parameters
/camera/set_camera_info
/camera/set_parameters
/depthimage_to_laserscan/set_parameters
/gazebo/apply_body_wrench
/gazebo/apply_joint_effort
/gazebo/clear_body_wrenches
/gazebo/clear_joint_forces
/gazebo/delete_model
/gazebo/get_joint_properties
/gazebo/get_link_properties
/gazebo/get_link_state
/gazebo/get_loggers
/gazebo/get_model_properties
/gazebo/get_model_state
/gazebo/get_physics_properties
/gazebo/get_world_properties
/gazebo/pause_physics
/gazebo/reset_simulation
/gazebo/reset_world
/gazebo/set_joint_properties
/gazebo/set_link_properties
/gazebo/set_link_state
/gazebo/set_logger_level
/gazebo/set_model_configuration
/gazebo/set_model_state
/gazebo/set_parameters
/gazebo/set_physics_properties
/gazebo/spawn_gazebo_model
/gazebo/spawn_sdf_model
/gazebo/spawn_urdf_model
/gazebo/unpause_physics
/laserscan_nodelet_manager/get_loggers
/laserscan_nodelet_manager/list
/laserscan_nodelet_manager/load_nodelet
/laserscan_nodelet_manager/set_logger_level
/laserscan_nodelet_manager/unload_nodelet
/mobile_base_nodelet_manager/get_loggers
/mobile_base_nodelet_manager/list
/mobile_base_nodelet_manager/load_nodelet
/mobile_base_nodelet_manager/set_logger_level
/mobile_base_nodelet_manager/unload_nodelet
/robot_state_publisher/get_loggers
/robot_state_publisher/set_logger_level
/rosout/get_loggers
/rosout/set_logger_level
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_23375 with NodeURI http://192.168.17.1:64875/
```

Get Information, Service Type, and URI for ROS Service

Connect to the ROS network. Specify the IP address of your specific network.

```
rosinit('192.168.17.128')
Initializing global node /matlab_global_node_09263 with NodeURI http://192.168.17.1:65083/
Get information on the |gazebo/pause_physics| service.
svcinfo = rosservice('info','gazebo/pause_physics')
svcinfo = struct with fields:
  Node: '/gazebo'
  URI: 'rosrpc://192.168.17.128:52059'
  Type: 'std_srvs/Empty'
  Args: {}

Get the service type.
svctype = rosservice('type','gazebo/pause_physics')
svctype =
'std_srvs/Empty'

Get the service URI.
svcuri = rosservice('uri','gazebo/pause_physics')
svcuri =
'rosrpc://192.168.17.128:52059'

Shut down the ROS network.
rosshutdown
Shutting down global node /matlab_global_node_09263 with NodeURI http://192.168.17.1:65083/
```

Input Arguments

svcname — Name of service
string scalar | character vector

Name of service, specified as a string scalar or character vector. The service name must match its name in the ROS network.

Output Arguments

svcinfo — Information about a ROS service
character vector

Information about a ROS service, returned as a character vector.

svclist — List of available ROS services
cell array of character vectors

List of available ROS services, returned as a cell array of character vectors.

svctype — Type of ROS service
character vector

Type of ROS service, returned as a character vector.

svcuri – URI for accessing service

character vector

URI for accessing service, returned as a character vector.

See Also

rosinit | rosparam

Introduced in R2019b

rosShowDetails

Display all ROS message contents

Syntax

```
details = rosShowDetails(msg)
```

Description

`details = rosShowDetails(msg)` gets all data contents of the ROS message structure `msg`. The details are stored in `details` or if not specified, are displayed on the command line.

Input Arguments

msg — ROS message

structure

ROS message, specified as a ROS message structure.

Output Arguments

details — Details of ROS message

character vector

Details of a ROS message, returned as a character vector.

See Also

`rosmessage`

Introduced in R2021a

rosshutdown

Shut down ROS system

Syntax

```
rosshutdown
```

Description

rosshutdown shuts down the global node and, if it is running, the ROS master. When you finish working with the ROS network, use `rosshutdown` to shut down the global ROS entities created by `rosinit`. If the global node and ROS master are not running, this function has no effect.

Note After calling `rosshutdown`, any ROS entities (objects) that depend on the global node like subscribers created with `rossubscriber`, are deleted and become unstable.

Prior to calling `rosshutdown`, call `clear` on these objects for a clean removal of ROS entities.

Examples

Start ROS Core and Global Node

```
rosinit
```

```
Launching ROS Core...  
..Done in 2.6741 seconds.  
Initializing ROS master on http://172.30.135.140:52261.  
Initializing global node /matlab_global_node_50000 with NodeURI http://bat6340win64:56224/
```

When you are finished, shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_50000 with NodeURI http://bat6340win64:56224/  
Shutting down ROS master on http://172.30.135.140:52261.
```

See Also

```
rosinit
```

Introduced in R2019b

rostopic

Retrieve information about ROS topics

Syntax

```
rostopic list
rostopic echo topicname
rostopic info topicname
rostopic type topicname

topiclist = rostopic("list")
msg = rostopic("echo", topicname)
topicinfo = rostopic("info", topicname)
msgtype = rostopic("type", topicname)
```

Description

`rostopic list` returns a list of ROS topics from the ROS master.

`rostopic echo topicname` returns the messages being sent from the ROS master about a specific topic, `topicname`. To stop returning messages, press **Ctrl+C**.

`rostopic info topicname` returns the message type, publishers, and subscribers for a specific topic, `topicname`.

`rostopic type topicname` returns the message type for a specific topic.

`topiclist = rostopic("list")` returns a cell array containing the ROS topics from the ROS master. If you do not define the output argument, the list is returned in the MATLAB Command Window.

`msg = rostopic("echo", topicname)` returns the messages being sent from the ROS master about a specific topic, `topicname`. To stop returning messages, press **Ctrl+C**. If the output argument is defined, then `rostopic` returns the first message that arrives on that topic.

`topicinfo = rostopic("info", topicname)` returns a structure containing the message type, publishers, and subscribers for a specific topic, `topicname`.

`msgtype = rostopic("type", topicname)` returns a character vector containing the message type for the specified topic, `topicname`.

Examples

Get List of ROS Topics

Connect to the ROS network. Specify the IP address of the ROS device.

```
rosinit('192.168.17.129',11311)
```

```
Initializing global node /matlab_global_node_01393 with NodeURI http://192.168.17.1:49865/
```


List the ROS topic available on the ROS master.

```
rostopic list
```

```
/camera/depth/camera_info
/camera/depth/image_raw
/camera/depth/points
/camera/parameter_descriptions
/camera/parameter_updates
/camera/rgb/camera_info
/camera/rgb/image_raw
/camera/rgb/image_raw/compressed
/camera/rgb/image_raw/compressed/parameter_descriptions
/camera/rgb/image_raw/compressed/parameter_updates
/clock
/cmd_vel_mux/active
/cmd_vel_mux/input/navi
/cmd_vel_mux/input/safety_controller
/cmd_vel_mux/input/teleop
/cmd_vel_mux/parameter_descriptions
/cmd_vel_mux/parameter_updates
/depthimage_to_laserscan/parameter_descriptions
/depthimage_to_laserscan/parameter_updates
/fibonacci/cancel
/fibonacci/feedback
/fibonacci/goal
/fibonacci/result
/fibonacci/status
/gazebo/link_states
/gazebo/model_states
/gazebo/parameter_descriptions
/gazebo/parameter_updates
/gazebo/set_link_state
/gazebo/set_model_state
/joint_states
/laserscan_nodelet_manager/bond
/mobile_base/commands/motor_power
/mobile_base/commands/reset_odometry
/mobile_base/commands/velocity
/mobile_base/events/bumper
/mobile_base/events/cliff
/mobile_base/sensors/bumper_pointcloud
/mobile_base/sensors/core
/mobile_base/sensors/imu_data
/mobile_base_nodelet_manager/bond
/odom
/rosout
/rosout_agg
/scan
/tf
/tf_static
```

Get ROS Topic Info

Connect to ROS network. Specify the IP address of the ROS device.

```
rosinit('192.168.17.129',11311)
```

```
Initializing global node /matlab_global_node_29625 with NodeURI http://192.168.17.1:50079/
```

Show information on a specific ROS topic.

```
rostopic info camera/depth/points
```

```
Type: sensor_msgs/PointCloud2
```

```
Publishers:
```

```
* /gazebo (http://192.168.17.129:33044/)
```

```
Subscribers:
```

Get ROS Topic Message Type

Connect to the ROS network. Specify the IP address of the ROS device.

```
rosinit('192.168.17.129',11311)
```

```
Initializing global node /matlab_global_node_19218 with NodeURI http://192.168.17.1:55966/
```

Get the message type for a specific topic. Create a message from the message type to publish to the topic.

```
msgtype = rostopic('type','camera/depth/points');  
msg = rosmesssage(msgtype);
```

Input Arguments

topicname — ROS topic name

string scalar | character vector

ROS topic name, specified as a string scalar or character vector. The topic name must match one of the topics that `rostopic("list")` outputs.

Output Arguments

topiclist — List of topics from the ROS master

cell array of character vectors

List of topics from the ROS master, returned as a cell array of character vectors.

msg — ROS message for a given topic

object handle

ROS message for a given topic, returned as an object handle.

topicinfo — Information about a given ROS topic

structure

Information about a ROS topic, returned as a structure. The `topicinfo` syntax includes the message type, publishers, and subscribers associated with that topic.

msgtype — Message type for a ROS topic

character vector

Message type for a ROS topic, returned as a character vector.

Introduced in R2019b

rostype

Access available ROS message types

Syntax

```
rostype
```

Description

`rostype` creates a blank message of a certain type by browsing the list of available message types. You can use tab completion and do not have to rely on typing error-free message type character vectors. By typing `rostype.partialname`, and pressing **Tab**, a list of matching message types appears in a list. By setting the message type equal to a variable, you can create a character vector of that message type. Alternatively, you can create the message by supplying the message type directly into `rosmessage` as an input argument.

Examples

Create ROS Message Type and ROS Message

Create Message Type String

```
t = rostype.std_msgs_String
t =
'std_msgs/String'
```

Create ROS Message from ROS Type

```
msg = rosmessage(rostype.std_msgs_String)
msg =
  ROS String message with properties:
    MessageType: 'std_msgs/String'
    Data: ''
```

Use `showdetails` to show the contents of the message

See Also

`rosmessage` | `rostopic`

Topics

“Built-In Message Support”

“Work with Basic ROS Messages”

Introduced in R2019b

rosWriteBinaryOccupancyGrid

Write values from grid to ROS message

Syntax

```
msgOut = rosWriteBinaryOccupancyGrid(msg,map)
```

Description

`msgOut = rosWriteBinaryOccupancyGrid(msg,map)` writes occupancy values from the occupancy grid map and other information from the ROS message `msg` to an output message `msgOut`.

Input Arguments

msg — 'nav_msgs/OccupancyGrid' ROS message

OccupancyGrid message structure

'nav_msgs/OccupancyGrid' ROS message, specified as a OccupancyGrid message structure.

map — Binary occupancy grid

binaryOccupancyMap object handle

Binary occupancy grid, specified as a binaryOccupancyMap object handle. The object stores a grid of binary values, where 1 indicates an occupied location and 0 indicates an unoccupied location.

Outputs

msgOut — 'nav_msgs/OccupancyGrid' ROS message

OccupancyGrid message structure

'nav_msgs/OccupancyGrid' ROS message, specified as an OccupancyGrid message structure.

You can use the same variable for the input and output argument to directly assign to the existing message.

```
map = occupancyMap(rand(10));
msg = rosmessage("nav_msgs/OccupancyGrid","DataFormat","struct");
msg = rosWriteBinaryOccupancyGrid(msg,map)
```

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Usage in MATLAB Function block is not supported.

See Also

Functions

[rosReadBinaryOccupancyGrid](#) | [rosReadOccupancyMap3D](#) | [rosReadOccupancyGrid](#) | [rosWriteOccupancyGrid](#)

Introduced in R2021a

rosWriteImage

Write MATLAB image to ROS image message

Syntax

```
msgOut = rosWriteImage(msg,img)
msgOut = rosWriteImage(msg,img,alpha)
msgOut = rosWriteImage( ___, "Encoding",encodingParam)
```

Description

`msgOut = rosWriteImage(msg,img)` converts the MATLAB image, `img`, to a message structure and stores the ROS compatible image data in the message structure, `msg`. The message must be a 'sensor_msgs/Image' message. 'sensor_msgs/CompressedImage' messages are not supported. The function does not perform any color space conversion, so the `img` input needs to have the encoding that you specify in the Encoding property of the message.

`msgOut = rosWriteImage(msg,img,alpha)` converts the MATLAB image, `img`, to a message structure. If the image encoding supports an alpha channel (rgba or bgra family), specify this alpha channel in `alpha`. Alternatively, the input image can store the alpha channel as its fourth channel.

`msgOut = rosWriteImage(___, "Encoding",encodingParam)` specifies the encoding of the image message as a name-value argument using any of the previous input arguments. If the Encoding field of the message is not set, use this syntax to set the field.

Input Arguments

msg — ROS image message

Image structure

'sensor_msgs/Image' ROS image message, specified as an Image structure.

img — Image

grayscale image matrix | RGB image matrix | *m*-by-*n*-by-3 array

Image, specified as a matrix representing a grayscale or RGB image or as an *m*-by-*n*-by-3 array, depending on the sensor image.

alpha — Alpha channel

uint8 grayscale image

Alpha channel, specified as a uint8 grayscale image. Alpha must be the same size and data type as `img`.

encodingParam — Encoding of image message

"rgb8" | "rgba8" | "rgb16" | string scalar

Encoding of image message, specified as a string scalar. Using this input argument overwrites the Encoding field of the input `msg`. For more information, see "ROS Image Encoding" on page 1-188.

Outputs

msgOut — ROS image message

Image structure

'sensor_msgs/Image' ROS image message, specified as an Image structure. 'sensor_msgs/Image' image messages are not supported.

You can use the same variable for the input and output argument to directly assign to the existing message.

```
img = uint8(10*rand(128,128,3));  
msg = rosmessage("sensor_msgs/Image", "DataFormat", "struct");  
msg = rosWriteImage(msg, img, "Encoding", "rgb8");
```

ROS Image Encoding

You must specify the correct encoding of the input image in the Encoding property of the image message. If you do not specify the image encoding before calling the function, the default encoding, `rgb8`, is used (3-channel RGB image with uint8 values). The function does not perform any color space conversion, so the `img` input needs to have the encoding that you specify in the Encoding property of the message.

All encoding types supported for the `rosReadImage` are also supported in this function. For more information on supported encoding types and their representations in MATLAB, see `rosReadImage`.

Bayer-encoded images (`bayer_rggb8`, `bayer_bggr8`, `bayer_gbrg8`, `bayer_grbg8`, and their 16-bit equivalents) must be given as 8-bit or 16-bit single-channel images or they do not encode.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Specify the "Encoding", `encodParam` name-value argument when generating code.
- Usage in MATLAB Function block is not supported.

See Also

`rosReadImage` | `readRGB`

Introduced in R2021a

rosWriteOccupancyGrid

Write values from grid to ROS message

Syntax

```
msgOut = rosWriteOccupancyGrid(msg,map)
```

Description

`msgOut = rosWriteOccupancyGrid(msg,map)` writes occupancy values from the occupancy grid map and other information from the ROS message `msg` to an output message `msgOut`.

Input Arguments

msg — 'nav_msgs/OccupancyGrid' ROS message
OccupancyGrid message structure

'nav_msgs/OccupancyGrid' ROS message, specified as an OccupancyGrid message structure.

map — Occupancy map
occupancyMap object handle

Occupancy map, specified as an occupancyMap object handle.

Outputs

msgOut — 'nav_msgs/OccupancyGrid' ROS message
OccupancyGrid message structure

'nav_msgs/OccupancyGrid' ROS message, specified as an OccupancyGrid message structure.

You can use the same variable for the input and output argument to directly assign to the existing message.

```
map = occupancyMap(rand(10));
msg = rosmessage("nav_msgs/OccupancyGrid","DataFormat","struct");
msg = rosWriteOccupancyGrid(msg,map)
```

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Usage in MATLAB Function block is not supported.

See Also

Functions

[rosReadBinaryOccupancyGrid](#) | [rosReadOccupancyGrid](#) | [rosReadOccupancyMap3D](#) | [rosWriteBinaryOccupancyGrid](#)

Introduced in R2021a

runCore

Start ROS core

Syntax

```
runCore(device)
```

Description

`runCore(device)` starts the ROS core on the connected device. The ROS master uses a default port number of 11311.

Examples

Run ROS Core on ROS Device

Connect to a remote ROS device and start a ROS core. The ROS core is needed to run ROS nodes to communicate via a ROS network. You can run and stop a ROS core or node and check their status using a `rosdevice` object.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device contains information about the ROS device, including the available ROS nodes that can be run using `runNode`.

```
ipaddress = '192.168.203.131';
d = rosdevice(ipaddress, 'user', 'password')

d =
  rosdevice with properties:

    DeviceAddress: '192.168.203.131'
    Username: 'user'
    ROSFolder: '/opt/ros/indigo'
    CatkinWorkspace: '~/catkin_ws'
    AvailableNodes: {'voxel_grid_filter_sl'}
```

Run a ROS core and check if it is running.

```
runCore(d)
```

Another `roscore` / ROS master is already running on the ROS device. Use the `'stopCore'` function to

```
running = isCoreRunning(d)
```

```
running = logical
         1
```

Stop the ROS core and confirm that it is no longer running.

```
stopCore(d)
pause(2)
running = isCoreRunning(d)

running = logical
         0
```

Input Arguments

device – ROS device

rosdevice object

ROS device, specified as a rosdevice object.

See Also

rosdevice | stopCore | isCoreRunning

Topics

“Generate a Standalone ROS Node from Simulink®”

Introduced in R2019b

runNode

Start ROS or ROS 2 node

Syntax

```
runNode(device,modelName)
runNode(device,modelName,masterURI)
runNode(device,modelName,masterURI,nodeHost)
```

Description

`runNode(device,modelName)` starts the ROS or ROS 2 node associated with the deployed Simulink model named `modelName`. The node must be deployed in the workspace specified by the `CatkinWorkspace` property of the input `rosdevice` object or the `ROS2Workspace` property of the input `ros2device` object, `device`. By default, the node connects to the ROS master that MATLAB is connected to with the `device.DeviceAddress` property.

`runNode(device,modelName,masterURI)` connects to the specified master URI. This syntax is applicable only when `device` is a `rosdevice` object.

`runNode(device,modelName,masterURI,nodeHost)` connects to the specified master URI and node host. The node advertises its address as the host name or IP address given in `nodeHost`. This syntax is applicable only when `device` is a `rosdevice` object.

Examples

Run ROS Node on ROS Device

Connect to a remote ROS device and start a ROS node. Run a ROS core so that ROS nodes can communicate via a ROS network. You can run and stop a ROS core or node and check their status using a `rosdevice` object.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device already contains the available ROS nodes that can be run using `runNode`.

```
ipaddress = '192.168.203.129';
d = rosdevice(ipaddress,'user','password');
d.ROSFolder = '/opt/ros/indigo';
d.CatkinWorkspace = '~/catkin_ws_test'

d =
  rosdevice with properties:

    DeviceAddress: '192.168.203.129'
    Username: 'user'
    ROSFolder: '/opt/ros/indigo'
    CatkinWorkspace: '~/catkin_ws_test'
    AvailableNodes: {'robotcontroller' 'robotcontroller2'}
```

Run a ROS core. Connect MATLAB® to the ROS master using `rosinit`. This core enables you to run ROS nodes on your ROS device.

```
runCore(d)
rosinit(d.DeviceAddress,11311)
```

```
Initializing global node /matlab_global_node_84497 with NodeURI http://192.168.203.1:56034/
```

Check the available ROS nodes on the connected ROS device. These nodes listed were generated from Simulink® models following the process in the “Get Started with ROS in Simulink®” example.

`d.AvailableNodes`

```
ans = 1x2 cell
      {'robotcontroller'}    {'robotcontroller2'}
```

Run a ROS node and specify the node name. Check if the node is running.

```
runNode(d, 'RobotController')
running = isNodeRunning(d, 'RobotController')
```

```
running = logical
         1
```

Stop the ROS node. Disconnect from the ROS network. Stop the ROS core.

```
stopNode(d, 'RobotController')
rosshutdown
```

```
Shutting down global node /matlab_global_node_84497 with NodeURI http://192.168.203.1:56034/
```

```
stopCore(d)
```

Run Multiple ROS Nodes

Run multiple ROS nodes on a connected ROS device. ROS nodes can be generated using Simulink® models to perform different tasks on the ROS network. These nodes are then deployed on a ROS device and can be run independently of Simulink®.

This example uses two different Simulink models that have been deployed as ROS nodes. See “Generate a Standalone ROS Node from Simulink®” and follow the instructions to generate and deploy a ROS node. Do this twice and name them 'robotcontroller' and 'robotcontroller2'. The 'robotcontroller' node sends velocity commands to a robot to navigate it to a given point. The 'robotcontroller2' node uses the same model, but doubles the linear velocity to drive the robot faster.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device contains information about the ROS device, including the available ROS nodes that can be run using `runNode`.

```
ipaddress = '192.168.203.129';
d = rosdevice(ipaddress, 'user', 'password')
```

```

d =
  rosdevice with properties:

    DeviceAddress: '192.168.203.129'
    Username: 'user'
    ROSFolder: '/opt/ros/indigo'
    CatkinWorkspace: '~/catkin_ws'
    AvailableNodes: {0x1 cell}

d.CatkinWorkspace = '~/catkin_ws_test'

d =
  rosdevice with properties:

    DeviceAddress: '192.168.203.129'
    Username: 'user'
    ROSFolder: '/opt/ros/indigo'
    CatkinWorkspace: '~/catkin_ws_test'
    AvailableNodes: {'robotcontroller' 'robotcontroller2'}

```

Run a ROS core. The ROS Core is the master enables you to run ROS nodes on your ROS device. Connect MATLAB® to the ROS master using `rosinit`. For this example, the port is set to 11311. `rosinit` can automatically select a port for you without specifying this input.

```

runCore(d)
rosinit(d.DeviceAddress,11311)

```

```

Initializing global node /matlab_global_node_66434 with NodeURI http://192.168.203.1:59395/

```

Check the available ROS nodes on the connected ROS device. The nodes listed in this example were generated from Simulink® models following the process in the “Generate a Standalone ROS Node from Simulink®” example. Two separate nodes are generated, 'robotcontroller' and 'robotcontroller2', which have the linear velocity set to 1 and 2 in the model respectively.

```

d.AvailableNodes

ans = 1x2 cell
    {'robotcontroller'}    {'robotcontroller2'}


```

Start up the Robot Simulator using `ExampleHelperSimulinkRobotROS`. This simulator automatically connects to the ROS master on the ROS device. You will use this simulator to run a ROS node and control the robot.

```


sim = ExampleHelperSimulinkRobotROS;

```

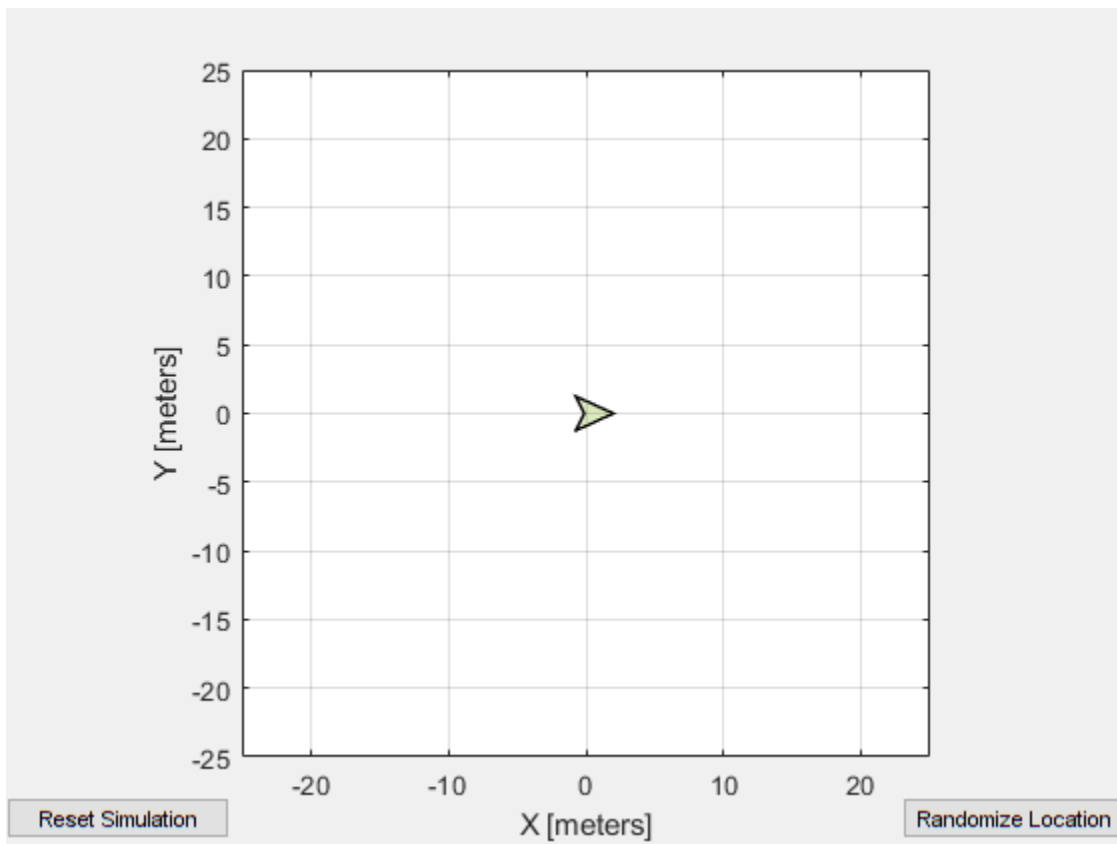


Run a ROS node, specifying the node name. The 'robotcontroller' node commands the robot to a specific location ([-10 10]). Wait to see the robot drive.

```
runNode(d, 'robotcontroller')  
pause(10)
```

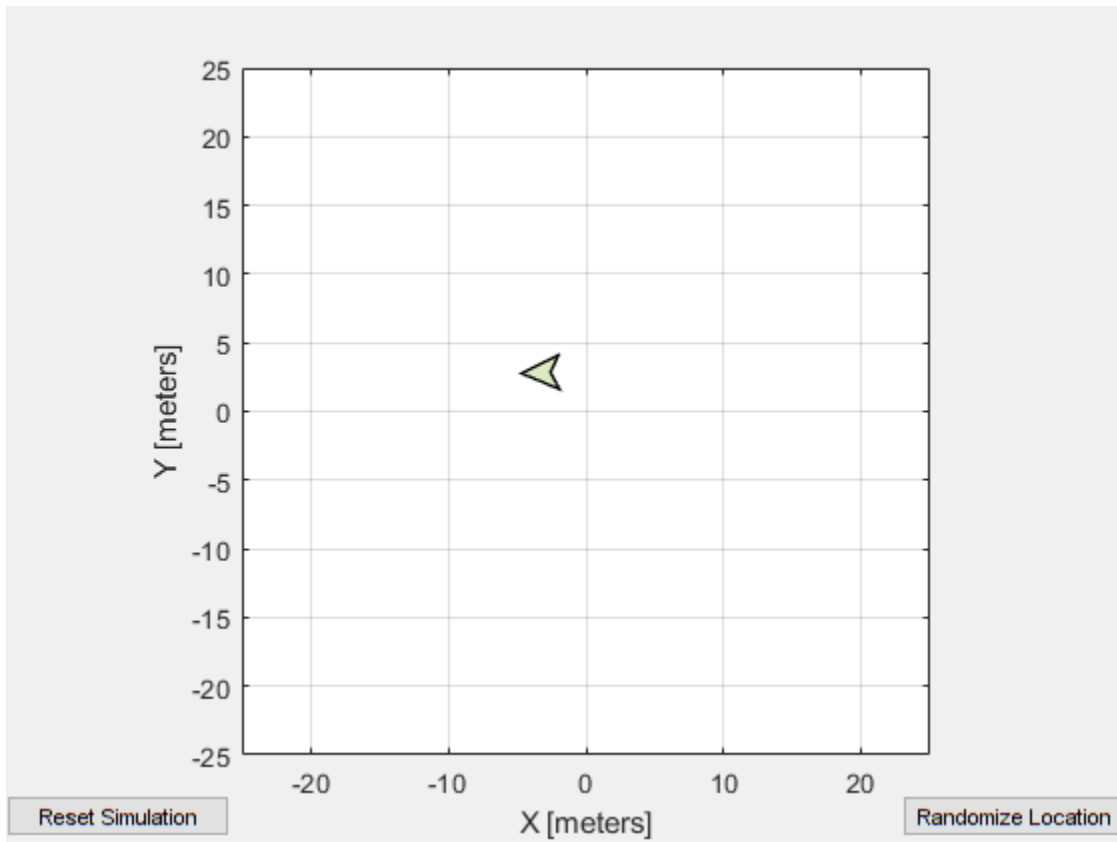Reset the Robot Simulator to reset the robot position. Alternatively, click **Reset Simulation**. Because the node is still running, the robot continues back to the specific location. To stop sending commands, stop the node.


```
resetSimulation(sim.Simulator)  
pause(5)
```

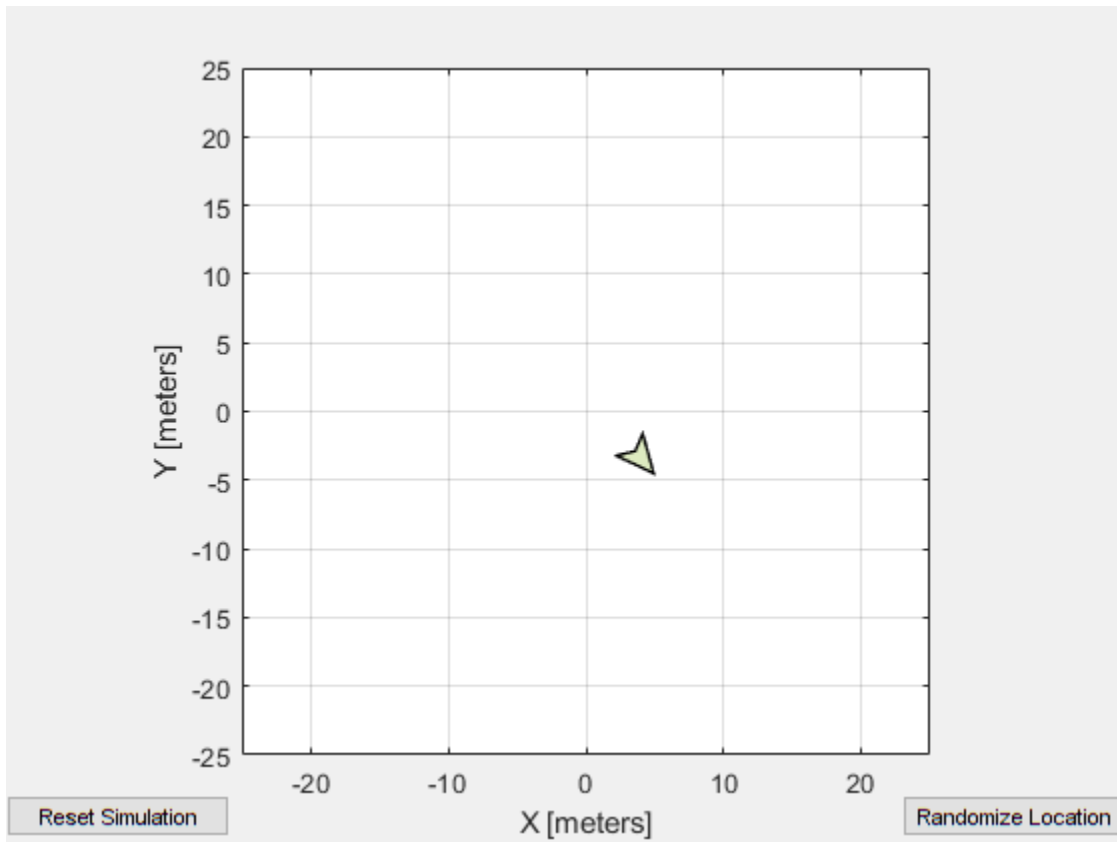

```
stopNode(d, 'robotcontroller')
```

Run the 'robotcontroller2' node. This model drives the robot with twice the linear velocity. Reset the robot position. Wait to see the robot drive. You should see a wider turn due to the increased velocity.

```
runNode(d, 'robotcontroller2')  
resetSimulation(sim.Simulator)  
pause(10)
```

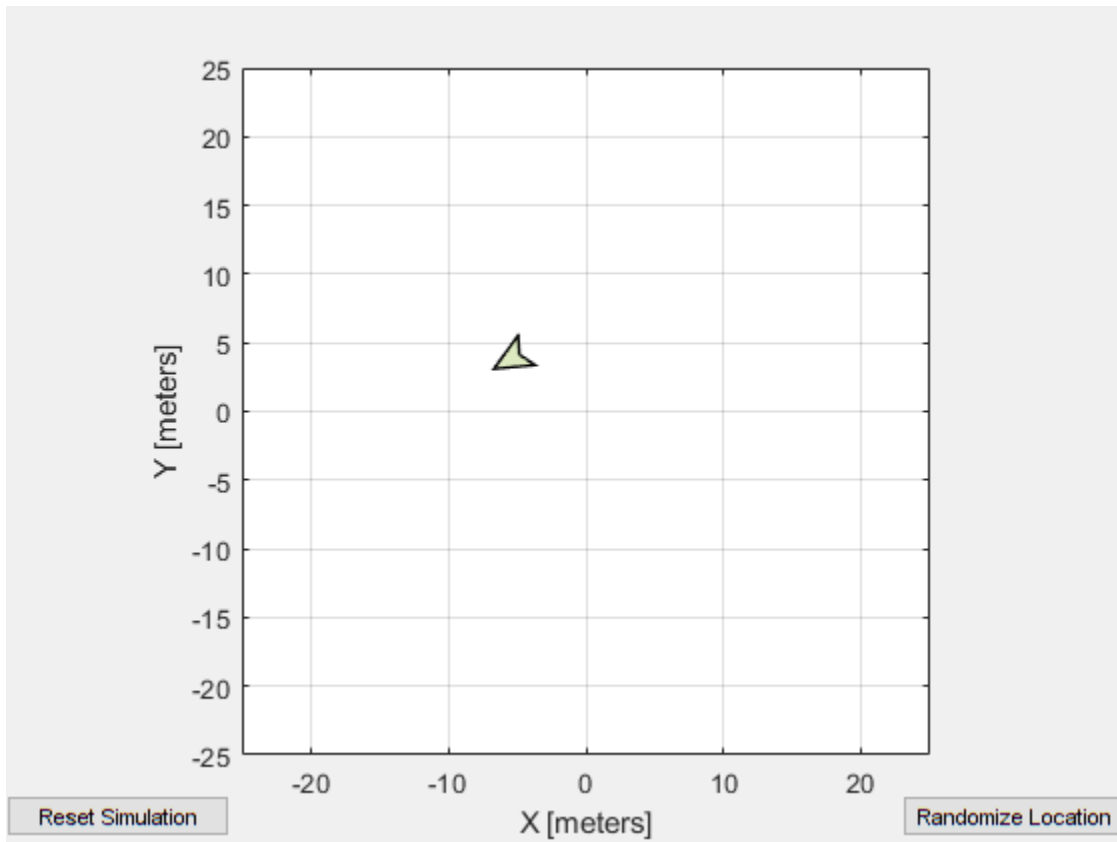

Close the simulator. Stop the ROS node. Disconnect from the ROS network and stop the ROS core.

```
close
stopNode(d, 'robotcontroller2')
roshutdown
```

```
Shutting down global node /matlab_global_node_66434 with NodeURI http://192.168.203.1:59395/
stopCore(d)
```

Input Arguments

device — ROS or ROS 2 device

rosdevice object | ros2device object

ROS or ROS 2 device, specified as a rosdevice or ros2device object, respectively.

modelName — Name of the deployed Simulink model

character vector

Name of the deployed Simulink model, specified as a character vector. If the model name is not valid, the function returns an error.

masterURI — URI of the ROS master

character vector

URI of the ROS master, specified as a character vector. On startup, the node connects to the ROS master with the given URI.

nodeHost — Host name for the node

character vector

Host name for the node, specified as a character vector. The node uses this host name to advertise itself on the ROS network for others to connect to it.

See Also

`rosdevice` | `ros2device` | `stopNode` | `isNodeRunning`

Topics

“Connect to a ROS Network”

“Generate a Standalone ROS Node from Simulink®”

“Generate a Standalone ROS 2 Node from Simulink®”

Introduced in R2019b

scatter3

Display point cloud in scatter plot

Syntax

```
scatter3(pcloud)
scatter3(pcloud,Name,Value)
h = scatter3( ___ )
```

Description

`scatter3(pcloud)` plots the input `pcloud` point cloud as a 3-D scatter plot in the current axes handle. If the data contains RGB information for each point, the scatter plot is colored accordingly.

`scatter3(pcloud,Name,Value)` provides additional options specified by one or more `Name,Value` pair arguments. `Name` must appear inside single quotes (' '). You can specify several name-value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

`h = scatter3(___)` returns the scatter series object, using any of the arguments from previous syntaxes. Use `h` to modify properties of the scatter series after it is created.

When plotting ROS point cloud messages, MATLAB follows the standard ROS convention for axis orientation. This convention states that **positive x is forward, positive y is left, and positive z is up**. If cameras are used, a second frame is defined with an “_optical” suffix that changes the orientation of the axis. In this case, positive z is forward, positive x is right, and positive y is down. MATLAB looks for the “_optical” suffix and will adjust the axis orientation of the scatter plot accordingly. For more information, see [Axis Orientation](#) on the ROS Wiki.

Examples

Get and Plot a 3-D Point Cloud

Connect to a ROS network. Subscribe to a point cloud message topic.


```
rosinit('192.168.17.129')
```

```
Initializing global node /matlab_global_node_65972 with NodeURI http://192.168.17.1:51971/
```

```
sub = rossubscriber('/camera/depth/points');
pause(1)
```


Get the latest point cloud message. Plot the point cloud.

```
pcloud = sub.LatestMessage;
scatter3(pcloud)
```

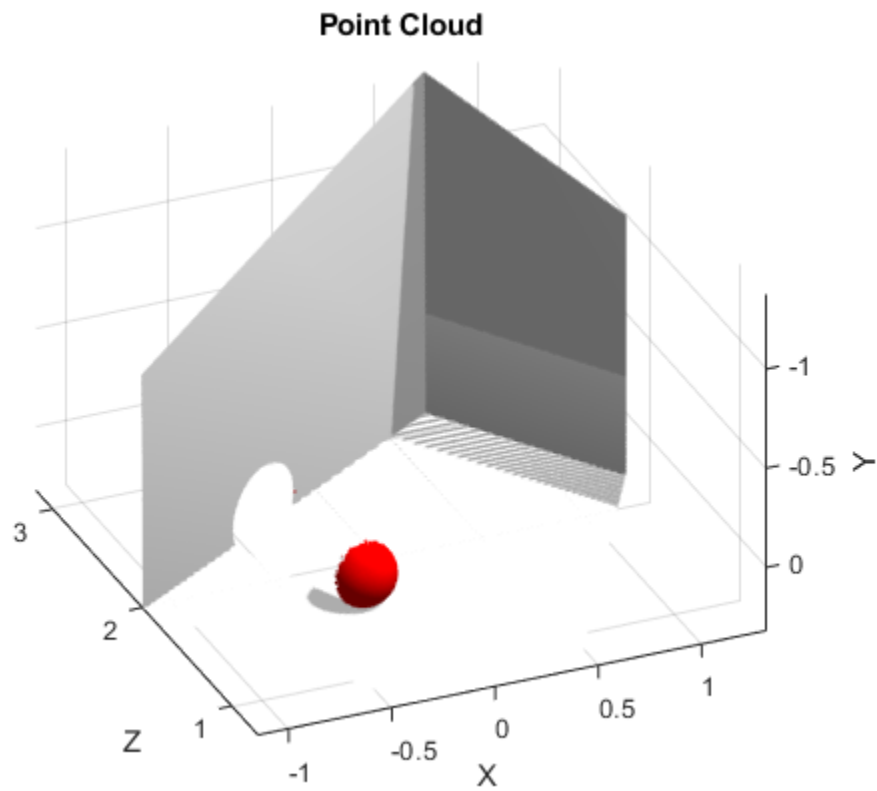

Plot all points as black dots.

```
scatter3(sub.LatestMessage, 'MarkerEdgeColor', [0 0 0]);
```

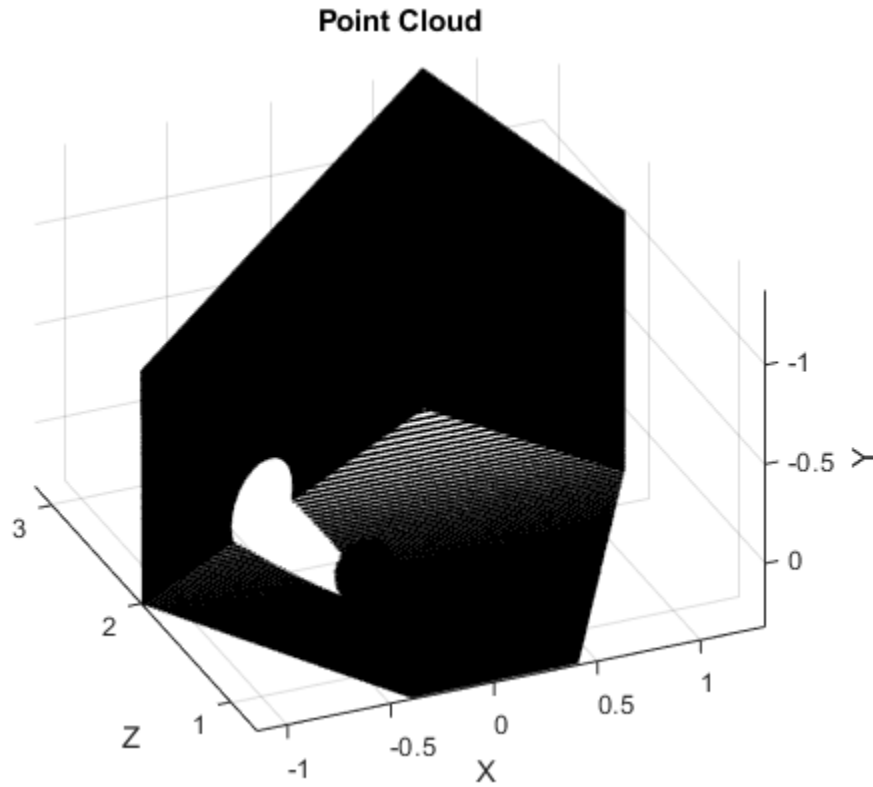

Input Arguments

pcloud — Point cloud

PointCloud2 object handle

Point cloud, specified as a PointCloud2 object handle for a 'sensor_msgs/PointCloud2' ROS message.

Name-Value Pair Arguments

Specify optional comma-separated pairs of **Name**, **Value** arguments. **Name** is the argument name and **Value** is the corresponding value. **Name** must appear inside quotes. You can specify several name and value pair arguments in any order as **Name1**, **Value1**, ..., **NameN**, **ValueN**.

Example: 'MarkerEdgeColor',[1 0 0]

MarkerEdgeColor — Marker outline color









'flat' (default) | RGB triplet | hexadecimal color code | 'r' | 'g' | 'b' | ...

Marker outline color, specified 'flat', an RGB triplet, a hexadecimal color code, a color name, or a short name. The default value of 'flat' uses colors from the CData property.


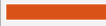


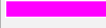


For a custom color, specify an RGB triplet or a hexadecimal color code.

- An RGB triplet is a three-element row vector whose elements specify the intensities of the red, green, and blue components of the color. The intensities must be in the range $[0, 1]$; for example, $[0.4 \ 0.6 \ 0.7]$.
- A hexadecimal color code is a character vector or a string scalar that starts with a hash symbol (#) followed by three or six hexadecimal digits, which can range from 0 to F. The values are not case sensitive. Thus, the color codes '#FF8800', '#ff8800', '#F80', and '#f80' are equivalent.

Alternatively, you can specify some common colors by name. This table lists the named color options, the equivalent RGB triplets, and hexadecimal color codes.

Color Name	Short Name	RGB Triplet	Hexadecimal Color Code	Appearance
'red'	'r'	[1 0 0]	'#FF0000'	
'green'	'g'	[0 1 0]	'#00FF00'	
'blue'	'b'	[0 0 1]	'#0000FF'	
'cyan'	'c'	[0 1 1]	'#00FFFF'	
'magenta'	'm'	[1 0 1]	'#FF00FF'	
'yellow'	'y'	[1 1 0]	'#FFFF00'	
'black'	'k'	[0 0 0]	'#000000'	
'white'	'w'	[1 1 1]	'#FFFFFF'	
'none'	Not applicable	Not applicable	Not applicable	No color

Here are the RGB triplets and hexadecimal color codes for the default colors MATLAB uses in many types of plots.

RGB Triplet	Hexadecimal Color Code	Appearance
[0 0.4470 0.7410]	'#0072BD'	
[0.8500 0.3250 0.0980]	'#D95319'	
[0.9290 0.6940 0.1250]	'#EDB120'	
[0.4940 0.1840 0.5560]	'#7E2F8E'	
[0.4660 0.6740 0.1880]	'#77AC30'	
[0.3010 0.7450 0.9330]	'#4DBEEE'	
[0.6350 0.0780 0.1840]	'#A2142F'	

Example: $[0.5 \ 0.5 \ 0.5]$

Example: 'blue'

Example: '#D2F9A7'

Parent — Parent of axes

axes object

Parent of axes, specified as the comma-separated pair consisting of 'Parent' and an axes object in which to draw the point cloud. By default, the point cloud is plotted in the active axes.

Outputs

h — Scatter series object

scalar

Scatter series object, returned as a scalar. This value is a unique identifier, which you can use to query and modify the properties of the scatter object after it is created.

See Also

readXYZ | readRGB

Introduced in R2019b

search

Search ROS network for parameter names

Syntax

```
pnames = search(ptree,searchstr)
[pnames,pvalues] = search(ptree,searchstr)
```

Description

`pnames = search(ptree,searchstr)` searches within the parameter tree `ptree` and returns the parameter names that contain the specified search string, `searchstr`.

`[pnames,pvalues] = search(ptree,searchstr)` also returns the parameter values.

The following ROS data types are supported as values of parameters. For each ROS data type, the corresponding MATLAB data type is also listed:

- 32-bit integers — `int32`
- Booleans — `logical`
- doubles — `double`
- strings — string scalar, `string`, or character vector, `char`
- lists — cell array
- dictionaries — structure

Examples

Search for ROS Parameter Names

Connect to ROS network. Specify the IP address of the ROS master.

```
rosinit('192.168.17.128')
```

```
Initializing global node /matlab_global_node_48144 with NodeURI http://192.168.17.1:54848/
```

Create a parameter tree.

```
ptree = rosparam;
```

Search for parameter names that contain 'gravity'.

```
[pnames,pvalues] = search(ptree,'gravity')
```

```
pnames = 1x3 cell array
    {'/gazebo/gravity_x'}    {'/gazebo/gravity_y'}    {'/gazebo/gravity_z'}
```

```
pvalues = 3x1 cell array
    {[    0]}
```

```
{[ 0]}
```

```
{[-9.8000]}
```

Input Arguments

ptree — Parameter tree

ParameterTree object handle

Parameter tree, specified as a ParameterTree object handle. Create this object using the `rosparam` function.

searchstr — ROS parameter search string

string scalar | character vector

ROS parameter search string specified as a string scalar or character vector. The `search` function returns all parameters that contain this character vector.

Output Arguments

pnames — Parameter values

cell array of character vectors

Parameter names, returned as a cell array of character vectors. These character vectors match the parameter names in the ROS master that contain the search character vector.

pvalues — Parameter values

cell array

The following ROS data types are supported as values of parameters. For each ROS data type, the corresponding MATLAB data type is also listed:

- 32-bit integers — `int32`
- Booleans — `logical`
- doubles — `double`
- strings — string scalar, `string`, or character vector, `char`
- lists — cell array
- dictionaries — structure

Base64-encoded binary data and iso 8601 data from ROS are not supported.

Limitations

Base64-encoded binary data and iso 8601 data from ROS are not supported.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

This function supports C/C++ code generation with the limitations:

- Retrieving values is not supported.

See Also

get | rosparam

Introduced in R2019b

seconds

Returns seconds of a time or duration

Syntax

```
secs = seconds(time)
secs = seconds(duration)
```

Description

`secs = seconds(time)` returns the scalar number, `secs`, in seconds that represents the same value as the time object, `time`.

`secs = seconds(duration)` returns the scalar number, `secs`, in seconds that represents the same value as the duration object, `duration`.

Input Arguments

time — Current ROS or system time

Time object handle

ROS or system time, specified as a Time object handle. Create a Time object using `rostime`.

duration — Duration

ROS Duration object

Duration, specified as a ROS Duration object with `Sec` and `Nsec` properties. Create a Duration object using `rosduration`.

Output Arguments

secs — Total time

scalar in seconds

Total time of the Time or Duration object, returned as a scalar in seconds.

See Also

`rosduration` | `rostime`

Introduced in R2019b

select

Select subset of messages in rosbag

Syntax

```
bagsel = select(bag)
bagsel = select(bag,Name,Value)
```

Description

`bagsel = select(bag)` returns a `BagSelection` object, `bagsel`, that contains all of the messages in the `BagSelection` object, `bag`.

This function creates a copy of the `BagSelection` object or returns a new `BagSelection` object that contains the specified message selection.

`bagsel = select(bag,Name,Value)` provides additional options specified by one or more name-value pair arguments. For example, "Topic", "/odom" selects a subset of the messages, filtered by the topic /odom.

Examples

Create Copy of rosbag

Retrieve the rosbag. Specify the file path.

```
bag = rosbag('ex_multiple_topics.bag');
```

Use `select` with no selection criteria to create a copy of the rosbag.

```
bagCopy = select(bag);
```

Select Subset of Messages In rosbag

Retrieve the rosbag. Specify the file path.

```
bag = rosbag('ex_multiple_topics.bag');
```

Select all messages within the first second of the rosbag.

```
bag = select(bag, 'Time', [bag.StartTime, bag.StartTime + 1]);
```

Input Arguments

bag — Messages in rosbag

`BagSelection` object

Messages in a rosbag, specified as a `BagSelection` object.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

Example: `"Topic", "/odom"` selects a subset of the messages, filtered by the topic `/odom`.

MessageType — ROS message type

string scalar | character vector | cell array of string scalars | cell array of character vectors

ROS message type, specified as a string scalar, character vector, cell array of string scalars, or cell array of character vectors. Multiple message types can be specified with a cell array.

Example: `select(bag, "MessageType", {"nav_msgs/Odometry", "rosgraph_msgs/Clock"})`

Data Types: char | string | cell

Time — Start and end times of rosbag selection

n-by-2 vector

Start and end times of the rosbag selection, specified as an *n*-by-2 vector.

Example: `select(bag, "Time", [bag.StartTime, bag.StartTime+1])`

Data Types: double

Topic — ROS topic name

string scalar | character vector | cell array of string scalars | cell array of character vectors

ROS topic name, specified as a string scalar, character vector, cell array of string scalars, or cell array of character vectors. Multiple topic names can be specified with a cell array.

Example: `select(bag, "Topic", {"odom", "clock"})`

Data Types: char | string | cell

Output Arguments

bagsel — Copy or subset of rosbag messages

`BagSelection` object

Copy or subset of rosbag messages, returned as a `BagSelection` object.

See Also

`readMessages` | `rosbag` | `timeseries`

Introduced in R2019b

send

Publish ROS message to topic

Syntax

```
send(pub,msg)
```

Description

`send(pub,msg)` publishes a message to the topic specified by the publisher, `pub`. This message can be received by all subscribers in the ROS network that are subscribed to the topic specified by `pub`.

Examples

Create, Send, and Receive ROS Messages

Set up a publisher and subscriber to send and receive a message on a ROS network.

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
```

```
..Done in 2.1613 seconds.
```

```
Initializing ROS master on http://172.30.135.140:55490.
```

```
Initializing global node /matlab_global_node_43982 with NodeURI http://bat6340win64:59258/
```

Create a publisher with a specific topic and message type. You can also return a default message to send using this publisher.

```
[pub,msg] = rospublisher('position','geometry_msgs/Point');
```

Modify the message before sending it over the network.

```
msg.X = 1;  
msg.Y = 2;  
send(pub,msg);
```

Create a subscriber and wait for the latest message. Verify the message is the one you sent.

```
sub = rossubscriber('position')
```

```
sub =
```

```
Subscriber with properties:
```

```
    TopicName: '/position'  
 LatestMessage: [1x1 Point]  
  MessageType: 'geometry_msgs/Point'  
   BufferSize: 1  
NewMessageFcn: []  
   DataFormat: 'object'
```



```
pause(1);
sub.LatestMessage

ans =
  ROS Point message with properties:

  MessageType: 'geometry_msgs/Point'
             X: 1
             Y: 2
             Z: 0

  Use showdetails to show the contents of the message
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_43982 with NodeURI http://bat6340win64:59258/
Shutting down ROS master on http://172.30.135.140:55490.
```

Input Arguments

pub — ROS publisher

Publisher object handle

ROS publisher, specified as a `Publisher` object handle. You can create the object using `rospublisher`.

msg — ROS message

Message object handle | structure

ROS message, specified as a `Message` object handle or structure. You can create object using `rosmessage`.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 1-213.

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")  
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")  
...  
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see "Improve Performance of ROS Using Message Structures".

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for `struct` messages.

See Also

`receive` | `rosmessage` | `rostopic` | `rossubscriber` | `rospublisher`

Topics

"Exchange Data with ROS Publishers and Subscribers"

Introduced in R2019b

sendGoal

Send goal message to action server

Syntax

```
sendGoal(client, goalMsg)
```

Description

`sendGoal(client, goalMsg)` sends a goal message to the action server. The specified action client tracks this goal. The function does not wait for the goal to be executed and returns immediately.

If the `ActionFcn`, `FeedbackFcn`, and `ResultFcn` callbacks of the client are defined, they are called when the goal is processing on the action server. All callbacks associated with a previously sent goal are disabled, but the previous goal is not canceled.

Examples

Create And Send A ROS Action Goal Message

This example shows how to create goal messages and send to an already active ROS action server on a ROS network. You must create a ROS action client to connect to this server. To run the action server, this command is used on the ROS distribution:

```
roslaunch turtlebot_actions server_turtlebot_move.launch
```

Afterward, connect to the ROS node using `roscpp` with the correct IP address.

```
roscpp('192.168.17.129', 11311)
```

```
Initializing global node /matlab_global_node_27318 with NodeURI http://192.168.17.1:60260/
```

Create a ROS action client and get a goal message. The `actClient` object connects to the already running ROS action server. The `goalMsg` is a valid goal message. Update the message parameters with your specific goal.

```
[actClient, goalMsg] = roscppactionclient('/turtlebot_move');
disp(goalMsg)
```

```
ROS TurtlebotMoveGoal message with properties:
```

```
    MessageType: 'turtlebot_actions/TurtlebotMoveGoal'
    TurnDistance: 0
    ForwardDistance: 0
```

```
Use showdetails to show the contents of the message
```

You can also create a message using `rosmake` and the action client object. This message sends linear and angular velocity commands to a Turtlebot® robot.

```
goalMsg = rosmesssage(actClient);  
disp(goalMsg)
```

ROS TurtlebotMoveGoal message with properties:

```
    MessageType: 'turtlebot_actions/TurtlebotMoveGoal'  
    TurnDistance: 0  
    ForwardDistance: 0
```

Use `showdetails` to show the contents of the message

Modify the goal message parameters and send the goal to the action server.

```
goalMsg.ForwardDistance = 2;  
sendGoal(actClient,goalMsg)
```

Send and Cancel ROS Action Goals

This example shows how to send and cancel goals for ROS actions. Action types must be setup beforehand with an action server running.

You must have set up the `'/fibonacci'` action type. To run this action server, use the following command on the ROS system:

```
roslaunch actionlib_tutorials fibonacci_server
```

First, set up a ROS action client. Then, send a goal message with modified parameters. Finally, cancel your goal and all goals on the action server.

Connect to a ROS network with a specified IP address. Create a ROS action client connected to the ROS network using `rosactionclient`. Specify the action name. Wait for the client to be connected to the server.

```
rosinit('192.168.203.133',11311)
```

```
Initializing global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

```
[actClient,goalMsg] = rosactionclient('/fibonacci','DataFormat','struct');  
waitForServer(actClient);
```

Send a goal message with modified parameters. Wait for the goal to finish executing.

```
goalMsg.Order = int32(4);  
[resultMsg,resultState] = sendGoalAndWait(actClient,goalMsg)
```

```
resultMsg = struct with fields:  
    MessageType: 'actionlib_tutorials/FibonacciResult'  
    Sequence: [0 1 1 2 3]
```

```
resultState =  
'succeeded'
```

```
rosShowDetails(resultMsg)
```

```
ans =  
,
```

```

MessageType : actionlib_tutorials/FibonacciResult
Sequence     : [0, 1, 1, 2, 3]'

```

Send a new goal message without waiting.

```

goalMsg.Order = int32(5);
sendGoal(actClient,goalMsg)

```

Cancel the goal on the ROS action client, `actClient`.

```
cancelGoal(actClient)
```

Cancel all the goals on the action server that `actClient` is connected to.

```
cancelAllGoals(actClient)
```

Delete the action client.

```
delete(actClient)
```

Disconnect from the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

Input Arguments

client — ROS action client

`SimpleActionClient` object handle

ROS action client, specified as a `SimpleActionClient` object handle. This simple action client enables you to track a single goal at a time.

goalMsg — ROS action goal message

Message object handle | structure

ROS action goal message, specified as a `Message` object handle or structure. Update this message with your goal details and send it to the ROS action client using `sendGoal` or `sendGoalAndWait`.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 1-217.

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but

message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see "Improve Performance of ROS Using Message Structures".

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

[sendGoalAndWait](#) | [cancelGoal](#) | [rosactionclient](#) | [rosaction](#)

Topics

"ROS Actions Overview"

"Move a Turtlebot Robot Using ROS Actions"

Introduced in R2019b

sendGoalAndWait

Send goal message and wait for result

Syntax

```
resultMsg = sendGoalAndWait(client,goalMsg)
resultMsg = sendGoalAndWait(client,goalMsg,timeout)
[resultMsg,state,status] = sendGoalAndWait( ___ )
```

Description

`resultMsg = sendGoalAndWait(client,goalMsg)` sends a goal message using the specified action client to the action server and waits until the action server returns a result message. Press **Ctrl+C** to abort the wait.

`resultMsg = sendGoalAndWait(client,goalMsg,timeout)` specifies a timeout period in seconds. If the server does not return the result in the timeout period, the function displays an error.

`[resultMsg,state,status] = sendGoalAndWait(___)` returns the final goal state and associated status text using any of the previous syntaxes. The `state` contains information about whether the goal execution succeeded or not.

Note In a future release, this syntax will not display an error if the server does not return the result in the timeout period. Instead, it will return the `state` as 'timeout', which can be reacted to in the calling code.

Examples

Send and Cancel ROS Action Goals

This example shows how to send and cancel goals for ROS actions. Action types must be setup beforehand with an action server running.

You must have set up the '/fibonacci' action type. To run this action server, use the following command on the ROS system:

```
roslaunch actionlib_tutorials fibonacci_server
```

First, set up a ROS action client. Then, send a goal message with modified parameters. Finally, cancel your goal and all goals on the action server.

Connect to a ROS network with a specified IP address. Create a ROS action client connected to the ROS network using `rosactionclient`. Specify the action name. Wait for the client to be connected to the server.

```
rosinit('192.168.203.133',11311)
```

```
Initializing global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

```
[actClient,goalMsg] = rosactionclient('/fibonacci','DataFormat','struct');
waitForServer(actClient);
```

Send a goal message with modified parameters. Wait for the goal to finish executing.

```
goalMsg.Order = int32(4);
[resultMsg,resultState] = sendGoalAndWait(actClient,goalMsg)
```

```
resultMsg = struct with fields:
  MessageType: 'actionlib_tutorials/FibonacciResult'
  Sequence: [0 1 1 2 3]
```

```
resultState =
'succeeded'
```

```
rosShowDetails(resultMsg)
```

```
ans =
_
      MessageType : actionlib_tutorials/FibonacciResult
      Sequence    : [0, 1, 1, 2, 3]'
```

Send a new goal message without waiting.

```
goalMsg.Order = int32(5);
sendGoal(actClient,goalMsg)
```

Cancel the goal on the ROS action client, `actClient`.

```
cancelGoal(actClient)
```

Cancel all the goals on the action server that `actClient` is connected to.

```
cancelAllGoals(actClient)
```

Delete the action client.

```
delete(actClient)
```

Disconnect from the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

Input Arguments

client – ROS action client

`SimpleActionClient` object handle

ROS action client, specified as a `SimpleActionClient` object handle. This simple action client enables you to track a single goal at a time.

goalMsg – ROS action goal message

Message object handle | structure

ROS action goal message, specified as a Message object handle or structure. Update this message with your goal details and send it to the ROS action client using `sendGoal` or `sendGoalAndWait`.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 1-222.

timeout — Timeout period

scalar in seconds

Timeout period for receiving a result message, specified as a scalar in seconds. If the client does not receive a new result message in that time period, an error is displayed.

Output Arguments

resultMsg — Result message

ROS Message object | structure

Result message, returned as a ROS Message object or structure. The result message contains the result data sent by the action server. This data depends on the action type.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 1-222.

state — Final goal state

character vector

Final goal state, returned as one of the following:

- 'pending' — Goal was received, but has not yet been accepted or rejected.
- 'active' — Goal was accepted and is running on the server.
- 'succeeded' — Goal executed successfully.
- 'preempted' — An action client canceled the goal before it finished executing.
- 'aborted' — The goal was aborted before it finished executing. The action server typically aborts a goal.
- 'rejected' — The goal was not accepted after being in the 'pending' state. The action server typically triggers this status.
- 'recalled' — A client canceled the goal while it was in the 'pending' state.
- 'lost' — An internal error occurred in the action client.

status — Status text

character vector

Status text that the server associated with the final goal state, returned as a character vector.

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see "Improve Performance of ROS Using Message Structures".

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

[sendGoal](#) | [cancelGoal](#) | [rosactionclient](#) | [rosaction](#)

Topics

"ROS Actions Overview"

"Move a Turtlebot Robot Using ROS Actions"

Introduced in R2019b

sendTransform

Send transformation to ROS network

Syntax

```
sendTransform(tftree,tf)
```

Description

`sendTransform(tftree,tf)` broadcasts a transform or array of transforms, `tf`, to the ROS network as a TransformationStamped ROS message.

Examples

Send a Transformation to ROS Network

This example shows how to create a transformation and send it over the ROS network.

Create a ROS transformation tree. Use `rosinit` to connect a ROS network. Replace `ipaddress` with your ROS network address.

```
rosinit;

Launching ROS Core...
...Done in 4.1192 seconds.
Initializing ROS master on http://192.168.125.1:56090.
Initializing global node /matlab_global_node_16894 with NodeURI http://HYD-KVENNAPU:63122/
```

```
tftree = rostf;
pause(2)
```

Verify the transformation you want to send over the network does not already exist. The `canTransform` function returns false if the transformation is not immediately available.

```
canTransform(tftree, 'new_frame', 'base_link')
```

```
ans = logical
      0
```

Create a TransformationStamped message. Populate the message fields with the transformation information.

```
tform = rosmessage('geometry_msgs/TransformStamped');
tform.ChildFrameId = 'new_frame';
tform.Header.FrameId = 'base_link';
tform.Transform.Translation.X = 0.5;
tform.Transform.Rotation.X = 0.5;
tform.Transform.Rotation.Y = 0.5;
tform.Transform.Rotation.Z = 0.5;
tform.Transform.Rotation.W = 0.5;
```

Send the transformation over the ROS network.

```
sendTransform(tftree,tform)
```

Verify the transformation is now on the ROS network.

```
canTransform(tftree,'new_frame','base_link')
```

```
ans = logical  
     1
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_16894 with NodeURI http://HYD-KVENNAPU:63122/  
Shutting down ROS master on http://192.168.125.1:56090.
```

Input Arguments

tftree — ROS transformation tree

TransformationTree object handle

ROS transformation tree, specified as a TransformationTree object handle. You can create a transformation tree by calling the `rostf` function.

tf — Transformations between coordinate frames

TransformStamped object handle | array of object handles

Transformations between coordinate frames, returned as a TransformStamped object handle or as an array of object handles. Transformations are structured as a 3-D translation (3-element vector) and a 3-D rotation (quaternion).

See Also

`transform` | `getTransform`

Introduced in R2019b

set

Set value of ROS parameter or add new parameter

Syntax

```
set(ptree,paramname,pvalue)
set(ptree,namespace,pvalue)
```

Description

`set(ptree,paramname,pvalue)` assigns the value `pvalue` to the parameter with the name `paramname`. This parameter is sent to the parameter tree `ptree`.

`set(ptree,namespace,pvalue)` assigns multiple values as a dictionary in `pvalue` under the specified namespace.

The following ROS data types are supported as values of parameters. For each ROS data type, the corresponding MATLAB data type is also listed.

- 32-bit integer — `int32`
- Boolean — `logical`
- double — `double`
- strings — string scalar, `string`, or character vector, `char`
- list — cell array (`cell`)
- dictionary — structure (`struct`)

Examples

Set and Get Parameter Value

Connect to the ROS network.

```
rosinit
```

```
Launching ROS Core...
```

```
...Done in 4.1789 seconds.
```

```
Initializing ROS master on http://192.168.88.1:51710.
```

```
Initializing global node /matlab_global_node_29634 with NodeURI http://ah-avijayar:53752/
```

Create a ROS parameter tree. Set a double parameter. Get the parameter to verify it was set.

```
ptree = rosparam;
set(ptree,'DoubleParam',1.0)
get(ptree,'DoubleParam')
```

```
ans = 1
```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_29634 with NodeURI http://ah-avijayar:53752/
Shutting down ROS master on http://192.168.88.1:51710.
```

Set A Dictionary Of Parameter Values

Use structures to specify a dictionary of ROS parameters under a specific namespace.

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
...Done in 4.0269 seconds.
Initializing ROS master on http://192.168.88.1:57165.
Initializing global node /matlab_global_node_09024 with NodeURI http://ah-avijayar:60223/
```

Create a dictionary of parameter values. This dictionary contains the information relevant to an image. Display the structure to verify values.

```
image = imread('peppers.png');

pval.ImageWidth = size(image,1);
pval.ImageHeight = size(image,2);
pval.ImageTitle = 'peppers.png';
disp(pval)
```

```
ImageWidth: 384
ImageHeight: 512
ImageTitle: 'peppers.png'
```

Set the dictionary of values using the desired namespace.

```
rosparam('set', 'ImageParam', pval)
```

Get the parameters using the namespace. Verify the values.

```
pval2 = rosparam('get', 'ImageParam')
```

```
pval2 = struct with fields:
ImageHeight: 512
ImageTitle: 'peppers.png'
ImageWidth: 384
```

Shut down ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_09024 with NodeURI http://ah-avijayar:60223/
Shutting down ROS master on http://192.168.88.1:57165.
```

Input Arguments

ptree — Parameter tree

ParameterTree object handle

Parameter tree, specified as a ParameterTree object handle. Create this object using the `rosparam` function.

paramname — ROS parameter name

string scalar | character vector

ROS parameter name, specified as a string scalar or character vector. This string must match the parameter name exactly.

pvalue — ROS parameter value or dictionary of values

int32 | logical | double | string scalar | character vector | cell array | structure

ROS parameter value or dictionary of values, specified as a supported MATLAB data type.

The following ROS data types are supported as values of parameters. For each ROS data type, the corresponding MATLAB data type is also listed.

ROS Data Type	MATLAB Data Type
32-bit integer	int32
Boolean	logical
double	double
string	string scalar, <code>string</code> , or character vector, <code>char</code>
list	cell array (<code>cell</code>)
dictionary	structure (<code>struct</code>)

namespace — ROS parameter namespace

string scalar | character vector

ROS parameter namespace, specified as a string scalar or character vector. All parameter names starting with this string are listed when calling `rosparam("list", namespace)`.

Limitations

Base64-encoded binary data and iso 8601 data from ROS are not supported.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Setting parameter values as heterogeneous cell arrays and structures are not supported.

See Also

get | rosparam

Introduced in R2019b

showdetails

Display all ROS message contents

Syntax

```
details = showdetails(msg)
```

Description

`details = showdetails(msg)` gets all data contents of message object `msg`. The details are stored in `details` or displayed on the command line.

Note `showdetails` will be removed. Use `rosShowdetails` instead. For more information, see “ROS Message Structure Functions” on page 1-230

Examples

Create Message and View Details

Create a message. Populate the message with data using the relevant properties.

```
msg = rosmessage('geometry_msgs/Point');  
msg.X = 1;  
msg.Y = 2;  
msg.Z = 3;
```

View the message details.

```
showdetails(msg)
```

```
X : 1  
Y : 2  
Z : 3
```

Input Arguments

msg — ROS message

Message object handle

ROS message, specified as a Message object handle.

Output Arguments

details — Details of ROS message

character vector

Details of a ROS message, returned as a character vector.

Compatibility Considerations

ROS Message Structure Functions

Not recommended starting in R2021a

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	readImage	rosReadImage
CompressedImage	writeImage	rosWriteImage
LaserScan	readCartesian readScanAngles lidarScan plot	rosReadCartesian rosReadScanAngles rosReadLidarScan rosPlot
PointCloud2	apply readXYZ readRGB readAllFieldNames readField scatter3	rosApplyTransform rosReadXYZ rosReadRGB rosReadAllFieldNames rosReadField rosPlot
Quaternion	readQuaternion	rosReadQuaternion
OccupancyGrid	readBinaryOccupancyGrid readOccupancyGrid writeBinaryOccupancyGrid writeOccupancyGrid	rosReadOccupancyGrid rosReadBinaryOccupancyGrid rosReadOccupancyGrid rosWriteBinaryOccupancyGrid rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D

Message Types	Object Function Name	New Function Name
PointStamped	apply	rosApplyTransform
PoseStamped		
QuaternionStamped		
Vector3Stamped		
TransformStamped		
All messages	showdetails	rosShowDetails

See Also

rosmessage

Introduced in R2019b

stopCore

Stop ROS core

Syntax

```
stopCore(device)
```

Description

`stopCore(device)` stops the ROS core on the specified `rosdevice`, `device`. If multiple ROS cores are running on the ROS device, the function stops all of them. If no core is running, the function returns immediately.

Examples

Run ROS Core on ROS Device

Connect to a remote ROS device and start a ROS core. The ROS core is needed to run ROS nodes to communicate via a ROS network. You can run and stop a ROS core or node and check their status using a `rosdevice` object.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device contains information about the ROS device, including the available ROS nodes that can be run using `runNode`.

```
ipaddress = '192.168.203.131';
d = rosdevice(ipaddress, 'user', 'password')

d =
  rosdevice with properties:

    DeviceAddress: '192.168.203.131'
    Username: 'user'
    ROSFolder: '/opt/ros/indigo'
    CatkinWorkspace: '~/catkin_ws'
    AvailableNodes: {'voxel_grid_filter_sl'}
```

Run a ROS core and check if it is running.

```
runCore(d)
```

Another `roscore` / ROS master is already running on the ROS device. Use the `'stopCore'` function to

```
running = isCoreRunning(d)
```

```
running = logical
         1
```

Stop the ROS core and confirm that it is no longer running.

```
stopCore(d)
pause(2)
running = isCoreRunning(d)

running = logical
         0
```

Input Arguments

device – ROS device

rosdevice object

ROS device, specified as a rosdevice object.

See Also

rosdevice | runCore | isCoreRunning

Topics

“Generate a Standalone ROS Node from Simulink®”

Introduced in R2019b

stopNode

Stop ROS or ROS 2 node

Syntax

```
stopNode(device,modelName)
```

Description

`stopNode(device,modelName)` stops a running ROS or ROS 2 node that was deployed from a Simulink model named `modelName`. The node is running on the specified `rosdevice` or `ros2device` object, `device`. If the node is not running, the function returns immediately.

Examples

Run ROS Node on ROS Device

Connect to a remote ROS device and start a ROS node. Run a ROS core so that ROS nodes can communicate via a ROS network. You can run and stop a ROS core or node and check their status using a `rosdevice` object.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device already contains the available ROS nodes that can be run using `runNode`.

```
ipaddress = '192.168.203.129';
d = rosdevice(ipaddress,'user','password');
d.ROSFolder = '/opt/ros/indigo';
d.CatkinWorkspace = '~/catkin_ws_test'

d =
  rosdevice with properties:

      DeviceAddress: '192.168.203.129'
      Username: 'user'
      ROSFolder: '/opt/ros/indigo'
      CatkinWorkspace: '~/catkin_ws_test'
      AvailableNodes: {'robotcontroller' 'robotcontroller2'}
```

Run a ROS core. Connect MATLAB® to the ROS master using `rosinit`. This core enables you to run ROS nodes on your ROS device.

```
runCore(d)
rosinit(d.DeviceAddress,11311)
```

```
Initializing global node /matlab_global_node_84497 with NodeURI http://192.168.203.1:56034/
```

Check the available ROS nodes on the connected ROS device. These nodes listed were generated from Simulink® models following the process in the “Get Started with ROS in Simulink®” example.

```
d.AvailableNodes
```

```
ans = 1x2 cell
      {'robotcontroller'}   {'robotcontroller2'}
```

Run a ROS node and specify the node name. Check if the node is running.

```
runNode(d, 'RobotController')
running = isNodeRunning(d, 'RobotController')

running = logical
         1
```

Stop the ROS node. Disconnect from the ROS network. Stop the ROS core.

```
stopNode(d, 'RobotController')
rosshutdown
```

```
Shutting down global node /matlab_global_node_84497 with NodeURI http://192.168.203.1:56034/
```

```
stopCore(d)
```

Run Multiple ROS Nodes

Run multiple ROS nodes on a connected ROS device. ROS nodes can be generated using Simulink® models to perform different tasks on the ROS network. These nodes are then deployed on a ROS device and can be run independently of Simulink®.

This example uses two different Simulink models that have been deployed as ROS nodes. See “Generate a Standalone ROS Node from Simulink®” and follow the instructions to generate and deploy a ROS node. Do this twice and name them 'robotcontroller' and 'robotcontroller2'. The 'robotcontroller' node sends velocity commands to a robot to navigate it to a given point. The 'robotcontroller2' node uses the same model, but doubles the linear velocity to drive the robot faster.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device contains information about the ROS device, including the available ROS nodes that can be run using runNode.

```
ipaddress = '192.168.203.129';
d = rosdevice(ipaddress, 'user', 'password')
```

```
d =
  rosdevice with properties:

    DeviceAddress: '192.168.203.129'
    Username: 'user'
    ROSFolder: '/opt/ros/indigo'
    CatkinWorkspace: '~/catkin_ws'
    AvailableNodes: {0x1 cell}
```

```
d.CatkinWorkspace = '~/catkin_ws_test'
```

```
d =
  rosdevice with properties:
```

```
DeviceAddress: '192.168.203.129'  
Username: 'user'  
ROSFolder: '/opt/ros/indigo'  
CatkinWorkspace: '~/catkin_ws_test'  
AvailableNodes: {'robotcontroller' 'robotcontroller2'}
```

Run a ROS core. The ROS Core is the master enables you to run ROS nodes on your ROS device. Connect MATLAB® to the ROS master using `rosinit`. For this example, the port is set to 11311. `rosinit` can automatically select a port for you without specifying this input.

```
runCore(d)  
rosinit(d.DeviceAddress,11311)
```

```
Initializing global node /matlab_global_node_66434 with NodeURI http://192.168.203.1:59395/
```


Check the available ROS nodes on the connected ROS device. The nodes listed in this example were generated from Simulink® models following the process in the “Generate a Standalone ROS Node from Simulink®” example. Two separate nodes are generated, 'robotcontroller' and 'robotcontroller2', which have the linear velocity set to 1 and 2 in the model respectively.

```
d.AvailableNodes
```

```
ans = 1x2 cell  
      {'robotcontroller'}    {'robotcontroller2'}
```


Start up the Robot Simulator using `ExampleHelperSimulinkRobotROS`. This simulator automatically connects to the ROS master on the ROS device. You will use this simulator to run a ROS node and control the robot.

```
sim = ExampleHelperSimulinkRobotROS;
```

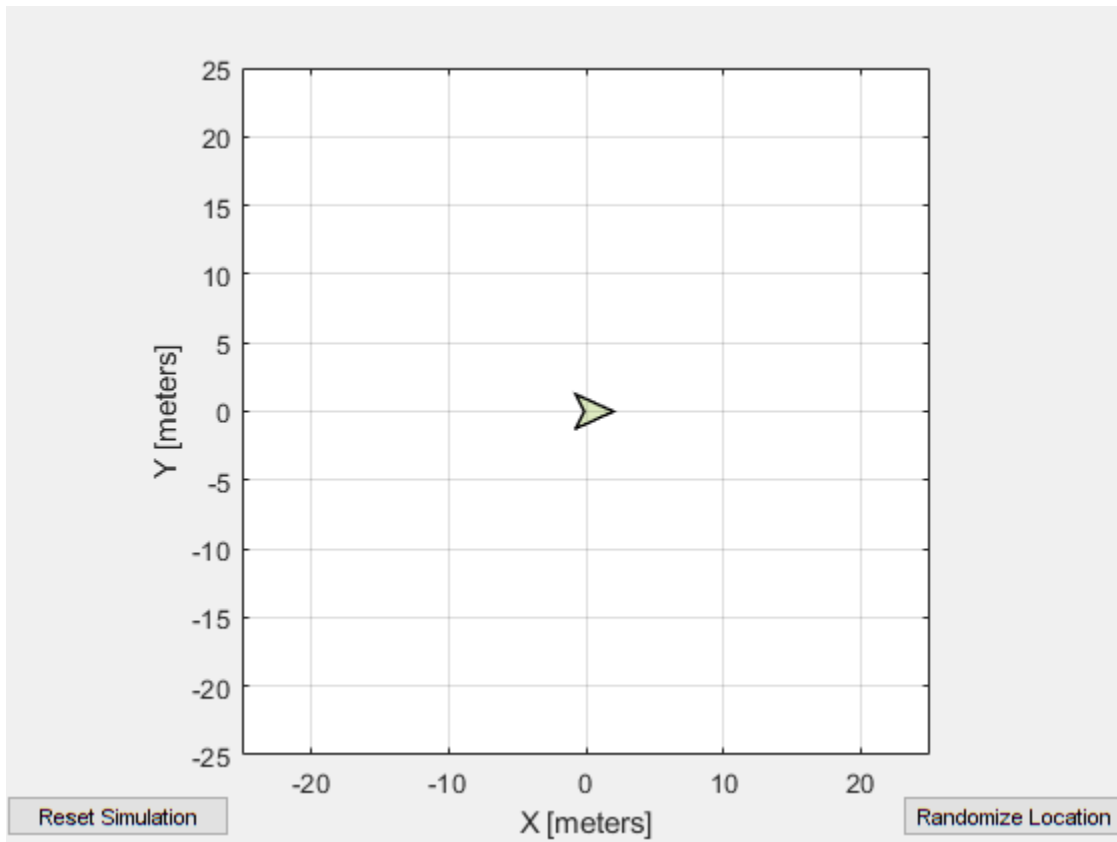
Run a ROS node, specifying the node name. The 'robotcontroller' node commands the robot to a specific location ([-10 10]). Wait to see the robot drive.

```
runNode(d, 'robotcontroller')  
pause(10)
```

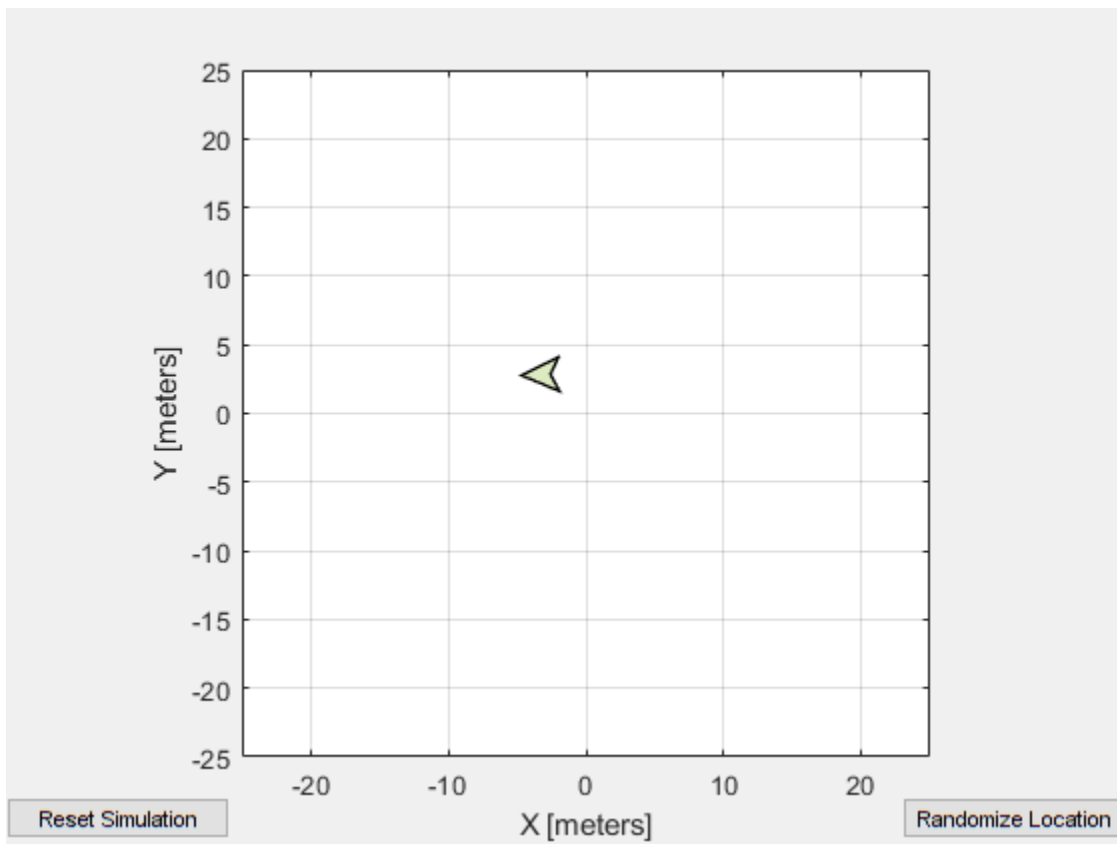

Reset the Robot Simulator to reset the robot position. Alternatively, click **Reset Simulation**. Because the node is still running, the robot continues back to the specific location. To stop sending commands, stop the node.


```
resetSimulation(sim.Simulator)  
pause(5)
```

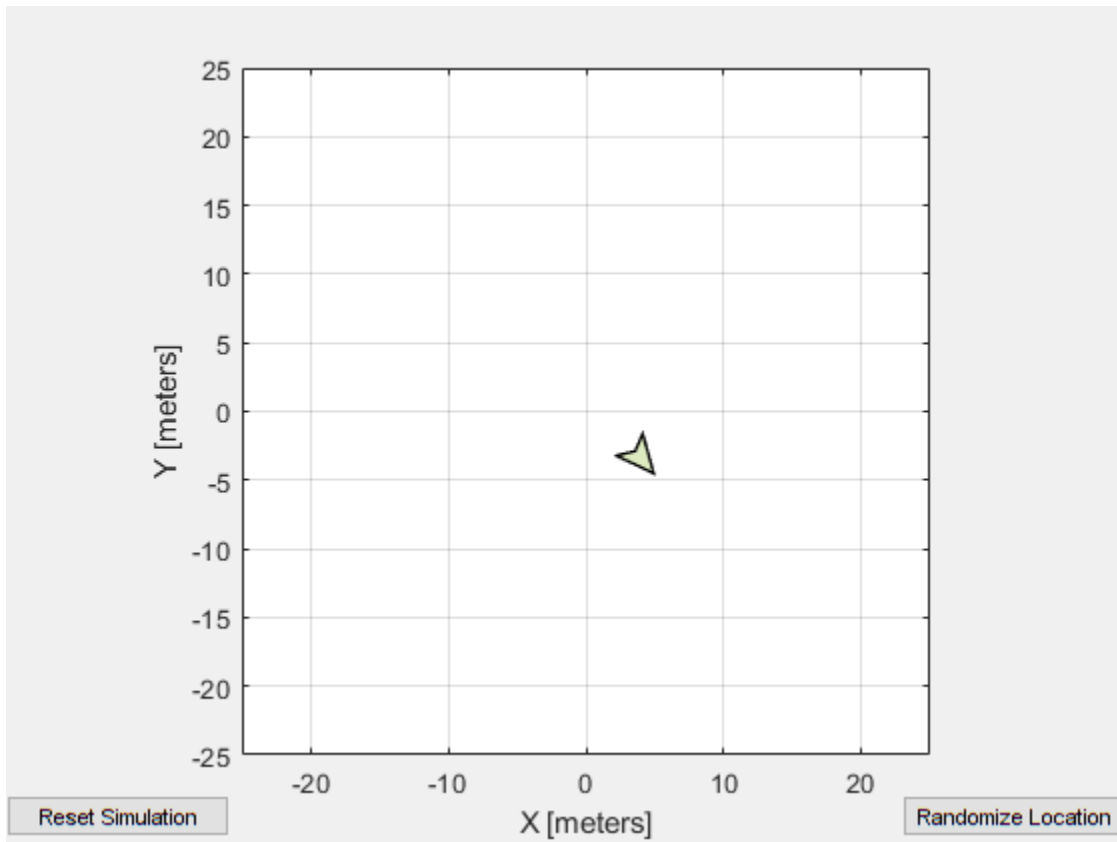

```
stopNode(d, 'robotcontroller')
```

Run the 'robotcontroller2' node. This model drives the robot with twice the linear velocity. Reset the robot position. Wait to see the robot drive. You should see a wider turn due to the increased velocity.

```
runNode(d, 'robotcontroller2')  
resetSimulation(sim.Simulator)  
pause(10)
```

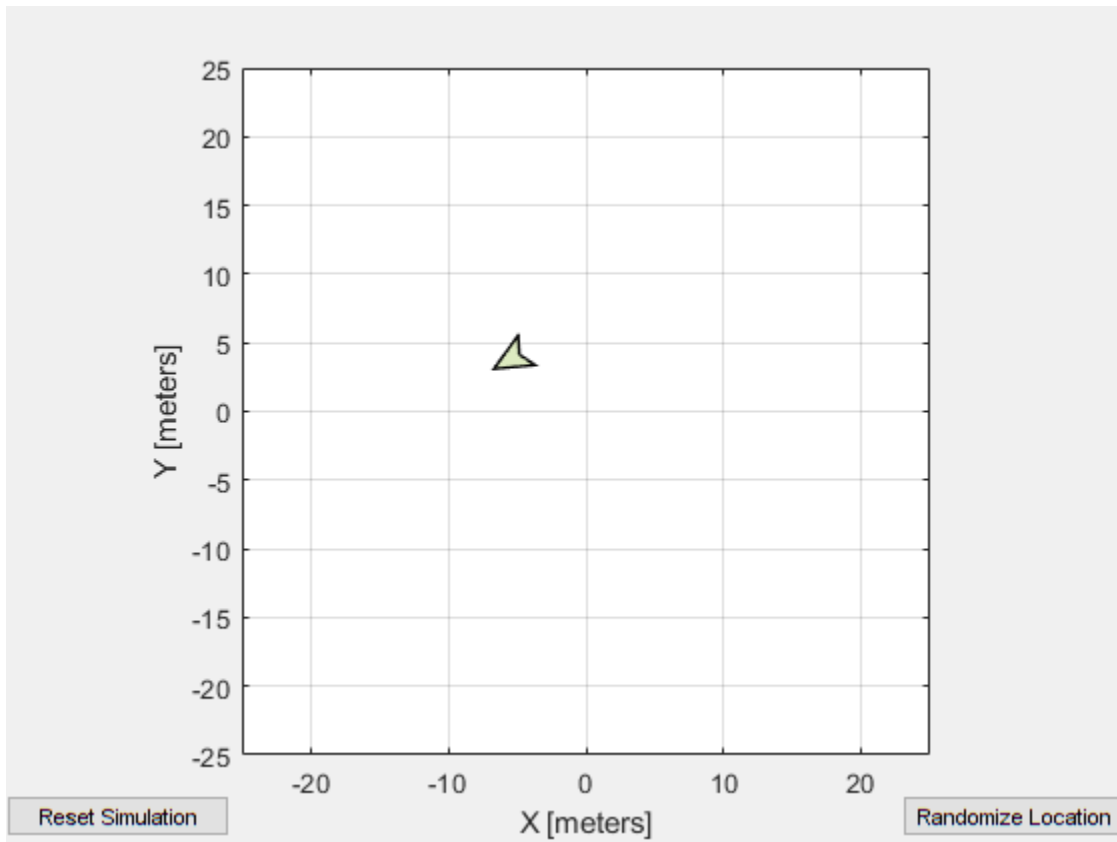

Close the simulator. Stop the ROS node. Disconnect from the ROS network and stop the ROS core.

```
close
stopNode(d, 'robotcontroller2')
rosshutdown
```

```
Shutting down global node /matlab_global_node_66434 with NodeURI http://192.168.203.1:59395/
stopCore(d)
```

Input Arguments

device — ROS or ROS2 device

rosdevice object | ros2device object

ROS or ROS 2 device, specified as a `rosdevice` or `ros2device` object, respectively.

modelName — Name of the deployed Simulink model

character vector

Name of the deployed Simulink model, specified as a character vector. If the model name is not valid, the function returns immediately.

See Also

`rosdevice` | `ros2device` | `runNode` | `isNodeRunning`

Topics

“Generate a Standalone ROS Node from Simulink®”

“Generate a Standalone ROS 2 Node from Simulink®”

Introduced in R2019b

system

Execute system command on device

Syntax

```
system(device,command)
system(device,command,'sudo')
response = system( ___ )
```

Description

`system(device,command)` runs a command in the Linux command shell on the ROS or ROS 2 device. This function does not allow you to run interactive commands.

`system(device,command,'sudo')` runs a command with superuser privileges.

`response = system(___)` runs a command using any of the previous syntaxes with the command shell output returned in `response`.

Examples

Run Linux Commands on ROS Device

Connect to a ROS device and run commands on the Linux(R) command shell.

Connect to a ROS device. Specify the device address, user name, and password of your ROS device.

```
d = rosdevice('192.168.17.128','user','password');
```

Run a command that lists the contents of the Catkin workspace folder.

```
system(d,'ls /home/user/catkin_ws_test')
```

```
ans =
  'build
  devel
  src
  '
```

Input Arguments

device — ROS or ROS 2 device

`rosdevice` object | `ros2device` object

ROS or ROS 2 device, specified as a `rosdevice` or `ros2device` object, respectively.

command — Linux command

character vector

Linux command, specified as a character vector.

Example: `'ls -al'`

Output Arguments

response — Output from Linux shell

character vector

Output from Linux shell, returned as a character vector.

See Also

`rosdevice` | `ros2device` | `putFile` | `getFile` | `deleteFile` | `dir` | `openShell`

Introduced in R2019b

timeseries

Create time series object for selected message properties

Syntax

```
[ts,cols] = timeseries(bag)
[ts,cols] = timeseries(bag,property)
[ts,cols] = timeseries(bag,property,...,propertyN)
```

Description

`[ts,cols] = timeseries(bag)` creates a time series for all numeric and scalar message properties. The function evaluates each message in the current `BagSelection` or `rosbagreader` object `bag` as `ts`. The `cols` output argument stores property names as a cell array of character vectors.

The returned time series object is memory efficient because it stores only particular message properties instead of whole messages.

`[ts,cols] = timeseries(bag,property)` creates a time series for a specific message property, `property`. Property names can also be nested, for example, `Pose.Pose.Position.X` for the x-axis position of a robot.

`[ts,cols] = timeseries(bag,property,...,propertyN)` creates a time series for range-specific message properties. Each property is a different column in the time series object.

Examples

Create Time Series from Entire Bag Selection

Load the rosbag. Specify the file path.

```
bag = rosbag('ex_multiple_topics.bag');
```

Select a specific topic. Time series supports only single topics.

```
bagSelection = select(bag, 'Topic', '/odom');
```

Create a time series for the '/odom' topic.

```
ts = timeseries(bagSelection);
```

Create Time Series from Single Property

Load the rosbag. Specify the file path.

```
bag = rosbag('ex_multiple_topics.bag');
```


Select a specific topic. Time series support only single topics.

```
bagSelection = select(bag, 'Topic', '/odom');
```

Create a time series for the 'Pose.Pose.Position.X' property on the '/odom' topic.

```
ts = timeseries(bagSelection, 'Pose.Pose.Position.X');
```

Create Time Series from Multiple Properties

Load the rosbag. Specify the file path.

```
bag = rosbag('ex_multiple_topics.bag');
```

Select a specific topic. Time series support only single topics.

```
bagSelection = select(bag, 'Topic', '/odom');
```

Create a time series for all the angular 'Twist' properties on the '/odom' topic.

```
ts = timeseries(bagSelection, 'Twist.Twist.Angular.X', ...
               'Twist.Twist.Angular.Y', 'Twist.Twist.Angular.Z');
```

Create rosbag Selection Using rosbagreader Object

Load a rosbag log file and parse out specific messages based on the selected criteria.

Create a rosbagreader object of all the messages in the rosbag log file.

```
bagMsgs = rosbagreader("ros_multi_topics.bag")
```

```
bagMsgs =
```

```
  rosbagreader with properties:
```

```
      FilePath: 'B:\matlab\toolbox\robotics\robotexamples\ros\data\bags\ros_multi_topics.ba
      StartTime: 201.3400
      EndTime: 321.3400
      NumMessages: 36963
      AvailableTopics: [4x3 table]
      AvailableFrames: {0x1 cell}
      MessageList: [36963x4 table]
```

Select a subset of the messages based on their timestamp and topic.

```
bagMsgs2 = select(bagMsgs, ...
                 Time=[bagMsgs.StartTime bagMsgs.StartTime + 1], ...
                 Topic='/odom')
```

```
bagMsgs2 =
```

```
  rosbagreader with properties:
```

```
      FilePath: 'B:\matlab\toolbox\robotics\robotexamples\ros\data\bags\ros_multi_topics.ba
      StartTime: 201.3400
```


property — Property names

string scalar | character vector

Property names, specified as a string scalar or character vector. You can specify multiple properties. Each property name is a separate input and represents a different column in the time series object.

Output Arguments**ts — Time series**

Time object handle

Time series, returned as a Time object handle.

cols — List of property names

cell array of character vectors

List of property names, returned as a cell array of character vectors.

See Also[rosbag](#) | [select](#) | [readMessages](#) | [rosbagreader](#)**Topics**[“Time Series”](#)**Introduced in R2019b**

transform

Transform message entities into target coordinate frame

Syntax

```
tfentity = transform(tftree,targetframe,entity)
tfentity = transform(tftree,targetframe,entity,"msgtime")
tfentity = transform(tftree,targetframe,entity,sourcetime)
```

Description

`tfentity = transform(tftree,targetframe,entity)` retrieves the latest transformation between `targetframe` and the coordinate frame of `entity` and applies it to `entity`, a ROS message of a specific type. The `tftree` is the full transformation tree containing known transformations between entities. If the transformation from `entity` to `targetframe` does not exist, MATLAB produces an error.

`tfentity = transform(tftree,targetframe,entity,"msgtime")` uses the timestamp in the header of the message, `entity`, as the source time to retrieve and apply the transformation.

`tfentity = transform(tftree,targetframe,entity,sourcetime)` uses the given source time to retrieve and apply the transformation to the message, `entity`.

Examples

Get ROS Transformations and Apply to ROS Messages

This example shows how to set up a ROS transformation tree and transform frames based on transformation tree information. It uses time-buffered transformations to access transformations at different times.

Create a ROS transformation tree. Use `rosinit` to connect to a ROS network. Replace `ipaddress` with your ROS network address.

```
ipaddress = '192.168.17.129';
rosinit(ipaddress,11311)
```

```
Initializing global node /matlab_global_node_14346 with NodeURI http://192.168.17.1:56312/
```

```
tftree = rostf;
pause(1)
```

Look at the available frames on the transformation tree.

```
tftree.AvailableFrames
```

```
ans = 36x1 cell
    {'base_footprint'      }
    {'base_link'          }
    {'camera_depth_frame' }
```

```

{'camera_depth_optical_frame'}
{'camera_link' }
{'camera_rgb_frame' }
{'camera_rgb_optical_frame' }
{'caster_back_link' }
{'caster_front_link' }
{'cliff_sensor_front_link' }
{'cliff_sensor_left_link' }
{'cliff_sensor_right_link' }
{'gyro_link' }
{'mount_asus_xtion_pro_link' }
{'odom' }
{'plate_bottom_link' }
{'plate_middle_link' }
{'plate_top_link' }
{'pole_bottom_0_link' }
{'pole_bottom_1_link' }
{'pole_bottom_2_link' }
{'pole_bottom_3_link' }
{'pole_bottom_4_link' }
{'pole_bottom_5_link' }
{'pole_kinect_0_link' }
{'pole_kinect_1_link' }
{'pole_middle_0_link' }
{'pole_middle_1_link' }
{'pole_middle_2_link' }
{'pole_middle_3_link' }
:

```

Check if the desired transformation is now available. For this example, check for the transformation from 'camera_link' to 'base_link'.

```
canTransform(tftree, 'base_link', 'camera_link')
```

```
ans = logical
      1
```

Get the transformation for 3 seconds from now. The `getTransform` function will wait until the transformation becomes available with the specified timeout.

```
desiredTime = rostime('now') + 3;
tform = getTransform(tftree, 'base_link', 'camera_link', ...
                    desiredTime, 'Timeout', 5);
```

Create a ROS message to transform. Messages can also be retrieved off the ROS network.

```
pt = rosmesssage('geometry_msgs/PointStamped');
pt.Header.FrameId = 'camera_link';
pt.Point.X = 3;
pt.Point.Y = 1.5;
pt.Point.Z = 0.2;
```

Transform the ROS message to the 'base_link' frame using the desired time previously saved.

```
tfpt = transform(tftree, 'base_link', pt, desiredTime);
```

Optional: You can also use `apply` with the stored `tform` to apply this transformation to the `pt` message.

```
tfpt2 = apply(tform,pt);
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_14346 with NodeURI http://192.168.17.1:56312/
```

Get Buffered Transformations from ROS Network

This example shows how to access time-buffered transformations on the ROS network. Access transformations for specific times and modify the `BufferTime` property based on your desired times.

Create a ROS transformation tree. Use `roscpp` to connect to a ROS network. Replace `ipaddress` with your ROS network address.

```
ipaddress = '192.168.17.129';  
roscpp(ipaddress,11311)
```

```
Initializing global node /matlab_global_node_78006 with NodeURI http://192.168.17.1:56344/
```

```
tftree = rostf;  
pause(2);
```

Get the transformation from 1 second ago.

```
desiredTime = rostime('now') - 1;  
tform = getTransform(tftree,'base_link','camera_link',desiredTime);
```

The transformation buffer time is 10 seconds by default. Modify the `BufferTime` property of the transformation tree to increase the buffer time and wait for that buffer to fill.

```
tftree.BufferTime = 15;  
pause(15);
```

Get the transformation from 12 seconds ago.

```
desiredTime = rostime('now') - 12;  
tform = getTransform(tftree,'base_link','camera_link',desiredTime);
```

You can also get transformations at a time in the future. The `getTransform` function will wait until the transformation is available. You can also specify a timeout to error if no transformation is found. This example waits 5 seconds for the transformation at 3 seconds from now to be available.

```
desiredTime = rostime('now') + 3;  
tform = getTransform(tftree,'base_link','camera_link',desiredTime,'Timeout',5);
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_78006 with NodeURI http://192.168.17.1:56344/
```

Input Arguments

tftree — ROS transformation tree

TransformationTree object handle

ROS transformation tree, specified as a TransformationTree object handle. You can create a transformation tree by calling the `rostopic` function.

targetframe — Target coordinate frame

string scalar | character vector

Target coordinate frame that an entity transforms into, specified as a string scalar or character vector. You can view the available frames for transformation calling `tftree.AvailableFrames`.

entity — Initial message entity

Message object handle

Initial message entity, specified as a Message object handle.

Supported messages are:

- `geometry_msgs/PointStamped`
- `geometry_msgs/PoseStamped`
- `geometry_msgs/QuaternionStamped`
- `geometry_msgs/Vector3Stamped`
- `sensor_msgs/PointCloud2`

sourcetime — ROS or system time

scalar | Time object handle

ROS or system time, specified as a scalar or Time object handle. The scalar is converted to a Time object using `rostopic`.

Output Arguments

tfentity — Transformed entity

Message object handle

Transformed entity, returned as a Message object handle.

See Also

`getTransform` | `canTransform`

Introduced in R2019b

waitForServer

Wait for action server to start

Syntax

```
waitForServer(client)
waitForServer(client,timeout)
status = waitForServer( ___ )
```

Description

`waitForServer(client)` waits until the action server is started up and available to send goals. The `IsServerConnected` property of the `SimpleActionClient` shows the status of the server connection. Press **Ctrl+C** to abort the wait.

`waitForServer(client,timeout)` specifies a timeout period in seconds. If the action server does not start up in the timeout period, this function displays an error.

`status = waitForServer(___)` returns a `status` indicating whether the action server is available, using any of the arguments from the previous syntaxes. If the server is not available within the timeout, `status` will be `false`, and this function will not display an error.

Examples

Setup a ROS Action Client and Execute an Action

This example shows how to create a ROS action client and execute the action. Action types must be set up beforehand with an action server running.

You must have set up the `'/fibonacci'` action type. To run this action server, use the following command on the ROS system:

```
roslaunch actionlib_tutorials fibonacci_server
```

Connect to a ROS network. You must be connected to a ROS network to gather information about what actions are available. Replace `ipaddress` with your network address.

```
ipaddress = '192.168.203.133';
rosinit(ipaddress,11311)
```

```
Initializing global node /matlab_global_node_81947 with NodeURI http://192.168.203.1:54283/
```

List actions available on the network. The only action set up on this network is the `'/fibonacci'` action.

```
rosaction list
/fibonacci
```

Create an action client by specifying the action name. Use structures for ROS messages.


```
[actClient,goalMsg] = roactionclient('/fibonacci','DataFormat','struct');
```

Wait for the action client to connect to the server.

```
waitForServer(actClient);
```

The fibonacci action will calculate the fibonacci sequence for a given order specified in the goal message. The goal message was returned when creating the action client and can be modified to send goals to the ROS action server. Set the order to an int32 value of 8.

```
goalMsg.Order = int32(8);
```

Send the goal and wait for its completion. Specify a timeout of 10 seconds to complete the action.

```
[resultMsg,resultState] = sendGoalAndWait(actClient,goalMsg,10);
```

```
rosShowDetails(resultMsg)
```

```
ans =
  ,
    MessageType : actionlib_tutorials/FibonacciResult
    Sequence     : [0, 1, 1, 2, 3, 5, 8, 13, 21]'
```

Disconnect from the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_81947 with NodeURI http://192.168.203.1:54283/
```

Send and Cancel ROS Action Goals

This example shows how to send and cancel goals for ROS actions. Action types must be setup beforehand with an action server running.

You must have set up the '/fibonacci' action type. To run this action server, use the following command on the ROS system:

```
roslaunch actionlib_tutorials fibonacci_server
```

First, set up a ROS action client. Then, send a goal message with modified parameters. Finally, cancel your goal and all goals on the action server.

Connect to a ROS network with a specified IP address. Create a ROS action client connected to the ROS network using `roactionclient`. Specify the action name. Wait for the client to be connected to the server.

```
rosinit('192.168.203.133',11311)
```

```
Initializing global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

```
[actClient,goalMsg] = roactionclient('/fibonacci','DataFormat','struct');
waitForServer(actClient);
```

Send a goal message with modified parameters. Wait for the goal to finish executing.

```
goalMsg.Order = int32(4);  
[resultMsg,resultState] = sendGoalAndWait(actClient,goalMsg)
```

```
resultMsg = struct with fields:  
  MessageType: 'actionlib_tutorials/FibonacciResult'  
  Sequence: [0 1 1 2 3]
```

```
resultState =  
'succeeded'
```

```
rosShowDetails(resultMsg)
```

```
ans =  
,  
    MessageType : actionlib_tutorials/FibonacciResult  
    Sequence     : [0, 1, 1, 2, 3]'
```

Send a new goal message without waiting.

```
goalMsg.Order = int32(5);  
sendGoal(actClient,goalMsg)
```

Cancel the goal on the ROS action client, actClient.

```
cancelGoal(actClient)
```

Cancel all the goals on the action server that actClient is connected to.

```
cancelAllGoals(actClient)
```

Delete the action client.

```
delete(actClient)
```

Disconnect from the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

Input Arguments

client — ROS action client

SimpleActionClient object handle

ROS action client, specified as a SimpleActionClient object handle. This simple action client enables you to track a single goal at a time.

timeout — Timeout period

scalar in seconds

Timeout period for setting up ROS action server, specified as a scalar in seconds. If the client does not connect to the server in the specified time period, an error is displayed.

Output Arguments

status — Status of the action server start up

logical scalar

Status of the action server start up, returned as a `logical` scalar. If the server is not available within the timeout period, `status` will be `false`.

Note Use the `status` output argument when you use `waitForServer` in the entry-point function for code generation. This will avoid runtime errors outputs the status instead, which can be reacted to in the calling code.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

`rosactionclient` | `sendGoalAndWait` | `cancelGoal` | `rosaction`

Topics

“ROS Actions Overview”

“Move a Turtlebot Robot Using ROS Actions”

Introduced in R2019b

waitForServer

Wait for ROS or ROS 2 service server to start

Syntax

```
waitForServer(client)
waitForServer(client,Timeout=timeoutperiod)
[status,statustext] = waitForServer( ___ )
```

Description

`waitForServer(client)` waits until the service server is started up and available to receive requests. Press **Ctrl+C** to cancel the wait.

`waitForServer(client,Timeout=timeoutperiod)` specifies a timeout period in seconds using the name-value pair `Timeout=timeoutperiod`. If the service server does not start up in the timeout period, this function displays an error and lets MATLAB continue running the current program. The default value of `inf` prevents MATLAB from running the current program until the service client receives a service response.

`[status,statustext] = waitForServer(___)` returns a `status` indicating whether the service server is available, and a `statustext` that captures additional information about the `status`, using any of the arguments from the previous syntaxes. If the server is not available within the `Timeout`, `status` will be `false`, and this function will not display an error.

Examples

Call Service Client with Default Message

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
..Done in 2.6477 seconds.
Initializing ROS master on http://172.30.135.140:53192.
Initializing global node /matlab_global_node_86810 with NodeURI http://bat6340win64:55093/
```

Set up a service server. Use structures for the ROS message data format.

```
server = rossvcserver('/test', 'std_srvs/Empty', @exampleHelperROSEmptyCallback,...
                    'DataFormat','struct');
client = rossvcclient('/test','DataFormat','struct');
```

Check whether the service server is available. If it is, wait for the service client to connect to the server.

```
if(isServerAvailable(client))
    [connectionStatus,connectionStatustext] = waitForServer(client)
end
```

```
connectionStatus = logical
    1
```

```
connectionStatustext =
'success'
```

Call service server with default message.

```
response = call(client)

response = struct with fields:
    MessageType: 'std_srvs/EmptyResponse'
```

If the `call` function above fails, it results in an error. Instead of an error, if you would prefer to react to a call failure using conditionals, return the `status` and `statustext` outputs from the `call` function. The `status` output indicates if the call succeeded, while `statustext` provides additional information.

```
numCallFailures = 0;
[response,status,statustext] = call(client,"Timeout",3);
if ~status
    numCallFailures = numCallFailures + 1;
    fprintf("Call failure number %d. Error cause: %s\n",numCallFailures,statustext)
else
    disp(response)
end

    MessageType: 'std_srvs/EmptyResponse'
```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_86810 with NodeURI http://bat6340win64:55093/
Shutting down ROS master on http://172.30.135.140:53192.
```

Call ROS 2 Service Client With a Custom Callback Function

Create a sample ROS 2 network with two nodes.

```
node_1 = ros2node("node_1");
node_2 = ros2node("node_2");
```

Set up a service server and attach it to a ROS 2 node. Specify the callback function `flipstring`, which flips the input string. The callback function is defined at the end of this example.

```
server = ros2svcsrvserver(node_1, '/test', 'test_msgs/BasicTypes',@flipString);
```

Set up a service client of the same service type and attach it to a different node.

```
client = ros2svcclient(node_2, '/test', 'test_msgs/BasicTypes');
```

Wait for the service client to connect to the server.

```
[connectionStatus,connectionStatustext] = waitForServer(client)
```

```
connectionStatus = logical  
    1
```

```
connectionStatustext =  
'success'
```

Create a request message based on the client. Assign the string to the corresponding field in the message, `string_value`.

```
request = ros2message(client);  
request.string_value = 'hello world';
```

Check whether the service server is available. If it is, send a service request and wait for a response. Specify that the service waits 3 seconds for a response.

```
if(isServerAvailable(client))  
    response = call(client,request,'Timeout',3);  
end
```

The response is a flipped string from the request message which you see in the `string_value` field.

```
response.string_value
```

```
ans =  
'dlrow olleh'
```

If the `call` function above fails, it results in an error. Instead of an error, if you would prefer to react to a call failure using conditionals, return the `status` and `statustext` outputs from the `call` function. The `status` output indicates if the call succeeded, while `statustext` provides additional information.

```
numCallFailures = 0;  
[response,status,statustext] = call(client,request,"Timeout",3);  
if ~status  
    numCallFailures = numCallFailures + 1;  
    fprintf("Call failure number %d. Error cause: %s\n",numCallFailures,statustext)  
else  
    disp(response.string_value)  
end
```

```
dlrow olleh
```

The callback function used to flip the string is defined below.

```
function resp = flipString(req,resp)  
% FLIPSTRING Reverses the order of a string in REQ and returns it in RESP.  
resp.string_value = fliplr(req.string_value);  
end
```

Input Arguments

client – ROS or ROS 2 service client

`ros.ServiceClient` object handle | `ros2serviceclient` object handle

ROS or ROS 2 service client, specified as a `ros.ServiceClient` or `ros2serviceclient` object handle, respectively. This service client enables you to send requests to the service server.

Output Arguments

status — Status of the service server start up

logical scalar

Status of the service server start up, returned as a `logical` scalar. If the server is not available within the timeout period, `status` will be `false`.

Note Use the `status` output argument when you use `waitForServer` in the entry-point function for code generation. This will avoid runtime errors outputs the status instead, which can be reacted to in the calling code.

statustext — Status text associated with the service call status

character vector

Status text associated with the service call status, returned as one of the following:

- `'success'` — The server is available.
- `'input'` — The input to the function is invalid.
- `'timeout'` — The server did not become available before the timeout period expired.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- ROS 2 service clients are not supported.
- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

[rossvcclient](#) | [rossvcserver](#) | [ros2svcclient](#) | [ros2svcserver](#) | [call](#) | [rosservice](#)

Topics

“Call and Provide ROS Services”

“Call and Provide ROS 2 Services”

Introduced in R2021b

waitForTransform

Wait until a transformation is available

Note `waitForTransform` will be removed in a future release. Use `getTransform` with a specified timeout instead. Use `inf` to wait indefinitely.

Syntax

```
waitForTransform(tftree, targetframe, sourceframe)
waitForTransform(tftree, targetframe, sourceframe, timeout)
```

Description

`waitForTransform(tftree, targetframe, sourceframe)` waits until the transformation between `targetframe` and `sourceframe` is available in the transformation tree, `tftree`. This function disables the command prompt until a transformation becomes available on the ROS network.

`waitForTransform(tftree, targetframe, sourceframe, timeout)` specifies a timeout period in seconds. If the transformation does not become available, MATLAB displays an error, but continues running the current program.

Examples

Wait for Transformation Between Robot Frames

Connect to the ROS network. Specify the IP address of your network.

```
rosinit('192.168.17.129')
```

```
Initializing global node /matlab_global_node_48383 with NodeURI http://192.168.17.1:54695/
```

Create a ROS transformation tree.

```
tftree = rostf;
```

Wait for the transformation between the target frame, `/camera_depth_frame`, and the source frame, `/base_link`, to be available. Specify a timeout of 5 seconds.

```
waitForTransform(tftree, '/camera_depth_frame', '/base_link', 5);
```

Get the transformation.

```
tform = getTransform(tftree, '/camera_depth_frame', '/base_link');
```

When you are finished, disconnect from the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_48383 with NodeURI http://192.168.17.1:54695/
```


Input Arguments

tftree — ROS transformation tree

TransformationTree object handle

ROS transformation tree, specified as a TransformationTree object handle. You can create a transformation tree by calling the `rostopic` function.

targetframe — Target coordinate frame

string scalar | character vector

Target coordinate frame, specified as a string scalar or character vector. You can view the available frames for transformation by calling `tftree.AvailableFrames`.

sourceframe — Initial coordinate frame

string scalar | character vector

Initial coordinate frame, specified as a string scalar or character vector. You can view the available frames for transformation using `tftree.AvailableFrames`.

timeout — Timeout period

numeric scalar in seconds

Timeout period, specified as a numeric scalar in seconds. If the transformation does not become available, MATLAB displays an error, but continues running the current program.

See Also

`transform` | `getTransform` | `receive`

Introduced in R2019b

writeBinaryOccupancyGrid

Write values from grid to ROS message

Syntax

```
writeBinaryOccupancyGrid(msg, map)
```

Description

`writeBinaryOccupancyGrid(msg, map)` writes occupancy values and other information to the ROS message, `msg`, from the binary occupancy grid, `map`.

Input Arguments

map — Binary occupancy grid

`binaryOccupancyMap` object handle

Binary occupancy grid, specified as a object handle. `map` is converted to a 'nav_msgs/OccupancyGrid' message on the ROS network. `map` is an object with a grid of binary values, where 1 indicates an occupied location and 0 indicates an unoccupied location.

msg — 'nav_msgs/OccupancyGrid' ROS message

`OccupancyGrid` object handle

'nav_msgs/OccupancyGrid' ROS message, specified as a `OccupancyGrid` object handle.

See Also

Functions

`rosReadBinaryOccupancyGrid` | `rosReadOccupancyMap3D` | `rosReadOccupancyGrid` | `rosWriteOccupancyGrid`

Introduced in R2015a

writeImage

Write MATLAB image to ROS image message

Syntax

```
writeImage(msg, img)
writeImage(msg, img, alpha)
```

Description

`writeImage(msg, img)` converts the MATLAB image, `img`, to a message object and stores the ROS compatible image data in the message object, `msg`. The message must be a `'sensor_msgs/Image'` message. `'sensor_msgs/CompressedImage'` messages are not supported. The function does not perform any color space conversion, so the `img` input needs to have the encoding that you specify in the `Encoding` property of the message.

Note `writeImage` will be removed. Use `rosWriteImage` instead. For more information, see “ROS Message Structure Functions” on page 1-264

`writeImage(msg, img, alpha)` converts the MATLAB image, `img`, to a message object. If the image encoding supports an alpha channel (`rgba` or `bgra` family), specify this alpha channel in `alpha`. Alternatively, the input image can store the alpha channel as its fourth channel.

Examples

Write Image to Message

Read an image.

```
image = imread('imageMap.png');
```

Create a ROS image message. Specify the default encoding for the image. Write the image to the message.

```
msg = rosmessage('sensor_msgs/Image');
msg.Encoding = 'rgb8';
writeImage(msg, image);
```

Input Arguments

msg — ROS image message

Image object handle

`'sensor_msgs/Image'` ROS image message, specified as an Image object handle. `'sensor_msgs/Image'` image messages are not supported.

img — Imagegrayscale image matrix | RGB image matrix | *m-by-n-by-3* array

Image, specified as a matrix representing a grayscale or RGB image or as an *m-by-n-by-3* array, depending on the sensor image.

alpha — Alpha channel

uint8 grayscale image

Alpha channel, specified as a uint8 grayscale image. Alpha must be the same size and data type as `img`.

ROS Image Encoding

You must specify the correct encoding of the input image in the Encoding property of the image message. If you do not specify the image encoding before calling the function, the default encoding, `rgb8`, is used (3-channel RGB image with uint8 values). The function does not perform any color space conversion, so the `img` input needs to have the encoding that you specify in the Encoding property of the message.

All encoding types supported for the `readImage` are also supported in this function. For more information on supported encoding types and their representations in MATLAB, see `readImage`.

Bayer-encoded images (`bayer_rggb8`, `bayer_bggr8`, `bayer_gbrg8`, `bayer_grbg8`, and their 16-bit equivalents) must be given as 8-bit or 16-bit single-channel images or they do not encode.

Compatibility Considerations**ROS Message Structure Functions***Not recommended starting in R2021a*

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To support message structures as inputs, new functions that operate on specialized ROS messages have been provided. These new functions are based on the existing object functions of message objects, but support ROS and ROS 2 message structures as inputs instead of message objects.

The object functions will be removed in a future release.

Message Types	Object Function Name	New Function Name
Image	<code>readImage</code>	<code>rosReadImage</code>
CompressedImage	<code>writeImage</code>	<code>rosWriteImage</code>

Message Types	Object Function Name	New Function Name
LaserScan	readCartesian readScanAngles lidarScan plot	rosReadCartesian rosReadScanAngles rosReadLidarScan rosPlot
PointCloud2	apply readXYZ readRGB readAllFieldNames readField scatter3	rosApplyTransform rosReadXYZ rosReadRGB rosReadAllFieldNames rosReadField rosPlot
Quaternion	readQuaternion	rosReadQuaternion
OccupancyGrid	readBinaryOccupancyGrid readOccupancyGrid writeBinaryOccupancyGrid writeOccupancyGrid	rosReadOccupancyGrid rosReadBinaryOccupancyGrid rosReadOccupancyGrid rosWriteBinaryOccupancyGrid rosWriteOccupancyGrid
Octomap	readOccupancyMap3D	rosReadOccupancyMap3D
PointStamped PoseStamped QuaternionStamped Vector3Stamped TransformStamped	apply	rosApplyTransform
All messages	showdetails	rosShowDetails

See Also

[rosReadImage](#) | [rosWriteImage](#) | [readRGB](#)

Introduced in R2019b

writeOccupancyGrid

Write values from grid to ROS message

Syntax

```
writeOccupancyGrid(msg, map)
```

Description

`writeOccupancyGrid(msg, map)` writes occupancy values and other information to the ROS message, `msg`, from the occupancy grid, `map`.

Input Arguments

msg — 'nav_msgs/OccupancyGrid' ROS message

OccupancyGrid object handle

'nav_msgs/OccupancyGrid' ROS message, specified as an OccupancyGrid ROS message object handle.

map — Occupancy map

occupancyMap object handle

Occupancy map, specified as an occupancyMap object handle.

See Also

Functions

[rosReadBinaryOccupancyGrid](#) | [rosReadOccupancyMap3D](#) | [rosReadOccupancyGrid](#) | [rosWriteOccupancyGrid](#)

Introduced in R2016b

Classes

BagSelection

Object for storing rosbag selection

Description

The `BagSelection` object is an index of the messages within a rosbag. You can use it to extract message data from a rosbag, select messages based on specific criteria, or create a `timeseries` of the message properties.

Use `rosbag` to load a rosbag and create the `BagSelection` object.

Use `select` to filter the rosbag by criteria such as time and topic.

Creation

Syntax

```
bag = rosbag(filename)
```

```
bagsel = select(bag)
```

Description

`bag = rosbag(filename)` creates an indexable `BagSelection` object, `bag`, that contains all the message indexes from the rosbag at the input path, `filename`. To access the data, you can call `readMessages` or `timeseries` to extract relevant data.

See `rosbag` for other syntaxes.

`bagsel = select(bag)` returns an object, `bagsel`, that contains all the messages in the `BagSelection` object, `bag`.

This function does not change the contents of the original `BagSelection` object. The return object, `bagsel`, is a new object that contains the specified message selection.

See `select` for other syntaxes and to filter by criteria such as time and topic.

Properties

FilePath — Absolute path to rosbag file

character vector

This property is read-only.

Absolute path to the rosbag file, specified as a character vector.

Data Types: `char`

StartTime — Timestamp of first message in selection

scalar

This property is read-only.

Timestamp of the first message in the selection, specified as a scalar in seconds.

Data Types: double

EndTime — Timestamp of last message in selection

scalar

This property is read-only.

Timestamp of the last message in the selection, specified as a scalar in seconds.

Data Types: double

NumMessages — Number of messages in selection

scalar

This property is read-only.

Number of messages in the selection, specified as a scalar. When you first load a rosbag, this property contains the number of messages in the rosbag. Once you select a subset of messages with `select`, the property shows the number of messages in this subset.

Data Types: double

AvailableTopics — Table of topics in selection

table

This property is read-only.

Table of topics in the selection, specified as a table. Each row in the table lists one topic, the number of messages for this topic, the message type, and the definition of the type. For example:

	NumMessages	MessageType	MessageDefinition
/odom	99	nav_msgs/Odometry	'# This represents an estimate of a position and

Data Types: table

AvailableFrames — List of available coordinate frames

cell array of character vectors

This property is read-only.

List of available coordinate frames, returned as a cell array of character vectors. Use `canTransform` to check whether specific transformations between frames are available, or `getTransform` to query a transformation.

Data Types: cell array

MessageList — List of messages in selection

table

This property is read-only.

List of messages in the selection, specified as a table. Each row in the table lists one message.

Data Types: `table`

Object Functions

<code>canTransform</code>	Verify if transformation is available
<code>getTransform</code>	Retrieve transformation between two coordinate frames
<code>readMessages</code>	Read messages from rosbag
<code>select</code>	Select subset of messages in rosbag
<code>timeseries</code>	Create time series object for selected message properties

Examples

Create rosbag Selection Using BagSelection Object

Load a rosbag log file and parse out specific messages based on the selected criteria.

Create a `BagSelection` object of all the messages in the rosbag log file.

```
bagMsgs = rosbag('ex_multiple_topics.bag');
```

Select a subset of the messages based on their timestamp and topic.

```
bagMsgs2 = select(bagMsgs, 'Time', ...  
                [bagMsgs.StartTime bagMsgs.StartTime + 1], 'Topic', '/odom');
```

Retrieve the messages in the selection as a cell array.

```
msgs = readMessages(bagMsgs2);
```

Return certain message properties as a time series.

```
ts = timeseries(bagMsgs2, 'Pose.Pose.Position.X', ...  
               'Twist.Twist.Angular.Y');
```

Retrieve Information from rosbag

Retrieve information from the rosbag. Specify the full path to the rosbag if it is not already available on the MATLAB® path.

```
bagselect = rosbag('ex_multiple_topics.bag');
```

Select a subset of the messages, filtered by time and topic.

```
bagselect2 = select(bagselect, 'Time', ...  
                  [bagselect.StartTime bagselect.StartTime + 1], 'Topic', '/odom');
```

Display rosbag Information from File

To view information about a rosbag log file, use `rosbag info filename`, where *filename* is a rosbag (.bag) file.

```
rosbag info 'ex_multiple_topics.bag'
```

```
Path:      C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex32890909\ex_multiple_topics.l
Version:   2.0
Duration:  2:00s (120s)
Start:     Dec 31 1969 19:03:21.34 (201.34)
End:       Dec 31 1969 19:05:21.34 (321.34)
Size:      23.6 MB
Messages:  36963
Types:     gazebo_msgs/LinkStates [48c080191eb15c41858319b4d8a609c2]
           nav_msgs/Odometry      [cd5e73d190d741a2f92e81eda573aca7]
           rosgraph_msgs/Clock    [a9c97c1d230cfc112e270351a944ee47]
           sensor_msgs/LaserScan  [90c7ef2dc6895d81024acba2ac42f369]
Topics:    /clock                    12001 msgs : rosgraph_msgs/Clock
           /gazebo/link_states    11999 msgs : gazebo_msgs/LinkStates
           /odom                  11998 msgs : nav_msgs/Odometry
           /scan                  965 msgs  : sensor_msgs/LaserScan
```

Get Transformations from rosbag File

Get transformations from rosbag (.bag) files by loading the rosbag and checking the available frames. From these frames, use `getTransform` to query the transformation between two coordinate frames.

Load the rosbag.

```
bag = rosbag('ros_turtlesim.bag');
```

Get a list of available frames.

```
frames = bag.AvailableFrames;
```

Get the latest transformation between two coordinate frames.

```
tf = getTransform(bag, 'world', frames{1});
```

Check for a transformation available at a specific time and retrieve the transformation. Use `canTransform` to check if the transformation is available. Specify the time using `rostime`.

```
tfTime = rostime(bag.StartTime + 1);
if (canTransform(bag, 'world', frames{1}, tfTime))
    tf2 = getTransform(bag, 'world', frames{1}, tfTime);
end
```

Read Messages from a rosbag as a Structure

Load the rosbag.

```
bag = rosbag('ros_turtlesim.bag');
```

Select a specific topic.

```
bSel = select(bag, 'Topic', '/turtle1/pose');
```

Read messages as a structure. Specify the `DataFormat` name-value pair when reading the messages. Inspect the first structure in the returned cell array of structures.


```
msgStructs = readMessages(bSel, 'DataFormat', 'struct');  
msgStructs{1}
```

```
ans = struct with fields:  
    MessageType: 'turtlesim/Pose'  
        X: 5.5016  
        Y: 6.3965  
        Theta: 4.5377  
    LinearVelocity: 1  
    AngularVelocity: 0
```

Extract the xy points from the messages and plot the robot trajectory.

Use `cellfun` to extract all the X and Y fields from the structure. These fields represent the xy positions of the robot during the rosbag recording.

```
xPoints = cellfun(@(m) double(m.X),msgStructs);  
yPoints = cellfun(@(m) double(m.Y),msgStructs);  
plot(xPoints,yPoints)
```

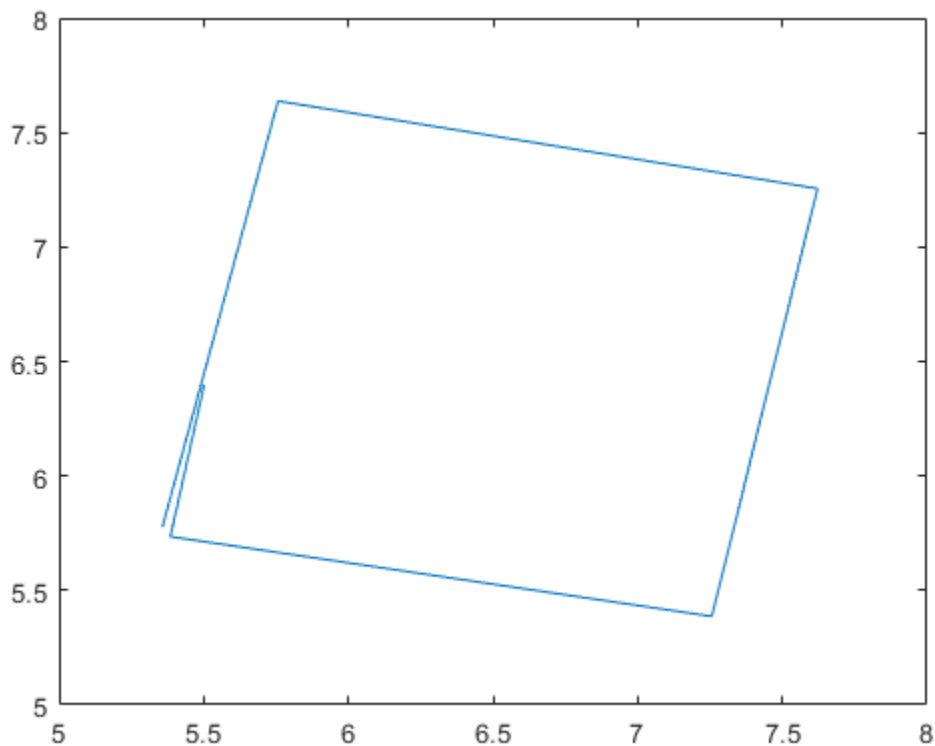

See Also

[rosbag](#) | [readMessages](#) | [select](#) | [canTransform](#) | [getTransform](#) | [timeseries](#)

Topics

“Work with rosbag Logfiles”

“ROS Log Files (rosbags)”

Introduced in R2019b

Core

Create ROS Core

Description

The ROS Core encompasses many key components and nodes that are essential for the ROS network. You must have exactly one ROS core running in the ROS network for nodes to communicate. Using this class allows the creation of a ROS core in MATLAB. Once the core is created, you can connect to it by calling `rosinit` or `ros.Node`.

Creation

Syntax

```
core = ros.Core  
core = ros.Core(port)
```

Description

`core = ros.Core` returns a `Core` object and starts a ROS core in MATLAB. This ROS core has a default port of 11311. MATLAB allows the creation of only one core on any given port and displays an error if another core is detected on the same port.

`core = ros.Core(port)` starts a ROS core at the specified port, `port`.

Properties

Port — Network port at which the ROS master is listening

11311 (default) | scalar

This property is read-only.

Network port at which the ROS master is listening, returned as a scalar.

MasterURI — The URI on which the ROS master can be reached

'http://<HOSTNAME>:11311' (default) | character vector

This property is read-only.

The URI on which the ROS master can be reached, returned as a character vector. The `MasterURI` is constructed based on the host name of your computer. If your host name is not valid, the IP address of your first network interface is used.

Examples

Create ROS Core On Specific Port

Create a ROS core on localhost and port 12000.

```
core = ros.Core(12000)
```

```
Launching ROS Core...  
..Done in 2.7674 seconds.
```

```
core =  
  Core with properties:  
    Port: 12000  
    MasterURI: 'http://172.30.135.140:12000'
```

Clear the ROS core to shut down the ROS network.

```
clear('core')
```

See Also

[rosinit](#) | [Node](#)

Topics

[“Connect to a ROS Network”](#)

[“ROS Network Setup”](#)

External Websites

[ROS Core](#)

Introduced in R2019b

CompressedImage

Create compressed image message

Description

The `CompressedImage` object is an implementation of the `sensor_msgs/CompressedImage` message type in ROS. The object contains the compressed image and meta-information about the message. You can create blank `CompressedImage` messages and populate them with data, or subscribe to image messages over the ROS network. To convert the image to a MATLAB image, use the `readImage` function.

Only images that are sent through the ROS Image Transport package are supported for conversion to MATLAB images.

Creation

Syntax

```
msg = rosmesssage('sensor_msgs/CompressedImage')
```

Description

`msg = rosmesssage('sensor_msgs/CompressedImage')` creates an empty `CompressedImage` object. To specify image data, use the `msg.Data` property. You can also get these image messages off the ROS network using `rossubscriber`.

Properties

MessageType — Message type of ROS message

character vector

This property is read-only.

Message type of ROS message, returned as a character vector.

Data Types: `char`

Header — ROS Header message

Header object

This property is read-only.

ROS Header message, returned as a `Header` object. This header message contains the `MessageType`, sequence (`Seq`), timestamp (`Stamp`), and `FrameId`.

Format — Image format

character vector

Image format, specified as a character vector.

Example: 'bgr8; jpeg compressed bgr8'

Data — Image data

uint8 array

Image data, specified as a uint8 array.

Object Functions

`readImage` Convert ROS image data into MATLAB image

Examples

Read and Write CompressedImage Messages

Read and write a sample ROS `CompressedImage` message by converting it.

Load sample ROS messages and inspect the image message. The `imgcomp` object is a sample ROS `CompressedImage` message object.

```
exampleHelperROSLoadMessages
```

```
imgcomp
```

```
imgcomp =
```

```
ROS CompressedImage message with properties:
```

```
    MessageType: 'sensor_msgs/CompressedImage'  
        Header: [1x1 Header]  
        Format: 'bgr8; jpeg compressed bgr8'  
        Data: [30376x1 uint8]
```

Use `showdetails` to show the contents of the message

Create a MATLAB image from the `CompressedImage` message using `readImage` and display it.

```
I = readImage(imgcomp);  
imshow(I)
```



Create Blank Compressed Image Message

```
compImg = rosmesssage('sensor_msgs/CompressedImage')
```

```
compImg =  
  ROS CompressedImage message with properties:  
  
  MessageType: 'sensor_msgs/CompressedImage'  
  Header: [1x1 Header]  
  Format: ''  
  Data: [0x1 uint8]
```

Use `showdetails` to show the contents of the message

See Also

[readImage](#) | [rosmesssage](#) | [rossubscriber](#)

Topics

“Work with Specialized ROS Messages”

Introduced in R2019b

Image

Create image message

Description

The `Image` object is an implementation of the `sensor_msgs/Image` message type in ROS. The object contains the image and meta-information about the message. You can create blank `Image` messages and populate them with data, or subscribe to image messages over the ROS network. To convert the image to a MATLAB image, use the `readImage` function.

Creation

Syntax

```
msg = rosmesssage('sensor_msgs/Image')
```

Description

`msg = rosmesssage('sensor_msgs/Image')` creates an empty `Image` object. To specify image data, use the `msg.Data` property. You can also get these image messages off the ROS network using `rossubscriber`.

Properties

MessageType — Message type of ROS message

character vector

This property is read-only.

Message type of ROS message, returned as a character vector.

Data Types: `char`

Header — ROS Header message

Header object

This property is read-only.

ROS Header message, returned as a `Header` object. This header message contains the `MessageType`, sequence (`Seq`), timestamp (`Stamp`), and `FrameId`.

Height — Image height in pixels

scalar

Image height in pixels, specified as a scalar.

Width — Image width in pixels

scalar

Image width in pixels, specified as a scalar.

Encoding — Image encoding

character vector

Image encoding, specified as a character vector.

Example: 'rgb8'

IsBigendian — Image byte sequence

true | false

Image byte sequence, specified as true or false.

- `true` —Big endian sequence. Stores the most significant byte in the smallest address.
- `false` —Little endian sequence. Stores the least significant byte in the smallest address.

Step — Full row length in bytes

integer

Full row length in bytes, specified as an integer. This length depends on the color depth and the pixel width of the image. For example, an RGB image has 3 bytes per pixel, so an image with width 640 has a step of 1920.

Data — Image data

uint8 array

Image data, specified as a uint8 array.

Object Functions

`readImage` Convert ROS image data into MATLAB image

`writeImage` Write MATLAB image to ROS image message

Examples

Read and Write Image Messages

Read and write a sample ROS Image message by converting it to a MATLAB image. Then, convert a MATLAB® image to a ROS message.

Load sample ROS messages and inspect the image message data. The `img` object is a sample ROS Image message object.

```
exampleHelperROSLoadMessages
```

```
img
```

```
img =
```

```
ROS Image message with properties:
```

```
    MessageType: 'sensor_msgs/Image'
```

```
        Header: [1x1 Header]
```

```
        Height: 480
```

```
        Width: 640
```


```
        Encoding: 'rgb8'
```

```
IsBigendian: 0
Step: 1920
Data: [921600x1 uint8]
```

Use `showdetails` to show the contents of the message

Create a MATLAB image from the `Image` message using `readImage` and display it.

```
I = readImage(img);
imshow(I)
```

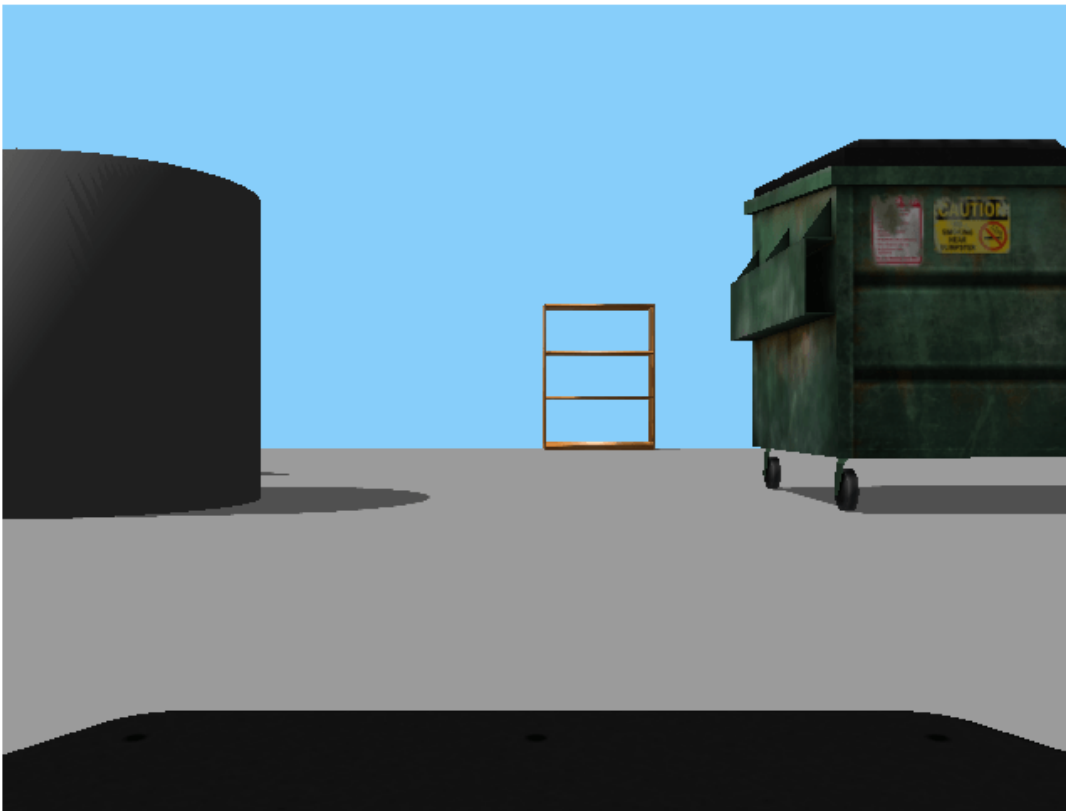

Create a ROS `Image` message from a MATLAB image.

```
imgMsg = rosmesssage('sensor_msgs/Image');
imgMsg.Encoding = 'rgb8'; % Specifies Image Encoding Type
writeImage(imgMsg,I)
imgMsg
```

```
imgMsg =
  ROS Image message with properties:
```

```
  MessageType: 'sensor_msgs/Image'
  Header: [1x1 Header]
```

```
    Height: 480
    Width: 640
    Encoding: 'rgb8'
    IsBigendian: 0
    Step: 1920
    Data: [921600x1 uint8]
```

Use `showdetails` to show the contents of the message

Create Blank Image Message

```
msg = rosmassage('sensor_msgs/Image')
```

```
msg =
  ROS Image message with properties:
```

```
    MessageType: 'sensor_msgs/Image'
    Header: [1x1 Header]
    Height: 0
    Width: 0
    Encoding: ''
    IsBigendian: 0
    Step: 0
    Data: [0x1 uint8]
```

Use `showdetails` to show the contents of the message

See Also

[readImage](#) | [writeImage](#) | [rosmassage](#) | [rossubscriber](#)

Topics

“Work with Specialized ROS Messages”

Introduced in R2019b

LaserScan

Create laser scan message

Description

The LaserScan object is an implementation of the `sensor_msgs/LaserScan` message type in ROS. The object contains meta-information about the message and the laser scan data. You can extract the ranges and angles using the `Ranges` property and the `readScanAngles` function. To access points in Cartesian coordinates, use `readCartesian`.

You can also convert this object to a `lidarScan` object to use with other robotics algorithms such as `matchScans`, `controllerVFH`, or `monteCarloLocalization`.

Creation

Syntax

```
scan = rosmessage('sensor_msgs/LaserScan')
```

Description

`scan = rosmessage('sensor_msgs/LaserScan')` creates an empty LaserScan object. You can specify scan info and data using the properties, or you can get these messages off a ROS network using `rossubscriber`.

Properties

MessageType — Message type of ROS message

character vector

This property is read-only.

Message type of ROS message, returned as a character vector.

Data Types: `char`

Header — ROS Header message

Header object

This property is read-only.

ROS Header message, returned as a Header object. This header message contains the `MessageType`, sequence (`Seq`), timestamp (`Stamp`), and `FrameId`. Timestamp relates to the acquisition time of the first ray in the scan.

AngleMin — Minimum angle of range data

scalar

Minimum angle of range data, specified as a scalar in radians. Positive angles are measured from the forward direction of the robot.

AngleMax — Maximum angle of range data

scalar

Maximum angle of range data, specified as a scalar in radians. Positive angles are measured from the forward direction of the robot.

AngleIncrement — Angle increment of range data

scalar

Angle increment of range data, specified as a scalar in radians.

TimeIncrement — Time between individual range data points in seconds

scalar

Time between individual range data points in seconds, specified as a scalar.

ScanTime — Time to complete a full scan in seconds

scalar

Time to complete a full scan in seconds, specified as a scalar.

RangeMin — Minimum valid range value

scalar

Minimum valid range value, specified as a scalar.

RangeMax — Maximum valid range value

scalar

Maximum valid range value, specified as a scalar.

Ranges — Range readings from laser scan

vector

Range readings from laser scan, specified as a vector. To get the corresponding angles, use `readScanAngles`.

Intensities — Intensity values from range readings

vector

Intensity values from range readings, specified as a vector. If no valid intensity readings are found, this property is empty.

Object Functions

<code>lidarScan</code>	Create object for storing 2-D lidar scan
<code>plot</code>	Display lidar scan or point cloud from ROS message structures
<code>readCartesian</code>	Read laser scan ranges in Cartesian coordinates
<code>readScanAngles</code>	Return scan angles for laser scan range readings

Examples

Inspect Sample Laser Scan Message

Load, inspect, and display a sample laser scan message.

Create sample messages and inspect the laser scan message data. The scan object is a sample ROS LaserScan message object.

```
exampleHelperROSLoadMessages  
scan
```

```
scan =  
  ROS LaserScan message with properties:  
  
    MessageType: 'sensor_msgs/LaserScan'  
      Header: [1x1 Header]  
      AngleMin: -0.5467  
      AngleMax: 0.5467  
    AngleIncrement: 0.0017  
    TimeIncrement: 0  
    ScanTime: 0.0330  
    RangeMin: 0.4500  
    RangeMax: 10  
    Ranges: [640x1 single]  
    Intensities: [0x1 single]
```

Use showdetails to show the contents of the message

Get ranges and angles from the object properties. Check that the ranges and angles are the same size.


```
ranges = scan.Ranges;  
angles = scan.readScanAngles;  
size(ranges)
```

```
ans = 1x2  
  
    640     1
```

```
size(angles)
```

```
ans = 1x2  
  
    640     1
```

```
plot(scan)
```

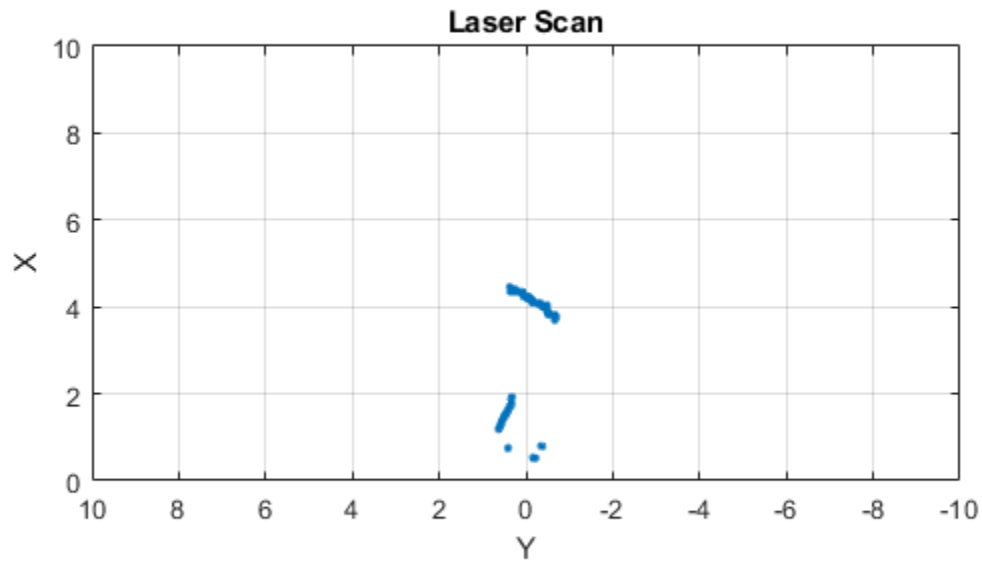

Create Empty LaserScan Message

```
scan = rosmesssage('sensor_msgs/LaserScan')
```

```
scan =
```

```
ROS LaserScan message with properties:
```

```
  MessageType: 'sensor_msgs/LaserScan'  
    Header: [1x1 Header]  
    AngleMin: 0  
    AngleMax: 0  
AngleIncrement: 0  
TimeIncrement: 0  
  ScanTime: 0  
  RangeMin: 0  
  RangeMax: 0  
    Ranges: [0x1 single]  
  Intensities: [0x1 single]
```

Use `showdetails` to show the contents of the message

See Also

lidarScan | plot | readCartesian | readScanAngles | showdetails | rosmessage | rossubscriber

Topics

“Work with Specialized ROS Messages”

Introduced in R2019b

Node

Start ROS node and connect to ROS master

Description

The `ros.Node` object represents a ROS node in the ROS network. The object enables you to communicate with the rest of the ROS network. You must create a node before you can use other ROS functionality, such as publishers, subscribers, and services.

You can create a ROS node using the `rosinit` function, or by calling `ros.Node`:

- `rosinit` — Creates a single ROS node in MATLAB. You can specify an existing ROS master, or the function creates one for you. The `Node` object is not visible.
- `ros.Node`— Creates multiple ROS nodes for use on the same ROS network in MATLAB.

Creation

Syntax

```
N = ros.Node(Name)
N = ros.Node(Name,Host)
N = ros.Node(Name,Host,Port)
N = ros.Node(Name,MasterURI,Port)
N = ros.Node( ___, 'NodeHost',HostName)
```

Description

`N = ros.Node(Name)` initializes the ROS node with `Name` and tries to connect to the ROS master at default URI, `http://localhost:11311`.

`N = ros.Node(Name,Host)` tries to connect to the ROS master at the specified IP address or host name, `Host` using the default port number, `11311`.

`N = ros.Node(Name,Host,Port)` tries to connect to the ROS master with port number, `Port`.

`N = ros.Node(Name,MasterURI,Port)` tries to connect to the ROS master at the specified IP address, `MasterURI`.

`N = ros.Node(___, 'NodeHost',HostName)` specifies the IP address or host name that the node uses to advertise itself to the ROS network. Examples include `"192.168.1.1"` or `"comp-home"`. You can use any of the arguments from the previous syntaxes.

Properties

Name — Name of the node

string scalar | character vector

Name of the node, specified as a string scalar or character vector. The node name must be a valid ROS graph name. See ROS Names.

MasterURI — URI of the ROS master

string scalar | character vector

URI of the ROS master, specified as a string scalar or character vector. The node is connected to the ROS master with the given URI.

NodeURI — URI for the node

string scalar | character vector

URI for the node, specified as a string scalar or character vector. The node uses this URI to advertise itself on the ROS network for others to connect to it.

CurrentTime — Current ROS network time

Time object

Current ROS network time, specified as a Time object. For more information, see `rostime`.

Examples

Create Multiple ROS Nodes

Create multiple ROS nodes. Use the `Node` object with publishers, subscribers, and other ROS functionality to specify the node the you are connecting to.

Create a ROS master.

```
master = ros.Core;
  
Launching ROS Core...
...Done in 3.8601 seconds.
```

Initialize multiple nodes.

```
node1 = ros.Node('/test_node_1');
node2 = ros.Node('/test_node_2');
```

Use these nodes to perform separate operations and send separate messages. A message published by `node1` can be accessed by a subscriber running in `node2`.

```
pub = ros.Publisher(node1, '/chatter', 'std_msgs/String');
sub = ros.Subscriber(node2, '/chatter', 'std_msgs/String');
  
msg = rosmessage('std_msgs/String');
msg.Data = 'Message from Node 1';
```

Send a message from `node1`. The subscriber attached to `node2` will receive the message.

```
send(pub,msg) % Sent from node 1
pause(1) % Wait for message to update
sub.LatestMessage
  
ans =
    ROS String message with properties:
```

```
MessageType: 'std_msgs/String'  
Data: 'Message from Node 1'
```

Use `showdetails` to show the contents of the message

Clear the ROS network of publisher, subscriber, and nodes. Delete the `Core` object to shut down the ROS master.

```
clear('pub', 'sub', 'node1', 'node2')  
clear('master')
```

Connect to Multiple ROS Masters

Connecting to multiple ROS masters is possible using MATLAB®. These separate ROS masters do not share information and must have different port numbers. Connect ROS nodes to each master based on how you want to distribute information across the network.

Create two ROS masters on different ports.

```
m1 = ros.Core; % Default port of 11311
```

```
Launching ROS Core...  
.....Done in 6.0639 seconds.
```

```
m2 = ros.Core(12000);
```

```
Launching ROS Core...  
...Done in 3.8276 seconds.
```

Connect separate ROS nodes to each ROS master.

```
node1 = ros.Node('/test_node_1', 'localhost');  
node2 = ros.Node('/test_node_2', 'localhost', 12000);
```

Clear the ROS nodes. Shut down the ROS masters.

```
clear('node1', 'node2')  
clear('m1', 'm2')
```

See Also

`rosinit` | `roshutdown`

Topics

“ROS Network Setup”

External Websites

ROS Nodes

Introduced in R2019b

ros2node

Create a ROS 2 node on the specified network

Description

The `ros2node` object represents a ROS 2 node, and allows you to communicate with the rest of the ROS 2 network. You have to create a node before you can create publishers and subscribers.

Creation

Syntax

```
node = ros2node(Name)
node = ros2node(Name, ID)
```

Description

`node = ros2node(Name)` initializes a ROS 2 node with the given `Name`. The node will be on the network specified by the domain identification `0`, unless otherwise specified by the `ROS_DOMAIN_ID` environment variable.

`node = ros2node(Name, ID)` will initialize the ROS 2 node with `Name` and connect to the network using domain `ID`.

Input Arguments

Name — Name of the node

string | char array

The name of the node on the ROS 2 network.

Note In ROS 1, node names are unique and this is being enforced by shutting down existing nodes when a new node with the same name is started. In ROS 2, the uniqueness of node names is not enforced. When creating a new node, use `ros2` function to list existing nodes.

ID — Domain identification of the network

non-negative scalar integer

The domain identification of the ROS 2 network.

Data Types: `double`

Properties

Name — Name of the node

char array

This property is read-only.

The name of the node on the ROS 2 network.

Example: `"/node_1"`

Data Types: `char`

ID – Domain identification of the network

non-negative scalar integer between 0 and 232

This property is read-only.

The domain identification of the ROS 2 network, specified as a non-negative scalar integer between 0 and 232.

Example: `2`

Data Types: `double`

Object Functions

`delete` Remove reference to ROS 2 node

Examples

Initialize a Node on Default ROS 2 Network

Initialize the node, `"/node_1"`, on the default ROS 2 network.

```
node1 = ros2node('/node_1')
```

```
node1 =  
  ros2node with properties:
```

```
  Name: '/node_1'  
  ID: 0
```

Initialize a Node on Specified ROS 2 Network

Initialize the node, `"/node_2"`, on the ROS 2 network identified with domain 2.

```
node2 = ros2node("/node_2", 2)
```

```
node2 =  
  ros2node with properties:
```

```
  Name: '/node_2'  
  ID: 2
```

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Only one `ros2node` object is allowed in a single MATLAB function. You can write individual MATLAB functions for each additional `ros2node`.

See Also

`ros2publisher` | `ros2subscriber`

Topics

“Get Started with ROS 2”

“ROS System Requirements”

Introduced in R2019b

OccupancyGrid

Create occupancy grid message

Description

The `OccupancyGrid` object is an implementation of the `nav_msgs/OccupancyGrid` message type in ROS. The object contains meta-information about the message and the occupancy grid data.

To create a `binaryOccupancyMap` object from a ROS message, use the `readBinaryOccupancyGrid` function.

To create an `occupancyMap` object, use the `readOccupancyGrid` function.

Creation

Syntax

```
msg = rosmesssage('nav_msgs/OccupancyGrid');
```

Description

`msg = rosmesssage('nav_msgs/OccupancyGrid');` creates an empty `OccupancyGrid` object. To specify map information and data, use the `map.Info` and `msg.Data` properties. You can also get the occupancy grid messages off the ROS network using `rossubscriber`.

Properties

MessageType — Message type of ROS message

character vector

This property is read-only.

Message type of ROS message, returned as a character vector.

Data Types: `char`

Header — ROS Header message

Header object

This property is read-only.

ROS Header message, returned as a `Header` object. This header message contains the `MessageType`, sequence (`Seq`), timestamp (`Stamp`), and `FrameId`.

Info — Information about the map

`MapMetaData` object

Information about the map, specified as a `MapMetaData` object. It contains the width, height, resolution, and origin of the map.

Data — Map data

vector

Map data, specified as a vector. The vector is all the occupancy data from each grid location in a single 1-D array.

Object Functions

readOccupancyGrid	Read occupancy grid message
readBinaryOccupancyGrid	Read binary occupancy grid
writeBinaryOccupancyGrid	Write values from grid to ROS message
writeOccupancyGrid	Write values from grid to ROS message

Examples**Create Occupancy Grid from 2-D Map**

Load two maps, `simpleMap` and `complexMap`, as logical matrices. Use `whos` to display the map.

```
load exampleMaps.mat
whos *Map*
```

Name	Size	Bytes	Class	Attributes
complexMap	41x52	2132	logical	
emptyMap	26x27	702	logical	
simpleMap	26x27	702	logical	
ternaryMap	501x501	2008008	double	

Create a ROS message from `simpleMap` using a `binaryOccupancyMap` object. Write the `OccupancyGrid` message using `writeBinaryOccupancyGrid`.

```
bogMap = binaryOccupancyMap(double(simpleMap));
mapMsg = rosmesssage('nav_msgs/OccupancyGrid');
writeBinaryOccupancyGrid(mapMsg,bogMap)
mapMsg
```


```
mapMsg =
  ROS OccupancyGrid message with properties:
```

```
  MessageType: 'nav_msgs/OccupancyGrid'
  Header: [1x1 Header]
  Info: [1x1 MapMetaData]
  Data: [702x1 int8]
```

Use `showdetails` to show the contents of the message

Use `readBinaryOccupancyGrid` to convert the ROS message to a `binaryOccupancyMap` object. Use the object function `show` to display the map.

```
bogMap2 = readBinaryOccupancyGrid(mapMsg);
show(bogMap2);
```

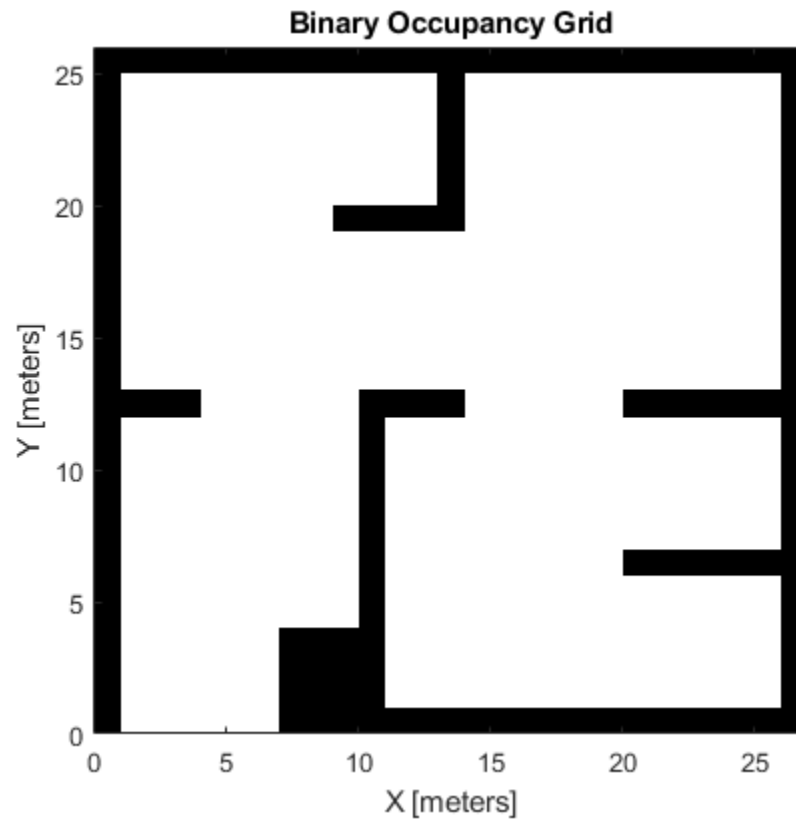

See Also

Objects

`occupancyMap` | `binaryOccupancyMap`

Functions

`readBinaryOccupancyGrid` | `readOccupancyGrid` | `writeBinaryOccupancyGrid` | `writeOccupancyGrid`

Introduced in R2019b

PointCloud2

Access point cloud messages

Description

The `PointCloud2` object is an implementation of the `sensor_msgs/PointCloud2` message type in ROS. The object contains meta-information about the message and the point cloud data. To access the actual data, use `readXYZ` to get the point coordinates and `readRGB` to get the color information, if available.

Creation

Syntax

```
ptcloud = rosmesssage('sensor_msgs/PointCloud2')
```

Description

`ptcloud = rosmesssage('sensor_msgs/PointCloud2')` creates an empty `PointCloud2` object. To specify point cloud data, use the `ptcloud.Data` property. You can also get point cloud data messages off the ROS network using `rossubscriber`.

Properties

PreserveStructureOnRead — Preserve the shape of point cloud matrix

`false` (default) | `true`

This property is read-only.

Preserve the shape of point cloud matrix, specified as `false` or `true`. When the property is `true`, the output data from `readXYZ` and `readRGB` are returned as matrices instead of vectors.

MessageType — Message type of ROS message

character vector

This property is read-only.

Message type of ROS message, returned as a character vector.

Data Types: `char`

Header — ROS Header message

Header object

This property is read-only.

ROS Header message, returned as a `Header` object. This header message contains the `MessageType`, sequence (`Seq`), timestamp (`Stamp`), and `FrameId`.

Height — Point cloud height in pixels

integer

Point cloud height in pixels, specified as an integer.

Width — Point cloud width in pixels

integer

Point cloud width in pixels, specified as an integer.

IsBigendian — Image byte sequence

true | false

Image byte sequence, specified as `true` or `false`.

- `true` —Big endian sequence. Stores the most significant byte in the smallest address.
- `false` —Little endian sequence. Stores the least significant byte in the smallest address.

PointStep — Length of a point in bytes

integer

Length of a point in bytes, specified as an integer.

RowStep — Full row length in bytes

integer

Full row length in bytes, specified as an integer. The row length equals the `PointStep` property multiplied by the `Width` property.

Data — Point cloud data

uint8 array

Point cloud data, specified as a `uint8` array. To access the data, use the “Object Functions” on page 2-33.

Object Functions

<code>readAllFieldNames</code>	Get all available field names from ROS point cloud
<code>readField</code>	Read point cloud data based on field name
<code>readRGB</code>	Extract RGB values from point cloud data
<code>readXYZ</code>	Extract XYZ coordinates from point cloud data
<code>scatter3</code>	Display point cloud in scatter plot
<code>showdetails</code>	Display all ROS message contents

Examples**Inspect Point Cloud Image**

Access and visualize the data inside a point cloud message.

Create sample ROS messages and inspect a point cloud image. `ptcloud` is a sample ROS `PointCloud2` message object.

```
exampleHelperROSLoadMessages  
ptcloud
```

```
ptcloud =  
  ROS PointCloud2 message with properties:  
  
  PreserveStructureOnRead: 0  
    MessageType: 'sensor_msgs/PointCloud2'  
    Header: [1x1 Header]  
    Fields: [4x1 PointField]  
    Height: 480  
    Width: 640  
  IsBigendian: 0  
  PointStep: 32  
  RowStep: 20480  
  Data: [9830400x1 uint8]  
  IsDense: 0
```


Use `showdetails` to show the contents of the message

Get RGB info and xyz-coordinates from the point cloud using `readXYZ` and `readRGB`.

```
xyz = readXYZ(ptcloud);  
rgb = readRGB(ptcloud);
```

Display the point cloud in a figure using `scatter3`.

```
scatter3(ptcloud)
```

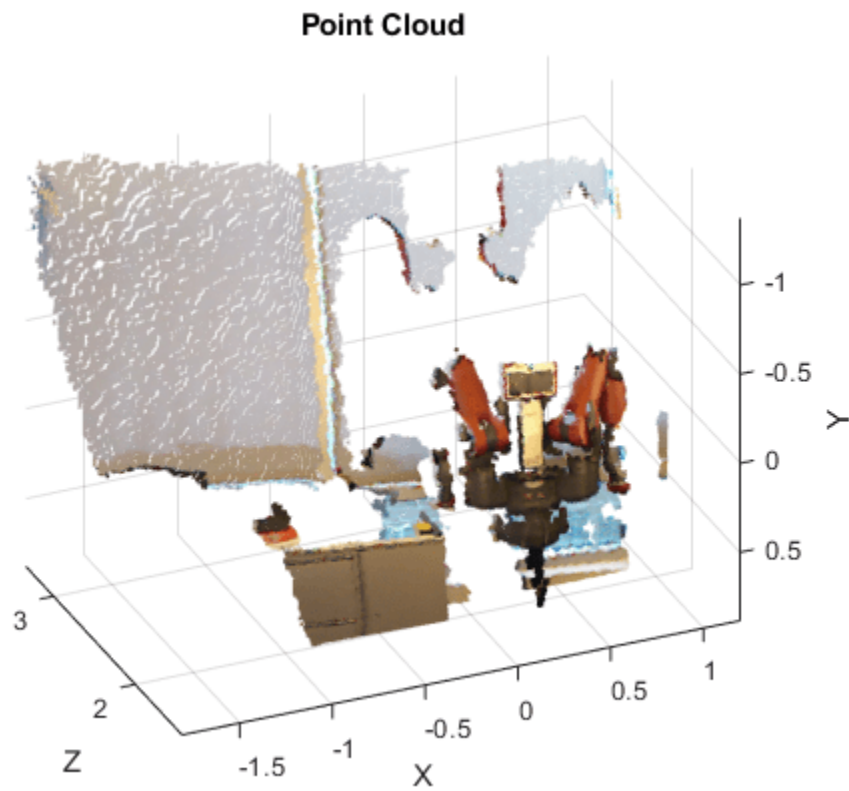Create pointCloud Object Using Point Cloud Message

Convert a ROS Toolbox™ point cloud message into a Computer Vision System Toolbox™ pointCloud object.

Load sample messages.

```
exampleHelperROSLoadMessages
```

Convert a ptcloud message to the pointCloud object.

```
pcobj = pointCloud(readXYZ(ptcloud), 'Color', uint8(255*readRGB(ptcloud)))
```

```
pcobj =  
    pointCloud with properties:
```

```
    Location: [307200x3 single]  
      Count: 307200  
    XLimits: [-1.8147 1.1945]  
    YLimits: [-1.3714 0.8812]  
    ZLimits: [1.4190 3.3410]  
      Color: [307200x3 uint8]  
     Normal: []  
  Intensity: []
```

See Also

readAllFieldNames | readField | readRGB | readXYZ | scatter3 | showdetails | rosmessage
| rossubscriber

Topics

“Work with Specialized ROS Messages”

Introduced in R2019b

rosdevice

Connect to remote ROS device

Description

The `rosdevice` object is used to create a connection with a ROS device. The ROS device can be the local device or a remote device. The object contains the necessary login information and other parameters of the ROS distribution. Once a connection is made using `rosdevice`, you can run and stop a ROS core or ROS nodes and check the status of the ROS network. Before running ROS nodes, you must connect MATLAB to the ROS network using the `rosinit` function.

You can deploy ROS nodes to a ROS device using Simulink models. For an example, see “Generate a Standalone ROS Node from Simulink®”.

You can also deploy ROS nodes generated from MATLAB code.

Note To connect to a remote ROS device, an SSH server must be installed on the device. To connect to the local host, an SSH server installation on the local device is not required if you specify the `deviceAddress` as `'localhost'`. Alternatively, if you specify the `deviceAddress` as `'127.0.0.1'` or as the host name referring to the local device, then an SSH server must be installed on the local device.

Creation

Syntax

```
device = rosdevice(deviceAddress,username,password)
device = rosdevice
device = rosdevice('localhost')
```

Description

`device = rosdevice(deviceAddress,username,password)` creates a `rosdevice` object connected to the ROS device at the specified address and with the specified user name and password.

`device = rosdevice` creates a `rosdevice` object connected to a ROS device using the saved values for `deviceAddress`, `username`, and `password`.

`device = rosdevice('localhost')` creates a `rosdevice` object connected to the local device.

Properties

DeviceAddress — Host name or IP address of the ROS device

character vector

This property is read-only.

Host name or IP address of the ROS device, specified as a character vector.

Example: '192.168.1.10'

Example: 'samplehost.foo.com'

UserName — User name used to connect to the ROS device

character vector

This property is read-only.

User name used to connect to the ROS device, specified as a character vector.

Example: 'user'

ROSFolder — Location of ROS installation

character vector

Location of ROS installation, specified as a character vector. If a folder is not specified, MATLAB tries to determine the correct folder for you. When you deploy a ROS node, set this value from Simulink in the Configuration Parameters dialog box, under **Hardware Implementation**.

Example: '/opt/ros/hydro'

CatkinWorkspace — Catkin folder where models are deployed on device

character vector

Catkin folder where models are deployed on device, specified as a character vector. When you deploy a ROS node, set this value from Simulink in the Configuration Parameters dialog box, under **Hardware Implementation**.

Example: '~/catkin_ws_test'

AvailableNodes — Nodes available to run on ROS device

cell array of character vectors

This property is read-only.

Nodes available to run on a ROS device, returned as a cell array of character vectors. Nodes are only listed if they are part of the `CatkinWorkspace` and have been deployed to the device using Simulink.

Example: {'robotcontroller', 'publishernode'}

Object Functions

<code>runNode</code>	Start ROS or ROS 2 node
<code>stopNode</code>	Stop ROS or ROS 2 node
<code>isNodeRunning</code>	Determine if ROS or ROS 2 node is running
<code>runCore</code>	Start ROS core
<code>stopCore</code>	Stop ROS core
<code>isCoreRunning</code>	Determine if ROS core is running
<code>system</code>	Execute system command on device
<code>putFile</code>	Copy file to device
<code>getFile</code>	Get file from device
<code>deleteFile</code>	Delete file from device
<code>dir</code>	List folder contents on device
<code>openShell</code>	Open interactive command shell to device

Examples

Run ROS Core on ROS Device

Connect to a remote ROS device and start a ROS core. The ROS core is needed to run ROS nodes to communicate via a ROS network. You can run and stop a ROS core or node and check their status using a `rosdevice` object.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device contains information about the ROS device, including the available ROS nodes that can be run using `runNode`.

```
ipaddress = '192.168.203.131';
d = rosdevice(ipaddress, 'user', 'password')

d =
  rosdevice with properties:

    DeviceAddress: '192.168.203.131'
    Username: 'user'
    ROSFolder: '/opt/ros/indigo'
    CatkinWorkspace: '~/catkin_ws'
    AvailableNodes: {'voxel_grid_filter_sl'}
```

Run a ROS core and check if it is running.

```
runCore(d)
```

Another `roscore` / ROS master is already running on the ROS device. Use the `'stopCore'` function to

```
running = isCoreRunning(d)
```

```
running = logical
         1
```

Stop the ROS core and confirm that it is no longer running.

```
stopCore(d)
pause(2)
running = isCoreRunning(d)

running = logical
         0
```

Run ROS Node on ROS Device

Connect to a remote ROS device and start a ROS node. Run a ROS core so that ROS nodes can communicate via a ROS network. You can run and stop a ROS core or node and check their status using a `rosdevice` object.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device already contains the available ROS nodes that can be run using `runNode`.

```
ipaddress = '192.168.203.129';
d = rosdevice(ipaddress, 'user', 'password');
d.ROSFolder = '/opt/ros/indigo';
d.CatkinWorkspace = '~/catkin_ws_test'

d =
  rosdevice with properties:

      DeviceAddress: '192.168.203.129'
      Username: 'user'
      ROSFolder: '/opt/ros/indigo'
      CatkinWorkspace: '~/catkin_ws_test'
      AvailableNodes: {'robotcontroller' 'robotcontroller2'}
```

Run a ROS core. Connect MATLAB® to the ROS master using `rosinit`. This core enables you to run ROS nodes on your ROS device.

```
runCore(d)
rosinit(d.DeviceAddress, 11311)
```

```
Initializing global node /matlab_global_node_84497 with NodeURI http://192.168.203.1:56034/
```

Check the available ROS nodes on the connected ROS device. These nodes listed were generated from Simulink® models following the process in the “Get Started with ROS in Simulink®” example.

```
d.AvailableNodes
```

```
ans = 1x2 cell
      {'robotcontroller'}      {'robotcontroller2'}
```

Run a ROS node and specify the node name. Check if the node is running.

```
runNode(d, 'RobotController')
running = isNodeRunning(d, 'RobotController')

running = logical
         1
```

Stop the ROS node. Disconnect from the ROS network. Stop the ROS core.

```
stopNode(d, 'RobotController')
rosshutdown
```

```
Shutting down global node /matlab_global_node_84497 with NodeURI http://192.168.203.1:56034/
```

```
stopCore(d)
```

Run Multiple ROS Nodes

Run multiple ROS nodes on a connected ROS device. ROS nodes can be generated using Simulink® models to perform different tasks on the ROS network. These nodes are then deployed on a ROS device and can be run independently of Simulink®.

This example uses two different Simulink models that have been deployed as ROS nodes. See “Generate a Standalone ROS Node from Simulink®” and follow the instructions to generate and deploy a ROS node. Do this twice and name them 'robotcontroller' and 'robotcontroller2'. The 'robotcontroller' node sends velocity commands to a robot to navigate it to a given point. The 'robotcontroller2' node uses the same model, but doubles the linear velocity to drive the robot faster.

Create a connection to a ROS device. Specify the address, user name, and password of your specific ROS device. The device contains information about the ROS device, including the available ROS nodes that can be run using runNode.

```
ipaddress = '192.168.203.129';
d = rosdevice(ipaddress, 'user', 'password')
```

```
d =
rosdevice with properties:

    DeviceAddress: '192.168.203.129'
      Username: 'user'
      ROSFolder: '/opt/ros/indigo'
CatkinWorkspace: '~/catkin_ws'
  AvailableNodes: {0x1 cell}
```

```
d.CatkinWorkspace = '~/catkin_ws_test'
```

```
d =
rosdevice with properties:

    DeviceAddress: '192.168.203.129'
      Username: 'user'
      ROSFolder: '/opt/ros/indigo'
CatkinWorkspace: '~/catkin_ws_test'
  AvailableNodes: {'robotcontroller' 'robotcontroller2'}
```

Run a ROS core. The ROS Core is the master enables you to run ROS nodes on your ROS device. Connect MATLAB® to the ROS master using rosinit. For this example, the port is set to 11311. rosinit can automatically select a port for you without specifying this input.

```
runCore(d)
rosinit(d.DeviceAddress, 11311)
```

```
Initializing global node /matlab_global_node_66434 with NodeURI http://192.168.203.1:59395/
```


Check the available ROS nodes on the connected ROS device. The nodes listed in this example were generated from Simulink® models following the process in the “Generate a Standalone ROS Node from Simulink®” example. Two separate nodes are generated, 'robotcontroller' and 'robotcontroller2', which have the linear velocity set to 1 and 2 in the model respectively.

```
d.AvailableNodes
```

```
ans = 1x2 cell
      {'robotcontroller'}      {'robotcontroller2'}
```


Start up the Robot Simulator using `ExampleHelperSimulinkRobotROS`. This simulator automatically connects to the ROS master on the ROS device. You will use this simulator to run a ROS node and control the robot.

```
sim = ExampleHelperSimulinkRobotROS;
```

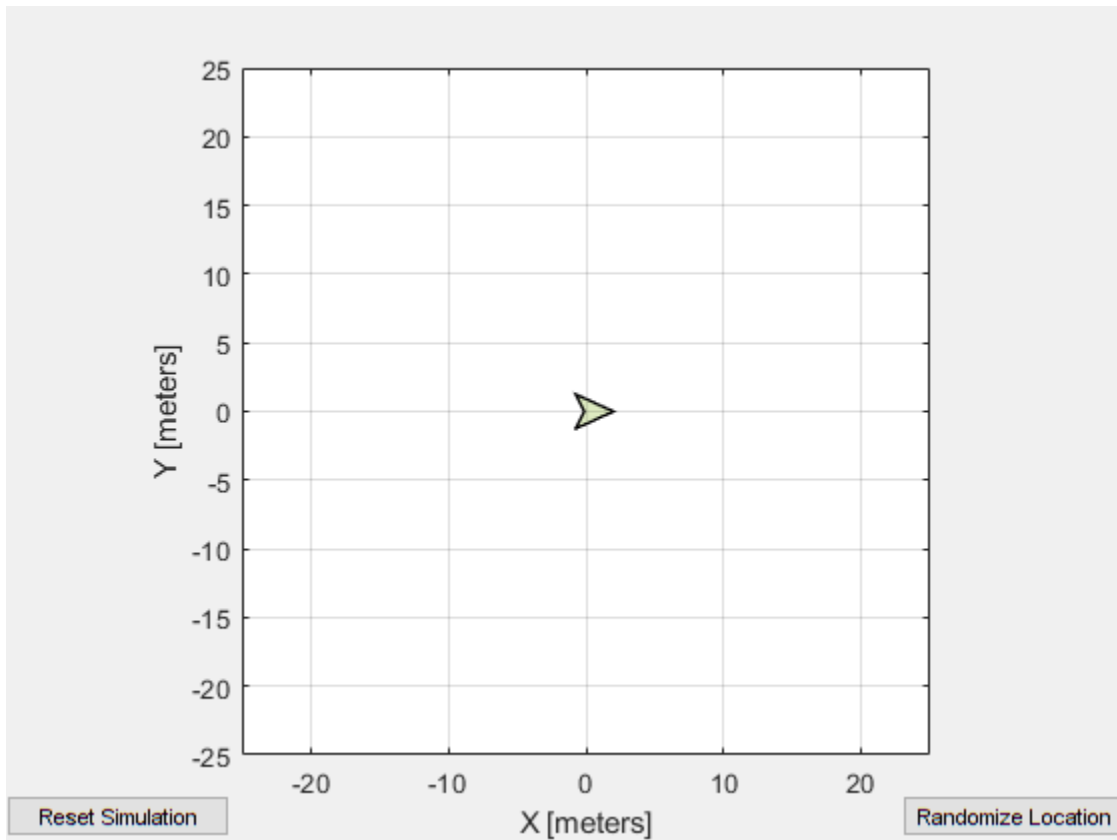


Run a ROS node, specifying the node name. The `'robotcontroller'` node commands the robot to a specific location (`[-10 10]`). Wait to see the robot drive.

```
runNode(d, 'robotcontroller')  
pause(10)
```

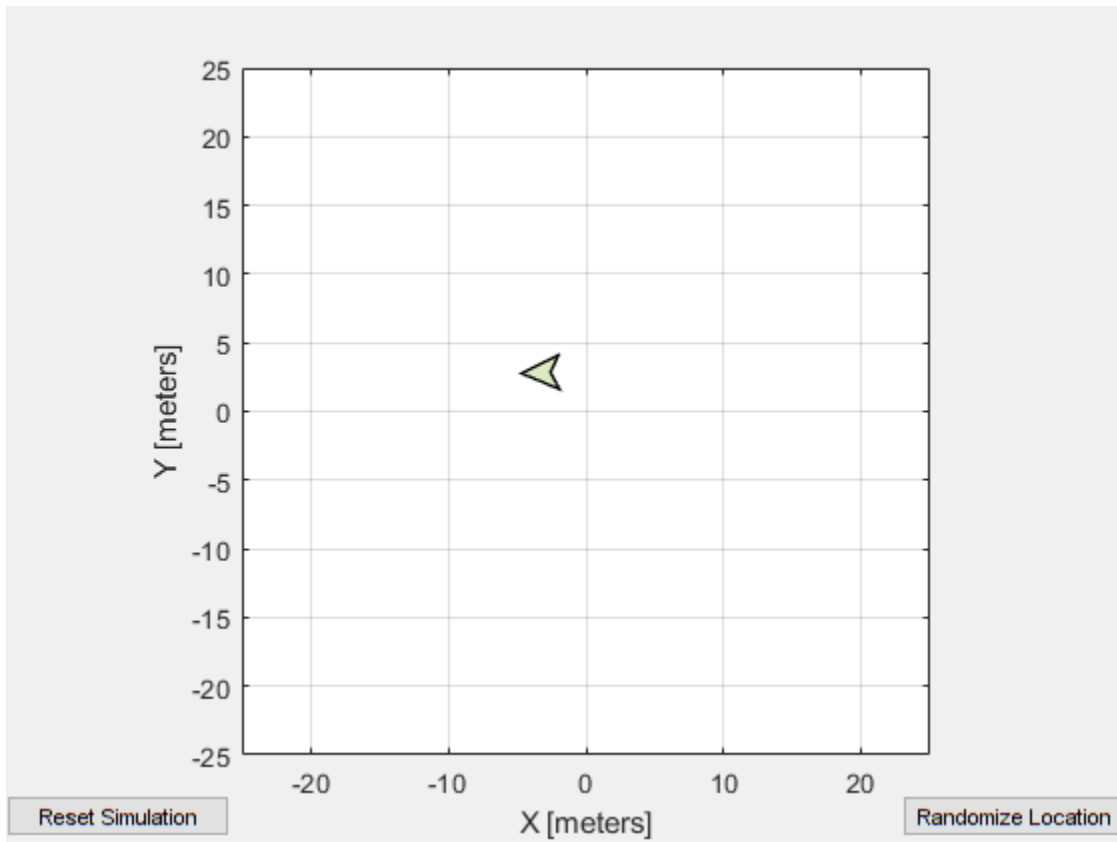Reset the Robot Simulator to reset the robot position. Alternatively, click **Reset Simulation**. Because the node is still running, the robot continues back to the specific location. To stop sending commands, stop the node.


```
resetSimulation(sim.Simulator)  
pause(5)
```

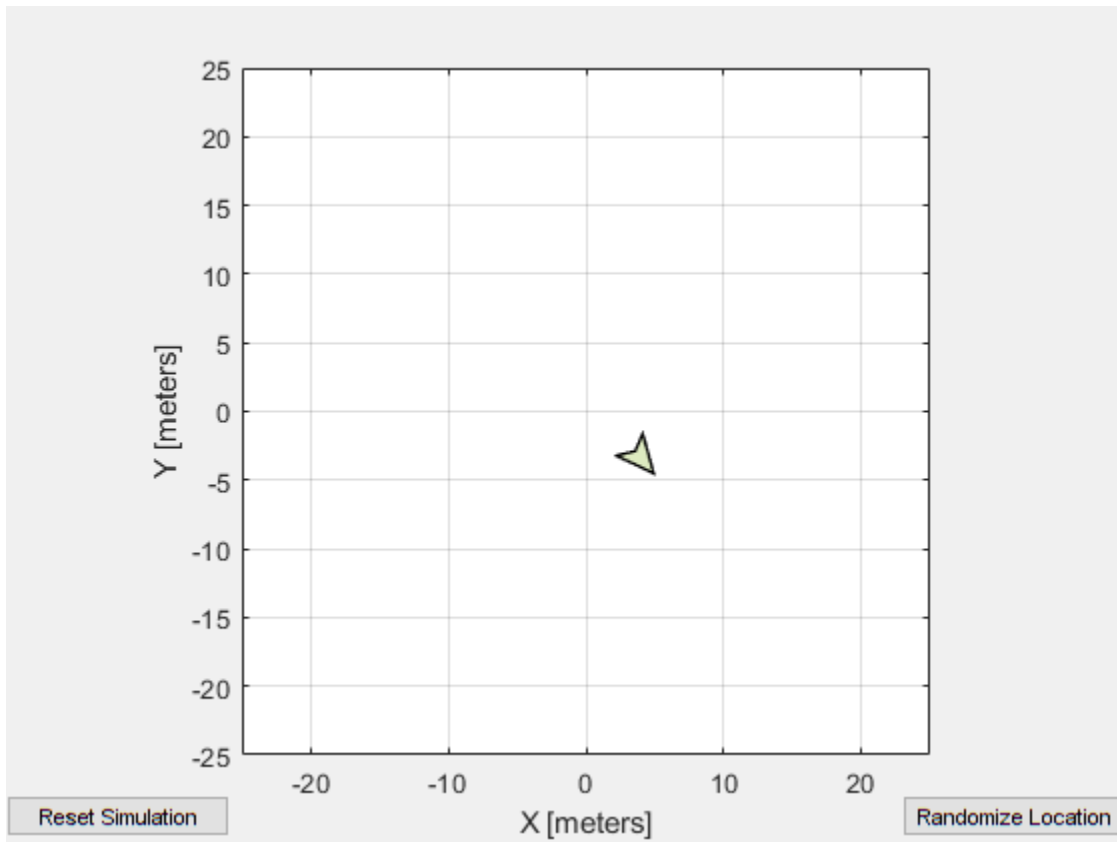

```
stopNode(d, 'robotcontroller')
```

Run the 'robotcontroller2' node. This model drives the robot with twice the linear velocity. Reset the robot position. Wait to see the robot drive. You should see a wider turn due to the increased velocity.

```
runNode(d, 'robotcontroller2')
resetSimulation(sim.Simulator)
pause(10)
```

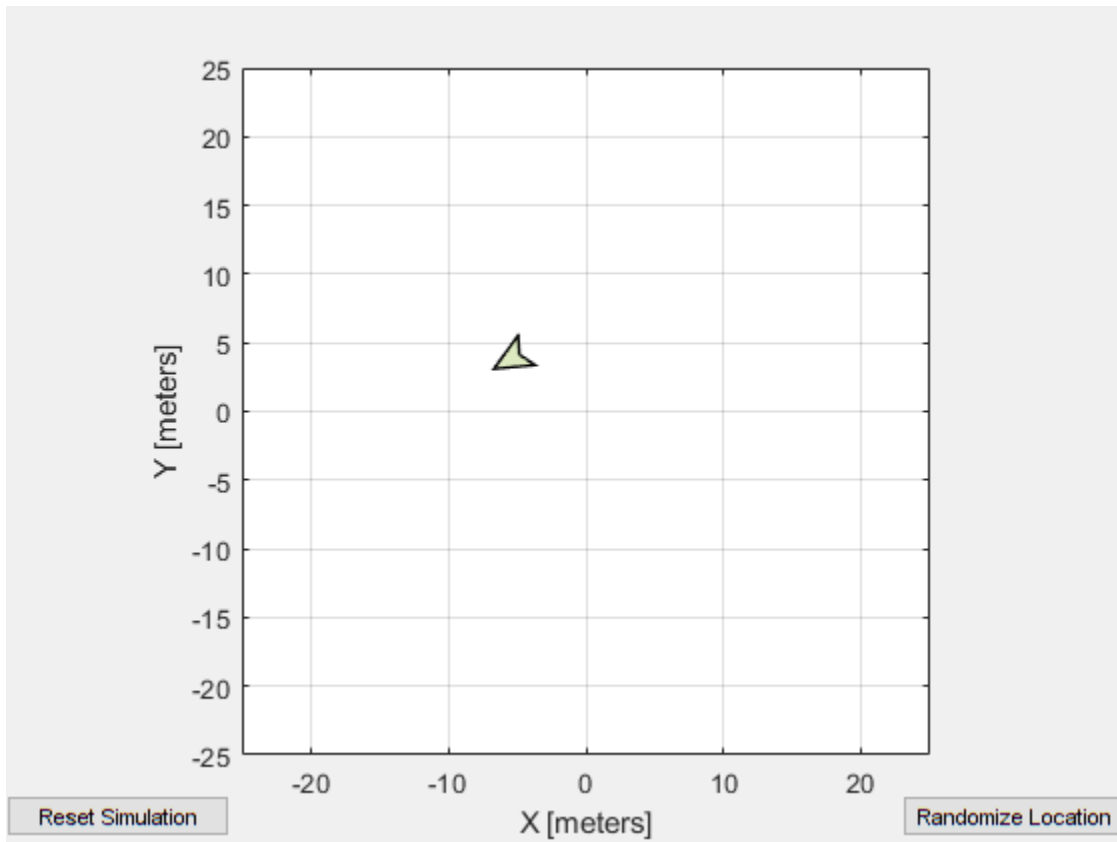

Close the simulator. Stop the ROS node. Disconnect from the ROS network and stop the ROS core.

```
close
stopNode(d, 'robotcontroller2')
rosshutdown
```

```
Shutting down global node /matlab_global_node_66434 with NodeURI http://192.168.203.1:59395/
```

```
stopCore(d)
```

Limitations

- You cannot change the `ROSFolder` property when connected to local host. For local host connections, it will always point to the ROS folder within MATLAB installation.

See Also

`runNode` | `stopNode` | `runCore` | `isNodeRunning`

Topics

“Generate a Standalone ROS Node from Simulink®”

Introduced in R2019b

ros2device

Connect to remote ROS 2 device

Description

The `ros2device` object creates a connection with a ROS 2 device. The ROS 2 device can be the local device or a remote device. The object contains the necessary login information and other parameters of the ROS 2 distribution. Once you have made a connection using `ros2device`, you can run and stop ROS 2 nodes.

You can deploy ROS 2 nodes to a ROS 2 device using Simulink models. For an example, see “Generate a Standalone ROS 2 Node from Simulink®”

You can also deploy ROS 2 nodes generated from MATLAB code.

Note To connect to a ROS 2 device, an SSH server must be installed on the device. To connect to the local host, an SSH server installation on the local device is not required if you specify the `deviceAddress` as `'localhost'`. Alternatively, if you specify the `deviceAddress` as `'127.0.0.1'` or as the host name referring to the local device, then an SSH server must be installed on the local device.

Creation

Syntax

```
device = ros2device(deviceAddress,username,password)
device = ros2device
device = ros2device('localhost')
```

Description

`device = ros2device(deviceAddress,username,password)` creates a `ros2device` object connected to the ROS 2 device at the specified address and with the specified user name and password.

`device = ros2device` creates a `ros2device` object connected to a ROS 2 device using the saved values for `deviceAddress`, `username`, and `password`.

`device = ros2device('localhost')` creates a `ros2device` object connected to the local device.

Properties

DeviceAddress — Host name or IP address of ROS 2 device

character vector

This property is read-only.

Host name or IP address of ROS 2 device, specified as a character vector.

Example: '192.168.1.10'

Example: 'samplehost.foo.com'

UserName — User name used to connect to device

character vector

This property is read-only.

User name used to connect to ROS 2 device, specified as a character vector.

Example: 'user'

R0S2Folder — Location of ROS 2 installation

character vector

Location of the ROS 2 installation, specified as a character vector. If you do not specify a folder, MATLAB tries to determine the correct folder for you. When you deploy a ROS 2 node, set this value from Simulink in the Configuration Parameters dialog box, under **Hardware Implementation**.

Example: '/opt/ros/dashing'

R0S2Workspace — ROS 2 project folder where models are deployed on device

character vector

ROS 2 project folder where models are deployed on device, specified as a character vector. When you deploy a ROS 2 node, set this value from Simulink in the Configuration Parameters dialog box, under **Hardware Implementation**.

Example: '~/ros2_ws_test'

AvailableNodes — Nodes available to run on ROS 2 device

cell array of character vectors

This property is read-only.

Nodes available to run on a ROS 2 device, returned as a cell array of character vectors. Nodes are only listed if they are part of the R0S2Workspace and have been deployed to the device using Simulink.

Example: {'robotcontroller', 'publishernode'}

Object Functions

runNode	Start ROS or ROS 2 node
stopNode	Stop ROS or ROS 2 node
isNodeRunning	Determine if ROS or ROS 2 node is running
system	Execute system command on device
putFile	Copy file to device
getFile	Get file from device
deleteFile	Delete file from device
dir	List folder contents on device
openShell	Open interactive command shell to device

Examples

Run a ROS 2 Node on Remote Device

Connect to a remote device and start a ROS 2 node using a `ros2device` object. Create a `ros2device` object by specifying the address, user name, and password of the remote device.

```
ipaddress = '192.168.203.131';  
device = ros2device(ipaddress, 'user', 'password');  
device.ROS2Folder = '/opt/ros/dashing';  
device.ROS2Workspace = '~/ros2_ws_test';
```

The `ros2device` object also contains information about the available ROS nodes. Check the available ROS 2 nodes on the connected device.

```
device.AvailableNodes
```

Use the `runNode` object function to run a ROS 2 node on the remote device, and then check that if the node is running.

```
runNode(device, 'ros2FeedbackControlExample')  
isNodeRunning(device, 'ros2FeedbackControlExample')
```

Stop the ROS 2 node.

```
stopNode(device, 'ros2FeedbackControlExample')
```

Limitations

- You cannot change the `ROS2Folder` property when connected to local host. For local host connections, it will always point to the ROS 2 folder within MATLAB installation.

See Also

`runNode` | `stopNode` | `isNodeRunning`

Topics

“Generate a Standalone ROS 2 Node from Simulink®”

Introduced in R2021a

ros2svcclient

Connect to ROS 2 service server

Description

Use `ros2svcclient` to create a ROS 2 service client object. This service client uses a connection to send requests to, and receive responses from, a ROS 2 service server. For more information, see “Call and Provide ROS 2 Services”.

Creation

Syntax

```
client = ros2svcclient(node, servicename, servicetype)
```

```
client = ros2svcclient( ____, Name=Value)
```

```
[client, reqmsg] = ros2svcclient( ____ )
```

Description

`client = ros2svcclient(node, servicename, servicetype)` creates a service client of the specified `servicetype` regardless of whether a service server offering `servicename` is available. It attaches the client to the ROS 2 node specified by the `ros2node` object, `node`.

`client = ros2svcclient(____, Name=Value)` sets the rest of the properties on page 2-49 based on the additional options specified by one or more `Name=Value` pair arguments, using the arguments from the previous syntax.

`[client, reqmsg] = ros2svcclient(____)` returns a new service request message in `reqmsg`, using any of the arguments from previous syntaxes. The message type of `reqmsg` is determined by the input service type. The message is initialized with default values. You can also create the request message using `ros2message`.

Properties

ServiceName — Name of the service

string scalar | character vector

This property is read-only.

Name of the service, specified as a string scalar or character vector.

Example: `"/gazebo/get_model_state"`

ServiceType — Type of service

string scalar | character vector

This property is read-only.

Type of service, specified as a string scalar or character vector.

Example: "gazebo_msgs/GetModelState"

History — Mode of storing requests in the queue

"keeplast" (default) | "keepall"

This property is read-only.

Mode of storing requests in the queue, specified as a string or character vector. If the queue fills with requests waiting to be processed, then old requests will be dropped to make room for new. When set to "keeplast", the queue stores the number of requests set by the `Depth` property. Otherwise, when set to "keepall", the queue stores all requests up to the MATLAB resource limits.

Example: "keeplast"

Data Types: char | string

Depth — Size of the request queue

10 (default) | non-negative scalar integer

This property is read-only.

Size of the request queue in number of requests stored in the queue, specified as a non-negative scalar integer. This only applies when `History` is set to "keeplast" or `Durability` is set to "transientlocal".

Example: 42

Data Types: double

Reliability — Delivery guarantee of request

"reliable" (default) | "besteffort"

This property is read-only.

Requirement on delivery guarantee of request, specified as a string or character vector. If "reliable", then delivery is guaranteed, but may retry calling multiple times. If "besteffort", then attempt delivery and do not retry. "reliable" setting is recommended for services.

Note The `Reliability` and `Durability` quality of service settings must be compatible between service servers and clients for a connection to be made.

Example: "reliable"

Data Types: char | string

Durability — Persistence of the requests

"volatile" (default) | "transientlocal"

This property is read-only.

Requirement on persistence of the requests, specified as a string or character vector. If "volatile", then requests do not persist. If "transientlocal", then all recently sent requests persist, up to the number specified by `Depth`. "volatile" setting is recommended for services.

Note The Reliability and Durability quality of service settings must be compatible between service servers and clients for a connection to be made.

Example: "volatile"

Data Types: char | string

Object Functions

ros2message	Create ROS 2 message structures
call	Call ROS or ROS 2 service server and receive a response
isServerAvailable	Determine if ROS or ROS 2 service server is available
waitForServer	Wait for ROS or ROS 2 service server to start

Examples

Call ROS 2 Service Client With a Custom Callback Function

Create a sample ROS 2 network with two nodes.

```
node_1 = ros2node("node_1");
node_2 = ros2node("node_2");
```

Set up a service server and attach it to a ROS 2 node. Specify the callback function `flipstring`, which flips the input string. The callback function is defined at the end of this example.

```
server = ros2svcsrv(node_1, '/test', 'test_msgs/BasicTypes', @flipString);
```

Set up a service client of the same service type and attach it to a different node.

```
client = ros2svcclient(node_2, '/test', 'test_msgs/BasicTypes');
```

Wait for the service client to connect to the server.

```
[connectionStatus, connectionStatustext] = waitForServer(client)
```

```
connectionStatus = logical
    1
```

```
connectionStatustext =
'success'
```

Create a request message based on the client. Assign the string to the corresponding field in the message, `string_value`.

```
request = ros2message(client);
request.string_value = 'hello world';
```

Check whether the service server is available. If it is, send a service request and wait for a response. Specify that the service waits 3 seconds for a response.

```
if(isServerAvailable(client))
    response = call(client, request, 'Timeout', 3);
end
```

The response is a flipped string from the request message which you see in the `string_value` field.

```
response.string_value
```

```
ans =  
'dlrow olleh'
```

If the `call` function above fails, it results in an error. Instead of an error, if you would prefer to react to a call failure using conditionals, return the `status` and `statustext` outputs from the call function. The `status` output indicates if the call succeeded, while `statustext` provides additional information.

```
numCallFailures = 0;  
[response,status,statustext] = call(client,request,"Timeout",3);  
if ~status  
    numCallFailures = numCallFailures + 1;  
    fprintf("Call failure number %d. Error cause: %s\n",numCallFailures,statustext)  
else  
    disp(response.string_value)  
end  
  
dlrow olleh
```

The callback function used to flip the string is defined below.

```
function resp = flipString(req,resp)  
% FLIPSTRING Reverses the order of a string in REQ and returns it in RESP.  
resp.string_value = fliplr(req.string_value);  
end
```

Tips

- ROS 2 service servers cannot communicate errors in callback execution directly to clients. In such situations, the servers only return the default response without any indication of failure. Hence, it is recommended to use try-catch blocks within the callback function, and set specific fields in the response message to communicate the success/failure of the callback execution on the server side.

See Also

[ros2svcservice](#) | [ros2](#)

Topics

“Call and Provide ROS 2 Services”

Introduced in R2021b

ros2svcsrvr

Create ROS 2 service server

Description

Use `ros2svcsrvr` to create a ROS 2 service server that can receive requests from, and send responses to, a ROS 2 service client.

When you create the service server, it registers itself with the ROS 2 network. When you create a service client, it establishes a connection to the server. The connection persists while both client and server exist and can reach each other. To get a list of services, or to get information about a particular service that is available on the current ROS 2 network, use the `ros2` function.

The service has an associated message type that contains a pair of messages: one for the request and one for the response. The service server receives a request, constructs an appropriate response based on a callback function, and returns it to the client. The behavior of the service server is inherently asynchronous because it becomes active only when a service client connects to the ROS 2 network and issues a call. For more information, see “Call and Provide ROS 2 Services”.

Creation

Syntax

```
server = ros2svcsrvr(node, servicename, servicetype, callback)
server = ros2svcsrvr( ____, Name=Value)
```

Description

`server = ros2svcsrvr(node, servicename, servicetype, callback)` creates a service server of the specified `servicetype` available in the ROS 2 network under the name `servicename`. It attaches the server to the ROS 2 node specified by the `ros2node` object, `node`. It also specifies the `callback` function, which is set to the `NewRequestFcn` property. The input arguments `servicename` and `servicetype`, are set to the `ServiceType` and `ServiceName` properties, respectively.

`server = ros2svcsrvr(____, Name=Value)` sets the rest of the properties on page 2-53 based on the additional options specified by one or more `Name=Value` pair arguments, using the arguments from the previous syntax.

Properties

ServiceName — Name of the service

string scalar | character vector

This property is read-only.

Name of the service, specified as a string scalar or character vector.

Example: `"/gazebo/get_model_state"`

ServiceType — Type of service

string scalar | character vector

This property is read-only.

Type of service, specified as a string scalar or character vector.

Example: `"gazebo_msgs/GetModelState"`

NewRequestFcn — Callback property

function handle | cell array

Callback property, specified as a function handle or cell array. In the first element of the cell array, specify either a function handle, string scalar, or character vector representing a function name. In subsequent elements, specify user data.

The service callback function requires at least two input arguments with one output. The first argument, `reqMsg`, is the request message object sent by the service client. The second argument is the default response message object, `defaultRespMsg`. The callback returns a response message, `response`, based on the input request message and sends it back to the service client. Use the default response message as a starting point for constructing the request message. The function header for the callback is:

```
function response = serviceCallback(reqMsg,defaultRespMsg)
```

Specify the `NewRequestFcn` property as:

```
server.NewRequestFcn = @serviceCallback;
```

When setting the callback, you pass additional parameters to the callback function by including both the callback function and the parameters as elements of a cell array. The function header for the callback is:

```
function response = serviceCallback(reqMsg,defaultRespMsg,userData)
```

Specify the `NewRequestFcn` property as:

```
server.NewRequestFcn = {@serviceCallback,userData};
```

History — Mode of storing requests in the queue

"keeplast" (default) | "keepall"

This property is read-only.

Mode of storing requests in the queue, specified as a string or character vector. If the queue fills with requests waiting to be processed, then old requests will be dropped to make room for new. When set to "keeplast", the queue stores the number of requests set by the `Depth` property. Otherwise, when set to "keepall", the queue stores all requests up to the MATLAB resource limits.

Example: `"keeplast"`

Data Types: char | string

Depth — Size of the request queue

10 (default) | non-negative scalar integer

This property is read-only.

Size of the request queue in number of requests stored in the queue, specified as a non-negative scalar integer. This only applies when History is set to "keeplast".

Example: 42

Data Types: double

Reliability – Delivery guarantee of request and response

"reliable" (default) | "besteffort"

This property is read-only.

Requirement on delivery guarantee of request and response, specified as a string or character vector. If "reliable", then delivery is guaranteed, but may retry multiple times. If "besteffort", then attempt delivery and do not retry. "reliable" setting is recommended for services.

Note The Reliability and Durability quality of service settings must be compatible between service servers and clients for a connection to be made.

Example: "reliable"

Data Types: char | string

Durability – Persistence of the client

"volatile" (default) | "transientlocal"

This property is read-only.

Requirement on persistence of the client, specified as a string or character vector. If "volatile", then requests are not required to persist. If "transientlocal", then the server will require clients to persist and receive responses for the number of previous requests specified by Depth. "volatile" setting is recommended to prevent servers from receiving out of date requests in the event of a server restart.

Note The Reliability and Durability quality of service settings must be compatible between service servers and clients for a connection to be made.

Example: "volatile"

Data Types: char | string

Object Functions

ros2message Create ROS 2 message structures

Examples

Call ROS 2 Service Client With a Custom Callback Function

Create a sample ROS 2 network with two nodes.

```
node_1 = ros2node("node_1");
node_2 = ros2node("node_2");
```

Set up a service server and attach it to a ROS 2 node. Specify the callback function `flipstring`, which flips the input string. The callback function is defined at the end of this example.

```
server = ros2svcsrv(node_1, '/test', 'test_msgs/BasicTypes', @flipString);
```

Set up a service client of the same service type and attach it to a different node.

```
client = ros2svcclient(node_2, '/test', 'test_msgs/BasicTypes');
```

Wait for the service client to connect to the server.

```
[connectionStatus, connectionStatustext] = waitForServer(client)
```

```
connectionStatus = logical
    1
```

```
connectionStatustext =
'success'
```

Create a request message based on the client. Assign the string to the corresponding field in the message, `string_value`.

```
request = ros2message(client);
request.string_value = 'hello world';
```

Check whether the service server is available. If it is, send a service request and wait for a response. Specify that the service waits 3 seconds for a response.

```
if(isServerAvailable(client))
    response = call(client, request, 'Timeout', 3);
end
```

The response is a flipped string from the request message which you see in the `string_value` field.

```
response.string_value
```

```
ans =
'dlrow olleh'
```

If the `call` function above fails, it results in an error. Instead of an error, if you would prefer to react to a call failure using conditionals, return the `status` and `statustext` outputs from the call function. The `status` output indicates if the call succeeded, while `statustext` provides additional information.

```
numCallFailures = 0;
[response, status, statustext] = call(client, request, "Timeout", 3);
if ~status
    numCallFailures = numCallFailures + 1;
    fprintf("Call failure number %d. Error cause: %s\n", numCallFailures, statustext)
else
    disp(response.string_value)
end
```

```
dlrow olleh
```

The callback function used to flip the string is defined below.

```
function resp = flipString(req,resp)
% FLIPSTRING Reverses the order of a string in REQ and returns it in RESP.
resp.string_value = fliplr(req.string_value);
end
```

Tips

- ROS 2 service servers cannot communicate errors in callback execution directly to clients. In such situations, the servers only return the default response without any indication of failure. Hence, it is recommended to use try-catch blocks within the callback function, and set specific fields in the response message to communicate the success/failure of the callback execution on the server side.

See Also

[ros2svcclient](#) | [ros2](#)

Topics

“Call and Provide ROS 2 Services”

Introduced in R2021b

roactionclient

Create ROS action client

Description

Use the `roactionclient` to connect to an action server using a `SimpleActionClient` object and request the execution of action goals. You can get feedback on the execution process and cancel the goal at any time. The `SimpleActionClient` object encapsulates a simple action client and enables you to track a single goal at a time.

Creation

Syntax

```
client = roactionclient(actionname)
client = roactionclient(actionname,actiontype)
[client,goalMsg] = roactionclient( ___ )
[ ___ ] = roactionclient( ___ , "DataFormat", "struct")

client = ros.SimpleActionClient(node,actionname)
client = ros.SimpleActionClient(node,actionname,actiontype)
client = ros.SimpleActionClient( ___ , "DataFormat", "struct")
```

Description

`client = roactionclient(actionname)` creates a client for the specified ROS `ActionName`. The client determines the action type automatically. If the action is not available, this function displays an error.

Use `roactionclient` to connect to an action server and request the execution of action goals. You can get feedback on the execution progress and cancel the goal at any time.

`client = roactionclient(actionname,actiontype)` creates an action client with the specified name and type (`ActionType`). If the action is not available, or the name and type do not match, the function displays an error.

`[client,goalMsg] = roactionclient(___)` returns a goal message to send the action client created using any of the arguments from the previous syntaxes. The `Goal` message is initialized with default values for that message.

If the `ActionFcn`, `FeedbackFcn`, and `ResultFcn` callbacks are defined, they are called when the goal is processing on the action server. All callbacks associated with a previously sent goal are disabled, but the previous goal is not canceled.

`[___] = roactionclient(___ , "DataFormat", "struct")` uses message structures instead of objects. For more information, see "ROS Message Structures" on page 2-62.

`client = ros.SimpleActionClient(node,actionname)` creates a client for the specified ROS action name. The `node` is the `Node` object that is connected to the ROS network. The client determines the action type automatically. If the action is not available, the function displays an error.

`client = ros.SimpleActionClient(node,actionname,actiontype)` creates an action client with the specified name and type. You can get the type of an action using `rosaction type actionname`.

`client = ros.SimpleActionClient(____, "DataFormat", "struct")` uses message structures instead of objects. For more information, see “ROS Message Structures” on page 2-62.

Properties

ActionName — ROS action name

character vector

ROS action name, returned as a character vector. The action name must match one of the topics that `rosaction("list")` outputs.

ActionType — Action type for a ROS action

string scalar | character vector

Action type for a ROS action, returned as a string scalar or character vector. You can get the action type of an action using `rosaction type <action_name>`. For more details, see `rosaction`.

IsServerConnected — Indicates if client is connected to ROS action server

false (default) | true

Indicator of whether the client is connected to a ROS action server, returned as `false` or `true`. Use `waitForServer` to wait until the server is connected when setting up an action client.

Goal — Tracked goal

ROS message

Tracked goal, returned as a ROS message. This message is the last goal message this client sent. The goal message depends on the action type.

GoalState — Goal state

character vector

Goal state, returned as one of the following:

- 'pending' — Goal was received, but has not yet been accepted or rejected.
- 'active' — Goal was accepted and is running on the server.
- 'succeeded' — Goal executed successfully.
- 'preempted' — An action client canceled the goal before it finished executing.
- 'aborted' — The goal was aborted before it finished executing. The action server typically aborts a goal.
- 'rejected' — The goal was not accepted after being in the 'pending' state. The action server typically triggers this status.
- 'recalled' — A client canceled the goal while it was in the 'pending' state.

- 'lost' — An internal error occurred in the action client.

ActivationFcn — Activation function

@(~) disp('Goal is active.')(default) | function handle

Activation function, returned as a function handle. This function executes when `GoalState` is set to 'active'. By default, the function displays 'Goal is active.'. You can set the function to [] to have the action client do nothing upon activation.

FeedbackFcn — Feedback function

@(~,msg) disp(['Feedback: ', showdetails(msg)])(default) | function handle

Feedback function, returned as a function handle. This function executes when a new feedback message is received from the action server. By default, the function displays the details of the message. You can set the function to [] to have the action client not give any feedback.

ResultFcn — Result function

@(~,msg,s,~) disp(['Result with state ' s ': ', showdetails(msg)])(default) | function handle

Result function, returned as a function handle. This function executes when the server finishes executing the goal and returns a result state and message. By default, the function displays the state and details of the message. You can set the function to [] to have the action client do nothing once the goal is completed.

DataFormat — Message format

"object" (default) | "struct"

Message format, specified as "object" or "struct". You must set this property on creation using the name-value input. For more information, see “ROS Message Structures” on page 2-62.

Object Functions

cancelGoal	Cancel last goal sent by client
cancelAllGoals	Cancel all goals on action server
rosmessage	Create ROS messages
sendGoal	Send goal message to action server
sendGoalAndWait	Send goal message and wait for result
waitForServer	Wait for action server to start

Examples

Setup a ROS Action Client and Execute an Action

This example shows how to create a ROS action client and execute the action. Action types must be set up beforehand with an action server running.

You must have set up the '/fibonacci' action type. To run this action server, use the following command on the ROS system:

```
roslaunch actionlib_tutorials fibonacci_server
```

Connect to a ROS network. You must be connected to a ROS network to gather information about what actions are available. Replace `ipaddress` with your network address.

```
ipaddress = '192.168.203.133';
rosinit(ipaddress,11311)
```

Initializing global node /matlab_global_node_81947 with NodeURI http://192.168.203.1:54283/

List actions available on the network. The only action set up on this network is the '/fibonacci' action.

```
rosaction list
```

```
/fibonacci
```

Create an action client by specifying the action name. Use structures for ROS messages.

```
[actClient,goalMsg] = rosactionclient('/fibonacci','DataFormat','struct');
```

Wait for the action client to connect to the server.

```
waitForServer(actClient);
```

The fibonacci action will calculate the fibonacci sequence for a given order specified in the goal message. The goal message was returned when creating the action client and can be modified to send goals to the ROS action server. Set the order to an int32 value of 8.

```
goalMsg.Order = int32(8);
```

Send the goal and wait for its completion. Specify a timeout of 10 seconds to complete the action.

```
[resultMsg,resultState] = sendGoalAndWait(actClient,goalMsg,10);
```

```
rosShowDetails(resultMsg)
```

```
ans =  
,
```

```
  MessageType : actionlib_tutorials/FibonacciResult  
  Sequence    : [0, 1, 1, 2, 3, 5, 8, 13, 21]'
```

Disconnect from the ROS network.

```
rosshutdown
```

Shutting down global node /matlab_global_node_81947 with NodeURI http://192.168.203.1:54283/

Send and Cancel ROS Action Goals

This example shows how to send and cancel goals for ROS actions. Action types must be setup beforehand with an action server running.

You must have set up the '/fibonacci' action type. To run this action server, use the following command on the ROS system:

```
roslaunch actionlib_tutorials fibonacci_server
```

First, set up a ROS action client. Then, send a goal message with modified parameters. Finally, cancel your goal and all goals on the action server.

Connect to a ROS network with a specified IP address. Create a ROS action client connected to the ROS network using `roactionclient`. Specify the action name. Wait for the client to be connected to the server.

```
rosinit('192.168.203.133',11311)
```

```
Initializing global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

```
[actClient,goalMsg] = roactionclient('/fibonacci','DataFormat','struct');  
waitForServer(actClient);
```

Send a goal message with modified parameters. Wait for the goal to finish executing.

```
goalMsg.Order = int32(4);  
[resultMsg,resultState] = sendGoalAndWait(actClient,goalMsg)
```

```
resultMsg = struct with fields:  
  MessageType: 'actionlib_tutorials/FibonacciResult'  
  Sequence: [0 1 1 2 3]
```

```
resultState =  
'succeeded'
```

```
rosShowDetails(resultMsg)
```

```
ans =  
,  
    MessageType : actionlib_tutorials/FibonacciResult  
    Sequence     : [0, 1, 1, 2, 3]'
```

Send a new goal message without waiting.

```
goalMsg.Order = int32(5);  
sendGoal(actClient,goalMsg)
```

Cancel the goal on the ROS action client, `actClient`.

```
cancelGoal(actClient)
```

Cancel all the goals on the action server that `actClient` is connected to.

```
cancelAllGoals(actClient)
```

Delete the action client.

```
delete(actClient)
```

Disconnect from the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_18287 with NodeURI http://192.168.203.1:55284/
```

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see "Improve Performance of ROS Using Message Structures".

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for `struct` messages.
- `ActionType` argument must be specified.
- Callback functions must be assigned at the time of `rosactionclient` or `ros.SimpleActionClient` object creation, and cannot be changed during run-time.
- For `ros.SimpleActionClient`, node input argument must be empty.
- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

`sendGoal` | `cancelGoal` | `waitForServer` | `rosmessage` | `rosaction`

Topics

"ROS Actions Overview"

"Move a Turtlebot Robot Using ROS Actions"

External Websites

ROS Actions

Introduced in R2019b

rosvbagreader

Access rosvbag log file information

Description

The rosvbagreader object is an index of the messages within a rosvbag. You can use it to extract message data from a rosvbag, select messages based on specific criteria, or create a time series of the message properties.

Creation

Syntax

```
bagreader = rosvbagreader(filepath)
```

Description

`bagreader = rosvbagreader(filepath)` creates an indexable rosvbagreader object, `bagreader`, that contains all the messages from the rosvbag log file at the input path `filepath`. The `filepath` input argument sets the `FilePath` property. To access the data, you can call `readMessages` or `timeseries` to extract relevant data.

Properties

FilePath — Absolute path to rosvbag file

character vector

This property is read-only.

Absolute path to the rosvbag file, specified as a character vector.

Data Types: `char`

StartTime — Timestamp of first message in selection

scalar

This property is read-only.

Timestamp of the first message in the selection, specified as a scalar in seconds.

Data Types: `double`

EndTime — Timestamp of last message in selection

scalar

This property is read-only.

Timestamp of the last message in the selection, specified as a scalar in seconds.

Data Types: `double`

NumMessages — Number of messages in selection

scalar

This property is read-only.

Number of messages in the selection, specified as a scalar. When you first load a rosbag, this property contains the number of messages in the rosbag. Once you select a subset of messages with `select`, the property shows the number of messages in this subset.

Data Types: `double`

AvailableTopics — Table of topics in selection

table

This property is read-only.

Table of topics in the selection, specified as a table. Each row in the table lists one topic, the number of messages for this topic, the message type, and the definition of the type.

Data Types: `table`

AvailableFrames — List of available coordinate frames

cell array of character vectors

This property is read-only.

List of available coordinate frames, specified as a cell array of character vectors. Use `canTransform` to check whether specific transformations between frames are available, or `getTransform` to query a transformation.

Data Types: `cell`

MessageList — List of messages in selection

table

This property is read-only.

List of messages in the selection, specified as a table. Each row in the table lists one message.

Data Types: `table`

Object Functions

<code>select</code>	Select subset of messages in rosbag
<code>readMessages</code>	Read messages from rosbag
<code>timeseries</code>	Create time series object for selected message properties
<code>canTransform</code>	Verify if transformation is available
<code>getTransform</code>	Retrieve transformation between two coordinate frames

Examples

Create rosbag Selection Using rosbagreader Object

Load a rosbag log file and parse out specific messages based on the selected criteria.


```
ts = timeseries(bagMsgs2,...
    'Pose.Pose.Position.X', ...
    'Twist.Twist.Angular.Y')

timeseries

Timeseries contains duplicate times.

Common Properties:
    Name: '/odom Properties'
    Time: [99x1 double]
    TimeInfo: tsdata.timemetadata
    Data: [99x2 double]
    DataInfo: tsdata.datametadata
```

Get Transformations from rosbag File Using rosbagreader Object

Get transformations from rosbag (.bag) files by loading the rosbag and checking the available frames. From these frames, use `getTransform` to query the transformation between two coordinate frames.

Load the rosbag.

```
bagMsgs = rosbagreader("ros_turtlesim.bag")
```

```
bagMsgs =
  rosbagreader with properties:
      FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex81142742\ros_turt
      StartTime: 1.5040e+09
      EndTime: 1.5040e+09
      NumMessages: 6089
      AvailableTopics: [6x3 table]
      AvailableFrames: {2x1 cell}
      MessageList: [6089x4 table]
```

Get a list of available frames.

```
frames = bagMsgs.AvailableFrames
```

```
frames = 2x1 cell
    {'turtle1'}
    {'world' }
```

Get the latest transformation between two coordinate frames.

```
tf = getTransform(bagMsgs, 'world', frames{1})
```

```
tf =
  ROS TransformStamped message with properties:
      MessageType: 'geometry_msgs/TransformStamped'
      Header: [1x1 Header]
      Transform: [1x1 Transform]
```

```
ChildFrameId: 'turtle1'
```

Use `showdetails` to show the contents of the message

Check for a transformation available at a specific time and retrieve the transformation. Use `canTransform` to check if the transformation is available. Specify the time using `rostime`.

```
tfTime = rostime(bagMsgs.StartTime + 1);  
if (canTransform(bagMsgs, 'world', frames{1}, tfTime))  
    tf2 = getTransform(bagMsgs, 'world', frames{1}, tfTime);  
end
```

See Also

`select` | `readMessages` | `timeseries` | `canTransform` | `getTransform`

Introduced in R2021b

roswriter

Create and write logs to roswriter log file

Description

Use the roswriter object to create a roswriter log file and write logs to the bag file. Each log contains a topic, its corresponding timestamp, and a ROS message.

Creation

Syntax

```
roswriter = roswriter(filepath)
roswriter = roswriter( ___,Name,Value)
```

Description

`roswriter = roswriter(filepath)` creates a roswriter log file in the location specified by `path` and returns the corresponding roswriter object.

If you do not specify the name of the bag file in the `filepath`, the object assigns the current timestamp as the file name. If the folders you specify in `filepath` are not present in the directory, the object creates them and places the bag file accordingly. The `filepath` input argument sets the `FilePath` property.

`roswriter = roswriter(___,Name,Value)` sets the `Compression` and `ChunkSize` properties using name-value arguments. Use this syntax with the input argument in the previous syntax.

Properties

FilePath — Path to roswriter file

character vector

This property is read-only.

Path to the roswriter file, specified as a character vector.

Data Types: `char`

StartTime — Timestamp of first message written to roswriter file

scalar

This property is read-only.

Timestamp of the first message written to the roswriter file, specified as a scalar in seconds.

Data Types: `double`

EndTime — Timestamp of last message written to bag file

scalar

This property is read-only.

Timestamp of the last message written to the bag file, specified as a scalar in seconds.

Data Types: double

NumMessages — Number of messages written to bag file

scalar

This property is read-only.

Number of messages written to the bag file, specified as a scalar.

Data Types: double

Compression — Compression format of message chunks`"uncompressed" (default) | "bz2" | "lz4"`

Compression format of the message chunks, specified as "bz2", "lz4", or "uncompressed".

Example: "Compression", "lz4"

Data Types: char | string

ChunkSize — Size of each message chunk`786432 (default) | nonzero positive integer`

Size of each message chunk, specified as a nonzero positive integer in bytes. The value specify the buffer within the bag file object. Reducing this value results in more writes to disk.

Example: "ChunkSize", 819200

Data Types: double

FileSize — Current bag file size

nonnegative integer

This property is read-only.

Current bag file size, specified as a nonnegative integer in bytes.

Data Types: double

Object Functions

write Write logs to rosbag log file

delete Remove rosbag writer object from memory

Examples**Write Log to rosbag File Using rosbagwriter Object**

Retrieve all the information from the rosbag log file.

```
rosbag('info', 'path_record.bag')
```

```

Path:      C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\11\tp67325fbf\ros-ex73035957\path_record.bag
Version:   2.0
Duration:  10.5s
Start:     Jul 05 2021 08:09:52.86 (1625486992.86)
End:       Jul 05 2021 08:10:03.40 (1625487003.40)
Size:      13.3 KB
Messages:  102
Types:     geometry_msgs/Point [4a842b65f413084dc2b10fb484ea7f17]
Topics:    /circle 51 msgs : geometry_msgs/Point
           /line  51 msgs : geometry_msgs/Point

```

Create a `rosvbagreader` object of all the messages in the rosvbag log file.

```
reader = rosvbagreader('path_record.bag');
```

Select all the messages related to the topic `'/circle'` .

```
bagSelCircle = select(reader, 'Topic', '/circle');
```

Retrieve the list of timestamps from the topic.

```
timeStamps = bagSelCircle.MessageList.Time;
```

Retrieve the messages in the selection as a cell array.

```
messages = readMessages(bagSelCircle);
```

Create a `rosvbagwriter` object to write the messages to a new rosvbag file.

```
circleWriter = rosvbagwriter('circular_path_record.bag');
```

Write all the messages related to the topic `'/circle'` to the new rosvbag file.

```
write(circleWriter, '/circle', timeStamps, messages);
```

Remove the `rosvbagwriter` object from memory and clear the associated object.

```
delete(circleWriter)
clear circleWriter
```

Retrieve all the information from the new rosvbag log file.

```
rosvbag('info', 'circular_path_record.bag')
```

```

Path:      C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\11\tp67325fbf\ros-ex73035957\circular_path_record.bag
Version:   2.0
Duration:  10.4s
Start:     Jul 05 2021 08:09:52.86 (1625486992.86)
End:       Jul 05 2021 08:10:03.29 (1625487003.29)
Size:      8.8 KB
Messages:  51
Types:     geometry_msgs/Point [4a842b65f413084dc2b10fb484ea7f17]
Topics:    /circle 51 msgs : geometry_msgs/Point

```

Load the new rosvbag log file.


```
readerCircle = rosvbagreader('circular_path_record.bag');
```

Create a time series for the coordinates.

```
tsCircle = timeseries(readerCircle, 'X', 'Y');
```

Plot the coordinates.

```
plot(tsCircle.Data(:,1), tsCircle.Data(:,2))  
axis equal
```

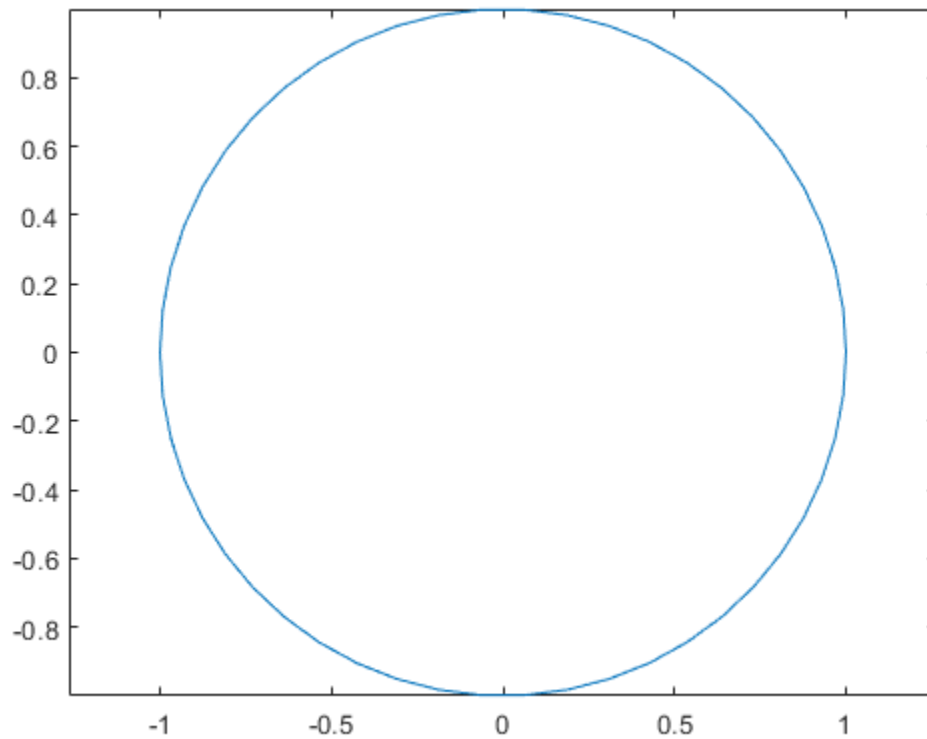

Create rosbag File Using rosbagwriter Object

Create a `rosbagwriter` object and a rosbag file in the current working directory. Specify the compression format of the message chunks and the size of each message chunk.

```
bagwriter = rosbagwriter("bagfile.bag", ...  
    "Compression", "lz4", ...  
    "ChunkSize", 1500)
```

```
bagwriter =  
    rosbagwriter with properties:
```

```
    FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex26181333\bagfile.bag'  
    StartTime: 0  
    EndTime: 0  
    NumMessages: 0  
    Compression: 'lz4'  
    ChunkSize: 1500
```

```
FileSize: 4117
```

Start node and connect to ROS master.

```
rosinit
```

```
Launching ROS Core...
..Done in 2.1716 seconds.
Initializing ROS master on http://172.30.135.140:53773.
Initializing global node /matlab_global_node_01395 with NodeURI http://bat6340win64:58142/
```

Write a single log to the rosbag file.

```
timeStamp = rostime("now");
rosMessage = rosmesssage("nav_msgs/Odometry");
write(bagwriter, "/odom", timeStamp, rosMessage);
bagwriter
```

```
bagwriter =
```

```
  rosbagwriter with properties:
```

```
    FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex26181333\bagfile.bag'
    StartTime: 1.6305e+09
    EndTime: 1.6305e+09
    NumMessages: 1
    Compression: 'lz4'
    ChunkSize: 1500
    FileSize: 4172
```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_01395 with NodeURI http://bat6340win64:58142/
Shutting down ROS master on http://172.30.135.140:53773.
```

Remove rosbag writer object from memory and clear the associated object.

```
delete(bagwriter)
clear bagwriter
```

Create a rosbagreader object and load all the messages in the rosbag log file. Verify the recently written log.

```
bagreader = rosbagreader('bagfile.bag')
```

```
bagreader =
```

```
  rosbagreader with properties:
```

```
    FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex26181333\bagfile'
    StartTime: 1.6305e+09
    EndTime: 1.6305e+09
    NumMessages: 1
    AvailableTopics: [1x3 table]
    AvailableFrames: {0x1 cell}
    MessageList: [1x4 table]
```

bagreader.AvailableTopics

ans=1x3 table

	NumMessages	MessageType	MessageDefinition
/odom	1	nav_msgs/Odometry	{' uint32 Seq...'} }

See Also

Objects

rosbagreader

Functions

write | delete

Introduced in R2021b

ParameterTree

Access ROS parameter server

Description

A `ParameterTree` object communicates with the ROS parameter server. The ROS parameter server can store strings, integers, doubles, Booleans, and cell arrays. The parameters are accessible globally over the ROS network. You can use these parameters to store static data such as configuration parameters.

To directly set, get, or access ROS parameters without creating a `ParameterTree` object, see `rosparam`.

The following ROS data types are supported as values of parameters. For each ROS data type, the corresponding MATLAB data type is also listed.

ROS Data Type	MATLAB Data Type
32-bit integer	<code>int32</code>
boolean	<code>logical</code>
double	<code>double</code>
string	character vector (<code>char</code>)
list	cell array (<code>cell</code>)
dictionary	structure (<code>struct</code>)

Creation

Syntax

```
ptree = rosparam
```

```
ptree = ros.ParameterTree(node)
```

Description

`ptree = rosparam` creates a parameter tree object, `ptree`. After `ptree` is created, the connection to the parameter server remains persistent until the object is deleted or the ROS master becomes unavailable.

`ptree = ros.ParameterTree(node)` returns a `ParameterTree` object to communicate with the ROS parameter server. The parameter tree attaches to the ROS node, `node`. To connect to the global node, specify `node` as `[]`.

Properties

AvailableParameters — List of parameter names on the server

cell array

This property is read-only.

List of parameter names on the server, specified as a cell array.

Example: {'/myParam'; '/robotSize'; '/hostname'}

Data Types: cell

Object Functions

get	Get ROS parameter value
has	Check if ROS parameter name exists
search	Search ROS network for parameter names
set	Set value of ROS parameter or add new parameter
del	Delete a ROS parameter

Examples

Create ROS ParameterTree Object and Modify Parameters

Start the ROS master and create a ROS node.

```
master = ros.Core;
```

```
Launching ROS Core...  
..Done in 2.1425 seconds.
```

```
node = ros.Node('/test1');
```

Create the parameter tree object.

```
ptree = ros.ParameterTree(node);
```

Set multiple parameters.

```
set(ptree, 'DoubleParam', 1.0)  
set(ptree, 'CharParam', 'test')  
set(ptree, 'CellParam', {'test'}, {1,2});
```

View the available parameters.

```
parameters = ptree.AvailableParameters
```

```
parameters = 3x1 cell  
  {'/CellParam' }  
  {'/CharParam' }  
  {'/DoubleParam'}
```

Get a parameter value.

```
data = get(ptree, 'CellParam')
```

```
data=1x2 cell array
    {1x1 cell}    {1x2 cell}
```

Search for a parameter name.

```
search(ptree, 'char')

ans = 1x1 cell array
    {'/CharParam'}
```

Delete the parameter tree and ROS node. Shut down the ROS master.

```
clear('ptree', 'node')
clear('master')
```

Set A Dictionary Of Parameter Values

Use structures to specify a dictionary of ROS parameters under a specific namespace.

Connect to a ROS network.

```
rosinit

Launching ROS Core...
...Done in 4.0269 seconds.
Initializing ROS master on http://192.168.88.1:57165.
Initializing global node /matlab_global_node_09024 with NodeURI http://ah-avijayar:60223/
```

Create a dictionary of parameter values. This dictionary contains the information relevant to an image. Display the structure to verify values.

```
image = imread('peppers.png');

pval.ImageWidth = size(image,1);
pval.ImageHeight = size(image,2);
pval.ImageTitle = 'peppers.png';
disp(pval)

    ImageWidth: 384
    ImageHeight: 512
    ImageTitle: 'peppers.png'
```

Set the dictionary of values using the desired namespace.

```
rosparam('set', 'ImageParam', pval)
```

Get the parameters using the namespace. Verify the values.

```
pval2 = rosparam('get', 'ImageParam')

pval2 = struct with fields:
    ImageHeight: 512
    ImageTitle: 'peppers.png'
    ImageWidth: 384
```

Shut down ROS network.

roshutdown

```
Shutting down global node /matlab_global_node_09024 with NodeURI http://ah-avijayar:60223/  
Shutting down ROS master on http://192.168.88.1:57165.
```

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Code generation is supported for global node but not for Node since a node cannot create another node in code generation.

See Also

rosparam | get | has | search | set | del

Topics

“Access the ROS Parameter Server”

Introduced in R2019b

rospublisher

Publish message on a topic

Description

Use `rospublisher` to create a ROS publisher for sending messages via a ROS network. To create ROS messages, use `rosmessage`. Send these messages via the ROS publisher with the `send` function.

The `Publisher` object created by the function represents a publisher on the ROS network. The object publishes a specific message type on a given topic. When the `Publisher` object publishes a message to the topic, all subscribers to the topic receive this message. The same topic can have multiple publishers and subscribers.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 2-83.

The publisher gets the topic message type from the topic list on the ROS master. When the MATLAB global node publishes messages on that topic, ROS nodes that subscribe to that topic receive those messages. If the topic is not on the ROS master topic list, this function displays an error message. If the ROS master topic list already contains a matching topic, the ROS master adds the MATLAB global node to the list of publishers for that topic. To see a list of available topic names, at the MATLAB command prompt, type `rostopic list`.

You can create a `Publisher` object using the `rospublisher` function, or by calling `ros.Publisher`:

- `rospublisher` only works with the global node using `rosinit`. It does not require a node object handle as an argument.
- `ros.Publisher` works with additional nodes that are created using `ros.Node`. It requires a node object handle as the first argument.

Creation

Syntax

```
pub = rospublisher(topicname)
pub = rospublisher(topicname,msgtype)
pub = rospublisher( ___,Name,Value)
[pub,msg] = rospublisher( ___ )
[pub,msg] = rospublisher( ___, "DataFormat", "struct")

pub = ros.Publisher(node,topicname)
```

```
pub = ros.Publisher(node,topicname,type)
pub = ros.Publisher( ____, "IsLatching",value)
[pub,msg] = ros.Publisher( ____, "DataFormat", "struct")
```

Description

`pub = rospublisher(topicname)` creates a publisher for a specific topic name and sets the `TopicName` property. The topic must already exist on the ROS master topic list with an established `MessageType`.

`pub = rospublisher(topicname,msgtype)` creates a publisher for a topic and adds that topic to the ROS master topic list. The inputs are set to the `TopicName` and `MessageType` properties of the publisher. If the topic already exists and `msgtype` differs from the topic type on the ROS master topic list, the function displays an error message.

`pub = rospublisher(____, Name, Value)` provides additional options specified by one or more `Name, Value` pair arguments using any of the arguments from previous syntaxes. `Name` is the property name and `Value` is the corresponding value.

`[pub,msg] = rospublisher(____,)` returns a message, `msg`, that you can send with the publisher, `pub`. The message is initialized with default values. You can also get the ROS message using the `rosmessage` function.

`[pub,msg] = rospublisher(____, "DataFormat", "struct")` uses message structures instead of objects. For more information, see "ROS Message Structures" on page 2-83

`pub = ros.Publisher(node,topicname)` creates a publisher for a topic with name, `topicname`. `node` is the `ros.Node` object handle that this publisher attaches to. If `node` is specified as `[]`, the publisher tries to attach to the global node.

`pub = ros.Publisher(node,topicname,type)` creates a publisher with specified message type, `type`. If the topic already exists, MATLAB checks the message type and displays an error if the input type differs. If the ROS master topic list already contains a matching topic, the ROS master adds the MATLAB global node to the list of publishers for that topic.

`pub = ros.Publisher(____, "IsLatching", value)` specifies if the publisher is latching with a Boolean, `value`. If a publisher is latching, it saves the last sent message and sends it to any new subscribers. By default, `IsLatching` is enabled.

`[pub,msg] = ros.Publisher(____, "DataFormat", "struct")` uses message structures instead of objects. For more information, see "ROS Message Structures" on page 2-83

Properties

TopicName — Name of the published topic

string scalar | character vector

Name of the published topic, specified as a string scalar or character vector. If the topic does not exist, the object creates the topic using its associated message type.

This property is set at creating by the `TopicName` argument. The value cannot be changed after creation.

Example: `"/chatter"`

Data Types: `char`

MessageType — Message type of published messages

`string scalar` | `character vector`

Message type of published messages, specified as a string scalar or character vector. This message type remains associated with the topic and must be used for new messages published.

This property is set at creation by the `MessageType` argument. The value cannot be changed after creation.

Example: `"std_msgs/String"`

Data Types: `char`

IsLatching — Indicator of whether publisher is latching

`true` (default) | `false`

Indicator of whether publisher is latching, specified as `true` or `false`. A publisher that is latching saves the last sent message and resends it to any new subscribers.

This property is set at creating by the `IsLatching` argument. The value cannot be changed after creation.

Data Types: `logical`

NumSubscribers — Number of subscribers

`integer`

Number of subscribers to the published topic, specified as an integer.

This property is set at creating by the `NumSubscribers` argument. The value cannot be changed after creation.

Data Types: `double`

DataFormat — Message format

`"object"` (default) | `"struct"`

Message format, specified as `"object"` or `"struct"`. You must set this property on creation using the name-value input. For more information, see “ROS Message Structures” on page 2-83.

Object Functions

`send` Publish ROS message to topic
`rosmessage` Create ROS messages

Examples

Create ROS Publisher and Send Data

Start ROS master.

```
rosinit
```

```
Launching ROS Core...
...Done in 3.2519 seconds.
```

```
Initializing ROS master on http://172.30.135.140:50635.
Initializing global node /matlab_global_node_65514 with NodeURI http://bat6340win64:49385/

Create publisher for the /chatter topic with the std_msgs/String message type. Set the
"DataFormat" name-value argument to structure ROS messages.

chatpub = rospublisher("/chatter", "std_msgs/String", "DataFormat", "struct");

Create a message to send. Specify the Data property with a character vector.

msg = rosmessage(chatpub);
msg.Data = 'test phrase';

Send the message via the publisher.

send(chatpub, msg);

Shut down the ROS network.

roshutdown

Shutting down global node /matlab_global_node_65514 with NodeURI http://bat6340win64:49385/
Shutting down ROS master on http://172.30.135.140:50635.
```

Create ROS Publisher with rospublisher and View Properties

Create a ROS publisher and view the associated properties for the rospublisher object. Add a subscriber and view the updated properties.

Start ROS master.

```
rosinit

Launching ROS Core...
..Done in 2.1549 seconds.
Initializing ROS master on http://172.30.135.140:54680.
Initializing global node /matlab_global_node_57407 with NodeURI http://bat6340win64:57560/
```

Create a publisher and view its properties.

```
pub = rospublisher('/chatter', 'std_msgs/String', 'DataFormat', 'struct');

topic = pub.TopicName

topic =
'/chatter'

subCount = pub.NumSubscribers

subCount = 0
```

Subscribe to the publisher topic and view the changes in the NumSubscribers property.

```
sub = rossubscriber('/chatter', 'DataFormat', 'struct');
pause(1)

subCount = pub.NumSubscribers
```



```
subCount = 1
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_57407 with NodeURI http://bat6340win64:57560/
Shutting down ROS master on http://172.30.135.140:54680.
```

Use ROS Publisher Object

Create a Publisher object using the class constructor.

Start the ROS core.

```
core = ros.Core;
```

```
Launching ROS Core...
..Done in 2.6691 seconds.
```

Create a ROS node, which connects to the master.

```
node = ros.Node('/test1');
```

Create a publisher and send string data. The publisher attaches to the node object in the first argument.

```
pub = ros.Publisher(node, '/robotname', 'std_msgs/String', 'DataFormat', 'struct');
msg = rosmessage(pub);
msg.Data = 'robot1';
send(pub, msg);
```

Clear the publisher and ROS node. Shut down the ROS master.

```
clear('pub', 'node')
clear('master')
```

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see “Improve Performance of ROS Using Message Structures”.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for struct messages.
- MessageType argument must be specified.
- Introspection syntax `rospublisher(topicname, message)` is not supported.

See Also

Functions

send | rosmessage

Topics

“Exchange Data with ROS Publishers and Subscribers”

Introduced in R2019b

ros2bag

Open and parse ros2bag log file

Description

The `ros2bag` object contains all the messages from the ROS 2 bag log file.

Creation

Syntax

```
bag = ros2bag(folderpath)
```

Description

`bag = ros2bag(folderpath)` creates a `ros2bag` object, `bag`, that contains all the messages from the ROS 2 bag log file located at path `folderPath`. The `folderpath` input sets the value of the `FilePath` property.

ROS 2 bag files are used for storing ROS 2 message data. They are used primarily to log messages transmitted over a ROS 2 network. You can use these bag files for offline analysis, visualization, and storage.

Note If the ROS 2 bag log file contains custom messages, create custom messages for MATLAB using `ros2genmsg` function before creating the `ros2bag` object.

Properties

FilePath — Path to ROS 2 bag files

character vector

This property is read-only.

Path to the ROS 2 bag files, specified as a character vector.

Data Types: `char`

StartTime — Timestamp of first message

scalar

This property is read-only.

Timestamp of the first message, specified as a scalar in seconds.

Data Types: `uint64`

EndTime — Timestamp of last message

scalar

This property is read-only.

Timestamp of the last message, specified as a scalar in seconds.

Data Types: uint64

NumMessages — Number of messages

scalar

This property is read-only.

Number of messages, specified as a scalar.

Data Types: double

AvailableTopics — Table of available topics

table

This property is read-only.

Table of available topics, specified as a table. Each row in the table lists one topic, the number of messages for this topic, the message type, and the message definition.

Data Types: table

MessageList — List of messages

table

This property is read-only.

List of messages, specified as a table. Each row in the table lists one message.

Data Types: table

Object Functions

`readMessages` Read messages from ros2bag object
`select` Select subset of messages in ros2bag

Examples

Read Messages from ROS 2 Bag Log File

Extract the zip file that contains the ROS 2 bag log file and specify the full path to the log folder.

```
unzip('ros2_netwrk_bag.zip');  
folderPath = fullfile(pwd, 'ros2_netwrk_bag');
```

Create a ros2bag object that contains all messages in the log file.

```
bag = ros2bag(folderPath);
```

Get information on the contents of the ros2bag object.

```
bag2info = ros2("bag", "info", folderPath)
```

```
bag2info = struct with fields:  
    Path: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\11\tp67325fbf\ros-ex96596996\ros2_netwrk_b'
```

```
Version: '1'  
StorageId: 'sqlite3'  
Duration: 207.9020  
  Start: [1x1 struct]  
  End: [1x1 struct]  
  Size: 16839538  
Messages: 166867  
  Types: [4x1 struct]  
  Topics: [4x1 struct]
```

Get all the messages in the `ros2bag` object.

```
msgs = readMessages(bag);
```

Select a subset of the messages, filtered by topic.

```
bagSel = select(bag, "Topic", "/odom");
```

Get the messages in the selection.

```
msgsFiltered = readMessages(bagSel);
```

See Also

Functions

`readMessages` | `select`

Introduced in R2021a

ros2publisher

Publish messages on a topic

Description

Use the `ros2publisher` object to publish messages on a topic. When messages are published on that topic, ROS 2 nodes that subscribe to that topic receive those messages directly.

Creation

Syntax

```
pub = ros2publisher(node, topic)
pub = ros2publisher(node, topic, type)
pub = ros2publisher( ____, Name, Value)
[pub, msg] = ros2publisher( ____ )
```

Description

`pub = ros2publisher(node, topic)` creates a publisher, `pub`, for a topic with name `topic` that already exists on the ROS 2 network. `node` is the `ros2node` object handle to which the publisher should attach. The publisher gets the topic message type from the network topic list.

Note The topic must be on the network topic list.

`pub = ros2publisher(node, topic, type)` creates a publisher for a topic and adds that topic to the network topic list. If the topic list already contains a matching topic, `pub` will be added to the list of publishers for that topic.

`pub = ros2publisher(____, Name, Value)` specifies additional options using one or more name-value pair arguments. Specify name-value pair arguments after all other input arguments.

`[pub, msg] = ros2publisher(____)` returns a message, `msg`, that you can send with the publisher, `pub`. The message is initialized with default values. You can also get the ROS message using the `ros2message` function.

Input Arguments

node — ROS 2 node

node structure

A `ros2node` object on the network.

topic — Name of the published topic

string scalar | character vector

Name of the published topic, specified as a string scalar or character vector. If the topic does not exist, the object creates the topic using its associated message type.

This property is set at creating by the `TopicName` argument. The value cannot be changed after creation.

Example: `"/chatter"`

Data Types: `char`

type — Message type of published messages

`string scalar | character vector`

Message type of published messages, specified as a string scalar or character vector. This message type remains associated with the topic and must be used for new messages published.

This property is set at creation by the `MessageType` argument. The value cannot be changed after creation.

Example: `"std_msgs/String"`

Data Types: `char`

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

History — Mode of storing messages in the queue

`"keeplast" (default) | "keepall"`

Determines the mode of storing messages in the queue. The queued messages will be sent to late-joining subscribers. If the queue fills with messages waiting to be processed, then old messages will be dropped to make room for new. If set to `"keeplast"`, the queue stores the number of messages set by the `Depth` property. If set to `"keepall"`, the queue stores all messages up to the resource limits of MATLAB.

Data Types: `double`

Depth — Size of the message queue

`positive integer`

Number of messages stored in the message queue when `History` is set to `"keeplast"`.

Example: `42`

Data Types: `double`

Reliability — Delivery guarantee of messages

`"reliable" (default) | "besteffort"`

Affects the guarantee of message delivery. If `"reliable"`, then delivery is guaranteed, but may retry multiple times. If `"besteffort"`, then delivery is attempt, but retried.

Example: `"reliable"`

Data Types: `char | string`

Durability — Persistence of messages`"volatile" (default) | "transientlocal"`

Affects persistence of messages in publishers, which allows late-joining subscribers to receive the number of old messages specified by `Depth`. If `"volatile"`, then messages do not persist. If `"transientlocal"`, then publisher will persist most recent messages.

Example: `"volatile"`

Data Types: `char | string`

Properties**TopicName — Name of the published topic**`string scalar | character vector`

Name of the published topic, specified as a string scalar or character vector. If the topic does not exist, the object creates the topic using its associated message type.

This property is set at creating by the `TopicName` argument. The value cannot be changed after creation.

Example: `"/chatter"`

Data Types: `char`

MessageType — Message type of published messages`string scalar | character vector`

Message type of published messages, specified as a string scalar or character vector. This message type remains associated with the topic and must be used for new messages published.

This property is set at creation by the `MessageType` argument. The value cannot be changed after creation.

Example: `"std_msgs/String"`

Data Types: `char`

History — Message queue mode`"keeplast" (default) | "keepall"`

This property is read-only.

Determines the mode of storing messages in the queue. The queued messages will be sent to late-joining subscribers. If the queue fills with messages waiting to be processed, then old messages will be dropped to make room for new. When set to `"keeplast"`, the queue stores the number of messages set by the `Depth` property. Otherwise, when set to `"keepall"`, the queue stores all messages up to the resource limits of MATLAB.

Example: `"keeplast"`

Data Types: `char | string`

Depth — Size of the message queue`positive integer`

This property is read-only.

Number of messages stored in the message queue when History is set to "keeplast".

Example: 42

Data Types: double

Reliability – Delivery guarantee of messages

"reliable" (default) | "besteffort"

This property is read-only.

Affects the guarantee of message delivery. If "reliable", then delivery is guaranteed, but may retry multiple times. If "besteffort", then delivery is attempt, but retried.

Example: "reliable"

Data Types: char | string

Durability – Persistence of messages

"volatile" (default) | "transientlocal"

This property is read-only.

Affects persistence of messages in publishers, which allows late-joining subscribers to receive the number of old messages specified by Depth. If "volatile", then messages do not persist. If "transientlocal", then publisher will persist most recent messages.

Example: "volatile"

Data Types: char | string

Object Functions

ros2message	Create ROS 2 message structures
send	Publish ROS 2 message to topic

Examples

Create an Empty ROS 2 Message

Create a ROS 2 node.

```
node = ros2node("/node_1");
```

Create publisher and message.

```
chatPub = ros2publisher(node, "/chatter", "std_msgs/String")
```

```
chatPub =
  ros2publisher with properties:
    TopicName: '/chatter'
    MessageType: 'std_msgs/String'
    History: 'keeplast'
    Depth: 10
    Reliability: 'reliable'
    Durability: 'volatile'
```

```
msg = ros2message(chatPub)

msg = struct with fields:
  MessageType: 'std_msgs/String'
  data: ''
```

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- `MessageType` argument must be specified.
- `ros2publisher(__)` does not return a message, `msg`, that you can send with the publisher, `pub`. You can get the ROS message using the `ros2message` function.

See Also

[ros2subscriber](#) | [ros2message](#) | [send](#)

Topics

“Manage Quality of Service Policies in ROS 2”

Introduced in R2019b

ros2subscriber

Subscribe to messages on a topic

Description

Use the `ros2subscriber` to receive messages on a topic. When ROS 2 nodes publish messages on that topic, MATLAB will receive those message through this subscriber.

Creation

Syntax

```
sub = ros2subscriber(node,topic)
sub = ros2subscriber(node,topic,type)
sub = ros2subscriber(node,topic,callback)
sub = ros2subscriber(node,topic,type,callback)
sub = ros2subscriber( ___,Name,Value)
```

Description

`sub = ros2subscriber(node,topic)` creates a subscriber, `sub`, for a topic with name `topic` that already exists on the ROS 2 network. `node` is the `ros2node` object to which this subscriber attaches. The subscriber gets the topic message type from the network topic list.

Note The topic must be on the network topic list.

`sub = ros2subscriber(node,topic,type)` creates a subscriber for a topic and adds that topic to the network topic list. If the topic list already contains a matching topic, `sub` will be added to the list of subscribers for that topic. The `type` must be the same as the topic. Use this syntax to avoid errors when it is possible for the subscriber to subscribe to a topic before a topic has been added to the network.

`sub = ros2subscriber(node,topic,callback)` specifies a callback function, `callback`, and optional data, to run when the subscriber object handle receives a topic message. Use this syntax if action needs to be taken on every message, while not blocking code execution. `callback` can be a single function handle or a cell array. The first element of the cell array needs to be a function handle or a string containing the name of a function. The remaining elements of the cell array can be arbitrary user data that will be passed to the callback function.

Note The subscriber callback function uses a single input argument, the received message object, `msg`. The function header for the callback is as follows:

```
function subCallback(src, msg)
```

You pass additional parameters to the callback function by including both the callback function and the parameters as elements of a cell array when setting the callback.

`sub = ros2subscriber(node, topic, type, callback)` specifies a callback function `callback`, and subscribes to a topic that has the specified name `topic` and message type `type`.

`sub = ros2subscriber(____, Name, Value)` specifies additional options using one or more name-value pair arguments. Specify name-value pair arguments after all other input arguments.

Input Arguments

node — ROS 2 node

`ros2node` structure

A `ros2node` object on the network.

topic — Name of the published topic

string scalar | char array

Name of the published topic, specified as a string scalar or character vector. If the topic does not exist, the object creates the topic based on the associated message type.

Example: `"/chatter"`

type — Subscribed message type

string scalar | char array

This property is read-only.

The message type of subscribed messages.

Example: `"std_msgs/String"`

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, . . . , NameN, ValueN`.

History — Mode of storing messages in the queue

`"keeplast"` (default) | `"keepall"`

Determines the mode of storing messages in the queue. If the queue fills with messages waiting to be processed, then old messages will be dropped to make room for new. If set to `"keeplast"`, the queue stores the number of messages set by the `Depth` property. If set to `"keepall"`, the queue stores all messages up to the MATLAB resource limits.

Depth — Size of the message queue

non-negative scalar integer (default)

Number of messages stored in the message queue when `History` is set to `"keeplast"`.

Example: 42

Data Types: double

Reliability — Delivery guarantee of messages

`"reliable"` (default) | `"besteffort"`

Requirement on the guarantee of message delivery. If `"reliable"`, then delivery is guaranteed, but may retry multiple times. If `"besteffort"`, then attempt delivery and do not retry.

Example: "reliable"

Data Types: char | string

Durability — Persistence of messages

"volatile" (default) | "transientlocal"

Requirement on the persistence of messages in connected publishers, which allows late-joining subscribers to receive the number of old messages specified by `Depth`. If "volatile", then message persistence is not required and no messages are requested when the subscriber joins the network. If "transientlocal", then the subscriber will require publishers to persist messages, and will request the number of messages specified by `Depth`.

Example: "volatile"

Data Types: char | string

Properties

TopicName — Name of the published topic

string scalar | character vector

Name of the published topic, specified as a string scalar or character vector. If the topic does not exist, the object creates the topic based on the associated message type.

Example: "/chatter"

Data Types: char

MessageType — Subscribed message type

string scalar | character vector

This property is read-only.

The message type of subscribed messages.

Example: "std_msgs/String"

Data Types: char | string

LatestMessage — Latest received message

Message object handle

This property is read-only.

The most recently received ROS 2 message, specified as a Message object handle, received.

NewMessageFcn — Subscriber callback function

function handle

This property is read-only.

Callback function for subscriber callbacks.

Note The subscriber callback function uses a single input argument, the received message object, `msg`. The function header for the callback is as follows:

`function` subCallback(msg)

You pass additional parameters to the callback function by including both the callback function and the parameters as elements of a cell array when setting the callback.

History — Message queue mode

"keeplast" (default) | "keepall"

This property is read-only.

Determines the mode of storing messages in the queue. If the queue fills with messages waiting to be processed, then old messages will be dropped to make room for new. When set to "keeplast", the queue stores the number of messages set by the Depth property. Otherwise, when set to "keepall", the queue stores all messages up to the MATLAB resource limits.

Example: "keeplast"

Data Types: char | string

Depth — Size of the message queue

non-negative scalar integer

This property is read-only.

Number of messages stored in the message queue when History is set to "keeplast".

Example: 42

Data Types: double

Reliability — Delivery guarantee of messages

"reliable" (default) | "besteffort"

This property is read-only.

Requirement on the guarantee of message delivery. If "reliable", then delivery is guaranteed, but may retry multiple times. If "besteffort", then attempt delivery and do not retry.

Example: "reliable"

Data Types: char | string

Durability — Persistence of messages

"volatile" (default) | "transientlocal"

This property is read-only.

Requirement on the persistence of messages in connected publishers, which allows late-joining subscribers to receive the number of old messages specified by Depth. If "volatile", then message persistence is not required and no messages are requested when the subscriber joins the network. If "transientlocal", then the subscriber will require publishers to persist messages, and will request the number of messages specified by Depth.

Example: "volatile"

Data Types: char | string

Object Functions

receive Wait for new message
 ros2message Create ROS 2 message structures


Examples

Exchange Data with ROS 2 Publishers and Subscribers

The primary mechanism for ROS 2 nodes to exchange data is to send and receive *messages*. Messages are transmitted on a *topic* and each topic has a unique name in the ROS 2 network. If a node wants to share information, it must use a *publisher* to send data to a topic. A node that wants to receive that information must use a *subscriber* for that same topic. Besides its unique name, each topic also has a *message type*, which determines the type of messages that are allowed to be transmitted in the specific topic.

This publisher-subscriber communication has the following characteristics:

- Topics are used for many-to-many communication. Multiple publishers can send messages to the same topic and multiple subscribers can receive them.
- Publisher and subscribers are decoupled through topics and can be created and destroyed in any order. A message can be published to a topic even if there are no active subscribers.

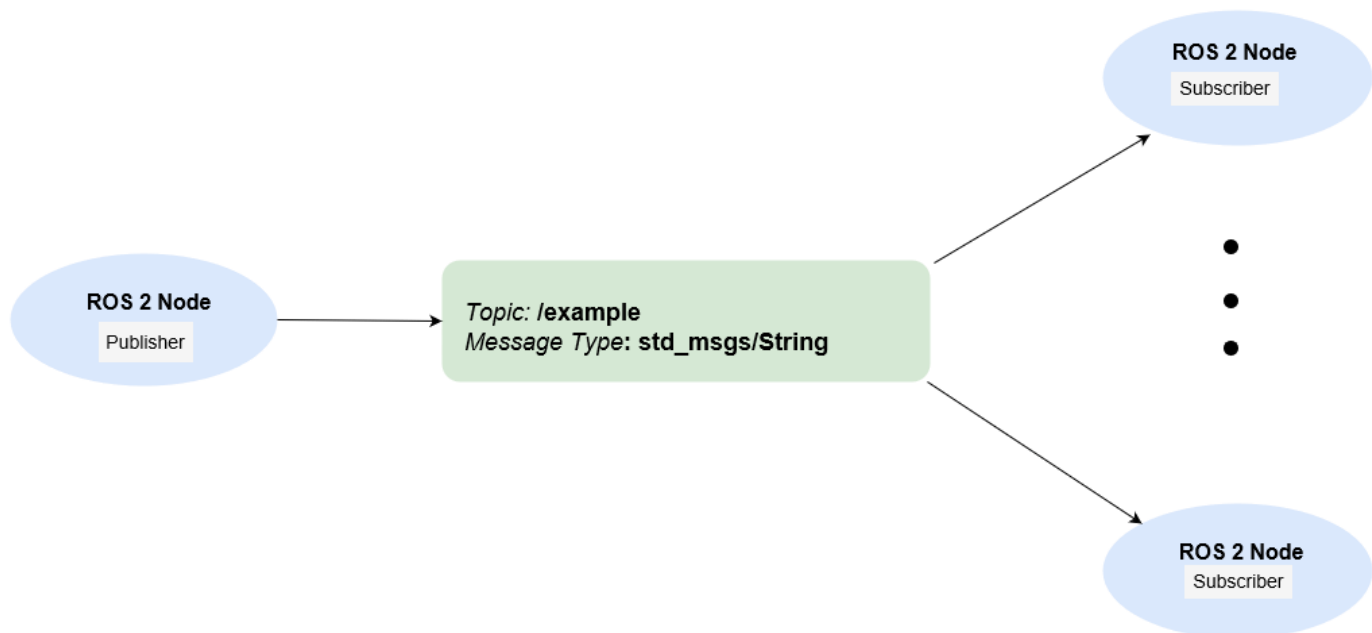

This example shows how to publish and subscribe to topics in a ROS 2 network. It also shows how to:

- Wait until a new message is received, or
- Use callbacks to process new messages in the background

Prerequisites: “Get Started with ROS 2”, “Connect to a ROS 2 Network”

Subscribe and Wait for Messages

Create a sample ROS 2 network with several publishers and subscribers.

```
exampleHelperROS2CreateSampleNetwork
```

Use `ros2 topic list` to see which topics are available.

```
ros2 topic list
```

```
/parameter_events
```

Assume you want to subscribe to the `/scan` topic. Use `ros2subscriber` to subscribe to the `/scan` topic. Specify the name of the node with the subscriber. If the topic already exists in the ROS 2 network, `ros2subscriber` detects its message type automatically, so you do not need to specify it.

```
detectNode = ros2node("/detection");
pause(2)
laserSub = ros2subscriber(detectNode, "/scan");
pause(2)
```

Use `receive` to wait for a new message. Specify a timeout of 10 seconds. The output `scanData` contains the received message data. `status` indicates whether a message was received successfully and `statustext` provides additional information about the `status`.

```
[scanData,status,statustext] = receive(laserSub,10);
```

You can now remove the subscriber `laserSub` and the node associated to it.

```
clear laserSub
clear detectNode
```

Subscribe Using Callback Functions

Instead of using `receive` to get data, you can specify a function to be called when a new message is received. This allows other MATLAB code to execute while the subscriber is waiting for new messages. Callbacks are essential if you want to use multiple subscribers.

Subscribe to the `/pose` topic, using the callback function `exampleHelperROS2PoseCallback`, which takes a received message as the input. One way of sharing data between your main workspace and the callback function is to use global variables. Define two global variables `pos` and `orient`.

```
controlNode = ros2node("/base_station");
poseSub = ros2subscriber(controlNode, "/pose", @exampleHelperROS2PoseCallback);
global pos
global orient
```

The global variables `pos` and `orient` are assigned in the `exampleHelperROS2PoseCallback` function when new message data is received on the `/pose` topic.

```
function exampleHelperROS2PoseCallback(message)
    % Declare global variables to store position and orientation
    global pos
    global orient

    % Extract position and orientation from the ROS message and assign the
    % data to the global variables.
    pos = [message.linear.x message.linear.y message.linear.z];
```



```

    orient = [message.angular.x message.angular.y message.angular.z];
end

```

Wait a moment for the network to publish another /pose message. Display the updated values.

```

pause(3)
disp(pos)

    -0.0178    0.0285    -0.0029

disp(orient)

    -0.0464    -0.0324    0.0222

```

If you type in `pos` and `orient` a few times in the command line you can see that the values are continuously updated.

Stop the pose subscriber by clearing the subscriber variable

```

clear poseSub
clear controlNode

```

Note: There are other ways to extract information from callback functions besides using globals. For example, you can pass a handle object as additional argument to the callback function. See the “Callback Definition” documentation for more information about defining callback functions.

Publish Messages

Create a publisher that sends ROS 2 string messages to the /chatter topic.

```

chatterPub = ros2publisher(node_1, "/chatter", "std_msgs/String");

```

Create and populate a ROS 2 message to send to the /chatter topic.

```

chatterMsg = ros2message(chatterPub);
chatterMsg.data = 'hello world';

```

Use `ros2 topic list` to verify that the /chatter topic is available in the ROS 2 network.

```

ros2 topic list

/chatter
/parameter_events
/pose
/scan

```

Define a subscriber for the /chatter topic. `exampleHelperROS2ChatterCallback` is called when a new message is received, and displays the string content in the message.

```

chatterSub = ros2subscriber(node_2, "/chatter", @exampleHelperROS2ChatterCallback)

```

```

chatterSub =
  ros2subscriber with properties:

    TopicName: '/chatter'
    LatestMessage: []
    MessageType: 'std_msgs/String'
    NewMessageFcn: @exampleHelperROS2ChatterCallback
    History: 'keeplast'

```

```
Depth: 10
Reliability: 'reliable'
Durability: 'volatile'
```

Publish a message to the `/chatter` topic. Observe that the string is displayed by the subscriber callback.

```
send(chatterPub, chatterMsg)
pause(3)
```

```
ans =
'hello world'
```

The `exampleHelperROS2ChatterCallback` function was called when the subscriber received the string message.

Disconnect From ROS 2 Network

Remove the sample nodes, publishers and subscribers from the ROS 2 network. Also clear the global variables `pos` and `orient`

```
clear global pos orient
clear
```

Next Steps

- “Work with Basic ROS 2 Messages”
- “ROS 2 Custom Message Support”

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- `MessageType` argument must be specified.
- Callback functions must be assigned at the time of `ros2subscriber` object creation, and cannot be changed during run-time.

See Also

`ros2publisher` | `ros2node`

Topics

“Manage Quality of Service Policies in ROS 2”
“ROS Custom Message Support”

Introduced in R2019b

rosrate

Execute loop at fixed frequency

Description

The `rosrate` object uses the `rateControl` superclass to inherit most of its properties and methods. The main difference is that `rateControl` uses the ROS node as a source for time information. Therefore, it can use the ROS simulation or wall clock time (see the `IsSimulationTime` property).

If `rosinit` creates a ROS master in MATLAB, the global node uses wall clock time.

The performance of the `rosrate` object and the ability to maintain the `DesiredRate` value depends on the publishing of the clock information in ROS.

Tip The scheduling resolution of your operating system and the level of other system activity can affect rate execution accuracy. As a result, accurate rate timing is limited to 100 Hz for execution of MATLAB code. To improve performance and execution speeds, use code generation.

Creation

Syntax

```
rate = rosrate(desiredRate)
rate = ros.Rate(node,desiredRate)
```

Description

`rate = rosrate(desiredRate)` creates a `Rate` object, which enables you to execute a loop at a fixed frequency, `DesiredRate`. The time source is linked to the time source of the global ROS node, which requires you to connect MATLAB to a ROS network using `rosinit`.

`rate = ros.Rate(node,desiredRate)` creates a `Rate` object that operates loops at a fixed rate based on the time source linked to the specified ROS node, `node`.

Properties

DesiredRate — Desired execution rate

scalar

Desired execution rate of loop, specified as a scalar in hertz. When using `waitfor`, the loop operates every `DesiredRate` seconds, unless the loop takes longer. It then begins the next loop based on the specified `OverRunAction`.

DesiredPeriod — Desired time period between executions

scalar

Desired time period between executions, specified as a scalar in seconds. This property is equal to the inverse of `DesiredRate`.

TotalElapsedTime — Elapsed time since construction or reset

scalar

Elapsed time since construction or reset, specified as a scalar in seconds.

LastPeriod — Elapsed time between last two calls to `waitfor`

NaN (default) | scalar


Elapsed time between last two calls to `waitfor`, specified as a scalar. By default, `LastPeriod` is set to NaN until `waitfor` is called for the first time. After the first call, `LastPeriod` equals `TotalElapsedTime`.

OverrunAction — Method for handling overruns

'slip' (default) | 'drop'

Method for handling overruns, specified as one of these character vectors:

- 'drop' — waits until the next time interval equal to a multiple of `DesiredPeriod`
- 'slip' — immediately executes the loop again

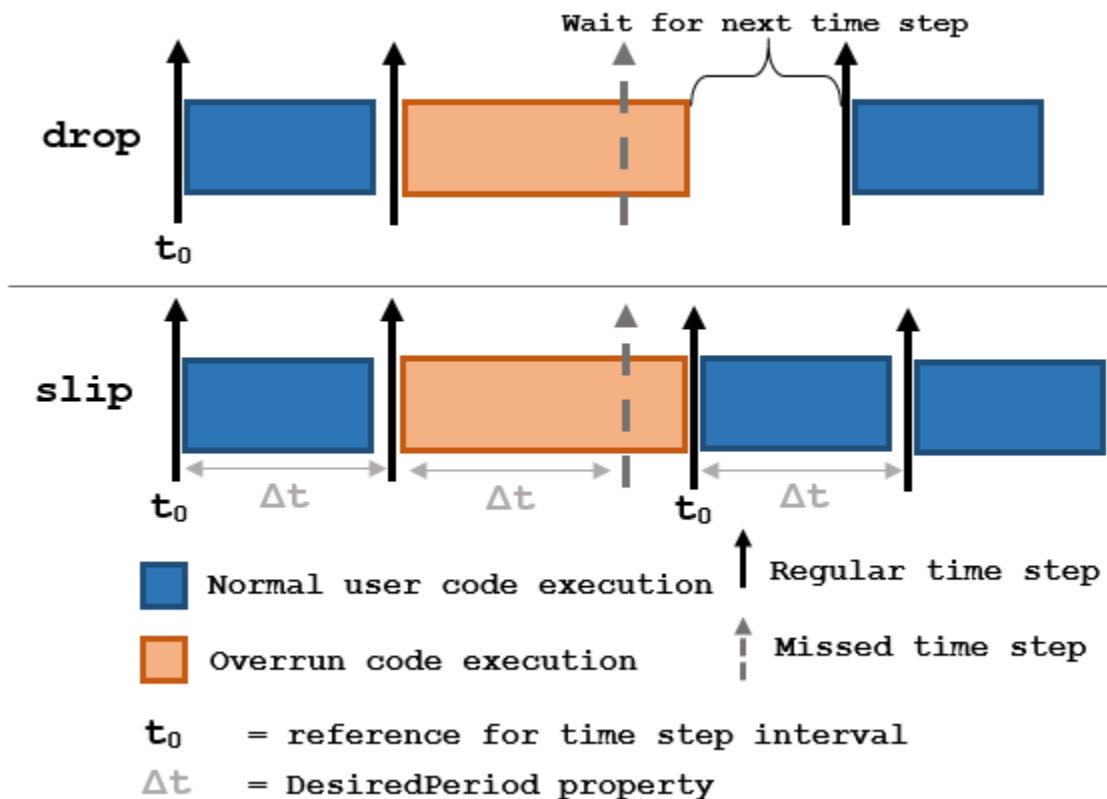

Each code section calls `waitfor` at the end of execution.

IsSimulationTime — Indicator if simulation or wall clock time is used

true | false

Indicator if simulation or wall clock time is used, returned as `true` or `false`. If `true`, the `Rate` object is using the ROS simulation time to regulate the rate of loop execution.

Object Functions

`waitfor` Pause code execution to achieve desired execution rate
`statistics` Statistics of past execution periods
`reset` Reset Rate object

Examples

Run Loop At Fixed Rate Using `rostrate`

Initialize the ROS master and node.

```
rosinit
```

```
Launching ROS Core...
...Done in 4.1747 seconds.
Initializing ROS master on http://192.168.88.1:58653.
Initializing global node /matlab_global_node_60184 with NodeURI http://ah-avijayar:59309/
```

Create a rate object that runs at 1 Hz.

```
r = rostrate(1);
```

Start loop that prints iteration and time elapsed. Use `waitfor` to pause the loop until the next time interval. Reset `r` prior to the loop execution. Notice that each iteration executes at a 1-second interval.

```
reset(r)
for i = 1:10
    time = r.TotalElapsedTime;
    fprintf('Iteration: %d - Time Elapsed: %f\n',i,time)
    waitfor(r);
end
```

```
Iteration: 1 - Time Elapsed: 0.002974
Iteration: 2 - Time Elapsed: 1.000752
Iteration: 3 - Time Elapsed: 2.000610
Iteration: 4 - Time Elapsed: 3.000943
Iteration: 5 - Time Elapsed: 4.001317
Iteration: 6 - Time Elapsed: 5.000800
Iteration: 7 - Time Elapsed: 6.000602
Iteration: 8 - Time Elapsed: 7.000298
Iteration: 9 - Time Elapsed: 8.000352
Iteration: 10 - Time Elapsed: 9.000417
```

Shut down the ROS network.

```
roshuttdown
```

```
Shutting down global node /matlab_global_node_60184 with NodeURI http://ah-avijayar:59309/
Shutting down ROS master on http://192.168.88.1:58653.
```

Run Loop At Fixed Rate Using ROS Time

Initialize the ROS master and node.

```
rosinit
```

```
Launching ROS Core...
...Done in 4.1733 seconds.
Initializing ROS master on http://192.168.88.1:51279.
Initializing global node /matlab_global_node_86106 with NodeURI http://ah-avijayar:50550/
```

```
node = ros.Node('/testTime');
```

```
Using Master URI http://localhost:51279 from the global node to connect to the ROS master.
```

Create a `ros.Rate` object running at 20 Hz.

```
r = ros.Rate(node,20);
```

Reset the object to restart the timer and run the loop for 30 iterations. Insert code you want to run in the loop before calling `waitfor`.

```
reset(r)
for i = 1:30
    % User code goes here.
    waitfor(r);
end
```

Shut down ROS node.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_86106 with NodeURI http://ah-avijayar:50550/
Shutting down ROS master on http://192.168.88.1:51279.
```

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- `statistics` object function is not supported.

See Also

[rateControl](#) | [waitfor](#)

Topics

“Execute Code Based on ROS Time”

Introduced in R2019b

rossubscriber

Subscribe to messages on a topic

Description

Use `rossubscriber` to create a ROS subscriber for receiving messages on the ROS network. To send messages, use `rospublisher`. To wait for a new ROS message, use the `receive` function with your created subscriber.

The `Subscriber` object created by the `rossubscriber` function represents a subscriber on the ROS network. The `Subscriber` object subscribes to an available topic or to a topic that it creates. This topic has an associated message type. Publishers can send messages over the network that the `Subscriber` object receives.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 2-110.

You can create a `Subscriber` object by using the `rossubscriber` function, or by calling `ros.Subscriber`:

- `rossubscriber` works only with the global node using `rosinit`. It does not require a node object handle as an argument.
- `ros.Subscriber` works with additional nodes that are created using `ros.Node`. It requires a node object handle as the first argument.

Creation

Syntax

```
sub = rossubscriber(topicname)
sub = rossubscriber(topicname,msgtype)
sub = rossubscriber(topicname,callback)
sub = rossubscriber(topicname, msgtype,callback)
sub = rossubscriber( ___,Name,Value)
sub = rossubscriber( ___, "DataFormat", "struct")

sub = ros.Subscriber(node,topicname)
sub = ros.Subscriber(node,topicname,msgtype)
sub = ros.Subscriber(node,topicname,callback)
sub = ros.Subscriber(node,topicname,type,callback)
sub = ros.Subscriber( ___, "BufferSize", value)
sub = ros.Subscriber( ___, "DataFormat", "struct")
```

Description

`sub = rossubscriber(topicname)` subscribes to a topic with the given `TopicName`. The topic must already exist on the ROS master topic list with an established message type. When ROS nodes publish messages on that topic, MATLAB receives those messages through this subscriber.

`sub = rossubscriber(topicname,msgtype)` subscribes to a topic that has the specified name, `TopicName`, and type, `MessageType`. If the topic list on the ROS master does not include a topic with that specified name and type, it is added to the topic list. Use this syntax to avoid errors when subscribing to a topic before a publisher has added the topic to the topic list on the ROS master.

`sub = rossubscriber(topicname,callback)` specifies a callback function, `callback`, that runs when the subscriber object handle receives a topic message. Use this syntax to avoid the blocking receive function. The `callback` function can be a single function handle or a cell array. The first element of the cell array must be a function handle or a string containing the name of a function. The remaining elements of the cell array can be arbitrary user data that is passed to the callback function.

`sub = rossubscriber(topicname, msgtype, callback)` specifies a callback function and subscribes to a topic that has the specified name, `TopicName`, and type, `MessageType`.

`sub = rossubscriber(___,Name,Value)` provides additional options specified by one or more `Name,Value` pair arguments using any of the arguments from previous syntaxes. `Name` is the property name and `Value` is the corresponding value.

`sub = rossubscriber(___, "DataFormat", "struct")` uses message structures instead of objects. For more information, see “ROS Message Structures” on page 2-110

`sub = ros.Subscriber(node,topicname)` subscribes to a topic with name, `TopicName`. The `node` is the `ros.Node` object handle that this publisher attaches to.

`sub = ros.Subscriber(node,topicname,msgtype)` specifies the message type, `MessageType`, of the topic. If a topic with the same name exists with a different message type, MATLAB creates a new topic with the given message type.

`sub = ros.Subscriber(node,topicname,callback)` specifies a callback function, and optional data, to run when the subscriber object receives a topic message. See `NewMessageFcn` for more information about the callback function.

`sub = ros.Subscriber(node,topicname,type,callback)` specifies the topic name, message type, and callback function for the subscriber.

`sub = ros.Subscriber(___, "BufferSize", value)` specifies the queue size in `BufferSize` for incoming messages. You can use any combination of previous inputs with this syntax.

`sub = ros.Subscriber(___, "DataFormat", "struct")` uses message structures instead of objects. For more information, see “ROS Message Structures” on page 2-110

Properties

TopicName — Name of the subscribed topic

string scalar | character vector

This property is read-only.

Name of the subscribed topic, specified as a string scalar or character vector. If the topic does not exist, the object creates the topic using its associated message type.

Example: `"/chatter"`

Data Types: `char` | `string`

MessageType — Message type of subscribed messages

`string scalar` | `character vector`

This property is read-only.

Message type of subscribed messages, specified as a string scalar or character vector. This message type remains associated with the topic.

Example: `"std_msgs/String"`

Data Types: `char` | `string`

LatestMessage — Latest message sent to the topic

Message object

Latest message sent to the topic, specified as a `Message` object. The `Message` object is specific to the given `MessageType`. If the subscriber has not received a message, then the `Message` object is empty.

BufferSize — Buffer size

1 (default) | scalar

Buffer size of the incoming message queue, specified as the comma-separated pair consisting of `"BufferSize"` and a scalar. If messages arrive faster than your callback can process them, they are deleted once the incoming queue is full.

NewMessageFcn — Callback property

function handle | cell array

Callback property, specified as a function handle or cell array. In the first element of the cell array, specify either a function handle or a string representing a function name. In subsequent elements, specify user data.

The subscriber callback function requires at least two input arguments. The first argument, `src`, is the associated subscriber object. The second argument, `msg`, is the received message object. The function header for the callback is:

```
function subCallback(src,msg)
```

Specify the `NewMessageFcn` property as:

```
sub.NewMessageFcn = @subCallback;
```

When setting the callback, you pass additional parameters to the callback function by including both the callback function and the parameters as elements of a cell array. The function header for the callback is:

```
function subCallback(src,msg,userData)
```

Specify the `NewMessageFcn` property as:

```
sub.NewMessageFcn = {@subCallback,userData};
```

DataFormat — Message format

"object" (default) | "struct"

Message format, specified as "object" or "struct". You must set this property on creation using the name-value input. For more information, see "ROS Message Structures" on page 2-110.

Object Functions

receive Wait for new ROS message
 rosmesssage Create ROS messages

Examples**Create A Subscriber and Get Data From ROS**

Connect to a ROS network. Set up a sample ROS network. The '/scan' topic is being published on the network.

```
rosinit
```

```
Launching ROS Core...
..Done in 2.6834 seconds.
Initializing ROS master on http://172.30.135.140:50646.
Initializing global node /matlab_global_node_49537 with NodeURI http://bat6340win64:51147/
```

```
exampleHelperROSCreateSampleNetwork
```

Create a subscriber for the '/scan' topic using message structures. Wait for the subscriber to register with the master.

```
sub = rossubscriber('/scan', 'DataFormat', 'struct');
pause(1);
```

Receive data from the subscriber as a ROS message structure. Specify a 10-second timeout.

```
[msg2, status, statustext] = receive(sub, 10)
```

```
msg2 = struct with fields:
  MessageType: 'sensor_msgs/LaserScan'
  Header: [1x1 struct]
  AngleMin: -0.5467
  AngleMax: 0.5467
  AngleIncrement: 0.0017
  TimeIncrement: 0
  ScanTime: 0.0330
  RangeMin: 0.4500
  RangeMax: 10
  Ranges: [640x1 single]
  Intensities: []
```

```
status = logical
      1
```

```
statustext =
'success'
```

Shutdown the timers used by sample network.

```
exampleHelperROSShutdownSampleNetwork
```

Shut down ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_49537 with NodeURI http://bat6340win64:51147/
Shutting down ROS master on http://172.30.135.140:50646.
```

Create A Subscriber That Uses A Callback Function

You can trigger callback functions when subscribers receive messages. Specify the callback when you create it or use the `NewMessageFcn` property.

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
...Done in 3.249 seconds.
Initializing ROS master on http://172.30.135.140:50298.
Initializing global node /matlab_global_node_59257 with NodeURI http://bat6340win64:51929/
```

Setup a publisher to publish a message to the `/chatter` topic. This topic is used to trigger the subscriber callback. Specify the `Data` property of the message. Wait 1 second to allow the publisher to register with the network.

```
pub = rospublisher('/chatter', 'std_msgs/String', 'DataFormat', 'struct');
msg = rosmessage(pub);
msg.Data = 'hello world';
pause(1)
```

Set up a subscriber with a specified callback function. The `exampleHelperROSChatterCallback` function displays the `Data` inside the received message.

```
sub = rossubscriber('/chatter', @exampleHelperROSChatterCallback, 'DataFormat', 'struct');
pause(1)
```

Send the message via the publisher. The subscriber should execute the callback to display the new message. Wait for the message to be received.

```
send(pub, msg);
pause(1)
```

```
ans =
'hello world'
```

Shut down ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_59257 with NodeURI http://bat6340win64:51929/
Shutting down ROS master on http://172.30.135.140:50298.
```

Use ROS Subscriber Object

Use a ROS Subscriber object to receive messages over the ROS network.

Start the ROS core and node.

```
master = ros.Core;

Launching ROS Core...
...Done in 3.9004 seconds.

node = ros.Node('/test');
```

Create a publisher and subscriber to send and receive a message over the ROS network. Use ROS messages as structures.

```
pub = ros.Publisher(node, '/chatter', 'std_msgs/String', 'DataFormat', 'struct');
sub = ros.Subscriber(node, '/chatter', 'std_msgs/String', 'DataFormat', 'struct');
```

Send a message over the network.

```
msg = rosmessage(pub);
msg.Data = 'hello world';
send(pub, msg)
```

View the message data using the LatestMessage property of the Subscriber object.

```
pause(1)
sub.LatestMessage

ans = struct with fields:
  MessageType: 'std_msgs/String'
  Data: 'hello world'
```

Clear the publisher, subscriber, and ROS node. Shut down the ROS master.

```
clear('pub', 'sub', 'node')
clear('master')
```

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see “Improve Performance of ROS Using Message Structures”.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for struct messages.
- MessageType argument must be specified.
- Callback functions must be assigned at the time of Subscriber object creation, and cannot be changed during run-time.

See Also

receive | rospublisher | rosmessage

Topics

“Exchange Data with ROS Publishers and Subscribers”

Introduced in R2019b

rossvcclient

Connect to ROS service server

Description

Use `rossvcclient` or `ros.ServiceClient` to create a ROS service client object. This service client uses a persistent connection to send requests to, and receive responses from, a ROS service server. The connection persists until the service client is deleted or the service server becomes unavailable.

Use the `ros.ServiceClient` syntax when connecting to a specific ROS node.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 2-116.

Creation

Syntax

```
client = rossvcclient(servicename)
client = rossvcclient(servicename,Name,Value)

[client,reqmsg] = rossvcclient(____)
[____] = rossvcclient(____,"DataFormat","struct")

client = ros.ServiceClient(node, name)
client = ros.ServiceClient(node, name,"Timeout",timeout)
[____] = ros.ServiceClient(____,"DataFormat","struct")
```

Description

`client = rossvcclient(servicename)` creates a service client with the given `ServiceName` that connects to, and gets its `ServiceType` from, a service server. This command syntax prevents the current MATLAB program from running until it can connect to the service server.

`client = rossvcclient(servicename,Name,Value)` provides additional options specified by one or more `Name,Value` pair arguments.

`[client,reqmsg] = rossvcclient(____)` returns a new service request message in `reqmsg`, using any of the arguments from previous syntaxes. The message type of `reqmsg` is determined by the service that `client` is connected to. The message is initialized with default values. You can also create the request message using `rosmesssage`.

`[____] = rossvcclient(____,"DataFormat","struct")` uses message structures instead of objects. For more information, see "ROS Message Structures" on page 2-116.

`client = ros.ServiceClient(node, name)` creates a service client that connects to a service server. The client gets its service type from the server. The service client attaches to the `ros.Node` object handle, `node`.

`client = ros.ServiceClient(node, name, "Timeout", timeout)` specifies a timeout period in seconds for the client to connect the service server.

`[___] = ros.ServiceClient(___, "DataFormat", "struct")` uses message structures instead of objects. For more information, see “ROS Message Structures” on page 2-116.

Properties

ServiceName — Name of the service

string scalar | character vector

This property is read-only.

Name of the service, specified as a string scalar or character vector.

Example: `"/gazebo/get_model_state"`

ServiceType — Type of service

string scalar | character vector

This property is read-only.

Type of service, specified as a string scalar or character vector.

Example: `"gazebo_msgs/GetModelState"`

DataFormat — Message format

"object" (default) | "struct"

Message format, specified as "object" or "struct". You must set this property on creation using the name-value input. For more information, see “ROS Message Structures” on page 2-116.

Object Functions

<code>rosmessage</code>	Create ROS messages
<code>call</code>	Call ROS or ROS 2 service server and receive a response
<code>isServerAvailable</code>	Determine if ROS or ROS 2 service server is available
<code>waitForServer</code>	Wait for ROS or ROS 2 service server to start

Examples

Call Service Client with Default Message

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
```

```
..Done in 2.6477 seconds.
```

```
Initializing ROS master on http://172.30.135.140:53192.
```

```
Initializing global node /matlab_global_node_86810 with NodeURI http://bat6340win64:55093/
```

Set up a service server. Use structures for the ROS message data format.

```
server = rossvcserver('/test', 'std_srvs/Empty', @exampleHelperROSEmptyCallback, ...  
                    'DataFormat','struct');  
client = rossvcclient('/test','DataFormat','struct');
```

Check whether the service server is available. If it is, wait for the service client to connect to the server.

```
if(isServerAvailable(client))  
    [connectionStatus,connectionStatustext] = waitForServer(client)  
end  
  
connectionStatus = logical  
    1
```

```
connectionStatustext =  
'success'
```

Call service server with default message.

```
response = call(client)  
  
response = struct with fields:  
    MessageType: 'std_srvs/EmptyResponse'
```

If the call function above fails, it results in an error. Instead of an error, if you would prefer to react to a call failure using conditionals, return the status and statustext outputs from the call function. The status output indicates if the call succeeded, while statustext provides additional information.

```
numCallFailures = 0;  
[response,status,statustext] = call(client,"Timeout",3);  
if ~status  
    numCallFailures = numCallFailures + 1;  
    fprintf("Call failure number %d. Error cause: %s\n",numCallFailures,statustext)  
else  
    disp(response)  
end  
  
    MessageType: 'std_srvs/EmptyResponse'
```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_86810 with NodeURI http://bat6340win64:55093/  
Shutting down ROS master on http://172.30.135.140:53192.
```

Use ROS Service Server with ServiceServer and ServiceClient Objects

Create a ROS service serve by creating a ServiceServer object and use ServiceClient objects to request information over the network. The callback function used by the server takes a string, reverses it, and returns the reversed string.

Start the ROS master and node.

```
master = ros.Core;

Launching ROS Core...
...Done in 3.2302 seconds.
```

```
node = ros.Node('/test');
```

Create a service server. This server expects a string as a request and responds with a string based on the callback. Use structures for the ROS message data format.

```
server = ros.ServiceServer(node, '/data/string', ...
                           'roseus/StringString', 'DataFormat', 'struct');
```

Create a callback function. This function takes an input string as the `Str` property of `req` and returns it as the `Str` property of `resp`. The function definition is shown here, but is defined below the example. `req` is a ROS message you create using `rosmesssage`.

```
function [resp] = flipString(~,req,resp)
% FLIPSTRING Reverses the order of a string in REQ and returns it in RESP.
resp.Str = fliplr(req.Str);
end
```

Assign the callback function for incoming service calls.

```
server.NewRequestFcn = @flipString;
```

Create a service client and connect to the service server. Use structures for the ROS message data format.

Create a request message based on the client.

```
client = ros.ServiceClient(node, '/data/string', 'DataFormat', 'struct');
request = rosmesssage(client);
request.Str = 'hello world';
```

Send a service request and wait for a response. Specify that the service waits 3 seconds for a response.

```
response = call(client,request,'Timeout',3)

response = struct with fields:
  MessageType: 'roseus/StringStringResponse'
  Str: 'dlrow olleh'
```

The response is a flipped string from the request message.

Clear the service client, service server, and ROS node. Shut down the ROS master.

```
clear('client', 'server', 'node')
clear('master')

function [resp] = flipString(~,req,resp)
% FLIPSTRING Reverses the order of a string in REQ and returns it in RESP.
resp.Str = fliplr(req.Str);
end
```

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see "Improve Performance of ROS Using Message Structures".

Specify ServiceType when you create the client

Behavior change in future release

In a future release, you must specify the ServiceType property during the client creation.

Timeout name-value pair argument will be removed in a future release

Not recommended starting in R2021b

In a future release, Timeout name-value pair argument will be removed for `rossvcclient`. Use `waitForServer` instead to specify a timeout and obtain the connection status of the client to the service server.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for `struct` messages.
- ServiceType property must be specified.
- Callback functions must be assigned at the time of `rossvcclient` object creation, and cannot be changed during run-time.

- For `ros.ServiceClient`, node input argument must be empty.
- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

[rosservice](#) | [rossvcserver](#) | [call](#) | [isServerAvailable](#) | [waitForServer](#) | [rosmessage](#)

Topics

“Call and Provide ROS Services”

Introduced in R2019b

rossvcserver

Create ROS service server

Description

Use `rossvcserver` or `ros.ServiceServer` to create a ROS service server that can receive requests from, and send responses to, a ROS service client. You must create the service server before creating the service client `rossvcclient`.

When you create the service client, it establishes a connection to the server. The connection persists while both client and server exist and can reach each other. When you create the service server, it registers itself with the ROS master. To get a list of services, or to get information about a particular service that is available on the current ROS network, use the `rosservice` function.

The service has an associated message type and contains a pair of messages: one for the request and one for the response. The service server receives a request, constructs an appropriate response based on a call function, and returns it to the client. The behavior of the service server is inherently asynchronous because it becomes active only when a service client connects to the ROS network and issues a call.

Use the `ros.ServiceServer` syntax when connecting to a specific ROS node.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 2-121.

Creation

Syntax

```
server = rossvcserver(servicename,svctype)
server = rossvcserver(servicename,svctype,callback)
[ __ ] = rossvcclient( __ , "DataFormat", "struct")

server = ros.ServiceServer(node, name,type)
server = ros.ServiceServer(node, name,type,callback)
[ __ ] = ros.ServiceServer( __ , "DataFormat", "struct")
```

Description

`server = rossvcserver(servicename,svctype)` creates a service server object with the specified `ServiceType` available in the ROS network under the name `ServiceName`. The service object cannot respond to service requests until you specify a function handle callback, `NewMessageFcn`.

`server = rossvcserver(servicename,svctype,callback)` specifies the callback function that constructs a response when the server receives a request. The callback specifies the `NewMessageFcn` property.

`[___] = rossvcclient(___ , "DataFormat", "struct")` uses message structures instead of objects with any of the arguments in previous syntaxes. For more information, see “ROS Message Structures” on page 2-121.

`server = ros.ServiceServer(node, name, type)` creates a service server that attaches to the ROS node, `node`. The server becomes available through the specified service name and type once a callback function handle is specified in `NewMessageFcn`.

`server = ros.ServiceServer(node, name, type, callback)` specifies the callback function, which is set to the `NewMessageFcn` property.

`[___] = ros.ServiceServer(___ , "DataFormat", "struct")` uses message structures instead of objects. For more information, see “ROS Message Structures” on page 2-121.

Properties

ServiceName — Name of the service

string scalar | character vector

This property is read-only.

Name of the service, specified as a string scalar or character vector.

Example: `"/gazebo/get_model_state"`

Data Types: `char` | `string`

ServiceType — Type of service

string scalar | character vector

This property is read-only.

Type of service, specified as a string scalar or character vector.

Example: `"gazebo_msgs/GetModelState"`

Data Types: `char` | `string`

NewMessageFcn — Callback property

function handle | cell array

Callback property, specified as a function handle or cell array. In the first element of the cell array, specify either a function handle, string scalar, or character vector representing a function name. In subsequent elements, specify user data.

The service callback function requires at least three input arguments with one output. The first argument, `src`, is the associated service server object. The second argument, `reqMsg`, is the request message object sent by the service client. The third argument is the default response message object, `defaultRespMsg`. The callback returns a response message, `response`, based on the input request message and sends it back to the service client. Use the default response message as a starting point for constructing the request message. The function header for the callback is:

```
function response = serviceCallback(src, reqMsg, defaultRespMsg)
```

Specify the `NewMessageFcn` property as:

```
server.NewMessageFcn = @serviceCallback;
```

When setting the callback, you pass additional parameters to the callback function by including both the callback function and the parameters as elements of a cell array. The function header for the callback is:

```
function response = serviceCallback(src, reqMsg, defaultRespMsg, userData)
```

Specify the `NewMessageFcn` property as:

```
server.NewMessageFcn = {@serviceCallback, userData};
```

DataFormat — Message format

```
"object" (default) | "struct"
```

Message format, specified as `"object"` or `"struct"`. You must set this property on creation using the name-value input. For more information, see “ROS Message Structures” on page 2-121.

Object Functions

`rosmessage` Create ROS messages

Examples

Call Service Client with Default Message

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
```

```
..Done in 2.6477 seconds.
```

```
Initializing ROS master on http://172.30.135.140:53192.
```

```
Initializing global node /matlab_global_node_86810 with NodeURI http://bat6340win64:55093/
```

Set up a service server. Use structures for the ROS message data format.

```
server = rossvcserver('/test', 'std_srvs/Empty', @exampleHelperROSEmptyCallback,...  
                    'DataFormat', 'struct');  
client = rossvcclient('/test', 'DataFormat', 'struct');
```

Check whether the service server is available. If it is, wait for the service client to connect to the server.

```
if(isServerAvailable(client))  
    [connectionStatus, connectionStatustext] = waitForServer(client)  
end  
  
connectionStatus = logical  
    1
```

```
connectionStatustext =
'success'
```

Call service server with default message.

```
response = call(client)

response = struct with fields:
  MessageType: 'std_srvs/EmptyResponse'
```

If the `call` function above fails, it results in an error. Instead of an error, if you would prefer to react to a call failure using conditionals, return the `status` and `statustext` outputs from the `call` function. The `status` output indicates if the call succeeded, while `statustext` provides additional information.

```
numCallFailures = 0;
[response,status,statustext] = call(client,"Timeout",3);
if ~status
    numCallFailures = numCallFailures + 1;
    fprintf("Call failure number %d. Error cause: %s\n",numCallFailures,statustext)
else
    disp(response)
end

    MessageType: 'std_srvs/EmptyResponse'
```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_86810 with NodeURI http://bat6340win64:55093/
Shutting down ROS master on http://172.30.135.140:53192.
```

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmesssage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")  
...  
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see “Improve Performance of ROS Using Message Structures”.

Specify NewMessageFcn call back property when you create the server

Behavior change in future release

In a future release, you must specify the NewMessageFcn callback property during the server creation.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- Supported only for struct messages.
- ServiceType argument must be specified.
- Callback functions must be assigned at the time of rossvcserver or ros.ServiceServer object creation, and cannot be changed during run-time.
- For ros.ServiceServer, node input argument must be empty.
- Supported only for the Build Type, Executable.
- Usage in MATLAB Function block is not supported.

See Also

rossvcclient | call | rosmesssage

Topics

“Call and Provide ROS Services”

Introduced in R2019b

rostdf

Receive, send, and apply ROS transformations

Description

Calling the `rostdf` function creates a ROS `TransformationTree` object, which allows you to access the `tf` coordinate transformations that are shared on the ROS network. You can receive transformations and apply them to different entities. You can also send transformations and share them with the rest of the ROS network.

ROS uses the `tf` transform library to keep track of the relationship between multiple coordinate frames. The relative transformations between these coordinate frames are maintained in a tree structure. Querying this tree lets you transform entities like poses and points between any two coordinate frames. To access available frames, use the syntax:

```
tfTree.AvailableFrames
```

Use the `ros.TransformationTree` syntax when connecting to a specific ROS node, otherwise use `rostdf` to create the transformation tree.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 2-127.

Creation

Syntax

```
tfTree = rostdf
tfTree = rostdf("DataFormat","struct")

trtree = ros.TransformationTree(node)
tfTree = ros.TransformationTree(node,"DataFormat","struct")
```

Description

`tfTree = rostdf` creates a ROS `TransformationTree` object.

`tfTree = rostdf("DataFormat","struct")` uses message structures instead of objects. For more information, see "ROS Message Structures" on page 2-127.

`trtree = ros.TransformationTree(node)` creates a ROS transformation tree object handle that the transformation tree is attached to. The `node` is the node connected to the ROS network that publishes transformations.

`tfTree = ros.TransformationTree(node, "DataFormat", "struct")` uses message structures instead of objects. For more information, see “ROS Message Structures” on page 2-127.

Properties

AvailableFrames — List of all available coordinate frames

cell array

This property is read-only.

List of all available coordinate frames, specified as a cell array. This list of available frames updates if new transformations are received by the transformation tree object.

Example: {'camera_center'; 'mounting_point'; 'robot_base'}

Data Types: cell

LastUpdateTime — Time when the last transform was received

ROS Time object

This property is read-only.

Time when the last transform was received, specified as a ROS Time object.

BufferTime — Length of time transformations are buffered

10 (default) | scalar

Length of time transformations are buffered, specified as a scalar in seconds. If you change the buffer time from the current value, the transformation tree and all transformations are reinitialized. You must wait for the entire buffer time to be completed to get a fully buffered transformation tree.

DataFormat — Message format

"object" (default) | "struct"

Message format, specified as "object" or "struct". You must set this property on creation using the name-value input. For more information, see “ROS Message Structures” on page 2-127.

Object Functions

<code>waitForTransform</code>	Wait until a transformation is available
<code>getTransform</code>	Retrieve transformation between two coordinate frames
<code>transform</code>	Transform message entities into target coordinate frame
<code>sendTransform</code>	Send transformation to ROS network

Examples

Create a ROS Transformation Tree

Connect to a ROS network and create a transformation tree.

Connect to a ROS network. Create a node. Use the example helper function to publish transformation data.

```
rosinit
```

```

Launching ROS Core...
...Done in 3.2294 seconds.
Initializing ROS master on http://172.30.135.140:51856.
Initializing global node /matlab_global_node_98840 with NodeURI http://bat6340win64:50251/

```

```
node = ros.Node('/testTf');
```

```
Using Master URI http://localhost:51856 from the global node to connect to the ROS master.
```

```
exampleHelperROSStartTfPublisher
```

Create a transformation tree. Use structures as the ROS message data format. Use the `AvailableFrames` property to see the transformation frames available. These transformations were specified separately prior to connecting to the network.

```
tree = rostf('DataFormat', 'struct');
pause(1);
tree.AvailableFrames
```

```
ans = 3x1 cell
    {'camera_center' }
    {'mounting_point'}
    {'robot_base'    }
```

Disconnect from the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_98840 with NodeURI http://bat6340win64:50251/
Shutting down ROS master on http://172.30.135.140:51856.
```

Use TransformationTree Object

Create a ROS transformation tree. You can then view or use transformation information for different coordinate frames setup in the ROS network.

Start ROS network and broadcast sample transformation data.

```
rosinit
```

```

Launching ROS Core...
..Done in 2.7535 seconds.
Initializing ROS master on http://172.30.135.140:49642.
Initializing global node /matlab_global_node_86806 with NodeURI http://bat6340win64:61041/

```

```
node = ros.Node('/testTf');
```

```
Using Master URI http://localhost:49642 from the global node to connect to the ROS master.
```

```
exampleHelperROSStartTfPublisher
```

Retrieve the `TransformationTree` object. Pause to wait for `tftree` to update.

```
tftree = ros.TransformationTree(node, 'DataFormat', 'struct');
pause(1)
```

View available coordinate frames and the time when they were last received.

```
frames = tftree.AvailableFrames
```

```
frames = 3x1 cell
    {'camera_center' }
    {'mounting_point'}
    {'robot_base'   }
```

```
updateTime = tftree.LastUpdateTime
```

```
updateTime = struct with fields:
    Sec: 1630515643
    Nsec: 687749500
```

Wait for the transform between two frames, 'camera_center' and 'robot_base'. This will wait until the transformation is valid and block all other operations. A time out of 5 seconds is also given.

```
waitForTransform(tftree, 'robot_base', 'camera_center', 5)
```

Define a point in the camera's coordinate frame

```
pt = rosmesssage('geometry_msgs/PointStamped', 'DataFormat', 'struct');
pt.Header.FrameId = 'camera_center';
pt.Point.X = 3;
pt.Point.Y = 1.5;
pt.Point.Z = 0.2;
```

Transform the point into the 'base_link' frame.

```
tfpt = transform(tftree, 'robot_base', pt)

tfpt = struct with fields:
    MessageType: 'geometry_msgs/PointStamped'
    Header: [1x1 struct]
    Point: [1x1 struct]
```

Display the transformed point coordinates.

```
tfpt.Point
```

```
ans = struct with fields:
    MessageType: 'geometry_msgs/Point'
    X: 1.2000
    Y: 1.5000
    Z: -2.5000
```

Clear ROS node. Shut down ROS master.

```
clear('node')
rosshutdown
```

```
Shutting down global node /matlab_global_node_86806 with NodeURI http://bat6340win64:61041/
Shutting down ROS master on http://172.30.135.140:49642.
```

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see "Improve Performance of ROS Using Message Structures".

See Also

[waitForTransform](#) | [getTransform](#) | [transform](#) | [sendTransform](#)

Topics

"Access the tf Transformation Tree in ROS"

Introduced in R2019b

rostime

Access ROS time functionality

Description

A ROS Time message represents an instance of time in seconds and nanoseconds. This time can be based on your system time, the ROS simulation time, or an arbitrary time.

Creation

Syntax

```
time = rostime(totalSecs)
time = rostime(secs,nsecs)

time = rostime("now")
[time,issimtime] = rostime("now")
time = rostime("now","system")

time = rostime(___, "DataFormat", "struct")
```

Description

`time = rostime(totalSecs)` initializes the time values for seconds and nanoseconds based on `totalSecs`, which represents the time in seconds as a floating-point number.

Note In a future release, ROS Toolbox will use message structures instead of objects for ROS messages.

To use message structures now, set the "DataFormat" name-value argument to "struct". For more information, see "ROS Message Structures" on page 2-131.

`time = rostime(secs,nsecs)` initializes the time values for seconds and nanoseconds individually. Both inputs must be integers. Large values for `nsecs` are wrapped automatically with the remainder added to `secs`.

`time = rostime("now")` returns the current ROS time. If the `use_sim_time` ROS parameter is set to `true`, the `rostime` returns the simulation time published on the `clock` topic. Otherwise, the function returns the system time of your machine. The `time` is a ROS Time object. If no output argument is given, the current time (in seconds) is printed to the screen.

The `rostime` can be used to timestamp messages or to measure time in the ROS network.

`[time,issimtime] = rostime("now")` also returns a Boolean that indicates if `time` is in simulation time (`true`) or system time (`false`).

`time = rostime("now", "system")` always returns the system time of your machine, even if ROS publishes simulation time on the `clock` topic. If no output argument is given, the system time (in seconds) is printed to the screen.

The system time in ROS follows the UNIX or POSIX time standard. POSIX time is defined as the time that has elapsed since 00:00:00 Coordinated Universal Time (UTC), 1 January 1970, not counting leap seconds.

`time = rostime(____, "DataFormat", "struct")` uses message structures instead of objects with any of the arguments in previous syntaxes. For more information, see “ROS Message Structures” on page 2-131.

Properties

totalSecs — Total time

0 (default) | scalar

Total time, specified as a floating-point scalar. The integer portion is set to the `Sec` property with the remainder applied to `Nsec` property of the `Time` object.

Sec — Whole seconds

0 (default) | positive integer

Whole seconds, specified as a positive integer.

Note The maximum and minimum values for `secs` are [0, 4294967294].

Nsec — Nanoseconds

0 (default) | positive integer

Nanoseconds, specified as a positive integer. If this value is greater than or equal to 10^9 , then the value is wrapped and the remainders are added to the value of `Sec`.

DataFormat — Message format

"object" (default) | "struct"

Message format, specified as "object" or "struct". You must set this property on creation using the name-value input. For more information, see “ROS Message Structures” on page 2-131.

Examples

Get Current ROS Time

Connect to a ROS network.

```
rosinit
```

```
Launching ROS Core...
...Done in 4.3709 seconds.
Initializing ROS master on http://172.30.135.140:49219.
Initializing global node /matlab_global_node_88889 with NodeURI http://bat6340win64:55066/
```

Get the current ROS Time as a ROS message structure. You can also check whether is it system time by getting the `issim` output.

```
[t,issim] = rostime('now','DataFormat','struct')
```

```
t = struct with fields:  
  Sec: 1630515823  
  Nsec: 439812200
```

```
issim = logical  
      0
```

Shutdown the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_88889 with NodeURI http://bat6340win64:55066/  
Shutting down ROS master on http://172.30.135.140:49219.
```

Timestamp ROS Message Data

Initialize a ROS network.

```
rosinit
```

```
Launching ROS Core...  
..Done in 2.6814 seconds.  
Initializing ROS master on http://172.30.135.140:51676.  
Initializing global node /matlab_global_node_97227 with NodeURI http://bat6340win64:58041/
```

Create a stamped ROS message using structures. Specify the `Header.Stamp` property with the current system time.

```
point = rosmesssage('geometry_msgs/PointStamped','DataFormat','struct');  
point.Header.Stamp = rostime('now','system','DataFormat','struct');
```

Shut down the ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_97227 with NodeURI http://bat6340win64:58041/  
Shutting down ROS master on http://172.30.135.140:51676.
```

ROS Time to MATLAB Time Example

This example shows how to convert current ROS time into a MATLAB® standard time. The ROS Time object is first converted to a double in seconds, then to the specified MATLAB time.

Set up ROS network and store the ROS time as a structure message.

```
rosinit
```

```
Launching ROS Core...  
...Done in 3.9045 seconds.
```



```

Initializing ROS master on http://172.30.135.140:56649.
Initializing global node /matlab_global_node_16209 with NodeURI http://bat6340win64:59601/

```

```
t = rostime('now', 'DataFormat', 'struct');
```

Convert ROS Time to double using the seconds function and set time to a specified MATLAB format, `datetime`.

```
time = datetime(t.Sec + 10^-9*t.Nsec, 'ConvertFrom', 'posixtime')
```

```
time = datetime
    01-Sep-2021 16:53:47
```

Shut down ROS network.

```
rosshutdown
```

```

Shutting down global node /matlab_global_node_16209 with NodeURI http://bat6340win64:59601/
Shutting down ROS master on http://172.30.135.140:56649.

```

Compatibility Considerations

ROS Message Structures

Behavior change in future release

You can now create messages as structures with fields matching the message object properties. Using structures typically improves performance of creating, updating, and using ROS messages, but message fields are no longer validated when set. Message types and corresponding field values from the structures are validated when sent across the network.

To use ROS messages as structures, use the "DataFormat" name-value argument when creating your publishers, subscribers, or other ROS objects. Any messages generated from these objects will utilize structures.

```
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
msg = rosmessage(pub)
```

You can also create messages as structures directly, but make sure to specify the data format as "struct" for the publisher, subscriber, or other ROS objects as well. ROS objects still use message objects by default.

```
msg = rosmessage("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
...
pub = rospublisher("/scan", "sensor_msgs/LaserScan", "DataFormat", "struct")
```

In a future release, ROS messages will use structures by default and ROS message objects will be removed.

For more information, see "Improve Performance of ROS Using Message Structures".

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

rostduration | rosmesssage

Introduced in R2019b

TransformStamped

Create transformation message

Description

The TransformStamped object is an implementation of the `geometry_msgs/TransformStamped` message type in ROS. The object contains meta-information about the message itself and the transformation. The transformation has a translational and rotational component.

Creation

Syntax

```
tform = getTransform(tftree, targetframe, sourceframe)
```

Description

`tform = getTransform(tftree, targetframe, sourceframe)` returns the latest known transformation between two coordinate frames. Transformations are structured as a 3-D translation (3-element vector) and a 3-D rotation (quaternion).

Properties

MessageType — Message type of ROS message

character vector

This property is read-only.

Message type of ROS message, returned as a character vector.

Data Types: char

Header — ROS Header message

Header object

This property is read-only.

ROS Header message, returned as a Header object. This header message contains the MessageType, sequence (Seq), timestamp (Stamp), and FrameId.

ChildFrameID — Second coordinate frame to transform point into

character vector

Second coordinate frame to transform point into, specified as a character vector.

Transform — Transformation message

Transform object

This property is read-only.

Transformation message, specified as a `Transform` object. The object contains the `MessageType` with a `Translation` vector and `Rotation` quaternion.

Object Functions

`apply` Transform message entities into target frame

Examples

Inspect Sample `TransformStamped` Object

This example looks at the `TransformStamped` object to show the underlying structure of a `TransformStamped` ROS message. After setting up a network and transformations, you can create a transformation tree and get transformations between specific coordinate systems. Using `showdetails` lets you inspect the information in the transformation. It contains the `ChildFrameId`, `Header`, and `Transform`.

Start ROS network and setup transformations.

```
rosinit
```

```
Launching ROS Core...
...Done in 3.475 seconds.
Initializing ROS master on http://172.30.135.140:54074.
Initializing global node /matlab_global_node_98374 with NodeURI http://bat6340win64:59754/
```

```
exampleHelperROSStartTfPublisher
```

Create transformation tree and wait for tree to update. Get the transform between the robot base and its camera center.

```
tftree = rostf;
waitForTransform(tftree, 'camera_center', 'robot_base');
tform = getTransform(tftree, 'camera_center', 'robot_base');
```

Inspect the `TransformStamped` object.

```
showdetails(tform)

Header
  Stamp
    Sec : 1630514844
    Nsec : 84039100
  Seq : 0
  FrameId : camera_center
Transform
  Translation
    X : 0.5
    Y : 0
    Z : -1
  Rotation
    X : 0
    Y : -0.7071067811865476
    Z : 0
    W : 0.7071067811865476
ChildFrameId : robot_base
```

Access the Translation vector inside the Transform property.

```
trans = tform.Transform.Translation
```

```
trans =
  ROS Vector3 message with properties:

  MessageType: 'geometry_msgs/Vector3'
  X: 0.5000
  Y: 0
  Z: -1.0000
```

Use `showdetails` to show the contents of the message

Stop the example transformation publisher.

```
exampleHelperROSStopTfPublisher
```

Shutdown ROS network.

```
roshutdown
```

```
Shutting down global node /matlab_global_node_98374 with NodeURI http://bat6340win64:59754/
Shutting down ROS master on http://172.30.135.140:54074.
```

Apply Transformation using TransformStamped Object

Apply a transformation from a TransformStamped object to a PointStamped message.

Start ROS network and setup transformations.

```
roslaunch
```

```
Launching ROS Core...
...Done in 3.6039 seconds.
Initializing ROS master on http://172.30.135.140:52120.
Initializing global node /matlab_global_node_61811 with NodeURI http://bat6340win64:61505/
```

```
exampleHelperROSStartTfPublisher
```

Create transformation tree and wait for tree to update. Get the transform between the robot base and its camera center. Inspect the transformation.

```
tftree = rostf;
waitForTransform(tftree, 'camera_center', 'robot_base');
tform = getTransform(tftree, 'camera_center', 'robot_base');
showdetails(tform)
```

```
Header
  Stamp
    Sec : 1630514890
    Nsec : 250379800
  Seq : 0
  FrameId : camera_center
Transform
```

```
Translation
X : 0.5
Y : 0
Z : -1
Rotation
X : 0
Y : -0.7071067811865476
Z : 0
W : 0.7071067811865476
ChildFrameId : robot_base
```

Create point to transform. You could also get this point message off the ROS network.

```
pt = rosmesssage('geometry_msgs/PointStamped');
pt.Header.FrameId = 'camera_center';
pt.Point.X = 3;
pt.Point.Y = 1.5;
pt.Point.Z = 0.2;
```

Apply the transformation to the point.

```
tfpt = apply(tform,pt);
```

Shutdown ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_61811 with NodeURI http://bat6340win64:61505/
Shutting down ROS master on http://172.30.135.140:52120.
```

See Also

Functions

`rostf` | `apply` | `getTransform` | `transform` | `waitForTransform`

Topics

“Access the tf Transformation Tree in ROS”

Introduced in R2019b

velodyneROSMessageReader

Read Velodyne ROS messages

Description

The `velodyneROSMessageReader` object reads point cloud data from VelodyneScan ROS messages, collected from a Velodyne® lidar sensor. To read this point cloud data into the workspace as point cloud object, use the `readFrame` object function. To check for additional point clouds in the message set, use the `hasFrame` object function.

Creation

Syntax

```
veloReader = velodyneROSMessageReader(msgs,devicemodel)
veloReader = velodyneROSMessageReader(msgs,
devicemodel,'CalibrationFile',calibFile)
```

Description

`veloReader = velodyneROSMessageReader(msgs,devicemodel)` creates a Velodyne ROS message reader object for a set of VelodyneScan ROS messages `msgs` from a specified device model `devicemodel`.

`veloReader = velodyneROSMessageReader(msgs, devicemodel, 'CalibrationFile', calibFile)` creates a `velodyneROSMessageReader` object with the specified Velodyne lidar calibration data. If you do not specify a calibration file, the object uses the default calibration file for the specified device model, with data obtained from the Velodyne device manual.

Input Arguments

msgs — ROS Velodyne scan messages

cell array of VelodyneScan message objects | structure array

Velodyne scan ROS messages, specified as a cell array of VelodyneScan message objects or a structure array. The message type is `velodyne_msgs/VelodyneScan`. This argument sets the `VelodyneMessages` property.

devicemodel — Name of device model

'VLP16' | 'VLP32C' | 'HDL32E' | 'HDL64E'

Name of the device model, specified as a character vector:

- 'VLP16'
- 'VLP32C'
- 'HDL32E'

- 'HDL64E'

Note Specifying a device model other than the one that captured the scans may result in improperly calibrated point clouds.

Properties

VelodyneMessages — Raw Velodyne ROS messages

cell array of VelodyneScan message objects | structure array

This property is read-only.

Raw Velodyne ROS messages, specified as a cell array of VelodyneScan message objects or structure array. The ROS messages are of type `velodyne_msgs/VelodyneScan`.

DeviceModel — Velodyne device model name

'VLP16' | 'VLP32C' | 'HDL32E' | 'HDL64E' | 'VLS128'

This property is read-only.

Velodyne device model name, specified as 'VLP16', 'VLP32C', 'HDL32E', 'HDL64E', or 'VLS128'.

Note Specifying a device model other than the one that captured the scans may result in improperly calibrated point clouds.

CalibrationFile — Name of Velodyne calibration XML file

character vector | string scalar

This property is read-only.

Name of the Velodyne calibration XML file, specified as a character vector or string scalar. Each device model includes a default calibration file.

NumberOfFrames — Total number of point clouds

positive integer

This property is read-only.

Total number of point clouds in the file, specified as a positive integer.

Duration — Total duration of file in seconds

duration scalar

This property is read-only.

Total duration of the file, specified as a duration scalar, in seconds.

StartTime — Timestamp of first point cloud reading

duration scalar

This property is read-only.

Timestamp of the first point cloud, specified as a `duration` scalar in seconds.

Start and end times are specified relative to the previous whole hour. For instance, if the file is recorded for 7 minutes from 13:58 to 14:05, then:

- `StartTime` = 58 min = 3480 s
- `EndTime` = `StartTime` + 7 min = 65 min = 3900 s

EndTime — Timestamp of last point cloud reading

`duration` scalar

This property is read-only.

Timestamp of the last point cloud reading, specified as a `duration` scalar, in seconds.

Start and end times are relative to the whole hour. For example, if the data is recorded over the 7 minutes from 1:58 PM to 2:05 PM, then:

- `StartTime` = 58 min = 3840 s
- `EndTime` = `StartTime` + 7 min = 65 min = 3900 s

Timestamps — Timestamp of point cloud frames

`duration` vector

This property is read-only.

Timestamps of the point cloud frames in seconds, specified as a `duration` vector. The length of the vector is equal to the value of the `NumberOfFrames` property. The value of the first element in the vector is the same as that of the `StartTime` property. You can use this property to read point cloud frames captured at different times.

For example, read the timestamp of a point cloud frame from the `Timestamps` property. Use the start time as an input for the `readFrame` object function to read the corresponding point cloud frame.

```
veloReader = velodyneROSMessageReader(msgs, 'HDL32E')
frameTime = veloReader.Timestamps(10);
ptCloud = readFrame(veloReader, frameTime);
```

CurrentTime — Timestamp of current point cloud

`duration` scalar

Timestamp of the current point cloud reading, specified as a `duration` scalar, in seconds. As you read point clouds using the `readFrame` object function, the object updates this property with the most recently read point cloud. You can use the `reset` object function to reset this property to the default value. The default value matches the `StartTime` property.

Object Functions

<code>hasFrame</code>	Determine if another Velodyne point cloud is available in the ROS messages
<code>readFrame</code>	Read point cloud frame from ROS message
<code>reset</code>	Reset <code>CurrentTime</code> property of <code>velodyneROSMessageReader</code> object to default value

Examples

Work with Velodyne ROS Messages

Velodyne ROS messages store data in a format that requires some interpretation before it can be used for further processing. MATLAB® can help you by formatting Velodyne ROS messages for easy use. In this example, you can explore how `VelodyneScan` messages from a Velodyne LiDAR are handled.

Prerequisites: “Work with Basic ROS Messages”

Load Sample Messages

Load sample Velodyne messages. These messages are populated with data gathered from Velodyne LiDAR sensor.

```
load("lidarData_ConstructionRoad.mat")
```

VelodyneScan Messages

`VelodyneScan` messages are ROS messages that contain Velodyne LIDAR scan packets. You can see the standard ROS format for a `VelodyneScan` message by creating an empty message of the appropriate type. Use messages in structure format for better performance.

```
emptyveloScan = rosmessage("velodyne_msgs/VelodyneScan", "DataFormat", "struct")
```

```
emptyveloScan = struct with fields:
    MessageType: 'velodyne_msgs/VelodyneScan'
    Header: [1x1 struct]
    Packets: [0x1 struct]
```

Since you created an empty message, `emptyveloScan` does not contain any meaningful data. For convenience, the loaded `lidarData_ConstructionRoad.mat` file contains a set of `VelodyneScan` messages that are fully populated and stored in the `msgs` variable. Each element in the `msgs` cell array is a `VelodyneScan` ROS message struct. The primary data in each `VelodyneScan` message is in the `Packets` property, it contains multiple `VelodynePacket` messages. You can see the standard ROS format for a `VelodynePacket` message by creating an empty message of the appropriate type.

```
emptyveloPkt = rosmessage("velodyne_msgs/VelodynePacket", "DataFormat", "struct")
```

```
emptyveloPkt = struct with fields:
    MessageType: 'velodyne_msgs/VelodynePacket'
    Stamp: [1x1 struct]
    Data: [1206x1 uint8]
```

Create Velodyne ROS Message Reader

The `velodyneROSMessageReader` object reads point cloud data from `VelodyneScan` ROS messages based on their specified model type. Note that providing an incorrect device model may result in improperly calibrated point clouds. This example uses messages from the "HDL32E" model.

```
veloReader = velodyneROSMessageReader(msgs, "HDL32E")
```

```
veloReader =
    velodyneROSMessageReader with properties:

        VelodyneMessages: {28x1 cell}
        DeviceModel: 'HDL32E'
```

```

CalibrationFile: 'B:\matlab\toolbox\shared\pointclouds\utilities\velodyneFileReaderConfigur
NumberOfFrames: 55
    Duration: 2.7477 sec
    StartTime: 1145.2 sec
    EndTime: 1147.9 sec
    Timestamps: [1145.2 sec    1145.2 sec    1145.3 sec    ...    ]
    CurrentTime: 1145.2 sec

```

Extract Point Clouds

You can extract point clouds from the raw packets message with the help of this `velodyneROSMessageReader` object. By providing a specific frame number or timestamp, one point cloud can be extracted from `velodyneROSMessageReader` object using the `readFrame` object function. If you call `readFrame` without a frame number or timestamp, it extracts the next point cloud in the sequence based on the `CurrentTime` property.

Create a duration scalar that represents one second after the first point cloud reading.

```
timeDuration = veloReader.StartTime + seconds(1);
```

Read the first point cloud recorded at or after the given time duration.

```
ptCloudObj = readFrame(veloReader,timeDuration);
```

Access Location data in the point cloud.

```
ptCloudLoc = ptCloudObj.Location;
```

Reset the `CurrentTime` property of `veloReader` to the default value

```
reset(veloReader)
```

Display All Point Clouds

You can also loop through all point clouds in the input Velodyne ROS messages.

Define *x*-, *y*-, and *z*-axes limits for `pcplayer` in meters. Label the axes.

```

xlimits = [-60 60];
ylimits = [-60 60];
zlimits = [-20 20];

```

Create the point cloud player.

```
player = pcplayer(xlimits,ylimits,zlimits);
```

Label the axes.

```

xlabel(player.Axes,"X (m)");
ylabel(player.Axes,"Y (m)");
zlabel(player.Axes,"Z (m)");


```

The first point cloud of interest is captured at 0.3 second into the input messages. Set the `CurrentTime` property to that time to begin reading point clouds from there.

```
veloReader.CurrentTime = veloReader.StartTime + seconds(0.3);
```

Display the point cloud stream for 2 seconds. To check if a new frame is available and continue past 2 seconds, remove the last while condition. Iterate through the file by calling readFrame to read in point clouds. Display them using the point cloud player.

```
while(hasFrame(veloReader) && isOpen(player) && (veloReader.CurrentTime < veloReader.StartTime +  
    ptCloudObj = readFrame(veloReader);  
    view(player,ptCloudObj.Location,ptCloudObj.Intensity);  
    pause(0.1);  
end
```

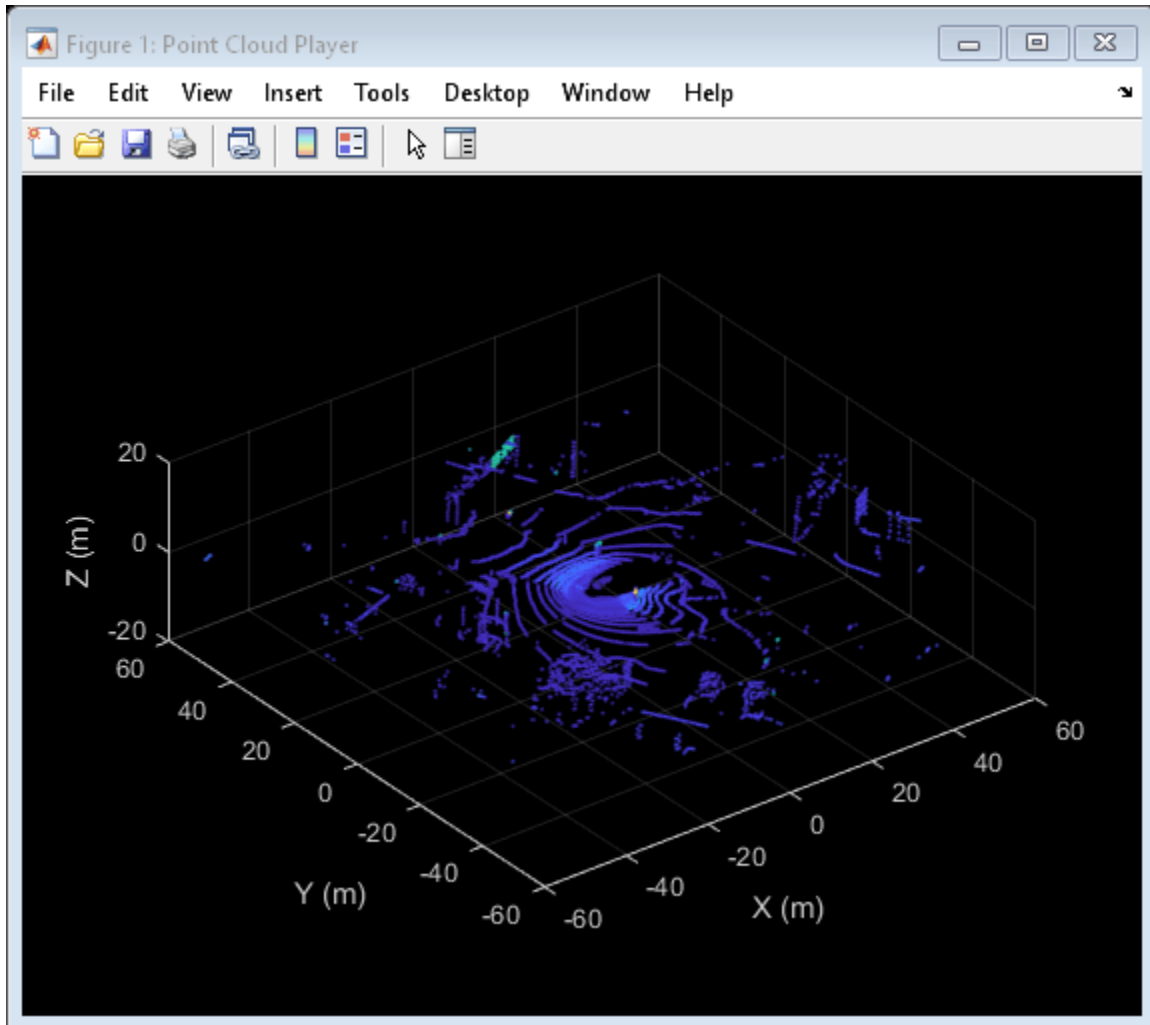

Tips

- Providing an incorrect device model will result in improperly calibrated point clouds.
- Not providing a calibration file can lead to inaccurate results.

See Also

pointCloud | hasFrame | readFrame | reset

Introduced in R2020b

pcplayer

Visualize streaming 3-D point cloud data

Description

Visualize 3-D point cloud data streams from devices such as Microsoft® Kinect®.

To improve performance, `pcplayer` automatically downsamples the rendered point cloud during interaction with the figure. The downsampling occurs only for rendering the point cloud and does not affect the saved points.

Creation

Syntax

```
player = pcplayer(xlimits,ylimits,zlimits)
player = pcplayer(xlimits,ylimits,zlimits,Name,Value)
```

Description

`player = pcplayer(xlimits,ylimits,zlimits)` returns a player with `xlimits`, `ylimits`, and `zlimits` set for the axes limits.

`player = pcplayer(xlimits,ylimits,zlimits,Name,Value)` returns a player with additional properties specified by one or more `Name,Value` pair arguments.

Input Arguments

xlimits — Range of x-axis coordinates

1-by-2 vector

Range of x-axis coordinates, specified as a 1-by-2 vector in the format `[min max]`. `pcplayer` does not display data outside these limits.

ylimits — Range of y-axis coordinates

1-by-2 vector

Range of y-axis coordinates, specified as a 1-by-2 vector in the format `[min max]`. `pcplayer` does not display data outside these limits.

zlimits — Range of z-axis coordinates

1-by-2 vector

Range of z-axis coordinates, specified as a 1-by-2 vector in the format `[min max]`. `pcplayer` does not display data outside these limits.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name`, `Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1, Value1, ..., NameN, ValueN`.

Example: `'VerticalAxisDir', 'Up'`.

MarkerSize — Diameter of marker

6 (default) | positive scalar

Diameter of marker, specified as the comma-separated pair consisting of `'MarkerSize'` and a positive scalar. The value specifies the approximate diameter of the point marker. MATLAB graphics defines the unit as points. A marker size larger than six can reduce the rendering performance.

VerticalAxis — Vertical axis

'Z' (default) | 'X' | 'Y'

Vertical axis, specified as the comma-separated pair consisting of `'VerticalAxis'` and `'X'`, `'Y'`, or `'Z'`. When you reload a saved figure, any action on the figure resets the vertical axis to the z-axis.

VerticalAxisDir — Vertical axis direction

'Up' (default) | 'Down'

Vertical axis direction, specified as the comma-separated pair consisting of `'VerticalAxisDir'` and `'Up'` or `'Down'`. When you reload a saved figure, any action on the figure resets the direction to the up direction.

Properties

Axes — Player axes handle

axes graphics object

Player axes handle, specified as an axes graphics object.

Usage

Color and Data Point Values in Figure

To view point data or modify color display values, hover over the axes toolbar and select one of the following options.

Feature	Description						
Datatip	Click Data Tips to view the data point values for any point in the point cloud figure. For a normal point cloud, the Data Tips displays the x,y,z values. Additional data properties for the depth image and lidar are:						
	<table border="1"> <thead> <tr> <th>Point Cloud Data</th> <th>Data Value Properties</th> </tr> </thead> <tbody> <tr> <td>Depth image (RGB-D sensor)</td> <td>Color, row, column</td> </tr> <tr> <td>Lidar</td> <td>Intensity, range, azimuth angle, elevation angle, row, column</td> </tr> </tbody> </table>	Point Cloud Data	Data Value Properties	Depth image (RGB-D sensor)	Color, row, column	Lidar	Intensity, range, azimuth angle, elevation angle, row, column
	Point Cloud Data	Data Value Properties					
Depth image (RGB-D sensor)	Color, row, column						
Lidar	Intensity, range, azimuth angle, elevation angle, row, column						

Feature	Description
Background color	Click Rotate and then right-click in the figure for background options.
Colormap value	Click Rotate and then right-click in the figure for colormap options. You can modify colormap values for the coordinate and range values available, depending on the type of point cloud displayed.
View	Click Rotate to change the viewing angle of the point cloud figure to the <i>XZ</i> , <i>ZX</i> , <i>YZ</i> , <i>ZY</i> , <i>XY</i> , or the <i>YX</i> plane. Click Restore View to reset the viewing angle.

OpenGL Option

pcplayer supports the 'opengl' option for the Renderer figure property only.

Object Functions

hide Hide player figure
 isOpen Visible or hidden status for player
 show Show player
 view Display point cloud

Examples

Terminate a Point Cloud Processing Loop

Create the player and add data.

```
player = pcplayer([0 1],[0 1],[0 1]);
```

Display continuous player figure. Use the `isOpen` function to check if player figure window is open.

```
while isOpen(player)
    ptCloud = pointCloud(rand(1000,3,'single'));
    view(player,ptCloud);
end
```

Terminate while-loop by closing pcplayer figure window.

See Also

pointCloud

Introduced in R2020b

hide

Hide player figure

Syntax

```
hide(player)
```

Description

`hide(player)` hides the figure. To redisplay the player, use `show(player)`.

Input Arguments

player — **Player**

object

Video player, specified as a `pcplayer` object.

Introduced in R2020b

isOpen

Visible or hidden status for player

Syntax

```
isOpen(player)
```

Description

`isOpen(player)` returns `true` or `false` to indicate whether the player is visible.

Input Arguments

player – **Player**
object

Video player, specified as a `pcplayer` object.

Introduced in R2020b

show

Show player

Syntax

```
show(player)
```

Description

`show(player)` makes the player figure visible again after closing or hiding it.

Input Arguments

player — Player

object

Player for visualizing data streams, specified as a `pcplayer` object. Use this method to view the figure after you have removed it from display. For example, after you x-out of a figure and you want to view it again. This is particularly useful to use after a while loop that contains display code ends.

Introduced in R2020b

view

Display point cloud

Syntax

```
view(player,ptCloud)
view(player,xyzPoints)
view(player,xyzPoints,color)
view(player,xyzPoints,colorMap)
```

Description

`view(player,ptCloud)` displays a point cloud in the `pcplayer` figure window, `player`. The points, locations, and colors are stored in the `ptCloud` object.

`view(player,xyzPoints)` displays the points of a point cloud at the locations specified by the `xyzPoints` matrix. The color of each point is determined by the `z` value.

`view(player,xyzPoints,color)` displays a point cloud with colors specified by `color`.

`view(player,xyzPoints,colorMap)` displays a point cloud with colors specified by `colorMap`.

Input Arguments

ptCloud — Point cloud

`pointCloud` object

Point cloud, specified as a `pointCloud` object. The object contains the locations, intensities, and RGB colors to render the point cloud.

Point Cloud Property	Color Rendering Result
Location only	Maps the <code>z</code> -value to a color value in the current color map.
Location and Intensity	Maps the intensity to a color value in the current color map.
Location and Color	Use provided color.
Location, Intensity, and Color	Use provided color.

player — Player

`pcplayer` object

Player for visualizing 3-D point cloud data streams, specified as a `pcplayer` object.

xyzPoints — Point cloud `x`, `y`, and `z` locations

M -by-3 numeric matrix | M -by- N -by-3 numeric matrix

Point cloud `x`, `y`, and `z` locations, specified as either an M -by-3 or an M -by- N -by-3 numeric matrix. The M -by- N -by-3 numeric matrix is commonly referred to as an organized point cloud. The `xyzPoints`





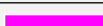



numeric matrix contains M or M -by- N $[x,y,z]$ points. The z values in the numeric matrix, which generally correspond to depth or elevation, determine the color of each point.

color — Point cloud color

1-by-3 RGB vector | short name of color | long name of color | M -by-3 matrix | M -by- N -by-3 matrix

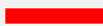Point cloud color of points, specified as one of:

- RGB triplet
- A color name or a short name
- M -by-3 matrix
- M -by- N -by-3 matrix

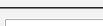Color Name	Short Name	RGB Triplet	Appearance
'red'	'r'	[1 0 0]	
'green'	'g'	[0 1 0]	
'blue'	'b'	[0 0 1]	
'cyan'	'c'	[0 1 1]	
'magenta'	'm'	[1 0 1]	
'yellow'	'y'	[1 1 0]	
'black'	'k'	[0 0 0]	
'white'	'w'	[1 1 1]	

You can specify the same color for all points or a different color for each point. When you set `color` to `single` or `double`, the RGB values range between [0, 1]. When you set `color` to `uint8`, the values range between [0, 255].

Points Input	Color Selection	Valid Values of C
xyzPoints	Same color for all points	1-by-3 RGB vector, or the short or long name of a color
	Different color for each point	M -by-3 matrix or M -by- N -by-3 matrix containing RGB values for each point.

colorMap — Point cloud color map

M -by-1 vector | M -by- N matrix

Point cloud color of points, specified as one of:

- M -by-1 vector
- M -by- N matrix

Points Input	Color Selection	Valid Values of C
xyzPoints	Different color for each point	Vector or M -by- N matrix. The matrix must contain values that are linearly mapped to a color in the current <code>colorMap</code> .

Introduced in R2020b

pointCloud

Object for storing 3-D point cloud

Description

The `pointCloud` object creates point cloud data from a set of points in 3-D coordinate system. The point cloud data is stored as an object with the properties listed in “Properties” on page 2-153. Use “Object Functions” on page 2-154 to retrieve, select, and remove desired points from the point cloud data.

Creation

Syntax

```
ptCloud = pointCloud(xyzPoints)
ptCloud = pointCloud(xyzPoints,Name,Value)
```

Description

`ptCloud = pointCloud(xyzPoints)` returns a point cloud object with coordinates specified by `xyzPoints`.

`ptCloud = pointCloud(xyzPoints,Name,Value)` creates a `pointCloud` object with properties specified as one or more `Name,Value` pair arguments. For example, `pointCloud(xyzPoints,'Color',[0 0 0])` sets the `Color` property of the point `xyzPoints` as `[0 0 0]`. Enclose each property name in quotes. Any unspecified properties have default values.

Input Arguments

xyzPoints — 3-D coordinate points

M-by-3 list of points | *M*-by-*N*-by-3 array for organized point cloud

3-D coordinate points, specified as an *M*-by-3 list of points or an *M*-by-*N*-by-3 array for an organized point cloud. The 3-D coordinate points specify the *x*, *y*, and *z* positions of a point in the 3-D coordinate space. The first two dimensions of an organized point cloud correspond to the scanning order from sensors such as RGBD or lidar. This argument sets the `Location` property.

Data Types: `single` | `double`

Output Arguments

ptCloud — Point cloud

`pointCloud` object

Point cloud, returned as a `pointCloud` object with the properties listed in “Properties” on page 2-153.

Properties

Location — Position of the points in 3-D coordinate space

M-by-3 array | *M*-by-*N*-by-3 array

This property is read-only.

Position of the points in 3-D coordinate space, specified as an *M*-by-3 or *M*-by-*N*-by-3 array. Each entry specifies the *x*, *y*, and *z* coordinates of a point in the 3-D coordinate space. You cannot set this property as a name-value pair. Use the `xyzPoints` input argument.

Data Types: `single` | `double`

Color — Point cloud color

[] (default) | *M*-by-3 array | *M*-by-*N*-by-3 array

Point cloud color, specified as an *M*-by-3 or *M*-by-*N*-by-3 array. Use this property to set the color of points in point cloud. Each entry specifies the RGB color of a point in the point cloud data. Therefore, you can specify the same color for all points or a different color for each point.

- The specified RGB values must lie within the range [0, 1], when you specify the data type for `Color` as `single` or `double`.
- The specified RGB values must lie within the range [0, 255], when you specify the data type for `Color` as `uint8`.

Coordinates	Valid assignment of Color
<i>M</i> -by-3 array	<i>M</i> -by-3 array containing RGB values for each point
<i>M</i> -by- <i>N</i> -by-3 array	<i>M</i> -by- <i>N</i> -by-3 array containing RGB values for each point

Data Types: `uint8`

Normal — Surface normals

[] (default) | *M*-by-3 array | *M*-by-*N*-by-3 array

Surface normals, specified as a *M*-by-3 or *M*-by-*N*-by-3 array. Use this property to specify the normal vector with respect to each point in the point cloud. Each entry in the surface normals specifies the *x*, *y*, and *z* component of a normal vector.

Coordinates	Surface Normals
<i>M</i> -by-3 array	<i>M</i> -by-3 array, where each row contains a corresponding normal vector.
<i>M</i> -by- <i>N</i> -by-3 array	<i>M</i> -by- <i>N</i> -by-3 array containing a 1-by-1-by-3 normal vector for each point.

Data Types: `single` | `double`

Intensity — Grayscale intensities

[] (default) | *M*-by-1 vector | *M*-by-*N* matrix

Grayscale intensities at each point, specified as a *M*-by-1 vector or *M*-by-*N* matrix. The function maps each intensity value to a color value in the current colormap.

Coordinates	Intensity
<i>M</i> -by-3 array	<i>M</i> -by-1 vector, where each row contains a corresponding intensity value.

Coordinates	Intensity
<i>M</i> -by- <i>N</i> -by-3 array	<i>M</i> -by- <i>N</i> matrix containing intensity value for each point.

Data Types: `single` | `double` | `uint8`

Count — Number of points

positive integer

This property is read-only.

Number of points in the point cloud, stored as a positive integer.

XLimits — Range of x coordinates

1-by-2 vector

This property is read-only.

Range of coordinates along x-axis, stored as a 1-by-2 vector.

YLimits — Range of y coordinates

1-by-2 vector

This property is read-only.

Range of coordinates along y-axis, stored as a 1-by-2 vector.

ZLimits — Range of z coordinates

1-by-2 vector

This property is read-only.

Range of coordinates along z-axis, stored as a 1-by-2 vector.

Object Functions

<code>findNearestNeighbors</code>	Find nearest neighbors of a point in point cloud
<code>findNeighborsInRadius</code>	Find neighbors within a radius of a point in the point cloud
<code>findPointsInROI</code>	Find points within a region of interest in the point cloud
<code>removeInvalidPoints</code>	Remove invalid points from point cloud
<code>select</code>	Select points in point cloud
<code>copy</code>	Copy array of handle objects

Tips

The `pointCloud` object is a `handle` object. If you want to create a separate copy of a point cloud, you can use the MATLAB `copy` method.

```
ptCloudB = copy(ptCloudA)
```

If you want to preserve a single copy of a point cloud, which can be modified by point cloud functions, use the same point cloud variable name for the input and output.

```
ptCloud = pcFunction(ptCloud)
```


Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

GPU Code Generation

Generate CUDA® code for NVIDIA® GPUs using GPU Coder™.

Usage notes and limitations:

- GPU code generation for variable input sizes is not optimized. Consider using constant size inputs for an optimized code generation.
- GPU code generation supports the 'Color', 'Normal', and 'Intensity' name-value pairs.
- GPU code generation supports the `findNearestNeighbors`, `findNeighborsInRadius`, `findPointsInROI`, `removeInvalidPoints`, and `select` methods.
- For very large inputs, the memory requirements of the algorithm may exceed the GPU device limits. In such cases, consider reducing the input size to proceed with code generation.

See Also

Functions

`pcplayer`

Introduced in R2020b

findNearestNeighbors

Find nearest neighbors of a point in point cloud

Syntax

```
[indices,dists] = findNearestNeighbors(ptCloud,point,K)
[indices,dists] = findNearestNeighbors( ____,Name,Value)
```

Description

`[indices,dists] = findNearestNeighbors(ptCloud,point,K)` returns the indices for the K-nearest neighbors of a query point in the input point cloud. `ptCloud` can be an unorganized or organized point cloud. The K-nearest neighbors of the query point are computed by using the Kd-tree based search algorithm.

`[indices,dists] = findNearestNeighbors(____,Name,Value)` specifies options using one or more name-value arguments in addition to the input arguments in the preceding syntaxes.

Input Arguments

ptCloud – Point cloud

`pointCloud` object

Point cloud, specified as a `pointCloud` object.

point – Query point

three-element vector of form $[x,y,z]$

Query point, specified as a three-element vector of form $[x,y,z]$.

K – Number of nearest neighbors

positive integer

Number of nearest neighbors, specified as a positive integer.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name,Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

Example: `findNearestNeighbors(ptCloud,point,k,'Sort',true)`

Sort – Sort indices

`false` (default) | `true`

Sort indices, specified as a comma-separated pair of `'Sort'` and a logical scalar. When you set `Sort` to `true`, the returned indices are sorted in the ascending order based on the distance from a query point. To turn off sorting, set `Sort` to `false`.

MaxLeafChecks — Number of leaf nodes to check

Inf (default) | integer

Number of leaf nodes to check, specified as a comma-separated pair consisting of 'MaxLeafChecks' and an integer. When you set this value to Inf, the entire tree is searched. When the entire tree is searched, it produces exact search results. Increasing the number of leaf nodes to check increases accuracy, but reduces efficiency.

Note The name-value argument 'MaxLeafChecks' is valid only with Kd-tree based search method.

Output Arguments**indices — Indices of stored points**

column vector

Indices of stored points, returned as a column vector. The vector contains K linear indices of the nearest neighbors stored in the point cloud.

dists — Distances to query point

column vector

Distances to query point, returned as a column vector. The vector contains the Euclidean distances between the query point and its nearest neighbors.

References

[1] Muja, M. and David G. Lowe. "Fast Approximate Nearest Neighbors with Automatic Algorithm Configuration". In *VISAPP International Conference on Computer Vision Theory and Applications*. 2009. pp. 331-340.

Extended Capabilities**C/C++ Code Generation**

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- For code generation in non-host platforms, the value for 'MaxLeafChecks' must be set to the default value Inf. If you specify values other than Inf, the function generates a warning and automatically assigns the default value for 'MaxLeafChecks'.

GPU Code Generation

Generate CUDA® code for NVIDIA® GPUs using GPU Coder™.

Usage notes and limitations:

- For GPU code generation, the 'MaxLeafChecks' name-value pair option is ignored.

See Also

pointCloud

Introduced in R2020b

findNeighborsInRadius

Find neighbors within a radius of a point in the point cloud

Syntax

```
[indices,dists] = findNeighborsInRadius(ptCloud,point,radius)
[indices,dists] = findNeighborsInRadius( ____,Name,Value)
```

Description

`[indices,dists] = findNeighborsInRadius(ptCloud,point,radius)` returns the indices of neighbors within a radius of a query point in the input point cloud. `ptCloud` can be an unorganized or organized point cloud. The neighbors within a radius of the query point are computed by using the Kd-tree based search algorithm.

`[indices,dists] = findNeighborsInRadius(____,Name,Value)` specifies options using one or more name-value pair arguments in addition to the input arguments in the preceding syntaxes.

Input Arguments

ptCloud — Point cloud

pointCloud object

Point cloud, specified as a `pointCloud` object.

point — Query point

three-element vector of form $[x,y,z]$

Query point, specified as a three-element vector of form $[x,y,z]$.

radius — Search radius

scalar

Search radius, specified as a scalar. The function finds the neighbors within the specified radius around a query point in the input point cloud.

Name-Value Pair Arguments

Specify optional comma-separated pairs of `Name,Value` arguments. `Name` is the argument name and `Value` is the corresponding value. `Name` must appear inside quotes. You can specify several name and value pair arguments in any order as `Name1,Value1,...,NameN,ValueN`.

Example: `findNeighborsInRadius(ptCloud,point,radius,'Sort',true)`

Sort — Sort indices

false (default) | true

Sort indices, specified as a comma-separated pair of `'Sort'` and a logical scalar. When you set `Sort` to `true`, the returned indices are sorted in the ascending order based on the distance from a query point. To turn off sorting, set `Sort` to `false`.

MaxLeafChecks — Number of leaf nodes

Inf (default) | integer

Number of leaf nodes, specified as a comma-separated pair consisting of 'MaxLeafChecks' and an integer. When you set this value to Inf, the entire tree is searched. When the entire tree is searched, it produces exact search results. Increasing the number of leaf nodes to check increases accuracy, but reduces efficiency.

Output Arguments**indices — Indices of stored points**

column vector

Indices of stored points, returned as a column vector. The vector contains the linear indices of the radial neighbors stored in the point cloud.

dists — Distances to query point

column vector

Distances to query point, returned as a column vector. The vector contains the Euclidean distances between the query point and its radial neighbors.

References

[1] Muja, M. and David G. Lowe. "Fast Approximate Nearest Neighbors with Automatic Algorithm Configuration". In *VISAPP International Conference on Computer Vision Theory and Applications*. 2009. pp. 331-340.

Extended Capabilities**C/C++ Code Generation**

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- For code generation in non-host platforms, the value for 'MaxLeafChecks' must be set to the default value Inf. If you specify values other than Inf, the function generates a warning and automatically assigns the default value for 'MaxLeafChecks'.

GPU Code Generation

Generate CUDA® code for NVIDIA® GPUs using GPU Coder™.

Usage notes and limitations:

- For GPU code generation, the 'MaxLeafChecks' name-value pair option is ignored.

See Also

pointCloud

Introduced in R2020b

findPointsInROI

Find points within a region of interest in the point cloud

Syntax

```
indices = findPointsInROI(ptCloud,roi)
```

Description

`indices = findPointsInROI(ptCloud,roi)` returns the points within a region of interest (ROI) in the input point cloud. The points within the specified ROI are obtained using a Kd-tree based search algorithm.

Input Arguments

ptCloud — Point cloud

pointCloud object

Point cloud, specified as a pointCloud object.

roi — Region of interest

six-element vector

Region of interest, specified as a six-element vector of form $[xmin, xmax, ymin, ymax, zmin, zmax]$, where:

- $xmin$ and $xmax$ are the minimum and the maximum limits along the x -axis respectively.
- $ymin$ and $ymax$ are the minimum and the maximum limits along the y -axis respectively.
- $zmin$ and $zmax$ are the minimum and the maximum limits along the z -axis respectively.

Output Arguments

indices — Indices of stored points

column vector

Indices of stored points, returned as a column vector. The vector contains the linear indices of the ROI points stored in the point cloud.

References

- [1] Muja, M. and David G. Lowe. "Fast Approximate Nearest Neighbors with Automatic Algorithm Configuration". In *VISAPP International Conference on Computer Vision Theory and Applications*. 2009. pp. 331-340.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

GPU Code Generation

Generate CUDA® code for NVIDIA® GPUs using GPU Coder™.

-

See Also

pointCloud

Introduced in R2020b

removeInvalidPoints

Remove invalid points from point cloud

Syntax

```
[ptCloudOut,indices] = removeInvalidPoints(ptCloud)
```

Description

`[ptCloudOut,indices] = removeInvalidPoints(ptCloud)` removes points with Inf or NaN coordinate values from point cloud and returns the indices of valid points.

Input Arguments

ptCloud — Point cloud

pointCloud object

Point cloud, specified as a pointCloud object.

Output Arguments

ptCloudOut — Point cloud with points removed

pointCloud object

Point cloud, returned as a pointCloud object with Inf or NaN coordinates removed.

Note The output is always an unorganized (X -by-3) point cloud. If the input `ptCloud` is an organized point cloud (M -by- N -by-3), the function returns the output as an unorganized point cloud.

indices — Indices of valid points

vector

Indices of valid points in the point cloud, specified as a vector.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

GPU Code Generation

Generate CUDA® code for NVIDIA® GPUs using GPU Coder™.

See Also

pointCloud

Introduced in R2020b

select

Select points in point cloud

Syntax

```
ptCloudOut = select(ptCloud,indices)
ptCloudOut = select(ptCloud,row,column)
ptCloudOut = select( __ , 'OutputSize',outputSize)
```

Description

`ptCloudOut = select(ptCloud,indices)` returns a `pointCloud` object containing only the points that are selected using linear indices.

`ptCloudOut = select(ptCloud,row,column)` returns a `pointCloud` object containing only the points that are selected using row and column subscripts. This syntax applies only if the input is an organized point cloud data of size M -by- N -by-3.

`ptCloudOut = select(__ , 'OutputSize',outputSize)` returns the selected points as a `pointCloud` object of size specified by `outputSize`.

Input Arguments

ptCloud — Point cloud

`pointCloud` object

Point cloud, specified as a `pointCloud` object.

indices — Indices of selected points

vector

Indices of selected points, specified as a vector.

row — Row indices

vector

Row indices, specified as a vector. This argument applies only if the input is an organized point cloud data of size M -by- N -by-3.

column — Column indices

vector

Column indices, specified as a vector. This argument applies only if the input is an organized point cloud data of size M -by- N -by-3.

outputSize — Size of output point cloud

'selected' (default) | 'full'

Size of the output point cloud, `ptCloudOut`, specified as 'selected' or 'full'.

- If the size is 'selected', then the output contains only the selected points from the input point cloud, ptCloud.
- If the size is 'full', then the output is same size as the input point cloud ptCloud. Cleared points are filled with NaN and the color is set to [0 0 0].

Output Arguments

ptCloudOut — Selected point cloud

pointCloud object

Point cloud, returned as a pointCloud object.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

GPU Code Generation

Generate CUDA® code for NVIDIA® GPUs using GPU Coder™.

See Also

pointCloud

Introduced in R2020b

Methods

select

Select subset of messages in rosbag

Syntax

```
bagreadersel = select(bagreader)
bagreadersel = select(bagreader,Name=Value)
```

Description

`bagreadersel = select(bagreader)` returns a `rosbagreader` object `bagreadersel`, that contains all of the messages in the `rosbagreader` object `bagreader`.

This function creates a copy of the `rosbagreader` object or returns a new `rosbagreader` object that contains the specified message selection.

`bagreadersel = select(bagreader,Name=Value)` specifies additional parameters using one or more name-value arguments. For example `Topic="/odom"` selects a subset of the messages, filtered by the topic `/odom`.

Examples

Create rosbag Selection Using rosbagreader Object

Load a rosbag log file and parse out specific messages based on the selected criteria.

Create a `rosbagreader` object of all the messages in the rosbag log file.

```
bagMsgs = rosbagreader("ros_multi_topics.bag")
```

```
bagMsgs =
    rosbagreader with properties:
```

```
    FilePath: 'B:\matlab\toolbox\robotics\robotexamples\ros\data\bags\ros_multi_topics.ba
    StartTime: 201.3400
    EndTime: 321.3400
    NumMessages: 36963
    AvailableTopics: [4x3 table]
    AvailableFrames: {0x1 cell}
    MessageList: [36963x4 table]
```

Select a subset of the messages based on their timestamp and topic.

```
bagMsgs2 = select(bagMsgs,...
    Time=[bagMsgs.StartTime bagMsgs.StartTime + 1],...
    Topic='/odom')
```

```
bagMsgs2 =
    rosbagreader with properties:
```


Name-Value Pair Arguments

Specify optional pairs of arguments as `Name1=Value1, . . . , NameN=ValueN`, where `Name` is the argument name and `Value` is the corresponding value. Name-value arguments must appear after other arguments, but the order of the pairs does not matter.

Example: `Topic="/odom"` selects a subset of the messages, filtered by the topic `/odom`.

MessageType — ROS message type

string scalar | character vector | cell array of string scalars | cell array of character vectors

ROS message type, specified as a string scalar, character vector, cell array of string scalars, or cell array of character vectors. Specify multiple message types by using a cell array.

Example: `select(bagreader, MessageType={"nav_msgs/Odometry", "rosgraph_msgs/Clock"})`

Data Types: char | string | cell

Time — Start and end times of rosbag selection

n-by-2 vector

Start and end times of the rosbag selection, specified as an *n*-by-2 vector.

Example: `select(bagreader, Time=[bag.StartTime, bag.StartTime+1])`

Data Types: double

Topic — ROS topic name

string scalar | character vector | cell array of string scalars | cell array of character vectors

ROS topic name, specified as a string scalar, character vector, cell array of string scalars, or cell array of character vectors. Specify multiple topic names by using a cell array.

Example: `select(bagreader, Topic={"/odom", "/clock"})`

Data Types: char | string | cell

Output Arguments

bagreadersel — Copy or subset of rosbag messages

rosbagreader object

Copy or subset of rosbag messages, returned as a rosbagreader object.

See Also

rosbagreader | readMessages | timeseries | canTransform | getTransform

Introduced in R2021b

delete

Remove rosbag writer object from memory

Syntax

```
delete(bagWriter)
```

Description

`delete(bagWriter)` removes the `rosbagwriter` object from memory. The function closes the opened rosbag file before deleting the object.

If multiple references to the `rosbagwriter` object exist in the workspace, deleting the `rosbagwriter` object invalidates the remaining reference. Use the `clear` command to delete the remaining references to the object from the workspace.

Examples

Write Log to rosbag File Using rosbagwriter Object

Retrieve all the information from the rosbag log file.

```
rosbag('info', 'path_record.bag')
```

```
Path:      C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\11\tp67325fbf\ros-ex73035957\path_record.bag
Version:   2.0
Duration:  10.5s
Start:     Jul 05 2021 08:09:52.86 (1625486992.86)
End:       Jul 05 2021 08:10:03.40 (1625487003.40)
Size:      13.3 KB
Messages:  102
Types:     geometry_msgs/Point [4a842b65f413084dc2b10fb484ea7f17]
Topics:    /circle 51 msgs : geometry_msgs/Point
           /line  51 msgs : geometry_msgs/Point
```

Create a `rosbagreader` object of all the messages in the rosbag log file.

```
reader = rosbagreader('path_record.bag');
```

Select all the messages related to the topic `'/circle'`.

```
bagSelCircle = select(reader, 'Topic', '/circle');
```

Retrieve the list of timestamps from the topic.

```
timeStamps = bagSelCircle.MessageList.Time;
```

Retrieve the messages in the selection as a cell array.

```
messages = readMessages(bagSelCircle);
```

Create a `rosbagwriter` object to write the messages to a new rosbag file.

```
circleWriter = rosbagwriter('circular_path_record.bag');
```

Write all the messages related to the topic '/circle' to the new rosbag file.

```
write(circleWriter, '/circle', timeStamps, messages);
```

Remove the rosbagwriter object from memory and clear the associated object.

```
delete(circleWriter)
clear circleWriter
```

Retrieve all the information from the new rosbag log file.

```
rosbag('info', 'circular_path_record.bag')
```

```
Path:      C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\11\tp67325fbf\ros-ex73035957\circular_path_record.bag
Version:   2.0
Duration:  10.4s
Start:     Jul 05 2021 08:09:52.86 (1625486992.86)
End:       Jul 05 2021 08:10:03.29 (1625487003.29)
Size:      8.8 KB
Messages:  51
Types:     geometry_msgs/Point [4a842b65f413084dc2b10fb484ea7f17]
Topics:    /circle 51 msgs : geometry_msgs/Point
```

Load the new rosbag log file.


```
readerCircle = rosbagreader('circular_path_record.bag');
```

Create a time series for the coordinates.

```
tsCircle = timeseries(readerCircle, 'X', 'Y');
```

Plot the coordinates.

```
plot(tsCircle.Data(:,1), tsCircle.Data(:,2))
axis equal
```

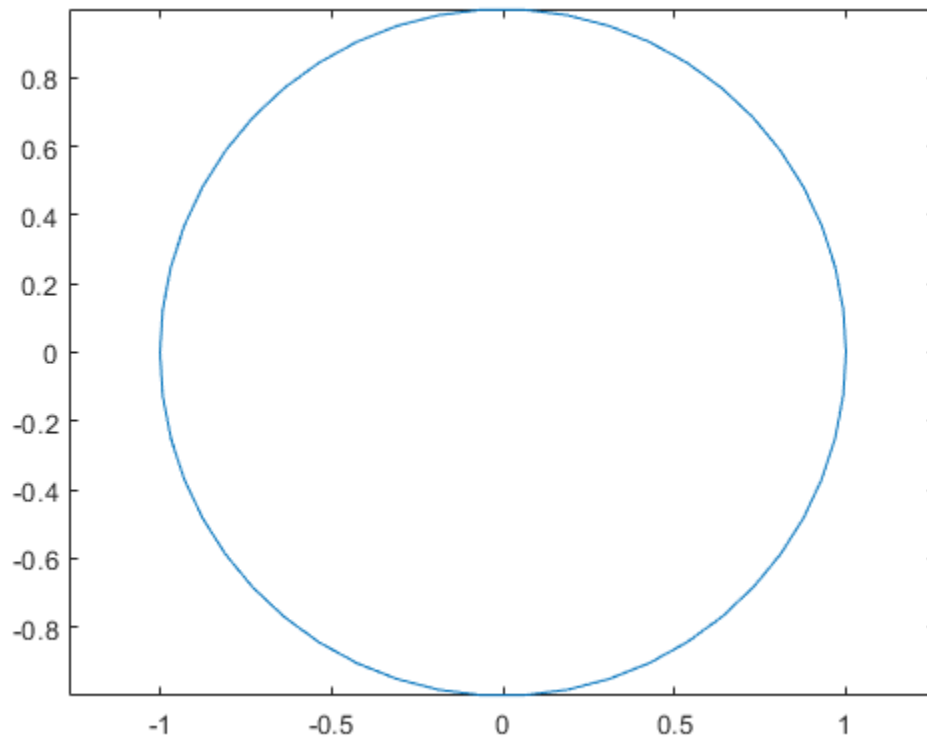

Create rosbag File Using rosbagwriter Object

Create a rosbagwriter object and a rosbag file in the current working directory. Specify the compression format of the message chunks and the size of each message chunk.

```
bagwriter = rosbagwriter("bagfile.bag", ...  
    "Compression", "lz4", ...  
    "ChunkSize", 1500)
```

```
bagwriter =  
  rosbagwriter with properties:
```

```
    FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex26181333\bagfile.bag'  
    StartTime: 0  
    EndTime: 0  
    NumMessages: 0  
    Compression: 'lz4'  
    ChunkSize: 1500  
    FileSize: 4117
```

Start node and connect to ROS master.

```
rosinit
```

```
Launching ROS Core...
..Done in 2.1716 seconds.
Initializing ROS master on http://172.30.135.140:53773.
Initializing global node /matlab_global_node_01395 with NodeURI http://bat6340win64:58142/
```

Write a single log to the rosbag file.

```
timeStamp = rostime("now");
rosMessage = rosmesssage("nav_msgs/Odometry");
write(bagwriter, "/odom", timeStamp, rosMessage);
bagwriter
```

```
bagwriter =
  rosbagwriter with properties:
```

```
    FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex26181333\bagfile.bag'
    StartTime: 1.6305e+09
    EndTime: 1.6305e+09
    NumMessages: 1
    Compression: 'lz4'
    ChunkSize: 1500
    FileSize: 4172
```

Shut down the ROS network.

```
rosshutdown
```

```
Shutting down global node /matlab_global_node_01395 with NodeURI http://bat6340win64:58142/
Shutting down ROS master on http://172.30.135.140:53773.
```

Remove rosbag writer object from memory and clear the associated object.

```
delete(bagwriter)
clear bagwriter
```

Create a rosbagreader object and load all the messages in the rosbag log file. Verify the recently written log.

```
bagreader = rosbagreader('bagfile.bag')
```

```
bagreader =
  rosbagreader with properties:
```

```
    FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex26181333\bagfile'
    StartTime: 1.6305e+09
    EndTime: 1.6305e+09
    NumMessages: 1
    AvailableTopics: [1x3 table]
    AvailableFrames: {0x1 cell}
    MessageList: [1x4 table]
```

```
bagreader.AvailableTopics
```

```
ans=1x3 table
```

<u>NumMessages</u>	<u>MessageType</u>	<u>MessageDefinition</u>
--------------------	--------------------	--------------------------

```
/odom      1      nav_msgs/Odometry  {' uint32 Seq...'}
```

Input Arguments

bagWriter – ROS log file writer

rosbagwriter object

ROS log file writer, specified as a rosbagwriter object.

See Also

Objects

rosbagwriter | rosbagreader

Functions

write

Introduced in R2021b

write

Write logs to rosbag log file

Syntax

```
write(bagwriter,topic,timestamp,message)
```

Description

`write(bagwriter,topic,timestamp,message)` writes a single or multiple logs to a rosbag log file. A log contains a topic, its corresponding timestamp, and a ROS message.

Examples

Write Log to rosbag File Using rosbagwriter Object

Retrieve all the information from the rosbag log file.

```
rosbag('info','path_record.bag')
```

```
Path:      C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\11\tp67325fbf\ros-ex73035957\path_record.bag
Version:   2.0
Duration:  10.5s
Start:     Jul 05 2021 08:09:52.86 (1625486992.86)
End:       Jul 05 2021 08:10:03.40 (1625487003.40)
Size:      13.3 KB
Messages:  102
Types:     geometry_msgs/Point [4a842b65f413084dc2b10fb484ea7f17]
Topics:    /circle 51 msgs : geometry_msgs/Point
           /line 51 msgs : geometry_msgs/Point
```

Create a `rosbagreader` object of all the messages in the rosbag log file.

```
reader = rosbagreader('path_record.bag');
```

Select all the messages related to the topic `'/circle'`.

```
bagSelCircle = select(reader,'Topic','/circle');
```

Retrieve the list of timestamps from the topic.

```
timeStamps = bagSelCircle.MessageList.Time;
```

Retrieve the messages in the selection as a cell array.

```
messages = readMessages(bagSelCircle);
```

Create a `rosbagwriter` object to write the messages to a new rosbag file.

```
circleWriter = rosbagwriter('circular_path_record.bag');
```

Write all the messages related to the topic `'/circle'` to the new rosbag file.

```
write(circleWriter, '/circle', timeStamps, messages);
```

Remove the rosbagwriter object from memory and clear the associated object.

```
delete(circleWriter)
clear circleWriter
```

Retrieve all the information from the new rosbag log file.

```
rosbag('info', 'circular_path_record.bag')
```

```
Path:      C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\11\tp67325fbf\ros-ex73035957\circular_path_recor
Version:   2.0
Duration:  10.4s
Start:     Jul 05 2021 08:09:52.86 (1625486992.86)
End:       Jul 05 2021 08:10:03.29 (1625487003.29)
Size:      8.8 KB
Messages:  51
Types:     geometry_msgs/Point [4a842b65f413084dc2b10fb484ea7f17]
Topics:    /circle 51 msgs : geometry_msgs/Point
```

Load the new rosbag log file.


```
readerCircle = rosbagreader('circular_path_record.bag');
```

Create a time series for the coordinates.

```
tsCircle = timeseries(readerCircle, 'X', 'Y');
```

Plot the coordinates.

```
plot(tsCircle.Data(:,1), tsCircle.Data(:,2))
axis equal
```

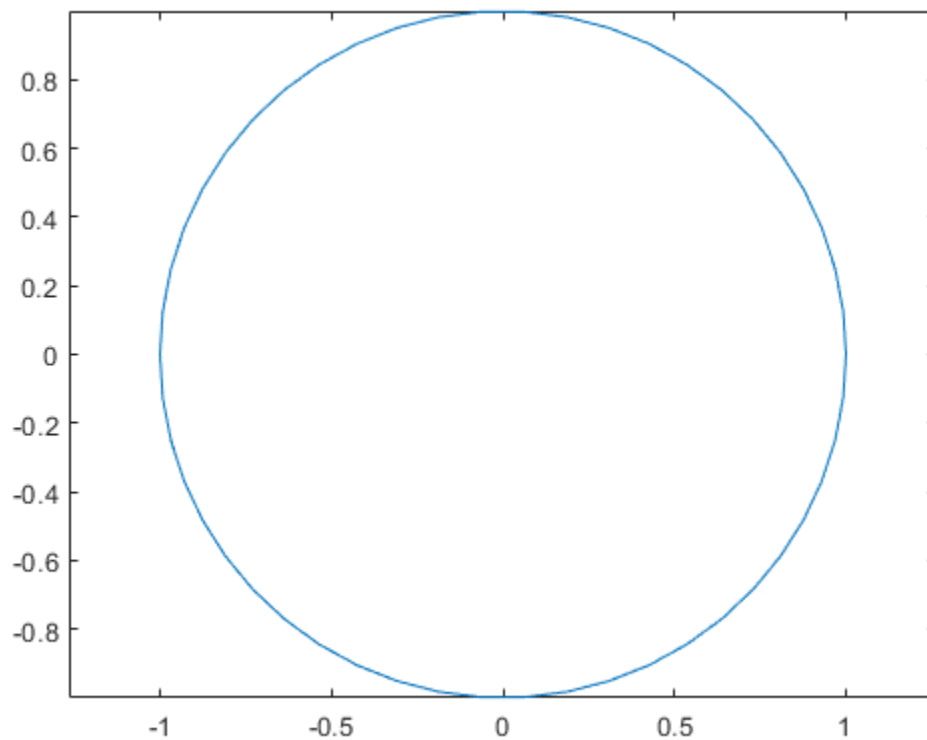

Create rosbag File Using rosbagwriter Object

Create a rosbagwriter object and a rosbag file in the current working directory. Specify the compression format of the message chunks and the size of each message chunk.

```
bagwriter = rosbagwriter("bagfile.bag", ...  
    "Compression", "lz4", ...  
    "ChunkSize", 1500)
```

```
bagwriter =  
    rosbagwriter with properties:
```

```
    FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex26181333\bagfile.bag'  
    StartTime: 0  
    EndTime: 0  
    NumMessages: 0  
    Compression: 'lz4'  
    ChunkSize: 1500  
    FileSize: 4117
```

Start node and connect to ROS master.

```
rosinit
```



```

Launching ROS Core...
..Done in 2.1716 seconds.
Initializing ROS master on http://172.30.135.140:53773.
Initializing global node /matlab_global_node_01395 with NodeURI http://bat6340win64:58142/

```

Write a single log to the rosbag file.

```

timeStamp = rostime("now");
rosMessage = rosmesssage("nav_msgs/Odometry");
write(bagwriter, "/odom", timeStamp, rosMessage);
bagwriter

```

```

bagwriter =
  rosbagwriter with properties:

```

```

    FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex26181333\bagfile.bag'
    StartTime: 1.6305e+09
    EndTime: 1.6305e+09
    NumMessages: 1
    Compression: 'lz4'
    ChunkSize: 1500
    FileSize: 4172

```

Shut down the ROS network.

```

rosshutdown

```

```

Shutting down global node /matlab_global_node_01395 with NodeURI http://bat6340win64:58142/
Shutting down ROS master on http://172.30.135.140:53773.

```

Remove rosbag writer object from memory and clear the associated object.

```

delete(bagwriter)
clear bagwriter

```

Create a rosbagreader object and load all the messages in the rosbag log file. Verify the recently written log.

```

bagreader = rosbagreader('bagfile.bag')

```

```

bagreader =
  rosbagreader with properties:

```

```

    FilePath: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\29\tp45948b2e\ros-ex26181333\bagfile
    StartTime: 1.6305e+09
    EndTime: 1.6305e+09
    NumMessages: 1
    AvailableTopics: [1x3 table]
    AvailableFrames: {0x1 cell}
    MessageList: [1x4 table]

```

```

bagreader.AvailableTopics

```

```

ans=1x3 table

```

NumMessages	MessageType	MessageDefinition
-------------	-------------	-------------------

```
/odom          1          nav_msgs/Odometry  {' uint32 Seq...'}

```

Input Arguments

bagwriter — ROS log file writer

rosbagwriter object

ROS log file writer, specified as a rosbagwriter object.

topic — ROS topic name

string scalar | character vector | cell array of string scalars | cell array of character vectors

ROS topic name, specified as a string scalar, character vector, cell array of string scalars, or cell array of character vectors. Specify multiple topic names by using a cell array.

Example: "/odom"

Example: {" /odom", "cmd_vel" }

timestamp — Timestamp of ROS message

Time object handle | numeric scalar | structure | cell array of Time object handles | cell array of numeric scalars | cell array of structures

Timestamp of the ROS message, specified as a Time object handle, numeric scalar, structure, cell array of Time object handles, cell array of numeric scalars, or cell array of structures. Specify multiple timestamps by using a cell array. Create a Time object using `rostime`.

Example: 1625559291

Example: `rostime("now")`

Example: `rostime("now", "DataFormat", "struct")`

Example: {1625559291, 1625559292}

Example: {`rostime("now")`, `rostime("now")+1`}

message — ROS message

Message object handle | structure | cell array of Message object handles | cell array of structures

ROS message, specified as a Message object handle, structure, cell array of Message object handles, or cell array of structures. Specify multiple messages by using a cell array. Create a Message object using `rosmesssage`.

Example: `rosmesssage("nav_msgs/Odometry")`

Example: `rosmesssage("nav_msgs/Odometry", "DataFormat", "struct")`

Example: {`rosmesssage("nav_msgs/Odometry")`, `rosmesssage("geometry_msgs/Twist")`}

See Also

Objects

rosbagwriter | rosbagreader

Functions

delete

Introduced in R2021b

reset

Reset Rate object

Syntax

```
reset(rate)
```

Description

`reset(rate)` resets the state of the Rate object, including the elapsed time and all statistics about previous periods. `reset` is useful if you want to run multiple successive loops at the same rate, or if the object is created before the loop is executed.

Input Arguments

rate – **rateControl** object

handle

`rateControl` object, specified as a handle. This object contains the information for the desired rate and other information about the execution. See `rateControl` for more information.

See Also

`rosrate` | `rateControl` | `waitfor`

Topics

“Execute Code at a Fixed-Rate” (Robotics System Toolbox)

Introduced in R2019b

statistics

Statistics of past execution periods


Syntax

```
stats = statistics(rate)
```

Description

`stats = statistics(rate)` returns statistics of previous periods of code execution. `stats` is a struct with these fields: `Periods`, `NumPeriods`, `AveragePeriod`, `StandardDeviation`, and `NumOverruns`.

Here is a sample execution graphic using the default setting, 'slip', for the `OverrunAction` property in the `Rate` object. See `OverrunAction` for more information on overrun code execution.

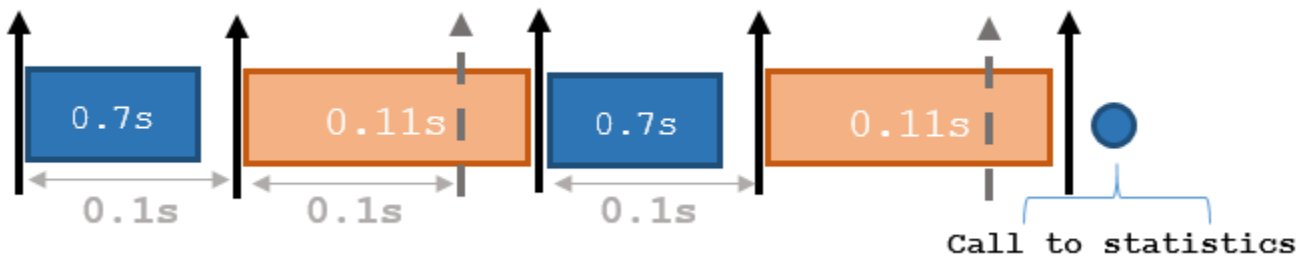

The output of `statistics` is:

```
stats =
    Periods: [0.7 0.11 0.7 0.11]
    NumPeriods: 4
    AveragePeriod: 0.09
    StandardDeviation: 0.0231
    NumOverruns: 2
```

Input Arguments

rate — Rate object

handle

Rate object, specified as an object handle. This object contains the information for the `DesiredRate` and other info about the execution. See `rateControl` for more information.

Output Arguments

stats — Time execution statistics

structure

Time execution statistics, returned as a structure. This structure contains the following fields:

- `Period` — All time periods (returned in seconds) used to calculate statistics as an indexed array. `stats.Period(end)` is the most recent period.
- `NumPeriods` — Number of elements in `Periods`
- `AveragePeriod` — Average time in seconds
- `StandardDeviation` — Standard deviation of all periods in seconds, centered around the mean stored in `AveragePeriod`
- `NumOverruns` — Number of periods with overrun

See Also

`rosclock` | `waitfor` | `rateControl`

Topics

“Execute Code at a Fixed-Rate” (Robotics System Toolbox)

Introduced in R2019b

waitfor

Package: `ros`

Pause code execution to achieve desired execution rate

Syntax

```
waitfor(rate)
numMisses = waitfor(rate)
```

Description

`waitfor(rate)` pauses execution until the code reaches the desired execution rate. The function accounts for the time that is spent executing code between `waitfor` calls.

`numMisses = waitfor(rate)` returns the number of iterations missed while executing code between calls.

Input Arguments

rate — Rate object

handle

Rate object, specified as a handle. This object contains the information for the desired rate and other information about the execution. See `rateControl` for more information.

Output Arguments

numMisses — Number of missed task executions

scalar

Number of missed task executions, returned as a scalar. `waitfor` returns the number of times the task was missed in the Rate object based on the `LastPeriod` time. For example, if the desired rate is 1 Hz and the last period was 3.2 seconds, `numMisses` returns 3.

See Also

`rosrate` | `rateControl` | `waitfor`

Topics

“Execute Code at a Fixed-Rate” (Robotics System Toolbox)

Introduced in R2019b

readMessages

Read messages from `ros2bag` object

Syntax

```
msgs = readMessages(bag)
msgs = readMessages(bag, rows)
```

Description

`msgs = readMessages(bag)` returns data from all of the messages in the `ros2bag` object `bag`. The messages are returned as a cell array of structures.

`msgs = readMessages(bag, rows)` returns data from the messages in the rows specified by `rows`. The range of the rows is `[1 bag.NumMessages]`.

Examples

Read Messages from ROS 2 Bag Log File

Extract the zip file that contains the ROS 2 bag log file and specify the full path to the log folder.

```
unzip('ros2_netwrk_bag.zip');
folderPath = fullfile(pwd, 'ros2_netwrk_bag');
```

Create a `ros2bag` object that contains all messages in the log file.

```
bag = ros2bag(folderPath);
```

Get information on the contents of the `ros2bag` object.

```
bag2info = ros2("bag", "info", folderPath)
```

```
bag2info = struct with fields:
    Path: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\11\tp67325fbf\ros-ex96596996\ros2_netwrk_ba
    Version: '1'
    StorageId: 'sqlite3'
    Duration: 207.9020
    Start: [1x1 struct]
    End: [1x1 struct]
    Size: 16839538
    Messages: 166867
    Types: [4x1 struct]
    Topics: [4x1 struct]
```

Get all the messages in the `ros2bag` object.

```
msgs = readMessages(bag);
```

Select a subset of the messages, filtered by topic.


```
bagSel = select(bag, "Topic", "/odom");
```

Get the messages in the selection.

```
msgsFiltered = readMessages(bagSel);
```

Input Arguments

bag — Messages in ros2bag object

ros2bag object

Messages in the ros2bag object, specified as a ros2bag object.

rows — Rows of ros2bag object

n-element vector

Rows of the ros2bag object, specified as an *n*-element vector. *n* is the number of rows to retrieve messages from. Each entry in the vector corresponds to a numbered message in the bag. The range of the rows is [1 bag.NumMessages].

Output Arguments

msgs — ROS 2 message data

cell array of structures

ROS 2 message data, returned as a cell array of structures.

See Also

Objects

ros2bag

Functions

select

Introduced in R2021a

select

Select subset of messages in `ros2bag`

Syntax

```
bagsel = select(bag)
bagsel = select(bag,Name,Value)
```

Description

`bagsel = select(bag)` returns a `ros2bag` object, `bagsel`, that contains all of the messages in the `ros2bag` object, `bag`.

This function creates a copy of the `ros2bag` object or returns a new `ros2bag` object that contains the specified message selection.

`bagsel = select(bag,Name,Value)` provides additional options specified by one or more name-value pair arguments. For example, "Topic", "/scan" selects a subset of the messages, filtered by the topic /scan.

Examples

Read Messages from ROS 2 Bag Log File

Extract the zip file that contains the ROS 2 bag log file and specify the full path to the log folder.

```
unzip('ros2_netwrk_bag.zip');
folderPath = fullfile(pwd,'ros2_netwrk_bag');
```

Create a `ros2bag` object that contains all messages in the log file.

```
bag = ros2bag(folderPath);
```

Get information on the contents of the `ros2bag` object.

```
bag2info = ros2("bag","info",folderPath)
```

```
bag2info = struct with fields:
    Path: 'C:\TEMP\Bdoc21b_1757077_3096\ib2EDA31\11\tp67325fbf\ros-ex96596996\ros2_netwrk_ba
    Version: '1'
    StorageId: 'sqlite3'
    Duration: 207.9020
    Start: [1x1 struct]
    End: [1x1 struct]
    Size: 16839538
    Messages: 166867
    Types: [4x1 struct]
    Topics: [4x1 struct]
```

Get all the messages in the `ros2bag` object.

```
msgs = readMessages(bag);
```

Select a subset of the messages, filtered by topic.

```
bagSel = select(bag, "Topic", "/odom");
```

Get the messages in the selection.

```
msgsFiltered = readMessages(bagSel);
```

Input Arguments

bag — Messages in ros2bag object

ros2bag object

Messages in the ros2bag object, specified as a ros2bag object.

Name-Value Pair Arguments

Specify optional comma-separated pairs of **Name**, **Value** arguments. **Name** is the argument name and **Value** is the corresponding value. **Name** must appear inside quotes. You can specify several name and value pair arguments in any order as **Name1**, **Value1**, ..., **NameN**, **ValueN**.

Example: `select(bag, "Topic", "/scan")` selects a subset of the messages, filtered by the topic / scan.

MessageType — ROS 2 message type

string scalar | character vector | cell array of string scalars | cell array of character vectors

ROS 2 message type, specified as a string scalar, character vector, cell array of string scalars, or cell array of character vectors. Multiple message types can be specified with a cell array.

Example: `select(bag, "MessageType", {"sensor_msgs/CameraInfo", "sensor_msgs/LaserScan"})`

Data Types: char | string | cell

Time — Start and end times of ros2bag selection

n-by-2 vector

Start and end times of the ros2bag selection, specified as an *n*-by-2 vector.

Example: `select(bag, "Time", [bag.MessageList(1,1).Time, bag.MessageList(2,1).Time])`

Data Types: uint64

Topic — ROS 2 topic name

string scalar | character vector | cell array of string scalars | cell array of character vectors

ROS 2 topic name, specified as a string scalar, character vector, cell array of string scalars, or cell array of character vectors. Multiple topic names can be specified with a cell array.

Example: `select(bag, "Topic", {" /scan", " /clock"})`

Data Types: char | string | cell

Output Arguments

bagset — Copy or subset of ros2bag messages

ros2bag object

Copy or subset of ros2bag messages, returned as a ros2bag object.

See Also

Objects

ros2bag

Functions

readMessages

Introduced in R2021a

send

Publish ROS 2 message to topic

Syntax

```
send(pub, msg)
```

Description

`send(pub, msg)` publishes a message to the topic specified by the publisher, `pub`. This message can be received by all subscribers in the ROS 2 network that are subscribed to the topic specified by `pub`.


Examples

Exchange Data with ROS 2 Publishers and Subscribers

The primary mechanism for ROS 2 nodes to exchange data is to send and receive *messages*. Messages are transmitted on a *topic* and each topic has a unique name in the ROS 2 network. If a node wants to share information, it must use a *publisher* to send data to a topic. A node that wants to receive that information must use a *subscriber* for that same topic. Besides its unique name, each topic also has a *message type*, which determines the type of messages that are allowed to be transmitted in the specific topic.

This publisher-subscriber communication has the following characteristics:

- Topics are used for many-to-many communication. Multiple publishers can send messages to the same topic and multiple subscribers can receive them.
- Publisher and subscribers are decoupled through topics and can be created and destroyed in any order. A message can be published to a topic even if there are no active subscribers.

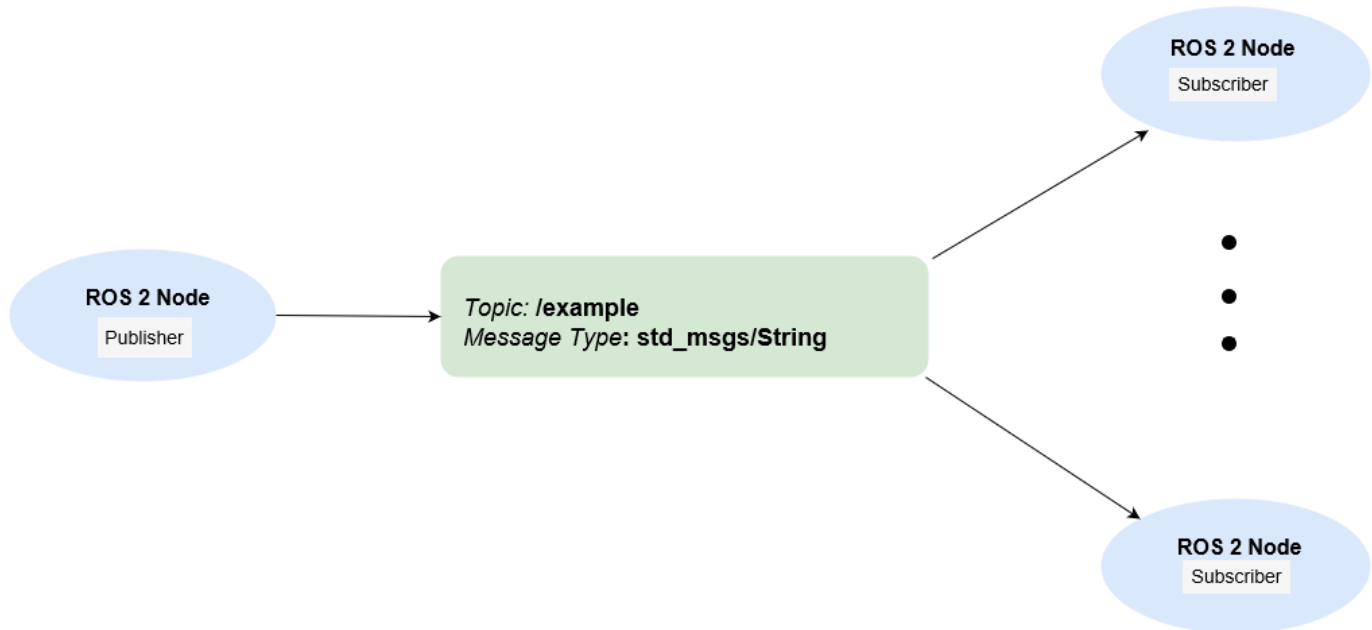

This example shows how to publish and subscribe to topics in a ROS 2 network. It also shows how to:

- Wait until a new message is received, or
- Use callbacks to process new messages in the background

Prerequisites: “Get Started with ROS 2”, “Connect to a ROS 2 Network”

Subscribe and Wait for Messages

Create a sample ROS 2 network with several publishers and subscribers.

```
exampleHelperROS2CreateSampleNetwork
```

Use `ros2 topic list` to see which topics are available.

```
ros2 topic list
```

```
/parameter_events
```

Assume you want to subscribe to the `/scan` topic. Use `ros2subscriber` to subscribe to the `/scan` topic. Specify the name of the node with the subscriber. If the topic already exists in the ROS 2 network, `ros2subscriber` detects its message type automatically, so you do not need to specify it.

```
detectNode = ros2node("/detection");
pause(2)
laserSub = ros2subscriber(detectNode, "/scan");
pause(2)
```

Use `receive` to wait for a new message. Specify a timeout of 10 seconds. The output `scanData` contains the received message data. `status` indicates whether a message was received successfully and `statustext` provides additional information about the status.

```
[scanData,status,statustext] = receive(laserSub,10);
```

You can now remove the subscriber `laserSub` and the node associated to it.

```
clear laserSub
clear detectNode
```

Subscribe Using Callback Functions

Instead of using `receive` to get data, you can specify a function to be called when a new message is received. This allows other MATLAB code to execute while the subscriber is waiting for new messages. Callbacks are essential if you want to use multiple subscribers.

Subscribe to the `/pose` topic, using the callback function `exampleHelperROS2PoseCallback`, which takes a received message as the input. One way of sharing data between your main workspace and the callback function is to use global variables. Define two global variables `pos` and `orient`.

```
controlNode = ros2node("/base_station");
poseSub = ros2subscriber(controlNode, "/pose", @exampleHelperROS2PoseCallback);
global pos
global orient
```

The global variables `pos` and `orient` are assigned in the `exampleHelperROS2PoseCallback` function when new message data is received on the `/pose` topic.

```
function exampleHelperROS2PoseCallback(message)
    % Declare global variables to store position and orientation
    global pos
    global orient

    % Extract position and orientation from the ROS message and assign the
    % data to the global variables.
    pos = [message.linear.x message.linear.y message.linear.z];
    orient = [message.angular.x message.angular.y message.angular.z];
end
```

Wait a moment for the network to publish another `/pose` message. Display the updated values.

```
pause(3)
disp(pos)

    -0.0178    0.0285   -0.0029

disp(orient)

    -0.0464   -0.0324    0.0222
```

If you type in `pos` and `orient` a few times in the command line you can see that the values are continuously updated.

Stop the pose subscriber by clearing the subscriber variable

```
clear poseSub
clear controlNode
```

Note: There are other ways to extract information from callback functions besides using globals. For example, you can pass a handle object as additional argument to the callback function. See the “Callback Definition” documentation for more information about defining callback functions.

Publish Messages

Create a publisher that sends ROS 2 string messages to the `/chatter` topic.

```
chatterPub = ros2publisher(node_1, "/chatter", "std_msgs/String");
```

Create and populate a ROS 2 message to send to the /chatter topic.

```
chatterMsg = ros2message(chatterPub);  
chatterMsg.data = 'hello world';
```

Use `ros2 topic list` to verify that the /chatter topic is available in the ROS 2 network.

```
ros2 topic list
```

```
/chatter  
/parameter_events  
/pose  
/scan
```

Define a subscriber for the /chatter topic. `exampleHelperROS2ChatterCallback` is called when a new message is received, and displays the string content in the message.

```
chatterSub = ros2subscriber(node_2, "/chatter", @exampleHelperROS2ChatterCallback)
```

```
chatterSub =
```

```
  ros2subscriber with properties:
```

```
    TopicName: '/chatter'  
    LatestMessage: []  
    MessageType: 'std_msgs/String'  
    NewMessageFcn: @exampleHelperROS2ChatterCallback  
    History: 'keeplast'  
    Depth: 10  
    Reliability: 'reliable'  
    Durability: 'volatile'
```

Publish a message to the /chatter topic. Observe that the string is displayed by the subscriber callback.

```
send(chatterPub, chatterMsg)  
pause(3)
```

```
ans =  
'hello world'
```

The `exampleHelperROS2ChatterCallback` function was called when the subscriber received the string message.

Disconnect From ROS 2 Network

Remove the sample nodes, publishers and subscribers from the ROS 2 network. Also clear the global variables `pos` and `orient`

```
clear global pos orient  
clear
```

Next Steps

- “Work with Basic ROS 2 Messages”

- “ROS 2 Custom Message Support”

Input Arguments

pub — **ros2publisher object**

ros2publisher

ros2publisher object, specified as a handle, that publishes the specified topic.

msg — **ROS 2 message**

Message structure

ROS 2 message, specified as a structure, with compatible fields for that message type.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

ros2publisher

Topics

“Exchange Data with ROS 2 Publishers and Subscribers”

“Manage Quality of Service Policies in ROS 2”

Introduced in R2019b

delete

Remove reference to ROS 2 node

Syntax

```
delete(node)
```

Description

`delete(node)` removes the reference in `node` to the ROS 2 node on the network. If no further references to the node exist, such as would be in publishers and subscribers, the node is shut down.

Input Arguments

node — ROS 2 node on network

handle (default)

A `ros2node` object on the network.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

See Also

`ros2node`

Introduced in R2019b

receive

Wait for new message

Syntax

```
msg = receive(sub)
msg = receive(sub, timeout)
[msg, status, statustext] = receive( ___ )
```

Description

`msg = receive(sub)` blocks code execution until a new message is received by the subscriber, `sub`, for the specific topic.

`msg = receive(sub, timeout)` specifies a `timeout` period, in seconds. If the subscriber does not receive a topic message and the timeout period elapses, the function displays an error message.

`[msg, status, statustext] = receive(___)` returns a `status` indicating whether a message has been received successfully, and a `statustext` that captures additional information about the `status`, using any of the arguments from the previous syntaxes. If an error condition occurs, such as no message received within the specified timeout, the `status` will be `false`, and this function will not display an error.


Examples

Exchange Data with ROS 2 Publishers and Subscribers

The primary mechanism for ROS 2 nodes to exchange data is to send and receive *messages*. Messages are transmitted on a *topic* and each topic has a unique name in the ROS 2 network. If a node wants to share information, it must use a *publisher* to send data to a topic. A node that wants to receive that information must use a *subscriber* for that same topic. Besides its unique name, each topic also has a *message type*, which determines the type of messages that are allowed to be transmitted in the specific topic.

This publisher-subscriber communication has the following characteristics:

- Topics are used for many-to-many communication. Multiple publishers can send messages to the same topic and multiple subscribers can receive them.
- Publisher and subscribers are decoupled through topics and can be created and destroyed in any order. A message can be published to a topic even if there are no active subscribers.

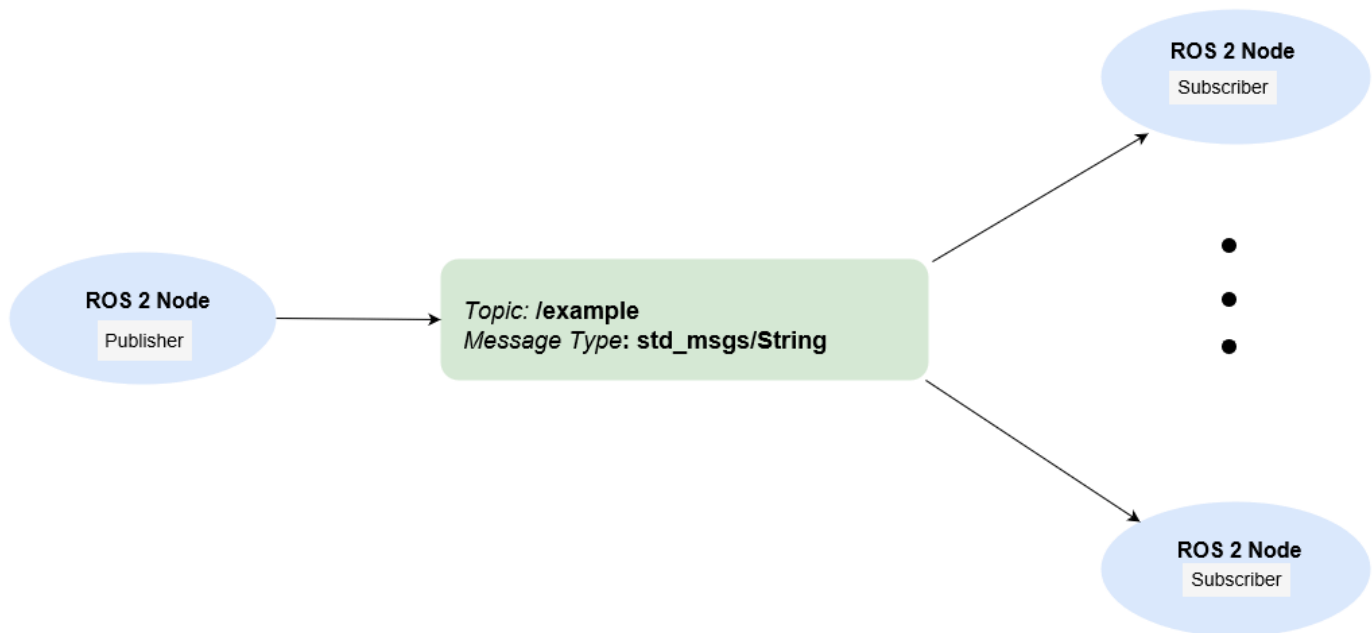

This example shows how to publish and subscribe to topics in a ROS 2 network. It also shows how to:

- Wait until a new message is received, or
- Use callbacks to process new messages in the background

Prerequisites: “Get Started with ROS 2”, “Connect to a ROS 2 Network”

Subscribe and Wait for Messages

Create a sample ROS 2 network with several publishers and subscribers.

```
exampleHelperROS2CreateSampleNetwork
```

Use `ros2 topic list` to see which topics are available.

```
ros2 topic list
```

```
/parameter_events
```

Assume you want to subscribe to the `/scan` topic. Use `ros2subscriber` to subscribe to the `/scan` topic. Specify the name of the node with the subscriber. If the topic already exists in the ROS 2 network, `ros2subscriber` detects its message type automatically, so you do not need to specify it.

```
detectNode = ros2node("/detection");
pause(2)
laserSub = ros2subscriber(detectNode, "/scan");
pause(2)
```

Use `receive` to wait for a new message. Specify a timeout of 10 seconds. The output `scanData` contains the received message data. `status` indicates whether a message was received successfully and `statustext` provides additional information about the status.

```
[scanData,status,statustext] = receive(laserSub,10);
```

You can now remove the subscriber `laserSub` and the node associated to it.

```
clear laserSub
clear detectNode
```

Subscribe Using Callback Functions

Instead of using `receive` to get data, you can specify a function to be called when a new message is received. This allows other MATLAB code to execute while the subscriber is waiting for new messages. Callbacks are essential if you want to use multiple subscribers.

Subscribe to the `/pose` topic, using the callback function `exampleHelperROS2PoseCallback`, which takes a received message as the input. One way of sharing data between your main workspace and the callback function is to use global variables. Define two global variables `pos` and `orient`.

```
controlNode = ros2node("/base_station");
poseSub = ros2subscriber(controlNode, "/pose", @exampleHelperROS2PoseCallback);
global pos
global orient
```

The global variables `pos` and `orient` are assigned in the `exampleHelperROS2PoseCallback` function when new message data is received on the `/pose` topic.

```
function exampleHelperROS2PoseCallback(message)
    % Declare global variables to store position and orientation
    global pos
    global orient

    % Extract position and orientation from the ROS message and assign the
    % data to the global variables.
    pos = [message.linear.x message.linear.y message.linear.z];
    orient = [message.angular.x message.angular.y message.angular.z];
end
```

Wait a moment for the network to publish another `/pose` message. Display the updated values.

```
pause(3)
disp(pos)

    -0.0178    0.0285   -0.0029

disp(orient)

    -0.0464   -0.0324    0.0222
```

If you type in `pos` and `orient` a few times in the command line you can see that the values are continuously updated.

Stop the pose subscriber by clearing the subscriber variable

```
clear poseSub
clear controlNode
```

Note: There are other ways to extract information from callback functions besides using globals. For example, you can pass a handle object as additional argument to the callback function. See the “Callback Definition” documentation for more information about defining callback functions.

Publish Messages

Create a publisher that sends ROS 2 string messages to the `/chatter` topic.

```
chatterPub = ros2publisher(node_1, "/chatter", "std_msgs/String");
```

Create and populate a ROS 2 message to send to the /chatter topic.

```
chatterMsg = ros2message(chatterPub);  
chatterMsg.data = 'hello world';
```

Use `ros2 topic list` to verify that the /chatter topic is available in the ROS 2 network.

```
ros2 topic list
```

```
/chatter  
/parameter_events  
/pose  
/scan
```

Define a subscriber for the /chatter topic. `exampleHelperROS2ChatterCallback` is called when a new message is received, and displays the string content in the message.

```
chatterSub = ros2subscriber(node_2, "/chatter", @exampleHelperROS2ChatterCallback)
```

```
chatterSub =
```

```
  ros2subscriber with properties:
```

```
    TopicName: '/chatter'  
    LatestMessage: []  
    MessageType: 'std_msgs/String'  
    NewMessageFcn: @exampleHelperROS2ChatterCallback  
    History: 'keeplast'  
    Depth: 10  
    Reliability: 'reliable'  
    Durability: 'volatile'
```

Publish a message to the /chatter topic. Observe that the string is displayed by the subscriber callback.

```
send(chatterPub, chatterMsg)  
pause(3)
```

```
ans =  
'hello world'
```

The `exampleHelperROS2ChatterCallback` function was called when the subscriber received the string message.

Disconnect From ROS 2 Network

Remove the sample nodes, publishers and subscribers from the ROS 2 network. Also clear the global variables `pos` and `orient`

```
clear global pos orient  
clear
```

Next Steps

- “Work with Basic ROS 2 Messages”

- “ROS 2 Custom Message Support”

Input Arguments

sub — ros2subscriber object

handle (default)

ros2subscriber object, specified as a handle, that subscribes to a specific topic.

timeout — Timeout period

positive scalar

The amount of time before the receiver function will error out if a message is not received.

Data Types: single | double | int8 | int16 | int32 | int64 | uint8 | uint16 | uint32 | uint64

Output Arguments

msg — ROS 2 message

Message object handle

ROS 2 message, specified as a Message object handle.

status — Status of the message reception

logical scalar

Status of the message reception, returned as a logical scalar. If no message is received, status will be false.

Note Use the `status` output argument when you use `receive` in the entry-point function for code generation. This will avoid runtime errors outputs the status instead, which can be reacted to in the calling code.

statustext — Status text associated with the message reception status

character vector

Status text associated with the message reception, returned as one of the following:

- 'success' — The message was successfully received.
- 'timeout' — The message was not received within the specified timeout.
- 'unknown' — The message was not received due to unknown errors.

Tips

Choosing between `receive` and using a callback:

- Use `receive` when your program should wait until the next message is received on the topic and no other processing should happen in the meantime.
- If you want your program to keep running and be notified whenever a new message arrives, consider using a callback instead of `receive`.

- If you want your program to periodically use the most recent data received by the subscriber, consider accessing the `LatestMessage` property instead of using `receive` or a callback.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using MATLAB® Coder™.

Usage notes and limitations:

- To monitor the message reception status and react in the calling code, use the `status` output argument. This will avoid runtime errors when no message is received.

See Also

`ros2subscriber`

Introduced in R2019b

hasFrame

Determine if another Velodyne point cloud is available in the ROS messages

Syntax

```
isAvailable = hasFrame(veloReader)
```

Description

`isAvailable = hasFrame(veloReader)` determines if another point cloud is available in the Velodyne ROS messages.

Examples

Work with Velodyne ROS Messages

Velodyne ROS messages store data in a format that requires some interpretation before it can be used for further processing. MATLAB® can help you by formatting Velodyne ROS messages for easy use. In this example, you can explore how `VelodyneScan` messages from a Velodyne LiDAR are handled.

Prerequisites: “Work with Basic ROS Messages”

Load Sample Messages

Load sample Velodyne messages. These messages are populated with data gathered from Velodyne LiDAR sensor.

```
load("lidarData_ConstructionRoad.mat")
```

VelodyneScan Messages

`VelodyneScan` messages are ROS messages that contain Velodyne LIDAR scan packets. You can see the standard ROS format for a `VelodyneScan` message by creating an empty message of the appropriate type. Use messages in structure format for better performance.

```
emptyveloScan = rosmesssage("velodyne_msgs/VelodyneScan", "DataFormat", "struct")
```

```
emptyveloScan = struct with fields:
  MessageType: 'velodyne_msgs/VelodyneScan'
  Header: [1x1 struct]
  Packets: [0x1 struct]
```

Since you created an empty message, `emptyveloScan` does not contain any meaningful data. For convenience, the loaded `lidarData_ConstructionRoad.mat` file contains a set of `VelodyneScan` messages that are fully populated and stored in the `msgs` variable. Each element in the `msgs` cell array is a `VelodyneScan` ROS message struct. The primary data in each `VelodyneScan` message is in the `Packets` property, it contains multiple `VelodynePacket` messages. You can see the standard ROS format for a `VelodynePacket` message by creating an empty message of the appropriate type.

```
emptyveloPkt = rosmesssage("velodyne_msgs/VelodynePacket", "DataFormat", "struct")
emptyveloPkt = struct with fields:
  MessageType: 'velodyne_msgs/VelodynePacket'
  Stamp: [1x1 struct]
  Data: [1206x1 uint8]
```

Create Velodyne ROS Message Reader

The `velodyneROSMesssageReader` object reads point cloud data from VelodyneScan ROS messages based on their specified model type. Note that providing an incorrect device model may result in improperly calibrated point clouds. This example uses messages from the "HDL32E" model.

```
veloReader = velodyneROSMesssageReader(msgs, "HDL32E")
veloReader =
  velodyneROSMesssageReader with properties:
    VelodyneMessages: {28x1 cell}
    DeviceModel: 'HDL32E'
    CalibrationFile: 'B:\matlab\toolbox\shared\pointclouds\utilities\velodyneFileReaderConfigur
    NumberOfFrames: 55
    Duration: 2.7477 sec
    StartTime: 1145.2 sec
    EndTime: 1147.9 sec
    Timestamps: [1145.2 sec    1145.2 sec    1145.3 sec    ...    ]
    CurrentTime: 1145.2 sec
```

Extract Point Clouds

You can extract point clouds from the raw packets message with the help of this `velodyneROSMesssageReader` object. By providing a specific frame number or timestamp, one point cloud can be extracted from `velodyneROSMesssageReader` object using the `readFrame` object function. If you call `readFrame` without a frame number or timestamp, it extracts the next point cloud in the sequence based on the `CurrentTime` property.

Create a duration scalar that represents one second after the first point cloud reading.

```
timeDuration = veloReader.StartTime + seconds(1);
```

Read the first point cloud recorded at or after the given time duration.

```
ptCloudObj = readFrame(veloReader,timeDuration);
```

Access Location data in the point cloud.

```
ptCloudLoc = ptCloudObj.Location;
```

Reset the `CurrentTime` property of `veloReader` to the default value

```
reset(veloReader)
```

Display All Point Clouds

You can also loop through all point clouds in the input Velodyne ROS messages.

Define x -, y -, and z -axes limits for `pcplayer` in meters. Label the axes.

```
xlimits = [-60 60];  
ylimits = [-60 60];  
zlimits = [-20 20];
```

Create the point cloud player.

```
player = pcplayer(xlimits,ylimits,zlimits);
```

Label the axes.


```
xlabel(player.Axes,"X (m)");  
ylabel(player.Axes,"Y (m)");  
zlabel(player.Axes,"Z (m)");
```

The first point cloud of interest is captured at 0.3 second into the input messages. Set the `CurrentTime` property to that time to begin reading point clouds from there.

```
veloReader.CurrentTime = veloReader.StartTime + seconds(0.3);
```

Display the point cloud stream for 2 seconds. To check if a new frame is available and continue past 2 seconds, remove the last `while` condition. Iterate through the file by calling `readFrame` to read in point clouds. Display them using the point cloud player.

```
while(hasFrame(veloReader) && isOpen(player) && (veloReader.CurrentTime < veloReader.StartTime +  
    ptCloudObj = readFrame(veloReader);  
    view(player,ptCloudObj.Location,ptCloudObj.Intensity);  
    pause(0.1);  
end
```

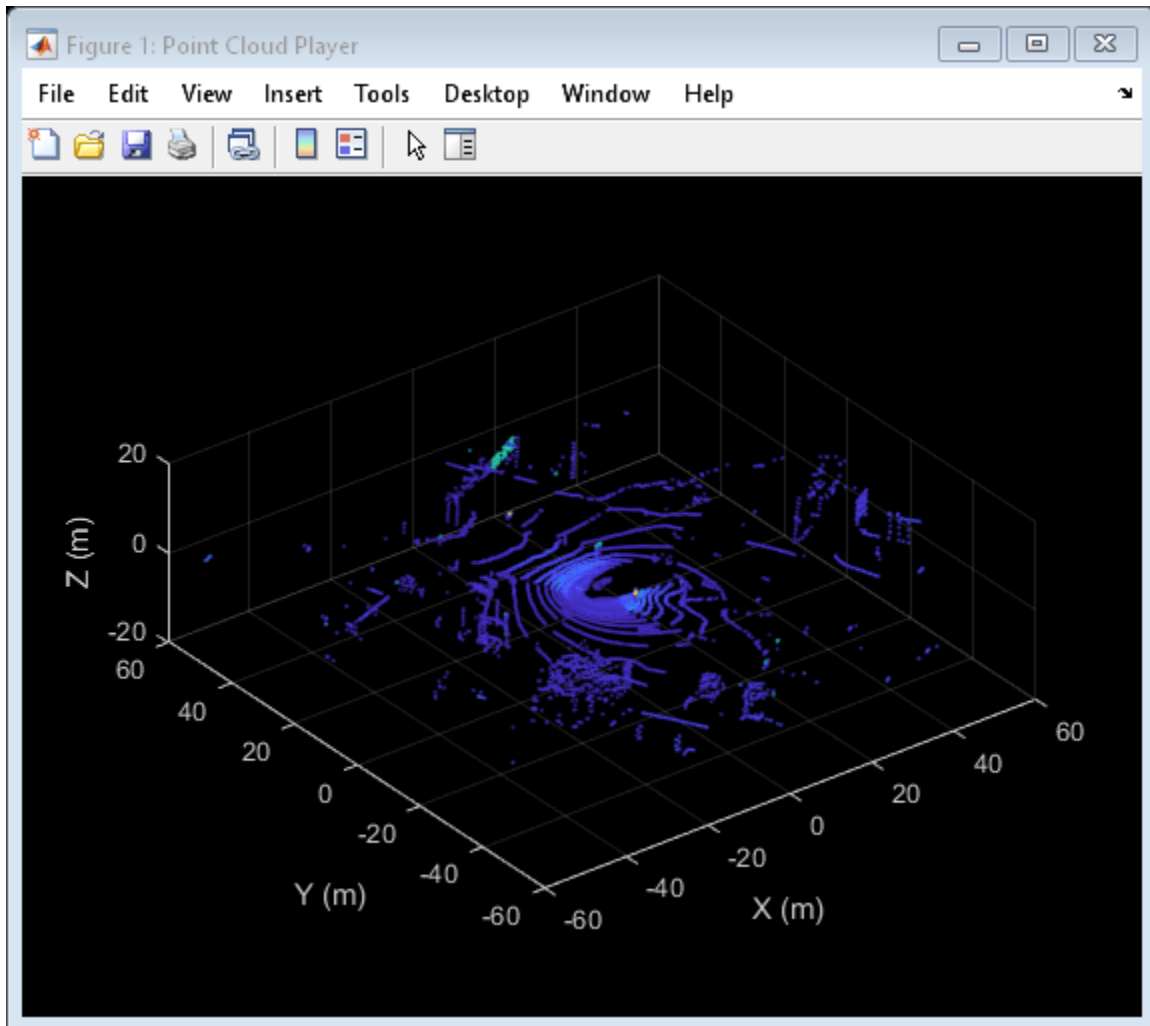

Input Arguments

veloReader — Velodyne ROS message reader

velodyneROSMessageReader object

Velodyne ROS message reader, specified as a velodyneROSMessageReader object.

Output Arguments

isAvailable — Indicator of frame availability

true or 1 | false or 0

Indicator of frame availability, returned as a logical 1 (true) when a later frame is available or a logical 0 (false) when a later frame is not available.

See Also

velodyneROSMessageReader | readFrame | reset

Introduced in R2020b

readFrame

Read point cloud frame from ROS message

Syntax

```
ptCloud = readFrame(veloReader)
ptCloud = readFrame(veloReader, frameNumber)
ptCloud = readFrame(veloReader, frameTime)
```

Description

`ptCloud = readFrame(veloReader)` reads the next point cloud frame from the Velodyne ROS messages and returns a `pointCloud` object. The next point cloud frame is the first point cloud available at or after the value of the `currentTime` property of the Velodyne ROS message reader object `veloReader`.

`ptCloud = readFrame(veloReader, frameNumber)` reads the point cloud with the specified frame number from the Velodyne ROS messages.

`ptCloud = readFrame(veloReader, frameTime)` reads the first point cloud available at or after the specified timestamp `frameTime`.

Examples

Work with Velodyne ROS Messages

Velodyne ROS messages store data in a format that requires some interpretation before it can be used for further processing. MATLAB® can help you by formatting Velodyne ROS messages for easy use. In this example, you can explore how `VelodyneScan` messages from a Velodyne LiDAR are handled.

Prerequisites: “Work with Basic ROS Messages”

Load Sample Messages

Load sample Velodyne messages. These messages are populated with data gathered from Velodyne LiDAR sensor.

```
load("lidarData_ConstructionRoad.mat")
```

VelodyneScan Messages

`VelodyneScan` messages are ROS messages that contain Velodyne LIDAR scan packets. You can see the standard ROS format for a `VelodyneScan` message by creating an empty message of the appropriate type. Use messages in structure format for better performance.

```
emptyveloScan = rosmessage("velodyne_msgs/VelodyneScan", "DataFormat", "struct")
```

```
emptyveloScan = struct with fields:
    MessageType: 'velodyne_msgs/VelodyneScan'
```

```
Header: [1x1 struct]
Packets: [0x1 struct]
```

Since you created an empty message, `emptyveloScan` does not contain any meaningful data. For convenience, the loaded `lidarData_ConstructionRoad.mat` file contains a set of `VelodyneScan` messages that are fully populated and stored in the `msgs` variable. Each element in the `msgs` cell array is a `VelodyneScan` ROS message struct. The primary data in each `VelodyneScan` message is in the `Packets` property, it contains multiple `VelodynePacket` messages. You can see the standard ROS format for a `VelodynePacket` message by creating an empty message of the appropriate type.

```
emptyveloPkt = rosmessage("velodyne_msgs/VelodynePacket", "DataFormat", "struct")
```

```
emptyveloPkt = struct with fields:
  MessageType: 'velodyne_msgs/VelodynePacket'
  Stamp: [1x1 struct]
  Data: [1206x1 uint8]
```

Create Velodyne ROS Message Reader

The `velodyneROSMessageReader` object reads point cloud data from `VelodyneScan` ROS messages based on their specified model type. Note that providing an incorrect device model may result in improperly calibrated point clouds. This example uses messages from the "HDL32E" model.

```
veloReader = velodyneROSMessageReader(msgs, "HDL32E")
```

```
veloReader =
  velodyneROSMessageReader with properties:

  VelodyneMessages: {28x1 cell}
  DeviceModel: 'HDL32E'
  CalibrationFile: 'B:\matlab\toolbox\shared\pointclouds\utilities\velodyneFileReaderConfiguratio
  NumberOfFrames: 55
  Duration: 2.7477 sec
  StartTime: 1145.2 sec
  EndTime: 1147.9 sec
  Timestamps: [1145.2 sec    1145.2 sec    1145.3 sec    ...    ]
  CurrentTime: 1145.2 sec
```

Extract Point Clouds

You can extract point clouds from the raw packets message with the help of this `velodyneROSMessageReader` object. By providing a specific frame number or timestamp, one point cloud can be extracted from `velodyneROSMessageReader` object using the `readFrame` object function. If you call `readFrame` without a frame number or timestamp, it extracts the next point cloud in the sequence based on the `CurrentTime` property.

Create a duration scalar that represents one second after the first point cloud reading.

```
timeDuration = veloReader.StartTime + seconds(1);
```

Read the first point cloud recorded at or after the given time duration.

```
ptCloudObj = readFrame(veloReader, timeDuration);
```

Access Location data in the point cloud.

```
ptCloudLoc = ptCloudObj.Location;
```

Reset the `CurrentTime` property of `veloReader` to the default value

```
reset(veloReader)
```

Display All Point Clouds

You can also loop through all point clouds in the input Velodyne ROS messages.

Define x -, y -, and z -axes limits for `pcplayer` in meters. Label the axes.

```
xlimits = [-60 60];  
ylimits = [-60 60];  
zlimits = [-20 20];
```

Create the point cloud player.

```
player = pcplayer(xlimits,ylimits,zlimits);
```

Label the axes.


```
xlabel(player.Axes,"X (m)");  
ylabel(player.Axes,"Y (m)");  
zlabel(player.Axes,"Z (m)");
```

The first point cloud of interest is captured at 0.3 second into the input messages. Set the `CurrentTime` property to that time to begin reading point clouds from there.

```
veloReader.CurrentTime = veloReader.StartTime + seconds(0.3);
```

Display the point cloud stream for 2 seconds. To check if a new frame is available and continue past 2 seconds, remove the last `while` condition. Iterate through the file by calling `readFrame` to read in point clouds. Display them using the point cloud player.

```
while(hasFrame(veloReader) && isOpen(player) && (veloReader.CurrentTime < veloReader.StartTime +  
    ptCloudObj = readFrame(veloReader);  
    view(player,ptCloudObj.Location,ptCloudObj.Intensity);  
    pause(0.1);  
end
```

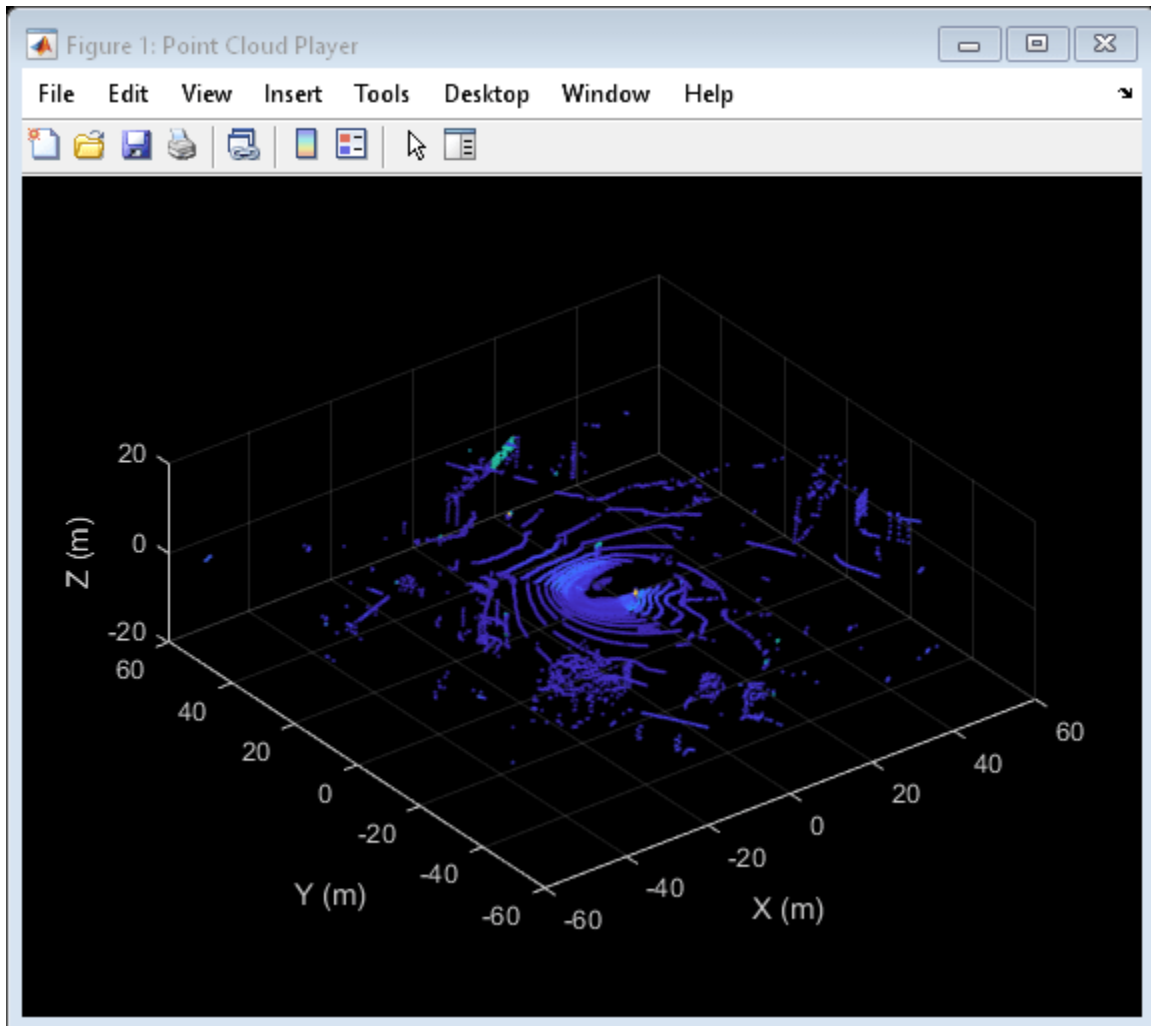Input Arguments

veloReader — Velodyne ROS message reader

`velodyneROSMesasgeReader` object

Velodyne ROS message reader, specified as a `velodyneROSMesageReader` object.

frameNumber — Frame number of desired point cloud

positive integer

Frame number of the desired point cloud, specified as a positive integer. Frame numbers are sequential in the `velodyneROSMesageReader` object.

frameTime — Frame time of desired point cloud

`duration` scalar

Frame time of the desired point cloud, specified as a `duration` scalar in seconds. The function return the first frame available at or after the specified timestamp.

Output Arguments

ptCloud — Point Cloud

pointCloud object

Point cloud, returned as pointCloud object.

See Also

velodyneROSMessageReader | pointCloud | hasFrame | reset

Introduced in R2020b

reset

Reset CurrentTime property of velodyneROSMessageReader object to default value

Syntax

```
reset(veloReader)
```

Description

reset(veloReader) resets the CurrentTime property of the specified velodyneROSMessageReader object to the default value. The default value is the value of the StartTime property of the velodyneROSMessageReader object.

Examples

Work with Velodyne ROS Messages

Velodyne ROS messages store data in a format that requires some interpretation before it can be used for further processing. MATLAB® can help you by formatting Velodyne ROS messages for easy use. In this example, you can explore how VelodyneScan messages from a Velodyne LiDAR are handled.

Prerequisites: “Work with Basic ROS Messages”

Load Sample Messages

Load sample Velodyne messages. These messages are populated with data gathered from Velodyne LiDAR sensor.

```
load("lidarData_ConstructionRoad.mat")
```

VelodyneScan Messages

VelodyneScan messages are ROS messages that contain Velodyne LIDAR scan packets. You can see the standard ROS format for a VelodyneScan message by creating an empty message of the appropriate type. Use messages in structure format for better performance.

```
emptyveloScan = rosmesssage("velodyne_msgs/VelodyneScan", "DataFormat", "struct")
```

```
emptyveloScan = struct with fields:
  MessageType: 'velodyne_msgs/VelodyneScan'
  Header: [1x1 struct]
  Packets: [0x1 struct]
```

Since you created an empty message, emptyveloScan does not contain any meaningful data. For convenience, the loaded lidarData_ConstructionRoad.mat file contains a set of VelodyneScan messages that are fully populated and stored in the msgs variable. Each element in the msgs cell array is a VelodyneScan ROS message struct. The primary data in each VelodyneScan message is in the Packets property, it contains multiple VelodynePacket messages. You can see the standard ROS format for a VelodynePacket message by creating an empty message of the appropriate type.

```
emptyveloPkt = rosmesssage("velodyne_msgs/VelodynePacket", "DataFormat", "struct")
emptyveloPkt = struct with fields:
  MessageType: 'velodyne_msgs/VelodynePacket'
  Stamp: [1x1 struct]
  Data: [1206x1 uint8]
```

Create Velodyne ROS Message Reader

The `velodyneROSMesssageReader` object reads point cloud data from VelodyneScan ROS messages based on their specified model type. Note that providing an incorrect device model may result in improperly calibrated point clouds. This example uses messages from the "HDL32E" model.

```
veloReader = velodyneROSMesssageReader(msgs, "HDL32E")
veloReader =
  velodyneROSMesssageReader with properties:
    VelodyneMessages: {28x1 cell}
    DeviceModel: 'HDL32E'
    CalibrationFile: 'B:\matlab\toolbox\shared\pointclouds\utilities\velodyneFileReaderConfigur
    NumberOfFrames: 55
    Duration: 2.7477 sec
    StartTime: 1145.2 sec
    EndTime: 1147.9 sec
    Timestamps: [1145.2 sec    1145.2 sec    1145.3 sec    ...    ]
    CurrentTime: 1145.2 sec
```

Extract Point Clouds

You can extract point clouds from the raw packets message with the help of this `velodyneROSMesssageReader` object. By providing a specific frame number or timestamp, one point cloud can be extracted from `velodyneROSMesssageReader` object using the `readFrame` object function. If you call `readFrame` without a frame number or timestamp, it extracts the next point cloud in the sequence based on the `CurrentTime` property.

Create a duration scalar that represents one second after the first point cloud reading.

```
timeDuration = veloReader.StartTime + seconds(1);
```

Read the first point cloud recorded at or after the given time duration.

```
ptCloudObj = readFrame(veloReader,timeDuration);
```

Access Location data in the point cloud.

```
ptCloudLoc = ptCloudObj.Location;
```

Reset the `CurrentTime` property of `veloReader` to the default value

```
reset(veloReader)
```

Display All Point Clouds

You can also loop through all point clouds in the input Velodyne ROS messages.

Define *x*-, *y*-, and *z*-axes limits for `pcplayer` in meters. Label the axes.

```
xlimits = [-60 60];  
ylimits = [-60 60];  
zlimits = [-20 20];
```

Create the point cloud player.

```
player = pcplayer(xlimits,ylimits,zlimits);
```

Label the axes.


```
xlabel(player.Axes,"X (m)");  
ylabel(player.Axes,"Y (m)");  
zlabel(player.Axes,"Z (m)");
```

The first point cloud of interest is captured at 0.3 second into the input messages. Set the `CurrentTime` property to that time to begin reading point clouds from there.

```
veloReader.CurrentTime = veloReader.StartTime + seconds(0.3);
```

Display the point cloud stream for 2 seconds. To check if a new frame is available and continue past 2 seconds, remove the last `while` condition. Iterate through the file by calling `readFrame` to read in point clouds. Display them using the point cloud player.

```
while(hasFrame(veloReader) && isOpen(player) && (veloReader.CurrentTime < veloReader.StartTime +  
    ptCloudObj = readFrame(veloReader);  
    view(player,ptCloudObj.Location,ptCloudObj.Intensity);  
    pause(0.1);  
end
```

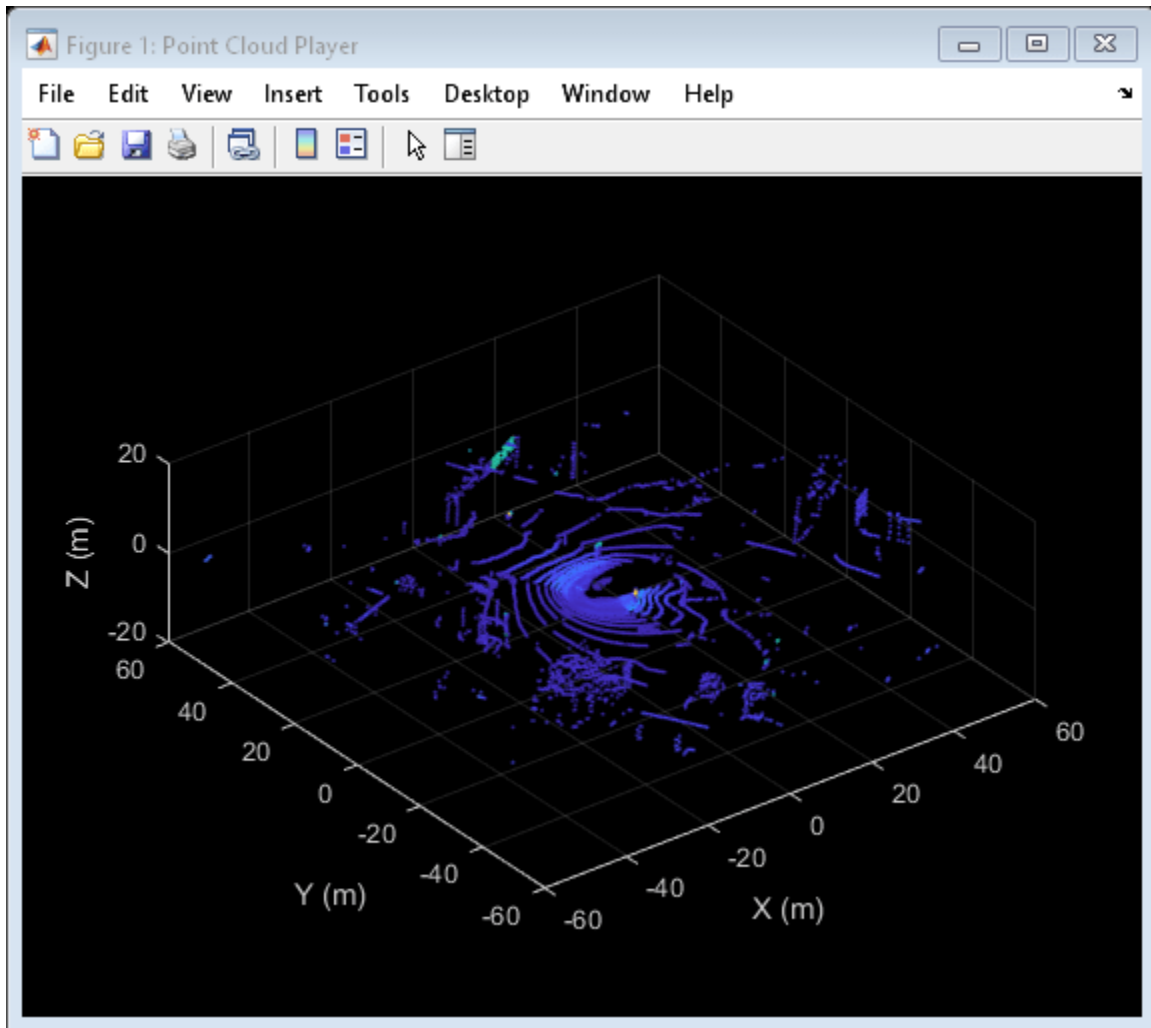

Input Arguments

veloReader — Velodyne ROS message reader

`velodyneROSMessageReader` object

Velodyne ROS message reader, specified as a `velodyneROSMessageReader` object.

See Also

`velodyneROSMessageReader` | `readFrame` | `hasFrame`

 
Introduced in R2020b

Blocks

Blank Message

Create blank message using specified message type

Library: ROS Toolbox / ROS



Description

The Blank Message block creates a Simulink nonvirtual bus corresponding to the selected ROS message type. The block creates ROS message buses that work with Publish, Subscribe, or Call Service blocks. On each sample hit, the block outputs a blank or “zero” signal for the designated message type. All elements of the bus are initialized to 0. The lengths of the variable-length arrays are also initialized to 0.

Limitations

Before R2016b, models using ROS message types with certain reserved property names could not generate code. In 2016b, this limitation has been removed. The property names are now appended with an underscore (e.g. `Vector3Stamped_`). If you use models created with a pre-R2016b release, update the ROS message types using the new names with an underscore. Redefine custom maximum sizes for variable length arrays.

The affected message types are:

- 'geometry_msgs/Vector3Stamped'
- 'jsk_pcl_ros/TransformScreenpointResponse'
- 'pddl_msgs/PDDLAction'
- 'rocon_interaction_msgs/Interaction'
- 'capabilities/GetRemappingsResponse'
- 'dynamic_reconfigure/Group'

Input/Output Ports

Output

Msg — Blank ROS message

nonvirtual bus

Blank ROS message, returned as a nonvirtual bus. To specify the type of ROS message, use the **Message type** parameter. All elements of the bus are initialized to 0. The lengths of the variable-length arrays are also initialized to 0.

Data Types: bus

Parameters

Class — Class of ROS message

Message (default) | Service Request | Service Response

Class of ROS message, specified as Message, Service Request, or Service Response. For basic publishing and subscribing, use the Message class.

Type — ROS message type

'geometry_msgs/Point' (default) | character vector | dialog box selection

ROS message type, specified as a character vector or a dialog box selection. Use **Select** to select from a list of supported ROS messages. The list of messages given depends on the **Class** of message you select.

Sample time — Interval between outputs

Inf (default) | numeric scalar

Interval between outputs, specified as a numeric scalar. The default value indicates that the block output never changes. Using this value speeds simulation and code generation by eliminating the need to recompute the block output. Otherwise, the block outputs a new blank message at each interval of **Sample time**.

For more information, see “Specify Sample Time” (Simulink).

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Publish | Subscribe | Call Service

Topics

“Get Started with ROS in Simulink®”

“Work with ROS Messages in Simulink®”

“Connect to a ROS-enabled Robot from Simulink®”

“Types of Composite Signals” (Simulink)

Introduced in R2019b

Blank Message

Create blank ROS 2 message using specified message type

Library: ROS Toolbox / ROS 2



Description

The Blank Message block creates a Simulink nonvirtual bus corresponding to the selected ROS message type. The block creates ROS message buses that work with Publish, Subscribe and Call Service blocks.

Ports

Output

Msg — Blank ROS 2 message

non-virtual bus

Blank ROS 2 message, returned as a non-virtual bus. To specify the type of ROS message, use the **Message type** parameter. All elements of the bus are initialized to 0. The lengths of the variable-length arrays are also initialized to 0.

Data Types: bus

Parameters

Class — Class of ROS 2 message

Message (default) | Service Request | Service Response

Class of ROS 2 message, specified as Message, Service Request, or Service Response. For basic publishing and subscribing, use the Message class. To create a service request message for Call Service input, use the Service Request class.

Message type — ROS 2 message type

'geometry_msgs/Point' (default) | character vector | dialog box selection

ROS 2 message type, specified as a character vector or a dialog box selection. Use **Select** to select from a list of supported ROS messages. The list of messages given depends on the **Class** of message you select.

Sample time — Interval between outputs

Inf (default) | positive numeric scalar

Interval between outputs, specified as a numeric scalar. The default value indicates that the block output never changes. Using this value speeds simulation and code generation by eliminating the need to recompute the block output. Otherwise, the block outputs a new blank message at each interval of **Sample time**.

For more information, see “Specify Sample Time” (Simulink).

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also


[Publish](#) | [Subscribe](#) | [Call Service](#)

Introduced in R2019b

Call Service

Call service in ROS network

 Library: ROS Toolbox / ROS



Description

The Call Service block takes a ROS service request message, sends it to the ROS service server, and waits for a response. Connect to a ROS network using `rosinit`. A ROS server should be set up somewhere on the network before using this block. Check the available services on a ROS network using `rosservice`. Use `rossvcserver` to set up a service server in MATLAB.

Specify the name for your ROS service and the service type in the block mask. If connected to a ROS network, you can select from a list of available services. You can create a blank service request or response message to populate with data using the Blank Message block.

Ports

Input

Req — Request message

nonvirtual bus

Request message, specified as a nonvirtual bus. The request message type corresponds to your service type. To generate an empty request message bus to populate with data, use the Blank Message block.

Data Types: bus

Output

Resp — Response message

nonvirtual bus

Response message, returned as a nonvirtual bus. The response is based on the input **Req** message. The response message type corresponds to your service type. To generate an empty response message bus to populate with data, use the Blank Message block.

Data Types: bus

ErrorCode — Error conditions for service call

integer

Error conditions for service call, specified as an integer. Each integer corresponds to a different error condition for the service connection or the status of the service call. If an error condition occurs, **Resp** outputs the last response message or a blank message if a response was not previously received.

Error Codes:

Error Code	Condition
0	The service response was successfully retrieved and is available in the Resp output.
1	The connection was not established within the specified Connection timeout.
2	The response from the server was not received.
3	The service call failed for unknown reasons.

Dependencies

This output is enabled when the **Show ErrorCode output port** check box is on.

Data Types: uint8

Parameters**Source — Source for specifying service name**

Select from ROS network | Specify your own

Source for specifying the service name:

- Select from ROS network — Use **Select** to select a service name. The **Name** and **Type** parameters are set automatically. You must be connected to a ROS network.
- Specify your own — Enter a service name in **Name** and specify its service type in **Type**. You must match a service name exactly.

Name — Service name

character vector

Service name, specified as a character vector. The service name must match a service name available on the ROS service server. To see a list of valid services in a ROS network, see `rosservice`.

Type — Service type

character vector

Service type, specified as a character vector. Each service name has a corresponding type.

Connection timeout — Timeout for service server connection

5 (default) | positive numeric scalar

Timeout for service server connection, specified as a positive numeric scalar in seconds. If a connection cannot be established with the ROS service server in this time, then **ErrorCode** outputs 1.

Keep persistent connection — Keep connection to service server

off (default) | on

Check this box to maintain a persistent connection with the ROS service server. When off, the block creates a service client every time a request message is input into **Req**.

Show ErrorCode output port — Enable error code output port

on (default) | off

Check this box to output the **ErrorCode** output. If an error condition occurs, **Resp** outputs the last response message or a blank message if response was not previously received.

Extended Capabilities**C/C++ Code Generation**

Generate C and C++ code using Simulink® Coder™.

See Also**Blocks**

Blank Message | Publish | Subscribe

Functions

rosservice | rossvcclient | rossvcserver

Topics

“Call and Provide ROS Services”

 
“Publish and Subscribe to ROS Messages in Simulink”

Introduced in R2019b

Call Service

Call service in ROS 2 network

Library: ROS Toolbox / ROS 2



Description

The Call Service block takes a ROS 2 service request message, sends it to the ROS 2 service server, and waits for a response. A ROS 2 service server should be set up somewhere on the network before using this block. Check the available services on a ROS 2 network by executing `ros2 service list` command, which uses `ros2` function. Use `ros2svcsrv` to set up a service server in MATLAB.

Specify the name for your ROS 2 service and the service type in the block mask. If connected to a ROS 2 network, you can select from a list of available services. You can create a blank service request or response message to populate with data using the Blank Message block.

Always specify the quality of service (QoS) parameters in the block mask. QoS parameters for this block must be compatible with the service server to send requests and receive responses.

Ports

Input

Req — Request message

nonvirtual bus

Request message, specified as a nonvirtual bus. The request message type corresponds to your service type. To generate an empty request message bus to populate with data, use the Blank Message block.

Data Types: bus

Output

Resp — Response message

nonvirtual bus

Response message, returned as a nonvirtual bus. The response is based on the input **Req** message. The response message type corresponds to your service type. To generate an empty response message bus to populate with data, use the Blank Message block.

Data Types: bus

ErrorCode — Error conditions for service call

integer

Error conditions for service call, specified as an integer. Each integer corresponds to a different error condition for the service connection or the status of the service call. If an error condition occurs,

Resp outputs the last response message or a blank message if a response was not previously received.

Error Codes:

Error Code	Condition
0	The service response was successfully retrieved and is available in the Resp output.
1	The connection was not established within the specified Connection timeout.
2	The response from the server was not received.

Dependencies

This output is enabled when the **Show ErrorCode output port** check box is on.

Data Types: uint8

Parameters

Main

Source — Source for specifying service name

Select from ROS network | Specify your own

Source for specifying the service name:

- Select from ROS network — Use **Select** to select a service name. The **Name** and **Type** parameters are set automatically. You must be connected to a ROS 2 network.
- Specify your own — Enter a service name in **Name** and specify its service type in **Type**. You must match a service name exactly.

Name — Service name

character vector

Service name, specified as a character vector. The service name must match a service name available on the ROS service server. To see a list of valid services in a ROS 2 network, see `ros2`.

Type — Service type

character vector

Service type, specified as a character vector. Each service name has a corresponding type.

Connection timeout — Timeout for service server connection

5 (default) | positive numeric scalar

Timeout for service server connection, specified as a positive numeric scalar in seconds. If a connection cannot be established with the ROS service server in this time, then **ErrorCode** outputs 1.

Show ErrorCode output port — Enable error code output port

on (default) | off

Check this box to output the **ErrorCode** output. If an error condition occurs, **Resp** outputs the last response message or a blank message if response was not previously received.

Quality of Service (QoS)

History — Mode of storing requests in the queue

Keep last (default) | Keep all

Determines the mode of storing requests in the queue. If the queue fills with requests waiting to be processed, then old requests will be dropped to make room for new. If set to `Keep last`, the queue stores the number of requests set by the `Depth` parameter. If set to `Keep all`, the queue stores all requests up to the MATLAB resource limits.

Depth — Size of the request queue

1 (default) | positive scalar

Number of requests stored in the request queue when `History` is set to `Keep last`.

Reliability — Delivery guarantee of requests

Reliable (default) | Best effort

Affects the guarantee of request delivery. If `Reliable`, then delivery is guaranteed, but may retry multiple times. If `Best effort`, then attempt delivery and do not retry. `Reliable` setting is recommended for services.

Durability — Persistence of requests

Volatile (default) | Transient local

Affects persistence of requests, which allows late-starting servers to receive the number of old requests specified by `Depth`. If `Volatile`, then requests do not persist. If `Transient local`, then the block will persist most recent requests.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Blank Message | Publish | Subscribe

Functions


ros2 | ros2svcclient | ros2svcservice

Introduced in R2021b

Coordinate Transformation Conversion

Convert to a specified coordinate transformation representation

 Library: Robotics System Toolbox / Utilities
 Navigation Toolbox / Utilities
 ROS Toolbox / Utilities
 UAV Toolbox / Utilities



Description

The Coordinate Transformation Conversion block converts a coordinate transformation from the input representation to a specified output representation. The input and output representations use the following forms:

- Axis-Angle (AxAng) - [x y z theta]
- Euler Angles (Eul) - [z y x], [z y z], or [x y z]
- Homogeneous Transformation (TForm) - 4-by-4 matrix
- Quaternion (Quat) - [w x y z]
- Rotation Matrix (RotM) - 3-by-3 matrix
- Translation Vector (TrVec) - [x y z]

All vectors must be **column vectors**.

To accommodate representations that only contain position or orientation information (TrVec or Eul, for example), you can specify two inputs or outputs to handle all transformation information. When you select the Homogeneous Transformation as an input or output, an optional Show TrVec input/output port parameter can be selected on the block mask to toggle the multiple ports.

Ports

Input

Input transformation — Coordinate transformation

column vector | 3-by-3 matrix | 4-by-4 matrix

Input transformation, specified as a coordinate transformation. The following representations are supported:

- Axis-Angle (AxAng) - [x y z theta]
- Euler Angles (Eul) - [z y x], [z y z], or [x y z]
- Homogeneous Transformation (TForm) - 4-by-4 matrix
- Quaternion (Quat) - [w x y z]
- Rotation Matrix (RotM) - 3-by-3 matrix

- Translation Vector (TrVec) - [x y z]

All vectors must be **column vectors**.

To accommodate representations that only contain position or orientation information (TrVec or Eul, for example), you can specify two inputs or outputs to handle all transformation information. When you select the Homogeneous Transformation as an input or output, an optional Show TrVec input/output port parameter can be selected on the block mask to toggle the multiple ports.

TrVec — Translation vector

3-element column vector

Translation vector, specified as a 3-element column vector, [x y z], which corresponds to a translation in the x, y, and z axes respectively. This port can be used to input or output the translation information separately from the rotation vector.

Dependencies

You must select Homogeneous Transformation (TForm) for the opposite transformation port to get the option to show the additional TrVec port. Enable the port by clicking Show TrVec input/output port.

Output Arguments

Output transformation — Coordinate transformation

column vector | 3-by-3 matrix | 4-by-4 matrix

Output transformation, specified as a coordinate transformation with the specified representation. The following representations are supported:

- Axis-Angle (AxAng) - [x y z theta]
- Euler Angles (Eul) - [z y x], [z y z], or [x y z]
- Homogeneous Transformation (TForm) - 4-by-4 matrix
- Quaternion (Quat) - [w x y z]
- Rotation Matrix (RotM) - 3-by-3 matrix
- Translation Vector (TrVec) - [x y z]

To accommodate representations that only contain position or orientation information (TrVec or Eul, for example), you can specify two inputs or outputs to handle all transformation information. When you select the Homogeneous Transformation as an input or output, an optional Show TrVec input/output port parameter can be selected on the block mask to toggle the multiple ports.

TrVec — Translation vector

three-element column vector

Translation vector, specified as a three-element column vector, [x y z], which corresponds to a translation in the x, y, and z axes respectively. This port can be used to input or output the translation information separately from the rotation vector.

Dependencies

You must select Homogeneous Transformation (TForm) for the opposite transformation port to get the option to show the additional TrVec port. Enable the port by clicking Show TrVec input/output port.

Parameters

Representation — Input or output representation

Axis-Angle | Euler Angles | Homogeneous Transformation | Rotation Matrix | Translation Vector | Quaternion

Select the representation for both the input and output port for the block. If you are using a transformation with only orientation information, you can also select the Show TrVec input/output port when converting to or from a homogeneous transformation.

Axis rotation sequence — Order of Euler angle axis rotations

ZYX (default) | ZYZ | XYZ

Order of the Euler angle axis rotations, specified as ZYX, ZYZ, or XYZ. The order of the angles in the input or output port `Eul` must match this rotation sequence. The default order ZYX specifies an orientation by:

- Rotating about the initial z-axis
- Rotating about the intermediate y-axis
- Rotating about the second intermediate x-axis

Dependencies

You must select Euler Angles for the Representation input or output parameter. The axis rotation sequence only applies to Euler angle rotations.

Show TrVec input/output port — Toggle TrVec port

off (default) | on

Toggle the TrVec input or output port when you want to specify or receive a separate translation vector for position information along with an orientation representation.

Dependencies

You must select Homogeneous Transformation (TForm) for the opposite transformation port to get the option to show the additional TrVec port.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

 
rosmessage

Introduced in R2017b

Current Time

Retrieve current ROS time or system time

Library: ROS Toolbox / ROS




Description

The Current Time block outputs the current ROS or system time. ROS Time is based on the system clock of your computer or the `/clock` topic being published on the ROS node.

Use this block to synchronize your simulation time with your connected ROS node.

If the `use_sim_time` ROS parameter is set to `true`, the block returns the simulation time published on the `/clock` topic. Otherwise, the block returns the system time of your machine.

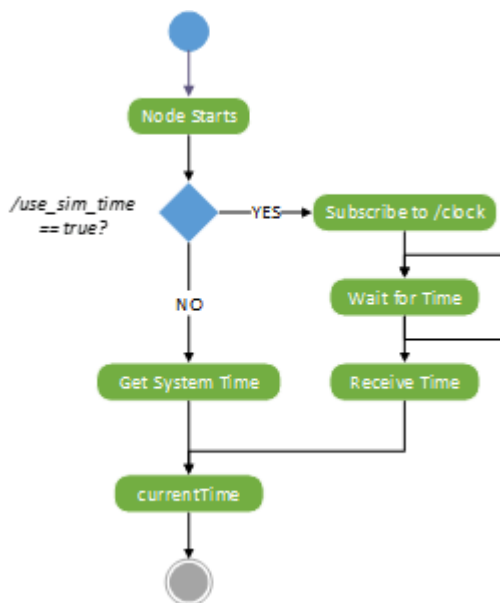

Ports

Output

Time – ROS time

bus | scalar

ROS time, returned as a bus signal or a scalar. The bus represents a `rosgraph_msgs/Clock` ROS message with `Sec` and `NSec` elements. The scalar is the ROS time in seconds. If no time has been received on the `/clock` topic, the block outputs `0`.

Data Types: bus | double

Parameters

Output format — Format of ROS time

bus (default) | double

Format of ROS Time output, specified as either bus or double.

Sample time — Interval between outputs

-1 (default) | numeric scalar

Interval between outputs, specified as a numeric scalar.

For more information, see “Specify Sample Time” (Simulink).

Tips

- To set the `use_sim_time` parameters and get time from a `/clock` topic:

Connect to a ROS network, then use the Set Parameter block or set the parameter in the MATLAB command window:

```
ptree = rosparam;  
set(ptree, '/use_sim_time', true)
```

Usually, the ROS node that publishes on the `/clock` topic sets up the parameter.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blocks

Set Parameter | Publish | Get Parameter

Functions

rostime | rosparam | get | rospublisher | set

External Websites

 
ROS Time

Introduced in R2019b

Get Parameter

Get values from ROS parameter server

Library: ROS Toolbox / ROS



Description

The Get Parameter block outputs the value of the specified ROS parameter. The block uses the ROS node of the Simulink model to connect to the ROS network. This node is created when you run the model and is deleted when the model terminates. If the model does not have a node, the block creates one.

On each sample hit, the block checks the ROS parameter server for the specified ROS parameter and outputs its value.

Input/Output Ports

Output

Value — Parameter value

scalar | logical | uint8 array

Parameter value from the ROS network. The value depends on the **Data type** parameter.

ErrorCode — Status of ROS parameter

0 | 1 | 2 | 3

Status of ROS parameter, specified as one of the following:

- **0** — ROS parameter retrieved successfully. The retrieved value is output in the **Value** port.
- **1** — No ROS parameter with specified name found. If there is no known value, **Value** is set to the last received value or to **Initial value**.
- **2** — ROS parameter retrieved, but its type is different than the specified **Data type**. If there is no known value, Value is set to the last received value or to **Initial value**.
- **3** — For string parameters, the incoming string has been truncated based on the specified length.

Length — Length of string parameter

integer

Length of the string parameter, returned as an integer. This length is the number of elements of the uint8 array or the number of characters in the string that you cast to uint8.

Note When getting string parameters from the ROS network, an ASCII value of 13 returns an error due to its incompatible character type.

Dependencies

To enable this port, set the **Data type** to `uint8[] (string)`.

Parameters**Source — Source for specifying the parameter name**

Select from ROS network | Specify your own

Source for specifying the parameter name as one of the following:

- **Select from ROS network** — Use **Select** to select a parameter name. The **Data type** parameter is set automatically. You must be connected to a ROS network.
- **Specify your own** — Enter a parameter name in **Name** and specify its data type in **Data type**. You must match a parameter name exactly.

Name — Parameter name

string

Parameter name to get from the ROS network, specified as a string. When **Source** is set to **Select from ROS network**, use **Select** to select an existing parameter. You must be connected to a ROS network to get a list of parameters. Otherwise, specify the parameter and data type.

Parameter name strings must follow the rules of ROS graph names. Valid names have these characteristics:

- The first character is an alpha character ([a-z|A-Z]), tilde (~), or forward slash (/).
- Subsequent characters are alphanumeric ([0-9|a-z|A-Z]), underscores(_), or forward slashes (/).

Data type — Data type of your parameter

double | int32 | boolean | uint8[] (string)

Data type of your parameter, specified as a string. The `uint8[] (string)` enables the **Maximum length** parameter.

Note The `uint8[] (string)` data type is an array of ASCII values corresponding to the characters in a string. When getting string parameters, you can create a MATLAB Function block to compare the string to a desired parameter value. For more information, see “ROS Parameters in Simulink”.

Data Types: double | int32 | Boolean | uint8

Maximum length — Maximum length of the uint8 array

scalar

Maximum length of the `uint8` array, specified as a scalar. If the parameter string has a length greater than **Maximum length**, the **ErrorCode** output is set to 3.

Dependencies

To enable this port, set the **Data type** to `uint8[] (string)`.

Initial value — Default parameter value output

double | int32 | boolean | uint8

Default parameter value output from when an error occurs and no valid value has been received from the parameter server. The data type must match the specified **Data type**.

Sample time – Interval between outputs

inf (default) | scalar

Interval between outputs, specified as a scalar. This default value indicates that the block output never changes. Using this value speeds simulation and code generation by eliminating the need to recompute the block output. Otherwise, the block outputs a new blank message at each interval of Sample time.

For more information, see “Specify Sample Time” (Simulink).

Show ErrorCode output port – Display error code output

on | off

To enable error code output, select this parameter. When you clear this parameter, the **ErrorCode** output port is removed from the block. The status options are:

- **0** – ROS parameter retrieved successfully. The retrieved value is output in the **Value** port.
- **1** – No ROS parameter with specified name found. If there is no known value, **Value** is set to the last received value or to **Initial value**.
- **2** – ROS parameter retrieved, but its type is different than the specified **Data type**. If there is no known value, Value is set to the last received value or to **Initial value**.
- **3** – For string parameters, the incoming string has been truncated based on the specified length.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Set Parameter

Topics

“ROS Parameters in Simulink”

External Websites

ROS Parameter Server

ROS Graph Names

Introduced in R2019b

Header Assignment

Update fields of ROS message header

Library: ROS Toolbox / ROS



Description

The Header Assignment block updates the values in the header field of a ROS message. When a ROS message contains a header field of type `std_msgs/Header`, you can use this block to update the `frame_id` and `stamp` values in its header field. During each sample hit, the block updates the `frame_id` and `stamp` fields in the header. The accuracy of the timestamp depends on the step size of the solver. Smaller step sizes result in more accurate timestamps.

Ports

Input

InputMsg — ROS message to update

nonvirtual bus

ROS message with a `std_msgs/Header` field, specified as a nonvirtual bus.

Data Types: bus

Output

OutputMsg — ROS message with an updated header

nonvirtual bus

ROS message with an updated header, returned as a nonvirtual bus.

Data Types: bus

Parameters

Set Frame ID — Specify frame associated with message data

off (default) | on

Select this parameter to specify the frame that the message data is associated with. Specify the frame ID in the text box enabled when you select this parameter. The block populates the `frame_id` field of the ROS message header with the specified frame.

Example: `base_link`

Set Timestamp — Set timestamp in header

off (default) | on

Select this parameter to set the `stamp` value of the header to the current ROS system time. In order to use the custom time published on the `/clock` topic instead of the ROS system time, set the `use_sim_time` ROS parameter to `true`.

Header field name — Specify Header field name

Use the default Header field name (default) | Specify your own

Specify the name of the Header field as one of the following:

- `Use the default Header field name` — The block sets the name of the header field in the ROS message to the default value, `Header`.
- `Specify your own` — Enables a text box in which you can specify a custom name for the header field in the ROS message.

Example: `my_custom_header`

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

[Blank Message](#) | [Publish](#)

Introduced in R2021a

Publish

Send messages to ROS network

Library: ROS Toolbox / ROS



Description

The Publish block takes in as its input a Simulink nonvirtual bus that corresponds to the specified ROS message type and publishes it to the ROS network. It uses the node of the Simulink model to create a ROS publisher for a specific topic. This node is created when the model runs and is deleted when the model terminates. If the model does not have a node, the block creates one.

On each sample hit, the block converts the **Msg** input from a Simulink bus signal to a ROS message and publishes it. The block does not distinguish whether the input is a new message but merely publishes it on every sample hit. For simulation, this input is a MATLAB ROS message. In code generation, it is a C++ ROS message.

Input/Output Ports

Input

Msg — ROS message

nonvirtual bus

ROS message, specified as a nonvirtual bus. To specify the type of ROS message, use the **Message type** parameter.

Data Types: bus

Parameters

Topic source — Source for specifying topic name

Select from ROS network | Specify your own

Source for specifying the topic name, specified as one of the following:

- **Select from ROS network** — Use **Select** to select a topic name. The **Topic** and **Message type** parameters are set automatically. You must be connected to a ROS network.
- **Specify your own** — Enter a topic name in **Topic** and specify its message type in **Message type**. You must match a topic name exactly.

Topic — Topic name to publish to

string

Topic name to publish to, specified as a string. When **Topic source** is set to **Select from ROS network**, use **Select** to select a topic from the ROS network. You must be connected to a ROS

network to get a list of topics. Otherwise, set **Topic source** to Specify your own and specify the topic you want.

Message type – ROS message type

string

ROS message type, specified as a string. Use **Select** to select from a full list of supported ROS messages. Service message types are not supported and are not included in the list.

Length of publish queue – Message queue length

1 (default) | integer

Message queue length in code generation, specified as an integer. In simulation, the message queue is always 1 and cannot be adjusted. To ensure each message is processed, use a smaller model step or only execute the model when publishing a new message.

Tips

You can also set the addresses for the ROS master and node host by clicking the **Configure network addresses** link in the block.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blank Message | Subscribe

Topics

“Types of Composite Signals” (Simulink)

“ROS Simulink Interaction”

Introduced in R2019b

Publish

Send messages to ROS 2 network

Library: ROS Toolbox / ROS 2



Description

The Publish ROS 2 block takes in as its input a Simulink non-virtual bus that corresponds to the specified ROS 2 message type and publishes it to the ROS 2 network. It uses the node of the Simulink model to create a ROS 2 publisher for a specific topic. This node is created when the model runs and is deleted when the model terminates. If the model does not have a node, the block creates one.

On each sample hit, the block converts the **Msg** input from a Simulink bus signal to a ROS 2 message and publishes it. The block does not distinguish whether the input is a new message but instead publishes it on every sample hit. For simulation, this input is a MATLAB ROS 2 message. In code generation, it is a C++ ROS 2 message.

Ports

Input

Msg — ROS message

non-virtual bus

ROS message, specified as a nonvirtual bus. To specify the type of ROS message, use the **Message type** parameter.

Data Types: bus

Parameters

Main

Topic source — Source for specifying topic name

Select from ROS network | Specify your own

Source for specifying the topic name, specified as one of the following:

- **Select from ROS network** — Use **Select** to select a topic name. The **Topic** and **Message type** parameters are set automatically. You must be connected to a ROS network.
- **Specify your own** — Enter a topic name in **Topic** and specify its message type in **Message type**. You must match a topic name exactly.

Topic — Topic name to publish to

string

Topic name to publish to, specified as a string. When **Topic source** is set to **Select from ROS network**, use **Select** to select a topic from the ROS network. You must be connected to a ROS 2

network to get a list of topics. Otherwise, set **Topic source** to `Specify your own` and specify the topic you want.

Message type – ROS message type

`string`

ROS message type, specified as a string. Use **Select** to select from a full list of supported ROS messages. Service message types are not supported and are not included in the list.

Quality of Service (QoS)

History – Mode of storing messages in the queue

`Keep last (default) | Keep all`

Determines the mode of storing messages in the queue. The queued messages will be sent to late-joining subscribers. If the queue fills with messages waiting to be processed, then old messages will be dropped to make room for new. If set to `'keep last'`, the queue stores the number of messages set by the `Depth` parameter. If set to `'keep all'`, the queue stores all messages up to the MATLAB resource limits.

Depth – Size of the message queue

`1 (default) | positive scalar`

Number of messages stored in the message queue when `History` is set to `Keep last`.

Reliability – Delivery guarantee of messages

`Reliable (default) | Best effort`

Affects the guarantee of message delivery. If `Reliable`, then delivery is guaranteed, but may retry multiple times. If `Best effort`, then attempt delivery and do not retry.

Durability – Persistence of messages

`Volatile (default) | Transient local`

Affects persistence of messages in publishers, which allows late-joining subscribers to receive the number of old messages specified by `Depth`. If `Volatile`, then messages do not persist. If `Transient local`, then publisher will persist most recent messages.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

[Blank Message](#) | [Subscribe](#)

Introduced in R2019b

Read Data

Play back data from log file

Library: ROS Toolbox / ROS



Description

The Read Data block plays back rosbag logfiles by outputting the most recent message from the log file based on the current simulation time. You must load a rosbag log file (.bag) and specify the Topic in the block mask to get a stream of messages from the file. Messages on this topic are output from the file in sync with the simulation time.

In the Read Data block mask, click **Load log file data** to specify a rosbag log file (.bag) to load. In the **Load Log File** window, specify a **Start time offset**, in seconds, to start playback at a certain point in the file. **Duration** specifies how long the block should play back this file in seconds. By default, the block outputs all messages for the specific Topic in the file.

Ports

Output

IsNew — New message indicator

0 | 1

New message indicator, returned as a logical. If the output is 1, then a new message was loaded from the rosbag file at that time. This output can be used to trigger subsystems for processing new messages received.

Msg — ROS message

nonvirtual bus

ROS message, returned as a nonvirtual bus. Messages are output in the order they are stored in the rosbag and synced with the simulation time.

Data Types: bus

Parameters

Topic — Topic name to extract from log file

string

Topic name to extract from log file, specified as a string. This topic must exist in the loaded rosbag. Click the **Load rosbag file** Use **Select ...** to inspect the topics available and select a specific topic.

Sample time — Interval between outputs

-1 (default) | scalar

Interval between outputs, specified as a scalar. In simulation, the sample time follows simulation time and not actual wall-clock time.

This default value indicates that the block sample time is *inherited*.

For more information about the inherited sample time type, see “Specify Sample Time” (Simulink).

See Also

Blocks

[Publish](#) | [Subscribe](#) | [Read Image](#) | [Read Point Cloud](#)

Functions

[rosbag](#) | [readMessages](#) | [select](#)

Topics

“[Work with ROS Messages in Simulink®](#)”

“[Work with rosbag Logfiles](#)”

Introduced in R2019b

Read Data

Play back data from ROS 2 log file

Library: ROS Toolbox / ROS 2



Description

The Read Data block plays back ROS 2 bag log files by outputting the most recent message from the log file, based on the current simulation time. You must load a ROS 2 bag log file (.db3) and specify a topic, using the **Topic** parameter, to get a stream of messages from the file. The block outputs messages of this topic from the file in sync with the simulation time.

In the Read Data block mask, select **Load logfile data** to specify a ROS 2 bag log file (.db3) to load. In the Load Logfile dialog box, specify the full path to the log file, or select Browse and navigate to the logfile you want to load. To start playback at a certain point in the file, specify a **Start time offset**, in seconds. To specify how long the block plays back this file, from the specified start time, specify a **Duration**, in seconds. By default, the block outputs all messages for the specified topic in the file.

Ports

Output

IsNew — New message indicator

logical scalar

New message indicator, returned as a logical scalar. If the output is 1, then the block loaded a new message from the ROS 2 bag log file at the corresponding time. This output can be used to trigger subsystems for processing new messages.

Data Types: Boolean

Msg — ROS 2 message

nonvirtual bus

ROS 2 message, returned as a nonvirtual bus. Messages are returned in the order they are stored in the ROS 2 bag log file and synced with the simulation time.

Data Types: bus

Parameters

Topic — Topic name to extract from log file

string scalar | character vector

Specify the name of the topic to extract from the log file. This topic must exist in the loaded ROS 2 bag log file. Click **Select** to inspect the available topics and select a specific topic.

Sample time – Interval between outputs

-1 (default) | scalar

Specify the interval between outputs. In simulation, the sample time follows simulation time rather than wall-clock time.

The default value indicates that the block sample time is inherited. For more information about the inherited sample time type, see “Specify Sample Time” (Simulink).

See Also**Blocks**

[Publish](#) | [Subscribe](#) | [Read Image](#) | [Read Point Cloud](#)

Functions

[ros2bag](#) | [readMessages](#) | [select](#)

Introduced in R2021b

Read Image

Extract image from ROS Image message

Library: ROS Toolbox / ROS



Description

The Read Image block extracts an image from a ROS Image or CompressedImage message. You can select the ROS message parameters of a topic active on a live ROS network or specify the message parameters separately. The ROS messages are specified as a nonvirtual bus. Use the Subscribe block output to receive a message from a ROS network and input the message to the Read Image block.

Note When reading ROS image messages from the network, the **Data** property of the message can exceed the maximum array length set in Simulink. To increase the maximum array length for all message types in the model, from the **Prepare** section under **Simulation** tab, select **ROS Toolbox > Variable Size Messages**. Uncheck **Use default limits for this message type** and then in the **Maximum length** column, increase the length based on the number of pixels in the image.

Ports

Input

Msg — ROS Image or CompressedImage message

nonvirtual bus

ROS Image or CompressedImage message, specified as a nonvirtual bus. You can use the Subscribe block to get a message from an active ROS network.

Data Types: bus

Output

Image — Extracted image signal

M -by- N -by-3 matrix | M -by- N matrix

Extracted image signal from ROS message, returned as an M -by- N -by-3 matrix for color images, and an M -by- N matrix for grayscale images. The matrix contains the pixel data from the **Data** property of the ROS message.

Data Types: single | double | int8 | int16 | int32 | uint8 | uint16

AlphaChannel — Alpha channel for image

M -by- N matrix

Alpha channel for image, returned as an M -by- N matrix. This matrix is the same height and width as the image output. Each element has a value in the range $[0, 1]$ that indicates the opacity of the corresponding pixel, with a value of 0 being completely transparent.

Note For `CompressedImage` messages, the alpha channel returns all zeros if the `Show Alpha output port` is enabled.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `uint8` | `uint16`

ErrorCode — Error code for image conversion

scalar

Error code for image conversion, returned as a scalar. The error code values are:

- 0 — Successfully converted the image message.
- 1 — Incorrect image encoding. Check that the incoming message encoding matches the **Image Encoding** parameter.
- 2 — The dimensions of the image message exceed the limits specified in the **Maximum Image Size** parameter.
- 3 — The `Data` field of the image message was truncated. See “Manage Array Sizes for ROS Messages in Simulink” to increase the maximum length of the array.
- 4 — Image decompression failed.

Data Types: `uint8`

Parameters

Maximum Image Size — Maximum image size

[2000 2000] (default) | two-element vector

Maximum image size, specified as a two-element [height width] vector.

Click **Configure using ROS** to set this parameter automatically using an active topic on a ROS network. You must be connected to the ROS network.

Image Encoding — Image encoding

`rgb8` (default) | `rgba8` | ...

Image encoding for the input **ImageMsg**. Select the supported encoding type which matches the `Encoding` property of the message. For more information about encoding types, see `readImage`.

Show Alpha output port — Toggle AlphaChannel port

`off` (default) | `on`

Toggle Alpha channel output port if your encoding supports an Alpha channel.

Dependencies

Only certain encoding types support alpha channels. The **Image Encoding** parameter determines if this parameter appears in the block mask.

Show ErrorCode output port — Toggle ErrorCode port

`on` (default) | `off`

Toggle the **ErrorCode** port to monitor errors.

Output variable-size signals — Toggle variable-size signal output

off (default) | on

Toggle variable-size signal output. Variable-sized signals should only be used if the image size is expected to change over time. For more information about variable sized signals, see “Variable-Size Signal Basics” (Simulink).

Extended Capabilities**C/C++ Code Generation**

Generate C and C++ code using Simulink® Coder™.

Usage notes and limitations:

- Requires a valid version of OpenCV and cv_bridge package to be installed for deployment.

See Also

[readImage](#) | [Subscribe](#) | [Blank Message](#) | [Image](#) | [CompressedImage](#)

Topics

“Manage Array Sizes for ROS Messages in Simulink”

“Variable-Size Signal Basics” (Simulink)

Introduced in R2019b

Read Image

Extract image from ROS 2 Image message

Library: ROS Toolbox / ROS 2



Description

The Read Image block extracts an image from a ROS 2 Image or CompressedImage message. You can select the message parameters of a topic active on a live ROS 2 network, or specify the message parameters separately. The ROS 2 messages are specified as a nonvirtual bus. Use the Subscribe block output to receive a message from a ROS 2 network and input the message to the Read Image block.

Note When reading ROS 2 image messages from the network, the Data property of the message can exceed the maximum array length set in Simulink. Follow the steps below to increase the maximum array length for all message types in the model:

- 1 Enable ROS options by selecting the **Robot Operating System (ROS)** app under the **Apps** tab and configure the ROS network parameters appropriately.
 - 2 From the **Prepare** section under **Simulation** tab, select **ROS Toolbox > Variable Size Messages**.
 - 3 Uncheck **Use default limits for this message type** and then in the **Maximum length** column, increase the length based on the number of pixels in the image.
-

Ports

Input

Msg — ROS 2 Image or CompressedImage message

nonvirtual bus

ROS 2 Image or CompressedImage message, specified as a nonvirtual bus. You can use the Subscribe block to get a message from an active ROS 2 network.

Data Types: bus

Output

Image — Extracted image signal

M -by- N -by-3 matrix | M -by- N matrix

Extracted image signal from a ROS 2 message, returned as an M -by- N -by-3 matrix for color images, and an M -by- N matrix for grayscale images. The matrix contains the pixel data from the Data property of the ROS 2 message.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `uint8` | `uint16`

AlphaChannel — Alpha channel for image

M-by-*N* matrix

Alpha channel for image, returned as an *M*-by-*N* matrix. This matrix is the same height and width as the image output. Each element has a value in the range `[0, 1]` that indicates the opacity of the corresponding pixel, with a value of `0` being completely transparent.

Note For `CompressedImage` messages, the alpha channel returns all zeros if the `Show Alpha output port` is enabled.

Dependencies

Enable `Show Alpha output port` parameter.

Data Types: `single` | `double` | `int8` | `int16` | `int32` | `uint8` | `uint16`

ErrorCode — Error code for image conversion

scalar

Error code for image conversion, returned as a scalar. The error code values are:

- `0` — Successfully converted the image message.
- `1` — Incorrect image encoding. Check that the incoming message encoding matches the **Image Encoding** parameter.
- `2` — The dimensions of the image message exceed the limits specified in the **Maximum Image Size** parameter.
- `3` — The `Data` field of the image message was truncated. See “Manage Array Sizes for ROS Messages in Simulink” to increase the maximum length of the array.
- `4` — Image decompression failed.

Data Types: `uint8`

Parameters

Maximum image size — Maximum image size

`[2000 2000]` (default) | two-element vector

Maximum image size, specified as a two-element `[height width]` vector.

Select **Configure using ROS 2...** to set this parameter automatically using an active topic on a ROS 2 network. You must be connected to the ROS 2 network.

Image encoding — Image encoding

`rgb8` (default) | `rgba8` | ...

Image encoding for the input `ImageMsg`. Select the encoding type that matches the `Encoding` property of the message. For more information about encoding types, see `rosReadImage`.

Show Alpha output port — AlphaChannel port toggle

`off` (default) | `on`

Toggle alpha channel output port on or off, if the selected encoding type supports alpha channels.

Dependencies

To enable this parameter, set the **Image Encoding** parameter to an encoding type that supports alpha channels.

Show ErrorCode output port — Toggle ErrorCode port

on (default) | off

Toggle the **ErrorCode** port on or off, to monitor errors.

Output variable-size signals — Variable-size signal output toggle

off (default) | on

Toggle whether to output a variable-size signal. Use variable-sized signals only if you expect the image size to change over time. For more information about variable-size signals, see “Variable-Size Signal Basics” (Simulink).

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

Usage notes and limitations:

- For remote deployment, OpenCV and cv_bridge ROS package must be installed on the remote device.
- Local host deployment is not supported.

See Also

[rosReadImage](#) | [Subscribe](#) | [Blank Message](#)

Topics

“Manage Array Sizes for ROS Messages in Simulink”
“Variable-Size Signal Basics” (Simulink)

Introduced in R2021b

Read Point Cloud

Extract point cloud from ROS PointCloud2 message

Library: ROS Toolbox / ROS



Description

The Read Point Cloud block extracts a point cloud from a ROS PointCloud2 message. You can select the ROS message parameters of a topic active on a live ROS network or specify the message parameters separately. The ROS messages are specified as a nonvirtual bus. Use the Subscribe block to receive a message from a ROS network and input the message to the Read Point Cloud block.

Note When reading ROS point cloud messages from the network, the **Data** property of the message can exceed the maximum array length set in Simulink. To increase the maximum array length for all message types in the model, from the **Prepare** section under **Simulation** tab, select **ROS Toolbox > Variable Size Messages**. Uncheck **Use default limits for this message type** and then in the **Maximum length** column, increase the length based on the number of points in the point cloud.

Ports

Input

Msg — ROS PointCloud2 message

nonvirtual bus

ROS PointCloud2 message, specified as a nonvirtual bus. You can use the Subscribe block to get a message from the ROS network.

Data Types: bus

Output

XYZ — XYZ coordinates

matrix | array

x -, y -, and z - coordinates of each point in the point cloud data, returned as either an N -by-3 matrix or h -by- w -by-3 array. N is the number of points in the point cloud. h and w are the height and width of the image, in pixels. To get the x -, y -, and z - coordinates as an array, select the **Preserve point cloud structure** parameter.

Data Types: single

RGB — RGB values for each point

matrix | array

RGB values for each point of the point cloud data, output as either an N -by-3 matrix or h -by- w -by-3 array. N is the number of points in the point cloud. h and w are the height and width of the image in

pixels. The RGB values specify the red, green, and blue color intensities in the range of $[0, 1]$. To return the RGB values as an array, select the **Preserve point cloud structure** parameter.

Data Types: `double`

Intensity – Intensity values for each point

array | matrix

Intensity value for each point of the point cloud data, returned as either an array or a h -by- w matrix. h and w are the height and width of the image in pixels. To return the intensity values as a matrix, select the **Preserve point cloud structure** parameter.

Data Types: `single`

ErrorCode – Error code for image conversion

scalar

Error code for image conversion, returned as a scalar. The error code values are:

- 0 - Successfully converted the point cloud message.
- 1 - The dimensions of the incoming point cloud exceed the limits set in the **Maximum point cloud size** parameter.
- 2 - One of the variable-length arrays in the incoming message was truncated. For more information on increasing the maximum length of the array, see “Manage Array Sizes for ROS Messages in Simulink”.
- 3 - The X, Y, or Z field of the point cloud message is missing.
- 4 - The point cloud does not contain any RGB color data. This error only occurs if you enable the **Show RGB output port** parameter.
- 5 - The point cloud does not contain any intensity data. This error only occurs if you enable the **Show Intensity output port** parameter.

For certain error codes, the block truncates the data or populates with NaN values where appropriate.

Data Types: `uint8`

Parameters

Maximum point cloud size – Maximum point cloud image size

[480 640] (default) | two-element vector

Maximum point cloud image size, specified as a two-element [height width] vector.

Select **Configure using ROS** to set this parameter automatically using an active topic on a ROS network. You must be connected to the ROS network.

Preserve point cloud structure – Point cloud data output shape preservation

off (default) | on

When this parameter is selected, the block preserves the point cloud data output shape for **XYZ**, **RGB**, and **Intensity** outputs. Each output corresponds to the resolution of the original image. The **XYZ** and **RGB** outputs become multidimensional arrays, and the **Intensity** output becomes a matrix.

Show RGB output port – RGB port toggle

off (default) | on

Select this parameter to enable the **RGB** port. If you enable this parameter, the message must contain RGB data or the block returns an error code.

Show Intensity output port – Intensity port toggle

off (default) | on

Select this parameter to enable the **Intensity** port. If you enable this parameter, the message must contain intensity data or the block returns an error code.

Show ErrorCode output port – ErrorCode port toggle

on (default) | off

Select this parameter to enable the **ErrorCode** port and monitor errors.

Output variable-size signals – Variable-size signal output toggle

off (default) | on

Toggle whether to output a variable-size signal. Use variable-sized signals only if you expect the image size to change over time. For more information about variable-size signals, see “Variable-Size Signal Basics” (Simulink).

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

[Subscribe](#) | [Blank Message](#) | [PointCloud2](#)

Topics

“Manage Array Sizes for ROS Messages in Simulink”

“Variable-Size Signal Basics” (Simulink)

Introduced in R2019b

Read Point Cloud

Extract point cloud from ROS 2 PointCloud2 message

Library: ROS Toolbox / ROS 2



Description

The Read Point Cloud block extracts a point cloud from a ROS 2 PointCloud2 message. You can select the message parameters of a topic active on a live ROS 2 network, or specify the message parameters separately. The ROS 2 messages are specified as a nonvirtual bus. Use the Subscribe block to receive a message from a ROS 2 network and input the message to the Read Point Cloud block.

Note When reading ROS 2 point cloud messages from the network, the **Data** property of the message can exceed the maximum array length set in Simulink. Follow the steps below to increase the maximum array length for all message types in the model:

- 1 Enable ROS options by selecting the **Robot Operating System (ROS)** app under the **Apps** tab and configure the ROS network parameters appropriately.
 - 2 From the **Prepare** section under **Simulation** tab, select **ROS Toolbox > Variable Size Messages**.
 - 3 Uncheck **Use default limits for this message type** and then in the **Maximum length** column, increase the length based on the number of points in the point cloud.
-

Ports

Input

Msg — ROS 2 PointCloud2 message

nonvirtual bus

ROS 2 PointCloud2 message, specified as a nonvirtual bus. You can use the Subscribe block to get a message from the ROS 2 network.

Data Types: bus

Output

XYZ — XYZ coordinates

matrix | array

x -, y -, and z - coordinates of each point in the point cloud data, returned as either an N -by-3 matrix or h -by- w -by-3 array. N is the number of points in the point cloud. h and w are the height and width of the image, in pixels. To get the x -, y -, and z - coordinates as an array, select the **Preserve point cloud structure** parameter.

Data Types: `single`

RGB — RGB values for each point

`matrix` | `array`

RGB values for each point of the point cloud data, output as either an N -by-3 matrix or h -by- w -by-3 array. N is the number of points in the point cloud. h and w are the height and width of the image in pixels. The RGB values specify the red, green, and blue color intensities in the range of $[0, 1]$. To return the RGB values as an array, select the **Preserve point cloud structure** parameter.

Dependencies

Enable Show RGB output port parameter.

Data Types: `double`

Intensity — Intensity values for each point

`array` | `matrix`

Intensity value for each point of the point cloud data, returned as either an array or a h -by- w matrix. h and w are the height and width of the image in pixels. To return the intensity values as a matrix, select the **Preserve point cloud structure** parameter.

Dependencies

Enable Show Intensity output port parameter.

Data Types: `single`

ErrorCode — Error code for image conversion

`scalar`

Error code for image conversion, returned as a scalar. The error code values are:

- 0 - Successfully converted the point cloud message.
- 1 - The dimensions of the incoming point cloud exceed the limits set in the **Maximum point cloud size** parameter.
- 2 - One of the variable-length arrays in the incoming message was truncated. For more information on increasing the maximum length of the array, see “Manage Array Sizes for ROS Messages in Simulink”.
- 3 - The X, Y, or Z field of the point cloud message is missing.
- 4 - The point cloud does not contain any RGB color data. This error only occurs if you enable the **Show RGB output port** parameter.
- 5 - The point cloud does not contain any intensity data. This error only occurs if you enable the **Show Intensity output port** parameter.

For certain error codes, the block truncates the data or populates with NaN values where appropriate.

Data Types: `uint8`

Parameters

Maximum point cloud size — Maximum point cloud image size

`[480 640]` (default) | two-element vector

Maximum point cloud image size, specified as a two-element [height width] vector.

Select **Configure using ROS 2...** to set this parameter automatically using an active topic on a ROS 2 network. You must be connected to the ROS 2 network.

Preserve point cloud structure — Point cloud data output shape preservation

off (default) | on

When this parameter is selected, the block preserves the point cloud data output shape for **XYZ**, **RGB**, and **Intensity** outputs. Each output corresponds to the resolution of the original image. The **XYZ** and **RGB** outputs become multidimensional arrays, and the **Intensity** output becomes a matrix.

Show RGB output port — RGB port toggle

off (default) | on

Select this parameter to enable the **RGB** port. If you enable this parameter, the message must contain RGB data or the block returns an error code.

Show Intensity output port — Intensity port toggle

off (default) | on

Select this parameter to enable the **Intensity** port. If you enable this parameter, the message must contain intensity data or the block returns an error code.

Show ErrorCode output port — ErrorCode port toggle

on (default) | off

Select this parameter to enable the **ErrorCode** port and monitor errors.

Output variable-size signals — Variable-size signal output toggle

off (default) | on

Toggle whether to output a variable-size signal. Use variable-sized signals only if you expect the image size to change over time. For more information about variable-size signals, see “Variable-Size Signal Basics” (Simulink).

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Subscribe | Blank Message

Topics

 
“Manage Array Sizes for ROS Messages in Simulink”
 “Variable-Size Signal Basics” (Simulink)

Introduced in R2021b

Set Parameter

Set values on ROS parameter server

Library: ROS Toolbox / ROS



Description

The Set Parameter block sets the **Value** input to the specified name on the ROS parameter server. The block uses the ROS node of the Simulink model to connect to the ROS network. This node is created when you run the model and is deleted when the model terminates. If the model does not have a node, the block creates one.

Input/Output Ports

Input

Value — Parameter value

scalar | logical | uint8 array

Parameter value from the ROS network. The value depends on the **Data type** parameter.

Length — Length of string parameter

integer

Length of the string parameter, specified as an integer. This length is the number of elements of the uint8 array or the number of characters in the string that you cast to uint8.

Note When casting your string parameters to uint8, ASCII values 0-31 (control characters) return an error due to their incompatible character type.

Dependencies

To enable this port, set the **Data type** to uint8[] (string).

Parameters

Source — Source for specifying the parameter name

Select from ROS network | Specify your own

Source for specifying the parameter name as one of the following:

- **Select from ROS network** — Use **Select** to select a parameter name. The **Data type** parameter is set automatically. You must be connected to a ROS network.
- **Specify your own** — Enter a parameter name in **Name** and specify its data type in **Data type**. You must match a parameter name exactly.

Name — Parameter name

string

Parameter name to get from the ROS network, specified as a string. When **Source** is set to **Select from ROS network**, use **Select** to select an existing parameter. You must be connected to a ROS network to get a list of parameters. Otherwise, specify the parameter and data type.

Parameter name strings must follow the rules of ROS graph names. Valid names have these characteristics:

- The first character is an alpha character ([a-z|A-Z]), tilde (~), or forward slash (/).
- Subsequent characters are alphanumeric ([0-9|a-z|A-Z]), underscores(_), or forward slashes (/).

Data type — Data type of your parameter

double | int32 | boolean | uint8[] (string)

Data type of your parameter, specified as a string.

Note The uint8[] (string) data type is an array of ASCII values corresponding to the characters in a string. When getting string parameters, you can create a MATLAB Function block to compare the string to a desired parameter value. For more information, see “ROS Parameters in Simulink”.

Data Types: double | int32 | Boolean | uint8

Extended Capabilities**C/C++ Code Generation**

Generate C and C++ code using Simulink® Coder™.

See Also

Get Parameter

Topics

“ROS Parameters in Simulink”

External Websites

ROS Parameter Servers
ROS Graph Names

Introduced in R2019b

Subscribe

Receive messages from ROS network

Library: ROS Toolbox / ROS



Description

The Subscribe block creates a Simulink nonvirtual bus that corresponds to the specified ROS message type. The block uses the node of the Simulink model to create a ROS subscriber for a specific topic. This node is created when the model runs and is deleted when the model terminates. If the model does not have a node, the block creates one.

On each simulation step, the block checks if a new message is available on the specific topic. If a new message is available, the block retrieves the message and converts it to a Simulink bus signal. The **Msg** port outputs this new message. If a new message is not available, **Msg** outputs the last received ROS message. If a message has not been received since the start of the simulation, **Msg** outputs a blank message.

Input/Output Ports

Output

IsNew — New message indicator

0 | 1

New message indicator, returned as a logical. If the output is 1, then a new message was received since the last sample hit. This output can be used to trigger subsystems for processing new messages received in the ROS network.

Msg — ROS message

nonvirtual bus

ROS message, returned as a nonvirtual bus. The type of ROS message is specified in the **Message type** parameter. The Subscribe block outputs blank messages until it receives a message on the topic name you specify. These blank messages allow you to create and test full models before the rest of the network has been setup.

Data Types: bus

Parameters

Topic source — Source for specifying topic name

Select from ROS network | Specify your own

Source for specifying the topic name, specified as one of the following:

- **Select from ROS network** — Use **Select** to select a topic name. The **Topic** and **Message type** parameters are set automatically. You must be connected to a ROS network.
- **Specify your own** — Enter a topic name in **Topic** and specify its message type in **Message type**. You must match a topic name exactly.

Topic — Topic name to subscribe to

string

Topic name to subscribe to, specified as a string. When **Topic source** is set to **Select from ROS network**, use **Select** to select a topic from the ROS network. You must be connected to a ROS network to get a list of topics. Otherwise, set **Topic source** to **Specify your own** and specify the topic you want.

Message type — ROS message type

string

ROS message type, specified as a string. Use **Select** to select from a full list of supported ROS messages. Service message types are not supported and are not included in the list.

Sample time — Interval between outputs

-1 (default) | scalar

Interval between outputs, specified as a scalar. In simulation, the sample time follows simulation time and not actual clock time.

This default value indicates that the block sample time is *inherited*.

For more information about the inherited sample time type, see “Specify Sample Time” (Simulink).

Length of subscribe callback queue — Message queue length

1 (default) | integer

Message queue length in code generation, specified as an integer. In simulation, the message queue is always 1 and cannot be adjusted. To ensure each message is caught, use a smaller model step or only execute the model if `IsNew` returns 1.

Tips

You can also set the addresses for the ROS master and node host by clicking the **Configure network addresses** link in the block.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

Blank Message | Publish

Topics

“Types of Composite Signals” (Simulink)

“ROS Simulink Interaction”

Introduced in R2019b

Subscribe

Receive messages from ROS 2 network

Library: ROS Toolbox / ROS 2



Description

The Subscribe block creates a Simulink non-virtual bus that corresponds to the specified ROS 2 message type. The block uses the node of the Simulink model to create a ROS 2 subscriber for a specific topic. This node is created when the model runs and is deleted when the model terminates. If the model does not have a node, the block creates one.

On each simulation step, the block checks if a new message is available on the specific topic. If a new message is available, the block retrieves the message and converts it to a Simulink bus signal. The **Msg** port outputs this new message. If a new message is not available, **Msg** outputs the last received ROS 2 message. If a message has not been received since the start of the simulation, **Msg** outputs a blank message.

Ports

Output

IsNew — New message indicator

0 | 1

New message indicator, returned as a logical. If the output is 1, then a new message was received since the last sample hit. This output can be used to trigger subsystems for processing new messages received in the ROS 2 network.

Msg — ROS 2 message

non-virtual bus

ROS 2 message, returned as a non-virtual bus. The type of ROS message is specified in the **Message type** parameter. The Subscribe ROS 2 block outputs blank messages until it receives a message on the topic name you specify. These blank messages allow you to create and test full models before the rest of the network has been setup.

Data Types: bus

Parameters

Main

Topic source — Source for specifying topic name

Select from ROS network | Specify your own

Source for specifying the topic name, specified as one of the following:

- **Select from ROS network** — Use **Select** to select a topic name. The **Topic** and **Message type** parameters are set automatically. You must be connected to a ROS network.
- **Specify your own** — Enter a topic name in **Topic** and specify its message type in **Message type**. You must match a topic name exactly.

Topic — Topic name to subscribe to

string

Topic name to subscribe to, specified as a string. When **Topic source** is set to **Select from ROS network**, use **Select** to select a topic from the ROS network. You must be connected to a ROS 2 network to get a list of topics. Otherwise, set **Topic source** to **Specify your own** and specify the topic you want.

Message type — ROS 2 message type

string

ROS 2 message type, specified as a string. Use **Select** to select from a full list of supported ROS 2 messages. Service message types are not supported and are not included in the list.

Sample time — Interval between outputs

-1 (default) | scalar

Interval between outputs, specified as a scalar. In simulation, the sample time follows simulation time and not actual wall-clock time.

This default value indicates that the block sample time is *inherited*.

For more information about the inherited sample time type, see “Specify Sample Time” (Simulink).

Quality of Service (QoS)

History — Mode of storing messages in the queue

Keep last (default) | Keep all

Determines the mode of storing messages in the queue. The queued messages will be sent to late-joining subscribers. If the queue fills with messages waiting to be processed, then old messages will be dropped to make room for new. When set to **Keep last**, the queue stores the number of messages set by the **Depth** property. Otherwise, when set to **Keep all**, the queue stores all messages up to the MATLAB resource limits.

Depth — Size of the message queue

1 (default) | positive scalar

Number of messages stored in the message queue when **History** is set to **Keep last**.

Reliability — Delivery guarantee of messages

Reliable (default) | Best effort

Affects the guarantee of message delivery. If **Reliable**, then delivery is guaranteed, but may retry multiple times. If **Best effort**, then attempt delivery and do not retry.

Durability — Persistence of messages

Volatile (default) | Transient local

Affects persistence of messages in publishers, which allows late-joining subscribers to receive the number of old messages specified by `Depth`. If `Volatile`, then messages do not persist. If `Transient local`, then publisher will retain the most recent messages.

Extended Capabilities

C/C++ Code Generation

Generate C and C++ code using Simulink® Coder™.

See Also

[Publish](#) | [Blank Message](#)

Introduced in R2019b

