

# Signal Integrity Toolbox™

User's Guide



# MATLAB®

R2023a



# How to Contact MathWorks



Latest news: [www.mathworks.com](http://www.mathworks.com)  
Sales and services: [www.mathworks.com/sales\\_and\\_services](http://www.mathworks.com/sales_and_services)  
User community: [www.mathworks.com/matlabcentral](http://www.mathworks.com/matlabcentral)  
Technical support: [www.mathworks.com/support/contact\\_us](http://www.mathworks.com/support/contact_us)



Phone: 508-647-7000



The MathWorks, Inc.  
1 Apple Hill Drive  
Natick, MA 01760-2098

## *Signal Integrity Toolbox™ User's Guide*

© COPYRIGHT 2021–2023 by The MathWorks, Inc.

The software described in this document is furnished under a license agreement. The software may be used or copied only under the terms of the license agreement. No part of this manual may be photocopied or reproduced in any form without prior written consent from The MathWorks, Inc.

FEDERAL ACQUISITION: This provision applies to all acquisitions of the Program and Documentation by, for, or through the federal government of the United States. By accepting delivery of the Program or Documentation, the government hereby agrees that this software or documentation qualifies as commercial computer software or commercial computer software documentation as such terms are used or defined in FAR 12.212, DFARS Part 227.72, and DFARS 252.227-7014. Accordingly, the terms and conditions of this Agreement and only those rights specified in this Agreement, shall pertain to and govern the use, modification, reproduction, release, performance, display, and disclosure of the Program and Documentation by the federal government (or other entity acquiring for or through the federal government) and shall supersede any conflicting contractual terms or conditions. If this License fails to meet the government's needs or is inconsistent in any respect with federal procurement law, the government agrees to return the Program and Documentation, unused, to The MathWorks, Inc.

### **Trademarks**

MATLAB and Simulink are registered trademarks of The MathWorks, Inc. See [www.mathworks.com/trademarks](http://www.mathworks.com/trademarks) for a list of additional trademarks. Other product or brand names may be trademarks or registered trademarks of their respective holders.

### **Patents**

MathWorks products are protected by one or more U.S. patents. Please see [www.mathworks.com/patents](http://www.mathworks.com/patents) for more information.

### **Revision History**

September 2021	Online only	New for Version 1.0 (Release 2021b)
March 2022	Online only	Revised for Version 1.1 (Release 2022a)
September 2022	Online only	Revised for Version 1.2 (Release 2022b)
March 2023	Online only	Revised for Version 1.3 (Release 2023a)

## Setting Up Simulation Environments

### 1

<b>Loss in Transmission Line Corners</b> .....	<b>1-2</b>
<b>Solution Space</b> .....	<b>1-4</b>
Permutation Mode .....	<b>1-4</b>
Case Mode .....	<b>1-9</b>
<b>STAT Mode</b> .....	<b>1-10</b>
<b>Interpreting Waveform, Eye Diagram, and Timing Results</b> .....	<b>1-11</b>
Waveform DRC .....	<b>1-11</b>
Eye Diagram DRC .....	<b>1-11</b>
Timing Results .....	<b>1-11</b>

## Configure Serial Link

### 2

<b>Simulation Parameters Used in Serial Link Design</b> .....	<b>2-2</b>
Simulation Parameter Definitions .....	<b>2-2</b>
Determining FFT Block Size .....	<b>2-5</b>
Time Domain Start and Stop Parameters .....	<b>2-5</b>
<b>Specify Corner Conditions in Serial Link Design</b> .....	<b>2-7</b>
IC Environment Corners .....	<b>2-7</b>
Etch Corners .....	<b>2-7</b>
Impact of Corner Settings .....	<b>2-8</b>
<b>Stimulus Patterns in Serial Link Design</b> .....	<b>2-10</b>
User Stimulus Editor .....	<b>2-10</b>
Using Stimulus Patterns .....	<b>2-11</b>

## Pre-Layout Analysis of Serial Link

### 3

<b>Pre-Layout Analysis of Serial Link</b> .....	<b>3-2</b>
Schematic Elements .....	<b>3-3</b>
Solution Space .....	<b>3-3</b>
Sheet Simulation Control .....	<b>3-4</b>

<b>Customize Serial Link Project for Pre-Layout Analysis</b> .....	<b>3-5</b>
Using I/O buffers .....	3-5
Using Transmission Lines .....	3-5
Using Vias .....	3-6
Using S-Parameters .....	3-6
<b>Results of Pre-Layout Analysis in Serial Link</b> .....	<b>3-7</b>
Validation Reports .....	3-7
Netlist Generation Report .....	3-7
Channel Analysis Report .....	3-8
<b>Analysis Flow in Serial Link Design</b> .....	<b>3-9</b>
Network Characterization .....	3-9
Statistical Analysis .....	3-11
Time-Domain Analysis .....	3-13
Pre-Layout Analysis .....	3-15
Post-Layout Analysis .....	3-16
<b>Network Characterization Results</b> .....	<b>3-17</b>
Results to View .....	3-17
Node Locations .....	3-18
Table Column Definitions .....	3-19
<b>Statistical Analysis Results</b> .....	<b>3-22</b>
Results to View .....	3-22
Node Locations .....	3-23
Table Column Definitions .....	3-23
<b>Time Domain Analysis Results</b> .....	<b>3-26</b>
Results to View .....	3-26
Node Locations .....	3-26
Table Column Definitions .....	3-27
<b>Managing Simulation Data and Results</b> .....	<b>3-29</b>
Data Mining from Signal Integrity Viewer App Window .....	3-29
Data Mining Using Table Column Control .....	3-31

## Post-Layout Verification of Serial Link

# 4

<b>Post-Layout Verification of Serial Link</b> .....	<b>4-2</b>
Board .....	4-3
Instance .....	4-3
Connection .....	4-4
Assignment .....	4-4
Population .....	4-5
Simulation .....	4-5
Topology .....	4-5
<b>Stackup and Extraction Control in Serial Link Project</b> .....	<b>4-6</b>
Stackup Editor .....	4-6
Extraction Control .....	4-7

<b>Via and Stackup Management in Serial Link Project</b> .....	<b>4-9</b>
Via Elements .....	<b>4-10</b>
Editing Via for Pre-Layout Simulations .....	<b>4-10</b>
Editing Via for Post-Layout Simulations .....	<b>4-11</b>
Padstack Definitions .....	<b>4-11</b>
Padstack Editor View Modes .....	<b>4-11</b>
Padstack Editor Edit Modes .....	<b>4-12</b>
Common Operations .....	<b>4-12</b>
Trace Overrides Tab .....	<b>4-13</b>
<b>Post-Layout to Pre-Layout Extraction</b> .....	<b>4-15</b>
Transmission Line Models in Topologies .....	<b>4-15</b>

## Serial Link Featured Examples

### 5

<b>Edit Imported S-Parameter Data</b> .....	<b>5-2</b>
<b>Analyze Backplane with Line Cards</b> .....	<b>5-10</b>
<b>Creating Compliance Masks in Serial Link Designer</b> .....	<b>5-28</b>
<b>Channel Operating Margin (COM) for Serial Link</b> .....	<b>5-57</b>
<b>Crosstalk Analysis with Serial Link Designer</b> .....	<b>5-71</b>
<b>Advanced Visualization with Serial Link Designer</b> .....	<b>5-95</b>
<b>Data Mining With Signal Integrity Viewer</b> .....	<b>5-101</b>

## Configure Parallel Link

### 6

<b>Simulation Parameters Used in Parallel Link Design</b> .....	<b>6-2</b>
Non-STAT Mode SPICE Simulation .....	<b>6-2</b>
STAT Mode SPICE Simulation .....	<b>6-2</b>
Waveform Analysis Parameters .....	<b>6-2</b>
STAT Mode Analysis Parameters .....	<b>6-3</b>
<b>Specify Corner Conditions in Parallel Link Design</b> .....	<b>6-6</b>
IC Environment Corners .....	<b>6-6</b>
Etch Corners .....	<b>6-6</b>
<b>Stimulus Patterns in Parallel Link Design</b> .....	<b>6-9</b>
Editing Stimulus Patterns .....	<b>6-9</b>
User Stimulus Editor .....	<b>6-10</b>
PDA Stimulus .....	<b>6-10</b>
Using Stimulus Pattern .....	<b>6-11</b>

<b>Pre-Layout Analysis of Parallel Link</b> .....	<b>7-2</b>
Schematic Elements .....	7-3
Solution Space .....	7-3
Sheet Simulation Control .....	7-4
<b>Customize Parallel Link Project for Pre-Layout Analysis</b> .....	<b>7-5</b>
Using I/O buffers .....	7-5
Using Transmission Lines .....	7-5
Using Vias .....	7-6
Using S-Parameters .....	7-6
Using STAT Mode .....	7-6
<b>Results of Pre-Layout Analysis in Parallel Link</b> .....	<b>7-8</b>
Validation Reports .....	7-8
Waveform and Timing Report .....	7-9
Assignment Report .....	7-11
SPICE Generation Report .....	7-11

<b>Post-Layout Verification of Parallel Link</b> .....	<b>8-2</b>
Board .....	8-3
Instance .....	8-3
Connection .....	8-4
Assignment .....	8-4
Population .....	8-5
Simulation .....	8-5
Topology .....	8-5
<b>Stackup and Extraction Control in Parallel Link Project</b> .....	<b>8-6</b>
Stackup Editor .....	8-6
Extraction Control .....	8-7
<b>Via and Stackup Management in Parallel Link Project</b> .....	<b>8-9</b>
Via Elements .....	8-10
Editing Via for Pre-Layout Simulations .....	8-10
Editing Via for Post-Layout Simulations .....	8-11
Padstack Definitions .....	8-11
Padstack Editor View Modes .....	8-11
Padstack Editor Edit Modes .....	8-12
Common Operations .....	8-12
Trace Overrides Tab .....	8-13

9

<b>Waveform Analysis</b> .....	<b>9-2</b>
Transfer Net Waveform Analysis .....	9-2
Standard Load Waveform Analysis .....	9-4
Waveform Factors Affecting Interconnect Delay .....	9-5
<b>Waveform Analysis Parameters and Thresholds</b> .....	<b>9-6</b>
Waveform Processing Parameters .....	9-6
Waveform Check Parameters .....	9-15
Eye Measurement Parameters .....	9-22
Eye Check Parameters .....	9-24
Etch Delay Measurement Threshold Parameters .....	9-26
Standard Load Parameters .....	9-37
Other Parameters .....	9-38
Threshold Parameter Precedence .....	9-38
<b>Waveform Reports</b> .....	<b>9-43</b>
Waveform Analysis Report Tabs .....	9-43
Mask Results .....	9-44

Parallel Link Featured Examples

10

<b>Configure DDR Controller with Two Memory Designators</b> .....	<b>10-2</b>
<b>Post-layout of DDRx Interface with CPU and DIMMs</b> .....	<b>10-8</b>
<b>DDR5 IBIS-AMI with Clock Forwarding</b> .....	<b>10-30</b>
<b>DDRx Timing and Waveform Mask Analysis</b> .....	<b>10-32</b>

Jitter and Noise

11

<b>Model Jitter and Noise While Designing Parallel Link</b> .....	<b>11-2</b>
TX Clock Jitter .....	11-2
RX Clock Jitter .....	11-4
RX Clock Recovery Jitter .....	11-6
RX Noise .....	11-6
Set Jitter and Noise in AMI File .....	11-7
<b>Model Jitter and Noise While Designing Serial Link</b> .....	<b>11-9</b>
TX Clock Jitter .....	11-9
RX Clock Jitter .....	11-11
RX Clock Recovery Jitter .....	11-13
RX Noise .....	11-13

**Industry Standard Examples**

**12**

**10GBASE-KR4 Compliance Kit ..... 12-3**

**100GBASE-KR4 Compliance Kit ..... 12-5**

**CAUI-4 Chip-to-Chip Compliance Kit ..... 12-7**

**CAUI-4 Chip-to-Module Compliance Kit ..... 12-9**

**CAUI/XLAUI Chip-to-Chip Compliance Kit ..... 12-11**

**CAUI/XLAUI Chip-To-Module Compliance Kit ..... 12-13**

**CEI 25G-LR Compliance Kit ..... 12-15**

**CEI 28G-SR Compliance Kit ..... 12-17**

**CEI 28G-VSR Compliance Kit ..... 12-19**

**CEI 56G-LR Compliance Kit ..... 12-21**

**CEI 56G-VSR Compliance Kit ..... 12-23**

**Fibre Channel FC-PI-6 Compliance Kit ..... 12-25**

**HMC 15G-SR Compliance Kit ..... 12-27**

**HMC 30G-VSR Compliance Kit ..... 12-29**

**MIPI D-PHY Serial Link Compliance Kit ..... 12-31**

**MIPI M-PHY Compliance Kit ..... 12-33**

**PCIe-2 Compliance Kit ..... 12-36**

**PCIe-3 Compliance Kit ..... 12-38**

**PCIe-4 Compliance Kit ..... 12-40**

**PCIe-5 Compliance Kit ..... 12-42**

**QSFP+ Compliance Kit ..... 12-44**

**SAS 3.0 Compliance Kit ..... 12-46**

**SATA 3.0 Compliance Kit ..... 12-48**



<b>SFP+ Compliance Kit</b> .....	<b>12-50</b>
<b>USB 3.0 Compliance Kit</b> .....	<b>12-52</b>
<b>USB 3.1 Compliance Kit</b> .....	<b>12-54</b>
<b>XAUI Compliance Kit</b> .....	<b>12-56</b>
<b>Registered DDR2 Architectural Kit</b> .....	<b>12-58</b>
<b>Unbuffered DDR2 Architectural Kit</b> .....	<b>12-59</b>
<b>Unbuffered DDR2 with PLL Architectural Kit</b> .....	<b>12-60</b>
<b>Registered DDR3 Architectural Kit</b> .....	<b>12-62</b>
<b>Unbuffered DDR3 Architectural Kit</b> .....	<b>12-64</b>
<b>Unbuffered DDR3L Architectural Kit</b> .....	<b>12-66</b>
<b>DDR4 Implementation Kit for JEDEC Raw Card B</b> .....	<b>12-68</b>
<b>DDR4 Memory Down Implementation Kit</b> .....	<b>12-71</b>
<b>DDR5 Implementation Kit</b> .....	<b>12-73</b>
<b>GDDR5 x32 Implementation Kit</b> .....	<b>12-75</b>
<b>GDDR6 x32 Architectural Kit</b> .....	<b>12-77</b>
<b>Low-Power DDR4 Architectural Kit</b> .....	<b>12-80</b>
<b>Low-Power DDR5 Architectural Kit</b> .....	<b>12-82</b>
<b>MIPI D-PHY Parallel Link Compliance Kit</b> .....	<b>12-84</b>
<b>CIO RLDRAM II Architectural Kit</b> .....	<b>12-86</b>
<b>SIO RLDRAM II Architectural Kit</b> .....	<b>12-88</b>
<b>RLDRAM III Architectural Kit</b> .....	<b>12-90</b>
<b>Run Parallel Simulations in Signal Integrity Toolbox</b> .....	<b>12-92</b>
Configure Local MATLAB Cluster for Parallel Simulations .....	<b>12-92</b>
Adjust Cluster Settings for Signal Integrity Toolbox .....	<b>12-94</b>
Run Parallel Simulations .....	<b>12-96</b>
<b>CEI 112G-VSR Compliance Kit</b> .....	<b>12-99</b>

<b>Clock Modes</b> .....	<b>13-2</b>
Clock and Data Paths in Serial Link Receiver .....	13-2
Using Data and Clock Distribution to Predict Bit-Error Rate .....	13-3
Clock Modes .....	13-4
Time Domain Clock Mode: Clocked .....	13-4
Time Domain Clock Mode: Normal .....	13-6
Time Domain Clock Mode: Convolved .....	13-8
Statistical Simulations and Clock Modes .....	13-8
Setting Clock Mode .....	13-10
<b>Channel Operating Margin (COM)</b> .....	<b>13-11</b>
Channel Design Methodology .....	13-12
COM Setup .....	13-14
Channel S-parameters for COM .....	13-14
Viewing COM Results .....	13-15
<b>Eye Measurement and Reporting</b> .....	<b>13-17</b>
Parameters Used in Eye Measurement .....	13-17
Eye Reporting .....	13-18
Calculating Eye Margin from Simulation Results to Eye Mask .....	13-21
<b>Elements in Link Designer Apps</b> .....	<b>13-24</b>
<b>PAMn Capabilities</b> .....	<b>13-29</b>
Mapping Binary Payload to PAMn Symbols .....	13-29
<b>Available Operations in Signal Integrity Viewer</b> .....	<b>13-38</b>
<b>Advanced Visualization Using Signal Integrity Viewer</b> .....	<b>13-44</b>
Set Up Axes for Advanced Visualization .....	13-45
Scatter Plot .....	13-47
Trend Plot .....	13-48
<b>S-Parameters in Serial Link Projects</b> .....	<b>13-49</b>
Import S-Parameters .....	13-49
S-Parameter Port Maps .....	13-49
Combining S-Parameter Files .....	13-51
Checking S-Parameter Files .....	13-51
<b>S-Parameters in Parallel Link Projects</b> .....	<b>13-53</b>
Import S-Parameters .....	13-53
S-Parameter Port Maps .....	13-53
Combining S-Parameter Files .....	13-55
<b>Access Project Data from MATLAB Command Window</b> .....	<b>13-56</b>
Plot Waveform and Extract Data Points from MIPI M-PHY Channel Project .....	13-57
<b>Widebus Crosstalk Analysis</b> .....	<b>13-63</b>
Creating Widebus Sheet .....	13-64
Simulating Widebus Sheet .....	13-65

Interpreting results .....	13-65
----------------------------	-------

## Models

# 14

<b>Model Lossy Transmission Lines in Serial Link Designer .....</b>	<b>14-2</b>
Types of Lossy Transmission Line Models .....	14-2
Analytical RLGC Model .....	14-3
Table-Driven Loss Model .....	14-4
Editing Lossy Conductor Line Models .....	14-5
<b>Model Lossy Transmission Lines in Parallel Link Designer .....</b>	<b>14-7</b>
Types of Lossy Transmission Line Models .....	14-7
Analytical RLGC Model .....	14-8
Table-Driven Loss Model .....	14-9
Editing Lossy Conductor Line Models .....	14-10



# Setting Up Simulation Environments

---

- “Loss in Transmission Line Corners” on page 1-2
- “Solution Space” on page 1-4
- “STAT Mode” on page 1-10
- “Interpreting Waveform, Eye Diagram, and Timing Results” on page 1-11

## Loss in Transmission Line Corners

The behavior of the transmission line loss changes depending on the process corner.

The per-unit length resistance, inductance, conductance, and capacitance are denoted by the symbols  $R$ ,  $L$ ,  $G$ , and  $C$ , respectively. These parameters are frequency dependent. The characteristic impedance of the transmission line is:

$$\text{Characteristic impedance, } Z_0 = \frac{\sqrt{R + j\omega L}}{\sqrt{G + j\omega C}}$$

In the loss-loss limit, the characteristic impedance reduces to:

$$Z_0 = \sqrt{\frac{L}{C}}$$

The propagation constant is:

$$\text{Propagation constant, } \gamma = \alpha + j\beta = \sqrt{(R + j\omega L)(G + j\omega C)}$$

For low-loss transmission lines, the equation simplifies to:

$$\begin{aligned} \gamma &= \alpha + j\beta = \sqrt{(R + j\omega L)(G + j\omega C)} \\ &= j\omega\sqrt{LC}\sqrt{\left(1 + \frac{R}{j\omega L}\right)\left(1 + \frac{G}{j\omega C}\right)} \\ &\approx j\omega\sqrt{LC}\left(1 + \frac{R}{2j\omega L}\right)\left(1 + \frac{G}{2j\omega C}\right) \\ &\approx \frac{\sqrt{LC}}{2}\left(\frac{R}{L} + \frac{G}{C}\right) + j\omega\sqrt{LC} \end{aligned}$$

So, for low-loss transmission lines:

$$\text{Propagation loss, } \alpha \approx \frac{\sqrt{LC}}{2}\left(\frac{R}{L} + \frac{G}{C}\right)$$

$$\text{Propagation delay, } \beta \approx j\omega\sqrt{LC}$$

If there is no reflection, then the voltage at a point  $l$  along the transmission line is:

$$V(l) = V_0 e^{-\gamma l}$$

In this equation, the  $\beta$  portion of the propagation constant  $\gamma$  corresponds to a delay of  $t_{pd} \equiv \sqrt{LC}l$ .

The  $\alpha$  portion of the propagation constant  $\gamma$  gives a loss in dB which equals to:

$$\begin{aligned} \text{Propagation loss, } \alpha &= 20\log_{10}e^{-\alpha l} \\ &= -8.6859\alpha l \\ &= -8.6859\frac{t_{pd}}{2}\left(\frac{R}{L} + \frac{G}{C}\right) \end{aligned}$$

From the equation of propagation loss, it is evident that the loss is proportional to propagation delay. This makes sense intuitively: the more time the signal spends in the transmission line, the more power can be dissipated.

The other thing to notice is that the portion of the loss due to the dielectric is  $G/C$ , which is proportional to the loss tangent. As a result, if  $C$  is increased, you need to increase  $G$  by the same amount to keep the loss tangent the same.

When defining process corners, both characteristic impedance  $Z_0$  and propagation delay  $t_{pd}$  are varied. For the fast corner,  $Z_0$  is increased (usually by a factor of 1.1) and  $t_{pd}$  is decreased (usually by a factor of 0.9). For the slow corner, the factors are reversed.

You can derive  $L$  and  $C$  from  $Z_0$  and  $t_{pd}$ :

$$L = t_{pd}Z_0$$

$$C = \frac{t_{pd}}{Z_0}$$


From these expressions of  $L$  and  $C$ , you can see that for both the fast and slow corners,  $L$  is multiplied by 0.99 (and so changes very little). For the fast corner,  $C$  is multiplied by 9/11, decreasing nearly 20%. For the slow corner,  $C$  is multiplied by 11/9, increasing nearly 20%. To keep the loss tangent constant,  $G$  needs to change by the same amount

The loss depends linearly on  $t_{pd}$ . So for the slow corner, the loss in dB increases by 10%. For the fast corner, the loss decreases by the same amount.

If there is reflection in the transmission line, changing  $Z_0$  changes the reflection coefficient, and a mismatch in impedance adds ripple to the loss versus frequency curve.

## Solution Space

You can setup solution spaces to create parameter sweeps in the **Serial Link Designer** and **Parallel Link Designer** apps. Some variables are populated in the solution space by default, while others come from the schematic elements and their settings. The values are typed into fields, lists, or range/steps depending on the variable type. There are two modes in a solutions space panel: **Permutation mode** (default) and **Case mode**.

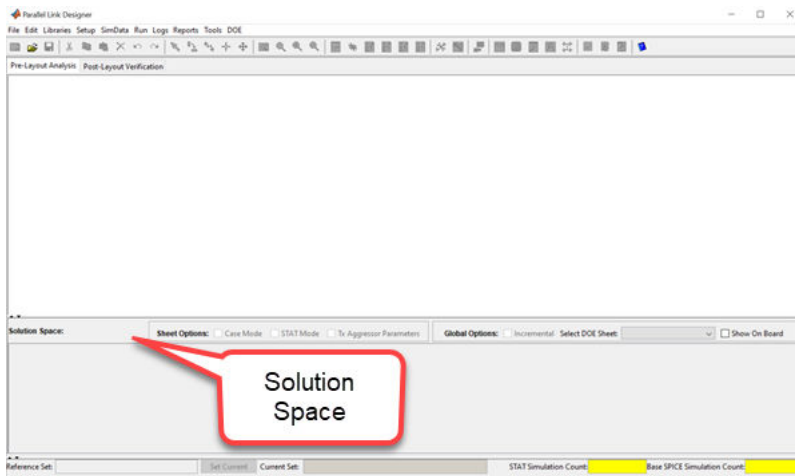

### Permutation Mode

In this mode, each row in the solution space is treated as an independent variable, unless the variable is in the same variation group. The number of simulations represented in the solution space contains all the combinations of all the variable values. The initial simulation count for a schematic sheet is 1. But as you sweep the variables in solution space, the simulation count increases. The increase depends on the number settings assigned to the added variable, multiplied by the simulation count. For example, sweeping the transmission line length over three values and varying DFE mode between off and auto results in six simulations to run.



Solution Space:									
Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:	Value 4:	
sheet1	Etch	Corner	List	Corners	TE (Typ)				
sheet1	Process	Corner	List	Corners	TT (Typ)				
sheet1	RX1:Rx Receiver S...	Float	AMI R...	<none>	0.025				
sheet1	RX1:peaking filter...	Integer	AMI R...	<none>	0				
sheet1	RX1:peaking filter...	String	AMI List	<none>	off				
sheet1	RX1:clock recovery...	Float	AMI R...	<none>	0.0				
sheet1	RX1:dfe.taps.1	Tap	AMI R...	RX1:Tap	0				
sheet1	RX1:dfe.taps.2	Tap	AMI R...	RX1:Tap	0				
sheet1	RX1:dfe.taps.3	Tap	AMI R...	RX1:Tap	0				
sheet1	RX1:dfe.taps.4	Tap	AMI R...	RX1:Tap	0				
sheet1	RX1:dfe.taps.5	Tap	AMI R...	RX1:Tap	0				
sheet1	<b>RX1:dfe.mode</b>	<b>String</b>	<b>AMI List</b>	<b>&lt;none&gt;</b>	<b>off</b>	<b>auto</b>			
sheet1	TX1:tap filter.-1	Tap	AMI R...	TX1:Tap	0				
sheet1	TX1:tap filter.0	Tap	AMI R...	TX1:Tap	1				
sheet1	TX1:tap filter.1	Tap	AMI R...	TX1:Tap	0				
sheet1	TX1:tap filter.2	Tap	AMI R...	TX1:Tap	0				
sheet1	TX1:tx swing	Float	AMI R...	<none>	1.0				
sheet1	TX1:Tx Delay	UI	AMI List	<none>	0				
sheet1	TX1:Tx Aggressor ...	Integer	AMI List	<none>	1				
sheet1	\$W1:Length	W Len...	Soft R...	<none>	20.0in	16in	12in		

## Defining Global Variables

You can define global variables in the solution space panel that let you easily reuse the same values for several variables. Global variables are visible to all sheets in an interface.

To create a new global variable:

- Right click on a row of the solution space table and choose. **Add New Global Variable** to launch the dialogue box.
- Enter a name and select the variable type from the list.
- Click **OK** to create the variable and close the dialog or **Apply** to create the variable and leave the dialog box open.
- Add values for the global variable in the Value columns of the solution space table.

To use a global variable put the variable name as the value for any non-global variable of the same type.

## Sweeping Parameter Values

You can set up parameter sweeps for schematic elements from the Element Properties dialog box for each element type. You can launch the dialog box from **Setup > Element Properties** or by double clicking on elements.

## Creating Range of Values

To specify a start, stop and number of cases instead of entering individual values, right click on a row and select Set to Range from the menu.

## Variation Groups

In the Solution Space panel, the Variation Group column lets you control the combinations of variable values that the app simulates. You can set up the variation groups to meet a wide variety of

simulation needs. By associating two or more rows with the same variation group name, you can lock those variations to sweep together. This reduces the number of simulations to run. For example, consider a schematic sheet where the length is varied between 20 inches, 16 inches, and 12 inches. The DFE mode is varied between off, fixed, and auto. The simulation count would be 9 without a variation group between the length and DFE mode. By varying the two groups together as variation group mode, you can reduce the simulation count from 9 to 3.

**Solution Space:**

Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:	Value 4:
sheet1	Etch	Corner	List	Corners	TE (Typ) ▼			
sheet1	Process	Corner	List	Corners	TT (Typ) ▼			
sheet1	RX1:Rx_Receiver_Sensitivity	Float	AMI Range	<none>	0.025			
sheet1	RX1:peaking_filter.config	Integer	AMI Range	<none>	0 ▼			
sheet1	RX1:peaking_filter.mode	String	AMI List	<none>	off ▼			
sheet1	RX1:clock_recovery.ref	Float	AMI Range	<none>	0.0			
sheet1	RX1:dfe.taps.1	Tap	AMI Range	RX1:Tap	0			
sheet1	RX1:dfe.taps.2	Tap	AMI Range	RX1:Tap	0			
sheet1	RX1:dfe.taps.3	Tap	AMI Range	RX1:Tap	0			
sheet1	RX1:dfe.taps.4	Tap	AMI Range	RX1:Tap	0			
sheet1	RX1:dfe.taps.5	Tap	AMI Range	RX1:Tap	0			
sheet1	RX1:dfe.mode	String	AMI List	mode	off ▼	auto ▼	fixed ▼	
sheet1	TX1:tap_filter.-1	Tap	AMI Range	TX1:Tap	0			
sheet1	TX1:tap_filter.0	Tap	AMI Range	TX1:Tap	1			
sheet1	TX1:tap_filter.1	Tap	AMI Range	TX1:Tap	0			
sheet1	TX1:tap_filter.2	Tap	AMI Range	TX1:Tap	0			
sheet1	TX1:tx_swing	Float	AMI Range	<none>	1.0			
sheet1	TX1:Tx_Delay	UI	AMI List	<none>	0 ▼			
sheet1	TX1:Tx_Aggressor_Factor	Integer	AMI List	<none>	1 ▼			
sheet1	<b>\$W1:Length</b>	<b>W Length</b>	<b>Soft Range</b>	<b>mode</b>	<b>20.0in</b>	<b>16in</b>	<b>12in</b>	

### Designator Timing Maps

For some designs it is useful to specify the mapping of designators to clock designators explicitly. An example is DDR3, where the clock is fly-by but other nets have point-to-point topologies. The explicit mapping is done through a parameter on the schematic. One parameter is used for each designator.

To place a parameter on the schematic use the parameter symbol. The name of the parameter is:

`$designatortimingmap%<designator_name>`

where `designatortimingmap` identifies the parameter as a designator timing map parameter and `<designator_name>` is the name of a designator on the schematic that the map will apply to. The \$ creates a solution space table entry. The values in the solution space table are of the form:

`<clock_sheet_name>:<clock_designator_name>`

where `<clock_sheet_name>` is the name of the clock schematic sheet that has the clock designator and `<clock_designator_name>` is the name of the clock designator.

For example, if a design has a DQS that is point-to-point, so all DQS nets can be represented by a single Transfer Net, and a CK that is fly-by with five designators, the single memory designator on the

dqs schematic must be mapped to five ck Transfer net designators, one for each DQS on the actual board. If the memory designator on the dqs schematic is named sdram, the parameter would be named:

```
$designatortimingmap%sdram
```

If the designators on the ck schematic are named sdram1-sdram5, the solution space table values for this parameter would be:

```
ck:sdram1, ck:sdram2, ck:sdram3, ck:sdram4, ck:sdram5
```

The dqs timing analysis results will be reported for each of the five designators. Without the mapping parameter the dqs results will be rolled up into one margin that is the worst case of all five designators.

### Sweeping Package Pins or Models


The following parameters allow an automatic sweep of the package models for a given TNET designator. This sweep only involves those signals included in a specific designator. This is a pre-layout only function.

To evoke this function:

- Add two .PARAM functions onto the schematic sheet and fill in the following Parameter Element Properties:

```
Key = pkg_sweep_designator, Value = $pkg_sweep_designator:Param
```

```
Key = pkg_sweep_pin, Value = $pkg_sweep_pin:Param
```

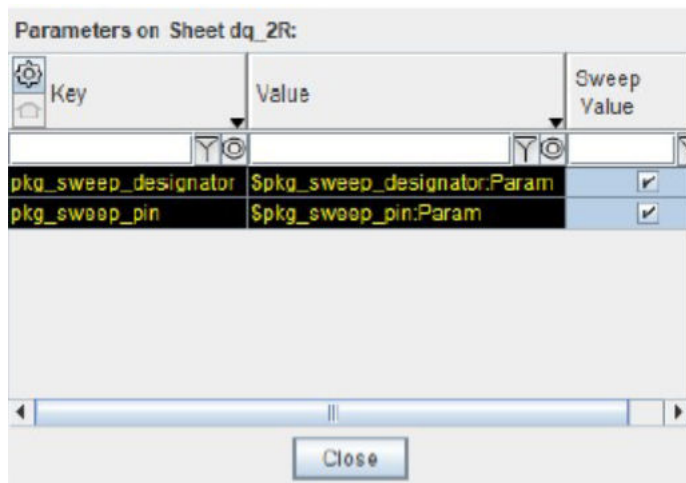


- The solution space contains the designator and package pins available for sweep.


Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3
dq_2R	Etch	Corner	List	Corners	TE (Typ)		
dq_2R	Process	Corner	List	Corners	TT (Typ)		
dq_2R	\$Smb_length	W Length	Soft Range	C	4.0in		
dq_2R	\$pkg_sweep_designator.Param	Parameter	Soft Range	<none>	controller		
dq_2R	\$pkg_sweep_pin.Param	Parameter	Soft Range	<none>	L86	L84	
dq_2R	\$WTL0	W Length	Soft Range	JJ	2.8mm		
dq_2R	\$WTL1	W Length	Soft Range	JJ	7.8mm		

### Sweeping S-Parameters


In order to sweep s-parameters, import the parameters after merging the wrappers into the same file. Consider an imported s-parameter file with four wrappers merged.

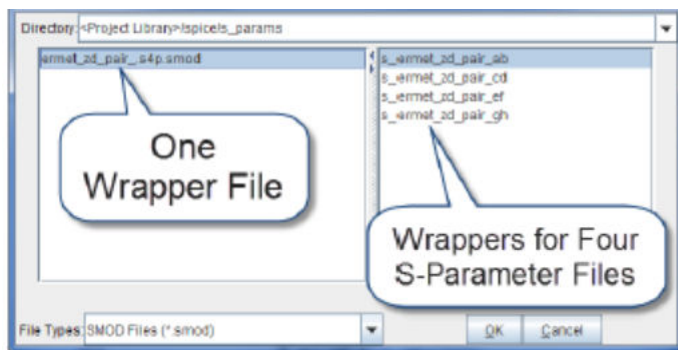

On the left of the sweep window is the one wrapper file. When you select that file the right side shows the wrappers in that file. The name of the wrapper is the same as the Touchstone file containing the S-Parameter data. To set the symbol for a particular file, select one of the wrappers on the right side of the window and click **OK**. To sweep, double-click on the symbol to launch the element properties dialog for s-parameters and select **Sweep Model**. This creates a variable in the solution space with the value columns containing a list of the models in the wrapper file.

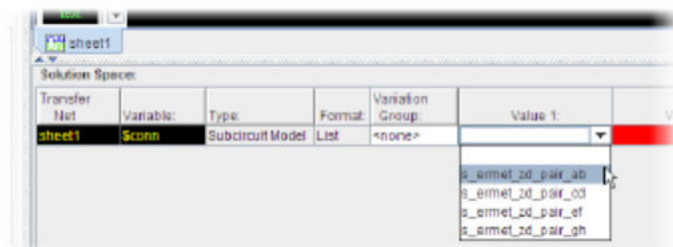

## Case Mode

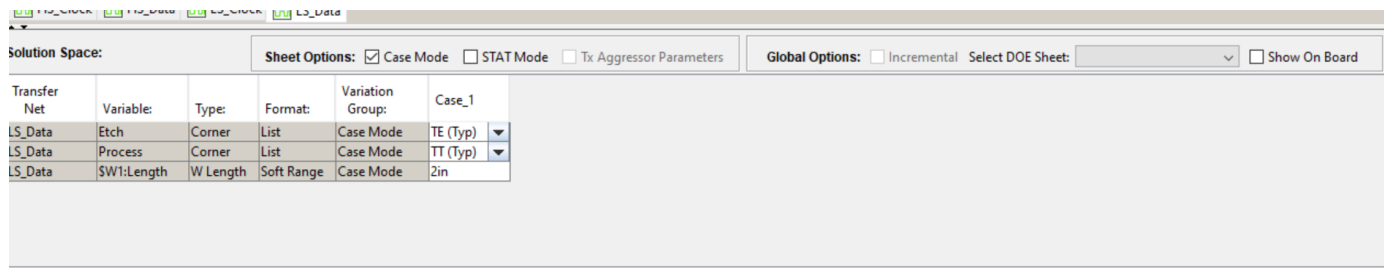

In case mode each column is a separate simulation case. This makes it easier to import or export the solution space table. The column header for each case contains the case name. You can perform several operations by choosing the appropriate column headers:

Generate Cases	Generate Cases creates cases from the permutation mode solution space. Each simulation from the permutation mode solution space will become one case.
Set to Default Case	Removes all cases except the first case.
Rename Case	Renames the case.
Insert New Case	Inserts a column for a new case to the right of the selected column.
Remove Selected Case	Removes the selected column.
Write Solution Space	The solution space table in Case Mode can be written out as a csv (comma separated value) file using the Setup   Write Solution Space menu item. The file has one line per case and one column per variable.
Read Solutions Space	The solution space table in Case Mode can be populated by reading a csv (comma separated value) file using the Setup   Read Solution Space menu item. The file has one line per case and one column per variable. The variable names must match the variable names already in the table, and the values in the csv files must be legal values. A good way to see the correct format is to write a table first (see 5.4.3.6 Write Solution Space).

### See Also

Serial Link Designer | Parallel Link Designer

### More About

- “Analyze Backplane with Line Cards” on page 5-10

## STAT Mode

STAT Mode is a simulation mode that uses a statistical engine to perform network characterization, statistical analysis, and time domain simulations. This simulation methodology is derived from the IBIS-AMI specification for performing high speed channel simulations with IBIS-AMI models. The simulation engine used in STAT mode is a derivative of the **Serial Link Designer** app and makes simulation with IBIS-AMI models possible in the **Parallel Link Designer** app. You must enable the STAT mode on each sheet in the **Sheet Options** for the AMI parameters to show up in the solution space.

Solution Space:				Sheet Options: <input type="checkbox"/> Case Mode <input checked="" type="checkbox"/> STAT Mode		
Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:
WB_DQ_CF_Read	Etch	Corner	List	Corners	TE (Typ)	
WB_DQ_CF_Read	Process	Corner	List	Corners	TT (Typ)	
WB_DQ_CF_Read	Controller_G3:Rx:Rx_Use_Clock_Input	String	AMI List	<none>	Times	
WB_DQ_CF_Read	Controller_G3:Rx:Rx_Receiver_Sensitivity	Float	AMI List	<none>	DDR5-4400	
WB_DQ_CF_Read	Controller_G3:Rx:CTLE.Mode	Integer	AMI List	<none>	off	
WB_DQ_CF_Read	Controller_G3:Rx:CTLE.ConfigSelect	Integer	AMI List	<none>	0dB	

When analysis runs in STAT Mode, a SPICE step simulation runs to get the step response of the net. In IBIS AMI terms, this is the analog channel step response. You can use STAT mode to simulate any type of buffer models (IBIS or SPICE) to analyze the response and performance of the network. This simulation uses the analog model from the IBIS file. It does not use the SI analog model equivalent circuit parameters. The ODT (on die termination) settings are part of the IBIS analog model and included in the step response. The step response is processed to create the analog channel impulse response that forms the basis for the channel simulation.

The channel simulation produces statistical and time domain analysis results. The statistical engine uses the transfer function to determine the statistical eye along with a bit error ratio (BER) and other data. Statistical engine bases the analysis on an LTI (Linear Time Invariant) network assumption along with LTI equalization (if supported by the model).

Time Domain Analysis uses the same network characterization results as statistical analysis along with a bit sequence to derive the output waveform, persistent eye, BER estimate, and other data. The persistent eye is the amplitude statistics accumulated from a specific time domain waveform. It is accumulated by triggering an ideal recovered clock in exactly the same way that you accumulate an eye diagram in a modern digital sampling scope. Unlike statistical analysis time domain analysis is a bit-by-bit simulation that analyzes the network with any non-LTI behavior.

When waveform analysis is specified, the time domain waveform is post-processed to produce the same results as a non-STAT Mode simulation. This includes waveform overshoot and waveform quality checks as well as etch delays for timing analysis. The number of bits processed is a subset of the entire waveform and is specified by the simulation parameter **Waveform Analysis Bits**.

### See Also

### More About

- “Simulation Parameters Used in Parallel Link Design” on page 6-2

## Interpreting Waveform, Eye Diagram, and Timing Results

The **Parallel Link Designer** app analyzes and processes the results to extract waveform quality, interconnect delays, and timing margins after completing the simulation. This generates results spreadsheets along with waveforms to view and analyze. To view the waveform and timing reports, click **Reports > Waveform and Timing Report**.

Start your review of the data from the Waveform Summary tab. This tab lists the number of errors, warnings, and entries made during waveform processing.

If the results file shows no errors and warnings, proceed to “Timing Results” on page 1-11. If results report any errors or warnings, select the Waveform Margin by TNET tab. This tab contains a summary of all waveform and eye-diagram DRC checks that the app completed across all simulations, sorted by Transfer Net.

### Waveform DRC

The Waveform Margin by Variation tab contains a summary of all waveform and eye-diagram Waveform DRC (WDRC) checks for each simulation. Numbers displayed in red are WDRC violations. This tab also displays ringback or transition violations.

You can explore any of these violations in more detail by reviewing the data in the Waveform Overshoot and Waveform Quality tabs. These tabs list each individual violation for each edge of every simulation. For each violation, the tab displays, the magnitude of the violation, the rule the violation being checked against, the time of occurrence, the node where the violation occurred, and the simulation checked.

You can use the simulation results to quickly identify the simulation edge that caused a violation and then view the violation in the waveform display tool. This tool determines whether the violation is a concern or not.

### Eye Diagram DRC

Eye Rollups tab contains the next level of eye-diagram DRC results and contains a summary of all eye-diagram DRC checks that were done for each node of each Transfer Net. Any numbers displayed in red are DRC violations. You can explore any of these violations in more detail by reviewing the data in the Eye Details tab. This tab lists every eye-diagram processing parameter for each edge of every simulation run along with time during which the measurement was made in the simulation. You can sort the columns of this tab to display the data. This information lets you see the parameters of an eye-diagram without needing to use a waveform display tool.

If you want to view the eye-diagrams, you may do so using the **Signal Integrity Viewer** app.

### Timing Results

This tab lists the setup and hold margins for each Transfer Net, as well as the minimum and maximum flight times (interconnection delays). Any setup or hold violations (negative margin) are in red. You can find the next level of information in the By Driver and By Receiver tabs. Use these tabs to explore which driver or receiver combination causes the violations.

Another useful tab is the Timing Waveform Margin Details tab. This tab reports both the timing margins and the waveform margins for each simulation. More detailed information is available in the

Synchronous Details and Source Synchronous Details tabs. These two tabs give the setup and hold margins for every receiver in every simulation and includes all of the timing parameters that went into each setup and hold calculation. This simplifies the process of determining why each simulation passed or failed. These tabs should give you all the details necessary to examine and fix any potential timing problems.

### **See Also**

### **More About**

- “Waveform Reports” on page 9-43
- “Waveform Analysis Parameters and Thresholds” on page 9-6



# Configure Serial Link

---

- “Simulation Parameters Used in Serial Link Design” on page 2-2
- “Specify Corner Conditions in Serial Link Design” on page 2-7
- “Stimulus Patterns in Serial Link Design” on page 2-10

## Simulation Parameters Used in Serial Link Design

You can set parameters that control how a simulation is run in **Serial Link Designer** using the Simulation Parameters dialog from the **Setup > Simulation Parameters** menu item. This dialog contains a table with parameters, their values, and the part of the analysis flow they affect. You can sort the columns by clicking on the table headers.

### Simulation Parameter Definitions

Parameter	Description
Samples Per Bit	Number of time steps in a bit time. Defines the time step used in the <b>Serial Link Designer</b> “.tran” statement.
Max Channel Delay	Maximum length of the channel impulse response supplied by the user. This value is also used in FFT block size calculation that defines the message length used for statistical analysis. For more information, see “Determining FFT Block Size” on page 2-5.
Target BER	Array of bit error rates (BER) to measure eye height and width. The array is sorted from the smallest to the largest. If fewer than four values are entered the results will include four values. The additional values are created by multiplying the last value by 1e3.
Minimum Ignore Bits	Start time for Time Domain waveform analysis.  Allows time for all of the AMI models to reach steady state. This is used if models do not define Ignore Time set in the AMI model, or the defined Ignore Time is less than this value. The larger of this value or a value from a model is used as the Ignore Bits for the analysis.
Max Input Frequency	Maximum frequency valid for the network model, determined by the maximum frequency for which S parameters are available. This frequency can be limited or extended by the user. For more information, see “Max Input Frequency” on page 2-4.
Max Output Frequency	Maximum frequency output for transfer function and S parameters describing the end to end passive electrical interconnect. For more information, see “Max Output Frequency” on page 2-4.
S-Param Frequency Step	Frequency step size for S-parameters output from the <b>Serial Link Designer</b> app. The value of this parameter controls the behavior of the Serial Link app: <ul style="list-style-type: none"> <li>• Auto : The frequency step is <math>\frac{1}{6 \times D}</math>, where <math>D</math> is the longest through path delay in the network.</li> <li>• Non-zero value: Use this value as the S-Parameter Frequency Step.</li> </ul>
Record Start	Time to start saving waveforms in a Time Domain simulation.
Record Bits	Number of bits of the waveform to save.
Time Domain Stop	The stop time of the Time Domain simulation.
Block Size	The number of samples in a single waveform segment in a Time Domain simulation. This sets the granularity of the parameter outputs returned by AMI models. Also used in determining FFT block size.

Parameter	Description
Output Clock Ticks	If yes, then Time Domain simulation will output the recovered clock ticks to a file.
STATify	<p>Control how statistical techniques are applied to Time Domain simulations and Getwave-only models. The values are:</p> <ul style="list-style-type: none"> <li>• Stat_with_Getwave: Uses a PRBS and derived pulse response from time domain analysis as the basis for statistical analysis. Allows statistical analysis to be done for models that are Getwave-only.</li> <li>• TD_Extrapolation: Extrapolates the bathtub curve to account for the effects of ISI at lower probabilities than can be derived from the Time Domain simulation alone. When this parameter is selected, Time Domain simulation does the following: <ul style="list-style-type: none"> <li>• Run a PRBS pattern at the end of the Time Domain simulation</li> <li>• Generate a pulse response for the equalized channel from the PRBS data.</li> <li>• Generate a statistical eye from the pulse response</li> <li>• Use the statistical eye to extrapolate the bathtub curves</li> </ul> </li> </ul> <p>For the extrapolation to be accurate the clock recovery loop and DFE (if any) must be settled at the end of the time domain analysis.</p> <ul style="list-style-type: none"> <li>• Both: Perform both TD_Extrapolation and Stat_with_Getwave.</li> <li>• None: Do not perform TD_Extrapolation or Stat_with_Getwave.</li> </ul>
Results Storage Control	Determine which results to store.
Time Domain Crosstalk Mode	<p>How to account for crosstalk in Time Domain simulation.</p> <ul style="list-style-type: none"> <li>• Semi-Analytic — Crosstalk is accounted from statistical analysis.</li> <li>• Explicit — Crosstalk is active during Time Domain simulation.</li> </ul>
SPICE Rise Time	Transition time from 0 to 100 percent of the stimulus input to the Driver.
SPICE Sample Interval	The time step used in the SPICE ".tran" statement. The value is an integer greater than 1 or units of time in seconds. If the value is an integer then it is the number of time steps in a bit time.
SPICE Buffer Models	<ul style="list-style-type: none"> <li>• LTI — The Tx and Rx buffer models used in the SPICE simulations are LTI models.</li> <li>• IBIS/SPICE — The Tx and Rx models are SPICE transistor models or IBIS behavioral models depending on the serial link app setting.</li> </ul>
SPICE Ignore Bits	The time before the start of the SPICE step in the step response simulation. It is either in UI or in units of seconds.
SPICE Step Stop	Stop time of SPICE step response simulation.
SPICE Time Domain Stop	Stop time of SPICE Time Domain simulation.
Include IBIS Package	Include (Yes) or do not include (No) IBIS Package model as defined in the IBIS file.

Parameter	Description
Conductor Roughness	Surface roughness of conductors in microns (RMS). Used for lossy transmission line models created outside Serial Link app.
NC/TD Simulation Mode	<p>Simulator used for network characterization (NC) and time domain (TD) phases of channel analysis. Mode used is based on modes supported by models.</p> <ul style="list-style-type: none"> <li>• Prefer Native/Native — Use the Serial Link app engine for network characterization if the models support it. Use the Serial Link app engine for time domain analysis.</li> <li>• SPICE/Native — Use SPICE for network characterization. Use the Serial Link app engine for time domain analysis.</li> <li>• SPICE/SPICE — Use SPICE for both network characterization and for time domain analysis.</li> </ul>
Tx Spectral Table	Specifies the spectral table to use for the transmitter. The list box shows the spectral tables that have been imported into the project libraries.
Rx Spectral Table	Specifies the spectral table to use for the receiver. The list box shows the spectral tables that have been imported into the project libraries.
Spectral Analysis Resolution BW	Resolution bandwidth of clock spectral analysis.
Clock Analysis	Clock phase noise spectral density analysis and output.

### Max Input Frequency

Maximum frequency valid for all network models, determined by the maximum frequency for which S parameters are available. This frequency can be limited or extended by the user. The value of this parameter controls the behavior of the Serial Link app:

- *Auto or Zero* — This option is an automatic mode. Serial Link app engine calculates the maximum frequency from a combination of the sample interval and the S-Parameter blocks in the netlist. The app then chooses the highest frequency for which all the circuit elements can be defined. If there are no S-Parameter blocks, then the highest frequency is defined by the equation:

$$\frac{1}{2 \times \text{SampleInterval}}$$

- *Non-Zero Value* — Use this value or the maximum frequency that defines all the S-Parameters whichever is smaller as the maximum frequency of the network model. The frequency value effects the TDR rise time via the following equation:

$$\frac{1}{\pi \times \text{MaxInputFrequency}}$$

The default is Auto.


### Max Output Frequency

Maximum frequency output for transfer function and S parameters describing the end to end passive electrical interconnect. The value of this parameter controls the behavior of the Serial Link app as follows:

- Auto or Zero — This option is an automatic mode. Serial Link app sets the output frequency to  $1.5 \times DR$ , where  $DR$  is the highest data rate of any TX in the analysis. The default is Auto.
- Non-Zero Value — Use this value or the maximum frequency.

## Determining FFT Block Size

Two of the parameters, Max Channel Delay and Block Size, determine the FFT block size used in network characterization and statistical analysis. The actual FFT block size is rounded up to the nearest power of two.

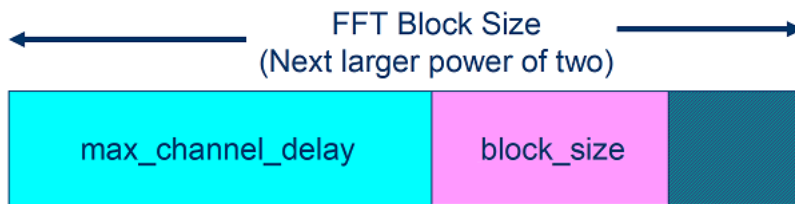


## Time Domain Start and Stop Parameters

The time domain parameters that control the start and stop of the simulation are:

- Time Domain Stop
- Record Start
- Record Bits
- Minimum Ignore Bits

This figure demonstrates the relationship of several Time Domain simulation parameters.

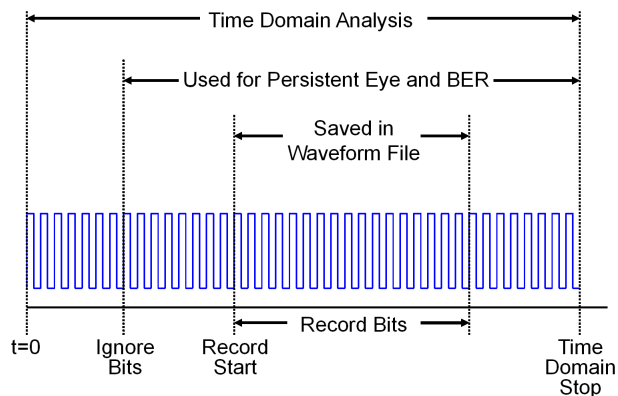

## See Also

### More About

- “Specify Corner Conditions in Serial Link Design” on page 2-7
- “Stimulus Patterns in Serial Link Design” on page 2-10

- “Model Jitter and Noise While Designing Serial Link” on page 11-9

## Specify Corner Conditions in Serial Link Design

Corner conditions are used to define the process corners. In the process corners, the parameters are within the specified range for that parameter but outside the range of normal operations. You can specify corner conditions using the Edit Corners Settings dialog box from **Setup > Corner Conditions**.

Type:	Slow Corner (SS):	Typical Corner (TT):	Fast Corner (FF):
Temperature (deg C)	100	25	0
Voltage Factor:	.95	1.0	1.05

Type:	Slow Corner (SE):	Typical Corner (TE):	Fast Corner (FE):
Tpd Factor:	1.1	1.0	0.9
Z0 Factor:	.90	1.0	1.1

The corner conditions settings include default characteristic impedance ( $Z_0$ ) in ohms, default propagation delay ( $T_{pd}$ ) in ps/in, and the length of the shortest transmission line to simulate (TLine) in ps. You can also specify the factor by which to scale the impedance of all the vias using the **Via Factor** parameter.

### IC Environment Corners

The IC Environment Corners area contains the temperature parameter for each corner. This app uses it as the .TEMP parameter in the SPICE simulations. The temperature parameter does not affect IBIS buffer models.

The voltage factors are used to scale all voltage sources in the netlist. The typical corner value is scaled by the scaling factor to create the values for the slow and fast corners. For voltage sources, the value entered in the schematic or specified for a voltage net in the post-layout is scaled by the scaling factor.

I/O buffer voltages can use the three values specified in the IBIS [Voltage Range] parameter for the three corners or use the typical value from the [Voltage Range] and scale it.

### Etch Corners

Etch Corners specify the scaling factors for the  $Z_0$  and  $T_{pd}$  parameters of transmission line models. These scaling factors account for manufacturing variation in the PCB. Both ideal and lossy transmission line models are scaled.

Lossy transmission line models are scaled by computing the values of  $Z_0$  and  $T_{pd}$  from the typical corner L and C values. The computed  $Z_0$  and  $T_{pd}$  are then scaled by the scaling factors to create the  $Z_0$  and  $T_{pd}$  values for the slow and fast corners. The slow and fast corner L and C are computed from the slow and fast  $Z_0$  and  $T_{pd}$ . For more information, see “Model Lossy Transmission Lines in Serial Link Designer” on page 14-2.

## Impact of Corner Settings

The elements that are affected by corner settings are:

- **I/O buffer voltages:** If scaling is enabled for I/O buffer voltages, the typical value of the IBIS [Voltage Range] parameter is multiplied by the scaling factor for the IC corner selected.
- **I/O buffer data:** The data that is used for each process corner is summarized in Process Corner Model Data Usage.
- **Voltage sources on schematics:** The voltage parameter of the element is multiplied by the scaling factor for the IC corner selected.
- **Voltage nets in post-layout:** The voltage set on the net on import of the board is multiplied by the scaling factor for the IC corner selected.
- **Ideal transmission lines (SPICE T elements):** The  $Z_0$  and  $T_{pd}$  parameters are multiplied by the  $Z_0$  and  $T_{pd}$  factors for the selected corner.
- **Lossy transmission lines (SPICE W elements):** The models without explicit slow and fast corner models in the library are scaled using the  $Z_0$  and  $T_{pd}$  factors in Corner Conditions. Models that have `_te` (typical), `_fe` (fast) or `_se` (slow) appended to the model name are used for the appropriate etch corner if they exist.
- **SPICE subcircuits:** file and subcircuit names can contain {etch} and {corner}. If present, the current corner is substituted.

### Process Corner Model Data Usage

IC Process Corner	Model or Setting	Data Used
FF	IBIS buffer in HSPICE	typ=fast HSPICE option
	IBIS buffer in IsSPICE4	IBIS maximum IV and VT data
	HSPICE buffer	HSPICE FF wrapper
	Temperature	FF Temperature from Corner Conditions
TT	IBIS buffer in HSPICE	typ=typ HSPICE option
	IBIS buffer in IsSPICE4	IBIS typical IV and VT data
	HSPICE buffer	HSPICE TT wrapper
	Temperature	TT Temperature from Corner Conditions
SS	IBIS buffer in HSPICE	typ=slow HSPICE option
	IBIS buffer in IsSPICE4	IBIS minimum IV and VT data
	HSPICE buffer	HSPICE SS wrapper
	Temperature	SS Temperature from Corner Conditions

## See Also

### More About

- “Simulation Parameters Used in Serial Link Design” on page 2-2



- “Stimulus Patterns in Serial Link Design” on page 2-10
- “Model Jitter and Noise While Designing Serial Link” on page 11-9

## Stimulus Patterns in Serial Link Design

You can specify stimulus patterns for the time domain analysis in the **Serial Link Designer** app. If the specified pattern for a designator has fewer bits than the simulation length, the pattern is repeated from the first bit of the pattern. If the pattern is longer than the simulation length the simulation will end at the time specified by **Time Domain Stop** parameter.

To create and manage stimulus patterns, launch the Stimuli dialog box from **Setup > Stimulus** from the app toolbar. The Stimuli dialog box has a table of stimulus patterns with columns for the name, length in bits and description of each stimulus pattern. You can edit, delete, copy, or add new stimulus patterns.

### Types of Stimulus Patterns

Stimulus Pattern	Description
LFSR (Linear Feedback Shift Register)	PRBS generated from a shift register with feedback. You need to specify how many bits to generate from the shift register (length), the shift register length (SR length), and the initial value of the shift register (seed)
User	User defined series of ones and zeros.
File	Stimulus defined in a file.
Concatenated	Created from one of more stimulus patterns.

### User Stimulus Editor

The User Stimulus Editor is used to create a stimulus.

The screenshot shows the Stimulus Editor dialog box. The 'Name' field is set to 'stimulus0'. Under the 'Type' section, 'User' is selected. The 'Length' field contains the value '2147483647'. There are input fields for 'SR Length' (set to 31), 'Seed' (set to 1), 'Repeat' (set to 0), and 'Repeat From' (set to 1). There are checkboxes for 'Invert' and 'Repeat Forever'. A list box shows 'default\_pattern'. At the bottom right are 'OK' and 'Cancel' buttons.

Ones and zeroes can be directly typed in the main window. A specified number of ones, zeroes or zero-one sequences can be entered from the fields on the left.

When the sequence has been entered click OK to return to the main Stimulus Editor.

The fields on the Stimuli dialog for User patterns are:

- *Length* — The length of the pattern created in the User Stimulus Editor.
- *Repeat* — The number of times to repeat the pattern. For a pattern of length  $n$ , a repeat of zero will result in a pattern of length  $n$ , a repeat of one will result in a pattern of length  $2*n$  and so on.
- *Repeat From* — The bit position to repeat from. Bit 1 is the first bit in the pattern.

## Using Stimulus Patterns

To specify a stimulus pattern (other than the default) on an individual designator basis, edit the designator element properties by double clicking any of the pre-layout designators. This can also be done by clicking on the **Properties** button in the Transfer Net Properties dialog box in the pre- or post-layout. In the resulting Designator Element Properties dialog box, select the desired stimulus pattern from the Stimulus drop-down menu.

## See Also

### More About

- “Simulation Parameters Used in Serial Link Design” on page 2-2
- “Specify Corner Conditions in Serial Link Design” on page 2-7
- “Model Jitter and Noise While Designing Serial Link” on page 11-9



# Pre-Layout Analysis of Serial Link

---

- “Pre-Layout Analysis of Serial Link” on page 3-2
- “Customize Serial Link Project for Pre-Layout Analysis” on page 3-5
- “Results of Pre-Layout Analysis in Serial Link” on page 3-7
- “Analysis Flow in Serial Link Design” on page 3-9
- “Network Characterization Results” on page 3-17
- “Statistical Analysis Results” on page 3-22
- “Time Domain Analysis Results” on page 3-26
- “Managing Simulation Data and Results” on page 3-29

## Pre-Layout Analysis of Serial Link

Pre-layout analysis provides you with an integrated signal integrity, timing and crosstalk analysis environment to determine system-level noise and timing margins. The pre-layout analysis environment is used to generate design guidelines for your board layouts, package layouts, connectors and cabling. From the Pre-layout tab, you may perform simple or complex solution space analysis by varying elements, such as: topology, termination, voltage, temperature, process (silicon and etch), models, UIs, corner conditions, populations, and coupling.

A schematic represents an uncoupled net or a coupled net. Uncoupled nets can be thought of as net classes. The **Serial Link Designer** app stores this information as a Transfer Net, which is used as the underlying data structure for all of the analysis. The Transfer Net data can be re-used in post-layout and other projects.

The Pre-Layout Analysis tab consists of three major panels:

- *Schematic Panel* — This is where you graphically create and edit the circuit schematic. You can also define the data from the sheet simulation control settings.
- *Solution Space Panel* — This is where you enter your solution space values for performing parameter sweeps.
- *Status Panel* — This panel displays the simulation counts and schematic set information.

The screenshot shows the Serial Link Designer software interface. The main window is titled "Serial Link Designer: serdes.qcd Project: C:\SLD\serial\_link". The interface is divided into several panels:

- Schematic Panel:** Displays a circuit diagram with a transmitter (TX1) and a receiver (RX1) connected by a transmission line (W1). The transmitter is labeled "TX1 si\_serdes SI\_AMI\_Tx SI\_AMI\_Tx 100.0ps - SerDes... None". The receiver is labeled "RX1 si\_serdes SI\_AMI\_Rx SI\_AMI\_Rx". The transmission line is labeled "W1 \* 0 diff\_strip\_1... \$tl\_len". A "Sheet Simulation Control" panel is visible, showing "State: default" and "Topology: channel".
- Solution Space Panel:** Shows a table of variables for simulation sweeps. The table has columns for Transfer Net, Variable, Type, Format, Variation Group, Value 1, Value 2, Value 3, Value 4, Value 5, and Value.
- Status Panel:** Shows the current set and simulation count. The "Reference Set" is "set1", the "Current Set" is "set1", and the "Simulation Count" is "15".

Transfer Net	Variable:	Type:	Format	Variation Group:	Value 1:	Value 2:	Value 3:	Value 4:	Value 5:	Value
channel	Etch	Corner	List	Corners	TE (Typ)					
channel	Process	Corner	List	Corners	TT (Typ)					
channel	RX1:Rx_Receiver_Sensitivity	Float	AMI Range	<none>	0.025					
channel	RX1:peaking_filter.config	Integer	AMI Range	<none>	0					

Double clicking a symbol on a schematic sheet launches an Element Properties dialog box for that symbol type. Each symbol type has a unique set of properties that are set from the Element Properties dialog box. If the properties are parameters that can be swept, that is also controlled from the Element Properties dialog box.

## Schematic Elements

**Designator** — The I/O buffer is represented by a designator in the schematic. A schematic must have at least one designator that can be a driver. The buffers can be single-ended or differential. Buffer symbols has a default I/O buffer model after being placed on the schematic. You can change the buffer model for a designator in three different ways: from the Edit Designator Properties dialog, from the Select IBIS File & Model dialog, and from the default model menu items. IBIS files must be imported into the libraries before they can be used. HSPICE models must be wrapped and put in the libraries before they can be used.

**Transmission Line** — There are two types of transmission lines: ideal transmission lines and lossy transmission lines. Ideal transmission line models have two parameters: Impedance ( $Z_0$ ) and delay ( $T_{pd}$ ). Lossy transmission lines have a frequency dependent RLGC model that is created by a 2-D field solver. Lossy transmission lines can be single-ended or differential..

**Via** — You can create via models based on a stackup and via physical parameters. Via models can be single-ended or differential. The first time a via symbol is placed on a sheet the default stackup is created. A dialog launches to allow the number of signal layers in the default stackup to be specified.

**S-Parameters** — You must import the S-Parameter files into the **Serial Link Designer** app before you can use them in schematic sheet. After a symbol has been placed on a schematic, the port map can be edited by right clicking on the symbol and selecting Edit Port Map from the menu.

**Passive Subcircuits** — You must manually import the SPICE subcircuit models for passive elements in the **Serial Link Designer** app libraries before you can place them on the schematic.

**Probe** — Voltage probe can be single-ended or differential. When a probe symbol is placed on a schematic it automatically creates a waveform node in the waveform file at the probed location. The waveform at the node can be viewed in the **SI Viewer** app.

## Solution Space

The Solution Space panel is used to create parameter sweeps. There are variables that are always part of the solution space. Other variables in the table are created when parameters are set to be swept. The values can be typed into fields, lists or range/steps depending on the variable type.

The solution space panel can be in one of two modes:

- *Permutation mode* — Each row is treated as an independent variable unless they are in the same variation group. The number of simulations represented by the solution space is all of the combinations of all of the variable values.
- *Case mode* — Each column represents a simulation case. The number of simulations represented by the solution space is the number of columns.

## **Sheet Simulation Control**

You can specify the specify the simulation state, unit interval (UI), topology, transfer net type, AC noise type, and the number of aggressors for SSO/coupled mode analysis of each schematic sheet using the sheet simulation control symbol.

### **See Also**

Serial Link Designer

### **More About**

- “Customize Serial Link Project for Pre-Layout Analysis” on page 3-5
- “Results of Pre-Layout Analysis in Serial Link” on page 3-7



## Customize Serial Link Project for Pre-Layout Analysis

You can modify the schematic elements to customize your designs in the **Serial Link Designer** app.

### Using I/O buffers

An I/O buffer is represented by a designator. You change the buffer model for a designator in three ways:

- *Edit Designator Part/Pins dialog box*

Right clicking on the designator and selecting **Edit Designator Part/Pins** opens the Edit Designator Part/Pins dialog box. The **Designator** parameter allows the designator name to be changed. The **Part Name** parameter lists the parts in all libraries. When a specific part is selected in the dropdown menu, the IBIS file name referenced by that part is shown in the **IBIS File** parameter. The IBIS component name for the selected part is shown in the **IBIS Component** parameter. The table on the left shows all of the pins in the IBIS component. To associate a pin or pins with the designator select the pin or pins on the left and click one of the arrow buttons between the two tables. The pins in the table on the left can be filtered using the **Wildcard Filter** parameter. To add a column that shows the name of the transfer net that uses the pins, select **Generate Used Pin Information**.

- *Select IBIS File & Model dialog box*

Right clicking on the designator and selecting **Select IBIS Model and File** opens the Select IBIS File & Model dialog box. You can select an IBIS file from the table provided, or import your own. You can also select one or more pins from the table of pins in the selected IBIS files.

- *Default model*

To assign a default model to a designator, right click on the designator and select **Use Default Driver**, **Use Default Receiver** or **Use Default I/O**.

### Using Transmission Lines

The app uses two types of transmission lines:

- *Ideal transmission lines*

Ideal transmission line models have two parameters: Impedance ( $Z_0$ ) and delay ( $T_{pd}$ ). These parameters are set from the Element Properties dialog box for ideal transmission lines. Double click on an ideal transmission line symbol on the schematic to launch the Element Properties dialog box. There are columns for Impedance and Delay/Distance and checkboxes to sweep the parameters. Checking a sweep checkbox creates a variable in the solution space for the parameter.

The model on the schematic is the model for the typical etch corner. If other etch corners are simulated the  $Z_0$  and  $T_{pd}$  parameters are scaled according to the corner conditions specified in the Corner Conditions dialog box. See "Specify Corner Conditions in Serial Link Design" on page 2-7 for more information.

- *Lossy transmission lines*
- The lossy transmission line have a frequency dependent RLGC model that is created by a 2-D field solver.

The app has a field solver with a transmission line editor for entering a cross-section. The transmission line editor can be used to create models in the libraries or to edit the model for a symbol. For more information, see “Model Lossy Transmission Lines in Serial Link Designer” on page 14-2.

To associate a model in the library with the transmission line, right click on the symbol and choose **Select T-Line Model**. You can edit the default model by right clicking on the symbol and choosing **Edit T-Line Model**.

### Using Vias

You can create via models based on a stackup and via physical parameters. Via models can be single-ended or differential. The first time a via symbol is placed on a sheet the default stackup is created. A dialog launches to allow the number of signal layers in the default stackup to be specified. For more information, see “Via and Stackup Management in Serial Link Project” on page 4-9.

### Using S-Parameters

S-Parameter files must be imported into the app before being used on a sheet. As connections are added the body of the S-Parameter symbol will be red if there are any unbalanced connections or unused ports. The app assumes unused ports are terminated by default. S-Parameters can be checked for consistency and correctness using the S-Parameter check feature. For more information, see “Edit Imported S-Parameter Data” on page 5-2.

### See Also Serial Link Designer

### Related Examples

- “Edit Imported S-Parameter Data” on page 5-2
- “Analyze Backplane with Line Cards” on page 5-10

### More About

- “Pre-Layout Analysis of Serial Link” on page 3-2
- “Results of Pre-Layout Analysis in Serial Link” on page 3-7

## Results of Pre-Layout Analysis in Serial Link

The **Serial Link Designer** app produces one or more reports and logs for each simulation and process you run.

The tabs within a report are organized to aid in the process of progressive discovery. The first tab is the log tab, providing a progress summary of the analysis and its errors and warnings. The other tabs contain summaries of the data and successively more detailed information, letting you track down a particular result to a specific simulation file and transition number or time.

### Validation Reports

Validation reports indicate the syntax errors in the data. When relevant, the reports provide the corresponding part name, IBIS file and component names, and timing file and model names.

Report	Description
Validation Summary	Number and location of warnings and errors.
Coverage Warnings	Parts or pins in parts that are not referenced in the transfer netlist or timing model.
Transfer Net Summary	Details on each transfer net such as whether the type of the net is data, clock, or strobe, whether the net is differential or single-ended, and the number of nodes. This report also lists information on the clock, noise, and probe points.
Part Summary	Details on each part.
Model Overview	Details on every signal integrity, HSPICE, and IBIS parameter or extension associated with each model in the design. This includes model name, corner and mode information, waveform DRC and timing extensions among other parameters.
Part Pin Summary	Summary of part Transfer Nets and timing pin definitions.
Differential Pin Summary	Lists of the differential pins and components associated with each part.
Timing Delay Summary	Summary of all output delays and setup and hold statements in each timing model.
Model Details	Lists of most of the waveform DRC rules and timing levels used by the product. The report includes the actual parameter used (following the precedence rules) and the value assigned to that parameter.
Transfer Net Errors	Inconsistencies between Transfer Nets, IBIS components and timing models. The part, IBIS and timing files listed are not necessarily where the error occurred, but simply a listing of all files involved in the error checking.

### Netlist Generation Report

The Netlist Generation Report contains multiple tabs of data that summarize the netlists that were generated for analysis.

<b>Report</b>	<b>Description</b>
Simulation Decks	Information related to generating simulation decks such as simulation modes, filter sensitivities, clock recovery information, and more.
Parameter Details	Detailed information of all the signal integrity parameters such as jitter, noise, frequency, clock recovery, BER, and more.

## Channel Analysis Report

The Channel Analysis Report provides a summary of the simulations that has been run. Tabs for network characterization, statistical analysis, time domain analysis, and the worst case PDA (peak distortion analysis) bit pattern are provided.

<b>Report</b>	<b>Description</b>
Channel Analysis Summary	Status of channel analysis, error and warning messages.
Network	Network characterization results which includes unequilized system responses such as impulse response, step response, pulse response, S-parameters, transfer functions, and more.
Statistical	Statistical analysis results such as statistical eye, BER, bathtub, contour, crosstalk, and more.
Time Domain	Time domain analysis results such as statistical eye, BER, bathtub, contour, deterministic jitter probability function, crosstalk, and more.
PDA	The data pattern which produces the minimum eye opening at the center of the eye.

## See Also


**Serial Link Designer | Signal Integrity Viewer**

## More About

- “Pre-Layout Analysis of Serial Link” on page 3-2
- “Customize Serial Link Project for Pre-Layout Analysis” on page 3-5

## Analysis Flow in Serial Link Design


The **Serial Link Designer** app uses an iterative and sequential process to narrow down a large solution space and arrive at an optimal solution. This diagram explains the workflow followed by the app.

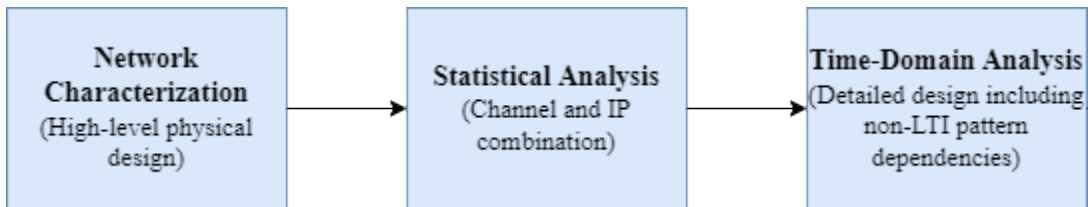

This flow is supported by both pre-layout (solution space exploration and progressive analysis) and post-layout (single or multi-board extraction and analysis).

### Network Characterization

The network characterization section in the workflow determines if the high-level physical design of the link meets the design requirements. The **Serial Link Designer** app automatically detects the modeling techniques used in designing the transmitter and the receiver, and then determines the analysis workflow based on the models used.

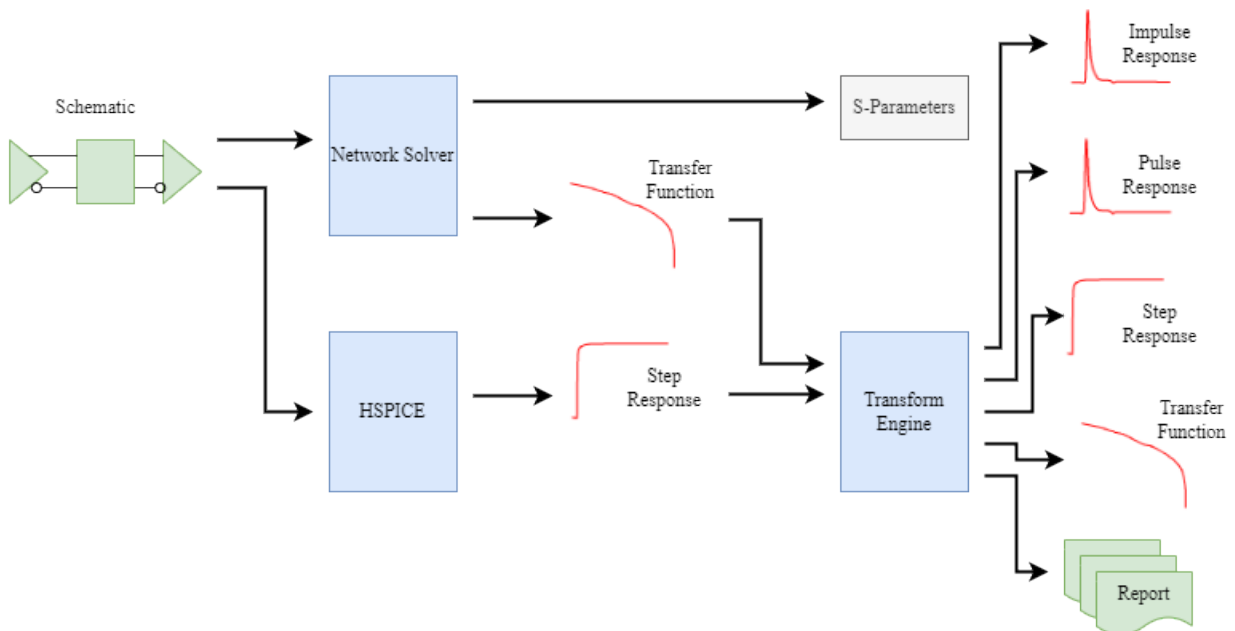

You can perform network characterization in the **Serial Link Designer** in two ways:

- Using the **Serial Link Designer** network solver
- Using SPICE transient simulation to get the step response

**Network Characterization Results**


Result	Description
Impulse Response	<p>Impulse response is the response of the channel to an extremely short pulse with unit area. In sampled data analysis, the width of the pulse is one sample, and the amplitude is one sample over the sample interval. The impulse response measurement is a mathematical construct and is not realizable in practice.</p> <p>The impulse response outputs from the <b>Serial Link Designer</b> app help determine the path delay. They also indicate the extent of the distortion due to reflections in the transmission path. The impulse response shows the high frequency response more clearly than pulse response or step response.</p>
Pulse Response	<p>The pulse response is the response of the path to a pulse which is one data symbol wide, and has an amplitude equal to the difference between a logical zero and a logical one.</p> <p>Pulse responses are particularly useful for understanding the effects of equalization. The sampling time after clock recovery is typically very near the peak of the pulse response. As a result, the most critical intersymbol interference occurs an integer number of bit times from the peak of the pulse response.</p> <ul style="list-style-type: none"> <li>• In an unequalized pulse response, the amplitudes of the pulse response at integer numbers of bit times from the peak of the pulse response indicate the tap coefficients that would be required to equalize the channel.</li> <li>• In an equalized pulse response, these same amplitudes indicate the degree of equalization, and the delays for which more equalization might be required.</li> </ul>
Step Response	<p>The <b>Serial Link Designer</b> calculates the step response assuming the 0-100% rise time of the step is one sample interval, and the step is from a logical zero to a logical one.</p> <p>Since a step response is physically realizable, it is useful for comparing results from the app with results from other simulators such as the SPICE simulator. It is also useful for comparing the app results directly with measured time domain reflection (TDR) and time domain transmission (TDT) responses</p> <p>For small impedance discontinuities, the TDR response is approximately a plot of the transmission line impedance as a function of distance. For this reason, the <b>Serial Link Designer</b> app produces a step response for the output of each driver, even though it does not produce a corresponding impulse response, pulse response, or transfer function for these circuit nodes. In the <b>Signal Integrity Viewer</b> app, the TDR step responses are indicated as V(Bxxx to TDR) to distinguish them from the other step responses.</p>

Result	Description
Transfer Function	<p>The <b>Serial Link Designer</b> app outputs transfer functions of the real and imaginary parts as a function of frequency. In the <b>Signal Integrity Viewer</b> app, this data is then combined to show magnitude (dB or linear), phase, and polar plots in addition to real and imaginary parts.</p> <p>Since the transfer functions include the drivers and receive amplifiers, they can exhibit gain, especially at low frequencies.</p>
Output S-Parameters	<p>The <b>Serial Link Designer</b> app outputs S-parameters for the channel in a fully-compliant Touchstone file. Each driver and receiver pin is a separate single ended port, and the file contains a comment line listing the node names of the ports in order.</p> <p>The S-parameters are output from DC to a frequency set by the Max Output Frequency (default is 10GHz) parameter in steps set by the parameter S-Parameter Frequency Step (default is 50MHz) parameter.</p>

For more information, see “Network Characterization Results” on page 3-17.

## Statistical Analysis


Statistical Analysis uses the network characterization results and the IBIS-AMI models to derive the statistical eye, BER estimate, and other data. The analysis assumes LTI (linear time invariant) channel and LTI equalization.

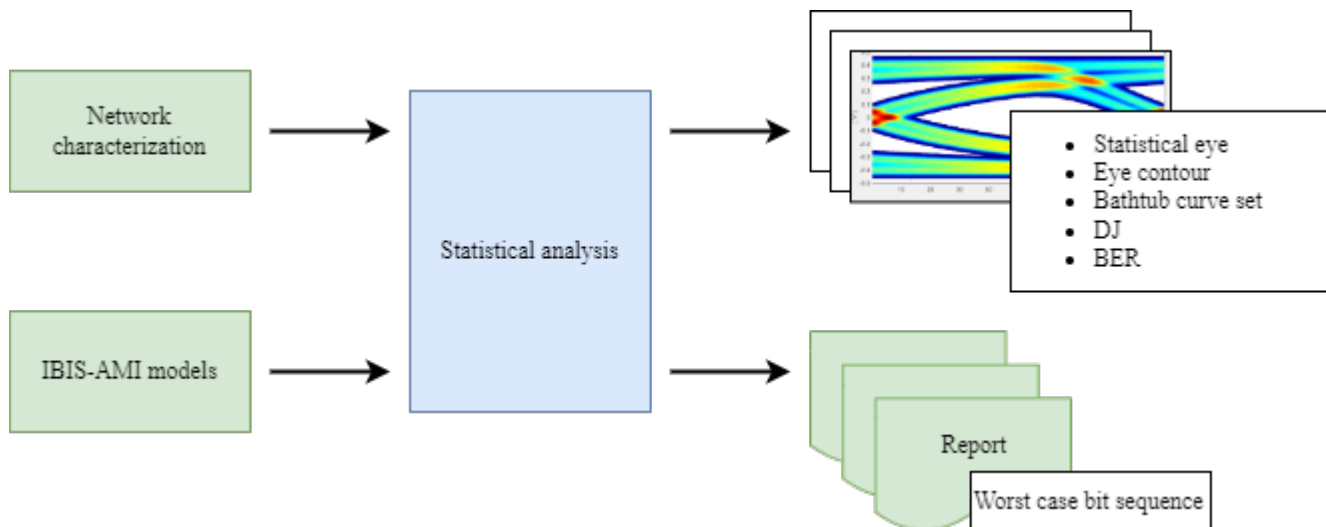

The Transmit and Receive equalization is applied by the IBIS-AMI models. The IBIS-AMI Init function takes an impulse response and returns that impulse response convolved with the equalization impulse response.

To estimate the BER, you must obtain the clock PDF. If the IBIS-AMI model does not return a clock PDF, then an internal CDR will produce its own clock PDF.

The statistical engine takes the equalized channel pulse response and the clock PDF and generates the outputs.

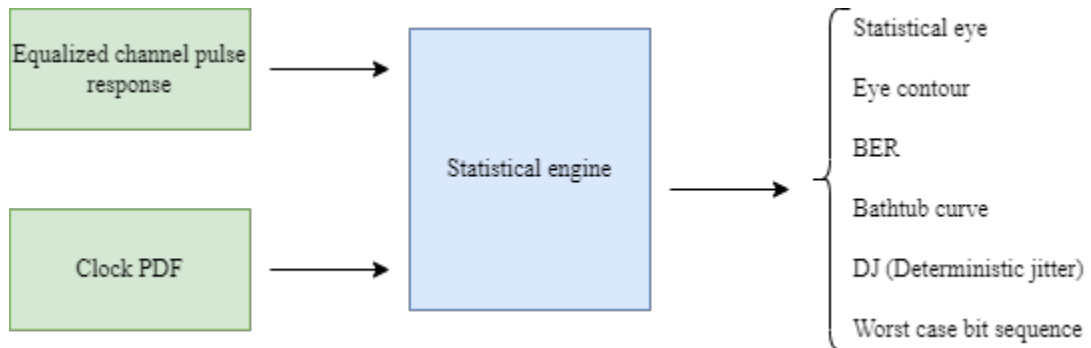

There are simulation parameters that affect the statistical analysis results. For more information on the simulation parameters, see “Simulation Parameters Used in Serial Link Design” on page 2-2.




## Statistical Analysis Results

Result	Description
Statistical Eye	<p>The statistical eye is a false color plot of the probability at each voltage as a function of time relative to the bit sampling time. The underlying assumption is that all messages of a given length (typically 64 bits or more) are equally likely, and the probabilities are therefore the average over all possible combinations of intersymbol interference for that message length. In the <b>Serial Link Designer</b> app, the statistical eye also includes the effects of crosstalk.</p> <p>The statistical eye is centered by assuming that the clock recovery loop will choose the median threshold crossing time as the edge of the eye, and position the data sampling time one-half a bit time from the edge of the eye. This behavior can be obtained from an ideal digital clock recovery loop.</p> <p>The viewer displays the statistical eye by color coding the probabilities in rainbow order with red being the highest probability and blue the lowest probability.</p>
Bathtub Curve Set	<p>The bathtub curve set consists of three curves:</p> <ul style="list-style-type: none"> <li>• Probability of error as a function of the time the data is actually sampled. This is what is commonly called a bathtub curve, and is a conditional probability function.</li> <li>• Clock probability density function (PDF). This is the probability of sampling at a given time in the data bit period. In statistical analysis, the clock PDF is calculated from the random jitter (Rx_RJ) and sinusoidal jitter (Rx_SJ) specified for the receiver.</li> <li>• Net BER. This is the probability of an error occurring at a given sampling time given the probability of sampling at that time, and the probability that if the data is sampled at that time, an error can occur. This curve is the area under the product of the bathtub curve and the clock PDF.</li> </ul>
DJ (Deterministic jitter)	<p>The DJ curve is a histogram of the threshold crossing times for the data. It is used primarily to help better understand the DJ peak and standard deviation entries.</p>
Contours	<p>The eye contours are plots of the amplitude associated with fixed probabilities as a function of sampling time. They indicate the shape of the inner and outer boundaries of the eye diagram for a number of different probabilities.</p> <p>The contour curve set also includes the peak distortion analysis (PDA) curves. These contours indicate the absolute inner and outer boundaries of the statistical eye.</p>

For more information, see “Statistical Analysis Results” on page 3-22.

## Time-Domain Analysis

Time-domain analysis uses the network characterization results, IBIS-AMI models, and a bit sequence to derive the output waveform, BER estimate, and other data.

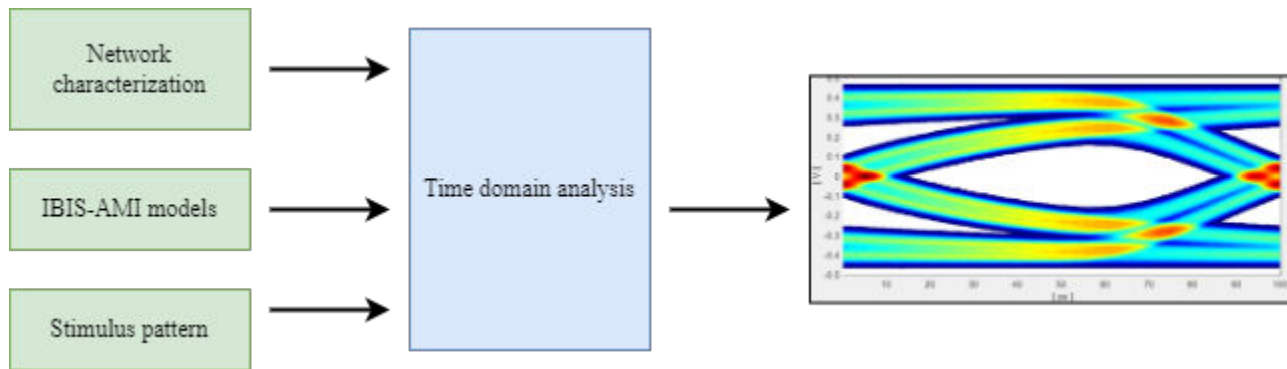

To estimate the BER, you must obtain the clock PDF from one of the two sources:

- CDR in the Receiver IBIS-AMI model.
- Internal CDR built into Signal Integrity Toolbox™.

There are simulation parameters affect the time domain analysis results. For more information on the simulation parameters, see "Simulation Parameters Used in Serial Link Design" on page 2-2.

## Time Domain Analysis Results

Result	Description
Persistent Eye	<p>The persistent eye is the amplitude statistics accumulated from a specific time domain waveform. It is accumulated when you trigger the use of an ideal recovered clock, in exactly the same way that an eye diagram is accumulated in a modern digital sampling scope.</p> <p>In Clock Mode Normal, the data is clocked using a clock recovery loop that is internal to the analysis probe of the app. This clock recovery loop is an analog Hogg and Chu style delay locked loop. For 6.25 Gb/s data, the pattern dependent jitter from this clock recovery loop is slightly less than 1 pS rms. Since it is an analog rather than a digital clock recovery loop, it locks to the mean data transition time rather than the median. If the Receiver IBIS-AMI Model contains a CDR, the resulting clock PDF will represent this CDR, and not the internal clock recovery loop.</p> <p>In Clock Mode Clocked the actual recovered clock ticks are used to sample the data if the clock ticks are available from the receiver model.</p> <p>For more information, see “Clock Modes” on page 13-2.</p> <p>The appearance and meaning of the persistent eye is very similar to that of a statistical eye except that it represents the density accumulated from a specific time domain waveform rather than the probability calculated for a population of messages.</p>
Bathtub Curve Set	<p>The bathtub curve set for a time domain simulation is derived from the persistent eye. Depending on the clock mode, the clock PDF can be accumulated from the clock ticks produced by an IBIS-AMI receiver model rather than the RJ and SJ specified for the receiver.</p>
DJ (Deterministic jitter)	<p>The DJ curve is a histogram of the threshold crossing times for the data. The DJ for a time-domain simulation is derived from the persistent eye.</p>
Contours	<p>The eye contours are plots of the amplitude associated with fixed probabilities as a function of sampling time. They indicate the shape of the inner and outer boundaries of the eye diagram for a number of different probabilities. The contours for a time-domain simulation are derived from the persistent eye.</p> <p>Since the persistent eye is necessarily derived from a relatively small sample (typically one million to ten million bits), the contours for lower probabilities are not resolvable. No attempt is made to separate these curves through any method such as statistical extrapolation. Statistical extrapolation is available as an option in the simulation parameters.</p>

For more information, see “Time Domain Analysis Results” on page 3-26.

## Pre-Layout Analysis

The schematic in the network characterization diagram represents an uncoupled net or a coupled net. Uncoupled nets can be thought of as net classes. The **Serial Link Designer** app stores this information as a transfer net, which is used as the underlying data structure for all analyses. You can reuse the transfer net data can be re-used between pre- and post-layout analysis and between

designs. Reusing analysis setups with common interfaces across multiple designs can save significant time and resources when performing signal integrity, timing, and crosstalk analysis.

The pre-layout analysis is an interface-centric iterative process used to generate design guidelines for your board layouts, package layouts, connectors, and cabling. For more information, see “Pre-Layout Analysis of Serial Link” on page 3-2.

### **Post-Layout Analysis**

The post-layout process supports the PCB analysis of single-board and multi-board designs. You can analyze the connectivity through packages, connectors, and cabling. For more information, see “Post-Layout Verification of Serial Link” on page 4-2.

### **See Also**

#### **More About**

- “Network Characterization Results” on page 3-17
- “Statistical Analysis Results” on page 3-22
- “Time Domain Analysis Results” on page 3-26
- “Clock Modes” on page 13-2

## Network Characterization Results

### Results to View

These are the results data from the Network Characterization phase of the analysis. There is a table of data as well as waveform data to view.

Result	Description
Impulse Response (Unequalized)	Impulse response of the analog channel.
Step Response (Unequalized)	The step response of the analog channel.
Pulse Response (Unequalized)	The pulse response of the analog channel.
Transfer Function (Unequalized)	The transfer function of the analog channel.
S-Parameters (dB)	<p>S-parameters for the analog channel plotted as dB vs. frequency. You can view the data as single ended or mixed mode. You can also view the through path (insertion loss), self path (return loss), and crosstalk.</p> <p>The nodes are written in the format: S&lt;output mode&gt;&lt;input mode&gt;(output port, input port), where the output and input modes are denoted by D for the differential mode and C for the common mode.</p>
S-Parameters (Polar)	S-parameters for the analog channel plotted as real vs. imaginary. You can view them as single ended or mixed mode S-Parameters. You can also view the through path (insertion loss), self path (return loss), and crosstalk.
TDT	<p>Time domain transmission (TDT) data for the analog channel. You can view them as either single ended or mixed mode. You can also view the through path (insertion loss), self path (return loss), and crosstalk.</p> <p>The nodes are written in the format: T&lt;output mode&gt;&lt;input mode&gt;(output port, input port), where the output and input modes are denoted by D for the differential mode and C for the common mode.</p> <p><b>Note</b> The <b>Parallel Link Designer</b> app does not generate TDT.</p>

Result	Description
TDR	<p>Time domain reflectometry (TDR) data for the analog channel. You can view the data as either single ended or mixed mode. You can also view the through path (insertion loss), self path (return loss), and crosstalk.</p> <p>The nodes are written in the format: T&lt;output mode&gt;&lt;input mode&gt;(output port, input port), where the output and input modes are denoted by D for the differential mode and C for the common mode.</p> <hr/> <p><b>Note</b> The <b>Parallel Link Designer</b> app does not generate TDR.</p>
Export Channel S-Parameter	<p>Save the S-parameters for all channels combined to an external location. You can place multiple S-parameters on a schematic to combine them.</p> <hr/> <p><b>Note</b> The <b>Parallel Link Designer</b> app supports S-parameters but does not generate them, so you cannot export channel S-parameters from the <b>Parallel Link Designer</b> app.</p>
Probed Impulse Response	<p>Impulse responses at the probed location(s) of the pre-layout schematic. In a case of parallel link project, the result represents the responses at the receiver B node.</p>
Probed Step Response	<p>Step responses at the probed location(s) of the pre-layout schematic. In case of parallel link project, the result represents the responses at the receiver B node.</p>
Probed Pulse Response	<p>Pulse responses at the probed location(s) of the pre-layout schematic. In case a of parallel link project, it is the pulse response at the receiver B node.</p>
Probed Transfer Function	<p>Transfer functions at the probed location(s) of the pre-layout schematic. In case of parallel link project, it is the transfer function at the receiver B node.</p>


---

**Note** The stat mode in the **Parallel Link Designer** app does not support user-defined probes, but it adds a single probe at the receiver B-node.

---

## Node Locations

The full node names in network characterization contain the designator names. For example, BTX1 is the B node for the designator TX1.

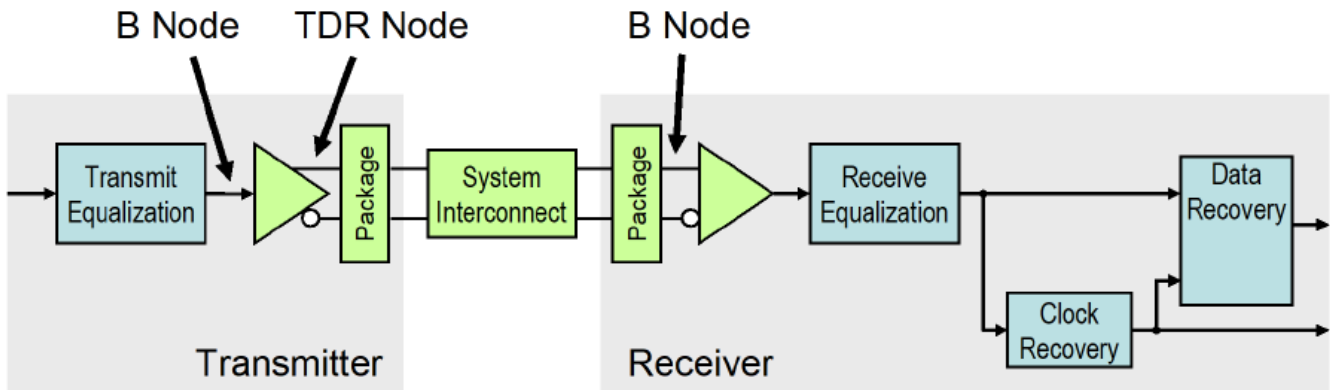

### Table Column Definitions

Parameter	Definition
Transfer Net	Name of the transfer net for the simulation.
Transfer	Bus transaction (designator from-to) for the simulation.
UI (ps)	Unit interval for the transmitted data, defined as the time duration for a single transmitted symbol.
Symbol Rate (Gbps)	Rate at which symbols are transmitted on the channel. The delivered payload UI can be lower for an encoding such as 8b10b is used, or higher if a modulation such as PAM4 is used.
Loss (dB)	<p>The difference between the channel loss at DC and the channel loss at a frequency equal to one half the symbol rate.</p> <p>This parameter is widely used to measure the ease with which you can equalize a channel. As a rule of thumb, &lt;15dB easy, 20dB is moderately challenging, and &gt;25dB is very challenging. 30dB is the upper limit for most technologies, although equalization for higher loss channels has been demonstrated in select sample parts.</p> <p>The loss is for the analog RX and TX channels.</p>
UnEQ Signal/Xtalk (dB)	<p>Ratio of unequalized signal energy to the combined unequalized energy of all the crosstalk aggressors.</p> <p>This parameter is a first order indicator of crosstalk problems. A signal to crosstalk ratio of more than 26 dB can be considered safe for a target BER of <math>10^{-12}</math>, and a ratio of 30 dB can be considered safe in general. Lower ratios indicate that you need to analyze your system design.</p> <p><b>Note</b> This parameter does not show the effect of the Tx Aggressor Factor AMI parameter.</p>

<b>Parameter</b>	<b>Definition</b>
Ripple (dB)	<p>Peak-to-peak deviation of the transmission path dB loss from a straight line, up to a frequency equal to one half the UI.</p> <p>A large value indicates channel distortion in a channel whose time delay might be beyond the range of available equalizers. This parameter is important primarily for short low-loss channels, and a value of more than about 2 dB is cause for concern.</p>
Ntwk Unequalizable Nrg	<p>Unequalizable Energy from Network Analysis.</p> <p>This parameter is defined as the amount of energy in the impulse response that cannot be equalized out assuming a transmitter with a four tap FFE and a receiver with a peaking filter and no DFE. This parameter can indicate resonance problems.</p>
Impulse Width (ps)	<p>Time interval between the time when 1% of the impulse response energy has been observed and the time when 99% of the impulse response energy has been observed.</p> <p>Set the maximum channel delay to a value greater than the sum of the impulse width and the path delay.</p>
DC Loss (dB)	<p>Channel loss of the channel at very low frequencies excluding the effects of AC coupling.</p> <p>The loss is for the RX and TX channels.</p>
Fc Loss (dB)	<p>Channel loss of the channel at a frequency equal to one half the symbol rate.</p> <p>The loss is for the RX and TX channels.</p>
SDD11 Return Loss (dB)	Return loss presented to the driver by the passive electrical interconnect at a frequency equal to one half the symbol rate.
SDD22 Return Loss (dB)	Return loss presented to the driver by the passive electrical interconnect at a frequency equal to one half the symbol rate.
SDD21 Return Loss (dB)	SDD21 insertion loss in dB.
Simulation	Name of simulation file.
CORNER	The process corner for the simulation. For more information, see “Specify Corner Conditions in Serial Link Design” on page 2-7 or “Specify Corner Conditions in Parallel Link Design” on page 6-6.
Bit_Sequence_Set	Name of stimulus set from the stimulus file to use in simulation.
Network_Characterization	Simulation type for network characterization.
Time_Domain	Simulation type for time domain simulation.
COLUMN	Group name and value number to use in the simulation. Specify this value when there are variation groups in the solution space.



## See Also

### More About

- “Analysis Flow in Serial Link Design” on page 3-9
- “Statistical Analysis Results” on page 3-22
- “Time Domain Analysis Results” on page 3-26
- “Results of Pre-Layout Analysis in Serial Link” on page 3-7
- “Results of Pre-Layout Analysis in Parallel Link” on page 7-8

## Statistical Analysis Results

### Results to View

These are the results data from the Statistical Analysis phase of the analysis. There is a table of data as well as waveform data to view.


Result	Description
BER	Shows the statistical eye, data bathtub, and clock PDF.
Statistical Eye	Shows the statistical eye.
Bathtub	Shows the data bathtub curve, the clock PDF, intersection of the two (Net BER), or all three.
Vertical Bathtub	Shows the vertical (voltage) bathtub curve at the average clock time (0.5UI) or at a user defined (UI).
DJ	Shows the deterministic jitter probability density function.
Contours	Shows the eye contours. The node names identify the inner and outer eye contours. The contours are shown for the target BER values.
Crosstalk	Shows the statistical eye of the crosstalk and noise at the receiver. For more information, see "Model Jitter and Noise While Designing Serial Link" on page 11-9 or "Model Jitter and Noise While Designing Parallel Link" on page 11-2.
Impulse Response	The impulse response of the analog channel, equalized channel, or both.
Step Response	The step response of the analog channel, equalized channel, or both.
Pulse Response	The pulse response of the analog channel, equalized channel, or both.
Aligned Pulse Response	Shows the pulse response shifted in $X$ and $Y$ . The shifts are made as follows: <ul style="list-style-type: none"> <li><math>Y</math> Shift — <math>-Y_0</math>, where <math>Y_0</math> is the <math>Y</math> value of the first point of the equalized pulse response.</li> <li><math>X</math> Shift: <math>-\left(D + \frac{UI}{2000}\right)</math>, where <math>D</math> is the statistical path delay in ns and <math>UI</math> is in ps.</li> </ul>
Transfer Function	Transfer function of the analog channel, equalized channel, or both.
Probed Statistical Eye	Statistical eye at the probed location(s) of the pre-layout schematic. In case of a parallel link project, the result represents the statistical eye at the receiver B node.
Probed Contours	Eye contours at the probed location(s) of the pre-layout schematic. In case of a parallel link project, the result represents the eye contours at the receiver B node.

Result	Description
Probed Crosstalk	Crosstalk eye at the probed location(s) of the pre-layout schematic. In case of parallel link project, it is the crosstalk eye at the receiver B node.
Probed Impulse Response	Impulse response at the probed location(s) of the pre-layout schematic. In case of parallel link project, it is the impulse response at the receiver B node.
Probed Step Response	Step response at the probed location(s) of the pre-layout schematic. In case of parallel link project, it is the step response at the receiver B node.
Probed Pulse Response	Pulse response at the probed location(s) of the pre-layout schematic. In case of parallel link project, it is the pulse response at the receiver B node.
Probed Transfer Function	Transfer function at the probed location(s) of the pre-layout schematic. In case of parallel link project, it is the transfer function at the receiver B node.

**Note** The Stat mode in the **Parallel Link Designer** app does not support user-defined probes but does add a single probe at the Receiver B-Node.

### Node Locations

The full node names in statistical analysis contain the designator names. For example, VTX1 is the V node for the designator TX1.

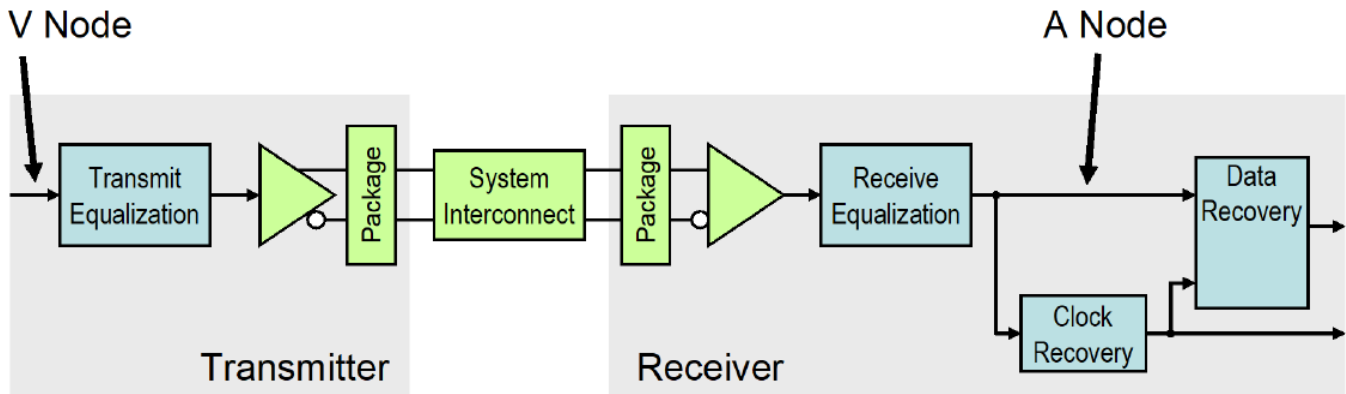

### Table Column Definitions

Parameter	Definition
Transfer Net	Name of the transfer net for the simulation.
Transfer	Bus transaction (designator from-to) for the simulation.
UI (ps)	Unit interval for the transmitted data, defined as the time duration for a single transmitted symbol.

Parameter	Definition
Symbol Rate (Gbps)	Rate at which symbols are transmitted on the channel. The delivered payload UI can be lower for an encoding such as 8b10b is used, or higher for a modulation such as PAM4 is used.
Stat BER	Average bit error as predicted through statistical analysis.
Stat BER Floor	Minimum bit error rate at any point on the bathtub curve derived from statistical analysis.
Stat RJ (ps)	Standard deviation of Gaussian distributed clock to data offset as measured at the receiver decision point. Calculated as the RMS sum of the AMI parameters Rx_Clock_Recovery_Rj, Rx_Clock_Recovery_Dj, Rx_Clock_Recovery_Sj, and Rx_Clock_Recovery_DCD. If none of these AMI parameters are present, this value defaults to 0 ps.
Stat Timing Offset	Mean of the clock to data offset as measured at the receiver decision point. An offset of zero indicates that the data is being sampled exactly at the center of the data eye. This parameter can also be called the static timing offset.
Stat Path Delay	The path delay of a data pulse, as detected by clock recovery during statistical analysis.  <b>Note</b> If the algorithmic models use different delay values in statistical and time domain modes, then this parameter does not have the same value as the path delay determined during time domain simulation.
Stat Eye Height	Height of the target bit error rate contour at the average clock time. For more information, see “Eye Measurement and Reporting” on page 13-17.
Stat Eye Margin	Voltage measured from the sensitivity threshold to the target BER contour at the average clock time. For more information, see “Eye Measurement and Reporting” on page 13-17.
Stat Eye Outer Height	Maximum voltage measured on the outer eye. This parameter represents the maximum voltage measured on the zero outer contour. For more information, see “Eye Measurement and Reporting” on page 13-17.
Stat Eye Width	Total width of the target bit error rate contour at the ideal decision threshold. For more information, see “Eye Measurement and Reporting” on page 13-17.
Stat Setup Time	Time between the sensitivity threshold crossing at the early edge of the target bit error rate contour and the average clock time.
Stat Hold Time	Time between the average clock time and the sensitivity threshold crossing of the late edge of the target bit error rate contour.
Stat DJ Peak (UI)	Maximum deviation from the median zero crossing time for all zero crossings in the statistical eye.
Stat DJ Sigma (UI)	Standard deviation of all zero crossing times in the statistical eye.

Parameter	Definition
Eq Signal/Xtalk (dB)	Ratio of equalized signal energy to the combined equalized energy of all of the crosstalk aggressors, as measured at the input to the receiver decision circuit.  An equalized signal to crosstalk ratio of 23 dB should be safe for a target BER of $10^{-12}$ , and a ratio of 27 dB should be safe in general. Any signal to crosstalk ratio less than 23 dB should be investigated in detail, and will most likely not meet performance requirements.
Total Xtalk (Vrms)	RMS amplitude for the combination of all of the crosstalk aggressors.
Stat Unequalized Nrg	Unequalized energy representing the amount of energy in the equalized impulse response that is not equalized out.
Tx Level (V)	Maximum absolute value of the differential output voltage of the driver, measured when driving a load whose impedance is equal to the output impedance of the driver.
Amplitude Noise (Vrms)	Standard deviation of the Gaussian distributed amplitude noise as measured at the receiver decision point.
Simulation	The name of the simulation file for the simulation.
CORNER	The process corner for the simulation. For more information, see “Specify Corner Conditions in Serial Link Design” on page 2-7 or “Specify Corner Conditions in Parallel Link Design” on page 6-6.
Bit_Sequence_Set	The bit sequence set used in the analysis.
Network Characterization	Simulation type for network characterization.
Time Domain	Simulation type for time domain analysis.
COLUMN	Specific group name and value number used in the simulation. This is valid when there are variation groups in the solution space.

## See Also

### More About

- “Analysis Flow in Serial Link Design” on page 3-9
- “Network Characterization” on page 3-9
- “Time Domain Analysis Results” on page 3-26
- “Results of Pre-Layout Analysis in Serial Link” on page 3-7
- “Results of Pre-Layout Analysis in Parallel Link” on page 7-8

## Time Domain Analysis Results

### Results to View


These are the results data from the Time Domain Analysis phase of the analysis. There is a table of data as well as waveform data to view.

Result	Description
BER	Shows the persistent eye, data bathtub, and clock PDF.
Persistent Eye	Shows the persistent eye.
Bathtub	Shows the data bathtub curve.
Vertical Bathtub	Shows the vertical (voltage) bathtub curve at the average clock time (0.5UI) or at a user defined (UI).
DJ	Shows the deterministic jitter probability density function.
Contours	Shows the eye contours. The node names identify the inner and outer eye contours. The contours are shown for the target BER values plus at any additional BER values requested by the user.
Waveform	Shows the time domain waveform. The waveform can be shown at the die pad (B node), the data latch (A node, after the equalization), or both.
Stimulus	Shows the bit sequence time domain waveform.
Probed Persistent Eye	Persistent eye at the probed location(s) of the pre-layout schematic. In case of a parallel link project, the result represents the persistent eye responses at the receiver B node.
Probed Contours	Eye contours at the probed location(s) of the pre-layout schematic. In case of a parallel link project, the result represents the eye contours at the receiver B node.
Probed Waveform	Waveform at the probed location(s) of the pre-layout schematic. In case of parallel link project, it is the waveform at the receiver B node.

**Note** The Stat mode in the **Parallel Link Designer** app does not support user-defined probes but does add a single probe at the Receiver B-Node.

### Node Locations

The full node names in time analysis contain the designator names. For example, VTX1 is the V node for the designator TX1.

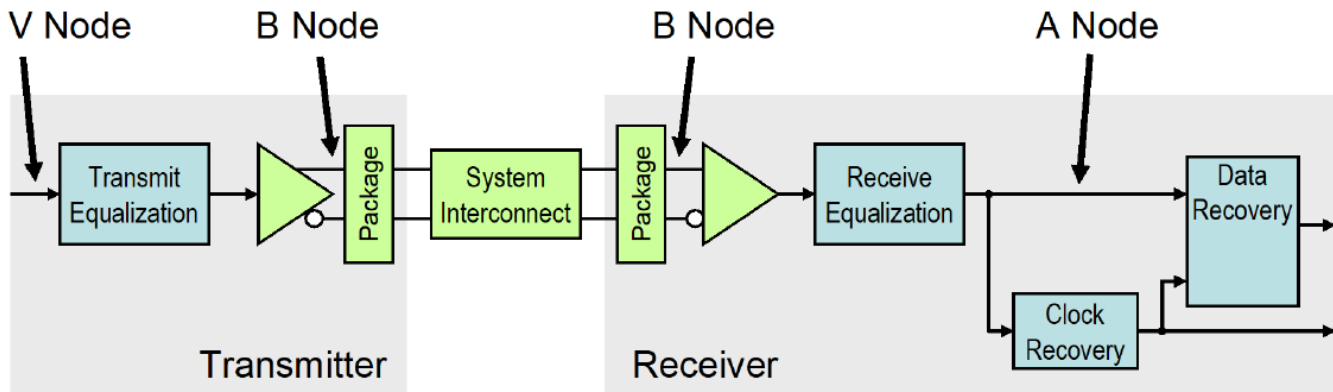

### Table Column Definitions

Parameter	Definition
Transfer Net	Name of the Transfer Net for the simulation.
Transfer	Bus transaction (designator from-to) for the simulation.
UI (ps)	Unit interval for the transmitted data. It is defined as the time duration for a single transmitted symbol.
Symbol Rate (Gbps)	Rate at which symbols are transmitted on the channel. The delivered payload UI may be lower if an encoding such as 8b10b is used, or higher if a modulation such as PAM4 is used.
TD BER	Average bit error as predicted through time domain simulation.
TD BER Floor	Minimum bit error rate at any point on the bathtub curve derived from time domain simulation.
TD RJ (ps)	Standard deviation of the clock ticks output from the receiver AMI model.  <b>Note</b> Interpret this value based on the receiver model, as some receiver models do not produce any clock ticks. In models that produce clock ticks, this value measures only pattern-dependent jitter.
TD Timing Offset	Average difference between the clock ticks and the path delay as determined by the clock recovery algorithm built into the time domain analysis. This values compares between two different clock recovery algorithms. Depending on the AMI model for the receiver, this number can be a measure of the static timing offset due to reference clock offset between the transmitter and receiver.
TD Path Delay	The path delay of a data pulse, as detected by clock recovery during time domain simulation.  <b>Note</b> If the algorithmic models have different delay in statistical and time domain modes, then this number will be different from the path delay determined during statistical analysis.

<b>Parameter</b>	<b>Definition</b>
TD Eye Height (V)	Height of the target bit error rate contour at the average clock time. For more information, see “Eye Measurement and Reporting” on page 13-17.
TD Eye Margin (V)	Voltage measured from the sensitivity threshold to the target BER contour at the average clock time. For more information, see “Eye Measurement and Reporting” on page 13-17.
TD Eye Outer Height	The maximum voltage measured on the outer eye. This is the maximum voltage measured on the zero outer contour. For more information, see “Eye Measurement and Reporting” on page 13-17.
TD Eye Width (ps)	Total width of the target bit error rate contour at the ideal decision threshold. For more information, see “Eye Measurement and Reporting” on page 13-17.
TD Setup Time (ps)	Time between the sensitivity threshold crossing at the early edge of the target bit error rate contour and the average clock time.
TD Hold Time	Time between the average clock time and the sensitivity threshold crossing of the late edge of the target bit error rate contour.
TD DJ Peak (UI)	The maximum deviation from the median zero crossing time for all zero crossings in the time domain (persistent) eye.
TD DJ Sigma (UI)	The standard deviation of all zero crossing times in the time domain (persistent) eye.
Data Pattern	Name(s) of the data pattern(s) and encoding (if any) simulated.
Bits Simulated	Total number of bits simulated in the time domain simulation.
Simulation	Name of the simulation file.
CORNER	The process corner for the simulation. For more information, see “Specify Corner Conditions in Serial Link Design” on page 2-7 or “Specify Corner Conditions in Parallel Link Design” on page 6-6.
Bit_Sequence_Set	The bit sequence set used in the analysis.
Network Characterization	Simulation type for network characterization.
Time Domain	Simulation type for time domain analysis.
COLUMN	Group name and value number to use in the simulation. Specify this value when there are variation groups in the solution space.

## See Also

### More About

- “Analysis Flow in Serial Link Design” on page 3-9
- “Network Characterization” on page 3-9
- “Statistical Analysis Results” on page 3-22
- “Results of Pre-Layout Analysis in Serial Link” on page 3-7
- “Results of Pre-Layout Analysis in Parallel Link” on page 7-8



## Managing Simulation Data and Results

You can create thousands of simulations in a serial link or parallel link project by sweeping different variables in the solution space. Setting up and simulating exhaustive sweeps is easy, but sorting through the results to get answers can be difficult and time consuming. From a visual standpoint, you may only wish to see certain columns of data or re-order the columns to better view the results. From a data management aspect, you might want to quickly sort, filter, or roll-up of data in a column or columns of results. You may also wish to configure and save the applied visual and data management settings of the viewer for present and future **Signal Integrity Viewer** sessions to simplify the analysis.

You can mine and manage the simulation data generated by the **Signal Integrity Viewer** in two ways:


- Data mining from the main app window — quick and easy way to evaluate simulation results.
- Data mining using the table control — in-depth process of setting up visibility, sort, filter and roll-up operations for the simulation results.

### Data Mining from Signal Integrity Viewer App Window

Simulation results are contained in rows of data. Results for a simulation are in a multi-column row. Depending on the number of variables and settings there can be tens or hundreds of columns. The **Signal Integrity Viewer** app can only show a limited number of results at a time. But you can quickly sort the results from the main app window.

#### Moving Columns

To re-order the columns for comparison with others or to group the design critical metrics together, simply select the header and hold down the left mouse button. Drag the column to the desired position in the table.

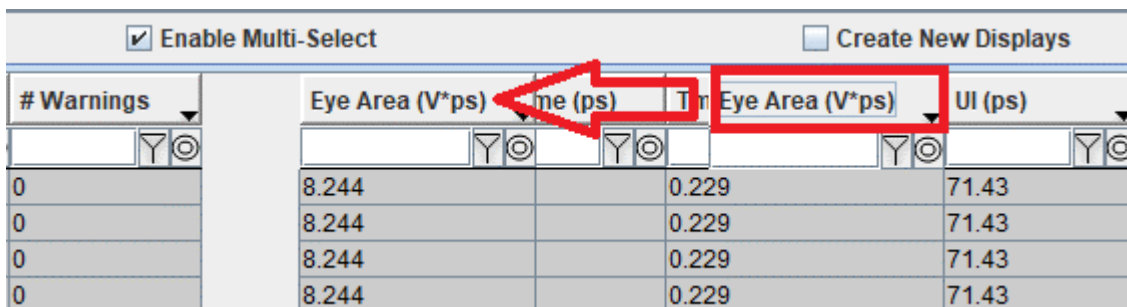

The screenshot shows a table with the following headers and data:

# Warnings	Eye Area (V*ps)	Time (ps)	Eye Area (V*ps)	UI (ps)
0	8.244		0.229	71.43
0	8.244		0.229	71.43
0	8.244		0.229	71.43
0	8.244		0.229	71.43

#### Sorting Within Column

To quickly sort simulation results such as BER or Eye Height in ascending or descending order, click on the column header with the left mouse button. Select once for ascending or a second time for descending. It toggles between ascending and descending each time selected. The direction of the arrow in the column header shows if the column is sorted in ascending or descending order.

<input type="checkbox"/> Create New Displays		
Stat Path Delay (ns)	Stat Eye Height (V)	Stat Eye Margin (V)
0.94558	0.229777	0.113666
0.94558	0.229777	0.113666
1.03248	0.222798	0.108376
1.03248	0.222798	0.108376
1.03248	0.222798	0.108376

### Filtering Data from Column

You can include or exclude data based on a wildcard by filtering data within column. You can enter the text or numerical data wildcard by using the text box below any column and click the filter button next to the text box. To disable filtering, click on the icon a second time. The small down arrow in the lower right-hand corner of the column header allows for setting the filter treatment. In this case it is set to **Greater Than Or Equal To**.

Stat Upper Best Eye Height (V)	Stat Center Best Eye Height (V)	Stat Lower Best Eye Height (V)	\$W1:LENGTH (in)	Stat
0.1				
0.150223			5.0	3
0.149763			5.0	2
0.14239				
0.140574				
0.138987	0.138743	0.138987		
0.132776	0.132386	0.132776		
0.13208	0.131773	0.13208		
0.128897	0.129149	0.128897		
0.127713	0.12733	0.127713		
0.126753	0.126384	0.126753		
0.124284	0.124248	0.124284		
0.123038	0.123308	0.123038		
0.121674	0.121744	0.121674		
0.12099	0.12099	0.12099		

Options for column Stat Upper Best Eye Height (V):


Rolled Up Treatment (<Mixed>)


Filter Treatment (Greater Than Or Equal To)

- Matches Wildcard
- Does Not Match Wildcard
- Equals
- Does Not Equal
- Greater Than
- Greater Than Or Equal To
- Less Than
- Less Than Or Equal To
- Between

**Note** The **Matches Wildcard** and **Does Not Match Wildcard** options can be used with text or numeric values. The other options can only be used with numeric values.

### Rolling Up Column

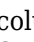The roll up function collapses the rows of the table so that there is one row for each unique value in the associated column. To roll up a column, click the roll up icon . To disable rolling up, click on the icon a second time. To choose how the rolled-up data is treated, select the small down arrow in the column header.

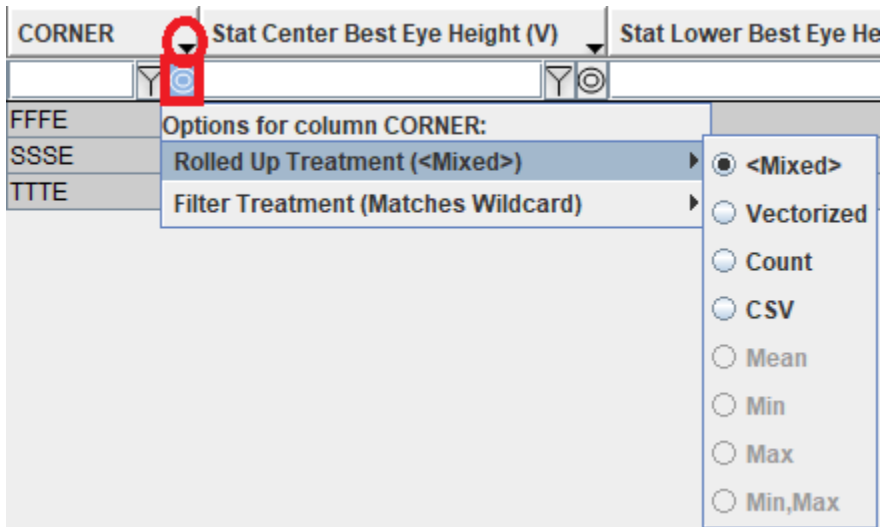

The available roll up treatments are:

- **Mixed** — If there is more than one value in the table, cells that are being rolled up display **<Mixed>** in the rolled-up cell for this column.
- **Vectorized** — Vectorizes the values in the table cells that are being rolled up.
- **Count** — Displays the number of rows rolled up.
- **CSV** — Displays the unique values as a CSV (Comma Separated Value) list.
- **Mean** — Displays the mean of all values rolled up.
- **Min** — Displays the minimum of all values rolled up.
- **Max** — Displays the maximum of all values rolled up.
- **Min,Max** — Displays the minimum and maximum of all values rolled up.

---

**Note** The **Mean**, **Min**, **Max**, and **Min,Max** options can only be used with numeric values. The other options can be used with both text and numeric values.

---

## Data Mining Using Table Column Control

The Table Column Control allows you to set up and save the preferences for column visibility, roll up, and filter. You can fully customize your **Signal Integrity Viewer** sessions using this tool. A Table Column Control session is unique to each tab (for example, Network, Statistical, or Time Domain in the **Serial Link Designer** app). Setting up and saving a Table Column Control session can only be used in that specific tab.

To start a Table Column Control session, click the gear icon in the first **Row** column of the **Signal Integrity Viewer** app window. You can reset the view to the default status by clicking the home icon.

Row	ID	Transfer Net
1	22	simulation_example
2	1366	simulation_example
3	1408	simulation_example
4	1450	simulation_example
5	1492	simulation_example

### Visualizing Columns

Table Column Control allows you to set the visibility for each column. The first column in the Table Column Control contains check boxes for each category of results. You can select certain columns for viewing while suppressing lesser relevant columns. You can also re-order columns of data. You can also set all columns to be visible or invisible.

Table Column Control - Statistical

Selected Table View: <Default>

Right-Click on Table to Access Additional Functions.

Visible	Column Name	Column #	Rollu
Fixed	ID	1 (Fixed)	
Fixed	Transfer Net	2 (Fixed)	
Fixed	State	3 (Fixed)	
Fixed	Transfer	4 (Fixed)	
<input checked="" type="checkbox"/>		5	
<input checked="" type="checkbox"/>	Clear All Wildcards	6	
<input checked="" type="checkbox"/>	Disable All Rollups	7	
<input checked="" type="checkbox"/>	Reset All Rolled Up Treatments	8	
<input checked="" type="checkbox"/>	Disable All Filters	9	
<input checked="" type="checkbox"/>	Reset All Filter Treatments	10	
<input checked="" type="checkbox"/>	Set All Visible	11	
<input checked="" type="checkbox"/>	Set All Invisible	12	
<input checked="" type="checkbox"/>	Reset All Visibility and Order	13	
<input checked="" type="checkbox"/>	Stat RJ (ps)	15	
<input checked="" type="checkbox"/>	Stat Timing Offset (ps)	16	

### Ordering Columns

To order the columns, simply select the row(s) and use the arrow keys in the top right corner of the Table Column Control window. You can also move the row to the top or bottom of the list.

Visible	Column Name	Column #	Rollup	Rollled Up Treatment	Filter	Wildcard	Filter Treatment
Fixed	ID	1 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
Fixed	Transfer Net	2 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
Fixed	State	3 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
Fixed	Transfer	4 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	# Errors	5	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	# Warnings	6	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Tmid Time (ps)	7	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Tmid Eye Height (V)	8	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Eye Area (V*ps)	9	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	UI (ps)	10	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Data Rate (Gbps)	11	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Symbol Rate (Gbaud)	12	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Stat BER	13	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Stat BER Floor	14	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard

### Rolling Up Columns

The roll up function collapses the rows of the table so that there is one row for each unique value in the associated column. To select a column for roll up, select the checkbox in the **Rollup** column for that particular row. You can choose the how the rolled up data is treated from the **Rollled Up Treatment** column.

Visible	Column Name	Column #	Rollup	Rollled Up Treatment
Fixed	ID	1 (Fixed)	<input type="checkbox"/>	<Mixed>
Fixed	Transfer Net	2 (Fixed)	<input type="checkbox"/>	<Mixed>
Fixed	State	3 (Fixed)	<input type="checkbox"/>	<Mixed>
Fixed	Transfer	4 (Fixed)	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	# Errors	5	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	# Warnings	6	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Tmid Time (ps)	7	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Tmid Eye Height (V)	8	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Eye Area (V*ps)	9	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	UI (ps)	10	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Data Rate (Gbps)	11	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Symbol Rate (Gbaud)	12	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Stat BER	13	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Stat BER Floor	14	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Stat RJ (ps)	15	<input type="checkbox"/>	<Mixed>

The available roll up treatments are:

- **Mixed** — If there is more than one value in the table, cells that are being rolled up display **<Mixed>** in the rolled-up cell for this column.
- **Vectorized** — Vectorizes the values in the table cells that are being rolled up.
- **Count** — Displays the number of rows rolled up.
- **CSV** — Displays the unique values as a CSV (Comma Separated Value) list.
- **Mean** — Displays the mean of all values rolled up.

- **Min** — Displays the minimum of all values rolled up.
- **Max** — Displays the maximum of all values rolled up.
- **Min,Max** — Displays the minimum and maximum of all values rolled up.

You can also disable all roll ups or reset all roll up treatments.

#### Filtering Columns

To select a column for filtering, select the checkbox on **Filter** column for that particular row. You can enter a numerical or text filtering wildcard in the **Wildcard** column. You can select the filter treatment option from the **Filter Treatment** column. You can also disable or reset all filtering treatment options.

Visible	Column Name	Column #	Rollup	Rolled Up Treatment	Filter	Wildcard	Filter Treatment
Fixed	ID	1 (Fixed)			<input type="checkbox"/>		Matches Wildcard
Fixed	Transfer Net	2 (Fixed)			<input type="checkbox"/>		Matches Wildcard
Fixed	State	3 (Fixed)			<input type="checkbox"/>		Matches Wildcard
Fixed	Transfer	4 (Fixed)			<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	# Errors	5			<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	# Warnings	6			<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Tmid Time (ps)	7			<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Tmid Eye Height (V)	8			<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Eye Area (V*ps)	9			<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	UI (ps)	10			<input type="checkbox"/>		Matches Wildcard


---

**Note** The **Matches Wildcard** and **Does Not Match Wildcard** options can be used with text or numeric values. The other options can only be used with numeric values.

---

#### Saving Table Column Control View


You can save the Table Column Control views to use after simulations has been rerun or to use with other projects. Once you make a change to the Table Column Control dialog box, the **Selected Table View** changes from **Default** to **Modified**. By clicking the **View Manager** button, you can save the modified view using a unique name.

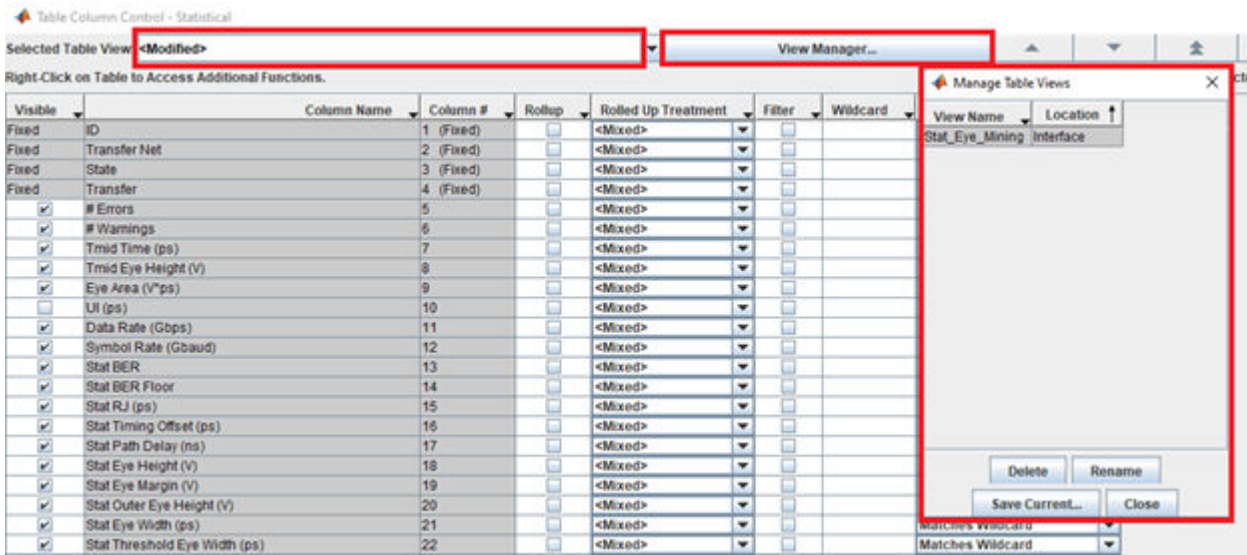

The Manage Table Views window also shows any currently saved views. You can delete or rename the existing views or save the current view.

While saving the current you, you have two options as to where the views are saved:

- **User** — The view is saved in your local install area. You can access the view during the current and any subsequent **Signal Integrity Viewer** sessions regardless which project is open.
- **Interface** — The view is saved in the project interface folder. You can access the view only when the project interface is open and simulation results are available.

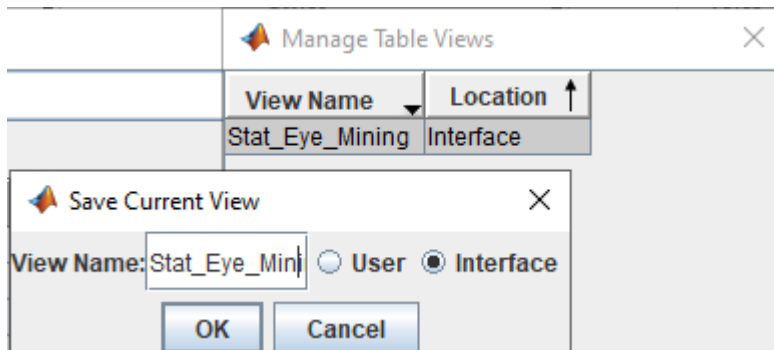

## See Also

### More About

- “Network Characterization” on page 3-9
- “Statistical Analysis Results” on page 3-22
- “Time Domain Analysis Results” on page 3-26
- “Results of Pre-Layout Analysis in Serial Link” on page 3-7
- “Results of Pre-Layout Analysis in Parallel Link” on page 7-8





# Post-Layout Verification of Serial Link

---

- “Post-Layout Verification of Serial Link” on page 4-2
- “Stackup and Extraction Control in Serial Link Project” on page 4-6
- “Via and Stackup Management in Serial Link Project” on page 4-9
- “Post-Layout to Pre-Layout Extraction” on page 4-15

## Post-Layout Verification of Serial Link

### In this section...

“Board” on page 4-3

“Instance” on page 4-3

“Connection” on page 4-4

“Assignment” on page 4-4

“Population” on page 4-5

“Simulation” on page 4-5

“Topology” on page 4-5

 
Post-layout verification provides you with an integrated signal integrity and timing environment to verify system-level SI and timing margins for your fully or partially routed PCB design databases.

The post-layout process supports single-board and multi-board analysis, along with connectivity through packages, connectors, and cabling. The post-layout verification environment provides you the ability to extract and analyze PCB databases from any combination of the following CAD (Computer Aided Design) formats:

- MathWorks® Neutral
- IPC-2581
- OBD++
- Cadence® Allegro
- Mentor PADS Layout
- Mentor Board Station
- Mentor Expedition PCB
- Cadence APB
- Intercept Pantheon
- Altium® Designer
- Altium P-CAD
- IBIS EBD


Post-layout analysis takes place in the interface of a serial link design project. If the interface you are working in has pre-layout transfer nets defined, post-layout uses them from the reference schematic set. If there are no transfer nets in the reference schematic set of the interface, the **Serial Link Designer** app creates sheets with system transfer nets (STNETs).

The post-layout verification workflow is the same for each PCB database type. First import the PCB databases, setup the boards, connect the instances if there are multiple boards in the system, run assignment, setup and analyze the nets, set up simulation properties, then simulate and view the results.



## Board

The first step in the post-layout verification process is board set-up and assignment. A PCB database you import to the **Serial Link Designer** app is called a board. At the board level, check and edit all stackups, voltage nets, and models. To create variations of a PCB database using different stackups, voltages, or models, create multiple boards with unique names.

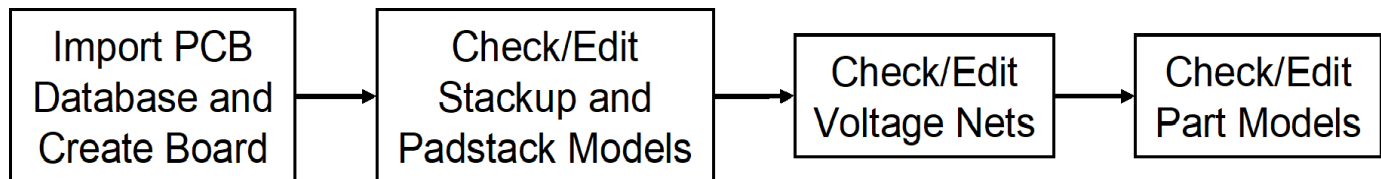

To perform the setup and assignment functions, access the Post-Layout Setup & Assignment dialog box from the **Setup > Setup & Assignment** menu in the app toolbar.

For each board in the system, specify the type of the PCB database and the files in the database, view or edit the stackup, view or set voltage nets, and manage models by clicking the **Import & Setup Board** button in the Post-Layout Setup & Assignment dialog box. The Import & Setup Board dialog box has four tabs:

- **Import**

Use the **Import Board** tab to import a PCB database and create a board. Select the PCB database type from the **PCB Database Type** selector list. By default, the **Serial Link Designer** app creates an instance for each board and copies the PCB database files into the current project. If you do not copy the PCB database into the project, you cannot re-import the database files.

- **Stackup**

The **Stackup** tab shows the stackup from the PCB database and allows control of padstack models. The Stackup Editor on the left side of the tab shows the stackup as it is read in from the PCB database. If necessary, you can override the auto-generated trace models using the editor. The right side of the tab has controls for the auto-generated padstack backdrill options, differential extraction, and DRC control. For more information, see “Stackup and Extraction Control in Serial Link Project” on page 4-6.

- **Voltages**

The **Voltages** tab shows the CAD nets in the PCB database for the board and allows you to specify the voltage for specific voltage nets. Non-voltage nets have an NA value in the voltage column.

---

**Note** The **Voltages** tab does not control the voltages in the IBIS or SPICE models for TX/RX designators. This tab is mainly used to correctly define the on-board terminations that require connection to a specific voltage.

---

- **Parts**

Use the **Parts** tab to match models to parts in the PCB database.

## Instance

An instance is an internal copy of a board that you can connect to other instances and analyze. Every board that is used in the design has at least one instance. If you use the same board more than once,

you must define a separate instance for each use. For example, a system consisting of a motherboard with two DIMM slots that has the same type of DIMM plugged into each slot will have one instance of the motherboard and two instances of the DIMM.

## Connection

A Connection is a pin-to-pin path from the pins of a reference designator on one instance to the pins of a reference designator on a second instance. In a multi-board system, connections between instances are specified in the Connections pane of the Post-Layout Setup & Assignment dialog box. To add a connection, click the **Add Connection** button.

## Assignment

The Assignment process is an automated process for associating nets in the PCB database with transfer nets. This simplifies the setup of the essential net properties in the typical scenarios that you will face:

- **Interface without Transfer Nets**


If you did not do a pre-layout analysis in an interface, you can create and edit transfer nets from the post-layout interface. When you set the properties of a transfer net, you set the properties of all nets assigned to that transfer net. For example, when you change the properties of a transfer net, the app automatically assigns those properties to all nets in a data bus.

- **Interface with Transfer Nets from Pre-Layout Analysis**

If you completed pre-layout analysis in an interface, the app automatically assigns the nets you created in post-layout analysis to the transfer nets you created in the pre-layout analysis.

- **Design Kits**

A design kit is an interface with models and preconfigured transfer nets. The app automatically assigns the nets you created in post-layout analysis to these transfer nets.

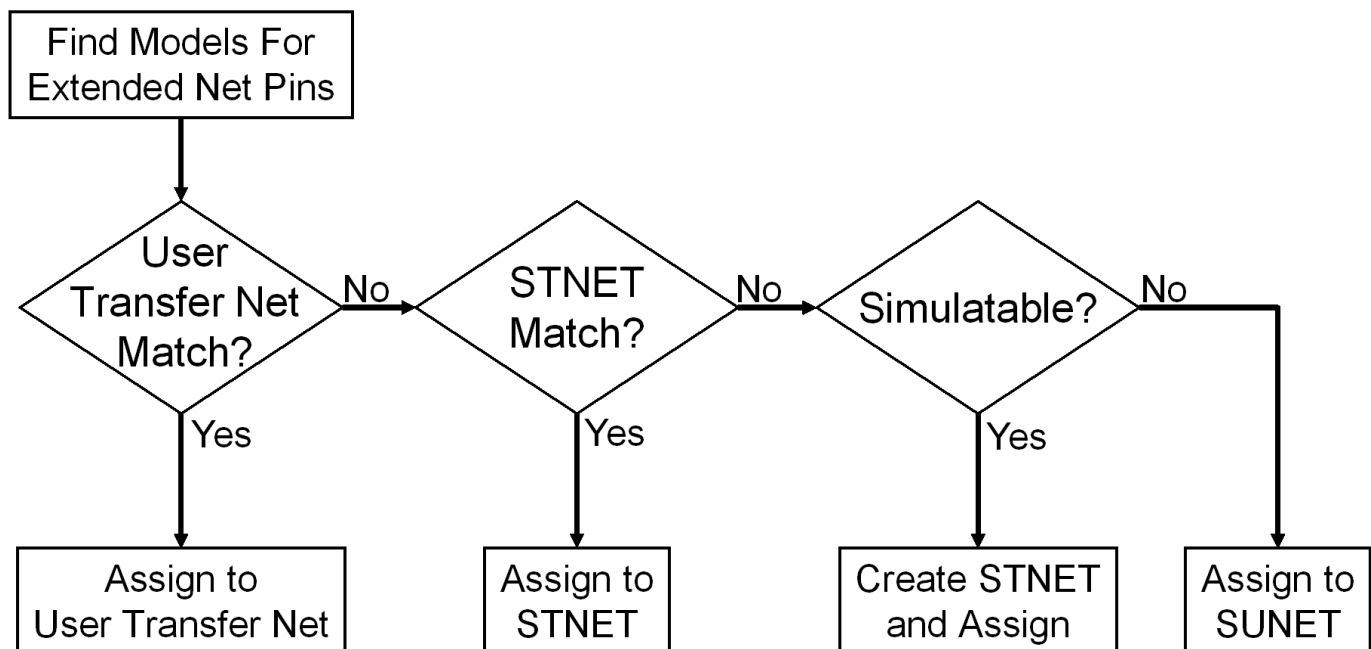

In all cases, the transfer nets and the assignment process ensure that all nets in an interface are set up and ready to simulate in a fraction of the time needed to set up each net in the interface individually.

## Population

Populations allow you to setup multiple configurations of a system for simulation in one project. The app handles populations through the naming of instances.

For example, if a one-slot motherboard can accept one of three DIMMs (dual in-line memory modules), it can be set up by creating three instances of the motherboard and one instance of each DIMM. In this case, three populations can be defined: the motherboard with RCA installed, the motherboard with RCB installed and the motherboard with RCC installed

## Simulation

Before you run a simulation, you must select the nets for the post-layout verification. Select the nets and add them to the list of nets to simulate. You also need to set up the stimulus patterns from simulation properties.

## Topology

Extended nets that can be simulated (assigned to an STNET or user transfer nets) can have topologies created from the extracted PCB data. View these topologies from the **Pre-Layout Analysis** tab. The topologies are useful for understanding how an actual network is routed and to resolve waveform quality or timing issues identified by using post-layout verification. Once the extracted post-layout networks are in the pre-layout analysis environment, you can perform quick “what-if” analyses to identify an appropriate solution.

## See Also

### More About

- “Stackup and Extraction Control in Serial Link Project” on page 4-6
- “Via and Stackup Management in Serial Link Project” on page 4-9

## Stackup and Extraction Control in Serial Link Project

The **Stackup** tab of the **Import & Setup Board** dialog shows the stackup from the PCB Database and allows for extraction control for padstack, differential traces, and DRC.

The tab is divided into two areas: **Stackup Editor** and **Extraction Control**. The **Stackup Editor** on the left side of the tab shows the stackup that was read from the PCB Database and allows the override of the auto-generated stackup thicknesses, material properties, and trapezoidal angle as well as the ability to do “What If” exploration and select whether to model discontinuities associated with etches crossing split planes. The right side of the tab controls the padstack backdrill options, differential extraction, and DRC control.

The screenshot shows the 'Stackup' tab of the 'Import Board' dialog. It features a 'Stackup = dimm.stkup' title, a 'Show "What If" Calculator' checkbox, and a 'Model Split Planes' checkbox. A diagram of a trapezoidal cross-section is shown with width 'W' and thickness 'T'. Below this, the board height is 57.4803mils and the selected layer(s) thickness is 0.0mils. A table lists the stackup layers:

ID	Layer Name	Type	Material	Thickness (mils)	f (GHz)	Er (f)	Loss Tangent	Conductivity (Meg)	Angle (Degrees)
1		Dielectric	POLYI...	0.59055	1.0	4.3	0.0		
2	TOP	Signal	COPP...	1.5748	1.0	4.5	0.0	59.59	90.0
3		Dielectric	FR-4	2.75591	1.0	4.5	0.0		
4	L2_VSS	Plane	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
5		Dielectric	FR-4	2.75591	1.0	4.5	0.0		
6	L3_DQ	Signal	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
7		Dielectric	FR-4	5.31496	1.0	4.5	0.0		
8	L4_CA	Signal	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
9		Dielectric	FR-4	3.93701	1.0	4.5	0.0		
10	L5_VDD	Plane	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
11		Dielectric	FR-4	3.34646	1.0	4.5	0.0		
12	L6_CA	Signal	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
13		Dielectric	FR-4	5.11811	1.0	4.5	0.0		
14	L7_CA	Signal	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
15		Dielectric	FR-4	2.24646	1.0	4.5	0.0		

The right side of the dialog contains three panels: 'Back Drill Behavior' with settings for Component Pins, Vias, Connector Pins, Back Drill Stub (10.0 mils), Per Layer Stub, and Press Fit Pin Depth (50.0 mils); 'Differential Extraction' with settings for Max Differential Clearance (12.0 mils), Max Skew (50.0 mils), and Max Extend (100.0 mils); and 'DRC Control' with an Etch Over Plane Edge Clearance (5.0 mils).

### Stackup Editor

The **Stackup Editor** displays one row for each signal, plane, and dielectric layer in the stackup. Parameter values can be changed if desired by typing new values into the table cells. The stackup data plus the trace width data are used by the field solver to create lossy transmission line models for post-layout nets.

Each layer must be defined as either **Dielectric**, **Mixed**, **Plane**, or **Signal** in the stackup column called **Type**. Signal layers can be either type **Mixed** or **Signal**. The **Mixed** designation is provided primarily for boards and packages where sections of the signal layer may contain small planes for impedance control. In most cases the **Signal** designation would be sufficient, but it is important to carefully review the board layout and identify cases where **Mixed** may be required.

Checking **Model Split Planes** enables modeling of discontinuities associated with etches crossing over splits in planes. The change in trace cross-section results in an impedance change in the model.

Checking **Table-Driven Loss Model** allows a table-driven loss model to be used. When checked, the list contains the names of imported loss models and the item **Assign Per Layer Loss Model**. When a

loss model is selected, it is used for all layers in the stackup. If **Assign Per Layer Loss Model** is selected, from the list the **Table-Driven Loss Model** column appears in the stackup with a list to choose the loss model for each signal layer.

You may use the **Stackup Editor** as a calculator to compute trace impedance based upon the width and separation. To use the calculator:

- 1 Check the **Show “What If” Calculator** check box to display the calculator columns
- 2 Enter one or more values in the appropriate cells followed by the tab key
- 3 Click **Calculate**

This uses the stackup data with the **Desired Width** and **Desired Separation** values to calculate the single-ended and differential impedance for that layer.

## Extraction Control

The **Extraction Control** section of the tab controls the backdrill behavior, differential extraction, and DRC control.

Backdrilling uses Must Not Cut Layers. Must Not Cut Layers are layers that define a valid backdrill depth. In the stackup there are columns for Must Not Cut Layers from the top and bottom. The backdrill goes from the top or bottom up to but not through the last Must Not Cut Layer that is encountered before a trace connection to a via or pin. If no Must Not Cut layer is encountered before the trace connection to the via or pin, then the via or pin is modeled as not backdrilled.

Backdrill Behavior Choice	Description
None	No backdrilling. The complete via or pin is extracted, and a model generated based on the PCB data for start and end layers.
Top	The via or pin is modeled as if it were drilled from the top of the board. The via or pin ends at the lowest layer with <b>Backdrill Top Must Not Cut Layer</b> checked in the stackup that is above the highest layer with a trace connected to the via or pin. A stub equal to the <b>Back Drill Stub</b> parameter is left. If there is no layer with <b>Backdrill Top Must Not Cut Layer</b> checked that is above the highest trace connection to the via or pin, the via or pin is not backdrilled.
Bottom	The via or pin is modeled as if it were drilled from the bottom of the board. The via or pin ends at the highest layer with <b>Backdrill Bottom Must Not Cut Layer</b> checked in the stackup that is below the lowest layer with a trace connected to the via or pin. A stub equal to the <b>Back Drill Stub</b> parameter is left. If there is no layer with <b>Backdrill Bottom Must Not Cut Layer</b> checked that is below the lowest trace connection to the via or pin, the via or pin is not backdrilled.

Backdrill Behavior Choice	Description
Both	Both top and bottom are modeled as described above.
Longest Stub	Drills from the side that remove the longest stub based on the Must Not Cut layers defined in the stackup.

In the **Differential Extraction section** of the **Padstack Editor**, you can define the parameters that control the extraction of the differential nets.

Parameter	Description
<b>Max Differential Clearance</b>	The maximum edge-to-edge clearance two traces can have and still be extracted as a differential transmission line model. If the clearance is larger than this parameter, the traces are extracted as two single-ended transmission line models.
<b>Max Skew</b>	The maximum length difference between the two traces in a single differential trace w-line model. It is recommended that this be set no larger than 1/10 of the wavelength of the maximum frequency of interest.
<b>Max Extend</b>	The maximum total length of single-ended trace that can be combined with a differential trace in a w-line model.

The DRC control defines the minimum distance from a trace to a plane edge when the trace crossing DRC is run using the **Etch Over Plane Edge Clearance** parameter.

## See Also

### More About

- “Post-Layout Verification of Serial Link” on page 4-2
- “Via and Stackup Management in Serial Link Project” on page 4-9



## Via and Stackup Management in Serial Link Project

The vias are associated with a stackup in the library where they are stored. There can be multiple stackup and via libraries in a project. The first time you edit a via in pre-layout you are prompted for the number of layers to use for the default pre-layout stackup. In post-layout the stackup and vias are from the PCB database by default. Use the **Via Editor** dialog box by right clicking on the vias in the Pre-Layout Analysis tab to manage them. The elements in the via editor can be divided into three groups: common via elements, pre-layout specific via elements, and post-layout specific via elements.

Via Editor -- Editing Via "X\_ViaDiff1" X

File Edit

Library = Stackup default.stkup + Pre-Layout Vias

Cursor( 25.279330) 65.5 Ohms  
22.7 Ohms  
= 3.1 ps  
tub = 0.0 s  
n Stub = 873.  
= 23.0 fF  
ace = 55.0 m

Board Height = 64.2mils Selected Layer(s) Thickness = 0.6mils  Edit Stackup

ID	Layer Name	Type	Thickness (mils)	Left Via Connect	Left Via X-Section	Right Via X-Section	Right Via Connect
1		Dielectric	1.0				
2	Top	Signal	0.6	<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>
3		Dielectric	5.0				
4	P1	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
5		Dielectric	5.0				
6	L2	Signal	0.6	<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>
7		Dielectric	5.0				
8	P2	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
9		Dielectric	5.0				
10	L3	Signal	0.6	<input type="checkbox"/>			<input type="checkbox"/>
11		Dielectric	5.0				
12	P3	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
13		Dielectric	5.0				
14	P4	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
15		Dielectric	5.0				
16	L4	Signal	0.6	<input type="checkbox"/>			<input type="checkbox"/>
17		Dielectric	5.0				
18	P5	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
19		Dielectric	5.0				
20	L5	Signal	0.6	<input type="checkbox"/>			<input type="checkbox"/>
21		Dielectric	5.0				
22	P6	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
23		Dielectric	5.0				
24	Bottom	Signal	0.6	<input type="checkbox"/>			<input type="checkbox"/>
25		Dielectric	1.0				

Finished Hole Diameter 18.0 mils  
 Drilled Hole Diameter 21.0 mils

Pad Antipad Racetrack  
 Shape Circle Circle  
 Diameter 30.0 50.0 mils  
 Width 30.0 50.0 110.0 mils  
 Height 30.0 50.0 50.0 mils

Pads On All Layers  
 Differential Via Spacing 60.0 mils  
 Racetrack

Back Drill  
 Enab...  By St...  By L...  By D...

Drill Side	Stub (mils)	Layer	Depth (mils)
Top	0.0		0.0
Bottom	5.0	P2	46.4

Model Override  
 Enable  
 File   
 Subcircuit

Create Edit Clear

Open Save Save As OK Cancel

## Via Elements

Via Element	Description
Top view and electrical characteristics	The top view shows the via as it would appear when viewed from the top of the board. The electrical characteristics show the impedance, delay backdrill, and other characteristics. The reported delay is for the barrel of the via.
Via geometry	You can edit the geometry of the via by defining the start and end layers, hole diameters, and shape and dimensions of the pad and antipad. You can also select if a via model is single-ended or differential.
Via backdrill	You can select the depth of via backdrill by stub, layer, or depth.
Override via model	You can override a via model by using your custom subcircuit saved in one of the SPICE libraries.
Connect via layers	The <b>Left Via Connect</b> column is used to select the layer connections that will appear on the left side of the via symbol. The <b>Right Via Connect</b> column is used to select the layer connections that will appear on the right side of the via symbol. A layer is connected when the checkbox for that layer is checked. The <b>Via X-Section</b> columns show a representation of the via cross section.
Modify stackup	To modify the stackup, check the Edit Stackup checkbox.

There are several important definitions for vias and pins:

- A via under a BGA is a via, not a pin.
- A through hole connector padstack is a pin, not a via.
- A connector means a multi-board mated connector (connects two board Instances).

## Editing Via for Pre-Layout Simulations

To edit vias for pre-layout simulation, open the Via Editor dialog box by selecting **Tools > Via Editor** or by right-clicking on a via schematic symbol and selecting **Edit Differential Via Model** or **Edit Single Ended Via Model**. You need to enter the number of conducting layers for the default stackup the first time you open the **Via Editor** dialog box.

The Via Editor works in a selected library. Vias can be edited, added or deleted from a library. In pre-layout, the Via Editor creates a default library that contains a default via model and a default stackup. The Library operations can be selected from the File menu.

## Editing Via for Post-Layout Simulations

The Padstack/Trace Manager is used to view and manage overrides to padstacks and traces in post-layout as well as manage backdrilling of pins and vias by net, RefDes or Part. You can edit the geometry of a single via, or multiple vias at one time. You can also assign overrides by individual instance of a padstack or by occurrence of each padstack's library name in the database.

- **Back Drill Setup Tab**

The **Back Drill Setup** tab allows backdrill information to be viewed and changed by net, by padstack, by RefDes, or by Part by selecting from the **View Mode** list. In each case the backdrill can be turned on or off. The view modes are:

- *Back Drill by Net* — One row per Extended Net per Board.
- *Back Drill by Padstack* — One row per Padstack.
- *Back Drill by RefDes* — One row per Reference Designator.
- *Back Drill by Part* — One row per Part Number.

The **Back Drill Setup** tab is only enabled if backdrilling is enabled on one or more boards on the **Stackup** tab of the **Setup Board** dialog.

- **Via/Pin Editor Tab**

Padstack models are created automatically from the PCB data for vias, surface mount pads and through-hole pins using the internal padstack solver.

## Padstack Definitions

Padstack Elements	Definitions
Padstack	The geometry information from the PCB database. Contains the start and end layer of the padstack, barrel dimensions, etc. A Padstack does not contain the layers connected or XY coordinates.
Padstack Configuration	A Padstack plus layer connections. A Padstack Configuration does not contain XY coordinates.
Padstack Configuration Instance	A Padstack Configuration at a specific XY coordinate on a board. A specific via has geometry, connectivity and a location on a PCB. A specific pin has geometry, connectivity, a location, a reference designator and a pin number

A Padstack can be used for multiple Padstack Configurations. A Padstack Configuration can be used for multiple Padstack Configuration Instances.

## Padstack Editor View Modes

The views are selected from the list on the Via/Pin tab. The view modes correspond to the definitions above. In each view mode there is one row for each item of the selected type:

- *Padstack (Geometry)* — One row per Padstack. This rolls up all Padstack Configurations and Padstack Configuration Instances that use a Padstack.
- *Padstack Configuration (Connectivity)* — One row per Padstack Configuration. This rolls up all Padstack Configuration Instances that use a Padstack Configuration.
- *Padstack Configuration Instance* — One row per Padstack Configuration Instances.

## Padstack Editor Edit Modes

The padstack editor has two modes:

- *Padstack* — All changes made in the editable columns apply to the padstack. This means all Padstack Configuration Instances that use the same Padstack as the row being edited will change. For example, if the View Mode is Padstack Configuration Instance and the Edit Mode is Padstack, a change to one row is applied to all rows that have the same Padstack.
- *Instance* — All changes apply to the Padstack Configuration Instance only. For example, if the View Mode is Padstack Configuration Instance and the Edit Mode is Instance, a change to one row is only applied to that row.

## Common Operations

Editing geometry of a single via	To edit the geometry of a single via (one via at one XY coordinate), use the Padstack Configuration Instance View Mode and the Instance Edit Mode. Any changes to the geometry is applied to the specific via edited when in this mode.
Editing using the Via Editor	Right-click on a row and choose Visual Via Editor from the menu.
Changing the Padstack	To change the Padstack that a Padstack Configuration Instance is based on, use the Padstack Configuration Instance View Mode and in the Base Padstack column choose a different Padstack. The list of padstacks are the padstacks that share the same start and end layer with the original padstack for this Padstack Configuration Instance.
Editing a Padstack	<p>To edit a Padstack, use the View Mode Padstack. The behavior depends on Edit Mode:</p> <ul style="list-style-type: none"> <li>• <i>Padstack</i> — Changes are made to the Padstack being edited and is applied to all Padstack Configurations and Padstack Configuration Instances that use the Padstack.</li> <li>• <i>Instance</i> — A new Padstack is created as a copy of the Padstack being edited, and the changes you make is applied to this new Padstack</li> </ul>

Overriding a via model	<p>Via models are typically done with connectivity to specific layers. Therefore, the Padstack Configuration View Mode or the Padstack Configuration Instance View Mode are used to override a via model. In both modes the Model Override column is part of the table. To override a model right-click and select one of:</p> <ul style="list-style-type: none"> <li>• <i>Browse</i> — Browse to an existing model in the libraries. This could be the .smod file for an S-Parameter via model that was imported.</li> <li>• <i>Create</i> — Create a subcircuit with the default via model. This subcircuit can be modified.</li> </ul> <p>If the View Mode is Padstack Configuration the model is applied to every Padstack Configuration Instance that uses that Padstack Configuration.</p> <p>If the View Mode is Padstack Configuration Instance the model is applied to the single Padstack Configuration Instance that you edited.</p> <hr/> <p><b>Note</b> The edit mode must be Padstack.</p>
------------------------	--

## Trace Overrides Tab

The Trace Overrides tab of the Padstack/Trace Manager is used for trace model overrides. The lossy transmission line models for traces created by the field solver from the stackup and trace width can be overridden with user-provided models. The Trace Overrides tab shows the trace widths on each layer of each board.

The models used for overrides are assumed to be RLGC models with one model per file, and the base name of the file must be the same as the model name.

For single-ended traces there is one row for each trace width found on each layer. Select one or more rows and click the Select Model button to browse to a transmission line model in the library.

For differential traces, there is one row for each trace width on each layer, and columns for differential separation and coupling layer. The coupling layer is a list containing the same layer and any adjacent signal or mixed layers. Select an adjacent layer for broadside coupled differential traces. When a separation is added a new row is created for that layer and trace width. This allows models for multiple separations to be specified for each width on each layer.

The tolerance for overrides is 0.1 mm in width. In other words, if an override is specified for a trace of width 4.0 mm on a layer, the override is applied to all traces with widths from 3.9 mm to 4.1 mm on that layer.

### Example One-Conductor Model

For file name `sl_55ohm.mod`:

```
model sl_55ohm W ModelType=RLGC N=1
+ Lo = +3.60600E-07
```

```
+ Co = +1.20300E-10  
+ Ro = +6.07368E+00  
+ Rs = +1.48880E-03  
+ Gd = +1.89000E-11
```

### Example Differential Model

For file name `sl_55ohm_diff.mod`:

```
.model sl_55ohm_diff W ModelType=RLGC N=2  
+ Lo = +3.58800E-07 +4.84700E-08 +3.58800E-07  
+ Co = +1.23200E-10 -1.66400E-11 +1.23200E-10  
+ Ro = +6.07368E+00 +0.00000E+00 +6.07368E+00  
+ Rs = +1.50556E-03 +1.12767E-04 +1.50556E-03  
+ Gd = +1.93500E-11 -2.61400E-12 +1.93500E-11
```

### See Also

#### More About

- “Post-Layout Verification of Serial Link” on page 4-2
- “Stackup and Extraction Control in Serial Link Project” on page 4-6

## Post-Layout to Pre-Layout Extraction

You can create topologies from the extracted PCB data for the extended that can be simulated (assigned to an STNET or user Transfer Net). You can access this topologies from the Pre-Layout Analysis tab of the **Serial Link Designer** or **Parallel Link Designer** app. These topologies can be used to quickly analyze network routing and resolve waveform quality and/or timing issues identified by post-layout verification.

To create topologies, select the extended nets that you want to create pre-layout schematic topologies for and click the **Create Topologies** button in the Post-Layout Operations area in the Post-Layout Verification tab.

Usually only uncoupled net segments is used for creating topologies. You can select **Use Coupled Models** option to create differential net topologies with coupled net segments. For complicated topologies this simplifies the resulting topology.


To view topologies, in the Pre-Layout Analysis tab, select the transfer net for the topology to be viewed or analyzed. Select the topology from the Topology drop-down list in the Sheet Simulation Control Panel.

The pre-layout sheet with the topology from post-layout can be simulated in pre-layout The schematic can be modified and elements can be parameterized as any pre-layout schematic. Changes to the topology in the schematic does not change the post-layout topology used in post-layout simulations.

### Transmission Line Models in Topologies

For stripline models with different dielectric constants on each layer a composite dielectric is derived.

For example, the left hand cross-section is a cross-section from the stackup, where each layer can have a different dielectric constant. On the right is the model that can be represented in the transmission line editor.

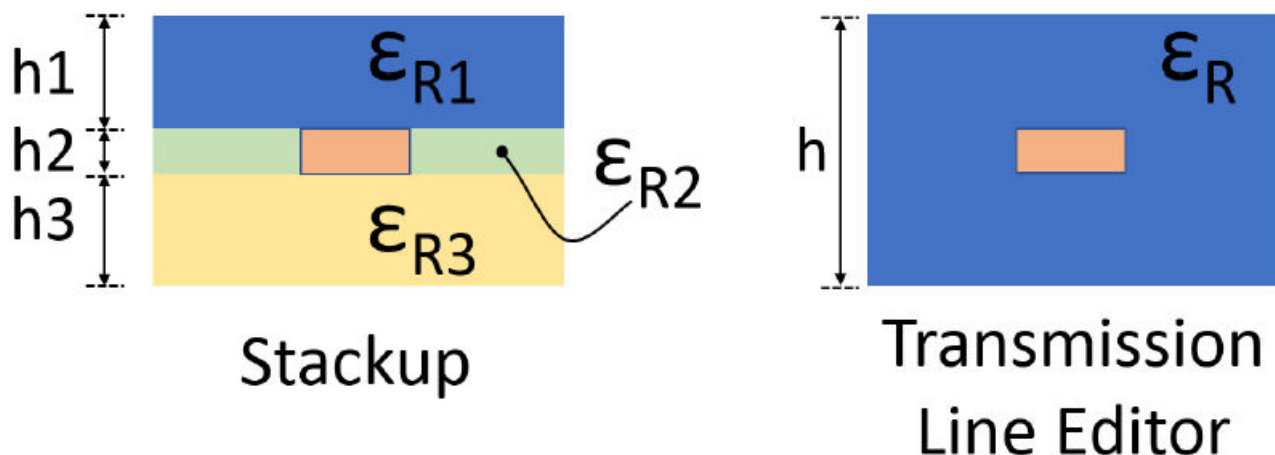

The dielectric constant is a composite and is derived from the stackup by the equation:

$$\varepsilon_R = \frac{h_1 \cdot \varepsilon_{R1} + h_2 \cdot \varepsilon_{R2} + h_3 \cdot \varepsilon_{R3}}{h_1 + h_2 + h_3}$$



# Serial Link Featured Examples

---

- “Edit Imported S-Parameter Data” on page 5-2
- “Analyze Backplane with Line Cards” on page 5-10
- “Creating Compliance Masks in Serial Link Designer” on page 5-28
- “Channel Operating Margin (COM) for Serial Link” on page 5-57
- “Crosstalk Analysis with Serial Link Designer” on page 5-71
- “Advanced Visualization with Serial Link Designer” on page 5-95
- “Data Mining With Signal Integrity Viewer” on page 5-101

## Edit Imported S-Parameter Data

This example shows how you can check and modify the S-Parameter data using the **Serial Link Designer** app. An example S-Parameter file with bad data is imported and analyzed using the tools available in the S-Parameter Checklist dialog box in the **Serial Link Designer** app.

### Create New Project

Open the **Serial Link Designer** app.

```
serialLinkDesigner
```

```
Signal Integrity Toolbox recommends you to set the Java Heap Memory to at least 8192MB.  
Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory  
Current Java Heap: 543MB with 166MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.
```

Create a new project by selecting **File > New Project**. In the newly opened dialog box, name the project as `edit_sparameter`, the interface as `serdes`, and the schematic sheet as `channel`. The **Pre-Layout Analysis** tab shows the blank schematic sheet.

A custom S-Parameter data file (`example.s4p`) is attached as supporting file to this example. This file represents PCB traces on a board. Download the Touchstone® (.s4p) files. To import the S-Parameter data, select **Libraries > Import S-Parameter**. Browse to the location where you saved the downloaded file and import the file. This launches the Edit S-Parameter Port Maps dialog box with two warnings. Ignore the warning that pops up for now, the example explores them in detail.

Edit S-Parameter Port Maps

Port Name	S(row,col)	1	2	4	3
1	1	-39.9...	-0.09...	-69.6...	-70.2...
2	2	-0.10...	-35.8...	-73.2...	-70.3...
4	4	-77.8...	-78.8...	-35.9...	-0.07...
3	3	-72.8...	-76.0...	-0.10...	-40.1...

DIFF Ports	
1	2
4	3
SE Ports	

Port Map: N1F2N4F3  Use Standardized Port Names

example.s4p

Instructions:

- Displayed Matrix Values are DB at 50...
- Drag Column Headers to Pair "In/Out" ...
- Highest Values Should End Up In Whit...
- Yellow Cells Flag Misplaced Highest V...
- Enter Custom (Non-Standardized) Por...
- Blue/Green Cells Flag Left/Right DIFF P...
- Drag Right Table Rows Up/Down to Pa...
- Red Cells in Right Table Flag UnPaired...

Port Names Generator  
Left Prefix: Right Prefix:

Clear	
Apply	


Display Import Log	Display Waveforms
S-Parameter Checklist	Restore Default Port Map
Restore Last Saved Map	Set Port Map Left-to-Right
Set Port Map Top-to-Bottom	Apply To All Tabs

Save SaveAll Close


### Use S-Parameter Checklist to Analyze S-Parameter Data

Click on the **S-Parameter Checklist** button on the Edit S-Parameter Port Maps dialog box to launch the S-Parameter Checklist dialog box. The S-Parameter Checklist dialog box has two panels with synchronized views. On the right are the frequency/time domain plots and a text editor. The left panel contains data and explanations of the plots.

First, look at the import log information in the left panel. The warnings indicate that there is no DC value in the S-Parameter file and that the port mapping algorithm found inconsistent data when trying to determine which ports go on the left of the symbol and which ports go on the right of the symbol.

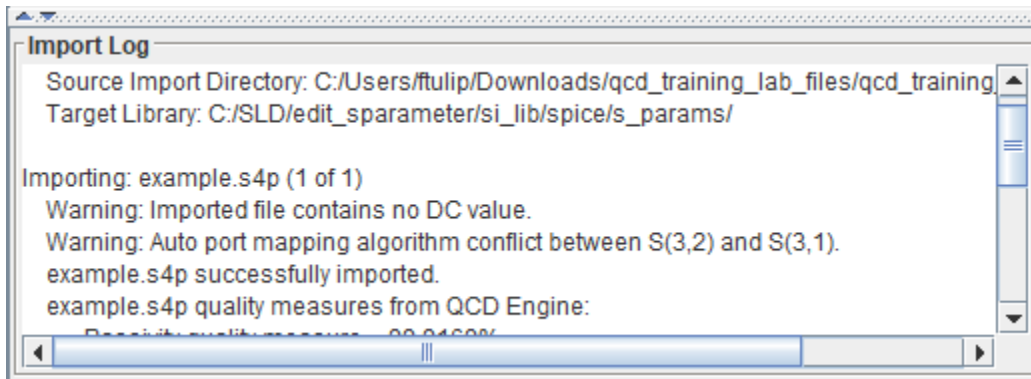


If you look at the **File Editor** tab in the right panel you can see that the lowest frequency point is 50MHz in the S-Parameter file. This is why the import log reported the no DC value warning.

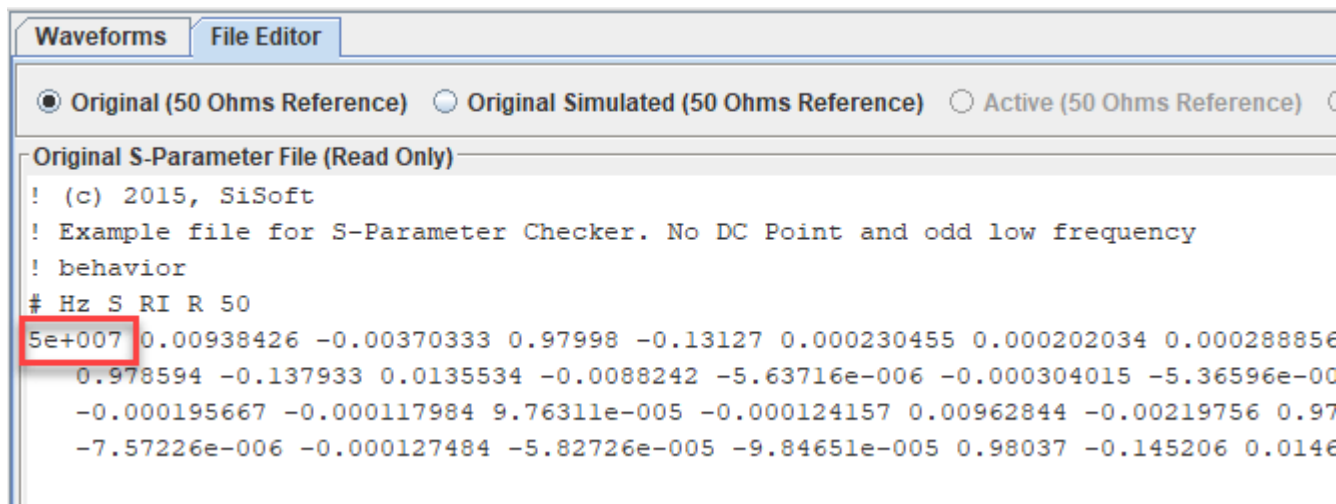


The warning about the port mapping algorithm is from the comparison of the 50MHz data in the file that is used to determine the pinout of the schematic symbol. This is due to the odd nature of the data in this S-Parameter file at low frequencies.

### View Insertion Loss at Low Frequency

Click on the **SE Insertion Loss** tab at the left panel to take a look at the through path (insertion loss) data. Zoom in at lower frequencies. You can see there is some non-passive behavior and non-reciprocal behavior.

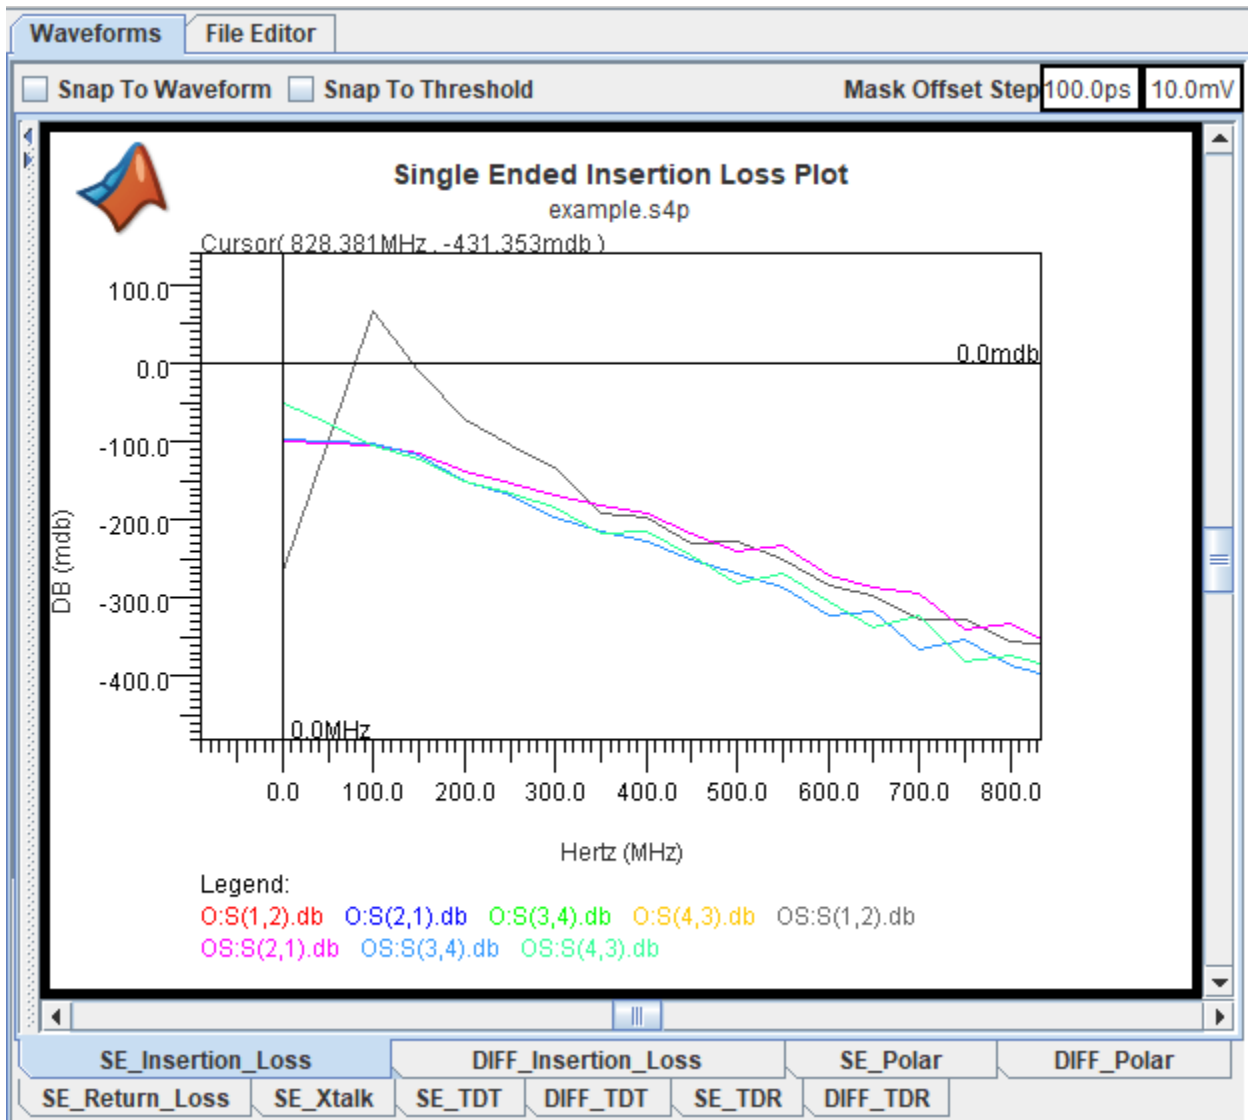

Enforce passivity to investigate further. Select Quality **Enforcement** > **Make Passive** from the toolbar. To refresh the data, go back to the **Visual Inspection** tab. Select **Enable Editing** at the top of the File Editor. Then click on the **Refresh Checklist Data** button on the bottom of the right panel. Refresh the data and look at the **SE\_Insertion\_Loss** tab again. To see only the refreshed data, deselect the **Active (50 Ohms Reference)** option above the node list.

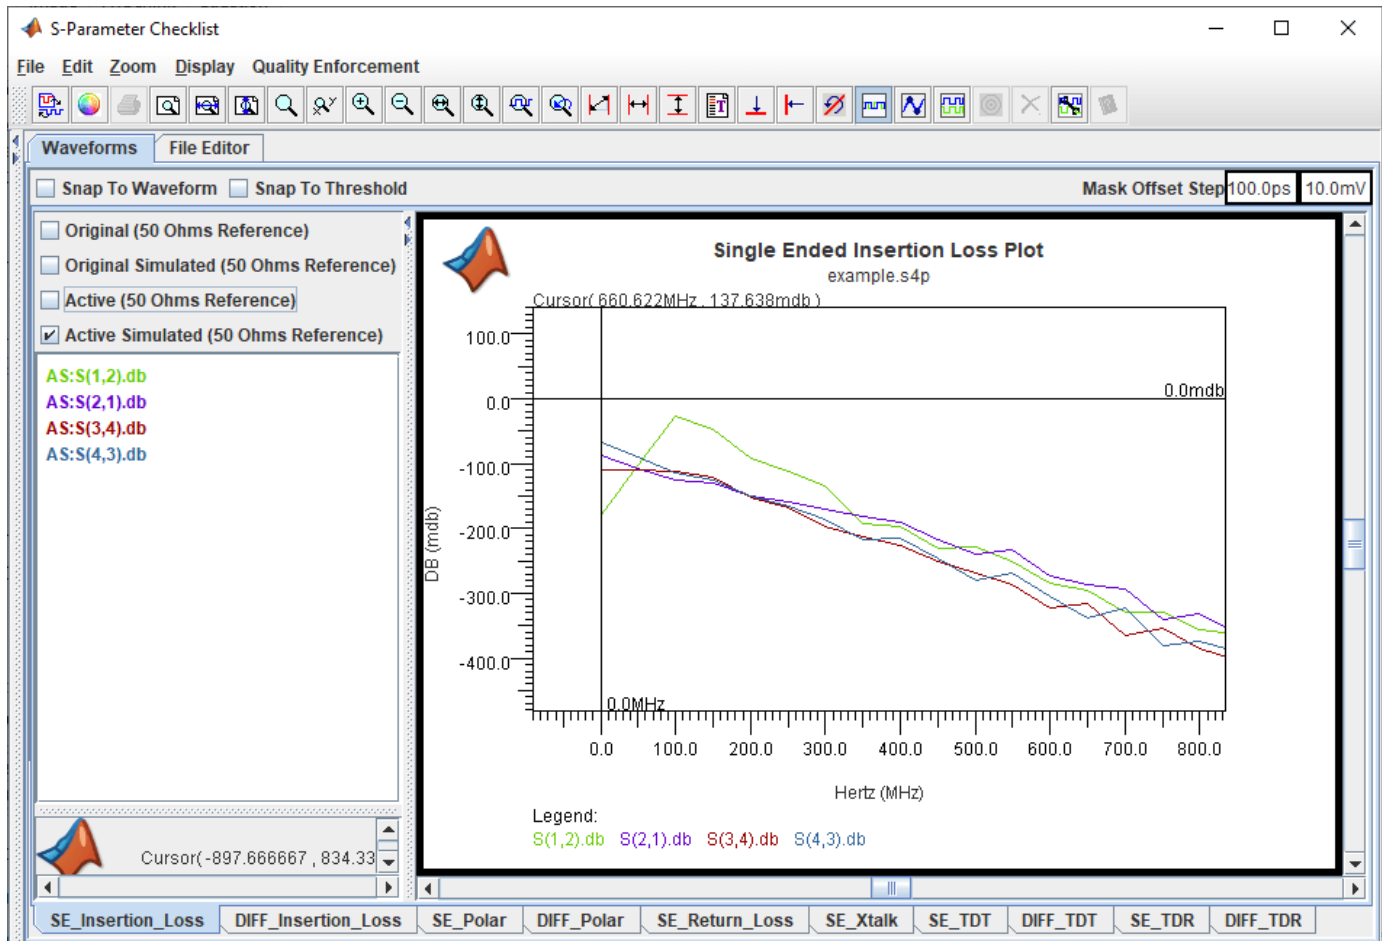

The insertion loss data is now all passive, but there are still some strange issues at the lowest frequencies. The loss is greater at DC than at low frequencies. This does not make sense for PCB traces.

### Delete Bad Low Frequency Data

To see if the insertion loss behavior is caused by bad low frequency data you can delete the low frequency points from the file. Go back to the **Visual Inspection** tab. In the right panel select the S-Parameter data for frequencies less than 500MHz and delete the data points. Save the changes by clicking the **Save File** button.

S-Parameter Checklist

File Edit Quality Enforcement

Original (50 Ohms Reference) Original Simulated (50 Ohms Reference) **Active (50 Ohms Reference)** Active Simulated (50 Ohms Reference)  E

Active S-Parameter File

```

3.5e+008 -0.00980013 -0.040143 0.490922 -0.846077 9.053e-005 0.00026644 -0.000203292 -9.10453e-006
0.49112 -0.847403 -0.0183302 -0.0176309 -0.000155418 -0.000141962 0.000161622 8.14255e-005
7.91415e-005 0.000248904 -0.000154075 -0.000121659 -0.00906009 -0.0379516 0.489092 -0.844252
-0.000101254 -0.000166603 0.00012351 -3.55862e-005 0.488692 -0.843954 -0.0183493 -0.0187135

4e+008 -0.0178701 -0.041361 0.360566 -0.908518 0.000121405 0.000138116 -0.000173283 -6.12619e-005
0.360058 -0.909529 -0.0253603 -0.0131125 -0.000157883 -6.14715e-005 7.90221e-005 9.99949e-005
0.000111239 0.000202106 -0.000228194 -0.000112919 -0.0160294 -0.0412574 0.359696 -0.905397
-0.000121644 -3.16056e-005 8.12245e-005 6.36056e-005 0.358214 -0.90746 -0.0252598 -0.0126678

4.5e+008 -0.0264425 -0.0392448 0.221067 -0.948403 0.000127293 0.000271993 -0.000161446 -2.04759e-005
0.222494 -0.949684 -0.0299425 -0.00710231 -0.000284023 -9.91653e-005 8.20376e-005 -4.89396e-005
7.77805e-005 0.000164507 -0.000183286 -2.40001e-005 -0.0215998 -0.0403521 0.221254 -0.945923
-0.000217716 8.30245e-005 0.000120392 -7.6285e-005 0.221352 -0.946581 -0.0295657 -0.0058928


5e+008 -0.0345465 -0.0364326 0.0769791 -0.971023 8.0717e-005 0.000220015 -0.00018878 6.19868e-005
0.0777458 -0.96968 -0.0324771 0.00143379 -0.000228698 9.28491e-006 -6.54325e-005 -0.00011147
0.00010215 0.000191782 -0.000110656 8.30466e-005 -0.0294388 -0.0369746 0.077546 -0.966458
-0.000252446 2.47961e-005 -7.88966e-005 -4.48091e-005 0.0769514 -0.965132 -0.0314506 0.00385067

5.5e+008 -0.0385354 -0.0298124 -0.0636626 -0.969356 2.40621e-005 0.000305034 -0.000352236 0.000103824
-0.0642784 -0.97143 -0.0334109 0.0112459 -0.000283499 7.73044e-005 2.26976e-005 -0.000115713
0.000243172 0.00035492 -0.000281553 -5.45248e-005 -0.0370735 -0.0334961 -0.0627938 -0.965539

```

Comment Out Selected Add DC Point Save As Save File Revert To Original Refresh Checklist Data

Refresh the checklist data and go back to the **SE\_Insertion\_Loss** tab in the left panel. The loss is now increasing with frequency. The only issue is that the S(1,2) and S(4,3) data do not have the same DC point. This is because the **Serial Link Designer** app is extrapolating the data to get a DC value and the data it is extrapolating from are not the same for the two paths.

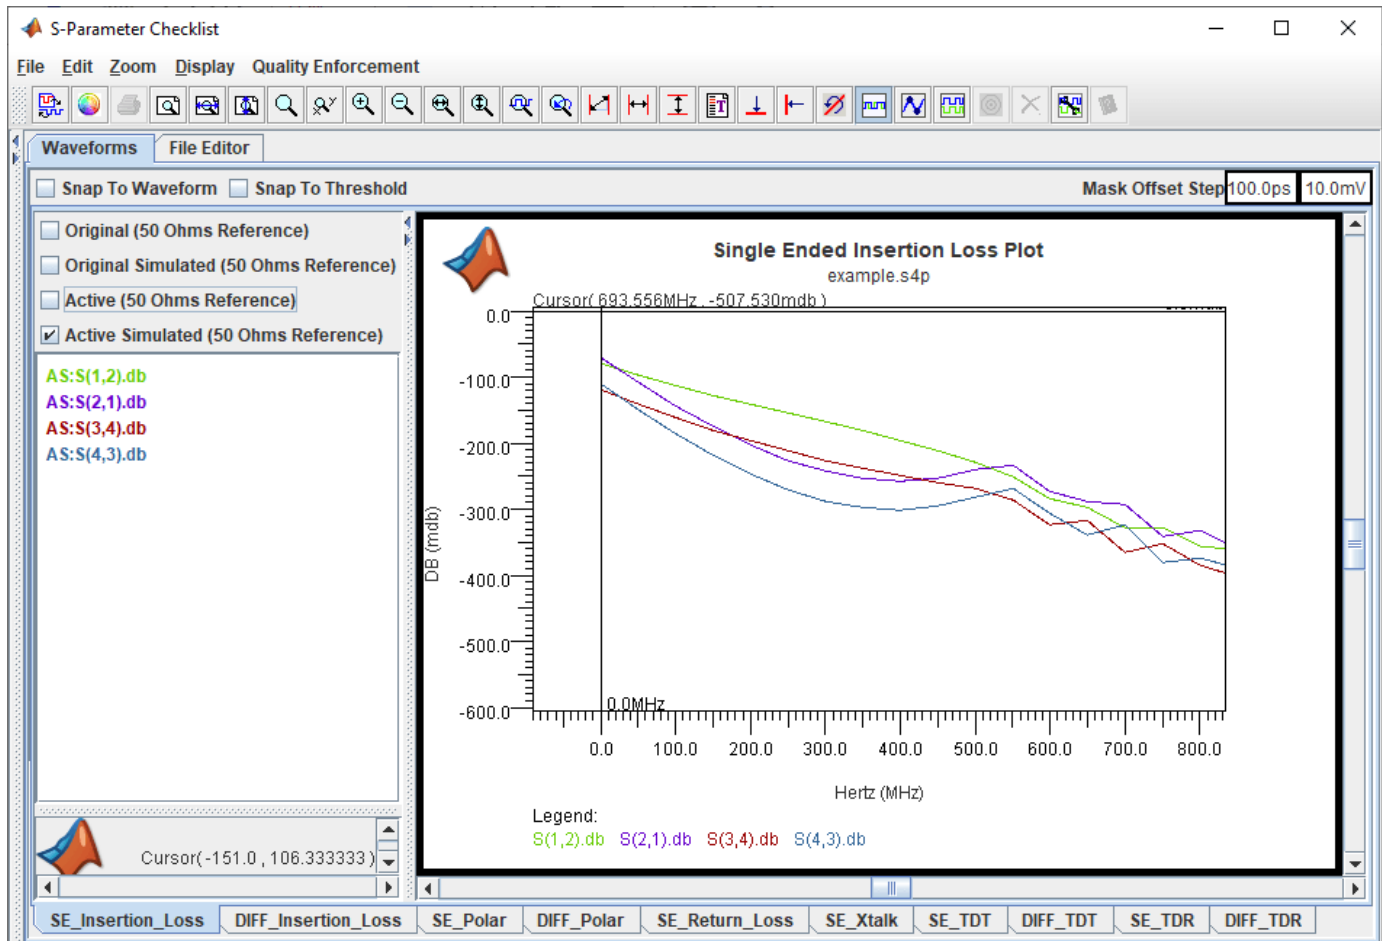


### Add DC Point

On the assumption that the lengths and thus the DC values should be the same for both paths you can add a DC point manually. Go back to the **Visual Inspection** tab in the left panel. Right click on the text editor in the right panel and select **Add DC Point**. On the Add DC Point dialog box that opens select **Trace Geometry Based Resistance Calculation**. Change the **Trace Length** to 2600 mils. The length is an estimate based on the maximum through path delay value that is in the S-Parameter file Metrics section of the left panel and an assumed delay of 180ps/in for stripline.

Click **Insert DC Point**, then save the file and refresh the checklist data. Go back to the **SE\_Insertion\_Loss** tab in the left tab. Now the insertion loss is increasing with frequency and all the data has the same DC point.




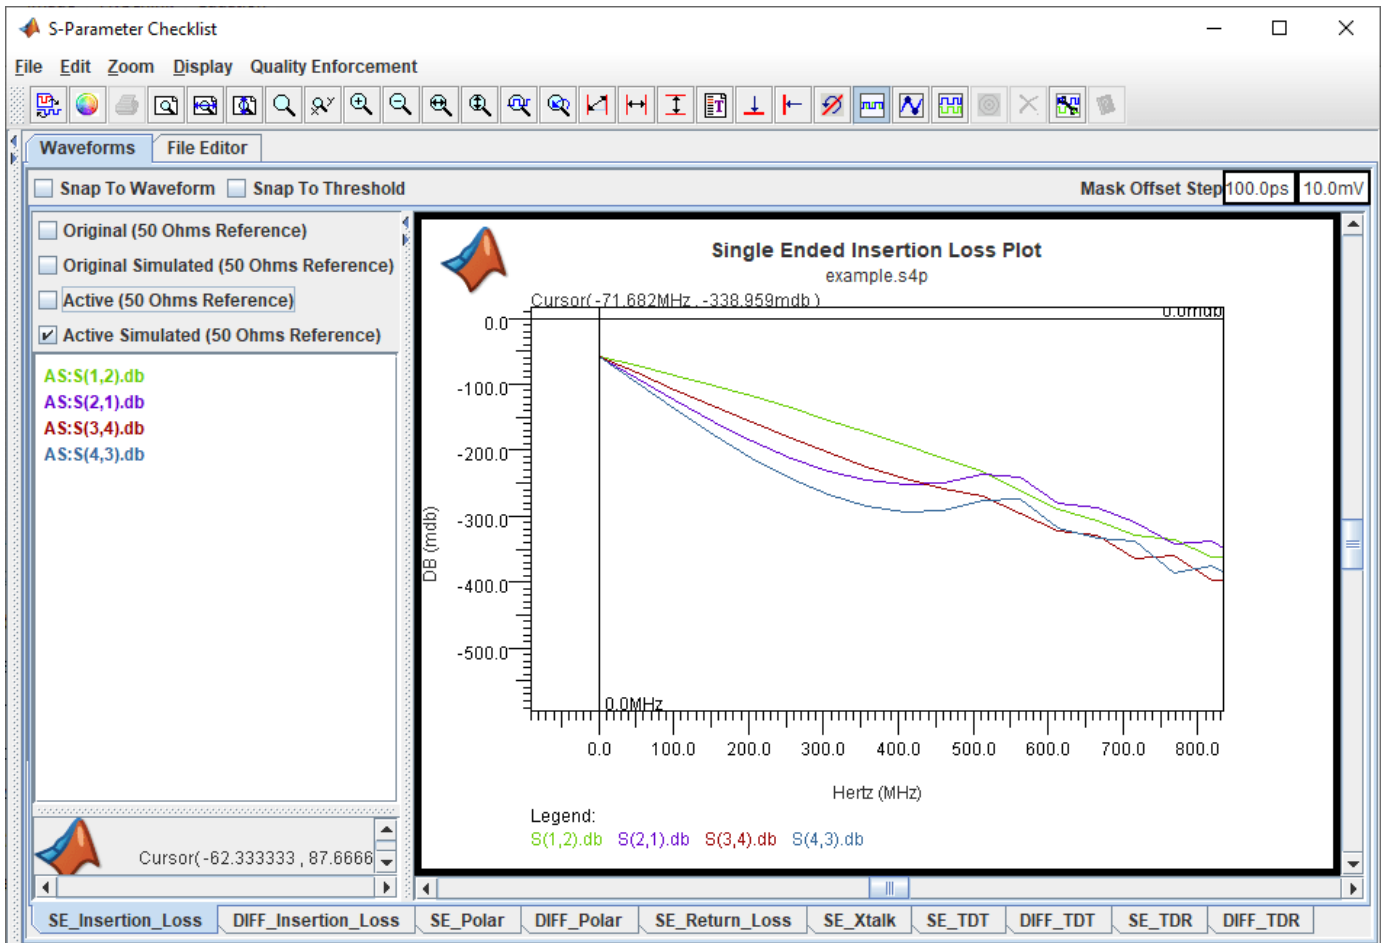


## Analyze Backplane with Line Cards

This example shows how you can analyze a serial link consisting of a backplane and two line cards with the **Serial Link Designer** app. You can model the SerDes drivers/receivers, capture a topology for analysis, run network characterization, and evaluate the impact of different solution space variables on your design's performance.

The serial link to be modeled is a backplane with two line cards.

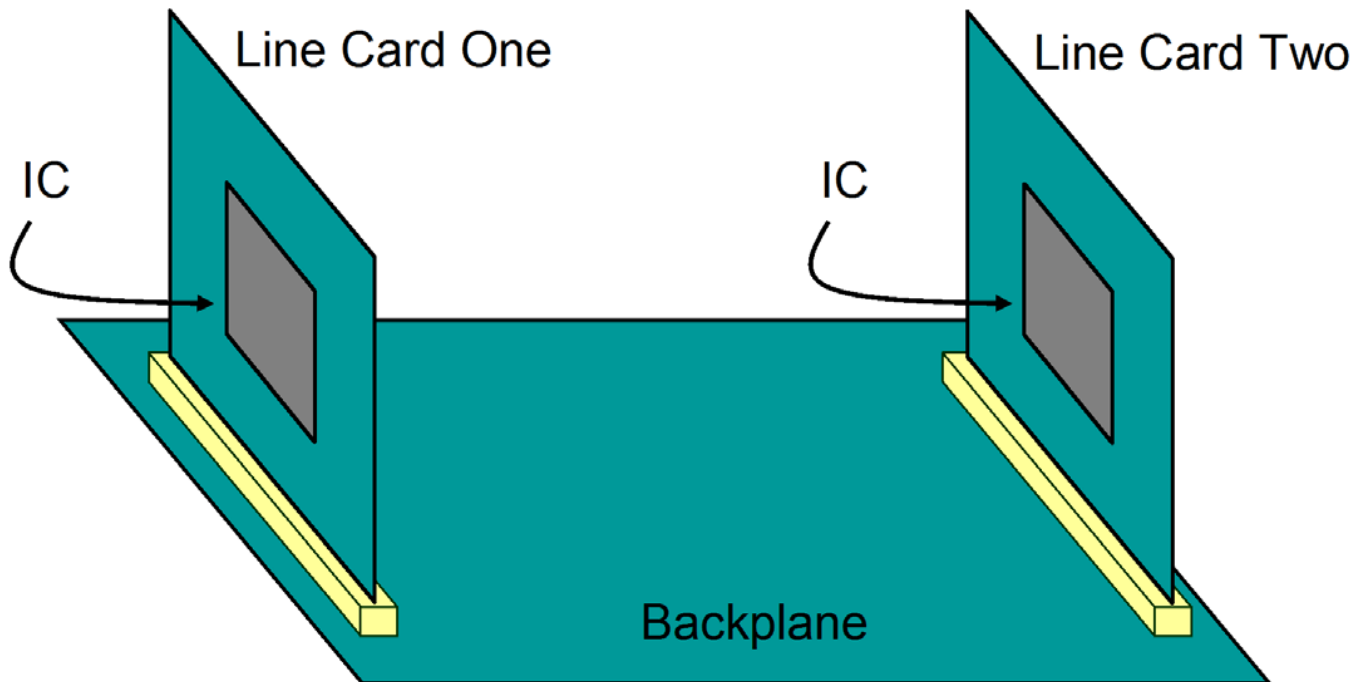

The channel topology is represented by:

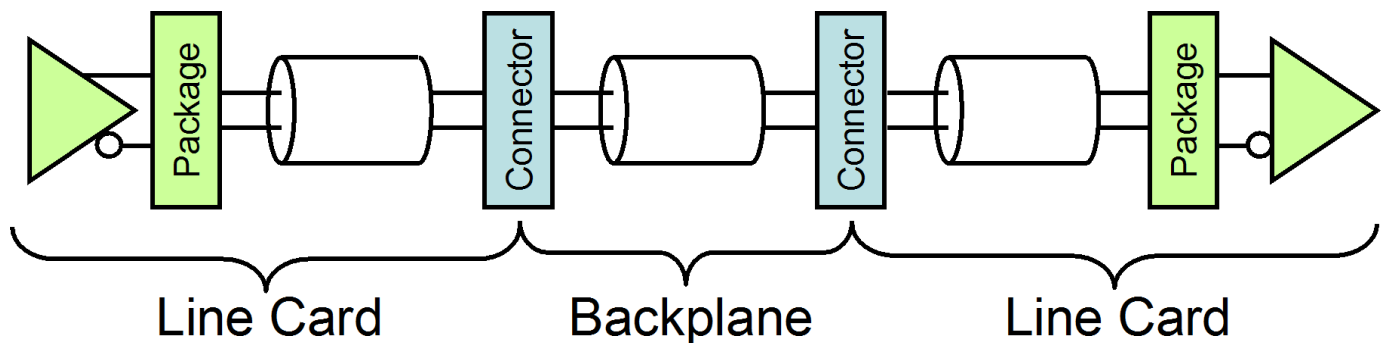

The packages and connectors are modeled with S-Parameters. The traces are modeled with w-lines.


### Create New Project

Open the **Serial Link Designer** app.

serialLinkDesigner

Signal Integrity Toolbox recommends you to set the Java Heap Memory to at least 8192MB. Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory  
Current Java Heap: 395MB with 28MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.

Create a new project by selecting **File > Project > New Project**. In the newly opened dialog box, name the project as `backplane_linecard`, the interface as `serdes`, and the schematic sheet as `channel`. The **Pre-Layout Analysis** tab shows the blank schematic sheet.

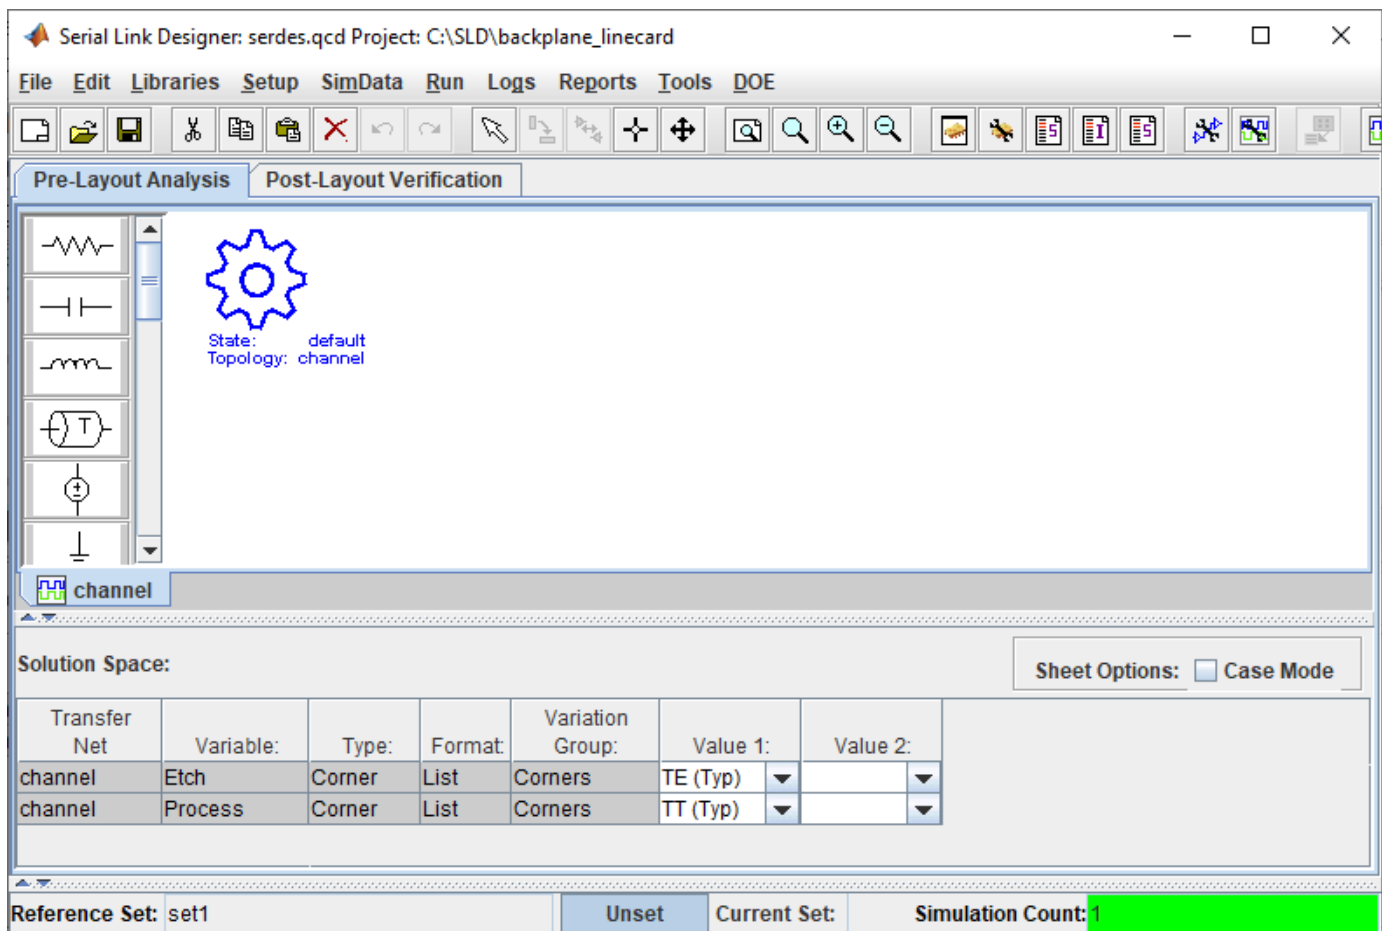


## Setup Libraries

You can create the library elements for the transmission lines, packages, connectors, and designators.

Create a differential lossy transmission line model based on a stripline cross-section. Select **Tools > Lossy Transmission Line Editor**. In the newly opened Lossy Transmission Line Editor dialog box, select **Differential** and select Model Type as **Stripline**.

The traces are 4 mils wide and 0.65 mils thick. They are 9.0 mils above and 8.5 mils below planes with a dielectric constant of  $\epsilon_r$  4.25. The trace separation is 5 mils. So change the parameters **Dielectric Height (H1 in mils)** to 9, **Dielectric Height (H2 in mils)** to 8.5, and **Differential Separation (mils)** to 5.

Click the **Calculate** button to run the 2-D field solver. The Impedance at the bottom left changes from derived to the calculated value.

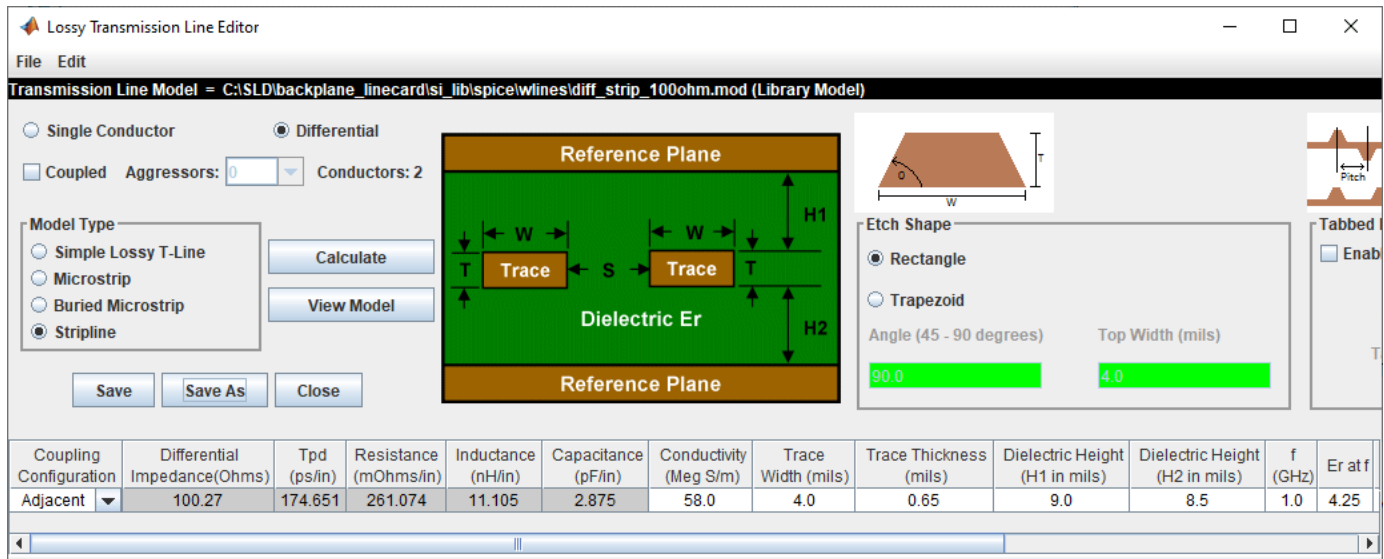

Click the **Save As** button to save the model in the project's library. Use the default name diff\_strip\_100ohm. Make sure the directory is <Project Library>/spice/wlines. Close the Lossy Transmission Line Editor.

Four custom S-Parameter data files (connector\_ab.s4p, connector\_cd.s4p, connector\_ef.s4p, and connector\_gh.s4p) are attached as supporting files to this example. Download all four Touchstone® (.s4p) files. To import the connector S-Parameter data, select **Libraries > Import S-Parameter**. Browse to the location where you saved the downloaded Touchstone files and select all four. Verify that the **Merge Wrappers** checkbox is selected on the Import S-Parameter File(s) dialog box. Merging the connector wrappers makes it possible to sweep them. Import the files. This launches the Edit S-Parameter Port Maps dialog box. The dialog box contains a separate tab for each connector file.

Edit S-Parameter Port Maps

Port Name	S(row,col)	1	2	3	4
1	1	-47.8...	-0.00...	-51.8...	-63.5...
2	2	-0.00...	-47.8...	-63.5...	-51.8...
3	3	-51.8...	-63.5...	-47.8...	-0.00...
4	4	-63.5...	-51.8...	-0.00...	-47.8...

DIFF Ports	
1	2
3	4
SE Ports	

Port Map: N1F2N3F4  Use Standardized Port Names

connector\_ab.s4p | connector\_cd.s4p | connector\_ef.s4p | connector\_gh.s4p

Instructions:

- Displayed Matrix Values are DB at 50...
- Drag Column Headers to Pair "In/Out"...
- Highest Values Should End Up In Whit...
- Yellow Cells Flag Misplaced Highest V...
- Enter Custom (Non-Standardized) Por...
- Blue/Green Cells Flag Left/Right DIFF P...
- Drag Right Table Rows Up/Down to Pa...
- Red Cells in Right Table Flag UnPaired...

Port Names Generator

Left Prefix: Right Prefix:

Clear

Apply

Display Import Log | Display Waveforms

S-Parameter Checklist | Restore Default Port Map

Restore Last Saved Map | Set Port Map Left-to-Right


Set Port Map Top-to-Bottom | Apply To All Tabs

Save | SaveAll | Close

The table on the left shows the loss at 50 MHz between each pair of ports. The cells in white show the smallest loss. Generally, the smallest loss occurs at the ports that are the through path. The blue cells indicate the left-hand differential port. The green cells indicate the right-hand differential port.

The table on the right shows orientation of the S-parameter block as it will be on the schematic sheet and identifies the differential ports.

To view the through path dB vs. frequency responses of the single-ended paths, click the **Display Waveforms** button. This launches the **Signal Integrity Viewer** app.

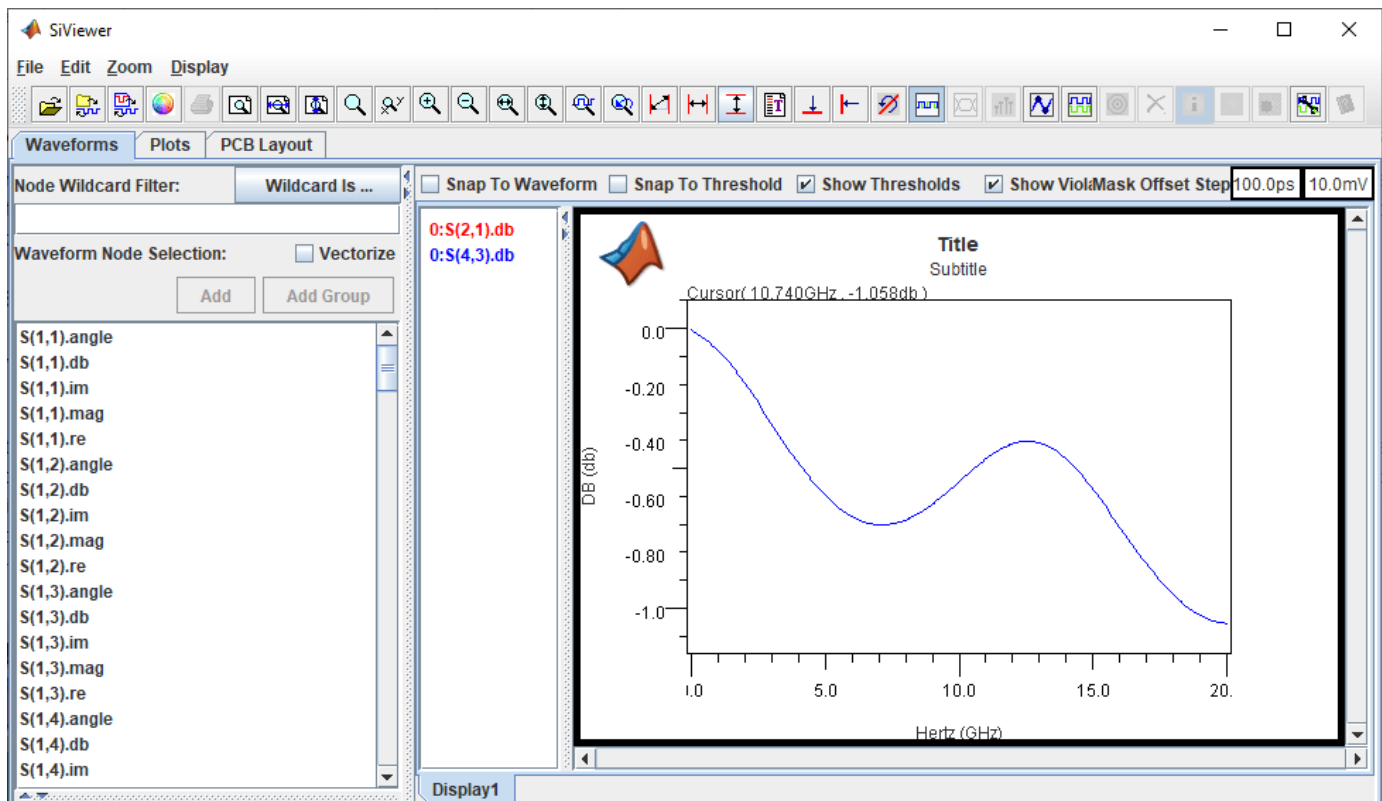


You can add new display to view all the data in real/imaginary, magnitude/angle and dB. Close the **Signal Integrity Viewer** app, Edit S-Parameter Port Maps dialog box, and Import S-Parameter File(s) dialog box.

### Create Channel Schematic

Add the backplane transmission line by selecting the differential lossy transmission line element to the blank canvas on the Pre-Layout Analysis tab. Right-click on the symbol and choose **Select T-Line Model**. Switch to the <Project Library>/spice/wlines library if it is not selected. Select the diff\_strip\_100ohm model.

Add two differential via models between the backplane traces and the connector.

To start, add a new differential via element with 12 layers of connecting layers to create the default stackup to the left of the transmission line. Right-click on the via symbol and choose **Edit Differential Via Model** to launch the Via Editor dialog box. The default via connects the top layer to the bottom layer. Uncheck the **Left Via Connect** and **Right Via Connect** checkboxes for the layer **Bottom** and check the checkboxes for layer L2. This changes the via to a via that is connecting the layer Top to the layer L2. It is still a through-hole via with a stub from layer L2 to the bottom of the board. To model a backdrilled via check **Enable** in the Backdrill panel, check **By Layer**, then select layer P2 in the list for **Bottom**. The layers view will change to show that the barrel of the via is gone from the bottom through layer P2.

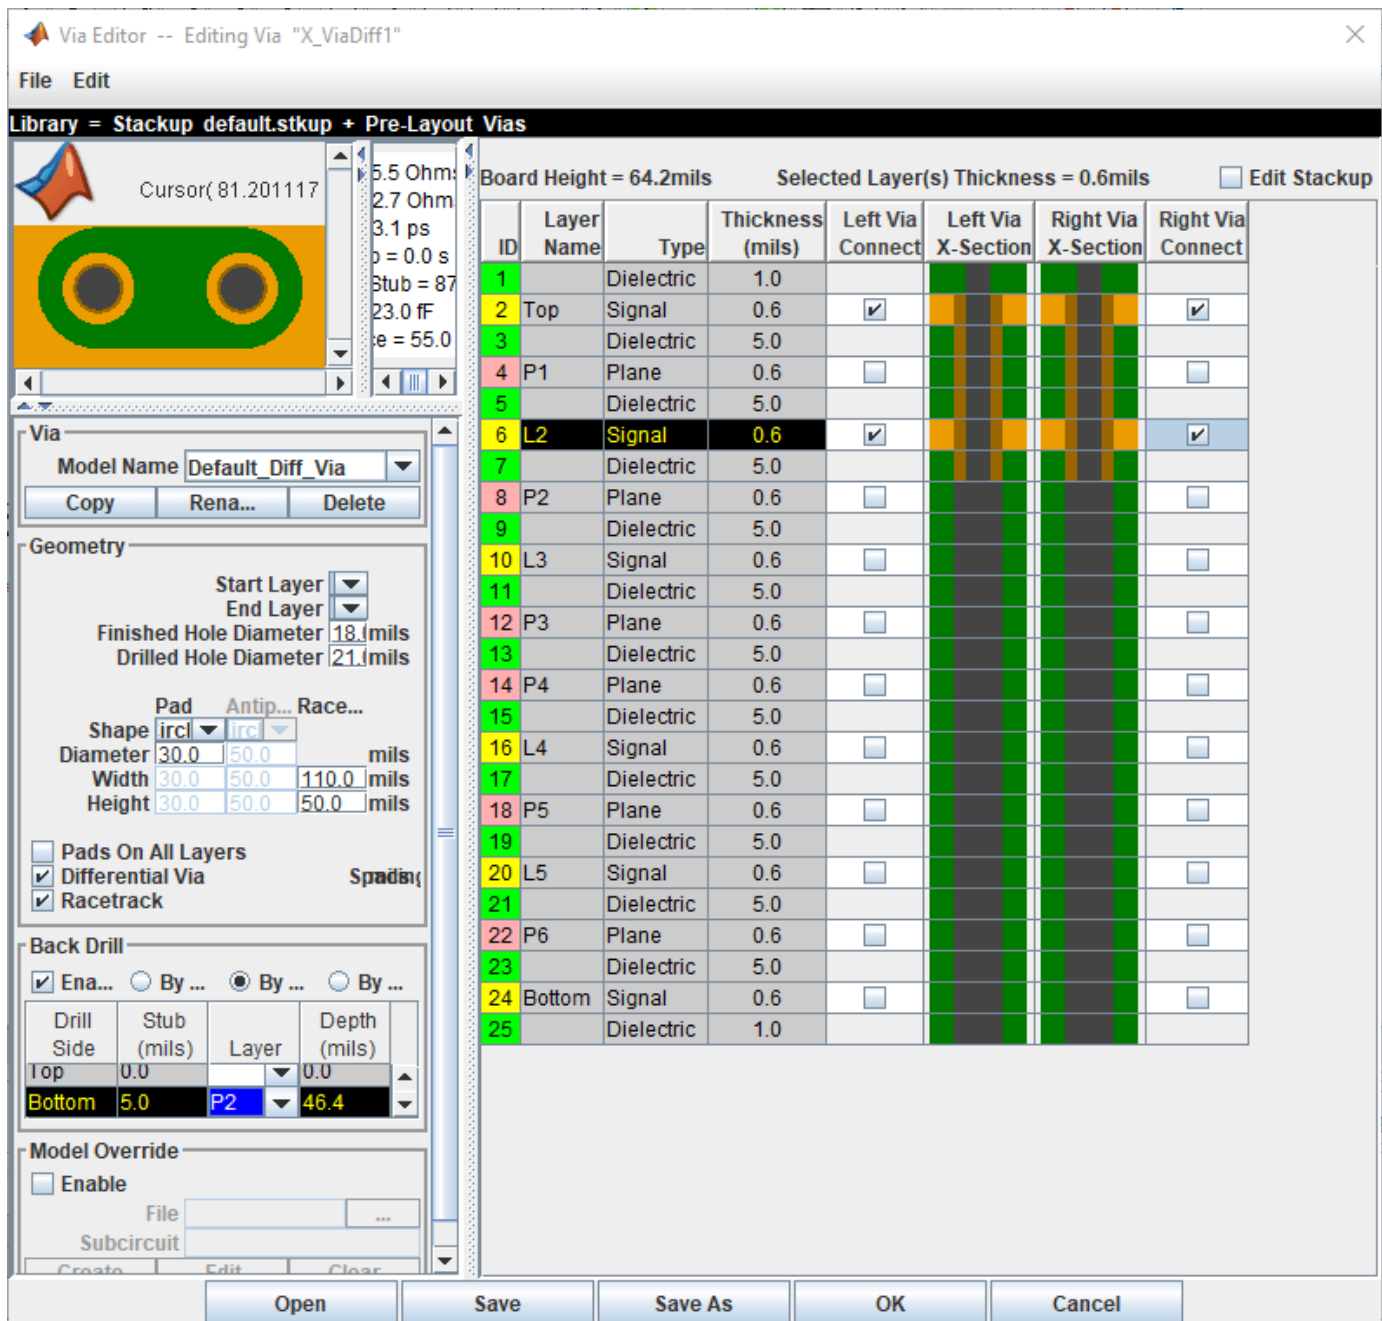

Save and close the Via Editor dialog box. Copy, paste, and mirror another via to the right of the transmission line.

To add the connectors, add a new S-Parameter element. Choose `connector_s4p.smod` and `s_connector_ab` from the `<Project Library>/spice/s_params` directory in the Select S-Parameter Model dialog box. Add two connectors (mirrored) on the left and right of the vias.


Copy the backplane transmission line symbol and paste one copy on the far left and one copy on the far right to represent the traces on the two line cards. Add two differential buffer elements (mirrored)

and place one in the far left to designate the transmitter and one in the far right to designate the receiver.

Connect the elements together to complete the schematic.



State: default  
Topology: channel

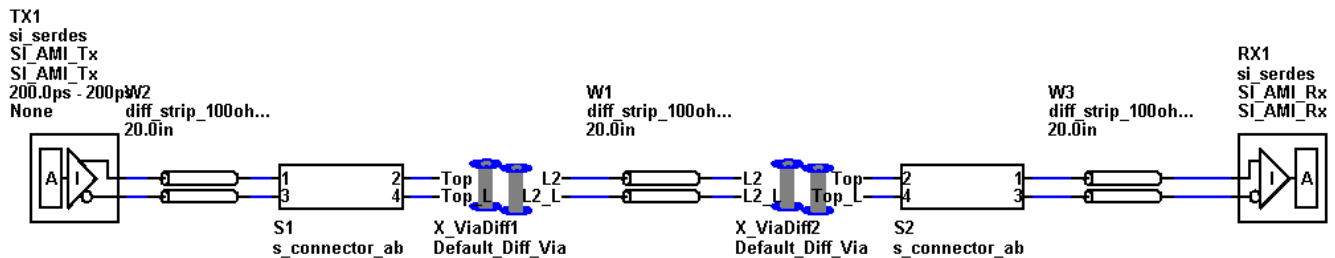

Double-click on one of the W-line symbols to launch the Lossy Transmission Line Element Properties dialog box. Enable the **Sweep Length** checkbox for each w-line. Change the name of the backplane symbol to \$bp\_len and the line card symbols to \$lc\_len. By changing the two line card w-lines to the same name you can use the same solution space variable for both w-line symbols. Close the Lossy Transmission Line Element Properties dialog box.

In the Solution Space panel, change the **Value 1** value for **Variable** \$bp\_len to 16in and **Variable** \$lc\_len to 3in.

Double-click on one of the connector symbols to launch the Spice Subcircuit Element Properties dialog box. There are two rows, one for each connector symbol. Enable the **Sweep Model** checkbox in each row and change the variable names to \$connector.

Double click on the TX symbol to launch the Designator Element Properties dialog box. Set the UI (Unit Interval) for TX1 to Serdes\_10G by selecting it from the dropdown menu of the **UI** parameter. The UI is set to 100 ps. Save the changes to the schematic.

Validate the schematic set by selecting **Run > Validate Current Schematic Set**. The validation should run without warning or errors.

### Network Characterization

To see the effects of sweeping the package model, connector model, and line card trace lengths on the physical channel characteristics, run network characterization. Network characterization derives the LTI signature of the analog network. The analog network includes the analog TX and RX characteristics as well as the channel elements themselves. The **Serial Link Designer** app frequency domain network solver derives the transfer function of the analog network. From the transfer function, the app derives the impulse and step response. The app also derives the pulse response using the UI set during schematic creation. It also computes the insertion loss, return loss, ripple, impulse width and other metrics.



To sweep the connector model, select the \$connector **Variable**, right click and select **Set All Values**. The solution space becomes populated with the four models you imported.

To sweep the line card length, select the \$lc\_len **Variable** and add the values 2in, 4in, and 5in. Save the changes.

Solution Space:										Sheet Options: <input type="checkbox"/> Case Mode		Global Options: Select DOE Sh	
Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:	Value 4:	Value 5:				
channel	Etch	Corner	List	Corners	TE (Typ)								
channel	Process	Corner	List	Corners	TT (Typ)								
channel	\$bp_len	W Length	Soft Range	<none>	16in								
channel	\$connector	Subcircuit Model	List	<none>	s_connector_ab	s_connector_cd	s_connector_ef	s_connector_gh					
channel	\$lc_len	W Length	Soft Range	<none>	3in	2in	4in	5in					
channel	RX1:Rx_Receiver_Sensitivity	Float	AMI Range	<none>	0.025								
channel	RX1:peaking_filter.config	Integer	AMI Range	<none>	0								
channel	RX1:peaking_filter.mode	String	AMI List	<none>	off								
channel	RX1:clock_recovery.ref	Float	AMI Range	<none>	0.0								
channel	RX1:dfe.taps.1	Tap	AMI Range	RX1:Tap	0								

Run the simulation by selecting **Run > Simulate Selected**. In the Prelayout Channel Analysis dialog box, select **Validate**, **Generate Netlists**, **Perform Channel Analysis**, and **Autoload Results**. Make sure **Include Statistical Analysis** and **Include Time Domain Analysis** are unchecked, so network characterization is the only analysis performed. Click **Run** to start the simulation process.

When the analysis is finished the **Signal Integrity Viewer** app launches and loads the analysis results. The table has one row per simulation. You can sort by any column by clicking on the column header. For this example, the difference between the lowest (16.67dB) and highest (21.54dB) loss is around 5 dB.

Signal Integrity Viewer

File Edit Zoom Display


Waveforms Plots PCB Layout

Mode: Results Waveform File Selection:  Enable Multi-Select  Create New Displays  Begin X At Zero

Row	ID	Transfer Net	State	Transfer	Symbol Rate (Gbaud)	Loss (dB)	UnEQ Signal/Xta
1	10	channel	default	TX1_to_RX1	10	16.6759	100
2	2	channel	default	TX1_to_RX1	10	16.7287	100
3	6	channel	default	TX1_to_RX1	10	16.8917	100
4	14	channel	default	TX1_to_RX1	10	16.9412	100
5	13	channel	default	TX1_to_RX1	10	17.8056	100
6	5	channel	default	TX1_to_RX1	10	17.829	100
7	9	channel	default	TX1_to_RX1	10	18.0424	100
8	1	channel	default	TX1_to_RX1	10	18.3498	100
9	3	channel	default	TX1_to_RX1	10	19.4979	100
10	11	channel	default	TX1_to_RX1	10	19.506	100
11	7	channel	default	TX1_to_RX1	10	19.603	100
12	15	channel	default	TX1_to_RX1	10	19.6326	100
13	4	channel	default	TX1_to_RX1	10	20.8578	100
14	12	channel	default	TX1_to_RX1	10	21.0605	100
15	8	channel	default	TX1_to_RX1	10	21.4636	100
16	16	channel	default	TX1_to_RX1	10	21.5378	100

0: Network

To view the transfer function of any data, select the data, right click and select **Show Transfer Function (Unequalized)**.

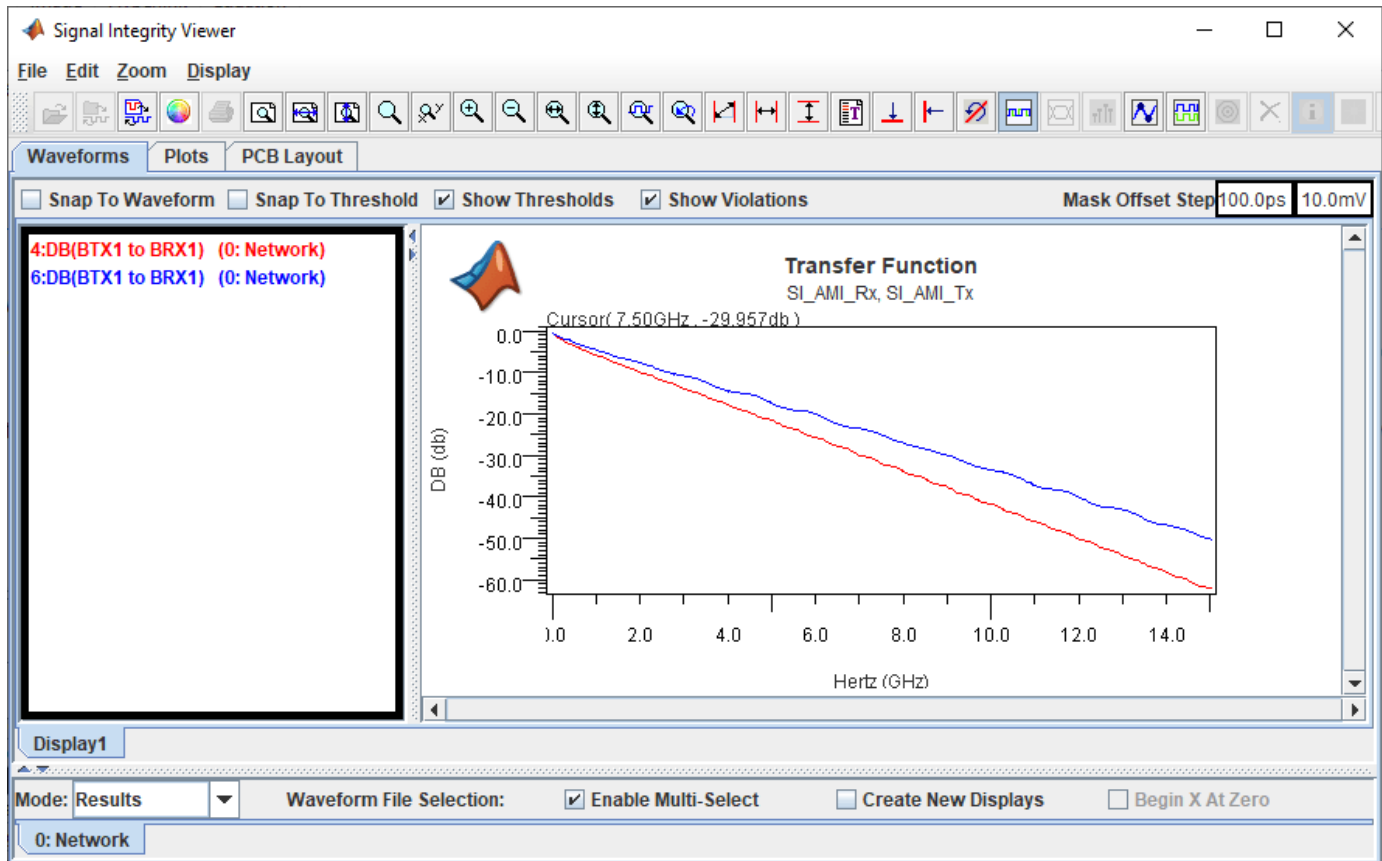

Close the **Signal Integrity Viewer** app and the Prelayout Channel Analysis dialog box.

### Statistical Channel Analysis

Statistical analysis can analyze the channel with LTI TX and RX equalization. This example shows how you can sweep the TX equalization and RX CTLE for statistical analysis.

To remove the solution space entries for the connector model, select the **\$connector Variable**, right click and select **Set to Default**. This will leave an entry in Value 1 only for the connector. Delete the entries for 4in and 5in for \$lc\_len by removing the columns.

Select the symbol for TX1 on the schematic to highlight the solution space table rows for the TX AMI parameters. The transmitter has three taps in the Variation Group TX1:tap. Delete the variation group from the taps so that they can be swept independently.

Select the TX1:tap\_filter.0 **Variable** and add the values 0.9, 0.8, and 0.7.


Select the TX1:tap\_filter.1 **Variable** and add the values -0.2, -0.1, 0.1, and 0.2. Save the changes.

Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:	Value 4:	Value 5:
channel	\$connector	Subcircuit Model	List	<none>	s_connector_ab				
channel	\$ic_len	W Length	Soft Range	<none>	3in	2in			
channel	RX1:Rx_Receiver_Sensitivity	Float	AMI Range	<none>	0.025				
channel	RX1:peaking_filter.config	Integer	AMI Range	<none>	0				
channel	RX1:peaking_filter.mode	String	AMI List	<none>	off				
channel	RX1:clock_recovery.ref	Float	AMI Range	<none>	0.0				
channel	RX1:dfc.taps.1	Tap	AMI Range	RX1:Tap	0				
channel	RX1:dfc.taps.2	Tap	AMI Range	RX1:Tap	0				
channel	RX1:dfc.taps.3	Tap	AMI Range	RX1:Tap	0				
channel	RX1:dfc.taps.4	Tap	AMI Range	RX1:Tap	0				
channel	RX1:dfc.taps.5	Tap	AMI Range	RX1:Tap	0				
channel	RX1:dfc.mode	String	AMI List	<none>	off				
channel	TX1:tap_filter.-1	Tap	AMI Range	<none>	0				
channel	TX1:tap_filter.0	Tap	AMI Range	<none>	1	0.9	0.8	0.7	0.6
channel	TX1:tap_filter.1	Tap	AMI Range	<none>	0	-0.2	-0.1	0.1	0.2
channel	TX1:tap_filter.2	Tap	AMI Range	<none>	0				
channel	TX1:tx_swing	Float	AMI Range	<none>	1.0				
channel	TX1:Tx_Delay	UI	AMI List	<none>	0				

Run the simulation. In the Prelayout Channel Analysis dialog box, select **Validate, Generate Netlists, Include Statistical Analysis, Perform Channel Analysis, and Autoload Results**. The **Signal Integrity Viewer** app launches when the simulation is complete.

On the Statistical tab of the Signal Integrity Viewer window, click on the column header for **Stat Eye Margin (V)**. The margin is negative on all of the simulation. In fact the eye is completely closed on all sims, so TX equalization is not enough to get this channel working.

Row	ID	Transfer Net	State	Transfer	s)	Stat Eye Height (V)	Stat Eye Margin (V)	Stat O
1	1	channel	default	TX1_to_RX1		0	-0.025	0.9453
2	2	channel	default	TX1_to_RX1		0	-0.025	0.6306
3	3	channel	default	TX1_to_RX1		0	-0.025	0.7737
4	4	channel	default	TX1_to_RX1		0	-0.025	0.9451
5	5	channel	default	TX1_to_RX1		0	-0.025	0.9450
6	6	channel	default	TX1_to_RX1		0	-0.025	0.9453
7	7	channel	default	TX1_to_RX1		0	-0.025	0.6020
8	8	channel	default	TX1_to_RX1		0	-0.025	0.7565
9	9	channel	default	TX1_to_RX1		0	-0.025	0.9451
10	10	channel	default	TX1_to_RX1		0	-0.025	0.9450
11	11	channel	default	TX1_to_RX1		0	-0.025	0.9453
12	12	channel	default	TX1_to_RX1		0	-0.025	0.5677
13	13	channel	default	TX1_to_RX1		0	-0.025	0.7355
14	14	channel	default	TX1_to_RX1		0	-0.025	0.9451
15	15	channel	default	TX1_to_RX1		0	-0.025	0.9450
16	16	channel	default	TX1_to_RX1		0	-0.025	0.9453
17	17	channel	default	TX1_to_RX1		0.000623239	-0.0246884	0.5258

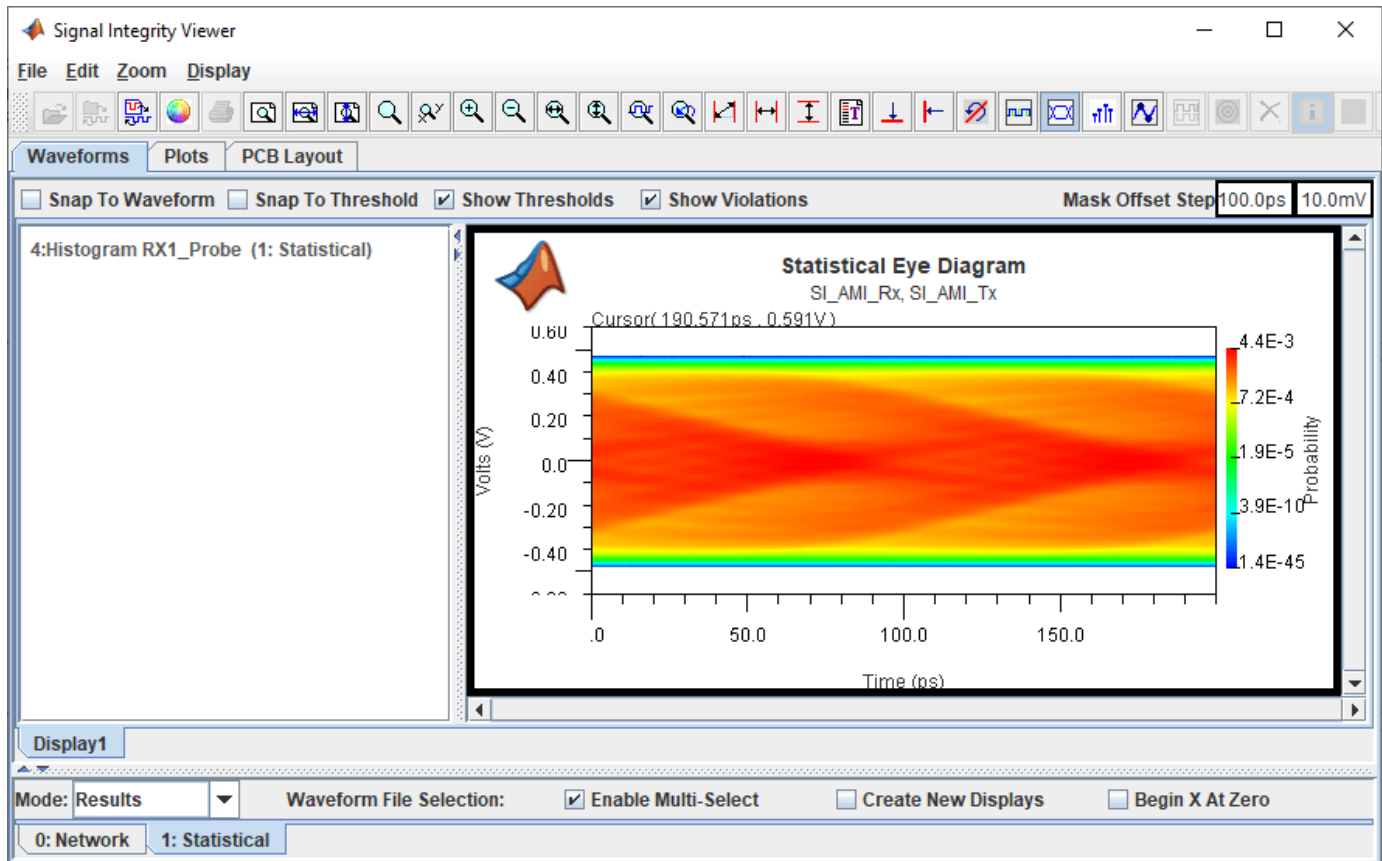


Click on the **Stat BER** header to get the smallest BER ( $4.64\text{e-}10$  in this example) at the top. To see the tap settings for the top row right-click on the row in the table and select **Show Solution Space**. In the dialog that appears you can see the tap settings:  $\text{TX1.tap\_filter.0} = 0.7$  and  $\text{TX1.tap\_filter.1} = -0.2$ .

Go back to the **Serial Link Designer** app Solution Space panel. Change the TX equalizer taps to the values that gave the best BER from above ( $0.0, 0.7, -0.2, 0.0$ ). Change **Value 2** for  $\text{RX1:peaking\_filter.mode}$  to Auto.

Solution Space:							
Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	
channel	\$lc_len	W Length	Soft Range	<none>	3in	2in	
channel	RX1:Rx_Receiver_Sensitivity	Float	AMI Range	<none>	0.025		
channel	RX1:peaking_filter.config	Integer	AMI Range	<none>	0		
channel	RX1:peaking_filter.mode	String	AMI List	<none>	off	auto	
channel	RX1:clock_recovery.ref	Float	AMI Range	<none>	0.0		
channel	RX1:dfc.taps.1	Tap	AMI Range	RX1:Tap	0		
channel	RX1:dfc.taps.2	Tap	AMI Range	RX1:Tap	0		
channel	RX1:dfc.taps.3	Tap	AMI Range	RX1:Tap	0		
channel	RX1:dfc.taps.4	Tap	AMI Range	RX1:Tap	0		
channel	RX1:dfc.taps.5	Tap	AMI Range	RX1:Tap	0		
channel	RX1:dfc.mode	String	AMI List	<none>	off		
channel	TX1:tap_filter.-1	Tap	AMI Range	<none>	0		
channel	TX1:tap_filter.0	Tap	AMI Range	<none>	0.7		
channel	TX1:tap_filter.1	Tap	AMI Range	<none>	-0.2		
channel	TX1:tap_filter.2	Tap	AMI Range	<none>	0		
channel	TX1:tx_swing	Float	AMI Range	<none>	1.0		
channel	TX1:Tx_Delay	UI	AMI List	<none>	0		
channel	TX1:Tx_Aggressor_Factor	Integer	AMI List	<none>	1		

Save the changes and rerun the simulation. Two of the four simulations now show positive statistical eye margin. Select one of the rows with a positive margin, right click and select **Show BER**. You can see the statistical eye, the bathtub curve and the clock PDF.

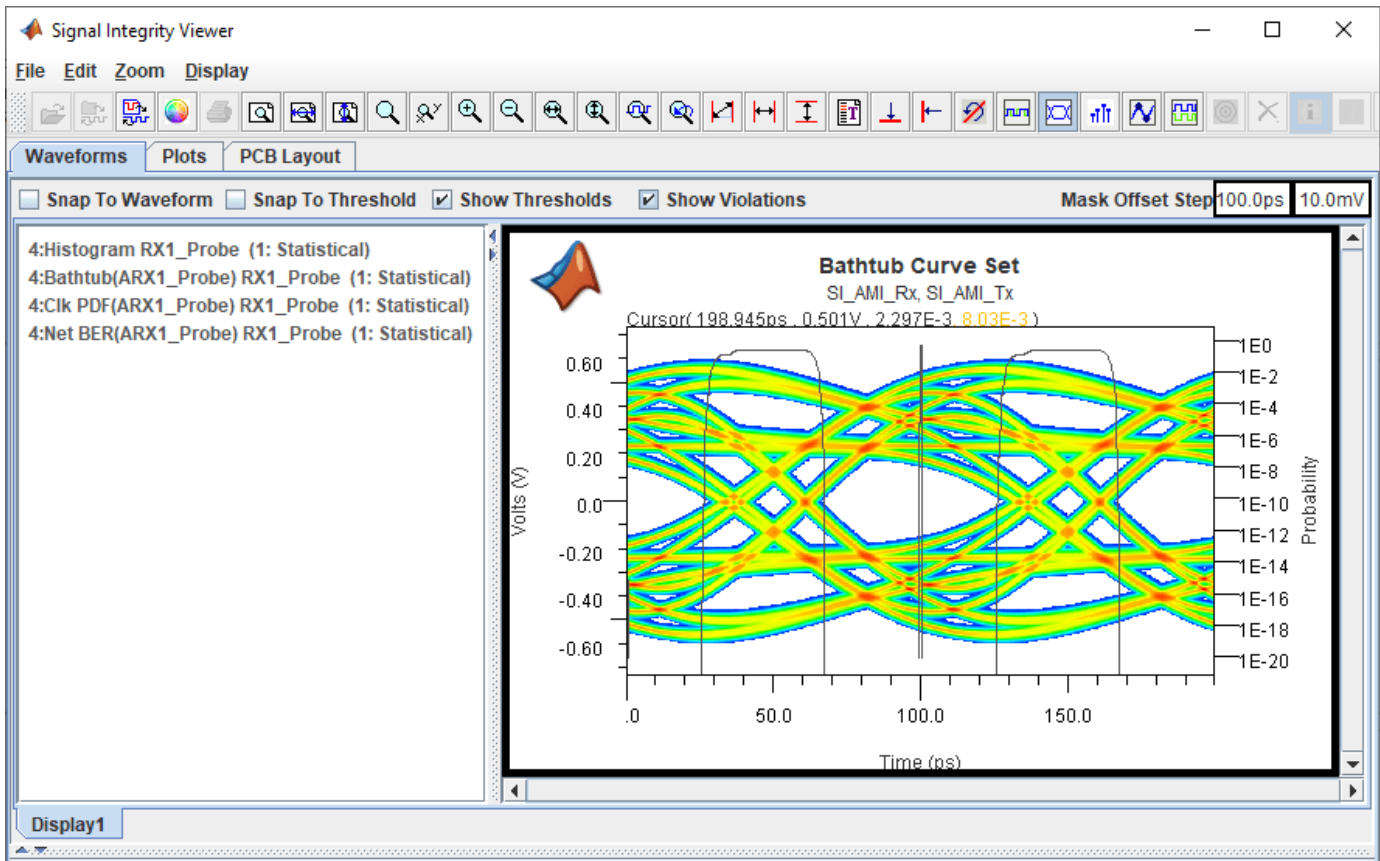

Close the **Signal Integrity Viewer** app and the Prelayout Channel Analysis dialog box.

### Time Domain Analysis

The DFE adaptation behavior is non-LTI, so running time domain analysis will let you see how the DFE converges over time.

To set up the time domain analysis, in the Solution Space panel of the **Serial Link Designer** app, delete the **Value 2** (2in) of the \$lc\_len **Variable**. Set the values of **Variable** RX1:peaking\_filter.mode **Value 1** to auto and **Value 2** to blank. Change the **Variation Group** of TX1 tap filters to tx and set the values of (0, 1, 0, 0). Set the **Value 2** to of RX1:dfe.mode **Variable** to adapt.

Solution Space:							
Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	
channel	\$Ic_Ien	W Length	Soft Range	<none>	3in		
channel	RX1:Rx_Receiver_Sensitivity	Float	AMI Range	<none>	0.025		
channel	RX1:peaking_filter.config	Integer	AMI Range	<none>	0		
channel	RX1:peaking_filter.mode	String	AMI List	<none>	auto		
channel	RX1:clock_recovery.ref	Float	AMI Range	<none>	0.0		
channel	RX1:dfe.taps.1	Tap	AMI Range	RX1:Tap	0		
channel	RX1:dfe.taps.2	Tap	AMI Range	RX1:Tap	0		
channel	RX1:dfe.taps.3	Tap	AMI Range	RX1:Tap	0		
channel	RX1:dfe.taps.4	Tap	AMI Range	RX1:Tap	0		
channel	RX1:dfe.taps.5	Tap	AMI Range	RX1:Tap	0		
channel	RX1:dfe.mode	String	AMI List	<none>	off	adapt	
channel	TX1:tap_filter.-1	Tap	AMI Range	tx	0		
channel	TX1:tap_filter.0	Tap	AMI Range	tx	1		
channel	TX1:tap_filter.1	Tap	AMI Range	tx	0		
channel	TX1:tap_filter.2	Tap	AMI Range	tx	0		
channel	TX1:tx_swing	Float	AMI Range	<none>	1.0		
channel	TX1:Tx_Delay	UI	AMI List	<none>	0		
channel	TX1:Tx_Aggressor_Factor	Integer	AMI List	<none>	1		

Select **Setup > Simulation Parameters** and check that the **Time Domain Stop** is set to 1,000,000 UI and the **Record Bits** is set to 2,500 UI. Right-click on the RX symbol on the schematic and select **Edit AMI File(s)**. In the AMI file that opens the **Ignore\_Bits** parameter is set to 500,000 UI. The largest value of either the AMI file parameter **Ignore\_Bits** or the **Simulation Parameters** setting for **Ignore\_Bits** is used during simulation. In this case, the value of 500,000 UI from the AMI file will be used instead of the value of 10,000 UI in Simulation Parameters. This group of settings configures the simulation to run for one million UI. The last 500,000 UI is used for the persistent eye and the BER and the last 2500 UI of the waveform is saved.



Simulation Parameters


Parameter	Type	Restriction	Value	Network Characterization	Statistical	Time Domain	Serial Link Designer	SPICE
Samples Per Bit	Integer	List	16	X	X	X	X	
Max Channel Delay	Float	Range	20ns	X	X	X	X	
Target BER	Float	CSV Range	1e-12, 1.e-9, 1.e-6, 1.e-3		X	X	X	
Minimum Ignore Bits	Float	Range	10,000UI			X	X	
Max Input Frequency	Float	Auto Range	Auto	X			X	
Max Output Frequency	Float	Auto Range	Auto	X			X	
S Param Frequency Step	Float	Auto Range	Auto	X			X	
Record Start	Float	Range	997,500UI			X	X	
Record Bits	Float	Range	2,500UI			X	X	
Time Domain Stop	Float	Range	1,000,000UI			X	X	
Block Size	Float	Range	1,024	X	X	X	X	
Output Clock Ticks	String	List	No				X	
STATify	String	List	None			X	X	
Results Storage Control	String	List	All	X	X	X	X	
Time Domain Crosstalk Mode	String	List	Semi_Analytic			X	X	
SPICE Rise Time	Float	Range	10ps	X		X		X
SPICE Sample Interval	Float	Range	10ps	X		X		X
SPICE Buffer Models	String	List	IBIS/SPICE	X		X		X
SPICE Ignore Bits	Float	Range	0UI	X				X
SPICE Step Stop	Float	Range	50UI	X				X
SPICE Time Domain Stop	Float	Range	500UI			X		X
Include IBIS Package	String	List	Yes	X			X	
Conductor Roughness	Float	Range	0.15	X	X	X	X	
NC/TD Simulation Mode	String	List	Prefer_Native/Native	X		X	X	X
Tx Spectral Table	String	Search Path				X	X	
Rx Spectral Table	String	Search Path				X	X	
Spectral Analysis Resolution BW	Float	Range	100kHz			X	X	
Clock Analysis	String	List	No				X	

Set Defaults Set Interface Values Explain...

Interface sheet1


Set By Sheet OK Close

Double click on the TX symbol on the schematic to launch the Designator Element Properties dialog box. Click on the **Stimulus** button to open the Stimuli dialog box. Click on **New** button to create a new stimulus. Set the **Name** to lab and **Type** to Concatenated. Make it a concatenated stimulus that is clock followed by PRBS31\_Victim. Save the changes.

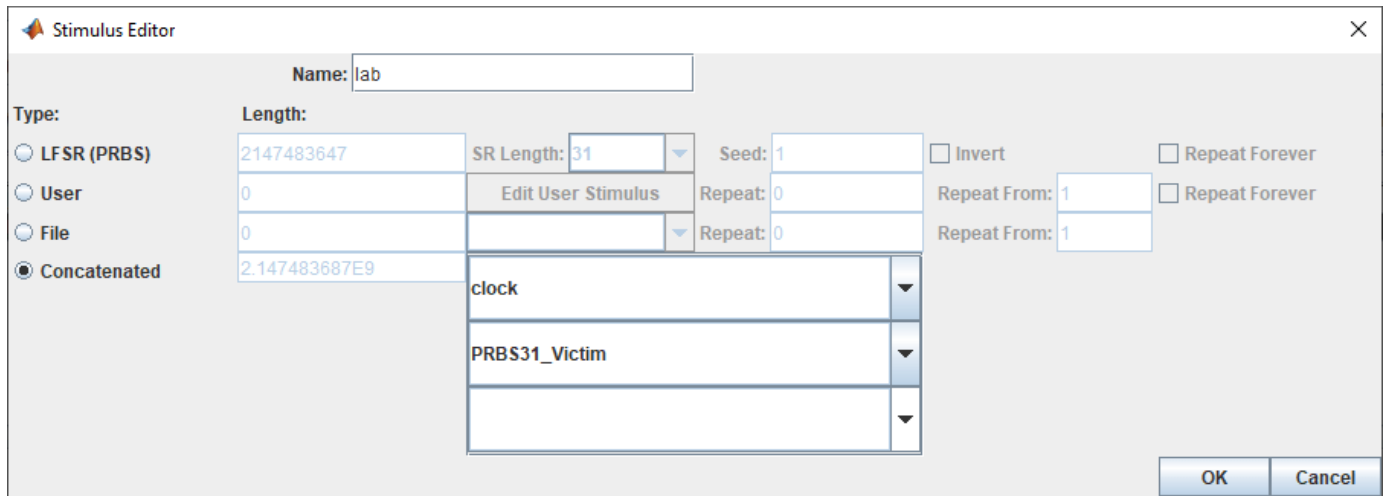


On the Designator Element Properties dialog box, select the **Stimulus** as **lab**. Save the changes. Run the simulation and select Include Time Domain Analysis in the Prelayout Channel Analysis dialog box.

The **Signal Integrity Viewer** app launches when the simulation is complete. Select the Time\_Domain tab and right click on the result rows and select **Show Solution Space** to see which row is showing the result of the DFE adapt mode. Select the row corresponding to the DFE adapt mode, right click and select **Show BER**.

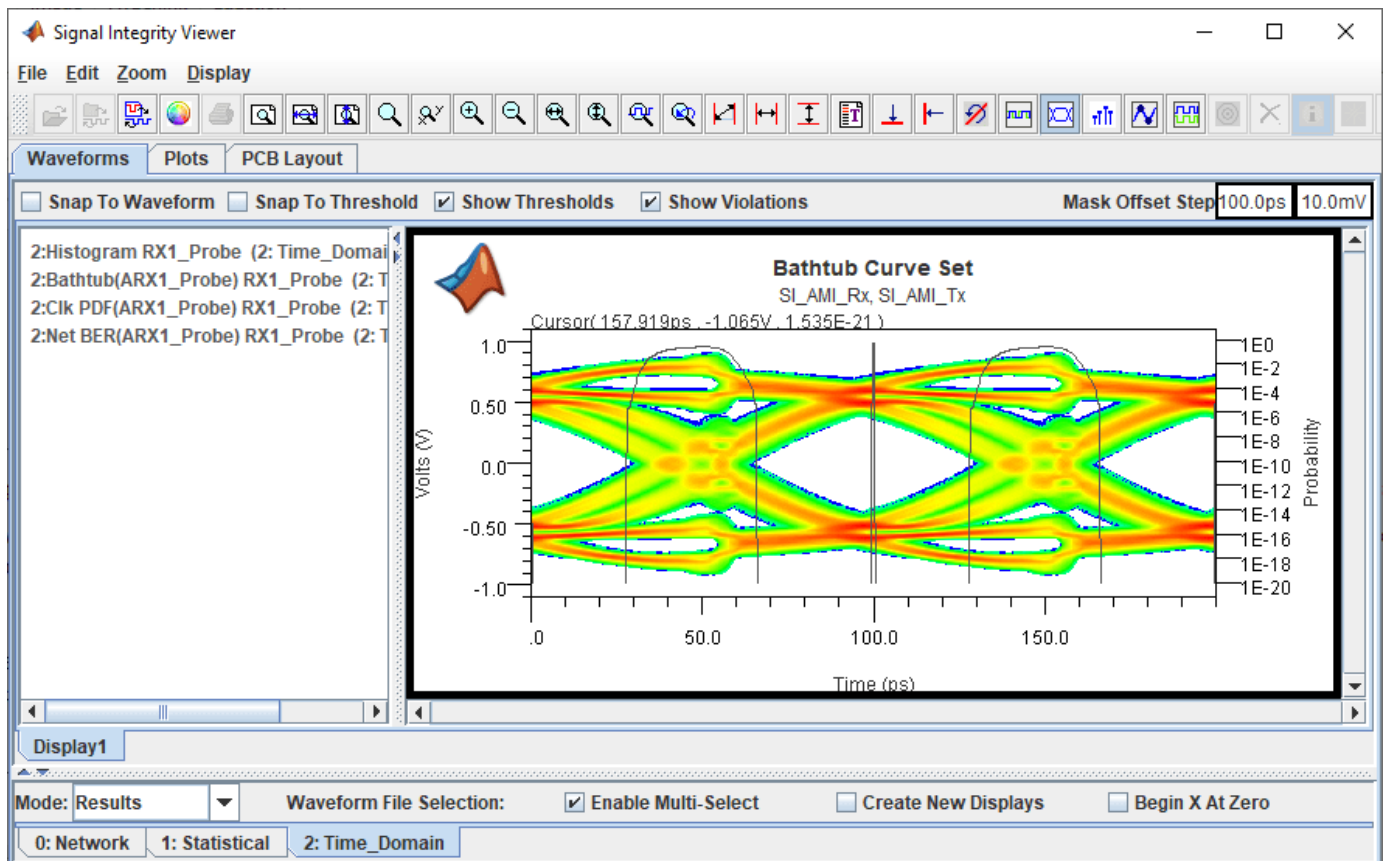

Right click on the Display panel and add a new display. On the Time\_Domain tab right-click on the results row for the DFE Adapt simulation and select **Show IBIS-AMI Output Parameters > RX1\_SiSoft\_AMI\_Rx**. Delete the nodes that are not DFE taps and zoom to view the tap coefficients over time as they adapt.

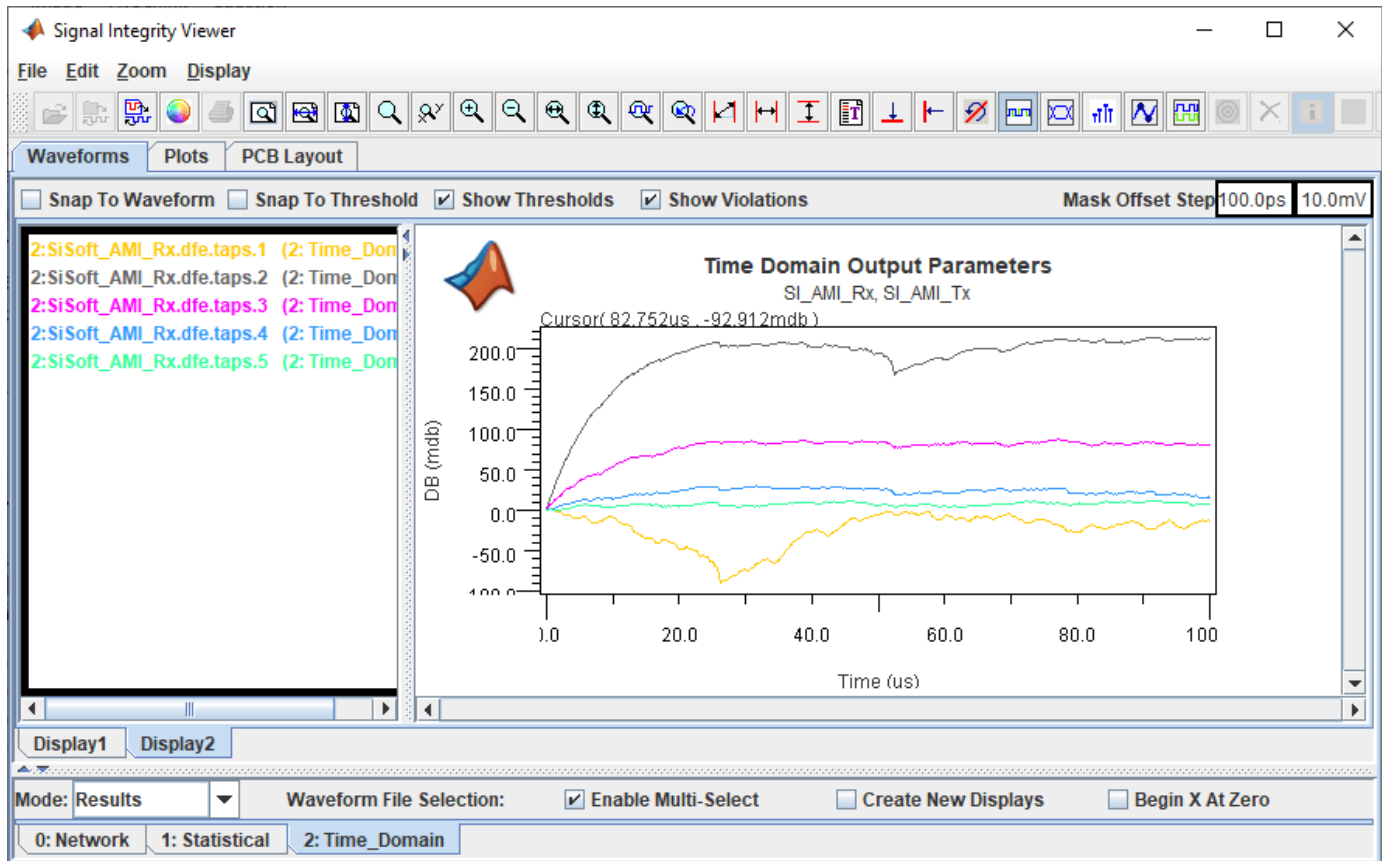

Close the **Signal Integrity Viewer** app and the Prelayout Channel Analysis dialog box.

## Creating Compliance Masks in Serial Link Designer

Compliance masks can be created and applied to simulation results in Serial Link Designer. A mask to be used in Serial Link Designer is defined in a file called a “rules file”. Rules files are text files that define the mask limits for a parameter, or parameters in the channel simulation results.

This example shows how you can create compliance masks and apply them to the simulation results in the **Serial Link Designer** app. The masks used in the **Serial Link Designer** app are defined in the *rules file*. Rules files are text files that define the mask limits for a parameter, or parameters in the channel simulation results. These are user created files that can be applied as Eye Masks or NetworkLoss Characteristics. The file extension of a rules file must be “.rules” for Serial Link Designer to recognize it as a mask file. It also must be located in the “<Project\_Directory>\si\_lib\rules\” directory of the project.

### Creating Masks for Compliance Tests

To create and apply rules files, follow the four step process:

- 1 Create a rules file that describes the compliance test limits.
- 2 Modify Transfer Net properties to apply the rule to a Transfer Net.
- 3 Run the simulation. The margin to the applied rules will be displayed in the Channel Analysis report and can also be seen in the SiViewer when simulation results are loaded.
- 4 Plot the compliance test results in the viewer.

### Rules File Creation


There are four keywords in the rules file that define the characteristics of the test:

- 1 First is the keyword “[Rule]”; this defines the name of this rule that can be applied to the simulation. This can be any ASCII string up to the first terminator character (space, TAB, or comma).
- 2 “Method” defines the test to be performed, for example: checking Insertion Loss.
- 3 “Apply\_To” tells the simulator where to apply the mask (Pad, Pin, Latch).
- 4 The “Mask\_Data” keyword introduces an arbitrary length section of data records that defines the measurement limits.

### Rule File Creation for Eye Mask

A common compliance test is a measurement of margin to an eye mask. This generally involves an inner eye mask (measuring the open area of the eye) and sometimes an outer eye mask (measuring maximum voltage excursion). The various probe points that need to be defined in the rules file are shown. There is the package 'pin', the die 'pad' and the 'latch'. Note that the probe point 'latch', also called the 'data decision point', is the primary and default measurement point for all built-in Serial Link Designer Eye Mask tests. In the **Signal Integrity Viewer** app, when a result is selected from the drop-down menu items such as ‘**Show BER**’, ‘**Show Statistical Eye**’, the result in view is always the data at the Latch. If data has been kept at the ‘Pin’ or ‘Pad’ probe points, it is available in the drop-down menu under ‘Show Probed BER’, and so forth. If both pin and pad have been probed, due to multiple tests, then both results show up under “Probed”. You must take care in this case to identify which result is at the pin and which is at the pad.

Example for probe points:

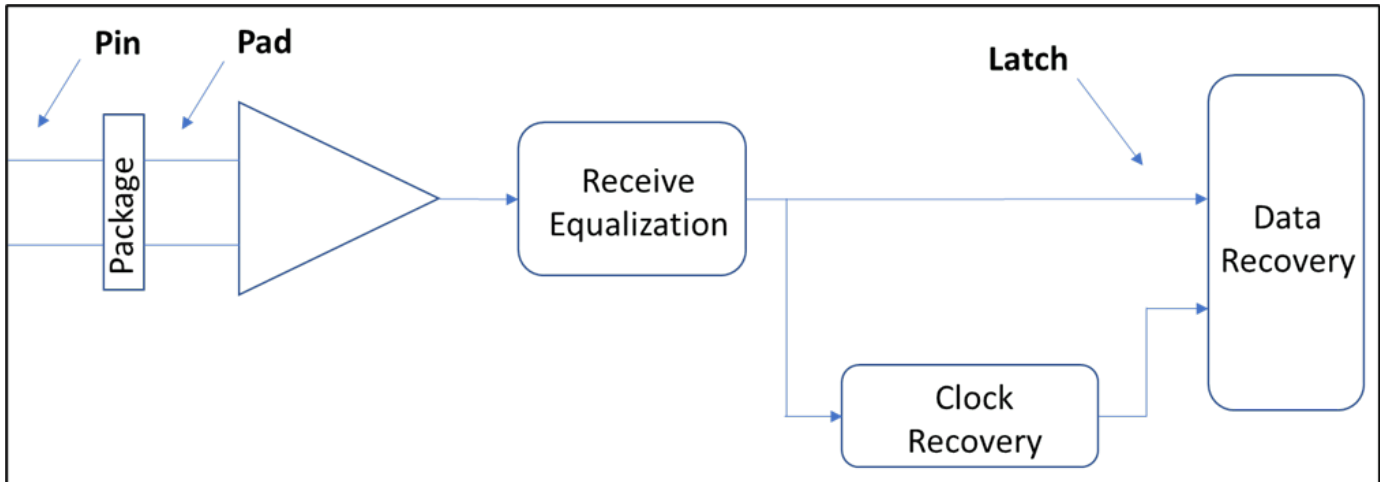

For testing eye masks, the 'Mask\_Data' records are of the form:

```
UI_fraction inner_mask outer_mask
```

The UI\_fraction is a number from 0 to 1, indicating the point in the Unit Interval (UI) where the values are to be applied. The inner and outer mask values are the voltage limits at that point. In the rules file shown below, the mask data has five data points. These occur at the beginning and end of the unit interval (UI=0.00, UI=1.00), as well as at the 30%, 50% and 70% point in the unit interval.

The numbers specified in the Mask\_Data are positive numbers only, but the equivalent negative numbers are implied, forming a complete mask that is symmetrical about the 0V axis. Eye mask rules are applied to Statistical and Time Domain results, not Network. So, the rule is only present in the menu when viewing Statistical or Time Domain tabs in the viewer, not when viewing the Network tab.


Example eye mask rule looks like:

```

[Rule] 10g_Channel_Mask
Method Skew_Eye
Apply_To Rx_Pad
Mask_Data
* UI lower_mask upper_mask
0.0      NA      0.600
0.3      0.0     0.600
0.5      0.0625  0.600
0.7      0.0     0.600
1.0      NA      0.600

```

The example rule is applied at the 'Rx\_Pad', so the relevant eye diagram is the Statistical Eye, at the pad. The statistical eye diagram with an eye mask applied looks like.

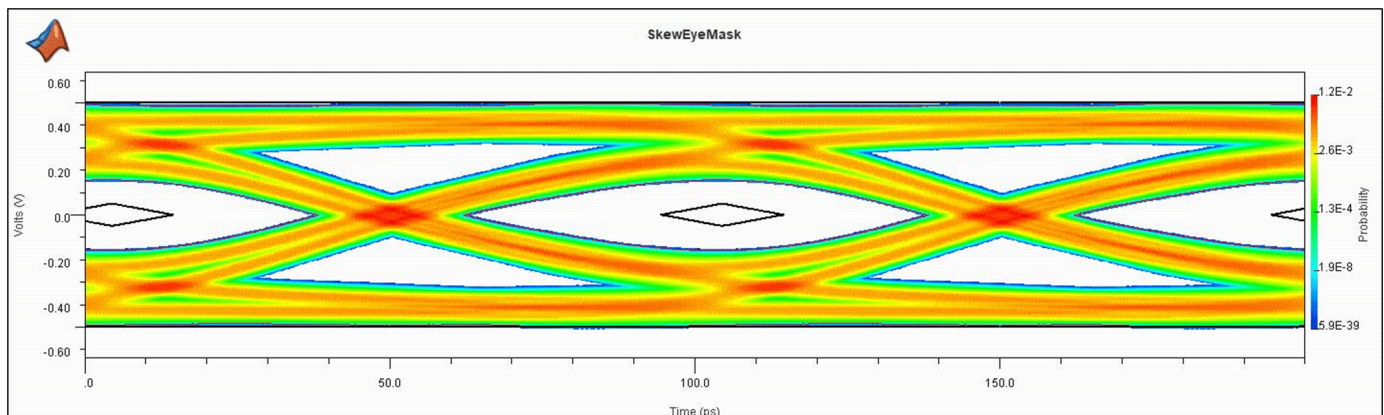

### Enabling Probe Points

When running a simulation without any rules files applied, Serial Link Designer only reports data at the latch. The presence of any rules file test in the project automatically triggers **Serial Link**

**Designer** to retain data at the probe point defined by the 'Apply\_To' keyword in the rule. It looks for (Pin, Pad or latch). So for the receiver, the probe point are **Rx\_pin, Rx\_pad or Rx\_latch**.

#### Rule File Creation for Network Insertion Loss


You can define network characterization masks for minimum, maximum and min/max limits.

#### Testing for Minimum Limit

In this case, the simulated result is tested against a lower bound only. The test for insertion loss (SDD21). For all s-parameter rules, the form of the 'Mask\_Data' records contain the frequency, lower\_limit and upper\_limit. The frequency is in hertz (Hz) and limits are in decibels (dB). When the upper\_limit is not applicable for a given test, the last column is left blank, or alternatively filled with "NA". The lines beginning with an asterisk are comment lines.

```
[Rule] InsertionLossExample
Method InsertionLoss
Apply_To NA
Mask_Data
* frequency      lower_mask      upper_mask
+5.00E+07        -2.08E+00       NA
+2.50E+08        -3.85E+00       NA
+4.50E+08        -5.06E+00       NA
+6.50E+08        -6.09E+00       NA
+8.50E+08        -7.04E+00       NA
```

Compare the plot of the insertion loss of a simulated path (red) with the applied insertion loss mask (black).

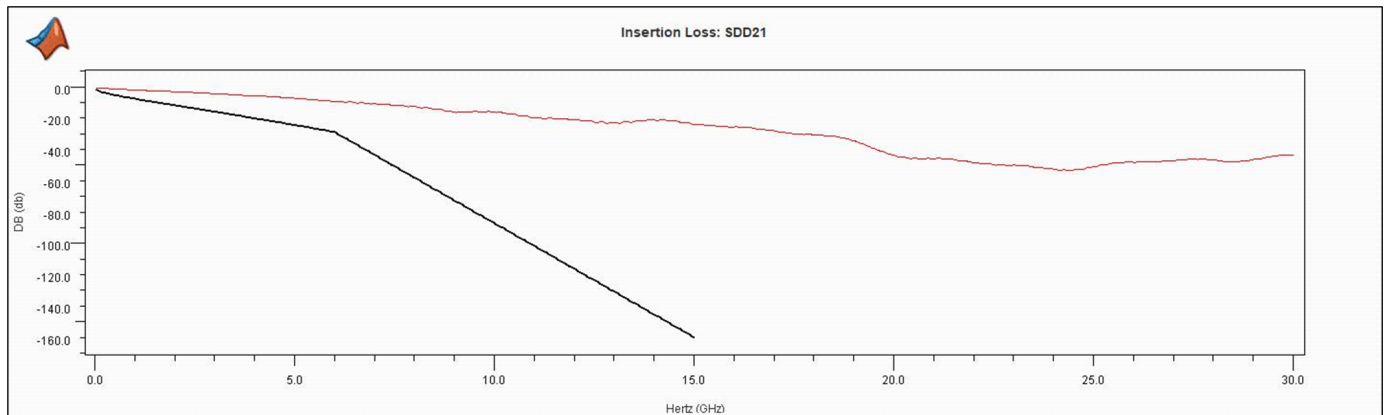

As the test has only lower limit data, there is only a single black line indicating the limit. In this case the simulated data is always well above the line; if there were a case where it dropped below the line, the results table in Serial Link Designer would identify a rules violation. As a note, this example shows only a single rule defined in this file, a rules file may contain multiple rule definitions. This will be covered later in this example.

#### Testing for Maximum Limit

The procedure for testing maximum limits is similar to testing for minimum limit. The only difference is in the 'Mask\_Data' records in the rules file.

```
[Rule] ReturnLossLimitTest
```

```
Method ReturnLoss
```

```
Apply_To NA
```

```
* Combines 1000BASE-KX, 10GBASE-KX4, 10GBASE-KR
```

```
Mask_Data
```

* freq	lower_mask	upper_mask
+5.00E+07	NA	-1.20E+01
+2.50E+08	NA	-1.20E+01
+4.50E+08	NA	-1.05E+01
+6.50E+08	NA	-9.47E+00
+8.50E+08	NA	-8.69E+00

#### Testing for Minimum and Maximum Limit

An example of testing both minimum and maximum limits is Insertion Loss Deviation\_28G (ILD). The rule and resulting plot is shown.



[Rule] InsertionLossDeviation\_28G


Apply\_To NA

Method InsertionLossDeviation\_28G

\* 25G CEI LR

Mask\_Data

* freq	lower_mask	upper_mask
5.00E+07	-1.02E+00	1.02E+00
2.50E+08	-1.12E+00	1.12E+00
4.50E+08	-1.22E+00	1.22E+00
6.50E+08	-1.31E+00	1.31E+00
8.50E+08	-1.41E+00	1.41E+00
1.05E+09	-1.50E+00	1.50E+00
1.25E+09	-1.60E+00	1.60E+00

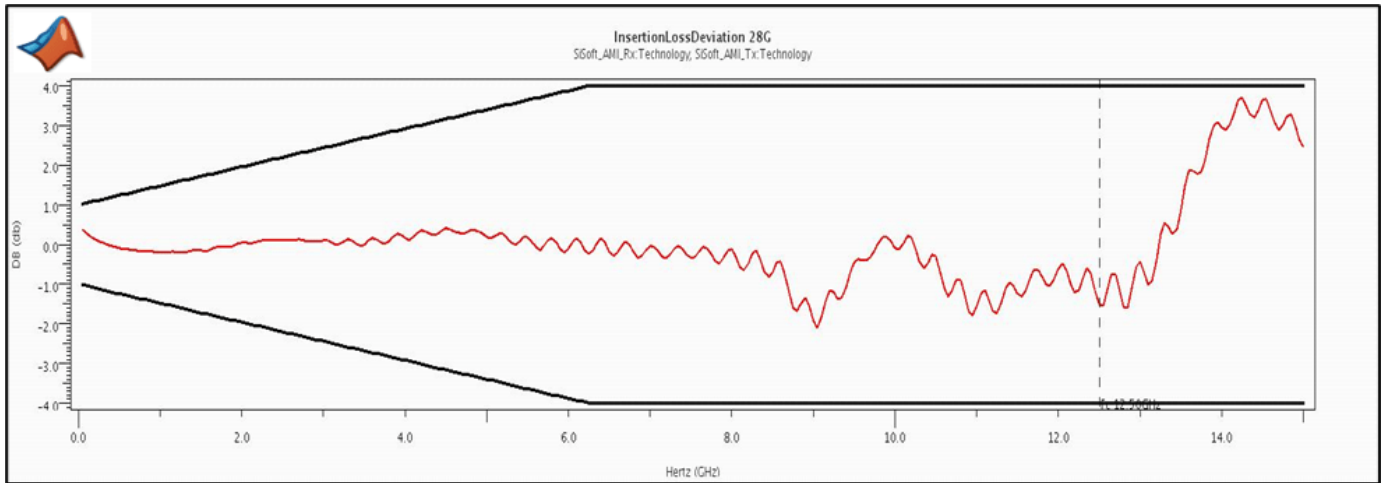

### Adding Rules File to Transfer Net

To add a rules file to a transfer net select the “Transfer Net Properties” tab or (setup->tnet properties).

Transfer Net	Mode	Rules File
FittedAttenuation	Differential	FittedAttenuation All
ICN_PSXT	Differential	
ICR	Differential	Eye_Mask
InsertionLoss_ReturnLoss_Mixed_Mode	Differential	FittedAttenuation
InsertionLossDeviation	Differential	FittedAttenuation_All
PR_ISI	Differential	FittedAttenuation_Flex


Designator	Part	Pin Names	Model	Role
RX1	sisoft_serdes	SiSoft_AMI_Rx	SiSoft_AMI_Rx	Receiver
TX1	sisoft_serdes	SiSoft_AMI_Tx	SiSoft_AMI_Tx	Driver

Once you define the rules in a file and apply to the Transfer Net, you can simulate any extended nets associated with that Transfer Net. The mask defined in the rules file is compared with the simulation results to calculate the margin with respect to the mask.

### Applying a Mask

After you run the simulations and the **Signal Integrity Viewer** app loads the data, a column consisting of the reported margin to the mask is visible for each of the eye mask measurements (height (V) and width (UI or pS)). The number reported indicates the margin to the defined mask for the transfer. The margin reported is the smallest distance between the actual eye contour and the mask, minus the limit set in the rule. For an eye mask, there is only a single value listed in the results table; it is the *smaller* of the inner and outer margins (if both are defined in the rules file). If either or both violates the margin, the smaller of the two is shown in red, as a negative number.

#### Eye Mask Measurements Applied to the Simulation Results

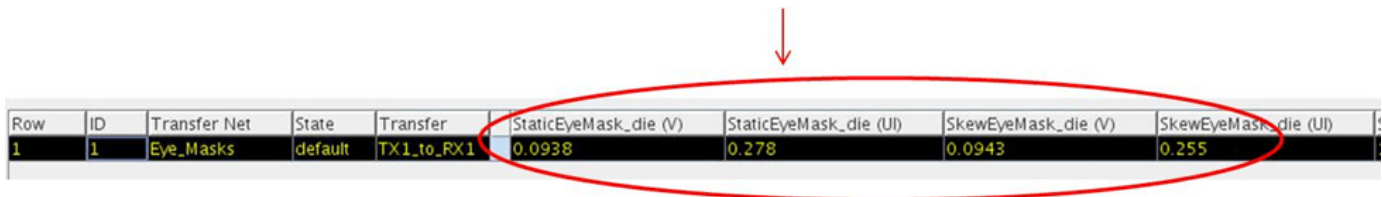


Row	ID	Transfer Net	State	Transfer	StaticEyeMask_die (V)	StaticEyeMask_die (UI)	SkewEyeMask_die (V)	SkewEyeMask_die (UI)
1	1	Eye_Masks	default	TX1_to_RX1	0.0938	0.278	0.0943	0.255


To display a mask to a simulation result:

- 1 In the **Signal Integrity Viewer** app, load the simulation results if they have not been automatically loaded after the simulation.
- 2 Select the simulation result row, or rows, that you wish to plot (multiple selections are allowed).
- 3 Right click on the row and select the rules file name at the bottom of the drop down menu.
- 4 Eye mask is applied and shown in the viewer in comparison to the eye contours defined for minimum BER set in the project or for the transfer (To set target BER, select: **Setup> Simulation Parameters** in the **Serial Link Designer** app).
- 5 You can also apply the mask to an eye diagram by plotting the statistical or persistent eye and then selecting the mask. This can also be done by selecting **Show BER**.
- 6 Insertion Loss masks are plotted the same way, but are applied in the network characterization results in the **Signal Integrity Viewer** app.

You can apply the StaticEyeMask rule of transfer net.

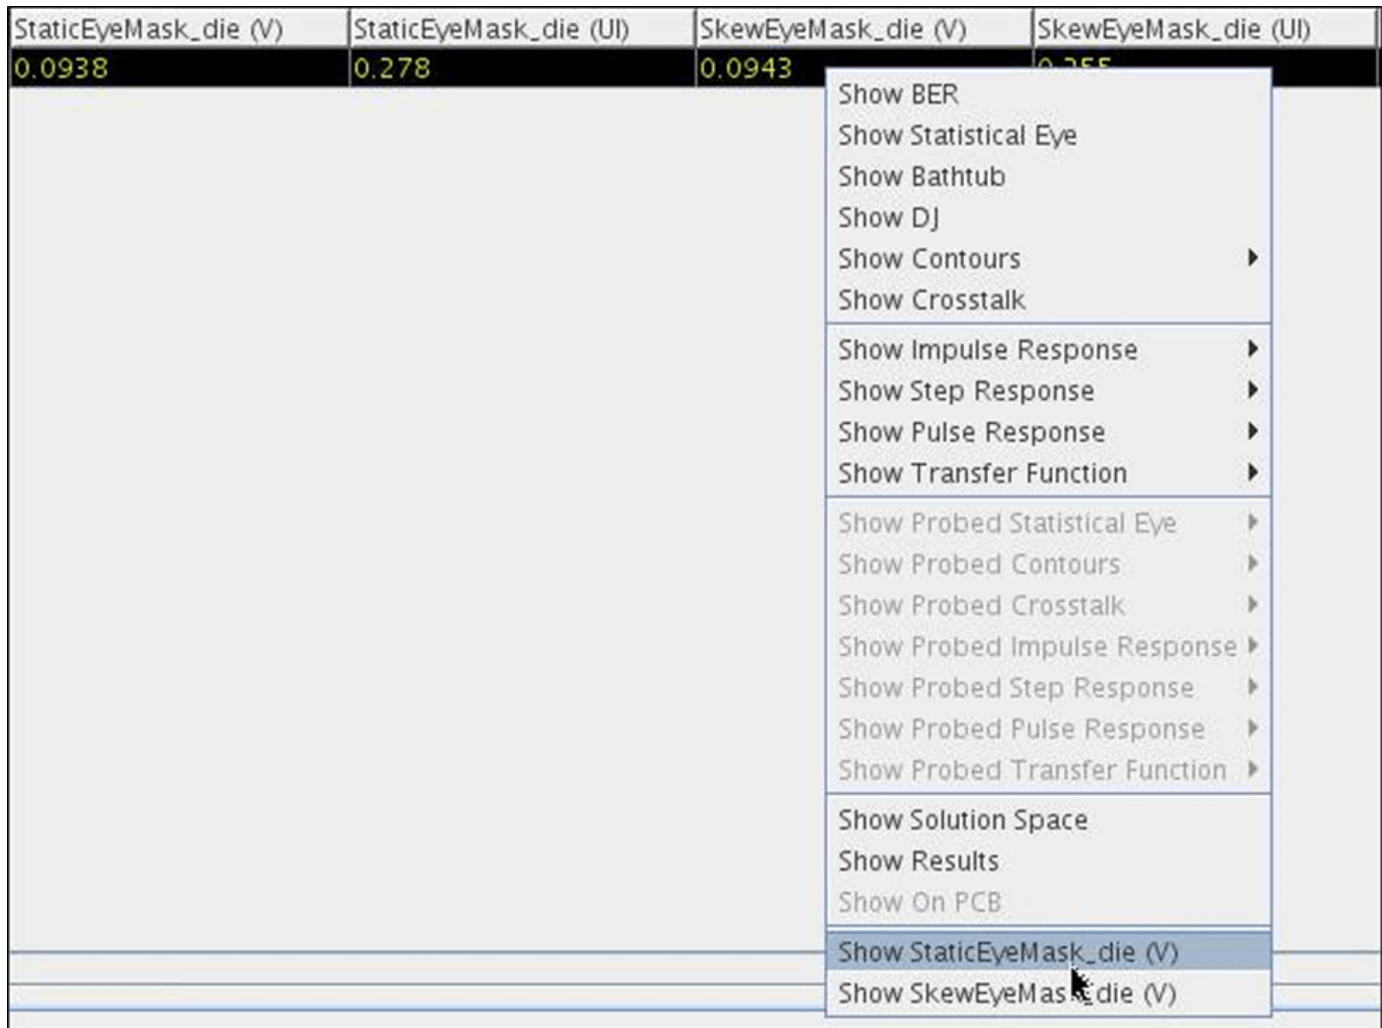


The inner and outer contours of the eye diagram are shown along with the eye mask. The margin areas based on the calculated margins are shown for reference. If only an inner or outer mask is defined in the rules file then that is the only mask applied.

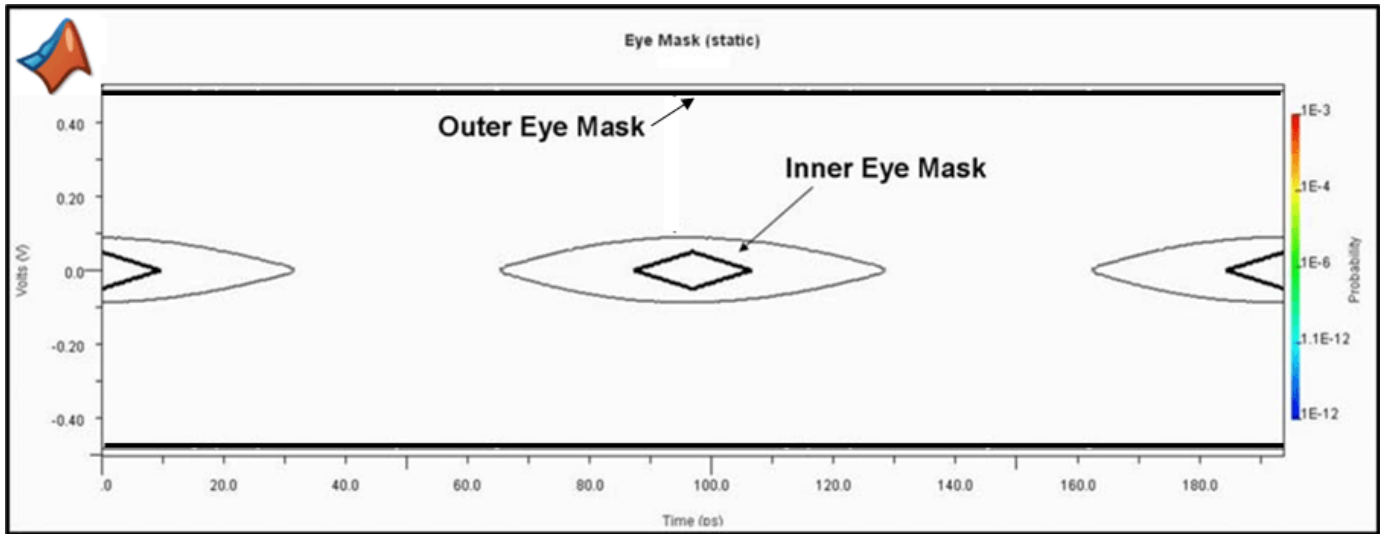

**Figure 13: Plotted Eye Mask and Eye Contour of the Plotted Simulation Result.**

You can also apply a mask to the eye diagram by plotting the eye and then selecting the mask.

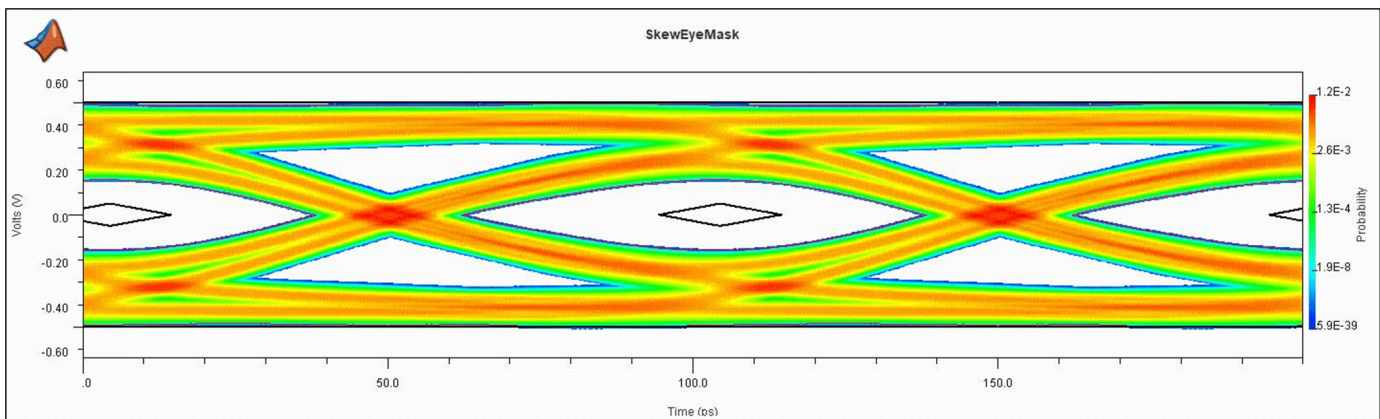

### Included Files

At any point within a rules file, you can place an 'include' statement in the form '**Include rules\_file\_basename**', or '**Include any\_file\_fullname**'. The contents of the named file is then incorporated at the point of the Include statement. In the case of a normal rules file, **Serial Link Designer** automatically appends the '.rules' suffix, so it does not need to be present in the rules file base name given. If any '.' character appears in the given filename, it is then taken to be a general file, with a full name given (e.g. 'mask\_data\_records.txt') and the '.rules' suffix is not appended.

You can have one 'top-level' rules file, which includes other rules files. Here is the content of one such file, named Mask\_Set.rules:

```
Include Channel_Mask_Pin
Include Channel_Mask_Pad
Include Channel_Mask_Latch
```

### Include InsertionLoss1

If a Transfer Net property is set to apply 'Mask\_Set', it is applied to all the individual rules enumerated in the top-level file. This is a good way to apply a complete set of compliance rules for a protocol specification. You can also use the include statement to incorporate data from a separate file. The data may be in its own file for organizational reasons, or to make sharing of common data easier, or any other reason.

In the above case, the file 'InsertionLoss1.rules' is included by the top-level file 'Mask\_set.rules'. An example of the InsertionLossLimitTest.rules is shown:

```
[Rule] InsertionLossLimitTest
Method InsertionLoss
Apply_To NA
* 10GBASE-KR
Include InsertionLoss-DATA.txt
```

Here the rule is defined and applied, but the data defining the curve exists in a separate file 'InsertionLoss-DATA.txt' .:

Mask_Data		
* freq	lower_mask	upper_mask
+5.00E+07	-2.08E+00	NA
+2.50E+08	-3.85E+00	NA
+4.50E+08	-5.06E+00	NA
+6.50E+08	-6.09E+00	NA
+8.50E+08	-7.04E+00	NA
+1.05E+09	-7.93E+00	NA
+1.25E+09	-8.80E+00	NA

Now you can create the mask data (which may be fairly extensive) separately, shared among multiple rules files, and updated easily.

**Note:** Rules files can be nested; that is, 'Included' files may include other files.

#### Fitted Attenuation and Insertion Loss Deviation Rules

Fitted Attenuation and Insertion Loss Deviation rules use the methods '**Fitted Attenuation\_Flex**' and '**Insertion Loss Deviation\_Flex**'. Although the methods **Fitted Attenuation** and **Insertion Loss Deviation** are still supported, **Fitted Attenuation\_Flex** and **Insertion Loss Deviation\_Flex** allow you to specify the equation coefficients from the specification. They fit terms a0, a1, a2 and a4 in the following polynomial from CEI-28G-VSR:

$$IL_{fitted}(f) = a0 + a1 \sqrt{\frac{f}{fb}} + a2 \frac{f}{fb} + a4 \left(\frac{f}{fb}\right)^2 \quad (dB)$$

In the Rules file, the following keywords put constraints on Ai; 'Poly i j k'. Where 'i' 'j' 'k' are the polynomial coefficients to include in the fit. An example of OIF\_CEI\_4.0 fitted attenuation is shown:

```

[Rule] FittedAttenuation
Apply_To FittedAttenuation
Method FittedAttenuation_Flex
Poly 0 1 2 4
Alimit 0 -1. 2.0
Alimit 1 0. 20.317
Alimit 2 0. 51.6
Alimit 4 0. 25.294
Mask_Data
* freq          lower_mask upper_mask
5.00E+07        -2.33      -1
2.58E+10        -85.32     -1

```

This is also the default. You can add additional polynomial coefficients as long as they are designated properly and follow the 'Alimit i min max' format where 'i' is the polynomial coefficient number which is constrained to be  $\geq$  min and  $\leq$  max. An example rule for insertion loss deviation which also follows the polynomial method is shown:



```

[Rule] InsertionLossDeviation
Apply_To InsertionLoss
Method InsertionLossDeviation_Flex
Poly 0 1 2 4
Alimit 0   -1.   2.0
Alimit 1   0.  20.317
Alimit 2   0.  51.6
Alimit 4   0.  25.294
Mask_Data
* freq          lower_mask      upper_mask
5.00E+07        -1.02E+00      1.02E+00
6.25E+09        -4.00E+00      4.00E+00
1.935E+10       -4.00E+00      4.00E+00

```

**ICN (Integrated Crosstalk Noise)**

The Method ICN is implemented with the rules file for OIF\_CEI\_4.0. The definitions and default values for amplitude and rise times based on OIF CEI-3.1 specification is given:

	<b>Symbol</b>	<b>Value</b>	<b>Units</b>
Baud rate	<i>f<sub>b</sub></i>	max. Baud Rate sup. by Channel	Gsym/s
Near-end aggressor peak to peak differential output amplitude	<i>A<sub>nt</sub></i>	1200	mVppd
Far-end aggressor peak to peak differential output amplitude	<i>A<sub>ft</sub></i>	1200	mVppd
Near-end aggressor 20 to 80% rise and fall times	<i>T<sub>nt</sub></i>	8	ps
Far-end aggressor 20 to 80% rise and fall times	<i>T<sub>ft</sub></i>	8	ps

The parameters **Fb\_min** and **Fb\_max** are the minimum and maximum frequency range of the ICN calculation from the standard. The mask is the rule as a function of the Insertion Loss of the channel at Fc. An example ICN rule and the plotted simulation results for ICN are shown below:.

[Rule] ICN

Apply\_To Channel

Method ICN

Ant 1.2

Aft 1.2

Tnt 8.p

Tft 8.p

fb\_min .05G

fb\_Max 25.8G

\* 25G CEI LR

Mask\_Data


\* Freq (GHz) lower\_mask upper\_mask (V)

0.	NA	.01
----	----	-----

3	NA	.01
---	----	-----

5.2	NA	.01
-----	----	-----

25.8	NA	.0008
------	----	-------

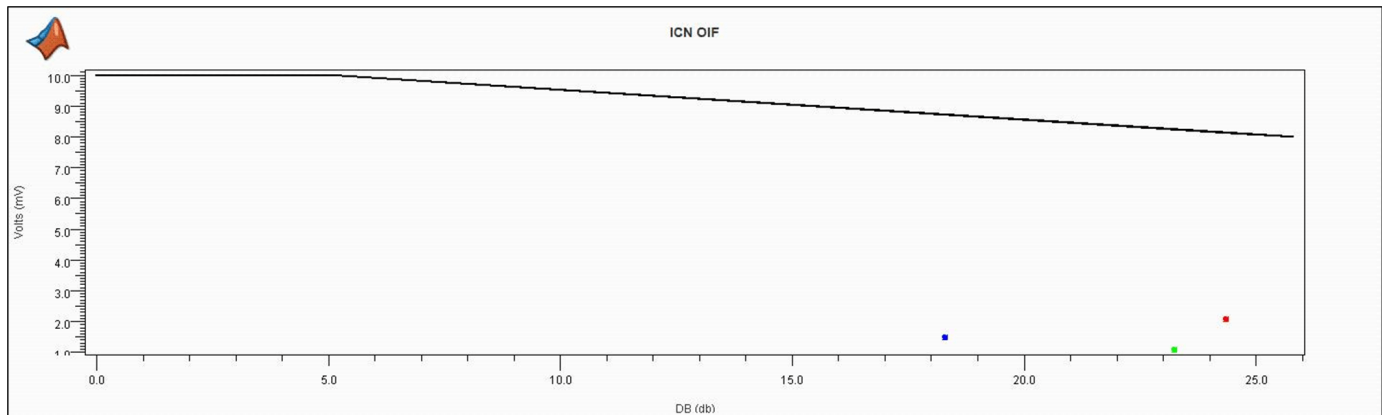

Note that ICN is only one point (volts/dB) and this is showing ICN on multiple channels.

### PR\_ISI (Pulse Response ISI)

Serial Link Designer can analyze the equalized pulse response of the channel. It first finds the center of the eye using an algorithm known as “*Hula Hoop*”. The Hula Hoop algorithm is simply taking a hula hoop (circle) with a diameter of 1UI and dropping it down horizontally on the pulse response until it stops. The center of the hula hoop is the main cursor time. The voltage at this point is '**PR Cursor (V)**'. The time of this point is '**PR Delay (ns)**'. The ISI is the sum of all of the absolute values of the pulse response at steps of 1 UI from the main cursor (except at the main cursor time). The **ISI Right** is the sum of all these absolute values after the *Edge\*UI* to the right of the main cursor. The **ISI Left** is the sum of all these absolute values from the beginning to and including *Edge\*UI* to the right of the main cursor.

Consider an Rx with a 4 tap DFE. Then **Edge** is 4. The **ISI Left** is ISI that can be corrected by a combination of Tx FFE, Rx CTLE, and DFE. An excellent equalization makes “**ISI Left**” very small. “**ISI Right**” cannot be equalized. An example rule file for PR\_ISI is shown:

```
[Rule] PR_ISI
Apply_To Rx_Latch
Method PR_ISI
Modulation NRZ
Edge 2
```

Along with ‘Edge’, ‘Modulation’ must be specified in the rule as either PAM4 or NRZ.

The posted results are provided in the Statistical tab of the channel analysis report, or statistical tab of the SiViewer after loading results. The reporting is shown below.

Row	ID	Transfer Net	State	Transfer	PR_ISI PR Height (V)	PR_ISI PR Max Height (V)	PR_ISI EQ ISI (V)	PR_ISI Non-EQ ISI (V)	PR_ISI PR Eye Height (V)
1	1	PR_ISI	default	TX1_to_RX1	0.650	0.650	0.222	0.127	0.301

The highlighted columns in the results tabs in the figure above are:

**PR Height (V):** Height of Pulse Response in center of Halo. This is the height of the statistical eye at the densest point of the eye.

**PR Max Height (V) :** Max height of the pulse response.

**PR Eye Height (V) :** The inner height of the statistical eye.

**EQ ISI (V):** Sum of absolute values of pulse response at center -1UI, -2UI, ..., +1UI, +2UI, ...+NUI. This is "equalizable ISI".

**Non-EQ ISI (V):** Sum of absolute values of Pulse response at center +(N+1)UI, +(N+2)UI, ...+NUI. This is "non-equalizable ISI".

**PSXT (Power Sum Crosstalk)**

The PSXT rule is based on Equation 69B-17 of the IEEE 802.3-2012 specification. This method is also applicable to the OIF\_CEI\_4.0 specification for CEI-25G LR implementation. According to the 802.3 specification, "the differential crosstalk is calculated as the power sum of the individual NEXT and FEXT aggressors (PSXT)". PSXT is computed as:

$$PSXT(f) = -10 \log \left( 10^{-\frac{PSNEXT(f)}{10}} + 10^{-\frac{PSFEXT(f)}{10}} \right)$$

The rules file example looks like:

[Rule] PSXT

Apply\_To Channel

Method PSXT

Ant 1.2

Aft 1.2

Tnt 8.p

Tft 8.p

fb\_min .05G

fb\_Max 28.5G

\* 25G CEI LR


Mask\_Data

* freq	lower_mask	upper_mask
--------	------------	------------

5.00E+07	NA	NA
----------	----	----

2.58E+10	NA	NA
----------	----	----

PSXT plotted results looks like:

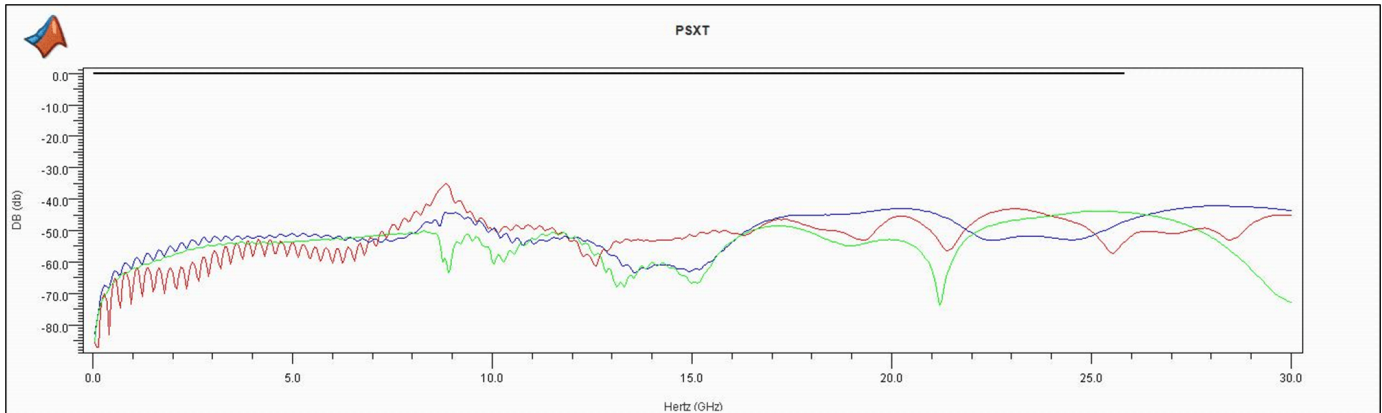

### IEEE Return Loss

The rule for return loss is reported as a negative number. This is consistent with how return loss is historically characterized in many specifications. But this characterization is inconsistent with the IEEE definition. Ideally, when expressed in decibels, loss quantities are positive numbers. The IEEE definition of return loss is the difference in dB between the incident power sent towards the Device Under Test (DUT) and the power reflected, resulting in a positive sign:

$$RL(dB) = 10 \log_{10} \left( \frac{P_i}{P_r} \right)$$

However, taking the ratio of reflected to incident power results in a negative sign for return loss.

$$RL(dB) = 10 \log_{10} \left( \frac{P_r}{P_i} \right)$$

, where

$$\left( \frac{P_r}{P_i} \right)$$

becomes a negative of

$$\left( \frac{P_i}{P_r} \right)$$

from above.

For some standards compliance work, this metric should be reported as a positive number. The rule "IEEE\_Return\_Loss" reports the magnitude of loss as a positive value.

### COM (Channel Operating Margin)

COM or channel operating margin is a figure of merit which is essentially a signal to noise ratio for evaluating the viability of high-speed channels. The IEEE 802.3bj standards committee first developed the COM requirement to support 100GBASE-KR backplane applications running 4-channels at 25Gbps. CEI-56G-LR standard which includes PAM4 signaling adopted the COM metric in 2016. It is expected that 112Gbps applications will use some form of COM in channel compliance.

The IEEE 802.3bj standard committee created a MATLAB script that calculates the COM metric for users who have MATLAB software and access to channel s-parameter models. In Serial Link Designer this is further expanded where the channel models from the user's pre-layout design are automatically fed into the COM script to interactively analyze the viability of the user's channel design.

If you do not have access to the MATLAB script, a COM type rule gives you insight to the signal to noise characteristics of your channel design. Although it is not an exact duplication of COM, it gives you insight to the performance of their channel relative to others. An example of it as it is used in an Serial Link Designer rules file to report this value is shown:

```
[Rule] COMZ
Apply_To Rx_Latch
Method COM
target BER 1e-6
```

This rule requires no configuration spreadsheet the way IEEE COM does. The simulator gets all of the data from the channel design and user settings. QCD makes the calculation and shows results in the channel analysis report. These results can also be seen in the **Signal Integrity Viewer** and are reported in the 'Statistical' results tab. You can choose the rule name.. You can set the **Apply** to parameter to Rx\_pin, Rx\_pad, or Rx\_latch and set the target BER your specifications.. It is required that the Method be COM. Lastly this rule applies to either NRZ or PAM4 Modulation.

Row	ID	Transfer Net	State	Transfer	COMZ COM (dB)
1	1	COM	default	TX1_to_RX1	6.755

**Note:** This rule is applied during statistical analysis, Unlike the IEEE COM results which are reported in the network tab, the QCD COM results are located in the statistical tab of the viewer.

### PAM4

**Serial Link Designer** rules for PAM4 analysis are implemented for the IEEE and CEI 56G specifications to report eye linearity and vertical eye closure (VEC).



Eye linearity is the proportion of the smallest of the three PAM4 eye heights to the largest of the three. Vertical eye closure is a report of the closure of the ideal eye height in dB with respect to the simulated or measured eye height at a specific bit-error ratio. An example rule that includes the eye linearity limit of 0.75, vertical eye closure limits are between 5.3dB and 6.3 dB and the eye width minimum limit at 10<sup>-6</sup> of 0.25UI is shown:

[Rule] PAM4  
 Apply\_to Rx\_Latch  
 Method PAM4  
 Eye\_Linearity 0.75  
 VEC 5.3 6.3  
 EW6 .25

PAM4 Margin:Linearity	PAM4 Linearity	PAM4 Margin:VEC Min (dB)	PAM4 Margin:VEC Max (dB)	PAM4 VEC (dB)	PAM4 COM (dB)	PAM4 Margin:Eye Mask (UI)	PAM4 Eye Mask (UI)
0.250	1.000	6.324	-5.324	11.624	2.642	-0.00781	0.250

### USB 3.1 IMR and IXT

IMR (Integrated Multi-Reflection) and IXT (Integrated Crosstalk) are compliance metrics called out in the USB 3.1 specification. The equations used for these rules are taken from the USB 3.1 specification. To calculate IMR the ILD (Insertion Loss Deviation) needs to be calculated. ILD is the difference between the raw insertion loss of the channel and the IL fit (fitted insertion loss) and is shown as:

$$ILD(f) = IL(f) - ILfit(f)$$


Here IL is the insertion loss of the channel over frequency minus the fitted insertion loss. The insertion loss fit is given by:

$$ILfit(f) = a + b\sqrt{f} + cf + d\sqrt{f^3}$$

Where f is frequency and a, b, c and d are the fitting coefficients of the polynomial. The integrated multi-reflection, or IMR, is calculated using:

$$IMR = \sqrt{\int_0^{f_{max}} |ILD(f)|^2 |V_{in}(f)|^2 df / f_{Nq}} * 1000 \text{ (in mV)}$$

where  $f_{Nq}$  is the Nyquist frequency (5 GHz),  $f_{max}$  is chosen as the 2 times the Nyquist frequency, and  $V_{in}(f)$  is the input trapezoidal pulse spectrum shown below:

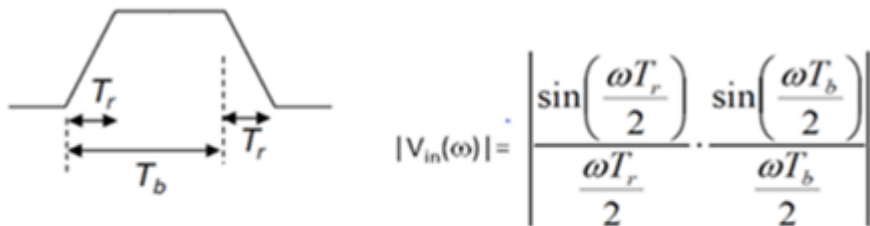

$$|V_{in}(\omega)| = \left| \frac{\sin\left(\frac{\omega T_r}{2}\right)}{\frac{\omega T_r}{2}} \cdot \frac{\sin\left(\frac{\omega T_b}{2}\right)}{\frac{\omega T_b}{2}} \right|$$

$T_b$ =Unit Interval=100 ps  
 $T_r$ =Rise time (0-100%)=0.2 $T_b$   
 $\omega=2\pi f$

Integrated crosstalk, IXT, is defined as:

$$IXT = \sqrt{\int_0^{f_{max}} |NEXT(f)|^2 |V_{in}(f)|^2 df / f_{Nq}} * 1000 \text{ (in mV)}$$

Where  $NEXT(f)$  is the near-end crosstalk between the SuperSpeed Gen2 signal pairs. The contribution of USB 2 D+/D- pair to SuperSpeed signal pairs is relatively small and is not included in IXT for simplicity.

Example rules for IMR and IXT are shown:

[Rule] IMR  
 Apply\_To Channel  
 Method IMR  
 IMR 60mV  
 Poly 0 1 2 3

[Rule] IXT  
 Apply\_To Channel  
 Method IXT  
 IXT 25mV

There are no masks to be applied for these two rules, the results displayed are for the calculated value and the margin to the limit specified in the rule. In the cases below IMR is specified with a limit of 60mV and IXT is set at 25mV. The results are displayed in the network tab of the **Signal Integrity Viewer** after simulation.

Row	ID	Transfer Net	State	Transfer	# Errors	# Warnings	IMR Margin (V)	IMR Value (V)	IXT Margin (V)	IXT Value (V)
1	1	USB_IMR_IKT	default	TX1_to_RX1	0	0	-2.821	2.881	0.0231	0.00193
2	2	USB_IMR_IKT	default	TX2_to_RX2	0	0	-1.861	1.921	0.0208	0.00423
3	3	USB_IMR_IKT	default	TX3_to_RX3	0	0	-0.861	0.921	0.0188	0.00622

### **Rules Definitions (Data Fields)**

Rule name can be any ASCII string allowable by the host operating system. Name terminates upon the first occurrence of a separator character (space, TAB, or comma). **Methods**, **Apply\_To** targets and **Mask\_Data** records are described in the following tables. For convenience, rules are divided into two categories, by the type of test that is applied: Eye Mask Tests and S-Parameter Tests.

**Note:** If there is no “Apply\_To” listed in the transfer net table, then it is not required. Use “Apply\_To NA” in the rules file.

The tables below are references of the available rules.

S-Parameter Tests	
Method	Test Description
InsertionLossSDD21	Mixed Mode Insertion Loss
InsertionLossSDD12	
InsertionLossSDC21	
InsertionLossSDC12	
InsertionLossSCD21	
InsertionLossSCD12	
InsertionLossSCC21	
InsertionLossSCC12	
ReturnLossSDD11	Mixed Mode Return Loss (looking from the TX or RX into the channel)
ReturnLossSDD22	
ReturnLossSCD11	
ReturnLossSCD22	
ReturnLossSDC11	
ReturnLossSDC22	
ReturnLossSCC11	
ReturnLossSCC22	
IEEEReturnLossSCC11	IEEE Differential and Common Mode Return Loss (See Section 12)
IEEEReturnLossSCC22	
IEEEReturnLossSDD11	
IEEEReturnLossSDD22	
RxReturnLossDD	Mixed-mode return loss looking into the Rx.
RxReturnLossCC	
RxReturnLossDC	
RxReturnLossCD	
RxReturnLossSE	Single-ended return loss looking into the Rx.
TxReturnLossDD	Mixed-mode return loss looking into the TX.
TxReturnLossCC	
TxReturnLossDC	
TxReturnLossCD	
TxReturnLossSE	Single-ended return loss looking into the TX.
InsertionLossDeviation	Legacy insertion loss deviation method. Users recommended to use Flex
InsertionLossDeviation Flex	Deviation of actual insertion loss to a log-fitted insertion loss curve. User inserts polynomial coefficients for calculations.
FittedAttenuation	Legacy fitted attenuation (i.e. ripple is removed). Users recommended to use Flex
FittedAttenuation Flex	Fitted Attenuation of actual insertion loss to a log-fitted insertion loss curve. User inserts polynomial coefficients for calculations.
ICR	Insertion Loss / Crosstalk Ratio (dB insertion loss/dB Crosstalk)
ICN	Integrated Crosstalk Noise (plotted as a point (dB))
IMR	Integrated Multi-Reflection as defined in USB 3.1 Specification
IXT	Integrated Crosstalk as defined in USB 3.1 Specification
PR ISI	Pulse Response ISI
PSXT	Power Sum Crosstalk (Plotted dB/f)
COM	Produces a signal-to-noise ratio based on eye height and noise on signal (Reported in dB)
PAM4	Reports Eye Linearity and Vertical Eye Opening (VEC) for PAM4 signals.

Eye Mask Tests		
Method	Test Description	Allowed Apply_To Target
Static_Eye	Applies eye mask exactly as defined	Rx_Pin Rx_Pad Rx_Latch  retained for backward-compatibility: Pin Pad Latch
Skew_Eye	Applies eye mask, but shifts it in time to maximize margin by centering mask in eye	
Mask_Data Records		
	<UI fraction> <inner mask> <outer mask>  UI_fraction: number between 0.0 and 1.0 inner mask: inner eye voltage outer mask: outer eye voltage  Mask value is NA if there is no rule at this UI_fraction	

For reference, mixed-mode S-parameters referred to in the rules are defined in the table below.

		Stimulus				
		Differential			Common Mode	
		Port 1	Port 2	Port 1	Port 2	
Response	Differential	Port 1	SDD11	SDD12	SDC11	SDC12
		Port 2	SDD21	SDD22	SDC21	SDC22
		Stimulus				
		Common Mode		Port 1	Port 2	
		Port 1	SCD11	SCD12	SCC11	SCC12
		Port 2	SCD21	SCD22	SCC21	SCC22

**Kit Overview**

A sample project is provided containing examples of various types of compliance masks that can be defined in Serial Link Designer. These masks can be related to a data eye, based on S-parameter characteristics of a network, limits for coupled noise or ISI. The examples are provided in this sample project as a training tool and quick reference of how to create and apply masks in Serial Link Designer.

To access the example kit, type the following at the Matlab command prompt.

```
openSignalIntegrityKit("SLD_Compliance_Masks");
```

Signal Integrity Toolbox recommends you to set the Java Heap Memory to at least 8192MB. Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory  
Current Java Heap: 486MB with 95MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.

### Schematic Sets

One schematic set has been defined in this interface, 'Set1'.

### Transfer Nets

Table 5 shows a list of all transfer nets included in this kit. Many of the examples are based on compliance for network characterization. Eye mask examples are also included to demonstrate their usage in Serial Link Designer rules.

Transfer Net	Description
Insertion_Loss_ReturnLoss_Mixed_Mode	Serdes Transfer with applied mask for measuring Insertion Loss and Return Loss Compliance
InsertionLossDeviation	Serdes Transfer with applied mask for measuring Insertion Loss Deviation compliance. Applies rules InsertionLossDeviation and InsertionLossDeviation_Flex
FittedAttenuation	Serdes Transfer with applied mask for measuring Fitted Attenuation compliance Applies rules FittedAttenuation and FittedAttenuation_Flex
ICR	Widebus Transfer net with applied masks for ICR as used in 10G-KR Specification
ICN_PSXT	Widebus Transfer net with applied masks for ICN and PSXT as used in 10G-KR and CEI-25G-LR Specifications
PAM4	PAM4 Rules
PR_ISI	Pulse Response ISI
USB_IMR_IXT	USB 3.0 rules IMR and IXT
Eye_Masks	Serdes Transfer with applied mask for measuring Eye Mask Compliance using a Skew Eye and Static Eye

Many of the examples are based on compliance for network characterization. Eye mask examples are also included to demonstrate their usage in Serial Link Designer rules.

### Kit Transfer Nets and Properties

The properties for each of the transfer nets in the kit along with which rule(s) is applied are listed as:.

<b>Transfer Net</b>	<b>Applicable Rule(s)</b>
FittedAttenuation	FittedAttenuation All.rules
ICR	ICR.rules
ICN PSXT	Crosstalk Rules.rules
PAM4	PAM4.rules
PR ISI	PR ISI.rules
InsertionLoss ReturnLoss Mixed Mode	IL RL Rules.rules
InsertionLossDeviation	InsertionLossDeviation All.rules
Eye Masks	Eye Mask.rules



## Channel Operating Margin (COM) for Serial Link

Channel Operating Margin (COM) is a figure of merit for a passive channel expressed in decibels and is calculated using the ratio of signal amplitude factors to noise amplitude factors. Channel bit rate, insertion loss, return loss, cross-coupling, transmitter and receiver equalization and IC package models are some of the factors applied to determine COM. While it is required for compliance in some applications, COM can also be a valuable part of channel design methodology in general. This example assumes that you have familiarized yourself with the topic page, Channel Operating Margin (COM).

### Overview

The IEEE 802.3bj 100GBASE specification defines the 100GBASE interface to consist of four channels each operating at 25.78125Gbps. These channel designs can involve PCB only, backplane or copper cables. Signaling is accomplished with either NRZ (Non Return to Zero) or PAM4 (Pulse Amplitude Modulation). Encoding the packets with forward error correction (FEC) is optional but can greatly improve a channel BER (Bit Error Ratio). Testing the compliance of the passive electrical channel to the specification requires it to meet or exceed what is known as COM (or Channel Operating Margin) as measured in decibel units. This document provides information on COM and how to use it within a Serial Link Designer project, having is an interface that operates at 25Giga-Baud per Lane.

### About COM

COM is a figure of merit derived from the scattering parameters of the passive channel. The overall objective is to give the user insight on the quality of the passive channel design. The calculated metric is related to the ratio of the calculated signal amplitude to its calculated noise amplitude. Channel bit rate, insertion loss, return loss, cross-coupling, transmitter and receiver equalization and IC package models are some of the factors applied to determine this figure of merit. Figure 1 shows a channel model with associated test points. The passive channel referenced is between TP0 and TP5 as documented in IEEE 802.3bj. It is important for the user to keep in mind that COM is required for compliance in some IEEE 802.3 and OIF CEI standards, but can also be a valuable part of a channel design methodology.

### COM Example Project

You can reference the implementation kit COM\_25G\_BP, which is a Serial Link Designer project consisting of a 25Gbps per-lane design, and can be used as an example to show the procedure for running COM within Serial Link Designer. This can be also applied to various IEEE 802.3 and OIF CEI as well as general channel design methodology.

```
openSignalIntegrityKit("COM_25G_BP");
```

Signal Integrity Toolbox recommends you to set the Java Heap Memory to at least 8192MB. Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory  
Current Java Heap: 341MB with 69MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.

The procedures, some examples and tips are given to demonstrate how one may use COM in the analysis of simulation results. Figure 1 is the schematic of the channel design that has been created for analysis.

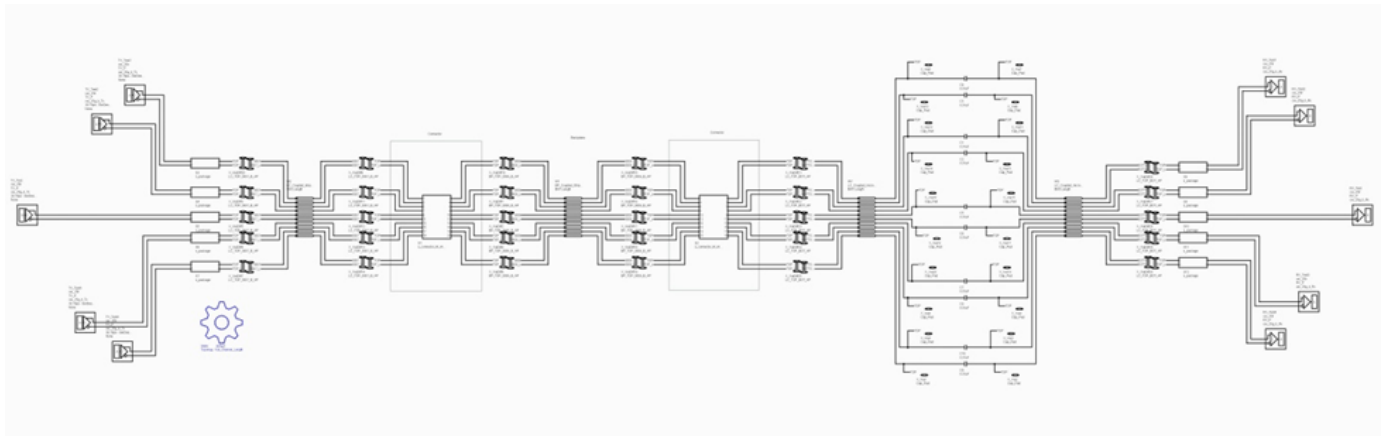


Figure 1. 25Gbps-per-lane Backplane Schematic Example

The channel design is of a 25Gbps-per-lane backplane with two line cards and high speed connectors. It is a custom 25Gbps interface designed to meet a target  $1E-15$  bit-error-ratio. Two identical schematic sheets are included in the project with different solution spaces. One is configured to evaluate the effects of loss on COM and the other is to view crosstalk effects. The “Crosstalk” sheet varies aggressor spacing to demonstrate the effects of crosstalk. The “Length” sheet varies the backplane trace length which affects channel loss and thus will affect the channel COM. TX and RX s-parameter package models are included on the schematic sheets. Thus package characteristics will be included in the channel s-parameter models that will be passed into COM. The spreadsheet has been edited to exclude the any package model from the COM calculation as it will be part of the channel model.

### Running COM in MATLAB

#### Step 1: Identify Victim Channel

When the channel design is ready for simulation and the spreadsheet and reported results have been identified, the user can start the process of running COM from within the Serial Link Designer App. The user will need to first identify the victim channel on each of the schematic sheets being simulated. Serial Link Designer requires this such that it will create the appropriate s-parameter files for the victim and any aggressors. To identify the victim channel “Designator Element Properties” must be edited on the schematic sheet. The designator element properties window can be accessed by double clicking on any one of the TX or RX designators on the sheet. Figure 2 shows the example project schematic with victim net identified and the element properties window. The report checkbox in the element properties window should be “checked” for the RX designator of the victim channel only and should be “unchecked” for any other RX designators. The FEXT and NEXT aggressor channels will be automatically determined based on their position on the schematic sheet with respect to the victim. In the case of Figure 2 the RX\_Test designator is defined as the victim (See Designator Elements Properties window).

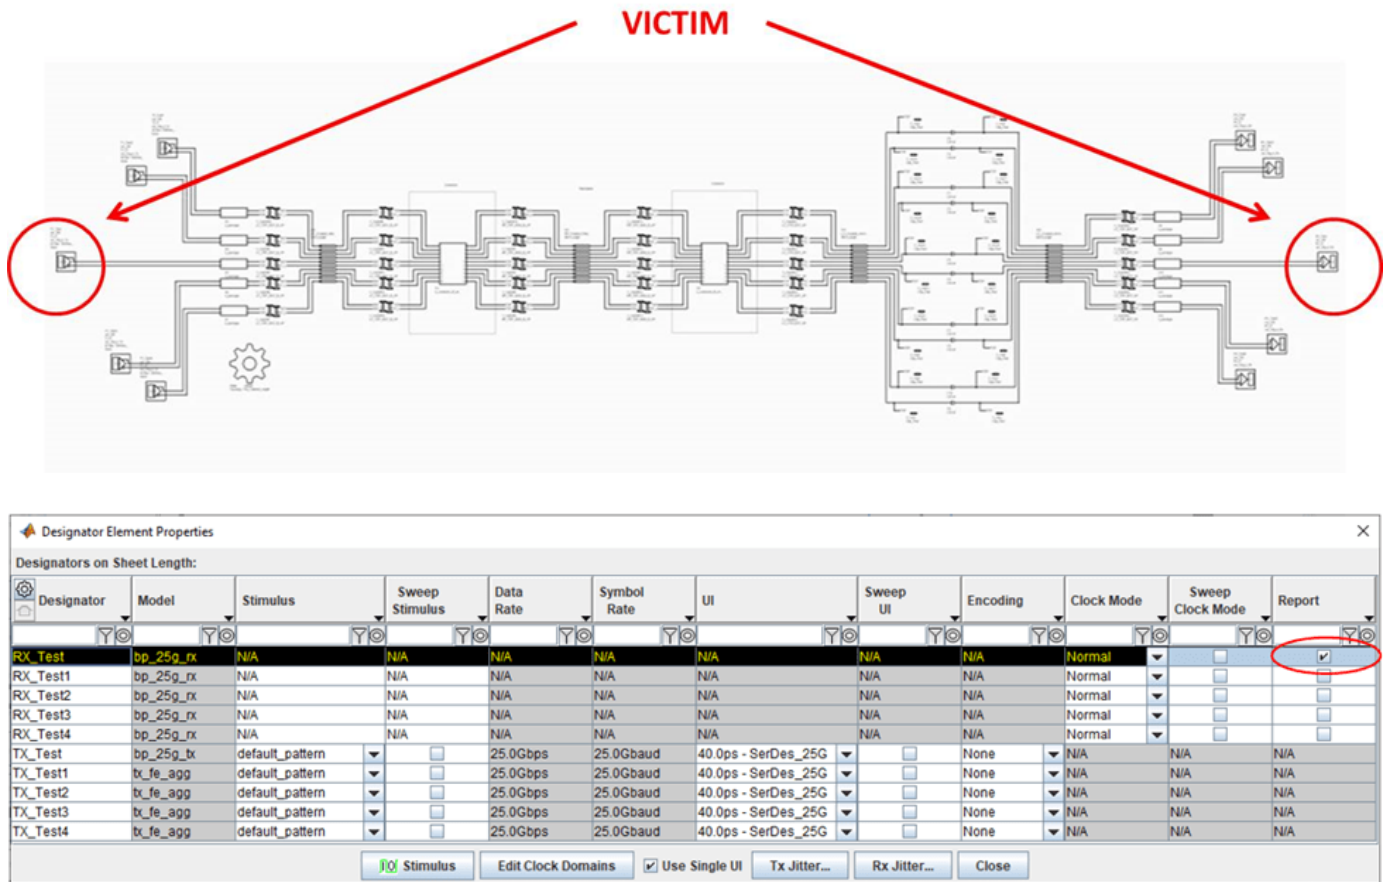


Figure 2: Selecting Victim Channel (Designator Element Properties Window)

### Step2: Set Simulation Parameters

It is important that the user set the appropriate simulation parameters in Serial Link Designer prior to running simulations. The extracted s-parameter models for use in COM must have the necessary bandwidth and frequency spacing to get an accurate representation. These parameters are based on the characteristic delay and the channel bit rate. The parameters affected are “Max Output Frequency” and “S Param Frequency Step”.

The “Max Output Frequency” parameter should be at least two times the fundamental, or Nyquist, frequency based on the channel bit rate (NRZ signaling). For example, if the channel simulations are based on 25.78125Gbps, the Nyquist or fundamental frequency would be approximately 12.89GHz. The output frequency should then be set to at least 25.78125GHz.

The “S Param Frequency Step” setting is based on the through path delay of the channel can be used to calculate the step size. The calculation is based on a settling time of three round trip delays for reflected signal energy.

The simulation parameters are set in the Serial Link Designer “Simulation Parameter” window (See Figure 3). To open the Simulation Parameters window, select the pull-down menu SetupàSimulation Parameters.

Parameter	Type	Restriction	Value	Network Characterization	Statistical	Time Domain	Serial Link Designer	SPICE	User Supplied Waveform
Samples Per Bit	Integer	List	16	X	X	X	X		
Max Channel Delay	Float	Range	20ns	X	X	X	X		
Target BER	Float	CSV Range	1e-12		X	X	X		
Minimum Ignore Bits	Float	Range	10,000UI			X	X		
Max Input Frequency	Float	Auto Range	30GHz	X			X		
Max Output Frequency	Float	Auto Range	30GHz	X			X		
S Param Frequency Step	Float	Auto Range	50MHz	X			X		
Record Start	Float	Range	997,500UI			X	X		
Record Bits	Float	Range	2,500UI			X	X		
Time Domain Stop	Float	Range	1,000,000UI			X	X		
Block Size	Float	Range	1,024	X	X	X	X		
Output Clock Ticks	String	List	No				X		
STATify	String	List	None			X	X		
Results Storage Control	String	List	All	X	X	X	X		
Time Domain Crosstalk Mode	String	List	Semi_Analytic			X	X		
SPICE Rise Time	Float	Range	10ps	X		X		X	
SPICE Sample Interval	Float	Range	10ps	X		X		X	
SPICE Buffer Models	String	List	IBIS/SPICE	X		X		X	
SPICE Ignore Bits	Float	Range	0UI	X				X	
SPICE Step Stop	Float	Range	50UI	X				X	
SPICE Time Domain Stop	Float	Range	500UI			X		X	
Include IBIS Package	String	List	Yes	X			X		
Conductor Roughness	Float	Range	0.15	X	X	X	X		
NC/TD Simulation Mode	String	List	Prefer_Native/Native	X		X	X	X	
Tx Spectral Table	String	Search Path				X	X		X
Rx Spectral Table	String	Search Path				X	X		X
Spectral Analysis Resolution BW	Float	Range	100kHz			X	X		X
Clock Analysis	String	List	No				X		

Set By Sheet

Figure 3: Simulation Parameters

### Step 3: Simulate the Schematic Sheet

The schematic sheet, or sheets, must be simulated so that Serial Link Designer can generate the necessary s-parameter models for COM. Only network analysis has to be run to create the models, but statistical and time domain can be run if desired (See Figure 4).

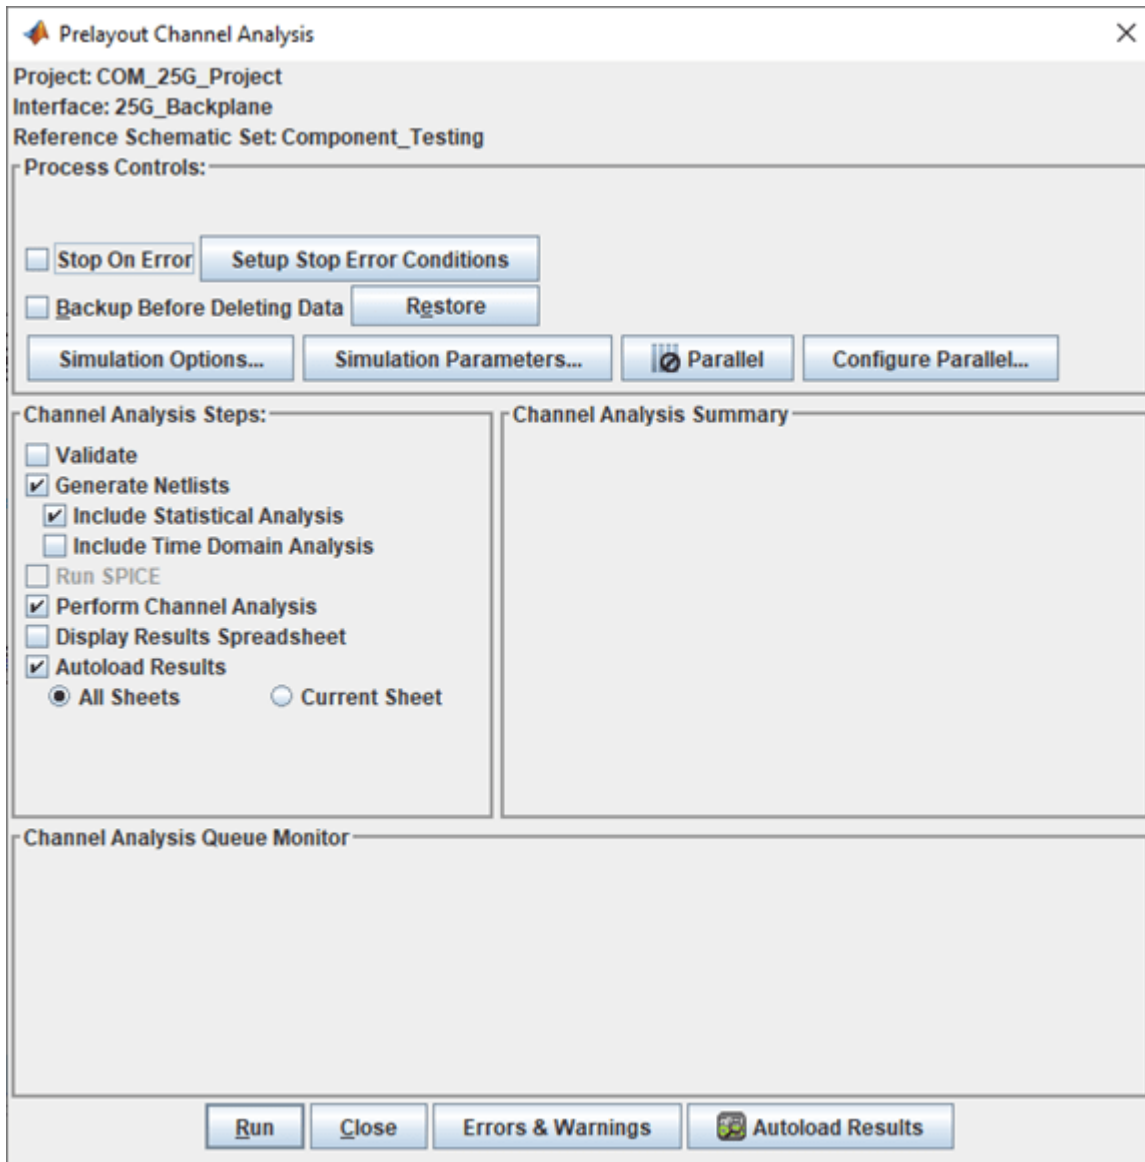


Figure 4: Simulation Dialog Window

**Step 4: Launch COM Interface**

After simulations complete COM can be run directly from the GUI. The COM interface can be accessed under “Tools” à “Run COM Interface” (See Figure 5). The Serial Link Designer interface directly invokes MATLAB and the COM application.

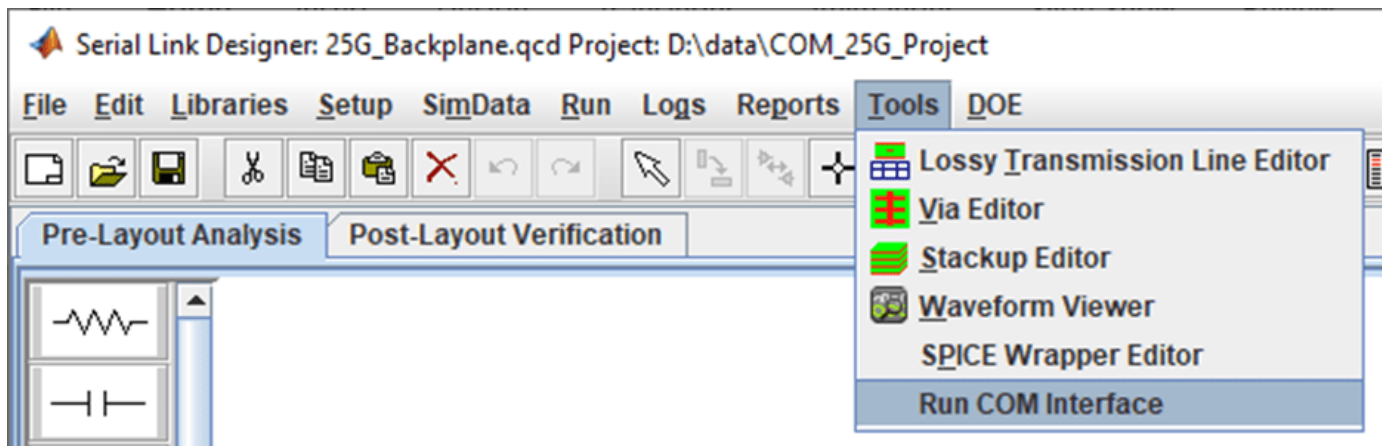


Figure 5: Launch COM Analysis

### Step 5: Setup COM

Once the MATLAB application starts, the user will be asked to select the COM configuration spreadsheet and the COM code (Figure 6). The spreadsheet being referenced is the one containing the COM parameters that was configured in Step 1. For this example the file is located in the folder "si\_lib\COM\" inside your project folder and is in Excel (.xls) format. The spreadsheet can be kept anywhere on a computer or network as long as it is accessible when browsing the system or network. The second file required is the most recent version of the file "com\_ieee8023\_93a.m" in order to run COM analysis with MATLAB.

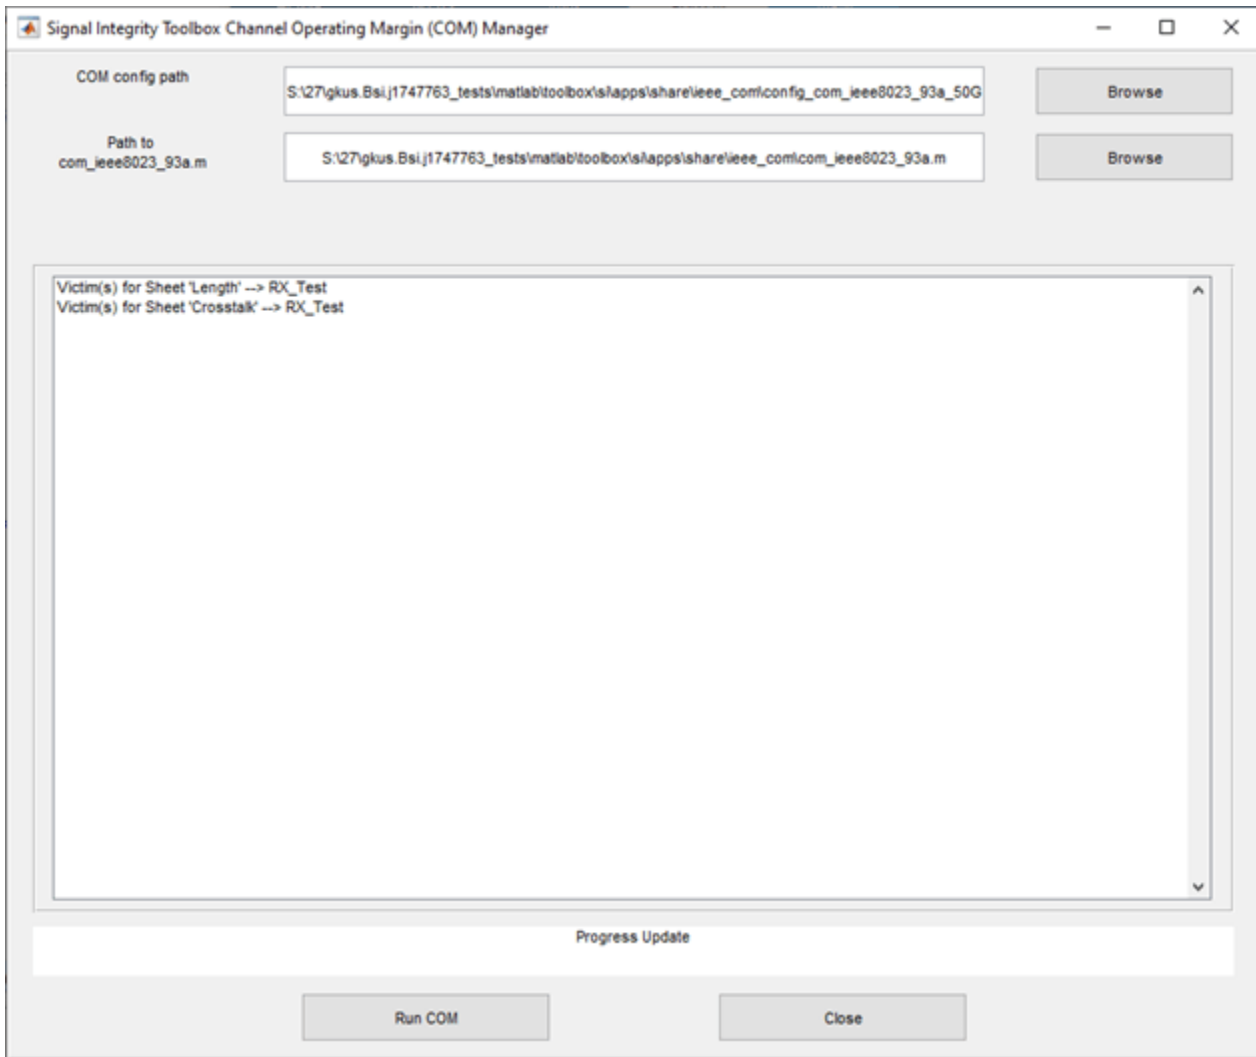


Figure 6: Spreadsheet and Code Selection Window for COM simulation.

### Step 6: Run COM Script

Click the “Run COM” button. As the code runs the status is reported in the MATLAB Command Window.

### Step 7: View COM Results

Once the COM simulation is complete, the Signal Integrity Viewer will open automatically, and the results of COM and the previous simulation results will be loaded. The network, Statistical and Time Domain tabs in the SiViewer all contain the selected results from the COM simulation (See Figure 7).

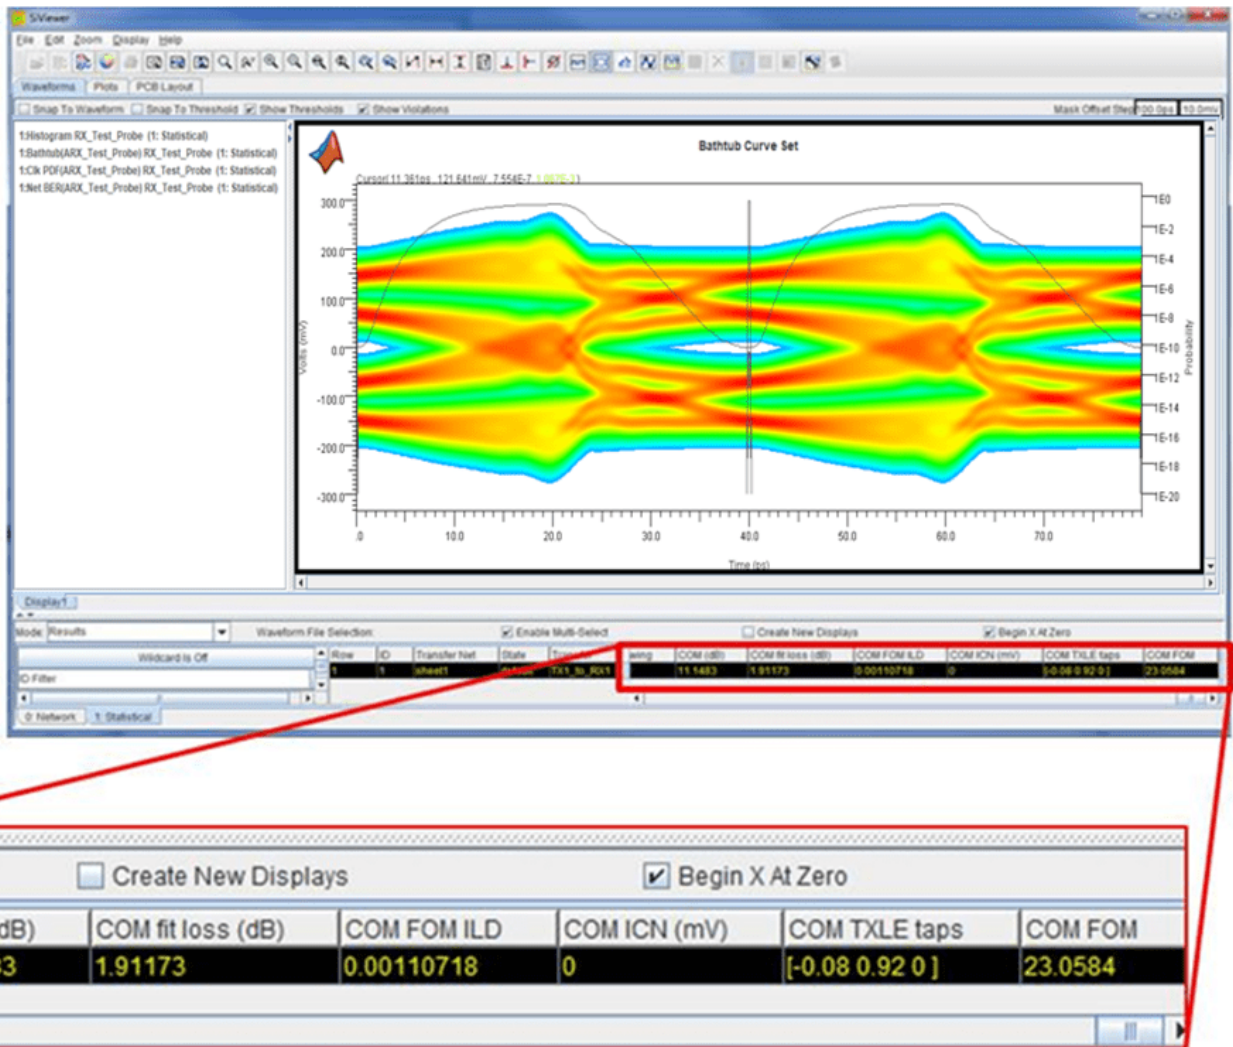


Figure 7: COM Results Loaded in SiViewer Window

### Plotting COM Results

Signal Integrity Viewer offers many capabilities for viewing simulation results. When analyzing a channel design the user may want to look at eye diagrams, loss plots or noise characteristics. Waveform mode allows the user to view data as a function of frequency or time. Some typical results viewed in waveform mode would be the eye diagram of the signal along with its respective bathtub curves and clock PDF (See Figure 8). Another may be an insertion loss versus frequency against a compliance mask as shown in Figure 9.



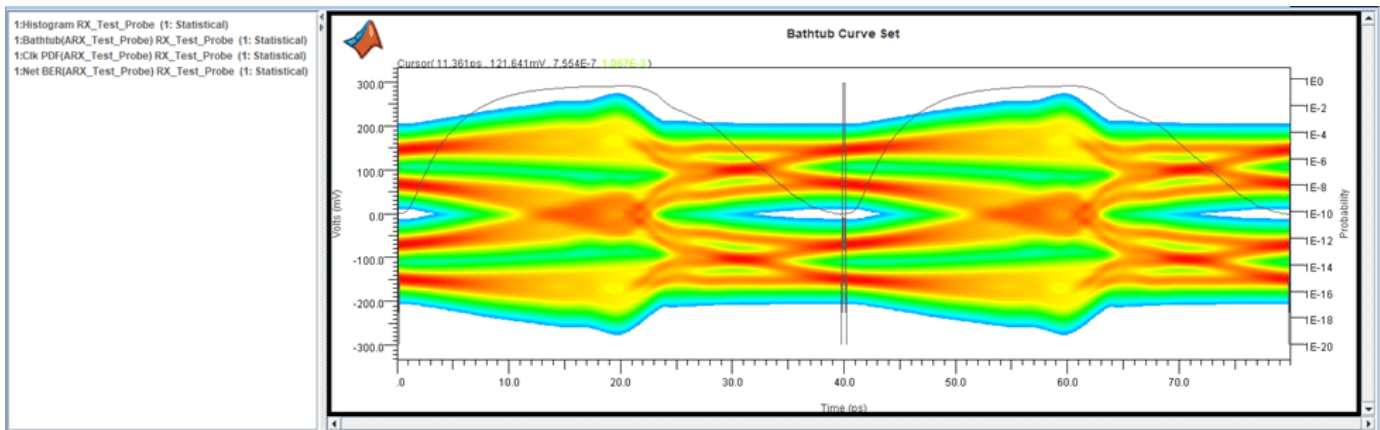


Figure 8: Statistical Eye Diagram with Bathtub Curves and Clock PDF

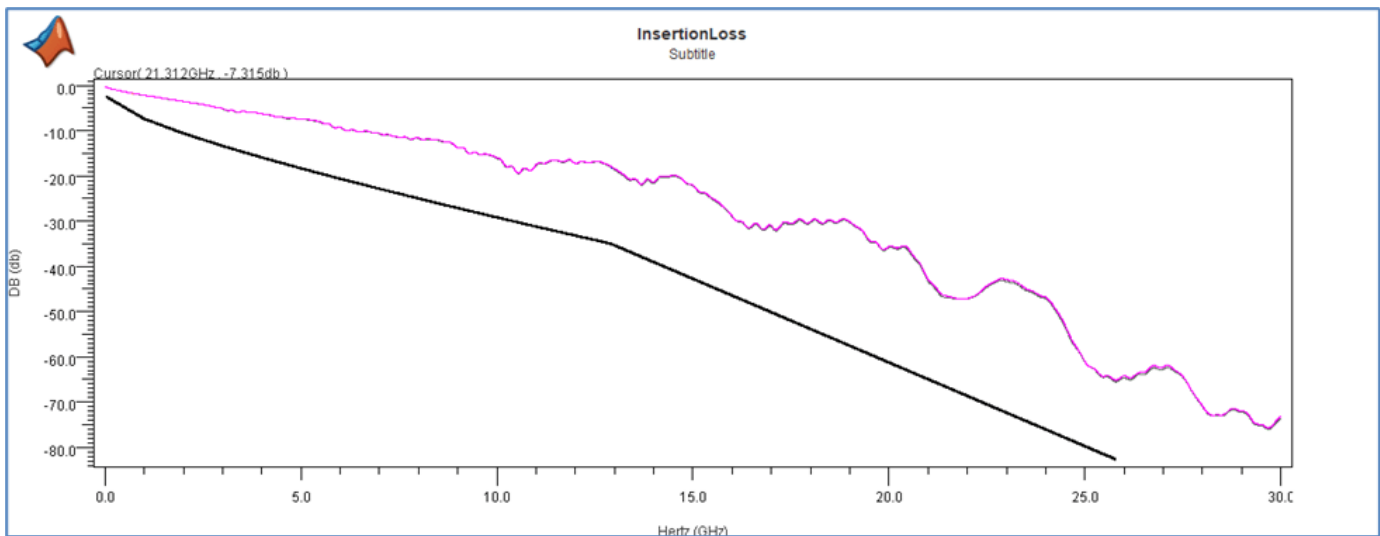


Figure 9: Insertion Loss against a Compliance Mask (Black Line)

The channel COM and other results reported by the COM code are given as single data points. The COM result in particular, as being only a single value, makes it easy to determine the pass/fail behavior. However, if one wants to do investigations into the dependent and independent variables of the simulation results, as they pertain to COM, special plotting capability is needed.

The SiViewer has powerful plotting features when “Plots” mode is selected. This mode allows one to uniquely analyze results and create custom plots of virtually any parameter, variable or result from the simulation. It is an invaluable feature for analyzing large numbers of simulations with many variables. Using “Plots” mode gives the user the power to define multiple variables and plot them against each other on the X or Y axis. Figure 10 shows how to access plots tab in the SiViewer tool. Using this advanced visualization technique one can gain greater insight on the channel or system design especially with very large databases. Identifying trends and finding outliers in the results along with custom plots creation can be the key to a successful design.

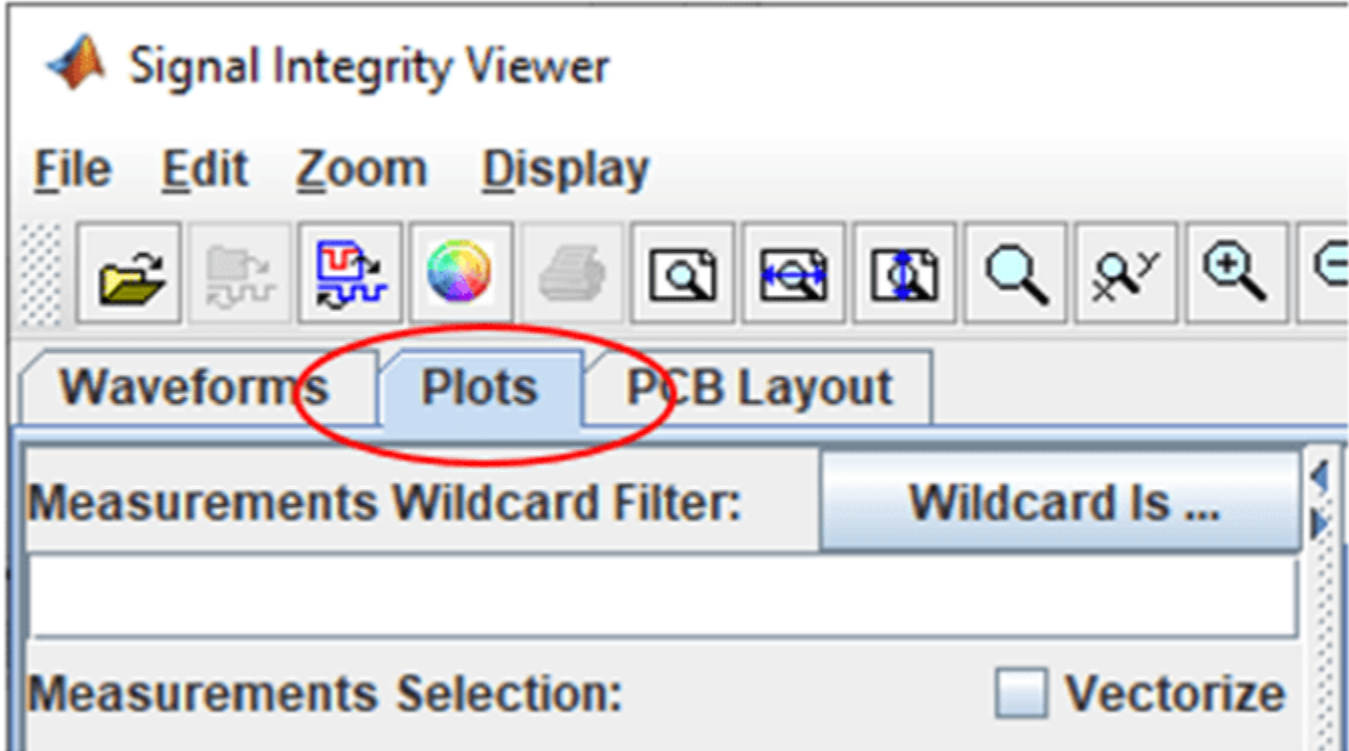


Figure 10: Signal Integrity Viewer Plots Tab

### Investigating COM Results

The example project is set up to demonstrate sweeping backplane trace length and line card aggressor spacing. The first case examined is a sweep of the backplane trace length (“W1” in the solution space) to see how the insertion loss of the channel affects the reported COM value. This is done in the project schematic sheet entitled “Length”. The second case is the variation of the aggressor spacing of two of the PCB traces in the channel (W3 and W7) to observe the effect of coupled noise on the victim channel with respect to the reported COM value. This schematic sheet is named “Crosstalk”. Once Serial Link Designer and COM simulations had finished, the reported COM and statistical BER were compared. The results show an interesting relationship.

As a side note, part of the COM calculation is the determination of optimal equalization settings for the TX and RX with respect to the channel. COM outputs the tap values and from this representative settings were used TX in the statistical simulations. The RX AMI model used in the simulation has an auto adapt feature for both DFE and CTLE. This feature was used in lieu of extracting fixed tap settings from the COM RX adaptation.

Figure 11 is a plot of COM versus the backplane length. In the plot it can be seen that as backplane length (W1) is increased from 8 inches to 20 inches (X-Axis), the COM value decreases from approximately 3.95dB to approximately 2.8dB. The COM 802.3bj compliance requirement for a 100GBASE-KR4 application is 3dB which is marked by the horizontal line on the plot. The data shows that a backplane length up to approximately 18 inches would meet the compliance requirement for COM assuming all other variables in the channel remained constant.

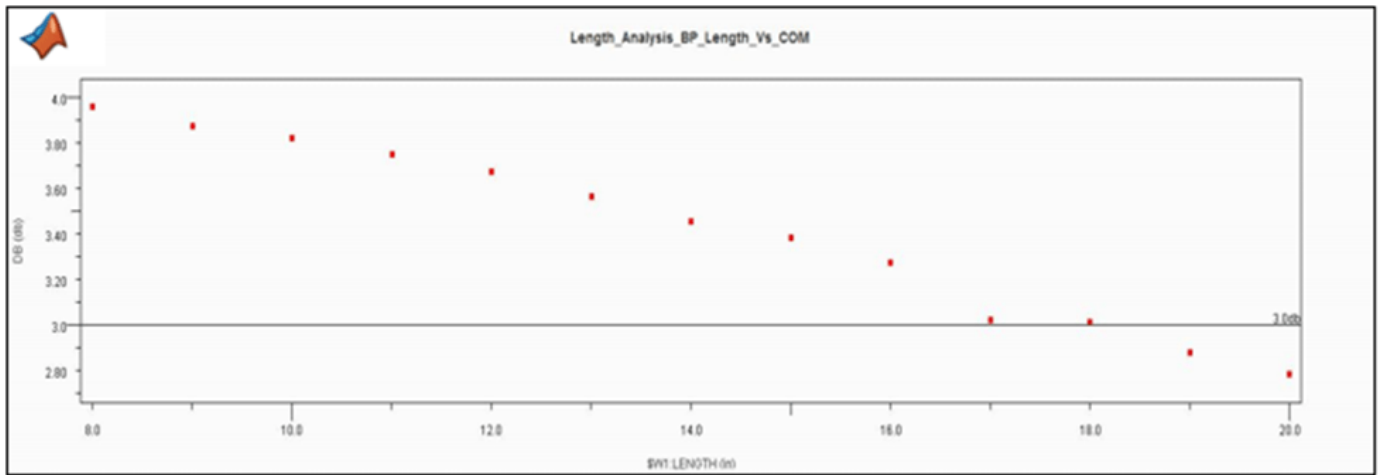


Figure 11: COM versus Channel Insertion Loss

The statistical BER reported by Serial Link Designer for the sweep of backplane length is shown in Figure 12. The BER limit of  $1E-12$  is marked horizontally on the plot. This plot reveals that backplane lengths up to 15 inches would meet the BER requirement. The plot also reveals some possible resonances in the channel that affect the BER between 8 inches and 12 inches where the BER actually goes down as the length is increased. This behavior does not exhibit itself in the COM values reported in Figure 11.

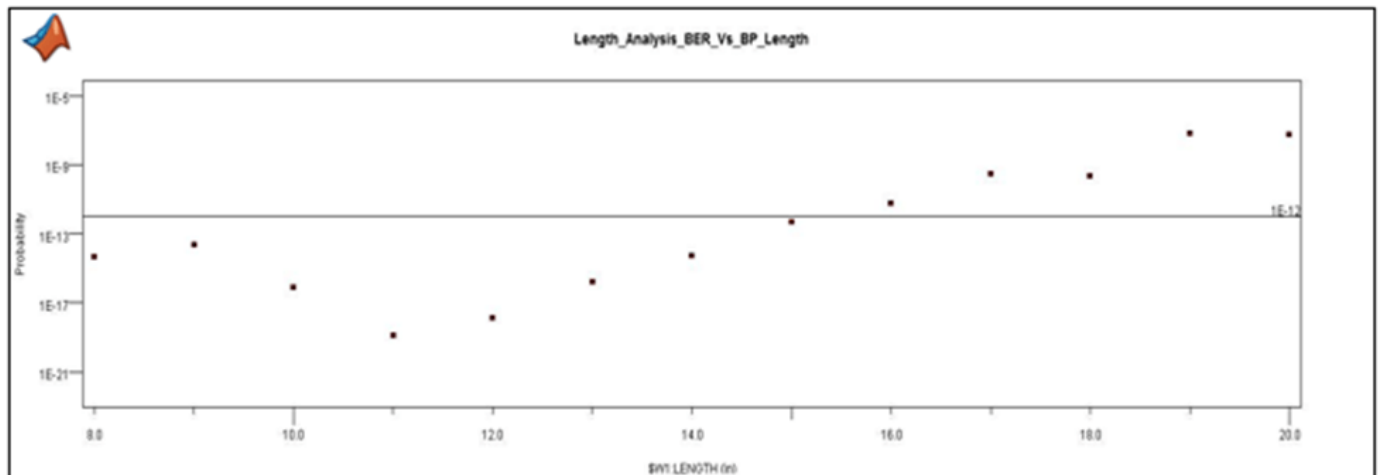


Figure 12: BER versus Backplane Length

Figure 13 is a comparison of BER and COM for each case. An interesting observation is that the BER limit is reached at COM values between 3.4dB and 3.3dB. One possibility for this would be that the TX and RX equalization of the IBIS AMI models in the simulation could be better optimized. Another possibility is accounting for the receiver sensitivity and calculating a BER based on different eye contour requirements.

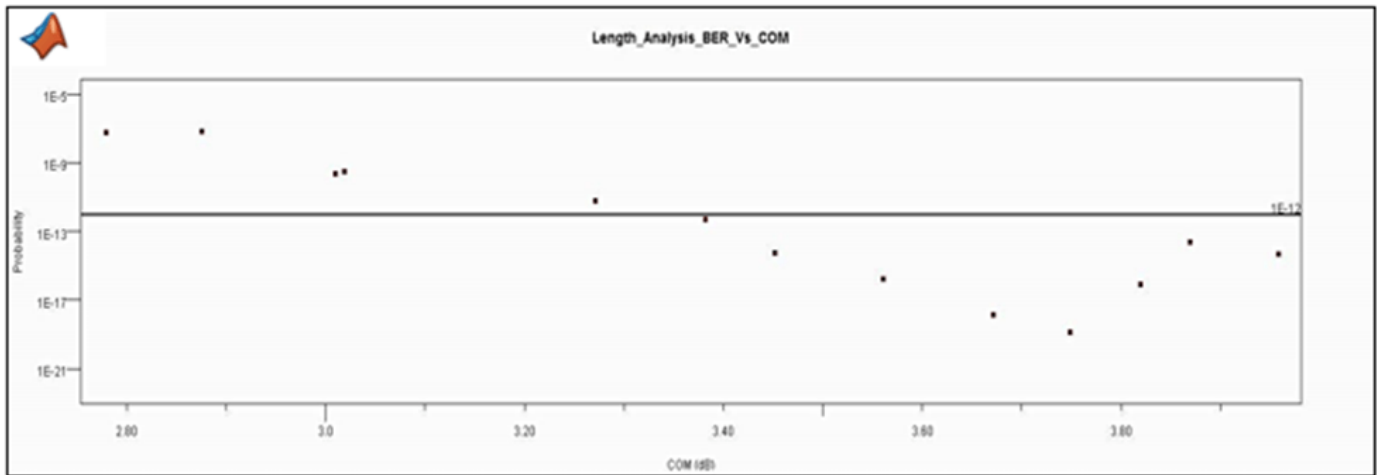


Figure 13: BER versus COM

Figure 14 is a plot of COM versus the aggressor spacing of the trace on either side of the AC coupling capacitors (W3 and W7 on the schematic sheet). The spacing between the victim and each of the aggressor channels was varied from 20mil to 40mil in 5mil increments and is plotted on the X-axis. The horizontal marker represents the COM limit of 3db. The data shows that aggressor spacing of 30mil and greater in the solution space meet the COM limit. Following the trend one could extrapolate that 26-27mil would probably be right at the 3dB line.

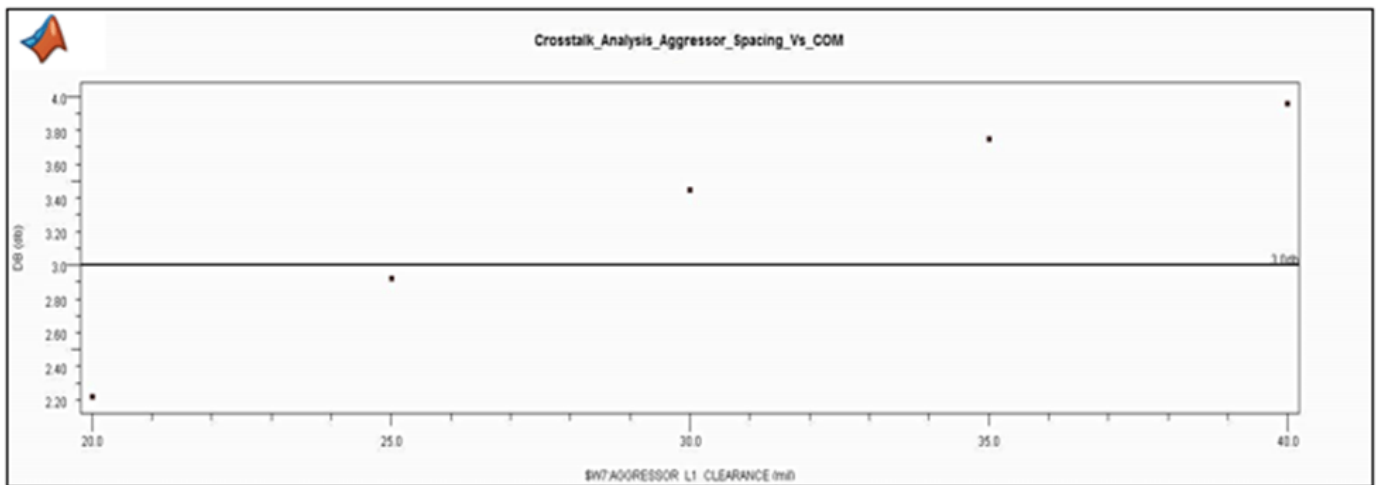


Figure 14: COM versus Aggressor Spacing (Line represents COM limit, above the line passes)

Looking at statistical BER versus the aggressor spacing (Figure 15) one can see a very similar trend to Figure 14 where aggressor spacing above 30mil meet the BER requirement of 1E-12. Although the overall results agree the 30mil data point is a slight outlier from the trend. A straight line extrapolation would reveal that 30mil spacing would not meet the target BER.

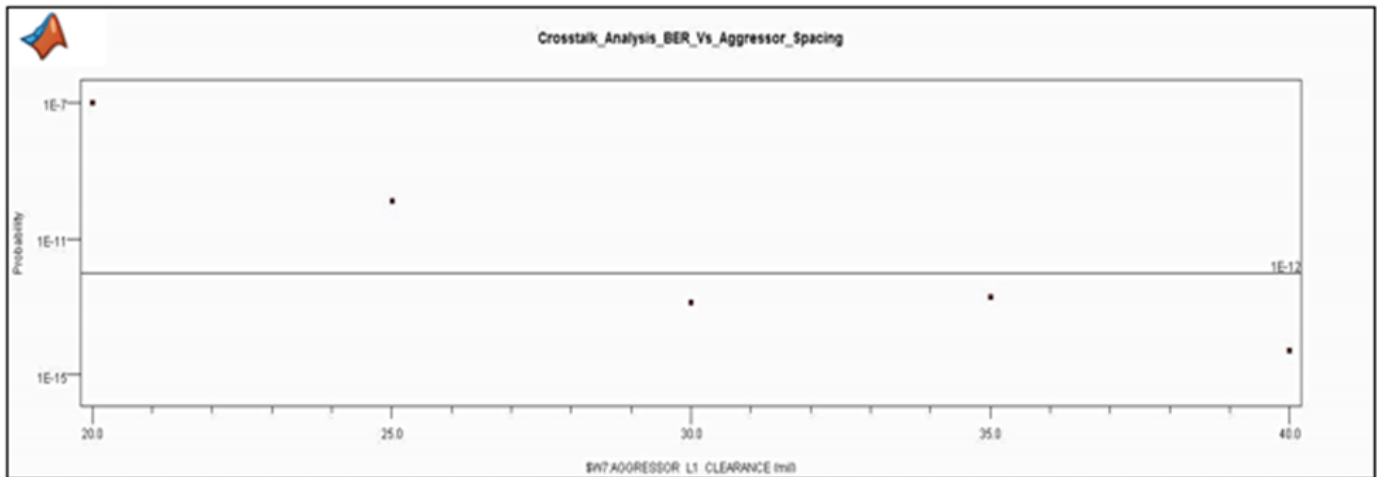


Figure 15: Channel BER versus Aggressor Spacing (Line represents BER limit, below the line passes)

Lastly, Figure 16 shows BER versus COM for the aggressor spacing variation of W3 and W7. The data is plotted from left (40mil spacing) to right (20mil spacing). The 1E-12 BER limit is marked horizontally and any result below the horizontal marker would meet the requirement. The plot shows that COM and statistical BER agree, however COM results below 3.3dB would not appear to meet the target BER. This is consistent with the findings of the backplane length variation.

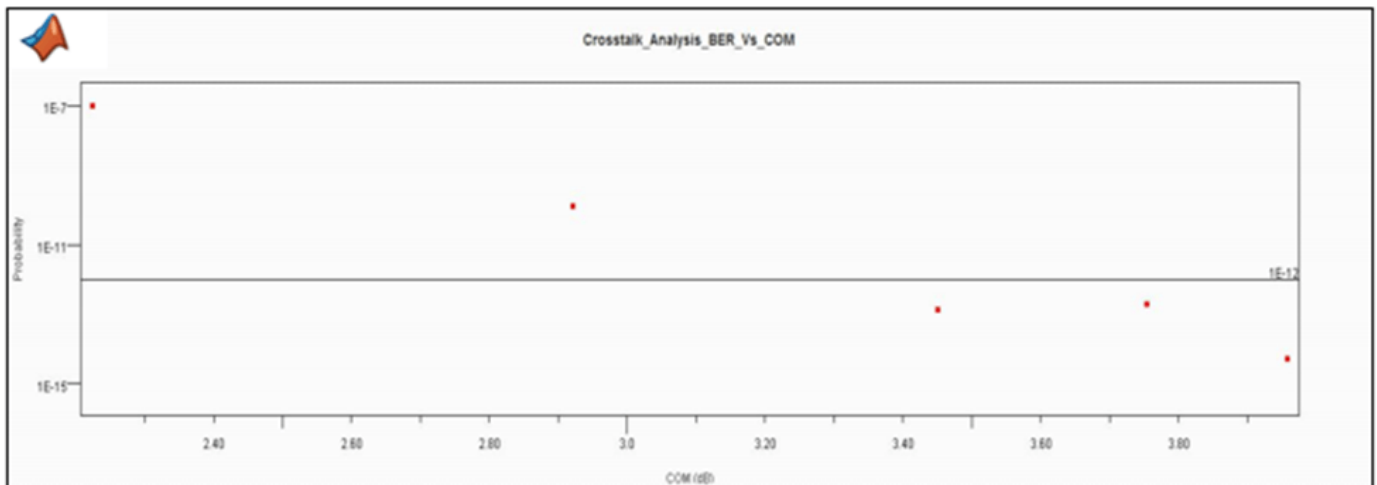


Figure 16: Channel BER vs. COM (Horizontal line: BER 1E-12, Vertical line: COM 3dB)

COM returns many other metrics which can be very useful when evaluating performance or diagnosing a problem with the channel design. Going into further detail of these is beyond the scope of this document. So the reader is encouraged to read through the 802.3bj specification and the documentation that is provided with the COM code. These documents show how COM results are calculated and reported which users can utilize those which may be helpful in the design or debug of their channel.

## Summary

This example provides the information necessary to use the IEEE 802.3 COM application from within the Serial Link Designer App. This document suggests that although a channel meets COM it must

still be simulated to determine if the TX and RX can provide enough equalization to meet the target BER. Meeting COM is essential for various IEEE 802.3 and OIF CEI standards compliance and can also provide useful metrics when incorporated in a channel design methodology.

### References:

- IEEE Standard for Ethernet: Amendment 2: Physical Layer Specifications and Management Parameters for 100 Gb/s Operation Over Backplanes and Copper Cables.
- 802.3bj Specification: 802.3bj\_2014.pdf
- COM Quick Guide for April 2014: R. Mellitz (Intel Corp.), Adeo Ran (Intel Corp.)
- mellitz\_3bj\_01\_0414.pdf
- COM Configuration Documentation: config\_com\_ieee8023\_93a\_doc.pdf

### See Also

### More About

- “Channel Operating Margin (COM)” on page 13-11

# Crosstalk Analysis with Serial Link Designer

This example demonstrates the use of **Serial Link Designer** in the Signal Integrity Toolbox™ in MATLAB® to set up and analyze pre-layout crosstalk. The example includes a kit which covers the methodology and analysis to determine design margins with regards to coupled noise.

Description of first code block

```
% openSignalIntegrityKit("sldCrosstalkExample");
```


## Project Setup

Lets start off by going through the schematic and setting up the solution space in the project. This is already done in the example project, but this will be a reference on what has been done to set up the project.


## Schematic Editing

An example channel running at 10Gbps has been created to demonstrate the various methods that can be used in crosstalk analysis with SLD. The example project contains three schematic sheets; a single channel sheet which is uncoupled along with two multi-channel schematic sheets.

The single channel sheet consists of a transmitter driving into 8-inches of stripline trace, then traversing through a via to a top layer where microstrip traces connect AC-coupling caps to the receiver pins.

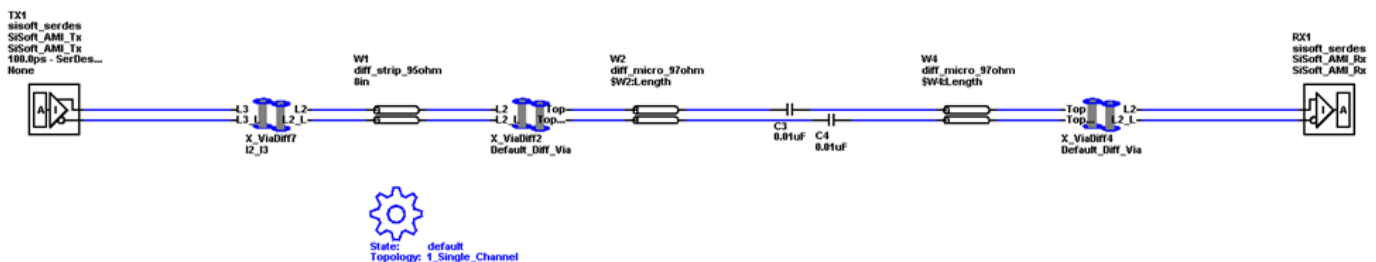


The multi-channel sheets have the same topology with the exception that there is a victim channel with aggressor channels on either side.

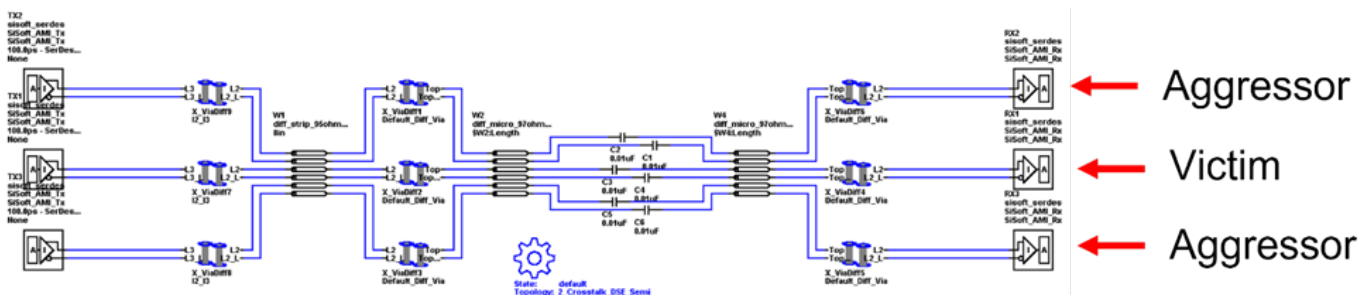

To simplify reporting of results and minimize data one can choose to only report the results for the victim channel receiver “RX1”. This is done by double-clicking on any of the designators on the sheet

which opens the “Designator Element Properties” dialog. The last column contains a checkbox for each receiver on the schematic.

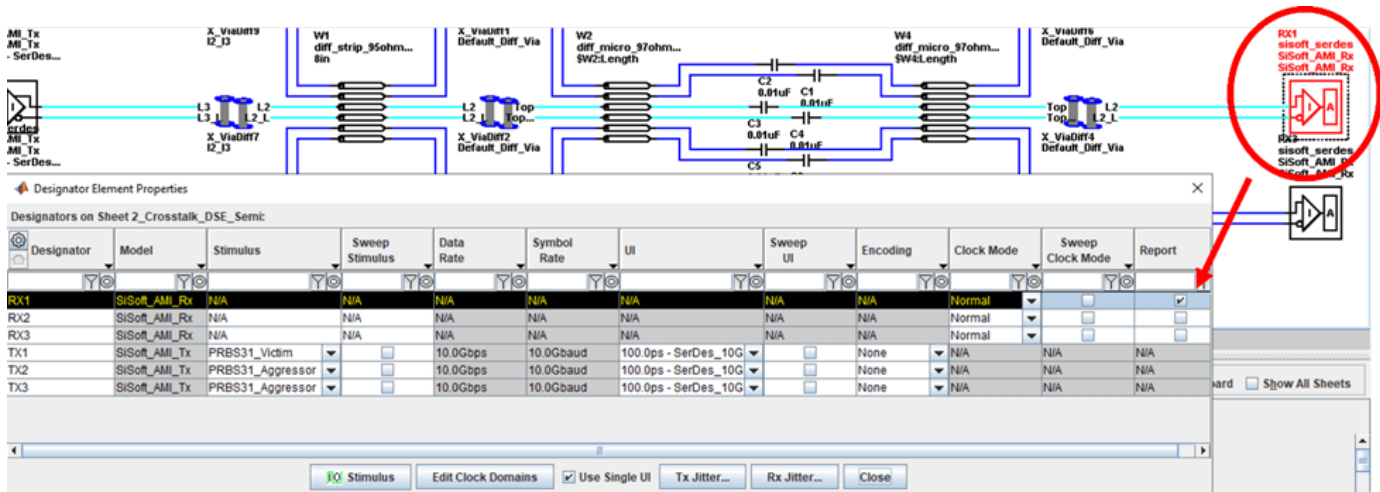

To set up the microstrip lines one can double click on any of the transmission lines on the schematic to open the “Lossy Transmission Line Properties” dialog. Here one can mark the check boxes to sweep the length of the lines.

For the multi-channel schematics, both the length and clearance of the microstrip lines will be varied. From the “Lossy Transmission Line Properties” dialog select the “Set Model Variables” button to open the “Lossy Transmission Line Model Variables” dialog. Here one can check to sweep the aggressor clearance between the microstrip traces (W2 and W4 only).




The screenshot displays the 'Lossy Transmission Line Element Properties' dialog box and the 'Lossy Transmission Line Model Variables' dialog box. The 'Lossy Transmission Line Element Properties' dialog shows a table of transmission line models with columns for Designator, Model, Sweep Model, Length, Sweep Length, Skew, and Sweep Skew. The 'Sweep Length' column for W2 and W4 is highlighted with a red box. The 'Set Model Variables' button is also circled in red.

The 'Lossy Transmission Line Model Variables' dialog shows the 'Transmission Line Model' set to 'C:\crosstalk\project\lib\spice\wlines\diff\_micro\_97ohm\_2x.mod (Library Model)'. The 'Model Type' is set to 'Microstrip'. The 'Etch Shape' is set to 'Rectangle'. The 'Aggressor L1 Clearance (mils)' and 'Aggressor L2 Clearance (mils)' are both set to 'Sweep', which is circled in red.

The 'Variation' table at the bottom shows the following values:

Variation Group	Value 1	Value 2	Value 3	Value 4
3.Tap	0			
ione>	1.0			
ione>	0			
ione>	1			
pac	10.0mil	15.0mil	20.0mil	
pac	10.0mil	15.0mil	20.0mil	
pn	0.75in	1.0in	1.25in	1.5in
pac	10.0mil	15.0mil	20.0mil	

After closing out of the dialog boxes, one can see the solution space area is populated with both the length and aggressor clearance variables. In this project the length is varied from 0.75-inch to 1.5-inches with 0.25-inch increments. The aggressor clearance is from 10mils to 20mils with 5mil increments.

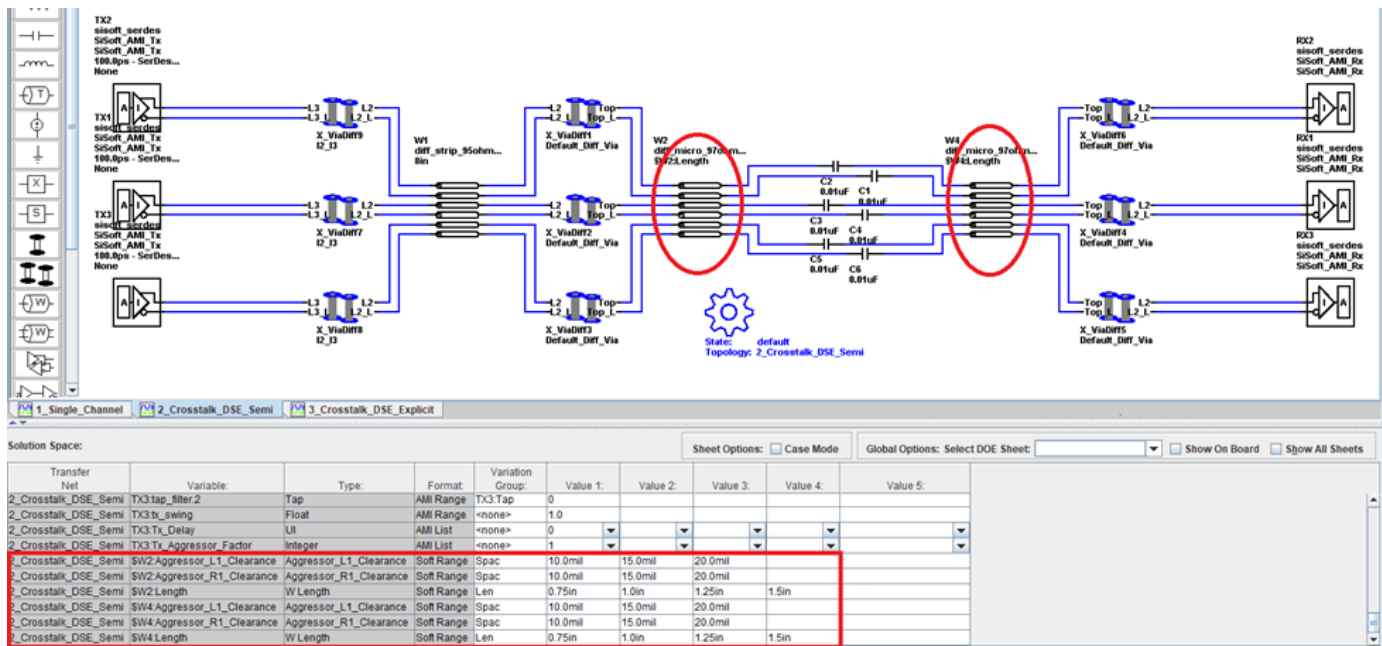

### Variation Groups

All these variables and combinations in the solution space result in 1296 simulations for each of the multi-channel sheets. Blindly sweeping a number of variables can make things difficult with respect to long simulation times and possibly large data sets containing results with unimportant or non-valid variable combinations. It is best to keep the analysis as focused as possible. One way to reduce unnecessary simulations for unimportant cases or to reduce simulation time is using variation groups.

The “Variation Group” column lets you control the combinations of variable values that will be simulated. By associating two or more rows with the same variation group name, one can lock those variations to sweep together. In the figure below there are two variation groups employed in the solution space, one for length (Len) and one for clearance (Spac). Employing these variation groups reduces the simulation cases from 1296 to 12 for each of the multi-channel sheets (4 lengths X 3 clearances). Since the single channel does not have any aggressors, it uses the “Len” variation group which results in 4 simulation cases. So the total simulation count for all sheets in this project is (12 x 12 x 4 = 28).

Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:	Value 4:	Value 5:
Tap	AMI Range	TX3:Tap	0				
Float	AMI Range	<none>	1.0				
UI	AMI List	<none>	0				
Integer	AMI List	<none>	1				
Aggressor_L1_Clearance	Soft Range	Spac	10.0mil	15.0mil	20.0mil		
Aggressor_R1_Clearance	Soft Range	Spac	10.0mil	15.0mil	20.0mil		
W Length	Soft Range	Len	0.75in	1.0in	1.25in	1.5in	
Aggressor_L1_Clearance	Soft Range	Spac	10.0mil	15.0mil	20.0mil		
Aggressor_R1_Clearance	Soft Range	Spac	10.0mil	15.0mil	20.0mil		
W Length	Soft Range	Len	0.75in	1.0in	1.25in	1.5in	


Simulation Count: 28

### Setup Rules Files


The first part of this crosstalk analysis example will show how SLD can be used to evaluate industry standard crosstalk metrics such as Integrated Crosstalk Noise (ICN), Power-Sum Xtalk (PSXT) and Integrated Crosstalk Ratio (ICR). To do this we are going to use “Rules Files”.

If unfamiliar with rules files, please see Mention the example creating masks in SLD.

The figure below shows the Transfer Net Properties dialog. The Rules File column lets the user choose a rules file from the pull-down menu to apply to the transfer net. The “Crosstalk” rules file is chosen as it contains these industry standard metrics (IDN, PSXT and ICR) along with an eye mask that will be referred to later.

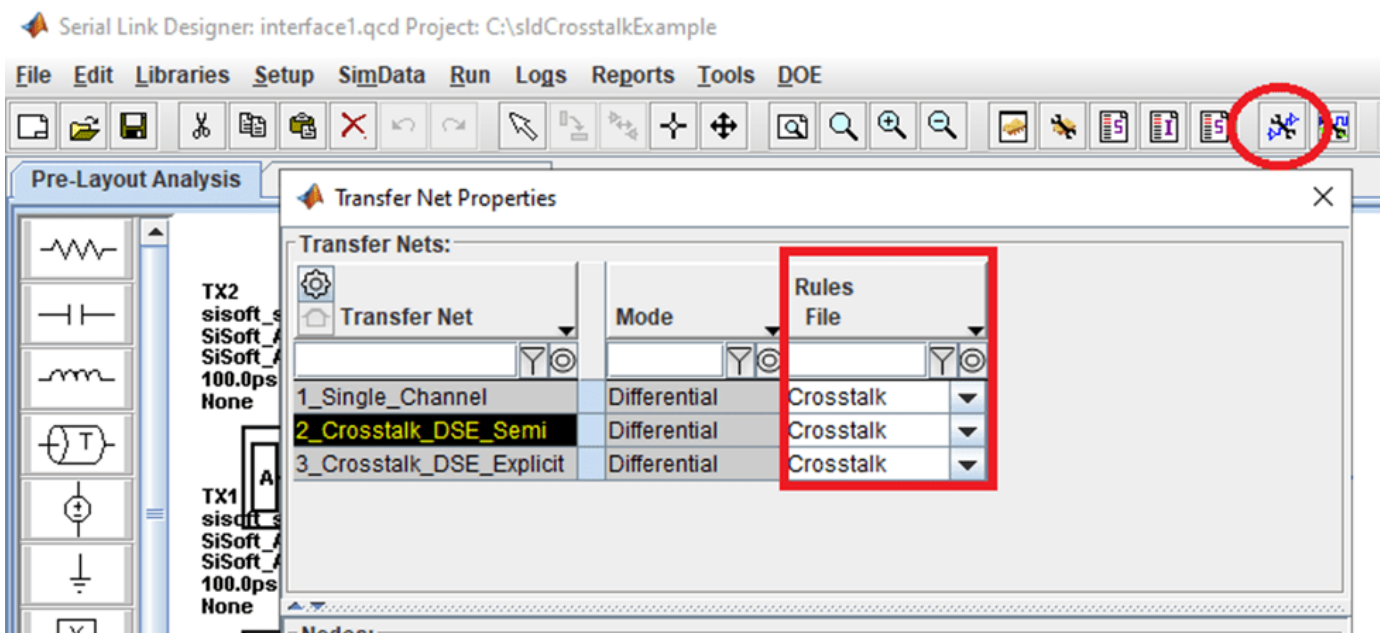

The figure below shows the location of the rules folder in an SLD project and the four rules files currently in the folder.

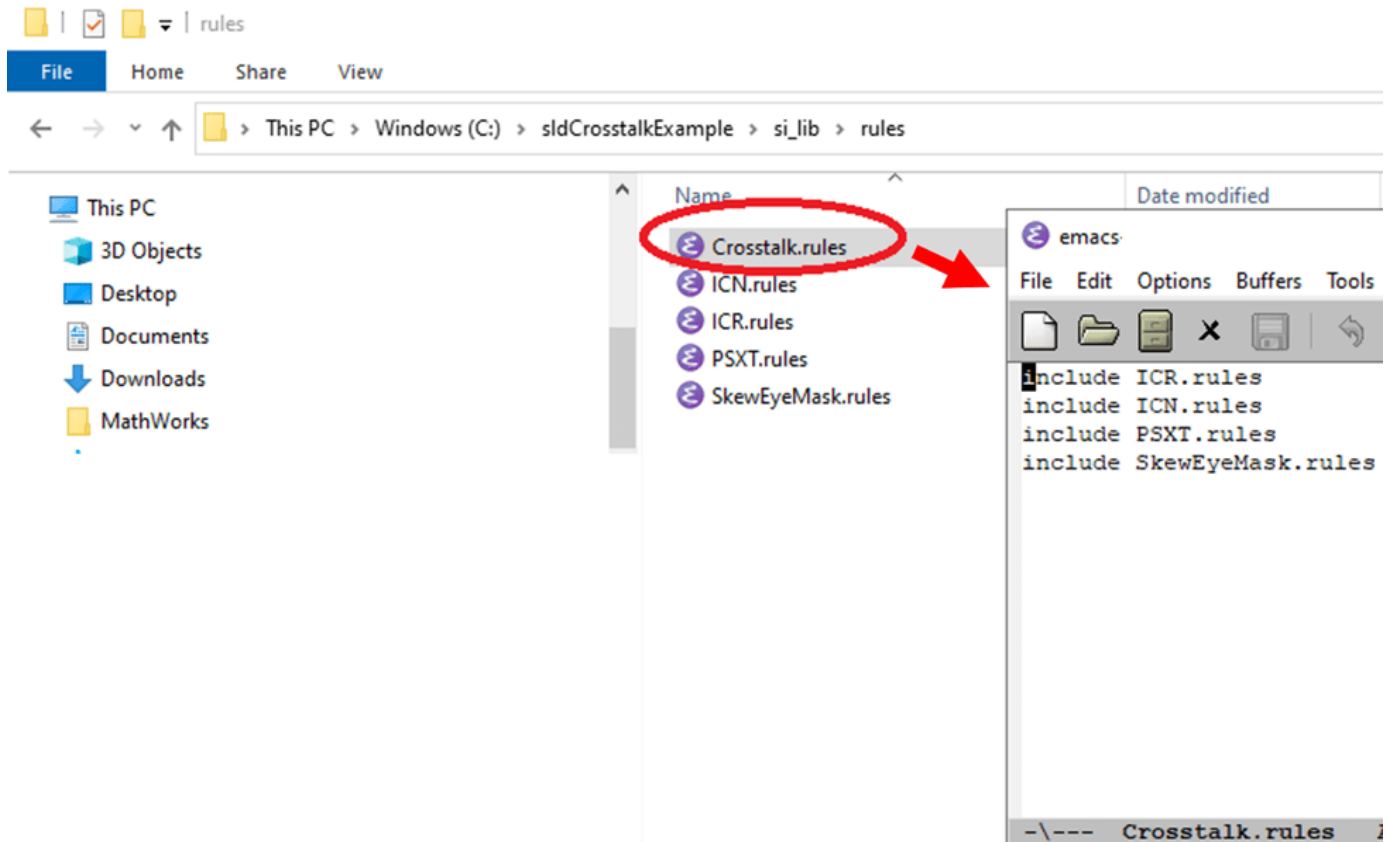

### Setup Stimuli

Since we will be looking at time domain results, it is important to select stimulus patterns for the victim and aggressor channels. Double-click on any of the designators on a sheet. From the Designator Element Properties dialog, one can select a stimulus for each Tx using the pull-down menu, or select the "IO Stimulus" button to edit or create new stimuli. For this project a PRBS31 pattern is selected for the victim channel and an PRBS31 for the aggressors. These are specifically set up for crosstalk analysis.

Designator Element Properties

Designators on Sheet 2\_Crosstalk\_DSE\_Semi:

Designator	Model	Stimulus	Sweep Stimulus	Data Rate	Symbol Rate	UI	Sweep UI	Encoding	Clock Mode	Sweep Clock Mode	Report
RX1	SiSoft_AMI_Rx	N/A	N/A	N/A	N/A	N/A	N/A	N/A	Normal	<input type="checkbox"/>	<input checked="" type="checkbox"/>
RX2	SiSoft_AMI_Rx	N/A	N/A	N/A	N/A	N/A	N/A	N/A	Normal	<input type="checkbox"/>	<input type="checkbox"/>
RX3	SiSoft_AMI_Rx	N/A	N/A	N/A	N/A	N/A	N/A	N/A	Normal	<input type="checkbox"/>	<input type="checkbox"/>
TX1	SiSoft_AMI_Tx	PRBS31_Victim	<input type="checkbox"/>	10.0Gbps	10.0Gbaud	100.0ps - SerDes_10G	<input type="checkbox"/>	None	N/A	N/A	N/A
TX2	SiSoft_AMI_Tx	PRBS31_Aggressor	<input type="checkbox"/>	10.0Gbps	10.0Gbaud	100.0ps - SerDes_10G	<input type="checkbox"/>	None	N/A	N/A	N/A
TX3	SiSoft_AMI_Tx	PRBS31_Aggressor	<input type="checkbox"/>	10.0Gbps	10.0Gbaud	100.0ps - SerDes_10G	<input type="checkbox"/>	None	N/A	N/A	N/A

Stimulus Edit Clock Domains  Use Single UI Tx Jitter... Rx Jitter... Close

Stimuli

Name	Length	Description
default_pattern	Infinity	LFSR, SR_Length=63, Seed=37, Repeat_Forever
clock	40	User, 01, Repeat=19, Repeat_From=1
PRBS7_Victim	127	LFSR, SR_Length=7, Seed=0, Stimulus_Length=127
PRBS7_Aggressor	127	LFSR, SR_Length=7, Seed=63, Stimulus_Length=127
PRBS31_Victim	2147483647	LFSR, SR_Length=31, Seed=346789, Stimulus_Length=2147483647
PRBS31_Aggressor	2147483647	LFSR, SR_Length=31, Seed=1234567, Stimulus_Length=2147483647

New Edit Copy Delete OK Cancel

### Time Domain Crosstalk Mode

The last part of the project set up is to select the time domain crosstalk mode. SLD offers the user two modes for crosstalk in time domain: Semi-Analytic and Explicit. This is set in the Simulation Parameters dialog which is accessed from the main GUI: Setup  $\diamond$  Simulation Parameters. Sheet "2\_Crosstalk\_DSE\_Semi" is set up for semi-analytic crosstalk mode and "3\_Crosstalk\_DSE\_Explicit" is set up for explicit crosstalk mode.

Parameter	Type	Restriction	Value	Network Characterization	Statistical	Time Domain	Serial Link Designer	SPICE
Samples Per Bit	Integer	List	8	X	X	X	X	
Max Channel Delay	Float	Range	20ns	X	X	X	X	
Target BER	Float	CSV Range	1e-12		X	X	X	
Minimum Ignore Bits	Float	Range	10,000UI			X	X	
Max Input Frequency	Float	Auto Range	Auto	X			X	
Max Output Frequency	Float	Auto Range	15GHz	X			X	
S Param Frequency Step	Float	Auto Range	50MHz	X			X	
Record Start	Float	Range	500,000UI			X	X	
Record Bits	Float	Range	2,500UI			X	X	
Time Domain Stop	Float	Range	502,500UI			X	X	
Block Size	Float	Range	1,024	X	X	X	X	
Output Clock Ticks	String	List	No				X	
STATify	String	List	None			X	X	
Results Storage Control	String	List	All	X	X	X	X	
<b>Time Domain Crosstalk Mode</b>	<b>String</b>	<b>List</b>	<b>Semi Analytic</b>			<b>X</b>	<b>X</b>	
SPICE Rise Time	Float	Range	Semi_Analytic	X		X		X
SPICE Sample Interval	Float	Range	Explicit	X		X		X
SPICE Buffer Models	String	List	IBIS/SPICE	X		X		X
SPICE Ignore Bits	Float	Range	0UI	X				X
SPICE Step Stop	Float	Range	50UI	X				X
SPICE Time Domain Stop	Float	Range	500UI			X		X
Include IBIS Package	String	List	Yes	X			X	
Conductor Roughness	Float	Range	0.15	X	X	X	X	
NC/TD Simulation Mode	String	List	Prefer_Native/Native	X		X	X	X
Tx Spectral Table	String	Search Path				X	X	
Rx Spectral Table	String	Search Path				X	X	
Spectral Analysis Resolution BW	Float	Range	100kHz			X	X	
Clock Analysis	String	List	No				X	


Interface: 1\_Single\_Channel 2\_Crosstalk\_DSE\_Semi 3\_Crosstalk\_DSE\_Explicit

Set By Sheet OK Close

Semi-analytic crosstalk estimation is where each channel in the system is simulated in the absence of crosstalk. An eye diagram is accumulated using the recovered clock to set the timing. The probability density function (PDF) of the crosstalk is calculated separately using the SLD convolution engine. The crosstalk PDF is then convolved with the eye diagram and a bathtub curve and the bit error rate estimate are derived. One would use this method to predict the crosstalk effect on the eye to very low probabilities.


Explicit time domain simulation: All channels in the system are simulated simultaneously in the time domain so that the waveform at the receiver decision point is the combined result of the desired signal and the crosstalk aggressors. A bathtub curve is accumulated over the course of the simulation, using the recovered clock to set the timing. One would use this analysis to see the bit-by-bit effect of the crosstalk noise from aggressors to the victim channel.

Now that the project is set up for crosstalk analysis, simulations can be run. Select the simulate icon and set up the dialog as shown.

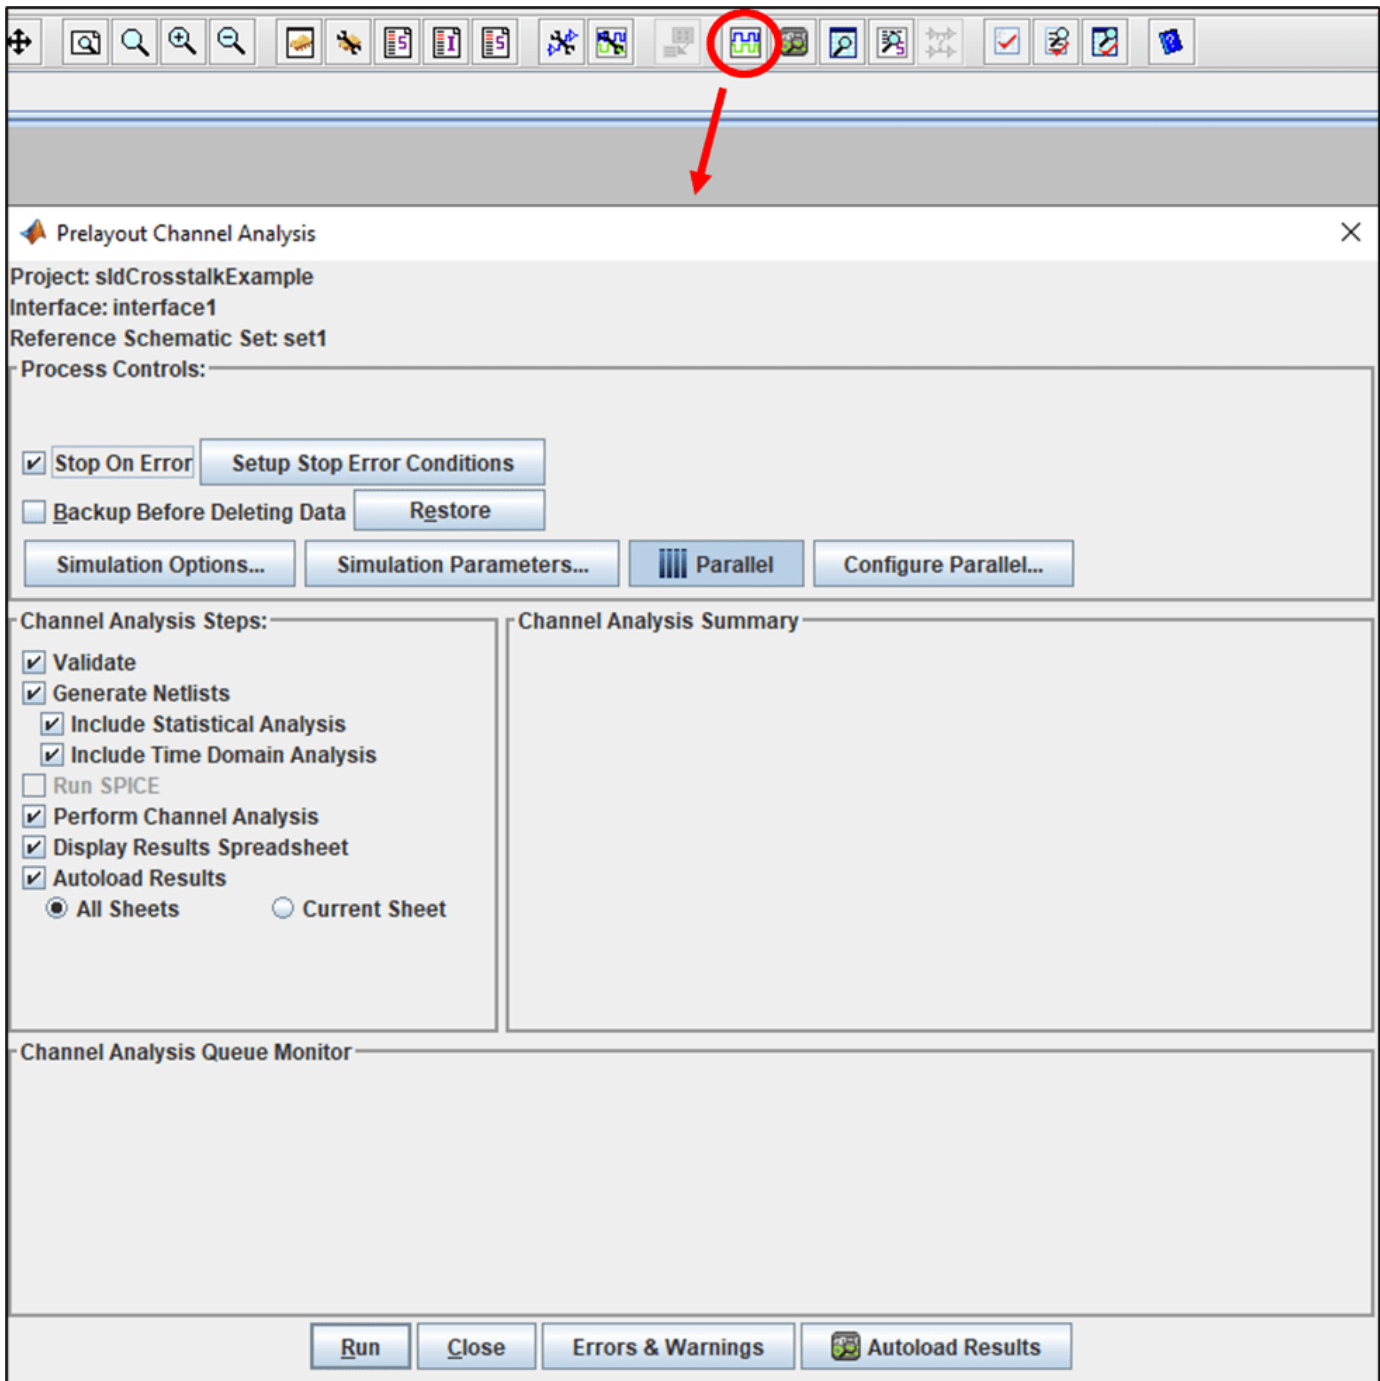

### Simulation Results



The "Channel Analysis" results spreadsheet should be open at this point along with the Signal Integrity Viewer with simulation results loaded. The "Channel Analysis Log" tab of the channel analysis report shown below reveals the reporting for the ICN (Integrated Crosstalk Noise) rule. Here a pass/fail indication can be seen for each simulation result where the ICN rule is applied.

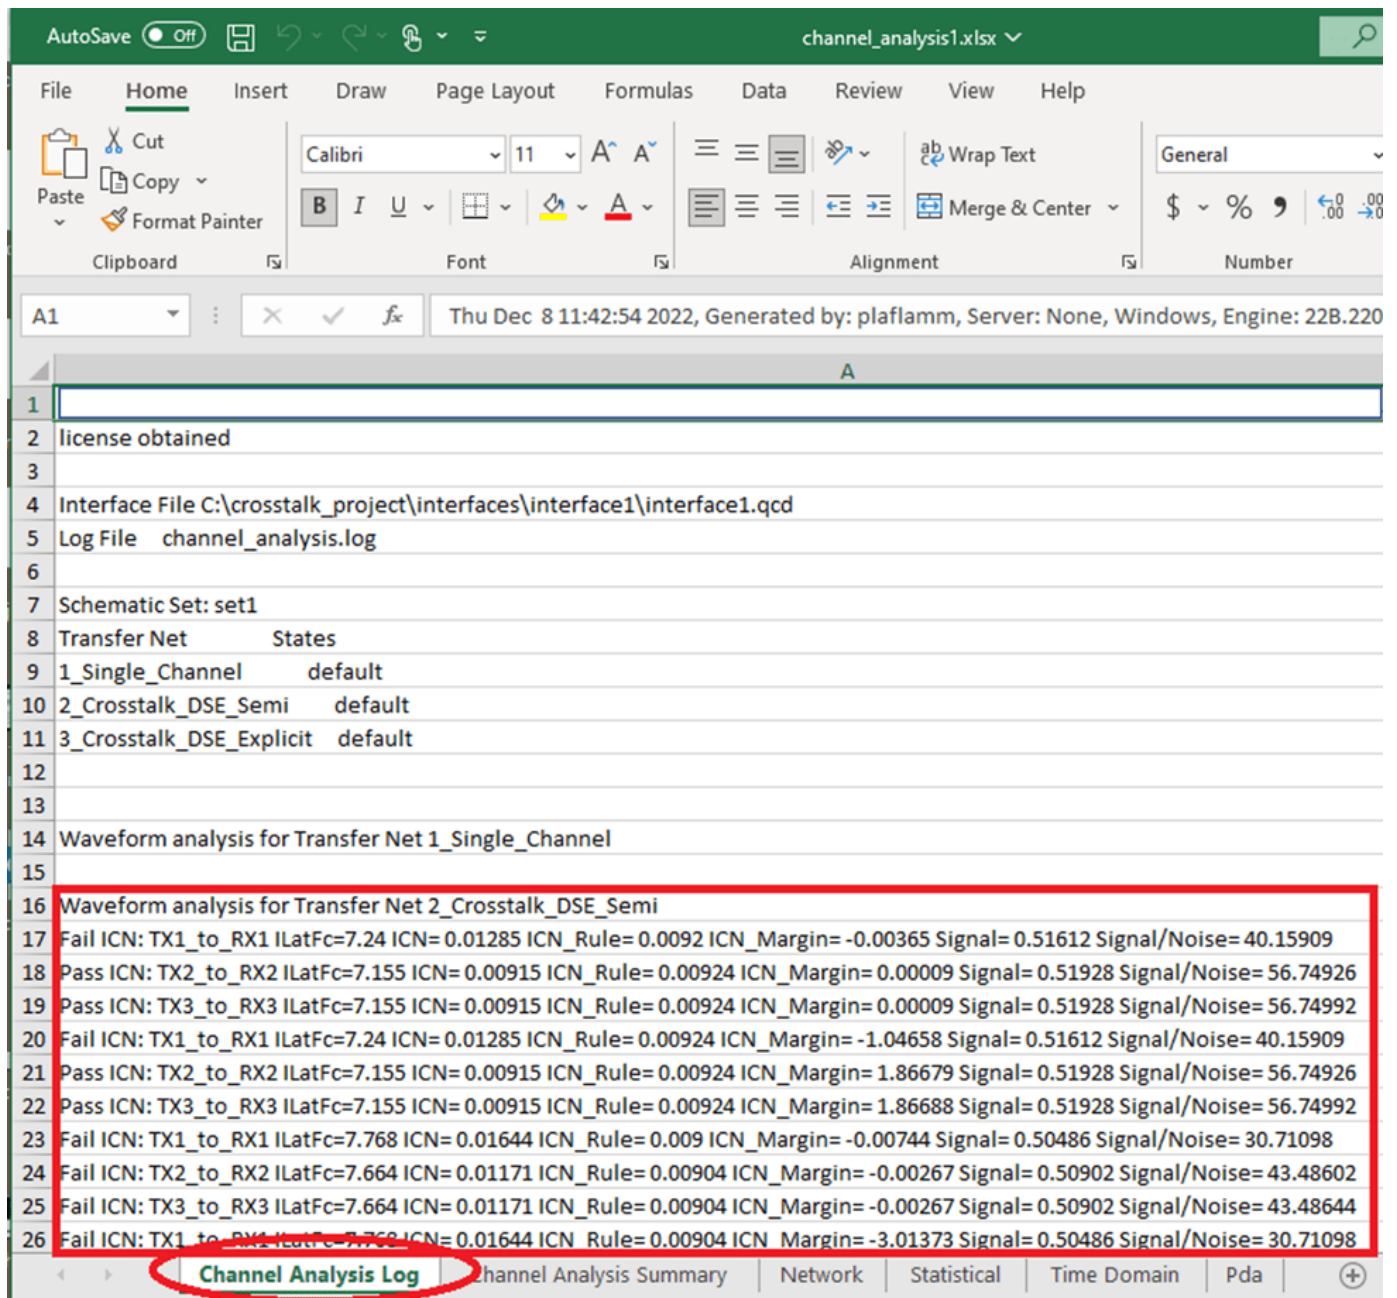

### Signal Integrity Viewer

A configuration file is included in the kit which can be opened from the Signal Integrity Viewer. This configuration will open plots of the various results which will be discussed. One can open the configuration file as shown below, or follow along with the steps presented below to display the results. Configuration files can be saved at any point in a viewer session by selecting the "Save Configuration". They can be relaunched any time in a viewer session in that project.



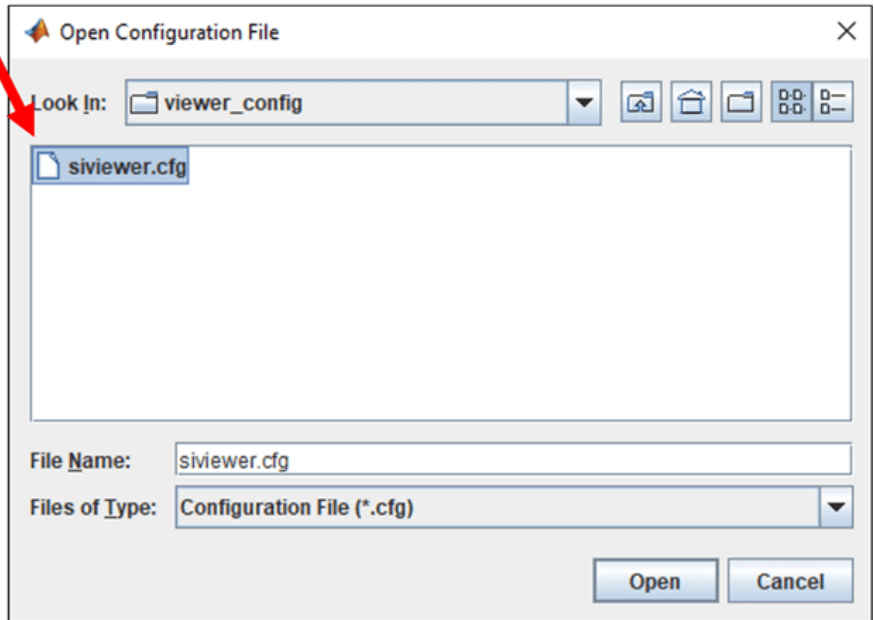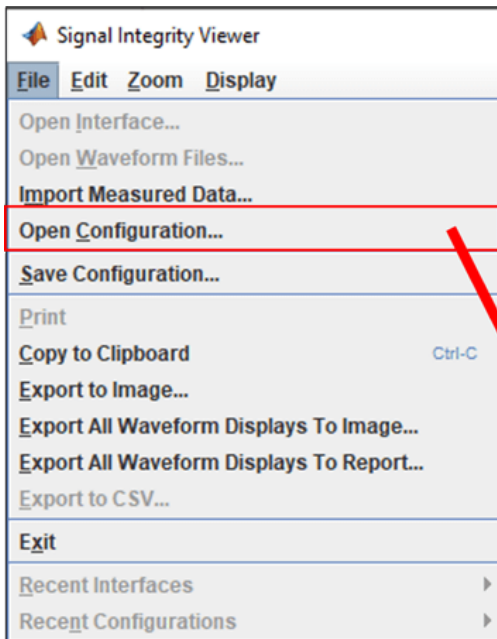


### Network Analysis Results

Select the “Network” tab and view the four columns ICR, ICN, PSXT and unEq Signal/Xtalk.


Row	ID	Transfer Net	State	Transfer	# Errors	# Warnings	ICR (dB)	ICN_OF (V)	PSXT (dB)	UI (ps)	Data Rate (Gbps)	Symbol Rate (Gbaud)	Loss (dB)	UnEq Signal/Xtalk (dB)
1	1	1_Single_Channel	default	TX1_to_RX1	0	0	NoDef	NoDef	NoDef	100	10	10	8.11423	100
2	2	1_Single_Channel	default	TX1_to_RX1	0	0	NoDef	NoDef	NoDef	100	10	10	8.99285	100
3	3	1_Single_Channel	default	TX1_to_RX1	0	0	NoDef	NoDef	NoDef	100	10	10	9.56458	100
4	4	1_Single_Channel	default	TX1_to_RX1	0	0	NoDef	NoDef	NoDef	100	10	10	9.02956	100
5	5	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	-1.141	-0.00365	-1.047	100	10	10	8.23889	29.163
6	6	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	-3.140	-0.00744	-3.014	100	10	10	9.11302	27.0879
7	7	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	-5.052	-0.011	-4.453	100	10	10	9.74814	25.4363
8	8	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	-6.002	-0.0143	-5.501	100	10	10	9.39494	24.0704
9	9	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	1.589	0.00055	2.358	100	10	10	8.17904	30.5455
10	10	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	-0.129	-0.00209	0.447	100	10	10	9.05747	30.4811
11	11	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	-1.691	-0.00448	-1.070	100	10	10	9.66709	28.8378
12	12	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	-3.114	-0.00675	-2.178	100	10	10	9.20964	27.4802
13	13	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	4.071	0.00343	5.738	100	10	10	8.15426	35.8104
14	14	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	2.614	0.00163	3.945	100	10	10	9.02613	33.8491
15	15	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	1.251	0.00005	2.445	100	10	10	9.62444	32.2636
16	16	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0	0	0.0281	-0.00148	1.408	100	10	10	9.12601	30.9425

### Network Tab Columns Setup


Lets organize the columns within this tab to make only the columns of interest visible. Select the gear icon to the left of the “Row” column header. This will open the “Table Column Control”. Here one can select columns for visibility. First, right-mouse click and select “Set All Invisible” to turn off all columns.

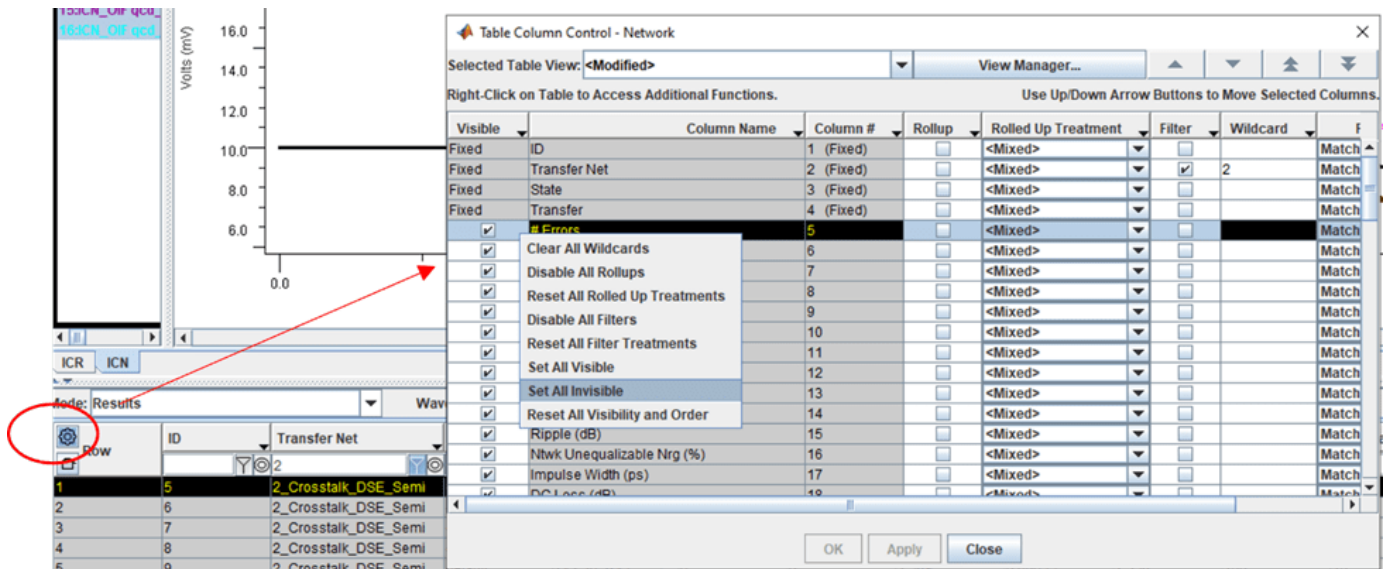

Then select just the ICR, ICN, PSXT, SDD21, \$W2:LENGTH and \$W2:AGGRESSOR\_L1\_CLEARANCE. One can select a row or rows and use the arrows to arrange the column order as shown below.

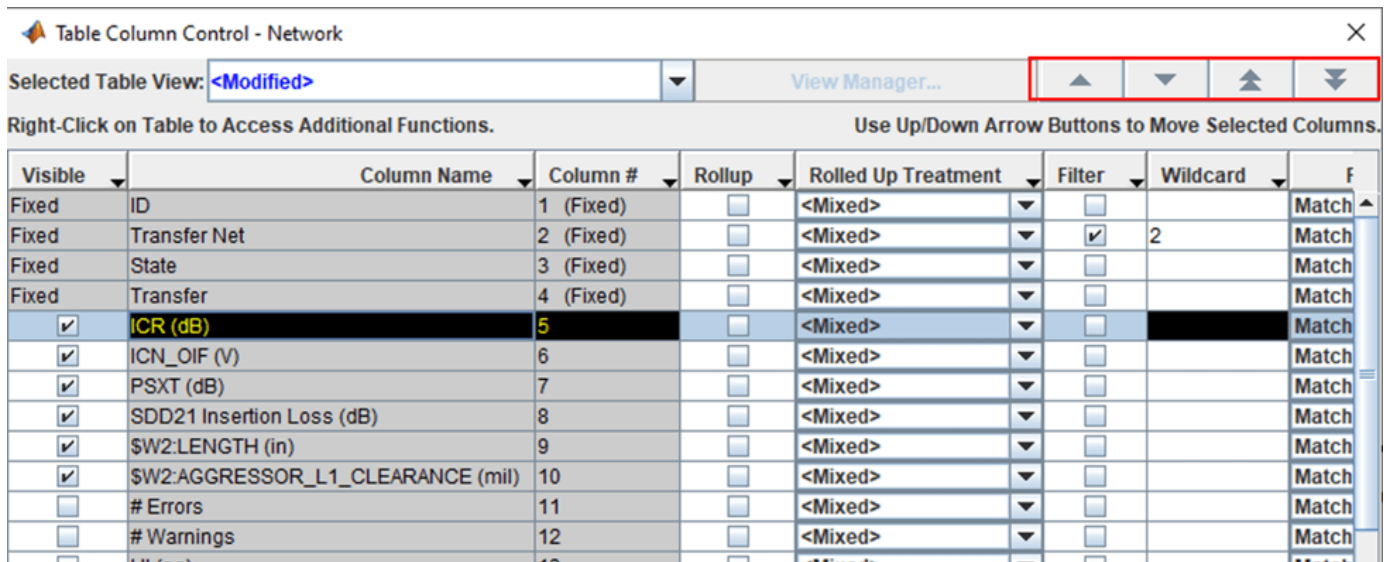

The “View Manager” gives the user the ability to save their column setup for use with the interface, or it can be saved for use in other projects.

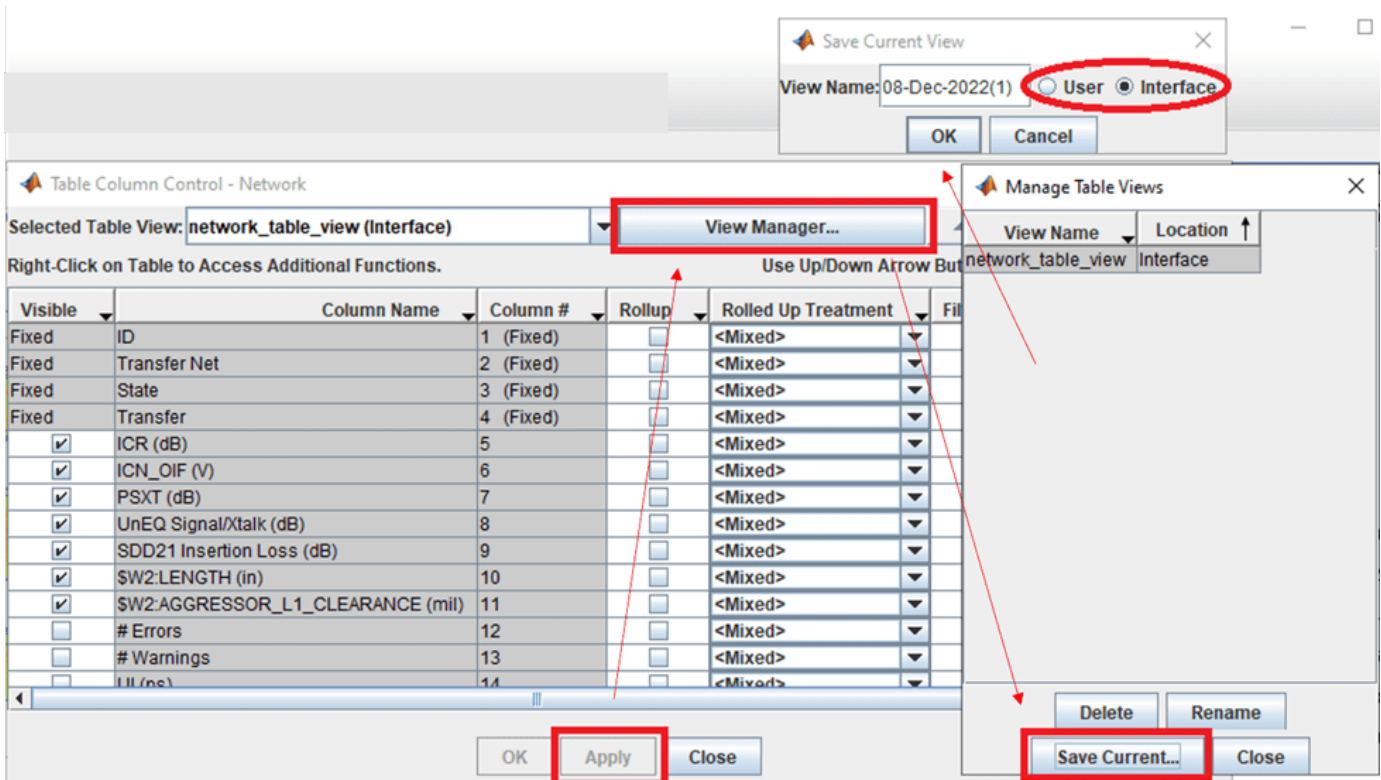

Now that the view has been customized, only the columns of interest are shown in the network tab. I have also sorted the rows by transfer net and using a wildcard "2", I am only showing the results from the "2\_Crosstalk\_DSE\_Semi" sheet. The numbers shown for ICR, ICN and PSXT in the table are the margin to each of their respective masks, not the actual results. Red indicates that the result has negative margin and black is positive margin.


Row	ID	Transfer Net	State	Transfer	ICR (dB)	ICN_OIF (V)	PSXT (dB)	UnEQ Signal/Xtalk (dB)	SDD21 Insertion Loss (dB)	SW2:LENGTH (in)	SW2:AGGRESSOR_L1_CLEARANCE (mil)
1	8	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-6.602	-0.0143	-5.601	24.0704	-8.23437	1.5	10.0
2	7	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-5.062	-0.011	-4.463	25.4363	-7.97535	1.25	10.0
3	6	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-3.140	-0.00744	-3.014	27.0879	-7.76805	1.0	10.0
4	5	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-1.141	-0.00365	-1.047	29.163	-7.23948	0.75	10.0
5	12	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-3.114	-0.00675	-2.178	27.4802	-8.03526	1.5	15.0
6	11	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-1.691	-0.00446	-1.070	28.8378	-7.83954	1.25	15.0
7	10	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-0.129	-0.00209	0.447	30.4811	-7.70088	1.0	15.0
8	9	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	1.589	0.00055	2.358	32.5455	-7.18639	0.75	15.0
9	16	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0.0291	-0.00148	1.408	30.9425	-7.94226	1.5	20.0
10	15	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	1.251	0.00005	2.445	32.2636	-7.77682	1.25	20.0
11	14	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	2.614	0.00163	3.945	33.8491	-7.86665	1.0	20.0
12	13	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	4.071	0.00343	5.738	35.8104	-7.16202	0.75	20.0

Lets plot the ICR, ICN and PSXT. To do this, select a row or rows of results and right click to see the plot options. At the bottom of the menu are the 3 different rules.


igs	ICR (dB)	ICN_OIF (V)	PSXT (dB)	
	NoDef	NoDef	NoDef	
	NoDef	NoDef	NoDef	
	NoDef	NoDef	NoDef	
	NoDef	NoDef	NoDef	
	-1.141	-0.003		
	-3.140	-0.007		
	-5.062	-0.011		
	-6.602	-0.014		
	1.589	0.0005		
	-0.129	-0.002		
	-1.691	-0.004		
	-3.114	-0.006		
	4.071	0.0034		
	2.614	0.0016		
	1.251	0.0000		
	0.0291	-0.001		
	-1.141	-0.003		
	-3.140	-0.007		
	-5.062	-0.011		
	-6.602	-0.014		
	1.589	0.0005		
	-0.129	-0.002		
	-1.691	-0.004		
	-3.114	-0.006		
	4.071	0.0034		
	2.614	0.0016		
	1.251	0.0000		
	0.0291	-0.001		

- Show Impulse Response (Unequalized)
- Show Step Response (Unequalized)
- Show Pulse Response (Unequalized)
- Show Transfer Function (Unequalized)
- Show S-Parameters (DB) ▶
- Show S-Parameters (Polar) ▶
- Show TDT ▶
- Show TDR ▶
- Export Channel S-Parameter
- Show Probed Impulse Response
- Show Probed Step Response
- Show Probed Pulse Response
- Show Probed Transfer Function
- Show Solution Space
- Show Results
- Show On PCB
- Show ICR (dB)
- Show ICN\_OIF (V)
- Show PSXT (dB)

The plot below shows the ICR results for the 2\_Crosstalk\_DSE\_Semi sheet. The X-axis is the frequency and the Y-axis is the plotted ICR. This metric is the ratio of signal to coupled noise in dB. The three colors of the plotted results are based on the aggressor clearance where red is 10mil, blue is 15mil and green is 20mil. The four results for each color represent the coupling length of the signals on either side of the coupling capacitor. The black curve is the ICR mask. Results that occur above the mask have a better signal to noise ratio. Going by this result the 20mil clearance (green) would meet this mask for all of coupling lengths swept in the solution space.

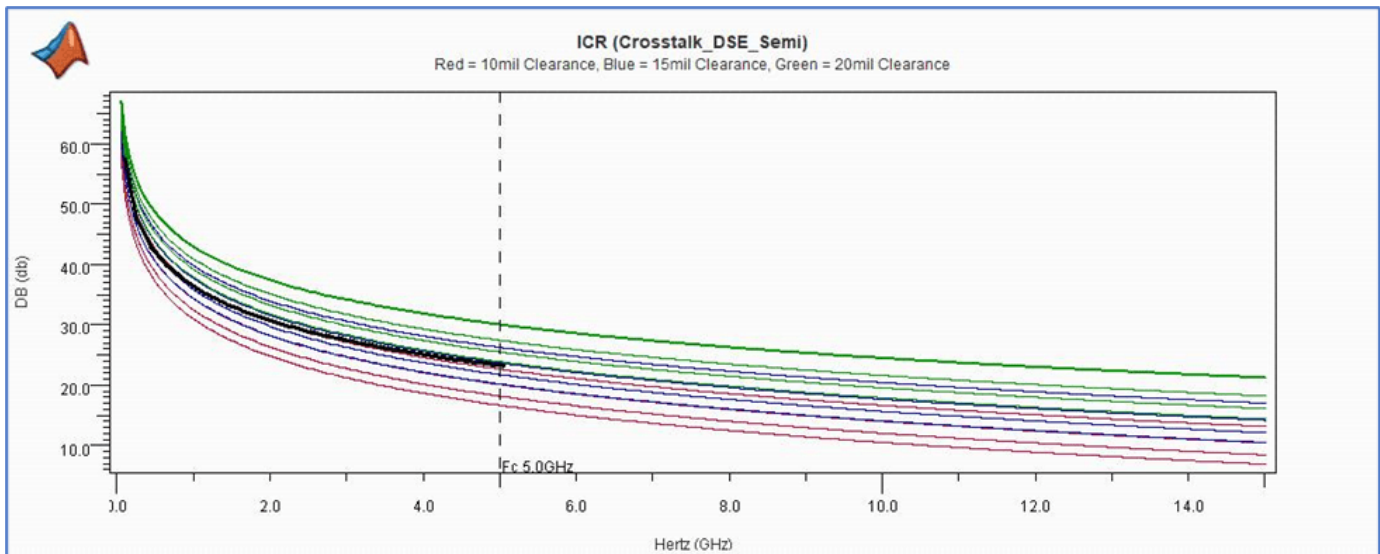


ICN (Integrated Crosstalk Noise) is a measure of the crosstalk noise to the loss of the channel (SDD21). The mask is in black and each color represents a coupling clearance and the four results per color is the coupling length of the microstrip traces. Results that plot below the mask are desired. Here only a few results pass this metric. Primarily the green which represents the widest coupling clearance.

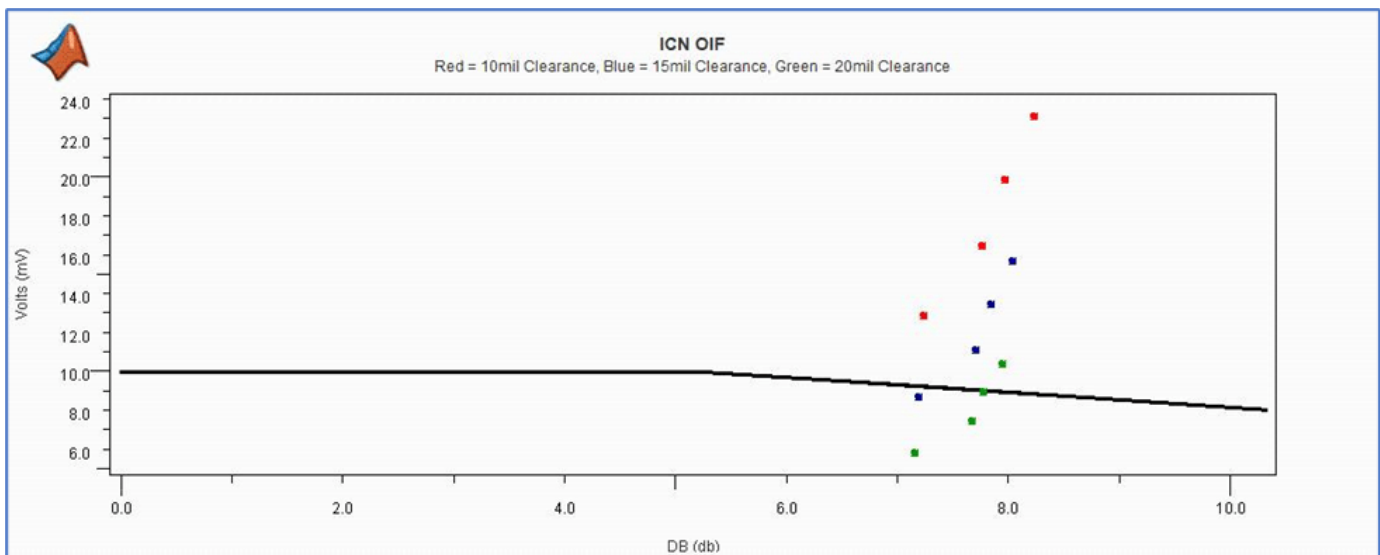

Power-Sum Crosstalk (PSXT) is the other industry standard measure of crosstalk. Here the coupled noise is plotted over frequency. The mask is set at -30dB and the results are grouped based on


coupling clearance and as expected the green plots for the 20mil coupling clearance are within the mask limits along with some of the blue (15mil clearance).

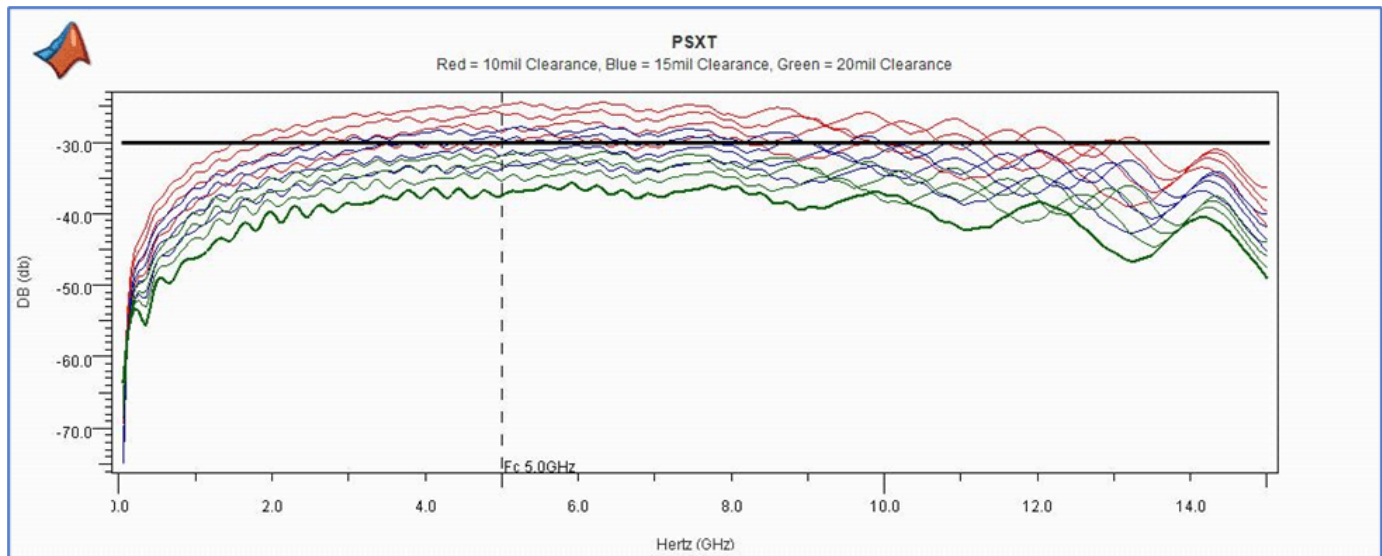


Lets take a look at the UnEQ Signal/Xtalk results. UnEQ Signal/Xtalk is the unequalized signal to crosstalk ratio in dB. To make things interesting, we can plot the UnEQ Signal/Xtalk against each of the industry standard crosstalk metrics that we just plotted and see how it compares.

Row	ID	Transfer Net	State	Transfer	ICR (dB)	ICN_OIF (V)	PSXT (dB)	UnEQ Signal/Xtalk (dB)	SDD21 Insertion Loss (dB)	SW2:LENGTH (in)	SW2:AGGRESSOR_L1_CLEARAN
1	8	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-6.902	-0.0143	-5.601	24.0704	-8.23437	1.5	10.0
2	7	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-5.052	-0.011	-4.463	25.4363	-7.97535	1.25	10.0
3	6	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-3.140	-0.00744	-3.014	27.0879	-7.76805	1.0	10.0
4	5	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-1.141	-0.00395	-1.047	29.163	-7.23948	0.75	10.0
5	12	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-3.114	-0.00675	-2.178	27.4802	-8.03526	1.5	15.0
6	11	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-1.691	-0.00446	-1.070	28.8378	-7.83954	1.25	15.0
7	10	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	-0.129	-0.00209	0.447	30.4811	-7.70088	1.0	15.0
8	9	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	1.589	0.00055	2.358	32.5455	-7.18639	0.75	15.0
9	16	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	0.0291	-0.00148	1.408	30.9425	-7.94226	1.5	20.0
10	15	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	1.251	0.00005	2.445	32.2636	-7.77682	1.25	20.0
11	14	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	2.614	0.00163	3.945	33.8491	-7.66665	1.0	20.0
12	13	2_Crosstalk_DSE_Semi	default	TX1_to_RX1	4.071	0.00343	5.738	35.8104	-7.16202	0.75	20.0



"Plots Mode" will be used to visualize these correlations. This viewer mode it allows the user to plot any two metrics or variables against each other. First, select the plots tab in the upper left corner of the viewer window as shown below. Then select the gear icon to open the "Table Column Control" and from the "X Axis" pull-down menu select "UnEQ Signal/Xtalk".

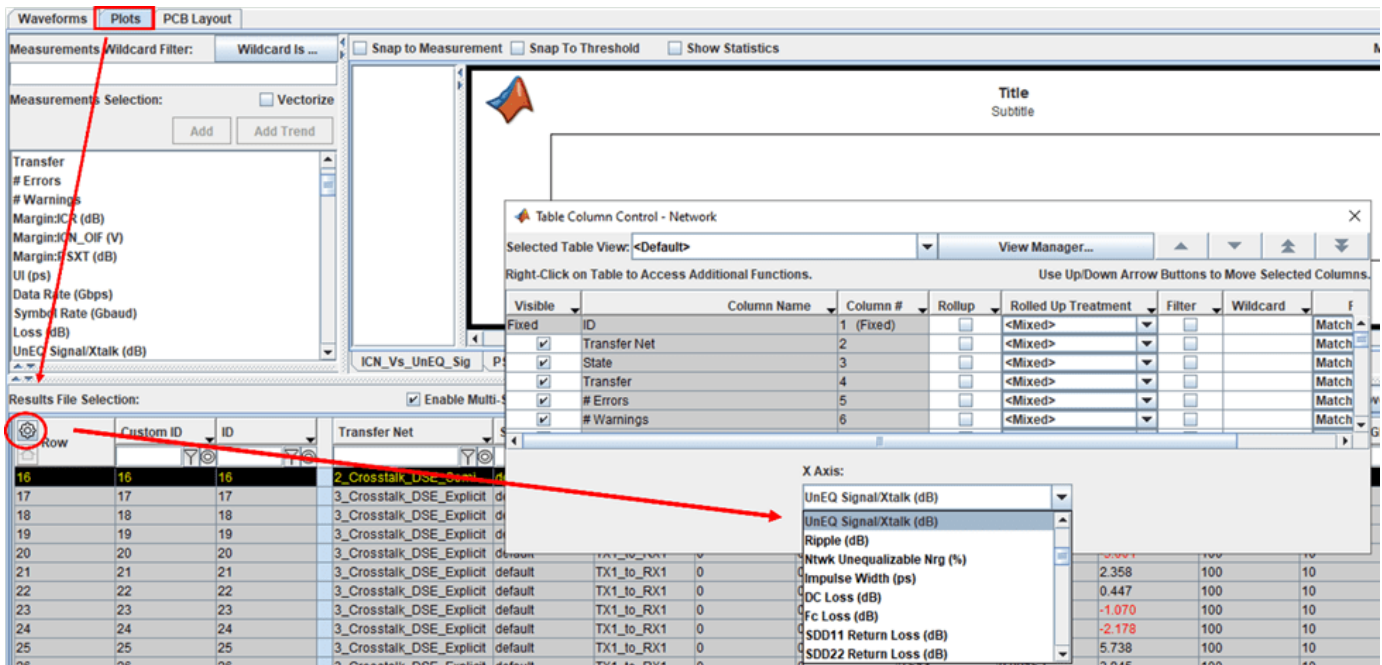

Next, select all the rows for the “2\_Crosstalk\_DSE\_Semi” sheet and right click and select ICN. This plot below shows how UnEQ Signal/Xtalk relates to ICN. One can see that 32dB correlates to meeting the ICN margin. The black line represents zero margin, or meeting the mask.

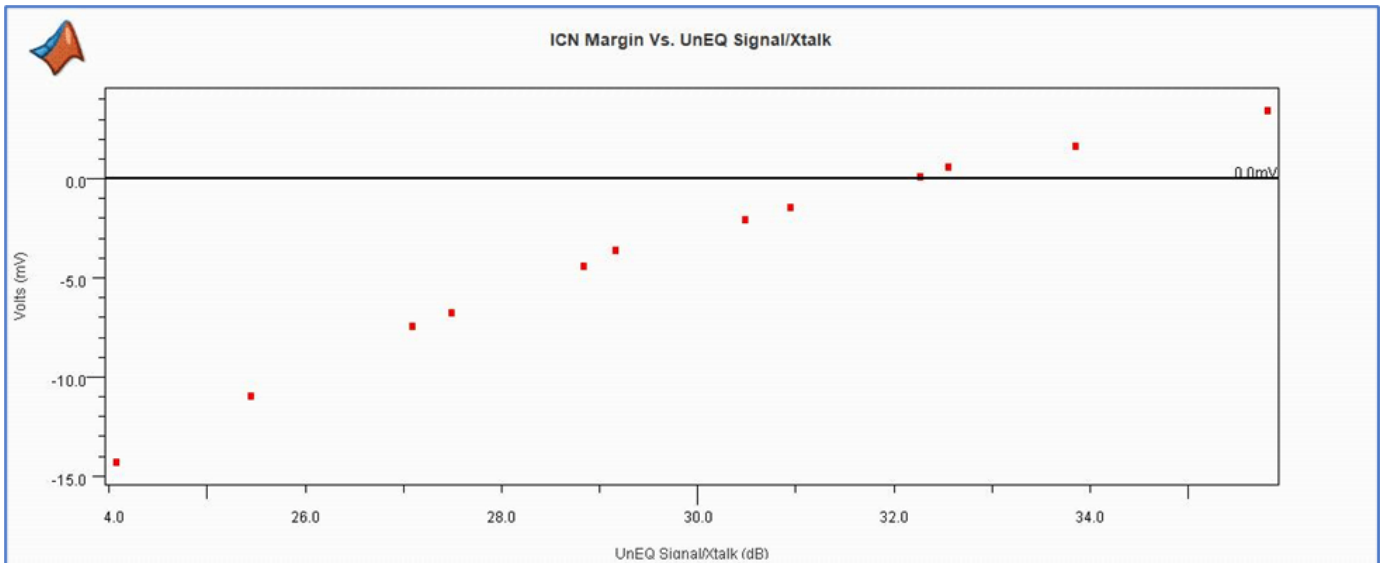

ICR Margin Vs. UnEQ Signal/Xtalk and PSXT margin Vs. UnEQ Signal/Xtalk shown below both show similar characteristics with the ICN Margin plot. All three plots show that an UnEQ Signal/Xtalk ratio between 30dB and 32dB could meet this metric.

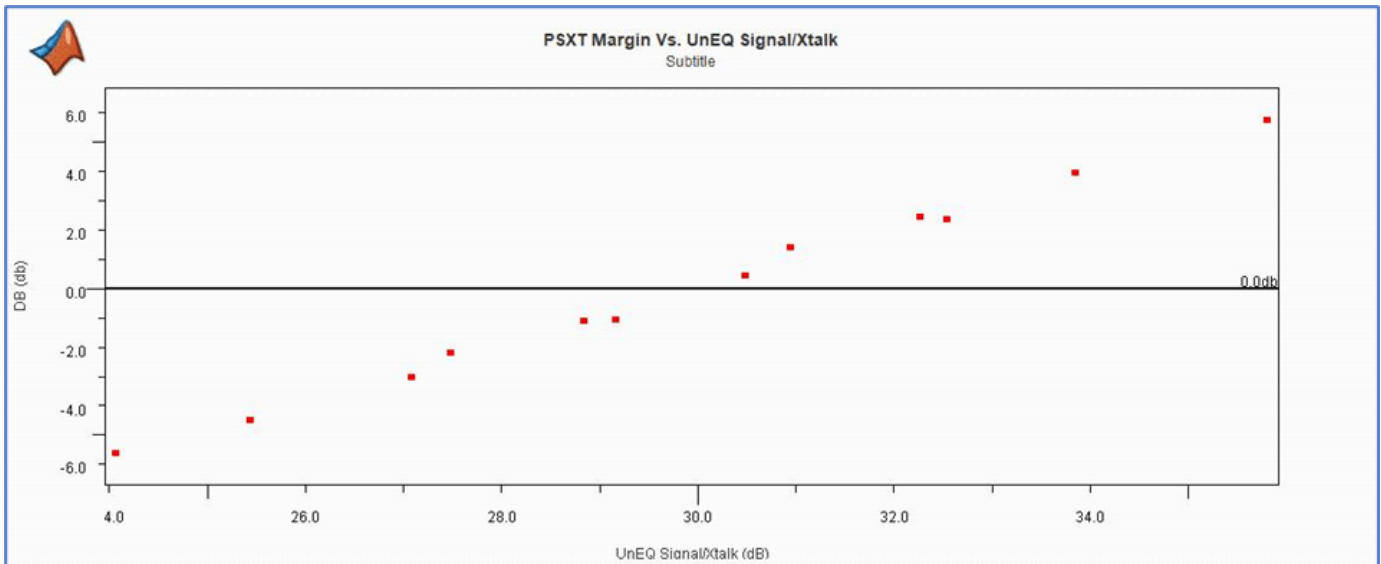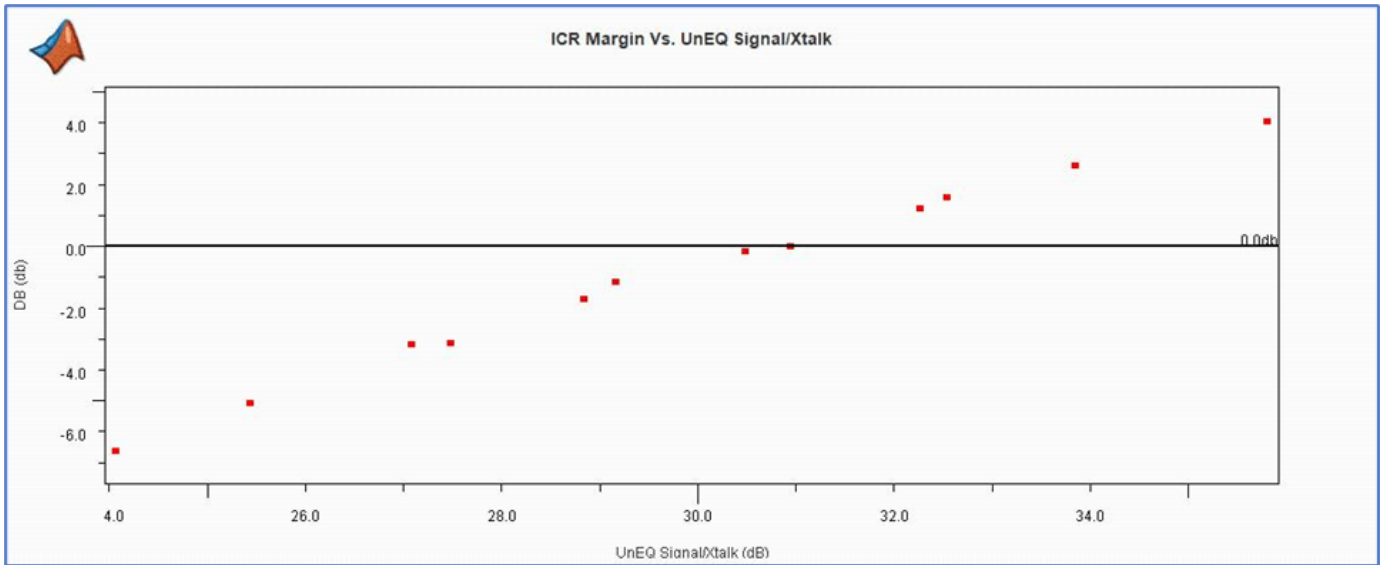

### Statistical Analysis Results


Lets now focus on statistical analysis results. Select the "Waveforms" tab in the upper left corner of the viewer window. Then select the statistical tab in the lower left corner of the viewer window.






- Show BER
- Show Statistical Eye
- Show Bathtub ▶
- Show Vertical Bathtub ▶
- Show DJ
- Show Contours ▶
- Show Crosstalk
- Show Impulse Response ▶
- Show Step Response ▶
- Show Pulse Response ▶
- Show Aligned Pulse Response ▶
- Show Transfer Function ▶
- Show Probed Statistical Eye ▶
- Show Probed Contours ▶
- Show Probed Crosstalk ▶
- Show Probed Impulse Response ▶
- Show Probed Step Response ▶
- Show Probed Pulse Response ▶
- Show Probed Transfer Function ▶
- Show Solution Space
- Show Results
- Show On PCB
- Show SkewEyeMask\_die


Below is the statistical eye diagram for the 2\_Crosstalk\_DSE\_Semi sheet where the coupling length is 1.25" and the coupling clearance is 10mil. The eye mask from the rules file is applied to the center of the eye. To add the eye mask, select the row, right-click and select "Show SkewEyeMask\_die".

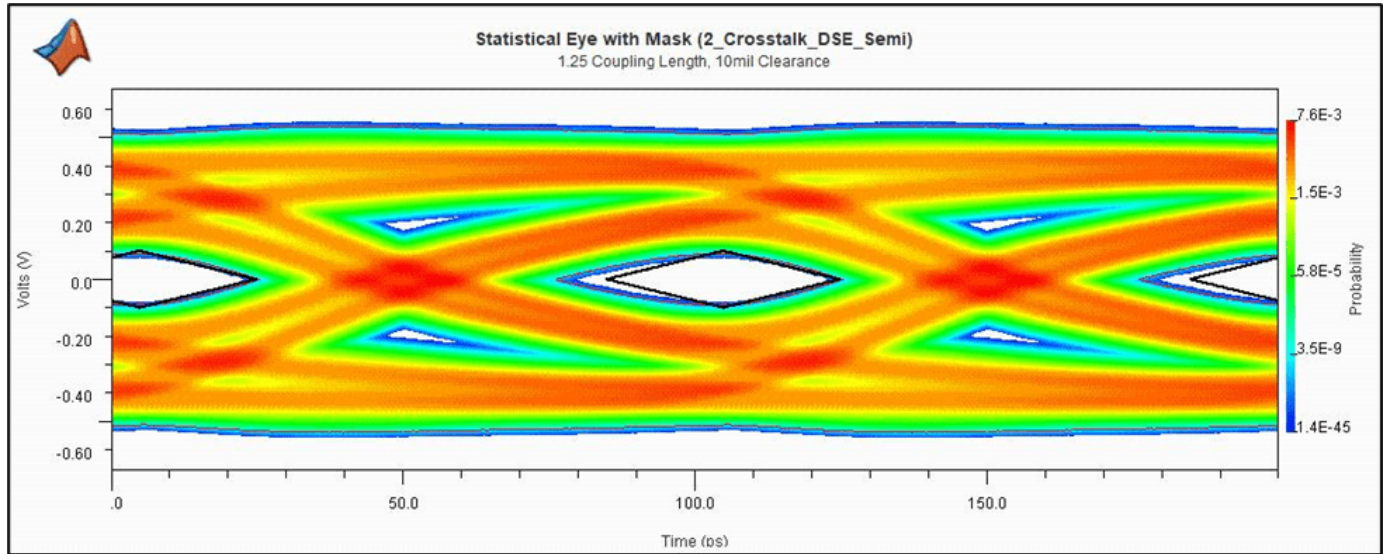

Below is a plot of the statistical eye from the single channel (top) against a victim channel result from the 2\_Crosstalk\_DSE\_Semi sheet. One can see the eye closure due to crosstalk.

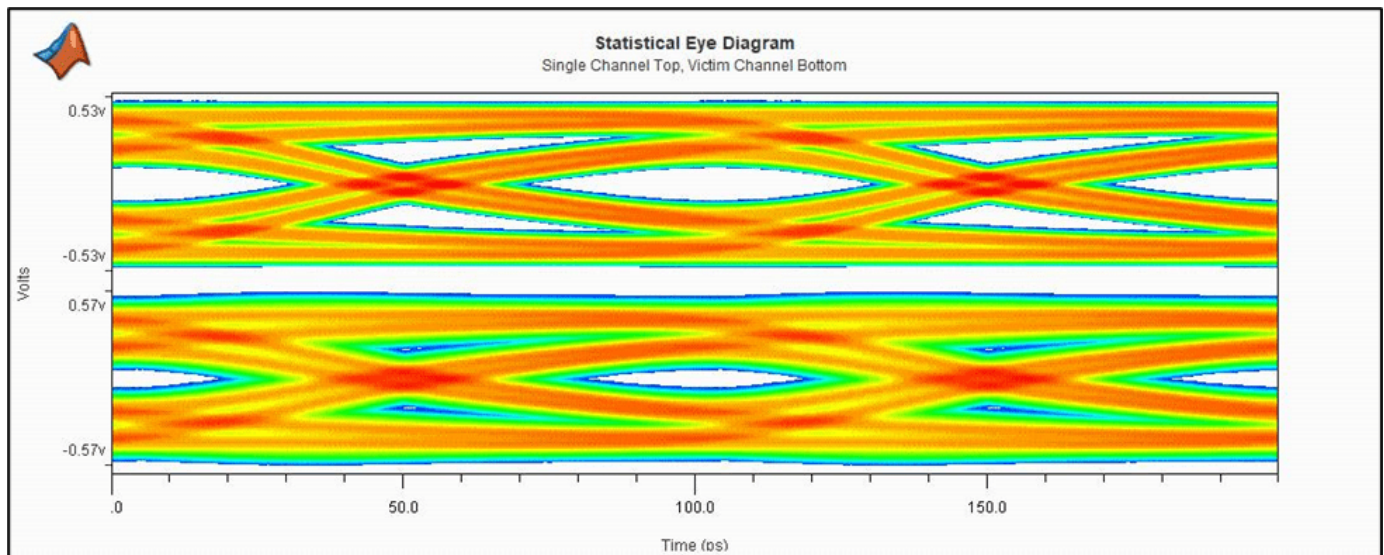

A histogram of the crosstalk can be plotted selecting "Show Crosstalk" from the plot menu. The histogram shows the probabilities as colors where red represents the higher probability events with green and blue being the lower probabilities. This histogram is used in the time domain "Semi-Analytic" crosstalk mode results.

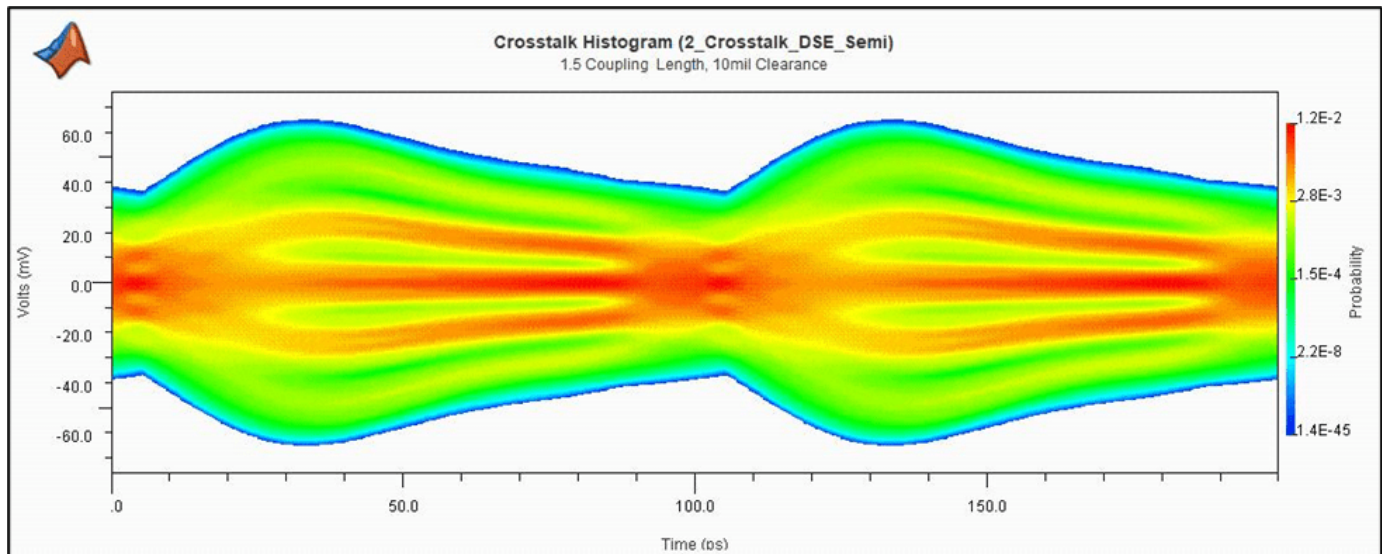

### Time Domain Analysis Results

Now let's look at time domain results. Select the Time Domain tab in the lower left corner of the viewer window. Right-click on a row or rows of results gives the time domain plot options.

Row	ID	Transfer Net	
11	11	2_Crosstalk_D	Show BER
12	12	2_Crosstalk_D	Show Persistent Eye
13	13	2_Crosstalk_D	Show Bathtub
14	14	2_Crosstalk_D	Show Vertical Bathtub
15	15	2_Crosstalk_D	Show DJ
16	16	2_Crosstalk_D	Show Contours
17	17	3_Crosstalk_D	Show Waveform
18	18	3_Crosstalk_D	Show Stimulus
19	19	3_Crosstalk_D	Show Jitter Transfer
20	20	3_Crosstalk_D	Show Probed Persistent Eye
21	21	3_Crosstalk_D	Show Probed Contours
22	22	3_Crosstalk_D	Show Probed Waveform
23	23	3_Crosstalk_D	Show IBIS-AMI Output Parameters


  

0: Network	1: Statistical	2: Time_Domain
------------	----------------	----------------


  

Show Solution Space
Show Results
Show On PCB
Show SkewEyeMask_die


Below is the persistent eye diagram for a result from the 2\_Crosstalk\_DFE\_Semi sheet. This is the semi-analytic crosstalk mode where the crosstalk histogram is convolved with the persistent eye of the victim channel in the absence of crosstalk.

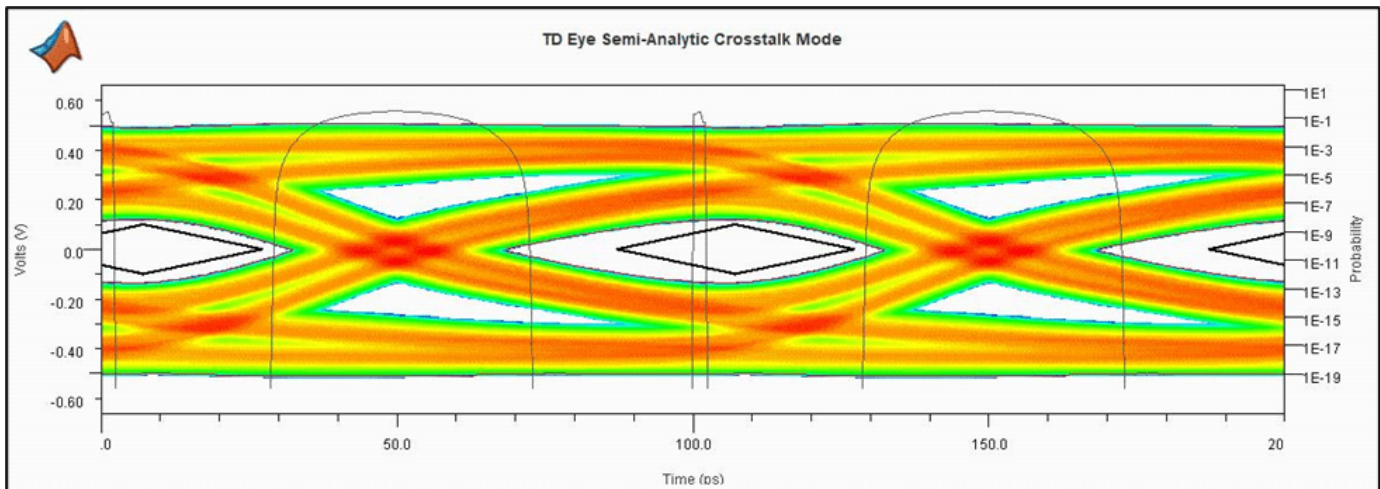

A plot of a persistent eye from one of the "3\_Crosstalk\_DSE\_Explicit" sheet simulation results is shown below. The explicit time domain crosstalk mode reveals the effect of the user defined aggressor bit pattern on the victim waveform. These results can be helpful in understanding synchronous or asynchronous crosstalk events as well as any bit pattern dependencies.

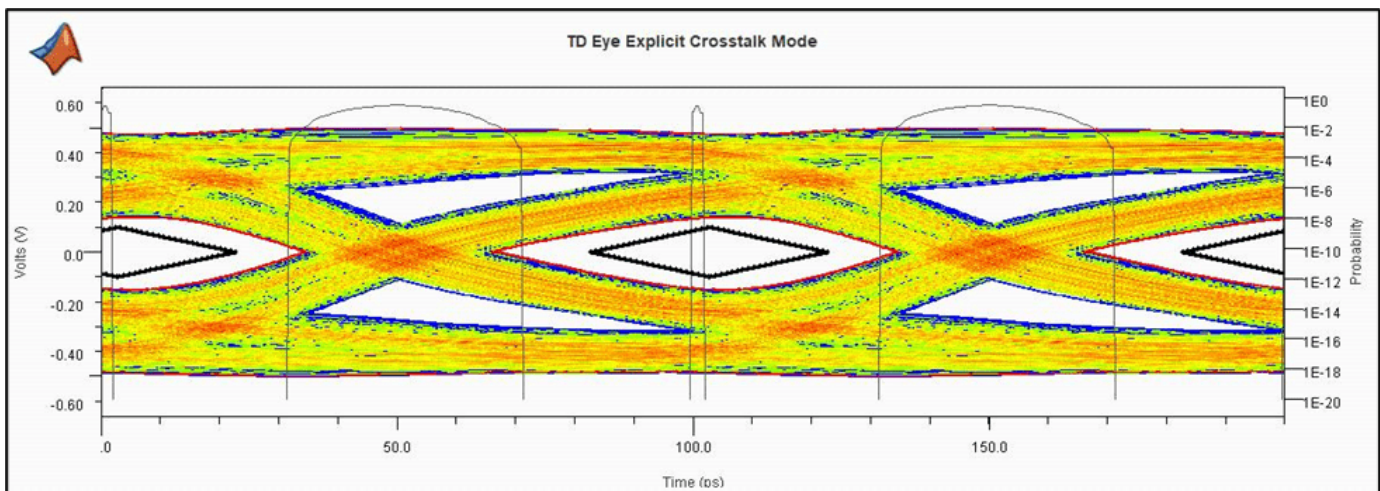

Lastly lets compare select time domain waveforms across the three sheets, 1\_Single\_Channel, 2\_Crosstalk\_DSE\_Semi and 3\_Crosstalk\_DSE\_Explicit. The red and blue waveforms are 1\_Single\_Channel, 2\_Crosstalk\_DSE\_Semi and can be seen to overlay each other. This is expected behavior with the Semi-Analytic crosstalk mode. The statistical crosstalk histogram is applied to the persistent eye histogram to represent the coupled result. It is not applied to the waveform. The green waveform is from the 3\_Crosstalk\_DSE\_Explicit sheet and one can see areas where the signal is affected by coupling from aggressors when compared to the single channel or semi-analytic waveforms.

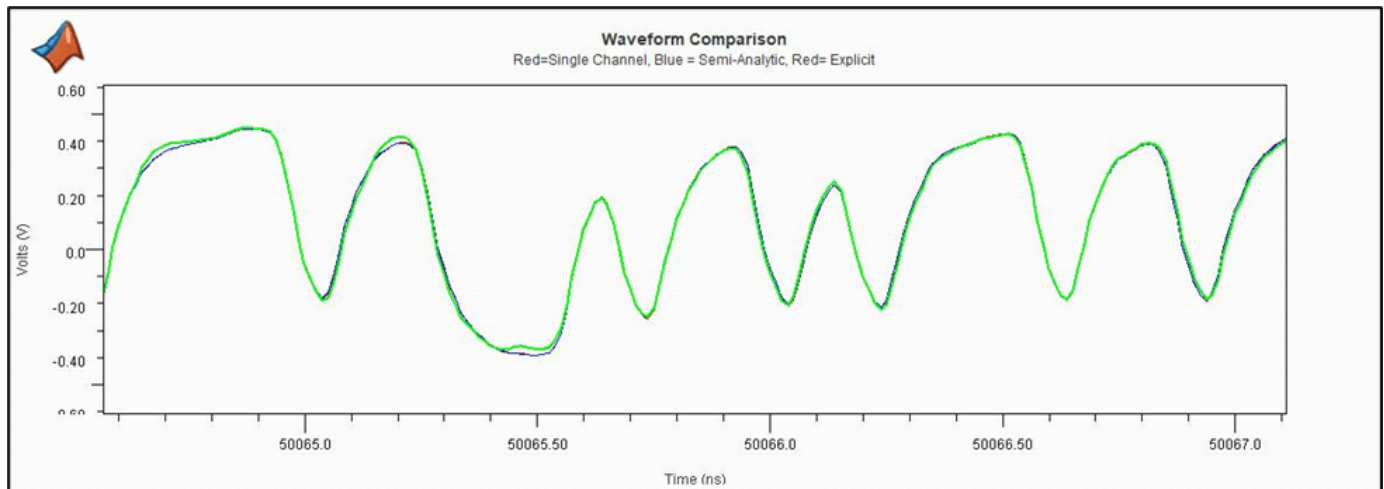

This example has demonstrated many ways to analyze crosstalk with SLD. From industry standard metrics using rules files, to statistical and time domain results that can be viewed in multiple ways. The user can see how crosstalk affects eye closure using statistical or time domain “Semi-Analytic” mode, to the bit by bit affect on the waveform when using “Explicit” crosstalk mode.

## Advanced Visualization with Serial Link Designer

The Signal Integrity Viewer allows the user to not only display the various frequency and time domain waveforms, but to plot results, variables and settings against each other. This allows the user to drill down into what is going on in the design and visually identify trends and/or outliers. These might be either difficult to see in the tabular data or perhaps missed altogether. This example covers some ways to incorporate advanced visualization in large data sets.

### Open Advanced Visualization Project


To open the example project please type the following command at the Matlab prompt.

```
% open(sldAdvancedVisualization);
```

As a note, some of the methods shown in this example may incorporate some data mining techniques to sort, filter and rollup the tabular simulation data. There is an example on data mining which can be found at: XXXXX


### Intro to Advanced Visualization

The figure below shows a number of eye diagrams from a particular simulation run. With this small set of data one could easily plot each result and identify which has the highest and widest eye opening. However, when there are hundreds or even thousands of simulation results, manually plotting each eye is not feasible.

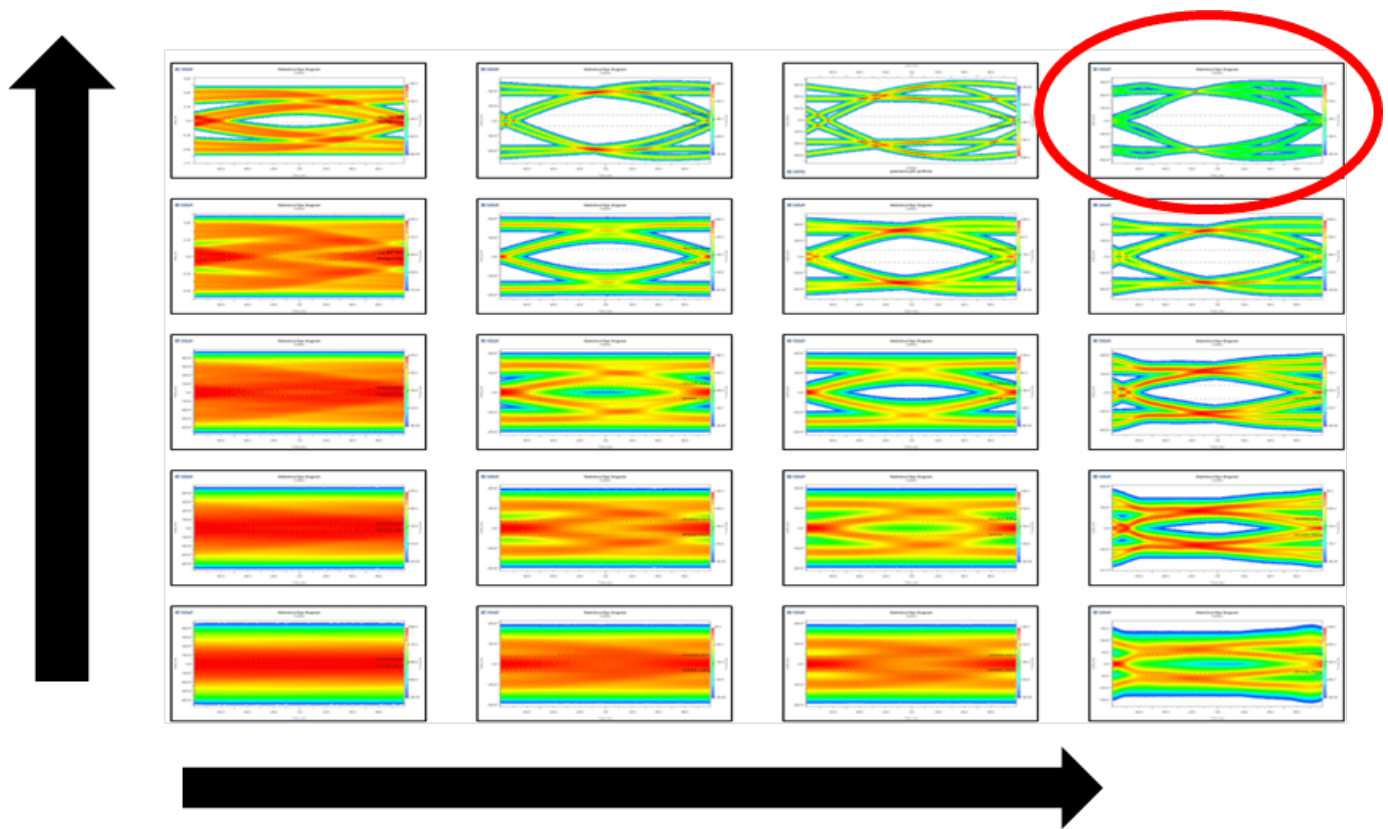

Below shows one way to visualize data from a large data set. Here the plot shows the differences in performance of a channel based on three different IC packages. The other variables analyzed are the corner process of the packages (FF/TT/SS) and three different via designs on the board. The criterion for this experiment is to make design choices based on maximizing eye height (Y-axis).



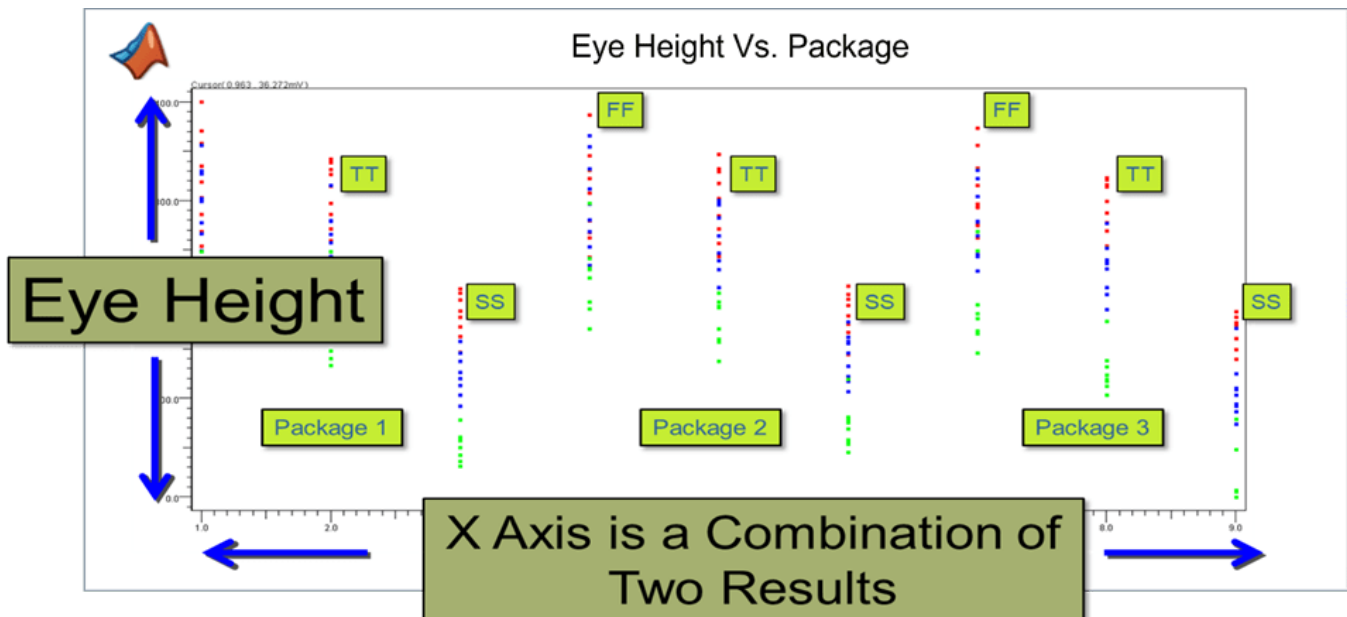

For each process corner there are red, blue and green dots which identify individual simulation results for eye height. Of each simulation also has one of the three different via designs. These via designs are:

- 1 Through-hole via design (red dots), where the signal routed from the top layer of the board to the bottom layer, straight through the via.
- 2 Back drilled vias (blue dots), where the stub caused by routing to an inner layer of the board is back drilled leaving only a small stub.
- 3 Non-back drill via (green dots) where the via has a long stub when routing to an inner layer of the board.

One can see that performance is similar between package and between the process corners of each package, but what is easily distinguishable is that the red dots corresponding to through-hole via eye heights have the largest eye opening on average. This is one example of visualization of data. To do this sort of analysis requires using the Signal Integrity Viewer in "Plots" mode.

### "Plots" Mode

To work in Plots mode one needs to select the "Plots" tab in the Signal Integrity Viewer window as shown below.

When in Plots mode, the lower left corner of the window contains the various tabs which correspond to the Channel Analysis report results (for PLD this would be the Timing and Waveform Report).

Note: The correct tab must be selected to see the results of that specific analysis. If the results look strange, make sure you are in the right tab.

Plots mode gives the user has control of both the x and y axis to plot any results or variables contained in the simulation report. On the left hand side of the Signal Integrity Viewer window is a list of the variables that correspond to the y axis. There is also a wildcard filter at the top of the dialog to easily find the desired result or variable for plotting.

To set up the x axis, one needs to select the gear icon at the top of the first column in the results table. The column named "Row".

This will open the "Table Column Control" where the x-axis results and variables can be chosen for a given plot.

With the x and y axes defined one can do scatter plots or trend plots. A scatter plot will be displayed when the "Add" button is pressed. If the x axis variable is not defined it will default to "Row" which is the order of simulation results. A trend plot can be performed by selecting the "Add Trend" button, however the data must be sorted on a unique variable (i.e. Corner process, Tap setting, Trace length...etc.) before the viewer will display a trend plot. Examples of scatter plotting and trend plotting are provided below.

### **Scatter Plotting**

The figure below is an example of scatter plotting. The plotted results are for simulations of a design involving a backplane with line cards on either end. Here the trace lengths of the backplane and line cards are swept along with a 2-tap FFE in the transmitter (Main tap 0 and post cursor tap 1) and a DFE in the receiver having 7, 9 and 12 taps. This results in 1350 simulations. The objective is to look at how the number of DFE taps affect eye height and eye width across all the trace lengths and FFE settings.

The steps to create this plot (Eye Height Vs. Eye Width Vs. Number of DFE taps) is as follows:

- 1 Select the plots tab in the Signal Integrity Viewer.
- 2 Select the "Statistical" or "Time Domain" tab at the bottom of the window.
- 3 Select the y-axis value in the left column of the window (In this case "Statistical Eye Height").

- 4 Select the gear icon in the column 1 header ("Row").
  - 5 Select the x-axis variable (In this case "Statistical Eye Width).
  - 6 Go to the DFE Tap column and filter by using the wild card. Here entering one of the DFE tap values start with 7 (see below). The idea is to plot groups of results for each DFE tap number individually.
- 1 Select all of the filtered results and press the "Add" button. Now all of the results for DFE taps=7 are shown in a scatter plot.
  - 2 Repeat steps 6 and 7 but use DFE tap value = 9, then DFE tap value = 12. You will see that each group plotted is a different color making it easy to identify which group corresponds to the number of DFE taps.
  - 3
  - 4 Marked on the plot are the minimum eye height and width values. The upper right are the results that meet the criteria of the design. Although the plot does not provide any definite answers, it demonstrates the process of visualizing the data. One could take things a step further and look at one of the DFE tap numbers and plot the lengths of the backplane or line card to see which number of taps might be optimum for a given length. In some cases it may take many of this type of plot to find problems in a design or determine how to make a design work.

### Trend Plotting

Creating a trend plot is similar to creating a scatter plot. The difference is that the data needs to be sorted by a unique variable prior to pressing the "Add Trend" button in the Signal Integrity Viewer.

Below is a trend plot to show the effect on eye height when sweeping Tx FFE tap values. For this example the focus is on two of the Tx taps, The main tap "0" and the first post cursor, tap 1. The values of Tap 0 are swept from 0.7V to 1.0V with corresponding Tap 1 weights applied to normalize the result (i.e. Tap 0 = 0.7, Tap 1 = 0.3V). An eye height limit is set at 250mV and each trend plot red, green and blue correspond to process corners FFFE, TTTE and SSSE respectively.

Here one can see that Tap 0 settings from 0.7V to 0.84V meet the eye height limit of 0.25V. The optimal tap settings would be Tap 0 = 0.78V and Tap 1 = 0.22V giving the maximum eye height of approximately 0.33V.

To create this trend plot the same steps are performed as with the scatter plot example above. The difference is that before pressing the "Add Trend" button the data has been sorted on the process corner. This was done by pressing the column header for "Corner" which sorts the data and thus it is grouped in rows for FFFE, TTTE and SSSE corners.

### Summary

One can look at the tabular results, either in the SLD (Serial Link Designer, channel analysis report) or PLD (Parallel Link Designer, Waveform and Timing


report) and try to discern what they mean. One can sort, filter and roll up the data which is advantageous and helpful in finding issues or solutions, but it still may not reveal a key issue with a design. Using Signal Integrity Viewer in Plots mode allows the user to define the dependent and independent variables to plot against each other. Using scatter and trend plots to visualize trends and anomalies can find problems and/or solutions which might otherwise be missed.

## Data Mining With Signal Integrity Viewer

For those experienced using Serial Link Designer, you are probably aware that even the simplest simulations can produce mountains of data and sorting through the data can be time consuming. As the complexity of the channel and number of variables increase, sorting through that data can be ever more daunting. This example is set up to show some of the tools available to give the user control, to focus in on the results and variables of interest and make design decisions on large data sets.

In this example, data mining and management features in the Signal Integrity Viewer will be covered. A project is included which can be used to replicate the steps shown in this document or for experimentation with these features.

There are two workflows that will be discussed in this example. The first is data mining within the Signal Integrity Viewer window and the second is data mining using Table Column Control dialog in the Signal Integrity Viewer. In general, one will tend to use a combination of these two methods when analyzing results. Though this example focusses on tabular data, the ultimate goal is to find the passing results.

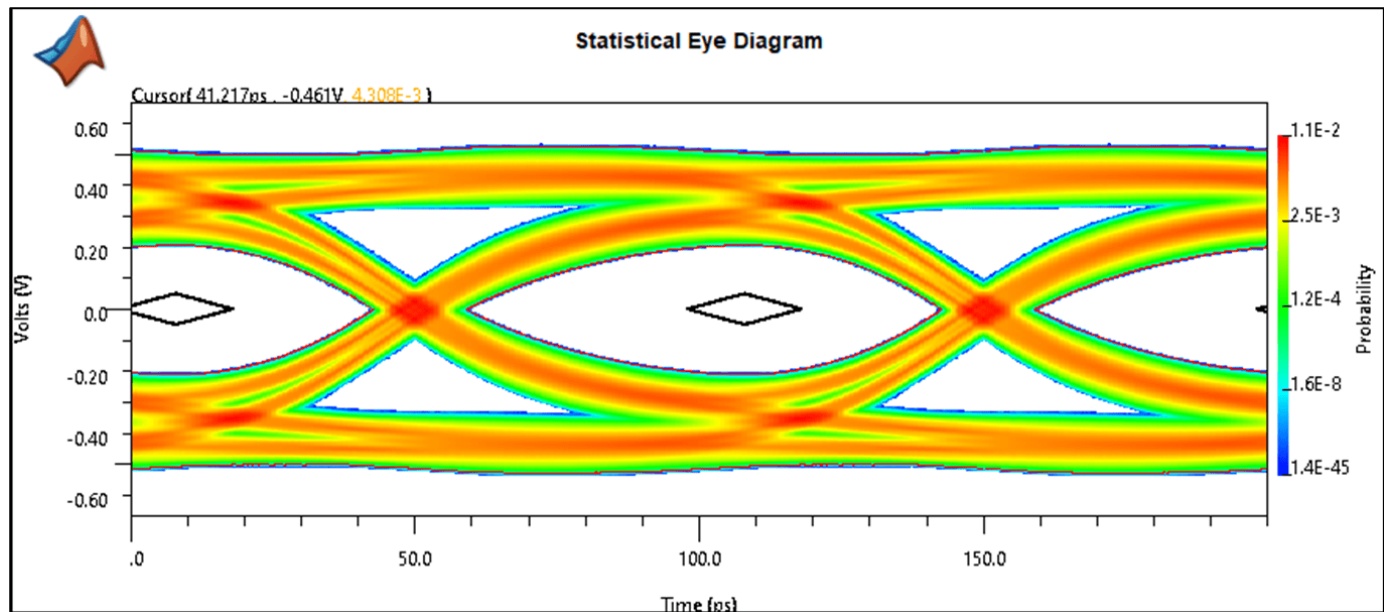

### Open the Example Project

Use the code below to open the Data Mining Example project in Serial Link Designer.

```
% openSignalIntegrityKit('sldDataMiningExample');
```

### Example Project

The example project is a single sheet, single channel design where the signals propagate from a transmitter, through the transmitter package model,

a differential via, lossy transmission line, a second differential via, a receiver package and into a receiver where the signals are recovered.

The schematic sheet is set up to simulate cases where the the channel is swept over IC corner process (SS, FF and TT) as well as for etch impedance and delay (+/-10% variation from TT). The length of the transmission line is swept from 4 to 12 inches and there are three different via models being swept. Each via model transitions between two layers. The "VIA\_TOP\_BOT" is the top layer to bottom layer of the printed circuit board. The "VIA\_TOP\_SIG3\_B" transitions from the top layer to layer 3 with layers 4 to bottom being back drilled. The "VIA\_TOP\_SIG3\_S" transitions from the top layer to layer 3 with layers 4 to bottom not being back drilled. Since this via is not back drilled, the barrel after the layer 3 becomes a large stub which can cause signal quality issues such as ringing, reflections due to resonances and impedance mismatches.

There are a total of 81 simulations based on the solution space setup. This example will go through how one can use the data mining and management features to drill down into the simulation results and make design decisions on the dataset. We will start with data mining from the Signal Integrity Viewer Window then go through the Table Column Control.

### Data Mining from the Signal Integrity Viewer Window

For this example we are going to work in the "Statistical" tab in the Signal Integrity Viewer. Select the Statistical tab in the lower left corner of the viewer window after the simulation results have loaded into the viewer.


Row	ID	Transfer Net	State	Transfer
1	1	sheet1	default	TX1_to_RX
2	2	sheet1	default	TX1_to_RX
3	3	sheet1	default	TX1_to_RX
4	4	sheet1	default	TX1_to_RX
5	5	sheet1	default	TX1_to_RX
6	6	sheet1	default	TX1_to_RX
7	7	sheet1	default	TX1_to_RX
8	8	sheet1	default	TX1_to_RX
9	9	sheet1	default	TX1_to_RX
10	10	sheet1	default	TX1_to_RX
11	11	sheet1	default	TX1_to_RX
12	12	sheet1	default	TX1_to_RX
13	13	sheet1	default	TX1 to RX

0: Network 1: Statistical


There are many ways to organize results and drill down to get insight. In general Serial Link Designer simulations, even simple ones can provide mountains of data. We will sort, filter and roll up these results in the next section to demonstrate how to focus on specific the variables and results and analyze their performance.

## Set Up Columns


To best show the viewer sort, filter and roll up, we are going to open the table column control and select the columns of results that we want to use. Open the table column control by selecting the "Gear" icon in the "Row" column header.

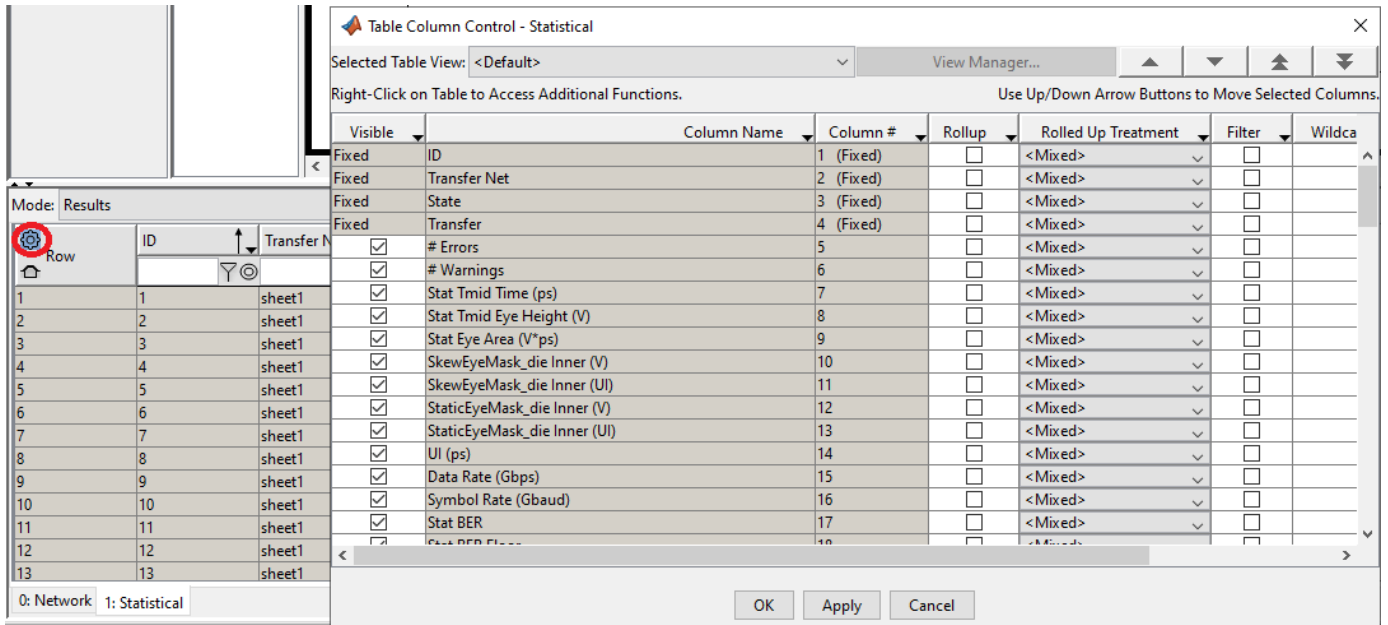

Next in the "Visible" column of the Table Column Control window, right click next to any of the check boxes and select "Set All Invisible". This will uncheck all columns and disable them from being seen in the viewer.

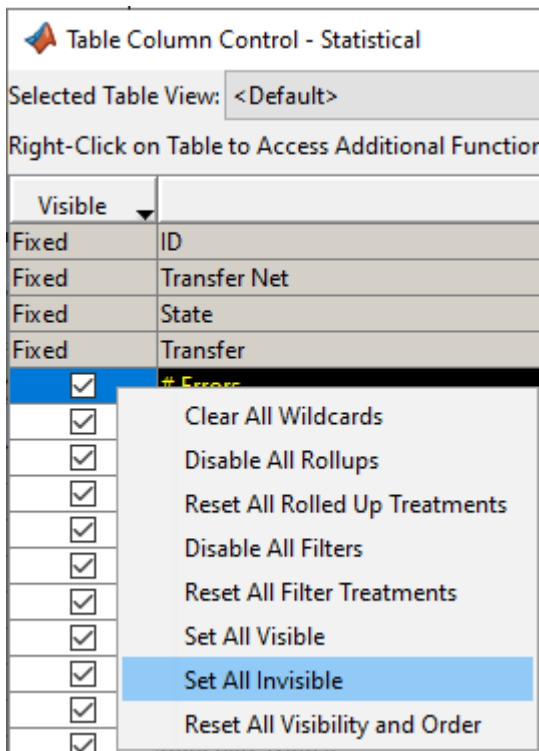

Now, select just these four columns and arrange them as shown below: Stat Eye Height (V), \$W1:LENGTH, \$X\_VIADIFF1:V\_MODEL, CORNER. The arrows highlighted will allow one to move the rows to their desired position. Now close the Table Column Control.

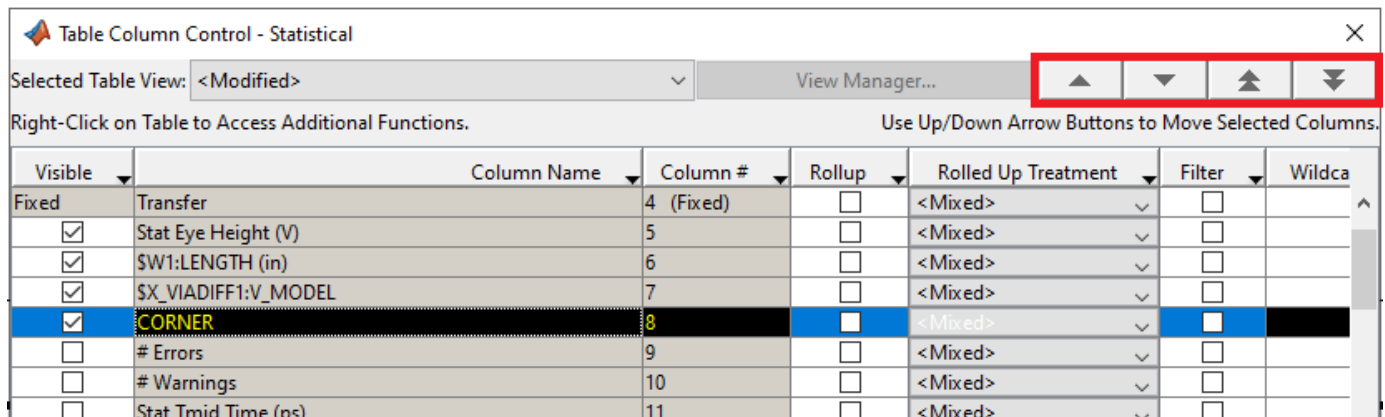


### Moving Columns

Simulation results are contained in rows of data. These results are in a multi-column rows. Depending on the number of variables and settings there can be tens or hundreds of columns. As such, from the Signal Integrity Viewer window only 10 or so columns are visible at a time. To view others one has to scroll to the right. This can be tedious and inefficient. As previously we have modified the view to only rows with the variables and results we are going to use.




From this view or at any time one may wish to re-order the visible columns for comparison with others or to group their design critical metrics together. Without using the Table Column Control, the way to do this is by simply be dragging a column to the desired area for placement. Selecting the header and holding down the left mouse button. Drag the column to the desired position in the table and release. Shown below I selected the "CORNER" column and moved it one column to the left.

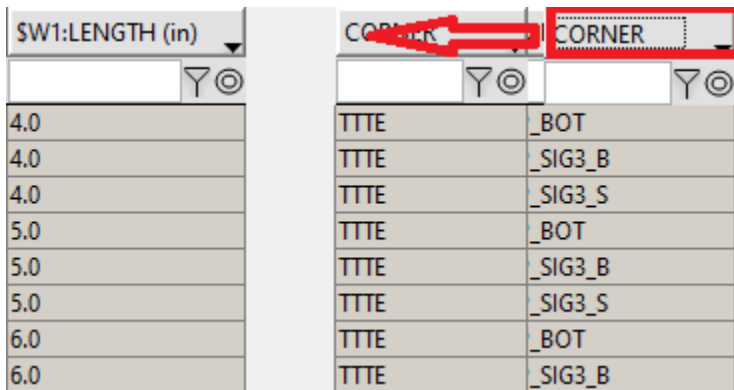

SW1:LENGTH (in)	CORNER	
4.0	TTTE	_BOT
4.0	TTTE	_SIG3_B
4.0	TTTE	_SIG3_S
5.0	TTTE	_BOT
5.0	TTTE	_SIG3_B
5.0	TTTE	_SIG3_S
6.0	TTTE	_BOT
6.0	TTTE	_SIG3_B

### Sorting on a Column

For a quick analysis of a result, such as BER or Eye Height, one may wish to quickly sort ascending or descending. This can be accomplished by pressing on the column header with the left mouse button. Select once for ascending or a second time for descending. It toggles between ascending and descending each time selected. One can see the up arrow in the figure below signifies that the column is sorted ascending.

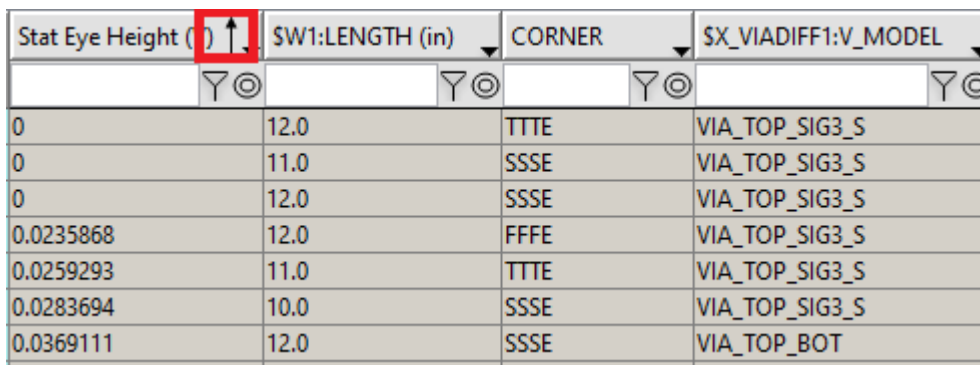

Stat Eye Height ( )	SW1:LENGTH (in)	CORNER	SX_VIADIFF1:V_MODEL
0	12.0	TTTE	VIA_TOP_SIG3_S
0	11.0	SSSE	VIA_TOP_SIG3_S
0	12.0	SSSE	VIA_TOP_SIG3_S
0.0235868	12.0	FFFE	VIA_TOP_SIG3_S
0.0259293	11.0	TTTE	VIA_TOP_SIG3_S
0.0283694	10.0	SSSE	VIA_TOP_SIG3_S
0.0369111	12.0	SSSE	VIA_TOP_BOT

### Filtering on a Column

Filtering a column allows one the ability to include or exclude data based on a wildcard. The text box below the any column header allows for a wildcard to be entered. This could be either text or numerical data. Simply enter in the wildcard and press the filter button next to the text box. The icon will change from disabled as shown to enabled looking as a dark blue. To disable, click on the icon a second time. Shown below is the entry of "0.1". The filter button has been set and is highlighted. The small down arrow in the lower right-hand corner of the column header allows for setting the filter

treatment. In this case it is set to "Greater Than", so all results less than 100mV are no longer displayed. As a note, the filter treatments "Matches Wildcard" and "Does Not Match Wildcard" can be used with text or numeric values. The other options can only be used with numeric values.

Stat Eye Height (V)	SW1:LENGTH (in)	CORNER	SX_VIADIFF1:V_MODEL
0.1			
0.117218			
0.118905			
0.120252			
0.121571			
0.128463	8.0	FFFE	VIA_TOP_SIG3_S
0.132584	10.0	SSSE	VIA_TOP_SIG3_B
0.134582	7.0	TTTE	VIA_TOP_SIG3_S
0.139108	11.0	TTTE	VIA_TOP_BOT
0.159254	7.0	FFFE	VIA_TOP_SIG3_S
0.159628	11.0	TTTE	VIA_TOP_SIG3_B
0.160139	6.0	SSSE	VIA_TOP_SIG3_S
0.161432	9.0	SSSE	VIA_TOP_BOT
0.166744	12.0	FFFE	VIA_TOP_BOT

Options for column Stat Eye Height (V):

- Rolled Up Treatment (<Mixed>)
- Filter Treatment (Greater Than)
- Matches Wildcard
- Does Not Match Wildcard
- Equals
- Does Not Equal
- Greater Than
- Greater Than Or Equal To
- Less Than
- Less Than Or Equal To
- Between

### Roll-up on a Column

Now we have the results set up to see only the eye height's above 100mV. The rollup function will collapse the rows of the table so that there is one row for each unique value in the associated column. A column can be rolled up by pushing on the roll up icon as shown in the figure below. The icon will then be enabled looking dark blue. To disable, click on the icon a second time. As with filtering data the user can choose how they wish to have the rolled-up data treated. This is done by selecting the small down arrow in the column header.

While keeping the filter on the "STAT Eye Height(V)" column, lets select the rollup on the "\$LENGTH" column, then set the "Rolled Up Treatment" to "Min, Max". This allows us to see the minimum and maximum "Stat Eye Height" for each of the corresponding lengths.

Stat Eye Height (V)	\$W1:LENGTH (in)	CORNER	\$X_VIADIFF1:V_MODEL
0.1			
0,0.117218			
0,0.235254			
0,0.184233			
0.0235868,0.282809			
0.0468437,0.160139	11.0	<Mixed>	<Mixed>
0.0580957,0.324423	6.0	<Mixed>	<Mixed>
0.0698921,0.204634	9.0	<Mixed>	<Mixed>
0.0807336,0.344932	5.0	<Mixed>	<Mixed>
0.120252,0.362541	4.0	<Mixed>	<Mixed>

Options for column Stat Eye Height (V):

- <Mixed>
- Vectorized
- Count
- CSV
- Mean
- Min
- Max
- Min,Max

Rolling up on "\$LENGTH", while filtering on "STAT Eye Height" reveals that some lengths (i.e. 12") only have one simulation that meet the eye height requirement of greater than 0.1V. The other is how some lengths (i.e. 9") have higher minimum and maximum than some shorter lengths. This is most likely due to the via model variable.

For reference the rollup treatments are:

**<Mixed>**: If there is more than one value in the table, cells that are being rolled up display <Mixed> in the rolled-up cell for this column.

- **Vectorized**: Vectorizes the values in the table cells that are being rolled up.
- **Count**: Displays the number of rows rolled up.
- **CSV**: Displays the unique values as a CSV (Comma Separated Value) list.
- **Mean**: Displays the Mean of all values rolled up (numeric data only).
- **Min**: Displays the minimum of all values rolled up (numeric data only).
- **Max**: Displays the maximum of all values rolled up (numeric data only).
- **Min/Max**: Displays the minimum and maximum values rolled up (numeric data only).

### Finishing the Analysis

To take this one step farther, we can start by filtering the "\$X\_VIADIFF1:V\_MODEL" with the "VIA\_TOP\_SIG3\_B". Then set the "Stat Eye Height(V)" rollup treatment to "min, max".


Stat Eye Height (V)	SW1:LENGTH (in)	CORNER	SX_VIADIFF1:V_MODEL
0.1			VIA_TOP_SIG3_B
0,0.0259293			VIA_TOP_SIG3_B
0,0.0580957			VIA_TOP_SIG3_B
0,0.0468437			VIA_TOP_SIG3_B
0.0235868,0.0773274			VIA_TOP_SIG3_B
0.0369111,0.090404	8.0	FFFE,SSSE,TTTE	VIA_TOP_SIG3_B
0.0548883,0.118905	7.0	FFFE,SSSE,TTTE	VIA_TOP_SIG3_B
0.0807336,0.121571	6.0	FFFE,SSSE,TTTE	VIA_TOP_SIG3_B
0.0967369,0.132584	5.0	FFFE,SSSE,TTTE	VIA_TOP_SIG3_B
0.117218,0.134582	4.0	FFFE,SSSE,TTTE	VIA_TOP_SIG3_B

From this view we can see that using the "VIA\_TOP\_SIG3\_B" (backdrilled via) in our simulation over corner process and various channel lengths results meets the Stat Eye Height requirement of 0.1V in only one case (the 4" length). One can continue this flow and look at the results for simulations with the other via models. One could relax the Stat Eye Height requirement to 0.05V and see which cases meet the criteria.

#### Data Mining with the Table Column Control

As we have used the Table Column Control in the earlier part of this example, let's look at it in more detail here. The Table Column Control is a powerful feature that allows one to set up and save preferences for column visibility, rollup and filter. It has the same capabilities as working directly from the Signal Integrity Viewer (what we previously did) but also has some added features that offer the user the ability to fully customize their viewer sessions.

To invoke the Table Column Control, select the gear icon in the first "Row" column of the Signal Integrity Viewer window. As a note, a Table Column Control session is unique to each tab (i.e., Network, Statistical and Time Domain in SLD). Setting up and saving a Table Column Control session can only be used in that specific tab on results. Also seen in the figure, below the Table Column Control gear icon is the "home" icon. This will only be visible after some change to the default view has been made. By selecting the home icon the view will be reset to default status, meaning all current filter, sort, rollup...etc. will be reset in the tab.

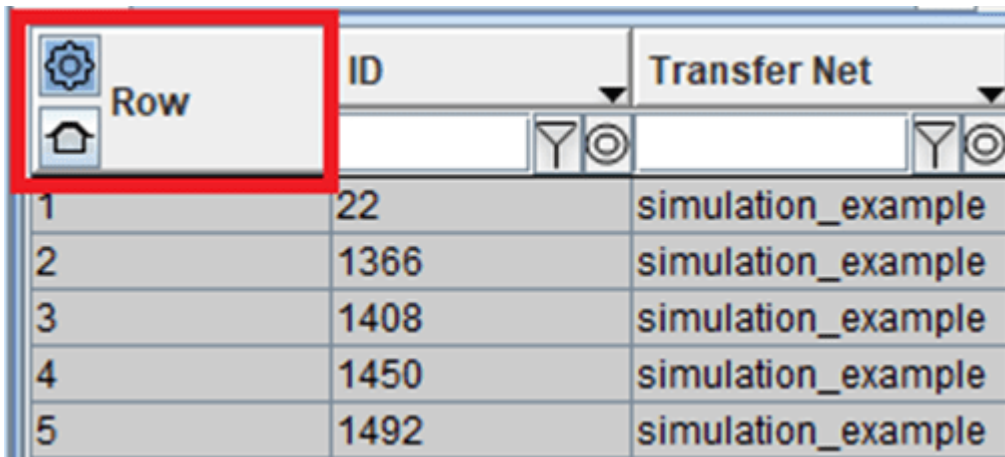


The image shows a screenshot of a data table interface. A red rectangular box highlights the top-left corner of the table, which contains a 'Row' control area. This area includes a gear icon for settings and a house icon for home. The table itself has three columns: 'ID', 'Transfer Net', and an unlabeled column. The data rows are numbered 1 through 5. The 'ID' column contains values 22, 1366, 1408, 1450, and 1492. The 'Transfer Net' column contains the value 'simulation\_example' for all rows. The unlabeled column contains a filter icon (a funnel) and a target icon (a circle with a dot) for each row.

	ID	Transfer Net	
1	22	simulation_example	
2	1366	simulation_example	
3	1408	simulation_example	
4	1450	simulation_example	
5	1492	simulation_example	

### Visualizing Columns

After simulation one might notice the seemingly endless number of columns in the reported results. One may wish to select certain columns for viewing while suppressing lesser relevant columns. One may also wish to re-order columns of data. With the Table Column Control visibility can be set for each column. The first column in the Table Column Control contains check boxes for each category of results. Here the view for a particular column of results can be enabled or disabled. Right mouse click in the table allows one to select "All Visible", "All Invisible" or "Reset All Visibility and Order".

 Table Column Control - Statistical

Selected Table View: <Default>

Right-Click on Table to Access Additional Functions.

Visible	Column Name	Column #	Rollu
Fixed	ID	1 (Fixed)	<input type="checkbox"/>
Fixed	Transfer Net	2 (Fixed)	<input type="checkbox"/>
Fixed	State	3 (Fixed)	<input type="checkbox"/>
Fixed	Transfer	4 (Fixed)	<input type="checkbox"/>
<input checked="" type="checkbox"/>		5	<input type="checkbox"/>
<input checked="" type="checkbox"/>		6	<input type="checkbox"/>
<input checked="" type="checkbox"/>		7	<input type="checkbox"/>
<input checked="" type="checkbox"/>		8	<input type="checkbox"/>
<input checked="" type="checkbox"/>		9	<input type="checkbox"/>
<input checked="" type="checkbox"/>		10	<input type="checkbox"/>
<input checked="" type="checkbox"/>		11	<input type="checkbox"/>
<input checked="" type="checkbox"/>		12	<input type="checkbox"/>
<input checked="" type="checkbox"/>		13	<input type="checkbox"/>
<input checked="" type="checkbox"/>		14	<input type="checkbox"/>
<input checked="" type="checkbox"/>	Stat RJ (ps)	15	<input type="checkbox"/>
<input checked="" type="checkbox"/>	Stat Timing Offset (ps)	16	<input type="checkbox"/>

- Clear All Wildcards
- Disable All Rollups
- Reset All Rolled Up Treatments
- Disable All Filters
- Reset All Filter Treatments
- Set All Visible
- Set All Invisible
- Reset All Visibility and Order

### Ordering Columns


Columns can be ordered by simply selecting the row, or rows and using the arrow keys in the top right corner of the Table Column Control window. For multi-selecting, hold the "Ctrl" key down while selecting each row. Arrows are for up/down and for top and bottom of the list.

Visible	Column Name	Column #	Rollup	Rolled Up Treatment	Filter	Wildcard	Filter Treatment
Fixed	ID	1 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
Fixed	Transfer Net	2 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
Fixed	State	3 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
Fixed	Transfer	4 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	# Errors	5	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	# Warnings	6	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Tmid Time (ps)	7	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Tmid Eye Height (V)	8	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Eye Area (V*ps)	9	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	UI (ps)	10	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Data Rate (Gbps)	11	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Symbol Rate (Gbaud)	12	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Stat BER	13	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard
<input checked="" type="checkbox"/>	Stat BER Floor	14	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>		Matches Wildcard

### Rollup


To select a column for rollup simply select the checkbox on that particular row. Next to the rollup checkbox is a pull-down menu for selecting rollup treatment. Rollup treatment options are the same as the rollup enabled from the Signal Integrity ViewerGUI. Rollup options are available to disable or reset the rollup by right mouse click on the table as shown in the figure below.

Visible	Column Name	Column #	Rollup	Rolled Up Treatment
Fixed	ID	1 (Fixed)	<input type="checkbox"/>	<Mixed>
Fixed	Transfer Net	2 (Fixed)	<input type="checkbox"/>	<Mixed>
Fixed	State	3 (Fixed)	<input type="checkbox"/>	<Mixed>
Fixed	Transfer	4 (Fixed)	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	# Errors	5	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	# Warnings	6	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Tmid Time (ps)	7	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Tmid Eye Height (V)	8	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Eye Area (V*ps)	9	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	UI (ps)	10	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Data Rate (Gbps)	11	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Symbol Rate (Gbaud)	12	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Stat BER	13	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Stat BER Floor	14	<input type="checkbox"/>	<Mixed>
<input checked="" type="checkbox"/>	Stat RJ (ps)	15	<input type="checkbox"/>	<Mixed>

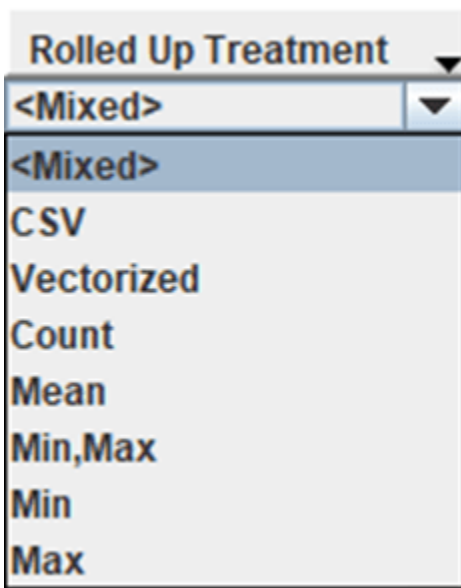


### Filter

To select a column for filtering select the checkbox on the row. Next to the checkbox is a box where the filtering wildcard can be entered. This can be a text or numerical entry. The pull-down menu next to the wildcard is for selecting filter treatment options. Filter options are available to disable or reset the filter by doing a right mouse click on the table as shown in the figure below. The filter treatments “Matches Wildcard” and “Does Not Match Wildcard” can be used with text or numeric values. The other treatment options can only be used with numeric values. To disable or reset all filtering, right mouse click on the table and select the desired filter option.

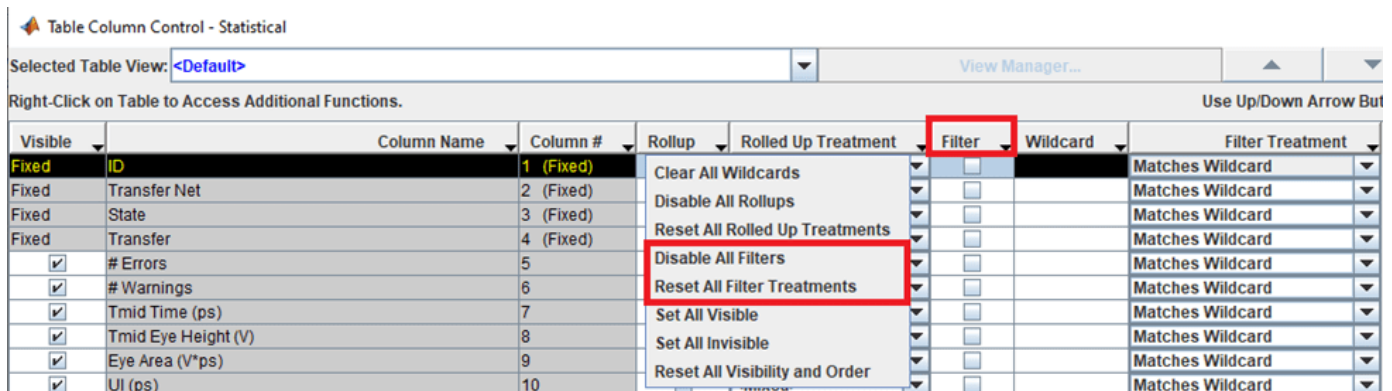



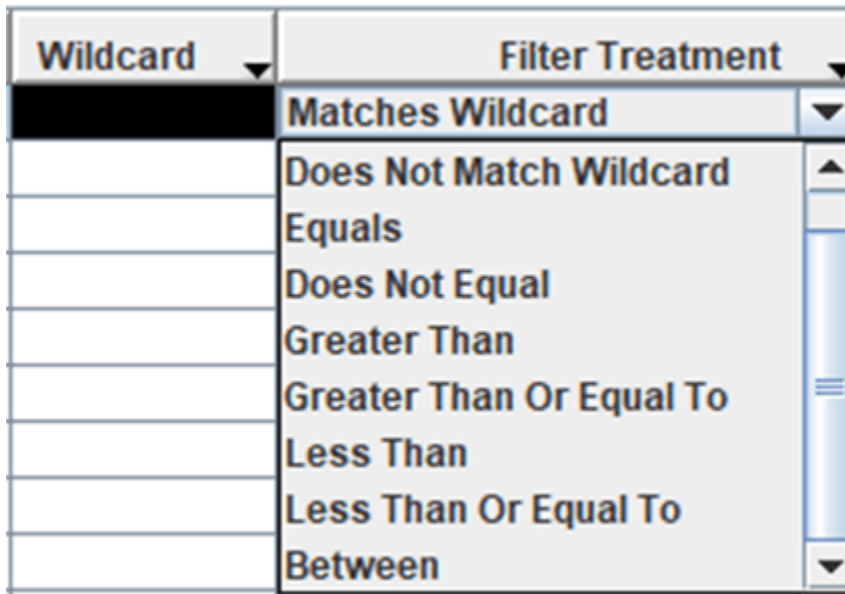

We have now covered the sort, filter and roll-up features of the Table Column Control. Try to use the Table Column Control to set up the analysis done earlier in this example.

### Saving a View

The views that are set up in the Table Column Control can be saved and used after simulations have been re-run or kept for use with other projects. Once a change has been made to the Table Column Control dialog the “Selected Table View” will change from “Default” to “Modified”. The view can then be saved to a unique name for later use. This is done by selecting the “View Manager” button in the top center of the dialog window.

Table Column Control - Statistical

Selected Table View: <Modified> View Manager...

Right-Click on Table to Access Additional Functions.


Visible	Column Name	Column #	Rollup	Rolled Up Treatment	Filter	Wildcard
Fixed	ID	1 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
Fixed	Transfer Net	2 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
Fixed	State	3 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
Fixed	Transfer	4 (Fixed)	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	# Errors	5	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	# Warnings	6	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Tmid Time (ps)	7	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Tmid Eye Height (V)	8	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Eye Area (V*ps)	9	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input type="checkbox"/>	UI (ps)	10	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Data Rate (Gbps)	11	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Symbol Rate (Gbaud)	12	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Stat BER	13	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Stat BER Floor	14	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Stat RJ (ps)	15	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Stat Timing Offset (ps)	16	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Stat Path Delay (ns)	17	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Stat Eye Height (V)	18	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Stat Eye Margin (V)	19	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Stat Outer Eye Height (V)	20	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Stat Eye Width (ps)	21	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	
<input checked="" type="checkbox"/>	Stat Threshold Eye Width (ps)	22	<input type="checkbox"/>	<Mixed>	<input type="checkbox"/>	

Manage Table Views

View Name	Location
Stat_Eye_Mining	Interface

Buttons: Delete, Rename, Save Current..., Close

The “Manage Table Views” dialog will show any currently saved views. There are options delete or rename one existing views or save the current view. When saving the current view one has two options; “User” and “Interface”.

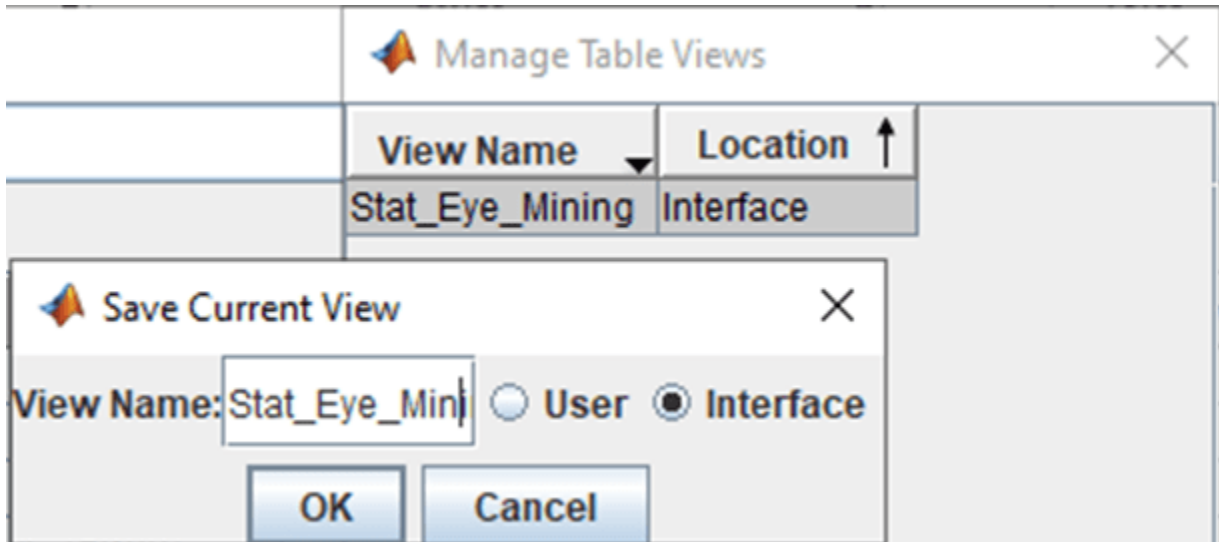

The “User” option corresponds to the user and is saved in the user’s local install area. It will be available to the user during the present and any subsequent Signal Integrity Viewersessions regardless of project. The “interface” view will be saved in the interface of the project and is only available when that project interface is open and simulation results are available.

# Configure Parallel Link

---

- “Simulation Parameters Used in Parallel Link Design” on page 6-2
- “Specify Corner Conditions in Parallel Link Design” on page 6-6
- “Stimulus Patterns in Parallel Link Design” on page 6-9

## Simulation Parameters Used in Parallel Link Design

You can set parameters that control how a simulation is run in **Parallel Link Designer** using the Simulation Parameters dialog from the **Setup > Simulation Parameters** menu item. This dialog contains a table with parameters, their values, and the part of the analysis flow they affect. You can sort the columns by clicking on the table headers.

### Non-STAT Mode SPICE Simulation

These parameters affect the SPICE simulation in non-STAT mode.

Parameter	Description
Rise Time	Edge time of the stimulus input to the driver in the SPICE simulation. It can be overridden on a model-by-model basis. The default is 100 ps.
Tran Extension	Add time to the simulation. The default simulation time in the SPICE ".tran" statement is one bit time plus 4 ns past the last transition in the stimulus. This is to ensure that the receiver transition of the last stimulus transition will occur within the simulation time. For very long interconnects of approximately 24 inches or more, you may need to extend simulations further. The default is 0 ns.
Tran Time Step	Initial time step in the SPICE ".tran" statement and the plotting time step for pre-layout and post-layout transfer net simulations. The default is 20 ps.
Max Tran Time Step	Maximum time step to use during analysis. The default is 20 ps.
Stdload Tran Time Step	Initial time step in the SPICE ".tran" statement and the plotting time step for standard load simulations. The default is 20 ps.

### STAT Mode SPICE Simulation

These parameters affect the SPICE simulation in STAT Mode. STAT Mode is a simulation mode that uses a statistical engine to perform network characterization, statistical and time domain simulations. For more information, see "Using STAT Mode" on page 7-6.

Parameter	Description
STAT Rise Time	Edge time of the stimulus input to the driver in the SPICE simulation. It can be overridden on a model-by-model basis. The default is 1 ps.
STAT Tran Time Step	Initial time step in the SPICE ".tran" statement and the plotting time step for pre-layout and post-layout transfer net simulations. The default is 2 ps.
STAT Max Tran Time Step	Maximum time step to use during analysis. The default is 1 ps.

### Waveform Analysis Parameters

These parameters affect waveform analysis.

Parameter	Description
Skip Data Edge	Number of edges to skip at the beginning of waveforms of Type Data. Skipped edges are not checked for overshoot or quality violations and are not used for etch delay calculation. The default is 1.
Skip Strobe Edge	Number of edges to skip at the beginning of waveforms of Type Strobe. Skipped edges are not checked for overshoot or quality violations and are not used for etch delay calculation. The default is 1.
Skip Clock Edge	Number of edges to skip at the beginning of waveforms of Type Clock. Skipped edges are not checked for overshoot or quality violations and are not used for etch delay calculation. The default is 6.
Skip Time	<p>Amount of time to skip at the beginning of a waveform before starting waveform processing. No overshoot or waveform quality checks are done in the skipped time and any edges in skipped time are ignored for etch delay calculation. The default is 0 ns.</p> <p>In cases where a pulse width is reported (such as Derating Details), data will be reported for the edge before the first edge skipped. For example, if three edges are skipped there will be data for edge number three in some reports.</p>


## STAT Mode Analysis Parameters

These parameters affect STAT mode analysis.


Parameter	Description
Samples Per Bit	The number of time steps in a bit time. Defines the time step used in the STAT Mode “.tran” statement.
Max Channel Delay	User-supplied value for the maximum length of the channel impulse response. Goes into FFT block size calculation, which also defines the message length used for statistical analysis.
Target BER	An array of error rates at which eye height and width are to be measured. The array is sorted smallest to largest on focus change. If fewer than four values are entered the results will include four values, the additional values will be created by multiplying the last value by 1e3.
Record Start	Time at which to start saving waveforms in a STAT Mode time domain simulation.
Record Bits	Number of bits of the waveform to save.
Waveform Analysis Bits	The number of bits from the STAT Mode simulation to use for Waveform Analysis.
Minimum Ignore Bits	<p>STAT Mode time domain waveform analysis will start at this time in the simulation.</p> <p>Allows time for all of the AMI models to reach steady state. This is used if models do not define Ignore Time set in the AMI model, or the defined Ignore Time is less than this value. In other words, the larger of this value or a value from a model is used as the Ignore Bits for the analysis.</p>
Time Domain Stop	The stop time of the STAT Mode time domain simulation.

Parameter	Description
Block Size	The number of samples in a single waveform segment in a time domain simulation. This sets the granularity of the parameter outputs returned by AMI models. Also used in determining FFT block size.
Output Clock Ticks	If yes, then QCD Time Domain Simulation will output the recovered clock ticks to a file.
STATify	Control how statistical techniques are applied to time domain simulations and Getwave-only models. The values are: <ul style="list-style-type: none"> <li>• TD_Extrapolation: Extrapolates the bathtub curve to account for the effects of ISI at lower probabilities than can be derived from the time domain simulation alone. When this parameter is set to Yes, STAT mode will do the following: <ul style="list-style-type: none"> <li>• Run a PRBS pattern at the end of the time domain simulation.</li> <li>• Generate a pulse response for the equalized channel from the PRBS data.</li> <li>• Generate a statistical eye from the pulse response.</li> <li>• Use the statistical eye to extrapolate the bathtub curves.</li> </ul> <p>For the extrapolation to be accurate the clock recovery loop and DFE (if any) must be settled at the end of the time domain analysis.</p> </li> <li>• Stat_with_Getwave: Uses a PRBS and derived pulse response from time domain analysis as the basis for statistical analysis. Allows statistical analysis to be done for models that are Getwave-only.</li> <li>• Both: Perform both TD_Extrapolation and Stat_with_Getwave.</li> <li>• None: Do not perform TD_Extrapolation or Stat_with_Getwave.</li> </ul>
Step Response Type	Step response used by STAT mode. The app supports rising, falling, and dual step responses.
SPICE Ignore Bits	The time before the start of the SPICE step in the STAT Mode step response simulation. It is either in UI or in units of seconds.
Include IBIS Package	Include (Yes) or do not include (No) IBIS Package.

This figure demonstrates the relationship of several STAT Mode time domain simulation parameters.

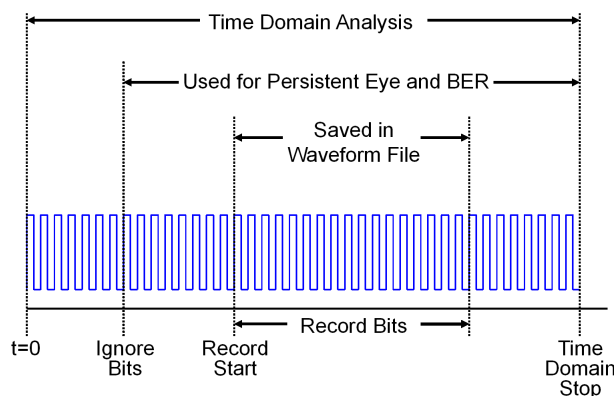

Two of the STAT mode analysis parameters, Max Channel Delay and Block Size, determine the FFT block size used in network characterization and statistical analysis. The actual FFT block size is rounded up to the nearest power of two.

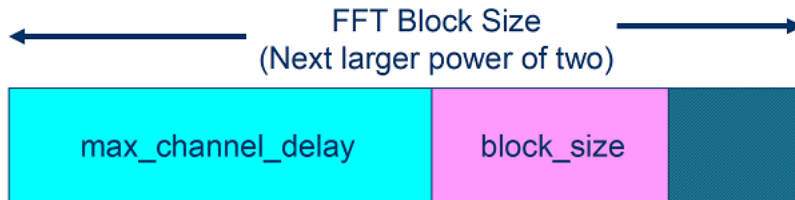

## See Also

### More About

- “Specify Corner Conditions in Parallel Link Design” on page 6-6
- “Stimulus Patterns in Parallel Link Design” on page 6-9
- “Model Jitter and Noise While Designing Parallel Link” on page 11-2

## Specify Corner Conditions in Parallel Link Design

Corner conditions are used to define the process corners. In the process corners, the parameters are within the specified range for that parameter but outside the range of normal operations. You can specify corner conditions using the Edit Corners Settings dialog box from **Setup > Corner Conditions**.

Type:	Slow Corner (SS):	Typical Corner (TT):	Fast Corner (FF):
Temperature (deg C)	100	25	0
Voltage Factor:	.95	1.0	1.05

Type:	Slow Corner (SE):	Typical Corner (TE):	Fast Corner (FE):
Tpd Factor:	1.1	1.0	0.9
Z0 Factor:	.90	1.0	1.1

The corner conditions settings include default characteristic impedance ( $Z_0$ ) in ohms, default propagation delay ( $T_{pd}$ ) in ps/in, and the length of the shortest transmission line to simulate (TLine) in ps. You can also specify the factor by which to scale the impedance of all the vias using the **Via Factor** parameter.

### IC Environment Corners

The IC Environment Corners area contains the temperature parameter for each corner. This app uses it as the .TEMP parameter in the SPICE simulations. The temperature parameter does not affect IBIS buffer models.

The voltage factors are used to scale all voltage sources in the netlist. The typical corner value is scaled by the scaling factor to create the values for the slow and fast corners. For voltage sources, the value entered in the schematic or specified for a voltage net in the post-layout is scaled by the scaling factor.

I/O buffer voltages can use the three values specified in the IBIS [Voltage Range] parameter for the three corners or use the typical value from the [Voltage Range] and scale it.

### Etch Corners

You can use the Etch Corners area to specify scaling factors for the  $Z_0$  and  $Tpd$  parameters of transmission line models. Scaling factors account for manufacturing variation in the PCB. Both ideal and lossy transmission line models are scaled.

Lossy transmission line models are scaled by computing the values of  $Z_0$  and  $Tpd$  from the typical corner L and C values. The computed  $Z_0$  and  $Tpd$  are then scaled by the scaling factors to create the  $Z_0$  and  $Tpd$  values for the slow and fast corners. The slow and fast corner L and C are computed from the slow and fast  $Z_0$  and  $Tpd$ . For more information, see “Model Lossy Transmission Lines in Parallel Link Designer” on page 14-7.



## Impact of Corner Settings

The elements that are affected by corner settings are:

- **I/O buffer voltages:** If scaling is enabled for I/O buffer voltages, the typical value of the IBIS [Voltage Range] parameter is multiplied by the scaling factor for the IC corner selected.
- **I/O buffer data:** The data that is used for each process corner is summarized in Process Corner Model Data Usage.
- **Voltage sources on schematics:** The voltage parameter of the element is multiplied by the scaling factor for the IC corner selected.
- **Voltage nets in post-layout:** The voltage set on the net on import of the board is multiplied by the scaling factor for the IC corner selected.
- **Ideal transmission lines (SPICE T elements):** The  $Z_0$  and  $Tpd$  parameters are multiplied by the  $Z_0$  and  $Tpd$  factors for the selected corner.
- **Lossy transmission lines (SPICE W elements):** The models without explicit slow and fast corner models in the library are scaled using the  $Z_0$  and  $Tpd$  factors in Corner Conditions. Models that have  $\_te$  (typical),  $\_fe$  (fast) or  $\_se$  (slow) appended to the model name are used for the appropriate etch corner if they exist.
- **SPICE subcircuits:** file and subcircuit names can contain {etch} and {corner}. If present, the current corner is substituted.

## Process Corner Model Data Usage

IC Process Corner	Model or Setting	Data Used
FF	IBIS buffer in HSPICE	typ=fast HSPICE option
	IBIS buffer in IsSPICE4	IBIS maximum IV and VT data
	HSPICE buffer	HSPICE FF wrapper
	Temperature	FF Temperature from Corner Conditions
TT	IBIS buffer in HSPICE	typ=typ HSPICE option
	IBIS buffer in IsSPICE4	IBIS typical IV and VT data
	HSPICE buffer	HSPICE TT wrapper
	Temperature	TT Temperature from Corner Conditions
SS	IBIS buffer in HSPICE	typ=slow HSPICE option
	IBIS buffer in IsSPICE4	IBIS minimum IV and VT data
	HSPICE buffer	HSPICE SS wrapper
	Temperature	SS Temperature from Corner Conditions

## See Also

## More About

- “Simulation Parameters Used in Parallel Link Design” on page 6-2

- “Stimulus Patterns in Parallel Link Design” on page 6-9
- “Model Jitter and Noise While Designing Parallel Link” on page 11-2

## Stimulus Patterns in Parallel Link Design

You can specify stimulus patterns independently for each transfer net type (Data, Clock and Strobe) or designator using the **Parallel Link Designer** app. To create and manage stimulus patterns, launch the Stimuli dialog box from **Setup > Stimulus** from the app toolbar.

The Stimuli dialog box has a table of stimulus patterns with columns for the name, length in bits and description of each stimulus pattern. You can edit, delete, copy, or add new stimulus patterns. There are three default stimulus patterns for each transfer net:

Transfer net type	Stimulus pattern
Data	default_data
	default_data_victim
	default_data_aggressor
Clock	default_clock
	default_clock_victim
	default_clock_aggressor
Strobe	default_strobe
	default_strobe_victim
	default_strobe_aggressor


You cannot delete or rename the default stimuli, only edit their patterns. The victim and aggressor patterns are used in pre-layout coupled/SSO (widebus) simulation mode.

The `default_data`, `default_clock` and `default_strobe` patterns are used in pre-layout and post-layout simulations. The Transfer Net Type controls the stimulus used for a simulation. The default stimulus patterns can be edited and can be up to 4000 bits long.

In pre-layout analysis each designator can have its own stimulus. You can create and use new stimulus patterns for individual designators.

### Editing Stimulus Patterns

You can create a new stimulus or edit an existing one by using the Stimulus Editor dialog box. To access the Stimulus Editor dialog box, first open the Stimuli dialog box by double clicking on a designator symbol and clicking the **Stimulus** button.

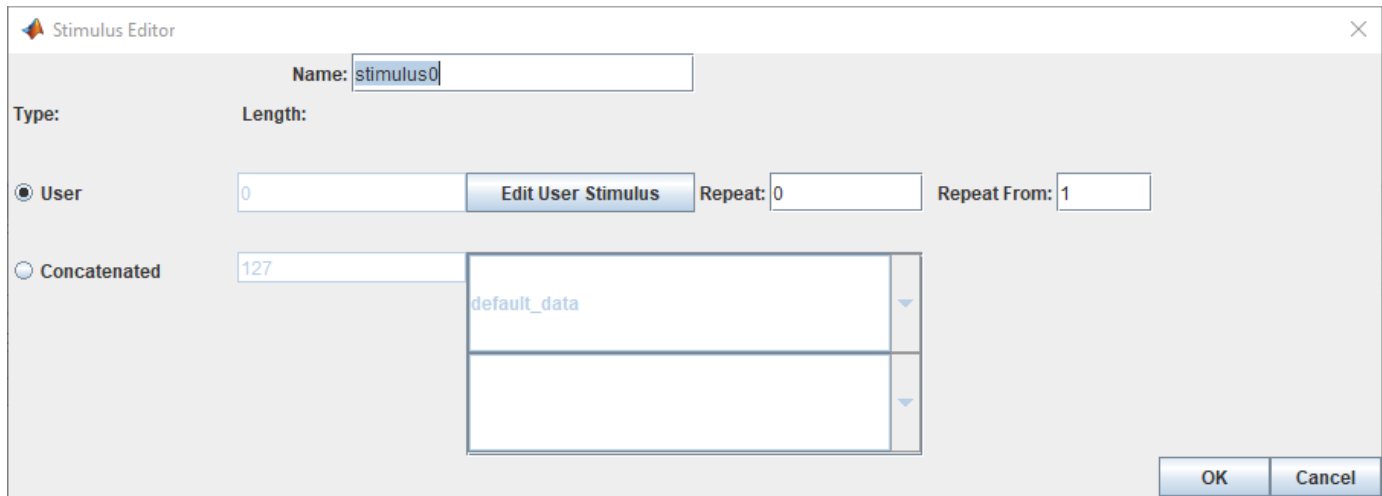

A Parallel Link Designer stimulus can be of two types:

- User — user defined series of ones and zeroes.
- Concatenated — one or more User stimulus patterns combined sequentially.

Each stimulus has a name. To create a User stimulus, select **User** and click **Edit User Stimulus** to launch the User Stimulus Editor dialog box.

To create a Concatenated stimulus, select **Concatenated** and then select one or more stimulus names in the table. In the simulation netlist the stimuli is concatenated with the stimulus at the top of the list appearing first in the netlist. The **Length** parameter shows the length of the concatenated stimuli.

## User Stimulus Editor

The User Stimulus Editor dialog box is used to create a user defined stimulus. You can directly type in the ones and zeroes in the main window. You can also add a specific number of ones, zeroes or zero-one sequences. After completing entering your desired sequence, click **OK** to return to the Stimulus Editor dialog box. The Stimulus Editor dialog box contains the following parameters about the User stimulus:

- **Length** — the length of the pattern created in the User Stimulus Editor.
- **Repeat** — the number of times to repeat the pattern. For a pattern of length  $n$ , setting **Repeat** to 0 results in a pattern of length  $n$ , setting **Repeat** to 1 results in a pattern of length  $2n$  and so on.
- **Repeat From** — the bit position to repeat from. Bit 1 is the first bit in the pattern.

## PDA Stimulus

You can use the **Parallel Link Designer** app to determine the worst-case pattern through Peak Distortion Analysis (PDA) and use that stimulus for a designator by selecting **PDA** in the Designator Element Properties dialog box. When PDA stimulus is selected, the **Generate SPICE** process during simulation first creates step response simulations. The step response simulations are processed to find the worst-case pattern. The normal Transfer Net simulations are then generated using the PDA pattern as the stimulus.

The Generate SPICE Log (**Logs > SI/Timing SPICE Generation Log**) and Generate SPICE Report (**Reports > SI/Timing SPICE Generation Report**) have details and any errors and warnings from the process. The log is also included in the Errors & Warnings dialog box.

## Using Stimulus Pattern

To specify a stimulus pattern (other than the default) on an individual designator basis, open the Designator Element Properties dialog box by double clicking on any designator in the Pre-Layout Analysis tab. You can also access the dialog box by clicking on the **Properties** button in the Transfer Net Properties dialog box in the pre- or post-layout. In the Designator Element Properties dialog box, select the desired stimulus pattern from the Stimulus drop-down menu.

## See Also

### More About

- “Simulation Parameters Used in Parallel Link Design” on page 6-2
- “Specify Corner Conditions in Parallel Link Design” on page 6-6
- “Model Jitter and Noise While Designing Parallel Link” on page 11-2



# Pre-Layout Analysis of Parallel Link

---

- “Pre-Layout Analysis of Parallel Link” on page 7-2
- “Customize Parallel Link Project for Pre-Layout Analysis” on page 7-5
- “Results of Pre-Layout Analysis in Parallel Link” on page 7-8

## Pre-Layout Analysis of Parallel Link

Pre-layout analysis provides you with an integrated signal integrity, timing and crosstalk analysis environment to determine system-level noise and timing margins. The pre-layout analysis environment is used to generate design guidelines for your board layouts, package layouts, connectors and cabling. From the Pre-layout tab, you may perform simple or complex solution space analysis by varying elements, such as: topology, termination, voltage, temperature, process (silicon and etch), models, UIs, corner conditions, populations, and coupling.

A schematic represents an uncoupled net or a coupled net. Uncoupled nets can be thought of as net classes. The **Parallel Link Designer** app stores this information as a transfer net, which is used as the underlying data structure for all of the analysis. The transfer net data can be re-used in post-layout and other projects.

The Pre-Layout Analysis tab consists of three major panels:

- *Schematic Panel* — This is where you graphically create and edit the circuit schematic. You can also define the data from the sheet simulation control settings.
- *Solution Space Panel* — This is where you enter your solution space values for performing parameter sweeps.
- *Status Panel* — This panel displays the simulation counts and schematic set information.

The screenshot displays the Parallel Link Designer software interface. The main window is titled "Parallel Link Designer: interface2.edk Project: C:\PLD\project1". The interface is divided into several panels:

- Pre-Layout Analysis Panel:** Contains a "Sheet Simulation Control" gear icon and a "Schematic Panel" showing a circuit diagram. The schematic includes a voltage source (generic\_1\_2V), a resistor (R1 \$RSeriesTerm), a wire (W1 \* 0\_simple\_50ohm), and a target (target1 generic\_1\_2V).
- Solution Space Panel:** A table for defining solution space parameters. It includes columns for Transfer Net, Variable, Type, Format, Variation Group, and Value 1 through Value 4. The table is populated with parameters for sheet1, such as Etch, Process, Resistance, and W Length.
- Status Panel:** Displays simulation counts and other information. It shows "Reference Set: set1", "Unset", "Current Set", "STAT Simulation Count: 0", and "Base SPICE Simulation Count: 6".

Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:	Value 4:
sheet1	Etch	Corner	List	Corners	TE (Typ)			
sheet1	Process	Corner	List	Corners	TT (Typ)			
sheet1	\$RSeriesTerm	Resistance	Soft Range	<none>	50ohm	75ohm		
sheet1	\$W1.Length	W Length	Soft Range	<none>	2.0in	4in	6in	



Double clicking a symbol on a schematic sheet launches an Element Properties dialog box for that symbol type. Each symbol type has a unique set of properties that are set from the Element Properties dialog box. If the properties are parameters that can be swept, that is also controlled from the Element Properties dialog box.

## Schematic Elements

**Designator** — The I/O buffer is represented by a designator in the schematic. A schematic must have at least one designator that can be a driver. The buffers can be single-ended or differential. Buffer symbols has a default I/O buffer model after being placed on the schematic. You can change the buffer model for a designator in three different ways: from the Edit Designator Properties dialog, from the Select IBIS File & Model dialog, and from the default model menu items. IBIS files must be imported into the libraries before they can be used. HSPICE models must be wrapped and put in the libraries before they can be used.

**Transmission Line** — There are two types of transmission lines: ideal transmission lines and lossy transmission lines. Ideal transmission line models have two parameters: Impedance ( $Z_0$ ) and delay ( $T_{pd}$ ). Lossy transmission lines have a frequency dependent RLGC model that is created by a 2-D field solver. Lossy transmission lines can be single-ended or differential..

**Via** — You can create via models based on a stackup and via physical parameters. Via models can be single-ended or differential. The first time a via symbol is placed on a sheet the default stackup is created. A dialog launches to allow the number of signal layers in the default stackup to be specified.

**S-Parameters** — You must import the S-Parameter files into the **Parallel Link Designer** app before you can use them in schematic sheet. After a symbol has been placed on a schematic, the port map can be edited by right clicking on the symbol and selecting Edit Port Map from the menu.

**Passive Subcircuits** — You must manually import the SPICE subcircuit models for passive elements in the **Parallel Link Designer** app libraries before you can place them on the schematic.

**Probe** — Voltage probe can be single-ended or differential. When a probe symbol is placed on a schematic it automatically creates a waveform node in the waveform file at the probed location. The waveform at the node can be viewed in the **SI Viewer** app.

## Solution Space

The Solution Space panel is used to create parameter sweeps. There are variables that are always part of the solution space. Other variables in the table are created when parameters are set to be swept. The values can be typed into fields, lists or range/steps depending on the variable type.

The solution space panel can be in one of two modes:

- *Permutation mode* — Each row is treated as an independent variable unless they are in the same variation group. The number of simulations represented by the solution space is all of the combinations of all of the variable values.
- *Case mode* — Each column represents a simulation case. The number of simulations represented by the solution space is the number of columns.

## **Sheet Simulation Control**

You can specify the specify the simulation state, unit interval (UI), topology, transfer net type, AC noise type, and the number of aggressors for SSO/coupled mode analysis of each schematic sheet using the sheet simulation control symbol.

## **See Also**

### **More About**

- “Customize Parallel Link Project for Pre-Layout Analysis” on page 7-5
- “Results of Pre-Layout Analysis in Parallel Link” on page 7-8

## Customize Parallel Link Project for Pre-Layout Analysis

You can modify the schematic elements to customize your designs in the **Parallel Link Designer** app.

### Using I/O buffers

An I/O buffer is represented by a designator. You change the buffer model for a designator in three ways:

- *Edit Designator Part/Pins dialog box*

Right clicking on the designator and selecting **Edit Designator Part/Pins** opens the Edit Designator Part/Pins dialog box. The **Designator** parameter allows the designator name to be changed. The **Part Name** parameter lists the parts in all libraries. When a specific part is selected in the dropdown menu, the IBIS file name referenced by that part is shown in the **IBIS File** parameter. The IBIS component name for the selected part is shown in the **IBIS Component** parameter. The table on the left shows all of the pins in the IBIS component. To associate a pin or pins with the designator select the pin or pins on the left and click one of the arrow buttons between the two tables. The pins in the table on the left can be filtered using the **Wildcard Filter** parameter. To add a column that shows the name of the transfer net that uses the pins, select **Generate Used Pin Information**.

- *Select IBIS File & Model dialog box*

Right clicking on the designator and selecting **Select IBIS Model and File** opens the Select IBIS File & Model dialog box. You can select an IBIS file from the table provided, or import your own. You can also select one or more pins from the table of pins in the selected IBIS files.

- *Default model*

To assign a default model to a designator, right click on the designator and select **Use Default Driver**, **Use Default Receiver** or **Use Default I/O**.

### Using Transmission Lines

The app uses two types of transmission lines:

- *Ideal transmission lines*

Ideal transmission line models have two parameters: Impedance ( $Z_0$ ) and delay ( $T_{pd}$ ). These parameters are set from the Element Properties dialog box for ideal transmission lines. Double click on an ideal transmission line symbol on the schematic to launch the Element Properties dialog box. There are columns for Impedance and Delay/Distance and checkboxes to sweep the parameters. Checking a sweep checkbox creates a variable in the solution space for the parameter.

The model on the schematic is the model for the typical etch corner. If other etch corners are simulated the  $Z_0$  and  $T_{pd}$  parameters are scaled according to the corner conditions specified in the Corner Conditions dialog box. See “Specify Corner Conditions in Parallel Link Design” on page 6-6 for more information.

- *Lossy transmission lines*

- The lossy transmission line have a frequency dependent RLGC model that is created by a 2-D field solver.

The app has a field solver with a transmission line editor for entering a cross-section. The transmission line editor can be used to create models in the libraries or to edit the model for a symbol. For more information, see “Model Lossy Transmission Lines in Parallel Link Designer” on page 14-7.

To associate a model in the library with the transmission line, right click on the symbol and choose **Select T-Line Model**. You can edit the default model by right clicking on the symbol and choosing **Edit T-Line Model**.

## Using Vias

You can create via models based on a stackup and via physical parameters. Via models can be single-ended or differential. The first time a via symbol is placed on a sheet the default stackup is created. A dialog launches to allow the number of signal layers in the default stackup to be specified. For more information, see “Via and Stackup Management in Parallel Link Project” on page 8-9.

## Using S-Parameters

S-Parameter files must be imported into the app before being used on a sheet. After importing and adding the S-Parameter to your schematic, you can edit the port map by right clicking on the S-Parameter symbol and selecting **Edit Port Map**.

## Using STAT Mode

STAT Mode is a simulation mode that uses a statistical engine to perform network characterization, statistical and time domain simulations. The simulation methodology is derived from the IBIS-AMI specification for performing high speed channel simulations with IBIS-AMI models. STAT mode can also be used to simulate any type of buffer models (IBIS or SPICE) to analyze the response and performance of a network through statistical and time domain analysis.

The app performs network characterization using HSPICE to determine the network's response to a step input it then post-processes that information to derive the network transfer function. The transfer function is used by the statistical engine to determine the statistical eye along with a bit error ratio (BER) and other data. Statistical analysis is based on an LTI (Linear Time Invariant) network assumption along with LTI equalization (if supported by the model).

Time Domain Analysis uses the same network characterization results as statistical along with a bit sequence to derive the output waveform, persistent eye, BER estimate and other data. The persistent eye is the amplitude statistics accumulated from a specific time domain waveform. It is accumulated by triggering using an ideal recovered clock in exactly the same way that an eye diagram is accumulated in a modern digital sampling scope. Unlike statistical analysis time domain analysis is a bit-by-bit simulation that can be used to analyze the network with any non-LTI behavior taken into account.

The STAT Mode control is in the Sheet Options area of the solution space panel.

## **See Also**

### **More About**

- “Pre-Layout Analysis of Parallel Link” on page 7-2
- “Results of Pre-Layout Analysis in Parallel Link” on page 7-8

## Results of Pre-Layout Analysis in Parallel Link

The **Parallel Link Designer** app produces one or more reports and logs for each simulation and process you run.

The tabs within a report are organized to aid in the process of progressive discovery. The first tab is the log tab, providing a progress summary of the analysis and its errors and warnings. The other tabs contain summaries of the data and successively more detailed information, letting you track down a particular result to a specific simulation file and transition number or time.

### Validation Reports

Validation reports indicate the syntax errors in the data. When relevant, the reports provide the corresponding part name, IBIS file and component names, and timing file and model names.

Report	Description
Validation Summary	Number and location of warnings and errors.
Part Errors	Errors in the part properties file.
IBIS Errors	Syntax errors and omissions in the IBIS files. The report includes the signal name, model name, and number of the pin of the component in the IBIS file, and the IBIS model type for the model in the IBIS file.
Timing Errors	Syntax and consistency errors and omissions in the timing file data.
IBIS Timing Errors	Inconsistencies between IBIS components and timing models data. The report includes information about the pin of the component in the IBIS file, including the signal name, model name, timing model name, number, and I/O type. The report also includes the IBIS model type for the model in the IBIS file.
Coverage Warnings	Parts or pins in parts that are not referenced in the transfer netlist or timing model.
Transfer Net Summary	Details on each transfer net such as whether the type of the net is data, clock, or strobe, whether the net is differential or single-ended, and the number of nodes. This report also lists information on the clock, noise, and probe points.
Part Summary	Details on each part.
Model Overview	Lists every signal integrity, HSPICE, and IBIS parameter or extension associated with each model in the design. This includes model name, corner and mode information, waveform DRC and timing extensions among other parameters.
Part Pin Summary	Summary of part transfer nets and timing pin definitions.
Differential Pin Summary	Lists the differential pins and components associated with each part.
Timing Delay Summary	Summary of all output delays and setup and hold statements in each timing model.
Model Details	Lists most of the waveform DRC rules and timing levels used by the product. The report includes the actual parameter used (following the precedence rules) and the value assigned to that parameter.

Report	Description
Transfer Net Errors	Inconsistencies between transfer nets, IBIS components and timing models. The part, IBIS and timing files listed are not necessarily where the error occurred, but simply a listing of all files involved in the error checking.

## Waveform and Timing Report

The waveform and timing report summarizes the waveform analysis and timing results for both pre-layout and post-layout simulations.

Report	Description
Waveform Summary	Number of errors and warnings found during waveform analysis.
Waveform Fatal	Lists any fatal waveform error found on any edge during waveform processing. Fatal errors are errors that cause the inability to generate any waveform or timing data at all. This tab will only appear if there are fatal violations of the DRC rules.
Waveform Quality	Lists violations of waveform rules as applied to each edge. The product applies a number of waveform rules to each edge to verify that the transition meets various IC vendor AC specs including edge rate, ringback and monotonic (clock nets). If the transition violates any of these rules, the timing of the transition may be suspect.
Waveform Overshoot	Lists violations of these waveform overshoot rules. Overshoot does not affect the signaling operation of an I/O buffer but can affect the lifetime of an IC. Overshoot can occur in two ways: when the waveform instantaneously exceeds absolute overshoot limits set in the IBIS model, and when the waveform exceeds a lesser overshoot voltage limit for more than a prescribed time.
Eye Rollups	Lists a summary of eye details for each node in each transfer net.
Eye Details	Eye information for each receiver node in each simulation.
Derating Details	Details of slew-rate derating calculations. This tab will be present if one or more models contain slew rate derating tables.
Statistical	Variables and results from the statistical analysis simulation (STAT mode only).
Time Domain	Variables and results from the time domain analysis simulation (STAT mode only).
Xtalk Contours	Crosstalk and eye heights of the widebus sheets that have been simulated.
Waveform Margin by TNET	Summary of the waveform margins for each transfer net.
Waveform Margin by Variation	Summary of the waveform errors (if any) and waveform DRC margins associated with each simulation.
Model Overview	Summary of the data for each IBIS model used in the simulation. The report includes the measurement thresholds and the parameters that are used for each threshold.

<b>Report</b>	<b>Description</b>
Mask By Channel	Available when the analysis is defined using TiVW and ViVW (DDR4 and DDR5).
Mask By Receiver Corner	Available when the analysis is defined using TiVW and ViVW (DDR4 and DDR5).
Mask by Driver Receiver Corner	Available when the analysis is defined using TiVW and ViVW (DDR4 and DDR5).
Mask Training Details	Available in post-layout when the analysis is defined using TiVW and ViVW (DDR4 and DDR5).
Mask Eye Details	Available when the analysis is defined using TiVW and ViVW (DDR4 and DDR5).
Timing	Rolls up the By Variation Details tab by combining all transitions in the same transfer net.
By Transfers	Rolls up the By Variation tab by combining identical transfers (same driver and receiver).
By Variation	Includes setup margin, hold margin, etch delay, AC noise, transfer net, and extended net details.
By Variation Details	Contains the setup and hold margins for both rising and falling edges at each receiver in each simulation.
By Variation Details Summary	Available only in post-layout.  This tab contains two rows for each transfer net in the By Variation Details Summary Tab. One has the smallest setup margin for that transfer net, the other has the smallest hold margin for that transfer net.
By Driver	Rolls up the By Variation tab by combining identical drivers.
By Receiver	Rolls up the By Variation tab by combining identical receivers.
Synchronous Details	Contains the setup and hold margin for rising and falling data edges in each simulation.
Source Synchronous Details	Contains the setup and hold margin for rising and falling data edges in each simulation.
Dynamic Clock Skew	Lists the skews between the clock pins used in synchronous timing analysis.
Dynamic Clock Skew Details	Lists the source pins and calculations that are used to create the skews between the clock pins used in synchronous timing analysis.
No Strobe Details	Contains the details of source-synchronous constraints that do not have a strobe.
Coupling Pushout	Contains the coupling effects on timing.
Coupling Noise Tab	Contains the voltage variation on victim nets caused by coupling.
Edge Details	Summarizes each edge in each simulation.
Timing Waveform Margin	Rolls up timing margins, waveform DRC violations and waveform margins for each transfer net.
Model by Designator	Contains information about nets (transfer and extended), designator, parts, IBIS model, and timing model.



Report	Description
Model Details	Contains most of the waveform DRC rules and timing levels used by the product. The actual parameter used (following the precedence rules) and the value assigned to that parameter.

## Assignment Report

Assignment reports contains the assignment summary report of transfer nets.

Report	Description
Assign Netlist	Complete netlist with model data for each pin.
Swizzled Nets	List of nets whose connections appear to be incorrect. The tool looks at the logical pin names on all pins connected to a net and looks for inconsistencies that may indicate swapped bits of a bus. For example, if an extended net has a pin with logical name DATA0 on one device and a pin with logical name DATA7 on another device the net will be considered swizzled.

## SPICE Generation Report

The SPICE generation report contains the SPICE generation log with information about the SPICE decks generated and any errors (HSPICE or IsSPICE). The report generates similar information for each of these processes:

- Pre-layout simulation (single net)
- Pre-layout simulation (all nets)
- Post-layout simulation

To view the SPICE generation report after running a pre-layout or post-layout simulation, select **Reports > SPICE Generation Report**.

Report	Description
Generate Spice Log	Number of simulation decks generated, errors in their generation and consistency checks.
Spice Decks	Data on the Spice decks generated listed by simulation name, including whether models are Spice or IBIS
Spice Deck Errors	List of reasons why a Spice deck was not generated.

## See Also

### More About

- “Pre-Layout Analysis of Parallel Link” on page 7-2
- “Customize Parallel Link Project for Pre-Layout Analysis” on page 7-5



# Post-Layout Verification of Parallel Link

---

- “Post-Layout Verification of Parallel Link” on page 8-2
- “Stackup and Extraction Control in Parallel Link Project” on page 8-6
- “Via and Stackup Management in Parallel Link Project” on page 8-9

## Post-Layout Verification of Parallel Link

### In this section...

“Board” on page 8-3

“Instance” on page 8-3

“Connection” on page 8-4

“Assignment” on page 8-4

“Population” on page 8-5

“Simulation” on page 8-5

“Topology” on page 8-5

 
Post-layout verification provides you with an integrated signal integrity and timing environment to verify system-level SI and timing margins for your fully or partially routed PCB design databases.

The post-layout process supports single-board and multiboard analysis, along with connectivity through packages, connectors, and cabling. The post-layout verification environment provides you the ability to extract and analyze PCB databases from any combination of the following CAD (Computer Aided Design) formats:

- Cadence Allegro
- Mentor PADS Layout
- Mentor Board Station
- Mentor Expedition PCB
- Cadence APB
- Intercept Pantheon
- Altium Designer
- Altium P-CAD
- IBIS EBD


Post-layout analysis takes place in the interface of a serial link design project. If the interface you are working in has pre-layout transfer nets defined, post-layout uses them from the reference schematic set. If there are no transfer nets in the reference schematic set of the interface, the **Parallel Link Designer** app creates sheets with system transfer nets (STNETs).

The post-layout verification workflow is the same for each PCB database type. First import the PCB databases, setup the boards, connect the instances if there are multiple boards in the system, run assignment, setup and analyze the nets, set up simulation properties, then simulate and view the results.



## Board

The first step in the post-layout verification process is board set-up and assignment. A PCB database you import to the **Parallel Link Designer** app is called a board. At the board level, check and edit all stackups, voltage nets, and models. To create variations of a PCB database using different stackups, voltages, or models, create multiple boards with unique names.

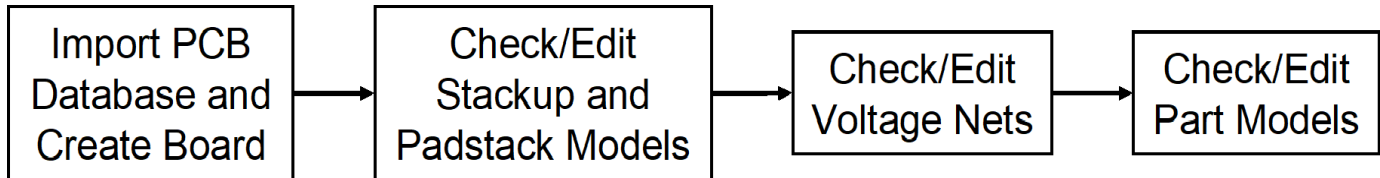

To perform the setup and assignment functions, access the Post-Layout Setup & Assignment dialog box from the **Setup > Setup & Assignment** menu in the app toolbar.

For each board in the system, specify the type of the PCB database and the files in the database, view or edit the stackup, view or set voltage nets, and manage models by clicking the **Import & Setup Board** button in the Post-Layout Setup & Assignment dialog box. The Import & Setup Board dialog box has four tabs:

- **Import**

Use the **Import Board** tab to import a PCB database and create a board. Select the PCB database type from the **PCB Database Type** selector list. By default, the **Parallel Link Designer** app creates an instance for each board and copies the PCB database files into the current project. If you do not copy the PCB database into the project, you cannot re-import the database files.

- **Stackup**

The **Stackup** tab shows the stackup from the PCB database and allows control of padstack models. The Stackup Editor on the left side of the tab shows the stackup as it is read in from the PCB database. If necessary, you can override the auto-generated trace models using the editor. The right side of the tab has controls for the auto-generated padstack backdrill options, differential extraction, and DRC control.. For more information, see “Stackup and Extraction Control in Parallel Link Project” on page 8-6.

- **Voltages**

The **Voltages** tab shows the CAD nets in the PCB database for the board and allows you to specify the voltage for specific voltage nets. Non-voltage nets have an NA value in the voltage column.

---

**Note** The **Voltages** tab does not control the voltages in the IBIS or SPICE models for TX/RX designators. This tab is mainly used to correctly define the on-board terminations that require connection to a specific voltage.

---

- **Parts**

Use the **Parts** tab to match models to parts in the PCB database.

## Instance

An instance is an internal copy of a board that you can connect to other instances and analyze. Every board that is used in the design has at least one instance. If you use the same board more than once,

you must define a separate instance for each use. For example, a system consisting of a motherboard with two DIMM slots that has the same type of DIMM plugged into each slot will have one instance of the motherboard and two instances of the DIMM.

## Connection

A Connection is a pin-to-pin path from the pins of a reference designator on one instance to the pins of a reference designator on a second instance. In a multi-board system, connections between instances are specified in the Connections pane of the Post-Layout Setup & Assignment dialog box. To add a connection, click the **Add Connection** button.

## Assignment

The Assignment process is an automated process for associating nets in the PCB database with transfer nets. This simplifies the setup of the essential net properties in the typical scenarios that you will face:

- **Interface without Transfer Nets**


If you did not do a pre-layout analysis in an interface, you can create and edit transfer nets from the post-layout interface. When you set the properties of a transfer net, you set the properties of all nets assigned to that transfer net. For example, when you change the properties of a transfer net, the app automatically assigns those properties to all nets in a data bus.

- **Interface with Transfer Nets from Pre-Layout Analysis**

If you completed pre-layout analysis in an interface, the app automatically assigns the nets you created in post-layout analysis to the transfer nets you created in the pre-layout analysis.

- **Design Kits**

A design kit is an interface with models and preconfigured transfer nets. The app automatically assigns the nets you created in post-layout analysis to these transfer nets.

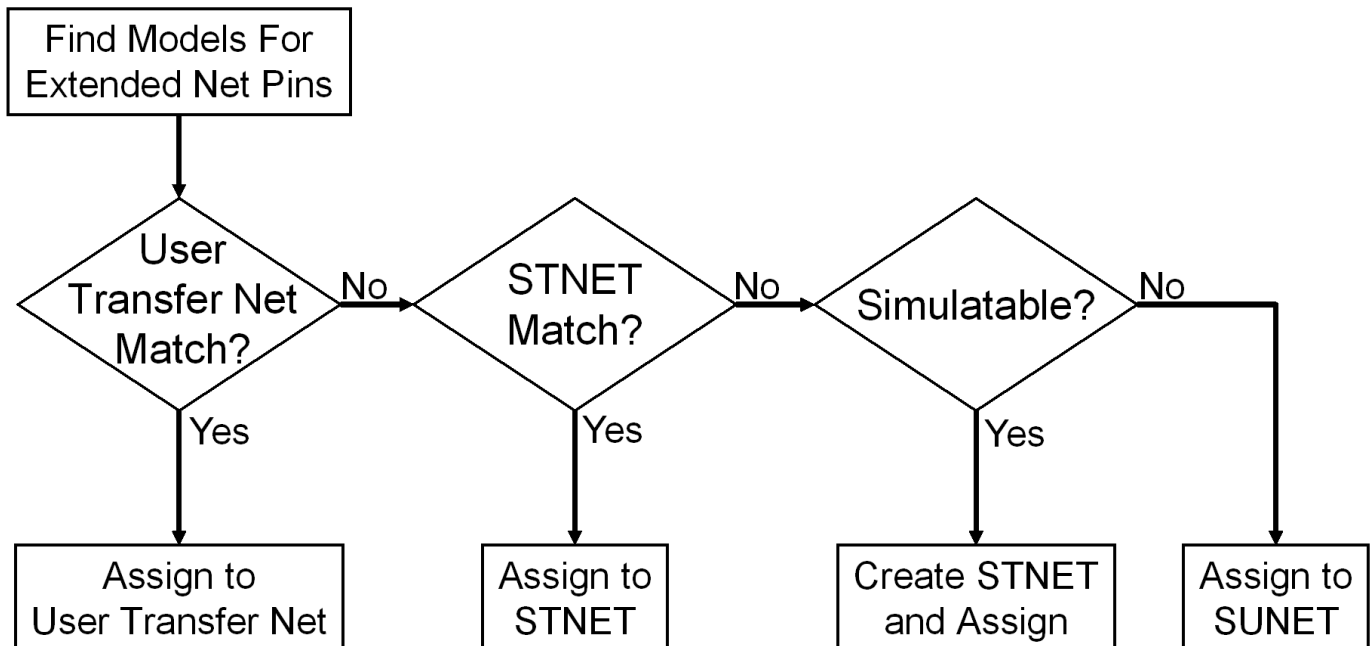

In all cases, the transfer nets and the assignment process ensure that all nets in an interface are set up and ready to simulate in a fraction of the time needed to set up each net in the interface individually.

## Population

Populations allow you to setup multiple configurations of a system for simulation in one project. The app handles populations through the naming of instances.

For example, if a one-slot motherboard can accept one of three DIMMs (dual in-line memory modules), it can be set up by creating three instances of the motherboard and one instance of each DIMM. In this case, three populations can be defined: the motherboard with RCA installed, the motherboard with RCB installed and the motherboard with RCC installed

## Simulation

Before you run a simulation, you must select the nets for the post-layout verification. Select the nets and add them to the list of nets to simulate. You also need to set up the stimulus patterns from simulation properties.

## Topology

Extended nets that can be simulated (assigned to an STNET or user transfer nets) can have topologies created from the extracted PCB data. View these topologies from the **Pre-Layout Analysis** tab. The topologies are useful for understanding how an actual network is routed and to resolve waveform quality or timing issues identified by using post-layout verification. Once the extracted post-layout networks are in the pre-layout analysis environment, you can perform quick “what-if” analyses to identify an appropriate solution.

## See Also


### More About

- “Stackup and Extraction Control in Parallel Link Project” on page 8-6
- “Via and Stackup Management in Parallel Link Project” on page 8-9

## Stackup and Extraction Control in Parallel Link Project

The **Stackup** tab of the **Import & Setup Board** dialog shows the stackup from the PCB Database and allows for extraction control for padstack, differential traces, and DRC.

The tab is divided into two areas: **Stackup Editor** and **Extraction Control**. The **Stackup Editor** on the left side of the tab shows the stackup that was read from the PCB Database and allows the override of the auto-generated stackup thicknesses, material properties, and trapezoidal angle as well as the ability to do “What If” exploration and select whether to model discontinuities associated with etches crossing split planes. The right side of the tab controls the padstack backdrill options, differential extraction, and DRC control.

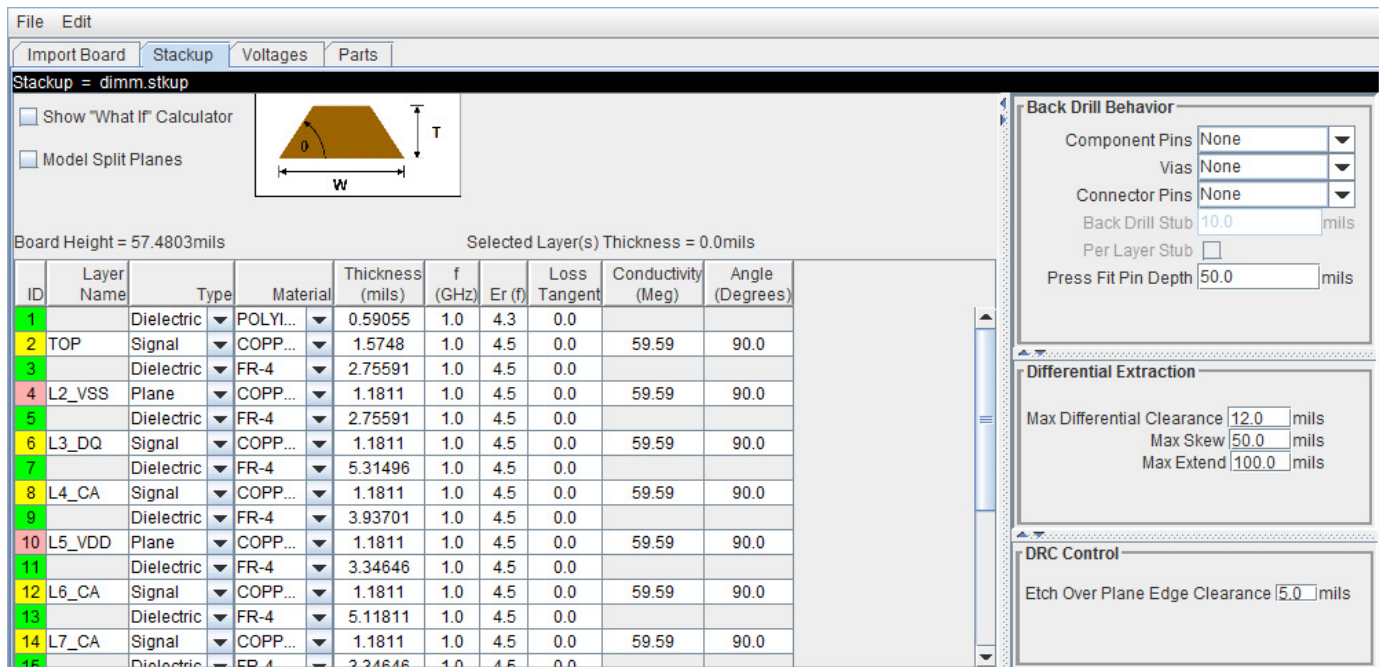

The screenshot shows the **Stackup = dimm.stkup** dialog. On the left, the **Stackup Editor** displays a table of layer properties and a trapezoidal diagram. The diagram shows a trapezoid with width  $W$ , height  $T$ , and angle  $\theta$ . Below the diagram, the board height is 57.4803mils and the selected layer(s) thickness is 0.0mils.

ID	Layer Name	Type	Material	Thickness (mils)	f (GHz)	Er (f)	Loss Tangent	Conductivity (Meg)	Angle (Degrees)
1		Dielectric	POLYI...	0.59055	1.0	4.3	0.0		
2	TOP	Signal	COPP...	1.5748	1.0	4.5	0.0	59.59	90.0
3		Dielectric	FR-4	2.75591	1.0	4.5	0.0		
4	L2_VSS	Plane	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
5		Dielectric	FR-4	2.75591	1.0	4.5	0.0		
6	L3_DQ	Signal	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
7		Dielectric	FR-4	5.31496	1.0	4.5	0.0		
8	L4_CA	Signal	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
9		Dielectric	FR-4	3.93701	1.0	4.5	0.0		
10	L5_VDD	Plane	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
11		Dielectric	FR-4	3.34646	1.0	4.5	0.0		
12	L6_CA	Signal	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
13		Dielectric	FR-4	5.11811	1.0	4.5	0.0		
14	L7_CA	Signal	COPP...	1.1811	1.0	4.5	0.0	59.59	90.0
15		Dielectric	FR-4	2.24646	1.0	4.5	0.0		

On the right, the **Extraction Control** panel includes:

- Back Drill Behavior:** Component Pins (None), Vias (None), Connector Pins (None), Back Drill Stub (10.0 mils), Per Layer Stub (checkbox), Press Fit Pin Depth (50.0 mils).
- Differential Extraction:** Max Differential Clearance (12.0 mils), Max Skew (50.0 mils), Max Extend (100.0 mils).
- DRC Control:** Etch Over Plane Edge Clearance (5.0 mils).

### Stackup Editor

The **Stackup Editor** displays one row for each signal, plane, and dielectric layer in the stackup. Parameter values can be changed if desired by typing new values into the table cells. The stackup data plus the trace width data are used by the field solver to create lossy transmission line models for post-layout nets.

Each layer must be defined as either **Dielectric**, **Mixed**, **Plane**, or **Signal** in the stackup column called **Type**. Signal layers can be either type **Mixed** or **Signal**. The **Mixed** designation is provided primarily for boards and packages where sections of the signal layer may contain small planes for impedance control. In most cases the **Signal** designation would be sufficient, but it is important to carefully review the board layout and identify cases where **Mixed** may be required.

Checking **Model Split Planes** enables modeling of discontinuities associated with etches crossing over splits in planes. The change in trace cross-section results in an impedance change in the model.

You may use the **Stackup Editor** as a calculator to compute trace impedance based upon the width and separation. To use the calculator:



- 1 Check the **Show “What If” Calculator** check box to display the calculator columns
- 2 Enter one or more values in the appropriate cells followed by the tab key
- 3 Click **Calculate**

This uses the stackup data with the **Desired Width** and **Desired Separation** values to calculate the single-ended and differential impedance for that layer.

## Extraction Control

The **Extraction Control** section of the tab controls the backdrill behavior, differential extraction, and DRC control.

Backdrilling uses Must Not Cut Layers. Must Not Cut Layers are layers that define a valid backdrill depth. In the stackup there are columns for Must Not Cut Layers from the top and bottom. The backdrill goes from the top or bottom up to but not through the last Must Not Cut Layer that is encountered before a trace connection to a via or pin. If no Must Not Cut layer is encountered before the trace connection to the via or pin, then the via or pin is modeled as not backdrilled.

Backdrill Behavior Choice	Description
None	No backdrilling. The complete via or pin is extracted, and a model generated based on the PCB data for start and end layers.
Top	The via or pin is modeled as if it were drilled from the top of the board. The via or pin ends at the lowest layer with <b>Backdrill Top Must Not Cut Layer</b> checked in the stackup that is above the highest layer with a trace connected to the via or pin. A stub equal to the <b>Back Drill Stub</b> parameter is left. If there is no layer with <b>Backdrill Top Must Not Cut Layer</b> checked that is above the highest trace connection to the via or pin, the via or pin is not backdrilled.
Bottom	The via or pin is modeled as if it were drilled from the bottom of the board. The via or pin ends at the highest layer with <b>Backdrill Bottom Must Not Cut Layer</b> checked in the stackup that is below the lowest layer with a trace connected to the via or pin. A stub equal to the <b>Back Drill Stub</b> parameter is left. If there is no layer with <b>Backdrill Bottom Must Not Cut Layer</b> checked that is below the lowest trace connection to the via or pin, the via or pin is not backdrilled.
Both	Both top and bottom are modeled as described above.
Longest Stub	Drills from the side that remove the longest stub based on the Must Not Cut layers defined in the stackup.

In the **Differential Extraction** section of the **Padstack Editor**, you can define the parameters that control the extraction of the differential nets.

Parameter	Description
<b>Max Differential Clearance</b>	The maximum edge-to-edge clearance two traces can have and still be extracted as a differential transmission line model. If the clearance is larger than this parameter, the traces are extracted as two single-ended transmission line models.
<b>Max Skew</b>	The maximum length difference between the two traces in a single differential trace w-line model. It is recommended that this be set no larger than 1/10 of the wavelength of the maximum frequency of interest.
<b>Max Extend</b>	The maximum total length of single-ended trace that can be combined with a differential trace in a w-line model.

The DRC control defines the minimum distance from a trace to a plane edge when the trace crossing DRC is run using the **Etch Over Plane Edge Clearance** parameter.

## See Also

## More About

- “Post-Layout Verification of Parallel Link” on page 8-2
- “Via and Stackup Management in Parallel Link Project” on page 8-9

## Via and Stackup Management in Parallel Link Project

The vias are associated with a stackup in the library where they are stored. There can be multiple stackup and via libraries in a project. The first time you edit a via in pre-layout you are prompted for the number of layers to use for the default pre-layout stackup. In post-layout the stackup and vias are from the PCB database by default. Use the **Via Editor** dialog box by right clicking on the vias in the Pre-Layout Analysis tab to manage them. The elements in the via editor can be divided into three groups: common via elements, pre-layout specific via elements, and post-layout specific via elements.

Via Editor -- Editing Via "X\_ViaDiff1" X

File Edit

Library = Stackup default.stkup + Pre-Layout Vias

Cursor( 25.279330) 65.5 Ohms  
22.7 Ohms  
= 3.1 ps  
tub = 0.0 s  
n Stub = 873.  
= 23.0 fF  
ace = 55.0 m

Board Height = 64.2mils Selected Layer(s) Thickness = 0.6mils  Edit Stackup

ID	Layer Name	Type	Thickness (mils)	Left Via Connect	Left Via X-Section	Right Via X-Section	Right Via Connect
1		Dielectric	1.0				
2	Top	Signal	0.6	<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>
3		Dielectric	5.0				
4	P1	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
5		Dielectric	5.0				
6	L2	Signal	0.6	<input checked="" type="checkbox"/>			<input checked="" type="checkbox"/>
7		Dielectric	5.0				
8	P2	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
9		Dielectric	5.0				
10	L3	Signal	0.6	<input type="checkbox"/>			<input type="checkbox"/>
11		Dielectric	5.0				
12	P3	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
13		Dielectric	5.0				
14	P4	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
15		Dielectric	5.0				
16	L4	Signal	0.6	<input type="checkbox"/>			<input type="checkbox"/>
17		Dielectric	5.0				
18	P5	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
19		Dielectric	5.0				
20	L5	Signal	0.6	<input type="checkbox"/>			<input type="checkbox"/>
21		Dielectric	5.0				
22	P6	Plane	0.6	<input type="checkbox"/>			<input type="checkbox"/>
23		Dielectric	5.0				
24	Bottom	Signal	0.6	<input type="checkbox"/>			<input type="checkbox"/>
25		Dielectric	1.0				

Finished Hole Diameter 18.0 mils  
 Drilled Hole Diameter 21.0 mils

Pad Antipad Racetrack  
 Shape Circle Circle  
 Diameter 30.0 50.0 mils  
 Width 30.0 50.0 110.0 mils  
 Height 30.0 50.0 50.0 mils

Pads On All Layers  
 Differential Via Spacing 60.0 mils  
 Racetrack

Back Drill  
 Enab...  By St...  By L...  By D...

Drill Side	Stub (mils)	Layer	Depth (mils)
Top	0.0		0.0
Bottom	5.0	P2	46.4

Model Override  
 Enable  
 File  ...  
 Subcircuit

## Via Elements

Via Element	Description
Top view and electrical characteristics	The top view shows the via as it would appear when viewed from the top of the board. The electrical characteristics show the impedance, delay backdrill, and other characteristics. The reported delay is for the barrel of the via.
Via geometry	You can edit the geometry of the via by defining the start and end layers, hole diameters, and shape and dimensions of the pad and antipad. You can also select if a via model is single-ended or differential-ended.
Via backdrill	You can select the depth of via backdrill by stub, layer, or depth.
Override via model	You can override a via model by using your custom subcircuit saved in one of the SPICE libraries.
Connect via layers	The <b>Left Via Connect</b> column is used to select the layer connections that will appear on the left side of the via symbol. The <b>Right Via Connect</b> column is used to select the layer connections that will appear on the right side of the via symbol. A layer is connected when the checkbox for that layer is checked. The <b>Via X-Section</b> columns show a representation of the via cross section.
Modify stackup	To modify the stackup, check the Edit Stackup checkbox.

There are several important definitions for vias and pins:

- A via under a BGA is a via, not a pin.
- A through hole connector padstack is a pin not a via.
- A connector means a multi-board connector (connects two Instances).

## Editing Via for Pre-Layout Simulations

To edit vias for pre-layout simulation, open the Via Editor dialog box by selecting **Tools > Via Editor** or by right-clicking on a via schematic symbol and selecting **Edit Differential Via Model** or **Edit Single Ended Via Model**. You need to enter the number of conducting layers for the default stackup the first time you open the **Via Editor** dialog box.

The Via Editor works in a selected library. Vias can be edited, added or deleted from a library. In pre-layout, the Via Editor creates a default library that contains a default via model and a default stackup. The Library operations can be selected from the File menu.

## Editing Via for Post-Layout Simulations

The Padstack/Trace Manager is used to view and manage overrides to padstacks and traces in Post-Layout as well as manage backdrilling of pins and vias by net, RefDes or Part. You can edit the geometry of a single via, or multiple vias at one time.

- **Back Drill Setup Tab**

The **Back Drill Setup** tab allows backdrill information to be viewed and changed by net, by padstack, by RefDes, or by Part by selecting from the **View Mode** list. In each case the backdrill can be turned on or off. The view modes are:

- *Back Drill by Net* — One row per Extended Net per Board.
- *Back Drill by Padstack* — One row per Padstack.
- *Back Drill by RefDes* — One row per Reference Designator.
- *Back Drill by Part* — One row per Part Number.

The **Back Drill Setup** tab is only enabled if backdrilling is enabled on one or more boards on the **Stackup** tab of the **Setup Board** dialog.

- **Via/Pin Editor Tab**

Padstack models are created automatically from the PCB data for vias, surface mount pads and through-hole pins using the internal padstack solver.

## Padstack Definitions

Padstack Elements	Definitions
Padstack	The geometry information from the PCB database. Contains the start and end layer of the padstack, barrel dimensions, etc. A Padstack does not contain the layers connected or XY coordinates.
Padstack Configuration	A Padstack plus layer connections. A Padstack Configuration does not contain XY coordinates.
Padstack Configuration Instance	A Padstack Configuration at a specific XY coordinate on a board. A specific via has geometry, connectivity and a location on a PCB. A specific pin has geometry, connectivity, a location, a reference designator and a pin number

A Padstack can be used for multiple Padstack Configurations. A Padstack Configuration can be used for multiple Padstack Configuration Instances.

## Padstack Editor View Modes

The views are selected from the list on the Via/Pin tab. The view modes correspond to the definitions above. In each view mode there is one row for each item of the selected type:

- *Padstack (Geometry)* — One row per Padstack. This rolls up all Padstack Configurations and Padstack Configuration Instances that use a Padstack.

- *Padstack Configuration (Connectivity)* — One row per Padstack Configuration. This rolls up all Padstack Configuration Instances that use a Padstack Configuration.
- *Padstack Configuration Instance* — One row per Padstack Configuration Instances.

## Padstack Editor Edit Modes

The padstack editor has two modes:

- *Padstack* — All changes made in the editable columns apply to the padstack. This means all Padstack Configuration Instances that use the same Padstack as the row being edited will change. For example, if the View Mode is Padstack Configuration Instance and the Edit Mode is Padstack, a change to one row is applied to all rows that have the same Padstack.
- *Instance* — All changes apply to the Padstack Configuration Instance only. For example, if the View Mode is Padstack Configuration Instance and the Edit Mode is Instance, a change to one row is only applied to that row.

## Common Operations

Editing geometry of a single via	To edit the geometry of a single via (one via at one XY coordinate), use the Padstack Configuration Instance View Mode and the Instance Edit Mode. Any changes to the geometry is applied to the specific via edited when in this mode.
Editing using the Via Editor	Right-click on a row and choose Visual Via Editor from the menu.
Changing the Padstack	To change the Padstack that a Padstack Configuration Instance is based on, use the Padstack Configuration Instance View Mode and in the Base Padstack column choose a different Padstack. The list of padstacks are the padstacks that share the same start and end layer with the original padstack for this Padstack Configuration Instance.
Editing a Padstack	To edit a Padstack, use the View Mode Padstack. The behavior depends on Edit Mode: <ul style="list-style-type: none"> <li>• <i>Padstack</i> — Changes are made to the Padstack being edited and is applied to all Padstack Configurations and Padstack Configuration Instances that use the Padstack.</li> <li>• <i>Instance</i> — A new Padstack is created as a copy of the Padstack being edited, and the changes you make is applied to this new Padstack</li> </ul>

Overriding a via model	<p>Via models are typically done with connectivity to specific layers. Therefore, the Padstack Configuration View Mode or the Padstack Configuration Instance View Mode are used to override a via model. In both modes the Model Override column is part of the table. To override a model right-click and select one of:</p> <ul style="list-style-type: none"> <li>• <i>Browse</i> — Browse to an existing model in the libraries. This could be the .smod file for an S-Parameter via model that was imported.</li> <li>• <i>Create</i> — Create a subcircuit with the default via model. This subcircuit can be modified.</li> </ul> <p>If the View Mode is Padstack Configuration the model is applied to every Padstack Configuration Instance that uses that Padstack Configuration.</p> <p>If the View Mode is Padstack Configuration Instance the model is applied to the single Padstack Configuration Instance that you edited.</p> <p><b>Note</b> The edit mode must be Padstack.</p>
------------------------	--

## Trace Overrides Tab

The Trace Overrides tab of the Padstack/Trace Manager is used for trace model overrides. The lossy transmission line models for traces created by the field solver from the stackup and trace width can be overridden with user-provided models. The Trace Overrides tab shows the trace widths on each layer of each board.

The models used for overrides are assumed to be RLGC models with one model per file, and the base name of the file must be the same as the model name.

For single-ended traces there is one row for each trace width found on each layer. Select one or more rows and click the Select Model button to browse to a transmission line model in the library.

For differential traces, there is one row for each trace width on each layer, and columns for differential separation and coupling layer. The coupling layer is a list containing the same layer and any adjacent signal or mixed layers. Select an adjacent layer for broadside coupled differential traces. When a separation is added a new row is created for that layer and trace width. This allows models for multiple separations to be specified for each width on each layer.

The tolerance for overrides is 0.1 mm in width. In other words, if an override is specified for a trace of width 4.0 mm on a layer, the override is applied to all traces with widths from 3.9 mm to 4.1 mm on that layer.

### Example One-Conductor Model

For file name `sl_55ohm.mod`:

```
model sl_55ohm W ModelType=RLGC N=1
+ Lo = +3.60600E-07
```

```
+ Co = +1.20300E-10
+ Ro = +6.07368E+00
+ Rs = +1.48880E-03
+ Gd = +1.89000E-11
```

### Example Differential Model

For file name `sl_55ohm_diff.mod`:

```
.model sl_55ohm_diff W ModelType=RLGC N=2
+ Lo = +3.58800E-07 +4.84700E-08 +3.58800E-07
+ Co = +1.23200E-10 -1.66400E-11 +1.23200E-10
+ Ro = +6.07368E+00 +0.00000E+00 +6.07368E+00
+ Rs = +1.50556E-03 +1.12767E-04 +1.50556E-03
+ Gd = +1.93500E-11 -2.61400E-12 +1.93500E-11
```

### See Also

#### More About

- “Post-Layout Verification of Parallel Link” on page 8-2
- “Stackup and Extraction Control in Parallel Link Project” on page 8-6




# Parallel Link Analysis Results

---

- “Waveform Analysis” on page 9-2
- “Waveform Analysis Parameters and Thresholds” on page 9-6
- “Waveform Reports” on page 9-43

## Waveform Analysis

Waveform analysis provides information about waveform overshoot and other quality metrics in parallel link projects. During waveform analysis, the **Parallel Link Designer** app analyzes every edge of every waveform, applies slew-rate derating, and measures flight times. You need SPICE or STAT mode simulation results to perform waveform analysis.

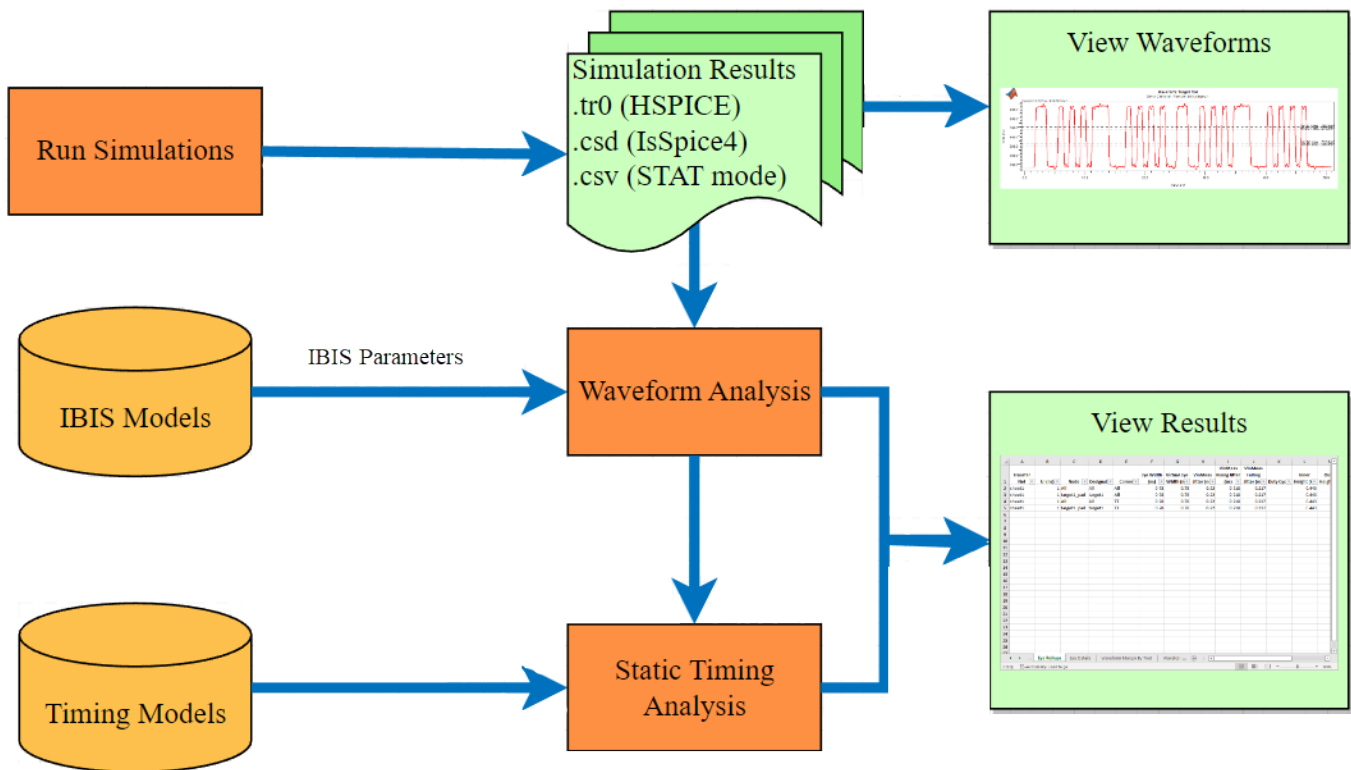


You can use the **Parallel Link Designer** app to perform two types of waveform analysis:

- **Transfer net waveform analysis** — The app uses the simulation results of a schematic in pre-layout or an extended net in post-layout.
- **Standard load waveform analysis** — The app uses the simulations created for each driver to measure standard load delay.

### Transfer Net Waveform Analysis

 Transfer net waveform analysis works directly with the waveform files that the simulator produces. The analysis technique uses algorithms to find edges in the receiver waveforms and correlates the stimulus edges with receiver edges. It also uses 18 threshold voltage levels and multiple check parameters to analyze each edge extensively. The app performs this analysis in five steps:



## Find Waveform Edges

The **Parallel Link Designer** app scans the waveform data at each receiver node and finds an edge to correspond to each stimulus edge. The app skips the first and the last edges. You can also skip additional edges at the start of the waveform. You can specify the number of skipped edges individually for data, strobe, and clock transfer nets in the Simulation Parameters dialog box. To open the dialog box, select **Setup > Simulation Parameters....**

If the app does not find any edges, it reports errors in the **Waveform Fatal** tab of the Waveform and Timing Report window.

## Measure Edges and Eye

The **Parallel Link Designer** app measures and checks the edges and the eye diagram. The app checks each edge for overshoot and waveform quality.

The app reports any overshoot violations in the **Overshoot Violations** tab and all other violations in the Quality Violations tab of the Waveform and Timing Report window. To help you diagnose the error, the app also reports the:

- Node where the error occurred,
- Time at which the error occurred during simulation
- Rule that the edge violated
- Value of the violated rule and the amount by which the edge violated it

For more information on how the app defines the waveform and eye processing parameters, see “Waveform Processing Parameters” on page 9-6 and “Eye Measurement Parameters” on page 9-22.

## Measure Raw Etch Delay

The **Parallel Link Designer** app measures minimum and maximum raw etch delays on the rising and falling edges of the waveform. By default, the app skips the first and the last edges of every waveform. You can specify additional edges to skip in the Simulation Parameters dialog box. To open the dialog box, click **Setup > Simulation Parameters...** from the app toolbar.

In the non-STAT Mode, the app measures every edge of every waveform. In the STAT Mode, you can specify the number of edges to measure in the **Waveform Analysis Bits** parameter in the Simulation Parameters dialog box. You can specify edges to skip in both non-STAT and STAT modes.

The app calculates two types of raw etch delays:

- **Single-ended** — The receiver thresholds used for each delay depend on the target probe point.
- **Differential** — The app measures the delay on the differential waveform (non-inverting minus inverting). The thresholds the app uses are based on the target probe point.

---

**Note** In the STAT mode, the default target probe point is always the pad.

---

For more information, see “Etch Delay Measurement Threshold Parameters” on page 9-26.

## Perform Slew Rate Derating

You can use the slew rate derating mechanism to adjust the minimum and maximum etch delays by using the measured slew rates at the receiver. This optional step is useful to predict switching times for slew rates other than the nominal value.

The **Parallel Link Designer** app can automatically perform slew rate derating when the IBIS file contains the derating table. The app measures the slew rates and looks up the derating value in the table for each edge. You can specify the thresholds for slew rate measurement in the IBIS model. The app uses the derated raw etch delay to calculate the etch delay for setup and hold margin calculations in timing analysis.

The **Edge Details** tab of the Waveform and Timing Report window shows the raw etch delay, derated raw etch delay, and etch delay for each edge. The **Derating Details** tab of the Waveform and Timing Report window shows the slew rate and derating value applied to each edge.

## Calculate Final Etch Delay

The final etch delay calculation subtracts the standard load delay from the derated raw etch delay.

The app uses four etch delay values in the timing analysis for each net:  $R_{\min}$ ,  $R_{\max}$ ,  $F_{\min}$ , and  $F_{\max}$ . These values are the worst case etch delay values for all the nonskipped edges. The app derives the final etch delay numbers as follows:

- **$R_{\min}$  etch delay** — Smallest of the  $R_{\min}$  etch delays.
- **$R_{\max}$  etch delay** — Largest of the  $R_{\max}$  etch delays.
- **$F_{\min}$  etch delay** — Smallest of the  $F_{\min}$  etch delays.
- **$F_{\max}$  etch delay** — Largest of the  $F_{\max}$  etch delays.

 
By using the worst case values over all processed edges, the app accounts for any ISI (Inter-symbol interference) effects in the etch delay values for timing analysis.

## Standard Load Waveform Analysis

The standard load simulations include simulations with and without the package. The waveform that the app uses to measure the standard load depends on the source probe point.

Source Probe Point	Standard Load Waveform
core	0.5V on v_stimulus
SL_pad	stload_sl_wopkg@load
SL_pin	stload_sl_wpkg@load

The app performs the analysis in two steps:



## Find Waveform Edges

The **Parallel Link Designer** app scans the waveform data at the load and finds an edge to correspond to each stimulus edge. The app skips the first and the last edges.

If the app does not find any edges, it reports errors in the **Fatal Waveform** tab of the Waveform and Timing Report window.

## Measure Standard Load Delays

The **Parallel Link Designer** app measures the standard load delays at the second (falling) and third (rising) edges of the load waveform.

For single-ended waveforms, the standard load delay varies from 0.5 V on `v_stimulus` to the `VmeasR` on the rising edge and `VmeasF` on the falling edge of the load.

For differential waveforms, the standard load delay varies from 0.5 V on `v_stimulus` to 0 V on the differential waveform (noninverting minus inverting).

## Waveform Factors Affecting Interconnect Delay

Some waveform shapes can affect timing. In waveform analysis, the **Parallel Link Designer** app includes a number of levels and rules that can detect transitions that can cause incorrect interconnect delays, without generating excessive false warnings. Review the generated fatal and quality waveform reports before relying on the timing analysis.

The app defines the setup and hold timing rules assuming a specific slew rate range at an input. When you use receivers with narrow transition ranges in nets with minimal timing margins, the slew rates must fall within the vendor specifications. If you use a buffer in the nets that do not have minimal timing margins, you can widen the `VinMeas` ranges instead of constraining the slew rate.

Overshoot violations affect device longevity but do not impact interconnect delays.

## See Also

### More About

- “Waveform Analysis Parameters and Thresholds” on page 9-6
- “Waveform Reports” on page 9-43

## Waveform Analysis Parameters and Thresholds

The **Parallel Link Designer** app uses waveform analysis parameters in one of two ways:


- To set waveform levels used in waveform and eye diagram processing.
- To specify design rule check limits for the app to verify.

All waveform processing extensions are specified in the IBIS files by adding a line that starts with: | **MathWorks**. This notation uses the IBIS comment character, pipe (|), by default. The extensions are not case sensitive. The parameters can be grouped as:

- **Waveform Processing Parameters:** The thresholds used to verify edge transitions (waveform thresholds), the overshoot and area parameters (overshoot thresholds), and the ringback parameters (ringback thresholds). The thresholds are defined for both AC and DC. For more information, see “Waveform Processing Parameters” on page 9-6.
- **Waveform Check Parameters:** The parameters used to check waveform characteristics. For more information, see “Waveform Check Parameters” on page 9-15.
- **Eye Measurement Parameters:** The parameters used to control the eye diagram measurement process. For more information, see “Eye Measurement Parameters” on page 9-22.
- **Eye Check Parameters:** The parameters that can be used to check the eye diagram parameters. For more information, see “Eye Check Parameters” on page 9-24.
- **Etch Delay Measurement Threshold Parameters:** The thresholds used to measure etch delays at receivers. For more information, see “Etch Delay Measurement Threshold Parameters” on page 9-26.
- **Standard Load Parameters.:** The thresholds used to measure the standard load delay on the standard load waveform. For more information, see “Standard Load Parameters” on page 9-37.
- **Other Parameters:** Other miscellaneous parameters. For more information, see “Other Parameters” on page 9-38.

### Waveform Processing Parameters




The waveform processing parameters define the waveform edge transitions, overshoots, and ringback thresholds. The thresholds and parameters are:

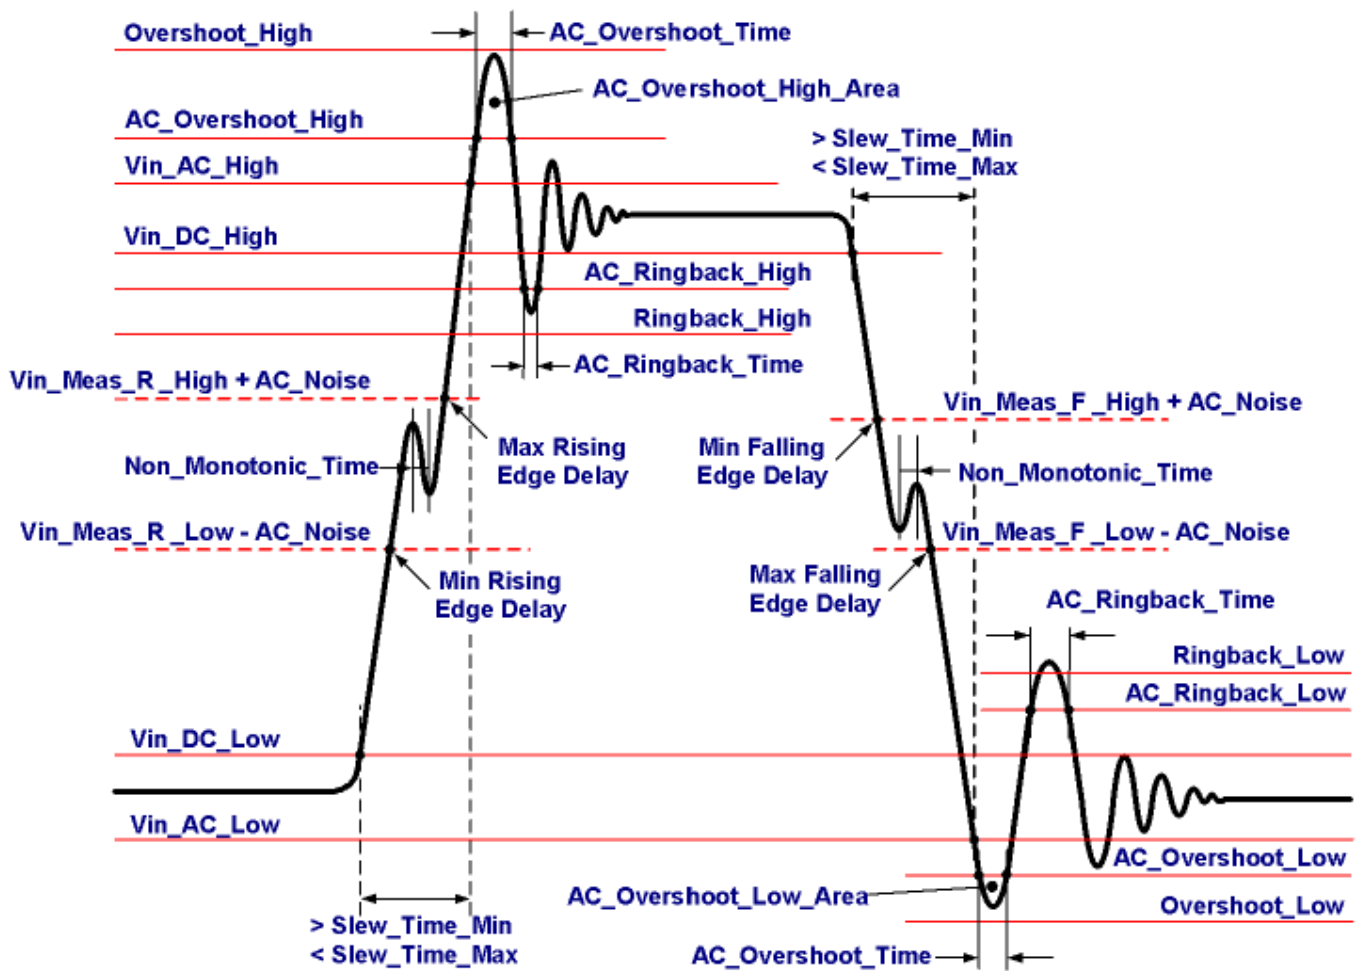

### Waveform Threshold Parameters

These parameters are placed in the [Model Spec] section of the IBIS file.

Parameter	Description	Waveform
MathWorks Vin_AC_High	<ul style="list-style-type: none"> <li>A rising edge must start below Vin_DC_Low and cross Vin_AC_High.</li> </ul>	

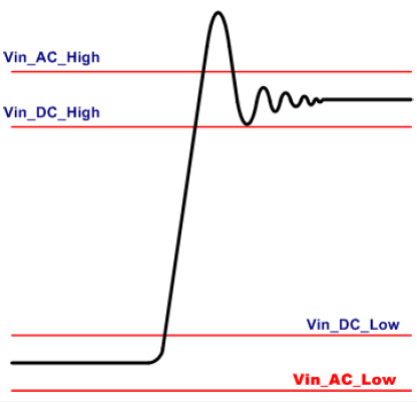
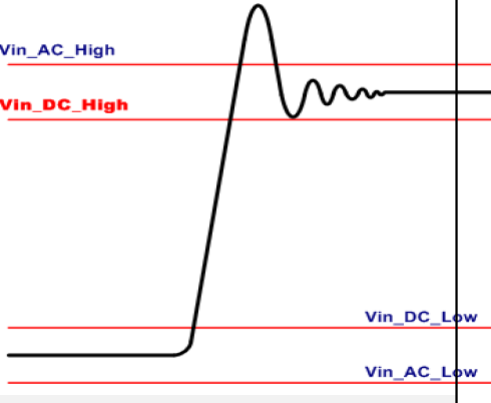
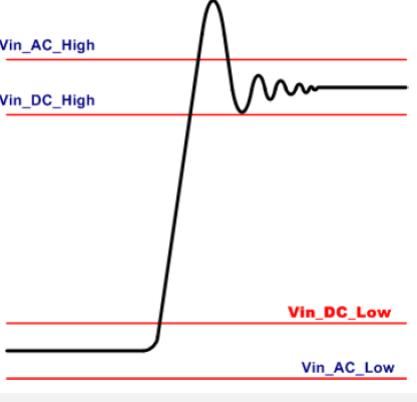
Parameter	Description	Waveform
MathWorks Vin_AC_Low	<ul style="list-style-type: none"> <li>A falling edge must start above Vin_DC_High and cross Vin_AC_Low.</li> </ul>	 <p>The waveform shows a signal that starts at a low level, rises sharply, crosses the Vin_AC_High threshold, and then settles at a level above Vin_DC_High. The Vin_DC_Low and Vin_AC_Low thresholds are shown as lower horizontal lines.</p>
MathWorks Vin_DC_High	<ul style="list-style-type: none"> <li>A rising edge must start below Vin_DC_Low, cross Vin_AC_High and end above Vin_DC_High.</li> <li>A falling edge must start above Vin_DC_High.</li> </ul>	 <p>The waveform shows a signal that starts at a low level, rises sharply, crosses the Vin_AC_High threshold, and then settles at a level above Vin_DC_High. The Vin_DC_Low and Vin_AC_Low thresholds are shown as lower horizontal lines.</p>
MathWorks Vin_DC_Low	<ul style="list-style-type: none"> <li>A falling edge must start above Vin_DC_High, cross Vin_AC_Low and end below Vin_DC_Low.</li> <li>A rising edge must start below Vin_DC_Low.</li> </ul>	 <p>The waveform shows a signal that starts at a low level, rises sharply, crosses the Vin_DC_High threshold, and then settles at a level above Vin_DC_High. The Vin_AC_High and Vin_AC_Low thresholds are shown as higher horizontal lines.</p>





Parameter	Description	Waveform
MathWorks $T_{vac}$	<ul style="list-style-type: none"> <li>Defines the minimum time that a signal must stay above <math>V_{in\_AC\_High}</math> on a rising edge and below <math>V_{in\_AC\_Low}</math> on a falling edge in cases where there is ringback.</li> <li>Depends on the slew rate of the signal and contains pairs of slew rates and <math>T_{vac}</math> values.</li> </ul>	
MathWorks $V_{diff\_AC}$	<ul style="list-style-type: none"> <li>The AC threshold value used for differential signals.</li> <li>Measured on the differential waveform (inverting minus non-inverting).</li> <li>A rising differential edge must start below <math>-V_{diff\_DC}</math>, cross <math>+V_{diff\_AC}</math> and end above <math>+V_{diff\_DC}</math>.</li> <li>A falling differential edge must start above <math>+V_{diff\_DC}</math>, cross <math>-V_{diff\_AC}</math> and end below <math>-V_{diff\_DC}</math>.</li> </ul>	
MathWorks $V_{diff\_DC}$	<ul style="list-style-type: none"> <li>The DC threshold value used for differential signals.</li> <li>Measured on the differential waveform (inverting minus non-inverting).</li> <li>A rising differential edge must start below <math>-V_{diff\_DC}</math>, cross <math>V_{diff\_AC}</math> and end above <math>V_{diff\_DC}</math>.</li> <li>A falling differential edge must start above <math>+V_{diff\_DC}</math>, cross <math>-V_{diff\_AC}</math> and end below <math>-V_{diff\_DC}</math>.</li> </ul>	

### Overshoot Threshold Parameters

These parameters define the AC and DC overshoots as well as overshoot areas. They are placed in the [Model Spec] section of the IBIS file.

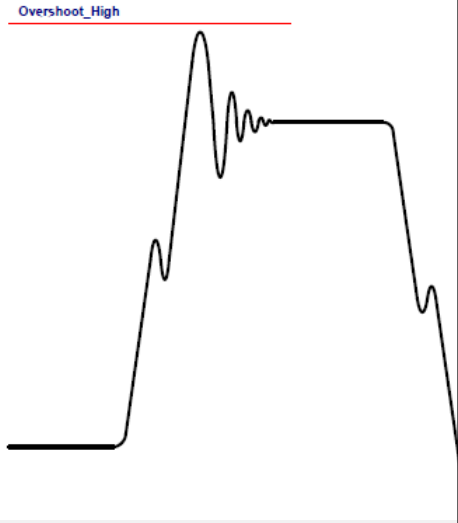
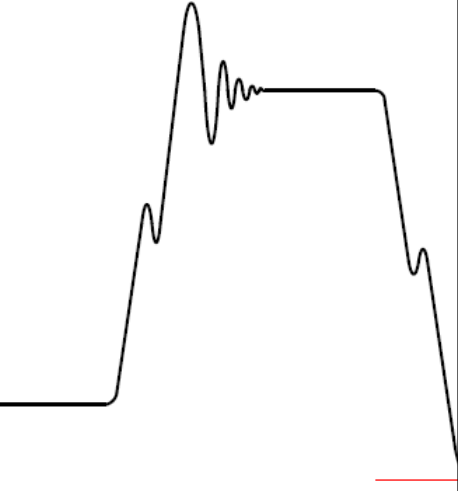
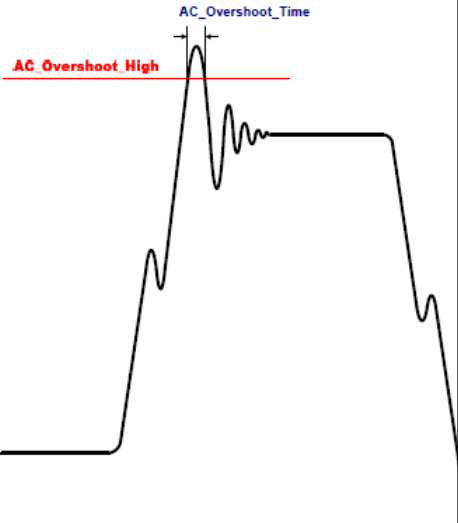
Parameter	Description	Waveform
MathWorks Overshoot_ High	<ul style="list-style-type: none"> <li>The maximum voltage a rising waveform can ever achieve. Any value higher than this value results in an overshoot waveform violation.</li> <li>You can assign a specific value for each corner, or use a single value. Corner values are assigned as: TT SS FF.</li> <li>You must specify the typical value. The minimum and maximum values are optional.</li> <li>If you specify only a single value, the slow and fast corners are subject to the voltage scaling rules.</li> </ul>	 <p>The waveform shows a signal that rises from a baseline, overshoots a horizontal red line labeled 'Overshoot_High', and then settles to a steady state. The peak of the overshoot is clearly above the red line.</p>
MathWorks Overshoot_ Low	<ul style="list-style-type: none"> <li>The minimum voltage a falling waveform can ever achieve. Any value lower than this value results in an overshoot waveform violation.</li> <li>You can assign a specific value for each corner, or use a single value. Corner values are assigned as: TT SS FF.</li> <li>You must specify the typical value. The minimum and maximum values are optional.</li> </ul>	 <p>The waveform shows a signal that falls from a steady state, undershoots a horizontal red line labeled 'Overshoot', and then settles to a lower steady state. The trough of the undershoot is clearly below the red line.</p>
MathWorks AC_Oversho ot_High	<ul style="list-style-type: none"> <li>The voltage a rising waveform is allowed to exceed for only a specified amount of time. The specified amount of time is called the AC_Overshoot_Time.</li> <li>You must define the AC_Overshoot_Time to perform waveform DRC (design rule check).</li> <li>Does not effect Overshoot_High parameter.</li> <li>You can assign a specific value for each corner, or use a single value. Corner values are assigned as: typ min max.</li> <li>If you specify only a single value, the slow and fast corners are subject to the voltage scaling rules.</li> </ul>	 <p>The waveform shows a signal that rises and overshoots a horizontal red line labeled 'AC_Overshoot_High'. A horizontal double-headed arrow labeled 'AC_Overshoot_Time' indicates the duration of the overshoot above the red line.</p>



Parameter	Description	Waveform
MathWorks AC_Overshoot_Low	<ul style="list-style-type: none"> <li>The voltage a falling waveform is allowed to exceed for only a specified amount of time. The specified amount of time is called the AC_Overshoot_Time.</li> <li>You must define the AC_Overshoot_Time to perform waveform DRC (design rule check).</li> <li>Does not effect Overshoot_Low parameter.</li> <li>You can assign a specific value for each corner, or use a single value. Corner values are assigned as: typ min max.</li> </ul>	
MathWorks AC_Overshoot_Time	<ul style="list-style-type: none"> <li>User-defined period of time for allowable overshoot on rising and falling waveforms. The app allows an overshooting waveform to exceed AC_Overshoot_High or AC_Overshoot_Low for a time less than AC_Overshoot_Time.</li> <li>You must define AC_Overshoot_Time when defining AC_Overshoot_High or AC_Overshoot_Low</li> <li>Does not effect Overshoot_High or Overshoot_Low parameters.</li> <li>The app uses a single value of the parameter in all corners.</li> </ul>	

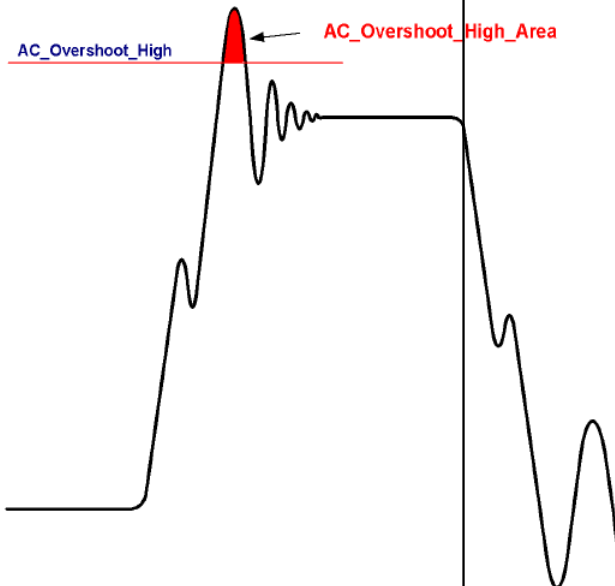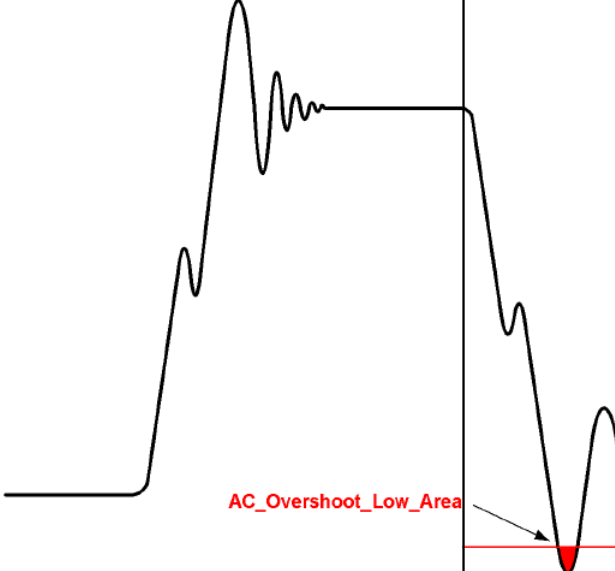Parameter	Description	Waveform
MathWorks AC_Overshoot_High_Area	<ul style="list-style-type: none"> <li>The area under the signal that is above AC_Overshoot_High must be less than the value of this parameter.</li> </ul>	 <p>The waveform shows a signal rising from a baseline, crossing a horizontal red line labeled 'AC_Overshoot_High'. The area between the signal and this line, where the signal is above the line, is shaded in red and labeled 'AC_Overshoot_High_Area' with an arrow pointing to the shaded region.</p>
MathWorks AC_Overshoot_Low_Area	<ul style="list-style-type: none"> <li>The area under the signal that is below AC_Overshoot_Low must be less than the value of this parameter.</li> </ul>	 <p>The waveform shows a signal falling from a high level to a lower level, crossing a horizontal red line labeled 'AC_Overshoot_Low'. The area between the signal and this line, where the signal is below the line, is shaded in red and labeled 'AC_Overshoot_Low_Area' with an arrow pointing to the shaded region.</p>

**Ringback Threshold Parameters**

These parameters are placed in the [Model Spec] section of the IBIS file.

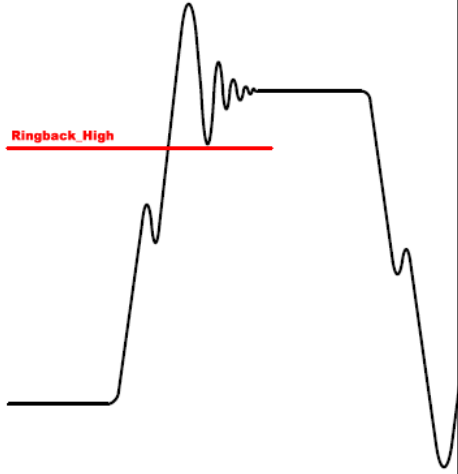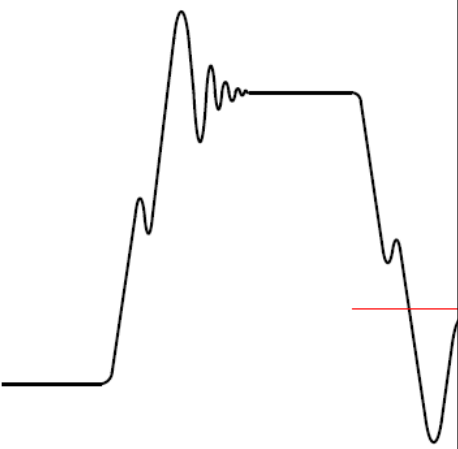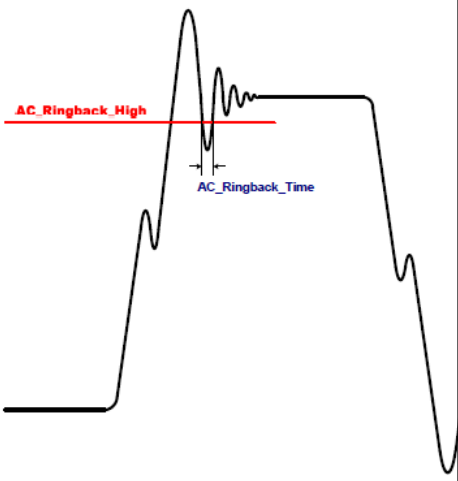Parameter	Description	Waveform
MathWorks Ringback_H igh	<ul style="list-style-type: none"> <li>• Measure of the excessive ringing on the rising waveforms.</li> <li>• Measured only after the rising signal crosses the <code>Vin_AC_High</code> level. A rising waveform must not ring through user-defined <code>Vin_AC_High</code> level.</li> <li>• You can assign a specific value for each corner, or use a single value. Corner values are assigned as: typ min max.</li> </ul>	
MathWorks Ringback_L ow	<ul style="list-style-type: none"> <li>• Measure of the excessive ringing on the falling waveforms.</li> <li>• Measured only after the falling signal crosses the <code>Vin_AC_Low</code> level. A falling waveform must not ring through user-defined <code>Vin_AC_Low</code> level.</li> <li>• You can assign a specific value for each corner, or use a single value. Corner values are assigned as: typ min max.</li> </ul>	
MathWorks AC_Ringbac k_High	<ul style="list-style-type: none"> <li>• The app allows a rising waveform to ring through the <code>AC_Ringback_High</code> level for a time less than <code>AC_Ringback_Time</code>.</li> <li>• Does not effect or <code>Ringback_High</code> parameter.</li> <li>• You can assign a specific value for each corner, or use a single value. Corner values are assigned as: typ min max.</li> </ul>	

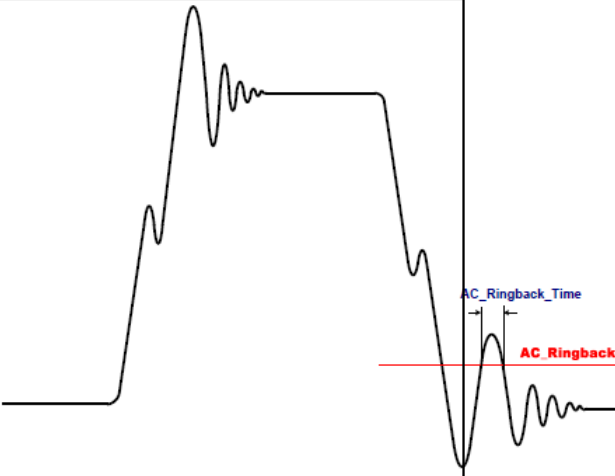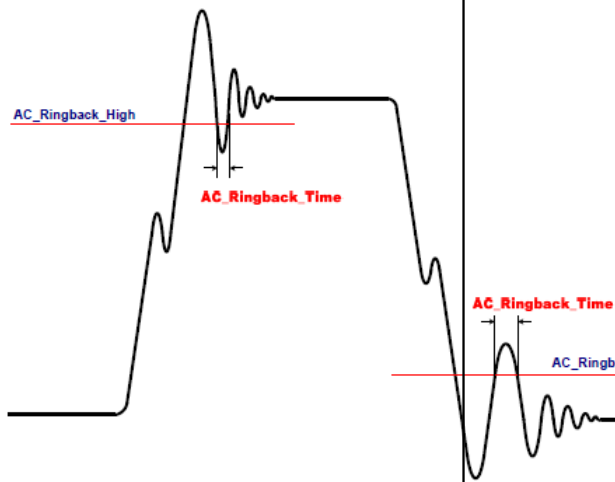Parameter	Description	Waveform
MathWorks AC_Ringback_Low	<ul style="list-style-type: none"> <li>The app allows a falling waveform to ring back through the AC_Ringback_Low level for a time less than AC_Ringback_Time.</li> <li>Does not effect or Ringback_Low parameter.</li> <li>You can assign a specific value for each corner, or use a single value. Corner values are assigned as: typ min max.</li> </ul>	
MathWorks AC_Ringback_Time	<ul style="list-style-type: none"> <li>User-defined period of time for allowable ringback on rising and falling waveforms. The app allows a waveform to ring back through AC_Ringback_High or AC_Ringback_Low for a time less than AC_Ringback_Time.</li> <li>Does not effect Ringback_High or Ringback_Low parameters.</li> <li>The app uses a single value of the parameter in all corners.</li> </ul>	

**Properties of Good Waveform**

A proper rising edge has these characteristics:

- Starts below Vin\_DC\_Low.
- Never goes below Overshoot\_Low and does not go below AC\_Overshoot\_Low for more than AC\_Overshoot\_Time.
- After crossing Vin\_DC\_Low, crosses Vin\_AC\_High between Slew\_Time\_Min and Slew\_Time\_Max.
- Does not ring for more than Non\_Monotonic\_Time within the window between Vin\_DC\_Low and Vin\_AC\_High.
- Does not go above Overshoot\_High and does not go above AC\_Overshoot\_High for more than AC\_Overshoot\_Time.
- Does not ring back below Ringback\_High and does not go below AC\_Ringback\_High for more than AC\_Ringback\_Time.
- Must end above Vin\_DC\_High.

## Waveform Check Parameters

The **Parallel Link Designer** app performs waveform design rule checks as part of the waveform analysis. These checks falls into three categories:

- Fatal errors
- Quality warnings
- Overshoot warnings

The app analyzes the driver and passive I/O buffers only for overshoot. Standard load I/O buffers are only analyzed for timing. Receiver I/O buffers are analyzed for both timing and waveform DRC. Single-ended nodes of differential I/O buffers are analyzed for overshoot. Differential nodes of differential I/O receivers are analyzed for timing and waveform DRC.

### Fatal Errors

Fatal errors result into either missing or invalid timing data. Examples of fatal errors include: failed simulation (no transitions at the receiver), insufficient voltage swing at receivers, and ringing clocks. Fatal errors are results of either general simulation setup problems or topology problems (opens in traces or connector models).

**Note** The app can generate timing margins even in the presence of fatal waveform errors. For example, if there is only one good data transition and many bad ones, the app reports the timing results on that one good transition and also report the fatal waveform quality errors. So you should always check the waveform analysis log for errors.

Fatal Error Message	Description/Possible Cause
Cannot open waveform data file.	tr0/csd file does not exist. SPICE was not run or had a fatal error.
Output of receiver does not wiggle.	Analyzing receiver at core and core does not have any transitions. Verify that SPICE receiver model does have valid output pin. Verify that the Driver I/O buffer is compatible with the Receiver I/O buffer. Verify that the interconnect subcircuit is properly connected and with proper terminations.
Failed to open .prb file.	Internal programming error.
Cannot find ibis model.	Internal programming error.
Cannot find node.	Internal programming error. Some SPICE formats truncate node names to 16 characters.
Cannot find node in simulation file.	Internal programming error. Some SPICE formats truncate node names to 16 characters.
Cannot find differential node in simulation file.	Internal programming error. Some SPICE formats truncate node names to 16 characters.
Differential driver waveform not identified in simulation file.	Internal programming error. Some SPICE formats truncate node names to 16 characters.

Fatal Error Message	Description/Possible Cause
Driver waveform not identified in simulation file.	Internal programming error. Some SPICE formats truncate node names to 16 characters.
Output of driver does not wiggle.	Driver not operating correctly, or incorrect standard load termination.
Driver does not transition.	Driver not operating correctly, or incorrect standard load termination.
Driver fails at UI.	Driver does not operate at full range of frequencies analyzed.
Simulation has ... transitions; should have...	Internal programming error.
No receiver transitions.	Signal at receiver does not transition through $(V_{inL} + V_{inH}) / 2$ . Open in subcircuit between driver and receiver. Improper termination. Mismatched driver and receiver models.
Cannot match stimulus with node.	Receiver transitions, but waveform is problematic.
No receiver transition for stimulus transition at...	May have timing data for some transitions, not all.
No receiver transition in analysis window.	May have timing data for some transitions, not all.
No standard load transition in analysis window.	Timing not corrected for standard loads.
Clock rings through $V_{in\_Meas\_R\_High}$ .	Rising clock edge rings through $V_{in\_Meas\_R\_High}$ . Possible double clocking.
Clock rings through $V_{in\_Meas\_F\_Low}$ .	Falling clock edge rings through $V_{in\_Meas\_F\_Low}$ . Possible double clocking.
Clock rings through $V_{diff}$ .	Rising clock rings through $+V_{diff}$ . Falling clock rings through $-V_{diff}$ . Possible double clocking.

### Quality Warnings

Quality warnings indicate that the app generated timing data, but the timing results may be incorrect because the shape of the waveform transition is outside of manufactures specifications: Examples of quality warnings include slow slew rates and ringing data. Waveform quality warnings fall into these categories:

- Eye rule violations
- Miscellaneous edge rule violations
- Ringback rule violations
- Initial and final state rule violations
- AC rules violations
- Bus turnaround violations

**Note** Bus turnaround waveform analysis only pattern matches the initial priming edges. After the first bus turnaround, the waveform analysis at receivers is done in an analysis window determined by the stimulus edges and a time offset calculated during the analysis of the priming edges.



Waveform Quality Warning	Affects Margin?	Description/Possible Causes
Min Eye Inner Height	Yes	Eye Inner Height < rule (Min_Eye_Inner_Height).
Max Eye Outer Height	Yes	Eye Outer Height > rule (Max_Eye_Outer_Height).
Min Eye VinMeas Width	Yes	Eye width (measured at inside tear ducts) < rule (Min_Eye_Vmeas_Width).
Max Eye VinMeas Jitter	Yes	Eye tear duct width > rule (Max_Eye_Vmeas_Jitter).
Min Eye VinMeas (H/L) Width	Yes	Eye inter width measured at VinMeas < rule (Min_Eye_Vmeas(H/ L)_Width).
Slew Time Max	Yes	Slew time > rule (Slew_Time_Max).
Slew Time Min	Yes	Slew time < rule (Slew_Time_Min).
Non-Monotonic	No	Rising edge is falling for more than Non_monotonic_time during transition. Falling edge is rising for more than Non_monotonic_time during transition.
Data rings through	No	Rising data edge rings through Vin_Meas_R_High. Falling data edge rings through Vin_Meas_F_Low.
Data rings through Vdiff	No	Rising data edge rings through +Vdiff. Falling data edge rings through -Vdiff.
Ringback High	Yes	Rising edge goes above Vin_AC_High then below Ringback_High then above Vin_DC_High. Falling edge goes below Vin_DC_High then below Ringback_High then above Vin_DC_High.
Ringback Low	Yes	Falling edge goes below Vin_AC_Low then above Ringback_Low then below Vin_DC_Low. Rising edge goes above Vin_DC_Low then above Ringback_Low then above Vin_DC_Low.
AC Ringback High	Yes	Rising edge goes above Vin_AC_High then below AC_Ringback_High for more than AC_Ringback_Time then above Vin_DC_High. Falling edge goes below Vin_DC_High then below AC_Ringback_High for more than AC_Ringback_Time then above Vin_DC_High.
AC Ringback Low	Yes	Falling edge goes below Vin_AC_Low then above AC_Ringback_Low for more than AC_Ringback_Time then below Vin_DC_Low. Rising edge goes above Vin_DC_Low then above AC_Ringback_Low for more than AC_Ringback_Time then below Vin_DC_Low.
Vin_Meas_High + AC_Noise greater than Ringback_High	Yes	Ringback rules are disabled when the ringback voltage crosses the VinMeas voltages when adjusted for AC_Noise. Generated once per transfer net receiver.
Vin_Meas_Low - AC_Noise less than Ringback_Low	Yes	Ringback rules are disabled when the ringback voltage crosses the VinMeas voltages when adjusted for AC_Noise. Generated once per transfer net receiver.
Initial state above Vin_DC_Low	Yes	Rising edge starts above Vin_DC_Low.

Waveform Quality Warning	Affects Margin?	Description/Possible Causes
Initial state below Vin_DC_High	Yes	Falling edge starts below Vin_DC_High.
Initial state below Vdiff_DC	Yes	Edge starts below Vdiff_DC.
Initial state below Vdiff	Yes	Edge starts below Vdiff.
Initial state above (Vin_Meas_R_Low - AC_Noise)	Yes	Rising edge starts above (Vin_Meas_R_Low - AC_Noise)
Initial state below (Vin_Meas_F_High + AC_Noise)	Yes	Falling state starts below (Vin_Meas_F_High + AC_Noise)
Initial state within AC Noise of Vdiff	Yes	Edge starts within AC Noise of Vdiff.
Final state above Vin_DC_Low	Yes	Falling edge above Vin_DC_Low.
Final state below Vin_DC_High	Yes	Rising edge below Vin_DC_High.
Final state below Vdiff_DC	Yes	Edge ends below Vdiff_DC.
Final state below Vdiff	Yes	Edge ends below Vdiff.
Final state below (Vin_Meas_R_High + AC_Noise)	Yes	Rising edge below (Vin_Meas_R_High + AC_Noise)
Final state above (Vin_Meas_F_Low - AC_Noise)	Yes	Falling edge above (Vin_Meas_F_Low - AC_Noise)
Final state within AC Noise of Vdiff	Yes	Edge ends within AC Noise of Vdiff. Max timing is the end of the analysis window.
Enters transition but ends below (Vin_Meas_R_High + AC_Noise)	Yes	Rising edge crosses Vin_Meas_R_Low - AC_Noise but ends below Vin_Meas_R_High + AC_Noise. Maximum timing is end of analysis window.
Enters transition but ends above (Vin_Meas_F_Low - AC_Noise)	Yes	Falling edge crosses Vin_Meas_F_High + AC_Noise but ends above Vin_Meas_F_Low - AC_Noise. Maximum timing is the end of the analysis window.
Did not enter transition and ends below (Vin_Meas_R_High + AC_Noise)	Yes	Falling edge never crosses Vin_Meas_F_High + AC_Noise but ends below (Vin_Meas_R_High + AC_Noise). Minimum timing is the start of the analysis window.

Waveform Quality Warning	Affects Margin?	Description/Possible Causes
Did not enter transition and ends above (Vin_Meas_F_Low - AC_Noise)	Yes	Rising edge never crosses Vin_Meas_R_Low - AC_Noise but ends above Vin_Meas_R_High + AC_Noise. Minimum timing is the start of the analysis window.
Did not cross Vin_Meas_R_High	Yes	Rising edge did not cross Vin_Meas_R_High.
Did not cross Vin_Meas_F_Low	Yes	Falling edge did not cross Vin_Meas_F_Low.
Did not exit Vdiff range	Yes	Rising edge started below -Vdiff but never crossed +Vdiff. Falling edge started above +Vdiff but never crossed -Vdiff.
Did not cross Vdiff_AC	Yes	Edge did not cross Vdiff_AC.
Did not cross Vin_AC_High	Yes	Rising edge not cross Vin_AC_High.
Did not cross Vin_AC_Low	Yes	Falling edge did not cross Vin_AC_Low.
Final state above Vin_Meas_F_Low	Yes	Low level final state above Vin_Meas_F_Low.
Final state below Vin_Meas_R_High	Yes	High level final state below Vin_Meas_R_High.

### Overshoot Warnings



Overshoot warnings indicate potential component reliability and failure problems. Overshoot at drivers or receivers can affect the reliability and lifetime of components.




Waveform Overshoot Warning	Affects Timing Margin?	Description/Possible Cause
Overshoot High	No	Signal goes above Overshoot_High.
Overshoot Low	No	Signal goes below Overshoot_Low.
AC Overshoot High	No	Signal goes above AC_Overshoot_High for more than AC_Overshoot_Time.
AC Overshoot Low	No	Signal goes below AC_Overshoot_Low for more than AC_Overshoot_Time



**Note** Overshoot\_High and AC\_Overshoot\_High warnings can either have just a TT (typ) value or values for all three (typical, fast, and slow) process corners. If the warnings just have the typical values, then the level is adjusted by the difference between the model rail voltage and the actual rail voltage used in the simulation.

### Waveform Check Parameters

These parameters check the edges of the processed waveforms. They are placed in the [Model Spec] section of the IBIS file.

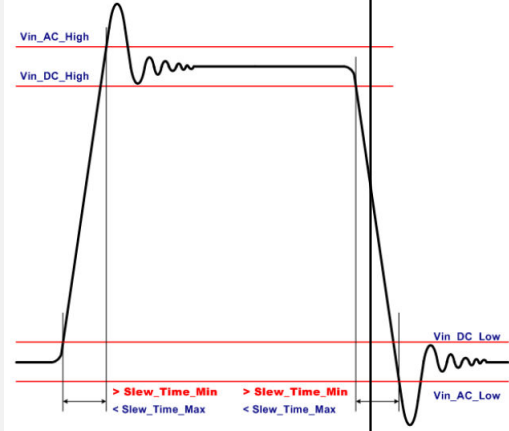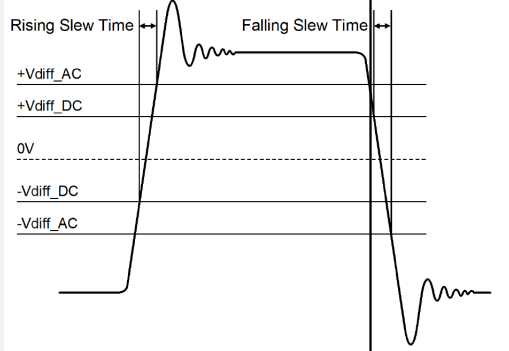
Parameter	Description	Waveform
<p>MathWorks Slew_Time_Min</p>	<ul style="list-style-type: none"> <li>• For single-ended waveforms, the slew rate is defined as:                             <ul style="list-style-type: none"> <li>• The rising edge time from Vin_DC_Low to Vin_AC_High.</li> <li>• The falling edge time from Vin_DC_High to Vin_AC_Low.</li> </ul> </li> <li>• For differential waveforms, the slew rate is defined as:                             <ul style="list-style-type: none"> <li>• The rising edge time from -Vdiff_DC to +Vdiff_AC.</li> <li>• The falling edge time from +Vdiff_DC to -Vdiff_AC.</li> </ul> </li> <li>• An edge's slew time may not be less than Slew_Time_Min.</li> </ul> <p><b>Note</b> If <math>\pm Vdiff\_AC</math> and <math>\pm Vdiff\_DC</math> are not defined, the app defaults to using Vdiff.</p>	<ul style="list-style-type: none"> <li>• Single-ended waveforms:                              </li> <li>• Differential waveforms:                              </li> </ul>

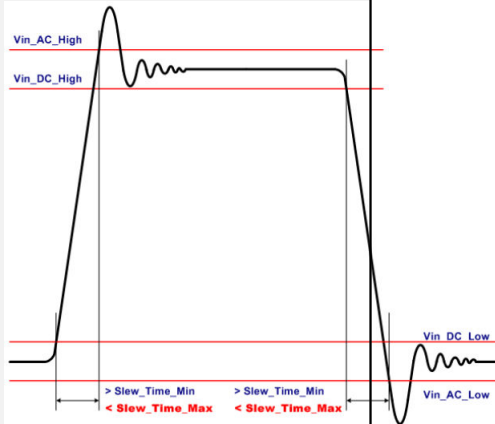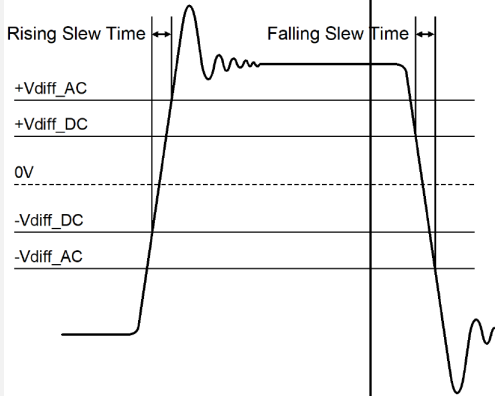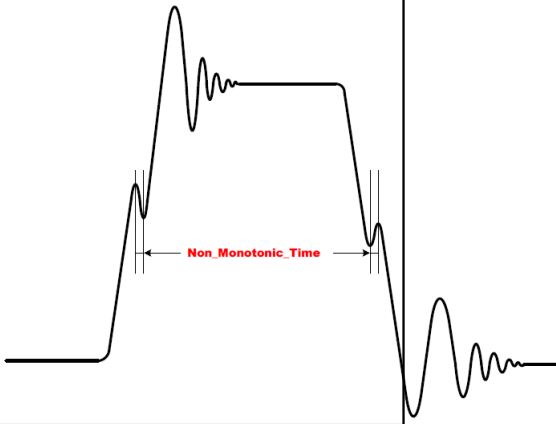Parameter	Description	Waveform
<p>MathWorks Slew_Time_Max</p>	<ul style="list-style-type: none"> <li>For single-ended waveforms, the slew rate is defined as:                             <ul style="list-style-type: none"> <li>The rising edge time from Vin_DC_Low to Vin_AC_High.</li> <li>The falling edge time from Vin_DC_High to Vin_AC_Low.</li> </ul> </li> <li>For differential waveforms, the slew rate is defined as:                             <ul style="list-style-type: none"> <li>The rising edge time from -Vdiff_DC to +Vdiff_AC.</li> <li>The falling edge time from +Vdiff_DC to -Vdiff_AC.</li> </ul> </li> <li>An edge's slew time may not be greater than Slew_Time_Max.</li> </ul> <p><b>Note</b> If ±Vdiff_AC and ±Vdiff_DC are not defined, the app defaults to using Vdiff.</p>	<ul style="list-style-type: none"> <li>Single-ended waveforms:                              </li> <li>Differential waveforms:                              </li> </ul>
<p>MathWorks Nonmonotonic_time</p>	<ul style="list-style-type: none"> <li>User-defined filter that the app uses to check for short non-monotonicity on clocks or strobes. The default value is 10 ps.</li> <li>If there is a slope reversal on a rising or falling edge for a time greater than the time set by this parameter, the app reports an error.</li> <li>A single value of the parameter is used in all corners.</li> </ul>	

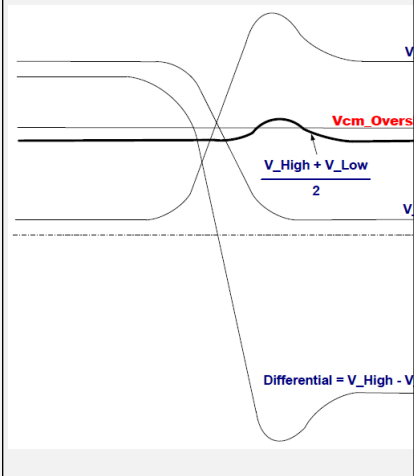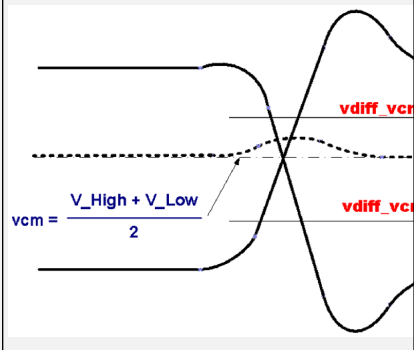Parameter	Description	Waveform
MathWorks Vcm_overshoot	<ul style="list-style-type: none"> <li>Defined as the maximum voltage that the combined differential signal is allowed to achieve.</li> <li>It is applied to the two halves of a differential signal, not to each signal individually.</li> <li>This extension is similar to the High/Low overshoot extensions used on non-differential waveforms, but the voltage scaling rules do not apply.</li> </ul>	
MathWorks Vdiff_Vcm_min/max		

## Eye Measurement Parameters

These parameters control how the **Parallel Link Designer** app measures the eye diagram parameters. They are placed in the [Model Spec] section of the IBIS file.

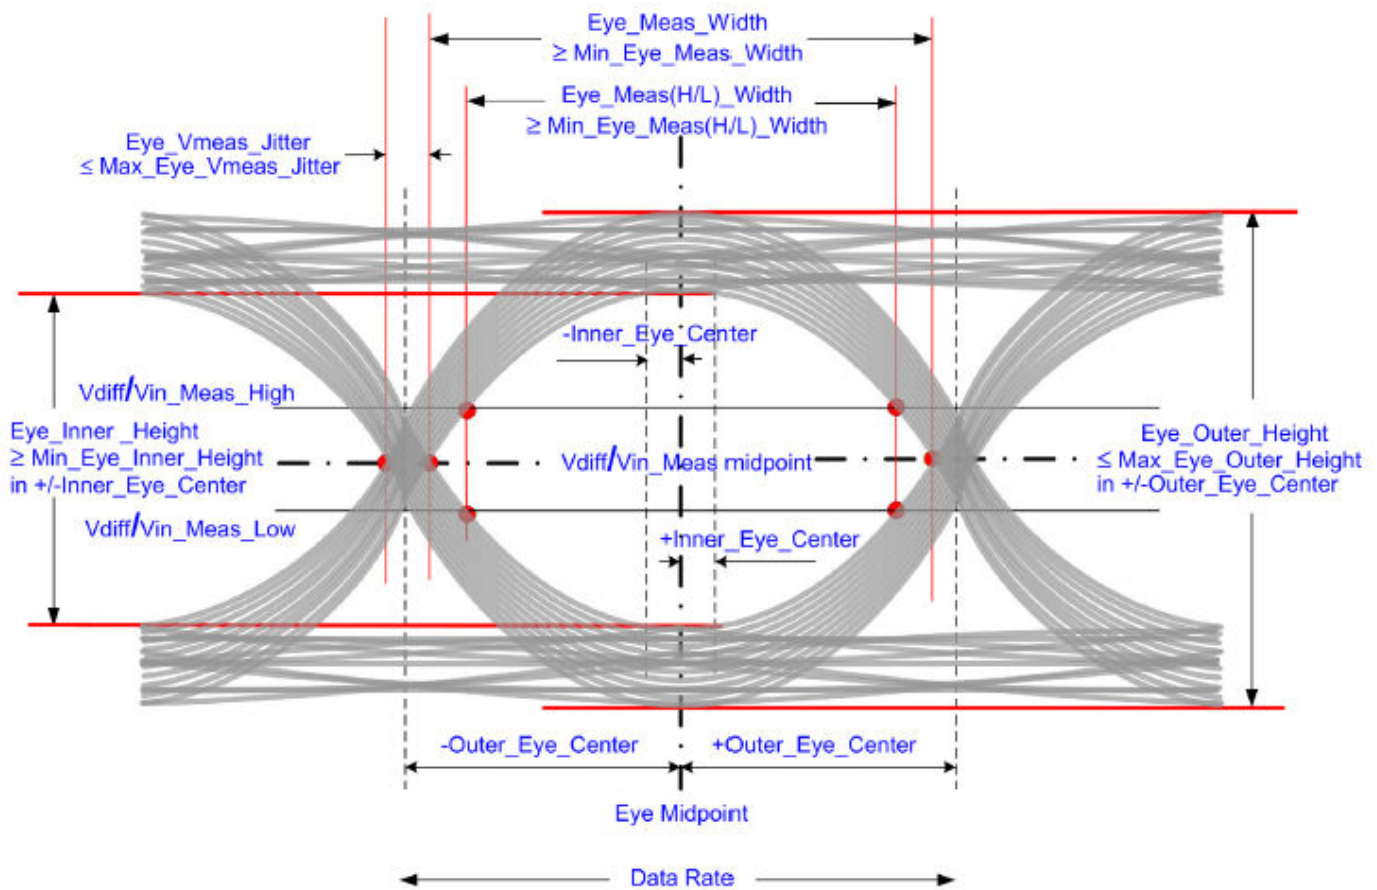

Parameter	Description	Waveform
MathWorks Inner_Eye_Center	<ul style="list-style-type: none"> <li>Distance from eye-midpoint within which all of the inner eye measurements are made.</li> <li>Applies only to Eye Inner Height, Inner Eye Min, Inner Eye Max, Inner Eye Min Eye Time, and Inner Eye Max Eye Time.</li> <li>Applied as a percentage of the data rate and does not need to be symmetric.</li> <li>The default is <math>\pm 5\%</math> of the UI (unit interval).</li> </ul>	

Parameter	Description	Waveform
MathWorks Outer_Eye_Center	<ul style="list-style-type: none"> <li>Distance from eye-midpoint within which all of the outer eye measurements are made.</li> <li>Applies only to Eye Outer Height, Outer Eye Min, Outer Eye Max, Outer Eye Min Eye Time, and Outer Eye Max Eye Time.</li> <li>Applied as a percentage of the data rate and does not need to be symmetric.</li> <li>The default is <math>\pm 50\%</math> of the UI (unit interval).</li> </ul>	<p>The diagram shows a multi-bit eye diagram. A vertical dashed line marks the 'Eye Midpoint'. A horizontal double-headed arrow below the eye indicates the 'Data Rate'. Two vertical dashed lines, one to the left and one to the right of the eye midpoint, define the measurement window for 'Outer_Eye_Center'. The distance from the eye midpoint to these lines is labeled as '- Outer_Eye_Center' and '+ Outer_Eye_Center' respectively.</p>



### Eye Check Parameters

These parameters are used to check the eye that the **Parallel Link Designer** app calculates from the waveform data. They are placed in the [Model Spec] section of the IBIS file. The app reports the violations of these parameters in the **Waveform Quality** tab of the Waveform and Timing Report window.

Parameter	Description	Waveform
MathWorks Max_Eye_Vmeas_Jitter	<ul style="list-style-type: none"> <li>The maximum allowed variation of the waveform when the rising or falling edge crosses the typical <math>V_{in\_Meas}</math> value.</li> <li>Any value greater than this time is flagged as a violation.</li> <li>A single value is used for all corners.</li> </ul>	<p>The diagram shows a multi-bit eye diagram. A horizontal dashed line represents the typical input measurement voltage, labeled 'V<sub>in_Meas</sub>'. A vertical double-headed arrow indicates the maximum allowed variation in time for the rising and falling edges to cross this voltage level, labeled 'Max_Eye_Vmeas_Jitter'.</p>



Parameter	Description	Waveform
MathWorks Min_Eye_Vmeas_Width	<ul style="list-style-type: none"> <li>The minimum allowable inner eye.</li> <li>Measured at the typical Vin_Meas reference point on both rising and falling edges of the waveform.</li> <li>Any value less than this time is flagged as a violation.</li> <li>A single value is used for all corners.</li> </ul>	
MathWorks Min_Eye_Vmeas(H/L)_Width	<ul style="list-style-type: none"> <li>The minimum allowable inner eye.</li> <li>Measured from VinMeas (H/L) left eye time to VinMeas (H/L) right eye time.</li> <li>Any value less than this time is flagged as a violation.</li> <li>A single value is used for all corners.</li> </ul>	
MathWorks Min_Eye_High_Width	<ul style="list-style-type: none"> <li>The minimum allowable inner eye.</li> <li>Measured from VinMeas_R_High left eye time to VinMeas_F_High right eye time.</li> <li>Any value less than this time is flagged as a violation.</li> <li>A single value is used for all corners.</li> </ul>	
MathWorks Min_Eye_Low_Width	<ul style="list-style-type: none"> <li>The minimum allowable inner eye.</li> <li>Measured from VinMeas_F_Low left eye time to VinMeas_R_Low right eye time.</li> <li>Any value less than this time is flagged as a violation.</li> <li>A single value is used for all corners.</li> </ul>	

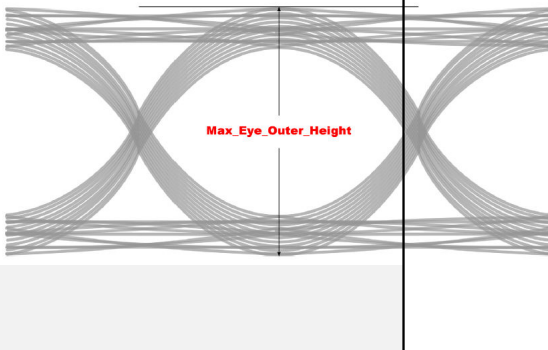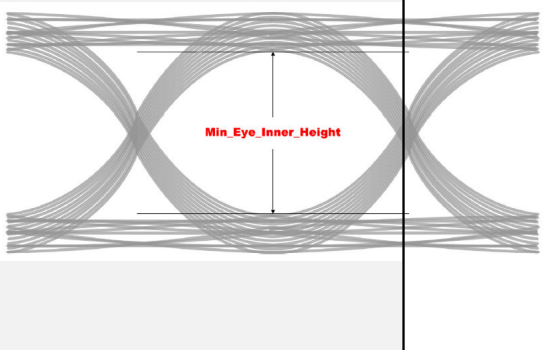
Parameter	Description	Waveform
MathWorks Max_Eye_Outer_Height	<ul style="list-style-type: none"> <li>The maximum allowable outer eye height.</li> <li>Measured as Outer_Eye_Max - Outer_Eye_Min.</li> <li>Any value greater than this voltage is flagged as a violation.</li> <li>A single value is used for all corners.</li> </ul>	 <p>The diagram shows a differential signal waveform with two crossing signals. A vertical double-headed arrow spans the maximum vertical distance between the two signal traces at their widest point, labeled 'Max_Eye_Outer_Height' in red text.</p>
MathWorks Min_Eye_Inner_Height	<ul style="list-style-type: none"> <li>The minimum allowable inner eye height.</li> <li>Measured as Inner_Eye_Max - Inner_Eye_Min.</li> <li>Any value less than this voltage is flagged as a violation.</li> <li>A single value is used for all corners.</li> </ul>	 <p>The diagram shows the same differential signal waveform. A vertical double-headed arrow spans the minimum vertical distance between the two signal traces at their narrowest point, labeled 'Min_Eye_Inner_Height' in red text.</p>

## Etch Delay Measurement Threshold Parameters


The **Parallel Link Designer** app measures the minimum and maximum raw etch delays on the rising and falling edges of the waveform. To calculate the final etch, the app subtracts the standard load delay from the derated raw etch delay. The app can measure the delays on either single-ended waveforms or differential waveforms.

### Single-Ended Etch Delay

Single-ended raw etch delays are measured on single-ended waveforms. The delay measurement is different in non-STAT mode and STAT mode.

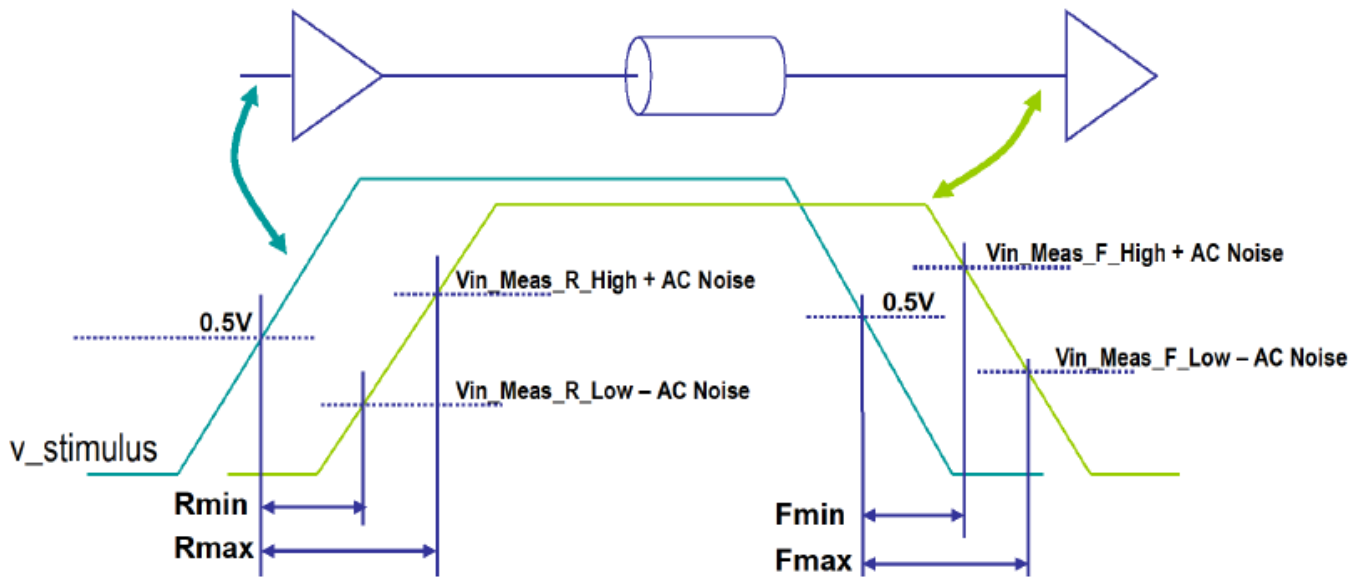

### Non-STAT Mode Single-Ended Raw Etch Delay Measurements

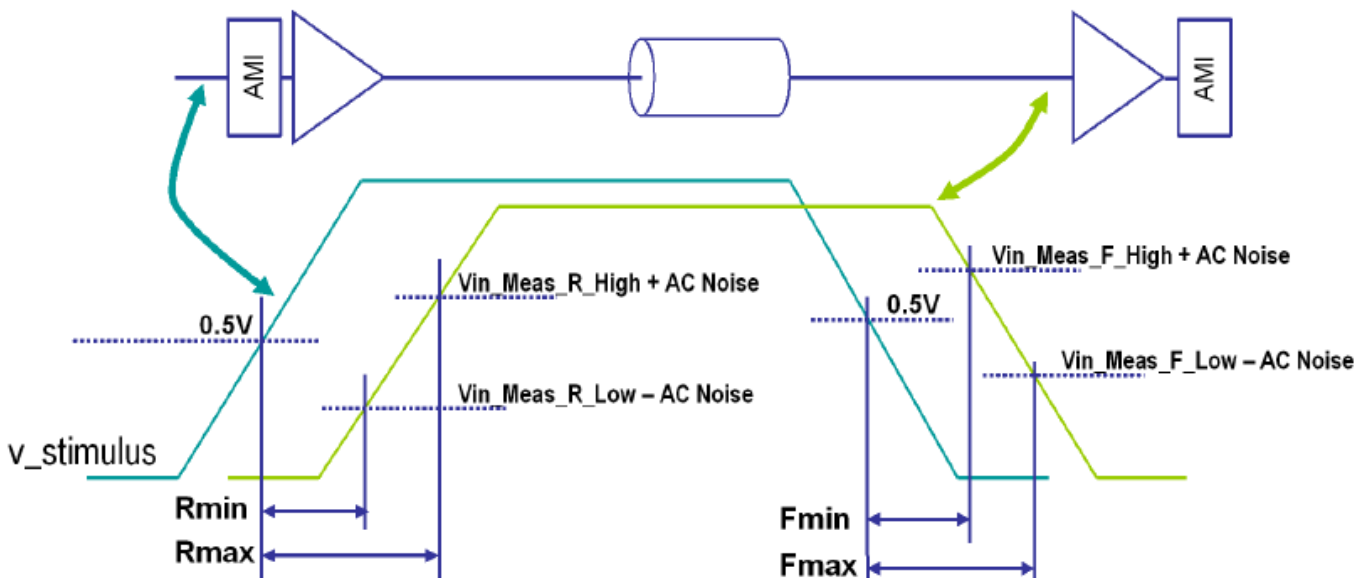

### STAT Mode Single-Ended Raw Etch Delay Measurements

For non-STAT mode simulations, every edge of every waveform is measured except for skipped edges. The first and last edge of every waveform are skipped by default. The receiver thresholds used for each delay are dependent on the target probe points:

Raw Etch Delay	Target Probe Point	Target Measurement Threshold
$R_{min}$ (Rising minimum)	pad	$V_{in\_Meas\_R\_Low}$

Raw Etch Delay	Target Probe Point	Target Measurement Threshold
$R_{\max}$ (Rising maximum)	pin	Vin_Meas_R_Low
	core	20% voltage on z node
	pad	Vin_Meas_R_High
$F_{\min}$ (Falling minimum)	pin	Vin_Meas_R_High
	core	80% voltage on z node
	pad	Vin_Meas_F_High
$F_{\max}$ (Falling maximum)	pin	Vin_Meas_F_High
	core	80% voltage on z node
	pad	Vin_Meas_F_Low
$F_{\min}$ (Falling minimum)	pin	Vin_Meas_F_Low
	core	20% voltage on z node

The z node is the output of the receiver buffer (the chip side of the buffer)

For STAT Mode simulations, use the parameter **Waveform Analysis Bits** from the Simulation Parameter dialog box to specify the number of edges to measure. The target probe point is always pad by default.


To account for the timing affect of the noise, these thresholds are offset by the AC noise parameter. The actual measurement point used for each of the thresholds are:

Threshold	Actual Measurement Point
Vin_Meas_R_Low	Vin_Meas_R_Low - AC noise
Vin_Meas_R_High	Vin_Meas_R_High + AC noise
Vin_Meas_F_High	Vin_Meas_F_High + AC noise
Vin_Meas_F_Low	Vin_Meas_F_Low - AC noise


The `_Low` thresholds become lower and the `_High` thresholds become higher when the AC noise is greater than zero. This makes the minimum delays shorter and the maximum delays longer, which reduces timing margins.

### Differential Etch Delay

The app measures the differential raw etch delays on the differential waveform (non-inverting minus inverting). The delay measurement is different in non-STAT mode and STAT mode.

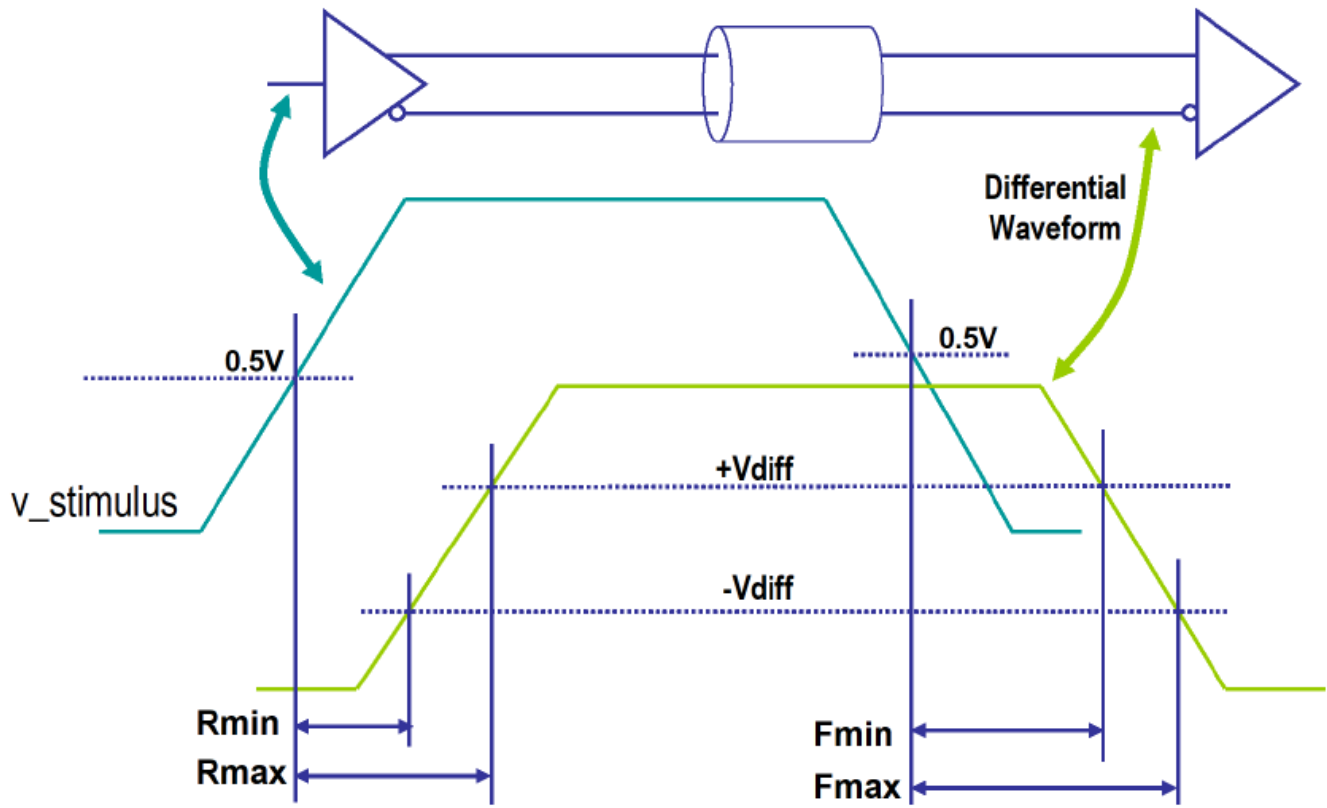

**Non-STAT Mode Differential Raw Etch Delay Measurements**

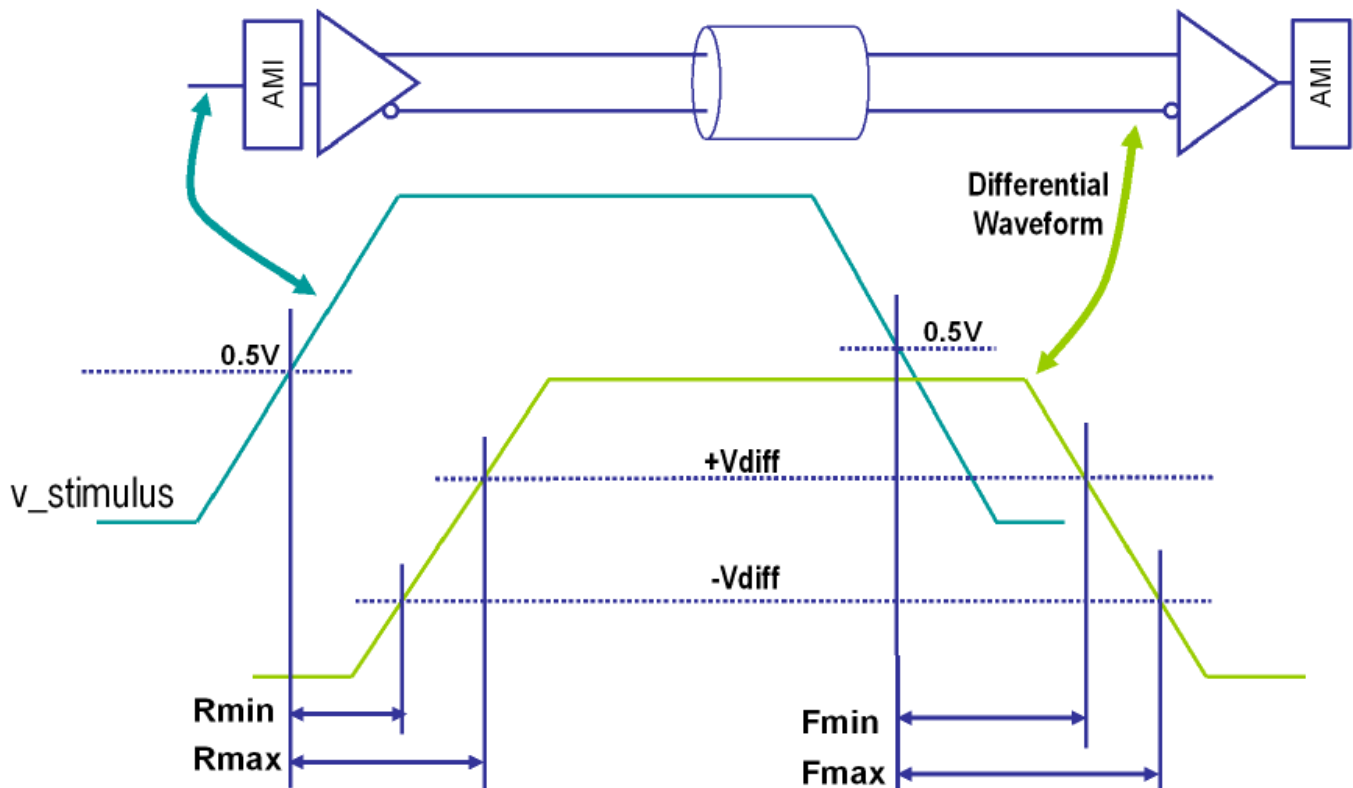

### STAT Mode Differential Raw Etch Delay Measurements

For non-STAT mode simulations, every edge of every waveform is measured except for skipped edges. The first and last edge of every waveform are skipped by default. The receiver thresholds used for each delay are dependent on the target probe points:

Raw Etch Delay	Target Probe Point	Target Measurement Threshold
$R_{\min}$ (Rising minimum)	pad	-Vdiff
	pin	-Vdiff
	core	50% voltage on z node
$R_{\max}$ (Rising maximum)	pad	+Vdiff
	pin	+Vdiff
	core	50% voltage on z node
$F_{\min}$ (Falling minimum)	pad	+Vdiff
	pin	+Vdiff
	core	50% voltage on z node
$F_{\max}$ (Falling maximum)	pad	-Vdiff
	pin	-Vdiff
	core	50% voltage on z node

The z node is the output of the receiver buffer (the chip side of the buffer).




For STAT Mode simulations, use the parameter **Waveform Analysis Bits** from the Simulation Parameter dialog box to specify the number of edges to measure. The target probe point is always pad by default.

AC Noise does not affect differential etch delays.




### Etch Delay Parameters

These parameters are placed in the [Model Spec] section of the IBIS file.

Parameter	Description	Waveform
MathWorks Vin_Meas_R_High	<ul style="list-style-type: none"> <li>The time that a rising edge last crosses Vin_Meas_R_High is used to determine the maximum rising delay.</li> </ul>	
MathWorks Vin_Meas_F_High	<ul style="list-style-type: none"> <li>The time that a falling edge first crosses Vin_Meas_F_High is used to determine the minimum falling delay.</li> </ul>	

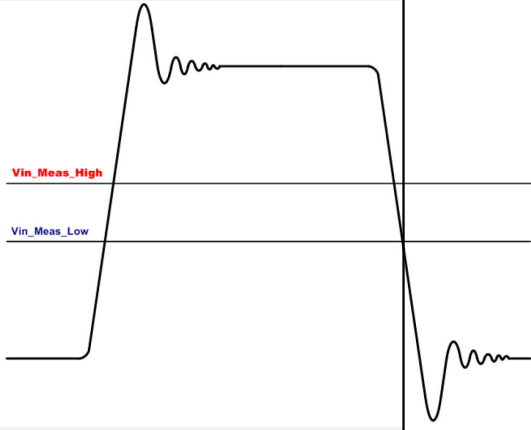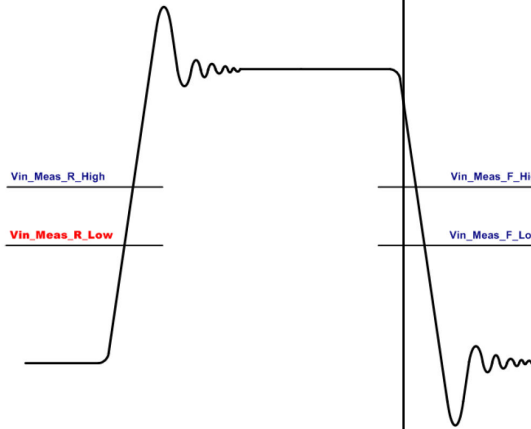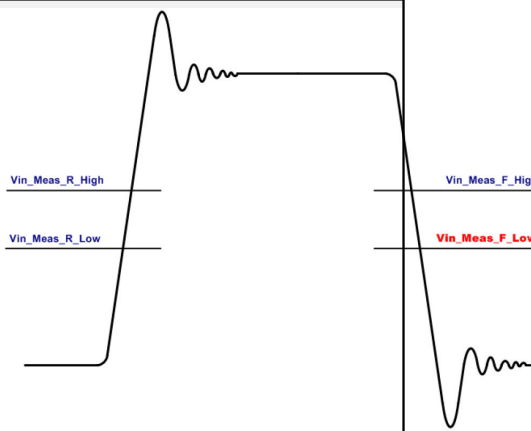Parameter	Description	Waveform
MathWorks Vin_Meas_High	<ul style="list-style-type: none"> <li>Vin_Meas_High sets the value of Vin_Meas_F_High and Vin_Meas_R_High.</li> </ul>	 <p>The waveform shows a signal that rises from a low level to a high level, stays high for a period, and then falls back to low. A red horizontal line labeled 'Vin_Meas_High' is positioned at the peak of the signal's high state. A blue horizontal line labeled 'Vin_Meas_Low' is positioned at the low state level.</p>
MathWorks Vin_Meas_R_Low	<ul style="list-style-type: none"> <li>The time that a rising edge first crosses Vin_Meas_R_Low is used to determine the minimum rising delay.</li> </ul>	 <p>The waveform shows a rising edge. A red horizontal line labeled 'Vin_Meas_R_Low' is positioned below the high state level. A blue horizontal line labeled 'Vin_Meas_R_High' is positioned at the high state level. On the falling edge, a blue horizontal line labeled 'Vin_Meas_F_High' is at the high state level, and a red horizontal line labeled 'Vin_Meas_F_Low' is at the low state level.</p>
MathWorks Vin_Meas_F_Low	<ul style="list-style-type: none"> <li>The time that a falling edge last crosses Vin_Meas_F_Low is used to determine the maximum falling delay.</li> </ul>	 <p>The waveform shows a falling edge. A red horizontal line labeled 'Vin_Meas_F_Low' is positioned at the low state level. A blue horizontal line labeled 'Vin_Meas_R_High' is positioned at the high state level. A blue horizontal line labeled 'Vin_Meas_R_Low' is positioned below the high state level. On the falling edge, a blue horizontal line labeled 'Vin_Meas_F_High' is at the high state level, and a red horizontal line labeled 'Vin_Meas_F_Low' is at the low state level.</p>

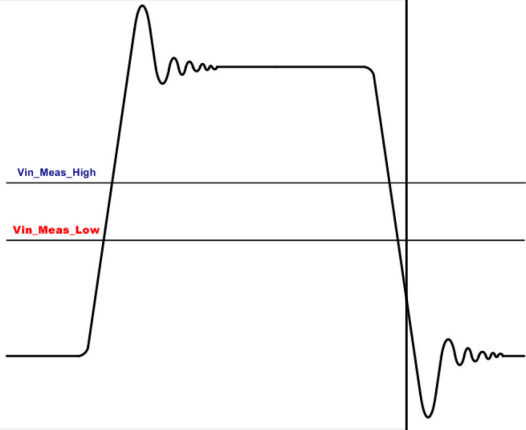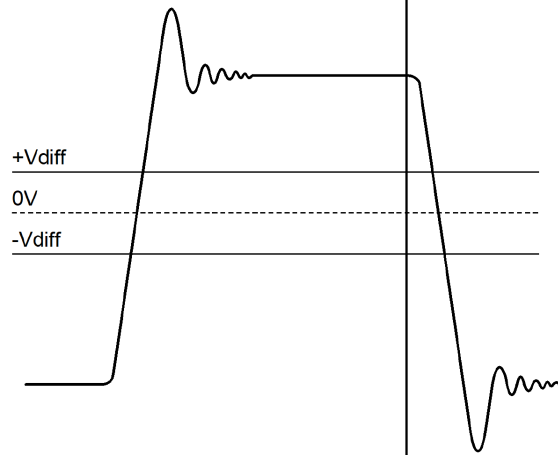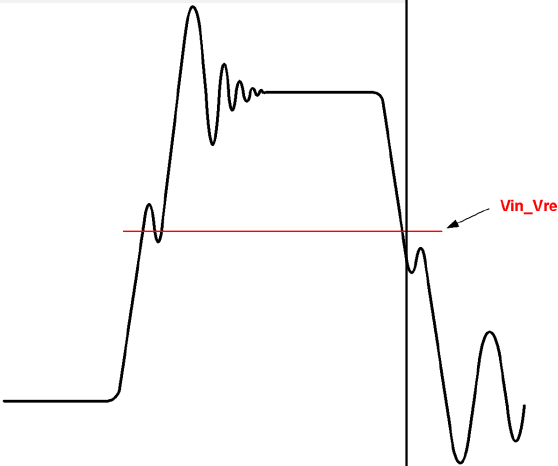

Parameter	Description	Waveform
MathWorks Vin_Meas_Low	<ul style="list-style-type: none"> <li>Vin_Meas_Low sets the value of Vin_Meas_F_Low and Vin_Meas_R_Low.</li> </ul>	
MathWorks vdiff	<ul style="list-style-type: none"> <li>The threshold value used for measuring etch delays on differential nets.</li> <li>Measured on the differential waveform (inverting minus non-inverting).</li> <li>Used to pass the differential threshold value into the SPICE deck. Used in both timing and waveform analysis.</li> <li>Similar to the <math>V_{inh}</math> and <math>V_{inl}</math> used in single-ended models.</li> <li>Overrides any value in the [Diff Pin] section in the IBIS file.</li> </ul>	
MathWorks Vin_Vref	<ul style="list-style-type: none"> <li>Used in slew rate derating calculations.</li> </ul>	

Parameter	Description	Waveform
MathWorks Derate_*	<ul style="list-style-type: none"> <li>• The derate parameters specify the slew-rate derating table values for a model. The parameters are:               <ul style="list-style-type: none"> <li>•  MathWorks Derate_Min</li> <li>•  MathWorks Derate_Max</li> <li>•  MathWorks Derate_RMin</li> <li>•  MathWorks Derate_RMax</li> <li>•  MathWorks Derate_FMin</li> <li>•  MathWorks Derate_FMax</li> <li>•  MathWorks Diff_Derate_Min</li> <li>•  MathWorks Diff_Derate_Max</li> <li>•  MathWorks Diff_Derate_RMin</li> <li>•  MathWorks Diff_Derate_RMax</li> <li>•  MathWorks Diff_Derate_FMin</li> <li>•  MathWorks Diff_Derate_FMax</li> </ul> </li> <li>• Defines one or more pairs of values that each represent a slew rate and an adjustment to interconnect delays for that slew rate.</li> <li>• The app applies derating to every edge. You can view applied derating in the <b>Derating Details</b> tab of the Waveform and Timing Report window.</li> <li>• The slew rate is the worst case of the nominal and tangential slew rate. You can change the slew rate used for derating.</li> </ul>	

Parameter	Description	Waveform
	<ul style="list-style-type: none"><li data-bbox="654 296 1049 386">• The default slew rate for the max parameters is the <math>V_{in\_AC}</math> to <math>V_{ref}</math> slew rate.</li><li data-bbox="654 396 1049 487">• The default slew rate for the min parameters is the <math>V_{in\_DC}</math> to <math>V_{ref}</math> slew rate.</li></ul>	

Parameter	Description	Waveform				
MathWorks Derate Slew	<ul style="list-style-type: none"> <li>These parameters controls the measurement thresholds used for measuring the slew rate used for slew rate derating. The parameters are:                             <ul style="list-style-type: none"> <li> MathWorks derate_min_slew</li> <li> MathWorks derate_max_slew</li> <li> MathWorks diff_derate_min_slew</li> <li> MathWorks diff_derate_max_slew</li> </ul> </li> <li>The parameters are set to one of these values:                             <ul style="list-style-type: none"> <li>DC_Vref</li> <li>DC_DC</li> <li>DC_AC</li> <li>Vref</li> <li>Vref_DC</li> <li>Vref_AC</li> <li>DC_Vref_Tangent (single-ended only)</li> <li>Vref_AC_Tangent (single-ended only)</li> </ul> </li> </ul> <p>These values control the measurement thresholds for both rising and falling edges. The names refer to the measurement points of a rising edge.</p> <ul style="list-style-type: none"> <li>The default values for the parameters are:</li> </ul> <table border="1" data-bbox="732 1713 1052 1892"> <thead> <tr> <th>Parameter</th> <th>Default</th> </tr> </thead> <tbody> <tr> <td> MathWorks derate_min_slew</td> <td>DC_Vref_Tangent</td> </tr> </tbody> </table>	Parameter	Default	MathWorks derate_min_slew	DC_Vref_Tangent	
Parameter	Default					
MathWorks derate_min_slew	DC_Vref_Tangent					

Parameter	Description		Waveform
	Parameter	Default	
	MathWorks derate_max_slew	Vref_AC_T angent	
	MathWorks diff_derate_min_slew	DC_Vref	
	MathWorks diff_derate_max_slew	Vref_AC	

## Standard Load Parameters

Parameter	Description
MathWorks VmeasR	<ul style="list-style-type: none"> <li>• Defines the value at which standard load timing on the rising edge of the waveforms is done.</li> <li>• Should match the vendor recommended level for rising edge reference timing.</li> <li>• You can specify a single value for all corners or different values for each (typical, fast, and slow) corner.</li> </ul>
MathWorks VmeasF	<ul style="list-style-type: none"> <li>• Defines the value at which standard load timing on the falling edge of the waveforms is done.</li> <li>• Should match the vendor recommended level for falling edge reference timing.</li> <li>• You can specify a single value for all corners or different values for each (typical, fast, and slow) corner.</li> </ul>

Parameter	Description
MathWorks VmeasRef	<ul style="list-style-type: none"> <li>• If both rising and falling edges have the same Vmeas value (the value may be different for each process corner), then you can use VmeasRef to specify these values.</li> <li>• VmeasRef is the vendor-recommended level where the standard load timing information is referenced. It is a single value used on both rising and falling transitions.</li> <li>• You can use VmeasRef in place of VmeasR and VmeasF, when you need only a single standard load timing level.</li> </ul>

## Other Parameters

### |MathWorks Probe\_Points Parameter

The **Parallel Link Designer** app uses the |MathWorks Probe\_Points to override the transfer net probe point property for a model. The parameter also specifies the probe point to use for the model. The parameter is set in the [Model] section of the IBIS buffer model.

**Format:** |MathWorks Probe\_Points <drv>/<rcv>, where <drv> is one of the sl\_pin, sl\_pad, or core and <rcv> is one of the pin, pad, or core.

### STAT Mode Parameters

The **Parallel Link Designer** app uses the STAT mode parameters to apply an eye mask during the STAT Mode post-processing. The app reports the margins in the Statistical and Time Domain tabs of the Results. The parameters are:

- |MathWorks Skew\_Eye\_Latch — Applies an eye mask at the latch (after equalization).
- |MathWorks Skew\_Eye\_Pad — Applies an eye mask at the die pad (before equalization).

## Threshold Parameter Precedence

Threshold Name	Parameters (Highest Precedence First)	Qualifier	Corner Used
Overshoot_High	MathWorks Overshoot_High		typ min max
	D Overshoot_High	If S Overshoot_High is defined	typ min max typ
	S Overshoot_High		typ min max typ
Overshoot_Low	MathWorks Overshoot_Low		typ min max

Threshold Name	Parameters (Highest Precedence First)	Qualifier	Corner Used
	D Overshoot_Low	If S Overshoot_Low is defined	typ min max typ
	S Overshoot_Low		typ min max typ
AC_Overshoot_High	MathWorks AC_Overshoot_High		typ min max
	S AC_Overshoot_High	If D_Overshoot_High is defined	typ min max typ
AC_Overshoot_Low	MathWorks AC_Overshoot_Low		typ min max
	S AC_Overshoot_Low	If D_Overshoot_Low is defined	typ min max typ
AC_Overshoot_Time	MathWorks AC_Overshoot_Time		typ
	D AC_Overshoot_Time		typ
AC_Overshoot_High_Area	MathWorks AC_Overshoot_High_Area		typ min max
AC_Overshoot_Low_Area	MathWorks AC_Overshoot_Low_Area		typ min max
VmeasR	MathWorks VmeasR		typ min max
	MathWorks Vmeas		typ
	Vmeas		
VmeasF	MathWorks VmeasF		typ min max
	MathWorks Vmeas		typ
	Vmeas		
Vin_Meas_R_High	MathWorks Vin_Meas_R_High		typ min max
	MathWorks Vin_Meas_High		typ min max
	Vth_Max + Offset		typ min max
	Vth + Offset		typ min max
	Vin_DC_High		typ min max
	Vin_AC_High		typ min max
	VinH		typ min max

Threshold Name	Parameters (Highest Precedence First)	Qualifier	Corner Used
Vin_Meas_F_High	MathWorks Vin_Meas_F_High		typ min max
	MathWorks Vin_Meas_High		typ min max
	Vth_Max + Offset		typ min max
	Vth + Offset		typ min max
	Vin_DC_High		typ min max
	Vin_AC_High		typ min max
	VinH		typ min max
Vin_Meas_R_Low	MathWorks Vin_Meas_R_Low		typ min max
	MathWorks Vin_Meas_Low		typ min max
	Vth_Min + Offset		typ min max
	Vth + Offset		typ min max
	Vin_DC_Low		typ min max
	Vin_AC_Low		typ min max
	VinL		typ min max
Vin_Meas_F_Low	MathWorks Vin_Meas_F_Low		typ min max
	MathWorks Vin_Meas_Low		typ min max
	Vth_Min + Offset		typ min max
	Vth + Offset		typ min max
	Vin_DC_Low		typ min max
	Vin_AC_Low		typ min max
	VinL		typ min max
Vin_AC_High	MathWorks Vin_AC_High		typ min max
	Vinh_ac + Vth + Offset		typ
	VinH		typ min max
Vin_AC_Low	MathWorks Vin_AC_Low		typ min max
	Vinl_ac + Vth + Offset		typ
	VinL		typ min max
Vin_DC_High	MathWorks Vin_DC_High		typ min max



Threshold Name	Parameters (Highest Precedence First)	Qualifier	Corner Used
	Vinh_dc + Vth + Offset		typ
	VinH		typ min max
Vin_DC_Low	MathWorks Vin_DC_Low		typ min max
	Vinl_dc + Vth + Offset		typ
	VinL		typ min max
Vdiff	MathWorks Vdiff		
	[Diff Pin] vdiff	Pre-layout: max vdiff of all pin pairs that use the model	
	0.2V		
Vdiff_DC	MathWorks Vdiff_DC		
	Vdiff		
	[Diff Pin] vdiff	Pre-layout: max vdiff of all pin pairs that use the model	
	0.2V		
Vdiff_AC	MathWorks Vdiff_AC		
	Vdiff_DC		
	Vdiff		
	[Diff Pin] vdiff	Pre-layout: max vdiff of all pin pairs that use the model	
	0.2V		
Slew_Time_max	MathWorks Slew_Time_Max		typ
	MathWorks Tslew_ac		typ
	MathWorks Tdiffslew_ac		typ
Slew_Time_min	MathWorks Slew_Time_Min		typ
Ringback_High	MathWorks Ringback_High		typ min max
	Vin_DC_High		typ min max
	VinH		typ min max

Threshold Name	Parameters (Highest Precedence First)	Qualifier	Corner Used
Ringback_Low	Ringback_Low		typ min max
	Vin_DC_Low		typ min max
	VinL		typ min max
AC_Ringback_High	AC_Ringback_High		typ min max
AC_Ringback_Low	AC_Ringback_Low		typ min max
AC_Ringback_Time	AC_Ringback_Time		typ
Vin_Vref (Rising Edge)	Vin_Vref		typ min max
	(Vin_Meas_R_High + Vin_Meas_R_Low)/2		typ min max
Vin_Vref (Falling Edge)	Vin_Vref		typ min max
	(Vin_Meas_F_High + Vin_Meas_F_Low)/2		typ min max
Vdiff_vcm_min	Vdiff_vcm_min		typ
	Vcross_low		typ
Vdiff_vcm_max	Vdiff_vcm_max		typ
	Vcross_high		typ

**Note Overshoot voltage corner usage:** When the I/O corner voltages setting is **Scale IBIS Model [Voltage Range] Typical Value** in the Simulation Preferences, the typ value is used and scaled. When the I/O corner voltages setting is **Use IBIS Model [Voltage Range]** in the Simulation Preferences, the typ, min, and max values are used.

**Note**

$$V_{th} \text{ Offset} = \{ \text{Voltage} - ([\text{Voltage Range}] \text{ typ value}) \} * \text{Threshold\_sensitivity}$$

**See Also**

**More About**

- “Waveform Analysis” on page 9-2
- “Waveform Reports” on page 9-43

# Waveform Reports

The Waveform and Timing window report contains multiple tabs with waveform data and simulation results. The results include syntax errors, analysis warnings and failures, violations of DRC and overshoot rules, waveform quality margins, and eye diagram details.

## Waveform Analysis Report Tabs

### Waveform Analysis Log

The **Waveform Analysis Log** tab contains syntax errors in the data and a summary of the waveform analysis failures.

### Waveform Summary

The **Waveform Summary** tab summarizes the errors and violations reported by the **Waveform Fatal** tab, **Waveform Quality** tab, and **Waveform Overshoot** tab. The spreadsheet contains one row per transfer net.

### Waveform Fatal

The **Waveform Fatal** tab contains all fatal waveform processing errors. A fatal error on an edge prevents the app from generating any timing or waveform data for that edge.

---

**Note** This tab only appears if there is a violation.

---

### Waveform Quality

The **Waveform Quality** tab contains all waveform DRC warnings. A warning indicates that either a waveform DRC rule has been violated or one of the basic waveform transition rules has been broken.

---

**Note** This tab only appears if there is a violation.

---

### Waveform Overshoot

The **Waveform Overshoot** tab contains all violations of waveform overshoot rules.

---

**Note** This tab only appears if there is a violation.

---

### Waveform Margin by Variation

The **Waveform Margin** tab contains all salient waveform quality information that appears under the other waveform quality tabs by simulation. For pre-layout, it includes the solution space values. The margins are reported as one row per simulation.

### Eye Details

The **Eye Details** tab contains detailed data on the eye diagram at the receiver for each simulation. This includes eye opening with timing jitter and the outer amplitudes of its envelope. This tab also

has the timing points on the simulation where this data was measured. For pre-layout, it includes the solution space values. The eye measurements are reported as one row per node per simulation.

### Eye Rollups

The **Eye Rollups** tab contains the eye diagram, eye opening, jitter and outer height by receiver. It summarizes the eye details for each transfer net.

### Waveform Margin by TNET

The **Waveform Margin by TNET** tab contains waveform quality information that appears under the other waveform quality tabs, organized by simulation and rolled up for each transfer net. The margins are reported as one row per transfer net.

### Derating Details

The **Derating Details** tab contains the slew rates and the etch delays (raw and derated). The slew rate parameters are measured as:

- **Slew Rate (rising)** — Last crossing of Vin\_DC\_Low to first crossing of Vin\_AC\_High.
- **Slew Rate (falling)** — Last crossing of Vin\_DC\_High to first crossing of Vin\_AC\_Low.
- **DC Slew Rate (rising)** — Last crossing of Vin\_DC\_Low to first crossing of Vin\_DC\_High.
- **DC Slew Rate (falling)** — Last crossing of Vin\_DC\_High to first crossing of Vin\_DC\_Low.
- **AC Slew Rate (rising)** — Last crossing of Vmeas to first crossing of Vin\_AC\_High.
- **AC Slew Rate (falling)** — Last crossing of Vmeas to first crossing of Vin\_AC\_Low.

### Mask Results



The **Parallel Link Designer** app processes the mask data waveforms individually and combine them to create the mask reports. mask does not have fixed measurement thresholds. All measurements are relative to Vref. The app determines Vref for each waveform and then combines them for each memory device.

Mask Report Column	Definition	Graphical Representation
# Eyes Rolled up For Margin	<ul style="list-style-type: none"> <li>• The number of eyes the app uses to determine the margins.</li> <li>• It can be more than one memory device.</li> </ul>	
# Eyes Rolled up For Vref	<ul style="list-style-type: none"> <li>• The number of eyes the app uses to determine the trained <math>V_{REF}</math>.</li> <li>• Typically all eye for a memory device.</li> </ul>	
Trained Vref (V)	Halfway between the smallest Mask High Boundary and largest Mask Low Boundary of all eye rolled up for $V_{REF}$ .	

Mask Report Column	Definition	Graphical Representation
Trained Vref (%)	Defined as: $100 \cdot \frac{V_{REF}}{V_{DD}}$	
Trained Eye Height ViVW Margin (V)	The smallest margin from the mask centered at Trained $V_{REF}$ to the Eye High Boundary and Eye Low Boundary.	
Trained Eye Width TiVW Margin (ns)	The smallest margin from the mask centered at Trained $V_{REF}$ to the Eye Left Boundary and Eye Right Boundary.	
$V_{REF}$ (V)	<ul style="list-style-type: none"> <li>Determined by finding the smallest voltage above the middle of the eye (<math>V_{ABOVE}</math>) and largest voltage below the middle of the eye (<math>V_{BELOW}</math>) for each time point for each waveform.</li> <li>Represents the average of the max and min voltages:</li> </ul> $V_{REF} = \frac{V_{ABOVE} - V_{BELOW}}{2}$	
$V_{REF}$ (%)	Defined as: $100 \cdot \frac{V_{REF}}{V_{DD}}$	
Eye Height (V)	The maximum inner eye height for this waveform.	
Eye Width (ns)	The maximum inner eye width for this waveform.	
$V_{CENT}$ (V)	<ul style="list-style-type: none"> <li>Measured at the time that is the center of the eye mask.</li> <li>Defined as</li> </ul> $V_{CENT} = \frac{V_{ABOVE} - V_{BELOW}}{2}$	
Eye Width at $V_{CENT}$ (ns)	The width of the eye at $V_{CENT}$ for a waveform.	

Mask Report Column	Definition	Graphical Representation
$V_{CENT}$ TiVW Margin (ns)	The Eye Width at $V_{CENT}$ excluding the TiVW. TiVW represents the receiver mask width.	
Edge Pulse Width TiPW (ns)	The smallest pulse width measured at $V_{REF}$ .	
Edge Pulse Width TiPW Margin (ns)	The Edge Pulse Width TiPW (ns) excluding the TiPW. TiPW represents the minimum pulse width at $V_{CENT}$ .	
Edge VIH <sub>L</sub> _AC Low Margin (V)	<ul style="list-style-type: none"> <li>The smallest voltage after the voltage crosses the DC threshold.</li> <li>Worst case margin across all falling edges.</li> </ul>	
Edge VIH <sub>L</sub> _AC High Margin (V)	<ul style="list-style-type: none"> <li>The largest voltage after the voltage crosses the DC threshold.</li> <li>Worst case margin across all rising edges.</li> </ul>	
Edge Min Slew Rate SRIN <sub>diVW</sub> (V/ns)	<ul style="list-style-type: none"> <li>The smallest slew rate measured between <math>V_{REF} - \frac{ViVW}{2}</math> and <math>V_{REF} + \frac{ViVW}{2}</math>. ViVW represents the peak-to-peak height of the receiver mask.</li> <li>The measurements are to the last crossing of the threshold. As a result, ringback affects the measured slew rate.</li> </ul>	
Edge Max Slew Rate SRIN <sub>diVW</sub> (V/ns)	<ul style="list-style-type: none"> <li>The largest slew rate measured between <math>V_{REF} - \frac{ViVW}{2}</math> and <math>V_{REF} + \frac{ViVW}{2}</math>. ViVW represents the peak-to-peak height of the receiver mask.</li> </ul>	
Edge Min Slew Rate SRIN <sub>diVW</sub> Margin (V/ns)	Minimum slew rate (Edge Min Slew Rate SRIN <sub>diVW</sub> (V/ns)) excluding the SRIN <sub>diVW</sub> _Min. SRIN <sub>diVW</sub> _Min represents the minimum input slew rate over the peak-to-peak height of the receiver mask.	

Mask Report Column	Definition	Graphical Representation
Edge Max Slew Rate SRIN_diVW Margin (V/ns)	Maximum slew rate (Edge Max Slew Rate SRIN_diVW (V/ns)) excluding the SRIN_diVW_Max. SRIN_diVW_Max represents the maximum input slew rate over the peak-to-peak height of the receiver mask.	
Edge Min SRIN_sr2 (V/ns)	<ul style="list-style-type: none"> <li>• The smallest slew rate measured between <math>V_{REF} + \frac{ViVW}{2}</math> and VIHL_AC (rising edge) and <math>V_{REF} - \frac{ViVW}{2}</math> and VIHL_AC (falling edge). VIHL_AC represents the minimum peak to peak AC input swing at the receiver.</li> <li>• Measurements are from the last crossing of the <math>V_{REF} \pm \frac{ViVW}{2}</math> threshold to the first crossing of the VIHL_AC threshold. As a result, ringback affects the measured slew rate.</li> </ul>	
Edge Max SRIN_sr2 (V/ns)	<ul style="list-style-type: none"> <li>• The largest slew rate measured between <math>V_{REF} + \frac{ViVW}{2}</math> and VIHL_AC (rising edge) and <math>V_{REF} - \frac{ViVW}{2}</math> and VIHL_AC (falling edge). VIHL_AC represents the minimum peak to peak AC input swing at the receiver.</li> <li>• Measurements are from the last crossing of the <math>V_{REF} \pm \frac{ViVW}{2}</math> threshold to the first crossing of the VIHL_AC threshold. As a result, ringback affects the measured slew rate.</li> </ul>	
Edge Min SRIN_sr2 Margin (V/ns)	Minimum slew rate (Edge Min SRIN_sr2 (V/ns)) excluding the SRIN_sr2. SRIN_sr2 represents the minimum input slew rate from ViVW mask to AC threshold.	

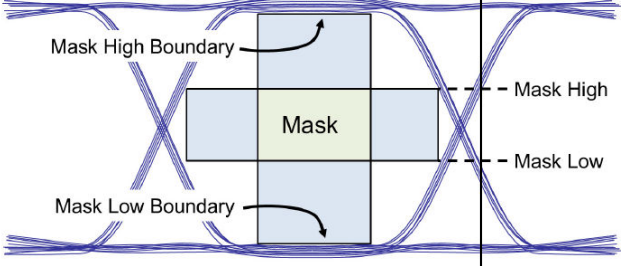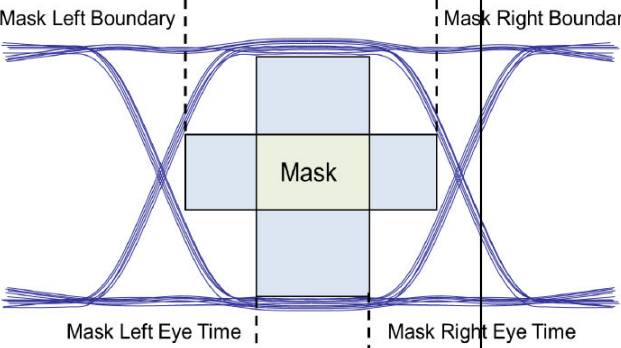Mask Report Column	Definition	Graphical Representation
Edge Max SRIN_sr2 Margin (V/ns)	Maximum slew rate (Edge Max SRIN_sr2 (V/ns)) excluding the SRIN_sr2. SRIN_sr2 represents the minimum input slew rate from ViVW mask to AC threshold.	
Mask Low (V)	$V_{REF} - \frac{ViVW}{2}$	
Mask High (V)	$V_{REF} + \frac{ViVW}{2}$	
Mask Low Boundary (V)	The lowest voltage the bottom of the mask could have and still fit in the eye.	
Mask High Boundary (V)	The highest voltage the bottom of the mask could have and still fit in the eye.	
Mask Left Eye Time (ns)	<ul style="list-style-type: none"> <li>The eye time of the left edge of the mask.</li> <li>The mask includes TiVW and TiVW output skew (to account for the skew of the driving device).</li> </ul>	
Mask Right Eye Time (ns)	<ul style="list-style-type: none"> <li>The eye time of the right edge of the mask.</li> <li>The mask includes TiVW and TiVW output skew (to account for the skew of the driving device).</li> </ul>	
Mask Left Boundary (ns)	The earliest eye time the left edge of the mask could have and still fit in the eye.	
Mask Right Boundary (ns)	The latest eye time the right edge of the mask could have and still fit in the eye.	



Mask Report Column	Definition	Graphical Representation
Eye Height ViVW Margin (V)	<ul style="list-style-type: none"> <li>The amount mask can move in voltage within TiVW Width.</li> <li>It is the smaller of Mask High Boundary excluding Mask High and Mask Low excluding Mask Low Boundary.</li> </ul>	
Eye Width TiVW Margin (ns)	<ul style="list-style-type: none"> <li>The amount mask can move in time within ViVW Height.</li> <li>It is the smaller of Mask Left Time excluding Mask Left Boundary and Mask Right Boundary excluding Mask Right Time.</li> </ul>	
AC Inner Eye Height (V)	Difference between the largest voltage in mask range and the smallest voltage in mask range.	
AC Inner Eye Total Margin (V)	AC Inner Eye Height excluding VIH <sub>L</sub> _AC.	
AC Eye Min (V)	The smallest voltage in mask range.	
AC Eye Max (V)	The largest voltage in mask range.	
Eye Start Sim Time (ns)	Simulation time of the start of the waveform data used to create the eye.	
Eye Stop Sim Time (ns)	Simulation time of the end of the waveform data used to create the eye.	

## See Also

### More About

- “Waveform Analysis” on page 9-2
- “Waveform Analysis Parameters and Thresholds” on page 9-6



# Parallel Link Featured Examples

---

- “Configure DDR Controller with Two Memory Designators” on page 10-2
- “Post-layout of DDRx Interface with CPU and DIMMs” on page 10-8
- “DDR5 IBIS-AMI with Clock Forwarding” on page 10-30
- “DDRx Timing and Waveform Mask Analysis” on page 10-32

## Configure DDR Controller with Two Memory Designators

This example shows how you can configure a DDR controller with two custom memory designators.

### Create New Project

Open the **Parallel Link Designer** app.

```
parallelLinkDesigner
```

Signal Integrity Toolbox recommends you to set the Java Heap Memory to at least 8192MB. Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory  
Current Java Heap: 343MB with 47MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.

Create a new project by selecting **File > Project > New Project**. In the newly opened dialog box, name the project as `ddr2_controller`, the interface as `ddr2`, and the schematic sheet as `dq`. The **Pre-Layout Analysis** tab shows the blank schematic sheet.


### Set Up Libraries

You can create the library elements for the transmission lines, packages, connectors, and designators. In this case, you want to model a DIMM (dual in-line memory module) that has a stackup that gives a 60 ohm impedance for traces on the top and bottom layers (where the dq nets are routed). So, you need to create a 60 ohm transmission line model to be used for the transmission line segments of the DIMM.

### Create T Line Model

Create a differential lossy transmission line model based on a stripline cross-section. Select **Tools > Lossy Transmission Line Editor**. In the newly opened Lossy Transmission Line Editor dialog box, select **Single Conductor** and select Model Type as **Microstrip**. The **Microstrip** model type routes data lines on the top and bottom of the DIMM. The traces are 4 mils wide and 2.1 mils thick. They are 3.8 mils above a dielectric of  $\epsilon_r$  4.4. So change the parameters **Trace Thickness (mils)** to 2.1, **Dielectric Height (H1 in mils)** to 3.8, and **Er at f** to 4.4.

Click the **Calculate** button to run the 2-D field solver. The Impedance at the bottom left changes from derived to the calculated value.

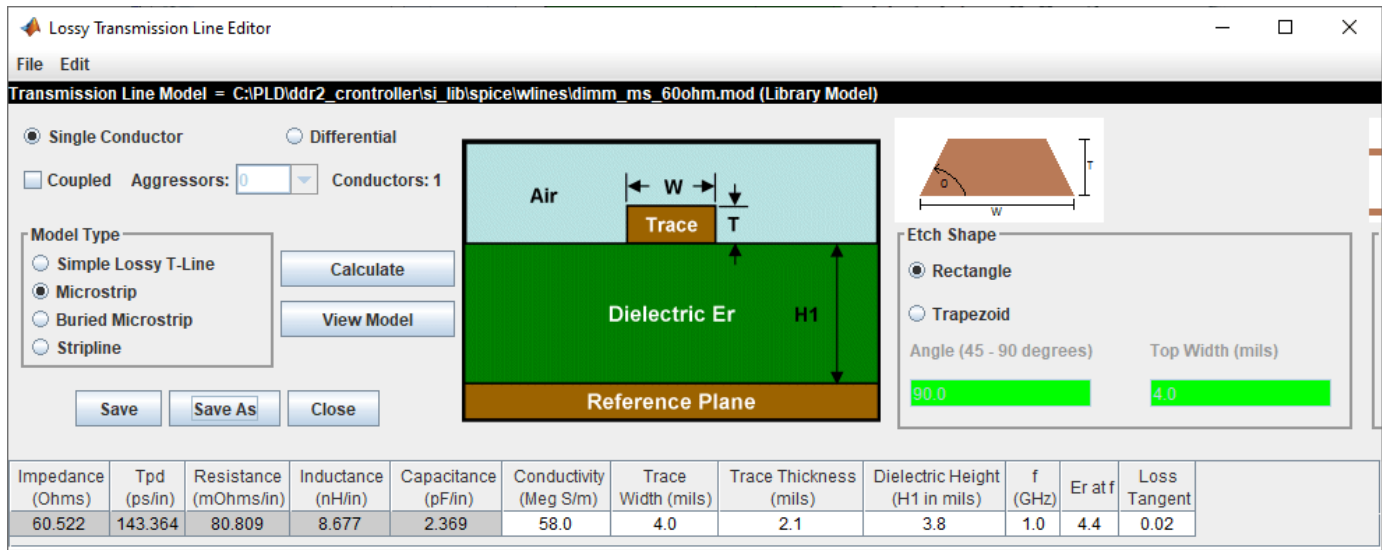

Click the **Save As** button to save the model in the project's library. Use the name `dimm_ms_60ohm`. Make sure the directory is `<Project Library>/spice/wlines`. Close the Lossy Transmission Line Editor.

### Add Connector Model

Download the model file `dimm_connector.mod` attached as a supporting file to the example and copy it to the project library `<project_name>/si_lib/spice/connectors`.

### Create Clock Domains

The bit times for the nets in the project come from the clock domain file. Edit the clock domain file by selecting **Setup > Clock Domain** and add the following lines:

```

ddr2_ck_period = 5.0
ddr2_ck_ui = ddr2_ck_period/2
ddr2_ctrl_ui = ddr2_ck_period
ddr2_addcmd_ui = 2 * ddr2_ck_period
ddr2_dq_ui = ddr2_ck_period/2
ddr2_dqs_ui = ddr2_ck_period/2

```

This sets the base clock period (`ddr2_ck_period`) to 5 ns. The data rate for all the other netclasses are set based on this rate. Changing the base clock period changes the data rate for the entire interface.

Save and close the clock domain file.


### Import IBIS Models

Download and extract the `IBIS_files.zip` attached to this example. Select **Libraries > Import IBIS** and browse to the location of the downloaded files to import both ddr2 controller and sdram files.

Note that both IBIS files use the same `dq_dm_sstl_18.inc` file to define the 1.8V SSTL voltage levels, so you may get a Warning dialog that this file already exists. Since it is the same file, you can select either Yes or No.

### Create Schematic


Add three single-ended designators, one controller designator on the left and two memory designators on the right. Select the controller designator on the left, right click and select **Edit Designator Parts and Pins**. Set the **Designator** parameter to `controller` and **Part Name** parameter to `ddr2_controller` from the dropdown menu. Since this schematic sheet represents the DQ nets, you need to add all data pins of the controller to the designator. To make it easier to select them, select **Collapse Lists Into Vector Notation**. Select `DQ[63:0]` and click the right arrow button to assign it to the designator.

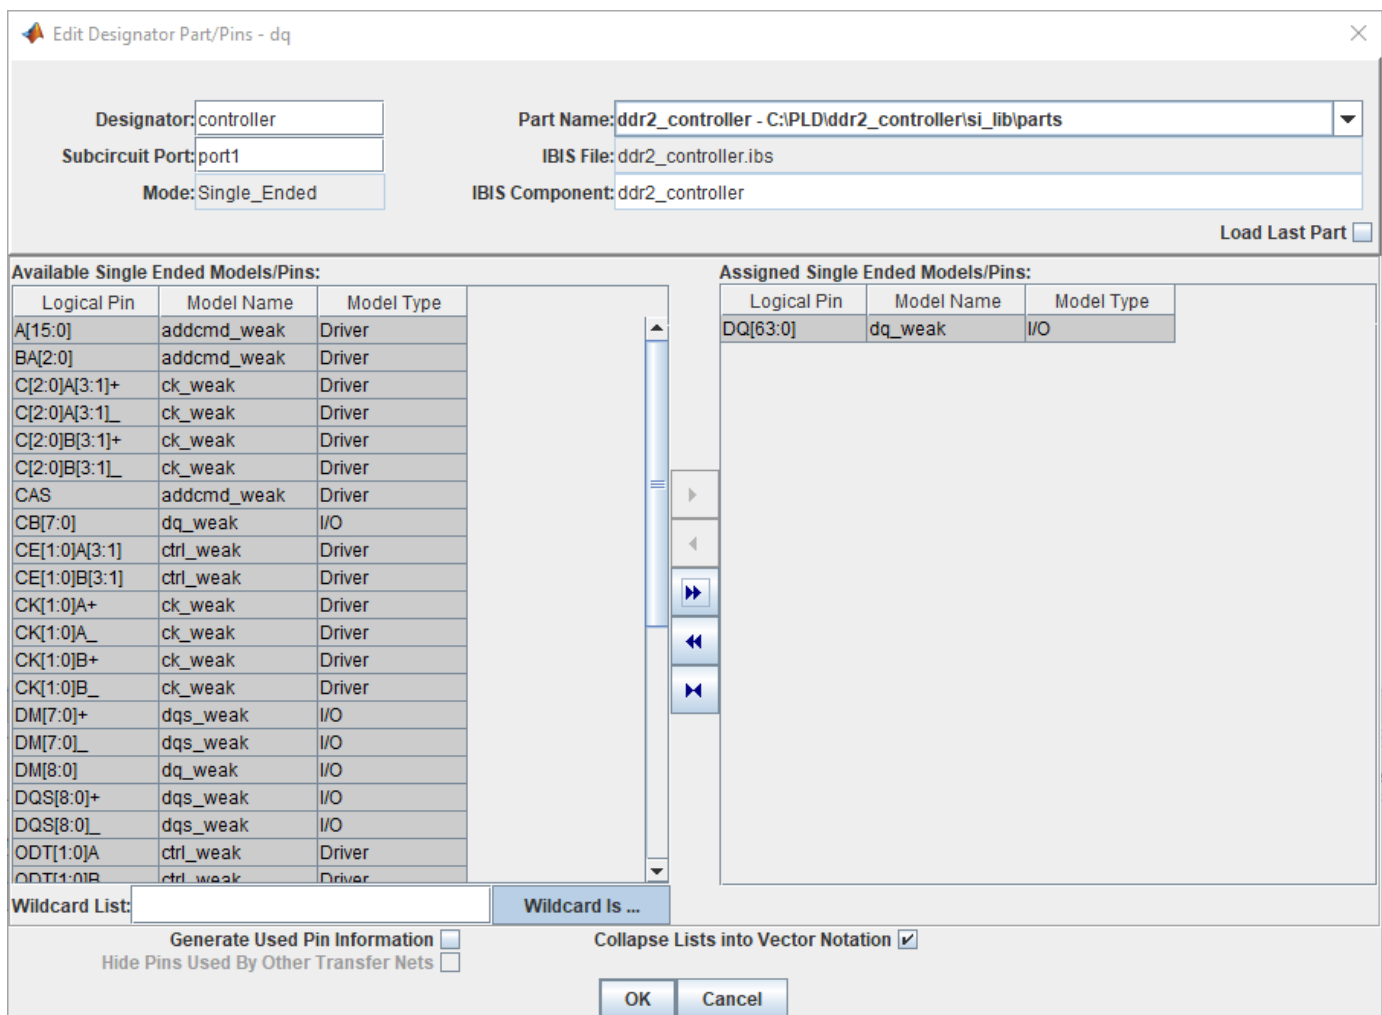

Click **OK** to close the Edit Designator Pat/Pins dialog box.

Edit the two memory designators in the same manner as the controller. Name the top one `slot1_dram` and the bottom one `slot2_dram`. For both designators use the `ddr2_sdram` part and include pins `DQ[15:0]`.

Use two lossy transmission line elements to model the etch from the controller to slot one, and the etch from slot one to slot two. Double click on the transmission lines symbols to change their lengths. Change the controller to slot one t-line length to 4.2 in and the slot one to slot two t-line length to 0.625 inches.

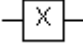To add the DIMM connector models, use the subcircuit element (  ). In the newly opened dialog box, set the directory to <Project Library>\spice\connectors and select the `dimms_connector.mod` file. Place two connector subcircuits on the schematic, one for each DIMM.

There is a series resistor on each DIMM with a transmission line segment on each side. Add the resistor and a transmission line element. Double click and change the resistor value to 22 ohm. Right click on the transmission line element for one side of the DIMM, select **Select T-Line Model** from the menu, go to directory <Project Library>\spice\wlines and select `dimms_ms_60ohm` transmission line model that you created. Copy the resistor one more time for slot two, and the transmission line element three more times to have them both sides of the resistors. On the left side, set the transmission line segment lengths to 0.12 inch. On the right side, set the transmission line segment length to 0.79 inch. Connect the elements by double clicking on each connection to add wires to complete the schematic.


State: default  
UI: 1.0ns  
Type: Data  
Topology: dq

Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:
dq	Etch	Corner	List	Corners	TE (Typ)	

Reference Set: set1    Unset    AT Simulation Count: 0    Base SPICE Simulation Count: 3


### Setup Simulation and Validate Schematic



Double-click on the gear symbol (  ) to launch the Sheet Simulation Control dialog box. Set the **UI** to 2.5 ns by selecting 2.5ns - ddr2\_dq\_ui from the dropdown menu.

In the solution space, select both slow and fast corners for etch and process corners.



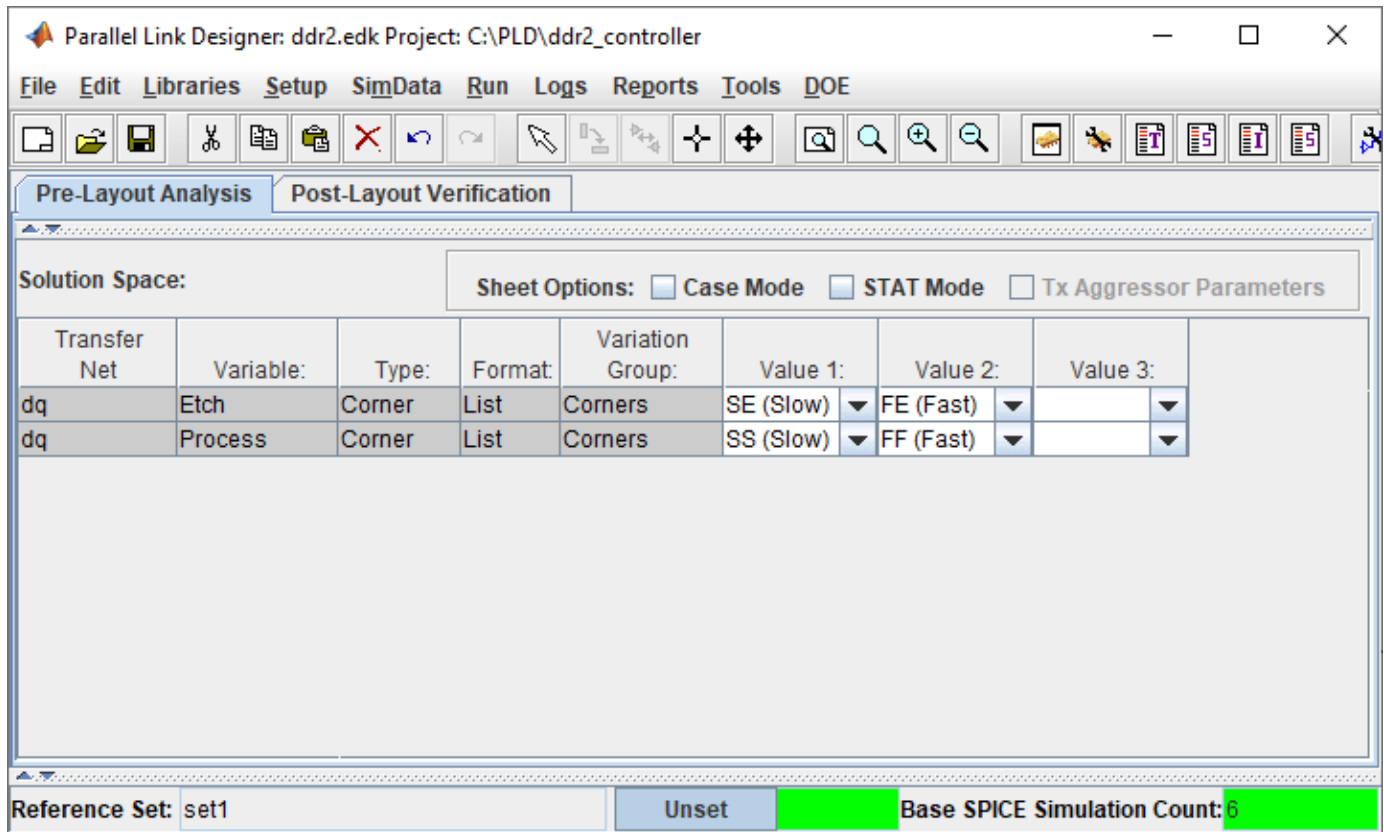

Validate the schematic by selecting **Run > Validate Current Schematic Set**. The validation log should report no error and one warning. The warning says that the three transfer net designators have no timing data. This is telling you that there are no timing models for the controller or dram.

## See Also

### More About

- “Post-layout of DDRx Interface with CPU and DIMMs” on page 10-8

## Post-layout of DDRx Interface with CPU and DIMMs

This example demonstrates the use of **Parallel Link Designer** in the Signal Integrity Toolbox™ in MATLAB® to set up a post-layout analysis of a DDRx interface on a Main Board having a CPU connected to two DIMM slots to verify that waveform quality and timing margins are met by the PCB database. Many of the steps illustrated in this example are also applicable to **Serial Link Designer** for post-layout analysis of SERDES links.

**Note:** Post-layout extraction and analysis requires RF PCB Toolbox™ in addition to Signal Integrity Toolbox. The focus of this example is to illustrate how to setup a post-layout project in **Parallel Link Designer** or **Serial Link Designer**.

**Note:** While there are DDR5 IBIS models in the support project "DDRx\_CPU\_Dimm\_Postlayout," the circuit topologies do not represent a real-world DDR5 system and are meant only to represent an abstract DDRx interface. If your focus is specifically DDR5, please see the DDR5 specific examples.

### Overview

This tutorial shows how Parallel Link Designer can be used to analyze a DDRx memory interface in pre-layout and post-layout using an implementation kit as the starting point. This example assumes you are beginning with the implementation kit "DDRx\_CPU\_Dimm\_Postlayout" from the support package site. This kit has Parts pre-configured for ICs such as CPU and SDRAM. It also has pre-layout schematic sheets matching the configuration of the interface to be analyzed on the PCB database. This will allow you to begin Signal Integrity analysis immediately since all models and schematic sheets are part of the kit. If an implementation kit were not available for this interface, you would need to build the simulation environment (Parts, IBIS Models, and pre-layout topologies) from a new project. An implementation kit is simply a way to reuse a project once all of the above tasks have been done. So for example, a copy of your post-layout kit may be used for another hardware design if it uses the same CPU, DIMM and ASIC components.

### Post-Layout Verification

Post-layout verification is used to verify that the voltage and timing margins are met on the routed board. In this section you will import and set up the post-layout system, simulate and analyze the nets. Example board databases for a Main Board(file "mb.zip") and DIMM(file "dimm.zip") are provided as attachments to this example in **Parallel Link Designer** "Neutral" format. You can acquire these by clicking the button to download the attachments and place into a folder called "boards." You can also follow the steps in this example as a guide to create a post-layout project with your own PCB databases. The following are the key points to create and configure a Post-layout project.

### Import and Setup Boards

- Import Main Board and DIMM
- Configure PCB stackup
- Set voltages for IO and any active-termination nets
- Configure or create Parts (which contain IBIS and IBIS-AMI models)

### Create and Connect Instances

- Create Instances of the Main Board and two DIMMs

- Configure connectivity between Instances of the Main Board and DIMMs
- Setup connector models

### Setup and Run Assignment

- Select CAD nets to include/exclude for Assignment to Transfer Nets
- Run Setup and Assignment
- Configure any Model Overrides for padstacks (vias) or Traces in project database
- View Transfer Nets of interest in the boards with Signal Integrity Viewer

### Configure Transfer Net Properties

- Configure source-destination bus transactions in Transfers dialog
- Set IBIS models for IO drive strength (ODS) and on-die termination (ODT)

### Run Post-Layout Simulation

- Configure PostLayout SI/Timing Simulation dialog
- Run project simulation

### Open DDRx CPU Dimm Postlayout Kit


Open the kit "DDRx\_CPU\_Dimm\_Postlayout" in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function:

```
openSignalIntegrityKit("DDRx_CPU_Dimm_Postlayout");
```

Signal Integrity Toolbox recommends you to set the Java Heap Memory to at least 8192MB. Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory  
Current Java Heap: 593MB with 198MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.

### Set up Post-Layout Verification

Post-Layout Verification is set up and performed from the Post-Layout Verification tab:

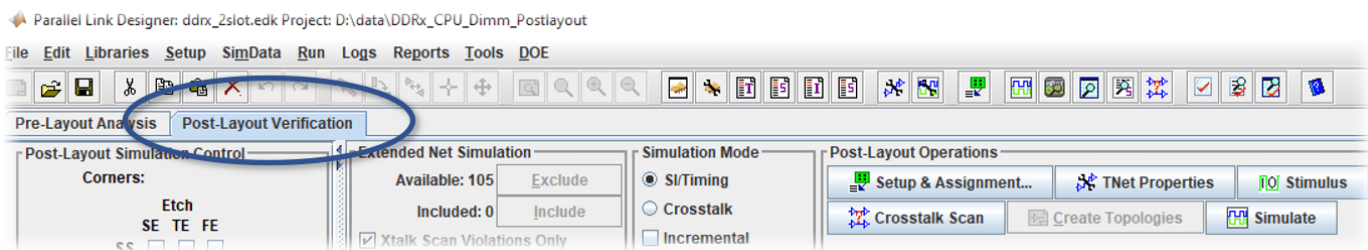


PCB databases are imported into Parallel Link Designer. Then you can configure the PCB stackup information, voltage nets and models assigned and are then placed into a board library which can be used across multiple interfaces. Boards from the library are instantiated and connected to enable Signal Integrity analysis of a complete end-to-end system. For this tutorial there is a Main Board and a DIMM. You will import and set up these two PCB databases, then create **Instances** for use in simulation analysis, and connect them together by using the **Add Connections** dialog.


## Import and Setup Boards

### Import Main Board


PCB databases are imported from the Setup & Assignment dialog. Click the Setup & Assignment button to launch the dialog.

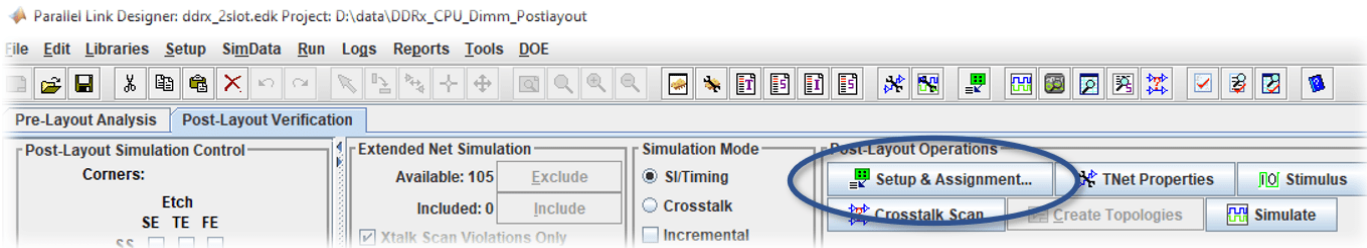

To import a board click the Import & Setup Board button on the Setup & Assignment dialog.

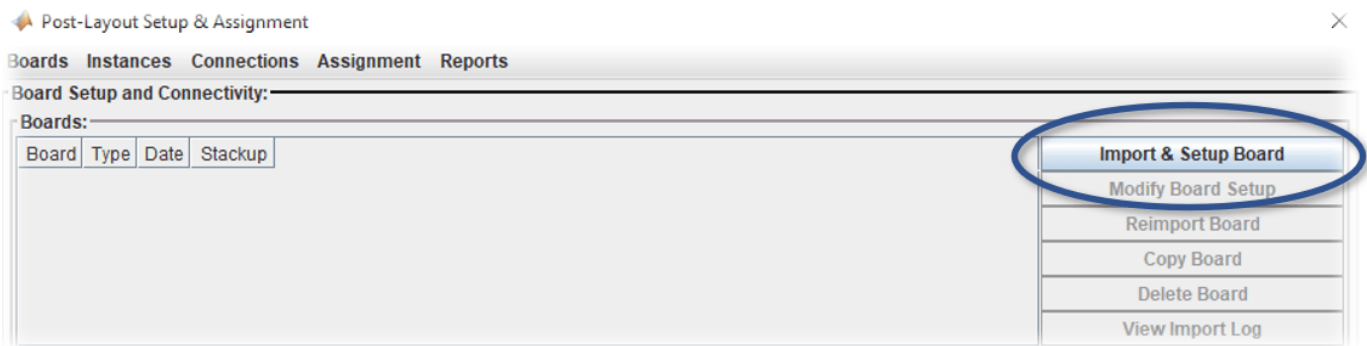



This will launch the Import & Setup Board dialog with the Import Board tab active. You can select from a number of different formats of PCB database from the **PCB Database Type** dropdown menu. The PCB databases of the Main Board and DIMM attached to this example are in **Parallel Link Designer** "Neutral" format, so select this option from the list.

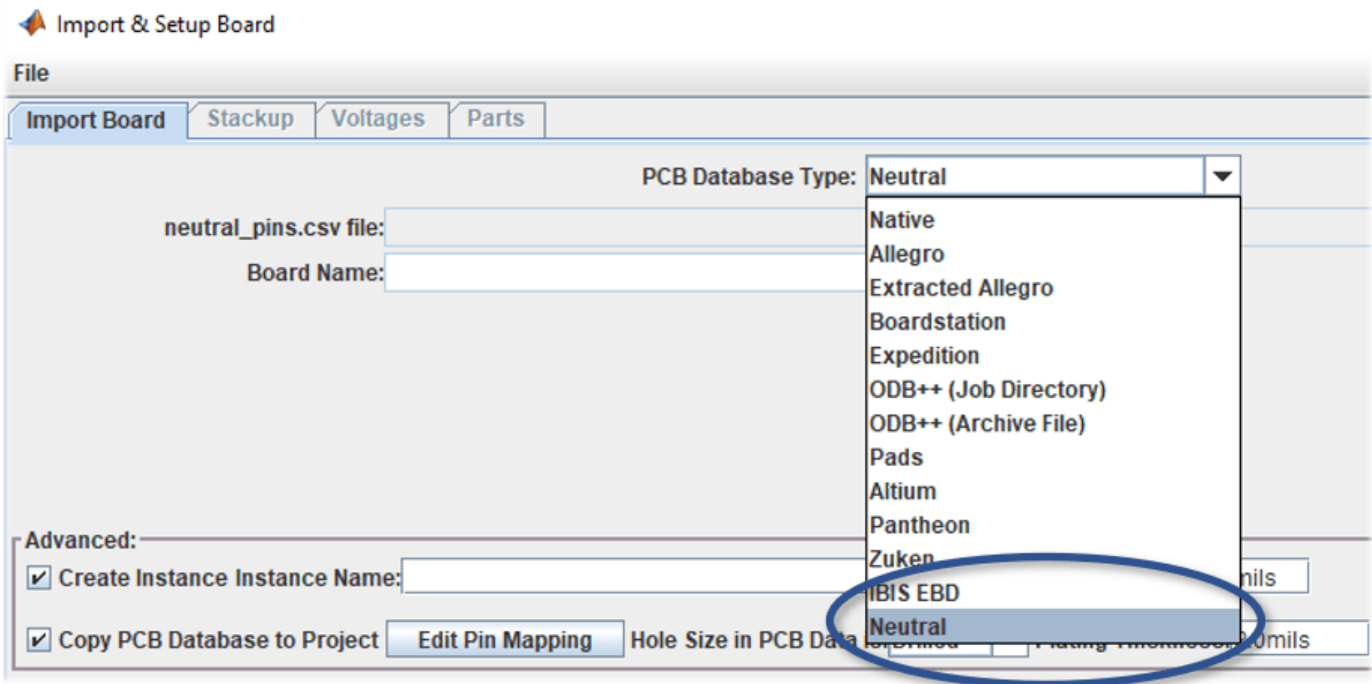

Attached to this example are two PCB databases, which are provided in **Parallel Link Designer** "Neutral" format as archives "mb.zip" for the Main Board PCB and "dimm.zip" for the DRAM memory DIMM. You download and extract these .zip files into a folder called "boards" for organization purposes.

Click the **Browse** button and navigate to the folder where you downloaded the PCB databases and click **Open** button to select the the boards\mb\nneutral directory.

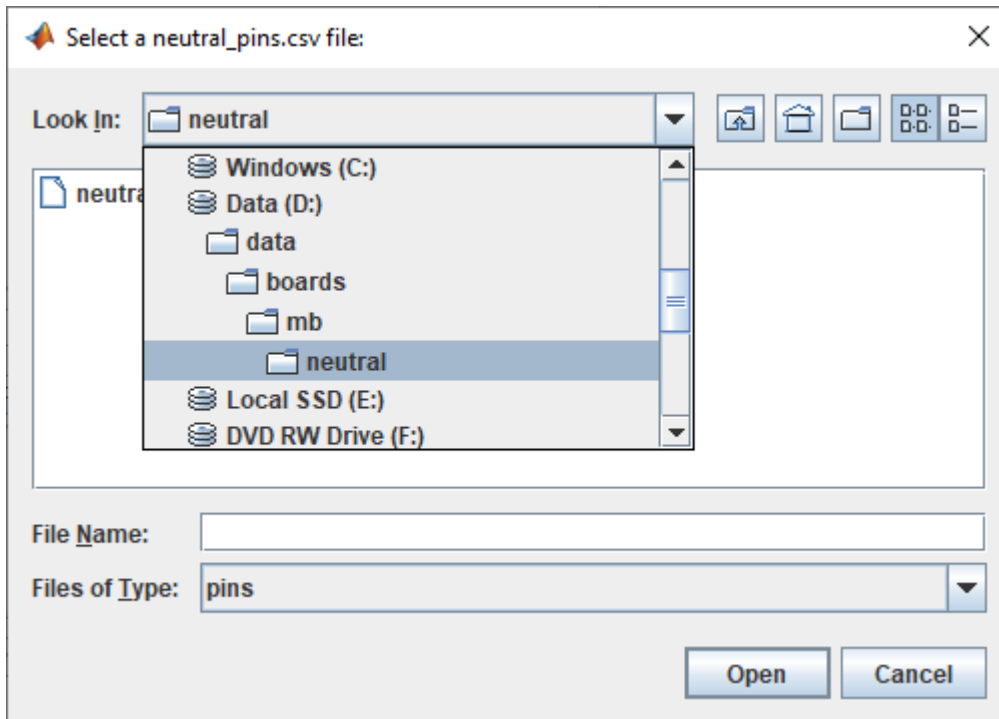

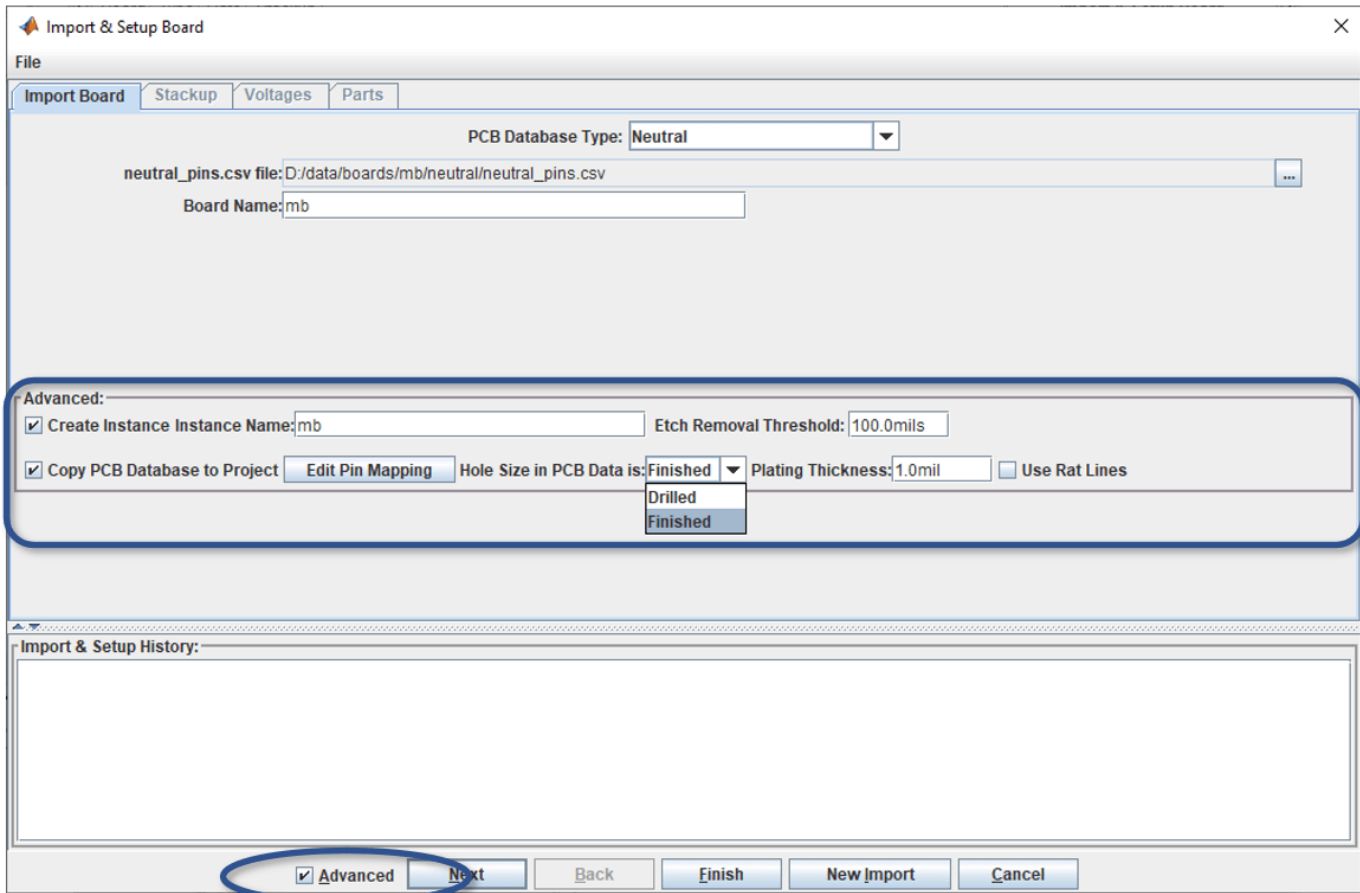


Before clicking the **Next** button to import a board, you may wish to select the "Advanced" option. This displays options for:

- Create a new **Instance Name**
- Copy original PCB Database to the Project folder
- Set PCB fabrication option for **Etch Removal Threshold**
- Declare Padstack Hole Size in PCB database as **Drilled** or **Finished**
- Set **Padstack Plating Thickness**
- Option to determine connectivity by using CAD **Rat Lines** if traces are not yet laid out

Click the **Next** button at the bottom of the Import & Setup dialog to read the PCB database and generate the PCB stackup information.


When the PCB database has completed importing, the Stackup tab will appear. This shows the PCB stackup information that Parallel Link Designer read from the PCB database.

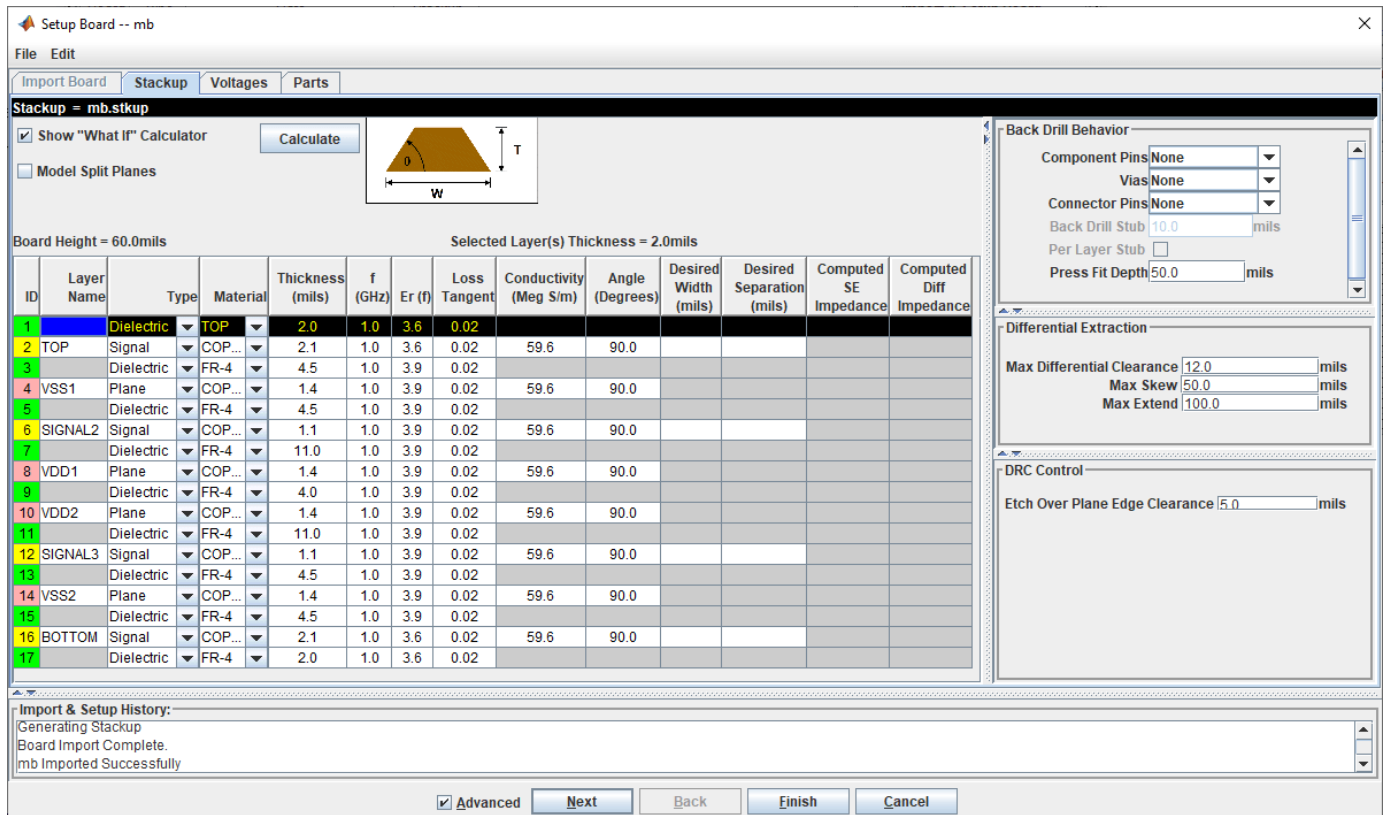

You may need to add a layer to the top and bottom of the stackup that represents dielectric or solder mask. Typically its depth ranges between 0.5 to 2.0 mils. You also may need to make corrections to Dielectric Constant (Er) or Loss Tangent (or Dissipation Factor,  $\tan \delta$ ) for layers not configured by CAD in the original PCB database.

In this case, no changes to the PCB stackup are needed, so click the **Next** button at the bottom of the Import & Setup Board dialog to continue. The Voltage Nets tab will appear (See Figure).




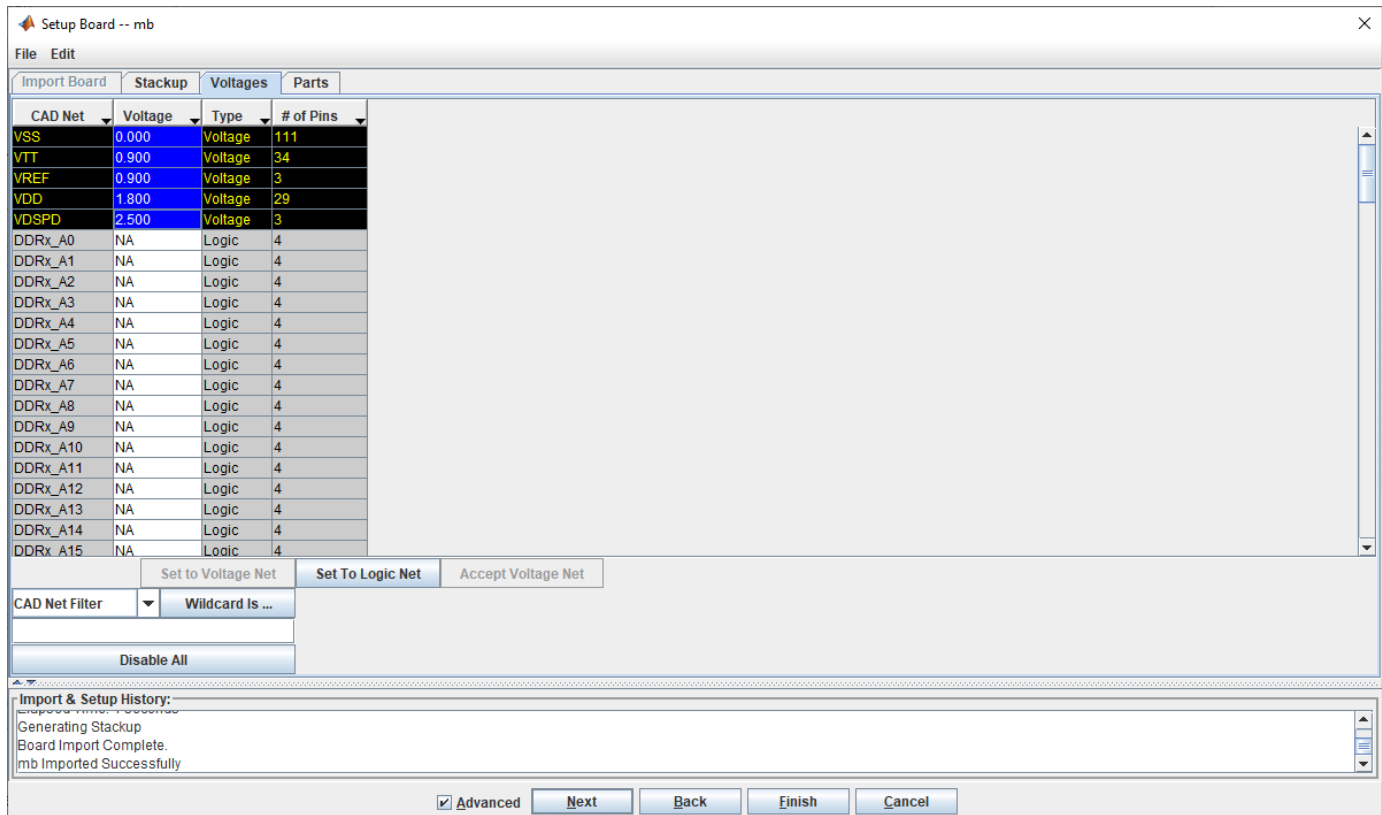

Parallel Link Designer has read the voltage properties and attempts to automatically parse the voltage net names to set their values. It is important to verify the values of your specific database are correct. For DDRx analysis, correct values for VDD, VSS, and VTT are often required for correct results to be achieved. Also, if there are active terminations in the circuits to be analyzed such as a system clock or various logic families, then the voltages must be correct in order for SPICE simulation to provide valid transient waveform data. Review this list for accuracy and verify that all voltage nets have been defined as Type Voltage, and that their voltage value is correct.

All voltages on this PCB have been imported correctly. Click the **Next** button at the bottom of the Import & Setup Board dialog to continue.

The Parts tab will appear. A part must exist on each board or each end of a Transfer Net for setup and assignment to complete successfully.

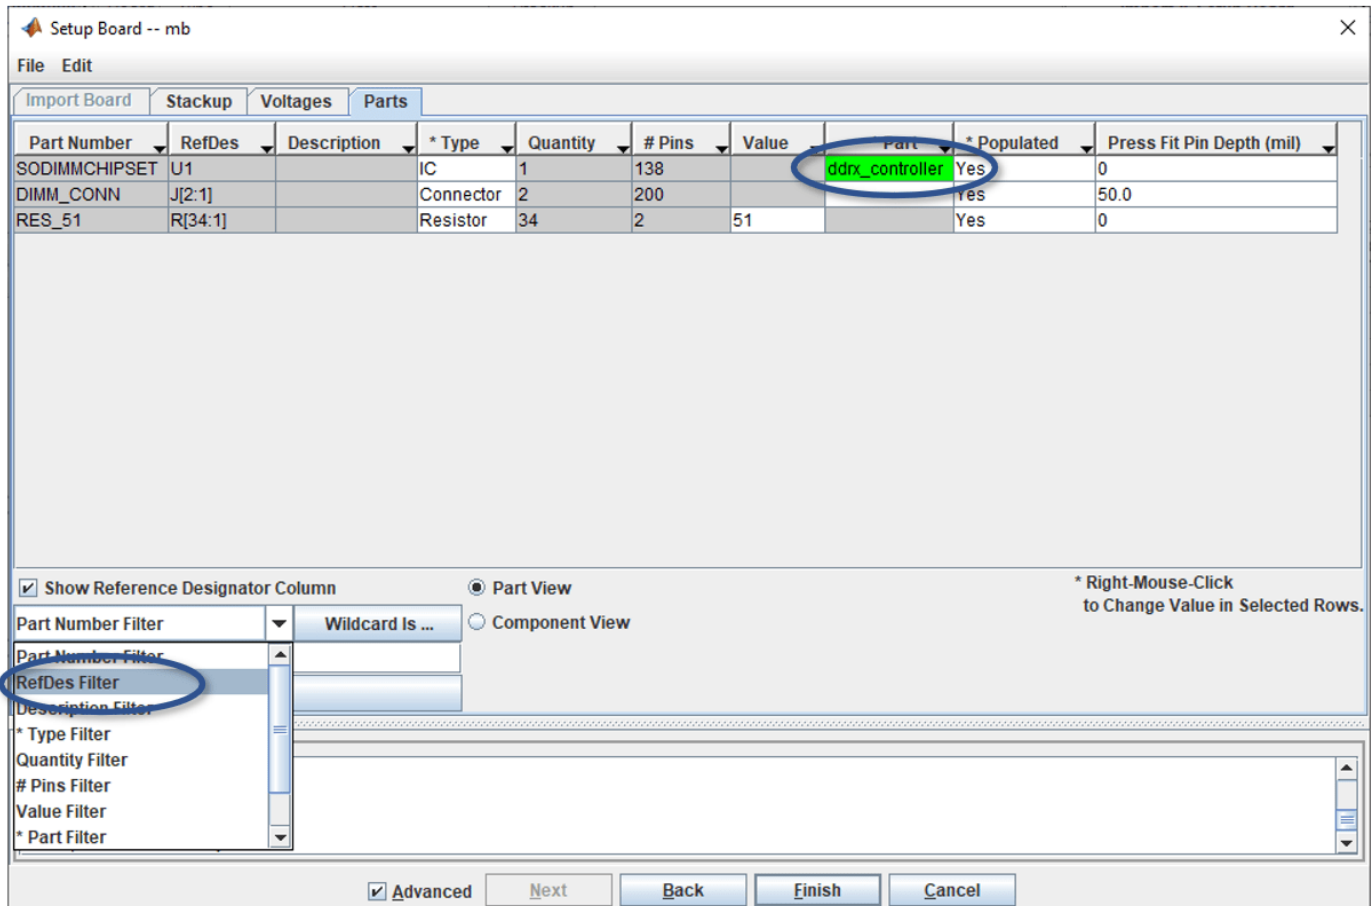

The example Main Board has devices with different part numbers on it: the memory controller, the two DIMM connectors. The **Part**, or library element, is filled in for the controller. **Parallel Link Designer** can automatically match the controller library element to the device through the part number. If you do not see the controller "ddrx\_controller" listed, you can right-click and browse to it in the parts list of the project. If starting from scratch or with your own project, you may need to create a new **Part** in the project- please reference the User Guide on this topic as it is beyond the scope of this example.

**Note:** You can use the drop down to select how to search for parts using a Wildcard string: by Part Number, CAD RefDes, Description, etc.

The Main Board is now imported and set up. Click the **Finish** button on the bottom of the **Import & Setup Board** dialog to go back to the **Setup & Assignment** dialog. You will see the board "mb" in the table in the **Setup & Assignment** dialog. After you import the DIMM, you will be able to add the ddrx\_sdram part to the DIMM in its parts tab using these steps as a guide.

### Import DIMM

Now follow the same steps you used to import the Main Board to import the DIMM (there is a single DIMM PCB database but you will create two instances of it in the project). You may see some warnings displayed but they are beyond scope of this example and may be ignored. Be sure to verify the values on the Voltages Tab and to configure the part ddrx\_sdram in the Parts Tab for the DIMM board.

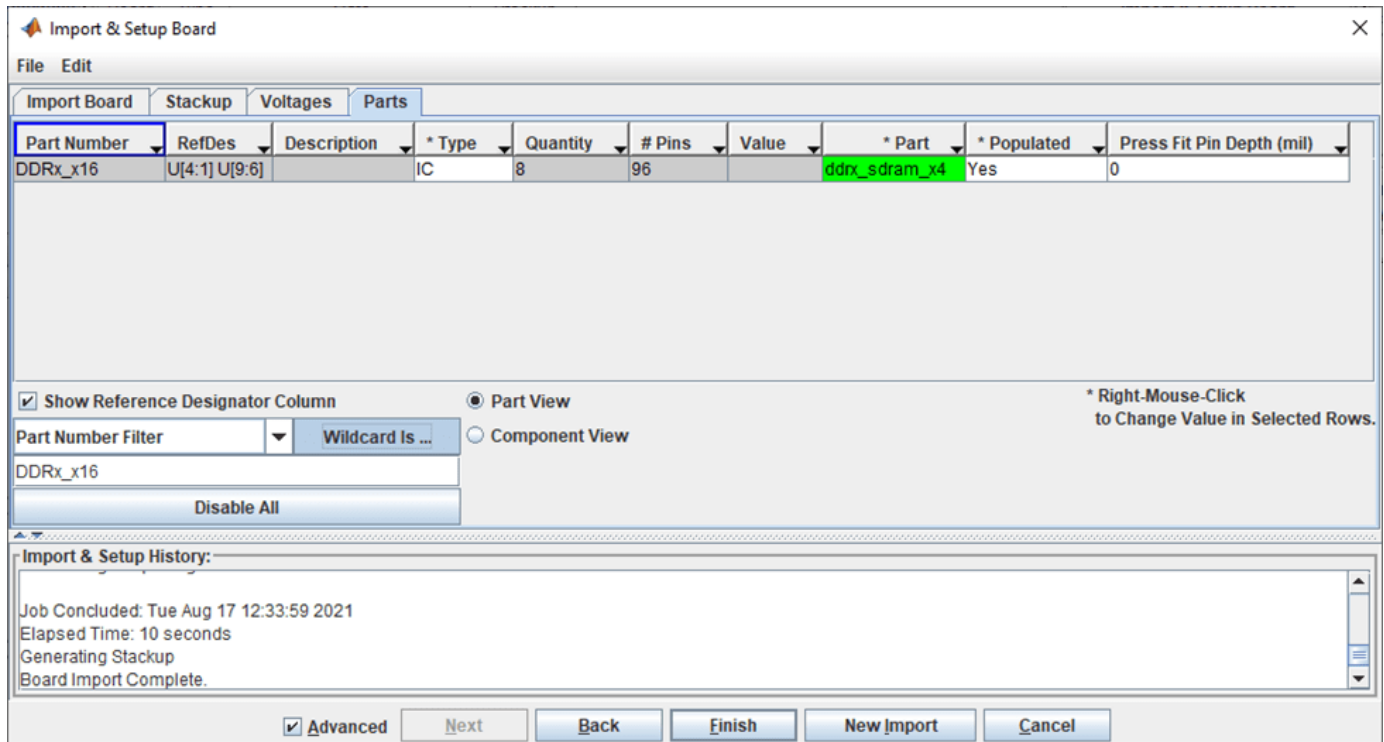


Figure: Set the DIMM Part Number DDRx\_x16 to Part ddrx\_sdram\_x4 from the project library.

You will now have two boards in the table in the Boards section of the Setup & Assignment dialog ready to create instances for connectivity.




### Create and Connect Instances

Instances are instantiations of a Board used by the project to establish connectivity and setup CAD net assignment. An instance of each Board has already been created automatically when the PCB database was imported. You will need to create a second instance of the DIMM so that there are two available to connect to the Main Board. You may need to rename the two DIMM instances so that each is clearly identifiable when you setup connectivity to the Main Board instance.

### Create New DIMM Instance


You can create a second instance of the DIMM in order to connect two DIMMs to the Main Board. In the Instances area of the **Setup & Assignment** dialog select the Instance of the DIMM and click the **Add Instance** button.

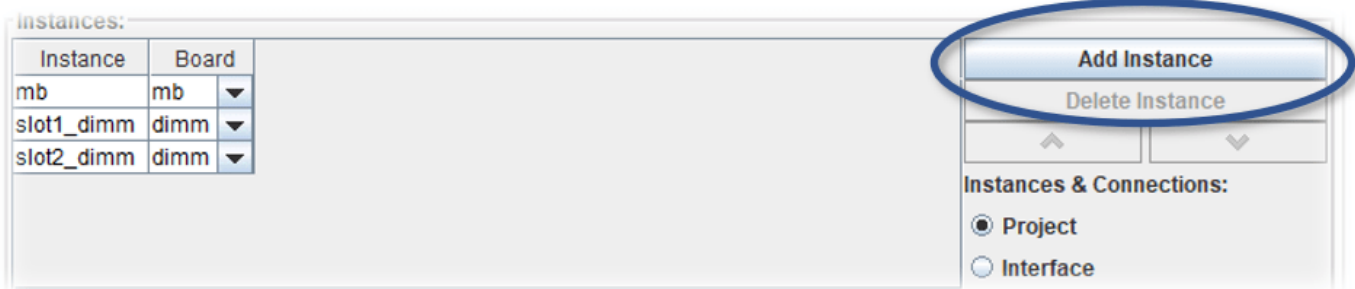

Change the names of each DIMM instance to slot1\_dimm and slot2\_dimm (as shown in the Figure).

### Connect Instances

The DIMM instances can now be connected to the Main Board. In the **Connections** area of the **Setup & Assignment** dialog.

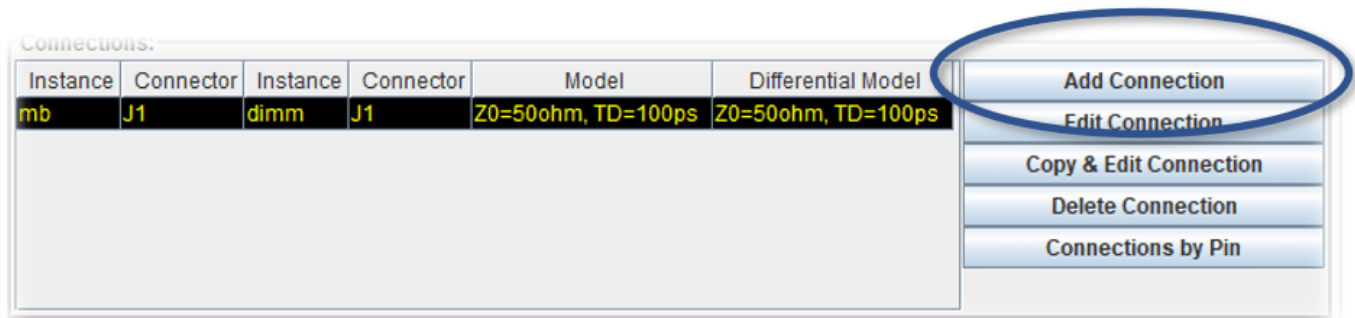

Click the Add Connection button. This will launch the Add Connection dialog. To create the connection for slot1, select Instance mb in the left hand Instance list.


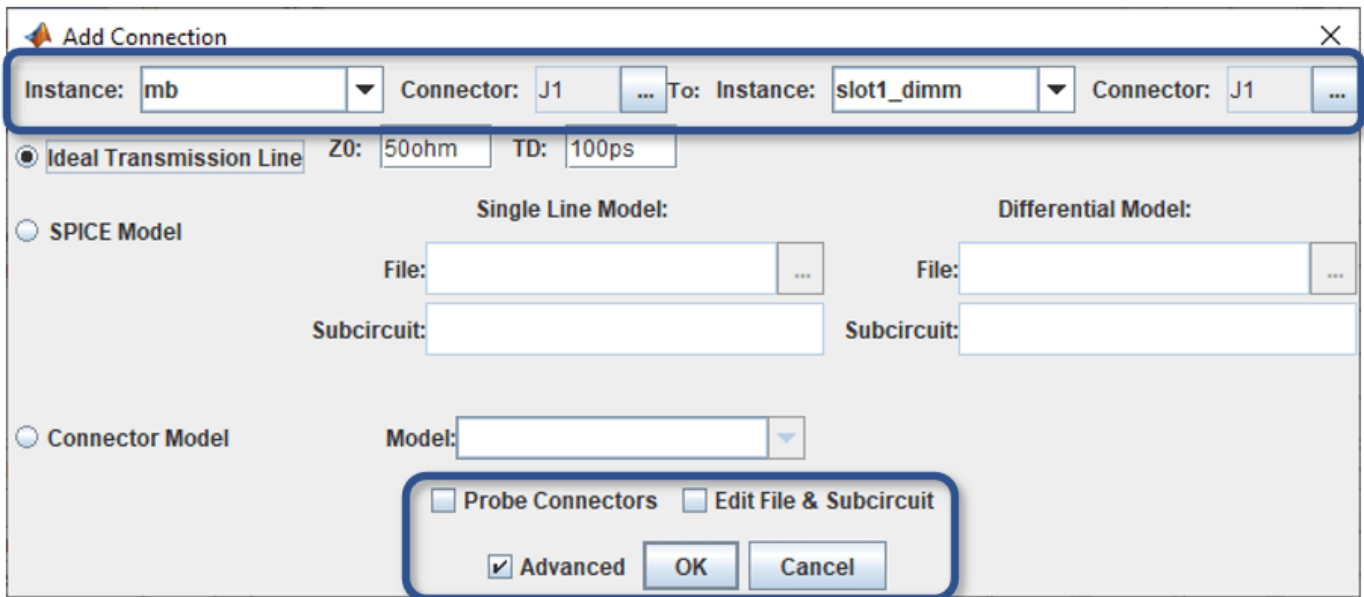


Figure : Add Connection Dialog: enable the Advanced checkbox to view options for Probe Connectors and Edit File & Subcircuit


Click the **Browse** button to select a connector on the Instance mb. The Choose Connector dialog lets you select the connector on the Instance mb that will be connected to the DIMM. Select J1.

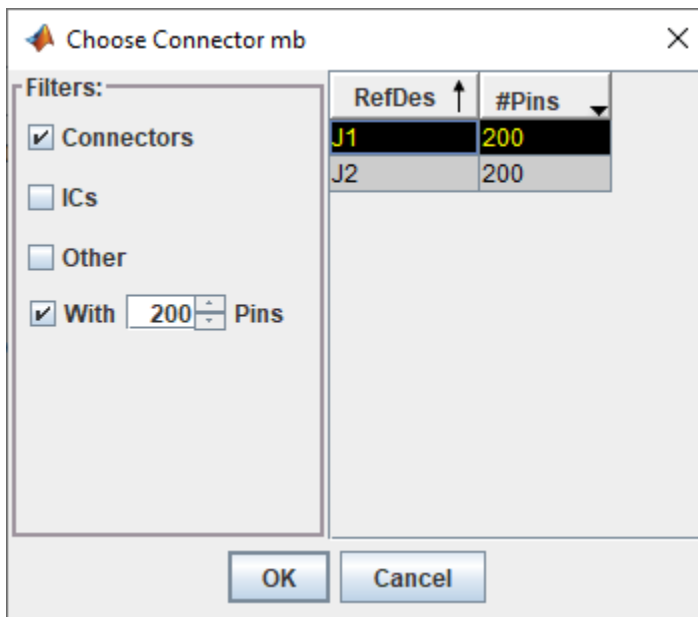

Click **OK**.

Now select the Instance and connector on the right-hand side. Select the Instance slot1\_dimm and the connector J1.

The last thing to specify for the connection is the connector model. You can select Spice Model or S-Parameter file. In this example, the connector is modelled as an ideal transmission line model.

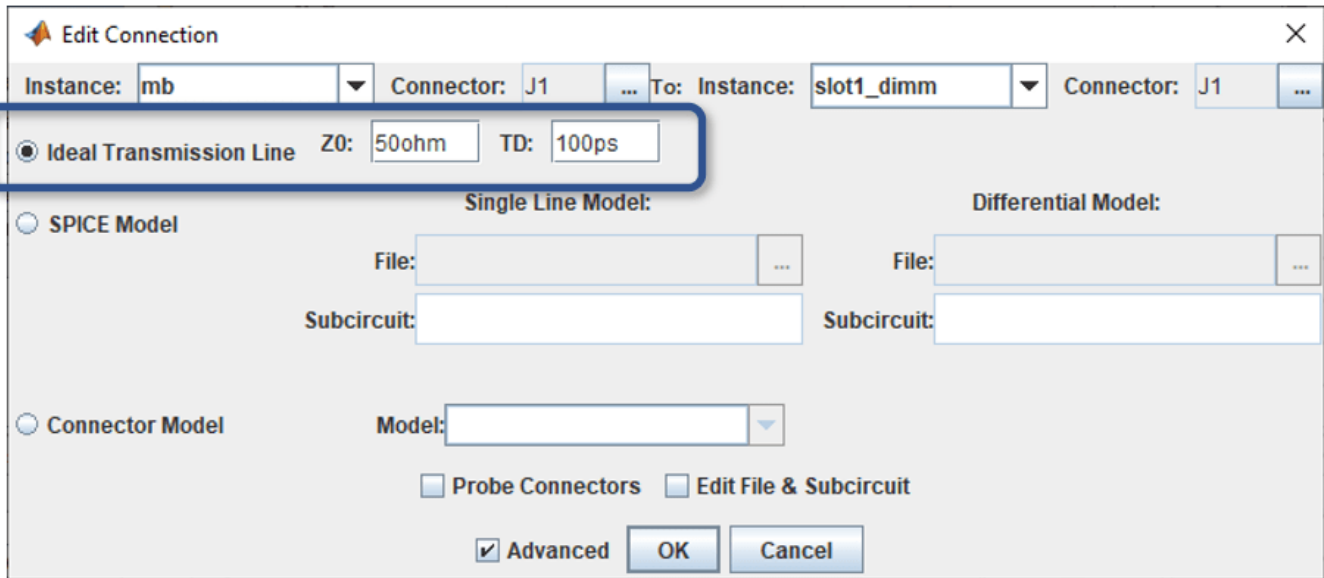

Click **OK** to complete the connection.

Now create a connection between the Main Board and the second DIMM:

1. Click Add Connection.
2. Select Instance mb and connector J2 on the left.
3. Select Instance slot2\_dimm and connector J1 on the right.
4. Select ideal transmission line connector model.
5. Click OK to complete the second connection.


The **Connections** area of the **Setup & Assignment** dialog will have two connections in the table, as shown in the figure.

Connections:						Add Connection
Instance	Connector	Instance	Connector	Model	Differential Model	
mb	J1	slot1_dimm	J1	Z0=50ohm, TD=100ps	Z0=50ohm, TD=100ps	Edit Connection
mb	J2	slot2_dimm	J1	Z0=50ohm, TD=100ps	Z0=50ohm, TD=100ps	Copy & Edit Connection
						Delete Connection
						Connections by Pin

### Setup and Run Assignment

Now that the connectivity is specified Parallel Link Designer can extract the connectivity from the multi-board system. Parallel Link Designer will also match the nets extracted from the boards to the Transfer Nets in the Design Kit so that the Transfer Net properties can be used in simulation. This

process is called Assignment. By default, all nets will be extracted from the PCB database(s), however you can select which nets to include in the assignment using the **Assignment Setup** button.

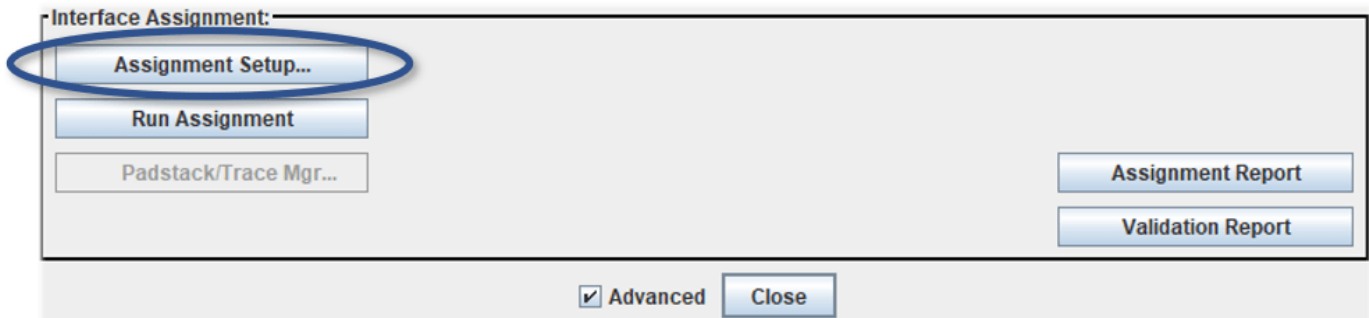

*Figure: Assignment Setup Button*

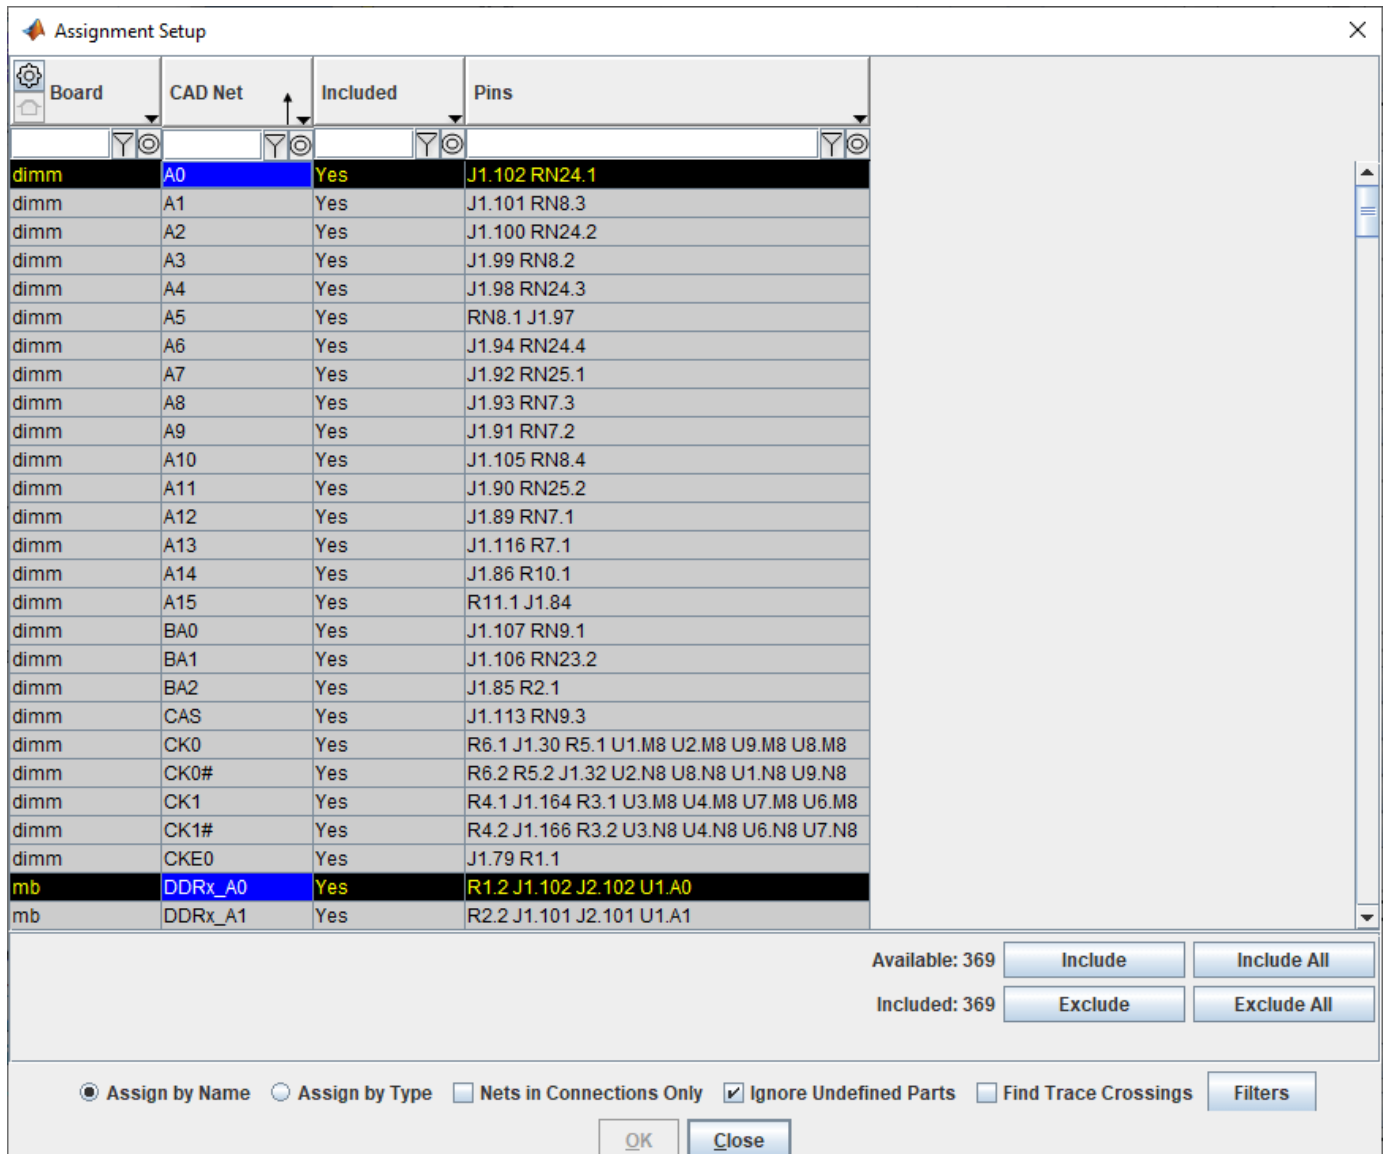


Figure: Select Nets to Include or Exclude for Assignment

In this dialog, you can use the filter and wildcard entries at the top of each column to find nets to include in the simulation. For example, you may wish to select only DDR<sub>x</sub>-related nets for a larger PCB database if it contains thousands of CAD nets. This would reduce the database size in Parallel Link Designer and optimize other operations for speed, such as board viewer loading the database. To run Assignment click the **Run Assignment** button on the **Setup & Assignment** dialog.




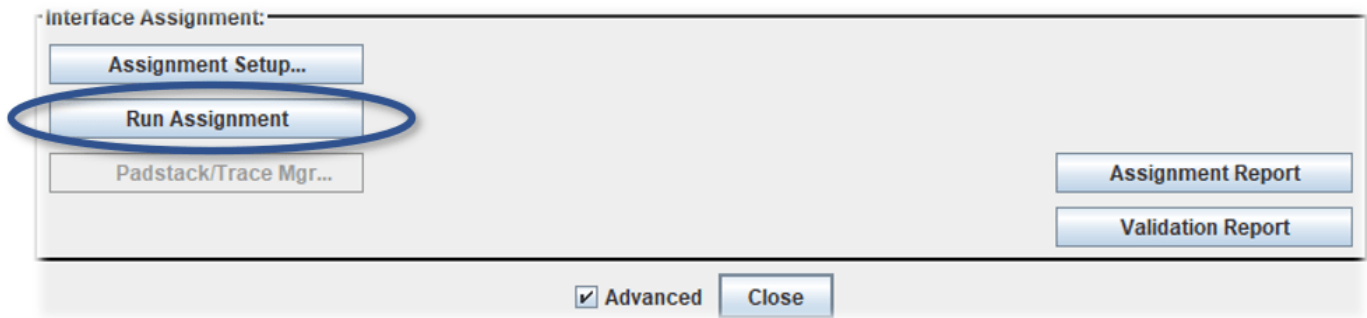


Figure: Run Assignment Button


When the Assignment process is complete the Assignment and Validation Reports are created.

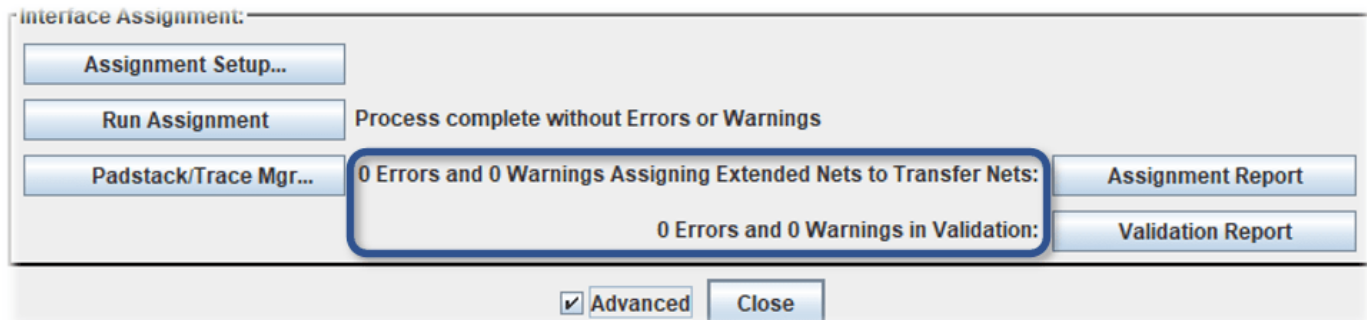


It is always a good idea to check the status after running Assignment. It can alert you to problems that may be difficult to debug without seeing the error messages. For example, if there are warnings listed they may represent unused parts. Even if you see no errors or warnings it is wise to review the reports so that you clearly understand the project status.

You can use custom models (such as SPICE subcircuit or Touchstone s-parameter files) in your PCB database for traces and padstacks (vias). These are called Model Overrides in the User Guide, which covers this topic in more detail which is out of scope for this example.

**Note:** The button is enabled for opening the **Padstack/Trace Manager** after **Run Assignment** has completed.

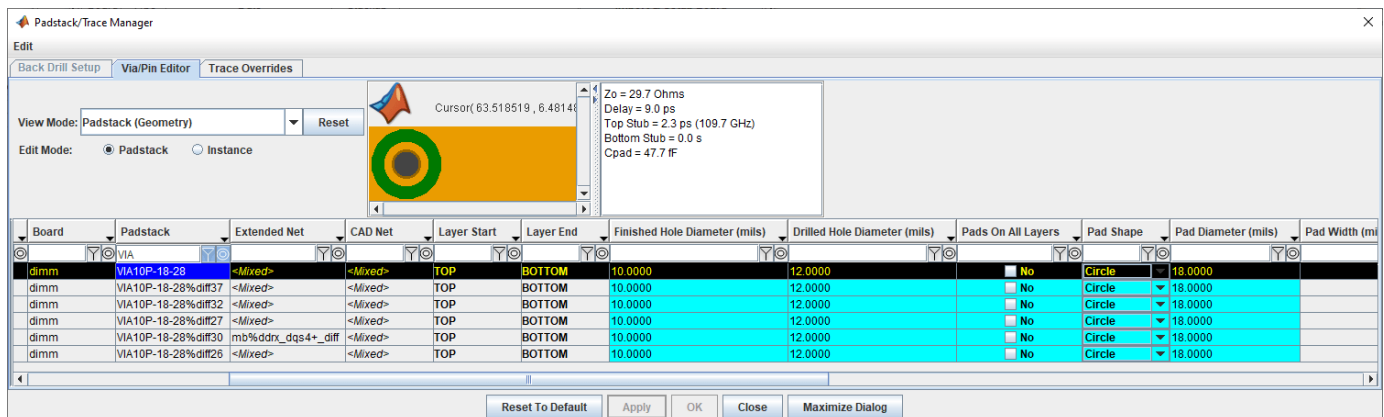

This allows you to see all the Padstacks(Vias) in the design. You can right-click to open the **Via Model Editor**, and check the option to use set a **Model Override** for a padstack (via) or trace instance or by occurrence (e.g. to override all padstacks having the same library name).

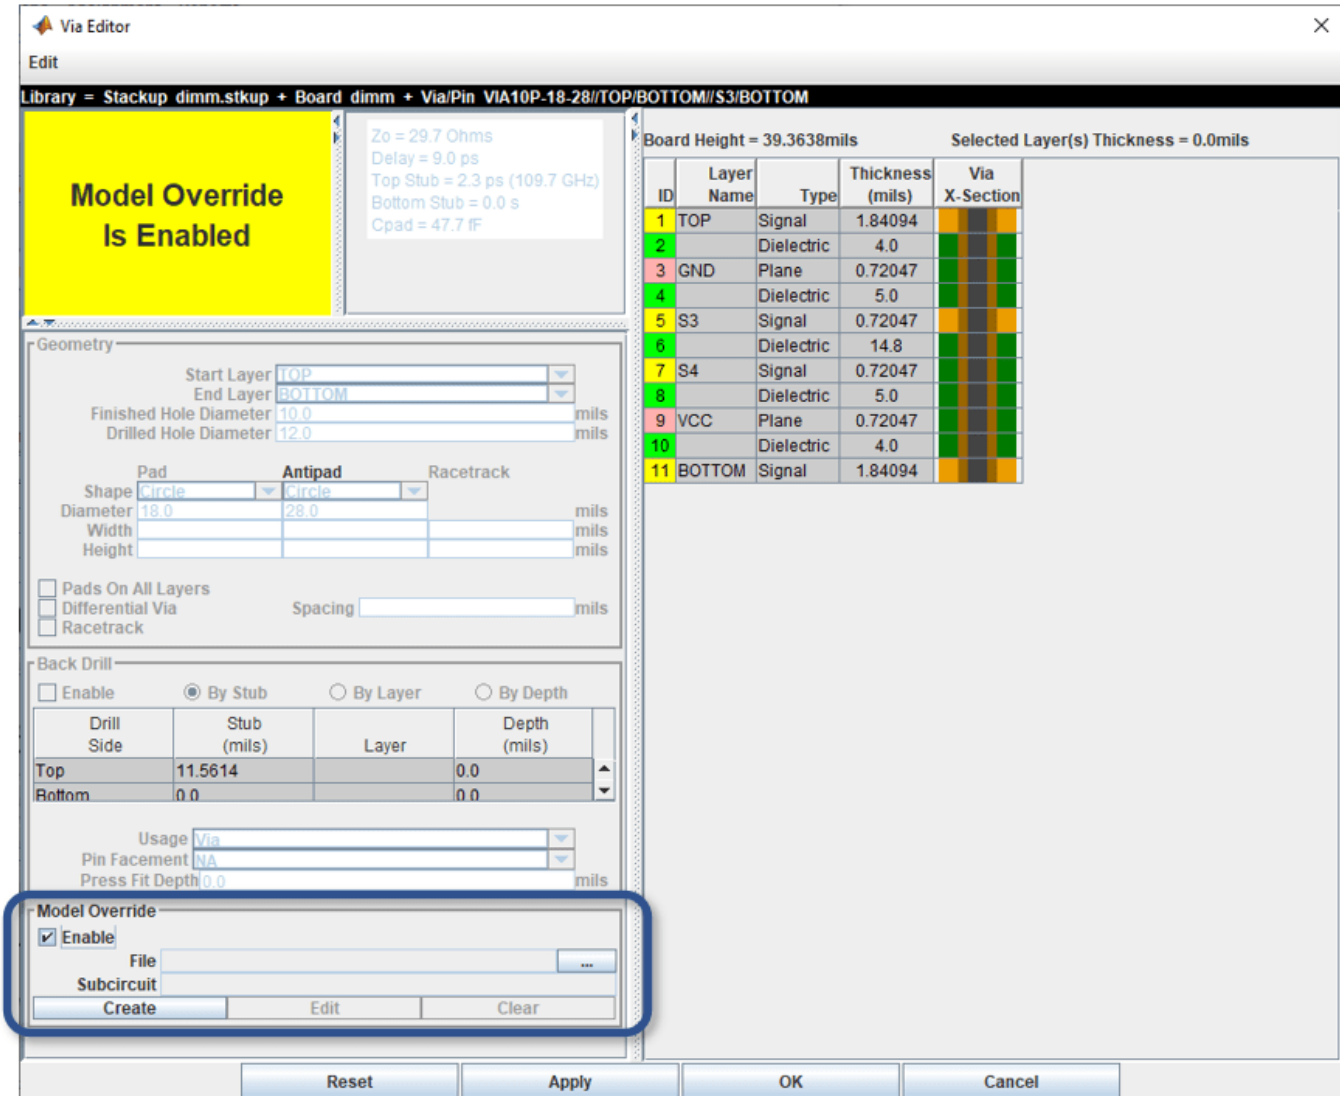

Click the **Ok** button to close the **Via Editor** dialog.

Click the **Close** button to close the **Padstack/Trace Manager** dialog.

Click the **Close** button to close the **Setup & Assignment** dialog.

On the **Post-Layout Verification** tab there is a table with all of the nets listed.

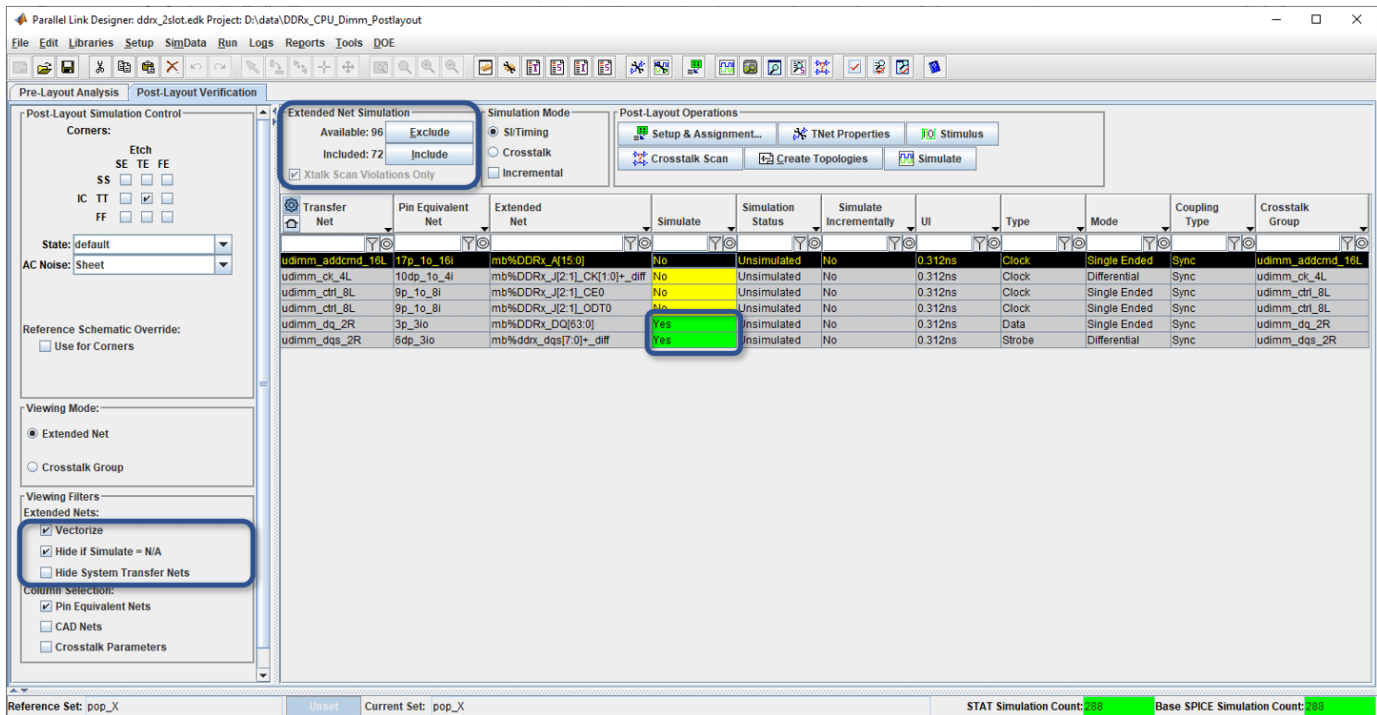


Figure: Post-Layout Tab After Assignment. You can use the Viewing Filters to Vectorize nets by group and to Hide if Simulate = N/A

You can select which Nets or Vectorized Nets to simulate by clicking on a row and pressing the **Include** or **Exclude** buttons. You can also check the options in the Viewing Filters pane for Vectorize and Hide if Simulate = N/A. This means that the nets are vectorized so that, for example, all of the dq nets are in one row, and all of the dqs nets are in another row. The option for Hide if Simulate = N/A suppresses any transfer nets that are not valid or otherwise unusable in the current set of assigned nets.

To view any set of nets on the board, highlight the rows you wish to see and select "Show on Board" from the right-click menu.

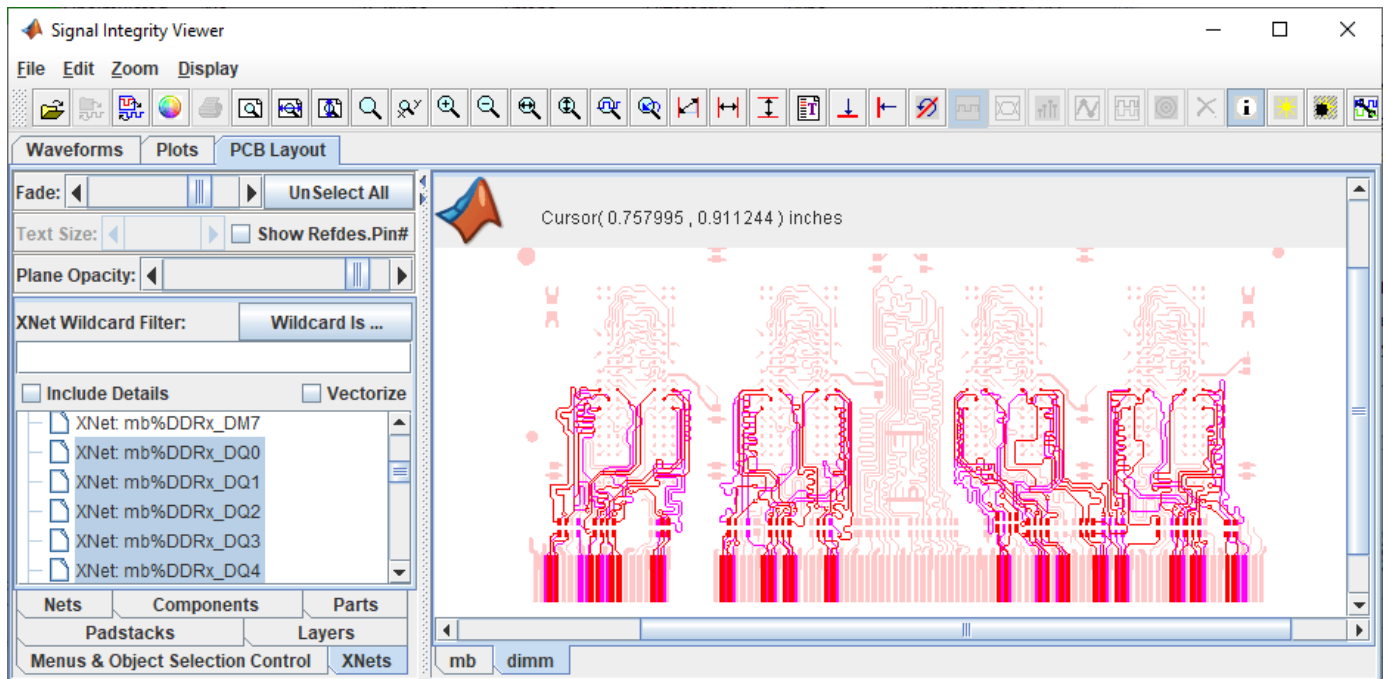
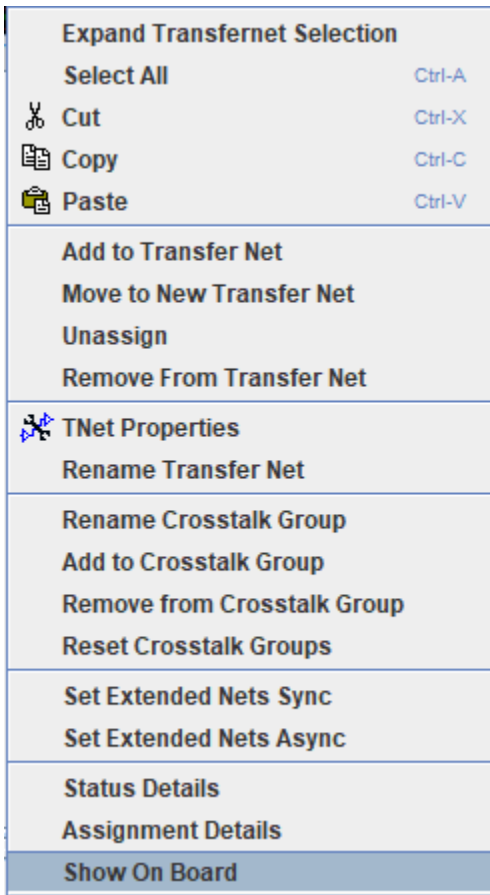


Figure: Signal Integrity Viewer opens with all selected Transfer Nets highlighted.

## Configure Transfer Net Properties

In this project, the nets from the boards have been automatically matched with the Transfer Nets that have already been set up in pre-layout. This allows the post-layout simulations to make use of the bit time, bus transaction definition and model overrides (for on-die termination) that were part of the Transfer Nets in the EB1 original project. You can configure the **Transfer Net Properties** to define Transfers between a DDRx controller and DIMM or DRAM. You can also set clock or symbol UI, drive strength (ODS) and on-die termination (ODT).

The screenshot shows the 'Transfer Net Properties' dialog box. The 'Transfer Nets' table is as follows:

Transfer Net	UI	Sweep UI	Rate/Frequency	Period	Type	Mode	Source Probe Points	Target Probe Points	Jitter	Timed Edge
udimm_addcmd_16L	0.312ns - ddr5_ck_rate	<input type="checkbox"/>	1.603GHz	6.24E-10	Clock	Single_Ended	SL_pad	Pad	+/-0%	Both
udimm_ck_4L	0.312ns - ddr5_ck_rate	<input type="checkbox"/>	1.603GHz	6.24E-10	Clock	Differential	SL_pad	Pad	+/-0%	Both
udimm_ctrl_8L	0.312ns - ddr5_ck_rate	<input type="checkbox"/>	1.603GHz	6.24E-10	Clock	Single_Ended	SL_pad	Pad	+/-0%	Both
udimm_dq_2R	0.312ns - ddr5_dq_r...	<input type="checkbox"/>	3.205Gbps	N/A	Data	Single_Ended	SL_pad	Pad	N/A	Both
udimm_dqs_2R	0.312ns - ddr5_dqs_...	<input type="checkbox"/>	3.205Gbps	N/A	Strobe	Differential	SL_pad	Pad	+/-0%	Both

The 'Nodes' table is as follows:

Designator	Part	Pin Names	Model	Model Type
controller	ddrx_controller	CH_A_DQ<[63:0]> CH_A_ECC<[7:0]>	POD11_IO_DQ_ZO50_ODTOFF	I/O
dimmem_sdr1	ddrx_sdr1_x4	DQ[7:0]	POD11_IO_DQ_ZO34_ODTOFF	I/O
dimmem_sdr10	ddrx_sdr1_x4	DQ[7:0]	POD11_IO_DQ_ZO34_ODTOFF	I/O

The 'Transfers' section shows a table with columns: From, To, and Timed From. The 'Analog Model Overrides by Transfer' table is as follows:

Designator	Model	Sweep Model
controller	POD11_IO_DQ_ZO50_ODTOFF - (Def...	<input type="checkbox"/>
dimmem_sdr1	POD11_IN_DQ_ODT240	<input type="checkbox"/>
dimmem_sdr10	POD11_IN_DQ_ODT80	<input type="checkbox"/>

Figure: Transfer Net Properties Tab after Assignment. You can configure Transfers and Analog Model Overrides by Transfer (e.g. configure IBIS model ODS and ODT)

**Note:** Configuring the **Transfers** pane is explained with detail in the User Guide, and is beyond the scope of this example.

The nets are now ready to simulate. By matching the nets on the board with the Transfer Nets Parallel Link Designer has reduced the post-layout task to importing and setting up the boards in the system. Parallel Link Designer will automatically extract the actual routed topologies, simulate and analyze each net according to its respective Transfer Net properties, normalize and measure interconnect flight times and compute timing margins for the appropriate transactions.


Before selecting the nets to simulate, hide the nets that are from the serial interface or are used for multi-rank DIMMs by checking the Hide if Simulate=N/A checkbox (see Figure).

## Run Post-Layout Simulations

By default all nets are excluded from simulation in post-layout. To select all of the nets and include them for simulation select all of the table rows and click the Include button in the Extended Net Simulation area.

The Base Spice Simulation Count field in the lower right shows the number of simulations. This will change depending on the number of Transfer Nets, Model Sweeps, and Corner Conditions selected for your simulation.

Click the **Simulate** toolbar button: or select **Run | Simulate** from the menus to launch the **PostLayout SI/Timing Simulation** dialog. If you are asked to save changes click Yes. Select all checkboxes applicable to the type of DDR in your design (e.g. **Analyze Timing** does not apply to DDR5 but does apply to earlier versions such as DDR3 and remains available as an option for diagnostic purposes).

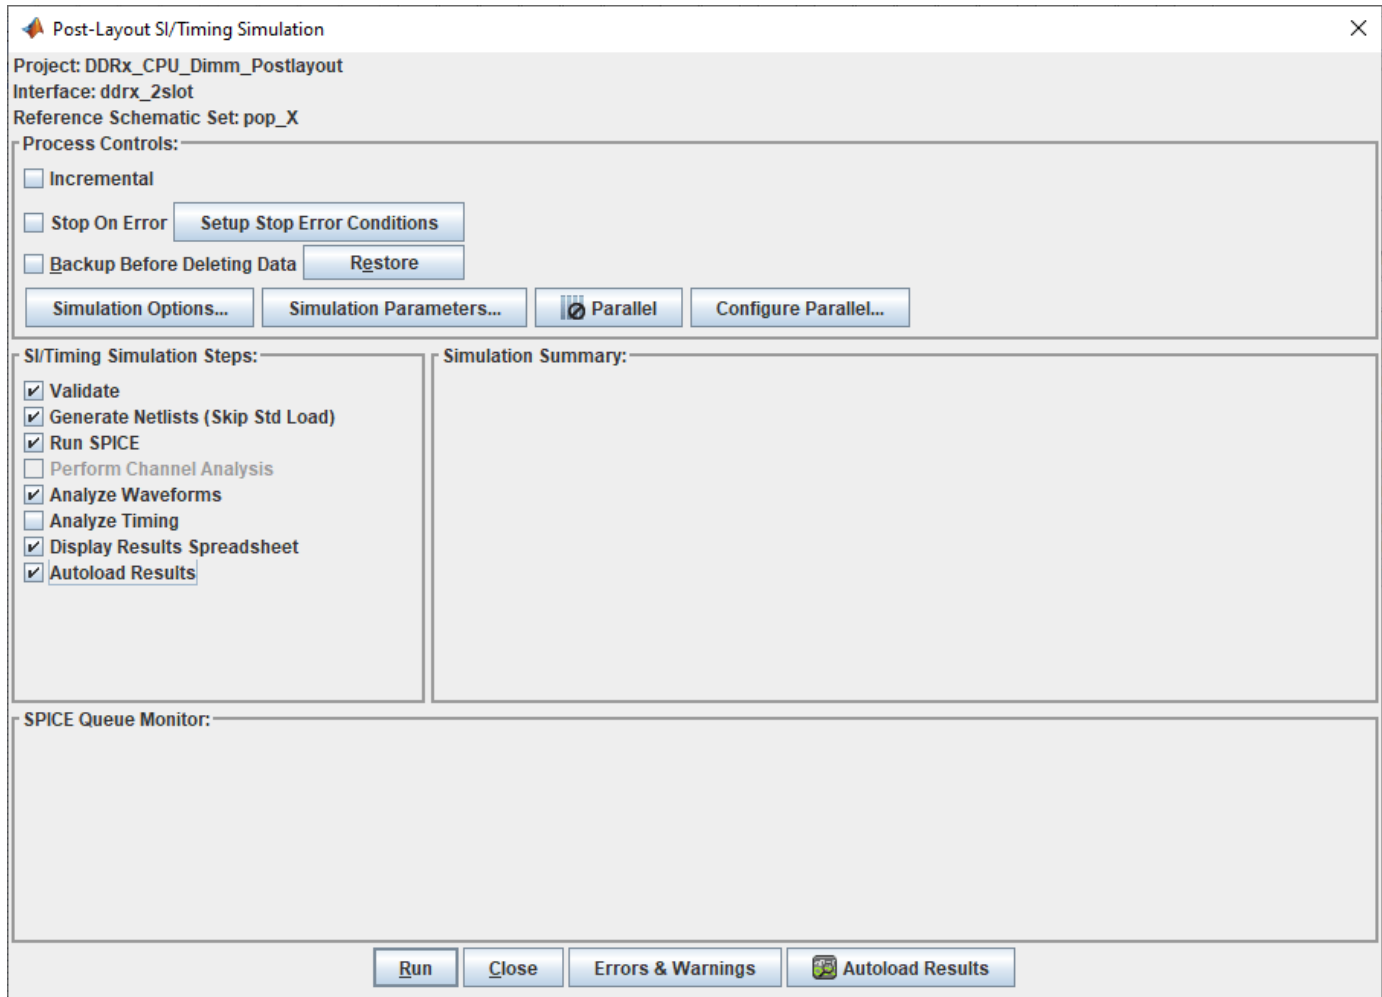

Click the **Run** button to start the simulations.

**Note:** The simulations may take several hours to finish.

When the simulations have completed the spreadsheet report will launch. As in pre-layout there are waveform tabs and timing tabs. To interpret the results, see “Results of Pre-Layout Analysis in Parallel Link” on page 7-8.

## **See Also**

### **More About**

- “Results of Pre-Layout Analysis in Parallel Link” on page 7-8
- “DDR5 Implementation Kit” on page 12-73
- “GDDR5 x32 Implementation Kit” on page 12-75
- “Low-Power DDR5 Architectural Kit” on page 12-82

# DDR5 IBIS-AMI with Clock Forwarding

This example shows how to use Signal Integrity Toolbox™ for MATLAB to analyze a DDR5 interface with the IBIS-AMI feature Clock-Forwarding enabled for analysis of system margins. IBIS BIRD 204, "DQ\_DQS GetWave Flow for Clock Forwarding Modeling," adds the ability to pass in an external Clock signal (or Strobe, as appropriate) to an Address (or Data) IBIS-AMI receiver GetWave model using the clock\_times pointer defined by the IBIS specification. A new AMI Reserver Parameter, Rx\_Use\_Clock\_Input, is used to enable this functionality.

## Open DDR5 Memory-Down Clock Forwarding Kit

Open the DDR5 Memory-Down Clock Forwarding kit in the **Parallel Link Designer** app using the openSignalIntegrityKit function.

```
openSignalIntegrityKit("DDR5_MD_Clock_Forwarding")
```

Signal Integrity Toolbox recommends you to set the Java Heap Memory to at least 8192MB. Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory  
 Current Java Heap: 535MB with 128MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.

The screenshot displays the Parallel Link Designer interface. The main window shows a circuit diagram with components like Controller\_G1 through Controller\_G9 and SDRAM\_G1 through SDRAM\_G9. A dialog box titled "Widebus Groups For WB\_DQ\_CF\_Read" is open, showing a table of widebus groups. The table has columns: Group, Victim, Clock Group, Stimulus, Delay, UI, Associated Sheet, and Widebus Designators. The 'WB\_DQ\_CF\_Read' group is selected, showing a stimulus of 'ddr\_data\_4\_clock\_forward' with a delay of 0.0ps and a UI of 0.208ns. Below the table are buttons for 'Stimulus', 'Delete Group', and 'Close'. At the bottom of the interface, there is a 'Solution Space' table with columns for Transfer Net, Variable, Type, Format, Variation Group, Value 1, and Value 2.

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2
WB_DQ_CF_Read	Elch	Corner	List	Corners	TE (Typ)	
WB_DQ_CF_Read	Process	Corner	List	Corners	TT (Typ)	
WB_DQ_CF_Read	Controller_G3:Rx:Rx_Use_Clock_Input	String	AMI List	<none>	Times	
WB_DQ_CF_Read	Controller_G3:Rx:Receiver_Sensitivity	Float	AMI List	<none>	DDR5-4400	
WB_DQ_CF_Read	Controller_G3:Rx:CTLEMode	Integer	AMI List	<none>	off	
WB_DQ_CF_Read	Controller_G3:Rx:CTLEConfigSelect	Integer	AMI List	<none>	0dB	



**Kit Overview**

- Project name: DDR5\_MD\_Clock\_Forwarding
- Interface name: md
- Target data rate: DDR5-3200 to DDR5-4800
- Widebus sheet for each of two channels of Address/Command (5 DRAMs per lane with ODT selectable)
- Widebus sheet for DQ Read transactions (8 DQ plus 1 DQS in Widebus Group with ODT selectable)
- Widebus sheet for DQ Write transactions (8 DQ plus 1 DQS in Widebus Group with ODT selectable)
- Note: Widebus sheets are required for Clock-Forwarding analysis.

**Typical DDR5 coupled channel simulation setup using clock-forwarding**

The clock times or waveform generated by DQS is passed to DQ[7:0] using the DQ DLL clock times pointer. The DQ DLL then operates on these clock times as desired (for example triggering DFE taps, modelling the DQS delay tree or centering the DQ on the DQS waveform) and then passes out the same or modified clock times.

## DDRx Timing and Waveform Mask Analysis

This example shows how to use the **Parallel Link Designer** app to perform timing analysis for the DDR (Double Data Rate) family of memory interface protocols. You can use either Setup and Hold margins or by waveform eye-diagram compliance masks to perform the timing analysis. The DDR Memory Down (DDR4\_MD) example kit uses both timing and waveform mask analysis. Specifically for DDR4 systems, timing analysis is performed on clock-address/command interface, and waveform compliance masks are applied to strobe-data(DQS-DQ) interface. Other DDR types may use only timing analysis, or only waveform mask analysis or a blend depending on individual standards.

### Timing and Waveform Analysis Overview

Timing and Waveform Mask Analysis are used in signal integrity analysis of a parallel link system. This tutorial shows how **Parallel Link Designer** can be used to analyze a DDR memory interface using a DDR4 implementation kit as the starting point. This example assumes you are referencing the "DDR4\_MD" kit, which allows you to begin signal Integrity analysis immediately since all models and schematic sheets are part of the kit. You can import a new IBIS (.ibs) file for an example SDRAM and see how it references Timing (.tmg) and Include (.inc) files for margin analysis by the **Parallel Link Designer** app. If an implementation kit were not available for this interface, you would need to build the simulation environment (Parts, IBIS Models, and pre-layout topologies) from a new project. After showing you how to import a new IBIS SDRAM part, this example also illustrates some of the steps involved in setting up Timing and Include files to enable timing and waveform mask analysis.

### DDR4 Memory-Down Kit

Signal Integrity Toolbox™ kits are an easy way to jumpstart your analysis by providing an interface that is completely configured and ready to simulate. You can customize the kits by adding models and modifying parameter values for your specific implementation. This example shows you how to import a new IBIS file for an SDRAM, then modify a Timing (.tmg) file and Include (.inc) file to enable Timing and Waveform Mask analysis in the **Parallel Link Designer** app. The accompanying kit is already configured with details such as clock domain, transfer net configuration, and sheets classified as **Data**, **Clock**, and **Strobe** as appropriate for a DDR4 interface.

Open the DDR4\_MD kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("DDR4_MD");
```

```
MATLAB recommends Java Heap Memory set to least 8192MB.
```

```
Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory
```

```
Current Java Heap: 213MB with 92MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.
```


```
Wed Jan 04 14:28:57 EST 2023 - Starting ParallelLinkDesigner
```

Then you can download the attached file "ex\_sdram\_x6.zip" and unarchive to a temporary folder. The contents of this archive are as follows:

- IBIS file representing an imagined "x6 SDRAM" for the purposes of this example
- Include files to configure logic thresholds and eye masks for Waveform Analysis
- A Timing file to place in your project folder "DDR4\_MD\si\_lib\timing"

## Import IBIS File and Reconfigure Sheets

You can import the IBIS file "ex\_sdram\_x6.ibs" by clicking on the "Libraries->Import IBIS..." menu from the toolbar. You can see in your OS file explorer that the IBIS (.ibs) file is placed in the folder "DDR4\_MD\si\_lib\ibis" along with Include (.inc) files called within the IBIS file.

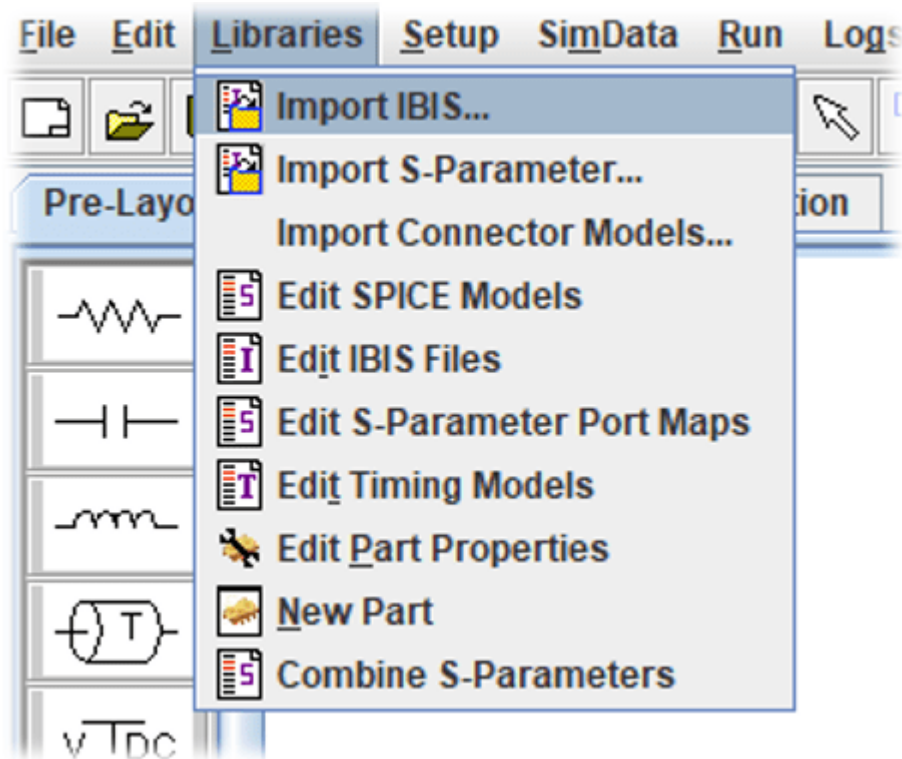


Next, place the file "ex\_sdram\_x6.tmg" in your project folder "DDR4\_MD\si\_lib\timing" where this is the Timing file used by **Parallel Link Designer** to simulate with the IBIS file "ex\_sdram\_x6.ibs." The contents of the Timing file as well as the Include files will be explained in the following sections.

## Timing Analysis Configuration

This section describes the Transfer Net and timing model requirements for various types of timing.


### Source-Synchronous Timing

You can see in the figure below an illustration of Source-Synchronous data transfer timing elements that could represent, for this kit example, a DDR memory interface. The figure shows a data net with its associated clock net and is used to describe requirements to configure a Source-Synchronous interface for timing analysis.

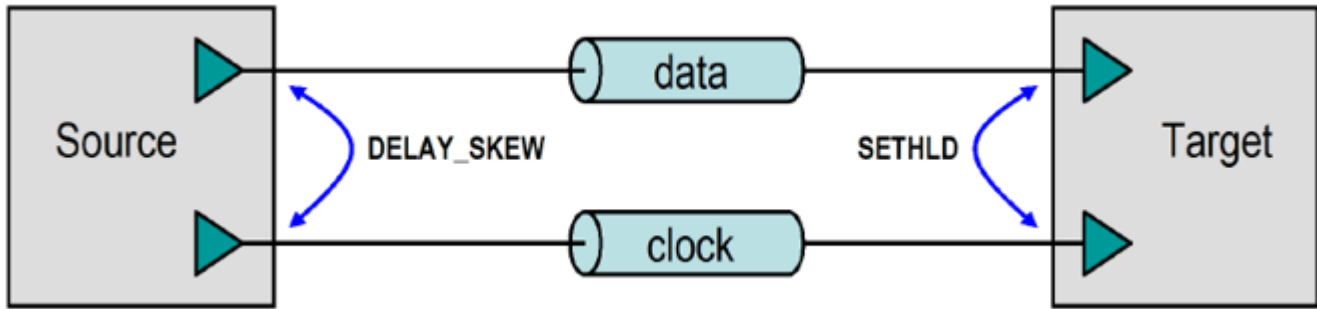


Source-Synchronous analysis has the following configuration requirements:

You must create or configure the appropriate Transfer Net schematic sheets. In the simplest case, there must be two schematic sheets, one for the data net and one for the clock net. The data schematic sheet should be of type Data and the clock schematic sheet should be of type Clock or Strobe. Because you have a kit already configured with these sheets, you can do this in the kit by clicking on the SDRAM parts on each sheet and changing the IBIS File to "ex\_sdram\_x6.ibs"

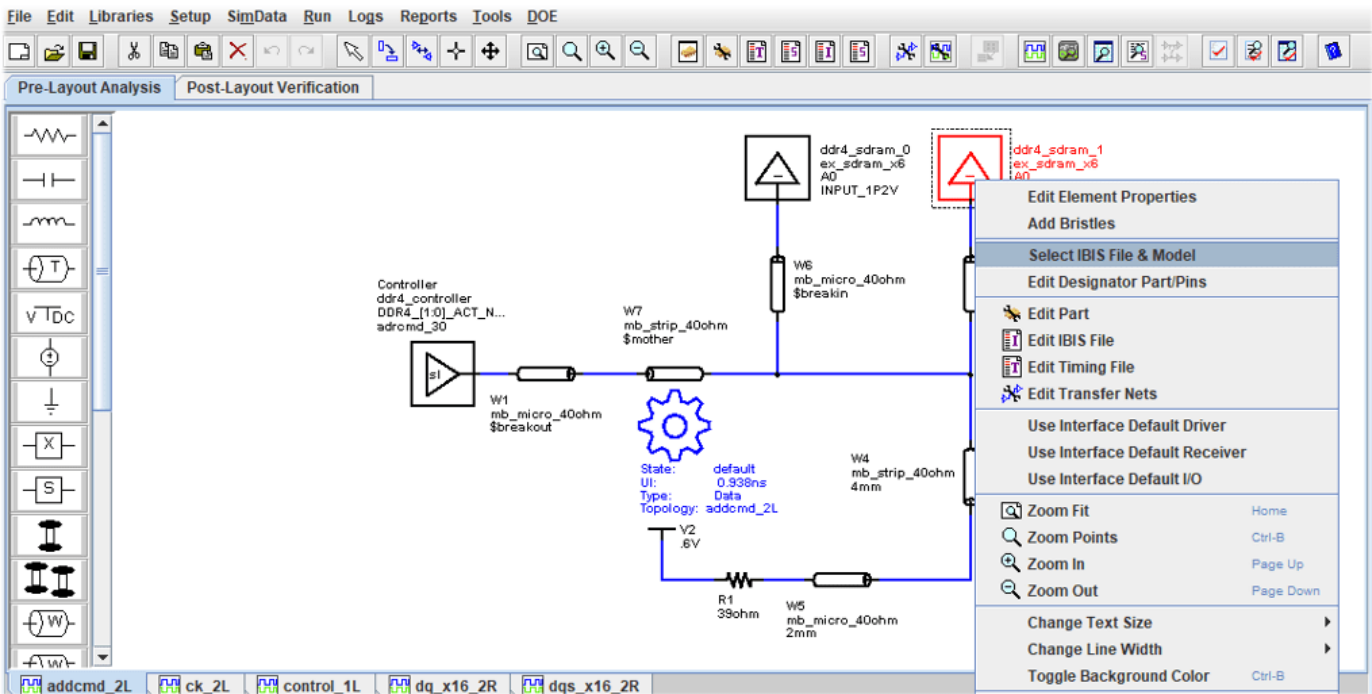

Then you can select the Address/Command pins for the "ex\_sdram\_x6.ibs" model:

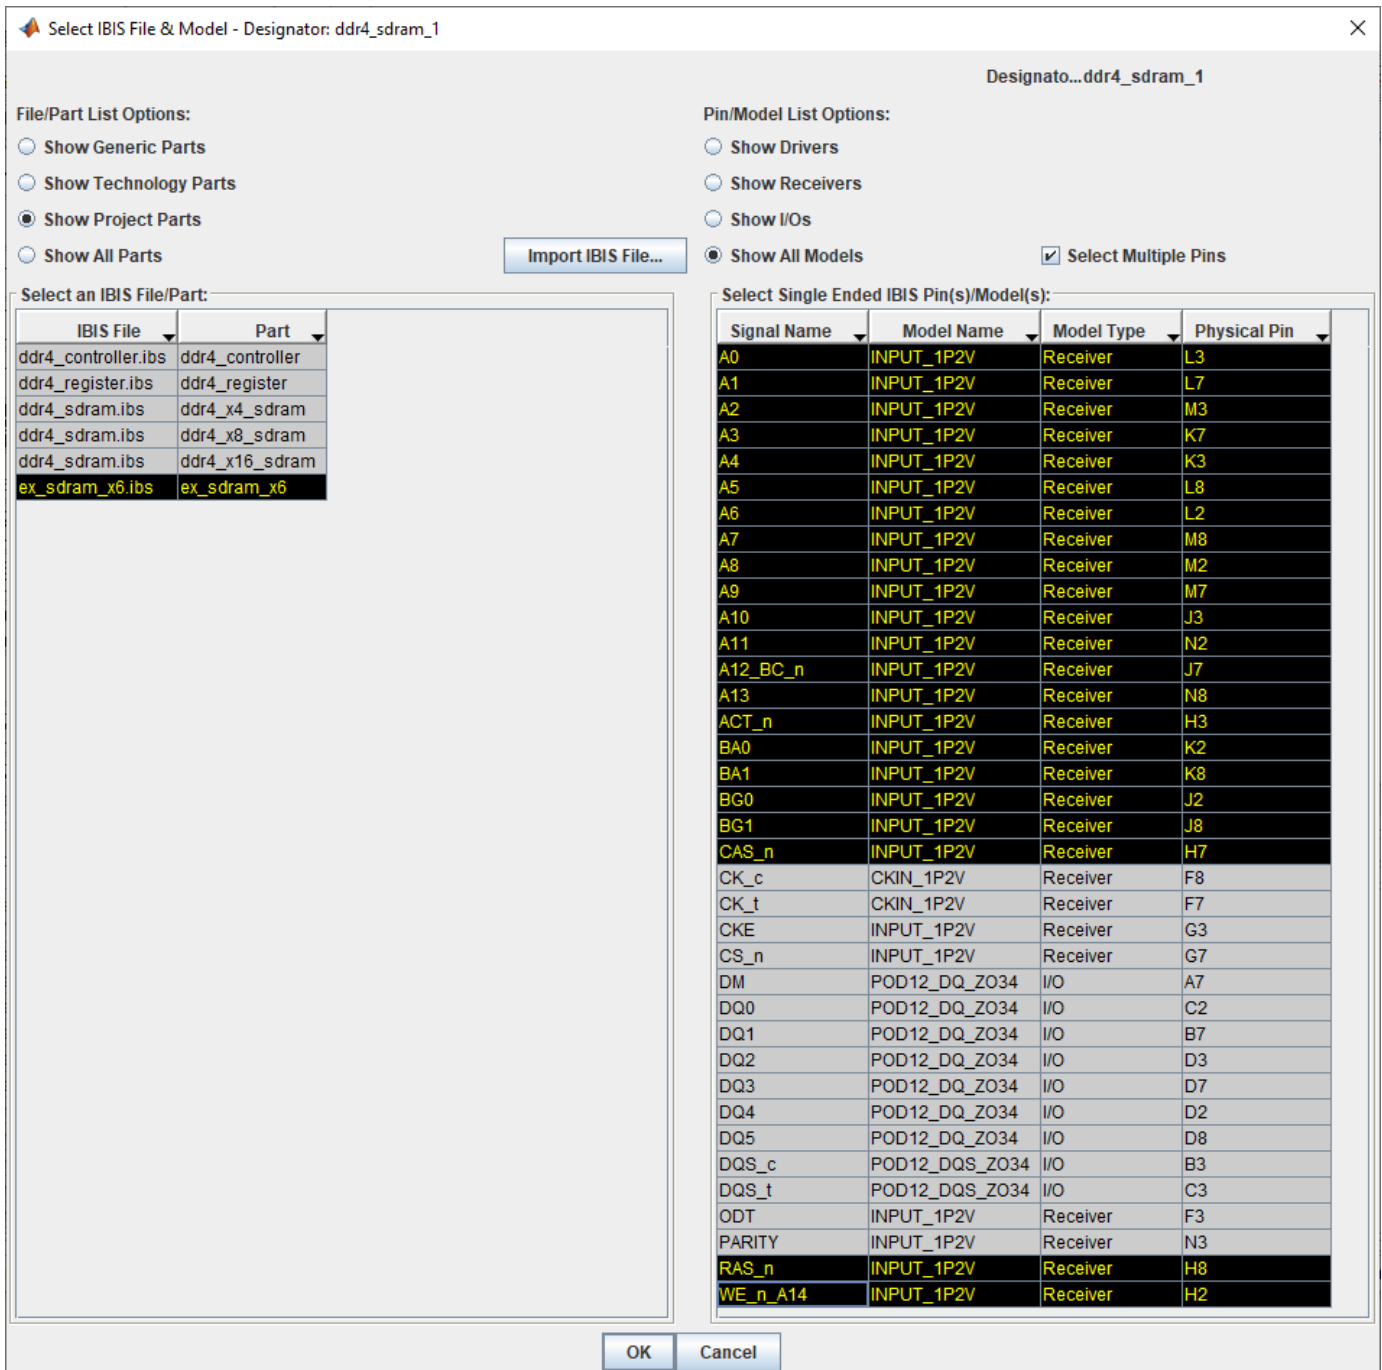

The Project Parts must have Timing Models. Each timing model must have a SETHLD (Setup and Hold) timing constraint defined between the data and clock PINDEF groups. You must also add a DELAY\_SKEW statement in the timing model for the driving chip between the data and clock PINDEF groups. However, for this example a Timing file has been provided, and will be discussed in more detail below.

**Note:** You should already have placed the file "ex\_sdram\_x6.tmg" in your project folder ("DDR4\_MD\si\_lib\timing").

### Configure Include Files for Waveform Analysis

This example will next show you where the thresholds for Waveform Analysis are configured in the Include file, and where the Compliance Mask is defined as well.

**Note:** Within IBIS, Timing, and Include files, you may notice the following keyword with an argument following it:

```
|MathWorks <argument> <parameter>...
```

This would normally be considered an IBIS comment line (due to the pipe character, "|") but is in fact is a keyword to flag the parser within **Parallel Link Designer** to configure a parameter specified by the argument provided. For example, logic thresholds for the DDR4 standard would be defined for an SDRAM IBIS [Model] for Address/Command as follows in the Include file "ex\_add\_ctrl\_sstl\_12.inc." For more information, see "Waveform Analysis Parameters and Thresholds" on page 9-6.

### Parameters in Include file for Waveform Analysis

```
| TYP MIN MAX
```

```
|| Based on VDDQ: 1.2 1.14 1.26
```

```
|MathWorks Overshoot_High 1.5 1.44 1.56
```

```
|MathWorks AC_Overshoot_High 1.2 1.14 1.26
```

```
|MathWorks Vin_AC_High 0.700 0.670 0.730
```

```
|MathWorks Vin_Meas_R_High 0.700 0.670 0.730
```

```
|MathWorks Vin_Meas_F_High 0.675 0.645 0.705
```

```
|MathWorks Vin_DC_High 0.675 0.645 0.705
```

```
|MathWorks Vin_DC_Low 0.525 0.495 0.555
```

```
|MathWorks Vin_Meas_R_Low 0.525 0.495 0.555
```

```
|MathWorks Vin_Meas_F_Low 0.500 0.470 0.530
```

```
|MathWorks Vin_AC_Low 0.500 0.470 0.530
```

```
|MathWorks AC_Overshoot_Low 0.0 0.0 0.0
```

```
|MathWorks Overshoot_Low -0.3 -0.3 -0.3
```

```
|MathWorks Slew_Time_Min 25ps
```

```
|MathWorks Slew_Time_Max 175ps
```

```
|
```

```
||Standard load measurement level
```

```
|MathWorks Vmeas 0.600 0.570 0.630
```

```
|
```

```
||Standard load termination value
```

```
|MathWorks Vref 1.2 1.14 1.26
```

There are a few other parameters you will want to enable Eye Mask Compliance for DDR4 or DDR5 or as appropriate for your interface. For example, in the DATA class DQ Include file you would set the following:

```
||| DDR4/5 specific timing parameters:
```

```
|
```

```
|| Enable eye mask processing on receivers:
```

```
|| YES = DDR Eye Mask analysis done.
```

```
|| No (Default) = No DDR4/5 analysis done.
```

```
|MathWorks MaskAnalysis YES
```

```
|
```

```
|| Which Vref to use for analysis on receivers:
```

```
|| YES = Use IBIS levels relative to Floating Vref
```

```
|| No (Default) = Use fixed Vref as defined by Vin_vref
```

```
|MathWorks FloatingVref YES
```

```
|  
|| Granularity for Mask Analysis  
|| YES = Do Mask Analysis Per Pin  
|| No (Default) = Do Mask Analysis Per Bundle  
|MathWorks MaskPerPin Yes
```

```
|  
|| Which Thresholds to use for Timing Analysis  
|| YES = Use Vref +/- (ViVW_Total/2)  
|| No (Default) = Use IBIS Model thresholds  
|MathWorks TimingViVW Yes
```

### Configure Include Files for Waveform Mask Analysis

#### Parameters in Include file to configure Eye Mask analysis

Here you can see a plot of the mask defined in the DATA class DQ Include file you would set the following at the section for a clock period of 0.938:

**Note:** The parameters ViVW\_Total, TiVW\_Total, and TiVW\_Output\_Skew are defined in the DDR4 or DDR5 standard (JESD79-4 and JESD79-5, respectfully), please refer to those as appropriate for their definitions and more details about them.

```
|MathWorks elseif ( $clock_domain(DDR4_ck_period)==0.938)
```

Where the following statements configure the parameters AC\_Overshoot\_High\_Area and Low\_Area for this data rate:

```
|| PLD Waveform Quality and Timing Levels for DDR4-2133  
|MathWorks AC_Overshoot_High_Area 0.0901 0.0901 0.0901  
|MathWorks AC_Overshoot_Low_Area 0.0788 0.0788 0.0788
```


And where the following configure the Mask for Eye-Diagram compliance and margin calculations for this data rate:

```
|MathWorks TiVW_Total 0.094ns 0.094ns 0.094ns  
|MathWorks TiPW 0.272ns 0.272ns 0.272ns  
|| Set SDRAM output skew to 0.4UI (DQ_SKEW_MAX - DQ_SKEW_MIN)  
|MathWorks TiVW_Output_Skew 0.188ns  
|MathWorks SRIN_diVW_Min 1.0  
|MathWorks SRIN_diVW_Max 9.0
```




### Run Simulation and View Results

After you run the simulation for Clock, Address/Command, Strobe and Data signals, you can evaluate margins for this DDR4 interface using the imagined "x6" SDRAM model deck. You can do this in Signal Integrity Viewer, which has many plot functions available to assist you in analyzing Waveforms and Eye Masks. You can see the result by plotting a Waveform for an Address-Command transaction where the Receiver is "ddr4\_sdram\_0," then find the appropriate row in the results table of the Signal Integrity Viewer, right-click to open the **Show Waveform** dialog and select **At Target Pad**.

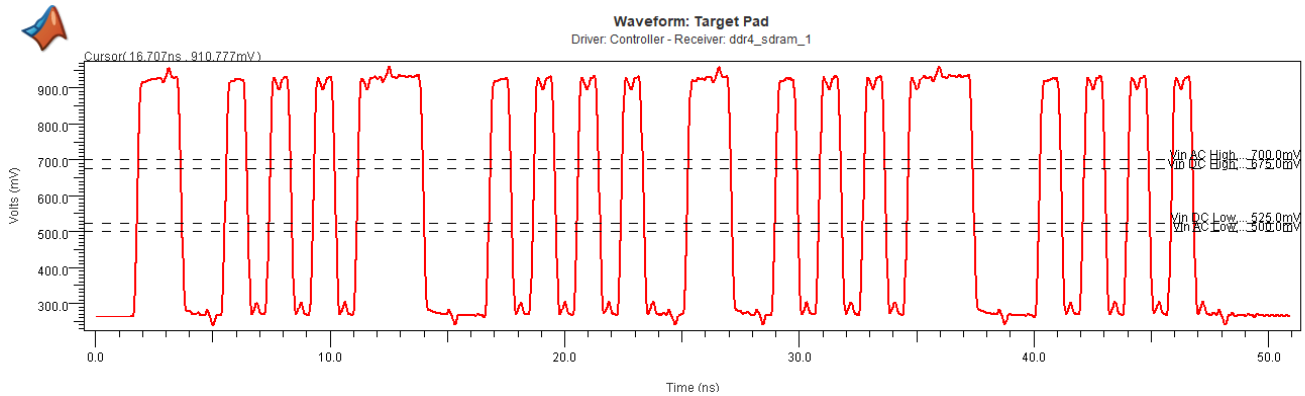

You can see the result by plotting an Eye Diagram for a Data Write transaction where the Receiver is "ddr4\_sdram\_0," you can find the appropriate row in the results table of the Signal Integrity Viewer, right-click to open the **Show Waveform** dialog and select **At Target Pad**.

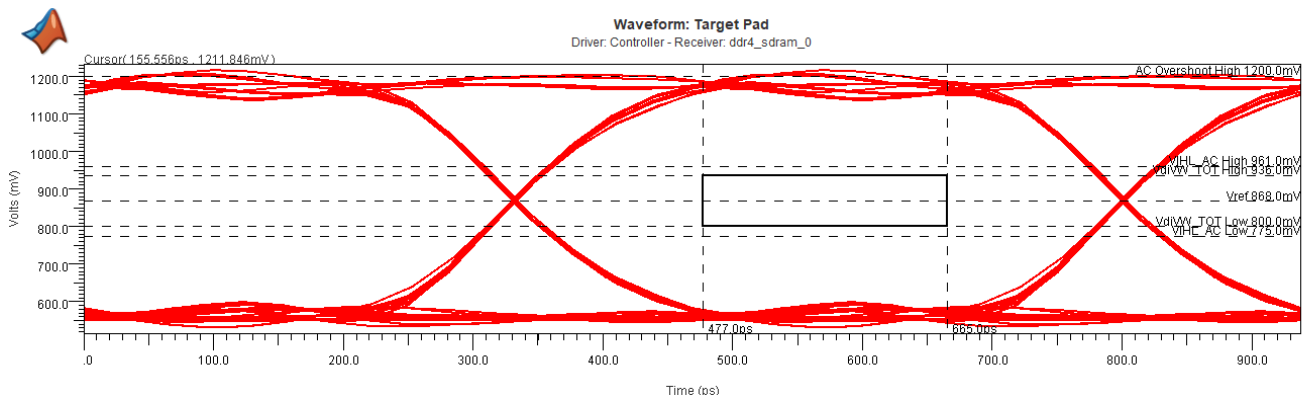

### Configure Timing Files for Timing Analysis

#### PARAMS: Section of Timing File

In the Timing file, you can see there are multiple sections. The first section is the PARAMS: section, where you can see timing margins are defined for DDR4-2133 (clock period 0.938, DQ bit time 0.469).

PARAMS:

<...>

# DDR4-2133

```
elseif (DQ_BIT_TIME==0.469)
ADDCMD_SETUP = 0.080
ADDCMD_HOLD = 0.105
CTRL_SETUP = 0.080
CTRL_HOLD = 0.105
tQH = 0.76 * DQ_BIT_TIME
tDQSQ = 0.16 * DQ_BIT_TIME
tDQSS_min = -0.27 * CK_PERIOD
tDQSS_max = 0.27 * CK_PERIOD
tDSS = 0.18 * CK_PERIOD # met through write leveling
tDSH = 0.18 * CK_PERIOD # met through write leveling
<...>
```

The next portion of the `PARAMS:` section is used to setup DQ to DQS Input Timing. DQ setup and hold are obsolete parameters in DDR4/5 parlance. The Data signals (DQ) have to meet a mask whose conformation is reported in the Waveform and Timing Report. The Strobe signals (DQS) are assumed to be capable of capturing a DQ bundle (which can be a x4 "Nibble," x8 "Byte," the imagined "x6" SDRAM lane in this example, or any number) that meets the mask.

**Note:** To assist you with diagnosing any potential Timing Margin issues, this file is configured to find DQ Setup and Hold values. They are derived from the mask parameters. This helps evaluate Timing Analysis, and for verification that DQS training can center DQS on the DQ bundle, accounting for some level of jitter on the DQS line. Per preliminary SDRAM datasheets, this value is  $T_{diVW\_total}/2$ .

<PARAMS: continued>

```
DQ_SETUP = (0.2 * DQ_BIT_TIME)/2
DQ_HOLD = (0.2 * DQ_BIT_TIME)/2
## DQ to DQS Output timing:
#
DQ_SKEW_MIN = tQH - DQ_BIT_TIME
DQ_SKEW_MAX = tDQSQ
## DQS to CK input timing:
# Assumes that at the controller, timing is defined for
# Rising CK to both Rising and Falling edges of DQS
```

```

DQS_R_SETUP = -tDQSS_max
DQS_R_HOLD = tDQSS_min + DQ_BIT_TIME
DQS_F_SETUP = tDSS
DQS_F_HOLD = tDSH - DQ_BIT_TIME
END_PARAMS

```

### **PINDEF: Section of Timing File**

The next section of a Timing file **PINDEF**: declares the pin types as Inputs, Outputs, Bi-Directional, and Uninteresting. Signals listed in the Uninteresting section will have no Timing analysis performed, but any miscellaneous signals can be included for completeness and to eliminate coverage warnings in Validation. The pin names can be grouped by bus, or common timing function.

```
PINDEF: 37 PINS
```

```
# Syntax:
```

```
# <Timing Group Name> = <IBIS Model pin names>
```

```
INPUTS
```

```
## All input signals are listed in this section.
```

```
## Example:
```

```
# CLK = CLOCK_IN
```

```
# DATA_I = DATA_IN<31:0>
```

```
# CTRL_I = ADDRESS<7:0>, WRITE_EN, RAS, CAS
```

```
ADDCMD = A[11:0], A12_BC_n, A13, WE_n_A14, CAS_n, RAS_n, ACT_n, PARITY,
BA[1:0], BG[1:0]
```

```
CK = CK_t, CK_c
```

```
CTRL = CKE, CS_n, ODT
```

```
#
```

```
OUTPUTS
```

```
## All output signals are listed in this section.
```

```
## Example:
```

```
# DATA_O = DATA_OUT<31:0>
```

```
# REFCLK_1 = CLOCK_OUT1, CLOCK_OUT3
```

```
# REFCLK_2 = CLOCK_OUT2, CLOCK_OUT4
```

**BIDIR**

```
## All bi-directional signals are listed in this section.
```

```
## Example:
```

```
# DATA_IO = D_A_<3:0>, D_B_<7:4>, D_C_<11:8>, D_D_<15:12>
```

```
DQ = DQ[5:0]
```

```
DQS = DQS_t, DQS_c
```

```
#
```

**UNINTERESTING**

```
## All other signals are listed in this section.
```

```
## Example:
```

```
# MISC = AUD_BITCLK_A_H,AUD_SYNC_A_H,EXT_<11:0>_H,USB_PRT_PWR_<2:0>_L,\
```

```
# USB_VD_<5:0>_N,USB_VD_<5:0>_P
```

```
DM = DM
```

```
#
```

```
END_PINDEF
```

**Timing Configuration Section of File**

There are different sections of the file used to configure Timing based on Input, Output, and other means depending upon the system interface being analyzed in **Parallel Link Designer**:

- Input Timing relationships (Setup and Hold)
- Output Timing: Synchronous Output Delays
- Output Timing: Dynamic Clock Skew Output Delays
- Output Timing: Source-Synchronous Output Delays
- Input Timing: DQ Read Timing

**Input Timing Relationships: (Setup & Hold)**

All input pin timing constraints are defined using the 'SETHLD' keyword. Note that setup and hold constraints can be defined using 1, 2, or 4 values giving the user flexibility to define timing constraints at the required granularity. In the examples below, setup and hold constraints are defined for all pins in the "Data Timing Group" relative to the defined "Edge" (rising or falling) of all pins in the "Clock Timing Group."

**Syntax:**

```
<Keyword> <Data Timing Group> *T0 <Edge> <Clock Timing Group> <Setup/Hold Time>
```

```
<Keyword> <Data Timing Group> *T0 <Edge> <Clock Timing Group> <Setup Time>
<Hold Time>
```

```
<Keyword> <Data Timing Group> *T0 <Edge> <Clock Timing Group> <R Setup Time>
<F Setup Time> <R Hold Time> <F Hold Time>
```

**Examples:**

```
SETHLD CTRL_I *T0 R CLK CTRL_IN
```

```
SETHLD DATA_I *T0 F CLK DATA_SETUP DATA_HOLD
```

```
SETHLD DATA_IO *T0 R CLK DATA_R_SETUP DATA_F_SETUP DATA_R_HOLD DATA_F_HOLD
```

**Output Timing: Synchronous Output Delays**

The DELAY, DELAY\_CORRELATED, and DELAY\_ANTICORRELATED keywords are used to define synchronous output timing relationships between the data and clock timing groups defined in the PINDEF section above. To define output timing relationships on both rising and falling edges, multiple delay statements are required. Note that Clock-to-out (Tco) delay values can be defined using 2 or 4 values, giving the user flexibility to define output timing relationships at the required granularity. In the examples below, output timing relationships are defined for all pins in the "Data Timing Group" relative to the defined "Edge" (rising or falling) of all pins in the "Clock Timing Group".

**Syntax:**

```
<Keyword> <Edge> <Clock Timing Group> *T0 <Data Timing Group> <Tco Min> <Tco
Max>
```

```
<Keyword> <Edge> <Clock Timing Group> *T0 <Data Timing Group> <Tco Rmin> <Tco
Rmax> <Tco Fmin> <Tco Fmax>
```

**Output Timing: Correlative Analysis for Synchronous Output**

When the 'DELAY' keyword is used, synchronous timing is done using both the 'Tco Min' and 'Tco Max' delay values for each process corner (FF and SS). This is a worst-case analysis. When the 'DELAY\_C' or 'DELAY\_CORRELATED' keyword is used, synchronous timing is done using the 'Tco Min' value for the FF process corner, and the 'Tco Max' delay value for the SS process corner timing calculation. This is a correlative analysis.

When the 'DELAY\_A' or 'DELAY\_ANTI\_CORRELATED' keyword is used, synchronous timing is done using the 'Tco Max' value for the FF process corner, and the 'Tco Min' delay value for the SS process corner timing calculation. This is another form of correlated analysis.

**Examples:**

```
DELAY R CLK *T0 DATA_IO 1.0 5.2
```

```
DELAY_C R CLK *T0 DATA_IO 1.0 5.0 1.2 5.2
```

```
DELAY_CORRELATED R CLK *T0 DATA_IO 1.0 5.0 1.2 5.2
```

**Note:** There are no Synchronous Output Delays in this example model because this is a DDR model, so see section "Source-Synchronous Output Delays" below.

**Output timing: Dynamic Clock Skew Output Delays**

The 'CLOCK\_SKEW' keyword is used to define the out-to-out skew between two output clock timing groups. To define output timing relationships on both rising and falling edges, multiple delay statements are required. This skew along with associated interconnect delays for the source and target clocks are used to determine the setup skew and hold skew used in synchronous dynamic skew clock timing analysis.

**Note:** For loopback clocks, the two timing groups can be the same.

**Syntax:**

```
<Keyword> <Edge> <Clock Timing Group> *T0 <Clock Timing Group> <Min> <Max>
```

**Example:**

```
CLOCK_SKEW R REFCLK_1 *T0 REFCLK_2 SKEW_MIN SKEW_MAX
```

**Note:** There are no Dynamic Clock Skew Output Delays in this example model because this is a DDR model, so see section "Source Synchronous Output Delays" below.

**Output Timing: Source-Synchronous Output Delays**

The 'DELAY\_SKEW' or 'DELAY\_S' keywords are used to define the source-synchronous timing relationships between the timing groups defined in the PINDEF section above. Typically, these are defined between output pins of a source synchronous bus. However, these can be defined using an input clock timing group in loop-back clocking scenarios. To analyze timing on both edges, multiple delay statements are required.

**Note:** The source synchronous delay values can be defined using 2, or 4 values.

**Syntax:**

```
<Keyword> <Edge> <Clock Timing Group> *T0 <Data Timing Group> <DS_Min>  
<DS_Max>
```

```
<Keyword> <Edge> <Clock Timing Group> *T0 <Data Timing Group> <Rmin> <Rmax>  
<Fmin> <Fmax>
```

**Examples:**

```
DELAY_SKEW R STROBE *T0 DATA_0 DS_MIN DS_MAX
```

```
DELAY_S R STROBE *T0 DATA_0 DS_RMIN DS_RMAX DS_FMIN DS_FMAX
```

**To Configure DQ Read Timing:**

```
DELAY_SKEW R DQS *T0 DQ DQ_SKEW_MIN DQ_SKEW_MAX
```

```
DELAY_SKEW F DQS *T0 DQ DQ_SKEW_MIN DQ_SKEW_MAX
```

**Timing Report Summary**

The Waveform and Timing report has multiple worksheets with timing data, and each worksheet shows timing data in a different context. There are many worksheets described in the following

section "Timing Report Detailed Worksheets," but you can begin with the following summary to gain some understanding of the information available:

Increasing levels of detail with each sheet:

- The worksheets begin with Waveform Summary on the left, and proceed with greater detail into Timing and then Mask reporting as you click on each tab moving left-to-right through the set of worksheets.
- "Timing" worksheet: worst case result per Transfer Net (could be worst result within hundreds or thousands of simulations)
- As you open sheets to the right of this, more details are provided, for example "By Variation Details" shows each simulation case

Different bus transactions are classified in worksheets:

- By Driver
- By Receiver
- By Corner
- And more

Terminology used in worksheets:

"No AC Specs:" A net that does not have a Setup or Hold constraint for timing analysis

- A clock net would normally be reported this way
- Other signals such as DQ would expect to see a result, so this would aid in debugging your configuration

"No strobe:" A constraint that could not be calculated

- The data or clock/strobe net was not simulated
- A skew statement is missing from a timing model
- A clock or strobe net is not set to Type Clock or Strobe in the tool

### **Timing Report Detailed Worksheets**

When simulations are run it can be automatically launched by checking the **Display Results Spreadsheet** checkbox on the simulate dialog. After simulations have been run it can be displayed from the **Reports | Waveform & Timing Report** menu item or the **View Waveform & Timing Report** toolbar button. The following is a description for each worksheet:

- Timing Report Log tab contains syntax errors in the data and a summary of the Edge Details tab summarizes each edge in each simulation.
- Timing tab rolls up the By Edge tab by combining rising and falling edges.
- By Transfers tab rolls up the By Variation tab by combining identical transfers (same driver and receiver).
- By Variation tab rolls up the By Edge Variation tab by combining rising and falling edges.
- By Variation Details tab
- By Variation Details Summary tab
- Timing Waveform Margin Details tab Summarizes both waveform and timing information across each simulation in a single tab.

- By Driver tab rolls up the By Variation tab by combining identical drivers.
- By Receiver tab rolls up the By Variation tab by combining identical receivers.
- Synchronous Details tab contains the timing data for nets using a regular (centralized) clocking configuration by receiver. It includes Setup and Hold margins and etch delays referenced to driver test load. It also lists receiver Setup and Hold time specs, driver clock to out delays, UI (bit time) and clock skews used to calculate the margins.
- Source Synchronous Details tab contains the timing data for nets using a source synchronous clock, by receiver. It includes Setup and Hold margins as well as data and clock etch delays referenced to driver test load. It also lists receiver Setup and Hold time specs, UI (bit time) and driver skews used to calculate the margins.
- Clock Buffer Details Tab -- Shows the rollup of the DELAY NX and feedback
- Etch Delays for clock buffers.
- Clock Path Details Tab -- Gives details of the Etch Delay calculation for clock paths that traverse buffers or PLLs. This is the calculation shown in the User Guide section 13.3.2: "*Calculating Clock Delay Through Buffers and PLLs.*" In the report, the columns labelled **From Buffer R/F/min/max Delay** are the rollup of the Etch Delay of the PLL output, the Etch Delay of the PLL feedback and the PLL DELAY NX. The rollup is shown for each process corner run, and then for **All**. The **All** numbers use the smallest of all corners for the min and the largest for max, so it is a cross corner worst case rollup. This corresponds to the min() and max() functions (in the equations shown in User Guide section 13.3.2: "*Calculating Clock Delay Through Buffers and PLLs.*").
- Training Details Tab -- contains the data showing the Setup and Hold margins without training (Untrained Setup and Hold Margin), the Setup and Hold margins if the tap could be set to any value (Optimal Setup and Hold Margin) and the Setup and Hold margin when their taps are set to their best setting (Trained Setup and Hold Margin).
- The tap used for the best setting and the delay from that tap are reported as well as the Transfer Net, Pin Group (from the timing model) and the type of training statement (from the timing model).
- Edge Details tab
- Timing Waveform Margin tab
- Coupling Pushout tab (SSO mode only) reports the coupling effects on timing.
- Coupling Noise tab (SSO model only) reports the voltage variation on victim nets caused by coupling.


### Support for Other Clock Architectures

**Parallel Link Designer** supports many other clock architectures. They are briefly described below to show you how to write the correct syntax for each clock architecture within a Timing File.

### Source-Synchronous Timing

This section will re-summarize the requirements to configure a Source-Synchronous interface for timing analysis.



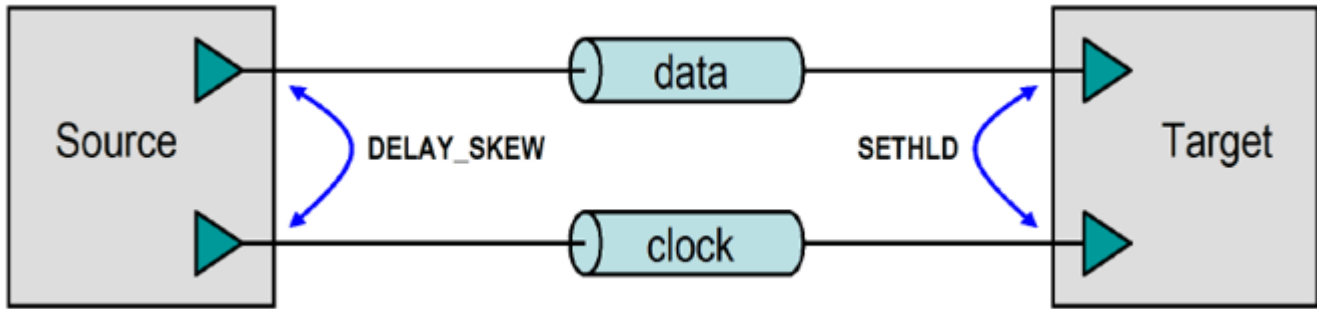

Source-synchronous analysis has the following configuration requirements:

1. You must create the appropriate Transfer Net schematic sheets. In the simplest case, there must be two schematic sheets, one for the data net and one for the clock net. The data schematic sheet should be of type Data and the clock schematic sheet should be of type Clock or Strobe.
2. The Project Parts must have Timing Models. Each timing model must have a SETHLD (Setup and Hold) timing constraint defined between the data and clock PINDEF groups. For example, a part with a Setup requirement of 3ns and a Hold requirement of 1ns for the PINDEF group data with respect to the PINDEF group CLK would have the following SETHLD statements, and in the event the application is a DDR interface, there must be a statement for both Rising and Falling edges:

```
SETHLD data *T0 R clock 3.0 1.0
```

```
SETHLD data *T0 F clock 3.0 1.0
```

3. You must add a DELAY\_SKEW statement in the timing model for the driving chip between the data and clock PINDEF groups. A device that has a +/- 200ps skew between clock and data PINDEF groups would have the following DELAY\_SKEW statement:


```
DELAY_SKEW R clock *T0 data -0.2 0.2
```

```
DELAY_SKEW F clock *T0 data -0.2 0.2
```

**Note:** For DDR, two DELAY\_SKEW statements are also required, one for the rising clock edge and one for the falling clock edge.

### Synchronous (Common-Clock) Timing Configuration

You can see in the following figure an illustration of Synchronous (Common-Clock) data transfer timing elements. This will be used to describe requirements to configure a synchronous interface for timing analysis.

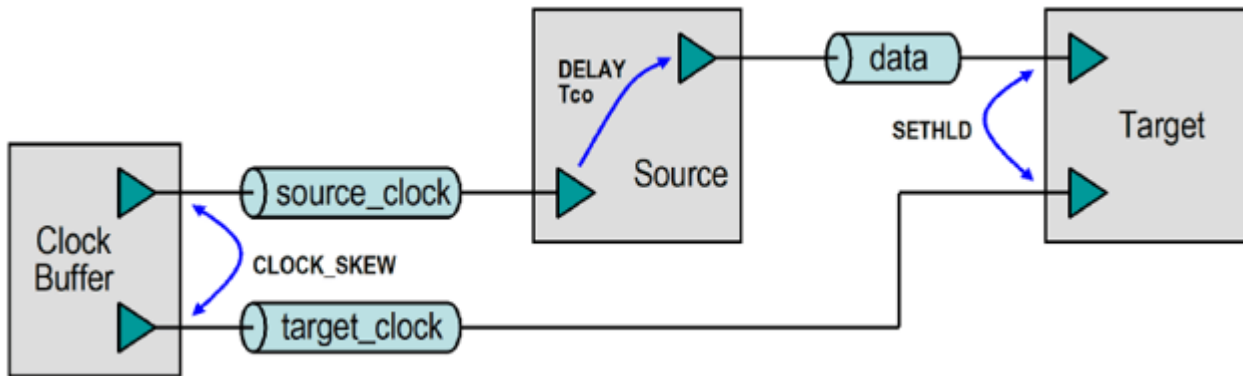

### Create Data Transfer Net Schematic Sheet

This schematic sheet is of type DATA. The Project Parts used for the designators must have timing models.

### Define Delay Statements

The timing model for output or I/O pins must have DELAY statements defined between the data and clock PINDEF groups. For Double-Data-Rate (DDR) transfers, two DELAY statements are required, one for the rising clock edge and one for the falling clock edge, but this section will cover single-data-rate transfers.

For example, a part with a clock-to-out from 1ns (min) to 3ns (max) on the PINDEF group DATA with respect to the PINDEF group CLK would have the following DELAY statement:

```
DELAY R CLK *T0 DATA 1.0 3.0
```

### Define Setup and Hold Timing Constraints

The timing model for input or I/O pins must have a SETHLD (Setup and Hold) timing constraint defined between the data and clock PINDEF groups. For example, a part with a Setup requirement of 3ns and a Hold requirement of 1ns for the PINDEF group DATA with respect to the PINDEF group CLK would have the following SETHLD statement:

```
SETHLD DATA *T0 R CLK 3.0 1.0
```

In order to enable the dynamic calculations of clock skew on a synchronous transfer, you will need to perform the following steps:

1. You must create the appropriate Transfer Net schematic sheets for the source and target clock (e.g., `source_clock` and `target_clock` shown in the figure above). These sheets must be of type Clock or Strobe. The clocks/strobes must both originate from the same Project Part clock buffer device and connect to the clock pins of the clocked source and target devices.
2. There must be a `CLOCK_SKEW` statement in the timing model for the clock buffer between the output clock PINDEF groups to define the drive uncertainty for these output pins.

**Note:** All output clock pins may be in the same PINDEF group. The `CLOCK_SKEW` statement can reference the PINDEF to itself. A device with clock output PINDEF groups CLK1 and CLK2 that have a skew of +/- 200ps would have the `CLOCK_SKEW` statement as shown below.

```
CLOCK_SKEW R CLK1 *T0 CLK2 -0.2 0.2
```

### Clock Buffers and PLLs


This section will briefly define some other Timing Model statements that support clock buffer and PLL-based systems.

#### Clock Buffer:

You can see in the illustration below the timing characteristics of a clock buffer include intrinsic delay and skew between output pins.


The commands to support this are:

- DELAY NX (delay non-inverting)
- DELAY IX (delay inverting)
- CLOCK\_SKEW (skew between outputs)

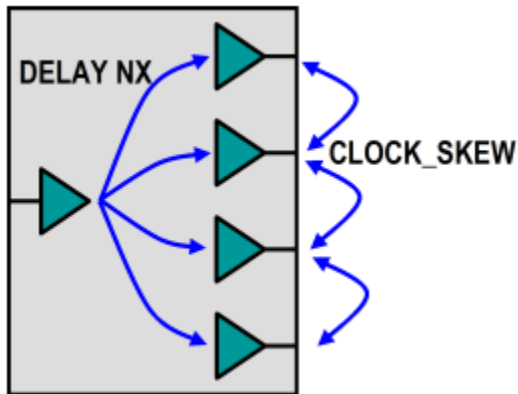

Then you can see below that for PLLs, there is an additional command:


- DELAY PLL (specifies the feedback input and output pins)

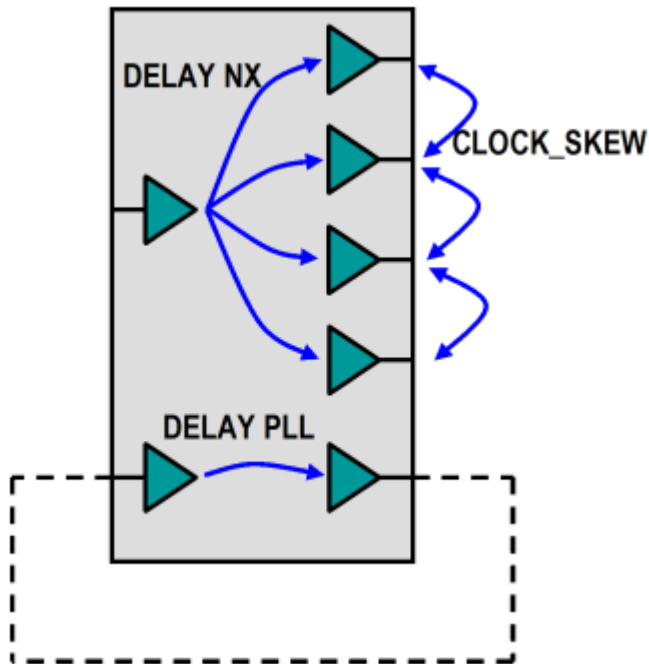


When tracing a clock buffer or PLL, **Parallel Link Designer** uses the "DELAY NX" or "DELAY IX" statements in the timing model to determine the connectivity between the Transfer Net that is connected to the input of the buffer or the PLL and Transfer Net that is connected to the output of the buffer or PLL. **Parallel Link Designer** must have this information in order to trace the complete clock path.

### Example Systems

**Parallel Link Designer** supports timing through clock buffers for both Synchronous and Source-Synchronous timing. As you can see below for a Synchronous system, transfers between a source and target device would have Setup and Hold skew dynamically calculated by tracing back the clock tree from both devices through any clock distribution components to a common source clock component.

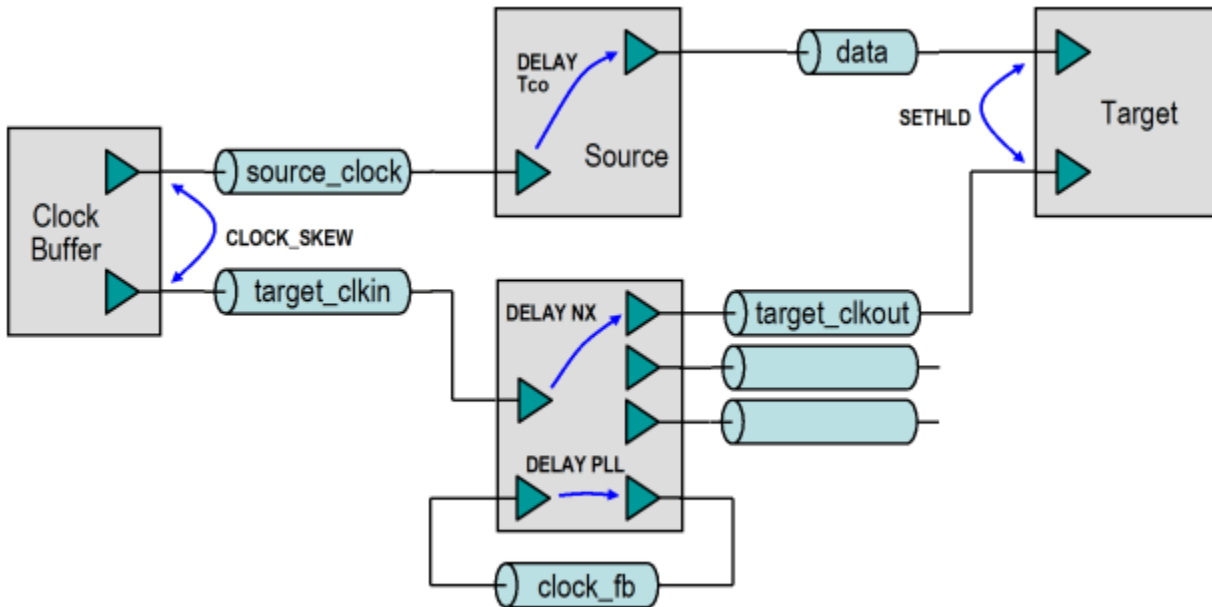

For a Source-Synchronous system, transfers between a source and target device would have the clock path delay dynamically calculated by tracing back the clock from the target device through any clock distribution components to the source device.

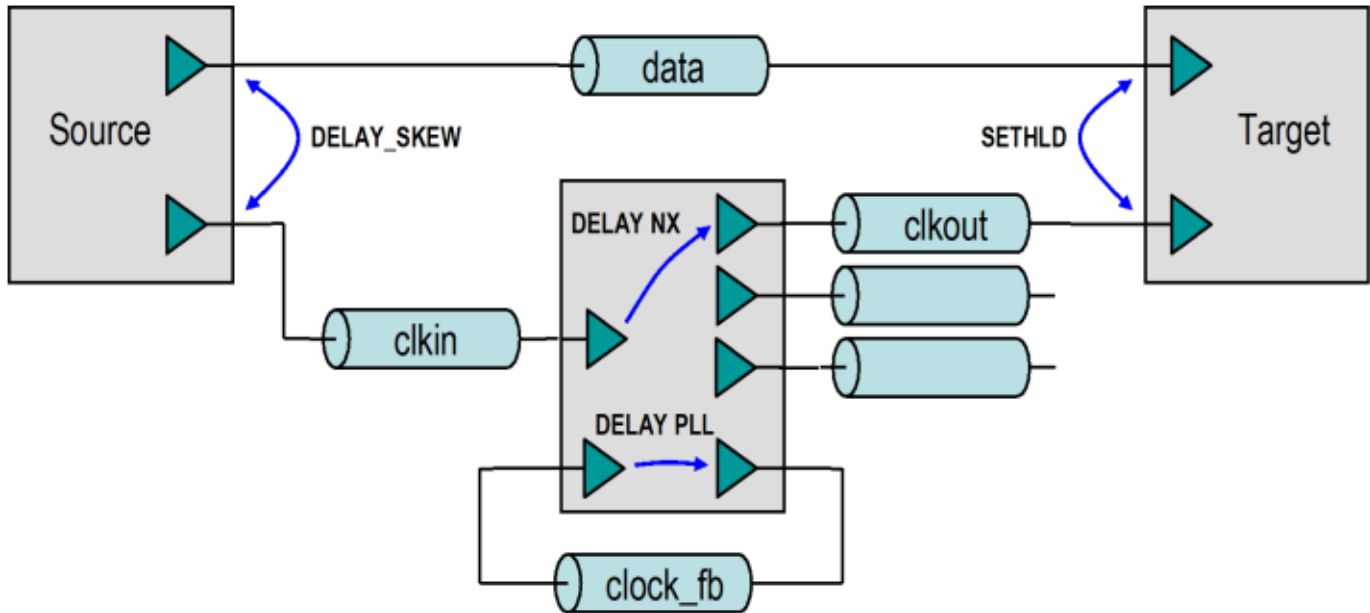

### Timing Configuration Through Clock Buffers

In order to enable timing through a clock buffer, you will need to perform the following:

1. You must first perform the base Synchronous or Source-Synchronous timing configuration as described in User Guide sections 13.5.1 and 13.5.2 for the data signals.

2. You must then create separate Transfer Net schematic sheets of type Clock or Strobe for the clocks into and out of the clock buffer (e.g., `target_clk_in` and `target_clk_out` shown in the figure above). **Note:** If the outputs of the clock buffer go to different target parts, a Transfer Net will need to be created for each unique target part.

3. Add a `DELAY NX` or `DELAY IX` statement in the timing model for the clock buffer between the input pin and the output pin PINDEF groups. A non-inverting clock buffer that has a minimum delay of 500ps and maximum delay of 2.5ns between the input and output pins would have the following `DELAY NX` statement:

```
DELAY NX CKIN *T0 CKOUT 0.500 2.500
```

### Timing Configuration Through a PLL

**Parallel Link Designer** supports timing through PLL's, including the feedback path, for both Synchronous and Source-Synchronous timing. This can be accomplished either with or without simulating the feedback path. In order to enable timing through a PLL, you will need to perform the following:

1. You must perform the base Synchronous or Source-Synchronous timing configuration as described in User Guide sections 13.5.1 and 13.5.2 for the data signals.

2. You must create separate Transfer Net schematic sheets of type Clock or Strobe for the clocks into and out of the clock buffer (e.g., "clkout" and "clk\_in" shown in the figure above showing a PLL).

**Note:** If the outputs of the clock buffer go to different target parts, a transfer net will need to be created for each unique target part.

3. Create a schematic sheet for the PLL feedback path of type Clock. The source part and the target part will be the PLL.

4. Add a `DELAY PLL` statement in the timing model for the PLL between the feedback output pin and feedback input pin PINDEF groups. A feedback path that has a minimum delay of 250ps and maximum delay of 350ps would have the following `DELAY PLL` statement:

```
DELAY PLL FBIN *T0 FBOUT 0.250 0.350
```

**Note:** The above `DELAY PLL` statement can also be used while simulating the feedback path. Any delay values derived from simulation will take precedence over the values in the `DELAY PLL` statement.

### Configuration for Trained Timing

Trained Timing is used by devices that align a clock or strobe with a data valid window by delaying the clock or strobe using a DLL (Delay Lock Loop). In the **Parallel Link Designer** timing model a `TRAINED` statement is required to specify the DLL parameters (e.g., step size or granularity) for the PINDEF pin group for a clock or strobe.

For example, if a DQ and DQS pin group has the following `DELAY_SKEW` statements in a controller timing model:

```
DELAY_SKEW R DQS1 *T0 DQ1 DQ_SKEW_MIN DQ_SKEW_MAX
```

```
DELAY_SKEW F DQS1 *T0 DQ1 DQ_SKEW_MIN DQ_SKEW_MAX
```


The `TRAINED` statements for the pin group DQS1 would be:

TRAINED\_DELAY\_SKEW DQS1 MIN\_TAP\_INC MAX\_TAP\_INC TAP\_GRAN

The Waveform and Timing report will include the Training Details tab that will show the margin without training, the optimal sample time and the DLL tap that give margins closest to the optimal margins. For details on the TRAINED . . . statements see the User Guide section 9.8.2.2.8: "TRAINED\_DELAY\_SKEW, TRAINED\_DELAY\_CORELLATED, TRAINED\_SETHLD."

### Timing Configuration for External Loop Clock

This is a system where a controller generates a read and write clock, and the read clock is looped back to the controller (see below).

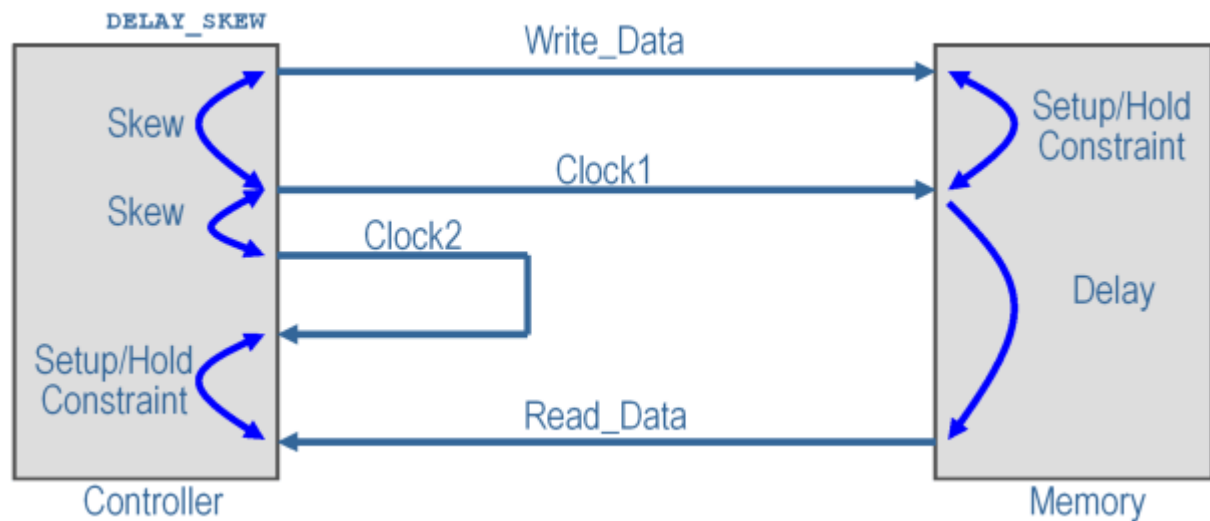

In this system writes (Controller to Memory) are Source-Synchronous and reads (Memory to Controller) are synchronous. The controller will need a DELAY\_SKEW statement for the Clock1 to Write\_Data relationship as shown below:

```
DELAY_SKEW R Clock1_out *T0 Write_Data SKEW_MIN SKEW_MAX
```

```
CLOCK_SKEW Clock1_out *T0 Clock2_out SKEW_MIN SKEW_MAX
```

```
SETHLD Read_Data *T0 R Clock2_in SETUP HOLD
```


The memory timing model would have a DELAY statement for the Clock1 to Read\_Data timing relationship, as shown below:

```
DELAY R Clock1_in *T0 Read_Data DELAY_MIN DELAY_MAX
```


```
SETHLD Write_Data *T0 R Clock2_in SETUP HOLD
```

### Timing Configuration for Internal Loop Clock

If the clock labeled Clock2 in the diagram above for "External Loop Clock" were inside the controller, the system would look like this:

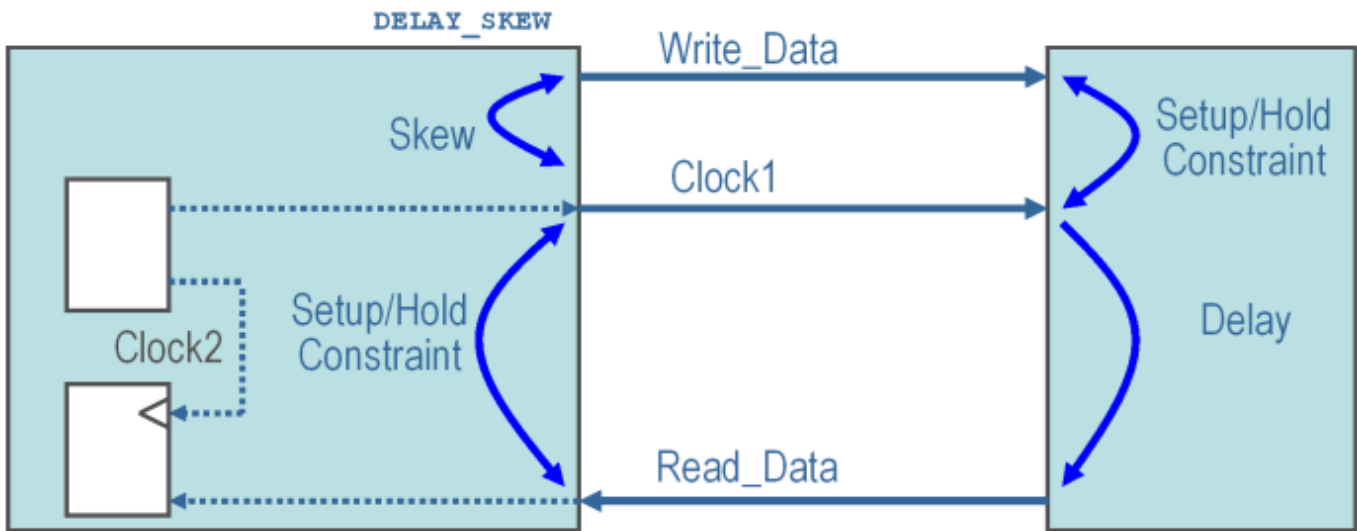

The read and write timing is the same as in the external case (see User Guide section 13.4: "Pre-layout vs. Post-layout timing"), except the clock for the read data is internal to the controller. The data sheet timing references the Setup and Hold of the read data to `Clock1`, the output clock from the controller. **Parallel Link Designer** still requires an input clock for the Setup and Hold constraint for read data at the controller, so a dummy input clock must be created. This dummy input clock has a `DELAY NX` statement with zero delay to `Clock1`, so it has the same timing as `Clock1`. The configuration is shown below:

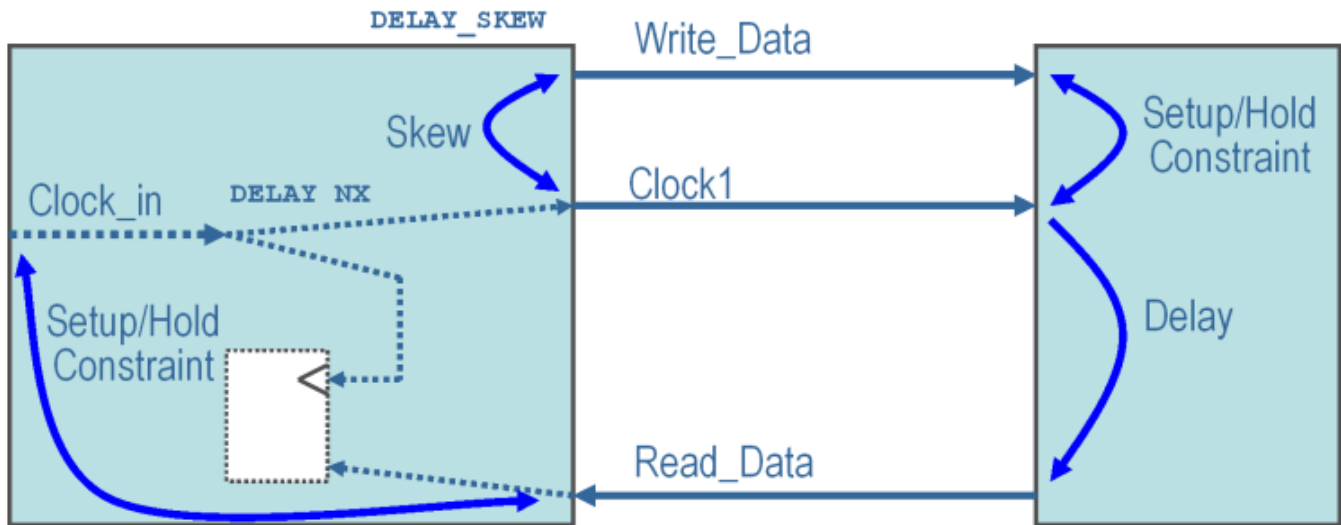

The dummy input clock pin can be an existing unused clock pin in the IBIS file, or a pin can be added to the IBIS component and timing model `PINDEF`. No Transfer Net is required for the dummy input clock. It is only used to create a common reference point for the synchronous timing calculation for data reads.

The controller timing model would have the following timing statements:

```
DELAY_SKEW R Clock1_out *T0 Write_Data SKEW_MIN SKEW_MAX
```



```
DELAY NX Clock1_in *T0 Clock1_out 0
```

```
SETHLD Read_Data *T0 R Clock_in SETUP HOLD
```

The memory timing model would have a DELAY statement for the Clock1 to Read\_Data timing relationship, as shown below:

```
DELAY R Clock1_in *T0 Read_Data DELAY_MIN DELAY_MAX
```

```
SETHLD Write_Data *T0 R Clock2_in SETUP HOLD
```

### **Summary**

This tutorial has shown you how **Parallel Link Designer** can be used to analyze a Source-Synchronous-Clocked DDRx memory interface for Timing and Waveform Mask Analysis to determine compliance margins, as well as how some other clock architectures can be supported to analyze parallel-link systems.



# Jitter and Noise


---

- “Model Jitter and Noise While Designing Parallel Link” on page 11-2
- “Model Jitter and Noise While Designing Serial Link” on page 11-9

## Model Jitter and Noise While Designing Parallel Link

You can model three major sources of jitter using the STAT mode in the **Parallel Link Designer**: TX clock jitter, RX clock jitter, and RX clock recovery jitter. You can also add RX noise.


Jitter and noise affect the bit error rate (BER) of a serial channel. Some sources of jitter affect the data bathtub curve and some affect the clock PDF (probability distribution function). The data bathtub and clock PDF are used in the BER calculation, so changing either changes BER.

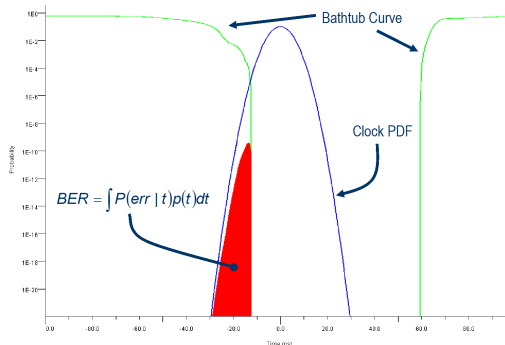

TX jitter and RX noise always change the data eye and data bathtub. RX jitter and RX clock recovery jitter are handled differently depending on how you set the **Clock Mode** parameter.

- *Normal* — RX clock recovery jitter affects the clock PDF.
- *Clocked* — RX clock recovery jitter affects the data eye and bathtub.
- *Convolved* — RX clock recovery jitter affects the data eye and bathtub.

To access jitter and noise parameters, first select a transfer net sheet by selecting **Setup > TNet Properties**. Then open the Designator Element Properties panel by selecting **Properties**. Finally, open the parameters by selecting **Tx Jitter** or **Rx Jitter**. These dialog boxes are also accessible by double clicking any of the designators in the Pre-Layout Analysis tab.

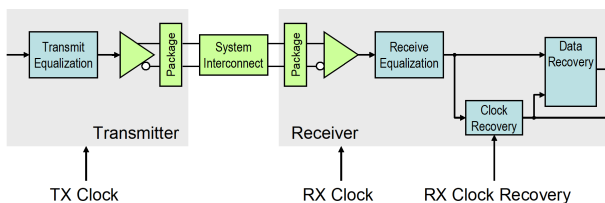

### TX Clock Jitter

The app models the TX clock jitter using five parameters. The parameters modify the Tx stimulus (Time Domain analysis) or are added in postprocessing (Statistical Analysis). View and modify these parameters in the TX Jitter dialog box, accessible through the Designator Element Properties dialog box.

TX jitter always changes the data eye and data bathtub.

Jitter Parameter	Description
<b>Tx Rj</b>	<p>Random Gaussian-distributed jitter (RJ) injected at the transmitter. The level is defined as the standard deviation of the RJ, in unit intervals (UI) or seconds. This is sometimes used to model the effects of power supply noise generated by logic switching events in the core of the device. <b>Tx Rj</b> affects the stimulus as follows:</p> $Time(n) = n \times UI + Tx\_Rj \times randn$ <p><math>Time(n)</math> is the time of edge <math>n</math>.</p> <p><math>randn</math> is a function that returns random numbers from the standard normal distribution with mean 0 and variance 1.</p>
<b>Tx Dj</b>	<p>Deterministic jitter (DJ) injected upstream of the link. The level is defined as peak DJ, in UI or seconds. <b>Tx Dj</b> accounts for all deterministic and uncorrelated bounded jitter that is not accounted for by <b>Tx DCD</b> and <b>Tx Sj</b>. DJ is applicable only on the transmit side. The effects of intersymbol interference in the transmission channel are accounted for directly in the analysis or simulation. <b>Tx Dj</b> affects the stimulus as follows:</p> $Time(n) = n \times UI + Tx\_Dj \times rand$ <p><math>rand</math> is a function that returns random numbers from a uniform distribution over the interval (-1, 1).</p>
<b>Tx Sj</b>	<p>Sinusoidal jitter (SJ), or sinusoidally varying delay injected at the transmitter. SJ is one half peak-to-peak deviation, in UI or seconds. This is sometimes used to model the effects of power supply noise generated by clock currents in the core of the device. <b>Tx Sj</b> affects the stimulus as follows:</p> $Time(n) = n \times UI + Tx\_Sj \times \sin(n \times UI \times 2\pi \times Tx\_Sj\_Frequency)$ <p>If <b>Tx Sj Frequency</b> is not defined, then <b>Tx Sj</b> is ignored.</p>
<b>Tx Sj Frequency</b>	<p><b>Tx Sj Frequency</b> is used explicitly in time domain simulation. Otherwise, <b>Tx Sj Frequency</b> is assumed to be much higher than the bandwidth of the clock recovery loop. <b>Tx Sj Frequency</b> is specified in Hz.</p>
<b>Tx DCD</b>	<p>Transmission duty cycle distortion (DCD) is defined as the difference in symbol duration between one symbol and the next. The value is the length of the logic 1 side of the clock cycle, as a percentage of the total cycle length, minus 50% in UI or seconds. The calculation assumes that the transmitter is driven by a half-rate clock, with symbols generated on the rising and falling edges of the clock, and further assumes that the duty cycle of that half-rate clock may not be exactly 50%. <b>Tx DCD</b> affects the stimulus as follows:</p> $Time(n) = n \times UI + Tx\_DCD \times (-1)^n$

---

**Note** If you set the TX jitter parameter in the AMI file, you cannot edit the field in the TX Jitter dialog box. To change the jitter, edit the AMI file.

---

When set to the format DjRj, the IBIS-AMI parameter **Tx\_Jitter** is translated to TX jitter parameters. The jitter parameter includes the value of *DjMax* and *DjMin*. The parameters are used to generate Tx\_Dj and Tx\_Rj:

$$\text{Tx\_Dj} = \frac{DjMax - DjMin}{2}$$

$$\text{Tx\_Rj} = \sigma$$

There is also a shift in the stimulus in time domain analysis:

$$\text{shift} = \frac{DjMax + DjMin}{2}$$

## RX Clock Jitter

The RX clock jitter parameters modify the statistics of the recovered clock. These parameters are used to account for jitter that is not included in either the `clock_times` returned by Rx AMI\_GetWave or the **Rx\_Clock\_Recovery** parameters. These parameters are used by the simulator when postprocessing the results from the model and are not passed to the model. These parameters can be viewed and modified in the RX Jitter dialog box.

In the definition of these jitter parameters, *time* is the ideal clock time in statistical analysis and in time domain analysis when Getwave does not exist. *time* is the `clock_time` from Getwave when it exists for time domain analysis.

Jitter Parameter	Description
<b>Rx Rj</b>	<p>Random Gaussian-distributed jitter (RJ) injected at the receiver. The level is defined as the standard deviation of the RJ, in unit intervals (UI) or seconds. This is sometimes used to model the effects of power supply noise generated by logic switching events in the core of the device. <b>Rx Rj</b> affects the clock times as follows:</p> $\text{clock\_times}(n) = \text{time} + \text{Rx\_Rj} \times \text{randn}$ <p>randn is a function that returns random numbers from the standard normal distribution with mean 0 and variance 1.</p>

Jitter Parameter	Description
<b>Rx Dj</b>	<p>Deterministic jitter (DJ), or the worst case half peak-to-peak variation of the recovered clock, not including the random jitter specified by <b>Rx Rj</b>, <b>Rx Sj</b>, or <b>Rx DCD</b>. <b>Rx Dj</b> includes all deterministic and uncorrelated bounded jitter that is not accounted for by Rx clock_times, <b>Rx Rj</b>, or Rx_Clock_Recovery parameters. <b>Rx Dj</b> affects the clock times as follows:</p> $actual\_time = time + Rx\_Dj \times rand$ <p>rand is a function that returns random numbers from a uniform distribution over the interval (-1, 1).</p>
<b>Rx Sj</b>	<p>Sinusoidal jitter (SJ), or sinusoidally varying delay injected at the receiver. SJ is one half peak-to-peak deviation, in UI or seconds. This is sometimes used to model the effects of power supply noise generated by clock currents in the core of the device. <b>Rx Sj</b> affects the clock times as follows:</p> $actual\_time = time + Rx\_Sj \times \sin(\pi/2 \times rand)$ <p>rand is a function that returns random numbers from a uniform distribution over the interval (-1, 1).</p>
<b>Rx_DCD</b>	<p>Duty cycle distortion (DCD) Difference in symbol duration between one symbol and the next. Assume that the receiver is driven by a half-rate clock, with symbols generated on the rising and falling edges of the clock, and further assume that the duty cycle of that half-rate clock may not be exactly 50%. The value is the length of the logic 1 side of the clock cycle, as a percentage of the total cycle length, minus 50% in unit intervals (UI) or seconds. Rx_DCD affects the clock times as follows:</p> $actual\_time = time + Rx\_DCD \times (-1)^n$

**Note** If you set an RX Jitter parameter in the AMI file, you cannot edit the field in the RX Jitter dialog box. To change the jitter, edit the AMI file.

When set to the format DjRj, the IBIS-AMI parameter **Rx\_Clock\_PDF** is translated to Rx clock recovery jitter parameters. The jitter parameter includes the value of *DjMax* and *DjMin*. The parameters are used to generate Rx\_Clock\_Recovery\_Dj and Rx\_Clock\_Recovery\_Rj:

$$Rx\_Clock\_Recovery\_Dj = \frac{DjMax - DjMin}{2}$$

$$Rx\_Clock\_Recovery\_Rj = \sigma$$

There is also a shift in the stimulus in time domain analysis:

$$Rx\_Clock\_Recovery\_Mean = \frac{DjMax + DjMin}{2}$$

## RX Clock Recovery Jitter

**Parallel Link Designer** models RX clock recovery jitter using these parameters. This data is used when postprocessing the results from the model. Statistical analysis always uses these parameters. Time domain analysis uses these parameters when the model does not return `clock_times` or when `Rx AMI_GetWave` does not exist. These parameters add to any jitter from the RX jitter parameters. Add these parameters to the AMI file using a text editor.

When defining these jitter parameters, *ideal\_time* is defined as the halfway between the median of the eye crossing 0.0 on both sides of the eye.

Jitter Parameter	Description
<b>Rx Clock Recovery Mean</b>	Mean phase of recovered clock with respect to the center of the eye diagram (one half symbol from the median data transition time) in unit intervals (UI) or seconds. <b>Rx Clock Recovery Mean</b> affects the clock times as follows:  $actual\_time = ideal\_time + Rx\_Clock\_Recovery\_Mean$
<b>Rx Clock Recovery Rj</b>	Random Gaussian-distributed jitter (RJ), injected at the clock recovery circuit. The level is defined as the standard deviation of the RJ, in UI or seconds. This is sometimes used to model the effects of power supply noise generated by logic switching events in the core of the device. <b>Rx Clock Recovery Rj</b> affects the clock times as follows:  $actual\_time = ideal\_time + Rx\_Clock\_Recovery\_Rj \times rand$  rand is a function that returns random numbers from the standard normal distribution with mean 0 and variance 1.
<b>Rx Clock Recovery Sj</b>	Sinusoidal jitter (SJ), or sinusoidally varying delay injected at the clock recovery circuit. SJ is one half peak-to-peak deviation, in UI or seconds and a modulation frequency. This is sometimes used to model the effects of power supply noise generated by clock currents in the core of the device. <b>Rx Clock Recovery Sj</b> affects the clock times as follows:  $actual\_time = ideal\_time + Rx\_Clock\_Recovery\_Sj \times \sin(\pi/2 \times rand)$  rand is a function that returns random numbers from a uniform distribution over the interval (-1, 1).
<b>Rx Clock Recovery DCD</b>	Duty cycle distortion (DCD) is defined as half the peak-to-peak variation, in UI or seconds, of a clock duty cycle distortion exhibited by the recovered clock. <b>Rx Clock Recovery DCD</b> affects the clock times as follows:  $actual\_time = ideal\_time + Rx\_Clock\_Recovery\_DCD \times (-1)^n$

## RX Noise



RX noise parameters modify the statistics associated with the data input to the sampling latch of the receiver. This data is used by **Parallel Link Designer** when postprocessing the results from the model; the budget values specified by the parameters are not passed directly to the model itself.

Noise Parameter	Description
<b>Rx Noise</b>	<p>Standard deviation, in volts into a 100 ohm differential load, of a set of independent samples of a Gaussian noise process measured at the sampling latch of a receiver. <b>Rx Noise</b> is Gaussian distributed amplitude noise at the receiver decision point. It is assumed that the samples of this noise process are independent of each other in what is often called an additive white Gaussian noise (AWGN) process. Typically, this noise is generated by shot noise in the receive amplifier. It is seldom if ever accurate to model crosstalk or power supply noise as a Gaussian distributed process. In order to supply an accurate value for this parameter, it might be necessary to account for the gain of the receive amplifier and any analog equalization inserted before the receiver decision point. <b>Rx Noise</b> affects the clock times as follows:</p> $wave(t) = wave(t) + Rx\_Noise \times randn$ <p>randn is a function that returns random numbers from the standard normal distribution with mean 0 and variance 1.</p> <p><b>Note</b> <b>Rx GaussianNoise</b> replaces the <b>Rx Noise</b> parameter in the IBIS specification (version 7.0). However, you can use either.</p>
<b>Rx Uniform Noise</b>	Worst-case half peak-to-peak variation, in volts, of a bounded uniform random process. This is added to the signal measured at the sampling latch of a receiver.
<b>Rx Noise Pad</b>	<p>Spectral density of the AWGN at the input to a receiver buffer in volts/sqrt(Hz). Ignored for a driver.</p> <p>Add this parameter to the AMI file using a text editor.</p>

**Note** If you set an RX Noise parameter in the AMI file, you cannot edit the field in the RX Jitter dialog box. To change the jitter, edit the AMI file.

## Set Jitter and Noise in AMI File

You can set jitter and noise parameters in multiple ways depending on the models and the type of simulation. The table shows sample AMI file entries.


Parameter Type	Sample Entry and Description
Value	<p>(Tx_Rj (Usage Info) (Type UI) (Value 0.01) (Description "TX Random Jitter in UI"))</p> <p>The Transfer Net Properties dialog box shows the values, but editing is disabled to indicate that the value is controlled by the AMI file.</p>

Parameter Type	Sample Entry and Description
Corner	<p>(Tx_Rj (Usage Info)(Corner 0.005 0.006 0.004)(Type UI) (Description "TX Random Jitter in UI"))</p> <p>The value used in the analysis is based on the IC process corner selected in the GUI. The Transfer Net Properties dialog box shows &lt;AMI Corner&gt; in the cell for parameters defined in the AMI file as Corner.</p>
Range	<p>(Tx_Rj (Usage Info)(Format Range 0.0 0.0 0.5)(Type UI) (Default 0) (Description "Tx Random Jitter in UI"))</p> <p>The parameter will appear in the solution space table and can be swept. The Transfer Net Properties dialog box shows &lt;Sweep&gt; in the cell for parameters defined in the AMI file as Range.</p>

## Model Jitter and Noise While Designing Serial Link

You can model three major sources of jitter using the **Serial Link Designer**: TX clock jitter, RX clock jitter, and RX clock recovery jitter. You can also add RX noise.


Jitter and noise affect the bit error rate (BER) of a serial channel. Some sources of jitter affect the data bathtub curve and some affect the clock PDF (probability distribution function). The data bathtub and clock PDF are used in the BER calculation, so changing either changes BER.

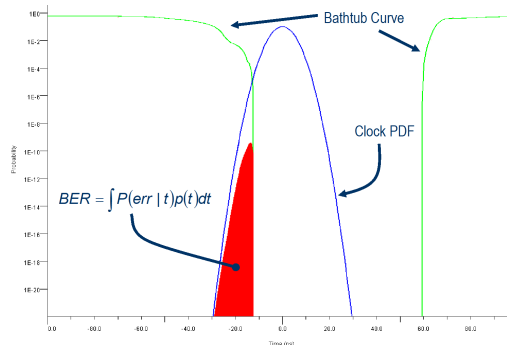

TX jitter and RX noise always change the data eye and data bathtub. RX jitter and RX clock recovery jitter are handled differently depending on how you set the **Clock Mode** parameter.

- *Normal* — RX clock recovery jitter affects the clock PDF.
- *Clocked* — RX clock recovery jitter affects the data eye and bathtub.
- *Convolved* — RX clock recovery jitter affects the data eye and bathtub.

To access jitter and noise parameters, first select a transfer net sheet by selecting **Setup > TNet Properties**. Then open the Designator Element Properties panel by selecting **Properties**. Finally, open the parameters by selecting **Tx Jitter** or **Rx Jitter**. These dialogs are also accessible by double-clicking on any of the designators in the pre-layout analysis tab.

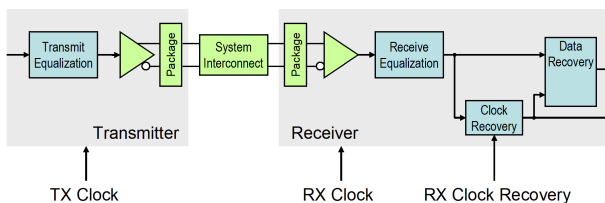

### TX Clock Jitter

The app models the TX clock jitter using five parameters. The parameters modify the Tx stimulus (Time Domain analysis) or are added in postprocessing (Statistical Analysis). View and modify these parameters in the TX Jitter dialog box, accessible through the Designator Element Properties dialog box.

TX jitter always changes the data eye and data bathtub.

Jitter Parameter	Description
<b>Tx Rj</b>	<p>Random Gaussian-distributed jitter (RJ) injected at the transmitter. The level is defined as the standard deviation of the RJ, in unit intervals (UI) or seconds. This is sometimes used to model the effects of power supply noise generated by logic switching events in the core of the device. <b>Tx Rj</b> affects the stimulus as follows:</p> $Time(n) = n \times UI + Tx\_Rj \times randn$ <p><i>Time(n)</i> is the time of edge <i>n</i>.</p> <p><i>randn</i> is a function that returns random numbers from the standard normal distribution with mean 0 and variance 1.</p>
<b>Tx Dj</b>	<p>Deterministic jitter (DJ) injected upstream of the link. The level is defined as peak DJ, in UI or seconds. <b>Tx Dj</b> accounts for all deterministic and uncorrelated bounded jitter that is not accounted for by <b>Tx DCD</b> and <b>Tx Sj</b>. DJ is applicable only on the transmit side. The effects of intersymbol interference in the transmission channel are accounted for directly in the analysis or simulation. <b>Tx Dj</b> affects the stimulus as follows:</p> $Time(n) = n \times UI + Tx\_Dj \times rand$ <p><i>rand</i> is a function that returns random numbers from a uniform distribution over the interval (-1, 1).</p>
<b>Tx Sj</b>	<p>Sinusoidal jitter (SJ) or sinusoidally varying delay injected at the transmitter. SJ is one half peak-to-peak deviation, in UI or seconds. This is sometimes used to model the effects of power supply noise generated by clock currents in the core of the device. <b>Tx Sj</b> affects the stimulus as follows:</p> $Time(n) = n \times UI + Tx\_Sj \times \sin(n \times UI \times 2\pi \times Tx\_Sj\_Frequency)$ <p>If <b>Tx Sj Frequency</b> is not defined, then <b>Tx Sj</b> is ignored.</p>
<b>Tx Sj Frequency</b>	<p><b>Tx Sj Frequency</b> is used explicitly in time domain simulation. Otherwise, <b>Tx Sj Frequency</b> is assumed to be much higher than the bandwidth of the clock recovery loop. <b>Tx Sj Frequency</b> is specified in Hz.</p>
<b>Tx DCD</b>	<p>Transmission duty cycle distortion (DCD) is defined as the difference in symbol duration between one symbol and the next. The value is the length of the logic 1 side of the clock cycle, as a percentage of the total cycle length, minus 50% in UI or seconds. The calculation assumes that the transmitter is driven by a half-rate clock, with symbols generated on the rising and falling edges of the clock, and further assumes that the duty cycle of that half-rate clock may not be exactly 50%. <b>Tx DCD</b> affects the stimulus as follows:</p> $Time(n) = n \times UI + Tx\_DCD \times (-1)^n$

---

**Note** If you set a TX jitter parameter in the AMI file, you cannot edit the field in the TX Jitter dialog box. To change the jitter, edit the AMI file.

---

When set to the format DjRj, the IBIS-AMI parameter **Tx\_Jitter** is translated to TX jitter parameters. The jitter parameter includes the value of *DjMax* and *DjMin*. The parameters are used to generate Tx\_Dj and Tx\_Rj:

$$\text{Tx\_Dj} = \frac{DjMax - DjMin}{2}$$

$$\text{Tx\_Rj} = \sigma$$

There is also a shift in the stimulus in time domain analysis:

$$\text{shift} = \frac{DjMax + DjMin}{2}$$

## RX Clock Jitter

The RX clock jitter parameters modify the statistics of the recovered clock. These parameters are used to account for jitter that is not included in either the `clock_times` returned by Rx AMI\_GetWave or the **Rx\_Clock\_Recovery** parameters. These parameters are used by the simulator when postprocessing the results from the model and are not passed to the model. These parameters can be viewed and modified in the RX Jitter dialog box.

In the definition of these jitter parameters, *time* is the ideal clock time in statistical analysis and in time domain analysis when Getwave does not exist. *time* is the `clock_time` from Getwave when it exists for time domain analysis.

Jitter Parameter	Description
<b>Rx Rj</b>	<p>Random Gaussian-distributed jitter (RJ) injected at the receiver. The level is defined as the standard deviation of the RJ, in unit intervals (UI) or seconds. This is sometimes used to model the effects of power supply noise generated by logic switching events in the core of the device. <b>Rx Rj</b> affects the clock times as follows:</p> $\text{clock\_times}(n) = \text{time} + \text{Rx\_Rj} \times \text{randn}$ <p>randn is a function that returns random numbers from the standard normal distribution with mean 0 and variance 1.</p>

Jitter Parameter	Description
<b>Rx Dj</b>	<p>Deterministic jitter (DJ), or the worst case half peak-to-peak variation of the recovered clock, not including the random jitter specified by <b>Rx Rj</b>, <b>Rx Sj</b>, or <b>Rx DCD</b>. <b>Rx Dj</b> includes all deterministic and uncorrelated bounded jitter that is not accounted for by Rx clock_times, <b>Rx Rj</b>, or Rx_Clock_Recovery parameters. <b>Rx Dj</b> affects the clock times as follows:</p> $actual\_time = time + Rx\_Dj \times rand$ <p>rand is a function that returns random numbers from a uniform distribution over the interval (-1, 1).</p>
<b>Rx Sj</b>	<p>Sinusoidal jitter (SJ), or sinusoidally varying delay injected at the receiver. SJ is one half peak-to-peak deviation, in UI or seconds. This is sometimes used to model the effects of power supply noise generated by clock currents in the core of the device. <b>Rx Sj</b> affects the clock times as follows:</p> $actual\_time = time + Rx\_Sj \times \sin(\pi/2 \times rand)$ <p>rand is a function that returns random numbers from a uniform distribution over the interval (-1, 1).</p>
<b>Rx_DCD</b>	<p>Duty cycle distortion (DCD) Difference in symbol duration between one symbol and the next. Assume that the receiver is driven by a half-rate clock, with symbols generated on the rising and falling edges of the clock, and further assume that the duty cycle of that half-rate clock may not be exactly 50%. The value is the length of the logic 1 side of the clock cycle, as a percentage of the total cycle length, minus 50% in unit intervals (UI) or seconds. Rx_DCD affects the clock times as follows:</p> $actual\_time = time + Rx\_DCD \times (-1)^n$

**Note** If you set an RX Jitter parameter in the AMI file, you cannot the field in the RX Jitter dialog box. To change the jitter, edit the AMI file.

When set to the format DjRj, the IBIS-AMI parameter **Rx\_Clock\_PDF** is translated to Rx clock recovery jitter parameters. The jitter parameter includes the value of *DjMax* and *DjMin*. The parameters are used to generate Rx\_Clock\_Recovery\_Dj and Rx\_Clock\_Recovery\_Rj:

$$Rx\_Clock\_Recovery\_Dj = \frac{DjMax - DjMin}{2}$$

$$Rx\_Clock\_Recovery\_Rj = \sigma$$

There is also a shift in the stimulus in time domain analysis:

$$Rx\_Clock\_Recovery\_Mean = \frac{DjMax + DjMin}{2}$$

## RX Clock Recovery Jitter

**Serial Link Designer** models RX clock recovery jitter using these parameters. This data is used when postprocessing the results from the model. Statistical analysis always uses these parameters. Time domain analysis uses these parameters when the model does not return clock\_times, or when Rx AMI\_GetWave does not exist. These parameters add to any jitter from the RX jitter parameters. Add these parameters to the AMI file using a text editor.

While defining these jitter parameters, *ideal\_time* is defined as the halfway between the median of the eye crossing 0.0 on both sides of the eye.

Jitter Parameter	Description
<b>Rx Clock Recovery Mean</b>	Mean phase of recovered clock with respect to the center of the eye diagram (one half symbol from the median data transition time) in unit intervals (UI) or seconds. <b>Rx Clock Recovery Mean</b> affects the clock times as follows:  $actual\_time = ideal\_time + Rx\_Clock\_Recovery\_Mean$
<b>Rx Clock Recovery Rj</b>	Random Gaussian-distributed jitter (RJ), injected at the clock recovery circuit. The level is defined as the standard deviation of the RJ, in UI or seconds. This is sometimes used to model the effects of power supply noise generated by logic switching events in the core of the device. <b>Rx Clock Recovery Rj</b> affects the clock times as follows:  $actual\_time = ideal\_time + Rx\_Clock\_Recovery\_Rj \times rand$  rand is a function that returns random numbers from the standard normal distribution with mean 0 and variance 1.
<b>Rx Clock Recovery Sj</b>	Sinusoidal jitter (SJ), or sinusoidally varying delay injected at the clock recovery circuit. SJ is one half peak-to-peak deviation, in UI or seconds and a modulation frequency. This is sometimes used to model the effects of power supply noise generated by clock currents in the core of the device. <b>Rx Clock Recovery Sj</b> affects the clock times as follows:  $actual\_time = ideal\_time + Rx\_Clock\_Recovery\_Sj \times \sin(\pi/2 \times rand)$  rand is a function that returns random numbers from a uniform distribution over the interval (-1, 1).
<b>Rx Clock Recovery DCD</b>	Duty cycle distortion (DCD) is defined as half the peak-to-peak variation, in UI or seconds, of a clock duty cycle distortion exhibited by the recovered clock. <b>Rx Clock Recovery DCD</b> affects the clock times as follows:  $actual\_time = ideal\_time + Rx\_Clock\_Recovery\_DCD \times (-1)^n$

## RX Noise

RX noise parameters modify the statistics associated with the data input to the sampling latch of the receiver. This data is used by **Serial Link Designer** when postprocessing the results from the model; the budget values specified by the parameters are not passed directly to the model itself.

Noise Parameter	Description
<b>Rx Noise</b>	<p>Standard deviation, in volts into a 100 ohm differential load, of a set of independent samples of a Gaussian noise process measured at the sampling latch of a receiver. <b>Rx Noise</b> is Gaussian distributed amplitude noise at the receiver decision point. It is assumed that the samples of this noise process are independent of each other in what is often called an additive white Gaussian noise (AWGN) process. Typically, this noise would be generated by shot noise in the receive amplifier. It is seldom if ever accurate to model crosstalk or power supply noise as a Gaussian distributed process. In order to supply an accurate value for this parameter, it might be necessary to account for the gain of the receive amplifier and any analog equalization inserted before the receiver decision point. <b>Rx Noise</b> affects the clock times as follows:</p> $wave(t) = wave(t) + Rx\_Noise \times randn$ <p>randn is a function that returns random numbers from the standard normal distribution with mean 0 and variance 1.</p> <p><b>Note</b> <b>Rx GaussianNoise</b> replaces the <b>Rx Noise</b> parameter in the IBIS specification (version 7.0). However, you can use either.</p>
<b>Rx Uniform Noise</b>	Worst-case half peak-to-peak variation, in volts, of a bounded uniform random process. This is added to the signal measured at the sampling latch of a receiver.
<b>Rx Noise Pad</b>	<p>Spectral density of the AWGN at the input to a receiver buffer in volts/sqrt(Hz). Ignored for a driver.</p> <p>This parameter must be added to the AMI file using a text editor.</p>

**Note** If you set an RX Noise parameter in the AMI file, you cannot edit the field in the RX Jitter dialog box. To change the jitter, edit the AMI file.

## Set Jitter and Noise in AMI File

You can set jitter and noise parameters in multiple ways depending on the models and the type of simulation. The table shows sample AMI file entries.

Parameter Type	Sample Entry and Description
Value	<p>(Tx_Rj (Usage Info) (Type UI) (Value 0.01) (Description "TX Random Jitter in UI"))</p> <p>The Transfer Net Properties dialog box shows this value, but editing is disabled to indicate that the value is controlled by the AMI file.</p>



Parameter Type	Sample Entry and Description
Corner	<p>(Tx_Rj (Usage Info)(Corner 0.005 0.006 0.004)(Type UI) (Description "TX Random Jitter in UI"))</p> <p>The value used in the analysis is based on the IC process corner selected in the GUI. The Transfer Net Properties dialog box shows the &lt;AMI Corner&gt; in the cell for parameters defined in the AMI file as Corner.</p>
Range	<p>(Tx_Rj (Usage Info)(Format Range 0.0 0.0 0.5)(Type UI) (Default 0) (Description "Tx Random Jitter in UI"))</p> <p>The parameter will appear in the solution space table and can be swept. The Transfer Net Properties dialog box shows the &lt;Sweep&gt; in the cell for parameters defined in the AMI file as Range.</p>



# Industry Standard Examples

---

- “10GBASE-KR4 Compliance Kit” on page 12-3
- “100GBASE-KR4 Compliance Kit” on page 12-5
- “CAUI-4 Chip-to-Chip Compliance Kit” on page 12-7
- “CAUI-4 Chip-to-Module Compliance Kit” on page 12-9
- “CAUI/XLAUI Chip-to-Chip Compliance Kit” on page 12-11
- “CAUI/XLAUI Chip-To-Module Compliance Kit” on page 12-13
- “CEI 25G-LR Compliance Kit” on page 12-15
- “CEI 28G-SR Compliance Kit” on page 12-17
- “CEI 28G-VSR Compliance Kit” on page 12-19
- “CEI 56G-LR Compliance Kit” on page 12-21
- “CEI 56G-VSR Compliance Kit” on page 12-23
- “Fibre Channel FC-PI-6 Compliance Kit” on page 12-25
- “HMC 15G-SR Compliance Kit” on page 12-27
- “HMC 30G-VSR Compliance Kit” on page 12-29
- “MIPI D-PHY Serial Link Compliance Kit” on page 12-31
- “MIPI M-PHY Compliance Kit” on page 12-33
- “PCIe-2 Compliance Kit” on page 12-36
- “PCIe-3 Compliance Kit” on page 12-38
- “PCIe-4 Compliance Kit” on page 12-40
- “PCIe-5 Compliance Kit” on page 12-42
- “QSFP+ Compliance Kit” on page 12-44
- “SAS 3.0 Compliance Kit” on page 12-46
- “SATA 3.0 Compliance Kit” on page 12-48
- “SFP+ Compliance Kit” on page 12-50
- “USB 3.0 Compliance Kit” on page 12-52
- “USB 3.1 Compliance Kit” on page 12-54
- “XAUI Compliance Kit” on page 12-56
- “Registered DDR2 Architectural Kit” on page 12-58
- “Unbuffered DDR2 Architectural Kit” on page 12-59
- “Unbuffered DDR2 with PLL Architectural Kit” on page 12-60
- “Registered DDR3 Architectural Kit” on page 12-62
- “Unbuffered DDR3 Architectural Kit” on page 12-64
- “Unbuffered DDR3L Architectural Kit” on page 12-66
- “DDR4 Implementation Kit for JEDEC Raw Card B” on page 12-68
- “DDR4 Memory Down Implementation Kit” on page 12-71

- “DDR5 Implementation Kit” on page 12-73
- “GDDR5 x32 Implementation Kit” on page 12-75
- “GDDR6 x32 Architectural Kit” on page 12-77
- “Low-Power DDR4 Architectural Kit” on page 12-80
- “Low-Power DDR5 Architectural Kit” on page 12-82
- “MIPI D-PHY Parallel Link Compliance Kit” on page 12-84
- “CIO RLDRAM II Architectural Kit” on page 12-86
- “SIO RLDRAM II Architectural Kit” on page 12-88
- “RLDRAM III Architectural Kit” on page 12-90
- “Run Parallel Simulations in Signal Integrity Toolbox” on page 12-92
- “CEI 112G-VSR Compliance Kit ” on page 12-99

# 10GBASE-KR4 Compliance Kit

Characterize and validate the performance of a 10GBASE-KR4 channel design.

10GBASE-KR is a 10 Gb/s data rate baseband specification, with a backplane medium, using a 64B/66B coding scheme, in a four-lane configuration. The IEEE 802.3-2008 Annex 69B provides guidelines for a backplane design where meeting or exceeding the loss and crosstalk masks provides a high confidence of a successful channel design. However, if a channel does not meet the masks, it does not mean that the backplane will not operate at a specified bit error rate. It means that these channels need more analysis through simulation. It is possible that transmitter and receiver equalization can overcome loss or crosstalk deficiencies that do not meet the appropriate mask given.


This kit is designed for analysis of a backplane design with two mated connectors as given in the Annex 69B section of the 10GBASE-KR specification. The kit also includes sheets containing the backplane and connectors with two plug-in line cards attached. IBIS-AMI TX and RX models are provided with representative package models. Widebus sheets in this kit are included for crosstalk simulations only.

This kit enables you to insert a channel design and test it against the supplied masks to determine if the channel has a high confidence of success. Otherwise further investigation and simulation will need to be performed to determine if the channel meets the target bit-error rate.

## Open 10GBASE-KR4 Kit

Open the 10GBASE-KR4 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("10GBASE_KR");
```

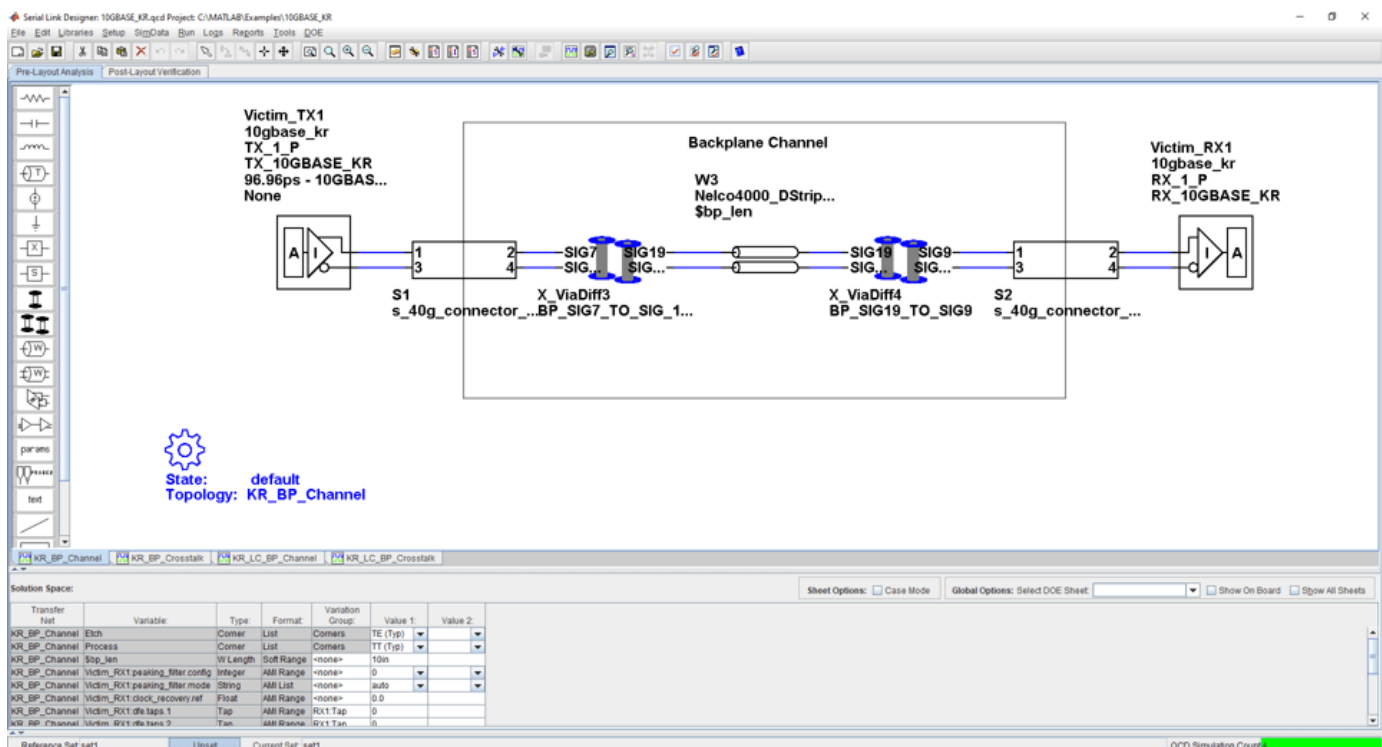

### Kit Overview

- Project Name: 10GBASE\_KR
- Interface Name: 10GBASE\_KR
- Target Operating Frequency: 10.3125 Gb/s (UI = 96.967 ps)

This kit defines one schematic set.

- **10GBASE-KR Sheets** - backplane only (single channel and widebus crosstalk sheets) and one backplane with 2 line cards connected (single channel and widebus crosstalk sheets)

For more information about the 10GBASE-KR4 channel compliance schematics, transfer net properties, and compliance rules, refer to the document 10GBASE\_KR4.pdf that is attached to this example as a supporting file.

### References

[1] IEEE Std 802.3-2008 (Annex 68B). Module 10GBASE-KR parameters.

### See Also

**Serial Link Designer**

## 100GBASE-KR4 Compliance Kit

Characterize and validate the performance of a 100GBASE-KR4 channel design.

100GBASE-KR is a 100 Gb/s data rate baseband specification, with a backplane medium, using a 64B/66B coding scheme, in a four-lane configuration. The IEEE 802.3bj specification Annex 93A defines methods for compliance of electrical channels operating at 25.78 Gb/s. Compliance of a channel to this specification is determined by its channel operating margin (COM). The COM calculation that is defined in the specification is based on many factors, including insertion loss, return loss, and cross-coupling. The transmitter and receiver equalization and package models are also taken into account.


This kit is designed for analysis of a 25.78 Gb/s channel based on 802.3bj compliance. The kit provides a test environment for designing and analyzing channels and their performance prior to COM testing. You can also run COM on channel designs. The kit implements most of the characteristics and parameters for transmitters, receivers and channels outlined in Section 93 of 802.3bj-2014.pdf.

The interface contains five schematic sheets. One sheet is used to test channel characteristics such as insertion loss and return loss. Also included are individual sheets for testing transmitter and receiver characteristics. Lastly, two sheets are used for statistical and time domain analysis on single and coupled channels. TX and RX IBIS-AMI models are provided that implement the equalization requirements of COM. Package models were created from transmission lines and package-to-board capacitance to represent lengths of 12 mm and 30 mm.

### Open 100GBASE-KR4 Kit

Open the 100GBASE-KR4 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("100GBASE_KR");
```

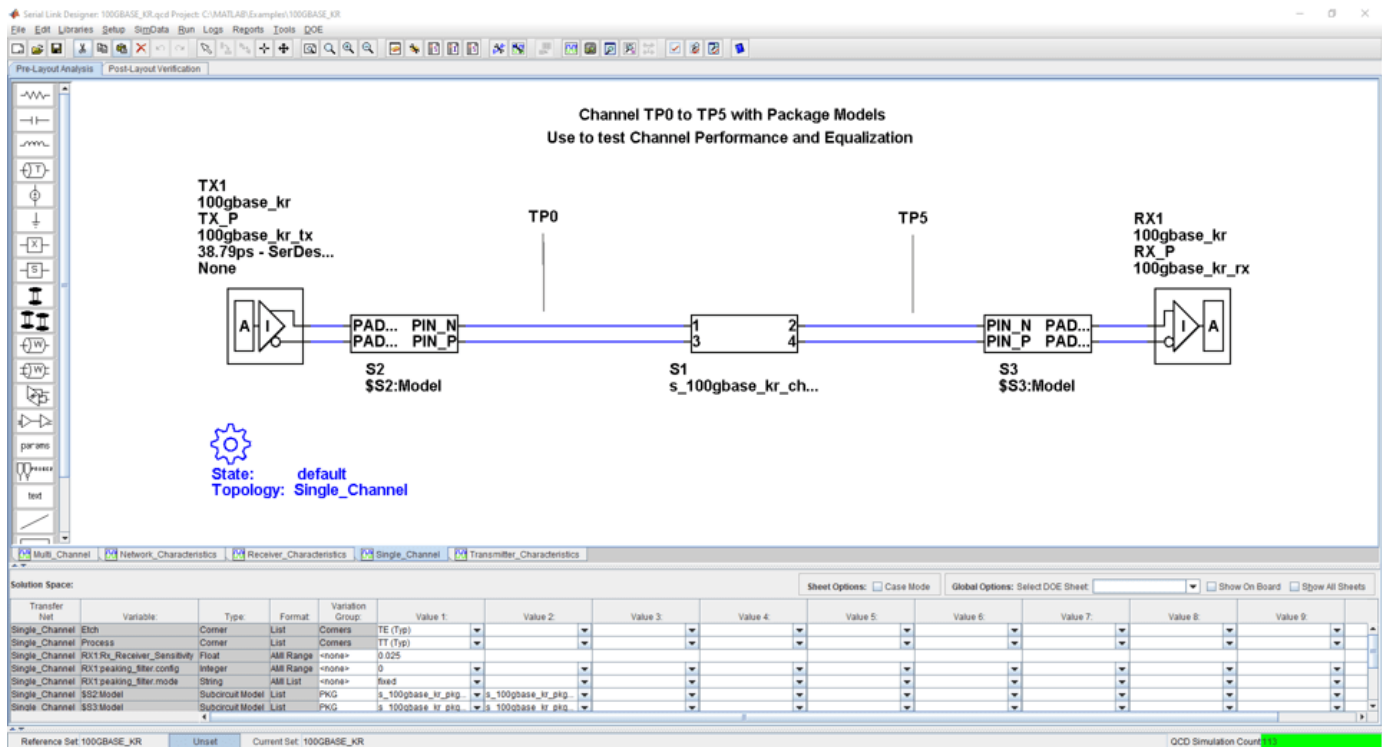

### Kit Overview

- Project Name: 100GBASE\_KR
- Interface Name: 100GBASE\_KR
- Target Operating Frequency: 25.78 Gb/s (UI = 38.79 ps)

This kit defines one schematic set.

- **100GBASE\_KR** - Network\_Characteristics, Single\_Channel and Multi\_Channel

For more information about the 100GBASE-KR4 channel compliance schematics, transfer net properties, and compliance rules, refer to the document 100GBASE\_KR4.pdf that is attached to this example as a supporting file.

### References

[1] IEEE Standard for Ethernet, Amendment 2: Physical Layer specifications and Management Parameters for 100Gb/s Operation Over Backplanes and Copper cables. 802.3bj-2014.pdf.

### See Also

Serial Link Designer



# CAUI-4 Chip-to-Chip Compliance Kit

Test the compliance of simulation models and topologies to the CAUI-4 chip-to-chip (C2C) specification.

This kit is designed for a chip-to-chip interface between system devices with up to 25 inches of PCB etch and one connector. The kit includes IBIS-AMI TX and RX models for reference and compliance testing. This kit enables you to insert a channel design and test for compliance as specified in the CAUI-4 C2C specification (802.3bm-2015, Annex 83D).

## Open CAUI-4 C2C Kit

Open the CAUI-4 C2C kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("CAUI_4_C2C_83D");
```

The screenshot displays the Serial Link Designer application window. The main workspace shows a schematic titled "CAUI-4 Single Channel". On the left, a transmitter block is labeled "TX1 caui4\_c2c\_models TX\_P caui4\_c2c\_tx 38.788ps - SerDe... 64B66B". On the right, a receiver block is labeled "RX1 caui4\_c2c\_models RX\_P caui4\_c2c\_rx". A central channel block is labeled "S1 s\_CAUI4\_C2C\_Ref...". The state is set to "default" and the topology is "CAUI4\_Single\_Channel". Below the schematic, a "Selection Space" table lists various parameters and their values.

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2
CAUI4_Single_Channel	Etch	Corner	List	Corners	TE (Typ)	
CAUI4_Single_Channel	Process	Corner	List	Corners	TT (Typ)	
CAUI4_Single_Channel	RX1Rt	Float	AMB Range	<none>	50	
CAUI4_Single_Channel	RX1 peaking_filter.config	Integer	AMB Range	<none>	0	
CAUI4_Single_Channel	RX1 peaking_filter.mode	String	AMB List	<none>	auto	
CAUI4_Single_Channel	RX1 #number_n_tag	Integer	AMB Range	<none>	7	
CAUI4_Single_Channel	RX1 #n.mode	String	AMB List	<none>	auto	
CAUI4_Single_Channel	TX1Tt	Float	AMB Range	<none>	150e-12	

## Kit Overview

- Project Name: CAUI4\_C2C\_83D
- Interface Name: CAUI4\_C2C\_83D
- Target Operating Frequency: 25.781 Gb/s (UI = 38.788 ps)

For more information about the CAUI-4 C2C channel compliance schematics, transfer net properties and compliance rules, refer to the document CAUI4\_C2C.pdf that is attached to this example as a supporting file.

**References**

[1] IEEE 802.3bj-2014 Section 93 and Annex 93A (COM). 802.3bj-2014.pdf.

[2] IEEE 802.3bm-2015 Annex 83D. 802.3bm-2015.pdf.

**See Also**

**Serial Link Designer**

# CAUI-4 Chip-to-Module Compliance Kit

Test the compliance of simulation models and topologies to the CAUI-4 chip-to-module (C2M) specification.

This kit is designed for analysis of a host board and an optical module. The channel consists of a host board connected with a mated connector to a module board. The channels between the transmitting and receiving devices operate at 25.718 Gb/s. The kit has sheets for network characterization to analyze the passive channels (insertion and return). There are single channel sheets to analyze the effects of inter-symbol interference on performance. You can optimize TX and RX equalization and test compliance with a stressed eye. Multi-channel sheets represent the four 25 Gb/s channels to determine the effects of crosstalk on channel eye margin.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

## Open CAUI-4 C2M Kit

Open the CAUI-4 C2M kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("CAUI_4_C2M_83E_QSFP28");
```

The screenshot shows the Serial Link Designer application interface. The main workspace displays a network characterization setup for CAUI-4 C2M. The setup includes a Host Tx block (caui4\_c2m\_models, TX\_P, caui4\_c2m\_tx, 38.788ps - SerDe..., 64B66B) connected to a Module Rx block (caui4\_c2m\_models, RX\_ref\_P, caui4\_c2m\_ideal...). The channel is labeled S2 s\_CAUI4\_C2M\_Refe... and conforms to Reference Channel Mask Fig. 83E-2. The state is default and the topology is Full\_Channel\_Network\_Characterization.

The bottom panel shows the Solution Space table:

Transfer	Variable	Type	Format	Variation	Value 1	Value 2
Full_Channel_Network_Characterization	Etch	Corner	List	Comers	TE (T)pt	
Full_Channel_Network_Characterization	Process	Corner	List	Comers	TT (T)pt	
Full_Channel_Network_Characterization	Host_TxTif	Float	AMR Range	none	10e-12	
Full_Channel_Network_Characterization	Host_Tx_Sl_Frequency	Float	AMR Range	none	50E+6	
Full_Channel_Network_Characterization	Host_Tx_Sl	UI	AMR Range	none	0	
Full_Channel_Network_Characterization	Host_Tx_Dj	UI	AMR Range	none	0	
Full_Channel_Network_Characterization	Host_TxTj_Rj	UI	AMR Range	none	0	
Full_Channel_Network_Characterization	Host_TxTan_Slter..t	Tan	AMR Range	Host_TxTan..0.0		

### **Kit Overview**

- Project Name: CAUI\_4\_C2M\_83E\_QSFP28
- Interface Name: CAUI4\_C2M\_83E
- Operating Frequency: 25.78 Gb/s (UI = 38.788 ps)

Schematic sheets are included for testing a CAUI-4 C2M channel with mated connector to a module board. The masks provided in this kit are given in the 28.05 Gb/s CAUI-4 specification.

For more information about the CAUI-4 C2M channel compliance schematics, transfer net properties and compliance rules, refer to the document CAUI4\_C2M.pdf that is attached to this example as a supporting file.

### **References**

[1] IEEE 802.3bm-2015 Specification. Annex 83E. 802.3bm-2015.pdf.

[2] IEEE 802.3bj-2014 Specification. Annex 92. 802.3bj-2014.pdf.

### **See Also**

**Serial Link Designer**

# CAUI/XLAUI Chip-to-Chip Compliance Kit

Test the compliance of simulation models and topologies to the CAUI/XLAUI chip-to-chip (C2C) specification.

The 802.3ba Annex 83A specification defines physical layer compliance for a CAUI (100 Gb/s) or XLAUI (40 Gb/s) C2C interface.

This kit is designed for compliance of both host and boards. The kit includes IBIS-AMI TX and RX models for reference and compliance testing. You can insert a channel design and test for compliance as specified in the CAUI/XLAUI specification.

## Open CAUI/XLAUI C2C Kit

Open the CAUI/XLAUI C2C kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("CAUI_XLAUI_C2C_83A");
```

Serial Link Designer: caui\_xlaui\_83a\_c2c.qcd Project: C:\MATLAB\Examples\CAUI\_XLAUI\_C2C\_83A

Test Channel Network Characteristics Here  
No compliance load included in TX/RX

TX1  
caui\_c2c\_complia...  
TX1\_P  
caui\_ref\_tx\_c2c  
96.97ps - SerDes...  
64B66B

RX1  
caui\_c2c\_complia...  
RX1\_REF\_P  
reference\_load\_r...

S1  
s\_caul\_reference...

State: default  
Topology: CAUI\_Single\_Channel\_Network\_Compliance

Transfer List	Variable	Type	Format	Variation Group	Value 1	Value 2
CAUI_Single_Channel_Network_Compliance	Elch	Corner	List	Corners	TE (Typ)	
CAUI_Single_Channel_Network_Compliance	Process	Corner	List	Corners	TT (Typ)	
CAUI_Single_Channel_Network_Compliance	TX1-Trf	Float	AMI Range	<none>	24e-12	
CAUI_Single_Channel_Network_Compliance	TX1-Tr_Dj	UI	AMI Range	<none>	0	
CAUI_Single_Channel_Network_Compliance	TX1-Tr_Rj	UI	AMI Range	<none>	0	
CAUI_Single_Channel_Network_Compliance	TX1r_swing	Float	AMI Range	<none>	0.73	
CAUI_Single_Channel_Network_Compliance	TX1tap_Slter-1	Tap	AMI List	TX1 Tap	0	
CAUI_Single_Channel_Network_Compliance	TX1tan_Slter-0	Tan	AMI Range	TX1 Tan	1.0	

## Kit Overview

- Project Name: CAUI\_XLAUI\_83A
- Interface Name: CAUI\_XLAUI\_83A
- Target Operating Frequency: 10.3125 Gb/s (UI = 96.97 ps)

The CAUI/XLAUI C2C kit defines one schematic set.

- `c2c_compliance` — Used for all compliance testing

For more information about the CAUI/XLAUI C2C channel compliance schematics, transfer net properties, and compliance rules, refer to the document `CAUI_XLAUI_C2C.pdf` that is attached to this example as a supporting file.

### References

[1] IEEE 802.3ba-2010 Annex 83A. `802.3ba-2010.pdf`.

### See Also

**Serial Link Designer**

# CAUI/XLAUI Chip-To-Module Compliance Kit

Test the compliance of simulation models and topologies to the CAUI/XLAUI chip-to-module (C2M) specification.

802.3ba Annex 83B specification defines physical layer compliance for a CAUI (100 Gb/s) or XLAUI (40 Gb/s) C2M interface. Host and module board compliance are both detailed including the channel, transmitter and receiver electrical requirements.

This kit is designed for compliance of both host and boards. The kit includes IBIS-AMI TX and RX models for reference and compliance testing. You can insert a channel design and test for compliance as specified in the CAUI/XLAUI specification.

## Open CAUI/XLAUI C2M Kit

Open the CAUI/XLAUI C2M kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("CAUI_XLAUI_C2M_83B");
```

Use This Sheet to Test Host Channel Network Characteristics  
Section 83B.1 Host Channel Insertion Loss Mask SDD21

Host TX  
caui\_c2m\_complia...  
TX1\_P  
caui\_host\_tx\_c2m  
96.967ps - SerDe...  
64B66B

Host Channel Under Test

RX Load  
caui\_c2m\_complia...  
RX1\_REF\_P  
reference\_load\_r...

State: default  
Topology: Host\_Channel\_Compliance

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2
Host_Channel_Compliance	Elkh	Corner	List	Corners	TE (Typ)	
Host_Channel_Compliance	Process	Corner	List	Corners	TT (Typ)	
Host_Channel_Compliance	Host_Tx_Tf	Float	AMI Range	<none>	20e-12	
Host_Channel_Compliance	Host_Tx_S_Frequency	Float	AMI Range	<none>	40e+8	
Host_Channel_Compliance	Host_Tx_Tx_Sj	UI	AMI Range	<none>	0	
Host_Channel_Compliance	Host_Tx_Tx_Dj	UI	AMI Range	<none>	0	
Host_Channel_Compliance	Host_Tx_Tx_Rj	UI	AMI Range	<none>	0	
Host_Channel_Compliance	Host_Tx_Scales	Float	AMI Range	<none>	0.6	

## Kit Overview

- Project Name: CAUI\_XLAUI\_C2M\_83B
- Interface Name: CAUI\_XLAUI\_C2M\_83B
- Target Operating Frequency: 10.3125 Gb/s (UI = 96.97 ps)

The CAUI/XLAUI C2M kit defines four schematic sets.

- Module\_Board — Used for module compliance testing
- Host\_Board — Used for host compliance testing
- HCB\_MCB\_Characterization — Used for analyzing HCB and MCB compliance
- All\_Project\_Schematics — Set of all project schematics

For more information about the CAUI/XLAUI C2M channel compliance schematics, transfer net properties, and compliance rules, refer to the document CAUI\_XLAUI\_C2M.pdf that is attached to this example as a supporting file.

### **References**

[1] IEEE 802.3ba-2010 Annex 83B. 802.3ba-2010.pdf.

### **See Also**

**Serial Link Designer**



# CEI 25G-LR Compliance Kit

Characterize and validate the performance of a CEI 25G-LR channel design.

CEI 25G-LR is a common electrical interface (CEI) implementation agreement (IA) that supports 25 Gb/s over "Long Reach" (LR) backplane architectures. The CEI-25G-LR Clause is part of the Common Electrical I/O 3.0 Implementation Agreement.

This kit is designed for analysis of a backplane channel design between module boards. The total channel length is approximately 30 inches. It has module boards connected with two mated connectors which represents the interconnect between ASICs transmitting and receiving 25 Gb/s data over the channel. The kit has three sheets: one for single channel BER compliance testing, one for multi-channel FEXT/NEXT crosstalk to measure BER compliance and a sheet for simulating network characteristics for compliance.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

## Open CEI 25G-LR Kit

Open the CEI 25G-LR kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("CEI_25G_LR");
```

The screenshot displays the Serial Link Designer application window. The main workspace shows a schematic diagram of a channel design. On the left, a transmitter block labeled 'TX1' is connected to a channel block labeled 'S1\_s\_CEI\_25G\_LR\_Cha...'. The transmitter block contains the text: 'cei\_25lr', 'TX\_P', 'cei\_25g\_lr\_Tx', '38.75ps - serdes...', and 'None'. The channel block is a rectangular box with four ports labeled 1, 2, 3, and 4. On the right, a receiver block labeled 'RX1' is connected to the channel. The receiver block contains the text: 'cei\_25lr', 'RX\_P', and 'cei\_25g\_lr\_Rx'. Below the diagram, there is a gear icon and the text: 'State: default' and 'Topology: Channel\_Network\_Characteristic\_Compliance'. The bottom of the window shows a 'Solution Space' table with various parameters and their values.

Transfer List	Variable	Type	Format	Variation Group	Value 1	Value 2
Channel_Network_Characteristic_Compliance	Elch	Corner	List	Corners	TE (Tps)	
Channel_Network_Characteristic_Compliance	Process	Corner	List	Corners	TT (Tps)	
Channel_Network_Characteristic_Compliance	Rx1Rx_Receiver_Sensitivity	Float	AMR Range	<none>	0.025	
Channel_Network_Characteristic_Compliance	Rx1Rx_Sj	UI	AMR Range	<none>	0	
Channel_Network_Characteristic_Compliance	Rx1peaking_filter config	Integer	AMR Range	<none>	0	
Channel_Network_Characteristic_Compliance	Rx1peaking_filter mode	String	AMR List	<none>	auto	
Channel_Network_Characteristic_Compliance	Rx1AGC Mode	String	AMR List	<none>	OFF	
Channel_Network_Characteristic_Compliance	Rx1AGC1 avat	Float	AMR Range	<none>	0.3	

### Kit Overview

- Project Name: CEI\_25G\_LR
- Interface Name: CEI\_25G\_LR
- Operating Frequency: 25.8 Gb/s (UI = 38.75 ps)

The CEI 25G-LR kit defines one schematic set. Schematic sheets are included for testing a CEI 25G-LR channel with mated connectors, and a cable/backplane with two plug-in cards. The masks provided in this kit are given in the 25 Gb/s CEI\_25G\_LR specification

- **Default** - Schematic sheets focused on channel characterization and BER compliance

For more information about the CEI 25G-LR channel compliance schematics, transfer net properties, and compliance rules, refer to the document CEI\_25G\_LR.pdf that is attached to this example as a supporting file.

### See Also

**Serial Link Designer**

# CEI 28G-SR Compliance Kit

Characterize and validate the performance of a CEI 28G-SR channel design.

CEI 28G-SR is a common electrical interface (CEI) implementation agreement (IA) that supports 28 Gb/s over "Short Reach" (SR) chip-to-chip applications. The CEI-28G-SR Clause is part of the Common Electrical I/O 3.0 Implementation Agreement.

This kit is designed for analysis of a host board and QSFP+ 100G module. The total channel length is approximately 8.25 inches. It consists of a host board connected with a mated connector which represents the interconnect between the transmitting and receiving 28.05 Gb/s data across the channel. The kit has three sheets; one for single channel BER compliance testing, one for multi-channel FEXT/NEXT crosstalk to measure BER compliance and a sheet for simulating network characteristics for compliance.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

## Open CEI 28G-SR Kit

Open the CEI 28G-SR kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("CEI_28G_SR");
```

The screenshot displays the Serial Link Designer application window. The main workspace shows a schematic diagram of a channel model. On the left, a transmitter block is labeled "TX1 ce\_i\_28g\_sr\_model... TX\_P ce\_i\_28g\_sr\_tx 35.7ps - SerDes\_... None". On the right, a receiver block is labeled "RX1 ce\_i\_28g\_sr\_model... RX\_P ce\_i\_28g\_sr\_rx". A central channel block is labeled "S1 s\_Reference\_8p25...". The channel is represented by a blue line connecting the transmitter and receiver. Below the channel, a gear icon indicates the "State: default" and "Topology: Channel\_Network\_Characteristic\_Compliance".

The bottom of the window shows a "Solution Space" table with the following columns: Transfer list, Variable, Type, Format, Variation Group, Value 1, and Value 2.

Transfer list	Variable	Type	Format	Variation Group	Value 1	Value 2
Channel_Network_Characteristic_Compliance	Ech	Corner	List	Corners	TE (Typ)	
Channel_Network_Characteristic_Compliance	Process	Corner	List	Corners	TT (Typ)	
Channel_Network_Characteristic_Compliance	Rx1Rx_Receiver_Sensitivity	Float	AMI Range	-none-	0.015	
Channel_Network_Characteristic_Compliance	Rx1Rx_Sj	UI	AMI Range	-none-	0	
Channel_Network_Characteristic_Compliance	Rx1peaking_filter_config	Integer	AMI Range	-none-	0	
Channel_Network_Characteristic_Compliance	Rx1peaking_filter_mode	String	AMI List	-none-	auto	
Channel_Network_Characteristic_Compliance	Rx1peaking_filter_pole_zero_data_rate	Float	AMI Range	-none-	20.05e9	
Channel_Network_Characteristic_Compliance	Rx1AZP_Mode	String	AMI List	-none-	OFF	

### Kit Overview

- Project Name: CEI\_28G\_SR
- Interface Name: CEI\_28G\_SR
- Operating Frequency: 28.05 Gbps (UI = 35.75ps)

The CEI 28G-SR kit defines one schematic set.

- **Default** - Schematic sheets focused on channel characterization and BER compliance

For more information about the CEI 28G-SR channel compliance schematics, transfer net properties, and compliance rules, refer to the document CEI\_28G\_SR.pdf that is attached to this example as a supporting file.

### See Also

**Serial Link Designer**

# CEI 28G-VSR Compliance Kit

Characterize and validate the performance of a CEI 28G-VSR channel design.

CEI 28G-VSR is a common electrical interface (CEI) implementation agreement (IA) that supports 28 Gb/s over "Very Short Reach" (VSR) optical or electrical chip-to-module applications. The CEI 28G-VSR Clause is part of the Common Electrical I/O 3.0 Implementation Agreement.

This kit is designed for analysis of a host board and an optical module. The total channel length is approximately 5 inches. The VSR channel consists of a host board connected with a mated connector to a module board which represents the interconnect between the transmitting and receiving 28.05 Gbps data across the channel. The kit has sheets that represent network characterization for insertion and return loss testing, channel FEXT/NEXT crosstalk to measure BER compliance and RX stress testing.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a "high confidence" of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

## Open CEI 28G-VSR Kit

Open the CEI 28G-VSR kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("CEI_28G_VSR");
```

The screenshot shows the Serial Link Designer application window. The main workspace displays a block diagram of a channel model. The diagram includes a Host Tx block on the left, a central channel block labeled "FULL Channel Host-to-Module Reference Channel Fig. 16-16", and a Module Rx block on the right. The Host Tx block contains the text: "Host Tx", "cei\_28g\_vsr\_mode...", "TX\_P", "cei\_28g\_vsr\_Tx", "35.71ps - CEI\_28...", and "None". The Module Rx block contains: "Module\_Rx", "cei\_28g\_vsr\_mode...", "RX\_P", and "cei\_28g\_vsr\_Rx". The channel block is labeled "S2 s\_Recommended\_Mi...".

Below the diagram, the state and topology are displayed: "State: default" and "Topology: Full\_Channel\_Host\_to\_Module\_BER\_Compliance".

At the bottom of the window, the Solution Space table is visible. The table has columns for Transfer, Variable, Type, Format, Variation Group, and Value 1 through Value 6. The table contains several rows of data related to the channel model.

Transfer	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4	Value 5	Value 6
Full_Channel_Host_to_Module_BER_Compliance	Elch	Corner	List	Comers	TE (Typ)					
Full_Channel_Host_to_Module_BER_Compliance	Process	Corner	List	Comers	TT (Typ)					
Full_Channel_Host_to_Module_BER_Compliance	Host_Tx_Tx_Dj	LI	AM Range	-none-	0					
Full_Channel_Host_to_Module_BER_Compliance	Host_Tx_Tx_Sj	LI	AM Range	-none-	0					
Full_Channel_Host_to_Module_BER_Compliance	Host_Tx_Tx_Sj_Frequency	Float	AM Range	-none-	100e6					
Full_Channel_Host_to_Module_BER_Compliance	Host_Tx_Tx	Float	AM Range	-none-	20					
Full_Channel_Host_to_Module_BER_Compliance	Host_Tx_TxTf	Float	AM Range	-none-	0.5e-12					
Full_Channel_Host_to_Module_BER_Compliance	Host_Tx_TxTm	Tan	AM Range	-none-	Host_Tx_TxTm	1.0				

**Kit Overview**

- Project Name: CEI\_28G\_VSR
- Interface Name: CEI\_28G\_VSR
- Operating Frequency: 28.05 GB/s (UI = 35.75 pS)

The CEI 28G-VSR kit defines two schematic sets. Schematic sheets are included for testing a CEI 28G-VSR channel with mated connector to a module board. The masks provided in this kit are given in the 28.05 Gb/s CEI 28G-VSR specification.

- **Compliance** — All compliance host-to-module or module-to-host simulations
- **MCB\_HCB\_Characterization** — Compliance board network simulations.

For more information about the CEI 28G-VSR channel compliance schematics, transfer net properties, and compliance rules, refer to the document CEI\_28G\_VSR.pdf that is attached to this example as a supporting file.

**References**

[1] CEI-28G-VSR Specification. Part of CEI-4.0 specification IA# OIF-CEI-04.0, December 29, 2017.

[2] CEI-25G-LR and CEI-28G-SR Multi-Vendor Interoperability Testing. March, 2012. 2012\_OIF\_PLL\_White\_Paper\_Feb29.pdf.

[3] CEI-28G:Paving the Way for 100 Gigabit, OIF Forum Whitepaper. John D'Ambrosia, Force10 Networks, David Stauffer, IBM Microelectronics, Chris Cole, Finisar. OIF\_CEI-28G\_WP\_Final.pdf.

[4] IA Title: Common Electrical I/O (CEI) - Electrical and Jitter Interoperability agreements for 6G+ bps, 11G+ bps and 25G+ bps I/O. (IA # OIF-CEI-03.3). OIF\_CEI\_03.0.pdf, September 1, 2011.

**See Also**

**Serial Link Designer**

# CEI 56G-LR Compliance Kit

Characterize and validate the performance of a CEI 56G-LR channel design.

CEI 56G-LR is a common electrical interface (CEI) implementation agreement (IA) that supports 56 Gb/s over "Long Reach" (LR) chip-to-chip applications. The CEI-56G-LR Clause is part of the Common Electrical I/O 3.1 Implementation Agreement.

This kit is designed for analysis of a backplane channel design between module boards. The channel model is based on two module boards connected with two mated connectors with PCB trace.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks, COM, or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

## Open CEI 56G-LR Kit

Open the CEI 56G-LR kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("CEI_56G_LR");
```

Use this sheet to validate channel SDD21 and SDD22 compliance

TX1  
si\_serdes  
SI\_Ideal\_Tx  
SI\_Ideal\_Tx  
Technology  
55.55ps - SerDes...  
None

RX1  
si\_serdes  
SI\_Ideal\_Rx  
SI\_Ideal\_Rx  
Technology

S1  
s\_CEI\_56G\_LR\_Ref...

Rules file "Channel\_Compliance\_Rules" is included

State: default  
Topology: Channel\_Network\_Characteristic\_Compliance

Transfer List	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8
Channel_Network_Characteristic_Compliance	Elch	Corner	List	Corners	TE (Typ)							
Channel_Network_Characteristic_Compliance	Process	Corner	List	Corners	TT (Typ)							

## Kit Overview

- Project Name: CEI\_56G\_LR
- Interface Name: CEI\_56G\_LR

- Target Operating Frequency: From 36 Gb/s to 58 Gb/s (UI = 55.55 ps to 34.48 ps)

The CEI 56G-LR kit defines one schematic set. Schematic sheets are included for testing a CEI 56G-LR channel in the form of an S-parameter model. The model represents two mated connectors, a backplane and two plug-in cards. The masks defined for channel losses provided in this kit are given in the CEI 56G-LR specification [1].

- **Default** - Schematic sheets focused on channel characterization and BER compliance.

For more information about the CEI 56G-LR channel compliance schematics, transfer net properties, and compliance rules, refer to the document CEI\_56G\_LR.pdf that is attached to this example as a supporting file.

### References

[1] CEI-56G-LR -PAM4 Long Reach Interface. Contribution Number: OIF2014.380.03. oif2014.380.03-CEI-56G-LR-PAM-4.pdf. June 27, 2016.

[2] Common Electrical I/O (CEI) - Electrical and Jitter Interoperability. IA # OIF-CEI-03.1. February 18, 2014.

### See Also

**Serial Link Designer**



## CEI 56G-VSR Compliance Kit

Characterize and validate the performance of a CEI 56G-VSR channel design.

CEI 56G-VSR is a common electrical interface (CEI) implementation agreement (IA) that supports 56 Gb/s over “Very Short Reach” (VSR) optical or electrical chip-to-module applications. The CEI-56G-VSR Clause is part of the Common Electrical I/O 3.1 Implementation Agreement.

The interface relies on PAM4 modulation to increase the bandwidth in 28 GB/s channels. PAM4 modulation can transmit 4-bits per cycle instead of only 2 bits per cycle for NRZ modulation. Theoretically, changing the modulation for signaling will double the bandwidth, so that 28 GB/s compliant channels can run at 56 Gb/s. However, in practice, the design of these interfaces can be challenging when attempting to double the bandwidth using PAM4 modulation.


This kit is designed for bidirectional analysis of a host board to an optical module board. The total channel loss at Nyquist or  $F_b/2$  is approximately 10 dB. The VSR channel consists of a host board connected with a mated connector to a module board that represents the interconnection between the transmitting and receiving data across the channel. The kit contains sheets that include the specific host and/or module board design and characterization. Network characterization is set up for insertion and return loss testing to the compliance masks, channel FEXT/NEXT crosstalk is included in multi-channel sheets to measure the effects on BER compliance and RX stress testing.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance. In addition, not all compliance metrics can be simulated and thus will need to be measured in a laboratory environment.

### Open CEI 56G-VSR Kit

Open the CEI 56G-VSR kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("CEI_56G_VSR");
```

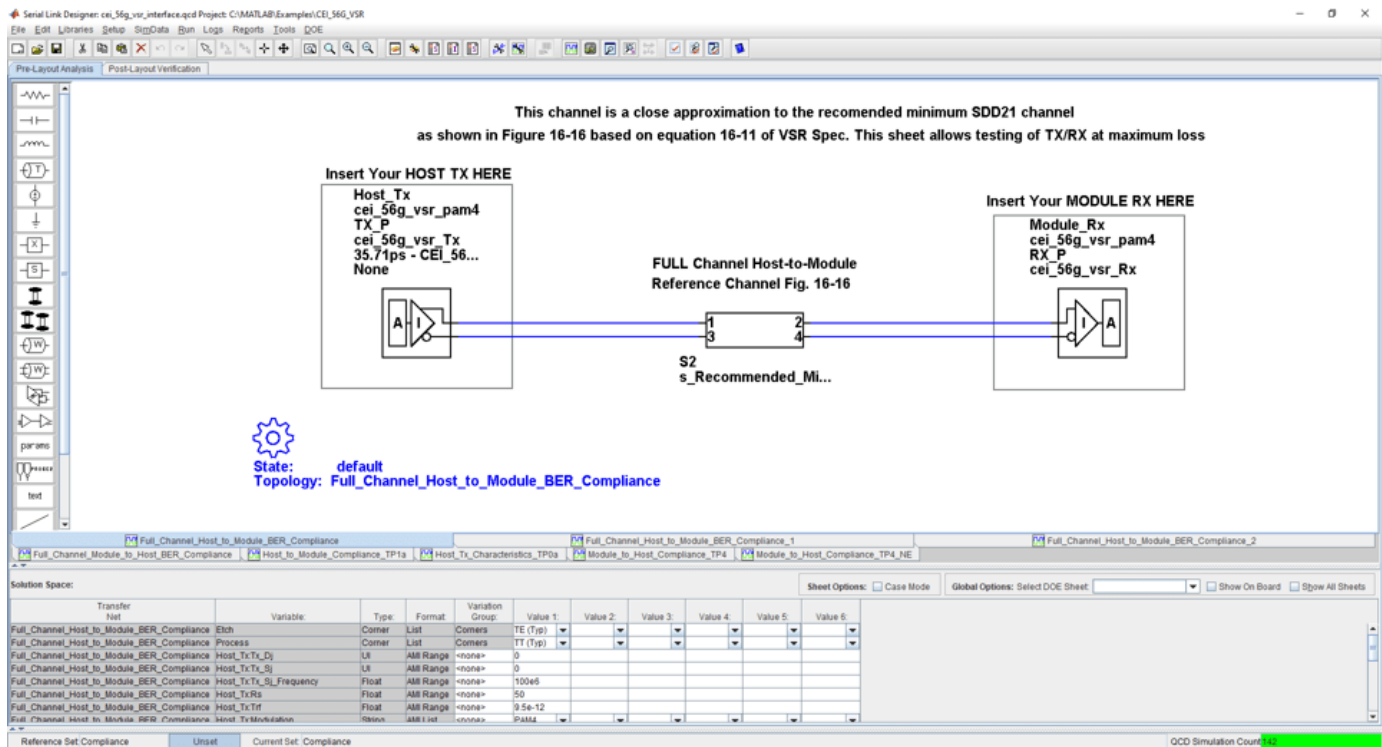

## Kit Overview

- Project Name: CEI\_56G\_VSR
- Interface Name: CEI\_56G\_VSR
- Target Operating Frequency: From 36 Gb/s to 58 Gb/s (PAM4 encoding) (UI = 55.55 ps to 34.48 ps)

The CEI 56G-VSR kit defines two schematic sets. Schematic sheets are included for testing a CEI 56G-VSR channel with mated connector to a module board. The masks provided in this kit are given in the CEI 56G-VSR specification [1].

- **Compliance** - All compliance host-to-module or module-to-host simulations
- **MCB\_HCB\_Characterization** - Compliance board network simulations.

For more information about the CEI 56G-VSR channel compliance schematics, transfer net properties, and compliance rules, refer to the document CEI\_56G\_VSR.pdf that is attached to this example as a supporting file.

## References

[1] CEI-56G: Paving the Way for 100 Gigabit, OIF Forum Whitepaper, OIF\_CEI-56G\_WP\_Final.pdf

## See Also

Serial Link Designer

# Fibre Channel FC-PI-6 Compliance Kit

Characterize and validate the performance of a Fibre Channel FC-PI-6 channel design.

This kit is designed for analysis of a host board and an optical module. The channel consists of a host board connected with a mated connector to a module board which represents the interconnect between the transmitting and receiving 28.05 Gb/s data across the channel. The kit has sheets that represent network characterization for insertion and return loss testing, channel FEXT/NEXT crosstalk to measure BER compliance and RX stress testing.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a “high confidence” of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

## Open FC-PI-6 Kit

Open the FC-PI-6 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("FC_PI_6");
```

Use this sheet for network characterization of mated module and host channels

Host Tx  
fc\_pi\_6\_models  
tx\_p  
fc\_pi\_6\_tx  
35.7ps - SerDes...

Reference Channel  
S2  
s\_reference\_host...

Module Rx  
fc\_pi\_6\_models  
rx\_ref\_p  
fc\_pi\_6\_ideal\_rx

State: default  
Topology: Full\_Channel\_Network\_Characterization

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2
Full_Channel_Network_Characterization	Etch	Corner	List	Corners	TE (Typ)	
Full_Channel_Network_Characterization	Process	Corner	List	Corners	TT (Typ)	
Full_Channel_Network_Characterization	Host_Tx_TIR	Float	AMR Range	-none-	0.5e-12	
Full_Channel_Network_Characterization	Host_Tx_Si_Frequency	Float	AMR Range	-none-	100E+6	
Full_Channel_Network_Characterization	Host_Tx_Tx_Si	UI	AMR Range	-none-	0	
Full_Channel_Network_Characterization	Host_Tx_Tx_Dj	UI	AMR Range	-none-	0	
Full_Channel_Network_Characterization	Host_Tx_Tx_Rj	UI	AMR Range	-none-	0	
Full_Channel_Network_Characterization	Host_Tx_Tx_FCD	UI	AMR Range	-none-	0	

## Kit Overview

- Project Name: FC\_PI\_6
- Interface Name: FC\_PI\_6
- Operating Frequency: 28.05 Gb/s (UI = 35.75 ps)

The FC-PI-6 kit defines three schematic sets. Schematic sheets are included for testing a Fibre Channel FC-PI-6 channel with mated connector to a module board. The masks provided in this kit are given in the Fibre Channel FC-PI-6 specification.

- **ALL** - Contains all project schematics
- **Host\_Channel\_Simulations** - Host board design schematics
- **Module\_Channel\_Simulations** - Module board design schematics

For more information about the FC-PI-6 channel compliance schematics, transfer net properties, and compliance rules, refer to the document FibreChannel\_FC\_PI\_6.pdf that is attached to this example as a supporting file.

### **References**

[1] Fibre Channel Physical Interface 6 Rev 1.00 specification. FC-PI-6 Rev 1.00\_(13-135v1).pdf. April 26, 2013.

[2] Fibre Channel Methodologies for Signal Quality Specification - MSQS (Rev 0.2). fc\_signal\_quality\_specs\_09-263v1.pdf.

[3] IEEE 802.3bj D1.4 Draft Specification. Draft Standard for Ethernet Amendment X:Physical Layer Specifications and Management Parameters for 100 Gb/s Operation Over Backplanes and Copper Cables. P802d3bj\_D1p4.pdf. February 21, 2013.

### **See Also**

**Serial Link Designer**

# HMC 15G-SR Compliance Kit

Characterize and validate the performance of an HMC 15G-SR channel design.

This kit is designed for analysis of an interface between a host ASIC and a Cube. The total channel length between devices is approximately 10 inches. The kit has sheets that represent network characterization for insertion and return loss testing and both single channel and multi-bit channel simulation sheets to measure BER compliance and RX stress testing.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a “high confidence” of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

## Open HMC 15G-SR Kit

Open the HMC 15G-SR kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("HMC_G1");
```

The screenshot shows the Serial Link Designer interface. The main workspace displays a channel model diagram with the following components:

- TX\_Test**: Includes `hmc_models`, `TX_P`, `hmc_tx`, and a rate of `66.67ps - SerDes...`.
- Channel Model**: Consists of three blocks: `S1 s_hmc_package`, `S3 s_hmc_reference...`, and `S2 s_hmc_package`.
- RX\_Test**: Includes `hmc_models`, `RX_P`, and `hmc_rx`.

Below the diagram, the state and topology are set to:

- State: default
- Topology: HMC\_Channel

The Solution Space table at the bottom lists various variables and their values:

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2
HMC_Channel	Etch	Corner	List	Corners	TE (Tsp)	
HMC_Channel	Process	Corner	List	Corners	TT (Tsp)	
HMC_Channel	RX_TestRX_Receiver_Sensitivity	Float	AM Range	<none>	0.015	
HMC_Channel	RX_TestRX_SL_Frequency	Float	AM Range	<none>	0	
HMC_Channel	RX_TestRX_Sj	UL	AM Range	<none>	0	
HMC_Channel	RX_TestRX_Dj	UL	AM Range	<none>	0	
HMC_Channel	RX_TestRX_Rj	UL	AM Range	<none>	0	
HMC_Channel	RX_TestRX_PFD	UL	AM Range	<none>	0	

## Kit Overview

- Project Name: HMC\_15G\_SR
- Interface Name: HMC\_15G\_SR
- Operating Frequency: 15 Gb/s (UI = 66.67 ps) default setting. 10 Gb/s and 12.5 Gb/s can be selected.

The HMC 15G-SR kit defines one schematic set. The masks provided in this kit are given in the 15 Gb/s HMC-15G-SR specification.

- **Set1** — Contains all project schematics

For more information about the HMC 15G-SR channel compliance schematics, transfer net properties, and compliance rules, refer to the document HMC\_15G\_SR.pdf that is attached to this example as a supporting file.

### References

[1] HMC Specification 1.0. hmc\_gen2\_hmcc\_1.fm - Rev. 1.0 1/13 EN. HMC\_Specification\_1\_0.pdf.

### See Also

**Serial Link Designer**

# HMC 30G-VSR Compliance Kit

Characterize and validate the performance of a hybrid memory cube (HMC) 30G-VSR channel design.

This kit is designed for analysis of an interface between a host ASIC and a Cube. The total channel length between devices is approximately 10 inches. The kit has sheets that represent network characterization for insertion and return loss testing and both single channel and multi-bit channel simulation sheets to measure BER compliance and RX stress testing. The kit includes schematics for testing 30 Gb/s, 28 Gb/s and 25 Gb/s operation including all applicable masks scaled for the representative bit rate.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a “high confidence” of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

## Open HMC 30G-VSR Kit

Open the HMC 30G-VSR kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("HMC_G2");
```

The screenshot displays the Serial Link Designer application window. The main workspace shows a schematic diagram of a channel design. On the left, a TX Test block is configured with parameters: hmc\_gen2\_models, TX\_P, hmc\_gen2\_tx, 40.0ps - SerDes\_..., and None. This is connected to a channel consisting of three sections: S1 (s\_HMC\_Gen2\_TX\_Pk...), S3 (s\_HMC\_Gen2\_Refer...), and S2 (s\_HMC\_Gen2\_RX\_Pk...). The channel is terminated with Ball... Pad... blocks. On the right, an RX Test block is configured with parameters: hmc\_gen2\_models, RX\_P, and hmc\_gen2\_rx. The interface also shows a Solution Space table with various variables and their values.

Transfer	Variable	Type	Format	Variation	Value 1	Value 2
HMC_Channel_25g	Etch	Corner	List	Comers	TE (Typ)	
HMC_Channel_25g	Process	Corner	List	Comers	TT (Typ)	
HMC_Channel_25g	RX_TestRx_Receiver_Sensitivity	Float	AMB Range	<none>	0.015	
HMC_Channel_25g	RX_TestRx_Si_Frequency	Float	AMB Range	<none>	0	
HMC_Channel_25g	RX_TestRx_Sj	LR	AMB Range	<none>	0	
HMC_Channel_25g	RX_TestRx_Sj	LR	AMB Range	<none>	0	
HMC_Channel_25g	RX_TestRx_Rj	LR	AMB Range	<none>	0	
HMC_Channel_25g	RX_TestRx_Rj	LR	AMB Range	<none>	0	
HMC_Channel_25g	RX_TestRx_Sj_Rj	Intaner	AMB Range	<none>	0	

## Kit Overview

- Project Name: HMC\_G2
- Interface Name: HMC\_VSR\_30G

- Operating Frequency: 25 Gb/s, 28 Gb/s, and 30 Gb/s (UI = 33.33ps min)

The HMC 30G-VSR kit defines one schematic set. The masks provided in this kit are given in the HMC-30G-VSR\_HMCC\_Rev2.0\_Public.pdf specification.

- **Set1** — Contains all project schematics

For more information about the HMC 30G-VSR channel compliance schematics, transfer net properties, and compliance rules, refer to the document HMC\_30G\_VSR.pdf that is attached to this example as a supporting file.

### References

[1] HMC Specification 1.0. HMC-30G-VSR\_HMCC\_Specification\_Rev2.0\_Public.pdf.

### See Also

**Serial Link Designer**



# MIPI D-PHY Serial Link Compliance Kit

Test the compliance of a channel to the MIPI D-PHY specification using **Serial Link Designer**.

This kit is designed to test MIPI D-PHY channel compliance only. The MIPI D-PHY specification requires channels to meet various mixed mode insertion and return loss characteristics. This kit allows the user to design their channel for compliance with the D-PHY specification. To evaluate the source synchronous timing of the interface using the compliant channel design, use the “MIPI D-PHY Parallel Link Compliance Kit” on page 12-84. In addition, this kit can be used to test the required transmitter and receiver return loss masks.

## Open MIPI D-PHY Kit

Open the MIPI D-PHY kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("MIPI_D_PHY_SLD_Kit");
```

This sheet is for testing channel compliance for data rates greater than 1.5Gbps  
Compliance Masks for Network Characterization (Channel Analysis)

CLK\_TX  
mipi\_d\_phy\_seria...  
mipi\_d\_phy\_clk\_t...  
mipi\_d\_phy\_clk\_r...  
571.0ps - SerDes...  
None

DATA\_TX  
mipi\_d\_phy\_seria...  
mipi\_d\_phy\_data...  
mipi\_d\_phy\_data...  
571.0ps - SerDes...  
None

W1  
hs reference\_100...  
SW1.Length

Insert Your Channel Here

DATA\_RX  
mipi\_d\_phy\_seria...  
mipi\_d\_phy\_data...  
mipi\_d\_phy\_data...  
mipi\_d\_phy\_data...  
None

CLK\_RX  
mipi\_d\_phy\_seria...  
mipi\_d\_phy\_clk\_r...  
mipi\_d\_phy\_clk\_r...  
None

NOTE  
If testing to a different data rate the user will have to create or modify the mask files.

State: default  
Topology: HS\_MIPI\_D\_PHY\_Channel\_Compliance

Transfer List	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7
HS_MIPI_D_PHY_Channel_Compliance	Edh	Corner	List	Comers	TE (Typ)	FE (Fast)	SE (Slow)				
HS_MIPI_D_PHY_Channel_Compliance	Process	Corner	List	Comers	FF (Fast)	SS (Slow)	TT (Typ)				
HS_MIPI_D_PHY_Channel_Compliance	SW1.Length	W.Length	Soft Range	<none>	5.0in	6.0in	7.0in	8.0in	9.0in	10.0in	

## Kit Overview

- Project Name: MIPI\_D\_PHY\_SLD\_Kit
- Interface Name: MIPI\_D\_PHY\_SLD
- Target operating frequencies: 0.9 Gb/s (1.11 ns), 1.5 Gb/s (667 ps), and 1.75 Gb/s (571 ps).

The MIPI D-PHY kit defines three schematic set for each interface. Reference IBIS TX and RX models are included as place holders for compliance testing.

- **ALL** — All sheets in the project
- **Channel\_Compliance** — Testing MIPI D-PHY channel compliance
- **TX\_RX\_Compliance** — Testing TX and RX compliance

For more information about the MIPI D-PHY channel compliance schematics, transfer net properties, and compliance rules, refer to the document MIPI\_D\_Phy\_SLD.pdf that is attached to this example as a supporting file.

### References

[1] MIPI Alliance Specification for D-PHY. Version 2.0, 1 August, 2014.

### See Also

**Serial Link Designer**

### Related Examples

- “MIPI D-PHY Parallel Link Compliance Kit” on page 12-84

## MIPI M-PHY Compliance Kit

Characterize and validate the performance of a MIPI M-PHY channel design.

This kit is designed for an interface between system devices with up to 25 inches of PCB etch and one connector. The kit includes IBIS-AMI TX and RX models for reference and compliance testing.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a “high confidence” of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

### Open MIPI M-PHY Kit

Open the MIPI M-PHY kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("MIPI_M_PHY");
```

Serial Link Designer: MIPI\_M\_Phy\_G1.qcd Project: C:\MATLAB\Examples\MIPI\_M\_PHY\_1

File Edit Libraries Setup SimData Run Logs Reports Tools DOE

Pre-Layout Analysis Post-Layout Verification

**G1 MIPI M-Phy Single Channel**

TX1  
g1\_mipi\_m\_phy\_mo...  
TX\_P  
g1\_mipi\_m\_phy\_tx  
686.0ps - MIPI\_G...  
8B10B

RX1  
g1\_mipi\_m\_phy\_mo...  
RX\_P  
g1\_mipi\_m\_phy\_rx

State: default  
Topology: MIPI\_G1\_M\_PHY\_Single\_Channel

MIPI\_G1\_M\_PHY\_Single\_Channel MIPI\_G1\_M\_PHY\_Transmitter\_Compliance MIPI\_G1\_M\_PHY\_Receiver\_Compliance MIPI\_G1\_M\_PHY\_Widebus\_Channel

Solution Space: Sheet Options:  Case Mode Global Options: Select DOE Sheet:  Show On Board  Show All Sheets

Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:
MIPI_G1_M_PHY_Single_Channel	Etch	Corner	List	Corners	TE (Typ)		
MIPI_G1_M_PHY_Single_Channel	Process	Corner	List	Corners	TT (Typ)		
MIPI_G1_M_PHY_Single_Channel	RX1:Rt	Float	AMI Range	<none>	50		
MIPI_G1_M_PHY_Single_Channel	RX1:Rx_Sj_Frequency	Float	AMI Range	<none>	50E+5		
MIPI_G1_M_PHY_Single_Channel	RX1:Rx_Sj	UI	AMI Range	<none>	0		
MIPI_G1_M_PHY_Single_Channel	RX1:Rx_Dj	UI	AMI Range	<none>	0		
MIPI_G1_M_PHY_Single_Channel	RX1:Rx_Ri	UI	AMI Range	<none>	0		

### Kit Overview

- Project Name: MIPI\_M\_PHY
- MIPI\_M\_Phy\_G1 interface: Target operating frequencies of 1.25 Gb/s (800 ps) and 1.46 Gb/s (680 ps)
- MIPI\_M\_Phy\_G2 interface: Target operating frequencies of 255 Gb/s (400 ps) and 2.92 Gb/s (343 ps)
- MIPI\_M\_Phy\_G3 interface: Target operating frequencies of 4.99 Gb/s (200 ps) and 5.83 Gb/s (172 ps)
- MIPI\_M\_Phy\_G4 interface: Target operating frequencies of 9.98 Gb/s (100 ps) and 11.66 Gb/s (86 ps)

The MIPI M-PHY kit defines one schematic set for each interface.

- **MIPI** — Used for all compliance testing

For more information about the MIPI M-PHY channel compliance schematics, transfer net properties, and compliance rules, refer to the document MIPI\_M\_PHY.pdf that is attached to this example as a supporting file.

**References**

- [1] MIPI Alliance Specification for M-PHY. Version 4.0, 27 Apr-2015.
- [2] IEEE 802.3bj-2014 (CJPAT and CRPAT reference). 802.3bj-2014.pdf.

**See Also**

**Serial Link Designer**

## PCIe-2 Compliance Kit

Test the compliance of simulation models and topologies to the PCI Express generation 2 (PCIe-2) specification.


This PCIe signal integrity kit includes all the transfer nets, topologies, generic buffer models and compliance rules for a PCIe-2 high-speed SerDes interface. This includes PCIe-2 technology IBIS-AMI models for the SerDes transmitter and receiver, PCIe-2 compliance masks and transfer nets preconfigured for TX and RX characterization that are customizable for a PCIe-2 embedded channel.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

### Open PCIe-2 Kit

Open the PCIe-2 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("PCIe_Gen2_NVMe");
```

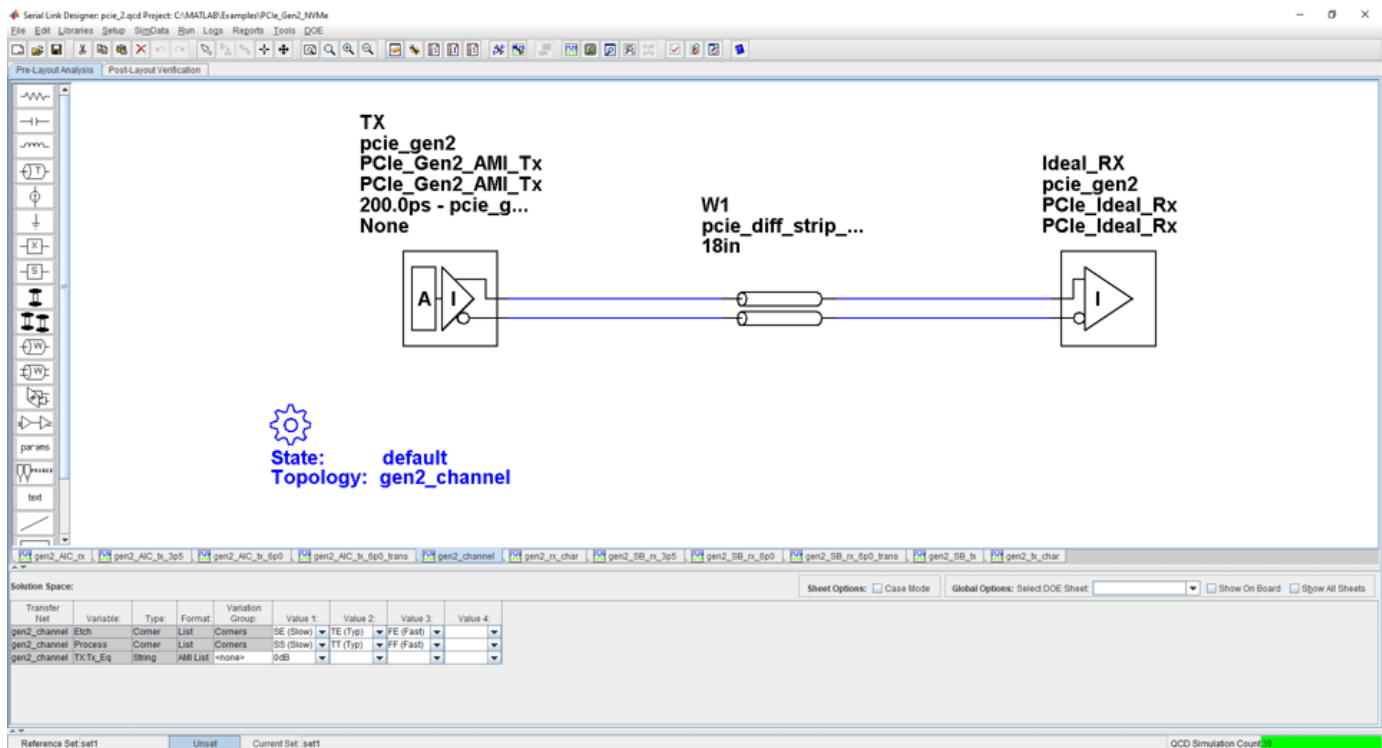

### Kit Overview

- Project Name: PCIe\_Gen2\_NVMe
- Interface Name: PCIe\_Gen2
- Target Operating Frequency: 5.0 Gb/s (UI = 200 ps)

For more information about the PCIe-2 channel compliance schematics, transfer net properties and compliance rules, refer to the document PCIe\_gen2.pdf that is attached to this example as a supporting file.

**See Also**  
**Serial Link Designer**

## PCIe-3 Compliance Kit

Test the compliance of simulation models and topologies to the PCI Express generation 3 (PCIe-3) specification.

The PCIe-3 signal integrity kit includes all the transfer nets, topologies, generic buffer models and compliance rules for a PCIe-3 high-speed SerDes interface. This includes PCIe-3 technology IBIS-AMI models for the SerDes transmitter and receiver, PCIe-3 compliance masks and transfer nets preconfigured for TX and RX characterization that are customizable for a specific PCIe-3 add-in card (AIC), system board (SB), and PCIe-3 embedded channel.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

### Open PCIe-3 Kit

Open the PCIe-3 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("PCIe_Gen3_NVMe");
```

The screenshot displays the Serial Link Designer interface for a PCIe-3 channel test. The main workspace shows a signal path from a transmitter (SB\_TX) through a series of components: a buffer (X\_ViaDiff6), a microstrip (W6), a capacitor (C2), another microstrip (W7), a buffer (X\_ViaDiff1), a strip (W1), another buffer (X\_ViaDiff3), and finally a receiver (SB\_RX). The system board channel is labeled "System Board Channel Test Embedded". The state is set to "default" and the topology is "channel\_gen3\_SB\_embedded".

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8	Value 9
channel_gen3_SB_embedded	Ech	Corner	List	Comers	SE (Slow)	TE (Typ)	FE (Fast)						
channel_gen3_SB_embedded	Process	Corner	List	Comers	SS (Slow)	TT (Typ)	FF (Fast)						
channel_gen3_SB_embedded	Length1	W Length	Soft Range	<none>	0.3in								
channel_gen3_SB_embedded	Length2	W Length	Soft Range	<none>	0.3in								
channel_gen3_SB_embedded	SB_RX_peaking_iter.config	Integer	AMI List	<none>	0	-5dB DC gain							
channel_gen3_SB_embedded	SB_RX_peaking_iter.mode	String	AMI List	<none>	auto								
channel_gen3_SB_embedded	SB_RX_dma_taps.1	Tap	AMI Range	SB_RX_Tap	0								

### Kit Overview

- Project Name: PCIe\_Gen3\_NVMe
- Interface Name: PCIe\_Gen3



- Target Operating Frequency: 8.0 Gb/s, 4.0 GHz (Nyquist) (UI = 125 ps)

The PCIe-3 kit defines four schematic sets:

- **All\_Sheets**: All schematic sheets
- **AIC**: Schematic sheets for add-in card design
- **SB\_Slot**: Schematic sheets for system board with slot design
- **SB\_Emb**: Schematic sheets for system board embedded design

For more information about the PCIe-3 channel compliance schematics, transfer net properties and compliance rules, refer to the document PCIe\_gen3.pdf that is attached to this example as a supporting file.

## **See Also**

**Serial Link Designer**

## PCIe-4 Compliance Kit

Test the compliance of simulation models and topologies to the PCI Express generation 4 (PCIe-4) specification.

This PCIe compliance signal integrity kit includes all the transfer nets, topologies, generic buffer models and compliance rules for a PCIe-4 high-speed SerDes interface. This includes PCIe-4 technology IBIS-AMI models for the SerDes transmitter and receiver, PCIe-4 compliance masks and transfer nets preconfigured for TX and RX characterization that are customizable for a PCIe-4 embedded channel.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

### Open PCIe-4 Kit

Open the PCIe-4 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` helper function.

```
openSignalIntegrityKit("PCIe_Gen4_NVMe");
```

The screenshot displays the Serial Link Designer interface for a PCIe-4 compliance kit. The main workspace shows a block diagram titled "System Board Channel Test Embedded" based on Table 8-10 of PCI Express Base 4.0. The diagram includes a transmitter block (SB\_TX) on the left, a receiver block (Reference\_RX) on the right, and a central channel block (W1) labeled "Insert Your Channel Design". The transmitter and receiver are connected to root complex blocks (S1 and S2). The state is set to "default" and the topology is "channel\_gen4\_sb\_embedded".

Transfer List	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8	Value 9
channel_gen4_sb_embedded	Elch	Corner	List	Comers	TE (Typ)								
channel_gen4_sb_embedded	Process	Corner	List	Comers	TT (Typ)								
channel_gen4_sb_embedded	Reference_RX.peaking_filter.config	Integer	AMI List	-none-	0 -dB DC gain								
channel_gen4_sb_embedded	Reference_RX.peaking_filter.mode	String	AMI List	-none-	auto								
channel_gen4_sb_embedded	Reference_RX.dfs.taps.1	Tap	AMI Range	Reference_RX.Tap	0								
channel_gen4_sb_embedded	Reference_RX.dfs.taps.2	Tap	AMI Range	Reference_RX.Tap	0								
channel_gen4_sb_embedded	Reference_RX.dfs.mode	String	AMI List	-none-	auto								

### Kit Overview

- Project Name: PCIe\_Gen4\_NVMe
- Interface Name: PCIe\_Gen4

- Target Operating Frequency: 16.0 Gb/s, 8.0 GHz (Nyquist) (62.5ps)

The PCIe-4 kit defines five schematic sets:

- **All\_Sheets**: All schematic sheets
- **AIC**: Add-In Card schematics only
- **SB\_EMB**: System Board embedded schematics only
- **SB\_Slot**: Slot configuration schematics
- **Tx\_and\_Rx\_Tests**: Return loss and package loss

For more information about the PCIe-4 channel compliance schematics, transfer net properties and compliance rules, refer to the document [PCIe\\_gen4.pdf](#) that is attached to this example as a supporting file.

**See Also**  
**Serial Link Designer**

## PCIe-5 Compliance Kit

Test the compliance of simulation models and topologies to the PCI Express generation 5 (PCIe-5) specification.

This PCIe compliance signal integrity kit includes all the transfer nets, topologies, generic buffer models and compliance rules for a PCIe-5 high-speed SerDes interface. This includes PCIe-5 technology IBIS-AMI models for the SerDes transmitter and receiver, PCIe-5 compliance masks and transfer nets preconfigured for TX and RX characterization that are customizable for a PCIe-5 embedded channel.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

### Open PCIe-5 Kit

Open the PCIe-5 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` helper function.

```
openSignalIntegrityKit("PCIe_Gen5_NVMe");
```

**Base Board ONLY network characteristics**  
Board Based on Figure 8-28 of PCI Express Base 5.0

Use this sheet to test your base board channel against the insertion loss masks  
All of the default base board channel models in this kit are swept here

Compliant Root and Non-Root channels are included  
Simulate network characteristics and plot "calibration channel" network masks

SB\_TX  
sl\_serdes  
SI\_Ideal\_Tx  
SI\_Ideal\_Tx  
Technology  
31.25ps - pcie\_g...  
None

-4dB to -27.5dB in -0.5dB Steps

S4  
SS4:Model

Reference\_RX  
sl\_serdes  
SI\_Ideal\_Rx  
SI\_Ideal\_Rx  
Technology

State: default  
Topology: cal\_base\_boards\_network\_characteristics

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4	Value 5	Value 6	Value 7	Value 8	Value 9	Value 10
cal_base_boards_network_characteristics	Eth	Corner	List	Comers	TE (Tps)									
cal_base_boards_network_characteristics	Process	Corner	List	Comers	TT (Tps)									
cal_base_boards_network_characteristics	SS4 Model	Subcircuit Model	List	<none>	s_sb_low_m10_0db	s_sb_low_m10_5db	s_sb_low_m11_0db	s_sb_low_m11_5db	s_sb_low_m4_0db	s_sb_low_m4_5db	s_sb_low_m5_0db	s_sb_low_m5_5db	s_sb_low_m6_0db	s_sb_low_m6_5db

### Kit Overview

- Project Name: PCIe\_Gen5\_NVMe
- Interface Name: PCIe\_Gen5

- Target Operating Frequency: 32.0 Gb/s; 16.0 GHz (Nyquist) (UI = 31.25 ps)

The PCIe-5 kit defines five schematic sets:

- **All\_Sheets:** All schematic sheets
- **Cal\_Channel\_Ref\_Design\_32Gbps:** Base Specification Reference Design for 32 Gbps
- **Channel\_Tolerancing:** Calibration Channel Stressed RX Testing
- **Compliance\_Board\_Testing:** Network Characteristics for Calibration Channel Models and Reference Design Models
- **Tx\_and\_Rx\_Pkg\_Tests:** Testing of Tx and Rx Characteristics and Package Model

For more information about the PCIe-5 channel compliance schematics, transfer net properties and compliance rules, refer to the document `PCIe_gen5.pdf` that is attached to this example as a supporting file.

**See Also**  
**Serial Link Designer**

## QSFP+ Compliance Kit

Test the channel design of a host board for compliance to the QSFP+ specification.

A QSFP+ link is made up of four SFP+ channels that are synchronized within the receiving module to support an aggregate 40 Gb/s link.

This kit is designed for compliance of the host board only. Module compliance is not currently supported in this kit. The kit includes IBIS-AMI TX and RX models for reference and compliance testing. Pre-layout and post-layout schematic sheets are provided. Package models are included only for post-layout reference IBIS-AMI models. These package models contain the QSFP+ connector, HCB (host compliance board), MCB, and SMA connector S-parameters. You can insert a channel design and test for compliance as specified in the QSFP+ specification (SFF-8431 for SerDes channel).

### Open QSFP+ Kit

Open the QSFP+ kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("QSFP_Plus");
```

Use This Sheet to Test Channel Network Characteristics

Host\_TX  
qsfp\_plus\_compli...  
TX1\_P\_1  
qsfp\_plus refere...  
90.009ps - SerDe...  
64B66B

Host Channel Under Test

1 2  
3 4

S2  
s\_reference\_host...

con... sfpp...  
con... sfpp...

S1  
s\_hcb\_compliance...

RX\_Load  
qsfp\_plus\_compli...  
RX1\_P  
reference\_load\_r...

State: default  
Topology: Channel\_Network\_Compliance

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2
Channel_Network_Compliance	Elch	Corner	List	Corners	TE (Typ)	
Channel_Network_Compliance	Process	Corner	List	Corners	TT (Typ)	
Channel_Network_Compliance	Host_TXtap_filter_1	Float	AMI Range	<none>	0.0	
Channel_Network_Compliance	Host_TXtap_filter_0	Float	AMI Range	<none>	1.0	
Channel_Network_Compliance	Host_TXtap_filter_1	Float	AMI Range	<none>	0.0	
Channel_Network_Compliance	Host_TXtv_swing	Float	AMI Range	<none>	0.65	
Channel_Network_Compliance	Host_TX_Tx_Dj	UI	AMI Range	<none>	0	
Channel_Network_Compliance	Host_TX_Tx_Rj	UI	AMI Range	<none>	0	

### Kit Overview

- Project Name: QSFP\_Plus
- Interface Name: QSFP\_Plus
- Target Operating Frequency: 11.1 Gb/s (UI = 90.009 ps)

The QSFP+ kit defines three schematic sets.

- **Pre\_Layout\_Reference\_Schematics** - Used for Pre-Layout testing of channel
- **Post\_Layout\_Reference\_Schematics** - Used for reference sheets when doing Post-Layout
- **All\_Project\_Schematics** - Set of all project Schematics

For more information about the QSFP+ channel compliance schematics, transfer net properties, and compliance rules, refer to the document QSFP\_Plus.pdf that is attached to this example as a supporting file.

### **References**

[1] SFF Committee: SFF-8431 Specifications for Enhanced Small Form Factor Pluggable Module QSFP+. Revision 4.1, 6th of July 2009.

### **See Also**

**Serial Link Designer**

## SAS 3.0 Compliance Kit

Characterize and validate the performance of an SAS 3.0 channel design.

This kit is designed for analysis of a channel design with two mated connectors as provided on the current SAS 3.0 specification provided on the T10 website. The kit also includes sheets containing the backplane/cable and connectors with two plug-in cards attached. In addition, SAS3 reference IBIS-AMI TX and RX models are provided with representative package models. Widebus sheets in this kit are included for crosstalk simulations for full channel and receiver stress tests.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

### Open SAS 3.0 Kit

Open the SAS 3.0 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("SAS_3");
```

The screenshot displays the Serial Link Designer application window. The main workspace shows a schematic diagram of a channel simulation. On the left is the 'Simulated Transmitter Device' containing a 'Tx\_Victim' block (sas\_3p0\_serdes SAS\_3\_AMI\_Tx 83.333ps -SerDes- BB10B) and a package model 'S10 s\_package'. On the right is the 'Simulated Receiver Device' containing an 'RX\_Victim' block (sas\_3p0\_serdes SAS\_3\_AMI\_Rx SAS\_3\_AMI\_Rx) and a package model 'S4 s\_package'. The channel between them consists of a cable 'S3 s\_cable' and two connectors 'S5 s\_mini\_hd\_connec...' and 'S6 s\_mini\_hd\_connec...'. A 'Static topology: Single\_Channel\_ET\_to\_ER' is indicated. The bottom of the window shows a 'Solution Space' table with various parameters and their values.

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2
Single_Channel_ET_to_ER	Elch	Corner	List	Comers	TE (Typ)	
Single_Channel_ET_to_ER	Process	Corner	List	Comers	TT (Typ)	
Single_Channel_ET_to_ER	RX_Victim_peaking_filter_scale_by_design_data_rate	String	AM List	none	Yes	
Single_Channel_ET_to_ER	RX_Victim_ofs mode	String	AM List	ofs	auto_fixad	
Single_Channel_ET_to_ER	RX_Victim_ofs taps.1	Tap	AM Range	ofs	0	
Single_Channel_ET_to_ER	RX_Victim_ofs taps.2	Tap	AM Range	ofs	0	
Single_Channel_ET_to_ER	RX_Victim_ofs taps.3	Tap	AM Range	ofs	0	
Single_Channel_ET_to_ER	RX_Victim_ofs taps.4	Tap	AM Range	ofs	0	

### Kit Overview

- Project Name: SAS\_3
- Interface Name: SAS\_3p0
- Target Operating Frequency: 12 Gb/s (UI = 83.333 ps)



The SAS 3.0 kit defines three schematic sets. Schematic sheets are included for testing a SAS3 channel with mated connectors, and a cable/backplane with two plug-in cards. The masks provided in this kit are provided in the 12 GB/s SAS3 specification.

- **Channel\_Compliance** - Schematic sheets focused on channel end-to-end compliance
- **Stressed\_Receiver** - Stressed receiver tests based on specification requirements and ISI generation
- **Transmitter\_Compliance** - Compliance tests for transmitter and transmitter device characteristics

For more information about the SAS 3.0 channel compliance schematics, transfer net properties, and compliance rules, refer to the document SAS3.pdf that is attached to this example as a supporting file.

### **References**

- [1] Serial Attached SCSI -3 (SAS-3). Working\_draft\_15\_nov\_2012.pdf (Revision 04).
- [2] 21250-WTP-001-A\_mindspeed\_sas\_info.pdf. SAS Info from Mindspeed.
- [3] SAS Protocol Layer - 2 (SPL-2). T10/2228-D (Revision 05, 10 Nov. 2012).

### **See Also**

**Serial Link Designer**

## SATA 3.0 Compliance Kit

Characterize and validate the performance of a SATA 3.0 channel design.

This kit is designed for analysis of a channel design between the SATA 3.0 host and a SATA 3.0 device. The channel consists of a host board and a device board connected by a SATA cable with two mated connectors consistent with the SATA 3.0 specification.

This kit enables you to insert a channel and/or cable design and characterize and validate its performance using the specification masks or other specification requirements to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

### Open SATA 3.0 Kit

Open the SATA 3.0 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("SATA_3");
```

Transfer List	Variable	Type	Format	Variation Group	Value 1	Value 2
Full_Channel_SATA_Single_Lane_Host_Driving	Etch	Corner List	Comers	TE (Typ)		
Full_Channel_SATA_Single_Lane_Host_Driving	Process	Corner List	Comers	TT (Typ)		
Full_Channel_SATA_Single_Lane_Host_Driving	RX_TestRx_Receiver_Sensibility	Float	AMB Range	<none>	0.1	
Full_Channel_SATA_Single_Lane_Host_Driving	RX_Testpeaking_Filter.config	Integer	AMB Range	<none>	0	
Full_Channel_SATA_Single_Lane_Host_Driving	RX_Testpeaking_Filter.mode	String	AMB List	<none>	auto	
Full_Channel_SATA_Single_Lane_Host_Driving	RX_Testdlaps 1	Tap	AMB Range	RX_TestTap	0	
Full_Channel_SATA_Single_Lane_Host_Driving	RX_Testdlaps 2	Tap	AMB Range	RX_TestTap	0	
Full_Channel_SATA_Single_Lane_Host_Driving	RX_Testdlaps 3	Tap	AMB Range	RX_TestTap	0	

### Kit Overview

- Project Name: SATA\_3
- Interface Name: SATA\_3p0
- Target Operating Frequency: 6 Gb/s (UI = 166.7 ps)

The SATA 3.0 kit defines three schematic sets. The first focuses channel compliance, second is for transmitter compliance and the third is for receiver compliance. A full-duplex channel is provided for aggressor crosstalk between the TX and RX channels of the full duplex structure.

- **Channel Compliance** - Schematic sheets focused on channel end-to-end compliance. SerDes and widebus sheets.
- **Transmitter Compliance** - Schematic sheets for compliance and calibration testing of the TX
- **Receiver Compliance** - Schematic sheets for compliance and tolerance testing of the RX

For more information about the SATA 3.0 channel compliance schematics, transfer net properties, and compliance rules, refer to the document `SATA_3p0.pdf` that is attached to this example as a supporting file.

### References

[1] Serial ATA Revision 3.1 (July 18, 2011). `SerialATA_Revision_3_1_Gold.pdf`.

[2] SATA-IO Interoperability and Technical Training (November 15, 2010). `SATA-IO-Tech-Training-Master_v2_PostedNoDigital.pdf`.

### See Also

**Serial Link Designer**

## SFP+ Compliance Kit


Test the channel design of a host board for compliance to the SFP+ specification.

This kit is designed for compliance of the host board only. Module compliance is not currently supported in this kit. The kit includes IBIS-AMI TX and RX models for reference and compliance testing. Pre-layout and post-layout schematic sheets are provided. Package models are included only for post-layout reference IBIS-AMI models. These package models contain the SFP+ connector, HCB (host compliance board), MCB, and SMA connector S-parameters. You can insert a channel design and test for compliance as specified in the SFP+ specification (SFF-8431 for SerDes channel).

### Open SFP+ Kit

Open the SFP+ kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("SFP_Plus");
```

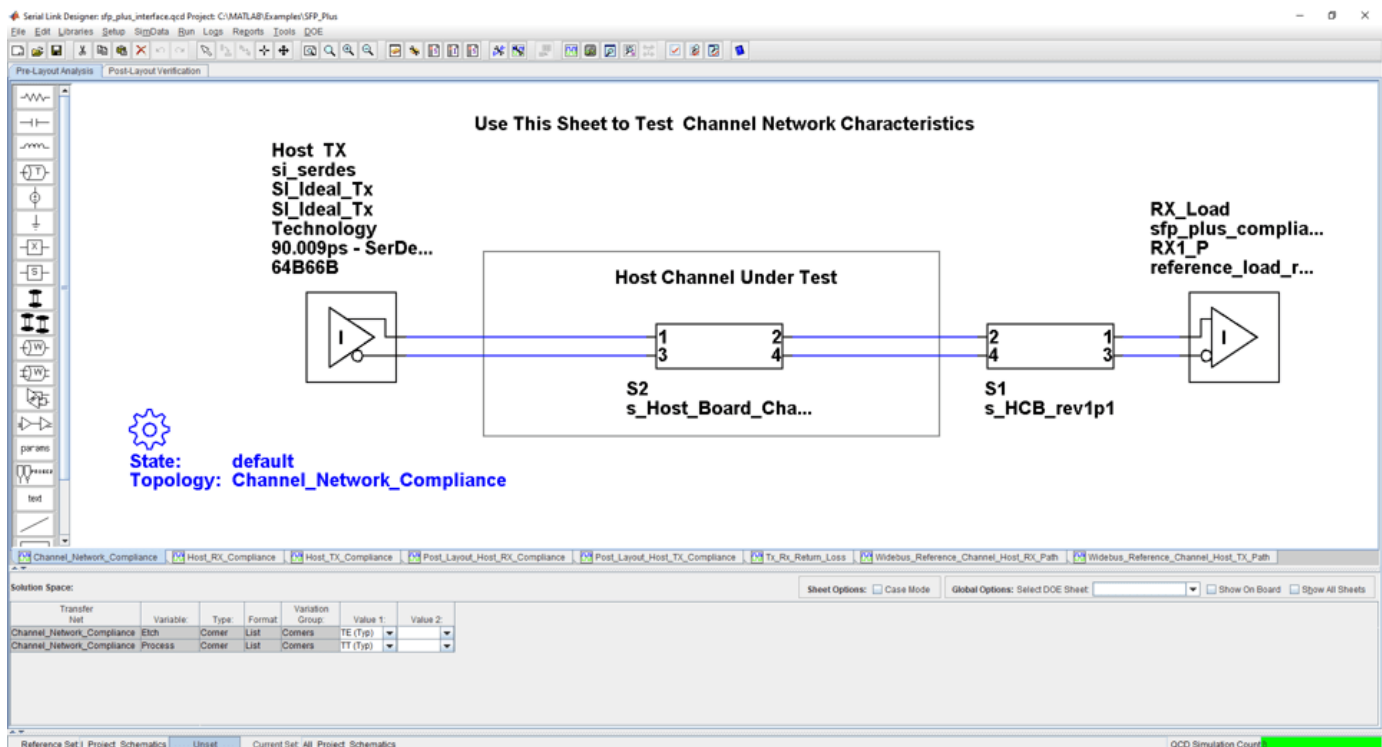

### Kit Overview

- Project Name: SFP\_Plus
- Interface Name: SFP\_Plus
- Target Operating Frequency: 11.1 Gb/s (UI = 90.009 ps)

The SFP+ kit defines three schematic sets.

- **Pre\_Layout\_Reference\_Schematics** - Used for pre-layout testing of channel
- **Post\_Layout\_Reference\_Schematics** - Used for reference sheets when doing post-layout

- **All\_Project\_Schematics** - Set of all project schematics

For more information about the SFP+ channel compliance schematics, transfer net properties, and compliance rules, refer to the document SFP\_Plus.pdf that is attached to this example as a supporting file.

### **References**

[1] SFF Committee: SFF-8431 Specifications for Enhanced Small Form Factor Pluggable Module SFP+. Revision 4.1, 6th of July 2009. SFF-8431-(SFP+%20MSA).pdf.

### **See Also**

**Serial Link Designer**

## USB 3.0 Compliance Kit

Characterize and validate the performance of a USB 3.0 channel design.

This kit is designed for analysis of a channel design between the USB 3.0 host and a USB hub, or between a USB 3.0 hub and a USB 3.0 device. The channel consists of a host board and a device board (hub or peripheral device) connected by a USB cable with two mated connectors consistent with the USB 3.0 specification.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

### Open USB 3.0 Kit

Open the USB 3.0 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("USB_3p0");
```

The screenshot displays the Serial Link Designer interface for a USB 3.0 channel model. The main workspace shows a schematic diagram of the channel, labeled "Long Channel Model". The schematic is divided into three main sections: Host, Cable, and Device. The Host section contains a transmitter (TX1) and several waveguide models (W1, W2, W3). The Cable section contains a cable model (S1) and two capacitors (C1, C2). The Device section contains a receiver (RX1) and a waveguide model (W4). The interface includes a toolbar on the left, a parameter list, and a solution space table at the bottom.

Transfer	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4	Value 5
Full_Link_Long_Channel	Elch	Corner	List	Comers	TE (Typ)				
Full_Link_Long_Channel	Process	Corner	List	Comers	TT (Typ)				
Full_Link_Long_Channel	Rx1 Rx_Dj	UI	AM Range	<none>	0.0				
Full_Link_Long_Channel	Rx1 Rx_Rj	UI	AM Range	<none>	0				
Full_Link_Long_Channel	Rx1 Rx_Receiver_Sensitivity	Float	AM Range	<none>	0.95				
Full_Link_Long_Channel	Rx1 peaking_filter_mode	String	AM List	<none>	Peak				
Full_Link_Long_Channel	Tx1 Tx_Dj	UI	AM Range	<none>	0.0				
Full_Link_Long_Channel	Tx1 Tx_Rj	UI	AM Range	<none>	0				

### Kit Overview

- Project Name: USB\_3p0
- Interface Name: USB\_3p0
- Operating Frequency: 5 GB/s (UI = 200 ps)

The USB 3.0 kit defines three schematic sets. One schematic set focuses on channel compliance and one schematic set is for device compliance. Both long and short channels are modeled along with FEXT/NEXT aggressor characteristics for crosstalk simulations.

- **Channel Compliance** - Schematic sheets focused on channel end-to-end compliance. Serdes and widebus sheets
- **Device Compliance** - Schematic sheets for DUT compliance driving either device or host boards. Widebus sheets only.
- **All Schematics** - All project schematic sheets

For more information about the USB 3.0 channel compliance schematics, transfer net properties, and compliance rules, refer to the document USB\_3p0.pdf that is attached to this example as a supporting file.

### References

[1] Universal Serial Bus 3.0 (May 1, 2011). USB3\_r1.0\_06\_06\_2011.pdf.

[2] USB\_Superspeed\_Equalizer\_Design\_Guidelines.  
USB\_Superspeed\_Equalizer\_Design\_Guidelines\_2011-06-10.pdf.

[3] Simplifying Validation and Debug of USB 3.0 Designs (Tektronix). [www.tektronix.com/applications/serial\\_data/usb.html](http://www.tektronix.com/applications/serial_data/usb.html).

[4] USB 3.0 Electrical Compliance Methodology White Paper (Revision 0.5). USB\_3\_0\_e-Compliance\_methodology\_0p5\_whitepaper.pdf.

### See Also

**Serial Link Designer**

## USB 3.1 Compliance Kit

Characterize and validate the performance of a USB 3.1 channel design.

This kit is designed for analysis of a channel design between the USB 3.1 host and device. One schematic set focuses on host compliance and one schematic set focuses on device compliance. Both single channel schematics and multi-channel schematics are provided for host and device compliance. Reference S-parameter models from the USB 3.1 website are included for compliance testing. Each schematic directs you where to place your channel design.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

### Open USB 3.1 Kit

Open the USB 3.1 kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("USB_3p1_Gen2");
```

The screenshot displays the Serial Link Designer application window for a project named "USB\_3p1\_Gen2.qcd". The interface includes a menu bar, a toolbar, and a main workspace showing a schematic diagram of a USB 3.1 channel design. The schematic is divided into two main sections: "Host/Your Host Channel" and "Device/Your Device Compliance Channel". The host channel includes components like "USB\_3p1\_Gen2\_Channel\_Series\_Combination\_TX" and "USB\_3p1\_Gen2\_Channel\_Series\_Combination\_RX". The device channel includes "USB\_3p1\_Gen2\_Channel\_Series\_Combination\_TX" and "USB\_3p1\_Gen2\_Channel\_Series\_Combination\_RX".

Below the schematic, there is a "Solution Space" table with the following data:

Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:	Va
Single_Channel_Host_Compliance_TX	Etch	Corner	List	Corners	TE (Typ)			
Single_Channel_Host_Compliance_TX	Process	Corner	List	Corners	TT (Typ)			
Single_Channel_Host_Compliance_TX	RX1:Rx_Dj	UI	AMI Range	<none>	0.0			
Single_Channel_Host_Compliance_TX	RX1:Rx_Rj	UI	AMI Range	<none>	0			
Single_Channel_Host_Compliance_TX	RX1:Rx_Receiver_Sensitivity	Float	AMI Range	<none>	0.025			

At the bottom of the window, the "Reference Set" is set to "Host\_Compliance", the "Current Set" is "All\_Sheets", and the "Simulation Count" is 320.



**Kit Overview**

- Project Name: USB\_3p1\_Gen2
- Interface Name: USB\_3p1\_Gen2
- Operating Frequency: 10 Gb/s (UI = 100 ps)

The USB 3.1 kit defines three schematic sets.

- **Host\_Compliance** - Schematic sheets focused on channel end-to-end compliance. Serdes and widebus sheets.
- **Device Compliance** - Schematic sheets for DUT compliance driving either device or host boards. Widebus sheets only.
- **All\_Schematics** - All project schematic sheets.

For more information about the USB 3.1 channel compliance schematics, transfer net properties, and compliance rules, refer to the document USB\_3p1.pdf that is attached to this example as a supporting file.

**References**

[1] Universal Serial Bus 3.1 (July 26, 2013). USB\_3\_1\_r1.0.pdf.

[2] USB 3.0 Electrical Compliance Methodology White Paper (Revision 0.5). USB\_3\_0\_e-Compliance\_methodology\_0p5\_whitepaper.pdf.

**See Also**

**Serial Link Designer**

## XAUI Compliance Kit

Characterize and validate the performance of a 10 Gigabit Attachment Unit Interface (XAUI) channel design.


This XAUI compliance signal integrity kit includes all the transfer nets, generic buffer models, and eye masks for an XAUI high-speed SerDes interface. This includes XAUI technology IBIS-AMI models for the SerDes transmitter and receiver, XAUI eye masks, transfer nets preconfigured for TX and RX characterization, and an easily customizable end-to-end transfer net for a full XAUI link.

This kit enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, further investigation or redesign, along with simulation, will need to be performed to determine possible changes to meet compliance.

### Open XAUI Kit

Open the XAUI kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("XAUI");
```

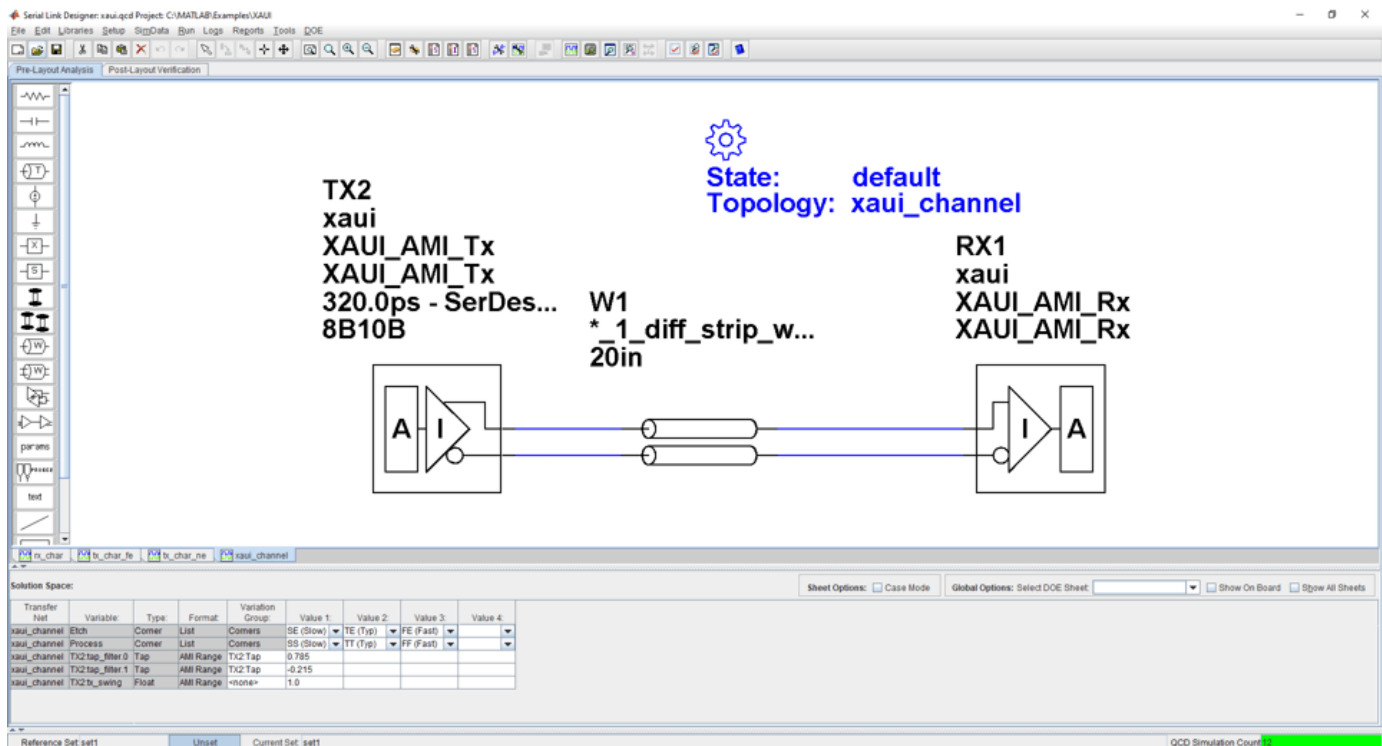

### Kit Overview

- Project Name: XAUI
- Interface Name: xaudi
- Target Operating Frequency: 3.125 Gb/s (320 ps)

The XAUI kit defines one schematic set.

- **set1** — Used for all compliance testing

For more information about the XAUI channel compliance schematics, transfer net properties, and compliance rules, refer to the document XAUI.pdf that is attached to this example as a supporting file.

### **References**

[1] "IEEE Standard for Information Technology - Local and Metropolitan Area Networks - Part 3: CSMA/CD Access Method and Physical Layer Specifications - Media Access Control (MAC) Parameters, Physical Layer, and Management Parameters for 10 Gb/s Operation." *IEEE Std 802.3ae-2002 (Amendment to IEEE Std 802.3-2002)*, August 2002, 1-544. <https://doi.org/10.1109/IEEESTD.2002.94131>.

### **See Also**

**Serial Link Designer**

## Registered DDR2 Architectural Kit

Implement a registered DDR2 interface for pre-layout analysis or post-layout verification.

This registered DDR2 architectural signal integrity kit includes all transfer nets, timing models, waveform processing levels and generic models for a registered DDR2 interface. This includes generic buffer models for the DDR2 controller, PLL, register, and SDRAM, along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open Registered DDR2 Kit

Open the registered DDR2 kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("DDR2_Reg");
```

The screenshot displays the Parallel Link Designer application window. The main workspace shows a circuit diagram with two blocks: 'ddr2\_controller' on the left and 'ddr2\_sdr1m\_1' on the right. Both blocks have 'DQS' and 'DQ' pins. A signal path connects the 'DQS' pin of the controller to the 'DQS' pin of the SDRAM, passing through a transmission line model labeled 'T1' with parameters '50ohm' and '\$LENGTH'. Below the diagram, a gear icon indicates configuration options: State: default, UI: 2.5ns, Type: Strobe, and Topology: dqs. The bottom of the window features a 'Solution Space' table and various simulation options.

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4
dqs	Elch	Corner	List	Corners	SE (Slow)	TE (Typ)	FE (Fast)	
dqs	Process	Corner	List	Corners	SS (Slow)	TT (Typ)	FF (Fast)	
dqs	\$LENGTH	Delay/Distance	Soft Range	<none>	4m			

### Kit Overview

For more information about the registered DDR2 architectural signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, along with instructions on how to customize the kit for a specific implementation, refer to the document `DDR2_Registered.pdf` that is attached to this example as a supporting file.

### See Also

**Parallel Link Designer**

## Unbuffered DDR2 Architectural Kit


Implement a registered DDR2 interface for pre-layout analysis or post-layout verification.

This unbuffered DDR2 architectural signal integrity kit includes all transfer nets, timing models, waveform processing levels and generic models for an unbuffered DDR2 interface. This includes generic buffer models for the DDR2 controller and SDRAM, along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open Unbuffered DDR2 Kit

Open the unbuffered DDR2 kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("DDR2_UBuff");
```

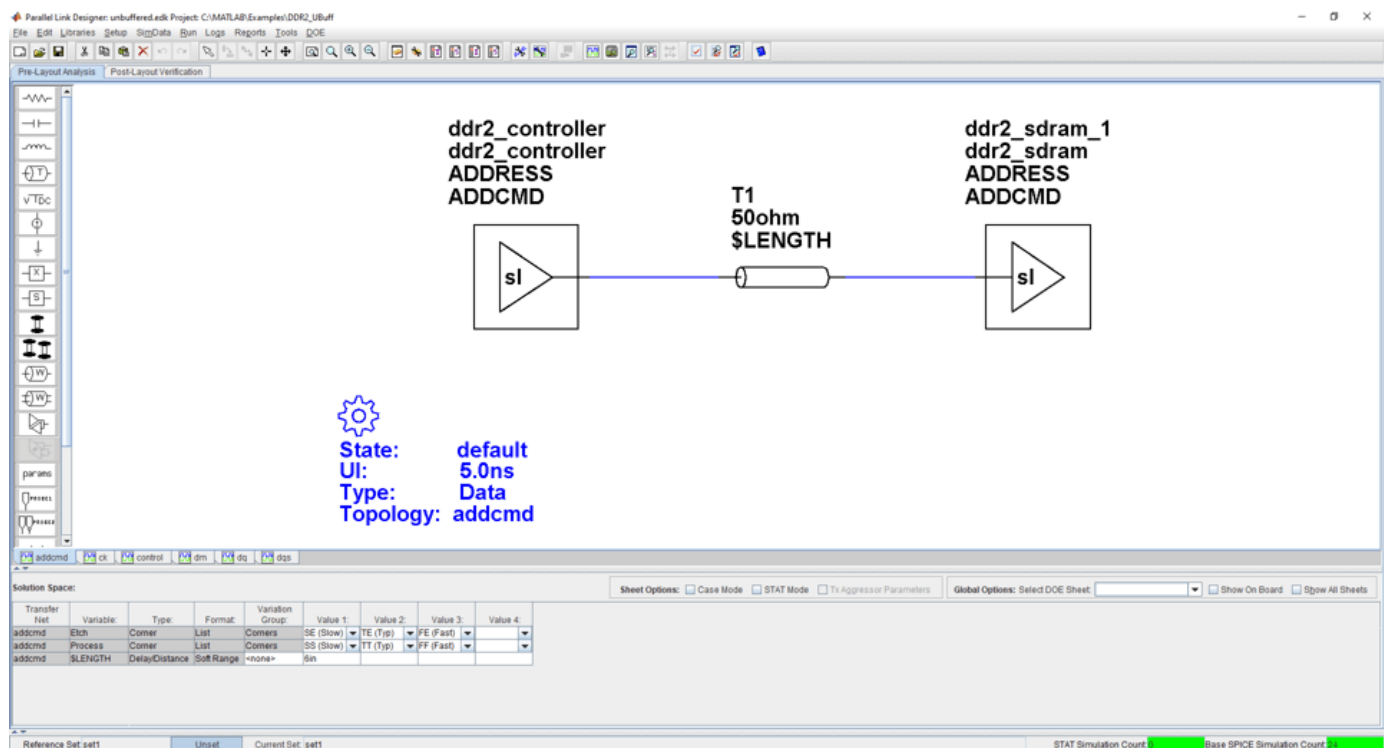

### Kit Overview

For more information about the unbuffered DDR2 architectural signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, along with instructions on how to customize the kit for a specific implementation, refer to the document `DDR2_Unbuffered.pdf` that is attached to this example as a supporting file.

### See Also

#### Parallel Link Designer

## Unbuffered DDR2 with PLL Architectural Kit

Implement an unbuffered DDR2 interface with PLL clock buffer for pre-layout analysis or post-layout verification.

This unbuffered DDR2 with PLL architectural signal integrity kit includes all transfer nets, timing models, waveform processing levels and generic models for an unbuffered DDR2 interface with PLL clock buffer. This includes generic buffer models for the DDR2 controller, PLL and SDRAM, along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open Unbuffered DDR2 with PLL Kit

Open the unbuffered DDR2 with PLL kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("DDR2_UBuff_PLL");
```

The screenshot shows the Parallel Link Designer interface. The main workspace displays a block diagram with two signal integrity (SI) blocks connected by a transmission line model. The left block is labeled "ddr2\_controller" and the right block is labeled "ddr2\_sdr1m\_1". The transmission line is labeled "T1" with parameters "50ohm" and "\$LENGTH". Below the diagram, a configuration panel shows: State: default, UI: 5.0ns, Type: Data, Topology: addcmd. The bottom of the window shows a "Solution Space" table with columns for Transfer Net, Variable, Type, Format, Variation Group, and Value 1 through Value 4. The table contains three rows of data for "addcmd".

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4
addcmd	Elch	Corner	List	Corners	SE (Slow)	TE (Typ)	FE (Fast)	
addcmd	Process	Corner	List	Corners	SS (Slow)	TT (Typ)	FF (Fast)	
addcmd	\$LENGTH	Delay/Distance	Soft Range	<none>	min			

### Kit Overview

For more information about the unbuffered DDR2 with PLL architectural signal integrity kit, including block diagrams, system configurations, transfer nets, and libraries, along with instructions

on how to customize the kit for a specific implementation, refer to the document `DDR2_Unbuffered_With_PLL.pdf` that is attached to this example as a supporting file.

## **See Also**

**Parallel Link Designer**

## Registered DDR3 Architectural Kit

Implement a Registered DDR3 interface for pre-layout analysis or post-layout verification.

This Registered DDR3 architectural signal integrity kit includes the transfer nets, timing models, waveform processing levels and generic models for a registered DDR3 interface. This includes generic buffer models for the DDR3 controller, register and SDRAM, along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open Registered DDR3 Kit

Open the Registered DDR3 kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("DDR3_Reg");
```

Parallel Link Designer: registered.edk Project: C:\MATLAB\DDR3\_Reg

File Edit Libraries Setup SimData Run Logs Reports Tools DOE

Pre-Layout Analysis Post-Layout Verification

ddr3\_controller  
ddr3\_controller  
ADDRESS  
ADD CMD

T1  
50ohm  
\$LENGTH

ddr3\_register  
ddr3\_register  
ADDRESS\_IN,COMMA...  
ADD CMD\_IN

State: default  
UI: 1.072ns  
Type: Data  
Topology: addcmd

addcmd addcmd\_reg\_2L ck ck\_reg\_2L control control\_reg dm dq dqs

Solution Space: Sheet Options:  Case Mode  STAT Mode  Tx Aggressor Parameters Global Options: Select DOE Sheet:   Show On Board  Show All Sheets

Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:
addcmd	Etch	Corner	List	Corners	TE (Typ)		
addcmd	Process	Corner	List	Corners	TT (Typ)		
addcmd	\$LENGTH	Delay/Distance	Soft Range	<none>	4.0in		

Reference Set: set1 Unset Current Set: set1 STAT Simulation Count: 0 Base SPICE Simulation Count: 16

### Kit Overview

For more information about the Registered DDR3 architectural signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, along with instructions on how to



customize the kit for a specific implementation, refer to the document DDR3\_Registered.pdf that is attached to this example as a supporting file.

**References**

- [1] JEDEC - DDR3 SDRAM Standard. JESD79-3E, July 2010.
- [2] JEDEC - Definition of the SSTE32882 Registering Clock Driver with Parity and Quad Chip Selects for DDR3/DDR3L/DDR3U RDIMM 1.5V/1.35V/1.25V Applications. JESD82-29A, December 2010.
- [3] JEDEC - Proposed DDR3-800/1066/1333/1600 tDS, TDH VIH.DQ, VIL.DQ and tVAC AC135 Spec. Committee: JC-42.3C. Committee Item Number: 1680.22.

**See Also**

**Parallel Link Designer**

## Unbuffered DDR3 Architectural Kit

Implement an unbuffered DDR3 interface for pre-layout analysis or post-layout verification.

This unbuffered DDR3 architectural signal integrity kit includes all the transfer nets, timing models, waveform processing levels and generic models for an unbuffered DDR3 interface. This includes generic buffer models for the DDR3 controller and SDRAM, along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open Unbuffered DDR3 Kit

Open the unbuffered DDR3 kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("DDR3_UBuff");
```

The screenshot displays the Parallel Link Designer software interface. The main window shows a circuit diagram with the following components and connections:

- ddr3\_controller** block connected to **ddr3\_sdr\*\_1** and **ddr3\_sdr\*\_2** blocks.
- Transfer net **addcmd\_2L** connects the controller to the SDRAMs.
- Component **T1** (50ohm, \$LENGTH) is on the main signal path.
- Component **T2** (50ohm, 0.1in) is a branch to the second SDRAM.
- Component **R1** (91ohm) is connected to a **V1** (0.75V) source.

The **Solution Space** table is visible at the bottom:

Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:
addcmd_2L	Etch	Corner	List	Corners	TE (Typ)		
addcmd_2L	Process	Corner	List	Corners	TT (Typ)		
addcmd_2L	\$LENGTH	Delay/Distance	Soft Range	<none>	4.0in		

Global Options: Select DOE Sheet: [Dropdown]  Show On Board  Show All Sheets

Reference Set: set1 Unset Current Set: set1 STAT Simulation Count: 0 Base SPICE Simulation Count: 10

### Kit Overview

For more information about the unbuffered DDR3 architectural signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, along with instructions on how to

customize the kit for a specific implementation, refer to the document `DDR3_Unbuffered.pdf` that is attached to this example as a supporting file.

**References**

[1] JEDEC - DDR3 SDRAM Standard. JESD79-3E, July 2010.

[2] JEDEC - Proposed DDR3-800/1066/1333/1600 tDS, TDH VIH.DQ, VIL.DQ and tVAC AC135 Spec. Committee: JC-42.3C. Committee Item Number: 1680.22.

**See Also**

**Parallel Link Designer**

## Unbuffered DDR3L Architectural Kit


Implement an unbuffered DDR3L interface for pre-layout analysis or post-layout verification.

DDR3L is a lower voltage version of standard DDR3 that utilizes a 1.35V I/O voltage instead of 1.5V. This unbuffered DDR3L architectural signal integrity kit includes all the transfer nets, timing models, waveform processing levels and generic models for an unbuffered DDR3L interface. This includes generic buffer models for the DDR3L controller and SDRAM, along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open Unbuffered DDR3L Kit

Open the unbuffered DDR3L kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("DDR3L_UBuff");
```

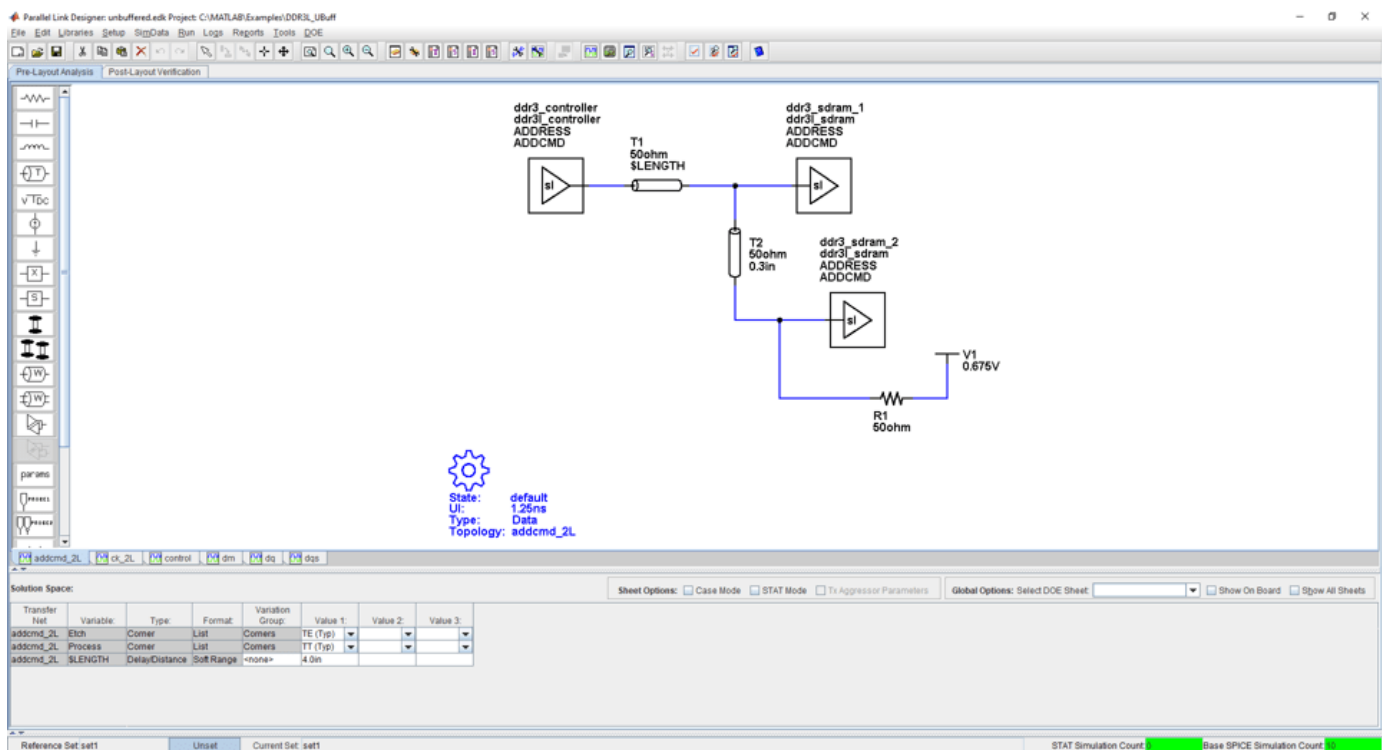

### Kit Overview

For more information about the unbuffered DDR3L architectural signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, along with instructions on how to customize the kit for a specific implementation, refer to the document `DDR3L_Unbuffered.pdf` that is attached to this example as a supporting file.

### References

[1] JEDEC - DDR3 SDRAM Standard. JESD79-3E, July 2010.

[2] JEDEC - Addendum No. 1 to JESD79-3 - 1.35 V DDR3L-800, DDR3L-1066, DDR3L-1333, and DDR3L-1600. JESD79-3-1, July 2010.

**See Also**

**Parallel Link Designer**

## DDR4 Implementation Kit for JEDEC Raw Card B


Implement a 3-slot DDR4 Raw Card B RDIMM interface for pre-layout analysis or post-layout verification.

This DDR4 Raw Card B RDIMM implementation signal integrity kit includes block diagrams, system configurations, transfer nets and libraries, which can be easily modified to match your exact implementation. You can modify the kit to match your exact DDR4 implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open DDR4 Raw Card B Kit

Open the DDR4 Raw Card B kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("DDR4_3Slot_RC_B");
```

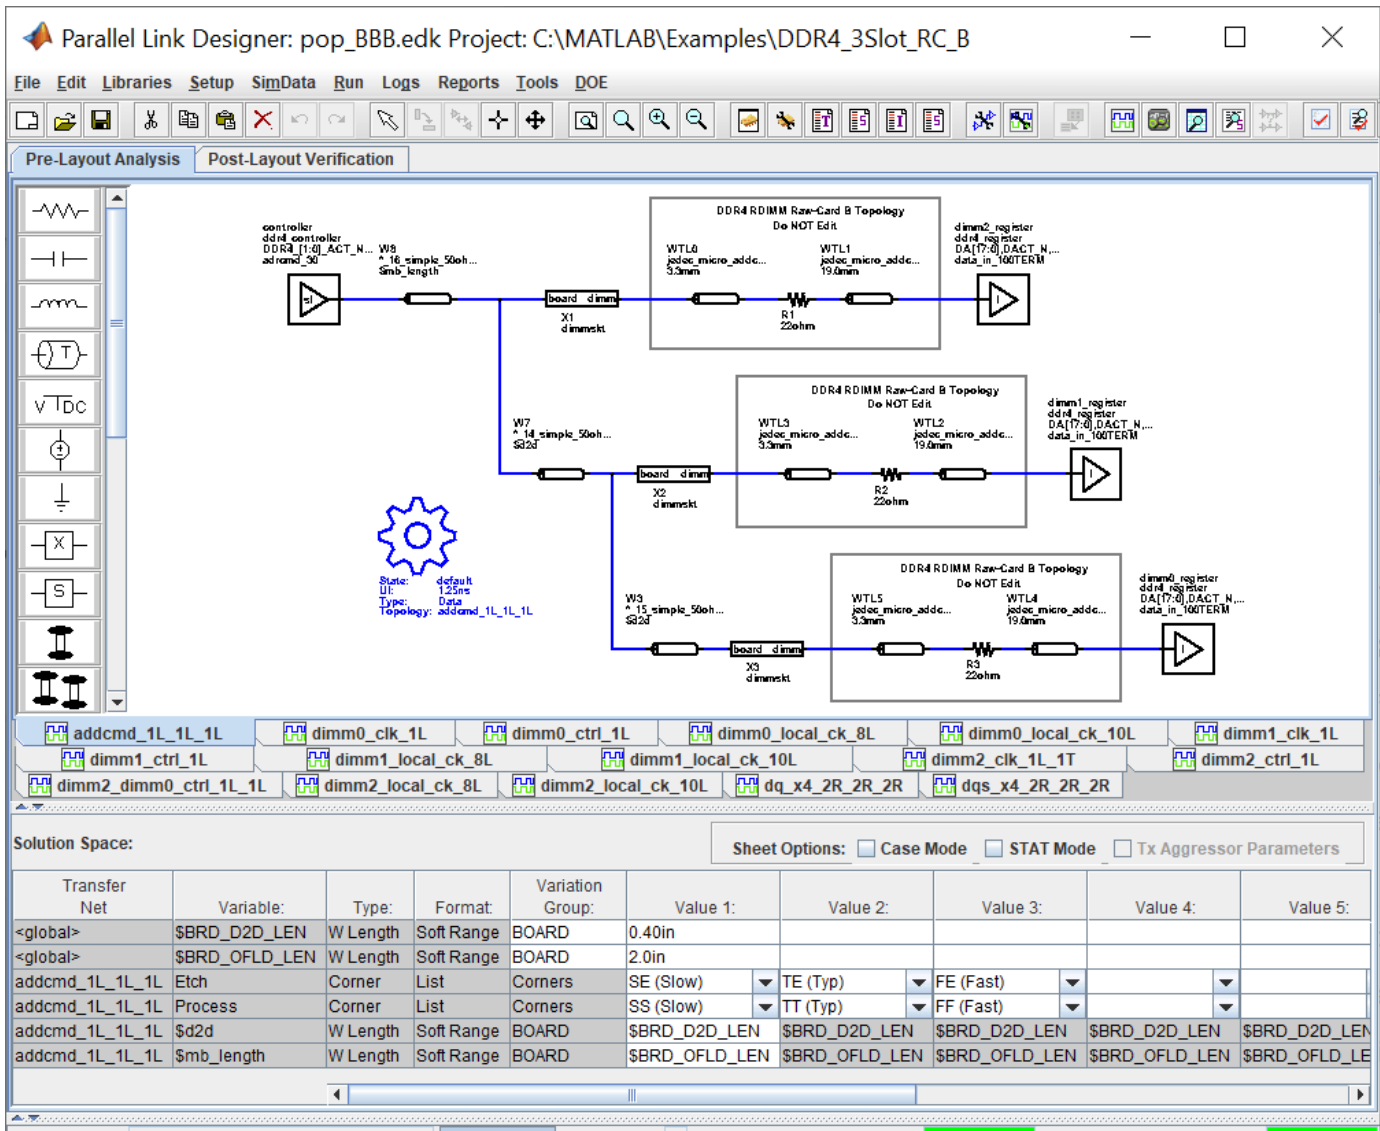

### Kit Overview

- Project name: DDR4\_3Slot\_RC\_B
- pop\_BBB interface: A 3-slot DDR4 interface with all 3 slots populated with RDIMM modules
- pop\_XBB interface: A 3-slot DDR4 interface with 2 slots populated with RDIMM modules
- pop\_XXB interface: A 3-slot DDR4 interface with 1 slot populated with RDIMM modules

There are two independent DDR4 channels in the generic controller: DDR4\_0 and DDR4\_1. Only one channel represented in pre-layout analysis. Post-layout analysis automatically extracts and simulates all channels. This is a 288-pin buffered DDR4 RDIMM. There are 72-bits per channel (64 data, 8 ECC) and 3 RDIMM slots per channel: dimm0, dimm1 and dimm2. Each slot can be populated with Raw Card B DDR4 Registered DIMM modules.

This kit supports both HSPICE and IsSpice4 simulators. No specific version of either simulator is required when running this kit.

For more information about the 3-slot DDR4 Raw Card B implementation signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, refer to the document DDR4\_3slot\_rcB.pdf that is attached to this example as a supporting file.

### **See Also**

**Parallel Link Designer**



## DDR4 Memory Down Implementation Kit

Implement a DDR4 memory down (MD) interface for pre-layout analysis or post-layout verification.


This DDR4 MD implementation signal integrity kit includes all the transfer nets, timing models, waveform processing levels, and simulation models for both single and dual rank memory down (discrete) configurations. This includes buffer models for the DDR4 memory controller as well as Micron SDRAMs. Also included are timing models with complete waveform processing levels. This kit implements x16 SDRAM configurations only.

You can modify the kit to match your exact DDR4 implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open DDR4 MD Kit

Open the DDR4 MD kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("DDR4_MD");
```

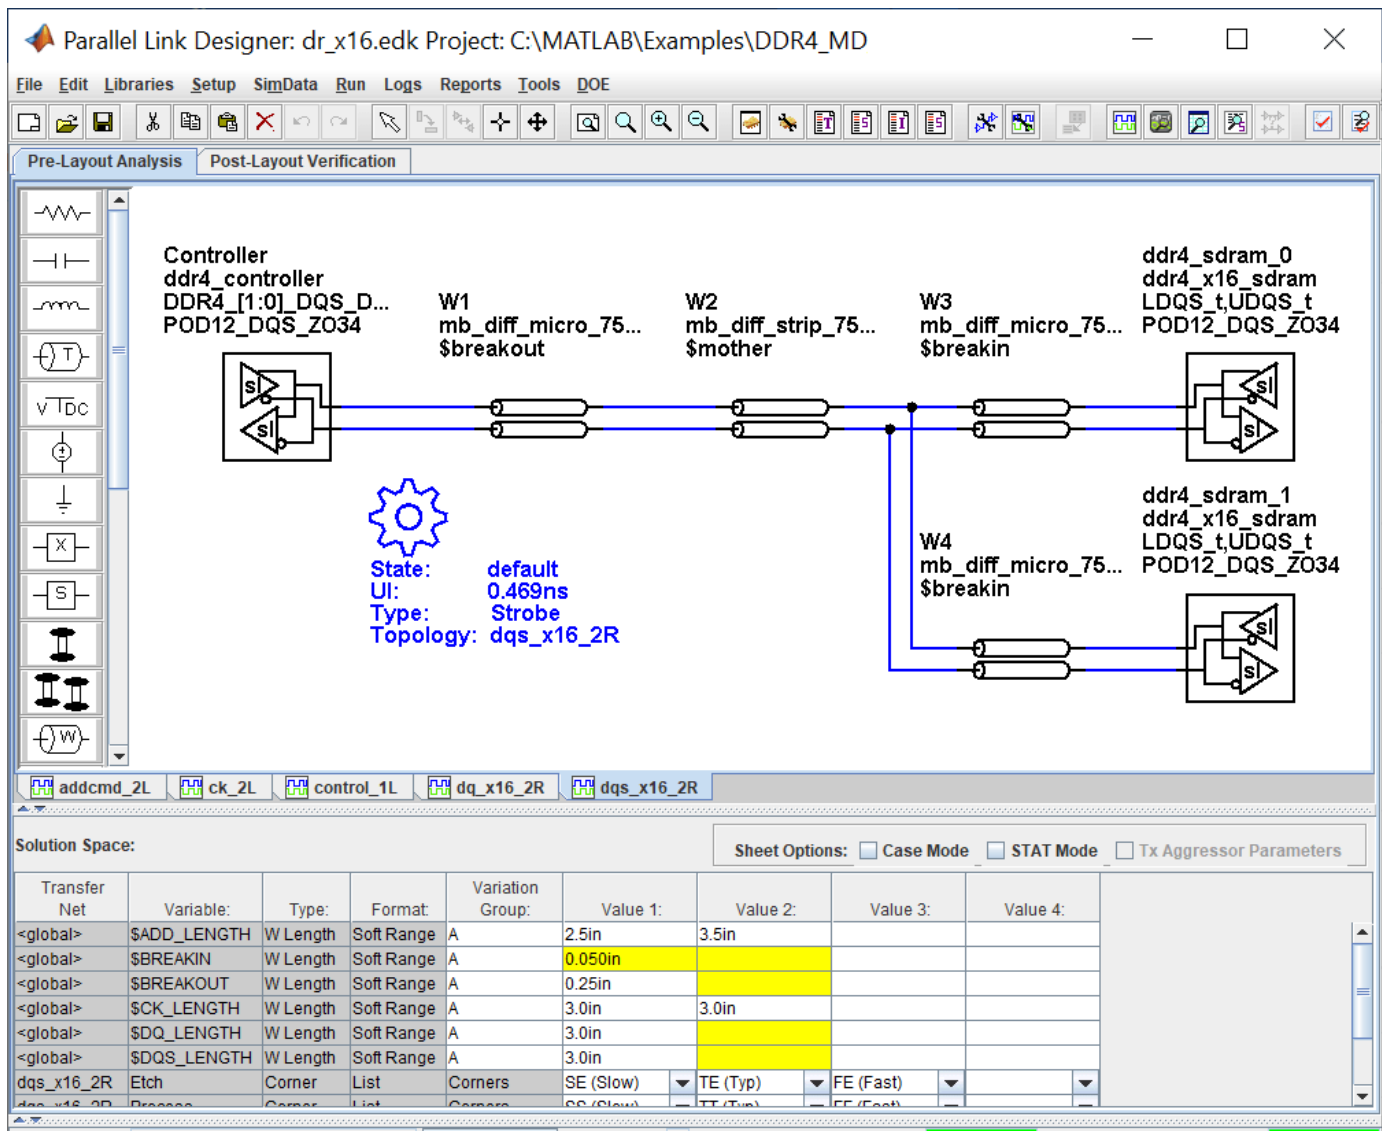

### Kit Overview

- Project name: DDR4\_MD
- Interface names: dr\_x16 and sr\_x16

This kit supports both HSPICE and IsSpice4 simulators. No specific version of either simulator is required when running this kit.

For more information about the DDR4 MD implementation signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, refer to the document DDR4\_MD.pdf that is attached to this example as a supporting file.

### See Also

#### Parallel Link Designer

# DDR5 Implementation Kit

Implement a 1-slot generic DDR5 RDIMM interface for pre-layout analysis or post-layout verification.


DDR5 is an industry standard dynamic memory format operating at a maximum of 6400M transfers per second. The standard is defined by JEDEC in the DDR5 JEDEC Specification JESD79-5.

This DDR5 implementation signal integrity kit includes all the transfer nets, waveform processing levels and simulation models for a 1-slot generic DDR5 RDIMM interface. This includes buffer models for a generic DDR5 controller, register and SDRAM, along with complete waveform processing levels. You can modify the kit to match your exact DDR5 implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

## Open 1-Slot DDR5 Kit

Open the 1-slot DDR5 kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("DDR5_RDimm_RC_X");
```

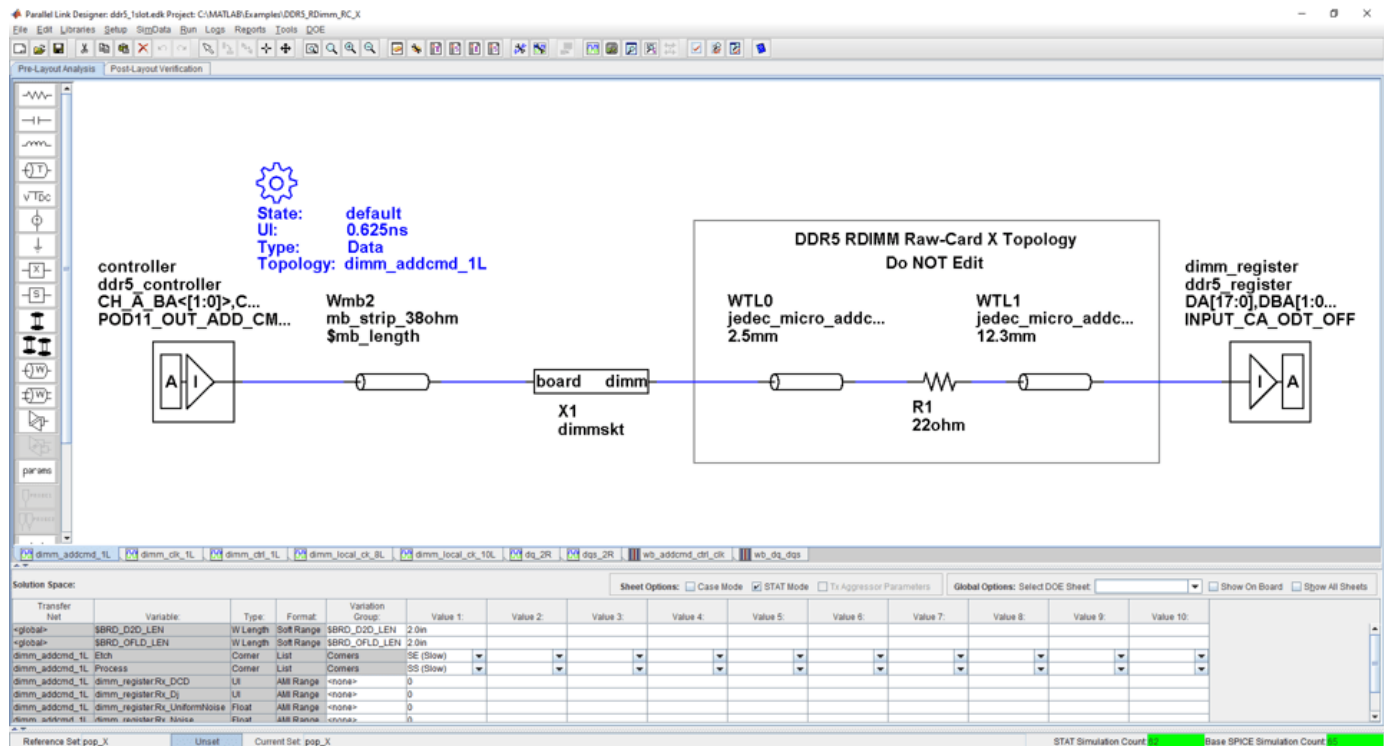

## Kit Overview

- Project name: DDR5\_RDimm\_RC\_X
- Interface name: ddr5\_1slot
- Two independent DDR5 channels in the generic controller: DDR5\_0 and DDR5\_1
- 72-bits per channel (64 data, 8 ECC)

- 288-pin buffered DDR5 RDIMM
- Address/Command 1N timing utilized (can be set up for 2N if desired)
- Data mask (DM) not used

The slot is populated with Raw Card “X” DDR5 Registered DIMM modules. Raw Card X used for setup and is not a JEDEC specified Raw Card.

- Number of SDRAMs: 18
- Package Type: Planar, 78 ball FPGA
- Number of Ranks: 2
- Width: x4

This kit supports both HSPICE and IsSpice4 simulators. No specific version of either simulator is required when running this kit.

For more information about the generic DDR5 using a mock Raw Card X RDIMM implementation signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, refer to the document `DDR5_RDimm_RC_X.pdf` that is attached to this example as a supporting file.

### References

[1] JEDEC: *DDR5 SDRAM*. JESD79-5, July 2020.

### See Also

**Parallel Link Designer**

# GDDR5 x32 Implementation Kit

Implement a 32-bit GDDR5 interface for pre-layout analysis or post-layout verification.

GDDR5 (double data rate type five) SGRAM (synchronous graphics random access memory) is a high bandwidth interface designed for use in graphics cards, game consoles and high-performance computing. GDDR5 interfaces are capable of speeds of 7 Gb/s, with the goal of reaching 8 Gb/s.


This GDDR5 implementation signal integrity kit includes all the transfer nets, timing models, waveform processing levels and simulation models for a GDDR5 x32 memory down interface. This includes buffer models for a generic GDDR5 controller and Micron x32 8 Gb SGRAM, along with timing models and complete waveform processing levels.

You can modify the kit to match your exact DDR5 implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

## Open GDDR5 x32 Kit

Open the GDDR5 x32 kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("GDDR5_x32");
```

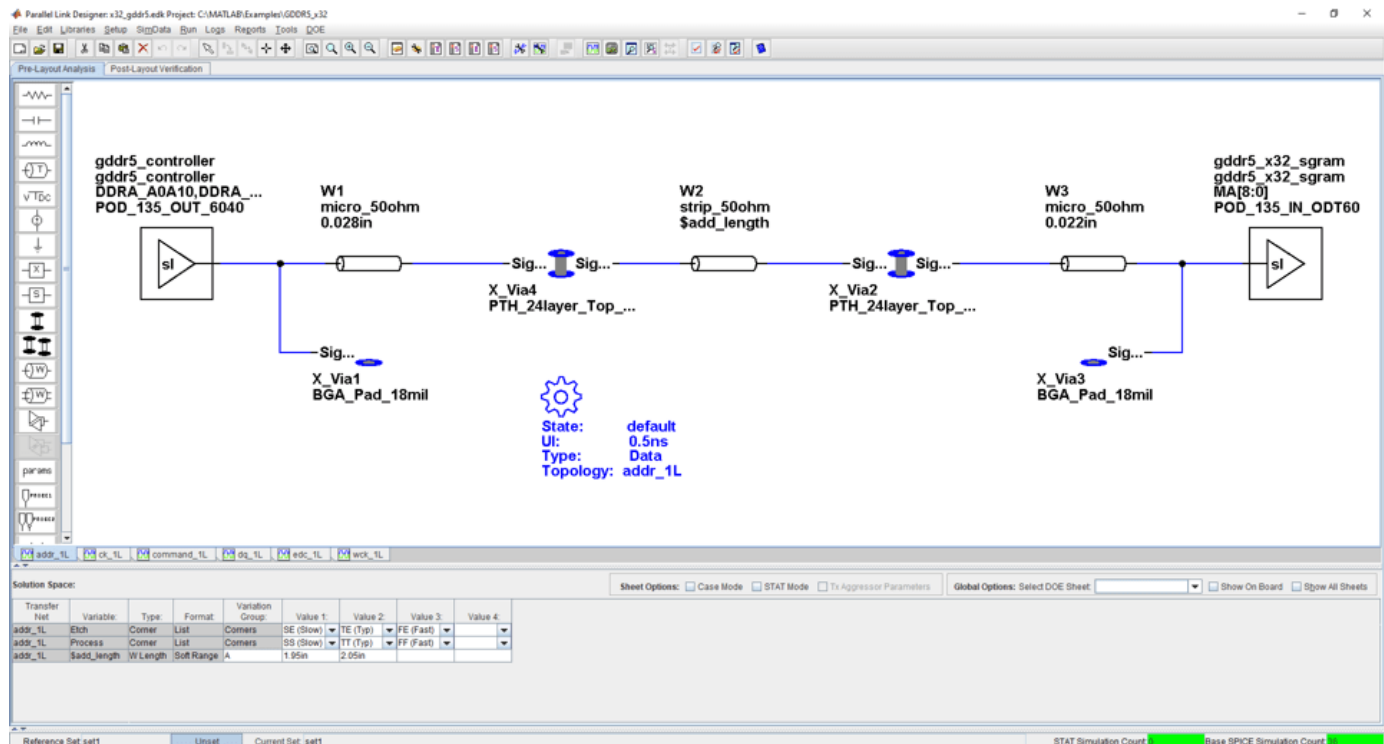

## Kit Overview

- Project name: GDDR5\_x32
- Interface name: x32\_gddr5

- Target data rate: 4 Gb/s (UI = 250 ps)

This kit supports both HSPICE and IsSpice4 simulators. No specific version of either simulator is required when running this kit.

For more information about the generic GDDR5 x32 implementation signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, refer to the document GDDR5\_x32.pdf that is attached to this example as a supporting file.

### References

- [1] JEDEC: Graphics Double Data Rate (GDDR5) SGRAM Standard. JESD212B.01. December 2013.
- [2] JEDEC: POD135 - 1.35V Pseudo Open Drain I/O. JESD8-21A. September 2013.
- [3] Micron: GDDR5 SGRAM for Networking - MT51K256M32 - 16Meg x32 I/O x16 Banks, 32Meg x16 I/O x16 Banks. Rev. A 5/14 EN.
- [4] Micron: Technical Note: GDDR5 SGRAM Introduction. Rev. A 2/14 EN.

### See Also

**Parallel Link Designer**

## GDDR6 x32 Architectural Kit

Implement a 32-bit GDDR6 interface for pre-layout analysis or post-layout verification.

GDDR6 (double data rate type six) SGRAM (synchronous graphics random access memory) is a high bandwidth interface designed for use in graphics cards, game consoles and high-performance computing. GDDR6 interfaces are capable of speeds up to 16 Gb/s.


This GDDR6 architectural signal integrity kit includes all the transfer nets, waveform processing levels, generic timing and simulation models for a GDDR6 interface. This includes generic buffer models for the GDDR6 controller and SGRAM, along with functional timing models and complete waveform processing levels, all of which are easily customizable.

You can modify the kit to match your exact DDR6 implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open GDDR6 x32 Kit

Open the GDDR6 x32 kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("GDDR6_x32");
```

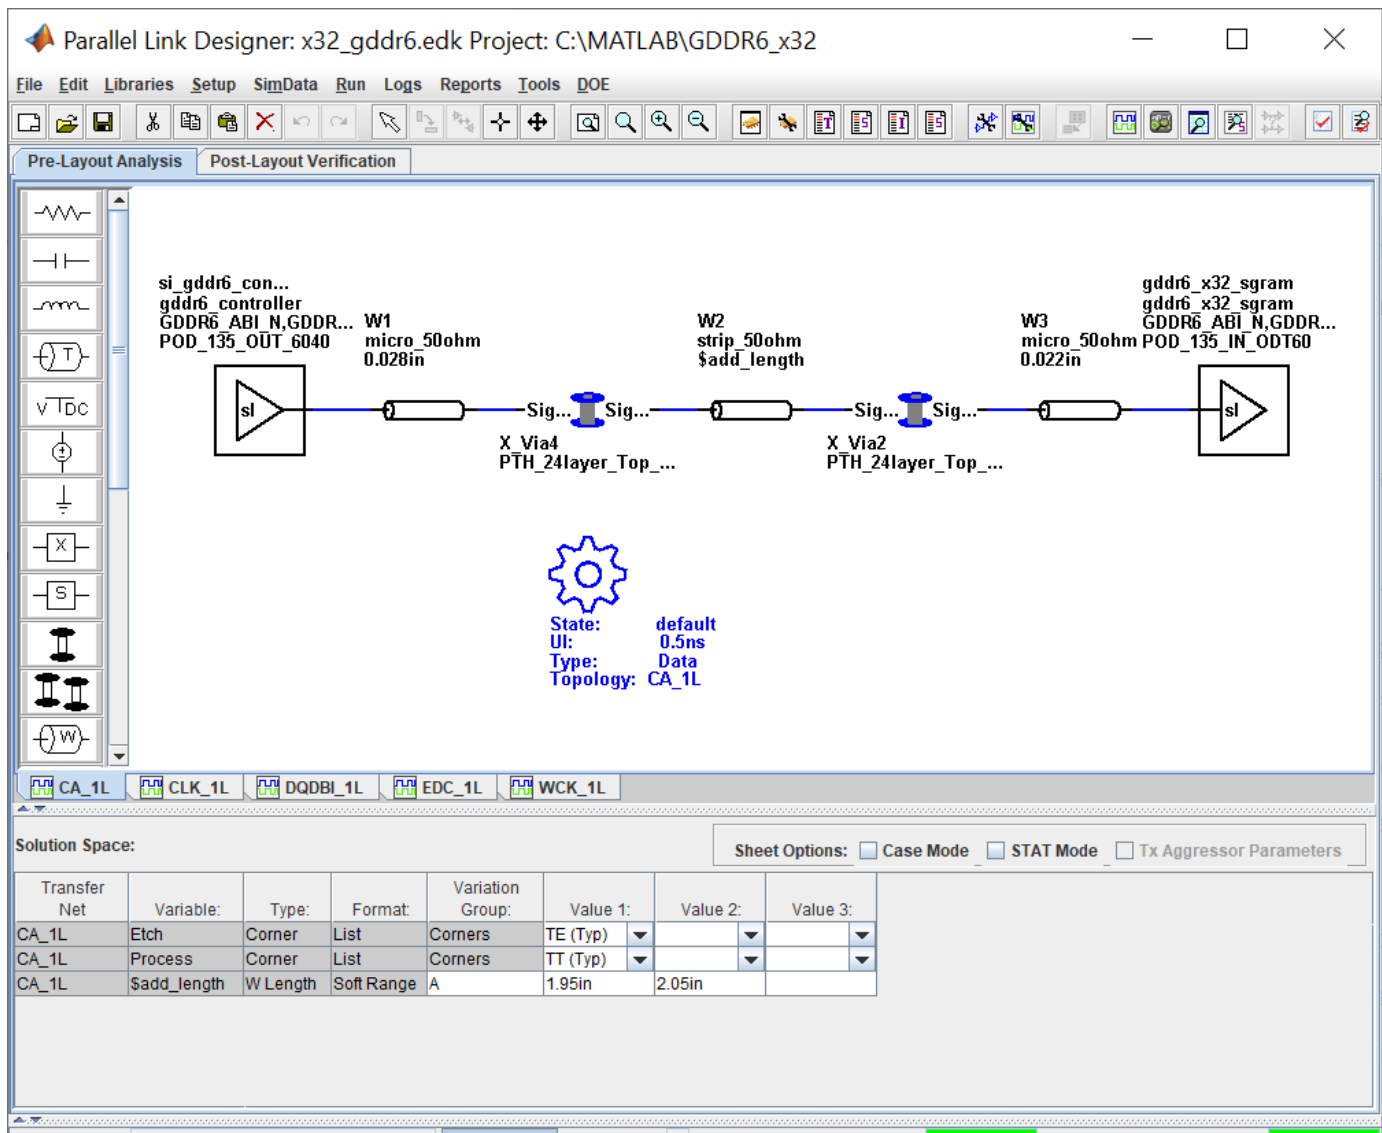

### Kit Overview

- Project name: GDDR6\_x32
- Interface name: x32\_gddr6
- Target data rate: 4 Gb/s (UI = 250 ps)
- 40 data bits per channel (32 data, 4 DBI and 4 EDC)
- 1.25V or 1.35V signaling selectable

This kit supports both HSPICE and IsSpice4 simulators. No specific version of either simulator is required when running this kit.

For more information about the generic GDDR6 x32 implementation signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, refer to the document GDDR6\_x32.pdf that is attached to this example as a supporting file.



**References**

[1] Graphics Double Data Rate 6 (GDDR6) SGRAM Standard." JEDEC. JESD250C. February 2021.  
<https://www.jedec.org/standards-documents/docs/jesd250c>.

**See Also**

**Parallel Link Designer**

## Low-Power DDR4 Architectural Kit


Implement a low-power DDR4 (LPDDR4) interface for pre-layout analysis or post-layout verification.

This LPDDR4 architectural signal integrity kit includes all the transfer nets, mask compliance checks, waveform processing levels and generic models for a LPDDR4 interface. This includes generic buffer models for the LPDDR4 controller and SDRAM, along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact LPDDR4 implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open LPDDR4 Kit

Open the LPDDR4 kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("LPDDR4");
```

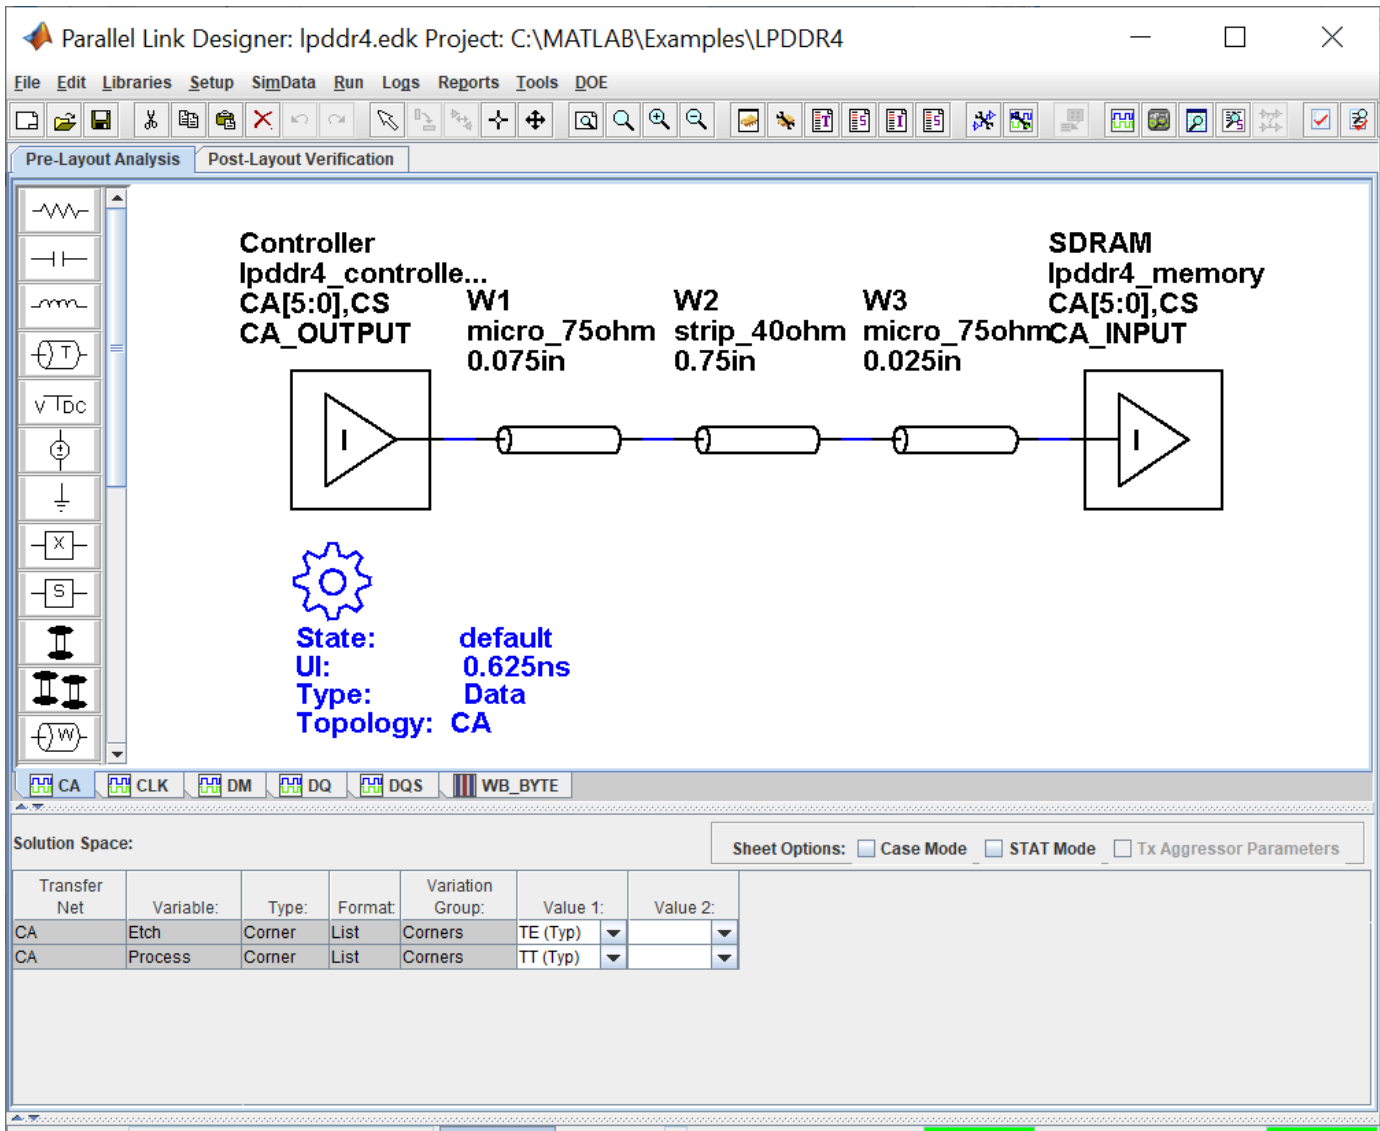

### Kit Overview

For more information about the LPDDR4 architectural signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, refer to the document LPDDR4.pdf that is attached to this example as a supporting file.

### See Also Parallel Link Designer

## Low-Power DDR5 Architectural Kit

Implement a low-power DDR5 (LPDDR5) interface for pre-layout analysis or post-layout verification.

This LPDDR5 architectural signal integrity kit includes all the transfer nets, mask compliance checks, waveform processing levels and generic models for a LPDDR5 interface. This includes generic buffer models for the LPDDR5 controller and SDRAM, along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact LPDDR5 implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open LPDDR5 Kit

Open the LPDDR5 kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("LPDDR5");
```

Parallel Link Designer: lpddr5.edk Project: C:\MATLAB\Examples\LPDDR5

File Edit Libraries Setup SimData Run Logs Reports Tools DOE

Pre-Layout Analysis Post-Layout Verification

Controller  
lpddr5\_controle...  
WCK[1:0]\_T  
WRITE\_STROBE

W2  
micro\_40ohm  
.075in

W4  
diff\_strip\_80ohm  
0.5in

W6  
micro\_40ohm  
.075in

SDRAM  
lpddr5\_memory  
WCK[1:0]\_T  
WCK\_ODT\_OFF

State: default  
UI: 0.312ns  
Type: Strobe  
Topology: WCK

Solution Space: Sheet Options:  Case Mode  STAT Mode  Tx Aggressor Parameters Global Options: Select DOE Sheet:   Show On Board  Show All Sheets

Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:
WCK	Etch	Corner	List	Corners	TE (Typ)	
WCK	Process	Corner	List	Corners	TT (Typ)	

Reference Set: set1 Unset Current Set: set1 STAT Simulation Count: Base SPICE Simulation Count:

**Kit Overview**

For more information about the LPDDR5 architectural signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, refer to the document LPDDR5.pdf that is attached to this example as a supporting file.

**See Also**

**Parallel Link Designer**

## MIPI D-PHY Parallel Link Compliance Kit

Test the compliance to the MIPI D-PHY specification with respect to clock-to-data timing in the forward direction and waveform quality in the reverse transmission using **Parallel Link Designer**.

This kit can be used for testing compliance with respect to the clock-to-data timing in the forward direction (Controller to Peripheral). The reverse transmission (Peripheral to Controller) operates at  $\frac{1}{4}$  the data rate of the forward transmission. The specification is vague on timing requirements for these transfers and expects the logic implementation of the Controller to train itself during the synchronous calibration mode to ensure timing is met for reverse transmission. Thus this kit is configured to test waveform quality only for reverse transmission. Lastly, this kit does not include any LP mode functionality.

### Open MIPI D-PHY Kit

Open the MIPI D-PHY kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("MIPI_D_PHY_PLD_Kit");
```

MATLAB recommends Java Heap Memory set to least 8192MB.

Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory

Current Java Heap: 566MB with 65MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.

Tue Nov 22 09:31:45 EST 2022 - Starting ParallelLinkDesigner

The screenshot displays the Parallel Link Designer application window. The main workspace contains a block diagram with three components: 'Master' (LS\_Master\_Data), 'W1' (ls\_diff\_strip\_10...), and 'Slave' (LS\_Slave\_Data). A blue signal line connects the Master to the Slave through the channel model. A text box above the diagram states 'This sheet is for data rates up to 1.5Gbps'. A settings panel on the left shows 'State: default', 'UI: 0.571ns', 'Type: Data', and 'Topology: LS\_Data'. The bottom of the window features a 'Solution Space' table and various simulation options.

Transfer	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4
LS_Data	Elch	Corner	List	Corners	SE (Slow)	TE (Typ)	FE (Fast)	
LS_Data	Process	Corner	List	Corners	SS (Slow)	TT (Typ)	FF (Fast)	
LS_Data	\$W1.Length	W.Length	Soft Range	<none>	9.3in			

**Kit Overview**

- Project name: MIPI\_D\_PHY\_PLD\_Kit
- Interface name: MIPI\_D\_Phy

The MIPI D-PHY kit defines schematic sheets for high speed data rates above 1.5 Gb/s and low speed data rates less than or equal to 1.5 Gb/s. The kit can be simulated with either IsSPICE (the default) or HSPICE.

For more information about the MIPI D-PHY channel compliance schematics, transfer net properties, and compliance rules, refer to the document MIPI\_D\_Phy\_PLD\_Kit.pdf that is attached to this example as a supporting file.

**References**

[1] MIPI D-PHY Specification. mipi\_D-PHY\_specification\_v1-2.pdf. Rev. 1.2.

**See Also**

**Parallel Link Designer**

**Related Examples**

- “MIPI D-PHY Serial Link Compliance Kit” on page 12-31

## CIO RLDRAM II Architectural Kit


Implement a common I/O (CIO) RLDRAM II interface for pre-layout analysis or post-layout verification.

This CIO RLDRAM II architectural signal integrity kit includes all transfer nets, timing models, waveform processing levels and generic models for a CIO RLDRAM II interface. This includes generic buffer models for the controller and RLDRAM along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open CIO RLDRAM II Kit

Open the CIO RLDRAM II kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("RLDRAM2_CIO");
```

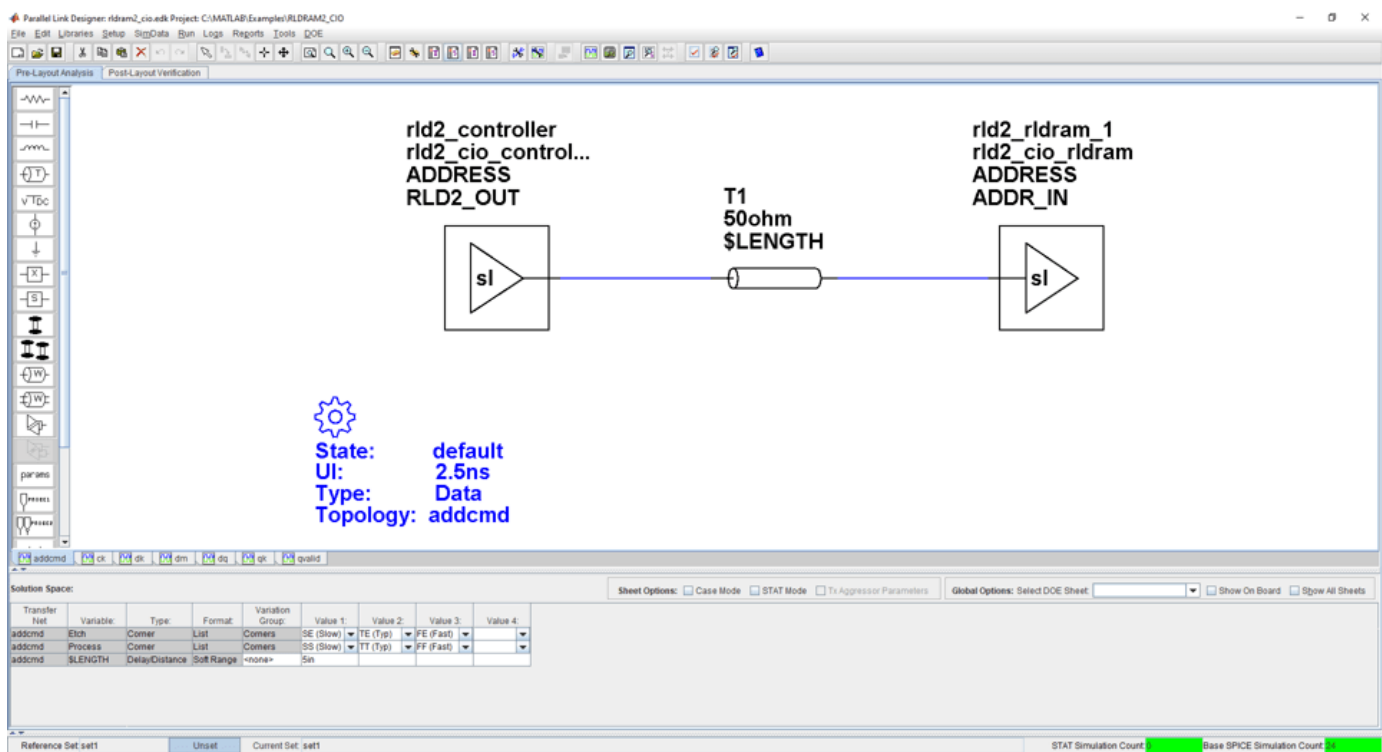

### Kit Overview

For more information about the CIO RLDRAM II architectural signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, along with instructions on how to



customize the kit for a specific implementation, refer to the document RLDRAM2\_CIO.pdf that is attached to this example as a supporting file.

**See Also****Parallel Link Designer**

## SIO RLDRAM II Architectural Kit

Implement a separate I/O (SIO) RLDRAM II interface for pre-layout analysis or post-layout verification.

This SIO RLDRAM II architectural signal integrity kit includes all transfer nets, timing models, waveform processing levels and generic models for an SIO RLDRAM II interface. This includes generic buffer models for the controller and RLDRAM along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open SIO RLDRAM II Kit

Open the SIO RLDRAM II kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("RLDRAM2_SIO");
```

Transfer Net	Variable	Type	Format	Variation Group	Value 1	Value 2	Value 3	Value 4
addcmd	Elch	Corner	List	Corners	SE (Slow)	TE (Typ)	FE (Fast)	
addcmd	Process	Corner	List	Corners	SS (Slow)	TT (Typ)	FF (Fast)	
addcmd	\$LENGTH	Delay/Distance	Soft Range	<none>	5m			

### Kit Overview

For more information about the SIO RLDRAM II architectural signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, along with instructions on how to

customize the kit for a specific implementation, refer to the document RLDRAM2\_SIO.pdf that is attached to this example as a supporting file.

**See Also****Parallel Link Designer**

## RLDRAM III Architectural Kit


Implement a RLDRAM III interface for pre-layout analysis or post-layout verification.

This RLDRAM III architectural signal integrity kit includes all transfer nets, timing models, waveform processing levels and generic models for a RLDRAM III interface. This includes generic buffer models for the controller and RLDRAM along with fully functional timing models and complete waveform processing levels. You can modify the kit to match your exact implementation. Then, perform complete pre-layout solution space analysis and/or full post-layout verification for waveform quality and timing margins.

### Open RLDRAM III Kit

Open the RLDRAM III kit in the **Parallel Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("RLDRAM3");
```

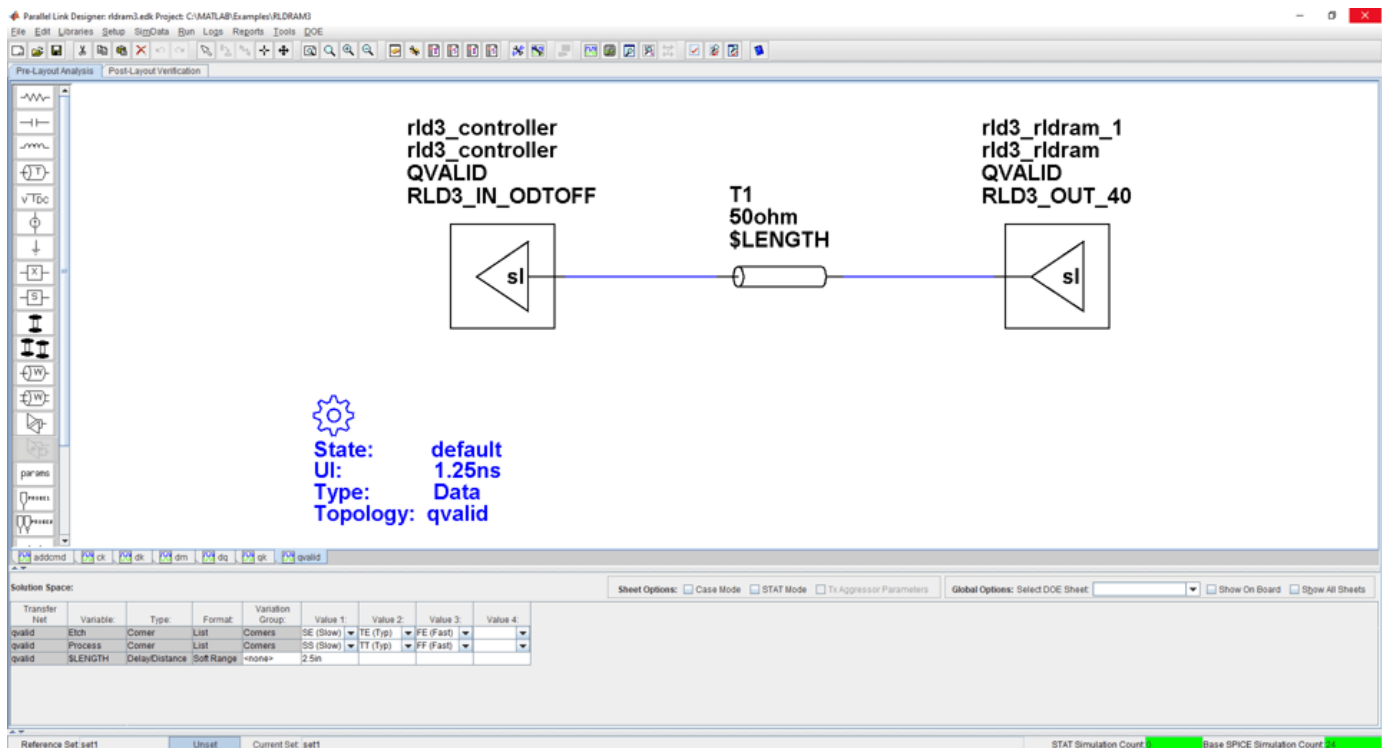

### Kit Overview

For more information about the RLDRAM III architectural signal integrity kit, including block diagrams, system configurations, transfer nets and libraries, along with instructions on how to customize the kit for a specific implementation, refer to the document [RLDRAM3.pdf](#) that is attached to this example as a supporting file.

### References

[1] Micron - 576Mb: x18, x36 RLDRAM3 Features (Advance datasheet). [576\\_rldram3.pdf](#) - Rev. B 1/12 EN.

[2] Micron - TN-44-01: Technical Note, RLDRAM3 Design Guide.  
TN\_44\_01\_RLDRAM\_3\_Design\_Guide.fm - Rev. A 8/11 EN.

## **See Also**

**Parallel Link Designer**

## Run Parallel Simulations in Signal Integrity Toolbox

You can easily generate many thousands of SPICE or Channel Analysis simulations using the **Serial Link Designer** and **Parallel Link Designer** apps. By default, the apps run all simulations sequentially on the local computer, which can take a significant amount of time to complete. However, if you have a Parallel Computing Toolbox license, then you can run multiple simulations in parallel and considerably reduce the time required to run the complete set of simulations.

Using the default Parallel Computing Toolbox settings, most users can run parallel simulations quickly and efficiently without making any changes to the settings. However, in some cases, running simulations with the default settings on your local machine can reduce the interactive performance and impede your ability to do other work at the same time. Likewise, running too many simulations at once on a multiuser machine can negatively impact other users. If you find that the default settings negatively impact you or other users on a shared machine, then you can modify the parallel computing settings.

Here are some useful parallel computing concepts:


- **Task:** A list of operations. In Signal Integrity Toolbox, these operations are individual simulations. Each task can consist of one or multiple simulations run sequentially.
- **Cluster:** The location where tasks will be performed. A cluster can be a single machine that can execute multiple threads simultaneously, such as a multiprocessor or multicore system, or a system with one or more CPUs. A cluster can also consist of a group of remote machines.
- **Worker:** A MATLAB® computational engine that runs in the background without a graphical desktop.
- **Parallel pool:** A set of MATLAB workers running in parallel on a cluster.

### Configure Local MATLAB Cluster for Parallel Simulations

Using the default Parallel Computing Toolbox settings, the built-in local MATLAB cluster uses all available cores (or logical processors) on a machine.

When performing local simulations, Parallel Computing Toolbox uses a parallel pool. Each worker in a parallel pool launches its own instance of MATLAB. Therefore, the workers can use a significant amount of memory when running. Make sure that a minimum of 4 GB RAM per worker is available to avoid an impact on the overall performance of the target machine.

You can adjust the number of workers used in parallel simulations using the Cluster Profile Manager. This figure shows Cluster Profile Manager with a custom cluster called **si\_simulations** that uses ten workers.

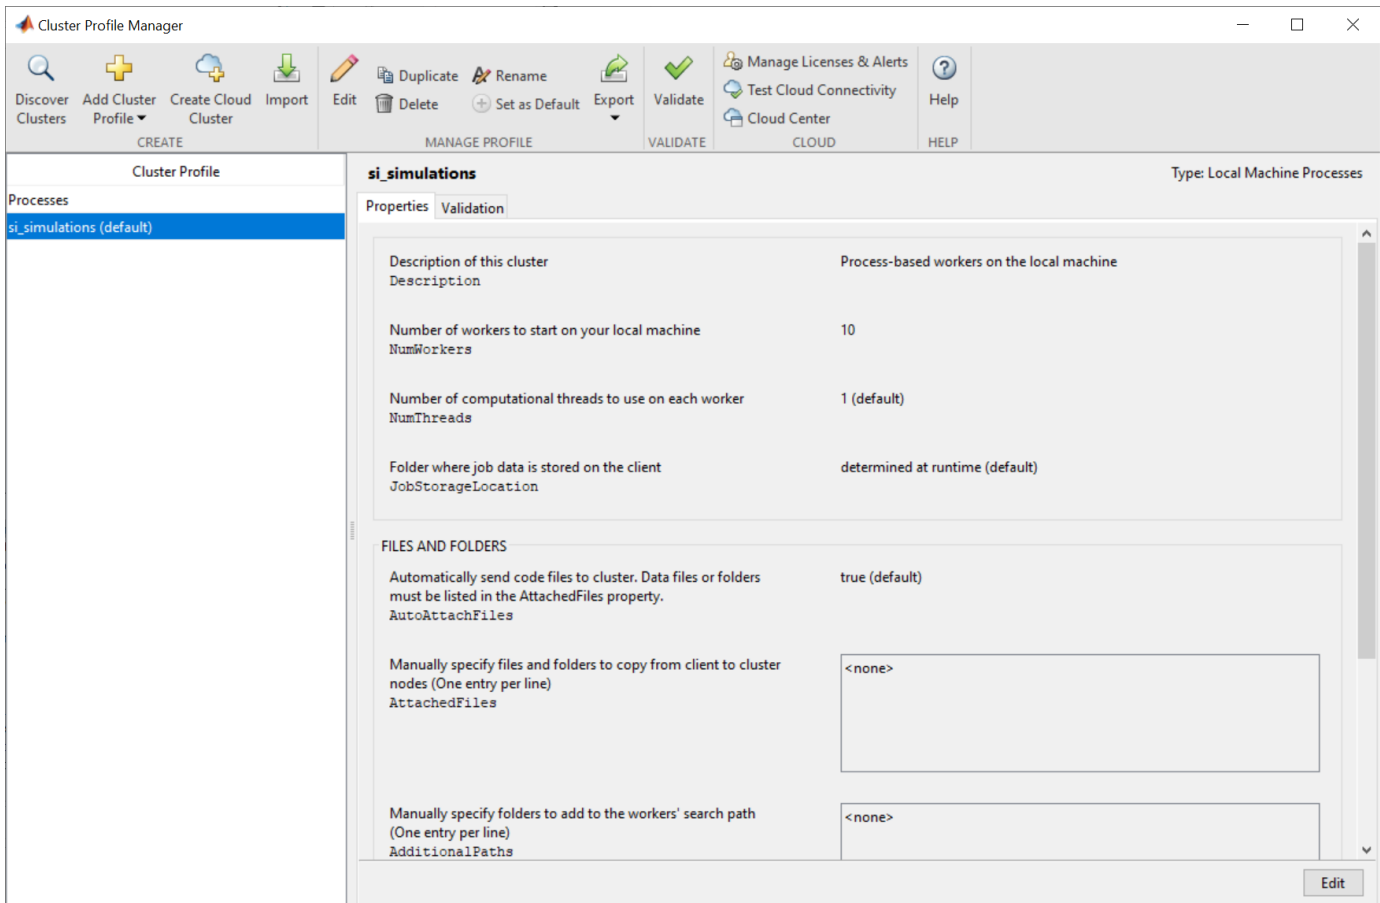

Open the Cluster Profile Manager from the MATLAB toolstrip by selecting the **Parallel** drop-down list from the **Environment** tab, then select **Create and Manage Clusters**. Follow these steps to add and configure a cluster suitable for your signal integrity simulations in the Cluster Profile Manager:

- 1 Highlight the default **Processes** Cluster Profile
- 2 Select Duplicate from the toolbar menu. This action creates a copy of the local profile named **Processes\_Copy**.
- 3 Rename the **Processes\_Copy** profile to **si\_simulations** or to a name you prefer by double-clicking the profile name and editing the text box.
- 4 With the **si\_simulations** profile highlighted, click the **Edit** button to modify the **si\_simulations** profile.
- 5 Change the number of workers (**NumWorkers**) text field to the desired number of workers. A good starting point is 4 GB per worker. For example, on a machine with 12 logical processors and 64 GB of memory, setting the number of workers to 10 should allow for good interactive performance without using all the resources on the machine. However, on the same machine with only 32 GB of memory, setting the number of workers to 6 keeps you from running out of memory.

When running on a remote cluster, use a similar approach. However, if the remote machine is shared across multiple users, reduce the number of workers to allow good performance for all users. You may need to adjust this number in your cluster based on the memory and CPU demands on your cluster and the machine hosting your cluster.

Click **Done** to save the changes.

- 6 With **si\_simulations** highlighted, click the **Set as Default** button in the toolbar menu.
- 7 Finally, test that everything is working correctly by clicking the **Validate** button. If everything works, you can close the Cluster Profile Manager.

Parallel Computing Toolbox supports many different cluster types such as Microsoft® Windows® HPC Server or IBM Spectrum LSF®. For more information about configuring these clusters, see “Discover Clusters and Use Cluster Profiles” (Parallel Computing Toolbox) and “Get Started with MATLAB Parallel Server” (MATLAB Parallel Server).

## Adjust Cluster Settings for Signal Integrity Toolbox

To edit the cluster settings in the **Serial Link Designer** and **Parallel Link Designer** apps, select **Setup > User Preferences**, then select the **Simulation** tab.

The screenshot shows the 'User Preferences' dialog box with the 'Simulation' tab selected. The 'SPICE Simulator' section has 'IsSpice4' selected. The 'Local HSPICE Path' section has 'Default' selected. The 'Cluster HSPICE Path' section has 'Default' selected. The 'Parallel Computing Toolbox Clusters' section shows 'Default Cluster: si\_simulations'. There are two dropdown menus for 'Cluster Selection' (SPICE and Channel Analysis) both set to '<Default Cluster>'. To the right, there are two spinners for 'Number of Simulations Per Task' (SPICE and Channel Analysis) both set to '1'. At the bottom of this section are buttons for 'Parallel', 'Help', 'Test...', and 'Refresh Clusters'. The 'Local to Remote Path Maps' section contains a table with two columns: 'Local Path' and 'Remote Path'. The 'File Completion Retry' section has 'Completion Retry Count' and 'Completion Retry Pause' both set to '3'. At the very bottom are 'OK' and 'Cancel' buttons.

### SPICE Simulator

For **Parallel Link Designer**, select either the IsSpice4 or HSPICE simulator using the radio buttons. **Serial Link Designer** only supports HSPICE simulations.



Signal Integrity Toolbox provides an unlimited number of IsSpice4 licenses. The only limit on the number of IsSpice4 and Channel Analysis simulations that can be run in parallel is the size of your cluster.

Running HSPICE simulations requires a separate HSPICE license and installation. The number of HSPICE simulations is limited to the number of HSPICE licenses that you have.

### HSPICE Paths

You can specify the path to the HSPICE executable whether running a single simulation at a time locally or many simulations in parallel on a cluster. The **Default** setting picks the version of HSPICE specified by the HSPICE system environment variables. The **Other** setting allows a specific version of HSPICE to be used when multiple versions are installed.

You can add additional HSPICE flags using the **Other** path. For example, to enable multithreading, use: `C:/synopsys/Hspice_P-2019.06-SP1/WIN64/hspice.exe -mt 2`.

### Parallel Computing Toolbox Clusters

You can specify different clusters for SPICE and Channel Analysis simulations. If you do not require different clusters for SPICE and Channel Analysis and will not concurrently run other MATLAB functions (such as `parfor`) on a parallel cluster while you are running simulations, then select **<Default Cluster>** for both SPICE and Channel Analysis.

Choose the default cluster from the MATLAB toolstrip by selecting the **Parallel > Select a Default Cluster** drop-down list.

The **Parallel** button enables and disables parallel simulations. The **Test** button is similar to the **Validate** function in the Cluster Profile Manager, but also includes some additional tests specific to Signal Integrity Toolbox. Test the final setup to verify that everything is set up and working correctly.

### Number of Simulations Per Task

The **Number of Simulations Per Task** specifies how many simulations are submitted to a worker. By default, a single simulation is sent to each worker. When a worker completes a simulation, a new single simulation is sent to that worker. Although the overhead of this process is low, when running very fast simulations (less than 1 second per simulation), it can be advantageous to submit multiple simulations to a worker. Unless you are consistently running very fast simulations, leave this setting at 1.

### Local to Remote Path Maps

The local path refers to a network drive as seen from the local machine. The remote path refers to the path as seen from the cluster machine. Map the local path to the remote path when using a queuing system such as MATLAB Job Scheduler (MJS) or IBM Spectrum LSF®. The project must be on a network drive that is accessible by both the local machine and the remote machine. For example, a network drive mapped as `Z:/` on a local Windows machine might be seen as `/hw/projects` from a remote Linux machine that runs the remote simulation.

Path maps are not required when running local parallel pools or Microsoft Windows HPC Server clusters.

## File Completion Retry

**Completion Retry Count** specifies how many times Signal Integrity Toolbox will retry its completion check before flagging a simulation as incomplete and failed. **Completion Retry Pause** specifies the delay, in seconds, between each completion check retry.

In some remote server and remote disk environments, the simulation output files are not completely written to disk when the simulation completes. If you see simulation errors when simulations appear to have run to completion, try increasing the value of these two parameters.

## Run Parallel Simulations


First, set up the simulation parameters to populate the solution space. For example, this figure shows the Solution Space panel with parameters set up according to the example “Analyze Parallel Links with Parallel Link Designer”. The **Base SPICE Simulation Count** shows that there are 15 simulations.

Solution Space: Sheet Options:  Case Mode  STAT Mode  Tx Aggressor Parameters

Transfer Net	Variable:	Type:	Format:	Variation Group:	Value 1:	Value 2:	Value 3:	Value 4:	Value 5:	Value 6:
channel	Etch	Corner	List	Corners	TE (Typ)					
channel	Process	Corner	List	Corners	TT (Typ)					
channel	\$Stl_res	Resistance	Soft Range	<none>	50ohm	75ohm	100ohm			
channel	\$Stl_len	W Length	Soft Range	<none>	2.0in	4in	6in	8in	10in	

Reference Set: set1 Unset Current Set: set1 STAT Simulation Count: 0 Base SPICE Simulation Count: 15

To run the simulations, select **Run > Simulated Selected**. The Prelayout Simulation dialog box opens.

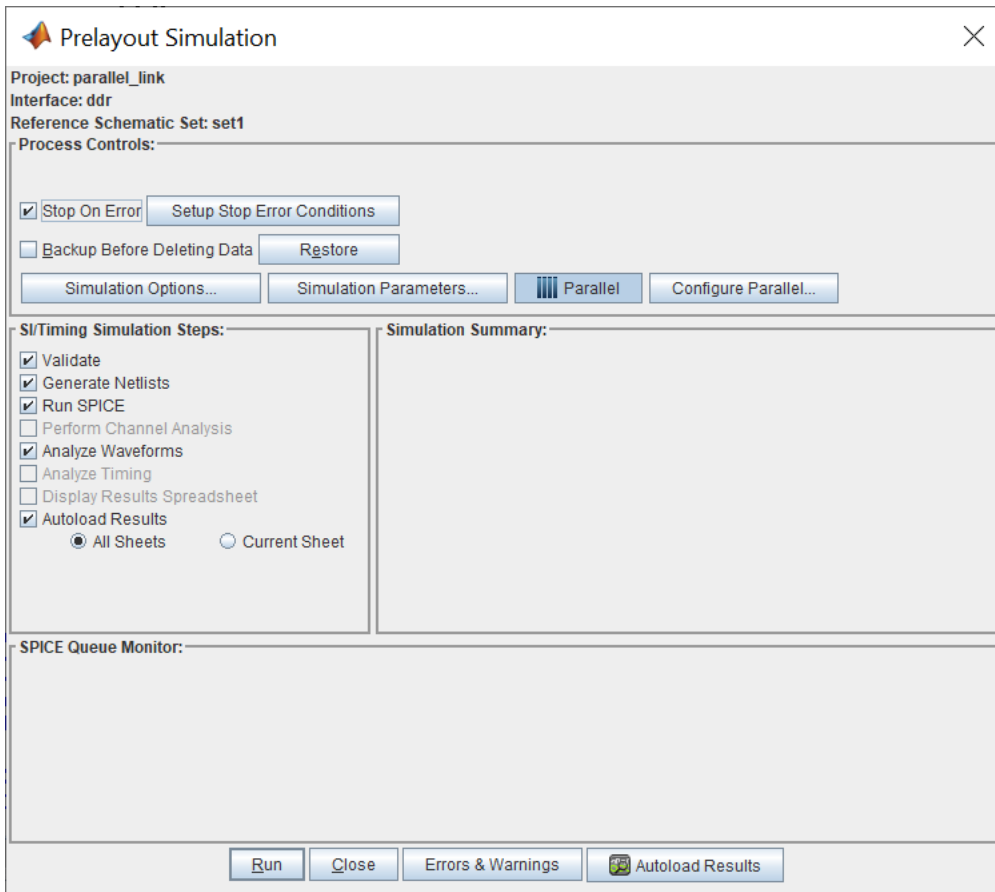


If you have Parallel Computing Toolbox, then the **Parallel** button should already be selected. Toggle this selection to enable and disable the parallel simulations. With the **Parallel** button enabled, launch the simulations by clicking **Run**. There is a short delay while the parallel pool starts.

Note: The startup time of the parallel pool is only required for the first set of simulations. After the parallel pool is up and running, subsequent simulations will launch immediately. By default, the parallel pool will remain up for 30 minutes. This value can be adjusted using the Parallel Computing Toolbox Preferences dialog box.

You can monitor the simulations using the SPICE Queue Monitor panel of the Prelayout Simulation dialog box. The SPICE Queue Monitor shows this information:

- Total number of simulations submitted
- Number of simulations completed
- Number of simulations completed without errors
- Number of simulations currently running
- Number of simulations still waiting in the queue
- Total elapsed time
- Project finish time based on the number of simulations submitted and the time taken by the already completed simulations to run

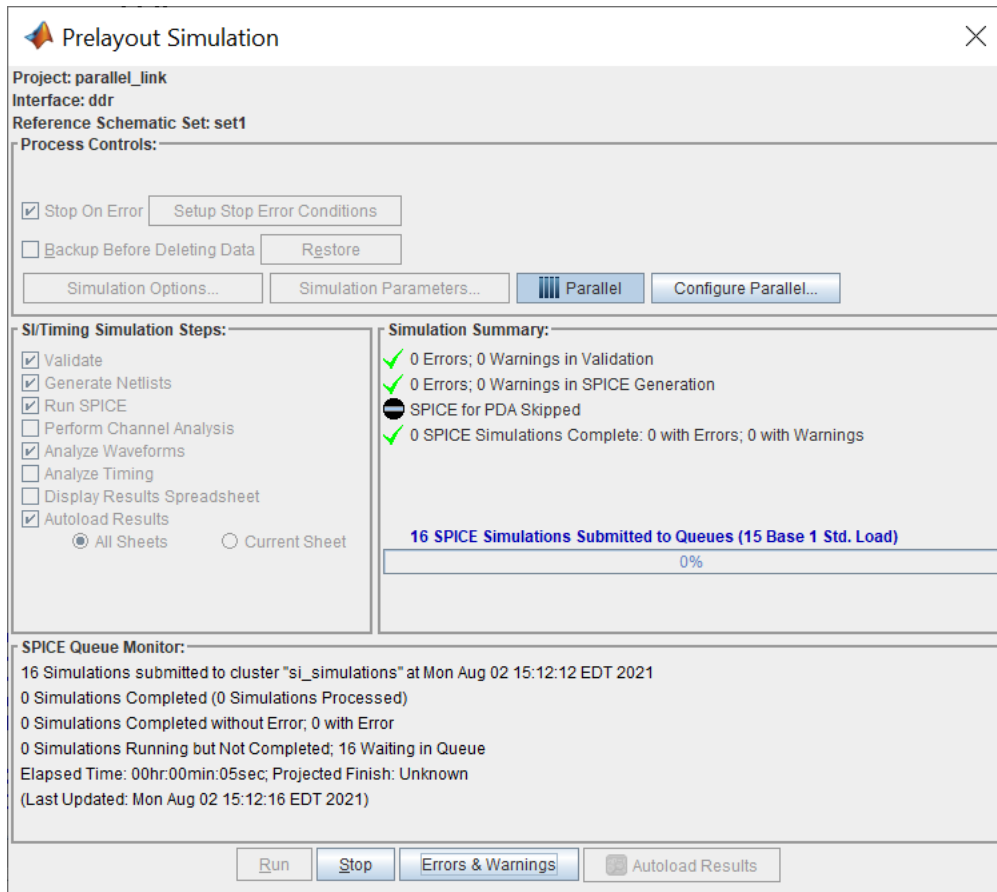

You can also track the status of simulations using the Job Monitor in MATLAB. The Job Monitor shows the number of tasks that can currently be run in the parallel pool (equivalent to the number of workers here) and the current state of the parallel pool. The description in this example reads Interactive Pool and the State reflects the current state of the parallel pool and not the state of the current set of simulations. Entries in the Job Monitor are never automatically purged and will accumulate over time. You can periodically delete old entries by selecting them, right-clicking, and selecting **Delete**. For more information, see “Job Monitor” (Parallel Computing Toolbox).

## See Also

### Related Examples

- “Analyze Serial Links with Serial Link Designer”
- “Analyze Parallel Links with Parallel Link Designer”

### External Websites

- Product Requirements & Platform Availability for Parallel Computing Toolbox

## CEI 112G-VSR Compliance Kit

CEI 112G-VSR is a common electrical interface (CEI) implementation agreement that supports 112 Gb/s over “Very Short Reach” (VSR) optical or electrical chip-to-module applications. The CEI-112G-VSR clause is a part of the Common Electrical I/O Implementation Agreement. The CEI 112G-VSR interface relies on PAM4 modulation to increase the bandwidth in VSR channels. The PAM4 modulation can transmit 4-symbols per UI instead of 2-symbols per UI that the NRZ modulation transmits.

The CEI 112G-VSR is designed for bidirectional analysis of a host board and an optical module board. The total channel loss at Nyquist or Fb/2 is approximately 16 dB. The VSR channel consists of a host board, a mated connector and a module board. This represents the connection between the transmitting and receiving data across the channel. The kit contains sheets that include design and characterization details for a specific host or a module board design and characterization. Network characterization is set up for insertion and return loss testing to the compliance masks, and channel FEXT/NEXT crosstalk is included in multi-channel sheets to measure the effects on BER compliance and RX stress testing.


This CEI 112G-VSR enables you to insert a channel design and characterize and validate its performance using the specification masks to determine if the channel has a high confidence of success. If the channel does not meet the compliance masks or BER estimates, you need to further investigate the channel performance or redesign the channel, keeping in mind that not all compliance metrics can be simulated and need to be measured in a laboratory environment.

### Open CEI 112G-VSR Kit

Open the CEI 112G-VSR kit in the **Serial Link Designer** app using the `openSignalIntegrityKit` function.

```
openSignalIntegrityKit("CEI_112G_VSR");
```

Signal Integrity Toolbox recommends you to set the Java Heap Memory to at least 8192MB. Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory  
Current Java Heap: 349MB with 54MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.

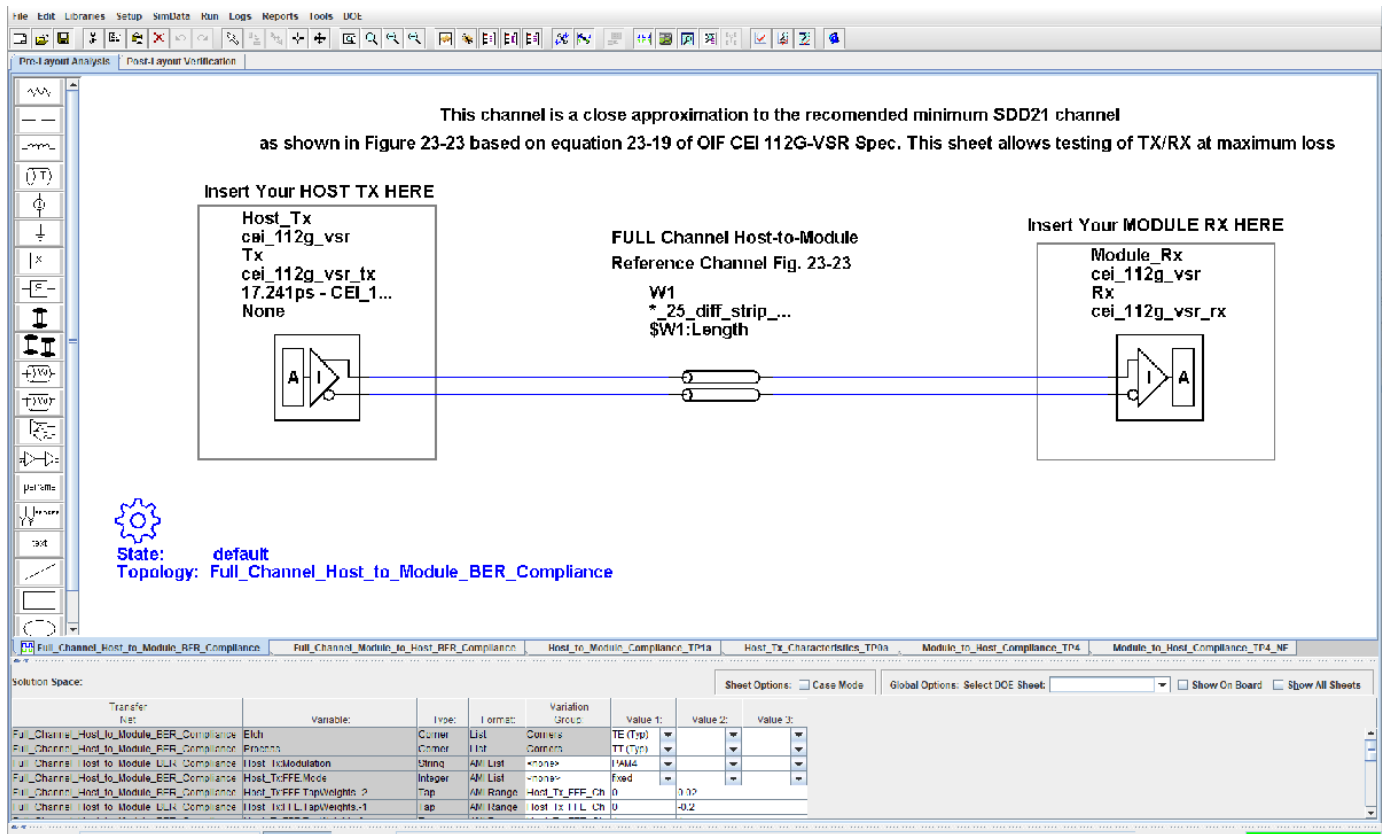

## Kit Overview

- Project Name: CEI\_112G\_VSR
- Interface Name: CEI\_112G\_VSR
- Target Operating Frequency: 112 Gb/s (PAM4 encoding)

The CEI 112G-VSR kit defines two schematic sets. Schematic sheets are included for testing a CEI 112G-VSR channel with mated connector to a module board. The masks provided in this kit are based on the OIF CEI 112G-VSR specifications [1].

- **Compliance** - All compliance host-to-module or module-to-host simulations
- **Host\_to\_Module\_Compliance** - Compliance board network simulations.
- **Module\_to\_Host\_Compliance** - Compliance board network simulations.

For more information about the CEI 112G-VSR channel compliance schematics, transfer net properties, and compliance rules, refer to CEI\_112G\_VSR.pdf, which is attached to this example as a supporting file.

## **References**

[1] oif2017.346.21.pdf: CEI-112G-VSR-PAM4 Very Short Reach Interface (Draft from Implementation Agreement OIF-CEI-5.0, <https://www.oiforum.com/>)

## **See Also**

**Serial Link Designer**





# Signal Integrity Topics

---

- “Clock Modes” on page 13-2
- “Channel Operating Margin (COM)” on page 13-11
- “Eye Measurement and Reporting” on page 13-17
- “Elements in Link Designer Apps” on page 13-24
- “PAMn Capabilities” on page 13-29
- “Available Operations in Signal Integrity Viewer” on page 13-38
- “Advanced Visualization Using Signal Integrity Viewer” on page 13-44
- “S-Parameters in Serial Link Projects” on page 13-49
- “S-Parameters in Parallel Link Projects” on page 13-53
- “Access Project Data from MATLAB Command Window” on page 13-56
- “Widebus Crosstalk Analysis” on page 13-63

## Clock Modes

The IBIS-AMI specification standardizes the way AMI models return waveform and clock data to an AMI simulator. But the standard says nothing about how the simulator should process that data. You can select from three different clock modes. Each clock mode is based on how the recovered clock and data distributions are used in the simulation to produce eye diagrams and predict bit error rates. Understanding and applying each of these modes effectively provides additional insight as to how, and where, a design's operating margins are being affected and what to do about it. Each of the three clock modes are defined and presented in both time domain and statistical analysis along with their benefits and applicability.


---

**Note** In **Parallel Link Designer** app, clock modes are only selectable when simulating in STAT mode. As such, the STAT mode box must be checked on all sheets that are to be simulated using a particular clock mode.

---

### Clock and Data Paths in Serial Link Receiver

A serial link receiver design is the starting point to the understanding of QCD clock modes. The focus is on the relationship of the clock and data paths leading to the data decision latch.

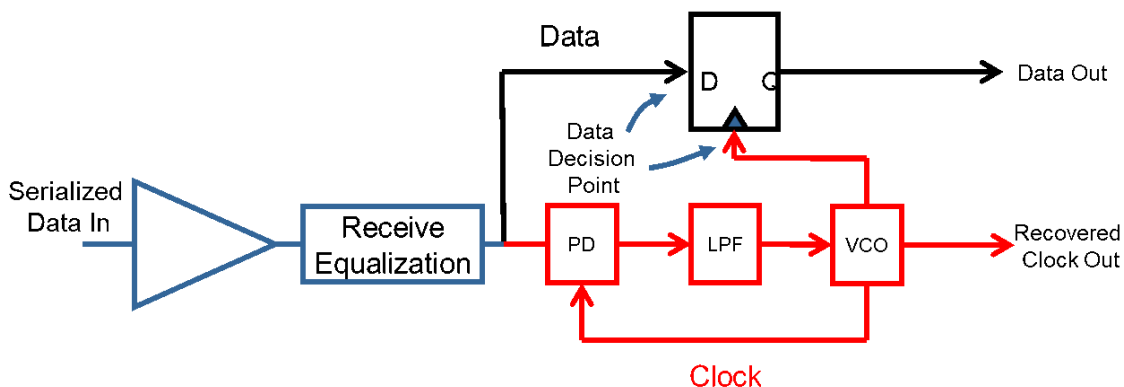


In a typical serial link receiver, the CDR is used to recover the clock signal from the serialized data stream. The recovered clock from the CDR does two things: it provides the clock signal that the sampling latch uses to capture the data, and it tells the DFE when to perform corrections to the data.

An ideal CDR having infinite bandwidth would provide a clock tick to the latch that is based on the data bit being latched. The dependency between the data and clock signals in this ideal CDR would be total. However, real world CDRs have limited bandwidth. Thus, the recovered clock being fed to the latch from the CDR is based upon a number of previous data bits. That means the clock tracks variations in the input signal, but only if they occur slowly enough for the CDR to respond to them. If the variations in the input edges are too fast for the CDR to respond, the CDR will track the only the average input rate and not respond to high frequency jitter. In this case, the variations in data and CDR behavior will be independent, as they both may vary but they won't vary in unison. So, data and clock under the right circumstances can be treated as independent variables.

## Using Data and Clock Distribution to Predict Bit-Error Rate

The standard metric used to describe channel performance is the bit-error ratio (also known as BER). The clock and data distributions are what is used to determine the channel bit-error rate.

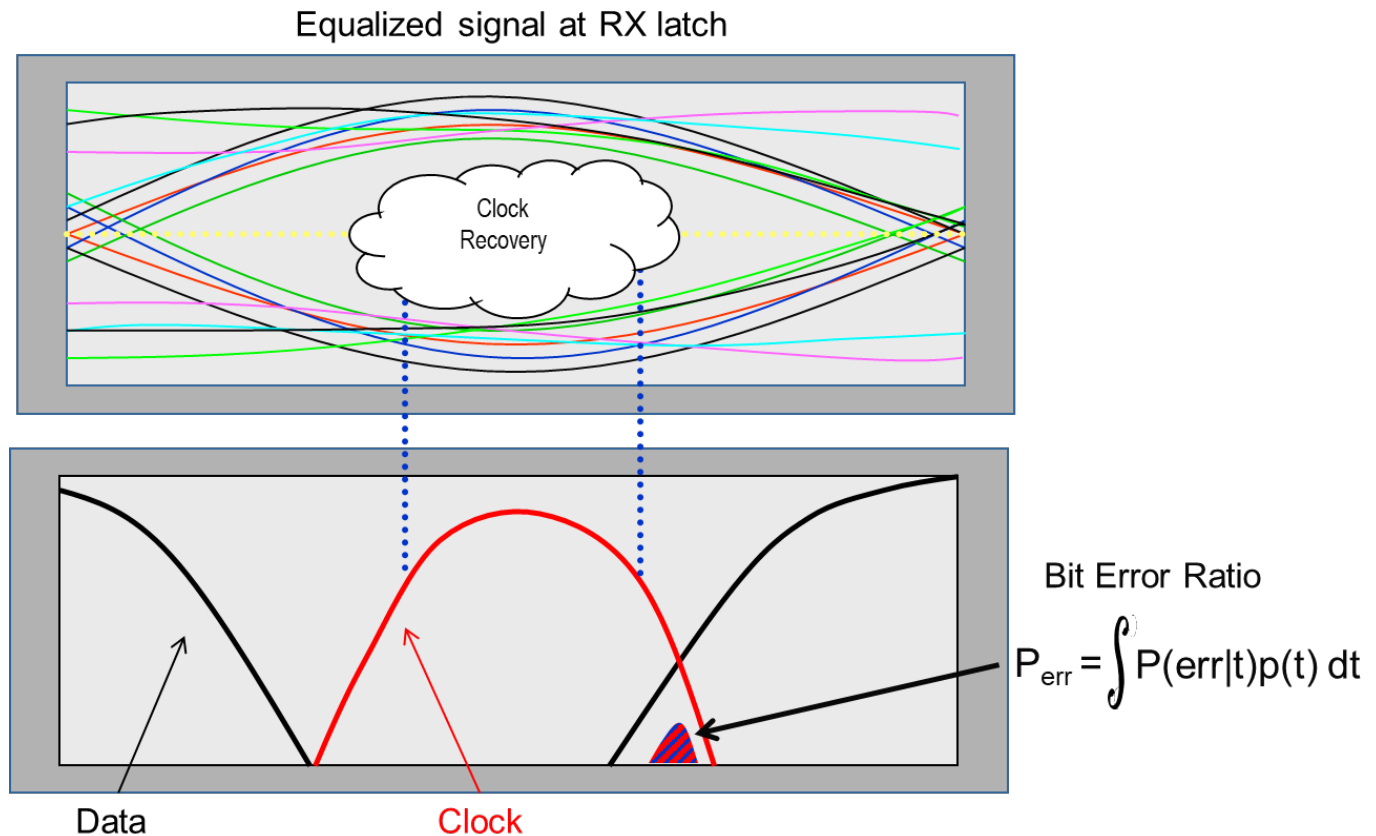


The data bathtub curve (marked in black) is the data distribution at the data input to the Rx latch. The recovered clock (marked in red) is probed at the clock input to the Rx latch and shows a different distributed behavior. The sampling clock would ideally be in the center of the eye and its distribution is the result of multiple jitter sources. The bathtub curve is compared with the Rx clock PDF and the overlap between the curves determines the bit-error rate.

The BER equation is based on the product of the probability of error with a particular clock position and the probability of that clock position occurring. The values for all possible clock positions are then summed and the BER curve is plotted as shown. The highest probability calculated is the reported BER of the channel.

This view of the clock PDF and data bathtub can only be seen when looking at the sampling clock and data from the perspective of an ideal reference clock, such that the behaviors of clock and data are displayed independently. If clock and data are considered dependent, QCD will display the clock PDF as a delta function in the center of the UI because variation of the clock will be reflected in the eye diagram (data eye).

## Clock Modes


The three clock modes are: clocked, normal and convolved. These modes differ depending on the nature of the Rx clock recovery and assumptions of dependence, or independence between the clock and data.

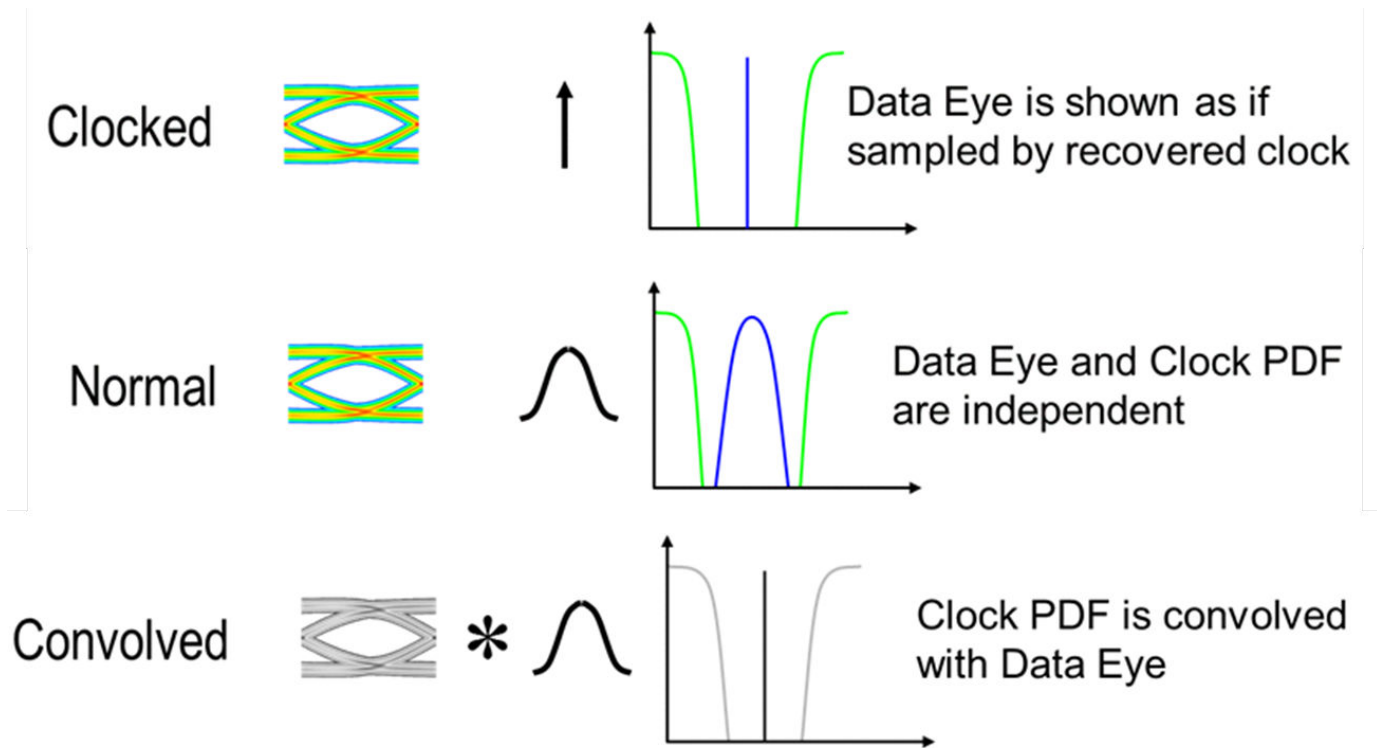

Clocked mode shows the data as it would be captured by the recovered clock. Normal mode allows the user to view both the data and clock independently with respect to an ideal external reference clock. Convolved mode combines the normal mode eye and clock PDF through convolution to produce an eye diagram, and clock PDF that look as though the simulation were run in clocked mode. These clock modes are primarily designed for use in time domain simulations where the IBIS AMI model returns both the data waveform and clock ticks. Each of the modes will be discussed with regards to both time-domain and statistical analysis highlighting their benefits and when they are applicable for use.


### Time Domain Clock Mode: Clocked

The system representation of the clocked mode operation represents how the data is captured by the recovered clock from a system perspective.

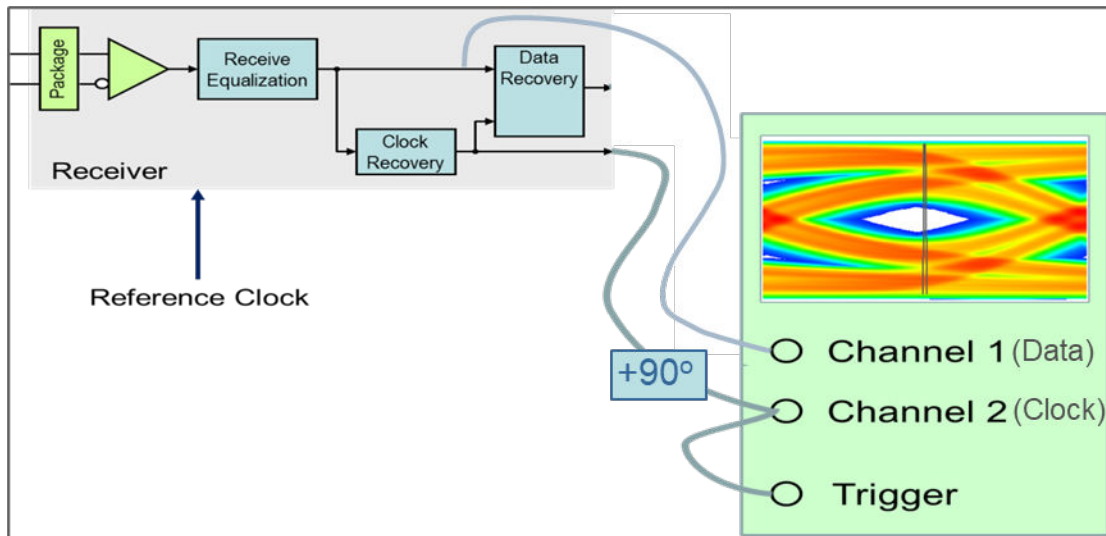

The data is captured at the input to the decision latch using the clock from the output of the clock recovery circuit. Note that the time values of AMI clocks are actually  $\frac{1}{2}$  UI before the data is sampled (at the start of the data bit), which makes them perfect to trigger waveform acquisition in the scope diagram. A  $\frac{1}{2}$  UI delay is added to the input of channel 2 to show the clock in proper relation to the input waveform.

The simulator operation in the clocked mode is shown:

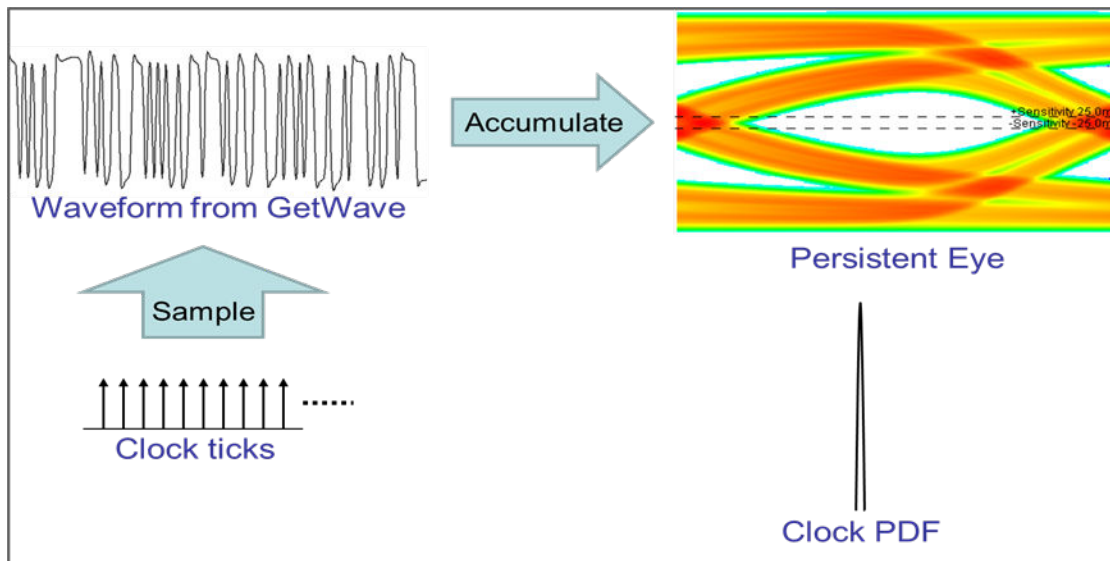

The simulated data waveform and clock is on the left and the resulting eye diagram and clock PDF that would be displayed as an output from the simulator is on the right. The clock PDF is displayed as a delta function in the center of the UI and the recovered clock variation due to noise and jitter is thus reflected in the data eye diagram. Because of this when in clocked mode it is not possible to distinguish where eye closure is coming from, whether it is in the data path or in the clock path. In this mode, clock and data are being treated as dependent variables, meaning the acquisition of waveform data is entirely dependent on the clock signals coming from the AMI model.

The clocked mode approach is intuitive from a systems perspective, because it emulates the way actual systems work. This is the way many AMI models have been designed to be used, and it is the only mode most other simulators support.


As one might expect, the calculation of BER in clocked mode is limited to the number of bits simulated. If there are only 1e6 samples of a process, one can only talk about probabilities down to 1e-6. This is the limitation of statistical significance that a user will incur in time domain simulations. To illustrate this the following example can be used:

If one could expect a time domain simulation to run at approximately one million bits per minute, after a minute a BER of 1e-6 could be produced. From a statistical significance standpoint this would be an insufficient sample size for most interface standards and proprietary designs. In general, a minimum sample size of 1e12, or a trillion bits, would be required to satisfy most current specifications. To simulate this many bits at a rate of one million bits per minute, the simulation would take almost 2 years. Under the right circumstances this limitation can be overcome by using normal clocked mode.

### Time Domain Clock Mode: Normal


Normal mode provides a method to extend the BER probabilities of time domain simulations into the ranges of most industry standards for channel design, and it does so without needing to use extrapolation algorithms. This is because normal mode is based on an assumption of independence between the recovered clock and the data at the Rx latch. While clocked mode treats clock and data as dependent processes, normal mode treats these distributions as independent. Because of this, the two independent distributions can be used to predict a significantly lower BER by estimating the probability of different interactions.

In normal mode, the data and clock are captured using an ideal reference clock source.

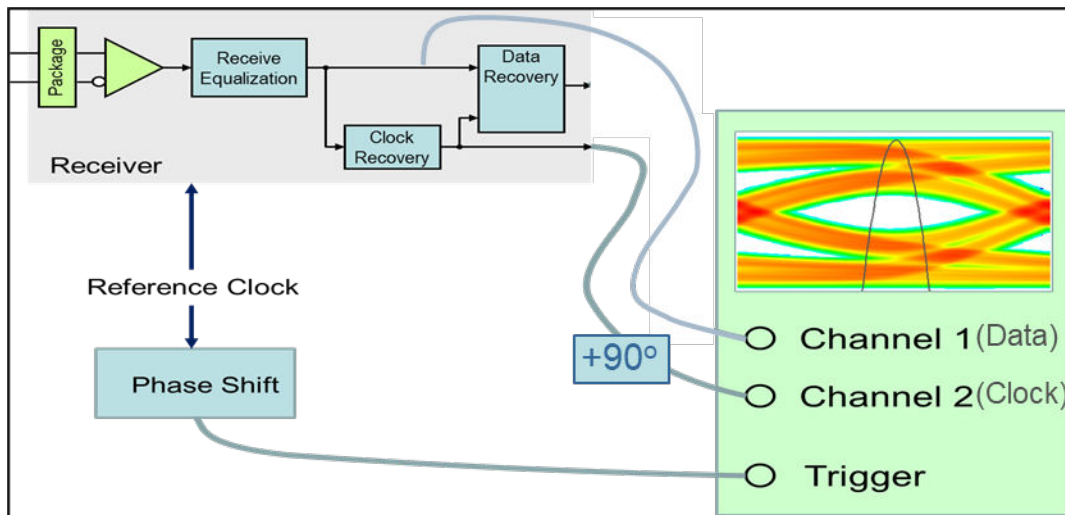

This method of capture keeps the clock jitter and noise from affecting the data bathtub, and thus the data eye consists of the persistent waveform along with any channel ISI, and Tx jitter. The clock PDF starts with the accumulated probabilities of clock ticks returned by the model, which is then convolved with any jitter budgets from the model to create the presented clock PDF.

The simulator operation in the normal clocked mode is shown:

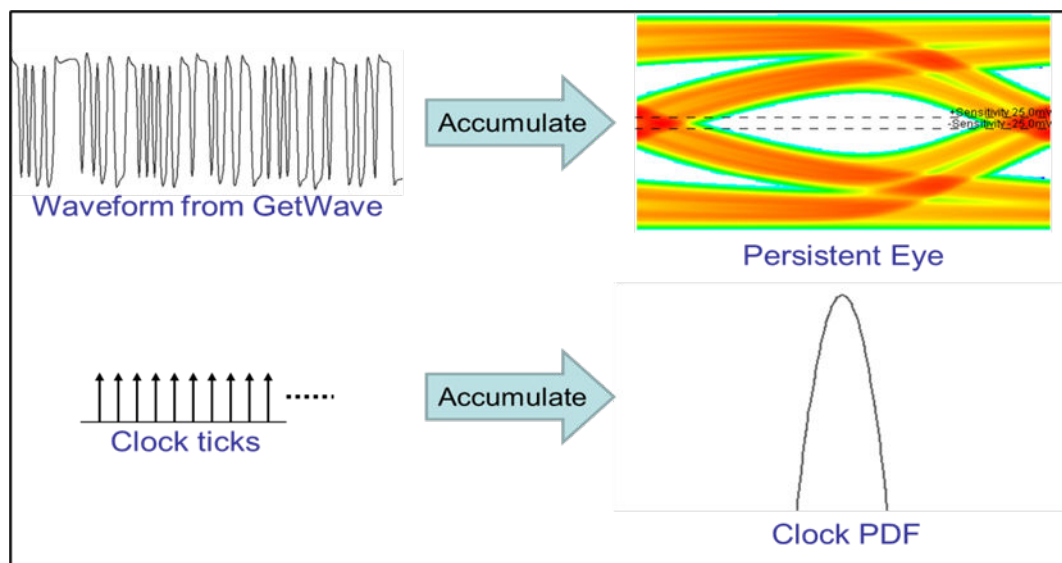

The simulated data waveform and clock ticks is on the left and the resulting eye diagram and clock PDF that would be displayed is on the right. Unlike clocked mode, the data and clock distributions are accumulated independently. This provides a level of insight into model behavior that clocked mode cannot, namely how much of the eye closure is coming from the data path, and how much of the closure is due to jitter in the recovered clock signal. Also, jitter and noise sources are presented on the data bathtub and clock PDF separately, unlike clocked mode where clock jitter and noise distribution are only presented in the data bathtub.


Normal mode provides a method to predict lower bit-error-ratios by improving statistical significance of a time-domain simulation. In comparison with clocked mode, the assumption of independent clock and data allow the statistical distributions to be combined to predict overall probability. Referring back to the example of a time domain simulation taking one minute to predict a BER of  $1e-6$  in clocked mode, the combined distributions of a million data bits and a million clock bits would allow a BER prediction of  $1e-12$  in the same simulation time.

On the surface, this assumption of independence between clock and data may seem crazy. How could the recovered clock and data possibly be independent, when both come from the same source? It's clear that they can't be completely independent, otherwise the CDR would have no purpose. When independence is discussed in this context, what is really meant is jitter.

Specifically, this is the kind of low frequency, repetitive (usually sinusoidal) jitter that a CDR can track out. If the frequency of the jitter in the incoming signal is high or random enough, the CDR won't follow it and the variations in data jitter and the recovered clock will be effectively statistically independent. Even when track-able jitter is present in the input signal, if its magnitude is low enough (say 1% of the UI or less) its impact on eye closure will be small enough that the additional statistical significance of normal mode may be worth the price. When there is significant track-able sinusoidal jitter, the ability of the CDR to remove track-able jitter is not accounted for, and the effect of that jitter is effectively double counted, making the simulation results pessimistic. How pessimistic depends on the magnitude and frequency of the incoming sinusoidal jitter. Under these conditions normal mode would not be a useful predictor of BER.

## Time Domain Clock Mode: Convolved

The third clock mode is convolved. The primary function of convolved mode is to validate assumptions of data and clock independence. This is basically a validation of the normal mode simulation.

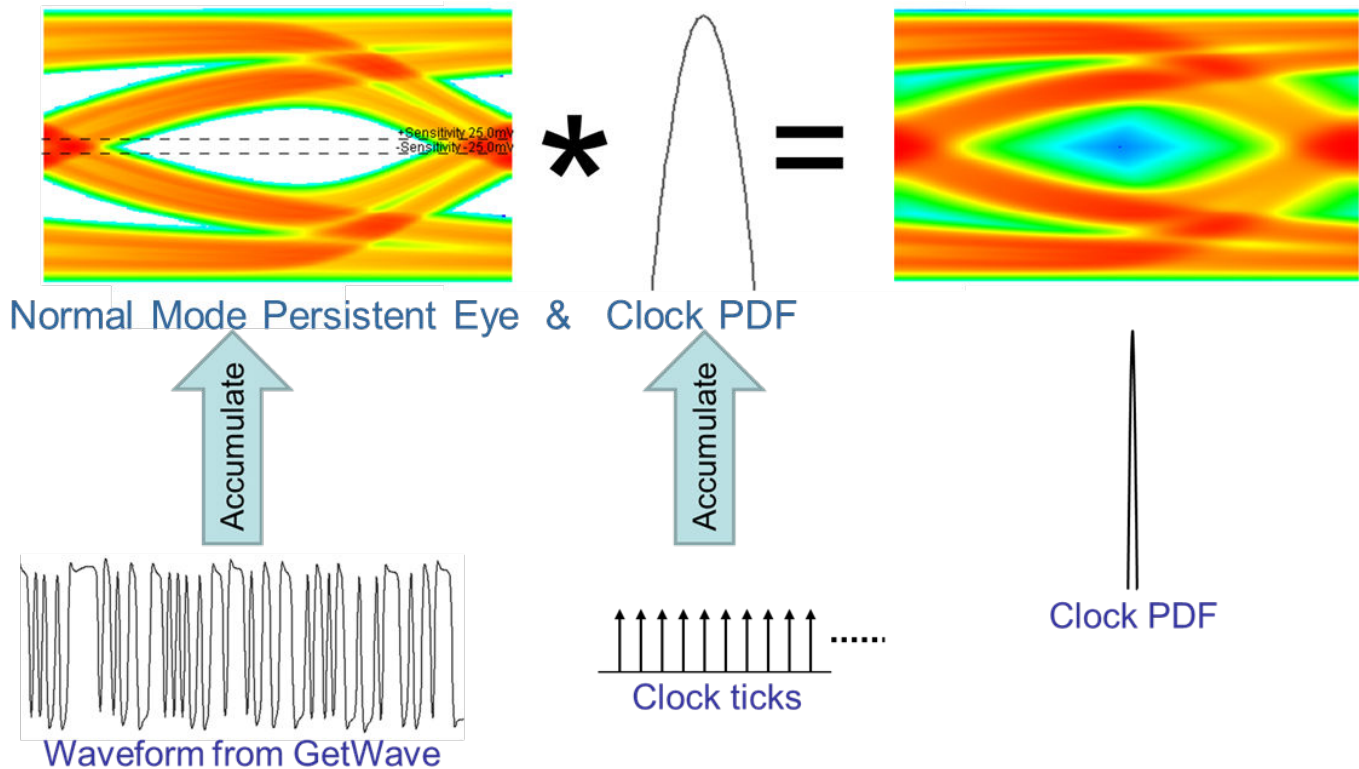

In time domain with the clock mode set to convolved, the data eye and clock PDF captured in normal mode are convolved together to present an eye and clock that look as though the simulation had been run in clocked mode. If the jitter processes in the data path and the clock recovery path are reasonably independent, the eye diagram from a convolved mode simulation will look the same as the eye from a clocked mode simulation. This means that the clock recovery process essentially involves no tracking of the data, the clock and data are independent, and normal mode can be used to reliably predict BERs lower than are possible by clocked mode.


## Statistical Simulations and Clock Modes

Statistical simulations are based solely on the impulse response of the channel and data pattern dependencies. There is no waveform nor returned clock ticks from the model in statistical simulations. Because no clock is returned from the model clocked mode and convolved mode are identical.

The clock position in a statistical analysis simulation is determined by an algorithm called "Hula Hoop". This algorithm places a ring 1UI wide over the equalized pulse response of the channel. The data eye is represented by the time points where the ring touches the pulse response. The center point is where the clock PDF is placed.


Statistical analysis in normal mode produces an eye diagram that is the product of the equalized pulse response and probabilities of bit switching.



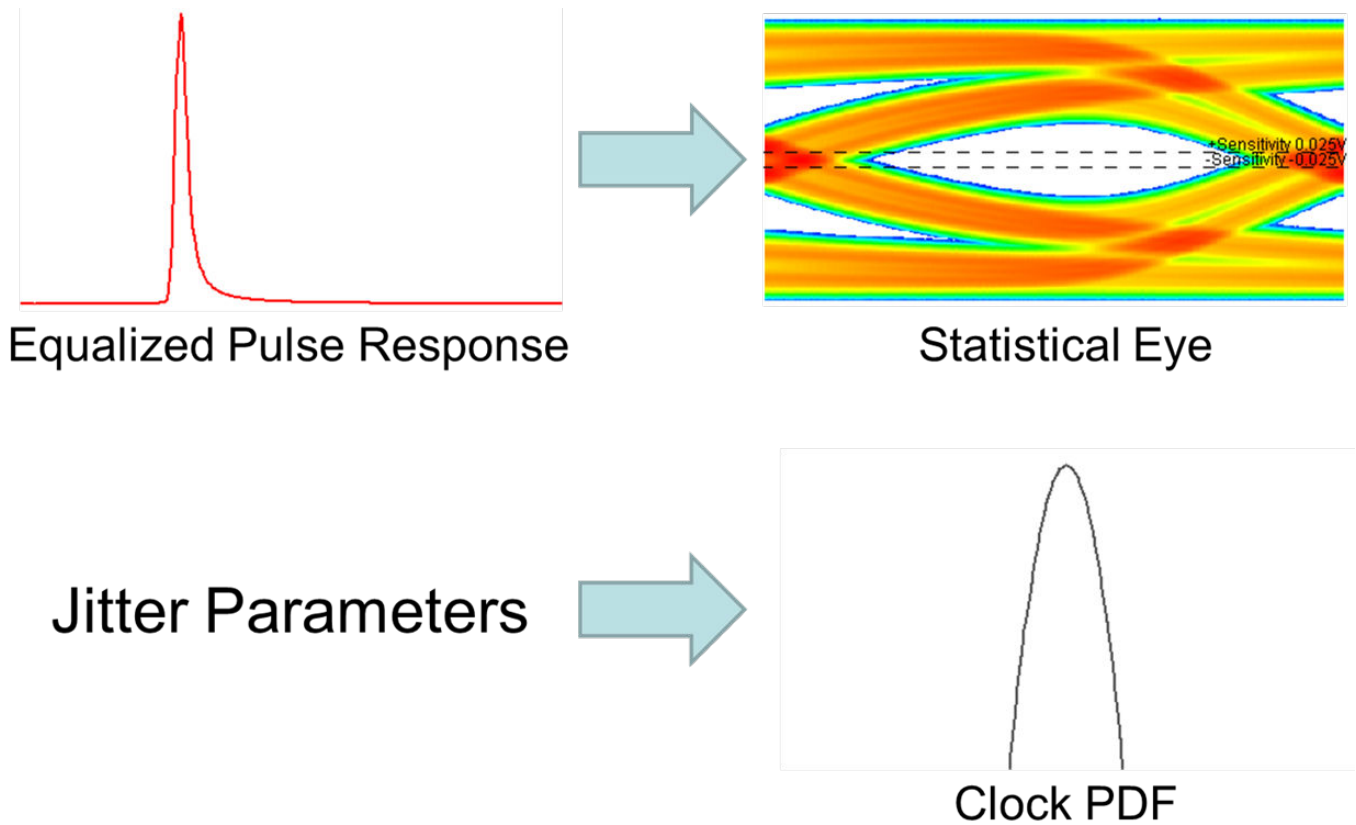

The ISI of the channel is determined directly from the equalized pulse response and through mathematical analysis the eye diagram can be obtained which includes any Tx jitter. Rx Jitter and Rx clock recovery jitter are IBIS-AMI parameters that are specified or embedded in the AMI model and will be imposed on the clock PDF.

Clocked and convolved modes are performed the same way in statistical analysis. The statistical eye generated using the equalized pulse response is convolved with the clock PDF which is based on the Rx jitter and Rx clock recovery jitter parameters.

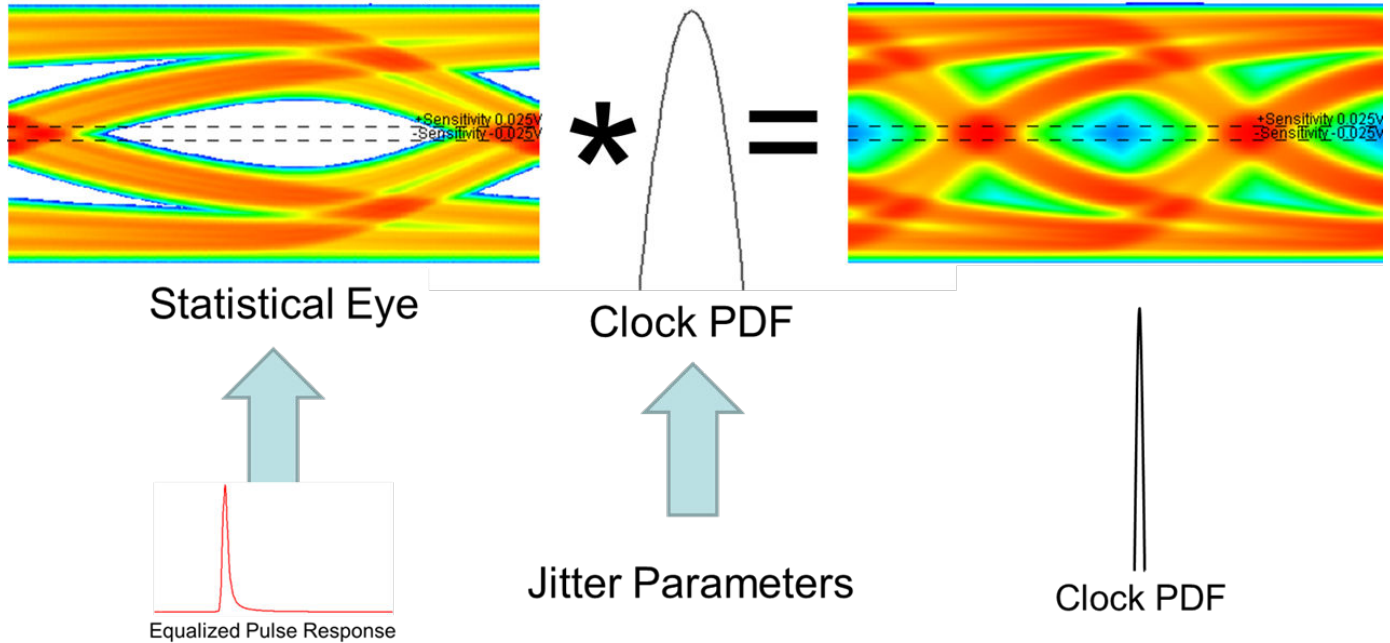

### Setting Clock Mode

The clock mode can be set from the Serial Link Designer or Parallel Link Designer by accessing the Designator Element properties dialog box. To open the dialog box, double click on either a Tx or Rx designator on the schematic sheet. The clock mode column in the dialog window is a pull-down menu allowing you to select a clock mode for the Rx. You can opt to use the check box next to the pull-down selector to sweep clock modes. If this box is checked, the clock mode becomes a variable in the solution space for the schematic sheet. You can then set and sweep the various modes.

### See Also


“Eye Measurement and Reporting” on page 13-17

## Channel Operating Margin (COM)

Channel Operating Margin (COM) is a figure of merit for a passive channel expressed in decibels. COM gives insight about the quality of the passive channel design. It is calculated using the ratio of signal amplitude factors to noise amplitude factors. Channel bit rate, insertion loss, return loss, cross-coupling, transmitter and receiver equalization, and IC package models are some of the factors applied to determine COM. While it is required for compliance in some applications, COM can also be a valuable part of channel design methodology in general.

The IEEE 802.3bj 100GBASE specification defines the 100GBASE interface to consist of four channels each operating at 25.78125Gbps. These channel designs can involve PCB only, backplane or copper cables. Signaling is accomplished with either NRZ (Non Return to Zero) or PAM4 (Pulse Amplitude Modulation). Encoding the packets with forward error correction (FEC) is optional but can greatly improve a channel BER (Bit Error Ratio). Testing the compliance of the passive electrical channel to the specification requires it to meet or exceed what is known as COM (or Channel Operating Margin) as measured in decibel units.

The 802.3bj channel model with associated test points is shown:

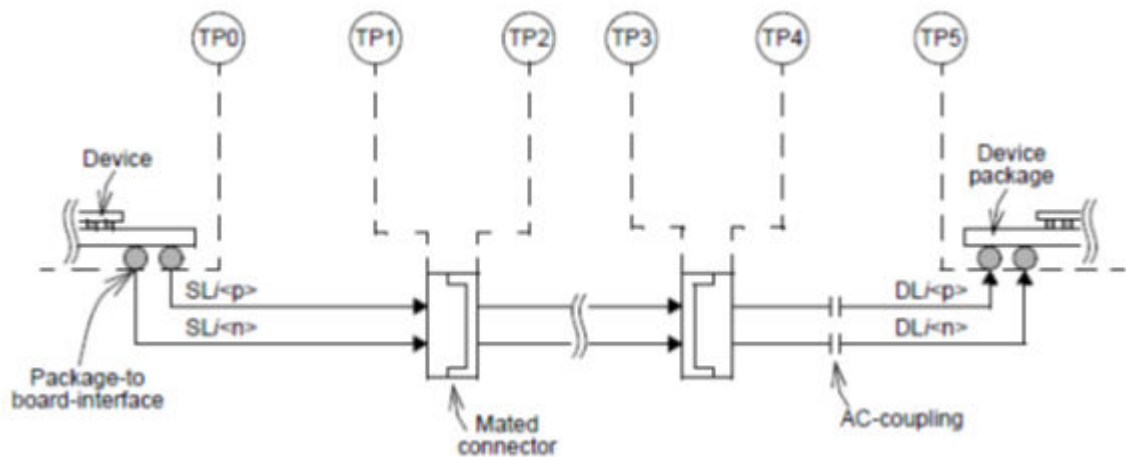

The passive channel referenced is between TP0 and TP5:

COM is a figure of merit derived from the scattering parameters of the passive channel. Its calculation relies on the s-parameter models of the victim and aggressor channels along with user specified information about the TX, RX and their equalization characteristics. COM can also account for the package characteristics of the TX and RX or you can choose to define generic package characteristics to be used in the COM calculation.

A series of MATLAB application scripts have been developed to automate the COM calculations. The scripts are offered for download on the IEEE website (e.g. `com_ieee8023_93a.m`). To maintain continuity for those utilizing this application, Signal Integrity Toolbox integrated the capability of running COM through the **Serial Link Designer** app. Its implementation provides direct interface with MATLAB and a seamless process of passing the appropriate s-parameter channel models. All COM results are consolidated into one report and select COM results from the report can be added to the Channel Analysis report and thus are directly loaded into the **Signal Integrity Viewer** tool after a COM simulation. You can then use these metrics in the analysis of the channel.


The COM code is a statistical based algorithm which is based on linear time invariant (or LTI) assumptions about the channel, transmitter and receiver. A complete channel design flow would include simulating the interface using TX and RX IBIS-AMI and package models of the actual silicon both statistically and in time domain with an objective of meeting a target BER (Bit-Error-Ratio). This can only be accomplished using a channel simulator such as Serial Link Designer.

Signal Integrity Toolbox offers a variety of compliance and design kits including 802.3bj.

## **Channel Design Methodology**

COM can be used as a fast and easy way test signal-to-noise performance of a channel regardless of compliance to a specification. The channel being designed can be an 802.3bj implementation or a custom design. It could implement NRZ or PAM4 signaling. You can set a multitude of parameters with limits unique to your design and use those values to determine COM.

An example of channel design methodology can be shown as:

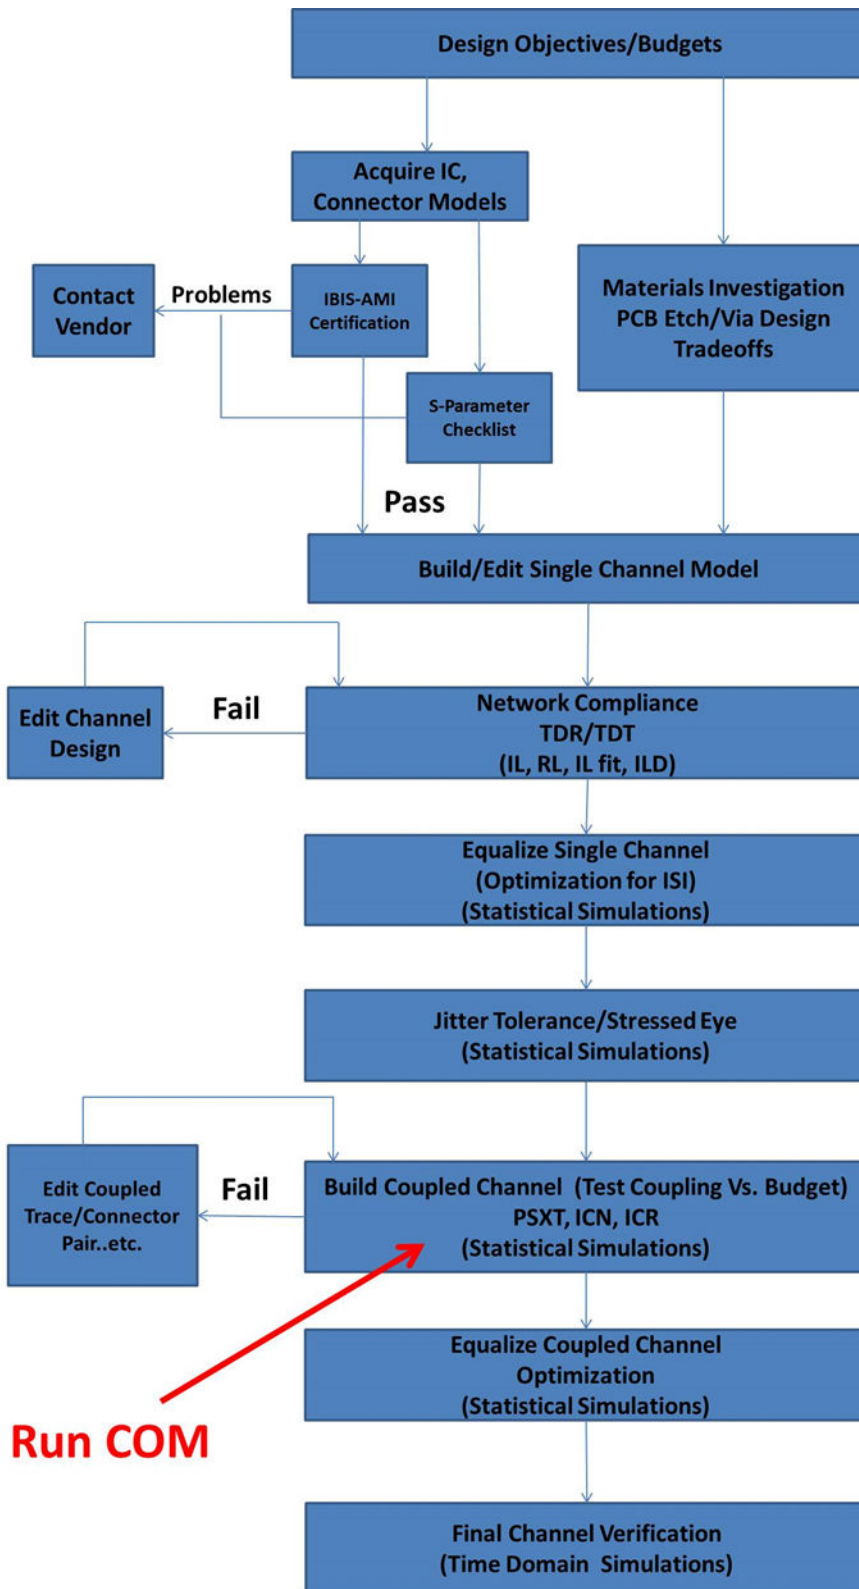

The highlighted area can benefit from using COM as part of design analysis.

## COM Setup

The COM configuration spreadsheet is a specially formatted document and is used to define each of the variables required to run COM. Some of the settings are unique to the channel and others are user preferences or control settings.

Table 81A-1 parameters			
Parameter	Setting	Units	Information
f_b	25.78125	GHz	
f_min	0.05	GHz	
Delta_f	0.05	GHz	
C_d	[2.5e-4 2.5e-4]	pf	[TX RX]
z_0 INJECT	[1 2]		[best cases to run]
z_0 (TX)	[52 90]	mm	[best cases]
z_0 (NEXT)	[52 90]	mm	[best cases]
z_0 (FEXT)	[52 90]	mm	[best cases]
z_0 (RX)	[52 90]	mm	[best cases]
C_p	[1.5e-4 1.5e-4]	pf	[TX RX]
R_0	50	Ohm	
R_s	[50 50]	Ohm	[TX RX]
r_p	0.75	ns	
Q1	0.42		min
Q1-1	[-0.18 0.02 0]		[min:step:max]
Q1-1	[-0.58 0.02 0]		[min:step:max]
g_DC	[0.2 1.0]	dB	[min:step:max]
f_z	6.4693125	GHz	
f_z1	6.4693125	GHz	
f_z2	25.78125	GHz	
A_v	0.4	V	
A_tx	0.4	V	
A_rx	0.6	V	
L	2		
M	52		
N_b	14	UI	
S_MASK1	1		
S_MASK2_N_b	1		
sigma_R1	0.05	UI	
A_DD	0.05	UI	
49_s_0	3.20E-08	V <sup>2</sup> /GHz	
SNS_TX	27	dB	
S_LM	1		
DEP_0	1.00E-05		
Operational control			
COM Pass threshold	1	dB	
include RCS (table 82-13)	0	logical	

I/O control			
DIAGNOSTICS	1	logical	
DISPLAY_WINDOW	1	logical	
Display Frequency domain	1	logical	
CSV_REPORT	1	logical	
SAVE_FIGURE_M_CSV	0	logical	
RESULT_DIR	.\test_results_csv\		
SAVE_FIGURES	0	logical	
SAVE_RESP	0	logical	
PLOT_CSV	[1 2 4]		
Receiver testing			
EX_CALIBRATION	0	logical	
Sigma BSN FREQ	3.00E-05	V	
IDEAL_TX_TERM	0	logical	
T_r	3.00E-05	ns	
Non standard control options			
INC_PACKAGE	1	logical	
IDEAL_EX_TERM	0	logical	
INCLUDE_CTL	1	logical	
INCLUDE_TX_EX_FILTER	1	logical	

Table 81A-2 parameters		
Parameter	Setting	Units
package_r_tau	6.541E-03	ns
package_r_gamma0_81_82	[0 1.734e-3 1.459e-4]	
package_z_c	78.2	Ohm


Table 82-12 parameters		
Parameter	Setting	Units
sigma_e_tau	6.191E-05	ns
sigma_r_gamma0_81_82	[0 4.114e-4 2.547e-4]	
sigma_z_c	109.8	Ohm
z_0 (TX)	151	mm
z_0 (NEXT)	72	mm
z_0 (FEXT)	72	mm
z_0 (RX)	151	mm

Example spreadsheets for each particular application covered by IEEE (802.3bj 100GBASE-KR4, 100GBASE-CR4, 100GBASE-KP4 and CAUI-4 C2C) are available with the COM download.

**Note** The COM script is a continuously changing piece of software as new specifications are adopting this methodology and new metrics and tests are being added. It is recommended that the user visit the IEEE website (<https://www.ieee802.org/3/bj/public/tools.html>) to download the latest COM code, example spreadsheets, and documentation

## Channel S-parameters for COM

Along with the spreadsheet, the other input to the COM code is the measured or simulated s-parameter models of the victim channel and its aggressors. A coupled channel model is shown:

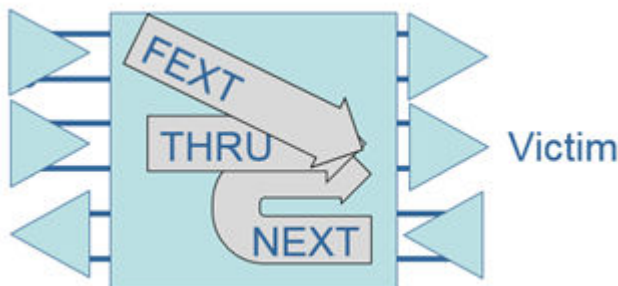

There is a victim channel (Thru) and two aggressors showing the far-end (FEXT) and a near end (NEXT) coupling to the victim. Models of the victim and each aggressor are passed into COM as 4-port S-parameter models. There is virtually no limit to the number of aggressor channels passed into COM. However, from a practical standpoint 2-3 aggressors on each side of the victim will account for most of the crosstalk. **Serial Link Designer** automatically extracts these models during the “Network Analysis” simulation and when running COM simulation. The appropriate s-parameters and parameters are automatically passed into the COM script.

## Viewing COM Results

There are many results outputted by COM. All of the COM results from a simulation are available in the **Collected COM Results** report. To access the report, in the **Serial Link Designer**, select **Reports > Collected COM Results Report**.

Any of the results from the COM simulation can be preselected for display in the **Channel Analysis Report**. This loads the results in the **Signal Integrity Viewer** after simulation and allows them to be analyzed along with the standard simulation results. You can select the COM results that you wish to add to the report by editing the “com\_columns.txt” file which resides in the Serial Link Designer installation area. You can copy this file to your site configuration directory if you have one defined.

An example `com_columns.txt` file that demonstrates adding parameters to the channel analysis report is shown:

Other than reporting COM the other parameters were chosen for demonstration purposes only. The parameters are defined as follows:

- **COM**: COM value in dB for this case.
- **COM fit loss (dB)**: Fitted insertion loss at half baud rate.
- **COM FOM ILD**: RMS over half baud rate span of insertion loss deviation. This may be used in the diagnosis of a channel design.
- **COM ICN (mV)**: RMS over half baud rate span of power sum of the crosstalk. This may be used in the diagnosis of a channel design.
- **COM TXLE taps**: List of transmitter FFE taps used for the CTLE in the COM calculations.
- **COM FOM**: Best figure of merit result from the CTLE and Tx FFE optimization.
- **COM DFE taps**: Adapted DFE tap values.
- **CTLE DC gain (dB)**: DC gain of the CTLE after adaptation 0 to -12dB.

## References

- [1] IEEE Standard for Ethernet: Amendment 2, *Physical Layer Specifications and Management Parameters for 100 Gb/s Operation Over Backplanes and Copper Cables*, located at [https://standards.ieee.org/standard/802\\_3bj-2014.html](https://standards.ieee.org/standard/802_3bj-2014.html).
- [2] R. Mellitz, Adeo Ran, *COM Quick Guide for April 2014*, located at [https://www.ieee802.org/3/bj/public/tools/mellitz\\_3bj\\_01\\_0414.pdf](https://www.ieee802.org/3/bj/public/tools/mellitz_3bj_01_0414.pdf).
- [3] COM Configuration Documentation (`config_com_ieee8023_93a_doc.pdf`).

## **See Also**

### **More About**

- “Channel Operating Margin (COM) for Serial Link” on page 5-57

### **External Websites**

- <https://www.ieee802.org/3/bj/public/tools.html>



## Eye Measurement and Reporting

The standard of performance for a high-speed serial link is bit-error-ratio (BER). BER is estimated based on a number of factors, one of which is the inner eye contour of an eye diagram. Simulation results, both statistical and time domain, contain eye width and height measurements, along with calculated margin to a target BER.

---

**Note** The methods and reporting of these metrics pertain to **Parallel Link Designer** only when simulating in **STAT** mode.

---

The inner contour of the eye diagram at the **Target BER** is used to estimate the channel BER. Understanding the derivation of eye height, width and voltage margin as reported in statistical and time domain simulations provides insight to the BER estimate. For compliance to standards, inner and outer eye masks can be applied to simulation results and the available margin is reported. Knowing how the margin is calculated and reported is beneficial to debugging potential problems within a design.

### Parameters Used in Eye Measurement

Eye metrics such as height, width and margin along with the BER for the channel are determined based on three metrics; the eye contours, the clock PDF and the sensitivity of the receiver.

#### Eye Contours

Eye contours are plots of the amplitude associated with fixed probabilities as a function of sampling time. They indicate the shape of the inner and outer boundaries of the eye diagram for each of a number of different probabilities. The eye contours for a given simulation are based on the Target BER.


To set the target BER, open the Simulation Parameters dialog box by selecting **Setup > Simulation Parameters** from the **Serial Link Designer** or **Parallel Link Designer** app.

The default value is  $1e-12$ , but you can set this based on the BER requirement of the channel design. Target BER defines the contours that is generated and reported after rolling up the simulation results.

Four eye contours are generated after the simulation, for the Target BER, Target BER +  $1e3$ , Target BER +  $1e6$  and Target BER +  $1e9$ . For example, if the Target BER is set at  $1e-12$ , the contours are displayed at:  $1e-12$ ,  $1e-9$ ,  $1e-6$  and  $1e-3$ . Regardless of the Target BER setting, a  $0$  contour is also generated which represents the BER =  $0$  point.

#### Clock PDF

The clock PDF is the probability density function (PDF) of the phase difference between the clock at the receiver decision point and an ideal transmitter symbol clock. It is represented as a Gaussian probability density function.

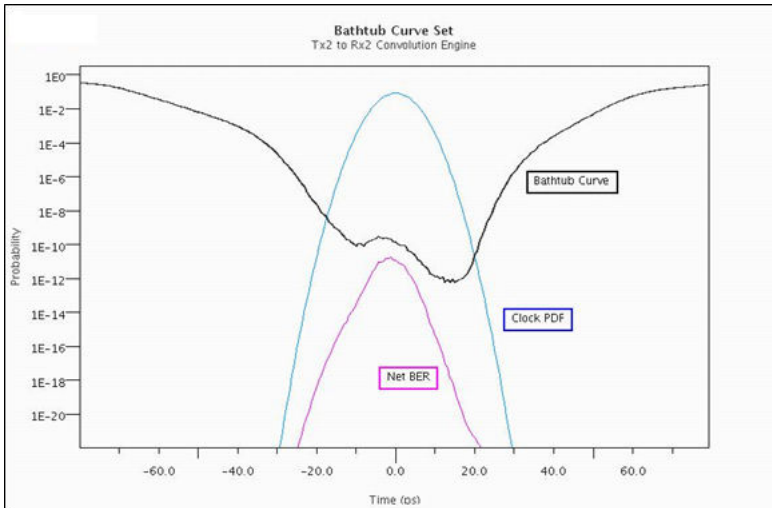


You can determine the net BER from the interaction between the bathtub curves and the clock pdf. The bathtub curve is the probability of error as a function of the time that the data is actually sampled. The net BER is the probability of an error occurring at a given sampling time given the probability of sampling at that time. This curve is the area under the product of the bathtub curve and the clock PDF.

### Receiver Sensitivity

Sensitivity is a keyword that is part of the IBIS-AMI specification for receiver models. It is defined as the minimum latch overdrive voltage at the data decision point of the receiver after equalization. For example if sensitivity is defined as 25mV, the latch would require +/- 25mV for switching. The default sensitivity used in the **Serial Link Designer** and **Parallel Link Designer** is 0.

A statistical eye diagram with the bathtub curve set and the receiver sensitivity marked +/- 25mV (dashed lines) is shown:



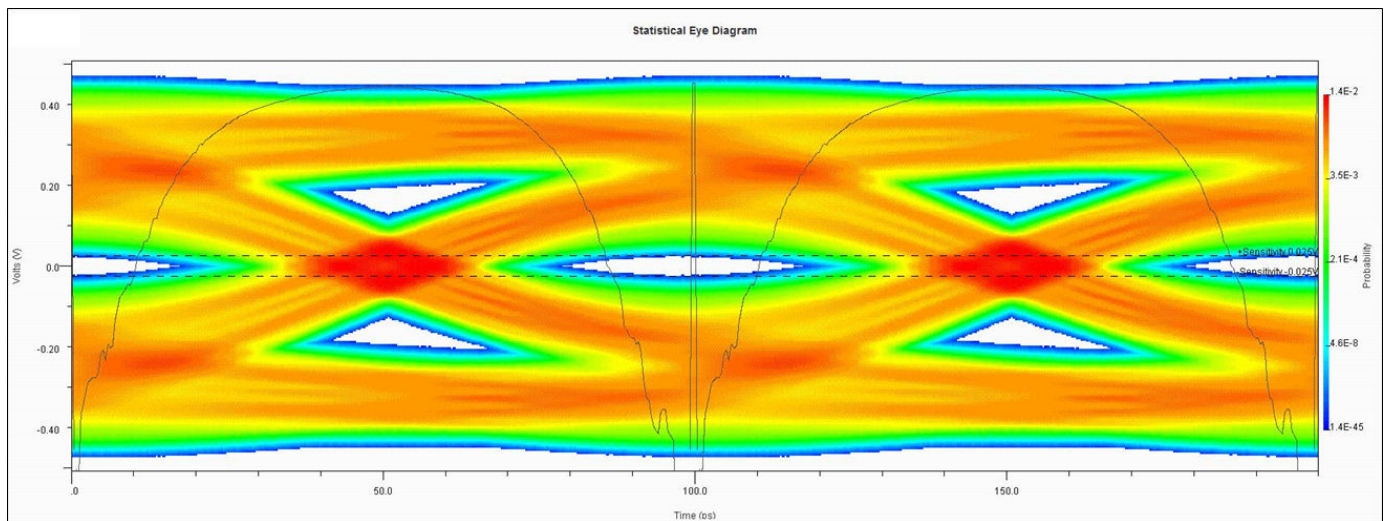



### Eye Reporting

**Signal Integrity Viewer** reports the results of statistical simulation.

Stat Eye Height (V)	Stat Eye Margin (V)	Stat Outer Eye Height (V)	Stat Eye Width (ps)	Stat Threshold Eye Width (ps)
0.0710452	0.0105226	0.933483	45.7031	26.1705
0.0765018	0.0132509	0.939939	43.3594	27.9107
0.419192	0.184596	1.06087	79.2969	74.6758
0.469968	0.209984	1.02363	82.4219	78.3195
0.284633	0.117317	1.19889	56.25	50.7932
0.469695	0.209847	1.02042	82.8125	78.8034
0.463761	0.20688	1.01669	85.1563	81.0957

These results include statistical eye height, eye width, eye margin, outer eye height, and threshold eye width. These results are all determined from the Target BER contour and the receiver sensitivity.

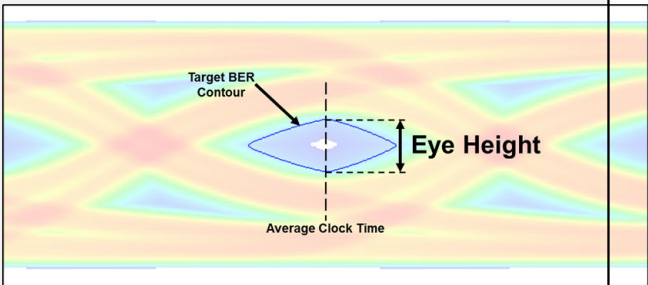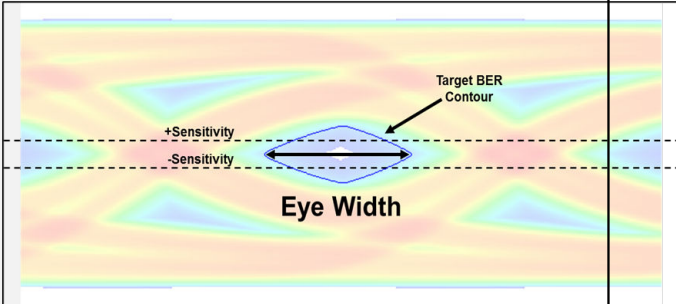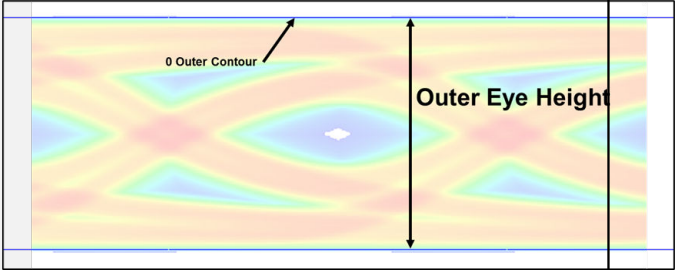Parameter	Description	Eye Diagram Representation
<b>Stat Eye Height(V)</b>	The height of the target bit error rate contour at the average clock time.	
<b>Stat Eye Width(ps)</b>	The width of the eye measured at the 0V crossing.	
<b>Stat Eye Outer Height (V)</b>	The maximum voltage measured on the outer eye. This is the maximum voltage measured on the zero outer contour.	
<b>Stat Threshold Eye Width (ps)</b>	The eye width measured at the intersection of the inner eye and the receiver sensitivity.	

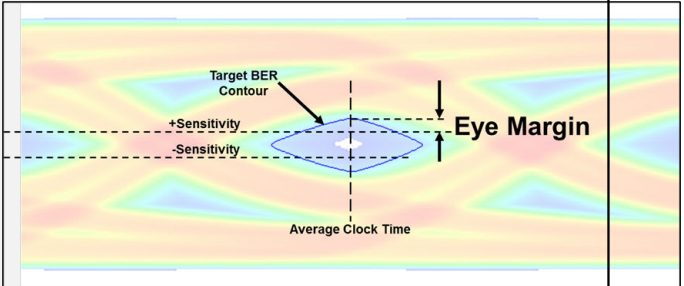Parameter	Description	Eye Diagram Representation
<b>Stat Eye Margin (V)</b>	Voltage measured from the sensitivity threshold to the target BER contour at the average clock time.	
<b>Stat Clock PDF Mean</b>	The mean of the recovered clock.	
<b>Stat Clock PDF Sigma</b>	The standard deviation of the recovered clock.	
<b>Stat BER</b>	The average bit error as predicted through statistical analysis.	
<b>Stat BER Floor</b>	The minimum bit error rate at any point on the bathtub curve derived from statistical analysis.	

Eye height and eye width are reported for all contours generated in the simulation based on the Target BER.

Stat Eye Height[1e-3] (V)	Stat Eye Height[1e-6] (V)	Stat Eye Height[1e-9] (V)	Stat Eye Height[1e-12] (V)
0.137439	0.0963861	0.0804488	0.0710452
0.144167	0.103628	0.0862888	0.0765018
0.470915	0.437715	0.425843	0.419192
0.514588	0.485567	0.474134	0.469968
0.36617	0.306332	0.291547	0.284633
0.511776	0.485206	0.474732	0.469695
0.510564	0.479448	0.46833	0.463761

Stat Eye Width[1e-3] (ps)	Stat Eye Width[1e-6] (ps)	Stat Eye Width[1e-9] (ps)	Stat Eye Width[1e-12] (ps)
64.0625	53.9063	48.8281	45.7031
60.5469	50	46.0938	43.3594
83.9844	80.8594	79.6875	79.2969
85.9375	83.9844	83.2031	82.4219
67.9688	59.375	57.0312	56.25
87.5	84.375	83.2031	82.8125
88.6719	86.7188	85.1563	85.1563


For example, if the target BER is 1e-12, statistical eye heights and widths for 1e-3, 1e-6, 1e-9 and 1e-12 BER are reported.

**Note** When comparing the reported results to measurements made manually in **Signal Integrity Viewer**, an error is introduced from the samples per bit selection. To determine the amount of error

when making a manual measurement, divide the UI (unit interval) of a bit by the number of samples per bit (UI/SPB). Using a higher number of samples per bit results in a smaller error.

## Calculating Eye Margin from Simulation Results to Eye Mask

When an eye mask is defined and applied to a sheet being simulated, the margin between the mask and the Target BER contour are reported. An eye mask can be defined as either an inner mask, outer mask or both. A statistical eye diagram with inner and outer masks applied is shown:

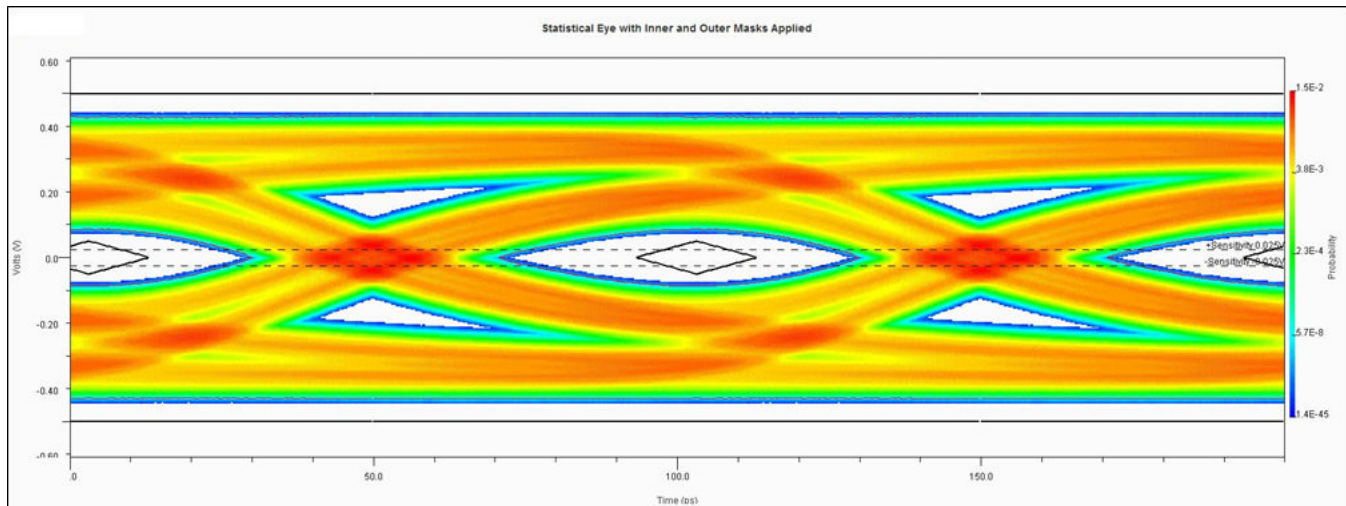


If both inner and outer masks are defined, the smallest margin at any point of the two is reported. The worst eye height margin and worst eye width margin at any point for a given eye mask. Only one result is reported so it is important know which masks are being applied to best identify violations.

You can define and use two types of eye masks: static and skew eye masks. A static eye mask is centered at the 0.5UI point of the bit time. The margin to the mask can then be determined based on its static position. The skew eye mask is positioned by the simulator after simulation to maximize eye margin and place the mask at its optimal point in the eye

To obtain the mask margin numbers using a skew eye mask:


- 1 Slice UI into discrete time slices (for example, 256 slices per UI).
- 2 Place mask edge at zero UI and obtain margins for all time slices that cross mask (margins are positive and negative).
- 3 Increment mask to next time slice and recapture margins for all slices that cross mask.
- 4 Continue this process until right side of mask hits 1 UI.

Taking all of this data, obtain the best position for the mask that maximizes the worst case margin (looking for most positive result) across all time slices. Then report the worst case margin. The determination of mask margins is shown as:

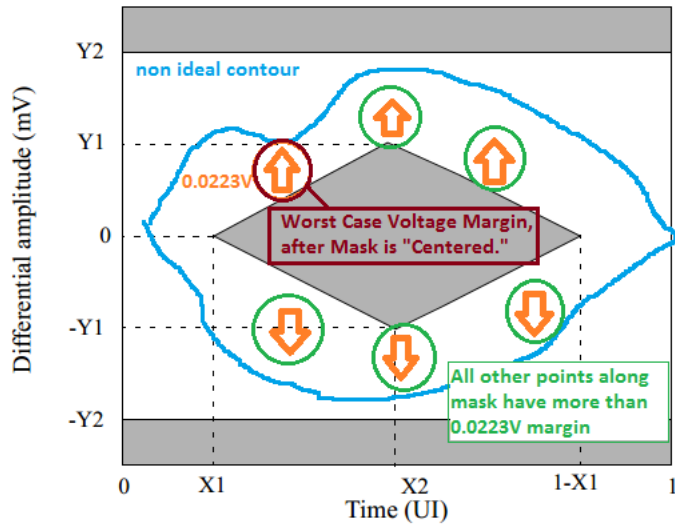

The worst case margin is shown to be between a perturbation of the eye contour and the mask. In this case no outer mask is assumed.

If both an outer mask and inner mask are applied in a simulation and a violation is reported, you need to determine where the violation comes from. A violation to the outer eye mask when both inner and outer eye masks applied is shown:

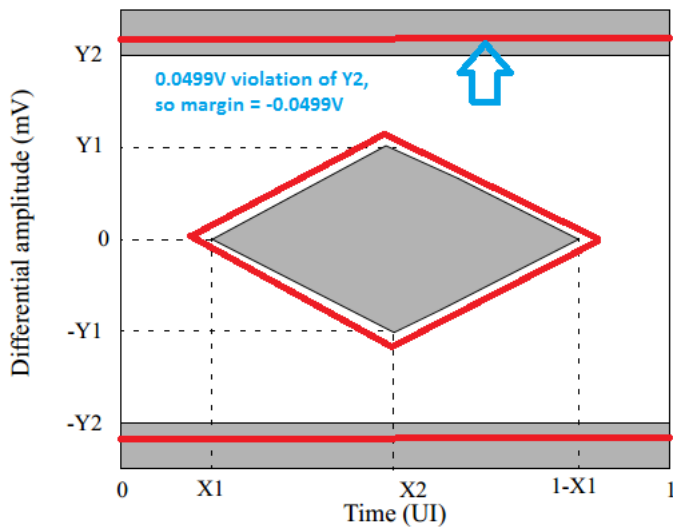

After simulation, the results for eye mask margin is reported:

SkewEyeMask_die (V)	SkewEyeMask_die (UI)	StaticEyeMask_die (V)	StaticEyeMask_die (UI)
0.0317	0.164	0.0305	0.176
0.0369	0.168	0.0362	0.172
-0.0138	0.000	-0.0146	0.000
0.029	0.152	0.0283	0.164
0.0355	0.172	0.034	0.180
-0.00951	0.000	-0.0108	0.000
0.0144	0.106	0.0141	0.0977

In this case both skew and static masks are applied. Eye height and width margins are reported in the individual columns. Comparing static and skew mask margins in the table below show slightly more margin when applying the skew mask. The red entries represent violations to either the upper or lower mask. To identify the violation the Target BER contour and the mask can be plotted.


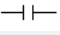
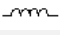



## See Also

### More About




- “Clock Modes” on page 13-2
- “Creating Compliance Masks in Serial Link Designer” on page 5-28



## Elements in Link Designer Apps

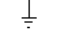

To design a project using the Serial Link Designer or the Parallel Link Designer app, you need to add elements to the schematic. This table provides you more information about the elements you can use. All the elements in **Serial Link Designer** are differential.

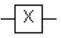
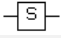





Element	Symbol	Description
Resistor		Add a new resistor to the canvas.
Capacitor		Add a new capacitor to the canvas.
Inductor		Add a new inductor to the canvas.
Lossless Transmission Line		<p>Add a new ideal transmission line to the canvas.</p> <p>The lossless or ideal transmission line is modeled using two parameters: impedance and delay. You can sweep these parameters over a range in the design exploration process.</p> <p>The model on the schematic is based on typical etch corners. You can simulate the model for other etch corners. The parameters are then scaled for corner conditions specific to those corners. For more information on etch corners, see “Specify Corner Conditions in Serial Link Design” on page 2-7 or “Specify Corner Conditions in Parallel Link Design” on page 6-6.</p>
DC Voltage		Add a new two-port DC voltage source to the canvas.
Ground		Add a new ground element to the canvas.



Element	Symbol	Description
Subcircuit		<p>Add a new subcircuit element to the canvas.</p> <p>SPICE subcircuit models for passive elements must be present in the library before you can place them on the schematic. The default project libraries for SPICE subcircuits are in the <code>si_lib/spice</code> folder in the project.</p>
S-Parameter		<p>Add a new S-Parameter element to the canvas. You can include S-parameters in the Touchstone file format. Use the <b>Import S-Parameters...</b> option from the <b>Library</b> tab to copy the S-parameter to the library, create a wrapper, and edit port maps.</p> <p>For more information on how to use and edit S-parameters, see “Edit Imported S-Parameter Data” on page 5-2.</p>
Single-ended Via		<p>Add a new single-ended via to the canvas.</p> <p>You can create via models based on a stackup and via physical parameters. You have to specify the number of signal layers in the default stackup. You can modify the default via model using the via editor. For more information, see “Via and Stackup Management in Serial Link Project” on page 4-9 or “Via and Stackup Management in Parallel Link Project” on page 8-9.</p>

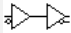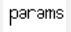Element	Symbol	Description
Differential Via		<p>Add a new differential via to the canvas.</p> <p>You can create via models based on a stackup and via physical parameters. You have to specify the number of signal layers in the default stackup. You can modify the default via model using the via editor. For more information, see “Via and Stackup Management in Serial Link Project” on page 4-9 or “Via and Stackup Management in Parallel Link Project” on page 8-9.</p>
Lossy Transmission Line		<p>Add a new single-ended transmission line to the canvas.</p> <p>The lossy transmission line is based on a frequency dependent RLGC model created by a 2-D field solver. The field solver has a transmission line editor for entering cross-section. Using the transmission line editor, you can either create a new model for the library or edit the model for an existing element on the canvas.</p> <p>You can create a lossy transmission line based on these model types:</p> <ul style="list-style-type: none"> <li>• Simple</li> <li>• Microstrip</li> <li>• Buried microstrip</li> <li>• Stripline</li> </ul>

Element	Symbol	Description
Differential Lossy Transmission Line		<p>Add a new differential transmission line to the canvas.</p> <p>The lossy transmission line is based on a frequency dependent RLGC model created by a 2-D field solver. The field solver has a transmission line editor for entering cross-section. Using the transmission line editor, you can either create a new model for the library or edit the model for an existing element on the canvas.</p> <p>You can create a lossy transmission line based on these model types:</p> <ul style="list-style-type: none"> <li>• Simple</li> <li>• Microstrip</li> <li>• Buried microstrip</li> <li>• Stripline</li> </ul>
Differential Buffer		<p>Add a new differential buffer designator to the canvas.</p> <p>A schematic must have at least two designators: a transmitter and a receiver.</p> <p>You can change the buffer model for a designator in three ways:</p> <ul style="list-style-type: none"> <li>• using the Part/Pins dialog box,</li> <li>• using the IBIS File &amp; Model dialog box,</li> <li>• and using the default model menu items.</li> </ul>

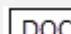Element	Symbol	Description
Differential Repeater		<p>Add a new repeater/retimer designator element to the canvas.</p> <p>A schematic must have at least two designators: a transmitter and a receiver.</p> <p>You can change the buffer model for a designator in three ways:</p> <ul style="list-style-type: none"> <li>• using the Part/Pins dialog box,</li> <li>• using the IBIS File &amp; Model dialog box,</li> <li>• and using the default model menu items.</li> </ul>
HSPICE .param statement		Add a new <b>HSPICE .param</b> statement to the canvas.
Differential Voltage Probe		Add a new differential voltage probe point to the canvas. Placing the probe symbol automatically creates a waveform node in the waveform file at the probed location.
Documentation Line		Add a graphic line to the panel
Documentation Circle		Add a circle or an oval to the panel.
Documentation Box		Add a square or a rectangle to the panel.
External Documentation Link		Add a link to external documentation for reference.

### See Also

Serial Link Designer | Parallel Link Designer

### More About

- “Available Operations in Signal Integrity Viewer” on page 13-38

## PAMn Capabilities


The IBIS BIRD (Buffer Issue Resolution Document) 213 adds supports to IBIS-AMI models for all levels of signaling from PAM2 (NRZ) onward, collectively known as PAMn. You can simulate PAMn models up to  $n = 32$  with specific mapping using the **Serial Link Designer** or **Parallel Link Designer** apps.

Some important terms related to PAMn signaling include:

- **Payload** — Binary bits to be transmitted using PAMn voltage levels.
- **Message** — PAMn symbols.
- **Mapping** — Look-up table used to translate PAMn voltage levels to binary bits.
- **Encoding** — Process of converting binary payload to PAMn symbols sent.
- **Decoding** — Process of converting received PAMn symbols to binary bits.

You can select the number of modulation levels with the `Modulation_Levels` AMI Parameter in the solution space.

To define PAMn mappings, in the Stimulus Editor, set the **Number Modulation Levels** and **Mapping** parameters. The available mapping option depends on the modulation scheme selected.

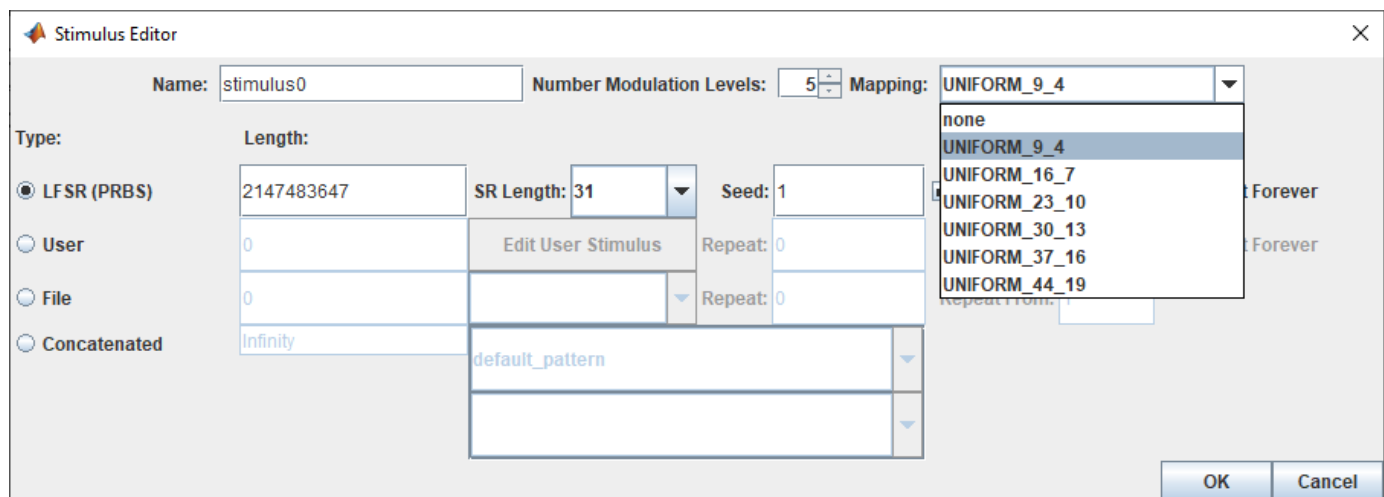

### Mapping Binary Payload to PAMn Symbols

For a system that transmits and receives PAMn symbols, the ability to reliably map between binary and PAMn symbols is crucial.

For NRZ or PAM2 modulation, the mapping is trivial.

Binary Payload	Message Symbol	Symbol Voltage
0	0	-0.5
1	1	0.5

You can map a PAM4 symbol in 24 ways. This table shows one of the possible solutions:

Binary Payload	Message Symbol	Symbol Voltage
00	0	-0.5
01	1	-0.1666
10	2	0.1666
11	3	0.5

For PAM2, PAM4, PAM8, and other PAM<sub>n</sub>, where n is a power of 2, the mapping is straightforward in that the message symbol sequence is of length 1. For PAM3, the mapping is not as clean since the number of bits per symbol is not an integer. This table shows the PAM3 symbol mapping for the IEEE 100Base-T1 standard.

Binary Payload	Message Symbol	Symbol Voltage
000	0 1	-0.5 -0.5
001	0 1	-0.5 0
010	0 2	-0.5 0.5
011	1 0	0 -0.5
100	1 2	0 0.5
101	2 0	0.5 -0.5
110	2 1	0.5 0
111	2 2	0.5 0.5

The eight possible binary payload sequences in this table are assigned a unique message symbol sequence. But the 1 1 message sequence is not specified. As such, if a 1 1 is detected at the receiver, a simple decoding of the symbol message back to binary is not possible.

To analyze this mapping further, you need the payload and message set size. The binary payload length is 3, and therefore the binary payload set size is  $2^3 = 8$ . The message length is 2 and with PAM3, the symbol message set size is  $3^2 = 9$ . Therefore, the coverage of this PAM3 mapping is  $8/9 = 88.88\%$ . The IEEE 100Base-T1 standard could have chosen a different symbol sequence for the missing message. So there are many different possible mapping schemes. A PAM3 mapping with greater coverage is one with a binary payload length of 11 and a message length of 7. This has a coverage of  $2^{11}/3^7 = 93.64\%$  and has 139 missing messages.

One possible approach to mapping a binary payload to PAM<sub>n</sub> symbols and locating the missing messages is:

- Represent the binary payload as a base-10 integer  $x$ .
- Scale  $x$  from the binary payload range of  $[0, 2^{\text{PayloadLength}-1}]$  to the range of  $[0, n^{\text{MessageLength}-1}]$  to obtain  $y$ .
- Convert  $y$  to a base- $n$  number to obtain the PAM<sub>n</sub> message sequence.

This mapping algorithm has the benefit of distributing the missing symbol sequences uniformly within the range of message sequences.

The complete list of mapping depending on the number of modulation levels is shown:

Number of Modulation Levels	Mapping
2	Default
3	UNIFORM_3_2
	UNIFORM_11_7
	UNIFORM_19_12
	USB4_V2
	ETH_100BASE_T1
4	PAM4_0132
	PAM4_0123
	PAM4_0213
	PAM4_0231
	PAM4_0312
	PAM4_0321
	PAM4_1023
	PAM4_1032
	PAM4_1203
	PAM4_1230
	PAM4_1302
	PAM4_1320
	PAM4_1302
	PAM4_2013
	PAM4_2031
	PAM4_2103
	PAM4_2130
	PAM4_2301
	PAM4_2310
	PAM4_3012
	PAM4_3021
PAM4_3102	
PAM4_3120	
PAM4_3201	
PAM4_3210	
5	UNIFORM_9_4
	UNIFORM_16_7
	UNIFORM_23_10
	UNIFORM_30_13
	UNIFORM_37_16

Number of Modulation Levels	Mapping
	UNIFORM_44_19
6	UNIFORM_5_2
	UNIFORM_18_7
	UNIFORM_31_12
7	UNIFORM_14_5
	UNIFORM_5_2
	UNIFORM_8_3
	UNIFORM_11_4
8	UNIFORM_3_1
9	UNIFORM_3_1
	UNIFORM_19_6
10	UNIFORM_3_1
	UNIFORM_13_4
	UNIFORM_23_7
	UNIFORM_33_10
	UNIFORM_43_13
11	UNIFORM_17_5
	UNIFORM_3_1
	UNIFORM_10_3
	UNIFORM_24_7
	UNIFORM_31_9
	UNIFORM_38_11
12	UNIFORM_7_2
	UNIFORM_3_1
	UNIFORM_25_7
	UNIFORM_43_12
13	UNIFORM_11_3
	UNIFORM_3_1
	UNIFORM_7_2
	UNIFORM_37_10
14	UNIFORM_15_4
	UNIFORM_7_2
	UNIFORM_11_3
	UNIFORM_19_5
15	UNIFORM_31_8
	UNIFORM_11_3



Number of Modulation Levels	Mapping
	UNIFORM_15_4
	UNIFORM_19_5
	UNIFORM_23_6
	UNIFORM_27_7
	UNIFORM_35_9
	UNIFORM_39_10
16	UNIFORM_4_1
17	UNIFORM_4_1
	UNIFORM_49_12
18	UNIFORM_25_6
	UNIFORM_4_1
19	UNIFORM_21_5
	UNIFORM_4_1
	UNIFORM_38_9
20	UNIFORM_17_4
	UNIFORM_4_1
	UNIFORM_30_7
	UNIFORM_43_10
21	UNIFORM_13_3
	UNIFORM_4_1
	UNIFORM_35_8
22	UNIFORM_22_5
	UNIFORM_4_1
	UNIFORM_13_3
	UNIFORM_31_7
	UNIFORM_40_9
	UNIFORM_49_11
23	UNIFORM_9_2
	UNIFORM_4_1
24	UNIFORM_9_2
	UNIFORM_4_1
	UNIFORM_32_7
25	UNIFORM_9_2
	UNIFORM_4_1
	UNIFORM_23_5
	UNIFORM_37_8

<b>Number of Modulation Levels</b>	<b>Mapping</b>
26	UNIFORM_14_3
	UNIFORM_4_1
	UNIFORM_9_2
	UNIFORM_47_10
27	UNIFORM_19_4
	UNIFORM_9_2
	UNIFORM_14_3
28	UNIFORM_24_5
	UNIFORM_9_2
	UNIFORM_14_3
	UNIFORM_19_4
29	UNIFORM_34_7
	UNIFORM_9_2
	UNIFORM_14_3
	UNIFORM_19_4
	UNIFORM_24_5
	UNIFORM_29_6
30	UNIFORM_49_10
	UNIFORM_9_2
	UNIFORM_14_3
	UNIFORM_19_4
	UNIFORM_24_5
	UNIFORM_29_6
	UNIFORM_34_7
	UNIFORM_39_8
	UNIFORM_44_9
31	UNIFORM_64_13
	UNIFORM_29_6
	UNIFORM_34_7
	UNIFORM_39_8
	UNIFORM_44_9
	UNIFORM_49_10
32	UNIFORM_5_1

**PAM6 Mapping Using UNIFORM\_5\_2 Standard**

For PAMn = 6, a payload length of 5 bits and a message length of 2 symbols gives 88.88% coverage with 4 missing symbol sequences. This example illustrates how each possible payload is mapped to a symbol sequence and the missing symbol sequences are distributed uniformly throughout.

Define the PAMn level, payload length, and message length.

```
n = 6; %PAMn Levels
PayloadLength=5; %Number of binary bits to encode
MessageLength=2; %Number of PAMn symbols to encode each payload into
```

Calculate the number of gaps between the number of possible messages and the number of possible payload values.

```
missingSymbolSequenceCount = n^MessageLength - 2^PayloadLength;
```

To loop over every possible payload value, first represent the binary payload as a base-10 integer `Payload`. Scale this value from the binary payload range of  $[0, 2^{\text{PayloadLength}} - 1]$  to the range of  $[0, N^{\text{MessageLength}} - 1]$  to get the **ScaledPayload** parameter. Then convert the **ScaledPayload** parameter to a base-N number. This approach uniformly distributes any missing message sequences throughout the message space. You can visualize the integer and binary payload, scaled payload, and resulting PAMn symbol values.

```
for Payload = 0:2^PayloadLength-1

    ScaledPayload = round(Payload*(1 + missingSymbolSequenceCount/(2^PayloadLength)));
    ScaledPayload1 = ScaledPayload; %Store initial value for report

    %Convert the integer Payload value to a base N number
    SymbolsOut=zeros(1,MessageLength);
    for jj=1:MessageLength

        %Determine the remainder after division to determine the next
        %least-significant base N value and store output symbols big-endian
        SymbolsOut(MessageLength+1-jj) = (mod(round(ScaledPayload),n));

        %Remove contribution of least-significant base N value and shift by
        %division (analogous to how divide by 2 is a binary bitshift).
        ScaledPayload = (ScaledPayload - SymbolsOut(MessageLength+1-jj)) / n;
    end

    %Report out payload (integer and binary), scaled payload and resulting
    %PAMn symbol values

    if Payload==0
        %Print out header of report
        fprintf('%13s --> %6s --> %s\n','Payload ', 'Scaled ', 'Output Symbols');
    end

    fprintf('%4g: %7s --> %8.6g --> %s\n',...
        Payload,... %Input payload value in integer form
        dec2bin(Payload, PayloadLength), ... %Input payload value in binary form
        ScaledPayload1,... %Scaled payload value in double form
        num2str(round(SymbolsOut))) %Output PAMn message symbol values
end

Payload --> Scaled --> Output Symbols
0: 00000 --> 0 --> 0 0
1: 00001 --> 1 --> 0 1
```

```

2: 00010 --> 2 --> 0 2
3: 00011 --> 3 --> 0 3
4: 00100 --> 5 --> 0 5
5: 00101 --> 6 --> 1 0
6: 00110 --> 7 --> 1 1
7: 00111 --> 8 --> 1 2
8: 01000 --> 9 --> 1 3
9: 01001 --> 10 --> 1 4
10: 01010 --> 11 --> 1 5
11: 01011 --> 12 --> 2 0
12: 01100 --> 14 --> 2 2
13: 01101 --> 15 --> 2 3
14: 01110 --> 16 --> 2 4
15: 01111 --> 17 --> 2 5
16: 10000 --> 18 --> 3 0
17: 10001 --> 19 --> 3 1
18: 10010 --> 20 --> 3 2
19: 10011 --> 21 --> 3 3
20: 10100 --> 23 --> 3 5
21: 10101 --> 24 --> 4 0
22: 10110 --> 25 --> 4 1
23: 10111 --> 26 --> 4 2
24: 11000 --> 27 --> 4 3
25: 11001 --> 28 --> 4 4
26: 11010 --> 29 --> 4 5
27: 11011 --> 30 --> 5 0
28: 11100 --> 32 --> 5 2
29: 11101 --> 33 --> 5 3
30: 11110 --> 34 --> 5 4
31: 11111 --> 35 --> 5 5

```

Create and print out the summary string.

```

strout = sprintf(['PAMn=%g, Payload Length=%g, Message Length=%g\n',...
    'Missing %g symbol sequences for coverage of 2^{%g}/%g^{%g} = %g%%'],...
    n,PayloadLength,MessageLength,...
    missingSymbolSequenceCount,...
    PayloadLength,n,MessageLength,2^PayloadLength/n^MessageLength*100)

strout =
    'PAMn=6, Payload Length=5, Message Length=2
    Missing 4 symbol sequences for coverage of 2^{5}/6^{2} = 88.8889%'

```

Identify and visualize the gaps in message symbol sequences.

```


Payload = 0:2^PayloadLength-1;
ScaledPayload = Payload + (n^MessageLength-2^PayloadLength)/(2^PayloadLength)*Payload;

isaGap = ones(1,n^MessageLength-1);
isaGap(round(ScaledPayload)+1) = 0;

stem(0:length(isaGap)-1,isaGap)
axis([0 n^MessageLength-1 0 1.1])
title({'Location of the missing message symbol sequences for ',strout})
xlabel('Message (Decimal)')

```

Location of the missing message symbol sequences for  
PAMn=6, Payload Length=5, Message Length=2  
Missing 4 symbol sequences for coverage of  $2^5/6^2 = 88.8889\%$

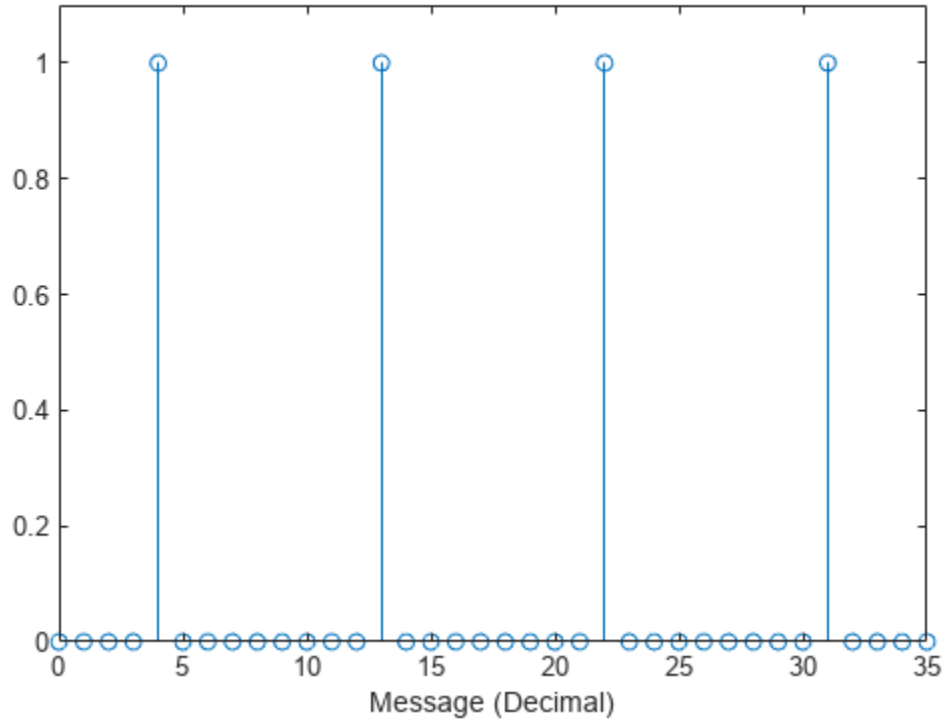

### See Also



[Serial Link Designer](#) | [Parallel Link Designer](#)

## Available Operations in Signal Integrity Viewer








You can use the **Signal Integrity Viewer** toolstrip operations to view and analyze waveforms. The available operations can be divided into these groups:




- Refresh
- Zoom
- Marker
- Threshold
- Display mode
- Miscellaneous

### Refresh





Button	Operation	Description
	Reread data and refresh display	Reread data from files and redraw currently displayed waveforms.
	Refresh display	Redraw currently displayed waveforms.

**Zoom**

Button	Operation	Description
	Zoom fit	Fit waveforms to display area.
	Zoom fit vertical	Fit waveforms in the vertical dimension only.
	Zoom fit horizontal	Fit waveforms in the horizontal dimension only.
	Zoom points	Click and drag to draw a zoom area.
	Zoom min/max	Specify the coordinates of the zoom area.  The minimum X and minimum Y points specify the lower left of the zoom area. The maximum X and maximum Y points specify the upper right of the zoom area.
	Zoom in	Increase the magnification of the display area.
	Zoom out	Decrease the magnification of the display area.




Button	Operation	Description
	Zoom horizontal	Click and drag to draw a horizontal zoom area.
	Zoom vertical	Click and drag to draw a vertical zoom area.
	Zoom previous	Set display to previous zoom state.

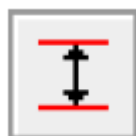**Marker**



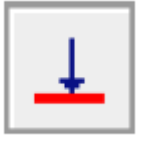


Button	Operation	Description
	Measure	Add a marker to the display to perform measurements.  Markers can be single-point or two point. The placement of the markers can be constrained to the selected waveform and/or thresholds.
	Horizontal measure	Add a marker to the display to perform horizontal measurements.
	Vertical measure	Add a marker to the display to perform vertical measurements.
	Text box	Add a text box as marker label.





**Threshold**

Button	Operation	Description
 A square button icon containing a red horizontal line with a blue arrow pointing downwards towards it.	Horizontal threshold	Add a horizontal threshold to the display.
 A square button icon containing a red vertical line with a blue arrow pointing to the left towards it.	Vertical threshold	Add a vertical threshold to the display.
 A square button icon containing a red diagonal line with a blue circular arrow around it, indicating rotation.	Rotated threshold	Add a rotated threshold to the display.

**Display Mode**

Button	Operation	Description
	Overlay mode	Overlay waveforms on the same y-axis. This is the default display mode.
	Eye mode	Display the current waveform as an eye diagram.
	Fourier transform mode	Display the Fourier transform of the displayed waveforms.
	Split view mode	Display each waveform on a separate y-axis.
	Polar view mode	Display compatible nodes on a polar chart.

**Miscellaneous**

Button	Operation	Description
	Delete	Delete the selected waveform(s).
	Display preferences	Launch the Display Preferences dialog box.

**See Also**  
**Signal Integrity Viewer**

**More About**

- “Elements in Link Designer Apps” on page 13-24


## Advanced Visualization Using Signal Integrity Viewer

Using the **Signal Integrity Viewer** app, you can display the various frequency and time domain waveforms. You can also plot the simulation results against single or multiple variables. Plotting in such a way is useful in identifying the trends and/or outliers which might otherwise be missed. You might be interested to analyze several factors in a design:

- Cost vs. performance.
- Stackup/via design.
- ASIC/IP vendor selection.
- Package pinout.
- Connector selection.
- Interconnect design.
- Equalization settings.
- Speed vs. length.
- Reducing output power.
- Extending backplane.
- Impact of PVT.
- Standards compliance.


Using the **Plots** mode in the **Signal Integrity Viewer**, you can perform these advanced visualization techniques.

A particular simulation run can contain multiple sets of eye diagrams. If the set of data is small, you can easily plot each result and identify which has the highest and widest eye opening.

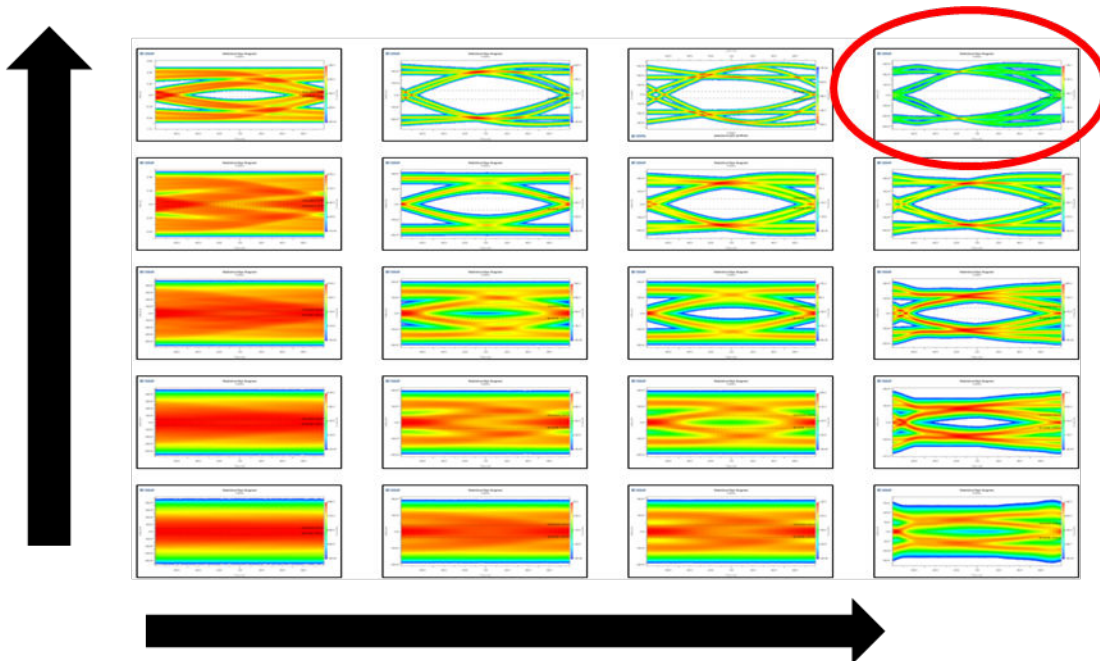

But when there are hundreds or even thousands of simulation results, manually plotting each eye is not feasible. Consider visualizing data from a large data set. You can plot the differences in

performance of a channels based on three different IC packages. You can also analyze the corner process of the packages (FF/TT/SS) and three different via designs on the board. The criterion for this experiment is to make design choices based on maximizing eye height.

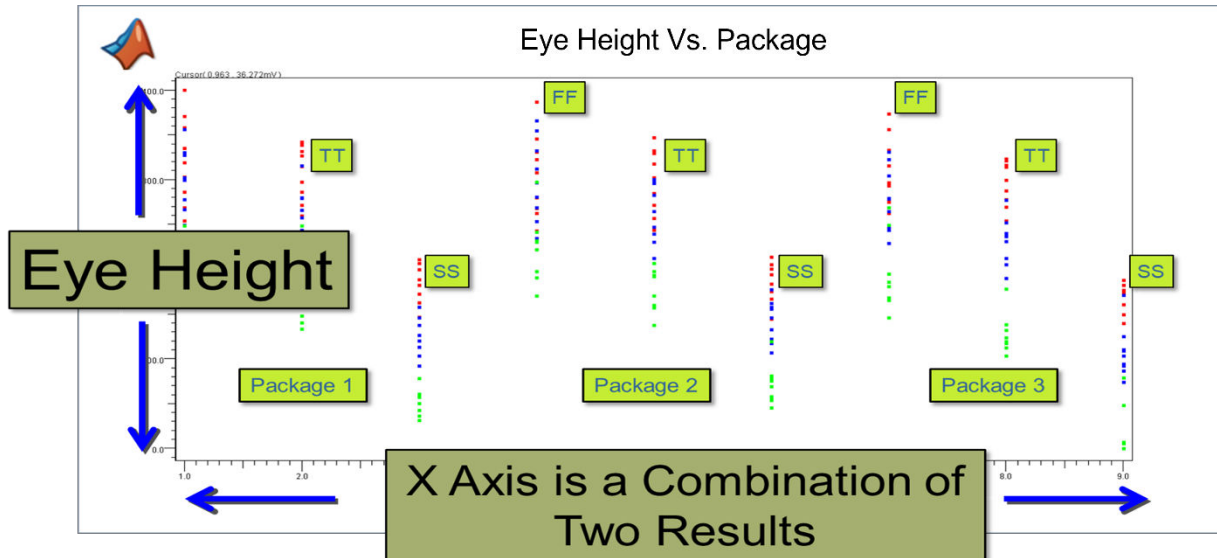


For each process corner, there are red, blue, and green dots which identify individual simulation results for eye height. Each simulation also has one of the three different via designs. These via designs are:

- Through-hole via design (red dots), where the signal routed from the top layer of the board to the bottom layer, straight through the via.
- Back drilled via (blue dots), where the stub caused by routing to an inner layer of the board is back drilled leaving only a small stub.
- Non-back drill via (green dots), where the via has a long stub when routing to an inner layer of the board.

You can see that performance is similar between package and between the process corners of each package. You can also easily see that the red dots corresponding to through-hole via eye heights have the largest eye opening on average.

## Set Up Axes for Advanced Visualization


To access the advanced visualization options, select the Plots tab in the **Signal Integrity Viewer** app window.

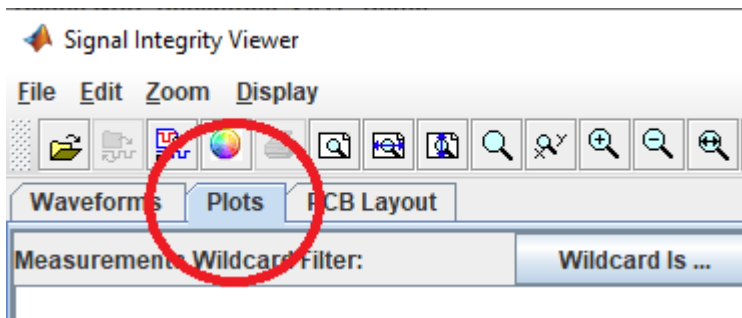


In Plots mode, the lower left corner of the window contains the various tabs. For **Serial Link Designer**, these correspond to the channel analysis reports and results. For **Parallel Link Designer** these correspond to timing and waveform reports and results.

**Note** The correct tab must be selected to see the results of that specific analysis (for example: network, statistical, or time domain). If the results look strange, make sure you are in the right tab.

Plots mode gives you the control of both the x and y-axis to plot any results or variables contained in the simulation report. On the left-hand side of the window, there is a list of the variables that correspond to the y-axis. There is also a wildcard filter at the top of the dialog box to easily find the desired result or variable for plotting.

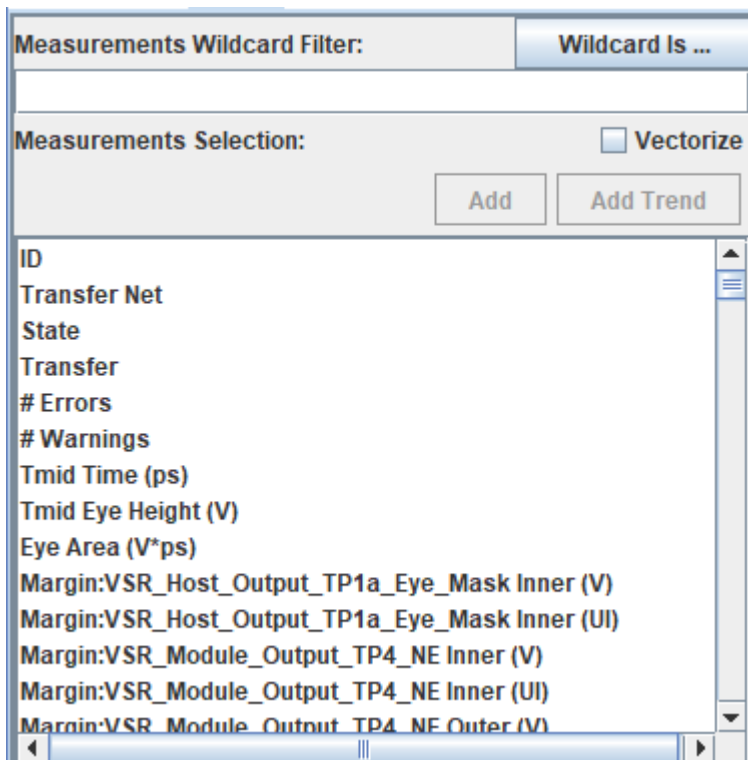

To set up the x-axis, select the gear icon at the top of the first column (named **Row**) in the results table. This opens the Table Column Control dialog box where you can select the x-axis results and variables for a given plot.

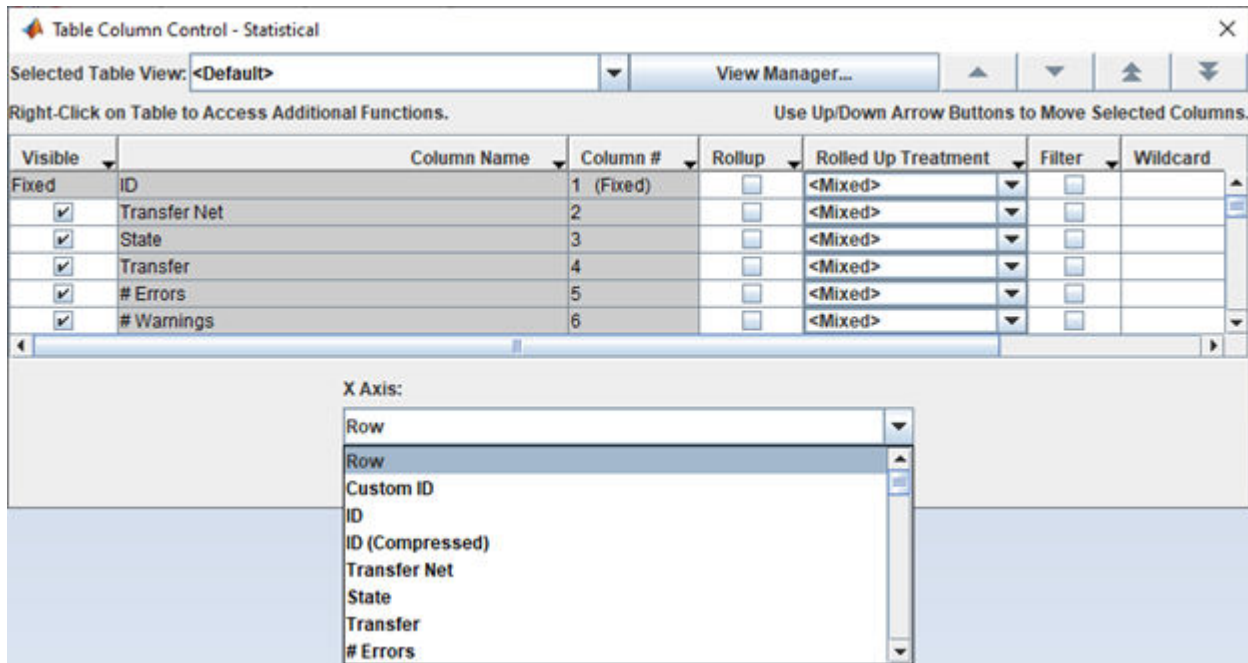


After defining the x and y-axes, you can do scatter plots or trend plots.

## Scatter Plot

To display the scatter plot, click the **Add** button. If you have not defined the x-axis variable, it defaults to **Row** which is the order of simulation results.

Consider the scatter plot for simulations of a design involving a backplane with line cards on either end. The trace lengths of the backplane and line cards are swept along with a 2-tap FFE (feed-forward equalizer) in the transmitter. The taps include a main tap (0) and a post-cursor tap (1). The DFE (decision feedback equalizer) taps in the receiver are swept for 7, 9, and 12. This results in 1350 simulations. You can how the number of DFE taps affect eye height and eye width across all the trace lengths and FFE settings.

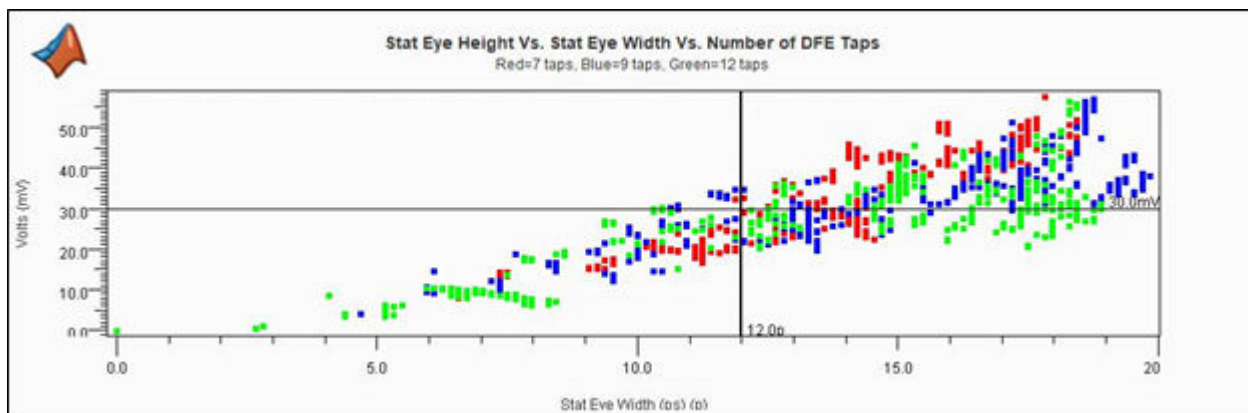

The plot shows the minimum eye height and width values. The upper right are the results that meet the criteria of the design. Although the plot does not provide any definite answers, it demonstrates the process of visualizing the data.

You can further analyze the data by taking one of the DFE tap numbers and plotting the lengths of the backplane or line card. This shows which number of taps might be optimum for a given length. In some cases, it may take many of these types of plots to find problems in a design or determine how to make a design work.


## Trend Plot

To display the trend plot, click the **Add Trend** button.

**Note** For trend plots, the data must be sorted on a unique variable such as corner process, tap setting, or trace length.

Consider a trend plot that shows the effect on eye height when sweeping Tx FFE tap values. The transmitter has two taps: a main tap (0) and a post-cursor tap (1). The values of the main tap are swept from 0.7V to 1.0V. The post cursor tap weights are applied to normalize the result. For example, if tap 0 is set at 0.7, tap 1 is set at 0.3V. An eye height limit is set at 250mV. Each trend plot red, green, and blue correspond to process corners FFFE, TTTE, and SSSE respectively.

You can set the main tap from 0.7V to 0.84V meet the eye height limit of 0.25V.

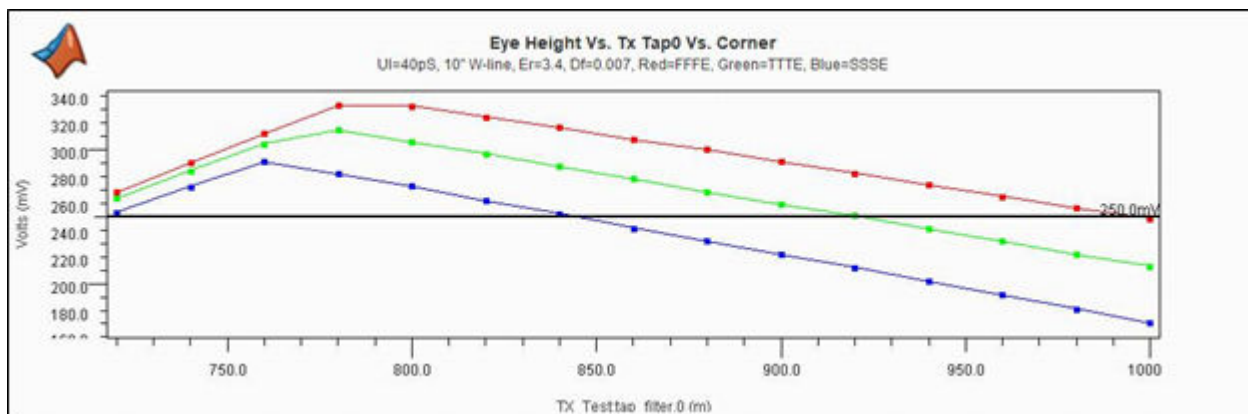

The optimal tap settings are 0.78V for the main tap and 0.22V for the post-cursor tap which gives a maximum eye height of approximately 0.33V.

## See Also


**Signal Integrity Viewer**

## More About

- “Managing Simulation Data and Results” on page 3-29



## S-Parameters in Serial Link Projects

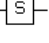You can import S-Parameter data from a Touchstone 1 file format (sNp files) into the libraries of the **Serial Link Designer** app. The import operation includes creating a wrapper and editing a port map since there is no standard way to determine how nodes in a Touchstone file map to connections in the system. To place the S-Parameter from the library in the schematic, click the **S-Parameter** () button.

### Import S-Parameters

To import S-Parameters into a project library, click **Libraries > Import S-Parameter...** from the app toolstrip. This launches two windows: Import S-Parameter File(s) and Select S-Parameter (Touchstone) Files dialog boxes.

In the Select S-Parameter (Touchstone) Files dialog box, select one or more Touchstone files to import in the library. Then use the Import S-Parameter File(s) dialog box to import the files and create port maps. You can also edit the port maps using the Port Map Editor dialog box.

When you import multiple files with the same number of ports, the app puts the wrapper files for the S-Parameters into a single file. This is default behavior as it simplifies the library structure and makes it easy to manage sweeps. You can deselect **Merge Wrappers** option in the Select S-Parameter (Touchstone) Files dialog box to turn off this default behavior.

While importing S-Parameter data, you can check some quality metrics of the data by selecting the **Check Quality** option. You can check these metrics:


- **Reciprocity** — 100% minus ten times the average absolute value of the reciprocity error, expressed as a percentage.
- **Passivity** — 100% minus ten times the average excess gain, expressed as a percentage.
- **Causality** — 100% minus ten times RMS difference between the S-Parameters as given and the fully causal version.
- **Real/Imaginary Behavior** — For all through paths verifies that a polar plot of real vs. imaginary is a clockwise spiral around the origin.

After you finish importing the S-Parameter files, you can see the import results in the **Import Log** section of the Select S-Parameter (Touchstone) Files dialog box.

### S-Parameter Port Maps

There is no standard way to map Touchstone file ports to the symbol pins. So, the app creates a port map for each imported Touchstone file by identifying the through paths and the differential pairs. The app finds the through paths by looking at the port to port loss at 50MHz and finding the smallest loss between the ports. The app also looks at the coupling between the through paths and considers the pairs with most coupling as differential pairs.

To view or modify the port map, launch the Edit S-Parameter File Port Maps dialog box by selecting **Launch Edit Port Maps Editor** option in the Select S-Parameter (Touchstone) Files dialog box. The port map editor can edit multiple files at once. Each file is in its own tab in the editor.

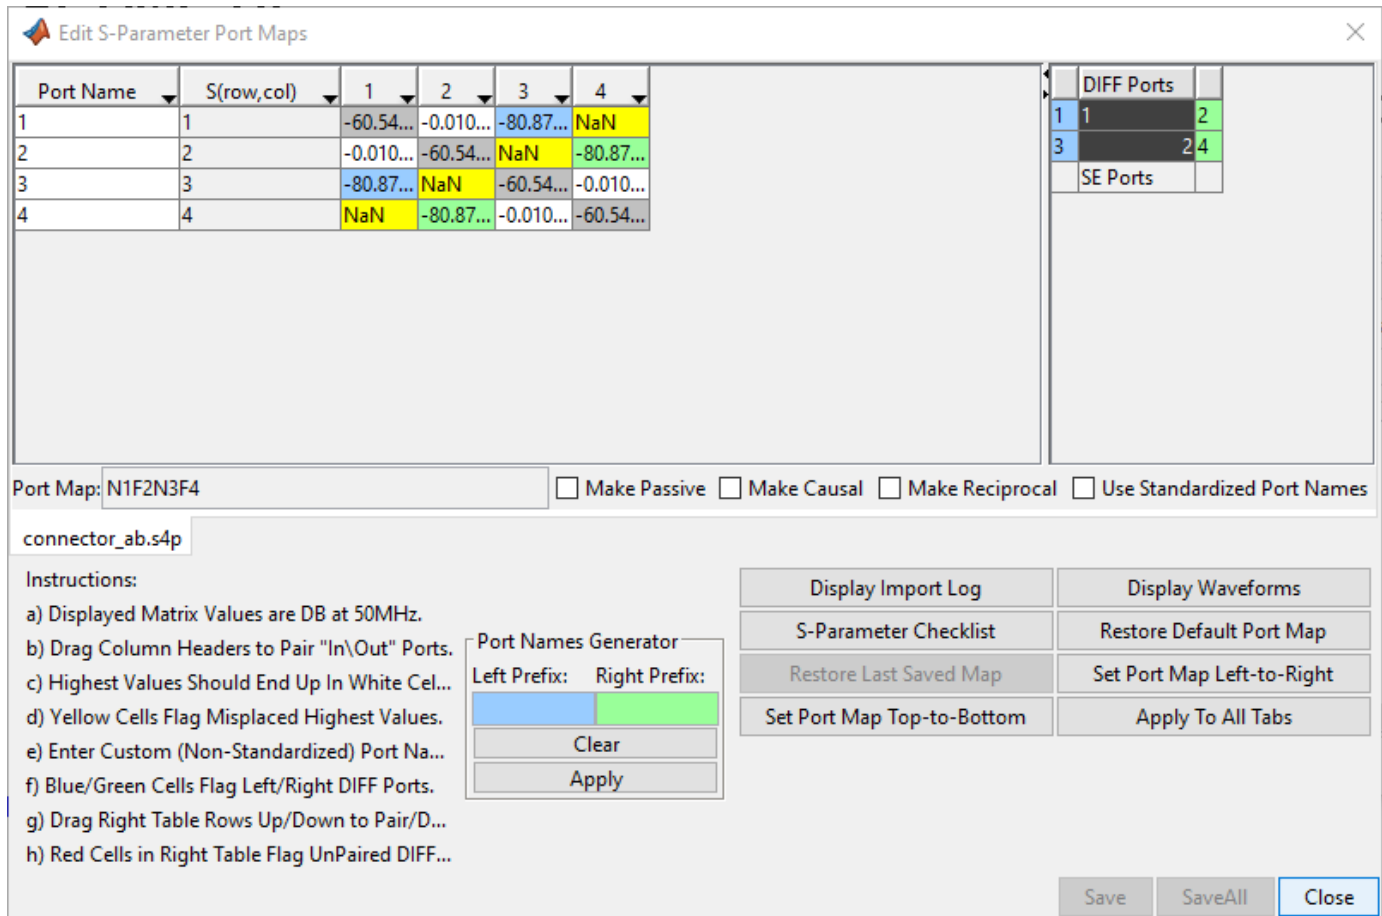

The table on the left shows the S-Parameter values in dB at 50MHz. The table on the right is the symbols view that shows how the ports maps to the schematic symbol. The lower part of the dialog box allows you to view the import log, launch the waveform viewer, restore to defaults and apply changes to the file being modified to all files.

The app determines through paths by finding the ports that have the smallest loss between them. In this case, the white cells are the cells with the smallest loss. The rows and columns in the table represent the port matrix of the S-Parameter block, so the upper left gray cell is the  $S_{11}$  value, and the white cell to its right is the  $S_{12}$  value. The through paths in this case are  $S_{12}$ ,  $S_{21}$ ,  $S_{34}$  and  $S_{43}$ .

The app finds the differential pairs by looking at coupling between the through paths. The blue cells represent the left side differential ports. The green cells represent the right side differential ports. The Port Map field shows the port numbers and whether they are the near (N) or far (F) end of a through path. For example, N1F2N3F4 is an S-Parameter block with ports 1 and 3 on the near side and ports 2 and 4 on the far side, making the through paths 1 to 2 and 3 to 4.

You can change the order the table columns by clicking on a column header and dragging it left or right to the desired location. o You can also change the port order by clicking and dragging the blue or green ports on the right-hand side. o You can move ports from **DIFF Ports** to **SE Ports** by clicking and dragging as well.

**Note** It is recommended that you always review the auto-generated port map.

By default the port names are the same as the port numbers. You can edit the names in the far left column of the table. You can also change the port names so that the through path is always from ports with odd numbers for names to ports with even numbers for names. To do this, select the **Use Standardized Port Names** option. This creates symbols with odd-numbered port names on the left and even-numbered port names on the right.

## Combining S-Parameter Files

You can combine the S-Parameters in one of the two ways:

- combine crosstalk S-Parameters into a larger S-Parameter file, or
- combine channel S-Parameters for different elements like connector models, transmission line models and others in series.

### Combine Crosstalk S-Parameters

To analyze crosstalk in the **Serial Link Designer** app, you must use a model of the coupled interconnect. The apps can combine s4p files representing through, NEXT (near end crosstalk) and FEXT (far end crosstalk) paths into larger S-Parameter files for use in the pre-layout crosstalk analysis. You must import the s4p files into the libraries before combining them. This allows you to check the S-Parameters port map consistency for passivity, causality and reciprocity.

To combine the files, click **Libraries > Combine S-Parameters**. This launches a dialog box where you can specify the number of FEXT and NEXT aggressors. This determines the size of the resulting S-Parameter file.

After you specify the number of aggressors and click **OK**, the app launches the Combine S-Parameters dialog box. Here you can match the previously imported s4p files to their place in the combined S-Parameter file. Once you save the combined S-Parameter file to the library, you can place it on the schematic like any other S-Parameter.

### Combine Channel S-Parameters

To combine multiple models in series to create a combined S-Parameter file, follow these steps:

- Import the individual S-Parameter files.
- Place the models on a schematic sheet between the ideal transmitter and receiver technology models.
- Run network characterization and autoload the results.
- Export the S-Parameters.

## Checking S-Parameter Files

To check an S-Parameter file it is necessary to look at multiple representations of the data. Time domain, frequency domain, real/imaginary single-ended and differential data can all help diagnose problems in the data. The S-Parameter Checklist in the **Serial Link Designer** app creates the necessary views to check the data and puts them in a tabbed display with instructions for diagnosing common problems.

To open S-Parameter Check dialog box, click **Check S-Parameters** button in the Port Map Editor dialog box. The dialog box displays the S-Parameter file or waveforms, explanation of the waveforms, and a checklist that allows a step-by-step evaluation of the waveforms.

You can divide the displayed data into four categories:

- **Original** — Original S-Parameter data imported into the app. This is generally frequency domain data.
- **Original Simulated** — Analysis data derived from the original S-Parameter data. This is generally time domain data.
- **Active** — Edited S-Parameter data. This is generally frequency domain data.
- **Active Simulated** — Analysis data derived from the edited S-Parameter data. This is generally time domain data.

You can save the checklist results to use in another session to check the same S-Parameter.

For more information, see “Edit Imported S-Parameter Data” on page 5-2.

### See Also


#### Related Examples

- “Edit Imported S-Parameter Data” on page 5-2

#### More About

- “Elements in Link Designer Apps” on page 13-24

## S-Parameters in Parallel Link Projects

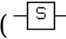You can import S-Parameter data from a Touchstone file format (sNp files) into the libraries of the **Parallel Link Designer** app. The import operation includes creating a wrapper and editing a port map since there is no standard way to determine how nodes in a Touchstone file map to connections in the system. To place the S-Parameter from the library in the schematic, click the **S-Parameter** () button.

### Import S-Parameters

To import S-Parameters into a project library, click **Libraries > Import S-Parameter...** from the app toolbar. This launches two windows: Import S-Parameter File(s) and Select S-Parameter (Touchstone) Files dialog boxes.

In the Select S-Parameter (Touchstone) Files dialog box, select one or more Touchstone files to import in the library. Then use the Import S-Parameter File(s) dialog box to import the files and create port maps. You can also edit the port maps using the Port Map Editor dialog box.

When you import multiple files with the same number of ports, the app puts the wrapper files for the S-Parameters into a single file. This is default behavior as it simplifies the library structure and makes it easy to manage sweeps. You can deselect **Merge Wrappers** option in the Select S-Parameter (Touchstone) Files dialog box to turn off this default behavior.

After you finish importing the S-Parameter files, you can see the import results in the **Import Log** section of the Select S-Parameter (Touchstone) Files dialog box.

### S-Parameter Port Maps

There is no standard way to map Touchstone file ports to the symbol pins. So, the app creates a port map for each imported Touchstone file by identifying the through paths and the differential pairs. The app finds the through paths by looking at the port to port loss at 50MHz and finding the smallest loss between the ports. The app also looks at the coupling between the through paths and considers the pairs with most coupling as differential pairs.

To view or modify the port map, launch the Edit S-Parameter File Port Maps dialog box by selecting **Launch Edit Port Maps Editor** option in the Select S-Parameter (Touchstone) Files dialog box. The port map editor can edit multiple files at once. Each file is in its own tab in the editor.

**Edit S-Parameter Port Maps**

Port Name	S(row,col)	1	2	3	4
1	1	-60.54...	-0.010...	-80.87...	NaN
2	2	-0.010...	-60.54...	NaN	-80.87...
3	3	-80.87...	NaN	-60.54...	-0.010...
4	4	NaN	-80.87...	-0.010...	-60.54...

DIFF Ports	
1	2
3	4

SE Ports

Port Map: N1F2N3F4  Make Passive  Make Causal  Make Reciprocal  Use Standardized Port Names

connector\_ab.s4p

Instructions:

- Displayed Matrix Values are DB at 50MHz.
- Drag Column Headers to Pair "In\Out" Ports.
- Highest Values Should End Up In White Cells.
- Yellow Cells Flag Misplaced Highest Values.
- Enter Custom (Non-Standardized) Port Names In 1st Column.
- Blue/Green Cells Flag Left/Right DIFF Ports.
- Drag Right Table Rows Up/Down to Pair/Declare DIFF/SE Ports.
- Red Cells in Right Table Flag UnPaired DIFF Ports.

Port Names Generator

Left Prefix: Right Prefix:

Clear Apply

Display Import Log

Display Waveforms

Restore Default Port Map

Restore Last Saved Map

Set Port Map Left-to-Right

Set Port Map Top-to-Bottom

Apply To All Tabs

Save SaveAll Close

The table on the left shows the S-Parameter values in dB at 50MHz. The table on the right is the symbols view that shows how the ports maps to the schematic symbol. The lower part of the dialog box allows you to view the import log, launch the waveform viewer, restore to defaults and apply changes to the file being modified to all files.

The app determines through paths by finding the ports that have the smallest loss between them. In this case, the white cells are the cells with the smallest loss. The rows and columns in the table represent the port matrix of the S-Parameter block, so the upper left gray cell is the  $S_{11}$  value, and the white cell to its right is the  $S_{12}$  value. The through paths in this case are  $S_{12}$ ,  $S_{21}$ ,  $S_{34}$  and  $S_{43}$ .

The app finds the differential pairs by looking at coupling between the through paths. The blue cells represent the left side differential ports. The green cells represent the right side differential ports. The Port Map field shows the port numbers and whether they are the near (N) or far (F) end of a through path. For example, N1F2N3F4 is an S-Parameter block with ports 1 and 3 on the near side and ports 2 and 4 on the far side, making the through paths 1 to 2 and 3 to 4.

You can change the order the table columns by clicking on a column header and dragging it left or right to the desired location. o You can also change the port order by clicking and dragging the blue or green ports on the right-hand side. o You can move ports from **DIFF Ports** to **SE Ports** by clicking and dragging as well.

**Note** It is recommended that you always review the auto-generated port map.

By default the port names are the same as the port numbers. You can edit the names in the far left column of the table. You can also change the port names so that the through path is always from ports with odd numbers for names to ports with even numbers for names. To do this, select the **Use Standardized Port Names** option. This creates symbols with odd-numbered port names on the left and even-numbered port names on the right.

## Combining S-Parameter Files

### Combine Crosstalk S-Parameters

To analyze crosstalk in the **Serial Link Designer** app, you must use a model of the coupled interconnect. The apps can combine s4p files representing through, NEXT (near end crosstalk) and FEXT (far end crosstalk) paths into larger S-Parameter files for use in the pre-layout crosstalk analysis. You must import the s4p files into the libraries before combining them. This allows you to check the S-Parameters port map consistency for passivity, causality and reciprocity.

To combine the files, click **Libraries > Combine S-Parameters**. This launches a dialog box where you can specify the number of FEXT and NEXT aggressors. This determines the size of the resulting S-Parameter file.

After you specify the number of aggressors and click **OK**, the app launches the Combine S-Parameters dialog box. Here you can match the previously imported s4p files to their place in the combined S-Parameter file. Once you save the combined S-Parameter file to the library, you can place it on the schematic like any other S-Parameter.

### See Also

### More About

- “Elements in Link Designer Apps” on page 13-24

## Access Project Data from MATLAB Command Window

Signal Integrity Toolbox allows you to sweep the full range of a SerDes model settings and operating conditions with relatively simple steps. The short simulation times for IBIS-AMI models make it feasible to run many simulations. But you still need to evaluate the results looking at the waveforms and tables from thousands of simulations and possibly create some kind of reports. You can access the read-only project data from the MATLAB command window to create your own evaluation environment.

To access the project data, you can use six classes to create specific objects. All the objects are linked, allowing you to navigate through the project and extract general or more in depth information.

Class	Description
SignalIntegrityProject	Create a project object.
SignalIntegrityInterface	Create an interface object.
SignalIntegritySheet	Create a sheet object.
SignalIntegrityState	Create a state object.
SignalIntegritySimulation	Create a simulation object.
SignalIntegrityWaveform	Create a waveform object.

The class hierarchy and some outputs are shown:

The diagram illustrates the class hierarchy and associated data outputs. On the left, six classes are listed vertically, each with an arrow pointing to a corresponding parent class or object type. The classes are: SignalIntegrityProject, SignalIntegrityInterface, SignalIntegritySheet, SignalIntegrityState, SignalIntegritySimulation, and SignalIntegrityWaveform. The parent classes are: ProjectFolder, CurrentInterface, Results, CurrentState, SolutionSpace, Results, Simulations, SolutionSpace, ParentSheet, Results, Waveforms, ParentSheet, ParentState, ParentSimulation, table, and plot. On the right, three MATLAB tables and a plot are shown. The first table (3x11) lists project parameters like Interface, Sheet, State, Transfer, and Margins. The second table (14x8) lists simulation parameters like Interface, Sheet, State, Designator, Name, Type, Group, and Values. The third table (2048x3) shows a time-series plot of V(BTX1 to BRX1) and V(WTX1 to ARX1 Probe). The plot shows a sharp initial spike followed by a steady state.



## Plot Waveform and Extract Data Points from MIPI M-PHY Channel Project

This example shows how to create a `SignalIntegrityProject` object from a MIPI M-PHY project. You can access the project interface, extract the simulation results and plot the waveforms.

Download the MIPI M-PHY project.

```
openSignalIntegrityKit('MIPI_M_PHY')
```

Signal Integrity Toolbox recommends you to set the Java Heap Memory to at least 8192MB. Use Home Tab -> Preferences -> MATLAB -> General -> Java Heap Memory  
Current Java Heap: 565MB with 182MB in use. Maximum heap: 1584MB. Heap setting: 1728MB.

Simulate the `MIPI_G1_M_PHY_Single_Channel` schematic sheet. Run statistical analysis simulations.

Create a project object from this project.

```
>> sip = SignalIntegrityProject('MIPI_M_PHY')
```

```
sip =
```

```
SignalIntegrityProject with properties:
```

```
ProjectFolder: "          -          \MIPI_M_PHY"
CurrentInterface: 'MIPI_M_Phy_G1'
  Sheets: ["MIPI_G1_M_PHY_Receiver_Compliance"  "MIPI_G1_M_PHY_Single_Channel"  ...  ]
  Type: "serial"
```

```
Show all properties
```

Create a interface object from the current interface of the project object.

```
>> int = sip.CurrentInterface
```

```
int =
```

```
SignalIntegrityInterface with properties:
```

```
Name: "MIPI_M_Phy_G1"
Results: {[2×97 table]}
  Sheets: ["MIPI_G1_M_PHY_Receiver_Compliance"  "MIPI_G1_M_PHY_Single_Channel"  ...  ]
```

```
Show all properties
```

Extract the simulation results from the current interface.

```
>> int.Results
```

ans =

2x97 [table](#)

	Interface	Sheet	State	Transfer	Loss (dB)	UnEQ Signal/Xtalk (dB)	Rip
1	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"TX1_to_RX1"	1.7579	100	0
2	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"TX1_to_RX1"	3.0824	100	0

Create a sheet object from the MIPI\_G1\_M\_PHY\_Single\_Channel interface.

```
>> sh = int.Sheets(2)
```

sh =

[SignalIntegritySheet](#) with properties:

```

    Name: "MIPI_G1_M_PHY_Single_Channel"
    Included: 1
    CurrentState: "default"
    Simulations: ["gcd ttte s mi" "gcd ttte s mi 2"]
    SolutionSpace: {[15x8 table]}
    Results: {[2x97 table]}

```

[Show all properties](#)

Extract the solution space for the given sheet.

```
>> sh.SolutionSpace
```

ans =

15x8 [table](#)

	Interface	Sheet	State	Designator	Name	Type
1	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"	"Process"	"Corner"
2	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"	"Etch"	"Corner"
3	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"	"\$S1:Model"	"Subcircuit Model"
4	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"RX1"	"Rt"	"Float"
5	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"RX1"	"Rx_Sj_Frequency"	"Float"
6	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"RX1"	"Rx_Sj"	"UI"
7	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"RX1"	"Rx_Dj"	"UI"
8	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"RX1"	"Rx_Rj"	"UI"
9	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"TX1"	"Rs"	"Float"
10	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"TX1"	"Trf"	"Float"
11	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"TX1"	"Tx_Sj_Frequency"	"Float"
12	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"TX1"	"Tx_Sj"	"UI"
13	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"TX1"	"Tx_Dj"	"UI"
14	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"TX1"	"Tx_Rj"	"UI"
15	"MIPI_M_Phy_G1"	"MIPI_G1_M_PHY_Single_Channel"	"default"	"TX1"	"tx_swing"	"Float"

Create a simulation object from the sheet object.

```
>> sim = sh.Simulations(1)
```

```
sim =
```

```
SignalIntegritySimulation with properties:
```

```
    Name: "qcd_ttte_s_mi"  
  Transfer: "TX1_to_RX1"  
  Results: {[1×97 table]}  
 Waveforms: [{"Network: impulse"    "Network: step"    "Network: pulse"    "Network: transferfunction"    ...    }]
```

```
Show all properties
```

Create a waveform object from the simulation object.

```
>> w = sim.Waveforms(1)
```

```
w =
```


```
SignalIntegrityWaveform with properties:
```

```
  Title: "Network: impulse"  
  File: "          \MIPI_M_PHY\interfaces\MIPI_M_Phy_G1\pre_sims\MIPI_G1_M_PHY_Single_Channel\default.ssm\qcd\qcd_ttt
```

```
Show all properties
```

Plot the waveform and extract the data points.

```
>> w.plot
```

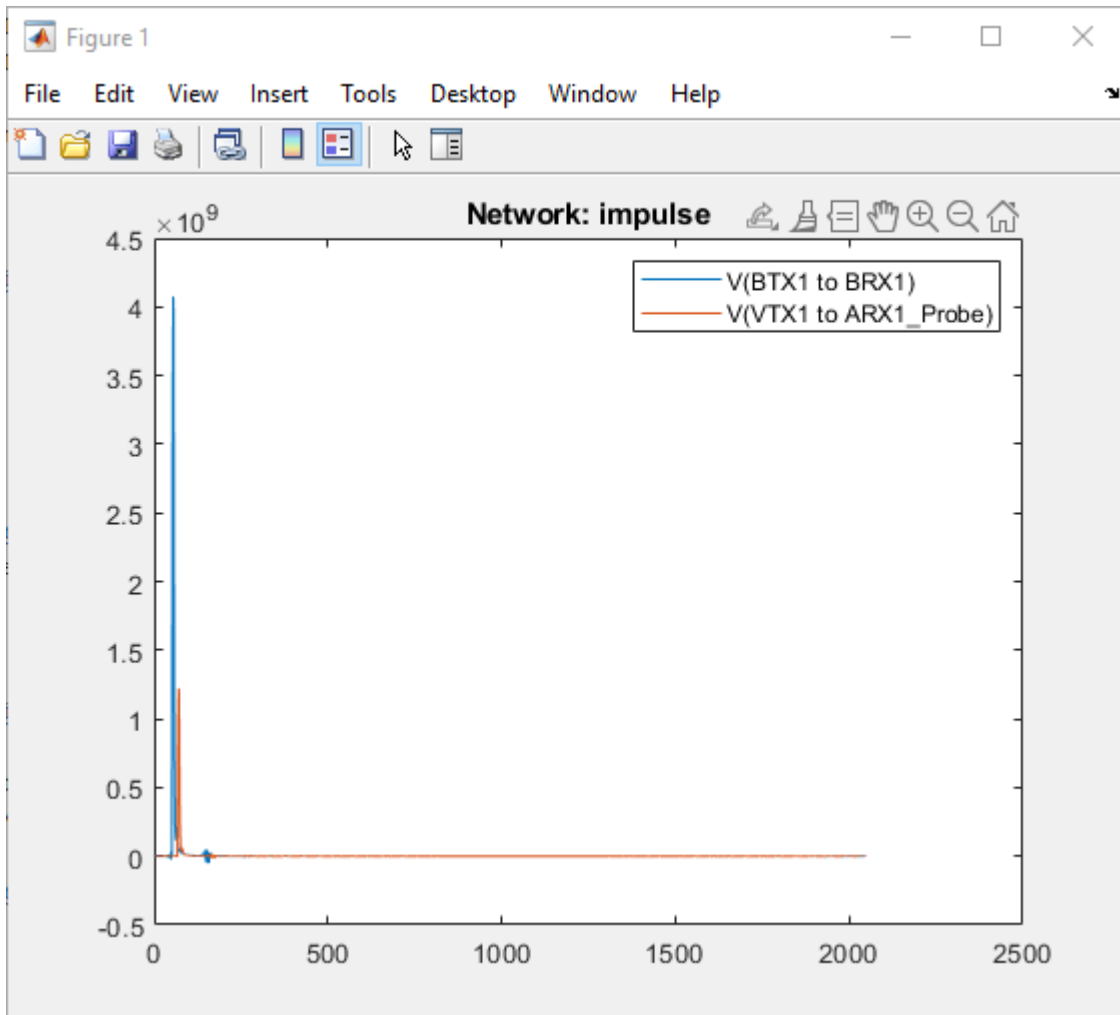

```
>> w.table
```

ans =

2048×3 [table](#)

<u>Time</u>	<u>V(BTX1 to BRX1)</u>	<u>V(VTX1 to ARX1_Probe)</u>
0	-1.9569e+06	-4.5087e+05
4.2875e-11	2.0228e+06	4.62e+05
8.575e-11	-2.0337e+06	-4.6435e+05
1.2863e-10	2.1054e+06	4.7618e+05
1.715e-10	-2.1169e+06	-4.7864e+05
2.1437e-10	2.195e+06	4.913e+05
2.5725e-10	-2.2072e+06	-4.9384e+05
3.0012e-10	2.2924e+06	5.0741e+05
3.43e-10	-2.3058e+06	-5.1005e+05
3.8588e-10	2.3989e+06	5.2457e+05
4.2875e-10	-2.4135e+06	-5.2736e+05
4.7163e-10	2.5162e+06	5.4294e+05
5.145e-10	-2.5316e+06	-5.4586e+05
5.5737e-10	2.6456e+06	5.6272e+05
6.0025e-10	-2.6622e+06	-5.6572e+05
6.4312e-10	2.7887e+06	5.8395e+05
6.86e-10	-2.8071e+06	-5.8706e+05
:	:	:
8.7079e-08	1.4955e+06	3.6422e+05
8.7122e-08	-1.5029e+06	-3.6586e+05
8.7165e-08	1.54e+06	3.7292e+05
8.7208e-08	-1.5478e+06	-3.7477e+05
8.7251e-08	1.5873e+06	3.8211e+05
8.7294e-08	-1.5955e+06	-3.8404e+05
8.7336e-08	1.6377e+06	3.918e+05
8.7379e-08	-1.6461e+06	-3.9378e+05
8.7422e-08	1.6914e+06	4.0197e+05
8.7465e-08	-1.7002e+06	-4.0403e+05
8.7508e-08	1.7486e+06	4.1271e+05
8.7551e-08	-1.7579e+06	-4.1478e+05
8.7594e-08	1.8098e+06	4.2405e+05
8.7637e-08	-1.8195e+06	-4.2612e+05
8.7679e-08	1.8757e+06	4.3601e+05
8.7722e-08	-1.8857e+06	-4.3813e+05
8.7765e-08	1.9465e+06	4.4864e+05

[Display all 2048 rows.](#)

**See Also**


SignalIntegrityProject | SignalIntegrityInterface | SignalIntegritySheet |  
SignalIntegrityState | SignalIntegritySimulation | SignalIntegrityWaveform

# Widebus Crosstalk Analysis

Widebus crosstalk analysis (pre-layout crosstalk analysis in the **Parallel Link Designer** app) consists of single transfer sheets (transfer nets) and a widebus or coupled sheet with a victim transfer net and one or more aggressor nets.

For a high speed clock forwarded parallel interface project, widebus crosstalk analysis allows you to:

- Generate the layout rules including etch impedance, spacing, length, termination.
- Determine operating limits and trade offs (for example. maximum frequency vs line length).
- Determine the optimal drive strength and ODT selection.
- Determine design margins to timing or mask requirements.

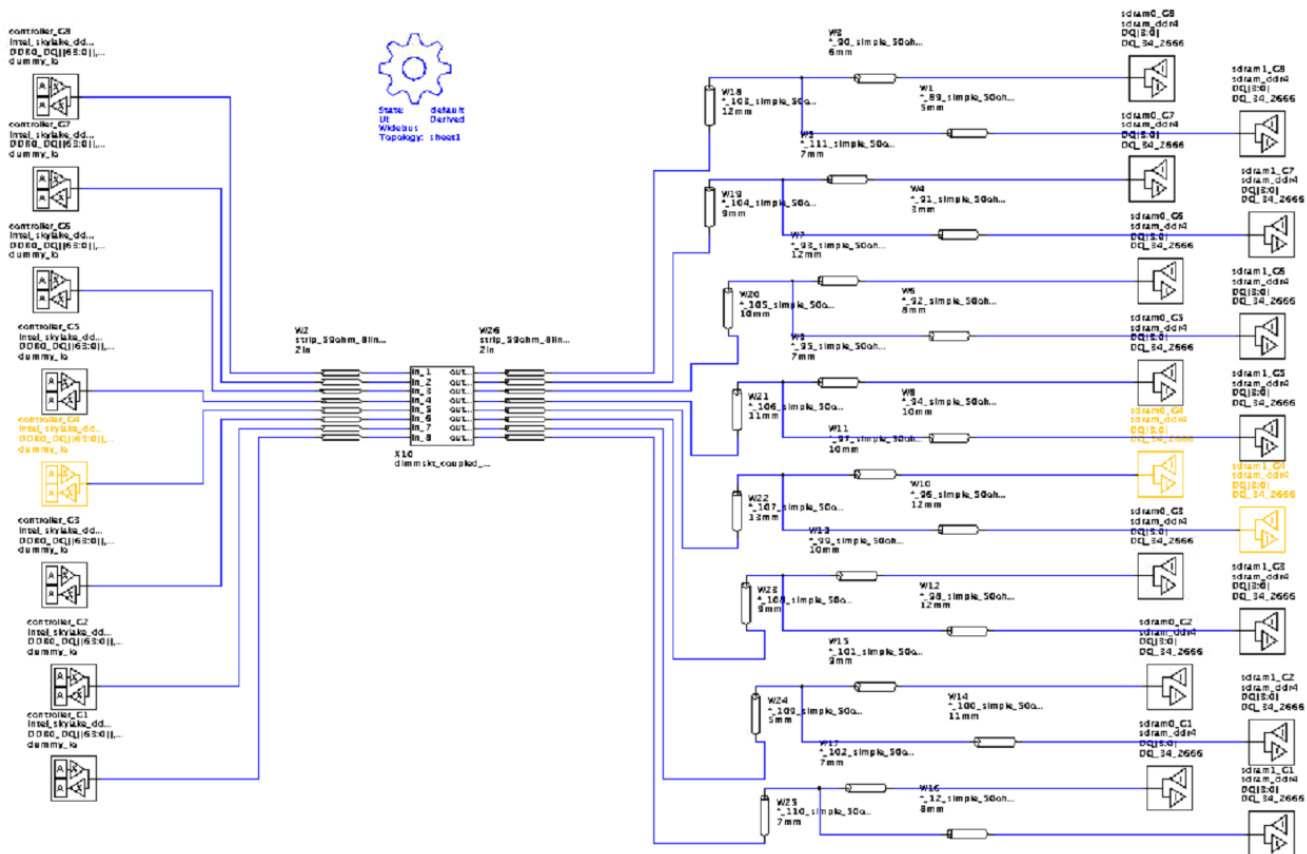

Each unique transfer net on a widebus schematic sheet is known as a widebus group. Each group consists of only the designators (drivers, receivers, or I/O buffers) for that transfer net. On a widebus sheet, any widebus group can be a victim or an aggressor. You can place multiple instances of any widebus group on the schematic. The widebus groups inherit the designator properties defined in their transfer net sheet. You can use coupled w-lines, connectors, package models, or s-parameter blocks in the widebus schematic to connect up each widebus group. One of the instances of a widebus group is designated as the victim net on the schematic.

You can perform widebus crosstalk analysis simulation using STAT mode, where statistical and time domain IBIS-AMI results are used in the waveform and timing analysis. This is referred to as STAT


Mode Crosstalk. You can also run the analysis using SPICE only, where all of the results from the coupled sheet simulation (waveform and timing) are derived solely from the SPICE simulations. This is known as the Classic Mode Crosstalk.

You can perform widebus analysis on any project, even previous incarnations of a design. You must satisfy these requirements:

- One or more associated sheets (reference transfer nets) exist. The designator grouping on each unique transfer net are referred to as a widebus group.
- Each transfer nets consist of a single driver per transfer. They can have multiple transfers (memory read or memory write) and can have multiple receivers/loads.
- Transfer net characteristics such as transfers, UI, type, probe points and jitter are defined in the transfer net characteristics on the associated sheet, not on a widebus sheet.

## Creating Widebus Sheet


To create a widebus sheet, you must include at least one transfer net in the schematic. From the app toolstrip, add a new schematic sheet from **File > Schematic Sheet > New Sheet**. In the New Sheet dialog box, select the **Widebus** sheet option. When you are creating a widebus sheet for the first time, the Add Widebus Group(s) dialog box launches automatically. You can select the widebus groups and their number of instances.

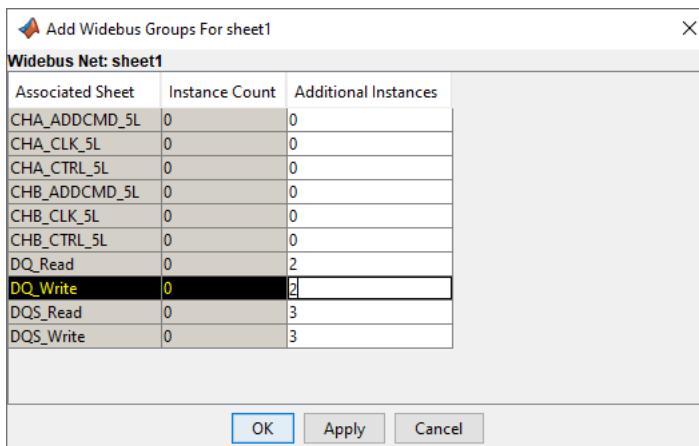

To include additional widebus groups to the sheet, right click and select **Add Widebus Group(s)**. The victim group(s) is designated in yellow on the schematic.

After placing the widebus groups, you can connect the coupled elements for crosstalk analysis. You can edit the widebus group properties to define which group is the victim net along with the stimulus and delay of each group. To edit any widebus group, double click any of the designators on the schematic or right-click and select **Widebus Groups**.



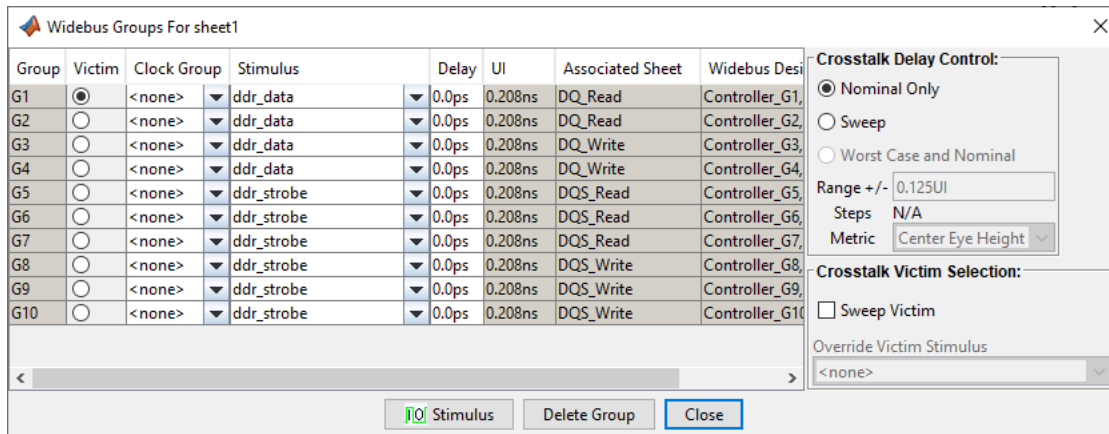

## Simulating Widebus Sheet

You can simulate the widebus in STAT mode by selecting **STAT Mode** in the Sheet Options panel. To simulate in the classic mode, deselect the **STAT Mode** option. In the STAT mode, you can select to display the AMI parameters of the Tx aggressors by selecting the **Tx Aggressor Parameters** option. The simulation process of widebus sheets is the same as that of the uncoupled sheets.

In a widebus simulation, the app performs all waveform and timing analysis on the victim group. As with a regular timing analysis, widebus timing analysis requires a separate clock (or strobe) simulation. This separate clock simulation can come from:

- A clock or strobe associated sheet.
- A clock or strobe victim group in another widebus sheet.
- In the current widebus sheet, select Sweep Victim and select both the clock group and data group as victims.
- In the current widebus sheet with a victim group that uses a receiver IBIS-AMI model that supports clock forwarding, select the desired clock or strobe group from the Clock Group drop down menu.

## Interpreting results

For the most part, simulating a widebus sheet reports many of the same results as an uncoupled sheet. For each victim transfer on a widebus sheet, results are presented both with and without the effects of the coupling on the victim net. Regardless of crosstalk simulation mode (classic or STAT), the app can perform and report the waveform and timing checks (if selected). If you select the **STAT Mode** option, the app runs both the statistical and time domain simulations.

Results for widebus sheets only includes the victim widebus group transfers. The app does not report the aggressor results. It only reports the crosstalk from the aggressors on the victim waveform.

After widebus simulation, you can view crosstalk noise as a histogram. This is essentially a statistical eye diagram of the crosstalk noise where colors are associated with the probabilities of the noise and the placement of the noise within the UI of the channel. This crosstalk probability is what is added to the uncoupled victim channel response to get the coupled response.

To view the coupling from the victim to each aggressor, plot the step response or the pulse response. This reveals the level of coupling between the victim and each aggressor. You can also plot the

composite crosstalk on each victim in the **Signal Integrity Viewer** app. To plot the composite crosstalk, in the Statistical tab of the **Signal Integrity Viewer** app, right click and select **Show Crosstalk**.

# Models

---

- “Model Lossy Transmission Lines in Serial Link Designer” on page 14-2
- “Model Lossy Transmission Lines in Parallel Link Designer” on page 14-7

## Model Lossy Transmission Lines in Serial Link Designer

The **Serial Link Designer** app uses a frequency dependent RLGC model to represent a lossy transmission line model. The app uses a 2-D field solver with a transmission line editor. Using the transmission line editor, you can enter the cross-section of different model types. You can also define a table-driven loss model that you can import to model the transmission line.

### Types of Lossy Transmission Line Models


#### Single Conductor and Differential Lossy Transmission Line Models

You can create single conductor and differential lossy transmission line models for these model types:

- Simple lossy transmission line
- Microstrip
- Buried microstrip
- Stripline

The parameters in each model type define the relationship of the physical geometries for the transmission line model. You can also define etch shape and enable tabbed routing.

If you need to combine multiple dielectrics in the actual physical stackup in a single dielectric in the editor, combine them by their proportional thickness. For example, for a stripline with three dielectrics, the single  $\epsilon_r$  is:

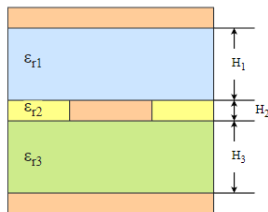

$$\epsilon_r = \frac{\epsilon_{r1}H_1 + \epsilon_{r2}H_2 + \epsilon_{r3}H_3}{H_1 + H_2 + H_3}$$

#### Coupled Lossy Transmission Line Model Types

You can create single-ended and differential coupled lossy transmission line models for these model types:

- Microstrip
- Buried microstrip
- Stripline

To create a coupled model, you have to enable the parameter **Coupled** and set the parameter **Aggressor** to an integer value in the Lossy Transmission Line Editor dialog box. For single conductors, set the aggressor value between 1 and 20. For differential conductors, set the aggressor value between 1 and 9.

## Analytical RLCG Model

### Formulating Single-Line Models

For single-line case, the parameters  $R$ ,  $L$ ,  $G$ , and  $C$  are scalar.

From Telegrapher's equation:

$$\frac{\partial V}{\partial x} = -RI - 2\pi fLI$$

$$\frac{\partial I}{\partial x} = -GV - 2\pi fCV$$

The solution to the coupled partial differential equations results in two waves travelling in opposite directions along the  $x$ -axis. The solution can be written as:

$$Y_0 V = W_+ e^{-\gamma x} + W_- e^{-\gamma(l-x)}$$

$$I = W_+ e^{-\gamma x} - W_- e^{-\gamma(l-x)}$$

where  $Y_0 \equiv \sqrt{\frac{G + 2\pi fC}{R + 2\pi fL}}$ ,  $\gamma \equiv \sqrt{(G + 2\pi fC)(R + 2\pi fL)}$  and  $l$  is the length of the transmission line.

Evaluate these equations at boundary conditions  $x=0$  and  $x=l$  and set  $X_d \equiv e^{-\gamma l}$ :

$$Y_0 V(0) = W_+ + X_d W_-$$

$$Y_0 V(l) = W_- + X_d W_+$$

$$I(0) = W_+ - X_d W_-$$

$$I(l) = W_- - X_d W_+$$

Convert the frequency domain equations to time domain to perform transient analysis in SPICE:

$$Y_0 * V(0, t) = W_+(t) + X_d * W_-(t)$$

$$Y_0 * V(l, t) = W_-(t) + X_d * W_+(t)$$

$$I(0, t) = W_+(t) - X_d * W_-(t)$$

$$I(l, t) = W_-(t) - X_d * W_+(t)$$

Here,  $W_+(t)$  is the wave that launches from the  $x=0$  end of the transmission line and travels towards the  $x=l$  end. Similarly,  $W_-(t)$  is the wave that launches from the  $x=l$  end of the transmission line and travels towards the  $x=0$  end.

Solve for  $W_+(t)$  and  $W_-(t)$ :

$$W_+(t) = \frac{1}{2}(Y_0 * V(0, t) + I(0, t))$$

$$W_-(t) = \frac{1}{2}(Y_0 * V(l, t) + I(l, t))$$

### Multi-Conductor Line

For multi-conductor line case, the parameters  $R$ ,  $L$ ,  $G$ , and  $C$  are appropriately sized symmetric positive-definite matrices. Using the `sqrtn` and `mldivide` functions to find the square root and division results, the equations for  $Y_0$  and  $\gamma$  becomes:

$$\gamma = \text{sqrtn}(G + 2\pi f C) (R + 2\pi f L)$$

and

$$Y_0 = \gamma \backslash (G + 2\pi f C)$$

And using the `expm` to find the exponential, the equation for  $X_d$  becomes:

$$X_d = \text{expm}(-\gamma l)$$

These equations support the single line case, the symmetric two-line case, and the multiple line structure that comes from a uniform dielectric. But in general, the modes change with frequency. So removing the delay according to the high-frequency mode shape leads to ripples in the high-frequency response.

### Table-Driven Loss Model

A table-driven loss model is table of material loss parameters as a function of frequency. This table is used to scale the effect if the skin resistance ( $R$ ) matrix, and to replace the behavior of the dielectric loss ( $G$ ) matrix. Both the conductor losses and dielectric losses of a material are described in a table of loss parameters as a function of frequency. This table is expressed as a CSV formatted spreadsheet file.

#### File Format

**Specification Frequency:** The table contains a row whose first cell contains the string `f_spec` and whose second cell contains a positive real value. This is the specification frequency (in Hz) at which the value of the real part of the dielectric constant is specified. If this row is not present, then the default value for the specification frequency is 1 GHz. The specification frequency is also the precise frequency at which the inductance and capacitance of any associated transmission line are defined.

**Dielectric Loss:** The table contains a row whose first cell contains the string `er` and whose second cell contains a positive real value greater than or equal to 1.0. This is the real part of the dielectric constant at the specification frequency. If this row is not present, then the default value is 1.0.

**Loss Data:** There must be a column header row before the beginning of the data. The first column must be labeled `Freq` and contain the frequencies (in Hz) for the data values. The subsequent columns can be:

- *R\_factor* — The resistance factor used in both the Hammerstad and Huray models to scale the skin resistance of a perfectly smooth conductor to account for the effect of conductor roughness. The nominal value is 1.0, and the value is expected to increase to values somewhat larger than 1.0. A value less than 1.0 generates a warning message. A value less than zero results in an error message and aborts the calculation.
- *tande* — The dielectric loss tangent, using the definition  $\epsilon_r = \epsilon'(1 - j\tan\delta) = \epsilon' - j\epsilon''$ .

- $\epsilon_r$  — The real part of the complex dielectric constant, defined as  $\epsilon'$ . If this optional column is present, it determines an appropriate value for the magnitude of the dielectric constant at the very high frequencies. A single value is chosen that results in the best fit to the data in this column.

---

**Note** The contents of this column supersedes the value given for the dielectric constant at the specification frequency.

---

Each data row must be complete. A row with fewer entries than the number of column headers results in an error message and aborts the run.

### Example Table with $\epsilon_r$ Column

A loss model table with  $\epsilon_r$  defines a starting set of values for  $\epsilon_r$  in addition to values for the resistance factor and dielectric loss tangent. In this example, the specification frequency is the default 1 GHz.

```
* Example materials properties table with er column
Freq,R_factor,tande,er
1.0e6,1.01,0.003,4.05
1.0e7,1.03,0.007,4.02
1.0e8,1.06,0.009,4.00
1.0e9,1.12,0.01,3.97
2.0e9,1.15,0.01,3.97
5.0e9,1.23,0.011,3.96
1.0e10,1.31,0.012,3.95
2.0e10,1.4,0.013,3.94
```

### Example Table with Frequency

A loss model table with specification frequency uses the  $f_{\text{spec}}$  instead of the  $\epsilon_r$  column. In this example, the specification frequency is the default 1 GHz.

```
* Example materials properties table with specification frequency
f_spec,2e9
er,3.97
Freq,R_factor,tande
1.0e7,1.03,0.007
1.0e9,1.12,0.01
2.0e9,1.4,0.013
```

## Editing Lossy Conductor Line Models

You can edit lossy transmission lines and coupled models for pre-layout analysis using the Lossy Transmission Line Editor dialog box. There are two modes for editing or creating models using the Lossy Transmission Line Editor dialog box:

- Standalone library mode — Quickly create and edit different types of lossy models and store them in a library location. You can create a common library directory and access the model from multiple projects. You can also reuse the models across different designs by copying them and pasting them in the new design. If you edit any model in the common library, the changes in the model appear in all the projects where the model is used.

To access the dialog box, select **Tools > Lossy Transmission Line Editor** from the app toolstrip.

- Interactive mode — Interactively use the Lossy Transmission Line Editor in the schematic to create and edit lossy models and coupled models on the fly for a selected transmission line. To access the editor, right click on the w-line element symbol in the schematic and select **Edit T-line Properties**.

## **See Also**

## **More About**

- “Loss in Transmission Line Corners” on page 1-2



## Model Lossy Transmission Lines in Parallel Link Designer

The **Parallel Link Designer** app uses a frequency dependent RLGC model to represent a lossy transmission line model. The app uses a 2-D field solver with a transmission line editor. Using the transmission line editor, you can enter the cross-section of different model types. You can also directly define a table-driven loss model in IsSpice4.

### Types of Lossy Transmission Line Models


#### Single Conductor and Differential Lossy Transmission Line Models

You can create single conductor and differential lossy transmission line models for these model types:

- Simple lossy transmission line
- Microstrip
- Buried microstrip
- Stripline

The parameters in each model type define the relationship of the physical geometries for the transmission line model. You can also define etch shape and enable tabbed routing.

If you need to combine multiple dielectrics in the actual physical stackup in a single dielectric in the editor, combine them by their proportional thickness. For example, for a stripline with three dielectrics, the single  $\epsilon_r$  is:

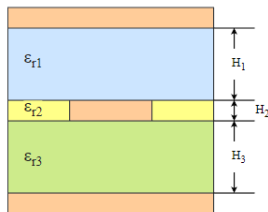

$$\epsilon_r = \frac{\epsilon_{r1}H_1 + \epsilon_{r2}H_2 + \epsilon_{r3}H_3}{H_1 + H_2 + H_3}$$

#### Coupled Lossy Transmission Line Model Types

You can create single-ended and differential coupled lossy transmission line models for these model types:

- Microstrip
- Buried microstrip
- Stripline

To create a coupled model, you have to enable the parameter **Coupled** and set the parameter **Aggressor** to an integer value in the Lossy Transmission Line Editor dialog box. For single conductors, set the aggressor value between 1 and 20. For differential conductors, set the aggressor value between 1 and 9.

## Analytical RLCG Model

### Formulating Single-Line Models

For single-line case, the parameters  $R$ ,  $L$ ,  $G$ , and  $C$  are scalar.

From Telegrapher's equation:

$$\frac{\partial V}{\partial x} = -RI - 2\pi fLI$$

$$\frac{\partial I}{\partial x} = -GV - 2\pi fCV$$

The solution to the coupled partial differential equations results in two waves travelling in opposite directions along the  $x$ -axis. The solution can be written as:

$$Y_0 V = W_+ e^{-\gamma x} + W_- e^{-\gamma(l-x)}$$

$$I = W_+ e^{-\gamma x} - W_- e^{-\gamma(l-x)}$$

where  $Y_0 \equiv \sqrt{\frac{G + 2\pi fC}{R + 2\pi fL}}$ ,  $\gamma \equiv \sqrt{(G + 2\pi fC)(R + 2\pi fL)}$  and  $l$  is the length of the transmission line.

Evaluate these equations at boundary conditions  $x=0$  and  $x=l$  and set  $X_d \equiv e^{-\gamma l}$ :

$$Y_0 V(0) = W_+ + X_d W_-$$

$$Y_0 V(l) = W_- + X_d W_+$$

$$I(0) = W_+ - X_d W_-$$

$$I(l) = W_- - X_d W_+$$

Convert the frequency domain equations to time domain to perform transient analysis in SPICE:

$$Y_0 * V(0, t) = W_+(t) + X_d * W_-(t)$$

$$Y_0 * V(l, t) = W_-(t) + X_d * W_+(t)$$

$$I(0, t) = W_+(t) - X_d * W_-(t)$$

$$I(l, t) = W_-(t) - X_d * W_+(t)$$

Here,  $W_+(t)$  is the wave that launches from the  $x=0$  end of the transmission line and travels towards the  $x=l$  end. Similarly,  $W_-(t)$  is the wave that launches from the  $x=l$  end of the transmission line and travels towards the  $x=0$  end.

Solve for  $W_+(t)$  and  $W_-(t)$ :

$$W_+(t) = \frac{1}{2}(Y_0 * V(0, t) + I(0, t))$$

$$W_-(t) = \frac{1}{2}(Y_0 * V(l, t) + I(l, t))$$

### Multi-Conductor Line

For multi-conductor line case, the parameters  $R$ ,  $L$ ,  $G$ , and  $C$  are appropriately sized symmetric positive-definite matrices. Using the `sqrtm` and `mldivide` functions to find the square root and division results, the equations for  $Y_0$  and  $\gamma$  becomes:

$$\gamma = \text{sqrtm}(G + 2\pi f C) (R + 2\pi f L)$$

and

$$Y_0 = \gamma \backslash (G + 2\pi f C)$$

And using the `expm` to find the exponential, the equation for  $X_d$  becomes:

$$X_d = \text{expm}(-\gamma l)$$

These equations support the single line case, the symmetric two-line case, and the multiple line structure that comes from a uniform dielectric. But in general, the modes change with frequency. So removing the delay according to the high-frequency mode shape leads to ripples in the high-frequency response.

### Table-Driven Loss Model

The analytical RLGC model converts the input data to an internal table of loss vs. frequency. This internal table is used to calculate the lossy transmission line model. However, a real world table data often contains causality violations. The algorithm needs to detect and correct these violations to develop a successful model.

For the overall transmission line to be causal, both the impedance per unit length ( $Z$ ) and ( $Y$ ) need to be causal. The algorithm uses the `rational` function if to detect and fix the causality problems. But if the table has few data points or if the discontinuities are too strong, the algorithm estimates the asymptotes of the data points and treat them as analytical model.

#### Example Lossy Transmission Line Model Based on Loss Table

```
.model example_table_model w MODELTYPE=table N=2 RMODEL=r_ex1
+ LMODEL=l_ex1 GMODEL=g_ex1 CMODEL=c_ex1
* Example usage:
* W1 1 2 0 3 4 0 N=2 L=<length> TABLEMODEL=ex1
.model r_ex1 sp N=2 SPACING=nonuniform VALTYPE=real
+ INTERPOLATION=spline
+ DATA = 161
+ 0
+      2.830786883265845
+      0.9435956277553057
+      2.830786883265899
+ 5e+007
+      7.984518593654459
+      2.725935368837102
+      7.985009453309226
+ 1e+008
+      11.31284926513239
+      3.874158264111289
+      11.31305325358019
+ 1.5e+008
+      13.98304266450885
```

```
+      4.795464684133719
+      13.98145490109022
+ 2e+008
+      16.1812358691131
+      5.552866396931773
+      16.17606159366768
+ 2.5e+008
+      18.09223128657047
+      6.210205279801264
+      18.08227217758706
+ 3e+008
+      19.82023821675704
+      6.803816219431784
+      19.80497533258797
+ 3.5e+008
+      21.41863053348143
+      7.352397271135547
+      21.39796746108365
...

```

## Editing Lossy Conductor Line Models

You can edit lossy transmission lines and coupled models for pre-layout analysis using the Lossy Transmission Line Editor dialog box. There are two modes for editing or creating models using the Lossy Transmission Line Editor dialog box:

- Standalone library mode — Quickly create and edit different types of lossy models and store them in a library location. You can create a common library directory and access the model from multiple projects. You can also reuse the models across different designs by copying them and pasting them in the new design. If you edit any model in the common library, the changes in the model appear in all the projects where the model is used.

To access the dialog box, select **Tools > Lossy Transmission Line Editor** from the app toolstrip.

- Interactive mode — Interactively use the Lossy Transmission Line Editor in the schematic to create and edit lossy models and coupled models on the fly for a selected transmission line. To access the editor, right click on the w-line element symbol in the schematic and select **Edit T-line Properties**.

## See Also

### More About

- “Loss in Transmission Line Corners” on page 1-2