

# NI 6830 ISDN Basic Rate Tester Reference Card

## F2 Run Test Sequence



### Select Sequence

Customer Numbers 1, 2	Enter numbers assigned to this location.
Available Test Sequences	Select test sequence to run.
Select	Run highlighted test sequence.

### During Sequence Execution

Stop	Abort sequence execution (may not be available for some sequences).
------	---

### After Sequence Finishes

Run	Run sequence again.
	Save test sequence results to a text file.
File»Print (Ctrl+P)	Print or fax test sequence results.
File»Open (Ctrl+O)	Load another test sequence.
Sequence»Clear Results	Clear results window.
	Return to main screen.

## F3 Bit Error Rate Test

### Parameters

Phone number	Enter number or click ▼ to select from the list.
Channel	B1, B2, Autoselect
Bearer	Data (64 kbps), Speech
Pattern	PRN9 (511 bits), PRN11 (2047 bits), PRN15 (32767 bits)
Test time	1 min, 5 min, 15 min, 1 hour, Continuous, Custom

### During Test

Inject Bit Error	Insert single bit error.
Abort	Stop test.
Reset Counters	Reset statistics.

### Test Log

View Log	Show test log.
Print	Print or fax log contents.
Save	Save log to a file.
Clear	Delete contents of the log.

## F4 Speech and 3.1 kHz Audio

### Parameters

Dialing mode	Overlap or en-bloc
Phone number	Enter number or click ▼ to select from the list.
Channel	B1, B2, Autoselect
Bearer	Speech, 3.1 kHz Audio

### During Test

Status	Last call status.
Keypad (overlap mode only)	Dial desired number.

Send Audio Check	Send computer generated sound to check audio.
...	Select another audio file.
Hang-up Call	End active call.

## F5 Teleservices

Phone number	Enter number for test or click ▼ to select from the list (usually B2 number).
Teleservices	Select from Telephony, Telefax, Teletex, Videotex, Mixed Mode, OSI Application, Telex.
Mark All	Mark or unmark all items in the teleservices list.
Clear All	
Test <i>Teleservice</i>	Test highlighted service.
Test Marked	Test only marked services.
Test All	Test all teleservices in the list.







## F6 Supplementary Services

Phone number	Enter number for test or click ▼ to select from the list.
Supplementary services	Select from CLIP, CLIR, DDI/MSN, SUB.
Mark All	Mark or unmark all items in the services list.
Clear All	
Test <i>Service</i>	Test highlighted supplementary service.
Test Marked	Test only marked services.
Test All	Test all services in the list.

**F7****Power Supply Checks**

Power Source 1      Show status of ISDN power sources.  
 Power Source 2  
 Reboot                Recheck voltages.

**F8****Protocol Decode**

 Resume packet decode.  
 Pause packet decode.  
 Save packet decode as text or raw data.  
 View selected packet details.  
 Clear packet list.  
 Configure filters.

**Options****Terminal**

1, 2                    Numbers assigned to this location  
 SPID 1, 2            Service Profile Identifiers for this location (North America Only)

**ISDN Interface**

Interface Type      S/T or U  
 S Bus Configuration Point-to-multipoint or point-to-point  
 TEI                    Point-to-point static TEI  
 Advanced            Allows selection of network-specific settings.

**General**

Prompt for Numbers      Select if tester should prompt for customer numbers on startup.  
 Remember Last Numbers      Keep record of last entered customer numbers.  
 Voltage Check on Activation      Check line voltage every time S<sub>0</sub> activation is achieved.  
 Full-Duplex Audio            Use full-duplex audio (some older computers do not support full-duplex).  
 Loopback Data, Speech, or 3.1 kHz Audio Calls      Control automatic loopback of incoming calls of a particular type.

**Filters**

Net/User                Filter packets based on the source.  
 Protocol                Selects protocol to configure.  
 Packet List              Check packets you want to display in the decode list.

**Stored Numbers**

Number List              Shows currently stored numbers.  
 Add                      Add new number.  
 Remove                 Remove number from list.  
 Properties              Change phone number or description.

**Status Bar****Layer Status**

Sync (Layer 1), Ready (Layer 2)      Green light indicates layer has been activated.

**Power Supply Voltages**

PS1, PS2                Green light means normal power supply, yellow means restricted power, and red means low or no supply.

**Channel Status**

B1, B2                    LEDs are orange when a channel is in use.

**Incoming Call Display**

**(only when incoming call is in progress)**

Number                 Calling number  
 Bearer                 Data, Speech, or 3.1 kHz  
 Channel                B1 or B2  
 End Call                Terminate incoming call.



322101A-01

Oct98