

GETTING STARTED

1

Insert CD, then choose Install NI-488.2 Software for Windows.



2

Shut down, then power off computer.



Power Off
Computer


(Continued)

3

Install hardware*.

- A. Verify that you have the correct PC/104-GPIB stackthrough version: 16-bit modules have two PC/104 connectors; 8-bit modules have one PC/104 connector.
- B. Mount the provided standoffs to the parent module. The parent module has either two or four mounting holes for standoffs.
- C. Plug the PC/104-GPIB into the parent module. Ensure proper contact by gently pressing the PC/104-GPIB connector and PC/104 header together.

* **For Help** installing your hardware, refer to the GPIB Hardware Guide (available on the CD through View Documentation).

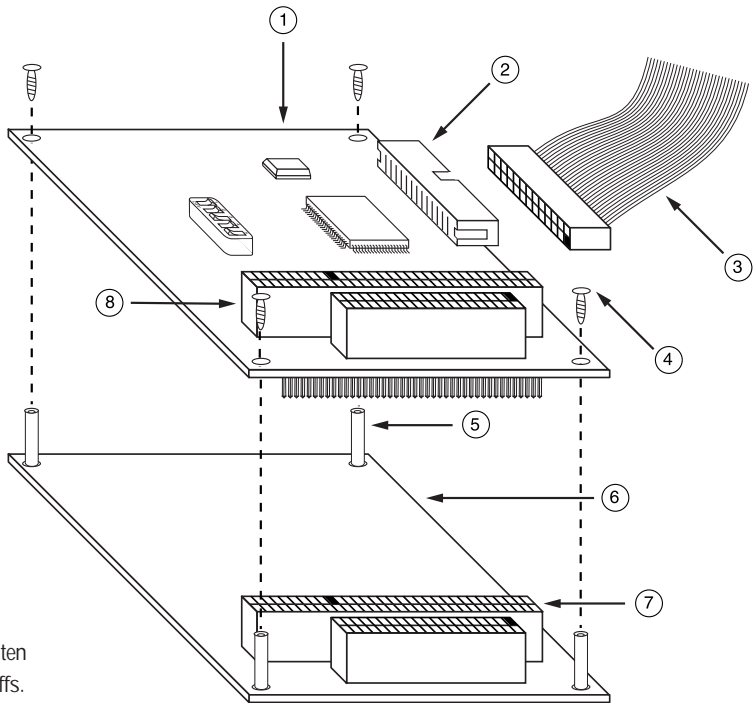

- D. Use the provided screws to fasten the PC/104-GPIB to the standoffs.

- E. Plug in the GPIB ribbon cable.

Key

- | | |
|---------------------|--------------------|
| ① PC/104-GPIB | ⑤ Stand Off |
| ② GPIB Connection | ⑥ Parent Module |
| ③ GPIB Ribbon Cable | ⑦ PC/104 Connector |
| ④ Screw | ⑧ PC/104 Header |

4

Power on computer, then run NI-488.2 Getting Started Wizard.





www.natinst.com/support/
support@natinst.com

Tel: (512) 795-8248 • Fax: (512) 683-5678
Fax-on demand: (512) 418-1111 • [ftp.natinst.com](ftp://ftp.natinst.com)



020899

322270A-01