

## Input Impedance of the DAQPad™-6020E(BNC)

## **Change to Specifications**

The input impedance specifications for the DAQPad-6020E(BNC) in the *DAQPad-6020E User Manual* have changed. In Appendix A, *Specifications*, the *Amplifier Characteristics* section should read as follows (changes shown in italics):