



This manual is for reference and historical purposes, all rights reserved.

This page is copyright© by M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer

I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for the PDF file to download.

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs.

It'll make you feel better, won't it?

**If you use Pay Pal or wish to use your credit card,
click on the secure site on my main page.**

POLAROID 210 LAND
AUTOMATIC CAMERA

2 SHOOT Gently press No. 2 button until shutter clicks. In dim light hold No. 2 down, hold steady until second click as shutter closes.

1 FOCUS

Look through finder. Place top line of rangefinder at top of subject's forehead; push No. 1 buttons back and forth to place moving line at bottom of chin. For scenics, set moving arrow at INF.

4 PULL TABS

Pull small white tab straight out of camera, all the way; large yellow tab will pop out. Pull yellow tab straight out of camera, all the way, moderately fast, smoothly, without hesitation. **THIS STARTS DEVELOPMENT.** Develop for full time recommended in film instruction sheet. Separate white print from brown paper. Don't touch face of print until thoroughly dry.



3 RESET Press No. 3 button down until it locks and stays down.

CONTENTS

Getting Acquainted

	Page
Introduction	4
How to open the camera	5
How to close and cover the camera	6
How to hold the camera	7
How to aim and focus the camera	8
How to focus for pictures of people	9
How to focus for subjects other than people	10
Practice the 1, 2, 3 system	11
What you should know about your film	12


Operation

How to load a film pack	13
How to set the camera for 3000 speed film	16
Tips for good daylight black and white pictures	17
How to set the camera for 75 speed color film	18
Tips for good daylight color pictures	19
How to take a picture	20
How to develop the print	22

If no yellow tab appears	24
Check the temperature! It's important	25
How to make prints lighter or darker	26
Black and white prints must be coated	27
How to use the Cold-Clip with color film	28
Troublesome lighting situations to avoid	30
Using 3000 speed black and white film in dim daylight	31

Miscellaneous

You must take care of your camera	32
Flash pictures	34
Some helpful accessories	35
Copies and enlargements	36
Picture troubles, their cause and cure	37
Protect film and camera from heat	41
Where to write for information	41
Warranty	41
List of repair stations	42

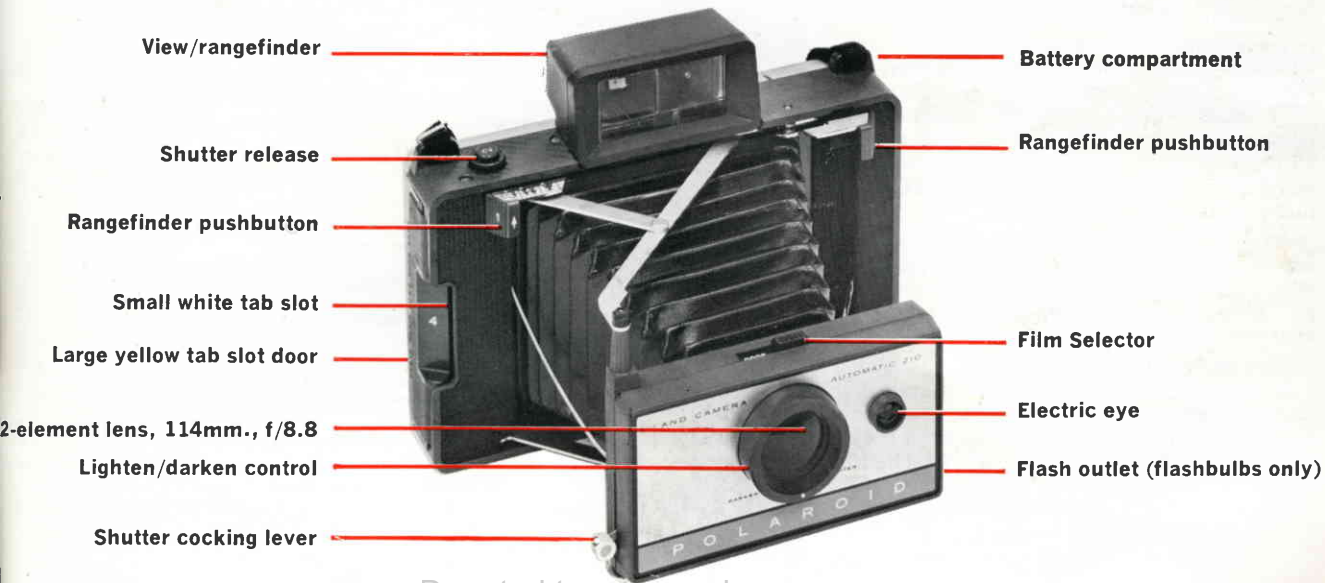

Donated to www.orphancameras.com

HOW TO GET THE MOST OUT OF THIS CAMERA

Before you load your camera with film, please be sure to read carefully the first two sections in this booklet: Getting Acquainted, and Operation (the pages with colored edges). As you read the text and look at the pictures, go through all the motions of using the camera — without film. Then you'll be completely familiar with it before you make your first picture.

This is one of the world's easiest-to-use cameras, once you understand a few simple techniques. However, it is very important that you learn the basic operating steps or you're bound to waste film and money and be disappointed with your picture results.

Once you get the simple operating routine down pat, load a film pack. We suggest that you start with 3000 speed black and white film. Please remember that even the finest camera and film need some help from the photographer if they are to produce good pictures. That help can be summed up in one sentence:


Plan and think before you shoot.

As a quick guide to help you get a good picture every time, here are some helpful hints. They're important.

1. **Always have the light on the subject coming from behind you.** For best color pictures place your subjects in bright sunshine.
2. **Move in close**, to get a big image in the print.
3. **Focus carefully**, to get sharp pictures.
4. **Choose colorful subjects** for your color pictures.
5. **Pick a good background**, particularly with flash.
6. **Pull the tabs correctly.**
7. **Time development carefully.**
8. **Keep an eye on the temperature.**

As you go through this booklet you'll find these points explained in detail. They can make the difference between getting good pictures and poor ones.

HOW TO OPEN THE CAMERA

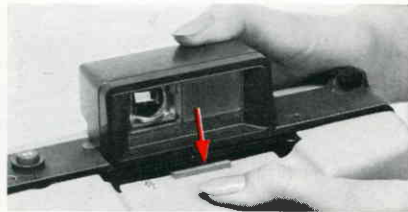


1. To unlatch cover, press on center of top.




2. You can let cover hang down or . . .


GETTING ACQUAINTED

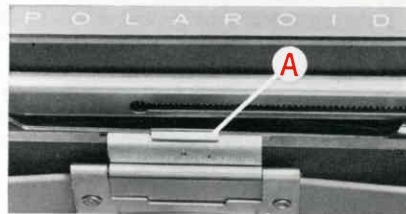

3. . . . to remove it, push spring (A) and lift.

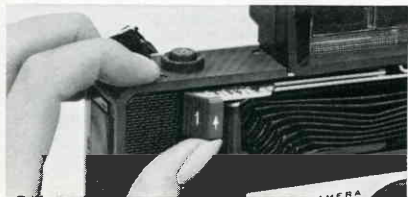

4. Raise button No. 1; this unlocks camera front.

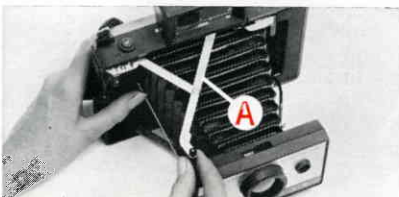

5. Pull camera front out as far as it will go.


PHOTO 5, IMPORTANT: Be sure to pull the camera front out until there is a definite click and the locking bar (A) snaps

into place. If the front isn't fully out and locked, your prints will come out all black, or badly blurred.


This booklet is designed to fit neatly inside the cover, under a spring clip (photo 2).

Donated to www.orphancameras.com

HOW TO CLOSE AND COVER THE CAMERA

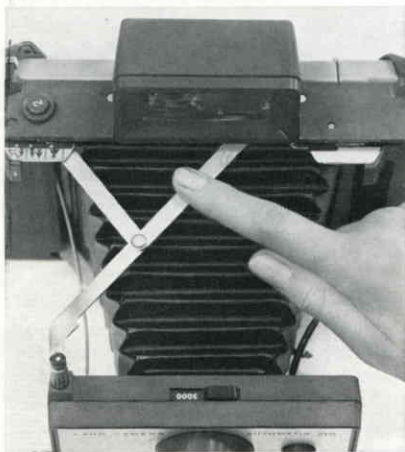

Press down on the locking bar. This releases the front of the camera. Push the front in all the way until it locks.

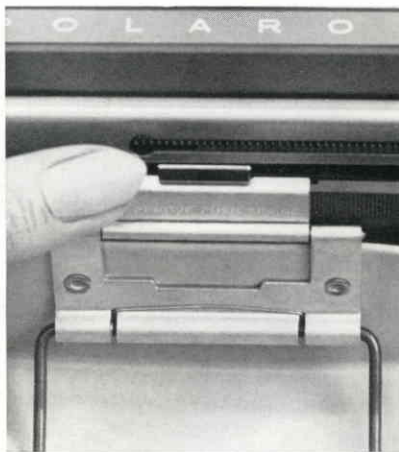

If you have removed the cover: to replace it, slide the hinge down over the lock spring until it snaps into place.



Swing the cover up. Press the top center section under the finder housing so it latches securely.

When storing the camera be sure that nothing presses on the No. 2 button; if it's depressed even slightly, the battery may be drained.

HOW TO HOLD THE CAMERA



HORIZONTAL: Grip the two ends. Place your forefingers on the No. 1 buttons; you can easily shift the right forefinger to the No. 2 button. To steady the camera, press your elbows into your ribs; rest the camera against your nose.

GETTING ACQUAINTED




VERTICAL: Grip the camera as you would for a horizontal picture, turn it so your right hand is below. Brace the camera against your forehead and face.

HOW TO AIM AND FOCUS THE CAMERA



THIS IS THE RANGEFINDER: Hold the camera horizontal and put both forefingers on the No. 1 buttons, as shown. Place your eye close to the finder window and look through the finder at a plain wall, or the sky. You'll see the pattern shown at right.

Push the No. 1 buttons back and forth. Notice that one

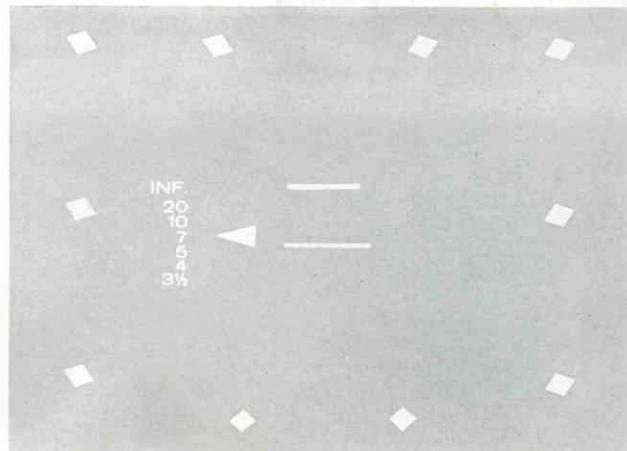

line moves up and down. Also, the diamonds move in and out. Their inner points outline the picture area.

The two horizontal lines are used to focus for pictures of nearby people, as shown on the opposite page. The distance scale and arrow are for pictures of scenes, big groups, nearby objects, pets, etc. (see page 10).

HOW TO FOCUS FOR PICTURES OF PEOPLE




FOR ADULTS: Place the top line at the top of your subject's forehead, and move the No. 1 buttons to place the moving line at the bottom of the chin.

If the lines won't separate far enough to frame the subject properly, you're too close; back up a bit.


For vertical pictures, focus with the camera horizontal, then turn it to aim and shoot.

GETTING ACQUAINTED

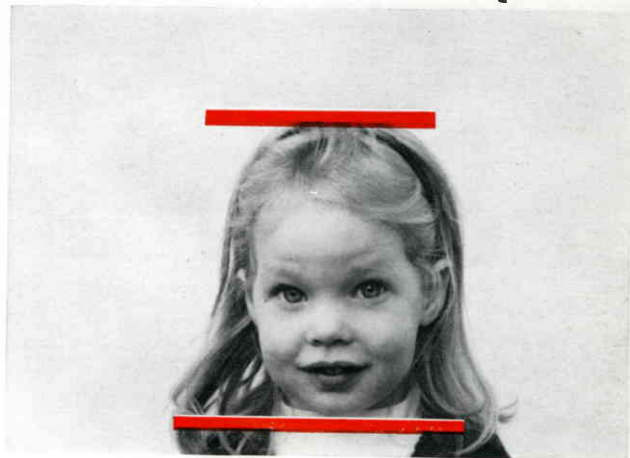


FOR SMALL CHILDREN: If they're 1-3 years old, place the top line on top of the head and the moving line at the bottom of the chin. With bigger children, focus in the same way as for adults.

HOW TO FOCUS FOR SUBJECTS OTHER THAN PEOPLE

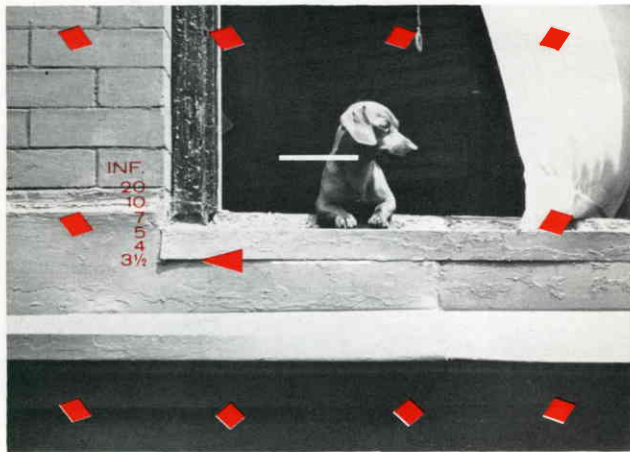

FOR PETS, BABIES, OBJECTS: For pictures of babies, pets, and inanimate objects up to 20 ft. from the camera, estimate carefully the distance from the camera to the subject. Then push the No. 1 buttons back and forth until the arrow points to that distance (3½ ft. here). Do not use the two white lines in the rangefinder for such subjects.

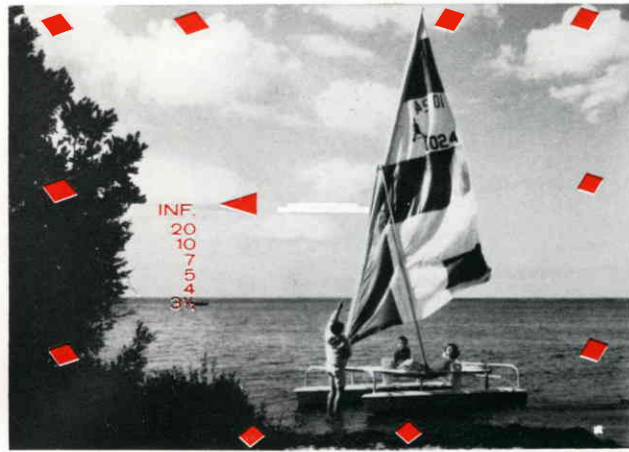


FOR SCENIC PICTURES: For all scenics, and for all pictures of subjects more than 20 ft. from the camera, push the No. 1 buttons to set the arrow opposite the INF (infinity) setting. Do not use the two white lines in the rangefinder; they are only for pictures of people up to 20 ft. from the camera.

PRACTICE THE 1, 2, 3 SYSTEM




ONE is for focusing. Look through the finder at someone nearby. Place the top rangefinder line at the top of your subject's forehead. Practice pushing the No. 1 buttons to place the moving line at the bottom of your subject's chin.

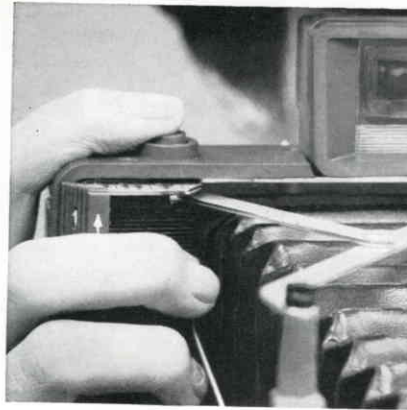

TWO is for shooting. Practice pressing the No. 2 button slowly until the shutter clicks. In dim light hold No. 2 down and stay very still until you hear the second click as the shutter closes. Then you can move and let No. 2 up.

GETTING ACQUAINTED

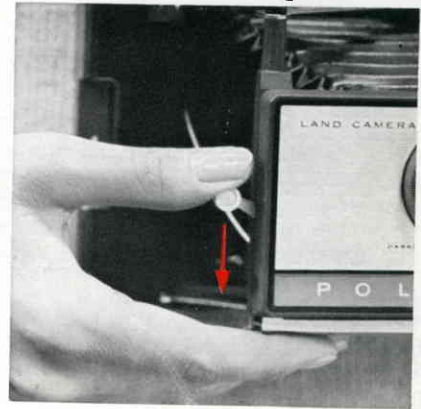

THREE is for resetting. Right after snapping a picture, always push down No. 3 button firmly until it locks and stays down. This resets the shutter for the next picture. If you don't reset No. 3 button, you won't be able to shoot.

WHAT YOU SHOULD KNOW ABOUT YOUR FILM

This camera uses Polaroid Land pack films. At present there are two: 3000 speed black and white, Type 107, and 75 speed color, Type 108. There may be additional types of film in the future.

You must know the film speed number, 3000 or 75, to set the camera controls correctly. However, if you forget the number, just look at the film instruction sheet.

The film speed number describes how "fast" (light sensitive) the film is. For example, 75 speed film is fairly "fast" but should be used in bright daylight or with flash for good results.

However, 3000 speed black and white is 40X as "fast" as 75 speed color film, so you can make pictures with it where there isn't enough light to use 75 speed film. Of course, you can use 3000 speed film in daylight or with flash, too.

The Polaroid film pack contains all the materials to make eight pictures. For each picture there is a piece of negative film, a sheet of print paper, and a thin foil container (the pod) filled with the jelly-like chemicals needed to develop the picture.

After snapping the picture, you start development by the simple act of pulling a piece of paper out of the camera. This drags the exposed negative, a sheet of print paper, and a pod of chemicals between two steel rollers. The pressure of the rollers squashes the pod, spreading the chemicals between the negative and print paper to form a picture "sandwich".

The picture develops outside the camera. After the recommended development time you separate the sandwich and there is your finished picture.




3000 speed black and white film. Set the camera's film selector to 3000.



75 speed color film. Set the film selector to 75.

HOW TO LOAD A FILM PACK: OPEN THE PACKAGE

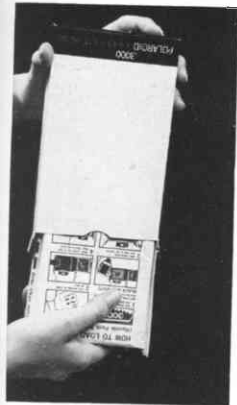

OPERATION

A special request!

As soon as you open the film pack you will begin to accumulate waste paper. There will be more when you develop the pictures. We hope that it won't become litter in the streets or be scattered around the landscape.

What to do with the waste paper? Usually, it will fit into an empty film box. Or, if you're planning to take lots of outdoor pictures, bring along a paper bag or other container for waste. Everyone will appreciate this little extra effort on your part.


Open the top of the box. With color film there's a set of mounts; with black and white film there's a coater. Remove these and the instruction sheet (please read it). Pull out the film package. Handle it gently, carefully. Save the box to carry prints in safely. It also can be very useful when coating black and white prints.

Hold the package near the edges. **Don't press hard on the**


middle of the package. Starting at the corner, tear open the entire side of the package along the dotted line. When the side is open, rip apart the front and back of the package. Lift out the pack. Discard the little package of silica gel supplied with color film. Handle the pack by the edges only.

Always open the package and load film in the shade, not in direct sunlight, to avoid fogging the film.


HOW TO LOAD A FILM PACK (Cont.)

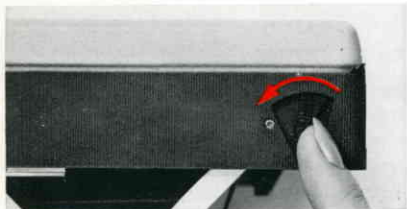


1. Push the back door latch; the door will pop up.

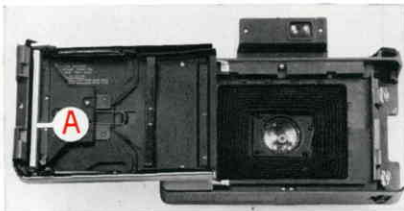


2. Open it all the way. Are the rollers (A) clean? If not, clean them as described in the section on care of your camera.

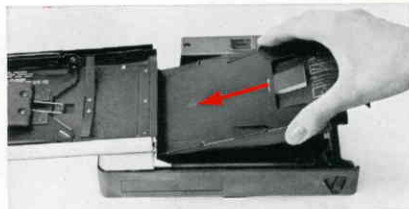


3. Hold the film pack by the edges as shown and push the closed end of the pack under the door hinge against spring tension.

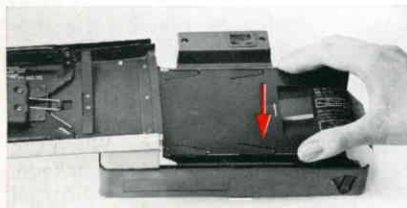


4. Push the pack down into the camera. You'll feel it snap into place.

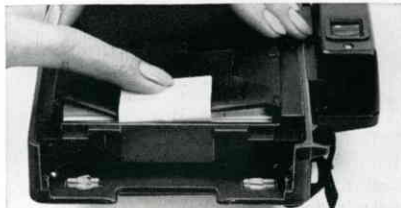

5. & 6. Be sure the white tabs are free and not folded under. Close the back door. Press both sides firmly to be sure that both sides latch. The black tab of the safety cover must stick out of the small slot. If not, reopen the back, lead the tab out.

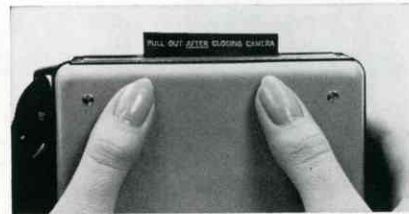


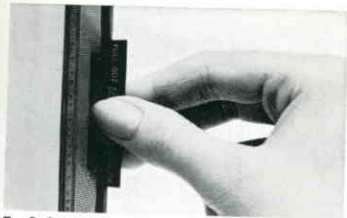

7. & 8. Pull the safety cover all the way out of the camera without stopping. Don't rip it.



OPERATION

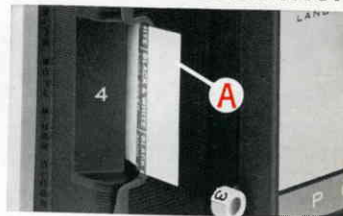


9. With the safety cover out, the white tab (A) should stick out of the small slot (No. 4). Don't pull the white tab. You're now ready for the first picture.


IF NO WHITE TAB APPEARS



1. If there's no white tab in the No. 4 slot, do the following in the shade or indoors, not in bright sun.

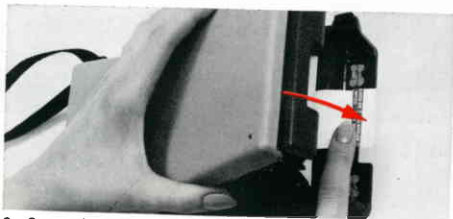

2. Open the back of the camera part way and, without disturbing or moving the film pack, push the white tab out into the open.

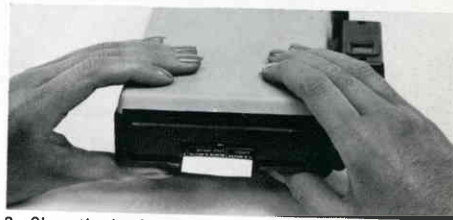


3. Close the back of the camera, making sure that both sides are locked securely and the white tab is outside in the No. 4 slot.

HOW TO SET THE CAMERA FOR 3000 SPEED FILM



Set the Film Selector as shown for black and white pictures with 3000 speed film.

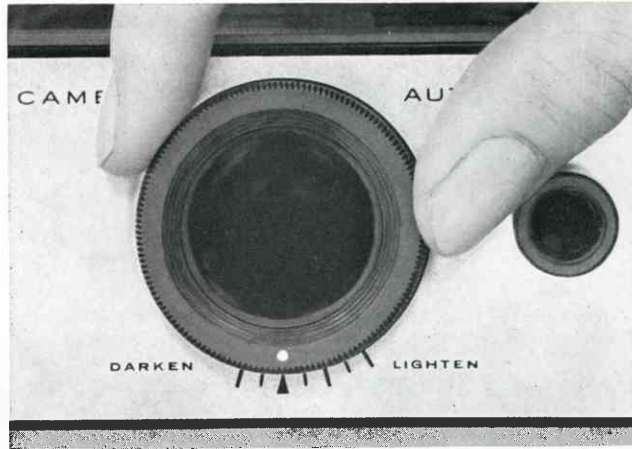

Set the white dot on the Lighten/Darken (L/D) control next to the arrow, as shown. This is the Normal position.

TIPS FOR GOOD DAYLIGHT BLACK AND WHITE PICTURES

OPERATION

Use bright, even light, coming from behind you: Place yourself so the light on the subject is coming over your shoulder. Don't have the subject between you and the sun. For portraits you'll get best results when a cloud blocks the direct sun, or on an overcast but bright day, or in open shade. For scenic pictures, avoid high overhead sun, shoot with the light coming from behind you and from the side.

Avoid dim light: The shutter moves slowly and your picture may be blurred. But if you are using 3000 speed film and must make a picture without flash in dim light, follow the suggestions on page 31.

Watch the background: The light on the background, behind your subject, should be just about as bright as the light on the subject. Don't photograph someone in the shade if the background is out in the open and brightly lit. Strong light behind the subject will "fool" the electric eye (page 30).

Move in close: The bigger your subject is in the print, the more details you'll be able to see. For scenic pictures, try

to get something big and solid looking into the foreground to help fill the print and add a feeling of distance.

Time development carefully: Follow the recommendations in the film instruction sheet. These may change from time to time. With black and white film no harm is done if you overdevelop for a few extra seconds; in fact, it may improve some pictures. However, if you develop for less than the recommended time, your pictures will be of poor quality, with a gray, washed-out look.

Keep an eye on the temperature: Cold weather can affect the quality of your pictures. Be sure to read page 25, which explains how the temperature affects your pictures and what to do about it.


If your picture is too dark or too light: Use the L/D control as shown on page 26 to make the next one of the same subject, in the same location and lighting conditions, come out exactly as you want it to.

Never try to use flash with daylight pictures.

HOW TO SET THE CAMERA FOR 75 SPEED COLOR FILM



Set the Film Selector as shown above for all color pictures. Set the Lighten/Darken control (right) to Normal, as shown, with this exception. On some color film packs you'll find a printed instruction telling you to set the L/D control one mark toward Lighten for all pictures made with that pack. Please follow those instructions, which may vary from pack to pack;

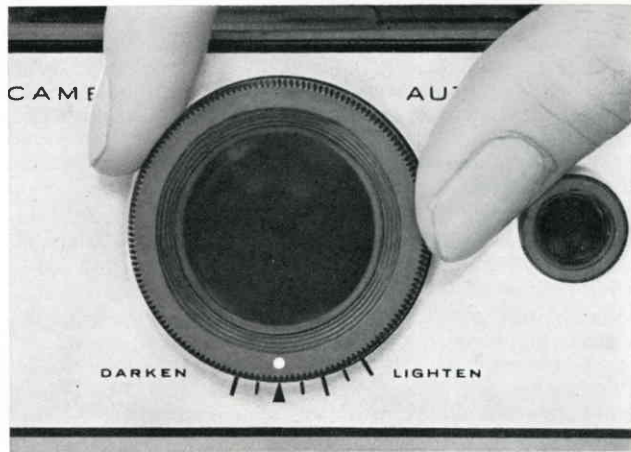

they are important. The new position of the L/D control then becomes the Normal setting for all daylight pictures made with that pack. You can still make your pictures lighter or darker (page 26) with the L/D control. If there's no special instruction on the pack, set the L/D control to Normal as shown above.

TIPS FOR GOOD DAYLIGHT COLOR PICTURES

Use bright sun, coming from behind you: You'll get strongest colors if your subject is in bright sun (but you can also get pleasing results on an overcast but very bright day). Stand so the light on the subject is coming over your shoulder. Don't have the subject between you and the sun.

Avoid dim light: The shutter moves slowly and your picture may be blurred.

Move in close: The bigger your subject is in the print, the more color and detail you'll be able to see. For scenic pictures, try to get something big, solid looking, and colorful into the foreground.

Focus carefully: Focus on the main subject. It will be sharp, but objects much farther or nearer than the subject may be fuzzy.

Watch the background: The light on the background should be just about as bright as the light on the subject. Don't photograph someone in the shade if the background is out in the open and brightly lit. The strong light behind the subject will "fool" the electric eye (see page 30).

Have plenty of color: Look for subjects and backgrounds with strong, bright colors in big, solid chunks. If your sub-

OPERATION

ject isn't wearing colorful clothes, add color with a bright shirt, scarf, or jacket. Or, find a colorful background — anything that will fill at least one-third of the picture area with strong, solid color.

Time development carefully: Follow the recommendations in the film instruction sheet. These may change from time to time. Use an accurate timepiece. If you have a Polaroid Development Timer, check it occasionally against a watch with a second hand; if it's fast or slow, allow for this when developing your pictures. A few seconds overdevelopment is not harmful, but prints that are much overdeveloped may look too bluish; those that aren't developed long enough will have a pinkish cast and the colors will be weak.

Keep an eye on the temperature: Cold weather or excessive heat can affect the quality of your pictures. Be sure to read page 25, which explains how the temperature affects your pictures and what to do about it.


If your picture is too dark or too light: Use the L/D control as shown on page 26 to make the next one of the same subject, in the same location and lighting conditions, come out exactly as you want it to.

Never try to use flash with daylight color pictures.


HOW TO TAKE A PICTURE




1 FOCUS: Look at your subject through the finder window. Come close enough to fill most of the frame. Place the top line of the rangefinder at the top of your subject's forehead. Then push the No. 1 buttons to place the

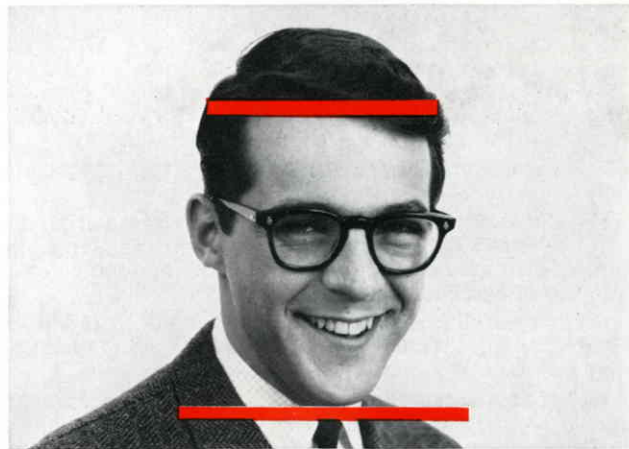

moving line at the bottom of the subject's chin. For pictures of children, pets, nearby objects, and scenics, follow the focusing instructions on pages 9 and 10.

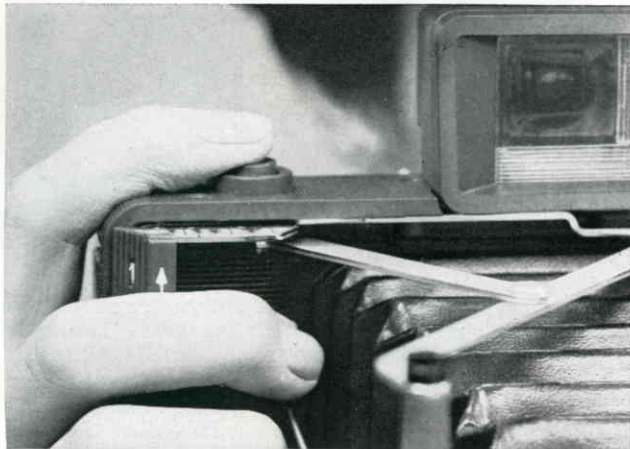


2 SHOOT: Firmly but smoothly press button No. 2, the shutter release, until you hear a loud click. Don't jab at No. 2 — you may shake the camera. When shooting color in the shade or black and white in dim light, hold No. 2 down and don't move until you hear a second click as the shutter closes. Then let No. 2 button come up.


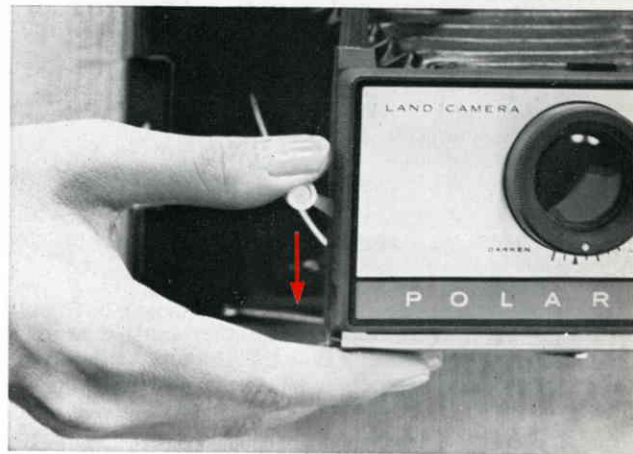


3 RESET: Immediately after snapping a picture, press No. 3 button down firmly until it locks and stays down. This resets the shutter so you'll be ready for the next picture. Always reset No. 3 right away.

HOW TO DEVELOP THE PRINT

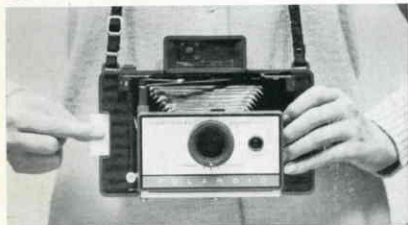

First, the small white tab. Pull it all the way out of the camera. Don't block the door (A).

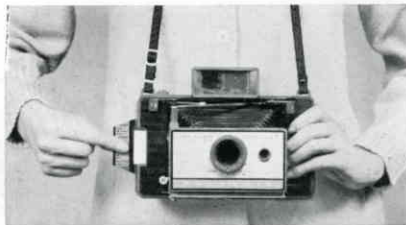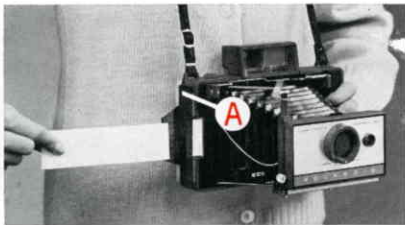

Next, the large yellow tab.

4 PULL THE TABS: Hold the camera in your left hand, as shown. (**Don't hold it any other way!**) Grasp the small white tab between the thumb and forefinger and pull it straight out of the camera, all the way, without stopping. When you pull the white tab out, a concealed door (A) opens and a yellow tab pops out. Don't block this door in any way while pulling the tabs.


Pulling the small white tab does not start development. It only prepares the film for the next step, which is pulling the yellow tab. Grip the yellow tab in the center so it will come out straight when you pull it out of the camera. If you pull the yellow tab out at an angle, one edge of your picture may not develop properly.

When you pull the yellow tab, hold the camera so the lens faces straight ahead of you, not pointing down. This, plus gripping the center of the tab, helps you to pull it out straight:

Pull the yellow tab straight out of the camera all the way, swiftly, without hesitating. This starts development of your picture, so begin timing as soon as you get the tab out. How fast is a swift pull? It should take about as long as it takes you to say "PULL IT" briskly, each time you pull the tab. If your picture is full of white specks, pull a bit slower.

The picture develops outside the camera. While it's developing, hold the tab by the yellow tip, or lay the picture assembly down flat. Don't touch or bend the white paper

PULL STRAIGHT, PULL SWIFTLY

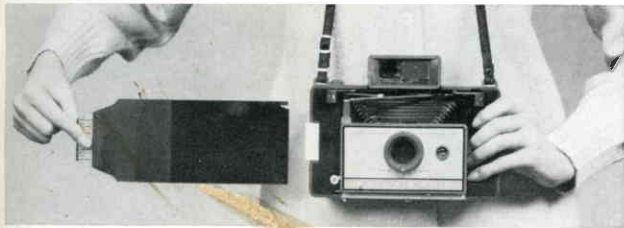


Pull it straight out of the camera, swiftly. Begin timing development.

or lift it off. Outdoors, don't let the picture assembly flap in the breeze. Develop the picture for the full time recommended in the film instruction sheet.

After the recommended development time, quickly strip the white print off the brown paper starting from the end nearest to the yellow tab. A color print will look nearly dry, but don't touch the face for a few minutes. It will harden to a tough, glossy finish. When it is dry, mount it on a color print mount, which is supplied with the film.

Don't touch the face of black and white prints. You must coat them to prevent fading and other damage (see page 27 for how to coat prints).

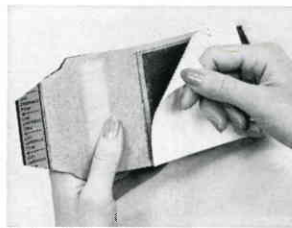

Strip off the white print.



Fold up the negative.


Avoid contact with chemicals left on the negative after the print is removed. (Be sure to read the CAUTION paragraph about this in your film instructions.) Fold up the negative with the moist side in. Please put it in a wastebasket or film box. Don't be a litterbug!

If no yellow tab pops out when you pull the white tab, stop. Don't pull another white tab. Page 24 shows you what to do in this situation.


Never pull a white tab when you can see a yellow tab. If you do so accidentally, don't pull the yellow tabs that appear or you'll spread developer all over the rollers. Instead, remove the yellow tabs as shown on page 24.

Check the temperature! It's important. See page 25.


IF NO YELLOW TAB APPEARS WHEN YOU PULL THE WHITE TAB, STOP!

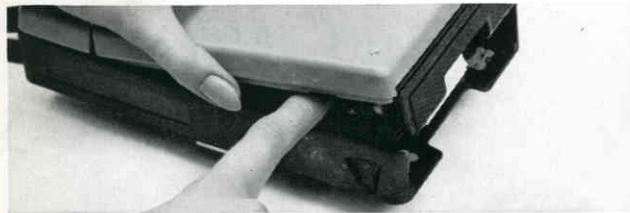


Don't pull another white tab. Instead, gently open the camera back just enough to get one finger under it to hold down the film pack and keep it in place. Do this indoors

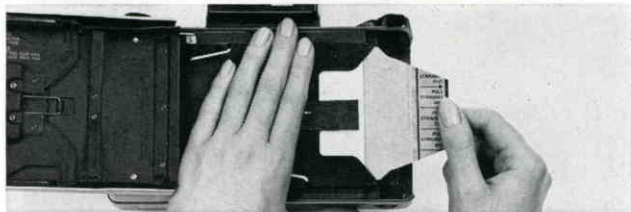

or in the shade. While holding the pack down lightly (picture at left) slowly open the back all the way and take hold of the topmost yellow PULL tab, as shown.

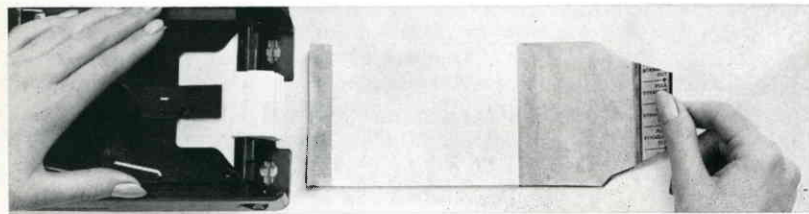

Gently pull the entire picture assembly all the way out of the pack and discard it. Don't try to save it. While the back door is open check that the rollers are clean (page 32).

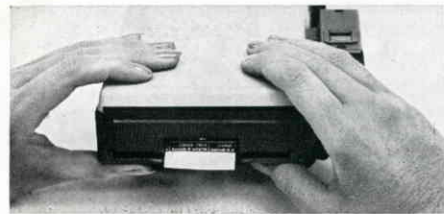

Close the back of the camera, making sure that the next white tab sticks out of the small slot next to No. 4. Check that both sides of the back latch securely.

2 SHOOT Gently press No. 2 button until shutter clicks. In dim light hold No. 2 down, hold steady until second click as shutter closes.

1 FOCUS

Look through finder. Place top line of rangefinder at top of subject's forehead; push No.1 buttons back and forth to place moving line at bottom of chin. For scenics, set moving arrow at INF.

4 PULL TABS

Pull small white tab straight out of camera, all the way; large yellow tab will pop out. Pull yellow tab straight out of camera, all the way, moderately fast, smoothly, without hesitation. **THIS STARTS DEVELOPMENT.** Develop for full time recommended in film instruction sheet. Separate white print from brown paper. Don't touch face of print until thoroughly dry.



3 RESET Press No. 3 button down until it locks and stays down.