



MAX1272 Evaluation Kit/Evaluation System

General Description

The MAX1272 evaluation system (EV system) is a complete, 12-bit, multirange, single-channel, data-acquisition system consisting of a MAX1272 evaluation kit (EV kit) and a Maxim 68HC16MODULE-DIP microcontroller (μ C) module.

Order the complete EV system (MAX1272EVC16) for a comprehensive evaluation of the MAX1272 using a personal computer (PC). Order the EV kit (MAX1272EVKIT) separately if the 68HC16MODULE-DIP module has already been purchased with a previous Maxim EV system or for custom use in other μ C-based systems.

The MAX1272 EV kit can also be used to evaluate the MAX1273CPA (8-pin DIP).

MAX1272EVKIT Software

| PROGRAM | FUNCTION |
|-------------|---|
| INSTALL.EXE | Installs the EV kit files on your computer. |
| KIT1272.C16 | Software loaded into 68HC16 μ C module. |
| MAX1272.EXE | Application program. |

MAX1272EVKIT Component List

| DESIGNATION | QTY | DESCRIPTION |
|-------------|-----|---|
| C1, C3 | 2 | 1 μ F ceramic capacitors (0805) TDK C2012X5R1C105M |
| C2 | 1 | 0.1 μ F ceramic capacitor (0603) |
| J1 | 1 | 2 x 20 right-angle female connector |
| TB0 | 1 | Two-circuit terminal block |
| TP1 | 1 | 6-pin header |
| U1 | 1 | MAX1272CPA (8-pin DIP) |
| None | 1 | PC board—MAX1272 EV kit |
| None | 1 | MAX1272 EV kit software, CD-ROM |

MAX1272EVC16 System

| PART | QTY | DESCRIPTION |
|------------------|-----|-----------------------|
| MAX1272EVKIT | 1 | MAX1272 EV kit |
| 68HC16MODULE-DIP | 1 | 68HC16 μ C module |

Windows 95/98/2000/XP is a registered trademark of Microsoft Corp.



For pricing, delivery, and ordering information, please contact Maxim/Dallas Direct! at 1-888-629-4642, or visit Maxim's website at www.maxim-ic.com.

Features

- ◆ Proven PC Board Layout
- ◆ Windows® 95-/98-/2000-/XP-Compatible Evaluation Software
- ◆ Convenient On-Board Test Points
- ◆ Fully Assembled and Tested

Ordering Information

| PART | TEMP RANGE | INTERFACE TYPE |
|--------------|--------------|------------------|
| MAX1272EVKIT | 0°C to +70°C | User supplied |
| MAX1272EVC16 | 0°C to +70°C | Windows software |

Note: The MAX1272 EV kit software is designed for use with the complete EV system. It includes both a μ C module and the EV kit. If the Windows software is not used, the EV kit board can be purchased by itself, without the μ C module.

Note: To evaluate the MAX1273, request a free sample of the MAX1273CPA when ordering the MAX1272 EV kit.

Quick Start

Recommended Equipment

- MAX1272EVC16 (MAX1272EVKIT board and 68HC16MODULE-DIP)
 - A DC power supply (+8V to +20V)
 - An IBM-compatible PC with Windows 95/98/2000/XP
 - An available standard serial port, preferably with a 9-pin plug
 - A standard serial cable to connect the PC's standard serial port to the 68HC16MODULE-DIP module
- 1) Carefully connect the boards by aligning the 40-pin connector of the MAX1272EVKIT with the 40-pin header of the 68HC16MODULE-DIP module. Gently press them together. The two boards should be flush against one another.
 - 2) Ensure that the μ C module's SW1 switch is in the OFF position.

MAX1272 Evaluation Kit/Evaluation System

- 3) Connect the +8V to +20V power supply to the μC module's terminal block (J2) located next to SW1. Observe the polarity marked on the board.
- 4) Connect a standard serial cable from the computer's serial port to the μC module. If the PC's standard serial port has a 9-pin connector, use a straight-through, 9-pin female-to-male cable. If the PC's only available standard serial port has a 25-pin connector, a standard 25-pin to 9-pin adapter is required. The EV kit software checks the modem status lines (CTS, DSR, DCD) to confirm that the correct port has been selected.
- 5) Install the MAX1272 EV kit software on your computer by running the INSTALL.EXE program on the CD-ROM. The program files are copied and icons are created in the **Programs** section within the Windows **Start** menu.
- 6) Start the MAX1272 program by clicking its icon in the **Programs** section within the Windows **Start** menu.
- 7) The Windows program prompts you to connect the μC module and turn its power on. Slide SW1 to the ON position. When you click OK, the Windows program automatically downloads KIT1272.C16 to the module.
- 8) Apply an input signal (0 to 10V) between AIN and GND. Observe the readout on the running Windows program.

Detailed Description

MAX1272 Stand-Alone EV Kit

The MAX1272EVKIT provides a proven PC board layout to evaluate the MAX1272. It must be interfaced to appropriate timing signals for proper operation. Connect +5V to VDD and connect ground return to GND. See Figure 2 (MAX1272 EV Kit Schematic) and refer to the MAX1272 data sheet for timing requirements.

MAX1272 EV System

The MAX1272EVC16 operates from a user-supplied +8V to +20V DC power supply. Windows 95-/98-/2000-/XP-compatible software interfaces to the EV system board through the PC's standard serial port. See the *Quick Start* section for setup and operating instructions.

Detailed Description of Software

The evaluation software's main window is shown in Figure 1. It controls the serial clock speed and sample rate. It also displays the voltage and output code as well as some statistics relating to the input signal. A separate graph shows the data changing in real time. The update rate is limited to about 10 samples per second, due to COM port bandwidth limitations.

Part Selection

The **Choose Part** pulldown menu allows the user to evaluate the MAX1272CPA or the MAX1273CPA. The default part is the MAX1272CPA.

Control Byte Pulldown Menus

The pulldown menus at the top of the main program window allow the user to select the control byte. The first field represents the start bit and is always one. The second field controls the input range and polarity. The third field sets the power-down mode. The fourth field sets the external clock. The last field selects either the internal or an external reference.

Sample Rate

The SPI™ SCLK frequency area allows the user to vary the analog-to-digital converter (ADC)-to- μC sample rate. The PC is not capable of retrieving the data that was stored in the memory of the μC as fast as the μC can obtain the data from the ADC, because the μC 's SPI interface is much faster than the PC's standard serial port. Hence, the ADC-to- μC sample rate refers to the sample rate at which data is being sampled by the ADC and stored in the μC 's memory. Use the pulldown menu to select the desired SCLK frequency. The first two digits are the divisors for the μC 's internal clock. The next floating point number is the corresponding SCLK frequency. The ADC-to- μC sample rate is displayed in the ADC-to- μC sample rate field located on the right side of the main window.

The other sample rate of interest is the rate at which data is being sampled from the μC 's memory to the PC. This μC -to-PC sample rate is controlled using the field in the lower right hand corner of the main window and can be controlled in two different ways. Pressing the **Read** button allows the user to manually obtain a sample from the μC 's memory. Checking the **Read Every** checkbox allows the user to automatically read samples from the μC 's memory at a rate selectable in milliseconds.

SPI is a trademark of Motorola, Inc.

MAX1272 Evaluation Kit/Evaluation System

Evaluate: MAX1272/MAX1273

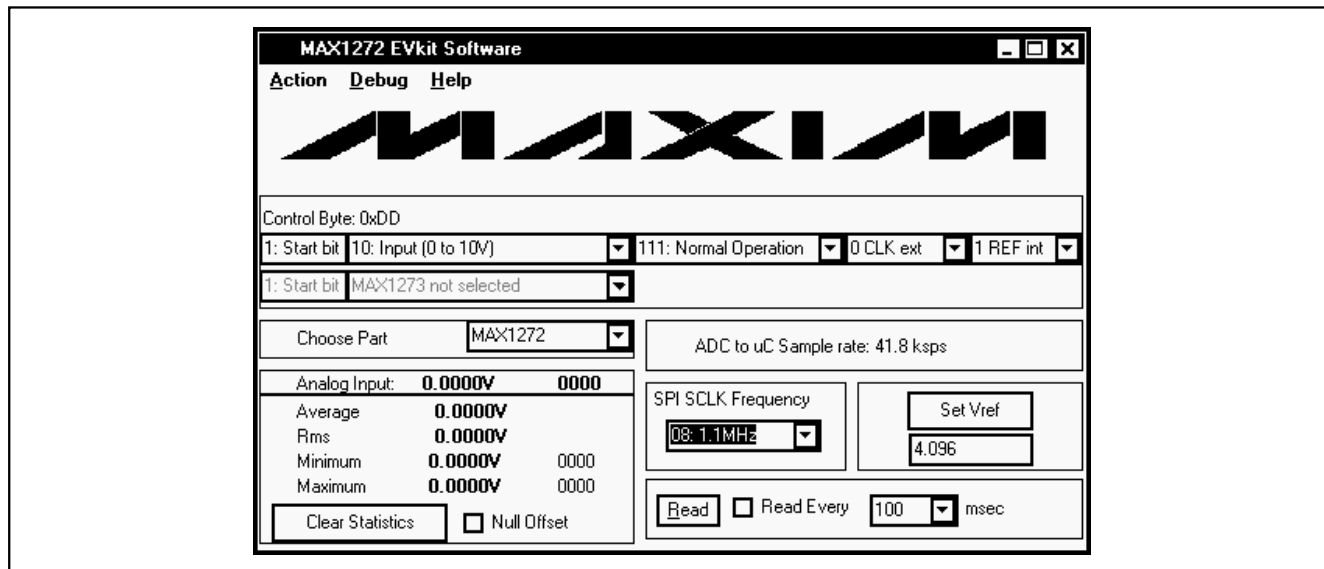


Figure 1. MAX1272 Evaluation Software Main Window

To retrieve a block of consecutively sampled data to the PC, click on the **Sample** menu located at the top left-hand corner of the main window. The data block length is selectable and the data can be saved to a file.

Statistics

The Minimum and Maximum fields in the statistics area show the highest and lowest readings acquired. The Average field shows a running mean. When reading data manually by pressing the **Read** button, the Average and RMS fields require approximately five samples until they are accurately represented. The **Clear Statistics** button resets the statistics. To remove offset errors, first apply 0V to the active input channel, press the **Clear Statistics** button, acquire some samples, and then check the **Null Offset** checkbox. Once checked, the label next to the **Null Offset** checkbox shows the sampled offset error. This value is subtracted from all subsequent measurements until the checkbox is unchecked.

Reference Voltage

The evaluation software assumes a +4.096V reference voltage, unless otherwise specified. To override the +4.096V reference value, apply the new reference voltage at the terminal block (TB0) on the board, type in the new reference voltage (without the volt unit), and press the **Set V_{ref}** button.

Detailed Description of Hardware

The MAX1272 is a 12-bit, multirange, serial ADC. When the MAX1272EVKIT board is connected to the 68HC16MODULE-DIP module, power is provided by the module. See Figure 2 (MAX1272 EV Kit Schematic).

The MAX1272 has a software-selectable internal +4.096V reference. The terminal block (TB0) on the MAX1272EVKIT board is for applications requiring an external reference.

Evaluating the MAX1273

The MAX1272EVKIT board can also be used to evaluate the MAX1273. The MAX1272 and the MAX1273 differ only in analog input voltage range. The MAX1272 has a software-selectable input voltage range of 0 to +5V, 0 to +10V, $\pm 5V$ and $\pm 10V$. The MAX1273 has a software-selectable input voltage range of 0 to V_{REF} / 2, 0 to V_{REF}, $\pm V_{REF} / 2$, and $\pm V_{REF}$. Simply replace the MAX1272CPA with the MAX1273CPA.

MAX1272 Evaluation Kit/Evaluation System

Evaluate: MAX1272/MAX1273

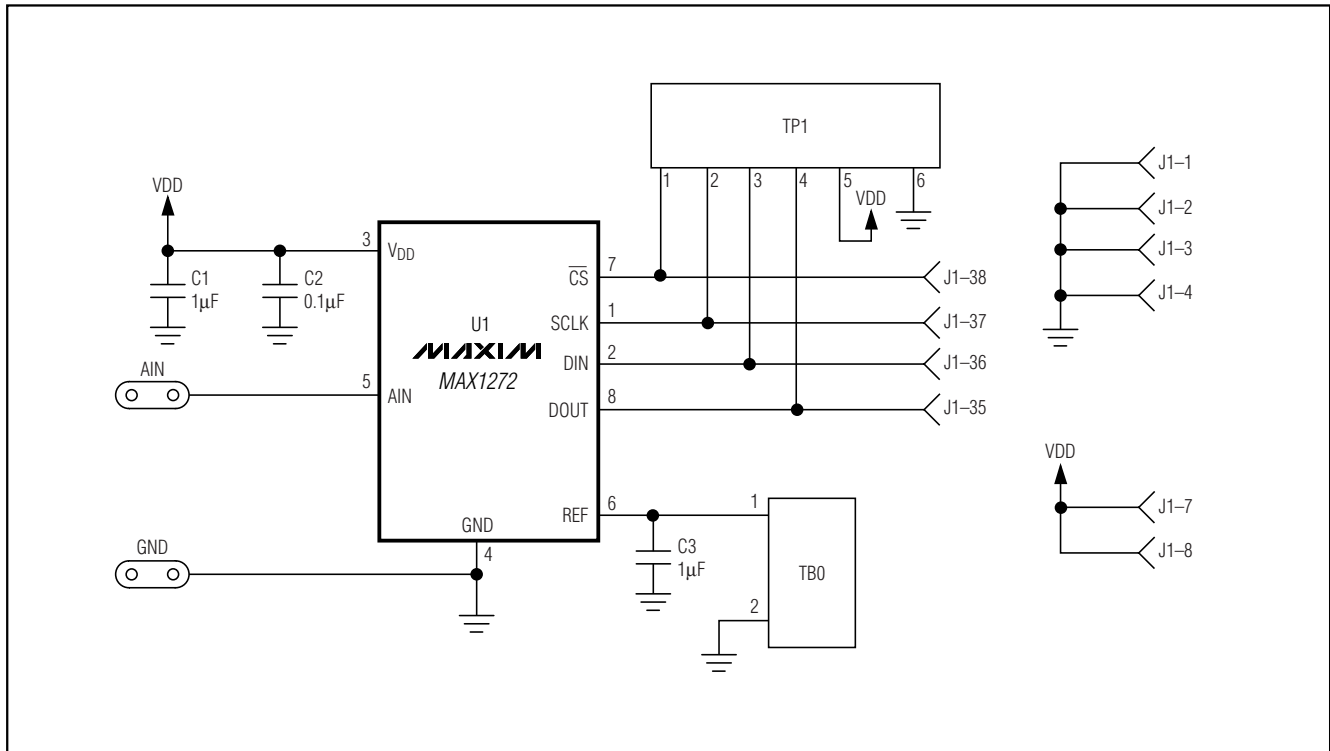


Figure 2. MAX1272 EV Kit Schematic

MAX1272 Evaluation Kit/Evaluation System

Evaluate: MAX1272/MAX1273

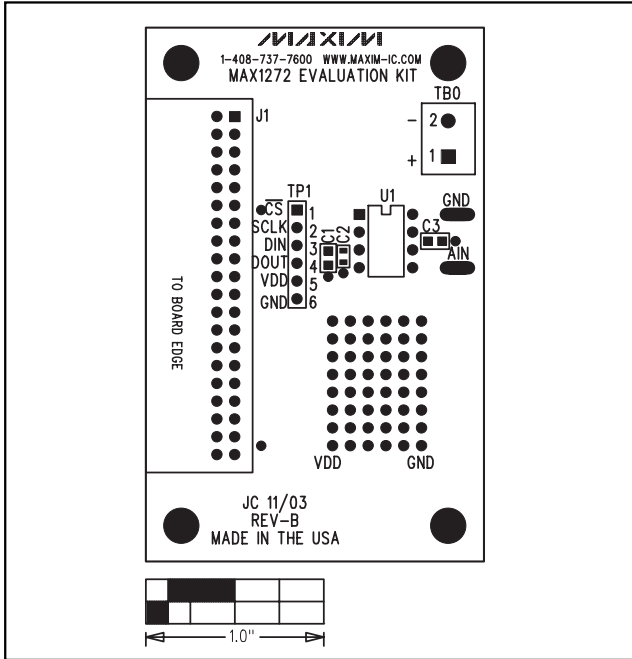


Figure 3. MAX1272 EV Kit Component Placement Guide—Component Side

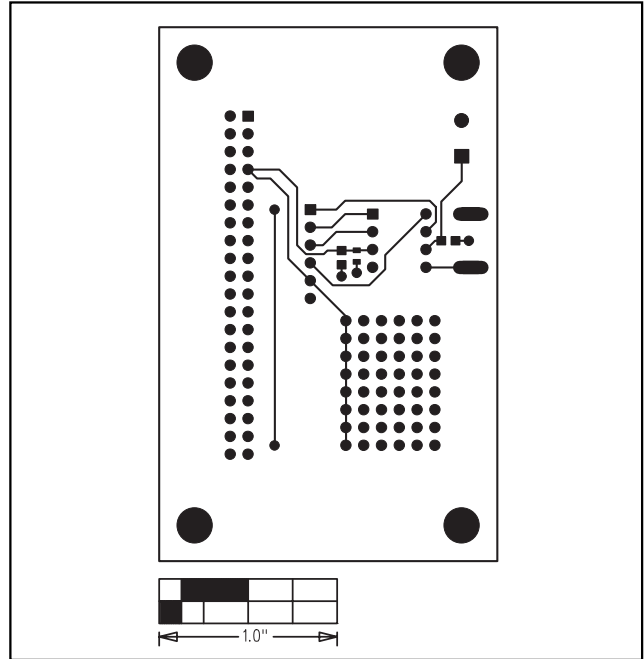


Figure 4. MAX1272 EV Kit PC Board Layout—Component Side

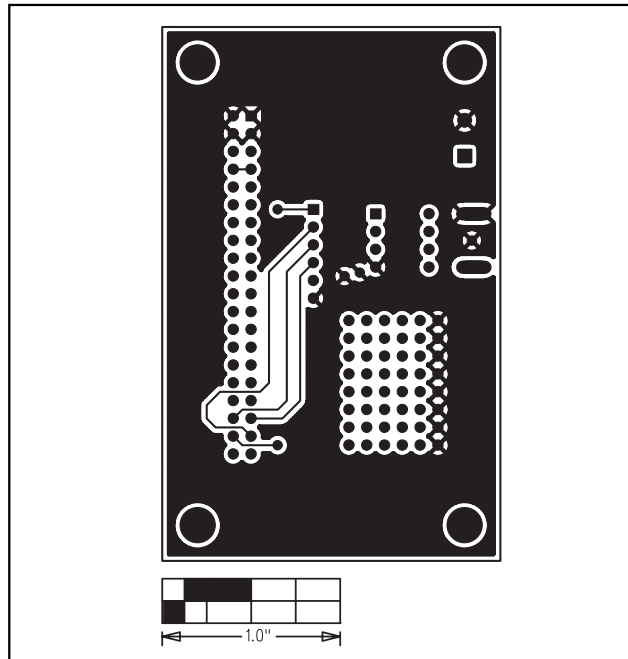


Figure 5. MAX1272 EV Kit PC Board Layout—Solder Side

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600 _____ 5