

**This camera manual library is for reference and historical purposes, all rights reserved.**

**This page is copyright by mike@butkus.org M. Butkus, N.J.**

**This page may not be sold or distributed without the expressed  
permission of the producer**

**I have no connection with any camera company**

**If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your E-mail address too so I can thank you. Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy. These donations allow me to continue to buy new manuals and maintain these pages. It'll make you feel better, won't it?**


**If you use Pay Pal, use the link below. Use the above address for a check, M.O. or cash. Use the E-mail of butkusmi@ptd.net for PayPal.**



**[back to my "Orphancameras" manuals /flash and light meter site](#)**

**Only one "donation" needed per manual, not per multiple section of a manual !**

**The large manuals are split only for easy download size.**

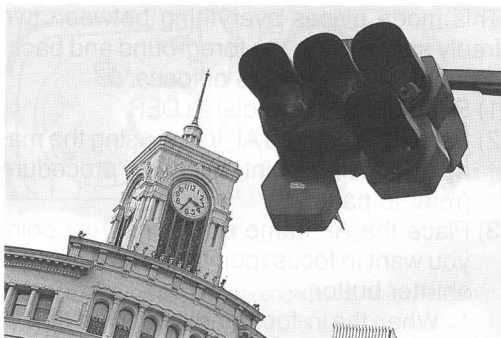


5) Compose the picture and press the shutter button halfway to confirm the exposure.




- \* The correct exposure value for the designated depth of field and the corresponding shutter speed are displayed in both the viewfinder and LCD panel.
- \* If you remove your finger from the shutter button the display changes to “dEP” and the aperture value.
- \* If desired you can change the aperture/shutter speed combination by turning the main dial (refer to page 41).

6) Press the shutter button completely to take the picture.

If the aperture value blinks, the desired depth of field cannot be obtained. Use a wide-angle lens or move farther from the subject and repeat steps 3 through 5.


- To cancel depth-of-field AE in mid-operation, turn the command dial to another position.
- When using a zoom lens, do not zoom the lens after setting the first point.
- For greater depth of field, we recommend using a wide-angle lens.
- For shallow depth of field, place both points A and B on the same subject. This method is effective for blurring the foreground and background when shooting portraits. Use a telephoto lens for best effect.
- Flash cannot be used effectively in depth-of-field AE mode. Use of flash will provide the same result as using flash in Program AE mode.
- If Eye Controlled Focus or automatic focusing point selection mode is set, the center AF frame is used for focusing.
- If the Eye-Controlled Focus is on when depth-of-field AE is set,  temporarily disappears from the viewfinder display. However, you can check the depth-of-field by looking at the depth-of-field check mark in the viewfinder.

## 6. X (Flash sync mode)

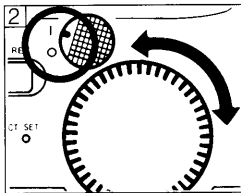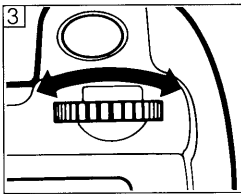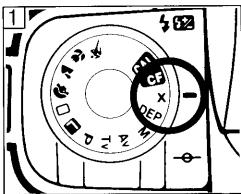

### [Attention]

The diagram on the right shows the contact points of the camera's PC terminal. please note that if an external flash unit with opposite polarity is attached to the camera, the flash will not operate.

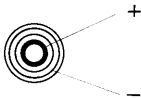

Use this mode for flash photography using a non-dedicated external flash unit (such as a studio strobe) connected to the camera's PC terminal or accessory shoe. Shutter speed and aperture settings are the reverse of manual exposure operation, with the X-sync shutter speed (1/200, 1/125, 1/90 or 1/60 sec) set with the quick control dial and the aperture value set with the main dial.

- Before use, be sure to check the synchronous shutter speed range of the external flash unit.
- 1) Set the command dial to X.
  - 2) Set the quick control dial switch to I, then turn the quick control dial to the desired X-sync shutter speed.
  - 3) Turn the main dial to set the desired aperture.
  - 4) Take the picture.

## 7. Image Zone Shooting Modes

Image zone shooting modes automatically set all camera functions such as metering, film winding and AF mode to the optimum settings appropriate for the selected mode.

- When using an external flash unit in an image zone mode, the picture may not turn out as expected. Do not use an external flash unit with image zone modes.
- If the shutter speed set by the image zone mode falls below "1/focal length of the lens in use," the beeper sounds (2 beeps per second) to warn of possible blurring due to camera shake.
- Refer to page 67 for the function settings in each mode.

### (Full Auto)

This setting allows you to take pictures in any situation with point and shoot simplicity. Focusing, exposure and film winding are all set automatically.

- The flash automatically fires in low light or when the subject is backed by a strong light.
- Red-eye reduction operation is possible with the built-in flash (refer to page 36).
- Eye Controlled Focus cannot be used.

#### **AF mode automatic switching function**


In Full Auto mode, the camera senses the subject movement and automatically sets One-shot AF if the subject is stationary or AI Servo AF if the subject is moving (refer to page 29).

- When the camera switches to AI Servo AF mode, the in-focus beeper and indicator do not function.
- Once the camera switches to AI Servo AF mode, it will not switch back to One-shot AF mode.

## (Portrait)


Set this mode to create a sharply focused subject against a blurred background for flattering portraits.

- Hold the shutter button down to take pictures continuously.
- The flash automatically fires in low light or when the subject is backed by a strong light.
- Red-eye reduction operation is possible with the built-in flash (refer to page 36).

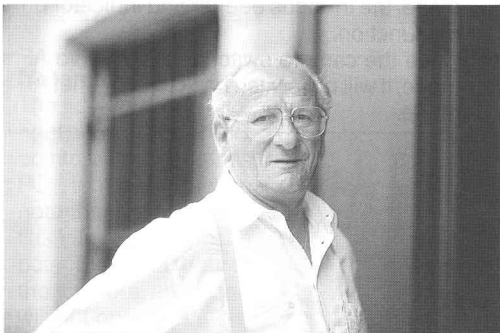

## (Landscape)


Set this mode for vivid landscape pictures with everything sharply focused from near to far. When using a zoom lens, set the lens to a wide-angle position for best effect.

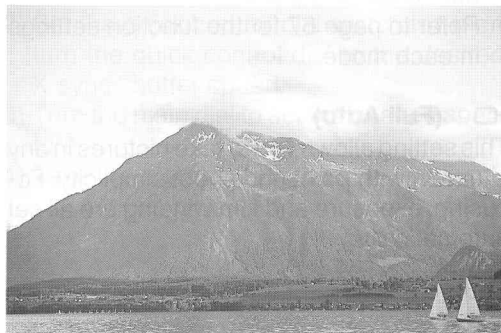

## (Close-up)

Set this mode to use the lens' built-in macro function and take striking close-ups of small objects such as flowers and insects. When using a zoom lens, set the lens to telephoto for greatest magnification.

- The flash automatically fires in low light or when the subject is backed by a strong light.
- The light from the flash may be partially blocked by the lens at distances closer than 1 m/3.3 ft.
- For high-magnification close-ups, we recommend using a macro lens.

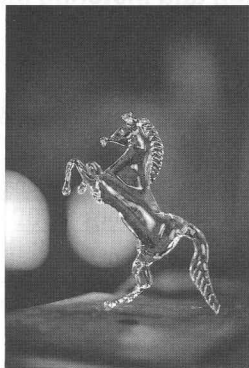


## (Sports)

Use this setting for taking pictures of sporting events or other situations with fast-moving subjects. The camera continuously focuses as you follow the subject with the shutter button pressed halfway.



- Pictures can be taken continuously by holding the shutter button pressed.

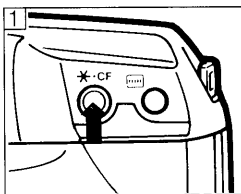

## 8. AE Lock



When you press the AE lock button, \* lights in the viewfinder to indicate that AE lock is set. Once \* appears the exposure remains locked even if you release the AE lock button. AE lock is available in P, Tv, Av and DEP shooting modes.

- When the film winding mode is  or , the same exposure setting is used for all continuous exposures.

### AE lock operation for different AF focusing point selection and metering mode combinations



	Manual focusing point selection	Eye Controlled Focus/Automatic focusing point selection
Evaluative metering	Locks metered value based on selected AF focusing point	Locks metered value based on selected AF focusing point after focusing is completed with the shutter button pressed halfway
Spot metering	Locks metered value based on center AF focusing point	
Center-weighted average metering	Locks metered value based on center AF focusing point	






## 9. AEB (Auto Exposure Bracketing)

Use auto exposure bracketing in AE and manual exposure modes to take a sequence of pictures at different exposures. When this function is set, the exposure is shifted (bracketed) for three successive pictures in the sequence: correct exposure → underexposure → overexposure. The bracketing amount can be set in 1/2-stop increments up to  $\pm 2$  stops from the metered exposure value.


Auto exposure bracketing is particularly effective when using slide film, which produces noticeably different results with even small exposure variations.

- When this function is combined with continuous exposure (  ) or high-speed continuous exposure (  ), holding the shutter button pressed automatically takes three exposures in sequence while shifting the exposure for each picture.

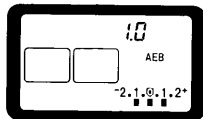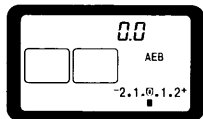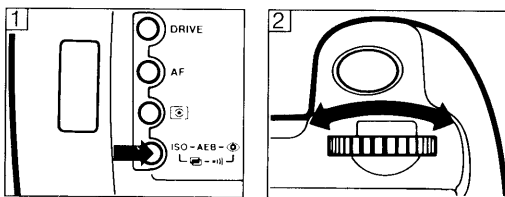

- 1) Press the function button so that AEB appears in the LCD panel.
- 2) Turn the main dial to set the desired bracketing amount.

\* The bracketing amount is shown in the LCD panel as both a graphic level display and a numerical value. If "0.5" is set, for example, three pictures are taken in the following sequence: correct exposure ( $\pm 0$  stop), underexposure ( $-0.5$  stop) and overexposure ( $+0.5$  stop).

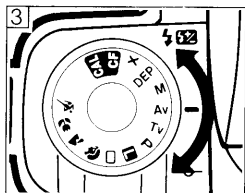

Auto exposure bracketing is carried out in each mode as follows:

**P:** Both the shutter speed and aperture value are shifted.


**Av, DEP, M:** Only the shutter speed is shifted.

**Tv, X:** Only the aperture value is shifted.


- \* The bracketing amount is also displayed in the viewfinder.
- 3) Set the command dial to the desired shooting mode and take pictures.
- To cancel auto exposure bracketing, repeat steps 1 and 2 to reset the bracketing amount to 0.
  - Auto exposure bracketing is automatically canceled when the battery is replaced.
  - Auto exposure bracketing cannot be used in bulb mode or when using flash.
  - Auto exposure bracketing can be used in X mode with flash units connected through the PC terminal.
  - The exposure level blinks in the LCD panel and viewfinder display during auto exposure bracketing operation.

If you wish to shift the bracketed exposure values toward over- or underexposure, you can add exposure compensation using the quick control dial. In this case the LCD panel may not display the correct values, but exposures will be made correctly.

## 10. Multiple Exposure

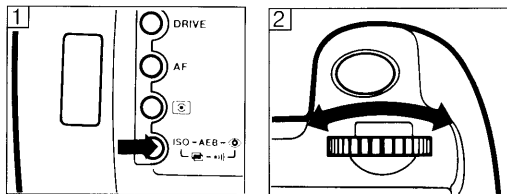

Up to nine exposures can be made on one frame by presetting the number of multiple exposures with the main dial.


- 1) Press the function button so that  appears in the LCD panel.
- 2) Turn the main dial to set the desired number of exposures in the frame counter display area.
- 3) Take pictures.

### Helpful Hints

When taking multiple exposures on a single frame, you should decrease the exposure value for each exposure using exposure compensation (refer to page 33).

Number of multiple exposures	Compensation amount
2 exposures	-1.0
3 exposures	-1.5
4 exposures	-2.0




The above values should be used only as a guide. The actual compensation amount required depends on the shooting conditions and should be determined by prior testing.

-  blinks in the LCD panel while multiple exposures are being taken.
- To cancel multiple exposure mode in mid-operation, repeat steps 1 and 2 to set the frame counter to a blank display.
- When the preset number of multiple exposures is completed, the film automatically advances to the next frame and multiple exposure mode is canceled.

## 11. Bulb (Long Exposure) Operation

Use this mode when long exposures are required, such as for pictures of night scenes and fireworks displays. The shutter stays open for as long as you press the shutter button.

Mount the camera on a tripod to prevent camera movement during exposure.

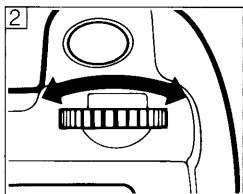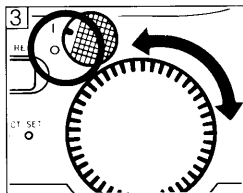
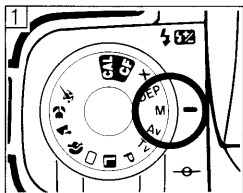


- The remote switch 60T3 (sold separately) can be connected to the camera's remote control socket for use in starting and stopping the bulb exposure. For details, read the instructions supplied with the 60T3.
- Battery life during bulb exposure is approximately 6 hours with a new battery.

- 1) Set the command dial to M.
- 2) Turn the main dial to change the shutter speed until "buLb" appears in the LCD panel. "buLb" is the next position after 30".
- 3) Set the quick control dial switch to I, then turn the quick control dial to the desired aperture.
- 4) Press the shutter button for the desired length of time.
  - \* The viewfinder display extinguishes during the exposure.
  - \* The word "buLb" blinks in the LCD panel during the exposure.


## 12. Self-timer Function

When using the self-timer, place the camera on a tripod or a steady surface. The picture is

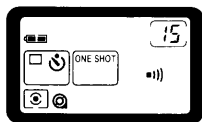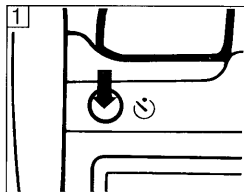

Pressing the shutter button with your eye away from the viewfinder may allow light to enter the viewfinder and trick the metering system into setting a wrong exposure. To prevent this from happening, remove the eye cup from the eyepiece and cover the eyepiece with the cover provided on the strap before pressing the shutter button.

taken approximately 10 seconds after you press the shutter button.

- 1) Press the self-timer button.
    - \*  appears in the LCD panel.
  - 2) Compose the picture and press the shutter button halfway to focus the subject and set the exposure.
  - 3) Press the shutter button completely.
    - \* A beeper tone is heard and the picture is taken after a 10-second delay. The self-timer lamp starts blinking two seconds before the picture is taken.
  - 4) When finished using the self-timer, press the self-timer button again to cancel the self-timer mode.
- When using the self-timer with Eye Controlled Focus mode turned on, press the shutter button while looking through the viewfinder.
  - Pressing the self-timer button before the picture is taken will cancel self-timer mode and stop the countdown.

The back of the QD (quartz date) model incorporates a built-in automatic calendar programmed with dates to the year 2019. This function lets you imprint the date and/or time on each picture during exposure.

- When using film with a film speed lower than ISO 100, imprinted characters may appear thin.
- The QD model may not be sold in some areas.

### Imprinting the date and time

The date and time can be imprinted in one of four different formats or turned off. Press the MODE button to change the date format in the following sequence:

<Year Month Day >

↓ '98 <sup>M</sup>5 '1 (1998, May, 1)

<Day Hour Minute >

↓ 1 15:45 (4:45 pm on the 1th)

<Hyphen display >

↓ - - - - - (No imprint)

<Month Day Year >

↓ <sup>M</sup>5 '98 (May, 1, 1998)

<Day Month Year >


↓ 1 <sup>M</sup>5 '98 (1, May, 1998)

- M indicates the month.
- “-” is the imprinting confirmation mark. It blinks when a picture is taken to notify you that the date/time is being imprinted.
- When the date function's LCD panel becomes weak and difficult to read, replace the date battery with a new one (refer to page 59).
- The date appears orange in the lower right corner of the picture. A dark background is recommended for easy-to-read date imprinting.


## Setting the date and time

When traveling to a different time zone, use the following procedure to readjust the date and time.


1)

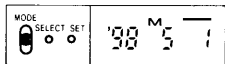

3)

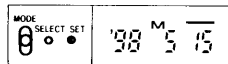

2)

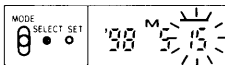






- 1) Press MODE to display the date/time on the LCD panel.
- 2) Press SELECT so that the first setting position to be adjusted starts blinking, then press SET to enter the desired number.
- 3) Repeat step 2 until all positions are set. When finished, press SELECT until all positions stop blinking.

## Replacing the date battery

The automatic calendar uses one 3V lithium button cell battery (CR2025). When the date function's LCD panel becomes difficult to read, replace the battery with a new one. Battery life is approximately three years.

- 1) Open the camera back and loosen the battery cover screw as shown in the diagram to remove the battery cover.
- 2) Remove the battery.
- 3) Insert a new battery with the + side facing up and reattach the battery cover.
- 4) Set the date and time as described above.

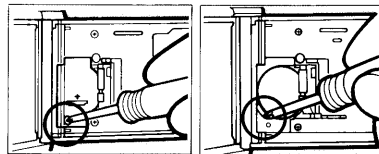

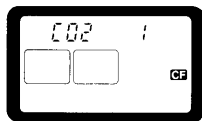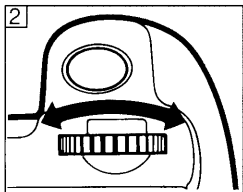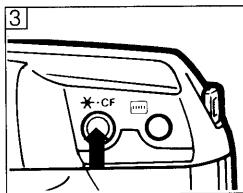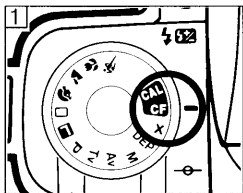

The number in the LCD panel alternates between 0 and 1 each time the custom function set button is pressed.

- 1: Sets the custom function to the custom setting.
- 0: Resets the custom function to the standard setting.

Sixteen types of custom functions are provided to let you customize the camera according to your personal preferences and shooting style. Set the custom functions as follows. The custom function only operates in the creative zone.

- 1) Set the command dial to **CF**.
- 2) Turn the main dial to select the desired custom function number.
- 3) Press the custom function set button to change the setting in the LCD panel to "1".
  - \* To reset the selected custom function to the standard setting, press the custom function set button to change the number in the LCD panel to "0".
- 4) Turn the command dial to a position other than **CF**.
  - \* "**CF**" is displayed in the LCD panel.



## Custom Functions (when the number in the LCD panel is 1)


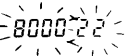


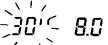
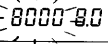

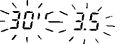
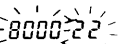
CF1:	Sets automatic film rewind to high-speed mode.	Film is rewound at approximately twice the speed of standard rewind mode.
CF2:	Leaves the film leader outside the cartridge after rewinding.	This function is useful if you develop your own film or plan to reload partially-used film after rewinding in mid-roll. With this custom function, the shutter always operates at the fastest 1/4000 sec. with the back cover open.
CF3:	Cancels automatic film speed setting with DX-coded film.	Use this function when you wish to compensate the film speed or manually set effective film speeds obtained from independent testing.
CF4:	Switches the autofocus start function from the shutter button to the AE lock button.	When this function is set, autofocus will not start when the shutter button is pressed halfway. The AE lock button simultaneously locks the exposure setting and initiates autofocus. This custom function cannot be used together with CF6 or CF11.
CF5:	Changes single exposure operation to allow the next exposure only after the shutter button is fully returned to the off position.	Setting this function ensures that a fresh meter reading will be taken before each exposure.
CF6:	Changes the function of the AE lock button to temporarily stop autofocus-ing operation.	Use this function when you wish to temporarily fix the focus at a certain point when shooting sports or action with AI Servo AF. This custom function cannot be used together with CF4.
CF7:	Prohibits firing of the AF auxiliary light during autofocusing.	This function is useful to keep the AF auxiliary light from appearing in other people's pictures in situations where many people are taking pictures of the same scene.
CF8:	Prohibits cancellation of multiple exposure mode after a single frame.	Use this function when making multiple exposures on successive frames to keep from having to reset multiple exposure mode for every frame. To check the current frame number, keep the shutter button held pressed after the last exposure in a multiple exposure sequence.

CF9:	Fixes the shutter speed at 1/200 sec when using flash.	When shooting indoors with flash in aperture-priority AE mode, the camera is likely to set a slow shutter speed which can result in blur caused by camera shake. This custom function prevents this from happening by fixing the shutter speed at 1/200 sec regardless of the lighting conditions.
CF10:	Prohibits superimposed AF frames in the viewfinder.	When a subject is focused, the AF frame used for focusing normally lights red in the viewfinder. Setting this custom function stops this from happening.
CF11:	Adds a depth-of-field check function to the AE lock button.	Setting this function lets you use the AE lock button to check the depth of field after the subject is focused and exposure is set. This custom function cannot be used together with CF4.
CF12:	Enables shooting with the mirror locked up.	When the shutter button is pressed completely in self-timer mode, the mirror moves up immediately and the picture is taken two seconds later.
CF13:	Cancels the metering timer function. · Except in DEP mode.	Setting this function cancels the timer which continues metering for six seconds after your finger is removed from the shutter button, thus saving battery power.
CF14:	Changes the sync timing of the built-in flash from first curtain sync to second curtain sync.	Flash firing synchronizes with the travel of the second shutter curtain, providing a more natural effect when using slow shutter speeds.
CF15:	Links spot metering to the selected AF frame (only when the AF frame is selected using the manual focusing point selection function).	Setting this function lets you carry out spot metering at the same point as the selected AF frame, eliminating the need to change the scene composition during metering.
CF16:	Cancels automatic flash reduction control.	Setting this function cancels the automatic flash reduction control which normally operates with backlit subjects, thus preventing the underexposure which can occur with subjects backlit by a strong light source such as the afternoon sun.






• If both CF4 and CF6 are set, only CF4 is used. • If both CF4 and CF11 are set, only CF4 is used.

• Custom function settings operate only in creative zone.  
• When CF12 has been selected, please do not point the camera towards the sunlight. (Scorching of the shutter blades can result.)

## 1. Exposure Warnings

Shooting mode	Blinking display warning	Meaning	Corrective action	
P (Program AE)	 3.5	Shutter speed 30" and maximum aperture of the lens in use.	Subject is too dark.	Use flash.
	 2.2	Shutter speed 8000 and minimum aperture of the lens in use.	Subject is too bright.	Use an ND filter.
Tv (Shutter-priority AE)	 3.5	Maximum aperture of the lens in use.	Subject will be underexposed.	Turn the main dial to a slower shutter speed.
	 2.2	Minimum aperture of the lens in use.	Subject will be overexposed.	Turn the main dial to a faster shutter speed.
Av (Aperture-priority AE)	 8.0	Shutter speed 30".	Subject will be underexposed.	Turn the main dial to a larger aperture.
	 8.0	Shutter speed 8000.	Subject will be overexposed.	Turn the main dial to a smaller aperture.
DEP (Depth-of-field AE)	 5.6	Calculated aperture value.	Desired depth of field cannot be obtained.	1) Move farther away from the subject and set the near and far points again. 2) When using a zoom lens, set to the wide-angle position.
	 3.5	Shutter speed 30" and maximum aperture of the lens in use.	Subject is too dark.	Use flash. (Same result as using Program AE.)
	 2.2	Shutter speed 8000 and minimum aperture of the lens in use.	Subject is too bright.	Use an ND filter.


## Exposure Warnings When Using Flash

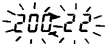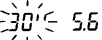Shooting mode	Blinking display warning	Meaning	Corrective action	
P (Program AE)	 200 2.2	When using daylight fill-in flash, shutter speed 200 and minimum aperture of the lens in use.	Overall image will be overexposed.	Do not use flash.
Tv (Shutter-priority AE)	 200 2.2	Minimum aperture of the lens in use.	Overall image will be overexposed.	Do not use flash.
	 200 3.5	Maximum aperture of the lens in use.	Background will be underexposed.	Subject will be properly exposed.
Av (Aperture-priority AE)	 200 5.6	Shutter speed 200.	Overall image will be overexposed.	Turn the main dial to a smaller aperture.
	 30 5.6	Shutter speed 30".	Background will be underexposed.	Turn the main dial to a larger aperture.

## 2. Program Line Characteristics


This camera is equipped with advanced “Intelligent Program AE” which chooses the best shutter speed/aperture combinations taking the lens’ focal length and minimum and maximum apertures into account. The following graphs show the program lines for a typical lens.

### Program Characteristics

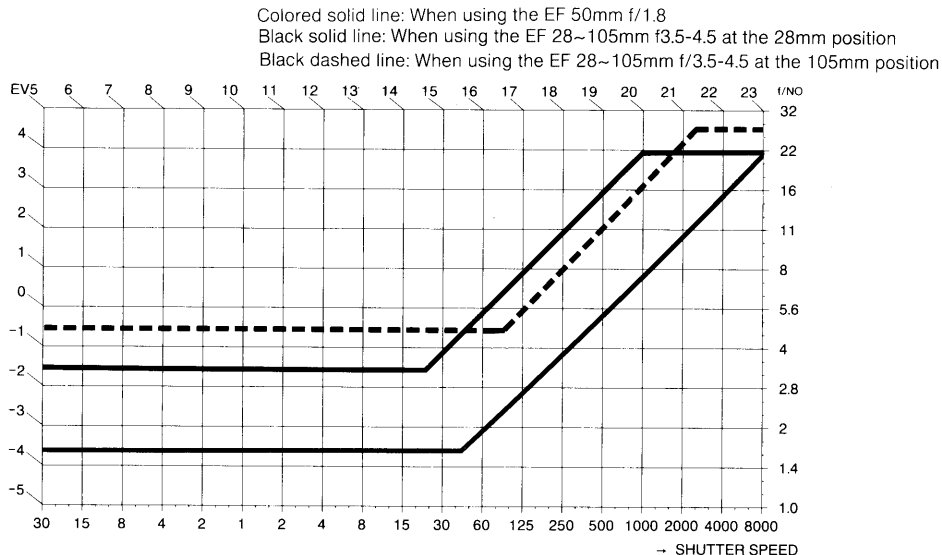

## Program Shift Characteristics

\* ● indicates the shutter speed/aperture combinations with program shift.

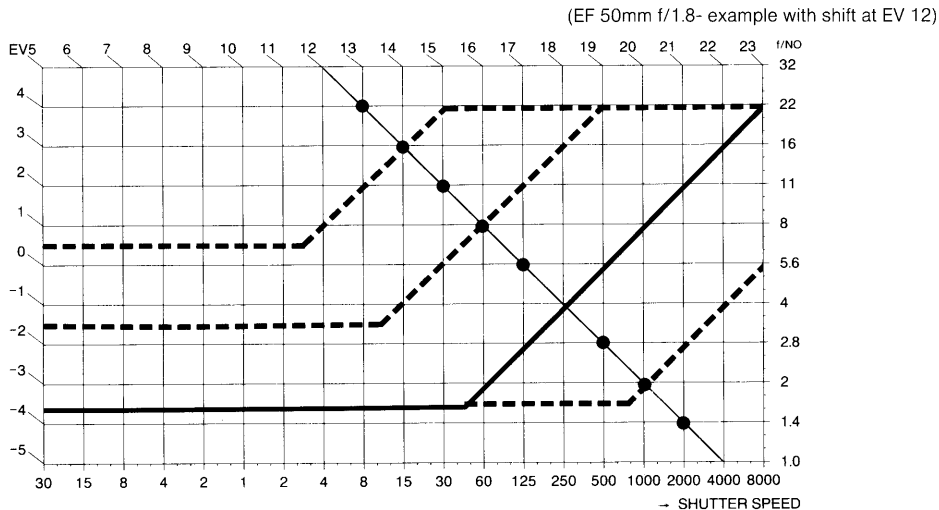

### 3. Function Combination Charts

#### Image Zone Mode Function Combinations

Shooting mode	AF mode			AF focusing point selection		Film winding mode		Metering mode	Built-in flash	
	One-shot	AI Focus	AI Servo	Auto-matic	Eye Controlled Focus	Single	Continuous	Evaluative	Auto-firing	OFF
(Full Auto)		●		●		●		●	●	
(Portrait)	●			●	●		●	●	●	
(Landscape)	●			●	●	●		●		●
(Close-up)	●			●	●	●		●	●	
(Sports)			●	●	●		●	●		●

#### AF and Film Winding Modes


Film winding mode	AF mode	One-shot	AI Servo
(Single)		AF lock and AE lock take place simultaneously on AF completion. The shutter releases only after AF completion.	AF follows the subject and the exposure is determined at the instant of shutter release.
(Continuous)		AF lock and AE lock take place simultaneously on AF completion, then continuous exposure is activated. (Approx. 3 fps maximum.)	AF follows the subject and the exposure is determined at the instant of shutter release. AF is adjusted during the exposure sequence to follow the subject. (Approx. 3 fps maximum.)
(High-speed continuous)		Same as above. (Approx. 5 fps maximum.)	Same as above. (Approx. 3 fps maximum.)

## VIII Accessories

The accessories described in this section are sold separately.

### **Vertical Grip (VG10)**

This dedicated grip is equipped with a shutter button, AE lock button, main dial, AF focusing point selection button and handstrap (optional) optimally positioned for operation when holding the camera vertically.

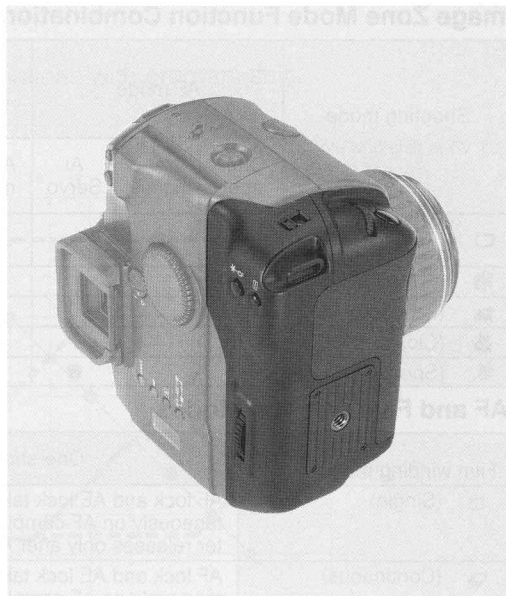



## Speedlite 430EZ

This professional flash unit is designed with advanced features and a powerful guide number of 141-ft/43-meters (at ISO 100). Three types of external battery packs are available for situations requiring extended flash shooting. The 430EZ utilizes A-TTL program control for easy handling of a wide variety of photo situations and fill-in flash. A built-in flash exposure compensation function lets you adjust the flash output independently from the camera for total lighting control. Other features include stroboscopic flash which can fire the flash up to 10 times per second, second curtain sync for a natural flowing effect with slow-shutter flash shots, slow synchronization and bounce flash.



## Focusing Screens

Six interchangeable focusing screens are available to suit various applications. Each comes with a special tool for simple installation.

\* This camera is originally equipped with the Standard Matte Screen.

(1) Standard Matte Screen (Ed-Ne)




Used for general shooting with all lenses.

(2) Screen with Focusing Sensor Marks (Ed-O)




Used for general shooting with all lenses. Contains marks corresponding to the shape of the focusing sensors.

(3) Matte Screen with Grid (Ed-D)

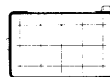

Used for general shooting with all lenses. Contains grid lines for aiding composition. Useful for copying work using macro lenses.

(4) Matte Screen with Scale (Ed-H)

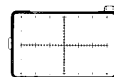

Used for close-up shooting, enlarging and micro-photography. Scales provided at the center and edges are useful for determining composition and magnification. Usable with all lenses.

(5) All Matte Screen (Ed-C)



Used for general shooting with all lenses.

The surface of each focusing screen is processed with an extremely high-precision finish. Do not touch the screen with your fingers. When exchanging screens, use the special tool provided with the screen. For details, read the instructions supplied with the screen.


## Cases

Keep the camera in its case to protect it while carrying.

Canon offers two special semi-hard cases designed for use with this camera.

Semi-hard Case L (EH7-L): For camera body and EF 35~80mm f/4.5-5.6U or EF 35~105mm f/4.5-5.6U zoom lens.

Semi-hard Case LL (EH7-LL): For camera body and EF 28~105mm f/3.5-4.5U, EF 28~80mm f/3.5-5.6U or EF 35~135mm f/4-5.6U zoom lens.

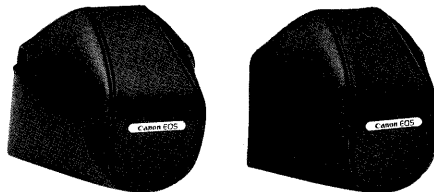


## Dioptric Adjustment Lenses

Attaching a Dioptric Adjustment Lens E to the viewfinder eyepiece makes viewing and focusing easier without glasses for near- and far-sighted users. The built-in viewfinder eyepiece has a power of -1 diopter, and ten eyesight correction lenses are available for adjustment from +3 to -4 diopters. Choose the one which is closest to your eyeglass prescription. We recommend that you actually try the lens before purchasing to make sure you get the one which is best for your eyesight. A special adapter (sold separately: RUBBER FRAME Ed) is necessary for attachment to this camera.

- The Eye Controlled Focus Function can be used with the naked eye, but not when wearing glasses at the same time as using an eyesight compensation lens.


## Eye Cup (Ed-E)

When attached to the camera viewfinder, the Eye Cup Ed-E keeps out sunlight, or strong light from other sources, improving viewfinder visibility and the accuracy of the Eye Controlled Focus Feature.

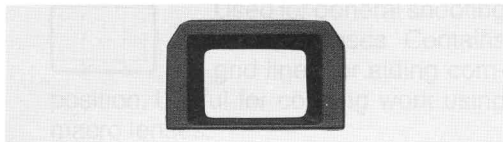

## Remote Switch 60T3

This switch connects to the camera's 3-pin remote control socket and allows you to take pictures by pressing the remote switch instead of the camera's shutter button. This is useful for situations where camera shake is likely to occur, such as during close-up photography or when using a super-telephoto lens. Combine with the Extension Cord 1000T3 (extension length: 10 meters/33 feet, sold separately) for taking pictures at a distance from the camera.

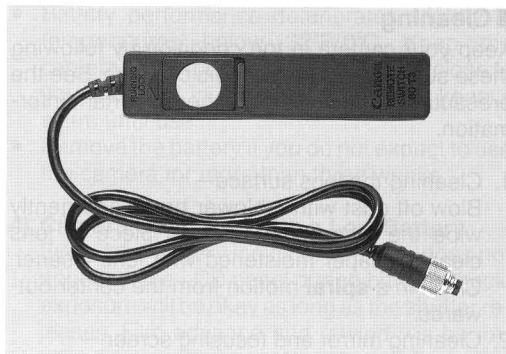

## Angle Finder B

The Angle Finder B makes viewing easier for many scientific, copying and close-up photography applications. A special adapter (sold separately: ADAPTER Ed) is necessary for attachment to this camera.

## ■ Cleaning

Keep your camera in top condition by following these suggestions for periodic cleaning. See the precautions on page 7 for other important information.

1. Cleaning the lens surface—  
Blow off dust with a blower brush and gently wipe the lens surface with a piece of lens cleaning paper moistened with lens cleaner. Clean in a **spiral** motion from the center outwards.
  2. Cleaning mirror and focusing screen—  
**Use a blower brush reserved for this purpose only.** If more cleaning is necessary do not attempt to do it yourself. Take the camera to an authorized Canon service facility.
  3. Cleaning the film chamber—  
Use a blower brush to remove accumulated film dust particles that might scratch the film. Be careful not to touch the shutter curtain.
  4. Cleaning the film pressure plate and film guide rails  
Lightly wipe the surface with a piece of lens cleaning paper moistened with lens cleaning fluid. Be careful not to touch the shutter curtain.
- \* Use of aerosol spray dust removers is not recommended.

## ■ Liquid Crystal Display/Battery Notes

### 1) LCD Information

The LCD panel uses liquid crystal to show exposure information. After about five years, the display may become difficult to read. If this occurs, have it replaced at an authorized Canon service facility. Replacement is at the owner's expense. Liquid crystal may also respond relatively slowly in temperatures below 32°F/0°C. It may also darken in temperatures of around 140°F/60°C. The LCD panel will return when the temperature returns to normal.

### 2) Blinking Empty Battery Indicator

There are two situations in which the blinking empty battery indicator will appear in the LCD panel: (1) when the battery is nearly exhausted or (2) when the camera's self-test process detects an internal malfunction. If the blinking empty battery indicator appears, perform the following operations:

1. Remove the battery, wipe the battery terminals and reload it. Check the battery again. If the blinking still appears, replace the battery with a new one.

2. Release the shutter once.  
If the battery indicator stops blinking, the problem is corrected and you can continue using the camera normally. If the blinking does not stop, the camera needs to be examined by an authorized Canon service facility.

### **3) Lithium Battery Information**

Always check the battery at the following times:

1. When loading a new battery
2. After lengthy storage
3. If the shutter will not release
4. In cold weather
5. Before an important shooting assignment

### **Battery Use Information**

- Wipe the battery terminals with a clean, dry cloth to ensure proper contact.
- The battery may explode or cause burns if disassembled, recharged, shorted, exposed to high temperatures, or disposed of in fire. Be sure to observe all precautions indicated on the battery package. Always keep it out of the reach of children.

- Battery performance deteriorates slightly in temperatures below 32°F/0°C. Keep the camera and especially a spare battery close to your body or in an inside pocket to keep it warm until use.
- Remove the battery if you do not expect to use the camera for more than three weeks.

### **4) Camera Operation with a Low Battery**

Even if the battery indicator blinks or does not appear in the LCD panel during battery check, exposure will be okay as long as the shutter releases. Film advance and rewind will be impaired by insufficient battery power. If winding or rewinding stops due to the battery, the film cartridge symbol will blink. Film transport resumes after a new battery is loaded and the film rewind button pressed.

# Specifications

## TYPE AND MAJOR COMPONENTS

**Type:** 35mm focal plane shutter SLR (single-lens reflex) camera with autofocus, auto exposure, built-in flash and built-in motor drive.

**Lens Mount:** Canon EF mount (electronic signal transfer system)

**Usable Lenses:** Canon EF lenses

**Viewfinder:** Fixed eye-level pentaprism. Gives 92% vertical and 94% horizontal coverage of actual picture area and 0.73x magnification with 50mm lens at infinity.

**LCD Panel:** Displays necessary information including frame counter, AF mode, film winding mode, metering mode, shutter speed, aperture value, film speed, battery condition and exposure compensation.

**Dioptic Adjustment:** Built-in eyepiece is adjusted to -1 diopter (eyepoint: 20 mm).

**Focusing Screen:** Interchangeable, overall matte screen with AF frames.

**Shutter:** Vertical-travel, focal plane shutter with all speeds electronically controlled.

**Shutter Speed:** 1/8000 ~ 30 sec. and bulb.

**Maximum X-sync speed:** 1/200 sec.

## AUTOFOCUS

**AF Control System:** TTL-SIR (Secondary Image Registration) phase detection type using Cross-type BASIS (Base-Stored Image Sensor).

**Two autofocus modes available:** One-shot AF and AI Servo AF. Manual focusing also possible.

**Focusing Point:** Five focusing points provided. Focusing point set automatically by camera, manually by user, or by user eye control.

**AF Working Range:** EV 0 ~ 18 at ISO 100.

**AF Auxiliary Light:** Automatically projected when necessary. Operation linked to focusing points.

## EXPOSURE CONTROL

**Light Metering:** TTL full-aperture metering using a 16-zone SPC (silicon photocell). Three metering modes available: evaluative metering, spot metering (covers approx. 3.5% of the central picture area) and center-weighted average metering.

**Metering Range:** EV 0 to 20 with 50mm f/1.4 lens at ISO 100 (normal temperature).

### Shooting Modes:

1. Program AE
2. Shutter-priority AE
3. Aperture-priority AE
4. Depth-of-field AE
5. Full Auto
6. Programmed Image Control (Portrait, Landscape, Close-up, Sports)
7. Flash AE (A-TTL or TTL program flash AE with built-in flash or dedicated speedlite)
8. X (Flash sync mode)
9. Manual exposure

**Camera Shake Warning:** Operates in Full Auto and Programmed Image Control modes. Beeper beeps at 2 Hz when automatically-set shutter speed becomes 0 to 0.5 stops slower than "1/focal length of the lens in use."

**Multiple Exposures:** Up to nine exposures can be preset.

**Exposure Compensation:**  $\pm 2$  stops in 1/2-stop increments.

**Auto Exposure Bracketing:**  $\pm 2$  stops in 1/2-stop increments.

**Three continuous exposures are taken in sequence:** one at the standard metered value, one under, and one over.

### FILM TRANSPORT

**Film Speed Setting:** Automatically set according to DX code (ISO 25-5000) or set by user (ISO 6-6400).

**Film Loading:** Automatic. Film automatically advances to first frame when back cover is closed.



**Film Wind:** Automatic using dedicated miniature motor.

**Three modes are available:** single exposure, continuous exposure (3 fps maximum) and high-speed continuous exposure (5 fps maximum).

**Film Rewind:** Automatic rewind at end of roll using dedicated miniature motor.

#### OTHER

**Self-timer:** Electronically controlled with 10-second delay.

**Custom Function Control:** Sixteen built-in custom functions selectable by user.

#### POWER SOURCE

**Battery:** One six-volt lithium battery (2CR5).

**Battery Check:** Battery automatically checked when command dial moved to position other than "L". Battery condition indicator displayed on LCD panel.

#### SIZE

**Dimensions:** 154 (W) × 120.5 (H) × 74.2 (D) mm

**Weight:** 665/675 gr (QD model), without battery (body only)

#### BUILT-IN FLASH

**Type:** Retractable type TTL automatic zoom flash housed in pentaprism. Bypass control system.

**Guide Number (ISO 100, m):** 13 (28mm) to 17 (80mm)

**Flash Coverage Angle:** Automatically zooms to cover the field of view of 28mm, 50mm and 80mm focal lengths.

**Recycling Time:** Approx. 2 sec.

**Firing Conditions:** Fires automatically in low-light or backlit conditions in Full Auto and some Programmed Image Control modes.

**Flash Control Aperture:** Automatically set by TTL program in program modes. Manually set by user in aperture-priority AE, manual exposure and X modes. Automatically set according to ambient light conditions and manually-set shutter speed in shutter-priority AE mode.

**X-sync Shutter Speed:** Automatically set to 1/60~1/200 sec in program modes according to TTL flash AE program. Automatically set to 30~1/200 sec in aperture-priority AE mode according to ambient light conditions. Manually set to 1/200 sec or slower in shutter-priority AE and manual exposure modes. Manually set to 1/60, 1/90, 1/125 or 1/200 sec in X mode.

**Flash Contacts:** X-sync contact. Directly coupled contacts provided on accessory shoe.

#### DATE FUNCTION (QD model only)

**Type:** Built-in date/time imprinting function using dot LED with automatic calendar programmed with dates to 2019 (compensates for long and short months and leap years). Date/time information displayed on dedicated LCD panel.

**Date Imprint Formats:** ①Year/Month/Day, ②Day/Hour/Minute, ③No imprint, ④Month/Day/Year, ⑤Day/Month/Year

**Imprint Color:** Orange

**Clock Precision:** Variation of ±90 sec or less per month at normal temperature (20°C/68°F).

**Power Source:** One dedicated 3V lithium battery (CR2025); Battery life: approx. 3 years.

All data based on Canon's Standard Test Method. Subject to change without notice.

# Nomenclature

