
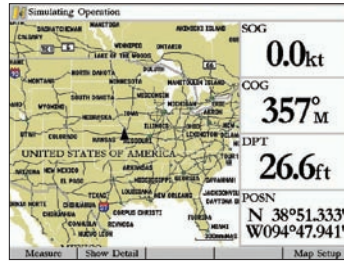
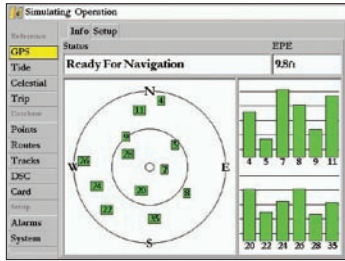


GPSMAP 3005C Quick Reference

START UP SEQUENCE

POWER OFF

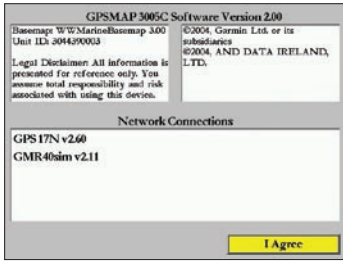


To turn off the GPSMAP 3005C:
Press and hold the **POWER** key for approximately two seconds.

If one MFD is connected, the unit shuts down. If multiple MFDs are connected, a prompt appears. Select **Yes** to shut down the entire network, or select **No** to put the unit in sleep mode.


To turn on the GPSMAP 3005C:

1. Press and hold the **POWER** key.
2. Press **ENTER** to acknowledge the Introduction page.
3. To view the GPS status, press and hold **ADJ/MENU** for two seconds, and highlight the **GPS** tab on the Main Menu using the **ROCKER**.
4. Press **QUIT** to return to the Map page.


MAIN PAGE SEQUENCE

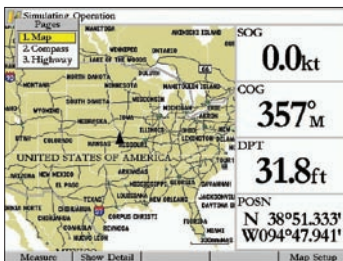

Map Page

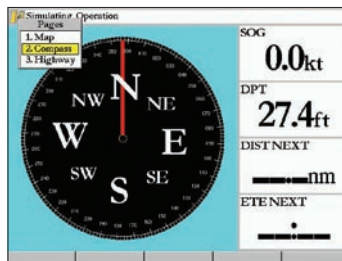


Compass Page

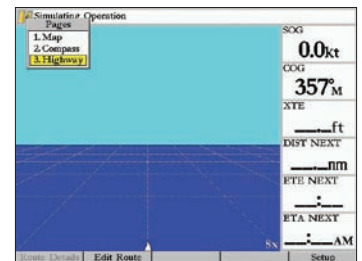

Highway Page


Additional Main pages appear as you add optional hardware to the Garmin Marine Network.

SELECTING FUNCTIONS

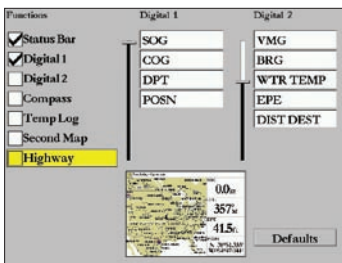

To add/remove functions for a Main page:

1. Press and hold **DATA/CNFG** for two seconds to access the Configuration page.
2. Using the **ROCKER**, highlight the Function you want to add or remove, and press **ENTER**.

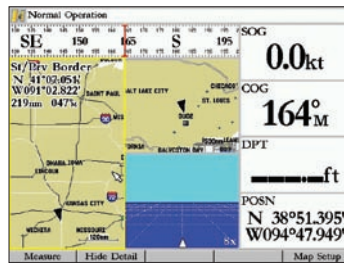

To cycle through available functions:



Press **FCTN** to highlight the next available function on the split screen.

FUNCTION ADJUSTMENTS



To display adjustment options:
Press the **ADJ** key.



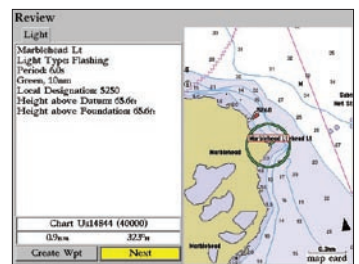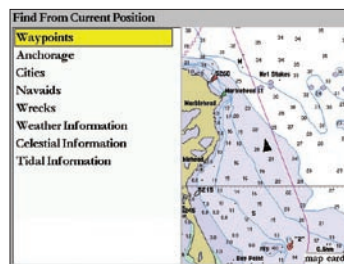









FIND




To Find an item:

1. Press **FIND** to display the Find From Current Position page.
2. Use the **ROCKER** to highlight a category, and press **ENTER**.
3. Use the **ROCKER** to highlight the item for which you want to see more details, and press **ENTER**.

KEYPAD USAGE

	POWER/BACKLIGHT —press and hold for two seconds to turn the unit on or off; press and release to control the screen backlighting.
	RANGE —Up (increases) Down (decreases) the range of the Map, Highway, and other range-related functions.
	ROCKER —controls the movement of the pointer, selects options and positions, and enters data.
	PAGE —scrolls the main pages in sequence and returns display from a submenu page to a main page.
	QUIT —restores a data field's previous value, and exits out of menus.
	ENTER —activates highlighted fields and confirms menu options and data entry. MARK —press and hold for two seconds to capture your present location and display the Review Waypoint page.
	ADJ —shows the available options and features for the current function. MENU —press and hold for more than one second to display the Main Menu.
	NAV —press and release to activate the navigation options, allowing you to navigate using a waypoint, route, or track. MOB (Man OverBoard)—press and hold to mark your present location and instantly set a return course.
	DATA —toggles the display of a Main page with or without function windows and data fields. CNFG —press and hold to display the Configuration page, which allows you to customize the current main page.
	FCTN (Function)—cycles through available function windows.
	FIND —activates the Find options, allowing a search for user points, map items, and any optional data card information.
	SOFT KEYS —used as shortcuts to select the most commonly used adjustments for a selected function. Soft Key options vary depending on the function selected.


DATA ENTRY

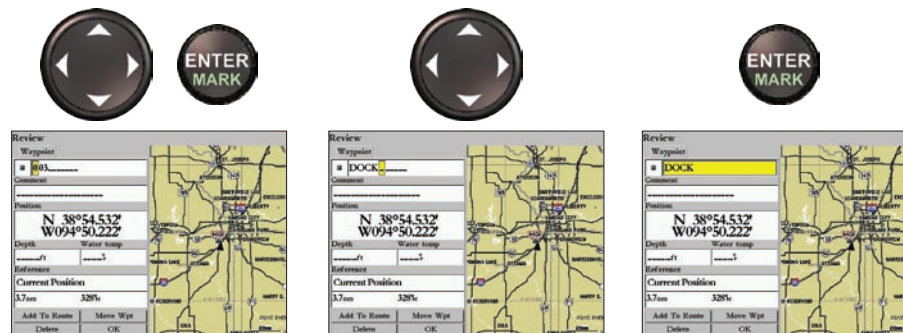

To enter data:

1. Highlight a field using the **ROCKER**.
2. Press **ENTER** to access the field.
3. Use the **ROCKER** to select alphanumeric characters. You can change data in fields such as symbol, name, comment, coordinates, depth, and temperature when marking a waypoint.
4. Press **ENTER** to confirm.


BACKLIGHT

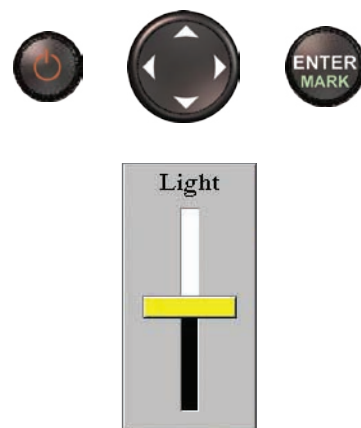

To adjust the backlight level:

1. Press and release the **POWER** key.
2. Press Up or Down the **ROCKER** to adjust the backlight level.
3. Press **ENTER** to accept.


MOB

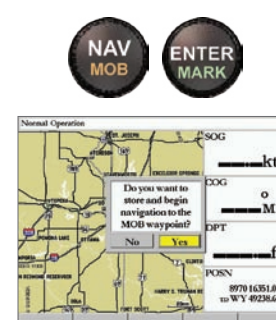

To navigate to an MOB:

1. Press and hold **NAV/MOB** to activate the MOB waypoint.
2. To store the MOB waypoint and begin navigation to that point, highlight **Yes**, and press **ENTER**.
3. To stop MOB navigation, press **NAV/MOB**, highlight **Stop Navigation**, and press **ENTER**.

NAVIGATION

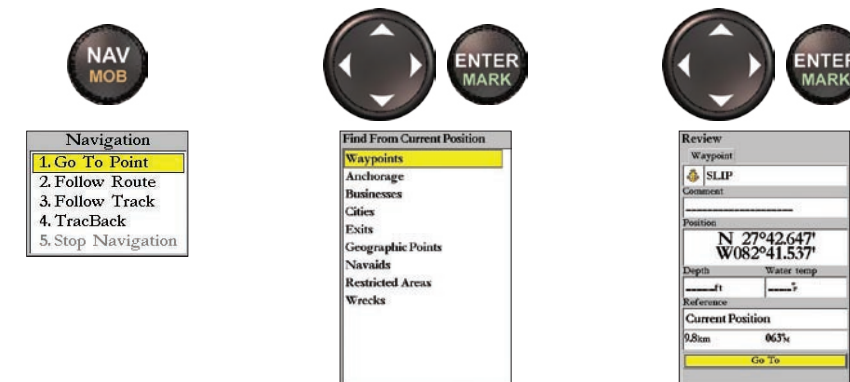

To use the NAV key:

1. Press **NAV** to activate the navigation selections.
2. Using the **ROCKER**, select **Go To Point**, **Follow Route**, **Follow Track**, or **TracBack**, and press **ENTER**.
3. Select the point, track, or route from the list, and press **ENTER**.
4. If you selected a point, highlight **Go To**, and then press **ENTER** again. If you selected a route or saved track, choose from the selections, and press **ENTER** to begin navigation.

MARKING WAYPOINTS



To mark a waypoint:

1. To capture your present location, press and hold **ENTER/MARK** to display the Review Waypoint page.
2. Press **ENTER** to save the waypoint.

To graphically mark a waypoint:

1. Move the pointer to the map location.
2. Press and release **ENTER/MARK** to display the Review Waypoint page.
3. With **OK** highlighted, press **ENTER** to save the waypoint.