



Signal Extractor Tool

[Online Help](#)



Agilent Technologies

Notices

© Agilent Technologies, Inc. 2001-2007

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Agilent Technologies, Inc. as governed by United States and international copyright laws.

Trademarks

Microsoft®, MS-DOS®, Windows®, Windows 2000®, and Windows XP® are U.S. registered trademarks of Microsoft Corporation.

Adobe®, Acrobat®, and the Acrobat Logo® are trademarks of Adobe Systems Incorporated.

Manual Part Number

Version 03.67.0000

Edition

July 15, 2007

Available in electronic format only

Agilent Technologies, Inc.
1900 Garden of the Gods Road
Colorado Springs, CO 80907 USA

Warranty

The material contained in this document is provided “as is,” and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as “Commercial computer software” as defined in DFAR 252.227-7014 (June 1995), or as a “commercial item” as defined in FAR 2.101(a) or as “Restricted computer software” as defined in FAR 52.227-19 (June 1987) or any equivalent

agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies’ standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Safety Notices

CAUTION

A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING

A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

Using the Signal Extractor Tool

The Signal Extractor is a simple tool that lets you extract signals or data from one input bus/signal and output the extracted data onto new buses/signals. In particular, it is suited to:

- Extract I and Q data (see [page 7](#)) from simple serial protocols.
- Remultiplex high-speed digital data (see [page 11](#)) that has been demultiplexed onto additional logic analyzer channels (because of the high state speeds).

Once you add a Signal Extractor tool, its properties dialog opens to let you:

- Select the input bus/signal.
- Load an XML format extractor algorithm file.

The extractor algorithm file defines output buses/signals and specifies how data should be extracted by identifying patterns and listing the commands to execute when those patterns are found.

- **Signal Extractor Capabilities** (see [page 13](#))
- **How the Signal Extractor Tool Works** (see [page 15](#))
- **Adding a Signal Extractor Tool** (see [page 17](#))
- **Creating Extractor Algorithms** (see [page 19](#))
- **Signal Extractor Tool Properties Dialog** (see [page 39](#))
- **Signal Extractor Tool Control, COM Automation** (see [page 41](#))
- **Signal Extractor Tool Setup, XML Format** (see [page 43](#))

Contents

Using the Signal Extractor Tool 3

1 Example: Extracting I and Q Signals

2 Example: Remultiplex Data

3 Signal Extractor Capabilities

4 How the Signal Extractor Tool Works

5 Adding a Signal Extractor Tool

6 Creating Extractor Algorithms

Extractor Algorithm XML Format 25

<ExtractorCmd> Element 26

<ExtractorCmds> Element 31

<ExtractorFolder> Element 32

<ExtractorGrammar> Element 32

<ExtractorLabel> Element 34

<ExtractorLabels> Element 34

<ExtractorPattern> Element 35

<ExtractorPatterns> Element 35

<ExtractorSequence> Element 35

<ExtractorSequences> Element 37

7 Signal Extractor Tool Properties Dialog

8 Signal Extractor Tool Control, COM Automation

9 Signal Extractor Tool Setup, XML Format

<Setup> Element 44

Index

1

Example: Extracting I and Q Signals

Here we are extracting the I and Q signals from a simple serial stream, serial protocol, or from a parallel bus.

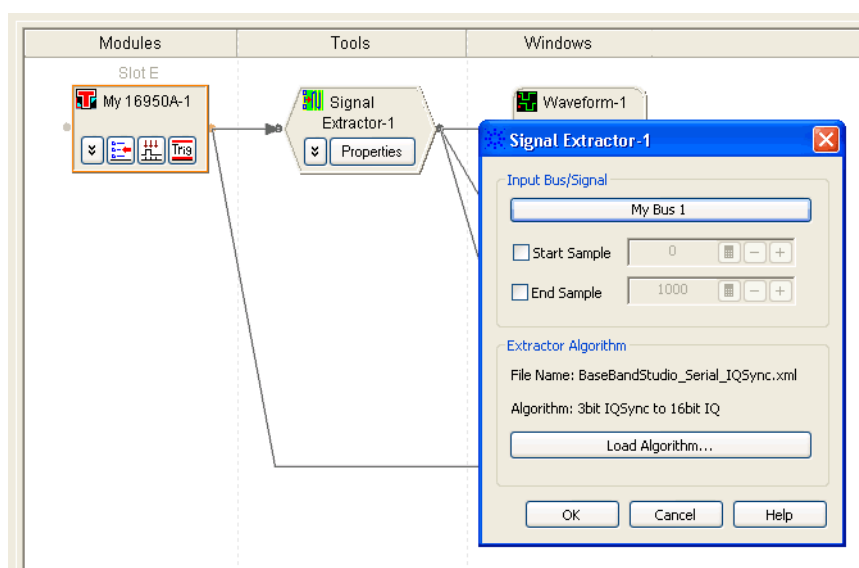


Figure 1 Signal Extractor Properties

The I and Q signals (in this example 16-bit wide buses) can then be viewed with other logic analyzer tools.



1 Example: Extracting I and Q Signals

Sample Number	Sync/andQ	Extractor-1:Sample Number	Idata	Qdata	Time
1	011				40 ns
2	001				80 ns
3	010				120 ns
4	001				160 ns
5	000				200 ns
6	000				240 ns
7	010				280 ns
8	010				320 ns
9	011				360 ns
10	011				400 ns
11	001				440 ns
12	010				480 ns
13	000				520 ns
14	001				560 ns
15	000	0	6872	D1E8	600 ns
16	110				640 ns
17	001				680 ns
18	010				720 ns
19	000				760 ns
20	011				800 ns
21	011				840 ns
22	001				880 ns
23	010				920 ns
24	001				960 ns
25	011				1.000 us
26	010				1.040 us
27	011				1.080 us
28	001				1.120 us
29	011				1.160 us
30	000				1.200 us
31	000	1	4EDC	AD74	1.240 us

Figure 2 Signal extraction of 16-bit serial I and Q

For example, you can view the bus data as a chart in the Waveform display window.

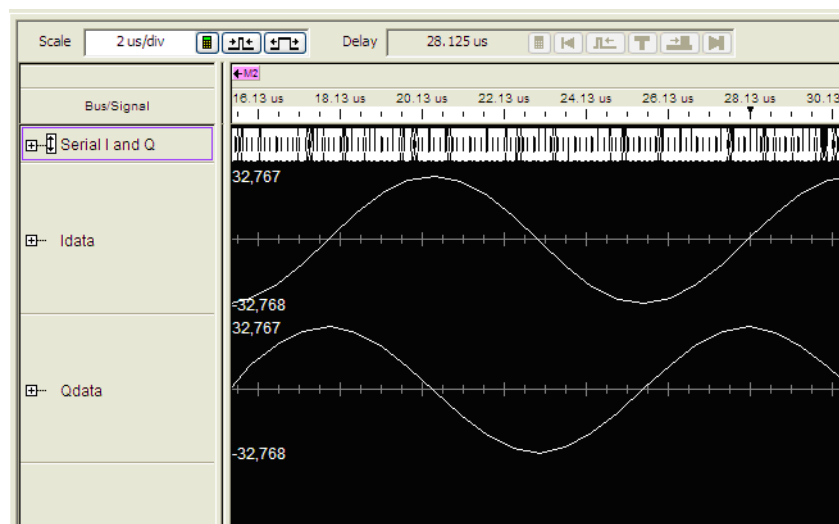


Figure 3 Second view of the extracted I and Q signals using chart

The I and Q samples can then be further processed to determine error vector magnitude (EVM) and a variety of other communications type measurements.

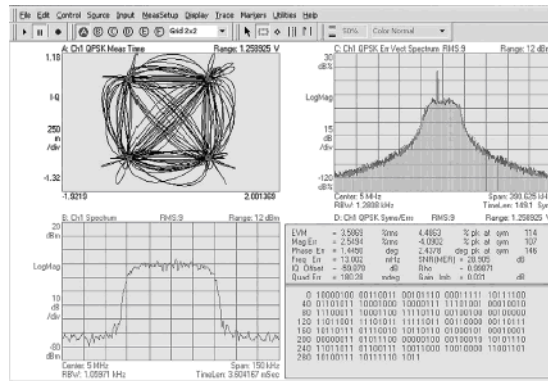


Figure 4 Agilent 89601A vector signal analysis software

1 Example: Extracting I and Q Signals

2 Example: Remultiplex Data

-1:Sample Number	Muxed Input	Time	-1:Sample Number	A-to-D
-9	42CA 42CA 42CA 42CA	-22.5 ns		
-8	42CB 42CB 42CB 42CB	-20.0 ns		
-7	42CC 42CC 42CC 42CC	-17.5 ns		
-6	42CD 42CD 42CD 42CD	-15.0 ns		
-5	42CE 42CE 42CE 42CE	-12.5 ns		
-4	42CF 42CF 42CF 42CF	-10.0 ns		
-3	42D0 42D0 42D0 42D0	-7.5 ns		
-2	42D1 42D1 42D1 42D1	-5.0 ns		
-1	42D2 42D2 42D2 42D2	-2.5 ns		
0	42D3 42D3 42D3 42D3	0 s	0	42D3
		600 ps	1	42D3
		1.3 ns	2	42D3
		1.9 ns	3	42D3
1	42D4 42D4 42D4 42D4	2.5 ns	4	42D4
		3.1 ns	5	42D4
		3.8 ns	6	42D4
		4.4 ns	7	42D4
2	42D5 42D5 42D5 42D5	5.0 ns	8	42D5
		5.6 ns	9	42D5
		6.3 ns	10	42D5
		6.9 ns	11	42D5
3	42D6 42D6 42D6 42D6	7.5 ns	12	42D6
		8.1 ns	13	42D6
		8.8 ns	14	42D6
		9.4 ns	15	42D6
4	42D7 42D7 42D7 42D7	10.0 ns	16	42D7
		10.6 ns	17	42D7
		11.3 ns	18	42D7
		11.9 ns	19	42D7
5	42D8 42D8 42D8 42D8	12.5 ns	20	42D8
		13.1 ns	21	42D8
		13.8 ns	22	42D8
		14.4 ns	23	42D8

Figure 5 Signal Extractor doing remultiplex starting at sample 0



2 Example: Remultiplex Data

3 Signal Extractor Capabilities

To understand the capabilities of the Signal Extractor consider these scenarios:

- You have a 4-bit wide serial bus with the following signals: 1-bit I value, 1-bit Q value, 1-bit sync signal, and 1-bit clock signal. The I and Q signals are each 16-bits long, in a serial manner, with the most significant bit of each I and Q 16-bit value coming on the occurrence of a sync signal.

The Signal Extractor can look for the occurrence of the sync signal and then extract the serial I and serial Q values and write them as a pair of standard 16-bit wide I and Q values.

- You have a 2-bit wide serial bus with the following signals: 1-bit wide protocol encoded I and Q values, and 1-bit clock. Assume the packet header for I and Q values is a constant pattern followed by 4 pairs of 12-bit long I and Q values.

The Signal Extractor can extract the 4 I and Q values and assign them to new buses. Again, the serial version of the I and Q values will be translated to pair of standard 12-bit wide I and Q values.

- You have a 48-bit wide bus with the following signals: 4x12 bits of A-to-D conversion. Each of the 12-bits is a high-speed sample of a 3.2 GHz A-to-D converter. The A-to-D converter is running at 3.2 MHz or 312 ps per sample. The signals are multiplexed out in groups of 4x12-bits and latched so that the logic analyzer can capture the A-to-D output at a rate of only 800 MHz or 1.25 ns per four samples.

The Signal Extractor can remultiplex the A-to-D signal back to the original 12-bit wide signal.





4

How the Signal Extractor Tool Works

The Signal Extractor tool operates on one input bus/signal (which can be 1 to 128 bits wide). It operates on all data captured on that bus/signal unless starting and ending samples are specified.

The Signal Extractor tool extracts data from the input bus/signal using an algorithm that defines output buses/signals and specifies how data should be extracted. The extraction algorithm is based upon a series of ASCII, XML-format commands defined in a single algorithm file. You can create your own extraction algorithms or customize existing extraction algorithms. The extraction algorithm is based on a "find pattern then execute commands" model.

The Signal Extractor runs by looking for matching patterns from 1 to 128 bits in sequence. When a pattern is found, Signal Extractor commands are executed to extract out the specified signals. When the end of the extractor commands is reached, the Signal Extractor repeats the cycle by looking for matching patterns again from the beginning of the list.

The Signal Extractor tool runs every time new data is received, and it runs completely through the entire data input and outputs a complete set of extracted data.

Up to a total of 8 buses/signals (or columns of data) can be extracted from a single bus/signal. The eight output buses/signals are actually split into 2 groups of four buses/signals each. These sets of four buses/signals each have their own time base and sample count. For example, you can extract I and Q data as a pair of buses/signals with one time base and sample count. Frame start markers and perhaps control commands can be extracted into the second set of buses/signals with a second time base and second sample count.




4 How the Signal Extractor Tool Works


5 Adding a Signal Extractor Tool

This procedure assumes that a bus or signal that has data to be extracted has already been defined in the logic analyzer module (see "Defining Buses and Signals" (in the online help)).

- 1 From the main menu, choose **Tools>New Signal Extractor...**

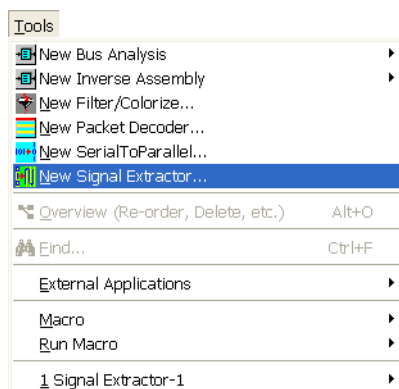

Or, in the Overview window, from a logic analyzer module's drop-down menu, choose **New Tool>Signal Extractor...**

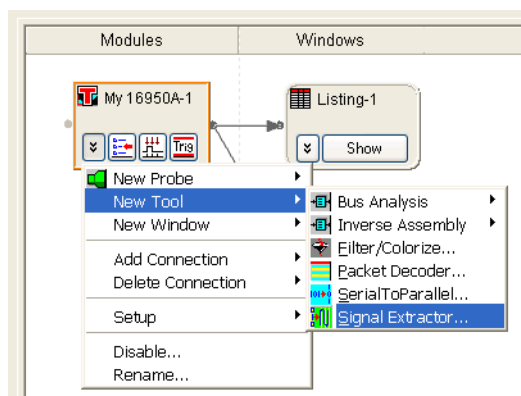

- 2 In the Signal Extractor dialog (see [page 39](#)), set up the tool properties:

- a In the **Input Bus/Signal** box, click the bus button and select the name of the bus/signal that you want to extract data from.

You can extract signals from one input bus or signal (1 to 128 bits wide).

If your logic analyzer has a large memory depth and you want to reduce the number of samples that are processed (and speed up the processing of data), specify the **Start Sample** and **End Sample** of the data you want to process.


- b In the **Extractor Algorithm** box, click **Load Algorithm...** and select the extractor algorithm file (see [Creating Extractor Algorithms](#) (see [page 19](#))); then, click **Open**.

Example extractor algorithms have been included. You can find them under "Documents and Settings" for "All Users". For example, the default location is:

C:\Documents and Settings\All Users\Shared Documents\Agilent Technologies\Logic Analyzer\Extractor Algorithms

- 3 Click **OK** to close the Signal Extractor dialog and perform the extraction.

In the Overview window, the tool connection will look something like:

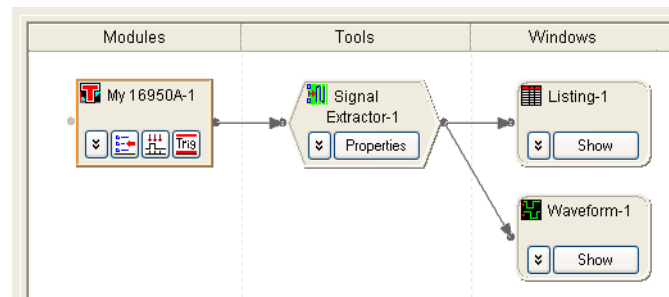

See Also • [Creating Extractor Algorithms](#) (see [page 19](#))



6 Creating Extractor Algorithms

A typical extraction algorithm file has this format:

- Algorithm name.
- Output bus/signal definitions.
- Signal Extractor patterns.
- Signal Extractor commands.

Extractor algorithm files are ASCII XML format files which you can edit with any text editor.

XML format files and strings have markup like `<Tag>data</Tag>` where Tag is an element name, `<Tag>` is a start tag, and `</Tag>` is an end tag.

XML elements can have data or child elements; child elements can have data or children, and so on.

XML elements can have attributes, which are *name='value'* pairs within the element's start tag. Values must be contained in quotes.

Empty tags are used for elements that don't have any data. Empty tags are distinguished from start tags by a closing `/>` instead of a closing `>`. Empty tags can have attributes just like ordinary start tags.

Tag and attribute names are case sensitive (for example, "width" is not same as "Width").

To create an extractor algorithm file:

- 1 Start with the `<ExtractorGrammar>` (see [page 32](#)) start and end tags:

```
<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
</ExtractorGrammar>
```

The `AlgorithmDescription` attribute is a text string that gives the algorithm a name; this string also appears in the Signal Extractor tool's properties dialog when the file is loaded.

- 2 Next, define the output buses/signals using `<ExtractorLabel>` (see [page 34](#)) elements within `<ExtractorLabels>` start and end tags:

```
<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
  <ExtractorLabels>
    <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'
      VSAOutput='T' VSACompressionFactor='-16'/>
  </ExtractorLabels>
</ExtractorGrammar>
```



```

    <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'
        VSAOutput='T' VSACompressionFactor='-16' />
</ExtractorLabels>
</ExtractorGrammar>

```

You can define up to four output buses/signals on one timebase. If you want to define output signals on a different timebase, use the `<ExtractorFolder>` (see [page 32](#)) start and end tags which can contain up to four additional `<ExtractorLabel>` elements:

```

<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
  <ExtractorLabels>
    <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'
        VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'
        VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorFolder FolderName='SecondBus'>
      <ExtractorLabel Name='FrameMarker' Width='1'
        DefaultBase='Binary' />
    </ExtractorFolder>
  </ExtractorLabels>
</ExtractorGrammar>

```

Some rules for `<ExtractorLabel>` and `<ExtractorFolder>` elements:

- Only one `<ExtractorFolder>` is allowed. You can generate up to 4 buses/signals outside of a folder, and up to 4 buses/signals inside a folder. You can only generate two time bases.
 - Bus/signal names must be unique inside or outside the folder (that is, you cannot have a signal named "Valid" outside the folder and another one inside the folder).
 - The first bus/signal named in `<ExtractorLabels>` must be the first one written to, and it must be written to with the `WriteLabelTime` (see [page 29](#)) command. This is also true for the first bus/signal under `<ExtractorFolder>`.
 - At least one `<ExtractorLabel>` element must be outside of the `<ExtractorFolder>` element; otherwise, there will be an error when loading the extractor algorithm.
- 3** Next, define patterns to look for and commands to execute for those patterns within `<ExtractorSequences>` and `<ExtractorSequence>` start and end tags:

```

<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
  <ExtractorLabels>
    <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'
        VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'
        VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorFolder FolderName='SecondBus'>
      <ExtractorLabel Name='FrameMarker' Width='1'
        DefaultBase='Binary' />

```

```

    </ExtractorFolder>
  </ExtractorLabels>
  <ExtractorSequences>
    <ExtractorSequence>
    </ExtractorSequence>
  </ExtractorSequences>
</ExtractorGrammar>

```

Note that the `<ExtractorSequences>` element can contain multiple `<ExtractorSequence>` elements. This means you can look for multiple patterns and have a unique command sequence for each pattern. However, only one command sequence can be active at a time. The first pattern that matches will cause the Signal Extractor to start executing the associated command sequence.

- a** To define patterns to look for, use `<ExtractorPattern>` (see [page 35](#)) elements within `<ExtractorPatterns>` start and end tags:

```

<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
  <ExtractorLabels>
    <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'
      VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'
      VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorFolder FolderName='SecondBus'>
      <ExtractorLabel Name='FrameMarker' Width='1'
        DefaultBase='Binary' />
    </ExtractorFolder>
  </ExtractorLabels>
  <ExtractorSequences>
    <ExtractorSequence>
      <ExtractorPatterns>
        <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
      </ExtractorPatterns>
    </ExtractorSequence>
  </ExtractorSequences>
</ExtractorGrammar>

```

Pattern value masks can be 1 to 128 bits wide and do not have to be equal to the size of the input bus/signal. This lets you find long (up to 128-bit) patterns on a single bit wide input signal. Pattern value masks can accept 1's, 0's, and don't cares.

- b** To define commands to execute when a pattern is found, use `<ExtractorCmd>` (see [page 26](#)) elements within `<ExtractorCmds>` start and end tags:

```

<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
  <ExtractorLabels>
    <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'
      VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'
      VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorFolder FolderName='SecondBus'>
      <ExtractorLabel Name='FrameMarker' Width='1'

```

```

        DefaultBase='Binary' />
    </ExtractorFolder>
</ExtractorLabels>
<ExtractorSequences>
    <ExtractorSequence>
        <ExtractorPatterns>
            <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
        </ExtractorPatterns>
        <ExtractorCmds>
            <ExtractorCmd Cmd='Load' Bit='2' />
            <ExtractorCmd Cmd='Load' Bit='5' />
            <ExtractorCmd Cmd='Load' Bit='8' />
            <ExtractorCmd Cmd='Load' Bit='11' />
            <ExtractorCmd Cmd='Load' Bit='14' />
            <ExtractorCmd Cmd='Load' Bit='17' />
            <ExtractorCmd Cmd='Load' Bit='20' />
            <ExtractorCmd Cmd='Load' Bit='23' />
            <ExtractorCmd Cmd='Load' Bit='26' />
            <ExtractorCmd Cmd='Load' Bit='29' />
            <ExtractorCmd Cmd='Load' Bit='32' />
            <ExtractorCmd Cmd='Load' Bit='35' />
            <ExtractorCmd Cmd='Load' Bit='38' />
            <ExtractorCmd Cmd='Load' Bit='41' />
            <ExtractorCmd Cmd='Load' Bit='44' />
            <ExtractorCmd Cmd='Load' Bit='47' />
            <ExtractorCmd Cmd='WriteLabelTime' Name='Idata'
                BitTime='0' />
            <ExtractorCmd Cmd='Load' Bit='1' />
            <ExtractorCmd Cmd='Load' Bit='4' />
            <ExtractorCmd Cmd='Load' Bit='7' />
            <ExtractorCmd Cmd='Load' Bit='10' />
            <ExtractorCmd Cmd='Load' Bit='13' />
            <ExtractorCmd Cmd='Load' Bit='16' />
            <ExtractorCmd Cmd='Load' Bit='19' />
            <ExtractorCmd Cmd='Load' Bit='22' />
            <ExtractorCmd Cmd='Load' Bit='25' />
            <ExtractorCmd Cmd='Load' Bit='28' />
            <ExtractorCmd Cmd='Load' Bit='31' />
            <ExtractorCmd Cmd='Load' Bit='34' />
            <ExtractorCmd Cmd='Load' Bit='37' />
            <ExtractorCmd Cmd='Load' Bit='40' />
            <ExtractorCmd Cmd='Load' Bit='43' />
            <ExtractorCmd Cmd='Load' Bit='46' />
            <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
            <ExtractorCmd Cmd='JumpDone' />
        </ExtractorCmds>
    </ExtractorSequence>
</ExtractorSequences>
</ExtractorGrammar>

```

When the pattern matches, the extractor command sequence phase starts. The command sequence phase can:

- Extract-bits into a buffer (Load (see [page 28](#)) or LoadRange (see [page 29](#)) commands).

- Insert 0's or 1's into a buffer (LoadZero (see [page 29](#)) or LoadOne (see [page 29](#)) commands).
- Compare bits and jump forward or backward in the command sequence (JumpCase1Bit (see [page 27](#)), JumpCase2Bit (see [page 28](#)), JumpCase3Bit (see [page 28](#)), JumpCase4Bit (see [page 28](#)), JumpForward (see [page 28](#)), or JumpBackward (see [page 27](#)) commands). Be careful not to create loops that never exit.
- Write the buffer to 1 of 8 buses/signals with a time tag or with a generated time tag, like: TimeTag1 + 1/4 (TimeTag2 - TimeTag1) (WriteLabelTime (see [page 29](#)), WriteLabelTimeDelta (see [page 30](#)), or WriteLabel (see [page 29](#)) commands).
- Skip ahead X-bits of data (GoTo (see [page 27](#)) command).
- End the command sequence phase and return to looking for patterns (JumpDone (see [page 28](#)) command).
- Enable or disable extractor pattern masks (EnablePattern (see [page 27](#)) or DisablePattern (see [page 27](#)) commands).
- Split an input pattern into 2, 4, or 8 output patterns (Split (see [page 29](#)) command).

When the command sequence phase ends, the Signal Extractor returns to looking for pattern masks, starting again with the first pattern mask.

- 4 Note that you can include comments in the extractor algorithm file beginning with `<!--` and ending with `-->`. Comments can contain any text except double hyphen strings (which identify the beginning and the end of the comment). Comments can appear anywhere except inside tags. Comments can be used to hide XML elements. Beware of comments that hide required start or end tags.

```
<ExtractorGrammar AlgorithmDescription='Remultiplex Data Example' >
  <ExtractorLabels>
    <!-- Comment to describe output bus/signal names. -->
    <ExtractorLabel Name='A-to-D' Width='16' DefaultBase='Hex'
      VSAOutput='F' />
  </ExtractorLabels>
  <ExtractorSequences>
    <ExtractorSequence>
      <ExtractorPatterns>
        <ExtractorPattern Value='XXXXXXXXXXXXXXXXXX' Width='64'
          Enabled='T' />
      </ExtractorPatterns>
      <ExtractorCmds>
        <!-- Comment to hide an element. -->
        <ExtractorCmd Cmd='Split' Amount='8' Size='8'
          Name='A-to-D' />
        -->
        <ExtractorCmd Cmd='Split' Amount='4' Size='16'
          Name='A-to-D' />
      </ExtractorCmds>
    </ExtractorSequence>
  </ExtractorSequences>
</ExtractorGrammar>
```

```
        </ExtractorSequence>  
    </ExtractorSequences>  
</ExtractorGrammar>
```

- See Also**
- Extractor Algorithm XML Format (see [page 25](#))
 - Adding the Signal Extractor Tool (see [page 17](#))
 - The included example extractor algorithm files. You can find them under "Documents and Settings" for "All Users". For example, the default location is:

C:\Documents and Settings\All Users\Shared Documents\Agilent Technologies\Logic Analyzer\Extractor Algorithms

Extractor Algorithm XML Format

You can create Signal Extractor algorithms as XML format files with the following XML elements and hierarchy:

```
<ExtractorGrammar> (see page 32)
  <ExtractorLabels> (see page 34)
    <ExtractorLabel> (see page 34)
    <ExtractorFolder> (see page 32)
      <ExtractorLabel> (see page 34)
  <ExtractorSequences> (see page 37)
    <ExtractorSequence> (see page 35)
      <ExtractorPatterns> (see page 35)
        <ExtractorPattern> (see page 35)
      <ExtractorCmds> (see page 31)
        <ExtractorCmd> (see page 26)
```

Example Note that you can have multiple <ExtractorSequence> elements to define different sets of commands for different patterns.

```
<ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
  <ExtractorLabels>
    <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'
      VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'
      VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorFolder FolderName='SecondBus'>
      <ExtractorLabel Name='FrameMarker' Width='1'
        DefaultBase='Binary' />
    </ExtractorFolder>
  </ExtractorLabels>
  <ExtractorSequences>
    <ExtractorSequence>
      <ExtractorPatterns>
        <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
      </ExtractorPatterns>
      <ExtractorCmds>
        <ExtractorCmd Cmd='Load' Bit='2' />
        <ExtractorCmd Cmd='Load' Bit='5' />
        <ExtractorCmd Cmd='Load' Bit='8' />
        <ExtractorCmd Cmd='Load' Bit='11' />
        <ExtractorCmd Cmd='Load' Bit='14' />
        <ExtractorCmd Cmd='Load' Bit='17' />
        <ExtractorCmd Cmd='Load' Bit='20' />
        <ExtractorCmd Cmd='Load' Bit='23' />
        <ExtractorCmd Cmd='Load' Bit='26' />
        <ExtractorCmd Cmd='Load' Bit='29' />
        <ExtractorCmd Cmd='Load' Bit='32' />
        <ExtractorCmd Cmd='Load' Bit='35' />
        <ExtractorCmd Cmd='Load' Bit='38' />
        <ExtractorCmd Cmd='Load' Bit='41' />
        <ExtractorCmd Cmd='Load' Bit='44' />
        <ExtractorCmd Cmd='Load' Bit='47' />
        <ExtractorCmd Cmd='WriteLabelTime' Name='Idata'
          BitTime='0' />
        <ExtractorCmd Cmd='Load' Bit='1' />
      </ExtractorCmds>
    </ExtractorSequence>
  </ExtractorSequences>
</ExtractorGrammar>
```

```

    <ExtractorCmd Cmd='Load' Bit='4' />
    <ExtractorCmd Cmd='Load' Bit='7' />
    <ExtractorCmd Cmd='Load' Bit='10' />
    <ExtractorCmd Cmd='Load' Bit='13' />
    <ExtractorCmd Cmd='Load' Bit='16' />
    <ExtractorCmd Cmd='Load' Bit='19' />
    <ExtractorCmd Cmd='Load' Bit='22' />
    <ExtractorCmd Cmd='Load' Bit='25' />
    <ExtractorCmd Cmd='Load' Bit='28' />
    <ExtractorCmd Cmd='Load' Bit='31' />
    <ExtractorCmd Cmd='Load' Bit='34' />
    <ExtractorCmd Cmd='Load' Bit='37' />
    <ExtractorCmd Cmd='Load' Bit='40' />
    <ExtractorCmd Cmd='Load' Bit='43' />
    <ExtractorCmd Cmd='Load' Bit='46' />
    <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
    <ExtractorCmd Cmd='JumpDone' />
  </ExtractorCmds>
</ExtractorSequence>
</ExtractorSequences>
</ExtractorGrammar>

```

See Also • Creating Extractor Algorithms (see [page 19](#))

<ExtractorCmd> Element

<ExtractorCmd> elements are the heart of the Signal Extractor tool. They let you extract bits into a value and then write the value to a bus/signal.

Attributes

Name	Description
Amount	'number' — Used with Cmd= 'JumpBackward', Cmd= 'JumpForward', Cmd= 'Split'.
Bit	'number' — From 0 to 8196, used with Cmd= 'GoTo', Cmd= 'Load'.
Bit1	'number' — From 0 to 8196, used with Cmd= 'JumpCase1Bit', Cmd= 'JumpCase2Bit', Cmd= 'JumpCase3Bit', Cmd= 'JumpCase4Bit'.
Bit2	'number' — From 0 to 8196, used with Cmd= 'JumpCase2Bit', Cmd= 'JumpCase3Bit', Cmd= 'JumpCase4Bit'.
Bit3	'number' — From 0 to 8196, used with Cmd= 'JumpCase3Bit', Cmd= 'JumpCase4Bit'.
Bit4	'number' — From 0 to 8196, used with Cmd= 'JumpCase4Bit'.
BitEnd	'number' — From 0 to 8196, used with Cmd= 'LoadRange'.

BitStart	'number' — From 0 to 8196, used with Cmd='LoadRange'.
BitTime	'number' — From 0 to 8196, used with Cmd='WriteLabelTime'.
BitTimeEnd	'number' — From 0 to 8196, used with Cmd='WriteLabelTimeDelta'.
BitTimeStart	'number' — From 0 to 8196, used with Cmd='WriteLabelTimeDelta'.
Cmd	'DisablePattern' — Disables the specified pattern (Number='zero-based_number'). If a pattern is disabled, it is not available to be matched. <ExtractorCmd Cmd='DisablePattern' Number='0' />
	'EnablePattern' — Enables the specified pattern (Number='zero-based_number'). If a pattern is enabled, it is available to be matched. The first pattern that matches the value is accepted. <ExtractorCmd Cmd='EnablePattern' Number='3' />
	'GoTo' — Use this command to goto a specified bit (Bit='number' 0 to 8196). This command is useful to position the extractor tool so that the next pattern match starts at the bit <i>after</i> the bit specified. Typically, you go to a specified bit and then execute a 'JumpDone' command. Note that a 'Load' bit command followed by a 'JumpDone' command has the same effect. <ExtractorCmd Cmd='GoTo' Bit='1024' />
	'JumpBackward' — Jump backward the specified number of commands (Amount='number' from 1 to N; 0 is not allowed). Use this command to change the execution by jumping backward in the command sequence. <ExtractorCmd Cmd='JumpBackward' Amount='2' />
	'JumpCase1Bit' — Use the value of the specified bit (Bit1='number' 0 to 8196) to determine the number of instructions to jump forward. If the value of the specified bit is zero, the next command will be executed. If the value of the specified bit is one, execution will skip one command and proceed on the next command. <ExtractorCmd Cmd='JumpCase1Bit' Bit1='0' />

Cmd (continued)	<p>'JumpCase2Bit' — Use the value of the specified bits (Bit1='number' 0 to 8196, Bit2='number' 0 to 8196) to determine the number of instructions to jump forward. Note Bit1 is the most significant bit (MSB). If the value at Bit1 is 1 and Bit2 is 0, the Signal Extractor jumps forward 10 binary +1 (always jumps forward to next command) or a total of 3 commands.</p> <pre><ExtractorCmd Cmd='JumpCase2Bit' Bit1='0' Bit2='1' /></pre>
	<p>'JumpCase3Bit' — Use the value of the specified bits (Bit1, Bit2, Bit3, each a number from 0 to 8196) to determine the number of instructions to jump forward. This command is similar to the 'JumpCase2Bit' command except that it uses 3 bits.</p> <pre><ExtractorCmd Cmd='JumpCase3Bit' Bit1='0' Bit2='1' Bit3='2' /></pre>
	<p>'JumpCase4Bit' — Use the value of the specified bits (Bit1, Bit2, Bit3, Bit4, each a number from 0 to 8196) to determine the number of instructions to jump forward. This command is similar to the 'JumpCase2Bit' command except that it uses 4 bits.</p> <pre><ExtractorCmd Cmd='JumpCase4Bit' Bit1='0' Bit2='1' Bit3='2' Bit4='3' /></pre>
	<p>'JumpDone' — Jump to the end of the command section and return to the pattern matching section of the Signal Extractor tool.</p> <pre><ExtractorCmd Cmd='JumpDone' /></pre>
	<p>'JumpForward' — Jump forward the specified number of commands (Amount='number' from 1 to N; 0 is not allowed). Use this command to change the execution by jumping forward in the command sequence.</p> <pre><ExtractorCmd Cmd='JumpForward' Amount='3' /></pre>
	<p>'Load' — Load the specified bit (Bit='number' 0 to 8196) into the internal register. Bits already in the register are shifted by one bit to the left and this newest bit is ORed into the value. Note that bit 0 is considered the first left side bit in a pattern that matches. (Example: A 3 bit pattern is bit-0, bit-1, bit-2 for the pattern that matches and bit-3, bit-4, bit-5 for the next 3-bit pattern, etc.)</p> <pre><ExtractorCmd Cmd='Load' Bit='0' /></pre>

Cmd (continued)	<p>'LoadOne' — Loads a single bit of value one into the internal register.</p> <pre><ExtractorCmd Cmd='LoadOne' /></pre>
	<p>'LoadRange' — Load the specified range of bits (BitStart='number' 0 to 8196, BitEnd='number' 0 to 8196) into the internal register. Bits already in the register are shifted to the left and these newest bits are ORed into the value. Note that BitStart and BitEnd can be any positive value. The BitStart will be ORed in first regardless of whether BitStart is greater than or less than BitEnd.</p> <pre><ExtractorCmd Cmd='LoadRange' BitStart='0' BitEnd='7' /></pre>
	<p>'LoadZero' — Loads a single bit of value zero into the internal register.</p> <pre><ExtractorCmd Cmd='LoadZero' /></pre>
	<p>'Split' — Use this command to split a pattern into specified number of patterns (Amount='2', '4', '8') of size (Size='number' of channels) and then place these values using appropriate time tags on the bus/signal (Name='string'). Use this command to Remultiplex A-to-D for fastest performance. Note: Additional qualifications may be needed for fastest performance.</p> <pre><ExtractorCmd Cmd='Split' Amount='4' Size='16' Name='A-to-D' /></pre>
	<p>'WriteLabel' — Writes the internal register value to the specified bus/signal. Use this command to write out additional values to additional buses/signals. One 'WriteLabelTime' command must be executed first to generate a new time stamp. This command writes to the 3 additional bus/signals of a common time stamp group. This command just fills in the values for additional bus/signals without generating additional samples.</p> <pre><ExtractorCmd Cmd='WriteLabel' Name='Qdata' /></pre>
	<p>'WriteLabelTime' — Writes the internal register value to the specified bus/signal (Name='string') and then copies the time associated with the specified bit (BitTime='number' 0 to 8196) to the newly extracted value. After writing the internal register to a bus/signal the internal register is cleared.</p> <pre><ExtractorCmd Cmd='WriteLabelTime' Name='Idata' BitTime='0' /></pre> <p>Be careful not to write multiple time values with the same time tag, and be careful not to write values such that time tags are out of sequence.</p>

Cmd (continued)	'WriteLabelTimeDelta' — Writes the internal register value to the specified bus/signal (Name='string') and then generates a time stamp by using a fraction (TimeNum='decimal') / (TimeDen='decimal') to create a time stamp that is the specified fraction between the BitTimeStart='number' (0 to 8196) and BitTimeEnd='number' (0 to 8196). For example, to generate a time stamp that is half way between bit-29 and bit-30 you could use: <ExtractorCmd Cmd='WriteLabelTimeDelta' Name='Idata' TimeNum='1' TimeDen='2' BitTimeStart='29' BitTimeEnd='30' />
Name	'string' — Name of a bus/signal, used with Cmd='WriteLabel',Cmd='WriteLabelTime', Cmd='WriteLabelTimeDelta',Cmd='Split'.
Number	'zero-based_number' — Used with Cmd='DisablePattern', Cmd='EnablePattern'.
Size	'number' — Used with Cmd='Split'.
TimeDen	'decimal' — Denominator in fraction, used with Cmd='WriteLabelTimeDelta'.
TimeNum	'decimal' — Numerator in fraction, used with Cmd='WriteLabelTimeDelta'.

Parents This element can have the following parents: <ExtractorCmds> (see [page 31](#)).

Example

```
<ExtractorCmds>
  <ExtractorCmd Cmd='Load' Bit='2' />
  <ExtractorCmd Cmd='Load' Bit='5' />
  <ExtractorCmd Cmd='Load' Bit='8' />
  <ExtractorCmd Cmd='Load' Bit='11' />
  <ExtractorCmd Cmd='Load' Bit='14' />
  <ExtractorCmd Cmd='Load' Bit='17' />
  <ExtractorCmd Cmd='Load' Bit='20' />
  <ExtractorCmd Cmd='Load' Bit='23' />
  <ExtractorCmd Cmd='Load' Bit='26' />
  <ExtractorCmd Cmd='Load' Bit='29' />
  <ExtractorCmd Cmd='Load' Bit='32' />
  <ExtractorCmd Cmd='Load' Bit='35' />
  <ExtractorCmd Cmd='Load' Bit='38' />
  <ExtractorCmd Cmd='Load' Bit='41' />
  <ExtractorCmd Cmd='Load' Bit='44' />
  <ExtractorCmd Cmd='Load' Bit='47' />
  <ExtractorCmd Cmd='WriteLabelTime' Name='Idata' BitTime='0' />
  <ExtractorCmd Cmd='Load' Bit='1' />
  <ExtractorCmd Cmd='Load' Bit='4' />
```

```

    <ExtractorCmd Cmd='Load' Bit='7' />
    <ExtractorCmd Cmd='Load' Bit='10' />
    <ExtractorCmd Cmd='Load' Bit='13' />
    <ExtractorCmd Cmd='Load' Bit='16' />
    <ExtractorCmd Cmd='Load' Bit='19' />
    <ExtractorCmd Cmd='Load' Bit='22' />
    <ExtractorCmd Cmd='Load' Bit='25' />
    <ExtractorCmd Cmd='Load' Bit='28' />
    <ExtractorCmd Cmd='Load' Bit='31' />
    <ExtractorCmd Cmd='Load' Bit='34' />
    <ExtractorCmd Cmd='Load' Bit='37' />
    <ExtractorCmd Cmd='Load' Bit='40' />
    <ExtractorCmd Cmd='Load' Bit='43' />
    <ExtractorCmd Cmd='Load' Bit='46' />
    <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
    <ExtractorCmd Cmd='JumpDone' />
  </ExtractorCmds>

```

<ExtractorCmds> Element

The <ExtractorCmds> element contains <ExtractorCmd> elements.

Children This element can have the following children: <ExtractorCmd> (see [page 26](#)).

Parents This element can have the following parents: <ExtractorSequence> (see [page 35](#)).

Example

```

<ExtractorCmds>
  <ExtractorCmd Cmd='Load' Bit='2' />
  <ExtractorCmd Cmd='Load' Bit='5' />
  <ExtractorCmd Cmd='Load' Bit='8' />
  <ExtractorCmd Cmd='Load' Bit='11' />
  <ExtractorCmd Cmd='Load' Bit='14' />
  <ExtractorCmd Cmd='Load' Bit='17' />
  <ExtractorCmd Cmd='Load' Bit='20' />
  <ExtractorCmd Cmd='Load' Bit='23' />
  <ExtractorCmd Cmd='Load' Bit='26' />
  <ExtractorCmd Cmd='Load' Bit='29' />
  <ExtractorCmd Cmd='Load' Bit='32' />
  <ExtractorCmd Cmd='Load' Bit='35' />
  <ExtractorCmd Cmd='Load' Bit='38' />
  <ExtractorCmd Cmd='Load' Bit='41' />
  <ExtractorCmd Cmd='Load' Bit='44' />
  <ExtractorCmd Cmd='Load' Bit='47' />
  <ExtractorCmd Cmd='WriteLabelTime' Name='Idata' BitTime='0' />
  <ExtractorCmd Cmd='Load' Bit='1' />
  <ExtractorCmd Cmd='Load' Bit='4' />
  <ExtractorCmd Cmd='Load' Bit='7' />
  <ExtractorCmd Cmd='Load' Bit='10' />
  <ExtractorCmd Cmd='Load' Bit='13' />
  <ExtractorCmd Cmd='Load' Bit='16' />
  <ExtractorCmd Cmd='Load' Bit='19' />
  <ExtractorCmd Cmd='Load' Bit='22' />
  <ExtractorCmd Cmd='Load' Bit='25' />
  <ExtractorCmd Cmd='Load' Bit='28' />

```

```

    <ExtractorCmd Cmd='Load' Bit='31' />
    <ExtractorCmd Cmd='Load' Bit='34' />
    <ExtractorCmd Cmd='Load' Bit='37' />
    <ExtractorCmd Cmd='Load' Bit='40' />
    <ExtractorCmd Cmd='Load' Bit='43' />
    <ExtractorCmd Cmd='Load' Bit='46' />
    <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
    <ExtractorCmd Cmd='JumpDone' />
  </ExtractorCmds>

```

<ExtractorFolder> Element

The <ExtractorFolder> element contains output bus/signal definitions for a second time base.

Attributes

Name	Description
FolderName	'string' — Name for second group of 4 bus/signals. This is only needed if you are going to create a second time base and group of up to 4 bus/signals.

Children This element can have the following children: <ExtractorLabel> (see [page 34](#)).

Parents This element can have the following parents: <ExtractorLabels> (see [page 34](#)).

Example

```

<ExtractorFolder FolderName='SecondBus'>
  <ExtractorLabel Name='FrameMarker' Width='1' DefaultBase='Binary' />
</ExtractorFolder>

```

<ExtractorGrammar> Element

The <ExtractorGrammar> element is the top element in an XML format Signal Extractor algorithm file.

Attributes

Name	Description
AlgorithmDescription	'string' — Short text description of the algorithm.
InputMode	'Serialize' — If present, this attribute will cause the Signal Extractor tool to serialize the input bus/signal into a single bit stream before it starts searching for patterns.

Children This element can have the following children: <ExtractorLabels> (see [page 34](#)), <ExtractorSequences> (see [page 37](#)).

Parents None.


```

Example <ExtractorGrammar AlgorithmDescription='IQ data from 3-bit Serial' >
  <ExtractorLabels>
    <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'
      VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'
      VSAOutput='T' VSACompressionFactor='-16' />
    <ExtractorFolder FolderName='SecondBus'>
      <ExtractorLabel Name='FrameMarker' Width='1'
        DefaultBase='Binary' />
    </ExtractorFolder>
  </ExtractorLabels>
  <ExtractorSequences>
    <ExtractorSequence>
      <ExtractorPatterns>
        <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
      </ExtractorPatterns>
      <ExtractorCmds>
        <ExtractorCmd Cmd='Load' Bit='2' />
        <ExtractorCmd Cmd='Load' Bit='5' />
        <ExtractorCmd Cmd='Load' Bit='8' />
        <ExtractorCmd Cmd='Load' Bit='11' />
        <ExtractorCmd Cmd='Load' Bit='14' />
        <ExtractorCmd Cmd='Load' Bit='17' />
        <ExtractorCmd Cmd='Load' Bit='20' />
        <ExtractorCmd Cmd='Load' Bit='23' />
        <ExtractorCmd Cmd='Load' Bit='26' />
        <ExtractorCmd Cmd='Load' Bit='29' />
        <ExtractorCmd Cmd='Load' Bit='32' />
        <ExtractorCmd Cmd='Load' Bit='35' />
        <ExtractorCmd Cmd='Load' Bit='38' />
        <ExtractorCmd Cmd='Load' Bit='41' />
        <ExtractorCmd Cmd='Load' Bit='44' />
        <ExtractorCmd Cmd='Load' Bit='47' />
        <ExtractorCmd Cmd='WriteLabelTime' Name='Idata'
          BitTime='0' />
        <ExtractorCmd Cmd='Load' Bit='1' />
        <ExtractorCmd Cmd='Load' Bit='4' />
        <ExtractorCmd Cmd='Load' Bit='7' />
        <ExtractorCmd Cmd='Load' Bit='10' />
        <ExtractorCmd Cmd='Load' Bit='13' />
        <ExtractorCmd Cmd='Load' Bit='16' />
        <ExtractorCmd Cmd='Load' Bit='19' />
        <ExtractorCmd Cmd='Load' Bit='22' />
        <ExtractorCmd Cmd='Load' Bit='25' />
        <ExtractorCmd Cmd='Load' Bit='28' />
        <ExtractorCmd Cmd='Load' Bit='31' />
        <ExtractorCmd Cmd='Load' Bit='34' />
        <ExtractorCmd Cmd='Load' Bit='37' />
        <ExtractorCmd Cmd='Load' Bit='40' />
        <ExtractorCmd Cmd='Load' Bit='43' />
        <ExtractorCmd Cmd='Load' Bit='46' />
        <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
        <ExtractorCmd Cmd='JumpDone' />
      </ExtractorCmds>
    </ExtractorSequence>
  </ExtractorSequences>
</ExtractorGrammar>

```

<ExtractorLabel> Element

The <ExtractorLabel> element contains an output bus/signal definition.

Attributes

Name	Description
DefaultBase	'Binary', 'Hex', 'Octal', 'Decimal', 'Signed Decimal'
Name	'string' — Text name of output bus/signal to display.
VSACompressionFactor	'number' — Optional value used to tell the Agilent 89601A vector signal analysis software about the serial compression or expansion that is occurring between the input data to the output data. A value of -16 implies that for every 16 input states the output bus/signal has 1 state. A value of +4 implies that for every 1 input state we are generating 4 output states.
VSAOutput	'F' — The bus/signal cannot be used with the Agilent 89601A vector signal analysis software. 'T' — The bus/signal can be used with the Agilent 89601A vector signal analysis software.
Width	'number' — Width of the output bus/signal in channels (1 to 128).

Parents This element can have the following parents: <ExtractorLabels> (see [page 34](#)), <ExtractorFolder> (see [page 32](#)).

Example

```
<ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'
VSAOutput='T' VSACompressionFactor='-16' />
```

<ExtractorLabels> Element

The <ExtractorLabels> element contains output bus/signal and bus/signal folder definitions.

Children This element can have the following children: <ExtractorLabel> (see [page 34](#)), <ExtractorFolder> (see [page 32](#)).

Parents This element can have the following parents: <ExtractorGrammar> (see [page 32](#)).

Example

```
<ExtractorLabels>
  <ExtractorLabel Name='Idata' Width='16' DefaultBase='Hex'
    VSAOutput='T' VSACompressionFactor='-16' />
  <ExtractorLabel Name='Qdata' Width='16' DefaultBase='Hex'
    VSAOutput='T' VSACompressionFactor='-16' />
  <ExtractorFolder FolderName='SecondBus'>
    <ExtractorLabel Name='FrameMarker' Width='1'
      DefaultBase='Binary' />
  </ExtractorFolder>
</ExtractorLabels>
```

```

    </ExtractorFolder>
</ExtractorLabels>

```

<ExtractorPattern> Element

The <ExtractorPattern> element describes a pin's mapping on a probe.

Attributes

Name	Description
Enabled	'F' — To indicate that this pattern is initially disabled. 'T' — If this pattern is initially enabled.
Value	'binary_or_hex_number' — Binary or hex pattern to search for first. Use a leading 'b' or 'h' and 'X' for don't care on some bits.
Width	'number' — Width of the pattern that you are looking for (1 to 128).

Parents This element can have the following parents: <ExtractorPatterns> (see [page 35](#)).

Example

```

<ExtractorPatterns>
  <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
</ExtractorPatterns>

```

<ExtractorPatterns> Element

The <ExtractorPatterns> element contains <ExtractorPattern> elements.

Children This element can have the following children: <ExtractorPattern> (see [page 35](#)).

Parents This element can have the following parents: <ExtractorSequence> (see [page 35](#)).

Example

```

<ExtractorPatterns>
  <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
</ExtractorPatterns>

```

<ExtractorSequence> Element

Each extractor sequence consists of a set of extractor patterns and extractor commands. When one of the extractor patterns matches, it will start executing the corresponding extractor commands.

Multiple occurrences of ExtractorSequence can exist. Make sure the more specific ExtractorSequence occurs before the more generic ExtractorSequence. For example, you may have an ExtractorSequence to match for a particular type of serial frame and

extract I and Q data from it as the first ExtractorSequence. Then, you may have a default ExtractorSequence to match all other types of serial frames that you are trying to determine sizes of so that you can skip past them properly.

Children This element can have the following children: <ExtractorPatterns> (see [page 35](#)), <ExtractorCmds> (see [page 31](#)).

Parents This element can have the following parents: <ExtractorSequences> (see [page 37](#)).

Example

```
<ExtractorSequence>
  <ExtractorPatterns>
    <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
  </ExtractorPatterns>
  <ExtractorCmds>
    <ExtractorCmd Cmd='Load' Bit='2' />
    <ExtractorCmd Cmd='Load' Bit='5' />
    <ExtractorCmd Cmd='Load' Bit='8' />
    <ExtractorCmd Cmd='Load' Bit='11' />
    <ExtractorCmd Cmd='Load' Bit='14' />
    <ExtractorCmd Cmd='Load' Bit='17' />
    <ExtractorCmd Cmd='Load' Bit='20' />
    <ExtractorCmd Cmd='Load' Bit='23' />
    <ExtractorCmd Cmd='Load' Bit='26' />
    <ExtractorCmd Cmd='Load' Bit='29' />
    <ExtractorCmd Cmd='Load' Bit='32' />
    <ExtractorCmd Cmd='Load' Bit='35' />
    <ExtractorCmd Cmd='Load' Bit='38' />
    <ExtractorCmd Cmd='Load' Bit='41' />
    <ExtractorCmd Cmd='Load' Bit='44' />
    <ExtractorCmd Cmd='Load' Bit='47' />
    <ExtractorCmd Cmd='WriteLabelTime' Name='Idata' BitTime='0' />
    <ExtractorCmd Cmd='Load' Bit='1' />
    <ExtractorCmd Cmd='Load' Bit='4' />
    <ExtractorCmd Cmd='Load' Bit='7' />
    <ExtractorCmd Cmd='Load' Bit='10' />
    <ExtractorCmd Cmd='Load' Bit='13' />
    <ExtractorCmd Cmd='Load' Bit='16' />
    <ExtractorCmd Cmd='Load' Bit='19' />
    <ExtractorCmd Cmd='Load' Bit='22' />
    <ExtractorCmd Cmd='Load' Bit='25' />
    <ExtractorCmd Cmd='Load' Bit='28' />
    <ExtractorCmd Cmd='Load' Bit='31' />
    <ExtractorCmd Cmd='Load' Bit='34' />
    <ExtractorCmd Cmd='Load' Bit='37' />
    <ExtractorCmd Cmd='Load' Bit='40' />
    <ExtractorCmd Cmd='Load' Bit='43' />
    <ExtractorCmd Cmd='Load' Bit='46' />
    <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
    <ExtractorCmd Cmd='JumpDone' />
  </ExtractorCmds>
</ExtractorSequence>
```

<ExtractorSequences> Element


The <ExtractorSequences> element contains <ExtractorSequence> elements.

Children This element can have the following children: <ExtractorSequence> (see [page 35](#)).

Parents This element can have the following parents: <ExtractorGrammar> (see [page 32](#)).


Example

```
<ExtractorSequences>
  <ExtractorSequence>
    <ExtractorPatterns>
      <ExtractorPattern Value='b1XX' Width='3' Enabled='T' />
    </ExtractorPatterns>
    <ExtractorCmds>
      <ExtractorCmd Cmd='Load' Bit='2' />
      <ExtractorCmd Cmd='Load' Bit='5' />
      <ExtractorCmd Cmd='Load' Bit='8' />
      <ExtractorCmd Cmd='Load' Bit='11' />
      <ExtractorCmd Cmd='Load' Bit='14' />
      <ExtractorCmd Cmd='Load' Bit='17' />
      <ExtractorCmd Cmd='Load' Bit='20' />
      <ExtractorCmd Cmd='Load' Bit='23' />
      <ExtractorCmd Cmd='Load' Bit='26' />
      <ExtractorCmd Cmd='Load' Bit='29' />
      <ExtractorCmd Cmd='Load' Bit='32' />
      <ExtractorCmd Cmd='Load' Bit='35' />
      <ExtractorCmd Cmd='Load' Bit='38' />
      <ExtractorCmd Cmd='Load' Bit='41' />
      <ExtractorCmd Cmd='Load' Bit='44' />
      <ExtractorCmd Cmd='Load' Bit='47' />
      <ExtractorCmd Cmd='WriteLabelTime' Name='Idata' BitTime='0' />
      <ExtractorCmd Cmd='Load' Bit='1' />
      <ExtractorCmd Cmd='Load' Bit='4' />
      <ExtractorCmd Cmd='Load' Bit='7' />
      <ExtractorCmd Cmd='Load' Bit='10' />
      <ExtractorCmd Cmd='Load' Bit='13' />
      <ExtractorCmd Cmd='Load' Bit='16' />
      <ExtractorCmd Cmd='Load' Bit='19' />
      <ExtractorCmd Cmd='Load' Bit='22' />
      <ExtractorCmd Cmd='Load' Bit='25' />
      <ExtractorCmd Cmd='Load' Bit='28' />
      <ExtractorCmd Cmd='Load' Bit='31' />
      <ExtractorCmd Cmd='Load' Bit='34' />
      <ExtractorCmd Cmd='Load' Bit='37' />
      <ExtractorCmd Cmd='Load' Bit='40' />
      <ExtractorCmd Cmd='Load' Bit='43' />
      <ExtractorCmd Cmd='Load' Bit='46' />
      <ExtractorCmd Cmd='WriteLabel' Name='Qdata' />
      <ExtractorCmd Cmd='JumpDone' />
    </ExtractorCmds>
  </ExtractorSequence>
</ExtractorSequences>
```

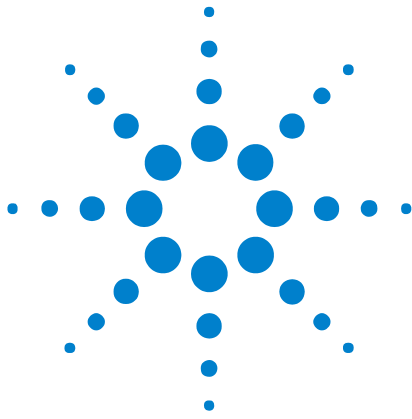7 Signal Extractor Tool Properties Dialog


The Signal Extractor tool properties dialog lets you set up the tool to extract signals or data from one input bus/signal and output the extracted data onto new buses/signals.

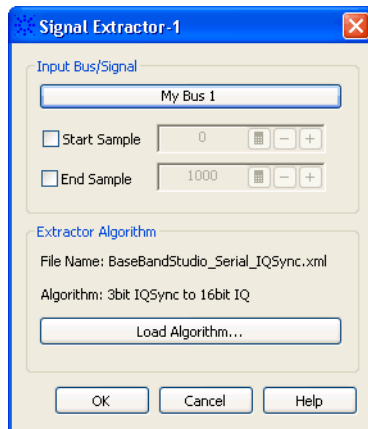

Input Bus/Signal	Selects the bus/signal that data will be extracted from.
Start Sample End Sample	Lets you reduce the number of samples being processed (and speed up processing).
Load Algorithm...	Lets you load the extractor algorithm that specifies the output bus/signal names and how data should be extracted. Example extractor algorithms have been included. You can find them under "Documents and Settings" for "All Users". For example, the default location is: C:\Documents and Settings\All Users\Shared Documents\Agilent Technologies\Logic Analyzer\Extractor Algorithms

- See Also**
- Using the Signal Extractor Tool (see [page 3](#))
 - Creating Extractor Algorithms (see [page 19](#))



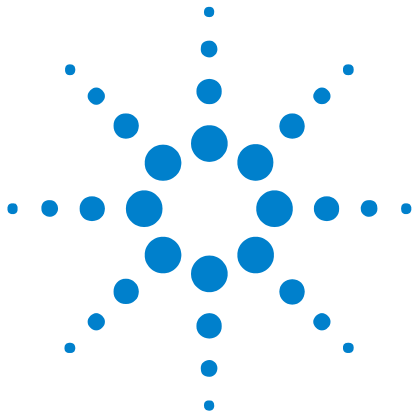

8

Signal Extractor Tool Control, COM Automation

The *Agilent Logic Analyzer* application includes the COM Automation Server. This software lets you write programs that control the *Agilent Logic Analyzer* application from remote computers on the Local Area Network (LAN).

In a COM automation program, you can configure a tool by:

- Loading a configuration file (which configures the complete logic analyzer setup).
- Using the "Tool" (in the online help) object's "DoCommands" (in the online help) method with an XML-format string parameter (see *Signal Extractor Tool Setup, XML Format* (see [page 43](#))).

You can get information about a tool's configuration using the Tool object's "QueryCommand" (in the online help) method. Queries supported by the Signal Extractor tool are listed below.

For more information about logic analyzer COM automation and tool objects in general, see "COM Automation" (in the online help).

XML-Based Queries Supported


The Signal Extractor tool supports the following XML-based queries (made with the "Tool" (in the online help) object's "QueryCommand" (in the online help) method).

Query	Description
GetAllSetup	Returns the current setup, using the full tag set, used for writing generic configuration files (see the XML format <Setup> element (see page 44)).

See Also

- "COM Automation" (in the online help)
- *Signal Extractor Tool Setup, XML Format* (see [page 43](#))



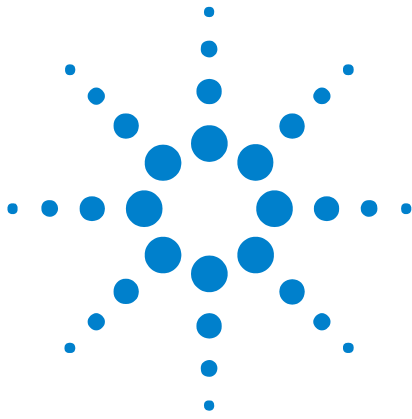

9

Signal Extractor Tool Setup, XML Format

When you save logic analyzer configurations to XML format files, setup information for the Signal Extractor tool is included.

This XML format setup information is also used when writing COM automation programs to control the logic analyzer from a remote computer.

XML elements for the Signal Extractor tool have the following hierarchy:

<Setup> (see [page 44](#))

- See Also**
- "XML Format" (in the online help)
 - Signal Extractor Tool Control, COM Automation (see [page 41](#))



<Setup> Element

The <Setup> element contains setup information for the Signal Extractor tool.

Attributes

Name	Description
EndingSampleNumber	'number'
ExtractorFile	'string'
InputBus	'string'
InputBusModule	'string'
StartingSampleNumber	'number'

Parents This element can have the following parents: "<Tool>" (in the online help).

When used in COM automation, this element is returned by the "QueryCommand method" (in the online help)'s GetAllSetup query. You can also use this element string as an XMLCommand with the "DoCommands method" (in the online help) to configure the Serial To Parallel tool.

Example

```
<Setup InputBusModule='My 16950A-1' InputBus='My Bus 1'
  ExtractorFile='Z:\Documents and Settings\ab1234\My
  Documents\Agilent Technologies\Logic Analyzer\Config
  Files\Extractor_Test.xml'
  StartingSampleNumber='0' EndingSampleNumber='1000' />
```

Index

A

algorithm, Signal Extractor, [3](#)

C

COM automation, Signal Extractor tool, [41](#)

E

extract data from bus/signal, [3](#)
extractor algorithm, [17](#), [39](#)
extractor algorithms, creating, [19](#)
extractor algorithms, XML Format, [25](#)
ExtractorCmd, XML element, [26](#)
ExtractorCmds, XML element, [31](#)
ExtractorFolder, XML element, [32](#)
ExtractorGrammar, XML element, [32](#)
ExtractorLabel, XML element, [34](#)
ExtractorLabels, XML element, [34](#)
ExtractorPattern, XML element, [35](#)
ExtractorPatterns, XML element, [35](#)
ExtractorSequence, XML element, [35](#)
ExtractorSequences, XML element, [37](#)

H

high-speed data, remultiplexing, [3](#), [11](#), [13](#)

I

I and Q data, extracting, [3](#), [7](#), [13](#)

N

notices, [2](#)

Q

Q and I data, extracting, [3](#), [7](#), [13](#)

R

remultiplexing high-speed data, [3](#), [11](#), [13](#)

S

Setup, XML element, [44](#)
Signal Extractor capabilities, [13](#)
Signal Extractor tool, [3](#)

Signal Extractor tool, adding, [17](#)
Signal Extractor tool, algorithm XML Format, [25](#)
Signal Extractor tool, creating algorithms, [19](#)
Signal Extractor tool, how it works, [15](#)
Signal Extractor tool, properties dialog, [39](#)

T

trademarks, [2](#)

X

XML format, Signal Extractor tool, [43](#)

