

Installation Guide

Agilent Technologies E8257D/67D PSG Signal Generators

This guide applies to the following signal generator models:

E8257D PSG Analog Signal Generator

E8267D PSG Vector Signal Generator

Due to our continuing efforts to improve our products through firmware and hardware revisions, signal generator design and operation may vary from descriptions in this guide. We recommend that you use the latest revision of this guide to ensure you have up-to-date product information. Compare the print date of this guide (see bottom of page) with the latest revision, which can be downloaded from the following website:

www.agilent.com/find/psg



Manufacturing Part Number: E8251-90352

Printed in USA

August 2004

© Copyright 2004 Agilent Technologies, Inc.

Notice

The material contained in this document is provided “as is”, and is subject to being changed, without notice, in future editions.

Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied with regard to this manual and to any of the Agilent products to which it pertains, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or any of the Agilent products to which it pertains. Should Agilent have a written contract with the User and should any of the contract terms conflict with these terms, the contract terms shall control.

Questions or Comments about our Documentation?

We welcome any questions or comments you may have about our documentation. Please send us an E-mail at sources_manuals@am.exch.agilent.com.

| | |
|--|-----------|
| 1. Safety Information | 1 |
| Instrument Markings | 1 |
| Warnings, Cautions, and Notes | 2 |
| General Safety Considerations | 2 |
| | |
| 2. Getting Started | 3 |
| Checking the Shipment | 4 |
| Meeting Electrical and Environmental Requirements | 5 |
| Environment | 5 |
| Ventilation | 5 |
| Line Settings | 6 |
| Connecting the AC Power Cord | 6 |
| AC Power Cord Localization | 7 |
| Configuring the Display | 8 |
| Contrast and Brightness | 8 |
| Inverse Video | 8 |
| Screen Saver | 8 |
| Updating the Display During Remote Operation | 9 |
| Configuring for Remote Control | 10 |
| GPIB Interface Configuration | 10 |
| LAN Interface Configuration | 10 |
| RS-232 Interface Configuration | 11 |
| Ordering Accessories | 12 |
| Front Handles and Rack Mount Flanges | 12 |
| E8257D/67D PSG Documentation | 12 |
| Proper Usage and Cleaning | 14 |
| Cleaning Suggestions | 14 |
| Contacting Agilent Sales and Service Offices | 15 |
| Returning a Signal Generator to Agilent Technologies | 16 |
| | |
| 3. Operation Verification | 17 |
| Performing a Self-Test | 18 |
| Self-Test Failure | 19 |
| Checking the Maximum Leveled Power | 20 |
| Maximum Leveled Power Check Failure | 20 |
| Checking the Output Power | 23 |
| Problems with Output Power | 30 |

Contents

- 4. Regulatory Information 31**
 - Statement of Compliance 32
 - Assistance 32
 - Certification 32
 - Compliance with German Noise Requirements 32
 - Compliance with Canadian EMC Requirements 33

1 Safety Information

Instrument Markings

The following markings are used on the signal generator. Familiarize yourself with each marking and its meaning before operating the signal generator.



The instruction manual symbol. The product is marked with this symbol when it is necessary for the user to refer to the instructions in the manual.



The CE mark is a registered trademark of the European Community. If this symbol is accompanied by a year, it is the year when the design was proven.



The CSA mark is a registered trademark of the Canadian Standards Association.



The C-Tick Mark is a trademark registered to the Australian Spectrum Management Agency. This indicates compliance with all Australian EMC regulatory information.



This symbol is used to mark the on position of the power line switch.



This symbol is used to mark the standby position of the power line switch.



This symbol indicates that the input power required is ac.



This is a symbol of an Industrial Scientific and Medical Group 1 Class A product. (CISPER 11, Clause 4)

Warnings, Cautions, and Notes

The following safety notations are used throughout this manual. Familiarize yourself with each notation and its meaning before operating the signal generator.

WARNING *Warning* denotes a hazard. It calls attention to a condition or situation that could result in personal injury or loss of life. Do not proceed beyond a warning until the indicated conditions or situations are fully understood.

CAUTION *Caution* calls attention to a possible condition or situation that could result in the loss of a user's work, damage, or destruction of the signal generator. Do not proceed beyond a caution until the indicated conditions are fully understood.

NOTE *Note* calls the user's attention to an important point, or special information, within the text. It provides operational information or additional instructions of which the user should be aware.

General Safety Considerations

WARNING **Personal injury may result if the signal generator covers are removed. There are no operator serviceable parts inside. To avoid electrical shock, refer servicing to qualified personnel.**

2 Getting Started

Checking the Shipment

1. Inspect the shipping container for damage.

Signs of damage may include a dented or torn shipping container or cushioning material that shows signs of unusual stress or compacting.

2. Carefully remove the contents from the shipping container and verify that your order is complete.

The following items are shipped standard with each signal generator:

- installation guide
- documentation CD-ROM

CD-ROM contents are also available in hard copy format. Refer to [“E8257D/67D PSG Documentation” on page 12](#) for more information.

- three-prong ac power cord specific to geographic location

3. Verify that any options ordered are included with the shipment by checking the packing literature included with the shipment.

NOTE The serial number label on the signal generator only lists the hardware/firmware options. The packing literature verifies all items shipped.

Front handles and rack mounting hardware are also available for your signal generator. Refer to [“Front Handles and Rack Mount Flanges” on page 12](#) for more information.

Meeting Electrical and Environmental Requirements

Environment

The signal generator is designed for use in the following environmental conditions:

- indoor use
- < 15,000 feet (4,572 meters) altitude
- 0 to 55° C temperature, unless otherwise specified
- 80% relative humidity (maximum) for temperatures up to 31° C, decreasing linearly to 50% relative humidity at 40° C

CAUTION This product is designed for use in INSTALLATION CATEGORY II and POLLUTION DEGREE 2, per IEC 61010 and 664, respectively.

Ventilation

Ventilation holes are located on the left side of the signal generator cover and the rear of the signal generator chassis. Do not allow these holes to be obstructed, as they allow air flow through the signal generator.

When installing the signal generator in a cabinet, the convection into and out of the signal generator must not be restricted. The ambient temperature outside the cabinet must be less than the maximum operating temperature of the signal generator by 4° C for every 100 watts dissipated within the cabinet.

CAUTION Damage to the signal generator may result when the total power dissipated in the cabinet is greater than 800 watts. When this condition exists, forced convection must be applied.

Line Settings

The signal generator has an autoranging line voltage input. The available ac power source must meet the following conditions:

| | |
|-------------------|--|
| Voltage: | 100/115 volts nominal (90-132 volts) 230/240 volts nominal (198-254 volts) |
| Frequency: | for 100/115 volts: 50/60/400 Hz nominal for 230/240 volts: 50/60 Hz nominal |
| Power: | E8257D PSG analog models: 300 watts maximum E8267D PSG vector models: 600 watts maximum |

CAUTION Damage to the signal generator may result if the supply voltage is not within the specified range.

Connecting the AC Power Cord

This is a Safety Class 1 Product provided with a protective earth ground incorporated into the power cord. The front panel switch is only a standby switch; it is not a line switch. The AC power cord is the disconnecting device that disconnects the signal generator mains circuits from the mains supply. Alternatively, an external switch or circuit breaker, readily identifiable and easily reached by the operator, may also be used as a disconnecting device.

Disconnecting power to an instrument with a high stability timebase may require a longer warm-up period before it meets specifications. Perform the following steps when connecting the ac power cord:

WARNING **Personal injury may occur if there is any interruption of the protective conductor inside or outside of the signal generator. Intentional interruption is prohibited.**










CAUTION Damage to the signal generator may result without adequate earth grounding. Always use the three-prong AC power cord supplied with the signal generator. See, [“AC Power Cord Localization” on page 7](#) for a list of available power cords.

1. Ensure that the power cord is not damaged.
2. Install the signal generator so that one of the following items is readily identifiable and easily reached by the operator: AC power cord, alternative switch, or circuit breaker.
3. Insert the mains plug into a socket outlet provided with a protective earth grounding.

AC Power Cord Localization

The ac power cord included with the signal generator is appropriate to its geographic location. However, you can order additional ac power cords for use in different areas.

The following table lists the available ac power cords, illustrates plug configurations, and identifies the geographic area in which each cord is appropriate.

| Plug Type ^a | Cable Part Number | Plug ^b Description | Length cm (in.) | Cable Color | For Use in Country |
|---|-------------------|-------------------------------|-----------------|-------------|--|
| 250V  | 8120-1351 | Straight BS 1363A | 229 (90) | Mint Gray | Option 900 United Kingdom, Hong Kong, Cyprus, Nigeria, Singapore, Zimbabwe |
| | 8120-1703 | 90° | 229 (90) | Mint Gray | |
| 250V  | 8120-1369 | Straight AS 3112 | 210 (79) | Gray | Option 901 Argentina, Australia, New Zealand, Mainland China |
| | 8120-0696 | 90° | 200 (78) | Gray | |
| 125V  | 8120-1378 | Straight NEMA 5-15P | 203 (80) | Jade Gray | Option 903 United States, Canada, Brazil, Colombia, Mexico, Philippines, Saudi Arabia, Taiwan |
| | 8120-1521 | 90° | 203 (80) | Jade Gray | |
| 125V  | 8120-4753 | Straight NEMA 5-15P | 229 (90) | Gray | Option 918 Japan |
| | 8120-4754 | 90° | 229 (90) | Gray | |
| 250V  | 8120-1689 | Straight CEE 7/VII | 200 (78) | Mint Gray | Option 902 Continental Europe, Central African Republic, United Arab Republic |
| | 8120-1692 | 90° | 200 (78) | Mint Gray | |
| 230V  | 8120-2104 | Straight SEV Type 12 | 200 (78) | Gray | Option 906 Switzerland |
| | 8120-2296 | 90° | 200 (78) | Gray | |
| 220V  | 8120-2956 | Straight SR 107-2-D | 200 (78) | Gray | Option 912 Denmark |
| | 8120-2957 | 90° | 200 (78) | Gray | |
| 250V  | 8120-4211 | Straight IEC 83-B1 | 200 (78) | Mint Gray | Option 917 South Africa, India |
| | 8120-4600 | 90° | 200 (78) | Mint Gray | |
| 250V  | 8120-5182 | Straight SI 32 | 200 (78) | Jade Gray | Option 919 Israel |
| | 8120-5181 | 90° | 200 (78) | Jade Gray | |

a. E = earth ground, L = line, and N = neutral.


b. Plug identifier numbers describe the plug only. The part number is for the complete cable assembly.

plugs


Configuring the Display

You can adjust the LCD display using features such as contrast, brightness, screen saver mode, and the screen saver delay. You can also toggle features such as inverse video, display updating in remote mode, and the screen saver on or off.

Contrast and Brightness

Press  to decrease the display contrast.

Pressing the decrease contrast hardkey and holding it down causes the display background to gradually darken in comparison to the text on the display. The minimum contrast setting is not a completely black display. Some contrast between the background and the text will still be visible.

Press  to increase the display contrast.

Pressing the increase contrast hardkey and holding it down causes the display background to gradually brighten in comparison to the text on the display. If the background does not appear to change, it is probably set to the maximum contrast.

Press **Utility > Display > Brightness**.

This allows you to change the display's brightness.

Brightness can be adjusted using the arrow keys, numeric keypad, or front panel knob. The brightness value is set to 50 (maximum brightness) at the factory. The minimum brightness value is 1.

Inverse Video

Press **Utility > Display > Inverse Video Off On**.

This toggles between inverse video mode and normal display mode.

The normal display mode for the signal generator is dark text on a light background. Inverse video mode is light text on a dark background. Inverse video is a persistent state; it is not affected by a signal generator preset or power cycle.

Screen Saver

Press **Utility > Display > Screen Saver Off On**.

This toggles the operating mode of the screen saver.

You can increase the life expectancy of the signal generator's display light by activating the screen saver. Leaving the display lit for long periods of time or turning the display on and off frequently decreases the life of the bulb. With the screen saver on, the display light is turned off after a defined period of time with no

input to the front panel. The display light turns on again when any front panel key is pressed or when a remote command is sent. The screen saver is set to off at the factory.

Press **Utility > Display > Screen Saver Mode**.

This toggles the screen saver mode between light-only mode and light-and-text mode.

Adjust the screen saver mode to turn the light on, off, or to turn both the light and text on and off. Setting the mode to light-only mode turns the display light off, leaving the text visible at a low intensity. If the display remains unchanged for long periods of time, set the mode to light and text to prevent the text from burning the display. This mode turns the display light and the text off.

Press **Utility > Display > Screen Saver Delay**.

This adjusts the amount of elapsed time before the screen saver is activated.

The screen saver delay is set to 1 hour at the factory. The current screen saver delay is displayed in the softkey label and also in the active entry area. To change the delay, enter a new value using the numeric keypad and then press **Enter**, or rotate the front panel knob. The acceptable range of delay values is 1 through 12 hours in 1 hour increments.

The screen saver settings are persistent states; they are not affected by a signal generator preset or power cycle.

Updating the Display During Remote Operation

Press **Utility > Display > Update in Remote Off On**.

This toggles the display-update-in-remote mode on or off.

When toggled on, commands executed via the remote control bus will update the signal generator display accordingly. When toggled off, commands executed via the remote control bus will not update the signal generator's display. Update-in-remote mode is set to off at the factory.

Configuring for Remote Control

GPIB Interface Configuration

1. Press **Utility** > **GPIB/RS-232 LAN** > **GPIB Address**.
2. Use the numeric keypad to set the desired address and press **Enter**.

The arrow keys or the front panel knob can be used to set the desired address.

The signal generator's GPIB address is set to 19 at the factory. The acceptable range of addresses is 0 through 30. The GPIB address is a persistent state; it is not affected by a signal generator preset or by a power cycle.

LAN Interface Configuration

Use one of the following procedures to assign a hostname and IP address to the signal generator. The hostname and IP address are persistent states; they are not affected by an instrument preset or a power cycle.

Manual Configuration

1. Press **Utility** > **GPIB/RS-232 LAN** > **LAN Setup** > **Hostname**.
2. Use the labeled text softkeys and/or numeric keypad to enter the desired hostname. To erase the current hostname, press **Editing Keys** > **Clear Text**.
3. Press **Enter**, then set **LAN Config Manual DHCP** to **Manual**.
4. Press **IP Address** and enter a desired address. Use the left and right arrow keys to move the cursor. Use the up and down arrow keys, front panel knob, or numeric keypad to enter an IP address. To erase the current IP address, press the **Clear Text** softkey.

NOTE To remotely access the signal generator from a different LAN subnet, you must also enter the subnet mask and default gateway. See your system administrator to obtain the appropriate values.

5. Press the **Proceed With Reconfiguration** softkey and then the **Confirm Change (Instrument will Reboot)** softkey.

This action assigns a hostname and IP address (as well as a gateway and subnet mask, if these have been configured) to the signal generator. The hostname, IP address, gateway and subnet mask are not affected by an instrument preset or by a power cycle.

6. Connect the signal generator to the LAN using a 10BASE-T LAN cable.

DHCP Configuration

1. Press **Utility > GPIB/RS-232 LAN > LAN Setup**.
2. Press **Hostname**.

NOTE If the DHCP server uses dynamic DNS to link the hostname with the assigned IP address, the hostname may be used in place of the IP address. Otherwise, the hostname is not usable and you may skip steps 2 through 4.

3. Use the labeled text softkeys and/or numeric keypad to enter the desired hostname.
To erase the current hostname, press **Editing Keys > Clear Text**.
4. Press **Enter**.
5. Set **LAN Config Manual DHCP** to DHCP.
6. Press the **Proceed With Reconfiguration** softkey and then the **Confirm Change (Instrument will Reboot)** softkey.
This action configures the signal generator as a DHCP client. In DHCP mode, the signal generator will request a new IP address from the DHCP server upon rebooting. You can return to the LAN Setup menu after rebooting to determine the assigned IP address.
7. Connect the signal generator to the LAN using a 10BASE-T LAN cable.

RS-232 Interface Configuration

1. Press **Utility > GPIB/RS-232 LAN > RS-232 Setup**.
2. Press **RS-232 Baud Rate**.
3. Press the desired baud rate softkey.
4. Press **RS-232 Echo Off On**.

This toggles the state of the SCPI echoing on the RS-232 connection. Set as desired.

5. Press **Reset RS-232**.

This deletes the data from the RS-232 buffer, discarding any unprocessed SCPI input received over RS-232.

These RS-232 parameters are persistent states; these states are not affected by an instrument preset or power cycle.

Ordering Accessories

The following accessories can be ordered when a signal generator is purchased, or at any time afterward. To order accessories, refer to “[Contacting Agilent Sales and Service Offices](#)” on page 15.

Front Handles and Rack Mount Flanges

Handles can be purchased and attached to the front of the signal generator. These handles can also be purchased with a rack mount kit to facilitate rack installation. Hardware can be ordered as a kit to support either preference. [Table 2-1](#) lists the part numbers for these kits.

Table 2-1 Front Handle and Rack Mount Flange Kits

| Description | Part Number |
|---|-------------|
| Rack Mount Kit without Handles (Option 1CM) | 5063-9215 |
| Front Handle Kit (Option 1CN) | 5063-9228 |
| Rack Mount Kit with Handles (Option 1CP) | 5063-9222 |

E8257D/67D PSG Documentation

[Table 2-2](#) lists the part numbers and descriptions for documentation available in hardcopy and CD-ROM format.

Table 2-2 Available E8257D/67D PSG Documentation

| Document Type | Description | Part Number |
|-----------------------------------|--|-------------|
| Documentation Set (Option ABA) | <ul style="list-style-type: none">set includes all items listed in this table, with the <i>exception</i> of the Installation Guide, the Service Guide, and the documentation CD-ROM | E8251-90350 |
| Documentation CD-ROM (Option CD1) | <ul style="list-style-type: none">PDF files of the E8257D/67D PSG documentation set, <i>including</i> the Installation Guide and the Service Guideprogramming exampleserror messages | E8251-90351 |
| Installation Guide | <ul style="list-style-type: none">installation instructions and requirementsoperation verification proceduresafety and regulatory information | E8251-90352 |

Table 2-2 Available E8257D/67D PSG Documentation

| Document Type | Description | Part Number |
|----------------------------|--|-------------|
| E8257D Data Sheet | <ul style="list-style-type: none"> • available options • warranted specifications and typical performance | 5989-0698EN |
| E8267D Data Sheet | <ul style="list-style-type: none"> • available options • warranted specifications and typical performance | 5989-0697EN |
| User's Guide | <ul style="list-style-type: none"> • description of features and functions • signal generator operation tutorials • optimization procedures • concept information • basic troubleshooting | E8251-90353 |
| Key Reference | <ul style="list-style-type: none"> • softkey and hardkey descriptions | E4400-90354 |
| Programming Guide | <ul style="list-style-type: none"> • remote operation procedures • programming examples • downloading and using files | E8251-90355 |
| SCPI Command Reference | <ul style="list-style-type: none"> • SCPI command descriptions • command compatibility tables | E4400-90356 |
| Service Guide (Option OBW) | <ul style="list-style-type: none"> • troubleshooting procedures • assembly replacement procedures • parts information | E8251-90359 |

Proper Usage and Cleaning

The signal generator cover protects against physical contact with internal assemblies that contain hazardous voltages, but does not protect against the entrance of water. To avoid damage and personal injury, ensure that liquid substances are positioned away from your signal generator.

WARNING **Personal injury may result if the signal generator is not used as specified. Unspecified use impairs the protection provided by the equipment. The signal generator must be used with all means for protection intact.**

Cleaning Suggestions

To ensure good connections, the connectors on the front and rear panels of the signal generator need to be cleaned regularly.

To prevent dust build-up that could potentially obstruct ventilation, clean the signal generator cover periodically. Use a dry cloth, or one slightly dampened with water, to clean the external case parts.

WARNING **To prevent electrical shock, disconnect the Agilent PSG E8257D/67D Signal Generator from mains before cleaning. Use a dry cloth or one slightly dampened with water to clean the external case parts. Do not attempt to clean internally.**

Contacting Agilent Sales and Service Offices

Assistance with test and measurements needs and information on finding a local Agilent office are available on the Web at:

<http://www.agilent.com/find/assist>

You can also purchase E8257D/67D PSG accessories or documentation items on the Web at:

<http://www.agilent.com/find/psg>

If you do not have access to the Internet, please contact your field engineer.

NOTE In any correspondence or telephone conversation, refer to the signal generator by its model number and full serial number. With this information, the Agilent representative can determine whether your unit is still within its warranty period.

Returning a Signal Generator to Agilent Technologies

To return your signal generator to Agilent Technologies for servicing, follow these steps:

1. Gather as much information as possible regarding the signal generator's problem.
2. Call the phone number listed on the internet (<http://www.agilent.com/find/assist>) that is specific to your geographic location. If you do not have access to the internet, refer to the phone number listed on [page 15](#).

After sharing information regarding the signal generator and its condition, you will receive information regarding where to ship your signal generator for repair.

3. Ship the signal generator in the original factory packaging materials, if available, or use similar packaging to properly protect the signal generator.

3 Operation Verification

Operation verification is a series of tests that, when completed, will either ensure that the signal generator is operating correctly, or will assist in pointing to the problem area. Operation verification does not ensure performance to specifications, but should provide a level of confidence that the signal generator is operating correctly within a minimum amount of time.

Operation verification is appropriate for incoming inspection after repair (when a full calibrated performance is not required), or whenever the integrity of the signal generator is in question. Individual tests may be performed in any order, however, the order of the list below is recommended.

Perform the following tests for operation verification:

1. [“Performing a Self-Test” on page 18](#)
2. [“Checking the Maximum Leveled Power” on page 20](#)
3. [“Checking the Output Power” on page 23](#)

NOTE Throughout this section, all references to pressing the **Preset** hardkey assume that the preset state is set to normal (factory-defined preset state).

To ensure that the preset state is set to normal, press **Utility > Power On/Preset > Preset Normal User** until Normal is highlighted.

Performing a Self-Test

The self-test is a series of internal tests that checks different signal generator functions. If this test fails, refer to “Self-Test Failure” on page 19 for further instructions.

Perform the following procedure to run a self-test:

1. Disconnect all external cables, including GPIB, LAN, and RS-232 cables.
2. Press **Preset > Utility > Instrument Info/Help Mode > Self Test**.

The following message should appear:

- The current status of the self-test is: Incomplete. Not all tests have been run.
3. Press **Run Complete Self Test**.

While the self-test is running, an activity bar is displayed on the screen indicating the test progress.

If **Abort** is pressed while the self-test are running, the following message will be displayed:

- The current status of the self-test is: Incomplete. Not all tests have been run.

When the self-test is complete, one of the following messages will be displayed:

- The current status of the self-test is: Passed
- The current status of the self-test is: Failure. One or more tests have failed. System diagnostics indicate this test as the root failure: xxx

The number of tests that passed and failed are displayed in the lower left-hand corner of the display. If the signal generator fails only one test, the display shows the title of the failed test. If the signal generator fails more than one test, the test number of the most significant failure is shown.

Self-Test Failure

If a self-test failure occurs, perform the following procedure:

1. Make sure all external cables, including GPIB, LAN, and RS-232 cables, are disconnected from the signal generator and perform the self-test again.
2. If the self-test continues to fail, send the signal generator to an Agilent service center for repair, with a detailed description of the failed test(s) and any other error messages that appeared on the display.

See [“Returning a Signal Generator to Agilent Technologies”](#) on page 16 for return instructions.

Checking the Maximum Leveled Power

Perform the following procedure to check the maximum leveled power:

1. Press **Preset**.
2. Attach a 50 Ω load to the RF OUTPUT. A power sensor, attenuator, or 50 Ω termination is an example of a 50 Ω load.
3. Press **RF On/Off**. The **RF On** annunciator is now displayed.
4. Press **Mod On/Off**. The **Mod Off** annunciator is now displayed.
5. Press **Amplitude** and enter a value from [Table 3-1](#) that is applicable to your model and options.
6. If the E82x7D PSG signal generator is equipped with Option 007, press **Sweep /List > Sweep Type > Step > Configure Step Sweep**.
If the E82x7D PSG signal generator is not equipped with Option 007, press **Sweep /List > Configure Step Sweep**.
7. Press **Freq Start** and enter the start frequency value listed in [Table 3-1](#) that corresponds to the amplitude value entered in step 5.
8. Press **Freq Stop** and enter the corresponding stop frequency listed in [Table 3-1](#).
9. Press **# Points** and enter the number of corresponding points listed in [Table 3-1](#).
10. Press **Return > Sweep > Freq**. The **SWEEP** annunciator is now on and a continuous sweep will begin. During the sweep, the progress bar becomes active on the display, indicating the status of the current sweep.
11. Watch the display and ensure that the **Unlevel** annunciator does not appear at any time during a full sweep.
The **Unlevel** annunciator may turn on and off, or remain on; both conditions indicate a failure. If this occurs, refer to [“Maximum Leveled Power Check Failure” on page 20](#) for further instructions.
12. Press **Sweep > Off**.
13. Repeat steps 5-12 for each frequency range, specific to your model number and options.

Maximum Leveled Power Check Failure

If a maximum leveled power check fails, perform the following procedure:

1. Verify the limits for that particular option using the data sheet.
2. If the **Unlocked** annunciator is displayed, refer to the troubleshooting section of the Service Guide.

3. Ensure that the RF OUTPUT connector is connected to a 50Ω load.
4. Ensure that the power level entered corresponds to the value listed in [Table 3-1](#).
5. Refer to [Table 3-2](#) for the recommended equipment and measure the output power.

If the measured power level is more than the power level listed in [Table 3-1](#), turn the front panel knob counterclockwise until the measured power level equals the power level in [Table 3-1](#).

6. Note the signal generator front-panel amplitude value and use it to repeat the maximum leveled power check.

If all of the above steps are followed and the check continues to fail, contact the nearest Agilent Technologies call center for assistance. Refer to [“Contacting Agilent Sales and Service Offices”](#) on [page 15](#) for contact information.

Table 3-1 Frequency and Power Level Limits

| Instrument Option | Amplitude | | Start Frequency | Stop Frequency | # Points |
|--|-----------|------------|-----------------|----------------|----------|
| | Standard | Option 1EA | | | |
| E8257D Option 520 | 13 dBm | 16 dBm | 250 kHz | 3.2 GHz | 50 |
| | 13 dBm | 20 dBm | 3.21 GHz | 20 GHz | 200 |
| E8257D Option 540 | 9 dBm | 15 dBm | 250 kHz | 3.2 GHz | 50 |
| | 9 dBm | 18 dBm | 3.21 GHz | 20 GHz | 200 |
| | 9 dBm | 14 dBm | 20.1 GHz | 40 GHz | 200 |
| E8257D Option 550 and Option 567 | 5 dBm | 14 dBm | 250 kHz | 3.2 GHz | 50 |
| | 5 dBm | 16 dBm | 3.21 GHz | 20 GHz | 200 |
| | 5 dBm | 14 dBm | 20.1 GHz | 60 GHz | 200 |
| | 5 dBm | 12 dBm | 60.1 GHz | 67 GHz | 100 |
| E8267D Option 520 | 13 dBm | N/A | 250 kHz | 3.2 GHz | 50 |
| | 18 dBm | N/A | 3.21 GHz | 20 GHz | 200 |
| E8267D Option 532 and Option 544 | 12 dBm | N/A | 250 kHz | 3.2 GHz | 50 |
| | 14 dBm | N/A | 3.21 GHz | 20 GHz | 200 |
| | 12 dBm | N/A | 20.1 GHz | 40 GHz | 200 |
| | 10 dBm | N/A | 40.1 GHz | 44 GHz | 50 |

Operation Verification
 Checking the Maximum Levelled Power

Table 3-1 Frequency and Power Level Limits

| Instrument Option | Amplitude | | Start Frequency | Stop Frequency | # Points |
|---|-----------|------------|-----------------|----------------|----------|
| | Standard | Option 1EA | | | |
| E8257D Option 520 With Option 1E1 | 11 dBm | 15 dBm | 250 kHz | 3.2 GHz | 50 |
| | 11 dBm | 18 dBm | 3.21 kHz | 20 GHz | 200 |
| E8257D Option 540 With Option 1E1 | 7 dBm | 14 dBm | 250 kHz | 3.2 GHz | 50 |
| | 7 dBm | 16 dBm | 3.21 kHz | 20 GHz | 200 |
| | 7 dBm | 12 dBm | 20.1 GHz | 40 GHz | 200 |
| E8257D Option 550 and Option 567 With Option 1E1 | 3 dBm | 13 dBm | 250 kHz | 3.2 GHz | 50 |
| | 3 dBm | 14dBm | 3.21 kHz | 20 GHz | 200 |
| | 3 dBm | 10 dBm | 20.1 GHz | 60 GHz | 200 |
| | 3 dBm | 8 dBm | 60.1 GHz | 67 GHz | 100 |

NOTE For Option 1EH and Option UNW, use the data sheet to determine low band power level limits.

Checking the Output Power

This test verifies the CW output power from the signal generator. If this test fails, refer to “[Problems with Output Power](#)” on page 30 for further instructions.

[Table 3-2](#) shows the recommended equipment for use with the E8257D signal generator when performing this test.

[Table 3-3](#) shows the recommended equipment for use with the E8367D signal generator when performing this test.

Table 3-2 Recommended Equipment for the E8257D

| E8257D Option 520 | E8257D Option 540 | E8257D Option 550 | E8257D Option 567 | Test Equipment | Recommended Agilent Test Equipment |
|-------------------|-------------------|-------------------|-------------------|-----------------------------------|---|
| ✓ | ✓ | ✓ | ✓ | Power Meter | Agilent E4418B E-Series power meter or Agilent E4419A/B E-Series power meter |
| ✓ | ✓ | ✓ | ✓ | Power Sensor, Input: Type-N (m) | Agilent E9304A E-Series power sensor or Agilent 8482A power sensor |
| ✓ | | | | Power Sensor, Input: APC 3.5 (m) | Agilent E4413A E-Series power sensor |
| ✓ | ✓ | ✓ | | Power Sensor, Input: 2.4 mm (m) | Agilent 8487A Option H84 power sensor (Option H84 adds a Standards Lab Calibration) |
| | | | ✓ | V-Band Power Sensor | Agilent V8446A V-Band Power Sensor |
| | ✓ | | | Adapter, 2.4 mm (f) to Type-N (f) | Agilent 11903B 2.4 mm (f) to Type-N (f) adapter |
| | ✓ | ✓ | ✓ | Adapter, 2.4 mm (f) to (f) | Agilent 11900B 2.4 mm (f) to (f) adapter |

Table 3-2 Recommended Equipment for the E8257D

| E8257D Option 520 | E8257D Option 540 | E8257D Option 550 | E8257D Option 567 | Test Equipment | Recommended Agilent Test Equipment |
|-------------------|-------------------|-------------------|-------------------|--------------------------------|---|
| ✓ | | | | Adapter, 3.5 (f) to (f) | Agilent 1250-1749 APC 3.5 (f) to (f) adapter |
| ✓ | | | | Adapter, 3.5 (f) to Type-N (m) | Agilent 1250-1744 APC 3.5 (f) to Type-N (m) adapter |
| | | | ✓ | Adapter, 1.85 mm (f) to V-Band | Agilent V281A Coax 1.85 mm (f) to V-Band |

Table 3-3 Recommended Equipment for the E8267D

| E8267D Option 520 | E8267D Option 532 | E8667D Option 544 | Test Equipment | Recommended Agilent Test Equipment |
|-------------------|-------------------|-------------------|----------------------------------|---|
| ✓ | ✓ | ✓ | Power Meter | Agilent E4418B E-Series power meter or Agilent E4419A/B E-Series power meter |
| ✓ | ✓ | ✓ | Power Sensor, Input: Type-N (m) | Agilent E9304A E-Series power sensor or Agilent 8482A power sensor |
| ✓ | | | Power Sensor, Input: APC 3.5 (m) | Agilent E4413A E-Series power sensor |
| ✓ | ✓ | ✓ | Power Sensor, Input: 2.4 mm (m) | Agilent 8487A Option H84 power sensor Option H84 adds a Standards Lab Calibration |
| | | ✓ | Adapter, 2.4 mm (f) to (f) | Agilent 11900B 2.4 mm (f) to (f) adapter |

Table 3-3 Recommended Equipment for the E8267D


| E8267D Option 520 | E8267D Option 532 | E8667D Option 544 | Test Equipment | Recommended Agilent Test Equipment |
|-------------------------|-------------------------|-------------------------|--|--|
| ✓ | | | Adapter, APC 3.5 (f) to (f) | Agilent 1250-1749 APC 3.5 (f) to (f) adapter |
| ✓ | | | Adapter, APC 3.5 (f) to Type-N (m) | Agilent 1250-1744 APC 3.5 (f) to Type-N (m) adapter |

Operation Verification


Checking the Output Power

Perform the following procedure to check the signal generator output power:

1. Zero and calibrate the power sensor to the power meter as shown:

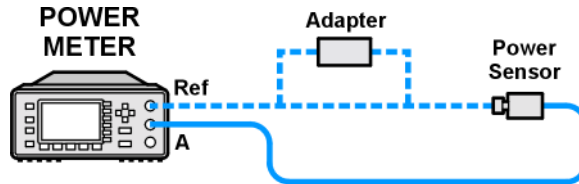

2. Connect the equipment as shown:

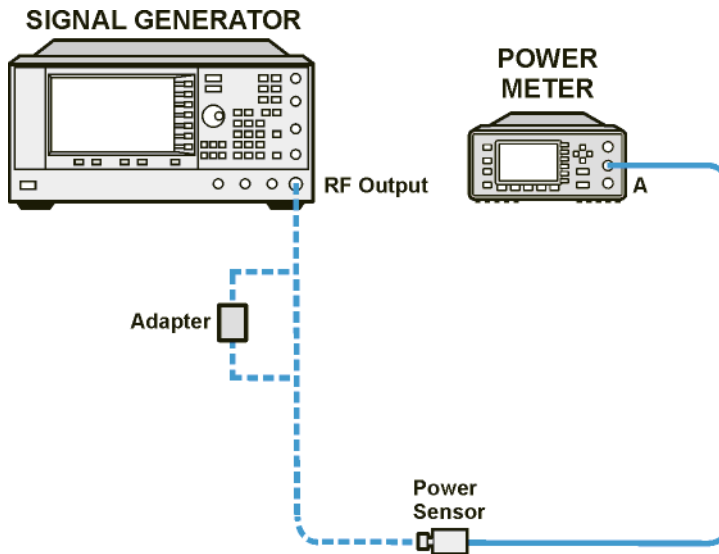

3. Press **Preset**.
4. Press **RF On/Off**. The **RF On** annunciator is now displayed.
5. Press **Mod On/Off**. The **Mod Off** annunciator is now displayed.
6. Press **Frequency** and enter the first frequency value listed in [Table 3-1](#).
7. Press **Amplitude** and enter the amplitude value for your option and frequency value.
8. Measure the power level.
9. Repeat step 6 through 8 and measure the power levels for each remaining frequency listed in [Table 3-4](#) thru [Table 3-6](#). Record any power levels not within the acceptable limits.

Table 3-4 Leveled Output Power Limits, E8257D

| E8257D | | | | | | | |
|------------|-----------|-----|--------|------------|-----------|-----|--------|
| Option 520 | | | | Option 540 | | | |
| Frequency | Amplitude | | Limits | Frequency | Amplitude | | Limits |
| | Option | dBm | dB | | Option | dBm | dB |
| 250 kHz | None | 13 | ±0.6 | 250 kHz | None | 9 | ±0.6 |
| | 1EA | 16 | ±0.6 | | 1EA | 15 | ±0.6 |
| | 1E1 | 11 | ±0.6 | | 1E1 | 7 | ±0.6 |
| | 1E1 & 1EA | 15 | ±0.6 | | 1E1 & 1EA | 14 | ±0.8 |
| 3.2 GHz | None | 13 | ±0.8 | 3.2 GHz | None | 9 | ±0.8 |
| | 1EA | 16 | ±0.8 | | 1EA | 15 | ±0.8 |
| | 1E1 | 11 | ±0.8 | | 1E1 | 7 | ±0.8 |
| | 1E1 & 1EA | 15 | ±0.8 | | 1E1 & 1EA | 14 | ±0.8 |
| 20 GHz | None | 13 | ±0.8 | 20 GHz | None | 9 | ±0.9 |
| | 1EA | 20 | ±0.8 | | 1EA | 18 | ±1.0 |
| | 1E1 | 11 | ±0.8 | | 1E1 | 7 | ±0.9 |
| | 1E1 & 1EA | 18 | ±0.8 | | 1E1 & 1EA | 16 | ±1.0 |
| | | | | 40 GHz | None | 9 | ±0.9 |
| | | | | | 1EA | 14 | ±1.0 |
| | | | | | 1E1 | 7 | ±0.9 |
| | | | | | 1E1 & 1EA | 12 | ±1.0 |

Table 3-5 Leveled Output Power Limits, E8257D cont.

| E8257D | | | | | | | |
|------------|-----------|-----|--------|------------|-----------|-----|--------|
| Option 550 | | | | Option 567 | | | |
| Frequency | Amplitude | | Limits | Frequency | Amplitude | | Limits |
| | Option | dBm | dB | | Option | dBm | dB |
| 250 kHz | None | 9 | ±0.6 | 250 kHz | None | 9 | ±0.6 |
| | 1EA | 15 | ±0.6 | | 1EA | 15 | ±0.6 |
| | 1E1 | 7 | ±0.6 | | 1E1 | 7 | ±0.6 |
| | 1E1 & 1EA | 14 | ±0.8 | | 1E1 & 1EA | 14 | ±0.8 |
| 3.2 GHz | None | 9 | ±0.8 | 3.2 GHz | None | 9 | ±0.8 |
| | 1EA | 15 | ±0.8 | | 1EA | 15 | ±0.8 |
| | 1E1 | 7 | ±0.8 | | 1E1 | 7 | ±0.8 |
| | 1E1 & 1EA | 14 | ±0.8 | | 1E1 & 1EA | 14 | ±0.8 |
| 20 GHz | None | 9 | ±0.9 | 20 GHz | None | 9 | ±0.9 |
| | 1EA | 18 | ±1.0 | | 1EA | 18 | ±1.0 |
| | 1E1 | 7 | ±0.9 | | 1E1 | 7 | ±0.9 |
| | 1E1 & 1EA | 16 | ±1.0 | | 1E1 & 1EA | 16 | ±1.0 |
| 40 GHz | None | 9 | ±0.9 | 40 GHz | None | 9 | ±0.9 |
| | 1EA | 14 | ±1.0 | | 1EA | 14 | ±1.0 |
| | 1E1 | 7 | ±0.9 | | 1E1 | 7 | ±0.9 |
| | 1E1 & 1EA | 12 | ±1.0 | | 1E1 & 1EA | 12 | ±1.0 |
| 50 GHz | None | 5 | ±1.2 | 50 GHz | None | 5 | ±1.2 |
| | 1EA | 14 | ±1.2 | | 1EA | 14 | ±1.2 |
| | 1E1 | 3 | ±1.2 | | 1E1 | 3 | ±1.2 |
| | 1E1 & 1EA | 10 | ±1.2 | | 1E1 & 1EA | 10 | ±1.2 |

Table 3-5 Leveled Output Power Limits, E8257D cont.

| Option 550 | | | | Option 567 | | | |
|------------|-----------|-----|--------|------------|-----------|-----|--------|
| Frequency | Amplitude | | Limits | Frequency | Amplitude | | Limits |
| | Option | dBm | dB | | Option | dBm | dB |
| 60 GHz | None | 5 | ±1.2 | 60 GHz | None | 5 | ±1.2 |
| | 1EA | 14 | ±1.2 | | 1EA | 14 | ±1.2 |
| | 1E1 | 3 | ±1.2 | | 1E1 | 3 | ±1.2 |
| | 1E1 & 1EA | 10 | ±1.2 | | 1E1 & 1EA | 10 | ±1.2 |
| 67 GHz | None | 5 | ±1.2 | 67 GHz | None | 5 | ±1.2 |
| | 1EA | 12 | ±1.2 | | 1EA | 12 | ±1.2 |
| | 1E1 | 3 | ±1.2 | | 1E1 | 3 | ±1.2 |
| | 1E1 & 1EA | 10 | ±1.2 | | 1E1 & 1EA | 10 | ±1.2 |

Table 3-6 Leveled Output Power Limits, E8267D

| E8267D | | | | | | | |
|------------|-----------|-----|--------|------------------|-----------|-----|--------|
| Option 520 | | | | Option 532 & 544 | | | |
| Frequency | Amplitude | | Limits | Frequency | Amplitude | | Limits |
| | Option | dBm | dB | | Option | dBm | dB |
| 250 kHz | None | 15 | ±0.6 | 250 kHz | None | 12 | ±1.0 |
| 3.2 GHz | None | 15 | ±0.8 | 3.2 GHz | None | 12 | ±1.0 |
| 20 GHz | None | 18 | ±0.8 | 20 GHz | None | 14 | ±1.0 |
| | | | | 40 GHz | None | 12 | ±1.0 |
| | | | | 44 GHz | None | 10 | ±0.9 |

NOTE Limit values are due to power meter uncertainty.

Problems with Output Power

If a problem occurs when verifying output power levels, perform the following procedure:

1. Verify the power sensor being used in this test is the appropriate sensor.
2. Verify the power sensor calibration factors, if required, are correct.
3. Verify the power sensor is properly calibrated to the power meter.

If the problem continues, perform a Power Level Accuracy performance test. Refer to the troubleshooting section of the *Service Guide*.

4 Regulatory Information

Statement of Compliance

This product has been designed and tested in accordance with IEC Publication 61010, *Safety Requirements for Electronic Measuring Apparatus*, and has been supplied in a safe condition. The instruction documentation contains information and warnings which must be followed by the user to ensure safe operation and to maintain the product in a safe condition.

Assistance

Product maintenance agreements and other customer assistance agreements are available for Agilent Technologies products. For any assistance, contact Agilent Technologies. (Refer to “[Contacting Agilent Sales and Service Offices](#)” on page 15.)

Certification

Agilent Technologies certifies that this product met its published specifications at the time of shipment from the factory. Agilent Technologies further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology, to the extent allowed by the Institute’s calibration facility, and to the calibration facilities of other International Standards Organization members.

Compliance with German Noise Requirements

This is to declare that this instrument is in conformance with the German Regulation on Noise Declaration for Machines (Laermangabe nach der Maschinenlaermverordnung -3.GSGV Deutschland).

Table 4-1 German Noise Requirements

| Acoustic Noise Emission/Geraeuschemission | |
|---|---------------------|
| LpA < 70 dB | LpA < 70 dB |
| Operator position | am Arbeitsplatz |
| Normal position | normaler Betrieb |
| per ISO 7779 | nach DIN 45635 t.19 |

Compliance with Canadian EMC Requirements

This is to declare that this ISM device complies with Canadian ICES-001. (Cet appareil ISM est conforme a la norme NMB du Canada.)

Regulatory Information
Compliance with Canadian EMC Requirements

A

AC power cord, 6, 7
AC symbol, 1
accessories, 12
address, GPIB
altitude requirements, 5
assistance, 32
Australian Communications Authority (C-tick) mark, 1

B

brightness adjustment, 8

C

Canadian EMC requirements, 33
Canadian Standards Association (CSA) mark, 1
CE mark, 1
cleaning, 14
configure
 display, 8
contrast adjustment, 8
CSA mark, 1
C-tick mark, 1

D

DHCP configuration, 11
display adjustments, 8, 9
documentation, 12

E

electrical requirements, 5
environmental requirements, 5
equipment, test, 23, 24
European Community (CE) trademark, 1

F

front handle kit, 12

G

German noise requirements, 32
GPIB configuration

H

handles, kits, 12
holes, ventilation, 5
hostname configuration, 10
humidity requirements, 5

I

IEC Publication 61010, 32
instruction manual symbol, 1
inverse video adjustment, 8
IP address, setting, 10
ISM1-A symbol, 1

K

kits, 12

L

LAN configuration, 10
light adjustment, 9

M

maintenance agreements, 32
Manual Configuration, 10
manual configuration, 10
maximum leveled power, checking, 20

O

operation verification, 17
output power, checking, 23

P

parallel interface. *See* GPIB configuration
power on symbol, 1
power, checking, 20, 23

R

rack mount kits, 12
remote operation, 9, 10
requirements, 5, 32, 33
returning a signal generator, 16
RS-232 configuration, 11

S

screen saver adjustment, 8
self-test, 18
service, Agilent sales and service offices, 15
shipment, checking, 4
standby symbol, 1
symbols, 1

T

temperature requirements, 5

Index

troubleshooting

maximum leveled power, [20](#)

output power, [23](#)

self-test, [18](#)

V

ventilation requirements, [5](#)

verification, operation, [17](#)