


Notice the following information will help you solve your problems.  
Keep this IMPORTANT sheet together with the INSTRUCTIONS book.

- **After installing the unit.**  
→ Follow the procedure **A** described below.
- **If the unit does not operate.**  
→ Follow the procedure **A** described below.
- **If a CD is not ejected from the loading slot.**  
→ Follow the procedure **B** described below. (If the procedure **B** does not work, try the procedure **A**.)
- **If a CD is not recognized (“NO DISC” appears on the display) even though there is a CD in the loading slot.**  
→ Follow the procedure **B** described below. (If the procedure **B** does not work, try the procedure **A**.)

## **A** To reset the microcomputer

Press the reset button on the front panel using a ball-point pen or a similar tool. This will reset the built-in microcomputer.

**NOTE:** Your preset adjustments — such as preset channels or sound adjustments — will also be erased.

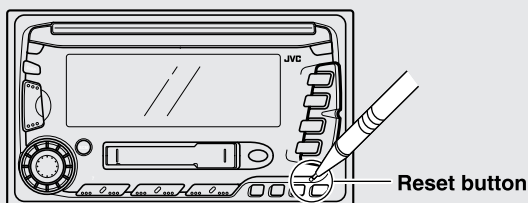

## **B** To eject a CD by force

Press and hold both the POWER / ATT (⏻/ATT) and ▲ buttons at the same time for several seconds until the “CD EJECT” appears on the display.

