


Notice the following information will help you solve the problems.
Keep this IMPORTANT sheet together with the INSTRUCTIONS book.

- **After installing the unit**
→ Follow the procedure **[A]** described below.
- **If the unit does not operate**
→ Follow the procedure **[A]** described below.
- **If a CD is not ejected from the loading slot**
 - ① “EJECT ERR” or “EJECT ERROR” appears on the display
→ Follow the procedure **[B]** described below. (If the procedure **[B]** does not work, try the procedure **[A].**)
 - ② No message appears on the display
→ Follow the procedure **[C]** described below.
- **If a CD is not recognized (the source does not change to the CD) even though there is a CD in the loading slot**
→ Follow the procedure **[C]** described below. (If the procedure **[C]** does not work, try the procedure **[A].**)

[A] To reset the microcomputer


Press the reset button on the front panel using a ball-point pen or a similar tool.
This will reset the built-in microcomputer.

NOTE: Your preset adjustments — such as preset channels or sound adjustments — will also be erased.

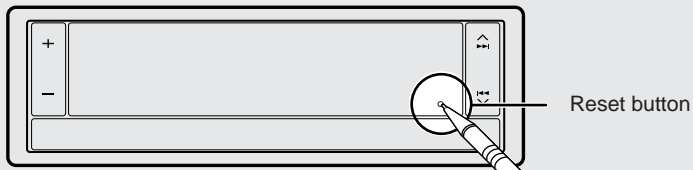

[B] To eject a CD by force

Press and hold **-** of the **+ / -** button until CD ejects.

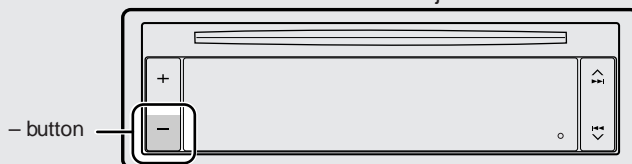

[C] To eject a CD by force

While holding **^ >>>**, press the reset button. Release the reset button, then release **^ >>>**. (Be careful not to drop the CD when ejecting.)

