

# JVC


## SERVICE MANUAL

### COLOUR TELEVISION

BASIC CHASSIS

CH

**AV-29W83 /BK AV-29W83B /VT**  
**AV-29W93 /BK AV-29W83 /VT**  
**AV-29W93B /BK**

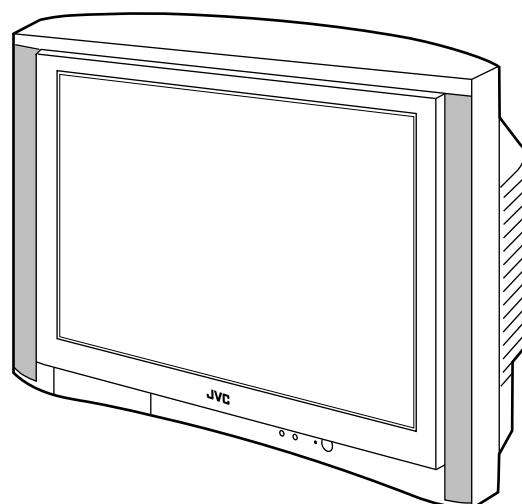

RM-C1016-1H RM-C1011-1H RM-C1012-1H RM-C1015-1H RM-C1014-1H  
 [AV-29W83/BK] [AV-29W93/BK] [AV-29W93B/BK] [AV-29W83B/VT] [AV-29W83/VT]

## CONTENTS

|   |     |
|---|-----|
| ■ SPECIFICATIONS .....                      | 2   |
| ■ OPERATING INSTRUCTIONS (APPENDIX) .....   |     |
| ■ SAFETY PRECAUTIONS .....                  | 3   |
| ■ FEATURES .....                            | 4   |
| ■ FUNCTIONS .....                           | 5   |
| ■ SPECIFIC SERVICE INSTRUCTIONS .....       | 6   |
| ■ SERVICE ADJUSTMENTS .....                 | 14  |
| ■ STANDARD CIRCUIT DIAGRAM (APPENDIX) ..... | 2-1 |
| ■ PARTS LIST .....                          | 41  |

# SPECIFICATIONS

| Items                           |             | Contents  |  |  |  |                           |
|---------------------------------|-------------|---|--|--|--|---------------------------|
|                                 |             | AV-29W83/BK   | AV-29W93/BK  | AV-29W93B/BK   | AV-29W83B/VT   | AV-29W83/VT               |
| Dimensions (W × H × D)          |             | 81.2cm x 58.42cm x 51.8cm   |  |  |  |                           |
| Mass                            |             | 45kg  |  | 47kg   |  | 45kg                      |
| TV RF System                    |             | B, G  | B, G, I, D, K, K1, M   |  | B, G, D, K, K1, M  |                           |
| Colour System                   | TV Mode     | PAL / SECAM   | PAL / SECAM / NTSC3.58 / NTSC4.43  |  |  |                           |
|                                 | VIDEO Mode  | PAL / SECAM / NTSC3.58 / NTSC4.43   |  |  |  |                           |
| Stereo System                   |             | Playback Only   | A2/NICAM (B / G, I, D / K) System  |  | Playback Only  |                           |
| Receiving Frequency             | VHF (VL)    | 46.25MHz – 140.25MHz (AS0 – S6)   |  |  | 46.25MHz – 168.25MHz (AS0 – S6)                          |                           |
|                                 | VHF (VH)    | 147.25MHz – 423.25MHz (S7 – S36)  |  |  | 175.25MHz – 463.25MHz (S7 – S36)                         |                           |
|                                 | UHF         | 431.25MHz – 863.25MHz (S37 – CHINA 57)  |  |  | 471.25MHz – 863.25MHz (S37 – CHINA 57)                   |                           |
|                                 | CATV        | ● Cable TVs of Mid (X-Z, S1-S10)<br>Super (S11-S20) & Hyper (S21-S41) bands receivable  |  |  |  |                           |
| Intermediate Frequency          | VIF Carrier | 38.0MHz   |  |  |  |                           |
|                                 | SIF Carrier | 32.5MHz (5.5MHz)  | 31.5MHz (6.5MHz)<br>32.0MHz (6.0MHz)<br>32.5MHz (5.5MHz)<br>33.5MHz (4.5MHz) |  | 31.5MHz (6.5MHz)<br>32.5MHz (5.5MHz)<br>33.5MHz (4.5MHz) |                           |
| Colour Sub Carrier Frequency    |             | PAL (4.43MHz), SECAM (4.40625MHz / 4.25MHz)<br>NTSC (3.58MHz / 4.43MHz)   |  |  |  |                           |
| Aerial Input Terminal           |             | 75Ω Unbalanced  |  |  |  |                           |
| Power Input                     |             | AC120 – 240V, 50 / 60Hz   |  |  |  |                           |
| Power Consumption               |             | 175W (Max.) / 116W (Avg.)   |  | 212W (Max.) / 133W (Avg.)                              |  | 175W (Max.) / 116W (Avg.) |
| Picture Tube                    |             | Visible size : 69cm measured diagonally   |  |  |  |                           |
| High Voltage                    |             | 32kV+1/ –1.5kV (at cut-off in service mode)   |  |  |  |                           |
| Speaker                         |             | 6.5 × 13cm Oval type × 2  |  | 6.5 × 13cm Oval type × 2<br>φ 13cm (BASS BLASTER UNIT) |  | 6.5 × 13cm Oval type × 2  |
| Audio Output                    |             | 7W + 7W   |  | 7W + 7W +13W   |  | 7W + 7W                   |
| Video / Audio Input (1 / 2 / 3) |             | Video(1,3) : 1Vp-p, 75Ω (RCA pin jack)<br>Audio(1,2,3) : 500mVrms ( -4dBs ), High Impedance (RCA pin jack)<br>Component Input ( Input 2 )<br>Y : 1Vp-p positive (negative sync provided, when terminated with 75Ω)<br>Cb/CR : 0.7Vp-p 75Ω |  |  |  |                           |
| Video/ Audio Output             |             | 1Vp-p, 75Ω (RCA pin jack)<br>500mVrms(-4dBs)<br>Low impedance (400Hz when modulated 100%) (RCA pin jack)  |  |  |  |                           |
| Headphone Jack                  |             | Stereo mini jack (3.5φ)   |  |  |  |                           |
| Remote Control Unit             |             | RM-C1016-1H   | RM-C1011-1H  | RM-C1012-1H  | RM-C1015-1H  | RM-C1014-1H               |
|                                 |             | (Battery size: AA/R06/UM-3 × 2)   |  |  |  |                           |

*Design & specifications are subject to change without notice.*

# SAFETY PRECAUTIONS

- The design of this product contains special hardware, many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
- Alterations of the design or circuitry of the products should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
- Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the parts list of Service manual. **Electrical components having such features are identified by shading on the schematics and by (Δ) on the parts list in Service manual.** The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the parts list of Service manual may cause shock, fire, or other hazards.
- Don't short between the LIVE side ground and ISOLATED (NEUTRAL) side ground or EARTH side ground when repairing.**  
Some model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE : ( ⊥ ) side GND, the ISOLATED (NEUTRAL) : ( ⊕ ) side GND and EARTH : ( ⊕ ) side GND. Don't short between the LIVE side GND and ISOLATED (NEUTRAL) side GND or EARTH side GND and never measure the LIVE side GND and ISOLATED (NEUTRAL) side GND or EARTH side GND at the same time with a measuring apparatus (oscilloscope etc.). If above note will not be kept, a fuse or any parts will be broken.
- If any repair has been made to the chassis, it is recommended that the B1 setting should be checked or adjusted (See ADJUSTMENT OF B1 POWER SUPPLY).
- The high voltage applied to the picture tube must conform with that specified in Service manual. Excessive high voltage can cause an increase in X-Ray emission, arcing and possible component damage, therefore operation under excessive high voltage conditions should be kept to a minimum, or should be prevented. If severe arcing occurs, remove the AC power immediately and determine the cause by visual inspection (incorrect installation, cracked or melted high voltage harness, poor soldering, etc.). To maintain the proper minimum level of soft X-Ray emission, components in the high voltage circuitry including the picture tube must be the exact replacements or alternatives approved by the manufacturer of the complete product.
- Do not check high voltage by drawing an arc. Use a high voltage meter or a high voltage probe with a VTVM. Discharge the picture tube before attempting meter connection, by connecting a clip lead to the ground frame and connecting the other end of the lead through a 10kΩ 2W resistor to the anode button.
- When service is required, observe the original lead dress. Extra precaution should be given to assure correct lead dress in the high voltage circuit area. Where a short circuit has occurred, those components that indicate evidence of overheating should be replaced. Always use the manufacturer's replacement components.

## 9. Isolation Check

### (Safety for Electrical Shock Hazard)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the cabinet (antenna terminals, video/audio input and output terminals, Control knobs, metal cabinet, screw heads, earphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

### (1) Dielectric Strength Test

The isolation between the AC primary circuit and all metal parts exposed to the user, particularly any exposed metal part having a return path to the chassis should withstand a voltage of 3000V AC (r.m.s.) for a period of one second.

(... Withstand a voltage of 1100V AC (r.m.s.) to an appliance rated up to 120V, and 3000V AC (r.m.s.) to an appliance rated 200V or more, for a period of one second.)

This method of test requires a test equipment not generally found in the service trade.

### (2) Leakage Current Check


Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground (water pipe, etc.). Any leakage current must not exceed 0.5mA AC (r.m.s.).

However, in tropical area, this must not exceed 0.2mA AC (r.m.s.).

#### ● Alternate Check Method

Plug the AC line cord directly into the AC outlet (do not use a line isolation transformer during this check.). Use an AC voltmeter having 1000 ohms per volt or more sensitivity in the following manner. Connect a 1500Ω 10W resistor paralleled by a 0.15μF AC-type capacitor between an exposed metal part and a known good earth ground (water pipe, etc.). Measure the AC voltage across the resistor with the AC voltmeter. Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75V AC (r.m.s.). This corresponds to 0.5mA AC (r.m.s.).

However, in tropical area, this must not exceed 0.3V AC (r.m.s.). This corresponds to 0.2mA AC (r.m.s.).

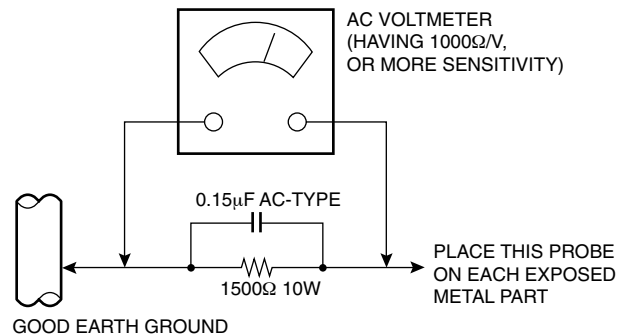

# FEATURES

- New chassis design enables use of an interactive on-screen control.
- Pure flat CRT produces fine textured picture in every detail.
- Wide range voltage (120V ~ 240V) for AC power input.
- With AUDIO/VIDEO/COMPONENT input terminals.
- I<sup>2</sup> C bus control utilizes single chip ICs.
- By means of AUTO PROGRAM, the TV stations can be selected automatically and the TV channels can also be rearranged automatically.
- Built-in DIGITAL ECO MODE (ECONOMY, ECOLOGY).  
In accordance with the brightness in a room, the brightness and/or contrast of the picture can be adjusted automatically to make the optimum picture which is easy on the eye.
- Built-in OFF TIMER & RETURN +.

## MAIN DIFFERENCE LIST

### [AV-29W83/BK, AV-29W93/BK, AV-29W93B/BK]


| △ | MODEL No.<br>Part Name | AV-29W83/BK    | AV-29W93/BK    | AV-29W93B/BK   |
|---|------------------------|----------------|----------------|----------------|
| △ | MAIN PWB               | SCH-1118A-BK   | SCH-1119A-BK   | SCH-1120A-BK   |
| △ | REAR COVER             | GG10192-001B-H | ←              | GG10192-004B-H |
|   | FRONT CABINET ASS'Y    | GG10189-008A-H | GG10189-005A-H | ←              |
|   | REMOTE CONTROL UNIT    | RM-C1016-1H    | RM-C1011-1H    | RM-C1012-1H    |

### [AV-29W83B/VT, AV-29W83/VT]

| △ | MODEL No.<br>Part Name | AV-29W83B/VT    | AV-29W83/VT     |
|---|------------------------|-----------------|-----------------|
| △ | MAIN PWB               | SCH-1312A-CK    | SCH-1310A-V2    |
| △ | REAR COVER             | GG10192-003B-HK | GG10192-002B-HK |
|   | FRONT CABINET ASS'Y    | GG10189-007A-HK | GG10189-009A-HK |
| △ | RATING LABEL           | GG20016-023A-E  | GG20016-022A-E  |
|   | REMOTE CONTROL UNIT    | RM-C1015-1H     | RM-C1014-1H     |


# FUNCTIONS

## ■ FRONT PANEL

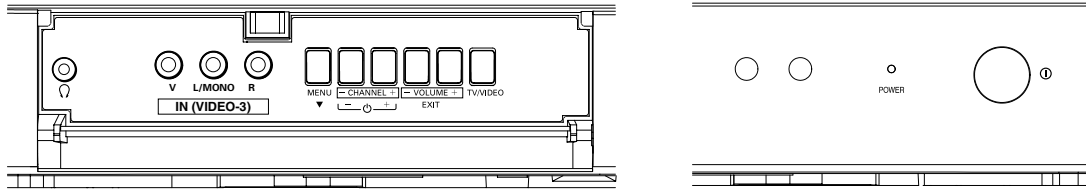


## ■ REAR PANEL

[AV-29W83/BK, AV-29W93/BK, AV-29W83/VT]

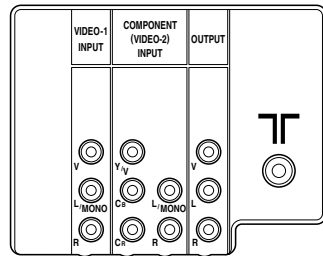


[AV-29W93B/BK, AV-29W83B/VT]

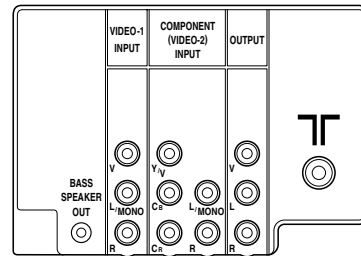


## ■ REMOTE CONTROL UNIT


RM-C1016-1H  
[AV-29W83/BK]

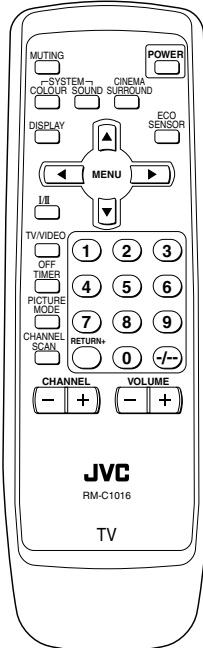


RM-C1011-1H  
[AV-29W93/BK]

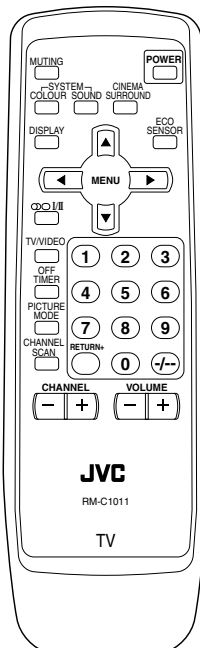


RM-C1012-1H  
[AV-29W93B/BK]

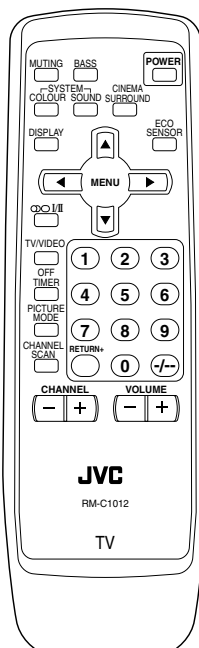

RM-C1015-1H  
[AV-29W83B/VT]

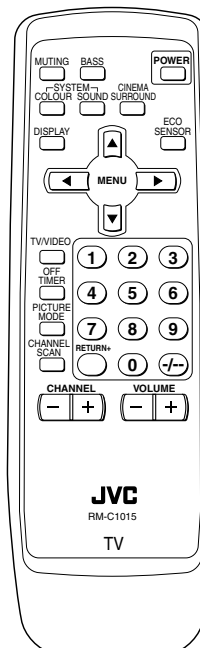

RM-C1014-1H  
[AV-29W83/VT]

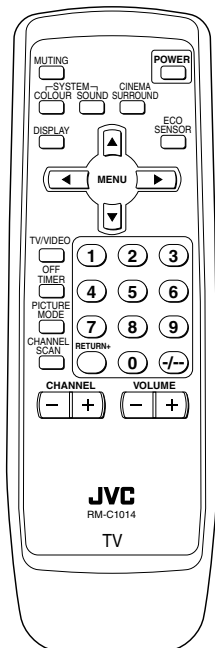

# SPECIFIC SERVICE INSTRUCTIONS

## DISASSEMBLY PROCEDURE

### REMOVING THE TWIN PORT BASS BLASTER UNIT [AV-29W93B/BK, AV-29W83B/VT only]

1. Unplug the power supply cord.
2. Disconnect the Twin Port Bass Blaster Unit's cord from the rear of the TV set.
3. Remove the Twin Bass Blaster Unit by pulling it upwards.

#### [REMARK]

- After removing the Twin Port Bass Blaster Unit, proceed to the following procedure.

### REMOVING THE REAR COVER

1. Unplug the power supply cord.
2. Remove the 16 screws marked (A) as shown in Fig.1.
3. Withdraw the Rear cover toward you.

#### [CAUTION]

- When reinstalling the rear cover, carefully push it inward after inserting the Main PWB into the rear cover groove.

### REMOVING THE CHASSIS (CHASSIS BASE AND CONTROL BASE)

- After removing the rear cover.
- 1. Slightly raise the both sides of the chassis by hand and remove the 2 claws marked (B) under the chassis from the front cabinet as shown in Fig.1.
- 2. Withdraw the chassis backward.

(If necessary, take off the wire clamp, connector's etc.)

\* When conducting a check with power supplied, be sure to confirm that the CRT earth wire is connected to the CRT SOCKET PWB and the Main PWB.

### REMOVING THE AV TERMINAL BOARD

- After removing the rear cover.
- 1. Remove the 4 screws marked (C) as shown in Fig.1.
- 2. When you pull out the AV Terminal board in the direction of arrow marked (D) as shown in Fig.1, it can be removed.

### REMOVING THE CONTROL BASE

- After removing the rear cover and the chassis.
- 1. While pushing down the 2 claws marked (E) as shown in Fig. 2 and pull out the Control base in the direction of arrow marked (F) as shown in Fig. 2, the control base can be removed.  
(If necessary, take off the wire, connector's etc.)

### REMOVING THE SPEAKER

- After removing the rear cover.
- 1. Remove the 2 screws marked (G) as shown in Fig.1.
- 2. Withdraw the speaker backward.
- 3. Follow the same steps when removing the other hand speaker.

### CHECKING THE MAIN PW BOARD

1. To check the back side of the Main PWB.
  - 1) Pull out the chassis. (Refer to REMOVING THE CHASSIS).
  - 2) Erect the chassis vertically so that you can easily check the back side of the Main PWB.

#### [CAUTION]

- When erecting the chassis, be careful so that there will be no contacting with other PW Board.
- Before turning on power, make sure that the CRT earth wire and other connectors are properly connected.
- When repairing, connect the Deg. coil to the DEG. connector on the Main PWB.

### WIRE CLAMPING AND CABLE TYING

1. Be sure to clamp the wire.
2. Never remove the cable tie used for tying the wires together.  
Should it be inadvertently removed, be sure to tie the wires with a new cable tie.

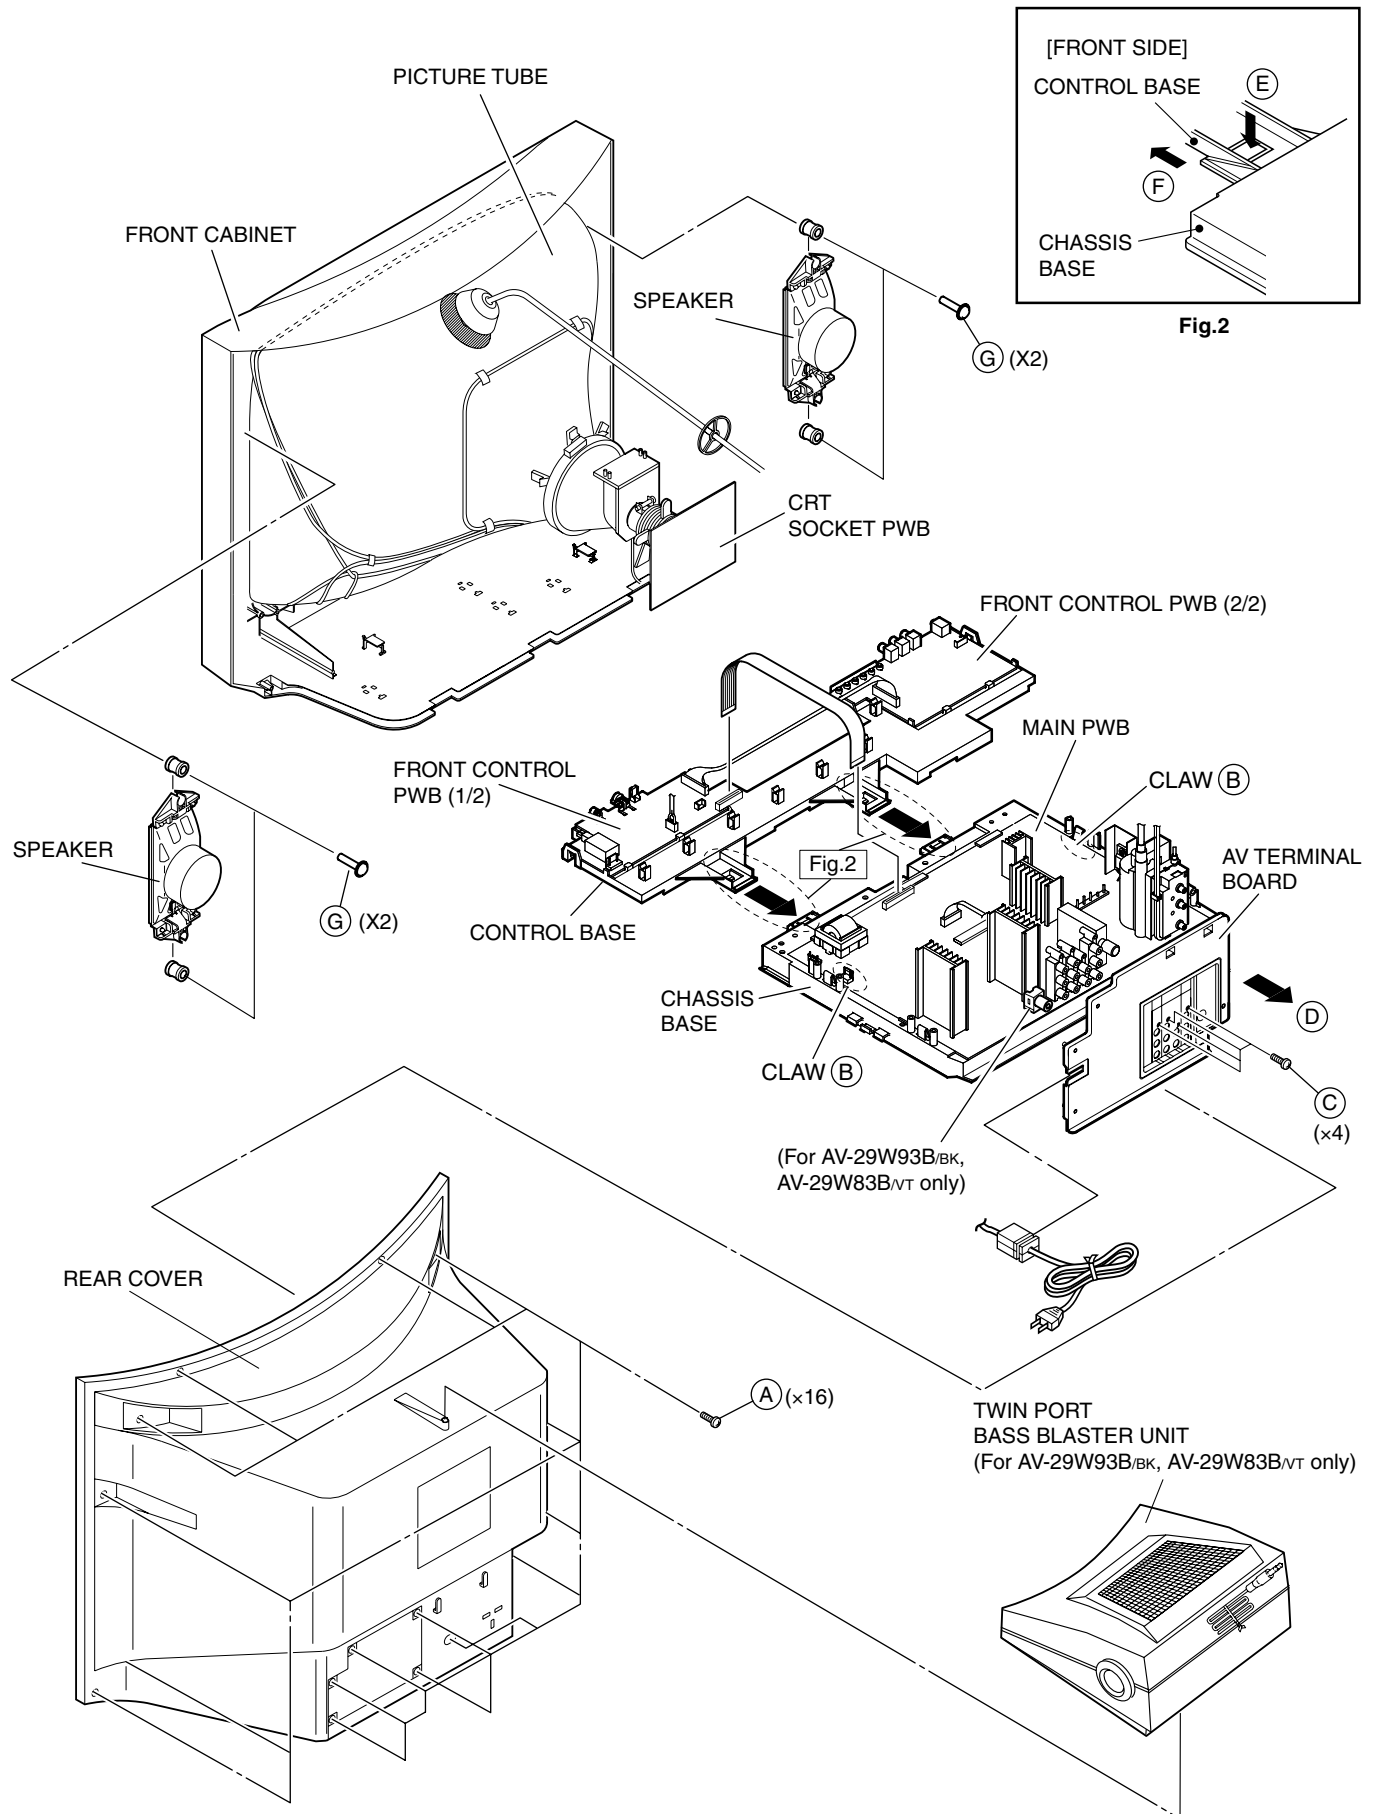


Fig.1

## REMOVING THE CRT

\* Replacement of the CRT should be performed by 2 or more persons.

- After removing the rear cover, chassis etc.,
  - 1. Putting the CRT change table on soft cloth, the CRT change table should also be covered with such soft cloth (shown in Fig. 3).
  - 2. While keeping the surface of CRT down, mount the TV set on the CRT change table balanced will as shown in Fig. 4.
  - 3. Remove 4 screws marked by arrows with a box type screwdriver as shown in Fig. 4.
  - Since the cabinet will drop when screws have been removed, be sure to support the cabinet with hands.
  - 4. After 4 screws have been removed, put the cabinet slowly on cloth (At this time, be carefully so as not to damage the front surface of the cabinet) shown in Fig. 5.
  - The CRT should be assembled according to the opposite sequence of its dismantling steps.
- \* The CRT change table should preferably be smaller than the CRT surface, and its height be about 35cm.

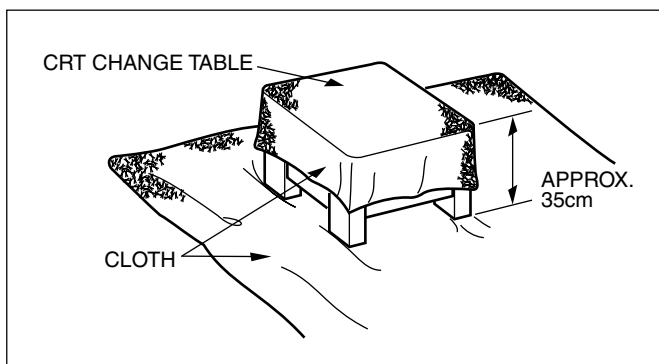


Fig. 3

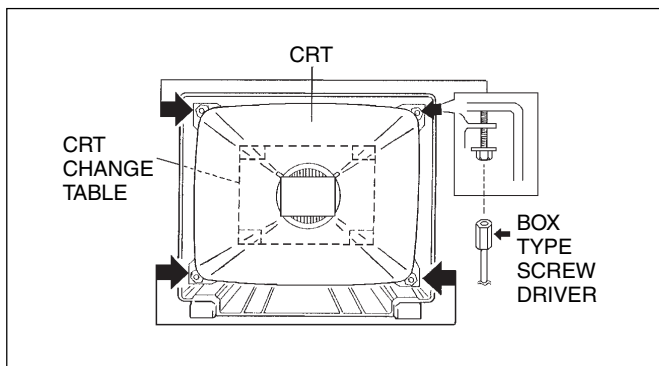


Fig. 4

## COATING OF SILICON GREASE FOR ELECTRICAL INSULATION ON THE CRT ANODE CAP SECTION.

- Subsequent to replacement of the CRT and HV transformer or repair of the anode cap, etc. by dismantling them, be sure to coat silicon grease for electrical insulation as shown in Fig. 6.
- 1. Wipe around the anode button with clean and dry cloth. (Fig. 6)
- 2. Coat silicon grease on the section around the anode button. At this time, take care so that any silicon greases does not sticks to the anode button. (Fig. 7)

★ Silicon grease product No. KS - 650N

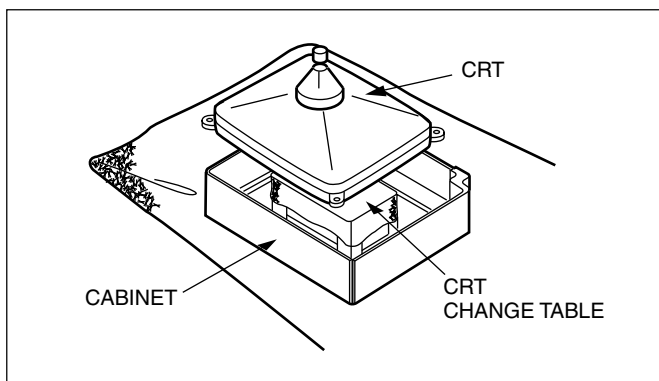


Fig. 5

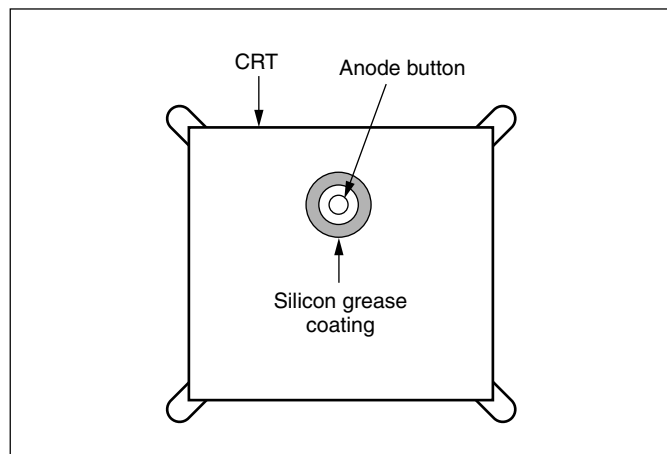


Fig. 6

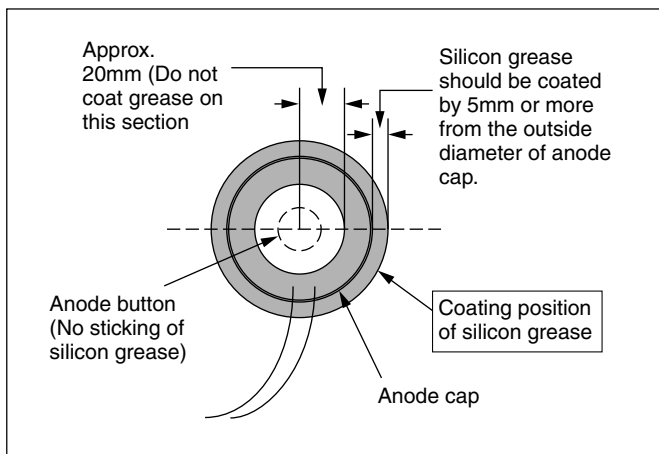


Fig. 7



# REPLACEMENT OF MEMORY IC

## 1. MEMORY IC

This TV uses the following memory IC.

### Memory IC: IC1702 on MAIN PW Board

The memory IC memorizes data for correctly operating the video and deflection circuits. When replacing the memory IC, be sure to use the same type IC written with the initial values of data. In other words, use the specific IC listed in "PRINTED WIRING BOARD PARTS LIST". For its mounting location, refer to "ADJUSTMENT LOCATIONS".

## 2. PROCEDURE FOR REPLACING MEMORY IC

### (1) Power off

Switch the power off and unplug the power cord from the wall outlet.

### (2) Replacing the memory IC

Replace the memory IC with new one. Be sure to use the memory IC written with the initial data values.

### (3) Power on

Plug the power cord into the wall outlet and switch the power on.

### (4) Check and setting of SYSTEM CONSTANT SET:

- 1) Press the DISPLAY key and the PICTURE MODE key on the remote control unit simultaneously.  
The SERVICE MENU screen will be displayed.(See Fig.1.)
- 2) In the SERVICE MENU, press the DISPLAY key and PICTURE MODE key simultaneously. Then, the SYSTEM CONSTANT SET screen will be displayed.(See Fig.2.)
- 3) Check whether the setting values of the SYSTEM CONSTANT SET are the same as those indicated in Table1.  
If the value is different, select the setting item with the MENU  $\nabla/\Delta$  key, and set the correct value with the MENU  $\triangleleft/\triangleright$  key.
- 4) Press the DISPLAY key twice to return to the normal screen.

### (5) Receive channel setting

Refer to the **OPERATING INSTRUCTIONS** and set the receive channels (channels preset).

### (6) User setting

Check the user setting values in Table 2, and if setting value is different, set the correct value.

For setting, refer to the **OPERATING INSTRUCTIONS**.

### (7) Setting of SERVICE MENU

Verify the setting for each setting item in the SERVICE MENU.(See Table 3.) If readjustment is necessary, perform adjustment referring to "SERVICE ADJUSTMENTS".

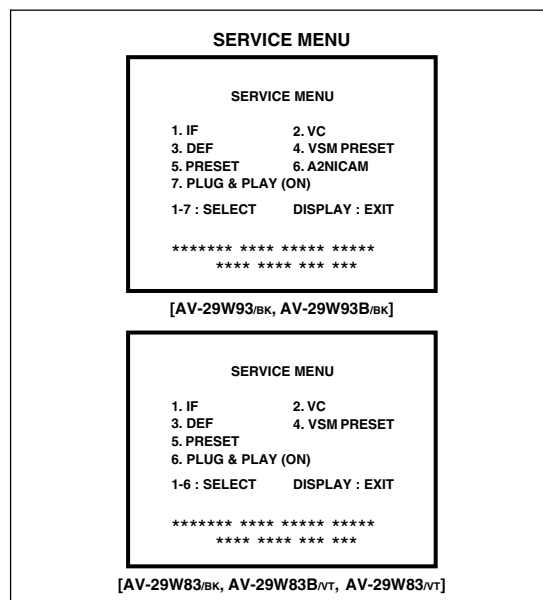
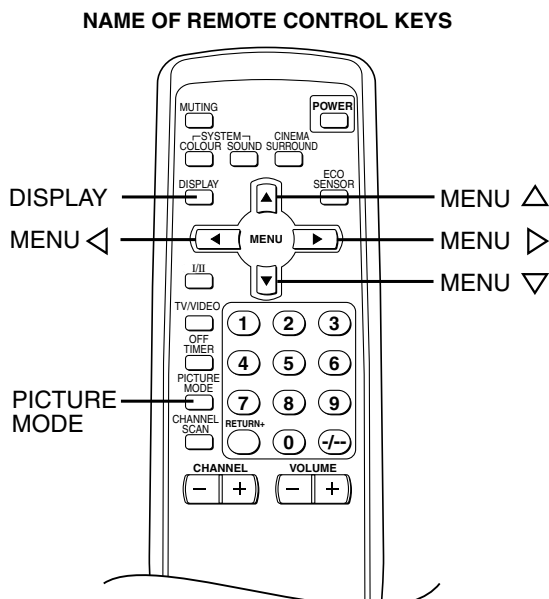


Fig. 1

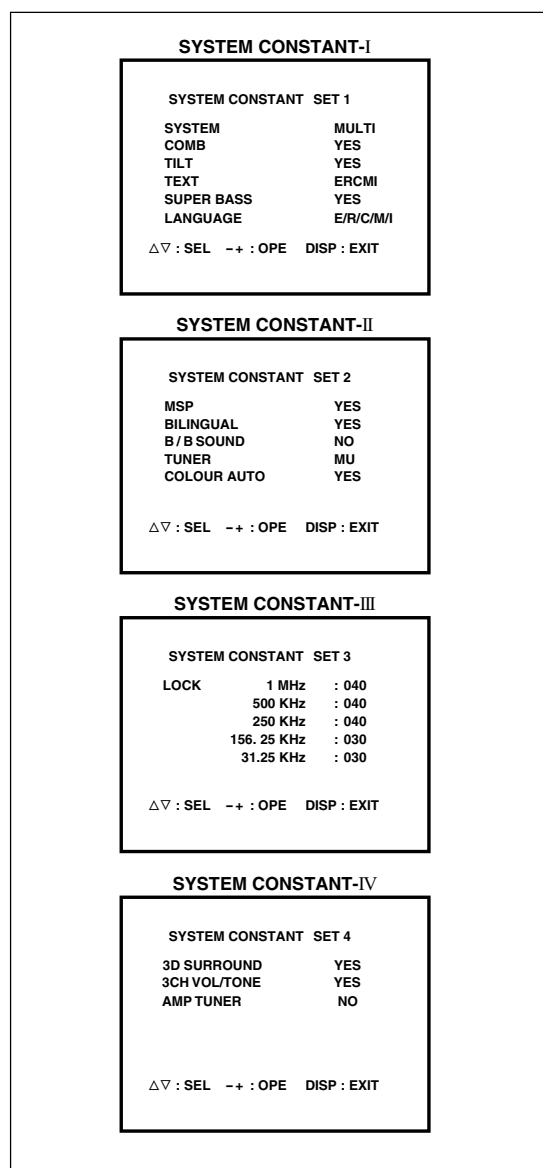


Fig. 2

## SETTING OF SYSTEM CONSTANT SET

| Setting item | Setting content   | Setting value |             |              |              |             |
|--------------|---|---------------|-------------|--------------|--------------|-------------|
|              |   | AV-29W83/BK   | AV-29W93/BK | AV-29W93B/BK | AV-29W83B/VT | AV-29W83/VT |
| SYSTEM       | → MULTI → TRIPLE → PAL → SINGLE → VIET ←                    | SINGLE        | MULTI       | ←            | VIET         | ←           |
| COMB         | → YES → NO ←  | YES           | ←           | ←            | ←            | ←           |
| TILT         | → YES → NO ←  | YES           | ←           | ←            | ←            | ←           |
| TEXT         | → EASTERN → UKRANIAN → RUSSIAN<br>← NO ← PAN EURO ← ARABK ← | NO            | ←           | ←            | ←            | ←           |
| SUPER BASS   | → YES → NO ←  | NO            | ←           | YES          | ←            | NO          |
| LANGUAGE     | → E/T → E/V → E ←   | E/T           | ←           | ←            | E/V          | ←           |
| MSP          | → YES → NO ←  | NO            | YES         | ←            | NO           | ←           |
| BILINGUAL    | → YES → NO ←  | YES           | NO          | ←            | ←            | ←           |
| B/B SOUND    | → YES → NO ←  | NO            | ←           | ←            | ←            | ←           |
| TUNER        | → MU → MA ←   | MU            | ←           | ←            | ←            | ←           |
| COLOUR AUTO  | → YES → NO ←  | NO            | ←           | ←            | ←            | ←           |
| LOCK 1MHz    | → 000 → 240 ←   | 040           | ←           | ←            | ←            | ←           |
| 500KHz       | → 000 → 240 ←   | 040           | ←           | ←            | ←            | ←           |
| 250KHz       | → 000 → 240 ←   | 040           | ←           | ←            | ←            | ←           |
| 156.25KHz    | → 000 → 240 ←   | 030           | ←           | ←            | ←            | ←           |
| 31.25KHz     | → 000 → 240 ←   | 030           | ←           | ←            | ←            | ←           |
| 3D SURROUND  | → YES → NO ←  | YES           | ←           | ←            | ←            | ←           |
| 3CH VOL/TONE | → YES → NO ←  | YES           | ←           | ←            | ←            | ←           |
| AMP TUNER    | → YES → NO ←  | NO            | ←           | ←            | ←            | ←           |

Table 1

## USER SETTING VALUES

| Setting item      | Setting value                                      |
|-------------------|--|
| SUB POWER         | ON   |
| CHANNEL POSITION  | 1 POSITION   |
| CHANNEL PRESET    | REFER TO OPERATING INSTRUCTIONS                    |
| VOLUME            | 15 ± 2   |
| TV/VIDEO          | TV   |
| VNR               | OFF  |
| COMPRESS (16:9)   | OFF  |
| AUTO SHUTOFF      | OFF  |
| CHILD LOCK        | OFF  |
| BLUE BACK         | ON   |
| VIDEO-2 SET       | VIDEO  |
| LANGUAGE          | THAI [AV-29W83/BK, AV-29W93/BK, AV-29W93B/BK only] |
|                   | VIET [AV-29W83B/VT, AV-29W83/VT only]              |
| CINEMA SURROUND   | OFF  |
| AI VOLUME         | ON   |
| ON SCREEN DISPLAY | POSITION INDICATION                                |
| COLOUR SYSTEM     | PAL  |
| SOUND SYSTEM      | B/G  |
| STEREO MODE       | STEREO [AV-29W93/BK, AV-29W93B/BK only]            |
| PICTURE MODE-VSM  | BRIGHT   |
| OFF TIMER         | 00   |
| ECO SENSOR        | OFF  |
| BASS              | CENTRE   |
| TREBLE            | CENTRE   |
| BALANCE           | CENTRE   |
| SUPER BASS        | ON [AV-29W93B/BK, AV-29W83B/VT only]               |
| BILINGUAL MODE    | I/II [AV-29W83/BK only]                            |

**Table 2**

## SERVICE MENU SETTING ITEMS

| Service menu   | Setting item   | Service menu  | Setting item   |
|--|--|---|--|
| <b>1. IF</b>   | 1. VCO<br>2. DELAY POINT   | <b>5. PRESET</b><br><b>Do not adjust</b>                                      | 1. PSNS<br>2. ACL<br>3. MUS<br>4. MAT<br>5. FCO<br>6. BPS<br>7. IFLH<br>8. VID<br>9. STM<br>10. AFCW<br>11. VSW<br>12. FFI<br>13. AGC<br>14. CL<br>15. AKB<br>16. HBL<br>17. BKS<br>18. READ STATUS<br>19. VNR<br>20. PEAK<br>21. IVG<br>22. WPL<br>23. SOFT CLIPPER<br>24. IF PLL OFFSET<br>25. OVERSHOOT<br>26. HCO<br>27. HP2<br>28. AI VOLUME ADN<br>31. CCCLOOP |
| <b>2. VC</b>   | 1. CUTOFF(R/G)<br>2. DRIVE(R/G/B)<br>3. BRIGHT<br>4. CONT<br>5. COLOUR<br>6. TINT<br>7. SHARP<br>8. YDELAY<br>9. AMP T. SHARP  |   |  |
| <b>3. DEF</b>  | 1. VER. SLOPE<br>2. VER. HEIGHT<br>3. VER. POSITION<br>4. VER. SCURVE<br>5. HOR. POSITION<br>6. HOR. WIDTH<br>7. EW-PIN<br>8. EW-TRAPEZ<br>9. UP CORNER<br>10. DW CORNER<br>11. HOR. PARALL<br>12. HOR. BOW<br>13. V. ZOOM |   |  |
| <b>4. VSM PRESET<br/>(BRIGHT/STD/SOFT)</b><br><b>Do not adjust</b> | 1. TINT<br>2. COLOUR<br>3. BRIGHT<br>4. PICTURE<br>5. DETAIL   |   |  |
|  |  | <b>6. A2NICAM</b><br>[AV-29W93/BK, AV-29W93B/BK only]<br><b>Do not adjust</b> | 1. ERROR LIMIT<br>2. A2 ID THR<br>3. SOUND SYSTEM  |
|  |  | <b>6/7. PLUG &amp; PLAY(ON)</b><br><b>Do not adjust</b>                       |  |

Table 3

# REPLACEMENT OF CHIP COMPONENT

## ■ CAUTIONS

1. Avoid heating for more than 3 seconds.
2. Do not rub the electrodes and the resist parts of the pattern.
3. When removing a chip part, melt the solder adequately.
4. Do not reuse a chip part after removing it.

## ■ SOLDERING IRON


1. Use a high insulation soldering iron with a thin pointed end of it.
2. A 30w soldering iron is recommended for easily removing parts.

## ■ REPLACEMENT STEPS


### 1. How to remove Chip parts

#### ◆ Resistors, capacitors, etc.

- (1) As shown in the figure, push the part with tweezers and alternately melt the solder at each end.

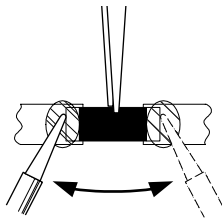


- (2) Shift with tweezers and remove the chip part.

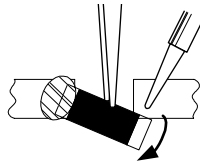


#### ◆ Transistors, diodes, variable resistors, etc.

- (1) Apply extra solder to each lead.



- (2) As shown in the figure, push the part with tweezers and alternately melt the solder at each lead. Shift and remove the chip part.

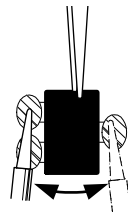


*Note : After removing the part, remove remaining solder from the pattern.*


### 2. How to install Chip parts

#### ◆ Resistors, capacitors, etc.

- (1) Apply solder to the pattern as indicated in the figure.

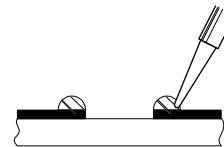


- (2) Grasp the chip part with tweezers and place it on the solder. Then heat and melt the solder at both ends of the chip part.

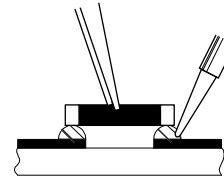


#### ◆ Transistors, diodes, variable resistors, etc.

- (1) Apply solder to the pattern as indicated in the figure.
- (2) Grasp the chip part with tweezers and place it on the solder.
- (3) First solder lead **A** as indicated in the figure.

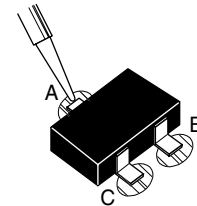

- (4) Then solder leads **B** and **C**.

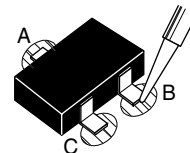

# SERVICE ADJUSTMENTS

## ADJUSTMENT PREPARATION

1. You can make the necessary adjustments for this unit with either the remote control unit or with the adjustment equipment and parts as given below.
2. Adjustment with the remote control unit is made on the basis of the initial setting values, however, the new setting values which set the screen to its optimum condition may differ from the initial settings.
3. Make sure that AC power is turned on correctly.
4. Turn on the power for the set and test equipment before use, and start the adjustment procedures after waiting at least 30 minutes.
5. Unless otherwise specified, prepare the most suitable reception or input signal for adjustment.
6. Never touch any adjustment parts, which are not specified in the list for this adjustment-variable resistors, transformers, capacitors, etc.
7. Presetting before adjustment.

Unless otherwise specified in the adjustment instructions, preset the following functions with the remote control unit.

- User mode setting position

| Setting item                 | Setting value |
|------------------------------|---------------|
| PICTURE MODE(VSM)            | BRIGHT        |
| VNR                          | OFF           |
| BASS, TREBLE, BALANCE        | CENTRE        |
| TINT, COLOUR, BRIGHT, DETAIL | CENTRE        |
| PICTURE                      | MAXIMUM       |

## MEASURING INSTRUMENT


1. DC voltmeter (or Digital voltmeter)
2. Oscilloscope
3. Signal generator (Pattern generator) [PAL/SECAM/NTSC]
4. Remote control unit

## ADJUSTMENT ITEMS


- B1 POWER SUPPLY
- FOCUS ADJUSTMENT
- IF CIRCUIT ADJUSTMENTS
  - Adjustment of VCO (CW)
  - Adjustment of DELAY POINT (AGC TAKE-OVER)
- VC (VIDEO/CHROMA) CIRCUIT ADJUSTMENTS
  - Adjustment of WHITE BALANCE (Low light)
  - Adjustment of WHITE BALANCE (High light)
  - Adjustment of SUB BRIGHT
  - Adjustment of SUB CONTRAST
  - Adjustment of SUB COLOUR-I
  - Adjustment of SUB COLOUR-II
  - Adjustment of SUB TINT-I
  - Adjustment of SUB TINT-II
- DEFLECTION CIRCUIT ADJUSTMENTS
  - Adjustment of V. SLOPE
  - Adjustment of V. POSITION
  - Adjustment of V. HEIGHT
  - Adjustment of H. POSITION
  - Adjustment of H. WIDTH
  - Adjustment of SIDE PIN
  - Adjustment of TRAPEZIUM
  - Adjustment of V. S-CURVE
  - Adjustment of CORNER
  - Adjustment of H. PARALLEL
  - Adjustment of H. BOW
- VSM PRESET SETTING
- PRESET SETTING
- AUDIO ADJUSTMENT [AV-29W93/BK, AV-29W93B/BK only]
- PURITY ADJUSTMENT
- CONVERGENCE ADJUSTMENTS
  - Adjustment of STATIC CONVERGENCE
  - Adjustment of DYNAMIC CONVERGENCE

# ADJUSTMENT LOCATIONS


## FRONT CONTROL PWB ASS'Y(1/2)

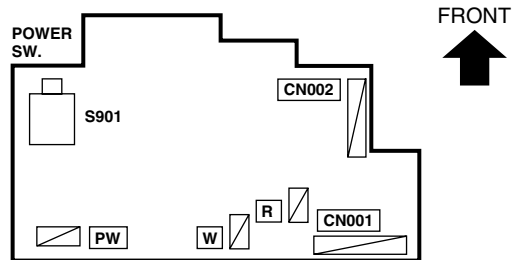


## FRONT CONTROL PWB ASS'Y(2/2)

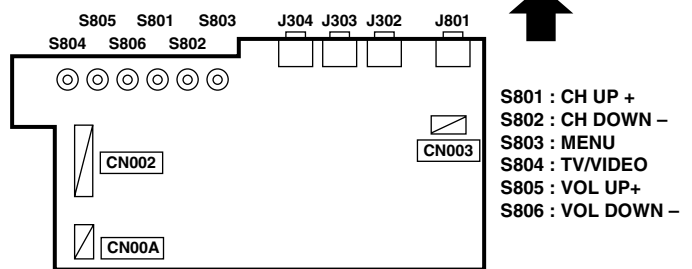

## MAIN PWB ASS'Y

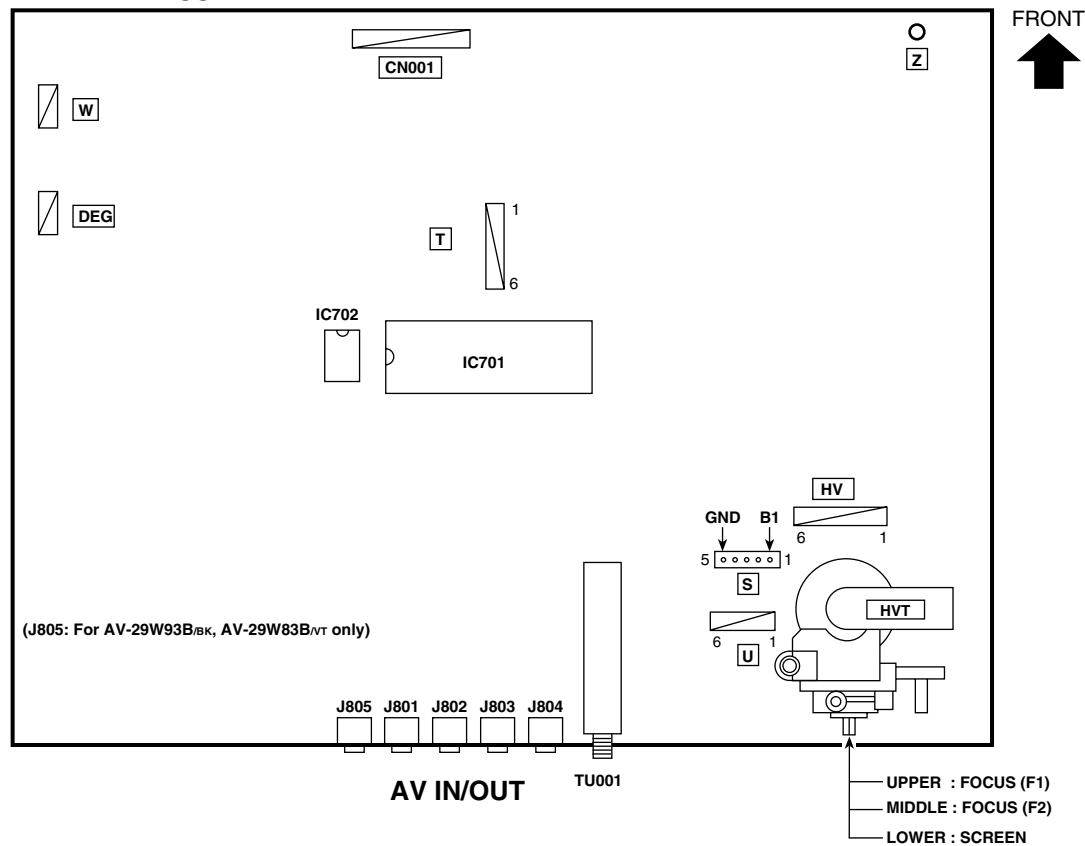

## CRT SOCKET PWB ASS'Y (SOLDER SIDE)

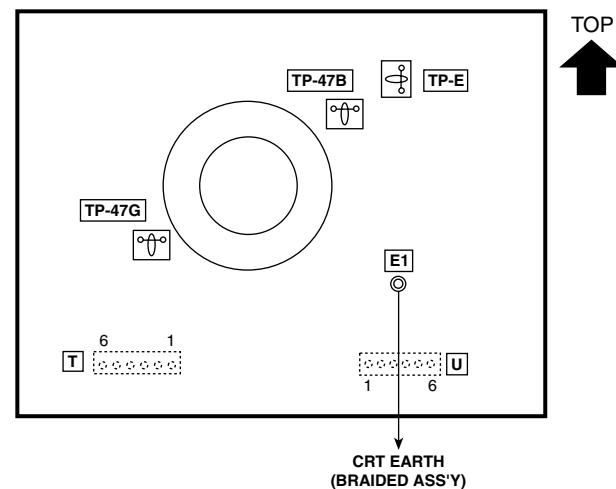

## BASIC OPERATION IN SERVICE MENU

### 1. TOOL OF SERVICE MENU OPERATION

Operate the SERVICE MENU with the remote control unit.

### 2. SERVICE MENU ITEMS

With the SERVICE MENU, various settings (adjustments) can be made, and they are broadly classified in the following items of settings:

- 1. IF ..... For entering/adjusting the setting values (adjustment values) of the IF circuit.
- 2. VC ..... For entering/adjusting the setting values (adjustment values) of the VIDEO/CHROMA circuit.
- 3. DEF ..... For entering/adjusting the setting values (adjustment values) of the DEFLECTION circuit.
- 4. VSM PRESET ..... For setting the values of STANDARD, SOFT and BRIGHT.  
(VSM: video status memory)
- 5. PRESET ..... For setting the values of the preset.
- 6. A2NICAM ..... For entering/adjusting the setting values (adjustment values) of the multiplicity sound circuit. [AV-29W93/BK, AV-29W93B/BK only]
- 6/7. PLUG & PLAY (ON) ..... This is not used for service.

### 3. BASIC OPERATION IN SERVICE MENU

#### (1) How to enter SERVICE MENU

Press the DISPLAY key and the PICTURE MODE key on the remote control unit simultaneously.

The SERVICE MENU screen will be displayed. (See Fig. 1 on the next page.)

#### (2) Selection of SUB MENU SCREEN

Press one of the keys 1 to 7 on the remote control unit, and select the SUB MENU SCREEN from the SERVICE MENU. (See Fig. 1 on the next page.)

|                         |   |
|-------------------------|---|
| SERVICE MENU → SUB MENU | 1. IF                                       |
|                         | 2. VC                                       |
|                         | 3. DEF                                      |
|                         | 4. VSM PRESET                               |
|                         | 5. PRESET                                   |
|                         | 6. A2NICAM [AV-29W93/BK, AV-29W93B/BK only] |
|                         | 6/7. PLUG & PLAY (ON)                       |

#### (3) Method of Setting

\*Once the setting values are set, they are memorized automatically.

\*It must not adjust without inputting a signal.

##### 1) 1. IF

[1. VCO]

- (a) 1 Key ..... Select **1. IF**.
- (b) 1 Key ..... Select **1. VCO**.
- (c) DISPLAY Key ..... When this is pressed twice, you will return to the SERVICE MENU.
  - Under normal conditions, no adjustment is required.

[2. DELAY POINT]

- (a) 1 Key ..... Select **1. IF**.
- (b) 2 Key ..... Select **2. DELAY POINT**.
- (c) MENU  $\triangleleft/\triangleright$  Key ..... Adjust the setting value.
- (d) DISPLAY Key ..... When this is pressed twice, you will return to the SERVICE MENU.

##### 2) 2. VC, 3. DEF, 4. VSM PRESET, 5. PRESET and 6. A2NICAM

- (a) 2 ~ 6 Keys ..... Select one from **2. VC**, **3. DEF**, **4. VSM PRESET**, **5. PRESET** and **6. A2NICAM**.
- (b) MENU  $\nabla/\Delta$  key ..... Select setting items.
- (c) MENU  $\triangleleft/\triangleright$  Key ..... Adjust the setting values of the setting items.
  - Use the number keys on the remote control unit for setting of WHITE BALANCE.  
For the setting, refer to each item concerned.
- (d) DISPLAY Key ..... When this is pressed, you will return to the SERVICE MENU.

##### 3) 6/7. PLUG & PLAY (ON)

This is not used for service.

#### (4) Release of SERVICE MENU

After completing the setting, return to the SERVICE MENU by pressing the DISPLAY key, then again press the DISPLAY key to return to the normal screen.



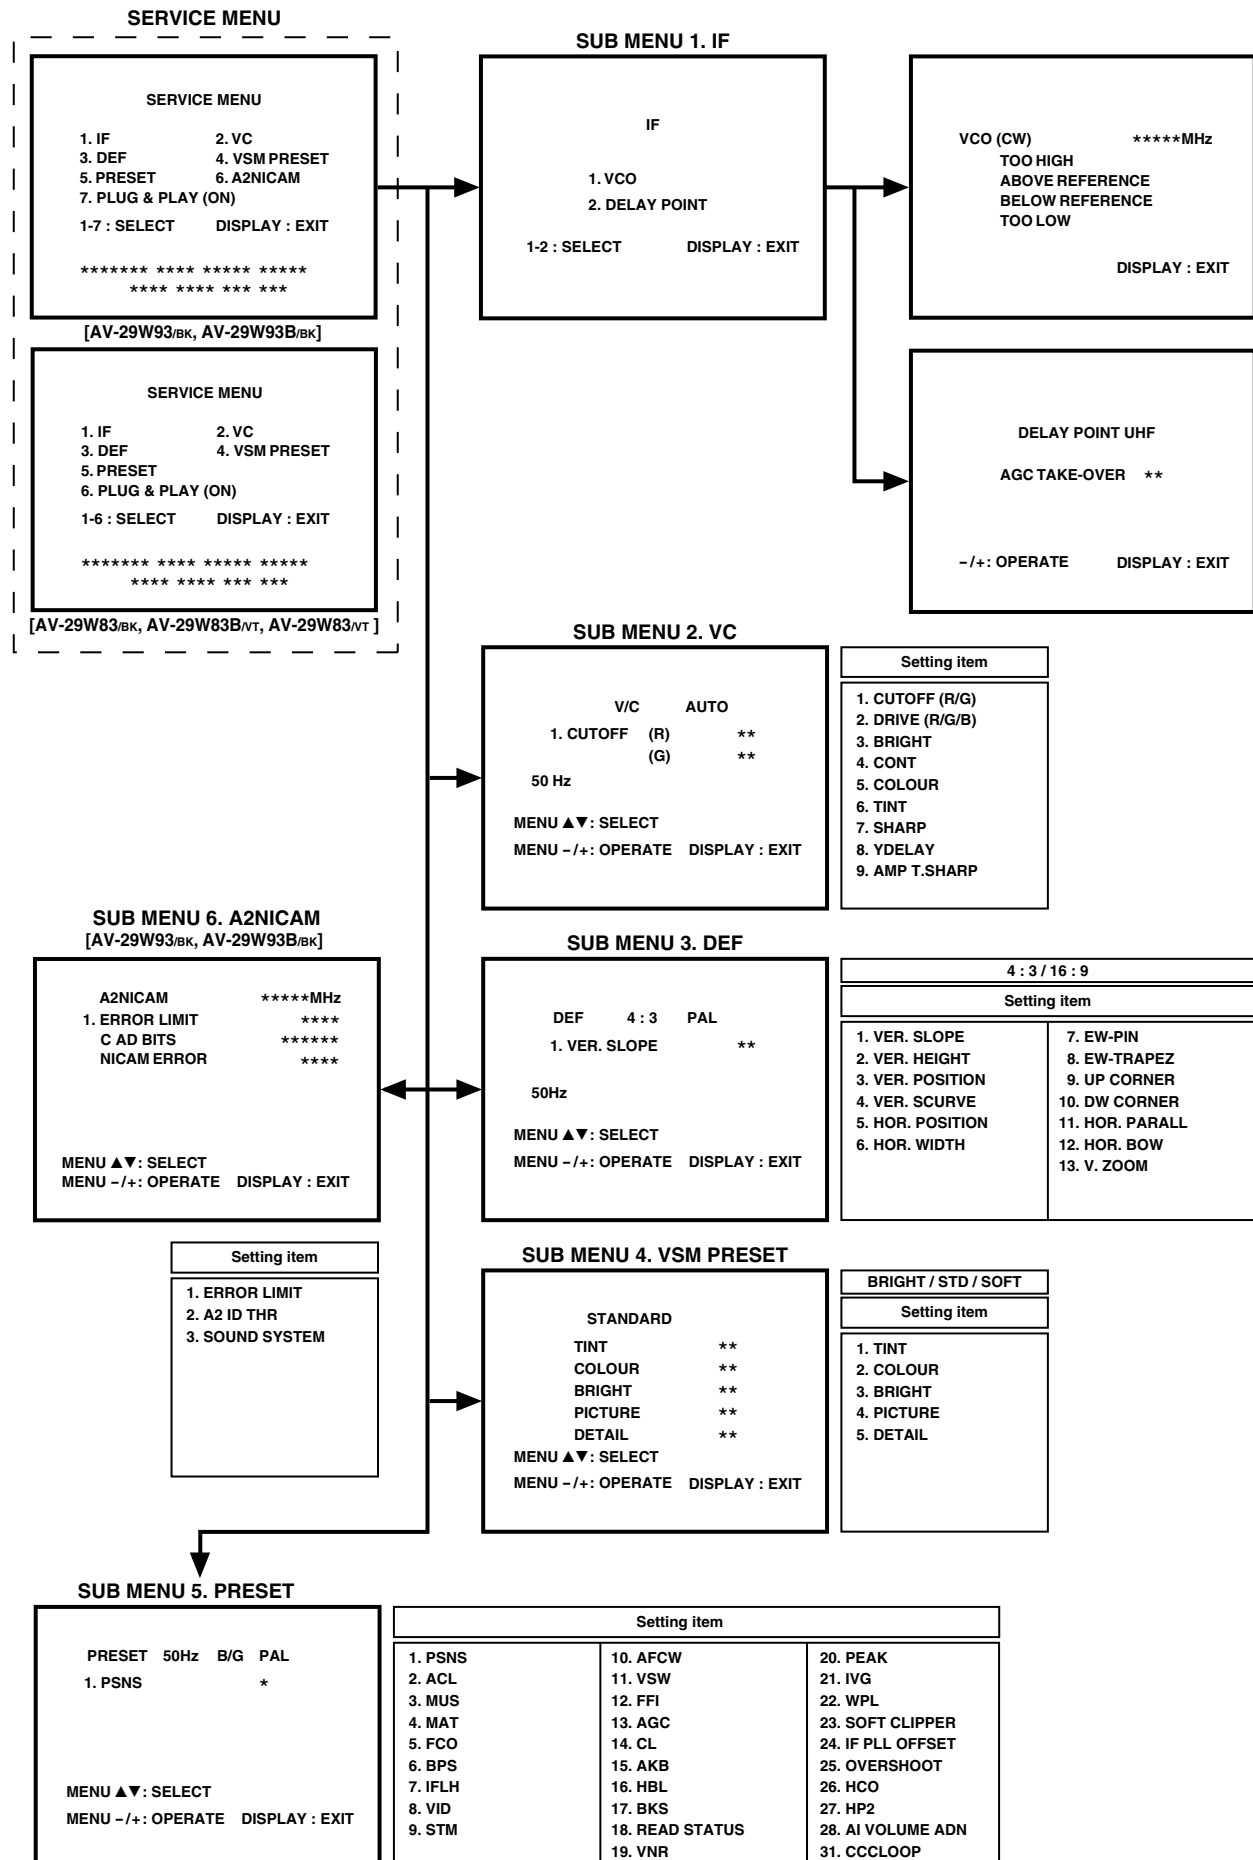


Fig. 1

No. 52070

## ADJUSTMENTS

### B1 POWER SUPPLY

| Item                     | Measuring instrument                 | Test point   | Adjustment part | Description  |
|--------------------------|--------------------------------------|--|-----------------|--|
| Check of B1 POWER SUPPLY | Signal generator<br><br>DC voltmeter | B1 (pin 1)<br>GND (pin 5)<br>[CN00S connector in MAIN PWB] |                 | <ol style="list-style-type: none"> <li>1. Receive a black and white signal.</li> <li>2. Connect a DC voltmeter between B1 and GND (between pins 1 and 5 of the connector CN00S).</li> <li>3. Make sure that the voltage is <b>DC134.5 ± 2V</b>.</li> </ol> |

### FOCUS ADJUSTMENT

| Item                | Measuring instrument | Test point | Adjustment part   | Description   |
|---------------------|----------------------|------------|-------------------|---|
| Adjustment of FOCUS | Signal generator     |            | FOCUS VR [In HVT] | <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Set PICTURE MODE (VSM) to "BRIGHT".</li> <li>• The final adjustment of CONVERGENCE must be done after the FOCUS adjustment. (CONVERGENCE is changed by FOCUS adjustment.)<br/>When makes difference by FOCUS adjustment, should be reconfirming PURITY adjustment.</li> </ul> <ol style="list-style-type: none"> <li>1. Receive a cross-hatch signal.</li> <li>2. While looking at the screen centre, adjust the FOCUS VR so that the vertical and horizontal lines will be clear and in fine detail.</li> <li>3. Make sure that the picture is in focus even when the screen gets darkened.</li> </ol> |

### IF CIRCUIT ADJUSTMENTS

| Item  | Measuring instrument  | Test point | Adjustment part | Description   |                              |                       |  |           |        |                                |    |    |
|---|-----------------------|------------|-----------------|---|------------------------------|-----------------------|--|-----------|--------|--------------------------------|----|----|
| Adjustment of VCO (CW)  | Remote control unit   |            | VCO (CW)        | <p><b>Note:</b></p> <ul style="list-style-type: none"><li>• Under normal conditions, no adjustment is required.</li></ul> <ol style="list-style-type: none"><li>1. Select <b>1. IF</b> from the SERVICE MENU.</li><li>2. Select <b>1. VCO</b> by pressing the <b>1</b> key on the remote control unit.</li><li>3. Receive a broadcast signal.</li><li>4. Check the characters colour of the <b>BELOW REFERENCE</b> displayed to <b>yellow</b>.</li><li>5. Press the DISPLAY key three times to return to normal screen.</li></ol>   |                              |                       |  |           |        |                                |    |    |
| <div><div><div>VCO (CW) ***.** MHz</div><div>TOO HIGH<br/>ABOVE REFERENCE<br/>BELOW REFERENCE<br/>TOO LOW</div><div>DISPLAY : EXIT</div></div><div><div>fv</div><div>YELLOW</div></div></div>   |                       |            |                 |   |                              |                       |  |           |        |                                |    |    |
| Adjustment of DELAY POINT (AGC TAKE-OVER)   | Remote control unit   |            | DELAY POINT     | <ol style="list-style-type: none"><li>1. Receive a black and white broadcast signal (colour off).</li><li>2. Select <b>1. IF</b> from the SERVICE MENU.</li><li>3. Select <b>2. DELAY POINT</b> by pressing the <b>2</b> key on the remote control unit.</li><li>4. Adjust the MENU <math>\triangleleft/\triangleright</math> key in order to eliminate any noise or beat from the image. Any increase above the initial value produces noise and any decrease below it produces beat.</li><li>5. Press the DISPLAY key three times to return to the normal screen.</li><li>6. Turn to other channels and make sure that there are no irregularities.</li></ol> |                              |                       |  |           |        |                                |    |    |
| <table><tr><th rowspan="2">Setting<br/>(Adjustment time)</th><th colspan="2">Initial setting value</th></tr><tr><th>NTSC 3.58</th><th>OTHERS</th></tr><tr><td>DELAY POINT<br/>(AGC TAKE-OVER)</td><td>30</td><td>26</td></tr></table> |                       |            |                 |   | Setting<br>(Adjustment time) | Initial setting value |  | NTSC 3.58 | OTHERS | DELAY POINT<br>(AGC TAKE-OVER) | 30 | 26 |
| Setting<br>(Adjustment time)  | Initial setting value |            |                 |   |                              |                       |  |           |        |                                |    |    |
|   | NTSC 3.58             | OTHERS     |                 |   |                              |                       |  |           |        |                                |    |    |
| DELAY POINT<br>(AGC TAKE-OVER)  | 30                    | 26         |                 |   |                              |                       |  |           |        |                                |    |    |

## VC (VIDEO/CHROMA) CIRCUIT ADJUSTMENTS

The setting (adjustment) using the remote control unit is made on the basis of the initial setting values.  
The setting values which adjust the screen to the optimum condition can be different from the initial setting values.  
● Do not change the initial setting values of the setting (adjustment) items not listed in "ADJUSTMENT".

[SUB MENU 2. VC] : Do not adjust.

|   | Setting (Adjustment) item | Variable range | Initial setting value |       |          |          |                 |
|---|---------------------------|----------------|-----------------------|-------|----------|----------|-----------------|
|   |                           |                | PAL                   | SECAM | NTSC3.58 | NTSC4.43 | COMPONENT (V-2) |
| 1 | CUT-OFF (R/G)             | -32 - +31      | 0/0                   | ←     | ←        | ←        | -2/+14          |
| 2 | DRIVE (R/G/B)             | -32 - +31      | 0/0/0                 | ←     | ←        | ←        | ←               |
| 3 | BRIGHT (TV/V-1/V-2/V-3)   | -32 - +31      | -13/0/0/+1            | ←     | ←        | ←        | 0/0/-1/0        |
| 4 | CONT                      | -32 - +31      | -10                   | ←     | ←        | ←        | —               |
| 5 | COLOUR *1                 | -32 - +31      | -4                    | -13   | -11      | +1       | —               |
|   | COLOUR (TV/VIDEO) *2      |                | -4/—                  | -13/— | —/-11    | —/+1     | —/0             |
| 6 | TINT (TV/VIDEO) *1        | -32 - +31      | —                     | —     | -15/+2   | —/+1     | —               |
|   | TINT (TV/VIDEO) *2        |                | —                     | —     | —/+6     | —/+1     | —               |
| 7 | SHARP (TV/VIDEO)          | -32 - +31      | -28/-22               | ←     | ←        | ←        | —/0             |
| 8 | Y DELAY (TV/VIDEO)        | -8 - +7        | -7/+1                 | ←     | 0/+1     | 0/0      | 0/+1            |
| 9 | AMP T. SHARP              | -32 - +31      | 0                     | ←     | ←        | ←        | ←               |

\*1: AV-29W93/BK, AV-29W93B/BK, AV-29W83B/VT, AV-29W83/VT

\*2: AV-29W83/BK

| Item                                    | Measuring instrument | Test point | Adjustment part             | Description   |
|---|----------------------|------------|-----------------------------|---|
| Adjustment of WHITE BALANCE (Low light) | Signal generator     |            | 1. CUTOFF (R)<br>CUTOFF (G) | <b>Note:</b><br>• Set PICTURE MODE (VSM) to "BRIGHT".<br><br>1. Receive a PAL black and white signal (colour off).<br>2. Select <b>2. VC</b> from the SERVICE MENU.<br>3. Select <b>1. CUTOFF (R)</b> and <b>(G)</b> with MENU ▽/△ key, and set each value to initial setting value with the <b>4</b> and <b>7</b> keys, or <b>5</b> and <b>8</b> keys on the remote control unit.<br>4. Press the <b>1</b> key on the remote control unit to produce a single horizontal line.<br>5. Turn the SCREEN VR fully counterclockwise, then slowly turn it clockwise to where a red, blue or green colour is faintly visible.<br>6. Use the keys <b>4</b> and <b>7</b> or <b>5</b> and <b>8</b> on the remote control unit and adjust the other 2 colours to where the single horizontal line appears white.<br>7. Turn the SCREEN VR to where the single horizontal line glows faintly.<br>8. Press the <b>2</b> key to return to <b>1. CUTOFF</b> screen.<br>9. Press the DISPLAY key twice to return to the normal screen. |
|   | Remote control unit  |            | SCREEN VR [In HVT]          |   |

V/C                  PAL

1. CUTOFF (R)       \*\*

                              (G)       \*\*

50 Hz

MENU ▲▼: SELECT


MENU -/+ : OPERATE    DISPLAY : EXIT

**REMOTE CONTROL UNIT**


| Setting (Adjustment) item | Variable range | Initial setting value |
|---------------------------|----------------|-----------------------|
| 1. CUT OFF                | R              | -32 — +31             |
|                           | G              | -32 — +31             |

| Item   | Measuring instrument      | Test point     | Adjustment part                        | Description  |                           |                |                       |          |   |           |   |   |           |   |   |           |   |
|--|---------------------------|----------------|--|--|---------------------------|----------------|-----------------------|----------|---|-----------|---|---|-----------|---|---|-----------|---|
| Adjustment of WHITE BALANCE (High light)   | Signal generator          |                | 2. DRIVE (R)<br>DRIVE (G)<br>DRIVE (B) | <p><b>Notes:</b></p> <ul style="list-style-type: none"><li>• Proceed to the following adjustment after having completed the adjustment of LOW LIGHT WHITE BALANCE.</li><li>• Set PICTURE MODE (VSM) to “BRIGHT”.</li></ul> <ol style="list-style-type: none"><li>1. Receive a PAL black and white signal (colour off).</li><li>2. Select <b>2. VC</b> from the SERVICE MENU.</li><li>3. Select <b>2. DRIVE (R), (G) and (B)</b> with MENU ▽/△ key, and set each value to initial setting value with the <b>4 to 9</b> keys on the remote control unit.</li><li>4. Use the keys <b>4 to 9</b> to produce a white screen.</li><li>5. Press the DISPLAY key twice to return to the normal screen.</li></ol> <table><tr><th>Setting (Adjustment) Item</th><th>Variable range</th><th>Initial setting value</th></tr><tr><td rowspan="3">2. DRIVE</td><td>R</td><td>−32 — +31</td><td>0</td></tr><tr><td>G</td><td>−32 — +31</td><td>0</td></tr><tr><td>B</td><td>−32 — +31</td><td>0</td></tr></table> | Setting (Adjustment) Item | Variable range | Initial setting value | 2. DRIVE | R | −32 — +31 | 0 | G | −32 — +31 | 0 | B | −32 — +31 | 0 |
|  | Setting (Adjustment) Item | Variable range | Initial setting value                  |  |                           |                |                       |          |   |           |   |   |           |   |   |           |   |
| 2. DRIVE   | R                         | −32 — +31      | 0                                      |  |                           |                |                       |          |   |           |   |   |           |   |   |           |   |
|  | G                         | −32 — +31      | 0                                      |  |                           |                |                       |          |   |           |   |   |           |   |   |           |   |
|  | B                         | −32 — +31      | 0                                      |  |                           |                |                       |          |   |           |   |   |           |   |   |           |   |
|  | Remote control unit       |                |  |  |                           |                |                       |          |   |           |   |   |           |   |   |           |   |
| <div><div><div><div><div>V/C</div><div>PAL</div></div><div><div>2. DRIVE</div><div>(R)</div><div>**</div></div><div><div></div><div>(G)</div><div>**</div></div><div><div>50 Hz</div><div>(B)</div><div>**</div></div></div><div><div>MENU ▲▼: SELECT</div><div>MENU −/+: OPERATE</div><div>DISPLAY : EXIT</div></div></div></div>                               |                           |                |  |  |                           |                |                       |          |   |           |   |   |           |   |   |           |   |
| <div><div>REMOTE CONTROL UNIT</div><div><div><div>1</div><div>2</div><div>3</div></div><div><div>4</div><div>5</div><div>6</div></div><div><div>7</div><div>8</div><div>9</div></div></div><div><div>R. DRIVE (▲)</div><div>G. DRIVE (▲)</div><div>B. DRIVE (▲)</div></div><div><div>R. DRIVE (▼)</div><div>G.DRIVE (▼)</div><div>B. DRIVE (▼)</div></div></div> |                           |                |  |  |                           |                |                       |          |   |           |   |   |           |   |   |           |   |
| Adjustment of SUB BRIGHT   | Remote control unit       |                | 3. BRIGHT                              | <p><b>Notes:</b></p> <ul style="list-style-type: none"><li>• Proceed to the following adjustment after having completed the adjustments of LOW LIGHT WHITE BALANCE and HIGH LIGHT WHITE BALANCE.</li><li>• Set PICTURE MODE (VSM) to “BRIGHT”.</li></ul> <ol style="list-style-type: none"><li>1. Receive a broadcast.</li><li>2. Select <b>2. VC</b> from the SERVICE MENU.</li><li>3. Select <b>3. BRIGHT</b> with the MENU ▽/△ key.</li><li>4. Set the initial setting value with the MENU ◁/▷ key.</li><li>5. If the brightness is not best with the initial setting value, make fine adjustment until you get the best brightness.</li><li>6. Press the DISPLAY key twice to return to the normal screen.</li></ol>   |                           |                |                       |          |   |           |   |   |           |   |   |           |   |
| Adjustment of SUB CONTRAST   | Remote control unit       |                | 4. CONT                                | <p><b>Notes:</b></p> <ul style="list-style-type: none"><li>• Proceed to the following adjustment after having completed the adjustment of SUB BRIGHT.</li><li>• Set PICTURE MODE (VSM) to “BRIGHT”.</li></ul> <ol style="list-style-type: none"><li>1. Receive a broadcast.</li><li>2. Select <b>2. VC</b> from the SERVICE MENU.</li><li>3. Select <b>4. CONT</b> with the MENU ▽/△ key.</li><li>4. Set the initial setting value with the MENU ◁/▷ key.</li><li>5. If the contrast is not best with the initial setting value, make fine adjustment until you get the best contrast.</li><li>6. Press the DISPLAY key twice to return to the normal screen.</li></ol>  |                           |                |                       |          |   |           |   |   |           |   |   |           |   |

| Item                        | Measuring instrument  | Test point                                   | Adjustment part | Description   |
|-----------------------------|---|--|-----------------|---|
| Adjustment of SUB COLOUR-I  | Remote control unit   |  | 5. COLOUR       | <p><b>[Method of adjustment without measuring instrument]</b></p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Proceed to the following adjustment after having completed the adjustment of SUB CONT.</li> <li>• Set PICTURE MODE (VSM) to "BRIGHT".</li> </ul> <p>– <b>PAL COLOUR</b> –</p> <ol style="list-style-type: none"> <li>1. Receive a PAL broadcast.</li> <li>2. Select <b>2. VC</b> from the SERVICE MENU.</li> <li>3. Select <b>5. COLOUR</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>4. Set the initial setting value for PAL COLOUR with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>5. If the colour is not best with the initial setting value, make fine adjustment until you get the best colour.</li> <li>6. Press the DISPLAY key twice to return to the normal screen.</li> </ol> <p>– <b>SECAM COLOUR</b> –</p> <ol style="list-style-type: none"> <li>7. Receive a SECAM broadcast.</li> <li>8. Press the COLOUR SYSTEM button on the remote control unit to select the SECAM colour system.</li> <li>9. Make fine adjustment of SECAM COLOUR in the same way as for "PAL COLOUR".</li> </ol> <p>– <b>NTSC 3.58 COLOUR</b> –</p> <ol style="list-style-type: none"> <li>10. Receive a NTSC 3.58MHz broadcast.</li> <li>11. Press the COLOUR SYSTEM button on the remote control unit to select the NTSC 3.58 colour system.</li> <li>12. Make similar fine adjustment of NTSC 3.58 COLOUR in the same way as for "PAL COLOUR".</li> </ol> <p>– <b>NTSC 4.43 COLOUR</b> –</p> <p>When adjustment is done for NTSC 3.58 COLOUR, appropriate values are automatically set for NTSC 4.43 COLOUR.</p>   |
| Adjustment of SUB COLOUR-II | Signal generator<br><br>Oscilloscope<br><br>Remote control unit | TP-47G<br>TP-E ( $\pi$ )<br>[CRT SOCKET PWB] | 5. COLOUR       | <p><b>[Method of adjustment using measuring instrument]</b></p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Proceed to the following adjustment after having completed the adjustment of SUB CONT.</li> <li>• Set PICTURE MODE (VSM) to "BRIGHT".</li> </ul> <p>– <b>PAL COLOUR</b> –</p> <ol style="list-style-type: none"> <li>1. Receive a PAL colour bar signal (full field colour bar 75% white).</li> <li>2. Select <b>2. VC</b> from the SERVICE MENU.</li> <li>3. Select <b>5. COLOUR</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>4. Set the initial setting value of PAL COLOUR with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>5. Connect the oscilloscope between TP-47G and TP-E.</li> <li>6. Adjust PAL COLOUR to set the value <b>(A)</b> in the figure to <b>+14V (V<sub>W-G</sub>)</b>.</li> </ol> <p>– <b>SECAM COLOUR</b> –</p> <ol style="list-style-type: none"> <li>7. Receive a SECAM colour bar signal (full field colour bar 75% white).</li> <li>8. Press the COLOUR SYSTEM button on the remote control unit to select the SECAM colour system.</li> <li>9. Set the initial setting value of SECAM COLOUR with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>10. Adjust SECAM COLOUR to set the value <b>(A)</b> in the figure to <b>+6V (V<sub>W-G</sub>)</b>.</li> </ol> <p>– <b>NTSC 3.58 COLOUR</b> –</p> <ol style="list-style-type: none"> <li>11. Receive a NTSC 3.58 colour bar signal (full field colour bar 75% white).</li> <li>12. Press the COLOUR SYSTEM button on the remote control unit to select the NTSC 3.58 colour system.</li> <li>13. Set the initial setting value of NTSC 3.58 COLOUR with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>14. Adjust NTSC 3.58 COLOUR to set the value <b>(A)</b> in the figure to <b>+3V (V<sub>W-G</sub>)</b>.</li> </ol> <p>– <b>NTSC 4.43 COLOUR</b> –</p> <p>When adjustment is done for NTSC 3.58 COLOUR, appropriate values are automatically set for NTSC 4.43 COLOUR.</p> |

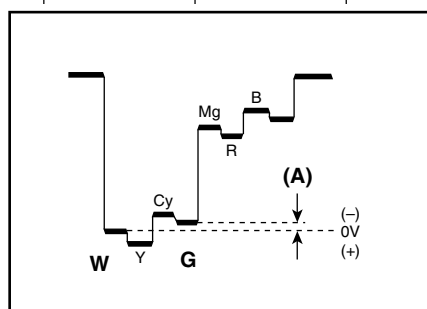

| Item                      | Measuring instrument  | Test point                              | Adjustment part | Description   |
|---------------------------|---|---|-----------------|---|
| Adjustment of SUB TINT-I  | Signal generator<br><br>Remote control unit                     |   | 6. TINT         | <p><b>[Method of adjustment without measuring instrument]</b></p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Proceed to the following adjustment after having completed the adjustment of SUB CONT.</li> <li>• Set PICTURE MODE (VSM) to "BRIGHT".</li> </ul> <p><b>– NTSC 3.58 TINT –</b></p> <ol style="list-style-type: none"> <li>1. Receive a NTSC 3.58 colour bar signal (full field colour bar 75% white).</li> <li>2. Press the COLOUR SYSTEM button on the remote control unit to select the NTSC 3.58 colour system.</li> <li>3. Select <b>2.VC</b> from the SERVICE MENU.</li> <li>4. Select <b>6. TINT</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>5. Set the initial setting value of NTSC 3.58 with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>6. If you cannot get the best tint with the initial setting value, make fine adjustment until you get the best tint.</li> <li>7. Press the DISPLAY key twice to return to the normal screen.</li> </ol> <p><b>– NTSC 4.43 TINT –</b></p> <p>When adjustment is done for NTSC 3.58 TINT, appropriate values are automatically set for NTSC 4.43 TINT.</p>   |
| Adjustment of SUB TINT-II | Signal generator<br><br>Oscilloscope<br><br>Remote control unit | TP-47G<br>TP-E (77)<br>[CRT SOCKET PWB] | 6. TINT         | <p><b>[Method of adjustment using measuring instrument]</b></p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Proceed to the following adjustment after having completed the adjustment of SUB CONT.</li> <li>• Set PICTURE MODE (VSM) to "BRIGHT".</li> </ul> <p><b>– NTSC 3.58 TINT –</b></p> <ol style="list-style-type: none"> <li>1. Receive a NTSC 3.58 colour bar signal (full field colour bar 75% white).</li> <li>2. Press the COLOUR SYSTEM button on the remote control unit to select the NTSC 3.58 colour system.</li> <li>3. Select <b>2.VC</b> from the SERVICE MENU.</li> <li>4. Select <b>6. TINT</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>5. Set the initial setting value of NTSC 3.58 with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>6. Connect the oscilloscope between TP-47G and TP-E.</li> <li>7. Adjust NTSC 3.58 TINT to set the value <b>(B)</b> in the figure to <b>+1V (V<sub>w-cy</sub>)</b>.</li> <li>8. Press the DISPLAY key twice to return to the normal screen.</li> </ol> <p><b>– NTSC 4.43 TINT –</b></p> <p>When adjustment is done for NTSC 3.58 TINT, appropriate values are automatically set for NTSC 4.43 TINT.</p> |

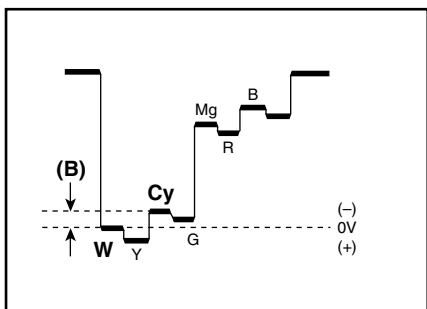

## DEFLECTION CIRCUIT ADJUSTMENTS

The setting (adjustment) using the remote control unit is made on the basis of the initial setting values.  
The setting values which adjust the screen to the optimum condition can be different from the initial setting values.



### Note:




Proceed to the following adjustment after having completed the adjustments of SUB BRIGHT and SUB PICTURE.

### [SUB MENU 3. DEF]




| Setting<br>(Adjustment)<br>item | Variable range | Initial setting value |      |                |      |                         |
|---------------------------------|----------------|-----------------------|------|----------------|------|-------------------------|
|                                 |                | 4:3                   |      | COMPRESS(16:9) |      | COMPONENT<br>DVD (50Hz) |
|                                 |                | 50Hz                  | 60Hz | 50Hz           | 60Hz |                         |
| 1. VER. SLOPE                   | -32 — +31      | +2                    | 0    | 0              | 0    | —                       |
| 2. VER. HEIGHT                  | -32 — +31      | +31                   | 0    | -26            | -29  | —                       |
| 3. VER. POSITION                | -32 — +31      | -3                    | -1   | -3             | +2   | —                       |
| 4. VER. SCURVE                  | -32 — +31      | -10                   | 0    | -10            | 0    | —                       |
| 5. HOR. POSITION                | -32 — +31      | 0                     | +7   | 0              | +7   | +7                      |
| 6. HOR. WIDTH                   | -32 — +31      | +11                   | -1   | +11            | -1   | —                       |
| 7. EW-PIN                       | -32 — +31      | -12                   | -1   | -13            | -12  | —                       |
| 8. EW-TRAPEZ                    | -32 — +31      | -4                    | 0    | 0              | -1   | —                       |
| 9. UP CORNER                    | -32 — +31      | -20                   | 0    | 0              | 0    | —                       |
| 10. DW CORNER                   | -32 — +31      | -19                   | 0    | 0              | 0    | —                       |
| 11. HOR. PARALL                 | -32 — +31      | 0                     | 0    | 0              | 0    | —                       |
| 12. HOR. BOW                    | -32 — +31      | 0                     | 0    | 0              | 0    | —                       |
| 13. V.ZOOM                      | -32 — +31      | -1                    | -1   | +14            | +14  | —                       |

### [COMPRESS (16:9) : OFF, fv: 50Hz mode]

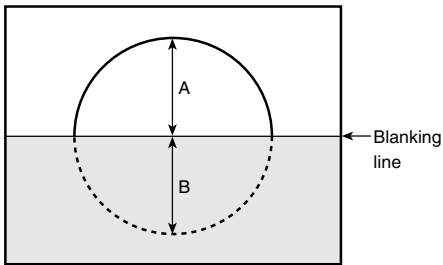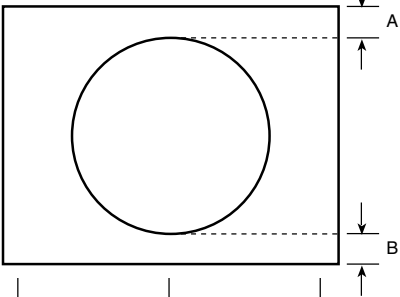
| Item  | Measuring<br>instrument                           | Test point | Adjustment part  | Description  |
|---|---|------------|------------------|--|
| Adjustment<br>of<br>V. SLOPE  | Signal<br>generator<br><br>Remote<br>control unit |            | 1. VER. SLOPE    | <ol style="list-style-type: none"> <li>1. Receive a PAL circle pattern signal of vertical frequency 50Hz.</li> <li>2. Select <b>3. DEF</b> from the SERVICE MENU.</li> <li>3. Select <b>1. VER. SLOPE</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>4. Set the initial setting value of <b>1. VER. SLOPE</b> with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>5. Adjust <b>1. VER. SLOPE</b> to make "A = B" with the MENU <math>\triangleleft/\triangleright</math> key.</li> </ol> |
|  |   |            |                  |  |
| Adjustment<br>of<br>V. POSITION   | Signal<br>generator<br><br>Remote<br>control unit |            | 3. VER. POSITION | <ol style="list-style-type: none"> <li>6. Select <b>3. VER. POSITION</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>7. Set the initial setting value of <b>3. VER. POSITION</b> with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>8. Adjust <b>3. VER. POSITION</b> to make "A = B" with the MENU <math>\triangleleft/\triangleright</math> key.</li> </ol> <p>(to be continued)</p>   |
|  |   |            |                  |  |
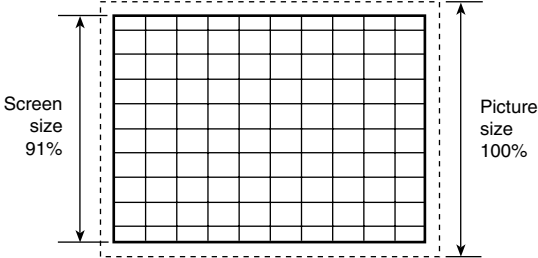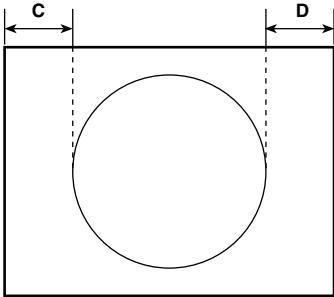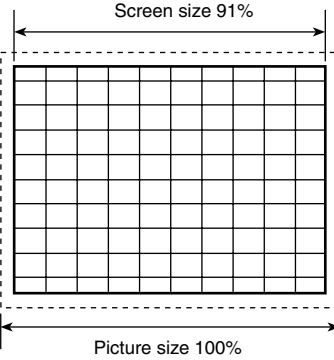
| Item  | Measuring instrument                                      | Test point | Adjustment part                             | Description   |
|---|---|------------|---|---|
| <b>Adjustment of V. HEIGHT</b>  | <b>Signal generator</b><br><br><b>Remote control unit</b> |            | <b>2. VER. HEIGHT</b><br><b>13. V. ZOOM</b> | 9. Receive a PAL cross-hatch signal.<br>10. Select <b>2. VER. HEIGHT</b> with the MENU $\nabla/\Delta$ key.<br>11. Set the initial setting value of <b>2. VER. HEIGHT</b> with the MENU $\triangleleft/\triangleright$ key.<br>12. Select <b>13. V. ZOOM</b> with the MENU $\nabla/\Delta$ key.<br>13. Set the initial setting value of <b>13. V. ZOOM</b> with the MENU $\triangleleft/\triangleright$ key.<br>14. Adjust <b>13. V. ZOOM</b> and make the vertical screen size 91% of the picture size with the MENU $\triangleleft/\triangleright$ key. |
|    |   |            |   |   |
| <b>Adjustment of H. POSITION</b>  | <b>Signal generator</b><br><br><b>Remote control unit</b> |            | <b>5. HOR. POSITION</b>                     | 15. Receive a PAL circle pattern signal.<br>16. Select <b>5. HOR. POSITION</b> with the MENU $\nabla/\Delta$ key.<br>17. Set the initial setting value of <b>5. HOR. POSITION</b> with the MENU $\triangleleft/\triangleright$ key.<br>18. Adjust <b>5. HOR POSITION</b> to make "C=D" with the MENU $\triangleleft/\triangleright$ key.  |
|   |   |            |   |   |
| <b>Adjustment of H. WIDTH</b>   | <b>Signal generator</b><br><br><b>Remote control unit</b> |            | <b>6. HOR. WIDTH</b>                        | 19. Receive a PAL cross-hatch signal.<br>20. Select <b>6. HOR. WIDTH</b> with the MENU $\nabla/\Delta$ key.<br>21. Set the initial setting value of <b>6. HOR. WIDTH</b> with the MENU $\triangleleft/\triangleright$ key.<br>22. Adjust <b>6. HOR. WIDTH</b> and make the horizontal screen size 91% of the picture size with the MENU $\triangleleft/\triangleright$ key.   |
|  |   |            |   |   |
| (to be continued)   |   |            |   |   |

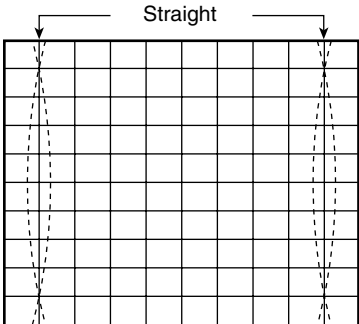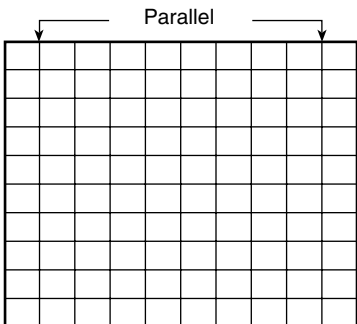
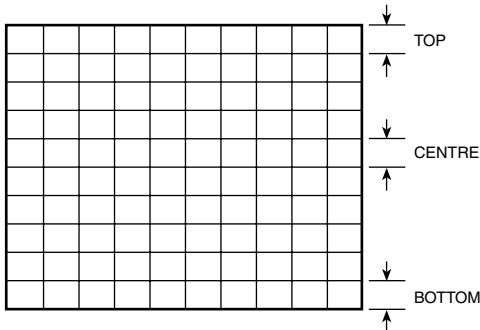





| Item                       | Measuring instrument                        | Test point | Adjustment part | Description  |
|----------------------------|---|------------|-----------------|--|
| Adjustment of<br>SIDE PIN  | Signal generator<br><br>Remote control unit |            | 7. EW-PIN       | <p>23. Select <b>7. EW-PIN</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>24. Set the initial setting value of <b>7. EW-PIN</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>25. Adjust <b>7. EW-PIN</b> so that the first vertical lines at the left and right edges on the screen are straight.</p>       |
|                            |   |            |                 |   |
| Adjustment of<br>TRAPEZIUM | Signal generator<br><br>Remote control unit |            | 8. EW-TRAPEZ    | <p>26. Select <b>8. EW-TRAPEZ</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>27. Set the initial setting value of <b>8. EW-TRAPEZ</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>28. Adjust <b>8. EW-TRAPEZ</b> so that the vertical lines at the left and right edges on the screen are in parallel.</p> |
|                            |   |            |                 |    |
| Adjustment of<br>V.S-CURVE | Signal generator<br><br>Remote control unit |            | 4. VER. SCURVE  | <p>29. Select <b>4. VER. SCURVE</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>30. Set the initial setting value of <b>4. VER. SCURVE</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>31. Adjust <b>4. VER. SCURVE</b> so that the spaces of each line on TOP, CENTRE and BOTTOM become uniform.</p>       |
|                            |   |            |                 |  <p>(to be continued)</p>   |




| Item                      | Measuring instrument                        | Test point | Adjustment part               | Description  |
|---------------------------|---|------------|-------------------------------|--|
| Adjustment of CORNER      | Signal generator<br><br>Remote control unit |            | 9. UP CORNER<br>10. DW CORNER | 32. Select <b>9. UP CORNER</b> with the MENU $\nabla/\Delta$ key.<br>33. Set the initial setting value of <b>9. UP CORNER</b> with the MENU $\triangleleft/\triangleright$ key.<br>34. Select <b>10. DW CORNER</b> with the MENU $\nabla/\Delta$ key.<br>35. Set the initial setting value of <b>10. DW CORNER</b> with the MENU $\triangleleft/\triangleright$ key.<br>36. Adjust <b>9. UP CORNER</b> and <b>10. DW CORNER</b> so that the vertical lines at the four corners on the screen are straight. |
| Adjustment of H. PARALLEL | Signal generator<br><br>Remote control unit |            | 11. HOR. PARALL               | 37. Select <b>11. HOR. PARALL</b> with the MENU $\nabla/\Delta$ key.<br>38. Set the initial setting value of <b>11. HOR. PARALL</b> with the MENU $\triangleleft/\triangleright$ key.<br>39. Adjust <b>11. HOR. PARALL</b> to optimize the parallelogram distortion.   |
| Adjustment of H. BOW      | Signal generator<br><br>Remote control unit |            | 12. HOR. BOW                  | 40. Select <b>12. HOR. BOW</b> with the MENU $\nabla/\Delta$ key.<br>41. Set the initial setting value of <b>12. HOR. BOW</b> with the MENU $\triangleleft/\triangleright$ key.<br>42. Adjust <b>12. HOR. BOW</b> to optimize the horizontal arc distortion.<br>43. Press the DISPLAY key twice to return to the normal screen.  |

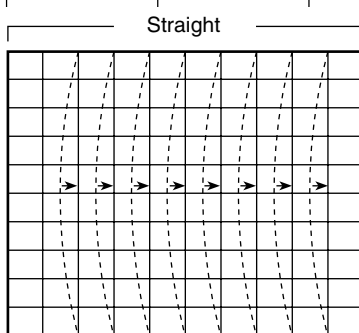


[COMPRESS (16 : 9) : OFF, fv: 60Hz mode ]
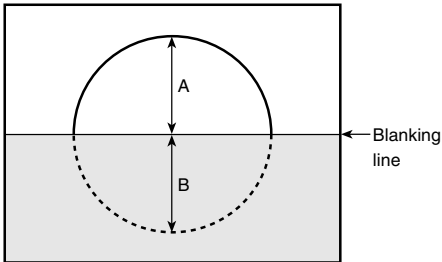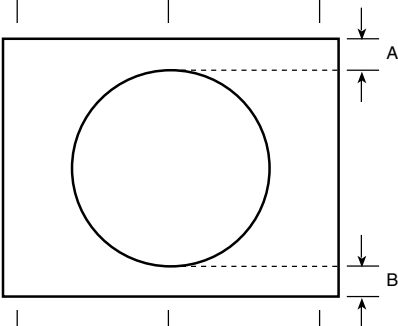
| Item                      | Measuring instrument                        | Test point | Adjustment part  | Description  |
|---------------------------|---|------------|------------------|--|
| Adjustment of V. SLOPE    | Signal generator<br><br>Remote control unit |            | 1. VER. SLOPE    | <ol style="list-style-type: none"> <li>1. Receive a NTSC circle pattern signal of vertical frequency 60Hz.</li> <li>2. Select <b>3. DEF</b> from the SERVICE MENU.</li> <li>3. Select <b>1. VER. SLOPE</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>4. Set the initial setting value of <b>1. VER. SLOPE</b> with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>5. Adjust <b>1. VER. SLOPE</b> to make "<b>A = B</b>" with the MENU <math>\triangleleft/\triangleright</math> key.</li> </ol> |
|                           |   |            |                  |   |
| Adjustment of V. POSITION | Signal generator<br><br>Remote control unit |            | 3. VER. POSITION | <ol style="list-style-type: none"> <li>6. Select <b>3. VER. POSITION</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>7. Set the initial setting value of <b>3. VER. POSITION</b> with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>8. Adjust <b>3. VER. POSITION</b> to make "<b>A = B</b>" with the MENU <math>\triangleleft/\triangleright</math> key.</li> </ol>   |
|                           |   |            |                  |  <p>(to be continued)</p>   |

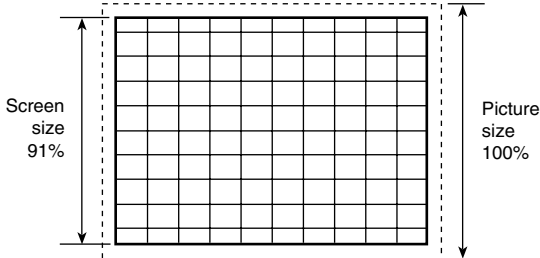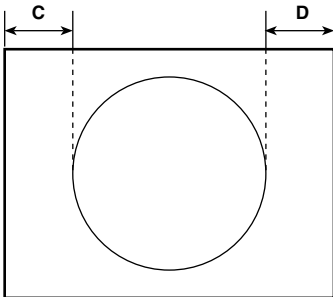
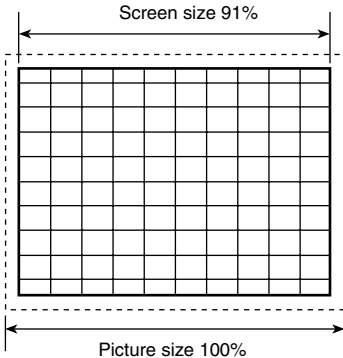
| Item                      | Measuring instrument  | Test point | Adjustment part               | Description  |
|---------------------------|---|------------|-------------------------------|--|
| Adjustment of V. HEIGHT   | Signal generator<br><br>Remote control unit   |            | 2. VER. HEIGHT<br>13. V. ZOOM | <p>9. Receive a NTSC cross-hatch signal.</p> <p>10. Select <b>2. VER. HEIGHT</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>11. Set the initial setting value of <b>2. VER. HEIGHT</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>12. Select <b>13. V. ZOOM</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>13. Set the initial setting value of <b>13. V. ZOOM</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>14. Adjust <b>13. V. ZOOM</b> and make the vertical screen size 91% of the picture size with the MENU <math>\triangleleft/\triangleright</math> key.</p> |
|                           |    |            |                               |  |
| Adjustment of H. POSITION | Signal generator<br><br>Remote control unit   |            | 5. HOR. POSITION              | <p>15. Receive a NTSC circle pattern signal.</p> <p>16. Select <b>5. HOR. POSITION</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>17. Set the initial setting value of <b>5. HOR. POSITION</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>18. Adjust <b>5. HOR POSITION</b> to make "C=D" with the MENU <math>\triangleleft/\triangleright</math> key.</p>  |
|                           |   |            |                               |  |
| Adjustment of H. WIDTH    | Signal generator<br><br>Remote control unit   |            | 6. HOR. WIDTH                 | <p>19. Receive a NTSC cross-hatch signal.</p> <p>20. Select <b>6. HOR. WIDTH</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>21. Set the initial setting value of <b>6. HOR. WIDTH</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>22. Adjust <b>6. HOR. WIDTH</b> and make the horizontal screen size 91% of the picture size with the MENU <math>\triangleleft/\triangleright</math> key.</p>   |
|                           |  |            |                               | (to be continued)  |

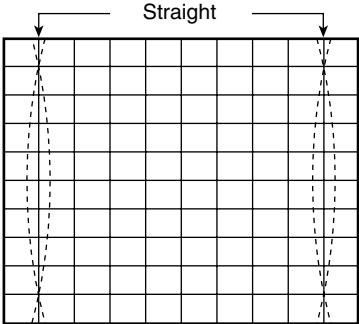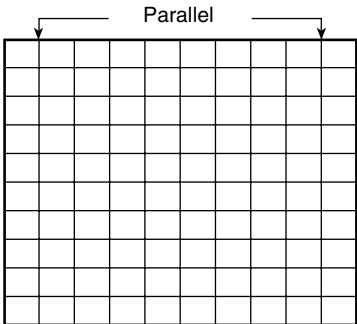
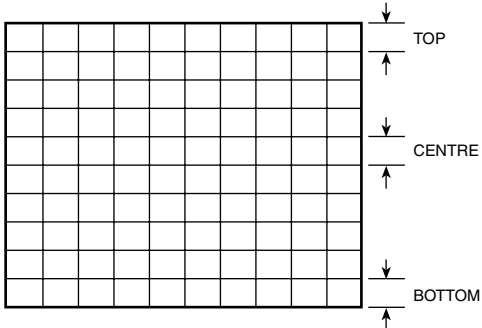
| Item                       | Measuring instrument  | Test point | Adjustment part | Description  |
|----------------------------|---|------------|-----------------|--|
| Adjustment of<br>SIDE PIN  | Signal generator<br><br>Remote control unit   |            | 7. EW-PIN       | <p>23. Select <b>7. EW-PIN</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>24. Set the initial setting value of <b>7. EW-PIN</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>25. Adjust <b>7. EW-PIN</b> so that the first vertical lines at the left and right edges on the screen are straight.</p>       |
|                            |    |            |                 |  |
| Adjustment of<br>TRAPEZIUM | Signal generator<br><br>Remote control unit   |            | 8. EW-TRAPEZ    | <p>26. Select <b>8. EW-TRAPEZ</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>27. Set the initial setting value of <b>8. EW-TRAPEZ</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>28. Adjust <b>8. EW-TRAPEZ</b> so that the vertical lines at the left and right edges on the screen are in parallel.</p> |
|                            |   |            |                 |  |
| Adjustment of<br>V.S-CURVE | Signal generator<br><br>Remote control unit   |            | 4. VER. SCURVE  | <p>29. Select <b>4. VER. SCURVE</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>30. Set the initial setting value of <b>4. VER. SCURVE</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>31. Adjust <b>4. VER. SCURVE</b> so that the spaces of each line on TOP, CENTRE and BOTTOM become uniform.</p>       |
|                            |  |            |                 | (to be continued)  |

| Item                             | Measuring instrument                                      | Test point | Adjustment part                             | Description   |
|----------------------------------|---|------------|---|---|
| <b>Adjustment of CORNER</b>      | <b>Signal generator</b><br><br><b>Remote control unit</b> |            | <b>9. UP CORNER</b><br><b>10. DW CORNER</b> | <p>32. Select <b>9. UP CORNER</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>33. Set the initial setting value of <b>9. UP CORNER</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>34. Select <b>10. DW CORNER</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>35. Set the initial setting value of <b>10. DW CORNER</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>36. Adjust <b>9. UP CORNER</b> and <b>10. DW CORNER</b> so that the vertical lines at the four corners on the screen are straight.</p> |
| <b>Adjustment of H. PARALLEL</b> | <b>Signal generator</b><br><br><b>Remote control unit</b> |            | <b>11. HOR. PARALL</b>                      | <p>37. Select <b>11. HOR. PARALL</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>38. Set the initial setting value of <b>11. HOR. PARALL</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>39. Adjust <b>11. HOR. PARALL</b> to optimize the parallelogram distortion.</p>   |
| <b>Adjustment of H. BOW</b>      | <b>Signal generator</b><br><br><b>Remote control unit</b> |            | <b>12. HOR. BOW</b>                         | <p>40. Select <b>12. HOR. BOW</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>41. Set the initial setting value of <b>12. HOR. BOW</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>42. Adjust <b>12. HOR. BOW</b> to optimize the horizontal arc distortion.</p> <p>43. Press the DISPLAY key twice to return to the normal screen.</p>  |

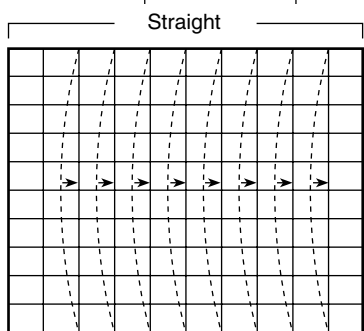



[COMPRESS (16 : 9) : ON, fv: 50Hz mode ]

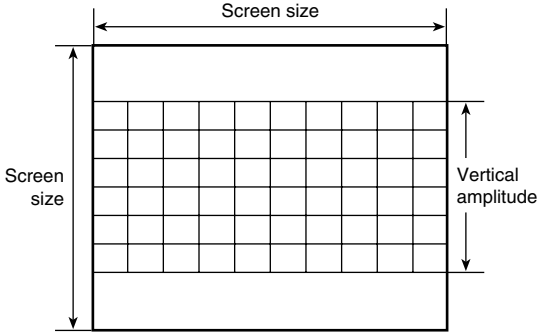
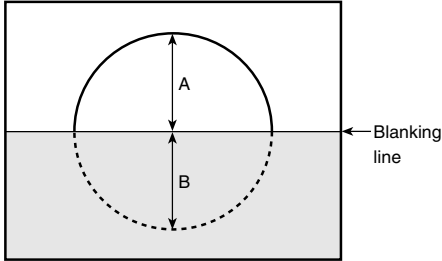
| Item  | Measuring instrument                        | Test point | Adjustment part               | Description  |
|---|---|------------|-------------------------------|--|
| Adjustment of V. HEIGHT   | Signal generator<br><br>Remote control unit |            | 13. V. ZOOM<br>2. VER. HEIGHT | <ol style="list-style-type: none"> <li>1. Receive a PAL cross-hatch signal of vertical frequency 50Hz.</li> <li>2. Select COMPRESS from the MENU and set COMPRESS to ON.</li> <li>3. Select <b>3. DEF</b> from the SERVICE MENU.</li> <li>4. Set the initial setting value of <b>13. V. ZOOM</b> with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>5. Select <b>2. VER. HEIGHT</b> with the MENU <math>\nabla/\triangle</math> key.</li> <li>6. Set the initial setting value of <b>2. VER. HEIGHT</b> with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>7. Adjust <b>2. VER. HEIGHT</b> to set the vertical amplitude of the image to 305mm.</li> </ol> |
|    |   |            |                               |  |
| Adjustment of V. SLOPE  | Signal generator<br><br>Remote control unit |            | 1. VER. SLOPE                 | <ol style="list-style-type: none"> <li>8. Receive a PAL circle pattern signal of vertical frequency 50Hz.</li> <li>9. Select <b>3. DEF</b> from the SERVICE MENU.</li> <li>10. Select <b>1. VER. SLOPE</b> with the MENU <math>\nabla/\triangle</math> key.</li> <li>11. Set the initial setting value of <b>1. VER. SLOPE</b> with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>12. Adjust <b>1. VER. SLOPE</b> to make "<b>A = B</b>" with the MENU <math>\triangleleft/\triangleright</math> key.</li> </ol>  |
|  |   |            |                               |  |
| (to be continued)   |   |            |                               |  |
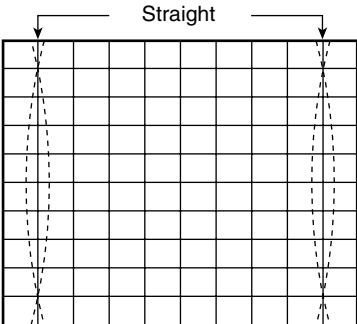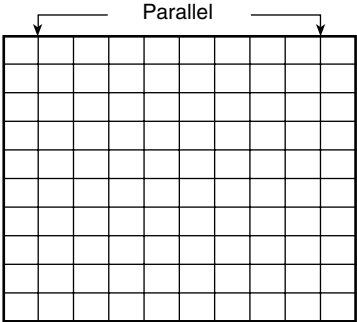
| Item                       | Measuring instrument  | Test point | Adjustment part               | Description  |
|----------------------------|---|------------|-------------------------------|--|
| Adjustment of<br>SIDE PIN  | Signal generator<br><br>Remote control unit   |            | 7. EW-PIN                     | <p>13. Receive a PAL cross-hatch signal.</p> <p>14. Select <b>7. EW-PIN</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>15. Set the initial setting value of <b>7. EW-PIN</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>16. Adjust <b>7. EW-PIN</b> so that the first vertical lines at the left and right edges on the screen are straight.</p>  |
|                            |    |            |                               |  |
| Adjustment of<br>TRAPEZIUM | Signal generator<br><br>Remote control unit   |            | 8. EW-TRAPEZ                  | <p>17. Select <b>8. EW-TRAPEZ</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>18. Set the initial setting value of <b>8. EW-TRAPEZ</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>19. Adjust <b>8. EW-TRAPEZ</b> so that the vertical lines at the left and right edges on the screen are in parallel.</p>   |
|                            |  |            |                               |  |
| Adjustment of<br>CORNER    | Signal generator<br><br>Remote control unit   |            | 9. UP CORNER<br>10. DW CORNER | <p>20. Select <b>9. UP CORNER</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>21. Set the initial setting value of <b>9. UP CORNER</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>22. Select <b>10. DW CORNER</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>23. Set the initial setting value of <b>10. DW CORNER</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>24. Adjust <b>9. UP CORNER</b> and <b>10. DW CORNER</b> so that the vertical lines at the four corners on the screen are straight.</p> <p>25. Press the DISPLAY key twice to return to the normal screen.</p> |




[COMPRESS (16 : 9) : ON, fv: 60Hz mode ]
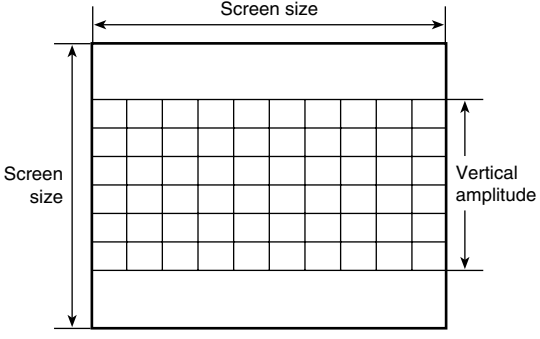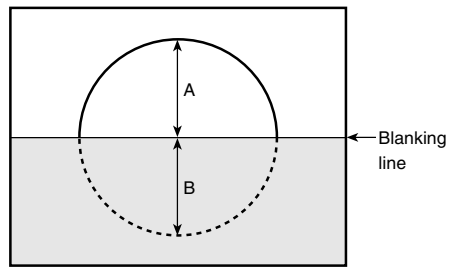
| Item  | Measuring instrument                        | Test point | Adjustment part               | Description   |
|---|---|------------|-------------------------------|---|
| Adjustment of V. HEIGHT   | Signal generator<br><br>Remote control unit |            | 13. V. ZOOM<br>2. VER. HEIGHT | <ol style="list-style-type: none"> <li>1. Receive a NTSC cross-hatch signal of vertical frequency 60Hz.</li> <li>2. Select COMPRESS from the MENU and set COMPRESS to ON.</li> <li>3. Select <b>3. DEF</b> from the SERVICE MENU.</li> <li>4. Set the initial setting value of <b>13. V. ZOOM</b> with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>5. Select <b>2. VER. HEIGHT</b> with the MENU <math>\nabla/\triangle</math> key.</li> <li>6. Set the initial setting value of <b>2. VER. HEIGHT</b> with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>7. Adjust <b>2. VER. HEIGHT</b> to set the vertical amplitude of the image to 305mm.</li> </ol> |
|    |   |            |                               |   |
| Adjustment of V. SLOPE  | Signal generator<br><br>Remote control unit |            | 1. VER. SLOPE                 | <ol style="list-style-type: none"> <li>8. Receive a NTSC circle pattern signal of vertical frequency 60Hz.</li> <li>9. Select <b>3. DEF</b> from the SERVICE MENU.</li> <li>10. Select <b>1. VER. SLOPE</b> with the MENU <math>\nabla/\triangle</math> key.</li> <li>11. Set the initial setting value of <b>1. VER. SLOPE</b> with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>12. Adjust <b>1. VER. SLOPE</b> to make "<b>A = B</b>" with the MENU <math>\triangleleft/\triangleright</math> key.</li> </ol>  |
|  |   |            |                               |   |
| (to be continued)   |   |            |                               |   |
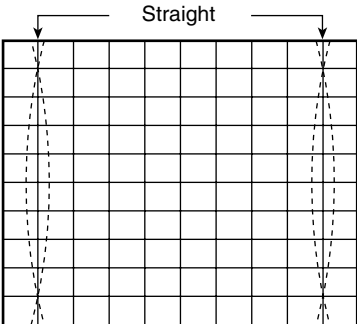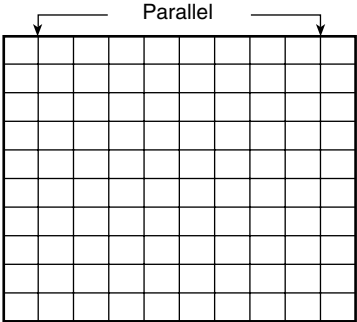
| Item                       | Measuring instrument  | Test point | Adjustment part               | Description  |
|----------------------------|---|------------|-------------------------------|--|
| Adjustment of<br>SIDE PIN  | Signal generator<br><br>Remote control unit   |            | 7. EW-PIN                     | <p>13. Receive a NTSC cross-hatch signal.</p> <p>14. Select <b>7. EW-PIN</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>15. Set the initial setting value of <b>7. EW-PIN</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>16. Adjust <b>7. EW-PIN</b> so that the first vertical lines at the left and right edges on the screen are straight.</p>   |
|                            |    |            |                               |  |
| Adjustment of<br>TRAPEZIUM | Signal generator<br><br>Remote control unit   |            | 8. EW-TRAPEZ                  | <p>17. Select <b>8. EW-TRAPEZ</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>18. Set the initial setting value of <b>8. EW-TRAPEZ</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>19. Adjust <b>8. EW-TRAPEZ</b> so that the vertical lines at the left and right edges on the screen are in parallel.</p>   |
|                            |  |            |                               |  |
| Adjustment of<br>CORNER    | Signal generator<br><br>Remote control unit   |            | 9. UP CORNER<br>10. DW CORNER | <p>20. Select <b>9. UP CORNER</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>21. Set the initial setting value of <b>9. UP CORNER</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>22. Select <b>10. DW CORNER</b> with the MENU <math>\nabla/\Delta</math> key.</p> <p>23. Set the initial setting value of <b>10. DW CORNER</b> with the MENU <math>\triangleleft/\triangleright</math> key.</p> <p>24. Adjust <b>9. UP CORNER</b> and <b>10. DW CORNER</b> so that the vertical lines at the four corners on the screen are straight.</p> <p>25. Press the DISPLAY key twice to return to the normal screen.</p> |

[VIDEO - 2 SET : COMPONENT, fv: 50/60Hz mode]
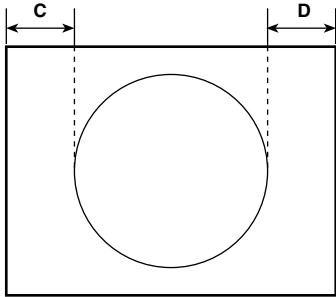
| Item                      | Measuring instrument   | Test point | Adjustment part  | Description   |
|---------------------------|--|------------|------------------|---|
| Adjustment of H. POSITION | Signal generator<br><br>Remote control unit<br><br> |            | 5. HOR. POSITION | <ol style="list-style-type: none"> <li>1. Receive a PAL circle pattern signal to VIDEO-2 terminal.</li> <li>2. Select VIDEO-2 SET from the MENU and set VIDEO-2 SET to COMPONENT.</li> <li>3. Select 3. DEF from the SERVICE MENU.</li> <li>4. Select 5. HOR. POSITION with the MENU <math>\nabla/\Delta</math> key.</li> <li>5. Set the initial setting value of 5. HOR. POSITION with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>6 Adjust 5. HOR POSITION to make "C=D" with the MENU <math>\triangleleft/\triangleright</math> key.</li> <li>7. Press the DISPLAY key twice to return to the normal screen.</li> </ol> |

## VSM PRESET SETTING

| Item  | Measuring instrument | Test point | Adjustment part  | Description   |                                     |        |          |      |                          |    |   |   |                            |    |   |   |                            |    |   |   |                             |    |    |    |                            |    |   |   |
|---|----------------------|------------|--|---|-------------------------------------|--------|----------|------|--------------------------|----|---|---|----------------------------|----|---|---|----------------------------|----|---|---|-----------------------------|----|----|----|----------------------------|----|---|---|
| Setting of VSM PRESET   | Remote control unit  |            | 1. TINT<br>2. COLOUR<br>3. BRIGHT<br>4. PICTURE<br>5. DETAIL | <div>1. Select 4. VSM PRESET from the SERVICE MENU.</div> <div>2. Select BRIGHT with the PICTURE MODE key.</div> <div>3. Adjust the MENU ▽/△ key and MENU ◁/▷ key to reset the set values of 1. TINT – 5. DETAIL to the values shown in the table.</div> <div>4. Respectively select the VSM PRESET mode for SOFT and STANDARD, and make similar adjustment as in 3 above.</div> <div>5. Press the DISPLAY key twice to return to the normal screen.</div> <div>[Setting Values for SUB MENU 4. VSM PRESET]</div> <table><tr><th>VSM preset mode<br/>VSM Setting item</th><th>BRIGHT</th><th>STANDARD</th><th>SOFT</th></tr><tr><td>1. TINT<br/>SETTING VALUE</td><td>15</td><td>←</td><td>←</td></tr><tr><td>2. COLOUR<br/>SETTING VALUE</td><td>15</td><td>←</td><td>←</td></tr><tr><td>3. BRIGHT<br/>SETTING VALUE</td><td>15</td><td>←</td><td>←</td></tr><tr><td>4. PICTURE<br/>SETTING VALUE</td><td>30</td><td>15</td><td>11</td></tr><tr><td>5. DETAIL<br/>SETTING VALUE</td><td>15</td><td>←</td><td>7</td></tr></table> | VSM preset mode<br>VSM Setting item | BRIGHT | STANDARD | SOFT | 1. TINT<br>SETTING VALUE | 15 | ← | ← | 2. COLOUR<br>SETTING VALUE | 15 | ← | ← | 3. BRIGHT<br>SETTING VALUE | 15 | ← | ← | 4. PICTURE<br>SETTING VALUE | 30 | 15 | 11 | 5. DETAIL<br>SETTING VALUE | 15 | ← | 7 |
| VSM preset mode<br>VSM Setting item   | BRIGHT               | STANDARD   | SOFT   |   |                                     |        |          |      |                          |    |   |   |                            |    |   |   |                            |    |   |   |                             |    |    |    |                            |    |   |   |
| 1. TINT<br>SETTING VALUE  | 15                   | ←          | ←  |   |                                     |        |          |      |                          |    |   |   |                            |    |   |   |                            |    |   |   |                             |    |    |    |                            |    |   |   |
| 2. COLOUR<br>SETTING VALUE  | 15                   | ←          | ←  |   |                                     |        |          |      |                          |    |   |   |                            |    |   |   |                            |    |   |   |                             |    |    |    |                            |    |   |   |
| 3. BRIGHT<br>SETTING VALUE  | 15                   | ←          | ←  |   |                                     |        |          |      |                          |    |   |   |                            |    |   |   |                            |    |   |   |                             |    |    |    |                            |    |   |   |
| 4. PICTURE<br>SETTING VALUE   | 30                   | 15         | 11   |   |                                     |        |          |      |                          |    |   |   |                            |    |   |   |                            |    |   |   |                             |    |    |    |                            |    |   |   |
| 5. DETAIL<br>SETTING VALUE  | 15                   | ←          | 7  |   |                                     |        |          |      |                          |    |   |   |                            |    |   |   |                            |    |   |   |                             |    |    |    |                            |    |   |   |
| <div>SUB MENU 4. VSM PRESET</div> <div><div>BRIGHT</div><div>TINT           **</div><div>COLOUR       **</div><div>BRIGHT       **</div><div>PICTURE       **</div><div>DETAIL        **</div><div>MENU ▲▼: SELECT</div><div>MENU -/+: OPERATE   DISPLAY : EXIT</div></div> |                      |            |  |   |                                     |        |          |      |                          |    |   |   |                            |    |   |   |                            |    |   |   |                             |    |    |    |                            |    |   |   |

## PRESET SETTING

- Do not adjust 5. PRESET in the SERVICE MENU as it requires no adjustment.

### [SUB MENU 5. PRESET]

|    | Setting item  | Variable range | Initial setting value |
|----|---------------|----------------|-----------------------|
| 1  | PSNS          | 0/1            | 0                     |
| 2  | ACL           | 0/1            | 0                     |
| 3  | MUS           | 0/1            | 0                     |
| 4  | MAT           | 0/1            | 0                     |
| 5  | FCO           | 0/1            | 0                     |
| 6  | BPS           | 0/1            | 0                     |
| 7  | IFLH          | 0/1            | 0                     |
| 8  | VID           | 0/1            | 0                     |
| 9  | STM           | 0/1            | 0                     |
| 10 | AFCW          | 0/1            | 0                     |
| 11 | VSW           | 0/1            | 0                     |
| 12 | FFI           | 0/1            | 0                     |
| 13 | AGC           | 00/01/10/11    | 01                    |
| 14 | CL            | 50 – 95        | 50                    |
| 15 | AKB           | 0/1            | 0                     |
| 16 | HBL           | 0/1            | 0                     |
| 17 | BKS           | 0/1            | 1                     |
| 18 | READ STATUS   | —              | —                     |
| 19 | VNR           | 00 – 63        | 25                    |
| 20 | PEAK          | 0 – 3          | 1                     |
| 21 | IVG           | 0/1            | 1                     |
| 22 | WPL           | 0 – F          | 5                     |
| 23 | SOFT CLIPPER  | 0 – 3          | 0                     |
| 24 | IF PLL OFFSET | 0 – 63         | 32                    |
| 25 | OVERSHOOT     | 0 – 3          | 3                     |
| 26 | HCO           | 0/1            | 0                     |
| 27 | HP2           | 0/1            | 0                     |
| 28 | AI VOLUME ADN | 00/01/10/11    | 10                    |
| 31 | CCCLOOP       | 0 – 4          | 0                     |

## AUDIO ADJUSTMENT [AV-29W93/BK, AV-29W93B/BK only]

- Do not adjust 6. A2NICAM (1.ERROR LIMIT, 2.A2 ID THR, 3.SOUND SYSTEM) in the SERVICE MENU as it requires no adjustment.

### [SUB MENU 6. A2NICAM]

| Setting item                     | Variable range | Initial setting value (fixed) |
|----------------------------------|----------------|-------------------------------|
| 1. ERROR LIMIT (Do not adjust.)  | 000H – FF0H    | 100H                          |
| 2. A2 ID THR (Do not adjust.)    | 00H – FFH      | 0AH                           |
| 3. SOUND SYSTEM (Do not adjust.) | —              | —                             |

## PURITY ADJUSTMENT (AV-29W83/BK, AV-29W93/BK, AV-29W93B/BK only)

**Note:** The final adjustment of CONVERGENCE must be done after the FOCUS adjustment. (CONVERGENCE is changed by FOCUS adjustment.)  
When makes difference by FOCUS adjustment, should be reconfirming PURITY adjustment.

1. Demagnetize CRT with the demagnetizer.
2. Loosen the retainer screw of the deflection yoke.
3. Remove the wedges.
4. Input a green raster signal from the signal generator, and turn the screen to green raster.
5. Move the deflection yoke backward.
6. Bring the long lug of the purity magnets on the short lug and position them horizontally. (Fig. 2)
7. Adjust the gap between two lugs so that the GREEN RASTER will come into the centre of the screen. (Fig. 3)
8. Move the deflection yoke forward, and fix the position of the deflection yoke so that the whole screen will become green.
9. Insert the wedge to the top side of the deflection yoke so that it will not move.
10. Input a crosshatch signal.
11. Verify that the screen is horizontal.
12. Input red and blue raster signals, and make sure that purity is properly adjusted.

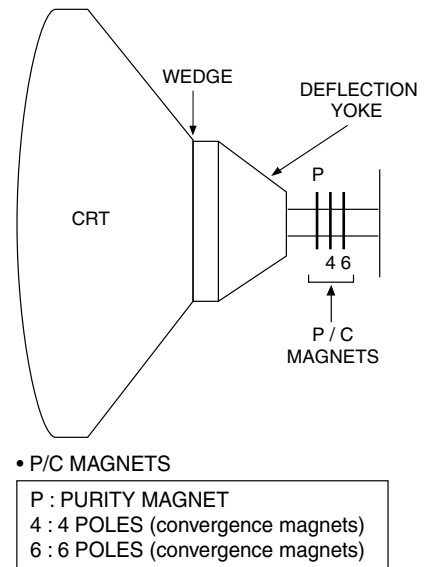


Fig. 1

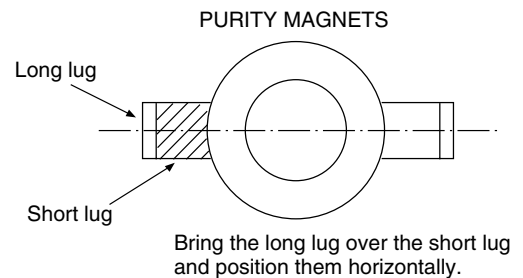


Fig. 2

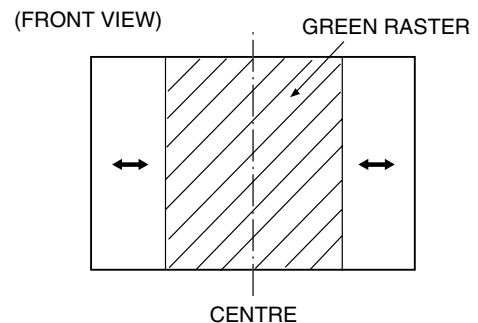


Fig. 3

## CONVERGENCE ADJUSTMENTS (AV-29W83/BK, AV-29W93/BK, AV-29W93B/BK only)

### STATIC CONVERGENCE ADJUSTMENT

1. Input a crosshatch signal.
2. Using 4-pole convergence magnets, overlap the red and blue lines in the centre of the screen (Fig. 4) and turn them to magenta (red/blue).
3. Using 6-pole convergence magnets, overlap the magenta (red/blue) and green lines in the centre of the screen and turn them to white.
4. Repeat 2 and 3 above, and make best convergence.

### DYNAMIC CONVERGENCE ADJUSTMENT

1. Using the  $Y_H$  VR on the deflection yoke, match the  $Y_H$  (CROSS). (Fig. 5 and 8)
2. Using the  $Y_V$  VR on the deflection yoke, match the  $Y_V$ . (Fig. 6 and 8)
3. Repeat the steps 1 and 2, obtain an optimum convergence.
4. Differential coil ADJUSTMENT.  
In case where the horizontal lines of red and blue around the centre of both sides of the picture as shown in Fig. 7, adjust the  $X_v$  difference by using the differential coil on the top of the deflection yoke (Fig. 8) so as to minimize the  $X_v$  difference.

- After adjustment, fix the wedge at the original position.  
Fasten the retainer screw of the deflection yoke.  
Fix the P/C magnet with glue.

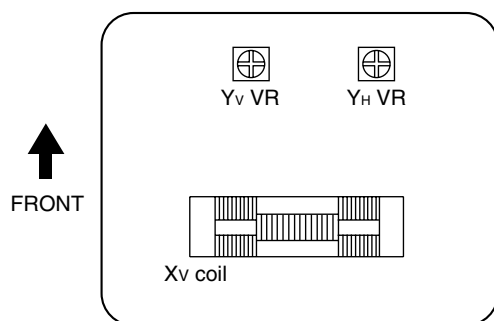


Fig. 8

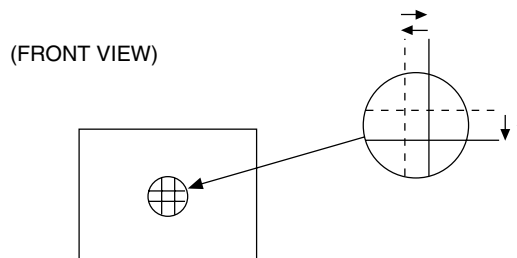


Fig. 4

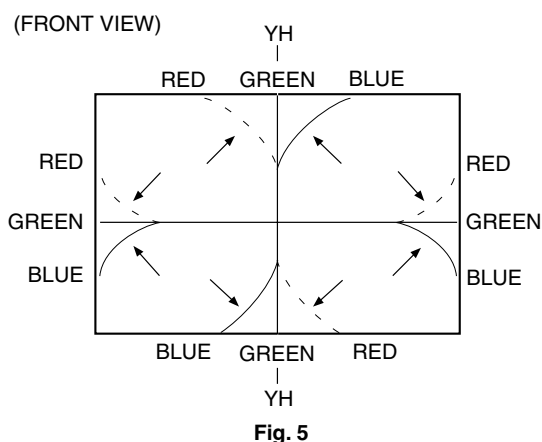


Fig. 5

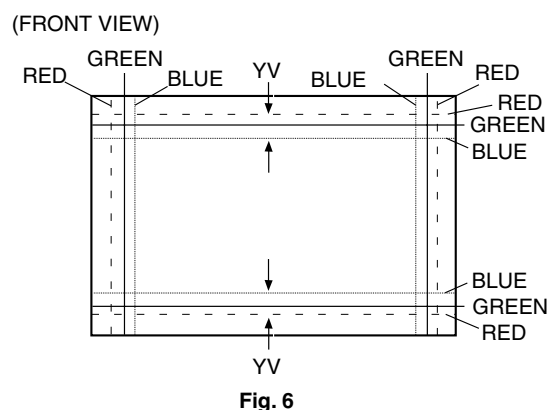


Fig. 6

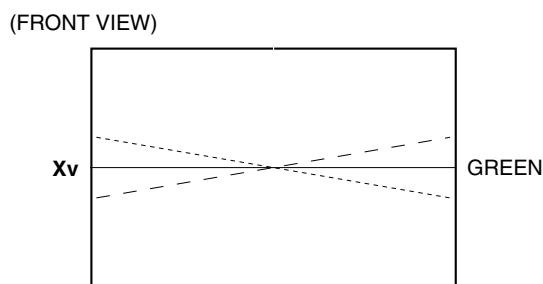


Fig. 7

# SELF-CHECK FUNCTIONS

## 1. Outline


This model has self-check functions given below. When an abnormality has been detected, the SUB POWER is turned off and both ECO and ON TIMER LEDs flash to inform of the failure. An abnormality is detected by the signal input state of the control line connected to the microcomputer.

## 2. Self check items

| Check item              | Details of detection                           | Method of detection  | State of abnormality   |
|-------------------------|--|--|--|
| Over-current protection | An over-current on the low B line is detected. | The main microcomputer detects the possible abnormality at 30-msec.intervals and judges the results in every 16 time. Of the 16 times, if NG is detected more than 9 times, it is judged that there is an abnormality. | When an abnormality has been detected, the SUB-POWER is turned off. While the SUB-POWER is being turned off, the POWER key on the remote control unit is not operational until the power cord is taken out and put in again. |
| CRT NECK protection     | Operation of CRT NECK protection circuit       | DITTO  | DITTO  |

## 3. Self check indicating function

When an abnormality has been detected at about 5 seconds after the power is turned on, the SUB POWER is turned off immediately and the LEDs flash.

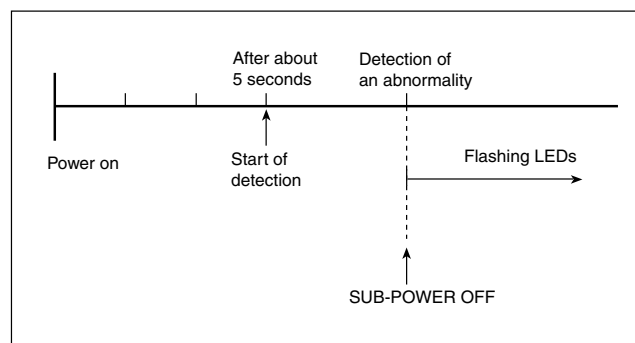

### [ Indication by the LEDs]

| Item                      | LEDs flashing intervals | Priority of detection |
|---------------------------|-------------------------|-----------------------|
| ① Over-current protection | At 0.2-second intervals | 1                     |
| ② CRT NECK protection     | At 1-second intervals   | 2                     |

**Note:** In case of ① + ②, the item ① is indicated.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.





VICTOR COMPANY OF JAPAN, LIMITED

HOME AV NETWORK BUSINESS UNIT. 12,3-chome,Moriya-cho,Kanagawa-ku,Yokohama,Kanagawa-prefecture,221-8528,Japan

AV29W83BK-BK #4  
AV29W93BK-BK #4

AV29W93BBK-BK #4  
AV29W83BVT-CK #4  
AV29W83VT-CK #4



Printed in Japan  
0211 WPC