
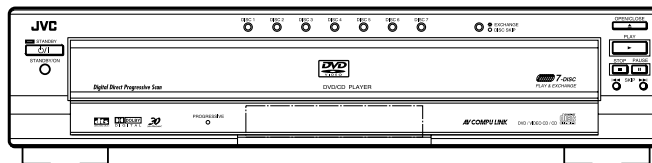


# JVC

# SERVICE MANUAL

## DVD VIDEO PLAYER

# XV-F80BK / XV-F85GD



**Area Suffix (XV-F80BK)**

J ----- U.S.A.  
C ----- Canada

**Area Suffix (XV-F85GD)**

J ----- U.S.A.



**Each difference point**

Model	Body color
XV-F80BK	Black
XV-F85GD	Gold

**< ATTENTION ! >**

Please pull out the AC plug code after the standby indicator lights pushing the power supply button without fail after completing the repair.

The mechanism becomes initialed position.

There is a possibility to break when carrying in not initialed position the mechanism but the state.

**Contents**

Safety precautions	1-2	Disassembly method	1-6
Preventing static electricity	1-3	Adjustment method	1-24
Importance admistering		Troubleshooting	1-28
point on the safety	1-4	Description of major ICs	1-32
Precautions for service	1-5	Glossary of term and abbreviations	1-52

## Safety Precautions

1. This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by ( $\triangle$ ) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.

### 5. Leakage current check (Electrical shock hazard testing)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.


Do not use a line isolation transformer during this check.

- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).

- Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 ohms per volt or more sensitivity in the following manner. Connect a  $1,500\ \Omega$  10W resistor paralleled by a  $0.15\ \mu\text{F}$  AC-type capacitor between an exposed metal part and a known good earth ground. Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

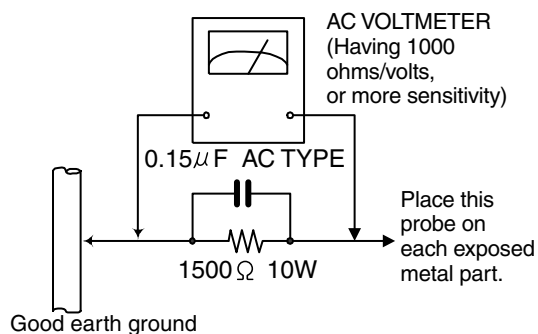

## Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

## CAUTION

**Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of preforming repair of this system.**

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (■), diode (▣) and ICP (●) or identified by the " $\triangle$ " mark nearby are critical for safety.

When replacing them, be sure to use the parts of the same type and rating as specified by the manufacturer. (Except the J and C version)

# Preventing static electricity

Electrostatic discharge (ESD), which occurs when static electricity stored in the body, fabric, etc. is discharged, can destroy the laser diode in the traverse unit (optical pickup). Take care to prevent this when performing repairs.

## 1.1. Grounding to prevent damage by static electricity


Static electricity in the work area can destroy the optical pickup (laser diode) in devices such as DVD players. Be careful to use proper grounding in the area where repairs are being performed.

### 1.1.1. Ground the workbench

1. Ground the workbench by laying conductive material (such as a conductive sheet) or an iron plate over it before placing the traverse unit (optical pickup) on it.

### 1.1.2. Ground yourself

1. Use an anti-static wrist strap to release any static electricity built up in your body.

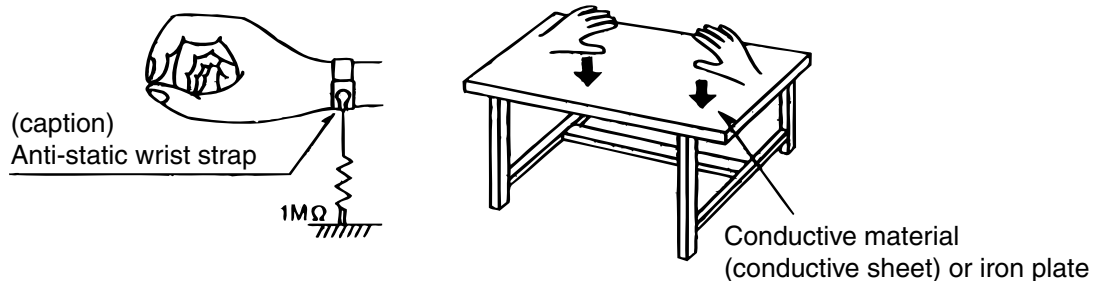


### 1.1.3. Handling the optical pickup

1. In order to maintain quality during transport and before installation, both sides of the laser diode on the replacement optical pickup are shorted. After replacement, return the shorted parts to their original condition. (Refer to the text.)
2. Do not use a tester to check the condition of the laser diode in the optical pickup. The tester's internal power source can easily destroy the laser diode.

## 1.2. Handling the traverse unit (optical pickup)

1. Do not subject the traverse unit (optical pickup) to strong shocks, as it is a sensitive, complex unit.
2. Cut off the shorted part of the flexible cable using nippers, etc. after replacing the optical pickup. For specific details, refer to the replacement procedure in the text. Remove the anti-static pin when replacing the traverse unit. Be careful not to take too long a time when attaching it to the connector.
3. Handle the flexible cable carefully as it may break when subjected to strong force.
4. It is not possible to adjust the semi-fixed resistor that adjusts the laser power. Do not turn it

# Importance Admistering point on the Safety

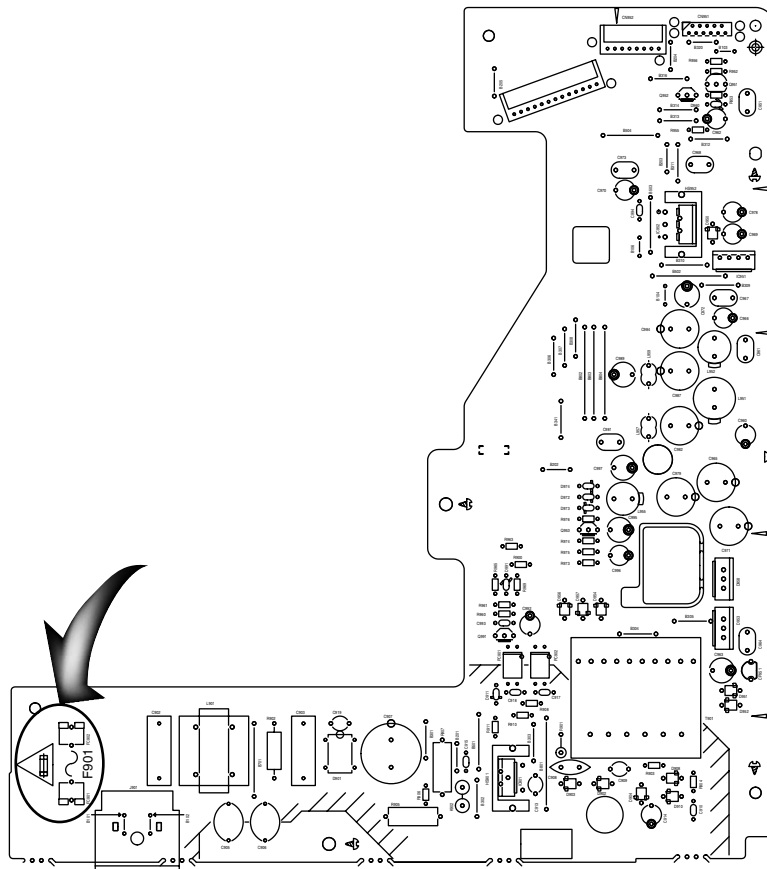

## Full Fuse Replacement Marking

Graphic symbol mark  
(This symbol means fast blow type fuse.)



should be read as follows ;


### FUSE CAUTION

FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE AND RATING OF FUSES ;

**F901 : 1.6 A / 125 V**

## Marquage Pour Le Remplacement Complet De Fusible

Le symbole graphique (Ce symbole signifie fusible de type à fusion rapide.)



doit être interprété comme suit ;

### PRECAUTIONS SUR LES FUSIBLES

POUR UNE PROTECTION CONTINUE CONTRE DES RISQUES D'INCENDIE, REMPLACER SEULEMENT PAR UN FUSIBLE DU MEME TYPE ;

**F901 : 1.6 A / 125 V**

## Precautions for Service


### Handling of Traverse Unit and Laser Pickup

1. Do not touch any peripheral element of the pickup or the actuator.
2. The traverse unit and the pickup are precision devices and therefore must not be subjected to strong shock.
3. Do not use a tester to examine the laser diode. (The diode can easily be destroyed by the internal power supply of the tester.)
4. To replace the traverse unit, pull out the metal short pin for protection from charging.
5. When replacing the pickup, after mounting a new pickup, remove the solder on the short land which is provided at the center of the flexible wire to open the circuit.
6. Half-fixed resistors for laser power adjustment are adjusted in pairs at shipment to match the characteristics of the optical block.  
Do not change the setting of these half-fixed resistors for laser power adjustment.

### Destruction of Traverse Unit and Laser Pickup by Static Electricity

Laser diodes are easily destroyed by static electricity charged on clothing or the human body. Before repairing peripheral elements of the traverse unit or pickup, be sure to take the following electrostatic protection:

1. Wear an antistatic wrist wrap.
2. With a conductive sheet or a steel plate on the workbench on which the traverse unit or the pick up is to be repaired, ground the sheet or the plate.
3. After removing the flexible wire from the connector (CN101), short-circuit the flexible wire by the metal clip.
4. Short-circuit the laser diode by soldering the land which is provided at the two places of the flexible board for the pickup.  
After completing the repair, remove at the two places of the solder to open the circuit.

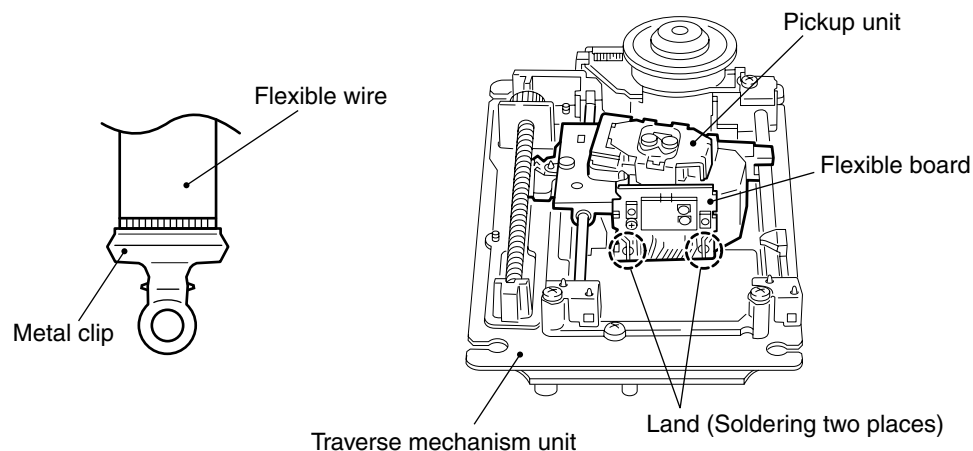

# Disassembly method

## <Main body>

### ■ Removing the top cover (See Fig.1)

1. Remove the two screws **A** on each side of the body.
2. Remove the two screws **B** on the back of the body.
3. Lift the rear part of the top cover and remove in the direction of the arrow while pulling both sides of the top cover outward.

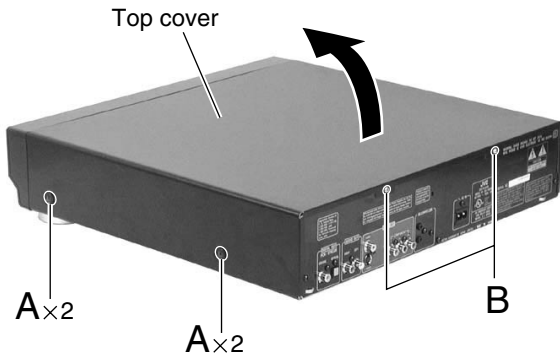


Fig.1

### ■ Removing the front panel assembly (See Fig.2 and 3)

• Prior to performing the following procedure, remove the top cover.

1. Disconnect the card wire from connector CN801 and CN803 on the servo control board, and CN951 on the power board respectively.
2. Remove the three screws **C** on the upper side of the body.
3. Remove the three screws **D** on the bottom of the body.

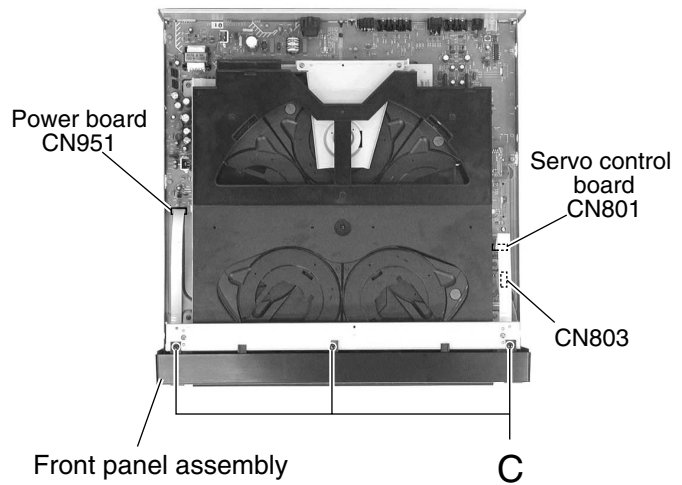


Fig.2

Remove the front panel assembly toward the front.

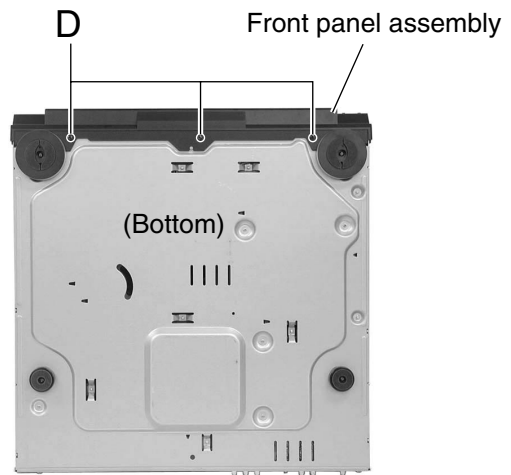


Fig.3

**■ Removing the main tray assembly  
(See Fig.4 to 6)**

· Prior to performing the following procedure, remove the top cover and the front panel assembly.

1. Turn over the body and insert a screwdriver into the slot of the bottom chassis, then move it in the direction of the arrow in Fig.4. The main tray assembly will move forward.
2. Draw the main tray assembly toward the front manually.
3. Bring up the joint **a** over the boss of the loading base assembly, and remove the main tray assembly toward the front.
4. Disconnect the card wire, on the back of the main tray assembly, from connector CN841 on the relay board 1.

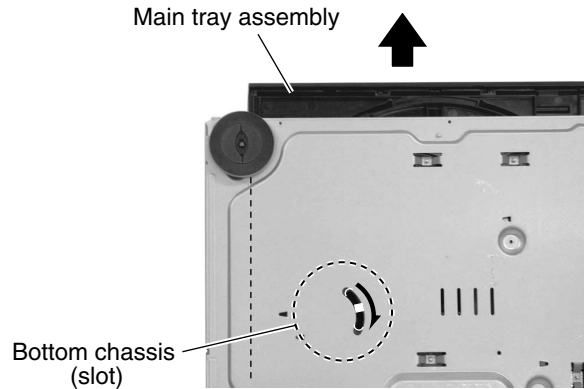


Fig.4

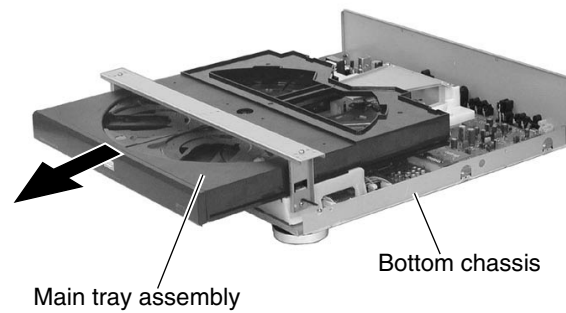


Fig.5

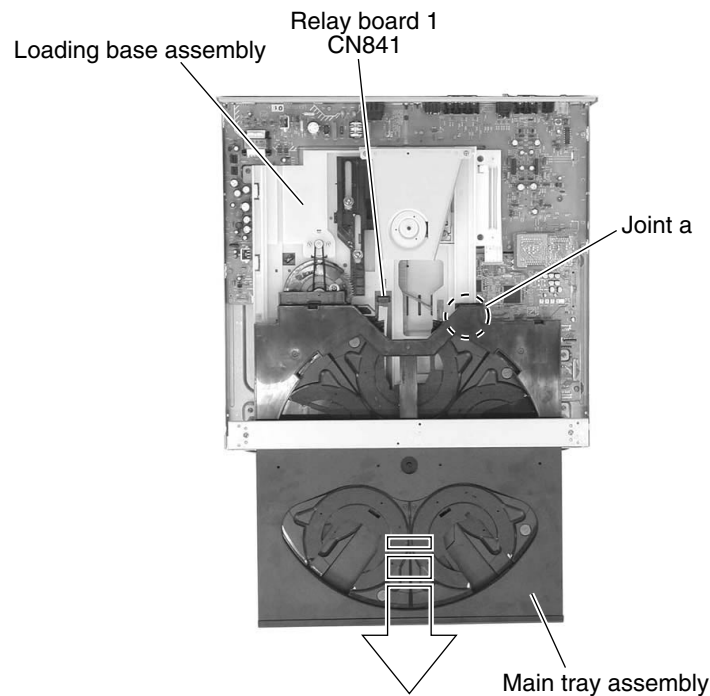


Fig.6

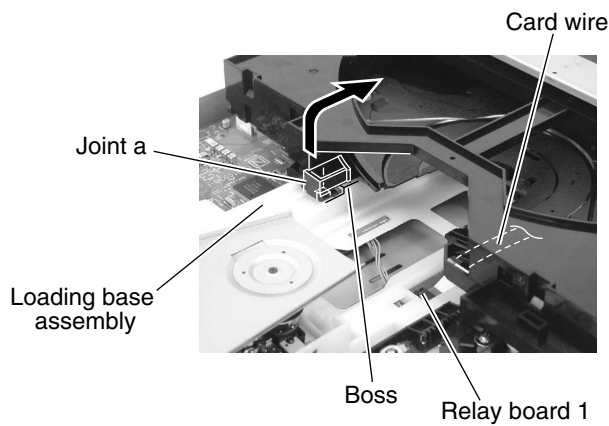


Fig.7

**– Reattaching the main tray assembly –**  
**(See Fig.8 to 10)**

1. Turn over the main tray assembly and pass the card wire extending from the photo sensor board through the notch **b**, in advance (Fig.8).
2. From above the loading base assembly, turn the load base counterclockwise until the slide gear stops at the back end (Bring down the traverse mechanism assembly).
3. Reattach the main tray assembly to the loading base assembly while fitting to the groove on the right and left sides of the loading base assembly.
4. Connect the card wire through the notch **b** to connector CN841 on the relay board 1.
5. Reattach the main tray assembly while fitting the slot **c** to the shaft.

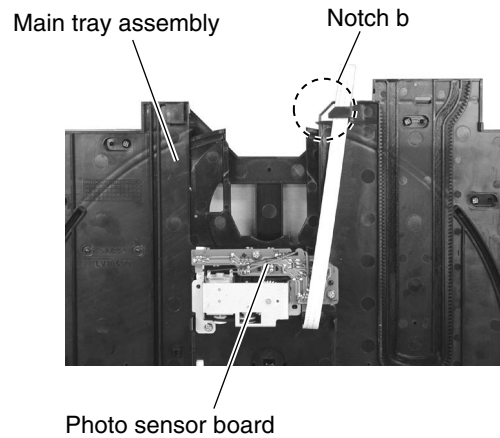


Fig.8

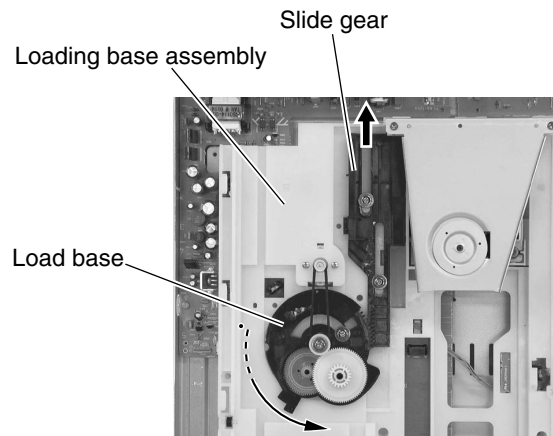


Fig.9

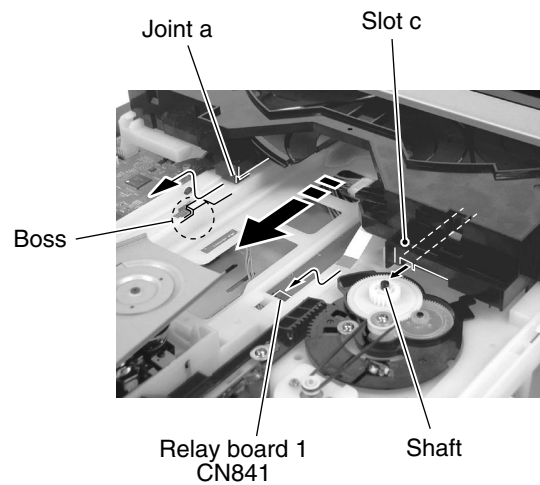


Fig.10



## ■ Removing the loading base assembly (See Fig.11)

- Prior to performing the following procedure, remove the top cover, the front panel assembly and the main tray assembly.

1. Disconnect the wire from connector CN808, CN809 and the card wire from CN210 on the servo control board respectively.
2. Remove the seven screws **E** attaching the loading base assembly.

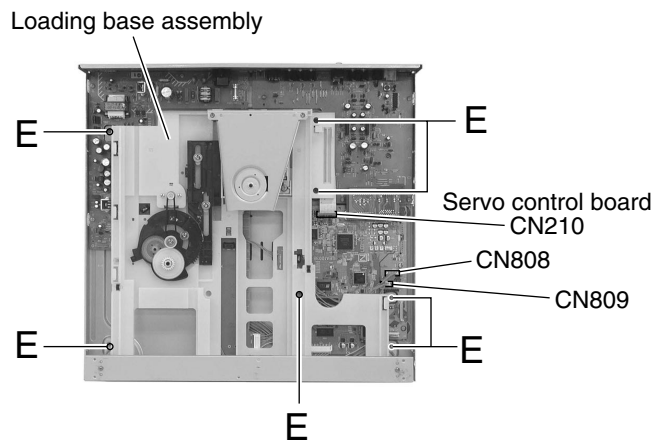


Fig.11

## ■ Removing each board (See Fig.12 to 14)

- Prior to performing the following procedure, remove the top cover, the front panel assembly, the main tray assembly and the loading base assembly.

### – Servo control board –

1. Pull out the relay board 2 on the upper side of the body.
2. Disconnect the wire from connector CN807, CN810 and CN910 on the servo control board respectively.
3. Remove the screw **G** attaching the lug wire.
4. Remove the three screws **F** attaching the servo control board.

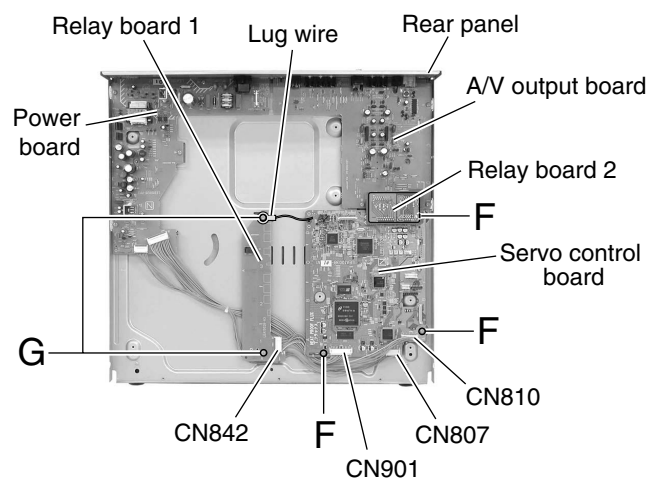


Fig.12

### – Relay board 1 –

1. Disconnect the wire from connector CN842 on the relay board 1.
2. Remove the two screws **G** attaching the relay board.

### – A/V output board –

1. Pull out the relay board 2 on the upper side of the body.
2. Remove the four screws **H** attaching the A/V output board.
3. Remove the eight screws **I** on the back of the body.

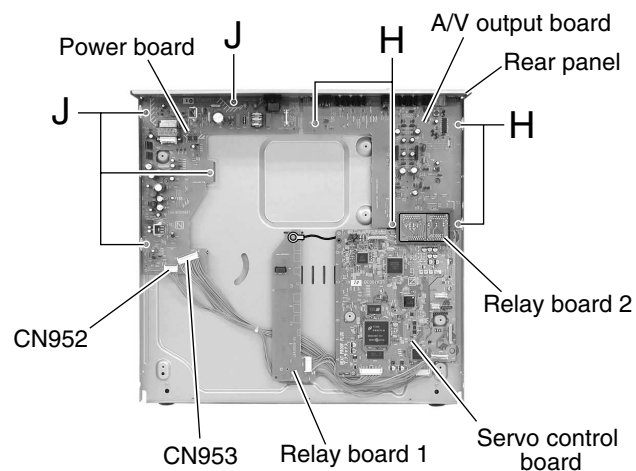


Fig.13

### – Power board –

1. Disconnect the wire from connector CN952 and CN953 on the power board.
2. Remove the four screws **J** on the upper side of the body.
3. Remove the screw **K** on the back of the body.

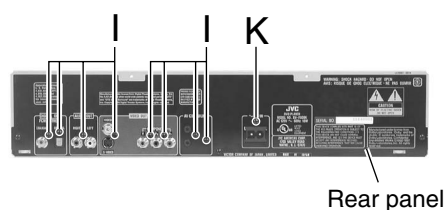


Fig.14

### ■ Removing the traverse mechanism assembly (See Fig.15 and 16)

- Prior to performing the following procedure, remove the top cover and the front panel assembly.

REFERENCE: There is no need to remove the loading base assembly.

1. Eject the main tray assembly toward the front referring to "Removing the main tray assembly".
2. Remove the two screws **L** and pull out the clamber base assembly upward.
3. Disconnect the card wire from connector CN210 on the servo control board.
4. Remove the four screws **M** and the traverse mechanism assembly upward.

CAUTION: When reattaching the traverse mechanism assembly, pass the card wire extending from the traverse mechanism assembly through the notch **d** of the elevator base.

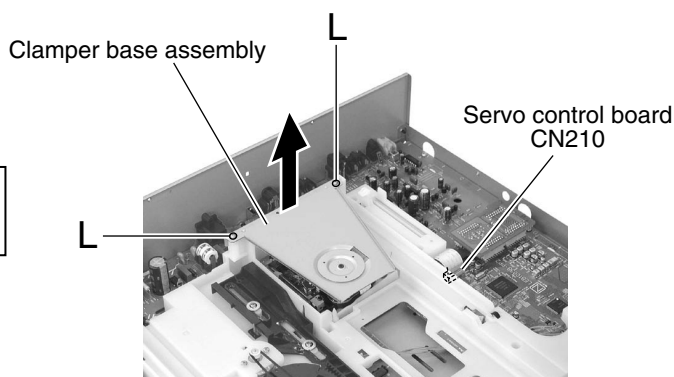


Fig.15

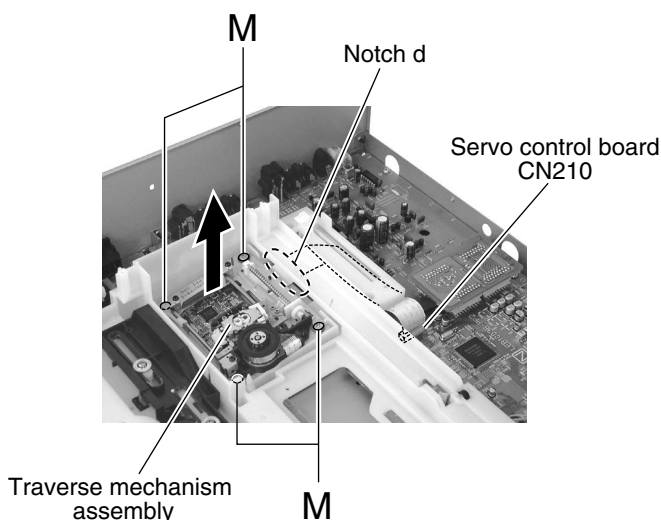


Fig.16

### <Front panel assembly>

- Prior to performing the following procedure, remove the top cover and the front panel assembly.

### ■ Removing the power switch board (See Fig.17)

1. Remove the two screws **N** on the back of the front panel assembly.
2. Disconnect the card wire from connector CN813 and CN806 on the power switch board.

### ■ Removing the operation switch board (See Fig.17)

1. Remove the six screws **O** on the back of the front panel assembly.
2. Disconnect the card wire from connector CN812 on the operation switch board.

### ■ Removing the FL display board (See Fig.17)

1. Remove the two screws **P** on the back of the front panel assembly.
2. Disconnect the card wire from connector CN805 on the FL display board.

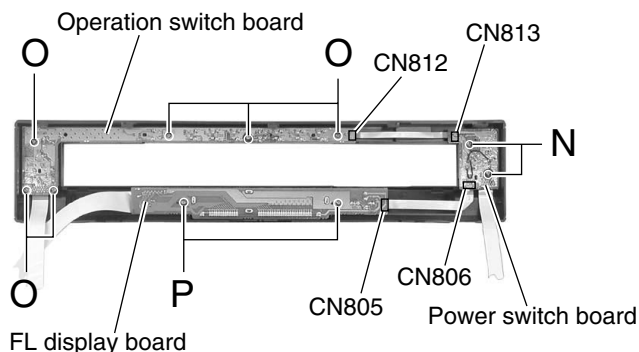


Fig.17

## <Loading base assembly unit>

- Prior to performing the following procedures, remove the top cover, the front panel assembly, the main tray assembly, the loading base assembly.

### ■ Removing the elevator base (See Fig.18 and 19)

REFERENCE: It is not necessary to remove the traverse mechanism assembly from the elevator base. As the removing procedure of the traverse mechanism, please refer to "Removing the traverse mechanism assembly".

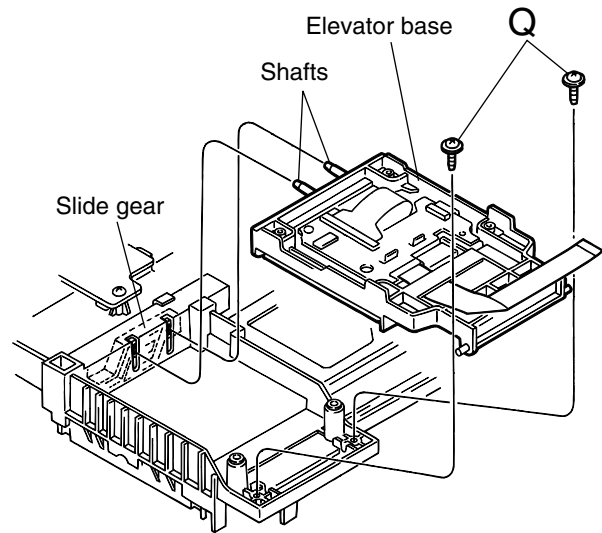


Fig.18

1. Turn over the loading base assembly and remove the two screws **Q**.
2. Remove the elevator base upward.

### – Reattaching the elevator base –

REFERENCE: From above the loading base, turn the load base counterclockwise until the slide gear stops at the back end as shown in Fig.19.

1. Reattach the elevator base to the loading base assembly while fitting the two shafts on the side of the elevator base to the grooves of the slide gear.
2. Reattach the two screws **Q**.

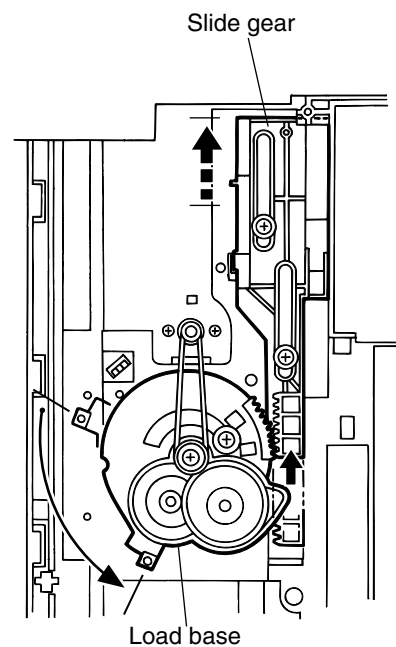


Fig.19

### ■ Removing the belt / load base / slide gear

- Prior to performing the following procedures, remove the elevator base.
1. Remove the belt on the upper side of the loading base assembly.
  2. Remove the screw **R** attaching the pulley gear.
  3. Remove the pulley gear, the gear 1, the gear 2 and the belt respectively.
  4. Remove the screw **S** and the load base upward.
  5. Remove the two screws **T** and the slide gear upward.

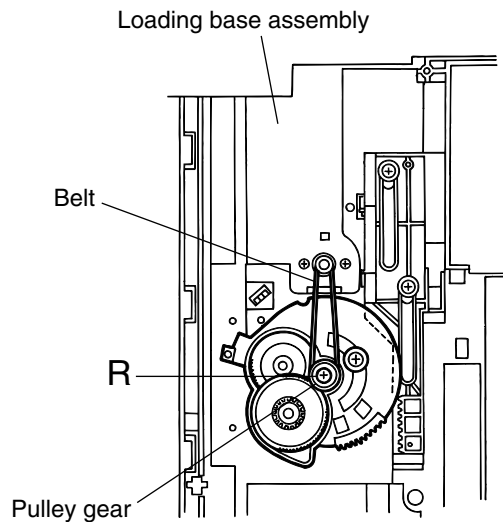


Fig.20

### CAUTION: When reattaching the slide gear and the load base,

1. Move the slide gear toward the front until it stops (Fig.23).
2. Make sure that the part **d** of the load base is out of alignment with the switch **e** and that the gear **f** is disengaged from the slide gear.

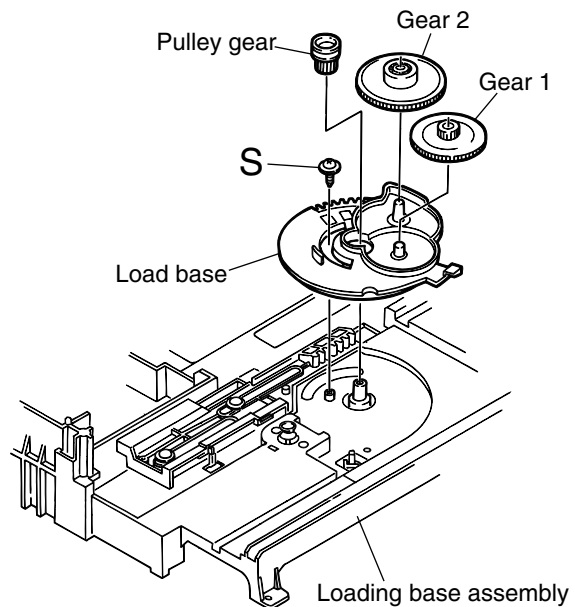


Fig.21

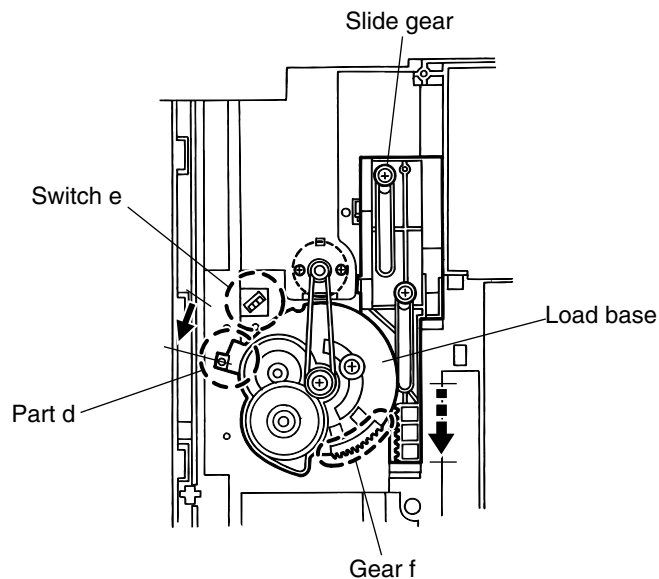


Fig.23

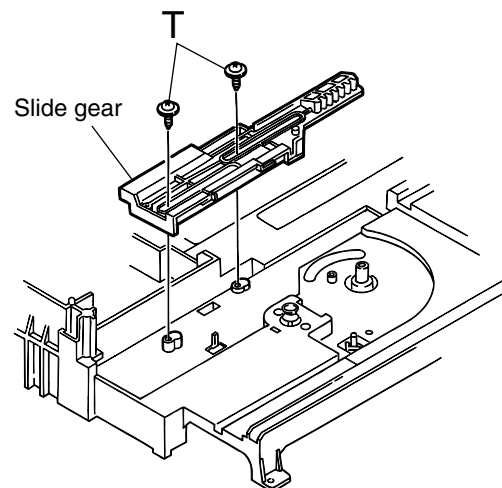


Fig.22

## ■ Removing the loading motor / loading motor board (See Fig.24 and 25)

1. Remove the two screws **U** attaching the loading motor on the upper side of the loading base assembly.
2. Turn over the loading base assembly and unsolder the two soldering **g** on the loading motor board.
3. Remove the two screws **V** attaching the loading motor board.
4. Spread apart the two tabs **h** and pull out the loading motor.

**CAUTION:** When reattaching the loading motor board, settle the wires on the two hooks **i** on the loading base assembly and draw the other end to the left as shown in Fig.26.

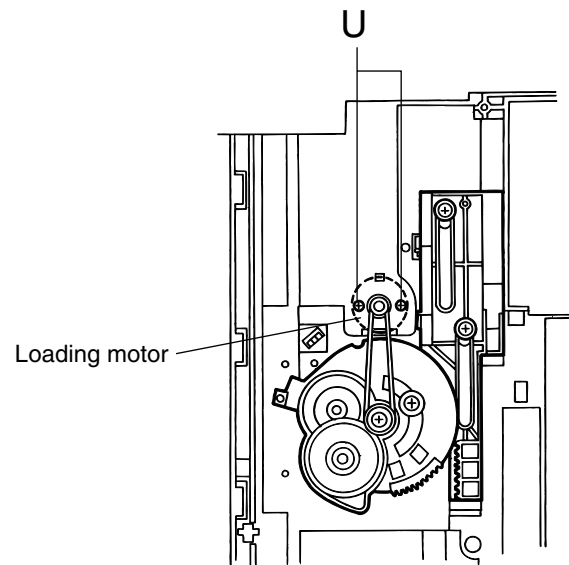


Fig.24

## ■ Removing the tray switch board (See Fig.26)

1. Turn over the loading base assembly, and remove the tray switch board while spreading apart the two tabs **j**.

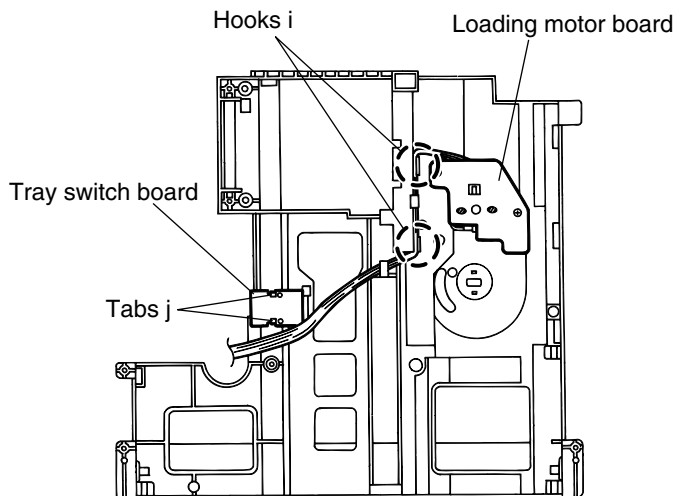


Fig.26

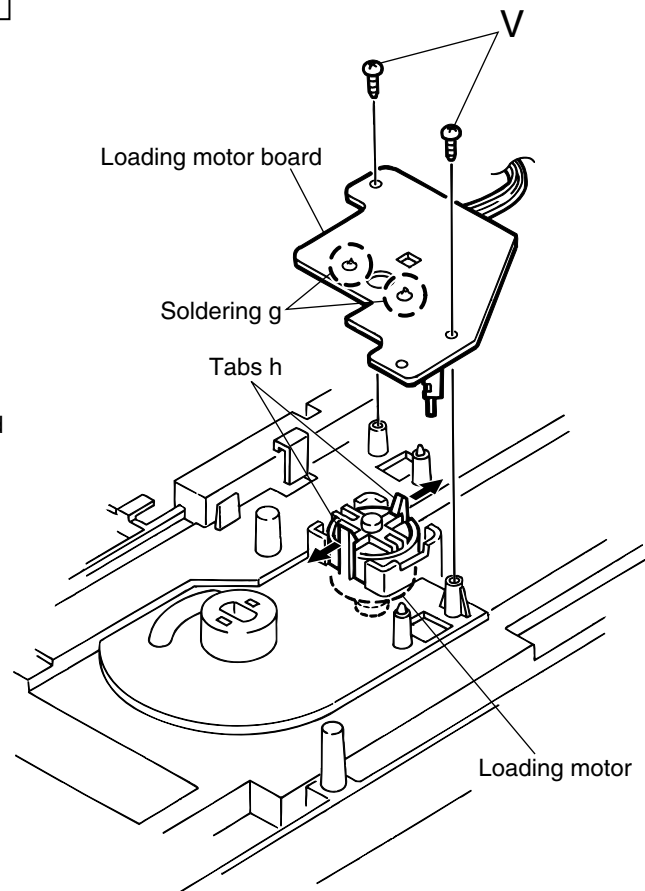



Fig.25

## < Traverse mechanism unit >

### ■ Removing the pickup (See Fig.1 to 5)





※ It is not necessary to remove the traverse mechanism unit.

1. Solder soldering **a** on the flexible board next to the pickup unit.
2. From the bottom of the traverse mechanism unit, disconnect the flexible wire from CN101 on the pickup board.

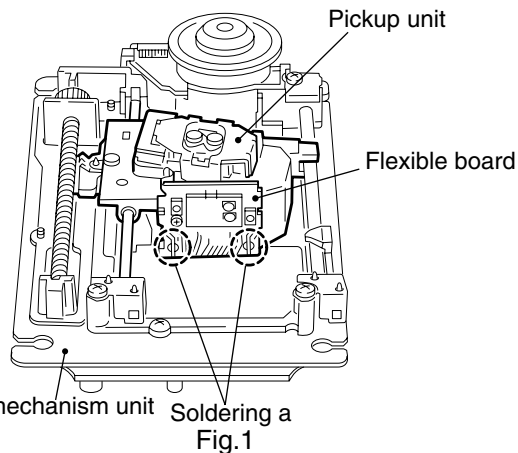

**ATTENTION:** Disconnecting the flexible wire without soldering may cause damage to the pickup.

3. Remove the screw **A** attaching the shaft stopper (R) on the upper side of the traverse mechanism unit. Pull the side of the shaft stopper (R) outward to release the joint **b** and remove it upward. Remove the skew spring at the same time.
4. Move the shaft in the direction of the arrow to release it from the part **c**.
5. Release the joint **d** with the shaft and remove the pickup with the shaft.
6. Pull out the shaft.
7. Remove the screw **B** attaching the switch actuator.

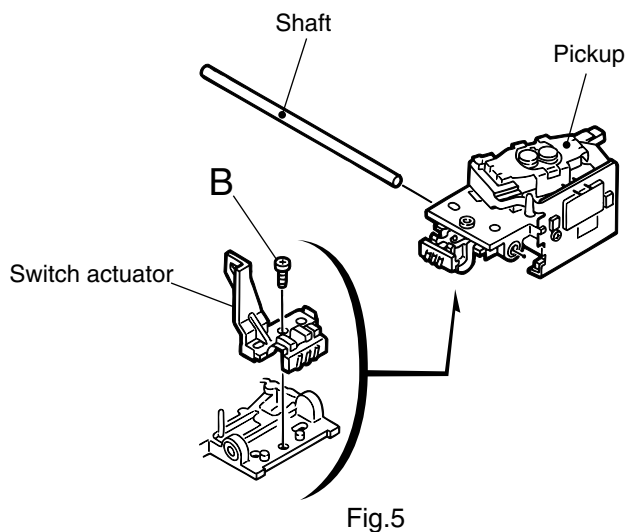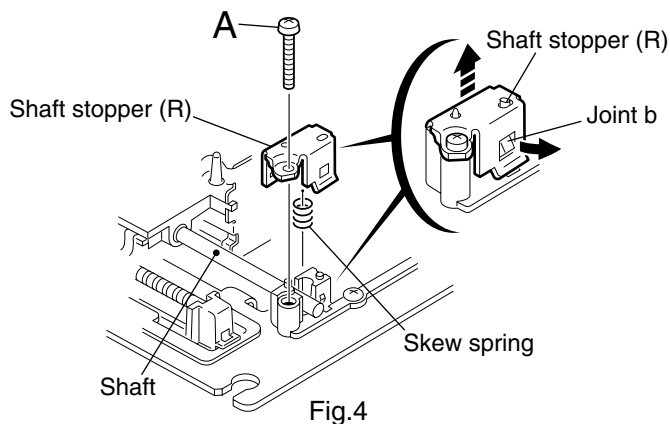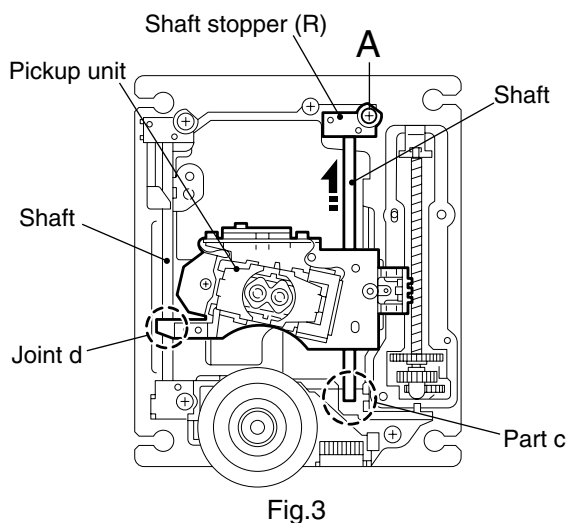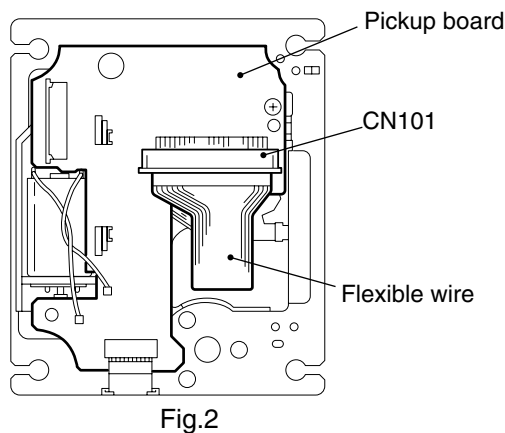


## ■ Removing the pickup board (See Fig.1 and 6)

※ It is not necessary to remove the traverse mechanism unit.

1. Solder soldering **a** on the flexible board next to the pickup unit.
2. From the bottom of the traverse mechanism unit, disconnect the flexible wire from CN101 on the pickup board.

**ATTENTION:** Disconnecting the flexible wire without soldering may cause damage to the pickup.

3. Disconnect the card wire from connector CN201 on the pickup board and unsolder the soldering **e** and **f** on the harnesses
4. Remove the screw **C** attaching the pickup board and release the two joints **g**.

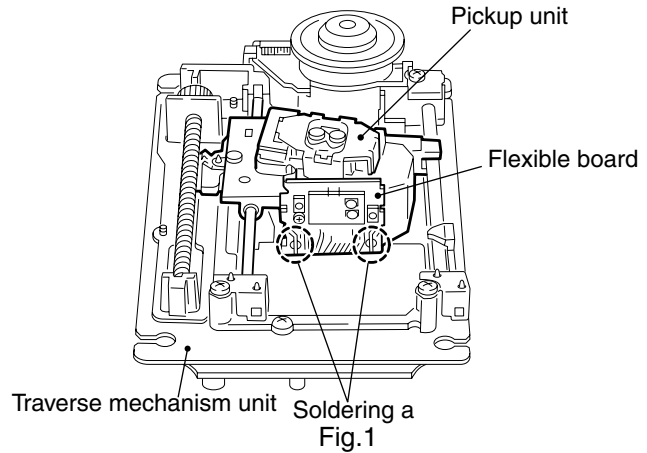

## ■ Removing the feed motor assembly (See Fig.1, 6 and 7)

• Prior to performing the following procedure, remove the traverse mechanism unit.

1. Solder soldering **a** on the flexible board next to the pickup unit.
2. From the bottom of the traverse mechanism unit, disconnect the flexible wire from CN101 on the pickup board.

**ATTENTION:** Disconnecting the flexible wire without soldering may cause damage to the pickup.

3. Remove the pickup board.
4. Remove the two screws **D** attaching the feed motor assembly and remove the thrust spring. Move the feed motor assembly in the direction of the arrow to pull it out from the feed holder.

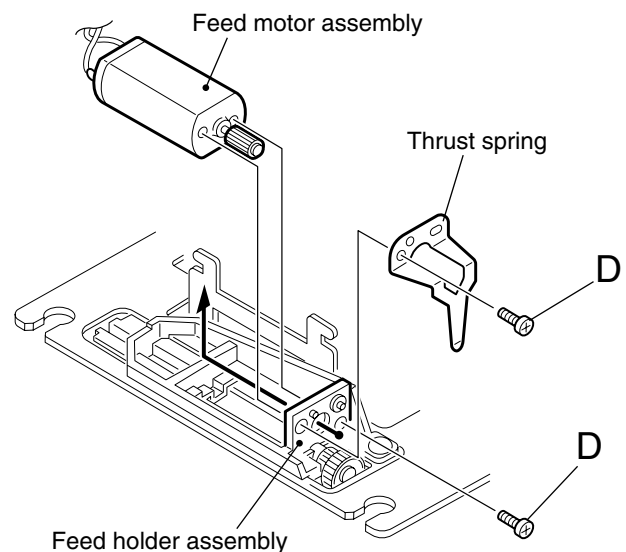
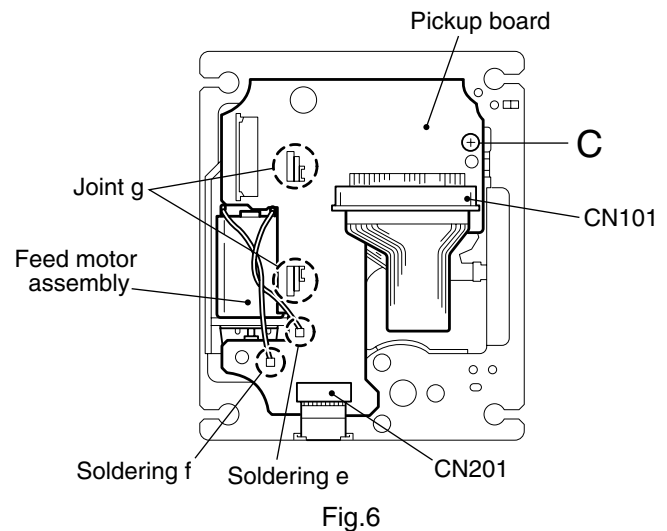


Fig.7

■ **Removing the turn table assembly**  
**(See Fig.6, 8 and 9)**

- Prior to performing the following procedure, remove the traverse mechanism unit.
1. Disconnect the card wire extending from the turn table assembly, from connector CN201 on the pickup board.
  2. Remove the screw **E** attaching the shaft stopper (**F**) on the upper side of the traverse mechanism unit. Pull the side of the shaft stopper (**F**) outward to release the joint **h** and remove it upward. Remove the spring at the same time.
  3. Remove the screw **F** attaching the turn table assembly.
  4. Move the turn table assembly outward and pull out from the shaft. Then remove it from the base chassis.

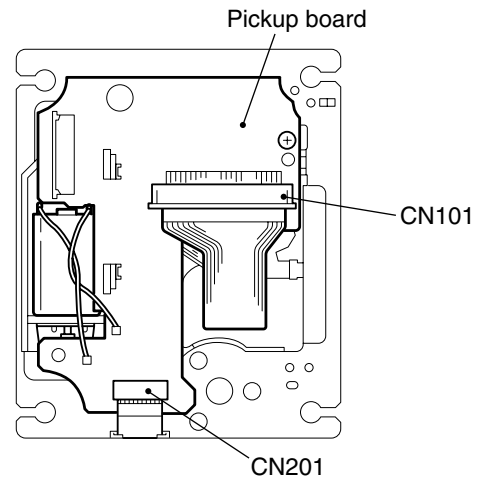


Fig.6

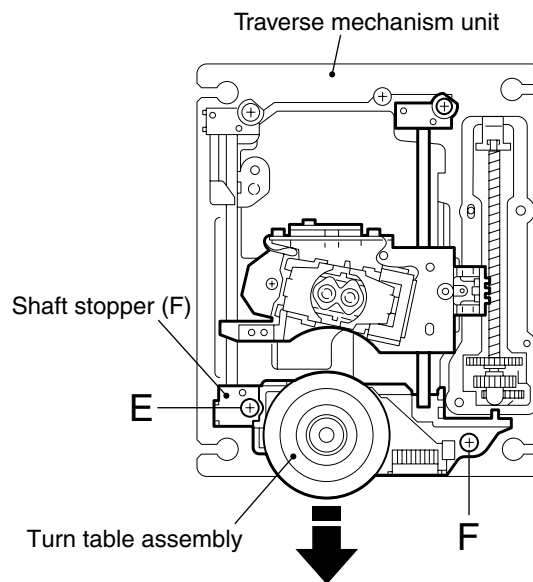


Fig.8

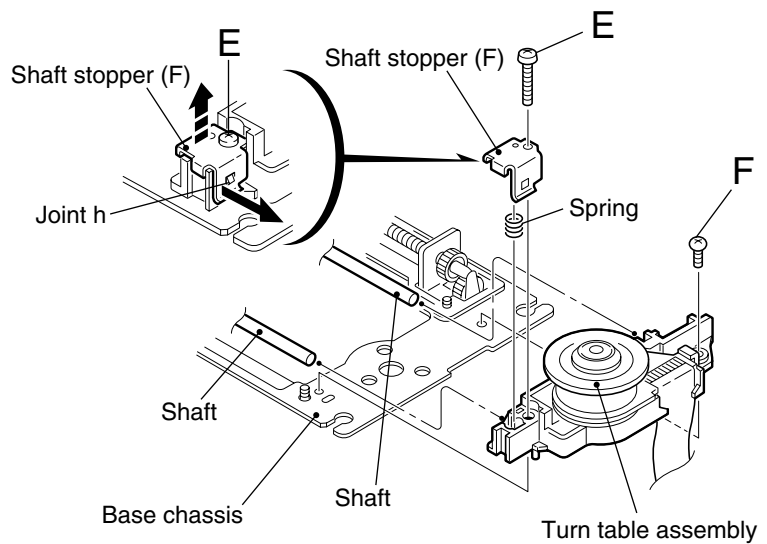


Fig.9




## <Main tray assembly unit>

- Prior to performing the following procedures, remove the top cover, the front panel assembly and the main tray assembly.

### ■ Removing the fitting (See Fig.1)

1. Remove the fitting on the front side of the main tray assembly while releasing the four joints **a** upward.

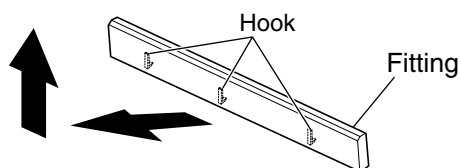

\* Lifts for above while pulling the hook in three places to front side.

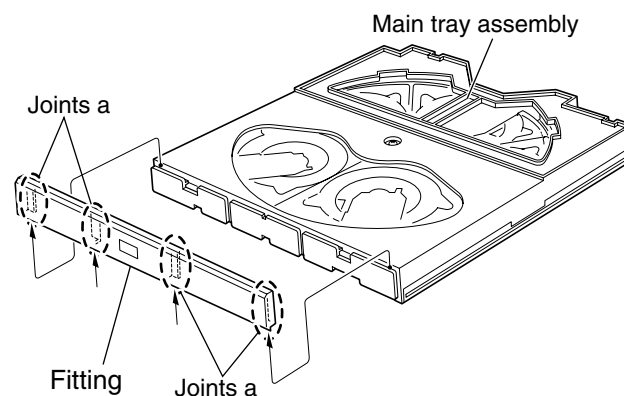


Fig.1

### ■ Removing the main tray cover and the main tray (See Fig.2 and 3)

- Prior to performing the following procedure, remove the fitting.

1. Remove the six screws **A** attaching the main tray on the under side of the main tray assembly.
2. Remove the screw **B** attaching the main tray cover on the upper side of the main tray assembly.
3. Push the two joint tabs **b** on the back of the main tray assembly to release the main tray cover from the tray bottom. Disengage the joint tabs **c** of the main tray from the main tray cover.

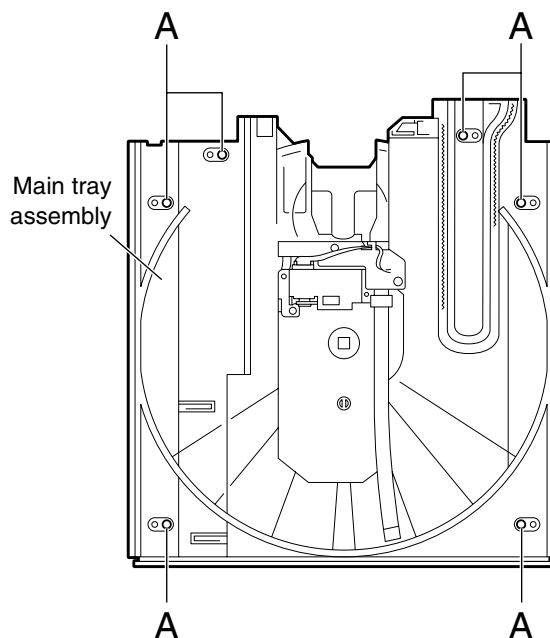


Fig.2

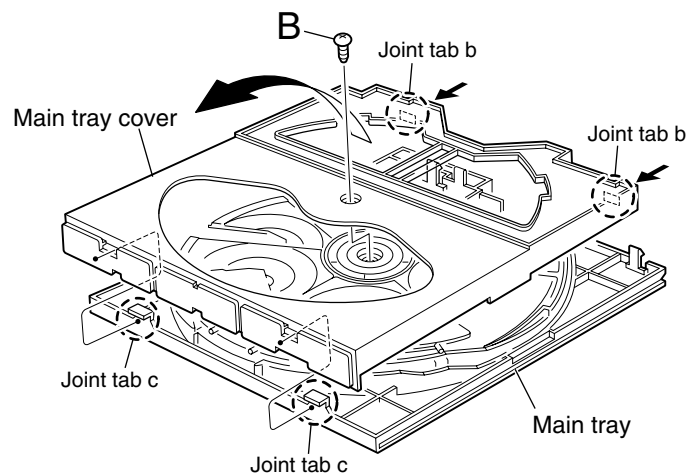


Fig.3

■ **Removing the photo sensor board and the sub tray drive motor assembly**  
**(See Fig.4)**

1. Turn over the main tray assembly and remove the two screws **C** attaching the photo sensor board.
2. Disconnect the card wire from connector CN082 on the photo sensor board.

REFERENCE: Make sure to disconnect the card wire from the photo sensor board. If the photo sensor board is pulled out from the main tray without disconnecting the card wire, the cam switch side inside of the main tray may be damaged.

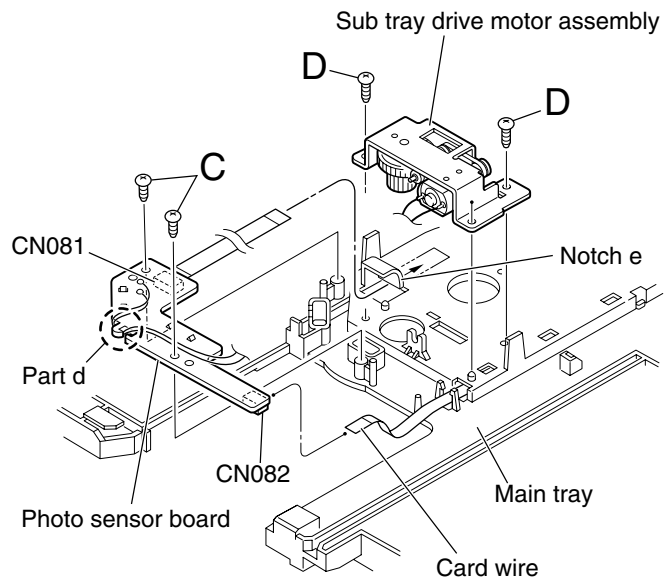


Fig.4

3. Remove the two screws **D** attaching the sub tray drive motor assembly.

– **When reassembling,** –

- Attach the two wires to the part **d** on the photo sensor board, and before reattaching the photo sensor board, connect the card wire to connector CN082 and pass the card wire extending from connector CN081 through the notch **e** of the main tray.

## ■ Sub tray position and operation check (See Fig.5 and 6)

- Prior to performing the following procedures, remove the fitting and the main tray cover.

**CAUTION:** Make sure the sub trays are set as shown in Fig.5. When moving the sub trays, put the sub trays which come to the position (4) and (5) forward in turn.

Prior to moving the sub trays by hand, the sub tray drive motor assembly must be removed in advance referring to the preceding page.

Do not put the sub trays forward except at the position (4) and (5).

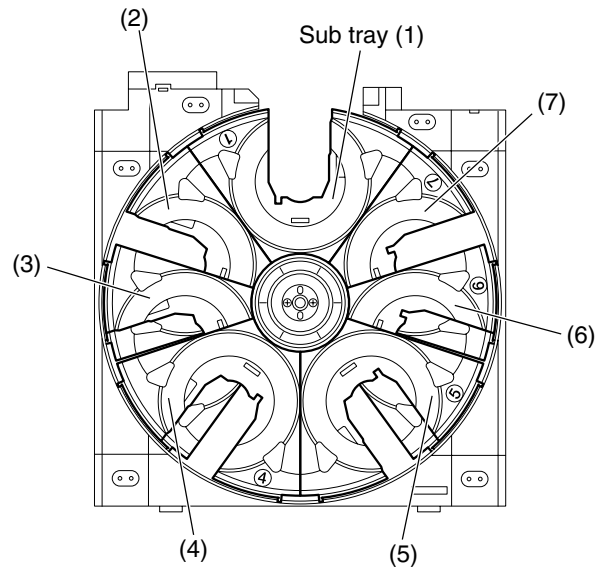


Fig.5


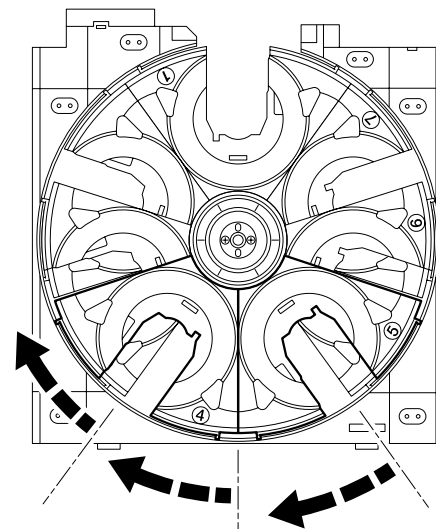


Fig.6

## ■ Removing the U/D cam (U) (See Fig.7)

- Prior to performing the following procedure, remove the main tray cover.

1. Remove the two screws **E** attaching the U/D cam (U) on the upper side of the main tray assembly.

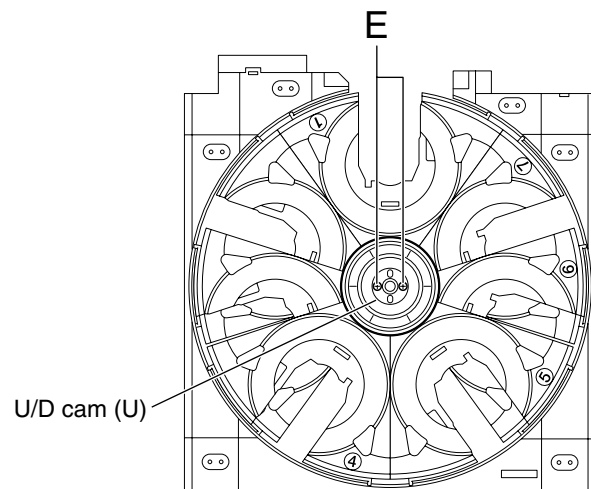

■ **Removing the sub trays (See Fig.8 to 14)**

- Prior to performing the following procedure, remove the main tray cover and the U/D cam (U).

**CAUTION:** Remove the sub tray assembly (4), (3), (2), (5), (6), (7) and (1) in order. When reattaching, observe the following procedure without fail.

1. Remove the sub tray (4) and (3) from the main tray upward.
2. Remove the sub tray (2) upward.
3. Similarly, remove the sub tray (5) , (6) and (7) upward.
4. At last, remove the sub tray (1) upward.

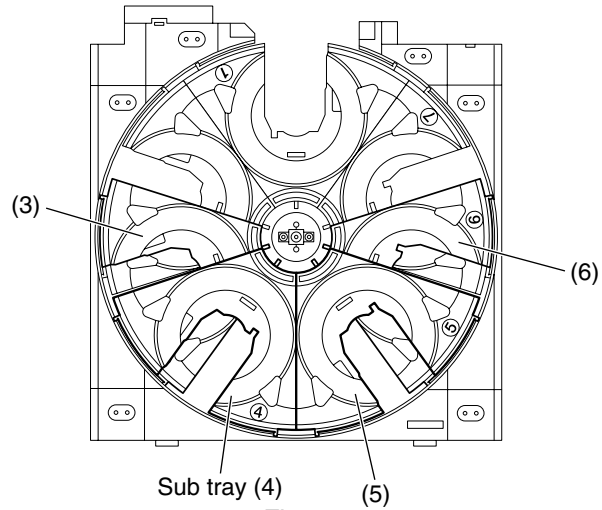


Fig.8

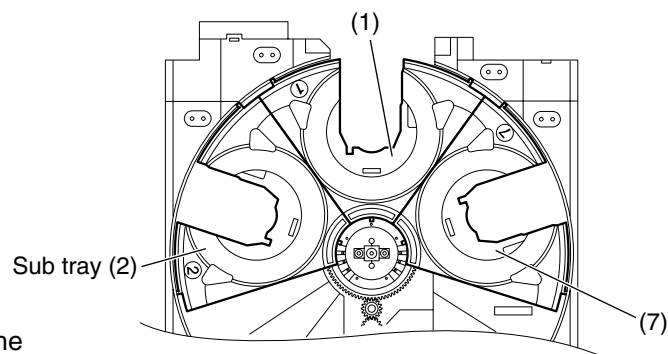


Fig.9

– **Reattaching the sub tray** –

1. Reattach the sub tray (1) while fitting the part **f** to the groove of the ACT. gear (1) marked **g**.
2. Reattach the sub tray (2) while inserting the shaft **h** into the groove **i** of the main tray, and at the same time, fitting the part **j** to the groove of the ACT. gear (1) marked **k**.

Move the sub tray (2) toward the tray (1).

3. Similarly, reattach the sub tray (7).

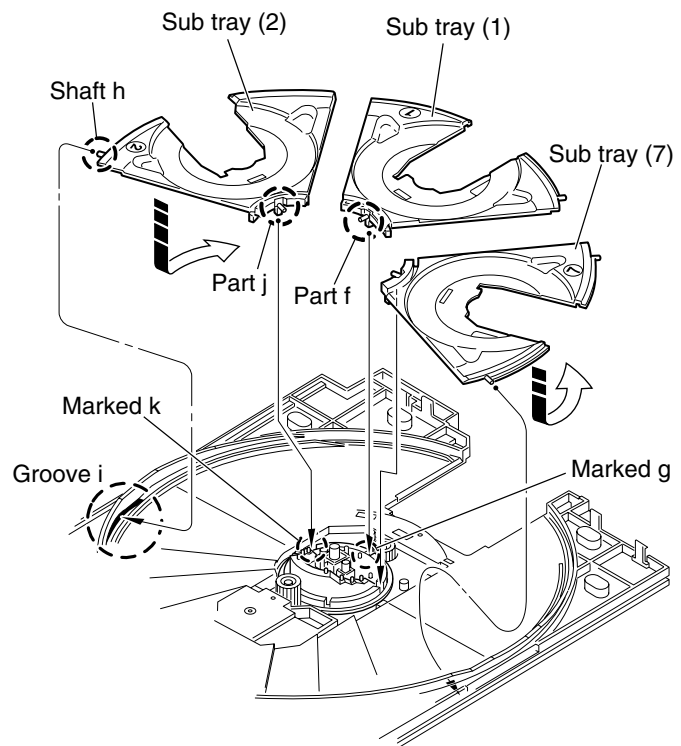


Fig.10

- Reattach the sub tray (3) while inserting the shaft **l** into the groove **m** of the main tray, and at the same time, putting the shaft **n** on the U/D cam (L). Then, move the sub tray (3) toward the sub tray (2) until it stops.

REFERENCE:At this point, the sub tray (3) is on top of the sub tray (2).

- Reattach the sub tray (4) while fitting the part **o** to the ACT.gear (2) on the main tray.

CAUTION: Make sure the part **o** of the sub tray (4) engages with the ACT. gear (2) correctly in the center of the main tray.

REFERENCE:At this point, the sub tray (4) is on top of the sub tray (3).

- Reattach the sub tray (6) and (5) in the same way.

CAUTION: Make sure that the trays are attached to the correct position and that they can be moved. To move the sub trays manually, the sub tray drive motor assembly must be removed in advance.

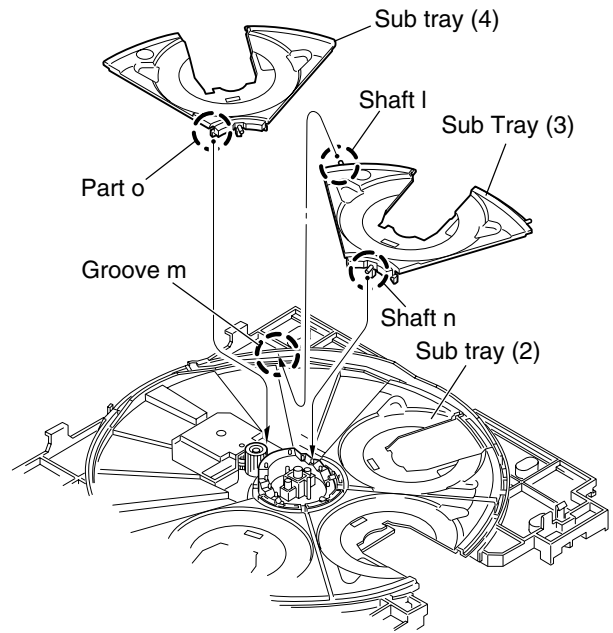


Fig.11

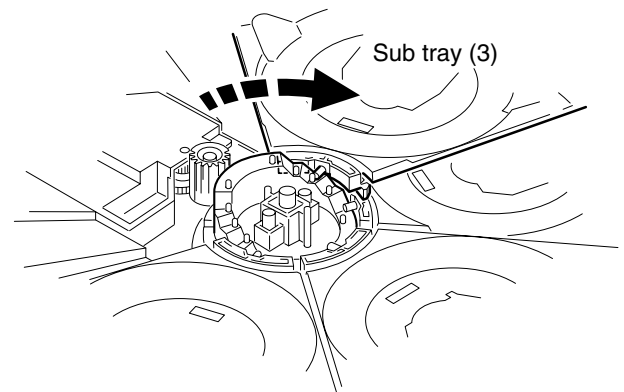


Fig.12

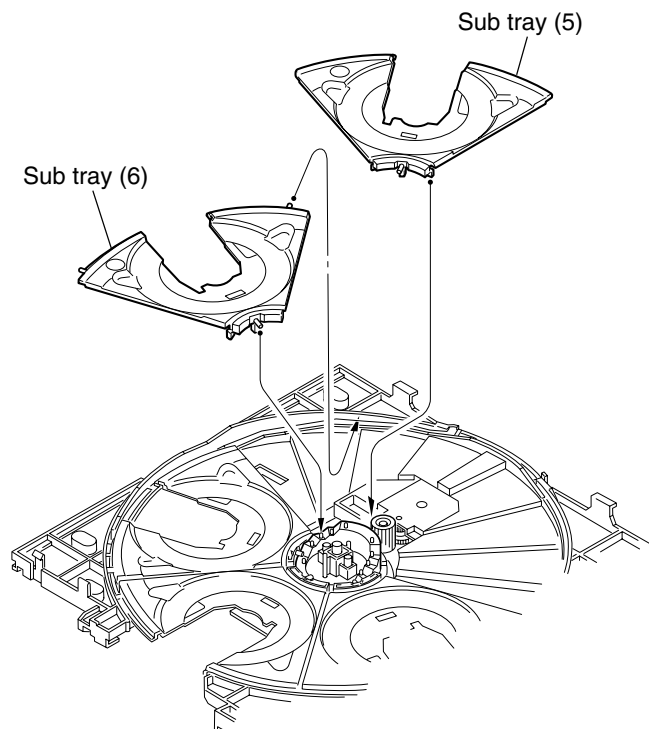


Fig.13

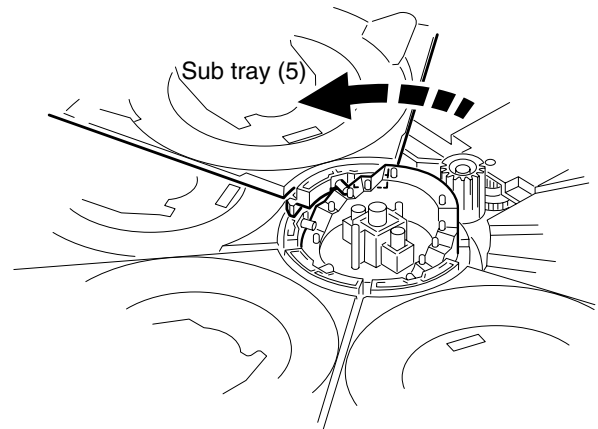


Fig.14

■ **Removing the cam switch board assembly**  
**(See Fig.15 to 17)**

• Prior to performing the following procedure, remove the main tray cover, the U/D cam (U) and the sub trays.

1. Remove the screw **F** attaching the gear cover. Release the two tabs marked **p** by pushing inward.
2. Remove the cam gear (2) upward.
3. Disconnect the card wire from connector **CN083** on the cam switch board assembly.
4. Remove the two screws **G** attaching the cam switch board assembly.

**CAUTION:** When reattaching the cam gear (2), set the position of the boss and the triangular mark and hole as shown in Fig.17.

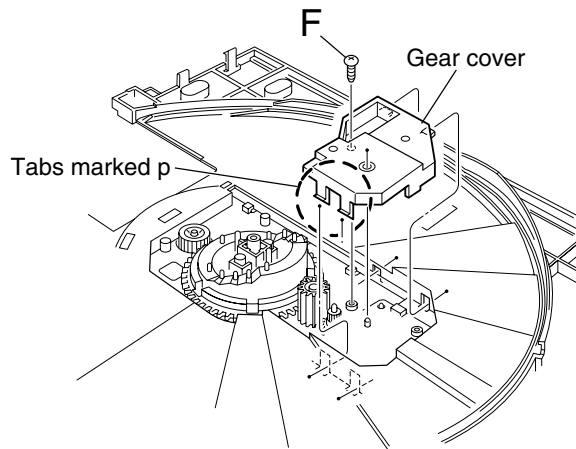


Fig.15

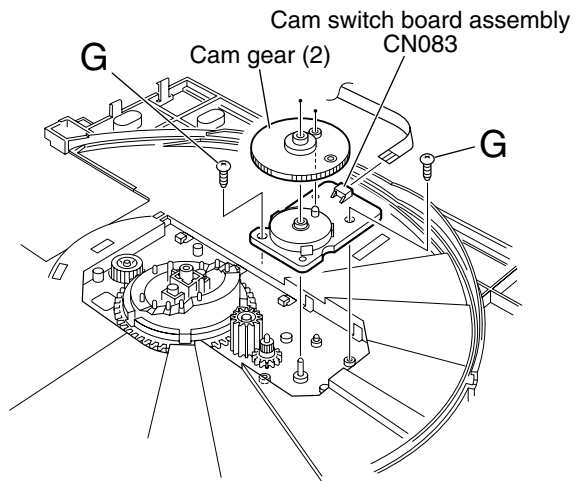


Fig.16

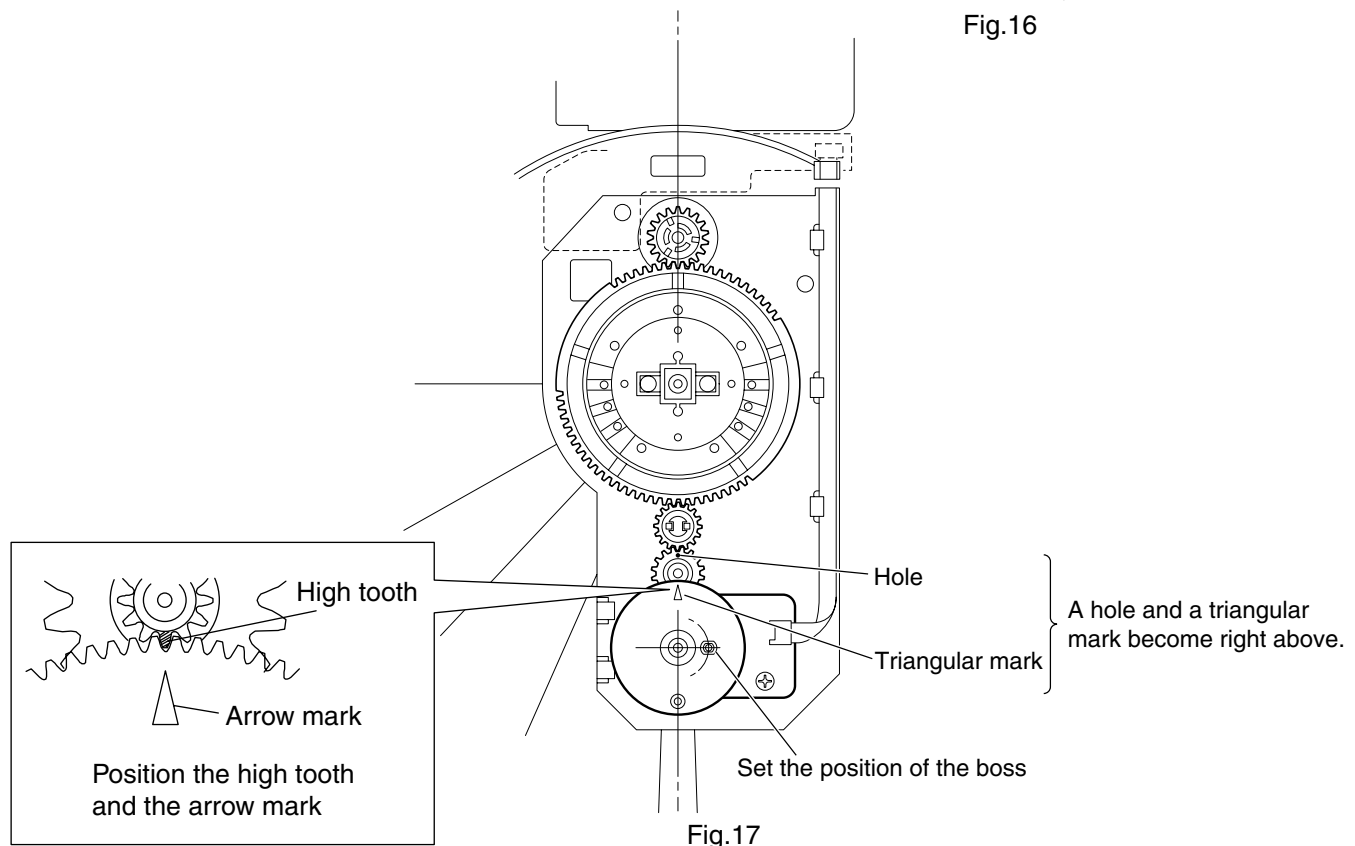


Fig.17

■ **Removing the ACT. gear (1), U/D cam (L),  
cam gear (1) and ACT.gear (2)**  
(See Fig.18 and 19)

• Prior to performing the following procedure, remove the main tray cover, the U/D cam (U) and the sub trays.

1. Draw out the U/D cam (L).
2. Draw out the ACT. gear (1).
3. Draw out the cam gear (1).
4. Draw out the ACT. gear (2) while pushing the two

**CAUTION:** When reassembling, make sure the position of each gear referring to Fig.19 and reattach the ACT. gear (2) first.

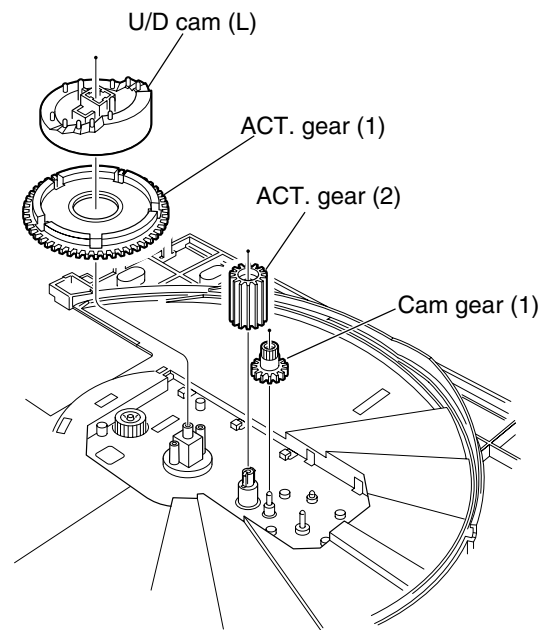


Fig.18

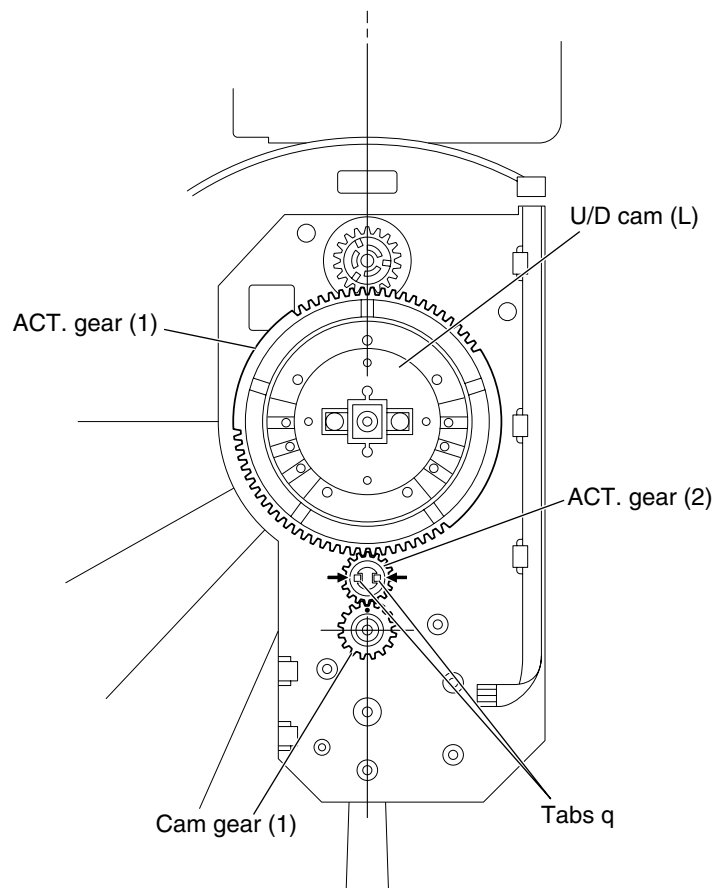



Fig.19

# Adjustment method

## (1) Test mode setting method

- 1) Take out the disc and close the tray.
- 2) Unplug the power plug.
- 3) Insert power plug into outlet while pressing both "PLAY" button and "STOP" button of the main body.
- 4) The player displays "TEST \* \* \* " on the FL display. keeps pushing the button until this is displayed. " \* \* \* " means the player version.
- 5) When the power supply is turned off, test mode is released.

The mode changes as follows whenever the "CHOICE" button of remote control is pushed in test mode.

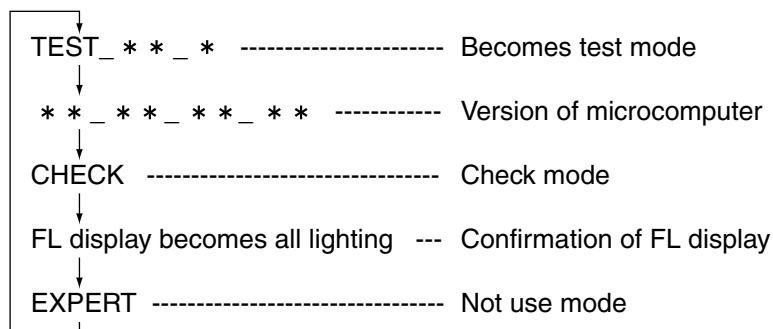



## (2) Initialization method

Please initialize according to the following procedures when microprocessor or pick-up is exchanged and when the up-grade is done.

- 1) Makes to test mode.
- 2) After "FORWARD SKIP" button (▶▶) of the main body is pushed, "PAUSE" button is pushed.
- 3) A green progressive indicator lights when about ten seconds pass. Then, it is initialization completion. (When scan mode is set to the progressive scanning, the indicator is green from red.)

## (3) Method of displaying version of microcomputer

- 1) Makes to test mode and initializes
- 2) When "CHOICE" button of remote control is pushed once, the figure is displayed on the FL display as follows.

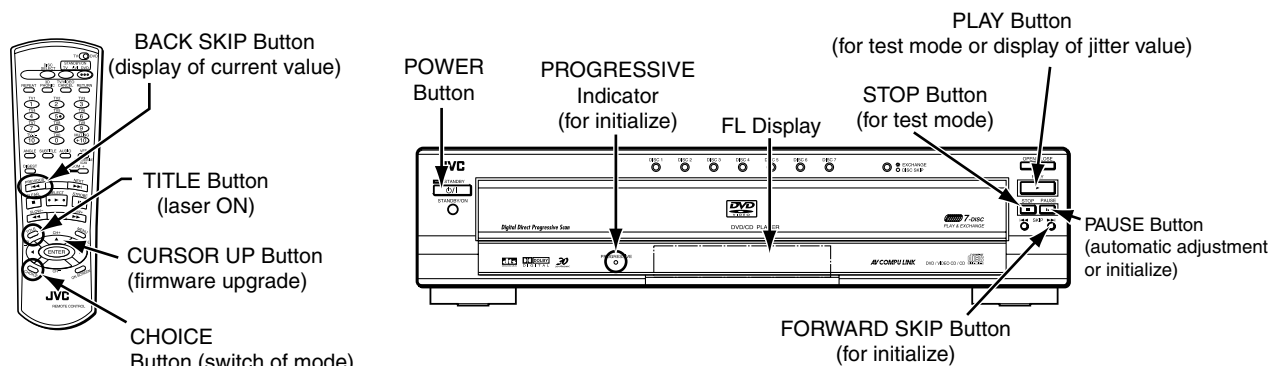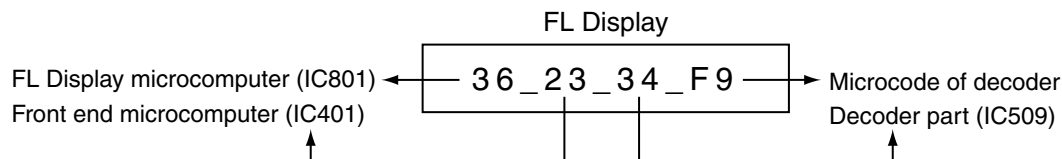



#### (4) Display of current value of laser

- 1) Makes to test mode and initializes
- 2) When "CHOICE" button of remote controller is pushed twice, It is displayed on the FL display, "CHECK".
- 3) The display of FL display changes from "CHECK" into "LD\_ON" if the "TITLE" button of remote controller is pushed.
- 4) The laser is turned on if the "BACK SKIP" button ( ◀◀ ) of remote controller is pushed in the state, and the current value of the laser is displayed on the FL display.

FL Display  
LD\_0042

As for the current value of the laser, the figure displayed on the FL display becomes a current value as it is by "mA" unit. becomes 42mA if displayed as 42.

- 5) The laser changes from DVD into CD if 3) and 4) of the above-mentioned procedures are done after the tray is opened and closed pushing the "OPEN/CLOSE" button of the main body.  
(The laser changes whenever this is done.)

**If the laser current value is 64mA or less, it is roughly good. There is a possibility to which pick-up is deteriorated, and exchange pick-up, please when there are 65mA or more laser current value.**

#### (5) Display of jitter value

- 1) Makes to test mode and initializes
- 2) When "CHOICE" button of remote controller is pushed twice, It is displayed on the FL display, "CHECK".
- 3) The automatic adjustment starts when test disk (VT-501) is inserted, and "PAUSE" button of the main body is pushed.
- 4) When the display of the FL display changes into "CHECK OK", the "PLAY" button of the main body is pushed.
- 5) The jitter value is displayed on the FL display as follows.

FL Display  
JIT\_3978

The jitter value is displayed by the hexadecimal number and refer to the conversion table of following, please.

**If the indication value is 11% or less, it can be judged by this simple checking method that the signal read precision of the set is satisfactory.**

**Please do "Flap adjustment of the pick-up guide shaft" when you replace the pick-up and the spindle motor when there are 11% or more jitter value.**

#### ■ Jitter value


FL display	Conversion value(%)	FL display	Conversion value(%)	FL display	Conversion value(%)	FL display	Conversion value(%)
3818	4.7	3998	7.6	3B18	10.5	3C98	13.3
3828	4.8	39A8	7.7	3B28	10.6	3CA8	13.5
3838	4.9	39B8	7.8	3B38	10.7	3CB8	13.6
3848	5.1	39C8	7.9	3B48	10.8	3CC8	13.7
3858	5.2	39D8	8.1	3B58	10.9	3CD8	13.8
3868	5.3	39E8	8.2	3B68	11.1	3CE8	13.9
3878	5.4	39F8	8.3	3B78	11.2	3CF8	14.1
3888	5.5	3A18	8.5	3B88	11.3	3D18	14.3
3898	5.7	3A28	8.7	3B98	11.4	3D28	14.4
38A8	5.8	3A38	8.8	3BA8	11.5	3D38	14.5
38b8	5.9	3A48	8.9	3BB8	11.7	3D48	14.7
38c8	6.0	3A58	9.0	3BC8	11.8	3D58	14.8
38d8	6.1	3A68	9.1	3BD8	11.9	3D68	14.9
38E8	6.3	3A78	9.3	3BE8	12.0	3D78	15.0
38F8	6.4	3A88	9.4	3BF8	12.1	3D88	15.1
3918	6.6	3A98	9.5	3C18	12.4	3D98	15.3
3928	6.7	3AA8	9.6	3C28	12.5	3DA8	15.4
3938	6.9	3AB8	9.7	3C38	12.7	3DB8	15.5
3948	7.0	3AC8	9.9	3C48	12.7	3DC8	15.6
3958	7.1	3AD8	10.0	3C58	12.9	3DD8	15.7
3968	7.2	3AE8	10.1	3C68	13.0	3DE8	15.9
3978	7.3	3AF8	10.2	3C78	13.1	3DF8	16.0
3988	7.5			3C88	13.2		

## (6) Upgrading of firmware

**Please do the up-grade of the firmware after exchanging IC509,IC512,IC513.**

- 1)The power supply is turned on pushing the "POWER" button.
- 2)The up-grade disk is put on sub-tray 1 pushing OPEN/CLOSE button, and the DISC1 button of the main body is pushed.
- 3)When FL display of the main body changes from "READING" into "UPGRADE", cursor UP button ( ▲ ) of remote controller is pushed.
- 4)The up-grade starts if the entire screen becomes blue and it is displayed, "writing block at 00000000".
- 5)The up-grade disk is taken out pushing the OPEN/CLOSE button when returning to the normal screen.
- 6)Please confirm the version of the microcomputer after makes to test mode and initializes.

<Display of TV screen>

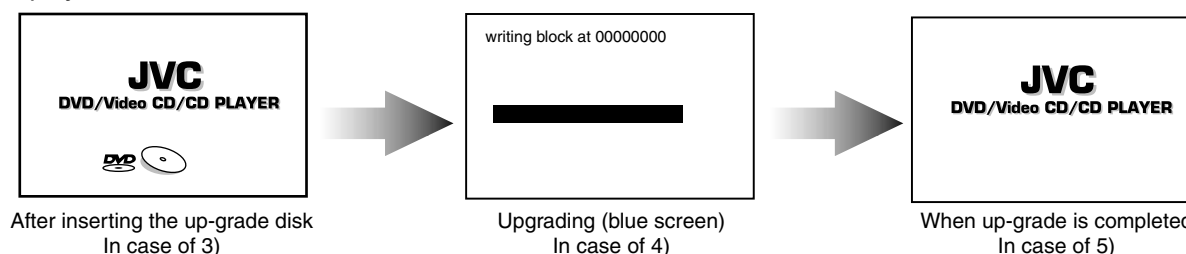

### < ATTENTION ! >

**Please pull out the AC plug code after the standby indicator lights pushing the power supply button without fail after completing the repair.**


**The mechanism becomes initialed position.**

**There is a possibility to break when carrying in not initialed position the mechanism but the state.**

## ■ Flap adjustment of the pick-up guide shaft

### <Tool list for adjustment>

- Stud (four pieces set)  
 Parts No. : JIGXVS40  
 Hex wrench for adjustment  
 Off-the-shelf (1.3mm)  
 Test disc  
 VT-501 or VT-502




### <Adjustment preparation>

1. The metal cover is detached, the OPEN/CLOSE button is pushed, and the tray is done in open.
2. The traverse mechanism is detached, and the card wire is connected with CN210.
3. The stud is installed in the traverse mechanism as shown in Figure.  
The clammer is removed from the clammer base.
4. The disk (Everything is good) is put on sub-tray 1, the test disk is put on the turntable in the traverse mechanism, and fixes by the clammer.
5. The AC plug code is pulled out once in the state.
6. The card wire becomes under the main tray, and the main tray is closed by hand power.
7. The AC plug code is inserted, and the DISC1 button is pushed  
(Please push the DISC1 button directly without pushing the power supply button).
8. Because the playback of DISC1 starts, stops and the AC plug code is pulled out.


### <Adjustment method>

9. The AC plug code is made insertion test mode while pushing the play button and the stop button of the main body at the same time.
10. Please push the pause button after pushing the forward skip button of the main body, and confirm a green progressive indicator lights after a few seconds.
11. When the choice button of remote controller is pushed twice, it is displayed on the FL display as "CHECK".
12. The display of the FL display changes into "CHECK OK" after a few seconds if the PAUSE button of the main body is pushed in the state.  
When the PLAY button of the main body is pushed afterwards, the jitter value is displayed on the FL display.

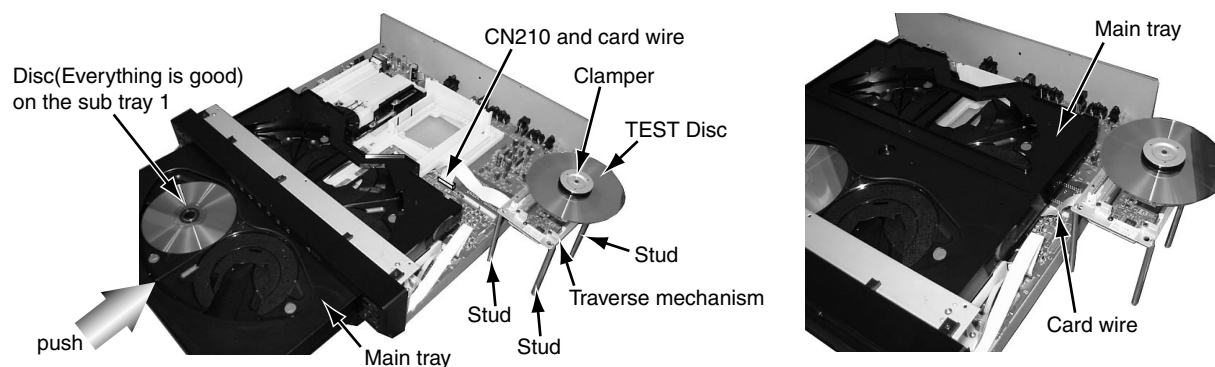

### <Adjustment>

1. Puts into the state to display the jitter value on the FL display referring to "Display of the jitter value".
2. The adjustment screw under the traverse mechanism is turned with hex wrench, and matches so that the jitter value displayed on the FL display may become minimum value.

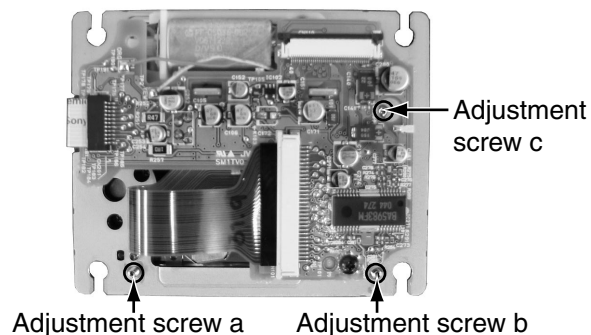


### <POINT>

1. turns in the forward or the opposite direction, and makes to the position where the jitter value is good the half rotation of adjustment screw a and b(180 degrees) respectively.
2. Afterwards, adjustment screw b and c are turned in the same way, and makes to the best position.

# Troubleshooting

## Servo volume

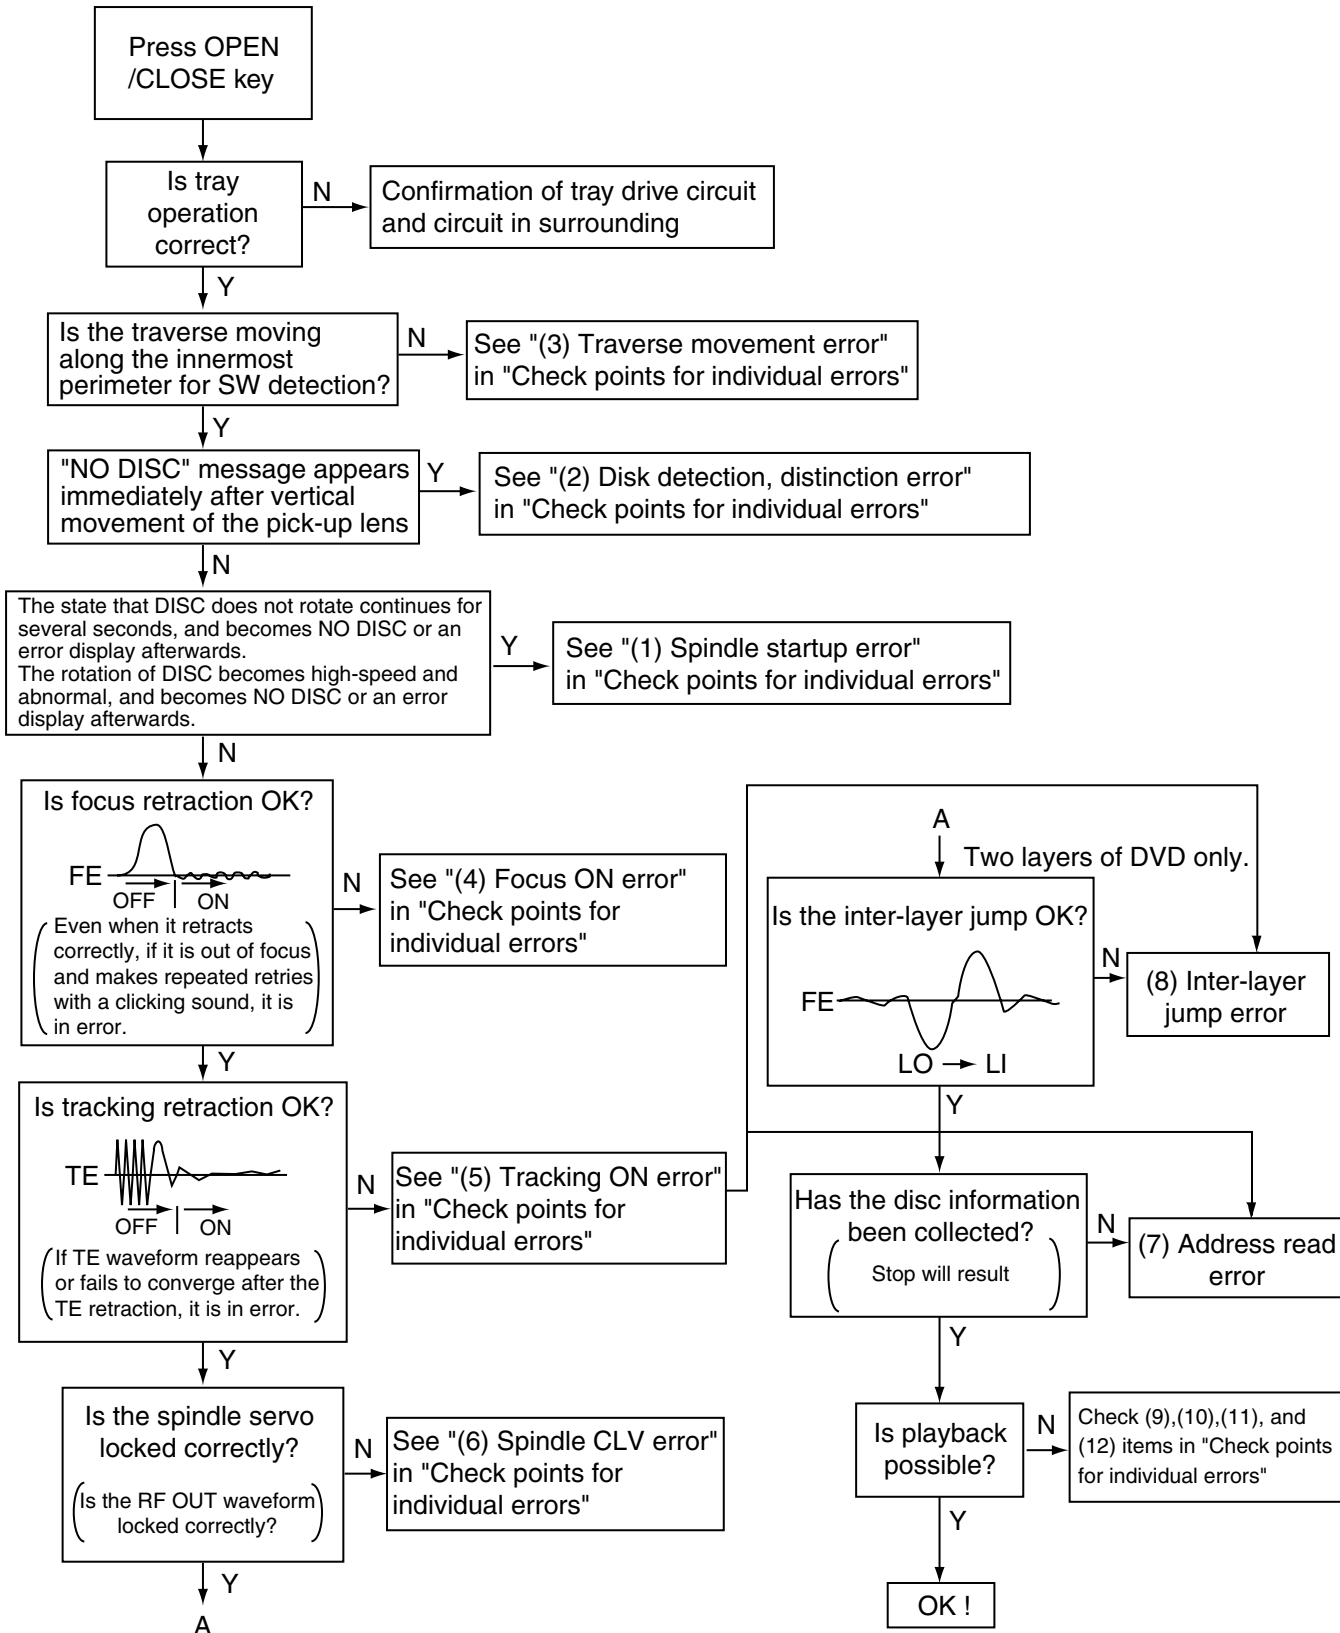

## Check points for each error

### (1) Spindle start error

#### 1. Defective spindle motor

\*Are there several ohms resistance between each pin of CN201 "11-10", "10-9", "11-9"?  
(The power supply is turned off and measured.)

\*Is the sign wave of about 100mVp-p in the voltage had from each terminal?  
[ CN201 "6"(H1-), "7"(H1+), "4"(H2-), "5"(H2+), "2"(H3-), "3"(H3+) ]

#### 2. Defective spindle motor driver (IC251)

\*Has motor drive voltage of a sine wave or a rectangular wave gone out to each terminal(SM1~3)  
of CN201 "9,10,11" and IC251 "2,4,7"?

\*Is FG pulse output from the terminal of IC251 "24"(FG) according to the rotation of the motor?

\*Is it "L(about 0.9V)" while terminal of IC251 "15"(VH) is rotating the motor?

#### 3. Has the control signal come from servo IC or the microcomputer?

\*Is it "L" while the terminal of IC251 "18"(SBRK) is operating?  
Is it "H" while the terminal of IC251 "23"(/SPMUTE) is operating?

\*Is the control signal input to the terminal of IC251 "22"(EC)?  
(changes from VHALF voltage while the motor is working.)

\*Is the VHALF voltage input to the terminal of IC251 "21"(ECR)?

#### 4. Is the FG signal input to the servo IC?

\*Is FG pulse input to the terminal of IC201 "53"(FG) according to the rotation of the motor?

### (2) Disc Detection, Distinction error (no disc, no RFENV)

#### <About frontend section>

\* Laser is defective.

\* Front End Processor is defective (IC101).

\* APC circuit is defective. --- Q101, Q102.

\* Pattern is defective. --- Lines for CN101 - All patterns which relate to pick-up and patterns between IC101

\* Servo IC is defective (IC201).

\* IC101 --- For signal from IC101 to IC201, is signal output from IC101 "20" (ASOUT) and  
IC101 "41"(RFENV) and IC101 "22" (FEOUT)?

#### <About loading mechanism section>

\* The disc exists in a sub tray. However, a sub tray is sent as follows the turntable without rising.  
(Especially, when the disk is CD-RW)

--- IC81 is defective. Exchanges for "GP2S28J" of the rank specification parts.

(3) Traverse movement NG

1. Defective traverse driver

\*Has the voltage come between terminal of CN101 "15" and "13" ?

2. Defective BTL driver (IC271)

\*Has the motor drive voltage gone out to IC271 "17" or "18"?

3. Has the control signal come from servo IC or the microcomputer?

\*Is it "H" while the terminal of IC271 "9" (STBY1) ?

\*TRSDRV Is the signal input? (IC201 "51")

4. TRVSW is the signal input from microcomputer? (IC401 "50")

(4) Focus ON NG

\* Is FE output ? --- Pattern, IC101

\* Is FODRV signal sent ? (R279) --- Pattern, IC201

\* Is driving voltage sent ?

IC271 "13", "14" --- If NG, pattern, driver, mechanical unit .

\* Mechanical unit is defective.

(5) Tracking ON NG

\* When the tracking loop cannot be drawn in, TE shape of waves does not settle.

\* Mechanical unit is defective.

Because the self adjustment cannot be normally adjusted, the thing which cannot be normally drawn in is thought.

\* Periphery of driver (IC271)

Constant or IC it self is defective.

\* Servo IC (IC201)

When improperly adjusted due to defective IC.

(6) Spindle CLV NG

\* IC101 -- "35"(RF OUT), "30"(RF-), "31"(RF+).

\* Does not the input or the output of driver's spindle signal do the grip?

\* Has the tracking been turned on?

\* Spindle motor and driver is defective.

\* Additionally, "IC101 and IC201" and "Mechanism is defective(jitter)", etc. are thought.

(7) Address read NG

\* Besides, the undermentioned cause is thought though specific of the cause is difficult because various factors are thought.

Mechanism is defective. (jitter)

IC201, IC301, IC401.

The disc is dirty or the wound has adhered.

(8) Between layers jump NG (double-layer disc only)

Mechanism defective

Defect of driver's IC(IC271)

Defect of servo control IC(IC201)

(9) Neither picture nor sound is output

1. It is not possible to search

\*Has the tracking been turned on?

\*To "(5) Tracking ON NG" in "Check points for each error" when the tracking is not normal.

\*Is the feed operation normal?

To "(3) traverse movement NG" in "Check points for each error" when it is not normal.

Are not there caught of the feeding mechanism etc?

(10) Picture is distorted or abnormal sound occurs at intervals of several seconds.

Is the feed operation normal?

Are not there caught of the feeding mechanism etc?

(11) Others

The image is sometimes blocked, and the image stops.

The image is blocked when going to outer though it is normal in surroundings in the disk and the stopping symptom increases.

} There is a possibility with bad jitter value for such a symptom.

(12) CD During normal playback operation

a) Is TOC reading normal?

Displays total time for CD-DA.

Shifts to double-speed mode for V-CD.

↓ YES

b) Playback possible?

→ NO

\*--:-- is displayed during FL search.

According to [It is not possible to search ] for DVD(9), check the feed and tracking systems.

\*No sound is output although the time is displayed.(CA-DA) DAC, etc, other than servo.

\*The passage of time is not stable, or picture is abnormal.(V-CD)


\*The wound of the disc and dirt are confirmed.





## ■ AN8702FH(IC101):Frontend processor

### 1.Pin layout

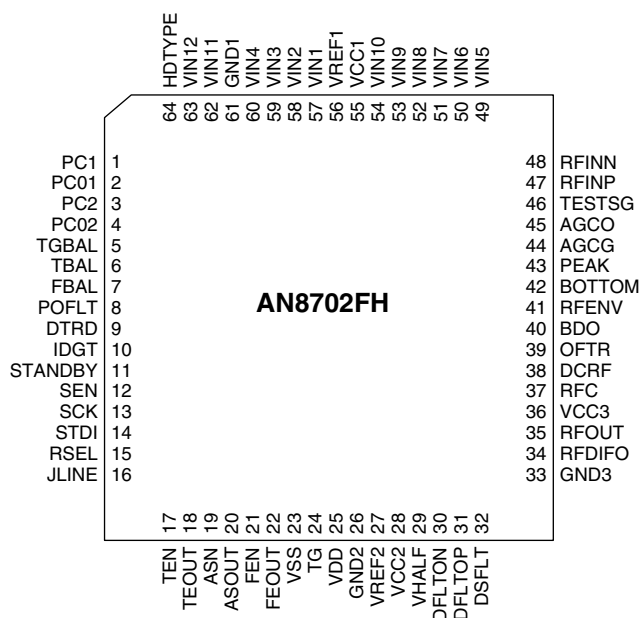

### 2.Pin function


Pin No.	Symbol	I/O	Description	Pin No.	Symbol	I/O	Description
1	PC1	I	Disc detection signal input (DVD)	34	RFDIFO		
2	PC01	I/O	Laser current control terminal	35	RFOUT	-	To TP101
3	PC2	I	Disc detection signal input (CD)	36	VCC3	-	Power supply terminal 5V
4	PC02	I/O	Laser current control terminal	37	RFC		
5	TGBAL	I	Tangential phase balance control terminal	38	DCRF	O	All addition amplifier capacitor terminal
6	TBAL	I	Tracking balance control terminal	39	OFTR	O	OFTR output terminal
7	FBAL	I	Focus balance control terminal	40	BDO	O	Drop out
8	POFLT	O	Track detection threshold level terminal	41	RFENV	O	RF envelope output terminal
9	DTRD	I	Data slice part data read signal input terminal (For RAM)	42	BOTTOM	O	Bottom envelope detection filter terminal
10	IDGT	I	Data slice part address part gate signal input terminal( For RAM)	43	PEAK	O	Peak envelope detection filter terminal
11	STANDBY	I	Standby mode control terminal	44	AGCG	O	AGC amplifier gain control terminal
12	SEN	I	SEN(Serial data input terminal)	45	AGCO		
13	SCK	I	SCK(Serial data input terminal)	46	TESTSG	I	TEST signal input terminal
14	STDI	I	STDI(Serial data input terminal)	47	RFINP	I	RF signal positive input terminal
15	RSEL			48	RFINN	I	RF signal negative input terminal
16	JLINE	I	J-line setting input(FEP)	49	VIN5	I	Focus input of external division into two terminal
17	TEN			50	VIN6	I	Focus input of external division into two terminal
18	TEOUT	O	Tracking error signal output terminal	51	VIN7	I	
19	ASN			52	VIN8	I	
20	ASOUT	O	Full adder signal output	53	VIN9	I	Focus input of external division into two terminal
21	FEN	I	Focus error output amplifier reversing input terminal	54	VIN10	I	Focus input of external division into two terminal
22	FEOUT	O	Focus error signal output terminal	55	VCC1	-	Power supply terminal 5V
23	VSS	-	Connect to GND	56	VREF1	O	VREF1 voltage output terminal
24	TG	O	Tangential phase error signal output terminal	57	VIN1	I	External division into four (DVD/CD) RF input terminal1
25	VDD	-	Power supply terminal 3V	58	VIN2	I	External division into four (DVD/CD) RF input terminal2
26	GND2	-	Connect to GND	59	VIN3	I	External division into four (DVD/CD) RF input terminal3
27	VREF2	O	VREF2 voltage output terminal	60	VIN4	I	External division into four (DVD/CD) RF input terminal4
28	VCC2	-	Power supply terminal 5V	61	GND1	-	Connect to GND
29	VHALF	O	VHALF voltage output terminal	62	VIN11	I	Tracking input
30	DFLTON	O	Equivalence RF-	63	VIN12	I	Tracking input
31	DFLTOP	O	Equivalence RF+	64	HDTYPE	-	Connect to ground
32	DSFLT						
33	GND3	-	Connect to GND				

■ BA6287F-X(IC451,IC452):Motor driver

1.Pin layout

OUT1	1	8	GND
VM	2	7	OUT2
VCC	3	6	VREF
FIN	4	5	RIN

2.Block diagram

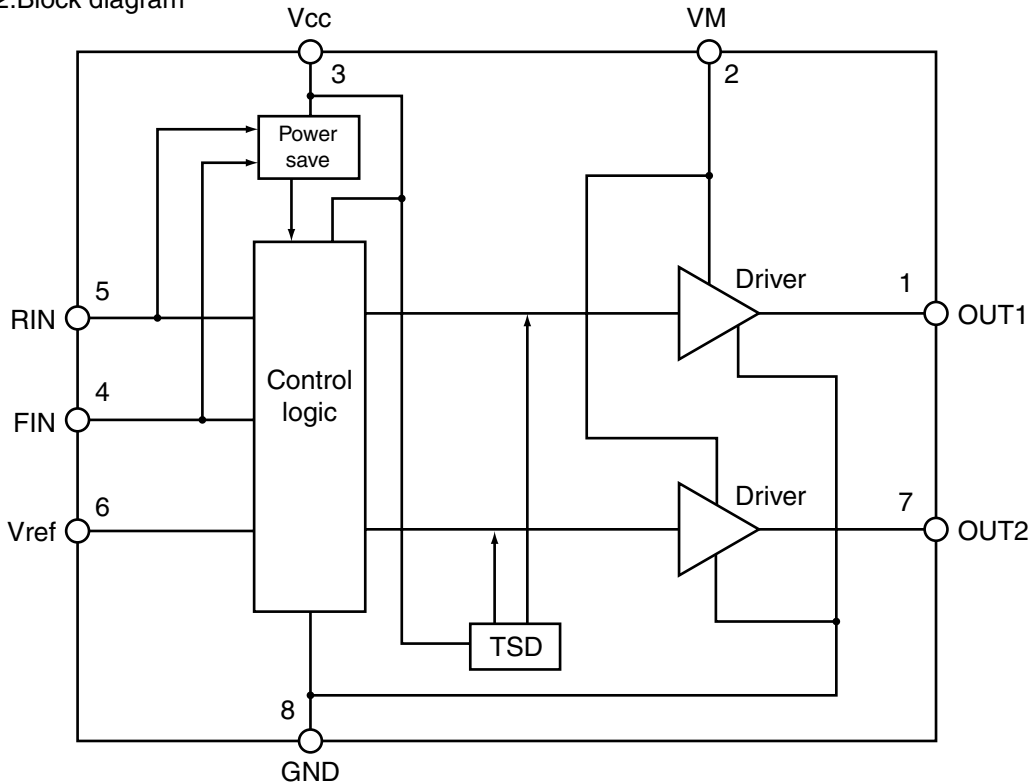

3.Pin function

Pin No.	Symbol	I/O	Description
1	OUT1	O	Output for motor
2	VM	-	Power supply terminal for drive division
3	VCC	-	Power supply terminal for signal division
4	FIN	I	Input for control logic
5	RIN	I	Input for control logic
6	VREF	O	Output voltage level control
7	OUT2	O	Output for motor
8	GND	-	Connect to ground

4.I/O Truth value table

FIN	RIN	OUT2	OUT1	MODE
H	L	L	H	Forward rotation mode
L	H	H	L	Reverse rotation mode
H	H	L	L	Break mode
L	L	OPEN	OPEN	Standby mode

## ■ BA6664FM-X(IC251):Spindle motor driver

### 1.Pin layout


NC	1	28	RNF
A3	2	27	VM
NC	3	26	GSW
A2	4	25	VCC
NC	5	24	FG
NC	6	23	PS
A1	7	22	EC
	29	30	
GND	8	21	ECR
H1+	9	20	FR
H1-	10	19	FG2
H2+	11	18	SB
H2-	12	17	CNF
H3+	13	16	BR
H3-	14	15	VH

### 2.Pin function

Pin No.	Symbol	I/O	Description
1	NC	-	Non connect
2	A3	O	Output 3 for spindle motor
3	NC	-	Non connect
4	A2	O	Output 2 for spindle motor
5	NC	-	Non connect
6	NC	-	Non connect
7	A1	O	Output 1 for spindle motor
8	GND	-	Connect to ground
9	H1+	I	Positive input for hall input AMP 1
10	H1-	I	Negative input for hall input AMP 2
11	H2+	I	Positive input for hall input AMP 2
12	H2-	I	Negative input for hall input AMP 2
13	H3+	I	Positive input for hall input AMP 3
14	H3-	I	Negative input for hall input AMP 3
15	VH	I	Hall bias terminal
16	BR	-	Non connect
17	CNF	-	Capacitor connection pin for phase compensation
18	SB	O	Short brake terminal
19	FG2	-	Non connect
20	FR	-	Non connect
21	ECR	I	Torque control standard voltage input terminal
22	EC	I	Torque control voltage input terminal
23	PS	O	Start/stop switch (power save terminal)
24	FG	O	FG signal output terminal
25	VCC	-	Power supply for signal division
26	GSW	O	Gain switch
27	VM	-	Power supply for driver division
28	RNF	O	Resistance connection pin for output current sense
29		-	Connect to ground
30		-	Connect to ground

■ K4S643232E-TC70(IC505):DRAM

1. Block diagram

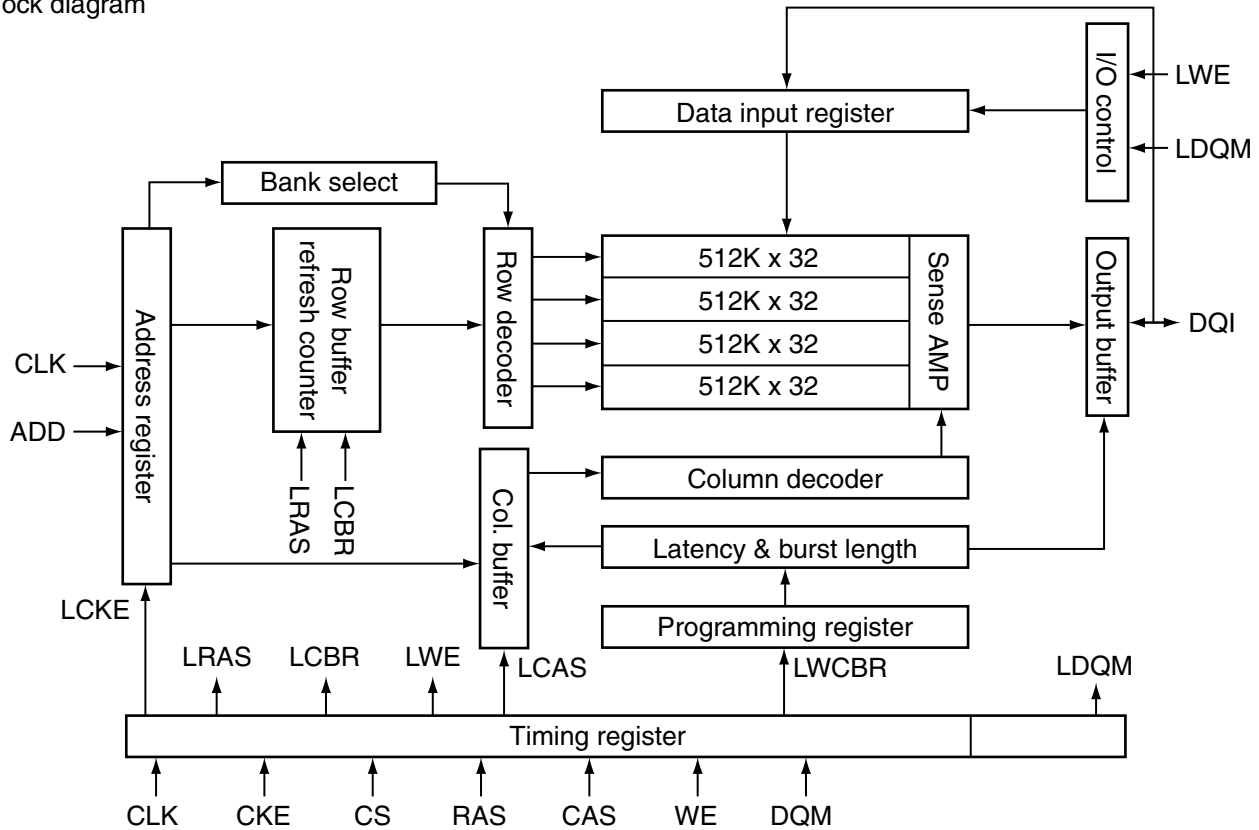

2. Pin function

Symbol	Description	Symbol	Description
CLK	System clock signal input	DQM0~3	Data input/output mask
CS	Chip select input	DQ0~31	Data input/output
CKE	Clock enable	VDD	Power supply terminal
A0~A10	Address	VSS	Connect to ground
BA0,1	Bank select address	VDDQ	Power supply terminal
RAS	Row address strobe	VSSQ	Connect to ground
CAS	Column address strobe	NC	Non connect
WE	Write enable		


## ■ MN102L25GGW(IC401):Unit CPU

### Pin function


Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	WAIT	I	Micon wait signal input	51	SWUPDN	I	Elevator UP/DOWN switch detect
2	RE	O	Read enable	52	SWOPEN	I	Tray OPEN/CLOSE switch detect
3	SPMUTE	O	Spindle muting output to IC251	53	ADSCEN	O	Serial enable signal for ADSC
4	WEN	O	Write enable	54	VDD	-	Power supply
5	LMMUTE	O	Loading motor standby control	55	FEPEN	O	Serial enable signal for FEP
6	CS1	O	Chip select for ODC	56	SLEEP	O	Standby signal for FEP
7	CS2	O	Chip select for CPPM	57	BUSY	-	Non connect
8	CS3	-	Connect to TP312	58	REQ	O	Communication Request
9	DRVMUTE	O	Driver mute	59	CIRCEN	O	CIRC command select
10	SPKICK	O	Spin kick (Non connect)	60	-	-	Connect to TP308
11	LSIRST	O	LSI reset	61	VSS	-	Ground
12	WORD	O	Bus selection input	62	EPCS	O	EEPROM chip select
13	A0	O	Address bus 0 for CPU	63	EPSK	O	EEPROM clock
14	A1	O	Address bus 1 for CPU	64	DPDI	I	EEPROM data input
15	A2	O	Address bus 2 for CPU	65	EPDO	O	EEPROM data output
16	A3	O	Address bus 3 for CPU	66	VDD	-	Power supply
17	VDD	-	Power supply	67	SCLKO	I	Communication clock
18	SYSCLK	-	Connect to TP169	68	S2UDT	I	Communication input data
19	VSS	-	Ground	69	U2SDT	O	Communication output data
20	XI	-	Not use (Connect to vss)	70	CPCK	O	Clock for ADSC serial
21	XO	-	Connect to TP170	71	SDIN	I	ADSC serial data input
22	VDD	-	Power supply	72	SDOUT	O	ADSC serial data output
23	OSCI	I	Clock signal input	73	-	-	Not use
24	OSCO	O	Clock signal output	74	-	-	Not use
25	MODE	I	CPU Mode selection input	75	NMI	-	Not use
26	A4	O	Address bus 4 for CPU	76	ADSCIRQ	I	Interrupt input of ADSC
27	A5	O	Address bus 5 for CPU	77	ODCIRQ	I	Interrupt input of ODC
28	A6	O	Address bus 6 for CPU	78	DECIRQ	I	Interrupt input of ZIVA
29	A7	O	Address bus 7 for CPU	79	CSSIRQ	-	Not use
30	A8	O	Address bus 8 for CPU	80	ODCIRQ2	I	Interruption of system control
31	A9	O	Address bus 9 for CPU	81	ADSEP	I	Address data selection input
32	A10	O	Address bus 10 for CPU	82	RST	I	Reset input
33	A11	O	Address bus 11 for CPU	83	VDD	-	Power supply
34	VDD	-	Power supply	84	TEST1	I	Test signal 1 input
35	A12	O	Address bus 12 for CPU	85	TEST2	I	Test signal 2 input
36	A13	O	Address bus 13 for CPU	86	TEST3	I	Test signal 3 input
37	A14	O	Address bus 14 for CPU	87	TEST4	I	Test signal 4 input
38	A15	O	Address bus 15 for CPU	88	TEST5	I	Test signal 5 input
39	A16	O	Address bus 16 for CPU	89	TEST6	I	Test signal 6 input
40	A17	O	Address bus 17 for CPU	90	TEST7	I	Test signal 7 input
41	A18	-	Connect to TP913	91	TEST8	I	Test signal 8 input
42	A19	-	Connect to TP912	92	VSS	-	Ground
43	VSS	-	Ground	93	D0	I/O	Data bus 0 of CPU
44	A20	-	Connect to TP911	94	D1	I/O	Data bus 1 of CPU
45	TXSEL	-	Connect to TP910	95	D2	I/O	Data bus 2 of CPU
46	HAGUP	O		96	D3	I/O	Data bus 3 of CPU
47	TCLOSE	-	Connect to TP311	97	D4	I/O	Data bus 4 of CPU
48	TOPEN	-	Connect to TP310	98	D5	I/O	Data bus 5 of CPU
49	HMFON			99	D6	I/O	Data bus 6 of CPU
50	TRVSW	I	Detection switch of traverse inside	100	D7	I/O	Data bus 7 of CPU

# MN103S13BDA(IC301):Optical disc controller

## 1.Pin layout

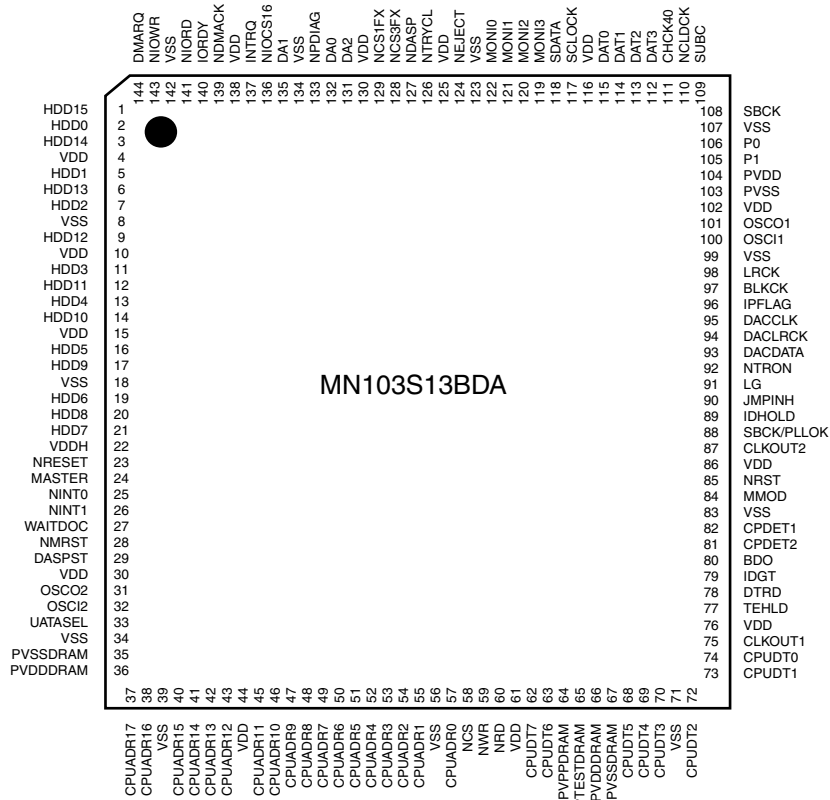

## 2.Block diagram

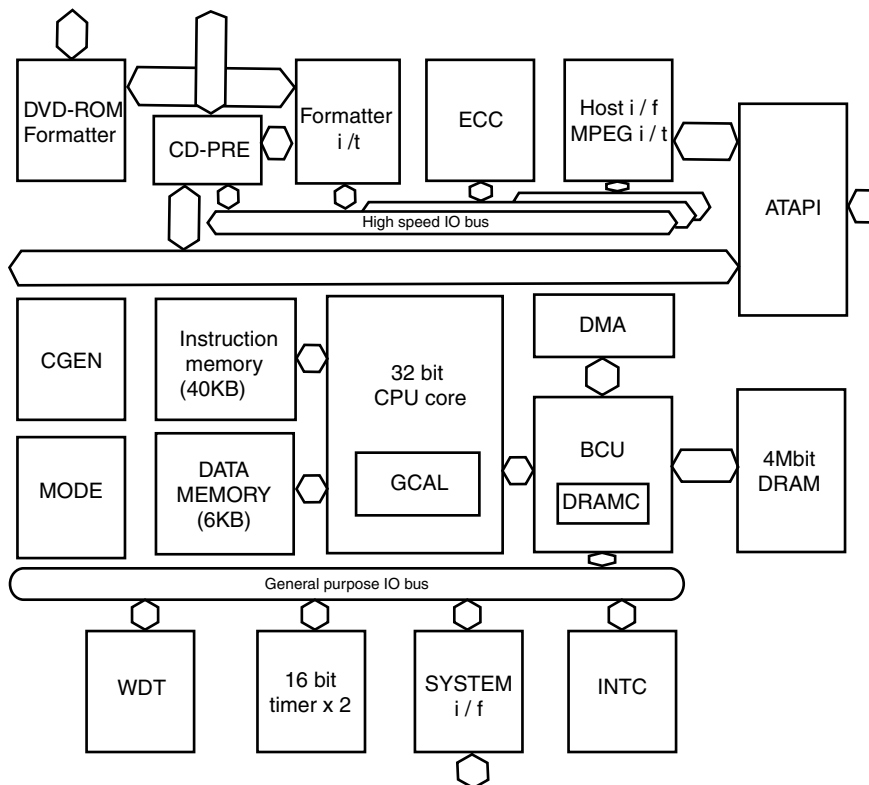

## 3.Pin function (1/3)

Pin No.	Symbol	I/O	Description
1	HDD15	I/O	ATAPI Data
2	HDD0	I/O	ATAPI Data
3	HDD14	I/O	ATAPI Data
4	VDD	-	Power supply 3V
5	HDD1	I/O	ATAPI Data
6	HDD13	I/O	ATAPI Data
7	HDD2	I/O	ATAPI Data
8	VSS	-	Connect to GND
9	HDD12	I/O	ATAPI Data
10	VDD	-	Power supply 2.7V
11	HDD3	I/O	ATAPI Data
12	HDD11	I/O	ATAPI Data
13	HDD4	I/O	ATAPI Data
14	HDD10	I/O	ATAPI Data
15	VDD	-	Power supply 3V
16	HDD5	I/O	ATAPI Data
17	HDD9	I/O	ATAPI Data
18	VSS	-	Connect to GND
19	HDD6	I/O	ATAPI Data
20	HDD8	I/O	ATAPI Data
21	HDD7	I/O	ATAPI Data
22	VDDH		
23	NRESET	I	ATAPI Reset input
24	MASTER	I/O	ATAPI Master/slave select
25	NINT0	O	Interruption of system control 0
26	NINT1	O	Interruption of system control 1
27	WAITDOC	O	Wait control of system control
28	NMRST	O	Reset of system control (Connect to TP302)
29	DASPST	I	Setting of initial value of DASP signal
30	VDD	-	Power supply 3V
31	OSCO2	O	Non connect
32	OSCI2	I	Non connect
33	UATASEL	I	Connect to VSS
34	VSS	-	Connect to GND
35	PVSSDRAM		Connect to VSS
36	PVDDDRAM		Connect to VDD(2.7V)
37	CPUADR17	I	System control address
38	CPUADR16	I	System control address
39	VSS	-	Connect to GND
40	CPUADR15	I	System control address
41	CPUADR14	I	System control address
42	CPUADR13	I	System control address
43	CPUADR12	I	System control address
44	VDD	-	Power supply 2.7V
45	CPUADR11	I	System control address
46	CPUADR10	I	System control address
47	CPUADR9	I	System control address
48	CPUADR8	I	System control address
49	CPUADR7	I	System control address
50	CPUADR6	I	System control address

## 3.Pin function (2/3)

Pin No.	Symbol	I/O	Description
51	CPUADR5	I	System control address
52	CPUADR4	I	System control address
53	CPUADR3	I	System control address
54	CPUADR2	I	System control address
55	CPUADR1	I	System control address
56	VSS	-	Connect to GND
57	CPUADR0	I	System control address
58	NCS	I	System control chip select
59	NWR	I	Writing system control
60	NRD	I	Reading system control
61	VDD	-	Power supply 3V
62	CPUDT7	I/O	System control data
63	CPUDT6	I/O	System control data
64	PVPPDRAM	O	Connect to VSS
65	PTESTDRAM	I	Connect to VSS
66	PVDDDRAM		Connect to VDD(2.7V)
67	PVSSDRAM		Connect to VSS
68	CPUDT5	I/O	System control data
69	CPUDT4	I/O	System control data
70	CPUDT3	I/O	System control data
71	VSS	-	Connect to GND
72	CPUDT2	I/O	System control data
73	CPUDT1	I/O	System control data
74	CPUDT0	I/O	System control data
75	CLKOUT1	O	Clock signal output (16.9/11.2/8.45MHz)
76	VDD	-	Power supply 3V
77	TEHLD	O	Mirror gate (Connect to TP141)
78	DTRD	O	Data frequency control switch (Connect to TP304)
79	IDGT	O	CAPA switch
80	BDO	I	RF Dropout/BCA data
81	CPDET2	I	Outer capacity detection
82	CPDET1	I	Inner capacity detection
83	VSS	-	Connect to GND
84	MMOD	I	Connect to VSS
85	NRST	I	System reset
86	VDD	-	Power supply 3V
87	CLKOUT2	O	Clock 16.9MHz
88	SBCK/PLLOK	O	Flame mark detection
89	IDOHOLD	O	ID gate for tracking holding
90	JMPINH	O	Jump prohibition
91	LG	O	Land/group switch
92	NTRON	I	Tracking ON
93	DACDATA	O	Serial data output (Connect to TP148)
94	DACLCK	O	Identification signal of L and R (Connect to TP149)
95	DACCLK	I	Clock for serial data output
96	IPFLAG	I	Input of IP flag
97	BLKCK	I	Sub code/block/input clock
98	LRCK	I	Identification signal of L and R (Connect to VSS)
99	VSS	-	Connect to GND
100	OSCI1	I	Oscillation input terminal 16.9MHz




## 3.Pin function (3/3)

Pin No.	Symbol	I/O	Description
101	OSCO1	O	Oscillation output terminal 16.9MHz
102	VDD	-	Power supply 3V
103	PVSS	-	Connect to GND
104	PVDD	-	Power supply 3V
105	P1	I/O	Terminal master polarity switch input
106	P0	I/O	CIRC-RAM,OVER/UNDER Interruption
107	VSS	-	Connect to GND
108	SBCK	O	Clock output for sub code,serial input
109	SUBC	I	Sub code,serial input
110	NCLDCK	I	Sub code,flame clock input
111	CHCK40	I	Clock is read to DAT3~0 (Output of division frequency from ADSC)
112	DAT3	I	Data is read from disc (Going side by side output from ADSC)
113	DAT2	I	Data is read from disc (Going side by side output from ADSC)
114	DAT1	I	Data is read from disc (Going side by side output from ADSC)
115	DAT0	I	Data is read from disc (Going side by side output from ADSC)
116	VDD	-	Power supply 3V
117	SCLOCK	I/O	Debug serial clock (270 ohm pull up)
118	SDATA	I/O	Debug serial data (270 ohm pull up)
119	MONI3	O	Internal good title monitor (Connect to TP150)
120	MONI2	O	Internal good title monitor (Connect to TP151)
121	MONI1	O	Internal good title monitor (Connect to TP152)
122	MONI0	O	Internal good title monitor (Connect to TP153)
123	VSS	-	Connect to GND
124	NEJECT	I	Eject detection
125	VDD	-	Power supply 2.7V
126	NTRYCL	I	Non connect (Tray close detection)
127	NDASP	I/O	ATAPI drive active / slave connect I/O
128	NCS3FX	I	Non connect (ATAPI host chip select)
129	NCS1FX	I	Non connect (ATAPI host chip select)
130	VDD	-	Power supply 3V
131	DA2	I/O	ATAPI host address
132	DA0	I/O	Non connect (ATAPI host address)
133	NPDIAG	I/O	ATAPI Slave master diagnosis input
134	VSS	-	Connect to GND
135	DA1	I/O	Non connect (ATAPI host address)
136	NIOCS16	O	Output of selection of width of ATAPI host data bus
137	INTRQ	O	ATAPI Host interruption output
138	VDD	-	Power supply 3V
139	NDMACK	I	Non connect (ATAPI Host DMA characteristic)
140	IORDY	O	ATAPI Host ready output (Connect to TP157)
141	NIORD	I	Non connect (ATAPI host read)
142	VSS	-	Connect to GND
143	NIOWR	I/O	ATAPI Host write
144	DMARQ	O	ATAPI Host DMA request (Connect to TP159)

■ MN67706ZY (IC201) : Auto digital servo controller

1.Pin layout

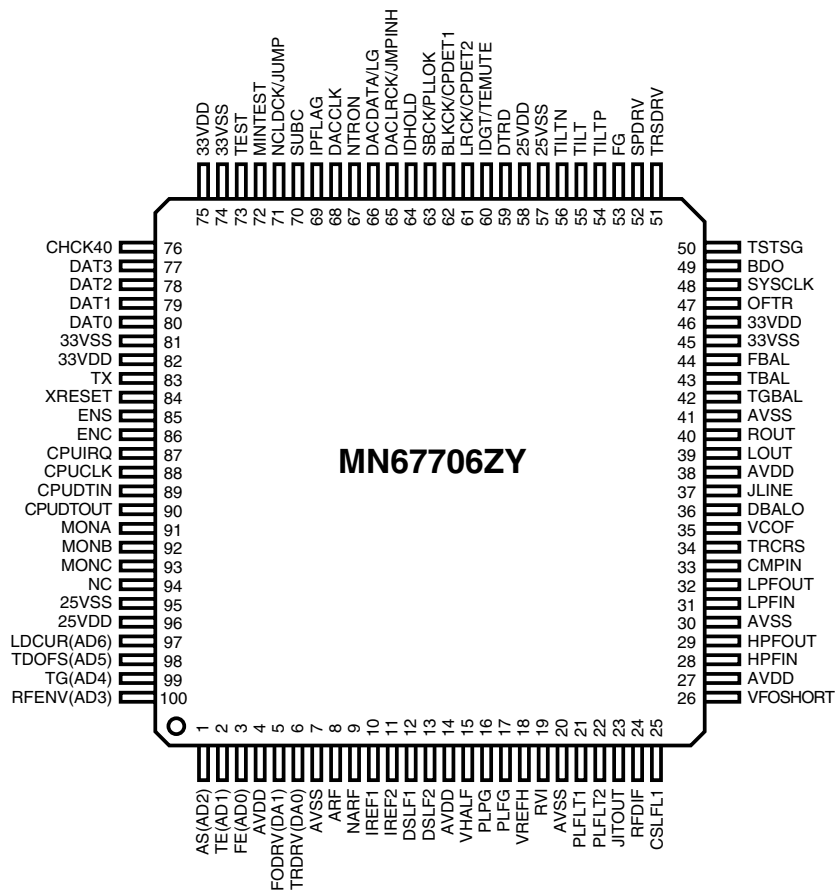

2.Pin functions (1/3)

Pin No.	Symbol	I/O	Description
1	AS(AD2)	I	AS : Full adder signal(FEP)
2	TE(AD1)	I	Phase difference/3 beam tracking error(FEP)
3	FE(AD0)	I	Focus error(FEP)
4	AVDD	-	Apply 3.3V(For analog circuit)
5	FODRV(DA1)	O	Focus drive(DRVIC)
6	TRDRV(DA0)	O	Tracking drive(DRVIC)
7	AVSS	-	Ground(For analog circuit)
8	ARF	I	Equivalence RF+(FEP)
9	NARF	I	Equivalence RF-(FEP)
10	IREF1	I	Reference current1(For DBAL)
11	IREF2	I	Reference current2(For DBAL)
12	DSLF1	I/O	Connect to capacitor1 for DSL
13	DSLF2	I/O	Connect to capacitor2 for DSL
14	AVDD	-	Apply 3.3V(For analog circuit)
15	VHALF	I	Reference voltage 1.65±0.1V(FEP)
16	PLPG	-	Not use(PLL phase gain setting resistor terminal)
17	PLFG	-	Not use(PLL frequency gain setting resistor terminal)
18	VREFH	I	Reference voltage 2.2V±0.1V(FEP)
19	RVI	I/O	Connect to resistor for VREFH reference current source
20	AVSS	-	Ground(For analog circuit)
21	PLFLT1	O	Connect to capacitor1 for PLL
22	PLFLT2	O	Connect to capacitor2 for PLL
23	JITOUT	I/O	Output for jitter signal monitor
24	RFDIF	I	Not use
25	CSLFL1	I/O	Pull-up to VHALF

## 2.Pin function (2/3)


Pin No.	Symbol	I/O	Description
26	VFOSHORT	O	VFO short output
27	AVDD	-	Apply 3.3V(For analog circuit)
28	HPFIN	I	Pull-up to VHALF
29	HPFOUT	O	Connect to TP208
30	AVSS	-	Ground(For analog circuit)
31	LPFIN	I	Pull-up to VHALF
32	LPFOUT	O	Not use
33	CMPIN	I	Connect to TP210
34	TRCRS	I	Input signal for track cross formation
35	VCOF	I/O	JFVCO control voltage
36	DBALO	O	DSL balance adjust output
37	JLINE	O	J-line setting output(FEP)
38	AVDD	-	Apply 3.3V(For analog circuit)
39	LOUT	O	Connect to TP203 (Analog audio left output)
40	ROUT	O	Connect to TP204 (Analog audio right output)
41	AVSS	-	Ground(For analog circuit)
42	TGBAL	O	Tangential balance adjust(FEP)
43	TBAL	O	Tracking balance adjust(FEP)
44	FBAL	O	Focus balance adjust(FEP)
45	33VSS	-	Ground(For I/O)
46	33VDD	-	Apply 3.3V(For I/O)
47	OFTR	I	Off track signal
48	SYSCLK	I	16.9344MHz system clock input(ODC)
49	BDO	I	Drop out(FEP)
50	TSTSG	O	Calibration signal(FEP)
51	TRSDRV	O	Traverse drive(DRVIC)
52	SPDRV	O	Spindle drive output(DRVIC)
53	FG	I	FG signal input (Spindle motor driver)
54	TILTP	O	Connect to TP205
55	TILT	O	Connect to TP206
56	TILTIN	O	Connect to TP207
57	25VSS	-	Ground(For internal core)
58	25VDD	-	Apply 2.5V(For internal core)
59	DTRD	I	Data read control signal(ODC)
60	IDGT/TEMUTE	I	Pull-down to Ground
61	LRCK/CPDET2	O	LR channel data strobe(ODC)/
62	BLKCK/CPDET1	O	CD sub code synchronous signal(ODC)/
63	SBCK/PLLOK	I	CD sub code data shift clock(ODC)/PLL pull-in OK signal input
64	IDHOLD	I	Pull-down to Ground
65	DACLRCK/JMPINH	I	1bit DAC-LR channel data strobe(ODC)/
66	DACDATA/LG	I	CD 1bit DAC channel data(ODC)
67	NTRON	O	L : Tracking ON(ODC)
68	DACCLK	O	1bit DAC channel data shift clock(ODC)
69	IPFLAG	O	CIRC error flag(ODC)
70	SUBC	O	CD sub code(ODC)
71	NCLDCK/JUMP	O	CD sub code data frame clock(ODC)/DVD JUMP signal(ODC)
72	MINTEST	I	Pull-down to Ground(For MINTEST)
73	TEST	I	Pull-down to Ground(For TEST)
74	33VSS	-	Ground(For I/O)
75	33VDD	-	Apply 3.3V(For I/O)
76	CHCK40	O	Clock for SRDATA(ODC)
77	DAT3	O	SRDATA3(ODC)
78	DAT2	O	SRDATA2(ODC)
79	DAT1	O	SRDATA1(ODC)
80	DAT0	O	SRDATA0(ODC)

## 2.Pin function (3/3)


Pin No.	Symbol	I/O	Description
81	33VSS	-	Ground(For I/O)
82	33VDD	-	Apply 3.3V(For I/O)
83	TX	O	Digital audio interface
84	XRESET	I	Reset input (System control)
85	ENS	I	Servo DSC serial I/F chip select (System control)
86	ENC	I	CIRC serial I/F chip select (System control)
87	CPUIRQ	O	Interrupt request (System control)
88	CPUCLK	I	Serial I/F clock (System control)
89	CPUDTIN	I	Serial I/F data input (System control)
90	CPUDTOUT	O	Serial I/F data output (System control)
91	MONA	O	Connect to TP226 (Monitor terminal A)
92	MONB	O	Connect to TP225 (Monitor terminal A)
93	MONC	O	Connect to TP224 (Monitor terminal A)
94	NC	O	Connect to TP211
95	25VSS	-	Ground(For internal core)
96	25VDD	-	Apply 2.5V(For internal core)
97	LDCUR(AD6)	I	Laser current control terminal
98	TDOFS(AD5)	I	Connect to TP215
99	TG(AD4)	I	Tangential phase difference(FEP)
100	RFENV(AD3)	I	RF envelope input(FEP)

## ■ NDV8601VWA-BB(IC501):AV Decoder

### 1.Pin layout

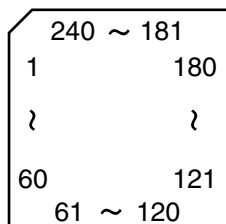

### 2.Block diagram

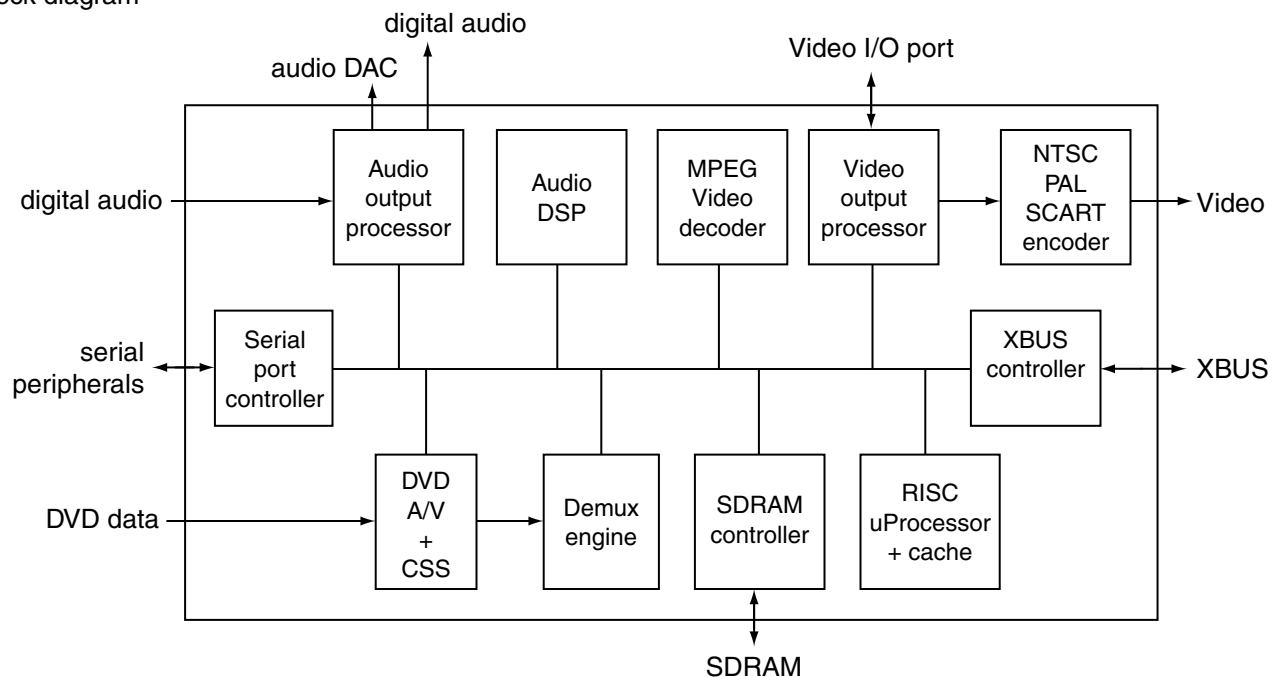

### 3.Pin function (1/4)

Pin No.	Symbol	I/O	Description
1	VDDio	-	Power supply terminal 3.3V
2,3	MD10,11	I/O	SDRAM Data bus terminal
4	VDD	-	Power supply terminal 1.8V
5	MD12	I/O	SDRAM Data bus terminal
6	VSSio	-	Connect to ground
7~9	MD13~15	I/O	SDRAM Data bus terminal
10	VDDio	-	Power supply terminal 3.3V
11	DQM1	O	SDRAM Data byte enable
12,13	MA9,8	O	SDRAM Address bus terminal
14	VSSio	-	Connect to ground
15,16	MA7,6	O	SDRAM Address bus terminal
17	VSS	-	Connect to ground
18	MA5	O	SDRAM Address bus terminal
19	VDDio	-	Power supply terminal 3.3V
20,21	MA4,3	O	SDRAM Address bus terminal
22	MCLK	O	SDRAM Clock output
23	VSSio	-	Connect to ground
24	CKE	O	SDRAM Clock enable output
25,26	MA2,1	O	SDRAM Address bus terminal
27	VDDio	-	Power supply terminal 3.3V
28	MA0	O	SDRAM Address bus terminal
29	MA10	O	SDRAM Address bus terminal

## 3.Pin function (NDV8601VWA-BB 2/4)

Pin No.	Symbol	I/O	Description
30	MA11	-	Non connect
31	VSSio	-	Connect to ground
32,33	MA12,13	O	SDRAM Address bus, reserved for terminal compatibility with 64Mb SDRAM
34	VDD	-	Power supply terminal 1.8V
35	CS0	O	SDRAM Primary bank chip select
36	VDDio	-	Power supply terminal 3.3V
37	RAS	O	SDRAM Command bit
38	CAS	O	SDRAM Command bit
39	WE	O	SDRAM Command bit
40	VSSio	-	Connect to ground
41	DQM0	O	SDRAM Data byte enable
42	DQM2	O	SDRAM Data byte enable
43	MD16	I/O	SDRAM Data bus terminal
44	VDDio	-	Power supply terminal 3.3V
45,46	MD17,18	I/O	SDRAM Data bus terminal
47	VSS	-	Connect to ground
48	MD19	I/O	SDRAM Data bus terminal
49	VSSio	-	Connect to ground
50~52	MD20~22	I/O	SDRAM Data bus terminal
53	VDDio	-	Power supply terminal 3.3V
54~56	MD23~25	I/O	SDRAM Data bus terminal
57	VSSio	-	Connect to ground
58~61	MD26~29	I/O	SDRAM Data bus terminal
62	VDDio	-	Power supply terminal 3.3V
63,64	MD30,31	I/O	SDRAM Data bus terminal
65	DQM3	O	SDRAM Data byte enable
66	CS1	O	SDRAM Extension bank chip select
67	VSSD	-	Connect to ground
68	SPDIF	O	S/PDIF Digital audio output terminal
69	VSSio	-	Connect to ground
70	AIN	I	Digital audio input for digital micro; can be used as GPIO
71	AOUT3	O	Serial audio output data to audio DAC for left and right channels for down-mix
72	AOUT2	O	Serial audio output data to audio DAC for surround left and right channels
73	AOUT1	O	Serial audio output data to audio DAC for center and LFE channels
74	AOUT0	O	Serial audio output data to audio DAC for left and right channels
75	VDDio	-	Power supply terminal 3.3V
76	PCMCLK	O	Audio DAC PCM sampling clock frequency, common clock for DACs and ADC
77	VDD	-	Power supply terminal 1.8V
78	ACLK	O	Audio interface serial data clock, common clock for DACs and AD converter
79	LRCLK	O	Left / right channel clock, common clock for DACs and ADC
80	SRST	O	Active low RESET signal for peripheral reset
81	RSTP	I	RESET_Power : from system, used to reset frequency synthesizer and rest of chip
82	VSSio	-	Connect to ground
83	RXD1	I	UART1 Serial data input from external serial device, used for IR receiver
84	SSPIN1	I/O	SSP1 Data in or 16X clock for USART function in UART1
85	VSS	-	Connect to ground
86	SSPOUT1	I/O	SSP1 Data out or UART1 data-terminal-ready signal
87	SSPCLK1	I/O	SSP1 Clock or UART1 clear-to-send signal
88	SSPCLK0	I/O	SSP0 Clock or request-to-send function in UART1
89	VDD	-	Power supply terminal 1.8V
90	SSPIN0	I/O	SSP0 Data in or 16X clock for USART function in UART0

## 3.Pin function (NDV8601VWA-BB 3/4)

Pin No.	Symbol	I/O	Description
91	VDDio	-	Power supply terminal 3.3V
92	SSPOUT0	I/O	SSP0 Data out or UART0 data-terminal-ready signal
93	TXD0	I/O	UART0 Serial data output to an external serial device
94	RXD0	I	UART0 Serial data input from external serial device
95	CTS0	I/O	UART0 Clear-to-send signal
96	RTS0	I/O	UART0 Request-to-send signal
97	VSSio	-	Connect to ground
98	CXI	I	Crystal input terminal for on-chip oscillator or system input clock
99	CXO	O	Crystal output terminal for on-chip oscillator
100	OSCVSS	-	Connect to ground for oscillator
101	OSCVDD	-	Power supply terminal for oscillator 1.8V
102	MVCKVDD	-	Power supply terminal for main and video clock PLL 3.3V
103	SCEN	I	Scan chain test enable
104	MVCKVSS	-	Connect to ground for main and video clock PLL
105	ACLKVSS	-	Connect to ground for audio clock PLL
106	SCMD	I	Scan chain test mode
107	ACLKVDD	-	Power supply terminal for audio clock PLL 3.3V
108	VDDDAK	-	Power supply terminal for DAC digital 1.8V
109	VSSDAC	-	Connect to ground for DAC digital
110	Cr/R	O	Video signal output (Cr output : composite/component Red output)
111	IOM	O	Cascaded DAC differential output used to dump current into external resistor for power
112	C/Cb/B	O	Video signal output (Chrominance output for NTSC/PAL S-Video Cb output for component Blue output)
113	VAA3	-	Power supply terminal for DAC analog 3.3V
114	Y/G	O	Video signal output (Luminance for S-Video and component Green output)
115	VSSA	-	Connect to ground for DAC analog
116	VREF	-	Non connect
117	VAA	-	
118	CVBS/C	O	Video signal output (Composite video Chrominance output for S-Video)
119	RSET	O	Current setting resistor of output DACs
120	COMP	O	Compensation capacitor connection
121	VSS	-	Connect to ground
122	VCLK	-	Non connect
123	VSYNC	-	Non connect
124	HSYNC	-	Non connect
125	VDDio	-	Power supply terminal 3.3V
126~131	VI07~02	-	Non connect
132	VSSio	-	Connect to ground
133,134	VI01,00	-	Non connect
135	VDD	-	Power supply terminal 1.8V
136~139	AD31~28	I/O	Multiplexed address / data bus terminal
140	VDDio	-	Power supply terminal
141~144	AD27~24	I/O	Multiplexed address / data bus terminal
145	PWE3	I/O	Byte write enable for FLASH,EEPROM,SRAM or peripherals terminal
146	AD23	I/O	Multiplexed address / data bus terminal
147	VSSio	-	Connect to ground
148~153	AD22~17	I/O	Multiplexed address / data bus terminal
154	VDDio	-	Power supply terminal 3.3V
155	AD16	I/O	Multiplexed address / data bus terminal
156	PWE2	I/O	Byte write enable for FLASH,EEPROM,SRAM or peripherals terminal
157,158	AD15,14	I/O	Multiplexed address / data bus terminal
159	VDD	-	Power supply terminal 1.8V

## 3.Pin function (NDV8601VWA-BB 4/4)

Pin No.	Symbol	I/O	Description
160	SCLK	O	External bus clock used for programmable host peripherals
161	ACK	I/O	Programmable WAIT/ACK/RDY control
162	VSSio	-	Connect to ground
163~168	AD13~8	I/O	Multiplexed address / data bus terminal
169	VDDio	-	Power supply terminal 3.3V
170	PWE1	I/O	Byte write enable for FLASH,EEPROM,SRAM or peripherals terminal
171	VSS	-	Connect to ground
172~176	AD7~3	I/O	Multiplexed address / data bus terminal
177	VSSio	-	Connect to ground
178~180	AD2~0	I/O	Multiplexed address / data bus terminal
181	VDDio	-	Power supply terminal 3.3V
182	PWE0	I/O	Byte write enable for FLASH,EEPROM,SRAM or peripherals terminal
183	ALE	I/O	Address latch enable
184~187	LA0~3	I/O	Latched address 0~3
188	VSSio	-	Connect to ground
189	RD	I/O	Read terminal
190	LHLDA	O	Bus hold acknowledge in slave mode
191	LHLD	I	Bus hold request from external master in slave mode
192	VDD	-	Power supply terminal 1.8V
193	PCS0	O	Peripheral chip select 0, generally used for enabling the program store ROM/FLASH
194,195	XI01,02	I/O	Programmable general purpose external input/output
196	VDDio	-	Power supply terminal 3.3V
197~200	XI03~06	I/O	Programmable general purpose external input/output
201	VSS	-	Connect to ground
202,203	XI07,08	I/O	Programmable general purpose external input/output
204	VSSio	-	Connect to ground
205	XI09	I/O	Programmable general purpose external input/output
206~209	XID10~13	I/O	Programmable general purpose external input/output
210	VDDio	-	Power supply terminal 3.3V
211	XID14	I/O	Programmable general purpose external input/output
212	VDD	-	Power supply terminal 1.8V
213	DSYNC	I	DVD Parallel mode sector sync
214	DREQ	O	DVD Parallel mode data request
215	DCLK	I	Data sampling clock
216	DSTB	I	Parallel mode data valid, serial mode left/right clock
217	DVD0	I	DVD Drive parallel data port
218	VSSio	-	Connect to ground
219~223	DVD1~5	I	DVD Drive parallel data port
224	VDDio	-	Power supply terminal 3.3V
225,226	DVD6,7	I	DVD Drive parallel data port
227	MD0	I/O	SDRAM Data bus terminal
228	VSSio	-	Connect to ground
229	MD1	I/O	SDRAM Data bus terminal
230	VSS	-	Connect to ground
231,232	MD2,3	I/O	SDRAM Data bus terminal
233	VDDio	-	Power supply terminal 3.3V
234~236	MD4~6	I/O	SDRAM Data bus terminal
237	VSSio	-	Connect to ground
238~240	MD7~9	I/O	SDRAM Data bus terminal




## ■ NJU3715G-W(IC802) : L.E.D.Driver

### 1.Pin layout

D3	1	22	VCC
D4	2	21	D2
D5	3	20	D1
D6	4	19	DCH
D7	5	18	MUTE
VSS	6	17	
STLED	7	16	READY
PONLED	8	15	CLR
PROGLED	9	14	$\overline{ST}$
DDPLED	10	13	CLK
ALED	11	12	DATA

### 2.Block diagram

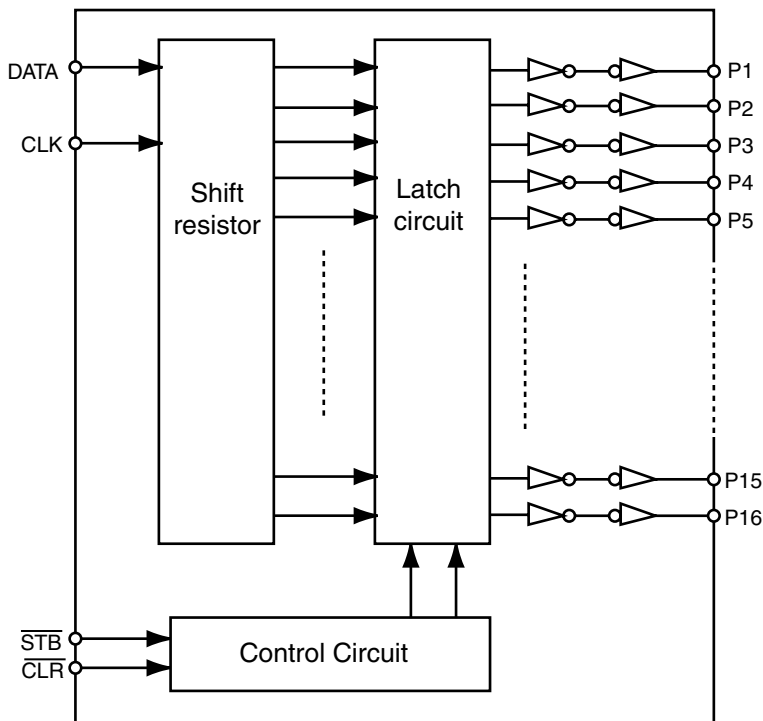


### 3.Pin function


PIN No.	I/O	Symbol	Function
1~5	O	D3~D7	Parallel conversion data output terminal.
6	-	VSS	Connect to GND.
7~11	O	STLED,PONLED,PROGLED DDPLED,ALED	Parallel conversion data output terminal.
12	I	DATA	Serial data input terminal.
13	I	CLK	Clock signal input terminal.
14	I	$\overline{ST}$	Strobe signal input terminal.
15	I	$\overline{CLR}$	Clear signal input terminal.
16	I	READY	Ready signal input.
17	-		Non connect.
18	I	MUTE	Muting signal input.
19~21	O	DCH,D1,D2	Parallel conversion data output terminal.
22	-	VCC	Power supply terminal.

■ SST39VF160-7CEK (IC509) : 16M EEPROM

1. Pin layout

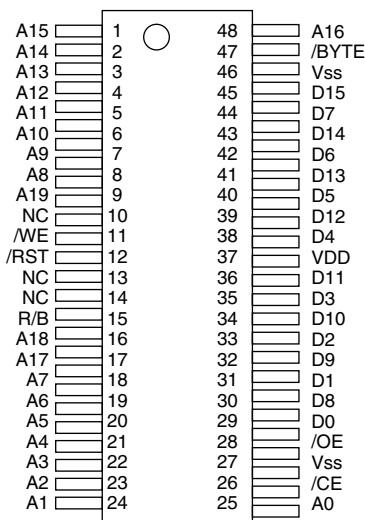

2. Block diagram

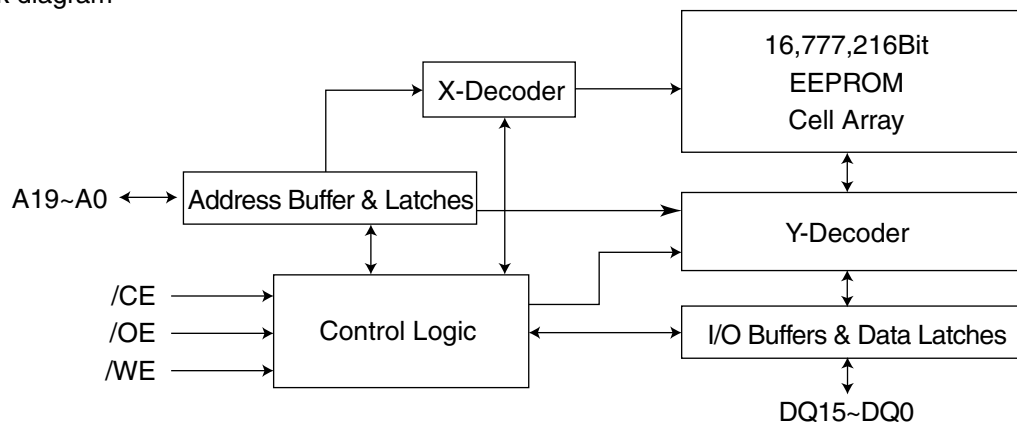


3. Pin function

Symbol	Pin name	Function
A19~A0	Address Inputs	To provide memory addresses. During sector erase A19~A11 address lines will select the sector. During block erase A19~A15 address lines will select the block.
DQ15~DQ0	Data Input/Output	To output data during read cycles and receive input data during write cycles. Data is internally latched during a write cycle. The outputs are in tri-state when /OE or /CE is high.
/CE	Chip Enable	To activate the device when /CE is low.
/OE	Output Enable	To gate the data output buffers.
/WE	Write Enable	To control the write operations.
VDD	Power Supply	To provide 3-volt supply ( 2.7V-3.6V ).
Vss	Ground	
NC	No Connection	

## ■ UPD780232GC-050(IC801):System controller

### 1.Pin layout

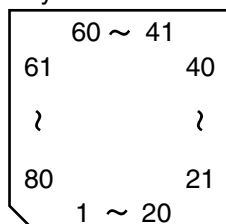

### 2.Pin function

Pin No.	Symbol	I/O	Description
1	VDD1	-	Power supply terminal (+5V)
2	VSS1	-	Connect to ground
3,4	X1,X2	I/O	Main system clock oscillation terminal
5	IC(VPP)	-	Internal connection (connect to VSS1)
6	RESET	I	System reset input
7	SSPCLK1B	I	Serial communications clock input
8	SSPOUT1B	I	Serial communications data input
9	SSPIN1A	O	Serial communications data output
10	POWERSW	I	Power switch (S1) input terminal
11	AVCO	O	AV Compulink output terminal
12	INTP	O	Serial communications interrupt output
13	P.ON	O	Power ON signal output
14	CPU RESET	O	CPU Reset output
15	AVCI	I	AV Compulink input terminal
16	FLCS	I	Chip select input
17	REMO	I	Remote controller signal input
18	AVSS	-	Connect to ground for A/D converter
19	KEY3	I	Operation switch (S801~S808) input terminal
20	KEY2	I	Operation switch (S809,S810,S812~S15) input terminal
21	CAMSW	I	Cam switch position detection terminal (S84)
22	MUDSW	I	Traverse mechanism UP/DOWN switch detection terminal (S82)
23	VSS0	-	Connect to ground for port section
24	AVDD	-	Power supply terminal (+5V)
25	VDD0	-	Power supply terminal (+5V) for port section
26	DATA	O	Data output for LED controller (IC802)
27	CLK	O	Clock output for LED controller (IC802)
28	STB	O	Data latch output for LED controller (IC802)
29		O	Connect to TP503
30	RR	O	Sub tray right rotation driving signal
31	LR	O	Sub tray left rotation driving signal
32	LDOWN	O	Traverse mechanism down driving signal
33	LUP	O	Traverse mechanism up driving signal
34	T.IN	I	Tray close detection terminal (S83)
35	T.OUT	I	Tray open detection terminal (S83)
36	FXIN	I	Exchange switch detection terminal
37	PD	I	Play position photo coupler input
38	NDD	I	Disc detection photo coupler input
39~58	P24~P5	O	FL Segment control signal output
59	VDD2	-	Power supply terminal (+5V) for driver section
60	VLOAD	-	Connected to pull down resistor for FL driver
61~64	P4~P1	O	FL Segment control signal output
65~67		-	Connect to TP504~506
68~80	13G~1G	O	FL Grid control signal output

## Glossary of term and abbreviations (for AV Decoder section)

<b>3D</b>	3-dimension
<b>A/V</b>	1)audio/video 2)audio/visual
<b>ac</b>	alternating current
<b>ACLK</b>	audio serial-data (bit) clock
<b>AD</b>	multiplexed address / data bus
<b>ADC</b>	analog-to-digital converter
<b>AIN</b>	digital audio input
<b>ALE</b>	address latch enable
<b>ANSI/SMPTE</b>	American National Standards Institute / Society of Motion Pictures and Television Engineers
<b>AOP</b>	Audio Output Processor
<b>AXCLK</b>	test-mode audio-PLL clock output
<b>baud</b>	unit of signaling speed equal to one code element per second
<b>Cb</b>	blue color difference component ( in accordance with the CCIR 601 specifications)
<b>CCIR</b>	Consultative Committee on International Radio
<b>CD</b>	compact disc
<b>CD-DA</b>	compact disc-digital audio
<b>CMOS</b>	Complementary Metal Oxide Semiconductor
<b>CPU</b>	Central Processing Unit
<b>Cr</b>	red color difference component ( in accordance with the CCIR 601 specifications)
<b>CSS</b>	Content Scrambling System
<b>CTS</b>	Clear To Send
<b>CVBS</b>	Composite Video Blank and Sync
<b>DAC</b>	Digital-to-Analog Converter
<b>dc</b>	direct current
<b>DEMUX</b>	DEMUX Engine
<b>DSP</b>	Digital Signal Processing
<b>DTS</b>	Digital Theater System
<b>DVD</b>	Digital Versatile Disc
<b>EAV</b>	End Active Video
<b>EAV/SAV</b>	End Active Video / Start Active Video
<b>EEI</b>	Enable Error Interrupt
<b>EEPROM</b>	Electrically Erasable Programmable Read-Only Memory
<b>FS</b>	FIFO Status
<b>GPIO</b>	General Purpose Input/Output
<b>HDCCD</b>	High Definition Compatible Digital
<b>HDTV</b>	High-Definition television
<b>HSYNC</b>	Horizontal sync
<b>I/O</b>	Input/Output
<b>IEC</b>	International Electrotechnical Commission
<b>IOM</b>	Current (I) Output Minus ( complementary shared current path to Video DAC current paths)
<b>IR</b>	infrared
<b>ITU</b>	International Telecommunications Union
<b>LA</b>	Latched Address Bus
<b>LCLK</b>	oscillator clock ( derived from internal crystal oscillator )
<b>Lfe</b>	Low-frequency effect
<b>LRCLK</b>	Left/Right clock
<b>LSB</b>	Least Significant Bit
<b>Mb</b>	Megabit
<b>MB</b>	Megabyte

<b>MCLK</b>	primary or master clock
<b>MHz</b>	Megahertz
<b>MIPS</b>	Million Instructions Per Second
<b>MmCPU</b>	Mediamatics CPU (synonym for internal RISC CPU)
<b>MP3</b>	Moving Picture Experts Group Layer-3 Audio (audio file format / extension)
<b>MPEG1 audio</b>	A digital audio format mainly used in video CDs. It is based on the moving picture expert group (MPEG1) format, a data compression technology.
<b>MPEG2 audio</b>	A digital audio format mainly used in Europe and Australia. It provides high quality, multi-channel audio of up to eight channels in the same way as Dolby Digital and DTS. It is based on the MPEG2 format, a data compression technology more improved than MPEG1
<b>NOP</b>	No Operation
<b>NTSC</b>	1)National Television System Committee 2)Worldwide video standard in North America and Japan
<b>NTSC-M</b>	Version of NTSC used in certain parts of the world (Brazil)
<b>OSD</b>	On-screen display
<b>PAL</b>	Phase alteration by line
<b>PCM</b>	Pulse Code Modulation
<b>PCMCLK</b>	PCM audio-data over-sampling clock
<b>PCS</b>	1)Picture Control and Size 2)Peripheral Chip Select
<b>PLL</b>	Phase Lock Loop
<b>PQFP</b>	Plastic Quad Flat Pack (Package)
<b>PWM</b>	Pulse Width Modulator
<b>r/w</b>	Read/Write access
<b>RAM</b>	Random Access Memory
<b>RGB</b>	Red-Green-Blue (color model)
<b>RISC</b>	Reduced Instruction Set Computer
<b>ROM</b>	Read-Only Memory
<b>RXD</b>	Receive signal
<b>RW</b>	Readable / Write able
<b>SAV</b>	Start Active Video
<b>SCART</b>	Syndicat des Constructeurs d'Appareils Radiorecepteurs et Televiseurs ( connector used in Europe to connect many kinds of audiovisual equipment)
<b>SCLK</b>	Secondary or slave clock
<b>SDRAM</b>	Synchronous Dynamic Random Access Memory
<b>S/PDIF</b>	Sony / Philips Digital Interface
<b>S/PDIFCLK</b>	clock associated with the S/PDIF output
<b>SRAM</b>	Static Random Access Memory
<b>SSP</b>	Synchronous Serial Port
<b>TXD</b>	transmit signal
<b>UART</b>	Universal Asynchronous Receiver-transmitter
<b>USART</b>	Universal Synchronous / Asynchronous Receiver / Transmitter
<b>VGA</b>	Video Graphics Array
<b>VIO</b>	Video Input / Output
<b>VREF</b>	Voltage REFerence
<b>Vref</b>	Vertical reference
<b>VSSA</b>	quiet analog ground
<b>VSYNC</b>	Vertical sync
<b>XBUS</b>	External peripheral bus
<b>XIO</b>	External Input / Output
<b>Y</b>	Luminance component (in accordance with the CCIR 601 specifications)
<b>YCbCr</b>	Luminance component, blue color difference component, red color difference component (in accordance with the CCIR 601 specifications)

**JVC**

**VICTOR COMPANY OF JAPAN, LIMITED**  
PERSONAL & MOBILE NETWORK BUSINESS UNIT  
1644, Shimotsuruma, Yamato, Kanagawa 242-8514, Japan