



# AWM970 Quick Reference Guide

## Basic Operation



**AUDIO:** With each press of the button choose from the following **AUDIO ADJUSTMENT** options: VOLUME, BASS, TREBLE, BALANCE (left to right), & FADER (front to back).

**Power On/Off:** Push to turn ON or OFF.

**MUTE:** Press to MUTE audio.



**T/F CLOCK:** Press to display CLOCK.

**SPEAKER OUTPUT:** Press any speaker button (SPEAKER A, SPEAKER B, or SPEAKER C) to control corresponding speaker output from the stereo. Red light above each button will illuminate when selected speaker is turned on.

**HEADPHONE:** Insert headphone jack.

**AUX AV IN:** Insert 3.5mm audio/video jack.

## AM/FM Tuner Controls



**VOL:** Rotate CLOCKWISE to INCREASE VOLUME. Rotate COUNTER CLOCKWISE to DECREASE VOLUME.


**AS/PS:** Press to SCAN through currently stored presets. Press & hold to STORE strongest broadcast stations in your area.

**AM/FM:** Press to directly access TUNER MODE. Press to select between two AM BANDS (AM1 & AM2) & three FM BANDS (FM1, FM2, & FM3).

**MUTE:** Press to MUTE audio.

**STATION STORE BUTTONS:**

Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 30 channels (6 channels per band FM1, FM2, FM3, AM1, AM2).

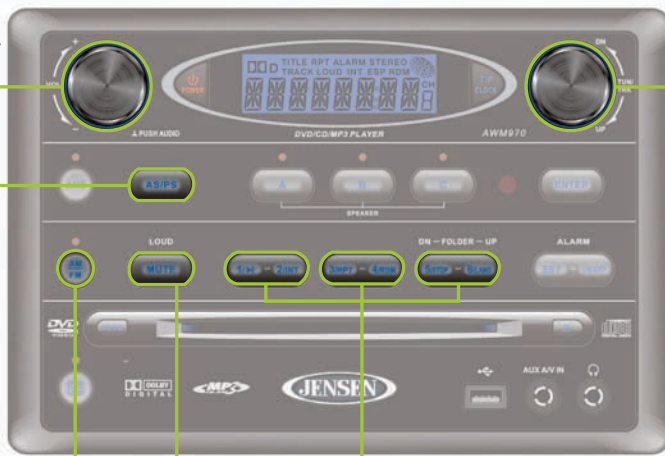

**TUNE/TRACK:** Rotate COUNTER CLOCKWISE to TUNE DOWN in frequency. Rotate CLOCKWISE to TUNE UP in frequency. Rotate and hold to scan to next strongest station.

## CD/DVD/USB Player Controls



**VOL:** Rotate CLOCKWISE to INCREASE VOLUME. Rotate COUNTER CLOCKWISE to DECREASE VOLUME.

**MUTE:** Press to MUTE audio.

**MENU:** Press to access main DVD MENU.

**DVD/USB:** Press to select DVD/USB mode.

**PLAY/PAUSE:** Press to PLAY or PAUSE current audio or video.

**INTRO SCAN:** Press to play each track for 10 seconds in sequential order. Press again to SELECT desired play.


**RPT:** Press to REPEAT current playing track. Press to release function.

**RDM:** Press to play each track in RANDOM order. Press again for NORMAL play.

**STOP:** Press to SUSPEND disc play. Press PLAY/PAUSE to RESUME disc play.

**LANG:** Press to select AUDIO LANGUAGE when in DVD MODE.


**USB:** Plug in USB device

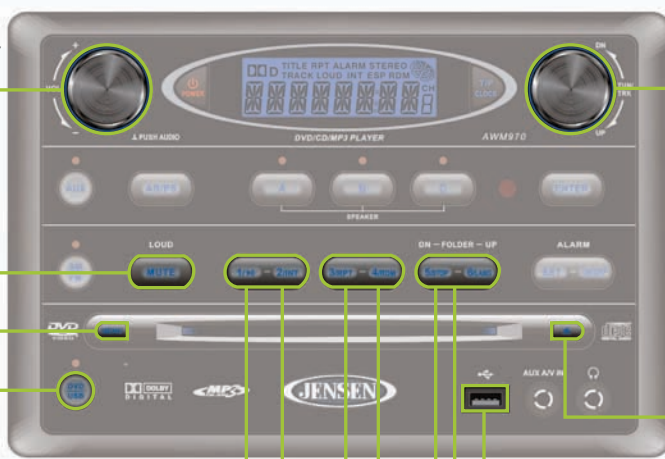


**TUNE/TRACK:** Rotate CLOCKWISE to tune to NEXT TRACK or CHAPTER/TITLE. Rotate COUNTER CLOCKWISE to tune to PREVIOUS TRACK or CHAPTER/TITLE. In CD MODE, rotate and hold to FAST FORWARD or REWIND current play. In DVD MODE, rotate and hold to enter FAST FORWARD/RW. Momentarily turn to step through x2, x4, x8, x20. Press PLAY to resume.

**EJECT:** Press to EJECT CD or DVD.

## DVD Remote Controls

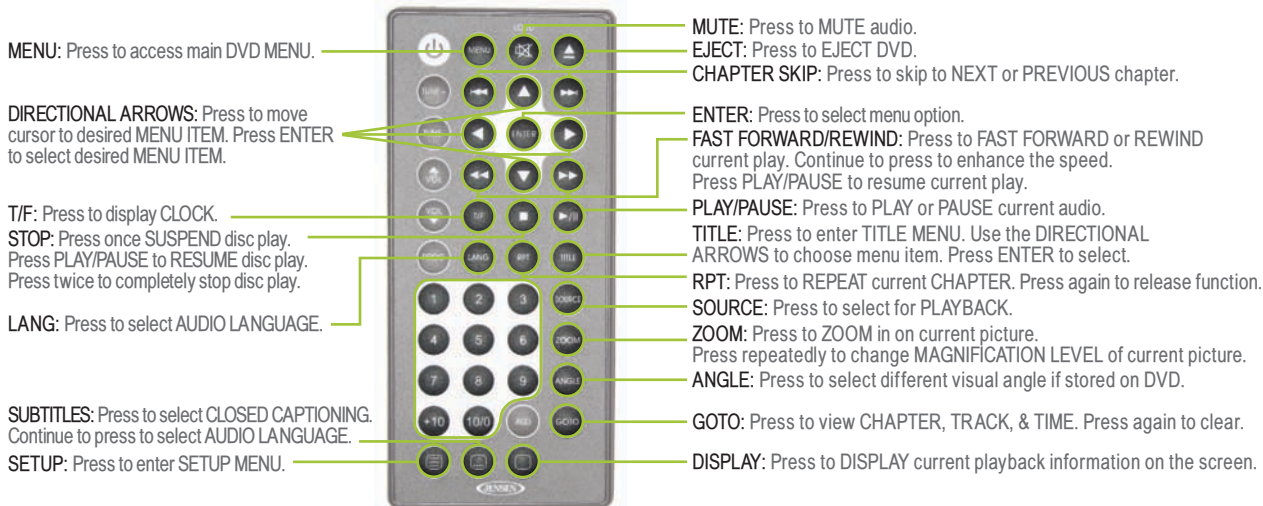

## iPod Controls

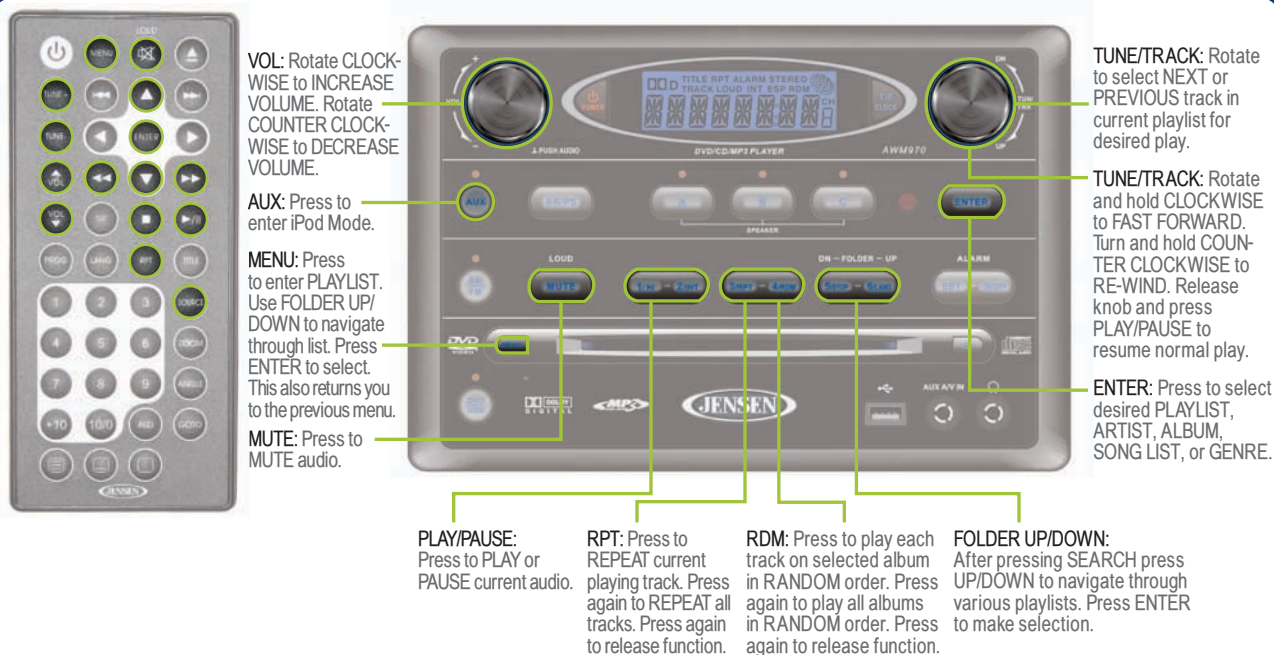

## Clock/Alarm Settings

