



Setup Guide

Application Software


SD005-KHA Harmonics Explorer Ver. 3.5

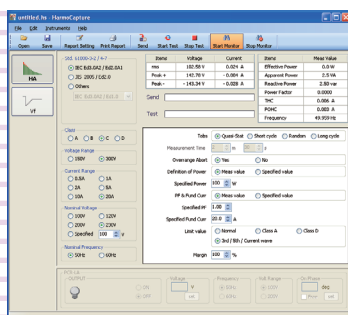

HarmoCapture

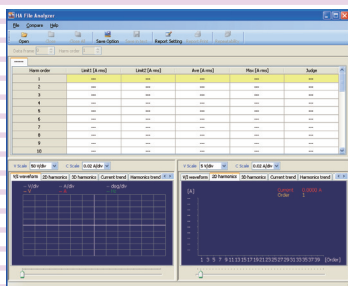

HA File Analyzer

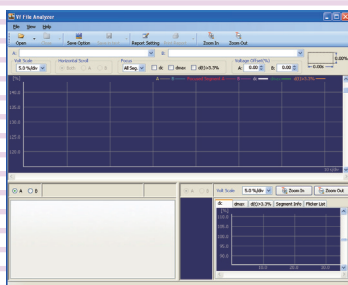

Vf File Analyzer

General Description3

Conformance Standards	4
Main Features.....	5
System Requirements	6
VISA Driver.....	7
Package Contents	8
Available Manuals.....	8
Notes on Use.....	8

Setup.....9

Before Installation.....	9
Inserting the CD-ROM	9
Installation.....	10
Interface Configuration	14
Harmonics Explorer Startup.....	16
Viewing the Operation Guide.....	18

Thank you for purchasing the Harmonics Explorer.

About This Guide

This guide is intended for first-time users of the Harmonics Explorer. It gives an overview of the product, explains how to install the software, provides notes on the usage, explains how to start the software, and so on.

After reading this guide, keep it in a safe place for quick reference. If you find any misplaced or missing pages in this guide, it will be replaced.

If you lose or damage this guide, you can purchase a new copy. In either case, please contact a Kikusui distributor or agent, and indicate the "Part No." given on the cover.

Every effort has been made to create this guide. However, if you have questions or find errors in this guide, please contact a Kikusui distributor or agent.

■ Product Version that This Guide Covers

This guide applies to the Harmonics Explorer with version 3.5.

■ Related Equipment Versions

- KHA1000 Harmonic/Flicker Analyzer

Firmware version 1.7

The version appears on the screen when the KHA1000 is turned on.

- PCR-LA (AC power supply)

Firmware version 3.10 or later

The version appears on the control panel display when the PCR-LA is turned on.

- PCR-L (AC power supply)

Firmware version 2.04 or later

The version appears on the control panel display when the PCR-L is turned on.

Harmonics Explorer can also be used for the conventional AC Power Supply PCR-L Series. In this case, read "PCR-LA" as "PCR-L."

■ How to Read This Guide

This guide is designed to be read from beginning to end. We recommend that you read the guide thoroughly from the beginning before using this product for the first time.

■ Who Should Read This Guide?

This guide is intended for those using the KHA1000 to control a harmonic current and voltage fluctuation test system and those teaching operators how to use it.

■ Trademark Acknowledgements

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Other company names and product names that appear in this guide are trademarks or registered trademarks of the respective companies.

■ Copyrights

The contents of this guide may not be reproduced, in whole or in part, without the prior consent of the copyright holder.

The specifications of this product and the contents of this guide are subject to change without prior notice.

© 2006-2011 Kikusui Electronics Corporation

For Safe Use

Before executing a test using the Harmonics Explorer, carefully read the operation manuals (especially the hardware explanations) for the products given below and pay careful attention when making connections and performing operations. Improper handling may cause serious accidents such as injuries or fire.

- Harmonic/flicker analyzer KHA1000
- AC power supply PCR-LA Series
- Line impedance network LIN40MA-PCR-L

Notations Used in This Guide

- The KHA1000 Harmonic/Flicker Analyzer may be called the KHA1000.
- "Personal computer" and "PC" are generic terms for personal computers and workstations.
- The following symbols are used with the explanations in this guide.



CAUTION Indicates a potentially hazardous situation that, if ignored, may result in damage to the product or other property.



NOTE Indicates information that you should know.



See Indicates reference to detailed information.

General Description

The Harmonics Explorer can remotely control the KHA1000 Harmonic/Flicker Analyzer from a PC.

By using this application in combination with the PCR-LA AC Power Supply Series and the LIN40MA-PCR-L Line Impedance Network, you can perform tests that comply with IEC and JIS standards.

The Harmonics Explorer displays measured values in various ways in real time. It can evaluate, analyze, and make pass/fail judgments based on standard compliance tests.

Harmonics Explorer structure

Harmonics Explorer is made up of three application software below.

- HarmoCapture
- HA File Analyzer
- Vf File Analyzer

Conformance Standards

The Harmonics Explorer conforms to the standards listed in below. The “Standard name notations” in the table are the symbols used in HarmoCapture, and indicate the relevant standards for limit values and measuring techniques.

Classification	Standard name notation (used for HarmoCapture)	Standard number and edition for limit value ^{*1}	Standard number and edition for measuring technique ^{*1, *2}
Harmonic current	IEC Ed2.2/Ed2.0	IEC 61000-3-2:Ed2.2(2004) EN 61000-3-2(2000)/A2(2005)	IEC 61000-4-7:Ed2.0(2002) EN 61000-4-7(2002)
	JIS 2005/Ed2.0	JIS C61000-3-2(2005)	IEC 61000-4-7:Ed2.0(2002)
	JIS 2003/Ed1.0	JIS C61000-3-2(2003)	JIS C61000-4-7(1997)
	IEC Ed2.2/Ed1.0	IEC 61000-3-2:Ed2.2(2004) EN 61000-3-2(2000)/A2(2005)	IEC 61000-4-7(1991) EN 61000-4-7(1993)
	JIS 2005/Ed1.0	JIS C61000-3-2(2005)	JIS C61000-4-7(1997)
	IEC Ed3.0/Ed2.0	IEC 61000-3-2:Ed3.0(2005) EN 61000-3-2(2006)	IEC 61000-4-7:Ed2.0(2002) EN 61000-4-7(2002)
	IEC Ed3.0/Ed1.0	IEC 61000-3-2:Ed3.0(2005) EN 61000-3-2(2006)	IEC 61000-4-7(1991) EN 61000-4-7(1993)
	IEC Ed3.0A2/Ed2.0A1	IEC 61000-3-2:Ed3.0(2005)/A2(2009) EN 61000-3-2(2006)/A2(2009)	IEC 61000-4-7:Ed2.0(2002)/A1(2008) EN 61000-4-7(2002)/A1(2009)
	IEC Ed3.0A2/Ed1.0	IEC 61000-3-2:Ed3.0(2005)/A2(2009) EN 61000-3-2(2006)/A2(2009)	IEC 61000-4-7(1991) EN 61000-4-7(1993)
Flicker voltage fluctuation	IEC 61000-3-3Ed2.0	IEC 61000-3-3:Ed2.0(2008) EN 61000-3-3(2008)	-
	IEC 61000-4-15Ed1.1	-	IEC 61000-4-15:Ed1.1(2003) EN 61000-4-15(1998)/A1(2003)
	IEC 61000-4-15Ed2.0	-	IEC 61000-4-15:Ed2.0(2010)

*1 When the report is printed, the EN standard number also is written.

*2 Measuring technique standard that corresponds to limit value standard

IEC 61000-4-7:Ed2.0(2002), IEC 61000-4-7:Ed2.0(2002)/A1(2008)


The measuring window width is 0.2 second. It is 10 cycles at a basic frequency of 50 Hz and 12 cycles at a basic frequency of 60 Hz. Harmonic groups are measured.

IEC 61000-4-7(1991)

The measuring window width is 0.32 second at a basic frequency of 50 Hz and 0.266 second at a basic frequency of 60 Hz (either is a basic frequency of 16 cycles). Harmonic groups are not measured.

JIS C61000-4-7(1997)

The measuring window width is 0.32 second at a basic frequency of 50 Hz and 0.266 second at a basic frequency of 60 Hz (either is a basic frequency of 16 cycles). Interharmonic waves and harmonic groups are not measured.

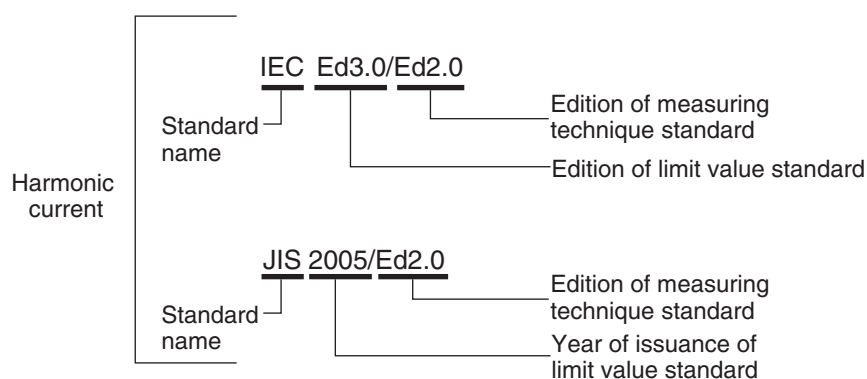

Rules for standard name notations

Main Features



HarmoCapture can be used to:

- Remotely control the KHA1000 and the PCR-LA AC power supply from a PC.
- Configure and save test conditions.
- Start and stop tests.
- Display test results (pass/fail judgment.)
- Save test result files.
- Monitor measured values (rms current and voltage, positive and negative current and voltage peaks, active power, apparent power, reactive power, power factor, THC, POHC, and frequency.)
- Print reports (comments, test conditions, and data lists.)

HA File Analyzer can be used to:

- Load the harmonic current test results file acquired by the KHA1000 or HarmoCapture.
- Display test results lists (pass/fail judgment.)
- Display graphs (V/I waveform, 2D harmonics, 3D harmonics, current trend, harmonics trend, and THC trend.)
- Check AC power source.
- Check repeatability.
- Save test results files as text.
- Print reports (comments, test conditions, results lists, and various waveform graphs.)

Vf File Analyzer can be used to:

- Load the voltage fluctuation test results file acquired by the KHA1000 or HarmoCapture.
- Display test results lists (pass/fail judgment, and segment information lists.)
- Display graphs (the maximum dc, the maximum dmax, and the maximum time over which d(t) exceeds 3.3 %.)
- Save test results files as text.
- Print reports (comments, test conditions, results lists, and various waveform graphs.)

System Requirements

Below are the hardware and software requirements for using the Harmonics Explorer.

- Personal computer with Microsoft Windows 7 or Windows Vista or Windows XP Service Pack 2 or later or Windows 2000 Service Pack 4 or later, and Internet Explorer 5.0 or later installed
- Microsoft.NET Framework 2.0
- At least 256 MB of memory (512 MB or more recommended)
- 1024 x 768 dots or higher resolution
- 100 MB or more free hard disk space (more space required for saving data)
- CD-ROM drive
- Mouse or other pointing device
- VISA library
NI-VISA 4.1 or later; Agilent IO Libraries Suite 14.1 or later; or KI-VISA 4.2.2 or later
- USB cable (when using USB)
- GPIB card and IEEE488 cable (when using GPIB)
- Cross serial cable (when controlling the PCR-LA via RS232C)
- CompactFlash slot, CompactFlash Type I (CFA), up to 512 MB (when using KHA1000 files)

VISA Driver

You must install a VISA driver to use the Harmonics Explorer.

CAUTION Do not install multiple different VISA drivers, because they may not operate properly.

NOTE

- VISA
VISA (Virtual Instrument Software Architecture) is a standard developed by the VXIplug&play Systems Alliance that defines software specifications for communicating with instruments from a PC.
- VISA driver
A VISA-compliant driver software.
- KI-VISA
- Kikusui original VISA driver compatible with VXIplug&play VISA.

The VISA driver that is required varies depending on the I/O interface that you will be using. See below to select the appropriate VISA driver.

VISA driver	Version and how to obtain the driver
KI-VISA	KI-VISA Ver 4.2.2 or later From the software CD-ROM or from the KIKUSUI Website
NI-VISA	Ver 4.1 or later From the CD-ROM provided with the GPIB card or from the National Instruments Website
Agilent IO Libraries	Suite 14.1 or later From the CD-ROM provided with the GPIB card or from the Agilent Technologies Website

- If you are using RS232C or USB, any VISA driver can be used. However, for details on licensing, refer to the license terms of the respective VISA driver.
- RS232C supports standard communications ports on a personal computer and virtual serial communication ports through a USB-RS232C converter or other similar converters. However, virtual communication ports may not work properly depending on the device driver that is provided.
- If you are using GPIB, you must use the appropriate VISA driver; otherwise, it will not work.
- KI-VISA supports the following GPIB models.

CONTEC CO., LTD.	GP-IB(PCI)L, GP-IB(PM), GP-IB(PCI)F, GP-IB(CB)F. API-GPIB driver VER4.01 or later recommended. When using GPIB cards by Contec Co., Ltd, use the ordinary API-GPIB driver, not the API-GPLV driver (LabVIEW compatible and NI-488.2M API compatible).
Interface Corporation	PCI-4301 LabVIEW compatible version (GPC-4301N driver version 1.21 or later recommended) When using GPIB cards by Interface Corporation, use the GPC-4301N driver (LabVIEW compatible and NI-488.2M API compatible), not the ordinary GPC-4301 driver.

Package Contents

The Harmonics Explorer package contains the following items.

Name	Quantity
Program CD-ROM	1
Harmonics Explorer Setup Guide	1

Available Manuals

The Harmonics Explorer comes with the following manual in addition to this Setup Guide.

See p. 18

- Operation Guide (electronic manual)
The operation guide details the Harmonics Explorer operation. There are two types of HTML help and PDF. For instructions on how to view the Operation Guide, see “[Viewing the Operation Guide](#).”

Notes on Use

The HarmoCapture is used to retrieve KHA1000 test data to your PC. To ensure that test data is retrieved, disable the following features on your PC during testing.

- Windows power save mode
- Screen saver
- Memory-resident programs

Do not run other software applications during testing.

Setup

Before Installation

- You need to log on as an administrator to install the software applications.
- Close all software applications running on your PC. The software may not be installed properly if virus protection software is running. Disable virus protection software until the installation is complete.

Inserting the CD-ROM

Insert the program CD-ROM in the drive. After a short time, the menu program window opens.

If the menu program window does not open, browse the CD-ROM with Windows Explorer, and double-click index.htm. The menu program will start.



Install the following programs exactly in the order listed; otherwise, the software may not start. Be sure to install them according to the instructions.

- Windows Installer 3.1^{*1}
- Microsoft.NET Framework 2.0
- IVI Shared Components^{*2}
- VISA driver
- Harmonics Explorer

^{*1} This is only required when you are installing the programs on Windows XP.

^{*2} IVI Shared Components are installed at the same time when you install KI-VISA. There is no need to separately install them. They are also installed at the same time if you install some of the other VISA drivers.

Installation

■ If you are using Windows Windows XP

Proceed to [Step 1](#).

If you are using Windows Vista or Windows 7

See p. 11


Read “If you are not installing KI-VISA” described after [Step 6](#), and follow the instructions.

NOTE

There is no need to install Microsoft Windows Installer 3.1 and Microsoft.NET Framework 2.0 on Windows Vista or Windows 7. If you try to do so, an error will occur.

1 Click Microsoft Windows Installer 3.1.


The WindowsInstaller-KB893803-v2-x86.exe file on the CD-ROM appears in the window.

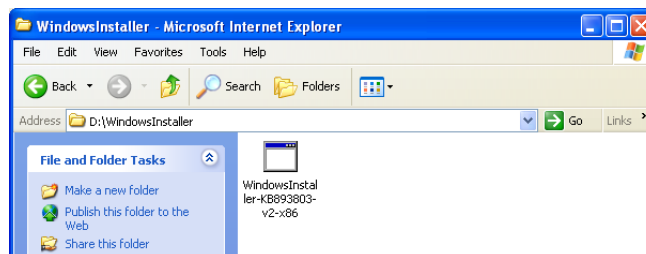

2 Double-click WindowsInstaller-KB893803-v2-x86.exe.

Then, follow the instructions on the screen.

When the installation is complete, the following dialog box opens.

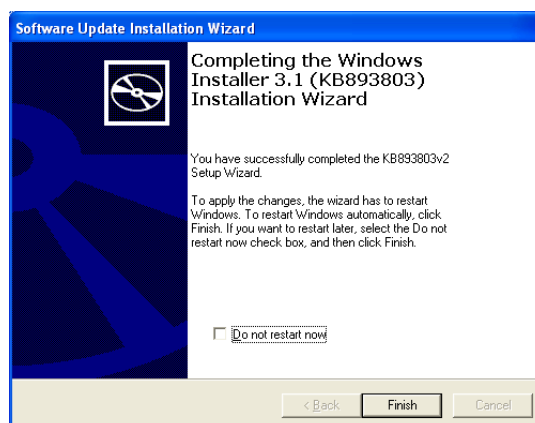


3 Click Finish and return to the menu program window.

Proceed to the Microsoft.NET Framework 2.0 installation.

4 On the menu program window, click Microsoft.NET Framework 2.0.


The dotnetfx.exe file on the CD-ROM appears in the window.

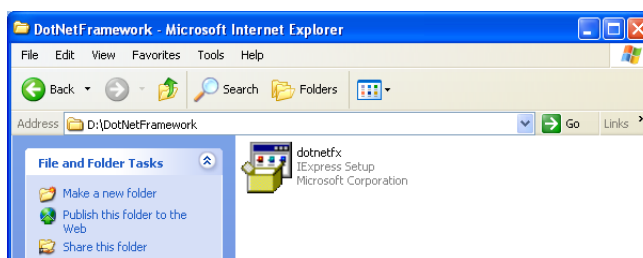

5 Double-click dotnetfx.exe.

Then, follow the instructions on the screen.

When the installation is complete, the following dialog box opens.

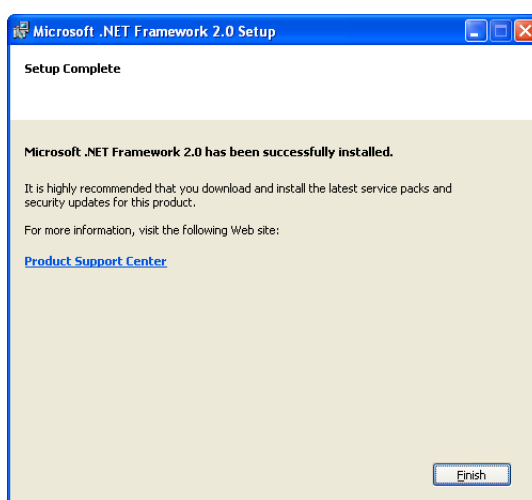

6 Click Finish and return to the menu program window.

Proceed to the KI-VISA installation.

If you are not installing KI-VISA

See p. 12


- To use an NI-VISA or Agilent Technologies VISA driver, refer to the manual of the respective product. If you are not installing KI-VISA, proceed to [Step 10](#).

CAUTION Do not install multiple different VISA drivers, because they may not operate properly.

7 On the menu program window, click KI-VISA x.x.x.

The Kivisa_x_x_x.exe file on the CD-ROM appears in the window. x_x_x is version number.

Install the KI-VISA_x_x_x_(x86) to 32-bit OS or the KI-VISA_x_x_x_(x64) to 64-bit OS.

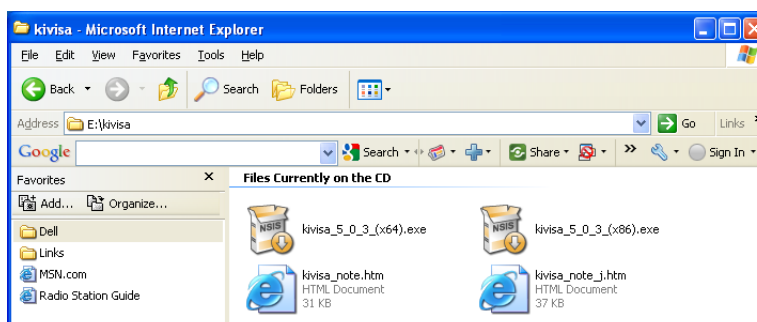


Installation (continued)

8 Double-click Kivisa_x_x_x.exe.

Then, follow the instructions on the screen.

When the installation is complete, the following dialog box opens.

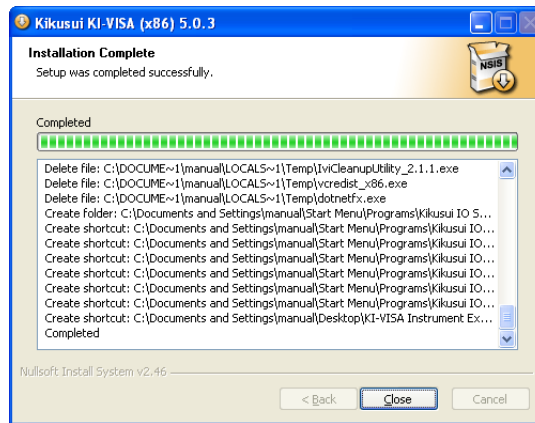


9 Click Close and click Back in the browser window.

Proceed to the Kikusui Harmonics Explorer for KHA1000 installation.

10 On the menu program window, click Kikusui Harmonics Explorer for KHA1000.


The HarmExp_X_X_X.exe file on the CD-ROM appears in the window. x_x_x is version number.

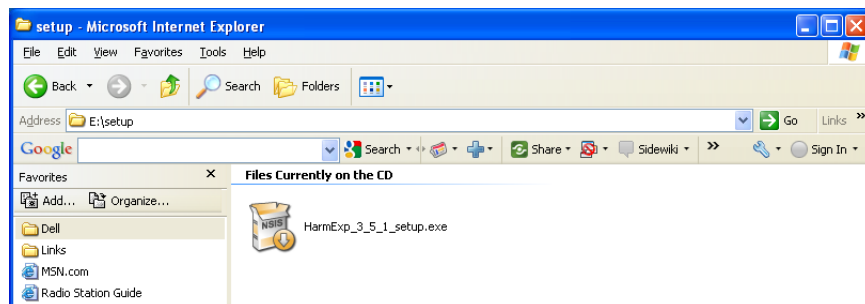

11 Double-click HarmExp_X_X_X.exe.

Then, follow the instructions on the screen.

When the installation is complete, the following window appears.

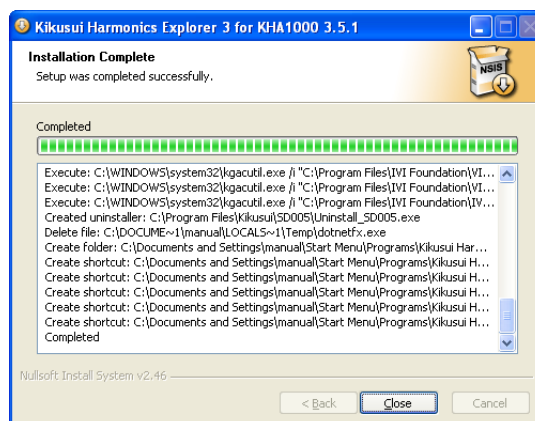

12 Click Close.

Installing Adobe Reader


If an application used to view PDF files is not installed on your PC, proceed with the following steps to install Adobe Reader.

- 1 Click Back in the browser window.
- 2 On the installation window, click Adobe Reader x.x.
- 3 Double-click AdbeRdrxx_en_US.exe.
xx described after AdbeRd is version number.
Then, follow the instructions on the screen.

Interface Configuration

System Configuration

The block diagram of the harmonic current and voltage fluctuation test system is shown in the following. Before making the settings explained later, connect the devices. The Harmonics Explorer communicates with the KHA1000 via the USB (recommended) or GPIB interface. It also communicates with the PCR-LA via the RS232C (recommended) or GPIB interface. The KHA1000 firmware version must be version 1.7 or later.

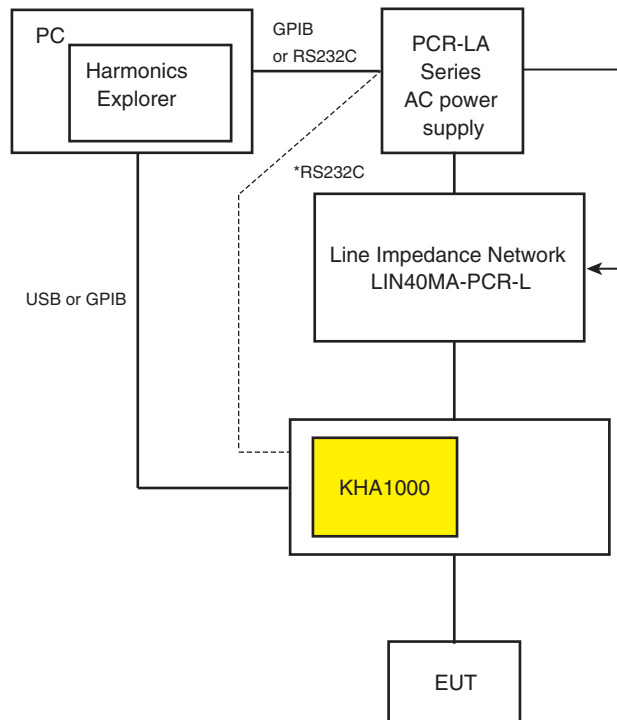

* If the RS232C has been used to connect between the KHA1000 and PCR-LA, re-connect it between the PC and PCR-LA.

Harmonic current and fluctuation voltage test system

KHA1000 Setup

In the KHA1000 system setup window, proceed with the following setup:

- 1 Press SYSTEM on the panel.**
- 2 From the I/F Select list, select the communication interface.**
 USB: Select this to connect the KHA1000 to the PC using a USB cable (recommended).
 GPIB: Select this to connect the KHA1000 to the PC using the GPIB cable. If you select GPIB, select an appropriate GPIB address from 1 to 30.
- 3 Turn off the KHA1000 POWER switch, and then turn it back on again.**

- 1 Turn on the PCR-LA POWER switch.
- 2 Press ESC to return to the home position.
- 3 To use the RS232C, set 0821 with the numeric keypad.
To use the GPIB, select an appropriate value from 1 to 30 for the GPIB address.

	0	8	2	1
Baud rate	1: 9600 bps	2: 19200 bps		
Stop bit	1: 1 bit	2: 2 bits		
Data length	7: 7 bits	8: 8 bits		
Parity	0: None	1: Odd number	2: Even number	

A shaded area indicates a set value.

RS232C communication parameter setting


For details on the KHA1000 or PCR-LA, see the respective manual.

Harmonics Explorer Startup

Starting HarmoCapture

- 1 To start HarmoCapture, click Start on the task bar, point to Programs > Kikusui Harmonics Explorer, and then click HarmoCapture.**

If the communication with the KHA1000 fails immediately after HarmoCapture starts, the I/O Configuration dialog box will open. If the communication is successful, the following steps up to [Step 2](#) are automatically executed.

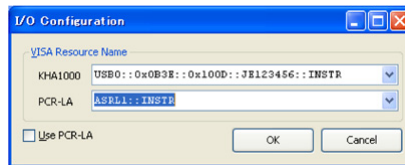

- **If the software is able to retrieve the device ID string**

Select the ID appears in the list and click OK.

The USB or GPIB is displayed as USB or GPIB with the acquired character string. The RS232C is displayed by a port number.

Example: GPIB0::1::INSTR

The KHA1000 and PC are connected using the GPIB cable, and the GPIB address is indicated as 1. The GPIB address is from 1 to 30.

Example: ASRL1


The KHA1000 and PC are connected using the RS232C cable, and the port number indicated is 1. ASRL2 indicates port 2.

- **If the ID does not appear in the list**

Check the I/F cable, VISA settings, or KHA1000 system settings, and then start over from [Step 1](#) .

2 HarmoCapture starts in the current KHA1000 test mode.

HarmoCapture starts in accordance with the KHA1000 test mode. The following screen is an example of the startup window when the KHA1000 is in the harmonic current test mode.

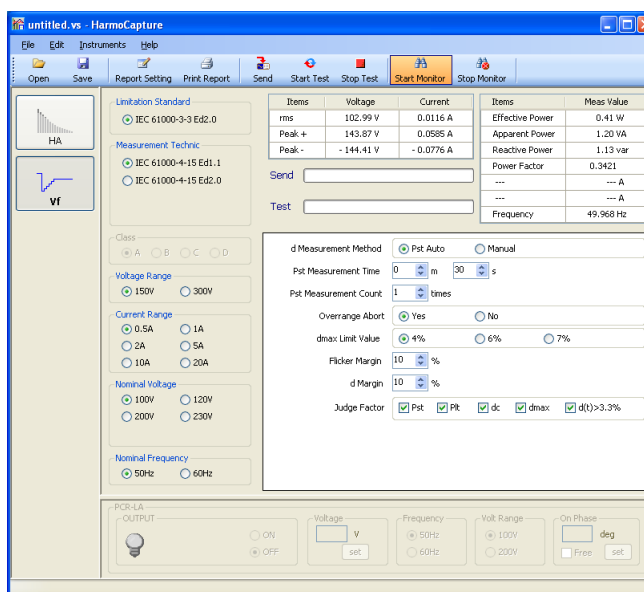


NOTE

If you start HarmoCapture when the KHA1000 is executing a test, the test will be stopped.

Starting HA File Analyzer

HA File Analyzer operates without being connected to the KHA1000.

- 1 To start HA File Analyzer, click Start on the task bar, point to Programs > Kikusui Harmonics Explorer, and then click HA File Analyzer.

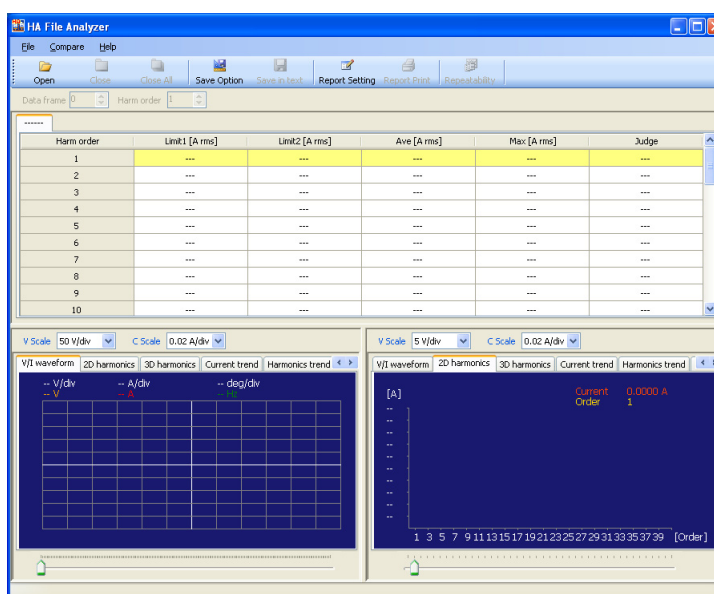


Harmonics Explorer Startup (continued)

Starting Vf File Analyzer

Vf File Analyzer operates without being connected to the KHA1000.

- 1 To start Vf File Analyzer, click Start on the task bar, point to Programs > Kikusui Harmonics Explorer, and then click Vf File Analyzer.

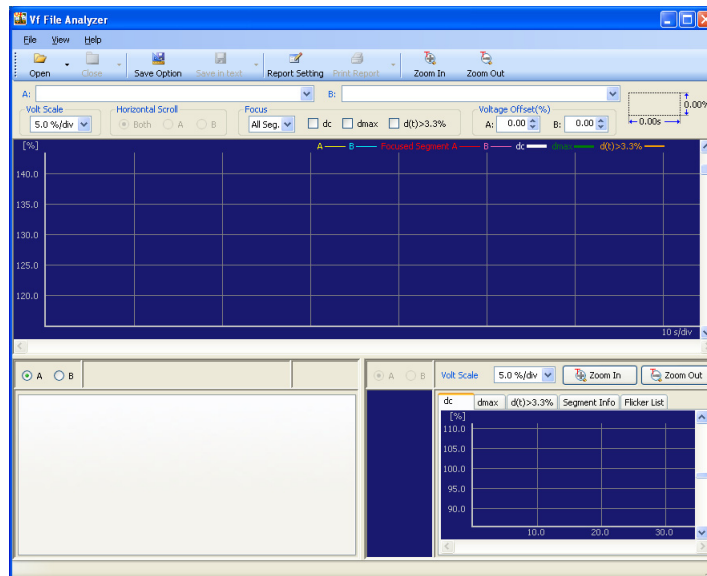

Viewing the Operation Guide

The Operation Guide details the instructions on how to use each application software.

■ HTML help

On each application software, choose Contents (English) from the Help menu.

■ PDF operation guide

The PDF version is the operation guide for printing help contents.

On each application software, choose User's manual (English) from the Help menu.