

## **MFJ-1224 RTTY/CW COMPUTER INTERFACE**

Thank you for purchasing the MFJ-1224 Interface. The MFJ-1224 will allow you to transmit and receive RTTY and CW when used with your transceiver. During reception, the MFJ-1224 converts the CW or AFSK tones from your receiver into computer compatible TTL level signals. The computer then translates these signals into the represented alpha-numeric characters and displays them on the screen. In the Transmit Mode, the computer generates the TTL signals which are converted by the Interface into AFSK tones for RTTY or into CW keying for CW transmission.

**NOTE:** The interpretation of the TTL signals requires a specialized HAM program which is not provided with the interface. This allows you to select a program which is compatible with your computer and which has the features you want.

When unpacking, make sure that all of these items are included; (1) INTERFACE, (1) EIGHT PIN MIC PLUG, (1) RCA CABLE, (1) FIVE PIN PLUG, (1) MIC CABLE WITH FIVE PIN PLUG ATTACHED, and (1) OWNERS MANUAL. THE 12VDC AC ADAPTER IS OPTIONAL.

### **FRONT PANEL**

The front panel controls and indicators consist of five push button switches and four L.E.D.'s. From left to right, they are as follows;

**ON/OFF** This switch controls the power to the interface.

**POWER L.E.D.** This indicator is lit when the power is on.

**PHASE LOCK L.E.D.** This indicator is used with the DATA indicator to aid in tuning the receiver. It indicates when the interface is locked onto an RTTY signal. It flashes with the Morse Code tone for CW reception.

**DATA L.E.D.** This indicator is used with the PHASE LOCK indicator to aid in tuning the receiver. It flashes on and off with RTTY shift and also flashes with the Morse Code tone for CW reception.

**CW Transmit L.E.D.** This indicator is activated by the CW keying circuit. It flashes during CW transmission.

RTTY/CW This switch selects either the RTTY or CW mode of operation.


Shift The next two switches control the shift for RTTY.



In this position the interface is set for a 850Hz audio shift.



In this position the interface is set for a 170Hz audio shift.



In this position the interface is set for a 425Hz shift and 170Hz sending shift




In this position the interface is set for a 425Hz shift and 850Hz shift.

NORMAL/REVERSE This switch inverts the demodulated RTTY signal being sent to the computer.

**BACK PANEL**

The MFJ-1224 provides inputs and outputs to allow interfacing to nearly any possible combination of computer and transceiver. The back paragraphs below describe their uses. Only a few of the available connections will be used for an given application; however, the availability of a variety of signals greatly enhances the versatility of the interface.

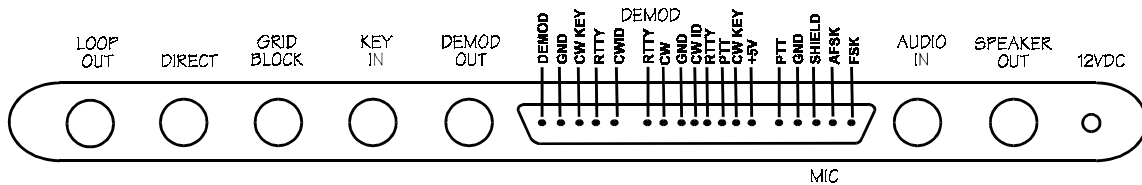

K - CONNECTOR GENERAL

LOOP OUT The loop-out jack provides the ground return to drive loop type teletypes. The user must connect the negative supply voltage to the sleeve. The center pin is a

continuation of the negative supply. The loop out merely acts as a spst switch switching the loop current on and off.

**DIRECT KEYING** This output keys rigs requiring direct keying (most rigs with solid state finals).

**GRID BLOCK KEYING** This output keys rigs requiring grid block keying (most rigs with tube finals).

**KEY IN** This input jack allows you to externally key the transmitter with your own electronic keyer or keyboard.

**DEMODO OUT** The demodulated output provides a TTL level signal which corresponds to the incoming RTTY space. It is also low for CW tone.

The next connector is a five pin jack, labeled K-connector because it is specifically designed for use with KANTRONILCS software. From left to right the pins are as follows:

**DEMODO** This pin produces the same output as the DEMODO OUT jack.

**GROUND** This pin provides the ground connections between the interface and the computer.

**CW KEY** This input pin allows the computer to key the transmitter through the interface. A low on this pin causes the interface to key the transmitter.

**RTTY** This input controls the AFSK for RTTY transmission. It works in conjunction with CW ID signals and to operate the push-to-talk switch. This will be covered in detail later.

**CW ID** This line controls the audio tone for CW identification. It works in conjunction with the RTTY line to produced RTTY and CW ID signals and operate the push-to talk switch. This will be covered in detail later.

Next is a eight pin general purpose connector which allows you to adapt the interface to almost any computer and software. An internal DIP switch allows the inputs and outputs to be inverted if necessary to correspond to the requirements of your computer. From left to right, the pins are as follows:

**RTTY DEMOD** This output is a TTL version of a received RTTY signal.

**GROUND** This pin provides the ground connection between the interface and the computer.

**CW ID** This input pin controls the shift for CW ID transmission.

**RTTY** This input pin controls the mark and space shift for RTTY transmission.

**PTT** This input controls the push-to-talk switch of the transmitter.

**CW KEY** This input controls the transmitter keying circuit.

**+5VDC** This input provides a 5 volt supply for external circuitry such as an RS-232 converter.

Next is a five-pin jack which is used for the microphone connection. From left to right, the pins are as follows:

**PTT OUT** This pin is connected to the high side if the push-to-talk line. It is shorted to ground to key the microphone.

**PTT GROUND** This pin is connected to the ground side of the push-to -talk line.

**AFSK SHIELD** This pin is connected to the ground for shield side of the AFSK line

**AFSK OUT** This line carries the audio signal for AFSK RTTY to the microphone input.

**FSK OUT** This line provides FSK signal for keying FSK rigs.

**AUDIO IN** The audio input jack should be connected to the external speaker jack or headphone jack of your receiver with a shielded audio cable. The interface end of the cable requires a RCA type plug.

**SPEAKER OUT** The speaker output jack may be connected to a speaker using shielded audio cable. The interface end of the cable requires a RCA type plug.

**12VDC** The power jack requires 12VDC from a 2.5mm sub miniature plug with the tip positive and the sleeve ground.

## **PRELIMINARY CONNECTIONS**

Input and output signals must be TTL level (+5VDC and ground). Inputs are RTTY and CW KEY (RTTY and CW on general purpose connector). There is also a separate CW ID input for identifying in MORSE while operating RTTY. Outputs are DEMOD (RTTY DEMOD and CW DEMOD on the GENERAL PURPOSE CONNECTOR) and DIRECT and GRID BLOCK. Connections depend on the type of computer and transceiver used. Either the GENERAL CONNECTOR or the K-CONNECTOR will be connected to the computer.

## **CONNECTIONS**

**FOR CW** For transmission and reception of CW, the following connections are necessary.

- 1.) A 12VDC power supply to the POWER jack of the interface.
- 2.) A shielded audio cable from the external speaker jack of the transceiver to the AUDIO IN jack of the interface.
- 3.) If desired, a speaker may be connected to the SPEAKER OUT jack of interface.
- 4.) If the interface is to be used to key the transmitter by hand, the key should be connected to the KEY IN jack.
- 5.) The control cable from the computer to the interface.
- 6.) A cable from one of the KEY OUT jacks of the interface to the KEY IN jack of the transceiver. If you are not sure whether your transceiver requires GRID BLOCK or DIRECT KEYING, try one and then the other to see which one works. No damage will be done if the wrong one is selected.

FOR RTTY/ASCII For transmission and reception of RTTY or ASCII signals the following connections are needed:

- 1.) A 12VDC power supply to the POWER jack of the interface.
- 2.) A shielded audio cable from the external speaker jack of the transceiver to the AUDIO IN jack of the interface.
- 3.) If desired, a speaker may be connected to the SPEAKER OUT jack of the interface.
- 4.) The microphone/PTT cable to the transmitter. This cable is supplied with the proper push on the connector on one end and with the other end unwired. This allows the cable to be connected properly for various types of transmitters. For transmitters that have three wire microphone connectors; only three of the microphone cables are needed. AFSK shield should be connected to ground ,PTT should be connected to PTT OUT, and AFSK should be connected to ground at the AUDIO INPUT. The FSK OUT is not connected when used for AFSK operation.

Consult the owner's manual for your transceiver to determine the proper connection of the MICROPHONE JACK. The white wire is the audio line, the red wire is the PTT line, the black wire is the PTT ground line, the bare (shield) wire is the audio ground and the green wire is the DSK line.

- 5.) The control cable from the computer to the interface.
- 6.) If the interface is to drive a TTY current loop. the TTY should be LOOP OUT pin is usually connected to the negative side of your selector magnets.

## INTERNAL CONTROLS

**Caution: Improper adjustments of the internal controls will prevent the interface from functioning.**

The MFJ-1224 has several internal controls and adjustments, as shown in the diagram and described below. The layout is shown in FIGURE 4.

AUDIO OUT GAIN This controls the level of the audio for AFSK output. It is preset at the factory to a reasonable level for most transmitters. Some adjustments may be required if your transmitter requires a higher or lower setting. The best results usually occur with high level from the interface and a low mic gain setting on the transmitter.

**INPUT LEVEL** It is very important that the input is set to the proper level for use with your rig. First tune the radio until no signal is heard, (static only), then set the volume slightly louder than your normal listening level. Turn the input level pot to the point where the static does not cause any flickering of either the PHASE LOCK L.E.D. or the DATA L.E.D.

## OPERATION

### SETTING UP THE MFJ-1224 FOR CW

#### COMPUTER OPERATION

Enter the program into your computer. Follow the directions provided with your software. If using the Kantronics software, it will ask you to "PRESS K" for Kantronics interface or "T" for user terminal unit. You must press "K". If you press "T", your transmitted RTTY will be inverted.

#### TELETYPEWRITER OPERATION

If your radio teletype provides TTL voltages for input and output, you can hook it directly to the MFJ-1224. If not, you will have to use the loop supply circuit and a current loop to the TTL interfaces. (SEE CQ, November 1983, page 49.)

#### CW OPERATION

The MFJ-1224 uses it's Active RTTY filter to give selectivity for Morse signals and is tuned to 2125Hz., one of the RTTY "High Tones"; considerably higher than usual 900-1000Hz. In order to center your CW signal to the CW frequency of the station you are working, some adjustment to your receiver's controls will be necessary.



Figure 3.

## MGJ-1224 CONTROL SETTING

1. Set the front panel switches on the MFJ-1224 as shown in Figure 3.
2. Tune the receiver until you hear only noise.
3. Turn the audio gain up to maximum.
4. Reduce RF gain for a comfortable listening level.
5. Remove the cover of the MFJ-1224.
6. Adjust the internal input level trimpot (next to the NORM/REV switch until the PHASE LOCK L.E.D. and the DATA L.E.D. do not flicker with the audio input (noise). (SEE Figure 4.)

### Transceiver Settings:

SET: Mode to CW  
X-tal to ON  
RIT to OFF  
IF-Shift to ZERO (Center)

Tune in the X-tal Cal as a Morse LO-Tone(900-1000Hz).

Turn ON the RIT.

Please do not touch the VFO.

Transceivers without CW Filters:

Adjust RIT for a higher pitch until the MFJ-1224's PHASE LOCK and DATA L.E.D.s light. Finish the setting under the heading "FINISH."

Transceivers with CW filters, RIT and IF-SHIFT:

Adjust RIT for a higher pitch. Note that as the pitch goes up, the signal begins to move out of the PASSBAND of the CW FILTER (S-Meter starts to fall). Using IF-SHIFT, move the CW FILTER PASSBAND, keeping it over the signal (S-Meter UPSCALE). Continue raising the pitch with the two controls also watching the MFJ-1224'S PHASE LOCK and DATA L.E.D.s. When the L.E.D.s come on carefully adjust the RIT to center the signal in the PASSGAND of the MFJ RTTY FILTER. Carefully adjust the IF-SHIFT to center the signal in the PASSBAND of the transceiver's CW FILTER. Finish under the heading "FINISH."

Transceivers with CW Filters, No If-Shift:

Switch to USB and adjust the RIT, as above, for "Transceivers without CW Filters." You will receive and tune stations in the USB MODE, transmit in the CW mode. Finish the setting under the heading "Finish."



Transceivers with CW Filters, No RIT:

Remove the CW FILTER so that the MORSE may be copied via the SSB FILTER. The MFJ-1224 will provide the selectivity as needed for computer work. Proceed as per "Transceivers without CW Filters."

Finish:

Log the settings of the CONTROL(S) for future reference. Turn the X-TAL CAL OFF.

With the controls of the MFJ-1224 set for CW, all Morse Tuning will be made with the VFO. Your transmit signal will appear on the frequency to which the other station is listening. If the transceiver has a digital display frequency counter, then your actual transmit frequency will be displayed DURING TRANSMIT. Please resist any temptation to adjust the RIT and IF-SHIFT from their "preset" positions.

## CW TUNING

1. Tune the receiver to start at a low pitched tone, then progressively tune for a higher pitch. As you tune higher in pitch, the following occurs:
  - A. The PHASE LOCK L.E.D blinks On and Off with the code.
  - B. Both PHASE LOCK AND DATA L.E.D.s blink On and Off simultaneously.
  - C. Both L.E.D.s remain Off.

**\* IMORTANT \***

**The only correct tuning occurs at 'B' above when the PHASE LOCK and the DATA LED's blink ON and OFF simultaneously with the code.**

When the PHASE LOCK and DATA L.E.D.s are blinking simultaneously with the code and you don't see noise spikes triggering the L.E.D.s, the DEMOND out put will be low (OVDC) for no tone and high (+5VDC) for a tone.

2. Look at your TV screen. The Morse should be followed correctly.

**NOTE:** It may take several lines for the computer to start receiving the Morse correctly.

## SETTING UP THE MFJ-1224 FOR RTTY

Tuning RTTY signals is much easier than tuning CW because reception is not affected so much by noise. Since the signal is always present, noise does not have a chance to affect the reception as in CW where the signal is absent for so much time. If adjustment for CW has already been made, then adjustment for RTTY will probably not be necessary. If

the input level trimpot has not been adjusted, follow the procedure for CW, steps 1 through 6.

**\* CORRECT TUNING \***

**The only correct tuning occurs on RTTY is when the PHASE LOCK is ON continuously and the DATA LED is blinking on and off the most pronounced.**

1. Set the switches on the MFJ-1224 for RTTY, 170 Hz shift, and NORMAL.  
(See Fig. 3A.)
2. Set the computer for 60WPM RTTY. Most RTTY on the Amateur HF bands is set at 60WPM, 170Hz shift.
3. Select an RTTY station on the receiver. The receiver should be LSB. Start tuning from a low pitched tone to a high pitched tone. When the mark frequency of 2125Hz is received, the PHASE LOCK L.E.D. is on.
4. Continue tuning until you see the most pronounced ON and OFF blinking of the DATA L.E.D.

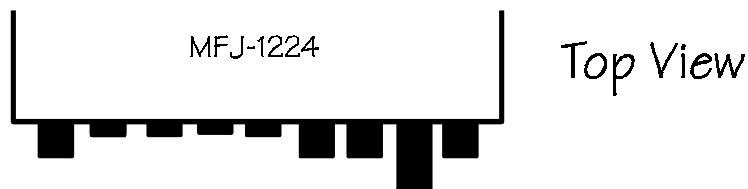


Figure 3A.

### TO CALIBRATE

The MFJ-1224 Computer Interface is adjusted at the factory. However, should re-calibration be necessary, here is the procedure for all frequency related devices in the computer interface.

### CALIBRATION OF THE PPL FREQUENCY

1. Set the MFJ-1224 Computer Interface to receive ASCII at 300 baud, 170Hz shift.
2. Record from AFSK Connector of the GENERAL PURPOSE CONNECTOR, two minutes of "\*" and "U" (Capital U) repeatedly on a tape recorder.  
NOTE: The audio tone control should be set high.

3. Play the tape back into the audio input of the MFJ-1224.
4. Observe the flashing rate of the PHASE LOCK and the DATA L.E.D.s.
5. When the L.E.D. of the PHASE LOCK is on steadily, and the "\*" and "U" is occurring on the screen error free, the PLL frequency is at 2210Hz.
6. Turn the tab of the PLL trimpot until the PHASE LOCK L.E.D is on steadily, and the data is running across the screen correctly. (SEE Figure 4.)

**NOTE:** The DATA L.E.D. light will emit only while data flows. The PHASE LOCK L.E.D. will emit steadily when the PLL frequency is correct. Indiscriminate emission of the PHASE LOCK L.E.D. means that either PLL is off frequency or that the audio level is too high, allowing coping of random noise.

### **CALIBRATION OF THE MARK FREQUENCY**

1. Connect the computer or radioteletype control to the MFJ-1224.
2. All DIP switches in the 1224 should be OFF.
3. Turn the Interface On and set the front panel switches for RTTY, 170Hz shift, and NORMAL polarity.
4. Enter the program into the computer. If using a radioteletype, go down to 8A.
5. If you are using Kantronics Hamsoft™, press "K" when asked to choose "K" if using a Kantronics Interface or T-User Terminal Unit.
6. Connect a frequency counter with a 1:00 probe to the AFSK output pin of the MIC jack.
7. Go to the RTTY section of the program.
8. Put the computer into RTTY TRANSMIT with no characters in the buffer.  
For Hamsoft™, on the VIC-20™ this is CTRL/T. Now go to 9.
- 8A. Put the radioteletype in the Mark condition (Loop Current Flowing).
9. Adjust VR2 trimpot (see Fig 4.) for a frequency of 2125Hz ( $\pm$  2Hz).

**NOTE:** The MARK and SPACE frequencies must be set while the interface is connected to the computer or radioteletype.

### CALIBRATION OF 170Hz SHIFT

1. Put the computer into RTTY RECEIVE. For Hamsoft™ on the VIC-20™.
2. Connect the frequency counter in the same manner as setting the MARK Frequency.
3. The counter should read 2295Hz.
4. If the counter doesn't read 2295Hz, then adjust VR3 (See Fig 4) for a reading of 2295 ( $\pm 2$ Hz).

### CALIBRATION OF THE 850Hz SHIFT

1. Set the MFJ-1224 front panel switches for 850Hz shift.
2. Connect a frequency counter as in Calibration of the MARK Frequencies.
3. The frequency counter should read 2975Hz.
4. If the counter doesn't read 2975Hz, adjust VR4 (See Fig. 4) for a reading of 2975Hz ( $\pm 2$ Hz).

### SOFTWARE CONSIDERATIONS

#### DIP SWITCH

There is an eight switch DIP package on the PC board. These switches are used to configure the inputs and outputs of the GENERAL PURPOSE CONNECTOR to work correctly with your computer and software. The following chart illustrates functions of each switch.

<u>SWITCH</u>	<u>POSITION</u>	<u>FUNCTION</u>	<u>SIGNAL AT PIN</u>
1	ON	CW KEY	LOW-KEY
1	OFF	CW KEY	HIGH-KEY
2	ON	CW ID KEY	HIGH-CW-SHIFT
2	OFF	CW ID TONE	LOW-CW-SHIFT
3	ON	KANTRONICS PTT	N/A
3	OFF	GENERAL PTT	N/A
4	ON	RTTY INPUT	LOW MARK
4	OFF	RTTY INPUT	HIGH MARK

5	ON	GENERAL PTT	N/A
5	OFF	KANTRONICS PTT	N/A
6	ON	PTT INPUT	HIGH PTT
6	OFF	PTT INPUT	LOW INPUT
7	ON	CW DEMOD OUTPUT	LOW TONE
7	OFF	CW DEMOD OUTPUT	HIGH TONE
8	ON	RTTY DEMOD OUTPUT	LOW TONE
8	OFF	RTTY DEMOD OUTPUT	HIGH TONE

## MFJ-1223 RS-232 INTERFACE

The MFJ-1223 is used to connect the MFJ-1224 ports. Since the MF-1224 to uses TTL voltage (+ 5VDC) and RS-232 ports are  $\pm$  12VDC, an interface becomes necessary to interconnect. Our MFJ-1223 allows the use of the port.

### I. VIC 20™

#### A. Used with the MFJ-1252 or the MFJ-1264 Software.

**NOTE:** The connector cable supplied with the software has the proper connections for the GENERAL CONNECTION PORT and the VIC USERS PORT. The DIP switches are set at the factory for this computer, software, and cable.

<u>MFJ-1224 General Connector</u>	<u>User Port</u>	<u>MFJ-1224 DIP Switches</u>	
RTTY DEMOD	B, C, L	1	ON
CW DEMOD	B, C, L	2	ON
GND	N	3	ON
CW ID	H	4	OFF
RTTY	J, M	5	OFF
PTT (IN)	NOT USED	6	OFF
CW KEY	K	7	ON
+5VDC	NOT USED	8	OFF

#### B. Using Kantronics Hamsoft™ and Hamtext™ software.

**NOTE:** The connector cable supplied with the software will connect directly between the K CONNECTOR and the USERS PORT. The switches will have to be set for use with this software.

<u>MFJ-1224 "K" Connector</u>	<u>Control Port</u>	<u>MFJ-1224 DIP Switches</u>	
DEMOD	6	1	OFF
GND	8	2	OFF
CW KEY	3	3	ON
RTTY	2	4	OFF
CW ID	1	5	OFF
		6	OFF
		7	OFF
		8	OFF

### C. Using RAK Electronics RTTY / CWII Software

**NOTE:** The DIP switches must be set for this software as follows:

<u>MFJ-1224 General Connector</u>	<u>User Port</u>	<u>MFJ-1224 DIP Switches</u>	
RTTY DEMOD	B, C,	1	ON
CW DEMOD	D	2	ON
GND	1	3	OFF
PTT	J	4	OFF
RTTY	M	5	ON
PTT (IN)	NOT USED	6	OFF
CW KEY	K	7	ON
+5VDC	NOT USED	8	OFF

## II. C-64™

### A. Using the MFJ-1265 or MFJ 1253 Software.

**NOTE:** The connector cable supplied with the software has the proper connections for the GENERAL CONNECTION PORT and the C-64™ USERS PORT. The DIP switches are set at the factory for this computer, software, and cable.

<u>MFJ-1224 General Connector</u>	<u>User Port</u>	<u>MFJ-1224 DIP Switches</u>	
RTTY DEMOD	B, C, L	1	ON
CW DEMOD	B, C, L	2	ON
GND	N	3	ON
CW ID	H	4	OFF
RTTY	J, M	5	OFF
PTT (IN)	NOT USED	6	OFF
CW KEY	K	7	ON
+5VDC	NOT USED	8	OFF

---

### B. Using Kantronics Hamtext™ Software

**NOTE:** The DIP switches must be set for this software as follows:

<u>MFJ-1224 "K" Connector</u>	<u>Control Port</u>	<u>MFJ-1224 DIP Switches</u>	
DEMOM	6	1	OFF
GND	8	2	OFF
CW KEY	3	3	ON
RTTY	2	4	OFF
CW ID	1	5	OFF
		6	OFF
		7	OFF
		8	OFF

---

### C. Using the AEA-SOFT and MBA-TEXT, VERSION 1.2 Software

**NOTE:** The DIP switches must be set for this software as follows:

<u>MFJ-1224 General Connector</u>	<u>User Port</u>	<u>MFJ-1224 DIP Switches</u>	
RTTY DEMOD	J	1	ON
CW DEMOD	J	2	ON
GND	1, 12, A, N	3	OFF
CW ID	NOT USED	4	ON
RTTY	F	5	ON
PTT (IN)	E	6	OFF
CW KEY	H	7	OFF
+5VDC	NOT USED	8	OFF

---

## III. APPLE™

### A. Using the C. H. GALFO Software

**NOTE:** The DIP switches must be set for this software as follows:

<u>MFJ-1224 General Connector</u>	<u>Apple Game Port</u>	<u>MFJ-1224 DIP Switches</u>	
RTTY DEMOD	2	1	ON
CW DEMOD	4	2	ON
GND	8	3	OFF
CW ID	NOT USED	4	OFF
RTTY	15	5	ON
PTT (IN)	14	6	ON
CW KEY	13	7	ON

+5VDC NOT USED 8 ON

B. Using Kantronics Hamsoft™ Software

**NOTE:** The DIP switches must be set for this software as follows:

<u>MFJ-1224 "K" Connector</u>	<u>Apple Game Port</u>	<u>MFJ-1224 DIP Switches</u>	
DEMODO	3	1	OFF
GND	8	2	OFF
CW KEY	14	3	ON
RTTY	12	4	OFF
CW ID	13	5	OFF
		6	OFF
		7	OFF
		8	OFF

C. Using the AEA-Software

**NOTE:** The DIP switches must be set for this software as follows:

<u>MFJ-1224 General Connector</u>	<u>Apple Game Port</u>	<u>MFJ-1224 DIP Switches</u>	
RTTY DEMOD	2 (PBO)	1	ON
CW DEMOD	4 (PBO)	2	ON
GND	8 GND	3	OFF
CW ID	NOT USED	4	OFF
RTTY	15 (ANO)	5	ON
PTT	14 (AN1)	6	OFF
CW KEY	13 (AN2)	7	OFF
+5VDC	NOT USED	8	ON

IV. TRS-80 COLOR COMPUTER™

A. Using the Kantronics Software.

**NOTE:** The DIP switches must be set this software as follows:

<u>MFJ-1224 "K" Connector</u>	<u>Hamsoft™ Pac</u>	<u>MFJ-1224 DIP Switches</u>	
DEMODO	DEMODO	1	OFF
GND	GND	2	OFF
CW KEY	CW KEY	3	ON
RTTY	RTTY	4	OFF
CW ID	CW ID	5	OFF
		6	OFF
		7	OFF
		8	OFF



## B. Using Clay Abrams Software.

**NOTE:** The DIP switches must be set for this software as follows:


<u>MFJ-1224 General Connector</u>	<u>Serial I/O (P2)</u>	<u>MFJ-1224 DIP Switches</u>	
RTTY DEMOD	PIN 2	1	OFF
CW DEMOD	PIN 2	2	ON
GND	PIN 3	3	OFF
CW ID	NOT USED	4	OFF
RTTY	PIN 4	5	OFF
PTT (IN)	NOT USED	6	OFF
CW KEY	PIN 4	7	OFF
+5VDC	NOT USED	8	ON

- NOTES:**
1. A TTL TO RS-232 CONVERTER MUST BE USED WITH THE CLAY ABRAMS SOFTWARE. **(We recommend the MFJ-1223.)**
  2. PLACE A 1uf ELECTRONIC CAPACITOR FROM PIN 2 (DATA IN) OF THE SERIAL I/O TO GROUND.

<sup>TM</sup>Hamsoft and <sup>TM</sup>Hamtext are trademarks of Kantronics, Inc.

<sup>TM</sup>VIC-20 is a trademark of Commodore Business Machines, Inc.

<sup>TM</sup>TRS-80 Color Compute is a trademark of Tandy Corporation.

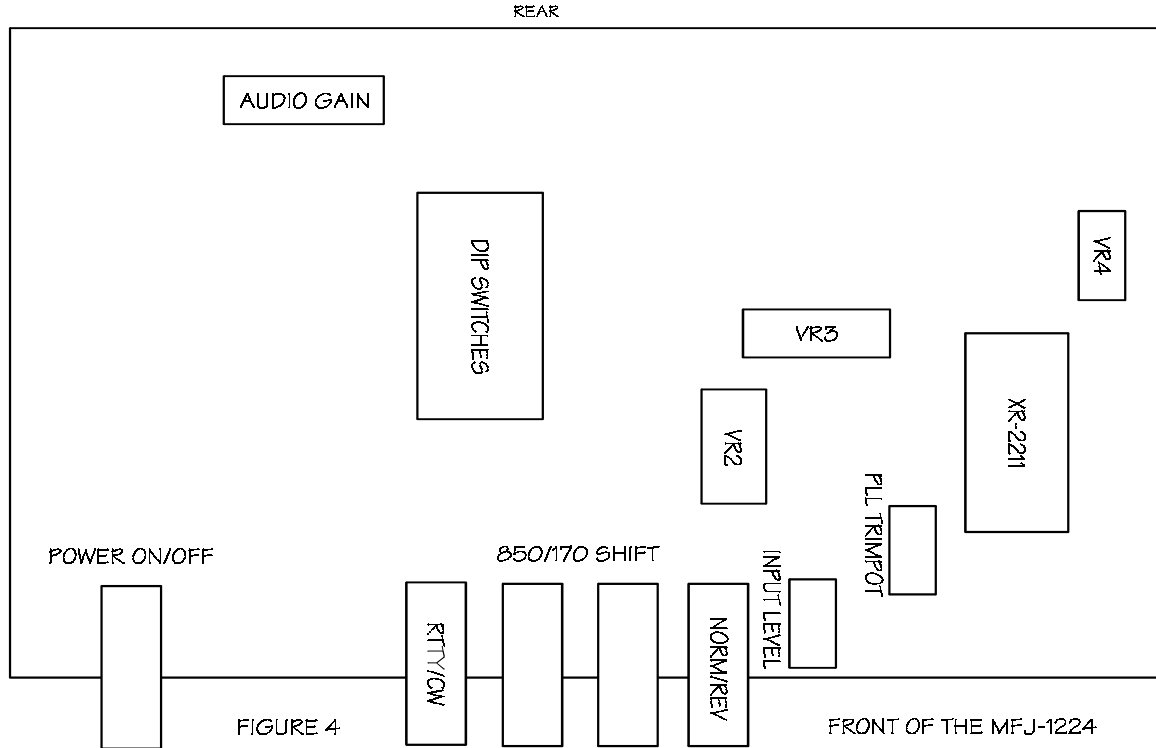

### TECHNICAL ASSISTANCE

If you have any problem with this unit first check the appropriate section of this manual. If the manual does not reference your problem or your problem is not solved by reading the manual, you may call *MFJ Technical Service* at **601-323-0549** or the *MFJ Factory* at **601-323-5869**. You will be best helped if you have your unit, manual and all information on your station handy so you can answer any questions the technicians may ask.

You can also send questions by mail to MFJ Enterprises, Inc., 300 Industrial Park Road, Starkville, MS 39759; by Facsimile (FAX) to 601-323-6551; or by email to [techinfo@mfjenterprises.com](mailto:techinfo@mfjenterprises.com). Send a complete description of your problem, an explanation of exactly how you are using your unit, and a complete description of your station.