

Nokia Customer Care

Service Manual

RM-78 (Nokia 6280)

Mobile Terminal

Part No: 9243566 (Issue 1)

COMPANY CONFIDENTIAL

NOKIA

Amendment Record Sheet

Amendment No	Date	Inserted By	Comments
Original issue	10/2005	G Rudh	

Copyright

Copyright © 2005 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People, and Nokia X and Y are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is,,. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region.

IMPORTANT

This document is intended for use by qualified service personnel only.

Warnings and cautions

Warnings

- IF THE DEVICE CAN BE INSTALLED IN A VEHICLE, CARE MUST BE TAKEN ON INSTALLATION IN VEHICLES FITTED WITH ELECTRONIC ENGINE MANAGEMENT SYSTEMS AND ANTI-SKID BRAKING SYSTEMS. UNDER CERTAIN FAULT CONDITIONS, EMITTED RF ENERGY CAN AFFECT THEIR OPERATION. IF NECESSARY, CONSULT THE VEHICLE DEALER/MANUFACTURER TO DETERMINE THE IMMUNITY OF VEHICLE ELECTRONIC SYSTEMS TO RF ENERGY.
- THE PRODUCT MUST NOT BE OPERATED IN AREAS LIKELY TO CONTAIN POTENTIALLY EXPLOSIVE ATMOSPHERES, FOR EXAMPLE, PETROL STATIONS (SERVICE STATIONS), BLASTING AREAS ETC.
- OPERATION OF ANY RADIO TRANSMITTING EQUIPMENT, INCLUDING CELLULAR TELEPHONES, MAY INTERFERE WITH THE FUNCTIONALITY OF INADEQUATELY PROTECTED MEDICAL DEVICES. CONSULT A PHYSICIAN OR THE MANUFACTURER OF THE MEDICAL DEVICE IF YOU HAVE ANY QUESTIONS. OTHER ELECTRONIC EQUIPMENT MAY ALSO BE SUBJECT TO INTERFERENCE.
- BEFORE MAKING ANY TEST CONNECTIONS, MAKE SURE YOU HAVE SWITCHED OFF ALL EQUIPMENT.

Cautions

- Servicing and alignment must be undertaken by qualified personnel only.
- Ensure all work is carried out at an anti-static workstation and that an anti-static wrist strap is worn.
- Ensure solder, wire, or foreign matter does not enter the telephone as damage may result.
- Use only approved components as specified in the parts list.
- Ensure all components, modules, screws and insulators are correctly re-fitted after servicing and alignment.
- Ensure all cables and wires are repositioned correctly.
- Never test a mobile phone WCDMA transmitter with full Tx power, if there is no possibility to perform the measurements in a good performance RF-shielded room. Even low power WCDMA transmitters may disturb nearby WCDMA networks and cause problems to 3G cellular phone communication in a wide area.
- During testing never activate the GSM or WCDMA transmitter without a proper antenna load, otherwise GSM or WCDMA PA may be damaged.

For your safety

QUALIFIED SERVICE

Only qualified personnel may install or repair phone equipment.

ACCESSORIES AND BATTERIES

Use only approved accessories and batteries. Do not connect incompatible products.

CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

Care and maintenance

This product is of superior design and craftsmanship and should be treated with care. The suggestions below will help you to fulfil any warranty obligations and to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty, dirty areas. Its moving parts can be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When it warms up (to its normal temperature), moisture can form inside, which may damage electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Do not paint the phone. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications or attachments could damage the phone and may violate regulations governing radio devices.

All of the above suggestions apply equally to the product, battery, charger or any accessory.

ESD protection

Nokia requires that service points have sufficient ESD protection (against static electricity) when servicing the phone.

Any product of which the covers are removed must be handled with ESD protection. The SIM card can be replaced without ESD protection if the product is otherwise ready for use.

To replace the covers ESD protection must be applied.

All electronic parts of the product are susceptible to ESD. Resistors, too, can be damaged by static electricity discharge.

All ESD sensitive parts must be packed in metallized protective bags during shipping and handling outside any ESD Protected Area (EPA).

Every repair action involving opening the product or handling the product components must be done under ESD protection.

ESD protected spare part packages **MUST NOT** be opened/closed out of an ESD Protected Area.

For more information and local requirements about ESD protection and ESD Protected Area, contact your local Nokia After Market Services representative.

Battery information

Note: A new battery's full performance is achieved only after two or three complete charge and discharge cycles!

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, it is time to buy a new battery.

Use only batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer. Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime. If left unused a fully charged battery will discharge itself over time.

Temperature extremes can affect the ability of your battery to charge.

For good operation times with Ni-Cd/NiMh batteries, discharge the battery from time to time by leaving the product switched on until it turns itself off (or by using the battery discharge facility of any approved accessory available for the product). Do not attempt to discharge the battery by any other means.

Use the battery only for its intended purpose.

Never use any charger or battery which is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes direct connection of the + and - terminals of the battery (metal strips on the battery) for example when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Batteries' performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire!

Dispose of batteries according to local regulations (e.g. recycling). Do not dispose as household waste.

Company Policy

Our policy is of continuous development; details of all technical modifications will be included with service bulletins.

While every endeavour has been made to ensure the accuracy of this document, some errors may exist. If any errors are found by the reader, NOKIA MOBILE PHONES Business Group should be notified in writing/e-mail.

Please state:

- Title of the Document + Issue Number/Date of publication
- Latest Amendment Number (if applicable)
- Page(s) and/or Figure(s) in error

Please send to:

NOKIA CORPORATION

Nokia Mobile Phones Business Group

Nokia Customer Care

PO Box 86

FIN-24101 SALO

Finland

E-mail: Service.Manuals@nokia.com

(This page left intentionally blank.)

Nokia 6280 Service Manual Structure

- 1 General information
- 2 Parts and layouts
- 3 Service Software Instructions
- 4 Service Tools and Service Concepts
- 5 Disassembly and reassembly instructions
- 6 BB Troubleshooting and Manual Tuning Guide
- 7 Camera Module Troubleshooting
- 8 RF troubleshooting
- 9 System Module
- 10 Schematics
- Glossary

(This page left intentionally blank.)

Nokia Customer Care

1 — General information

(This page left intentionally blank.)

Table of Contents

Product selection.....	1-5
Phone features.....	1-5
Mobile enhancements.....	1-6
Technical specifications.....	1-8
General specifications.....	1-8
Main RF characteristics for triple GSM band and WCDMA band phones (Europe).....	1-8
Battery endurance.....	1-9
Environmental conditions.....	1-9

List of Tables

Table 1 Audio.....	1-6
Table 2 Car.....	1-7
Table 3 Data.....	1-7
Table 4 Imaging.....	1-7
Table 5 Messaging.....	1-7
Table 6 Power.....	1-8

List of Figures

Figure 1 RM-78 product picture.....	1-5
-------------------------------------	-----

(This page left intentionally blank.)

■ Product selection

Nokia RM-78 is a WCDMA/GSM dual mode phone, supporting WCDMA 2100 (UMTS) and EGSM 900/ 1800/1900 bands.



Figure 1 RM-78 product picture

■ Phone features

Display and keypad

- Integrated Flash LED
- Large high resolution QVGA color display (320x240 pixels) with 262k colors 2.2" (33.48mm x 44.64mm) display
- 2MPix camera with integrated flash and mirror, VGA camera for Video call
- Landscape mode for image capturing
- 6 MB flash for user data and SD Mini card (hot swap)
- 5-way scroll, soft keys, send key, end key and center select
- PoC (Push To Talk) key on the side
- Side volume key with camera zoom functionality
- Dedicated key for camera application

Bearers and transport

- WCDMA 2100 and GSM Tri-band 900/1800/1900
- EDGE release 99: MSC 10 (RX+TX 4+1, 3+2)

- GPRS: MSC 10 (RX+TX: 4+1, 3+2, class B & C)
- HSCSD, CSD
- Speech codec support for FR, EFR, AMR, WB-AMR

Software platform

- Nokia series 40

Connectivity

- USB through Pop-Port™ connector
- Bluetooth 1.2
- IrDA
- 2 mm charger plug

User Interface

- SMS, MMS
- E-mail client with support for attachment
- WAP 2.0, XHTML browser over HTTP/TCP/IP stack
- Video Call and Video Ringtones
- Video streaming and recording
- Video, MP3, AAC, eAAC+ and 64 poly ringing tones
- Push to Talk
- Visual Radio
- Logs (last calls , timers and history list)
- Java & APIs: MIDP2.0, JSR139 (CLDC1.1), JSR75 (file connection and PIM), JSR135, JSR184 (3D), JSR82 (BT)
- Stereo Music Player supporting MP3, MP4, eAAC+, AAC
- Data Transfer

Sales package

- Transceiver RM-78
- 64 Mbyte mini SD card
- Classic Stereo Headset HS-23
- CA-53 data-cable
- BP-6M Li-Ion 970 mAh Battery
- AC-4 Charger (2 mm plug)
- Booklet - Users manual
- CD-ROM

■ Mobile enhancements

Table 1 Audio

Type	Description
HDB-4	Boom headset
HDS-3	Stereo headset

Type	Description
HDW-3	Wireless headset
HS-3	Fashion headset
HS-4W	Wireless boom headset
HS-5	Mono headset
HS-8	Activity headset
HS-13	Wireless image headset
HS-21W	Wireless clip-on headset
HS-23	Classic stereo headset
HS-37W	Wireless headset
LPS-4	Loopset
MD-1	Music stand

Table 2 Car

Type	Description
BHF-3	Headrest handsfree
CK-1W	Wireless car kit
CK-7W	Advanced car kit (sales pack) (EURO 1)
CK-10	Car kit
CR-43	Mobile holder
HF-3	Basic handsfree
HF-6W	Plug-in car handsfree

Table 3 Data

Type	Description
CA-53	Connectivity cable
	PC suite

Table 4 Imaging

Type	Description
PT-6	Nokia remote camera

Table 5 Messaging

Type	Description
SU-1B	Nokia digital pen (Eur/US)

Table 6 Power

Type	Description
AC-3	Compact charger
AC-4	Travel charger
AC-44	Charger adapter
BP-6M	Battery Li-on
DC-4	Mobile charger

■ Technical specifications

General specifications

Unit	Dimension (mm)	Weight (g)	Volume (cc)
Transceiver with BP-6M 970mAh Li-Ion battery pack	100x46x21	115	91

Main RF characteristics for triple GSM band and WCDMA band phones (Europe)

Parameter	Unit
Cellular system	GSM/EGSM900,GSM1800/1900 WCDMA2100
Rx frequency band	EGSM900: 925 - 935 MHz
	GSM900: 935 - 960 MHz
	GSM1800: 1805 - 1880 MHz
	GSM1900: 1930 - 1990 MHz
	WCDMA: 2110- 2170 MHz
Tx frequency band	EGSM900: 880 - 890 MHz
	GSM900: 890 - 915 MHz
	GSM1800: 1710 - 1785 MHz
	GSM1900: 1850 - 1910 MHz
	WCDMA: 1920 - 1980 MHz
Output power	GSM900: +5 ... +32.5 dBm
	GSM1800: +0 ... +30 dBm
	GSM1900: +0 ... +30 dBm
	WCDMA2100: 0 ...+24 dBm

Parameter	Unit
Number of RF channels	GSM900: 125
	GSM1800: 375
	GSM1900: 300
	WCDMA2100: 8
Channel spacing	GSM 200 KHz WCDMA 4.8 MHz
Number of Tx power levels	GSM900: 15
	GSM1800: 16
	GSM1900: 16
	WCDMA2100: 12

Battery endurance

Nokia measurements of operation times

Talk time	
Battery: BP-6M 970mAh	In GSM Up to 3 hours in GSM and up to 2.5 hours in WCDMA

Standby time	
Battery: BP-6M 970mAh	Up to 250 hours in GSM and 200 in WCDMA

Note: Variation in operation times will occur depending on SIM card, network settings and usage. Talk time is increased by up to 30% if half rate is active and reduced by 5% if enhanced full rate is active.

Environmental conditions

Environmental condition	Ambient temperature	Notes
Normal operation	15 °C ... +55 °C	Specifications fulfilled
Reduced performance	55 °C ... +70 °C	Operational only for short periods
Intermittent or no operation	-40 °C ... -15 °C and +70 °C ... +85 °C	Operation not guaranteed but an attempt to operate will not damage the phone
No operation or storage	<-40 °C and >+85 °C	No storage. An attempt to operate may cause permanent damage
Charging allowed	-15 °C ... +55 °C	
Long term storage conditions	0 °C ... +85 °C	

Environmental condition	Ambient temperature	Notes
Humidity and water resistance		Relative humidity range is 5 to 95%. Condensed or dripping water may cause intermittent malfunctions. Protection against dripping water has to be implemented in (enclosure) mechanics. Continuous dampness will cause permanent damage to the module.

Nokia Customer Care

2 — Parts and layouts

(This page left intentionally blank.)

Table of Contents

Exploded view.....	2-5
Mechanical parts list.....	2-6
Spare parts overview.....	2-8
SWAP phones.....	2-9
Component parts list.....	2-9
Component layouts.....	2-20

List of Tables


Table 7 Mechanical parts list.....	2-6
Table 8 SWAP phones for RM-78.....	2-9
Table 9 Component parts list (Build 1mda_05a).....	2-9

List of Figures

Figure 2 Exploded view.....	2-5
Figure 3 Spare parts overview.....	2-8
Figure 4 Component layout, RM-78, 1mda_05a, bottom.....	2-21
Figure 5 Component layout, RM-78, 1mda_05a top.....	2-21

(This page left intentionally blank.)

■ Exploded view

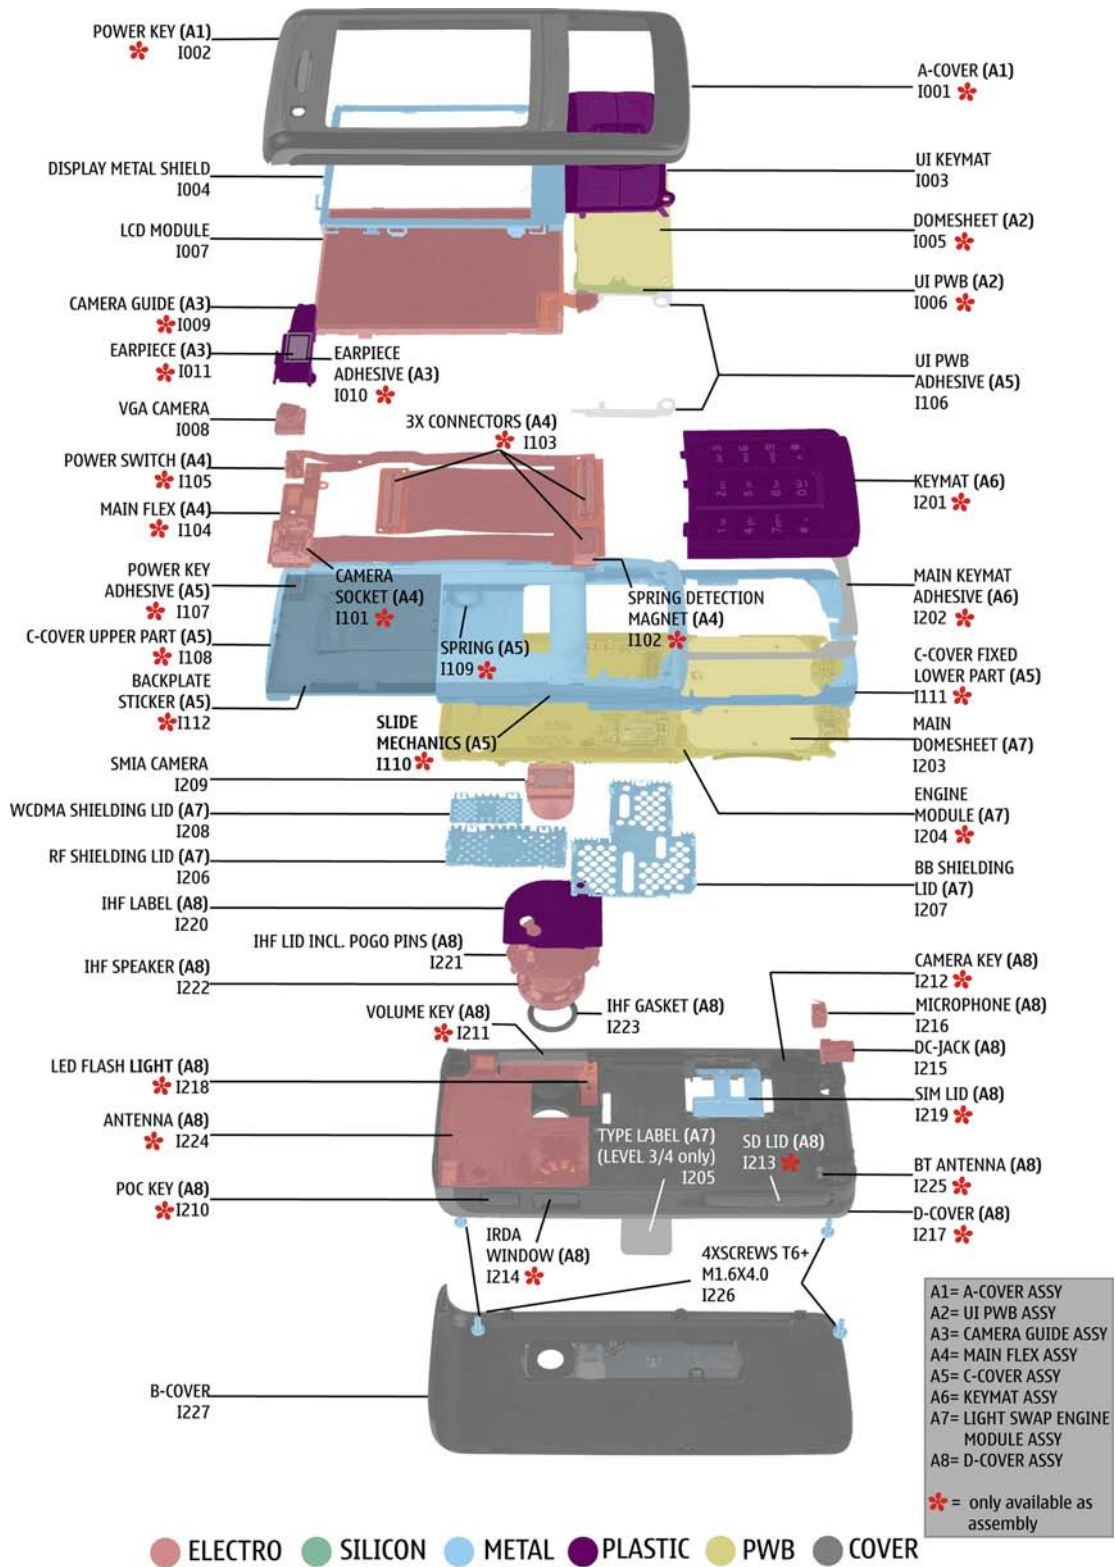

A1= A-COVER ASSY
A2= UI PWB ASSY
A3= CAMERA GUIDE ASSY
A4= MAIN FLEX ASSY
A5= C-COVER ASSY
A6= KEYMAT ASSY
A7= LIGHT SWAP ENGINE MODULE ASSY
A8= D-COVER ASSY
* = only available as assembly

● ELECTRO ● SILICON ● METAL ● PLASTIC ● PWB ● COVER

Figure 2 Exploded view

■ Mechanical parts list

Table 7 Mechanical parts list

ITEM/CIRCUIT REF.	QTY	PART NAME
* = not available as spare part		
	1	A-cover assembly
I001*	1	A-cover
I002*	1	Powerkey
I003	1	UI Keymat
I004	1	Display metal shield
	1	UI PWB assembly
I005*	1	Domesheet
I006*	1	UI PWB
I007	1	LCD module
I008	1	VGA camera
	1	Camera guide assembly
I009*	1	Camera guide
I010*	1	Earpiece adhesive
I011*	1	Earpiece
	1	Main flex assembly
I101*	1	Camera socket
I102*	1	Spring detection magnet
I103*	3	Connector
I104*	1	Main flex
I105*	1	Power switch
	1	C-cover assembly
I106	1	UI PWB adhesive
I107*	1	Power key adhesive
I108*	1	C-cover upper part
I109*	1	Spring
I110*	1	Slide mechanics
I111*	1	C-cover fixed lower part
I112*	1	Backplate sticker
	1	Keymat assembly


ITEM/CIRCUIT REF.	QTY	PART NAME
I201*	1	Keymat
I202*	1	Main keymat adhesive
	1	Light SWAP engine module assembly
I203	1	Main domesheet
I204*	1	Engine module
I205	1	Type label
I206	1	RF shielding lid
I207	1	BB shielding lid
I208	1	WCDMA shielding lid
I209	1	SMIA camera
	1	D-cover assembly
I210*	1	POC key
I211*	1	Volume key
I212*	1	Camera key
I213*	1	SD lid
I214*	1	IRDA window
I215	1	DC-jack
I216	1	Microphone
I217*	1	D-cover
I218*	1	LED flash light
I219*	1	SIM lid
I220	1	IHF label
I221	1	IHF lid including Pogopins
I222	1	IHF speaker
I223	1	IHF gasket
I224*	1	Antenna
I225*	1	BT Antenna
I226	4	Screws T6+
I227	1	B-cover

■ Spare parts overview


A1 = A-COVER ASSY




A2 = UI PWB ASSY

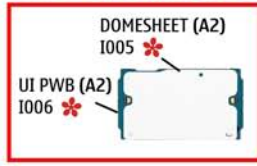


A3 = CAMERA GUIDE ASSY

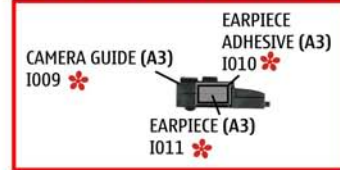


A4 = MAIN FLEX ASSY

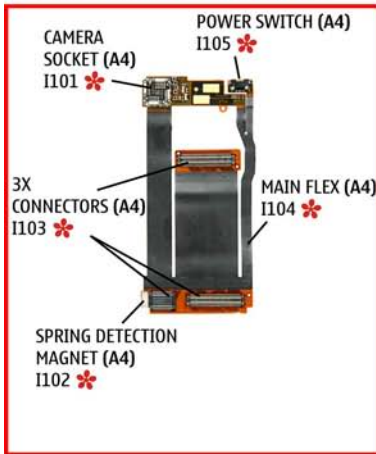

A5 = C-COVER ASSY

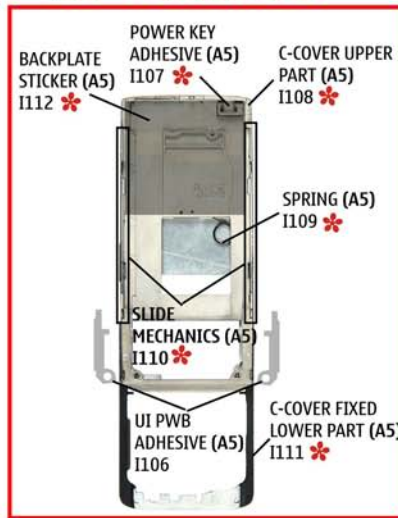

A7 = LIGHT SWAP ENGINE MODULE ASSY

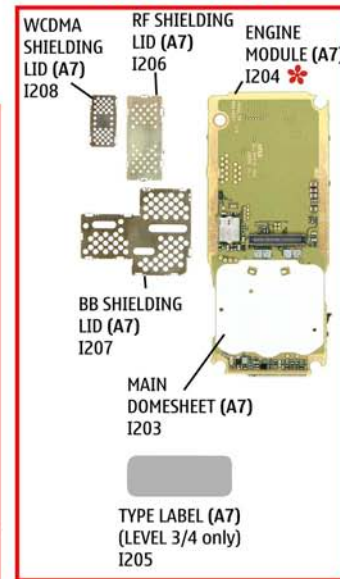


A6 = KEYMAT ASSY



4XSCREWS T6+
M1.6X4.0
I226



A8 = D-COVER ASSY

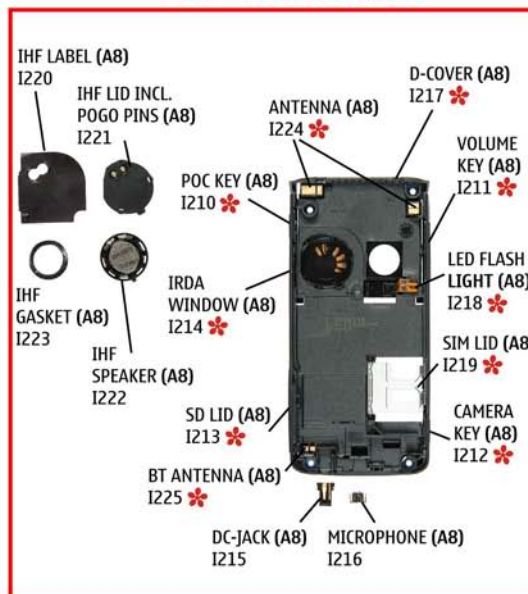

A1= A-COVER ASSY
A2= UI PWB ASSY
A3= CAMERA GUIDE ASSY
A4= MAIN FLEX ASSY
A5= C-COVER ASSY
A6= KEYMAT ASSY
A7= LIGHT SWAP ENGINE
MODULE ASSY
A8= D-COVER ASSY
* = only available as
assembly

Figure 3 Spare parts overview

■ **SWAP phones**

Table 8 SWAP phones for RM-78

SWAP phones for RM-78
N6280 RM-78 SWAP ENGINE C.BLACK E&A
N6280 RM-78 SWAP ENGINE C.BLACK SA
N6280 RM-78 SWAP ENGINE C.BLACK FR
N6280 RM-78 SWAP ENGINE C.BLACK TR
N6280 RM-78 SWAP ENGINE C.BLACK RU
N6280 RM-78 SWAP ENGINE C.BLACK UA
N6280 RM-78 SWAP ENGINE C.BLACK HE
N6280 RM-78 SWAP ENGINE C.BLACK AR
N6280 RM-78 SWAP ENGINE C.BLACK GR
N6280 RM-78 SWAP ENGINE G.GREY E&A
N6280 RM-78 SWAP ENGINE G.GREY SA
N6280 RM-78 SWAP ENGINE G.GREY FR
N6280 RM-78 SWAP ENGINE G.GREY TR
N6280 RM-78 SWAP ENGINE G.GREY RU
N6280 RM-78 SWAP ENGINE G.GREY UA
N6280 RM-78 SWAP ENGINE G.GREY HE
N6280 RM-78 SWAP ENGINE G.GREY AR
N6280 RM-78 SWAP ENGINE G.GREY GR

■ **Component parts list**

Table 9 Component parts list (Build 1mda_05a)

Item	Name	PWB Side	XY.	Value	
B2200	CRYSTAL 32.768KHZ +/-30PPM 12.5PF	T	J6	32.768K Hz	-
C1000	CHIPCAP X5R 1U K 6V3 0603	T	N8	1u	6V3
C1001	CHIPCAP X5R 100N K 10V 0402	T	N8	100n	10V
C1008	CHIPCAP X5R 1U K 6V3 0603	T	M5	1u	6V3
C1009	CHIPCAP NP0 27P J 50V 0402	T	O8	27p	50V
C1010	CHIPCAP NP0 27P J 50V 0402	T	O8	27p	50V
C1060	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	N8	2x1u	6V3
C2000	CHIPCAP NP0 27P J 50V 0402	B	A3	27p	50V

Item	Name	PWB Side	XY.	Value	
C2001	CHIPCAP X5R 1U K 25V 0603	B	B2	1u	25V
C2002	CHIPCAP X7R 1N0 K 50V 0402	B	B5	1n0	50V
C2003	CHIPCAP FEEDTHRU 100N M 25V 0805	B	B2	100n	25V
C2004	CHIPCAP X5R 4U7 K 6.3V 0603	B	B4	4u7	6V3
C2005	CHIPCAP X7R 33N K 10V 0402	B	A4	33n	10V
C2007	CHIPCAP X7R 10N K 16V 0402	B	A7	10	16V
C2008	CHIPCAP X7R 10N K 16V 0402	B	A7	10	16V
C2009	CHIPCAP X7R 10N K 16V 0402	B	A6	10	16V
C2010	CHIPCAP X7R 10N K 16V 0402	B	A6	10	16V
C2011	CHIPCAP NP0 10P J 50V 0402	B	B7	10p	50V
C2012	CHIPCAP NP0 10P J 50V 0402	B	B7	10p	50V
C2013	CHIPCAP NP0 10P J 50V 0402	B	B6	10p	50V
C2014	CHIPCAP NP0 10P J 50V 0402	B	B6	10p	50V
C2015	CHIPCAP NP0 270P J 50V 0402	B	A3	270p	50V
C2016	CHIPCAP X7R 33N K 10V 0402	B	A4	33n	10V
C2070	CHIPCAP NP0 27P J 50V 0402	T	M6	27p	50V
C2071	CHIPCAP NP0 27P J 50V 0402	T	E6	27p	50V
C2100	CHIPCAP X7R 33N K 10V 0402	T	I6	33n	10V
C2101	CHIPCAP X7R 33N K 10V 0402	T	H6	33n	10V
C2102	CHIPCAP X5R 4U7 K 6.3V 0603	T	I6	4u7	6V3
C2105	CHIPCAP X7R 1N0 K 50V 0402	T	I8	1n0	50V
C2106	CHIPCAP X7R 1N0 K 50V 0402	T	I8	1n0	50V
C2107	CHIPCAP X7R 1N0 K 50V 0402	T	I8	1n0	50V
C2108	CHIPCAP X7R 1N0 K 50V 0402	T	C6	1n0	50V
C2109	CHIPCAP X7R 1N0 K 50V 0402	T	I8	1n0	50V
C2110	CHIPCAP X7R 1N0 K 50V 0402	T	I8	1n0	50V
C2200	CHIPCAP X5R 1U K 6V3 0402	T	I7	1u	6V3
C2201	CHIPCAP X5R 1U K 6V3 0603	T	K6	1u	6V3
C2202	CHIPCAP X7R 1N0 K 50V 0402	T	J6	1n0	50V
C2203	CHIPCAP X7R 1N0 K 50V 0402	T	J6	1n0	50V
C2204	CHIPCAP X7R 1N0 K 50V 0402	T	I6	1n0	50V
C2205	CHIPCAP X7R 1N0 K 50V 0402	T	I6	1n0	50V
C2206	CHIPCAP X7R 1N0 K 50V 0402	T	I6	1n0	50V
C2207	CHIPCAP X7R 1N0 K 50V 0402	T	K6	1n0	50V

Item	Name	PWB Side	XY.	Value	
C2208	CHIPCAP NP0 27P J 50V 0402	T	J6	27p	50V
C2209	CHIPCAP NP0 22P J 50V 0402	T	K6	22p	50V
C2210	CHIPCAP X5R 1U K 16V 0603	T	K8	1u	16V
C2211	CHIPCAP X5R 4U7 K 10V 0805	T	J8	4u7	10V
C2212	CHIPCAP X5R 1U K 6V3 0603	T	K7	1u	6V3
C2215	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	K8	2x1u	6V3
C2217	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	K5	2x1u	6V3
C2220	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	J8	2x1u	6V3
C2221	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	J8	2x1u	6V3
C2222	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	K6	2x1u	6V3
C2223	CHIPCAP X7R 10N K 16V 0402	T	I7	10	16V
C2224	CHIPCAP X7R 10N K 16V 0402	T	I7	10	16V
C2225	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	K8	2x1u	6V3
C2226	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	K8	2x1u	6V3
C2229	CHIPCAP NP0 22P J 50V 0402	T	J6	22p	50V
C2230	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	K7	2x1u	6V3
C2231	CHIPCAP X5R 10U M 6V3 0805	T	I7	10u	6V3
C2232	CHIPCAP NP0 27P J 50V 0402	T	K7	27p	50V
C2233	CHIPCAP NP0 56P J 50V 0402	T	K7	56p	50V
C2236	CHIPCAP X7R 1N0 K 50V 0402	T	K7	1n0	50V
C2300	CHIPCAP X7R 10N K 16V 0402	T	H2	10	16V
C2301	CHIPCAP X5R 22U M 6V3 0805	T	H1	22u	6V3
C2302	CHIPCAP X5R 22U M 6V3 0805	T	H2	22u	6V3
C2303	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	I5	2x1u	6V3
C2304	CHIPCAP X7R 10N K 16V 0402	T	G4	10	16V
C2305	CHIPCAP NP0 27P J 50V 0402	T	G4	27p	50V
C2307	CHIP ARRAY X5R 2X1U (2x1U2) K 6V3 0405	T	I5	2x1u	6V3
C2309	CHIPCAP X5R 22U M 6V3 0805	T	H2	22u	6V3
C2313	CHIPCAP X5R 1U K 6V3 0603	T	I4	1u	6V3
C2405	CHIPCAP X5R 1U K 6V3 0603	B	J8	1u	6V3
C2406	CHIPCAP X5R 1U K 6V3 0603	B	J8	1u	6V3
C2430	CHIPCAP NP0 27P J 50V 0402	B	L2	27p	50V
C2500	CHIPCAP X5R 4U7 K 6.3V 0603	T	F6	4u7	6V3
C2501	CHIPCAP X5R 100N M 16V 0402	T	E6	100n	16V

Item	Name	PWB Side	XY.	Value	
C2502	CHIPCAP NP0 27P J 50V 0402	T	E6	27p	50V
C2503	CHIPCAP X5R 22U M 6V3 0805	T	G7	22u	6V3
C2504	CHIPCAP X5R 1U K 25V 0603	T	F6	1u	25V
C2530	CHIPCAP X5R 22U M 6V3 0805	B	M8	22u	6V3
C2531	CHIPCAP X5R 22U M 6V3 0805	B	M8	22u	6V3
C2532	CHIPCAP X5R 22U M 6V3 0805	B	L8	22u	6V3
C2534	CHIPCAP NP0 27P J 50V 0402	T	L8	27p	50V
C2535	CHIPCAP X7R 1N0 K 50V 0402	B	K8	1n0	50V
C2537	CHIPCAP X5R 22U M 6V3 0805	B	M8	22u	6V3
C2600	CHIPCAP X5R 4U7 K 10V 0805	T	P1	4u7	10V
C2601	CHIPCAP NP0 22P J 50V 0402	T	N1	22p	50V
C2602	CHIPCAP X5R 100N K 10V 0402	T	N1	100n	10V
C2603	CHIPCAP X5R 100N K 10V 0402	T	O1	100n	10V
C2700	CHIPCAP X5R 100N K 10V 0402	T	G6	100n	10V
C2701	CHIPCAP NP0 27P J 50V 0402	T	G6	27p	50V
C2702	CHIPCAP NP0 27P J 50V 0402	T	G6	27p	50V
C2703	CHIPCAP NP0 27P J 50V 0402	T	H6	27p	50V
C2704	CHIPCAP NP0 27P J 50V 0402	T	G6	27p	50V
C2800	CHIPCAP X5R 100N K 10V 0402	T	L4	100n	10V
C2801	CHIPCAP X5R 100N K 10V 0402	T	K1	100n	10V
C2802	CHIPCAP X5R 100N K 10V 0402	T	L4	100n	10V
C2803	CHIPCAP X5R 100N K 10V 0402	T	K1	100n	10V
C2804	CHIPCAP X5R 100N K 10V 0402	T	M1	100n	10V
C2805	CHIPCAP X5R 100N K 10V 0402	T	J2	100n	10V
C2806	CHIPCAP X5R 100N K 10V 0402	T	J3	100n	10V
C2807	CHIPCAP X5R 1U K 6V3 0603	T	J1	1u	6V3
C2808	CHIPCAP X5R 100N K 10V 0402	T	L1	100n	10V
C2809	CHIPCAP X5R 100N K 10V 0402	T	L1	100n	10V
C2810	CHIPCAP X5R 100N K 10V 0402	T	M1	100n	10V
C2811	CHIPCAP X5R 100N K 10V 0402	T	M1	100n	10V
C2812	CHIPCAP X5R 100N K 10V 0402	T	K4	100n	10V
C2813	CHIPCAP X5R 100N K 10V 0402	T	L4	100n	10V
C2814	CHIPCAP X5R 100N K 10V 0402	T	J2	100n	10V
C2815	CHIPCAP X7R 10N K 16V 0402	T	K1	10	16V

Item	Name	PWB Side	XY.	Value	
C2816	CHIPCAP X5R 100N K 10V 0402	T	L4	100n	10V
C2819	CHIPCAP NP0 27P J 50V 0402	T	M1	27p	50V
C3000	CHIPCAP X5R 100N M 16V 0402	T	I4	100n	16V
C3001	CHIPCAP X7R 10N K 16V 0402	T	I4	10	16V
C3002	CHIPCAP X5R 220N K 6.3V 0402	T	I1	220n	6V3
C3003	CHIPCAP X7R 10N K 16V 0402	T	I1	10	16V
C3005	CHIPCAP X7R 10N K 16V 0402	T	J4	10	16V
C3006	CHIPCAP X7R 10N K 16V 0402	T	J4	10	16V
C3007	CHIPCAP X5R 220N K 6.3V 0402	T	J4	220n	6V3
C3008	CHIPCAP X5R 220N K 6.3V 0402	T	K4	220n	6V3
C3009	CHIPCAP X7R 10N K 16V 0402	T	K4	10	16V
C3100	CHIPCAP NP0 27P J 50V 0402	T	L1	27p	50V
C3200	CHIPCAP X5R 100N K 10V 0402	T	C7	100n	10V
C3201	CHIPCAP X5R 1U K 6V3 0603	T	D7	1u	6V3
C3202	CHIPCAP X7R 10N K 16V 0402	T	E7	10	16V
C3203	CHIPCAP X5R 1U K 6V3 0603	T	D7	1u	6V3
C3204	CHIPCAP X5R 100N K 10V 0402	T	G5	100n	10V
C3310	CHIPCAP NP0 27P J 50V 0402	B	J4	27p	50V
C3311	CHIPCAP NP0 27P J 50V 0402	B	J4	27p	50V
C3312	CHIPCAP NP0 27P J 50V 0402	B	K4	27p	50V
C3313	CHIPCAP NP0 27P J 50V 0402	B	K5	27p	50V
C3314	CHIPCAP NP0 27P J 50V 0402	B	J5	27p	50V
C3315	CHIPCAP NP0 27P J 50V 0402	B	J5	27p	50V
C463	CHIPCAP X5R 220N K 6.3V 0402	T	J5	220n	6V3
C466	CHIPCAP X7R 10N K 16V 0402	T	J5	10	16V
C6000	CHIPCAP X5R 100N M 16V 0402	B	J3	100n	16V
C6001	CHIPCAP X5R 100N M 16V 0402	B	K3	100n	16V
C6002	CHIPCAP X5R 1U K 6V3 0603	B	I2	1u	6V3
C6003	CHIPCAP X5R 1U K 6V3 0603	B	K2	1u	6V3
C6004	CHIPCAP X5R 100N M 16V 0402	B	I2	100n	16V
C6005	CHIPCAP X5R 100N M 16V 0402	B	K2	100n	16V
C6010	CHIPCAP NP0 4P7 C 50V 0402	B	K2	4p7	50V
C6011	CHIPCAP NP0 5P6 C 50V 0402	B	K3	5p6	50V
C6050	CHIPCAP X5R 1U K 6V3 0603	B	I3	1u	6V3

Item	Name	PWB Side	XY.	Value	
C6051	CHIPCAP X5R 1U K 6V3 0603	B	J3	1u	6V3
C6052	CHIPCAP NP0 15P J 50V 0402	B	I3	15p	50V
C7500	CHIPCAP X5R 4U7 K 6.3V 0603	T	P3	4u7	6V3
C7501	CHIPCAP X5R 4U7 K 6.3V 0603	T	04	4u7	6V3
C7502	CHIPCAP X5R 4U7 K 6.3V 0603	T	05	4u7	6V3
C7503	CHIPCAP X5R 4U7 K 6.3V 0603	T	P3	4u7	6V3
C7504	CHIPCAP X7R 3N9 J 50V 0402	T	N4	3n9	50V
C7505	CHIPCAP X7R 10N K 16V 0402	T	N4	10	16V
C7506	CHIPCAP X7R 1N0 J 50V 0402	T	03	1n0	50V
C7507	CHIPCAP X5R 100N M 16V 0402	T	Q3	100n	16V
C7508	CHIPCAP NP0 10P J 50V 0402	T	N3	10p	50V
C7509	CHIPCAP X5R 100N M 16V 0402	T	N3	100n	16V
C7510	CHIPCAP NP0 470P J 6V3 0402	T	N4	470p	6V3
C7512	CHIPCAP NP0 2N2 G 16V 0603	T	N4	2n2	16V
C7514	CHIPCAP NP0 2P7 C 50V 0402	T	Q4	2p7	50V
C7515	CHIPCAP NP0 3P3 C 50V 0402	T	Q4	3p3	50V
C7516	CHIPCAP NP0 0P5 C 50V 0402	T	N3	0p5	50V
C7521	CHIPCAP X5R 4U7 K 6.3V 0603	T	S5	4u7	6V3
C7541	CHIPCAP X5R 4U7 K 6.3V 0603	T	S6	4u7	6V3
C7542	CHIPCAP X5R 4U7 K 6.3V 0603	T	S6	4u7	6V3
C7543	CHIPCAP X5R 4U7 K 6.3V 0603	T	S7	4u7	6V3
C7544	CHIPCAP X7R 22N K 16V 0402	T	Q6	22n	16V
C7545	CHIPCAP NP0 10P J 50V 0402	T	Q6	10p	50V
C7547	CHIPCAP NP0 1P8 C 50V 0402	T	05	1p8	50V
C7597	CHIPTCAP 150U M 10V 6X3.2X1.5	T	N2	150u	10V
C8000	CHIPCAP NP0 HQ 1P5 B 25V 0402	T	Q2	1p5	25V
D3000	sdram 8MX16 1.8/1.8v WBGA60 PBFREE	T	J5	-	-
D3001	FLASH 16MX16 1.8/1.8V FBGA44 PBFREE	T	I2	-	-
D6000	BTHFM1.0 ES4 Module	B	J2	-	-
F2000	SM FUSE F 2.0A 32V 0603	B	A2	2.0A	32V
G2200	RTC BACKUP CAPAC 311 SIZE FOR 2.6V 4UAH	T	E8	-	-
G7500	VCTCXO 38.4 MHZ 2.5V	T	N5	38.4 MHz	2.5 V
G7501	VCO 3296-3980MHZ 4-BAND Matsushita	T	N3	3296-3980MHz	-

Item	Name	PWB Side	XY.	Value	
L1000	FERRITE BEAD 0.6R 600R/100MZ 0402	T	N8	600R/ 100Mhz	-
L1001	FERRITE BEAD 0.6R 600R/100MZ 0402	T	M5	600R/ 100Mhz	-
L2002	CHIP BEAD ARRAY 2X1000R 0405	B	A5	2x1000R /100MHz	-
L2003	CHIP BEAD ARRAY 2X1000R 0405	B	B6	2x1000R /100MHz	-
L2004	CHIP BEAD ARRAY 2X1000R 0405	B	B7	2x1000R /100MHz	-
L2006	CHIP COIL 68NH J Q12/100MHZ 0603	B	A6	68n/ 100Mhz	0
L2100	CHIP BEAD ARRAY 2X1000R 0405	B	B5	2x1000R /100MHz	-
L2101	FERR.BEAD 220R/100M 2A 0R05 0603	T	I8	220R/ 100Mhz	-
L2102	CHIP COIL 30nH J Q65/500MHZ 0805	T	P2	30n	-
L2103	CHIP COIL 30nH J Q65/500MHZ 0805	T	P2	30n	-
L2104	FERR.BEAD 220R/100M 2A 0R05 0603	T	I8	220R/ 100Mhz	-
L2105	FERR.BEAD 220R/100M 2A 0R05 0603	T	I8	220R/ 100Mhz	-
L2108	FERR.BEAD 220R/100M 2A 0R05 0603	T	I8	220R/ 100Mhz	-
L2202	FERR.BEAD 220R/100M 2A 0R05 0603	T	K8	220R/ 100Mhz	-
L2203	FERRITE BEAD 0.6R 600R/100MZ 0402	T	K7	600R/ 100Mhz	-
L2204	FERRITE BEAD 0.6R 600R/100MZ 0402	T	K7	600R/ 100Mhz	-
L2205	FERR.BEAD 220R/100M 2A 0R05 0603	T	I8	220R/ 100Mhz	-
L2206	FERRITE BEAD 0.6R 600R/100MZ 0402	T	K6	600R/ 100Mhz	-
L2233	FERR.BEAD 240R/100M 0.4A 0R4 0402	T	K7	240R/ 100MHz	-
L2301	FERR.BEAD 220R/100M 2A 0R05 0603	T	H2	220R/ 100Mhz	-
L2302	INDUCT WW 10U 0A65 0R35 4X4X1.2	T	H3	10u	-

Item	Name	PWB Side	XY.	Value	
L2303	FERR.BEAD 0R03 42R/100MHZ 3A 0805	T	I5	42R/ 1000MH z	-
L2304	FERRITE BEAD 0.6R 600R/100MZ 0402	T	I5	600R/ 100Mhz	-
L2400	FERRITE BEAD 0.6R 600R/100MZ 0402	B	J8	600R/ 100Mhz	-
L2401	FERRITE BEAD 0.6R 600R/100MZ 0402	B	J8	600R/ 100Mhz	-
L2500	FERR.BEAD 0R03 42R/100MHZ 3A 0805	T	F6	42R/ 1000MH z	-
L2530	CHOKE 4U7 0.86A 0R17 3X3X1.5	T	L7	4u7	-
L2702	CHIP COIL 39N J Q24/800MHZ 0402	T	H6	39n	-
L2703	CHIP COIL 39N J Q24/800MHZ 0402	T	H6	39n	-
L2704	CHIP COIL 39N J Q24/800MHZ 0402	T	H6	39n	-
L3200	FERRITE BEAD 0.6R 600R/100MZ 0402	T	D7	600R/ 100Mhz	-
L7500	FERRITE BEAD 0.6R 600R/100MZ 0402	T	03	600R/ 100Mhz	-
L7520	FERRITE BEAD 0R01 28R/100MHZ 0603	T	S5	28R/ 100MHZ	-
L7540	CHOKE 3U3 1.2A 0R15 3X3X1.5	T	S7	3u3	-
L7541	CHIP COIL 22N J Q28/800MHZ 0402	T	Q8	22n	-
L7543	CHIP COIL 3N3 +-0N3 Q28/800M 0402	T	P5	3n3	-
L8000	INDUCT WW 3N6 C 25/6000 0603	T	R2	3n6/250 MHz	-
M2100	SMD VIBRA MOTOR 1.3V 90MA 9000RPM	T	B7	-	-
N1060	VREG 2.85/150MA(LP3987-2.85)USMD5	T	08	-	-
N2430	HALL IC SWITCH SH248CSP VCC	B	M2	-	-
N2500	BUCK/BOOST CONV. REG710NA-5 SOT23-6	T	F6	-	-
N2530	DC/DC BOOST CONV. TPS61058 QFN-10	T	L8	-	-
N2600	IRDA 1.15Mbps 2.2mm RoHS	T	N1	-	-
N3200	VREG & LEVELSHIFT(LP3928)USMD16	T	D7	-	-
N6050	VREG 2.85/150MA(LP3987-2.85)USMD5	B	I3	-	-
N7500	RF SYSTEM MODULE PIHI2.22 9.0 x 9.0 x 1	T	P4	-	-
N7520	PA RF9282E6.2 GSM/EDGE 850/900/1800/1900	T	S4	-	-
N7540	PA MODULE RF9372E5,2 WCDMA 1850-1980MHZ	T	R6	-	-

Item	Name	PWB Side	XY.	Value	
N7541	DC CONV SAMURAI LM3202TL NOPB revB μ SMD8	T	S6	-	-
R1000	CHIPRES 0W06 100R J 0402	T	J3	100R	-
R1001	CHIPRES 0W06 100R J 0402	T	J3	100R	-
R2000	ASIP MIC W/ESD RES+CAP+ZDI BGA11	B	A4	-	-
R2001	CHIPRES 0W06 10K J 0402	B	A5	10K	-
R2002	CHIPRES 0W06 220R J 0402	B	B4	220R	-
R2003	VAR.ARRAY 2X16V 824-915MHZ 0405	B	A5	-	-
R2004	CHIPRES 0W06 33K J 0402	B	A4	33K	-
R2005	CHIPRES 0W06 10R J 0402	B	A6	10R	-
R2006	CHIPRES 0W06 10R J 0402	B	A6	10R	-
R2007	CHIPRES 0W06 10R J 0402	B	A7	10R	-
R2008	CHIPRES 0W06 10R J 0402	B	A7	10R	-
R2009	VAR.ARRAY 2X16V 824-915MHZ 0405	B	A6	-	-
R2010	VAR.ARRAY 2X16V 824-915MHZ 0405	B	A7	-	-
R2011	ASIP SILIC USB OTG / ESD BGA11	B	B3	-	-
R2012	RES NETWORK 0W06 220K/120K J 0404	B	A4	220K/ 120K	-
R2013	CHIPRES 0W06 100R J 0402	B	A3	100R	-
R2015	CHIPRES 0W06 10R J 0402	B	B4	10R	-
R2016	CHIP VARISTOR VWM14V VC50V 0402	B	B3	-	50V
R2019	CHIPRES JUMPER 0R0 0402	T	C7	0R0	-
R2020	CHIPRES 0W06 2K2 J 0402	T	D7	2K2	-
R2021	CHIPRES 0W06 1M0 J 0402	T	D7	1M0	-
R2070	NTC RES 0W1 47K J B 4050+-3% 0402	T	E6	47K	-
R2100	ASIP MIC W/ESD RES+CAP+ZDI BGA11	T	I6	-	-
R2101	CHIPRES 0W06 220R J 0402	T	I6	220R	-
R2102	CHIPRES 0W06 33K J 0402	T	I7	33K	-
R2103	VAR.ARRAY 2X16V 824-915MHZ 0405	B	B5	-	-
R2104	RES NETWORK 0W06 2X10R J 0404	T	I7	2x10R	-
R2106	VAR.ARRAY 2X16V 824-915MHZ 0405	T	P2	-	-
R2200	CHIPRES 0W06 100K J 0402	T	J6	100K	-
R2201	CHIPRES 0W06 120K J 0402	T	K6	120K	-
R2202	CHIPRES 0W06 4K7 J 0402	T	K6	4K7	-
R2203	CHIPRES 0W06 2M2 J 0402	T	J6	2M2	-

Item	Name	PWB Side	XY.	Value	
R2204	CHIPRES 0W06 4K7 J 0402	T	J6	4K7	-
R2205	CHIPRES 0W06 220R J 0402	T	I6	220R	-
R2206	CHIPRES 0W06 470R J 0402	T	I7	470R	-
R2400	CHIPRES 0W06 100K J 0402	B	I4	100K	-
R2430	CHIPRES 0W06 470K J 0402	B	M2	470K	-
R2500	CHIPRES 0W06 10K J 0402	T	F7	10K	-
R2502	CHIPRES 0W06 10K J 0402	T	E7	10K	-
R2531	CHIPRES 0W06 39K J 0402	B	K8	39K	0
R2534	CHIPRES 0W06 10K J 0402	B	K8	10K	-
R2537	CHIPRES 0W06 56K J 0402	B	K8	56K	-
R2538	RES METFI 0W2 F 0603	B	L8	0R75	-
R2539	CHIPRES 0W06 150K J 0402	B	K8	150K	-
R2540	RES METFI 0W2 F 0603	B	L8	0R75	-
R2581	CHIPRES 0W06 150R J 0603	B	I4	150R	-
R2582	CHIPRES 0W06 150R J 0603	B	I6	150R	-
R2600	CHIPRES 0W125 4R7 J 0805	T	P1	4R7	-
R2700	ASIP SIM INTERFACE **low cap** BGA8	T	G6	-	-
R2800	CHIPRES 0W06 100K J 0402	T	K1	100K	-
R2802	CHIPRES JUMPER 0R0 0402	T	J1	0R0	-
R3000	CHIPRES 0W06 4K7 J 0402	T	I4	4K7	-
R3004	CHIPRES JUMPER 0R0 0603	T	J4	0R0	-
R3005	CHIPRES JUMPER 0R0 0603	T	J1	0R0	-
R3006	CHIPRES JUMPER 0R0 0603	T	K5	0R0	-
R3007	CHIPRES JUMPER 0R0 0603	T	K5	0R0	-
R3200	ASIP MMC FILTER *** PB-FREE ***	T	D7	-	-
R3203	CHIPRES JUMPER 0R0 0402	T	G5	0R0	-
R3204	CHIPRES 0W06 1K2 J 0402	T	D6	1K2	-
R3204	CHIPRES 0W06 1K2 J 0402	T	D6	1K2	-
R3205	CHIPRES 0W06 680R J 0402	T	D6	680R	-
R3205	CHIPRES 0W06 680R J 0402	T	D6	680R	-
R3210	CHIPRES JUMPER 0R0 0603	T	E7	0R0	-
R3211	CHIPRES JUMPER 0R0 0603	T	E7	0R0	-
R3212	CHIPRES JUMPER 0R0 0603	T	D7	0R0	-
R3301	VAR.ARRAY 2X16V 824-915MHZ 0405	B	I8	-	-

Item	Name	PWB Side	XY.	Value	
R3302	CHIPRES JUMPER 0R0 0402	B	I8	0R0	-
R3303	CHIPRES JUMPER 0R0 0402	B	I8	0R0	-
R3541	CHIPRES 0W06 22K J 0402	B	K8	22K	-
R6000	CHIPRES JUMPER 0R0 0402	B	I2	0R0	-
R6010	CHIPRES 0W06 10K J 0402	B	J3	10K	-
R6011	CHIPRES 0W06 8K2 J 0402	B	J3	8K2	-
R6015	CHIPRES JUMPER 0R0 0402	T	B4	0R0	-
R6050	CHIPRES JUMPER 0R0 0603	B	I2	0R0	-
R6051	CHIPRES JUMPER 0R0 0603	B	K2	0R0	-
R6052	CHIPRES JUMPER 0R0 0603	B	I3	0R0	-
R6053	CHIPRES JUMPER 0R0 0603	B	I2	0R0	-
R7500	CHIPRES 0W06 22K J 0402	T	N4	22K	-
R7501	CHIPRES 0W06 4K7 J 0402	T	Q3	4K7	-
R7503	CHIPRES 0W06 1K0 F 200PPM 0402	T	N4	1K0	-
R7504	CHIPRES 0W06 8K2 F 0402	T	N4	8K2	-
R7505	CHIPRES 0W06 5R6 J 0402	T	O3	5R6	-
R7520	CHIPRES 0W06 27K F 0402	T	R5	27K	-
R7521	CHIPRES JUMPER 0R0 0402	T	R3	0R0	-
R7522	CHIPRES JUMPER 0R0 0402	T	R5	0R0	-
R7540	CHIPRES 0W06 47K F 200PPM 0402	T	R7	47K	-
R7541	CHIPRES 0W06 1K0 F 200PPM 0402	T	S6	1K0	-
R7542	CHIPRES JUMPER 0R0 0402	T	Q6	0R0	-
R7543	CHIPRES 0W06 22K J 0402	T	Q6	22K	-
R7544	CHIPRES 0W06 10R J 0402	T	R7	10R	-
R7570	CHIPRES JUMPER 0R0 0402	T	S6	0R0	-
R7571	CHIPRES 0W06 4K7 F 200PPM 0402	T	S6	4K7	-
R8000	CHIPRES JUMPER 0R0 0603	T	Q2	0R0	-
S2583	SM SW TACT SPST 12V SIDE KEY 2.2N	T	C8	-	-
S2587	SM SW TACT SPST 12V SIDE KEY 2.2N	T	Q1	-	-
S2591	SM SW TACT SPST 12V SIDE KEY 2.2N	T	Q9	-	-
S2595	SM SW TACT SPST 12V SIDE KEY 2.2N	T	N9	-	-
T7500	TRANSF BALUN 2134 +/- 30MHZ 0805	T	Q3	-	-
T7501	TRANSF BALUN 3800 +/- 550MHZ 0805	T	O4	-	-
V2000	TVS DI 1PMT16AT3 16V 175W PWRMITE	B	B3	-	-

Item	Name	PWB Side	XY.	Value	
V2002	TR 2SC5658QRS N 50V 0A1 0W15 VMT3	T	C7	-	-
V2500	TR 2SC5658QRS N 50V 0A1 0W15 VMT3	T	F7	-	-
V2581	LED WHITE 100MCD 20MA 0DEG	B	H4	-	-
V2582	LED WHITE 100MCD 20MA 0DEG	B	H6	-	-
X1000	SM CAMERA MOD SKT 2X8F	T	06	-	-
X2000	SM SYSTEM CONNECTOR 14POL	T	A5	-	-
X2061	MODULE ID COMPONENT 2.8X1.8X0.3	B	L2	-	-
X2070	SM BATTERY CONN 3POL SPR 12V 2A	T	M6	-	-
X2530	C-SPRING ANTENNA	T	M8	-	-
X2531	C-SPRING ANTENNA	T	M8	-	-
X2700	SM SIM CONN 6POL P2.54 H1.8	T	F8	-	-
X3200	CONN MINISD PUSH - PUSH 10V 0.5A	T	E3	-	-
X8000	SM CONN RF JACK 50R 2W 6GHZ	T	Q2	-	-
X8001	C-SPRING ANTENNA (active)	T	S2	-	-
X8002	C-SPRING ANTENNA	T	S2	-	-
X8003	SM CONN RF JACK 50R 2W 6GHZ	T	08	-	-
X8004	C-SPRING ANTENNA (active)	T	R8	-	-
X8005	C-SPRING ANTENNA	T	R8	-	-
X8006	C-SPRING ANTENNA	T	S1	-	-
Z2000	FERRITE BEAD 0.6R 600R/100MZ 0402	B	A4	600R/ 100Mhz	-
Z2001	FERRITE BEAD 0.6R 600R/100MZ 0402	B	B4	600R/ 100Mhz	-
Z2005	FERRITE BEAD 0.6R 600R/100MZ 0402	B	B4	600R/ 100Mhz	-
Z2403	ASIP 10-CH ESD EMI FILTER BGA25	B	I4	-	-
Z2404	ASIP 10-CH ESD EMI FILTER BGA25	B	I5	-	-
Z2580	ASIP 10-CH ESD EMI FILTER BGA25	B	I7	-	-
Z3300	ASIP 10-CH ESD EMI FILTER BGA25	B	I6	-	-
Z7500	TX SAW MODULE GSM 850/900MHZ	T	Q5	-	-
Z7540	DUPL BAW 1920-1980/2110-2170MHZ 3.8x3.8	T	Q7	-	-

■ Component layouts

Note: See also larger size layouts in the [Schematics section \(page 10–9\)](#).

Component layout, bottom

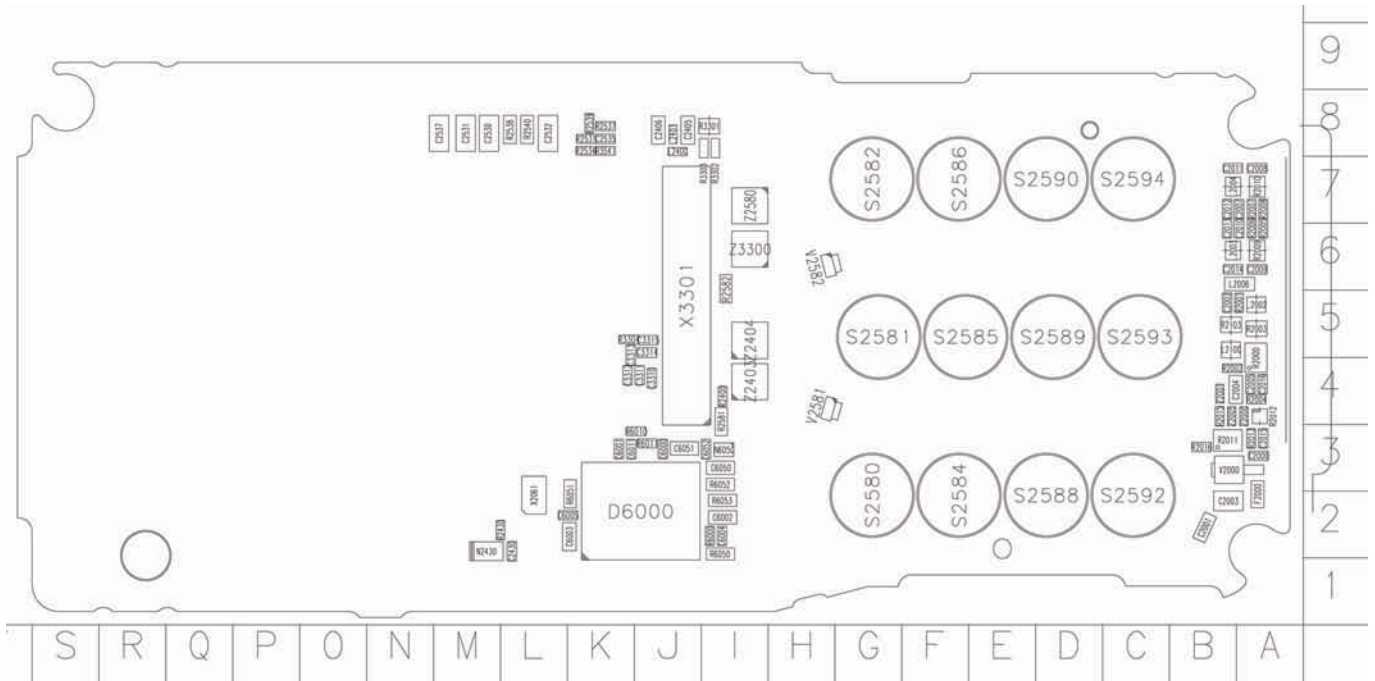


Figure 4 Component layout, RM-78, 1mda_05a, bottom

Component layout, top

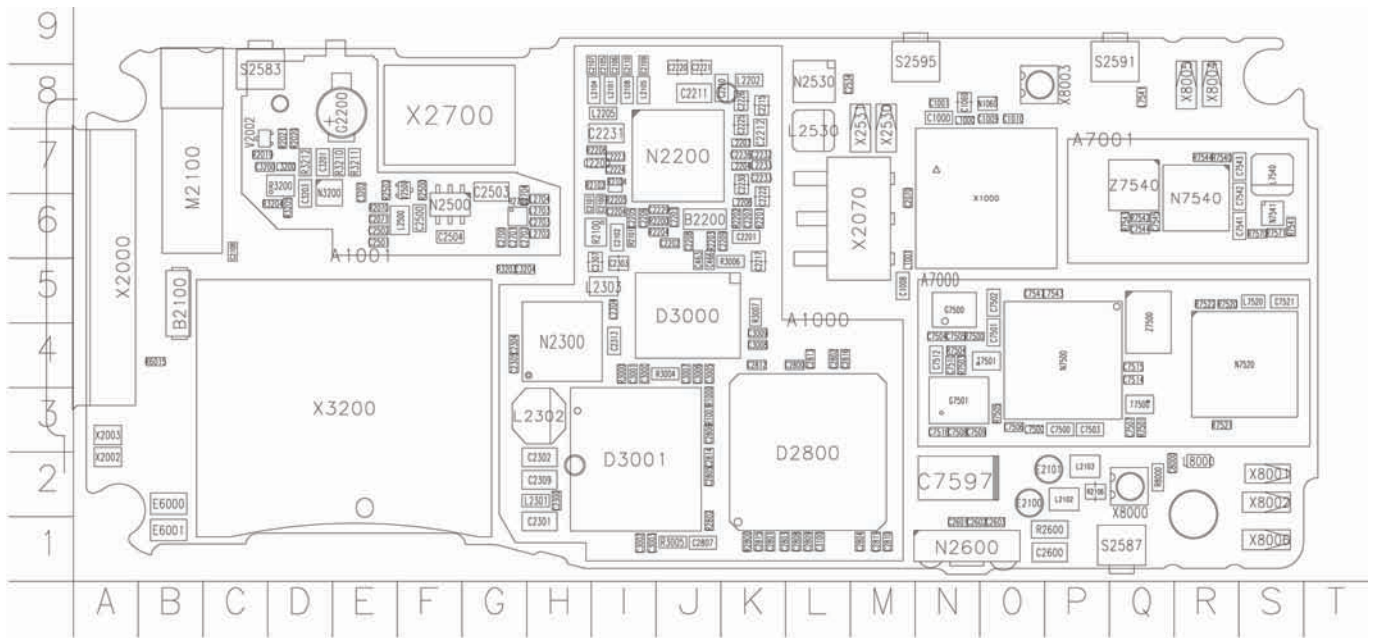


Figure 5 Component layout, RM-78, 1mda_05a top

(This page left intentionally blank.)

3 — Service Software Instructions

(This page left intentionally blank.)

Table of Contents

Phoenix installation steps in brief.....	3-5
Installing Phoenix.....	3-6
Updating Phoenix installation.....	3-8
Uninstalling Phoenix.....	3-9
Repairing Phoenix installation.....	3-11
Phone data package overview.....	3-12
Installing phone data package.....	3-12
Uninstalling phone data package.....	3-16
Configuring users in Phoenix.....	3-18
Managing connections in Phoenix.....	3-18
Installing flash support files for FPS-8 and FPS-10.....	3-20
Updating FPS-8 and FPS-10 flash prommer software.....	3-23
Activating FPS-8.....	3-25
Deactivating FPS-8.....	3-26

List of Figures

Figure 6 Dongle not found.....	3-6
Figure 7 Disclaimer text.....	3-7
Figure 8 InstallShield Wizard Complete.....	3-8
Figure 9 Installation interrupted.....	3-9
Figure 10 Remove program.....	3-10
Figure 11 Finish uninstallation.....	3-11
Figure 12 Repair program.....	3-12
Figure 13 Data package setup information.....	3-14
Figure 14 Data package destination folder.....	3-15
Figure 15 InstallShield Wizard Complete.....	3-16
Figure 16 Uninstalling phone data package.....	3-17
Figure 17 Finishing data package uninstallation.....	3-17
Figure 18 Phoenix login.....	3-18
Figure 19 New user configured.....	3-18
Figure 20 Select mode: Manual.....	3-19
Figure 21 Connections list.....	3-20
Figure 22 Connection information.....	3-20
Figure 23 Product support module information (example from RM-1).....	3-20
Figure 24 Flash update welcome dialog.....	3-21
Figure 25 Flash installation interrupted.....	3-21
Figure 26 Flash destination folder.....	3-22
Figure 27 Finish flash update.....	3-23
Figure 28 Flash directory window.....	3-24
Figure 29 Prommer software update finished.....	3-24
Figure 30 Prommer Maintenance window.....	3-25
Figure 31 Box activation.....	3-26
Figure 32 Deactivation warning.....	3-26

(This page left intentionally blank.)

■ *Phoenix* installation steps in brief

Before you begin

Recommended hardware requirements:

- Computer processor: Pentium 700 MHz or higher
- RAM 256 MB
- Disk space 100-300 MB

Supported operating systems:

- *Windows 2000* Service Pack 3 or higher
- *Windows XP* Service Pack 1 or higher

Context

Phoenix is a service software for reprogramming, testing and tuning phones.

Phoenix installation contains:

- Service software support for all phone models included in the package
- Flash update package files for programming devices
- All needed drivers for:
 - DK2 dongle
 - DKU-2 USB cable

Note: Separate installation packages for flash update files and drivers are also available, but it is not necessary to use them unless there are updates between *Phoenix* service software releases. If separate update packages are used, they should be used after *Phoenix* and data packages have been installed.

The phone model specific data package includes all changing product specific data:

- Product software binary files
- Files for type label printing
- Validation file for the faultlog repair data reporting system
- All product specific configuration files for *Phoenix* software components

Note: *Phoenix* and phone data packages should only be used as complete installation packages. Uninstallation should be made from the *Windows* Control Panel.

To use *Phoenix*, you need to:

Steps

1. Connect a DK2 dongle to the computer parallel port.
2. Install *Phoenix*.
3. Install the phone-specific data package.
4. Configure users.
5. Manage connection settings (depends on the tools you are using).

If you use FPS-8:	<ul style="list-style-type: none">• Update FPS-8 software• Activate FPS-8
-------------------	--

If you use FPS-10:	<ul style="list-style-type: none">• Update FPS-10 software Note: There is no need to activate FPS-10.• Activate SX-4 smart card, if you need tuning and testing functions. Note: When FPS-10 is used only for product software updates, SX-4 smart card is not needed.
--------------------	---

Results

Phoenix is ready to be used with FPS-8 or FPS-10 flash prommers and other service tools.

■ Installing *Phoenix*

Before you begin

- Check that a dongle is attached to the parallel port of your computer.
- Download the *Phoenix* installation package (for example, *phoenix_service_sw_2004_39_x_xx.exe*) to your computer (in *C:\TEMP*, for instance).
- Close all other programs.
- Depending on your operating system, administrator rights may be required to install *Phoenix*.
- If uninstalling or rebooting is needed at any point, you will be prompted by the InstallShield program.

Context

At some point during the installation procedure, you may get the following message:

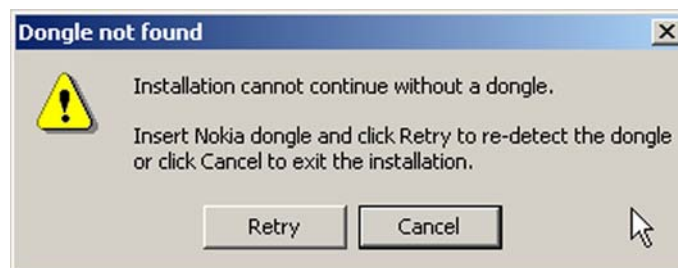


Figure 6 Dongle not found

This may be a result of a defective or too old PKD-1 dongle.

Check the COM/parallel ports used. After correcting the problem, you can restart the installation.

For more detailed information, please refer to *Phoenix* Help files.

Tip: Each feature in *Phoenix* has its own Help function, which can be activated while running the program. Press the **F1** key or the feature's **Help** button to activate a Help file.

Steps

1. To start the installation, run the application file (for example, *phoenix_service_sw_2004_39_x_xx.exe*).
2. In the *Welcome* dialogue, click **Next**.

3. Read the disclaimer text carefully and click **Yes**.

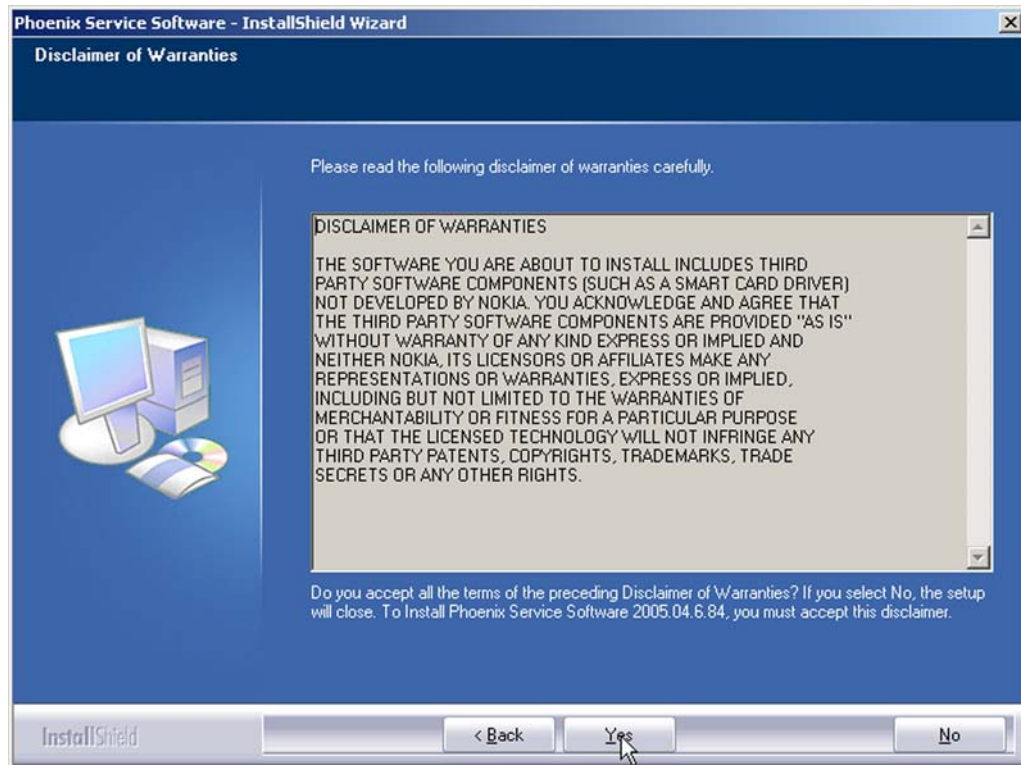


Figure 7 Disclaimer text

4. Choose the destination folder.
The default folder *C:\ProgramFiles\Nokia\Phoenix* is recommended.
5. To continue, click **Next**.
To choose another location, click **Browse** (not recommended).
6. Wait for the components to be copied.
The progress of the installation is shown in the *Setup Status* window.
7. Wait for the drivers to be installed and updated.
The process may take several minutes to complete.
If the operating system does not require rebooting, the PC components are registered right away.
If the operating system requires restarting your computer, the Install Shield Wizard will notify about it.
Select **Yes...** to reboot the PC immediately or **No...** to reboot the PC manually afterwards.
After the reboot, all components are registered.

Note: *Phoenix* does not work, if the components have not been registered.

8. To end the installation, click **Finish**.

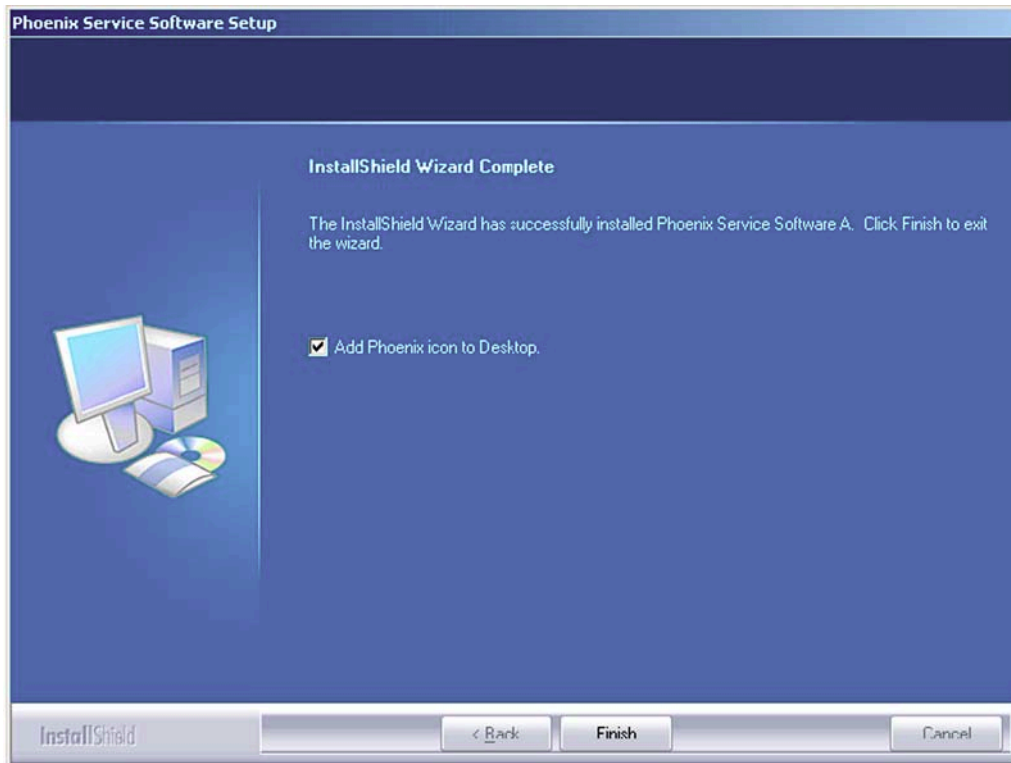


Figure 8 InstallShield Wizard Complete

Next action

After the installation, *Phoenix* can be used after:

- installing phone model specific data package for *Phoenix*
- configuring users and connections

FPS-8 and FPS-10 flash prommers can be used after updating their flash update package files.

■ Updating *Phoenix* installation

Context

- If you already have the *Phoenix* service software installed on your computer, you need to update the software when new versions are released.
- To update *Phoenix*, you need to follow the same steps as when installing it for the first time.
- When you are updating, for example, from version **a14_2004_16_4_47** to **a15_2004_24_7_55**, the update will take place automatically without uninstallation.
- Always use the latest available versions of both *Phoenix* and the phone-specific data package. Instructions can be found in the phone model specific Technical Bulletins and phone data package *readme.txt* files (shown during installation).
- If you try to update *Phoenix* with the same version you already have (for example, **a15_2004_24_7_55** to **a15_2004_24_7_55**), you are asked if you want to uninstall the existing version. In this case you can choose between a total uninstallation or a repair installation in a similar way when choosing to uninstall the application from the *Windows* Control Panel.
- If you try to install an older version (for example, downgrade from **a15_2004_24_7_55** to **a14_2004_16_4_47**), installation will be interrupted.

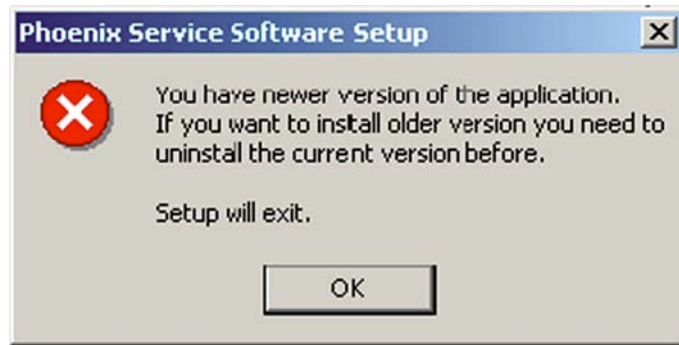


Figure 9 Installation interrupted

- Always follow the instructions on the screen.

Steps

1. Download the installation package to your computer hard disk.
2. Close all other programs.
3. Run the application file (for example, *phoenix_service_sw_2004_39_x_xx.exe*).

Results

A new *Phoenix* version is installed and driver versions are checked and updated.

■ Uninstalling *Phoenix*

Context

You can uninstall *Phoenix* service software manually from the *Windows* Control Panel.

Steps

1. Open the **Windows Control Panel**, and choose **Add/Remove Programs**.

2. To uninstall *Phoenix*, choose **Phoenix Service Software**→**Change/Remove**→**Remove** .

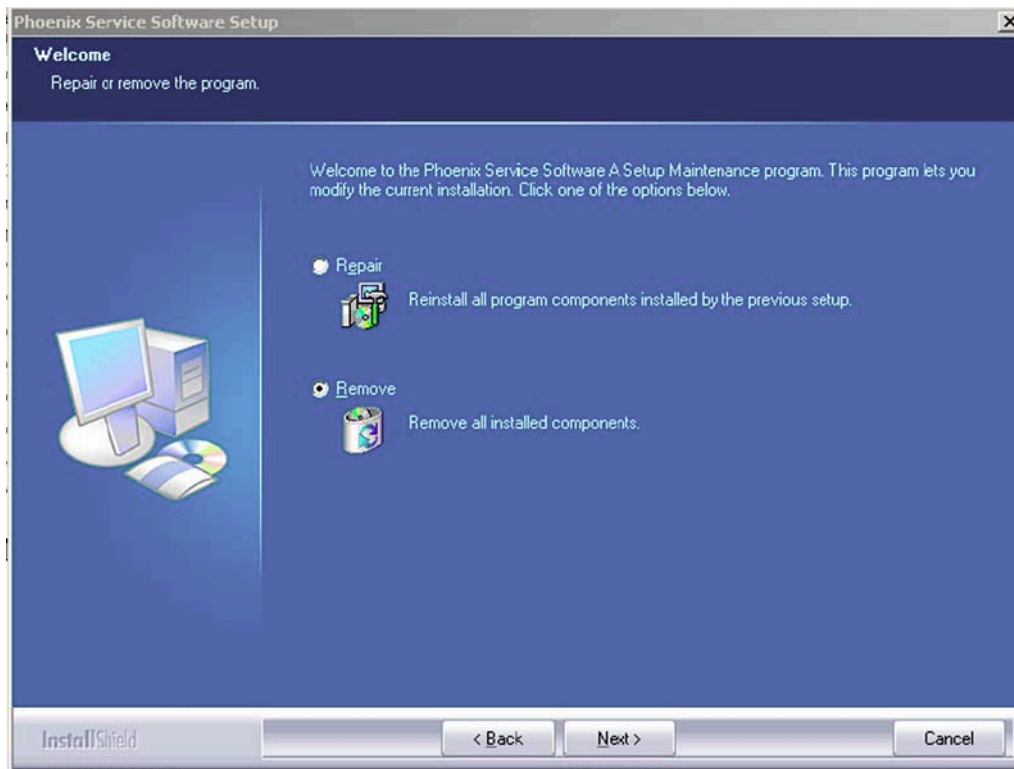


Figure 10 Remove program

The progress of the uninstallation is shown.

3. If the operating system does not require rebooting, click **Finish** to complete.

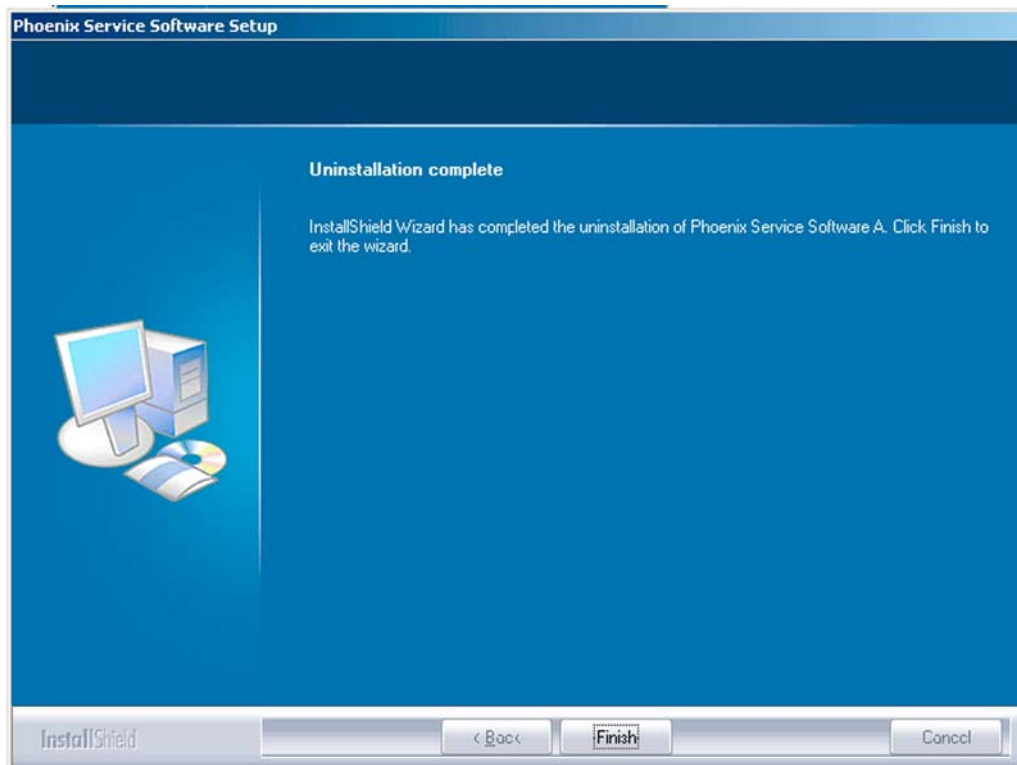


Figure 11 Finish uninstallation

If the operating system requires rebooting, InstallShield Wizard will notify you. Select **Yes...** to reboot the PC immediately and **No...** to reboot the PC manually afterwards.

■ Repairing *Phoenix* installation

Context

If you experience any problems with the service software or suspect that files have been lost, use the repair function before completely reinstalling *Phoenix*.

Note: The original installation package (for example, *phoenix_service_sw_a15_2004_24_7_55.exe*) must be found on your PC when you run the repair setup.

Steps

1. Open **Windows Control Panel**→**Add/Remove Programs** .
2. Choose **Phoenix Service Software**→**Change/Remove** .

3. In the following view, select **Repair**.

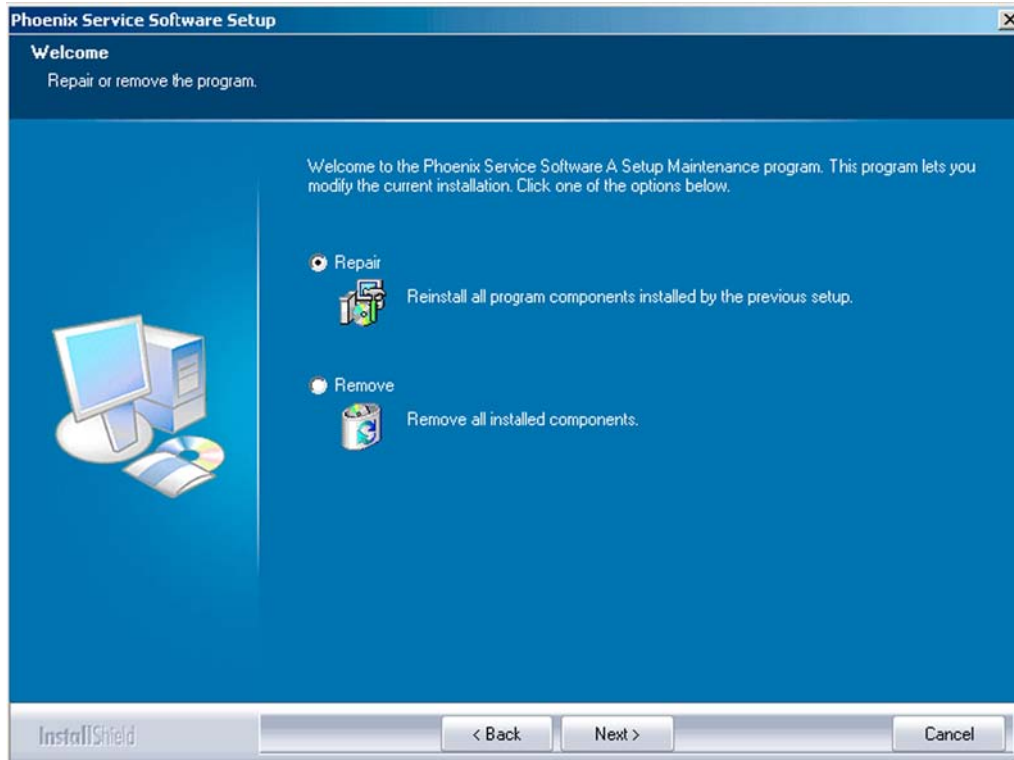


Figure 12 Repair program

Phoenix reinstalls components and registers them.

The procedure is the same as when updating *Phoenix*.

4. To complete the repair, click **Finish**.

■ Phone data package overview

Each product has its own data package (DP). The product data package contains all product-specific data files to make the *Phoenix* service software and tools usable with a certain phone model.

The phone data package contains the following:

- Product software binary files
- Files for type label printing
- Validation file for the fault log repair data reporting system
- All product-specific configuration files for *Phoenix* software components

Data files are stored in **C:\Program Files\Nokia\Phoenix** (default).

■ Installing phone data package

Before you begin

- A phone-specific data package contains all data required for the *Phoenix* service software and service tools to be used with a certain phone model.
- Check that a dongle is attached to the parallel port of your computer.
- Install *Phoenix* service software.

- Download the installation package (for example, *XX-XX_dp_EA_v_1_0.exe*) to your computer (for example, in C:\TEMP).
- Close all other programs.


(XX-XX = type designator of the product)

If you already have *Phoenix* installed on your computer, you will need to update it when a new version is released.

Note: Often *Phoenix* and the phone-specific data package come in pairs, meaning that a certain version of *Phoenix* can only be used with a certain version of a data package. Always use the latest available versions of both. Instructions can be found in phone-specific Technical Bulletins and *readme.txt* files of data packages.

Steps

1. To start the installation, run the application file (for example, *XX-XX_dp_EA_v_1_0.exe*),
Wait for the installation files to be extracted.
2. Click **Next**.

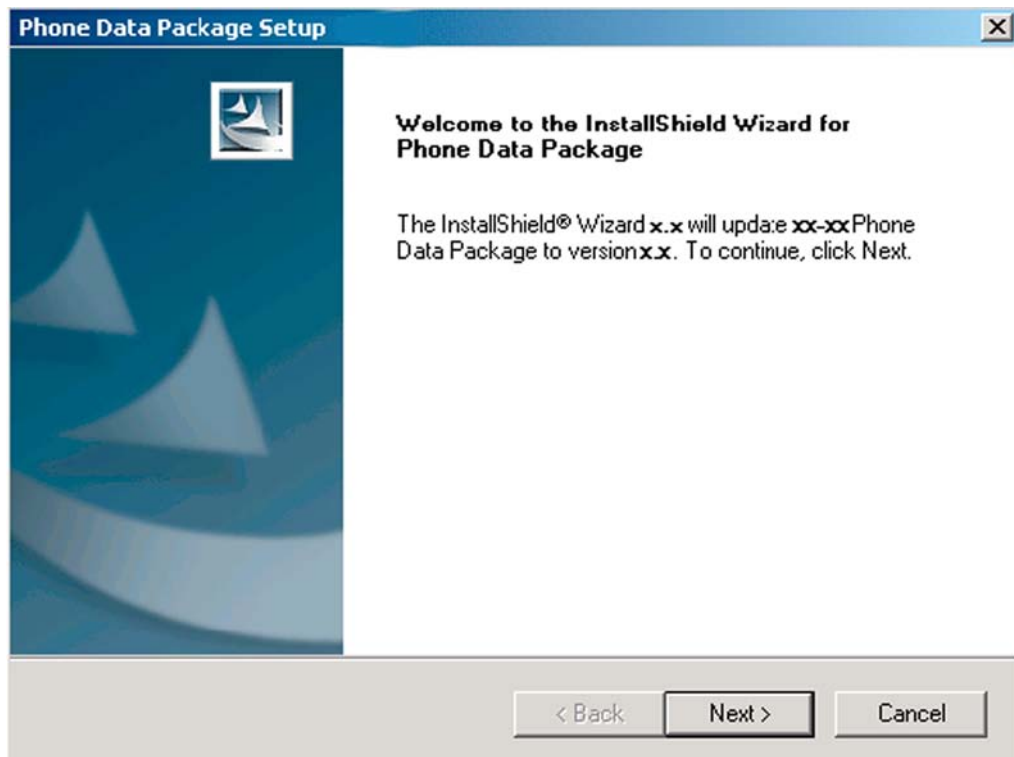

3. In the following view you can see the contents of the data package. Read the text carefully. There is information about the *Phoenix* version required with this data package.

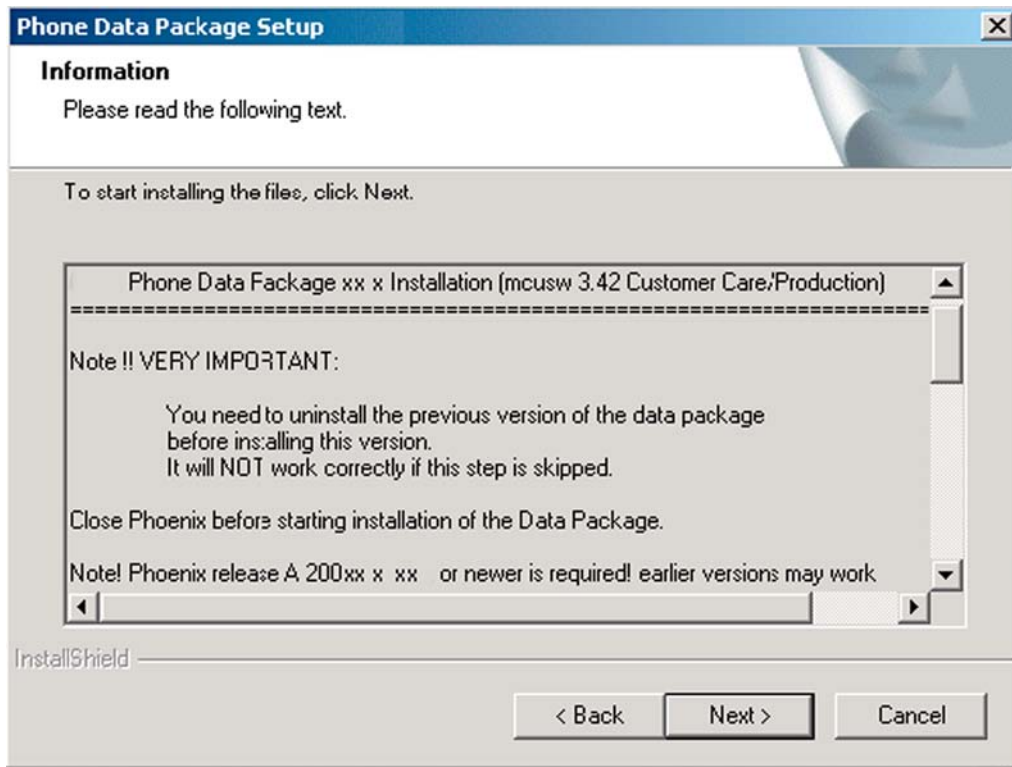


Figure 13 Data package setup information

4. To continue, click **Next**.

5. Choose the destination folder, and click **Next** to continue.


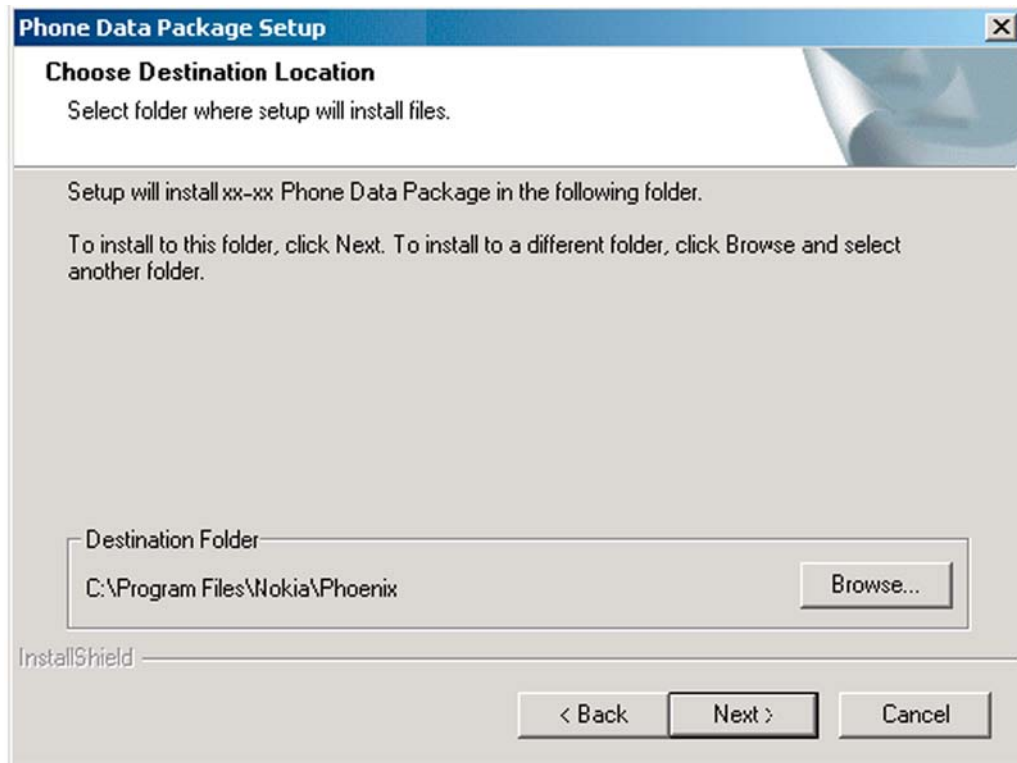


Figure 14 Data package destination folder

The InstallShield Wizard checks where *Phoenix* is installed, and the directory is shown.

6. To start copying the files, click **Next**.

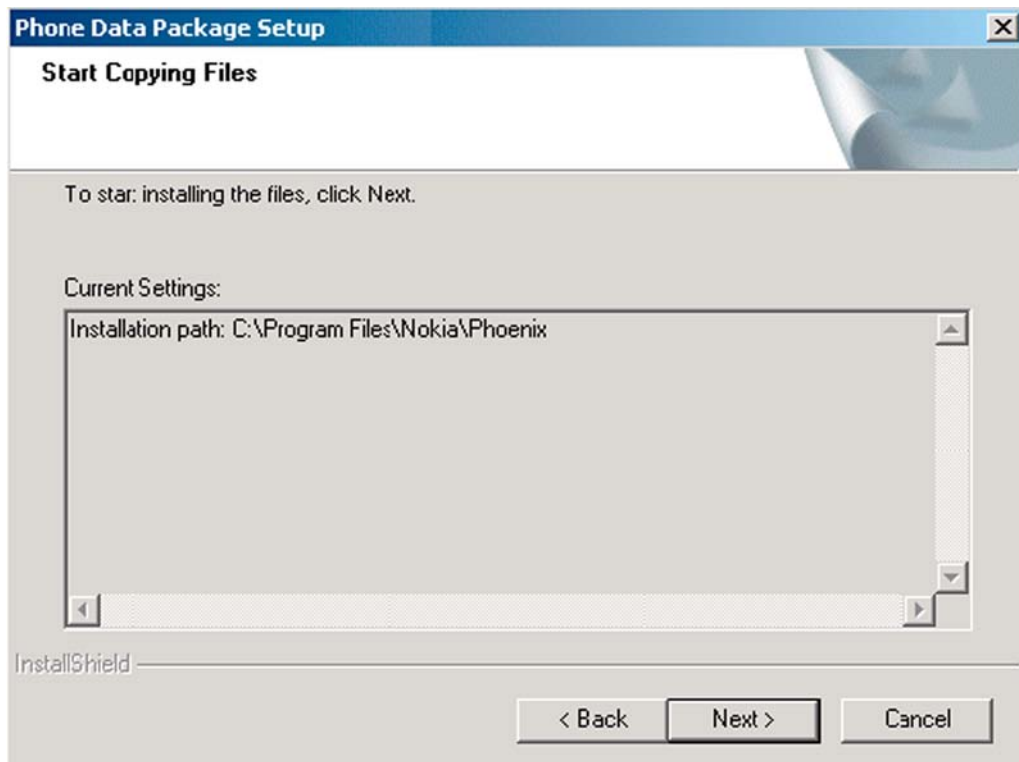

Phone model specific files are installed. Please wait.

7. To complete the installation, click **Finish**.

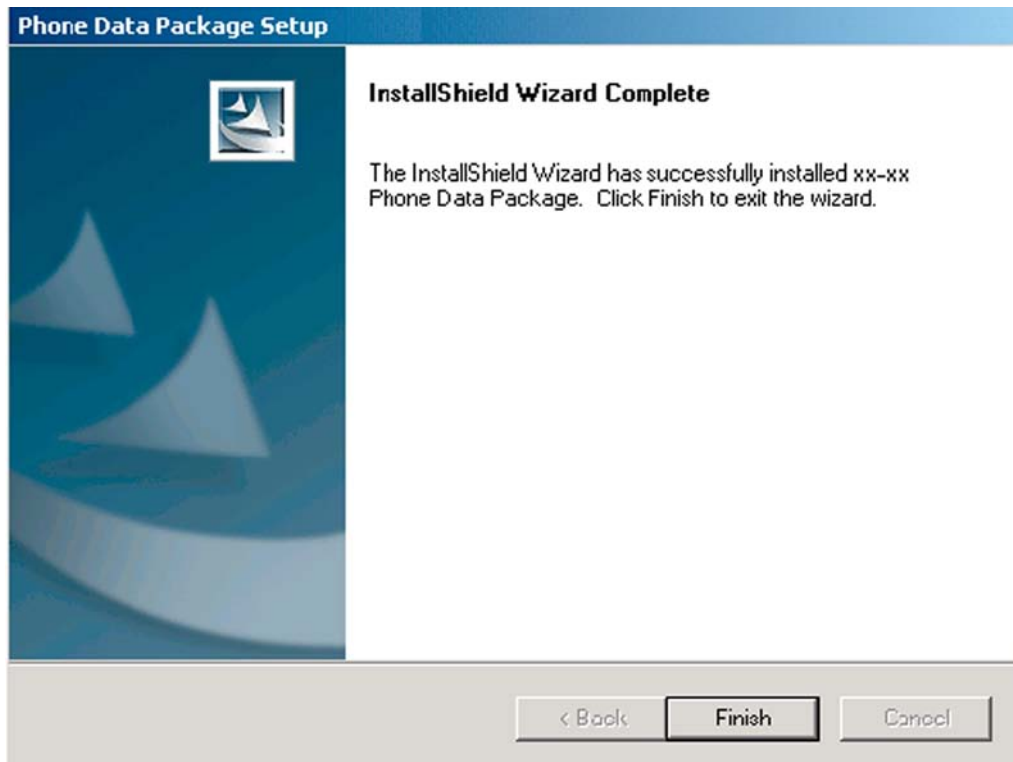


Figure 15 InstallShield Wizard Complete

Next action

Phoenix can be used for flashing phones and printing type labels after:

- Configuring users
- Managing connections

FPS-8 and FPS-10 can be used after updating their flash update package files.

■ Uninstalling phone data package

Context

There is no need to uninstall an older version of a data package, unless instructions to do so are given in the *readme.txt* file of the data package and bulletins related to the release.

Please read all related documents carefully.

Steps

1. Locate the data package installation file (e.g. *XX-XX_dp_EA_v_1_0.exe*) from your computer.
2. To start the uninstallation procedure, double-click the data package installation file.

3. To uninstall the data package, click **OK** or to interrupt the uninstallation, click **Cancel**.

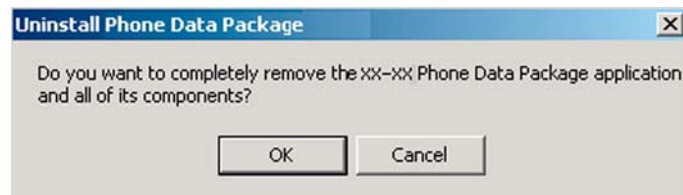


Figure 16 Uninstalling phone data package

4. When the data package is uninstalled, click **Finish**.

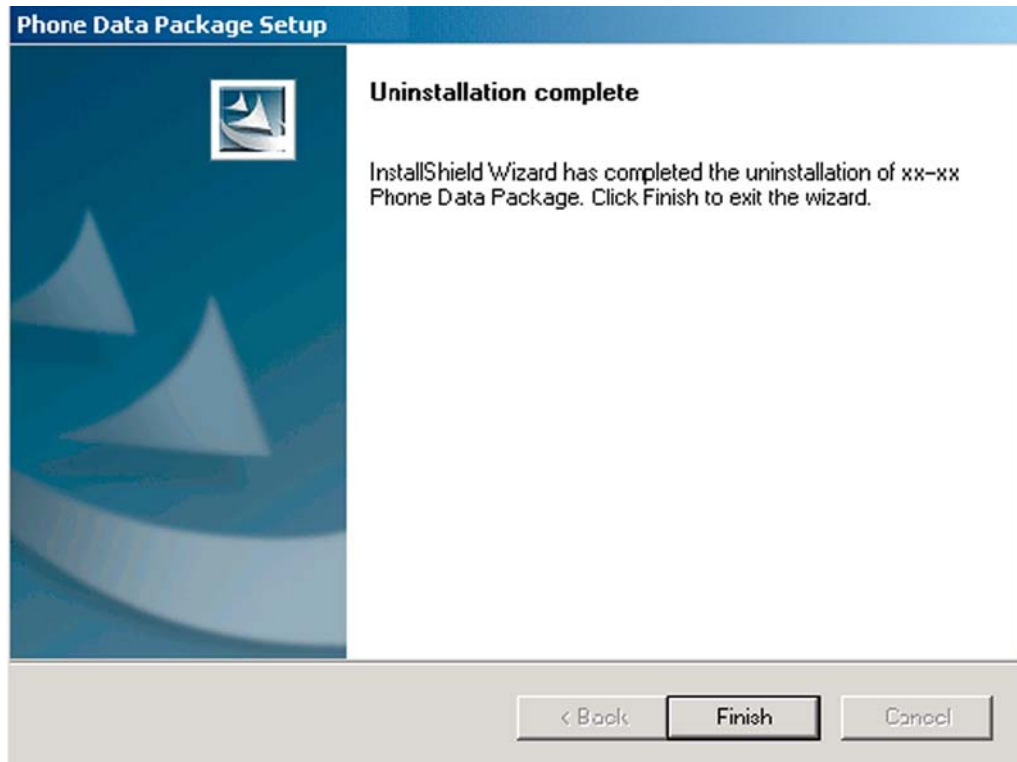


Figure 17 Finishing data package uninstallation

Alternative steps

- You can also uninstall the data package manually from **Control Panel**→**Add/Remove Programs**→**xx-xx* Phone Data Package** . (*= type designator of the phone).

■ Configuring users in *Phoenix*

Steps

1. Start *Phoenix* service software, and log in.

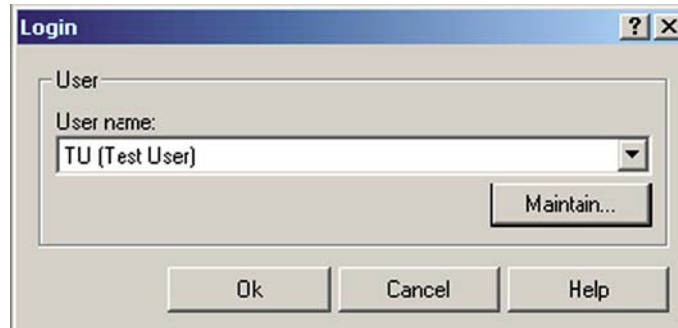


Figure 18 Phoenix login

- If the user ID is already configured, select s/he from the *User name* drop-down list, and click **OK**.
2. To add a new user, or to edit existing ones, click **Maintain**.
3. To add a new user, click **New**.
4. Type in the name and initials of the user, and click **OK**.
The user is added to the user name list.
5. Select the desired user from the *User name* drop-down list, and click **OK**.

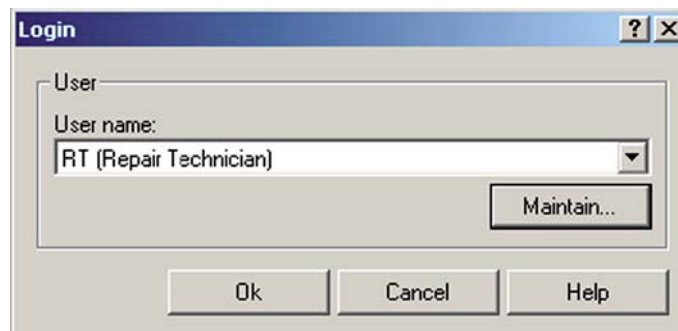


Figure 19 New user configured

■ Managing connections in *Phoenix*

Context

With the **Manage Connections** feature you can edit and delete existing connections or create new ones.


Note: After choosing the desired connection, and connecting the phone to a PC for the first time, allow the PC to install the USB device drivers first. Please note that this may take some time to complete.

If there are problems after the driver installation, check that the USB connection is active from the **Windows Control Panel**. If the problem persists, contact the local PC support.

Steps

1. Start *Phoenix*, and log in.
2. Choose **File**→**Manage Connections...**

3. To add a new connection, click **Add**.

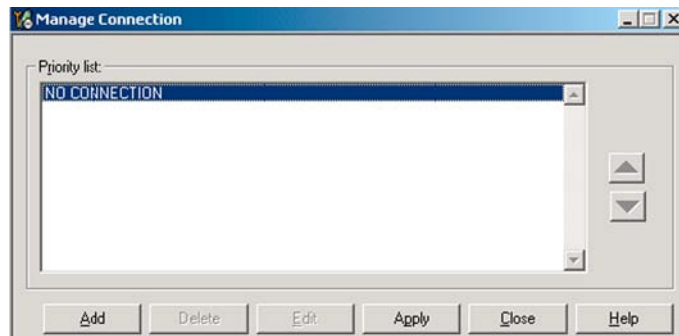

4. Select **Manual** mode, and click **Next** to continue.

If you want to create the connection using the Connection Wizard, connect the tools and a phone to your PC. The wizard will automatically try to configure the correct connection.

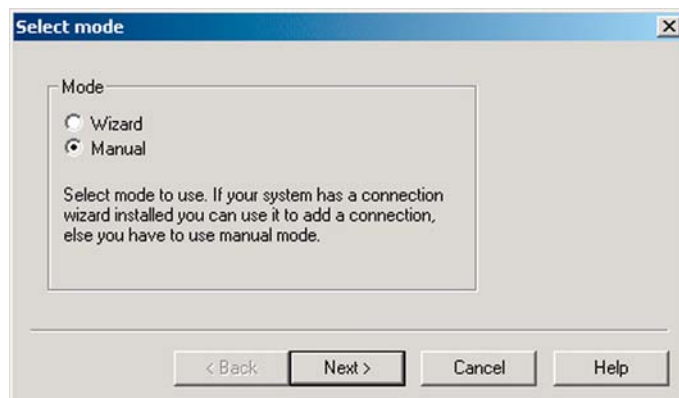


Figure 20 Select mode: Manual

- i For an FPS-10 flash prommer with a **USB Connection**, choose the following connection settings:
 - Media: **FPS-10 USB**
 - DEVICE_INDEX: **0**
 - SERIAL_NUM: See Serial No from the label attached to the bottom of FPS-10
 - ACTIVE_MEDIA: **USB**
- ii For an FPS-10 flash prommer with a **LAN connection**, choose the following connection settings:
 - Media: **FPS-10 TCP/IP**
 - NET_SERV_NAME: Click **Scan....** Choose your own FPS-10 device based on the correct MAC address. See Serial No from the label attached to the bottom of your FPS-10.
 - PORT_NUM: Use the default value, and click **Next**.
 - PROTOCOL_FAMILY: Use the default value, and click **Next**.
 - SOCKET TYPE: Use the default value, and click **Next**.
 - TX_BUFFER_SIZE: Use the default value, and click **Next**.
 - RX_BUFFER_SIZE: Use the default value, and click **Next**.
- iii For an FPS-8 flash prommer, choose the following connection settings:
 - Media: **FPS-8**
 - PORT_NUM: COM Port where FPS-8 is connected
 - COMBOX_DEF_MEDIA: **FBUS**

iv For a plain **USB connection**, choose the following connection settings:

Note: First connect the DKU-2 USB cable between the PC USB port and phone.

- Media: USB

5. To complete the configuration, click **Finish**.

6. Click the connection you want to activate. Use the up/down arrows located on the right hand side to move it on top of the list, then click **Apply**.

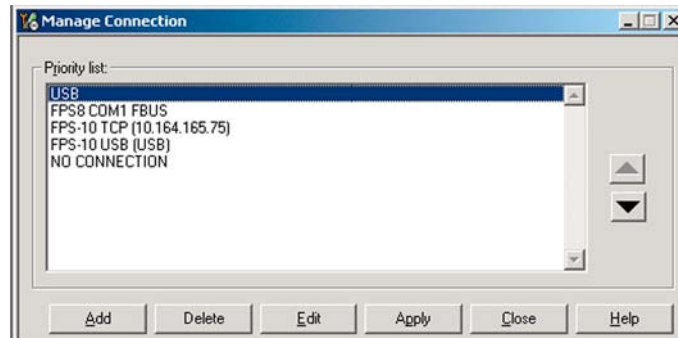


Figure 21 Connections list

The connection is activated, and it can be used after closing the *Manage Connection* window. The connection information is shown at the right hand bottom corner of the screen.



Figure 22 Connection information

7. To use the connection, connect the phone to your PC with correct service tools. Make sure the phone is switched on, and then choose **File**→**Scan Product**.

Results

The product support module information appears in the status bar:

V 2.0436v19.1 , 18-10-04 , RM-1 , (c) NOKIA. / V 2.39.126 , 18-10-04 , RM-1 , (c)

Figure 23 Product support module information (example from RM-1)

■ Installing flash support files for FPS-8 and FPS-10

Before you begin

- Install *Phoenix* service software.
- Install phone model specific data package for *Phoenix*.
- If you want to update the flash support files, they are delivered in the same installation package with *Phoenix* or newer *Phoenix* packages beginning from December 2004.

In case you want to update the MCU files, install the latest data package (see Technical Bulletins for information on the latest one).

Normally, it is enough to install *Phoenix* and the phone-specific data package because the installation always includes the latest flash update package files for FPS-8 and FPS-10.

- A separate installation package for flash support files is available. The files can be updated according to these instructions, if updates appear between *Phoenix* data package releases.

Context

If you are not using a separate installation package, you can skip this section and continue with [“Updating FPS-8 and FPS-10 flash prommer software,” \(page 3–23\)](#) after installing a new phone data package.

Steps

1. To begin the installation, double-click the flash update file (for example, *flash_update_03_183_0014.exe*).

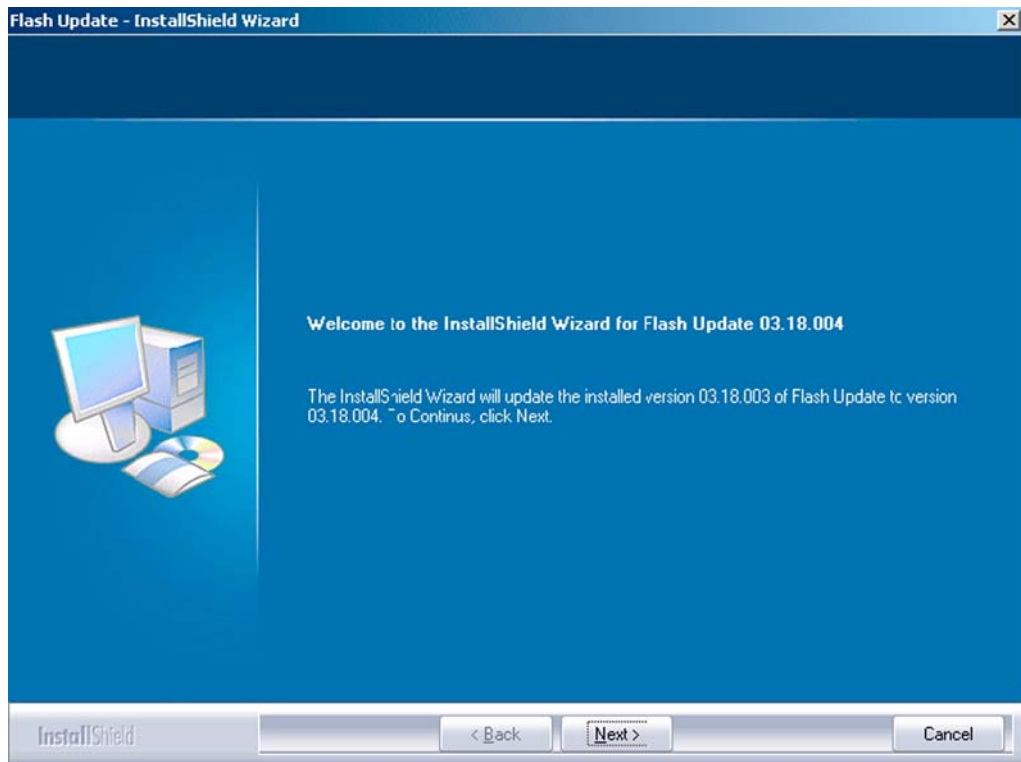


Figure 24 Flash update welcome dialog

If the same version of the flash update package already exists, and you want to reinstall it, the previous package is first uninstalled.

Restart installation again after the uninstallation.

2. If you try to downgrade the existing version to older ones, the setup will be aborted. If there is a need to downgrade the version, uninstall newer files manually from the **Windows Control Panel**, and then rerun the installation.



Figure 25 Flash installation interrupted

- If an older version exists on your PC and it needs to be updated, click **Next** to continue installation.
3. It is recommended to install the files to the default destination folder *C:\Program Files\Nokia\Phoenix*. To continue, click **Next**.

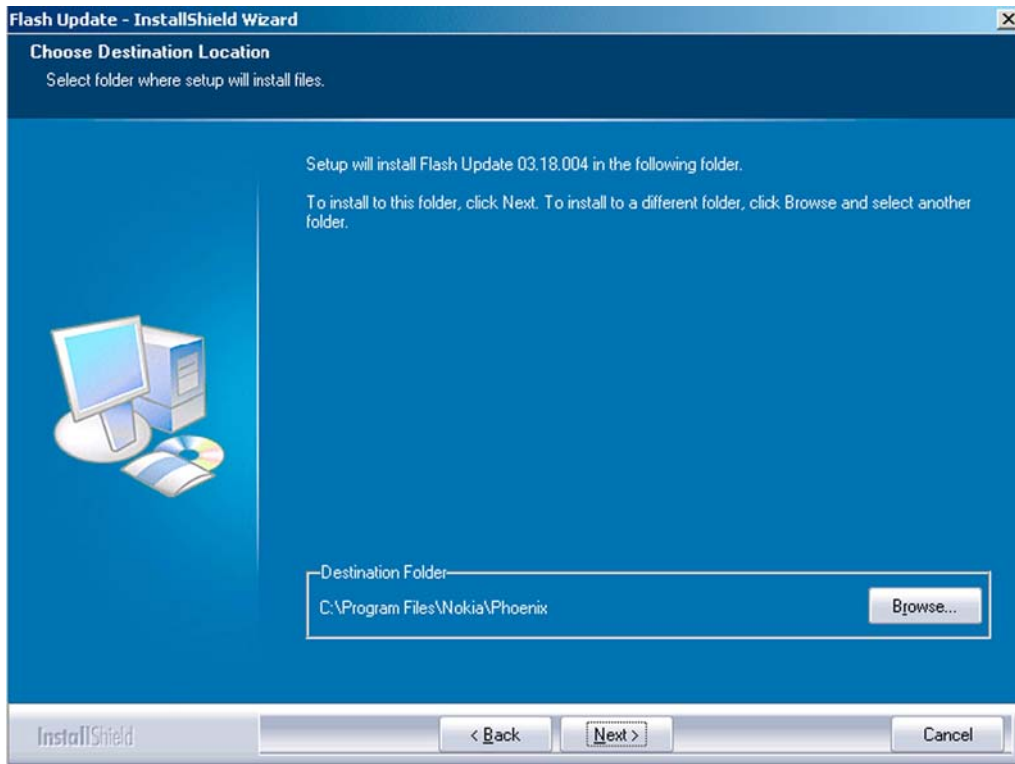


Figure 26 Flash destination folder

When installing the flash update files for the first time, you may choose another location by selecting **Browse** (not recommended).

4. To complete the installation procedure, click **Finish** .

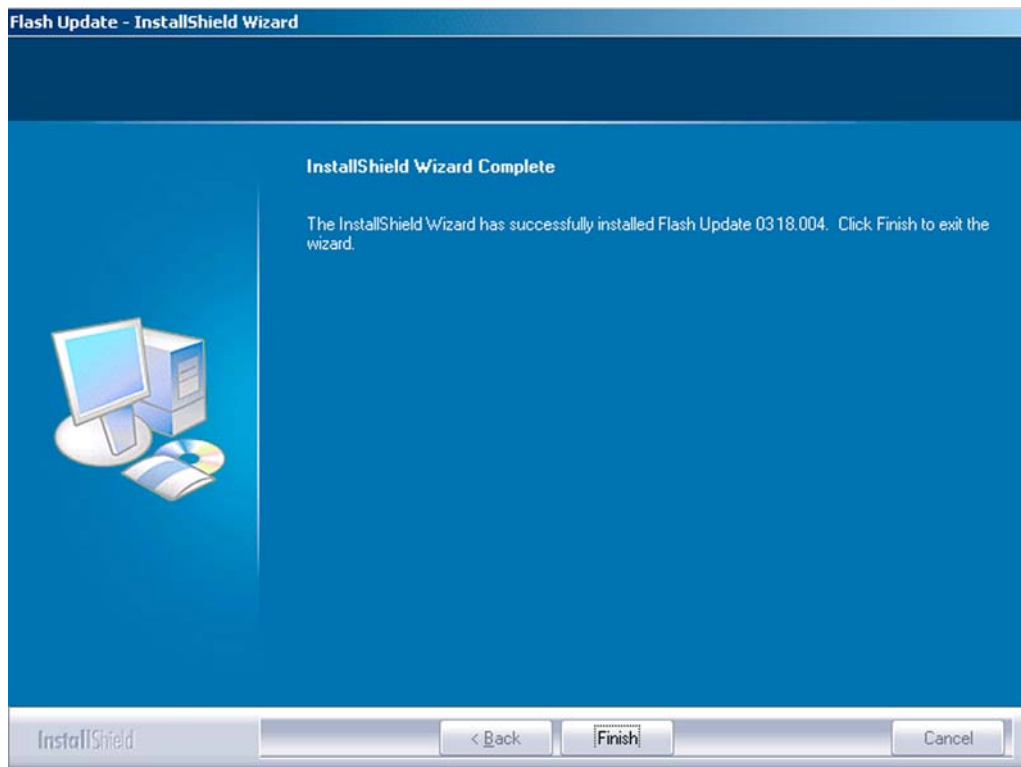


Figure 27 Finish flash update

Next action

FPS-8 and FPS-10 flash prommers must be updated using *Phoenix*.

■ Updating FPS-8 and FPS-10 flash prommer software

Steps

1. Start *Phoenix* service software, and log in.
2. Choose the correct connection for your flash prommer: **File**→**Manage Connections...**
3. Choose **Flashing**→**Prommer maintenance** .

4. To update the **FPS-8/FPS-10** software, click **Update**, and select the appropriate file *fps8upd.ini* (for FPS-8) or *fpsxupd.ini* (for FPS-10) from *C:\Program Files\Nokia\Phoenix\Flash*.

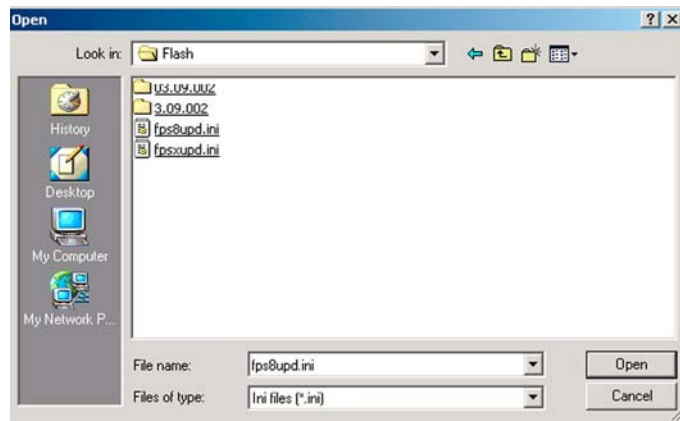


Figure 28 Flash directory window

Tip: All files can be loaded separately to the prommer used. To do this, click the right mouse button in the *Flash Box Files* pane and select the file type(s) to be loaded.

5. Click **OK**.

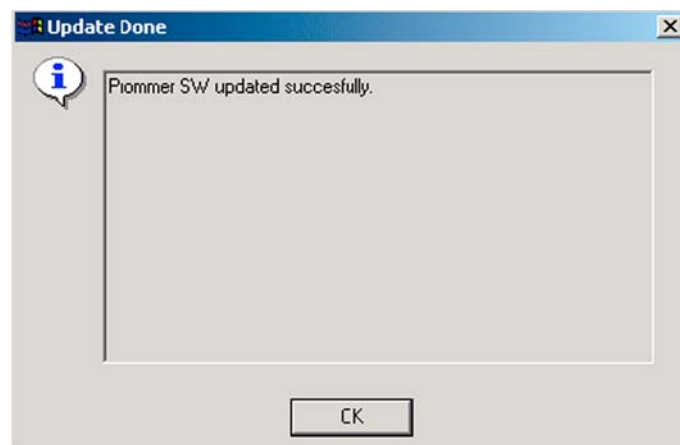


Figure 29 Prommer software update finished

6. To close the *Prommer Maintenance* window, click **Close**.

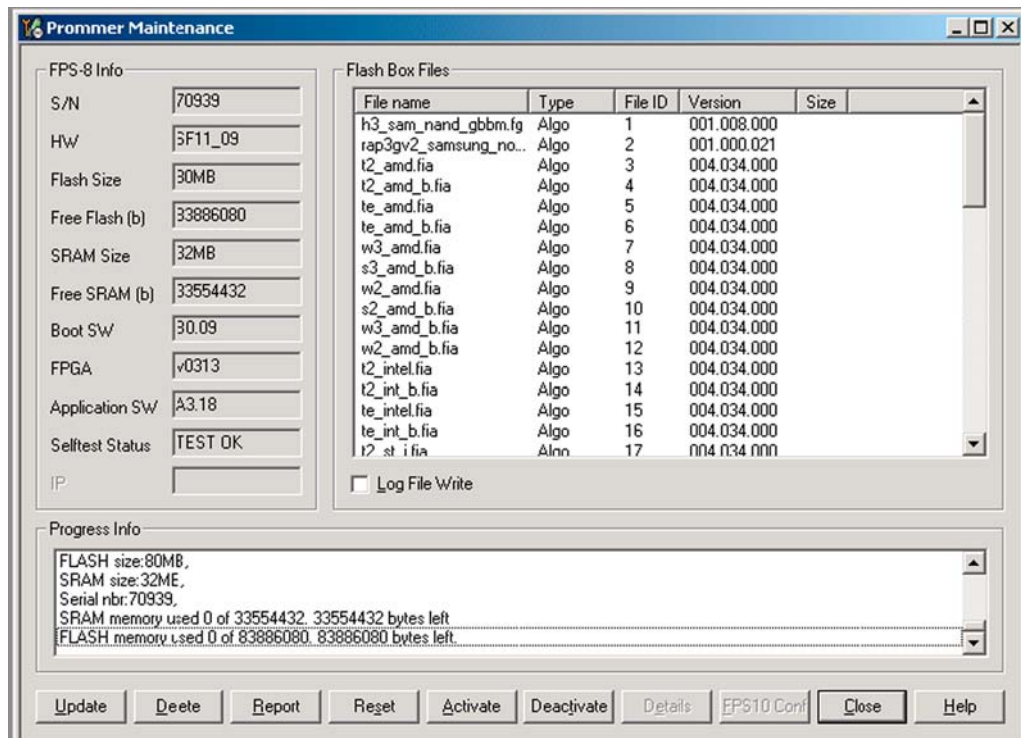


Figure 30 Prommer Maintenance window

■ Activating FPS-8

Context

Before FPS-8 can be successfully used for phone programming, it must first be activated.

First fill in the *FPS-8 activation request* sheet in the FPS-8 sales package, and follow the instructions given.

When activation file is received (for example, *00000.in*), copy it to the *C:\ProgramFiles\Nokia\Phoenix\BoxActivation* directory on your computer (this directory is created when *Phoenix* is installed).

Steps

1. Start *Phoenix* service software.
2. Choose **Flashing**→**Prommer Maintenance**.
3. In the *Prommer Maintenance* window, click **Activate**.
4. To find the activation file, click **Browse**.

5. To activate the prommer, select the activation file and click **Open**.

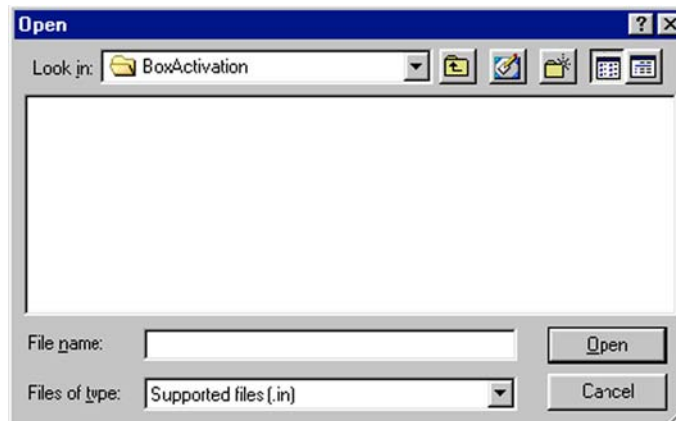


Figure 31 Box activation

6. To complete the activation, restart FPS-8.

■ Deactivating FPS-8

Context

If there is, for example, a need to send the FPS-8 box for repair, it must be deactivated first.

Steps

1. Start *Phoenix* service software.
2. Choose **Flashing**→**Prommer Maintenance** .
3. In the *Prommer Maintenance* window, click **Deactivate**.
4. To confirm the deactivation, click **Yes**.

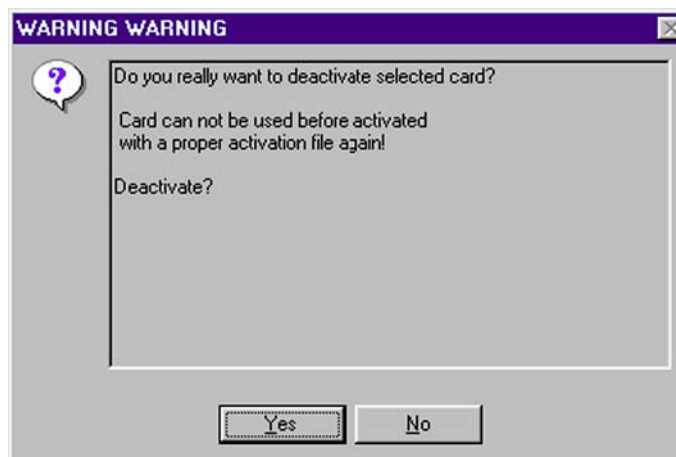


Figure 32 Deactivation warning

The box is deactivated.

5. To complete the deactivation, restart FPS-8.

4 — Service Tools and Service Concepts

(This page left intentionally blank.)

Table of Contents

Service tools.....	4-5
CA-31D.....	4-5
CA-35S.....	4-5
CA-53.....	4-5
CU-4.....	4-6
FLS-4S.....	4-7
FPS-10.....	4-7
FS-6.....	4-7
JBT-9.....	4-8
MJ-76.....	4-8
PCS-1.....	4-8
PKD-1.....	4-8
RF shield box.....	4-9
RJ-104.....	4-9
RJ-114.....	4-9
RJ-56.....	4-9
RJ-73.....	4-9
RJ-88.....	4-10
SA-92.....	4-10
SPS-1.....	4-10
SRT-6.....	4-10
SS-45.....	4-11
SS-46.....	4-11
SS-51.....	4-11
SS-62.....	4-7
ST-21.....	4-11
ST-22.....	4-12
ST-37.....	4-12
ST-41.....	4-12
ST-42.....	4-12
ST-44.....	4-12
SX-4.....	4-13
XCS-4.....	4-13
XRF-1.....	4-13
Service concepts.....	4-14
Flash concept with FPS-10.....	4-14
MJ-76 module jig concept.....	4-15
POS (Point of Sale) flash concept.....	4-16
RF testing and BB testing.....	4-17
CU-4 flash concept with FPS-10.....	4-18
Service concept for RF/BB testing and tuning.....	4-19
LAN connection flash concept.....	4-20




List of Figures

Figure 33 Basic flash concept with FPS-10.....	4-14
Figure 34 MJ-76 module jig service concept.....	4-15
Figure 35 POS flash concept.....	4-16
Figure 36 RF testing and BB testing.....	4-17
Figure 37 CU-4 flash concept with FPS-10.....	4-18

Figure 38 Service concept for RF/BB testing and tuning.....4-19
Figure 39 LAN connection flash concept.....4-20

■ **Service tools**

The table below gives a short overview of service tools that can be used for testing, error analysis and repair of product RM-78, refer to various concepts.

	CA-31D	USB cable	
<p>The CA-31D USB cable is used to connect FPS-10 or FPS-11 to a PC. It is included in the FPS-10 and FPS-11 sales packages.</p>			
	CA-35S	Power cable	
<p>CA-35S is a power cable for connecting, for example, the FPS-10 flash prommer to the Point-Of-Sales (POS) flash adapter.</p>			
	CA-53	USB connectivity cable	
<p>USB to Pop-Port™ connector cable.</p>			



CU-4	Control unit	
------	--------------	--

CU-4 is a general service tool used with a module jig and/or a flash adapter. It requires an external 12 V power supply.

The unit has the following features:

- software controlled via USB
- EM calibration function
- Forwards FBUS/Flashbus traffic to/from terminal
- Forwards USB traffic to/from terminal
- software controlled BSI values
- regulated VBATT voltage
- 2 x USB2.0 connector (Hub)
- FBUS and USB connections supported

When using CU-4, note the special order of connecting cables and other service equipment:




Instructions





- 1 Connect a service tool (jig, flash adapter) to CU-4.
- 2 Connect CU-4 to your PC with a USB cable.
- 3 Connect supply voltage (12 V)
- 4 Connect an FBUS cable (if necessary).
- 5 Start Phoenix service software.




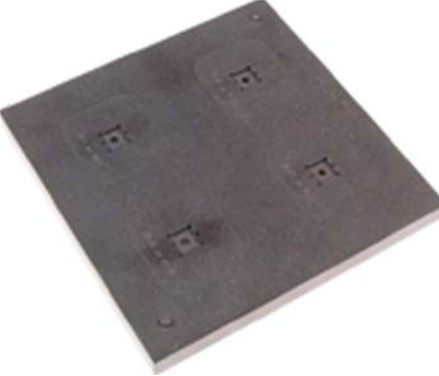







Note: Phoenix enables CU-4 regulators via USB when it is started.






Reconnecting the power supply requires a Phoenix restart.

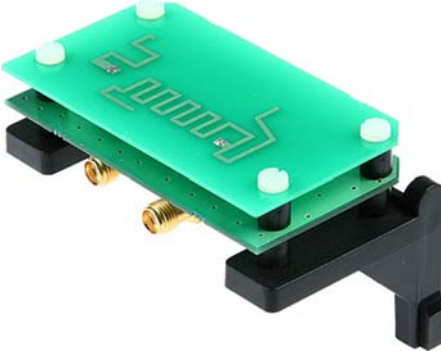




	FLS-45	Flash device	
<p>FLS-45 is a dongle and flash device incorporated into one package, developed specifically for POS use.</p>			
	FPS-10	Flash prommer	
<p>FPS-10 interfaces with:</p> <ul style="list-style-type: none"> • PC • Control unit • Flash adapter • Smart card <p>FPS-10 flash prommer features:</p> <ul style="list-style-type: none"> • Flash functionality for BB5 and DCT-4 terminals • Smart Card reader for SX-2 or SX-4 • USB traffic forwarding • USB to FBUS/Flashbus conversion • LAN to FBUS/Flashbus and USB conversion • Vusb output switchable by PC command <p>FPS-10 sales package includes:</p> <ul style="list-style-type: none"> • FPS-10 prommer • Power Supply with 5 country specific cords • USB cable 			
	FS-6	Flash adapter	
<ul style="list-style-type: none"> • FS-6 is equipped with a clip interlock system • provides standardised interface towards Control Unit • provides RF connection using coupler • multiplexing between USB and FBUS media, controlled by VUSB 			




	<p>JBT-9</p>	<p>Bluetooth test and interface box (sales package)</p>	
<p>The JBT-9 test box is a generic service device used to perform Bluetooth bit error rate (BER) testing, and establishing cordless FBUS connection via Bluetooth. An ACP-8x charger is needed for BER testing and an AXS-4 cable in case of cordless interface usage testing .</p> <p>Sales package includes:</p> <ul style="list-style-type: none"> • JBT-9 test box • Installation and warranty information 			
	<p>MJ-76</p>	<p>Module jig</p>	
<p>MJ-76 is meant for component level troubleshooting.</p> <p>The jig includes an RF interface for GSM, WCDMA and Bluetooth. In addition, it has the following features:</p> <ul style="list-style-type: none"> • Provides mechanical interface with the engine module • Provides galvanic connection to all needed test pads in module • Multiplexing between USB and FBUS media, controlled by Vusb • MMC interface • Duplicated SIM connector • Connector for control unit • Access for Pop-Port™ system connector 			
	<p>PCS-1</p>	<p>Power cable</p>	
<p>The PCS-1 power cable (DC) is used with a docking station, a module jig or a control unit to supply a controlled operating voltage.</p>			
	<p>PKD-1</p>	<p>SW security device</p>	
<p>SW security device is a piece of hardware enabling the use of the service software when connected to the parallel (LPT) port of the PC. Without the device, it is not possible to use the service software. Printer or any such device can be connected to the PC through the device if needed.</p>			

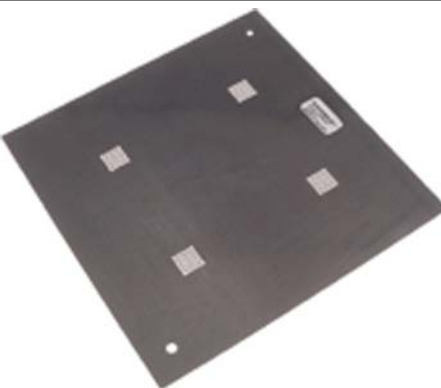		RF shield box	
<p>Because the WCDMA network disturbs the RX side testing of the WCDMA phone and the Tx signal of the WCDMA phone can severely disturb the WCDMA network, a shield box is needed in all testing, tuning and fault finding which requires WCDMA RF signal.</p> <p>The shield box is not an active device, it contains only passive filtering components for RF attenuation.</p>			
	RJ-104	BTHFM rework jig	
<p>RJ-104 is a rework jig used when servicing the BTHFM module. It is used together with rework stencil ST-37.</p>			
	RJ-114	Rework jig	
<p>RJ-114 is a rework jig used with ST-41.</p>			
	RJ-56	Rework jig	
<p>RJ-56 is a rework jig used with ST-21.</p>			
	RJ-73	Rework jig	
<p>RJ-73 is a rework jig used with ST-42.</p>			

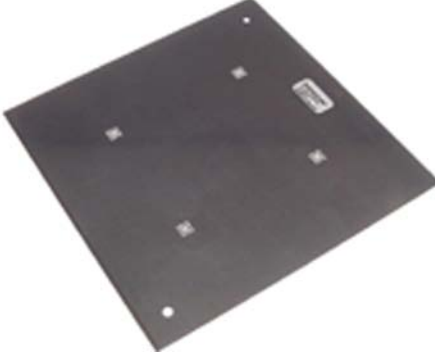	RJ-88	Soldering jig																			
<p>RJ-88 is a soldering jig used for soldering and as a rework jig for the engine module.</p>																					
	SA-92	RF coupler																			
<p>SA-92 is an RF coupler for WCDMA and GSM RF testing. It is used together with the product-specific flash adapter. The following table shows attenuations from the antenna pads of the mobile terminal to the SMA connectors of SA-92:</p>																					
<ul style="list-style-type: none"> <table border="1" data-bbox="603 696 1453 1144"> <thead> <tr> <th>Frequency</th> <th>Att. (dB)</th> </tr> </thead> <tbody> <tr> <td>GSM900 TX</td> <td>2,7 dB +/- 0,5 dB</td> </tr> <tr> <td>GSM900 RX</td> <td>2,6 dB +/- 0,7 dB</td> </tr> <tr> <td>GSM1800 TX</td> <td>8,2 dB +/- 2,0 dB</td> </tr> <tr> <td>GSM1800 RX</td> <td>5,3 dB +/- 0,4 dB</td> </tr> <tr> <td>GSM1900 TX</td> <td>5,1 dB +/- 0,1dB</td> </tr> <tr> <td>GSM1900 RX</td> <td>5,2 dB +/- 0,6 dB</td> </tr> <tr> <td>WCDMA2100 TX</td> <td>10,0 dB +/- 0,9dB</td> </tr> <tr> <td>WCDMA2100 RX</td> <td>6,8 dB +/- 0,4 dB</td> </tr> </tbody> </table> 				Frequency	Att. (dB)	GSM900 TX	2,7 dB +/- 0,5 dB	GSM900 RX	2,6 dB +/- 0,7 dB	GSM1800 TX	8,2 dB +/- 2,0 dB	GSM1800 RX	5,3 dB +/- 0,4 dB	GSM1900 TX	5,1 dB +/- 0,1dB	GSM1900 RX	5,2 dB +/- 0,6 dB	WCDMA2100 TX	10,0 dB +/- 0,9dB	WCDMA2100 RX	6,8 dB +/- 0,4 dB
Frequency	Att. (dB)																				
GSM900 TX	2,7 dB +/- 0,5 dB																				
GSM900 RX	2,6 dB +/- 0,7 dB																				
GSM1800 TX	8,2 dB +/- 2,0 dB																				
GSM1800 RX	5,3 dB +/- 0,4 dB																				
GSM1900 TX	5,1 dB +/- 0,1dB																				
GSM1900 RX	5,2 dB +/- 0,6 dB																				
WCDMA2100 TX	10,0 dB +/- 0,9dB																				
WCDMA2100 RX	6,8 dB +/- 0,4 dB																				
	SPS-1	Soldering Paste Spreader																			
	SRT-6	Opening tool																			

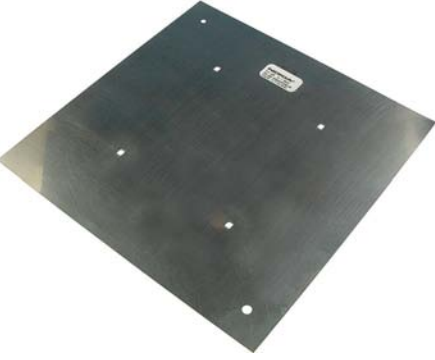	SS-45	Front camera removal tool	
<p>The front camera removal tool SS-45 is used to remove/attach the front camera module from/to the socket.</p>			
	SS-46	Interface adapter	
<p>SS-46 acts as an interface adapter between a product-specific flash adapter and FPS-10.</p>			
	SS-51	Front camera removal tool	
<p>The front camera removal tool SS-51 is used to remove/attach a front camera module from/to the camera socket of the phone PWB.</p>			
	SS-62	Generic flash adapter base for BB5	
<ul style="list-style-type: none"> • generic base for flash adapters and couplers • SS-62 equipped with a clip interlock system • provides standardised interface towards Control Unit • provides RF connection using galvanic connector or coupler • multiplexing between USB and FBUS media, controlled by VUSB 			
	ST-21	Rework stencil	
<p>ST-21 is a rework stencil used with rework jig RJ-56.</p>			

	ST-22	Rework stencil	
ST-22 is a rework stencil used with rework jig RJ-57.			
	ST-37	BTHFM rework stencil	
ST-37 stencil is used with RJ-104 BTHFM rework jig.			
	ST-41	Rework stencil	
ST-41 is a rework stencil used with rework jig RJ-114.			
	ST-42	Rework stencil	
ST-42 is a rework stencil used with rework jig RJ-73.			
	ST-44	Rework stencil	
ST-44 is a rework stencil used with rework jig RJ-57.			

	SX-4	Smart card	
<p>SX-4 is a BB5 security device used to protect critical features in tuning and testing.</p> <p>SX-4 is also needed together with FPS-10 when DCT-4 phones are flashed.</p>			
	XCS-4	Modular cable	
<p>XCS-4 is a shielded (one specially shielded conductor) modular cable for flashing and service purposes.</p>			
	XRF-1	RF cable	
<p>The RF cable is used to connect, for example, a module repair jig to the RF measurement equipment.</p> <p>SMA to N-Connector ca. 610mm.</p> <p>Attenuation for:</p> <ul style="list-style-type: none"> • GSM850/900: 0.3+-0.1 dB • GSM1800/1900: 0.5+-0.1 dB • WLAN: 0.6+-0.1dB 			

■ Service concepts

Flash concept with FPS-10


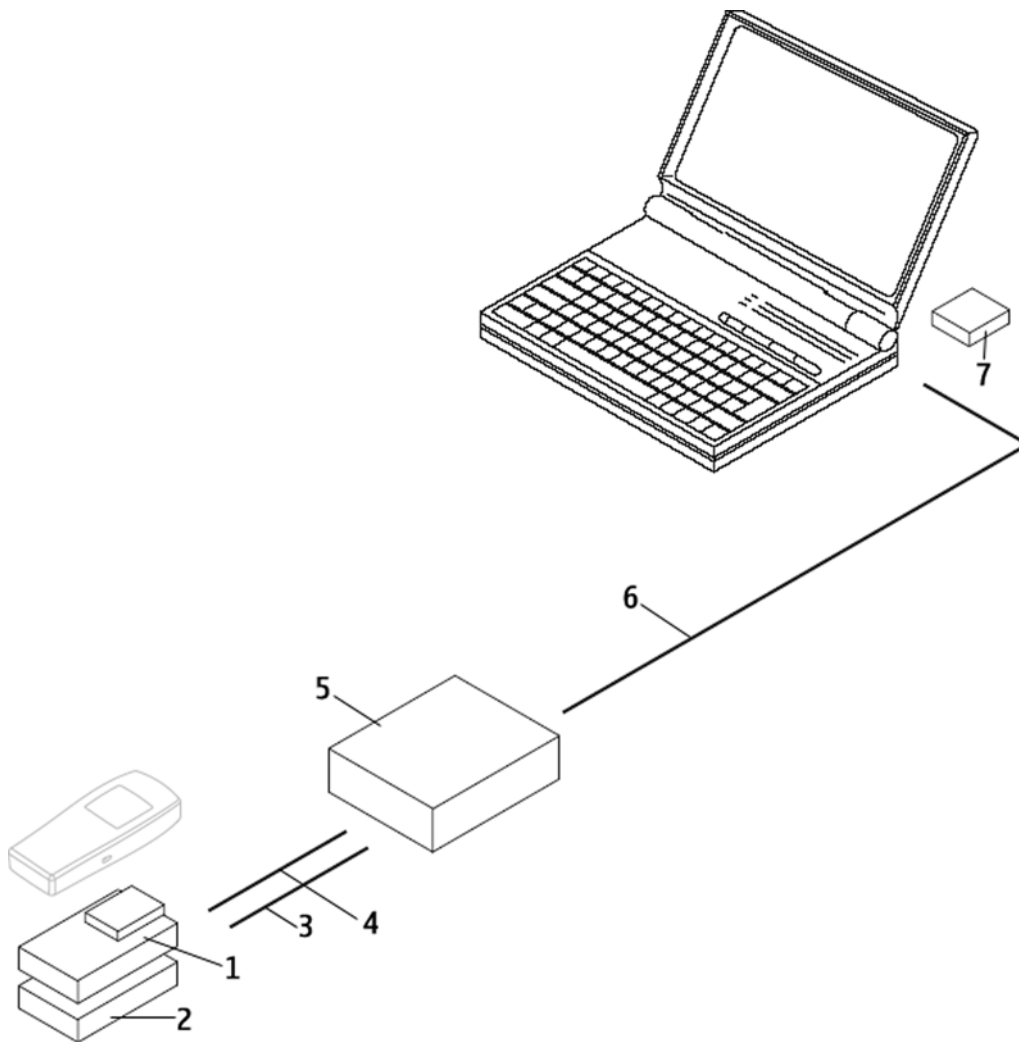


Figure 33 Basic flash concept with FPS-10

Note: FPS-8 concept can also be used for flashing.

Item	Type	Description
1	FS-6	Flash adapter
2	SS-46	Interface adapter
3	CA-35S	Power cable
4	XCS-4	Modular cable
5	FPS-10	Flash prommer box
6		Standard USB cable
7	PKD-1	SW security device

MJ-76 module jig concept

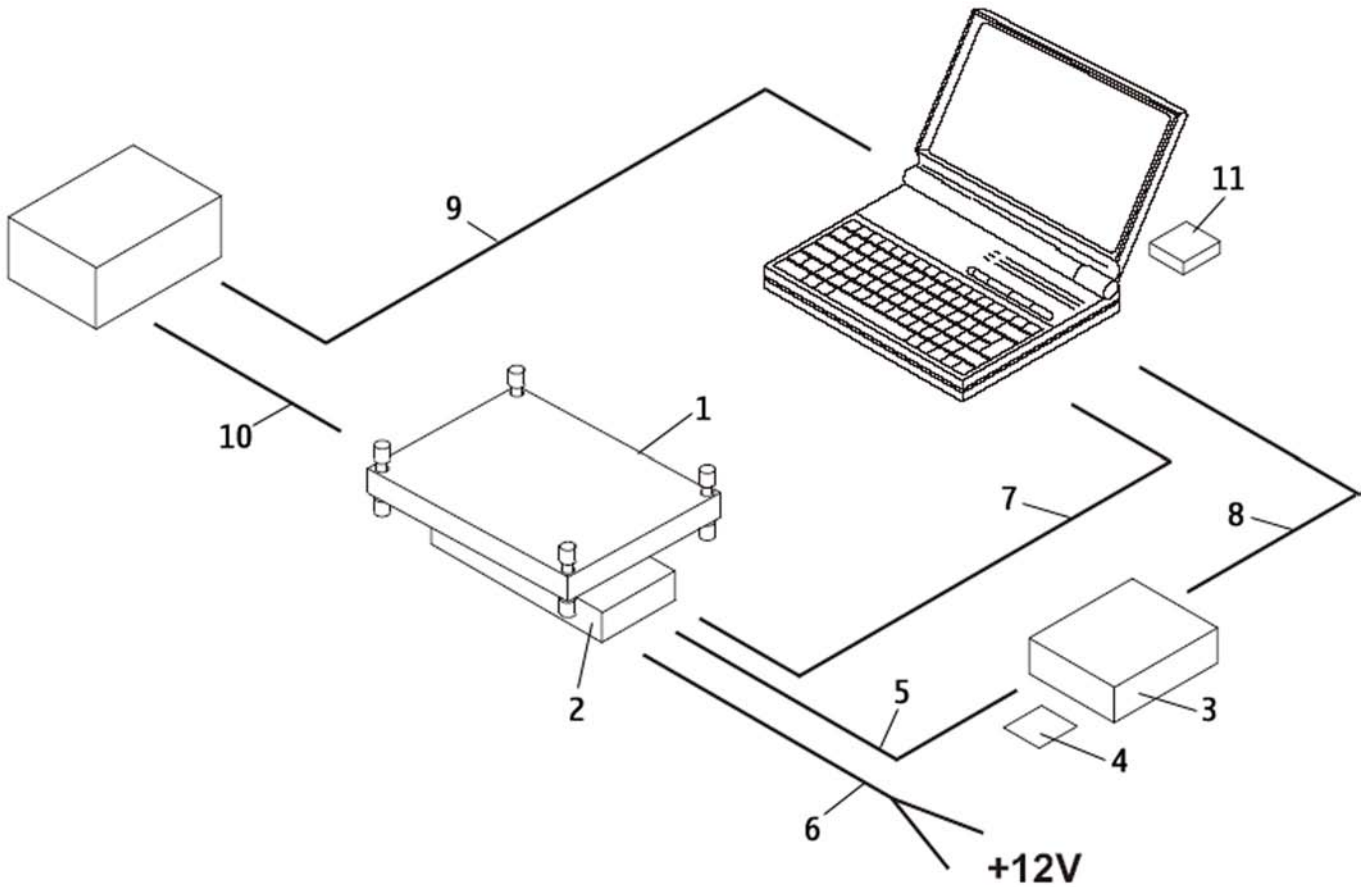

Legend

Module jig concept is meant for BB / RF testing + tuning and for flashing purposes.

Figure 34 MJ-76 module jig service concept

Item	Type	Description
1	MJ-76	Module jig
2	CU-4	Control unit
3	FPS-10	Flash prommer box
4	SX-4	Smart card
5	XCS-4	Modular cable
6	PCS-1	DC power cable
7		Standard USB cable
8		Standard USB cable
9		GPIB control cable
10	XRS-6	RF cable
11	PKD-1	SW security device

Item	Type	Description
12		RF shield box

Note: Item 12 not shown in the picture.

POS (Point of Sale) flash concept

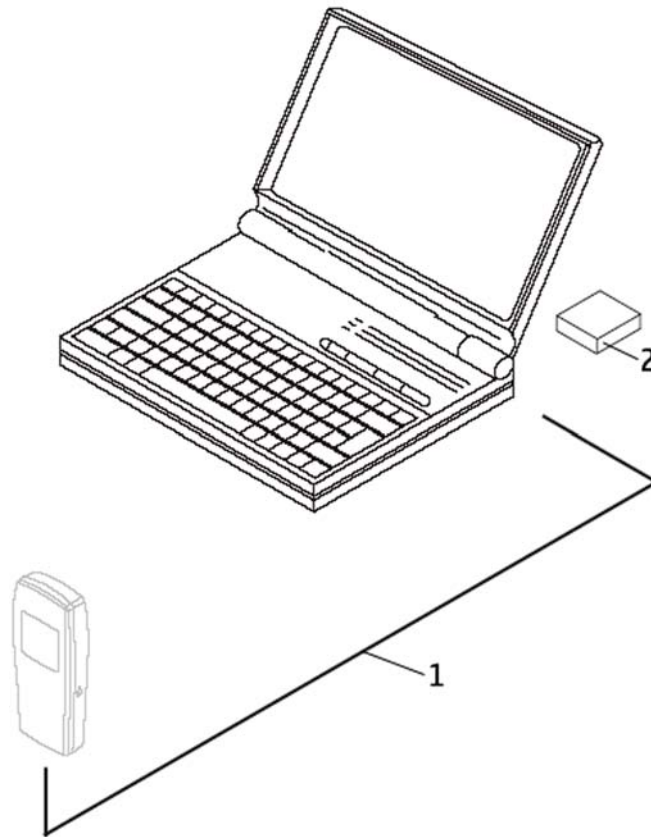


Figure 35 POS flash concept

Item	Type	Description
1	CA-53	USB connectivity cable
2	FLS-45	POS flash device

RF testing and BB testing

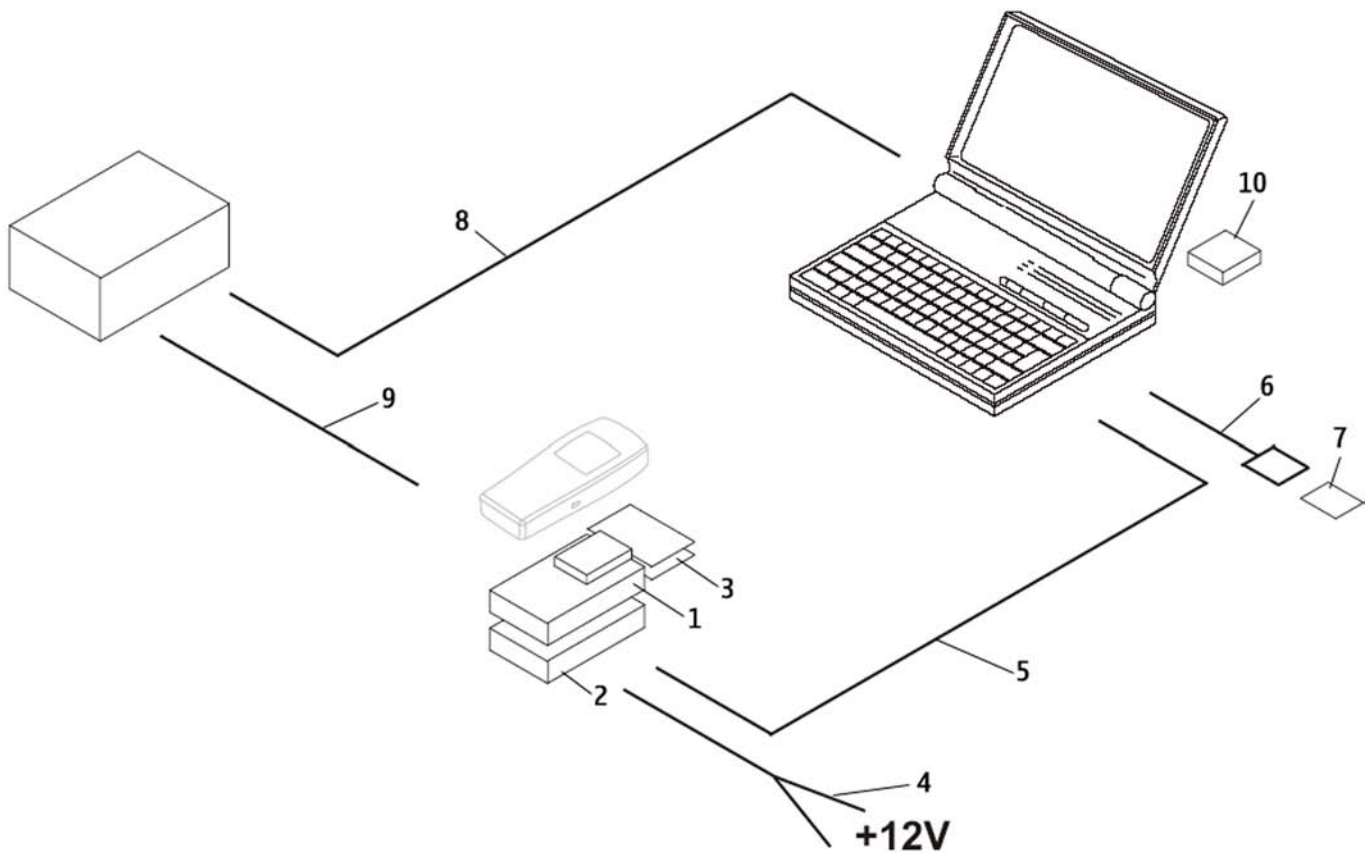


Figure 36 RF testing and BB testing

Item	Type	Description
1	SS-62	Flash adapter base
	FS-6	Flash adapter
2	CU-4	Control unit
3	SA-92	RF coupler
4	PCS-1	Power cable
5		Standard USB cable
6		Standard USB cable + smart card reader
7	SX-4	Smart card
8		GPIB control cable
9	XRS-6	RF cable
10	PKD-1	SW security device
11		RF shield box

Note: Item 11 is not shown in the figure.

CU-4 flash concept with FPS-10

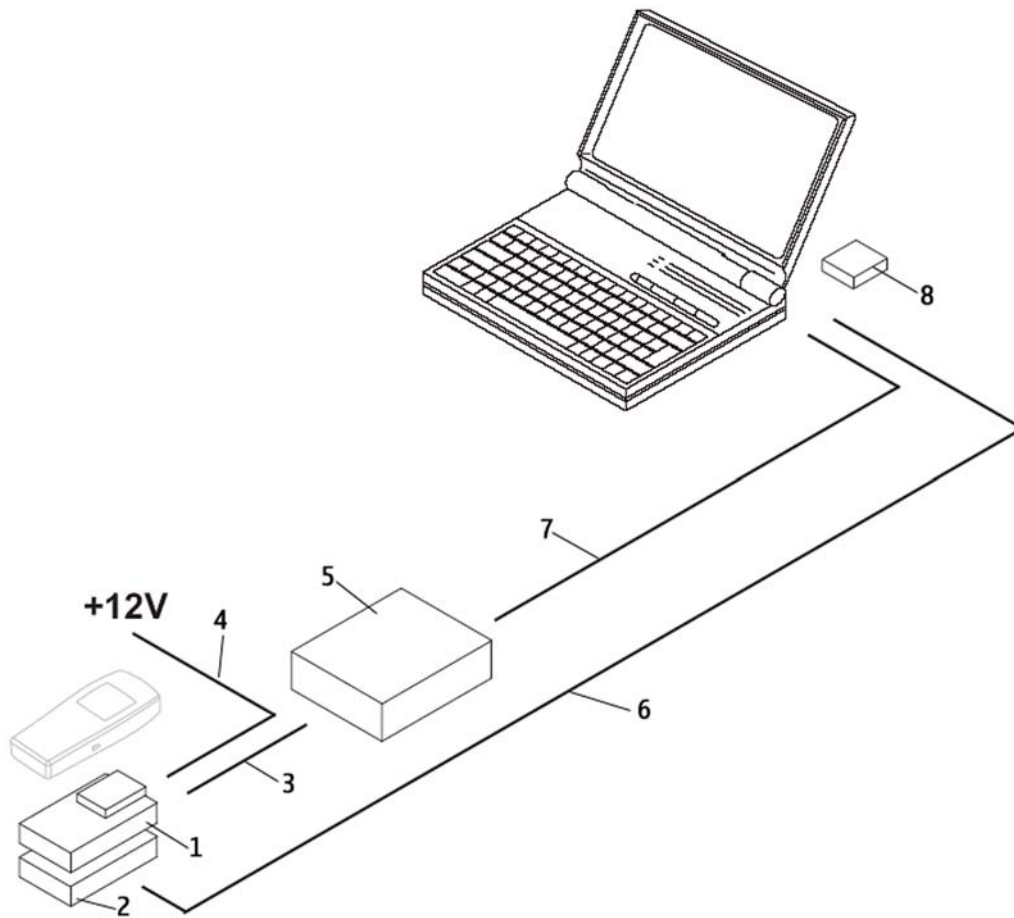


Figure 37 CU-4 flash concept with FPS-10

Note: FPS-8 concept can also be used for flashing.

Item	Type	Description
1	SS-62 FS-6	Flash adapter base Flash adapter
2	CU-4	Control unit
3	XCS-4	Modular cable
4	PCS-1	Power cable
5	FPS-10	Flash prommer box
6		Standard USB cable
7		Standard USB cable
8	PKD-1	SW security device

Service concept for RF/BB testing and tuning

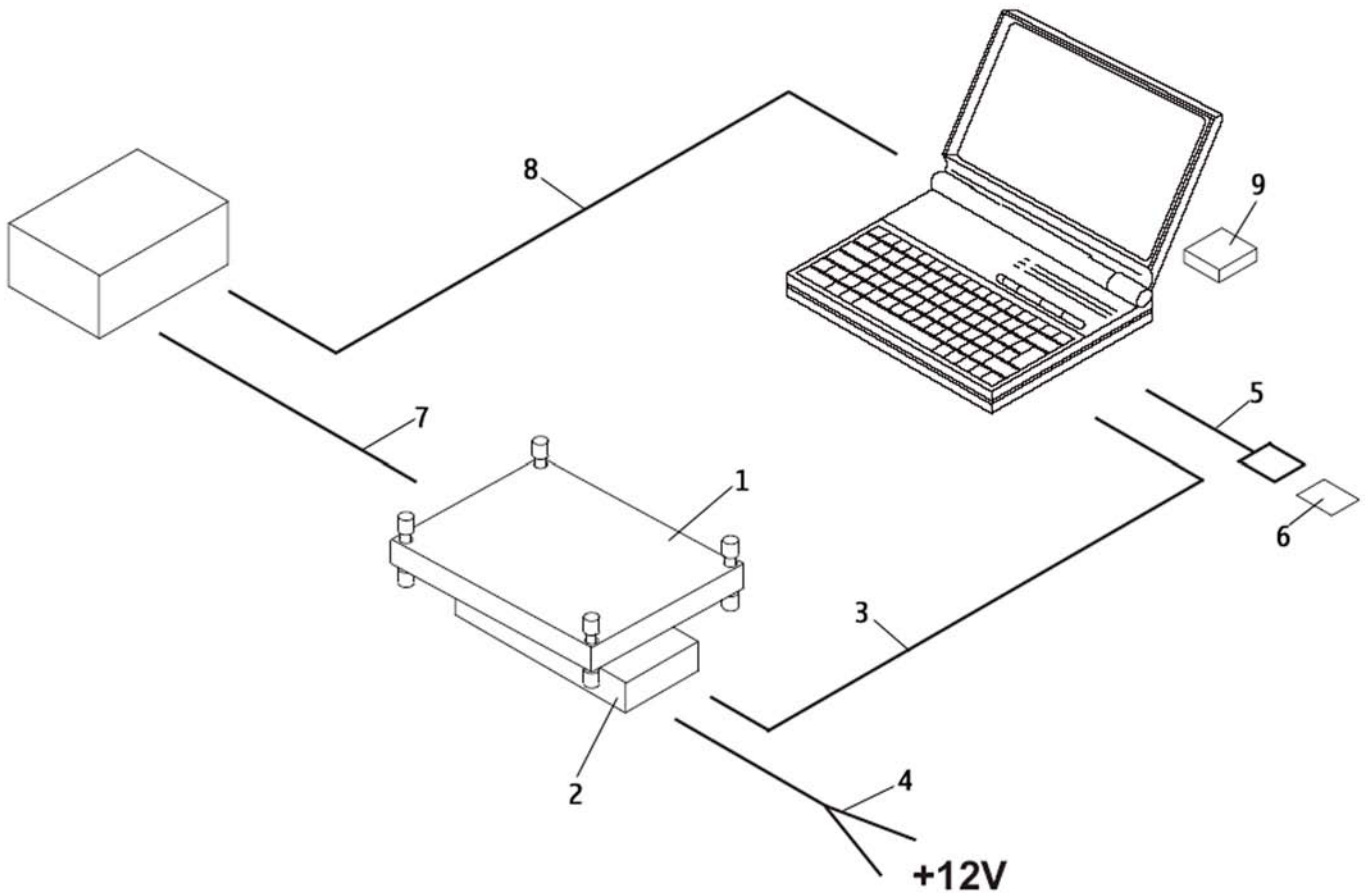


Figure 38 Service concept for RF/BB testing and tuning

Item	Type	Description
1	MJ-76	Module jig
2	CU-4	Control unit
3		Standard USB cable
4	PCS-1	DC power cable
5		Standard USB cable + smart card reader
6	SX-4	Smart card
7	XRS-6	RF cable
8		GPIB control cable
9	PKD-1	SW security device
10		RF shield box

Note: Item 10 not shown in the picture.

LAN connection flash concept

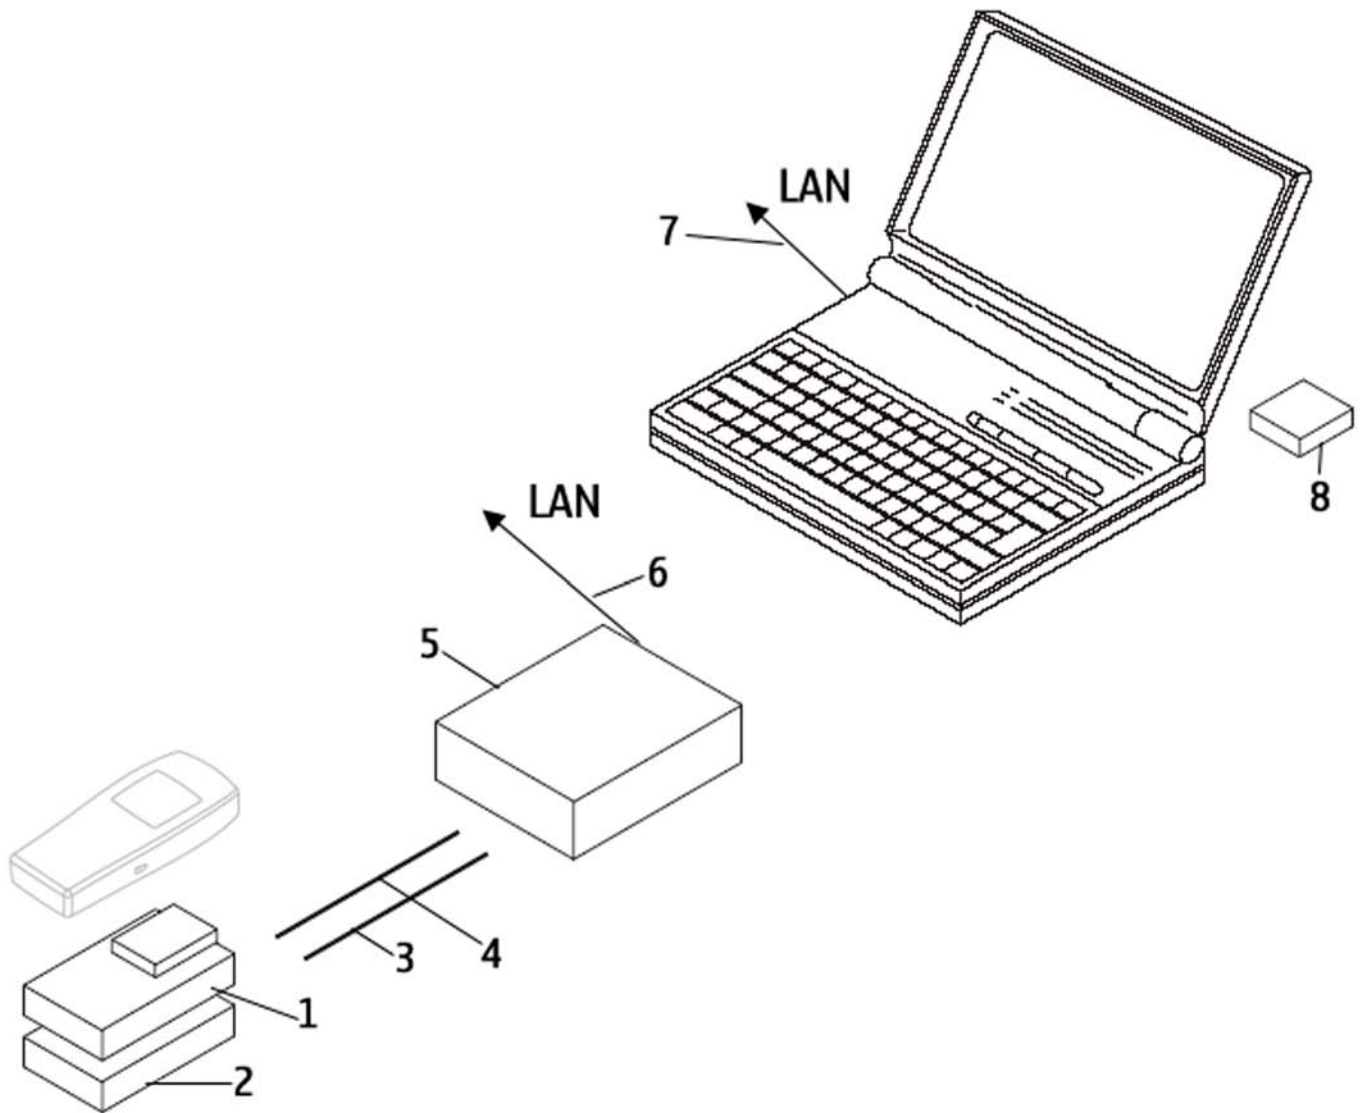


Figure 39 LAN connection flash concept

Item	Type	Description
1	SS-62 FS-6	Flash adapter base Flash adapter
2	SS-46	Interface adapter
3	CA-35S	Power cable
4	XCS-4	Modular cable
5	FPS-10	Flash promoter box
6		LAN cable
7		LAN cable
8	PKD-1	SW security device

5 — Disassembly and reassembly instructions

(This page left intentionally blank.)

Table of Contents

Disassembly instructions (Upper part).....	5-5
Reassembly instructions (Upper part).....	5-10
Disassembly instructions (Lower part).....	5-11
Reassembly instructions (Lower part).....	5-15

(This page left intentionally blank.)

■ Disassembly instructions (Upper part)

Steps

1. You need the following tools.



2. Protect the window with a plastic film



3. Protect the camera window with a plastic film.



4. Release the **B-cover**.



5. Remove the **Battery cover**. Ensure that no battery is inserted before you continue.



6. Shift out the unit. Release the clips of the top side first.



7. Slide along on both sides of the **A-cover** to release all clips.



8. Lift up the **A-cover**.



9. Protect the innerside window with a plastic film. Remove the **keymat** as shown.



10. Protect the LCD with a plastic film.



11. Shift together the unit. Lift up the glued **UI PWB assy** carefully with the SRT-6.



12. Lift the UI PWB together with the LCD module.



13. Carefully release the flex connector at one side first.



14. Now release the other side of the flex connector..



15. Take away the UI PWB assy.



16. Release the connector of the LCD module carefully while fixing the flex foil. Remove the LCD module now.



17. Separate the **LCD module** from the **Display metal shield**.




18. Release the **Camera guide assy** with the SRT-6.




19. Release the **VGA camera** with the SS-51. Fix the **Main flex** near the camera socket while removing the camera.



20. For assembly: **mind the correct positioning of the VGA camera**.

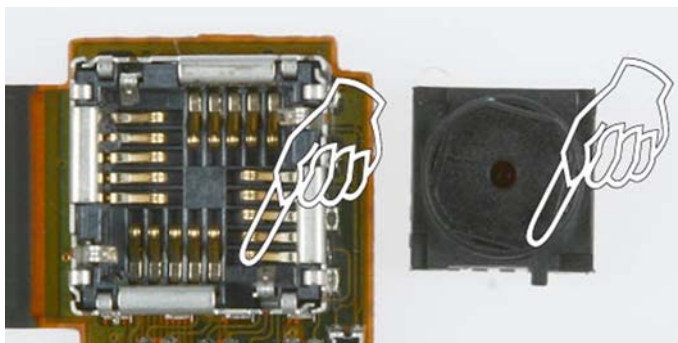

21. Shift the unit into mid position. Release the connector of the **main flex Assy**.

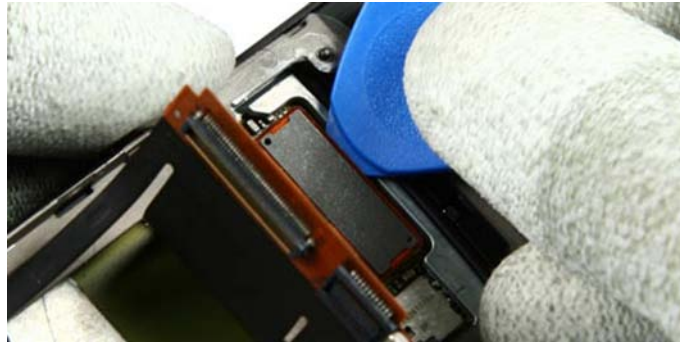

22. Slot the flex connector through the **C-cover Assy** carefully.



23. Lift the glued **Power switch** carefully.



■ Reassembly instructions (Upper part)

Steps

1. For reassembly, follow the Disassembly instructions, but *in reversed order*

Note: Pay special attention to step 20.

Note: For reassembly, ALWAYS USE NEW SCREWS.

■ Disassembly instructions (Lower part)

Steps

1. Open the **B-cover** by pressing it from the bottom side.



2. Ensure that no battery is inserted.



3. Unscrew all screws in the shown order.

Note: For assembly use the reverse order and a torque of 25 Ncm.



4. Once removed, the screws can't be used again.

Note: Always use new screws for assembly!




5. Release the clips of the **D-cover**.



6. Remove the D-cover.



7. Remove the SMIA Camera with the SS-45.

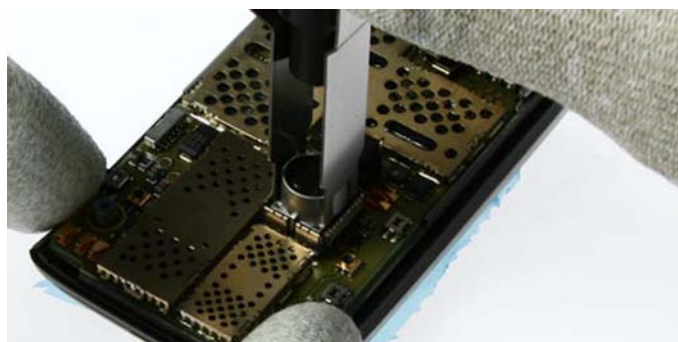

8. Mind the correct position for assembly.



9. Lift up the **Engine module**, but remember that the flex connector is still connected.



10. Open the flex connector carefully



11. Lever out the glued **Keymat assy.**



12. Ensure that no residue of adhesive remains.

Note: Always use new adhesive for assembly.



13. Remove the **DC jack** with the DC plug.



14. Release the **IHF label** with the SRT-6.



15. Remove the **IHF lid**.



16. Peel up the **IHF label** completely. Make sure that no residue remains.

Note: Always use a new IHF label for reassembly.

17. Lever out the **IHF speaker**.



18. Always remove the residues of the **IHF gasket**.

Note: Use a new IHF gasket for reassembly.



19. Ease out the **microphone** with a dental tool. Once removed, the microphone cannot be used again. ■

■ Reassembly instructions (Lower part)

Steps

1. For reassembly, follow the Disassembly instructions, but *in reversed order*

Note: Pay special attention to steps 18, 16, 12, 8, 4 and 3.

Note: For reassembly, ALWAYS USE NEW SCREWS.

(This page left intentionally blank.)

6 — BB Troubleshooting and Manual Tuning Guide

(This page left intentionally blank.)

Table of Contents

General troubleshooting.....	6-5
Dead or jammed device troubleshooting.....	6-6
General power checking.....	6-8
Golden eye troubleshooting.....	6-9
Charging troubleshooting.....	6-10
Flash programming fault troubleshooting.....	6-11
SD card troubleshooting.....	6-14
CMT SDRAM memory troubleshooting.....	6-15
CMT NOR flash fault troubleshooting.....	6-16
Power key troubleshooting.....	6-17
USB interface troubleshooting.....	6-18
SIM card troubleshooting.....	6-20
Main keyboard troubleshooting.....	6-21
Top keyboard troubleshooting.....	6-22
Slide switch.....	6-23
Certificate restoring for BB5.0 products.....	6-24
Display module troubleshooting.....	6-30
General instructions for display troubleshooting.....	6-30
Display fault troubleshooting.....	6-32
Display and top keyboard backlight troubleshooting.....	6-33
Main keyboard backlight troubleshooting.....	6-33
Audio troubleshooting.....	6-34
Audio troubleshooting test instructions.....	6-34
Internal earpiece troubleshooting.....	6-38
Internal microphone troubleshooting.....	6-39
IHF troubleshooting.....	6-40
External microphone troubleshooting.....	6-41
External earpiece troubleshooting.....	6-42
Vibra troubleshooting.....	6-43
Baseband manual tuning guide.....	6-43
Energy management calibration.....	6-43

List of Tables

Table 10 Display module troubleshooting cases.....	6-30
Table 11 Pixel defects.....	6-30
Table 12 Calibration value limits.....	6-44

List of Figures

Figure 40 Main troubleshooting tree.....	6-5
Figure 41 Flashing pic 1. Take single trig measurement for the rise of the BSI signal.....	6-12
Figure 42 Flashing pic 2. Take single trig measurement for the rise of the BSI signal.....	6-13
Figure 43 SD card initialization from pin J3206.....	6-15
Figure 44 CMT NOR flash troubleshooting.....	6-16
Figure 45 NOR CLK from J3004.....	6-16
Figure 46 USB 1: D-TXD (PopPort TM pin 6) and D+RXD (PopPort TM pin 7) voltage levels when USB is connected.	6-19
Figure 47 SIM interface signals.....	6-20
Figure 48 Slide switch and test point.....	6-24

Figure 49 Single-ended output waveform of the Ext_in_HP_out measurement when earpiece is connected.6-36

Figure 50 Differential output waveform of the Ext_in_IHF_out out loop measurement when speaker is connected.....6-37

Figure 51 Single-ended output waveform of the HP_in_Ext_out loop when microphone is connected.....6-37

■ General troubleshooting

For practical reasons troubleshooting is divided in three different chapters:

- Baseband troubleshooting
- Camera troubleshooting
- RF troubleshooting including FM Radio and Bluetooth



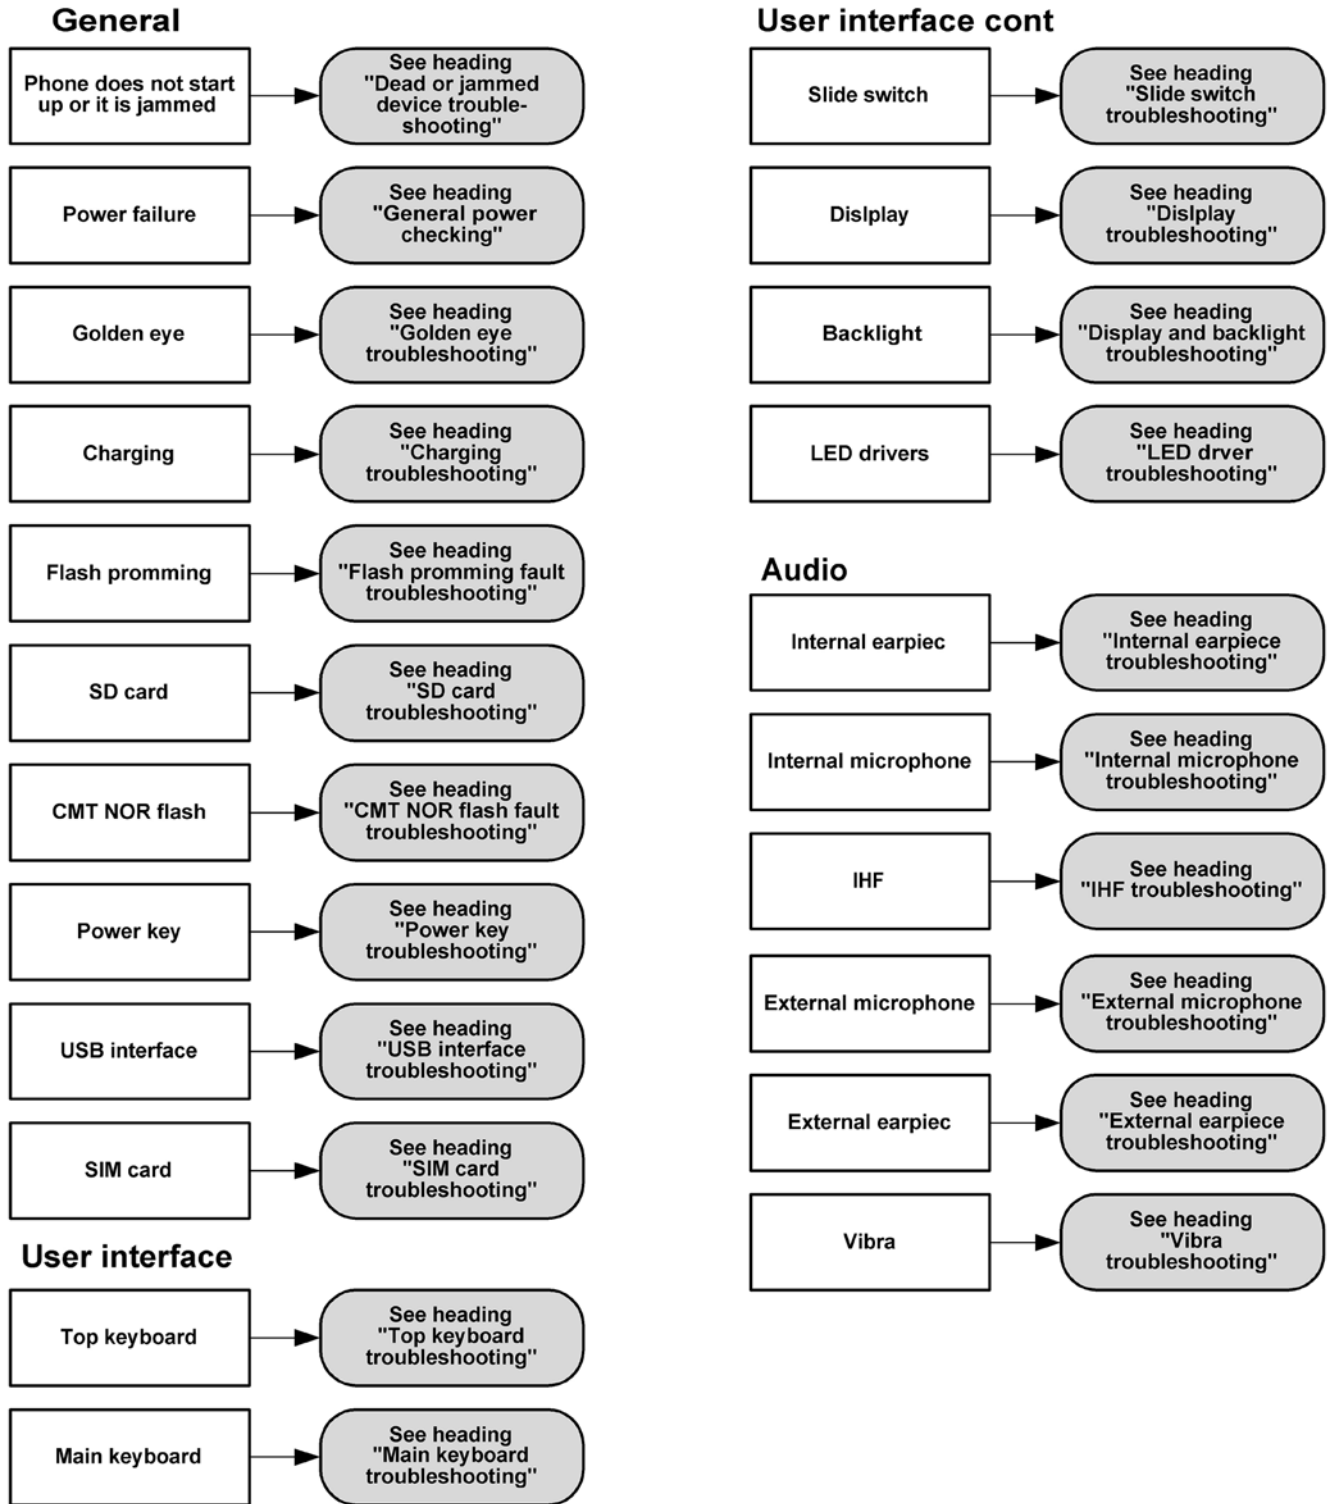


Figure 40 Main troubleshooting tree

■ **Dead or jammed device troubleshooting**

Troubleshooting flow

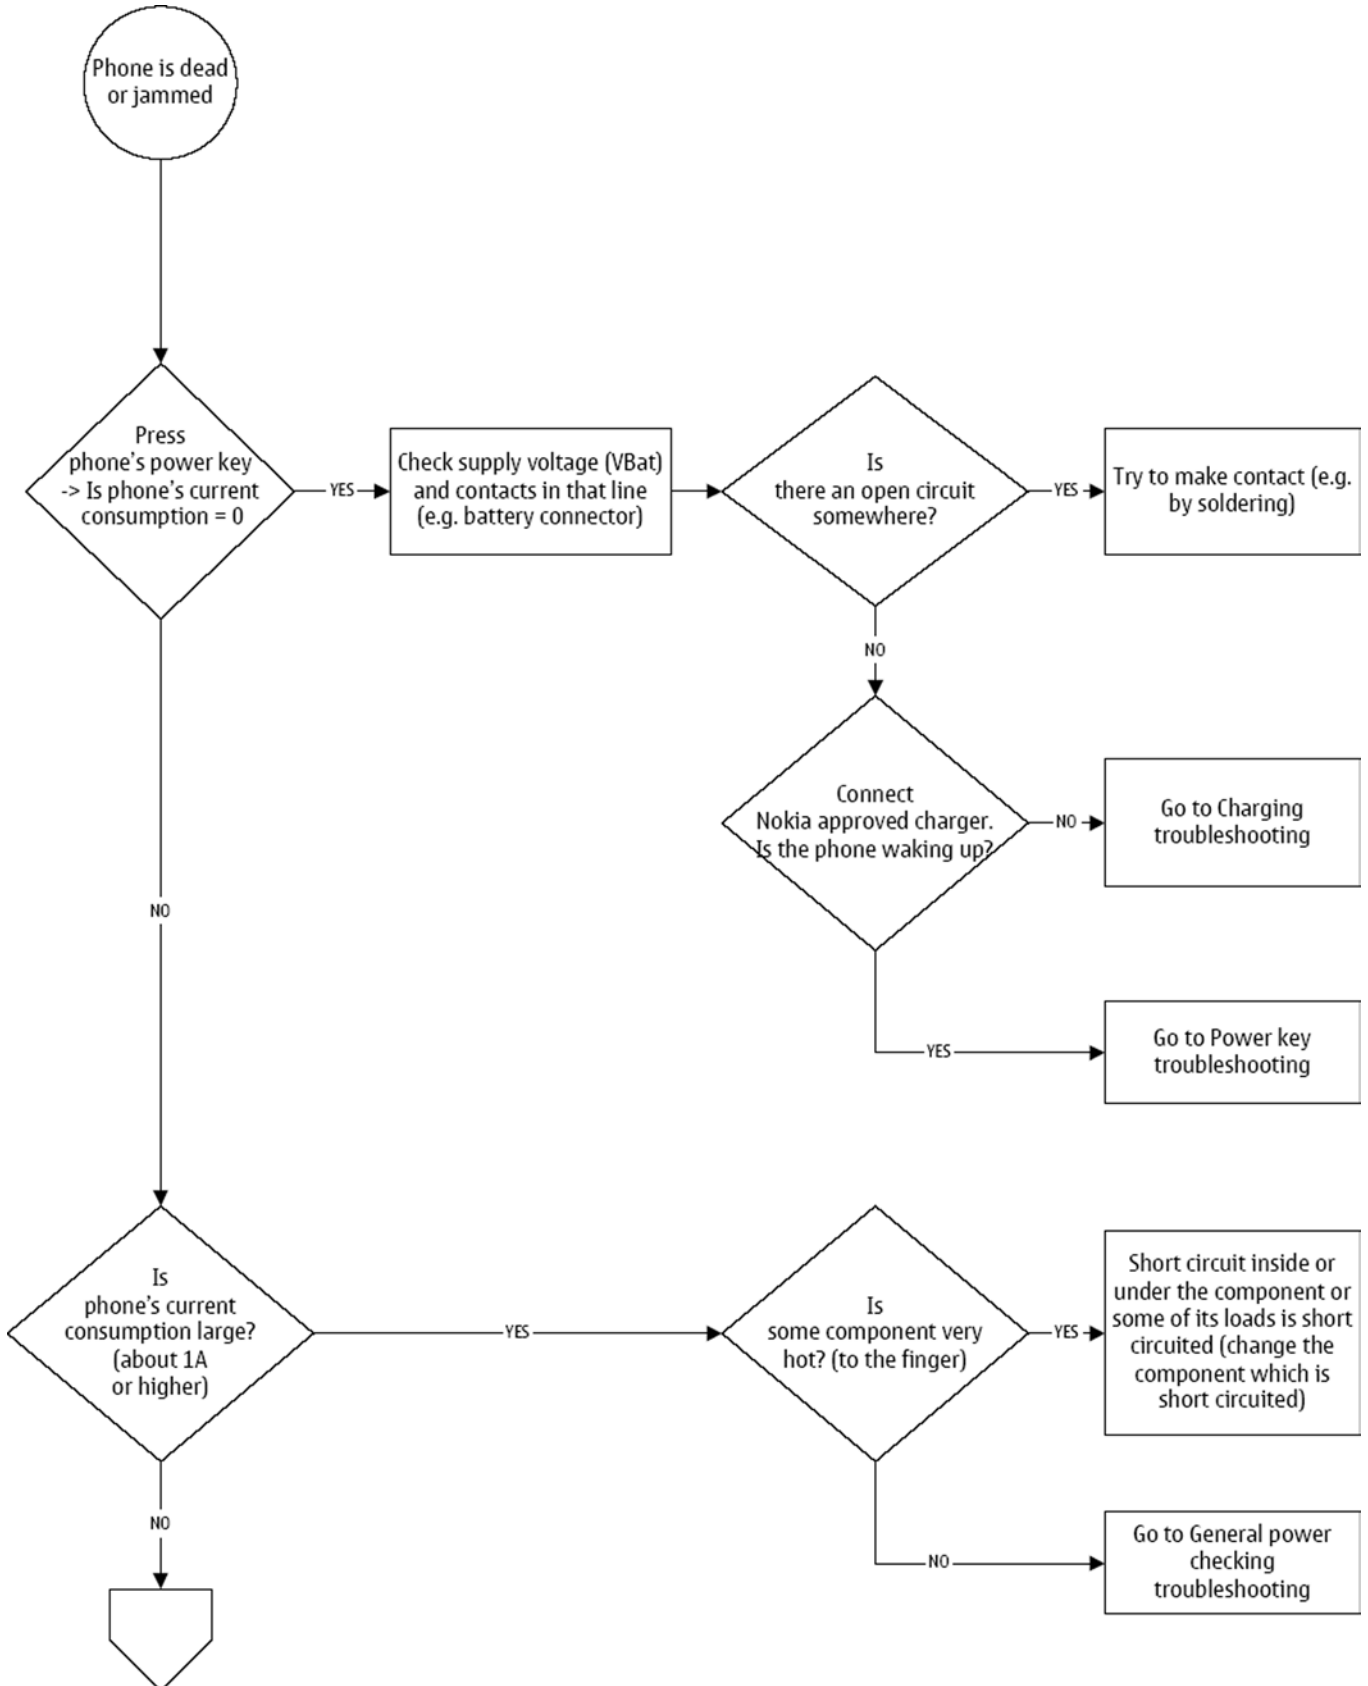

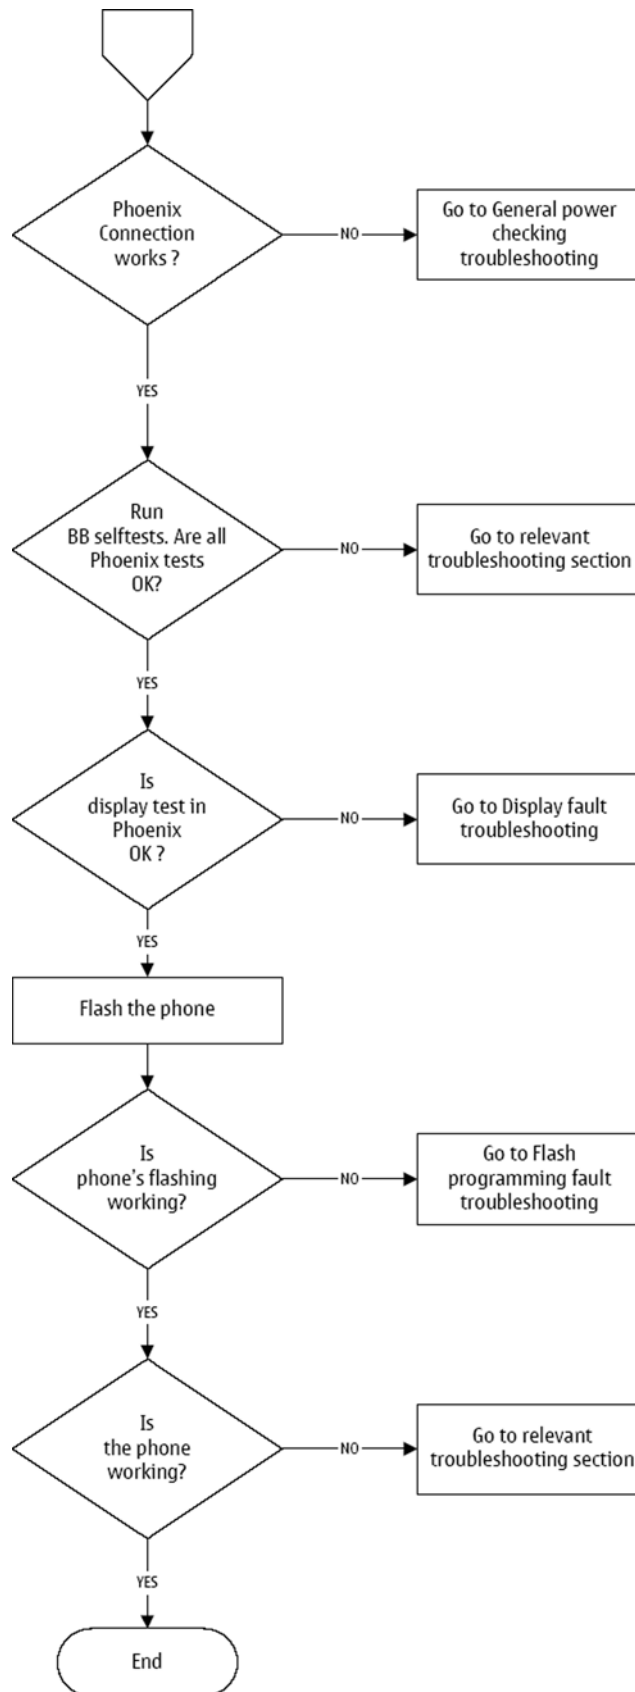

■ **General power checking**

Voltages

Check the following voltages:

Signal Rename	Regulator	Sleep	Idle	Nominal voltage	Main user	Notes
VIO	RETU	ON	ON	1.82	Memory, I/Os, IrDA, Display	
VBACK	RETU	ON	ON	2.5	Back-up battery	
VSIM1	RETU	ON	ON	1.8/3.0	SIM card	
VSIM2	RETU	OFF	OFF	3.0	Backlight	
VDRAM	RETU	ON	ON	1.82	SDRAM	
VAUX	RETU	OFF	OFF	2.5	IrDA	IrDA active
VANA	RETU	ON	ON	2.5	Audio, some pull-ups	
VR1	RETU	OFF	ON	2.5	Crystal oscillators	
VRFC	RETU	OFF	ON	1.8	RAP3G converters	
VRCP1	RETU			4.5	To RF parts	RF active
VRCP2	RETU			4.5	To RF parts	RF active
VREF	RETU	ON	ON	1.4	RF reference	
VCORE	TAHVO	ON	ON	1.4	RAP3G digital	
VOUT	TAHVO	OFF	OFF	2.5		Accessory connected
VCAM_2V8	LP3987ITLX-2.85/N1060	OFF	OFF	2.85	Camera	Camera ON
VCAM_1V8	LP3985IBLX-1.8/N1080	OFF	OFF	1.8	Camera	Camera ON
VCAM_1V5	TPS62311YZDR/N1050	OFF	OFF	1.5	Camera	Camera ON
2V8_FM_LCD	LP3985ITLX-2.85/N6050	ON	ON	2.85	FM, LCD, Hall sensor	Camera ON
VMMC	LP3928TLX-1828/N3200	OFF	OFF	3.0	MCC card	
KEYB_LED_OUT PUT	REG710NA-5/N2500	OFF	OFF	8	Keyboard LED's	


■ Golden eye troubleshooting

Context

Golden eye is placed on the top key board under a non removable shield. Instead of changing the golden eye, the key board has to be swapped.


■ **Charging troubleshooting**

Troubleshooting flow

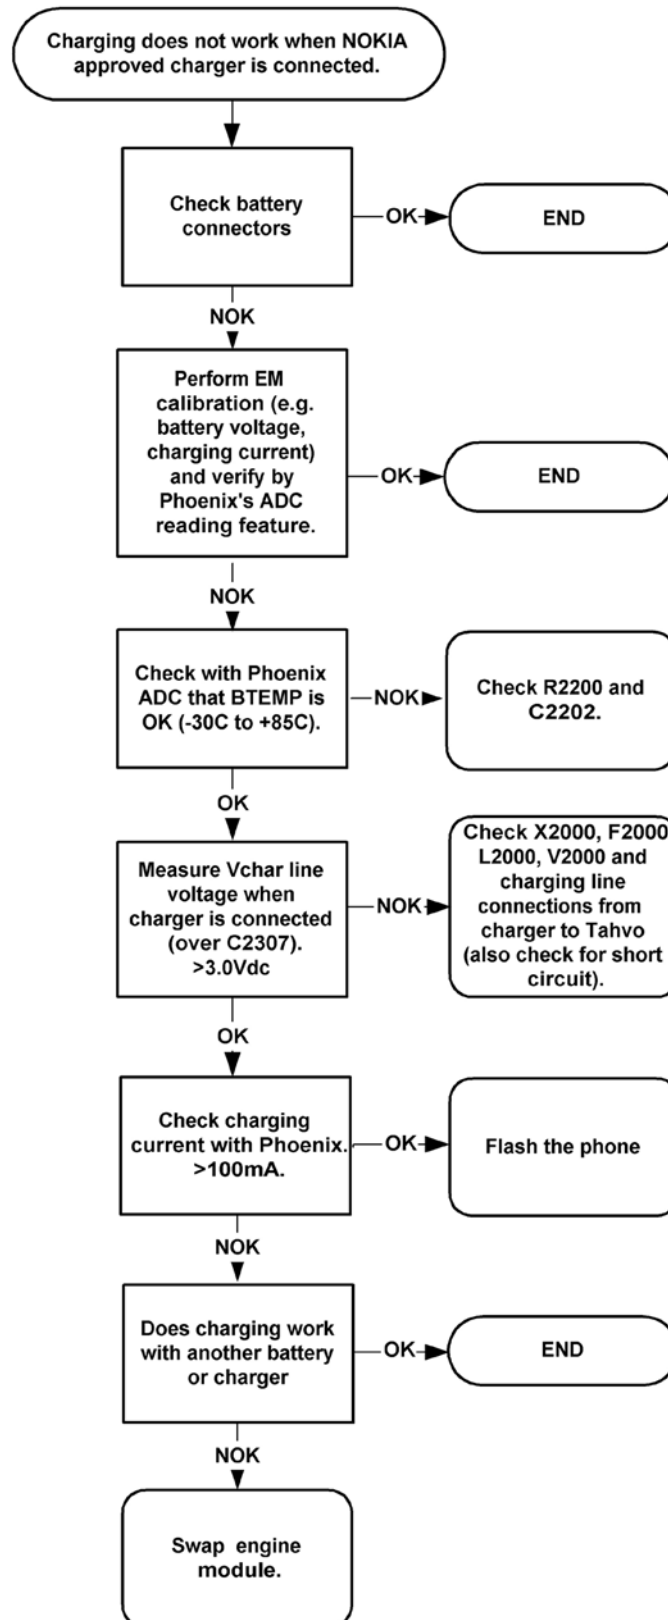

■ **Flash programming fault troubleshooting**

Troubleshooting flow

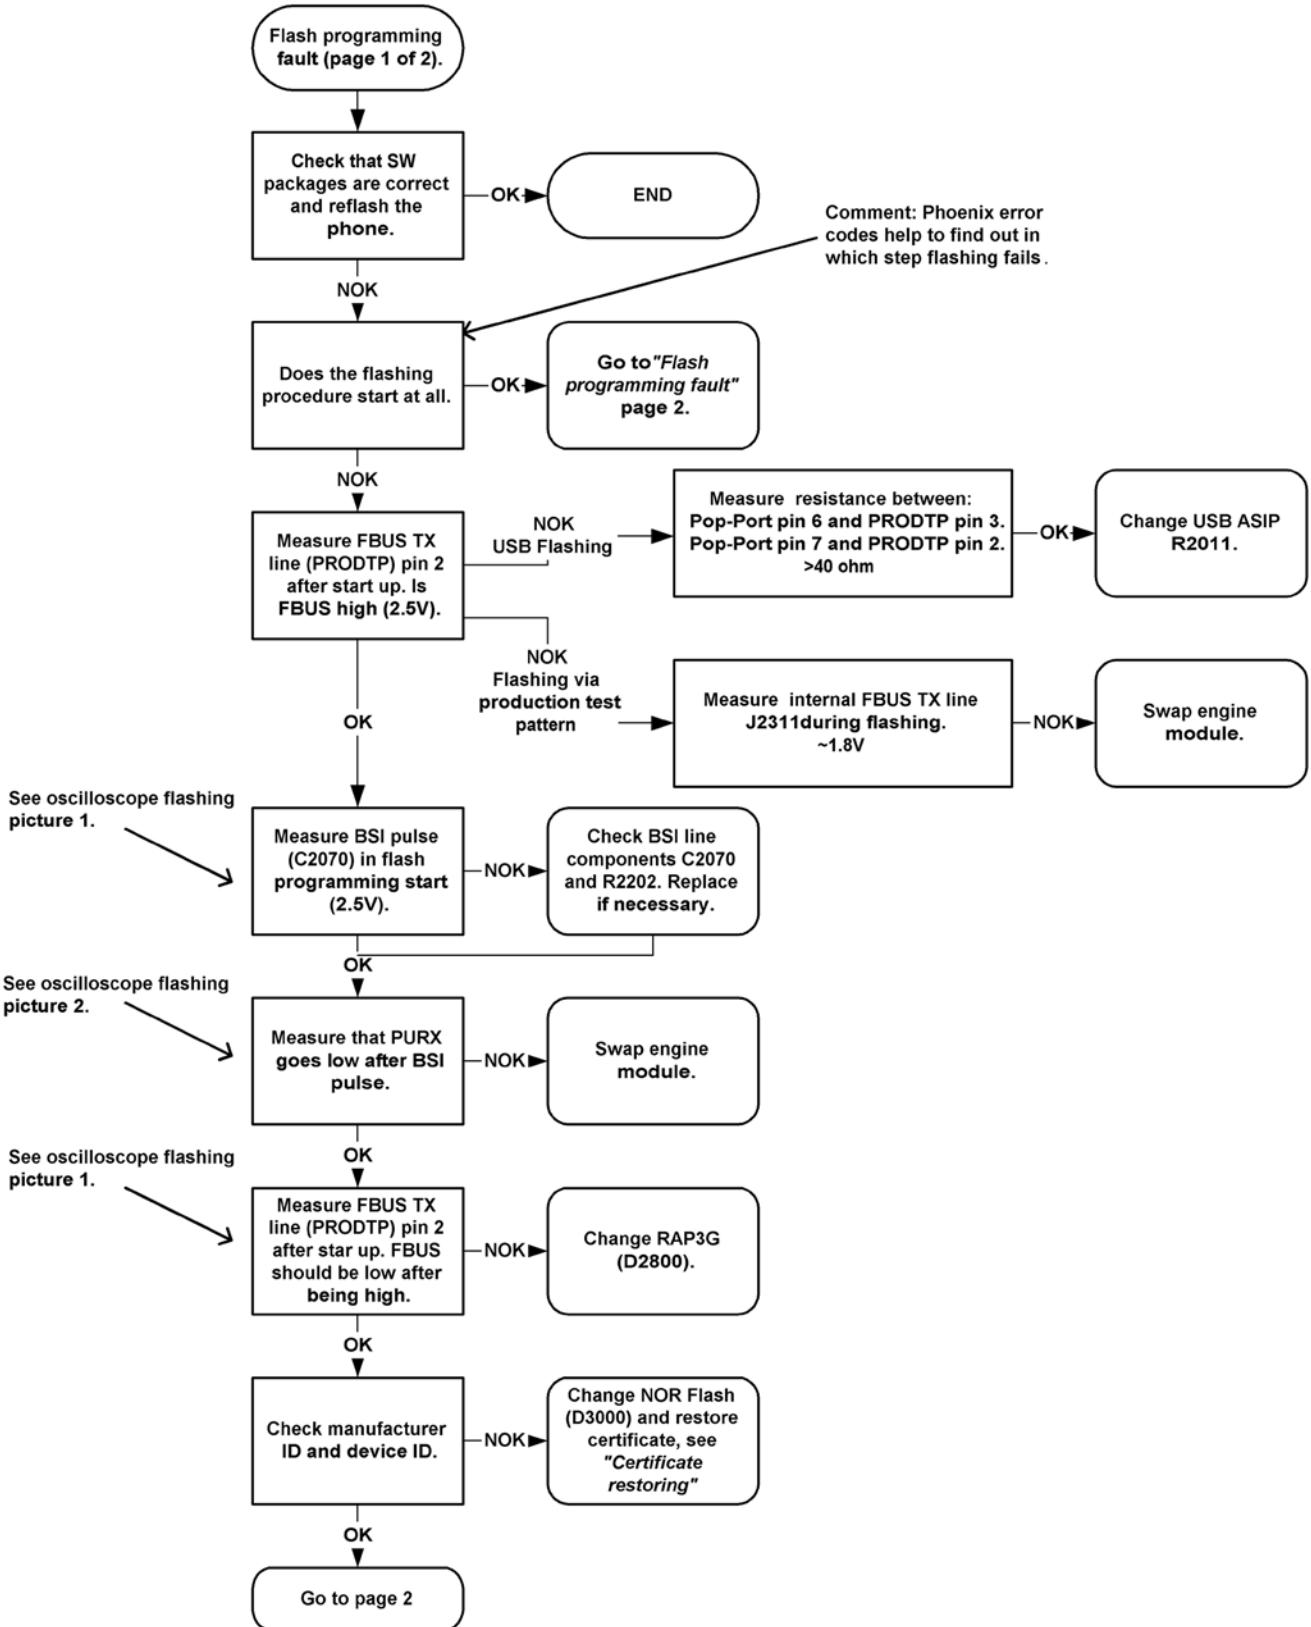

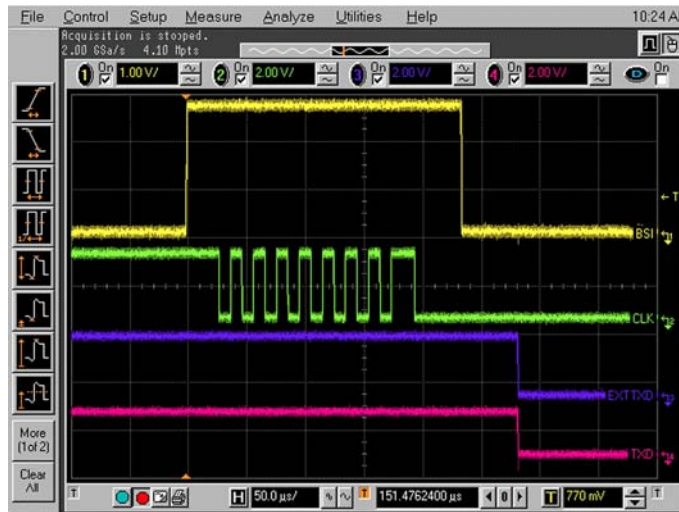
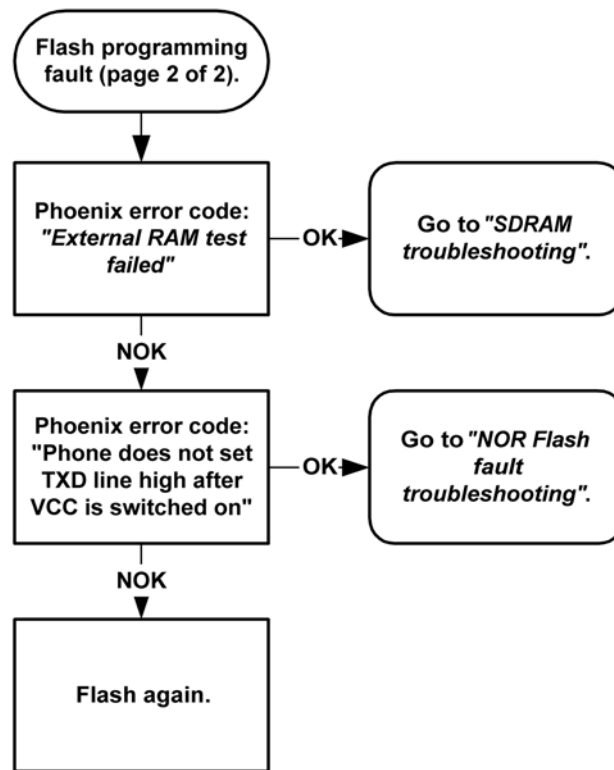


Figure 41 Flashing pic 1. Take single trig measurement for the rise of the BSI signal.




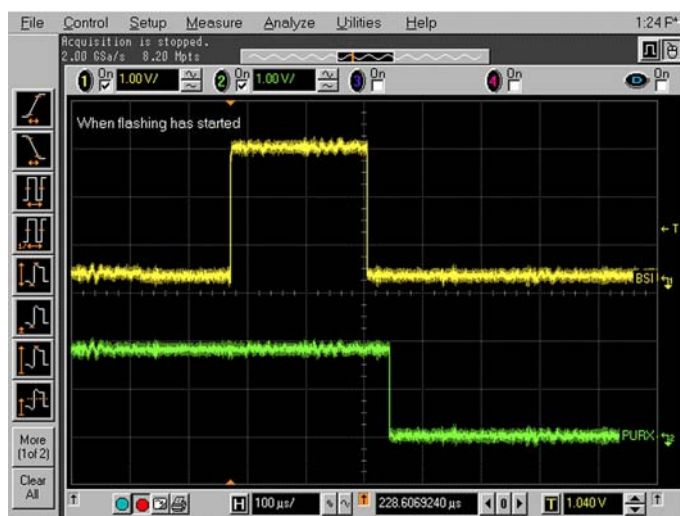


Figure 42 Flashing pic 2. Take single trig measurement for the rise of the BSI signal.

■ SD card troubleshooting

Troubleshooting flow

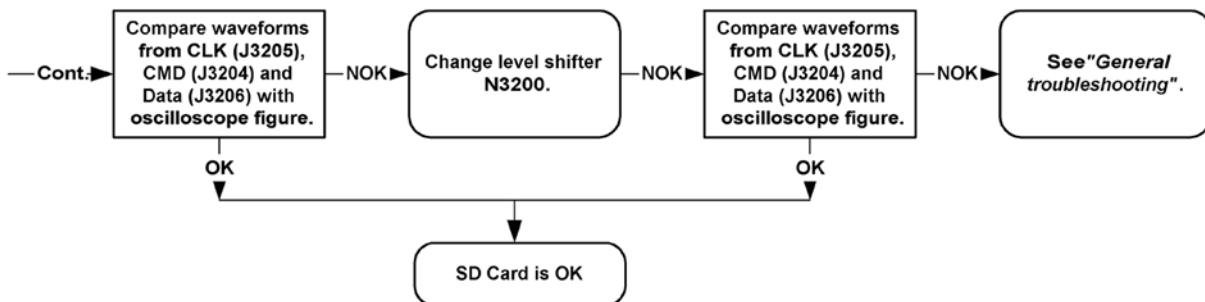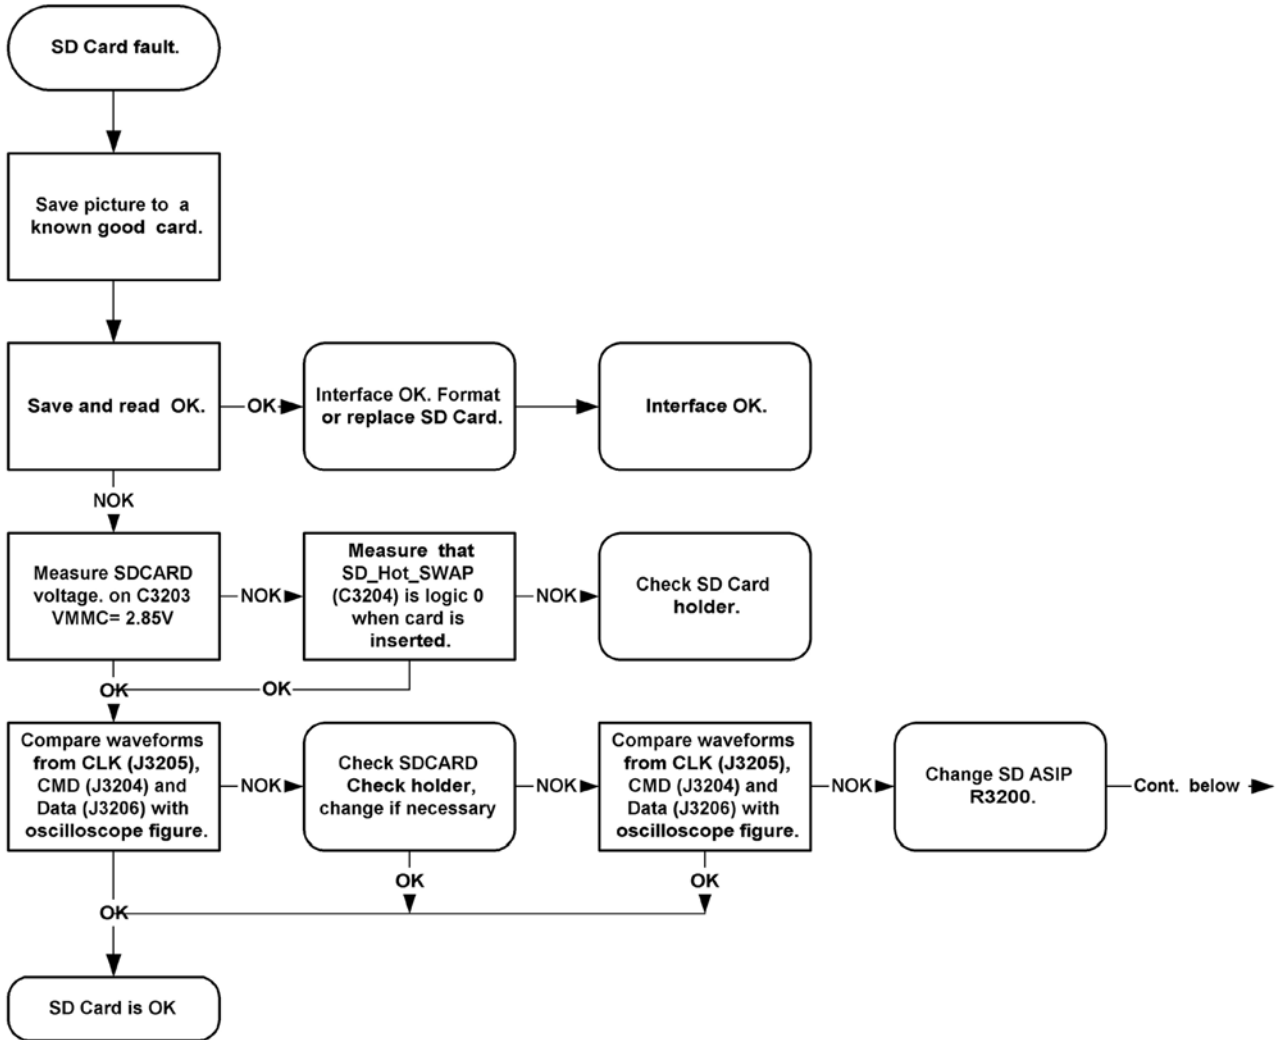

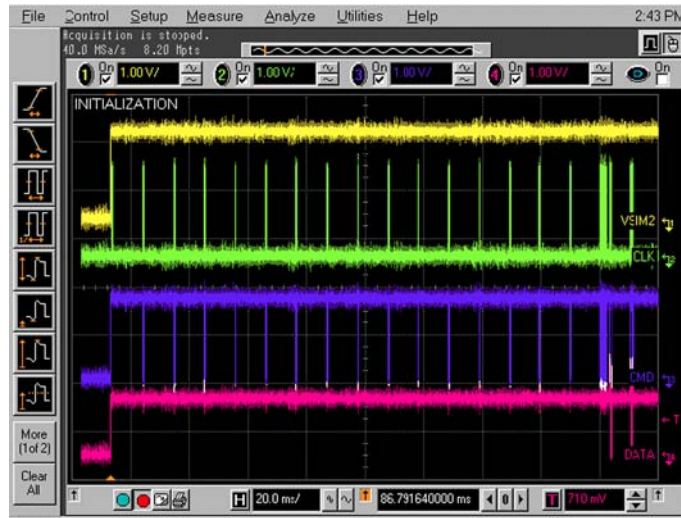


Legend

Take single trig measurement on the rising edge of the DAT signal.

Figure 43 SD card initialization from pin J3206

■ CMT SDRAM memory troubleshooting

Troubleshooting flow

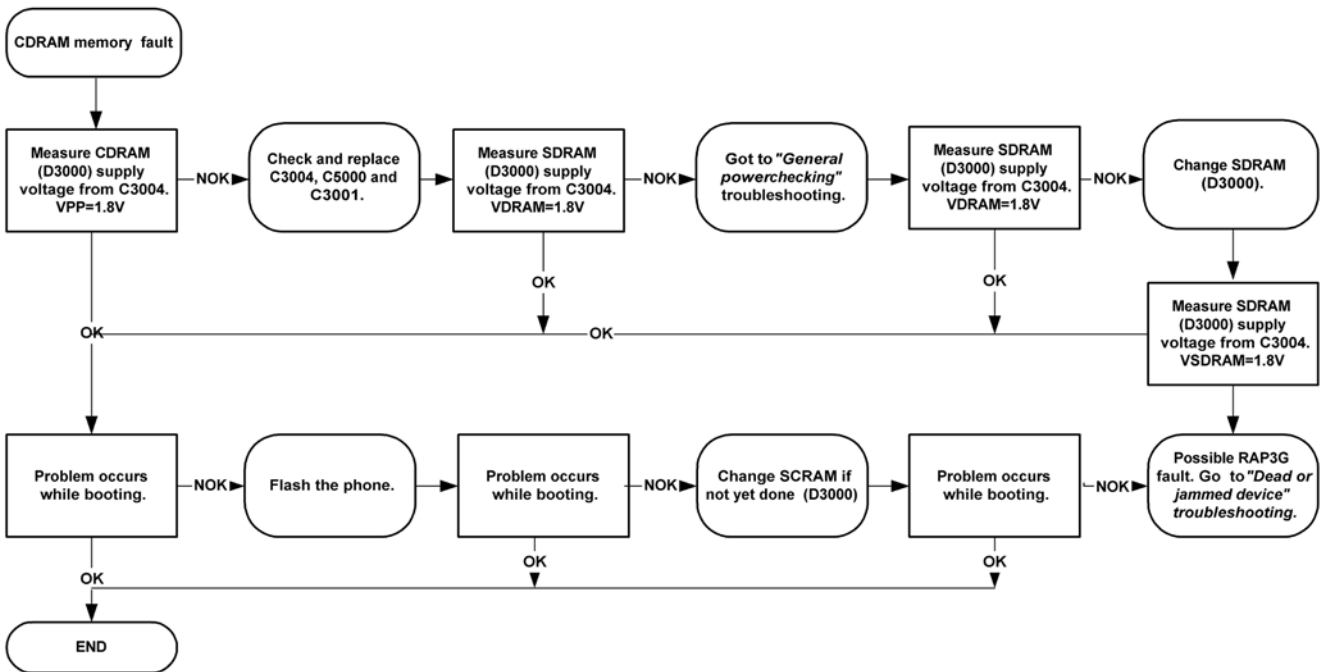

CMT NOR flash fault troubleshooting

Troubleshooting flow

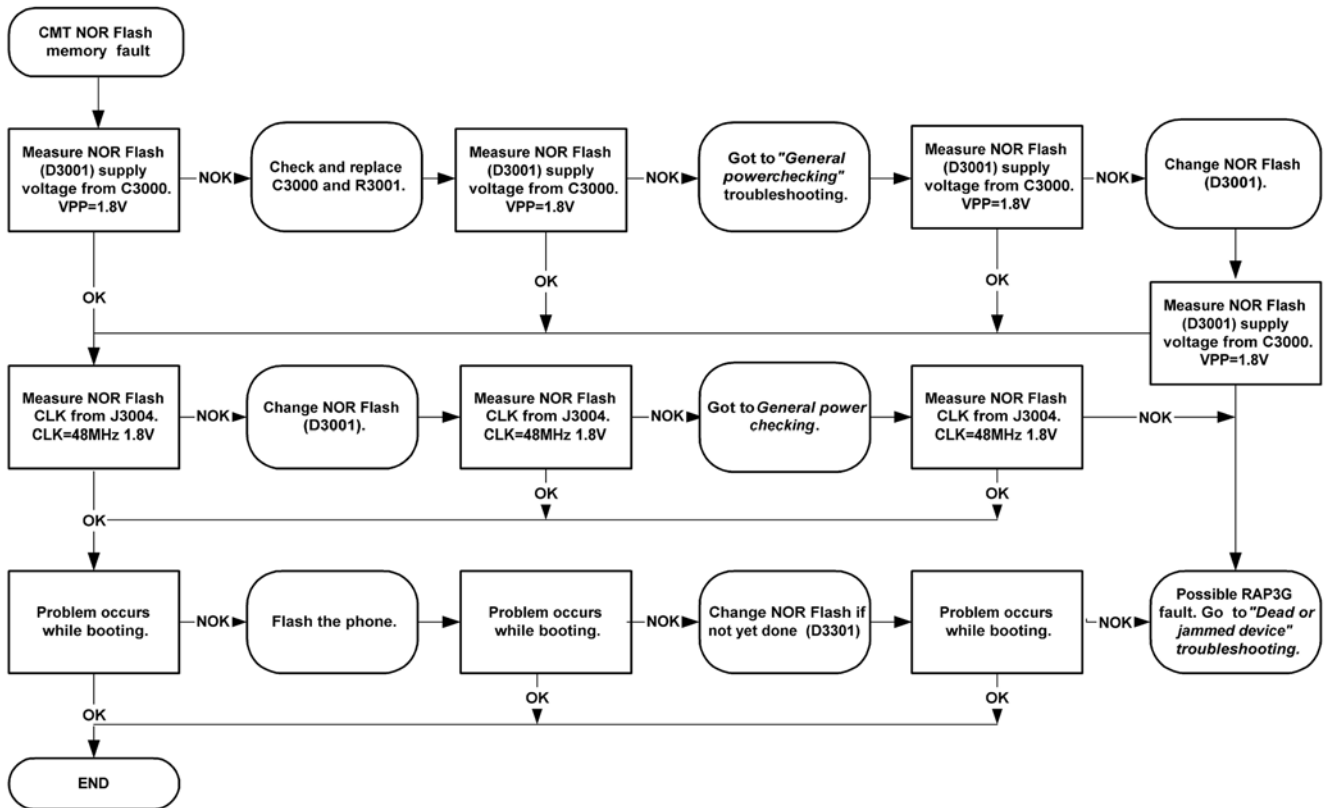


Figure 44 CMT NOR flash troubleshooting


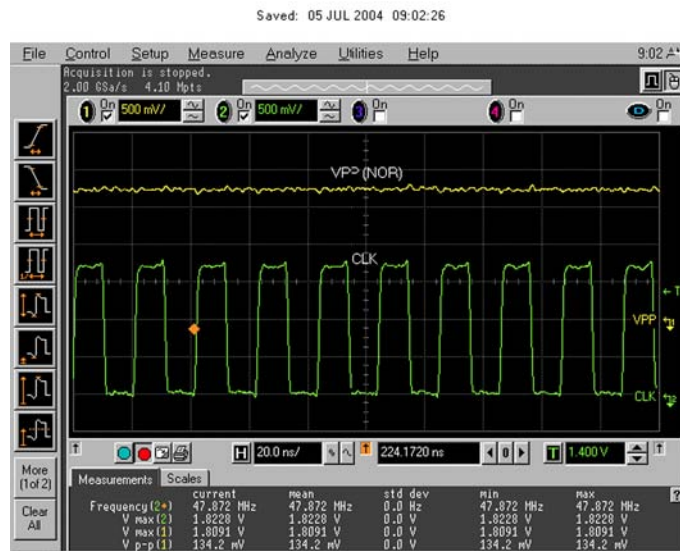


Figure 45 NOR CLK from J3004

■ Power key troubleshooting

Troubleshooting flow

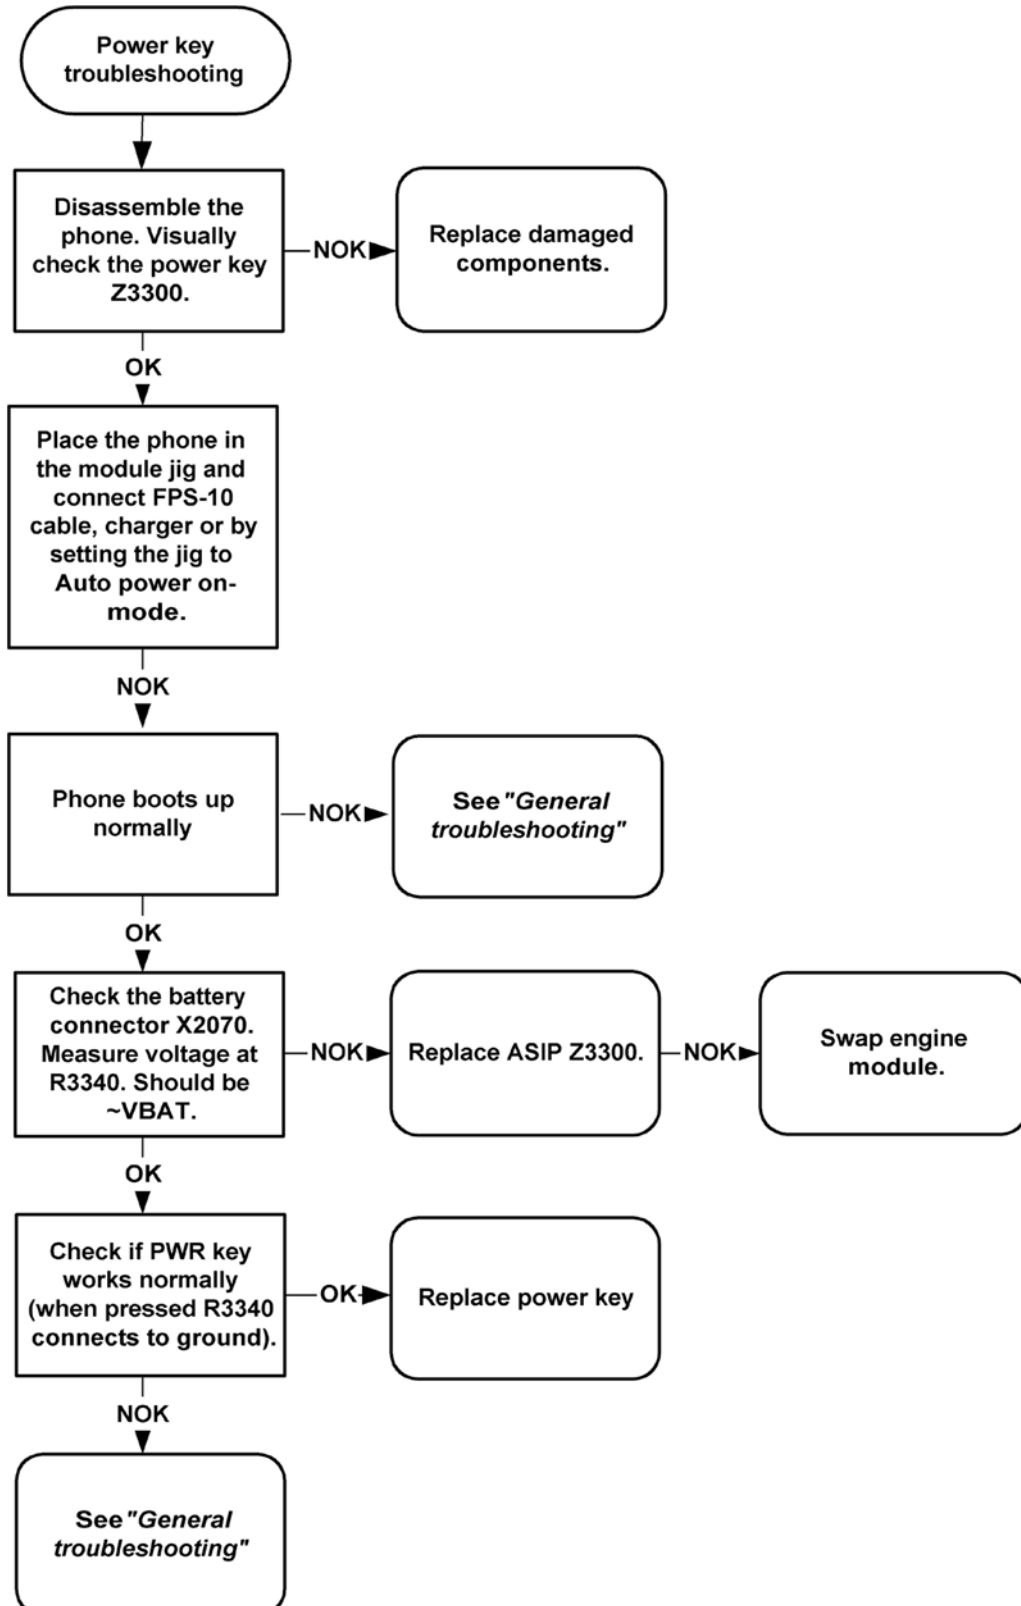

■ **USB interface troubleshooting**

Troubleshooting flow



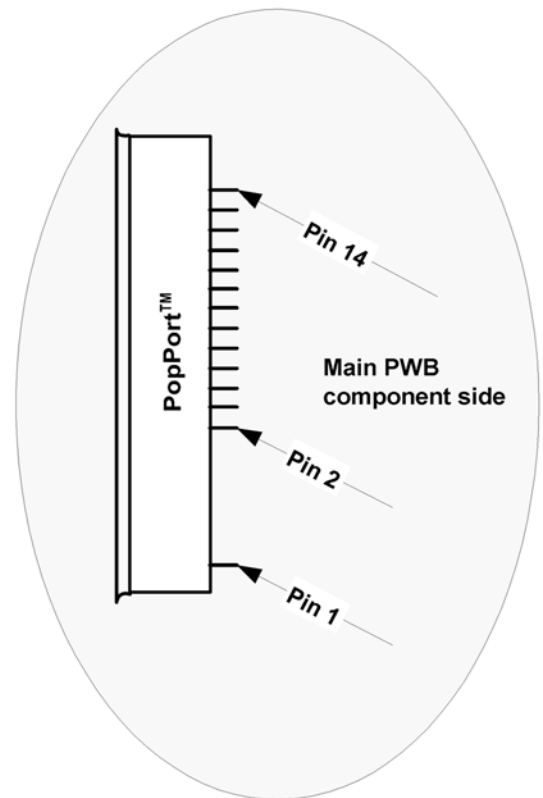




Figure 46 USB 1: D-TXD (PopPort TM™ pin 6) and D+RXD (PopPort TM™ pin 7) voltage levels when USB is connected.

■ SIM card troubleshooting

Troubleshooting flow

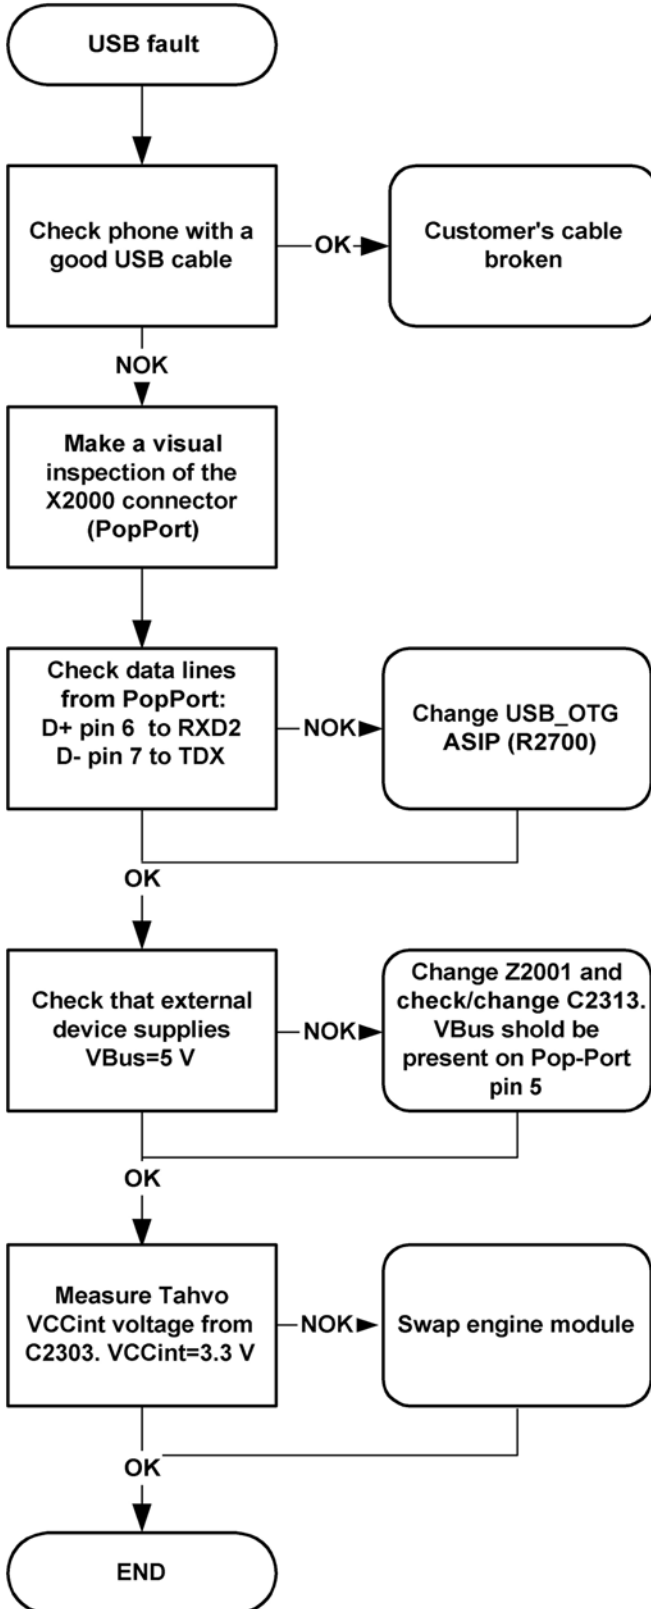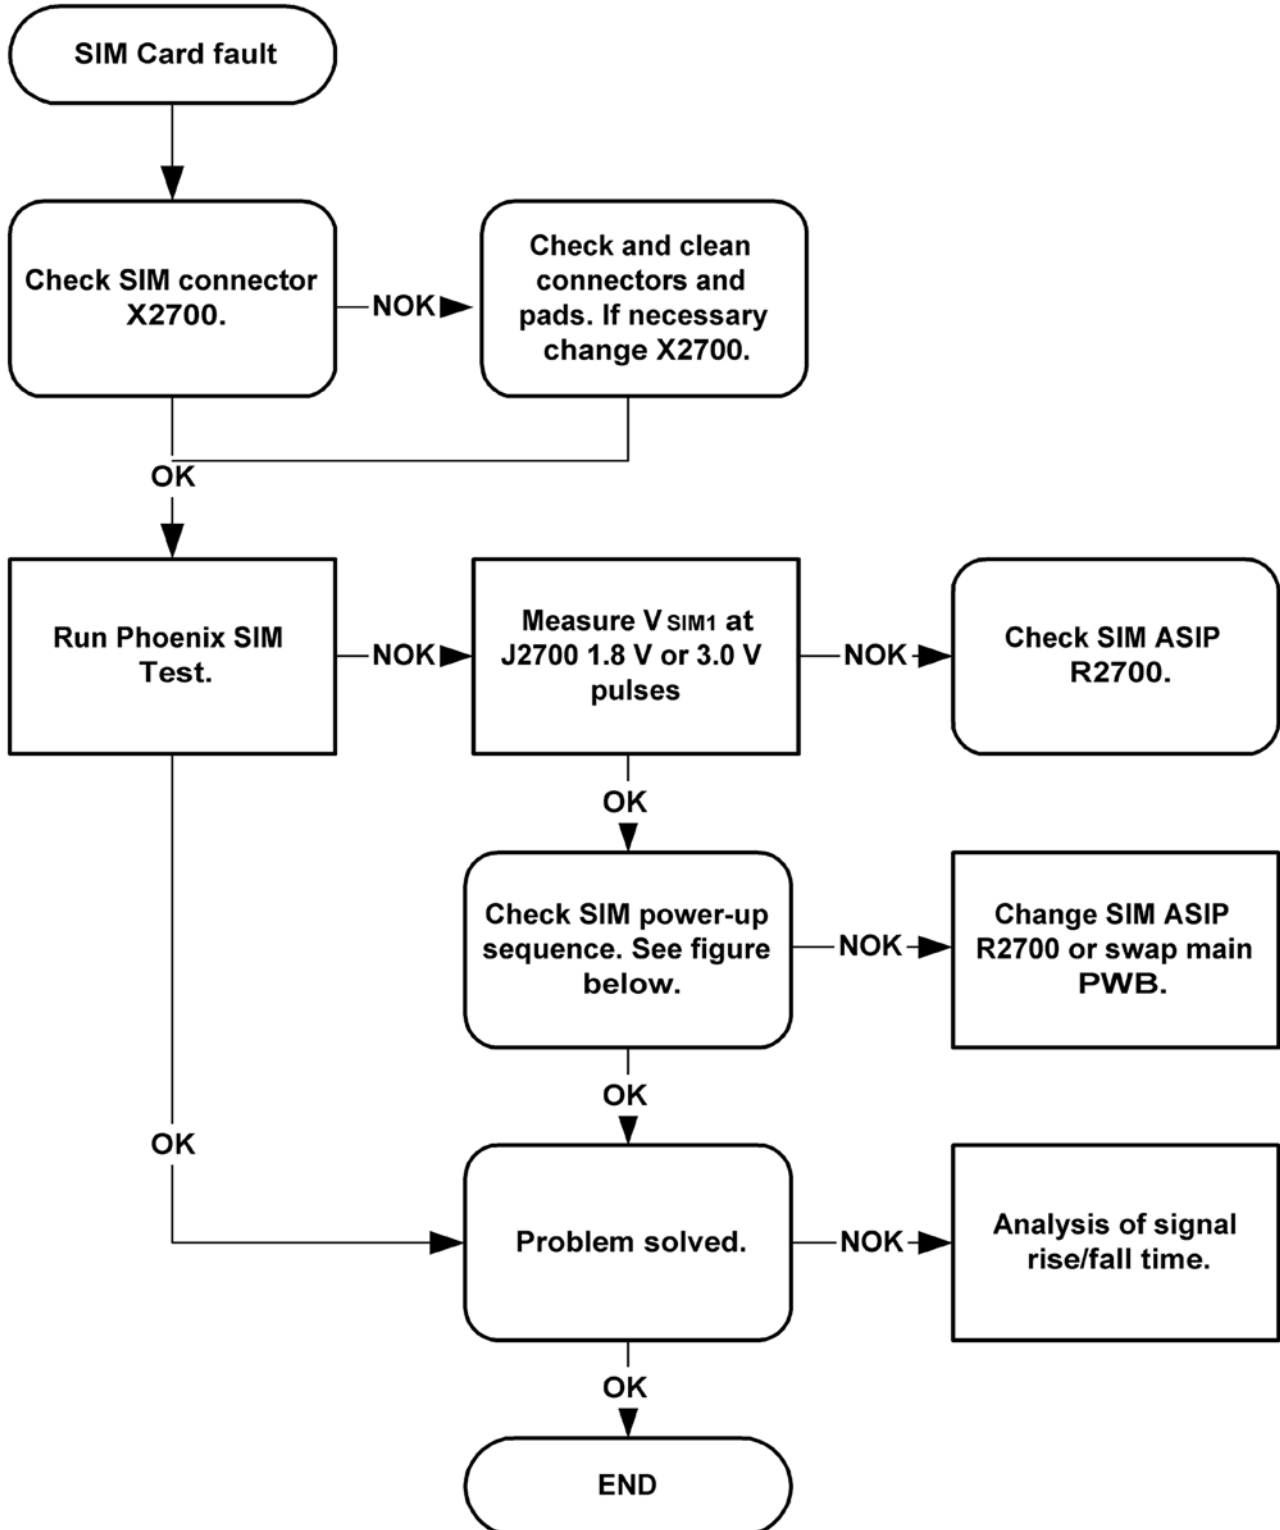



Legend

SIM CLK frequency = 3.2MHz (Take single triggered measurement in boot on the VSIM1 line).

Figure 47 SIM interface signals

■ Main keyboard troubleshooting


Context

There are two possible failure modes in the keyboard module:

- One or more keys can be stuck, so that the key does not react when a keydome is pressed. This kind of failure is caused by mechanical reasons (dirt, rust).
- Malfunction of several keys at the same time; this happens when one or more rows or columns are failing (shortcut or open connection).

If the failure mode is not clear, start with the Keyboard Test in Phoenix.

Troubleshooting flow

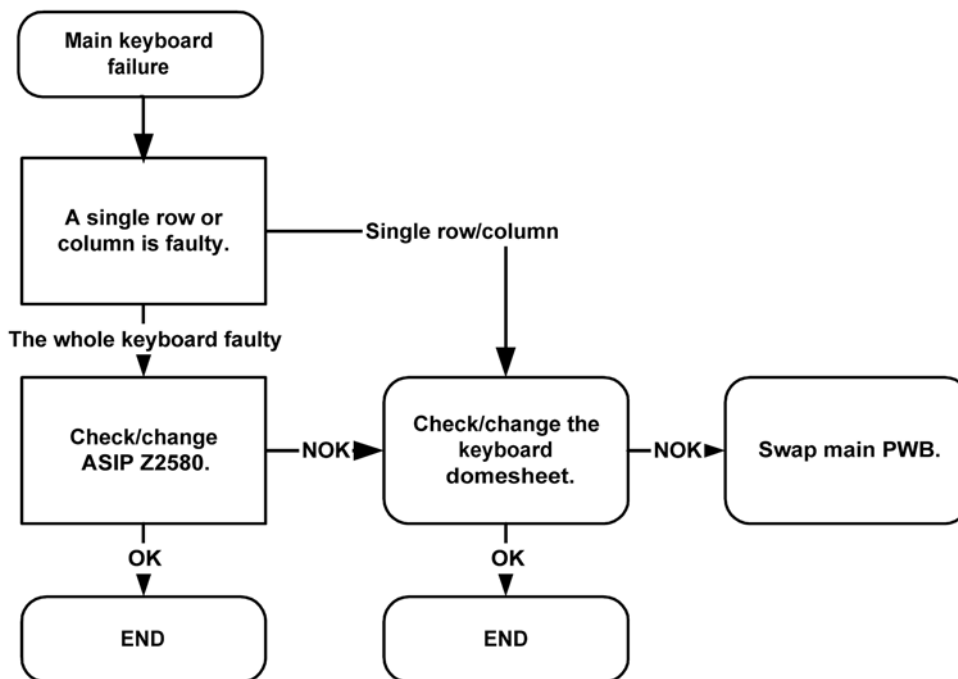

■ Top keyboard troubleshooting


Context

There are two possible failure modes in the keyboard module:

- One or more keys can be stuck, so that the key does not react when a keydome is pressed. This kind of failure is caused by mechanical reasons (dirt, rust).
- Malfunction of several keys at the same time; this happens when one or more rows or columns are failing (shortcut or open connection).

If the failure mode is not clear, start with the Keyboard Test in Phoenix.

Troubleshooting flow

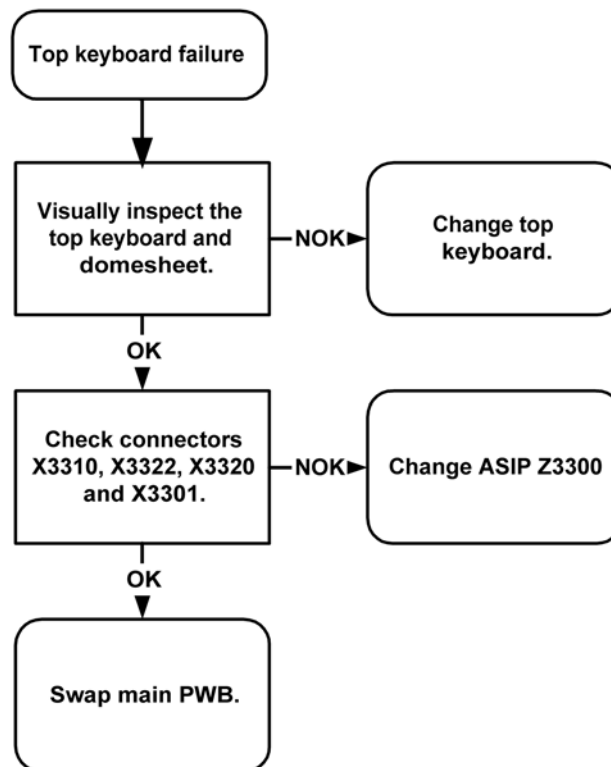

■ Slide switch

Context

The slide switch function is based on a hall detector (N2430).

Steps

1. Disassembly the phone and check the hall detector area. Also check the magnet (placed on the flex).
2. Move a magnet over the hall detector and measure on R2430. The scope will indicate a temporary change in the output (typically 1,8mV).
3. Check supply voltage 2V8_FM_LCD.

Examples

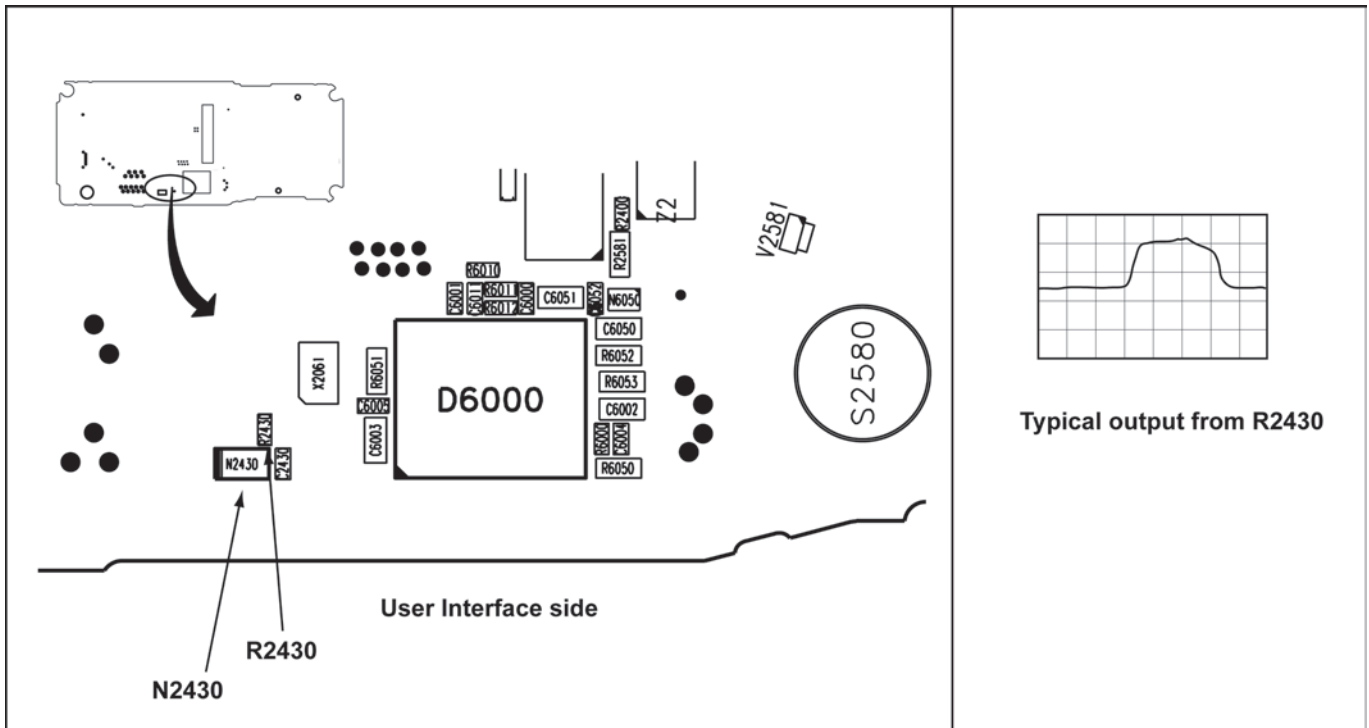


Figure 48 Slide switch and test point

■ Certificate restoring for BB5.0 products

Context

After replacing a defective flash memory component in BB5.0 products, certificate restoring must be carried out to make the phone functional again.

Certificate restoring for BB5.0 products is basically the same process as IMEI / ESN Rebuild for DCT-4 generation products.

All tunings (RF & Baseband, UI) must be done after replacing the flash memory component, and performing the certificate restoring procedure.

The procedure for certificate restoring when a defective flash memory component has been replaced:

- Flash the phone with the latest available software using FPS-8 or FPS-10.

Note: USB flashing does not work for a dead BB5.0 phone.

- Create a request file.
- Send the file to Nokia by e-mail.
- When you receive a reply from Nokia, carry out certificate restoring.
- Tune the phone completely.

Note: SX-4 smart card is needed.

- If the phone resets after certificate restoring, reflash the phone again.


Required equipment and setup:

- *Phoenix* service software v 2004.39.7.70 or newer.
- The latest phone model specific *Phoenix* data package.

- PKD-1 dongle
- SX-4 smart card (Enables BB5.0 testing and tuning features)
- External smart card reader
 - Note:** The smart card reader is only needed when FPS-8 is used. FPS-10 has an integrated smart card reader.
- Activated FPS-8 flash prommer **OR** FPS-10 flash prommer
- Flash update package 03.18.004 or newer for FPS-8 or FPS-10 flash prommers
- CU-4 control unit
- USB cable from PC USB Port to CU-4 control unit
- Phone model specific adapter for CU-4 control unit
- PCS-1 cable to power CU-4 from external power supply
- XCS-4 modular cable between flash prommer and CU-4
 - Note:** CU-4 must be supplied with +12 V from an external power supply in all steps of certificate restoring.

Steps


1. Program the phone software.
 - i Start *Phoenix* and login. Make sure the connection has been managed correctly for FPS-8 or FPS-10.
 - ii Update the phone MCU software to the latest available version.
If the new flash is empty and the phone cannot communicate with *Phoenix*, reflash the phone.
 - iii Choose the product manually from **File**→**Open Product** , and click **OK**.
Wait for the phone type designator (e.g. "RM-1") to be displayed in the status bar.
 - iv Go to **Flashing**→**SW Update** and wait until *Phoenix* reads the product data as shown in the following picture.

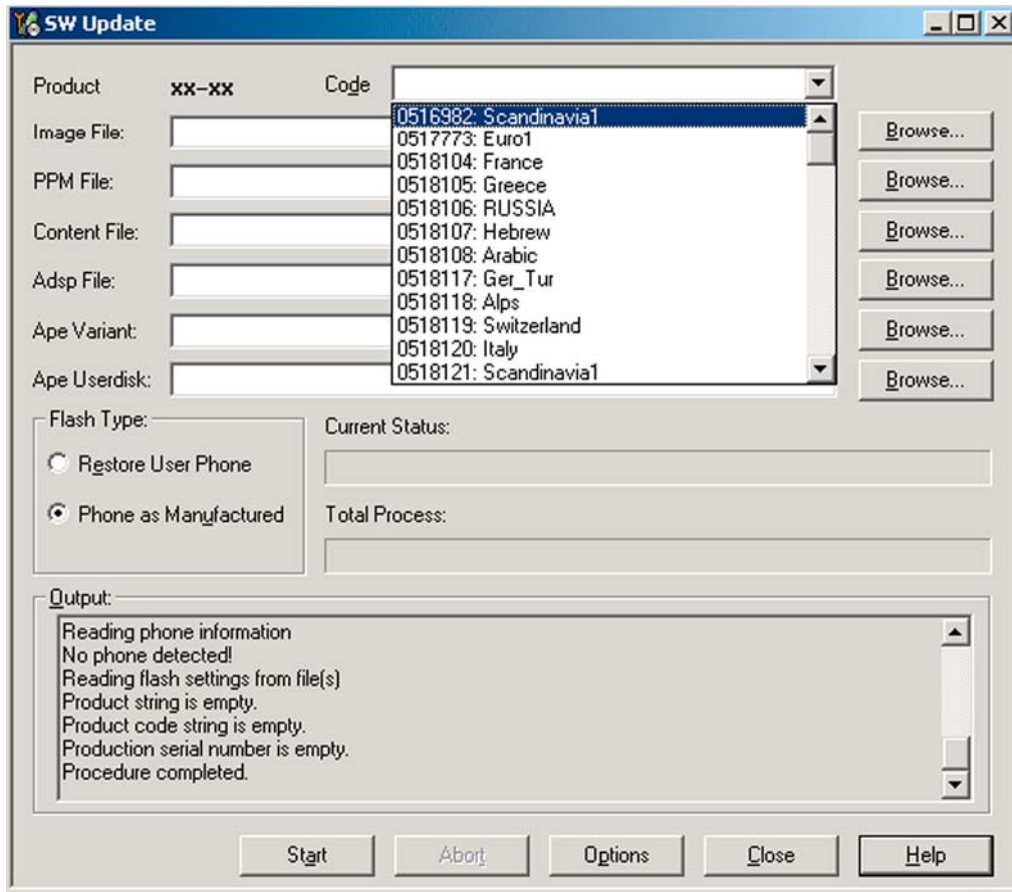

Product	is automatically set according to the phone support module which was opened manually, but the flash files cannot be found because the correct data cannot be read from the phone automatically.
Code	must be chosen manually, it determines the correct flash files to be used. Please choose the correct product code (can be seen in the phone type label) from the dropdown list.
Flash Type	must be set to Phone as Manufactured .

v To continue, click **Start**.


Progress bars and messages on the screen show actions during phone programming, please wait.

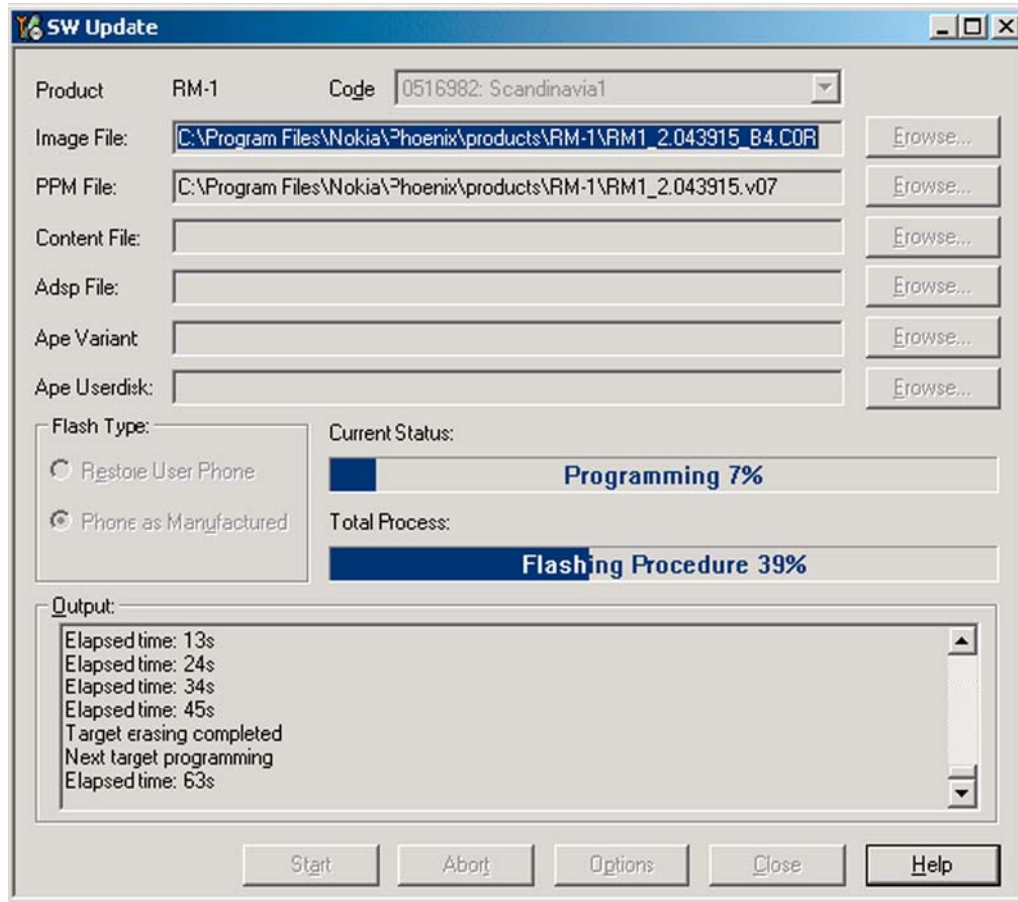


Programming is completed when *Flashing Completed* message is displayed.

The product type designator and MCU SW version are displayed in the status bar.


- vi Close the *SW Update* window and then choose **File**→**Close Product**.
2. Create a *Request* file.
- For this procedure, you must supply +12 V to CU-4 from an external power supply.
- i To connect the phone with *Phoenix*, choose **File**→**Scan Product**.
 - ii Choose **Tools**→**Certificate Restore**.
 - iii To choose a location for the request file, click **Browse**.

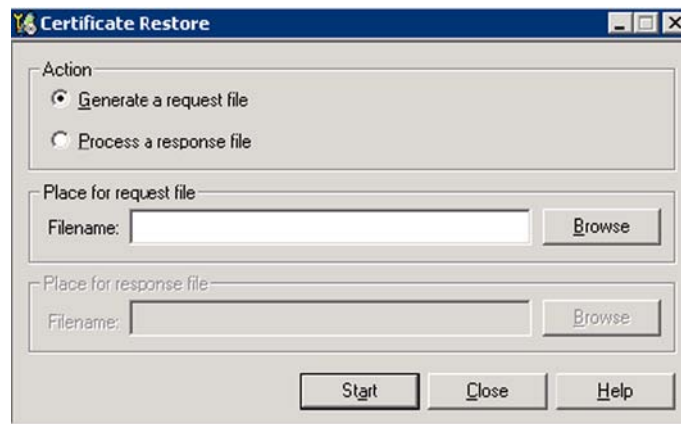

- iv Name the file so that you can easily identify it, and click **Open**.

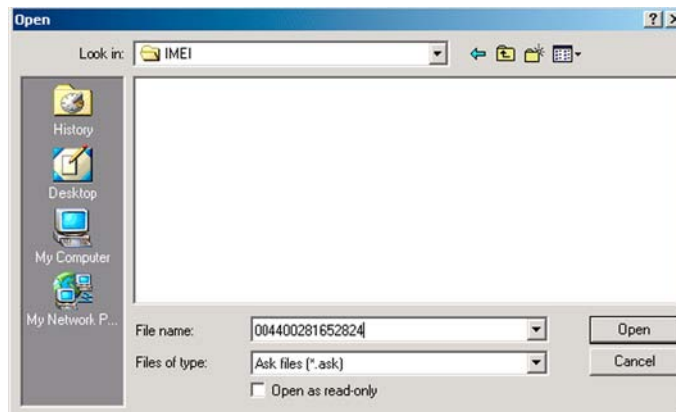


The name of the file and its location are shown.

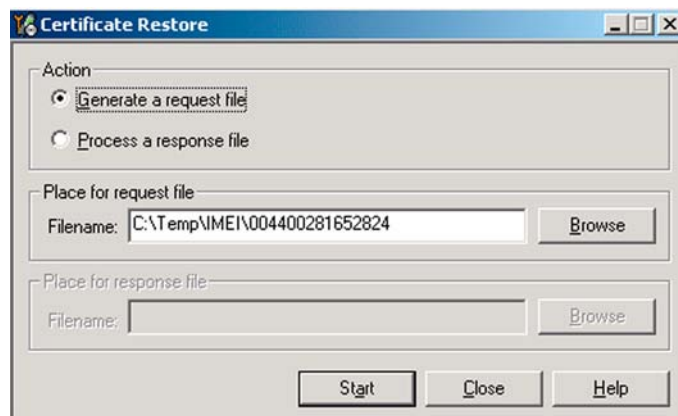


- v To create the *Request* file, click **Start**.
 - vi When the file for certificate restore has been created, send it to Nokia as an e-mail attachment.
3. Restore certificate.
- For this procedure, you must supply +12 V to CU-4 from an external power supply.
- i Save the reply file sent by Nokia to your computer.
 - ii Start *Phoenix* service software.
 - iii Choose **File**→**Scan Product** .

- iv From the **Tools** menu, choose **Certificate Restore** and select **Process a response file** in the *Action* pane.

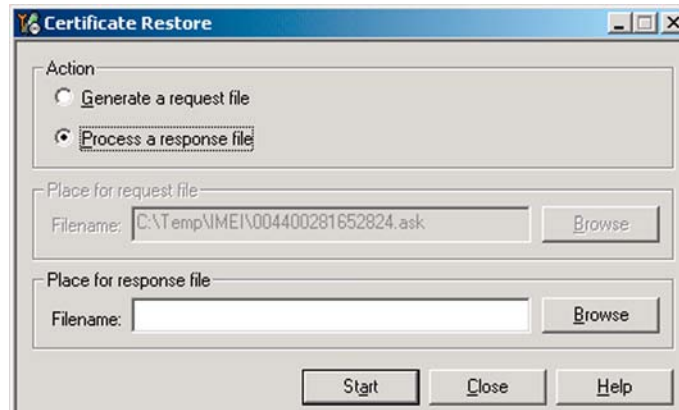


- v To choose the location where response file is saved, click **Browse**.
- vi Click **Open**.

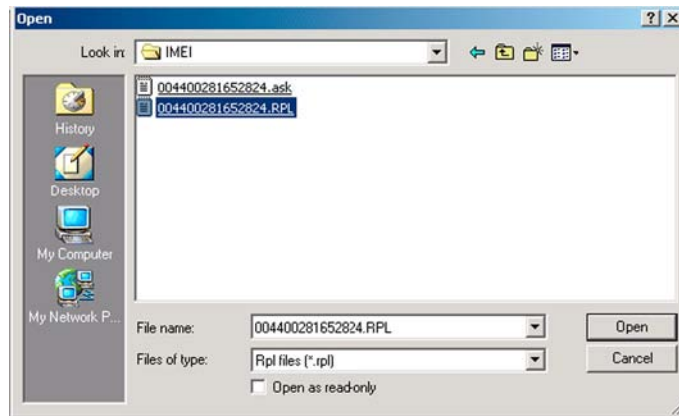

The name of the file and the path where it is located are shown.

- vii To write the file to phone, click **Start**.

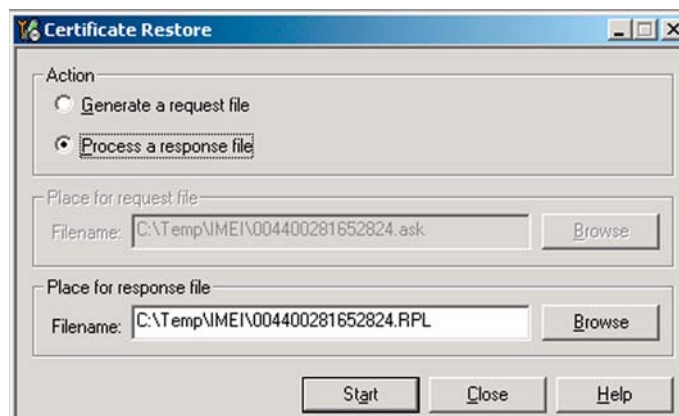

Next action

After a successful rewrite, you must retune the phone completely by using *Phoenix* tuning functions.

Important: Perform all tunings: RF, BB, and UI.

■ Display module troubleshooting

General instructions for display troubleshooting

Context

- The display is in a normal mode when the phone is in active use.
- Display is in a partial idle mode when the phone is in the screen saver mode.
- The operating modes of the display can be controlled with the help of *Phoenix*.

Table 10 Display module troubleshooting cases

Display blank	There is no image on the display. The display looks the same when the phone is on as it does when the phone is off. The backlight can be on in some cases.
Image on the display not correct	Image on the display can be corrupted or a part of the image can be missing. If a part of the image is missing, change the display module. If the image is otherwise corrupted, follow the appropriate troubleshooting diagram.
Backlight dim or not working at all	Backlight LED components are inside the display module. Backlight failure can also be in the connector or in the backlight power source in the main engine of the phone. Backlight is also controlled automatically by the ambient light sensor. This means that in case the display is working (image OK), the backlight is faulty.
Visual defects (pixel)	Pixel defects can be checked by controlling the display with Phoenix. Use both colours, black and white, on a full screen. The display may have some random pixel defects that are acceptable for this type of display. The criteria when pixel defects are regarded as a display failure, resulting in a replacement of the display, are presented the following table.

Table 11 Pixel defects


Item	Defect counts	White dot defect				Black dot defect	Total
		R	G	B	White Dot Total		
1		1	1	1	1	1	1
2	Combined defect counts	Not allowed. Two single dot defects that are within 5 mm of each other should be interpreted as combined dot defect.					

Steps

1. Verify with a working display that the fault is not on the display module itself.
The display module cannot be repaired.
2. Check that the cellular engine is working normally.
 - i To check the functionality, connect the phone to a docking station.
 - ii Start *Phoenix* service software.
 - iii Read the phone information to check that also the application engine is functioning normally (you should be able to read the APE ID).
3. Proceed to the display troubleshooting flowcharts.
Use the **Display Test** tool in *Phoenix* to find the detailed fault mode.

Display fault troubleshooting

Troubleshooting flow

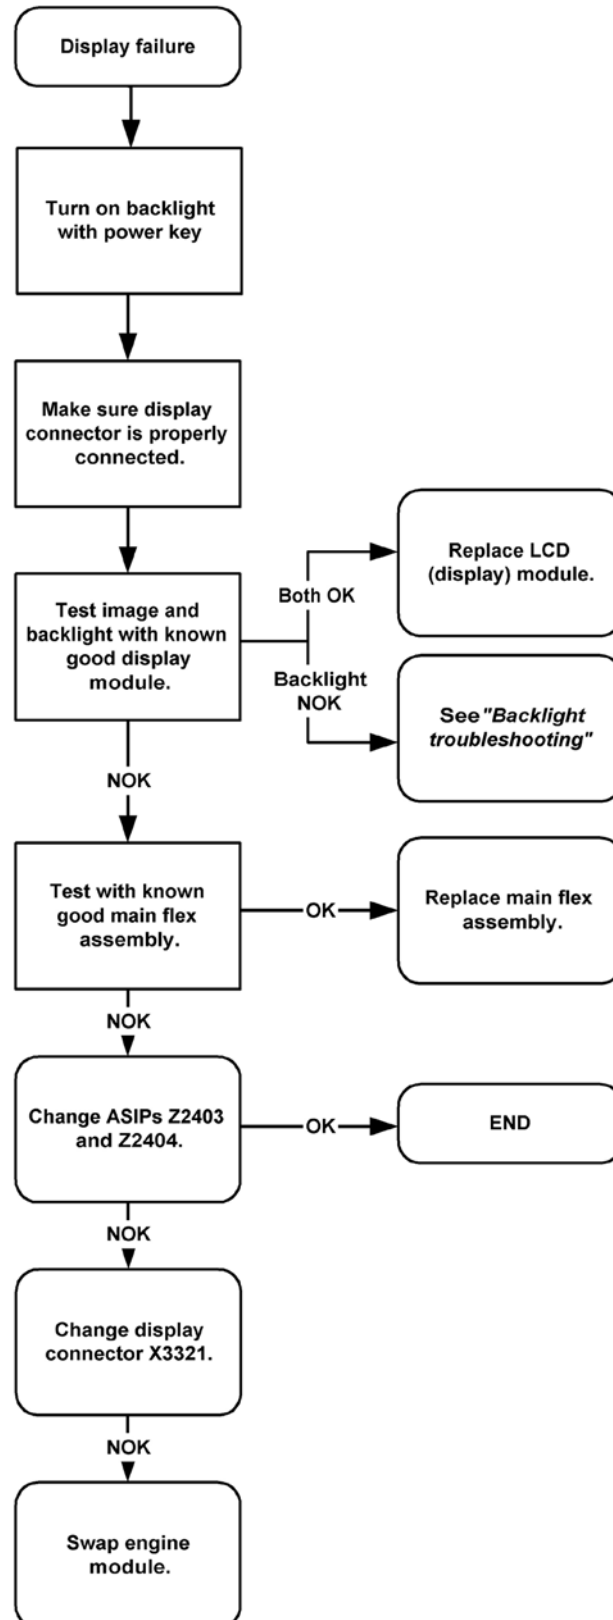

See also


- [Display and keyboard backlight troubleshooting \(page \)](#)
- [OMAP1710 troubleshooting \(page \)](#)

Display and top keyboard backlight troubleshooting

Context

The device has one LED driver that provides current for both display and keyboard backlights.

Troubleshooting flow

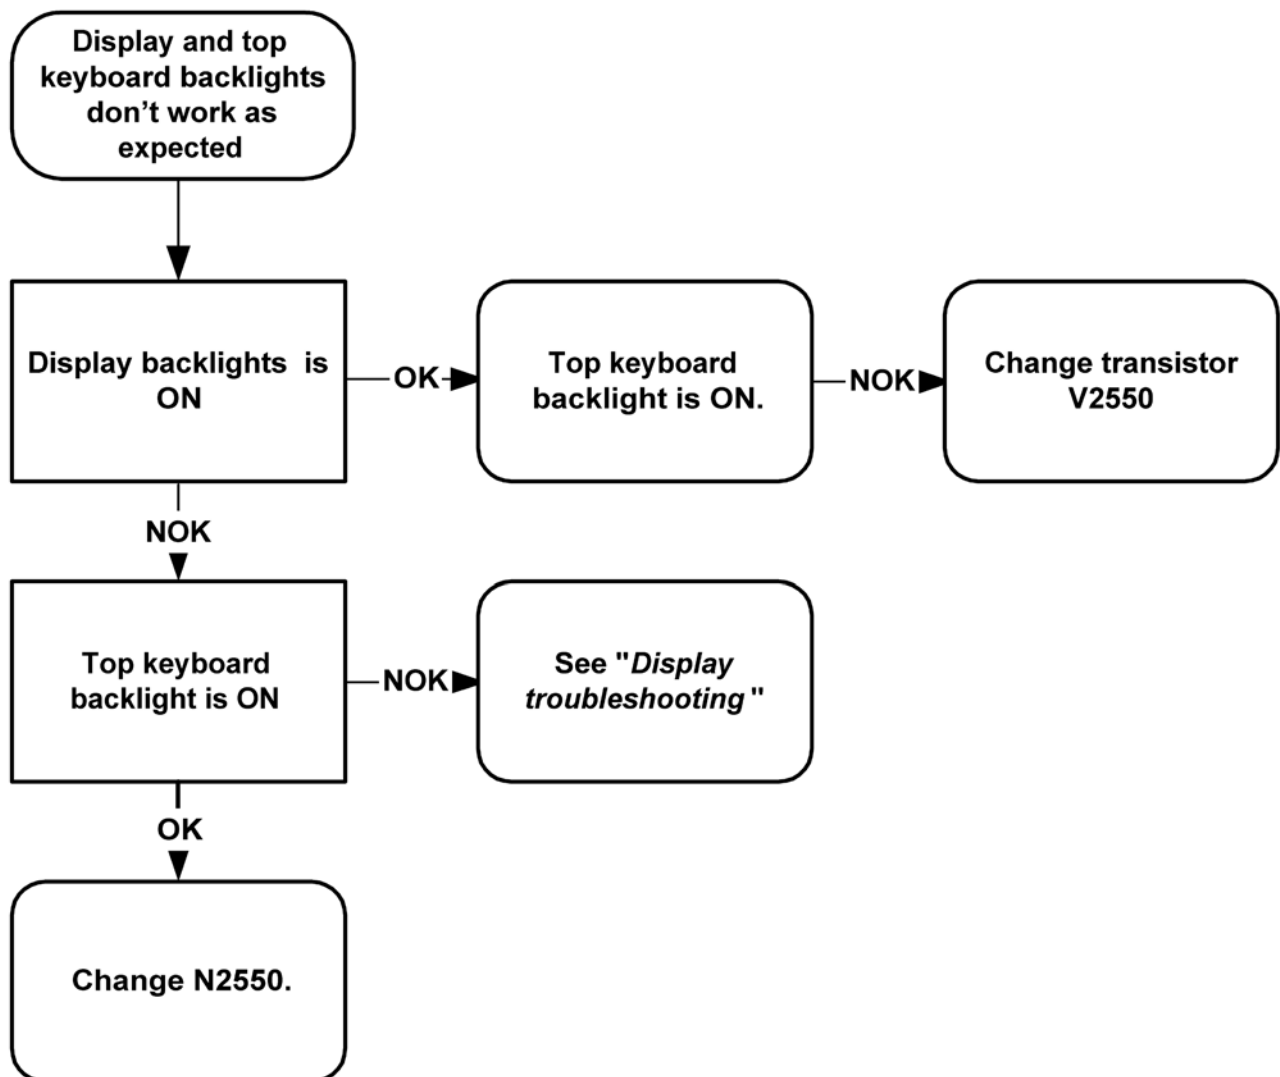


Main keyboard backlight troubleshooting

Context

The device has one LED driver that provides current for the main keyboard backlights.

Troubleshooting flow

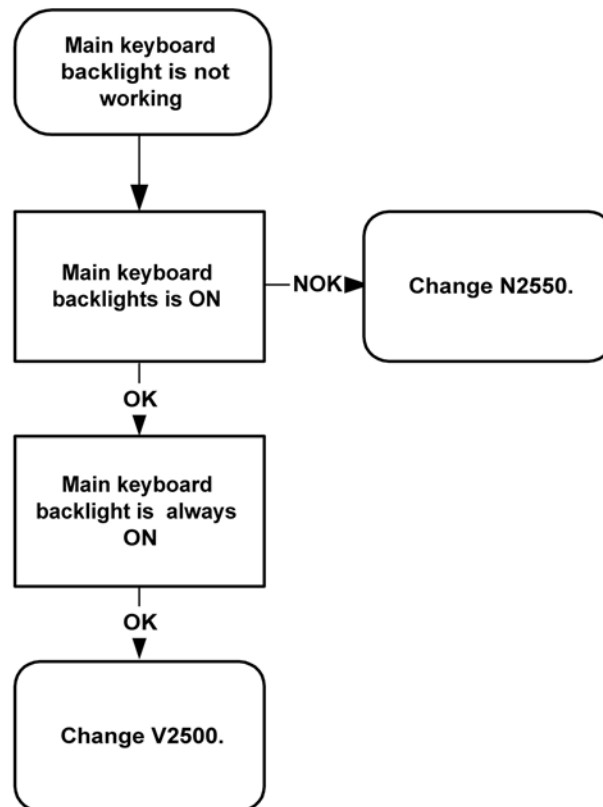

■ Audio troubleshooting

Audio troubleshooting test instructions

Differential external earpiece and internal earpiece outputs can be measured either with a single-ended or a differential probe.

When measuring with a single-ended probe each output is measured against the ground.

Internal handsfree output is measured using a current probe, if a special low-pass filter designed for measuring a digital amplifier is not available. Note also that when using a current probe, the input signal frequency must be set to 2kHz.

The input signal for each loop test can be either single-ended or differential.

Required equipment

The following equipment is needed for the tests:

- Oscilloscope
- Function generator (sine waveform)
- Current probe (Internal handsfree DPMA output measurement)
- Phoenix service software
- Battery voltage 3.7V

Test procedure

Audio can be tested using the Phoenix audio routings option. Three different audio loop paths can be activated:

- External microphone to Internal earpiece
- External microphone to Internal handsfree speaker
- Internal microphone to External earpiece

Each audio loop sets routing from the specified input to the specified output enabling a quick in-out test. Loop path gains are fixed and they cannot be changed using Phoenix. Correct pins and signals for each test are presented in the following table.

Phoenix audio loop tests and test results

The results presented in the table apply when no accessory is connected and battery voltage is set to 3.7V. Earpiece, internal microphone and speaker are in place during measurement. Applying a headset accessory during measurement causes a significant drop in measured quantities.

The gain values presented in the table apply for a differential output vs. single-ended/differential input.

Loop test	Input terminal	Output terminal	Path gain [dB] (fixed)	Input voltage [mVp-p]	Differential output voltage [mVp-p]	Output DC level [V]	Output current [mA]
External Mic to External Earpiece	XMICP and GND	HSEAR R P, HSEAR R N and GND	-2.9	1000	720	1.2	NA
		HSEAR P, HSEAR N and GND					
	XMICN and GND	HSEAR R P, HSEAR R N and GND					
		HSEAR P, HSEAR N and GND					
External Mic to Internal Earpiece	XMICP and GND	EarP and GND	-4.5	1000	600	1.2	NA
		EarN and GND					
	XMICN and GND	EarP and GND					
		EarN and GND					
External Mic to Internal handsfree	XMICP and GND	B2102 pads	-5	1000	560	0	25mA (calc.)
	XMICN and GND	B2102 pads					

Loop test	Input terminal	Output terminal	Path gain [dB] (fixed)	Input voltage [mVp-p]	Differential output voltage [mVp-p]	Output DC level [V]	Output current [mA]
Internal Mic to External Earpiece	B2100 (OUT/GND)	HSEAR R P, HSEAR R N and GND	22.7	100	1360	1.2	NA
		HSEAR P, HSEAR N and GND					
		HSEAR R P, HSEAR R N and GND					
		HSEAR P, HSEAR N and GND					

Measurement data


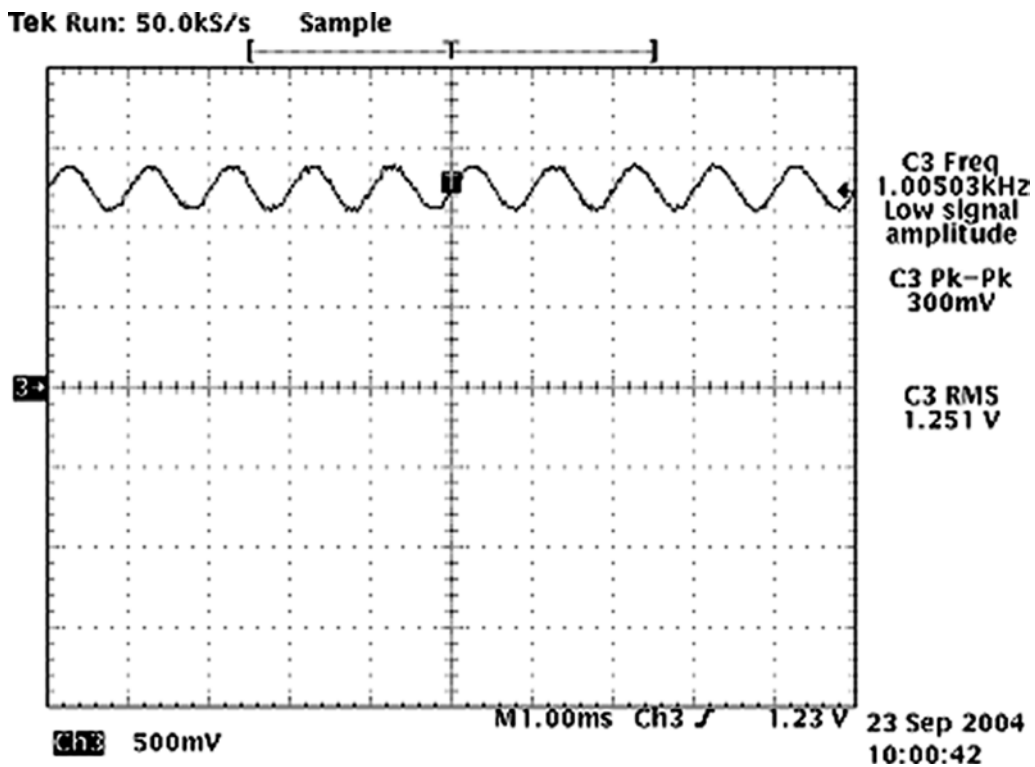


Figure 49 Single-ended output waveform of the Ext_in_HP_out measurement when earpiece is connected.

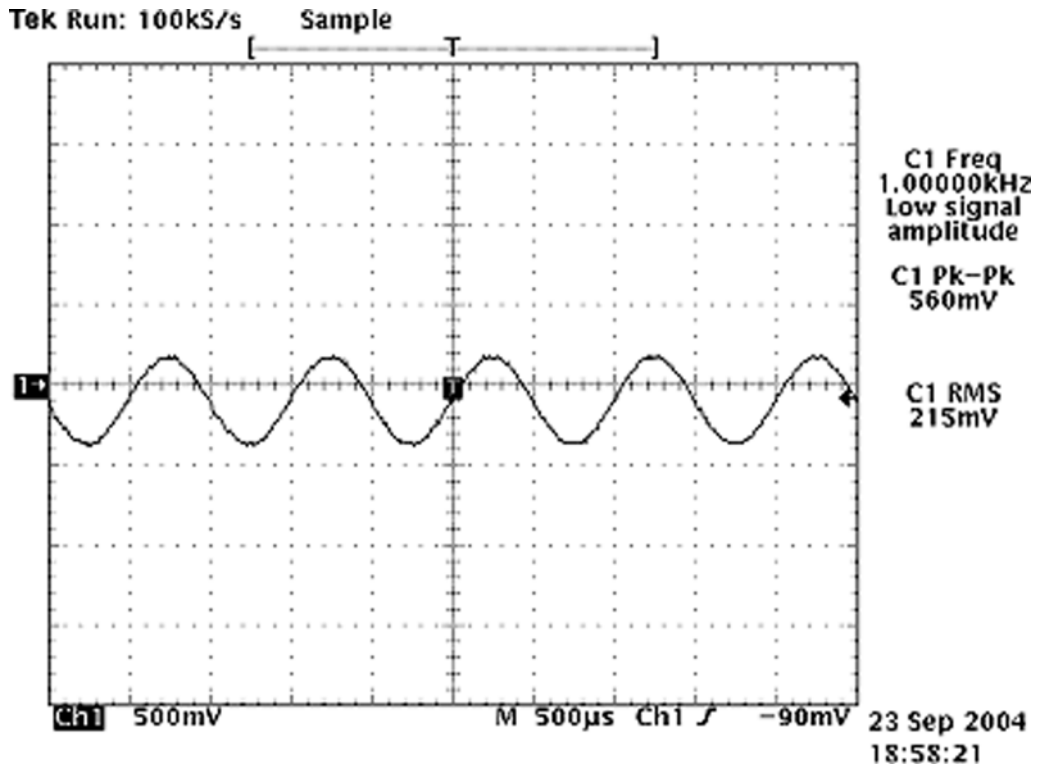

Legend

If a special low-pass filter designed for measuring digital amplifiers is unavailable, the measurement must be performed with a current probe and the input signal frequency must be 2kHz.

Figure 50 Differential output waveform of the Ext_in_IHF_out out loop measurement when speaker is connected.


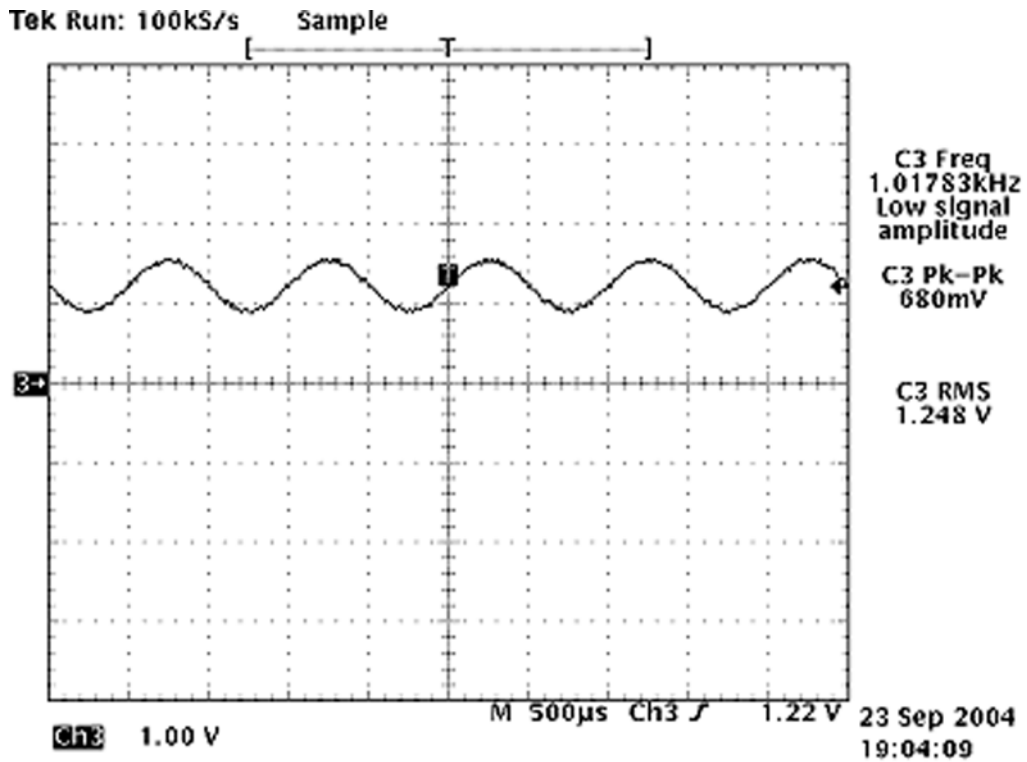


Figure 51 Single-ended output waveform of the HP_in_Ext_out loop when microphone is connected.


Internal earpiece troubleshooting

Troubleshooting flow

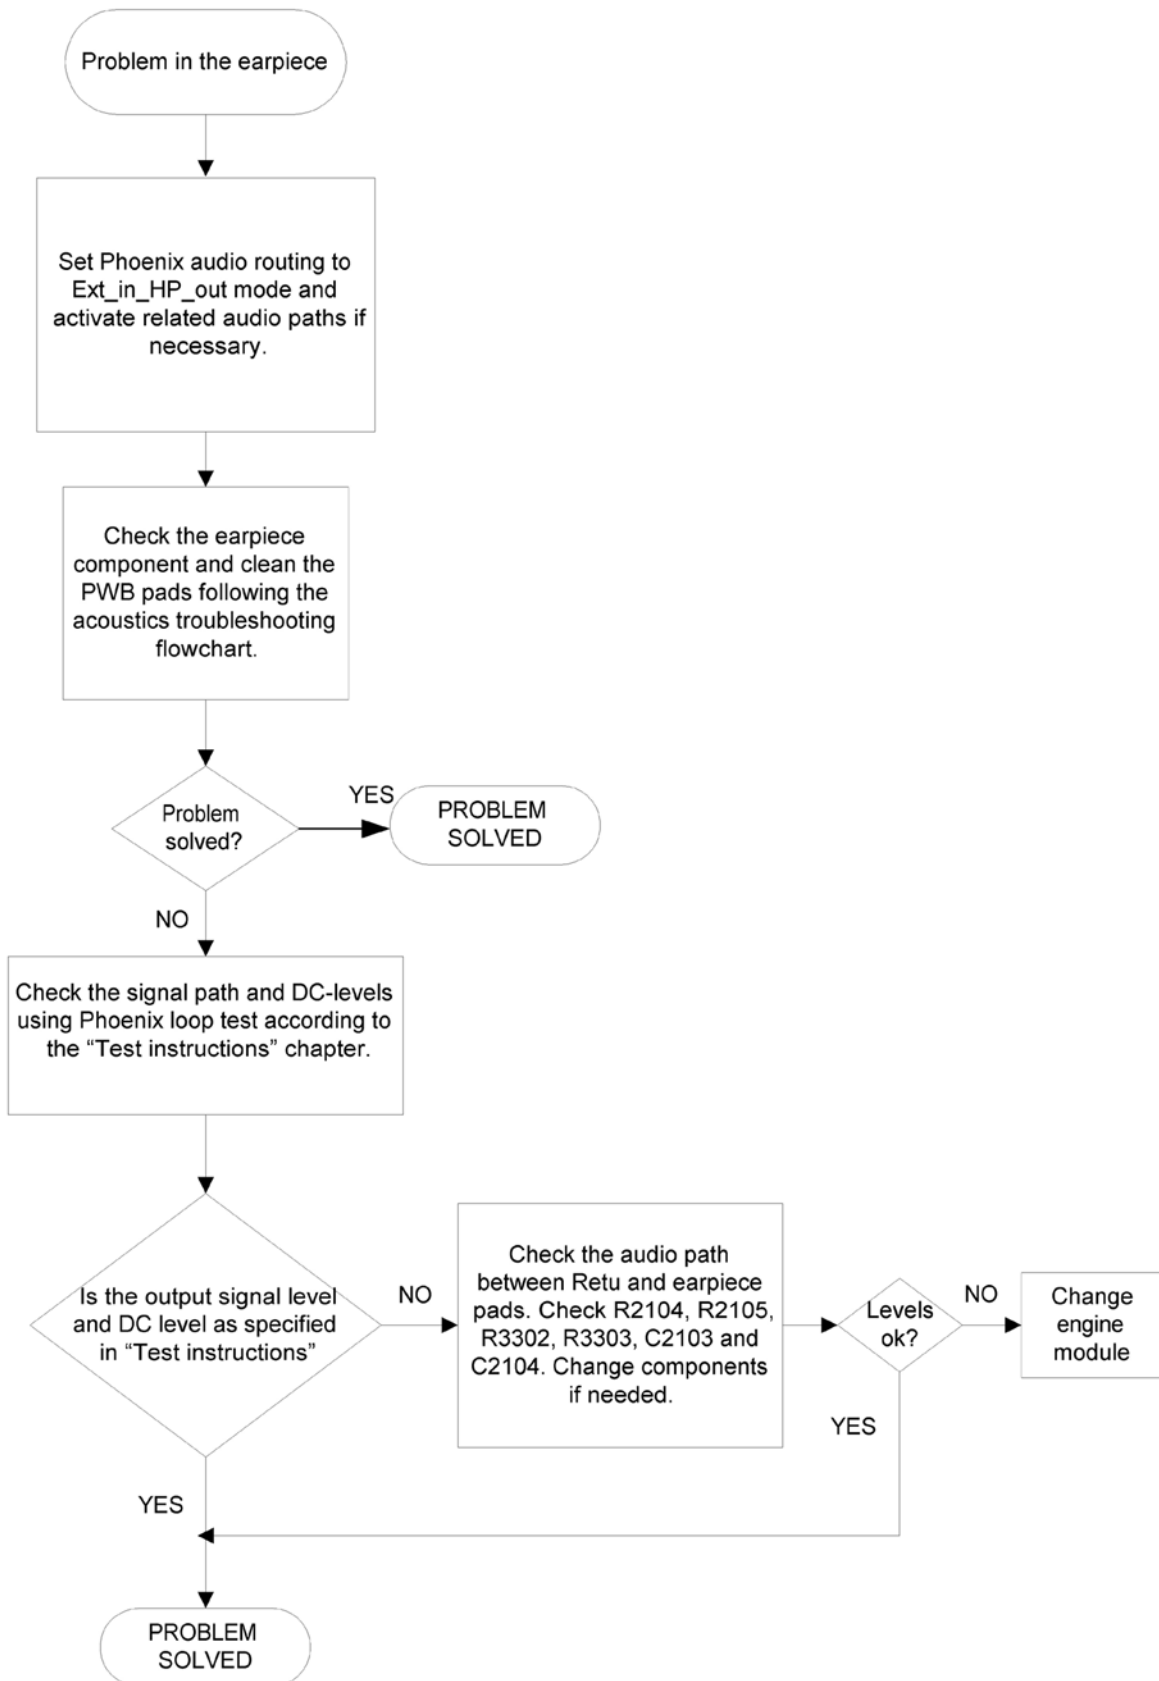


Internal microphone troubleshooting

Troubleshooting flow

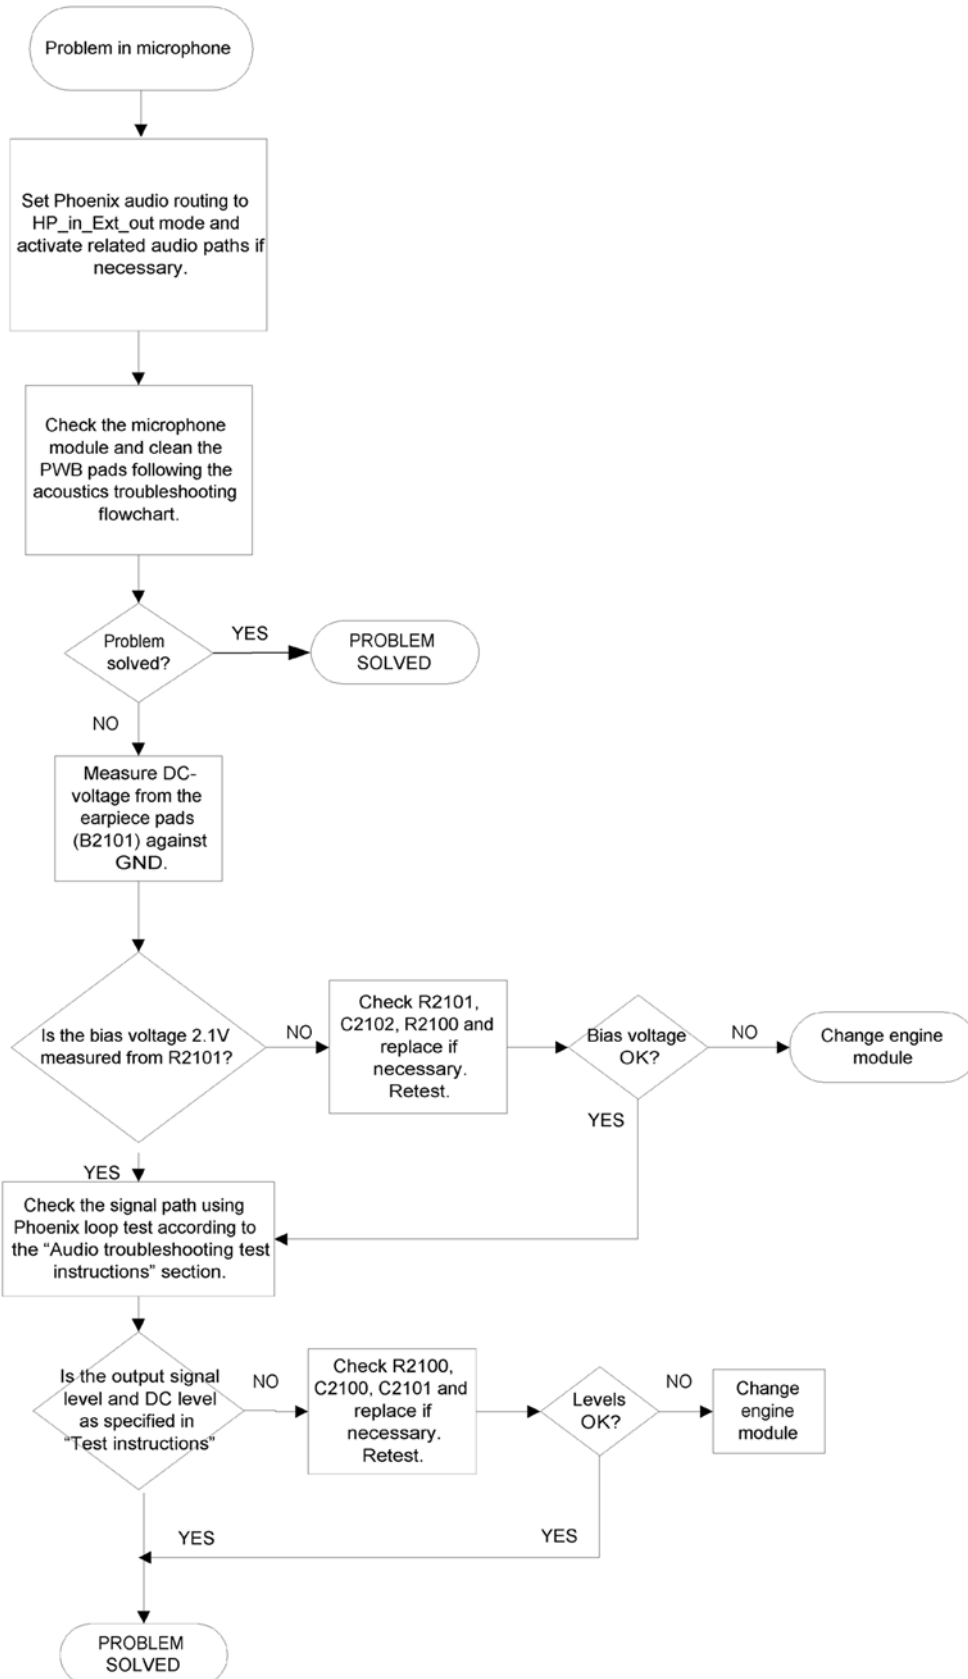


IHF troubleshooting

Troubleshooting flow

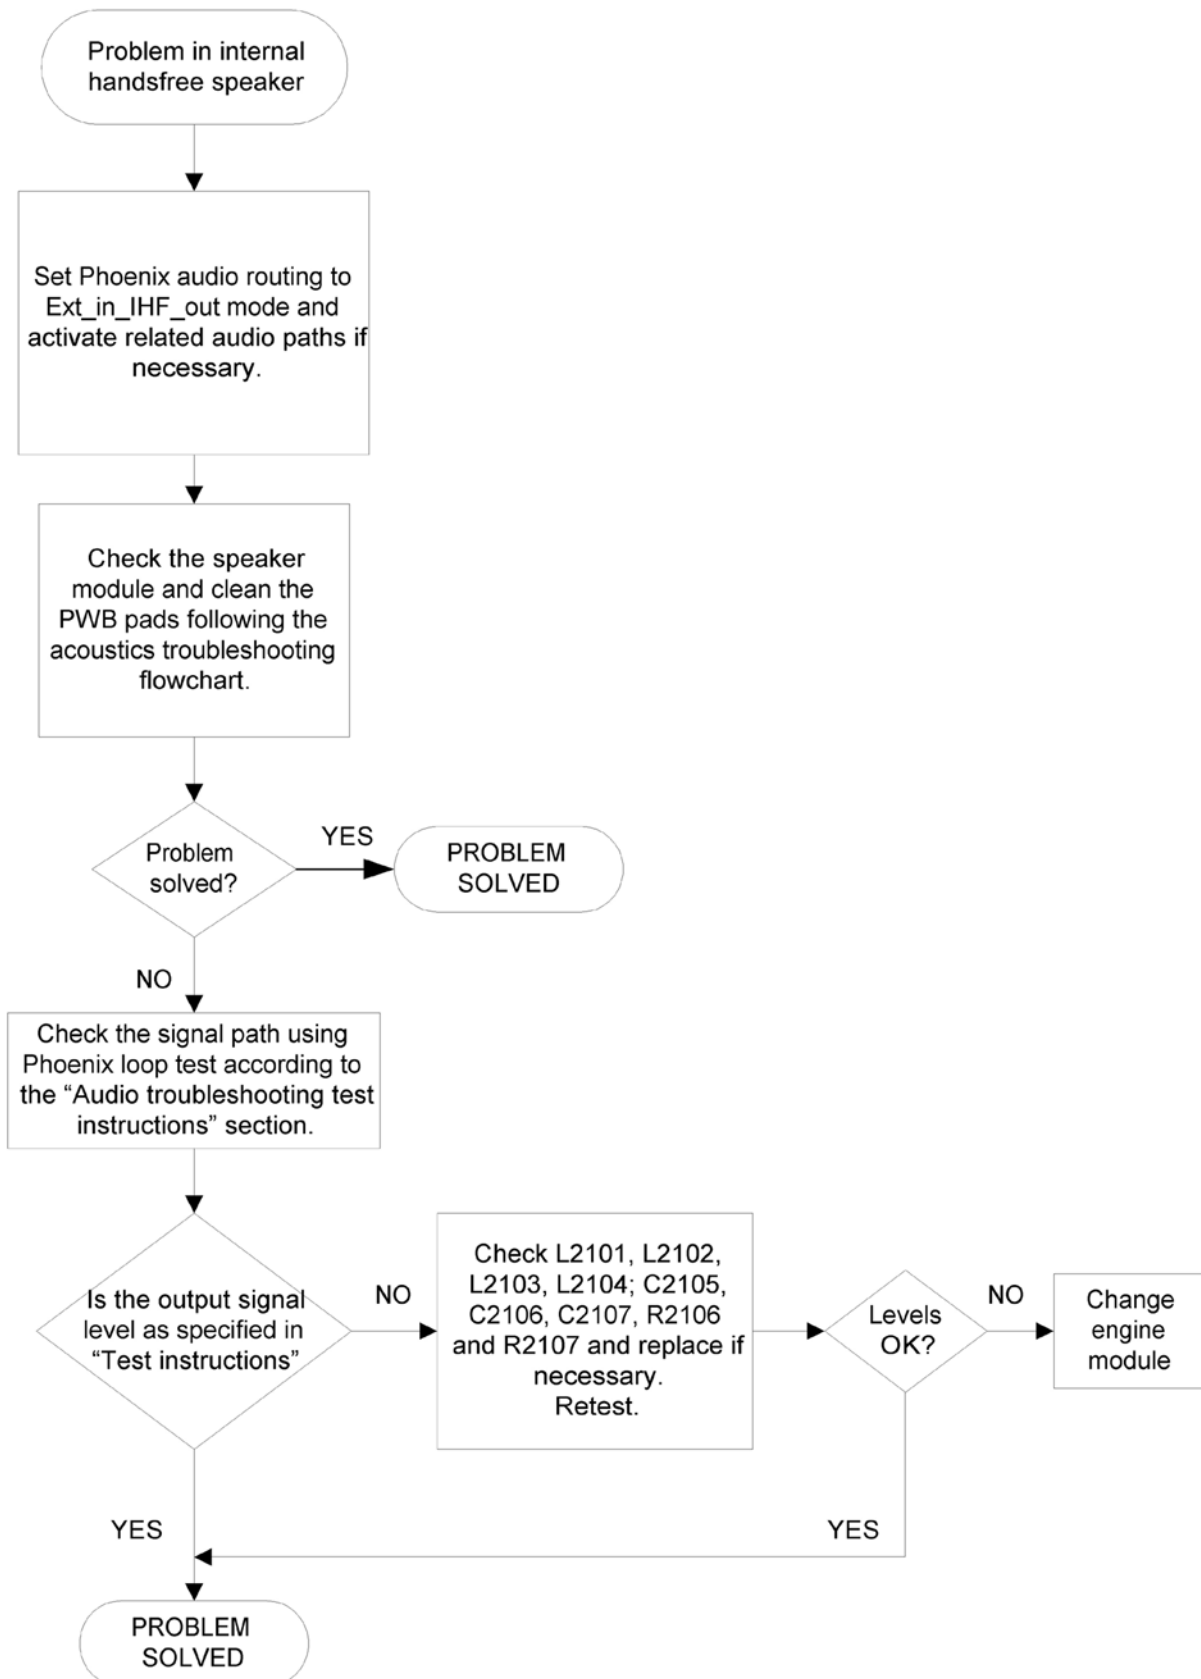


External microphone troubleshooting

Troubleshooting flow

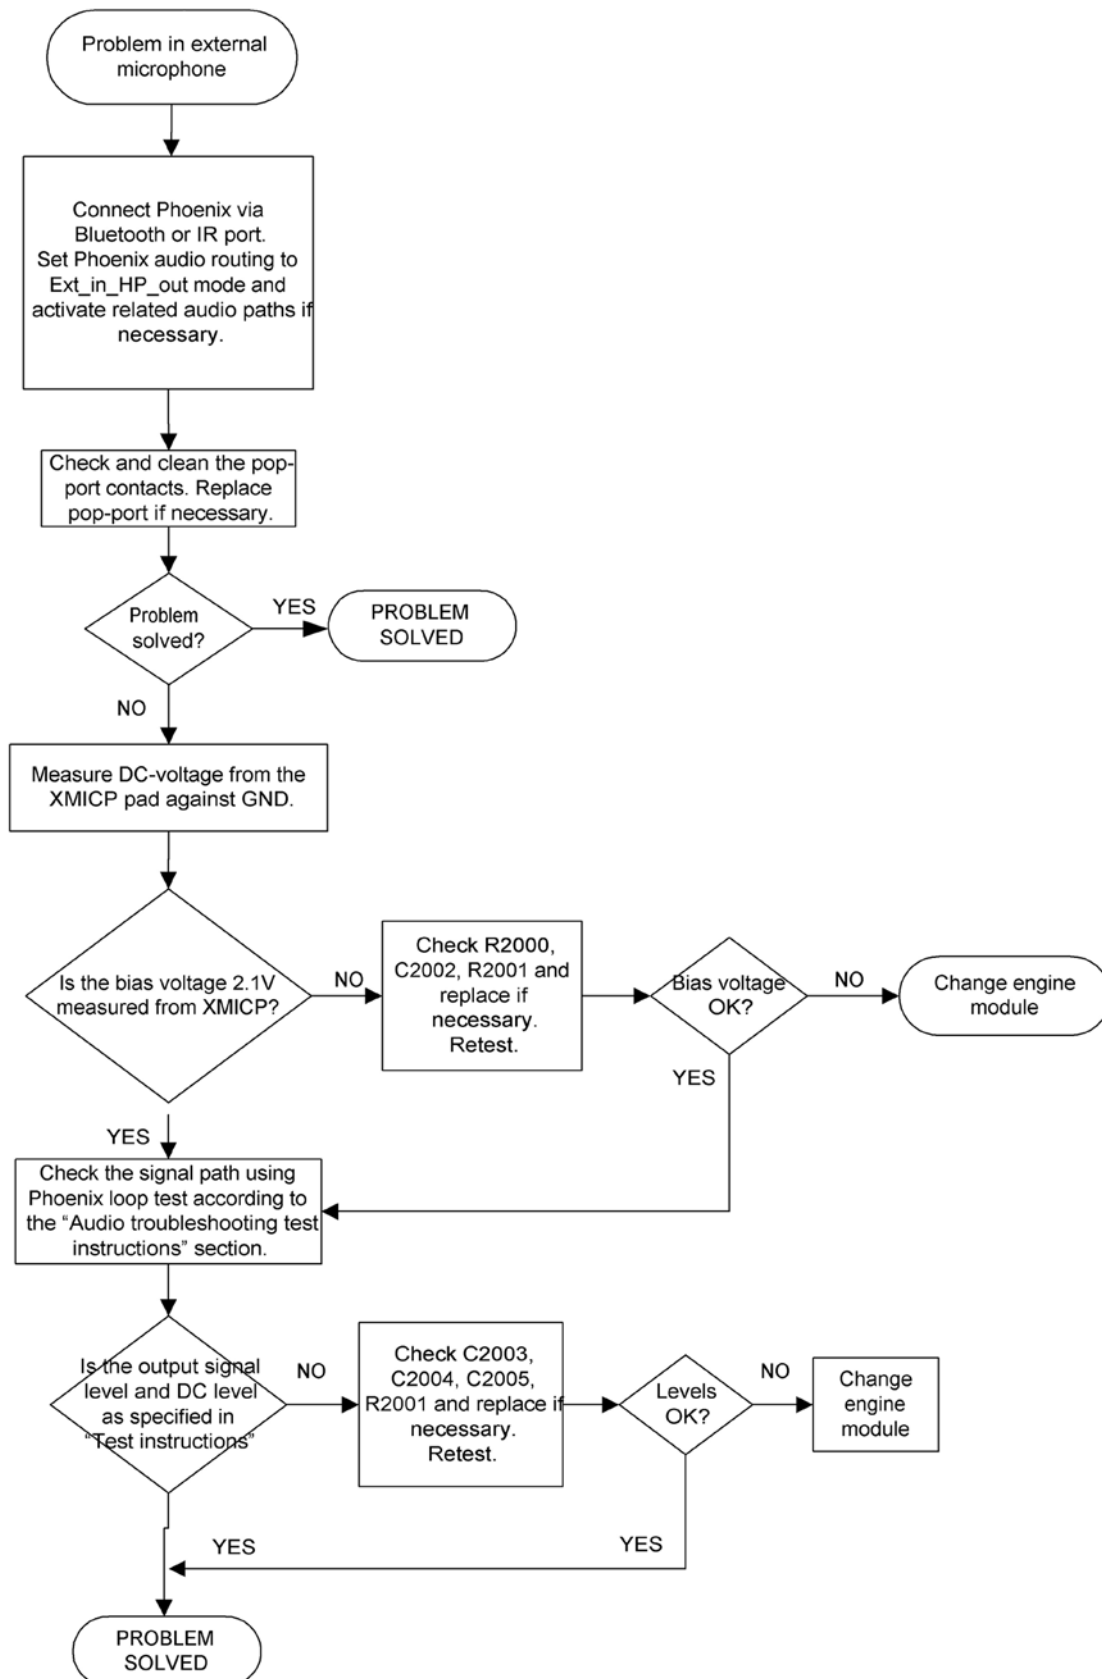


External earpiece troubleshooting

Troubleshooting flow

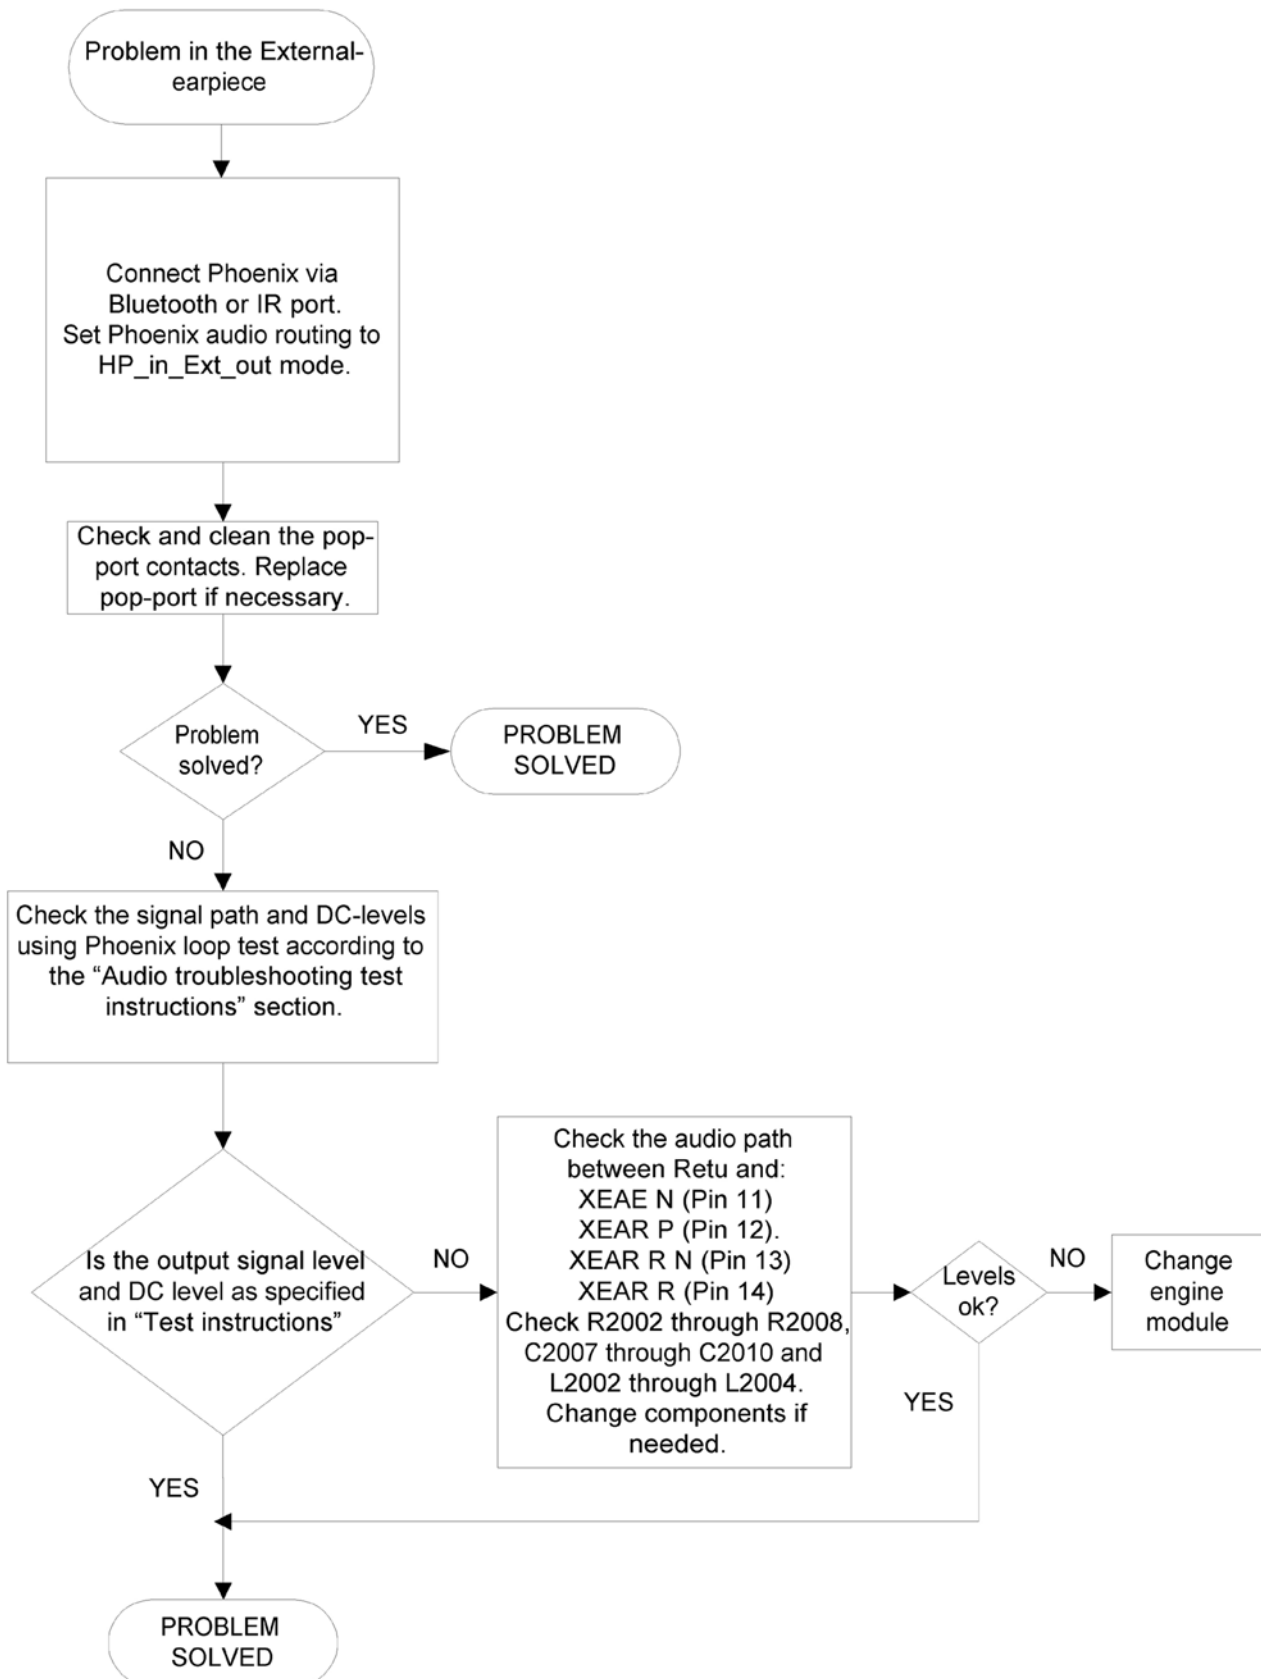

Vibra troubleshooting

Troubleshooting flow

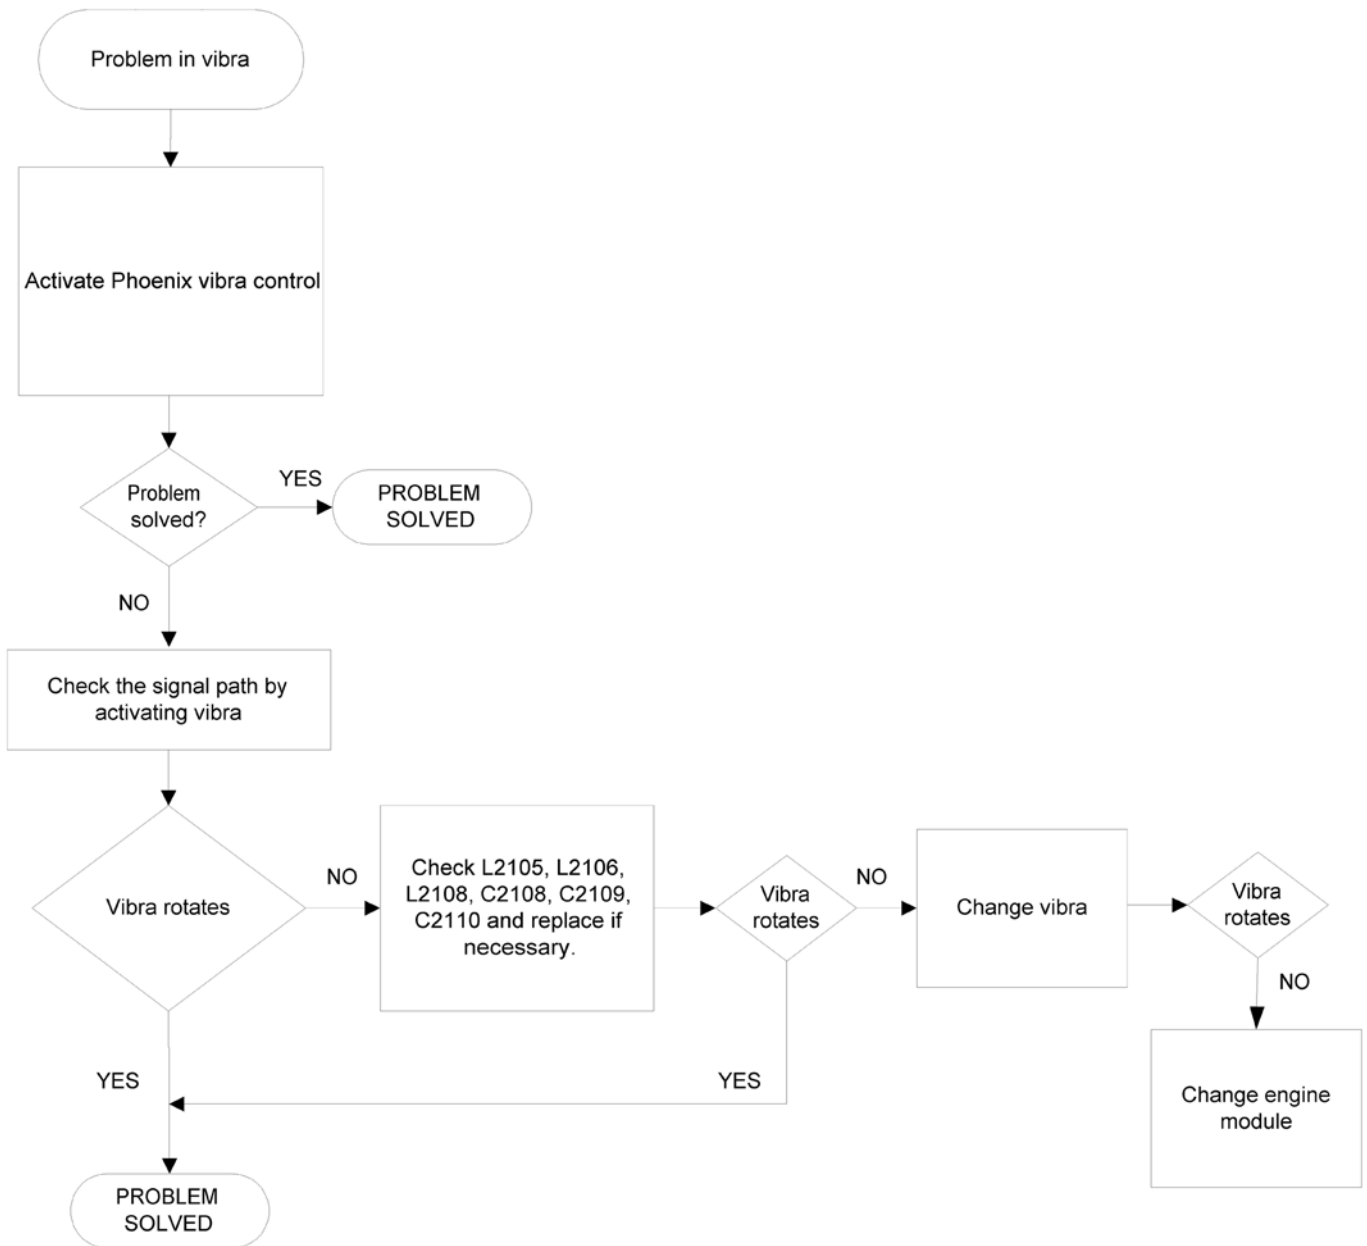

■ Baseband manual tuning guide

Energy management calibration

Before you begin

Energy Management (EM) calibration is performed to calibrate the setting (gain and offset) of AD converters in several channels (that is, **battery voltage**, **BSI**, **battery current**) to get an accurate AD conversion result.

Hardware setup:

- An external power supply is needed.
- Supply 12V DC from an external power supply to CU-4 to power up the phone.

- The phone must be connected to a CU-4 control unit with a product-specific flash adapter.

Steps

1. Place the phone to the docking station adapter (CU-4 is connected to the adapter).
2. Start *Phoenix* service software.
3. Choose **File**→ **Scan Product.** .
4. Choose **Tuning**→**Energy Management Calibration.**
5. To show the current values in the phone memory, click **Read**, and check that communication between the phone and CU-4 works.
6. Check that the **CU-4 used** check box is checked.
7. Select the item(s) to be calibrated.

Note: ADC calibration has to be performed before other item(s). However, if all calibrations are selected at the same time, there is no need to perform the ADC calibration first.

8. Click **Calibrate.**

The calibration of the selected item(s) is carried out automatically.

The candidates for the new calibration values are shown in the *Calculated values* column. If the new calibration values seem to be acceptable (please refer to the following "Calibration value limits" table), click **Write** to store the new calibration values to the phone permanent memory.

Table 12 Calibration value limits

Parameter	Min.	Max.
ADC Offset	-20	20
ADC Gain	12000	14000
BSI Gain	1100	1300
VBAT Offset	2400	2650
VBAT Gain	19000	23000
VCHAR Gain	N/A	N/A
IBAT (ICal) Gain	7750	12250

9. Click **Read** and confirm that the new calibration values are stored in the phone memory correctly. If the values are not stored to the phone memory, click **Write** and/or repeat the procedure again.
10. To end the procedure, close the *Energy Management Calibration* window.

7 — Camera Module Troubleshooting

(This page left intentionally blank.)

Table of Contents

Introduction to camera module troubleshooting.....	7-5
The effect of image taking conditions on image quality.....	7-6
Camera construction.....	7-10
Image quality analysis	7-12
Testing for dust in camera module.....	7-12
Testing camera image sharpness.....	7-14
Dirty camera lens protection window.....	7-14
Image bit errors.....	7-15
Camera troubleshooting flowcharts.....	7-16
Back camera troubleshooting.....	7-16
Camera hardware failure message troubleshooting.....	7-16
Camera baseband HW troubleshooting.....	7-17
Camera viewfinder troubleshooting.....	7-18
Bad camera image quality troubleshooting.....	7-19
Front camera troubleshooting.....	7-20
Front camera hardware failure message troubleshooting.....	7-20
Front camera HW baseband troubleshooting.....	7-21
Front camera bad image quality troubleshooting.....	7-23
Flash LED troubleshooting.....	7-23
Introduction to flash LED troubleshooting.....	7-23
Flash LED and image taking conditions.....	7-24
Analysing image quality.....	7-29
Possible faults in image quality.....	7-29
Testing flash module functionality.....	7-29
Testing image colours with flash.....	7-29
Testing flash power.....	7-29
Flash LED troubleshooting flowcharts.....	7-30
Flash LED HW baseband troubleshooting.....	7-30

List of Tables

Table 13 Camera specifications.....	7-10
-------------------------------------	------

List of Figures

Figure 52 Blurred image. Target too close.....	7-6
Figure 53 Blurring caused by shaking hands.....	7-7
Figure 54 Near objects get skewed when taking images from a moving vehicle.....	7-7
Figure 55 Noisy image taken in +70 degrees Celsius.....	7-8
Figure 56 Image taken against light.....	7-8
Figure 57 Flicker in an image; object illuminated by strong fluorescent light.....	7-9
Figure 58 A lens reflection effect caused by sunshine.....	7-9
Figure 59 Good image taken indoors.....	7-10
Figure 60 Good image taken outdoors.....	7-10
Figure 61 Camera module cross section and assembly principle.....	7-11
Figure 62 Camera module bottom view including serial numbering.....	7-12
Figure 63 Effects of dust on optical path.....	7-13
Figure 64 Image taken with clean protection window.....	7-15
Figure 65 Image taken with greasy protection window.....	7-15
Figure 66 Bit errors caused by JPEG compression.....	7-15

Figure 67 Example of a good quality image taken with the flash LED.....7-24
Figure 68 overexposed image.....7-25
Figure 69 Dark and noisy image.....7-26
Figure 70 Shaken image.....7-27
Figure 71 Camera white balance failure and overexposure.....7-28
Figure 72 Color difference between flash colour limit samples.....7-28

■ Introduction to camera module troubleshooting

Background, tools and terminology

Faults or complaints in camera operation can be roughly categorised into three subgroups:

- 1 Camera is not functional at all; no image can be taken.
- 2 Images can be taken but there is nothing recognizable in them.
- 3 Images can be taken and they are recognizable but for some reason the quality of images is seriously degraded.

Image quality is very hard to measure quantitatively, and even comparative measurements are difficult (comparing two images) to do, if the difference is small. Especially if the user is not satisfied with his/her device's image quality, and tells, for example, that the images are not sharp, it is fairly difficult to accurately test the device and get an exact figure which would tell whether the device is functioning properly.

Often subjective evaluation has to be used for finding out if a certain property of the camera is acceptable or not. Some training or experience of a correctly operating reference device may be needed in order to detect what actually is wrong.

It is easy for the user to take bad images in bad conditions. Therefore the camera operation has to be checked always in constant conditions (lighting, temperature) or by using a second, known-to-be good device as reference.

When checking for possible errors in camera functionality, knowing what error is suspected significantly helps the testing by narrowing down the amount of test cases. The following types of image quality problems may be expected to appear:

- Dust (black spots)
- Lack of sharpness
- Bit errors

Terms

<i>Dynamic range</i>	Camera's ability to capture details in dark and bright areas of the scene simultaneously.
<i>Exposure time</i>	Camera modules use silicon sensor to collect light and for forming an image. The imaging process roughly corresponds to traditional film photography, in which exposure time means the time during which the film is exposed to light coming through optics. Increasing the time will allow for more light hitting the film and thus results in brighter image. The operation principle is exactly the same with silicon sensor, but the shutter functionality is handled electronically i.e. there is no mechanical moving parts like in film cameras.
<i>Flicker</i>	Phenomenon, which is caused by pulsating in scene lighting, typically appearing as wide horizontal stripes in an image.
<i>Noise</i>	Variation of response between pixels with same level of input illumination.
<i>Resolution</i>	Usually the amount of pixels in the camera sensor; for example, RM-78 has a 1600 x 1200 pixel sensor resolution. In some occasions the term resolution is used for describing the sharpness of the images.

<i>Sensitivity</i>	Camera module's sensitivity to light. In equivalent illumination conditions, a less sensitive camera needs a longer exposure time to gather enough light in forming a good image. Analogous to ISO speed in photographic film.
<i>Sharpness</i>	Good quality images are 'sharp' or 'crisp', meaning that image details are well visible in the picture. However, certain issues, such as non-idealities in optics or high levels of digital zoom, cause image blurring, making objects in picture to appear 'soft'. Each camera type typically has its own level of performance.

■ The effect of image taking conditions on image quality

There are some factors, which may cause poor image quality, if not taken into account by the end user when shooting images, and thus may result in complaints. The items listed are normal to camera operation and are not a reason for changing the camera module.

Distance to target

The lens in the module is specified to operate satisfactorily from 70 cm to infinite distance of scene objects. In practice, the operation is such that close objects may be noticed to get more blurred when distance to them is shorter than 70 cm. The lack of sharpness is first visible in full resolution images. If observing just the viewfinder, even very close objects may seem to appear sharp. This is normal; do not change the camera module.



Figure 52 Blurred image. Target too close.

The amount of light available

In dim conditions camera runs out of sensitivity. The exposure time is long (especially in the night mode) and the risk of getting shaken (= blurred) images increases. In addition, image noise level grows. The maximum exposure time in the night mode is ¼ seconds. Therefore, images need to be taken with extreme care and by supporting the phone when the amount of light reflected from the target is low. Because of the longer exposure time and larger gain value, noise level increases in low light conditions. Sometimes blurring may even occur in daytime, if the image is taken very carelessly. See the figure below for an example. This is normal; do not change the camera module.

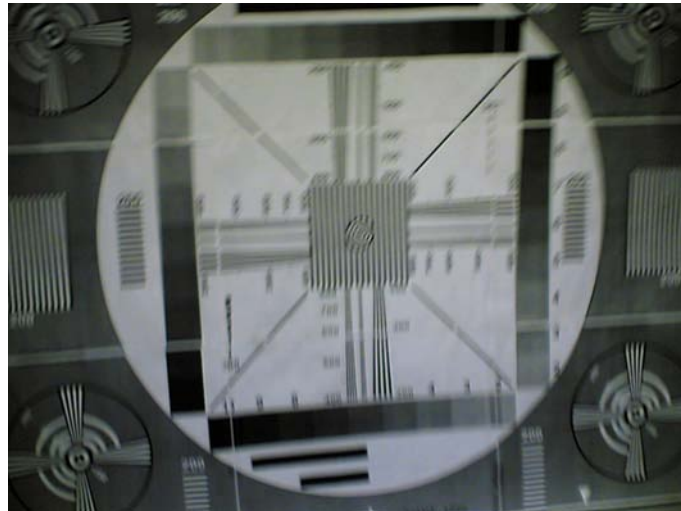


Figure 53 Blurring caused by shaking hands

Movement in bright light

If an image is taken of moving objects or if the device is used in a moving vehicle, object 'skewing' or 'tilting' may occur. This phenomenon is fundamental to most CMOS camera types, and usually cannot be avoided. The movement of camera or object sometimes cause blurring indoors or in dim lighting conditions because of long exposure time. This is normal; do not change the camera module.



Figure 54 Near objects get skewed when taking images from a moving vehicle

Temperature

High temperatures inside the mobile phone cause more noise to appear in images. For example, in +70 degrees (Celsius), the noise level may be very high, and it further grows if the conditions are dim. If the phone processor has been heavily loaded for a long time before taking an image, the phone might have considerably higher temperature inside than in the surrounding environment. This is also normal to camera operation; do not change the camera module.



Figure 55 Noisy image taken in +70 degrees Celsius

Phone display

If the display contrast is set too dark, the image quality degrades: the images may be very dark depending on the setting. If the display contrast is set too bright, image contrast appears bad and "faint". This problem is solved by setting the display contrast correctly. This is normal behaviour; do not change the camera module.

Basic rules of photography (especially shooting against light)

Because of dynamic range limitations, taking images against bright light might cause either saturated image or the actual target appear too dark. In practice, this means that when taking an image indoors and having, for example, a window behind the object, the result is usually poor. This is normal behaviour; do not change the camera module.

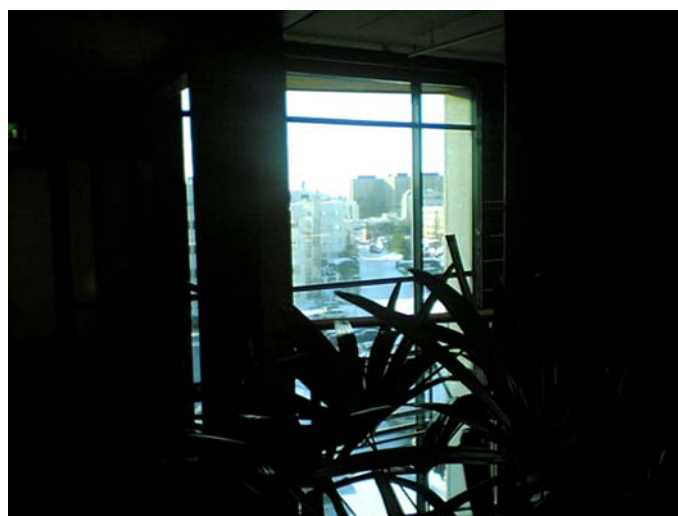


Figure 56 Image taken against light

Flicker

In some occasions a bright fluorescent light may cause flicker in the viewfinder and captured image. This phenomenon may also be a result, if images are taken indoors under the mismatch of 50/60 Hz electricity network frequency. The electricity frequency used is automatically detected by the camera module. In some very few countries, both 50 and 60 Hz networks are present and thus probability for the phenomenon increases. Flickering occurs also under high artificial illumination level. This is normal behaviour; do not change the camera module.



Figure 57 Flicker in an image; object illuminated by strong fluorescent light

Bright light outside of image view

Especially the sun can cause clearly visible lens glare phenomenon and poor contrast in images. This happens because of undesired reflections inside the camera optics. Generally this kind of reflections are common in all optical systems. This is normal behaviour; do not change the camera module.



Figure 58 A lens reflection effect caused by sunshine

Examples of good quality images



Figure 59 Good image taken indoors



Figure 60 Good image taken outdoors

■ Camera construction

This section describes the mechanical construction of the camera module for getting a better understanding of the actual mechanical structure of the module.

Table 13 Camera specifications

Sensor type	CMOS Sensor
Photo detectors	1.9 million
F number/Aperture	f/3.2
Focal length	4.9mm (35mm equivalent 37mm)
Focus range	70 cm to infinity
Still Image resolutions	1600x1200, 1280x960, 640x480, 320x240, 160x1200

Still images file format	EXIF (JPEG), *.jpg
Video resolutions	640x480, 352x288, 176x144, 128x96. All at 30 frames per second
Video clip length	10 seconds or free, maximal clip length in free mode is 1 hour (limited by amount of space on external memory card)
Video file format	3GPP, *.3gp
Exposure	Automatic
White Balance	Automatic
Colours	16.7 million / 24-bit
Capture Modes	Night mode, Sequence mode, self timer

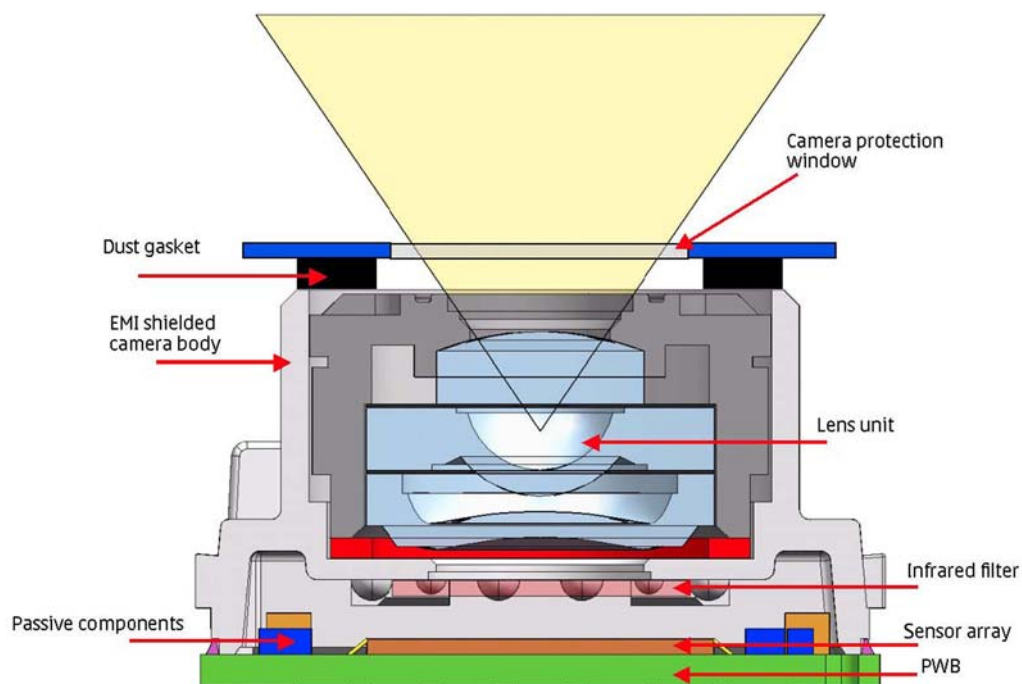


Figure 61 Camera module cross section and assembly principle

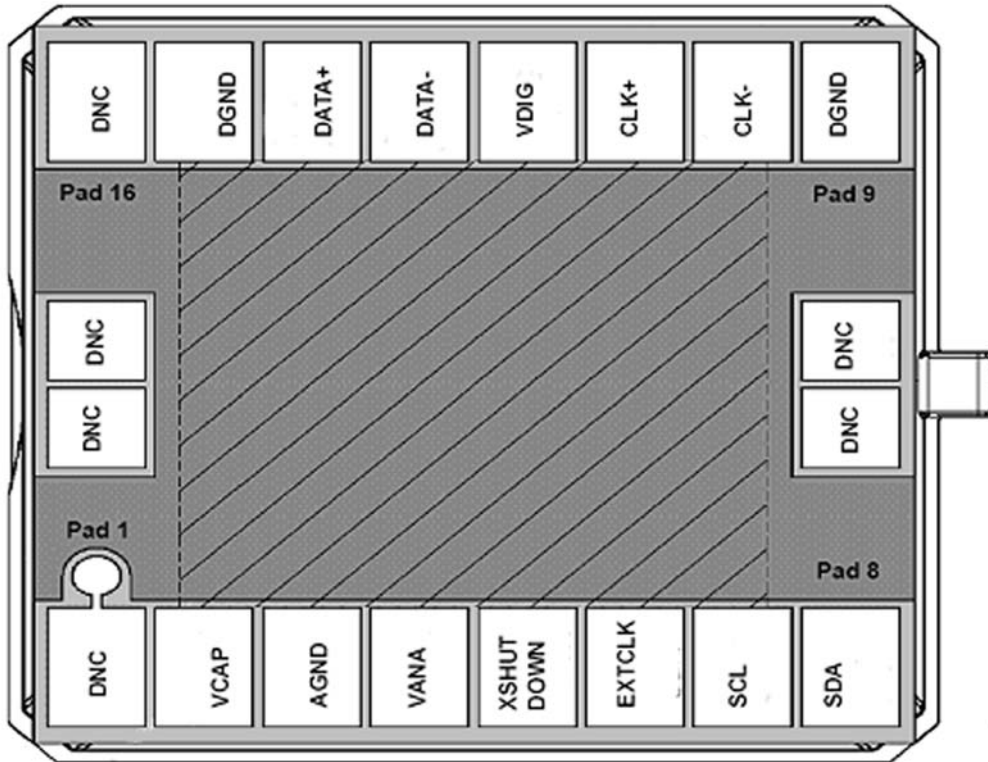


Figure 62 Camera module bottom view including serial numbering

The camera module as a component is not a repairable part, meaning that the components inside the module may not be changed. Cleaning dust from the front face is allowed only. Use clean compressed air.

The camera module uses socket type connecting. For versioning, laser marked serial numbering is used on the PWB.

The main parts of the module are:

- Lens unit including lens aperture.
- Infrared filter; used to prevent infrared light from contaminating the image colors. The IR filter is glued to the EMI shielded camera body.
- Camera body; made of conductive metallized plastic and attached to the PWB with glue.
- Sensor array including DSP functions is glued and wire-bonded to the PWB.
- PWB, FR-4 type
- Passive components
- Camera protection window; part of the phone cover mechanics
- Dust gasket between the lens unit and camera protection window

■ Image quality analysis

Testing for dust in camera module

Symptoms and diagnosis

For detecting these kinds of problems, take an image of a uniform white surface and analyse it in full resolution. A good quality PC monitor is preferred for analysis. Search carefully, since finding these defects is not always easy. Figure "Effects of dust on optical path" is an example image containing easily detectable dust problems.

When taking a white image, use uniformly lightened white paper or white wall. One possibility is to use uniform light but in this case make sure that the camera image is not flickering when taking the test image. In case flickering happens, try to reduce illumination level. Use JPEG image format for analysing, and set the image quality parameter to 'High Quality'.

Black spots in an image are caused by dirt particles trapped inside the optical system. Clearly visible and sharp edged black dots in an image are typically dust particles on the image sensor. These spots are searched for in the manufacturing phase, but it is possible that the camera body cavity contains a particle, which may move onto the image sensor active surface, for example, when the phone is dropped. Thus it is also possible that the problem will disappear before the phone is brought to service. The camera should be replaced if the problem is present when the service technician analyses the phone.

If a dust particle is lying on the infrared filter surface on either side, they are hard to locate because they are out of focus, and appear in the image as large, grayish and fading-edge 'blobs'. Sometimes they are invisible to the eye, and thus the user probably does not notice them at all. However, it is possible that a larger particle disturbs the user, causing need for service.



Figure 63 Effects of dust on optical path

If large dust particles get trapped on top of the lens surface in the cavity between camera window and lens, they will cause image blurring and poor contrast. The dust gasket between the window and lens should prevent any particles from getting into the cavity after the manufacturing phase. Dust in this position should be blown away by using compressed air.

Unauthorized disassembling of the product can also be the root of the problem. However, in most cases it should be possible to remove the particle(s) by using clean compressed air. Never wipe the lens surface before trying compressed air; the possibility of damaging the lens is substantial. Always check the image sharpness after removing dust.

Testing camera image sharpness

Symptoms and diagnosis

If pictures taken with a device are claimed to be blurry, there are six possible sources for the problem:

- 1 The protection window is fingerprinted, soiled, dirty, visibly scratched or broken.
- 2 The photographed object is too close – the camera lens operates with distances from 70 cm to infinity. This is no cause to replace camera module.
- 3 User has tried to take pictures in too dark conditions, and images are blurred due to handshake or movement. This is no cause to replace camera module.
- 4 There is dirt between the protection window and camera lens.
- 5 The protection window is defective. This can be either a manufacturing failure or caused by the user. The window should be changed.
- 6 The camera lens is misfocused because of a manufacturing error.
- 7 Very high level of digital zoom is used

A quantitative analysis of sharpness is very difficult to conduct in any other environment than optics laboratory. Therefore, subjective analysis should be used.

If no visible defects (items 1-4) are found, a couple of test images should be taken. Generally, a well-illuminated typical indoor scene can be used as a target. The main considerations are:

- The protection window has to be clean.
- The amount of light (300 – 600 lux (bright office lighting)) is sufficient.
- The scene should contain, for example, small objects for checking sharpness. Their distance should be 1 – 2 meters.
- If possible, compare the image to another image of the same scene, taken with a different device. Note that the reference device has to be a similar Nokia phone.

Steps

1. Take several images of small objects in the distance of 1-2 metres.
2. Analyse the images on a PC screen at 100% scaling with the reference images.
Pay attention to the computer display settings: at least 65000 colors (16-bit) have to be used. True colour (24-bit, 16 million colours) or 32-bit (full colour) setting is recommended.

Next action

If there appears to be a clearly noticeable difference between the reference image and the test images, the module might have a misfocused lens -> change the module.

Re-check the resolution after changing the camera module.

If the changed module produces the same result, the fault is probably in the camera window. Check the window by looking carefully through it when replacing the module.

Dirty camera lens protection window

The following series of images demonstrates the effects of fingerprints on the camera protection window.

It should be noted that the effects of any dirt in images can vary much. It may be difficult to judge whether the window has been dirty or if something else is wrong. Therefore, the cleanness of the protection window should always be checked and the window should be wiped clean with a suitable cloth.

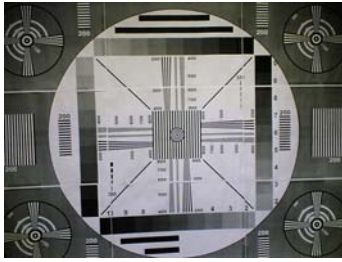


Figure 64 Image taken with clean protection window

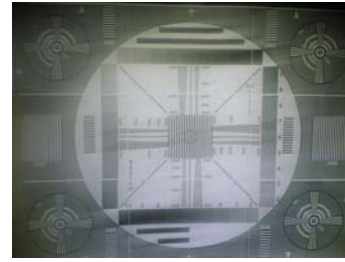


Figure 65 Image taken with greasy protection window

Image bit errors

Bit errors are image defects caused by data transmission errors between the camera module and the phone baseband and/or errors inside the module.

Usually bit errors can be easily detected in images, and they are best visible in full resolution images. A good practice is to use a uniform white test target when analysing these errors. The errors are clearly visible, colourful sharp dots or lines in camera images. See the following figure.



Figure 66 Bit errors caused by JPEG compression

One type of bit error is a lack of bit depth. In this case, the image is almost totally black under normal conditions, and only senses something in very highly illuminated environments. Typically this is a contact problem between the camera module and the phone main PWB. Very black images and viewfinder may also be caused by failure of the 2.8V supply to the camera. You should check the camera assembly and connector contacts.

If the fault is in the camera module, bit errors are typically visible only when using some specific image resolution. For example, in case of a viewfinder fault, the error might exist but is not visible in a full size image.

■ Camera troubleshooting flowcharts


Back camera troubleshooting

Camera hardware failure message troubleshooting

Context

If you get a hardware failure message when using the camera, follow the next troubleshooting flowchart.

Troubleshooting flow

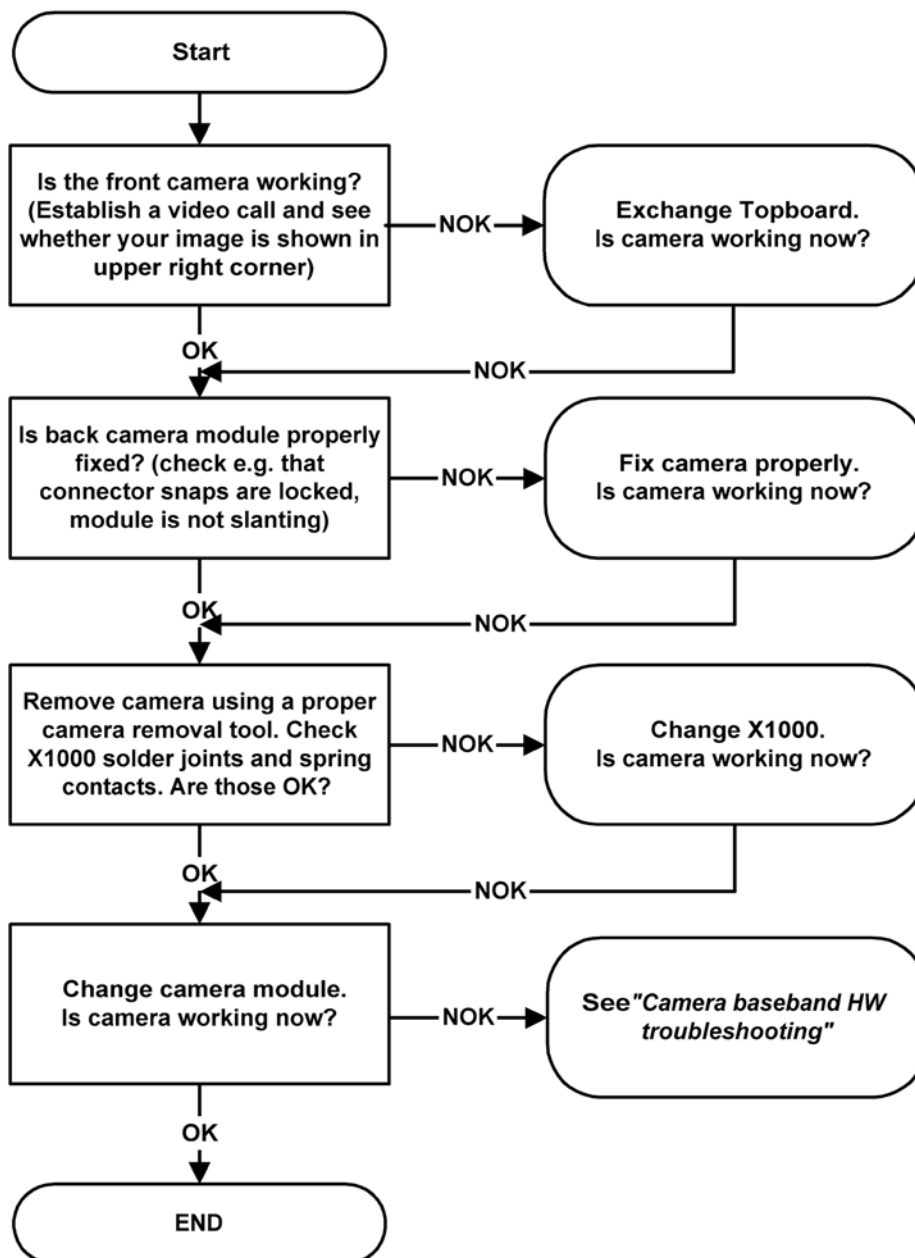


Note: Make sure that the phone has the latest software before continuing.

Camera baseband HW troubleshooting


Troubleshooting flow

Note: the camera application must be activated for any camera signals including voltages to be present

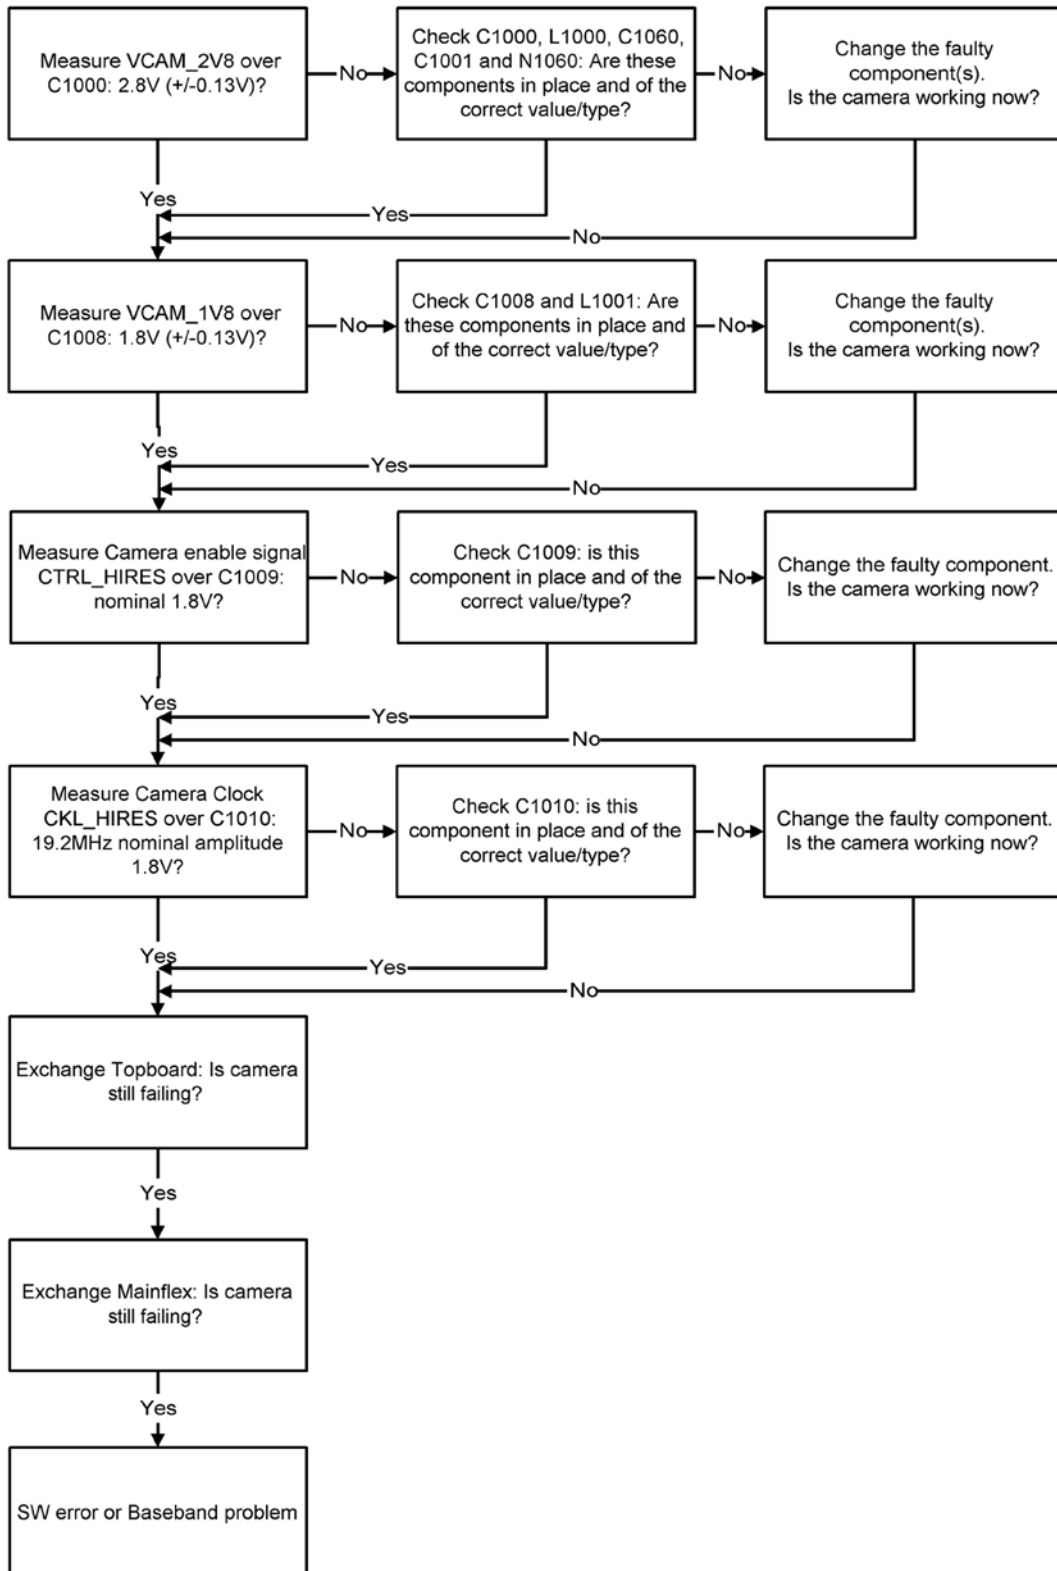


Camera viewfinder troubleshooting

Troubleshooting flow

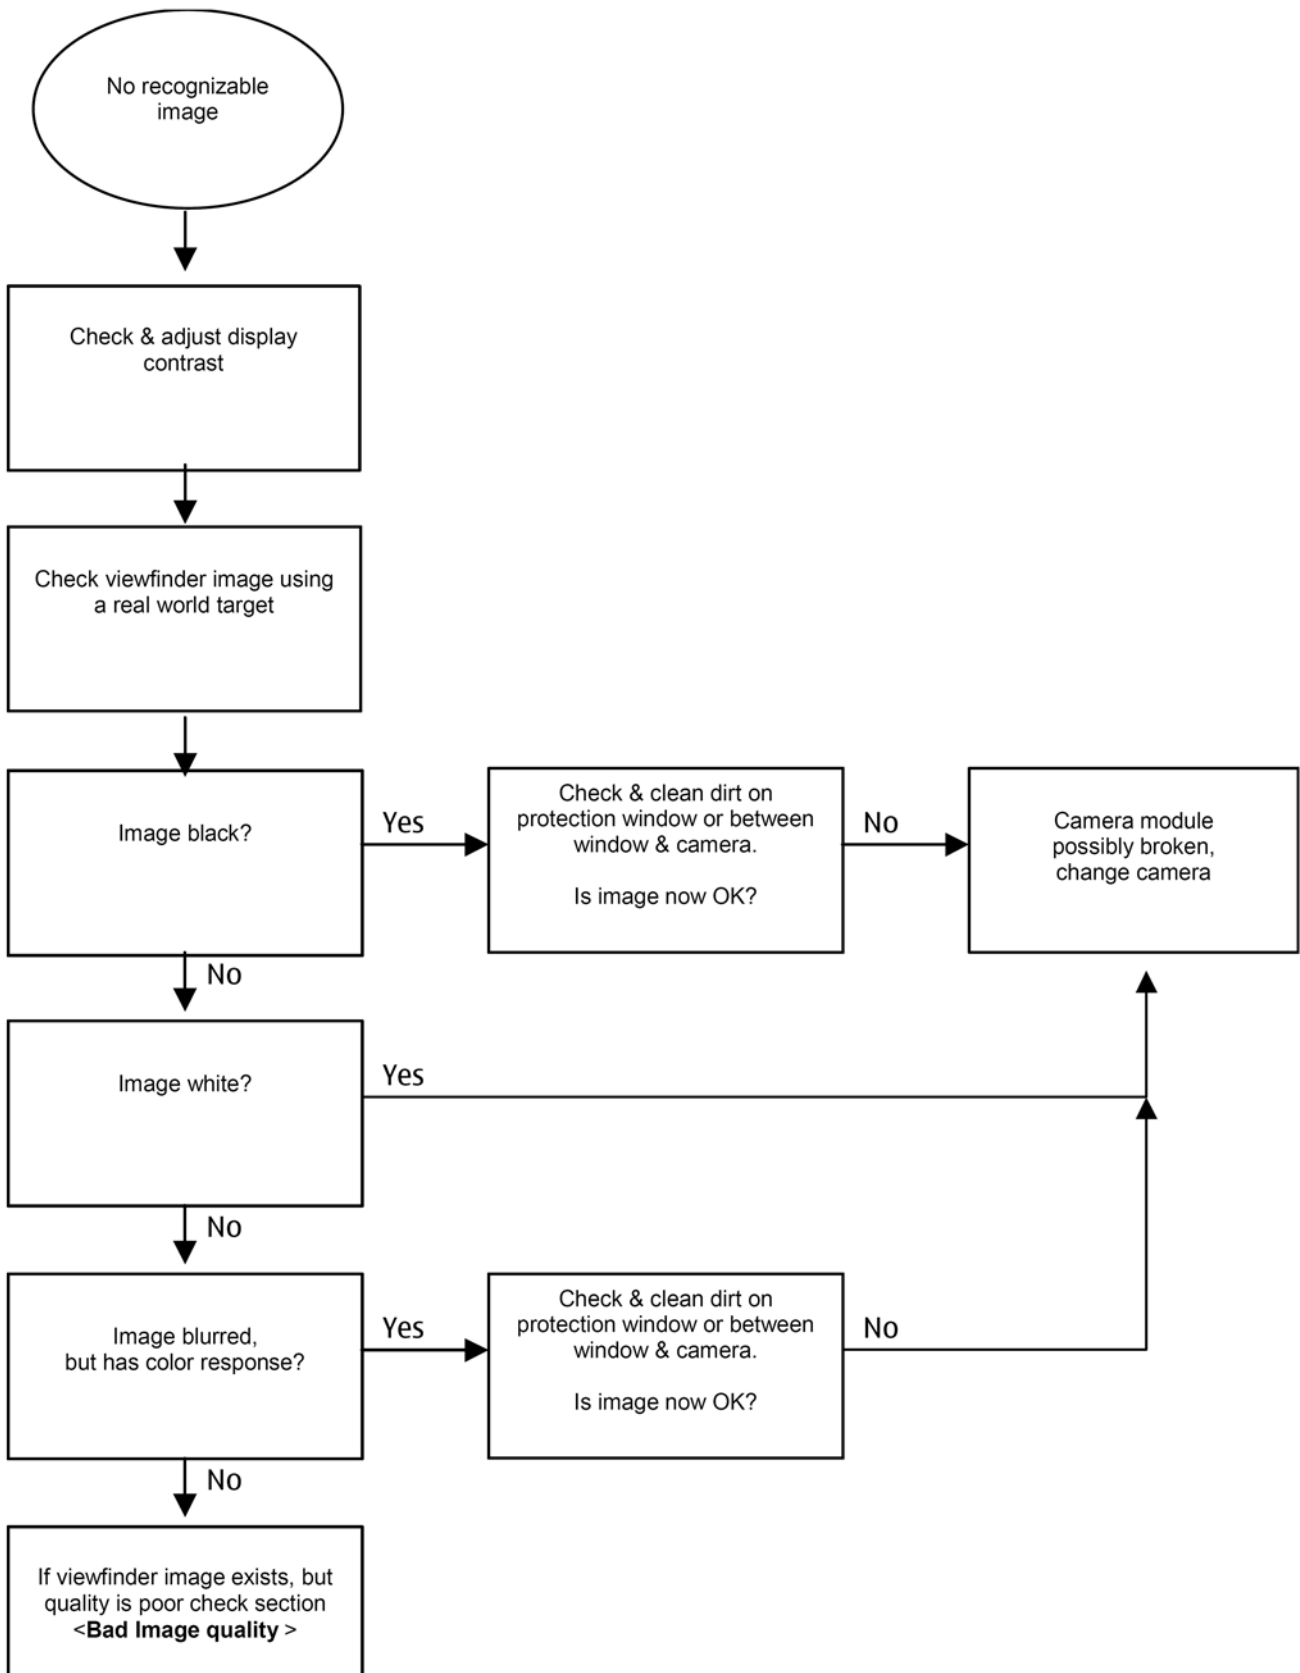

Bad camera image quality troubleshooting


Troubleshooting flow

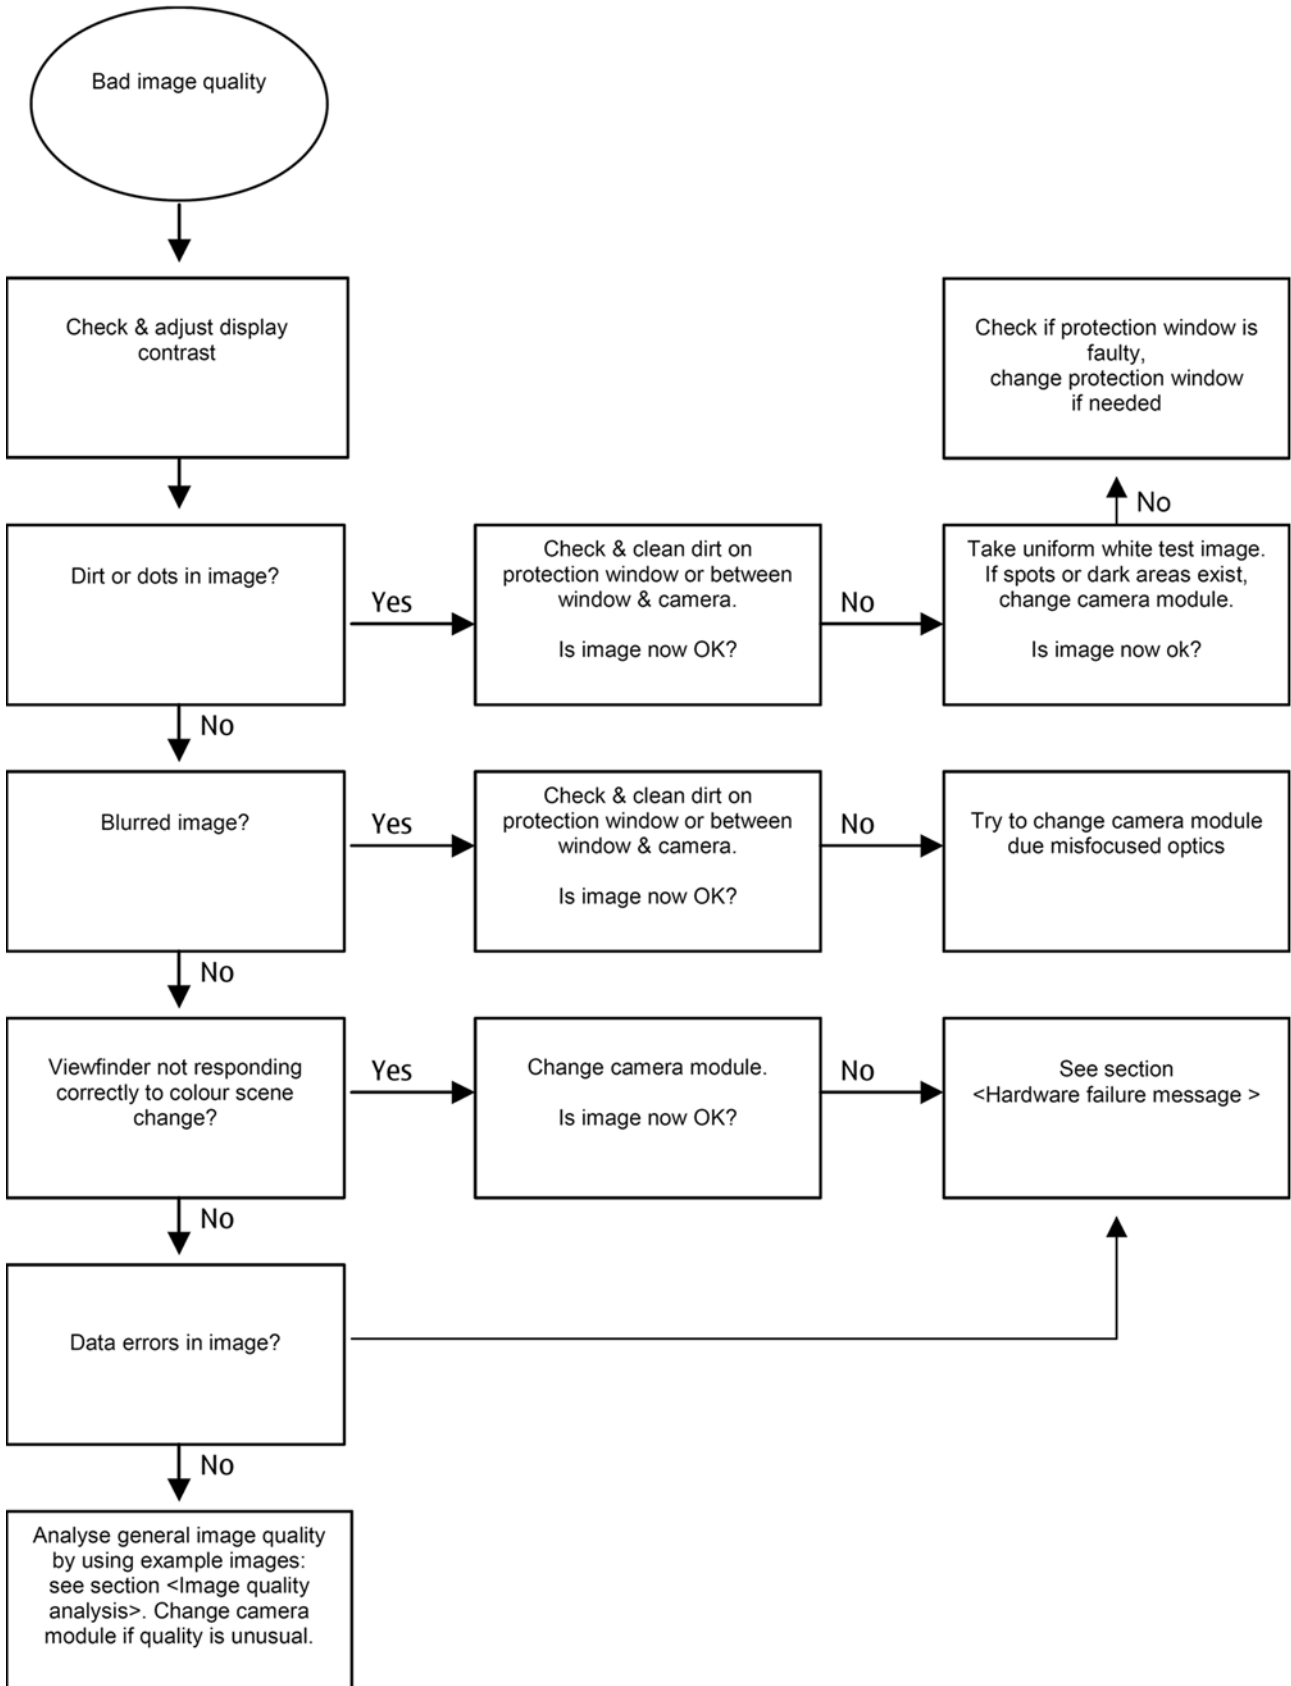

Front camera troubleshooting

Front camera hardware failure message troubleshooting


Troubleshooting flow

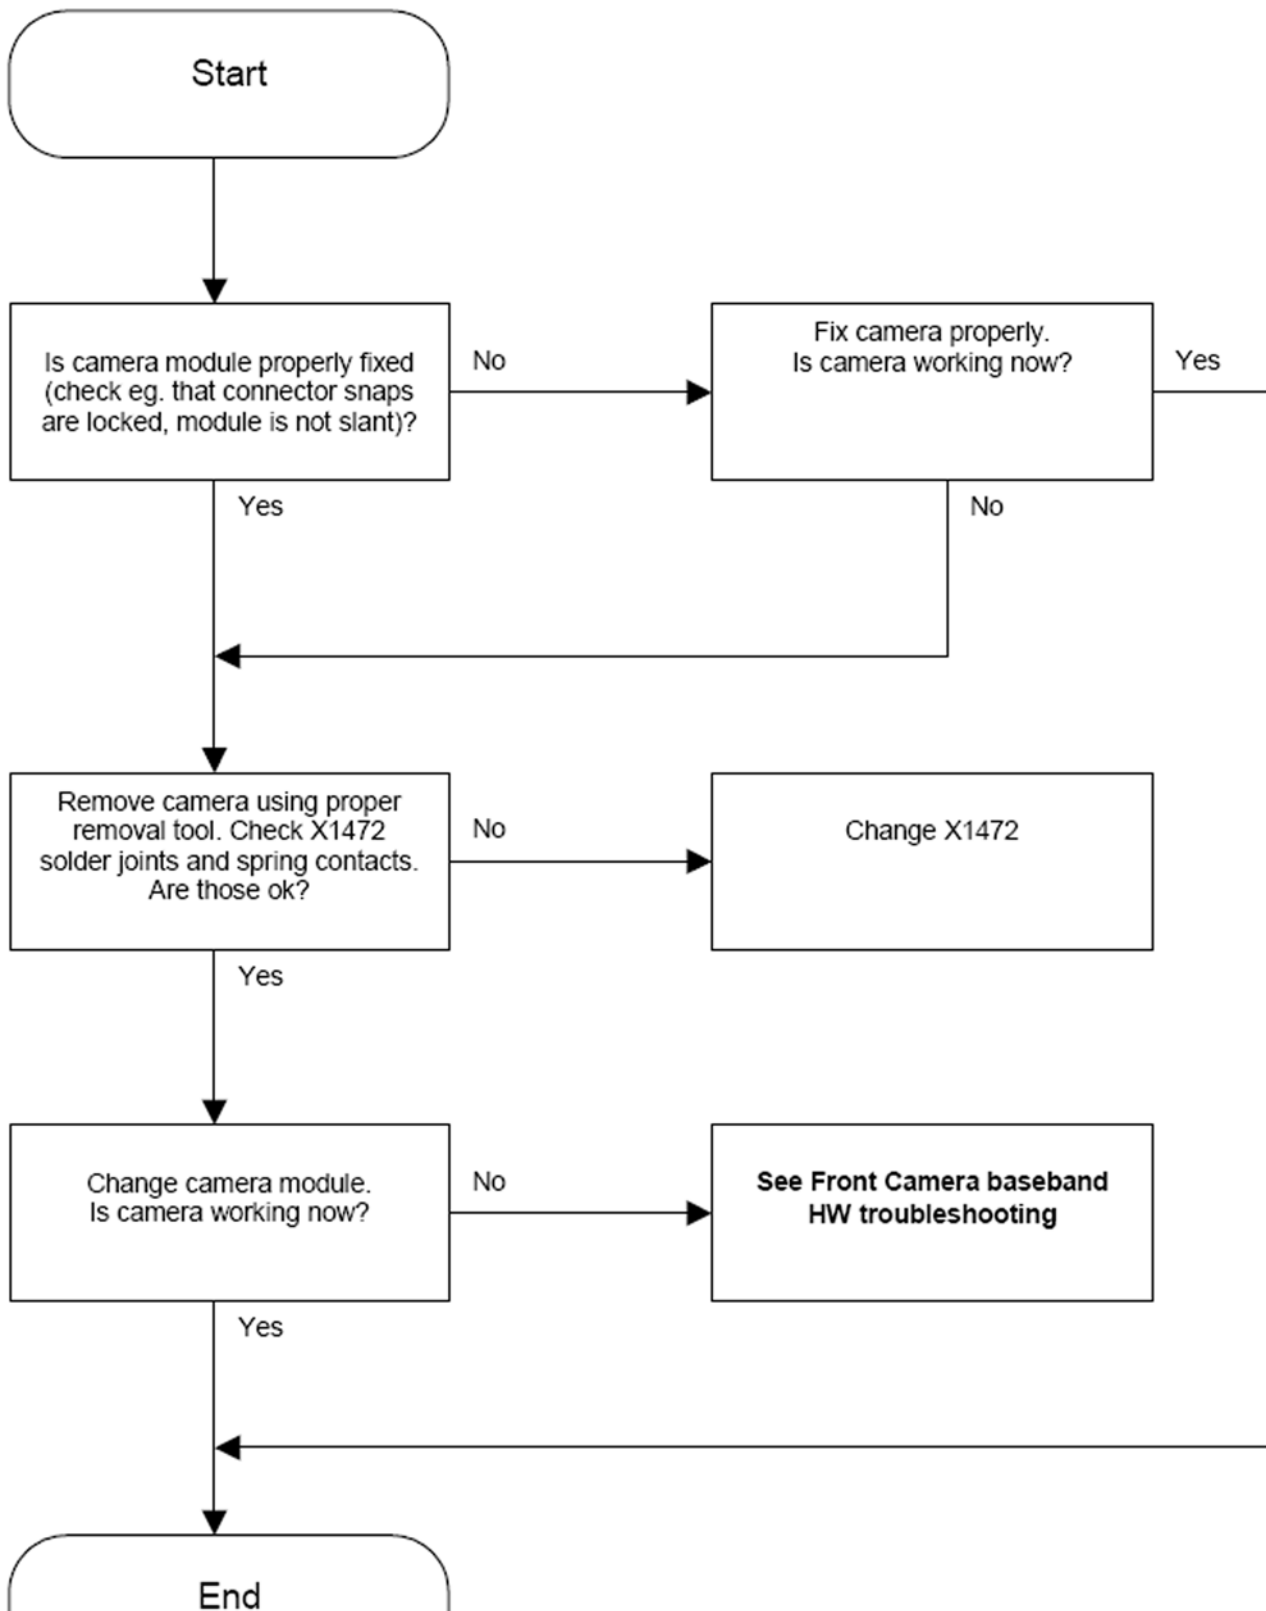


Front camera HW baseband troubleshooting

Troubleshooting flow

Note: the phone must be in a video call for the front camera to be active with signals and voltages present

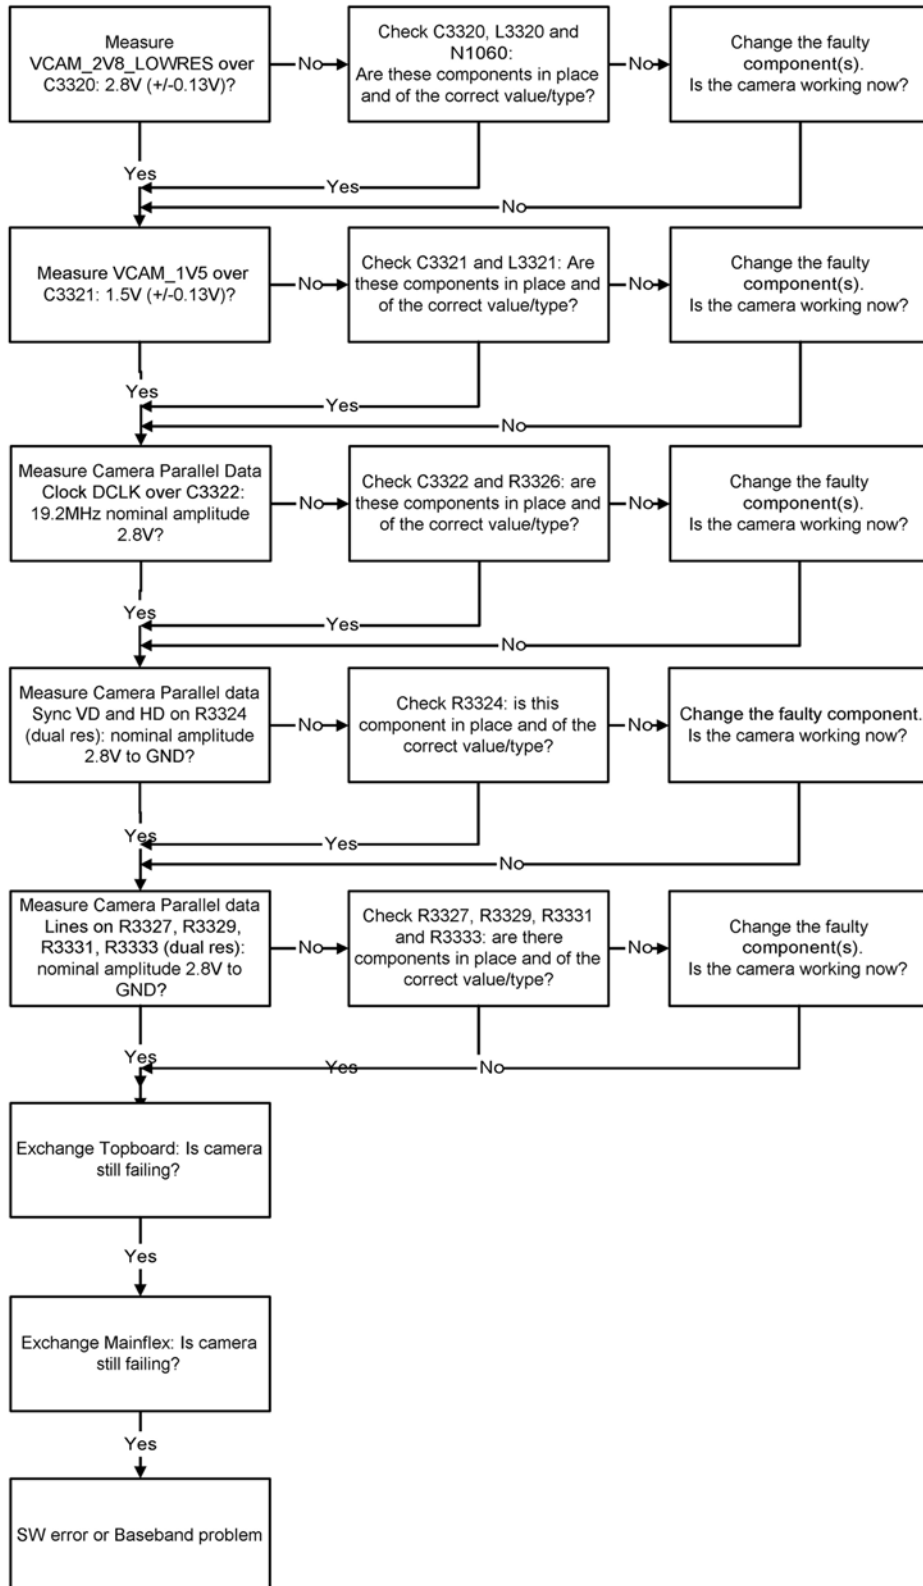


Note: the phone must be in a video call for the front camera to be active.
The front camera image is the small one in the upper right corner

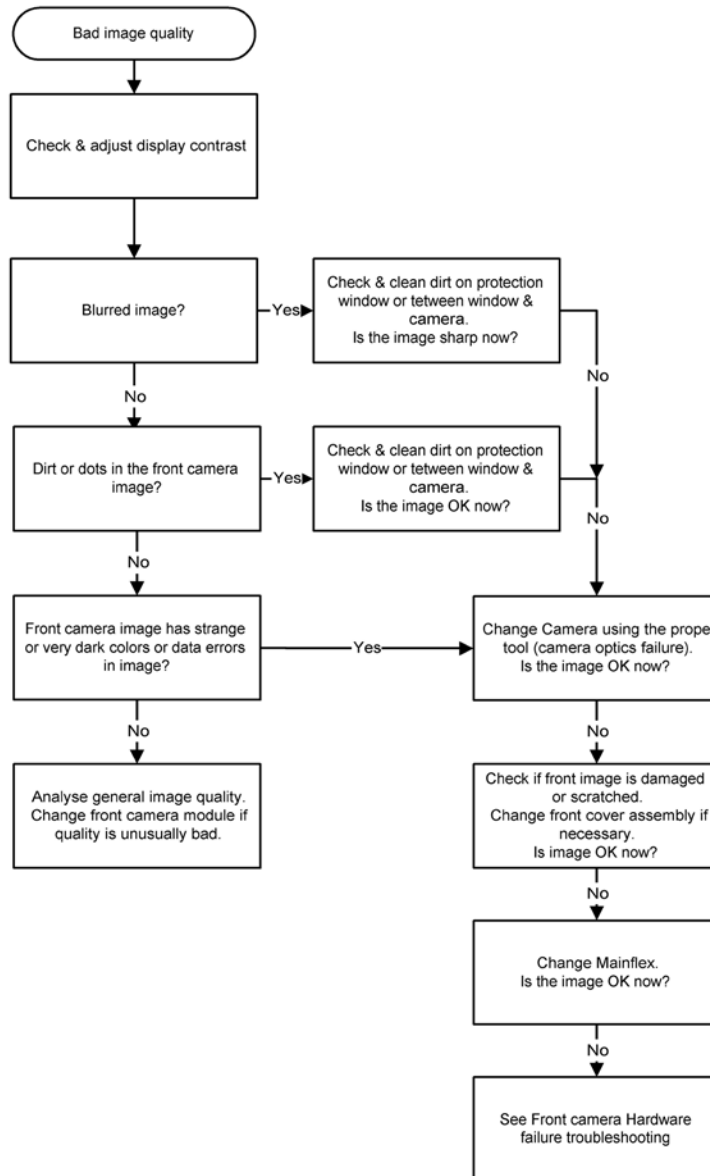

Front camera bad image quality troubleshooting

Troubleshooting flow

Note: the phone must be in a video call for the front camera to be active.
The front camera image is the small one in the upper right corner

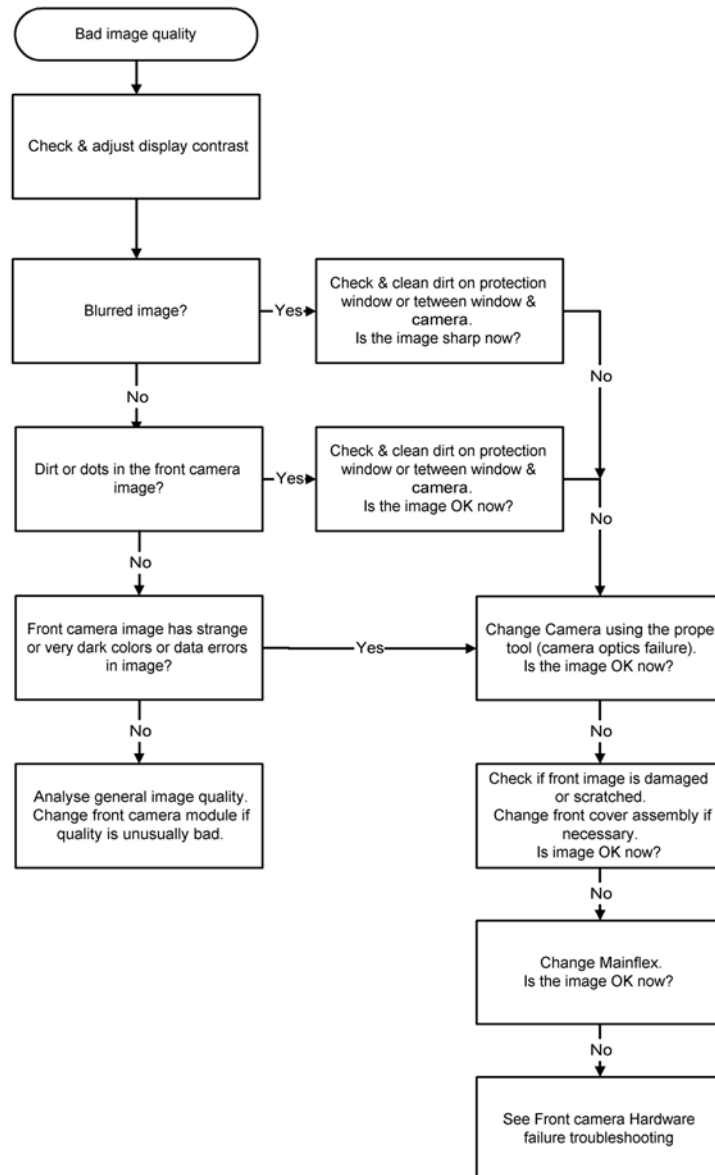

Flash LED troubleshooting

Introduction to flash LED troubleshooting

A fault or complaint associated to LED flash operation can be roughly categorized into two subgroups:

- 1 Flash is not functional at all (no light output at all).
- 2 Images can be taken and they are recognizable but for some reason the quality of images is degraded.

The quality of an image is very difficult to measure quantitatively, and even comparative measurements are difficult (comparing two images), if the difference between reference images is small. If a user is not satisfied with his/her device's image quality, it is fairly difficult to accurately test the device and get an exact result, which would tell if the device is working properly.

Often subjective evaluation has to be used for finding out if there is something wrong in the flash. Some training or experience of a correctly operating reference device may be needed in order to detect possible faults. It is easy for a user to take low quality images in bad conditions. Therefore, the camera and flash operation has to be always checked in constant conditions (lighting, temperature) or by using a second, known-to-be good reference device.

Flash LED and image taking conditions

This section describes some of common factors, which may cause poor image quality if not taken into account by end users when taking pictures, and may therefore result in complaints. The items described are normal to the camera and LED flash operation and do not raise a need for servicing the components.



Figure 67 Example of a good quality image taken with the flash LED

Distance to the target (too close)

There is no feedback in the flash system, which means that the light output is constant in every situation. This causes the images to overexposure, when shot from close distance. The flash LED is designed to work optimally between distances of 50cm – 1.20m.

This is normal behaviour; do not change the flash module.



Figure 68 overexposed image

Distance to the target (too far away):

The power of the white LED flash is still very modest compared to xenon flash technology. Even with the full power, the maximum distance for an acceptable image quality is roughly 1.2m. If the distance is greater than 1.2m, the images will appear dark and the noise level increases.

This is normal behaviour; do not change the flash module.

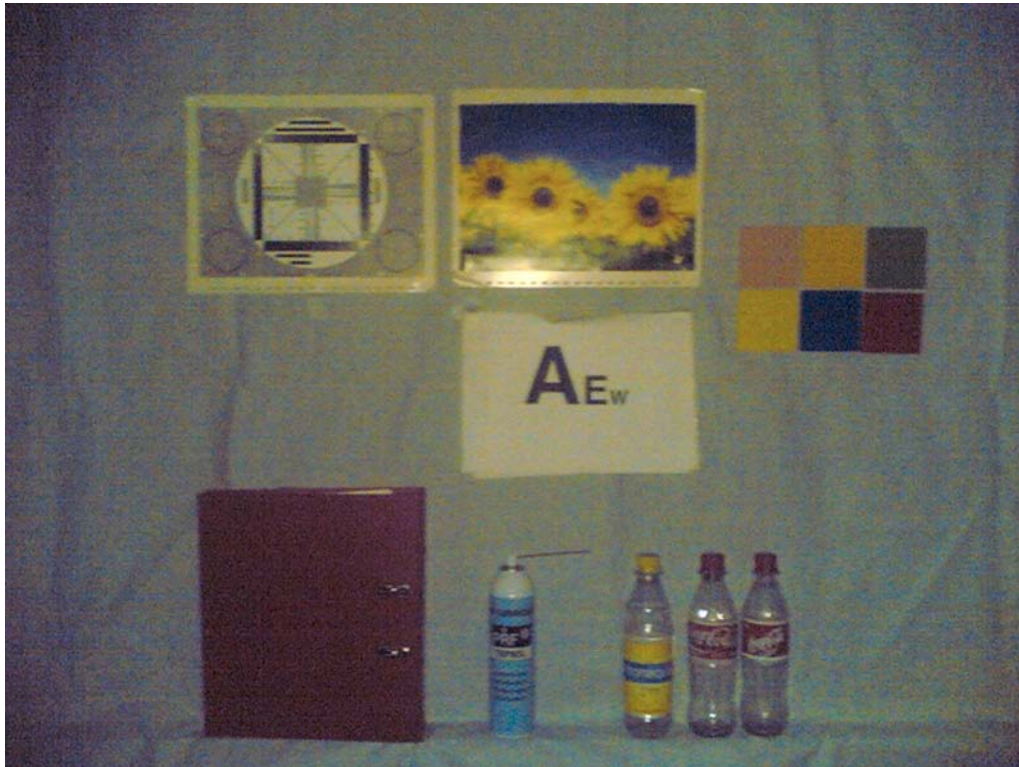


Figure 69 Dark and noisy image

Shaken (= blurred) images

The traditional xenon flash has the advantage of stopping the movement. This is a result of an extremely short and intense light pulse, which makes it possible for a camera to use very short exposure time. Due to the weak output of the LED flash, the exposure time has to be actually increased in the viewfinder mode in total blackness, instead of shortening it. This allows the sensor to integrate longer and collect more light but this also easily creates blurred images if care is not taken.



Figure 70 Shaken image

Camera white balance failure and overexposure due to presence of ambient light

Because the spectral output of the flash is known, the white balance and the exposure control of the camera work in optimal way with the flash in total blackness. This is why some of the pictures may fail, if there is some ambient light present when the image is taken.

If the flash works correctly in dark conditions, there is no need to change the flash module.

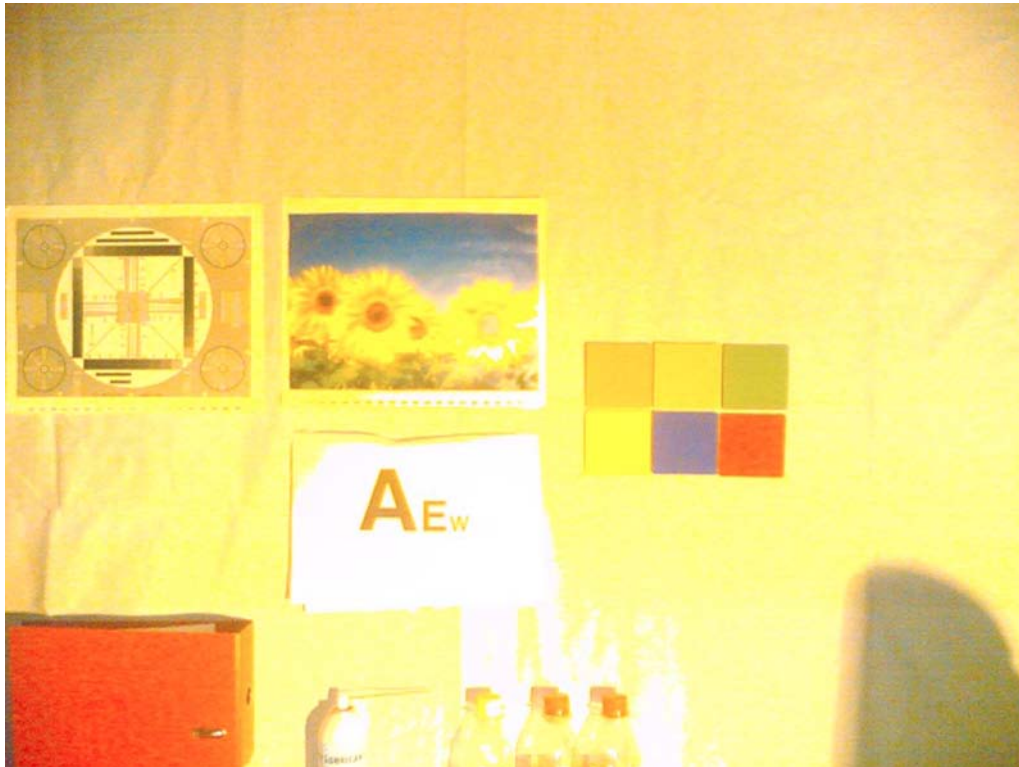


Figure 71 Camera white balance failure and overexposure

Colour difference between different modules

There is some variation in the spectrum of the flash, which derives from the manufacturing process of the white LEDs. Because of this variation, there may be some variation in the colour of the images as well.

This is normal behaviour; do not change the flash module.



Figure 72 Color difference between flash colour limit samples

Analysing image quality

Possible faults in image quality

When checking for possible errors in the flash functionality, knowing what error is suspected, significantly helps the testing by narrowing down the number of possible test cases. The following types of image quality problems may be expected to appear:

- LED module is not flashing at all
- Image colours are not good
- Flash power is weak

Testing flash module functionality

Context

With the help of this test you can check the flash module's overall functionality. Always enable the flash using the "Options" menu before performing the test.

Steps

1. Take an image with the flash and monitor at same time whether the LED module flashes.

Results

If the LED flashes normally, the overall functionality of the module is OK.

Testing image colours with flash

Context

With the help of this test you can check if the image colours are normal when using the flash.

Steps

1. Take an image of a target, which contains something white in total blackness from less than 1 m range.

Results

If the white target appears to be white, the flash is working correctly. However, remember that there is some variation in the flash colour from module to module.

Testing flash power

Context

With the help of this test you can check if the flash is working with adequate power level.

Steps

1. Take an image with the flash in total blackness (ambient light <1 lux) of a target 80 cm - 1 m away.

Results

If the flash is working normally with adequate power level, the image is correctly exposed from 80cm – 1m distances.


Remember that the brightness level in the corners is always less than in the center of the image because of camera and flash optics.

Flash LED troubleshooting flowcharts

Flash LED HW baseband troubleshooting

Troubleshooting flow

If there are problems in the flash LED driver circuit, the testing procedure is complicated, because the driver circuit output cannot be reliably measured without the load (LED). Load (LED) is always disconnected from the output when the phone is disassembled.

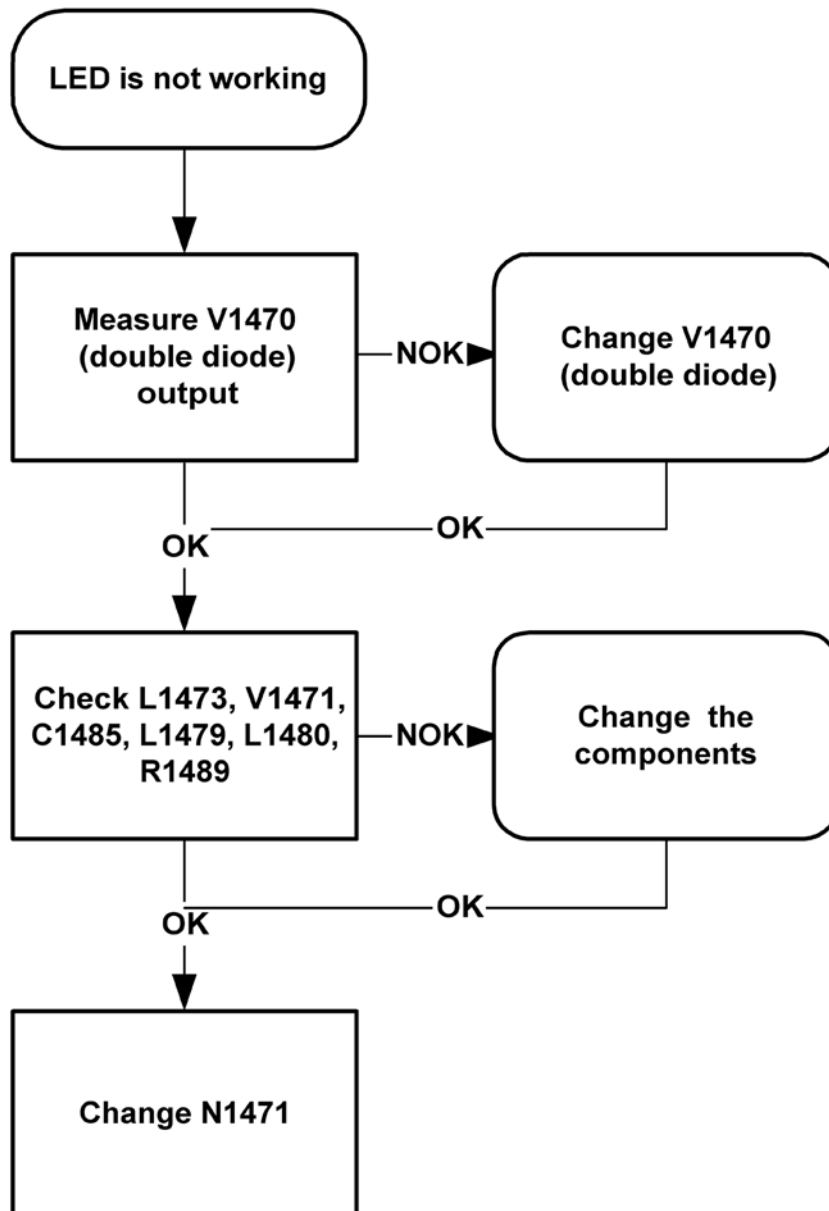

8 — RF troubleshooting

(This page left intentionally blank.)

Table of Contents

General RF troubleshooting.....	8-5
General RF troubleshooting.....	8-5
Auto tuning.....	8-5
GSM Receivers.....	8-6
GSM RX Troubleshooting.....	8-6
GSM Transmitters.....	8-8
GSM900/1800/1900 TX Troubleshooting.....	8-8
WCDMA Receiver.....	8-9
WCDMA RX Troubleshooting.....	8-9
WCDMA Transmitter.....	8-11
WCDMA TX Troubleshooting.....	8-11
Synthesizer troubleshooting	8-12
PIHI (N7500) Troubleshooting.....	8-12
Synthesizer Troubleshooting.....	8-13
Bluetooth and FM radio.....	8-15
Bluetooth troubleshooting.....	8-15
FM radio troubleshooting.....	8-16

List of Figures

Figure 73 Auto tuning concept with CMU200.....	8-6
Figure 74 Auto tuning concept with RX and TX tuning devices and splitter.....	8-6
Figure 75 GSM900/1800/1900 RX test points.....	8-8
Figure 76 GSM900/1800/1900 TX test points.....	8-9
Figure 77 WCDMA RX test points.....	8-11
Figure 78 WCDMA TX test points.....	8-12
Figure 79 PIHI (N7500) test points.....	8-13
Figure 80 Synthesizer test points.....	8-14
Figure 81 Troubleshooting diagram: Bluetooth.....	8-15
Figure 82 Troubleshooting diagram: FM radio.....	8-16

(This page left intentionally blank.)

■ General RF troubleshooting

General RF troubleshooting

Most RF semiconductors are static discharge sensitive

Two types of measurements are used in the following. It will be specified if the measurement type is "RF" or "LF".

- RF measurements are done with a Spectrum Analyzer and a high-frequency 500 ohm passive probe, for example HP54006A. (Note that when measuring with the 500 ohm probe the signal will be around 20 dB attenuated. The values in the following will have these 20 dB subtracted and represent the real value seen on the spectrum analyzer). Note that the testing have some losses which must be taken into consideration when calibrating the test system.
- LF (Low frequency) and DC measurements should be done with a 10:1 probe and an oscilloscope. The probe used in the following is 10 Mohm/8pF passive probe. If using another probe then bear in mind that the voltages displayed may be slightly different. Always make sure the measurement set-up is calibrated when measuring RF parameters on the antenna pad. Remember to include the loss in the module repair jig when realigning the phone.

So ESD protection must be applied during repair (ground straps and ESD soldering irons). RF IC N7600 and FEM are moisture sensitive so parts must be pre-baked prior to soldering. Apart from key-components described in this document there are a lot of discrete components (resistors, inductors and capacitors) for which troubleshooting is done by checking if soldering of the component is done properly and checking if the component is missing from PWB. Capacitors can be checked for short-circuiting and resistors for value by means of an ohmmeter, but be aware in-circuit measurements should be evaluated carefully. In the following both the name EGSM and GSM 900 will be used for the lower band and both PCN and GSM 1800 will be used for the upper band.

■ Auto tuning

This phone can be tuned automatically.

Autotune is designed to align the phone's RF part easier and faster. It performs calibrations, tunings and measurements of RX and TX. The results are displayed and logged in a result file, if initiated.

Hardware set up

Hardware requirements for auto tuning:

- PC (Windows 2000/NT) with GPIB card
- Power supply
- Product specific module jig
- Cables: 3 (alt.1) RF cable, 1 GPIB cable and DAU-9S
- Signal analyser (TX), signal generator (RX) and RF-splitter *or* one device including all.

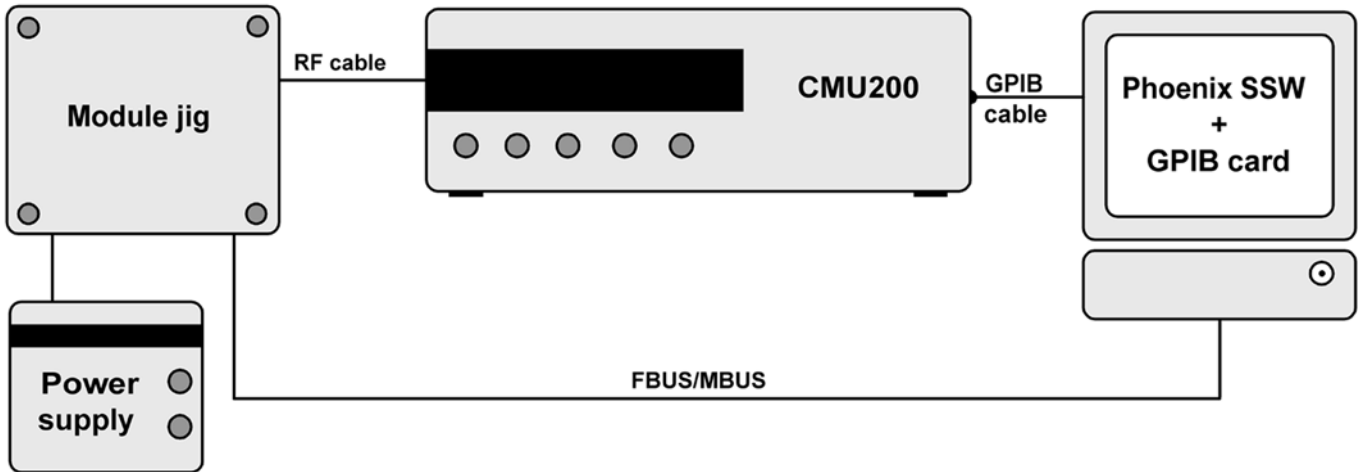


Figure 73 Auto tuning concept with CMU200

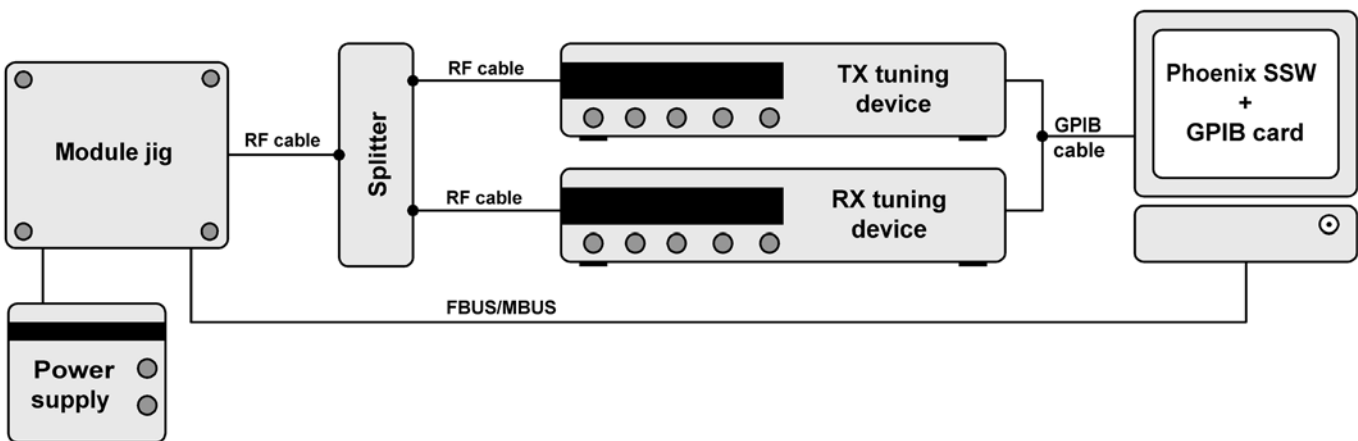


Figure 74 Auto tuning concept with RX and TX tuning devices and splitter

Phoenix preparations

Copy the two phone specific ini-files, for example *rm_13_tunings.ini* and *autotune_RM-13.ini*, to a phone specific folder, for example `[Phoenix|products|RM-13]`.

Auto tuning procedure

- 1 Make sure the phone (in the jig) is connected to the equipment. Else, some menus will not be shown in Phoenix.
- 2 The first time you are using automatic tuning on this phone model, on this computer, you will have to *Set loss* for cables and jigs.
- 3 To go to autotune, select *Tuning (Alt-U) > Auto-Tune (Alt-A)* from the menu.
- 4 If you need more assistance, please refer to the Phoenix *Help*.

■ GSM Receivers

GSM RX Troubleshooting

Preparations

Make the following settings:

Setting	GSM900	GSM1800	GSM1900
Phoenix RF Control	Continues RX and AGC gain step 14		
Phoenix channel	37	955	661
Signal generator to antenna connector	942.4677MHz (67.71kHz offset) at -60dBm	1842.846771MHz (67.71kHz offset) at -60dBm	1960.046771MHz (67.71kHz offset) at -60dBm
Spectrum analyzer	RBW=500kHz, VBW=500kHz, span=20kHz		
Centre frequency	942MHz	1840MHz	1960MHz

Check the following

Check the levels in the steps below.

NO.	Signal Name	Test point	GSM900	GSM1800	GSM1900
1	RXIP (out)	J7515	124mVpp, 730mVDC	106mVpp, 760mVDC	100mVpp, 780mVDC
2	RXQP (OUT)	J7516	124mVpp, 730mVDC	106mVpp, 690mVDC	100mVpp, 690mVDC
3	VC1_TXFEM	J7530	0V	0V	0V
4	VC2_TXFEM	J7531	0V	2.7VDC	2.7VDC
5	VC3_TXFEM	J7532	0V	0V	2.7VDC
6A*	IN_1800	C7515	-	-54dBm (RF level -30dBm)	-
6B*	IN_1900	C7514	-	-	-47dBm (RF level -30dBm)

*= Note settings in the table above

- 1 Measure RXIP *1* and RXQP *2*.
- 2 Measure front end module control signal voltages *3, 4 and 5*.

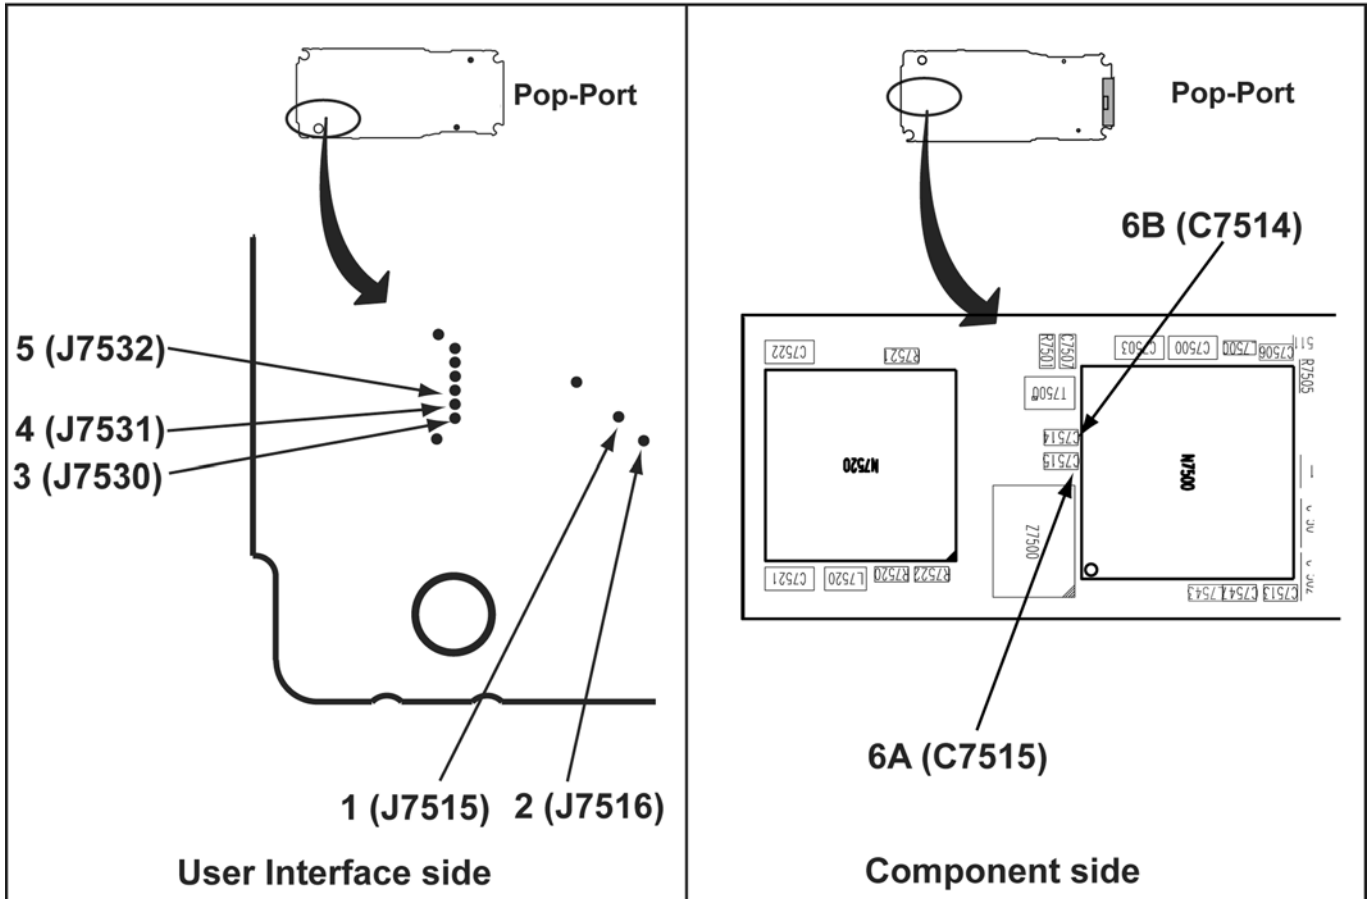


Figure 75 GSM900/1800/1900 RX test points

GSM Transmitters

GSM900/1800/1900 TX Troubleshooting

Preparations

Make the following settings:

Setting	GSM900	GSM1800	GSM1900
Phoenix RF Control	Operational mode = Burst		
Phoenix Tx Power level	Tx data type = Random		
	10	5	5

Check the following

Check the voltages in the steps below.

NO.	Signal Name	Test point	GSM900	GSM1800	GSM1900
1	V_Det_GSM	J7533	730mVDC	660mVDC	690mVDC
2	PA_supply-VBAT	C7521	3.8VDC	3.8VDC	3.8VDC
3	RF level-ANT_GSM	Conn.	23.2dBm	20dBm	20.3dBm
4	Sw cont-VC1_TXFEM	J7530	2.75VDC	2.75VDC	2.75VDC

NO.	Signal Name	Test point	GSM900	GSM1800	GSM1900
5	Sw con-VC2_TXFEM	J7531	0V	2.75VDC	2.75VDC
6	Sw con-VC3_TXFEM	J7532	2.75VDC	2.75VDC	2.75VDC
7A	Tx-1	R7522	397.4MHz/-28.7 dBm	-	-
7B	Tx-2	R7521	-	1747.8MHz/-24.6dBm	1880MHz/-25.0 dBm

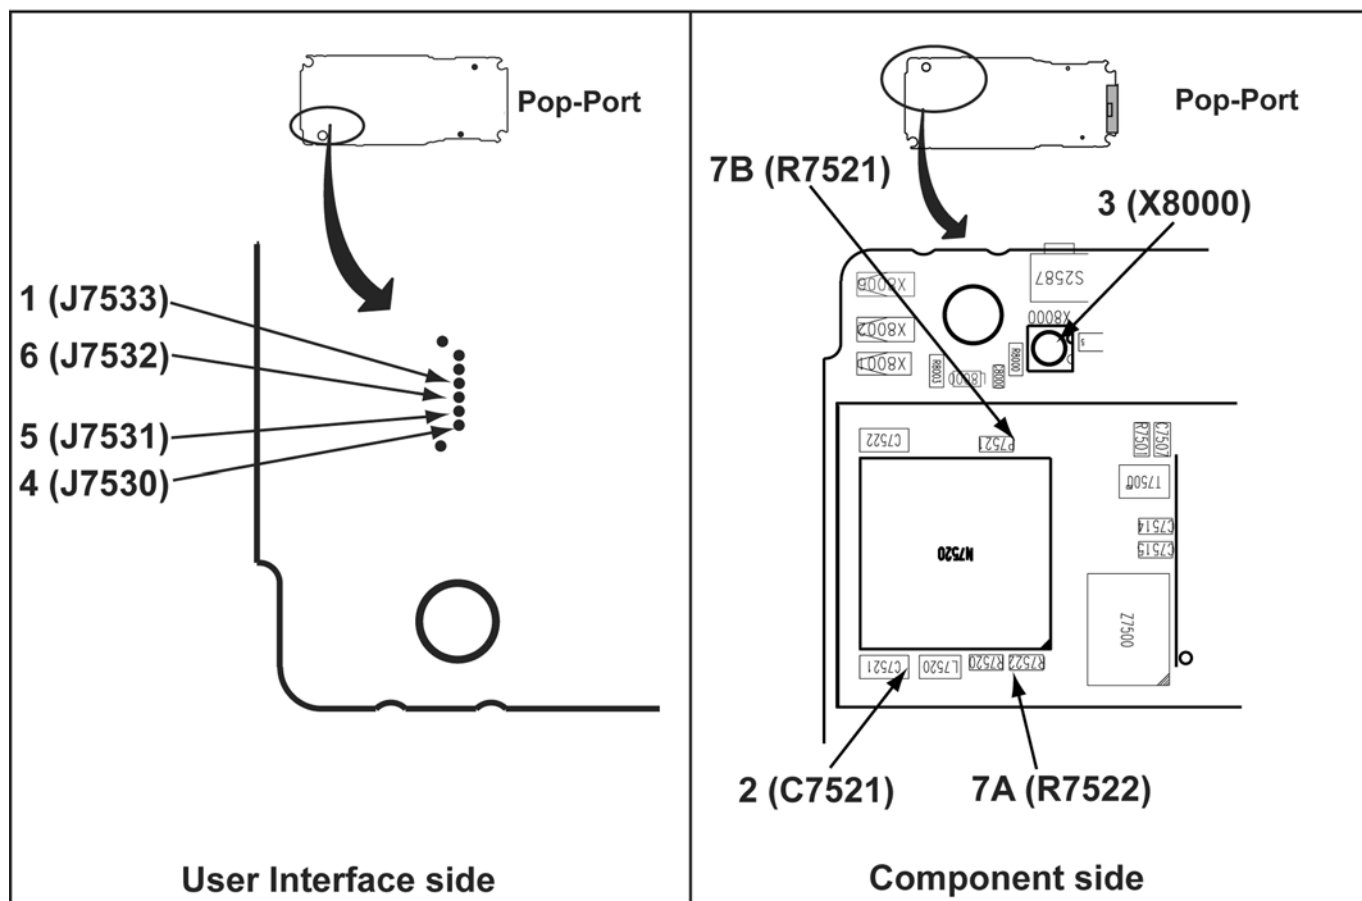


Figure 76 GSM900/1800/1900 TX test points

■ WCDMA Receiver

WCDMA RX Troubleshooting

Preparations

Set Phoenix to RF local mode WCDMA RX.

Equipment/Setting	Unit
Phoenix	
WCDMA	FDD
RF channel	2140MHz ~10700
Frequency offset	+0.000kHz

Equipment/Setting	Unit
Output channel power	-60dBm
	P-sch~ -2dB S-sch~ -2dB P-cc pch~ -2dB DPDch~ -7dB
AGCMod*	Algorithm
Channel*	10700
BB AGC*	0dB
Spectrum analyzer*	
Span	~ 20MHz
Centre frequency	2140MHz
VBW	500kHz
RBW	500kHz
Output channel power	-30dB
RF AH	~ 30dB

Check the following

Check the levels in the steps below.

NO.	Signal Name	Test point	Check
1	PXIP (out)	J7515	720mVpp single ended
2	RXQP (OUT)	J7516	720mVpp single ended
3*	WCDMA_RX	T7500	Average: -30dBm -48.3dBm

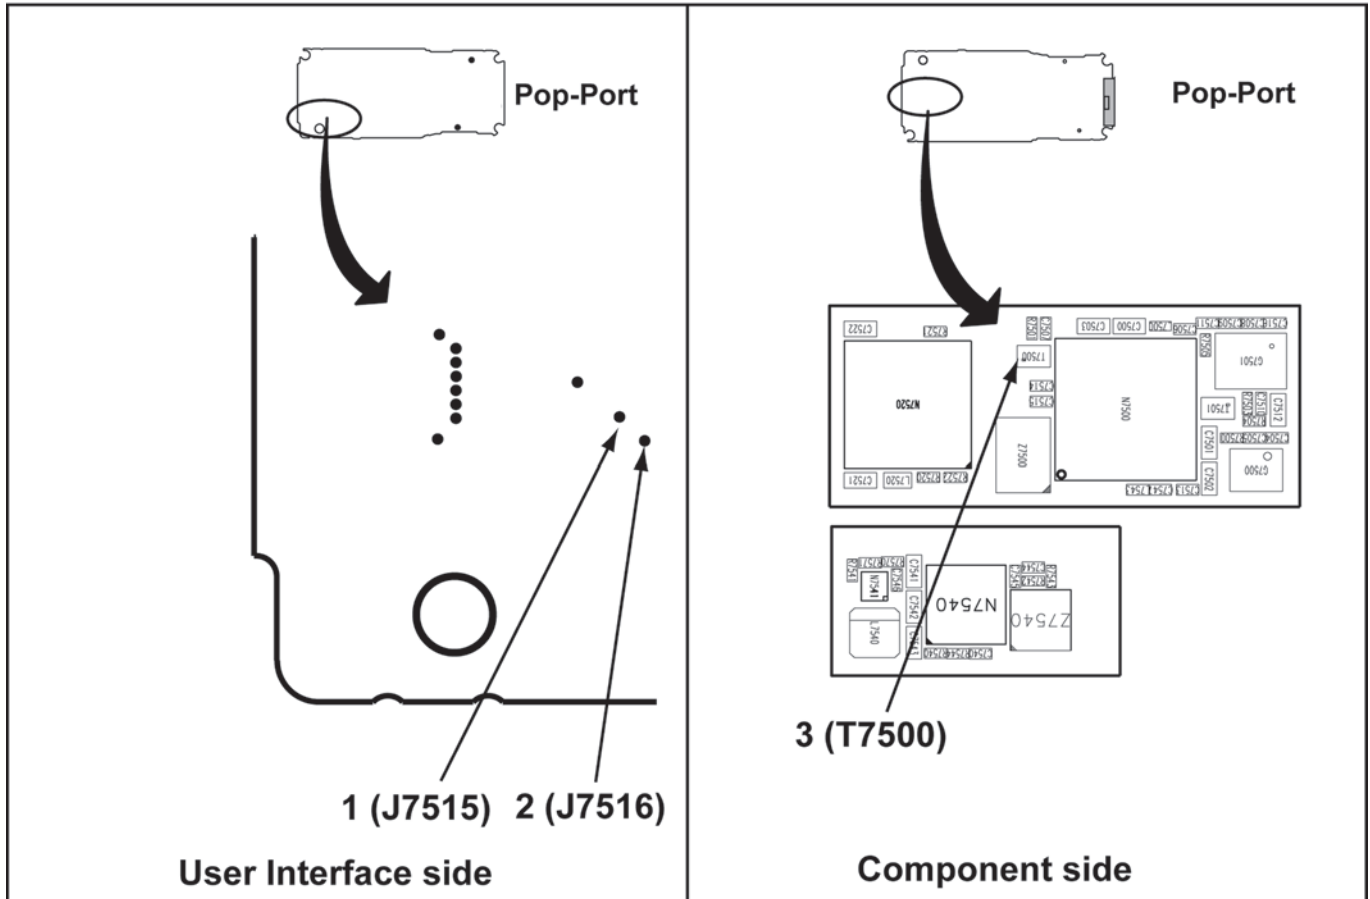


Figure 77 WCDMA RX test points

■ **WCDMA Transmitter**

WCDMA TX Troubleshooting

Preparations

Set Phoenix to RF local mode WCDMA TX.

Check the following

Check the levels in the steps below.

NO.	Signal Name	Test point	Check
1	WTXDET	C7544	115mVDC
2	VBAT	C7542	3.82VDC
3	PA supply - Vreg	C7543	2VDC
4	RF level - ANT_WCDMA	X8003	0dBm on antenna
5	WCDMA_TX	L7543	-34.75dBm at 1450MHz
6	WDET	C7545	2.75mVDC
7	DAC101	R7541	828mVDC
	DAC201	J7536	2.5VDC

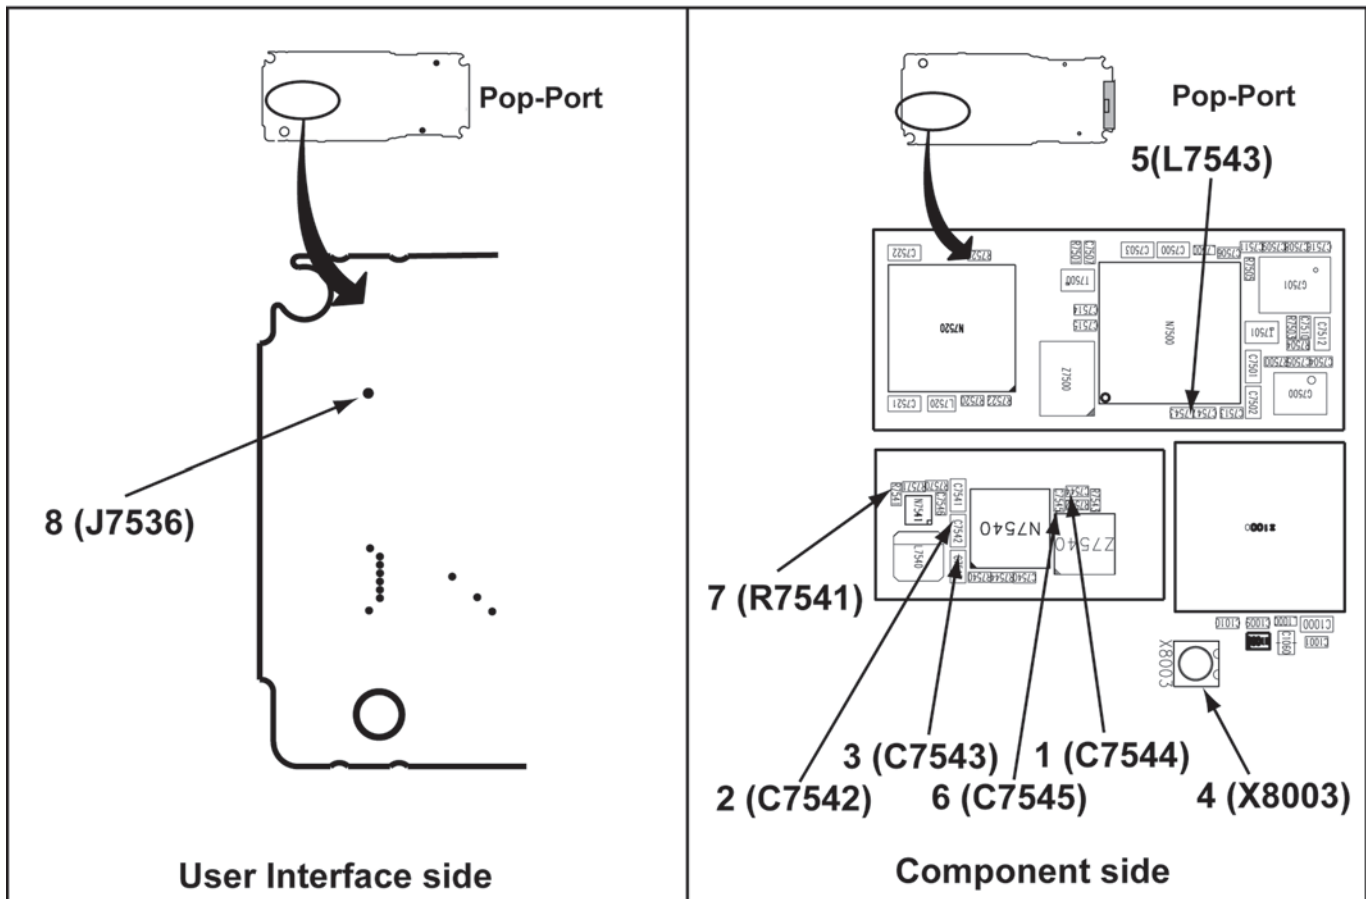


Figure 78 WCDMA TX test points

■ **Synthesizer troubleshooting**

PIHI (N7500) Troubleshooting

Preparations

Set Phoenix to RF local mode RX burst.

Check the following

Check the voltages in the steps below.

NO.	Signal Name	Test point	Check GSM900
Suppliers			
1	VBATRF (in)	L7500	3.8VDC
2	VR1_RX (out)	C7503	2.8VDC
3	VR1_TX (out)	C7502	2.8VDC
4	VR2_TX (out)	C7501	2.8VDC
5	VREFRF01 (in) VB_EXT	R7501	1.36VDC
6	VCP1 (in)	C7513	4.76VDC

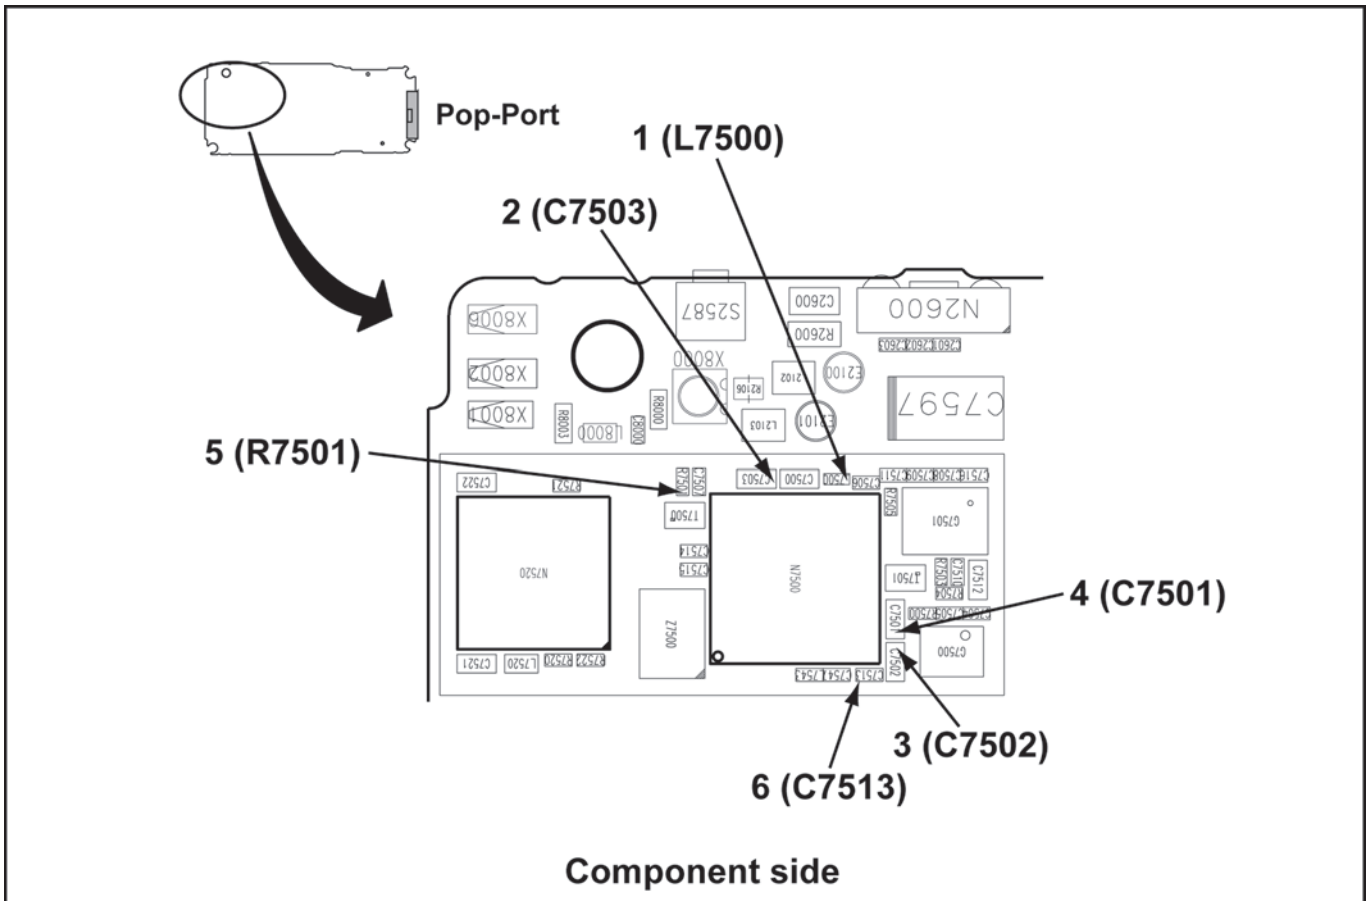


Figure 79 PIHI (N7500) test points

Synthesizer Troubleshooting

Preparations

Set Phoenix to RF local mode RX continuous.

Check the following

Check the levels in the steps below.

NO.	Signal Name	Test point	Check
VCTCXO			
1	VXO (in)	C7504	2.4VDC
2	OSCIN	C7500	85mVpp at 38.4MHz
3	AFC (in)	R7500	1.2VDC
4	RFCLKEXT (out)	C7506	750mVpp at 38.4MHz
VCO			
5	VVCO_EXT	R7505	2.72VDC
6	VCO Output	T7501	-17dBm at 3769.6MHz
7	VCO Control	C7510	2.7VDC

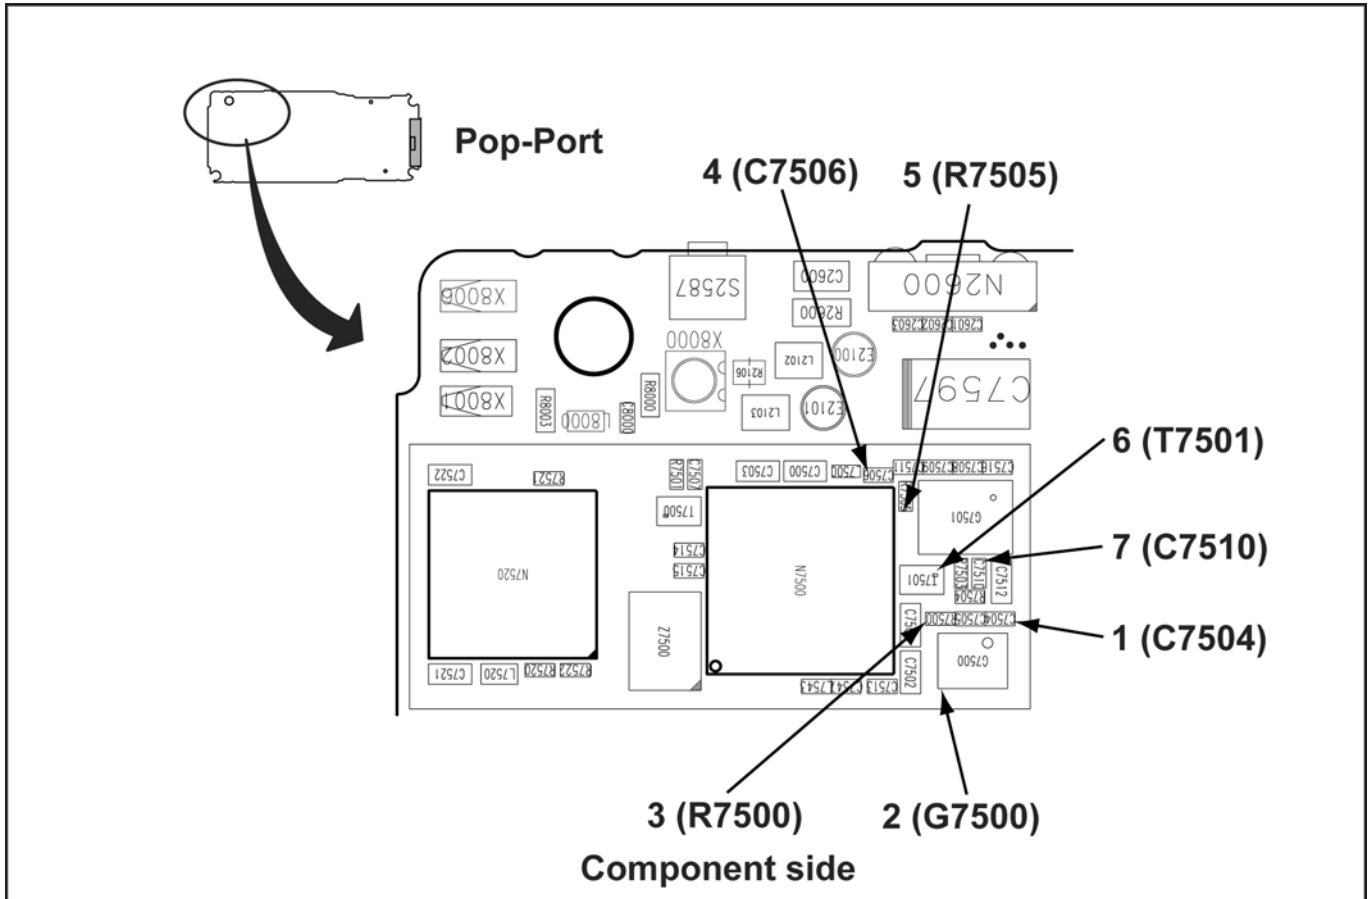


Figure 80 Synthesizer test points

■ Bluetooth and FM radio

Bluetooth troubleshooting

Troubleshooting flow


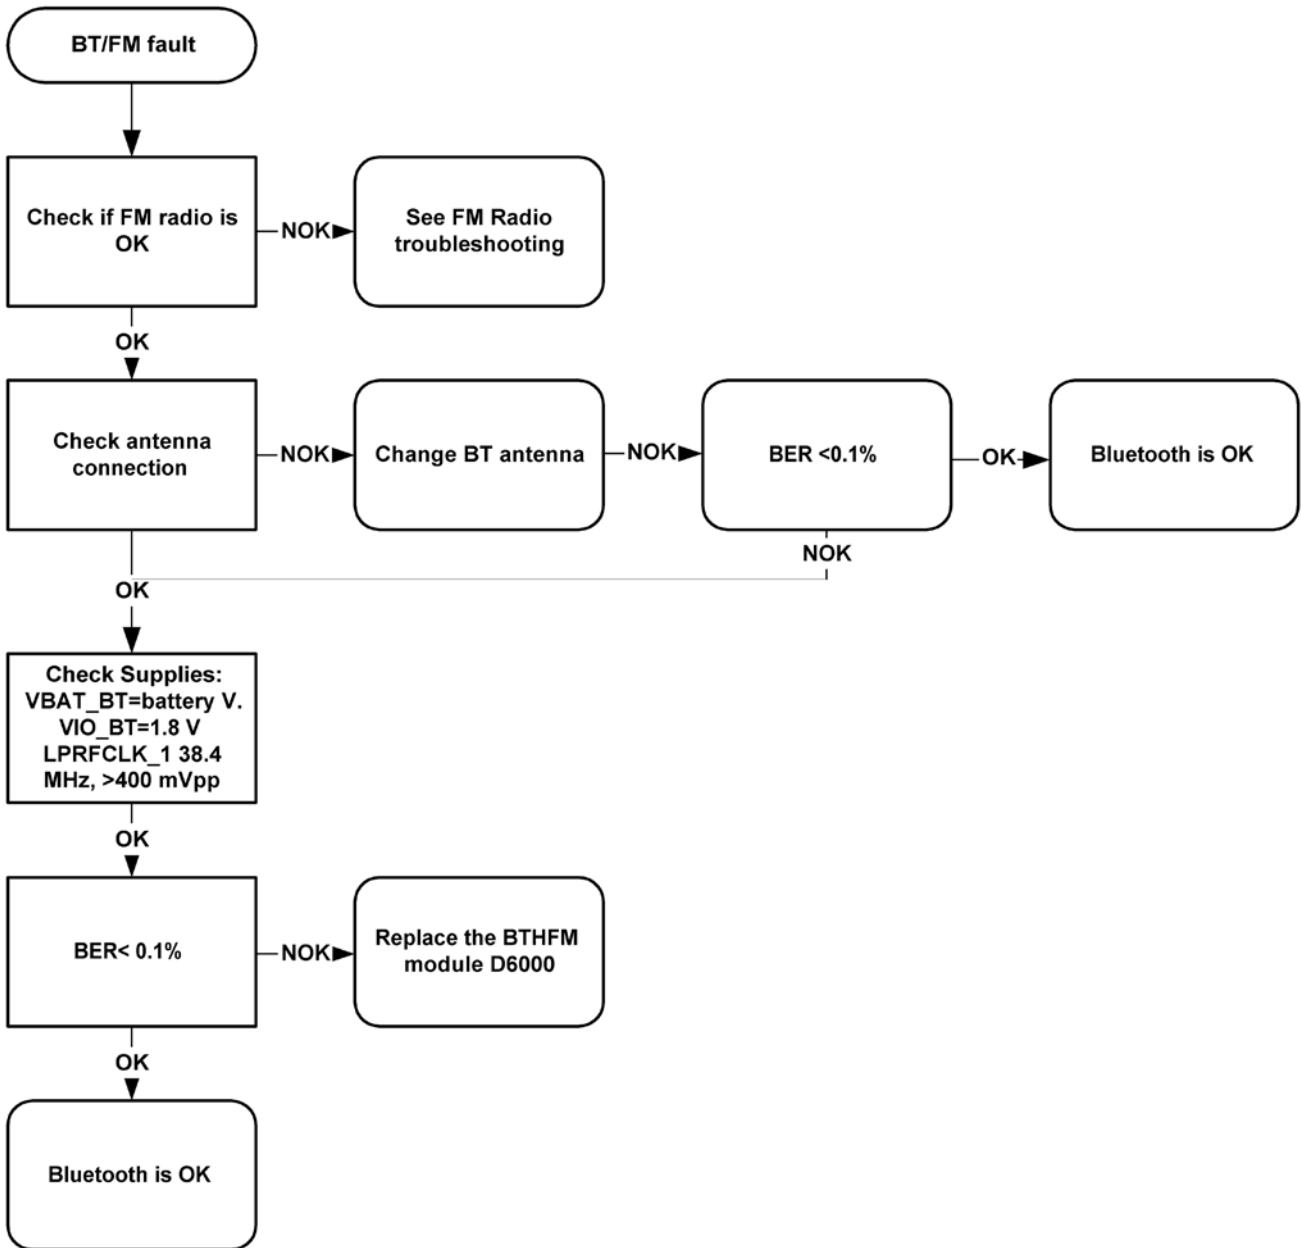


Figure 81 Troubleshooting diagram: Bluetooth

FM radio troubleshooting

Troubleshooting flow

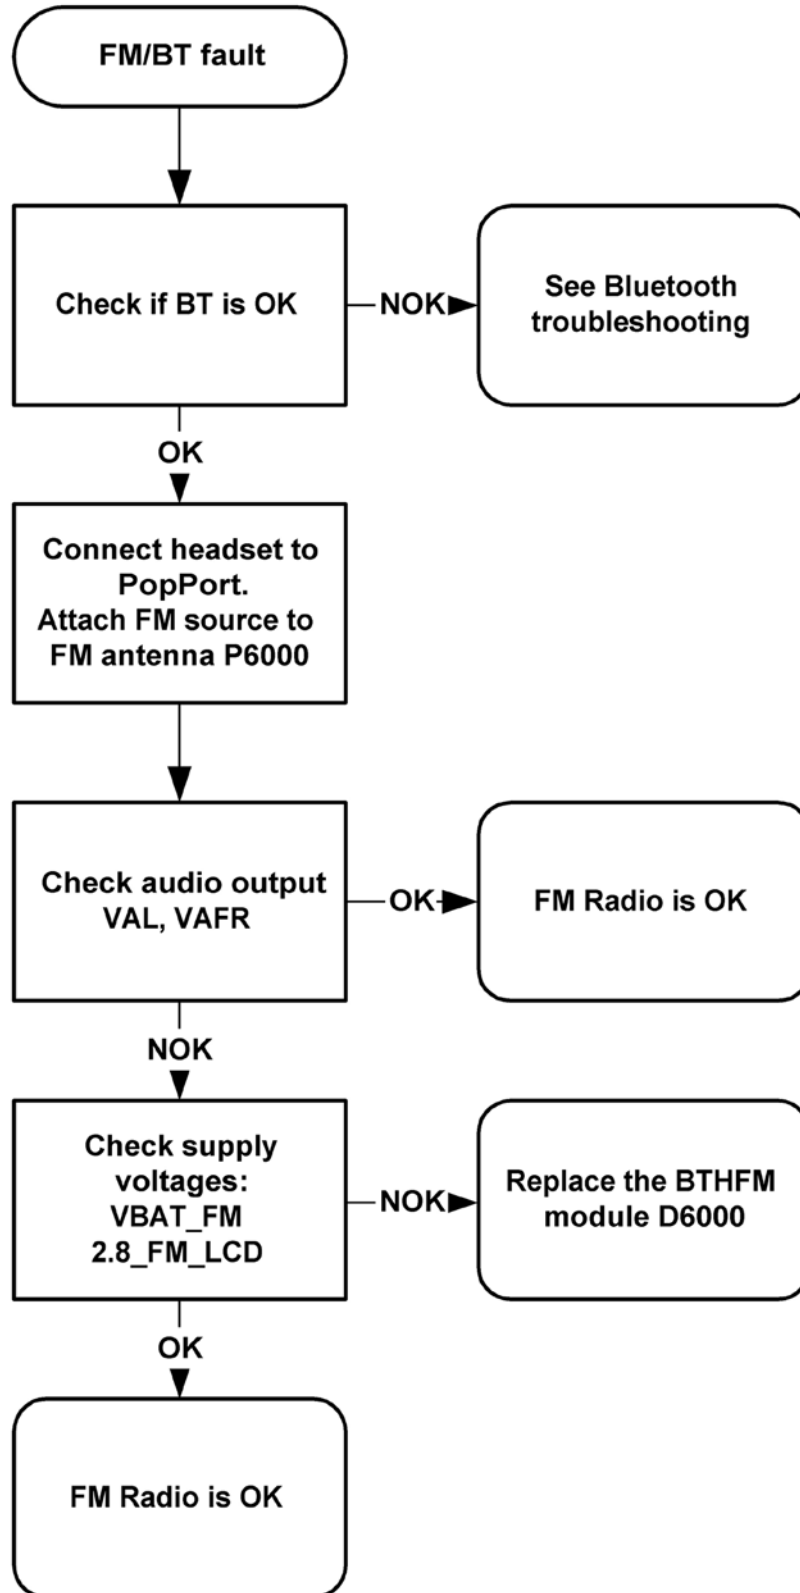

Nokia Customer Care

9 — System Module

(This page left intentionally blank.)

Table of Contents

Introduction.....	9-5
Block diagram.....	9-5
Energy management.....	9-5
Battery and interface.....	9-5
Normal and extreme voltages.....	9-6
Power key and system power-up.....	9-6
Modes of operation.....	9-7
Power distribution.....	9-8
Internal regulators.....	9-8
External regulators.....	9-10
Clocking scheme.....	9-10
USB, SIM, MMC.....	9-11
USB.....	9-11
SIM interface.....	9-11
Cameras.....	9-12
Back camera.....	9-12
Flash LED.....	9-13
Front camera.....	9-14
User interface.....	9-15
Display interface.....	9-15
Top keyboard.....	9-16
Main keyboard.....	9-16
Audio concept.....	9-17
Audio HW architecture.....	9-17
Internal microphone.....	9-18
External microphone.....	9-18
Internal earpiece.....	9-19
Internal speaker.....	9-19
External earpiece.....	9-20
Vibra circuitry.....	9-20
Pop-port™ connector.....	9-21
Bluetooth and FM radio.....	9-22
Bluetooth.....	9-22
FM radio.....	9-23
RF description.....	9-24
Introduction to receiver functionality.....	9-24
WCDMA receiver.....	9-24
GSM receiver.....	9-24
Introduction to transmitter functionality.....	9-24
WCDMA transmitter functionality.....	9-25
GSM transmitter functionality.....	9-26
Frequency synthesizers.....	9-27
Regulators.....	9-28

List of Tables

Table 14 Nominal voltages.....	9-6
Table 15 Internal regulators.....	9-9
Table 16 External regulators.....	9-10
Table 17 Pop-Port™ pin and signal table.....	9-21

List of Figures

Figure 83 Block diagram.....	9-5
Figure 84 Battery pin order.....	9-6
Figure 85 Power regulator diagram.....	9-8
Figure 86 Clocking scheme.....	9-11
Figure 87 SIM interface.....	9-12
Figure 88 Block diagram of the back camera module.....	9-13
Figure 89 Simplified flash LED connection.....	9-14
Figure 90 Front camera connections.....	9-15
Figure 91 General diagram of the LCD module.....	9-15
Figure 92 Top keyboard keys.....	9-16
Figure 93 Main keyboard.....	9-17
Figure 94 Audio block diagram.....	9-8
Figure 95 Internal microphone circuitry.....	9-18
Figure 96 External microphone circuitry (Pop-Port connects to the right side).....	9-19
Figure 97 Internal earpiece circuitry.....	9-19
Figure 98 Internal speaker circuitry.....	9-19
Figure 99 External earpiece circuitry (Pop-Port connected on the right).....	9-20
Figure 100 Vibra circuitry.....	9-21
Figure 101 System connector pin layout.....	9-21
Figure 102 Bluetooth interface.....	9-23
Figure 103 FM interface.....	9-23
Figure 104 WCDMA transmitter.....	9-25
Figure 105 Block diagram of DC/DC converter and WCDMA PA.....	9-26
Figure 106 GSM transmitter.....	9-27
Figure 107 RF supply connections from the BB mixed mode ASIC.....	9-28

■ Introduction

Block diagram

RAP3G is the main digital baseband ASIC in the phone. It contains functionality for both WCDMA and GSM EDGA and the Golden Eye is used as a co-processor.

Retu is mainly the audio ASIC in the phone and Tahvo is basically the energy management controller for the phone.

Bluetooth and stereo FM Radio is integrated in one single ASIC.

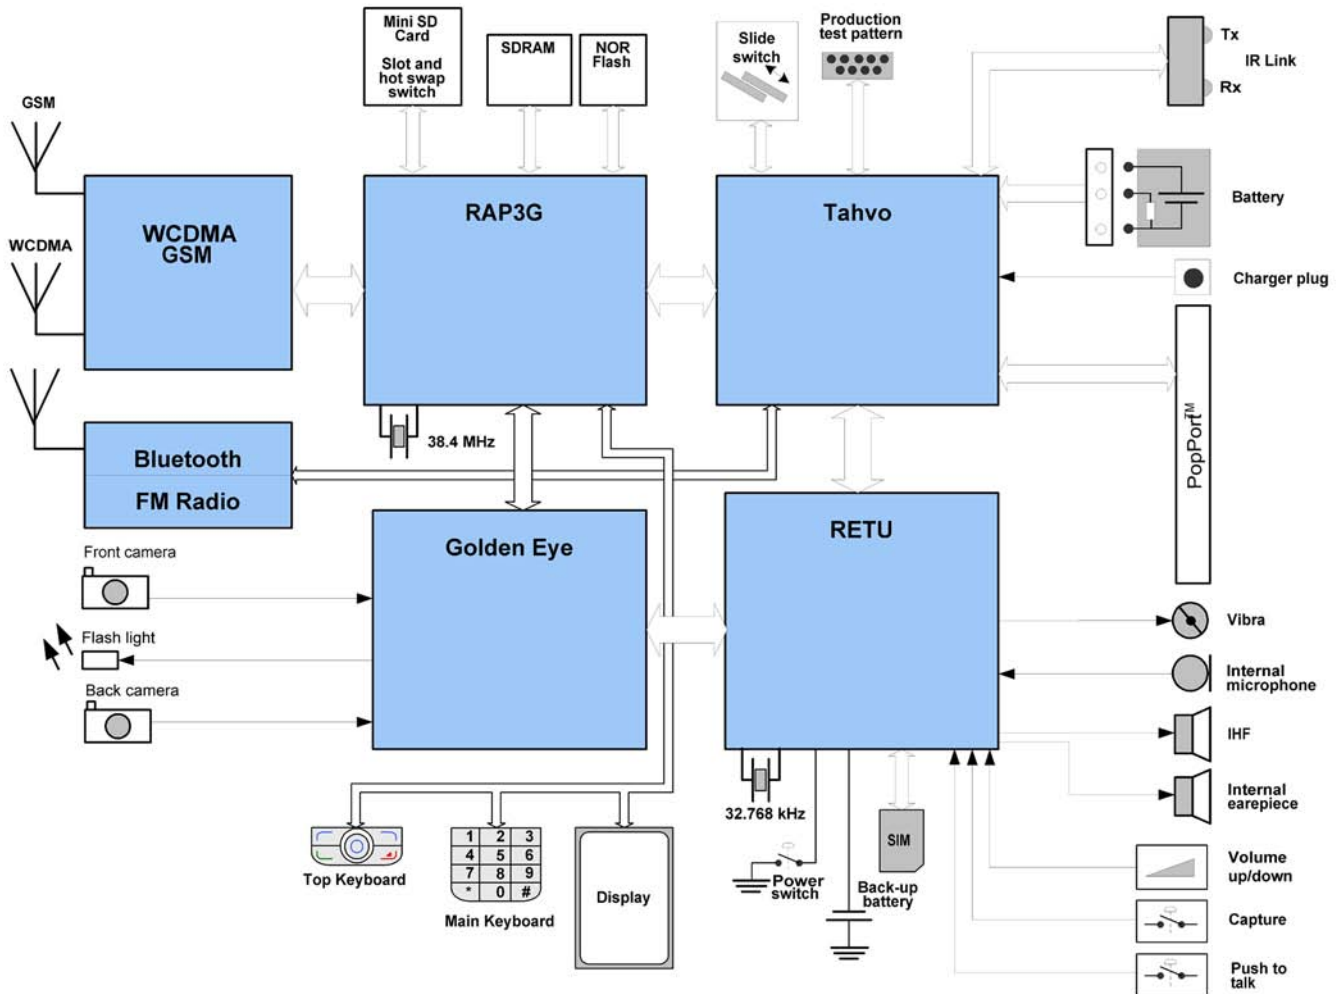


Figure 83 Block diagram

■ Energy management

Battery and interface

The phone is powered by a 3-pole BP-6M 900 mAh battery. The three poles are named VBAT, BSI and GND where the BSI line is used to recognize the battery capacity. This is done by means of an internal battery pull down resistor.

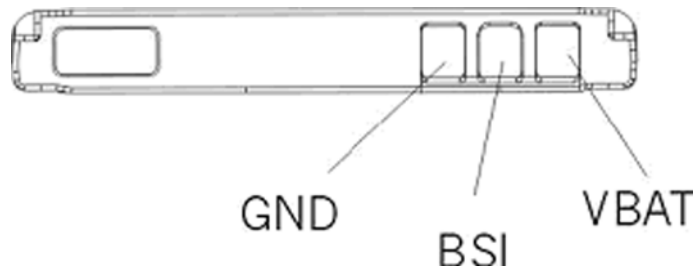


Figure 84 Battery pin order

Battery temperature is estimated by measuring separate battery temperature NTC via the BTEMP line, which is located on the main PWB, at a place where the phone temperature is most stable.

The connection from the charger connector to the charger is established via a charger adaptor type CA-44. For service purposes, the device SW can be forced into local mode by using pull down resistors connected to the BSI line.

Normal and extreme voltages

Energy management is mainly carried out in the two Application Specific Integrated Circuits (ASICs) RETU and TAHVO. These two circuits contains a number of regulators. In addition there are some external regulators too.

In the table below normal and extreme voltages are shown when a BP-6M battery is used.

Table 14 Nominal voltages

Voltage	Voltage [V]	Condition
General Conditions		
Nominal voltage	3.7	*
Lower extreme voltage	3.145	**
Higher extreme voltage (fast charging)	4.23	***
HW Shutdown Voltages		
Vmstr+	2.1 ± 0.1	Off to on
Vmstr-	1.9 ± 0.1	On to off
SW Shutdown Voltages		
Sw shutdown	3.1	In call
Sw shutdown	3.2	In idle
Min Operating Voltage		
Vcoff+	2.9 ± 0.1	Off to on
Vcoff-	2.6 ± 0.1	On to off

Power key and system power-up

When the battery is placed in the phone the power key circuits are energized. When the power key is pressed, the system boots up (if an adequate battery voltage is present).

Power down can be initiated by pressing the power key again (the system is powered down with the aid of SW). The power key is connected to RETU ASIC via PWRONX signal.

Different power-up conditions

Power up can be caused by the following reasons:

- Power key is pressed
- Charger is connected
- RTC alarm occurs
- MBUS wake-up

After that:

- RETU activates sleep clock and VANA, VDRAM, VIO and VR1 regulators.
- Voltage appearing at RETU's RSTX pin is used for enabling TAHVO ASIC.
- TAHVO enables VCORE regulator and its internal RC-oscillator (600kHz).
- VCTCXO regulator is set ON and RF clock (main system clock) is started to produce.
- RETU will release PURX ~ 16ms after power up is enabled (the RF clock is then stable enough).
- Synchronizing clock (2.4MHz) for TAHVO is started to be produced. After PURX is released and two rising edges of 2.4MHz synchronous clock have been detected in SMPSClk input TAHVO is starting to use that instead of 600kHz internal RC-oscillator.
- HW start-up procedure has been finalized and the system is up and running. Now it is possible for SW to switch ON other needed regulators.

Modes of operation

Mode	Description
NO_SUPPLY	(dead) mode means that the main battery is not present or its voltage is too low (below RETU master reset threshold) and that the back-up battery voltage is too low.
BACK_UP	The main battery is not present or its voltage is too low but back-up battery voltage is adequate and the 32kHz oscillator is running (RTC is on).
PWR_OFF	In this mode (warm), the main battery is present and its voltage is over RETU master reset threshold. All regulators are disabled, PurX is on low state, the RTC is on and the oscillator is on. PWR_OFF (cold) mode is almost the same as PWR_OFF (warm), but the RTC and the oscillator are off.
RESET	RESET mode is a synonym for start-up sequence. In this mode certain regulators are enabled and after they and RFClk have stabilized, the system reset (PurX) is released and PWR_ON mode entered. RESET mode uses 32kHz clock to count the REST mode delay (typically 16ms).

Mode	Description
SLEEP	<p>SLEEP mode is entered only from PWR_ON mode with the aid of SW when the system's activity is low. There are in principle three different sleep modes:</p> <ul style="list-style-type: none"> • Golden Eye sleep • RAP3G sleep • Golden Eye and RAP3G sleep (deep sleep) <p>In SLEEP mode RETU's regulators VIO, VDRAM, VSIM1, VSIM2, VAUX and Vana are in low quiescent current mode (output voltages still present but regulators will not give as much current out). Other regulators including VR1 supplying system clock oscillator are disabled.</p> <p>In SLEEP mode, TAHVO VCORE SMPS regulator is in low quiescent current mode (if sleep mode is not internally disabled). Linear regulator VOUT state depends on the accessory connected to the system connector (Pop-Port), if there is any.</p>
FLASHING	FLASHING mode is for SW downloading.

Power distribution

The power distribution is shown in the diagram below. Current consumption is measured via the Current Gauge Resistor and the battery voltage is stabilized by means of a capacitor. The tables below specifies the voltages.

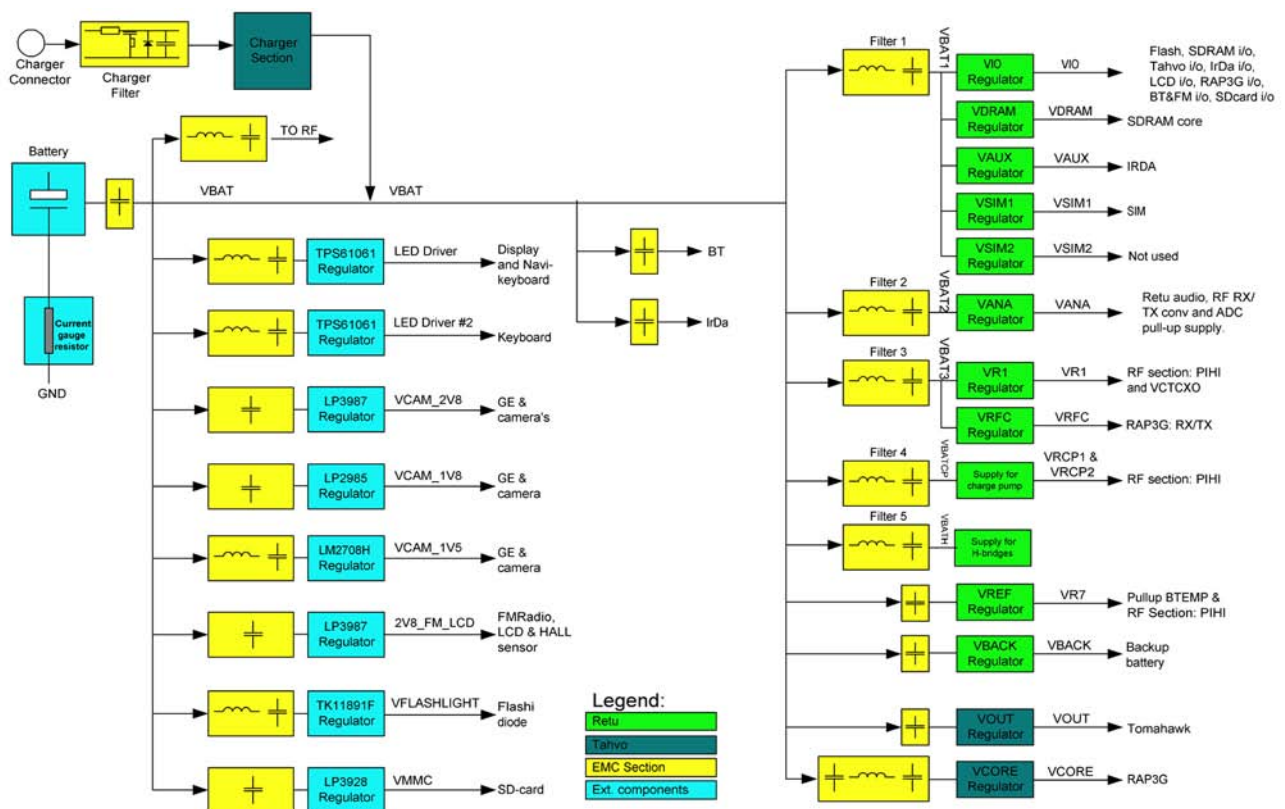


Figure 85 Power regulator diagram

Internal regulators

The table below shows the internal regulators. Also see the Power distribution diagram.

Table 15 Internal regulators

Regulator	Min voltage [V]	Nom voltage [V]	Max voltage [V]	Max load current, normal [mA]	Max load current*, sleep [mA]	Controlled by	Notes
In RETU:							
VIO	1.72	1.82	1.92	250	2.0	HW	
VSIM1	1.7	1.8	1.9	70	0.5	SW	
	2.8	3.0	3.2	30			
VSIM2	1.7	1.8	1.9	70	0.5	SW	Not used
	2.8	3.0	3.2	30			
Vaux	2.4	2.5	2.6	100	2.2	SW	
	2.7	2.78	2.86				
Vana	2.42	2.5	2.58	80	1	HW	
VDRAM	1.72	1.82	1.92	150	0.7	HW/SW	**
	2.4	2.5	2.6	150			
VRCP1	4.6	4.75	4.9	5 ***	-	SW	Supply to RF part
VRCP2	4.6	4.75	4.9	5 ***	-	SW	Supply to RF part
VR1	2.42	2.5	2.58	15	-	HW	VCTCX0 regulator, RF part
VRFC	1.73	1.8	1.87	15	-	SW	Supply to RAP3G RF converters
Vback	2.2	2.5	2.6	0.150	0.150	HW	
In TAHVO:							
VOUT	2.43	2.5	2.57	90	0.5	SW	
VCORE	10.185	1.05	10.815	400	20	HW	SMPS
	12.125	1.25	12.875				
	13.095	1.35	13.905				
	13.580	1.40	14.420				
VCCint	2.43	2.5	2.57	8	-	SW	In FBUS mode In USB mode
	3.0	3.42	3.6				

*) maximum allowable load current in sleep

**) VDRAM output can be fed from VANA or from VIO in sleep mode

***) Total current for charge pump is 6mA (if both regulators are ON at the same time).

External regulators

The table below shows the external regulators. Also see the Power distribution diagram.

Table 16 External regulators

Regulator	Min voltage [V]	Nom voltage [V]	Max voltage [V]	Max load current, normal [mA]	Max load current, sleep [mA]	Controlled by	Notes
LED driver		16		31*	0	SW	Disabled in sleep.
LED driver #2		8		63*	0	SW	Disabled in sleep.
VFLASHLIGHT		18		80	0	SW	Disabled in sleep.
VCAM_2V8*	2.765	2.85	2.936	150	0	SW	Disabled in sleep.
VCAM_1V8*	1.728	1.8	1.872	150	0	SW	Disabled in sleep.
VCAM_1V5*	1.532	1.57	1.617	400	0	SW	Disabled in sleep.
2V8_FM_LCD	2.765	2.85	2.936	150	150	HW	Only turned off in power off mode.
VMMC	2.75	2.85	2.95	150	0	SW	Disabled in sleep.

*) 500mW is max output

Clocking scheme

In BB5.0, two main clocks are provided to the system: 38.4MHz RF clock produced by VCTCXO in RF section and 32.768kHz sleep clock produced by RETU with an external crystal.

RF clock is generated only when VCTCXO is powered on by RETU regulator. Regulator itself is activated by SleepX signals from both RAP3G and Golden Eye. When both CPUs are on sleep, RF clock is stopped.

RF clock is used by RAP3G that then provides (divided) 19.2MHz SysClk further to Golden Eye. Both RAP3G and Golden Eye have internal PLLs which then create clock signals for other peripheral devices/interfaces like RS MMC, SIM, CCP, I2C and memories.

32k Sleep Clock is always powered on after startup. Sleep clock is used by RAP3G and OMAP for low-power operation.

SMPS Clk is 2.4MHz clock line from RAP3G to TAHVO used for switch mode regulator synchronizing in active mode. In deep sleep mode, when VCTCXO is off, this signal is set to '0'-state.

BT Clk is 38.4MHz signal from HINKU ASIC to BT module.

CLK600 is 600kHz signal from TAHVO to APE VCore SMPS. The clock source is internal RC oscillator in TAHVO (during the power-up sequence) or RAP3G SMPS Clk divided by 4 after the power-up sequence.

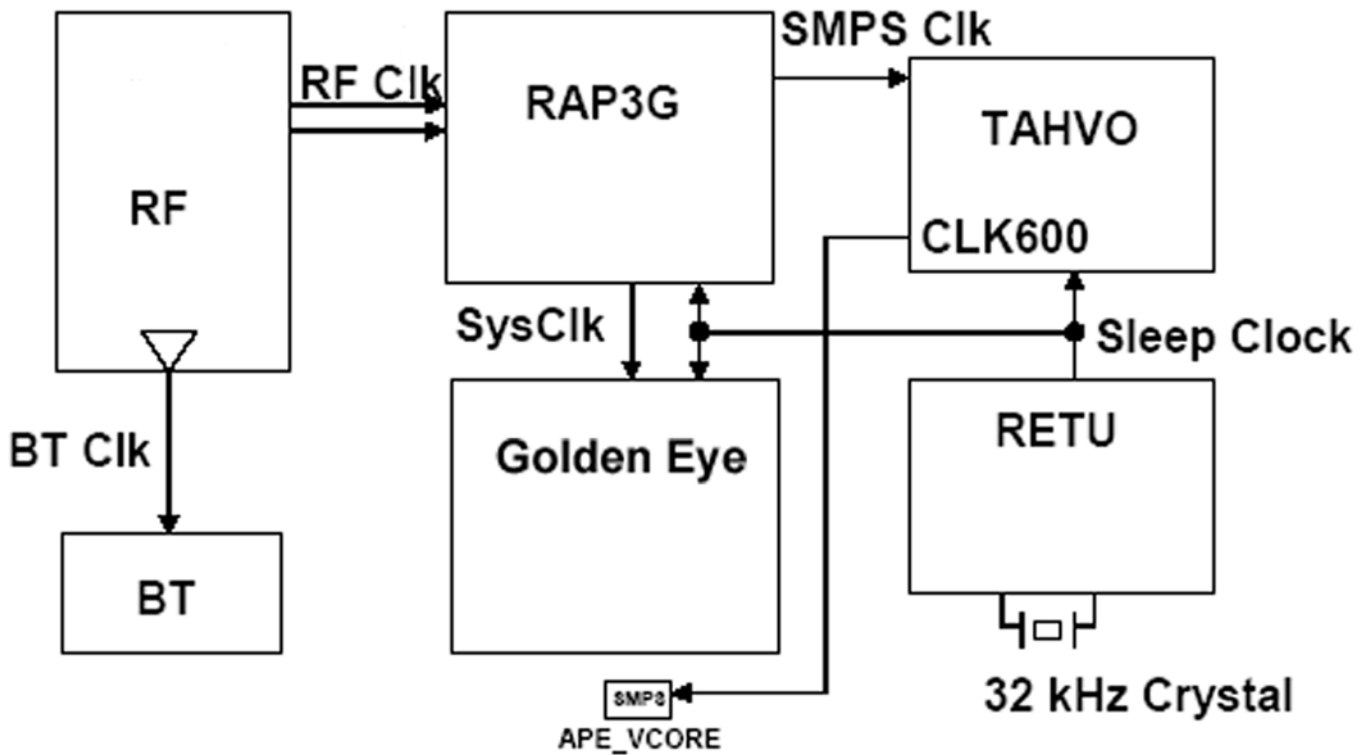


Figure 86 Clocking scheme

■ **USB, SIM, MMC**

USB

USB (Universal Serial Bus) provides a wired connectivity between a USB host PC and peripheral devices. USB is a differential serial bus for USB devices. USB controller (RAP3G) supports USB specification revision 2.0 with full speed USB (12 Mbps). The device is connected to the USB host through the Pop-Port™ connector. The USB bus is hot plugged capable, which means that USB devices may be plugged in/out at any time.

SIM interface

The device has one SIM (Subscriber Identification Module) interface. It is only accessible if battery is removed. The SIM interface consists of an internal interface between RAP3G and Retu and of an external interface between Retu and SIM contacts. The main SIM interface functionality is in RAP3G while Retu takes care of power up/down, card detection, ATR (Answer To Reset) counting and level shifting. For Retu external SIM IF connections, see [SIM interface connections \(page \)](#).

The SIM IF is shown in the following figure:

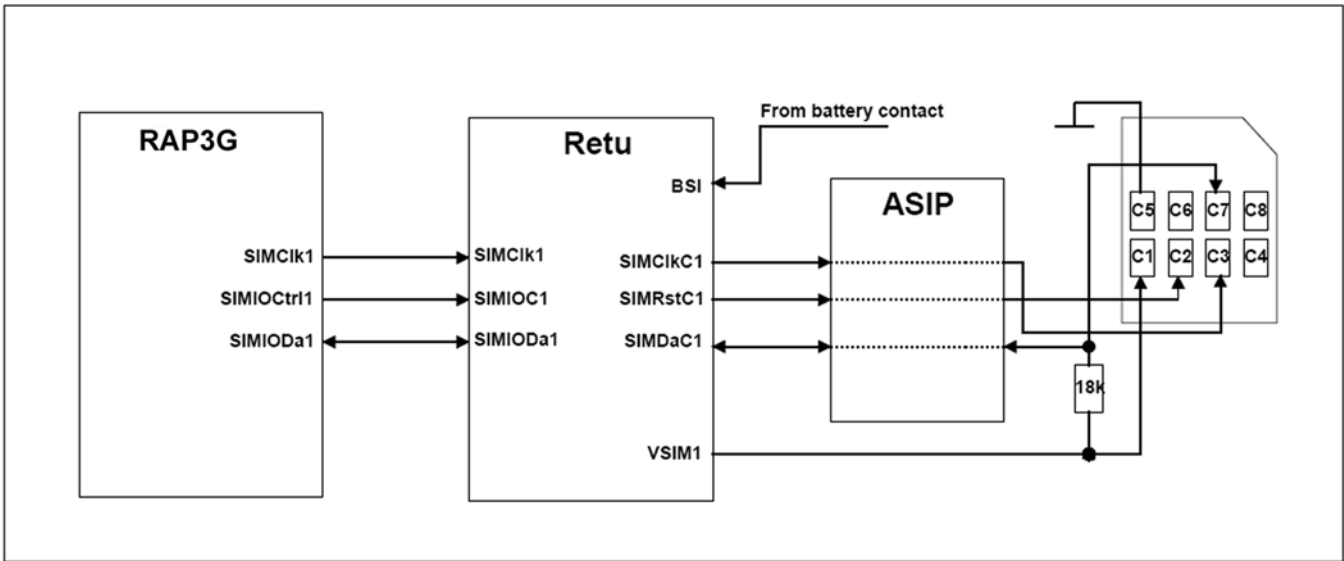


Figure 87 SIM interface

Retu handles the detection of the SIM card. The detection method is based in the BSI line. Because of the location of the SIM card, removing the battery causes a quick power down of the SIM IF.

The Retu SIM1 interface supports both 1.8V and 3.0V SIM cards. The SIM interface voltage is first 1.8V when the SIM card is inserted, and if the card does not response to the ATR a 3V interface voltage is used.

The data communication between the card and the phone is asynchronous half duplex, and the clock supplied to the card is 1-5MHz, which is 3.2MHz by default (in GSM system). The data baud rate is the SIM card clock frequency divided by 372 (by default), 64, 32 or 16.

■ Cameras

Back camera

The back camera of the device uses a 2.0 megapixel camera module with a sensor resolution of 16000 x 1200. The following block diagram shows how a CCP bus is used to transfer image data from the camera module to the phone engine. This bi-directional control bus is a software-implemented I2C interface.

The camera regulator N1470 powers the digital parts of the camera, and a VAUX power rail is used for powering the analogue parts.

A CAMVCTRL signal (Vctrl) is used for activating the camera module. When the Vctrl signal is High, the module enters the power on mode. When the signal is Low, the module enters the power off mode.

A CAMCLK signal feeds the system clock for the camera module.

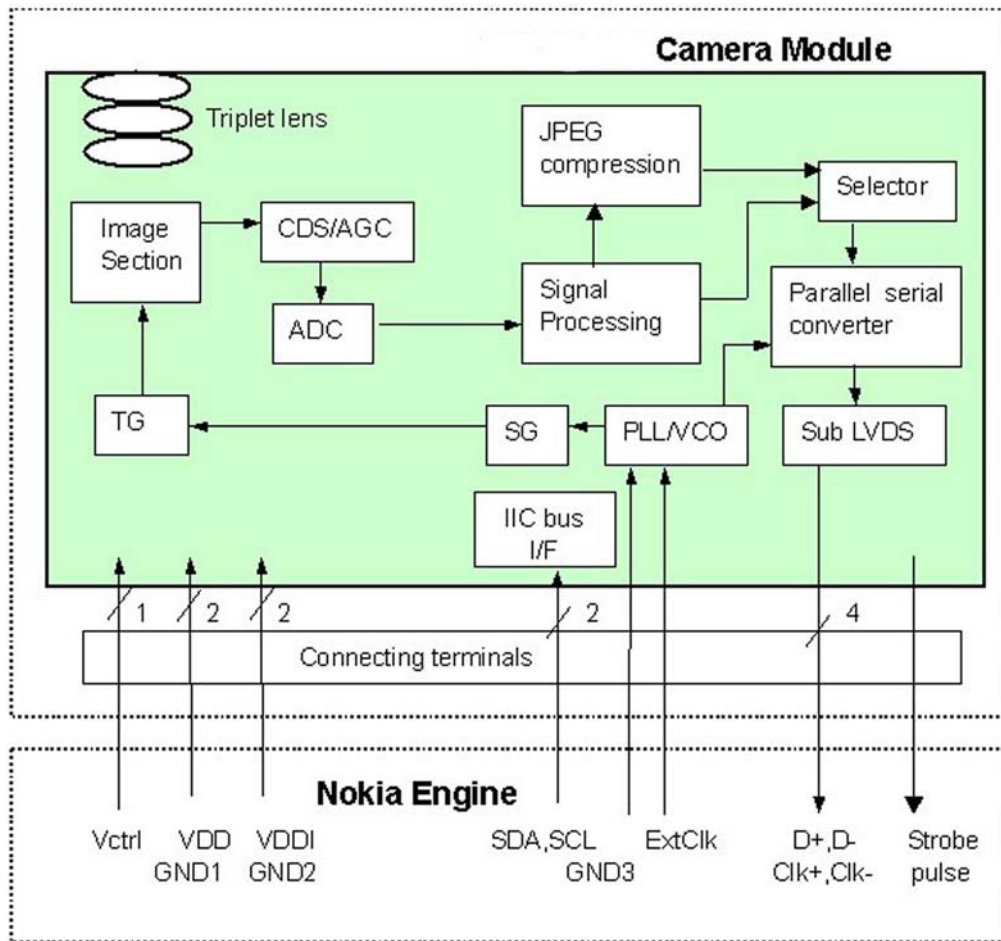


Figure 88 Block diagram of the back camera module

Flash LED

The device back camera includes a flash LED (FLED) providing better lighting conditions in darker environments. The same LED is also used as an indicator light for indicating when a video clip is being recorded.

The FLED is located beside the back camera. It is only used when the back camera is in the still image mode or as an indicator for video recording or image capturing. The operating range of FLED is approximately 1 m (~22 Lux) and 1.5 m (~9 Lux).

The connections between the main PWB and the FLED is implemented with a small PWB attached to the device mechanics.

The FLED has four white LEDs connected in series in one module. The module also includes a lens with its plastic housing. The dimensions of the FLED are 6.5 x 7.5 x 3.5 mm.

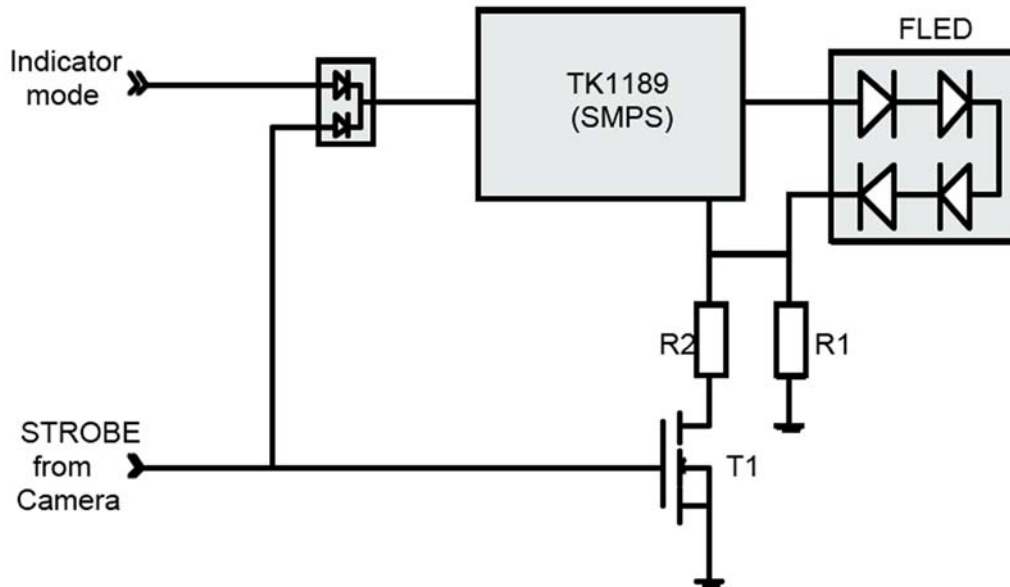


Figure 89 Simplified flash LED connection

Front camera

The front camera has VGA (640x480) resolution, and it is mainly used for video calls. It can also be used as a still camera and camcorder.

The front camera is controlled and its data is collected by Golden Eye APE. The I/O voltage of Golden Eye is 1.8V and the I/O voltage of the camera is 2.8V. Because of this, a level shifter is used for the interface between Golden Eye and the camera.

The front camera has the following characteristics:

Sensor type:	CMOS
Sensor Photo detectors:	300k
F number/Aperture:	f/2.8
Focal length:	2.13 mm
Focus range:	40 cm to infinity
Still Image resolutions:	640 x 480
Video resolutions:	176 x 144, 128 x 96 both 15 frames per second.
Video clip length:	30 seconds or free, maximal clip length in free mode is 1 hour
Video file format:	3GPP, *.3gp (64 kbps in short clip mode, 128 kbps in maximum mode)
Exposure:	Automatic
White Balance:	Automatic
ISO:	250 - 2000 (Automatic)
Capture Modes:	Night mode, Sequence mode, Selftimer

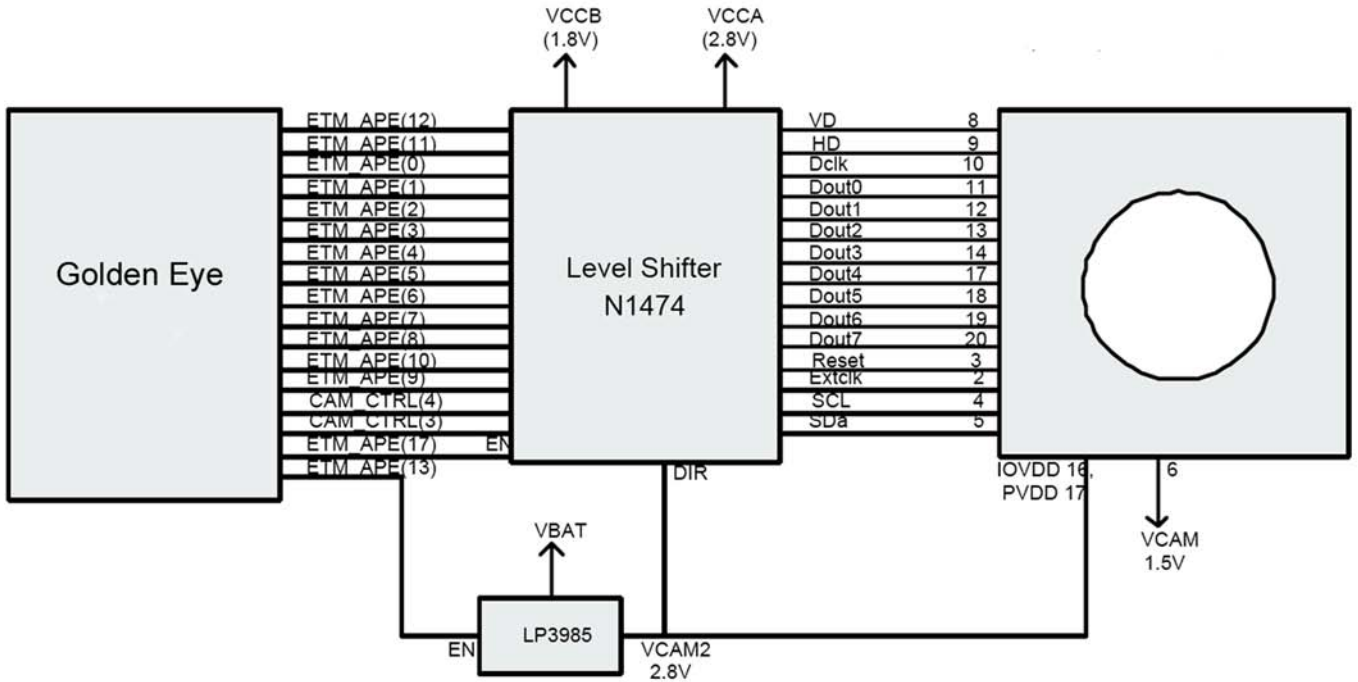


Figure 90 Front camera connections

■ **User interface**

Display interface

Display module mechanical concept



Figure 91 General diagram of the LCD module

Display features:

- 262 k colours
- Partial display function Power saving by pausing display process on part of the screen.
- Built-in RAM capacity 176rows×208lines×16bit = 585,728 bits

The display has two different operating modes:

- 1 Normal mode, Full screen, 262k colours
- 2 Normal Partial mode, 262k colours but only part of the display is active

The interconnection between the LCD module and the Nokia engine is implemented with a 24-pin board-to-board connector.

Display is controlled via MeSSI-8 interface by Golden Eye. All MeSSI-8 signals go through the EMC filtering ASIPs. The display module does not require any tuning in service.

Top keyboard

The UI-Keys are placed on normal rigid FR4 board connected through the flex to the main PWB. All keys on the top UI board have a dedicated line. All lines are routed through a 10 channel Key-ASIP Z3300.

The top keypad contains 2 backlight LEDs.

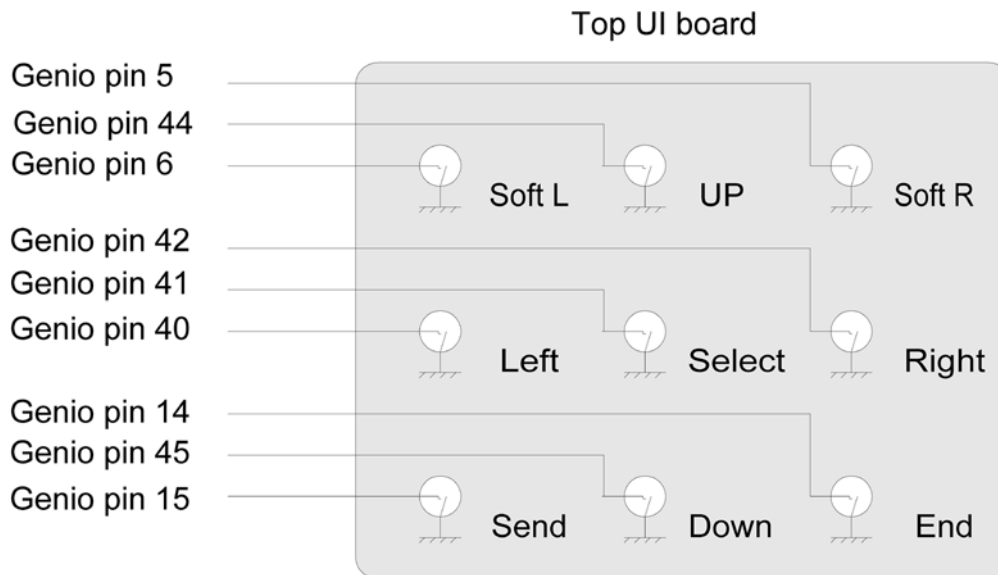


Figure 92 Top keyboard keys

Main keyboard

All keys on the main board are included in a 4x4 key scan matrix. All lines are routed through 10 channel Key-ASIP Z2580.

The main keyboard contains 2 backlight LEDs.

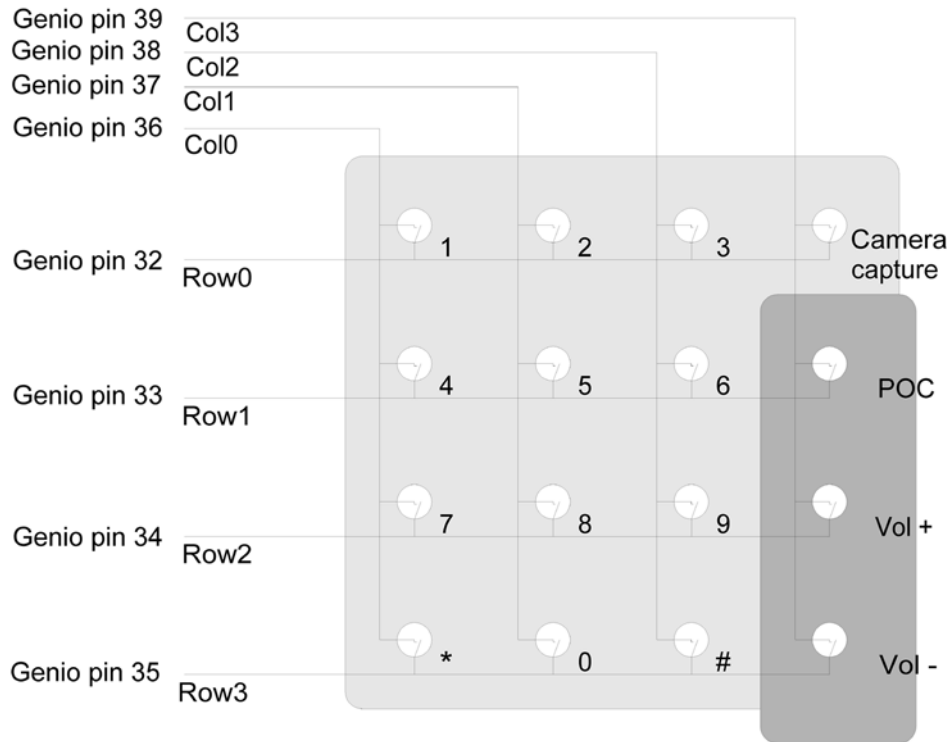


Figure 93 Main keyboard

■ Audio concept

Audio HW architecture

The functional core of the audio hardware is built around two ASICs: RAP 3G CMT engine ASIC and the mixed-signal ASIC Retu.

Retu provides an interface for the transducers and the accessory connector. Because audio amplifiers are also integrated into Retu, the only discrete electronics components needed for audio paths are audio filtering components and EMC/ESD components.

There are three audio transducers:

- 8mm dynamic earpiece
- 16mm dynamic speaker (IHF)
- electret microphone module

In addition to the audio transducers, Retu also provides an output for the dynamic vibra component.

All galvanic audio accessories are connected to the Pop-Port™ accessory connector.

A Bluetooth audio module that is connected to RAP3G supports Bluetooth audio functionality. There is a FM stereo radio integrated with the Bluetooth ASIC.

There is a separate application ASIC, Golden Eye, for Symbian applications.

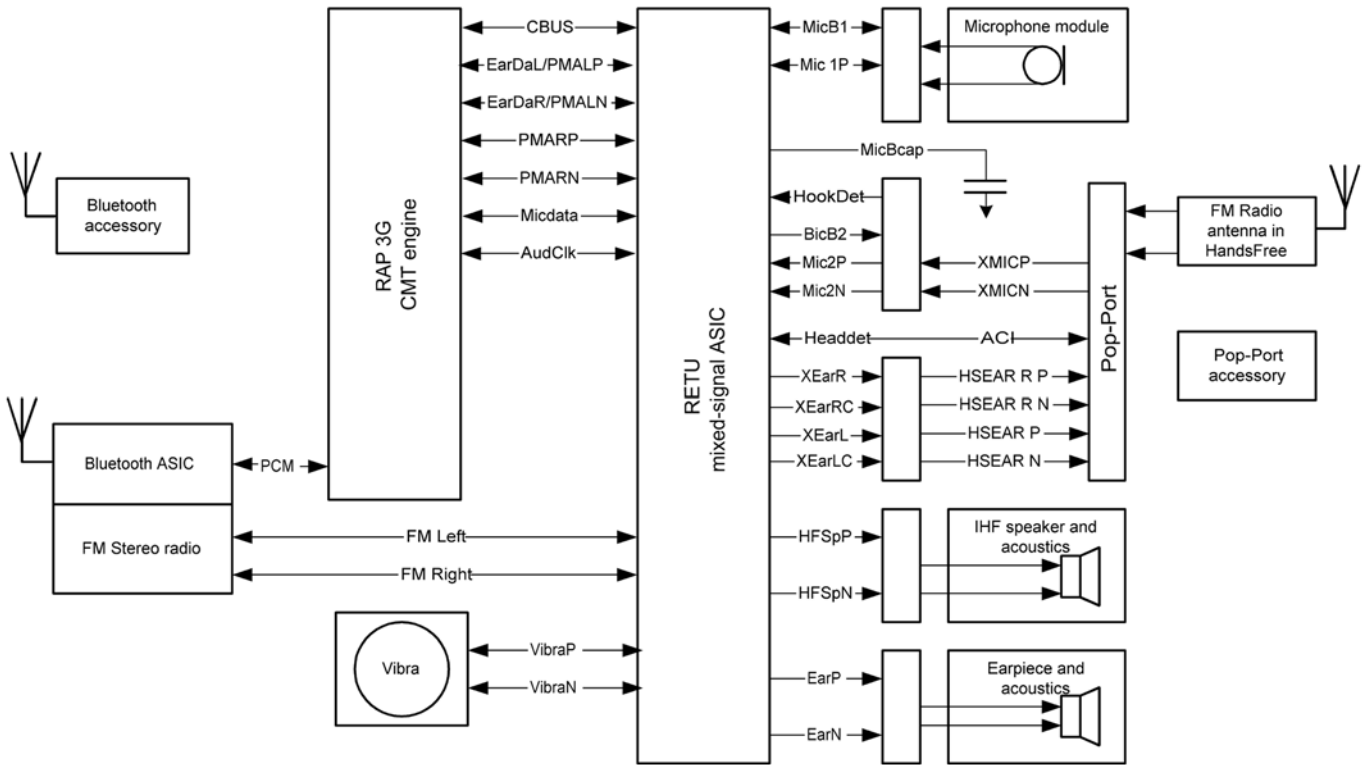


Figure 94 Audio block diagram

Internal microphone

Internal microphone is used for HandPortable (HP) and Internal HandsFree (IHF) call modes.

An analogue electret microphone is connected to Retu ASIC's Mic1P and Mic1N inputs via asymmetric electrical connection.

The microphone is biased by Retu ASIC MicB1 bias voltage output.

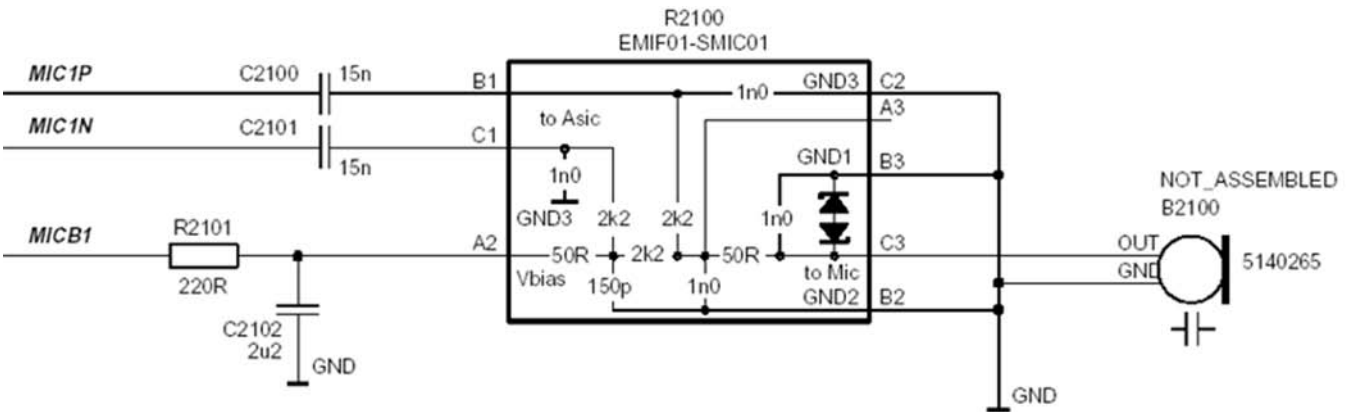


Figure 95 Internal microphone circuitry

External microphone

Galvanic accessories are connected to the system connector (Pop-Port™).

Accessory audio mode is automatically enabled/disabled during connection/disconnection of dedicated phone accessories.

External microphone circuitry is biased by Retu ASIC MicB2 bias voltage output. The circuitry provides a symmetrical connection for the microphone from the Pop-Port™ connections, XMICN and XMICP, to Retu ASIC inputs, Mic2P and Mic2N.

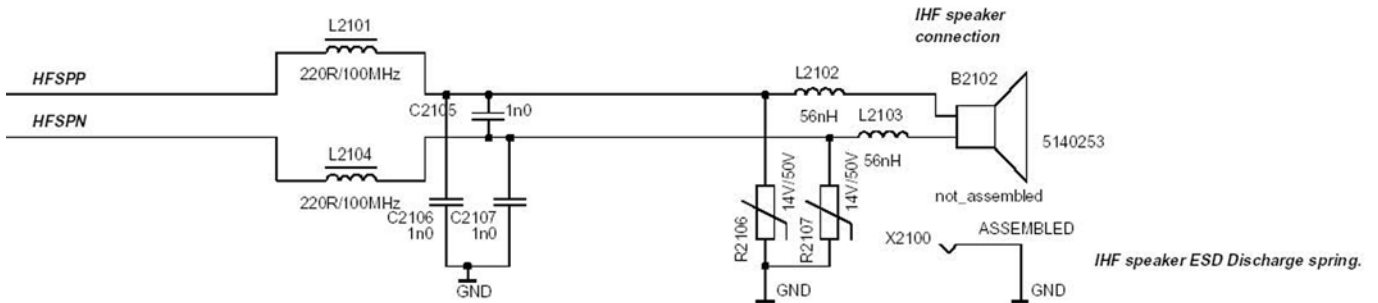


Figure 96 External microphone circuitry (Pop-Port connects to the right side)

Internal earpiece

The internal earpiece is used in the HandPortable (HP) call mode. A dynamic 8 mm earpiece capsule is connected to Retu ASIC's differential outputs EarP and EarN.

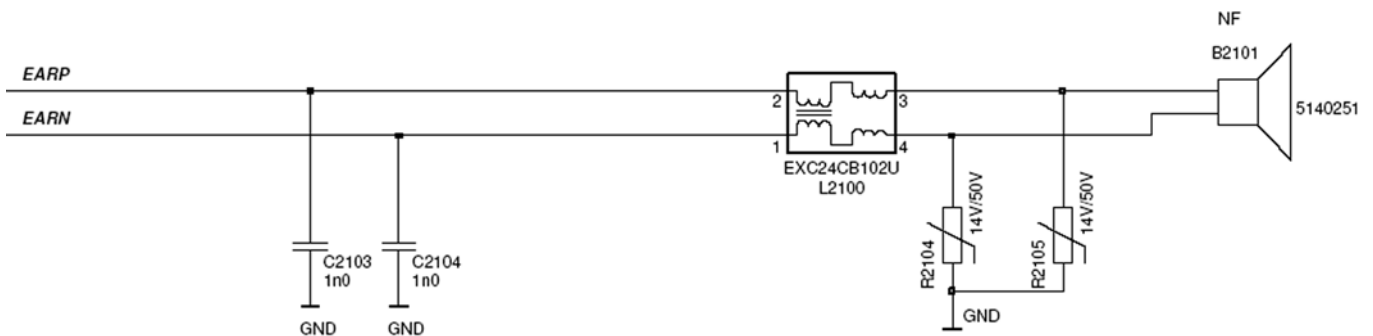


Figure 97 Internal earpiece circuitry

Internal speaker

The internal speaker is used in Internal HandsFree (IHF) call mode.

A dynamic 16 mm speaker is connected to Retu ASIC's outputs HFSpP and HFSPN.

The IHF amplifier integrated in Retu is a Digital Pulse Modulated Amplifier (DPMA).

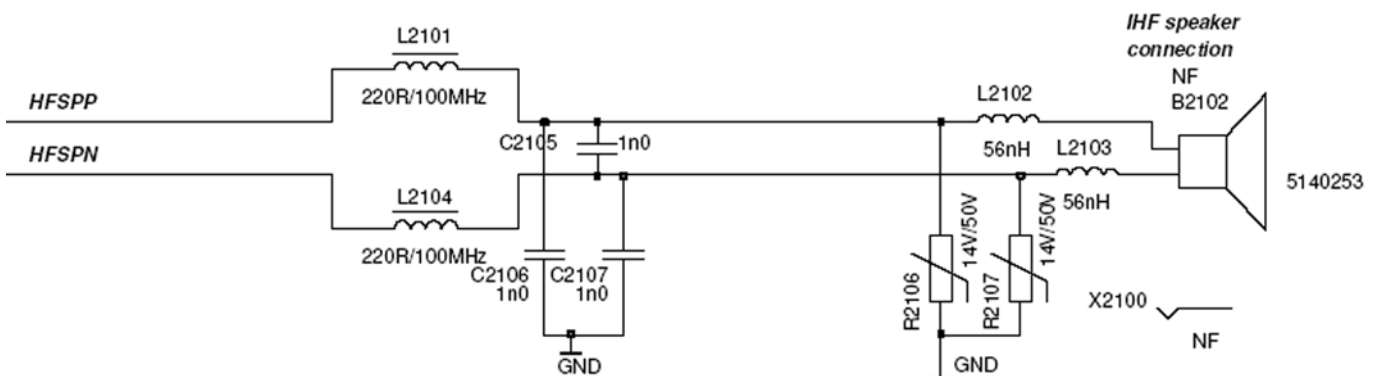


Figure 98 Internal speaker circuitry

External earpiece

All galvanic accessories are connected to the system connector (Pop-Port™).

The accessory audio mode is automatically enabled/disabled during connection/disconnection of dedicated phone accessories.

Retu ASIC provides two output channels in either single-ended or differential format. Retu ASIC outputs XearL and XearLC form the left channel audio output, and XearR and XearRC the right channel audio output. XearLC and XearRC are the ground pins if the output works in a single-ended operation.

In the Pop-Port™ side, HSEAR P and HSEAR N form the left channel output, and HSEAR R P and HSEAR R N the right channel output. Respectively, HSEAR N and HSEAR R N are the ground pins if the output works in a single-ended operation.

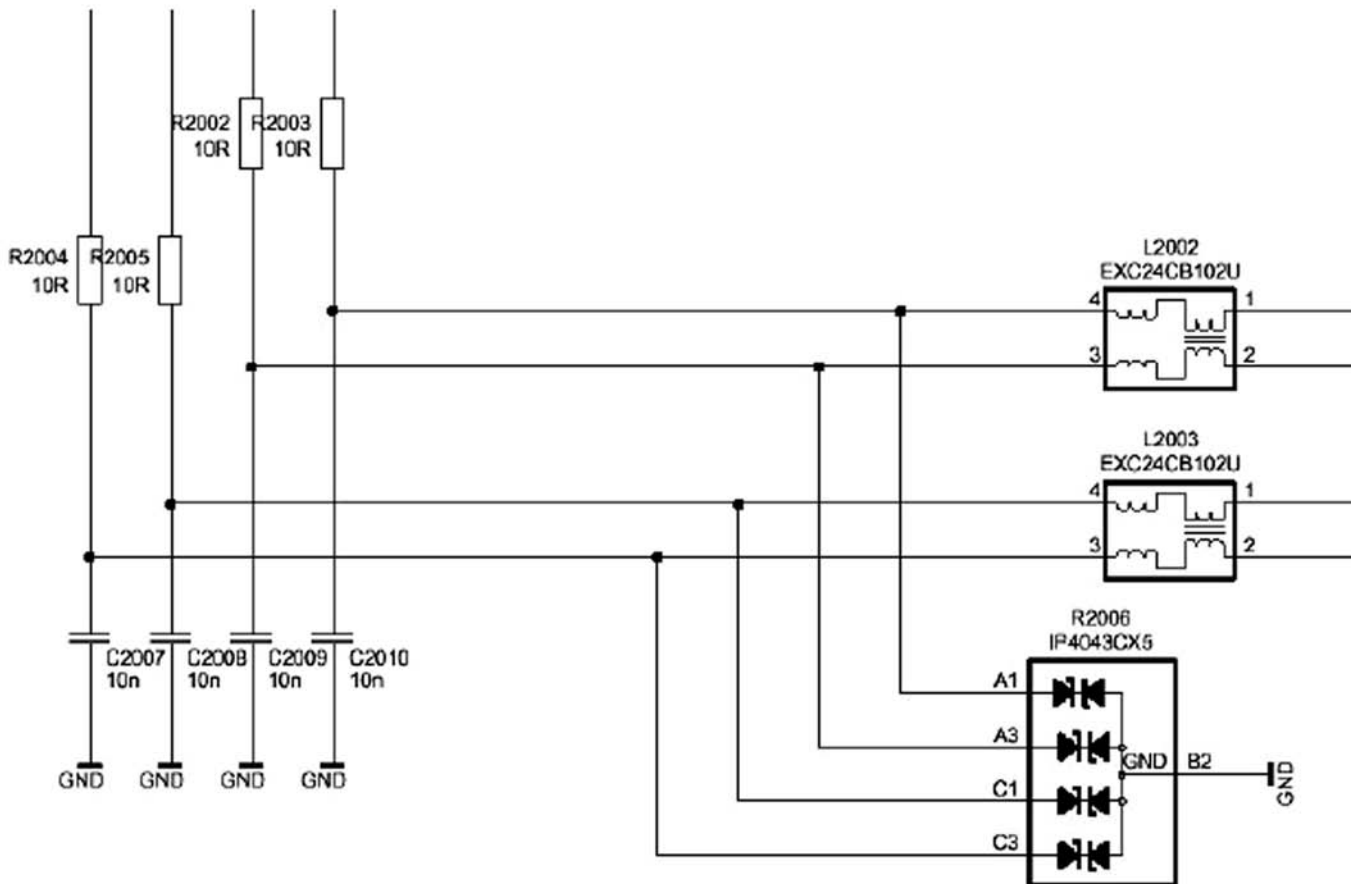


Figure 99 External earpiece circuitry (Pop-Port connected on the right)

Vibra circuitry

Vibra is used for vibra-alarm function.

The vibra motor is connected to the Retu ASIC VibraP and VibraN Pulse Width Modulated (PWM) outputs.

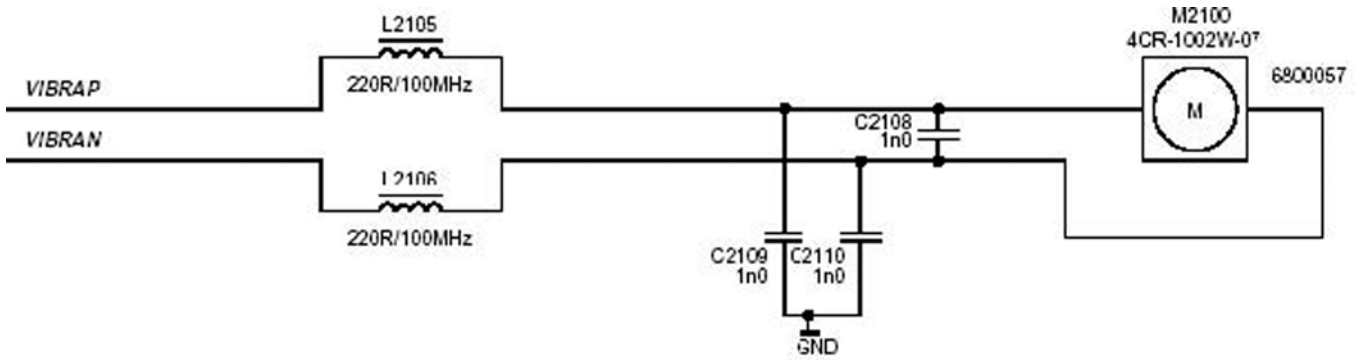


Figure 100 Vibra circuitry

Pop-port™ connector

Pop-Port™ connector provides a fully differential 4-wire stereo line-level output connection and fully differential 2-wire mono line-level or microphone level input connection.

The handsfree driver in Retu is meant for the headset.

The output is driven in a fully differential mode. In the fully differential mode, the handsfree pin is the negative output and the HFCM pin is the positive output. The gain of the handsfree driver in the differential mode is 6 dB.

The earpiece and headset signals are multiplexed so that the outputs cannot be used simultaneously.

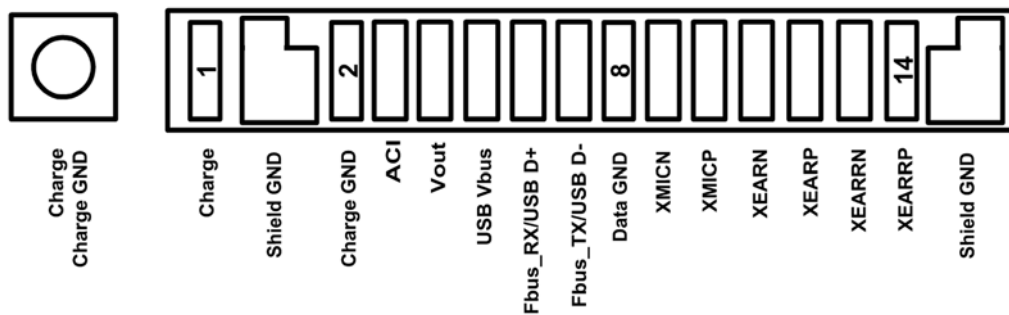


Figure 101 System connector pin layout

Table 17 Pop-Port™ pin and signal table

Pin #/ Signal name	Signal description	Spectral range	Voltage/ Current levels	Max or nominal serial impedance	Notes
1/ Charge	V Charge	DC	0-9V/ 0.85A		
2/ GND	Charge GND	-	0.85A	100mΩ (PWB+ conn.)	
3/ ACI	ACI	1kbits/s	Digital 0 / 2.5-2.78V	47Ω	Insertion & removal detection
4/ Vout	DC out	DC	2.78V 70 mA / 2.5V 90mA	100mΩ (PWB+ conn.)	200mW
5/USB Vbus	USB power		4.375-5.25VDC		115.2kbit

Pin #/ Signal name	Signal description	Spectral range	Voltage/ Current levels	Max or nominal serial impedance	Notes
6/Fbus_RX/USB D+	Data connection				115.2kbit
7/Fbus_TX/USB D+	Data connection				115.2kbit
8/Data GND	USB Ground				115.2kbit
9 / XMIC N	Audio in	300-8k	1Vpp & 2.5-2.78VDC		
10 / XMIC P	Audio in	300-8k	1Vpp & 2.5-2.78VDC		
11 / XEAR N	Audio out	20-20k	1Vpp	10Ω	
12 / XEAR P	Audio out	20-20k	1Vpp	10Ω	
13 / XEAR R N	Audio out	20-20k	1Vpp	10Ω	Not conn. in mono
14 / XEAR R P	Audio out	20-20k	1Vpp	10Ω	Not conn. in mono

■ Bluetooth and FM radio

Bluetooth

Bluetooth provides a fully digital link for communication between a master unit (the phone) and one or more slave units (e.g. a wireless headset). The system provides a radio link that offers a high degree of flexibility to support various applications and product scenarios. Data and control interface for a low power RF module is provided by the module.

The Bluetooth is physically integrated with the FM radio into one single module. From a functional point of view they, however, have nothing in common.

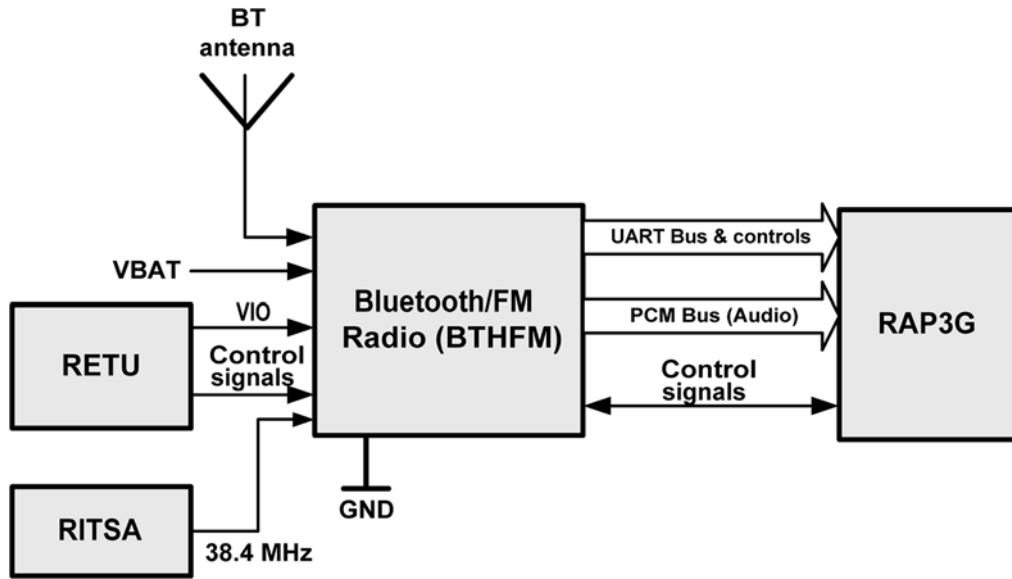


Figure 102 Bluetooth interface

The Bluetooth has a separate built in antenna and is powered by VBAT and the regulated voltage VIO. For audio applications the Bluetooth has a PCM data bus. In addition a UART (universal asynchronous receiver/transmitter) is used for data communication and controls.

FM radio

The FM radio is physically integrated with the Bluetooth into one single module. From a functional point of view they, however, have nothing in common (for information on Bluetooth, see [page \(page 9-22\)](#)).

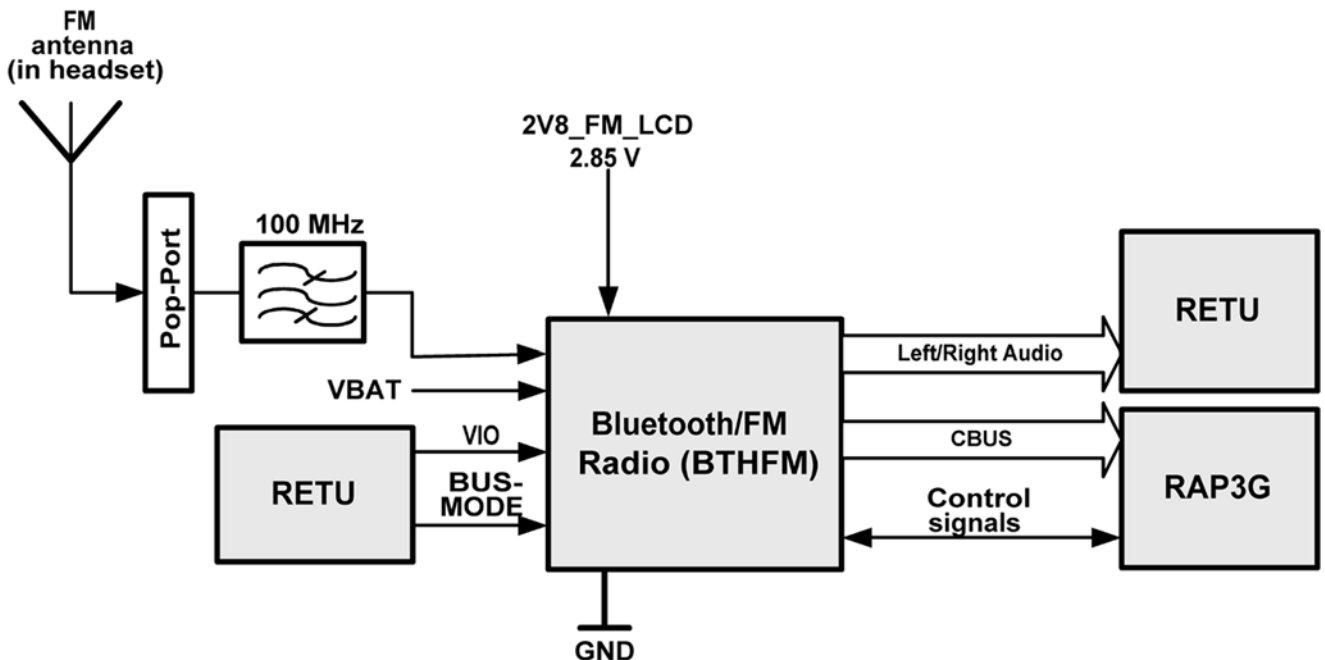


Figure 103 FM interface

The FM radio is an integrated circuit, controlled by MCU software through a serial bus interface. The wires of the headset are used as poles of the antenna, and no other antenna is needed for FM radio reception.

In addition to the Bluetooth unit the FM radio is provided with LDO (low drop out) voltage 2V8_FM_LCD. The radio has an automatic band search function, which can search for a strong write/read signal from a certain frequency. When this is found, data is transmitted to the radio. When the signal strength is low, the RETU can read data, which is available until the signal is strong again.

■ RF description

Introduction to receiver functionality

Receiver functions are implemented in an RF ASIC.

The receiver is a linear direct conversion receiver consisting of separate front ends (LNA (Low Noise Amplifier) and demodulator) for each supported system. After the demodulators, the signal paths are combined to one common BB path.

WCDMA receiver

In the WCDMA mode, the received signal is fed from the antenna to the duplex filter. After the duplex filter the signal goes via balun to the integrated LNA (Low Noise Amplifier) residing in N7500. After the LNA, the signal goes through an off chip band pass SAW filter. The main task of the filter is to attenuate the Tx signal which is amplified by LNA and is leaking through the duplex filter.

After filtering, the signal goes to the down conversion mixer, which converts the signal to baseband I and Q signals (90 degrees phase shift). After the demodulator output, there is an RC low pass filter with f_0 of ca. 1.5 MHz.

At BB frequency the signal is amplified and fed to a low pass filter.

The Rx channel filter must be calibrated with an automatic routine whenever N7500 IC is changed to a phone.

In the WCDMA mode, the corner frequency of the filter is set to ca. 2.1MHz. The filter is followed by an AGC (Automatic Gain Control) amplifier with an adjustable gain. The signal is further amplified before it is fed to balanced analogue IQ output pins. The analogue output pins are accompanied by reference voltage output, which sets the DC level for the AD converter in BB ASIC RAP3G.

The last stage of the RF Rx chain is an output buffer which feeds the signal and a reference voltage (VREFCM) to the BB ASIC. The AGC stages are used to maintain the voltage swing at the input of the AD converters at an adequate level.

GSM receiver

As GSM900, GSM1800 and GSM1900 Rx branches are functionally identical, the following description is applicable to all of them.

The received signal goes from the GSM antenna to the antenna switch module. The antenna switch module contains PIN diode switches for a band and Rx/Tx selection and also Rx SAW filters.

The antenna switch module is followed by integrated LNAs residing in N7500.

The LNAs are followed by demodulators which downconvert the signal to baseband I and Q signals.

After the down conversion mixer, the Rx chain is similar to the WCDMA Rx. The channel select filter is set to 115 kHz in the GSM mode.

Introduction to transmitter functionality

Transmitter functions are implemented in an RF ASIC. The ASIC contains a BB frequency low pass filter, which is tunable according to the signal bandwidth of the system in use.

In addition, the ASIC contains separate RF paths comprising a final frequency IQ modulator and VGA amplifiers.

WCDMA transmitter functionality

In the transmitter side, an analogue I/Q modulated signal is received from digital baseband into an RF ASIC and feed through a low pass filter. The corner frequency of the filter is set to approximately 3 MHz. After the filter the signal is feed to the IQ modulator, which converts the signal to final Tx frequency. There are two separate I/Q modulators: one for WCDMA and another for GSM signals. The modulator is followed by two VGA stages giving 85 dB of gain control range. The signal then exits the RF ASIC via a balanced line. Next, the signal is band pass filtered by a SAW filter before it is fed to the WCDMA PA module. After the PA, the transmitted WCDMA signal is fed through an isolator and a duplex filter to the antenna.

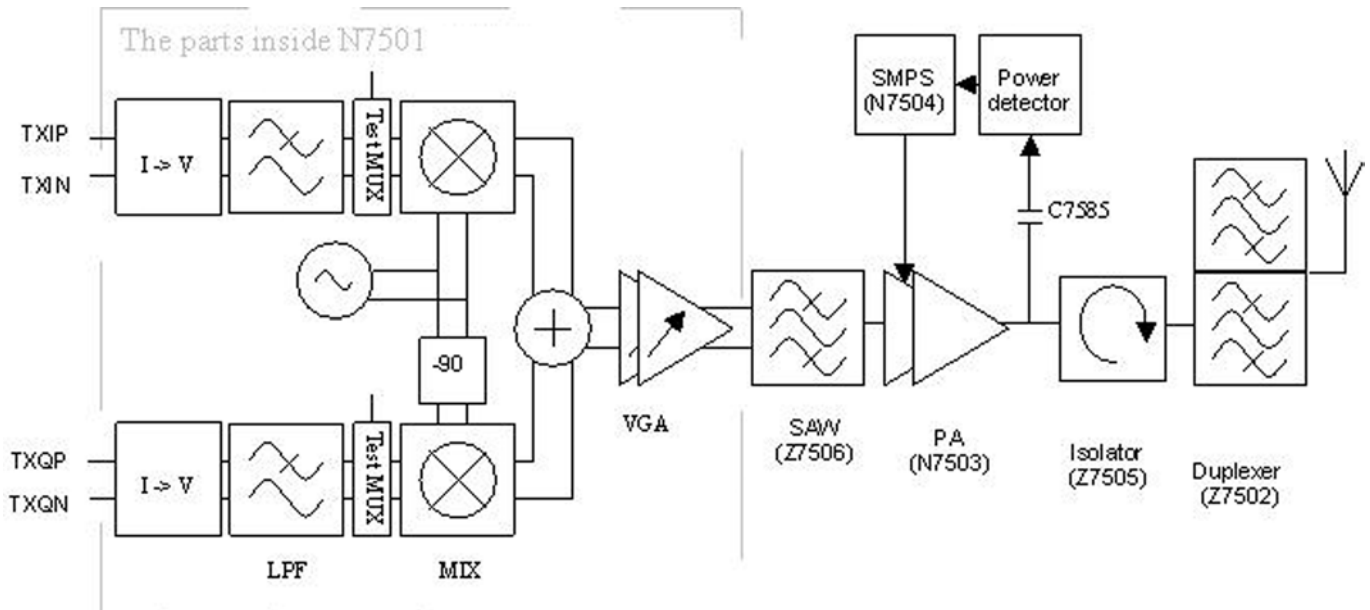


Figure 104 WCDMA transmitter

WCDMA power control

WCDMA Tx power control is accomplished by the two VGA amplifier stages in the Tx ASIC.

The VGAs have a common temperature compensation circuit and one voltage mode analogue input for gain control (TXC).

The gain of the VGA amplifier chain is controlled by a DA converter in BB. The same DA converter is shared by GSM Tx power control function.

A sample of the output power is taken by a capacitor between the power amplifier and the isolator, and fed to a diode power detector. The output of the detector is low pass filtered, and the voltage is then AD converted in BB.

Another function of the detector voltage is to steer the DC/DC converter, which is providing a variable supply voltage for the WCDMA PA.

WCDMA PA module

The WCDMA PA is housed in a separate module having:

- a variable supply voltage input for the amplifier stages (Vcc11),
- a battery supply voltage for the bias circuits (Vcc12),
- and two bias current inputs.

Bias currents are generated by 5-bit DA converters in the RF ASIC. The converters are controlled by BB via RFBUS.

If a different manufacturer's PA is changed to the phone, this setting must be set again.

The bias currents are also used as PA on/off controls. The structure of the WCDMA PA is shown in the following figure. The supply voltage for the output stage is got from a DC/DC converter in order to improve the efficiency at low power levels.

PA DC/DC converter

The control of the DC/DC converter is fed back from the power detector circuit.

The DC/DC converter limits the lowest supply voltage to 1.5 V. At highest power levels the DC/DC converter output settles nominally to 3.2 V.

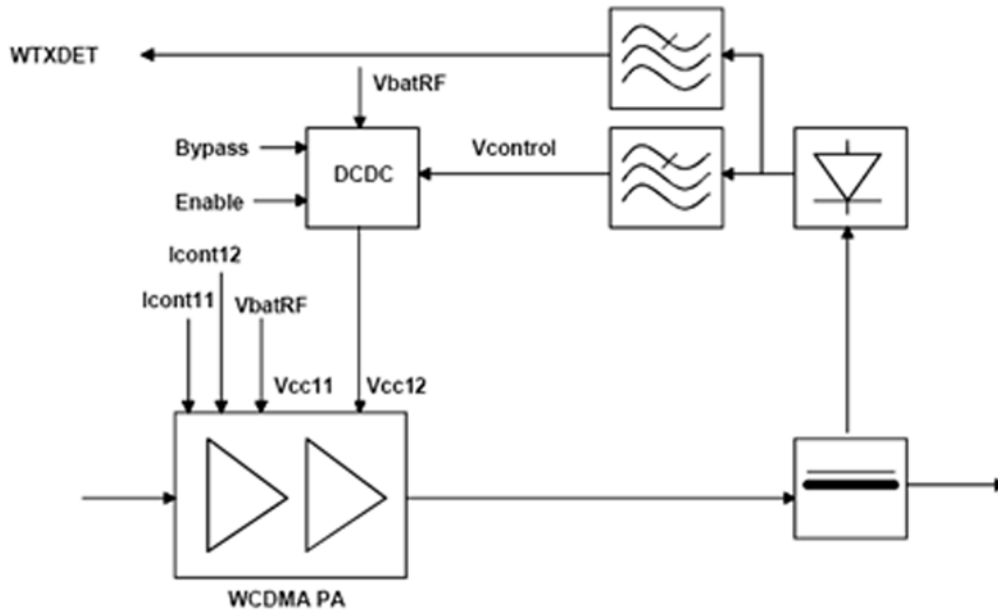


Figure 105 Block diagram of DC/DC converter and WCDMA PA

GSM transmitter functionality

An RF ASIC receives an analogue IQ modulated signal from digital BB, which is first low pass filtered with filter corner frequency set to approximately 200 kHz. After the filter, the signal is routed to the GSM modulator. The amplifier gives 40 dB of power control dynamic range.

After the VGA stage the signal exits the RF ASIC. In case of GSM1800/1900 the signal goes directly to the GSM PA module. In case of EGSM900 (and GSM850), the PA module is preceded by a SAW filter. After the filter, the signal is fed to the GSM PA module. Finally, the signal is routed via the antenna switch to the antenna.

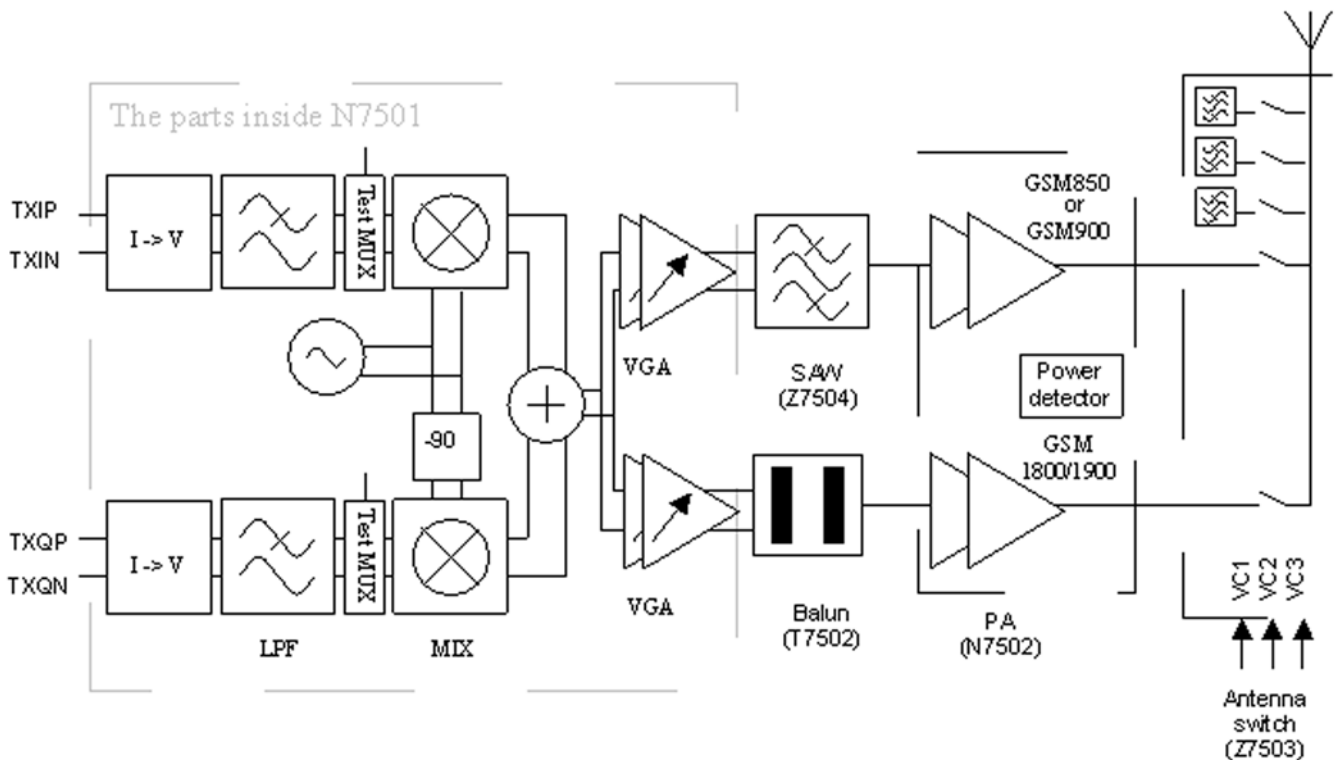


Figure 106 GSM transmitter

GSM power control

A closed control loop comprise an integrated power detector (in PA module) and an error amplifier. The error amplifier resides in N7501, and it controls the transmitter power of GSM.

Detector output from the PA gives a DC level proportional to the output power. The DC voltage is fed to the negative input of the error amplifier, where it is compared to the level of the reference signal, TXC. TXC is got from the BB circuitry. The output of the error amplifier is fed to a buffer amplifier, which in turn steers the VGA amplifier.

The power control loop is enabled and disabled by writing an appropriate register in N7501 RF ASIC. In case of dual slot transmission, the output power is ramped down between the consecutive slots.

GSM PA module

A single GSM/EDGE PA module contains two separate amplifier chains, one for EGSM900 (and GSM850) and another for GSM1800/1900. Both amplifiers have a battery supply connection and two bias current inputs.

Frequency synthesizers

RF has separate synthesizers for Rx and Tx. Both synthesizers consist of:

- PLL (Phase-Locked Loop)
- loop filter
- VCO (Voltage Controlled Oscillator)
- balun

The VCO frequencies are locked by PLLs into a reference oscillator, VCTCXO (Voltage Controlled Temperature Compensated Crystal Oscillator).

The PLLs are located in RF ASICs and controlled via RFBUS.

The VCOs operate at the channel frequency multiplied by two in the upper bands and by four in EGSM900 (and GSM850, if applicable). The required frequency dividers required for modulators and demodulators are integrated into RF ASICs. The dividers are controlled via RFBUS.

Reference oscillators

A 38.4MHz VCTCXO is used as a reference oscillator for the frequency synthesizers.

The output signal of the VCTCXO is directly connected to both RF ASICs where it is used as synthesizer reference. The other RF ASIC also contains a balanced buffered output for supplying the clock signal to the digital BB ASIC and a single ended buffer for Bluetooth.

The frequency of the reference oscillator is locked into the frequency of the base station with the help of an AFC (Automatic Frequency Control) voltage, which is generated in BB by a DSP (Digital Signal Processor) and converted by a dedicated DAC (Digital-to-Analogue-Converter).

Regulators

RF ASICs contain integrated regulators to supply regulated voltages for their internal circuitry and other RF parts. Rx VCO supply is got via a switch from an RF ASIC VR1 regulator. VCO can be switched on and off by controlling the switch via RFBUS.

Supply voltage for the VCTCXO is provided by a BB mixed mode ASIC. The same supply is used for reference clock input buffers, output buffers and for the digital control blocks of both RF ASICs.

Other supplies, like 4.7 V supply for PLL charge pumps and bias reference (VREFRF01) are also provided by the BB mixed mode ASIC.

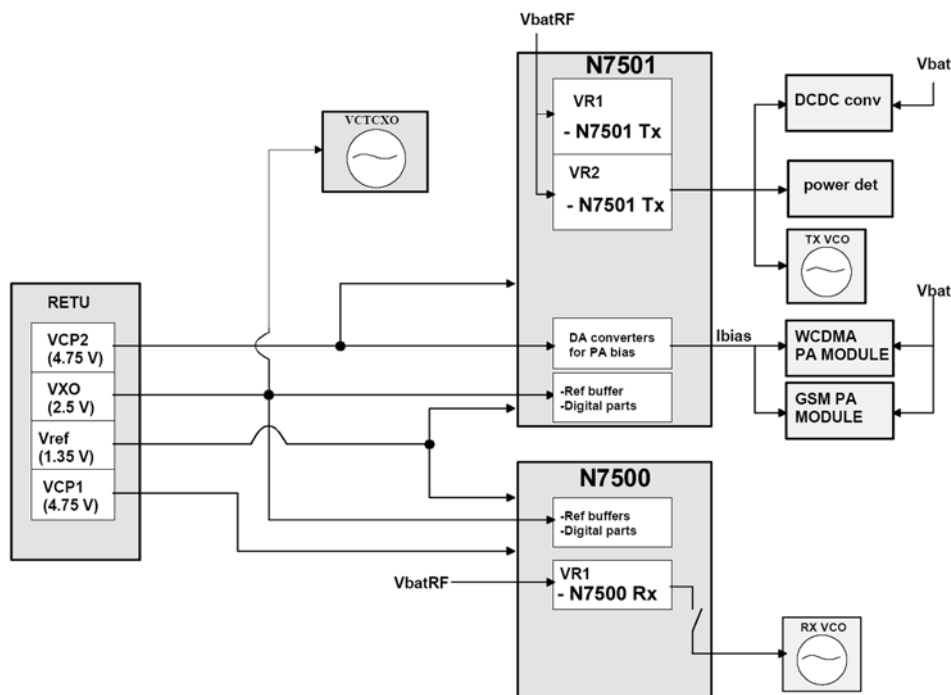


Figure 107 RF supply connections from the BB mixed mode ASIC

Nokia Customer Care

10 — Schematics

(This page left intentionally blank.)

Table of Contents


Schematics.....10-4

List of Figures

Figure 108 RM-78, 1mda_05a: System connector.....10-4
Figure 109 RM-78, 1mda_05a: Retu.....10-5
Figure 110 RM-78, 1mda_05a: Tahvo.....10-6
Figure 111 RM-78, 1mda_05a: RAP3G, memories, mini SD card.....10-7
Figure 112 RM-78, 1mda_05a: Camera, B&B connectors, keyboard.....10-8
Figure 113 RM-78, 1mda_05a: FM & BT module.....10-9
Figure 114 RM-78, 1mda_05a: RF-part.....10-10
Figure 115 RM-78, 1mda_05a: Signal overview.....10-11
Figure 116 RM-78, 1mda_05a: Component finder.....10-12

■ Schematics

System connector

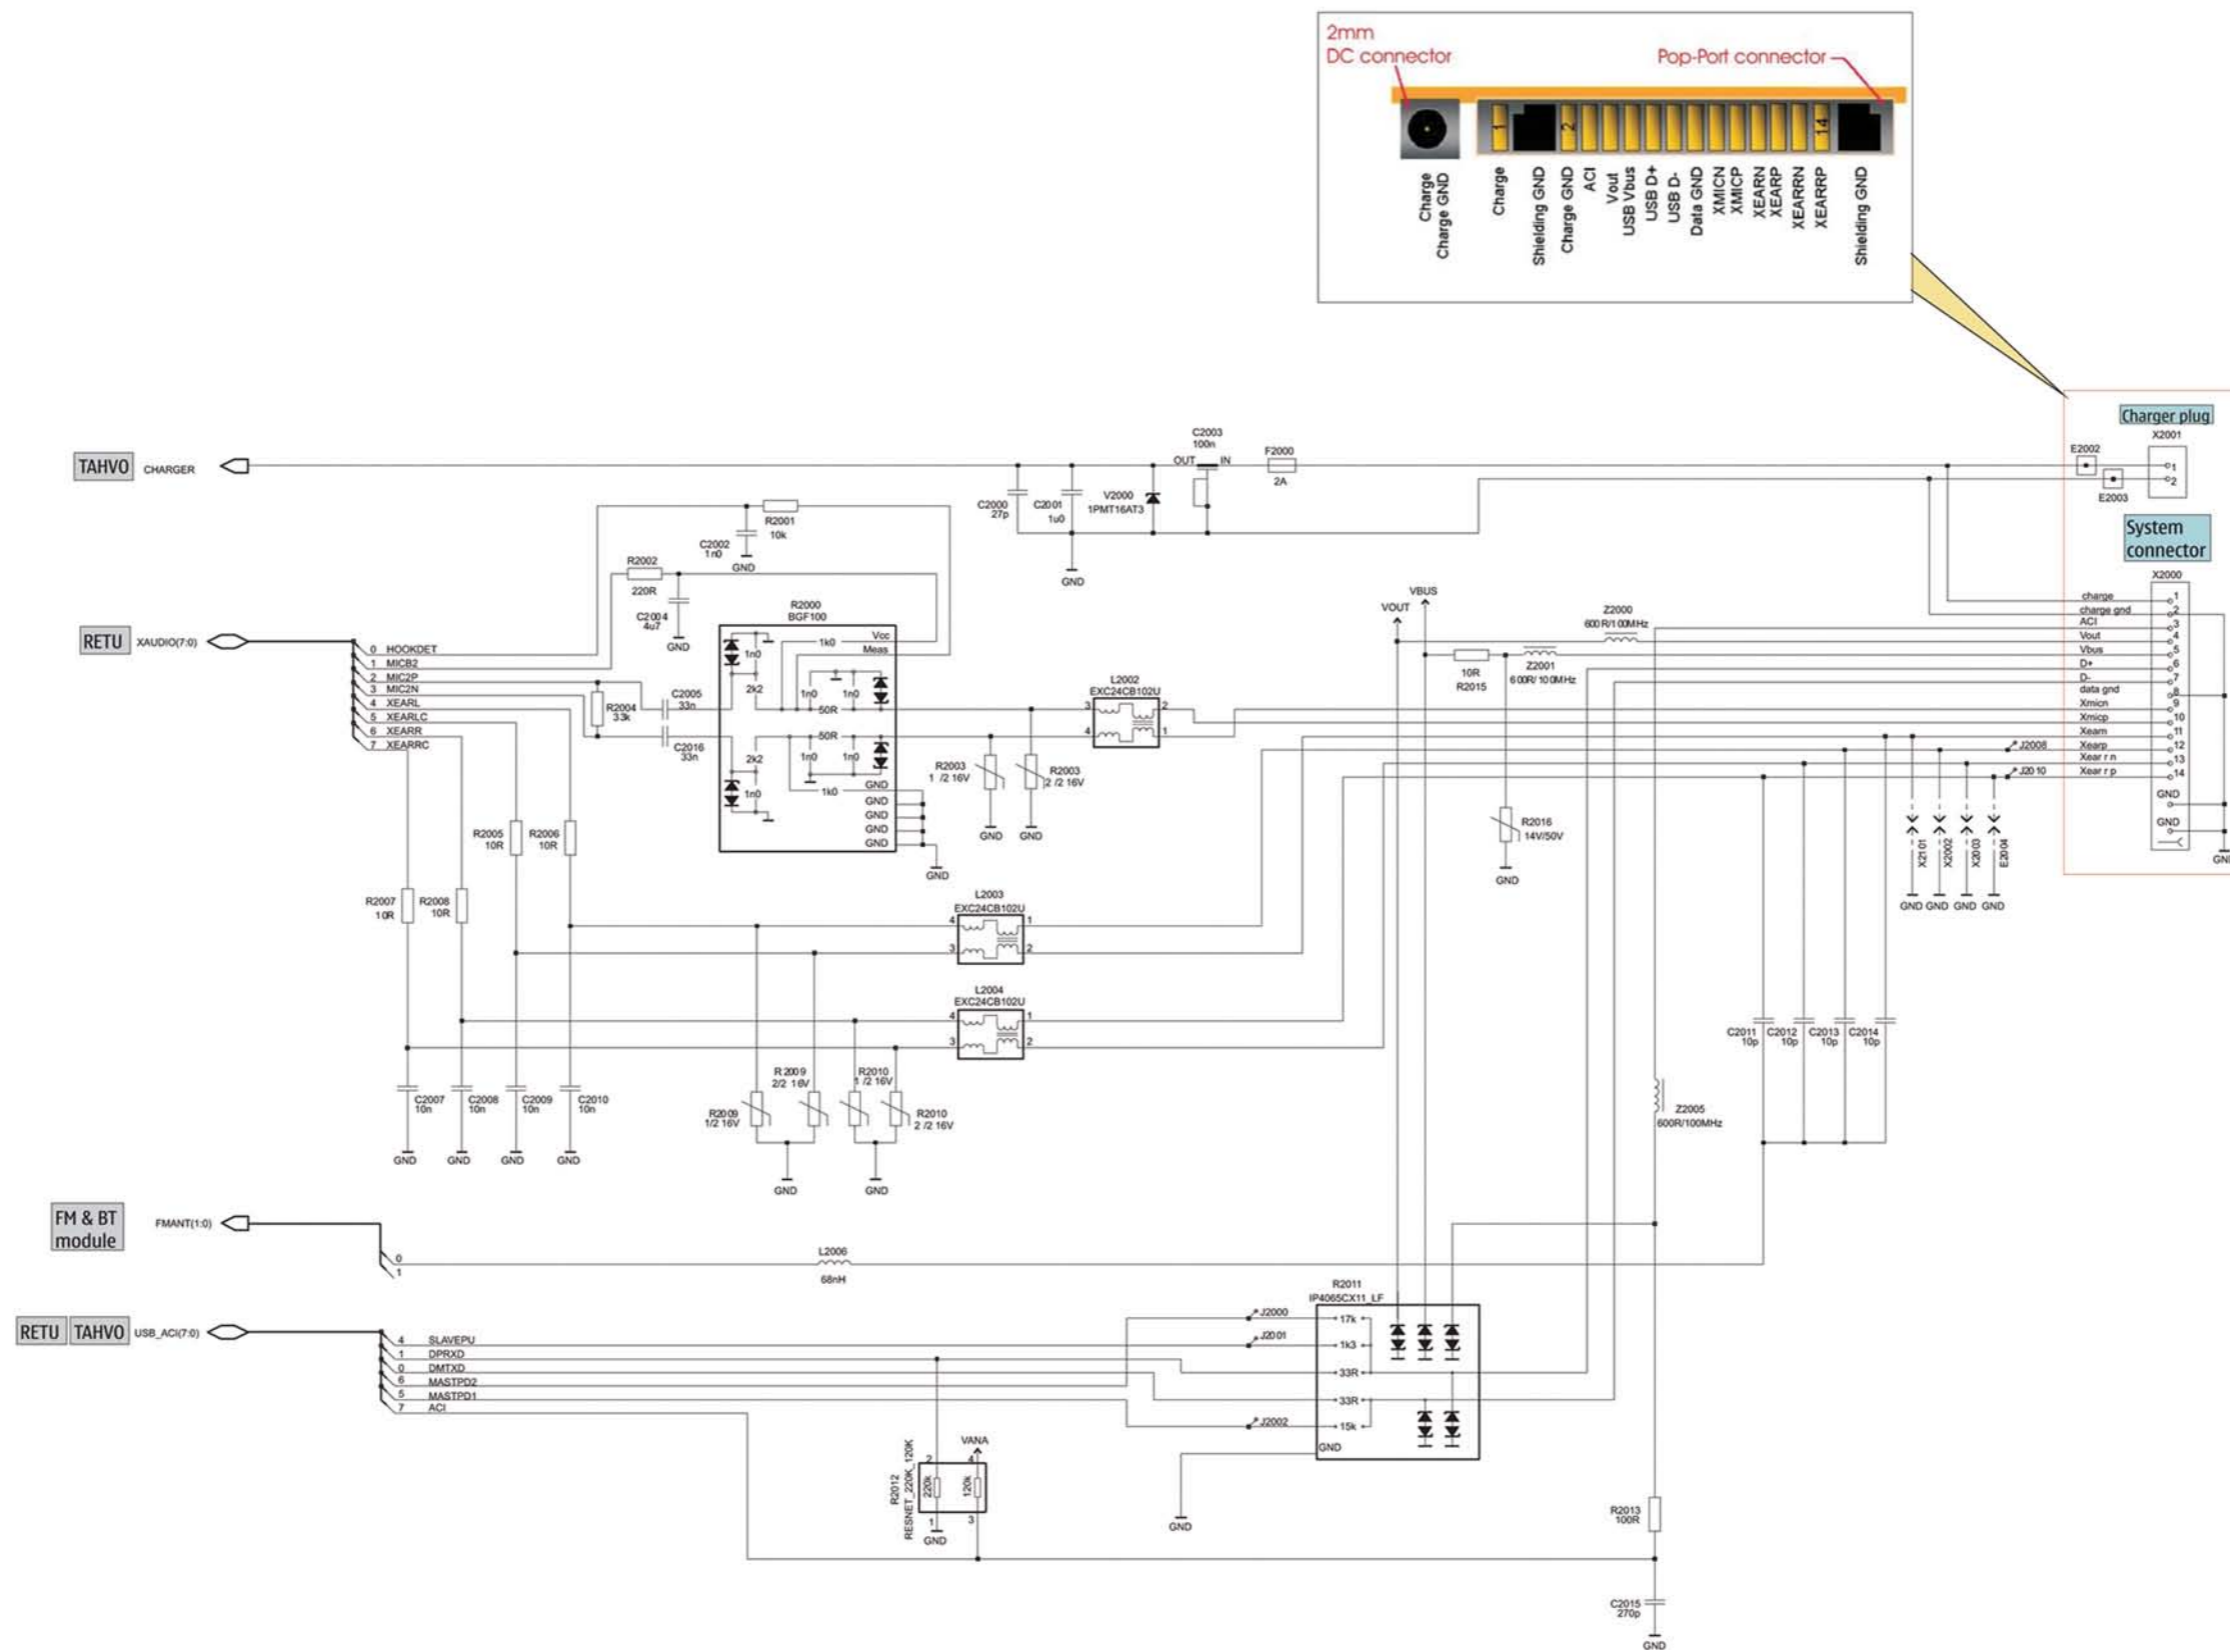

Retu

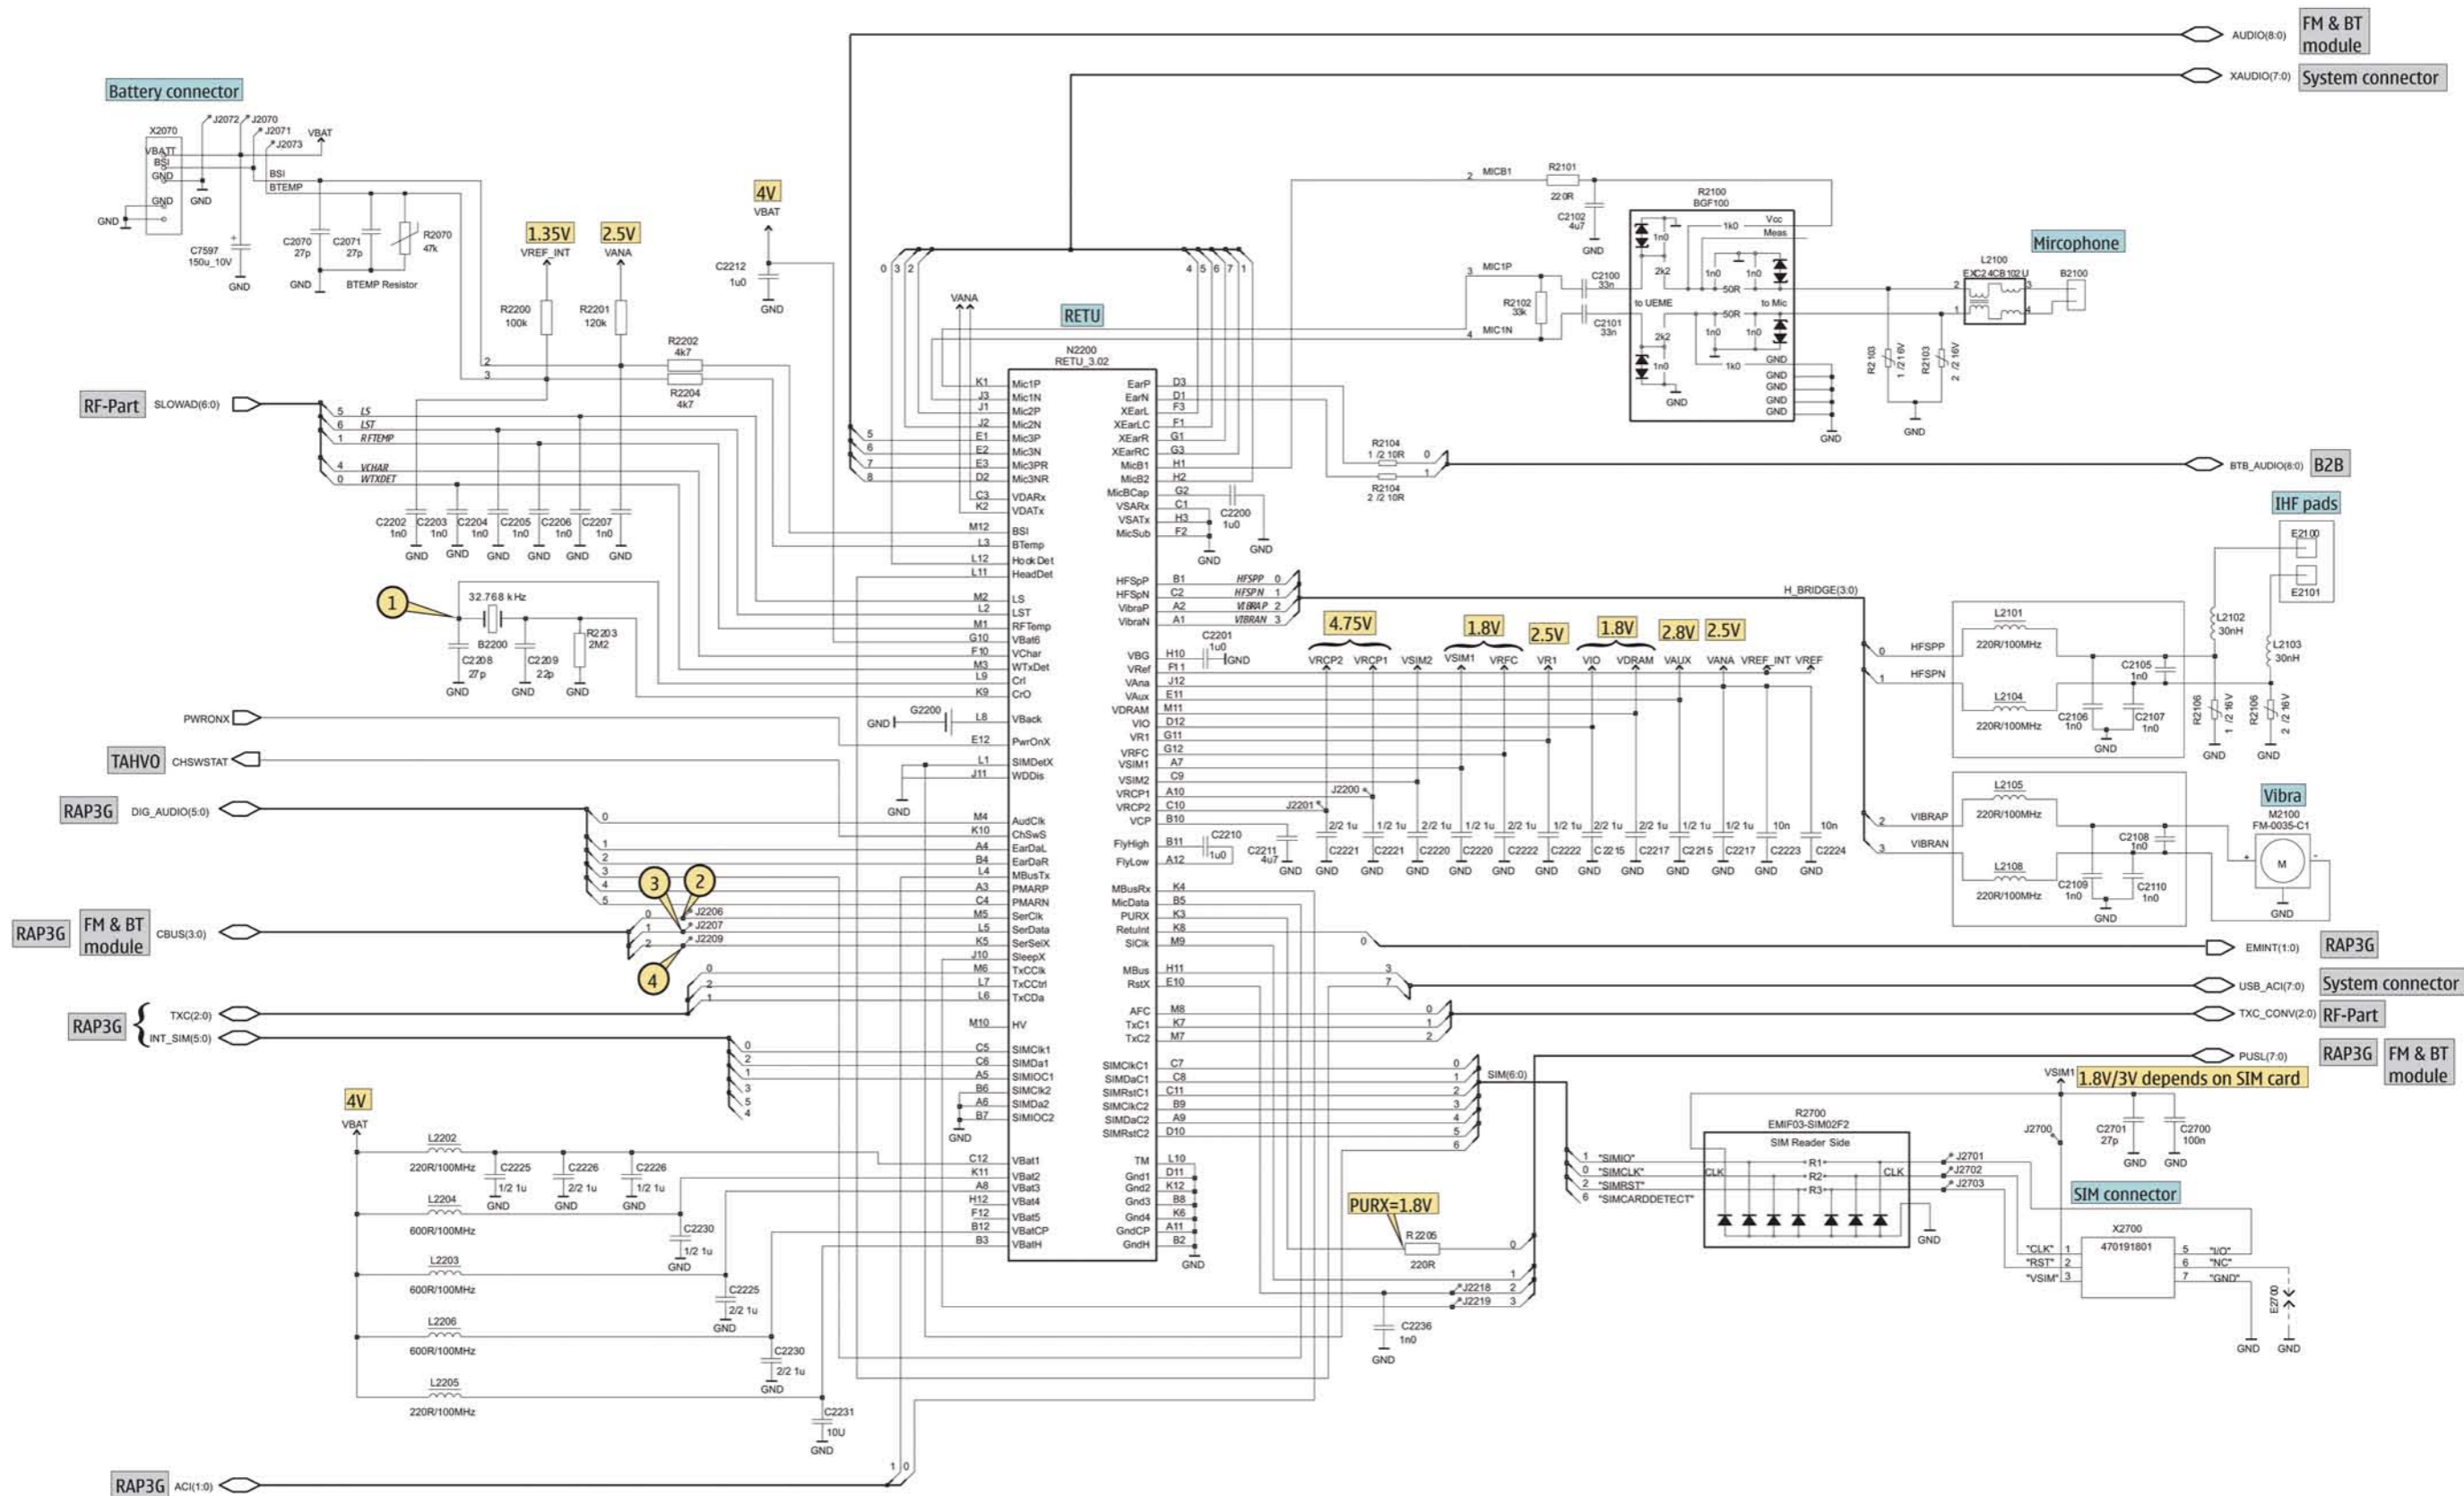


Figure 109 RM-78, 1mda_05a: Retu

Tahvo

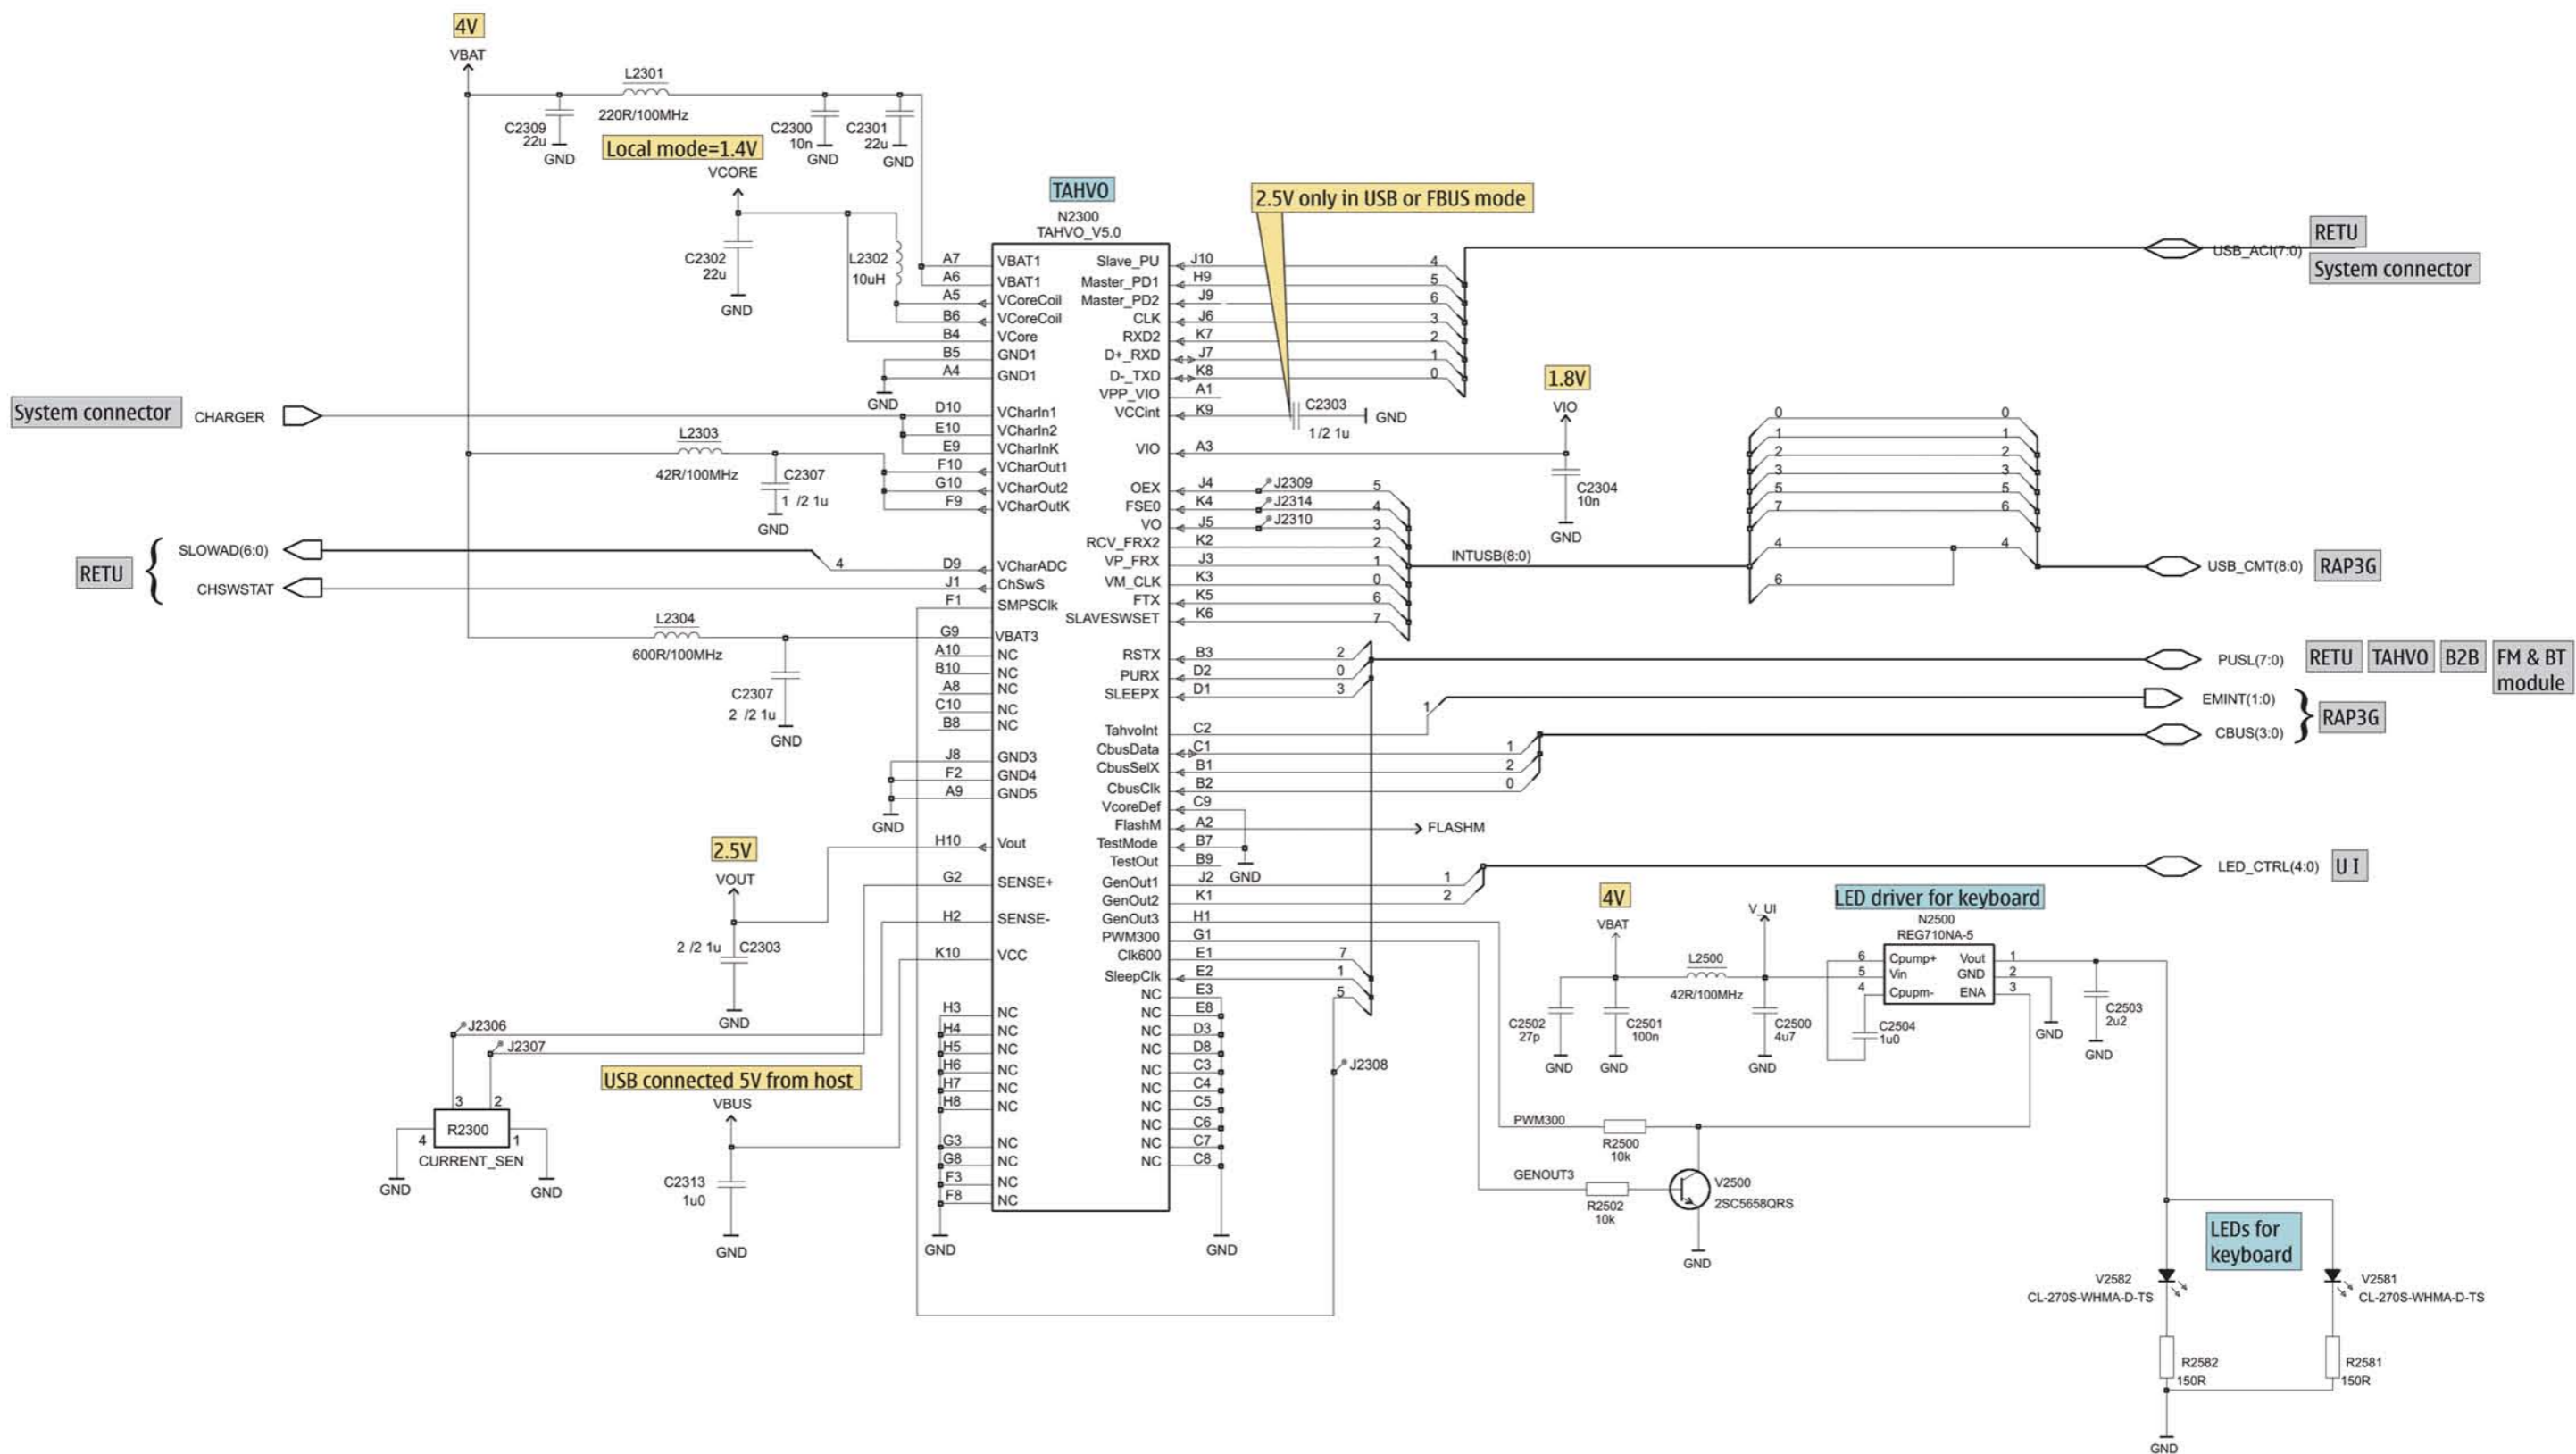


Figure 110 RM-78, 1mda_05a: Tahvo

RAP3G, memories, mini SD card

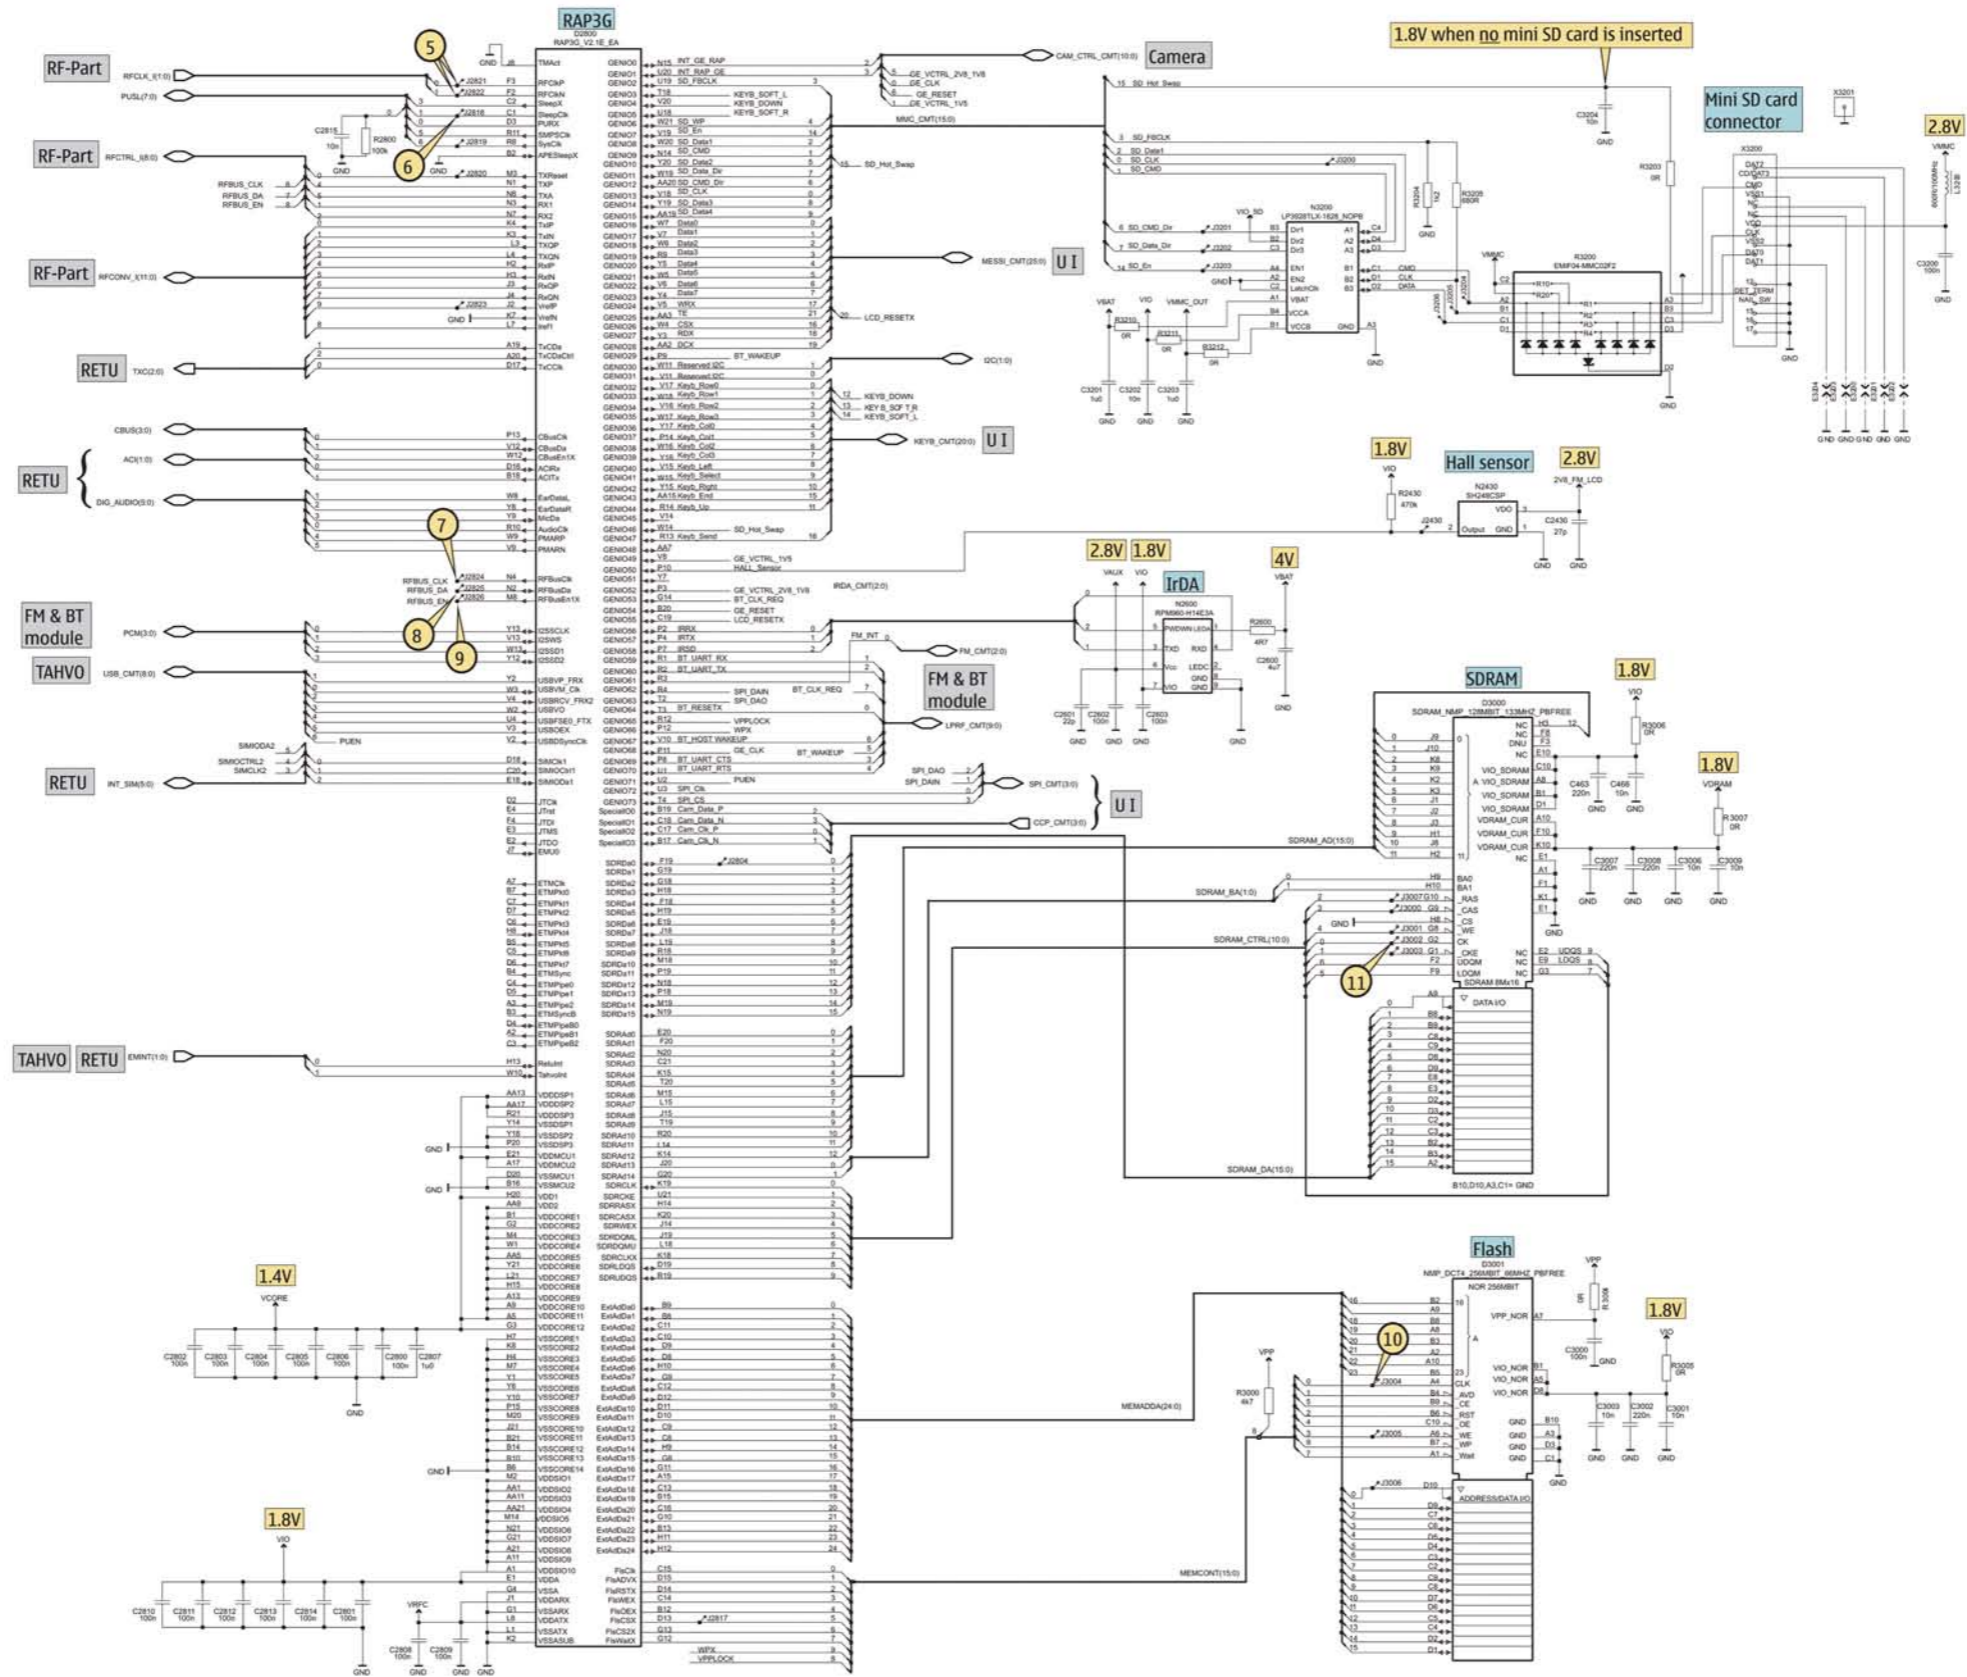


Figure 111 RM-78, 1mda_05a: RAP3G, memories, mini SD card

Camera, B&B connectors, keyboard

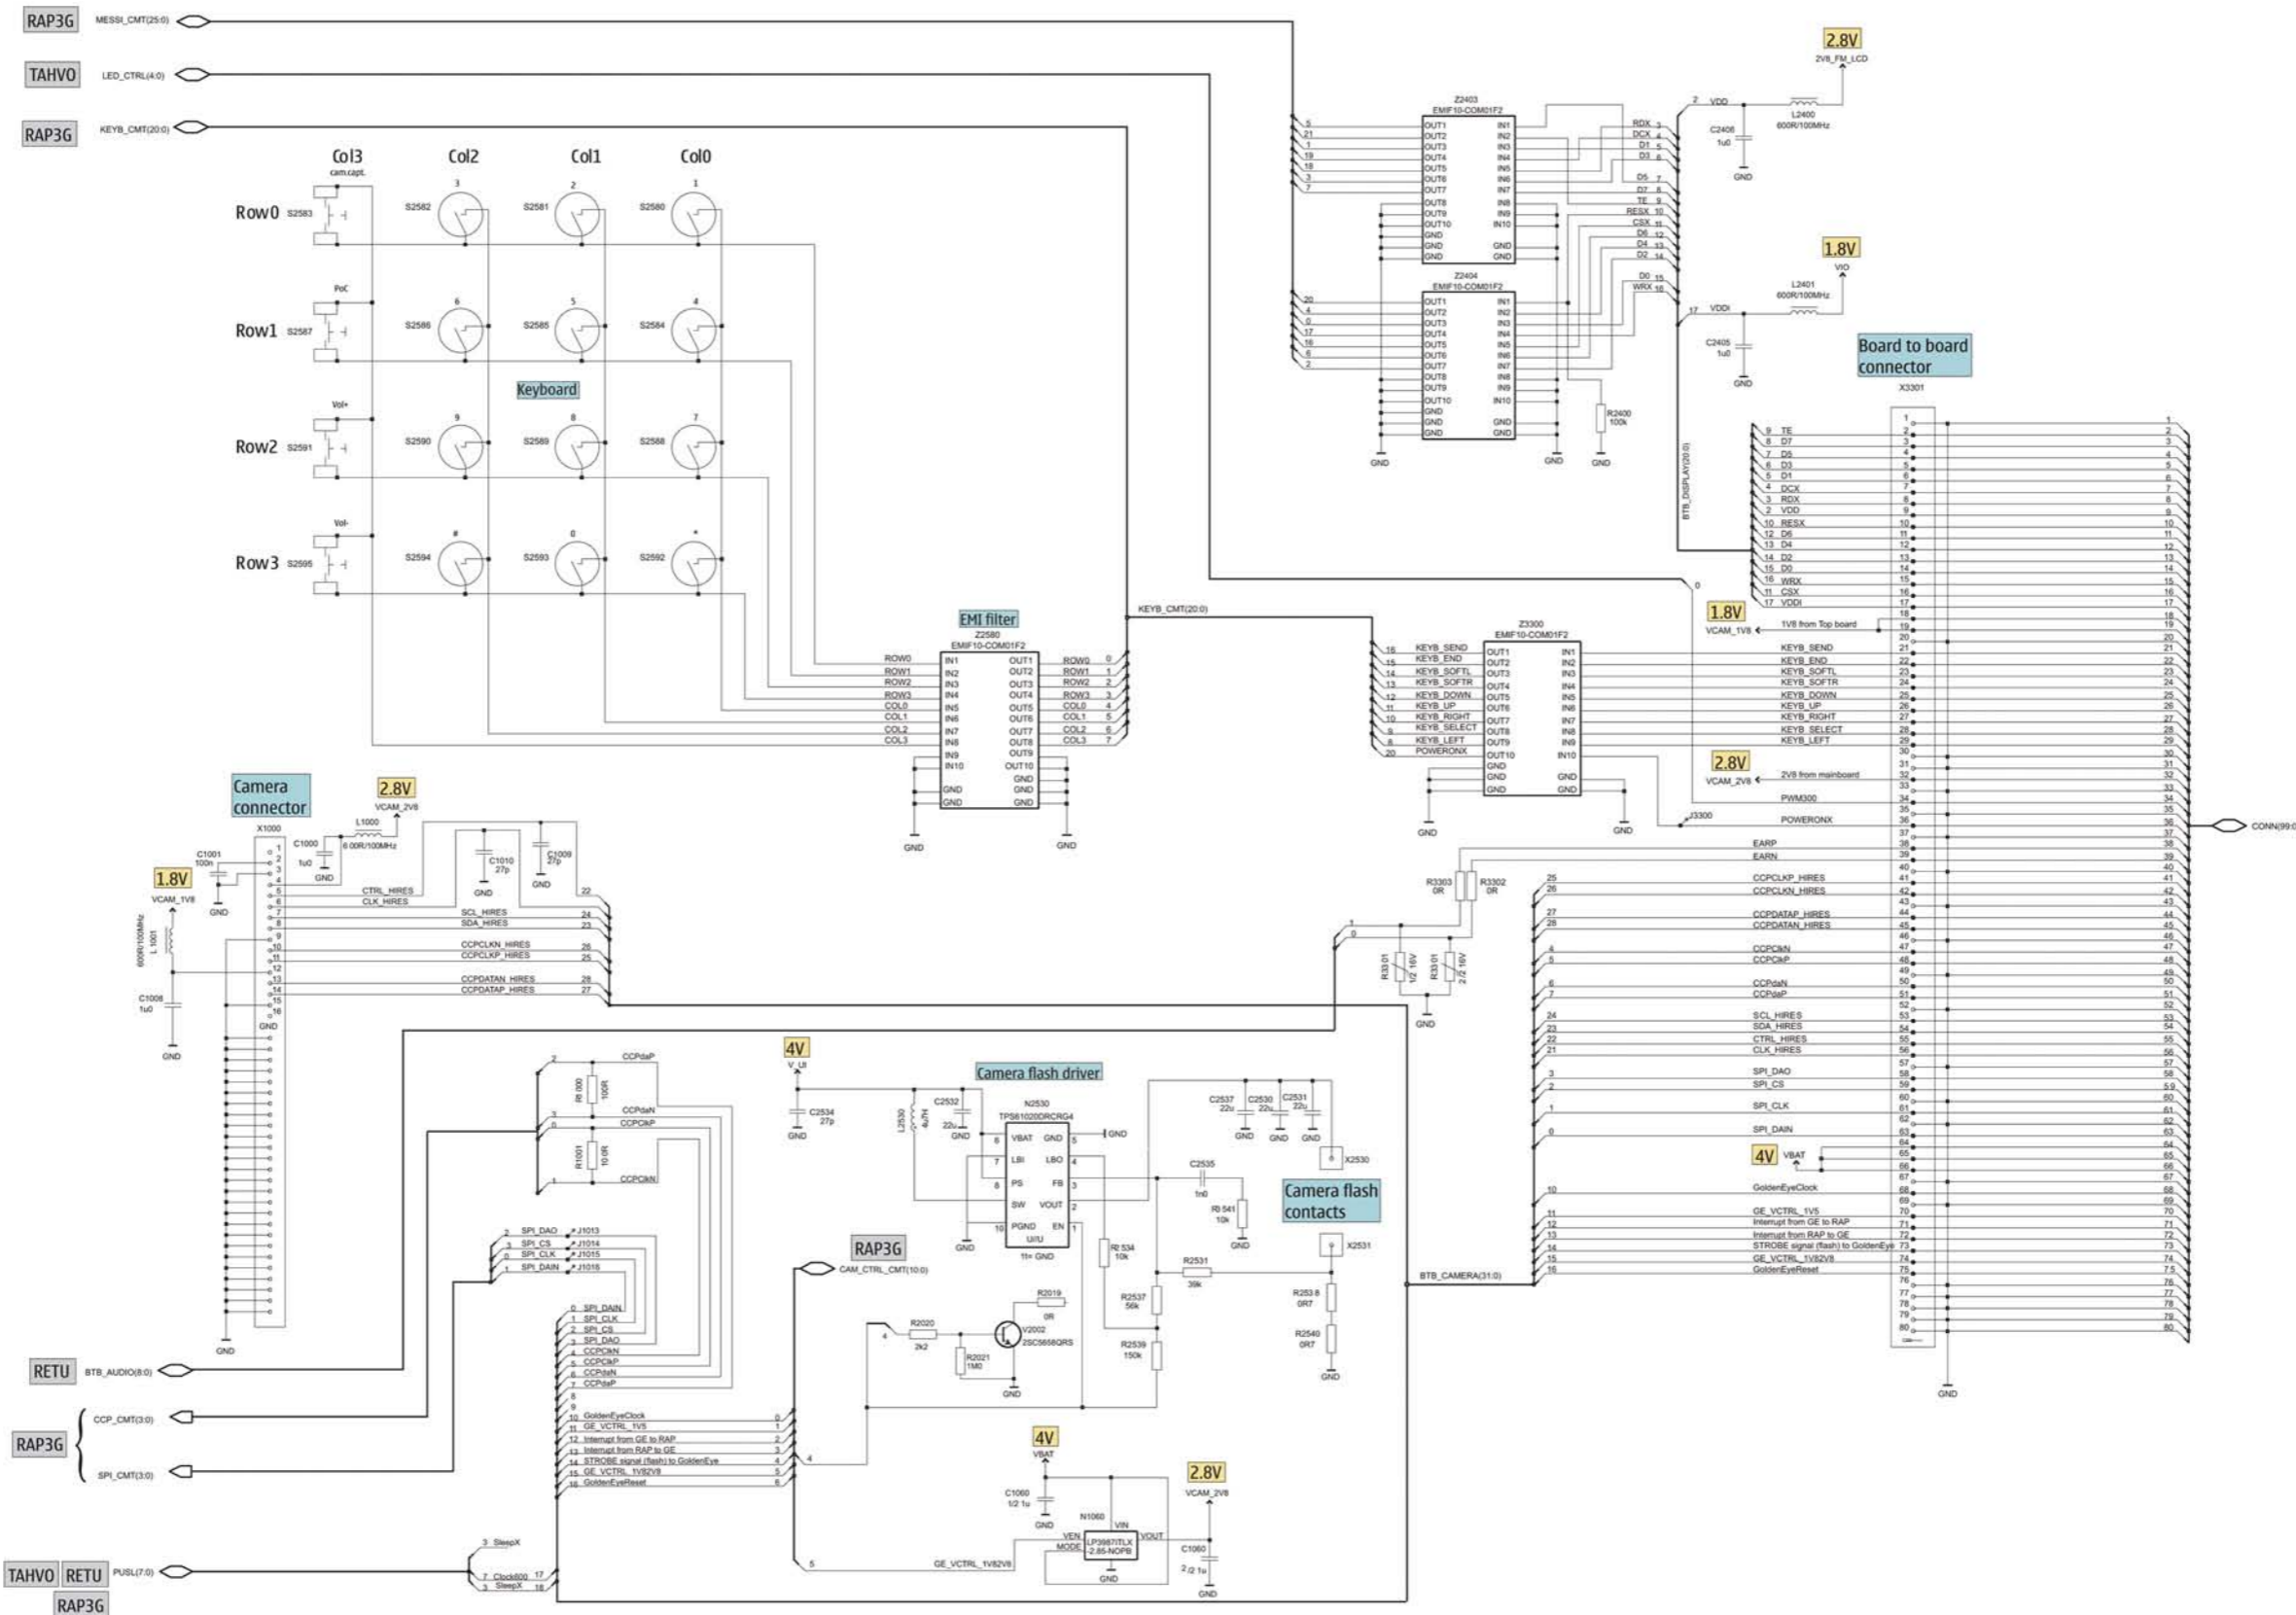


Figure 112 RM-78, 1mda_05a: Camera, B&B connectors, keyboard

FM & BT module

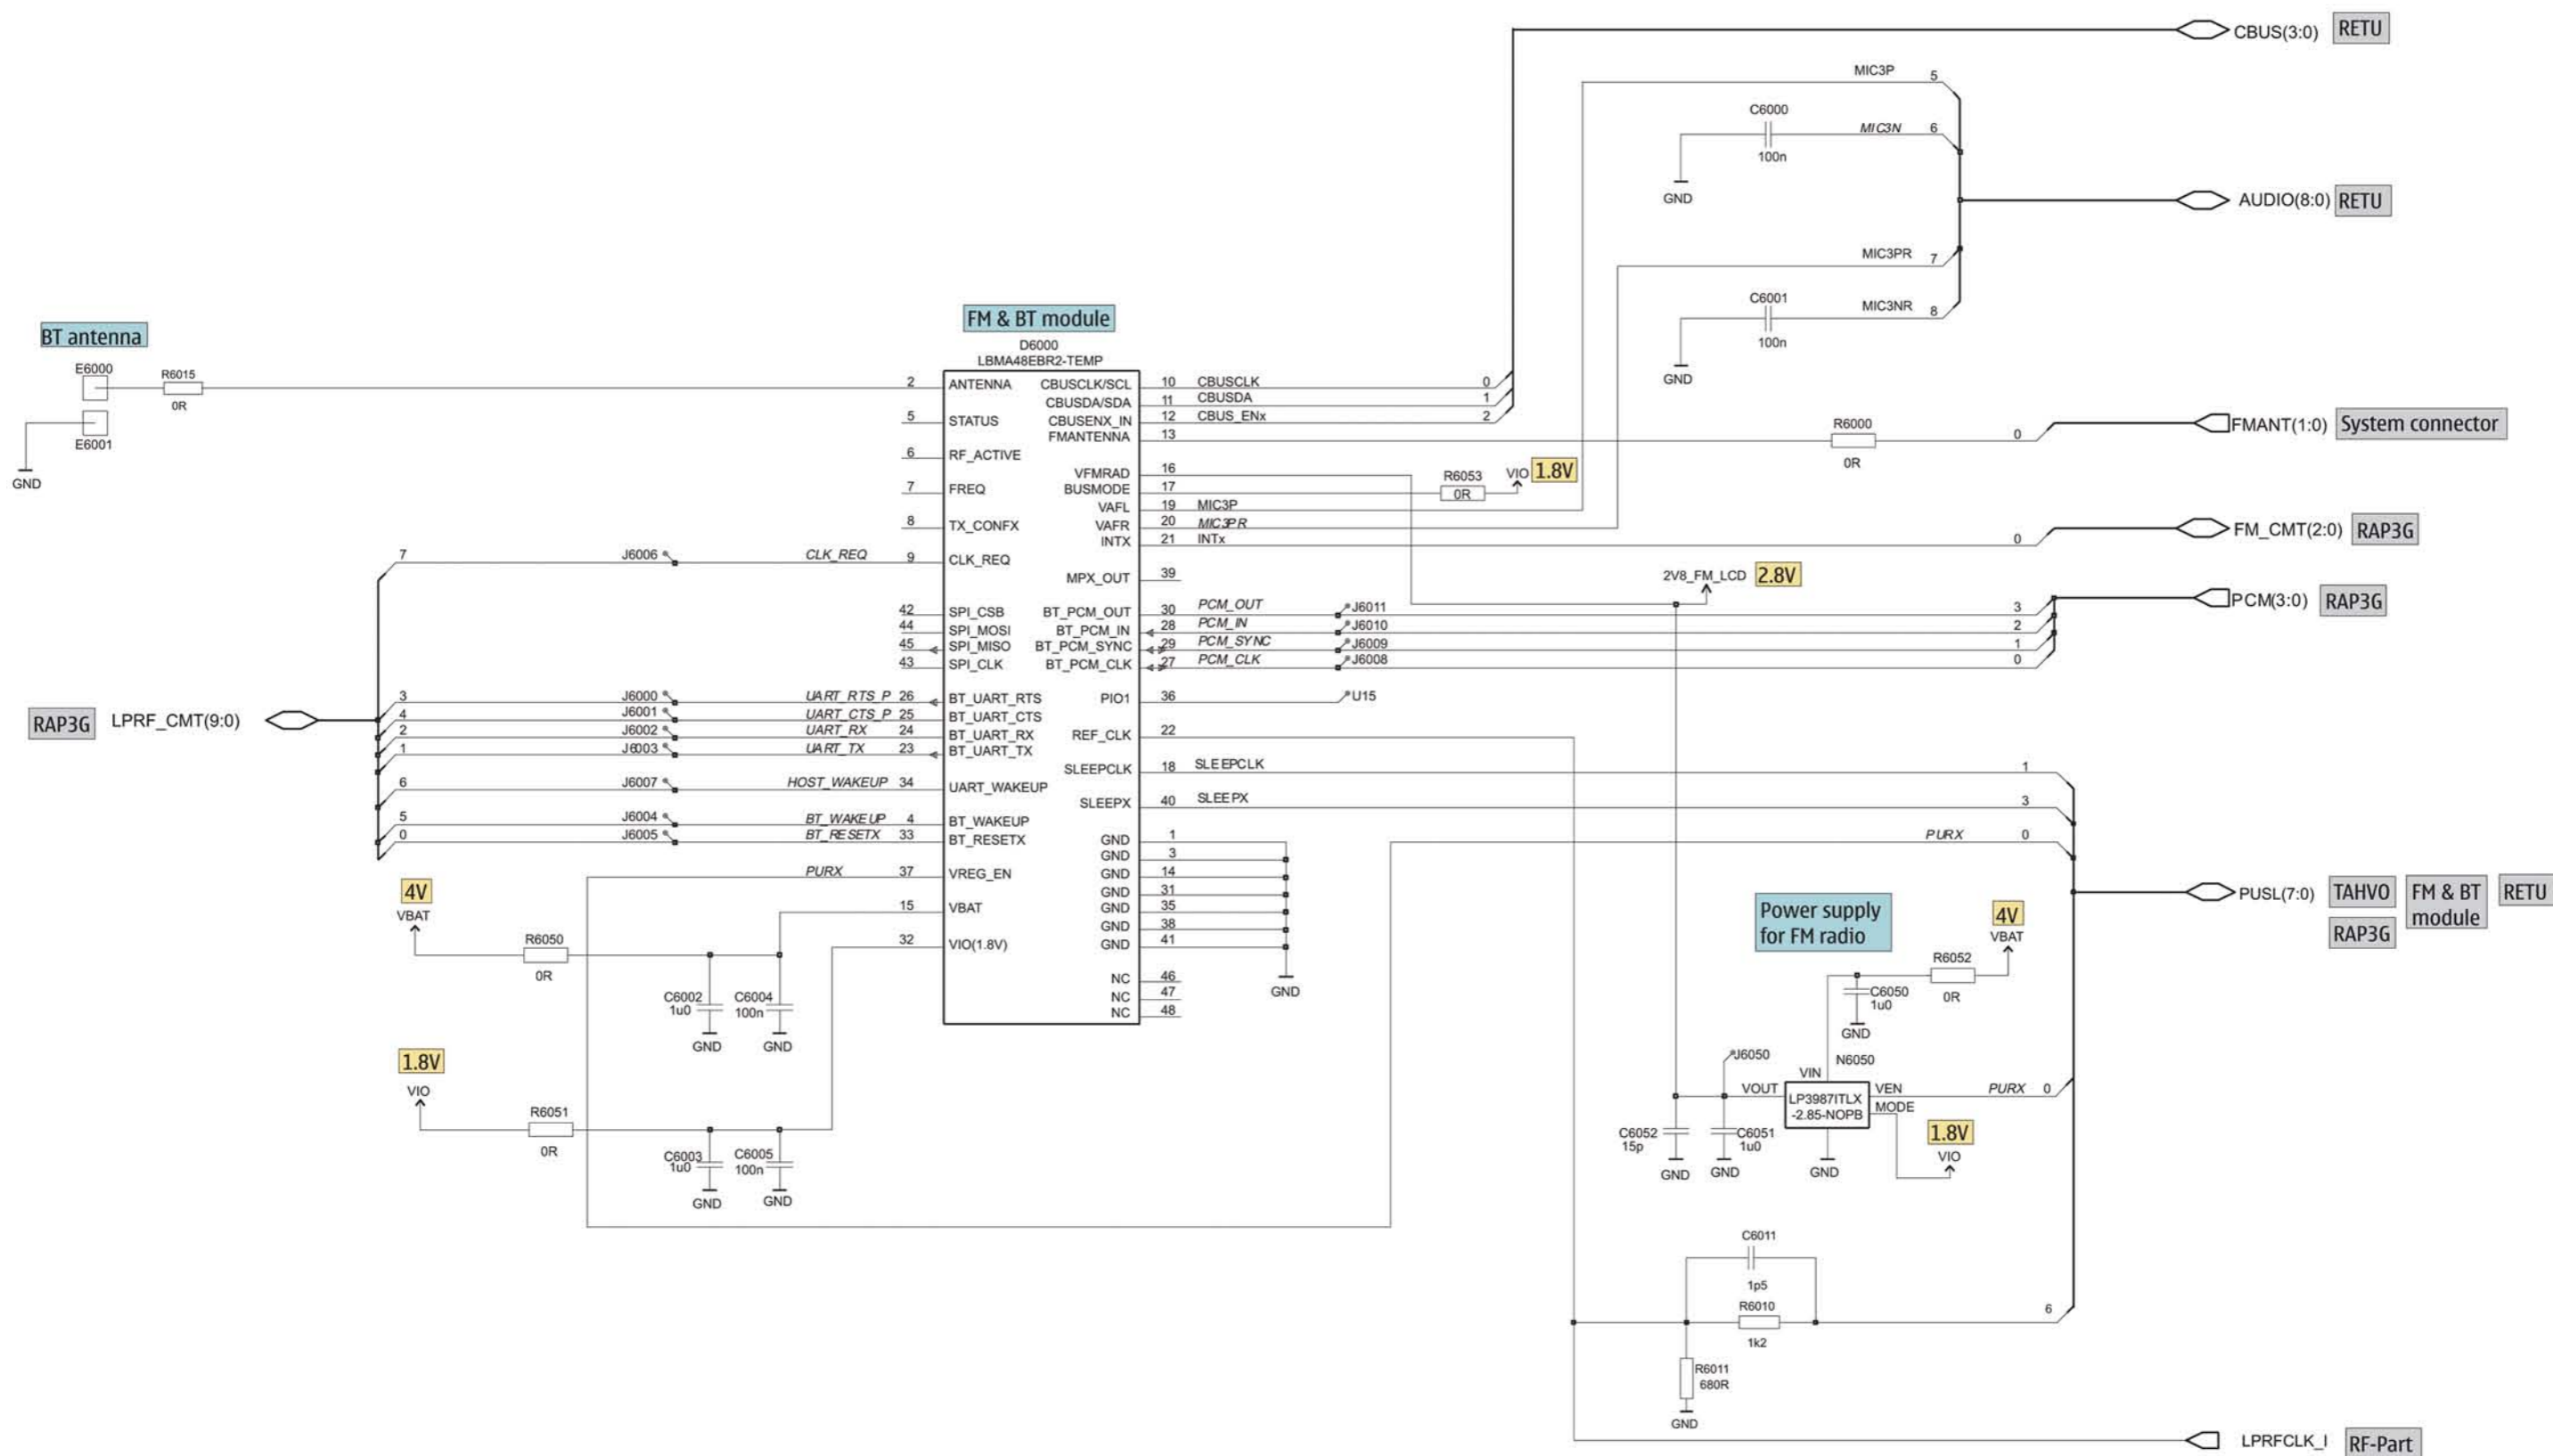


Figure 113 RM-78, 1mda_05a: FM & BT module

RF-part

Band	Channel	RX	VCO	VC	TX	VCO	VC
GSM 850	190	881.6MHz	3526.4MHz		836.6MHz	3364.6MHz	
GSM 900	37	942.4MHz	3769.6MHz	~1.33V	897.4MHz	3589.6MHz	~1.70V
GSM 1800	700	1842.8MHz	3685.6MHz	~0.98V	1747.8MHz	3495.6MHz	~1.23V
GSM 1900	661	1960MHz	3920.0MHz	~1.93V	1880MHz	3760.0MHz	~2.53V
WCDMA	10700	2140MHz	4280.0MHz	~3.30V	1950MHz	3900.0MHz	~3.17V

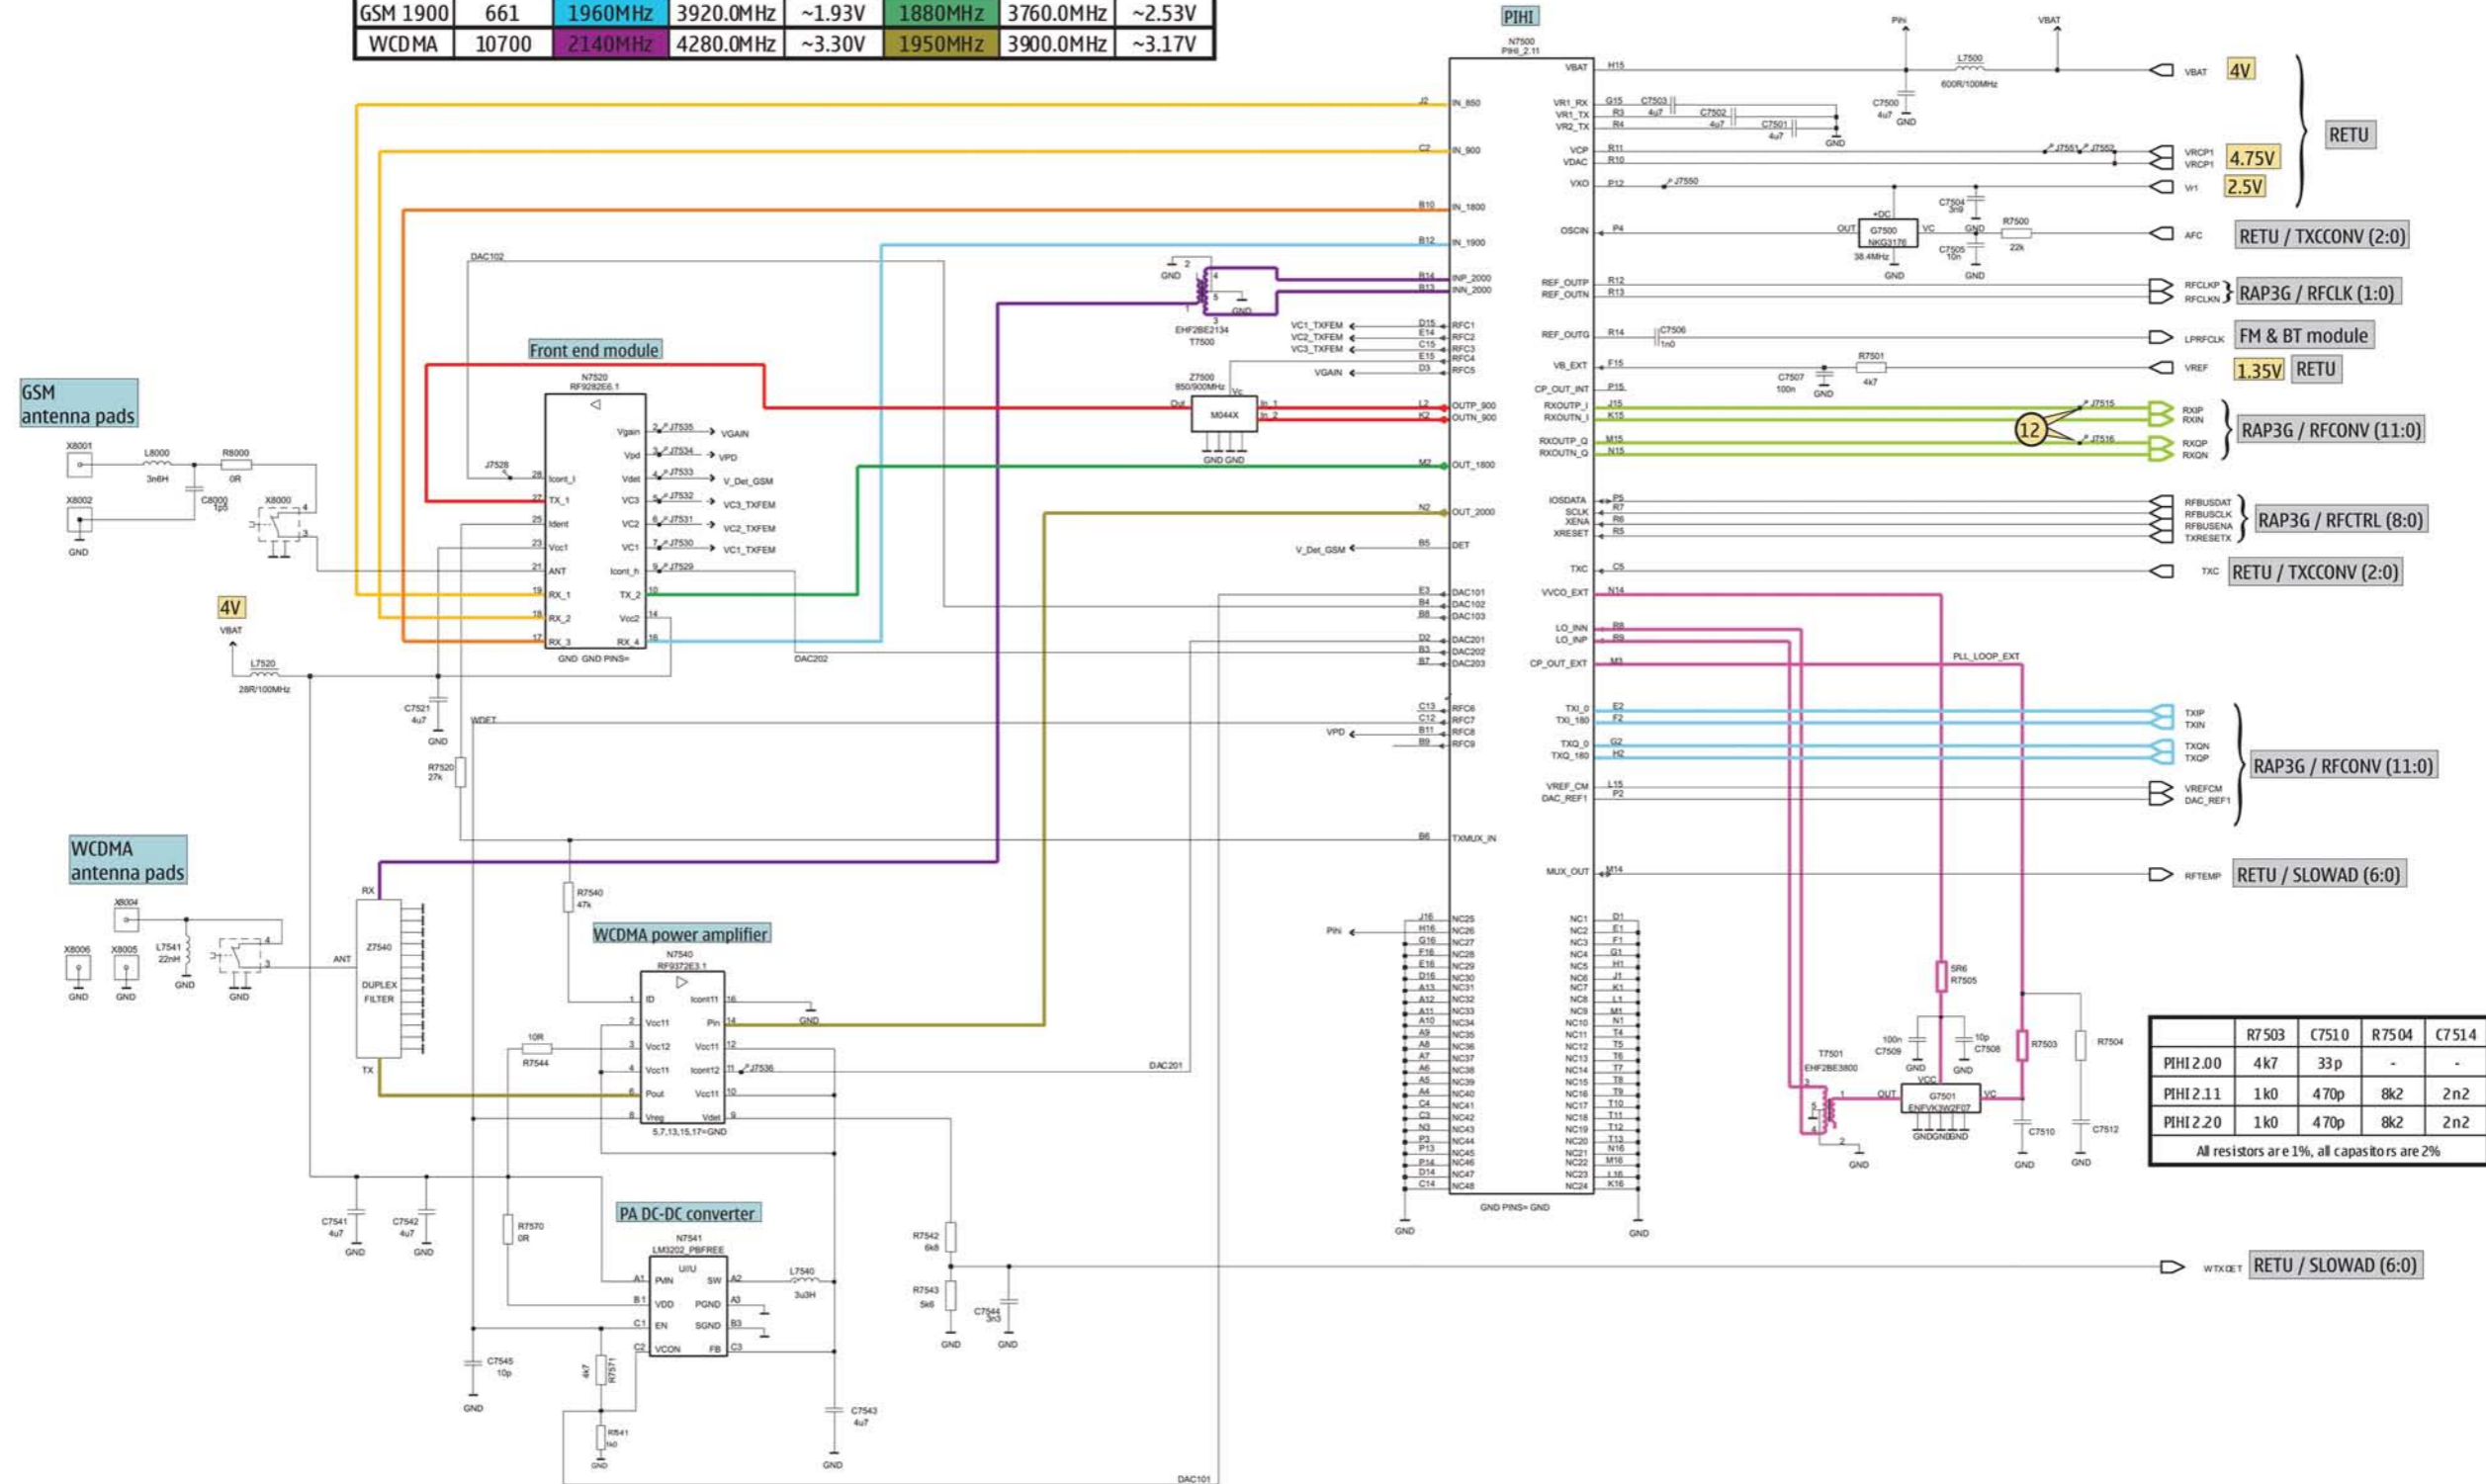


Figure 114 RM-78, 1mda_05a: RF-part

Signal overview

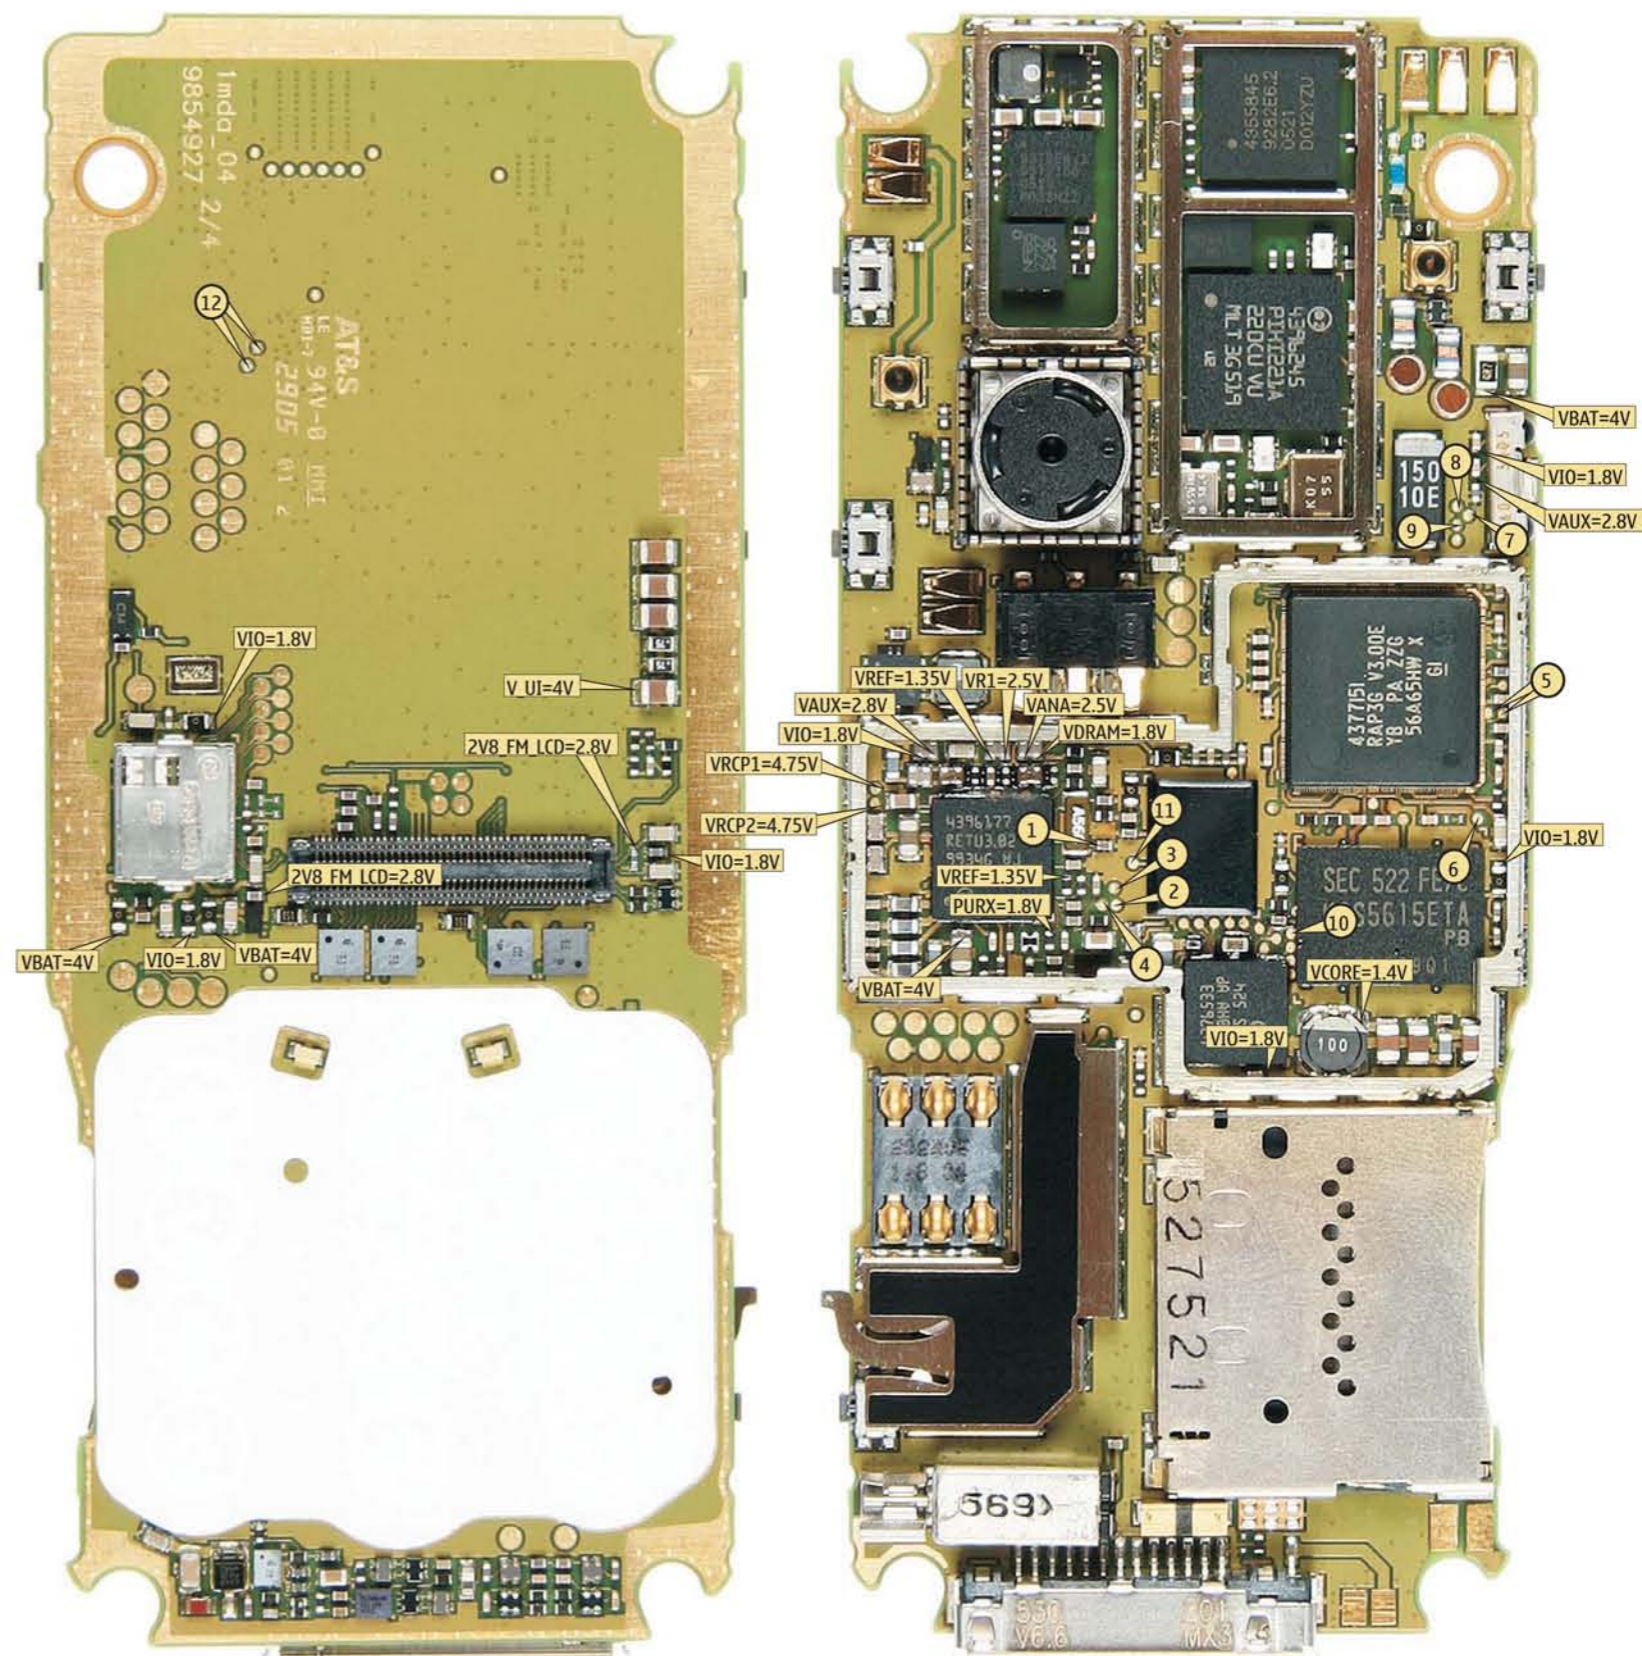
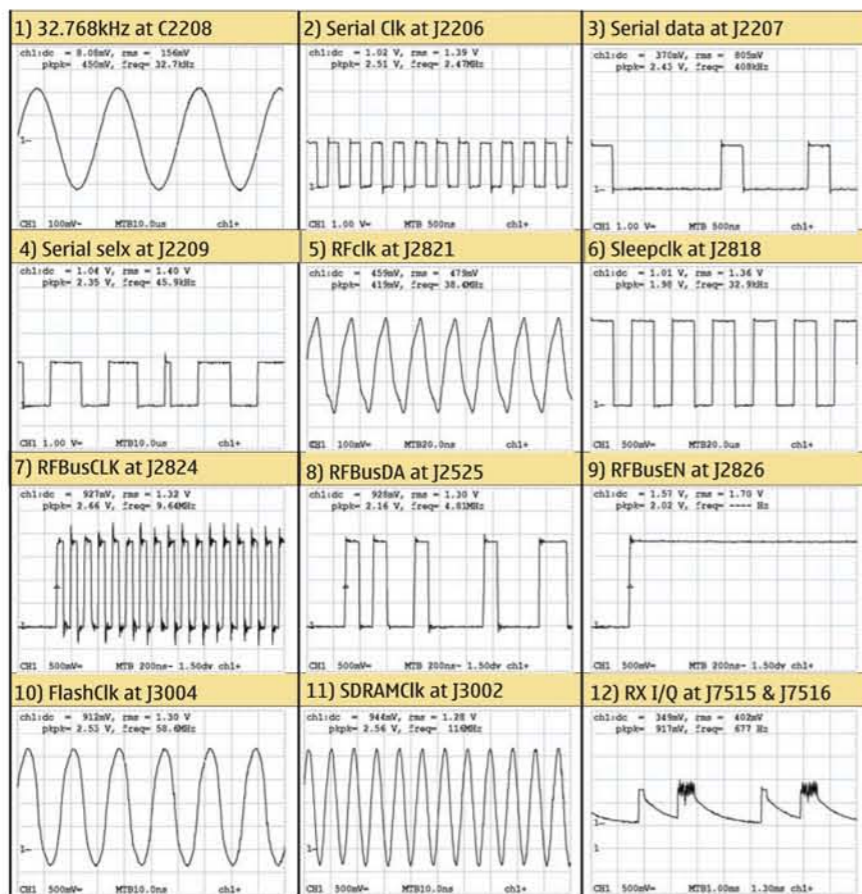


Figure 115 RM-78, 1mda_05a: Signal overview

Component finder

B	C2236	K3	C463	J5	J2070	M5	J3204	C3	L7520	S5	R2532	L8	S2591	Q1	
B2100	B5	C2300	H8	C466	J5	J2071	M5	J3205	C3	L7540	S3	R2534	K8	S2592	C2
B2200	J4	C2301	H9	C6000	J3	J2072	L5	J3206	D4	L7541	Q2	R2536	J8	S2593	C5
C	C2302	H8	C6001	K3	J2073	E4	J3300	H7	L7543	P5	R2537	K8	S2594	C7	
C1000	N2	C2303	I5	C6002	I2	J2200	K2	J6000	K3	L8000	R8	R2538	L8	S2595	N1
C1001	N2	C2304	G6	C6003	K2	J2201	K2	J6001	K3	M	R2539	K8	T		
C1008	M5	C2307	I5	C6004	I2	J2206	J4	J6002	K3	M2100	B3	R2540	L8	T7500	Q7
C1009	O2	C2309	H8	C6005	K2	J2207	I4	J6003	K3	N	R2581	I4	T7501	O6	
C1010	O2	C2313	I6	C6006	J3	J2209	I4	J6004	I2	N1060	O2	R2582	I6	V	
C1060	N2	C2405	J8	C6015	B6	J2218	K3	J6005	H2	N2200	J3	R2600	P9	V2000	B3
C2000	A3	C2406	J8	C6050	I3	J2219	K3	J6006	H2	N2300	H6	R2700	H4	V2002	C3
C2001	B2	C2430	L2	C6051	J3	J2306	I6	J6007	L2	N2430	M2	R2800	K9	V2500	F3
C2002	B5	C2500	F4	C6052	I3	J2307	I6	J6008	L3	N2500	F4	R3000	I6	V2533	K8
C2003	B2	C2501	F4	C7500	P7	J2308	I6	J6009	L3	N2530	L2	R3004	J9	V2581	H4
C2004	B4	C2502	E6	C7501	O6	J2309	I6	J6010	L3	N2600	N9	R3005	J6	V2582	H6
C2005	A4	C2503	G4	C7502	O5	J2310	I6	J6011	L3	N3200	D3	R3006	K5	X	
C2007	A7	C2504	G4	C7503	P7	J2314	I6	J6020	H3	N6050	I3	R3007	K5	X1000	O4
C2008	A7	C2530	M8	C7504	N6	J2430	M2	J6021	H3	N7500	P6	R3200	D3	X2000	A5
C2009	A6	C2531	M8	C7505	N6	J2700	H4	J6050	I3	N7520	S6	R3203	G5	X2002	A8
C2010	A6	C2532	L8	C7506	O7	J2701	H3	J7515	P3	N7540	R4	R3204	D4	X2003	A7
C2011	B7	C2533	K8	C7507	Q7	J2702	G4	J7516	P3	N7541	S4	R3205	D4	X2061	L3
C2012	B7	C2534	L2	C7508	N7	J2703	H4	J7528	R5	R	R3210	E3	X2070	M4	
C2013	B6	C2535	K8	C7509	N7	J2804	K6	J7529	R3	R1000	J7	R3211	E3	X2530	M2
C2014	B6	C2536	K8	C7510	N6	J2817	K7	J7530	R3	R1001	J7	R3212	D3	X2531	M2
C2015	A3	C2537	M8	C7512	N6	J2818	J9	J7531	R4	R2000	A4	R3301	I8	X2700	F2
C2016	A4	C2600	P9	C7514	Q6	J2820	N8	J7532	R4	R2001	A5	R3302	I8	X3200	E7
C2070	M4	C2601	N9	C7515	Q6	J2821	L9	J7533	R4	R2002	B4	R3303	I8	X3301	J5
C2071	E4	C2602	N9	C7516	N7	J2822	L9	J7534	R4	R2003	A5	R3541	K8	X8000	Q8
C2100	I4	C2603	O9	C7521	S5	J2823	L9	J7535	R4	R2004	A4	R6000	I2	X8001	S8
C2101	H4	C2700	H4	C7541	S4	J2824	N9	J7536	R6	R2005	A6	R6050	I2	X8002	S8
C2102	I4	C2701	H4	C7542	S4	J2825	N8	J7550	O7	R2006	A6	R6051	K2	X8003	O2
C2105	I2	C2800	L6	C7543	S3	J2826	N8	J7553	P4	R2007	A7	R6052	I3	X8004	R2
C2106	I2	C2801	K1	C7544	Q4	J3000	I6	L	R2008	A7	R6053	I2	X8005	R2	
C2107	I2	C2802	L6	C7545	Q4	J3001	I6	L1000	N2	R2009	A6	R7500	N6	X8006	S9
C2108	C4	C2803	L6	C7547	O5	J3002	J5	L1001	M5	R2010	A7	R7501	Q7	Z	
C2109	I2	C2804	M9	C7597	N8	J3003	L6	L2002	A5	R2011	B3	R7503	N6	Z2000	A4
C2110	I2	C2805	J8	C8000	Q8	J3004	I6	L2003	B6	R2012	A4	R7504	N6	Z2001	B4
C2200	I2	C2806	J7	D	J3005	I6	L2004	B7	R2013	A3	R7505	O7	Z2005	B4	
C2201	K4	C2807	J9	D2530	L2	J3006	J8	L2006	A6	R2015	B4	R7520	R5	Z2403	I4
C2202	J3	C2808	L9	D2800	L7	J3007	J6	L2100	B5	R2016	B3	R7521	R7	Z2404	I5
C2203	J3	C2809	K9	D3000	J5	J3100	N2	L2101	I2	R2019	C3	R7522	R5	Z2580	I7
C2204	I4	C2810	M9	D3001	I8	J3101	O2	L2102	P8	R2020	D3	R7540	R3	Z3300	I6
C2205	I4	C2811	L6	D6000	J2	J3102	O2	L2103	P8	R2021	D3	R7541	S4	Z7500	Q5
C2206	I4	C2812	K6	F	J3103	O2	L2104	I2	R2070	E4	R7542	Q4	Z7540	Q3	
C2207	K4	C2813	L6	F2000	A2	J3104	N2	L2105	I2	R2100	I4	R7543	Q4		
C2208	J4	C2814	J8	G	J3105	N2	L2108	I2	R2101	I4	R7544	R3			
C2209	K4	C2815	K9	G2200	E2	J3110	N2	L2202	K2	R2102	I3	R7570	S4		
C2210	K2	C3000	J6	G7500	N5	J3111	N2	L2203	K3	R2103	B5	R7571	S4		
C2211	J2	C3001	I6	G7501	N7	J3112	N3	L2204	K3	R2104	I3	R8000	Q8		
C2212	K3	C3002	I9	J	J3113	N3	L2205	I2	R2106	P8	S				
C2215	K2	C3003	I9	J1013	J6	J3114	N3	L2206	K4	R2200	J4	S2580	G2		
C2217	K3	C3006	K6	J1014	K6	J3115	N3	L2301	H8	R2201	K4	S2581	G5		
C2220	J2	C3007	K6	J1015	J5	J3116	N3	L2302	H7	R2202	K4	S2582	G7		
C2221	J2	C3008	K6	J1016	K5	J3117	O3	L2303	I5	R2203	J4	S2583	C2		
C2222	K3	C3009	K5	J2000	I6	J3118	O2	L2304	I5	R2204	J4	S2584	F2		
C2223	I3	C3100	L9	J2001	I5	J3119	O3	L2400	J8	R2205	I4	S2585	F5		
C2224	I3	C3200	C3	J2002	I5	J3120	O2	L2401	J8	R2400	I4	S2586	F7		
C2225	K2	C3201	D3	J2008	B6	J3200	E4	L2500	F4	R2430	M2	S2587	Q9		
C2226	K2	C3202	E3	J2010	B7	J3201	D4	L2530	L3	R2500	F3	S2588	D2		
C2230	K3	C3203	D3	J2060	H2	J3202	D4	L3200	D3	R2502	E3	S2589	D5		
C2231	I3	C3204	G5	J2067	H5	J3203	E3	L7500	D7	R2531	K8	S2590	D7		

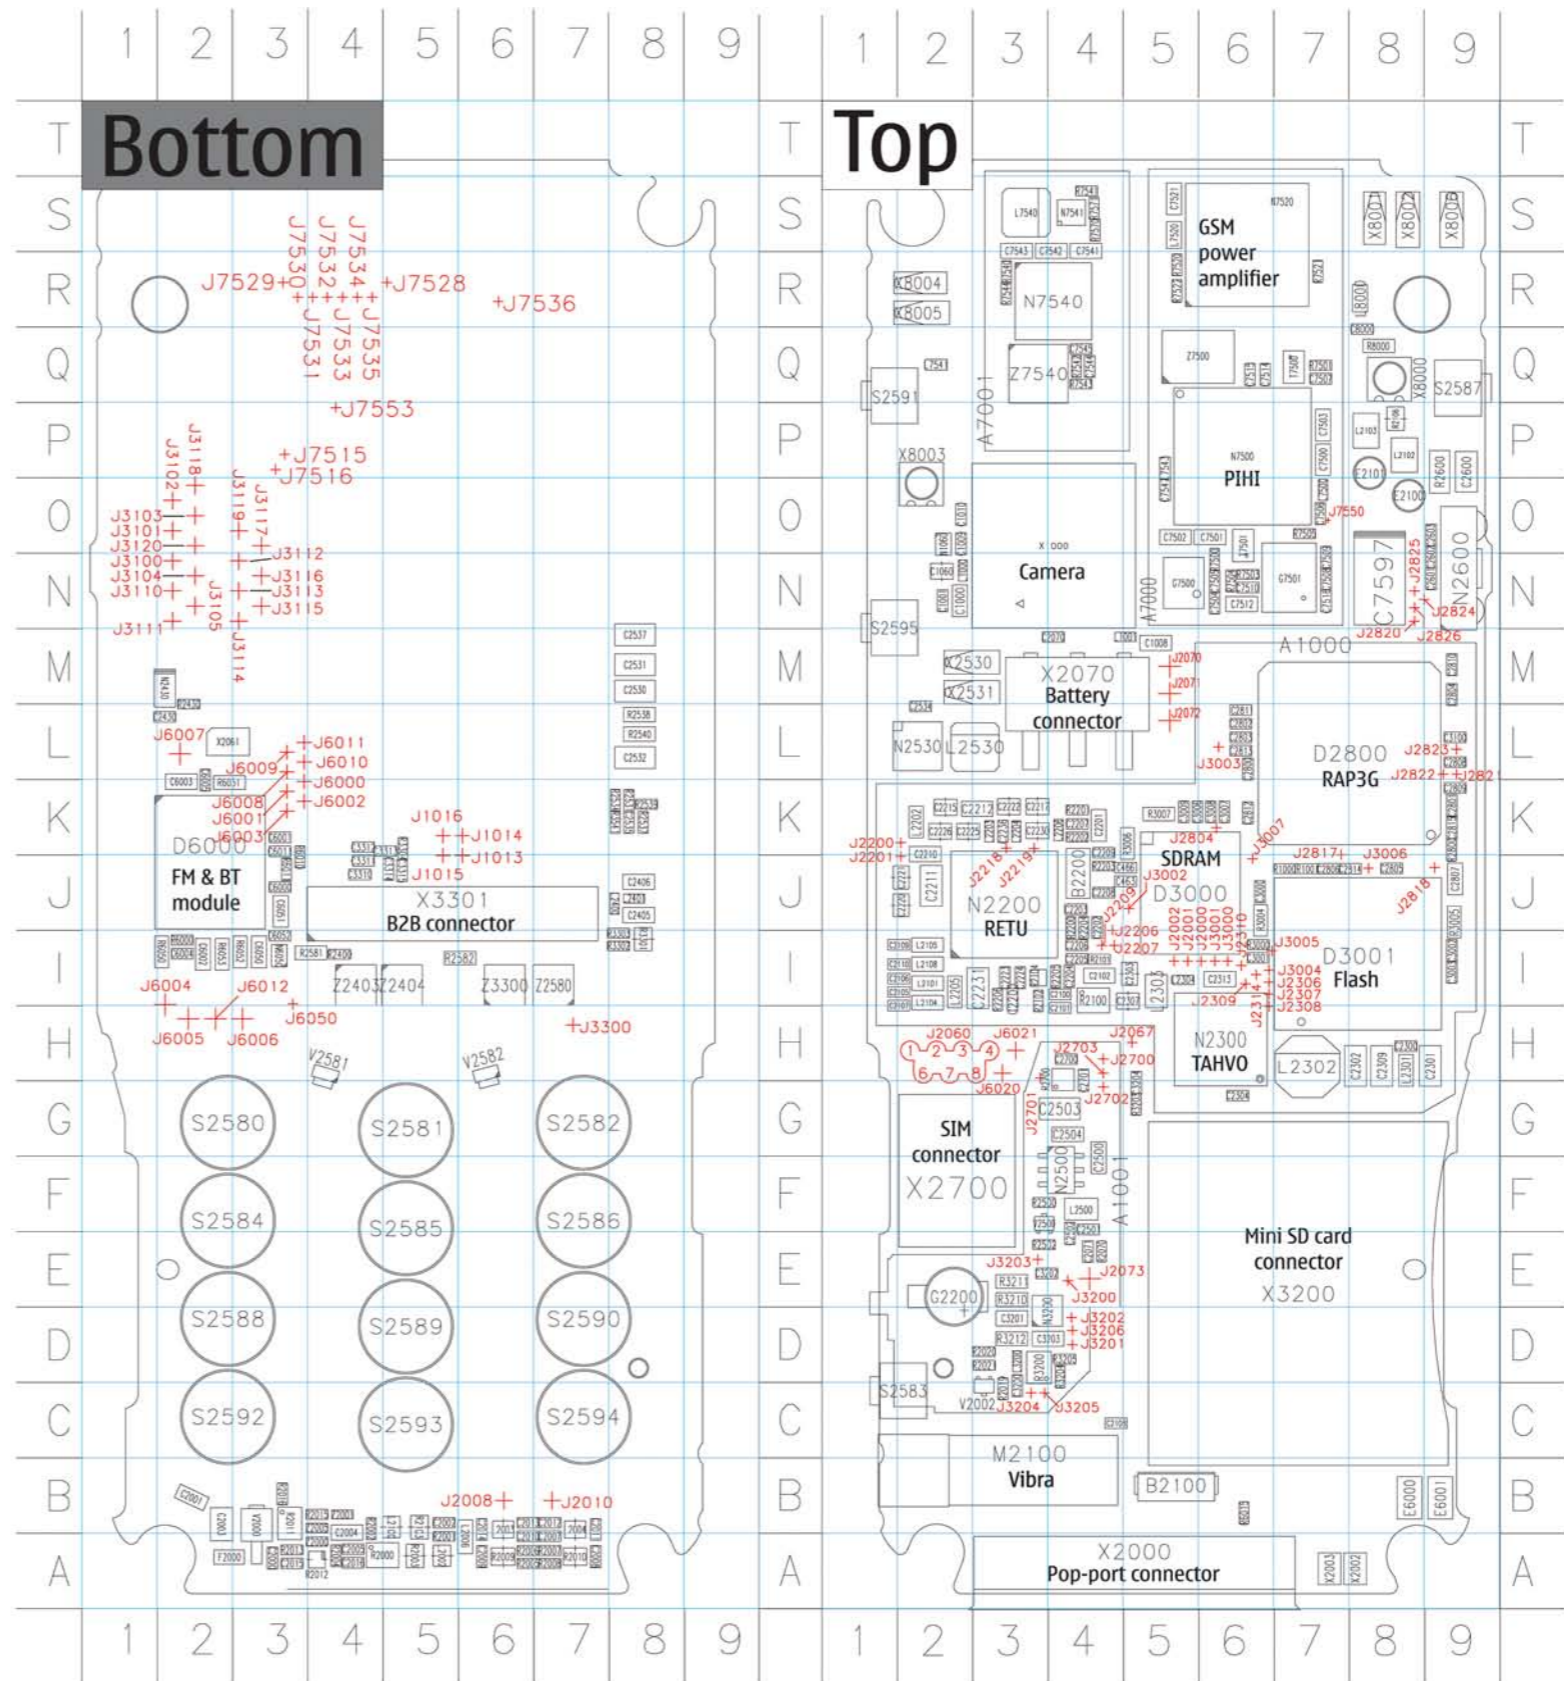


Figure 116 RM-78, 1mda_05a: Component finder

Nokia Customer Care

Glossary

(This page left intentionally blank.)

A/D-converter	Analog-to-digital converter
ACI	Accessory Control Interface
ADC	Analog-to-digital converter
ADSP	Application DPS (expected to run high level tasks)
AGC	Automatic gain control (maintains volume)
ALS	Ambient light sensor
AMSL	After Market Service Leader
ARM	Advanced RISC Machines
ARPU	Average revenue per user (per month or per year)
ASIC	Application Specific Integrated Circuit
ASIP	Application Specific Interface Protector
B2B	Board to board, connector between PWB and UI board
BB	Baseband
BC02	Bluetooth module made by CSR
BIQUAD	Bi-quadratic ,type of filter function)
BSI	Battery Size Indicator
BT	Bluetooth
CBus	MCU controlled serial bus connected to UPP_WD2,UEME and Zocus
CCP	Compact Camera Port
CDSP	Cellular DSP (expected to run at low levels)
CLDC	Connected limited device configuration
CMOS	Complimentary metal-oxide semiconductor circuit (low power consumption)
COF	Chip on Foil
COG	Chip on Glass
CPU	Central Processing Unit
CSR	cambridge silicon radio
CSTN	Color Super Twisted Nematic
CTSI	Clock Timing Sleep and interrupt block of Tiku
CW	Continuous wave
D/A-converter	Digital-to-analouge converter
DAC	Digital-to-analouge converter
DBI	Digital Battery Interface
DBus	DSP controlled serial bus connected between UPP_WD2 and Helgo
DCT-4	Digital Core Technology
DMA	Direct memory access
DP	Data Package

DPLL	Digital Phase Locked Loop
DSP	Digital Signal Processor
DtoS	Differential to Single ended
EDGE	Enhanced data rates for global/GSM evaluation
EGSM	Extended GSM
EM	Energy management
EMC	Electromagnetic compability
EMI	Electromagnetic interference
ESD	Electrostatic discharge
FCI	Functional cover interface
FPS	Flash Programming Tool
FR	Full rate
FSTN	Film compensated super twisted nematic
GND	Ground, conductive mass
GPIO	General-purpose interface bus
GPRS	General Packet Radio Service
GSM	Group Special Mobile/Global System for Mobile communication
HF	Hands free
HFCM	Handsfree Common
HS	Handset
HSCSD	High speed circuit switched data (data transmission connection faster than GSM)
HW	Hardware
I/O	Input/Output
IBAT	Battery current
IC	Integrated circuit
ICHR	Charger current
IF	Interface
IHF	Integrated hands free
IMEI	International Mobile Equipment Identity
IR	Infrared
IrDA	Infrared Data Association
ISA	Intelligent software architecture
JPEG/JPG	Joint Photographic Experts Group
LCD	Liquid Crystal Display
LDO	Low Drop Out
LED	Light-emitting diode

LPRF	Low Power Radio Frequency
MCU	Micro Controller Unit (microprocessor)
MCU	Multiport control unit
MIC, mic	Microphone
MIDP	Mobile Information Device Profile
MIN	Mobile identification number
MIPS	Million instructions per second
MMC	Multimedia card
MMS	Multimedia messaging service
NTC	Negative temperature coefficient, temperature sensitive resistor used as a temperature sensor
OMA	Object management architecture
OMAP	Operations, maintenance, and administration part
Opamp	Operational Amplifier
PA	Power amplifier
PDA	Pocket Data Application
PDA	Personal digital assistant
PDRAM	Program/Data RAM (on chip in Tiku)
Phoenix	Software tool of DCT4.x
PIM	Personal Information Management
PLL	Phase locked loop
PM	(Phone) Permanent memory
PUP	General Purpose IO (PIO), USARTS and Pulse Width Modulators
PURX	Power-up reset
PWB	Printed Wiring Board
PWM	Pulse width modulation
RC-filter	Resistance-Capacitance filter
RF	Radio Frequency
RF PopPort™	Reduced function PopPort™ interface
RFBUS	Serial control Bus For RF
RSK	Right Soft Key
RS-MMC	Reduced size Multi Media Card
RSSI	Receiving signal strength indicator
RST	Reset Switch
RTC	Real Time Clock (provides date and time)
RX	Radio Receiver

SARAM	Single Access RAM
SAW filter	Surface Acoustic Wave filter
SDRAM	Synchronous Dynamic Random Access Memory
SID	Security ID
SIM	Subscriber Identity Module
SMPS	Switched Mode Power Supply
SNR	Signal-to-noise ratio
SPR	Standard Product requirements
SRAM	Static random access memory
STI	Serial Trace Interface
SW	Software
SWIM	Subscriber/Wallet Identification Module
TCXO	Temperature controlled Oscillator
Tiku	Finnish for Chip, Successor of the UPP, Official Tiku3G
TX	Radio Transmitter
UART	Universal asynchronous receiver/transmitter
UEME	Universal Energy Management chip (Enhanced version)
UEMEK	See UEME
UI	User Interface
UPP	Universal Phone Processor
UPP_WD2	Communicator version of DCT4 system ASIC
USB	Universal Serial Bus
VBAT	Battery voltage
VCHAR	Charger voltage
VCO	Voltage controlled oscillator
VCTCXO	Voltage Controlled Temperature Compensated Crystal Oscillator
VCXO	Voltage Controlled Crystal Oscillator
Vp-p	Peak-to-peak voltage
VSIM	SIM voltage
WAP	Wireless application protocol
WD	Watchdog
XHTML	Extensible hypertext markup language
Zocus	Current sensor, (used to monitor the current flow to and from the battery)