



# Technics

KEYBOARD

## SX-KN6500



	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		

**WARNING:**  
**TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPLIANCE TO RAIN, SPLASHING, DRIPPING OR MOISTURE.**

BEFORE YOU PLAY, PLEASE READ THE CAUTIONARY COPY APPEARING ON PAGE 4.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION:**  
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The model number of this product is found on the rear of the unit. The model number and serial number are found underneath the keyboard.  
*Please note the model and serial numbers in the space provided below and retain this sheet as a permanent record of your purchase to aid identification in the event of theft.*

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER \_\_\_\_\_

# Technics

## **OWNER'S MANUAL**

### ***Before you play***

For long and pleasurable use of this instrument, and to gain a thorough understanding of your **KN6500** Keyboard, it is strongly recommended that you read through this Owner's Manual once.

The Owner's Manual is comprised of the following parts.

#### **BASIC FUNCTIONS**

This part includes an explanation of basic procedures and points you should be aware of for proper operation of your instrument.

#### **PRACTICAL APPLICATIONS**

This part comprises a detailed explanation of sound, effect, rhythm, **SEQUENCER**, **COMPOSER**, Disk Drive and MIDI.

#### **REFERENCE GUIDE** (separate booklet)

Reference guide for the contents of the **SOUND GROUP**, **RHYTHM GROUP**, MIDI data, etc.

# Important Safety Instructions

## WARNING

When using electric products, basic precautions should always be followed, including the following;

- Read all the instructions before using the product.

## Safety

- **Power Source**—The product should be connected to a power supply only of the type described in the operating instructions or as marked on the product.
- **Polarization**—This product may be equipped with a polarized line plug (one blade wider than the other). This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of the plug.
- **Periods of Non-use**—The power-supply cord of the product should be unplugged from the outlet when left unused for a long period of time.

## Installation

- **Water and Moisture**—Do not use this product near water—for example, near a bathtub, washbowl, kitchen sink, in a wet basement, or near a swimming pool, or the like.
- **Cart/Stand**—This product should be used only with a cart or stand that is recommended by the manufacturer.
- **Ventilation**—The product should be located so that its location or position does not interfere with its proper ventilation.
- **Heat**—The product should be located away from heat sources such as radiators, heat registers, or other products that produce heat.
- **Foreign Material**—Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

## Listening caution

This product, either alone or in combination with an amplifier and headphones or speakers may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.

## Service

- **Damage Requiring Service**—The product should be serviced by qualified service personnel when:
  - a. The power-supply cord or the plug has been damaged; or
  - b. Objects have fallen, or liquid has been spilled onto the product; or
  - c. The product has been exposed to rain; or
  - d. The product does not appear to operate normally or exhibits a marked change in performance; or
  - e. The product has been dropped, or the enclosure damaged.
- **Servicing**—Do not attempt to service the product beyond that described in the user-maintenance instructions. All other servicing should be referred to qualified service personnel.

## Maintenance

- Be sure to switch this unit off after use, and do not switch the unit on and off in quick succession, as this places an undue load on the electronic components.
- To maintain the luster of the keys and buttons, wipe with a clean, damp cloth, and polish with a soft, dry cloth. Polish may be used, but do not use thinners or petro-chemical-based polishes.
- A wax-based polish may be used on the cabinet, although you will find that rubbing with a soft cloth will suffice.

**SAVE THESE INSTRUCTIONS**

# Contents

Important Safety Instructions .....	4
Controls and functions .....	8
<b>BASIC FUNCTIONS</b>	
Getting started .....	10
See and listen to the demonstration .....	12
Add effects .....	13
Modify the sounds as you play (realtime) .....	14
Play back commercial song disks (DIRECT PLAY) .....	15
Select the registration for a music style (MUSIC STYLIST) .....	16
Automatic panel settings (ONE TOUCH PLAY) .....	18
Store your panel settings (PANEL MEMORY) .....	20
Recall your favorite panel settings at the press of a single button (CUSTOM PANEL) .....	21
Record your performance (SEQUENCER) .....	22
Save data on a floppy disk .....	24
Load rhythm data from a Technics pattern disk (COMPOSER LOAD) .....	26
<b>PRACTICAL APPLICATIONS</b>	
About the display .....	27
Favorites .....	30
<b>Part I Sounds and effects</b> .....	32
Overview of sounds and effects .....	32
Selecting sounds .....	32
Digital Drawbar .....	34
Accordion Register .....	35
Assigning parts to the keyboard .....	36
Effects (PART) .....	39
Effects (GLOBAL) .....	41
Controller .....	43
Transpose .....	45
Techni-chord .....	46
<b>Part II Playing the rhythm</b> .....	47
Overview of rhythm performance .....	47
Selecting rhythms .....	48
Playing the rhythm .....	50
Auto Play Chord .....	51
Fade In/Fade Out .....	56
Sound Arranger .....	58
One Touch Play .....	59
Music Stylist .....	60
Music Style Arranger .....	62
Panel Memory .....	63
<b>Part III Performance Pads</b> .....	66
Playing phrases .....	66
Copying phrases .....	67
Compile .....	69
Record a phrase .....	70
<b>Part IV Sequencer</b> .....	72
Outline of the Sequencer .....	72
Sequencer parts .....	75
Easy Record .....	76
Realtime Record .....	77

Sequencer Play .....	80
Naming .....	82
Panel Write .....	83
Song Select .....	83
Punch Record .....	84
Step Record .....	86
Track Assign .....	91
Quantize .....	92
Song Clear .....	93
Track Clear .....	93
Note Edit .....	94
Drum Edit .....	95
After Touch Setting .....	96
Copy and paste the recorded data .....	97
Changing the note position etc. of the recorded data .....	101
<b>Part V Composer .....</b>	<b>104</b>
Outline of the Composer .....	104
Simple recording method .....	106
Create a completely new rhythm .....	106
Chord Modify Change .....	109
Part Setting .....	110
Playback .....	111
Step Record .....	112
Measure Edit .....	113
Pattern Copy .....	115
Custom Style Copy .....	117
<b>Part VI Disk Drive .....</b>	<b>118</b>
Outline of the Disk Drive function .....	118
Outline of the procedure .....	120
Loading data .....	121
Direct Play .....	123
Song Medley .....	125
Saving data .....	126
Custom Style Load/Save .....	130
Disk management .....	131
Set the automatic display when a disk is inserted .....	132
How to use the Style Convert Disk .....	133
About the Initial Data Disk .....	133
<b>Part VII Sound .....</b>	<b>134</b>
Outline of the Sound .....	134
Part Setting .....	135
Mixer .....	138
Master Tuning .....	140
Key Scaling .....	140
Sound Load Option .....	141
<b>Part VIII Reverb &amp; Effect .....</b>	<b>142</b>
Outline of the Reverb & Effect .....	142
Equalizer .....	143
Allocation .....	143
<b>Part IX Sound Edit .....</b>	<b>144</b>
Outline of the Sound Edit .....	144
Easy Edit .....	145
Tone Edit .....	146
Pitch Edit .....	149
Filter Edit .....	150
Amplitude Edit .....	152
LFO (cyclic modulation) .....	154

Effect Edit .....	155
Controller Edit .....	156
Store the new sound .....	156
<b>Part X Control</b> .....	<b>158</b>
Outline of Control functions .....	158
Overall Touch Sensitivity .....	159
Foot Controllers .....	159
<b>Part XI Customize</b> .....	<b>161</b>
Outline of Customize functions .....	161
Home Page Setting .....	162
Display Time Out .....	163
Wallpaper Setting .....	164
Data Protection .....	164
Custom Panel Mode .....	165
MIDI Setting Load Option .....	165
<b>Part XII MIDI</b> .....	<b>166</b>
What is MIDI? .....	166
Outline of MIDI functions .....	168
Part Setting .....	169
Control Messages .....	170
Realtime Messages .....	170
Common Setting .....	171
Mode Setting .....	172
Input/output Setting .....	172
MIDI Presets .....	173
Program Change MIDI Out .....	174
Panel Memory Output .....	175
Computer Connection .....	175
<b>Initialize</b> .....	<b>176</b>
<b>About the backup memory and performance data</b> .....	<b>177</b>
<b>Separately sold options</b> .....	<b>177</b>
<b>Connections</b> .....	<b>178</b>
<b>Symptoms which appear to be signs of trouble</b> .....	<b>179</b>
<b>Error messages</b> .....	<b>181</b>
<b>Index</b> .....	<b>183</b>
<b>Specifications</b> .....	<b>185</b>

■ **Supplied accessories**

Please check the supplied accessories.



- Music stand
- AC cord
- STYLE CONVERT DISK
- INITIAL DATA DISK

# Controls and functions

## SOUND CONTROLLER



Modify the sound in realtime with the trackball.  
(Refer to page 43.)

## AUTO PLAY CHORD

Add an automatic accompaniment to your selected rhythm.  
(Refer to page 51.)

## RHYTHM GROUP

Various rhythm patterns are available for each rhythm group. (Refer to page 48)

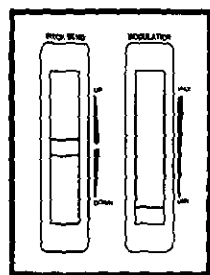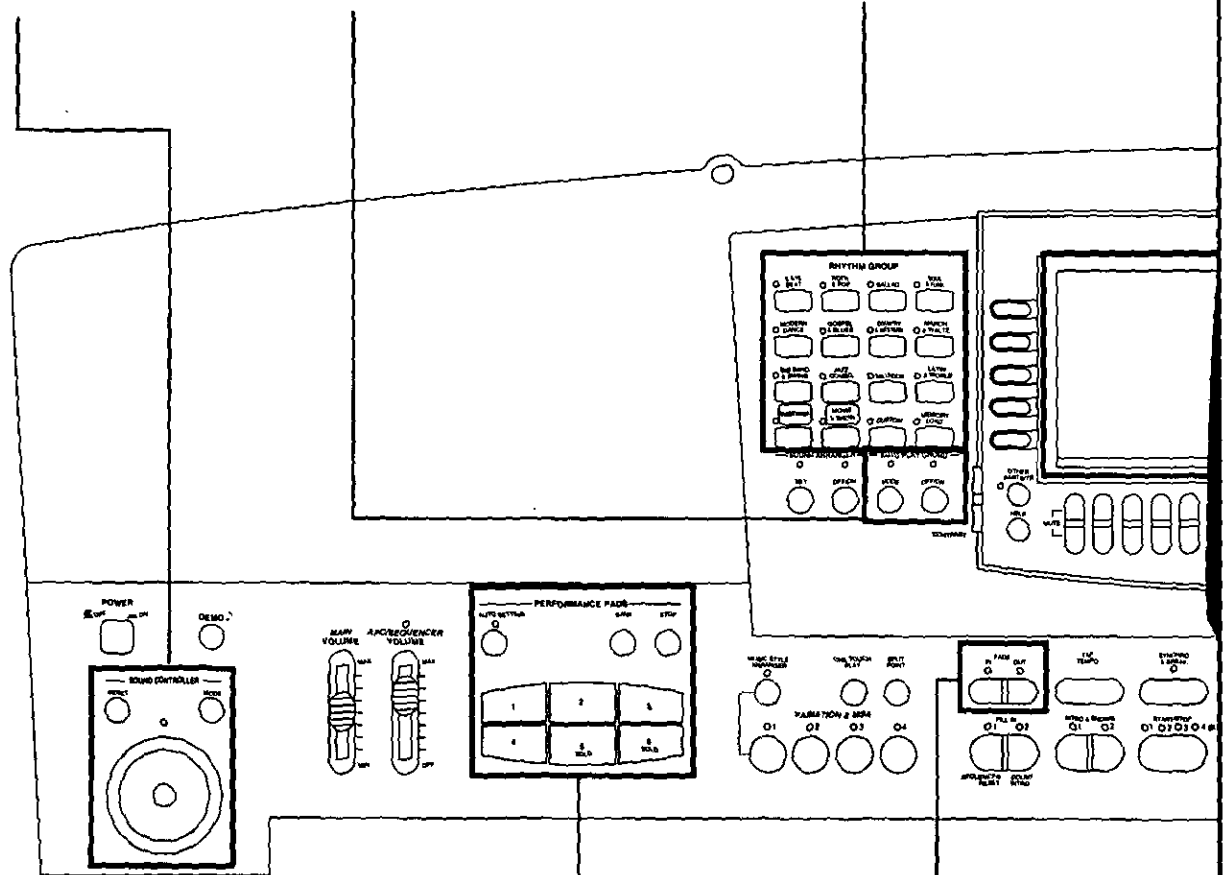

## PITCH BEND/MODULATION

The **PITCH BEND** wheel allows a "sliding" change in the pitch. The **MODULATION** wheel is used to add vibrato to the sound.  
(Refer to page 44.)

## PERFORMANCE PADS

Add various phrases to your performance with the pad buttons. (Refer to page 66.)

## FADE IN/OUT

Begin your song with a slowly increasing volume, or end it by having the sound slowly fade away. (Refer to page 56.)



## DISPLAY

Displays performance information, function settings and other messages. (Refer to page 27.)


- Adjust the readability with the **CONTRAST** control at the lower left side of the display.

## SOUND GROUP

Various sounds are available for each sound group.  
(Refer to page 32.)

## PANEL MEMORY

Store the panel settings, then recall them instantaneously just by pressing a button or two. (Refer to page 63.)

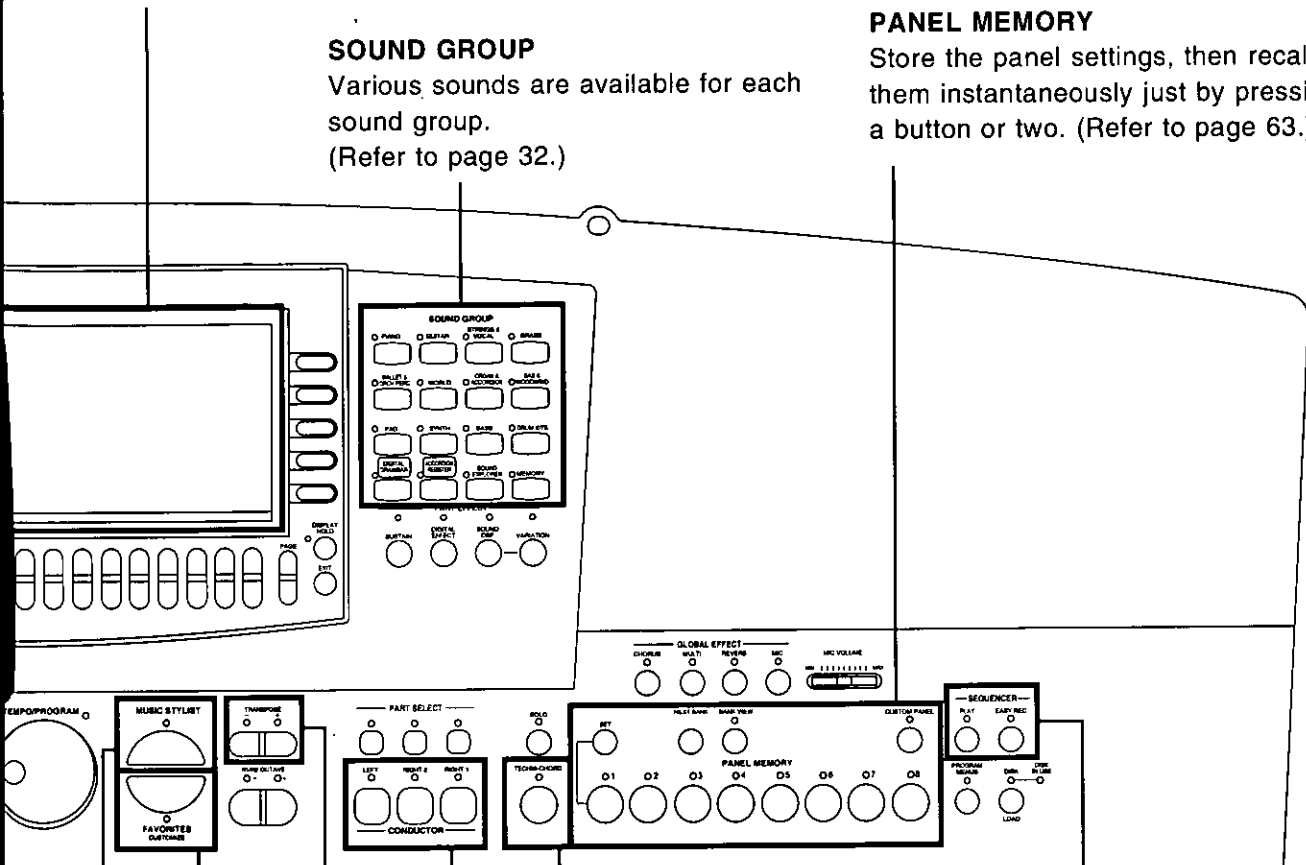

## TRANSPOSE

Raise or lower the key of the entire keyboard.  
(Refer to page 45.)

## CONDUCTOR

Assign a different sound to each part, then assign the desired parts to sections of the keyboard.  
(Refer to page 36.)

## SEQUENCER

Record and play back your performance.  
(Refer to page 72.)

## MUSIC STYLIST

You can choose to have all the settings of this instrument automatically set. (Refer to page 60.)

## FAVORITES


You can record four different special displays of your favorite sounds and rhythms, functions, etc. (Refer to page 30.)

## TECHNI-CHORD

Block chords are automatically added to the melody. (Refer to page 46.)


# Getting started

## Before you play

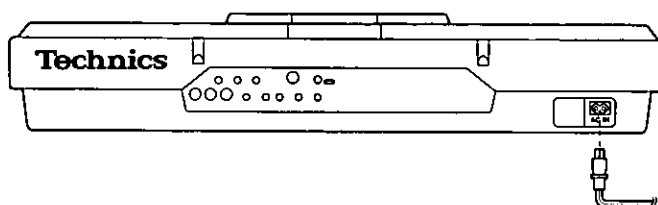


**1** Plug the power cord into an outlet.


**2** Affix the music stand as shown.

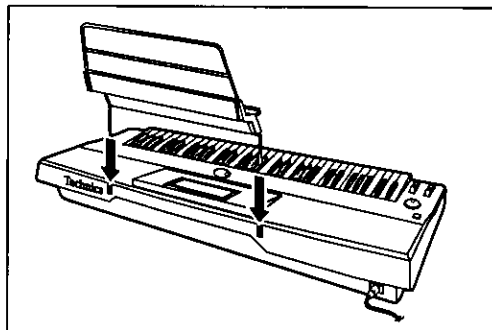

**3** Press the **POWER** button to turn it on.

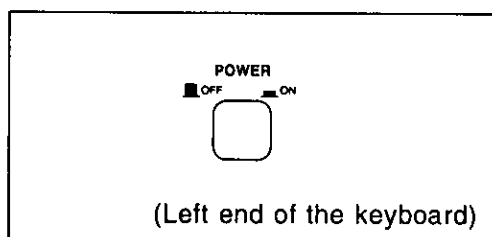


**4** Adjust angle of the display.

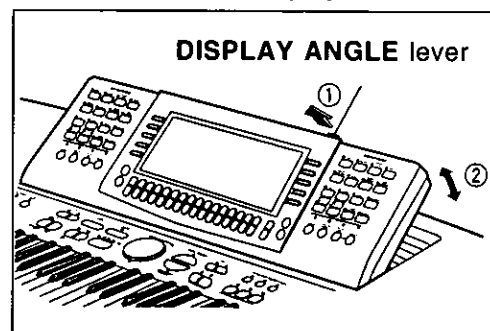


- While pulling the **DISPLAY ANGLE** lever towards you, swivel the display forward to the angle at which it is easiest to read.
- To return the display to its original position, do so while pulling the **DISPLAY ANGLE** lever towards you. Be careful not to pinch your fingers.

- Headphones may be plugged into the **PHONES** terminal. This will automatically switch off the speaker system, and sound is heard only through the headphones.

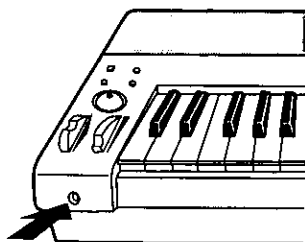


- The pitch of this instrument can be adjusted for when playing with other instruments. (Refer to page 140.)
- For information on this instrument's backup function, refer to page 177.
- Under certain conditions, the functions and memories of this instrument may be initialized when the power is turned on.


# Playing

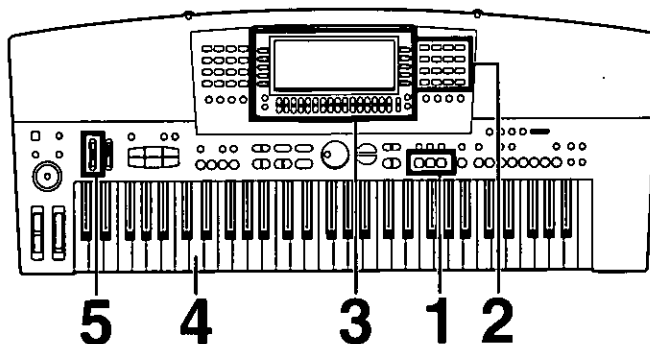


**1** In the **CONDUCTOR** section on the panel, press the **RIGHT 1** button to turn it on.

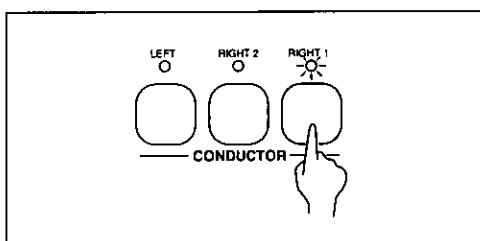

**2** In the **SOUND GROUP** section, press one of the sound buttons.

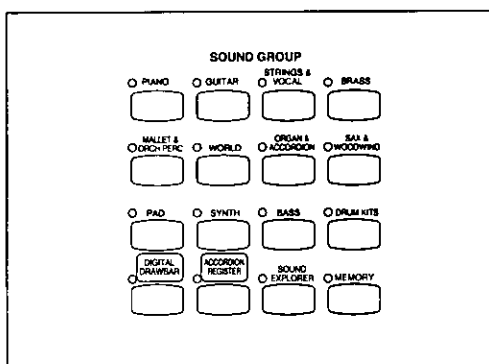

**3** Select a sound from the list of sounds shown on the display.

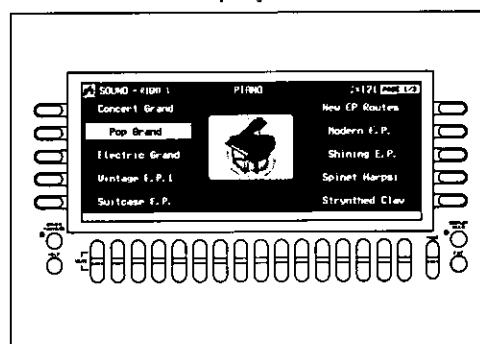

- The list of sounds is contained on two or more screen “pages”. To see a different part of the list, press either **PAGE** button.


**4** Play the keyboard.

- Your Keyboard features Touch Response. You control the volume by playing the keys harder or softer.

**5** Set the **MAIN VOLUME** to an appropriate level with the sliding control.


- Refer to page 32 for detailed information about selecting sounds.

# See and listen to the demonstration

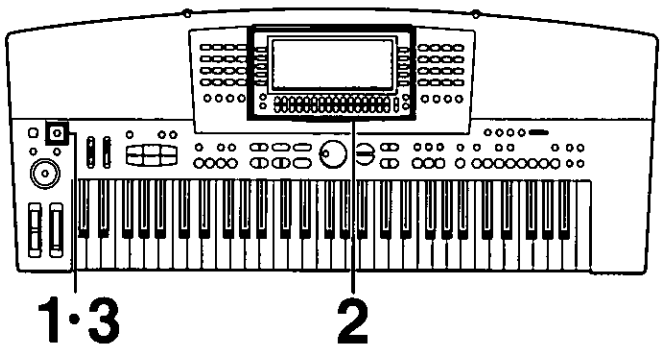

1


Press the **DEMO** button.

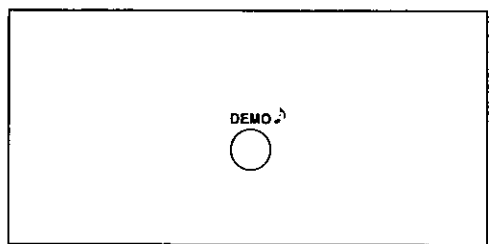

- The demonstration performance and display corresponding to your selection will begin.
- To end the demonstration before it has finished, press the **START/STOP** button.

2

Use the buttons to the left, right and below the display to select the demonstration tune you wish to see and listen to.

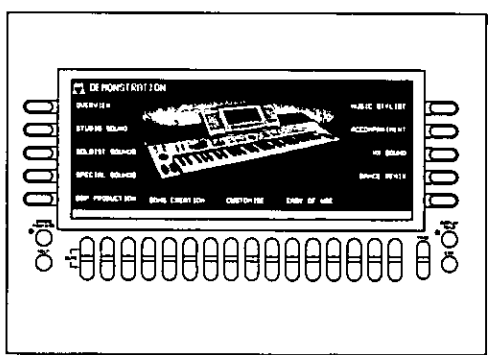


3

When you are finished listening to the demonstration tunes, press the **DEMO** button again.

- If you press and hold the **DEMO** button for a few seconds, or if you press first the **DEMO** button and then the **START/STOP** button, all demo tunes are demonstrated in order in a medley performance. The medley performance continues until the **START/STOP** button or the **DEMO** button is pressed again.
- Some of the buttons do not function during the DEMO mode.

# Add effects

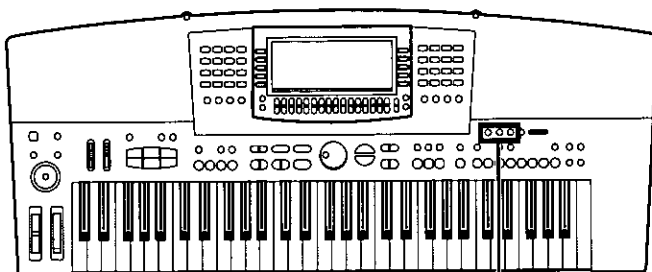


**A·B·C**

## Add breadth.

**A**


Press the **CHORUS** button to turn it on.

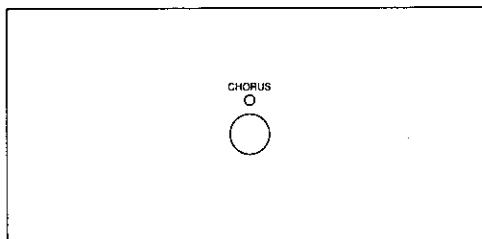

## Add reverberation.

**C**


Press the **REVERB** button to turn it on.

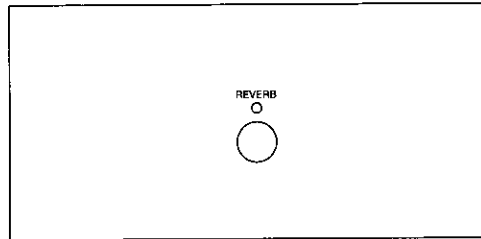

## Add effect.


**B**

Press the **MULTI** button to turn it on.

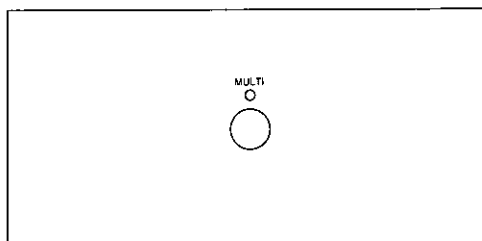


- These effects are applied to all the sounds of the instrument. In addition, you can apply various effects to specific parts. (Refer to page 39.)
- You can modify the way in which the various effects are applied. (Refer to page 41.)

# Modify the sounds as you play (realtime)

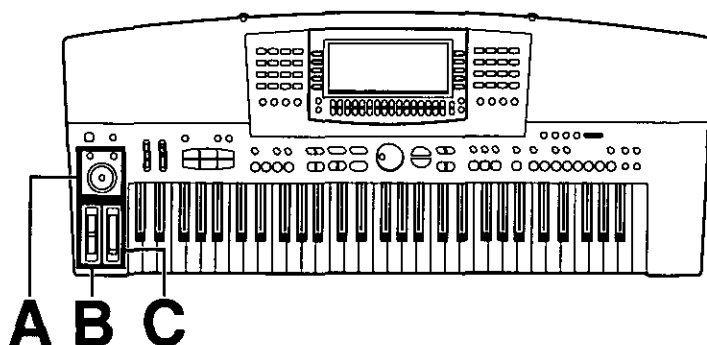


## Modify the sound with the trackball

**A** During your performance you can make various changes to the sound with the **SOUND CONTROLLER**.

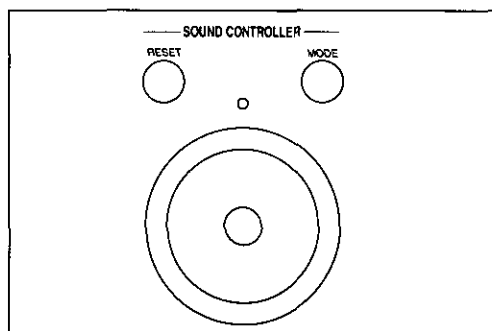


## Add vibrato.

**C** While pressing a key on the keyboard, move the **MODULATION** wheel up to add the effect.

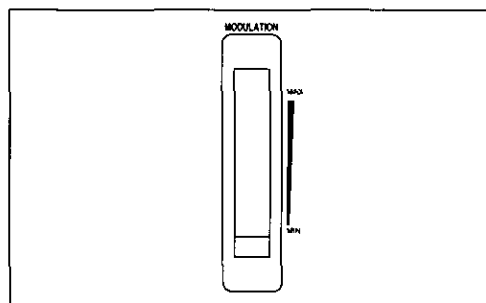


## Slide the pitch up or down.

**B** While pressing a key on the keyboard, move the **PITCH BEND** wheel up and down to control the pitch.

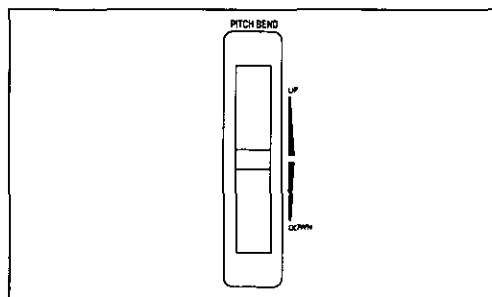


- If you wish to cancel the changes made with the **SOUND CONTROLLER**, press the **RESET** button.
- When you release your hand from the **PITCH BEND** wheel, it returns automatically to the center position.
- When the vibrato effect is not needed, set the **MODULATION** wheel to the **MIN** position.

# Play back commercial song disks (DIRECT PLAY)

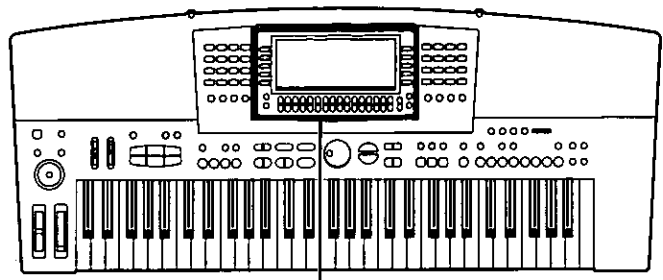


## 2·3·4


**1** Insert the song disk into the Disk Drive slot.

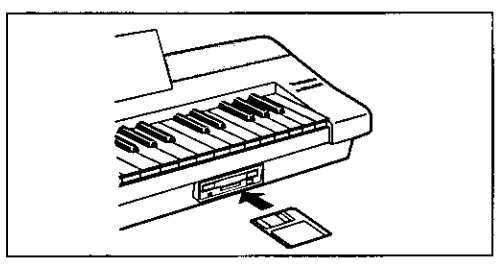

**2** On the DISK MENU display, select DIRECT PLAY.

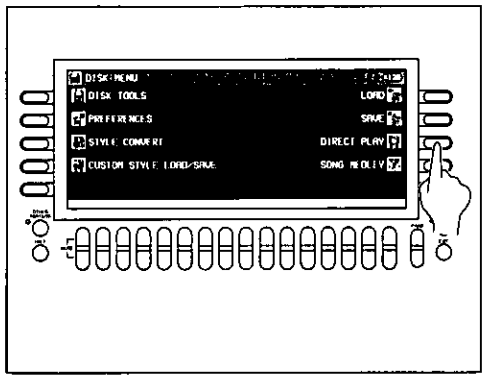


**3** Use the buttons below the display to select a song.

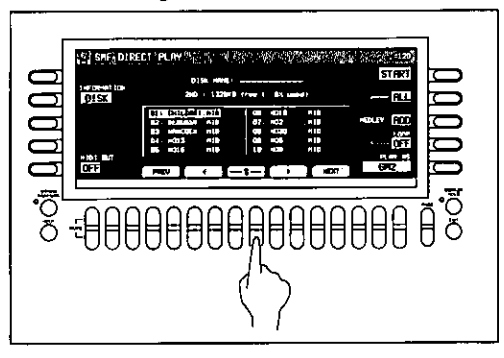

- For SMF songs, use the PLAY AS button to specify a sound arrangement mode.

**4** Press the START button.

- The selected song is played back.

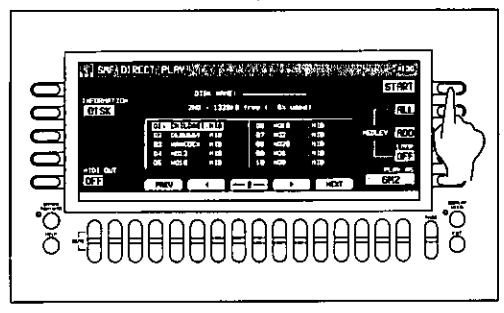


- DIRECT PLAY is possible from the following disks:


Standard MIDI File
Standard MIDI File with Lyrics
DISK ORCHESTRA COLLECTION™ (DOC)
PianoDisc™

\* All product and company names are trademarks or registered trademarks of their respective owners.  
 \* DISK ORCHESTRA COLLECTION is a trademark of the YAMAHA Corporation.


# Select the registration for a music style (MUSIC STYLIST)

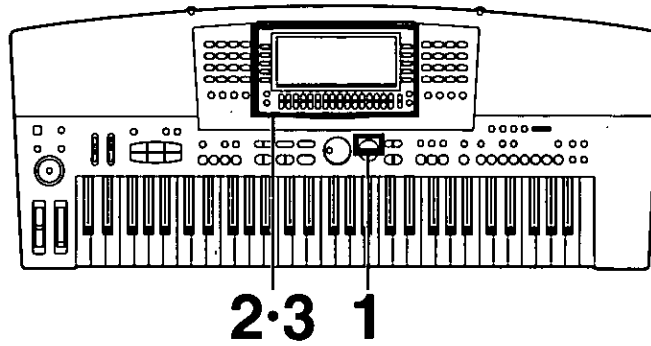


- 1** Press the **MUSIC STYLIST** button to turn it on.

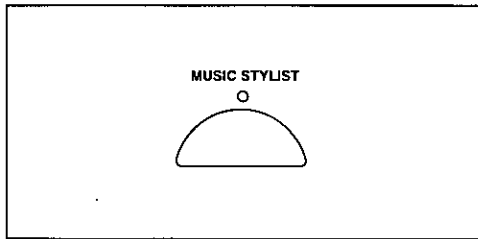


- 3** Use the **CATEGORY** ▲ and ▼ buttons to select a category.

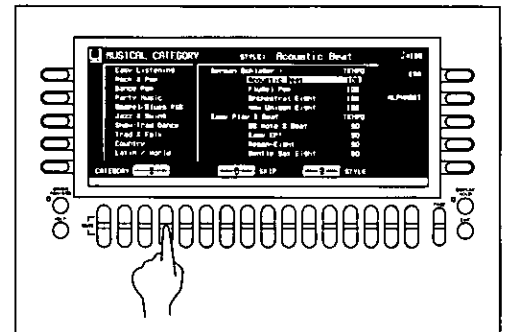


- 2** Select **MUSICAL CATEGORY**.

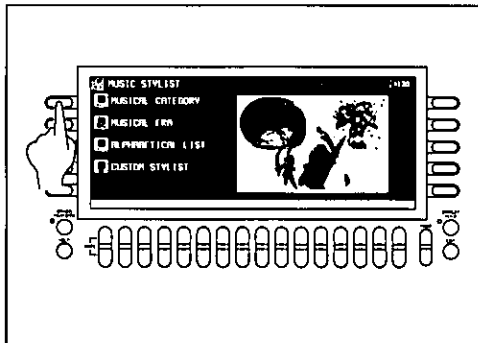



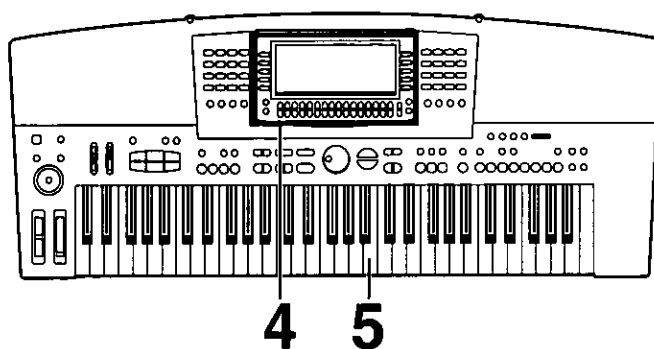

- 4** Use the STYLE ▲ and ▼ buttons to select a music style.

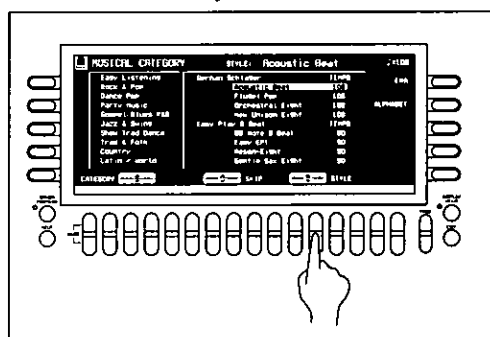


- You can use the SKIP ▲ and ▼ buttons to skip to the previous or following sub category.
- When you select a style, the sounds and rhythm which are best suited for the selected style are automatically selected.

- 5** Play the keyboard.
- When you specify a chord, an intro is played, after which the automatic rhythm starts.


- You can also search for a style alphabetically or by music era. (Refer to page 60.)

# Automatic panel settings


## (ONE TOUCH PLAY)

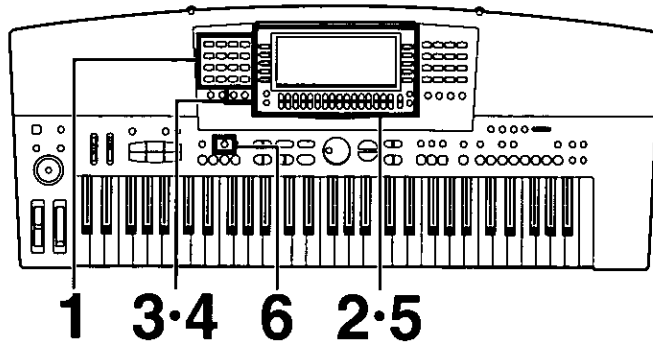


**1** In the **RHYTHM GROUP** section, press the button for a desired rhythm.

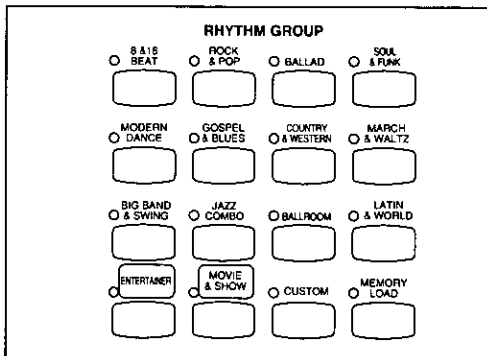


**2** Select a rhythm from the list of rhythms on the display.

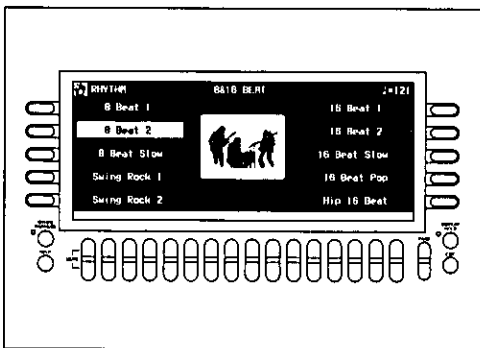


**3** Press the **AUTO PLAY CHORD's OFF/ON** button to turn it on.

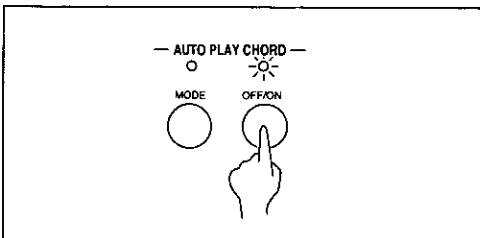


**4** Press the **AUTO PLAY CHORD's MODE** button to turn it on.

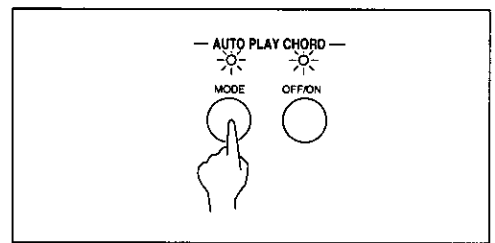


**5** Select **ONE FINGER** on the display.

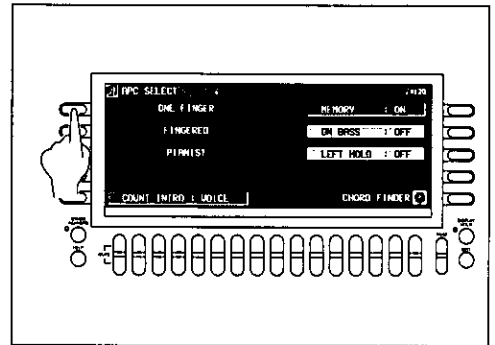

**6** Press and hold the **ONE TOUCH PLAY** button for a few seconds.

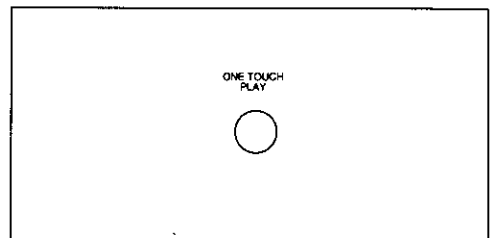


- The sound, effects and tempo suitable for the selected rhythm are automatically selected. The tempo can be adjusted with the **TEMPO/PROGRAM**.

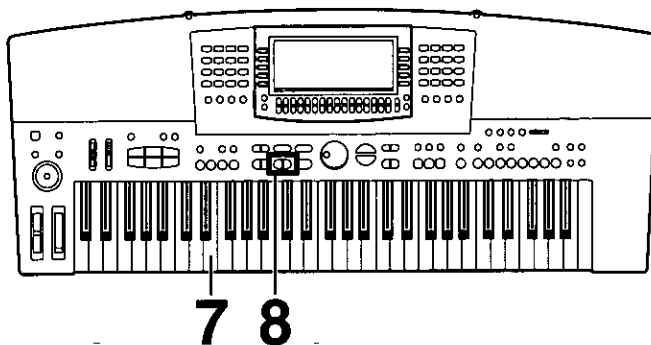


- 7** Use your left hand to play the chords and your right hand to play the melody
- Pressing a key on the left area of the keyboard will cause the automatic rhythm pattern to start playing (synchro start)

- 8** At the end of your performance, press the **INTRO & ENDING 1 or 2** button

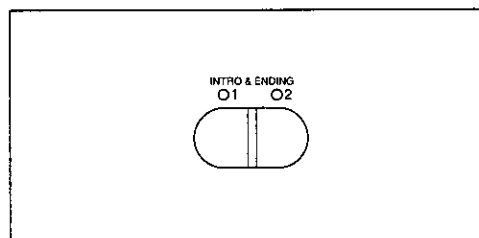


- An ending pattern is played, after which the automatic accompaniment stops
- If the **START/STOP** button is pressed, the accompaniment stops immediately

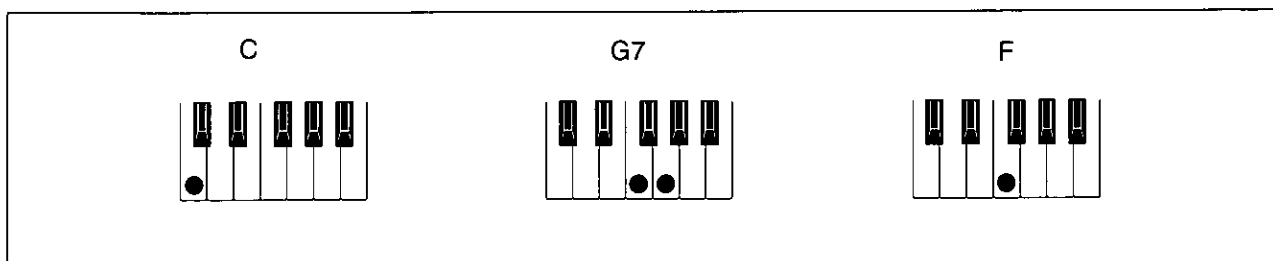

- In this example you played chords by pressing the keys for the "root notes" (ONE FINGER chords) But you can also specify the chord by playing all the notes in the chord (Refer to page 52)
- You can insert a fill-in pattern while the preset rhythm pattern is playing by pressing either the **FILL IN 1** or **FILL IN 2** button

# Store your panel settings


## (PANEL MEMORY)

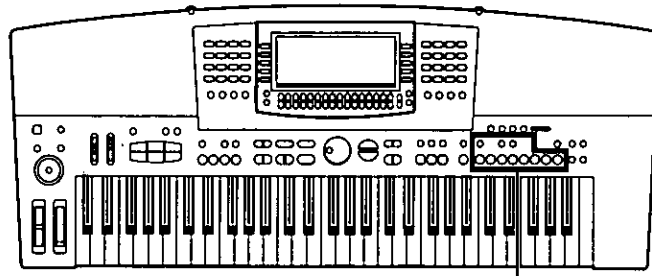


### 2-3

**1** Set up the desired panel settings (sounds, volumes, etc.)


**2** Use the **NEXT BANK** button to select a bank (A, B, C, 1 to 10).

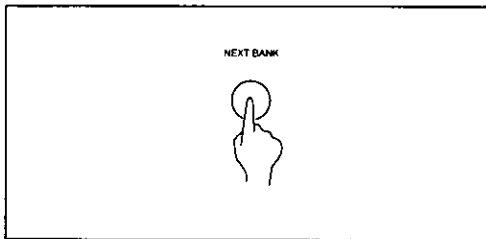

- The bank numbers are shown on the display.

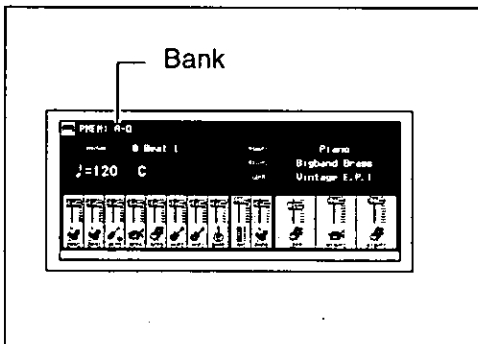


**3** With the **SET** button held down, press one of the numbered buttons of the **PANEL MEMORY** (1 to 8).

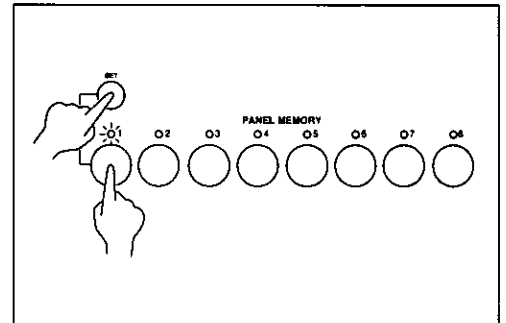

- The current panel settings are now stored in the specified bank and number. When you select the same bank and number again, the stored panel settings are recalled.


- If you do not wish to recall the rhythm, tempo, etc. with the **PANEL MEMORY**, press and hold the **SET** button for a few seconds to show the **PANEL MEMORY MODE** display, and select **NORMAL**.

# Recall your favorite panel settings at the press of a single button (CUSTOM PANEL)

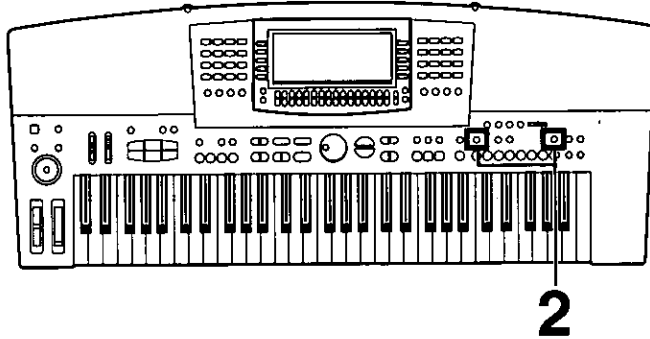

2


- 1 Set up the desired panel settings (sounds, volumes, etc.)
- 2 Press the **SET** button and the **CUSTOM PANEL** button at the same time.

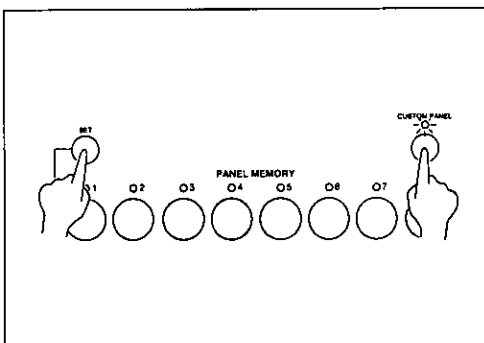

- "COMPLETED!" is shown on the display and the settings are stored. You can recall the stored settings at any time by turning on the **CUSTOM PANEL** button.

- The **PANEL MEMORY** data is overwritten when disk load or automatic settings are performed, so if there is one particular combination of settings that you want to be able to always easily access, you can record it in the **CUSTOM PANEL** button and recall it merely by pressing the button.

# Record your performance (SEQUENCER)

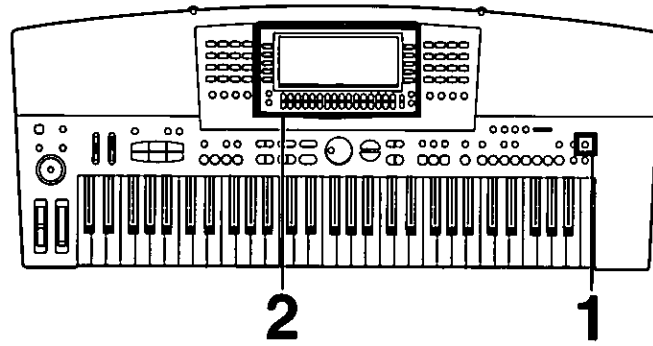


## Sonatina

Sound: Piano (**RIGHT 1** part)


Right hand

Left hand


- 1** In the **SEQUENCER** section, press the **EASY REC** button to turn it on.

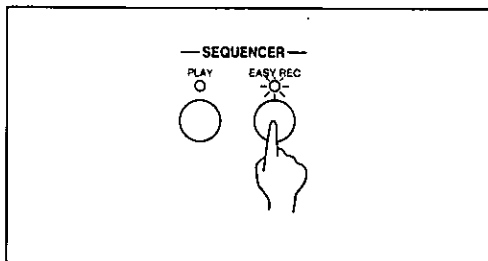

- 2** Press the OK button.

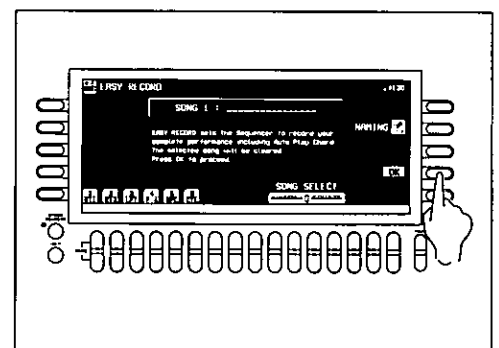


- The display changes to the **REALTIME RECORD** display.

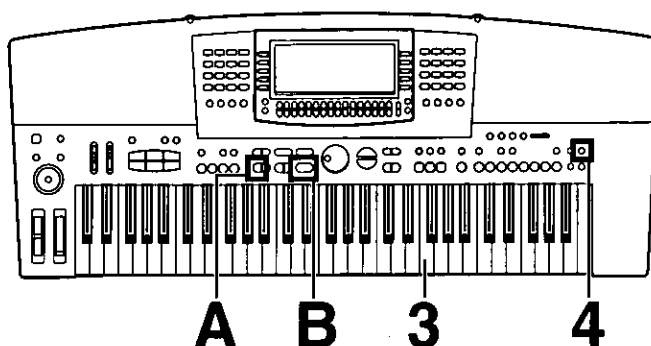

**3** | Play the song on the keyboard.


**4** | When you have finished playing, press the **EASY REC** button again to turn it off.

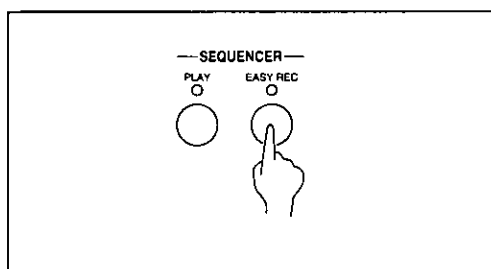


- The **PLAY** button in the **SEQUENCER** section turns on.

### **Playing back your recorded performance**

**A** | Press the **SEQUENCER RESET (FILL IN 1)** button.

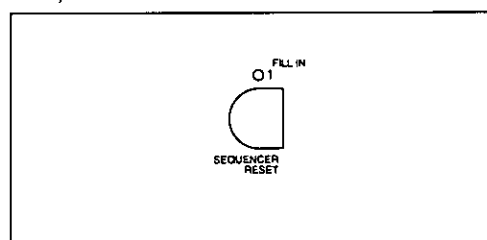


**B** | Press the **START/STOP** button.

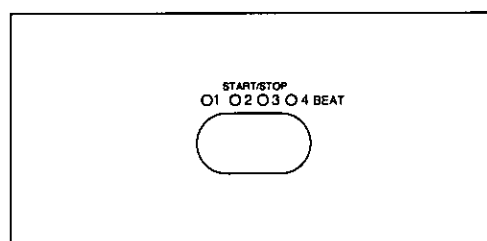


- Your performance is played back just as you recorded it.
- When you are finished playing back your performance, press the **PLAY** button in the **SEQUENCER** section to turn it off.

# Save data on a floppy disk

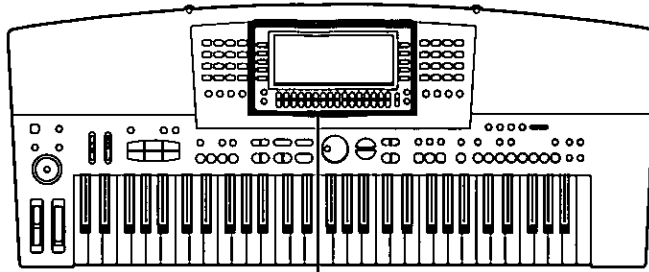


## 2·3·4·5

- 1** Insert a disk you wish to save to into the Disk Drive slot. Push it all the way in until you hear a click.

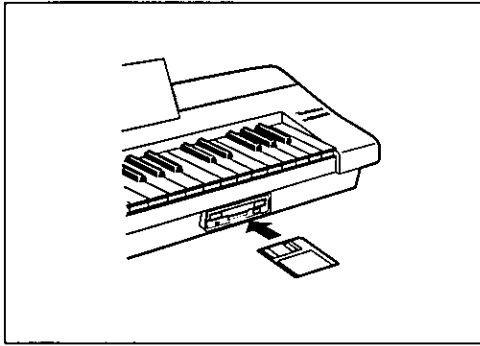


- 2** On the DISK MENU display, select **SAVE**.

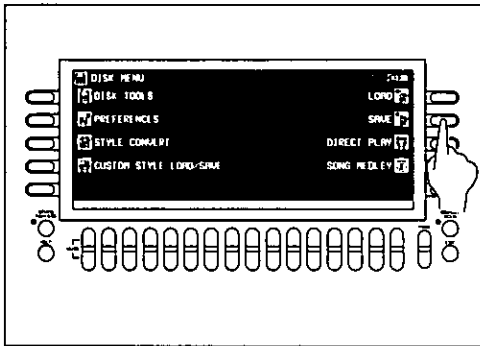


- If you attempt to use the **SAVE** procedure when an unformatted disk is inserted into the Disk Drive slot, the **FORMAT** display appears. Follow the instructions on the display to format the disk. (Formatting the disk will clear any data which is currently stored on the disk.)


- 3** Select **TECHNICS FORMAT**.

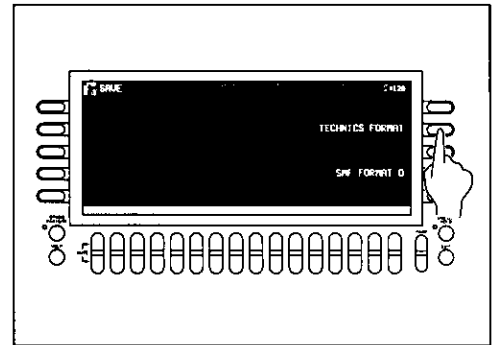

- 4** Specify a file number to save to.

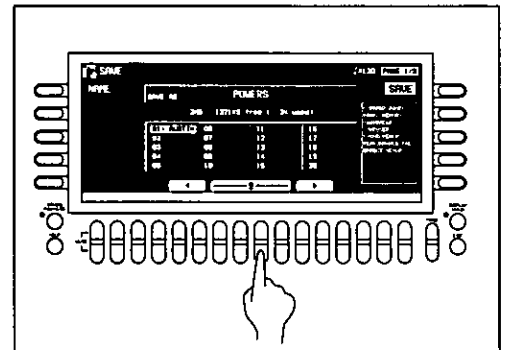


- 5** Press the **SAVE** button.

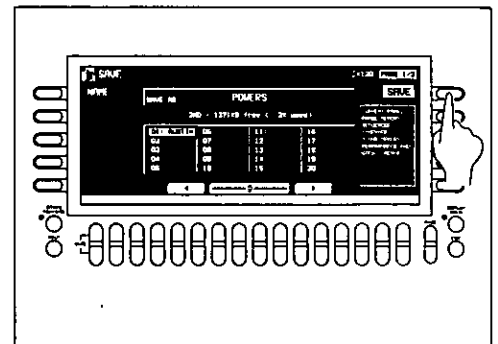


- The performance data of the song recorded in the **SEQUENCER** is saved on the floppy disk.



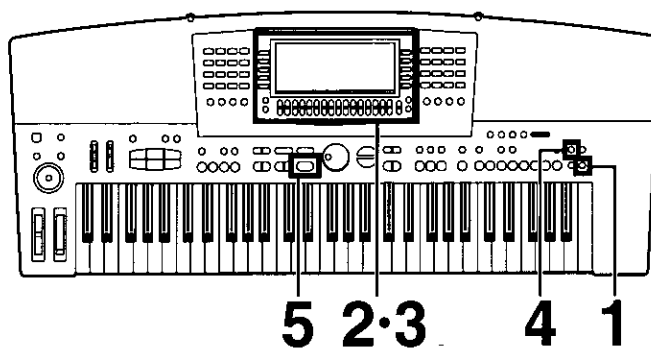


### Recall data from a floppy disk

**1** Press and hold the **DISK** button for a few seconds

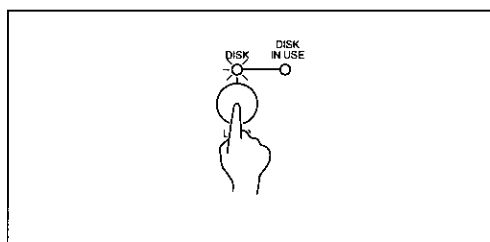


**2** Select the file you wish to load

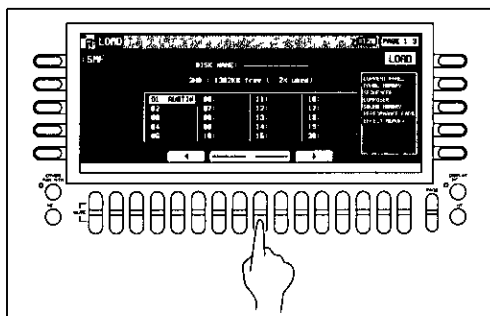


**3** Press the **LOAD** button

- The data is copied to the internal memory of this instrument

**4** Press the **PLAY** button in the **SEQUENCER** section to turn it on

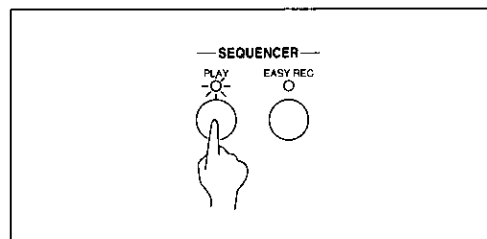

**5** Press the **START/STOP** button

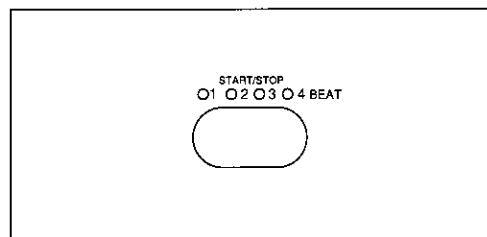


- The recalled song is played back

■ The following data can be saved/loaded:

PERFORMANCE	CURRENT PANEL (The current panel settings)
	PANEL MEMORY
	SEQUENCER
	COMPOSER (MEMORY contents)
	SOUND MEMORY
	PERFORMANCE PADS (USER memories)
	EFFECT MEMORY
BACKUP	USER MIDI (USER memories of the MIDI PRESETS)
	FAVORITES
	HOME PAGE
	ALL CUSTOM STYLE


- For detailed information, refer to pages 118 and 177

# Load rhythm data from a Technics pattern disk (COMPOSER LOAD)

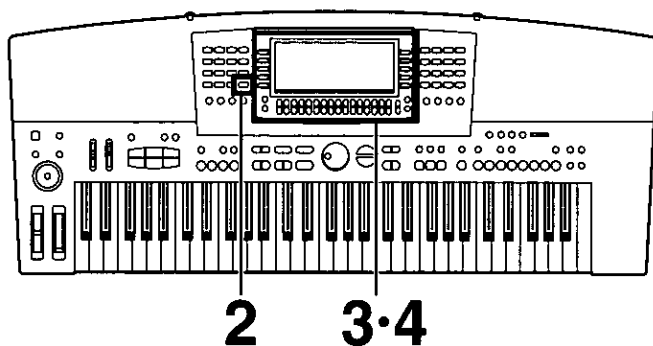


**1** Insert a commercially sold Technics pattern disk into the Disk Drive slot.

**2** In the **RHYTHM GROUP** section, press and hold the **LOAD (MEMORY)** button for a few seconds.

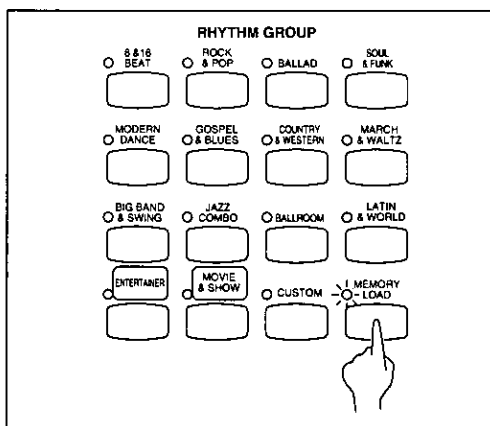


**4** Press the **LOAD** button.

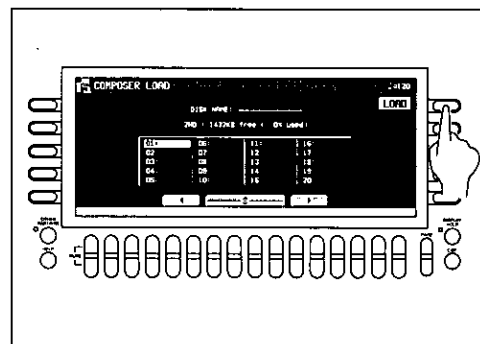

- Rhythm data is loaded to the **COMPOSER** memory (**MEMORY**). You can use the rhythms during your performance, just like the preset rhythms.

**3** Select the name of the pattern to load.

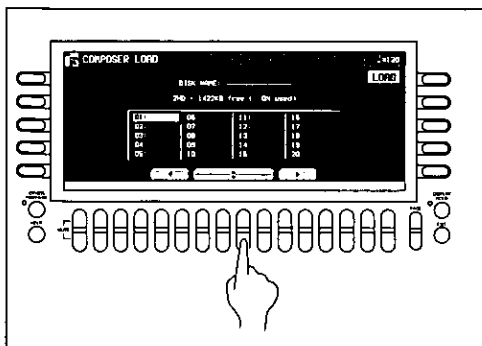


# About the display

A large-size display, easy to operate with excellent readability, is used for displaying various information such as the names of the selected sounds and rhythms etc. and when setting the functions. Let's take a look.

- The display illustrations shown in this User's Manual are examples for the sake of clarification; the actual displays on your instrument may differ from the illustrations.

## Normal display (HOME PAGE)


This is the kind of information you see on the display during a normal performance.

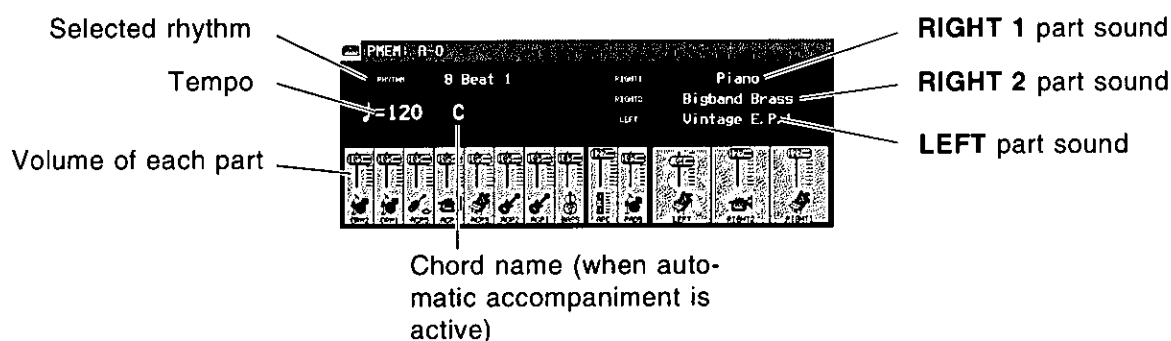

- You can specify the contents that you wish to have displayed. (Refer to page 162.)

## Volume balance

At the bottom half of the normal display, the volume balance of each part is represented in a fader illustration and by a number (0 to 127). You can use the balance buttons below the display to adjust the volumes.

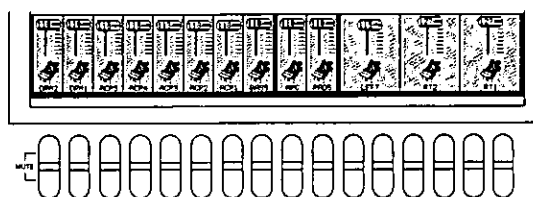

**DRM: DRUMS    ACP: ACCOMP    APC: AUTO PLAY CHORD    PADS: PERFORMANCE PADS**

When setting the volume balance, press the upper button to increase the volume and the lower button to decrease it.

- Hold a button down to scroll the volume quickly.

### ■ MUTE

To mute a part, press both the corresponding upper and lower buttons at the same time.

- The volume display for a muted part is shown as "MUTE".
- Pressing either balance button for a muted part will cancel the mute function.

## ■ OTHER PARTS/TR

If you press the **OTHER PARTS/TR** button, the display changes to show the volumes of PART (PT) 1–16. You can then adjust the volumes of these parts. These parts are active when playing back a song disk or when this instrument is connected to external MIDI equipment and is used as a multi-timbre sound generator.

- When there are other parts or tracks to access, the **OTHER PARTS/TR** indicator is lit.

## PAGE

When there are additional parts to the current display, a page number indication, for example PAGE1/2, appears in the upper right corner of the screen. For example, 1/2 indicates that there are two pages of the display, and the current page is page 1. In this case, you can use the upper and lower **PAGE** buttons, to the right of the balance buttons, to view different “pages” of the display.



- Press the upper button to view the next page of the display, and the lower button to view the previous page of the display.
- On the last page of the display, pressing the upper button returns to the first page. And conversely, on the first page of the display, pressing the lower button will skip to the last page.

## Menu display

The **PROGRAM MENU** button controls multiple functions. Press the button to access its menu display.



### ■ Example of menu display: PROGRAM MENU

Select a function from the menu display by pressing the corresponding button to the left or right of the display indicated by the ◀ and ▶ arrows.




- In this manual, the steps describing how to select a function from a menu display are generally abbreviated as follows, for example: “On the PROGRAM MENU display, select SOUND.”

## Setting display

When you select an item from the menu display, the setting display for the item is shown.

The buttons to the right, left and/or directly below the display are used to select and adjust the settings.

### ■ Example of setting display: MASTER TUNING

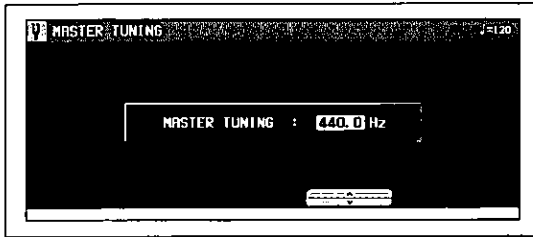


Press the button corresponding to the ^ or v button on the display to change the value.

- In this manual, this procedure is written as follows: "Use the ^ and v buttons to adjust the pitch."

## TEMPO/PROGRAM


If the **TEMPO/PROGRAM** indicator is lit while you are using the display to adjust the setting, it indicates that this dial can be used to quickly change the displayed value or setting.

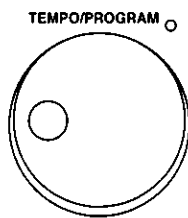

- The setting which can be adjusted is highlighted on the display.

## EXIT

While the setting display is shown, press this button to go back to the previous display.



## DISPLAY HOLD


Press this button to turn it on when you wish to maintain the current display. You can keep a display which is normally automatically canceled, for example, or even during a performance, you can monitor information which is not shown on the normal display.



- The indicator for this button may flash if the current display is one which is normally automatically canceled.
- If the **PROGRAM MENUS** button, for example, is pressed, the **DISPLAY HOLD** mode is canceled.

## CONTRAST

Use the **CONTRAST** to adjust the readability of the display.

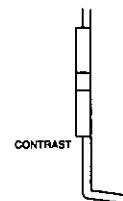

## HELP

You can find an explanation of each button's function on the display.

1. While the normal performance display is shown, press the **HELP** button.



- The following display appears.



2. Use the buttons below the display to select a language.

3. Press the OK button.

4. Press a button on the panel whose explanation you wish to read.

- An explanation of the button's function is shown on the display.

5. Press the **HELP** button again to exit the help mode.


- Attention display messages and error messages are also shown in the selected language.

- The appearance of the display on your instrument may be different from the illustrated display in this manual depending on the region in which your instrument was purchased and the selected display language.


## Favorites

You can record four different special displays of your favorite sounds and rhythms, functions, etc.

1. Press the **FAVORITES** button to turn it on.

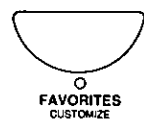


- The display looks similar to the following.

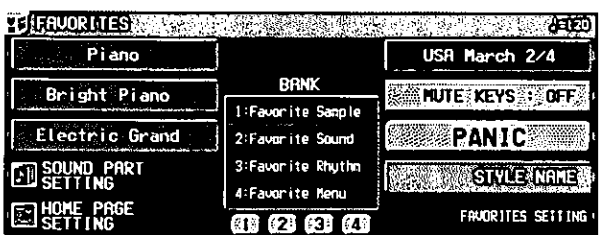

2. Press the **FAVORITES SETTING** button.

- The display looks similar to the following.

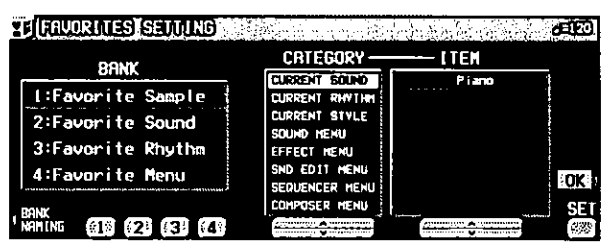


3. Use the number buttons to select a **BANK** number (1 to 4).

4. Select the desired item.


- Use the **CATEGORY** ^ and v buttons to specify a category, and then the **ITEM** ^ and v buttons to select an item.

- The **MUTE KEYS** function silences the sound of the keyboard keys. This is convenient when you wish to pretend to play the keyboard while playing back a recorded performance.

- The PANIC function interrupts the sound, for example, when it fails to cease during a MIDI performance.
  - The VOCALIST WORKSTATION function activates a special display when Digitech equipment of the same model is connected to this instrument.
5. While pressing the SET button, specify where you wish to paste (put) the item.
    - While the SET button is depressed, the display appears as shown below. Use the buttons to the left and right of the display to specify where you wish to paste the item.

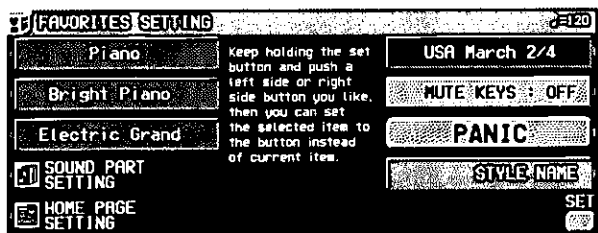

6. Repeat steps 4 and 5 to create the display you want.
  - There are nine settable items on the display.
7. On the FAVORITES SETTINGS display, press the OK button.
  - Your customized display is stored.
8. Press the BANK NAMING button.
  - The display looks similar to the following.

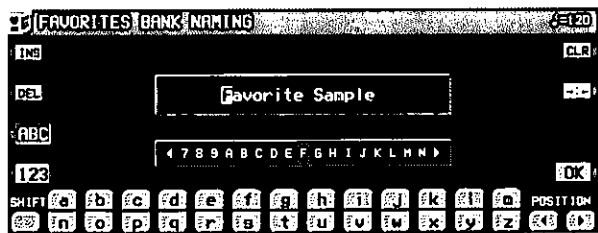

■ Recall a FAVORITES display

1. Press the FAVORITES button to turn it on.
2. Press the 1, 2, 3 or 4 button to specify the bank you wish to recall.
3. Use the buttons to the left and right of the display to specify the ITEM you wish to recall.
  - Press and hold the FAVORITES button for a few seconds to access the CUSTOMIZE feature, by which your customized instrument settings are activated. (Refer to page 161)
  - The FAVORITES settings can be saved to a disk.

9. Use the buttons below the display to assign a name to your customized display.
  - Press the ABC button to enter alphabetical characters. While the SHIFT button is pressed, upper case letters are entered.
  - Press the 123 button to enter numbers, etc. While the SHIFT button is pressed, you can enter symbols.
  - Press the POSITION button to move the cursor.
  - You can also use the TEMPO/PROGRAM dial to select the characters.
  - Press the INS button to enter a space at the cursor position.
  - Press the DEL button to erase the character at the cursor position.
  - Press the CLR button to erase the entire name.
  - Press the →← button to center the name.
10. When you have finished assigning a name to your customized display, press the OK button.

## Overview of sounds and effects

The following is an overview of the sound parts and the SOUND DSP (the basic effects) of this instrument.

### NX SOUND

NX SOUND is the Technics original sound generator format which evokes realtime performance quality and expressive power, and dramatically expands the number of sounds and effects generated. This format includes GM2 (General MIDI Level 2), and make various controls possible when data is created and reproduced by computer.

- For information about GM2, refer to page 119.
- Equipment with the logo shown below is compatible with NX SOUND song data.



### Part

This instrument is organized into the following parts.

#### RIGHT 1, RIGHT 2, LEFT:

These are the parts the performer plays on the keyboard.

- These are independent from the playback parts. For example one can to perform on the keyboard while playing back a song disk with 16-part standard MIDI files (SMF).

#### PART1 to 16:

SMF song disk playback parts, or parts for MIDI receive.

#### ACCOMP1 to 5, BASS, DRUMS 1, 2:

Parts for the automatic accompaniment.

#### PADS:

Parts for the PERFORMANCE PADS

### Sound DSP


This instrument employs five SOUND DSP's to create the sounds.

Three of them are for the RIGHT 1, RIGHT 2 and LEFT parts; for these parts you can use the SOUND DSP and select lifelike sounds.

The remaining two are used in the normal mode of the automatic accompaniment; the optimum effects for the selected rhythm are automatically set.

- The **DSP** for the ACCOMP parts can also be used for the **SEQUENCER** parts. (Refer to page 143.)
- The types and number of sounds that can be selected for parts that can use the **SOUND DSP** and parts that cannot use the **SOUND DSP** differ.


## Selecting sounds

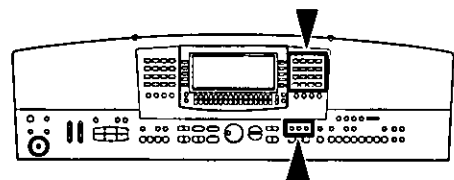

Select the sounds for the three parts you can play on the keyboard—**RIGHT 1**, **RIGHT 2** and **LEFT**. After first selecting a part and a **SOUND GROUP**, choose the desired sound from the display.

### Select a sound


1. In the **PART SELECT** section, choose **RIGHT 1**, **RIGHT 2** or **LEFT**.

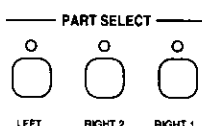

- The **CONDUCTOR** buttons are used to specify which part is heard. (Refer to page 36.)
- For the **RIGHT 1** and **RIGHT 2** parts, when a **CONDUCTOR** button is selected, the corresponding **PART SELECT** button is also activated.



- In the **SOUND GROUP** section, select a sound group.

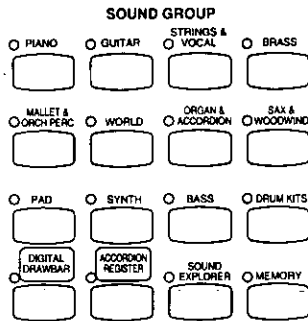

- The sounds in **DRUM KITS** are percussion sounds that you play by striking the keyboard keys.
- MEMORY** is reserved for storing sounds you modify. (Refer to page 144)

- Select the desired sound from the list on the display.



## SOUND EXPLORER

This is a convenient feature for finding the sound you want from the many available sounds.

- Press the **SOUND EXPLORER** button to turn it on.
- Use the buttons to the left and right of the display to select the sound.



- Use the  $\wedge$  and  $\vee$  buttons to select a **GROUP** of sound.
- Use the buttons on both side of the display to select the sound.
  - The numerical value that is displayed for each sound is the MIDI [BANK MSB, LSB]-PROGRAM CHANGE number.
- GM2 sounds are selected on this display.

- When you select a sound, the optimum effects for the sound are automatically applied. You can also choose to cancel this automatic feature. (Refer to page 141.)
  - You can use the **PAGE** buttons to view a different part of the list.
  - The sound you select is memorized for the part you selected in step 1.
  - The sounds that can be selected for the **RIGHT 1**, **RIGHT 2** and **LEFT** parts and for **PART 1-16** vary.
  - The illustrated display shows one example, and the actual display may be different.
- Play the keyboard.
    - This instrument features **INITIAL TOUCH** (the volume, for example, changes depending on how hard the keyboard is played) and **AFTER TOUCH** (effects are added by pressing the keys harder).

### ■ WAVE EXPANSION BOARD

If the **WAVE EXPANSION BOARD** (sold separately) has been installed, you can select those sounds after pressing the **EXP1** or **EXP2** button.


- Press **EXP1** to select the board installed in slot 1, or **EXP2** to select the board installed in slot 2.
- The sound names on the sound select display and normal display are differentiated by color as follows:

Built-in sounds: white  
 EXP1 sounds: yellow  
 EXP2 sounds: blue


# Digital Drawbar

You can play organ sounds while controlling the drawbars on the display.

1. In the **PART SELECT** section, select a part.
2. Press the **DIGITAL DRAWBAR** button to turn it on.

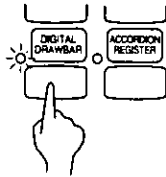

- The display looks similar to the following.

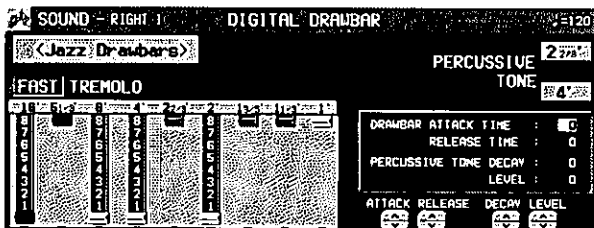

3. Use the balance buttons below the display to adjust the volume of each drawbar.
- The volume of each drawbar is illustrated on the display and changes when you press the corresponding balance buttons to adjust the volume.
  - The **DIGITAL DRAWBAR** can not be selected for the **ACCOMP** and **BASS** parts of the **COMPOSER** or **PERFORMANCE PADS**.

## ■ Change the sound type

Use the <Jazz Drawbars> / <Rock Drawbars> button to select the type of sound.

## ■ PERCUSSIVE TONE

**PERCUSSIVE TONE** adds a tone with a fast initial attack to the drawbar sounds. You can select two pitch levels of attack tones.

Use the **PERCUSSIVE TONE 2 2/3'** and **4'** buttons to turn the respective tone on or off.

- The buttons are red when they are on.

## ■ TREMOLO

Tremolo is a rapid oscillation in volume, like the effect of a rotating speaker. The tremolo speed can be changed while you are playing.

- The **SOUND DSP (ROTARY SPEAKER/ROCK ROTARY)** is used for the tremolo effect. This effect does not work if the **SOUND DSP** button is turned off.

Use the **TREMOLO** button to switch between the **SLOW** and **FAST** rotating speeds.

- The tremolo setting is effective for each part in common.
- The types of **SOUND DSP** used with the **TREMOLO** effect are as follows:  
Jazz Drawbars: **ROTARY SPEAKER**  
Rock Drawbars: **ROCK ROTARY**
- **TREMOLO** does not work for parts which cannot use the **SOUND DSP**.

## ■ Other settings

### DRAWBAR ATTACK TIME:

Use the **ATTACK** ^ and v buttons to adjust the time it takes for the drawbar sound to sound after a key is played.

### DRAWBAR RELEASE TIME:

Use the **RELEASE** ^ and v buttons to adjust the time it takes for the drawbar sound to die out after the keys are released.

### PERCUSSIVE TONE DECAY:

Use the **DECAY** ^ and v buttons to adjust the time it takes for the percussive tone to die out.

### PERCUSSIVE TONE LEVEL:


Use the **LEVEL** ^ and v buttons to adjust the volume of the percussive tone.

- The above settings are effective for the **RIGHT 1**, **RIGHT 2** and **LEFT** parts in common.

**About foot marks**

The foot indication (for example 8') refers to the pitch of a rank of pipes in a pipe organ. If 8' is used as the standard (the pitch as played on the keyboard), a 16' rank pitch will be one octave below the 8' rank pitch, and a 4' rank pitch one octave above.


When the C<sup>3</sup> key is pressed, the sounds of the different pitch ranks are as follows.

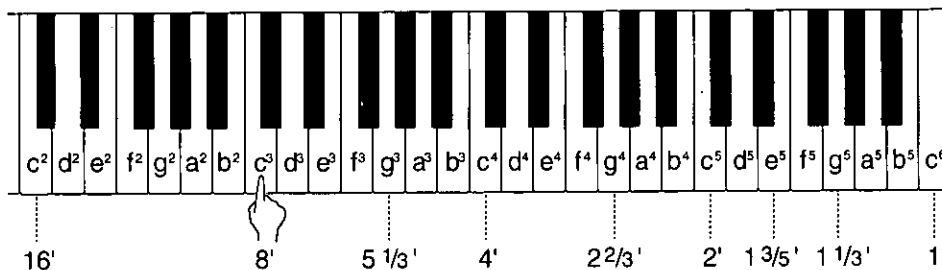

# Accordion Register

You can play accordion sounds on a special display.


1. In the **PART SELECT** section, select a part.

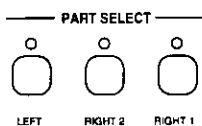

• The display looks similar to the following



2. Press the **ACCORDION REGISTER** button to turn it on.

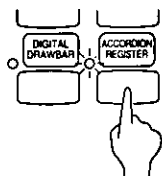


3. Use the TYPE  $\wedge$  and  $\vee$  buttons to select a type of accordion (GERMAN, ITALIAN).

4. Select the register (sound) from the lower display or from BASS1 and BASS2.

- The buttons are red when they are on.
- Only one register can be selected.

# Assigning parts to the keyboard

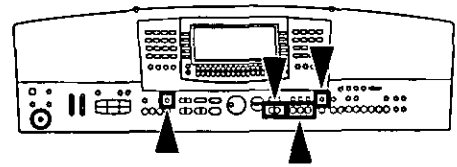

The **CONDUCTOR** buttons are used to assign the parts (**RIGHT 1**, **RIGHT 2**, **LEFT**) to the keyboard in many different ways. For example, you can split the keyboard into right and left sections (**SPLIT**), and assign a different sound to each section.


## CONDUCTOR

CONDUCTOR settings	How sounds are assigned to the keyboard
	All keys produce the <b>RIGHT 1</b> sound. <div style="border: 1px solid black; padding: 10px; text-align: center; width: 80%; margin: 10px auto;"> <b>RIGHT 1</b> </div>
	All keys produce the <b>RIGHT 2</b> sound. <div style="border: 1px solid black; padding: 10px; text-align: center; width: 80%; margin: 10px auto;"> <b>RIGHT 2</b> </div>
	All keys produce both the <b>RIGHT 1</b> sound and the <b>RIGHT 2</b> sound. <div style="border: 1px solid black; padding: 10px; text-align: center; width: 80%; margin: 10px auto;"> <b>RIGHT 1 + RIGHT 2</b> </div>
	The left keys produce the <b>LEFT</b> sound and the right keys produce the <b>RIGHT 1</b> sound and the <b>RIGHT 2</b> sound. <div style="display: flex; justify-content: space-around; margin: 10px auto;"> <div style="border: 1px solid black; padding: 10px; text-align: center; width: 30%;"> <b>LEFT</b> </div> <div style="border: 1px solid black; padding: 10px; text-align: center; width: 30%;"> <b>RIGHT 1 + RIGHT 2</b> </div> </div>
	The left keys produce the <b>LEFT</b> sound and the right keys produce the <b>RIGHT 1</b> sound. <div style="display: flex; justify-content: space-around; margin: 10px auto;"> <div style="border: 1px solid black; padding: 10px; text-align: center; width: 30%;"> <b>LEFT</b> </div> <div style="border: 1px solid black; padding: 10px; text-align: center; width: 30%;"> <b>RIGHT 1</b> </div> </div>
	The left keys produce the <b>LEFT</b> sound and the right keys produce the <b>RIGHT 2</b> sound. <div style="display: flex; justify-content: space-around; margin: 10px auto;"> <div style="border: 1px solid black; padding: 10px; text-align: center; width: 30%;"> <b>LEFT</b> </div> <div style="border: 1px solid black; padding: 10px; text-align: center; width: 30%;"> <b>RIGHT 2</b> </div> </div>

- The volume for each part can be adjusted independently. (Refer to page 27.)
- The following conditions are in effect when the **AUTO PLAY CHORD** is used.
  - **ONE FINGER** mode: The sounds assigned to the **LEFT** part are not produced when the left section of the keyboard is played.
  - **ONE FINGER, FINGERED** mode: You cannot assign sounds to all the keys.
  - **PIANIST** mode: The keyboard cannot be split.

## SPLIT POINT

When the keyboard is divided into left and right sections, the split point is indicated by the lit indicator. You can change the location of the split point.

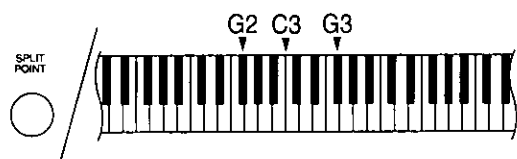

- Each time the **SPLIT POINT** button is pressed, the indication moves to the next split point in the following order. G2 → C3 → G3 → customized split point (all indicators off) (see below).


### ■ Customized split point

Use the following procedure if you wish to store a split point at a location other than G2, C3 or G3.

1. Press and hold the **SPLIT POINT** button for a few seconds.




- The following display appears.

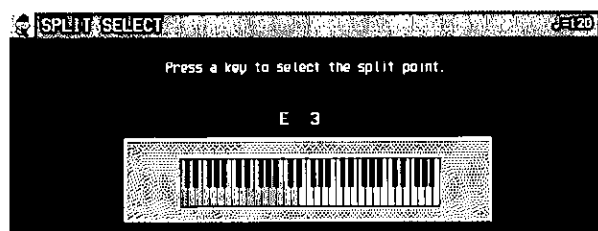

2. Press a key on the keyboard to specify the desired split point.
  - A split point is set at the location of the pressed key, and is indicated on the keyboard illustration on the display.
  - The key at the split point is the lowest note of the right keyboard section.
  - After a few seconds, the display exits the setting mode.

- Whenever the keyboard is split, you can select your customized split point by pressing the **SPLIT POINT** button until none of the split point indicators is lit. In this case, the customized split point is indicated on the display.

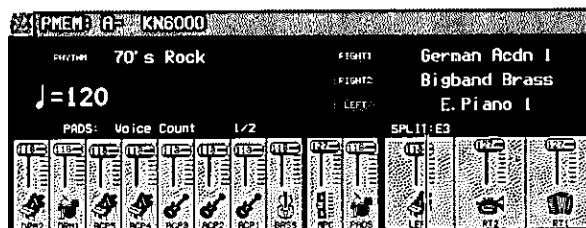


Customized split point

## RIGHT 1/RIGHT 2 OCTAVE

During your performance you can quickly change the octave of the **RIGHT 1** and **RIGHT 2** parts. Use this convenient function to expand the octave range of the keyboard, especially during a split-keyboard performance.

Use the **R1/R2 OCTAVE** buttons (+ and -) to change the octave.



- Press the + button to raise the pitch and the - button to lower the pitch (-2 to +2).
- The display looks similar to the following.



- You can also use the ^ and v buttons on the R 1/R 2 OCTAVE display to change the octave.
- The display returns to the previous display after a few seconds.
- A lit + or - indicator shows that the octave has been changed.
- To cancel the octave change, press both buttons at the same time.
- The note pitches (NOTE NUMBER) recorded in the **SEQUENCER** and during MIDI transmission are also affected by this octave setting. However, it does not affect **SEQUENCER** playback or received MIDI data.

## SOLO


Each part can be set to monophonic sound.

1. Select a part.
2. Press the **SOLO** button to turn it on.



- The sound of that part will be monophonic.
- This effect does not work for the sounds in the **DRUM KITS** sound group.
- When two **CONDUCTOR** parts, one with the **SOLO** turned on and one with the **SOLO** turned off, are mixed, then only the highest pitch of the played chord plays in the sound for which the **SOLO** is turned on.
- In the initialized condition, the **SOLO** is automatically turned on or off depending on the sound you select.

## Effects (PART)

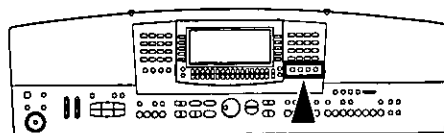

You can achieve even fuller and stirring sounds by adding various effects for each part.

### SUSTAIN

**SUSTAIN** is the gradual fading out of musical tones after the key is released.

1. In the **CONDUCTOR** or **PART SELECT** section, turn on the part to which this effect will be applied.
2. Press the **SUSTAIN** button to turn it on.



- The **SUSTAIN** can be set to on or off for each part.
- This effect does not work for the sounds in the **DRUM KITS** sound group.
- This effect may not work for some sounds.
- In the initialized state, the sustain can be turned on and off with the optional Foot Switch (1) (sold separately).

### DIGITAL EFFECT

**DIGITAL EFFECT** gives the sound richness and enhances your performance.

1. In the **CONDUCTOR** or **PART SELECT** section, turn on the part to which this effect will be applied.
2. Press the **DIGITAL EFFECT** button to turn it on.




- The on or off status of the **DIGITAL EFFECT** is preset for each sound.
- This effect does not work for the sounds in the **DRUM KITS** sound groups.
- This effect may not work for some sounds.

## SOUND DSP

The **SOUND DSP** works like a studio effects processor, providing effects such as CHORUS, PHASER, DELAY and DISTORTION.

- There are five **SOUND DSP** groups, consisting of three for RIGHT 1, RIGHT 2 and LEFT, and two for the automatic accompaniment or **SEQUENCER**.

1. In the **CONDUCTOR** or **PART SELECT** section, turn on the part to which this effect will be applied.
2. Press the **SOUND DSP** button to turn it on.



- You can turn on the **VARIATION** button to change the nuance of the effect.
- For the **RIGHT 1**, **RIGHT 2** and **LEFT** parts, when the **DIGITAL DRAWBAR** is on, this button is used to specify the tremolo effect type (**ROTARY SPEAKER/ROCK ROTARY**).

### ■ Type and parameter settings

1. Press and hold the **SOUND DSP** button for a few seconds.
- The display changes to the following.



2. Use the **PART**  $\wedge$  and  $\vee$  buttons to select the **SOUND DSP** you wish to set.
  - Only parts that can use the **SOUND DSP** can be selected.
3. Use the  $\wedge$  and  $\vee$  buttons to select an effect group.
  - The **EFFECT MEMORY** is for edited effects (see below).
4. Use the buttons to the left and right of the display to select the type.
  - If the types comprise more than one display "page," use the **PAGE** buttons to switch pages.

5. Use the **DEPTH**  $\wedge$  and  $\vee$  buttons to set the depth of the effect.
  - The depth does not change for some types.
  - This display can also be accessed from the **REVERB & EFFECT MENU** display. (Refer to page 142.)

### ■ EFFECT EDIT

The effects can be edited and then stored in a memory.

- **MEMORY LIST** is used to store all **SOUND DSP** groups.


1. Select an effect type to use as a base.
2. Press the **EDIT** button.
  - The display changes to the following.



3. Use the **PARAMETER**  $\blacktriangle$  and  $\blacktriangledown$  buttons to select the parameter.
  - Parameters with a (V) mark are effective when the **VARIATION** button is turned on.
4. Use the **VALUE**  $\wedge$  and  $\vee$  buttons to adjust the setting.
5. Press the **NAMING** button and assign a name to the effect, if necessary.
  - Refer to page 31 for details about the **NAMING** procedure.
6. Use the **EFFECT MEMORY**  $\blacktriangle$  and  $\blacktriangledown$  buttons to specify the location in which to store the edited effect.
7. Press the **WRITE** button.
  - The parameters vary depending on the effect type selected as the base.



# Effects (GLOBAL)

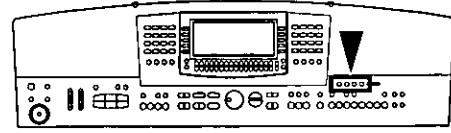

You can apply effects to the whole instrument.

## REVERB


**REVERB** applies a reverberation effect to the sound.

Press the **REVERB** button to turn it on.



### ■ Type and parameter settings

1. Press and hold the **REVERB** button for a few seconds.
- The display changes to the following.

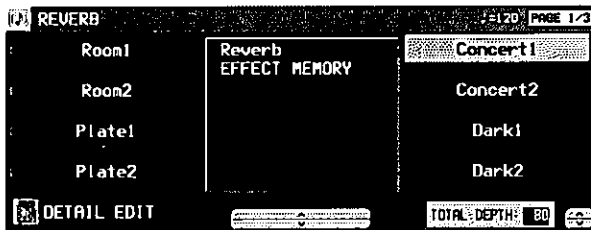

2. Use the  $\wedge$  and  $\vee$  buttons to select an effect group.
  - The **EFFECT MEMORY** is an edited effect group.
3. Use the buttons to the left and right of the display to select a type.
4. Use the **TOTAL DEPTH**  $\wedge$  and  $\vee$  buttons to set the depth of the effect.
  - This display can also be accessed from the **REVERB & EFFECT MENU** display. (Refer to page 142.)

### ■ DETAIL EDIT

Your edited effect can be stored in a memory for later recall.

- The procedure is the same as for **SOUND DSP**. (Refer to page 40.)

## CHORUS


Add breadth to the sound.

Press the **CHORUS** button to turn it on.



### ■ Type and parameter settings

1. Press and hold the **CHORUS** button for a few seconds.
- The display looks similar to the following.

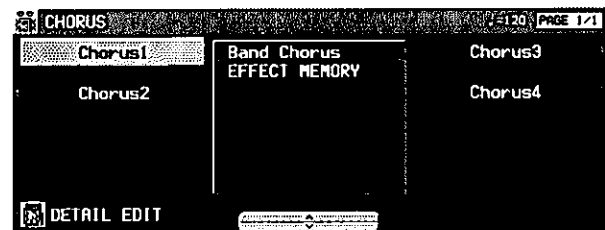

2. Use the  $\wedge$  and  $\vee$  buttons to select the name of the effect group.
  - **EFFECT MEMORY** is an edited effect group.
3. Use the buttons to the left and right of the display to select a type.

### ■ DETAIL EDIT

Your edited effect can be stored in a memory for later recall.

- The procedure is the same as for **SOUND DSP**. (Refer to page 40.)

## MULTI

Various effects can be applied.

Press the **MULTI** button to turn it on.



### ■ Type and parameter settings

1. Press and hold the **MULTI** button for a few seconds.
  - The display looks similar to the following.



2. Use the  $\wedge$  and  $\vee$  buttons to select the name of the effect group.
  - EFFECT MEMORY is an edited effect group.
3. Use the buttons to the left and right of the display to select a type.

### ■ EDIT


Your edited effect can be stored in a memory for later recall.

- The procedure is the same as for **SOUND DSP**. (Refer to page 40.)
- If a type from the **VOCAL** group was selected, the **REVERB** works for the **MIC REVERB**.

## MIC

You can add reverb and other effects to sound from a connected microphone.

1. Connect a microphone to this instrument. (Refer to page 178.)
2. Press the **MIC** button to turn it on.



- Reverb is added to your voice.
- Use the **MIC VOLUME** to adjust the microphone volume.

### ■ Effect settings

Adjust the settings of the reverb and effects that are applied to the mic.

- In addition to the special reverb for the mic input, the **MULTI** effect can be applied to the mic input.

1. Press and hold the **MIC** button for several seconds.
  - The display looks similar to the following.



2. Set the **MIC REVERB**.
  - Use the **PARAMETER**  $\blacktriangle$  and  $\blacktriangledown$  buttons to select an attribute, and use the **VALUE**  $\wedge$  and  $\vee$  buttons to adjust the corresponding setting.
  - For some **MULTI EFFECT** settings the effect does not change.
  - You can specify whether or not to apply the reverb with the **MIC REVERB ON/OFF** button:
3. Set the **MULTI EFFECT**.
  - Use the buttons to the left of the display to set the type of effect.
    - BRASS SIMULATOR 1, 2:** Your voice is converted to the sounds of brass instruments.
    - HARMONIZER 1, 2:** Harmony is added to your voice.
  - You can use the **MULTI EFFECT OFF/ON** switch to specify whether or not to apply the effect.

Sounds and effects

- If the HARMONIZER type was selected on this display, or if the HARMONIZER type was selected for the MULTI EFFECT SET, Use the HARMONIZER PART  $\wedge$  and  $\vee$  buttons to specify the part to which the harmony is to be applied. If you wish to mute that part, press the MUTE button to turn it on.
- If either BRASS SIMULATOR or HARMONIZER is selected on this display, the MULTI effect is applied exclusively to the MIC. Note that the MULTI effect applied to other parts is turned off.

### ■ MULTI EFFECT SET

You can select other types that can be set with MULTI. Select the types by pressing this button.


- If a type other than a VOCAL group type is selected, the normal REVERB, not the MIC REVERB, may be applied. In this case, the effect does not change even if the MIC REVERB setting is adjusted.

## Controller

Use the controller to change the nuance of the sound while you are playing.

### SOUND CONTROLLER

By operating this controller, the nuance and effects of the sound can be changed in various ways.

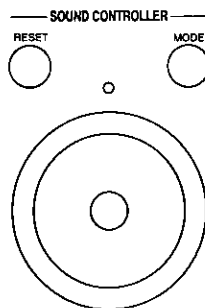


- The controller is moved vertically (Y) and horizontally (X) to change the sound.
- The way to change the sound is different for **MODE** (see below) setting.
- When the **SOUND CONTROLLER** position coincides with the actual effect, the indicator lights.
- This effect does not function for the **AUTO PLAY CHORD** accompaniment pattern or during a normal performance for the sounds of the **LEFT** part.
- Press the **RESET** button to return to the initial sound. (PAN returns to the standard condition.)

### ■ MODE

You can select specific effect elements to change.

1. Press the **MODE** button to turn it on.
  - The display looks similar to the following.

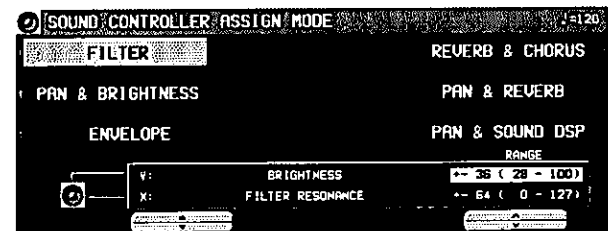

2. Use the buttons to the left and right of the display to select the effect element you wish to change.
  - You can use the buttons below the display to adjust the maximum vertical and horizontal change. Use the  $\blacktriangle$  and  $\blacktriangledown$  buttons to select the direction, and use the RANGE  $\wedge$  and  $\vee$  buttons to select the range. This setting is effective for all modes in common.
  - The display returns to the previous display after a few seconds.

## PITCH BEND

The pitch of the instrument can be continuously changed with the **PITCH BEND** wheel at the left end of the keyboard. Using this control, you can produce the effect of bending the strings on a guitar.

While pressing a key on the keyboard, move the wheel up and down to control the pitch.



- When you release your hand from the wheel, it returns automatically to the center position and the pitch bend effect is turned off.
- The pitch bend effect does not function for the **AUTO PLAY CHORD** accompaniment pattern or during a normal performance for the sounds of the **LEFT** part.
- The amount of pitch bend can be set. (Refer to page 135.)

## MODULATION


The **MODULATION** wheel is used to apply a vibrato effect, for example, to the sound.

While pressing a key on the keyboard, move the wheel up to add the effect.




- When this effect is not needed, set the **MODULATION** wheel to the **MIN** position.
- This effect differs depending on the selected sound.
- The vibrato effect does not function for the **AUTO PLAY CHORD** accompaniment pattern or during a normal performance for the sounds of the **LEFT** part.

# Transpose

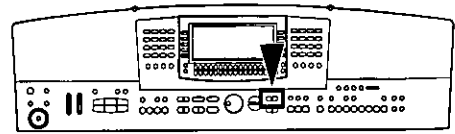


The **TRANPOSE** buttons are used to change the key of the entire instrument in semi-tone steps across an entire octave.

Suppose you learn to play a song—in the key of C, for example—and decide you want to sing it, only to find that it's either too high or too low for your voice. Your choice is to either learn the song all over again in a different key, or to use the **TRANPOSE** feature.



Adjust the key with the + and – buttons.

- The key is changed in half-tone increments up to plus or minus one octave.
- If the two buttons are pressed at the same time, the key returns to C.
- When the **TRANPOSE** function is active, the transposed key is shown on the display, and the + or – indicator is lit.

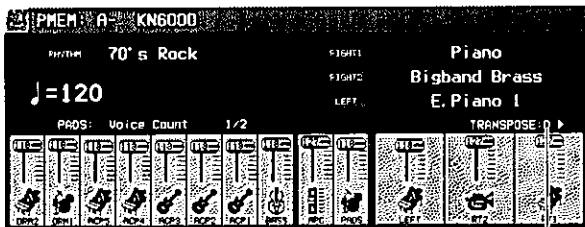


Actual key

<Example: transposed to D>

<p>Played keys</p> <p>C major</p>	<p>→</p>	<p>Notes that sound</p> <p>D major</p>
-----------------------------------	----------	--

Sounds and effects

# Techni-chord

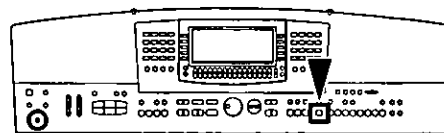

**TECHNI-CHORD** turns your single note melodies into full chords and offers you a choice of different types from a simple duet which adds one harmony note to your melody note, to big band reeds which adds four harmony notes to your melody note. If **TECHNI-CHORD** is part of a **ONE TOUCH PLAY** or **MUSIC STYLIST** registration, a suitable **TECHNI-CHORD** type will be selected automatically.


Example:

Left hand (chord)

Right hand (melody)




1. Split the keyboard into left and right sections.
2. Press the **TECHNI-CHORD** button to turn it on.



3. Play the keyboard.
  - The melody you play with your right hand is automatically played in chords which are based on the chords you play with your left hand.
  - This effect does not work for a part for which **SOLO** has been turned on.
  - This feature is very effective when used with the **AUTO PLAY CHORD**.

## Type setting

1. Press and hold the **TECHNI-CHORD** button for a few seconds.
  - The display looks similar to the following.

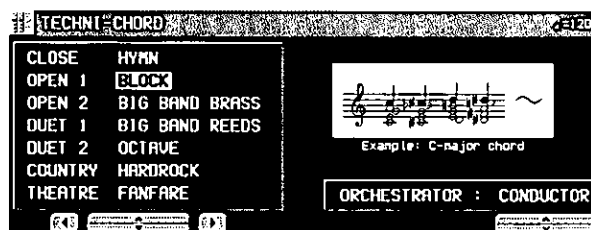

2. Use the ◀, ▲, ▼, ▶ buttons to select the harmony style.
  - When the **OCTAVE**, **HARD ROCK** or **FANFARE** style is selected, the **TECHNI-CHORD** functions even when the keyboard is not split.

## ■ ORCHESTRATOR

You can specify which part is used for the harmony tones. Your **TECHNI-CHORD** performance is enhanced by selecting harmony sounds different from the sounds you play and the sounds produced by the automatic accompaniment.

Use the ^ and v buttons to select the part for the harmony notes.

- If **CONDUCTOR** is selected, the harmony notes are produced in the sounds of the part which is currently selected in the **CONDUCTOR (RIGHT 1, RIGHT 2)**. In other words, the harmony notes are produced in the same sound as the melody notes. If both **RIGHT 1** and **RIGHT 2** are on, the harmony notes are produced in the sound of the **RIGHT 1** part.

- In the case of **EASY RECORD** (see page 76), when set to **CONDUCTOR** or a part other than **PART 4**, the **TECHNI-CHORD** sound is not recorded; so when you use **EASY RECORD**, please set to one or the other.

# Part II Playing the rhythm

## Overview of rhythm performance

An explanation follows of the terms related to this instrument's rhythm performance.


### Rhythm and accompaniment pattern

Each rhythm is comprised of not only a **DRUMS** pattern, but also of accompaniment patterns called **BASS** and **ACCOMP**. The combination of all of these is the rhythm.

- The accompaniment pattern sounds when you perform using the **AUTO PLAY CHORD (APC)**. (Refer to page 51.)

### Rhythm and Style

One rhythm of this instrument is comprised of four **VARIATION** patterns, and for each one the optimum sounds and effects are set. All of these together comprise one **STYLE**.

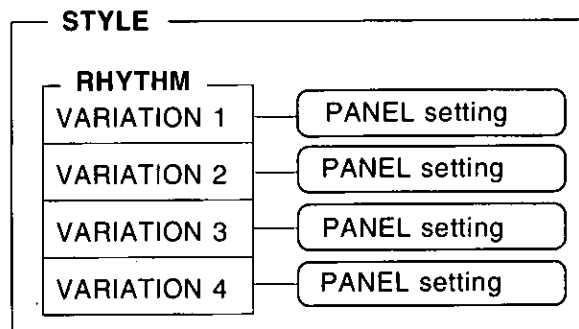

- In the **MUSIC STYLIST** (page 60) and **MUSIC STYLE ARRANGER** (page 62) etc. this **STYLE** is summoned.

### Custom Style

You can create your own styles, load styles from a floppy disk, and store them in a special area of the memory called **CUSTOM**. The stored style is called the **CUSTOM STYLE**.

#### ■ Create a CUSTOM STYLE


Here is the procedure to create a new style.

1. Store the sound and effect settings in bank A, B or C of the **PANEL MEMORY (1 – 4)**. (Refer to page 63.)
  - You may also store the automatic settings, such as **MUSIC STYLIST** settings.
2. Create a rhythm in **MEMORY A, B or C** of the **COMPOSER**. (Refer to page 106.)
  - The banks (A, B, C) are linked, so use them together. For example, if you are using bank A of the **PANEL MEMORY**, then create the rhythm in **MEMORY A** of the **COMPOSER** as well.
  - You may also use the **COPY** function to copy a favorite preset rhythm.
  - Make the **VARIATION** number correspond to the **PANEL MEMORY** number (1 to 4) when you create your rhythm.
3. Use **CUSTOM STYLE COPY** to copy the style to the **CUSTOM** area.

#### ■ CUSTOM STYLE LOAD

Perform the **CUSTOM STYLE LOAD/SAVE** procedure. (Refer to page 130.)


# Selecting rhythms

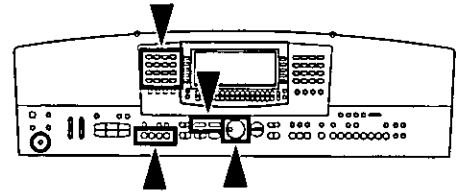

Many exciting rhythms are stored in the memory of this instrument. First select one of the rhythm groups and then choose the desired rhythm.

## Select a rhythm

1. In the **RHYTHM GROUP** section, select a rhythm group.

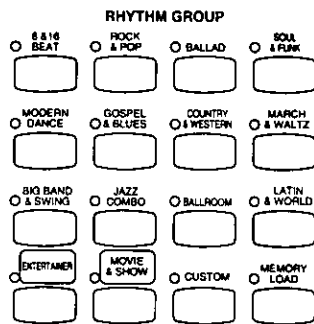

- **MEMORY** is the group in which you store the rhythms you create with the **COMPOSER**. (Refer to page 104.)
- For more information about the **CUSTOM** button, refer to page 104.


2. Select the desired rhythm from the list on the display.



- If there is more than one page to the display, use the **PAGE** buttons to move from one screen page to another.

## VARIATION

There are four variations available for each rhythm. Use the **VARIATION & MSA** buttons to select the desired variation.

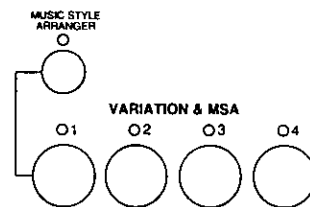

- Confirm that the **MUSIC STYLE ARRANGER** button is off. (If it is on, press it once to turn it off.)
- The nuance of the pattern differs with each variation number.
- You can change to a different variation while the rhythm is playing.

Playing the rhythm




## Start the rhythm

There are two ways to start the rhythm.

### ■ Normal start

1. Select a rhythm.
2. Press the **START/STOP** button to turn it on.




- The selected rhythm pattern immediately begins to play.
- You can stop the rhythm by pressing the **START/STOP** button again to turn it off.
- The **BEAT** indicators above the **START/STOP** button light to indicate the beat.

### ■ Synchronized start

With the synchronized start feature, the rhythm pattern starts when you play a key on the keyboard.


1. Select a rhythm.
2. Press the **SYNCHRO & BREAK** button to turn it on.



3. Play a key to the left of the keyboard split point.
  - The rhythm pattern begins to play.
  - You can use the synchronized start feature even when the keyboard is not divided into left and right sections. To start the rhythm, press a key to the left of the specified split point.

### ■ Adjust the tempo


The tempo of the rhythm pattern is adjusted with the **TEMPO/PROGRAM** dial.

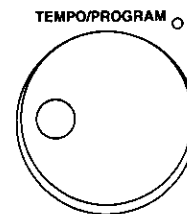

- The tempo is shown on the display as a numerical value (♩ = 40 to 300).
- When the **TEMPO/PROGRAM** indicator is lit, the **TEMPO/PROGRAM** cannot be used to adjust the tempo.
- To adjust the tempo during playback, refer to page 80.


### ■ TAP TEMPO

You can set the tempo of the rhythm by tapping this button few times with your finger at the tempo you wish to play.



- The tempo at which the button is tapped is detected, and the tempo automatically changes correspondingly.

# Playing the rhythm

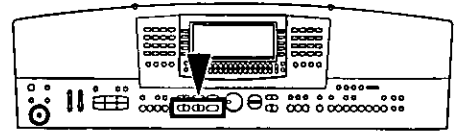


Intro, fill-in and ending patterns fitting each different rhythm pattern are permanently recorded in your Keyboard, thus allowing a versatile rhythm performance.


## INTRO

Begin the rhythm performance with an intro pattern.

1. Press the **INTRO & ENDING 1** or **INTRO & ENDING 2** button to turn it on.



2. Press the **START/STOP** button to start the rhythm.




- An intro pattern is played, after which the normal rhythm pattern begins.

## COUNT INTRO

You can begin the rhythm performance with a spoken one-measure count.

1. Press the **COUNT INTRO (FILL IN 2)** button to turn it on.




2. Press the **START/STOP** button to start the rhythm.

- A spoken one-measure count is played, after which the normal rhythm pattern begins.


## Mode setting

You can select the mode for the count sound.

1. Press the **MODE** button in the **AUTO PLAY CHORD** section to turn it on.

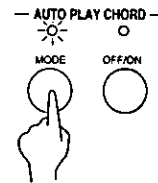

- The display looks similar to the following.

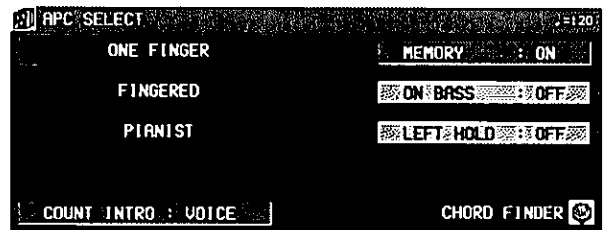


2. Use the **COUNT INTRO** button to select a mode.

**VOICE:** A spoken count (initialized setting).  
**CLICK:** A clicking sound for the count.

## FILL IN

You can insert a fill-in pattern any time during the rhythm performance. Choose from two different fill-in patterns.

1. Select a rhythm and press the **START/STOP** button.
2. Press the **FILL IN 1** or **FILL IN 2** button.

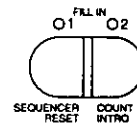


- A fill-in pattern is heard immediately for the remainder of the measure.
- When a **FILL IN** button is pressed on the last beat of the measure, the fill-in pattern continues to the end of the following measure.

## ENDING


Finish the rhythm performance with an ending pattern.

1. Select a rhythm and press the **START/STOP** button.
2. Press the **INTRO & ENDING 1** or **INTRO & ENDING 2** button to turn it on.




- An ending pattern is produced, and then the rhythm performance stops.
- If you accidentally press the **INTRO & ENDING** button in the middle of the tune, you can press the **FILL IN 1** or **FILL IN 2** button. The ending pattern stops, and a fill-in pattern is produced, after which the normal rhythm performance continues.

## Auto Play Chord

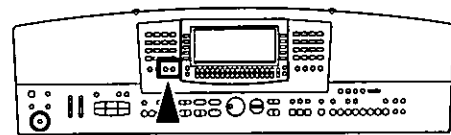

Simply by playing a chord on the keyboard, the **AUTO PLAY CHORD** function automatically plays an accompaniment pattern which matches perfectly the selected rhythm. With a real accompaniment as a background, you can concentrate on playing the melody.

### How the AUTO PLAY CHORD works

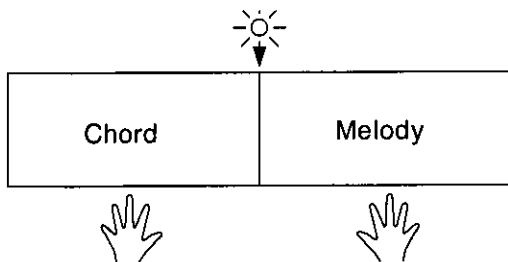

When an **AUTO PLAY CHORD** mode is selected, an automatic accompaniment which matches the rhythm you have chosen is played in the chord which you specify with your left hand. The melody is played with your right hand.

- The accompaniment pattern of the **AUTO PLAY CHORD** is composed of 8 parts: **DRUMS 1, 2, BASS, ACCOMP 1-5**.
- The volume of each part can be adjusted with the buttons below the display. (Refer to page 27.)


## Playing chords

Choose from three ways of playing chords.




### ■ ONE FINGER mode

In the ONE FINGER mode, a major chord can be played just by pressing the key for its root note.

Example: C chord

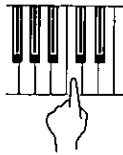


Minor, seventh and minor seventh chords are also easily produced.

minor chord	seventh chord	minor seventh chord
Play the root note plus a black key to the left of it.	Play the root note plus a white key to the left of it.	Play the root note plus a black key and a white key to the left of it.
Example: Cm 	Example: C7 	Example: Cm7 

### ■ FINGERED mode

In the FINGERED mode, you specify the chord by playing all the notes in the chord.



- Play at least three notes to specify the chord.
- If the CHORD FINDER procedure is used, you can see the types of chords that can be specified and the keys you press to play them. (Refer to page 55.)

### ■ PIANIST mode

In the PIANIST mode, the entire keyboard can be used to specify chords (FINGERED mode) for the automatic accompaniment; a **RIGHT** part is assigned to all the keys, and the keyboard does not split.

- If the CHORD FINDER procedure is used, you can see the types of chords that can be specified and the keys you press to play them. (Refer to page 55.)
- When specifying chords, if you press a key a perfect 5th or more below the lowest note of the chord, the **BASS** part becomes a pattern based on that note.


### <APC HOLD>

If this function is assigned to the Foot Switch (sold separately), then during a performance in the PIANIST mode, for example, pressing the Foot Switch will play the currently specified chord in that timing, allowing you to focus your performance on a solo melody.


- The accompaniment continues in the same chord as long as the Foot Switch is depressed, and it does not change even if other chords are played.
- To change the Foot Switch assignment, refer to page 159.

## How to use the AUTO PLAY CHORD

1. Select the desired rhythm and sound(s), and set the tempo.
2. Press the **AUTO PLAY CHORD's OFF/ON** button to turn it on.

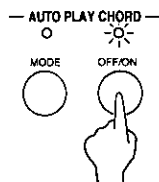

3. Press the **AUTO PLAY CHORD's MODE** button to turn it on.
  - The display looks similar to the following.

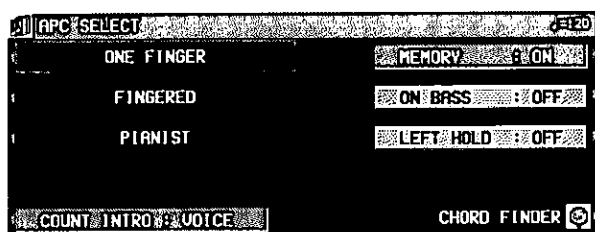

4. Select an **AUTO PLAY CHORD** mode (**ONE FINGER**, **FINGERED** or **PIANIST**).
  - After a few seconds, the display returns to the previous display.
  - If the **ONE FINGER** or **FINGERED** mode was selected, the keyboard automatically splits into right and left sections.

### ■ MEMORY

When the **MEMORY** button is **ON**, even when the keys are released, the chord is memorized and the accompaniment continues to play until you specify another chord.

### ■ ON BASS


If the **ON BASS** button is **ON** while the **FINGERED** or **PIANIST** mode is selected, the **BASS** part is produced in the key of the lowest note of the played chord, thus making it possible to play chords such as **C** on **G**.

- For example, with the **ON BASS** button on, if you play a **C** chord by pressing the keys **G**, **C** and **E**, the **BASS** part is produced in the key of **G**.

### Example of how to play a **ONE FINGER** accompaniment

Play the melody with your right hand.

Left hand

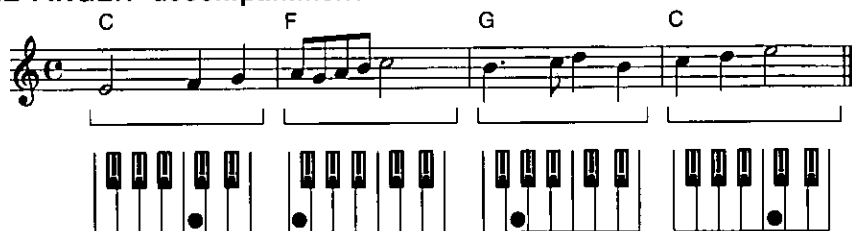

5. Press the **START/STOP** button to begin the rhythm.

- You can start the rhythm by playing a key on the keyboard. (Refer to page 49.)

6. Specify a chord.

- If the **ONE FINGER** or **FINGERED** mode was selected, specify the chord on the keyboard section to the left of the split point.

- An accompaniment pattern in the specified chord is automatically played. Play the melody with your right hand.

- When you use **FILL IN**, **INTRO** and **ENDING**, the automatic accompaniment is also used in these patterns.

- In the **ONE FINGER** mode, the sound assigned to the left section of the keyboard (**LEFT** part) does not sound in the initialized condition.

- You can set the mode which determines how the **LEFT** part sounds during an **AUTO PLAY CHORD** performance. (Refer to the next page.)

- In the initialized condition, when the rhythm is off, if an **AUTO PLAY CHORD** mode is on and a chord is specified, the specified root note (**R. BASS** part) and chord notes (**CHORD** part) are produced. The volumes of these notes can be adjusted. (Refer to page 135.)


7. To stop the automatic accompaniment, press the **START/STOP** button.

- If you wish the automatic accompaniment to begin and end the performance, set the **OFF/ON** button to off.

## Left Hold

This setting determines how the **LEFT** part sounds when the **LEFT** button in the **CONDUCTOR** is on during a performance with the **ONE FINGER** or **FINGERED** mode.

1. Press the **MODE** button to turn it on.
  - The display changes to the following.

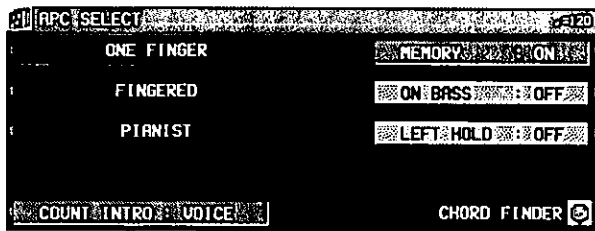

2. Use the **LEFT HOLD: ON/OFF** button to set the mode to on or off.

### ■ OFF

#### ONE FINGER:

The **LEFT** part turns off.

#### FINGERED:

The **LEFT** part sounds from the pressed chord keys.

- When you select the **ONE FINGER** mode, the **LEFT** button in the **CONDUCTOR** section turns off automatically.

### ■ ON

#### ONE FINGER:

The **LEFT** part produces the full chords.


#### FINGERED:

The **LEFT** part sounds from the pressed chord keys.

- Touch response does not function for the **LEFT** part.
- When the **MEMORY** button is on, even when the keys are released, the **LEFT** part sound continues to play.

## APC VOLUME

To adjust the volume balance between the automatic accompaniment and the parts you play manually on the keyboard, the volume of all the automatic accompaniment parts (**DRUMS**, **ACCOMP**, and **BASS**) can be lowered as one.

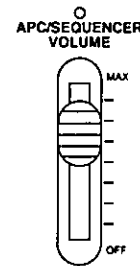


Use the **APC/SEQUENCER VOLUME** slide control to adjust the volume.

- Use this control to lower the automatic accompaniment volume when it is too loud relative to your manual performance.
- At the **MAX** position, the volumes of the automatic accompaniment parts correspond to their current settings; at the **OFF** position, the volume is 0. The volume should normally be set to **MAX**.
- The set values are shown in the APC column of the normal display. (Refer to page 27.)
- The volume can be adjusted for each part. (Refer to page 27.)
- When the position of the slide control coincides with the actual volume, the indicator is lit. When the volume is changed by of the **PANEL MEMORY** or **SEQUENCER** playback, the actual volume differs from that indicated by the position of the slide control. In this case, the indicator is not lit.
- The volume of the **PERFORMANCE PADS** part does not change.
- During **SEQUENCER** playback or disk **DIRECT PLAY**, operation of this slide control affects the total volume of all the playback parts.


## CHORD FINDER

The CHORD FINDER can help, for example, when you do not know which keys to press to specify a given chord. When you input the chord name, the CHORD FINDER shows you which keys to press and even lets you hear the notes that make up.

1. Press the **AUTO PLAY CHORD's** **MODE** button to turn it on.

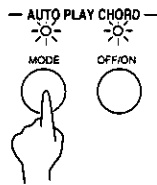


- The display changes to the following.

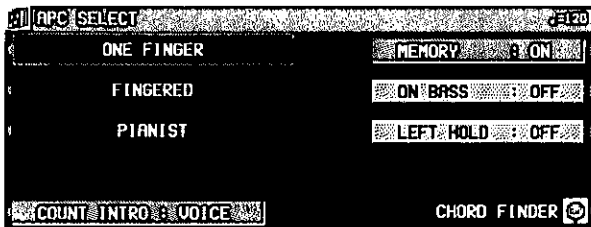


2. Select **CHORD FINDER**.

- The display changes to the following.

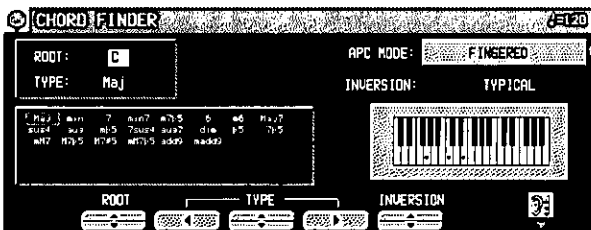

3. Use the **APC MODE** button to select the automatic accompaniment mode you will use to specify chords (**FINGERED**, **PIANIST**).
  - In the list column are shown the chords which can be specified in each mode.
4. Use the **ROOT** buttons to select the root note of the chord. Use the **TYPE** buttons to select the type of chord.
  - A typical way to finger the specified chord (**TYPICAL**) is illustrated on a keyboard diagram.
  - Each time the **INVERSION** button is pressed, different **INVERSION** fingerings are illustrated in order. (If there is no **INVERSION** fingering for the specified chord, this button is not shown on the display.)
  - When the button with a picture of an ear is pressed, the notes of the chord sound. (The octave of the illustrated keys and that of the played tones may differ.)
5. To exit the **CHORD FINDER** procedure, press the **EXIT** button.




Playing the rhythm

## BREAK function

With the break function, the rhythm starts when the left keyboard is played and stops when the fingers are removed from the keys.


1. Select an **AUTO PLAY CHORD** mode.
  - At this time, the **MEMORY** button should be **OFF**.
2. Press the **SYNCHRO & BREAK** button to turn it on.



3. Specify a chord.
  - The automatic accompaniment begins to play (synchronized start).
  - For the **PIANIST** mode, play the keys to the left of the currently set split point.

4. Release the chord keys.
  - The automatic accompaniment stops. When the keys are pressed again, the rhythm starts from the first beat.

## Fade In/Fade Out

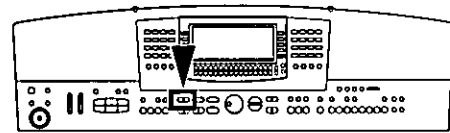


Add interest to your performance by starting a part with a fade-in or ending it with a fade-out.

### FADE IN

At the beginning of the song, the volume of each part rises slowly.

1. Set up the panel settings for your performance.
2. Turn on the **FADE IN** button.

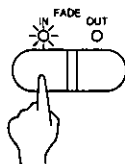

- The indicator flashes. In this condition, the volumes for all parts change to 0 and no sound is produced from this instrument until the **FADE IN** is turned off or until step 3 is executed.


3. Play the keyboard or press the **START/STOP** button.
  - The volume slowly builds to its preset level.
  - For the fade-in effect for a rhythm part or when playing back a **SEQUENCER** performance, turn on the **FADE IN** button before pressing the **START/STOP** button.
  - At the end of the fade-in, the **FADE IN** indicator goes out.
  - During the fade-in, **FADE IN** is shown in the upper right part of the normal display.



## FADE OUT

At the end of the song, the volume of each part gradually fades to nothing.

1. Start the performance.
2. Turn on the **FADE OUT** button at the point you want the fade-out to start.




- The volumes of all the parts slowly fade to 0.
- The indicator flashes to show that fade-out is completed, and then goes out. The volumes for all parts return to their specified settings.
- If you wish to interrupt the fade-out, press the **FADE OUT** button to turn it off.


## FADE SET

Adjust the settings for the FADE IN and FADE OUT.

1. Press and hold the **FADE IN** or **FADE OUT** button for a few seconds.



- The display looks similar to the following.

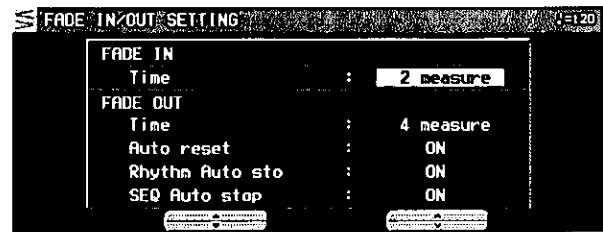

2. Use the ▲ and ▼ buttons to select the item. Use the ^ and v buttons to change the setting.

### FADE IN

Time:

Specify the time elapsed between 0 volume to the set volume (1 measure to 16 measure).

### FADE OUT

Time:

Specify the time elapsed between the set volume and 0 volume (1 measure to 16 measure).

Auto Reset:

Specify whether the volume of each part automatically returns to its specified setting (ON, OFF).

Rhythm Auto stop:


Specify whether the rhythm turns off after fade-out is completed (ON, OFF).

SEQ Auto stop:

Specify whether the **SEQUENCER** playback automatically stops after fade-out is completed (ON, OFF).


- The display returns to the previous display a few seconds after you have changed the settings.
- You can also access this display from the CONTROL MENU display. (Refer to page 158.)

# Sound Arranger

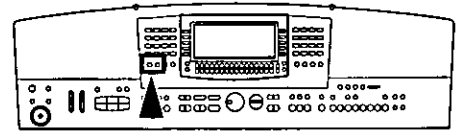

The **SOUND ARRANGER** feature lets you select other sounds for the **AUTO PLAY CHORD** parts of each rhythm.


1. Select the rhythm whose sound you wish to change.
  - Do not select the **MEMORY** or **CUSTOM** button.
2. In the **SOUND ARRANGER**, press the **SET** button to turn it on.

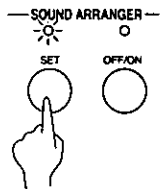

- The display looks similar to the following.


SOUND ARRANGER		
PART	SOUND	DIGITAL EFF
DRUMS1	Pop Kit 1c	---
DRUMS2	Standard Kit1	---
BASS	Funky E. Bass	OFF
ACCOMP1	Funk Mute Guitar	OFF
ACCOMP2	Mute Guitar	OFF
ACCOMP3	Bright Piano	OFF
ACCOMP4	Analog Syn. Brass	OFF
ACCOMP5	SymphonicStrings	OFF

3. Use the **▲** and **▼** buttons to select the part whose sound you wish to change.
4. Select the desired sound.
  - The **DIGITAL EFFECT** on/off status can also be specified (except for **DRUMS** part).
  - For the **DRUMS** part, select sounds from the **DRUM KITS** group.
  - The sound and on/off status of the **DIGITAL EFFECT** are shown on the display.
5. Repeat steps 3 and 4 for the other parts as desired.
6. When you have finished selecting the sounds, press the **SET** button to turn it off.

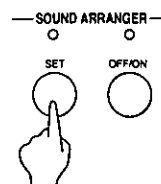


## Playing back the sounds

1. In the **SOUND ARRANGER**, press the **OFF/ON** button to turn it on.

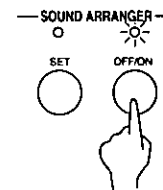

2. Start the rhythm (automatic accompaniment).
  - When the **OFF/ON** button is off, the factory-preset sounds are produced.
  - This setting can be set separately for each rhythm.
  - If you wish to modify the settings you specified, while the **OFF/ON** button is on, press the **SET** button to turn it on.

# One Touch Play

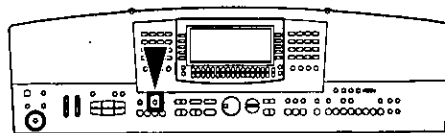


**ONE TOUCH PLAY** automatically sets a suggested combination of sounds and an appropriate tempo for your chosen rhythm style.

1. Select a rhythm pattern.
  - Do not select the **MEMORY** button.
2. Press and hold the **ONE TOUCH PLAY** button for a few seconds.



- During setting, the style name is shown on the display.
  - The **AUTO PLAY CHORD** and the **SYNCHRO & BREAK** are automatically turned on, and the sounds and effects, volume balances, tempo etc. that are ideal for your selected rhythm are automatically set.
3. Play the keyboard.
    - When you specify a chord, the automatic rhythm begins to play immediately.

# Music Stylist

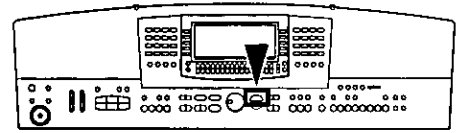


**MUSIC STYLIST** sets up your instrument with a suitable registration for a specific style of music or tune.


## Setup by music style

Select a style from the **MUSICAL CATEGORY**.

1. Press the **MUSIC STYLIST** button to turn it on.




- The display looks similar to the following.

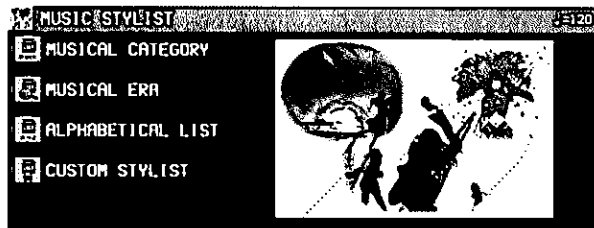

2. Select **MUSICAL CATEGORY**.

- The display looks similar to the following.

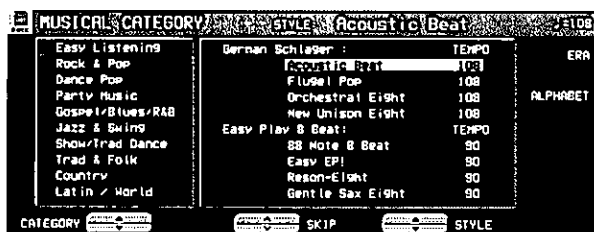

3. Use the **CATEGORY** ▲ and ▼ buttons to select a category.

4. Use the **STYLE** ▲ and ▼ buttons to select a music style.

- During the search, you can use the **SKIP** ^ and v buttons to skip to the previous or following subcategory.
- The **AUTO PLAY CHORD** and the **SYNCHRO & BREAK** turn on, and the sounds, effects, volume balances, rhythm and tempo etc. which are best suited for the selected music style are automatically selected.

5. Play the keyboard.

- When you specify a chord, the automatic rhythm begins to play immediately.


## Setup by era

You can select a style from a specific music era.

1. Press the **MUSIC STYLIST** button to turn it on.

2. Select **MUSICAL ERA**.

- The display looks similar to the following.

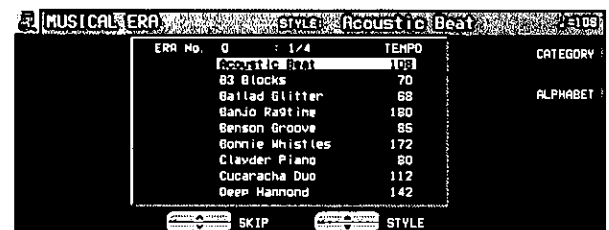

3. Use the **STYLE** ▲ and ▼ buttons to select a style.

- You can use the **SKIP** ^ and v buttons to skip to the previous or following era.

- The **AUTO PLAY CHORD** and the **SYNCHRO & BREAK** turn on, and the sounds, effects, volume balances, rhythm and tempo etc. which are best suited for the selected style are automatically selected.

4. Play the keyboard.

- When you specify a chord, the automatic rhythm begins to play immediately.

## Setup by alphabetical order

You can use alphabetical or numerical search to select a style name.

1. Press the **MUSIC STYLIST** button to turn it on.
2. Select **ALPHABETICAL LIST**.
  - The display looks similar to the following.



3. Use the **STYLE** ▲ and ▼ buttons to select a style.
  - You can use the **SKIP** ^ and v buttons to skip to the previous or following alphabetical or numerical heading.
  - The **AUTO PLAY CHORD** and the **SYNCHRO & BREAK** turn on, and the sounds, effects, volume balances, rhythm and tempo etc. which are best suited for the selected style are automatically selected.
4. Play the keyboard.
  - When you specify a chord, the automatic rhythm begins to play immediately.

## Custom style selection

You can select a style stored in **CUSTOM**, or a style loaded to **CUSTOM** from a disk.


- Details about the **CUSTOM STYLE** can be found on page 104.
1. Press the **MUSIC STYLIST** button to turn it on.
  2. Select **CUSTOM STYLIST**.
    - The display looks similar to the following.



3. Use the **STYLE** ▲ and ▼ buttons to select a style.
  - You can use the **SKIP** ^ and v buttons to skip to the previous or following **CUSTOM**.
  - The **AUTO PLAY CHORD** and **SYNCHRO & BREAK** turn on, and the settings for the selected style are recalled.
4. Play the keyboard.
  - When you specify a chord, the automatic rhythm begins to play immediately.

- On the **MUSICAL CATEGORY** and **ALPHABETICAL LIST** or **MUSICAL ERA** display, each press of the **ALPHABET/CATEGORY/ERA** button at the upper right allows you to move freely between the two displays.
- After deciding on a style with the **MUSIC STYLIST**, if you record the settings in the **PANEL MEMORY**, the same style name is copied to the **PANEL MEMORY** (up to 16 characters). When you recall the **PANEL MEMORY** settings, this style name is shown at the top of the normal display. (Refer to page 63.)
- After selecting a style, turn the **MUSIC STYLIST** button off if you wish to have the normal display active during a performance.

# Music Style Arranger

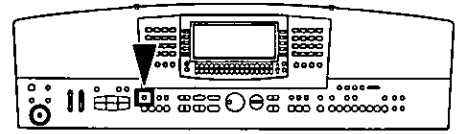


The **MUSIC STYLE ARRANGER** helps you to make professional registration changes during your performance. Select between four contrasting registrations at the push of a button, or let your instrument change the registration automatically for you when you use **FILL IN 1** or **2**. The **MUSIC STYLE ARRANGER** will also alter the accompaniment in character with the registration change creating a polished sounding arrangement.

## How to use the MUSIC STYLE ARRANGER

1. Select a rhythm pattern.
2. Press the **MUSIC STYLE ARRANGER** button to turn it on.




3. Use the **VARIATION & MSA** buttons to select a style (1 to 4).

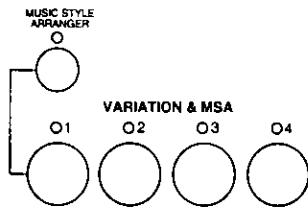

- The nuance of the pattern differs with each number.
- The panel settings (including the tempo) change according to the selected rhythm and music style. The **AUTO PLAY CHORD**, the **MEMORY** button and the **SYNCHRO & BREAK** button are automatically turned on. When a key on the left section of the keyboard is pressed, the automatic rhythm begins to play immediately.
- During your performance, the style can be changed, but the tempo does not change.

## How to change the music style during your performance

While you are playing the keyboard with the **MUSIC STYLE ARRANGER** on, press the **FILL IN 1** or **FILL IN 2** button.

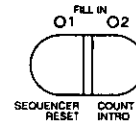


- Each time the **FILL IN 1** button is pressed, the **FILL IN 1** pattern plays, and then the music style changes in the 4 → 3 → 2 → 1 order. And each time the **FILL IN 2** button is pressed, the **FILL IN 2** pattern plays, and then the style changes in the 1 → 2 → 3 → 4 order.

### ■ MUSIC STYLE ARRANGER mode

You can define which panel settings change by pressing a **FILL IN** button when the **MUSIC STYLE ARRANGER** is used.

1. Press and hold the **MUSIC STYLE ARRANGER** button for a few seconds.
- The display changes to the following.

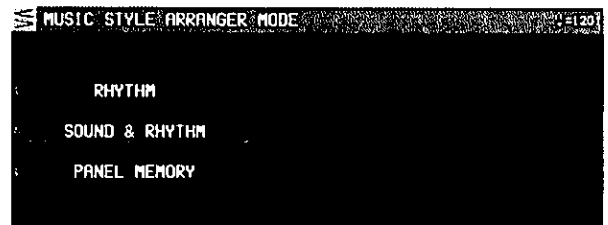

2. Select the mode.

#### RHYTHM:

Only the rhythm changes.

#### SOUND & RHYTHM:


The sound, effects, rhythms, etc. change.

**PANEL MEMORY:**

The **PANEL MEMORY** number (BANK A: 1 to 4) changes. You can store your desired panel settings in the **PANEL MEMORY** beforehand and switch from one to another quickly.

- After a few seconds, the display exits the setting mode.
- You can also access this setting display from the CONTROL MENU display. (Refer to page 158.)

# Panel Memory

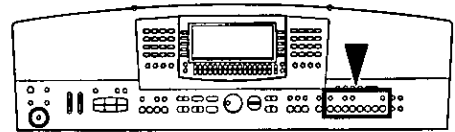

**PANEL MEMORY** stores all the current panel settings so you can recall them at the push of a button.


## How to store the panel settings

By storing all the panel settings you use for a song in the same bank, for example, you can switch from one panel setup to the next in a flash.

1. Set up the desired panel settings (sounds, volumes, etc.)
2. Press the **BANK VIEW** button to turn it on.



- The **BANK SELECT** display appears.
3. Select the desired bank (A/B/C/1–10).
  - The bank selection display is comprised of two pages: 1/3 and 2/3. Use the **PAGE** buttons to switch pages.
  4. With the **SET** button held down, press one of the numbered buttons of the **PANEL MEMORY** (1 to 8).

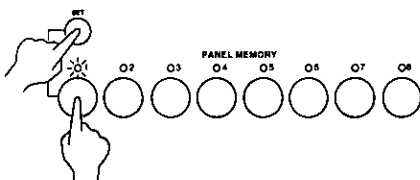

- The panel settings are now stored in the specified bank and number.

### ■ BANK VIEW

After selecting a bank, you can use the **PAGE** buttons to go to the **PAGE 3/3** page and confirm the memory names of that bank's 8 memories.




- You can use the **BANK** ^ and v buttons to view other banks.
- You can also access this display by pressing and holding any of the **PANEL MEMORY** number buttons (1 to 8) for a few seconds.

Playing the rhythm


## Assign a name to the bank/memory

You can assign names to the banks and memories.

1. Select a bank or memory.
2. Use the **PAGE** buttons to go to the **PAGE 3/3** page on the display.

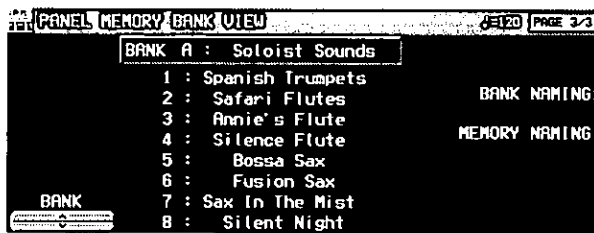

3. Press the **BANK NAMING** button to assign a name to the bank, or the **MEMORY NAMING** button for the memory.
  - The display looks similar to the following.

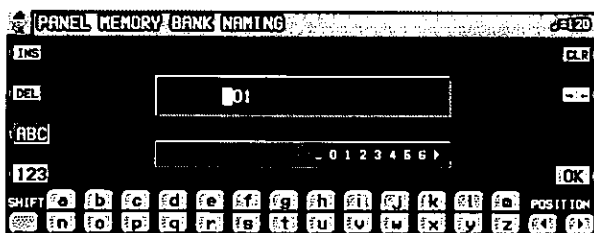

4. Use the buttons below the display to assign a name.
  - Press the **ABC** button to enter alphabetical characters. While the **SHIFT** button is pressed, upper case letters are entered.
  - Press the **123** button to enter numbers, etc. While the **SHIFT** button is pressed, you can enter symbols.
  - Press the **POSITION** button to move the cursor.
  - You can also use the **TEMPO/PROGRAM** dial to select the characters.
  - Press the **INS** button to enter a space at the cursor position.
  - Press the **DEL** button to erase the character at the cursor position.
  - Press the **CLR** button to erase the entire name.
  - Press the **→←** button to center the name.
5. When you have finished assigning the name, press the **OK** button.

## Recall the panel setup

1. Press the **BANK VIEW** button to turn it on. Select a bank.
2. Press the desired **PANEL MEMORY** number button (1 to 8).
  - The panel setup changes to the one stored in the specified memory.
  - You can then change the sound settings, etc. manually; however, the contents of the memory remain unchanged until you store them again.
  - The "Control Preset" bank of the **PERFORMANCE PADS** or the Foot Switch (sold separately) can also be used to change from one **PANEL MEMORY** setup to another. (Refer to pages 66, 159.)
  - The currently selected bank, memory number and memory name are shown in the top line on the normal display.

### ■ NEXT BANK

You can press the **NEXT BANK** button to switch to the next bank. This allows you to change banks without exiting the normal display.

NEXT BANK




- Each time the **NEXT BANK** button is pressed, the bank indication changes in order (A → B → C → 1 → 2 ...).
- The panel settings change when a **PANEL MEMORY** number button (1 to 8) is pressed.



## PANEL MEMORY mode

You can define which panel settings are recalled when the **PANEL MEMORY** is used.

1. Press and hold the **SET** button for a few seconds.
  - The display changes to the following.

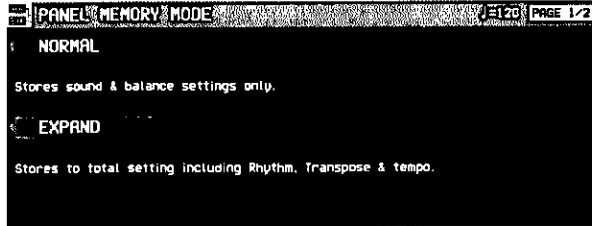

2. Select the mode.

### NORMAL:

The sounds and volume balance, and **CONDUCTOR** status are stored.

### EXPAND:


All the instrument's settings are stored, including the rhythm (except for **SOUND ARRANGER** on/off status), **TRANSPOSE**, tempo, etc.

- After a few seconds, the display exits the setting mode.

### ■ EXPAND MODE FILTER

You can specify which data is stored in the **EXPAND** mode.

1. Use the **PAGE** buttons to access the **PAGE 2/2 EXPAND MODE FILTER** display.
  - The display looks similar to the following.

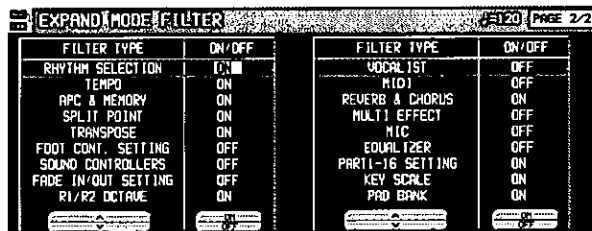


2. Use the **^** and **v** buttons to select the item.
3. Use the **ON** and **OFF** buttons to store the on or off status for the selected item.

## CUSTOM PANEL

In addition to the regular **PANEL MEMORY**, this feature lets you store a favorite panel setup to recall any time by the press of a button. Even if the **PANEL MEMORY** data is changed when an automatic setting function is activated or the disk data load procedure is performed, for example, simply by pressing this button, your favorite panel settings are instantly restored.


1. Set up the instrument with your favorite settings.
2. Press the **SET** button and the **CUSTOM PANEL** button at the same time.

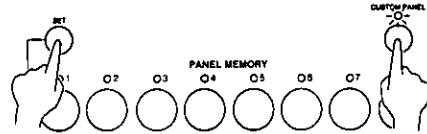

- "COMPLETED!" is shown on the display.
- The stored settings are recalled whenever you press the **CUSTOM PANEL** button to turn it on.
- The stored contents are retained even when the power to the instrument is turned off.
- You can select the range of settings that are included in the **CUSTOM PANEL** function. (Refer to page 165.)

# Part III Performance Pads

## Playing phrases

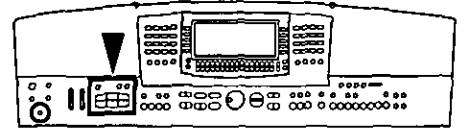




During your performance, you can insert a short recorded phrase or effect sounds by pressing a pad button. A different group of phrases is recorded in each bank.

1. Press the **BANK** button.



2. Select the desired bank from the display.


- The list of banks consists of three screen pages. Use the **PAGE** buttons to change the page.

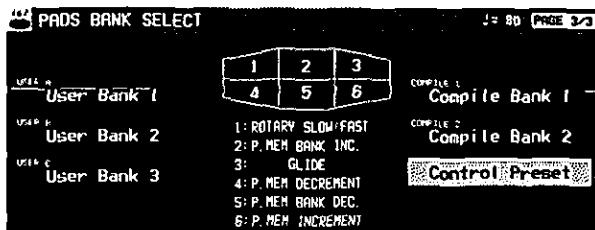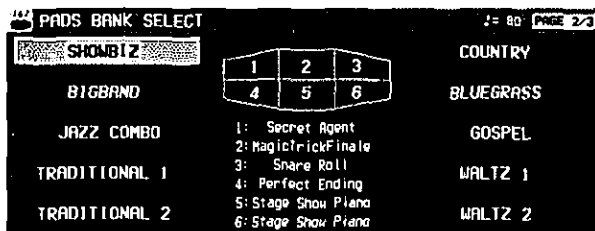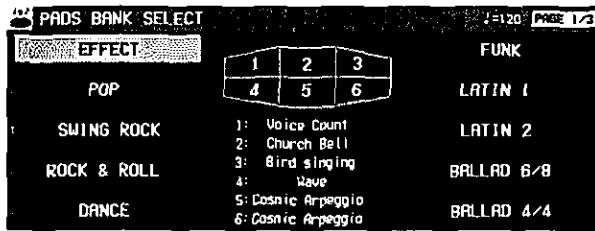

- Various functions are assigned to each pad button in "Control Preset".

- When using the "Control Preset" bank, set the **AUTO SETTING** button to OFF. When using the **PANEL MEMORY**, turn off the **PERFORM. PADS BANK** of the **EXPAND MODE FILTER**.

3. Press a pad button (1 to 6).

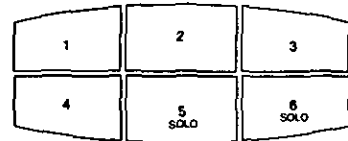

- A different phrase is assigned to each pad button.
- Information about the phrase, such as its name and the measure number, is shown in the normal display.
- The volume can be set with the buttons below the normal display (PADS).
- The selected phrase is played in the current tempo.
- To stop the phrase before it has ended, press the **STOP** button.
- Some phrases continue to play until the **STOP** button is pressed (the [Loop] indication appears).
- During a rhythm performance, some phrases may play in time with the measure count.
- When the automatic accompaniment is on, several phrases are played in the specified chord.

- "User Bank" A, B and C are for storing your original phrases.
- "Compile Bank" 1 and 2 are for assigning phrases as you desire.

### SOLO

Pad buttons 5 and 6 (SOLO) are phrases with chord progressions. Just by pressing one of these pad buttons, the phrase changes following a chord progression that is typical for the music genre of that bank.

- Use with the automatic accompaniment during your performance.
- Pad button 5 accesses a major chord progression, and pad button 6 a minor chord progression.

### AUTO SETTING

When this button is set to on, the bank automatically changes according to the automatic setting functions in the ONE TOUCH PLAY, the MUSIC STYLE ARRANGER and the MUSIC STYLIST. When it is set to off, the bank does not automatically change according to these functions.



## Copying phrases

You can copy the desired data, as phrases, from the SEQUENCER to each pad memory of a "User Bank".

- Chord data also can be copied to pad buttons 5 and 6 (SOLO).


### PHRASE COPY

Copy a phrase from one pad to another.

1. Press the PROGRAM MENUS button to turn it on.



- The display looks similar to the following.

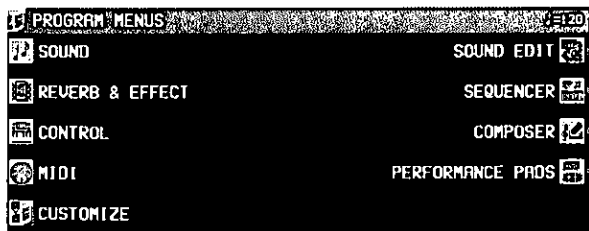


2. Select PERFORMANCE PADS.

- The display looks similar to the following.



3. Select PHRASE COPY.

- The display looks similar to the following.

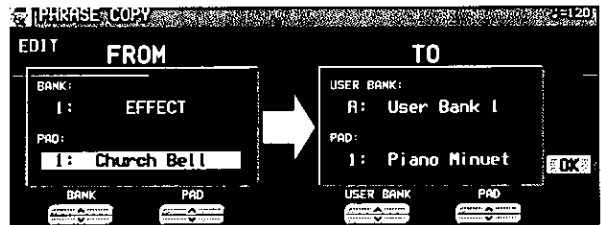

4. Select the pad you wish to copy from.

- Use the buttons on the FROM side to set the desired settings.

BANK: Bank name  
 PAD: Pad number (1 to 6)

5. Select the pad you wish to copy to.

- Use the buttons on the TO side to set the desired settings.

USER BANK: Bank name (USER A, B, C)  
 PAD: Pad number (1 to 6)

- Only a SOLO phrase can be copied to the SOLO pads (5 and 6).

6. Press the OK button.


7. Press the PROGRAM MENUS button to turn it off.

- If you wish to modify a portion of the copied phrase, press the EDIT button to change to the recording display.

Performance Pads

## SEQ TO PAD COPY

- Record a phrase in the **SEQUENCER**, or load data from a disk.
  - After this procedure, please do not change the song number.
  - For details about **SEQUENCER** operation, refer to page 72.
  - For information about loading data, refer to page 121.
- Press the **PROGRAM MENUS** button to turn it on.
- Select **PERFORMANCE PADS**.
- Select **SEQ TO PAD COPY**.
  - The display looks similar to the following.

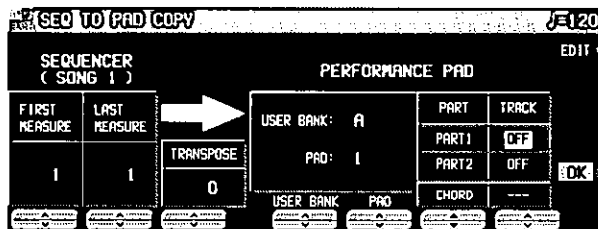

- Select the measures of **SEQUENCER** data you wish to copy from.
  - On the **SEQUENCER** side, use the buttons to make the corresponding settings.

### FIRST MEASURE:

The first measure of the phrase you wish to copy.

### LAST MEASURE:

The last measure of the phrase you wish to copy.

### TRANSPOSE:

The setting to transpose the chords when they are copied.

- The maximum that can be copied is 16 measures.
- When copying to pad button 5 or 6, the chord track is automatically displayed, and the chord data is also copied. However, when chord data from step record input does not exist, the measures are blank.
- If you wish to convert the chords during playback, set **TRANSPOSE** to the key of C and then copy the phrase.

- Select the pad button you wish to copy to.
  - On the **PERFORMANCE PAD** side, use the buttons to make the corresponding settings.

### USER BANK:

The name of the bank (A/B/C).

### PAD:

Pad button number (1 to 6).

### PART:

The part to copy to.

### TRACK:

The track number to copy from.

- Press the **OK** button.
  - A confirmation display appears. Press the **YES** button if you wish to copy the phrase, or press the **NO** button to cancel the procedure.
- When you have completed the procedure, press the **PROGRAM MENUS** button to turn it off.


# Compile

You can assign desired phrases from different banks in "Compile Bank" 1 and 2.

1. Press the **PROGRAM MENUS** button to turn it on.




- The display looks similar to the following.

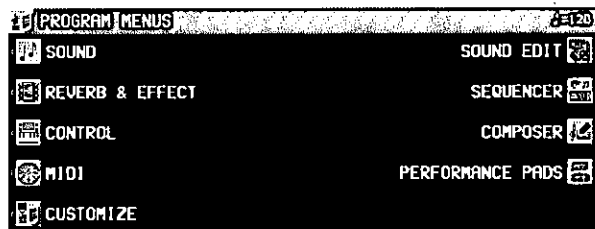


2. Select **PERFORMANCE PADS**.

- The display looks similar to the following.

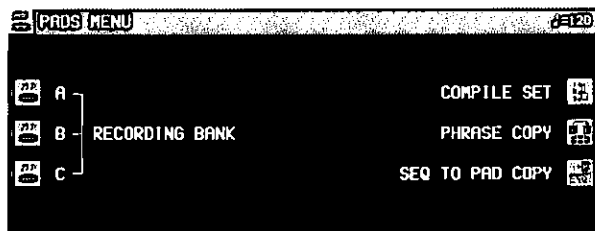

3. Select **COMPILE SET**.

- The display looks similar to the following.

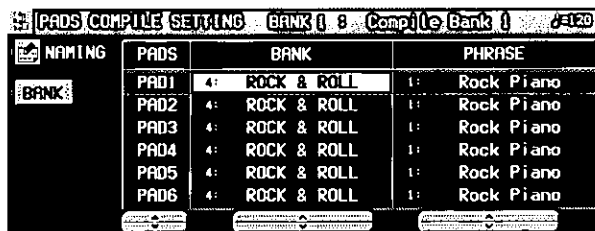

- You can press the **NAMING** button and assign a name to the bank. (Refer to page 31.)
4. Press the **BANK** button to select a bank (Compile Bank: 1/2).
  5. Use the **PADS ▲** and **▼** buttons to select the pad to which to assign the phrase.


6. Use the **BANK** and **PHRASE ▲** and **▼** buttons to select the desired bank and phrase you wish to assign.
  - The "Control" bank cannot be selected.
7. Repeat steps 5 and 6 to assign phrases to the other pad buttons.
8. When you have finished assigning the phrases, turn off the **PROGRAM MENUS** button.

# Record a phrase

"User Bank" A, B and C are reserved for storing your original phrases.


- You can also copy phrases which are recorded in the **SEQUENCER**. (Refer to page 68.)

1. Press the **PROGRAM MENUS** button to turn it on.
  - The display looks similar to the following.

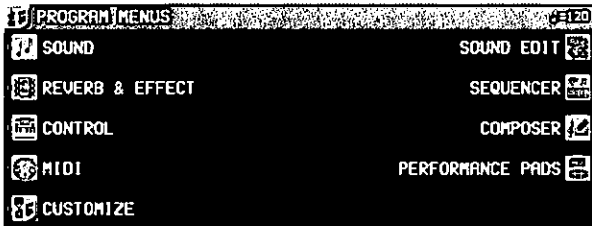

2. Select **PERFORMANCE PADS**.

- The display looks similar to the following.

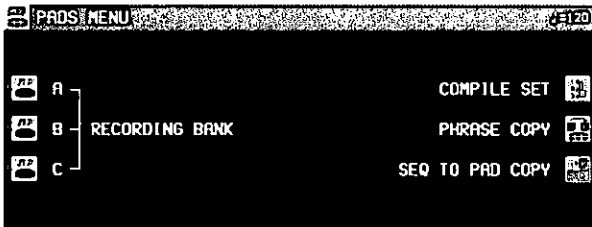

3. Use the buttons to the left of the display to select a **RECORDING BANK**.

- The display changes to the **RECORD PAD** display.
- You can press the **BANK NAMING** button and assign a name to the bank.
- If the **BANK CLR** button is pressed, all the data in the bank is cleared (a confirmation display appears).

4. Use the buttons below the display to select the pad number to record.

- The display changes to the **PAD RECORDING** display.
- You can press the **PAD NAMING** button and assign a name to the bank.
- To clear all the current data in the selected pad, press the **CLEAR THE PAD** button, and then press the **YES** button on the confirmation display.


5. Use the **MEASURE**  $\wedge$  and  $\vee$  buttons specify the number of measures in the phrase. Use the **TIME SIGNATURE**  $\wedge$  and  $\vee$  buttons to specify the time signature of the phrase.

6. Press the **OK** button.

- For details about **KEY SETTING**, refer to page 107.
- For details about **CHORD MODIFY CHANGE**, refer to page 109.

7. Select the part to record to.

- Press the button for **PART 1** or **PART 2**.
- Two parts can be recorded (**PAD 1–4**).
- The display looks similar to the following.

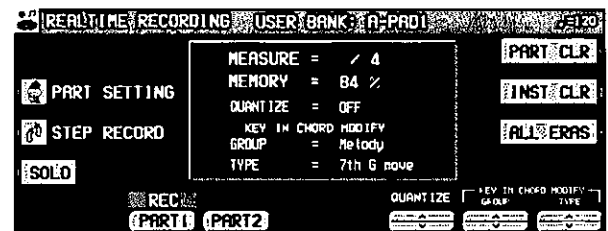


8. Proceed to record.

- The recording procedure is the same as for the **COMPOSER**. (Refer to page 108.)
- There is no **DSP SET**.
- In the **PLAY SETTING**, if **LOOP** is set to **OFF**, **LOOP** recording is not possible.

## PLAY SETTING

Select a playback mode.

1. On the PAD RECORDING display, press the PLAY SETTING button.
  - The display looks similar to the following.

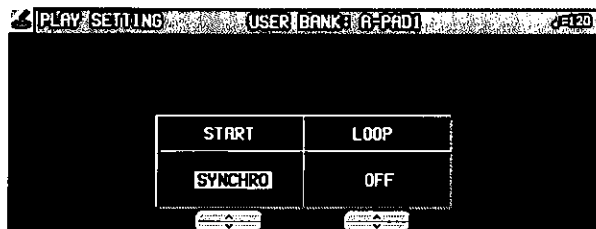

2. Use the START  $\wedge$  and  $\vee$  buttons to select a playback mode.

### SYNCHRO:

During a rhythm performance, the phrase playback begins in time with the beat.

### INSTANT:

The phrase starts to play immediately when the pad button is pressed, regardless of the rhythm.

3. Use the LOOP  $\wedge$  and  $\vee$  buttons to enable or disable loop playback.

### ON:

Once the pad button is pressed, the phrase is played back repeatedly until the STOP button is pressed.


### OFF:

The phrase is played back only once.

## CHORD STEP RECORD

A chord progression can be stored in PAD 5 and PAD 6.


1. On the REALTIME RECORDING display, press the CHORD STEP RECORD button.
  - The display looks similar to the following.

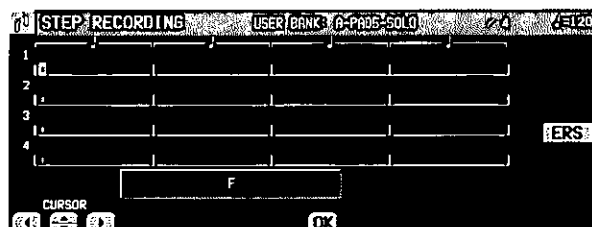

2. Use the CURSOR buttons to move the cursor to the position you wish to input.
  - The cursor moves in 1/8-note increments.
3. Input the chord by playing it on the keyboard.
  - The chord name is shown.
4. Press the OK button.
5. Repeat steps 2 to 4 to store the rest of the chord progression.
  - To delete a chord which has been input, move the cursor to the specific chord and press the ERS button.

# Part IV Sequencer

## Outline of the Sequencer

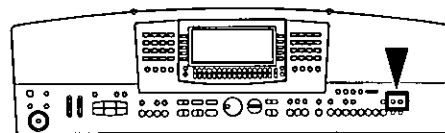

A sequencer records your performance in a similar way to a tape recorder. This instrument's **SEQUENCER** allows you to record up to 10 performances in a variety of ways. You may want to record your entire performance in one go (especially if you are using **AUTO PLAY CHORD** to provide the accompaniment), or to build up a complex arrangement with several different parts playing together, like an orchestral score. This instrument's **SEQUENCER** has 16 tracks. This means that you can record 16 different parts. However, you don't have to use all 16 tracks. For some uses you may only need to use one or two tracks. This instrument's **SEQUENCER** enables you to edit your recorded performance. Unlike a tape recorder you can change the sound or the tempo during playback, or correct wrong notes or timing errors.

### SEQUENCER features

#### ■ You can change the tempo without changing the pitch

When you record your performance at a slow tempo and play it back at a faster tempo, the pitch stays the same.

#### ■ Consistent sound

Your performance is reproduced by a sound module as it reads digital data. So, unlike a recorded tape, the sound never deteriorates no matter how many times you play back your performance.

#### ■ Edit your recorded performance

Comprehensive editing functions allow you to modify your recorded performance. Data can easily be erased, corrected or copied, providing an especially convenient tool for creating your original tunes.

#### ■ Instant search

A recorded tape has to be rewound, but digital action means you can return to the beginning of your performance, or find any measure, instantly.

#### ■ Save your performances on disks

All the data of your recorded performances can be stored on disks. The built-in Disk Drive also allows you to play commercially sold disks on your own Keyboard.

- Features and operation of the built-in Disk Drive are explained in Part VI: Disk Drive (page 118).

### Popular features

#### ■ Simplified recording method

**EASY RECORD** is a feature that allows you to bypass the more complex recording procedures so you can record and play back your performance quickly and easily.

- You can also record an accompaniment from the **AUTO PLAY CHORD**.

#### ■ Create a one-man ensemble

Use the **REALTIME RECORD** function to record your performance in up to 16 tracks and create your own orchestra or band.

#### ■ Store individual data to create your song

For repeating patterns or those especially complicated phrases, the **STEP RECORD** feature is convenient for recording the notes one-by-one.

- This method can be used to store both the chord progression for the automatic accompaniment and the rhythm changes.

### Memory capacity

Up to 10 songs can be stored in the **SEQUENCER**. Expressed in terms of notes, the total number of notes which can be stored in all the **SEQUENCER** songs and tracks is about 40,000. The remaining memory available for recording is shown on the display as a percentage (**MEMORY= %**).

- When "Memory full!" appears on the display, no more data can be stored in the **SEQUENCER**.
- The recorded contents can be saved on a disk for recall at a later time. (Refer to page 126.)




## SEQUENCER menu

The configuration of the **SEQUENCER** setting display is as follows.

1. Press the **PROGRAM MENUS** button to turn it on.



- The display looks similar to the following.

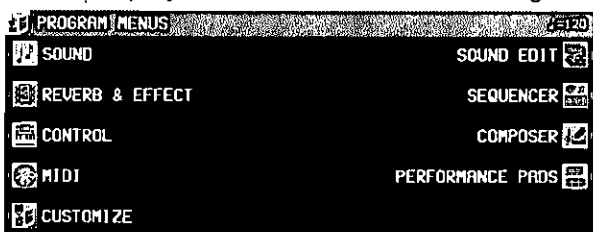

2. Select **SEQUENCER**.



- The display looks similar to the following.



- The **SONG SELECT** ^ and v buttons are used to select a song.
- You can press the **NAMING** button and assign a name to the song. (Refer to page 82.)
- You can press the **PANEL WRITE** button to store the current settings of the instrument at the beginning of the song. (Refer to page 83.)

3. Select **RECORD & EDIT**, **COPY & PASTE** or **RANGE SET**, and follow the corresponding procedure.


### <RECORD & EDIT>

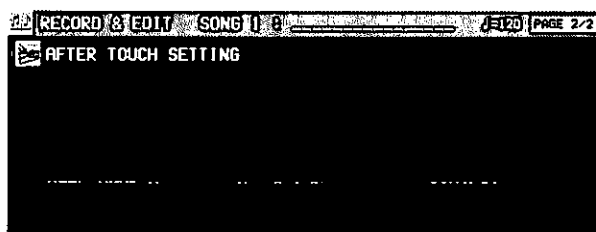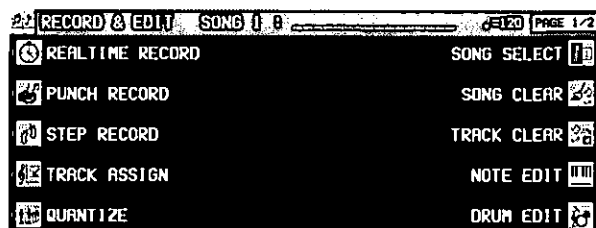

### <COPY & PASTE>



### <RANGE EDIT>

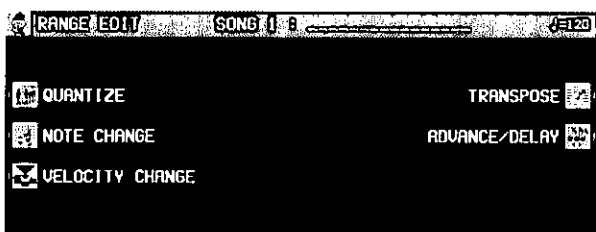

## Summary of the SEQUENCER menu items

**RECORD & EDIT**

These functions are recording and editing operations used for creating a new performance.

**REALTIME RECORD** (page 77)

Record each part of your performance just as you play it on the keyboard.

**PUNCH RECORD** (page 84)

Correct a selected portion of your recorded performance.

**STEP RECORD** (page 86)

Store the sounds note-by-note on the display.

- You can also store the chord or rhythm progression for the **AUTO PLAY CHORD**.

**TRACK ASSIGN** (page 91)

Assign parts to tracks.

**QUANTIZE** (page 92)

Correct the timing of your performance.

**SONG SELECT** (page 83)

Select a song.

**SONG CLEAR** (page 93)

Erase all the recorded data of a song.

**TRACK CLEAR** (page 93)

Erase the contents of a specific track.

**NOTE EDIT** (page 94)

Store and correct performance (NOTE) data on a piano roll display.

**DRUM EDIT** (page 95)

Store and correct DRUMS part data on a special display.

**AFTER TOUCH SETTING** (page 96)

Specify whether or not keyboard after touch is recorded as data.

**COPY & PASTE**

Copy recording data and paste it to the desired location.

**TRACK COPY** (page 97)

Copy data of specific tracks.

**SONG COPY** (page 97)

Copy data of specific songs.

**TRACK MERGE** (page 98)

Merge the recorded contents of two tracks and store in a third track.

**TRACK CLEAR** (page 93)

Erase the contents of a specific track.

**SONG CLEAR** (page 93)

Erase all the recorded data of a song.

**MEASURE COPY** (page 98)

Copy the contents of specific measures.

**MEASURE ERASE** (page 99)

Erase the contents of specific measures.

**MEASURE DELETE** (page 99)

Delete specific measures from the performance.

**MEASURE INSERT** (page 100)

Insert additional measures in the performance.

**APC TO SMF CONVERT** (page 100)

Save automatic accompaniment patterns and pad performance data in a Standard MIDI File (SMF).

**RANGE EDIT**

Change the note position etc. in the recorded data.

**QUANTIZE** (page 92)

Correct the timing of your performance.

**NOTE CHANGE** (page 101)

Change the pitch of specific notes.

**VELOCITY CHANGE** (page 102)

Modify the recorded velocity (how hard the keyboard was played) of performance data.

**TRANSCOPE** (page 102)

Change the key of the performance data.

**ADVANCE/DELAY** (page 103)

Speed up or delay the sound production of performance data.

**About the measure count**

The measure count on the display corresponds to the time signature of the selected rhythm. However, if rhythm data is stored in the RHYTHM part and that part is played back, the measure count on the display corresponds to the stored rhythm data. (Refer to page 90.)

- If you wish to use a time signature not available in the preset rhythms, use the **COMPOSER** to create a new time signature. (Refer to page 106.)

# Sequencer parts

The following summary explains what is stored in each **SEQUENCER** part.

Part name [name on display]	Used for	Recorded contents
<b>RIGHT1</b> [RT1] <b>RIGHT2</b> [RT2] <b>LEFT</b> [LFT] <b>PART1</b> [P 1] – <b>PART9</b> [P 9] <b>PART11</b> [P 11] – <b>PART16</b> [P16]	Recording the performance of each part (REALTIME/STEP)	<ul style="list-style-type: none"> <li>• Sound and volume settings</li> <li>• <b>PART EXPRESSION</b></li> <li>• Contents of sound and effect settings that can be set on the MIXER display (Refer to page 138.)</li> <li>• <b>PITCH BEND</b> wheel operation</li> <li>• <b>MODULATION</b> wheel operation</li> <li>• <b>SOUND CONTROLLER</b> operation</li> </ul>
<b>DRUMS</b> [DRM] (PART 10)	Recording the drums performance with the <b>DRUM KITS</b> group sounds (REALTIME/STEP)	<ul style="list-style-type: none"> <li>• Sound and volume settings</li> <li>• <b>PART EXPRESSION</b></li> <li>• Contents of sound and effect settings that can be set on the MIXER display (Refer to page 138.)</li> </ul>
<b>CONTROL</b> [CTL]	Recording changes in the panel button status (REALTIME/STEP)	<ul style="list-style-type: none"> <li>• Rhythm setting and selection changes</li> <li>• <b>REVERB</b> on/off</li> <li>• <b>AUTO PLAY CHORD</b> status, volume balance</li> <li>• <b>MUSIC STYLE ARRANGER</b> status</li> <li>• <b>FILL IN 1, 2, INTRO &amp; ENDING 1, 2</b> on</li> <li>• <b>PANEL MEMORY</b> selection changes</li> <li>• <b>TRANPOSE</b> status</li> <li>• <b>TECHNI-CHORD</b> status</li> <li>• <b>START/STOP</b> on/off</li> <li>• <b>TEMPO</b> setting</li> <li>• <b>CONDUCTOR</b> status</li> <li>• <b>PERFORMANCE PADS</b> setting</li> <li>• <b>FADE IN/OUT</b> operation</li> <li>• <b>APC/SEQUENCER VOLUME</b> settings.</li> <li>• <b>TOTAL EXPRESSION</b></li> </ul>
<b>AUTO PLAY CHORD</b> [APC]	Recording chords for the <b>AUTO PLAY CHORD</b> (REALTIME)	<ul style="list-style-type: none"> <li>• Chord progression</li> <li>• <b>AUTO PLAY CHORD</b> status, volume balance</li> <li>• <b>START/STOP</b> on/off</li> <li>• <b>FILL IN 1, 2, INTRO &amp; ENDING 1, 2</b> on</li> </ul>
<b>CHORD</b> [CHD]	Recording chord progression for the <b>AUTO PLAY CHORD</b> (STEP)	<ul style="list-style-type: none"> <li>• Chord progression</li> <li>• <b>FILL IN 1, 2, INTRO &amp; ENDING 1, 2</b> on</li> </ul>
<b>RHYTHM</b> [RHY]	Settings related to rhythm (STEP)	<ul style="list-style-type: none"> <li>• Rhythm settings and selection changes</li> <li>• <b>FILL IN 1, 2, INTRO &amp; ENDING 1, 2</b> on</li> <li>• <b>START/STOP</b> on/off</li> <li>• <b>TEMPO</b> setting</li> </ul>

- You can use the TRACK ASSIGN function to assign parts to tracks as you wish. (Refer to page 91.)


# Easy Record

Suppose you are playing the Keyboard and you wish to record and play back your performance to hear how it sounds. You can bypass the set-up procedures of the full-scale sequencer and begin recording quickly and easily.


- Note that by executing **EASY REC**, the original data in the selected song number is erased.

## Recording procedure

1. Press the **EASY REC** button to turn it on.

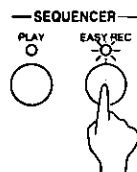

- The display changes to the following.

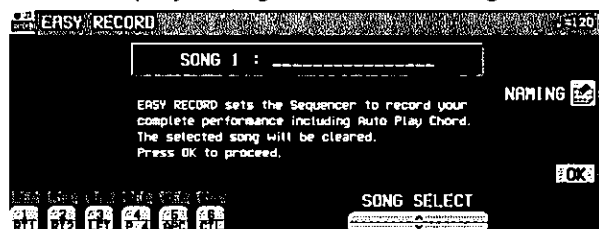

2. Use the **SONG SELECT**  $\wedge$  and  $\vee$  buttons to select the song number in which to record (1 to 10).
- If you press the **NAMING** button, you can assign a name to your song. (Refer to page 82.)

3. Set the desired sounds, effects, rhythms, etc.

4. Press the **OK** button.

- The display changes to the **REALTIME RECORD** display.

5. Play the keyboard.


- Recording begins as soon as you start the rhythm or play the keyboard.

6. When you have finished recording, press the **EASY REC** button to turn it off.

- The **PLAY** button turns on.

## Playback

1. Press the **SEQUENCER RESET (FILL IN 1)** button.



2. Press the **START/STOP** button.

- Your recorded performance is played back automatically.
- When you are finished playing back your performance, press the **SEQUENCER PLAY** button to turn it off.


# Realtime Record

With REALTIME RECORD, your performance is recorded with the timing exactly as you played it on the keyboard. Use this mode to record your performance in up to 16 tracks and create your own orchestra or band.

## Recording procedure

1. Press the **PROGRAM MENUS** button to turn it on.

- The display changes to the following.

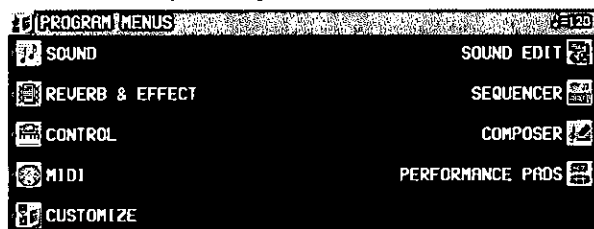

2. Select **SEQUENCER**.

- The display looks similar to the following.




- When you press the **PANEL WRITE** button, the **PANEL WRITE** display appears. To store the currently active settings, such as the sounds, at the beginning of the song, press the **OK** button.

3. Use the **SONG SELECT**  $\wedge$  and  $\vee$  buttons to select a song number in which to record. (The song number is shown on the display.)


4. Select **RECORD & EDIT**.

- The display looks similar to the following.

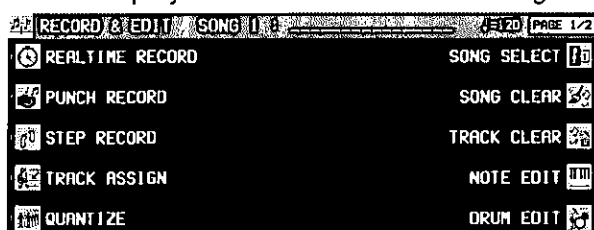

5. Select **REALTIME RECORD**.

- The display looks similar to the following.

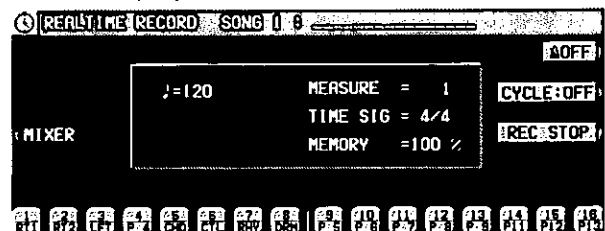

6. Use the buttons below the display to turn on the "REC" indication above the track numbers you are going to record.

- While you are recording, you can play back tracks which are already recorded. Press the corresponding balance buttons to display "PLAY" above the track number you wish to have played back.
- For the **RIGHT 1**, **RIGHT 2** and **LEFT** parts, you can select two or more tracks to record at one time; however, to record a performance part, the corresponding button in the **CONDUCTOR** must also be on. For parts that are not in the **CONDUCTOR**, multiple parts cannot be recorded at one time.
- To record **AUTO PLAY CHORD (APC)** parts, turn on the **AUTO PLAY CHORD's OFF/ON** button. In this case, press the **START/STOP** button when beginning recording.
- The track for the **RHYTHM (RHY)** part can be selected for recording only when **STEP RECORD** is active.

7. Set the sounds, effects, volumes, etc. for the parts you are going to record.

- If you press the **MIXER** button, you can use the **MIXER** display to visually adjust the settings for each track.
- The **LOCAL ON/OFF** setting on the **MIXER** display is used to specify whether the part assigned to that track sounds when it is played on the keyboard during recording. For the **LOCAL ON/OFF** during playback, use the **TRACK ASSIGN** display to adjust the settings. (Refer to page 91.)
- If you are recording **GM2** song data, select from the **GM2** group in the **SOUND EXPLORER**.
- The panel settings which are active at the beginning of recording are stored.

8. Use the **TEMPO/PROGRAM** to adjust the recording tempo.
    - The tempo is shown on the display as ♩=.
    - If you wish to record the tempo setting and tempo changes, store them in the control (CTL) part, or use the step record to store them in the rhythm (RHY) part.
  9. Turn the metronome on or off as desired with the ON/OFF button at the upper right of the display.
    - The metronome selection alternates between ON and OFF each time the button is pressed.
    - When set to ON, the metronome volume setting display is momentarily shown.
    - The metronome sound is not recorded.
  10. Play the keyboard.
    - Recording begins.
    - You can also press the **START/STOP** button to start the rhythm and begin recording.
    - If the metronome is on, when you press the **START/STOP** button, a two-measure count plays, after which recording automatically begins. In this case, the rhythm does not start. Recording does not start until the two-measure count is completed.
    - The recording status is continuously updated on the display:
      - MEASURE= indicates the current measure.
      - TIME SIG.= indicates the current time signature.
      - MEMORY= indicates the remaining memory (%) available for recording.
    - If you wish to redo the recording, press the REC STOP button and then record again. To change the sounds and effects, etc. please set them again.
    - If you make a mistake in recording, you can correct a specific portion of your performance without having to redo the whole part. (Refer to page 84.)
  11. When you have finished recording, press the REC STOP button on the display, or turn off the **PROGRAM MENUS** button.
    - When the **PROGRAM MENUS** button is turned off, the ending command (END) is recorded. Note that; as long as the ending command is not recorded, blank recording continues even if you stop playing.
    - The **SEQUENCER PLAY** button turns on.
- **Multi-track recording**  
Use the following procedure to record one track while listening to the track or tracks already recorded.
1. Follow the procedure to record the first track, and press the REC STOP button at the end of the recording.
    - The indication for the track just recorded changes from "REC" to "PLAY".
  2. Turn on the "REC" indication for the track you wish to record next, and select the sounds and effects, etc.
  3. Press the **START/STOP** button and begin recording.
    - Tracks for which "PLAY" is shown are played back, and you can record in time with this.
    - If you turn on the "REC" for the CONTROL track and begin recording, the rhythm start will not be recorded.
  4. Press the REC STOP button at the end of the recording.
  5. Repeat steps 2 to 4 for other tracks, as desired.
  6. When multi-track recording is finished, turn off the **PROGRAM MENUS** button.
    - If you wish to store part settings that you modified after recording as beginning song data, press the MIXER button and follow the PANEL WRITE procedure. (Refer to page 83.)


## CYCLE RECORD

This mode allows you to have specified recording measures continuously repeated. Thus you can record measures by adding notes during any cycle.

1. On the REALTIME RECORD display, specify "REC" for a track number you are going to record, and "PLAY" for track numbers you wish to have played back.

2. Press the CYCLE: OFF button.


• The display looks similar to the following.

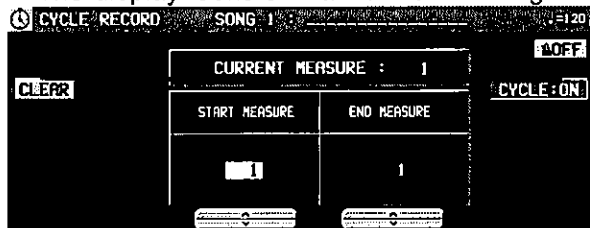

3. Use the START MEASURE  $\wedge$  and  $\vee$  buttons to specify the beginning measure number.

4. Use the END MEASURE  $\wedge$  and  $\vee$  buttons to specify the ending measure number.

• The measure in which the END command has been stored can also be specified.

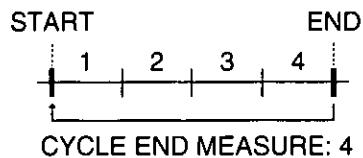

5. Press the **START/STOP** button.

• If the metronome is on, cycle recording of the specified measures begins after a two-measure count.

6. Play the keyboard.

• The specified measures are repeated, during which time you can record by adding notes little by little at the correct timing (over-dubbing).

• If you wish to erase all the performance data from the specified measures, press the CLEAR button.

• If the CYCLE: ON button is pressed, it changes to OFF. This button does not function during recording.

• To return to the REALTIME RECORD display, press the EXIT button.


• Cycle record can also be started from the REALTIME RECORD display whenever the CYCLE: ON indication is shown.

7. When you have finished recording, press the REC STOP button on the display, or turn off the **PROGRAM MENUS** button.


# Sequencer Play

Play back your recorded performance.

1. Press the **SEQUENCER PLAY** button to turn it on.

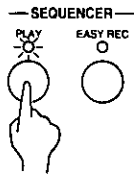

- The display looks similar to the following.

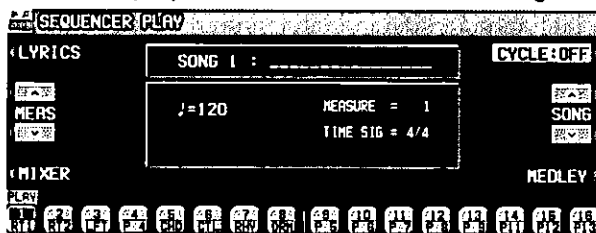

2. Use the **SONG** ^ and v button to select the song number you wish to play back.
3. Use the balance buttons below the display to show "PLAY" above the track numbers you wish to have played back.
  - Highlighted track numbers indicate tracks that are already recorded. Only highlighted track numbers can be selected for playback.
  - You can select two or more tracks to play back at one time.
4. Press the **SEQUENCER RESET (FILL IN 1)** button.
  - The **SEQUENCER** returns to the beginning of the song and the beginning panel settings are recalled.

5. To begin playback from a measure other than measure 1, use the **MEAS** ^ and v buttons to specify the beginning measure.
  - "MEASURE=" indicates the current measure number.

6. Press the **START/STOP** button.
  - The recorded performance is played back from the specified measure.
  - When playback is begun from a measure in which an **INTRO**, **COUNT INTRO**, **FILL IN** or **ENDING** is recorded, the corresponding function does not work.
  - You can press the **MIXER** button and modify the settings for each part.
  - For information about **LYRICS**, refer to page 124.

7. To stop playback, press the **START/STOP** button.
  - If the **START/STOP** button is pressed again, playback will continue from the point it was interrupted.
8. When you are finished playing back your performance, press the **SEQUENCER PLAY** button to turn it off.

If a rhythm progression has been recorded in the **RHYTHM (RHY)** part, the **MEASURE** display used in the **STEP RECORD** and **EDIT** displays conforms to the time signature data stored in the **RHYTHM** part.

## Adjusting the playback tempo

Even with a song having recorded tempo data, you can use **TEMPO/PROGRAM** or **TAP TEMPO** to adjust the tempo to your liking.

- When the tempo is changed, all the tempo data of that song is automatically changed by the same ratio. Accordingly, even in song data in which tempo change data is stored, a single adjustment of the tempo produces a natural-sounding playback.
- To return to the original tempo, while the song is stopped press the **SEQUENCER RESET** button. Note that the tempo change is also canceled when you switch to another song or load a new song.
- The adjusted tempo is canceled when you begin the recording procedure and the original tempo data will be recorded.




## CYCLE PLAY

You can have specified measures played back repeatedly.

1. On the SEQUENCER PLAY display, specify "PLAY" for track numbers you wish to have played back.

2. Press the CYCLE button.


- The display looks similar to the following.

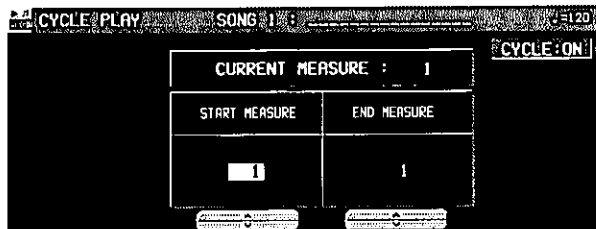

3. Use the START MEASURE  $\wedge$  and  $\vee$  buttons to specify the beginning measure number.

4. Use the END MEASURE  $\wedge$  and  $\vee$  buttons to specify the ending measure number.

- The measure in which the END command has been stored can also be specified.

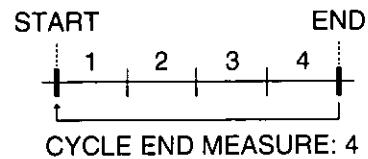

5. Press the **START/STOP** button.

- Cycle playback of the specified measures begins.
- Normally the rhythm pattern is not played back.

6. To stop cycle playback, press the **START/STOP** button again.


- During playback stop, if the **SEQUENCER RESET (FILL IN 1)** button is pressed, the **SEQUENCER** returns to the measure number specified in step 3. If the **SEQUENCER RESET** button is pressed again, the **SEQUENCER** returns to measure 1.
- If you press the **CYCLE: ON** button to turn it OFF, cycle playback is not possible.
- To return to the SEQUENCER PLAY display, press the **EXIT** button.
- Cycle playback can also be specified on the SEQUENCER PLAY display whenever the **CYCLE: ON** indication is shown.

## MEDLEY

Multiple recorded songs can be played back in a medley.

1. On the SEQUENCER PLAY display, press the **MEDLEY** button.

- The display looks similar to the following.

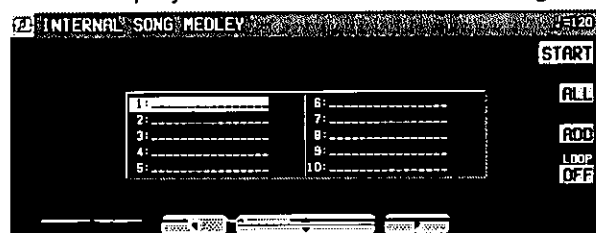

2. Specify the order of songs in the medley.

- If **ALL** is pressed, all the files are selected, and the songs are played back in order in a medley. If **ALL** is pressed again, the files are deselected.
- You can use the buttons below the display to select a song to add to the song list, then press the **ADD** button to add it to the list. Repeat these steps to create your own list of songs to have played back. A M01, M02 etc. next to the file name indicates its order in the list.
- You can delete a marked file from the medley song list by selecting it and pressing the **ADD** button.
- Use the **LOOP** button to specify **ON** or **OFF** for repeat playback of the medley.


3. Press the **START** button.

- During medley playback, you can use the **SKIP** button to skip to the next song.

## SEQUENCER VOLUME

When playing the keyboard along with a recorded performance, you can adjust the total volume of all the playback parts as one.

Use the **APC/SEQUENCER VOLUME** slide control to adjust the volume.

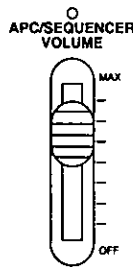

- Use this control to lower the volume of the recorded playback parts when it is too loud relative to the volume of your manual performance.
- The volume of all sounds other than your manual performance—including **PERFORMANCE PADS**, MIDI input, etc.—is lowered.
- At the **MAX** position, the volume of the playback parts correspond to their current settings; at the **OFF** position, the volume is 0.
- The volume can be adjusted for each part. (Refer to page 27.)
- Except during **SEQUENCER** playback or **DIRECT PLAY** of a disk, this slide control adjusts the total volume of all the automatic accompaniment parts.
- During **SEQUENCER** recording, the volume is automatically at its maximum regardless of the position of the slide control. During playback, however, lowering the slide control from the **MAX** position will lower the volume from its recorded level. For this reason, the slide control should normally be left in the **MAX** position.

## Naming

Here is the way to assign a name to your recorded song.

1. On the SEQ MENU display use the SONG SELECT  $\wedge$  and  $\vee$  buttons to select a song.

2. Press the NAMING button.

- The display looks similar to the following.



3. Use the buttons below the display to assign a name.

- Press the **ABC** button to enter alphabetical characters. While the **SHIFT** button is pressed, upper case letters are entered.
- Press the **123** button to enter numbers, etc. While the **SHIFT** button is pressed, you can enter symbols.
- Press the **POSITION** button to move the cursor.
- You can also use the **TEMPO/PROGRAM** dial to select the characters.


- Press the **INS** button to enter a space at the cursor position.
- Press the **DEL** button to erase the character at the cursor position.
- Press the **CLR** button to erase the entire name.
- Press the  $\rightarrow\leftarrow$  button to center the name.

4. Press the **OK** button.

## Panel Write

You can change the panel status which is in effect at the beginning of the song. These are the settings which are recalled when the **SEQUENCER RESET** button is pressed.

1. On the SEQ MENU display, use the SONG  $\wedge$  and  $\vee$  buttons to select the song number. Then select PANEL WRITE.
  - The display looks similar to the following.

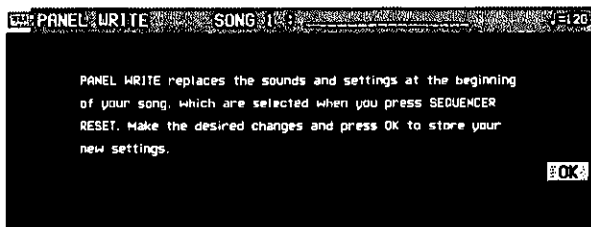


2. Use the panel buttons to change to the desired panel settings.

3. Press the OK button.
  - "COMPLETED!" is shown on the display.
  - PANEL WRITE is automatically activated at the when you start to record.
  - For rhythm data, the data in the RHYTHM part has priority.

## Song Select

You can select a desired song from the list of recorded songs.


1. On the SEQ MENU display, select RECORD & EDIT.
2. On the RECORD & EDIT display, select SONG SELECT.
  - The display looks similar to the following.

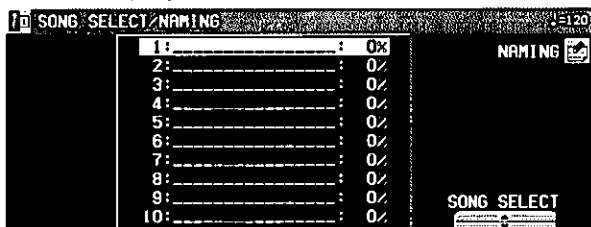

3. Use the SONG SELECT  $\blacktriangle$  and  $\blacktriangledown$  buttons to select a song.
  - The total amount of memory used for the current song is shown as a percentage (%) to the right of the song name.
  - If the NAMING button is pressed, the NAMING display appears.
  - To optimize memory, songs you do not wish to preserve should be deleted. (Refer to page 93.)

# Punch Record


If you make a playing error during REALTIME RECORD or would like to change the recording for some other reason, you can use the punch recording feature to correct a selected portion of the performance without having to redo the whole part.

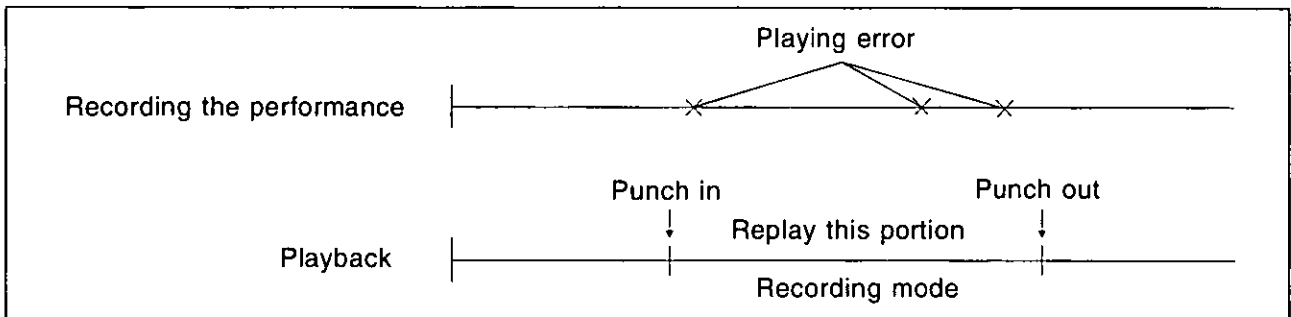

1. On the SEQ MENU display, use the SONG SELECT  $\wedge$  and  $\vee$  buttons to select the song number. Then select RECORD & EDIT.

2. On the RECORD & EDIT display, select PUNCH RECORD.

- The display looks similar to the following.

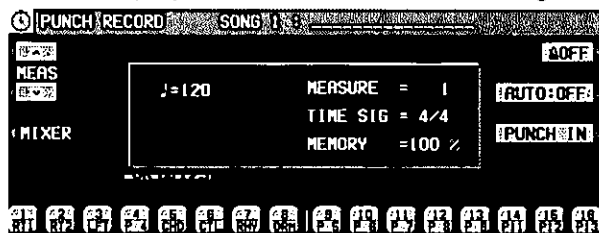

3. Select the track which contains the portion you want to correct.

- You cannot select a track in which no data is stored.
- On the display "REC" indicates tracks which are being recorded, and "PLAY" indicates tracks which are being played back.

4. Use the MEAS  $\wedge$  and  $\vee$  buttons to specify the beginning measure of playback.

- "MEASURE=" indicates the current measure number.

5. Press the **START/STOP** button to begin playback of the specified track.

6. During playback, press the PUNCH IN button at the point you want to begin recording.

- Recording begins as soon as the PUNCH IN button is pressed. Begin playing at this point.
- The REC indication changes to the PUNCH indication.
- The PUNCH IN button switches to the REC STOP button.

7. Press the REC STOP button at the point you want to stop recording.

- Punch recording stops immediately.


- You can also begin punch-in recording by playing the keyboard.

- You can specify the punch-in/punch-out points with the optional Foot Switch (sold separately). (Refer to page 159.)

### ■ AUTO PUNCH RECORD

You can also set the punch-in and punch-out points beforehand, so that recording automatically begins and ends at the specified points.

1. On the PUNCH RECORD display, press the AUTO: OFF button.
  - The display looks similar to the following.

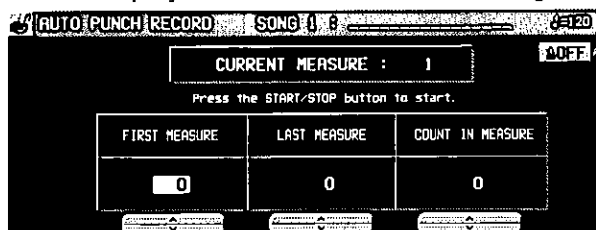

2. Use the FIRST MEASURE  $\wedge$  and  $\vee$  buttons to specify the number of the punch-in measure.
3. Use the LAST MEASURE  $\wedge$  and  $\vee$  buttons to specify the number of the punch-out measure.
  - The number of the LAST measure must be higher than the number of the FIRST measure.
  - The specified measure is recorded.
4. Use the COUNT IN MEASURE  $\wedge$  and  $\vee$  buttons to specify the number of lead-in measures you wish to have played back before the punch-in measure.
  - Set the metronome to on or off with the ON or OFF button.
5. Press the **EXIT** button.
  - The display changes to the PUNCH RECORD display.
6. Press the **START/STOP** button.
  - Playback begins from the measure indicated by CURRENT MEASURE on the display.
  - Pertinent information, such as the FIRST MEASURE, is shown in the upper section of the display.
7. Correct the performance.
  - The mode changes automatically to the recording mode at the specified FIRST measure. Begin playing at this point. The mode automatically changes back to the playback mode at the specified LAST measure.
  - To discontinue punch recording in the middle, press the CANCEL button. In this case, the recorded contents up to that point are erased.



8. Specify the pitch and velocity of the note by playing the keyboard.
  - The dot on the display where the note is stored changes to a \* mark.
  - When recording chords, you can store multiple notes at one position.
  - Any panel setting changes—for example changes in the sound selection, button operation, wheel operation, etc.—are recorded at the cursor position.
  - When a wheel or dial is operated, the input value is indicated on the display. Confirm that this is the correct value and press the YES button to record the value or the NO button to cancel it.

**REST:**

To store a rest, after specifying the note LENGTH, press the REST button.

- Positions at which nothing is stored are read as rests.

**■ Storing control data**

Various control data can be stored at the cursor position.

1. On the STEP RECORD: MELODY display, press the CTL button.
2. Use the CTL ^ and v buttons to select the control data you wish to insert.
  - Select from PAN, KEY SHIFT (COARSE TUNE), TUNING (FINE TUNE), BEND SENS.
3. Use the VALUE ^ and v buttons to adjust the numerical value of the setting.
4. Press YES button.

**■ Correcting the data**

1. In the STEP RECORD mode, specify the track you wish to correct.
2. Use the MEAS buttons to go to the measure you wish to modify. Use the CURSOR buttons to move the cursor to the point ( \* ) you wish to edit.
  - The data stored at that point is shown on the display.
  - When multiple data is stored at one point, different data is displayed in order each time a CURSOR button is pressed. When a chord is recorded, a different note in the chord is displayed each time a CURSOR button is pressed.
3. Correct the data.

**ERS:**

If you make a mistake, move the cursor to the error, and after displaying the data you wish to erase, press the ERS button.

**BAL:**

To specify the volume at the cursor position, after pressing the BAL button, use the VALUE buttons to set the volume (0 to 127).

9. Repeat steps 5 through 8 to continue storing notes.
  - To input data on another track, press the button for the desired track and repeat the procedure from step 2.

10. When you have finished recording, press the **PROGRAM MENUS** button to turn it off.

There are three types of data:

**Performance data**

NOTE data (note pitch) and VEL data (how hard the key was played) and LEN data (1 = 1/96 of a quarter note [ ♩ ]) are displayed. Use the relevant buttons to correct the data as desired.

**Sound data**

The name of the sound is displayed. Change the sound as desired (the sound setting display is interposed on the current display).

**Control data**


The name of the function is displayed. Change the data as desired.

- Press the ERS button to erase the data which is displayed.
- You can also correct data which was stored in the REALTIME RECORD mode.
- Performance (NOTE) data can be recorded or edited on a piano roll display, and there is also a specialized display for recording and editing the DRUMS part data. (Refer to page 94.)

### Store a chord progression

Store the chord progression for the **AUTO PLAY CHORD** in the track for the **CHORD** part. Then, when the **AUTO PLAY CHORD** is used during playback, even if you do not specify the chords with your left hand, the chords change automatically.

- The chord length is specified with the **CHORD STEP RECORD** keys on the keyboard.

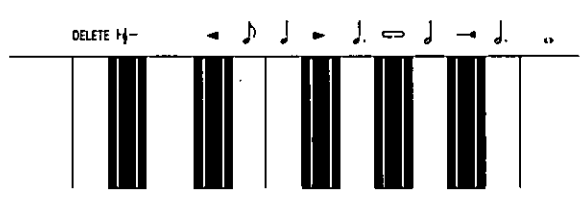

**Note value keys**

- Whole note
- ◡ Dotted half-note
- ◡ Half-note
- ◡ Dotted quarter-note
- ◡ Quarter-note
- ◡ Eighth-note

**Reset key**

⏮ Press to begin storing from the beginning.

**Correction keys**

- ◀ Move back one step.
- ▶ Move forward one step.

**Repeat key**

↺ Press to end the chord-storing procedure and to specify automatic repeat playback of the stored progression.

**End key**

⏹ Press after the whole chord progression has been stored.

**DELETE key**


DELETE Press to erase data.

- To erase all the data from the current track, while pressing the **DELETE** key, press the End key (⏹).

#### ■ Example of storing a chord progression


Measure 1	2	3	4
C	C	Am F	D7 G7
○	○	◡ ◡	◡ ◡

1. On the SEQ MENU display, use the SONG SELECT ^ and v buttons to select the song number. Then select RECORD & EDIT.
2. On the RECORD & EDIT display, select STEP RECORD.
  - The display changes to the PART SELECT display.
3. Using the balance buttons below the display, select the track to which the CHORD (CHD/APC) part has been assigned.
  - The display changes to the STEP RECORD: CHORD input display similar to the following.

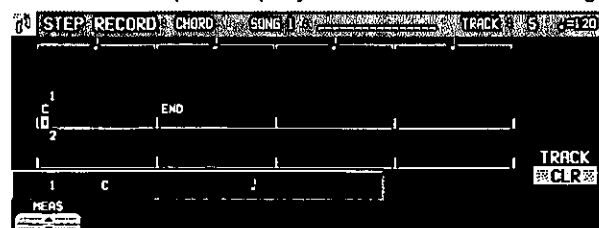

#### 4. Store the chords.

<Measure 1, measure 2>  
While playing a C chord with your left hand, press the ○ key one time with your right hand.

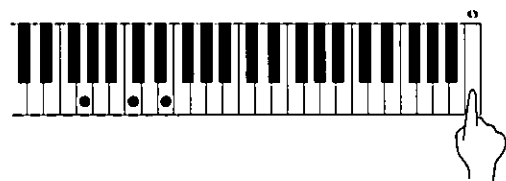


- A "beep" tone indicates that the chord has been successfully stored.
- The dot on the display where the chord is stored changes to a \* mark and the cursor automatically moves forward, in accordance with the specified note value, to the next unrecorded position. The chord name is shown on the display.



## &lt;Measure 3&gt;

- (1) While playing an Am chord, press the  $\downarrow$  key one time.

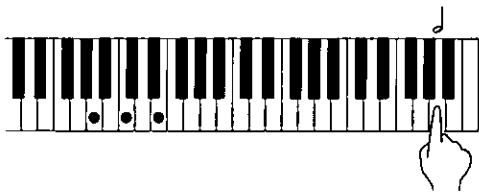

- (2) While playing an F chord, press the  $\downarrow$  key one time.



## &lt;Measure 4&gt;

- (1) While playing a D7 chord, press the  $\downarrow$  key one time.

- (2) While playing a G7 chord, press the  $\downarrow$  key one time.

- You can press the **INTRO & ENDING** button or a **FILL IN** button on the panel to store the desired pattern at the cursor position. (An **INTRO** or **COUNT INTRO** can be stored only at the beginning.)
- Store a rest by pressing a note value key without specifying a chord.

5. At the end of the chord progression, press the End key ( $\rightarrow$ ).

- The Keyboard exits the recording mode.
- During playback, playback of the recorded chord progression stops at this point. For automatic repeat playback of the chord progression, press the Repeat key ( $\leftrightarrow$ ) instead of the End key ( $\rightarrow$ ).
- When you play back the track for the CHORD part, the chords of the automatic accompaniment change in accordance with the stored chord progression.
- To specify chords by the ONE FINGER mode, select the ONE FINGER mode before entering the STEP RECORD mode.
- If the ON BASS button is on, chords such as "C on G" can also be specified (except in the ONE FINGER mode).
- The CHORD FINDER feature, which shows you how to finger a specified chord, is available. (Refer to page 55.)

## ■ Correct the recorded chord progression

- Follow the procedure to select the STEP RECORD: CHORD display.
- Use the MEAS buttons to go to the measure you wish to modify. Use the  $\blacktriangleleft$  and  $\blacktriangleright$  Correction keys to move the cursor to the point (\*) you wish to edit.
  - The lengths of rests are indicated by the respective rest value  $\times$  its multiplier.

## Example:

$\downarrow$  ..... 1-beat rest (quarter rest)  
 $\gamma$  ..... 1/2-beat rest (eighth rest)  
 $\downarrow \times 1 + \gamma$  ..... 1-1/2-beat rest  
 (dotted quarter rest)  
 $\downarrow \times 10$  ..... 10-beat rest

- To go to the end of the chord progression, while pressing the Reset key ( $\downarrow$ ), press the  $\blacktriangleleft$  key.

- Correct the chord data.

## Chord data

When the chord name is displayed at the cursor position, you can press the **DELETE** key to erase the data and then store a new chord.

- If you do not erase the displayed data before entering new chord data, the new data is inserted at this point, and the displayed data is merely shifted by the note value of the new chord.
- Rests can also be erased. Each time the **DELETE** key is pressed, the rest is erased in units of  $\downarrow \times 1$ . The  $\gamma$  rest is erased last.
- If you wish to cancel the REPEAT, enter an END command.

## Control data

The name of the stored function (INTRO, FILL, etc.) is displayed. You can press the **DELETE** key to erase the data which is displayed.

## ■ TRACK CLEAR


To erase all data from the current track, press the CLR button, and then press the YES button on the confirmation display.

- If you wish to cancel the clear procedure, press the NO button.

## Store a rhythm progression

Changes in the rhythm selection and tempo, as well as the intro, fill-ins and the ending, can be stored by measures with the step recording method.

1. On the SEQ MENU display, use the SONG SELECT  $\wedge$  and  $\vee$  buttons to select the song number. Then select RECORD & EDIT.
2. On the RECORD & EDIT display, select STEP RECORD.
  - The display changes to the PART SELECT display.
3. Using the balance buttons below the display, select the track to which the RHYTHM (RHY) part has been assigned.
  - The display changes to the STEP RECORD: RHYTHM input display similar to the following.

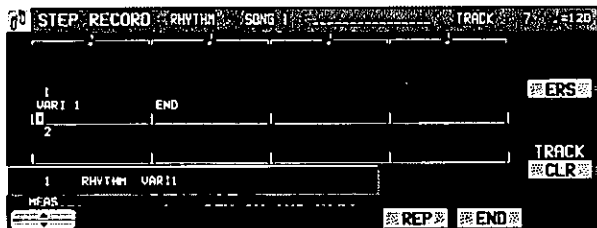

4. Use the MEAS  $\blacktriangle$  and  $\blacktriangledown$  buttons to go to the measure you wish to record.
5. Store the rhythm data.
  - Data which can be stored:
    - START/STOP**  
Changes in the rhythm selection
    - COUNT INTRO, INTRO, FILL IN, ENDING**  
Tempo changes
  - Be sure to store the **START/STOP** data in the measure in which the rhythm starts or stops.
  - If you are storing a **COUNT INTRO** or **INTRO**, store this data before the **START/STOP** data.
  - If the tempo is changed, the display changes to the confirmation display. After specifying the desired tempo, Press the YES button to store the specified tempo, or press the NO button to cancel the new tempo value.
6. Repeat steps 4 and 5 to continue storing the rhythm progression.
7. At the end of the rhythm progression, press the END button.
  - If the REP button is pressed instead of the END button, during playback the recorded rhythm progression is repeated.
  - The Keyboard exits the recording mode.

### ■ Correct the recorded rhythm progression

1. Follow the procedure to select the STEP RECORD: RHYTHM display.
2. Use the MEAS buttons to go to the measure you wish to modify. (The \* is highlighted.)
3. Correct the rhythm data.
  - Press the ERS button to erase data at the cursor position.
  - If you wish to cancel the REPEAT, enter an END command.
  - If you select a rhythm with a different time signature, the time signature of all subsequent measures will also change.
  - If data has already been recorded in other tracks, you cannot select a rhythm with a different time signature.

### ■ TRACK CLEAR

To erase all data from the current track, press the CLR button, and then press the YES button on the confirmation display.

- If you wish to cancel the clear procedure, press the NO button.

# Track Assign

Each **SEQUENCER** part is already assigned to a track number. However, you can use the **TRACK ASSIGN** function to assign parts to tracks as you wish.

1. On the **SEQ MENU** display, use the **SONG SELECT**  $\wedge$  and  $\vee$  buttons to select the song number. Then select **RECORD & EDIT**.

2. On the **RECORD & EDIT** display, select **TRACK ASSIGN**.

• The display looks similar to the following.

TRACK ASSIGN				SONG 1				PRESET			
TR	PART ASSIGN	LOCAL CONT.	MIDI OUT	TR	PART ASSIGN	LOCAL CONT.	MIDI OUT	TR	PART ASSIGN	LOCAL CONT.	MIDI OUT
TR 1	RIGHT1	DN	ON	TR 9	PART 5	DN	ON	TR 17	PART 13	DN	ON
TR 2	RIGHT2	DN	ON	TR 10	PART 6	DN	ON	TR 18	PART 14	DN	ON
TR 3	LEFT	DN	ON	TR 11	PART 7	DN	ON	TR 19	PART 15	DN	ON
TR 4	PART 4	DN	ON	TR 12	PART 8	DN	ON	TR 20	PART 16	DN	ON
TR 5	CHORD	—	—	TR 13	PART 9	DN	ON	TR 21	PART 17	DN	ON
TR 6	CONTROL	DN	ON	TR 14	PART 10	DN	ON	TR 22	PART 18	DN	ON
TR 7	RHYTHM	DN	ON	TR 15	PART 11	DN	ON	TR 23	PART 19	DN	ON
TR 8	DRUMS	DN	ON	TR 16	PART 12	DN	ON	TR 24	PART 20	DN	ON

3. Use the **TR**  $\blacktriangle$  and  $\blacktriangledown$  buttons to select the track.

4. Use the **TRACK ASSIGN**  $\wedge$  and  $\vee$  buttons to select the part for the specified track.

- When a part other than the **CONTROL**, **APC**, **CHORD** or **RHYTHM** part is assigned, the track assign procedure is completed at this point.
- Either the **CHORD** part or **APC** part can be assigned to a track, but not both.
- The **CONTROL**, **APC**, **CHORD** and **RHYTHM** parts cannot be assigned to more than one track.
- You can use the **ON** and **OFF** buttons for **LOCAL CONT.** to specify whether or not the sound of the part assigned to this track is generated. Because no sound is generated for this instrument's parts assigned to tracks set to **OFF** through this procedure, use this setting to generate sound from an external sound source through the **MIDI** connectors.
- You can use the **MIDI OUT ON** and **OFF** buttons to specify whether or not the data of the part assigned to this track is sent as **MIDI** data. When set to **OFF**, the data is not sent, even if **MIDI** equipment is connected.


5. When assigning the **CONTROL**, **APC**, **CHORD** or **RHYTHM** part, press the **OK** button.

## TRACK ASSIGN PRESETS

A preset track assignment can be selected.

1. On the **TRACK ASSIGN** display, press the **PRESET** button.

• The display looks similar to the following.

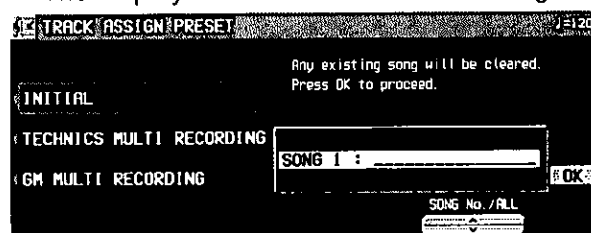

2. Use the **SONG**  $\wedge$  and  $\vee$  buttons to select the song number for which the preset track assignment will be effective.

• If **ALL** is selected, the track assignment is effective for all the songs.

3. Select the track assign mode.

**INITIAL:**

Factory-preset settings.

**TECHNICS MULTI RECORDING:**

The optimum track assignment for multiplex recording.

**GM MULTI RECORDING:**

The optimum track assignment for creating **GENERAL MIDI** data.


4. Press the **OK** button.

- "COMPLETED!" is shown on the display and the selected track assign mode is enabled.
- You can confirm the track assignment settings on the **TRACK ASSIGN** display.

# Quantize

The QUANTIZE function can correct the timing of your performance after it has been recorded. If the rhythm is slightly out of sync or inexact, it will automatically be corrected to the specified quantize level.


1. On the SEQ MENU display, select RECORD & EDIT.
2. On the RECORD & EDIT display, select QUANTIZE.
  - The display looks similar to the following.

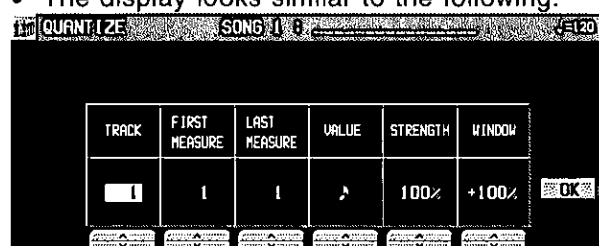

Rhythm as written in the score

Timing of actual performance

Quantized performance

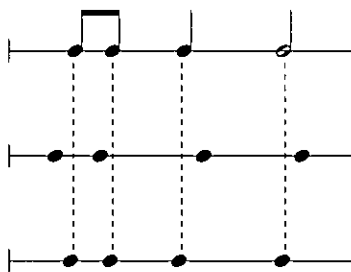


3. Use the TRACK  $\wedge$  and  $\vee$  buttons to specify the track number.
  - You cannot select the track for the CONTROL, RHYTHM or CHORD part.
  - If ALL is selected, all the tracks are quantized.
4. Use the FIRST MEASURE  $\wedge$  and  $\vee$  buttons to specify the start point (measure number).
5. Use the LAST MEASURE  $\wedge$  and  $\vee$  buttons to specify the end point (measure number).
6. Use the VALUE  $\wedge$  and  $\vee$  buttons to specify the quantize level.
  - Select from ♩, ♪, ♫, ♮, ♯, ♭, ♭♭, ♯♯. (A 3 denotes a triplet-type note.)

7. Use the STRENGTH  $\wedge$  and  $\vee$  buttons to select the amount of quantize (%).
  - 100% is a convenient setting. When set to 100%, the performance data is quantized exactly to the level specified for the VALUE ("just"). For example, at 50%, the data is quantized to a point that is half that of the just level. By this setting, you can attain an effect that is very slightly off-beat from the rhythm.

8. Use the WINDOW  $\wedge$  and  $\vee$  buttons to specify the range (%) affected by the quantize setting.
  - With the increment set to 100 for the VALUE, at a + setting, data close to the just point is corrected, and at a - setting, data far from the just point is corrected. For example, if set to -30% the quantize function affects data far from the just point, and if set to +30% the quantize function affects data close to the just point. +100% is usually a convenient setting.
  - The +100% setting and the -100% setting are the same.

Example: When VALUE is set to ♩

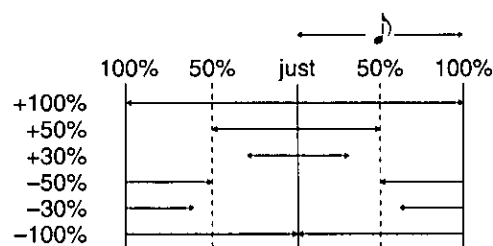


9. Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

## Song Clear

Erase the recorded contents of all tracks.

1. On the SEQ MENU display, select RECORD & EDIT.
2. On the RECORD & EDIT display, select SONG CLEAR.
  - The display looks similar to the following.

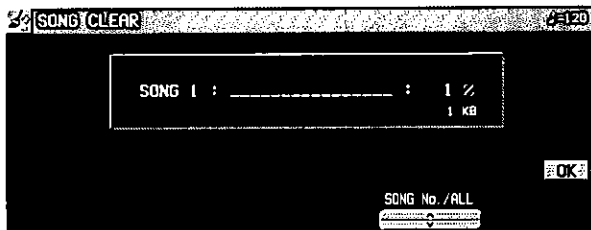

3. Use the SONG No./ALL ^ and v buttons to specify the number of the song to erase.
  - The data size (KB) and the total amount of **SEQUENCER** memory or current song memory used is shown as a percentage (%) to the right of the song name.
  - If ALL is selected, all the songs recorded in the **SEQUENCER** will be erased.


4. Press the OK button.

- The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.
- If the YES button is pressed, "COMPLETED!" appears on the display, the specified songs are erased.

## Track Clear

Erase the contents of a specific track.

1. On the SEQ MENU display, select RECORD & EDIT.
2. On the RECORD & EDIT display, select TRACK CLEAR.
  - The display looks similar to the following.

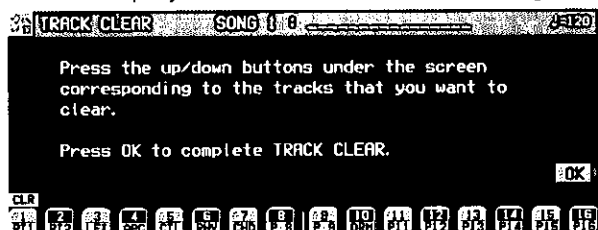

3. Use the balance buttons to select the track or tracks you wish to clear.
  - A "CLR" mark is shown for the selected tracks.

4. Press the OK button.


- The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.
- If the YES button is pressed, the specified tracks are erased.

# Note Edit

You can edit performance (NOTE) data on a piano roll display. This differs from the normal STEP RECORD edit procedure, and is a convenient way to check the data for each note.

- Data other than NOTE data cannot be corrected or recorded. To correct or record other types of data, use the STEP RECORD display. (Refer to page 86.)

1. On the SEQ MENU display, select RECORD & EDIT.
2. On the RECORD & EDIT display, select NOTE EDIT.
3. On the PART SELECT display, select a track.
  - The CHORD, RHYTHM and CONTROL tracks cannot be selected.
  - The display looks similar to the following.

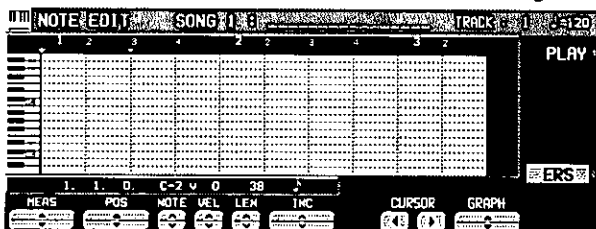

4. Use the MEAS ▲ and ▼ buttons to select the measure you wish to edit.
5. Use the CURSOR ◀ and ▶ buttons to move the cursor (▼) to the point you wish to edit.
  - Recorded performance (NOTE) data is shown as horizontal bars. Data selected for editing is highlighted.
  - You can use the INC ^ and v buttons to change the increment of cursor movement. The resolution can be set at 1/96. However, if NOTE data is present between increments, the cursor will stop.
  - Use the POS ▲ and ▼ buttons to change the value.  
Example: 10.2.48 indicates a point in measure 10, beat 2, point 48 (one point is 1/96 of a quarter note [ 1/96 ]).
  - ▾ is shown at the point where the END command is stored.
6. Select the data to edit (it changes to a highlighted horizontal bar). Edit the data.
  - Use the POS ▲ and ▼ buttons to move the cursor, the NOTE ^ and v buttons to change the note number, the VEL ^ and v buttons to change the velocity (how hard the keys are played), and the LEN ^ and v buttons to change the note length (1 = 1/96 of a quarter note [ 1/96 ]).

- Use the GRAPH ▲ and ▼ buttons to view a higher or lower section of the keyboard (in one-octave steps).
  - If the ERS button is pressed, the selected NOTE data is erased.
7. Repeat steps 4 to 6 to continue editing.

## ■ Inserting note data

You can also store note data on this display.

1. Specify the point where the new note data will be stored.
2. Use the LEN ^ and v buttons to specify the note length.
  - Examples of note lengths (1 = 96)
    - 91: tenuto (95%)
    - 76: normal (80%)
    - 48: staccato (50%)
    - 24: cutting (25%)
3. Play a key on the keyboard to specify the note pitch (NOTE NUMBER) and velocity (how hard the key is played).
4. Repeat steps 1 to 3 to input more note data.


### ■ CYCLE PLAY

You can aurally check the data you are editing by accessing the CYCLE PLAY display from the NOTE EDIT display.

- If you wish other tracks to be played back, they should be selected beforehand on the SEQUENCER PLAY display. (Refer to page 80.)

1. On the NOTE EDIT display, press the PLAY button.

- The display looks similar to the following.

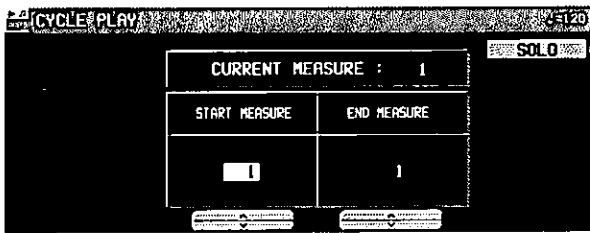

2. Use the START MEASURE  $\wedge$  and  $\vee$  buttons to select the beginning playback measure.

3. Use the END MEASURE  $\wedge$  and  $\vee$  buttons to select the last playback measure.

4. Press the **START/STOP** button.

- Cycle playback of the specified measures begins.
- If the SOLO button is turned on, playback changes to that of the recording track only. If it is turned off, all the tracks specified on the SEQUENCER PLAY display are played back.

5. To stop cycle playback, press the **START/STOP** button again.

- During playback stop, if the **SEQUENCER RESET (FILL IN 1)** button is pressed, the **SEQUENCER** returns to the measure number specified in step 2. If the **SEQUENCER RESET** button is pressed again, the **SEQUENCER** returns to measure 1.

## Drum Edit


The DRUMS part can be edited on a specialized display. This differs from the normal STEP RECORD edit procedure, and is a convenient way to check the data for each note.

1. On the SEQ MENU display, select RECORD & EDIT.

2. On the RECORD & EDIT display, select DRUM EDIT.

3. On the PART SELECT display, select the track for the DRUMS part.

- The CHORD, RHYTHM and CONTROL tracks cannot be selected.
- The display looks similar to the following.

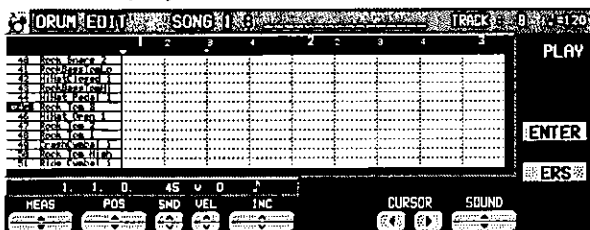

4. Use the SOUND  $\blacktriangle$  and  $\blacktriangledown$  buttons to select the percussion instrument you wish to edit.

- The number to the left of the instrument name is its MIDI NOTE NUMBER in the Technics arrangement.
- If sounds other than percussion instrument sounds are assigned, they are not displayed.

5. Use the MEAS  $\blacktriangle$  and  $\blacktriangledown$  buttons to select the measure you wish to edit.

6. Use the CURSOR  $\blacktriangleleft$  and  $\blacktriangleright$  buttons to move the cursor ( $\blacktriangledown$ ) to the point you wish to edit.

- Recorded performance data is shown as vertical bars. Data selected for editing is highlighted.

- You can use the INC  $\wedge$  and  $\vee$  buttons to change the increment of cursor movement. The resolution can be set at  $\downarrow/96$ . However, if NOTE data is present between increments, the cursor will stop.

- Use the POS  $\wedge$  and  $\vee$  buttons to change the value.

Example: 10.2.48 indicates a point in measure 10, beat 2, point 48 (one point is 1/96 of a quarter note [ ↓ ]).

- ▾ is shown at the point where the END command is stored.
7. Select the data to edit (it changes to a long bar). Edit the data.
    - Use the POS ▲ and ▼ buttons to move the cursor, the SND ▲ and ▼ buttons to change the percussion instrument sound, and the VEL ▲ and ▼ buttons to change the velocity (how hard the keys are played).
    - If the ERS button is pressed, the selected NOTE data is erased.
  8. Repeat steps 2 to 5 to continue editing.

#### ■ Inserting DRUMS data

You can also store DRUMS data on this display.

1. Specify the point where the new note data will be stored.
2. Use the VEL ▲ and ▼ buttons to specify the velocity (how hard the key is played).
3. Press the ENTER button to store the data.
  - Instead of the ENTER button, you can store data (including velocity data) by playing the keyboard. In this case, the instrument is that specified on the display, regardless of which key is played.
4. Repeat steps 1 to 3 to input more DRUMS data.

#### ■ CYCLE PLAY

You can aurally check the data you are editing by accessing the CYCLE PLAY display from the DRUM EDIT display.

- The procedure is the same as for NOTE EDIT.
- If you wish other tracks to be played back, they should be selected beforehand on the SEQUENCER PLAY display. (Refer to page 80.)

## After Touch Setting

Specify whether or not AFTER TOUCH data is recorded. The AFTER TOUCH applies a special effect to the sound depending on how hard the keys are being pressed.

1. On the SEQ MENU display, use the SONG SELECT ▲ and ▼ buttons to select a song number. Then select RECORD & EDIT.
2. On the RECORD & EDIT display (PAGE 2/2), select AFTER TOUCH SETTING.
  - The display looks similar to the following.



3. Use the ON and OFF buttons to specify if the aftertouch data is recorded.

ON:

Aftertouch data is recorded with the performance.

OFF:

The data is not recorded (factory-preset setting).




# Copy and paste the recorded data

You can copy and paste specific portions of the recorded data.

## Select the function


1. On the SEQ MENU display, use the SONG SELECT  $\wedge$  and  $\vee$  buttons to select the number of the song. Then select COPY & PASTE.
  - The display looks similar to the following.

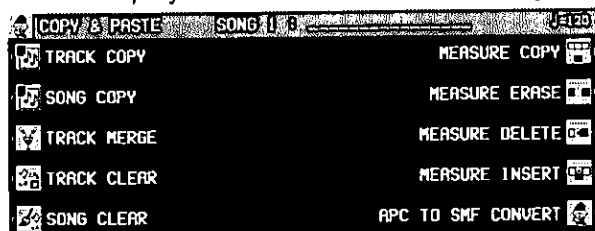

2. On the COPY & PASTE display, select a function.
3. Perform the editing procedures. (See below.)
  - During the editing procedure, if the indicator for the **TEMPO/PROGRAM** is lit, you can use the **TEMPO/PROGRAM** for the editing function.

## SONG COPY

Copy all the recording data of a song to a specific song memory.

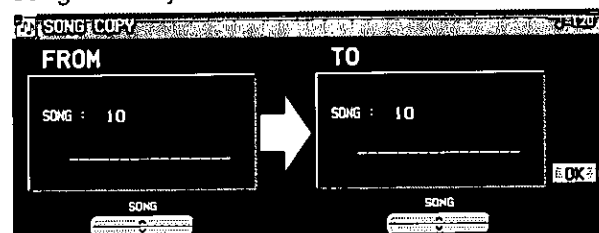

1. On the FROM side, use the SONG  $\wedge$  and  $\vee$  buttons to select the song number you wish to copy from.
2. On the TO side, use the SONG  $\wedge$  and  $\vee$  buttons to select the song number to copy to.
3. Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

## TRACK COPY

Copy the recorded data from specific tracks of a song.




1. Specify the track you wish to copy from.
  - On the FROM side, use the SONG  $\wedge$  and  $\vee$  buttons and TRACK  $\wedge$  and  $\vee$  buttons to specify a track.
  - If ALL is selected, all the tracks of the specified song number will be copied.
2. Specify the track you wish to copy to (TO side).
3. Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.
  - The track assignment settings are also copied. Note that in some cases, the CONTROL, RHYTHM and CHORD part data in the destination tracks may be lost.

### TRACK MERGE

Merge the recorded contents of two tracks (source tracks) and store the merged contents in a third track (destination track).

- When the TRACK MERGE function is executed, the data is erased from the two source tracks.

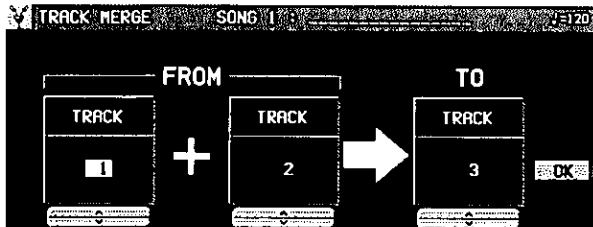


1. Select the two source tracks (FROM).
  - On the FROM side, use the TRACK ^ and v buttons to select the two source tracks.
  - You cannot select the track to which the CONTROL, RHYTHM or CHORD part has been assigned.
  - If the part assigned to the left source track ("left" meaning its position on the TRACK MERGE display) is different from the part assigned to the right source track, when the parts are merged in the destination track, the new track is assigned the same part as the left track.
2. Select the destination track (TO).
  - Use the TRACK ^ and v buttons to the right of the display to specify the track number.
3. Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

### MEASURE COPY

Copy recorded data of specified measures to a specified point.

- On the destination track, the new data replaces the current measure contents.

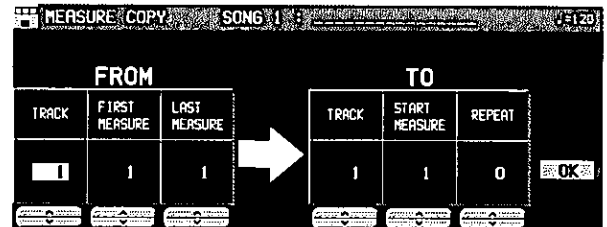

1. Specify the measures you wish to copy from the source track (FROM).
  - On the FROM side, specify the settings with the corresponding buttons.

**TRACK:**

Specify the track number you wish to copy the measures from.

- You cannot select the track for the RHYTHM part or CHORD part in which a repeat command has been stored.
- If ALL is selected, the specified measures are copied to all tracks at the same time.

**FIRST MEASURE:**

Specify the first measure to copy.

**LAST MEASURE:**

Specify the last measure to copy.

2. Specify where you wish to copy the selected measures to.

- On the TO side, specify the settings with the corresponding buttons.

**TRACK:**

Specify the track number you wish to copy to.

- Measures in a track for the CONTROL, RHYTHM or CHORD part can be copied only to the same track.

**START MEASURE:**

Specify the start point to copy the selected measures to.

**REPEAT:**


Specify the number of times the selected measures are to be repeated.

3. Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.
  - Note that if the END command is included in the source data, it is also copied. Any data following the END command is not copied.

### MEASURE ERASE

Erase the recorded contents of specific measures. You can also specify which type of data is to be erased.

- Note that only the contents of the measures are erased, not the measures themselves; the length of the performance remains the same.

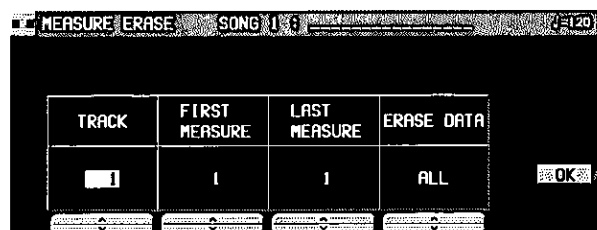

1. Use the TRACK ^ and v buttons to specify the track number.
  - This function does not work for the RHYTHM part or CHORD part in which a repeat command has been stored.
  - If ALL is selected, data is erased from the specified measures of all the tracks at one time.
2. Use the FIRST MEASURE ^ and v buttons to specify the start point (measure number).
3. Use the LAST MEASURE ^ and v buttons to specify the end point (measure number).
4. Use the ERASE DATA ^ and v buttons to specify the type of data to be erased.

**ALL:**

All data is erased.

**NOTE:**

Only note data is erased.

**CONTROL:**


Only control data (volume, effect and other panel settings as well as selection changes) is erased.

5. Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

### MEASURE DELETE

Delete specified measures from a track.

- The length of the performance accordingly decreases by the number of deleted measures.

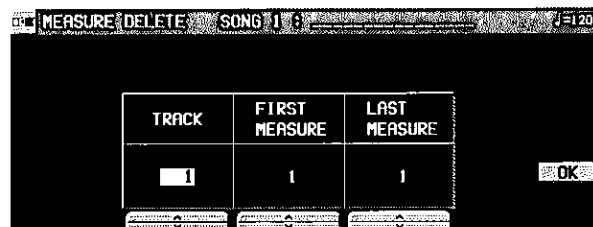


1. Use the TRACK ^ and v buttons to select the track from which measures are to be deleted.
  - This function does not work for the CHORD or RHYTHM track in which the repeat function has been stored.
  - If ALL is selected, the specified measures are deleted from all the tracks at one time.
2. Use the FIRST MEASURE ^ and v buttons, to specify the first measure to delete.
3. Use the LAST MEASURE ^ and v buttons to specify the last measure to delete.
4. Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

## MEASURE INSERT

Insert specified measures at a specified point.

- The length of the performance accordingly increases by the number of inserted measures.

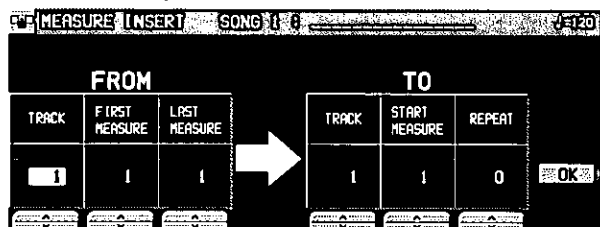

- Specify the measures you wish to copy from the source track.
  - On the FROM side, specify the settings with the corresponding buttons.

### TRACK:

Specify the track number you wish to copy the measures from.

- This function does not work for the CHORD or RHYTHM track in which the repeat function has been stored.
- If ALL is selected, the measures are inserted in all tracks at the same time.

### FIRST MEASURE:

Specify the first measure to copy.

### LAST MEASURE:

Specify the last measure to copy.

- Specify where you wish to insert the selected measures.
  - On the TO side, specify the settings with the corresponding buttons.

### TRACK:

Specify the track number.

- Measures from the CHORD, RHYTHM or CONTROL track can only be inserted in the same track.

### START MEASURE:

Specify the start point to insert the selected measures.


### REPEAT:

Specify the number of times the selected measures are to be repeated.

- Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.
  - Note that if the END command is included in the source data, it is also inserted. Any data following the END command is not inserted.

## APC TO SMF CONVERT

This function converts data to Standard MIDI File (SMF) format, allowing you to play back song data created using this instrument's automatic accompaniment and/or PERFORMANCE PADS on an external sequencer or sound generator.

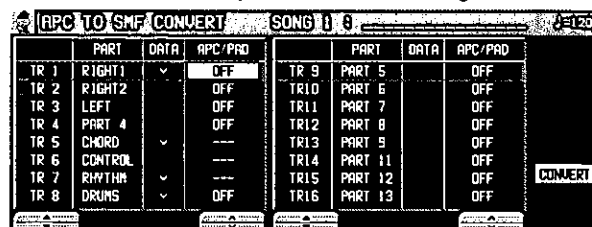

- Use the TR ▲ and ▼ buttons to select the track you wish to convert.
  - In the PART column, the part name currently assigned is shown.
  - In the DATA column, a check mark (✓) indicates a track in which data is stored.
  - Tracks in which RHYTHM, CONTROL, APC and CHORD parts are stored cannot be selected (— — is shown).

- Use the APC/PAD ^ and v buttons to select the parts you wish to convert.
  - Parts that are set to OFF will not be converted.

- Press the CONVERT button.
  - Note that after the conversion, the APC/CHORD part data is cleared; if necessary, save this data beforehand.
  - A confirmation display appears. Press EXECUTE to continue with the conversion, or press the CANCEL button if you wish to discontinue.
  - After the EXECUTE button is pressed, the conversion begins. Conversion takes the same length of time as playback.
  - If you wish to discontinue the conversion process midway, press the ABORT button.


- Because the DSP settings for the automatic accompaniment are not converted, the nuance of sounds in the automatic accompaniment following conversion may sound different.

# Changing the note position etc. of the recorded data

You can change the note pitch and position etc. of recorded data.

## Select the function


1. On the SEQ MENU display, use the SONG SELECT  $\wedge$  and  $\vee$  buttons to select the number of the song. Then select RANGE EDIT.
  - The display looks similar to the following.

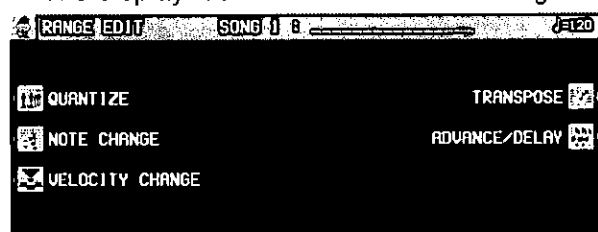

2. On the RANGE EDIT display, select a function.
3. Perform the editing procedures. (See below.)
  - During the editing procedure, if the indicator for the **TEMPO/PROGRAM** is lit, you can use the **TEMPO/PROGRAM** for the editing function.

## NOTE CHANGE


Change of pitch of specified notes.

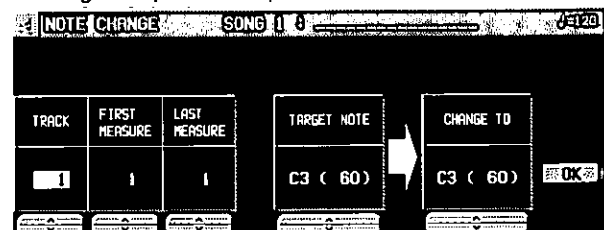

1. Use the TRACK  $\wedge$  and  $\vee$  buttons to select the track you wish to edit.
  - You cannot select the track for the CONTROL, RHYTHM or CHORD part.
  - If ALL is selected, all tracks will be edited.
2. Use the FIRST MEASURE  $\wedge$  and  $\vee$  buttons to specify the start point (measure number) of the note change.
3. Use the LAST MEASURE  $\wedge$  and  $\vee$  buttons to specify the end point (measure number) of the note change.
4. Use the TARGET NOTE  $\wedge$  and  $\vee$  buttons to specify the pitch of the note you wish to change.
  - The number next to the note name is its note number.
5. Use the CHANGE TO  $\wedge$  and  $\vee$  buttons to specify the pitch you wish to change to.
6. Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

## VELOCITY CHANGE


Modify the recorded velocity in specific measures of specific tracks.

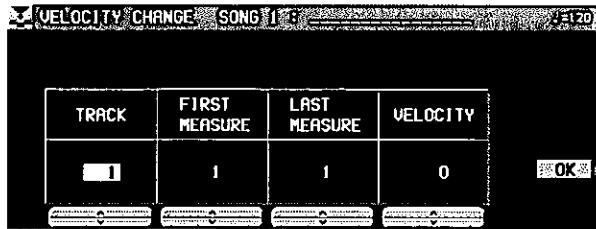

- Use the TRACK  $\wedge$  and  $\vee$  buttons to select the track you wish to edit.
  - You cannot select the track for the CONTROL, RHYTHM or CHORD part.
  - If ALL is selected, all tracks will be edited.
- Use the FIRST MEASURE  $\wedge$  and  $\vee$  buttons to specify the start point (measure number) of the velocity change.
- Use the LAST MEASURE  $\wedge$  and  $\vee$  buttons to specify the end point (measure number) of the velocity change.
- Use the VELOCITY  $\wedge$  and  $\vee$  buttons to specify the change in velocity.
  - The value you select will be added to or deleted from the current velocity.
- Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

## TRANSPOSE


Change of key of specific measures of specific tracks.

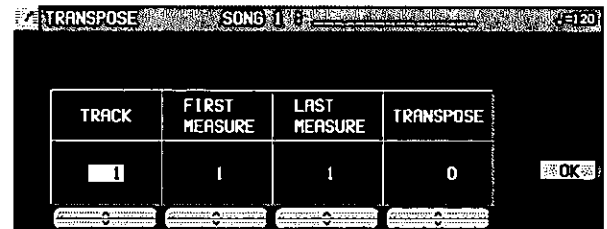

- Use the TRACK  $\wedge$  and  $\vee$  buttons to select the track you wish to edit.
  - You cannot select the track for the CONTROL, RHYTHM or CHORD part.
  - If ALL is selected, all tracks will be edited.
- Use the FIRST MEASURE  $\wedge$  and  $\vee$  buttons to specify the start point (measure number) of the transpose.
- Use the LAST MEASURE  $\wedge$  and  $\vee$  buttons to specify the end point (measure number) of the transpose.
- Use the TRANSPOSE  $\wedge$  and  $\vee$  buttons to specify the change in pitch.
  - Increments are in semitones. A value of 12 is one octave. A - value lowers the pitch, and a + value raises it.
- Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

## ADVANCE/DELAY


Speed up or delay the sound production of specified performance data.

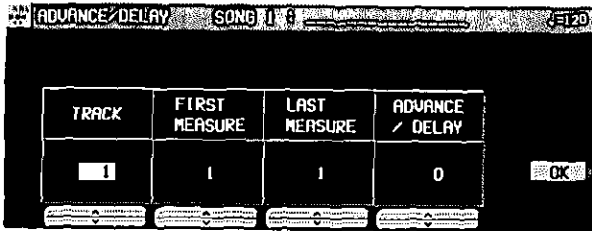

1. Use the TRACK  $\wedge$  and  $\vee$  buttons to select the track you wish to edit.
  - You cannot select the track for the CONTROL, RHYTHM or CHORD part.
  - If ALL is selected, all tracks will be edited.
2. Use the FIRST MEASURE  $\wedge$  and  $\vee$  buttons to specify the start point (measure number) of the change.
3. Use the LAST MEASURE  $\wedge$  and  $\vee$  buttons to specify the end point (measure number) of the change.
4. Use the ADVANCE/DELAY  $\wedge$  and  $\vee$  buttons to accelerate or delay the timing of the sound production (-96 to +96).
  - A + value causes the notes to sound later, and a - value causes the notes to sound earlier.
5. Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

# Part V Composer

## Outline of the Composer

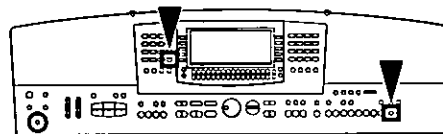


The **COMPOSER** enables you to create your own accompaniment patterns. A pattern is comprised of 8 parts: **DRUMS 1, 2, BASS** and **ACCOMP1-5** parts. These parts would form the backing of a song.

### Rhythm components which can be stored

Different **INTRO 1, 2, VARIATION 1 to 4, ENDING 1, 2** patterns can be created for each **MEMORY (A, B, C)**.

- Each **VARIATION** is made of a **PATTERN, FILL 1** and **FILL 2**.
- A **Maj** (major) and **Min** (minor) pattern is available for each of the **INTRO** and **ENDING 1** and **2**.

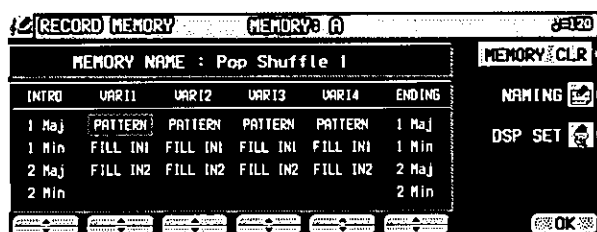

### ■ CUSTOM STYLE

In the **CUSTOM** button of the **RHYTHM GROUP** you can store 20 of your original rhythm settings, including the recorded contents of the **COMPOSER**. These can be accessed during your performance in the same way as the preset rhythms.

- Rhythms are copied to each bank (**A, B, C**) one **MEMORY** at a time. The same bank (**A, B, C**) of the **PANEL MEMORY (1 to 4)** and **PERFORMANCE PADS (USER)** is also copied at the same time, so it is possible to create the total rhythm as one style.
- **CUSTOM STYLE COPY** (page 117).

### Memory capacity

Expressed in terms of notes, the total number of notes which can be stored in all the **COMPOSER** memories is about 13,000. The remaining memory available for recording is shown on the recording display as a percentage (%).

- When "Memory full!" appears on the display no more data can be stored in the **COMPOSER**.


### ■ MEMORY

Because the contents of the **MEMORY** are erased after about 80 minutes after the power is turned off, you should save the data on floppy disks if you wish to keep it. (Refer to page 126.)




## COMPOSER menu

1. Press the **PROGRAM MENUS** button to turn it on.
  - The display looks similar to the following.

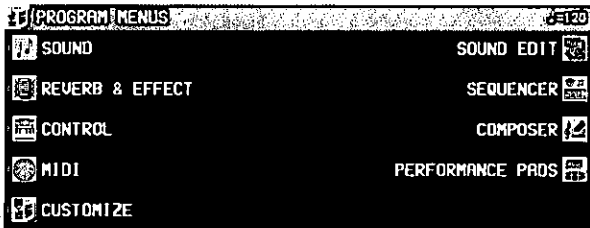

2. Select **COMPOSER**.

- The display looks similar to the following.

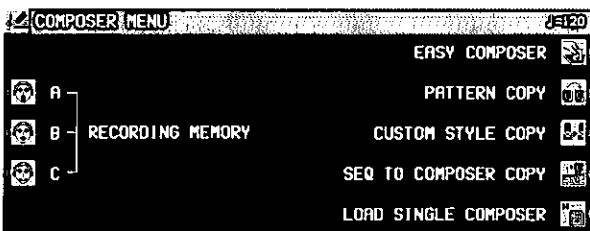

### Summary of the COMPOSER menu items

#### RECORDING MEMORY-A

Create a memory in the **MEMORY A** bank.

#### RECORDING MEMORY-B

Create a memory in the **MEMORY B** bank.

#### RECORDING MEMORY-C

Create a memory in the **MEMORY C** bank.

#### EASY COMPOSER (page 106)

Create a rhythm pattern with a simplified procedure.

#### PATTERN COPY (page 115)

Copy a rhythm pattern into a memory.

#### CUSTOM STYLE COPY (page 117)

Copy **MEMORY** data to the **CUSTOM** memory area.

#### SEQ TO COMPOSER COPY (page 116)

Copy recorded data in the **SEQUENCER** to the **COMPOSER**.

#### LOAD SINGLE COMPOSER

Recall the desired **COMPOSER** data from data saved on a disk. This procedure is the same as when **COMPOSER** is selected for **SINGLE LOAD**. (Refer to page 122.)

## Three ways to record in the COMPOSER

There are three ways to create and record a rhythm.

### ■ Simple recording method

Use **EASY COMPOSER** to quickly create a unique rhythm just by selecting a pattern for each part.

### ■ Create a completely new rhythm (page 106)

Compose all the parts of a completely new rhythm from scratch.

- You can use either realtime recording or step record for any part of the recording.

### ■ Pattern Copy (page 115)

Copy a preset rhythm or **SEQUENCER** data to a **COMPOSER** memory, edit it as you like, and then store it as a new rhythm.

## Simple recording method

With EASY COMPOSER you can easily create a unique rhythm pattern by selecting a different style for each part of the rhythm.

1. On the COMPOSER MENU display, select EASY COMPOSER.
  - The display looks similar to the following.



2. Use the MEM  $\wedge$  and  $\vee$  buttons to select the memory in which to record your rhythm.
  - Select from A-vari 1 to 4, B-vari 1 to 4 and C-vari 1 to 4.
3. Use the PART  $\blacktriangle$  and  $\blacktriangledown$  buttons to select the part.
  - In the EASY COMPOSER, the new rhythm pattern is divided into 9 parts, to each of which a style and variation is assigned.
4. Use the STYLE  $\wedge$  and  $\vee$  buttons to select a style.

5. Use the VARI  $\wedge$  and  $\vee$  buttons to select the variation number.
  - The number of variations differs depending on the selected style.
  - A part which is set to OFF does not sound. Note that the "BsDrum&Snare" part cannot be set to OFF.

6. Repeat steps 3 to 5 to select styles for the other parts.

7. Press the SET button.
  - The rhythm pattern is played back.
  - If you are not satisfied with the rhythm pattern, repeat steps 3 to 7.
  - If you wish to correct the sounds or phrases in your rhythm pattern, press the EDIT button. The display changes to the recording display. (Refer to page 108.)
  - For playback, refer to page 111.


## Create a completely new rhythm

Clear the memories and compose a completely new rhythm from scratch.


- You can also use this method when copying a pattern from a preset rhythm or the **SEQUENCER**. (Refer to page 115.)

### Prepare to record

1. On the COMPOSER MENU display, select a memory in which to record (RECORDING MEMORY A, B, or C).
  - The display looks similar to the following.

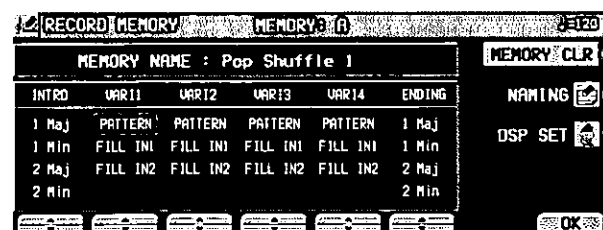


2. Use the buttons below the display to select the pattern you want to create.
  - If the MEMORY CLR button is pressed, all the current contents of the MEMORY are erased (a confirmation display appears).
  - If the DSP SET button is pressed, the display changes to the ACCOMP DSP setting display. (Refer to page 111.)
  - You can press the NAMING button and assign a name to the MEMORY.

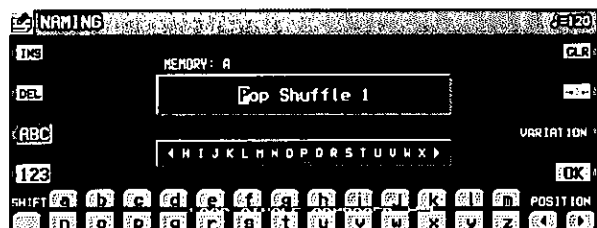

- To assign a name to each VARIATION, press the VARIATION button and select a number.


3. On the RECORD MEMORY display, press the OK button.

- The display looks similar to the following.

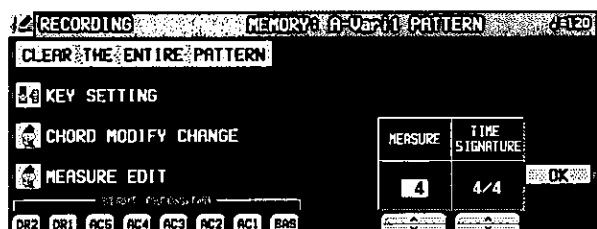

4. Press the CLEAR THE ENTIRE PATTERN button.

- The display looks similar to the following.

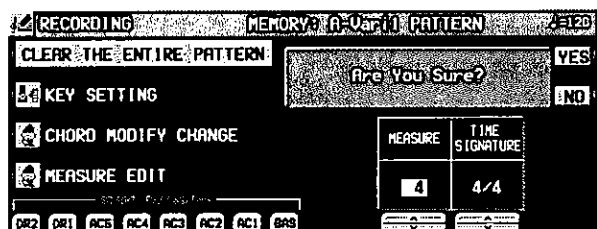

5. Press the YES button.

- All the data for the selected pattern is erased.

6. Use the MEASURE  $\wedge$  and  $\vee$  buttons to specify the number of measures in your new rhythm pattern (1 to 16).

7 Use the TIME SIGNATURE  $\wedge$  and  $\vee$  buttons to specify the meter of the pattern (1/4 to 8/4).

- When the settings for the MEASURE and TIME SIGNATURE of the INTRO or ENDING patterns are changed, the Maj and Min settings change at the same time.

8. Press the OK button.

## KEY SETTING

Set the key and chord in which you wish the recorded pattern to be played. If the recorded performance is played in a key or chord different from this setting, the automatic accompaniment will not be able to distinguish the correct chord.

1. On the RECORDING display press the KEY SETTING button.


- The display looks similar to the following.



2. Use the KEY  $\wedge$  and  $\vee$  buttons to set the key. Use the CHORD  $\wedge$  and  $\vee$  buttons to set the chord type (Maj/Min).

3. When you have finished making the settings, press the EXIT button.


## Recording procedure

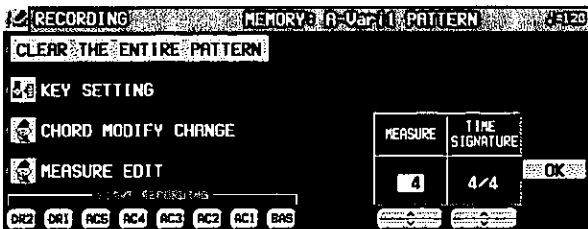

1. In the START RECORDING area on the display, select the rhythm part you want to record first.

BAS: **BASS**  
 AC1-5: **ACCOMP 1-5**  
 DR1, 2: **DRUMS 1, 2**

- The metronome sound starts and the display looks similar to the following.

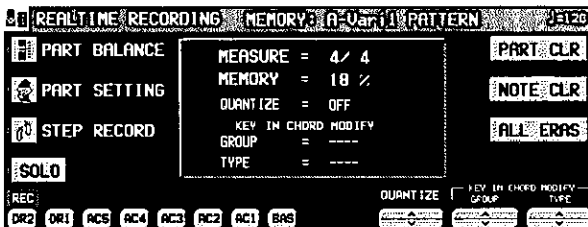

2. Adjust the tempo.

- The tempo is shown on the display as TEMPO=.
- The tempo can be freely adjusted when you play back the rhythm pattern, so record at the tempo which is easiest for you to play.

3. Select the sound.

- For the **DRUMS** part, only sounds from the **DRUM KITS** sound group can be selected.
- For the **ACCOMP** and **BASS** parts, select sounds from groups other than the **DIGITAL DRAWBAR** sound groups.

4. Record the part.



- The specified number of measures are repeatedly played back, during which time any newly played notes are added to those already recorded. The current measure number is shown on the display as "MEASURE=".
- Record the performance in C major for correct chord progressions during playback. Follow the KEY SETTING procedure if you wish to record the performance in a different scale.

- **PITCH BEND, MODULATION** (except for the **DRUMS** part) effects are also recorded.
- The **SUSTAIN ON/OFF** is also stored (except for the **DRUMS** part).

### ■ Button functions

#### PART BALANCE:

Adjust the volume of each part on the PART BALANCE display. (These settings are not recorded.)

#### PART SETTING:

You can make detailed settings for each part. (Refer to page 110.)

#### STEP RECORD:

Change to the STEP RECORD mode. (Refer to page 112.)

#### SOLO:

Mute all parts except the part which is currently being recorded.

- A MUTE mark is shown for the other parts on the display.
- To turn off the SOLO function, press this button again.

#### PART CLR:

Erase all recorded contents of the currently selected part.

#### NOTE CLR:

Data is erased one note or one percussion instrument (DRUMS part) sound at a time.

- Hold and press this button, and press the keyboard key that corresponds to the note or percussion instrument (DRUMS part) sound you wish to erase.

#### ALL ERAS:

The performance recorded in the selected part is erased for as long as this button is pressed.

#### QUANTIZE:

Smooth out any unevenness in the timing of your performance.

- Before recording, use the QUANTIZE ^ and v buttons to select the note value for the desired quantize level. (The quantize level is shown on the display as QUANTIZE=.)

#### KEY IN CHORD MODIFY (except for INTRO, ENDING, DRUMS):

Use the GROUP and TYPE ^ and v buttons to select the type of pattern progression. (Refer to page 109.)

- This setting is for the sound that is going to be recorded from this time.

5. Use the buttons below the display to switch to a different recording part, and proceed to record each part in turn.
6. When you have finished recording the rhythm, turn off the **PROGRAM MENUS** button.

## Chord Modify Change

For data that has already been recorded, you can select the type of pattern progression for the bass and accomp parts.

- This function cannot be used for the INTRO and ENDING patterns.

1. On the RECORDING display, press the CHORD MODIFY CHANGE button.
- The display looks similar to the following.

PART	GROUP	CHORD MODIFY TYPE	FUNCTION
BASS	Basic	Basic	KEEP
ACCOMP1	Melody	In 7th G+B♭	KEEP
ACCOMP2	Melody	In 7th G+B♭	KEEP
ACCOMP3	Melody	In 7th G+B♭	KEEP
ACCOMP4	Melody	In 7th G+B♭	KEEP
ACCOMP5	Melody	In 7th G+B♭	KEEP

2. Use the PART ▲ and ▼ buttons to select the part you wish to set.
3. Use the GROUP and CHORD MODIFY TYPE ^ and v buttons to select the corresponding progression type.
  - If a progression type for which the note name is displayed (in C key) was selected for the chord group, played notes which are not displayed are changed to notes which are displayed.
4. Use the FUNCTION ^ and v buttons to enable or disable the function.
  - KEEP: No change.
  - CHANGE: The change is enabled.
5. When you have finished making the settings for each part, press the OK button.
6. Press the EXIT button.

# Part Setting

You can make detailed settings for each part.

1. On the REALTIME RECORDING display, press the PART SETTING button.
  - The settings comprise two pages of the display. Use the PAGE buttons to switch pages.
2. Use the PART ^ and v buttons to select a part.
3. Use the ^ and v buttons to set the corresponding item.

<PAGE 1>

PART	PITCH POINT	SOUND	DIGI EFF	BALANCE	PAN	BEND RANGE
DRUM1	--	Standard Kit1	--	-15	--	12
DRUM2	--	Standard Kit1	--	-15	--	12
BASS	Eb	Jazz E. Bass	(SOUND)	-18	CENTER	12
ACCOMP1	Ab	Folk Guitar	(SOUND)	-61	LEFT 25	12
ACCOMP2	Ab	Folk Guitar	(SOUND)	-39	RIGHT 25	12
ACCOMP3	Ab	Ac. Gtr. Harmonics	(SOUND)	-35	CENTER	12
ACCOMP4	Ab	Bossa Guitar	(SOUND)	-27	CENTER	12
ACCOMP5	Ab	Piano	(SOUND)	0	CENTER	12

### PITCH POINT:

The pitch at which the pattern progression sound is lowered by one octave.

- When the root note of the specified chord is lower than the set pitch point, the pitch of that part is automatically raised by one octave, thus avoiding an unnaturally low accompaniment pitch.
- This is effective only for the part for which the Melody group was selected in CHORD MODIFY CHANGE.

### SOUND:

Use the panel buttons to select the sound.

### DIGI EFF:

Set the **DIGITAL EFFECT** to on or off.

- (SOUND) is the initialized setting of the sound.

### BALANCE:

Adjust the volume balance.

### PAN:

Adjust the stereo balance of each part (LEFT 64 – CENTER – RIGHT 63).

- At "LEFT 64", the sound is all the way to the left, at "RIGHT 63" all the way to the right. The center point is CENTER.

### BEND RANGE:

Adjust the range of pitch change when the **PITCH BEND** wheel is operated (0 to 12).

<PAGE 2>

PART	EQ-HI	EQ-HI	EQ-LOW	EQ-LOW	DSP1	DSP2	REV	CHO	DSP SET
DRUM1	10kHz	+0.0	100Hz	+0.0	--	--	40	0	0
DRUM2	10kHz	+0.0	100Hz	+0.0	--	--	40	0	0
BASS	10kHz	+0.0	100Hz	+0.0	--	--	0	0	0
ACCOMP1	10kHz	+0.0	100Hz	+0.0	--	--	40	0	0
ACCOMP2	10kHz	+0.0	100Hz	+0.0	--	--	40	0	0
ACCOMP3	10kHz	+0.0	100Hz	+0.0	--	--	40	0	0
ACCOMP4	10kHz	+0.0	100Hz	+0.0	--	--	40	0	0
ACCOMP5	10kHz	+0.0	100Hz	+0.0	--	--	40	0	0

### EQ-HI:

Sound correction in the high range.

- Use the FC ^ and v buttons to adjust the standard frequency. Use the GAIN ^ and v buttons to set the ratio of change.

### EQ-Low:

Sound correction in the low range.

- Use the FC ^ and v buttons to adjust the standard frequency. Use the GAIN ^ and v buttons to set the ratio of change.

### DSP1:

TOTAL MODE: Depth of DSP1 (0 to 127).  
SOUND MODE: DPS 1 on/off (– –) setting

### DSP2:

DSP2 on/off (– –) setting.

### REV:

Depth of the **REVERB** (0 to 127).


### CHO:

Depth of the **CHORUS** (0 to 127).

■ DSP SET

Press the DSP SET button if you wish to make detailed settings for the ACCOMP DSP effect.

- Two types of DSP can be used for the automatic accompaniment.
- You can specify whether or not to apply DSP1 to each part or to apply it to all the automatic accompaniment parts.

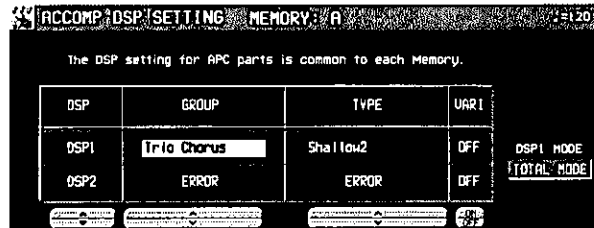

1. Use the DSP ▲ and ▼ buttons to select the DSP type.
2. Use the GROUP and TYPE ^ and v buttons to select a group and type.
3. Use the VARI ^ and v buttons to select VARIATION ON or OFF.

- Use the DSP1 MODE button to select the DSP1 mode.

SOUND MODE:

DSP1 can be applied to each part.


TOTAL MODE:

DSP1 is applied to all the parts.

- If the ALLOCATION MODE of EFFECT is set to SEQ, these DSP effects cannot be used for the automatic accompaniment. (Refer to page 143.)


# Playback

1. In the RHYTHM GROUP section, press the MEMORY button.

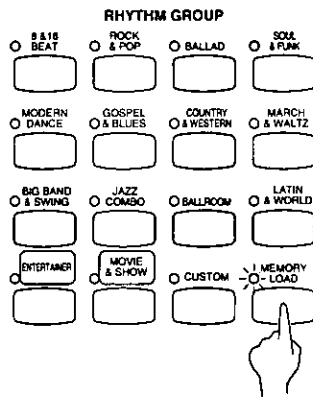

4. Press the START/STOP button.
  - The DRUMS part begins to play back.
  - The BASS and ACCOMP parts are played back when you use the AUTO PLAY CHORD.

- The display looks similar to the following.

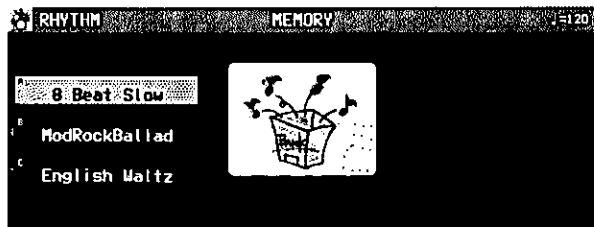


2. Select the desired memory (A/B/C).
3. Use the VARIATION & MSA buttons to select a variation.

# Step Record

Use STEP RECORD to store the notes one-by-one on the display. This is a convenient way to store complicated patterns that are difficult to play.

## Recording procedure

1. While you are recording, press the STEP RECORD button.
  - The display changes to the STEP RECORD display similar to the following.

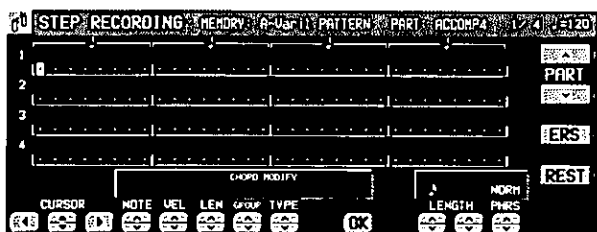

2. Use the CURSOR buttons to move the cursor to the note position you are going to store.
  - Each dot represents one-eighth of a quarter-note (a thirty-second note).
  - When storing triplets, it may not be possible to match the timing exactly with the 1/32-note steps. However, if you select triplet-type notes for the note length (LENGTH) in step 4 below, the timing is automatically corrected.
3. Use the left LENGTH buttons to specify the note value. Select from ♩<sub>3</sub>, ♩, ♩<sub>3</sub>, ♩, ♩<sub>3</sub>, ♩, ♩<sub>3</sub>, ♩, ♩, .., .. × 2 to 4. (A 3 denotes a triplet-type note.)
  - For note values other than these, use the right LENGTH buttons to specify the note value to be added to that which you specified with the left buttons.

Example: To record a dotted quarter-note (♩.)

♩ + ♩

4. Use the PHRS ^ and v buttons to specify the actual length of the produced sound for the desired legato or staccato effect.

TENU (tenuto):	Sound is produced for 95% of the note length.
NORM (normal):	80%
STAC (staccato):	50%
CUTT (cutting):	25%

5. Specify the pitch and velocity of the note by playing the keyboard.
  - The dot on the display where the note is stored changes to a \* mark.
  - When recording chords, you can store multiple notes at one position.

REST: To store a rest, after specifying the note LENGTH, press the REST button.

- Positions at which nothing is stored are read as rests.

ERS: If you make a mistake, move the cursor to the error, and after displaying the data you wish to erase, press the ERS button.

6. Repeat steps 2 through 5 to continue storing notes.
  - To record a different part, use the PART ^ and v buttons to select another part.
  - The NOTE, VELOCITY, LENGTH, CHORD MODIFY and CONTROL can be revised later. Press the OK button after the revision.
  - You can easily switch between the REALTIME mode and the STEP mode any time during recording. To return to the realtime recording display during the STEP RECORD mode, press the EXIT button.




# Measure Edit

You can edit the recorded data one measure at a time.

## Select the function you wish to edit.

1. During recording, press the MEASURE EDIT button.
- The display looks similar to the following.

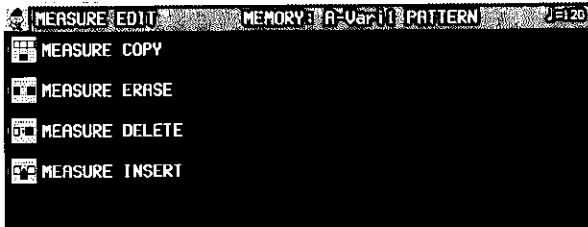


2. Select the function.
3. Follow the procedure to edit the function (see below).
- Only the contents of the same pattern can be edited.

## MEASURE COPY

Copy recorded data of specified measures to a specified point.

- On the destination track, the new data replaces the current measure contents.

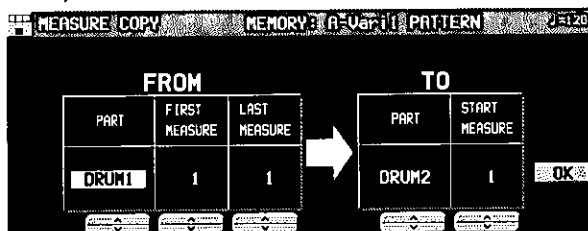

1. Specify the measures you wish to copy from the source track (FROM).
- On the FROM side, specify the settings with the corresponding buttons.

### PART:

Select the part to copy from. (If ALL is selected, all parts are copied.)

### FIRST MEASURE:

Specify the first measure to copy.

### LAST MEASURE:

Specify the last measure to copy.

2. Specify where you wish to copy the selected measures to.
- On the TO side, specify the settings with the corresponding buttons.

### PART:

Select the part to copy to.

### START MEASURE:


Specify the start point to copy the selected measures to.

3. Press the OK button.
- The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.
- If the FROM and TO parts are the same and the FROM and TO measures overlap, copy is not possible.

## MEASURE ERASE

Erase the recorded contents of specific measures.

- Note that only the contents of the measures are erased, not the measures themselves; the length of the performance remains the same.

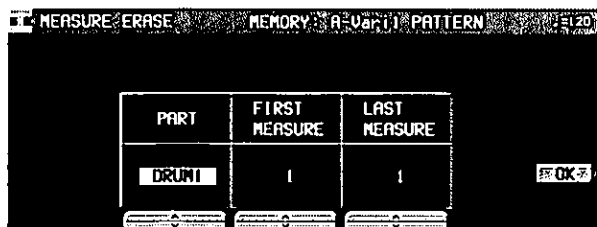


- Use the PART  $\wedge$  and  $\vee$  buttons to specify the part.
  - If ALL is selected, data is erased from the specified measures of all the parts at one time.
- Use the FIRST MEASURE  $\wedge$  and  $\vee$  buttons to specify the start point (measure number).
- Use the LAST MEASURE  $\wedge$  and  $\vee$  buttons to specify the end point (measure number).
- Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

## MEASURE DELETE

Delete specified measures from all parts at once.

- The length of the performance accordingly decreases by the number of deleted measures.

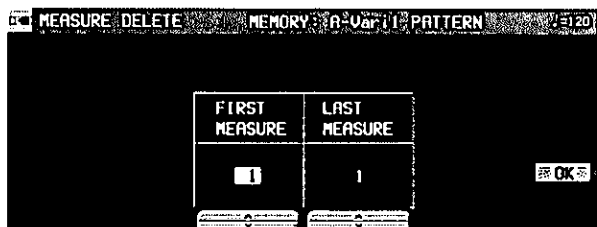


- Use the FIRST MEASURE  $\wedge$  and  $\vee$  buttons, to specify the first measure to delete.
- Use the LAST MEASURE  $\wedge$  and  $\vee$  buttons to specify the last measure to delete.
  - One measure is the smallest unit that can be deleted.
- Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.
  - When the INTRO or ENDING measures are deleted, the Maj and Min data are erased at the same time.

## MEASURE INSERT

Insert blank measures at a specified point.

- The length of the performance accordingly increases by the number of inserted measures.

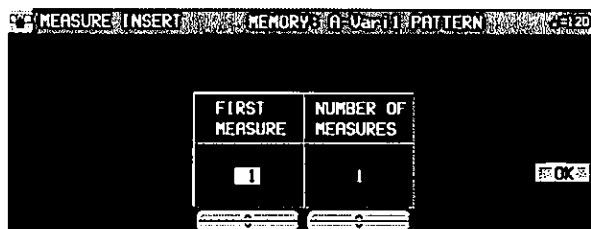

- Use the FIRST MEASURE button to select the point (measure) where the measures are to be inserted.
- Use the NUMBER OF MEASURE button to select the number of blank measures to insert.
  - No more than 16 measures total can be inserted.
- Press the OK button.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.
  - The Maj or Min data is inserted in the INTRO and ENDING at the same time.

# Pattern Copy


Use this function to copy a pattern from a rhythm or from **SEQUENCER** data.

## PATTERN COPY

Copy a rhythm to the **COMPOSER**.

- You can also copy a pattern from the **MEMORY**.

- On the **COMPOSER MENU** display, select **PATTERN COPY**.
  - The display looks similar to the following.

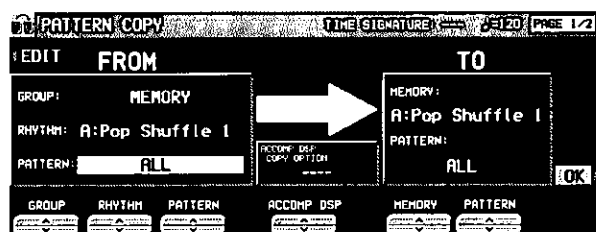

- Select the pattern you wish to copy.
  - In the **FROM** box, specify the settings with the corresponding buttons.

**GROUP:** Group name  
**RHYTHM:** Rhythm name  
**PATTERN:** Pattern name

- If **ALL** is selected, all the patterns are copied.

- Select the memory you wish to copy to.
  - In the **TO** box, specify the settings with the corresponding buttons.

**MEMORY:** Memory name (A, B or C)  
**PATTERN:** Pattern name

- If **ALL** is selected, all the patterns are copied.

- Use the **ACCOMP DSP**  $\wedge$  and  $\vee$  buttons to specify whether or not the DSP effect settings at the source are also copied. (when the **PATTERN** was not set to **ALL**)

**OFF:**

The settings are not copied.

**PART SETTING:**

Only the part settings are copied.

**TYPE & PART SETTING:**

The DSP settings and part settings are copied.


- Press the **OK** button.

- When copying has been successfully completed, "COMPLETED!" appears on the display.
- The DSP settings are the same as those in the **MEMORY**. For this reason, except for **ALL** copy, the settings may change and cause the sound nuance to change as well.

- If you wish to use the **COMPOSER** functions to edit the copied data, press the **EDIT** button, and follow the procedure to record a pattern.

### ■ Copying one part at a time.

- Use the **PAGE**  $\wedge$  and  $\vee$  buttons to select **PAGE 2/2**.
  - The display looks similar to the following.

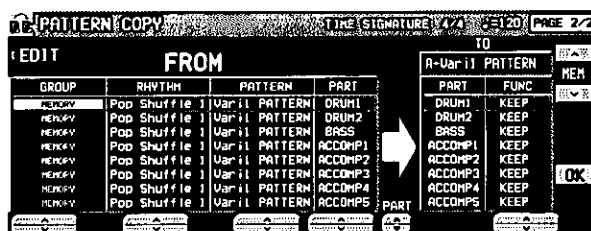

- Use the **MEM**  $\wedge$  and  $\vee$  buttons to specify the pattern to copy to.

- Use the **PART**  $\blacktriangle$  and  $\blacktriangledown$  buttons to specify the part you wish to copy to.

- On the **FROM** side, use the buttons to specify the part to copy from.

- For the **DRUM** part you can specify the **DRUMS 1** or **2** part; for other parts you can specify a part other than a **DRUMS** part.

- On the **TO** side, use the **FUNC**  $\wedge$  and  $\vee$  buttons to specify for each part whether or not to copy the data.

**KEEP:**

Part data is not copied.

**CLEAR:**

Part data is erased.

**COPY:**

Part data is copied.


- Press the **OK** button.

## SEQ TO COMPOSER COPY

Data from the **SEQUENCER** can be copied to a **COMPOSER** memory. For example, you can use a rhythm pattern on a song disk as the automatic accompaniment for your own performance.

1. Play back the song you wish to copy from **SEQUENCER** to confirm the tracks, the measures and the time signature you wish to copy.
2. Follow the procedure in "Prepare to record" to prepare the **COMPOSER** memory you will be copying to. (Refer to page 106.)
  - Be sure that time signature setting in the **SEQUENCER** data you are copying from and the time signature in the **COMPOSER** memory you are copying to are the same, or the data will not be copied successfully.

3. On the **COMPOSER MENU** display, select **SEQ TO COMPOSER COPY**.
  - The display looks similar to the following.

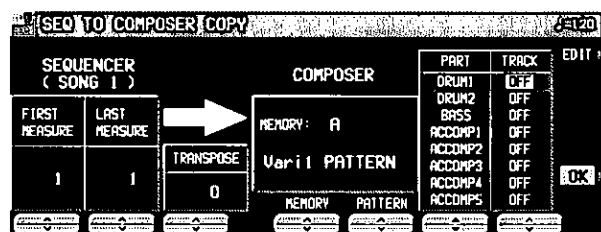

4. Use the **FIRST MEASURE**  $\wedge$  and  $\vee$  buttons to specify the number of the first measure to copy.
5. Use the **LAST MEASURE**  $\wedge$  and  $\vee$  buttons to specify the number of the last measure to copy.
6. Use the **TRANSPOSE**  $\wedge$  and  $\vee$  buttons to change the key of the copied measures (-24 to +24).
  - Units are in semitones.
7. Use the **MEMORY**  $\wedge$  and  $\vee$  buttons to specify the **COMPOSER** memory to copy to.
8. Use the **PATTERN**  $\wedge$  and  $\vee$  buttons to specify the pattern to copy to.

9. For each **COMPOSER** part, specify the **SEQUENCER** track from which to copy data.

- Use the **PART**  $\blacktriangle$  and  $\blacktriangledown$  buttons to specify the part name, and the **TRACK**  $\wedge$  and  $\vee$  buttons to specify the track number.
- Parts which are set to **OFF** are blank.

10. Press the **OK** button.


- "COMPLETED!" is shown on the display.
- If you wish to use the **COMPOSER** function to edit the copied data, press the **EDIT** button, and follow the procedure to record a pattern.
- In the case of **INTRO** or **ENDING**, if a measure contains a **Maj** or **Min** command, it is reproduced in the other pattern as well.
- If a sound using the **ACCOMP DSP** was copied, the nuance of the sound may be changed.

## Custom Style Copy

20 settings (STYLE) including **COMPOSER** patterns can be stored in the **CUSTOM** memory area of the **RHYTHM GROUP**, one **MEMORY (BANK)** at a time. The patterns stored in **CUSTOM** are retained even when the power to this instrument is turned off. You can use them during your performance, just like the preset rhythms.

- The **PANEL MEMORY** of the same bank (A/B/C), etc. is also copied at the same time as the **COMPOSER MEMORY**.

1. On the **COMPOSER MENU** display, select **CUSTOM STYLE COPY**.
- The display looks similar to the following.

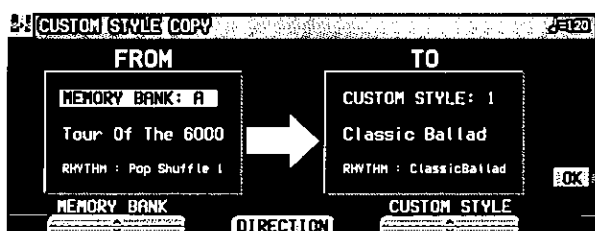

2. Use the **CUSTOM STYLE**  $\wedge$  and  $\vee$  buttons to select the **CUSTOM** number, and the **MEMORY BANK**  $\wedge$  and  $\vee$  buttons to select the **MEMORY** name.
- The **DIRECTION** button can be used to change the source and destination of the copied pattern (**MEMORY**  $\rightarrow$  **CUSTOM**, **CUSTOM**  $\rightarrow$  **MEMORY**).

3. Press the **OK** button.
- When copying has been successfully completed, "COMPLETED!" appears on the display.


### Note

- When the **COMPOSER MEMORY (A/B/C)** is copied, the **PANEL MEMORY (1 to 4)** and the **PERFORMANCE PADS (USER)** of the same bank are also copied at the same time. In addition, the **SOUND MEMORY**, **USER DRUM KIT**, **EFFECT** memory etc. settings in those memories are also copied.
- When creating a style, store the panel settings in the same bank (A, B, C) of the **PANEL MEMORY (1 to 4)** as the **MEMORY** bank of the **COMPOSER**. The numbers 1 to 4 correspond to the **VARIATION** numbers.
  - At this time, the active rhythm is that of the **MEMORY** of the same bank, even if you try to select preset or **CUSTOM** rhythm.
  - You can select a preset bank for the **PERFORMANCE PADS**, but if you select a **COMPILE** bank or if you select a different **USER** bank for each number, the bank of the **PERFORMANCE PADS** supersedes the **USER** of the same bank.

- If you select **CUSTOM**  $\rightarrow$  **MEMORY** copy, the contents of the **SOUND MEMORY** and **EFFECT MEMORY** may be replaced. In this case an **ATTENTION** display appears requiring you to specify how you wish to proceed.
- To reset the **CUSTOM** contents to the factory-preset settings, load the included "INITIAL DATA DISK" floppy disk.

## Selecting a CUSTOM memory

1. In the **RHYTHM GROUP** section, turn on the **CUSTOM** button.

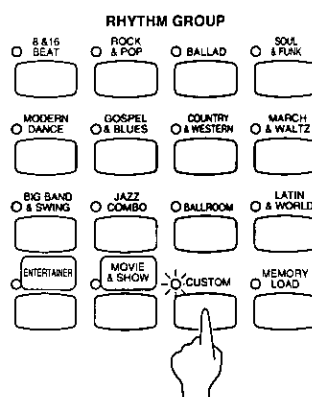

- The display changes to the **CUSTOM** select display.
  - There are two screen pages of the list. Use the **PAGE**  $\wedge$  and  $\vee$  buttons to switch between pages.
2. Select the desired custom number (1–20).
  - This rhythm can be used just like the preset rhythms.

# Part VI Disk Drive

## Outline of the Disk Drive function

The Disk Drive enables you to store recorded and stored data from this instrument's memories on floppy disks, as well as play commercial recorded disks on this instrument.

### Internal memory and Floppy Disk Drive

The storable internal memory of this instrument as well as the backup time are limited. However, the Disk Drive maximizes your control of data management by allowing you to store (SAVE) this instrument's data on floppy disks, and then to recall (LOAD) it at any time.

- For more information about the backup time and performance data, please see page 177.

#### ■ The following data can be saved/loaded:


#### PERFORMANCE

CURRENT PANEL (The current panel settings)
PANEL MEMORY*
SEQUENCER
COMPOSER* (MEMORY contents)
SOUND MEMORY*
PERFORMANCE PADS (USER memories)
EFFECT MEMORY*

#### BACKUP


USER MIDI (USER memories of the MIDI PRESETS)
FAVORITES
HOME PAGE
ALL CUSTOM STYLE

- When creating or saving song data, it is recommended that you use the performance data in the PERFORMANCE group.

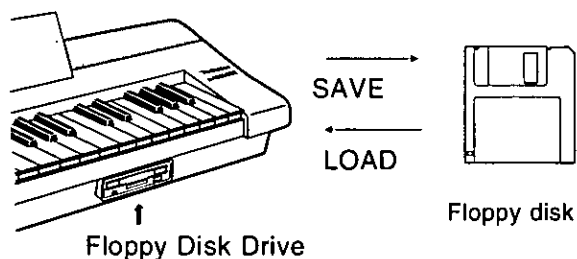

- Instead of using USER MIDI, FAVORITES, HOME PAGE and ALL CUSTOM STYLE as frequently loaded and saved data, it is recommended that you save it with other data as Keyboard backup data.
- A \* mark indicates that data can be loaded to and from a specific memory (SINGLE LOAD).
- The **SEQUENCER** contents can be saved in one-song increments (SEQUENCER SONG SAVE).
- Because ALL CUSTOM STYLE uses a lot of memory, the save or load time may be long. In particular, the load procedure takes some time. For separate saving and loading of individual **CUSTOM** memories, use the **CUSTOM STYLE SAVE** or **LOAD** function. (Refer to page 130.)
- Please use 2HD disks to load/save BACKUP data.

### Main parts of the Floppy Disk Drive

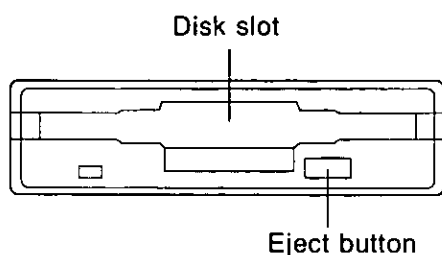

#### Eject button

Press to remove the disk from the Disk Drive.

- You can use 3.5 inch 2DD (720 KB) or 2HD (1.44 MB) floppy disks; however, 2HD disks formatted as 2DD cannot be used.

## Using commercial song disks

Not only disks recorded on this instrument, but also data from commercial song disks can be read on this instrument.

- This instrument accepts the following file formats:

TECHNICS File format
Standard MIDI File format

### ■ Loading Technics File format disks

Using Technics file format disks allows you load new SOUND EDIT, rhythm & accompaniments, **PANEL MEMORY**, **PERFORMANCE PADS** and Song data into your instrument to expand its potential even further.

### ■ About Standard MIDI Files

"Standard MIDI File" (SMF) is a standardized data format which makes it possible for music data to be exchanged among different sequencers. Data stored in this format on sequencers of different models can be played back on this instrument, and vice versa. Note, however, that Standard MIDI Files ensure the compatibility of data such as NOTE data (keyboard performance data), VELOCITY (how hard the keyboard is played), PROGRAM NUMBER data (voice number data), etc. Because it does not guarantee 100% faithful reproduction of recorded music which is replete with such data, it may be necessary for you to adjust the settings to your satisfaction.

- Only files with the ".MID" extension can be loaded.
- Standard MIDI File FORMAT 1 can be loaded, but not saved.
- This instrument's **SEQUENCER** data can be saved to a disk in Standard MIDI File (FORMAT 0) and can be used by other equipment.

## Playback of commercial song disks

DIRECT PLAY lets you enjoy playing commercially sold song disks directly from a disk. It's fast because you don't have to load the disk data into your instrument's memory.

- DIRECT PLAY is possible from the following disks:

Standard MIDI File
Standard MIDI File with Lyrics
DISK ORCHESTRA COLLECTION™ (DOC)
PianoDisc™

\* All product and company names are trademarks or registered trademarks of their respective owners.

\* DISK ORCHESTRA COLLECTION is a trademark of the YAMAHA Corporation.

### ■ SMF with LYRICS

SMF with LYRICS is a format in which character information that is included with the MIDI data, such as karaoke lyrics, can be displayed. This instrument supports this format, making it possible to view the lyrics on the display while a performance is played back.

**SMF  
LYRICS**

### ■ GENERAL MIDI LEVEL 2 (GM2)


This instrument complies with GENERAL MIDI (GM) LEVEL 2 standards. GM LEVEL 2 is a uniform world standard for MIDI sound generators that improves on existing GM standards, in order to realize an enhanced performance expression. Sound generators of this class can reproduce virtually the identical conditions that were in effect at the time of recording. Equipment which conforms to GENERAL MIDI LEVEL 2 standards is indicated by the following logo.

**GENERAL  
MIDI 2**


- This instrument also conforms to GENERAL MIDI playback.

**GENERAL  
MIDI**


# Outline of the procedure

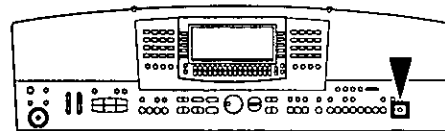

1. Insert the floppy disk into the Disk Drive slot.  
Push it all the way in until you hear a click.
  - On this instrument, if the normal display is active, it automatically changes to the DISK MENU display when a floppy disk is inserted into the Disk Drive (initialized settings). The PREFERENCES menu is used to specify which display is shown when a disk is inserted.
2. Select a menu on the DISK MENU display.
  - If the DISK MENU display does not appear, turn on the **DISK** button.
3. Follow the procedure for the function (see below).
  - When function is being set, if the **TEMPO/PROGRAM** indicator is lit, the **TEMPO/PROGRAM** is available for setting the current function.
4. When you have finished setting the functions, turn off the **DISK** button.




## ■ DISK IN USE



This indicator lights when data is being loaded or saved.

- To prevent data loss, do not eject the disk or turn off the power while this indicator is lit.

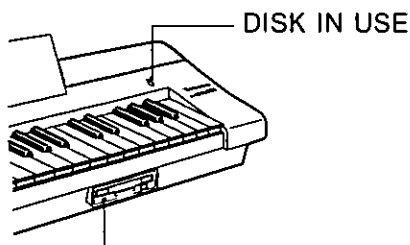

This indicator is lit continuously as long as the power is on.

## ■ About the menu



### LOAD (page 121)

Load data from a disk into this instrument's memory.

### SAVE (page 126)

Save data from this instrument's memory to a disk.

### DIRECT PLAY (page 123)

Direct playback of SMF etc. commercial song disks and medley playback.

### SONG MEDLEY (page 125)

Medley playback of songs in the floppy disk (Technics format).

### DISK TOOLS (page 131)

Disk management procedures, such as disk format.

### PREFERENCES (page 132)

The display screen settings during disk save.

### CUSTOM STYLE LOAD/SAVE (page 130)

Load or save individual **CUSTOM** data.

### STYLE CONVERT (page 133)

Load commercially sold style data to the **COMPOSER**.



# Loading data


Recall (load) the data from the disk to this instrument's memories.

- Note that the load procedure causes any data which is currently stored in the relevant memories to be erased.

## LOAD


Load data that saved to a disk into this instrument's memory.

1. Insert the disk with the stored data into the Disk Drive. Push it all the way in until you hear a click.

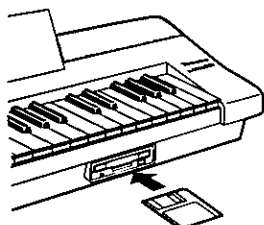

2. On the DISK MENU display, select LOAD.

- The display looks similar to the following.

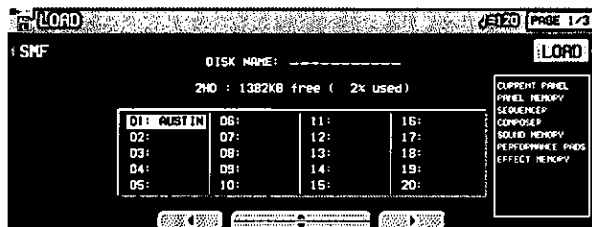

- If there are only SMF files on the disk, the display automatically changes to the SMF LOAD display.

3. Use the buttons below the display to select the file (Technics file) you wish to load.

- If there are SMF files on the disk and you wish to load an SMF file, press the SMF button. (Refer to next page.)

4. Press the LOAD button.

- The LOAD operation begins.
- When the operation has been successfully completed, "COMPLETED!" is shown on the display.
- If song data was loaded, you can press the **START/STOP** button to begin playback when the SEQUENCER PLAY display is active.


- You can load the type of data for which only one song can be recorded in the **SEQUENCER**. (This type is available for disks used with older Technics models.) Note, however, that in this case, the song is loaded into SONG 1, but the data in SONG memories 2 to 10 are erased.
- It is not possible to load RHYTHM CUSTOM data that was created on older models.
- You can also access the LOAD display by pressing the **DISK** button for a few seconds.

## LOAD OPTION

Specify the kind of data you wish to load from the disk to your instrument.

1. Use the **PAGE** buttons to access the PAGE 2/3 LOAD OPTION display.

- The display looks similar to the following.

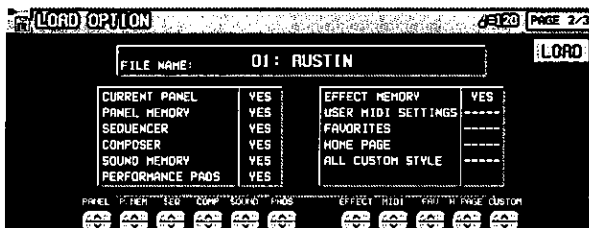

2. Use the buttons below the display to specify the types of data you wish to load (YES/NO).

- ----- indicates that this type of data has not been saved.
- This setting is canceled when you quit the LOAD display or when another file is selected.


3. Press the LOAD button.

- The LOAD operation begins.

### ■ SINGLE LOAD

You can specify which data to load from a disk into a specific **PANEL MEMORY**, **COMPOSER (MEMORY)**, **SOUND MEMORY**, **EFFECT MEMORY** or **SEQUENCER** (when SONG SAVE was executed) memory.

1. Use the **PAGE** buttons to access the PAGE 3/3 SINGLE LOAD display.
- The display looks similar to the following.

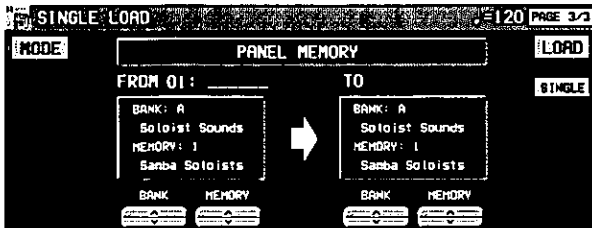

2. Use the **MODE** button to select the data you wish to load.

3. Use the **BANK/SINGLE** button to select the load increment. (except for **SEQUENCER**)

**BANK:**

Load one bank at a time.

**SINGLE:**

Load the smallest data increment.

4. Follow the appropriate procedure to load the specified data.
  - Specify the data source for **FROM** (left side), and the data destination (this instrument's memory location) for **TO**.
  - In the case of the **COMPOSER**, when you press the **ACCOMP DSP COPY OPTION** button, you can specify which effects to load.

### ■ SMF LOAD

Load data which was saved in the "Standard MIDI File" (SMF) format.

1. On the **LOAD (PAGE 1/3)** display, press the **SMF** button.
- The display looks similar to the following.



- For disks which contain SMF files only, this display appears automatically when **LOAD** is selected on the **DISK MENU** display.

2. Use the buttons below the display to select the filename you wish to load.
  - If the number of files is 10 or more, you can use the **PREV** and **NEXT** buttons to go back or advance 10 files at a time.
  - If you press the **TECH** button, the display changes to the **LOAD** display for Technics files.
  - You can use the **INFORMATION** button to switch the displayed data.

**DISK:** Disk name

**SONG:** Song name

3. Use the **TO SONG** button to select the number to load to (this instrument's **SEQUENCER** song number).
  - Songs to load are specified one at a time.
  - The song name to load to is shown below the **TO SONG** button.

4. Use the **LOAD AS** button to specify the load method.

Select from the following.

**GM/GM2** → **GM2:**

Activate the **GM2** initialized settings, and load **GM/GM2** data.

**NX** → **NX:**

Active the **NX SOUND** settings, and load **NX** data.

**GM/GM2** → **NX:**

Activate the **NX SOUND** initialized settings, and load **GM/GM2** data.

**PREV. TEC** → **NX:**


Activate the **NX SOUND** initialized settings, and load **SMF** data that was saved in the **TECHNICS** mode on a previous model. (The volume balance and octave settings may differ from the saved settings.)

- If you select the setting which is different from that in which the song was stored, the sounds, octaves, and arrangement of percussion instrument sounds, etc. will be different.
5. Press the **LOAD** button.
    - The **LOAD** operation begins.
    - When the operation has been successfully completed, "COMPLETED!" is shown on the display.
    - If you press the **START/STOP** button, playback of the loaded data begins.
    - During the **LOAD** operation, data that cannot be processed by this instrument is ignored.


## ■ COMPOSER LOAD

Load **COMPOSER** data only from a disk.

1. In the **RHYTHM GROUP** section, press and hold the **LOAD (MEMORY)** button for a few seconds.

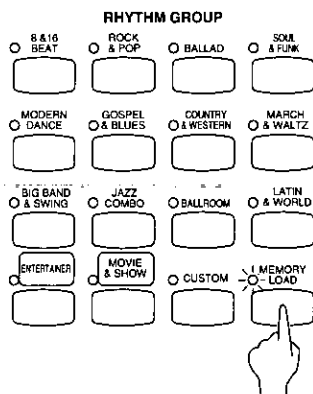

- The display looks similar to the following.

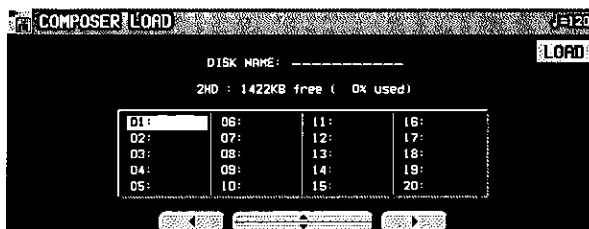

2. Select the name of the file you wish to load.
  3. Press the **LOAD** button.
- Data is loaded to this instrument's **COMPOSER** memory (**MEMORY**).

## Direct Play

You can enjoy immediate playback of “Standard MIDI File” (SMF), “Disk Orchestra Collection” (DOC) and “PianoDisc” disks—all without loading the song data.

1. Insert the disk with the stored data into the Disk Drive.
  2. On the **DISK MENU** display, select **DIRECT PLAY**.
- The display looks similar to the following.

<Example: SMF>



3. Use the buttons below the display to select the song you wish to have played.
- If the number of files is 10 or more, you can use the **PREV** and **NEXT** buttons to go back or advance 10 files at a time.
  - For SMF files, use the **PLAY AS** button to specify a sound arrangement mode.

GM2: GM2 LEVEL 2

NX: NX SOUND

PREV. TEC: Data from Technics instruments not having NX SOUND capability.

- For SMF files, you can use the **INFORMATION** button to switch the displayed data.  
DISK: Disk name  
SONG: Song name
- For SMF files, use the **MIDI OUT** button to specify whether or not MIDI data is output during playback (**ON/OFF**). (This cannot be changed during playback.)

4. Press the **START** button.
- The selected song is played back.


### ■ Adjusting the playback tempo

Even with a song having recorded tempo data, you can use **TEMPO/PROGRAM** or **TAP TEMPO** to adjust the tempo to your liking.

- When the tempo is changed, all the tempo data of that song is automatically changed by the same ratio. Accordingly, even in song data in which tempo change data is stored, a single adjustment of the tempo produces a natural-sounding playback.

### ■ The display during playback

<Example: SMF>

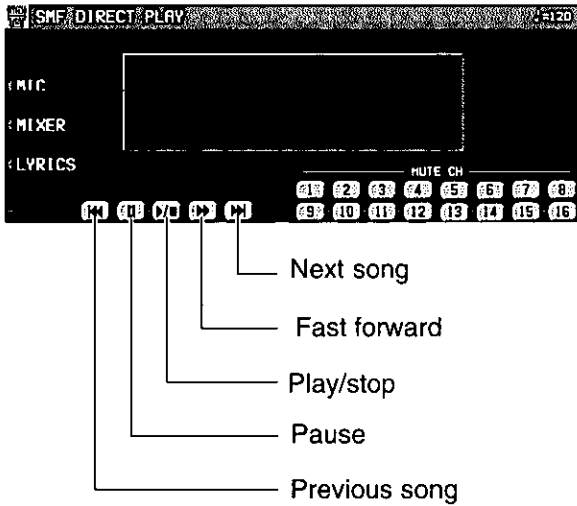

- During playback, the buttons below the display are used for player functions such as fast forward, pause, etc.
- During playback, if you press the MIXER button you can change the settings for each part.
- If you press the MIC button during playback, the display changes to the MIC REVERB & EFFECT setting display.
- For SMF disks:
  - For "SMF with LYRICS" disks, by pressing the LYRICS button, the lyrics are shown on the display.
  - For a "minus one" performance, use the MUTE CH buttons to select the channel you wish to mute. Following this, you can play a keyboard performance on the channel which was last set to MUTE.
- For DOC disks:
  - You can use the PART 1, PART 2 and ORCH (other accompaniment parts) buttons to set the respective parts to ON or OFF.
- For PIANO DISC playback:
  - You can use the PART 1 and ORCH (other accompaniment parts) buttons to set the respective parts to ON or OFF.

### ■ MEDLEY PLAY

With DIRECT PLAY, songs saved on a disk can be played back continuously in a medley.

1. On the DIRECT PLAY display, set the MEDLEY settings.
  - If ALL is pressed, all the files are selected, and the songs are played back in order in a medley. If ALL is pressed again, the files are deselected.
  - You can use the buttons below the display to select a song to add to the song list, then press the ADD button to add it to the list. Repeat these steps to create your own list of songs to have played back. A M01, M02 etc. next to the file name indicates its order in the list.
  - If the number of files is 10 or more, you can use the PREV and NEXT buttons to go back or advance 10 files at a time.
  - You can delete a marked file from the medley song list by selecting it and pressing the ADD button.
  - Use the LOOP button to specify ON or OFF for repeat playback of the medley.
2. Press the START button.
  - Medley playback begins.
- During medley playback, you can use the SKIP button to skip to the next song.

# Song Medley

Songs saved from the **SEQUENCER** to a disk (disk data) in the **TECHNICS FORMAT** can be played back in a medley.

1. On the **DISK MENU** display, select **SONG MEDLEY** from the display.
  - The display looks similar to the following.



2. Select the order of files in the medley.
  - If **ALL** is pressed, all the files are selected, and the songs are played back in numerical in a medley.
  - You can select a file and song, then press the **ADD** button to add it to the song list. Repeat these steps to create your own list of songs to have played back. A **M01**, **M02** etc. next to the file name indicates its order in the list.
  - You can delete a marked file from the medley song list by selecting it and pressing the **ADD** button.
  - Use the **LOOP** button to specify **ON** or **OFF** for repeat playback of the medley.
  - You can use the **MODE** button to select the medley mode.
    - 10 SNGS:**  
Songs 1 to 10 from each file are played in a medley.
    - 1 SONG:**  
Only song 1 from each file is played back in a medley.

3. Press the **START** button.

- Medley playback begins.
- During the performance, the display changes to the playback display.
- During a medley performance, if you press the **MIXER** button you can change the settings for each part.
- During a medley performance, you can use the **SKIP** button to skip to the next song.
- If the disk contains **SMF** or other files, but no **TECHNICS FORMAT** file, the display changes to the **DIRECT PLAY** display.


# Saving data

The recorded data and panel settings of this instrument can be saved on a disk.

## Floppy disks


You can use 3.5 inch 2DD (720KB) or 2HD (1.44MB) disks.

- How to distinguish the two disk types:

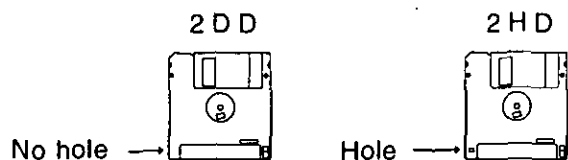

- Although 2HD disks can hold more data and are convenient for quick loading and saving, some models may be able to read only 2DD disks. Therefore, you may not be able to use your 2HD disk data with other musical instrument models.


- When saving data to the disk, the write-protect tab must be closed.

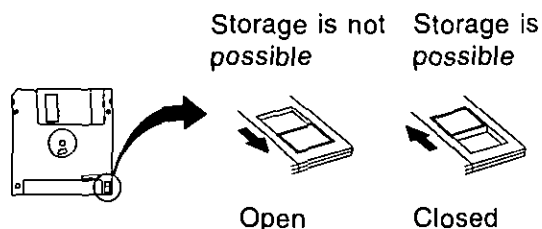

## ■ FORMAT

Floppy disks which are used for the first time with this instrument have to be formatted through the following procedure. When an unformatted disk is inserted into the Disk Drive slot and you attempt to execute the save or load procedure, the FLOPPY DISK FORMAT display appears. Follow the instructions shown to format the disk.

- Note that this procedure clears any data which is currently stored on the disk.
1. Select the type of format (2DD or 2HD).
  - Be sure to select the type which is the same as your disk type.
  - If the type is automatically detected, the display changes directly to the following display, without showing the type select display.
  - The display looks similar to the following.

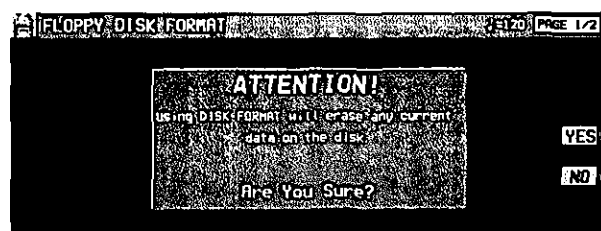

- If you wish to select the type again, use the PAGE button to access the PAGE 2/2 display.

2. Press the YES button to format the disk, or press the NO button to cancel the format.
  - When the YES button is pressed, disk format begins. After about 1–2 minutes, formatting is completed and DISK NAMING display is shown.


3. Use the buttons below the display to assign a name.
  - Press a button for the corresponding letter. Press the SHIFT button to display numbers.
  - Press the POSITION button to move the cursor.
  - You can also use the TEMPO/PROGRAM dial to select the characters.
  - Press the INS button to enter a space at the cursor position.
  - Press the DEL button to erase the character at the cursor position.
  - Press the CLR button to erase the entire name.
  - Press the →← button to center the name.

4. Press the OK button.

- The FORMAT display can also be accessed from the DISK TOOLS menu when, for example, you wish to reformat a disk. (Refer to page 131.)

## SAVE

1. Insert a formatted disk into the Disk Drive slot.  
Push it all the way in until you hear a click.
  - A disk which is used with this instrument for the first time must first be formatted.
2. On the DISK MENU display, select SAVE.
  - The display looks similar to the following.

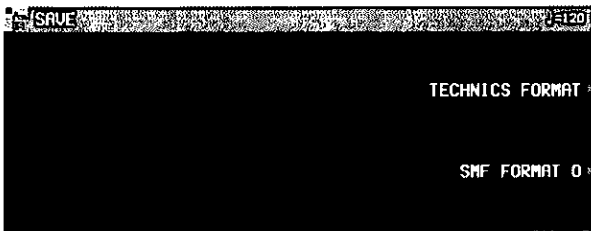

3. Select the type of data save you want.


### TECHNICS FORMAT:

Save this instrument's data in the Technics File format.


### SMF FORMAT 0:

Save the **SEQUENCER** data in the "Standard MIDI File" format (FORMAT 0).

## ■ TECHNICS FORMAT

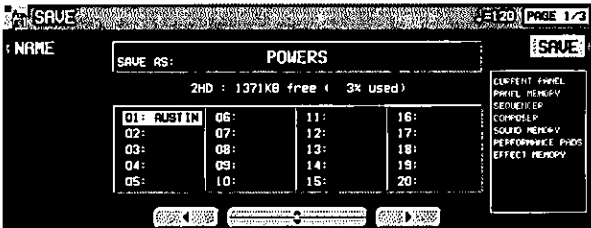

1. Use the buttons below the display to specify the file number you wish to save to.
  - The types of data that can be saved are shown in a frame on the right side of the display. If you press the SAVE button, all the indicated data is saved. Ordinarily PERFORMANCE data is selected, but you can use the SAVE OPTION to select specific data to save.
2. If you wish to assign a name to the file, press the NAME button.
  - The display looks similar to the following.

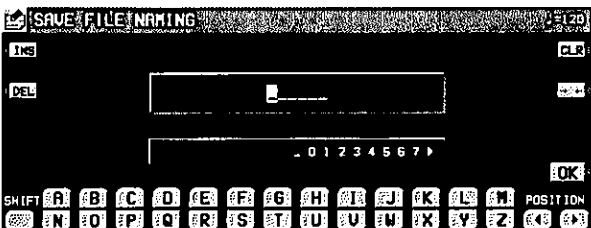


3. Use the buttons below the display to assign a name.
  - Press a button for the corresponding letter. Press the SHIFT button to display numbers.
  - Press the POSITION button to move the cursor.
  - You can also use the **TEMPO/PROGRAM** dial to select the characters.
  - Press the INS button to enter a space at the cursor position.
  - Press the DEL button to erase the character at the cursor position.
  - Press the CLR button to erase the entire name.
  - Press the →← button to center the name.
4. Press the OK button.
  - The display returns to the SAVE display.
5. Press the SAVE button.
  - The SAVE operation begins.
  - If you attempt to save data to a file number in which data is currently saved, the display changes to the confirmation display. Press the YES button to continue the SAVE procedure, or press the NO button if you wish to cancel it.

## &lt;SAVE OPTION&gt;

Specify the kind of data you wish to save to the disk. To maximize effective use of disk memory or to minimize the save time, select only the type of data you wish to save.

1. Use the **PAGE** buttons to access the 2/3 SAVE OPTION display.
  - The display looks similar to the following.

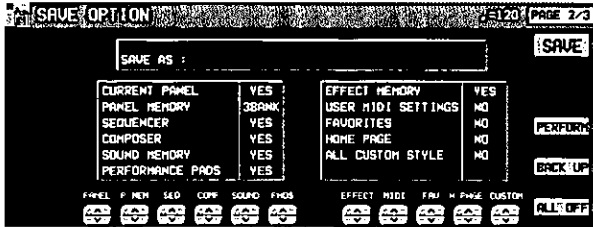


2. Use the buttons below the display to specify the types of data you wish to save (YES/NO).
  - For **PANEL MEMORY**, select from **NO/3 BANK/ALL**.  
If you save data with **3 BANK** selected, only banks A, B and C are saved.
  - Press the **PERFORM** button to select all the performance data, or press the **BACKUP** button to select all the back up data at once.
  - If the **ALL OFF** button is pressed, all the settings change to **NO**.
3. Press the **SAVE** button.
  - The **SAVE** operation begins.

## &lt;SEQUENCER SONG SAVE&gt;

You can specify a single song in the **SEQUENCER** to save to the disk.

1. Use the **PAGE** buttons to access the 3/3 SEQUENCER SONG SAVE display.
  - The display looks similar to the following.

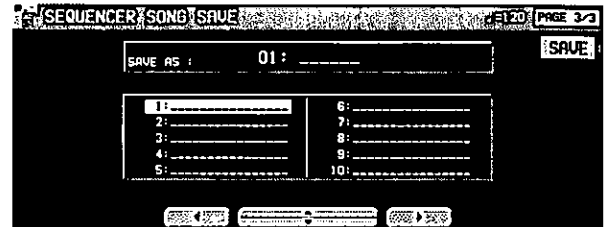

2. Use the buttons below the display to select the song number you wish to save.
3. Press the **SAVE** button.
  - The **SAVE** operation begins.



### ■ SMF FORMAT 0

This instrument's **SEQUENCER** data can be saved in the "Standard MIDI File" format (FORMAT 0) for use on other instruments.

- What you can save in the SMF format (FORMAT 0) is ordinary performance data, such as note data. Data such as chord and rhythm data, **COMPOSER** data, etc. is not saved. If you wish to also save this special Technics data, save the data in the Technics File format.
- If you use the APC TO SMF CONVERT function of the **SEQUENCER**, you can convert the patterns of the automatic accompaniment, etc. to SMF data. (Refer to page 100.)



1. Use the buttons below the display to select the song number you wish to save to.
  - If the number of files is 10 or more, you can use the PREV and NEXT buttons to go back or advance 10 files at a time.
2. If you wish to assign a name to the file, press the NAME button.
3. Use the buttons below the display to assign a name.
4. Press the OK button.
  - The display returns to the SAVE display.
5. Use the FROM SONG buttons to select the **SEQUENCER** song number you wish to save.
  - The song name to save from is shown below the FROM SONG button.
6. Use the PANEL HEADER buttons to specify ON or OFF.

ON:

The sound and volume settings for each part are saved as data at the beginning of the file.

OFF:

This data is not saved.

7. Use the 1 MEASURE SPACE buttons to select ON or OFF.

ON:

A one-measure space is added to the beginning of the file.

OFF:

No space is added.

- When there is various data other than performance data stored at the beginning of a file, the start of playback may be delayed. This can be avoided by set the 1 MEASURE SPACE to ON to inserting a before the beginning of the performance.
  - When set to ON, a space is added each time a file is saved. Therefore, if you have already saved a file once with the 1 MEASURE SPACE set to ON, please set it to OFF each time the file is subsequently saved.
8. Use the SAVE AS button to select the sound generator mode (GM/GM2/NX).
  9. Press the SAVE button.
    - The SAVE operation begins.
    - When the operation has been successfully completed, "COMPLETED!" is shown on the display.
    - If you attempt to save data to a file number in which data is currently saved, the display changes to the confirmation display. Press the YES button to continue the SAVE procedure, or press the NO button if you wish to cancel it.

# Custom Style Load/Save

Load and save each style data of the **CUSTOM** in a special file.

- All **CUSTOM** styles are backed up in a Technics file as **ALL CUSTOM STYLE**.


1. Insert the disk to load from or save to in the disk drive.

2. On the **DISK MENU** display, select **CUSTOM STYLE LOAD/SAVE**.

- The **DIRECTION** button is use to switch between load and save.

3. Perform the load or save procedure.


## ■ SAVE

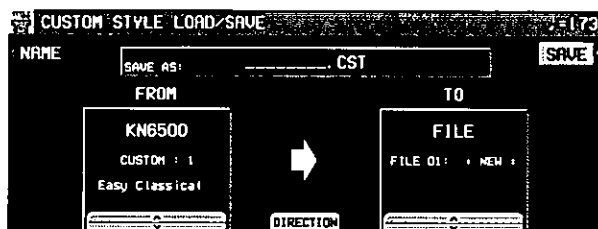

Use the **FROM**  $\wedge$  and  $\vee$  buttons to select the **CUSTOM** number to save, and press the **SAVE** button.

- To overwrite a file that already has data, use the **TO**  $\wedge$  and  $\vee$  buttons to select the file name to save to, and then press the **SAVE** button. (A confirmation display appears.)

## ■ LOAD

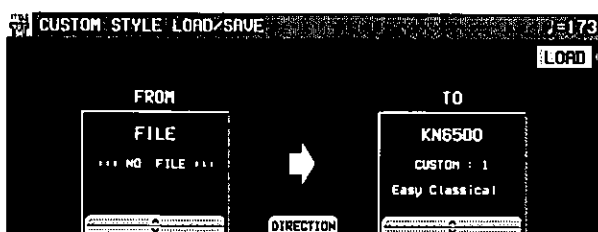


- Use the **FROM**  $\wedge$  and  $\vee$  buttons to select the file number to load. Use the **TO**  $\wedge$  and  $\vee$  buttons to select the **CUSTOM** number to load to. Press the **LOAD** button.

# Disk management

Various disk management procedures, such as file erase, file copy, and disk format, are available from the DISK TOOLS menu.

## DISK TOOLS

1. Insert the disk into the Disk Drive slot.
2. On the DISK MENU display, select DISK TOOLS from the display.
  - The display looks similar to the following.

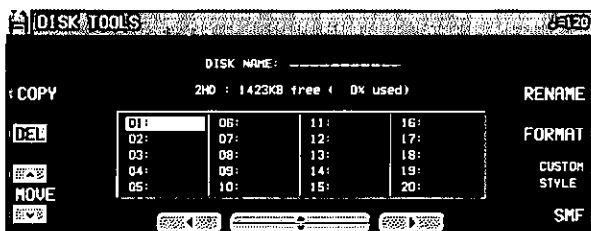

3. Select a function and follow the procedure to execute it.
  - Use the buttons below the display to select a file.
  - You can press the SMF/TECH/CUSTOM STYLE button to change to the display for procedures related to SMF/TECH/CUSTOM STYLE files.
  - Use the buttons to the left and right of the display to access the corresponding setting display.

### RENAME:

Assign a name to a file.

### DEL:

Delete a file.

### FORMAT:

Reformat the disk.

### COPY (TECH):

Copy a file.

### MOVE (TECH):

Replace a file.

### INFORMATION (DISK/SONG) (SMF files only):

Select whether to display the disk data or the song names.


# Set the automatic display when a disk is inserted

When a disk is inserted in the Disk Drive, the display automatically changes to a disk-procedure display. Follow this procedure to customize the automatic display.

## PREFERENCES

1. On the DISK MENU display, select PREFERENCES.

- The display looks similar to the following.

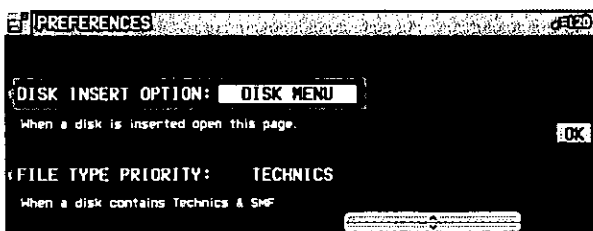

2. Use the buttons to the left of the display to select the item, and the  $\wedge$  and  $\vee$  buttons to change the setting.

### DISK INSERT OPTION:

The display automatically changes to a disk-procedure display when a disk is inserted in the Disk Drive (OFF, DISK MENU, LOAD, DIRECT PLAY, SONG MEDLEY).

- During playback, recording or changing the settings, the displays unrelated to the settings made here do not change.

### FILE TYPE PRIORITY:


Specify the desired priority ranking of displayed files when several types of files are recorded on one disk (TECHNICS/SMF/CUSTOM STYLE).

3. Press the OK button.

# How to use the Style Convert Disk

Style data from commercial manufacturers can be loaded into the **COMPOSER** and used by this instrument.

1. Turn on the **DISK** button.



2. On the **DISK MENU** display, select **STYLE CONVERT**.
3. Insert the "STYLE CONVERT DISK" that was included with this instrument into the Disk Drive slot.
  - The display changes to the **STYLE TYPE SELECT** display.
4. Select the style type.
5. Press the **OK** button.
6. Follow the instructions on the display to perform the desired operation.
  - The operation differs depending on the type of disk.
  - For Technics type data, all of the **MEMORY** contents of the **COMPOSER** are overwritten, and in some cases, the **SOUND MEMORY** contents are also overwritten.
  - Style data that requires a lot of data space may not be loaded.
  - Depending on the style, volume balance and tone nuances in each part of the pattern may not be played back as in the original data because of the difference in sound source waveform. Also, special effects and tones including edited tones may not be played back correctly.
  - It is possible to play back patterns of more than 16 measures, but they are not recorded or edited correctly.
  - When style data differs for the **INTRO**, **FILL IN** and **VARIATION** time signatures, the **INTRO**, **FILL IN** and **ENDING** may not be played back correctly.
  - Depending on the manufacturer, the number of styles written on the disk label may differ from the actual number of styles included on the disk.

## About the Initial Data Disk

Use **INITIAL DATA DISK** to reset the **CUSTOM STYLE** and other data to the factory preset settings.


- The disk contains the following data. Specify which file you wish to load.

CTMINI	CUSTOM STYLE initial data
UMDINI	USER MIDI SETTING initial data
FAVINI	FAVORITES SETTING initial data
HPGINI	HOME PAGE SETTING initial data

- Be careful not to accidentally delete a file.

# Part VII Sound

## Outline of the Sound

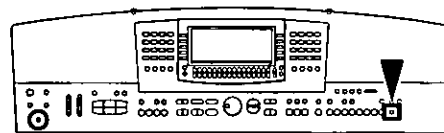


The SOUND mode is used for making fine adjustments to the functions related to sound, such as tone, and tuning.

1. Press the **PROGRAM MENUS** button to turn it on.




- The display looks similar to the following.

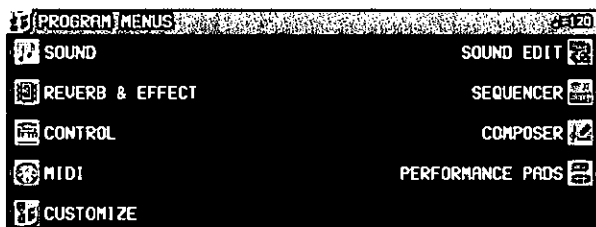

2. Select **SOUND**.

- The display looks similar to the following.

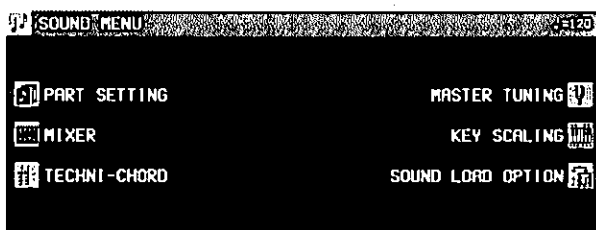

3. Select the desired menu.

4. Follow the procedures on the corresponding menu display.

- When the **TEMPO/PROGRAM** indicator is lit, it indicates that the **TEMPO/PROGRAM** is available for setting the current function.

### Summary of the SOUND menu items

#### PART SETTING (page 135)

Set the various sound attributes for each part.

#### MIXER (page 138)

Use the MIXER display to visually adjust the major settings of each part.

#### MASTER TUNING (page 140)

Select the type of tuning for the instrument.

#### KEY SCALING (page 140)

Select the type of scaling (tuning).

#### SOUND LOAD OPTION (page 141)

Specify whether the various data accompanying a sound, such as effects, are used when the sound is recalled.

#### TECHNI-CHORD

Select the **TECHNI-CHORD** harmony style. (Refer to page 46.)

5. When you have finished setting the functions, press the **PROGRAM MENUS** button to turn it off.

#### ■ A word about parts

The organization of the sound parts is as follows.

Normal parts (16 parts):

- RIGHT 1, RIGHT 2, LEFT, PART 1 to 16
- It is suggested that PART 10 be used for the DRUMS part.

**AUTO PLAY CHORD** (automatic accompaniment) parts:

ACCOMP 1-5, BASS, DRUMS 1, 2, CHORD, R.BASS.

**PERFORMANCE PADS** part:

PADS

# Part Setting

Set the various sound attributes for each part.

## Selecting an attribute

1. On the SOUND MENU display, select PART SETTING.
2. Use the PART SELECT  $\wedge$  and  $\vee$  buttons to select the part.

3. Use the buttons below the display to adjust each attribute (explained in detail following).
  - The settings display is comprised of 5 pages. Use the **PAGE** buttons to switch pages.
  - When you have completed adjustment of an attribute, use the buttons along the bottom of the display to select the next attribute you wish to adjust.
4. When you have completed adjusting all of the settings for one part, select another part and repeat the adjustment procedure as desired.
  - The settings and effects of the PAN, EFFECT etc. may differ depending on the sound.

<PAGE 1>



### SOUND:

Use the SOUND  $\wedge$  and  $\vee$  buttons to select a sound.

- The buttons on the control panel may also be used to select a sound.

### VOLUME:

Use the VOLUME  $\wedge$  and  $\vee$  buttons to adjust the volume (0 to 127).

### PAN:

Use the PAN  $\wedge$  and  $\vee$  buttons to adjust the stereo balance (L64-CENTER(CTR)-R63).

- At L64, the sound is completely to the left, at R63 completely to the right. At CENTER, the sound is at the center. The display indicates the selected position.
- Even at the same numerical value, the stereo balance may differ slightly depending on the sound.

### SUSTAIN:

Use the SUSTAIN ON/OFF buttons to enable or disable the **SUSTAIN** function.

Use the  $\wedge$  and  $\vee$  buttons to adjust the length of the sustain.

### KEY SHIFT:

Use the KEY SHIFT  $\wedge$  and  $\vee$  buttons to specify the amount of key shift (-24 to +24).

- A value of 1 means a shift of one semi-tone. To raise (or lower) the pitch one octave, set the value to +12 (or -12).
- The  $\vee$  button is used to lower the pitch, and the  $\wedge$  button to raise the pitch.

### TUNING:

Use the TUNING  $\wedge$  and  $\vee$  buttons to adjust the fine tuning (-128 to +127).


- The  $\vee$  button is used to lower the pitch, and the  $\wedge$  button to raise the pitch.

### BEND RANGE:

Use the BEND RANGE  $\wedge$  and  $\vee$  buttons to specify the PITCH BEND range (0 to 12). Increments are in semi-tones.

- The higher the number, the greater the change in pitch when the **PITCH BEND** wheel is operated.

&lt;PAGE 2&gt;

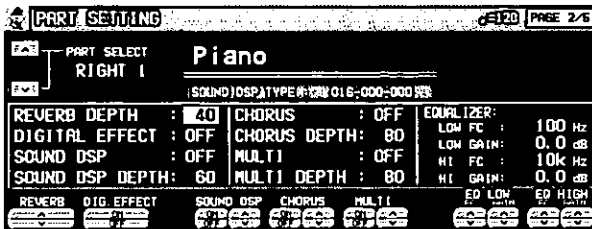**REVERB:**

Use the REVERB  $\wedge$  and  $\vee$  buttons to adjust the depth of the REVERB (0 to 127).

**DIGITAL EFFECT:**

Use the DIG. EFFECT ON/OFF buttons to set the DIGITAL EFFECT to on or off.

**SOUND DSP:**

Use the SOUND DSP ON/OFF button to set SOUND DSP to on or off. Use the  $\wedge$  and  $\vee$  buttons to adjust the depth of the effect (0 to 127).

**CHORUS:**

Use the CHORUS ON/OFF button to set the CHORUS to on or off. Use the  $\wedge$  and  $\vee$  buttons to adjust the depth of the effect (0 to 127).

**MULTI:**

Use the MULTI ON/OFF button to set the MULTI to on or off. Use the  $\wedge$  and  $\vee$  buttons to adjust the depth of the effect (0 to 127).


**EQ LOW:**

Use the EQ LOW FC, GAIN  $\wedge$  and  $\vee$  buttons to adjust the sound quality in the lower range.

**EQ HIGH:**

Use the EQ HIGH FC, GAIN  $\wedge$  and  $\vee$  buttons to adjust the sound quality in the upper range.

&lt;PAGE 3&gt;

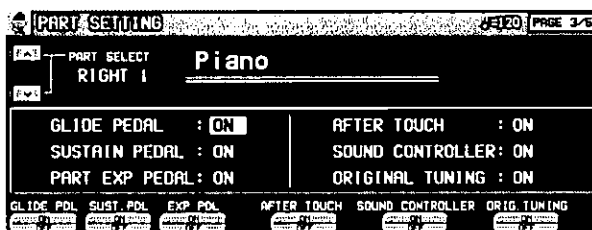**GLIDE PEDAL:**

Use the GLIDE PDL ON/OFF buttons to enable or disable the glide effect, if it has been assigned to the Foot Switch (sold separately).

- For Foot Switch settings, refer to page 159.

**SUSTAIN PEDAL:**

Use the SUST. PDL ON/OFF buttons to enable or disable the sustain effect, if it has been assigned to the Foot Switch (sold separately).

**PART EXP PEDAL:**

Use the EXP PDL ON/OFF buttons to enable or disable part expression by the expression pedal (sold separately).

- To enable the ON/OFF setting for each part, it is necessary to set EXPRESS. PEDAL TO PART EXPRESSION on the FOOT CONTROLLERS display. (Refer to page 160.)

**AFTER TOUCH:**

Use the AFTER TOUCH ON/OFF button to enable or disable the keyboard aftertouch.

**SOUND CONTROLLER:**

Use the SOUND CONTROLLER ON/OFF button to enable or disable the SOUND CONTROLLER operation.


**ORIGINAL TUNING:**

Use the ORIG. TUNING ON/OFF button to enable or disable the tuning for each sound.

- For details about ORIGINAL TUNING, refer to page 140.



## &lt;PAGE 4&gt;

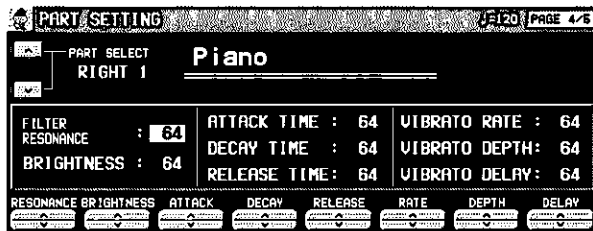**FILTER RESONANCE:**

Use the RESONANCE  $\wedge$  and  $\vee$  buttons to adjust the amount of resonance (0 to 127).

**BRIGHTNESS:**

Use the BRIGHTNESS  $\wedge$  and  $\vee$  buttons to adjust the brightness of the sound (0 to 127).

**ATTACK TIME:**

Use the ATTACK  $\wedge$  and  $\vee$  buttons to specify the attack time (0 to 127).

**DECAY TIME:**

Use the DECAY  $\wedge$  and  $\vee$  buttons to specify the decay time (0 to 127).

**RELEASE TIME:**

Use the RELEASE  $\wedge$  and  $\vee$  buttons to specify the release time (0 to 127).

**VIBRATO RATE:**

Use the RATE  $\wedge$  and  $\vee$  buttons to specify the vibrato speed (0 to 127).

**VIBRATO DEPTH:**

Use the DEPTH  $\wedge$  and  $\vee$  buttons to specify the vibrato depth (0 to 127).

**VIBRATO DELAY:**

Use the DELAY  $\wedge$  and  $\vee$  buttons to specify the time interval from when the keys are played until the vibrato starts (0 to 127).

- The center value is 64 ( $\pm 0$ ).

## &lt;PAGE 5&gt;

**MONO/POLY MODE:**

Use the MONO/POLY MODE  $\wedge$  and  $\vee$  buttons to select the output mode.

**PORTAMENTO:**

Use the PORTAMENTO ON/OFF buttons to enable or disable the portamento function. (Portamento is a continuous gliding movement from one tone to another.)

Use the  $\wedge$  and  $\vee$  buttons to specify the portamento time.

- PORTAMENTO does not function for the POLY MODE.

**MODULATION SENSITIVITY:**


Use the MODULATION SENS  $\wedge$  and  $\vee$  buttons to adjust the sensitivity of the MODULATION wheel.

- Use the MSB  $\wedge$  and  $\vee$  buttons (half-tone increments) and the LSB  $\wedge$  and  $\vee$  buttons to adjust the setting.

# Mixer

Use the MIXER display to visually adjust the major settings of each part. Use this display to make broad, general changes to the settings.

1. On the SOUND MENU display, select MIXER.
  - The MIXER display consists of 5 pages. Use the **PAGE** buttons to switch among the pages.
  - Each time the **OTHER PARTS/TR** button is pressed, the part that is displayed changes.
2. Adjust each parameter.

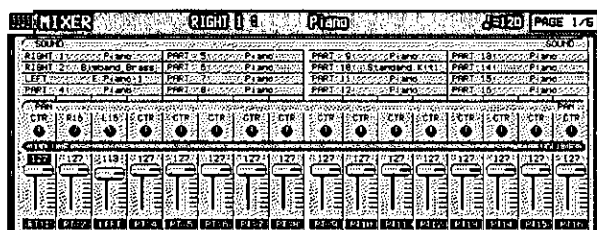

**SOUND:**

Select **SOUND**. Use the buttons below the display to set the sound for the corresponding part.

- The buttons in the **SOUND GROUP** can also be used to select the sound.


**PAN:**

Select **PAN**. Use the buttons below the display to adjust the stereo balance of the corresponding part (L64–CTR–R63).

**VOLUME:**

Select **VOLUME**. Use the buttons below the display to adjust the volume of the corresponding part (0 to 127).

- To mute a part, press both the corresponding balance buttons as the same time. To cancel the mute, press either balance button for the part.

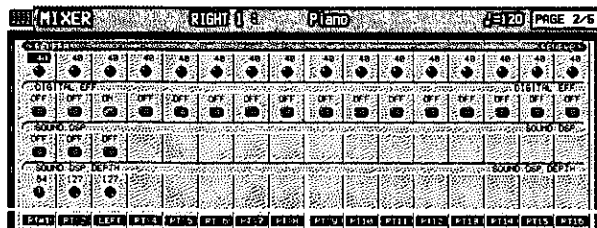

**REVERB:**

Select **REVERB**. Use the buttons below the display to set the level of the **REVERB** for the corresponding part (0 to 127).

**DIGITAL EFFECT:**


Select **DIGITAL EFF**. Use the buttons below the display to set the **DIGITAL EFFECT** to ON or OFF for the corresponding part.

**SOUND DSP:**

Select **SOUND DSP**. Use the buttons below the display to set the **SOUND DSP** to ON or OFF for each part.

**SOUND DSP DEPTH:**

Select **SOUND DSP DEPTH**. Use the buttons below the display to adjust the depth of the **SOUND DSP** for the corresponding part (0 to 127).

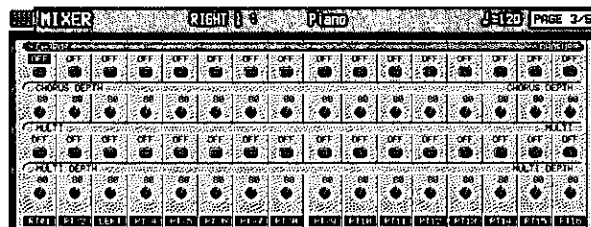

**CHORUS:**

Select **CHORUS**. Use the buttons below the display to set the **CHORUS** to ON or OFF for each part.

**CHORUS DEPTH:**


Select **CHORUS DEPTH**. Use the buttons below the display to set the depth of the **CHORUS** for the corresponding part (0 to 127).

**MULTI:**

Select **MULTI**. Use the buttons below the display to set the **MULTI** to ON or OFF for each part.

**MULTI DEPTH:**


Select **MULTI DEPTH**. Use the buttons below the display to adjust the depth of the **MULTI** for the corresponding part (0 to 127).

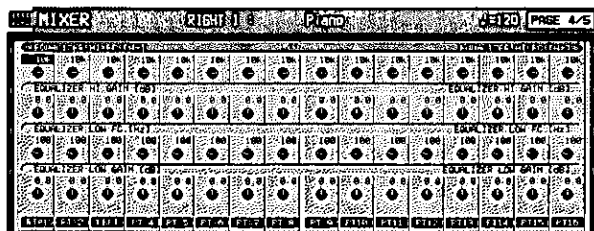**EQUALIZER HIGH:**

Sound quality correction in the high range. Select **EQUALIZER HI FC**; use the buttons below the display to set the standard frequency. Select **EQUALIZER HI GAIN**; use the buttons below the display to set the ratio of change.

**EQUALIZER LOW:**

Sound quality correction in the low range. Select **EQUALIZER LOW FC**; use the buttons below the display to set the standard frequency. Select **EQUALIZER LOW GAIN**; use the buttons below the display to set the ratio of change.

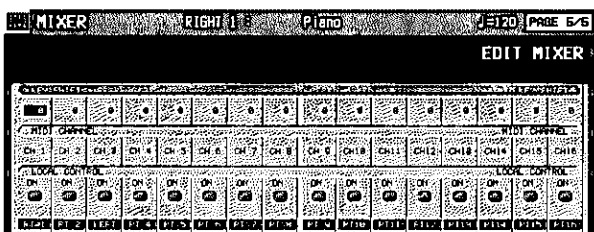**KEY SHIFT:**

Select **KEY SHIFT**. Use the buttons below the display to adjust the shift width of the output pitch of each part (in semitone increments; -24 to +24).

**MIDI CHANNEL:**

Select **MIDI CHANNEL**. Use the balance buttons below the display to set the MIDI channel for each part (CH1-CH16).

- Information about MIDI channels can be found on page 167.

**LOCAL CONTROL:**


Select **LOCAL CONTROL**. Use the balance buttons below the display to turn **LOCAL CONTROL ON** or **OFF** for each part.

- Even at the same numerical value, the **PAN** and effects may differ depending on the sound.
- For some parts, such as the automatic accompaniment parts, the items that can be adjusted are limited.

**■ EDIT MIXER**

If you press the **EDIT MIXER** button on the **PAGE 5/5** display, the display changes the setting display to modify the sounds.

&lt;PAGE 1&gt;

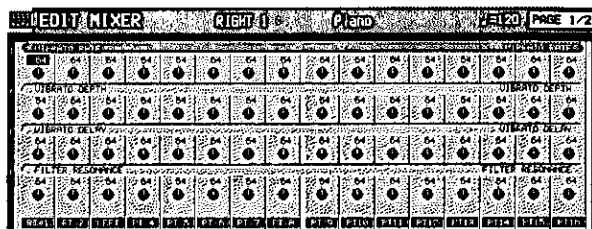**VIBRATO RATE:**

Select **VIBRATO RATE**. Use the buttons below the display to adjust the vibrato speed for each part (0 to 127).

**VIBRATO DEPTH:**

Select **VIBRATO DEPTH**. Use the buttons below the display to adjust the vibrato depth for each part (0 to 127).

**VIBRATO DELAY:**

Select **VIBRATO DELAY**. Use the buttons below the display to specify the time interval from when the keys are played until the vibrato starts for each part (0 to 127).

**FILTER RESONANCE:**

Select **FILTER RESONANCE**. Use the buttons below the display to set the amount of resonance applied to each part (0 to 127).

&lt;PAGE 2&gt;

**BRIGHTNESS:**

Select **BRIGHTNESS**. Use the buttons below the display to set the amount of brightness applied to each part (0 to 127).

**ATTACK TIME:**

Select **ATTACK TIME**. Use the buttons below the display to set the sound attack time for each part (0 to 127).

**DECAY TIME:**

Select **DECAY TIME**. Use the buttons below the display to set the sound decay time for each part (0 to 127).

**RELEASE TIME:** Select **RELEASE TIME**. Use the buttons below the display to set the release time for each part (0 to 127).

# Master Tuning

This setting is used to fine-tune the pitch of the entire instrument. This is convenient when the Keyboard is played with other instruments or with a recorded performance.

1. On the SOUND MENU display, select MASTER TUNING.
  - The display changes to the following.




2. Use the  $\wedge$  and  $\vee$  buttons to adjust the pitch.


# Key Scaling

For each part you can change the tuning of each key within a one-octave range. In addition to equal temperament tuning, you can perform in other types of scales, for example Arabic tuning.

1. On the SOUND MENU display, select KEY SCALING.
  - The display looks similar to the following.

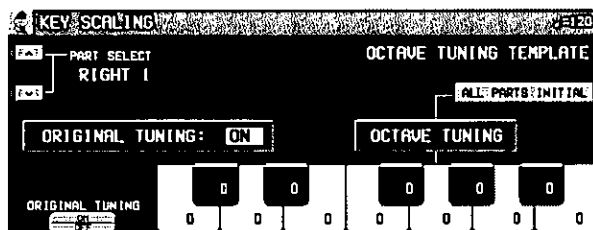

2. Press the OCTAVE TUNING TEMPLATE button.
  - The display looks similar to the following.

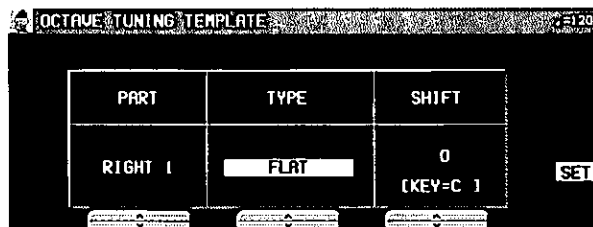

3. Use the PART  $\wedge$  and  $\vee$  buttons to select the part to set.
  - If ALL is selected, all the parts are set at once.

4. Use the TYPE  $\wedge$  and  $\vee$  buttons to select the type of tuning.
  - Select from FLAT, WERCKMEISTER, KIRNBERGER, ARABIC 1 to 5, SLENDRO, and PELOG.

5. Use the SHIFT  $\wedge$  and  $\vee$  buttons to select the key to perform in.

6. Repeat steps 3 to 6 for each part, as necessary.

7. Press the SET button.

- The OCTAVE TUNING for the specified type and key is automatically set.

### ■ Settings for each key.

On the KEY SCALING display, you can adjust the tuning for each key.

Use the buttons below the display to adjust the tuning for each key.

- The pitch can be raised or lowered by a maximum of one half-tone.
- You can use the PART SELECT  $\wedge$  and  $\vee$  buttons to switch the part.
- Use the ALL PARTS INITIAL button to return all parts to the flat tuning.

### ■ ORIGINAL tuning

Each instrument of each sound has its own original tuning data. This setting affects the tuning curve that spans the entire keyboard. So, for example, the acoustic piano-type sounds duplicate those of a real piano, in that the high notes are tuned slightly higher and the low notes slightly lower.

You can specify for each part whether this original tuning is enabled or not.

1. Use the PART SELECT  $\wedge$  and  $\vee$  buttons to select a part.
2. Use the ORIGINAL TUNING ON/OFF button to select ON or OFF.

## Sound Load Option

The data for each individual sound is set with the most suitable effect settings, etc., but in some cases when switching from one sound to another and these settings are recalled, the setup is not the way you want it. By using the SOUND LOAD OPTION, you can adjust the settings so that specific data is not recalled.


1. On the SOUND MENU display, select SOUND LOAD OPTION.
  - The display looks similar to the following.



2. Use the  $\blacktriangle$  and  $\blacktriangledown$  buttons to select an item. Use the  $\wedge$  and  $\vee$  button to set the filter to ON or OFF.

# Part VIII Reverb & Effect

## Outline of the Reverb & Effect

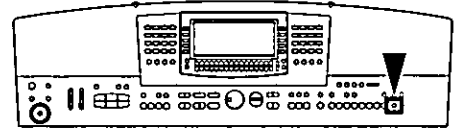


In the REVERB & EFFECT mode, you can make detailed settings related to this instrument's effects.

1. Press the **PROGRAM MENUS** button to turn it on.




- The display looks similar to the following.

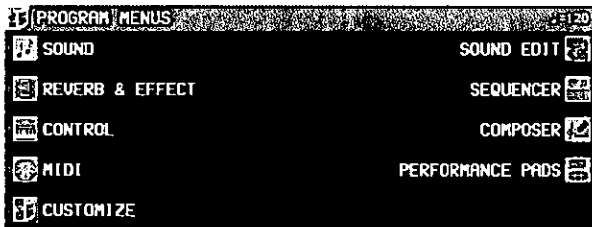

2. Select REVERB & EFFECT.

- The display looks similar to the following.

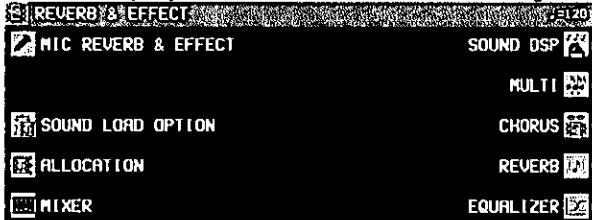

3. Select the desired menu.
4. Follow the procedures on the corresponding menu display.
  - When the **TEMPO/PROGRAM** indicator is lit, it indicates that the **TEMPO/PROGRAM** is available for setting the current function.
5. When you have finished setting the functions, press the **PROGRAM MENUS** button to turn it off.

### Summary of the REVERB & EFFECT menu items

#### EQUALIZER (page 143)

Settings for the entire instrument's final output sound quality.

#### ALLOCATION (page 143)

Allocation settings for SOUND DSP 4 and 5.

#### REVERB: (page 41)

REVERB type and detailed settings

#### CHORUS:

CHORUS type and detailed settings (page 41)

#### MULTI:

MULTI type and detailed settings (page 42)

#### SOUND DSP:

SOUND DSP type and detailed settings (page 40)

#### MIC REVERB & EFFECT:

Settings for the effects that are applied to MIC. (page 42)

#### SOUND LOAD OPTION (page 141)

Specify whether the various data accompanying a sound, such as effects, are used when the sound is recalled.

#### MIXER (page 138)

Use the MIXER display to visually adjust the major settings of each part.


# Equalizer

You can apply a 5-band equalizer to the final output of this instrument.

- The equalizer is applied to both the L and R outputs.

1. On the REVERB & EFFECT display, select EQUALIZER.

- The display looks similar to the following.

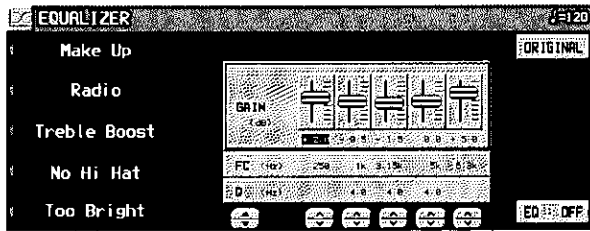

2. Use the buttons to the left of the display to select the preset type.

3. If necessary, use the buttons below the display for fine adjustment of the sound quality.


- FC indicates the frequency, Q (except for EQ1 and 5) the resonance acuity, and Gain the ratio of change.
- The EQ button can be used to turn the equalizer on or off.
- If the ORIGINAL button is pressed, the settings are restored to their previous values.

# Allocation

In the initialized state, SOUND DSP 4 and 5 of the effect unit are assigned for use with the automatic accompaniment, but they can also be used for the **SEQUENCER** parts.

1. On the REVERB & EFFECT display, select ALLOCATION.

- The display looks similar to the following.

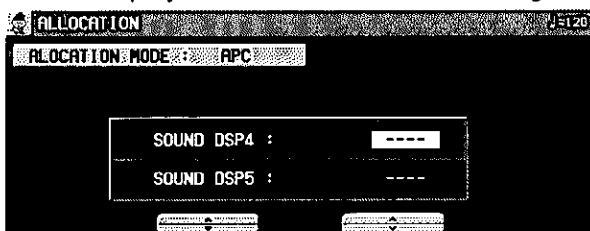

2. Use the ALLOCATION MODE button to select the mode.


APC: SOUND DSP 4 and 5 are used for the automatic accompaniment (initialized setting).

SEQ: SOUND DSP 4 and 5 are used for the **SEQUENCER**.

- Because the SOUND DSP cannot be used in the automatic accompaniment when the SEQ mode is selected, the nuance will differ from the automatic accompaniment in the APC mode. When recording a performance that uses the automatic accompaniment in the **SEQUENCER**, it is recommended that the APC mode be selected.

3. If set to the SEQ mode, use the ▲ and ▼ buttons to select DSP, and the ^ and v buttons to select the **SEQUENCER** part.

# Outline of the Sound Edit

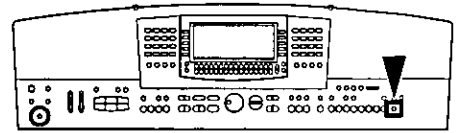


SOUND EDIT enables you to create your own new sound by altering one of the this instrument's preset sounds. Your new sound can be stored in one of the sound memory locations. SOUND EDIT has two methods of use. You can edit in detail using functions more commonly associated with a synthesizer, or you can use EASY EDIT which allows you to change some basic parameters on one page.

1. Select a sound to edit.
2. Turn on the **PROGRAM MENUS** button.




- The display looks similar to the following.

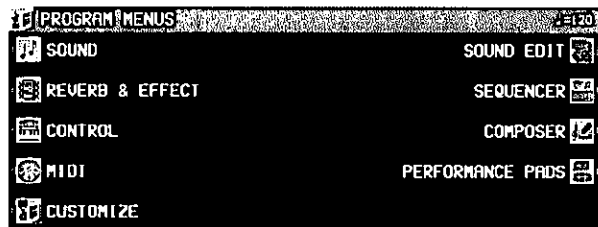

3. Select SOUND EDIT.

- The display looks similar to the following.

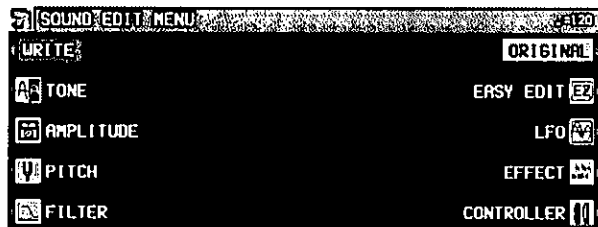

4. Select the desired menu and follow the procedures on the corresponding setting display.
  - To check the sound of a single tone, press the SOLO button to highlight the SOLO indication. Only the currently selected tone sounds when a key is played.
  - When the **TEMPO/PROGRAM** indicator is lit, it indicates that the **TEMPO/PROGRAM** is available for setting the current function.
5. When the sound is just the way you like it, on the SOUND EDIT MENU display press the WRITE button to store your new sound.
  - Press the EDITED (or ORIGINAL) button to switch between the modified sound (EDITED) and the original sound (ORIGINAL). This allows you to compare the edited sound to the original sound as you are modifying it.

## Summary of the SOUND EDIT menu items

### EASY EDIT (page 145)

The most often used edit functions—such as brightness and attack speed—are assembled on one display for easy sound modification.

### TONE (page 146)

Modify the tones which make up the sound.

### PITCH (page 149)

Adjust the settings related to the pitch.

### FILTER (page 150)

Adjust the amount of frequency cut in specific frequency ranges.

### AMPLITUDE (page 152)

Volume settings.

### LFO (page 154)

Cyclic modulation settings.

### EFFECT (page 155)

Settings related to the various effects applied to the sound.

### CONTROLLER (page 156)

Specify how wheel operation etc. affects the sound.

- When DRUM KIT sounds are selected and the SOUND EDIT is activated, the setting display looks different from that for other sounds, but the basic operation is the same. (To specify the percussion instrument you wish to edit, use the ^ and v buttons to select the sound name, or alternatively, while pressing the keyboard key for the corresponding sound, press the NOTE SELECT button.)
- To record the DIGITAL DRAWBAR settings, first adjust the settings, then enter the SOUND EDIT mode, press the WRITE button and follow the procedure on the display.




## Easy Edit

The most commonly used edit functions are consolidated on one display, providing convenient and quick editing operation.

1. On the SOUND EDIT menu display, select EASY EDIT.

- The display changes to the following.

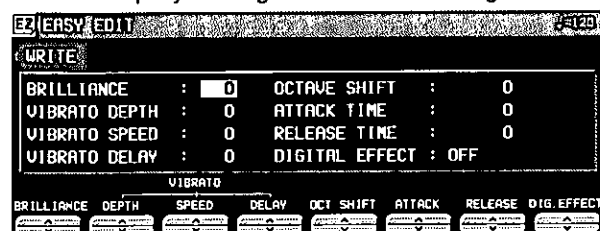

2 Use the buttons below the display to specify the value of the attribute.

- An effect may remain unchanged when EASY EDIT is used to set the value, if another EDIT function was first used to set the value to its upper or lower limit.

3. Press the WRITE button to store your new sound.

- Storing your new sound is explained on page 156.
- If a sound is stored in the EASY EDIT mode, and is later selected in the EASY EDIT mode, the displayed value of an attribute may be different from the value when it was stored. The sound itself, however, is exactly as it was stored.

### Easy Edit items

#### BRILLIANCE:

Adjust the brightness of the sound.

#### VIBRATO DEPTH:

Set vibrato depth.

#### VIBRATO SPEED:

Set vibrato speed.

#### VIBRATO DELAY:

Set time delay between key played and vibrato start.

#### OCT SHIFT:

Shift the octave range.

#### ATTACK:

Adjust attack time.

#### RELEASE:

Adjust time of sound fade-out after key is released.

#### DIG.EFFECT:


Select type of effect. (Refer to page 155.)

# Tone Edit

Modify the separate tones which comprise the sound.

## About tones

A sound may be made up of at most four tones.

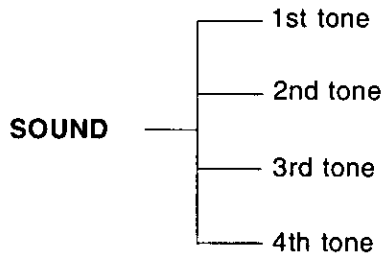

- A special process is used to produce real-sounding piano type tones. For this reason, some edit procedures for piano sounds, FILTER or AMPLITUDE for example, may differ from those for other sounds.

## TONE SELECT

1. On the SOUND EDIT menu, select TONE.
  - The display looks similar to the following.

	GROUP	TONE NAME	TONE DYNAM	LEVEL	KEY	DETUNE	PANNING		DELAY	TRIGGER
							MODE	FBV		
1st	ON	Piano L		84	0	0	NORMAL	L64	0ms	KEY DN
2nd	ON	Piano R		84	0	0	NORMAL	R63	0ms	KEY DN
3rd	OFF	Piano		90	0	0	NORMAL	CTR	0ms	KEY DN
4th	OFF	Piano		90	0	0	NORMAL	CTR	0ms	KEY DN

2. Use the buttons to the left of the display to select the tone you wish to edit (1st, 2nd, 3rd, 4th).
  - Use the ON/OFF buttons to select ON or OFF.
3. Select a sound for the tone.
  - Use the GROUP  $\wedge$  and  $\vee$  buttons to select the group, and the TONE NAME  $\wedge$  and  $\vee$  buttons to select the sound.
  - A "\*" mark in the TONE DYNAM column indicates that a TONE DYNAMICS change was made to the sound.
4. Use the LEVEL  $\wedge$  and  $\vee$  buttons to adjust the volume.
5. Use the KEY  $\wedge$  and  $\vee$  buttons to set the pitch of the output sound.
6. Use the DETUNE  $\wedge$  and  $\vee$  buttons for fine adjustment of the pitch deviation.

7. Use the PANNING  $\wedge$  and  $\vee$  buttons to adjust the stereo balance.

- PAN: CTR is the center point. At L64, the sound is all the way to the left, at R63 all the way to the right.
- If STEREO R or STEREO L is selected for the MODE, the balance is fixed (cannot be moved).

8. Use the DELAY  $\wedge$  and  $\vee$  buttons to adjust the delay time of the sound.

- The higher the number, the longer the delay before sound output.

9. Use the TRIGGER  $\wedge$  and  $\vee$  buttons to select a trigger mode.

### KEY ON:

The normal mode, in which sound is emitted when the key is played.

### KEY OFF:

Sound is emitted when the key is released (like muted strings, for example).

### LEGATO:

Sound is emitted only when the key is played legato.

### NON LEG:

Sound is not emitted when the key is played legato.

### PEDAL:

The sound is produced only while the **SUSTAIN** button is on.

**CHORD:**

The sound is emphasized when chords are played (like the cutting sound of a guitar, for example).

■ **TONE COPY**


You can copy the tone of a particular sound to a specified tone in the sound you are editing.

1. On the 1/4 display, press the TONE COPY button.
2. Use the FROM  $\wedge$  and  $\vee$  buttons to select the tone to copy from.
  - Use the OPTION  $\wedge$  and  $\vee$  buttons to select the item you wish to copy.
3. Use the TO  $\wedge$  and  $\vee$  buttons to select the tone you wish to copy to.
4. Press the OK button.
  - Tone copy is executed.

**KEY LAYER**

Adjust the relation of tone output to keyboard location.

1. Use the **PAGE** buttons to view the 2/4 display.
  - The display looks similar to the following.

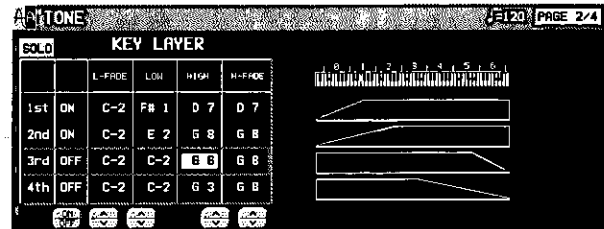


2. Use the buttons to the left of the display to select a tone (1st, 2nd, 3rd or 4th).
3. Use the L-FADE  $\wedge$  and  $\vee$  buttons and the LOW  $\wedge$  and  $\vee$  buttons to define the area of the lower range of tone output.
  - By entering different values for the L-FADE and LOW settings, you can define a sloping volume increase to the peak output volume which corresponds to the note pitch.
4. Use the HIGH  $\wedge$  and  $\vee$  buttons and the H-FADE  $\wedge$  and  $\vee$  buttons to define the area of the higher range of tone output.
  - By entering different values for the H-FADE and HIGH settings, you can define a sloping volume decrease from the peak output which corresponds to the note pitch.
  - By overlapping the L-FADE and H-FADE curves of each different tone, you can achieve a cross-fade effect, where the sound gradually changes in relation to pitch.
5. Repeat steps 2 to 4 for the other tones, as desired.

Sound Edit

## VELOCITY LAYER

Adjust these settings to regulate the tone output relative to the velocity.

- Use the **PAGE** buttons to view the 3/4 display.
  - The display looks similar to the following.

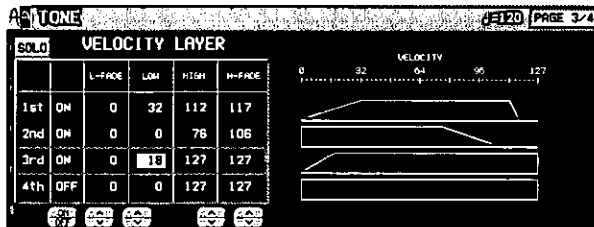


- Use the buttons to the left of the display to select a tone (1st, 2nd, 3rd or 4th).
- Use the L-FADE  $\wedge$  and  $\vee$  buttons and the LOW  $\wedge$  and  $\vee$  buttons to define the *pp* sound output area for the lower range.
- Use the HIGH  $\wedge$  and  $\vee$  buttons and the H-FADE  $\wedge$  and  $\vee$  buttons to define the *ff* sound output area for the higher range.
  - By overlapping the L-FADE and H-FADE curves of each different tone, you can change the way the tone sounds relative to how hard or softly the keyboard is played.
- Repeat steps 2 to 4 for the other tones, as desired.

## TONE DYNAMICS

You can adjust the settings so that a different sound (tone) is output for each tone depending on the velocity (how hard the keys are played).

- Use the **PAGE** buttons to view the 4/4 display.
  - The display looks similar to the following.

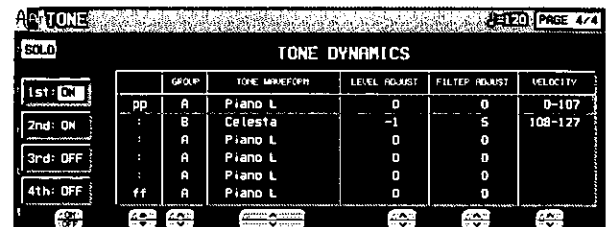

- Use the buttons to the left of the display to select a tone.
- Use the  $\blacktriangle$  and  $\blacktriangledown$  buttons to select the column for the function you wish to adjust.
- Select the tone waveform.
  - Use the GROUP  $\wedge$  and  $\vee$  buttons to select the sound group. Use the TONE WAVEFORM  $\wedge$  and  $\vee$  buttons to select the waveform.
- Use the LEVEL ADJUST  $\wedge$  and  $\vee$  buttons to adjust the volume. Use the FILTER ADJUST  $\wedge$  and  $\vee$  buttons to set the sound.
- Use the VELOCITY  $\wedge$  and  $\vee$  buttons to specify the velocity range.
  - When the upper limit of a waveform is set to 127, no more waveforms can be added.
- Repeat steps 3 to 6 to edit the other waveforms, as desired.
- Repeat steps 2 to 7 for the other tones, as desired.


# Pitch Edit

Adjust the settings related to the pitch of the sound.

## KEY SHIFT & DETUNE

1. On the SOUND EDIT menu display, select PITCH.

- The display looks similar to the following.

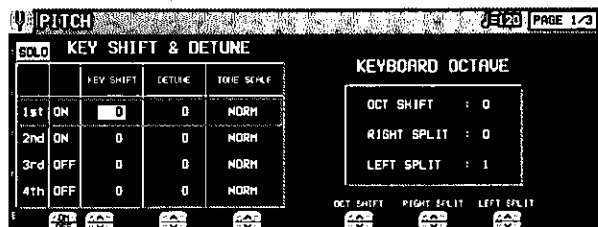

2. Use the buttons to the left of the display to select a tone (1st, 2nd, 3rd or 4th).

3. Use the KEY SHIFT  $\wedge$  and  $\vee$  buttons to specify the output pitch.

- Units are in semitones.

4. Use the DETUNE  $\wedge$  and  $\vee$  buttons to fine-adjust the pitch.

- Slight differences in the DETUNE values between the tones add fullness to the sound.

5. Use the TONE SCALE  $\wedge$  and  $\vee$  buttons to select the type of scale (NORM, 1/2, 1/4, 1/8, 1/16, 1/32, 1/64, FIX).

- NORM is the normal scale type. For example, when 1/2 is selected, a difference in pitch between one key and the adjacent key becomes half the normal pitch difference. When FIX is selected, the pitch is the same regardless of which key is played.

6. Use the OCT SHIFT  $\wedge$  and  $\vee$  buttons to set the octave of the sound.

7. Use the RIGHT SPLIT  $\wedge$  and  $\vee$  buttons to set the octave of the right part when the keyboard is split.

8. Use the LEFT SPLIT  $\wedge$  and  $\vee$  buttons to set the octave of the left part when the keyboard is split.


9. Repeat steps 2 to 8 for the other tones, as desired.

## PITCH ENVELOPE

Specify how the pitch changes over time, from the time the key is played to the time the sound dies out.

1. Use the PAGE buttons to view the 2/3 display.

- The display looks similar to the following.

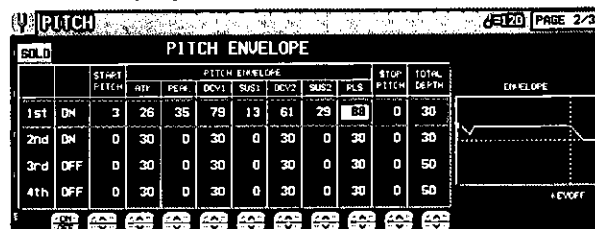

2. Use the buttons to the left of the display to select a tone.

3. Adjust the settings for the pitch change envelope.


- Use the buttons below the display to set the corresponding values. The envelope is created on the display as you input the settings.
- Use the TOTAL DEPTH  $\wedge$  and  $\vee$  buttons to specify the maximum level.
- Use the START PITCH  $\wedge$  and  $\vee$  buttons to set the start point. Use the STOP PITCH  $\wedge$  and  $\vee$  buttons to set the stop point.

4. Repeat steps 2 and 3 for the other tones, as desired.

## PITCH ENVELOPE TOUCH & KEY FOLLOW

Specify how the pitch envelope changes in relation to note pitch.

1. Use the **PAGE** buttons to view the 3/3 display.

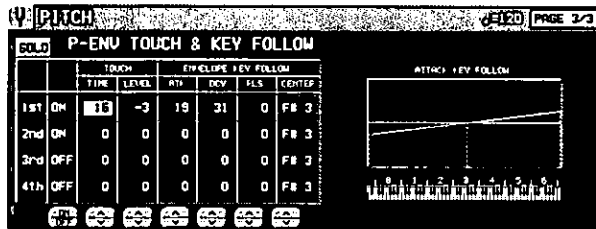

2. Use the buttons to the left of the display to select a tone.

3. Use the TOUCH  $\wedge$  and  $\vee$  buttons to change the respective touch settings.

- Use the TIME  $\wedge$  and  $\vee$  buttons to specify the time change depending on touch. Use the LEVEL  $\wedge$  and  $\vee$  buttons to specify the pitch change level depending on touch.
- At a - setting, the softer the keys are pressed, the greater the change. At a + setting, the harder the keys are pressed, the greater the change.

4. Change the key follow settings for the ATTACK (ATK), DECAY (DCY) and RELEASE (RLS).

- Use the  $\wedge$  and  $\vee$  buttons corresponding to the ENVELOPE KEY FOLLOW attributes to adjust the settings. Use the CENTER  $\wedge$  and  $\vee$  buttons to select the center of the bend direction.


## Filter Edit

Make major changes to the sound by eliminating specific frequency ranges.

### FILTER & EQUALIZER

1. On the SOUND EDIT menu, select FILTER.

- The display looks similar to the following.

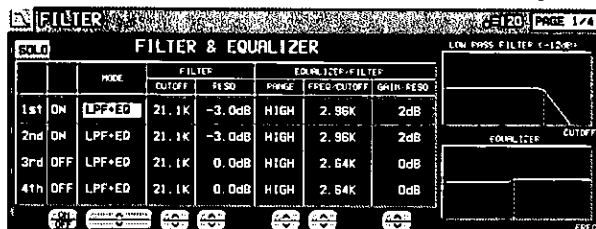

2. Use the buttons to the left of the display to select a tone.

3. Use the MODE button to select the filter mode.

**LPF(6)+EQ** (low-pass filter + equalizer)

Signals higher than the cut-off frequency are cut. Normal sounds are softened.

**HPF(6)+EQ** (high-pass filter + equalizer)

Signals lower than the cut-off frequency are cut. Normal sounds are sharpened.

**LPF24** (low-pass filter 24)

A stronger low-pass filter than LPF+EQ.

**HPF24** (high-pass filter 24)

A stronger high-pass filter than HPF+EQ.

**BPF** (band-pass filter)

Cuts off signals that are not within in the area between the two specified CUTOFF frequencies.

- For this mode, adjust the settings on the EQUALIZER/FILTER side as well.

**THRU**

No filter effect is applied.

4. Use the CUTOFF  $\wedge$  and  $\vee$  buttons to set the frequency range which is cut by the filter.
5. Use the RESO  $\wedge$  and  $\vee$  buttons to specify the resonance value (dB).
  - Resonance is effect which adds character to the sound by emphasizing the harmonic components of frequencies close to the cut-off frequency.

**<Equalizer>**

For LPF(6)+EQ/HPF(6)+EQ filters, the sound quality can be modified by the EQUALIZER.

**RANGE**

Select the setting range (HIGH or LOW).

**FREQ**

Set the standard frequency.

**GAIN**

Set the level increase or decrease from the value set for FREQ (dB).

6. Repeat steps 2 to 5 for each tone, as desired.

**TOUCH & KEY FOLLOW**

Adjust how the filter is applied relative to touch and pitch.

1. Use the PAGE buttons to view the 2/4 display.
  - The display looks similar to the following.



2. Use the buttons to the left of the display to select a tone.

3. Use the FILTER TOUCH  $\wedge$  and  $\vee$  buttons to modify how the respective filters are applied relative to key touch.
  - Use the CUT OFF  $\wedge$  and  $\vee$  buttons to specify the amount of change in the cut-off frequency. Use the CURVE  $\wedge$  and  $\vee$  buttons to specify the curve of change. Use the RESO  $\wedge$  and  $\vee$  buttons to specify the degree of change in the resonance value.

- Use the SLOPE  $\wedge$  and  $\vee$  buttons to adjust the bend slope. Use the RANGE  $\wedge$  and  $\vee$  buttons to specify the pitch range.

4. Use the FILTER KEY FOLLOW  $\wedge$  and  $\vee$  buttons to modify how the respective filters are applied relative to note pitch.


- Use the SLOPE  $\wedge$  and  $\vee$  buttons to adjust the bend slope. Use the RANGE  $\wedge$  and  $\vee$  buttons to specify the pitch range.

5. Repeat steps 2 to 4 for the other tones, as desired.

**FILTER ENVELOPE**

Specify how the filter changes over time, from the time the key is played to the time the sound dies out.

1. Use the PAGE buttons view the 3/4 display.
  - The display looks similar to the following.

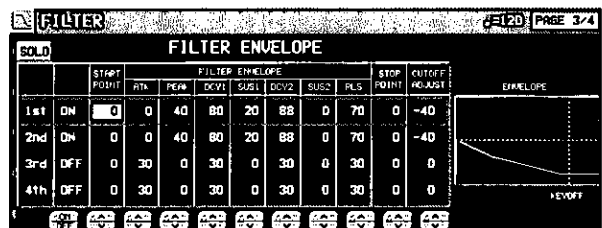

2. Use the buttons to the left of the display to select a tone.

3. Use the FILTER ENVELOPE  $\wedge$  and  $\vee$  buttons to modify the respective filter envelopes.

- Use the buttons below the display to adjust the respective settings.
- You can use the CUTOFF ADJUST buttons to set the total upper and lower settings, the START POINT buttons to set the start point, and the STOP POINT buttons to set the stop point.


4. Repeat steps 2 and 3 for the other tones, as desired.

Sound Edit

## FILTER ENVELOPE TOUCH & KEY FOLLOW

Specify how the filter envelope (curve) changes relative to touch or note pitch.

- Use the **PAGE** buttons to view the 4/4 display.
  - The display looks similar to the following.

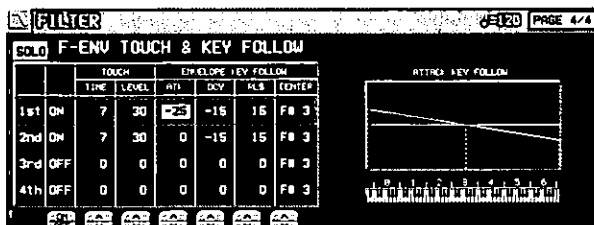

- Use the buttons to the left of the display to select a tone.

- Use the TOUCH  $\wedge$  and  $\vee$  buttons to modify how the respective filter envelopes change relative to touch.
  - Use the TIME  $\wedge$  and  $\vee$  buttons to specify the time change, and the LEVEL  $\wedge$  and  $\vee$  buttons to specify the level, relative to touch.
  - At a - setting, the softer the keys are played, the greater the change. At a + setting, the harder the keys are played, the greater the change.


- Use the ENVELOPE KEY FOLLOW  $\wedge$  and  $\vee$  buttons to modify how the respective filter envelopes change relative to note pitch.
  - Adjust the respective slopes for attack (ATK), decay (DCY) and release (RLS). Use the CENTER  $\wedge$  and  $\vee$  buttons to specify the center of the bend slope by note name.

## Amplitude Edit

Adjust the settings related to the volume of the sound.

### LEVEL

- On the SOUND EDIT menu, select **AMPLITUDE**.
  - The display looks similar to the following.

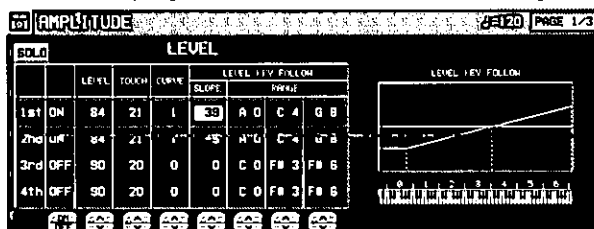

- Use the buttons to the left of the display to select a tone.
- Use the LEVEL  $\wedge$  and  $\vee$  buttons to select the volume.
- Use the TOUCH  $\wedge$  and  $\vee$  buttons to set the amount of volume change in relation to how hard the keyboard is played.
  - At a - value, the softer the keyboard is played, the louder the sound. At a + value, the harder the keyboard is played, the louder the sound.
- Use the CURVE  $\wedge$  and  $\vee$  buttons to select the type of volume curve depending on touch.

- Use the LEVEL KEY FOLLOW  $\wedge$  and  $\vee$  buttons to change the respective key follow settings.
  - Use the SLOPE  $\wedge$  and  $\vee$  buttons to adjust the bend slope. Use the RANGE  $\wedge$  and  $\vee$  buttons to specify the pitch range by note name.


- Repeat steps 2 to 6 for the other tones, as desired.



## ENVELOPE

Specify how the volume changes over time, from the time the key is played to the time the sound dies out.

- Use the **PAGE** buttons to view the 2/3 display.
  - The display looks similar to the following.

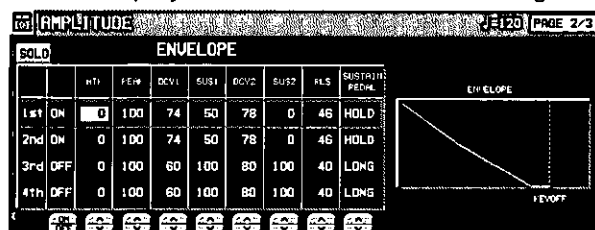

- Use the buttons to the left of the display to select a tone.
- Adjust the settings for the volume envelope.
  - Use the buttons below the display to set the corresponding values. The envelope is created on the display as you input the settings.
  - Use the **SUSTAIN PEDAL**  $\wedge$  and  $\vee$  buttons to select the type of sustain.

### LONG:

Extend the release time of the sound.

### HOLD:


Maintain the key-pressed condition.

- Repeat steps 2 and 3 for the other tones, as desired.

## ENVELOPE TOUCH & KEY FOLLOW

Specify how the volume changes relative to touch or note pitch over time.

- Use the **PAGE** buttons to view the 3/3 display.

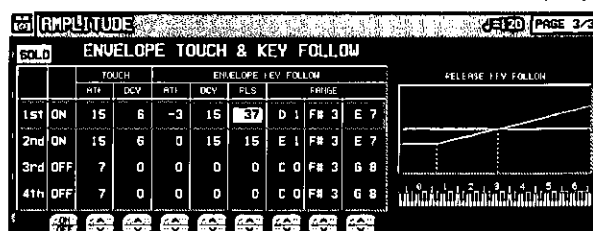

- Use the buttons to the left of the display to select a tone.
- Use the **TOUCH**  $\wedge$  and  $\vee$  buttons to change the touch settings.
  - Use the **ATK**  $\wedge$  and  $\vee$  buttons to specify the **ATTACK** time change depending on touch. Use the **DCY**  $\wedge$  and  $\vee$  buttons to specify the **DECAY** time change depending on touch.
  - At a - setting, the softer the keys are pressed, the greater the change. At a + setting, the harder the keys are pressed, the greater the change.
- Change the key follow settings for the **AT-TACK**, **DECAY** and **RELEASE**.
  - Use the  $\wedge$  and  $\vee$  buttons corresponding to the **ENVELOPE KEY FOLLOW** attributes to adjust the settings. Use the **RANGE** buttons to specify the keyboard range.

# LFO (cyclic modulation) Edit

LFO can be applied to the pitch, amplitude, filter and/or pan to produce a cyclic modulation of the sound.

- Twelve LFO groups can be used.

## LFO

1. On the SOUND EDIT MENU display, select LFO.

- The display looks similar to the following.

		LFO SETTINGS				TONE SETTINGS				
	SELECT	SPEED	KEYSYNC	PARKEY(ED)	CONNECTION	PHASE	WVC	DELAY	DEPTH	TOUCH
1st	ON	LFO 1	23	OFF	---	---	SIN	15	0	0
2nd	ON	LFO 1	23	OFF	---	---	SIN	15	0	0
3rd	OFF	LFO 1	23	OFF	---	---	SIN	15	0	0
4th	OFF	LFO 1	23	OFF	---	---	SIN	15	0	0

2. Use the **PAGE** buttons to select the respective characteristics.

- PAGE 1/4: PITCH (vibrato effect)
- PAGE 2/4: AMP (tremolo effect)
- PAGE 3/4: FILTER (wah-wah effect)
- PAGE 4/4: PAN (auto pan effect)

3. Use the buttons to the left of the display to select a tone.

4. Use the LFO SETTINGS  $\wedge$  and  $\vee$  buttons to adjust the respective assigned LFO's.

- LFO which share the same number on other displays are also changed with this adjustment.

### SELECT

Select the assigned LFO number (1 to 12)

### SPEED

Adjust the modulation speed.

### KEYSYNC

When playing more than one note, specify whether the LFO starts or not each time a key is pressed (ON/OFF).

- When KEYSYNC is set to ON: if, while playing one note, you play a second note, the LFO is applied to the second note as well.

### PHASE

Degree of phase change.

5. Use the CONNECTION ON/OFF buttons to specify whether or not the LFO is applied to the tone.

- An arrow mark indicates that the LFO is applied.

6. Use the TONE SETTINGS  $\wedge$  and  $\vee$  buttons to adjust the respective parameters.

### PHASE

Phase

- A + indicates normal phase, and a - indicates an inverted phase.

### WAVE

Modulate the waveform.

- SIN: Sine wave
- TRI: Triangle wave
- SQR: Square wave
- SAW: Saw tooth wave

### DELAY

Delay time is the time elapsed from when the keyboard key is pressed until the modulation begins.

### DEPTH

Modulation depth

### TOUCH

Degree of modulation change in relation to touch

7. Repeat steps 2 to 6 for the other tones, as desired.


- You can press the OVERVIEW button to confirm the status of each LFO setting.

# Effect Edit

These are settings related to the various effects applied to your edited sound.

## EFFECT


1. On the SOUND EDIT menu display, select EFFECT.
  - The display looks similar to the following.

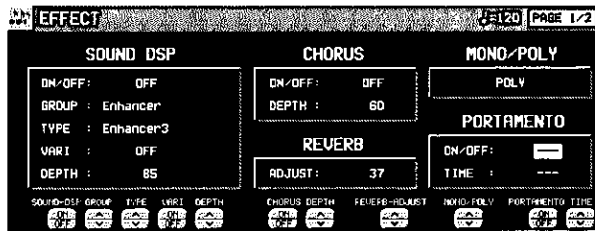

2. Use the respective SOUND DSP ^ and v buttons to specify the effect type and how the SOUND DSP is applied.
3. Use the respective CHORUS ^ and v buttons to specify how the CHORUS is applied.
4. Use the REVERB ADJUST ^ and v buttons to specify how the REVERB is applied.
5. Use the MONO/POLY ^ and v buttons to select the sound output mode.
6. MONO: Use the PORTAMENTO ON/OFF buttons set portamento to on or off. Use the TIME ^ and v buttons to set the portamento time.

## DIGITAL EFFECT

1. Use the PAGE buttons to view the 2/2 display.
  - The display looks similar to the following.
  - The display for the effect type which is best-suited for the sound currently being edited is selected.

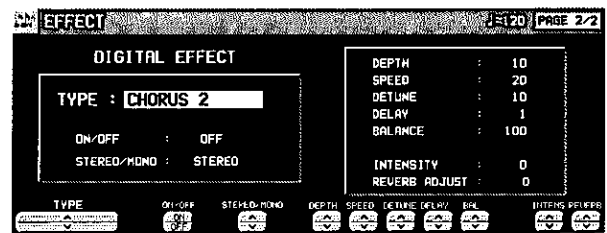

2. Use the TYPE ^ and v buttons to select the type of effect.

### <ON/OFF button>

Specify whether the DIGITAL EFFECT button turns on or off when the sound is selected. When set to ON, the DIGITAL EFFECT button turns on automatically when the sound is selected.

### <STEREO/MONO button>

Select stereo (STEREO) or monaural (MONO) output of the effect.

3. Use the buttons along the bottom of the display to select the attribute you wish to adjust.

- When the type is changed, the parameters revert to the factory defaults.

Sound Edit


# Controller Edit

Specify how operation of the controllers, such as the wheels, etc., affects the sound.

## CONTROLLER

1. On the SOUND EDIT menu display, select CONTROLLER.

- The display looks similar to the following.

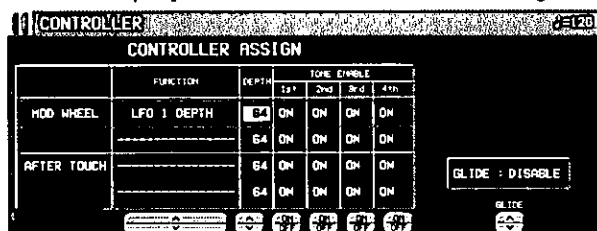

2. Use the buttons to the left of the display to select a controller.

- Two functions can be assigned to each controller.

3. Use the FUNCTION  $\wedge$  and  $\vee$  buttons to select a function for the controller.

4. Use the DEPTH  $\wedge$  and  $\vee$  buttons to set the depth of the function applied by the controller.

5. Use the TONE ENABLE ON/OFF  $\wedge$  and  $\vee$  buttons to set the controller to on or off for each tone.

- When set to INV, the effect is applied inversely.

6. Repeat steps 2 to 5 for the other controllers, as desired.

7. Use the GLIDE  $\wedge$  and  $\vee$  buttons to select whether or not the glide effect is active.

ENABLE:

The glide effect is enabled.

DISABLE:

The glide effect is disabled.

- To assigning a function to the foot switch, refer to page 159.


# Store the new sound

The **MEMORY** button in the **SOUND GROUP** section accesses memory banks reserved for the sounds you create with the SOUND EDIT. You can store up to 40 original sounds then select the sounds just like the other sounds in the **SOUND GROUP**.

## Procedure


1. When you have edited the sound to just the way you like it, on the SOUND EDIT menu display press the WRITE button.

- The display changes to the MEMORY WRITE display.

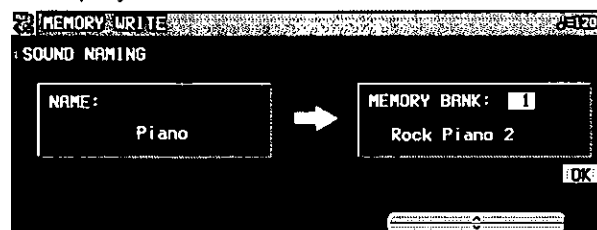

2. To assign a name to your new sound, press the SOUND NAMING button.

- If you do not assign a name to your sound, the name becomes the same as the original sound from which you started. In this case, skip to step 5.
- The display changes to the SOUND NAMING display.

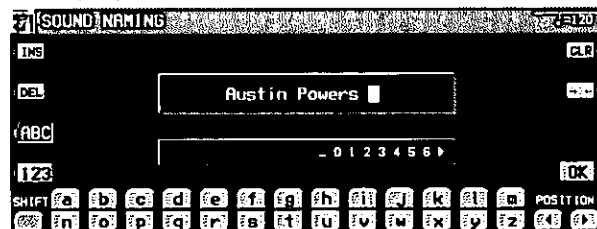

3. Use the buttons below the display to assign a name.
  - Press the ABC button to enter alphabetical characters. While the SHIFT button is pressed, upper case letters are entered.
  - Press the 123 button to enter numbers, etc. While the SHIFT button is pressed, you can enter symbols.
  - Press the POSITION button to move the cursor.
  - You can also use the **TEMPO/PROGRAM** dial to select the characters.
  - Press the INS button to enter a space at the cursor position.
  - Press the DEL button to erase the character at the cursor position.
  - Press the CLR button to erase the entire name.
  - Press the →← button to center the name.
4. When you have finished typing the name, press the OK button.
  - The display returns to the MEMORY WRITE display.
5. Use the ^ and v buttons to select the MEMORY number in which to store the new sound (1–40).
6. Press the OK button.
  - The new sound is stored, and "COMPLETED!" is shown on the display.
  - The SOUND EDIT mode is turned off.
  - The stored sound memories can be saved on a disk for recall at a later time. (Refer to page 126.)

## Select a new sound

You can select your original sound just like the other sounds in the **SOUND GROUP**.


1. In the **SOUND GROUP** section, press the **MEMORY** button.



- The list of sounds is shown on the display.
2. Select the desired sound from the list on the display.

# Part X Control

## Outline of Control functions

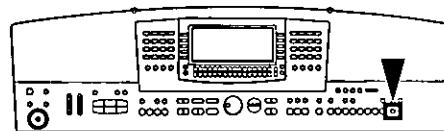


Various settings related to the operation of this instrument are adjusted with the CONTROL functions.

1. Press the **PROGRAM MENU** button to turn it on.



- The display looks similar to the following.

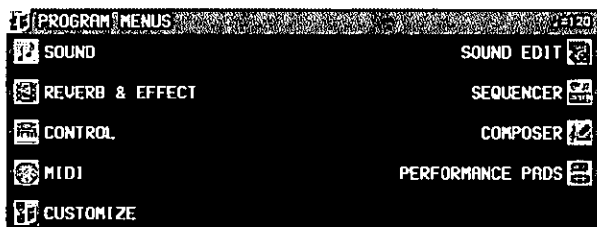

2. Select **CONTROL**.

- The display looks similar to the following.



3. Select a function.

### INITIAL

Return the settings and memories to the factory-preset status. (Refer to page 176.)

### OVERALL TOUCH SENSITIVITY (page 159)

Adjust the amount of keyboard touch response.

### FOOT CONTROLLERS (page 159)

Assign functions to the separately sold Foot Switch and Foot Controller, etc.

### PANEL MEMORY MODE

Define which panel settings are stored when the **PANEL MEMORY** is used. (Refer to page 65.)

### MUSIC STYLE ARRANGER MODE

Define which panel settings change by pressing a **FILL IN** button when the **MUSIC STYLE ARRANGER** is used. (Refer to page 62.)

### FADE IN/OUT SETTING

Settings related to the **FADE IN/FADE OUT**. (Refer to page 57.)

3. Follow the procedure to adjust the settings.


- While you are adjusting the settings, when the **TEMPO/PROGRAM** indicator is lit, it indicates that the **TEMPO/PROGRAM** is available for setting the current function.

4. When you have finished setting the functions, press the **PROGRAM MENU** button to turn it off.

## Overall Touch Sensitivity

This instrument features INITIAL TOUCH (the volume, for example, changes depending on how hard the keyboard is played) and AFTER TOUCH (effects are added by pressing the keys harder).

1. On the CONTROL MENU display, select OVERALL TOUCH SENSITIVITY.
  - The display looks similar to the following.

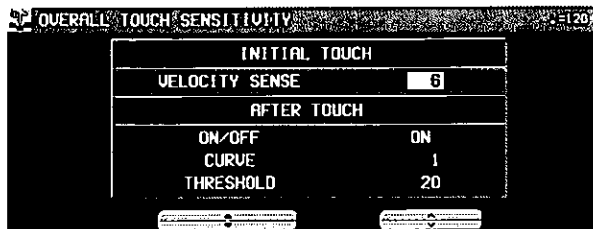

2. Use the ▲ and ▼ buttons to select the function.

### INITIAL TOUCH

#### VELOCITY SENSE:

Adjust the amount of keyboard touch response (0 to 9).

- When set to 0, initial touch sensitivity is turned off.

### AFTER TOUCH

#### ON/OFF:

Enable or disable the aftertouch effect for the keyboard (ON/OFF).

#### CURVE:

Adjust the curve of the sound change relative to how hard the keys are pressed (1 to 10).

#### THRESHOLD:

Specify how hard a key must be pressed to produce the effect (1 to 127).


- The higher the value, the hard the key must be pressed to produce the effect.

3. Use the ▲ and ▼ buttons to change the settings.

## Foot Controllers

If an optional Foot Switch and/or Expression Pedal (sold separately) is connected, you can assign it one of several functions, allowing convenient and fast control during your performance.

1. On the CONTROL MENU display, select FOOT CONTROLLERS.
  - The display looks similar to the following.

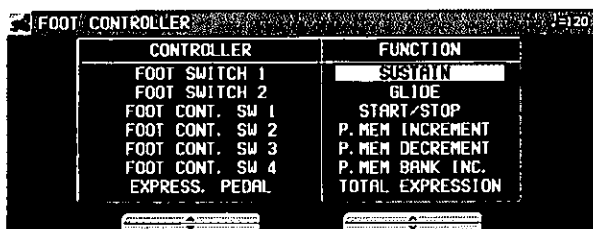

2. Use the CONTROLLER ▲ and ▼ buttons to select a switch name, and the FUNCTION ▲ and ▼ buttons to select its function.

### ■ FOOT SWITCH

#### OFF:

No function is assigned.

#### P. MEM INCREMENT:

Increment the **PANEL MEMORY** number selection by 1.

#### P. MEM DECREMENT:

Decrement the **PANEL MEMORY** number selection by 1.

#### P. MEM BANK INC.:

Change to the next **PANEL MEMORY** bank in order.

#### P. MEM BANK DEC.:

Change to the previous **PANEL MEMORY** bank in order.

**PANEL MEMORY 1 to 8:**

The specified **PANEL MEMORY** number is turned on.

**P. MEM INC.+DEC.:**

Press the switch to increment the **PANEL MEMORY** number selection by one; release the switch to return to the previous number.

**START/STOP:**

**START/STOP** button on/off

**FILL IN 1:**

**FILL IN 1** button on

**FILL IN 2:**

**FILL IN 2** button on

**INTRO & ENDING 1:**

**INTRO & ENDING 1** button on

**INTRO & ENDING 2:**

**INTRO & ENDING 2** button on

**SUSTAIN:**

**SUSTAIN** button on/off

**SOSTENUTO:**

Sostenuto on/off

**SOFT:**

Soft on/off

**GLIDE:**

Glide on/off (The glide effect "bends" the pitch down by about one semitone.)

**TECHNI-CHORD:**

**TECHNI-CHORD** button on/off

**DIGITAL EFFECT:**

**DIGITAL EFFECT** button on/off

**SOUND DSP:**

**SOUND DSP** button on/off

**SOUND DSP VARI:**

**SOUND DSP VARIATION** button on/off

**ROTARY SLOW/FAST:**

**TREMOLO SLOW/FAST** of the **DIGITAL DRAWBAR**

**MIC REVERB & EFF.:**

**MIC** effect on/off

**PUNCH RECORD:**

Punch in/punch out

**APC HOLD:**

Memorize the chord specified for the automatic accompaniment.

**FADE IN:**

**FADE IN** button on/off

**FADE OUT:**

**FADE OUT** button on/off

**PAD 1 to 6:**

Specified **PERFORMANCE PADS** on

**TAP TEMPO:**

**TAP TEMPO** button on.

■ **EXPRESS. PEDAL**

**TOTAL EXPRESSION:**

The volume for all parts changes when the expression pedal is operated.

**PART EXPRESSION:**

The volume changes only for parts for which **PART EXP PEDAL** was turned ON on the **PART SETTING** display for **SOUND**. (Refer to page 136.)

- The initialized settings are as follows:


FOOT SWITCH 1	SUSTAIN
FOOT SWITCH 2	GLIDE
FOOT CONT. SW 1	START/STOP
FOOT CONT. SW 2	P.MEM INCREMENT
FOOT CONT. SW 3	P.MEM DECREMENT
FOOT CONT. SW 4	P.MEM BANK INC.
EXPRESS. PEDAL	TOTAL EXPRESSION

- For connection of a Foot Switch, etc., refer to page 178.



# Part XI Customize

## Outline of Customize functions

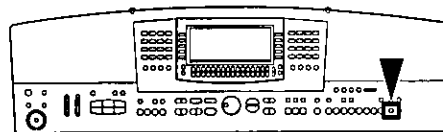


Many of this instrument's settings can be customized for maximum playing convenience and ease.

1. Press the **PROGRAM MENU** button to turn it on.



- The display looks similar to the following.

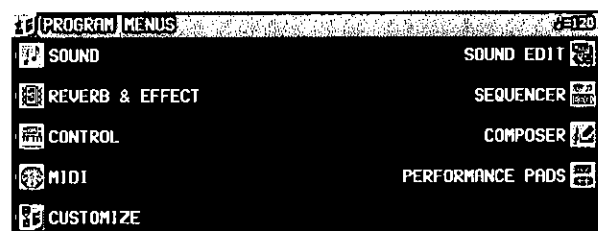

2. Select **CUSTOMIZE**.

- The display looks similar to the following.



- This display can also be accessed by pressing and holding the **FAVORITES** button for a few seconds.

3. Select a function.

### HOME PAGE SETTING (page 162)

Modify the layout of the normal display (home page).

### FAVORITES SETTING

**FAVORITES** display settings (page 30)

### DISPLAY TIME OUT (page 163)

Adjust settings related to the screen display.

### WALLPAPER SETTING (page 164)

Change the background (wallpaper) of the display.

### DATA PROTECTION (page 164)

Specify when you don't want the data to change in cases where it normally does, for instance during disk load and when automatic settings are made, etc.

### CUSTOM PANEL MODE (page 165)

Set the range of settings that are affected when you recall the panel settings with the **CUSTOM PANEL** button.

### MIDI SETTING LOAD OPTION (page 165)

Specify how MIDI data is handled when data is loaded from a disk.

### LANGUAGE SETTING

Select your preferred language for the displayed messages.

- The display is different, but the operation is the same as for **HELP** (page 30).

### DISK PREFERENCES

Automatic display when a floppy disk is inserted (page 132).

4. Follow the procedure to adjust the settings.

- While you are adjusting the settings, when the **TEMPO/PROGRAM** indicator is lit, it indicates that the **TEMPO/PROGRAM** is available for setting the current function.


5. When you have finished setting the functions, press the **PROGRAM MENU** button to turn it off.

# Home Page Setting

Arrange the contents of the normal display to suit your tastes.

1. On the CUSTOMIZE MENU display, select HOMEPAGE.

- The display looks similar to the following.

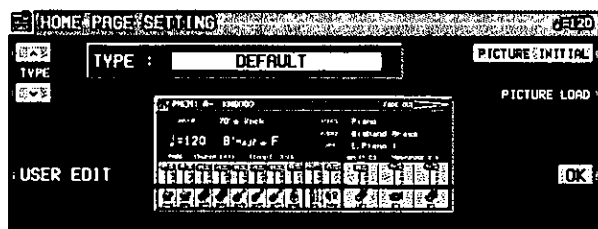

2. Use the TYPE ^ and v buttons to select a type.

- Select from the following types.

**DEFAULT:**

The initialized settings.

**DEFAULT WITH PICTURE:**

Bitmap data that you downloaded with PICTURE LOAD can be positioned in the middle of your screen.

**PRESET 1- 3:**

Preset types.

**USER:**

Made with the USER EDIT function.

- The selected type is previewed in the middle of the display.

3. Press the OK button.

## ■ PICTURE LOAD

Download selected bitmap (.BMP) data.

1. Insert a disk with the desired bitmap data into the disk drive.

2. Press the PICTURE LOAD button.

3. Select the .BMP file you wish to load.

4. Press the LOAD button.

- The bitmap file is downloaded, and the display returns to the HOMEPAGE setting display.
- To return to the initialized bitmap data, press the PICTURE INITIAL button.
- Bitmap data of 2, 16 or 256 colors and 160 × 100 pixels can be loaded.
- In some cases the data may not load correctly, depending on the software with which it was created.

## ■ USER EDIT

By arranging the various display parts, you can create your own USER type display.

1. Press the USER EDIT button.

- The display looks similar to the following.



2. Use the ITEM ^ and v buttons to select the part you wish to position.

3. While looking at the preview display, use the CURSOR button to specify a location.

4. Press the SET button to set the part at the specified location.

- If you select a part which has already been positioned, you can press the CLEAR button to delete it.


5. Repeat steps 2 and 4 to create your display.

6. Press the WRITE button.

# Display Time Out

Numerous message displays and setting displays conveniently guide you through the operation steps of this instrument. Once you become familiar with the operation of your instrument, however, you may wish to shorten or even suspend the display time of the message displays.

1. On the CUSTOMIZE display, select DISPLAY TIME OUT.
  - The display looks similar to the following.

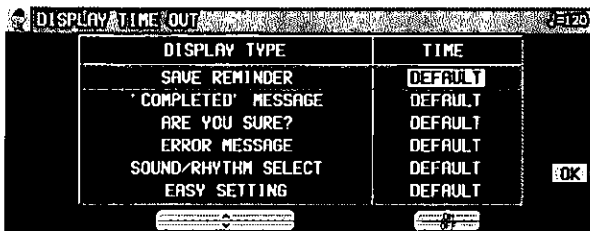

2. Use the DISPLAY TYPE  $\wedge$  and  $\vee$  buttons to select the function.

#### SAVE REMINDER:

Reminder display (OFF, DEFAULT, HOLD, 1 to 10 sec)

#### 'COMPLETED' MESSAGE:

Operation successfully completed (OFF, DEFAULT, HOLD, 1 to 10 sec)

#### ARE YOU SURE?:

Display requires user action for confirmation (OFF, DEFAULT, HOLD)

#### ERROR MESSAGE:

Error notification display (DEFAULT, HOLD, 1 to 10 sec)

#### SOUND/RHYTHM SELECT:

Sound/rhythm and **PERFORMANCE PADS** BANK selection display (DEFAULT, HOLD, 1 to 10 sec)

#### EASY SETTING:


Display time when the setting display was accessed pressing and holding a panel button (DEFAULT, HOLD, 1 to 10 sec)

3. Use the TIME  $\wedge$  and  $\vee$  buttons to change the setting.
  4. Press the OK button.
    - Some messages may be displayed even if they are set to OFF.
- When set the OFF, the display will not appear.
  - When set to DEFAULT, the display time returns to the initialized setting.
  - You can specify 1 to 10 seconds for the display time.
  - When set to HOLD, the **DISPLAY HOLD** automatically turns on.

# Wallpaper Setting

You can change the background pattern (WALLPAPER) on your display.

1. On the CUSTOMIZE MENU display, select WALLPAPER SETTING.
  - The display looks similar to the following.

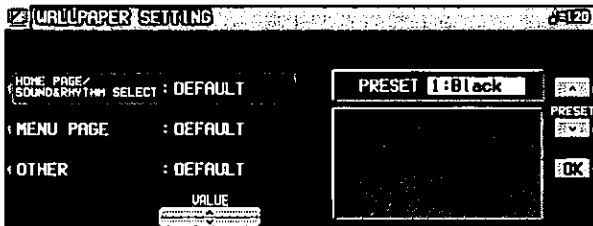

2. Use the buttons to the left of the display to select a display category.

**HOME PAGE/SOUND & RHYTHM SELECT:**  
The standard display and the displays to select the sound and rhythm.

**MENU PAGE:**  
MENU display

**OTHER:**  
Displays different from the above.

3. Use the VALUE  $\wedge$  and  $\vee$  buttons to select a mode.

**DEFAULT:**  
Select the initialized settings.

**PRESET:**  
Settings selected with PRESET.
 


- Use the PRESET  $\wedge$  and  $\vee$  buttons to select a WALLPAPER. (The selected WALLPAPER is shown.)

4. Press the OK button.

# Data Protection

Data which you don't want to change but which is normally overwritten during disk load, song change, or the automatic setting functions, etc. can be protected from accidental overwriting.

1. In the CUSTOMIZE MENU display, select DATA PROTECTION.
  - The display looks similar to the following.

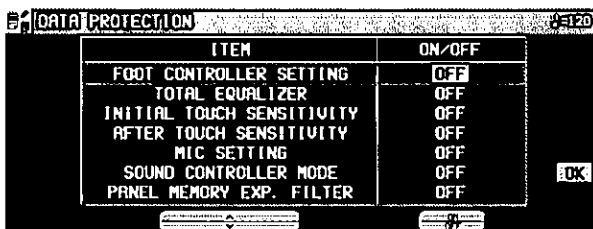

2. Use the ITEM  $\wedge$  and  $\vee$  buttons to select an item.

3. Use the ON/OFF button to select ON or OFF.

**ON:**  
The data is protected and will not be changed.

**OFF:**  
The data is not retained.

4. Repeat steps 2 and 3 for each item.

5. Press the OK button.

## Custom Panel Mode

Specify the range of settings which are recalled by the **CUSTOM PANEL** button.

1. On the CUSTOMIZE MENU display, select **CUSTOM PANEL MODE**.
  - The display looks similar to the following.



2. Use the buttons left to the display to select a mode.

### PANEL MEMORY:

The recalled data is the same range as the normal PANEL MEMORY.

### ALL PANEL:


All the panel settings are recalled (same range as CURRENT PANEL data during disk load/save).

3. Press the OK button.

## MIDI Setting Load Option

Specify how MIDI data is handled when data is loaded from a disk.

1. On the CUSTOMIZE MENU display, select **MIDI SETTING LOAD OPTION**.
  - The display looks similar to the following.

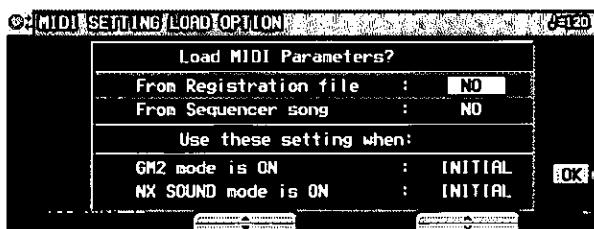

2. Use the ▲ and ▼ buttons to select an item.

### ■ Load MIDI Parameters?

From Registration file:

Specify whether MIDI data is also loaded when panel data is loaded (NO/YES).

From Sequencer Song:

Specify whether MIDI data is loaded or changed when **SEQUENCER** data is loaded or when the **SONG** is changed by the **SEQUENCER SONG SELECT**, **SONG COPY** or **TRACK ASSIGN** (NO/YES).

- The MIDI settings are always stored at the start of each recorded **SEQUENCER SONG** and when **PANEL WRITE** is executed. In the initialized state, the MIDI settings are not loaded even when the **SONG** is changed. However, changing this setting to YES will cause the stored MIDI settings to also load in these cases.

### ■ Use these settings when:

GM2 mode ON:

Specify how the MIDI settings of this instrument are affected when GM2 is on.

- Select from INITIAL, (initialized settings), PRESET (MIDI PRESETS) 1, 2 and 3, and KEEP (the settings do not change).

NX SOUND mode ON:

Specify how the MIDI settings of this instrument are affected when NX SOUND is ON.

- Select from INITIAL, (initialized settings), PRESET (MIDI PRESETS) 1, 2 and 3, and KEEP (the settings do not change).

3. Use the ^ and v buttons to change the setting.

4. Press the OK button.


# Part XII MIDI

## What is MIDI?

MIDI (Musical Instrument Digital Interface) is the international standard for digital communication of electronic musical instrument data. This means that any equipment which has a MIDI terminal—such as electronic musical instruments and personal computers—can easily exchange digital data with other MIDI equipment without resorting to complicated conversions or connections.

### MIDI terminals

(On the rear panel)

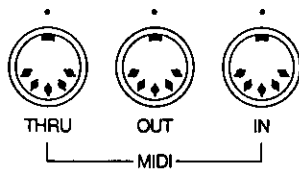

#### IN:

The terminal by which this instrument receives data from other equipment.

#### OUT:

The terminal that transmits data from this instrument to other equipment.


#### THRU:

The terminal that transfers data from the IN terminal directly.


- For these connections, use a commercially available MIDI cable.
- Exchange of normal data through these terminals is enabled only when the **COMPUTER** terminal switch is set to **MIDI**. (Refer to page 178.)

### Connection examples


- To generate sound from a connected instrument by playing this instrument

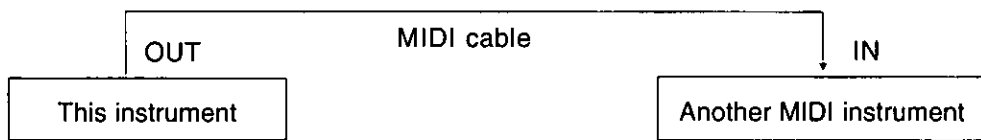

- To generate sound from this instrument by operating a connected instrument

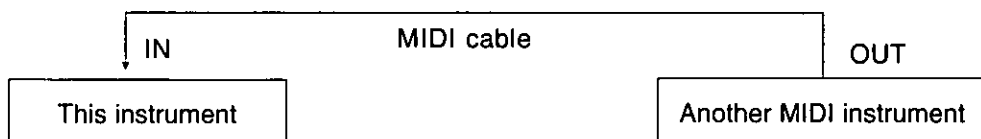

- To connect with a MIDI sequencer

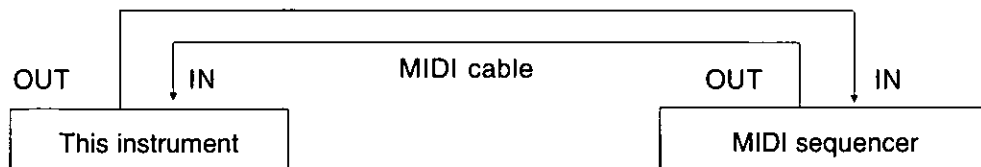

## MIDI channels

Many different kinds of performance data are sent using just one MIDI cable. This is possible because MIDI signals are sent and received through 16 different "basic channels" (numbered 1 to 16). In order for the exchange of data to take place, the channels on the transmission side must match the channels on the receiving side. This characteristic also makes it possible to link multiple sound generators and to control each by matching specific channels.

---

## The following kinds of data can be transmitted/received.

### ■ NOTE data

This is the most basic kind of MIDI data which is exchanged, and is used to specify which keys are played and how hard they are played.

NOTE NUMBER: Number specifying which key is played.

NOTE ON: Specifies that a key is played.

NOTE OFF: Specifies that a key is released.

VELOCITY: Specifies how hard a key is struck.

- MIDI notes are assigned numbers from 0 to 127, with middle C (C3) as 60. Note pitches are in semitone increments, with the higher numbers assigned to the higher pitches.

### ■ PROGRAM CHANGE

This is sound change data. When a different sound is selected on the transmitting instrument, the sound on the receiving instrument also changes.


### ■ CONTROL CHANGE

These are volume, sustain, effect, etc. data used to enhance performance expression. Each function is distinguished by its control number, and the function which can be changed by the control differs depending on the instrument.

### ■ EXCLUSIVE data


This is data that is specific to this instrument, and data for the GENERAL MIDI LEVEL 2 mode setting.

# Outline of MIDI functions

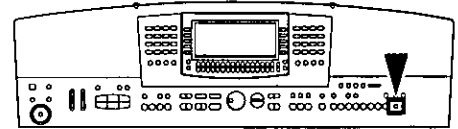


1. Press the **PROGRAM MENUS** button to turn it on.

- The display looks similar to the following.

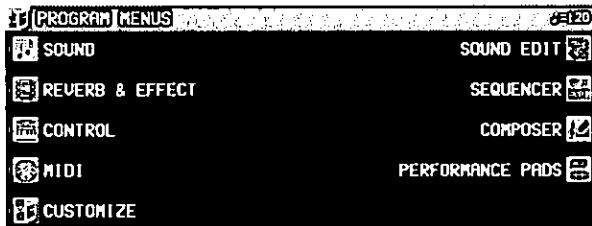

2. Select MIDI.

- The display looks similar to the following.

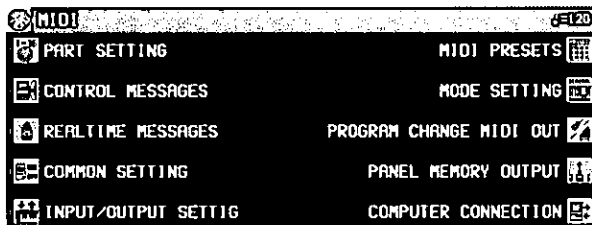

3. Select a function.

4. Follow the procedure to adjust the settings.

- While you are adjusting the settings, when the **TEMPO/PROGRAM** indicator is lit, it indicates that the **TEMPO/PROGRAM** is available for setting the current function.

5. When you have finished setting the functions, press the **PROGRAM MENUS** button to turn it off.

## Summary of the MIDI menu items

### PART SETTING (page 169)

Set the MIDI CHANNEL, OCTAVE and LOCAL CONTROL settings for each part.

### CONTROL MESSAGES (page 170)

Enable or disable the exchange of various CONTROL data.

### REALTIME MESSAGES (page 170)

Enable or disable the exchange of REALTIME COMMANDS, and select the CLOCK mode.

### COMMON SETTING (page 171)

Set the functions which are common to all parts.

### INPUT/OUTPUT SETTING (page 172)

Settings which determine how various performance data is treated during data transmission and reception.

### MIDI PRESETS (page 173)

Establish the optimum settings depending on how this instrument is connected to other equipment.

- You can save the settings you specify yourself.

### MODE SETTING

NX SOUND and GM LEVEL 2 ON setting (page 172)

### PROGRAM CHANGE MIDI OUT (page 174)

Settings for transmitting the desired PROGRAM CHANGE data on the specified MIDI channel.

### PANEL MEMORY OUTPUT (page 175)

Settings that affect the transmission data when the **PANEL MEMORY** buttons are operated.

### COMPUTER CONNECTION (page 175)

Mode settings related to the flow of MIDI signals when this instrument is connected to a personal computer.



# Part Setting

Follow this procedure to set the functions which can be set for each part: MIDI CHANNELs, the OCTAVE data to NOTE data during transmission, and LOCAL CONTROL (whether or not the sound generator of this instrument is active during transmission).

1. On the MIDI MENU display, select PART SETTING.

- The display looks similar to the following.

PART	CHANNEL	OCTAVE	LOCAL
RIGHT1	2	0	ON
RIGHT2	2	0	ON
LEFT	3	0	ON
CONTROL	OFF	---	---
CHORD	OFF	0	ON

2. Use the PART ▲ and ▼ buttons to select a part.

- The list of parts covers 4 pages. Use the **OTHER PARTS/TR** button or **PAGE** button to view different parts.

3. Use the CHANNEL ▲ and ▼ buttons to select a MIDI CHANNEL for the part (OFF, 1 to 16).

- A part which has been set to OFF cannot be used to transmit or receive MIDI data.
- The initialized settings are as follows:

RIGHT 1	1
RIGHT 2	2
LEFT	3
PART 1	OFF
PART 2	OFF
PART 3	OFF
PART 4	4
PART 5	5
PART 6	6
PART 7	7
PART 8	8
PART 9	9
PART 10	10
PART 11	11
PART 12	12
PART 13	13
PART 14	14
PART 15	15
PART 16	16
CONTROL	OFF
ACCOMP 1 - 5	OFF

BASS	OFF
DRUMS 1 - 2	OFF
CHORD	OFF

4. Use the OCTAVE ▲ and ▼ buttons to set the octave shift value (-3 to 3).

- Octave shift is set for transmitted data only; however the transmitted and received octave shifts are linked. For example, if the transmitted octave shift is set to 1, the received octave shift is automatically set to -1.

5. Use the LOCAL ▲ and ▼ buttons to enable or disable this instrument's sound generator.

- When set to ON, the performance from this instrument is transmitted as MIDI data and also sounds from this instrument. When set to OFF, the performance from this instrument is transmitted as MIDI data but does not sound from this instrument.

6. Repeat steps 2 to 5 for each part as desired.

# Control Messages

Enable or disable the exchange of various control data.

1. On the MIDI MENU display, select CONTROL MESSAGES.
  - The display looks similar to the following.
  - The CONTROL MESSAGES display consists of 3 pages. Use the **PAGE** buttons to switch between pages.

MESSAGE	ON/OFF
PROGRAM CHANGE	ON
BANK SELECT	ON
PITCH BEND	ON
VOLUME	ON
EXPRESSION	ON
PANPOT	ON
SUSTAIN	ON

2. Use the MESSAGE **▲** and **▼** buttons to select the control message.

3. Use the ON and OFF **^** and **v** buttons to specify on or off for the control message.

ON:

Data for the control operation is exchanged.

OFF:

Data for the control operation is not exchanged.

- The BANK SELECT setting is effective only when PRG. CHANGE is set to ON.
- The EFFECT & REVERB setting controls the **DIGITAL EFFECT, SOUND DSP, CHORUS, MULTI** and **REVERB** on/off.
- RPN is the general term for KEY SHIFT, TUNING, PITCH BEND RANGE and MODULATION SENSITIVITY.

4. Repeat steps 1 and 2 for each control as desired.

# Realtime Messages

Enable or disable the exchange of **START/STOP** data (REALTIME COMMANDS), and select the CLOCK mode.

1. On the MIDI MENU display, select REALTIME MESSAGES.
  - The display looks similar to the following.

REALTIME COMMANDS	ON
CLOCK	INTERNAL

2. Use the buttons on the left side of the display to select a function.
3. Use the VALUE **^** and **v** buttons to change the setting.

## REALTIME COMMANDS

ON:

Rhythm and **SEQUENCER** start/ stop, continue, and song position pointer data can be transmitted/received.

OFF:

This data cannot be transmitted/received.

## CLOCK

INTERNAL:

This instrument's internal clock is used to control the performance. The clock of the connected equipment is disabled.

MIDI:

The clock of the connected equipment is used to control the performance. This instrument's clock is disabled. (The tempo is displayed as "♪ = - - -.")

- The CLOCK is set to INTERNAL when the power to this instrument is turned on.


4. Repeat steps 2 and 3 for the other function if desired.

# Common Setting

Set the functions which are common to all parts.

1. On the MIDI MENU display, select COMMON SETTING.

- The display looks similar to the following.

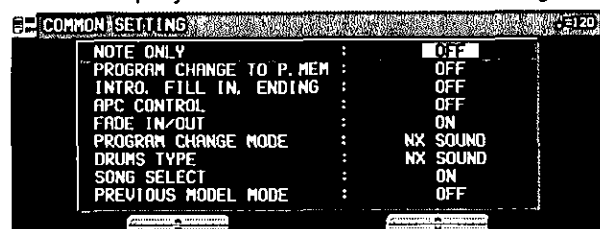

2. Use ▲ and ▼ buttons to select the item.

## NOTE ONLY:

Of the performance data, specify whether or not only note data is exchanged.

## PROGRAM CHANGE TO P. MEM:

Enable or disable the exchange of program change numbers for the **RIGHT 1** part by operation of the **PANEL MEMORY** buttons.

- For this setting, the **PANEL MEMORY 1** to **8** program change numbers correspond to the bank numbers as follows:

**BANK A** = 0 to 7

**BANK B** = 8 to 15 ...

## INTRO, FILL-IN, ENDING:

Enable or disable the exchange of intro, fill-in and ending data.

## APC CONTROL:

Enable the exchange of data for the on/off status of the **AUTO PLAY CHORD**'s **ONE FINGER**, **FINGERED** and **PIANIST** modes.

## FADE IN/OUT:

Specify whether or not **FADE IN/OUT** data is exchanged.

## PROGRAM CHANGE MODE

### NX SOUND:

Program change numbers are standardized among **NX SOUND** Technics models which are set to this mode. The program change number assigned to a given sound on one model is assigned to the same sound on all models which are set to the same mode.

## PREVIOUS TECH:

Program change numbers are standardized among non-**NX SOUND** Technics models which are set to this mode. The program change number assigned to a given sound on one model is assigned to the same sound on all models which are set to the same mode.

## MAP R:

**GS** basic sounds are transmitted and received as **GS** program change numbers.

## MAP Y:

**XG** basic sounds are transmitted and received as **XG** program change numbers.

\***GS** is a trademark of Roland Corporation. **XG** is a trademark of Yamaha Corporation.

## DRUMS TYPE

### NX SOUND

Keyboard percussion instrument sounds correspond to the same key note numbers for connected **NX SOUND** Technics models that are set to this type.

### PREVIOUS TECH:

Keyboard percussion instrument sounds correspond to the same key note numbers for connected non-**NX SOUND** Technics models that are set to this type.

## SONG SELECT

### ON:

Song number data can be exchanged.

### OFF:

Song number data cannot be exchanged.

## PREVIOUS MODEL MODE

### ON:

**INTRO**, **FILL IN**, **ENDING** and **APC CONTROL**, **FADE IN/OFF** data are converted to **CONTROL CHANGE** data for previous models and then transmitted.

### OFF:

The above settings are not converted.

3. Use ^ and v buttons to change the setting.

4. Repeat steps 2 and 3 for the other settings as desired.

# Mode Setting

Initialize the settings for when the NX SOUND or GM LEVEL 2 mode is ON.

1. On the MIDI MENU display, select MODE SETTING.
  - The display looks similar to the following.



2. Select the mode.
  - The confirmation display appears. Press the YES button to execute the function, or press the NO button to cancel the function.

# Input/output Setting

Make the settings which determine how various performance data is treated during data transmission and reception.

1. On the MIDI MENU display, select INPUT/OUTPUT SETTING.
  - The display looks similar to the following.



2. Use the ▲ and ▼ buttons to select the item.

## RIGHT 1 INPUT

### CONDUCTOR:

When data for the **RIGHT 1** part is received, the **CONDUCTOR** determines which part it is used for.

### DIRECT:

When data for the **RIGHT 1** part is received, it is treated as **RIGHT 1** data, and performance data for all parts is received on their respective basic channels.

## AUTO PLAY CHORD INPUT

ON: Input data for the **ACCOMP**, **BASS**, **DRUMS** and **CHORD** parts is received.

OFF: Data for the above parts is not received.

- MIDI channels should be assigned to the above parts before exchanging data.

## VELOCITY INPUT

### DIRECT:

The **VELOCITY** value of received **NOTE ON** data is treated as is.

### OFFSET:

The **VELOCITY** value of received **NOTE ON** data is offset (–50 to 50).

- Select **VELOCITY OFFSET VALUE**. Use the ▲ and ▼ buttons to change the value.
- All the values are offset from the current value by the fixed amount.
- The upper (127) and lower (1) limits cannot be exceeded.

### FIX:

The **VELOCITY** value of all received **NOTE ON** data is set to a fixed value. (1 to 127)

- Select **VELOCITY FIXED VALUE**. Use the ▲ and ▼ buttons to change the value.

## TECHNI-CHORD OUTPUT

ON: Keyboard notes generated by the **TECHNI-CHORD** function are also transmitted.

OFF: Only key note data of the pressed keys is transmitted.

## TRANSPOSE OUTPUT

ON: The note data of the transposed notes is transmitted.

OFF: The note data of the played keys is transmitted.

**DRUM PATTERN OUTPUT**

- ON: Data from the **DRUMS** part is transmitted.
- OFF: Data from the **DRUMS** part is not transmitted.

**AUTO PLAY CHORD OUTPUT**

- ON: The data for the **ACCOMP**, **BASS** and **CHORD** parts is transmitted.
- OFF: The data for the above parts is not transmitted.
- MIDI channels should be assigned to the above parts before exchanging data.

**AUTO OCTAVE SHIFT OUTPUT**

- ON: If the octave has been automatically changed, the data of the transposed notes is transmitted, depending on the sound.
- OFF: The note data of the played keys is transmitted.


- Use the  $\wedge$  and  $\vee$  buttons to select the setting.
- Repeat steps 2 and 3 for each item as desired.

## MIDI Presets

Establish the optimum settings depending on how this Keyboard is connected to other equipment, and on whether this Keyboard is used as the master or the slave.

- On the MIDI MENU display, select MIDI PRESETS.

- The display looks similar to the following.

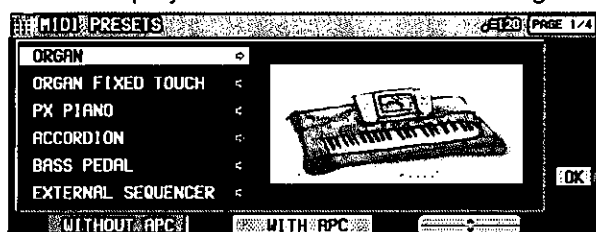

- Use the  $\blacktriangle$  and  $\blacktriangledown$  buttons to select the connection setup.

- The PAGE 1/4 display shows connection setups with this instrument as the SLAVE. And the PAGE 2/4 display shows connection setups with this instrument as the MASTER.
- The MASTER is the instrument used to transmit data, and the SLAVE is the instrument used to receive the data.
- Use the buttons below the display to select WITHOUT APC (the **AUTO PLAY CHORD** is not used) or WITH APC (the performance includes **AUTO PLAY CHORD**).

- Press the OK button.

- When the settings have been successfully stored, "COMPLETED!" appears on the display.

**Notice**


When an instrument such as an organ or accordion with separate or divided keyboards dedicated to melody and chords is used as the master instrument, if this instrument's split point is set to a note below the lowest note of the melody keyboard of the master instrument, it is possible to produce melody notes on multiple parts by this instrument's **CONDUCTOR** settings.

- Assign the RIGHT 1 channel as the CHANNEL for the melody keyboard. Assign the CHORD channel (or if you also wish the played note to be produced, CHORD + LEFT) as the CHANNEL for the chord keyboard.
- You will also have to specify CONDUCTOR as the RIGHT 1 INPUT for the INPUT/OUTPUT SETTING.

### ■ Storing user settings

After you change the MIDI settings, you can store your customized settings in USER preset memories (3 USER memories).

1. Adjust the various MIDI settings.
2. Go to PAGE 4/4 of the MIDI PRESETS display.
  - The display looks similar to the following.

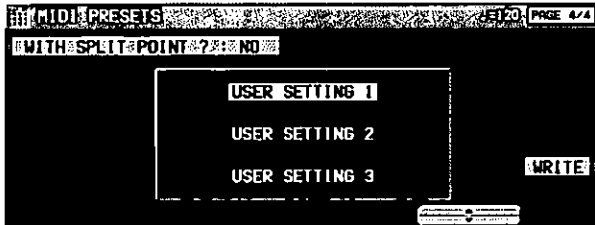

3. Use the ▲ and ▼ buttons to select the memory in which to store the settings (USER SETTING 1, 2, 3).
4. Use the WITH SPLIT POINT? button to specify whether or not to also store the keyboard split point (YES/NO).
5. Press the WRITE button.

### ■ Recalling the USER settings

1. Go to PAGE 3/4 of the MIDI PRESETS display.




2. Use the ▲ and ▼ buttons to select a number.
3. Press the OK button.

## Program Change MIDI Out

Use this function to immediately transmit specific PROGRAM CHANGE and BANK SELECT data from this display on a specified MIDI channel.

1. On the MIDI MENU display, select PROGRAM CHANGE MIDI OUT.
  - The display looks similar to the following.

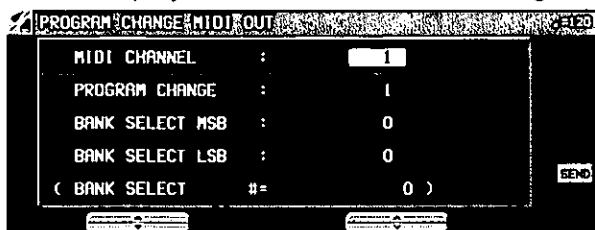

2. Use the ▲ and ▼ buttons to select a function.

#### MIDI CHANNEL:

The MIDI channel to transmit to (1 to 16).

#### PROGRAM CHANGE:

Specify the PROGRAM CHANGE number to transmit (1 to 128).

#### BANK SELECT MSB:

Specify the BANK SELECT MSB to transmit (0 to 127).

#### BANK SELECT LSB:


Specify the BANK SELECT LSB to transmit (OFF, 0 to 127).

- When set to OFF, neither the LSB nor the MSB are transmitted.
3. Use the ^ and v buttons to change the setting.
  4. Press the SEND button.
    - The specified data is transmitted.
    - The data is unconditionally transmitted regardless of the other settings.

## Panel Memory Output

These are settings affect the transmission data when the **PANEL MEMORY** buttons are operated.

1. On the MIDI MENU display, select **PANEL MEMORY OUTPUT**.
  - The display looks similar to the following.

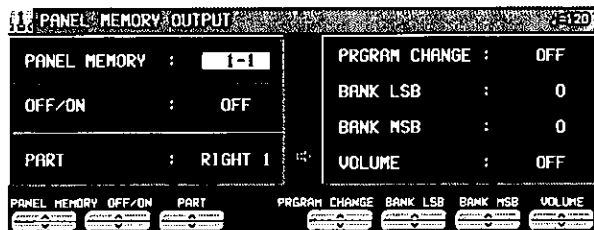

2. Use the P.MEM  $\wedge$  and  $\vee$  buttons to select a **PANEL MEMORY** number.
3. Use the OFF/ON  $\wedge$  and  $\vee$  buttons to specify whether the data in the selected **PANEL MEMORY** number is transmitted or not.
4. Use the PART  $\wedge$  and  $\vee$  buttons to select a part (RIGHT 1, RIGHT 2 or LEFT).

5. Use the PRGRAM CHANGE  $\wedge$  and  $\vee$  buttons to specify a program change number (0 to 127, or OFF).

6. Use the BANK LSB  $\wedge$  and  $\vee$  buttons to specify a BANK LSB (0 to 127).

7. Use the BANK MSB  $\wedge$  and  $\vee$  buttons to specify a BANK MSB (0 to 127).

8. Use the VOLUME  $\wedge$  and  $\vee$  buttons to specify the volume (0 to 127, or OFF).


9. Repeat steps 4 to 7 for each part, as necessary.

10. Repeat steps 3 to 9 for each **PANEL MEMORY** number, as necessary.

## Computer Connection

These settings are used to select the mode related to MIDI signal flow when a personal computer is connected to the **COMPUTER** terminal of this instrument.

1. Turn off the power to this instrument.
2. Connect a personal computer to the **COMPUTER** terminal on the rear of this instrument. Set the switch to the correct position. (Refer to page 178.)
3. Turn on the power to this instrument.
4. On the MIDI MENU display, select **COMPUTER CONNECTION**.
  - The display looks similar to the following.

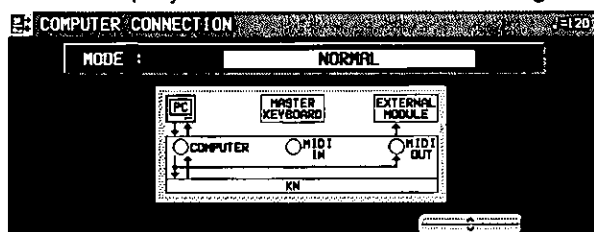

5. Use the  $\wedge$  and  $\vee$  buttons to select a mode.

### NORMAL:

The normal mode for data exchange.

### KN as master:

The mode when this instrument is used as the master keyboard.

### KN as slave:

The mode when this instrument is used as a slave instrument.

# Initialize


This Keyboard has many settable functions and storable memories. However, you can return the settings and memory to the factory-preset status.

## INITIAL

1. Press the **PROGRAM MENUS** button to turn it on.




- The display changes to the following.

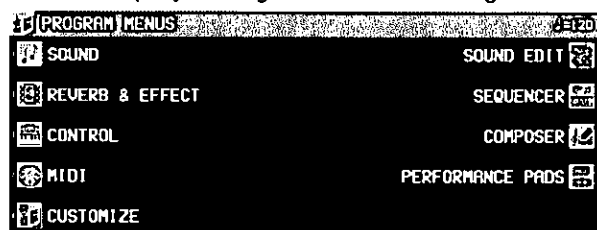


2. Select **CONTROL**.

- The display looks similar to the following.

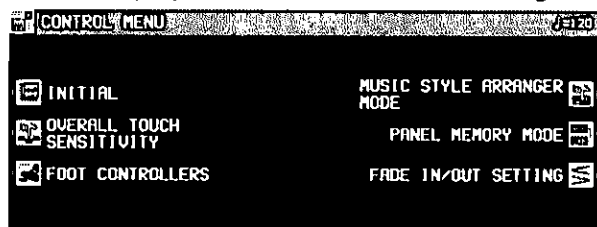

3. Select **INITIAL**.


- This display changes to the following.

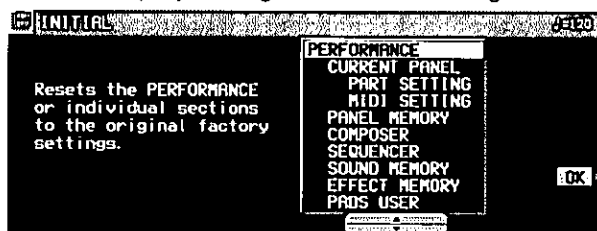

4. Use the **▲** and **▼** buttons to select the desired type of initialization.
- **PERFORMANCE** includes all the items which are listed below it.

5. Press the **OK** button.

- The display changes to the confirmation display. Press the **YES** button if you wish to execute the initialization. Press the **NO** button if you wish to cancel the procedure.

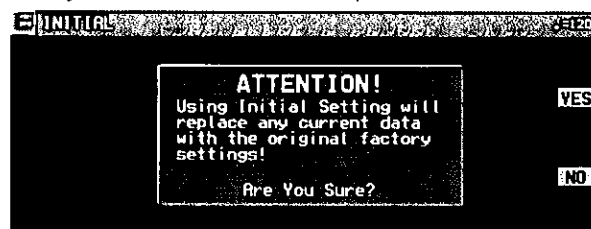

- Initialization begins. When initialization is completed, "COMPLETED!" is shown on the display and the Keyboard returns to the normal performance mode.
- The **USER MIDI**, **FAVORITES**, **HOME PAGE** settings and **CUSTOM** styles are not initialized by this procedure.

You can also reset all the **PERFORMANCE** items with the following procedure:  
Turn off the power to this instrument once. Then, while pressing the three lower left buttons in the **RHYTHM GROUP** section (**ENTERTAINER**, **MOVIE & SHOW** and **CUSTOM**) at the same time, turn the power on again.



# About the backup memory and performance data

When the power to this instrument is turned off, the various settings and memory contents of this instrument are maintained in the backup memory as follows:

PERFORM- ANCE	CURRENT PANEL settings	about one week
	PANEL MEMORY	
	SEQUENCER	about 80 minutes
	COMPOSER (MEMORY contents)	
	SOUND MEMORY	
	PERFORMANCE PADS (USER memories)	about one week
	EFFECT MEMORY	
BACKUP	USER MIDI (USER memories for the MIDI PRESETS)	indefinitely
	FAVORITES	
	HOME PAGE	
	ALL CUSTOM STYLE	

- If you wish to retain the settings and stored memory contents for recall at a later time, store the desired data on a floppy disk. (Refer to page 126.)
- The backup memory does not function for the stored contents until the power has been on for about 10 minutes.
- Data from previous Technics models may be limited to PERFORMANCE data.

---


## Separately sold options



**SZ-E2**  
Expression Pedal




**SZ-P1**  
Foot Switch

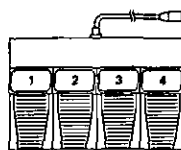

**SZ-FC2**  
Foot Controller

- Be sure to turn off the power before connecting the Foot Controller.

# Connections

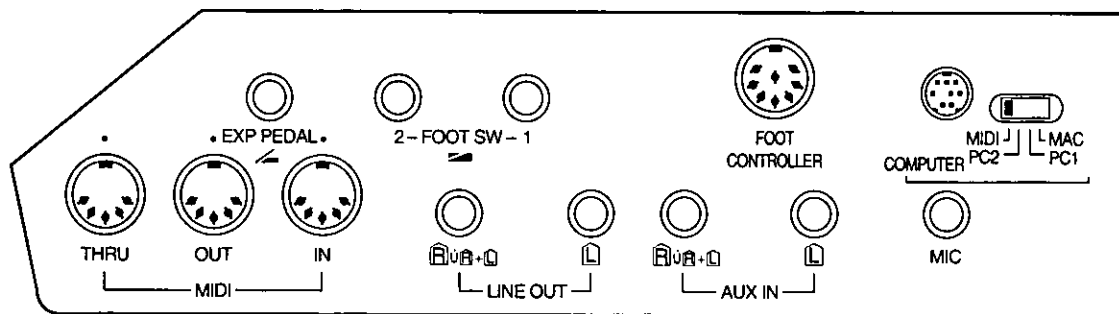

## EXP PEDAL

The optional SZ-E2 Expression Pedal (sold separately) can be connected to this terminal to control the volume.

## FOOT SW 1, 2

An optional SZ-P1 Foot Switch (sold separately) can be connected to each terminal to control various functions. (Refer to page 159.)

## AUX IN (input level 0.5 Vrms, 6 kΩ)

Other instruments such as a sound generator can be connected to this terminal, and the sound will be output from the Keyboard's speakers. To receive monaural sound, connect the other instrument to the **R/R+L** terminal. (Do not connect the **L** terminal.)

## LINE OUT (output level 1.5 Vrms, 600 Ω)

By connecting an external high-power amplifier, the sound can be reproduced at a high volume. To output monaural sound, connect the external equipment to the **R/R+L** terminal. (Do not connect the **L** terminal.)

## MIDI

These terminals are for connection to another MIDI instrument. (Refer to page 166)

## FOOT CONTROLLER

An optional SZ-FC2 Foot Controller (sold separately) can be connected to this terminal to control various functions. (Refer to page 159.)

## MIC

A microphone can be connected to this terminal for voice output through the speakers.

- The effects applied to the MIC INPUT and the microphone volume can be set. (Refer to page 42.)

## COMPUTER

By connecting this terminal to the serial port of a computer, performance data can be exchanged. Use the switch to select the type of computer.

- Be sure that the power to this instrument is turned off when connecting to a computer or when changing the switch setting.

### Caution:

Failure to turn off the power before changing the switch setting may result in malfunction.

- When no computer is connected, or when a MIDI interface is used, the switch should be set to **MIDI**.

## Connection to a Macintosh series computer

Use an **ACCESSORY CABLE** (SZ-JJAP1: sold separately) to connect the **COMPUTER** terminal of this instrument to the modem port or printer port of a Macintosh Series computer. Set the switch to **MAC**.

- Set the MIDI interface clock of the Macintosh software to 1 MHz.
- Do not remove the core at either end of the cable.

## Connection to a PC

Use an **ACCESSORY CABLE** (SZ-JJAT1: sold separately) to connect the **COMPUTER** terminal of this instrument to the RS232C terminal of a PC. Set the switch to **PC2**.

- The MIDI driver included with the cable should be installed in the computer. (Refer to the manual accompanying the cable.) This MIDI driver is not compatible with Windows NT or Windows 2000.
- Do not remove the core at either end of the cable.

\* All product and company names are trademarks or registered trademarks of their respective owners.

# Symptoms which appear to be signs of trouble

The following changes in performance may occur in the Technics Keyboard but do not indicate trouble.

	Phenomenon	Remedy
Sounds and effects	The buttons, keys, etc. malfunction.	<ul style="list-style-type: none"> <li>• Turn off the <b>POWER</b> button once, then turn it on again. If this procedure is not successful, turn off the <b>POWER</b> button once. Then, while pressing the three lower left buttons in the <b>RHYTHM GROUP</b> section (<b>ENTERTAINER, MOVIE &amp; SHOW</b> and <b>CUSTOM</b>) at the same time, turn the <b>POWER</b> button on again. (Note that, in this case, all programmable settings, functions and memories return to their factory-preset status.)</li> </ul>
	No sound is produced when the keys are pressed.	<ul style="list-style-type: none"> <li>• The <b>MAIN VOLUME</b> is at the minimum setting. Adjust the volume with the <b>MAIN VOLUME</b> control.</li> <li>• The volumes for the selected parts are set to the minimum levels. Use the balance buttons to set the volumes of the relevant parts to appropriate levels. (Refer to page 27.)</li> <li>• The part is muted. (Refer to page 27.)</li> <li>• The <b>LOCAL CONTROL</b> for a part performed on the keyboard is set to <b>OFF</b>. Set the <b>LOCAL CONTROL</b> to <b>ON</b>. (Refer to page 169.)</li> </ul>
	Only percussive instrument sounds are produced when the keyboard is played.	<ul style="list-style-type: none"> <li>• In the <b>SOUND GROUP</b> section, the <b>DRUM KITS</b> button is on.</li> </ul>
	The volume is very low when the keyboard is played.	<ul style="list-style-type: none"> <li>• The volume setting in the <b>SEQUENCER</b> contents is very low. Follow the <b>INITIAL</b> procedure to reset the settings. (Refer to page 176.)</li> </ul>
	The sound you hear is different from the sound you selected.	<ul style="list-style-type: none"> <li>• This sometimes occurs when you play back <b>SEQUENCER</b> or <b>COMPOSER</b> data which was created on a different model, or when <b>MIDI</b> data is received from a connected instrument. Select the desired sounds again.</li> </ul>
Rhythm	The rhythm does not start.	<ul style="list-style-type: none"> <li>• The <b>DRUMS</b> volume is set to the minimum level. Use the balance buttons to set the <b>DRUMS</b> volume to an appropriate level.</li> <li>• A <b>SEQUENCER PLAY</b> button is on. When you are not playing back the <b>SEQUENCER</b> performance, turn off the <b>SEQUENCER PLAY</b> button.</li> <li>• <b>CLOCK</b> is set to <b>MIDI</b>. Set <b>CLOCK</b> to <b>INTERNAL</b>. (Refer to page 170.)</li> </ul>
AUTO PLAY CHORD	No sound is produced for the automatic accompaniment, or only the sounds of some parts are produced.	<ul style="list-style-type: none"> <li>• An <b>ACCOMP</b> part does not sound if its corresponding volume is set to the minimum level. Use the respective balance buttons to set the <b>ACCOMP 1-5</b> volumes to appropriate levels.</li> </ul>
SEQUENCER	Storage is not possible.	<ul style="list-style-type: none"> <li>• The remaining memory capacity of the <b>SEQUENCER</b> is 0. Follow the <b>SONG CLEAR</b> or <b>TRACK CLEAR</b> procedure to erase the memory. (Refer to page 93)</li> </ul>
	The playback measure indication is different from when the performance was recorded.	<ul style="list-style-type: none"> <li>• The number of measures corresponds to the time signature of the rhythm selected at the start of recording. To change the rhythm in the middle of the song, record the rhythm change in the <b>RHYTHM</b> part. (Refer to page 90.)</li> </ul>

	Phenomenon	Remedy
COMPOSER	Storage is not possible.	<ul style="list-style-type: none"> <li>The remaining memory capacity of the <b>COMPOSER</b> is 0.</li> </ul>
	Setting the time signature is not possible.	<ul style="list-style-type: none"> <li>The time signature cannot be changed for a pattern which is currently recorded in the <b>COMPOSER</b>. If you wish to change the time signature, first follow the procedure to clear the memory. (Refer to page 106.)</li> </ul>
	The playback timing of the rhythm pattern is different from the timing with which it was recorded.	<ul style="list-style-type: none"> <li>The <b>QUANTIZE</b> function was on when the pattern was recorded and the timing was automatically corrected. Set the quantize level to a smaller note unit or to <b>OFF</b> when recording. (Refer to page 108.)</li> </ul>
Disk Drive	The Disk Drive produces a noise during recording or playback.	<ul style="list-style-type: none"> <li>This occurs when the Disk Drive is reading a disk. It does not indicate a problem.</li> </ul>
	When the procedure to load from a disk is performed, the contents of the keyboard memory are erased.	<ul style="list-style-type: none"> <li>When performing the load operation from a disk, the keyboard memory changes to that of the data loaded from the disk. If you wish to preserve a song which is stored in the keyboard memory, save it on a disk before performing the load procedure. (Refer to page 126.)</li> </ul>
MIDI	Data cannot be exchanged through MIDI terminals.	<ul style="list-style-type: none"> <li>The switch for the <b>COMPUTER</b> terminal is not set to <b>MIDI</b>. Turn off the power to this instrument and set the switch to <b>MIDI</b>. (Refer to page 178.)</li> <li>Match the channels on the transmitting side and the receiving side. (Refer to page 169.)</li> </ul>
	The sound quavers or is distorted.	<ul style="list-style-type: none"> <li>When the <b>COMPUTER</b> terminal or both the <b>MIDI IN</b> and <b>OUT</b> terminals are connected to a computer, depending on the computer software the received data may be sent back to the instrument just as it is. Because of this the sound generated from the keys and the sound generated from the returned data are both produced, causing undesirable effects, such as the sounds canceling each other out, for example. In this case, either change the software settings to prevent received data from being returned, or set the <b>MIDI LOCAL CONTROL</b> to off.</li> </ul>
Other	Noise from a radio or TV can be heard.	<ul style="list-style-type: none"> <li>This sometimes occurs when electrical equipment such as a radio or TV is used near the instrument. Try moving such electrical equipment further away from the instrument.</li> <li>The sound may be coming from a nearby broadcast station or amateur radio station. If the sound is bothersome, consult your dealer or service center.</li> </ul>
	The cabinet becomes warm during use.	<ul style="list-style-type: none"> <li>This instrument has a built-in power source that heats the cabinet to some degree. This is not an indication of trouble.</li> </ul>

# Error messages

No.	Contents
00	The data on the disk that you are using is for a different product.
01	An error has occurred while the disk was loading. Please try again!
02	There is no disk in the Disk Drive.
03	The file that you tried to load is empty.
05	An error has occurred while the disk was saving. Please try again!
06	The disk that you are using is write protected. Please remove the write protection and try again.
07	The disk that you are using is full. Please use another disk.
08	An error has occurred while the disk was formatting. The disk that you are using may be faulty. Please try formatting another disk.
10	The data is already copy protected.
15	The song you are trying to save is empty.
16	This STANDARD MIDI FILE is incompatible with this instrument and cannot be loaded.
17	This is not a STANDARD MIDI FILE.
18	The timebase (PPQ resolution) that you tried to load is not 24/48/96/192/288/384 PPQ.
20	A problem has occurred with your <b>SEQUENCER</b> Data. This might be due to a damaged or faulty disk.
21	Memory full
22	It is necessary to press REC STOP to complete this procedure.
23	It is impossible to change the time signature because it has already been set in the existing tracks.
24	A rhythm track already exists. It is impossible to assign two tracks to rhythm.
25	It is only possible to change the velocity on a melody track.

No.	Contents
26	It is only possible to merge melody tracks. Tracks such as rhythm, chord and control cannot be merged.
27	It is only possible to copy melody tracks. Tracks such as rhythm, chord and control cannot be copied.
28	This song is too long to be saved as a MIDI file.
29	The MIDI file that you have tried to load exceeds the memory capacity of this instrument and cannot be played. The <b>SEQUENCER</b> memory has been cleared.
30	It is not possible to change the time signature of a <b>COMPOSER</b> pattern after it has been recorded. If you want to proceed, you must first clear the entire <b>COMPOSER</b> pattern.
31	The time signature of the pattern from which you are copying is different from the <b>COMPOSER</b> memory that you are using. Either: Change the time signature of the <b>COMPOSER</b> memory or: Copy from a pattern that has the same time signature
32	Memory full
33	Select a Track before setting parameters for AUTO PUNCH RECORD.
43	The file that you are trying to load was saved on a previous KN keyboard. It is only possible to load using the "PERFORMANCE" option.
44	It is impossible to edit a Drum Kit. Please select a different sound from any group except Keyboard Percussion.
46	It is only possible to insert MELODY Tracks. Tracks such as RHYTHM, CHORD and CONTROL cannot be inserted.
47	This procedure is not possible with a composer pattern or the metronome. Please select a preset rhythm pattern.
54	It is not possible to record using preset banks, compile banks, or control banks. Please select one of the user banks.

No.	Contents
55	Special tracks such as CHORD (APC), RHY and CTL exist in the song from which you are copying and are incompatible with the destination song because it is in the GM mode.
56	AUTO PUNCH recording has been unsuccessful because SEQUENCER operation was interrupted before the PUNCH OUT measure was reached.
58	The song that you have tried to load exceeds this instrument's available memory and cannot be loaded. The selected song memory has been cleared.
62	The computer connection is not active because the computer port switch is set to MIDI. Please turn the power off, set the switch to the desired setting and turn the power back on.
63	This Bitmap is in the wrong format for the KN and cannot be loaded. See the Owners Manual for more details.
64	Please select the Panel Memory that you want to name.
65	It is not possible to use the CHORD FINDER in this mode. Please select CHORD FINDER from HOME page or CHORD STEP RECORD page.
66	SOLO pads are special pads which include Chord information. Please use SOLO pads when the rhythm and accompaniment is playing.
67	There are no APC or CHORD tracks. Select an APC track or CHORD track, and try again.
68	It is not possible to record directly into the SOLO pads. Record on the SEQUENCER and Copy the melody and chord information into a SOLO pad.
69	It is not possible to delete all measures.
70	It is not possible to insert over 16 measures in a PATTERN.
71	It is not possible to set the start measure to the measures you set to copy.

# Index

## A

ACCORDION REGISTER .....	35
AMPLITUDE .....	152
APC CONTROL (MIDI) .....	171
APC/SEQUENCER VOLUME .....	54, 82
AUTO PLAY CHORD .....	51
AUTO PLAY CHORD INPUT (MIDI) .....	172
AUTO PLAY CHORD OUTPUT (MIDI) .....	172
AUTO SETTING .....	67
AUX IN .....	178

## B

BACKUP .....	177
Backup memory .....	177
BANK .....	66
BANK VIEW .....	63
BEAT .....	49
BEND RANGE SET .....	135

## C

CHORD FINDER .....	55
CHORD STEP RECORD .....	88
CHORUS .....	41
CLOCK (MIDI) .....	170
COMMON SETTING (MIDI) .....	171
COMPOSER .....	104
COMPUTER .....	178
COMPUTER CONNECTION .....	175
CONDUCTOR .....	36
Connections .....	178
CONTRAST .....	30
CONTROL .....	158
CONTROL MESSAGES (MIDI) .....	170
CONTROLLER .....	156
COUNT INTRO .....	50
CUSTOMIZE .....	161
CUSTOM STYLE COPY .....	117
CUSTOM PANEL .....	65

## D

DEMO .....	12
DIGITAL DRAWBAR .....	34
DIGITAL EFFECT .....	39
DIRECT PLAY .....	123
Disk Drive .....	118
DISK .....	120
Display .....	27
DISPLAY TIME OUT .....	163
DISPLAY HOLD .....	30
DRUM EDIT .....	95
DRUM PATTERN OUTPUT (MIDI) .....	172
DRUMS TYPE (MIDI) .....	171

## E

EASY COMPOSER .....	106
EASY EDIT .....	145
EASY REC .....	76

EQUALIZER .....	143
Error messages .....	181
EXIT .....	30
EXP PEDAL .....	178
Expression Pedal .....	177

## F

FADE IN/OUT .....	56
FAVORITES .....	30
FILL IN .....	50
FILTER .....	150
FINGERED .....	52
FLOPPY DISK FORMAT .....	126
FOOT CONTROLLERS .....	159
FOOT SW .....	178
Foot Switch .....	177

## G

GENERAL MIDI LEVEL 2 .....	119
GLIDE .....	159

## H

Headphones .....	10
HELP .....	30

## I

INITIAL .....	176
INPUT/OUTPUT SETTING (MIDI) .....	172
INTRO & ENDING .....	50

## K

KEY SCALING .....	140
KEY SHIFT .....	135

## L

LANGUAGE SELECT .....	30
LEFT HOLD .....	54
LFO .....	154
LINE OUT .....	178
LOAD .....	121
LOCAL (MIDI) .....	169

## M

MAIN VOLUME .....	11
MASTER TUNING .....	140
MEASURE COPY .....	98
MEASURE ERASE .....	99
MEASURE & TIME SIGNATURE .....	107
MEMORY, AUTO PLAY CHORD .....	53
MEMORY, RHYTHM GROUP .....	111
MEMORY, SOUND GROUP .....	157
Menu .....	28
MIC .....	42
MIDI .....	166
MIDI PRESETS .....	173
MIDI SETTING LOAD OPTION .....	165

MIXER	138
MODE (AUTO PLAY CHORD)	53
MODE (SOUND CONTROLLER)	43
MODULATION	44
MULTI	42
Music stand	10
MUSIC STYLIST	60
MUSIC STYLE ARRANGER	62
MUTE	27

## N

NOTE EDIT	91
NOTE ONLY (MIDI)	171

## O

ON BASS	53
ONE FINGER	52
ONE TOUCH PLAY	59
Options	177
OTHER PARTS/TR	28
OVERALL TOUCH SENSITIVITY	159

## P

PAGE	28
PAN	135
PANEL MEMORY	63
PANEL MEMORY OUTPUT (MIDI)	175
PART SELECT	32
PART SETTING (SOUND)	135
PART SETTING (MIDI)	169
PATTERN COPY	115
PERFORMANCE	118, 177
PERFORMANCE PADS	66
PIANIST	52
PITCH	149
PITCH BEND	44
PROGRAM CHANGE MODE (MIDI)	174
PUNCH RECORD	84

## Q

QUANTIZE, COMPOSER	108
QUANTIZE, SEQUENCER	92

## R

REALTIME COMMANDS (MIDI)	170
REALTIME RECORD	77
REVERB	41
RHYTHM GROUP	48
RIGHT 1 INPUT (MIDI)	172
RIGHT 1/RIGHT 2 OCTAVE	38

## S

SAVE	126
SET	63
SEQUENCER	72
SEQUENCER PLAY	81
SEQUENCER RESET	80
SEQUENCER SONG SAVE	128
SINGLE LOAD	122
SMF LOAD	122

SMF SAVE	129
SOLO	38
SONG CLEAR	93
SONG SELECT/NAMING	83
SOUND	135
SOUND ARRANGER	58
SOUND CONTROLLER	43
SOUND DSP	40
SOUND EXPLORER	33
SOUND EDIT	144
SOUND GROUP	32
Specifications	185
SPLIT POINT	37
Standard MIDI File	119
START/STOP	49
STEP RECORD	86
STEP RECORD: CHORD	88
STEP RECORD: RHYTHM	90
STOP	66
STYLE CONVERT DISK	133
SUSTAIN	39
SYNCHRO & BREAK	49, 56

## T

TAP TEMPO	49
TECHNI-CHORD	46
TEMPO/PROGRAM	49
TONE	146
TONE SELECT	146
TRACK ASSIGN	91
TRACK CLEAR	93
TRACK MERGE	98
TRANSPOSE	45
Troubleshooting	179

## V

VARIATION	48
VARIATION (SOUND DSP)	40
VELOCITY CHANGE	102
Volume balance	27

## W

WALL PAPER SETTING	164
--------------------	-----



# Specifications

		SX-KN6500
KEYBOARD		61 KEYS (WITH INITIAL TOUCH)
SOUND GENERATOR		PCM
MAX. POLYPHONY		64 NOTES
SOUNDS	NUMBER OF SOUNDS	1065 SOUNDS + 36 DRUM KITS + 2 DIGITAL DRAWBARS
	SOUND GROUP	PIANO, GUITAR, STRINGS & VOCAL, BRASS, Mallet & ORCH PERC, WORLD, ORGAN & ACCORDION, SAX & WOODWIND, PAD, SYNTH, BASS, DRUM KITS, DIGITAL DRAWBAR, ACCORDION REGISTER
	SOUND EXPLORER	○
EFFECT	PART	SUSTAIN, DIGITAL EFFECT, SOUND DSP
	GLOBAL	REVERB, CHORUS, MULTI, MIC
WHEEL		PITCH BEND, MODULATION
SOUND CONTROLLER		○
PART SELECT		RIGHT 1, RIGHT 2, LEFT
TRANSPOSE		2 OCTAVE
RHYTHMS	NUMBER OF RHYTHMS	220 RHYTHMS × 4 VARIATIONS
	RHYTHM GROUP	8 & 16 BEAT, ROCK & POP, BALLAD, SOUL & FUNK, MODERN DANCE, GOSPEL & BLUES, COUNTRY & WESTERN, MARCH & WALTZ, BIG BAND & SWING, JAZZ COMBO, BALLROOM, LATIN & WORLD, ENTERTAINER, MOVIE & SHOW
FAVORITES		○
CONTROLS		MAIN VOLUME, BALANCE, MUTE, CONDUCTOR, START/STOP, INTRO & ENDING 1, INTRO & ENDING 2, FILL IN 1, FILL IN 2, COUNT INTRO, SYNCHRO&BREAK, TEMPO/PROGRAM, TAP TEMPO, FADE IN/OUT, SPLIT POINT
PERFORMANCE PADS		20 PRESET BANKS × 6 PADS WITH SOLO USER BANK × 3, COMPILE BANKS × 2, CONTROL PRESET × 1 STOP, AUTO SETTING
AUTO PLAY CHORD		MODE: ONE FINGER, FINGERED, PIANIST MEMORY, ON BASS, CHORD FINDER, LEFT HOLD
MUSIC STYLE ARRANGER		○
SOUND ARRANGER		○
MUSIC STYLIST		○
ONE TOUCH PLAY		○
TECHNI-CHORD		○
PANEL MEMORY		13 BANKS × 8, SET, NEXT BANK, BANK VIEW, CUSTOM PANEL
SEQUENCER		16 TRACKS RESOLUTION: 1/96 PER BEAT STORAGE CAPACITY: APPROX. 40000 NOTES (10 SONG MAX.) INPUT MODES: EASY RECORD, REALTIME RECORD, STEP RECORD FUNCTIONS: RECORD& EDIT, COPY & PASTE, RANGE EDIT
COMPOSER		8 PARTS: BASS, ACCOMP 1 - 5, DRUMS 1, 2 STORAGE CAPACITY: APPROX. 13000 NOTES INPUT MODES: EASY COMPOSER, REALTIME RECORD, STEP RECORD FUNCTIONS: PATTERN COPY, CUSTOM STYLE COPY, SEQ TO COMPOSER COPY, LOAD SINGLE COMPOSER MEMORY: 3 BANKS
DISK DRIVE		3.5 inch FLOPPY DISK DRIVE for 2HD (1.44MB), 2DD (720KB) LOAD, SAVE, DIRECT PLAY, SONG MEDLEY, DISK TOOLS, PREFERENCES, STYLE CONVERT, CUSTOM STYLE LOAD/SAVE

	SX-KN6500
SOUND SETTING	PART SETTING, MIXER, MASTER TUNING, KEY SCALING, TECHNI-CHORD, SOUND LOAD OPTION
SOUND EDIT	EASY EDIT, TONE, PITCH, FILTER, AMPLITUDE, LFO, EFFECT, CONTROLLER MEMORY: 40, 1 USER DRUM KIT
REVERB & EFFECT	MIC REVERB & EFFECT, SOUND LOAD OPTION, ALLOCATION, MIXER, SOUND DSP, MULTI, CHORUS, REVERB, EQUALIZER
CONTROL	INITIAL, OVERALL TOUCH SENSITIVITY, FOOT CONTROLLERS, PANEL MEMORY MODE, MUSIC STYLE ARRANGER MODE, FADE IN/OUT SETTING
CUSTOMIZE	HOME PAGE SETTING, FAVORITE SETTING, DISPLAY TIME OUT, WALL PAPER SETTING, MIDI SETTING LOAD OPTION, DATA PROTECTION, LANGUAGE SELECT, DISK PREFERENCE
MIDI	PART SETTING, CONTROL MESSAGES, REALTIME MESSAGES, COMMON SETTING, INPUT/OUTPUT SETTING, MIDI PRESETS, MODE SETTING, PROGRAM CHANGE MIDI OUT, PANEL MEMORY OUTPUT, COMPUTER CONNECTION
DISPLAY	LCD PAGE, CONTRAST, EXIT, DISPLAY HOLD
HELP	○
DEMO	○
TERMINALS	PHONES, FOOT SW 1, 2, FOOT CONTROLLER, EXP PEDAL, LINE OUT (R/R+L, L), AUX IN (R/R+L, L), COMPUTER, MIDI (IN, OUT, THRU), MIC
OUTPUT	66 W (18 W × 2 FOR MID/HIGH, 30 W × 1 FOR BASS)
SPEAKERS	12 cm × 2, 6.5 cm × 2 FOR MID/HIGH, 14 cm × 1 FOR BASS
POWER REQUIREMENT	75 W AC120/220/240V 50/60 Hz AC120V 60 Hz (NORTH AMERICA AND MEXICO) AC230-240V 50/60 Hz (EUROPE, AUSTRALIA, NEW ZEALAND, SINGAPORE AND PHILLIPPINES)
DIMENSIONS (W × H × D)	106.3 cm × 20 cm × 41.8 cm (41-27/32" × 7-7/8" × 16-15/32")
NET WEIGHT	15.4 kg (34 lbs)
ACCESSORIES	AC CORD, MUSIC STAND, STYLE CONVERT DISK, INITIAL DATA DISK

• Design and specifications are subject to change without notice.



PANASONIC CONSUMER ELECTRONICS COMPANY  
DIVISION OF MATSUSHITA ELECTRIC CORPORATION OF AMERICA  
One Panasonic Way, Secaucus, New Jersey 07094