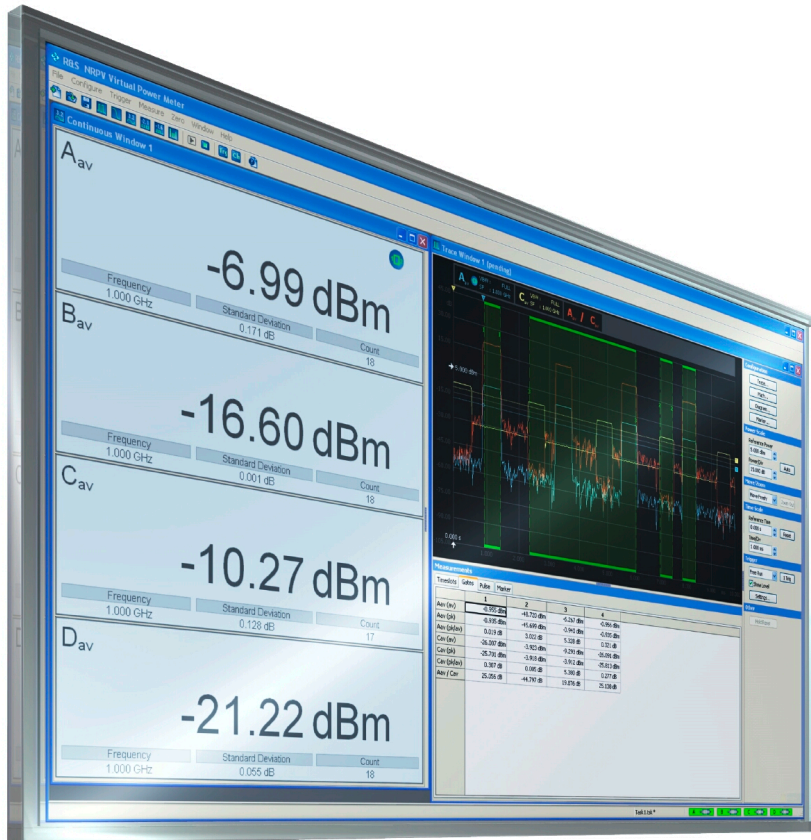


# R&S® NRPV

## Virtual Power Meter

### User Manual



1173.0314.02 – 05

This document describes the R&S®NRPV Virtual Power Meter Software, stock no. 1173.0314.02.

The software makes use of several valuable open source software packages. For information, see the R&S®NRPV "Open Source Acknowledgement" provided on the R&S website <http://www.rohde-schwarz.com/product/NRPZ.html>. Rohde & Schwarz would like to thank the open source community for their valuable contribution to embedded computing.

© 2015 Rohde & Schwarz GmbH & Co. KG  
Mühlendorfstr. 15, 81671 München, Germany  
Phone: +49 89 41 29 - 0  
Fax: +49 89 41 29 12 164

Email: [info@rohde-schwarz.com](mailto:info@rohde-schwarz.com)

Internet: [www.rohde-schwarz.com](http://www.rohde-schwarz.com)

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

The following abbreviations are used throughout this manual: R&S®NRPV is abbreviated as R&S NRPV, the R&S ®NRPxxS(N) Power Sensors are abbreviated as R&S NRPxxS(N) and the R&S ®NRP-Zxx Power Sensors are abbreviated as R&S NRP-Zxx.

# Contents

<b>1</b>	<b>Preface.....</b>	<b>5</b>
<b>2</b>	<b>Welcome to R&amp;S®NRPV.....</b>	<b>7</b>
<b>3</b>	<b>System Setup.....</b>	<b>9</b>
<b>4</b>	<b>Quick Start Guide.....</b>	<b>24</b>
<b>5</b>	<b>Operating Concept.....</b>	<b>47</b>
<b>6</b>	<b>Settings - GUI Reference.....</b>	<b>69</b>
<b>7</b>	<b>Appendix.....</b>	<b>169</b>
	<b>Index.....</b>	<b>171</b>



# 1 Preface

## 1.1 Documentation Map

The user documentation describes the virtual power meter software R&S NRPV, comprising the following topics:

- Installation software
- Release Notes for the most current information
- Manual in pdf format
- Online help system in html format
- Data sheet, including brochure and specification in printable form
- Getting started and user manual of the R&S NRPxxS(N) power sensors
- Getting started and operating manuals of the R&S NRP-Zxx power sensors
- Links to different useful sites on the R&S website



Versions for pdf and chm

It is recommended that you use Adobe® Reader® for pdf files. The latest Adobe® Reader® version for Windows is provided on the Website <http://www.adobe.com>.

---

### Manual - Chapter Overview

- [chapter 2, "Welcome to R&S®NRPV..."](#), on page 7 introduces to the virtual power meter software R&S NRPV.
- [chapter 3, "System Setup"](#), on page 9 provides information required to prepare the application for power measurement. The chapter covers soft- and hardware requirements, describes how to install the software on a personal computer and how to get the application started.
- [chapter 4, "Quick Start Guide"](#), on page 24 covers a short description of the application and some basic information about power measurement. To quickly get started, a step-by step procedure describes how to perform a continuous average measurement.
- [chapter 5, "Operating Concept"](#), on page 47 introduces the operating concept with the basic components of the graphical user interface and how to operate.
- [chapter 6, "Settings - GUI Reference"](#), on page 69 describes menus and functions of the application in detail.
- [chapter 7, "Appendix"](#), on page 169 provides an index and makes familiar with the conventions used in this manual. It covers information on warning messages and R&S information for customer support and service.

## 1.2 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
KEYS	Key names are written in capital letters.
File names, commands, program code	File names, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.
<a href="#">Links</a>	Links that you can click are displayed in blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

## 2 Welcome to R&S®NRPV...

### ... the power meter software application for R&S Instruments

This chapter gives an introduction to the Virtual Power Meter, including main features, scope and system overview.

## 2.1 Introduction

The power meter software application R&S NRPV represents power measurement for the most relevant frequency bands and power classes. By communicating with R&S NRP-Zxx and R&S NRPxxS(N) sensors the program covers a wide range of applications. Besides the basic continuous average measurement function, R&S NRPV also includes the measurement modes timeslot, burst and scope measurement.

The R&S NRP-Zxx and the R&S NRPxxS(N) are highly accurate standalone measuring instruments. With their internal CPU the power sensors process the measurement results and communicate directly with a PC via an USB connection. Additionally, the R&S NRPxxSN, the so called network sensors, are equipped with a Gigabit Ethernet interface with Power-over-Ethernet (PoE) power supply.

With a high dynamic range and automatic error correction the power sensors are suitable for nearly every measurement task. As an example, among other duties, the NRP-Z81 is able to measure pulse parameters automatically, and the R&S NRPV software represents the results.

For measurements with any number of power sensors the graphical user interface of R&S NRPV offers functionality and operation comparable to a multi-channel oscilloscope.

## 2.2 Main Features

R&S NRPV supports all sensor features and settings in the following measurement modes:

- **Trace** measurement for representing signal power in the time domain. If you are working with an NRP-Z8x power sensor, for example, the R&S NRPV also supports **pulse analysis**.
- Numerical measurement modes as:
  - **Continuous** mode to measure the average power of continuous signals
  - **Burst** mode to analyze pulsed signals. R&S NRPV automatically recognizes the start and end of a burst. It is possible to exclude pulse build up and decay phases, for example to omit signal overshoots.
  - **Timeslot** mode to display the values in a defined time segment. The start and stop of a pulse signal can be excluded optionally, for example to fade out slow

edges. It is also possible to exclude time domains during measurements, for example if power fails in certain ranges.

- **Gates** mode to exclude time segments during measurement
- **Statistics** measurements to evaluate the ratio of the signal density/distribution versus power

You can view the measurement results directly, or represent ratios of various traces, and even record and store measurements over a long term. R&S NRPV indicates the measurement results numerically as well as graphically.

In addition, you can setup several measurements in parallel. While a measurement is active, the others are in standby state, and you can quickly and easily switch between them.

## 2.3 Scope of Applications

The R&S NRPV covers apart from other functions the following fields of application:

- Test setups and procedures for **power amplifiers**
- Measurement of the **frequency** and/or **level response**
- Fast measurement of the **transmission characteristics** of filters, amplifiers and frequency converters over a large frequency and dynamic range
- Measurement of **radar systems** and their components
- Measurements compliant with major communication **base station standards** such as GSM, WCDMA, etc.



## 3 System Setup

System setup provides information required to prepare the application for power measurement. The chapter contains soft- and hardware requirements, describes how to install the software on a personal computer and how to get started.



The Virtual Power Meter is provided free of charge on the internet at the download site of Rohde & Schwarz:

<http://www.rohde-schwarz.com/product/NRPV.html>

For using the R&S NRPV with the R&S NRPxxS(N) no license key is needed. You can use the R&S NRPV and all its functions for free.

Power measurements with an R&S NRP-Zxx series power sensor are activated by purchasing a license key for each sensor.

Contact the R&S sales department for purchase. The license key comes with an instruction to activate the power sensor in the Virtual Power Meter.

### 3.1 Hardware

For controlling the sensors by a PC the following hardware prerequisites must be fulfilled

*Table 3-1: Hardware requirements*

	Minimum requirement
<b>CPU</b>	Pentium IV 1 GHz or higher
<b>RAM</b>	1 Gbyte
<b>Hard disk</b>	50 Mbyte free space
<b>Monitor</b>	XGA monitor (1024 x 768)
<b>Interfaces</b>	USB 1.1 or USB 2.0

#### 3.1.1 Accessories (optionally)

- High-speed hubs for USB 2.0 with own power supply for connecting several power sensors. For information on recommended USB hubs refer to [chapter 3.4.3, "R&S NRP-Zxx Multiple Measurement Setup"](#), on page 15
- **NRP-Z3**, active USB adapter cable 3 (only for R&S NRP-Zxx Power Sensors)  
Supports applications that require external triggering of the power sensor, and provides separate power supply.
- **NRP-Z4**, passive USB adapter cable (only for R&S NRP-Zxx Power Sensors)  
Supports all basic functions of the sensors like transmission of settings, measurement data and provides power supply of the sensor via the USB bus.
- **NRP-Z2**, extension cable (only for R&S NRP-Zxx Power Sensors)

Cables of various lengths support test setups with distant sources of up to 10 meters.

- **NRP-Z5**, 4 port USB hub adapter box  
The NRP-Z5 Sensor Hub covers a high-speed USB 2.0 hub. This sensor hub allows to connect up to four R&S NRP-Zxx Power Sensors, and supports various trigger modes, such as:
  - bidirectional triggering from a host, like a PC or an R&S instrument
  - internal triggering
  - external synchronous triggering
  - triggering in master mode together with the NRP-Z8x sensors.

Connection to a sensor is possible with the USB adapter cable NRP-Z4 and with cable extension NRP-Z2.

The NRP-Z5 can be connected to a PC either with the NRP-Z4 adapter cable, or with a standard USB cable. Separate power supply is not required.

- **NRP-ZKU** cable with a USB connector (only for R&S NRPxxS(N))  
Cables of various lengths for connecting the R&S NRPxxS(N) power sensors to USB devices.
- **NRP-ZK6** cable with a push-pull type connector (only for R&S NRPxxS(N))  
Cables of various lengths for connecting the R&S NRPxxS(N) power sensors to supported Rohde & Schwarz instruments.

## 3.2 Software

The Virtual Power Meter software runs on PCs with Microsoft®Windows operating system.

R&S NRPV is available free of charge. You can find the program file

`NRPV_SetupV1.x.y.exe`

for download on the Rohde & Schwarz website:

<http://www.rohde-schwarz.com/product/NRPV.html>

**x** and **y** are sub-version and build numbers.

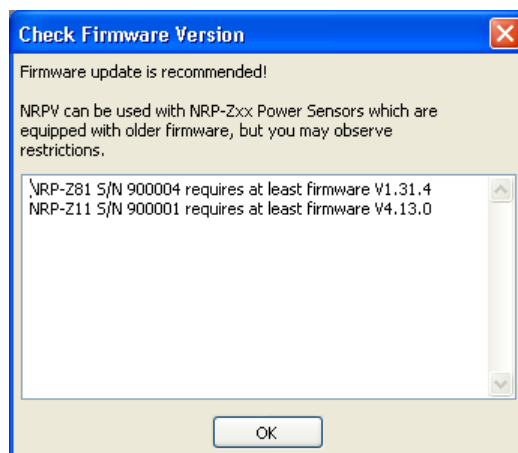
### 3.2.1 R&S NRPV Software Components

The setup program contains all components required for installation and operation of the R&S NRPV.

- `RS_NRPV.exe` the executable application file
- `ReleaseNotes.txt` with up-to date notes on the individual components and software versions.
- Microsoft® Runtime `vc redistrib_x86.exe`

### 3.2.2 Power Sensors Firmware

Since R&S NRPV works closely leant on the functionality of the power sensors, the program checks the firmware version of every connected sensor, and returns a list of the sensors that require a firmware update.



To update the sensor firmware, use the R&S NRP-Toolkit. You find the latest firmware version in the download area of the R&S website:

<http://www.rohde-schwarz.com/en/product/nrpz.html>

[http://www.rohde-schwarz.com/en/product/nrp\\_s\\_sn.html](http://www.rohde-schwarz.com/en/product/nrp_s_sn.html)

**Table 3-2: Required firmware versions**

	Minimum
NRP-Z1x	V4.13 or later
NRP-Z2x	V4.13 or later
NRP-Z3x	V4.13 or later
NRP-Z5x	V4.13 or later
NRP-Z8x	V1.31.04 or later
NRP-Z9x	V4.13 or later
NRPxxS/ NRPxxSN	V14.12 or later

## 3.3 Installing R&S NRPV Virtual Power Meter Software

This section describes the installation of the R&S NRPV software on a Microsoft® Windows based PC. Additionally, the section contains information on the software packages, prerequisites and uninstalling.

### Prerequisites

- Use the latest version of the R&S NRPV software. It is provided at the R&S website <http://www.rohde-schwarz.com/product/NRPV.html>.
- Close all running applications before installing.

### 3.3.1 Installing R&S NRPV

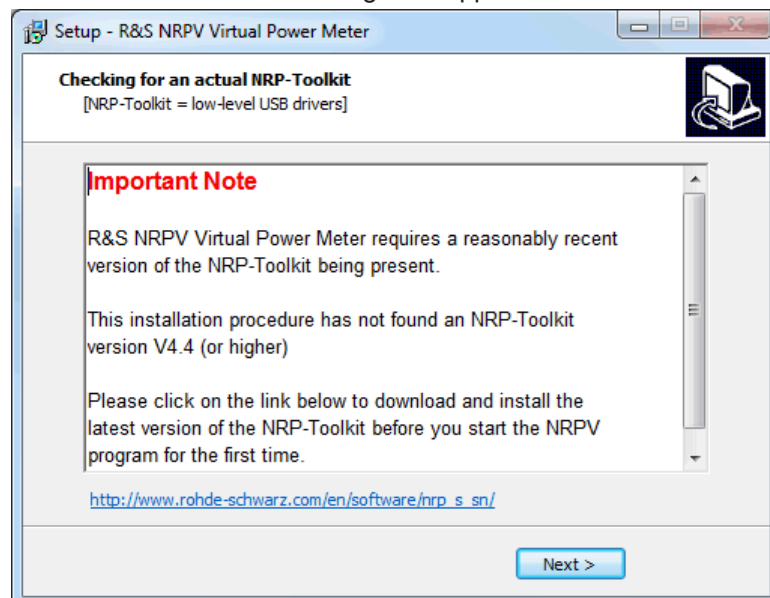


R&S NRPV requires at least 50 MB of free disk space.

1. Download the latest version of the R&S NRPV setup program from the R&S website <http://www.rohde-schwarz.com/product/NRPV.html>.
2. Execute `NRPV_SetupV1.x.y.exe`, and follow the instructions of the setup wizard.

During installation, the setup program:

- Installs the "Microsoft VC Runtime libraries", which may take some time
- Provides selection of the destination directories for the R&S NRPV application files
- Checks whether a current version of the NRP-Toolkit is installed on the computer. If this is not the case a message will appear:



The NRP-Toolkit can be downloaded for free on the R&S website: [http://www.rohde-schwarz.com/en/software/nrp\\_s\\_sn/](http://www.rohde-schwarz.com/en/software/nrp_s_sn/)

### 3.3.2 Uninstalling R&S NRPV

Uninstall a version of R&S NRPV with the aid of the PC's control panel:

1. In the Windows task bar, "Start > Settings > Control Panel"
2. Select "Add or Remove Programs".
3. In the dialog, select Virtual Power Meter V1.x.y (x.y. represents the version).
4. To uninstall the program, select "Uninstall".

## 3.4 Connecting an R&S Power Sensor to the PC

This section shows some basic test setups and the cabling.

### NOTICE

#### Putting the Power Sensors into Operation

- Functions and features your power sensors are described in the corresponding operating manual of the sensor, included in delivery.
- To prevent damage to the sensor, follow closely the instructions, how to put the sensor into operation.
- Make sure that all sensors are connected to the PC (either directly or via USB hubs) when starting R&S NRPV. For Information on how to check that a power sensor is working properly see [chapter 3.7.2, "Check if a power sensor is working properly"](#), on page 22



If an R&S NRP-Zxx Power Sensors is being connected to the PC the first time, the application installs the USB driver for the sensor automatically. USB drivers for the power sensors are provided with the R&S NRP-Toolkit.

### 3.4.1 Connecting the R&S NRPxxS(N) to a PC

There are different ways for connecting the R&S NRPxxS(N) power sensors to a PC. For a description of this setups refer to the user manual of your sensor.

### 3.4.2 R&S NRP-Zxx Single Measurement Setup

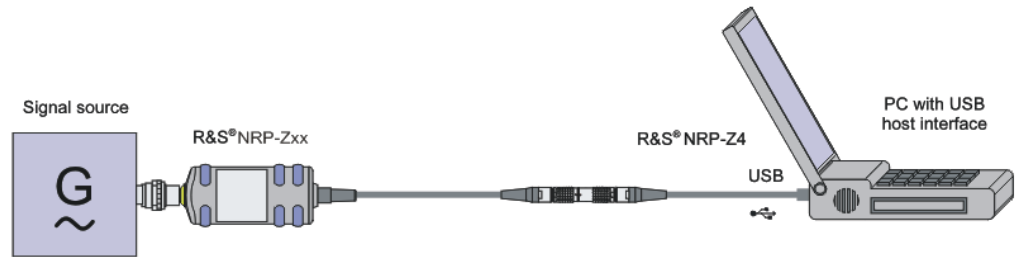


Fig. 3-1: Measurement setup with a passive adapter cable NRP-Z4


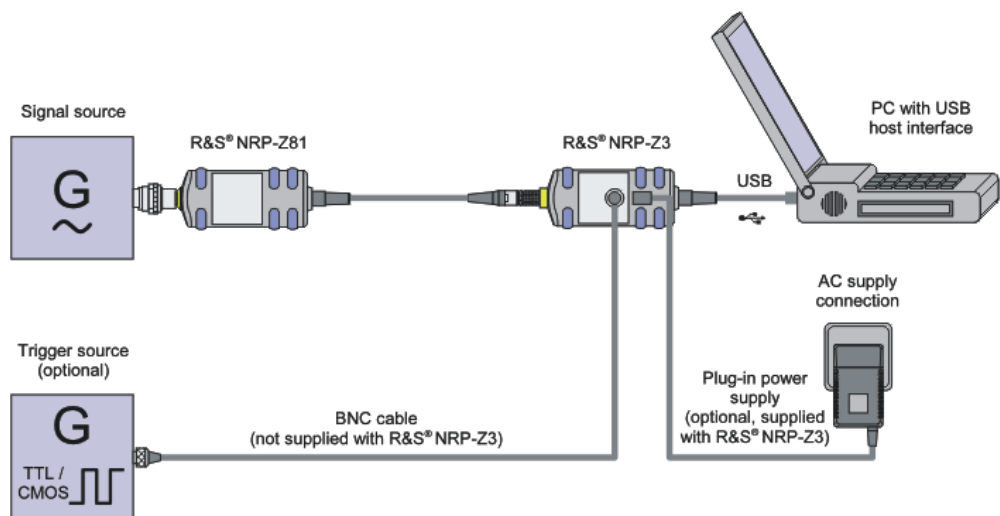


Fig. 3-2: Measurement setup with an active adapter cable NRP-Z3

1. Connect the R&S NRP-Zxx Power Sensors with the USB port of the PC using the NRP-Z3 or NRP-Z4 adapter cables.
2. Connect the signal source (DUT - Device Under Test) and the power sensor.

### 3.4.3 R&S NRP-Zxx Multiple Measurement Setup

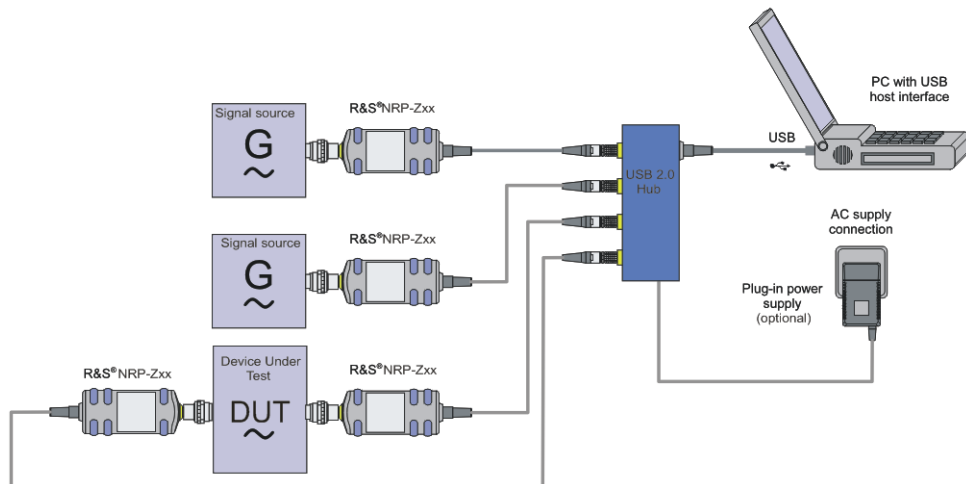

**Fig. 3-3: Multiple measurement setup with a USB 2.0 hub**

If an application works with more than one R&S NRP-Zxx Power Sensors, you probably need a USB hub. It is recommended that you use an NRP-Z5 Sensor Hub which perfectly fits to R&S power sensors.

1. Connect the R&S NRP-Zxx Power Sensors and the USB hub using the NRP-Z3 or NRP-Z4 adapter cables
2. Connect the USB hub's upstream port with a USB port of the PC.
3. Connect the signal sources and the power sensors

The following section provides additional information related to the USB interface and information on operating multiple sensors simultaneously.

#### Multiple Sensors

If multiple sensors need to be connected to one computer, make sure that the USB device can provide the required amount of current for all sensors. A sensor may need between 300 mA and 500 mA.

#### Example:

The NRP-Z81 sensor needs up to 500 mA supply current. Using 4 sensors simultaneously on one USB hub requires a total current of at least 2 Amperes.

Even if the rated current values are given in the data sheets, commercially available USB hubs often do not reliably provide this amount of supply current over a long period of time.




It is recommended that you use the NRP-Z5 sensor hub, a 4 port USB hub adapter box, which perfectly fits to R&S NRP-Zxx Power Sensors.

Otherwise, for industrial-grade applications USB hubs for DIN rail mount can provide up to 1 Ampere per USB port and run off a 24 V power supply.

The following manufacturers provide such devices:

- Beckhoff <http://www.beckhoff.com> CU8005
- Luetze <http://www.luetze.de> 745581 DIOHUB USB 4

### 3.4.4 R&S NRP-Zxx Complex Measurement Setup

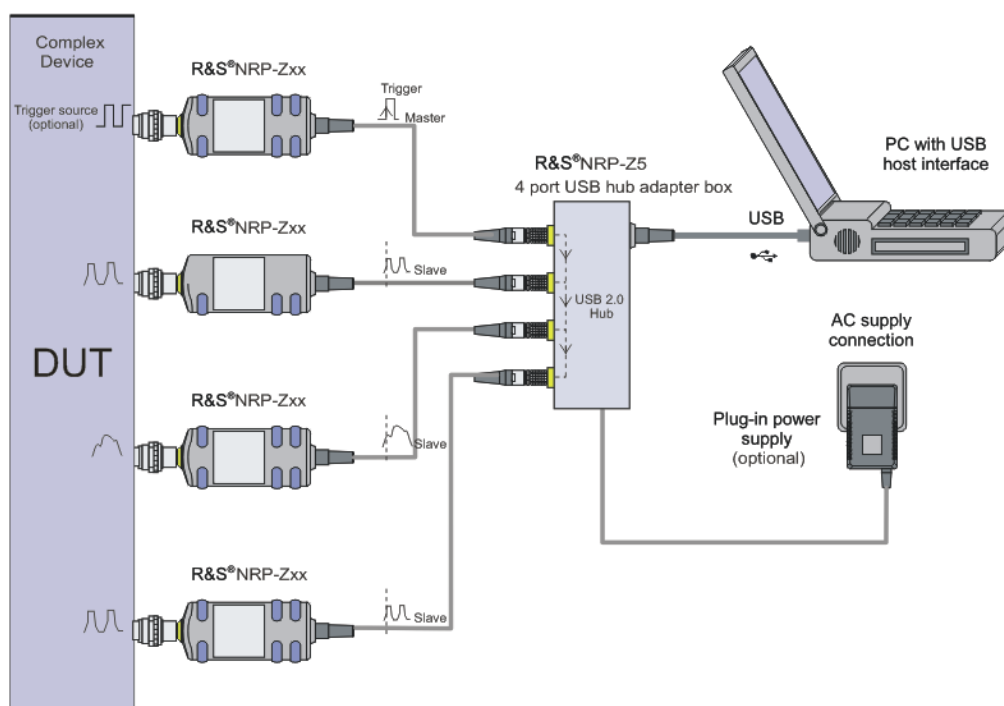

**Fig. 3-4: Complex measurement setup with a 4 port USB hub adapter box NRP-Z5**

1. Connect the plug in power supply
2. Connect the external trigger source
3. Connect the R&S NRP-Zxx Power Sensors and the USB hub using the NRP-Z3 or NRP-Z4 adapter cables
4. Connect the signal sources and the power sensors



## 3.5 Starting the R&S NRPV Software



### License required

For using the R&S NRPV with the R&S NRPxxS(N) no license key is needed. You can use the R&S NRPV and all its functions for free.


Power measurement with R&S NRP-Zxx Power Sensors and R&S NRPV requires a license key for activating the sensor. Contact the R&S sales department for purchase.

If you have already purchased license(s), refer to [chapter 3.6.1, "Activating with License"](#), on page 19 for activating your sensor in the R&S NRPV.

If a sensor is connected without a license, you can activate the sensor temporarily, for example, to explore the functionality of the software. See [chapter 3.6.2, "Activating without License for Temporary Use"](#), on page 20.

To start the R&S NRPV perform one of the following:

- In the Windows taskbar, select "Start > Programs > NRPV Virtual Power Meter > NRPV Virtual Power Meter"



**Fig. 3-5: Start R&S NRPV**

- On the desktop, select the "R&S NRPV" icon.



**Fig. 3-6: R&S NRPV Desktop icon**

The icon has been automatically created during installation.

- In the Windows Explorer, select `%PROGRAMFILES%\Rohde-Schwarz\RS_NRPV.exe`, where `%PROGRAMFILES%` is a system variable and refers to the directory, programs are installed in.

Immediately after turning on the start screen appears until the application is ready for operation. The application opens in a specific preset configuration, see [chapter 6.2.2, "Startup Configuration"](#), on page 72.

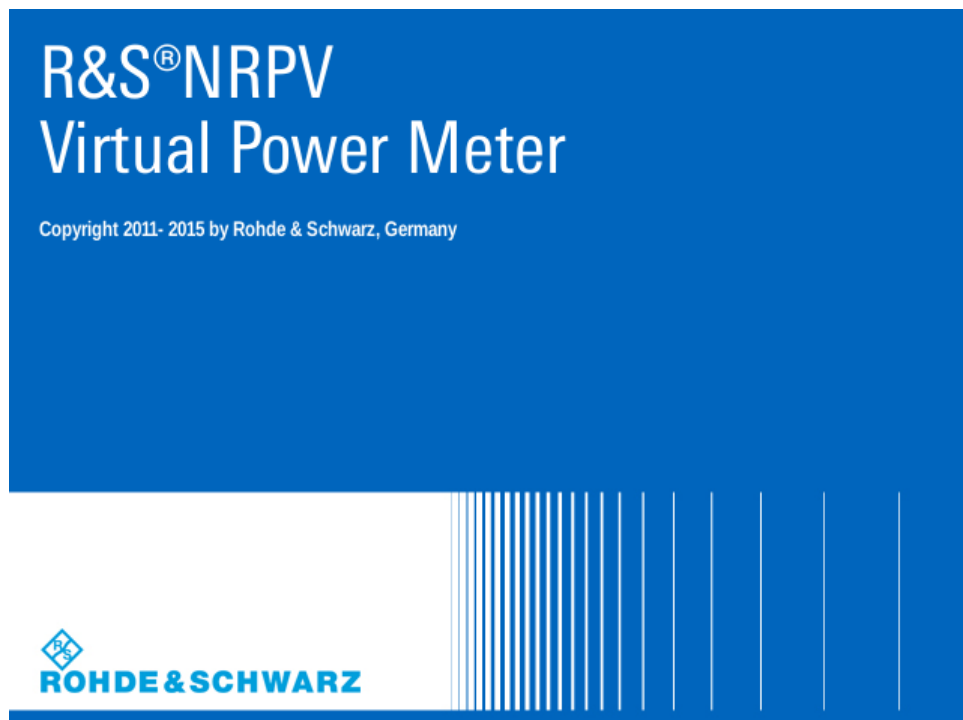


Fig. 3-7: Startup Screen



### R&S NRPV Startup Configuration

In this dialog you can select the following startup configuration:

- The last active state
- A user definable mode, specified in a task file.
- Default settings

## 3.6 Activate an R&S NRP-Zxx Power Sensors in R&S NRPV

While the R&S NRPxxS(N) series of USB power sensors contain an activation key for the NRPV as a factory default, the R&S NRP-Zxx series power sensors need to be activated for the use with NRPV.


If you have already purchased a license key for your R&S NRP-Zxx sensor, proceed as described in the following section. Alternatively, you can activate a sensor without a license temporarily, to explore the functionality and scope of the Virtual Power Meter.

### 3.6.1 Activating with License

In the delivery you find a license key that unlocks your NRP-Zxx sensor in the R&S NRPV. If you want to perform tasks with several power-sensors, you need a license key for each sensor.


To activate the sensor, proceed as follows:

1. Start R&S NRPV and first connect the sensor.
2. In the "File" menu, select "File > Licensing"

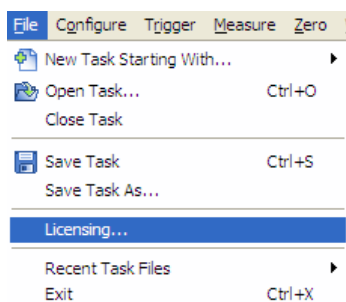

**Fig. 3-8: File > Sensor licensing**

The "Licensing NRP-Z Power Sensors for NRPV" dialog opens.

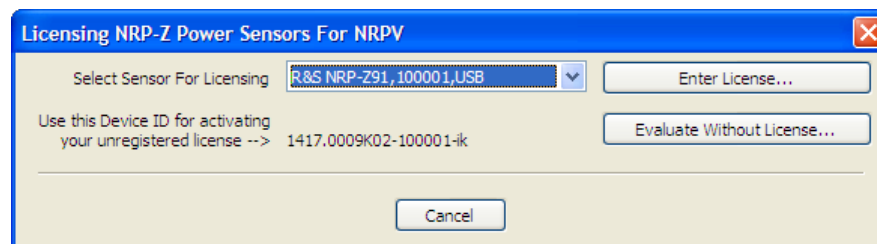


**Fig. 3-9: Licensing NRP-Z Power Sensor for R&S NRPV**

The dialog indicates all currently connected sensors for selection.

3. Select the sensor.
4. Select "Enter License".


The "License Activation" dialog opens.

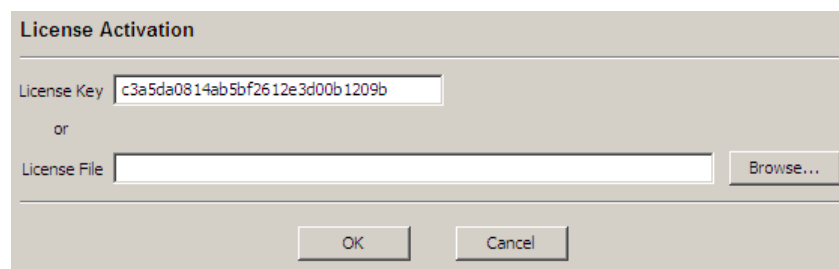

**Fig. 3-10: License Activation**

Activate an R&S NRP-Zxx Power Sensors in R&S NRPV

5. Enter the license key either manually or with the key code file.
6. Confirm with "OK" to return to the "Licensing NRP-Z Power Sensors for NRPV" dialog.

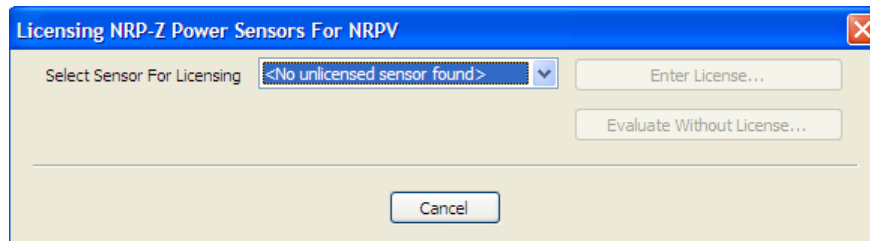

**Fig. 3-11: Licensing NRP-Z Power Sensor for R&S NRPV > completed**

Are there still sensors listed, repeat the process for each one, provided you have the appropriate number of licenses.


The "<No unknown sensor found>" message confirms that no unlicensed sensor is connected.

All sensors are enabled and ready for operation with R&S NRPV

### 3.6.2 Activating without License for Temporary Use


If you want to evaluate the R&S NRPV before buying a license for your R&S NRP-Zxx Power Sensors:

1. In the "File" menu, select "File > Licensing"  
The "Licensing NRP-Z Power Sensors for NRPV" dialog opens.
2. Select "Evaluate Without License..."

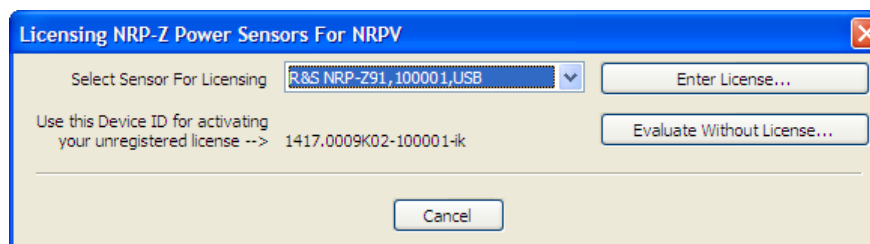

**Fig. 3-12: Licensing NRP-Z Power Sensor for R&S NRPV > evaluate without license**

The "Input Text" dialog opens and displays a code sequence for activation.

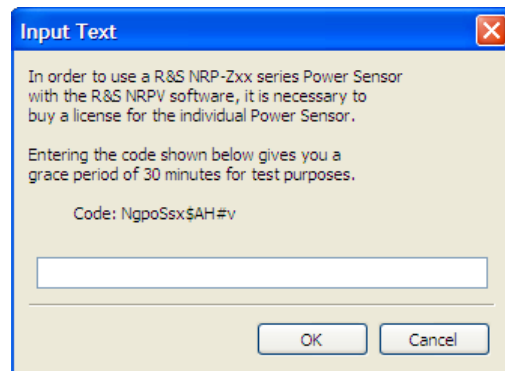

**Fig. 3-13: Licensing NRP-Z Power Sensor for R&S NRPV > code without license**

The code is generated randomly and changes with each new call.

3. Enter the displayed "Code" string exactly as shown in the "Input Text" dialog box. The coding is case sensitive.
4. Confirm with ok.

This function activates your power sensor for a period of time.


Power sensors which are enabled temporarily show a thin red bar beneath their icon in the program's status bar. The length of this bar decreases until the evaluation period is expired.

## 3.7 Troubleshooting for Setup Related Problems

This chapter contains information to possibly arising problems concerning restrictions, the USB interface or if several sensors are attached.

### 3.7.1 Known Restrictions

Only one instance of R&S NRPV can run at a time, multiple program invocation is not supported. At program start, a test routine checks if any other instance is already running. If the program is started twice, a warning message appears.

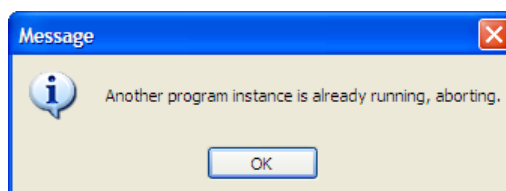


**Fig. 3-14: Single instance warning**

A simultaneous operation of R&S NRPV with other software using the R&S power sensors (for example R&S Power Viewer Plus) is also not supported.


### 3.7.2 Check if a power sensor is working properly

1. On the desktop, select "Start > Settings > Control Panel".

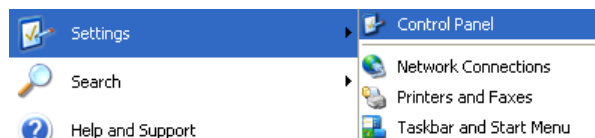

**Fig. 3-15: Settings > Control Panel**

2. Select the "System Properties" dialog.

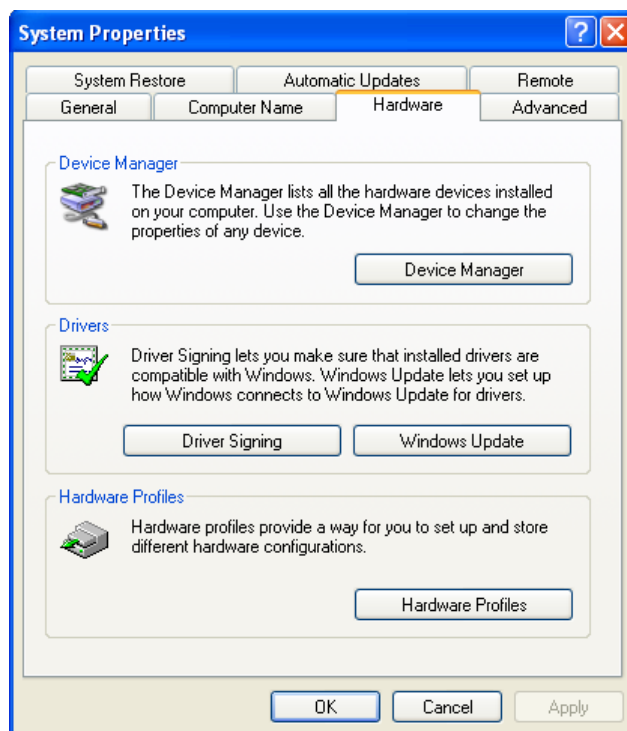

**Fig. 3-16: System Properties**

3. In Hardware tab select "Device Manager."



Fig. 3-17: Device Manager

If the power sensor and its drivers are installed and working properly, it is listed in the "R&S NRP-Z Power Sensors" section of the "Device Manager". If an unknown device is shown instead, check the items listed in the [chapter 3.7.3, "USB Related Problems"](#), on page 23.

### 3.7.3 USB Related Problems

#### Hardware

- Use only high-speed hubs with own power supply.
- Disconnect the power supply of the hub when switching off the computer. Connect the hub's power supply before starting Microsoft®Windows.
- Do not cascade hubs unnecessarily.
- Use only connection cables of high speed USB 2.0 hubs.
- Exchange hub if all points above are not successful.

#### Software

- Use one of the supported Microsoft®Windows operating systems:
  - Microsoft Windows XP with the latest available service pack for Microsoft®Windows XP, i.e. SP2
  - Microsoft Windows Vista
  - Microsoft Windows 7
  - Microsoft Windows 8/8.1
- Use the latest version of the R&S NRP-Toolkit software (version 4.4.0 or higher, available at [http://www.rohde-schwarz.com/en/software/nrp\\_s\\_sn/](http://www.rohde-schwarz.com/en/software/nrp_s_sn/) under **Downloads > Firmware/Software**).

## 4 Quick Start Guide

This section introduces the graphical user interface and contains some basics to power measurement.

An instruction to perform a standard continuous average power measurement takes you step-by-step through the information required, to get used to the R&S NRPV basic modes of operation.

The Quick Start Guide contains:

- [chapter 4.1, "GUI Overview"](#), on page 24  
Describes briefly the main components of the user interface. In general, the menus, dialogs and functions are largely self-explanatory. Characteristics to specific applications or settings are explicitly stated.  
For detailed information on every item of the GUI refer to [chapter 5.1, "Graphical User Interface \(GUI\)"](#), on page 47.
- [chapter 4.2, "Basic Information on Power Measurement"](#), on page 29  
Contains some information on power measurement for RF and microwave signals.
- [chapter 4.3, "Performing a Measurement with R&S NRPV"](#), on page 31  
Describes how to get started by selecting the power sensor, the signal channel, configuring the test signal and results display.


### 4.1 GUI Overview

Starting the R&S NRPV software the main application window opens. The appearance is based on the Microsoft® Windows layout. Measurements are displayed in additional windows. The appearance of those windows varies, depending on the measurement mode and the required settings.



## 4.1.1 Windows

### Main Application window

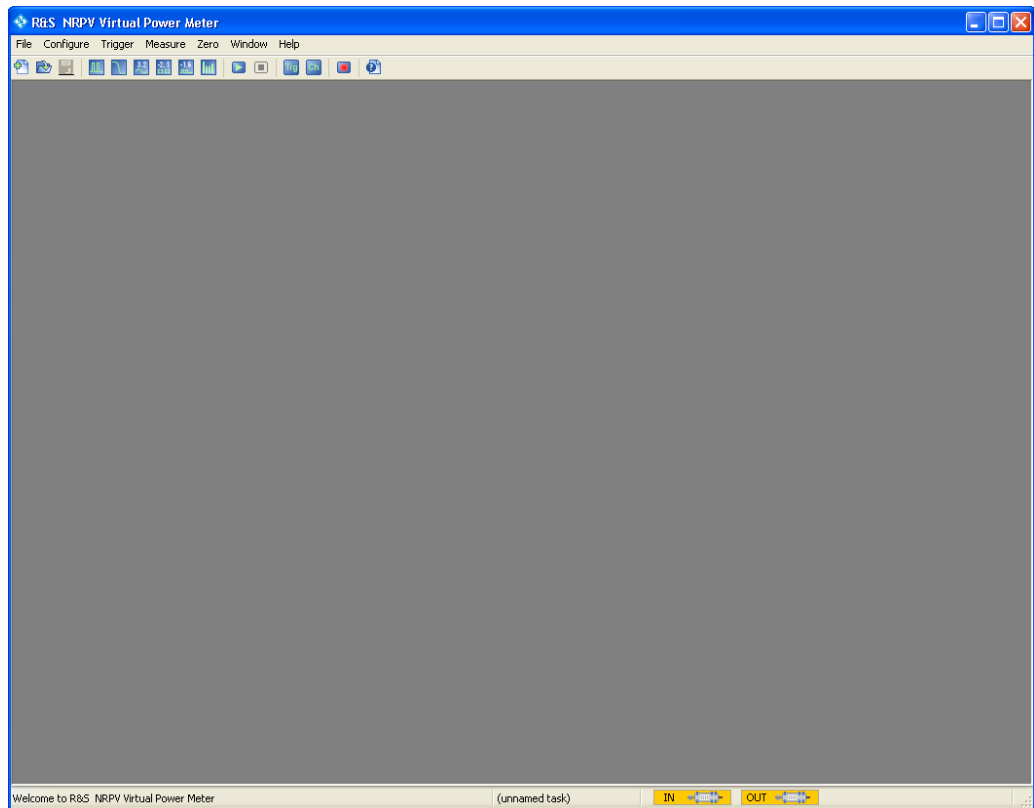

**Fig. 4-1: Main application window of R&S NRPV**

The main window of the application covers a menu bar with several pull-down menus and a toolbar with icons of the most important functions. Similar to Microsoft® Office functionality, the icon buttons are the alternative possibility for starting a function. The status bar informs about the connected power sensors and the currently active tasks.

### Measurement windows

Measurement windows look different depending on the measurement mode. It is distinguished between numerical and graphic measurement windows.

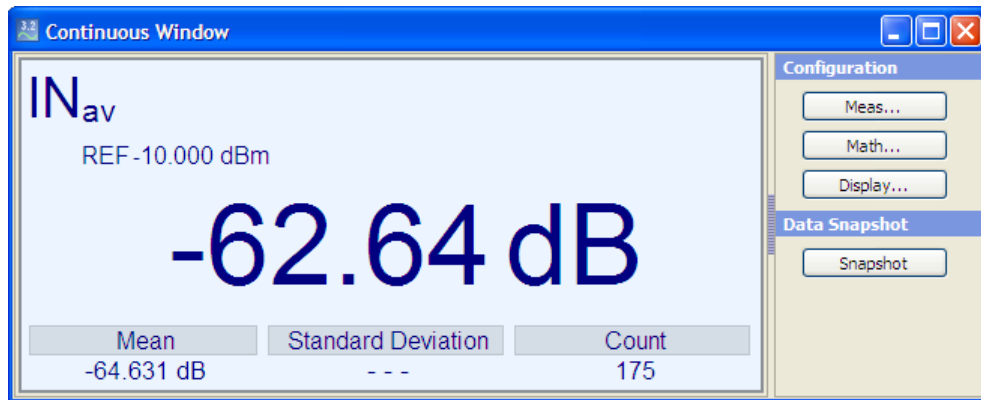


Fig. 4-2: Numeric measurement window of R&S NRPV

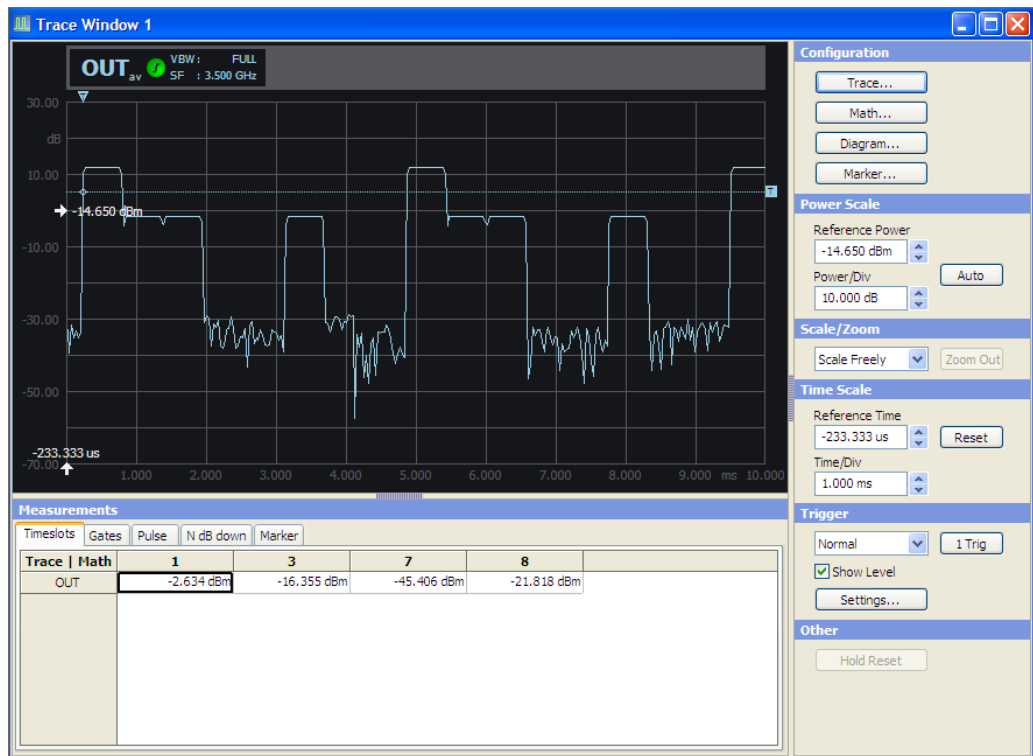


Fig. 4-3: Trace window of R&S NRPV

Measurement windows are tiled in several sections.


In the display area, you can graphically display the measurement results. On the right the control panel provides softkeys for accessing further dialogs and entry fields with measurement related settings. In the lower area of the window, measurement panels indicate numerical measurement results.

Additionally, you can open a context-sensitive menu within each results display, also providing access to further functions.

## 4.1.2 Dialogs

Configuration dialogs are designed in Microsoft® Windows format, covering the same main elements, as e.g. tabs, entry fields, check boxes or buttons. Each dialog provides buttons to apply, confirm or cancel the entered settings

### Configuration dialog

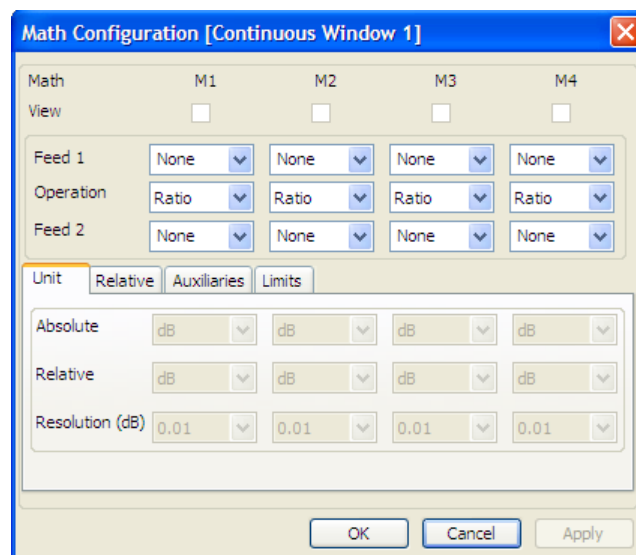


*Fig. 4-4: Configuration dialog*

Configuration dialogs cover entry fields for measurement related settings.

## 4.1.3 Menus

The menu bar of R&S NRPV contains the main menu items. Some items include sub-menus with additional functions.




*Fig. 4-5: Menu bar*

The following main menus are available:

- **File:** Contains all functions that belong to file management.
- **Configure:** Contains basic parameters for configuring a measurement, such as frequency, channel settings or predefined digital communication signals. In addition, you can determine the colors for displays and curves individually.
- **Trigger:** Contains the functions for setting the parameters of externally connected trigger sources.
- **Measure:** Menu for selecting the measurement mode.
- **Zero:** Menu for zero error correction.
- **Window:** Menu containing the functions for window handling.


- **Help:** R&S NRPV Help.
- ▶ To access a menu use the mouse or the ALT+<KEY> combination on the keyboard.

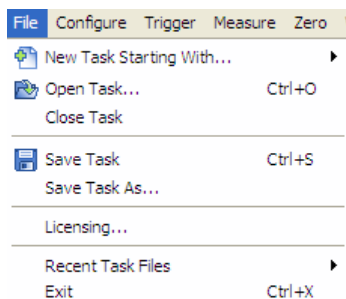

**Fig. 4-6: Standard menu**

Within the results display of a measurement window, you can also access the configuration dialogs or additional functions via context-sensitive menus.


- ▶ To access a context-sensitive menu, right click in a measurement window.

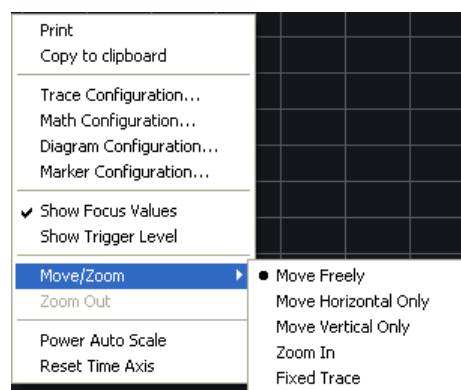

**Fig. 4-7: Context-sensitive menu**

See [chapter 5.1.4.2, "Context-sensitive Menus"](#), on page 60 for detailed information.

#### 4.1.4 Toolbar

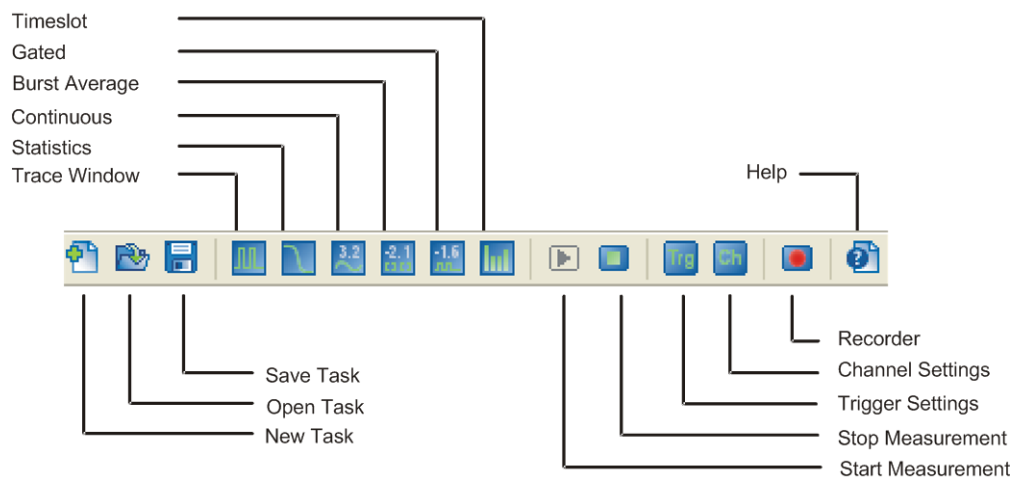

**Fig. 4-8: Toolbar**

The toolbar of the main application window covers icons of the most important functions.

- ▶ To start a function of the R&S NRPV toolbar, perform one of the following:
  - In the toolbar, select the corresponding icon.
  - On the keyboard, use the associated shortcut.

Each icon features a corresponding item in the menu lists. For detailed assignment on icons and shortcuts to the corresponding functions see [chapter 5.1.5, "Icons, Toolbar and Shortcuts"](#), on page 61.

## 4.2 Basic Information on Power Measurement

The following sections contain some basics to power measurement for RF and microwave signals.



Some contents of the following sections are taken from the R&S brochure 'Voltage and Power Measurements - Fundamentals, Definitions, and Products'. You can find the brochure for download on the R&S Website <http://www.rohde-schwarz.com/en/product/nrpz.html>

### 4.2.1 Introduction

The intensity of RF and microwave signals is given in terms of power. Therefore, measuring electrical power is significant for RF and microwave applications.

With the development of carrier-based telecommunications also the measurement of power, voltage and current has improved. Mainly based on converting electrical energy into heat, direct voltage and current measurement can be made up into the GHz range.

Voltage and current are less appropriate because they depend on the physical characteristics of the transmission medium and field strength. They differ for the same transmitted power. Also, voltage and current can not directly be measured in waveguides and for standing waves large measurement errors occur.

The rate of energy flow, **power**, is the absolute measurable value of the wave intensity. In high frequencies ranges the wavelength of the electromagnetic field affects the wave properties and characteristics, caused by lines and subassemblies. To be taken into account for power measurement, wavelength and magnitude of the electromagnetic field are of the same order as the signal wavelength. Additionally, all components in a power transmitter or amplifier, e.g. the AC line connector, the cooling system or coaxial RF output, depend on the magnitude of the RF power.

Besides the effects mentioned above, several critical factors may cause errors in the measurement of RF power. For instance, the loading effects of measuring equipment on the DUT, inherent physical factors or unsuitable probes may increase measurement uncertainty.

To carry out a power measurement correctly, it is essential to assort the most appropriate measurement equipment for the respective application. For a wide variety of tasks Rohde & Schwarz provides suitable power meters and power sensors.

#### 4.2.2 Definition of Electrical Power

Power is defined as the amount of energy absorbed or transferred in a system per unit of time. The power transmitted across an interface is then the product of the instantaneous values of current and voltage at that interface.

$$p(t) = v(t) \times I(t)$$

For **sinusoidal signals** encountered in RF and microwave engineering, the instantaneous power  $p(t)$  oscillates about the average power at a frequency that is twice that of the original waveform. Only the average power can be measured in practice and is referred to as power  $P$ .  $P$  is referred to as **active power** and is related to the RMS voltage  $V$ , the RMS current  $I$  and the phase  $\varphi$  by the following equation:

$$P = V \times I \times \cos\varphi$$

For **modulated sinusoidal signals** the average of  $P$  over the modulation period is called the **average power**  $P_{\text{avg}}$

This power e.g. is indicated by a thermal power meter (sensor).

#### 4.2.3 Units and Power Level

Electrical power is measured in W [Watt]. Because of the large power ranges that have to be measured, values are usually expressed as the log of a power ratio. A relative

power level  $L_y$  is expressed in terms of the log of the ratio of a power  $P$  to an arbitrary reference power  $P_0$ . The units of the power ratios are dB.

$$L_y = 10 \log_{10} (P/P_0) \text{ dB}$$

$$L_{\text{abs}} = 10 \log_{10} (P/P_0) \text{ dB}$$

The absolute power level  $L_y$  refers to 1 mW and is measured in dBm:

$$L_{\text{abs}} = 10 \log_{10} (P/1 \text{ mW}) \text{ dB}$$

$$P = 1 \times 10^{L_{\text{abs}}/10} \text{ dBm} \text{ mW}$$

See the following list of the corresponding absolute and relative power level values in the range  $10^{18}$ :

**Table 4-1: Units and power level**

Power P	Level Labs [dBm]	Power Ratio
1 pW	-90	$10^{-9}$
1 nW	-60	$10^{-6}$
1 $\mu$ W	-30	$10^{-3}$
0.1 $\mu$ W	-10	0.1
0.25 mW	-6	0.25
0.5 mW	-3	0.5
1 mW	0	1
2 mW	+3	2
4 mW	+6	4
10 mW	+10	10
100 mW	+20	100
1 W	+30	$10^3$
1 kW	+60	$10^6$
1 MW	+90	$10^9$

### 4.3 Performing a Measurement with R&S NRPV

This section describes briefly how to basically set up a power measurement, by using an R&S signal generator as signal source and a power sensors as the measuring instrument.

Because the power measurement system is to be terminated, the power sensor also acts as the load, set up without external triggering and power supply. Source and load are connected to a standard coaxial transmission line with the characteristic impedance. The signal source generates an RF test signal. The R&S NRPV indicates the signal power measured by the power sensor. The sensor runs with continuous initiali-

zation enabled and thus sends measurement results without waiting for any trigger events.

In continuous average mode the average signal power is continuously measured without the measurement window and the signal being synchronized.

During the measurement period, samples are measured at equal intervals. The results of two adjacent measurement windows are combined. The average of both is either output as the final result or used as an intermediate result for further averaging.



Not all power sensors support all of the examples described below.

### 4.3.1 Setting up the measurement

1. Check that the required system components are available as listed below:
  - PC
  - R&S Power Sensor (e.g. R&S NRP-Z81)
  - R&S Signal Generator
  - passive adapter cable R&S NRP-Z4 for the R&S NRP-Zxx sensors or NRP-ZKU cable for the R&S NRPxxS(N) sensors
2. Check that the system is setup as required.  
For the R&S NRP-Zxx power sensors set up the measurement system as described in [chapter 3.4.2, "R&S NRP-Zxx Single Measurement Setup"](#), on page 14  
For the R&S NRPxxS(N) power sensors set up the measurement system as described in the user manual of the sensor.
3. Check that the PC is ready for operation. It is assumed that all software components are installed as described in [chapter 3.3, "Installing R&S NRPV Virtual Power Meter Software"](#), on page 11.
4. Switch on the R&S Signal Generator.
5. To start R&S NRPV on the PC, select "Start > Programs > RS-NRPV > Virtual Power Meter"
6. Check if the power sensor has reached its operating temperature.

### 4.3.2 Generating the Test Signal

An RF signal with 1 GHz and 0 dBm level is generated, in accordance with the digital signal standard GSM, a worldwide used TDMA standard for cellular mobile radio networks.

For setting the signal parameters on your generator, proceed as follows:

1. Activate default (preset) state for starting from a known position.



2. Select and activate digital standard signal.
3. Set the signal level and frequency.
4. Activate the signal output.


### 4.3.3 Measuring the Average Power

#### 4.3.3.1 Configuring the Channel, Sensor and Signal Frequency


##### Configure the channel settings

To configure the channel settings, perform the following steps:

1. Select "Configure > Channel Assignment"

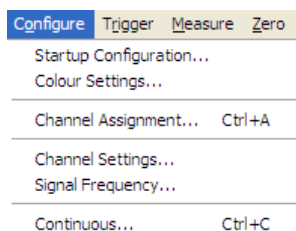


**Fig. 4-9: Context-sensitive menu**

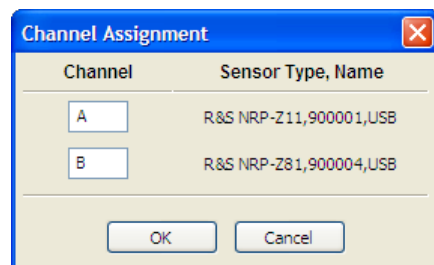

**Fig. 4-10: Channel assignment dialog**

2. In the "Channel Assignment" dialog, assign a short name to a channel  
By default, each channel is denoted by capital letters.

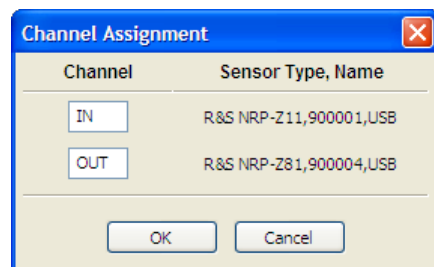

**Fig. 4-11: Channel assignment > assigned name**

At a maximum you can assign three letters, as for example "IN" or "OUT". Right next, to the channel, R&S NRPV shows the sensor type, its serial number and connectivity of the connected sensor.

**Note:** With one power sensor connected R&S NRPV automatically assigns the power sensor to channel A.

In case more sensors are connected, proceed as follows:


- a) Select the channel intended for measurement.
- b) Assign the short name *OUT*.
- c) Select "Apply" to assign the selection.  
Skip these steps if the channel is already activated.
- d) Close the dialog with "OK".

### Initializing the power sensor

To prevent any previous settings from causing incorrect results always run a new measurement with reset of the sensor.

To initialize the power sensor, proceed as follows:


1. Turn off the test signal before zeroing.  
An active test signal during zeroing causes an error because the measured power is too high.
2. Select "Zero > Select > OUT" (channel short name)



**Fig. 4-12: Zero channel**

Zeroing starts in channel "OUT". This procedure checks the confidence level of the sensor results.

Zeroing takes several seconds. At run time a "Zeroing in progress..." message pops up. When completed the message terminates zeroing successfully or reports an error (Success / Failed).

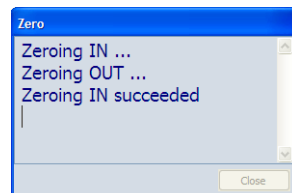


**Fig. 4-13: Zeroing in process**


### Setting the frequency

The carrier frequency of the applied signal must be set for reaching the specified measurement accuracy.

1. To set the frequency, select "Configure > Signal Frequency...".

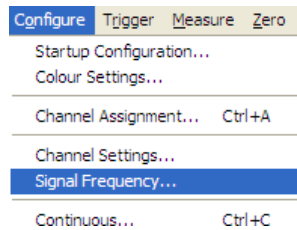

**Fig. 4-14: Configure > Signal frequency**

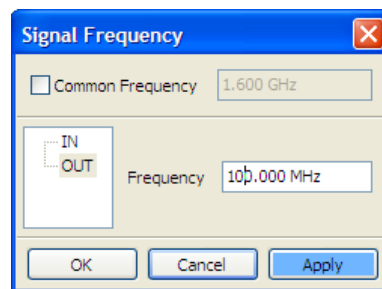

**Fig. 4-15: Signal frequency dialog**

The "Signal Frequency" dialog opens, where you can determine the signal frequency. The frequency value of the selected channel is indicated.

2. Select the channel.
3. Enter 1.0 GHz signal frequency.  
**Tip:** Use a dot as decimal separator.
4. Select "Apply" to assign the entry.
5. Close the dialog with "OK".

#### 4.3.3.2 Configuring the Measurement Window

##### Setting up the measurement window




A measurement comprises at least two measurement windows, i.e. 2 x aperture time and a sensor specific dead time of up to 100  $\mu$ s.

By default a power sensor is set to an aperture time of a few microseconds to minimize the inherent noise component in the measurement result. For an unmodulated signal, as it is in this example, the default setting of 10  $\mu$ s in conjunction with chopper stabilization provides optimum noise suppression.


To set up a continuous average measurement window, proceed as follows:

1. In the menu bar, select "Configure > Continuous".

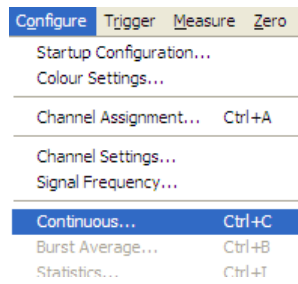

**Fig. 4-16: Configure > Continuous**

Opens the Continuous Average dialog to enter the aperture time and to activate smoothing.

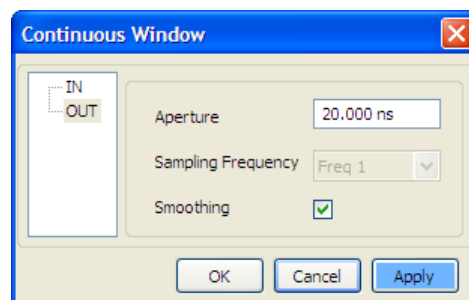

**Fig. 4-17: Configure Continuous > Aperture time**

2. Select the channel.
3. In the "Aperture" entry field, enter  $10 \mu\text{s}$ .


The aperture time defines the size of the measurement window. The aperture time of the selected channel is indicated.

4. Select "Apply" to assign the entry.
5. Close with "OK."

#### 4.3.3.3 Execute Measurement


1. Start the measurement
  - a) To start the measurement, switch on the test signal of the signal source.

b) In the menu bar, select "Measure > Continuous".

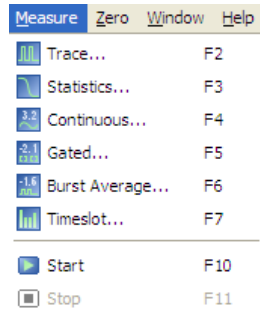

**Fig. 4-18: Measure menu**

The "Continuous" measurement window appears. It shows the measurement results numerically, and the control panel for accessing further dialogs with parameters for measurement, evaluation and display.

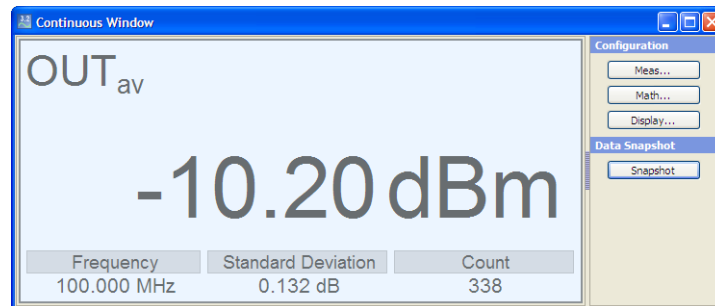


**Fig. 4-19: Continuous window**

The measurement result is displayed in dBm as the default unit setting for continuous average power measurement.


2. Change the unit of the measurement result.

- a) In the "Continuous Window", select "Meas..." to open the "Measurement Configuration" dialog.

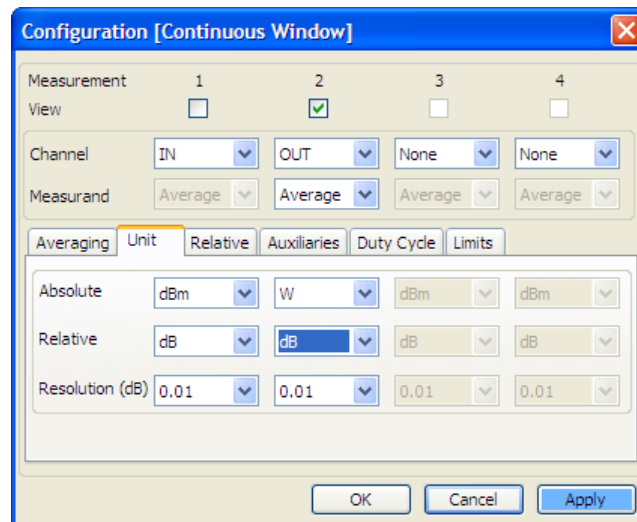

**Fig. 4-20: Configuration > Continuous window**

- b) Select the "Unit" tab in the lower area of the dialog.  
 c) Select "W" in the "Absolute" selection list.  
 d) Click "Apply" to assign your entry and confirm with "OK".

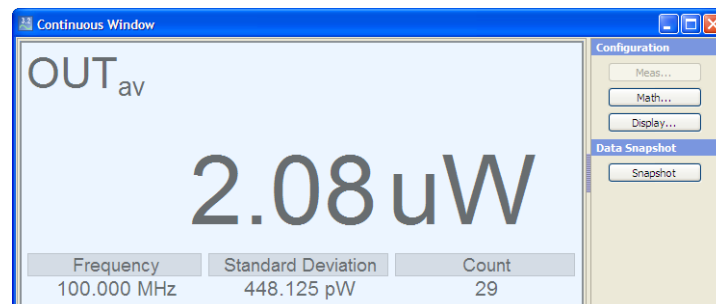


**Fig. 4-21: Continuous window > results in [Watt]**

The measurement result is displayed in [W].


3. Set a fixed offset correction.  
 If the signal level is higher than the permissible input level of the sensor, an attenuator is connected between the signal source and the sensor, to prevent the sensor from damage. In order to adjust the attenuation, an offset correction value must be set. This value compensates the difference between the real signal level and the level at the sensor's input. The indicated value corresponds to the real signal level.

- a) In the menu bar, select "Configure > Channel Settings".

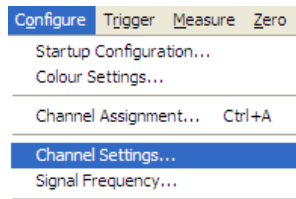

**Fig. 4-22: Configure > Channel settings**

- b) Select the channel.

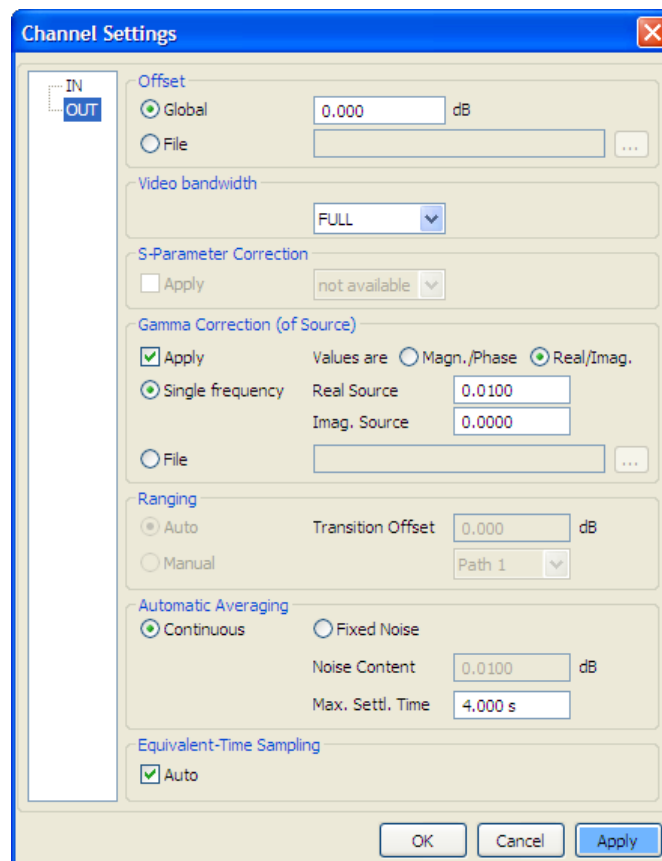

**Fig. 4-23: Channel settings dialog**

- c) In the "Offset" section, select "Global".  
 d) Enter the associated attenuation value.  
 e) Select "Apply" to assign your entry and confirm with "OK".

**Note:** To make sure, that the devices perfectly match, it is recommended that you only use an R&S attenuator.

4. Measure power relative to a reference value.  
 The R&S NRPV calculates and displays relative differences between a measured value and a reference value. As a reference, you can use a previously stored value, or you can specify it directly.

- a) In the "Continuous Window", select "Meas..." to open the "Measurement Configuration" dialog.

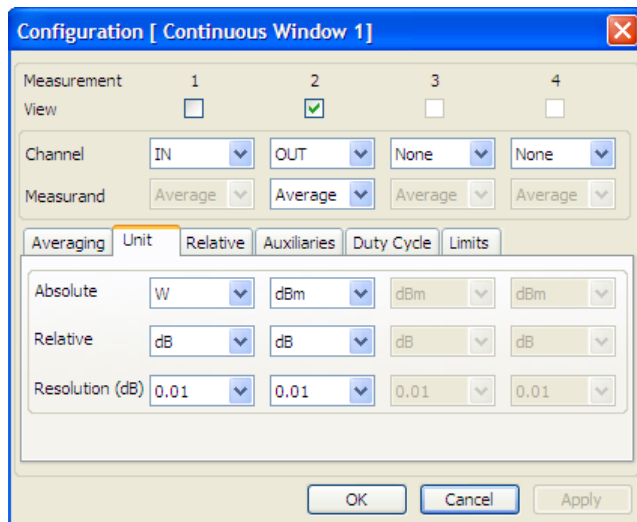


Fig. 4-24: Configuration > Continuous > Unit

- b) In the "Unit" tab, select "dBm" for the absolute value.
- c) In the "Relative" tab, activate the "Relative".
- d) Enter -10 dBm "Ref. Value".


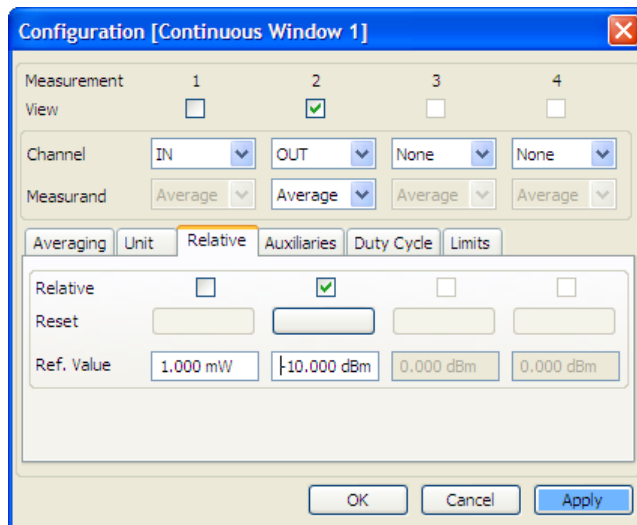


Fig. 4-25: Configuration > Continuous > Relative

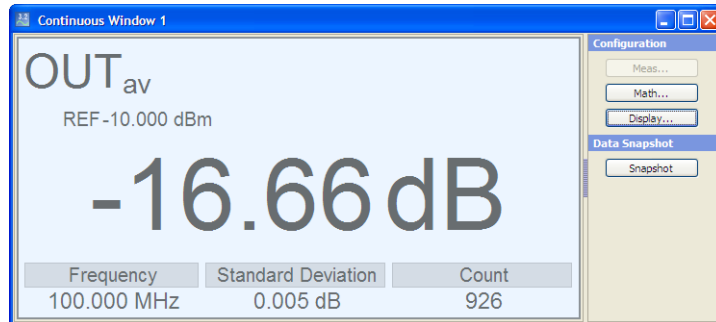


- e) Select "Apply" to assign your entry and confirm with "OK".



**Fig. 4-26: Continuous window > reference value indication**

The diagram indicates the set reference value and the measured value relative to this reference, in this example -10 dBm. That means, the level of the applied signal is -26 dBm. The relative difference between the measured value and the -10 dBm reference value is -16 dBm.


5. Configure the display
- In the "Continuous Window", select "Display..." to open the "Display Configuration" dialog.

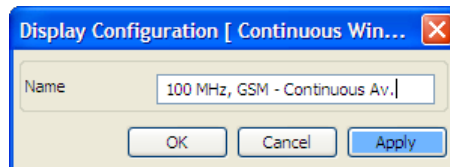

**Fig. 4-27: Display Configuration > continuous window name**

In this dialog, you can assign a name window name.

- Enter the name, for example *1 GHz, GSM - Continuous Av.*
- Select "Apply" and confirm with "OK".

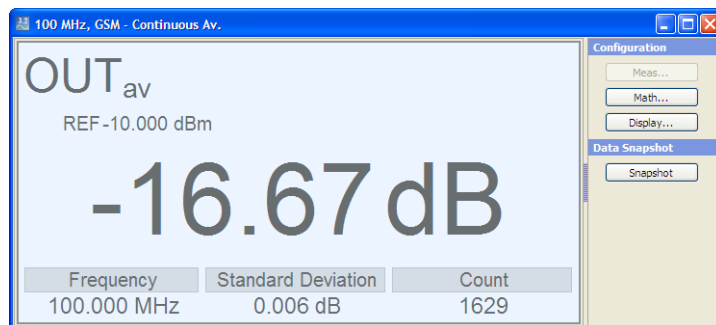

**Fig. 4-28: Continuous window > window renamed**

#### 4.3.3.4 Graphically representing power versus time

Trace and statistics modes represent graphically the measured power versus time. Displaying the signal graphically as with an oscilloscope, trace mode is particularly suitable for recognizing stable triggering of modulated signals during measurement.

Set the trace mode

1. Apply an amplitude-modulated or pulsed signal with a modulation or pulse frequency of 1 kHz and 0 dBm signal level.
2. To configure trace mode, select " Measure > Trace" in the menu bar.

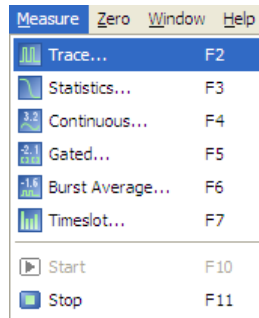


Fig. 4-29: Select trace mode

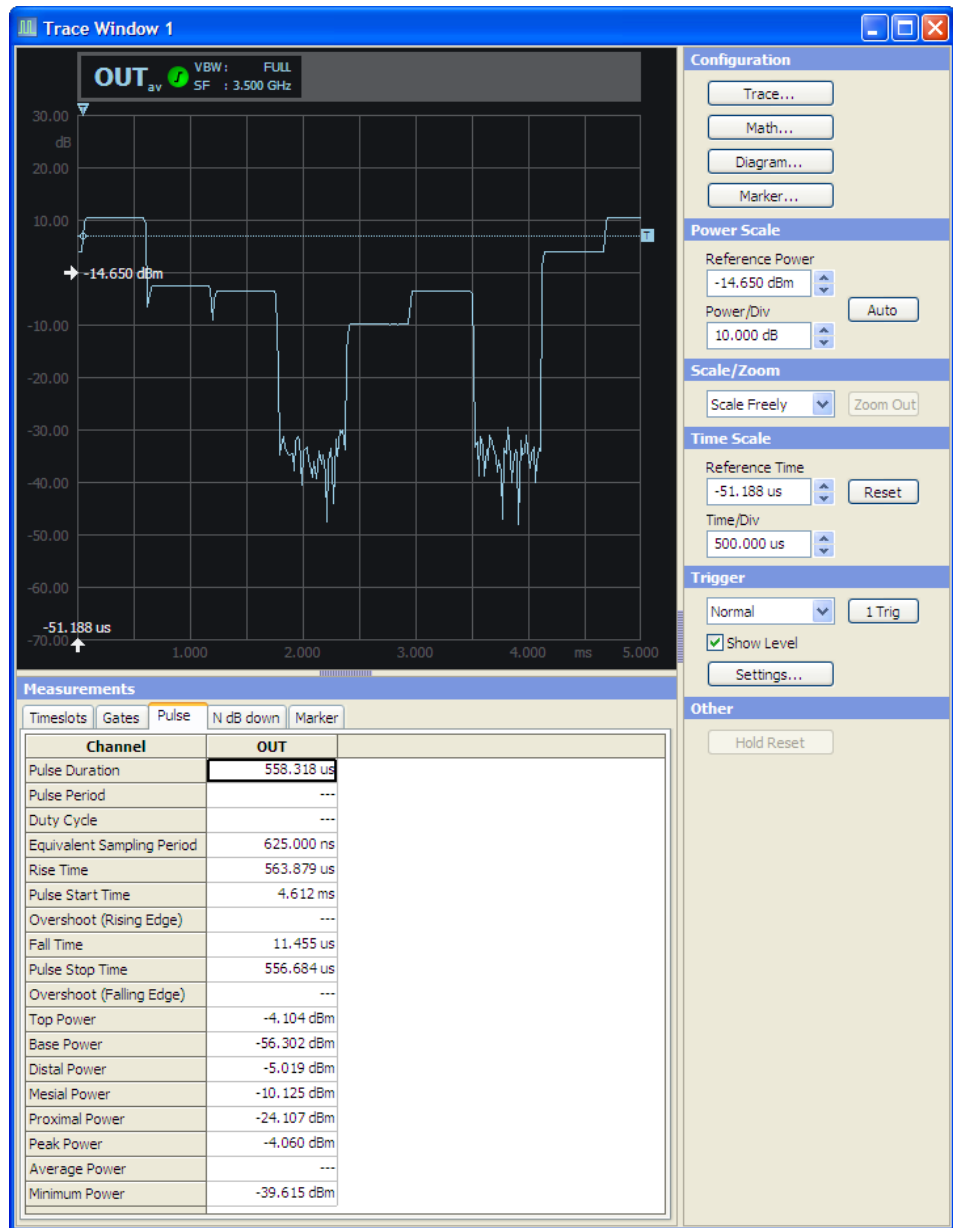


Fig. 4-30: Trace window

Opens the "Trace" window . It shows the measured signal power graphically. The control panel provides access to settings dialogs for configuring the trace, mathematic functions, the diagram and marker. Additionally, you can configure the display settings like scale, power, time and trigger. In the lower area of the window, the measurement panel indicates numerical measurement results. For detailed description on trace measurement and the associated functions see [chapter 6.4.2, "Trace"](#), on page 95.

#### 4.3.3.5 Math Configuration

"Math Configuration" includes operands selection for math measurement of maximum of four math channels, math operation selection, math channel selection for view, relative measurement option and reference value, Selection of units and resolution, and the parameters that shall be displayed as auxiliary.

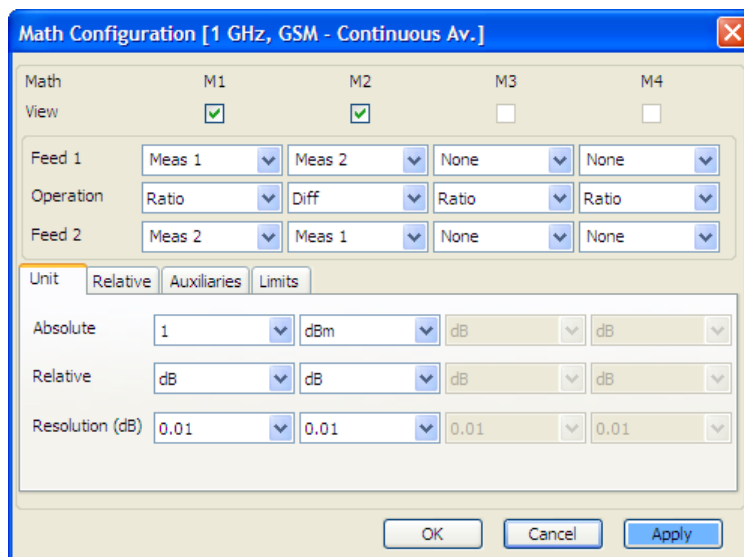


Fig. 4-31: Math configuration dialog

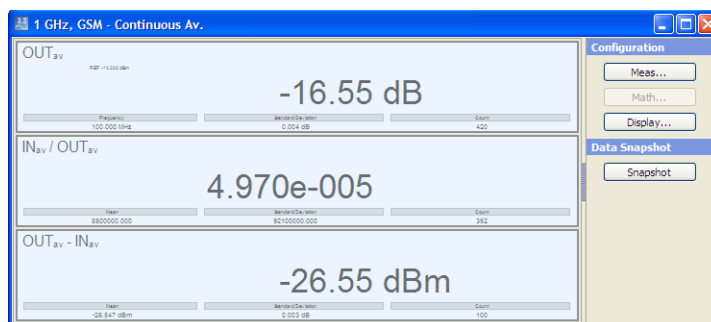


Fig. 4-32: Continuous window > math results indication

The R&S NRPV automatically tiles the window and shows the math results.

#### 4.3.4 Numerical Burst Average Measurement

The burst average mode is used to measure the average power of pulsed signals. In this example, a pulsed RF signal with a pulse repetition frequency not exceeding 10 kHz is used. The sensor automatically detects start and end of a burst and the trigger point from the measured signal. An external trigger is not required.

1. Set the measurement window.
  - a) Select "Configure > Burst Average..." in the menu bar.

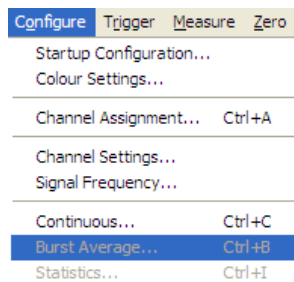


Fig. 4-33: Configure > Burst Average

Opens the "Burst Average" dialog for configuring the burst mode parameters. **Exclude from start** and **Exclude from end** exclude pulse build-up and decay phases of a pulse. Dropout increases the reliability of the end of the modulated burst signal.

The values of the selected channel are indicated.

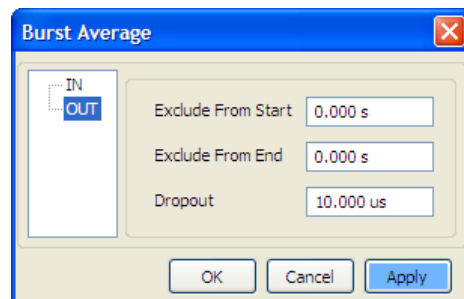


Fig. 4-34: Configure > Burst Average dialog

- b) Select the measurement channel.
- c) Enter "Exclude From Start" 0.001 s.  
This parameter excludes initial peaks of the signal from the measurement.
- d) Enter "Exclude From Start" 0.002 s.  
This parameter excludes fluctuations at the falling edge of the burst from the measurement.
- e) Select "Apply" to assign you entries and confirm with "OK".

2. To start the measurement, select "Measure > Burst Average" in the menu bar.

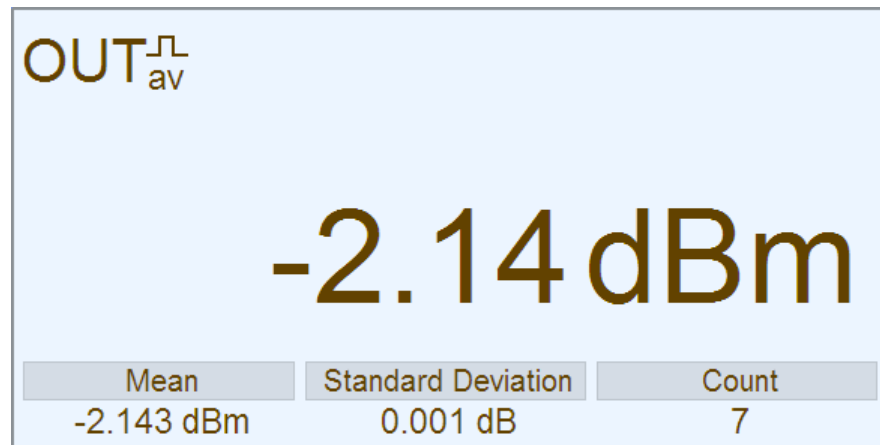


Fig. 4-35: Continuous window > Burst Av results indication

## 5 Operating Concept

Operating concept describes the layout of the application windows, display, controls and how to operate R&S NRPV.

### 5.1 Graphical User Interface (GUI)

Starting the R&S NRPV software opens the main application window. The appearance is based on the Microsoft® Windows layout. At the top the window covers a menu bar with several pull-down menus and a toolbar with icons of the significant functions. Similar to Microsoft® Office functionality, the icon buttons are the alternative possibility for starting a function. A status bar at the bottom covers information on the connected power sensors and the currently active tasks.



Fig. 5-1: Operating concept > Graphical User Interface

Operation corresponds to windows user interfaces. All menus, dialogs and tables are made up of known elements, such as selection lists, check boxes and entry fields. A frame indicates an active item. Highlighted elements are in edit mode.

## 5.1.1 Particular Features

### 5.1.1.1 Zoomed out results display



#### Convenient monitoring of individual readings

By double-clicking a value in a measurement panel, you can zoom out the value and leave it permanently indicated on the display.

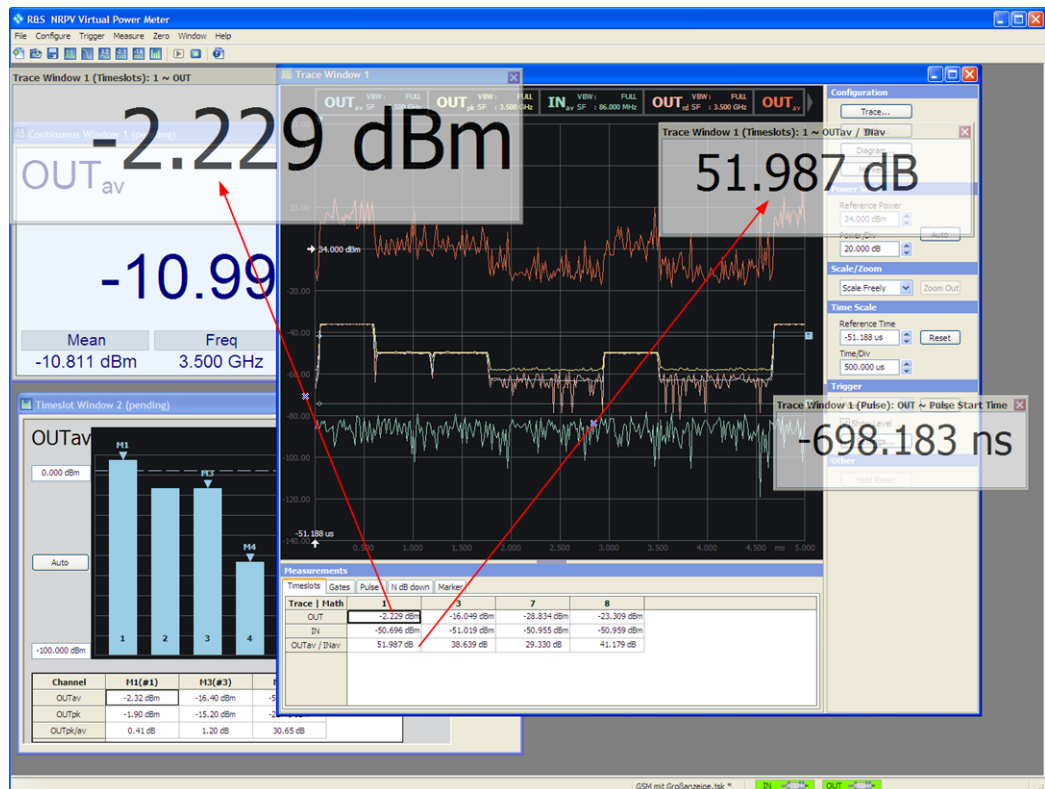


Fig. 5-2: Operating concept >values zoomed out

You can zoom out a measured value arbitrarily and place it somewhere in the R&S NRPV window. The panes of these readings are transparent, so that the overlapping area remains visible.



### 5.1.1.2 Sensor Info



#### Quick and convenient reading of information on the power sensor

- Move the cursor on a sensor image in the status bar to get quick information on the sensor type and its serial number, as shown in the figure below.




Fig. 5-3: Operating concept > Status bar

- Double-click the sensor icon to open an information window with detailed information to the sensor.


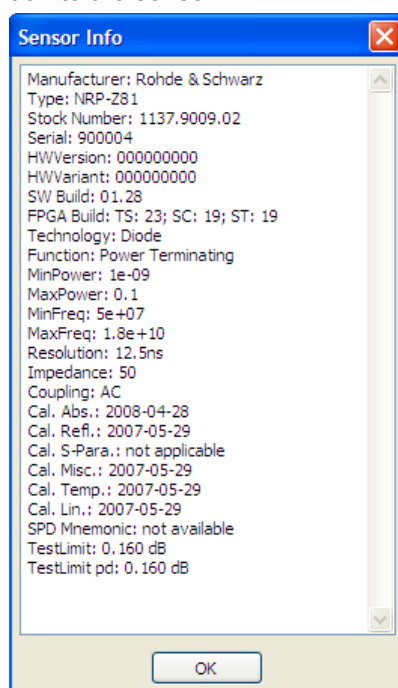


Fig. 5-4: Operating concept > Sensor Info

You can readout or even copy this info, for example to have it at hand for service purposes.

### 5.1.1.3 Print or Copy to Clipboard




Using the right mouse button, you can open a context-sensitive menu within each measurement window. Apart from the main functions, you can print out the current readings or measurement curves, or store them in the clipboard, for example to copy the data to an external program for further documentation


#### Print

Displays a print preview of the corresponding measurement result.

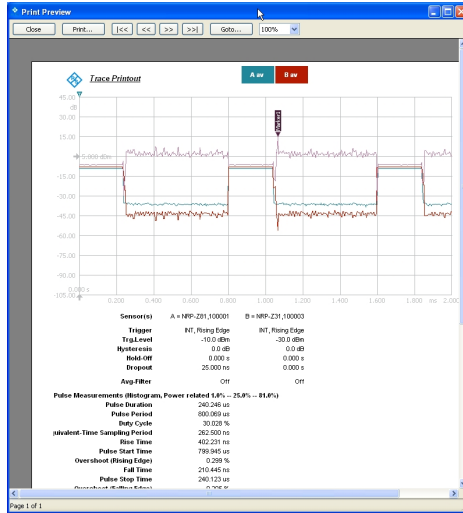
Table 5-1: Printout examples




Trace measurement

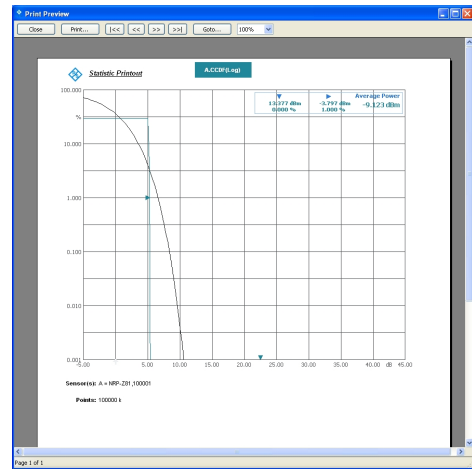

Statistics measurement

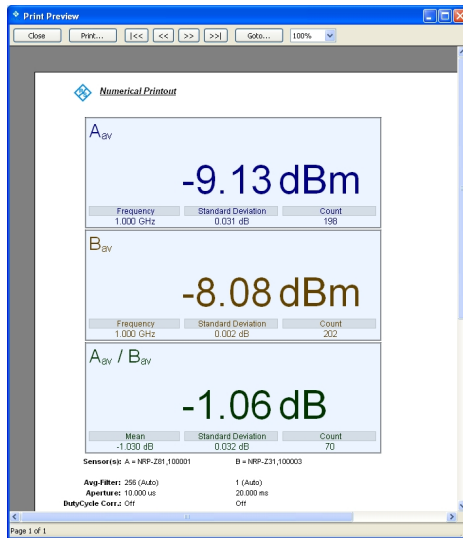

Numerical measurement

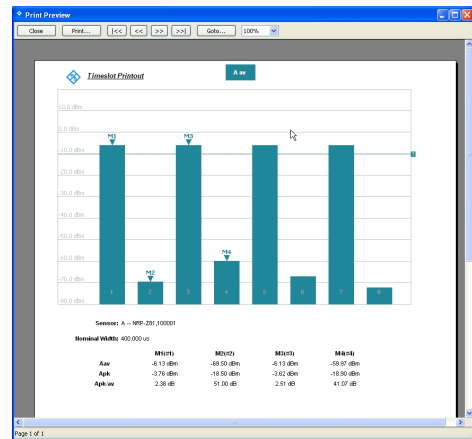


Timeslot measurement


**Copy to Clipboard**

Creates a screenshot of the current result window and temporarily stores it on the clipboard. You can now insert this hardcopy in a document.

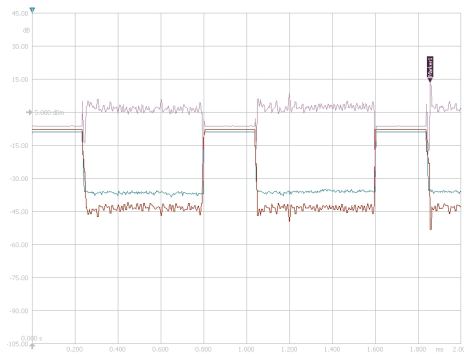Table 5-2: Printout examples




Trace measurement

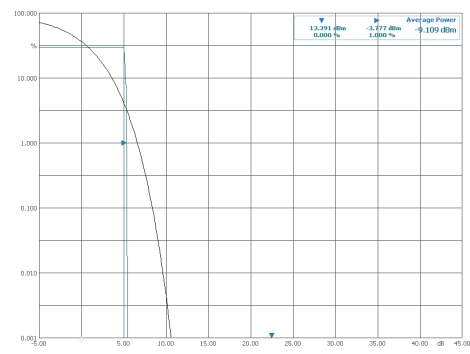

Statistics measurement



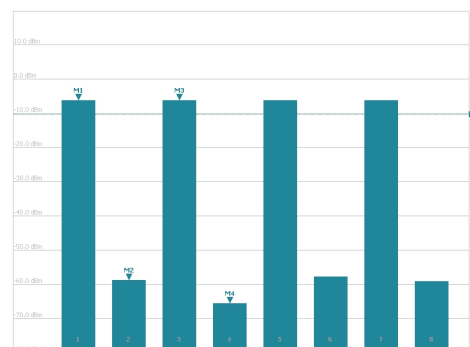Numerical measurement



Timeslot measurement

### 5.1.2 Application Window

This section describes the specific R&S NRPV window components. Besides the main application window additional windows are opened according to the selected measurement.

In general the application distinguishes between "Graphical measurement mode" and "Numerical measurement mode", represented in results windows. Results are displayed digitally and graphically. A results window contains several areas, for example a display area, a control panel on the right, and, depending on the measuring mode, a results table (measurement panel) which contains specific parameters. The numeric measurement modes display the results digitally. In the graphic measurement mode R&S NRPV displays the results graphically, including relevant information in the upper range of the window. With the functions in the right panel you can configure the respective measurement window. A graphical measurement window also contains a table that represents the values numerically.

### Menu bar

The menu bar provides the menus of the application.




Fig. 5-5: Operating concept > Menu bar

### Menu

A menu displays a list of functions, with some of them visualized by icons. Find an overview of functions with associated icons in [chapter 5.1.5, "Icons, Toolbar and Shortcuts"](#), on page 61.

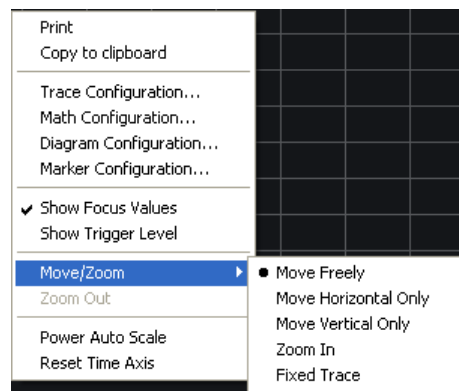


Fig. 5-6: Operating concept > Menu

### Toolbar

Contains buttons and options to execute the functions. Most of the toolbars' functions are also listed in a menu.




Fig. 5-7: Operating concept > Toolbar

### Status bar

The status bar displays the connected sensors, the channel they are assigned to (or short name), and the current activity.

The background color of the sensor symbol represents the activity:

	Indicates the active channel.
	Indicates that the measurement in this channel is currently not active.

#### 5.1.2.1 Numerical Measurement Window

Numerical measurement windows indicate the measurement results numerically. On the right side a control panel provides buttons for accessing further dialogs, entry fields

for measurement related settings, and the "Snapshot" button for storing current settings.

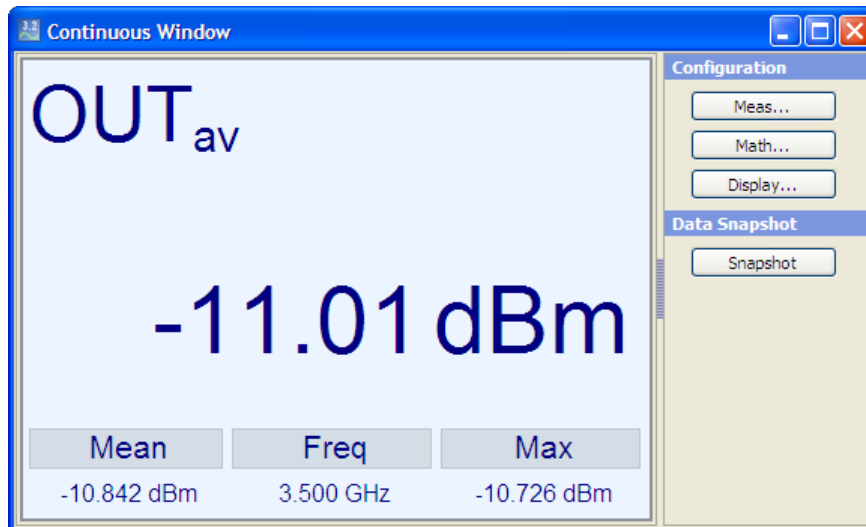


Fig. 5-8: Operating concept > Numerical measurement window

### 5.1.2.2 Graphical Measurement Window

Graphical measurement windows, as for example in trace or timeslot mode, are divided into three sections:

- the display area, containing the graph and a diagram description bar
- the control panel on the right side with softkeys and entry fields
- the measurements panel underneath the graph

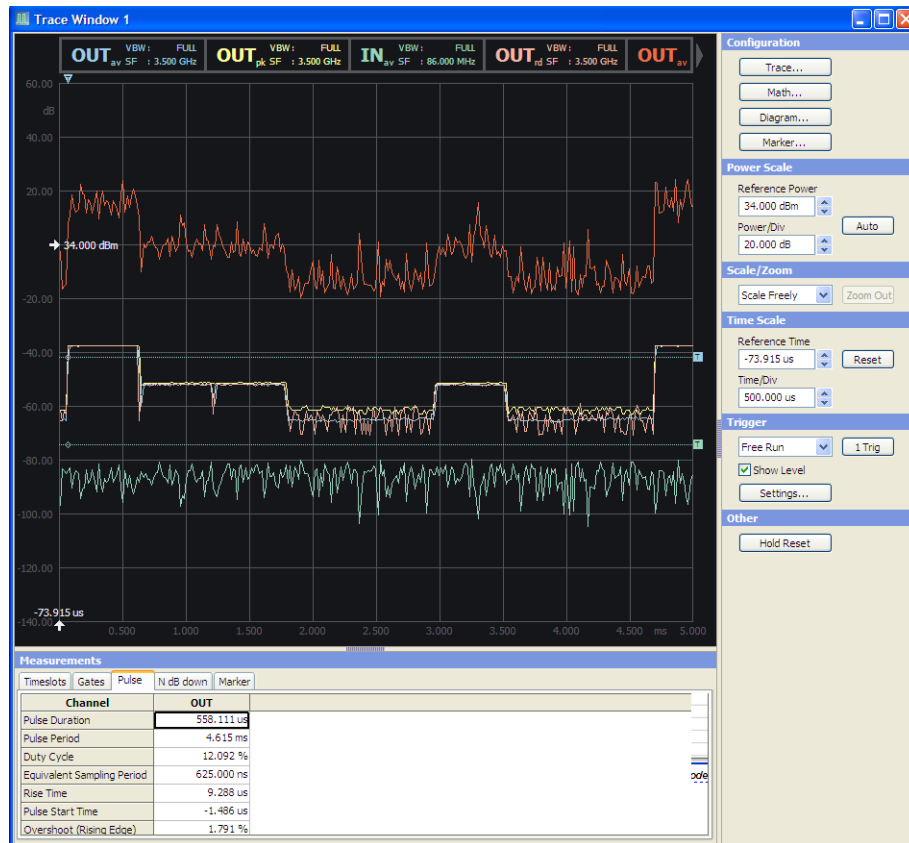


Fig. 5-9: Operating concept > Numerical measurement window

Several parameters as grid, reference arrows, scale labels, trigger, marker and level information are provided to configure the diagram, depending on the selected measurement mode. Refer to the respective descriptions to the results windows:

- [chapter 6.4.2.2, "Graph in Trace Mode"](#), on page 98
- [chapter 6.4.3.2, "Graph in Statistics Mode"](#), on page 125
- [chapter 6.4.4.2, "Results in Numerical Mode"](#), on page 138 and [chapter 6.4.4.3, "Graph in Timeslot Mode"](#), on page 139

### 5.1.2.3 Measurement panels

Measurements			
Timeslots	Gates	Pulse	Marker
Channel		OUT	
Pulse Duration	558.307 us		
Pulse Period	---		
Duty Cycle	---		
Equivalent Sampling Period	625.000 ns		
Rise Time	558.000 us		

Fig. 5-10: Operating concept > Measurement panels

A measurement panel is arranged underneath the diagram. It consists of several tabs which contain the significant parameters of the measurement. R&S NRPV displays the current readings.



### Convenient adjusting of the measurement panel size

The width of the panel is fixed. However, you can change the height of the measurement panel individually by dragging the frame accordingly.


## 5.1.3 Configuration Dialogs

This section describes the structure of the application dialogs. The dialogs are also designed in window format, covering the same main elements, as e.g. entry fields, check boxes or buttons. Some entry fields are partially structured in tabs. Each dialog provides buttons to apply, confirm or cancel the entered settings.

The application mainly distinguishes between the measurement, math and display or diagram configuration dialogs. Some measurement modes additionally contain sub menus and dialogs for setting special parameters, as e.g. markers.

### 5.1.3.1 Measurement Configuration Dialogs

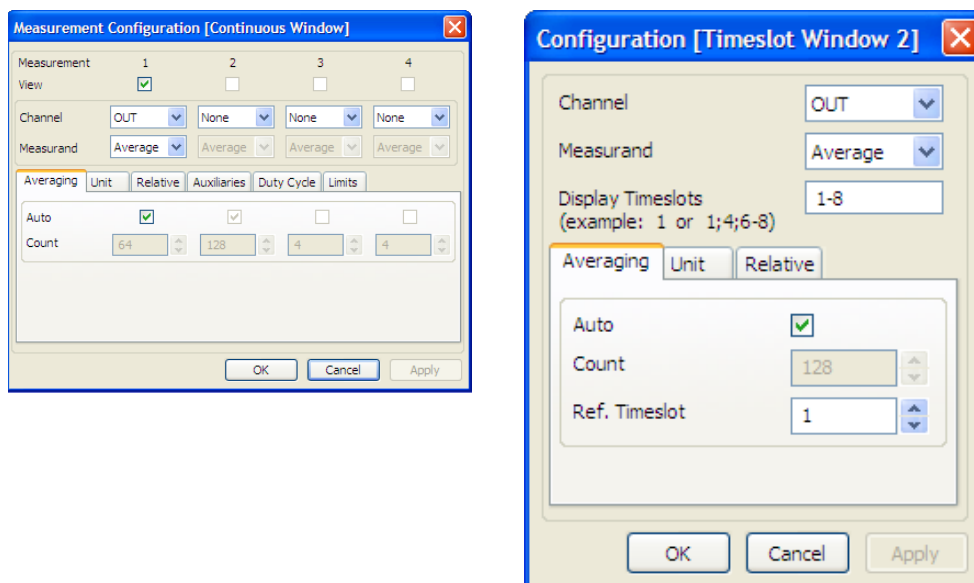
**Table 5-3: Operating concept > Measurement configuration dialogs**



Measurement configuration dialogs contain the entry fields for setting the parameters of the currently selected measurement mode.

### 5.1.3.2 Math Configuration Dialogs

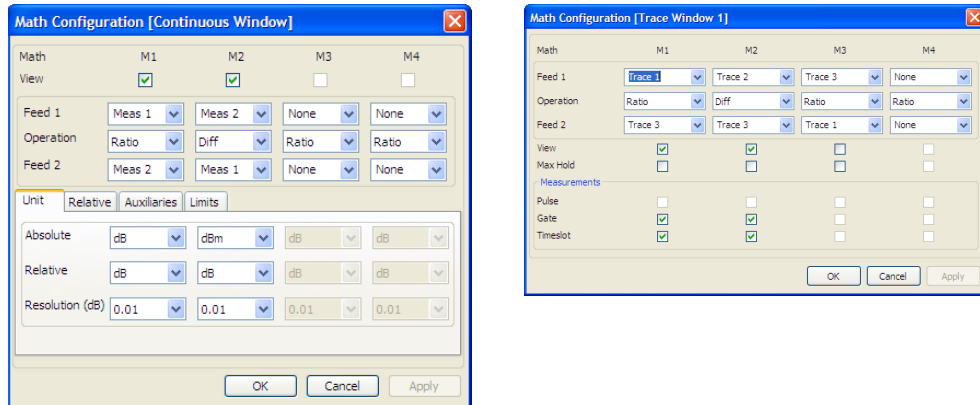Table 5-4: Operating concept > Math configuration dialogs



Math configuration dialogs contain math parameters and operands.



Depending on the selected measurement, the math configuration dialogs vary.

### 5.1.3.3 Display Configuration Dialogs

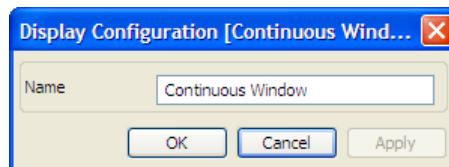



Fig. 5-11: Operating concept > Display configuration dialog

A display dialog covers entry fields for configuring diagram parameters in numerical measurement modes.



### 5.1.3.4 Diagram Configuration Dialogs

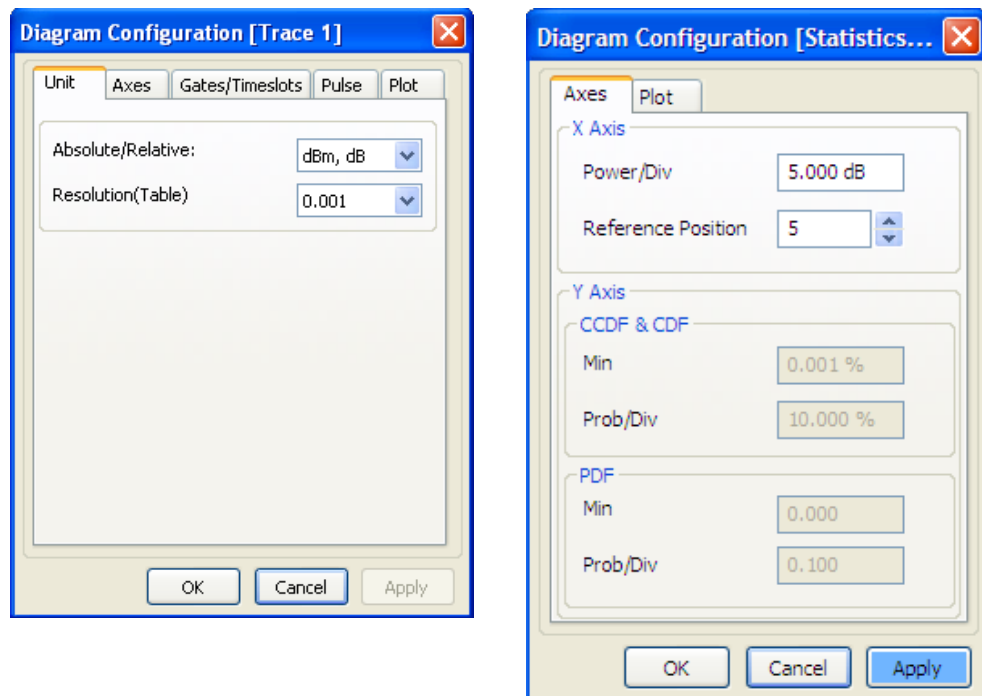Table 5-5: Operating concept > Diagram configuration dialog



A diagram dialog covers entry fields for configuring diagram parameters in graphical measurement modes.



Depending on the selected measurement, the diagram configuration dialogs vary.

## 5.1.4 Menus

This section describes the menu structure of the application. Menus are designed in window format and display a list of functions. Menus are opened with the aid of the mouse or by using the ALT+<KEY> combination on the keyboard.

The following figure shows the available main menus of the application. For detailed description of the several menu items refer to [chapter 6, "Settings - GUI Reference"](#), on page 69.


### 5.1.4.1 Main Menus and Submenus

The main menus are located in the menu bar at the top of the screen.

File Configure Trigger Measure Zero Window Help

Fig. 5-12: Operating concept > Menu bar


A list item of a menu marked with an arrow, represents a general term and covers a submenu.

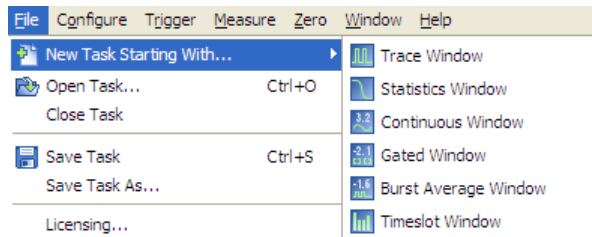

**Fig. 5-13: Operating concept > Submenus**

R&S NRPV contains the following menus:


**File**

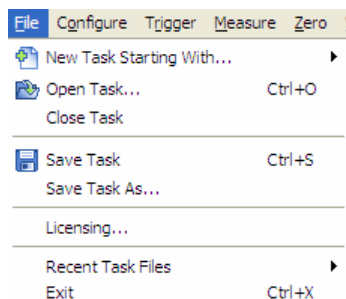

**Fig. 5-14: Operating concept > File menu**

Contains all functions that belong to task management. Create, save or recall measuring data or print the measuring results.

**Configure**

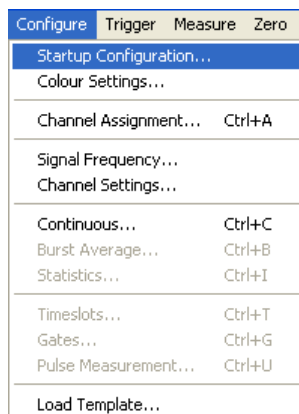

**Fig. 5-15: Operating concept > Configure menu**

Contains functions for setting the startup configuration, channel configuration and signal frequency. Additionally, the menu provides dialogs to specify basic parameters for

all measurement modes and dialogs for loading settings of digital standard communication signals.

### Trigger




Fig. 5-16: Operating concept > Trigger menu

This menu is used for setting the parameters of an external connected trigger source.

### Measure

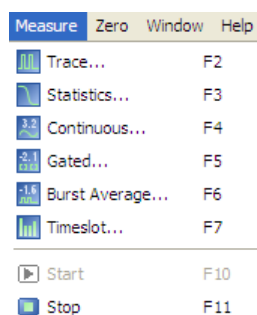


Fig. 5-17: Operating concept > Measure menu

Menu for selecting the measurement mode.

### Zero




Fig. 5-18: Operating concept > Zero menu

Menu for zero error correction.

### Window

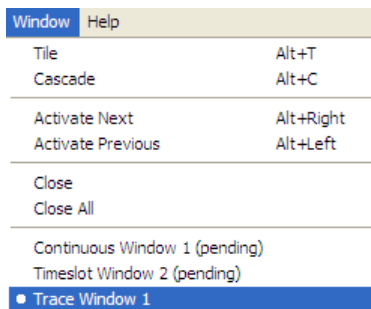


Fig. 5-19: Operating concept > Window menu

A Windows menu contains functions for window handling.

### Help




Fig. 5-20: Operating concept > Help menu

The help menu with access to the online help and information about the R&S NRPV software version.

#### 5.1.4.2 Context-sensitive Menus

R&S NRPV provides special context-sensitive menus for each area of a measurement window, with the exception of measurement panels. Open a context menu by pressing the right mouse button.

A context-sensitive menu within the graphic range mainly contains the functions of the control panel.

The following figure gives an example of context-sensitive menus.

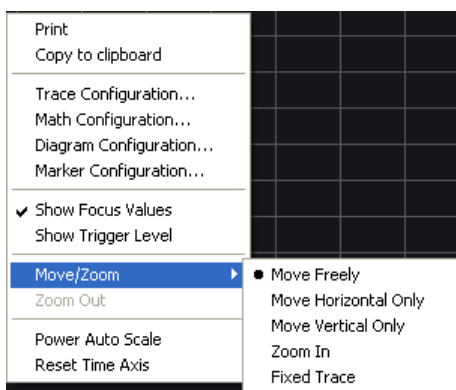


Fig. 5-21: Operating concept > Context-sensitive menus


For detailed description of the available menus refer to

- [chapter 6.4.2.4, "Context-sensitive Menu in Trace Mode"](#), on page 99
- [chapter 6.4.3.4, "Context-sensitive Menu in Statistics Mode"](#), on page 126
- [chapter 6.4.4.4, "Context-sensitive Menu for Numerical Measurement Modes"](#), on page 140
- [chapter 6.4.4.5, "Context-sensitive Menu in Timeslot Mode"](#), on page 141

## 5.1.5 Icons, Toolbar and Shortcuts
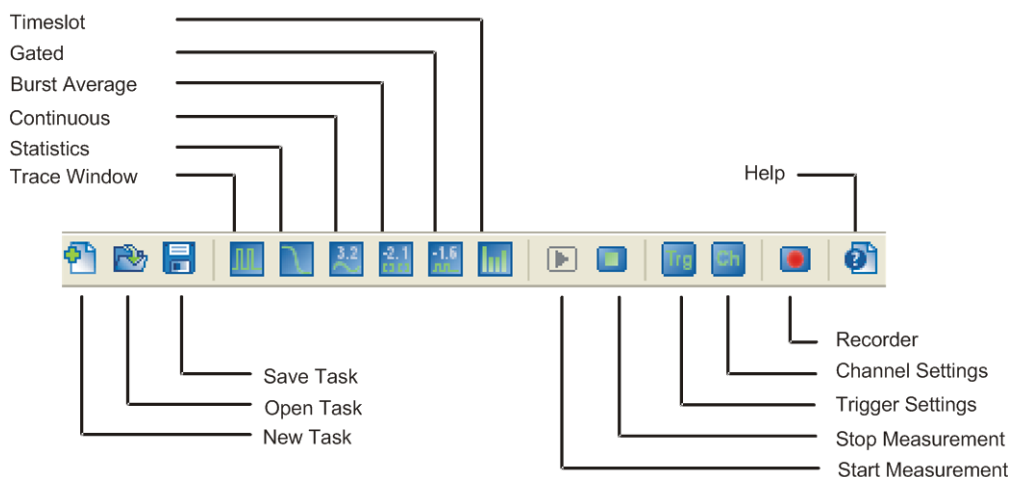
### 5.1.5.1 Toolbar

The toolbar of the main application window contains icons for quickly starting the main functions.




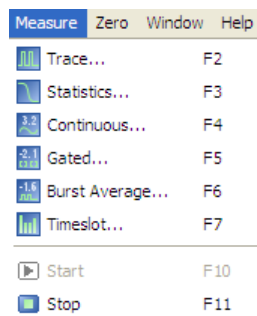
**Fig. 5-22: Operating concept > Toolbar**

Each icon features a corresponding item in the menu lists. For assignment on the icons to the corresponding functions see [chapter 5.1.5.2, "Icons"](#), on page 61.

### 5.1.5.2 Icons

To execute a task the application provides icons for main and frequently used functions.

- ▶ To start a measurement, perform one of the following:
  - Select the  icon.
  - Select "Measure > Continuous" in the menu bar.
  - Press "F4".



**Fig. 5-23: Operating concept > Icons**

The following table lists the functions that can be started quickly by an icon, function key or a specified keyboard sequence (shortcut):

**Table 5-6: Icons and the corresponding functions**

Icon	Function	Corresponding Menu item	Shortcut
	New Task	File > New Task Starting With	-
	Load Task	File > Open Task	CTRL+O
	Save Task	File > Save Task	CTRL+S
	Trace	Measure > Trace	F2
	Statistics	Measure > Statistics	F3
	Continuous	Measure > Continuous	F4
	Gated	Measure > Gated	F5
	Burst Average	Measure > Burst	F6
	Timeslot	Measure > Timeslot	F7
	Start Measurement	Measure > Start All	F10
	Stop Measurement	Measure > Stop All	F11
	Open data recorder	Measure > Data Recorder	F12
	Trigger Settings	Trigger > Settings ...	-
	Channel Settings	Configure > Channel Settings ...	-
	Index	Help > Index	F1

### 5.1.5.3 Shortcuts

Shortcuts are a combination of keystrokes that provide quick access to commands, functions or operations.

Like the icons in the toolbar, the R&S NRPV has predefined key combinations that invoke particular functions.

Configure	Trigger	Measure	Zero
Startup Configuration...			
Colour Settings...			
Channel Assignment...			Ctrl+A
Signal Frequency...			
Channel Settings...			
Continuous...			Ctrl+C
Burst Average...			Ctrl+B
Statistics...			Ctrl+I
Timeslots...			Ctrl+T
Gates...			Ctrl+G
Pulse Measurement...			Ctrl+U
Load Template...			

**Fig. 5-24: Operating concept > Shortcuts in menus**

The following table lists the functions that can be started quickly by a shortcut:

**Table 5-7: Shortcuts and the corresponding functions**

Shortcut	Function	Corresponding Menu item
ALT+C	Cascade	"Window > Cascade"
ALT+LEFT	Active Previous	"Window > Active Previous"
ALT+RIGHT	Active Next	"Window > Active Next"
ALT+T	Tile	"Window > Tile"
CTRL+A	Channel Assignment	"Configure > Channel Assignment"
CTRL+B	Burst Average	"Configure > Burst Average"
CTRL+C	Continuous	"Configure > Continuous Average"
CTRL+G	Gates	"Configure > Gates"
CTRL+I	Statistics	"Configure > Statistics"
CTRL+O	Open Task	"File > Open Task"
CTRL+S	Save Task	"File > Save Task"
CTRL+T	Timeslots	"Configure > Timeslots"
CTRL+U	Pulse Measurement	"Configure > Pulse Measurement"
CTRL+X	Exit	"File > Exit"
CTRL+Z	All Channels	"Zero > All Channels"

## 5.1.6 Diagrams

Several parameters as grid, reference arrows, scale labels, trigger, marker and level information are provided to configure the diagram, depending on the selected measurement mode. Refer to the respective descriptions to the graphs:








- [chapter 6.4.2.2, "Graph in Trace Mode"](#), on page 98
- [chapter 6.4.3.2, "Graph in Statistics Mode"](#), on page 125
- [chapter 6.4.4.2, "Results in Numerical Mode"](#), on page 138 and [chapter 6.4.4.3, "Graph in Timeslot Mode"](#), on page 139

### 5.1.6.1 Info and Symbols



According to channel, measurement and math operation the diagram description bar, or the result fields in numerical measuring modes may contain various information, some shown as symbols. The indicated parameters, and values and symbols, representing, for example, measurement mode, numeric and auxiliary values, trigger, marker or filter values or even warnings are activated for display in the respective configuration dialogs of the measurement. They are each identified by their assigned colors, i.e. the color of a value in a description box corresponds to the color of the measurement and the graph.

Refer to the following table to get an overview on some individual symbols:

**Table 5-8: Special symbols**

Icon	Function
	Duty cycle correction active
	Offset correction active
	S-Parameter correction active
	Trigger on rising slope
	Trigger on falling slope
	Waiting for trigger event
	Info



Icon	Function
	Error occurred
	Warning for example out of range

## 5.2 Operating

R&S NRPV operating is similar to the operation of the Microsoft®Windows user interface. All menus and dialogs are in the form of windows and can be operated in the same way. Mouse or, in some cases alternatively keys allow direct access to entries and settings. Selected items are blue highlighted, a yellow frame indicates that a selected button or tab is active.

### 5.2.1 Enter and Confirm Settings

Enter values, units and text by activating the entry field with the mouse and then use the keyboard.

Numerous help functions, called by F1 function key support the user in measurement configuration.

#### **Apply**

Apply the settings to the current measurement without closing the active window.

#### **Ok**

Apply the settings and close the active window

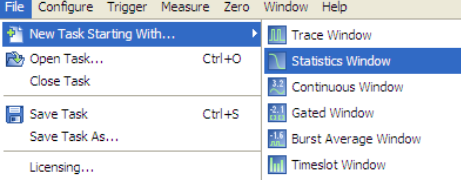


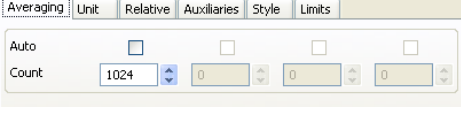
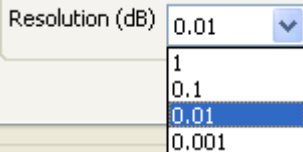
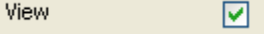
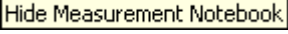

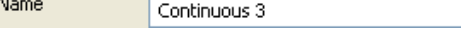

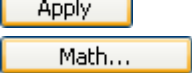
#### **Cancel**





Aborts the active window without applying the settings or saving the changes.

### 5.2.2 Elements

All menus, dialogs and diagrams are made up of known elements, e.g.

Table 5-9: GUI Elements

User interface element	Description										
	<p><b>Menu items</b></p> <p>In a menu a selection can be made from a list. The selection list folds down by clicking the menu name.</p>										
	<p><b>Dialog header</b></p> <p>The header line contains the name of the menu and a button closing the menu. The button can be operated with the mouse.</p>										
 <table border="1" data-bbox="403 719 866 869"> <thead> <tr> <th>Measurement</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <td>View</td> <td><input checked="" type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> </tr> </tbody> </table>	Measurement	1	2	3	4	View	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<p><b>Dialog area</b></p> <p>Several fields of associated but separately set parameters are organized in an area.</p> <p>The dialog areas are separated from each other with a frame.</p>
Measurement	1	2	3	4							
View	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>							
	<p><b>Tab</b></p> <p>Settings fields structured in separate tabs within a dialog.</p>										
	<p><b>Selection field</b></p> <p>The <input checked="" type="checkbox"/> button indicates that a selection can be made from a list. The fold-down selection list is displayed below the selection field.</p> <p>One entry at a time can be selected from the list. If an item is not available for selection, it is grayed out and cannot be accessed.</p>										
	<p><b>Check box</b></p> <p>If the check box is ticked, the associated parameter setting is active (switched on).</p>										
	<p><b>Tool tip</b></p> <p>Help function indicating an explanation to the currently selected element.</p>										
	<p><b>Numerical entry field</b></p> <p>A numeric value can be entered.</p>										
	<p><b>Alphanumeric entry field</b></p> <p>An alphanumeric value can be entered.</p>										
	<p><b>Color selection field</b></p> <p>Opens a dialog for selecting a color.</p>										
	<p><b>Buttons</b></p> <p>A button either triggers a single action or calls the next menu.</p>										

User interface element	Description
	<b>Selecting field</b> Area for selecting the channel and the sensor, respectively.
	<b>Status field</b> Indicates the state of either the currently running task or the state of a connected sensor.
	<b>Scroll bars</b> When a window cannot be shown completely then the window will get scroll arrows on the right side and bottom for scrolling.
	<b>Hide/Show control in the splitter bar</b> Shows / hides a control panel or measurement panel by mouse click on the striped bar.

### 5.2.3 Mouse Operation

Basically the mouse as pointing device is similar to every computing system. This section only touches information on some special features of the application.

Clicking the right mouse button performs context-sensitive menus for the following controls:

- Channel traces
- Math traces
- Marker symbols
- Limit lines
- Trigger levels and symbols
- Vertical reference position symbol
- Residual screen area
- Trace window

### 5.2.4 Splitter bar

The control and measurement panels are separated from the diagram by splitter bars. Each splitter bar contains a button to hide or show each panel.




Fig. 5-25: Operating concept > Splitter bar

The width of the control panel is fixed, whereas the height of the measurement panel is flexible. Therefore the space between the diagram and the measurement table can be shared by moving the splitter bar with the mouse.

## 5.3 Data Management

R&S NRPV provides basic measurement settings, which are already stored in the application. It also supports saving user-defined settings and measurement data. Usually drive C:\ is intended to save user-defined data, but you can also select any directory structure. Some default directories are predefined, as for example `TaskFiles` that is recommended by the application. The filenames and directories are user-selectable and can be changed.


The user data is divided into the following data types:

- **Signal template**  
This file contains samples with basic measurement parameters predefined in the application. See [chapter 6.2.13, "Load Template"](#), on page 88 to call predefined settings.  
**Note:** Templates refer to the default application settings and cannot be changed.
- **Tasks**  
Task files contain settings of a measurement. See [chapter 6.1, "File Menu"](#), on page 69 for handling with task files. For tasks files the directory `%APPDATA%\Rohde-Schwarz\NRPV\TaskFiles\*.tsk` is selected by default.

## 6 Settings - GUI Reference

"Settings" describes all dialogs and functions of the application in detail.

### 6.1 File Menu

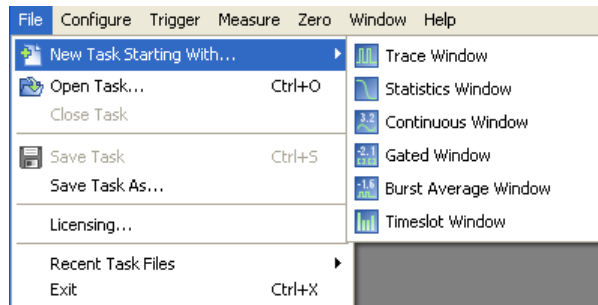

**Fig. 6-1: File menu > New task**

The "File" menu contains all functions that belong to file management, like creating, saving or recalling measurement data or printing the measurement results.

Task files are stored in the default directory

%APPDATA%\Rohde-Schwarz\NRPV\Taskfile\.tsk>.

In addition the R&S NRPV application can be closed with the "Exit" function.

#### **New Task Starting With...**

Opens the sub menu for selecting a measurement task.

#### **Trace Window ← New Task Starting With...**

Creates a new task for measurement mode [chapter 6.4.3, "Statistics"](#), on page 123.

#### **Statistics Window ← New Task Starting With...**

Creates a new task for measurement mode [chapter 6.4.3, "Statistics"](#), on page 123.

#### **Continuous, Gated, Burst Average or Timeslot Window ← New Task Starting With...**

Creates a new task for a numerical measurement mode.

The measurement windows of these modes are almost similar. The description in [chapter 6.4.4, "Numerical"](#), on page 136 applies to all modes. Special features are described explicitly.

#### **Open, Close, Save, Save As Tasks**

Manages task files.

These functions are self-explanatory and very similar to the Microsoft®Windows file dialog.

**Note:** The extension of a measurement task is \*.tsk and cannot be changed. By default, the file storage location is

```
%APPDATA%\Rohde-Schwarz\NRPV\Taskfile\.tsk>
```

### Licensing

Opens the "Licensing NRP-Z Power Sensors for NRPV" dialog.

In this dialog, you can enable an R&S NRP-Zxx Power Sensors for use with R&S NRPV, see [chapter 3.6, "Activate an R&S NRP-Zxx Power Sensors in R&S NRPV"](#), on page 18.

### Recent Task Files


Lists the recently used task files. Select a task to reopen it.

### Exit

Closes the application.

R&S NRPV requires a prompt for storing modified tasks, in order to save the last changes in the task file.

## 6.2 Configure

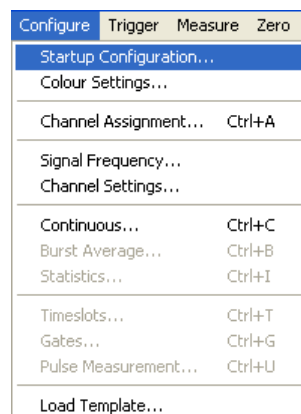

**Fig. 6-2: Configure menu**

The "Configure" menu contains functions for setting the startup configuration and functions to configure channel assignment, channel settings and signal frequency settings. Additionally, the menu provides dialogs to specify basic parameters for all measurement modes, as well as defined R&S values and settings of digital standard communication signals.

## 6.2.1 Functions

### Startup Configuration

Opens the dialog for selecting the [chapter 6.2.2, "Startup Configuration"](#), on page 72. You can select between user-defined settings, settings of the last measurement, or default settings for starting up the application.

### Color Settings

Opens a dialog for setting the colors, see [chapter 6.2.3, "Color Settings"](#), on page 73. In this dialog you can design your measurement windows, that means you can arbitrarily assign colors to the traces, curves and markers, as well as to background and grid lines of diagrams.

### Channel Assignment

Opens the dialog for selecting and assigning the channel, see [chapter 6.2.4, "Channel Assignment"](#), on page 74. This dialog covers information on the connected power sensors and its connectivity.

### Signal Frequency

Opens the "Signal Frequency" dialog for setting the carrier frequencies of the signals, see [chapter 6.2.6, "Signal Frequency"](#), on page 80.

### Channel Settings

Opens the dialog for configuring a channel, see [chapter 6.2.5, "Channel Settings"](#), on page 74. Channel settings include offset, video bandwidth, gamma and S-Parameter correction, ranging, and averaging.

### Measurement Modes

The following topics provide dialogs to configure basic signal parameters that are independent of the used power sensor. These parameters represent the global settings and are needed in principle with the respective measuring modes. Changes of these settings are saved in task files.

**Note:** See also [chapter 6.2.13, "Load Template"](#), on page 88 to recall predefined settings based on a measurement mode or based on a digital standard communication signal.

Continuous...	Ctrl+C
Burst Average...	Ctrl+B
Statistics...	Ctrl+I
Timeslots...	Ctrl+T
Gates...	Ctrl+G
Pulse Measurement...	Ctrl+U
Load Template...	

*Fig. 6-3: Configure menu > load template*

### Continuous...

[Continuous](#) opens the dialog for configuring the measurement window settings as aperture time, sampling frequency and smoothing.

**Note:** For trace and statistics measurement mode, signal frequency is displayed in the [chapter 6.4.2.3, "Diagram Description Bar"](#), on page 99.

#### **Burst Average...**

The [Burst Average](#) contains excluding times and dropout.

#### **Statistics...**

Opens the [Statistics](#) for setting the aperture time.

#### **Timeslots...**

Opens the dialog [Timeslots](#) for configuring timeslot and fence parameters.

#### **Gates...**

[Gates](#) opens the dialog for configuring gate and fence parameters.

#### **Pulse Measurement...**


Selects the algorithm for evaluating pulse signals and set the threshold parameters in the dialog [Pulse Measurement](#).

#### **Load Template...**

Opens the dialog [Load Template](#) for loading predefined settings of or CW signals, or digital standard communication signals like GSM.

## 6.2.2 Startup Configuration

This function enables you to determine the initial configuration of R&S NRPV at startup.

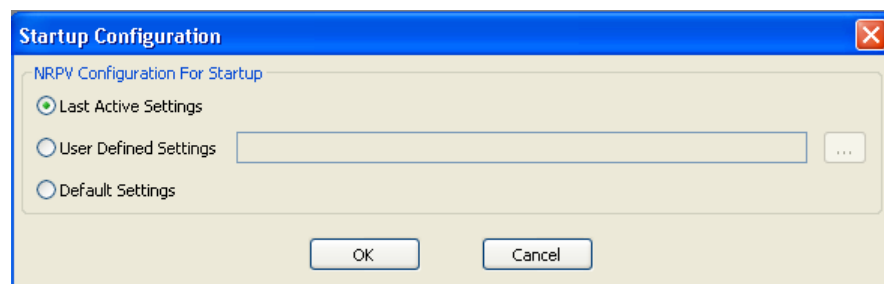

*Fig. 6-4: Configure > Startup Configuration dialog*

#### **NRPV Configuration for Startup**

Opens the dialog for selecting how the R&S NRPV starts.

##### "Last Active Settings"

Starts in the same mode, which was active during the last measurement.

##### "User Defined Settings"

Starts in a user defined mode, which was previously specified and saved in a task file.



"Default Settings"

Starts with preset values.

### 6.2.3 Color Settings

In this dialog you can individually assign colors to traces and curves, including the associated markers, and to background and grid lines of diagrams..

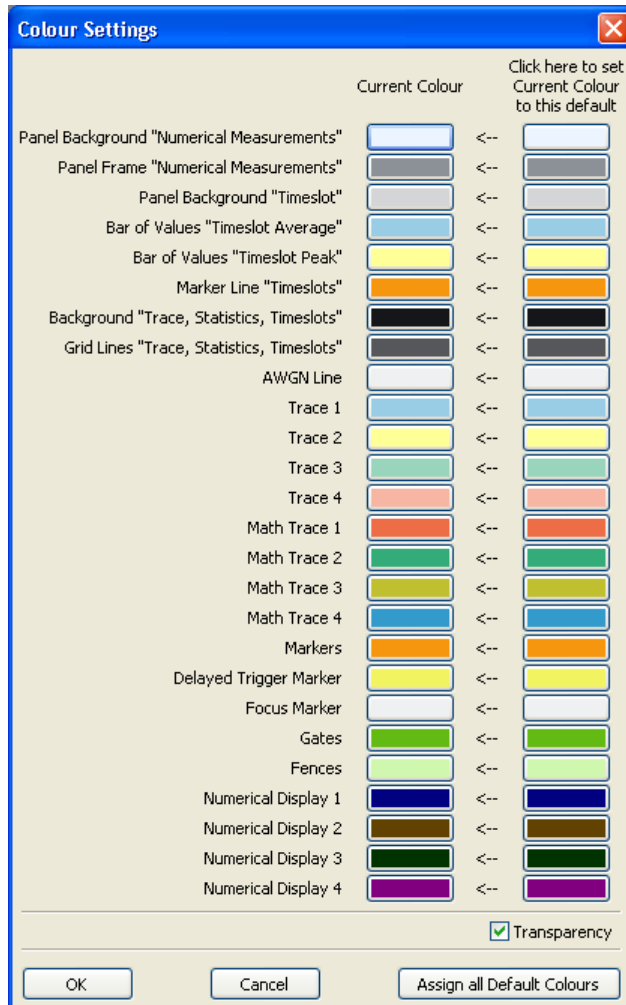


Fig. 6-5: Configure > Color Settings dialog


In "Color Settings" select individual colors for your measurements, or set all colors to default

#### Color Settings...

Opens a dialog to set the colors.

## 6.2.4 Channel Assignment

The "Channel Assignment" dialog displays all connected sensors with information on the sensor type, serial number and connectivity.

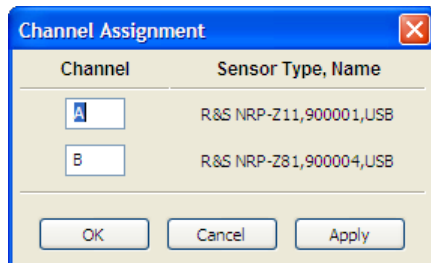


*Fig. 6-6: Configure > Channel Assignment dialog*

**Note:** With one power sensor connected the R&S NRPV program automatically assigns the power sensor to channel A.

### Channel Name

Lists the connected channels.

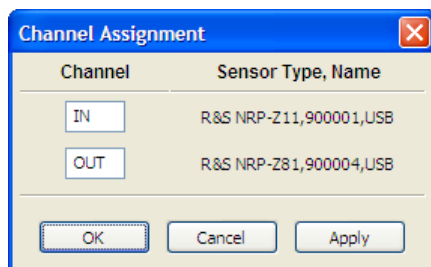

*Fig. 6-7: Configure > Channel assignment > rename*

The R&S NRPV detects all connected sensors automatically and applies capitals to each channel in alphabetical order.

You can assign a short name to a channel. The maximum length is three characters in capital letters, as for example "IN" or "OUT".

### Sensor Type, Serial Number & Connectivity


Displays information on the connected sensors.

"Current" Displays information on the currently connected sensor.

"Previous" Displays information on the previously connected sensor.

## 6.2.5 Channel Settings

The "Channel Settings" dialog covers entry fields for setting sensor related channel parameters.

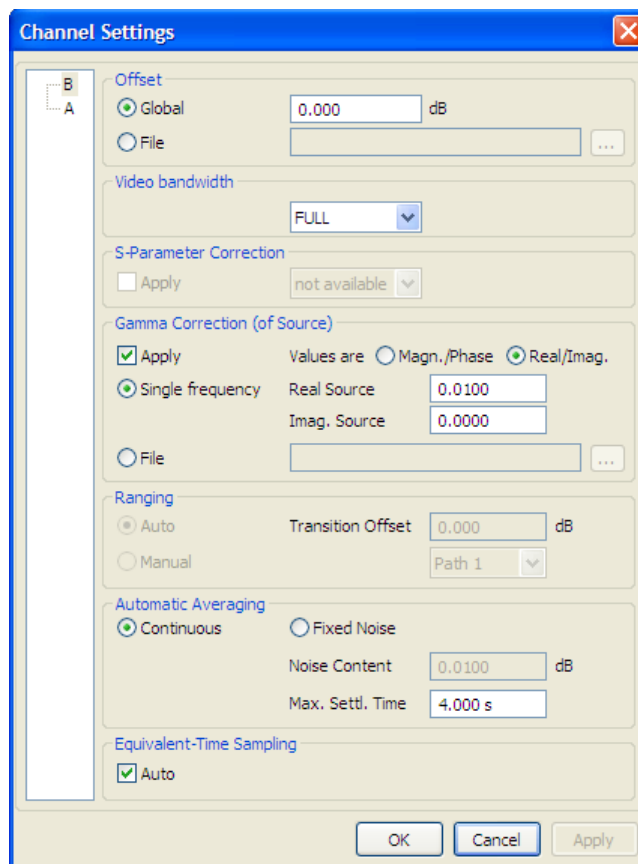

**Fig. 6-8: Configure > Channel settings dialog**

The dialog contains sensor related parameters.

The parameters are grouped by functionality, such as Offset, Video bandwidth, S-Parameter and Gamma correction, Ranging and Averaging. If a sensor does not support a certain functionality, the corresponding controls are disabled.


### Channel

Selects the channel.

### Offset

**Note:** If the signal level is higher than the permissible input level of the sensor, it is recommended that you connect an attenuator between the signal source and the sensor. The attenuator prevents the sensor from damage due to high input power. The offset correction compensates the difference between the real signal level and the level at the sensor input. The indicated value corresponds to the real signal level.

Enter and activate correction factors to increase or decrease the measurement result value. Correct only factors, which do not or only minimally depend on frequency or level. For example, use this function to adjust attenuators, directional couplers or amplifiers that are connected between the signal source and the sensor.

Positive offset values correspond to external losses, negative values to external gains. The symbol  indicates that offset correction is active.


**Global ← Offset**

Activates the offset correction globally for all frequencies with the entered value.

**0.000 ← Offset**

Sets the global offset value. That means, the offset for all frequencies.

R&S NRPV automatically adjusts the trigger level when the offset correction values vary. A prompt requires the adjustment to be confirmed.

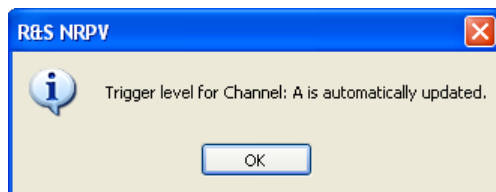

*Fig. 6-9: Configure > Channel settings > automatic trigger level update*

**File ← Offset**

Selects a file with offset correction data.

A file contains a table with frequency/offset pairs.

The extension of a correction file is \*.slp, or \*.txt. In case of an \*.slp, the file content must conform with the touchstone file specification, see [http://en.wikipedia.org/wiki/Touchstone\\_file](http://en.wikipedia.org/wiki/Touchstone_file). The correction files are stored in the application data directory %APPDATA%\Rohde-Schwarz\NRPV\<\*.slp>.

**Video Bandwidth**

Sets the video filter bandwidth

This parameter is supported by NRP-Z8x wideband power sensors.

You can use this value to reduce the video bandwidth in trace and statistics measurement modes. As a result, the trigger sensitivity is increased and the display noise reduced. In order not to distort the signal, the video bandwidth must be smaller than the RF bandwidth of the measurement signal.

A limited video bandwidth also reduces the sampling rate. Therefore, in trace mode, the effective time resolution is reduced accordingly. In statistics mode, the measurement time must be increased appropriately to keep the required sample size. The following table shows the video bandwidth and the resulting sampling rate and sampling interval by the example of an NRP-Z81 power sensor.

*Table 6-1: Video bandwidth and sampling rate*

Video Bandwidth	Sampling rate	Sampling interval
FULL	$8 \times 10^7 \text{ s}^{-1}$	12.5 ns
5 MHz	$4 \times 10^7 \text{ s}^{-1}$	25 ns
1.5 MHz	$1 \times 10^7 \text{ s}^{-1}$	100 ns
300 kHz	$2.5 \times 10^7 \text{ s}^{-1}$	100 ns


"FULL"	For frequencies from 500 MHz on, FULL corresponds to a video bandwidth of at least 30 MHz. For frequencies below 500 MHz, the video bandwidth is automatically reduced to approx. 7.5 MHz.
"x MHz"	The video bandwidth is set to the selected value.

### S-Parameter Correction

Selects and applies a data set of S-Parameters (available only for sensors that support S-parameter correction).



**Fig. 6-10:** Configure > Channel settings > S-parameter

In the Info line of the measurement window the symbol  indicates that S-Parameter correction has been activated.

S-Parameters are used to correct measurement results that are influenced by a two-port connection. Provided that a complete set of S-Parameters is available in the R&S power sensor, the measurement can be corrected by way of calculation.

Note that a reference impedance of 50 Ohms must be used for the S-Parameters.

For information on how to use the S-Parameters table refer to the operating manual of your NRP-Z8x power sensor.

### Gamma Correction

Increases the measurement accuracy by either setting the magnitude and phase of the source's reflection coefficient, or alternatively, the real and imaginary source.

The gamma correction value sets the complex reflection coefficient of the source. A magnitude value of 0 is equivalent to an ideally matched source, and 1 corresponds to total reflection. The phase angle can be set between -360.0 and +360.0 degrees.

#### Apply ← Gamma Correction

Save gamma correction settings.

#### Single Frequency ← Gamma Correction

Activate/deactivate gamma correction with the set values.

#### Re. source ← Gamma Correction

Set the real part, i.e. the magnitude of the source reflection coefficient.

#### Im. source ← Re. source ← Gamma Correction

Set the imaginary part, i.e. the phase of the source reflection coefficient.

#### Magn. source ← Gamma Correction

Set the magnitude of the source reflection coefficient directly.

#### Phase source ← Magn. source ← Gamma Correction

Set the phase of the source reflection coefficient directly.

**File ← Gamma Correction**

Select the file with gamma correction data and activate the gamma correction with data from that file.

A file contains a table with magnitude/phase pairs. The extension of a correction file is \*.slp or \*.txt. By default correction files are stored in application data directory.

**Ranging**

Select the measurement path for multipath power sensors (NRPxxS(N), NRP-Z11, NRP-Z21/22/23/24/28/31/41/61 and NRP-Z91/98 multipath power sensors only).

Multipath power sensors are equipped with several paths, providing different sensitivities and therefore different measurement ranges. The measurement paths are simultaneously active.

**Auto ← Ranging**

Activate automatic selection of the suitable path, that means paths that are neither overdriven nor underdriven. The measurement result of two partially overlapping measurement paths is derived from the measured values of both paths.

For some applications, e.g. test signals with a large peak-to-average ratio, measuring with "Auto Ranging" does not lead to accurate measurement results. Use the crossover function, which lowers the level in the crossover, in order to prevent an overdriven measurement path from distorting the evaluation.

**Transition Offset ← Ranging**

Reduce crossover range. To prevent measurement paths which have been overdriven by signal peaks from being included in the evaluation, levels can be reduced in the measurement path crossover.

**0.000 dB ← Ranging**

Enter a negative crossover value as a measure for reducing the crossover levels. For example, setting the level to -6 dB, the crossover is reduced by 6 dB. Drive range increases of the same magnitude, which reduces measurement deviations due to modulation to 25% of the original value.

**Note:** While large signal characteristics improve as the crossover level drops, the effects of zero deviations and intrinsic noise on the result increase, caused by the less sensitive measurement path being under driven. Therefore changing the crossover level by more than 10 dB might deteriorate the measurement result.

**Manual ← Ranging**

Activate manual selection of the measurement range. One out of three paths can be selected as measurement range, for example to the drive range of a path.

**Crossover ← Ranging**

Reduce crossover range.

To prevent measurement paths which have been overdriven by signal peaks from being included in the evaluation, levels can be reduced in the measurement path crossover.

For example, if setting the level to -6 dB, the crossover is reduced by 6 dB. The drive range increases by the same magnitude. This reduces measurement deviations due to modulation by 25% of the original value.

While large signal characteristics improve as the crossover level drops, the effects of zero deviations and intrinsic noise on the result increase. This is caused by the less sensitive measurement path being under driven. Therefore, changing the crossover level by more than 10 dB might deteriorate the measurement result.

#### **path n ← Ranging**

Define one of three paths as the measurement range, e.g. for testing the drive range of a path.

**Note:** The "Transition Offset" entry disables manual functionality and vice versa.

#### **Automatic Averaging**

Use an averaging filter to reduce fluctuations in the measurement result. Either choose automatic mode or set the averaging factor to a fixed value manually.

**Note:** Check if the auto filter mode is giving satisfactory results. If the power is not constant, adjust a manual optimal filter length setting always manually.

"Continuous "    Activate continuous mode.  
This mode finds a balance between measurement time and display noise.

"Fixed Noise "    Activate fixed noise mode.  
Choose an averaging factor that the sensors intrinsic noise (2 standard deviations) does not exceed the specified Noise Content. Having low power, limit the averaging factor by the duration of the Max. Settling Time in order to avoid long settling times. In the Info line of the measurement window S/N indicates when the display noise exceeds the preset value.

**Note:** Automatic averaging mode Continuous disables Fixed Noise mode and vice versa.

#### **Noise Content ← Automatic Averaging**

Select the portion of intrinsic noise in the measured result. Specifically, this value gives the permitted relative variation of the result which may not be exceeded for 95% of the observation time.

#### **Max. Settl. Time ← Automatic Averaging**

Enter time value and unit to specify the upper limit for the settling time. If the limit is exceeded, S/N is displayed in the measurement window.

## 6.2.6 Signal Frequency

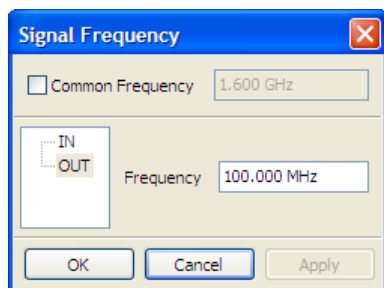


Fig. 6-11: Configure > Signal frequency dialog

Open the [chapter 6.2.6, "Signal Frequency"](#), on page 80 for setting the carrier frequencies of applied signals. The following topics provide dialogs to specify basic signal parameters that are independent of the sensor type. These parameters represent the global settings and are needed in principle with the respective measuring modes. Changes of these settings are saved in task files.



See also [chapter 6.4.2.3, "Diagram Description Bar"](#), on page 99 to call up predefined settings based on a measurement mode or based on a digital standard communication signal.

### Common Frequency

Apply the entered frequency value to all channels.

### Channel

Select a channel.

### Frequency

Enter the frequency value and unit of the signal applied to the selected channel.

Valid for all channels disables single frequency settings and vice versa.

**Note:** For trace and statistics mode, signal frequency is displayed in the [chapter 6.4.2.3, "Diagram Description Bar"](#), on page 99.



## 6.2.7 Continuous

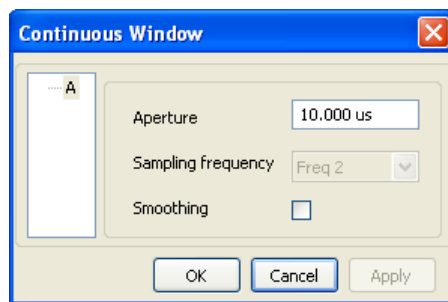


Fig. 6-12: Configure > Continuous

**Continuous** opens the dialog for configuring the measurement window settings as aperture time, sampling frequency and smoothing.



For trace and statistics measurement mode, signal frequency is displayed in the [chapter 6.4.2.3, "Diagram Description Bar"](#), on page 99.

### Channel

Select a channel.

### Aperture

Width of the sampling window. Defines the length of the unsynchronized time interval used to measure the average signal power.

- For an unmodulated signal the default setting of 10 $\mu$ s in conjunction with chopper stabilization provides optimum noise suppression.
- Wider sampling windows are required when the measurement result exhibits fluctuations due to modulation. With very low frequency modulation in particular a display with optimum stability is provided by setting the sampling window length exactly equal to the modulation period.
- If the modulation period varies or is not exactly known, smoothing should also be activated. Approximately five periods within one sampling window are sufficient
- The overall window length is calculated from the sampling frequency and the number of samples. The number of samples determines the length of the evaluation window.
- Additionally this parameter sets the length of the unsynchronized time interval for statistical analysis of the signal, see [chapter 6.2.9, "Statistics"](#), on page 83.

### Sampling frequency

Defines the number of samples taken over the duration of a measurement window. The sampling frequency is defined in Hertz.

- If a sensor contains a sampling A/D converter, the sampling rate can be adjusted to prevent aliasing effects for particular types of modulation signal. Aliasing can occur with some sensors because the sampling frequency is located within the video bandwidth, which means that spectral components of the modulation signal can fall in this frequency range. Changing the sampling frequency will make the aliasing effects disappear.

### Smoothing

Enables a smoothing filter. The filter reduces result fluctuations caused by modulation, if the aperture time cannot be exactly adjusted to the modulation period.

- Smoothing creates an approximating function to capture important trends in repeat. Relatively slow changes of value result in a close matching of curve fitting.

## 6.2.8 Burst Average

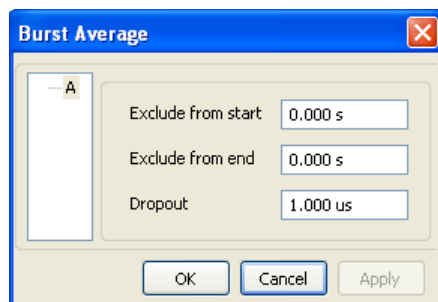


Fig. 6-13: Configure > Burst average

The [Burst Average](#) dialog, contains excluding times from start/ end and dropout.

### Channel

Select a channel.

### Exclude from start

Defines the time gap to be excluded from measurement at the beginning of the burst.

### Exclude from end

Defines the time gap to be excluded from measurement at the end of the burst.

### Dropout

Define the end of the burst by setting a dropout time in microseconds. Modulation specific power drops that are shorter than the set value are ignored.

**Note:** During the dropout time unwanted trigger signals are rejected. The set dropout time only affects the internal trigger source.

## 6.2.9 Statistics

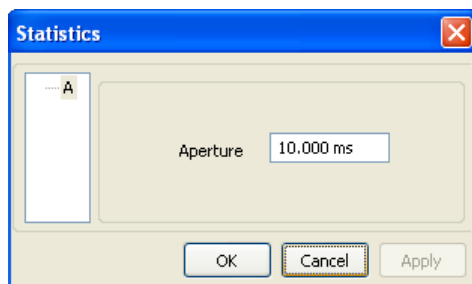


Fig. 6-14: Configure > Statistics

Open the [Statistics](#) dialog, for setting the aperture time.

### Channel

Select a channel.

### Aperture

Width of the sampling window. Defines the length of the unsynchronized time interval for statistical analysis of the signal.

## 6.2.10 Timeslots

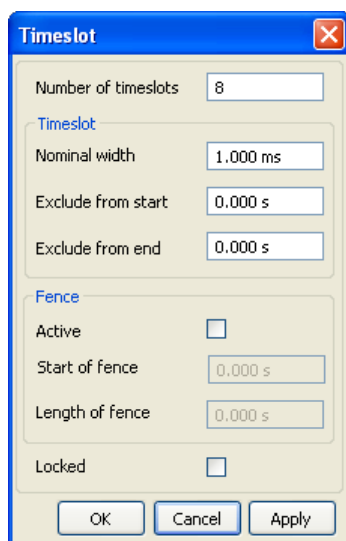


Fig. 6-15: Configure > Timeslots

Opens the dialog [Timeslots](#) for configuring timeslot and fence parameters.

### Number of timeslots

Defines the number of subsequent timeslots that belong to one single frame.

**Timeslot**

Contains the parameters to configure the time slot.

**Nominal width ← Timeslot**

Defines the timeslot length by setting time value and unit.

**Note:** For TDMA signals the nominal timeslot length must be entered here, i.e. the frame length is divided by the number of timeslots.

**Exclude from start ← Timeslot**

Defines the time gap to be excluded from measurement at the beginning of the timeslot. Enter time value and unit.

**Exclude from end ← Timeslot**

Sets time value and unit for the time gap to be excluded from measurement at the end of the timeslot.

**Note: Exclude**

You can also interactively set "Exclude from Start" and "Exclude from End" interactively in the scope display in the timeslot measurement window.

**Load**

For various common mobile radio standards you can load the specified parameters under [chapter 6.2.13, "Load Template"](#), on page 88.

The timeslots can be set interactively in trace measurement mode.

**Fence**

Contains the parameters to configure the fence.

**Active ← Fence**

Activate the fence function. Fence is a time interval within the measurement period to be excluded from measurement.

**Start of fence ← Fence**

Set the start of fence referring to the timeslot and its length. Enter time value and unit.

**Length of fence ← Fence**

Define time value and unit for the length of period to be excluded from measurement.

**Locked ← Fence**

Block the entry fields. Defines if the timeslot parameters are editable directly or graphically. Protect the settings against accidental changes.

## 6.2.11 Gates

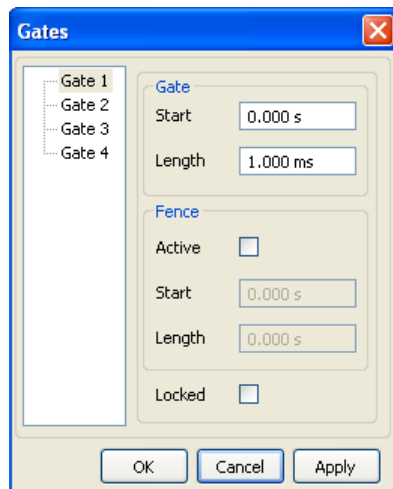


Fig. 6-16: Configure > Gates

**Gates** opens the dialog for configuring gate and fence parameters.

### Gates

Select a gate. Up to four different gates can be configured. Measurement is performed only in one gate at a time.

### Gate

Contains the parameters to configure the gate.

### Start ← Gate

Set the start time of the selected gate. Enter time value and unit.

### Length ← Gate

Define the length of gate for measurement, by setting time value and unit.

### Active ← Gate

Activate fence function. Fence is a time interval within the measurement period to be excluded from measurement.

### Start ← Gate

Define the start of gate fence to exclude from measurement. Enter time value and unit.

### Length ← Gate

Define time value and unit for the length of period to be excluded from measurement.

### Locked

Block the entry fields. Define if the gate parameters are editable directly or by graphical means. Protect the settings against being changed by mistake.

### 6.2.12 Pulse Measurement

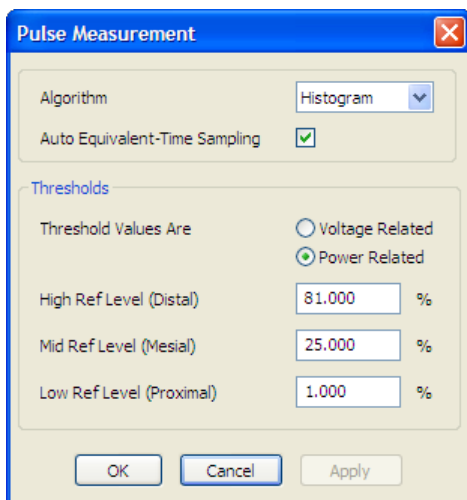


Fig. 6-17: Configure > Pulse measurement

Select the algorithm for evaluating pulse signals and set the threshold parameters in the dialog [Pulse Measurement](#).

#### Pulse Data NRP-Z Analysis



R&S NRPV supports pulse data analysis in cooperation with a power sensors NRP-Z81, NRP-Z85 or NRP-Z86 which are working in time measuring mode.

Power sensors NRP-Z81, NRP-Z85 or NRP-Z86 enable pulse data analysis in measurement mode time. All important pulse parameters are measured after setting the threshold levels. The following graph shows most of these parameters:


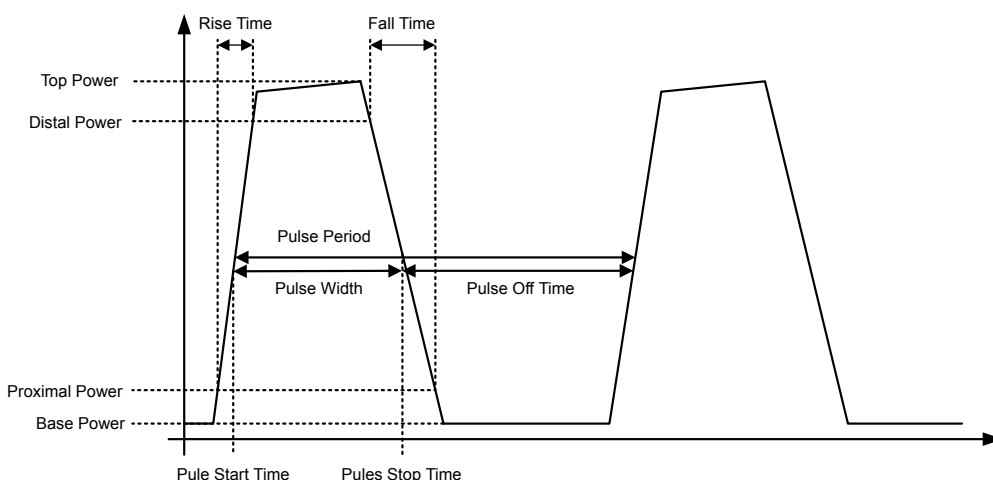


Fig. 6-18: Pulse data analysis diagram

The sensor calculates the pulse parameters from each measurement and delivers the results to R&S NRPV.

### Algorithm



Select the analysis algorithm for detecting the pulse top and the pulse base power of a pulsed signal. These two power levels are fundamental for all further signal analysis.

**Note:** NRP-Z81/Z85/Z86 power sensors provide pulse data analysis.

- |               |  |
|---------------|--|
| "Histogram"   | <p>Computes the pulse levels by analyzing the histogram of the trace data.</p> <p>By evaluating the probability density of the values of one recorded trace, histogram defines the pulse top and pulse base power level - due to fact that these bars contain the maximum number of hits in upper and lower half of the histogram. If the signal has too much noise that there is no maximum bar, the algorithm returns the min and max peak sample values as base level and top level.</p> <p><b>Note:</b> This algorithm is recommended for analyzing most of the pulse signals.</p>   |
| "Integration" | <p>Detects the pulse top power by fitting a reference rectangle pulse into the pulse signal. The algorithm approximates the signal by an ideal signal with the same energy content, pulse duration and pulse period by calculating the integral of the pulse power and the according voltages.</p> <p><b>Note:</b> Use this algorithms for pulse signals with fast rise- and fall-times as well as pulses with amplitude variations, e.g. modulated signals. I.e. use the integration algorithm if the energy content of the complete pulse, including rising and falling edges, is needed and not only the most probable top level.</p> |

### Auto Equivalent-Time Sampling

Activate auto equivalent sampling.

### Thresholds

The threshold parameters Distal, Mesial and Proximal define the high, mid and low reference level that are used to determine the pulse timing. All values are specified in percent of the pulse amplitude, i.e. the difference between top and base power. Levels are related to power readings in [Watt].

### Voltage/Power related ← Thresholds

Select how the threshold parameters are calculated, either voltage related or power related. The voltage related parameters represent the normal case, as the usual representation when defining the pulse parameters (rise/fall time, pulse width) is  $U(t)$ . To achieve a display with equivalent power related values, the voltage-related threshold values must be converted (squared).

The following table compares levels related to Volts, [Watt] and dBW.

**Table 6-2: Voltage / power related reference level**

Reference Level	Voltage related(%V)	Power related (%W)	Log. scale (dB)
Distal	90	81	-0.9
Mesial	50	25	-6
Proximal	10	1	-20

**High Ref Level (Distal) ← Thresholds**

Set the high reference level in terms of percentage of the overall pulse level. The distal power defines the end of the rising edge and the start of the falling edge of the pulse.

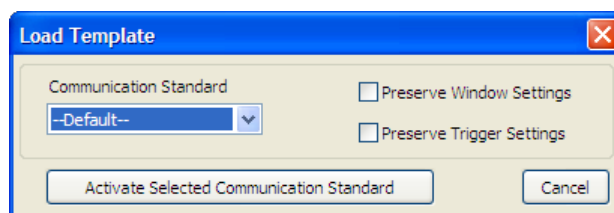
**Mid Ref Level (Mesial) ← Thresholds**

Set the medial reference level in terms of percentage of the overall pulse level. This level is used to define the pulse width ( $\tau$ ) and pulse period.


**Low Ref Level (Proximal) ← Thresholds**

Set the low reference level in terms of percentage of the overall pulse level.

The proximal power defines the start of the rising edge and the end of the falling edge of the pulse.

**6.2.13 Load Template****Fig. 6-19: Configure > Load template**

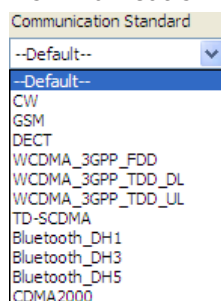Open the dialog [Load Template](#) for loading predefined settings of digital standard communication signals as GSM or CW.

**Communication and standards****Fig. 6-20: Configure > Load template > Select standard**

Currently the program provides the settings of several communication standards, plus a CW (continuous wave) signal with set frequency and level.



"--Default--"	Default values.
"<standard>"	Selects the preferred from standard communication signal.
"CW"	Settings from the stored CW signal.

#### Preserve window settings

Determine whether the window settings are to be reconfigured.

"OFF"	Use the window parameters from the template in order to optimize the diagram.
"ON"	Use already determined parameters.

#### Preserve trigger settings

Determine whether trigger settings are to be reconfigured.

"OFF"	Use the already optimized trigger parameters from the template.
"ON"	Use the individually determined trigger parameters.

#### Activate Selected Communication Standard

Assumes the settings of the selected standard.

## 6.3 Trigger




Fig. 6-21: Trigger menu

Trigger signals are used to configure the timing conditions for the start of a measurement. The trigger system is required for the average measurement modes timeslot, gate and burst, as well as for trace and statistics.

The **Trigger** menu contains the items **Settings...**, used for opening a dialog to configure trigger parameters, and **MASTER-Trigger & SYNC**, covering a submenu for selecting a device intended for synchronizing trigger signals of several devices or triggering a service request.

#### Settings

[Settings](#) opens the trigger configuration dialog to apply a trigger source and to set the appropriate parameters.

#### Master

[MASTER-Trigger & SYNC Configuration](#) opens the dialog to set the trigger master/slave and configure the synchronisation.

### 6.3.1 Settings

The trigger settings dialog contains all trigger functions.

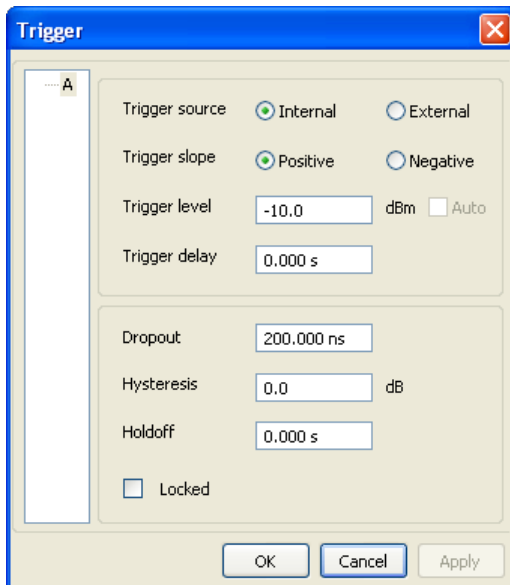


Fig. 6-22: Trigger settings dialog

#### Channel

Select the channel.


#### Trigger source


Activate the trigger source.

Internal	Select internal trigger source. The trigger event is generated by the sensor.
External	Select external trigger source. The trigger event is executed with the aid of the active edge of the sensor's incoming trigger signal. The active edge is selected under <b>Slope</b> .

#### Trigger slope

Activate the trigger slope.

"Positive" Set the rising edge of the trigger signal as active slope. The R&S NRPV shows the  symbol in the display.

"Negative" Set the falling edge of the signal as active slope, indicated by .

#### Trigger level

Determine the high/low threshold a trigger signal must exceed or fall short before a trigger event is detected.

- "Manual" Enter the power value of the high / low threshold in dBm. For a positive slope, the measurement is triggered when the signal level rises above the threshold. The threshold determines the power level, at which the signal is high (active) or low (inactive). In case a negative slope is set, the trigger event is initiated when the signal level falls below the threshold.  
**Tip:** Defining the trigger level manually.  
 Setting the trigger level manually is only possible for internal trigger sources. The setting is irrelevant to all other trigger sources. In order to achieve stable trigger conditions, a trigger level above -20 dBm is advisable. If an S-Parameter device has been activated, the trigger level setting is always referenced to the input of this device. When switching the S-Parameter device on or off, the set trigger level and the entry limits are automatically adjusted.
- "Auto" Enable triggering automatically.  
**Note:** Trigger level Auto disables editing manually and vice versa.  
**Tip:** Automatically triggered internal source  
 In the Trace mode, Auto activates the automatic setting of the trigger threshold for internal triggering. The smallest and the largest sample value within the trace length are determined. The trigger threshold is then set exactly to the midpoint of these two values.  
 If no trigger events are initiated for more than 0.3 seconds, an automatic search phase lasting 1 second is activated and then the trigger threshold is reset.

### Trigger delay

Enter the delay value and unit. Setting a positive value delays the effect of the trigger event until the set time has elapsed. Entering negative values provides pretriggering, which is, depending on the sensor type, limited to a few ms.

### Dropout

Set the dropout time in seconds. Enter value and the corresponding unit.

This parameter prevents the trigger system from being activated too early if the signal briefly falls below or exceeds the trigger threshold. The parameter is set to a value that is slightly higher than the maximum duration of power fluctuations that are not supposed to execute triggering.

### Hysteresis

Set a hysteresis value of the internal threshold. Use this function to eliminate the noise effects on the edge detector of the trigger system.

Hysteresis is a magnitude added to the threshold. The signal level must pass the sum of threshold and hysteresis before the next trigger event can be initiated. Trigger hysteresis prevents the trigger system from being activated too fast while the trigger threshold is just slightly fallen short or exceeded. With hysteresis a trigger event is only initiated if the signal level drops down the trigger level minus hysteresis for positive slopes. For negative slopes, the level must be higher than the trigger level plus hysteresis value.

**Note:** Trigger hysteresis setting only applies to the internal trigger source.

**Hold off**

Set a time value in seconds. Hold off suppresses trigger events within the set hold off time, starting from the last successful triggering. Use this function to exclude unwanted trigger events.

**Locked**

Block the entry fields. Determine if the trigger parameters are editable directly or protect the settings against being changed by mistake.

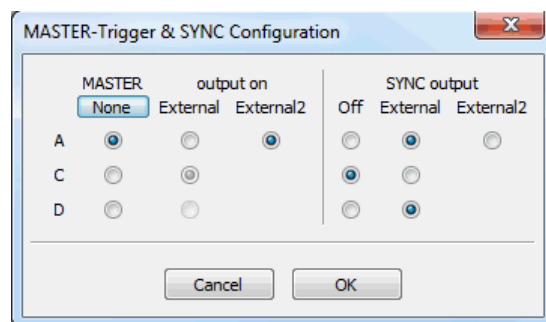
**6.3.2 MASTER-Trigger & SYNC Configuration**

Fig. 6-23: MASTER-Trigger & SYNC dialog

The "MASTER-Trigger & SYNC" dialog contains the settings necessary for configuring a trigger master and setting the synchronisation of the sensors.

**MASTER**

Selects which one of the available sensors shall be the trigger master.

The Rohde & Schwarz USB power sensors can be operated in a master/slave trigger configuration. In such a configuration the user selects one of the available sensors to be the trigger master.

The sensor which is configured as the trigger master outputs a digital trigger signal in sync with its own trigger event. This makes it possible to synchronize several sensors (see also [SYNC](#)) and to perform measurements in sync with a signal at very low power, which normally would not allow signal triggering. The trigger signal which is output has a length of 10µs and the positive slope coincides with the physical trigger point. This way other sensors which are connected to the trigger line and are configured for external trigger will start their measurement(s) in sync with the trigger event of the master.

In case of the traditional R&S NRP-Zxx power sensor series there is only one external trigger line. Hence the master trigger signal can only be emitted via that connection.

The newer R&S NRPxxS(N) series are equipped with two external trigger lines. Therefore there is an additional selection for where the master trigger signal shall be emitted ("External 1" or "External 2").


**SYNC**

Selects whether a sensor shall take part in trigger synchronization.

In order to avoid spurious triggers in an interconnection of various sensors the trigger synchronization can be used. For a better understanding you should know that the trigger system (by means of external trigger connections) is controlled by edges, not levels. A trigger event is characterized by a **positive edge** on the trigger line. As a consequence of this a (new) trigger event cannot be produced while the level of the trigger line keeps high. And exactly this is the purpose of the trigger sync mechanism.

When the trigger sync function is activated in a sensor, the device holds its trigger line high while it is executing/processing the current measurement. As soon as the sensor becomes ready it releases the trigger line. Since the (externally interconnected) digital trigger line acts as a wired-or logic, the level on the trigger line stays high until the slowest device has finished its measurement. Then the trigger line can return to low level and another trigger event can occur by a **transition** to high level.

## 6.4 Measure

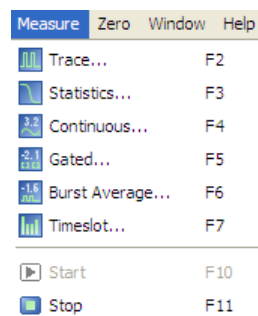

*Fig. 6-24: Measure menu*

The **Measure** menu covers all measurement modes that are provided by R&S NRPV. Perform mode specific numerical measurements, trace measurement for pulse analysis and statistically evaluate power density and distribution. Several measurement tasks can be operated simultaneously with data acquisition and evaluation visualized in the graphical areas of the measurement windows.



A measurement starts immediately by selecting a measurement mode. Set measurement parameters, mathematical operands, display settings and view the results during measurement. Assign modifications with the "Apply" button provided in each dialog.

Select one of the listed measurement modes:

### 6.4.1 Measure - Functions

#### Trace

**Trace** opens the trace measurement window for pulse analysis.

**Statistics**

[Statistics](#) opens a measurement window for evaluating the ratio of the signal density and distribution versus power. Determine the density and distribution with the aid of markers.

**Continuous, Gated, Timeslot or Burst Average**

Select a numerical measuring mode as e.g continuous, gated, burst or timeslot.

For these measuring modes the measurement windows are almost similar, why the description under [chapter 6.4.4, "Numerical"](#), on page 136 applies to all modes. Special features are described explicitly.

"Continuous"	Select the measurement configuration dialog to set the parameters for continuous power measurement.
"Gated"	Open the configuration dialog for gated power measurement. Measure the power with periodic envelope over defined time gates. Specify time intervals to be excluded from measurement.
"Timeslot"	Enter the configuration dialog covering parameters for timeslot measurement. Use this mode to measure the power of any complex signal in defined time segments simultaneously.
"Burst Average"	Pop up a measurement window to measure the burst power of a modulated pulsed signal.

**Start /Stop**

Starts or stops measurement, see [chapter 6.6, "Start / Stop Measurement"](#), on page 165.

## 6.4.2 Trace

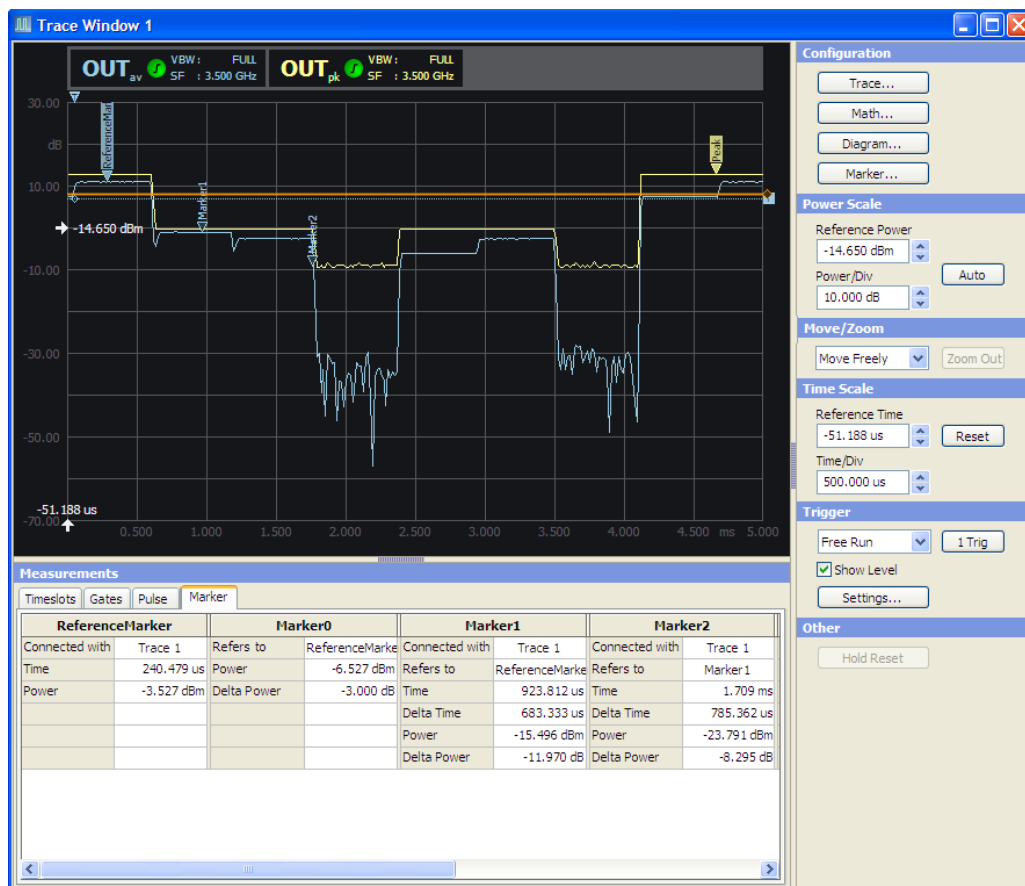


Fig. 6-25: Measure > Trace window

In the Trace mode, the R&S NRPV analyzes the power envelope of the test signal and displays the power envelope as a function of time. Displaying the signal graphically as with an oscilloscope, trace mode is particularly suitable for recognizing stable triggering of modulated signals during measurement.



Trace measurement is available in many R&S power sensors, e.g. the multipath power sensors R&S NRPxxS(N), NRP-Z1x and NRP-Z2x, except of NRP-Z27 and in the NRP-Z8x wideband power sensors. These sensors provide a graphical display of envelope power versus time.

The trace dialog covers the following panels:

### 6.4.2.1 Trace - Functions


#### Display panel

Indicates the measurement result in power versus time. The display is divided into the [Graph in Trace Mode](#), showing the diagram with grid, markers trigger delay and level information, and the [Diagram Description Bar](#) with information on the configured traces.

#### Control panel


The control panel shows all parameters that are relevant for the display. It contains buttons to call sub dialogs for Trace, Maths, Diagram and Marker configuration as well as entry fields for setting power and time scaling, trigger and some miscellaneous parameters.

#### Trace...



Opens the dialog for configuring trace parameters, see [chapter 6.4.2.5, "Measurement Configuration"](#), on page 101. Select trace, color, view, channel and measurand, and apply max hold, averaging and measurement type to the appropriate channels.

#### Math...



Open the dialog for configuring math parameters and operands, as described in [chapter 6.4.2.6, "Math Configuration"](#), on page 103. Select channel, color, view and mathematical operation and apply max hold and measurement type to the appropriate channels.

#### Diagram...



Open the dialog for [Diagram Configuration](#)). The configuration dialog is divided in several tabs, which are described in [chapter 6.4.2.9, "Diagram Config. > Axes"](#), on page 107, [chapter 6.4.2.10, "Diagram Config. > Gates/Timeslots"](#), on page 109, [chapter 6.4.2.11, "Diagram Config. > Pulse"](#), on page 110 and [chapter 6.4.2.12, "Diagram Config. > Plot"](#), on page 112.

#### Marker...



[Marker](#) opens the dialog for setting the position of a marker and its value in the display and show or hide delta values.



**Power, Move/Zoom, Time, Trigger, Other**

The screenshot shows a control panel with the following sections and controls:

- Configuration:** Trace..., Math..., Diagram..., Marker...
- Power Scale:** Reference Power (-20.000 dBm), Power/Div (10.000 dB), Auto button.
- Move/Zoom:** Move Freely dropdown, Zoom Out button.
- Time Scale:** Reference Time (-25.000 us), Time/Div (500.000 us), Reset button.
- Trigger:** Free Run dropdown, 1 Trig button, Show Level checkbox (checked), Settings... button.
- Other:** Hold Reset button.

**Fig. 6-26: Measure > Trace > Control panel**

The control panel contains the parameters to configure the trace measurement window.

For information on how to set the parameters, refer to:

- [chapter 6.4.2.15, "Power Scale"](#), on page 117
- [chapter 6.4.2.16, "Move/Zoom"](#), on page 118
- [chapter 6.4.2.17, "Time Scale"](#), on page 120
- [chapter 6.4.2.18, "Trigger"](#), on page 120
- [chapter 6.4.2.19, "Other Section"](#), on page 121


**Measurements panel**

Measurements	
Channel	OUT
Pulse Duration	558.307 us
Pulse Period	---
Duty Cycle	---
Equivalent Sampling Period	625.000 ns
Rise Time	565.008 us
Pulse Start Time	4.613 ms
Overshoot (Rising Edge)	---
Fall Time	19.428 us
Pulse Stop Time	557.262 us
Overshoot (Falling Edge)	---
Top Power	-3.190 dBm

*Fig. 6-27: Measure > Trace > Measurements panel*

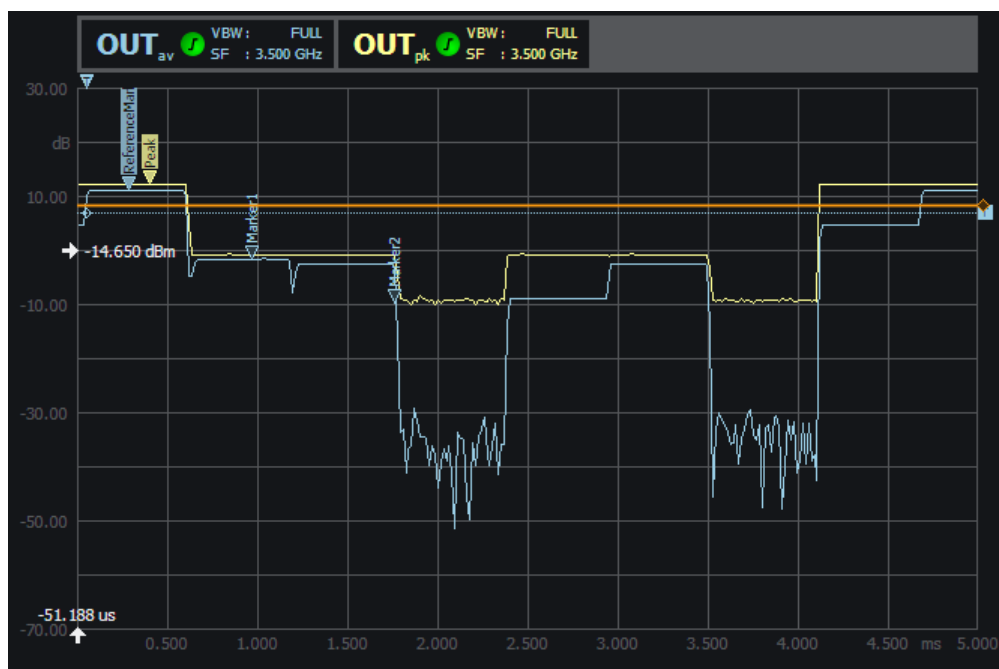Measurements Panel > Trace Measurement includes tabs with parameters listed for timeslot, gates and pulse measurements. View the values of the currently shown measurement.






**6.4.2.2 Graph in Trace Mode**



*Fig. 6-28: Measure > Trace > Graph*

The results window graphically represents the envelope power versus time. Shaped as an oscilloscope display, the results window indicates:

- diagram description bar
- Y axis, indicating power in dB or W

- X axis with times scale in s
- dotted gridlines
- a white arrow showing the reference power 
- a white arrow showing the reference time 
- relative labels for the scale
- trigger delay 
- trigger level 
- markers 
- graph, indicating the result
- gates and timeslot lines

For detailed information on the symbols refer to [chapter 5.1.6.1, "Info and Symbols"](#), on page 64.

### 6.4.2.3 Diagram Description Bar



Fig. 6-29: Measure > Trace > graph description bar

The diagram description bar indicates various information on trace configuration. For example, a selected channel or a math operation. The displayed symbols, values and additional information are each identified by their assigned colors. For example, the color of a value in a description box corresponds to the set color for measurement and graph. The arrow at the beginning or at the end of the diagram description bar indicates that not all info on the screen can be displayed. Click the respective arrow to scroll through the description bar. For detailed information on the symbols of the description bar refer to [chapter 5.1.6.1, "Info and Symbols"](#), on page 64.

### 6.4.2.4 Context-sensitive Menu in Trace Mode

R&S NRPV provides a context-sensitive menu in the results window of the trace measurement window. Open the context menu by pressing the right mouse button.



The context-sensitive menu of the trace measurement window mainly covers configuration functions which alternatively are accessed via the control panel, the menu bar or the toolbar.


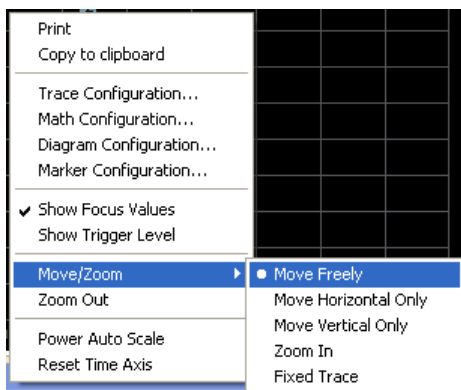


Fig. 6-30: Measure > Trace > Context sensitive menu

The dialogs and parameters are described in the appropriate chapters of this operating manual. The following table lists the context-sensitive menu items and refers to the according descriptions.

Menu item	Described in section ...
Print / Copy To Clipboard	<a href="#">chapter 5.1.1.3, "Print or Copy to Clipboard"</a> , on page 49
Trace Configuration...	<a href="#">chapter 6.4.2.5, "Measurement Configuration "</a> , on page 101
Math Configuration...	<a href="#">chapter 6.4.2.6, "Math Configuration"</a> , on page 103
Diagram Configuration...	<a href="#">chapter 6.4.2.7, "Diagram Configuration"</a> , on page 105
Marker Configuration...	<a href="#">chapter 6.4.2.13, "Marker"</a> , on page 113
Show Focus Values	<a href="#">chapter 6.4.2.9, "Diagram Config. &gt; Axes"</a> , on page 107
Show Trigger Level	<a href="#">chapter 6.4.2.18, "Trigger"</a> , on page 120
Move/Zoom Move Freely Move Horizontal only Move Vertical only Zoom In Fixed Trace Zoom Out	<a href="#">chapter 6.4.2.16, "Move/Zoom"</a> , on page 118
Power Auto Scale	<a href="#">chapter 6.4.2.15, "Power Scale"</a> , on page 117
Reset Time Axis	<a href="#">chapter 6.4.2.17, "Time Scale"</a> , on page 120

### 6.4.2.5 Measurement Configuration

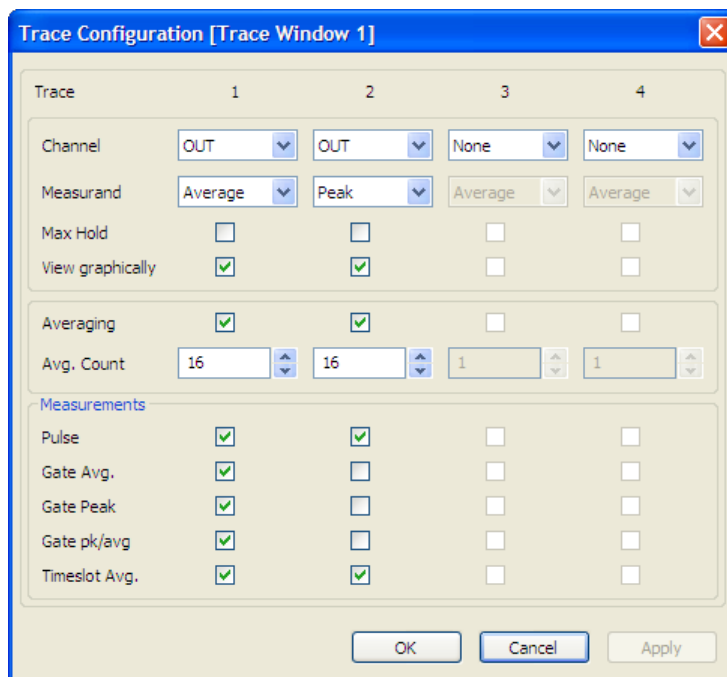

**Fig. 6-31: Measure > Trace > Meas configuration**

The trace configuration dialog provides configuration of up to four channels for sensors that support trace measurement. View selection boxes activate displaying the measurement results of each channel separately. Also, independently of each other, the following parameters are provided for each channel:

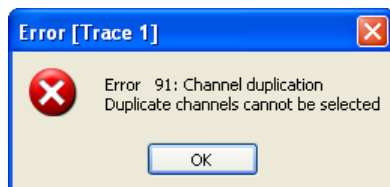
- Measurand selection
- Max. Hold measurement
- Averaging settings
- Selection of the measurement modes Pulse, Marker, Gate and Timeslot.

#### Trace 1 - 4

Indicates 4 available trace measurements.

**Note:** Channel Duplication.

In case the same trace measurement is assigned to a second trace, an error message pops up.



It is possible to perform e.g. an average measurement on one trace and a peak measurement on a second trace within the same channel.

**Channel**

Select a particular channel of the signal to be measured and displayed in trace mode. Select one of at maximum 4 channels from the list, containing only channels that provide trace measurements.

**Note:** The view checkbox is enabled automatically, if a channel is selected.

**Measurand**

Select a channel specific measurand. Since each point represents a time interval usually comprising many samples, the NRP-Z8x wideband power sensors provide selecting what is to be displayed.

"Average"	Select the average power for display. Average power features flicker free display and a smooth trace
"Peak"	Select the highest power measured
"Random"	Select the power of a randomly selected sample. Random power provides a realistic display with signal details

**Max Hold**

Set Max hold functionality. Max hold records the highest value measured for each point, independent from Average, Random or Peak measurement. The maximum measured value is displayed.

**Note:** Click "Hold Reset" button in the control panel to reset the stored values, see also [chapter 6.4.2.19, "Other Section"](#), on page 121. Alternatively disable max hold checkbox and enable again to restart maximum value recording.

**View graphically**

Activate the trace for indication in the graph.

**Averaging**

Enable manually setting of the averaging count. The averaging count sets the number of traces to be evaluated to form the measurement result. In manual mode the sensor uses the averaging factor set in the averaging count entry field. In auto mode the sensor determines the optimum average filter count internally based on the given resolution (0.01 dB).

**Note:** The following averaging count entry field is enabled only, if averaging is activated.

**Avg. Count**

Enter the number of values that have to be averaged to form the measurement result. The greater this averaging factor, the less the measured values fluctuate and the longer the measurement time. The entered averaging count value is rounded off to the nearest power of 2. Use the Up & Down arrow buttons to increment / decrement the averaging count, also rounded to the next higher / lower power of 2 values. Increasing averaging count reduces signal variations and noise.

The changed averaging count is transferred to the corresponding sensor, featuring the following configurations:

- **Avg. count < Min.:** Averaging count is set to minimum and the decrement button is disabled.

- **Avg. count > Max.:** Averaging count is set to maximum and the increment button is disabled.

**Note:** In case of Min or Max count set automatically, no error messages are reported.

### Measurements

Select the modes to be displayed.

#### Pulse ← Measurements

Enable the pulse measurement mode, described in [chapter 6.4.2.11, "Diagram Config. > Pulse"](#), on page 110. The corresponding pulse parameters are displayed in the trace measurement window.

#### Gate Avg. ← Measurements

Enable the gate average measurement.

#### Gate Peak ← Measurements

Enable the gated peak measurement mode, see [chapter 6.4.2.10, "Diagram Config. > Gates/Timeslots"](#), on page 109. The corresponding measurement configuration is displayed in the measurement window.

#### Gate pk/avg. ← Measurements

Enable the gated peak average measurement mode. The corresponding measurement configuration is displayed in the measurement window. Refer to [chapter 6.4.2.10, "Diagram Config. > Gates/Timeslots"](#), on page 109.

#### Timeslot Avg. ← Measurements

Enable the timeslot measurement mode, described in [chapter 6.4.2.10, "Diagram Config. > Gates/Timeslots"](#), on page 109. The corresponding measurement configuration is displayed in the measurement window.

## 6.4.2.6 Math Configuration

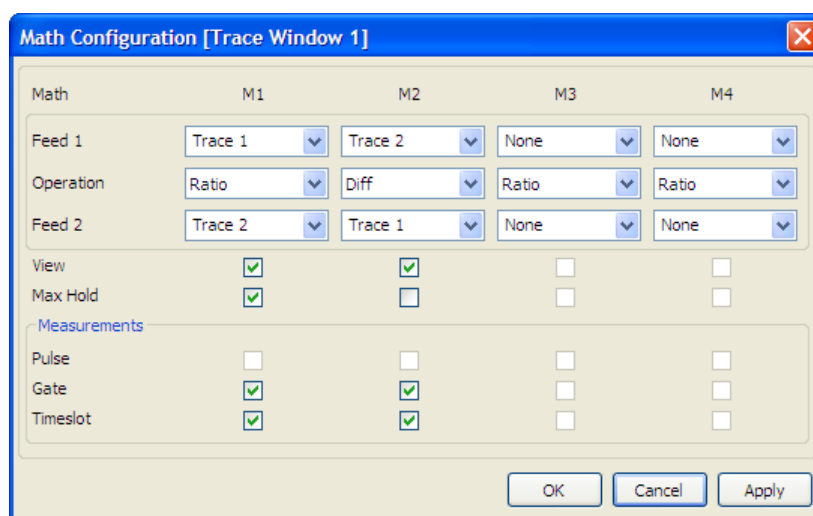


Fig. 6-32: Measure > Trace > Math configuration

R&S NRPV can combine measured values from several sensors, using mathematical functions. The math configuration dialog provides configuration of up to four math channels for multichannel measurement. Each of the four channels can be assigned to the same or to different sensors. If multiple channels use the same sensor, the measurement is performed only once. The result is reused for the other channels. View selection boxes activate displaying the measured and computed results of each math channels. Additionally, the following parameters are provided for each channel:

- Feed 1 and Feed 2 selection of the available channel traces
- Selection of math operation
- Max. Hold function
- Selection of the measurement modes Pulse, Gate and Timeslot.



Math operands can be an absolute channel or a constant that is always interpreted in Watt.

#### Math 1 - 4

Indicates 4 math measurement channels.

#### Feed 1, 2

Select an available trace, a trace memory or a constant channel for the first and for the second operand.

**Note:** Both operands can neither be the same channel nor constant values.

"Feed 1"            Select the channel to be used to calculate the displayed value

"Feed 2"            Select the second channel which is to be used for calculation

#### Operation

Select a mathematical function to operate the measurement results of feed 1 and feed 2.

"SWR"            Compute the standing wave ratio from the first and the second measurement by using the following equation:

$$SWR = (1+RC) / (1-RC)$$

The measurement is performed in logarithmic scale.

**Note:** The forward power must be measured in the first channel and the reverse power must be assigned to the second channel.

RC is the reflection coefficient, internally calculated from the measured power values P1 in channel 1 and P2 in channel 2.

$$RC = 10^{(P1 - P2) / 20}$$

"Diff"            Subtract the measured power in the second channel from the power of the first channel. The calculation, performed in linear scale is converted to logarithmic scale. Displayed unit is dB.

"Ratio"            Build the ratio of the power in the first channel to the power in the second channel. Internally the ratio is performed by subtracting the measured power values in logarithmic scale. Displayed unit is dB.



**View**

Select the math channels to be viewed on trace display. On selecting a math channel, Math trace plot is displayed in the measurement window.

**Max Hold**

Set Max hold functionality. Max hold records the highest value measured for each point, independent from the selected operation. The maximum measured value is displayed.

**Note:** Enable max hold to reset the stored values. Activating again restarts maximum value recording.

In the measurement section of the dialog trace measurements are activated. Then the measurement can be indicated in the diagram.

In the measurement section of the math configuration dialog measurements are activated. Then the results can be indicated in the diagram.

**Measurements**

Assign the math function to the measurement modes.

**Pulse ← Measurements**

Enable the pulse measurement mode. The corresponding pulse parameters are displayed in the trace measurement window, as described in [chapter 6.4.2.11, "Diagram Config. > Pulse"](#), on page 110.

**Gate ← Measurements**

Enable the gate measurement mode. The corresponding parameters are displayed in the trace measurement window, as described in [chapter 6.4.2.10, "Diagram Config. > Gates/Timeslots"](#), on page 109.

**Timeslot ← Measurements**

Enable the timeslot measurement mode under [chapter 6.4.2.10, "Diagram Config. > Gates/Timeslots"](#), on page 109. The corresponding measurement configuration is displayed in the measurement window.

### 6.4.2.7 Diagram Configuration


The diagram configuration dialog provides configuration of the trace measurement result window. All functions directly relate to the graphical data representation and do not affect sensor settings.

The dialog covers tabs for parameter settings to:

- Select the unit the results shall be displayed in [chapter 6.4.2.8, "Diagram Config. > Unit"](#), on page 106.
- Define scale and resolution of the axes under [chapter 6.4.2.9, "Diagram Config. > Axes"](#), on page 107.
- Set gates or timeslots to be viewed on the trace window in [chapter 6.4.2.10, "Diagram Config. > Gates/Timeslots"](#), on page 109.
- Select the pulse parameters to be indicated, see [chapter 6.4.2.11, "Diagram Config. > Pulse"](#), on page 110.

- Design the trace display window in [chapter 6.4.2.12, "Diagram Config. > Plot"](#), on page 112.

### 6.4.2.8 Diagram Config. > Unit

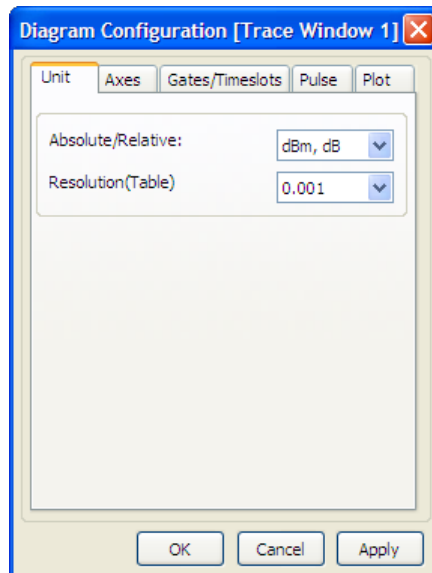

**Fig. 6-33: Measure > Trace > Diagram configuration**

The unit tab of the diagram configuration dialog contains the entry fields for assigning unit and resolution to the y-axis. Trace data can be viewed in linear scale [Watt] or logarithmic scale (dBm).

#### **Absolute/Relative**

Set the unit for the y-axis the result is to be displayed. Electrical power is measured in W and usually converted to logarithmic scale. For a relative power level the measured value is related to a reference power. The ratio is expressed in terms of the log of that ratio. The unit of the power ratio is dB. An absolute power level is referred to 1 mW and expressed in dBm.

The units of the displayed parameters of the y-axis change according to the selected unit, i.e. Min power, Max power, Rev power and power/Div are adjusted.

"dB, dBm"	Assign a logarithmic scale to the y-axis to display power ratio.
"Watt, 1"	Assign a linear scale to the y-axis for displaying absolute power values.
"dB $\mu$ V, dB"	Assign a logarithmic scale to the y-axis to display voltage ratio.

#### **Resolution (Table)**

Set a resolution for the unit of the y-axis. The precision of the displayed result depends on the selected unit.

### 6.4.2.9 Diagram Config. > Axes

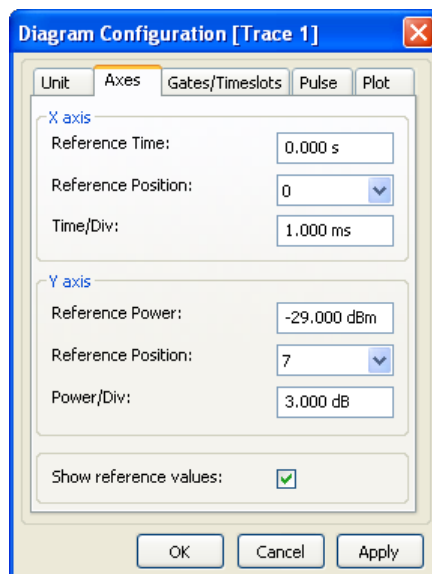


Fig. 6-34: Measure > Trace > Diagram > Axes

The Axes tab of the diagram configuration dialog provides setting scale, resolution and position of the axes. Set the absolute values, position and grid of the reference markers, and switch on or off their display. The X axis time scale is divided into 10 equal divisions. The same applies to the power scale of the Y axis.



Set value and scale directly in the control panel

Change Reference Time and Time/Div for the X axis directly by using the entry fields and the plus and minus buttons in the control panel of the trace measurement dialog and, the same way, change Reference power and Power/Div for the Y axis.

For additional description refer to [chapter 6.4.2.15, "Power Scale"](#), on page 117 and [chapter 6.4.2.17, "Time Scale"](#), on page 120.

#### X axis

Set Reference time, position and grid of the time axis. In trace measurement X axis represents the measuring time. The X axis features delayed and physical trigger markers, ruler and focus line. Delayed trigger marker always represents the 0 seconds in the X axis, and it is common to all the channels within the trace display. The number of physical trigger markers is equivalent to the number channels within the trace display. The reference time as focus is attached to the grid, graphically depicted as an arrow. The value does not move with trace nor does it move relative to markers, and it is independent of the number of channels. The total length of axis is determined by the Reference time and Time/ div. The scale minimum depends on the trace offset ranges, and the scale maximum depends on the trace measurement time ranges of all sensors that are selected for the measurement.

**Reference Time ← X axis**

Specify the reference time of the trace results window. The reference time represents the absolute center of the scale. This setting affects the graphical data representation in the application and also the measurement and sensor configuration.

**Reference Position ← X axis**

Set the position of the reference time within the trace results window.

**Time/Div ← X axis**

Define the time value of one X axis division. Enter value and unit. R&S NRPV uses a fixed grid of 10 divisions for the X axis. The time resolution is set per division with the lowest possible value of 5 ns/div. Decimal precision more than 3 decimal places is truncated in the display.

**Note:** Not all sensors support the same time resolution. Additional information can be found in the sensor data sheets. R&S NRPV automatically corrects invalid ranges for the current sensor.

Based on the X scale range, Time/Div is validated featuring the following configuration:

- **Time/Div < Min.:** Minimum value is set per division.
- **Time/Div > Max.:** Maximum value is set per division.

**Note:** In case of start value set automatically, no error messages are reported.

**Y Axis**

Set Reference power, position and grid of the level axis. The Y scale is defined by the two parameters reference level and level step per division. The Y-axis shows the unit of measurement selected in the unit tab. Both values can be entered manually in logarithmic or linear scale.

**Reference Level ← Y Axis**

Specify the upper limit of the trace results window. This setting only affects the graphical data representation in the application and has no influence on the measurement or sensor configuration.

**Reference Position ← Y Axis**

Set the reference position.

**Power/div ← Y Axis**

Define the power value of one Y axes division. Enter value and unit. Unit depends on the setting selected in the unit tab. Decimal precision more than 3 decimal places is truncated in the display. Based on the Y scale range, Power/Div is validated featuring the following configuration:

- **Pow/Div < Min.:** Minimum value is set per division.
- **Pow/Div > Max.:** Maximum value is set per division.

**Note:** In case of start value set automatically, no error messages are reported.

**Show reference values**

Show the numerical values of the reference parameters. The values are displayed right next to the arrows of the reference markers.

### 6.4.2.10 Diagram Config. > Gates/Timeslots

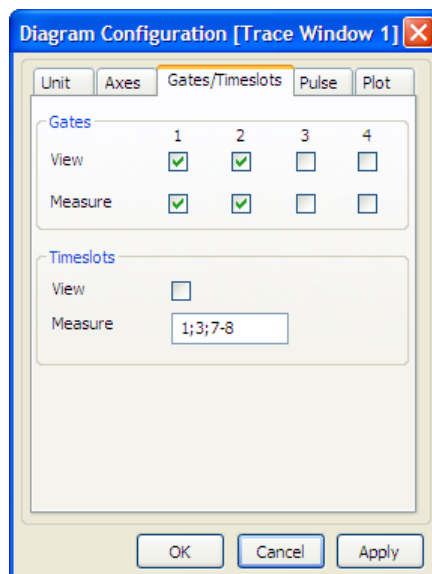


Fig. 6-35: Measure > Trace > Diagram > Gates/Timeslots

The Gates/Timeslots tab of the trace diagram configuration dialog provides selecting gates and timeslots for measurement and view. For display in trace mode gates and timeslots parameters are configured at the same time.

#### Gates

View and measurement check boxes activate measuring and displaying the measurement results in the trace measurement window. Provides 4 available trace measurements.

#### View ← Gates

Enable to view the gate on the trace measurement window. R&S NRPV displays the active gate in the diagram as dashed lines. Gate parameters as start time, length and fence settings are defined in [chapter 6.2.11, "Gates"](#), on page 85.

#### Measure ← Gates

Activate the gates for measurement. R&S NRPV lists the measured values for each selected gate in the Gates tab of the measurements panel.

#### Timeslots

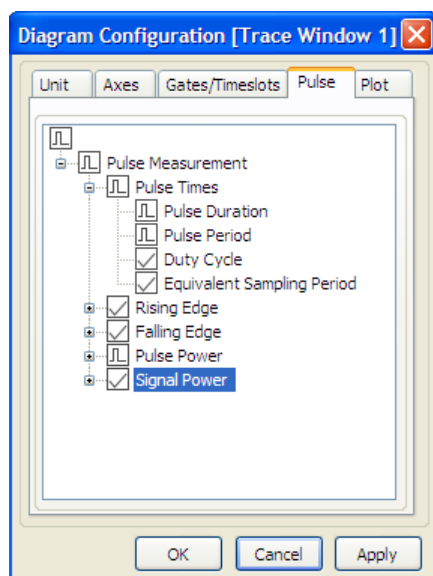
A view checkbox activates the display of timeslots in the trace measurement window. Select a particular timeslot for indicating the measured value.

#### View ← Timeslots

Enable to view the timeslot on the trace window. R&S NRPV displays the active timeslots in the diagram as dashed lines. The number of timeslots is defined in [chapter 6.2.10, "Timeslots"](#), on page 83.

**Measure ← Timeslots**

Select a timeslot for indicating the measured value in this particular time interval. R&S NRPV indicates the measured values of the appropriate channels in the timeslot tab of the measurements panel.


**6.4.2.11 Diagram Config. > Pulse**

**Fig. 6-36: Measure > Trace > Diagram > Pulse**

In the "Pulse" tab of the trace diagram configuration window, you can enable specific pulse measurement values for display. The measurement parameters are grouped as follows:

- Pulse Times, covering duration, period and duty cycle
- Rising Edge, including rise time, pulse start time and overshoot
- Falling Edge, including fall time, pulse stop time and overshoot
- Pulse Power with top, base, distal, mesial and proximal power parameters
- Signal Power, covering peak, average and minimum power

**Table 6-3: Select the checkbox to enter one of three possible states:**

<input checked="" type="checkbox"/>	Check Show the value in the table of the measurement panel.
<input type="checkbox"/> 	Show Graphically represent the value in the diagram and show the value in the table. <b>Note:</b> A parameter, which cannot be graphically displayed, supports only check or uncheck.
<input type="checkbox"/>	Uncheck Do not show the value.

**Pulse Times**

Contains parameters for information on characteristic times of a pulse.

"Pulse Duration"	(Mesial power) Displays the pulse width. <b>Note:</b> Usually the interval between the 50% points of the final amplitude is used to define pulse duration.
"Pulse Period"	Displays the time the pulse signal needs to complete one cycle.
"Duty Cycle"	Indicates the duty cycle of the measured power. If a duty cycle of a pulsed signal is measured, the R&S NRPV displays the average power in the pulse.
"Equivalent Sampling Period"	Indicates the duty cycle of the equivalent sampling period.

**Rising Edge**

Contains falling edge signal parameter to be displayed.

"Rise Time"	Indicates the time required for the signal to change from low value to high value.
"Pulse Start Time"	Displays the start point of the current pulse, i.e. the time when the signal crosses the medial reference level.
"Overshoot"	Indicates when the final value is exceeded.

**Falling Edge**

Contains falling edge signal parameter to be displayed.

"Fall Time"	Indicates the time required for the amplitude of a pulse signal to change from high value to low value.
"Pulse Stop Time"	Displays the end point of the current pulse, i.e. the time when the signal crosses the medial reference level.
"Overshoot"	Indicates when the final value is exceeded.

**Pulse Power**

Contains pulse power parameters to be displayed.

"Top Power"	Indicates the power of a complete pulse, including rising and falling edges. <b>Note:</b> This function is provided by NRP-Z81/Z85/Z86 power sensors only.
"Base Power"	Indicates the base power, computed in the pulse level analysis histogram of the trace data.
"Distal Power"	Indicates the absolute power value of the high reference level.
"Mesial Power"	Indicates the absolute power value of the mid reference level.
"Proximal Power"	Indicates the absolute power value of the high reference level.

**Signal Power**

Contains parameters for continuous signals to be indicated.

"Peak Power"	Indicate the measured peak power.
"Average Power"	Indicate the measured average power.

"Minimum Power" Minimum power value of the signal.

#### 6.4.2.12 Diagram Config. > Plot

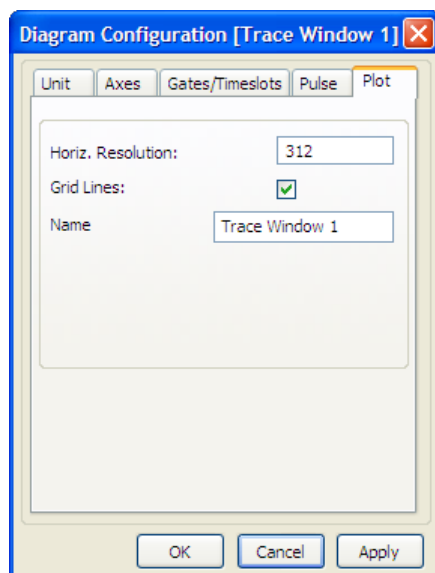


Fig. 6-37: Measure > Trace > Diagram > Plot

The "Plot" tab in the trace diagram configuration dialog covers parameters for designing the trace measurement display. Set screen resolution and grid lines and assign the label to the measurement window in this dialog.

##### Horiz. Resolution

Set a number of trace points for the horizontal resolution. This setting is valid for all traces. R&S NRPV synchronizes an updated resolution with the sensor. Based on the minimum trace points, resolution is validated featuring the following configuration:

- **Horiz. Resolution < Min.:** Minimum resolution is set.
- **Horiz. Resolution > Max.:** Maximum resolution is set.

**Note:** In case of resolution value set automatically, no error messages are reported.

##### Grid lines

Set grid lines to be displayed or hidden.

##### Name

Apply a designated name to the trace measurement window.



6.4.2.13 Marker

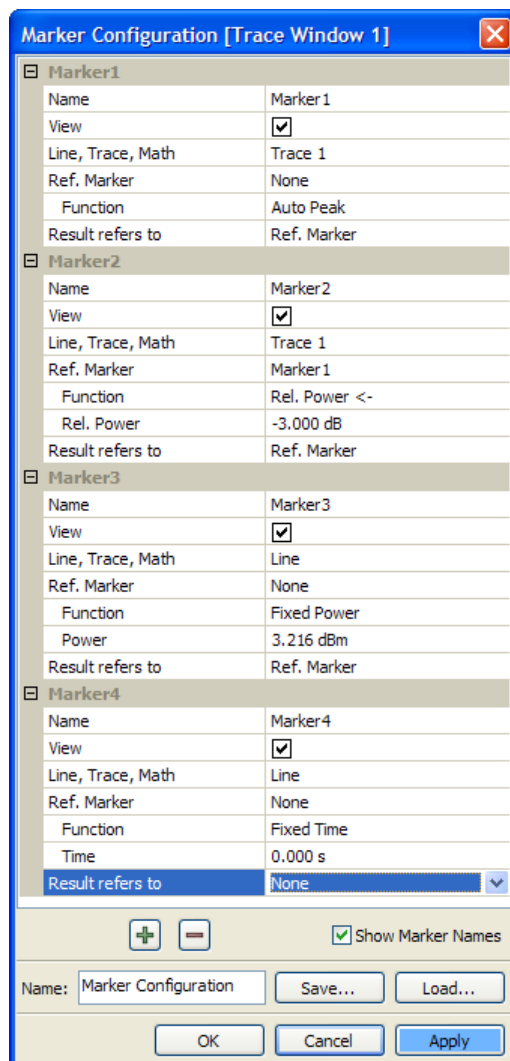


Fig. 6-38: Measure > Trace > Marker dialog


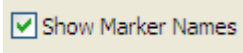
In trace mode, any number of markers can be defined. Markers can be assigned to trace points for performing automated measurements.

You can use markers quite different, e.g. to define a delta to a level or a frequency value, to refer to a reference value, or to determine the peak. The settings in the marker dialog provide therefore countless variations.

Markers can be defined in the "Marker Configuration" dialog, which can be started by pressing Marker... in the configuration panel.

Initially no markers are defined. Press + to add a new marker.

(Marker) Name	Assign a marker name.
View	Indicate the marker in the graph.

Line, Trace, Math	Refer to a marker line, a trace related marker or a math trace related marker.
Ref. Marker	Determine an additional reference to e.g. an already defined marker, or a function. This reference is used to position the current marker.
Function	Determine the task of the marker. The possible values depend on the settings of Line, Trace and Math. A table with available combinations can be found below.
Result refers to	Determine an additional reference to e.g. an already defined marker, or a function. This reference is used to calculate marker results of the current marker relative to. By default, the marker results refer to the reference marker. It is rarely helpful to define separate reference markers for positioning and result evaluation.
	Add or remove a marker
	Display the marker's names in the graph that are activated in the "View" checkbox.
Name	Assign an individual name to the marker dialog.
Save/Load	Save or Restore a marker configuration.



All values and parameter of the markers are shown in the marker panel underneath the diagram. Additionally, you can change the function values directly in the graph by selecting and dragging with the mouse pointer.

### Marker functions in detail

**Table 6-4: Marker functions**

Line, Trace, Math	Ref. Marker	Function	Application
Line	None	Fixed Time	Vertical Marker Line
		Fixed Power	Horizontal Marker Line
	<Any Marker>	Rel. Time. and/or Rel. Power depending on reference marker type	Marker line relative to another marker value
<Any Trace>	None	Fixed Time	Marker showing the power at a dedicated point of time
		Auto Peak	Marker "riding" on the current peak of a trace
	<Any Marker>	Rel. Time	Marker time shifted to the Ref. marker
		Rel. Power <-	Marker at the next position left to reference marker where relative power is reached
		Rel. Power ->	Marker at the next position right to reference marker where relative power is reached

Line, Trace, Math	Ref. Marker	Function	Application
		Next Peak <-	Marker at the next peak left to reference marker
		Next Peak ->	Marker at the next peak right to reference marker

The math traces are handled the same way.

#### 6.4.2.14 Example how to use markers

The example deals with two pulse traces. With the marker functionality, the R&S NRPV measures the interval between the two pulses.



Fig. 6-39: Marker example > two traces carrying pulses

To define the markers:

1. Set the first marker to indicate the peak of "Trace 1" (the blue trace)

Blue Marker	
Name	Blue Marker
View	<input checked="" type="checkbox"/>
Line, Trace, Math	Trace 1
Ref. Marker	None
Function	Auto Peak
Result refers to	Ref. Marker

Fig. 6-40: Marker example > 1st marker

2. Set the second marker similarly for "Trace 2" (the yellow trace with the delayed pulse):

Yellow Marker	
Name	Yellow Marker
View	<input checked="" type="checkbox"/>
Line, Trace, Math	Trace 2
Ref. Marker	None
Function	Auto Peak
Result refers to	Ref. Marker

**Fig. 6-41: Marker example > 2nd marker**

- Set marker number three to detect the pulse start by searching the -3 dB point left to the peak.

Start of Blue	
Name	Start of Blue
View	<input checked="" type="checkbox"/>
Line, Trace, Math	Trace 1
Ref. Marker	Blue Marker
Function	Rel. Power <-
Rel. Power	-3.000 dB
Result refers to	Ref. Marker

**Fig. 6-42: Marker example > 3rd marker**

- Set the last marker accordingly for the yellow trace.

Start of Yellow	
Name	Start of Yellow
View	<input checked="" type="checkbox"/>
Line, Trace, Math	Trace 2
Ref. Marker	Yellow Marker
Function	Rel. Power <-
Rel. Power	-3.000 dB
Result refers to	Start of Blue

**Fig. 6-43: Marker example > 4th marker**

**Note:** The reference marker for result evaluation is not the same used for positioning!

In this case we want to know the distance to the third marker "Start of Blue".

The marker results including the pulse distance are shown below the trace display:

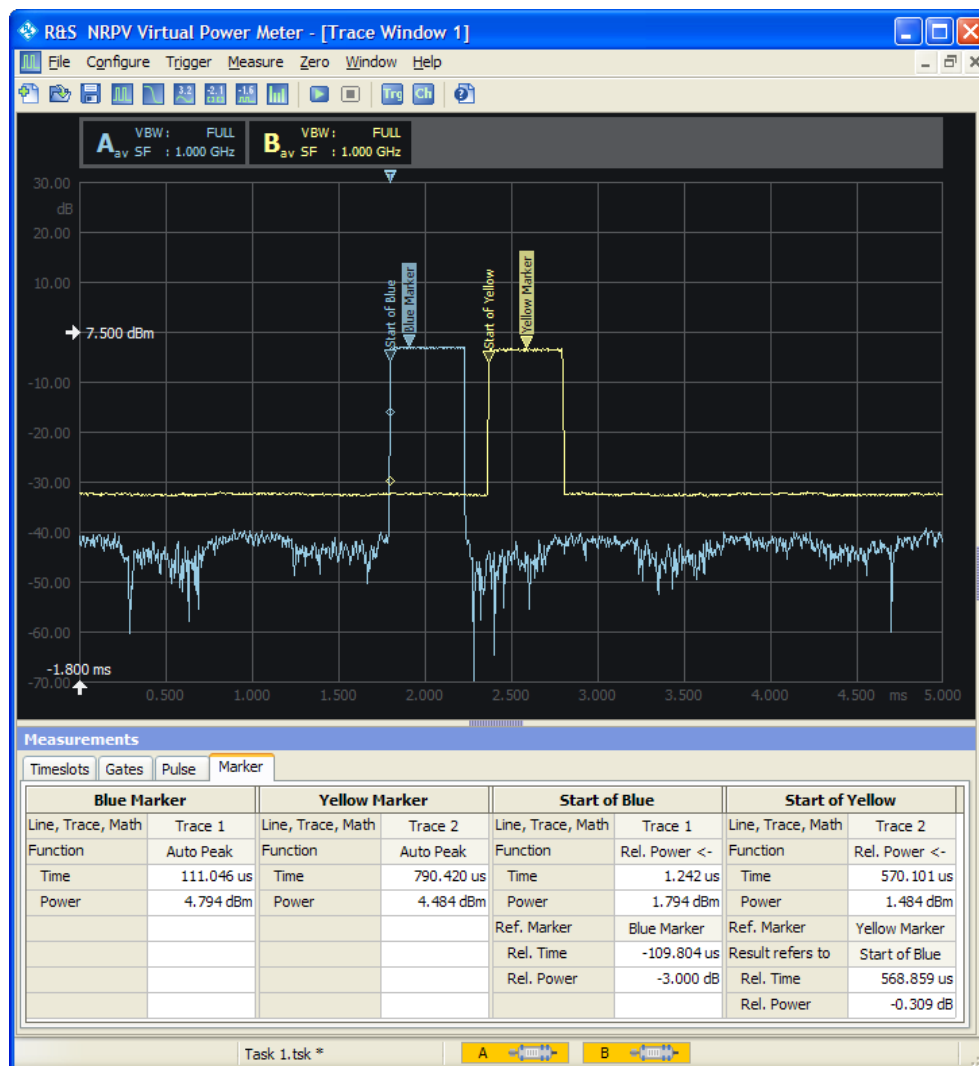


Fig. 6-44: Marker example > traces with defined markers

The pulse distance is shown in the section of "Start of Yellow > Result refers to > Rel. Time""Rel. Time"The interval between the two pulses is 568.859 us.

### 6.4.2.15 Power Scale

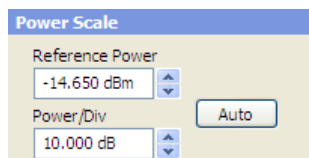


Fig. 6-45: Measure > Trace > Power scale

This section provides to directly set the reference power level and the Y axis power scale division. The Y scale can be represented logarithmic or linear, defined in [chapter 6.4.2.8, "Diagram Config. > Unit"](#), on page 106.

### Reference Power

Adjust reference power as the upper limit by either directly entering the value or incrementally shift the level using the plus minus buttons. Alternatively, set the reference power level under [Diagram Config. > Axes](#).

**Note:** This setting only affects the graphical data representation and has no influence on the measurement.

### Auto

Auto

Initiate Auto scaling for the Y axis. The lower and upper limit values are computed according to a special algorithm. Considering all viewed traces the algorithm determines the minimum and maximum values of all the signals.

R&S NRPV updates the parameters, listed below:

- Y start, Y spread and Y stop
- Reference position marker, based on Y start change
- Trigger bar
- Y min power, Y max power and Y power/ div
- Reference position (grid value) fields in the diagram configuration
- Trace plots

Depending on the defined unit and the connected sensors, different routines are computed to determine the scaling automatically.

### Power / Div

Set the power range of one Y axis division. Either directly enter a value or increment / decrement the size in fixed steps using the up and down arrow buttons. Alternatively, set the Y axis division in [Diagram Config. > Axes](#).

#### 6.4.2.16 Move/Zoom




Fig. 6-46: Measure > Trace > Move/Zoom

Covers a list for configuring the mouse movement and zoom functionality in the trace results window.



Power/Div sets the scaling of the Y axis. Changing this value is always done by keeping the reference power constant and adjusting the visible power limits accordingly.

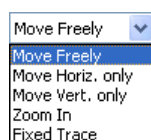


Fig. 6-47: Measure > Trace > Move/Zoom list



### Additional adjustments during Zoom In

R&S NRPV does not just graphically perform zoom in operation but reconfigures the sensors and trace parameters to provide more detailed information on the measurement results.

#### Move / Zoom

Selects the zoom functionality.

##### "Move Freely"

Freely changes the position of traces within the results window. R&S NRPV adjusts affected values automatically, and even provides moving the graphs.

How to proceed:

- Set the cursor to the position you want to move.
- Capture a trace by pressing the left-hand mouse button
- Keep the button pressed.
- Move the trace to the requested position.
- Release the mouse button to drop the trace at its new position.

##### "Move Horiz. only"

Changes the position of traces within the results window in horizontal direction. Proceed the same way as described.

##### "Move Vert. only"

Changes the position of traces within the results window in vertical direction. Proceed as described .

##### "Zoom In"

Freely selects any section to be zoomed in the results window.

How to proceed:

- Set the cursor to the start point.
- Press the left-hand mouse button, and keep it pressed.
- Drag a rectangular shape around the area to be zoomed in.
- Release the mouse button to execute zooming.

**Note:** In this way, you can zoom in the display in several steps. Using "Zoom out" button, you can return to the previous size. To reset the zoom select the "Zoom Out" button.

The R&S NRPV does not just graphically perform zoom in operation but reconfigures the sensors and trace parameters to provide more detailed information on the measurement results.

##### "Fixed Trace"

Fix the trace configuration of the currently performed measurement. Moving or zooming the trace with the mouse is disabled.

#### Zoom Out

Returns the scaling to the size before zooming in. If zooming in has been performed in several steps, zooming out operates the same way reversely.

#### 6.4.2.17 Time Scale

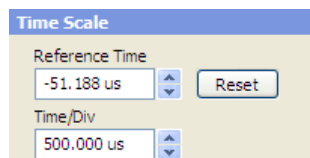


Fig. 6-48: Measure > Trace > Time Scale

This section provides to directly set the reference time and the X axis time scale division.



Modification of time scale parameters is only possible for linear scale.

#### Reference Time

Set reference time by either directly entering the value or by using the up and down arrow buttons. The two buttons increase or decrease the time in fixed steps. The appropriate unit is added automatically to the value. Alternatively, set the reference time under [Diagram Config. > Axes](#).

#### Reset



Set reference time and reference position to default values.

#### Time/ Div

Set the time span of one X axis division. Either directly enter the value or increment/decrement the size in fixed steps using the up and down arrow buttons. Alternatively set the X axis division in [Diagram Config. > Axes](#).

#### 6.4.2.18 Trigger


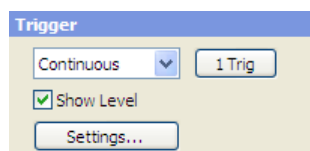


Fig. 6-49: Measure > Trace > Trigger

Contains a drop down list to select the trigger mode.





Free Run	Automatically starts a measurement if no trigger event has occurred after 300 ms.
Continuous	Continuous triggering with regular trigger events.
Single	This setting disables continuous triggering so that only one trigger event at time is executed. To enable triggering, press the 1Trig key. The symbol Trigger sequence control appears in the display. The trigger sequence control is used to manually control the trigger sequence.

### 1Trig



Initiate a single trigger event manually. 1Trig captures the signal irrespective of the trigger level and applies the trigger event to all channels in the trace window.

Depending on the state of the Trigger mode 1Trig initiates different events:

- **Single deactivated** Stop a running measurement, or a start again a stopped measurement.
- **Single active** First selection of Trig1 enables triggering and starts measurement. A second stroke initiates one trigger event. The next stroke switches to manual triggering.

### Show Level

Show the trigger level line in the display.


**Note:** Show level only concerns indicating the trigger level line. Trigger level symbols are permanently displayed, even if show trigger level is deactivated.

### Settings



**Settings** opens the trigger configuration dialog to set the appropriate trigger parameters.

#### 6.4.2.19 Other Section



*Fig. 6-50: Measure > Trace > Other*

Contains a reset button for restarting max hold function.

### Hold Reset

Resets the recorded max hold values and then restart Max Hold operation. For information on max hold function see [chapter 6.4.2.5, "Measurement Configuration"](#), on page 101.

### 6.4.2.20 Measurements Panel > Trace Measurement

Measurements			
Timeslots	Gates	Pulse	Marker
			<b>OUT</b>
Pulse Duration		1.116 ms	
Pulse Period		---	
Duty Cycle		---	
Equivalent-Time Sampling Period		625.000 ns	
Rise Time		7.531 us	
Pulse Start Time		1.171 ms	
Overshoot (Rising Edge)		1.675 %	
Fall Time		7.364 us	
Pulse Stop Time		562.406 us	
Overshoot (Falling Edge)		8.419 %	
Top Power		-9.115 dBm	
Base Power		-20.239 dBm	
Distal Power		-9.952 dBm	
Mesial Power		-14.231 dBm	
Proximal Power		-19.749 dBm	
Peak Power		-8.898 dBm	
Average Power		---	
Minimum Power		-42.184 dBm	

**Fig. 6-51: Measure > Trace > Measurements**

The measurements panel consists of separate tabs which contain the significant parameters for timeslot, gates and pulse power measurement, and NdB down and marker parameters. R&S NRPV displays the currently measured values.

#### Measurements

Contains the parameters for configuring the parameters for timeslot, gates and pulse power measurement.

#### Timeslots ← Measurements

Display the currently measured power level of a selected timeslot. Select the timeslot for indicating in [Diagram Config. > Gates/Timeslots](#).

#### Gates ← Measurements

Show the currently measured values of the selected gates. Display the values of av (average power), pk (peak power) and the ratio of pk/av. Select the timeslot for indicating in [Diagram Config. > Gates/Timeslots](#).

#### Pulse ← Measurements

Display the currently measured values of the incoming pulse signal. Display the parameters selected in [Diagram Config. > Pulse](#).

#### Marker ← Measurements

Display the settings of the markers selected for view in [Marker](#).

### 6.4.3 Statistics

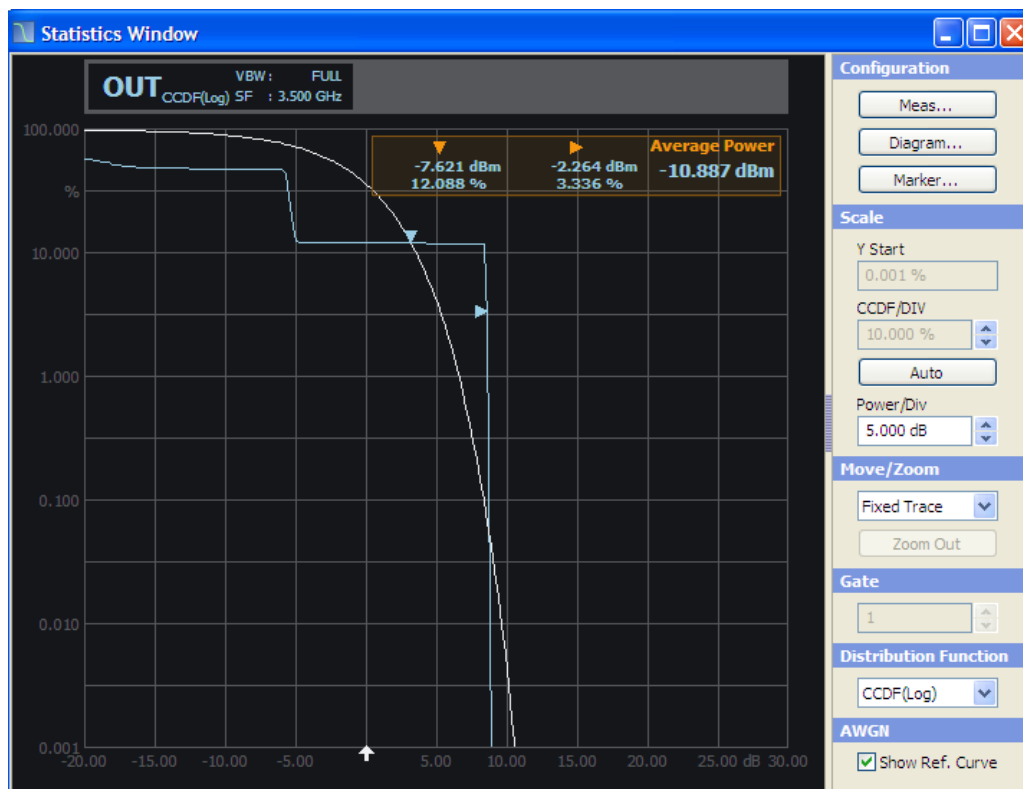


Fig. 6-52: Measure > Statistics window

In the **Statistics** mode, the R&S NRPV analyzes the power envelope of the test signal and returns an array of statistic values. Power envelope in its distribution and distribution density function is displayed. Statistically analyzing the envelope power requires trace measurement of the signal. The measurement covers one time interval and is repeated until the desired number of samples is attained. Multiple statistic measurements can be performed simultaneously.



The NRP-Z8x wideband power sensors provide to graphically display the amplitude distribution as CCDF, CDF or PDF.

#### 6.4.3.1 Statistics - Functions


The "Statistics" dialog covers the following functions.

##### Display panel


Displays the results of power measurement statistically, that means the distribution or the distribution density. The display is divided into the [chapter 6.4.3.2, "Graph in Statistics Mode"](#), on page 125, showing the diagram with grid, markers and measurement graph, and the [chapter 6.4.3.3, "Diagram Description Bar"](#), on page 125 with information on the configured measurements.

**Control panel**

Shows all parameters that are relevant for the display. It contains buttons for accessing measurement, diagram and marker configuration sub dialogs, as well as entry fields for directly setting power and distribution scaling, distribution function and some miscellaneous parameters.

**Meas...**

Opens the dialog for [Measurement Configuration](#). Select color, view and channel of up to 4 configurable measurements. Set markers and AWGN distribution to be displayed and select acquisition and distribution functions.

**Diagram...**

Opens the dialog to configure statistics display. Define the settings of the axes in [Diagram Config. > Axes](#) and apply plot settings in [Diagram Config. > Plot](#) to design the display and output of the measurement results.

**Marker...**

Opens the dialog to set the position of the X and Y markers and their values in the display. For detailed description refer to [chapter 6.4.3.8, "Marker"](#), on page 132.

**Scale, Move/Zoom, Gate, Distribution Function and AWGN**

Directly enter the values or select settings in the control panel. For description refer to [chapter 6.4.3.9, "Scale"](#), on page 133, [chapter 6.4.3.10, "Move/Zoom"](#), on page 133 and [chapter 6.4.3.11, "Gate, Distribution Function and AWGN"](#), on page 134.

### 6.4.3.2 Graph in Statistics Mode

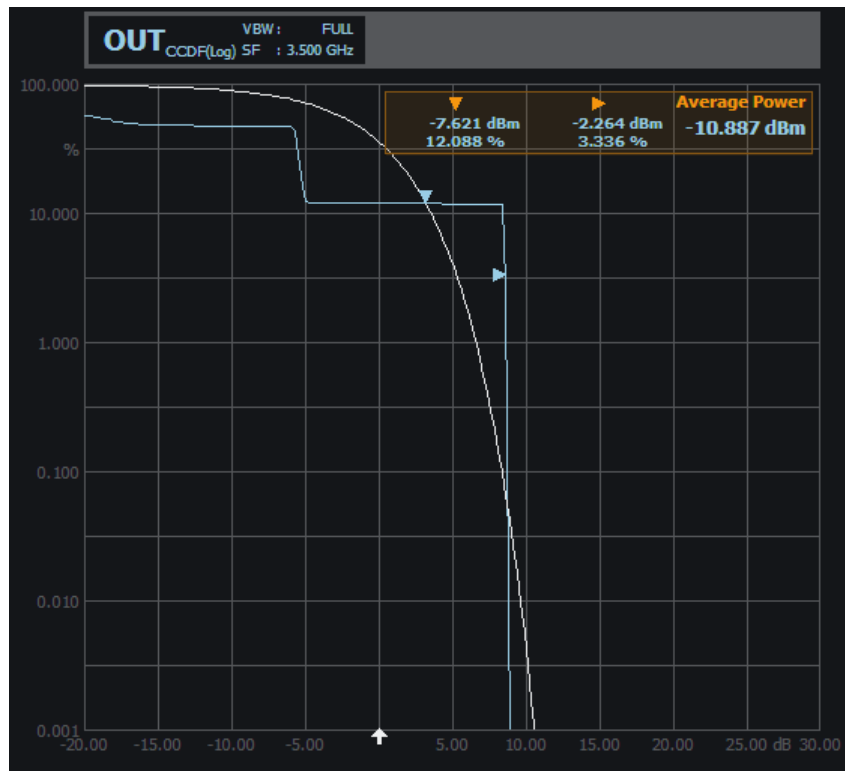





Fig. 6-53: Measure > Statistics > Graph

The diagram area graphically represents the distribution or distribution density of the envelope power. The results window indicates:

- Diagram description bar
- X axis, indicating power in dB or W
- Y axis scaled in %
- Dotted gridlines
- A white arrow showing the average power 
- Relative labels for the scale
- Markers  
- Graph, indicating the result and the additive white gaussian noise distribution

For detailed information on the symbols refer to [chapter 5.1.6.1, "Info and Symbols"](#), on page 64.

### 6.4.3.3 Diagram Description Bar




Fig. 6-54: Measure > Statistics > graph description bar

The diagram description bar indicates various information on statistics configuration, like a selected channel or a distribution function. The displayed values and additional information are each identified by their assigned colors, that means, the color of a value in a description box corresponds to the color assigned to the measurement and graph. An arrow at the beginning or at the end of the diagram description bar indicates that not all info on the screen can be displayed. Click the respective arrow to scroll through the description bar.


For detailed information on the symbols of the results window refer to [chapter 5.1.6.1, "Info and Symbols"](#), on page 64.

#### 6.4.3.4 Context-sensitive Menu in Statistics Mode

R&S NRPV provides a context-sensitive menu in the results window of the statistics measurement window. Open the context menu by pressing the right mouse button.



The context-sensitive menu of the statistics measurement window mainly covers configuration functions which alternatively are accessed via the control panel, the menu bar or the toolbar. The menu also consists of functions as e.g. Show Hide Markers, Move/Zoom or Auto Scale. Show/Hide Markers and Move/Zoom provide submenus for selecting further parameters.

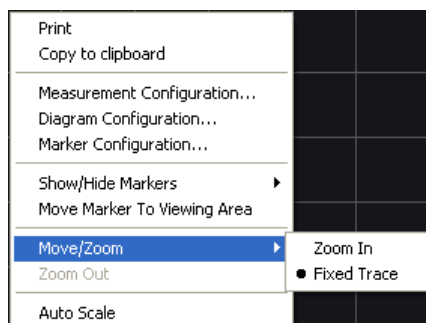

**Fig. 6-55: Measure > Statistics > Context sensitive menu**

The dialogs and parameters are described in the appropriate chapters of this operating manual. The following table lists the context-sensitive menu items and refers to the according descriptions.

Menu item	Described in ...
Print / Copy To Clipboard	<a href="#">chapter 5.1.1.3, "Print or Copy to Clipboard"</a> , on page 49
Measurement Configuration	<a href="#">chapter 6.4.3.5, "Measurement Configuration"</a> , on page 127
Diagram Configuration...	<a href="#">chapter 6.4.3.6, "Diagram Config. &gt; Axes"</a> , on page 129 <a href="#">chapter 6.4.3.7, "Diagram Config. &gt; Plot"</a> , on page 131
Marker Configuration Show/Hide Markers Move Marker to Viewing Area	<a href="#">chapter 6.4.3.8, "Marker"</a> , on page 132

Menu item	Described in ...
Move/Zoom Zoom Out	chapter 6.4.3.10, "Move/Zoom", on page 133
Auto Scale	chapter 6.4.3.9, "Scale", on page 133

### 6.4.3.5 Measurement Configuration

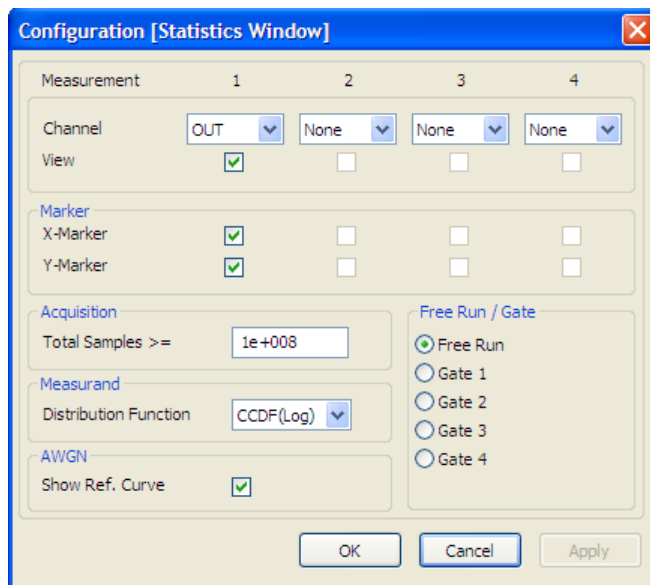


Fig. 6-56: Measure > Statistics > Meas configuration

In the "Configuration (Statistics Window)", you can configure up to four measurements with sensors that support statistics measurement. View selection boxes activate displaying the measurement results. You can set channel and marker separately for each measurement, as well as general parameters for acquisition, distribution and display of the measurement results.

#### Measurement 1 - 4

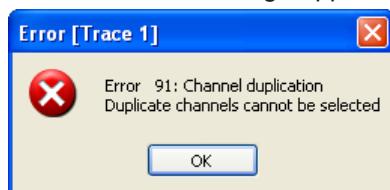
Indicates 4 channels for statistics measurements.

#### Channel

Selects the channel. The list contains up to four channels, provided that the connected sensors support statistics measurement.

**Note:** The "View" checkbox is enabled automatically, when you select a channel.

**Note:** Channel Duplication. In case the same statistics measurement is assigned twice, an error message appears.



It is possible to assign one channel to a measurement only.

#### View

Select the measurement result to be viewed on display.

#### Marker

Define a marker for either power or for density/distribution and set the positions. With the aid of markers you can calculate scalar values at the marker positions.

#### X Marker ← Marker

View the marker, positioned to a power value in the measurement window. The value of the distribution or the distribution density is measured and displayed.

#### Y Marker ← Marker

Display the marker, positioned to a value of distribution or distribution density. The power is measured and displayed.

#### Acquisition

Configure data acquisition parameters to be performed by the R&S power sensor.

#### Total Samples ← Acquisition

Enter a minimum number of samples for statistics measurement. The parameter is used to calculate the measurement time considering the minimum and maximum values of the connected sensors.

#### Measurand ← Acquisition

Selects the distribution function for signal measurement and display. R&S NRPV supports the distribution functions CDF, the CCDF and PDF.

#### Distribution Function Measurand

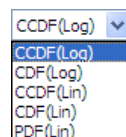


Fig. 6-57: Distribution Function > Function list

Updates the sensor and the measurement configuration value. The sensor can be set to deliver CCDF statistics data directly. CCDF shows the probability that the mean signal power will be exceeded. The probability is represented as % in the diagram, performed either in logarithmic or linear scale.

- "CCDF (Log) " Selects the CCDF (complementary cumulative distribution function) function with the results displayed in logarithmic scale.
- "CDF (Log) " Selects the CDF (cumulative distribution function) in logarithmic scale. The R&S NRPV updates the sensor using the CCDF function and calculates the measurement results internally, by means of:  $CDF=1-CCDF$
- "CCDF (Lin) " Selects the CCDF function displayed in linear scale.
- "CDF (Lin) " Selects the CDF function displayed in linear scale.



"PDF (Lin)" Selects the PDF (probability density statistics) function. The graph represents the power histogram in linear scale.

### AWGN

Adds an ideal AWGN curve as reference to the statistics data display. The reference curve relates to the average power and can be used with all statistics modes.

### Free Run /Gate


Activates measurement with an immediately executed trigger event.

**Note:** "Free Run" mode disables "Gate" mode and vice versa.

- "Free Run"
- Active  
Free run performs continuous measurement during the selected time interval, asynchronously to the waveform. If a measurement is completed, the sensor is immediately set to initiated, waiting for the next trigger event.
  - Deactivated  
A measurement is performed only once. Use free running for the first measurement of signals with unknown timing and level.

"Gate 1 ...4" Select a particular gate to acquire measurement values. The measurement is performed synchronously over the selected gate. R&S NRPV provides up to four gates for measurement. Statistic gate parameters as statistics start time, length and fence settings are defined in [Gates](#).

#### 6.4.3.6 Diagram Config. > Axes

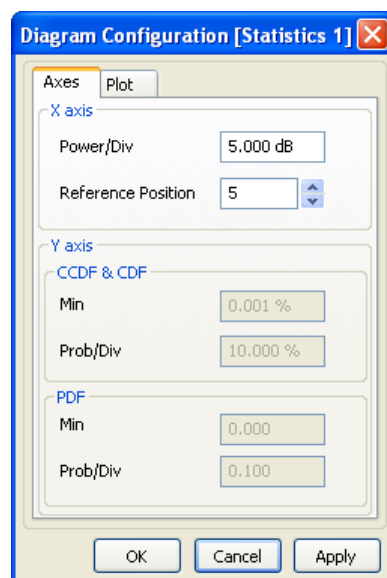

**Fig. 6-58:** Measure > Statistics > Diagram > Axes

The "Axes" tab of the diagram configuration dialog covers entry fields for defining scale and reference position for the X axis, and scale in dependency of the distribution function for the Y axis, respectively. In statistics measurement, the X axis represents the

power values, and the Y axis indicates the effective frequency of the values. The scales of both axes are divided into 10 equal divisions.

**X axis**

Sets a reference position and grid of the power axis and thereby determine the start value of the power scale.

**Power/Div ← X axis**

Defines the power value of one division. Enter value and unit.

**Reference Position ← X axis**

The scale of the X axis is focused on the reference power, that means the average power that is applied from the sensor of the appropriate channel. Minimum and maximum values of the grid cannot be entered directly. Relating to the reference position and power/Div R&S NRPV calculates the start and end value of the scale, by means of:

Start = Reference Power – (Reference position \* Power/Div.)

The scale values shown in power grid lines are relative values with respect to reference power.

**Y axis**

Enters start value and grid of the probability axis referring to the distribution function. For CCDF/CDF function scale unit is % in each case, for PDF function is dimensionless.

**CCDF & CDF ← Y axis**

Covers the Y axis settings for the CCDF/CDF distribution function in %.

**Min ← CCDF & CDF ← Y axis**

Sets the start value of the probability axis for CCDF/CDF evaluation. Enter value and unit.

**Prob/Div ← CCDF & CDF ← Y axis**

Defines the value of one Y axis division.

**PDF ← Y axis**

Covers the Y axis settings for the pdf distribution function.

**Min ← PDF ← Y axis**


Sets the start value of the probability axis for PDF evaluation. Enter value and unit.

**Prob/Div ← PDF ← Y axis**

Defines the value of one Y axis division.

**Note:** Modify Y axis parameters in linear scale only. Displaying the results in logarithmic scale, that means the CCDF or CDF function, the start and "<function>/Div" values are fixed. Modification is only possible for linear scale.

### 6.4.3.7 Diagram Config. > Plot

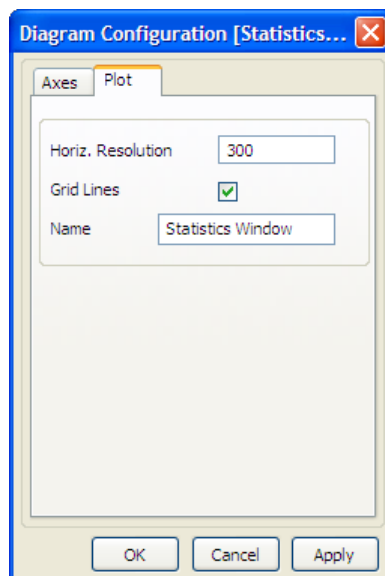

*Fig. 6-59: Measure > Statistics > Diagram > Plot*

The "Plot" tab in the statistics diagram configuration dialog covers parameters for designing the statistics measurement display. In this dialog, you can configure the screen resolution and grid lines, and assign a name to the measurement window.

#### **Horiz. Resolution**

Sets the number of pixels to specify the horizontal resolution. This setting is valid for all statistics measurements. The R&S NRPV synchronizes an updated resolution with the sensor.

#### **Grid lines**

Sets grid lines to be displayed or hidden.

#### **Name**

Applies a designated name to the statistics measurement window.

### 6.4.3.8 Marker

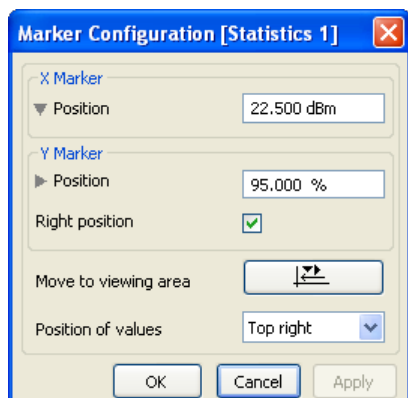


Fig. 6-60: Measure > Statistics > Marker

In statistics mode, you can assign markers to points for performing automated measurements. The marker configuration dialog covers entry fields for setting markers of the x and y axis and to determine the position of marker information in the display.

#### X Marker Position

Sets the X marker position in dBm.

#### Y Marker Position

Sets the Y marker position in %.

#### Right Position ← Y Marker Position

Places the probability marker on the right position, otherwise the marker is positioned on left hand side.

#### Move to viewing area

Moves the X and Y markers in the result window when they are outside the limits of the statistics window.

#### Position of values

Displays the marker values inside the grid, according to the selected location.

"Top left"

Displays the marker value list in the top left corner of the display.

"Top right"

Displays the marker value list in the top right corner.

"Bottom left"

Displays the marker value list in the bottom left corner.

"Bottom right"

Displays the marker value list in the bottom right corner.

### 6.4.3.9 Scale

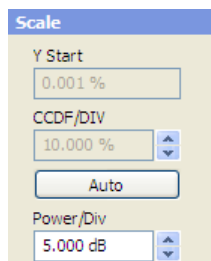


Fig. 6-61: Measure > Statistics > Scale

In this section, you can directly set the start value and the scale division of the probability axis, and the X axis power value of a division.



The modification of Y axis parameters is only possible in linear scale.

#### Y Start

Sets the start value for indicating the probability. Alternatively, you can set the start of the Y axis under [Diagram Config. > Axes](#).

#### CCDF/Div

Sets the value of one Y axis division. You can either directly enter a value, or decrease or increase the size in fixed steps using the up and down arrow buttons.

#### Auto

Sets automatic scaling for both of the axis. The parameters defining the axes are determined according to the following settings:

- Default start and stop values for the Y axis CCDF/CDF function, and best fit values for the PDF function.
- Default grid and spread values for X axis.

#### Power/Div

Sets the power range of one X axis division. Either directly enter a value or increment / decrement the size in fixed steps using the up and down arrow buttons. Alternatively, set the X axis division in [Diagram Config. > Axes](#).

### 6.4.3.10 Move/Zoom

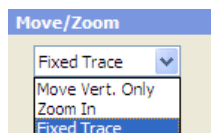


Fig. 6-62: Measure > Statistics > Move/Zoom

Covers a list for configuring the mouse movement and zoom functionality in the statistics results window.



Power/Div sets the scaling of the X axis. Changing this value is always done by keeping the average power constant and adjusting the visible power limits accordingly.

### Move / Zoom

Selects the functionality for zooming in the statistics measurement window.

"Zoom In"

Freely selects any section to be zoomed in the results window.

How to proceed:

- Set the cursor to the start point.
- Press the left-hand mouse button, and keep it pressed.
- Drag a rectangular shape around the area to be zoomed in.
- Release the mouse button to execute zooming.


**Note:** In this way, you can zoom in the display in several steps. Using "Zoom out" button, you can return to the previous size. To reset the zoom select the "Zoom Out" button.

The R&S NRPV does not just graphically perform zoom in operation but reconfigures the sensors and trace parameters to provide more detailed information on the measurement results.

"Fixed Trace"

Fixes the trace configuration of the currently performed measurement. Moving or zooming the trace with the mouse is disabled.

### Zoom Out



Returns the scaling to the size before zooming in. If zooming in has been performed in several steps, zooming out operates the same way reversely.

#### 6.4.3.11 Gate, Distribution Function and AWGN

Selects the parameters for time gates and the distribution function, and activates the AWGN graph in the display.



Alternatively, you can define the parameters in the dialog [chapter 6.4.3.5, "Measurement Configuration"](#), on page 127.

### Gate

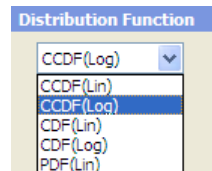


Fig. 6-63: Measure > Statistics > Gate

Selects one of four gates. R&S NRPV transmits information to the sensor and updates the measurement configuration. Statistic gate parameters as statistics start time, length and fence settings are defined in [Gates](#).

**Note:** Gate is available only if free run mode is disabled.


### Distribution Function



**Fig. 6-64:** Measure > Statistics > Distribution function

Selects the distribution function. R&S NRPV updates the sensor and the measurement configuration. Set to CDF the application transmits CCDF to the sensor and computes the CDF results internally.

### Show Ref. Curve



**Fig. 6-65:** Measure > Statistics > Show Ref

Activates AWGN reference curve to be displayed.

## 6.4.4 Numerical

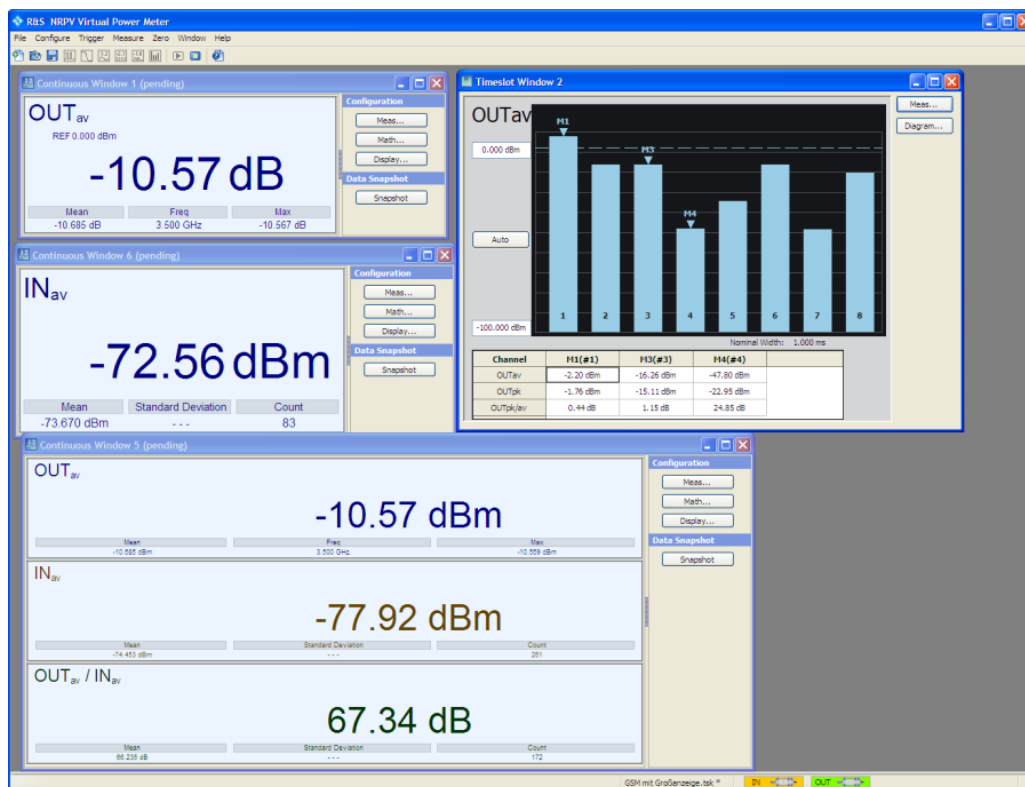


Fig. 6-66: Measure > Numerical window

Numerical power measurement comprises continuous, gated, timeslot and burst measurements. The R&S NRPV provides for all modes separate measurement windows, which are almost similar, except of the presentation of timeslot measurement. Every result window has its respective tabs for relative, reset and auxiliary reset functions.



### About the following description

In the following description the information is mainly valid for all numerical measurement modes covered. If there is a special feature for a specific mode, it is pointed out. Timeslot mode settings are described separately.

The numeric windows for continuous, gated or burst power measurement contain the following sections:

#### 6.4.4.1 Numerical - Functions

##### Results windows

Results windows display the results numerically in the [Results in Numerical Mode](#).

Timeslot mode features special display, described in [Graph in Timeslot Mode](#).



### Configuration controls

The control panel contains buttons for access to further measurement dialogs, math and diagram configuration.

### Meas...

Opens the dialog for configuring measurement parameters. In this dialog, you can select the measurement, the channel and view, and determine the measurand for display. For description refer to [chapter 6.4.4.6, "Measurement Configuration > Continuous / Gate / Burst"](#), on page 142.

Timeslot mode features special measurement parameters. These are described in [chapter 6.4.4.7, "Measurement Configuration > Timeslot"](#), on page 144.

### Math...

[Math Configuration](#) opens the dialog to configure math parameters and to determine operands for related measurements. You can define the unit, set relative measurement and auxiliaries settings and apply styles to the results for display.

### Display.../ Diagram...

Opens the dialog for configuring display settings, as described in [chapter 6.4.4.19, "Display Configuration"](#), on page 154. In this dialog, you can rename the measurement window, and define the background color and font settings. In case of timeslot measurement the dialog contains the parameters to configure the axes and plot settings accordingly.

Timeslot mode features special display. The characterizing values are described in [chapter 6.4.4.20, "Diagram Config. > Timeslot > Axes"](#), on page 155, and [chapter 6.4.4.21, "Diagram Config. > Timeslot > Plot"](#), on page 156.

### Gate Selection

Selects one of four gates. The R&S NRPV transmits information to the sensor and updates the measurement configuration. Gate parameters as start time, length and fence settings are defined in [Gates](#).

For time gate average mode, the control panel includes an entry field for gate selection.

**Note:** Gate is available only if free run mode is locked.

### Snapshot ← Gate Selection

Stores the current measurement value in a \*.csv file. The R&S NRPV automatically creates a new file, assigns the file name, composed of the date, time and an abbreviation for the measurement, and stores it in the application path under

%APPDATA%\Rohde-Schwarz\NRPV\Snapshots.

%APPDATA% is a system variable, representing drive and path of the application data of your PC.

Further snapshots of the same date and measurement are continuously stored in this file.

**Note:** Move the pointer over the button to find a ToolTip with information on directory, path and file name.

Appends current measurement result(s) to snapshot file  
 %APPDATA%\Rohde-Schwarz\NRPV\Snapshots\NRPV\_20120328-114318\_TG.csv

**Table 6-5: Measurement abbreviations:**


CA	Continuous Average
TG	Time Gate
BA	Burst Average

### Measurements Panel

**Note:** Measurements panel refers to "Timeslot" measurement.

Displays power values available in a selected timeslot. For detailed description refer to [chapter 6.4.4.22, "Measurements Panel > Timeslot"](#), on page 156.

#### 6.4.4.2 Results in Numerical Mode

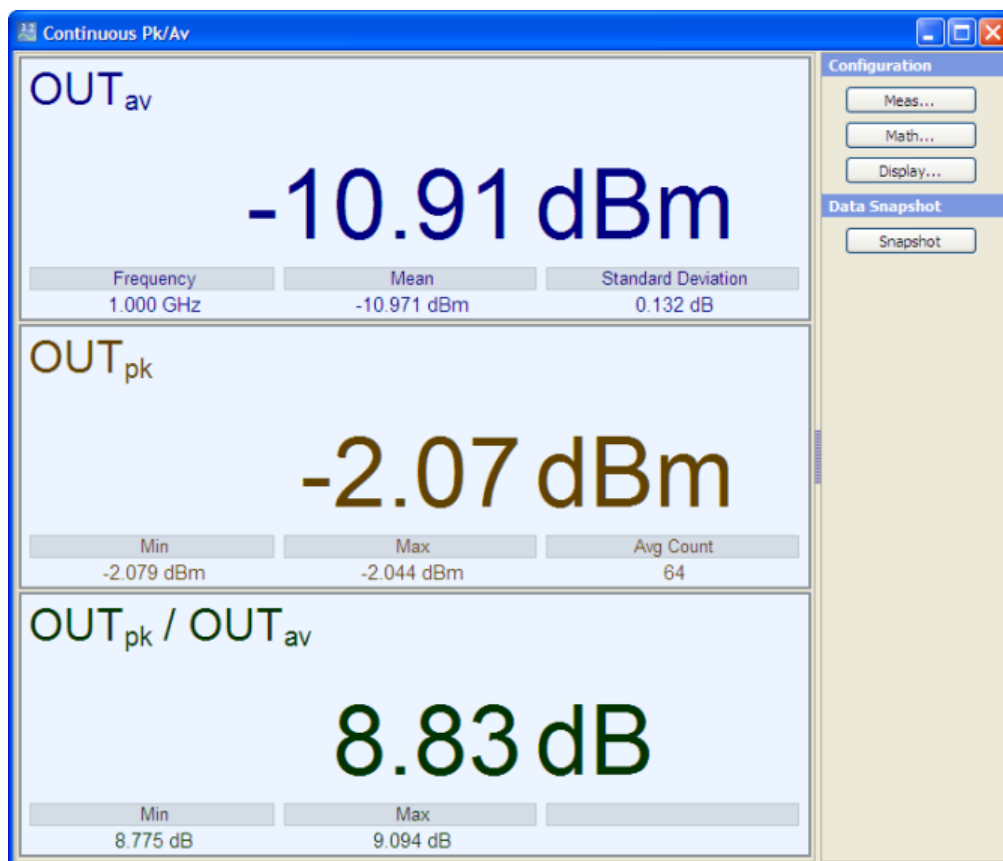

**Fig. 6-67: Measure > Numerical > Results window**

The results field represents a digital meter indicating the main numeric value of measurement and auxiliary values, selected for view under [Measurement Config. > Auxiliaries](#). An analog meter graphically represents the results. One measurement window covers a maximum of 4 result fields, including both, absolute and math measurements.

The main numeric result displays either the measurement value or the values resulting from math operations. Based on unit, the result formats depend on absolute or relative measurement. The auxiliary result displays up to three further values of absolute channel or math measurement results. The result formats depend on measurement mode. Resolution is always 0.001 for auxiliary results.

According to channel, measurement and math operation, the result designation may contain various information. For detailed information on the symbols refer to [chapter 5.1.6.1, "Info and Symbols"](#), on page 64.

#### 6.4.4.3 Graph in Timeslot Mode

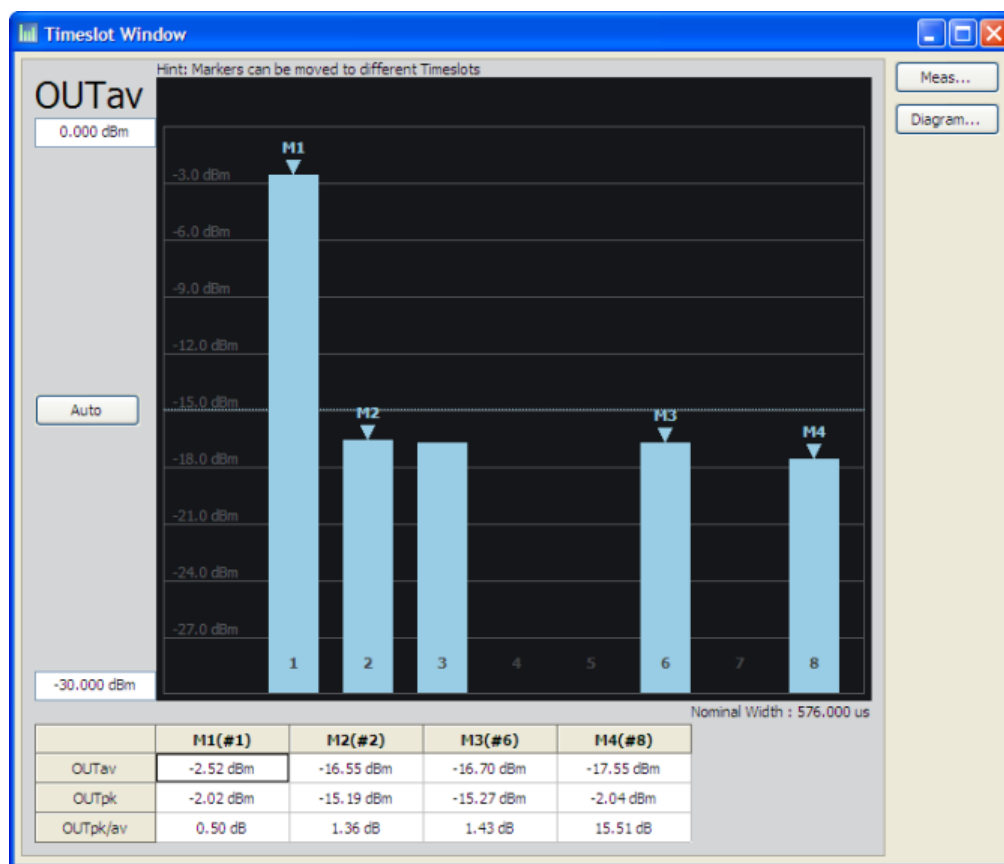


Fig. 6-68: Measure > Numerical > Graph

The graphical timeslot average power view contains information listed below:

- Bar chart with up to 8 active slots
- Nominal width
- Trigger level
- Averaging filter count
- Reference level
- Marker measurement

All bars are continuously updated. The update rate depends mainly on the set average filter count. The higher the filter count, the lower the update rate and the noise level. To the left of the timeslot results window a control panel provides entry fields for directly setting the power levels of the scale.



If the readings in a bar exceed the upper value of the diagram, the R&S NRPV graphically indicates the overshoot by darkening the color of the respective bar.

### Max power/ Min power

30.000 dBm / -70.000 dBm

Sets minimum and maximum power value for display. Both entry fields provide the unit of measurement selected in the unit tab.

The control panel shows all parameters that are relevant for the display. It contains buttons to call sub dialogs for measurement, diagram and marker configuration as well as entry fields for directly setting power and distribution scaling, distribution function and some miscellaneous parameters.

### Auto

Auto

Initiates auto scaling for the power axis. The lower and upper limit values are computed according to a special algorithm. Considering all viewed timeslots the algorithm determines the minimum and maximum values of all the results.

R&S NRPV updates the parameters, listed below:

- Y min power, Y max power and Y power/ div
- Reference position marker, based on Y start change
- Trigger bar
- Reference position (grid value) fields in the diagram configuration

Considering the defined unit and the connected sensor, the R&S NRPV determines the scaling automatically.

#### 6.4.4.4 Context-sensitive Menu for Numerical Measurement Modes

R&S NRPV provides a context-sensitive menu in the result field of a numerical measurement windows, like continuous, gate or burst. Open the context menu by pressing the right mouse button.

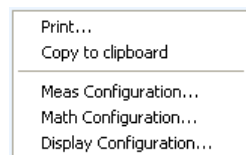


Fig. 6-69: Measure > Numerical > Context sensitive menu



The context-sensitive menu of the numerical measurement window covers configuration functions, which alternatively can be accessed via the control panel, the menu bar or the toolbar. Additionally the Save Diagram function is included in this menu.

The dialogs and parameters are described in the appropriate chapters of this operating manual. The following table lists the context-sensitive menu items and refers to the associated descriptions.


Menu item	Described in ...
Print / Copy To Clipboard	<a href="#">chapter 5.1.1.3, "Print or Copy to Clipboard"</a> , on page 49
Math Configuration...	<a href="#">chapter 6.4.4.14, "Math Configuration"</a> , on page 150
Display Configuration...	<a href="#">chapter 6.4.4.19, "Display Configuration"</a> , on page 154

#### 6.4.4.5 Context-sensitive Menu in Timeslot Mode

The R&S NRPV provides a context-sensitive menu in the result field of a timeslot measurement window. Open the context menu by pressing the right mouse button.



The context-sensitive menu of the timeslot measurement window mainly covers configuration functions which alternatively can be accessed via the control panel, the menu bar or the toolbar. The menu also consists of functions as for example "Show/Hide Markers" or "Save Diagram". "Show/Hide Markers" provides a submenu to individually set markers for display.

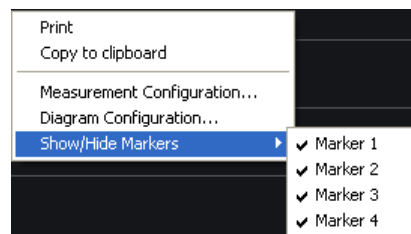

**Fig. 6-70: Measure > Numerical > Context sensitive menu Tslot**

The dialogs and parameters are described in the appropriate chapters of this operating manual. The following table lists the context-sensitive menu items and refers to the according descriptions.

Menu item	Described in ...
Print / Copy To Clipboard	chapter 5.1.1.3, "Print or Copy to Clipboard", on page 49
Diagram Configuration...	chapter 6.4.4.20, "Diagram Config. > Timeslot > Axes", on page 155 and chapter 6.4.4.21, "Diagram Config. > Timeslot > Plot", on page 156
Show/Hide Markers Marker 1 Marker 2 Marker 3 Marker 4	Right mouse click shows or hides the markers.

### 6.4.4.6 Measurement Configuration > Continuous / Gate / Burst

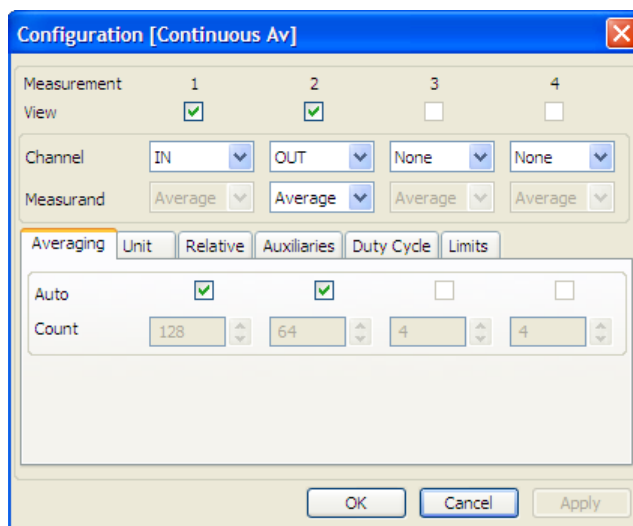


Fig. 6-71: Measure > Numerical > Meas configuration > Continuous / Burst / Gate



The "Duty Cycle" tab applies to "Continuous Av" measurement mode.

In a numerical measurement "Configuration" dialog, you can define up to four measurements. You can enable the measurement results for display, select the channel and measurand and define additional parameters, like averaging or unit covered in separate tabs.

#### Measurement

Indicates the measurement number.

**View**

Selects the measurement to be viewed on the main numeric measurement window. R&S NRPV views up to four measurements, including the absolute channel and maths measurement.

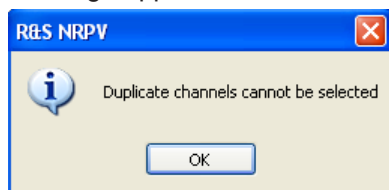
**Note:** It is not possible, to check more than 4 views.

**Channel**

Selects a channel for numerical measurement. The list indicates all assigned channels supporting numerical measurement.

If the connected sensor provides time gate measurement with the specified global parameters, the application evaluates all selected channels.

**Note:** Channel Duplication. In case the same measurement is assigned twice, an error message appears.



It is possible to perform for example an average measurement and a peak measurement within the same channel.

**Measurand**

Selects the measurement parameter to be displayed.

**Note:** In case the same measurand is assigned to a second measurement in the same channel, an error message pops up.

"Average"           Selects the average power for display.

"Peak"               Select the highest power measured.

**Note:** Peak is only available, if the sensor supports this feature.

**Tabs**

Besides the settings described above the measurement configuration dialog covers several tabs for setting further parameters, i.e.:

- Average parameters, see [chapter 6.4.4.8, "Measurement Config. > Averaging"](#), on page 145.
- Units, see [chapter 6.4.4.9, "Measurement Config. > Unit"](#), on page 146.
- Relative measurement options and reference values, see [chapter 6.4.4.10, "Measurement Config. > Relative"](#), on page 146.
- Auxiliaries, containing particular measurement values for display, see [chapter 6.4.4.11, "Measurement Config. > Auxiliaries"](#), on page 147.
- Duty cycle settings for calculating the pulse power of pulse modulated signals, see [chapter 6.4.4.12, "Measurement Config. > Duty Cycle"](#), on page 148.
- Limit values, see [chapter 6.4.4.13, "Measurement Config. > Limits"](#), on page 149.

### 6.4.4.7 Measurement Configuration > Timeslot

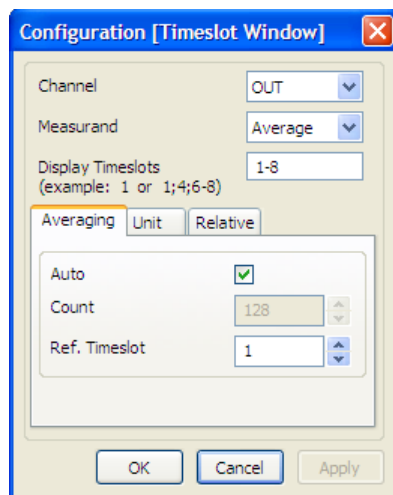


Fig. 6-72: Measure > Numerical > Meas configuration > Tslot

In this dialog, you can select the channel, measurand and timeslot, as well as define additional parameters, like averaging, unit or reference values.

#### Channel

Selects a channel for measurement. The list shows all assigned channels supporting timeslot measurement.

**Note:** If the connected sensor provides timeslot measurement with the specified global parameters, the application evaluates all selected channels.

#### Measurand

Selects the measurement parameter to be displayed.

**Note:** In case the same measurand is assigned to a second measurement in the same channel, an error message appears.

"Average"      Selects the average power for display.

"Peak"          Selects the highest power measured.

**Note:** Peak is only available, if the sensor supports this feature.

#### Display Timeslots

Selects the timeslots that are to be displayed in the diagram.

#### Tabs

Besides the settings described above, the application provides several tabs for setting further parameters:

- Averaging parameters, see [Measurement Config. > Averaging](#).
- Units, see [Measurement Config. > Unit](#).
- Relative measurement options and reference values, see [Measurement Config. > Relative](#).



#### 6.4.4.8 Measurement Config. > Averaging

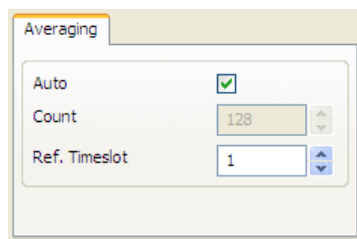


Fig. 6-73: Measure > Numerical > Meas configuration > Averaging

In the "Averaging" tab, you can activate automatic averaging mode and set the average filter count.



The "Ref. Timeslot" entry field applies to "Timeslot" measurement mode.

#### Auto

Determines the mode of calculating the average.

- |       |  |
|-------|--|
| "On"  | The sensor determines the optimum average filter count internally based on the given resolution. |
| "Off" | The sensor uses an averaging factor manually set by the user.                                    |

#### Count

Sets the number of measured values, which are averaged.

Directly entered, the value is rounded off to the closest power of two. Use the UP and DOWN arrows to increase, or decrease the averaging count. Count is rounded to the next higher or lower power of  $2^x$  values. The greater the averaging factor, the less the measured values vary and the measurement time is even longer.

The R&S NRPV transmits the changes to the corresponding sensor, featuring the following configuration:

- **Avg. count < Min.:** sets averaging count to minimum and disables the decrement button.
- **Avg. count > Max.:** sets averaging count to maximum and disables the increment button.

**Note:** In case of Min or Max count set automatically, no error messages are reported.

#### Ref. Timeslot

Defines the timeslot whose power is to be used as reference for automatically calculating the average count (auto averaging).

**Note:** Reference timeslot selection applies to "Timeslot" mode.

#### 6.4.4.9 Measurement Config. > Unit

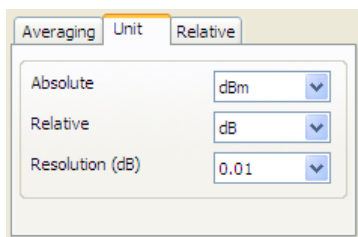


Fig. 6-74: Measure > Numerical > Meas configuration > Unit

The "Unit" tab of the numerical configuration dialog contains entry fields for assigning the unit and resolution. You can view measurement and math results in linear scale [Watt] or logarithmic scale [dBm].

##### Absolute

Sets the unit to display the absolute values of measurement.

"dBm"	Displays the absolute value as logarithmic power ratio.
"W"	Displays the absolute power value in Watt.
"dBμV"	Displays the absolute value of logarithmic power ratio, expressed as a voltage.

##### Relative

Sets the unit to display the results of relative power measurement.

"1"	Displays the measured level related to a reference power.
"dB"	Displays the relative value as logarithmic power ratio.
"Δ%"	Displays the power ratio of result and reference power, expressed %.

**Note:** When using percentages, differentiate between voltage or power quantities, and consider the x% of a quantity, or x% more or less of a quantity.

##### Resolution (dB)

Selects a resolution to display the results according to that value. R&S NRPV transmits the changed resolution value to the sensor.

#### 6.4.4.10 Measurement Config. > Relative

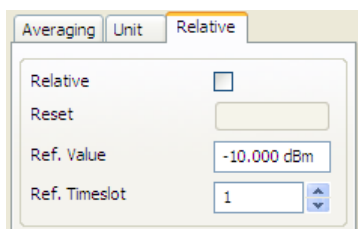


Fig. 6-75: Measure > Numerical > Meas configuration > Relative



The "Ref. Timeslot" selection field applies to "Timeslot" measurement mode.

In the "Relative" tab, you can set parameters for relative power measurement. A relative function calculates the power or the power ratio relative to a reference value. This mode is useful for analyzing the stability or drift during power measurement.



If you perform a measurement with the math operation "SWR" (Standing Wave Ratio), relative measurement is disabled, see [chapter 6.4.2.6, "Math Configuration"](#), on page 103.

### Relative

Contains the parameters to configure relative power measurement.

- "On" Activates relative measurement. Based on the measured values R&S NRPV calculates the relative values according to the reference value. Relative measurement results as ratio in linear scale.  
**Note:** SWR measurement mode disables relative measurement.
- "Off" Selects absolute measurement or measurement of the power ratio of two measurements.

### Reset

Accepts the currently measured value as reference value. This Reset button is enabled when relative measurement is on.

**Note:** If the measurement result is invalid during reset function, an error message pops up.

### Ref. Value

Sets a new reference value directly, or modifies a previously set value.

### Ref. Timeslot

Selects a particular timeslot for indicating.

**Note:** Reference timeslot selection only affects the settings in timeslot mode.

#### 6.4.4.11 Measurement Config. > Auxiliaries

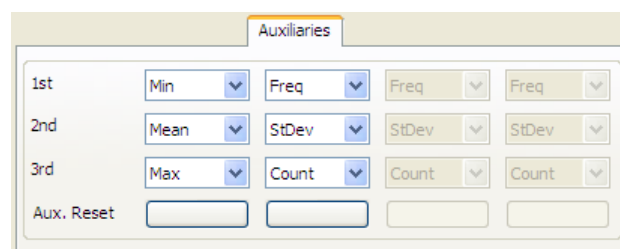


Fig. 6-76: Measure > Numerical > Meas configuration > Auxiliaries



The "Auxiliaries" tab applies to "Continuous, Gated and Burst Average" measurement modes. "Timeslot" mode features a special display with settings defined separately. The characterizing values in timeslot mode are described in [chapter 6.4.4.3, "Graph in Timeslot Mode"](#), on page 139.

In the "Auxiliaries" tab, you can select particular measurement values for display. Besides the main readings, you can additionally display up to three values in the result field.

#### 1st. / 2nd. / 3rd.

Selects up to 3 parameters for display. The R&S NRPV calculates the following values during measurement:

"Min"	The minimum value resulting from the measured samples.
"Max"	The maximum value resulting from the measured samples.
"Mean"	The mean value calculated from the measured samples.
"StDev"	The standard deviation calculated from the samples.
"Freq"	The frequency of the measured signal.
"Count"	The counted the number of samples.
"Av Count"	The number of readings to be averaged for one measured value.
"None"	none

#### Aux. Reset

Assigns the currently measured "Min", "Max", "Mean", "Num" and "StDev" values. The "Reset" button is enabled if any of the auxiliaries entry fields is selected.

### 6.4.4.12 Measurement Config. > Duty Cycle

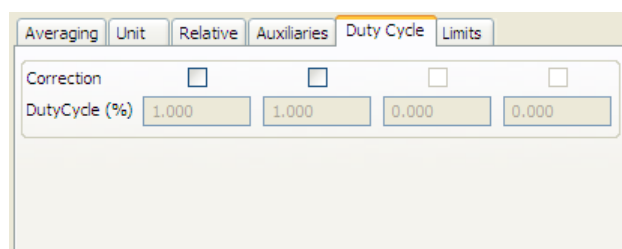


Fig. 6-77: Measure > Numerical > Meas configuration > Duty cycle




This dialog only affects continuous average power measurement of pulse modulated signals.

In this tab, you can activate the duty cycle correction. Using duty cycle correction, you can determine the correction value as a percentage for pulse modulated signals. The sensor calculates the pulse power from the duty cycle and the average power.

**Correction**

Activates duty cycle correction.

- "On" Activates duty cycle correction for the corresponding sensor. If the duty cycle is measured, the R&S NRPV displays the average power of the pulse.  
In the Info line of the measurement window, the  symbol indicates that global offset correction has been activated.  
**Note:** If the duty cycle correction active, the entry field "Duty Cycle" (%) switches to edit mode, and vice versa.
- "Off" Switches off duty cycle correction.

**Duty Cycle (%)**

Enters the value in percent. This entry field is enabled if duty cycle correction is activated.

**6.4.4.13 Measurement Config. > Limits**

Fig. 6-78: Measure > Numerical > Meas configuration > Limits



The "Auxiliaries" tab applies to "Continuous, Gated and Burst Average" measurement modes.

In the "Limits" tab, you can set an upper and a lower limit for each measurement result. If one of the limits is exceeded, a warning is issued.

**Upper / Lower**

Activates the limit check.

- "On" Switches on the monitoring function for the upper limit or lower limit, respectively.
- "Off" Switches off upper/ lower limit check

**Upper/ Lower Value**

Specifies an upper/lower limit for the measured values. If a limit is exceeded, the warning message "Limit fail" is displayed.

**Warning Beep**

Activates the acoustic alarm.

- "On" Activates an acoustic alarm for output if a limit is exceeded.

"Off" Turns off the acoustic alarm.

#### 6.4.4.14 Math Configuration

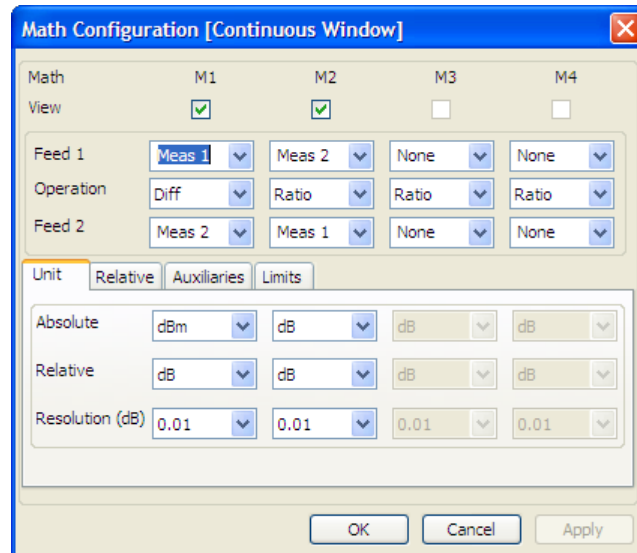


Fig. 6-79: Measure > Numerical > Math configuration dialog



R&S NRPV provides the "Math" functionality in the measurement modes continuous, gate and burst.

R&S NRPV processes the results from several sensors, using mathematical functions. The math configuration dialog provides configuration of up to four math channels for multichannel measurement. Each of the four channels can be assigned to the same or to different sensors. If multiple channels use the same sensor, the measurement is performed only once. The result is reused for the other channels. View selection boxes activate displaying the measured and computed results of each math channels.

In this dialog, you can select the channel and measurand, or define additional parameters, as for example the unit, relative measurement option or auxiliaries, which are covered in separate tabs.

#### Math 1 - 4

Indicates 4 available math measurements.

#### View

Selects the math channels to be viewed in the result field. R&S provides to display up to four measurements, including absolute channel and math measurements.

#### Feed 1, 2

Selects a measurement for the first and for the second operand. The available absolute channel measurements are listed for selection.

"Feed 1" Selects the channel to be used to calculate the displayed value.

"Feed 2" Selects the second channel which is to be used for calculation.

### Operation

Selects a calculation function to operate the measurement results of feed 1 and feed 2. If view is set, the corresponding math measurement results are displayed on the result field.

"Ratio" Builds the ratio of the power in the first channel to the power in the second channel. Internally the ratio is performed by subtracting the measured power values in logarithmic scale. Displayed unit is dB.

"Diff" Subtracts the measured power in the second channel from the power of the first channel. The calculation, performed in linear scale is converted to logarithmic scale. Displayed unit is dB.

"SWR" Calculates the standing wave ratio from the first and the second measurement by using the following equation:

$$SWR = (1 + RC) / (1 - RC)$$

The measurement is performed in logarithmic scale.

**Note:** The forward power must be measured in the first channel and the reverse power must be assigned to the second channel.

RC is the reflection coefficient, internally calculated from the measured power values P1 in channel 1 and P2 in channel 2.

$$RC = 10^{(P1 - P2) / 20}$$

### Tabs

Besides the settings described above, the math configuration dialog contains several tabs, to set further parameters. The following chapters describe these settings:

- [chapter 6.4.4.15, "Math Config. > Unit"](#), on page 151
- [chapter 6.4.4.16, "Math Config. > Relative"](#), on page 152
- [chapter 6.4.4.17, "Math Config. > Auxiliaries"](#), on page 153
- [chapter 6.4.4.18, "Math Config. > Limits"](#), on page 154

#### 6.4.4.15 Math Config. > Unit

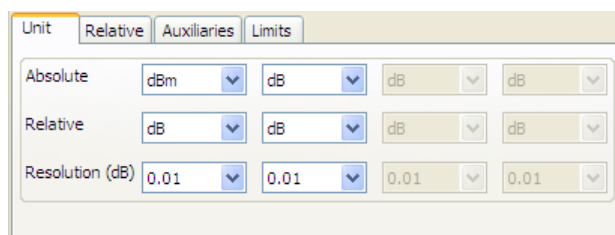


Fig. 6-80: Measure > Numerical > Math configuration > Unit

The "Unit" tab of the math configuration dialog contains the entry fields for assigning unit and resolution to the results. You can view math results in linear scale [Watt] or logarithmic scale [dBm].

### Absolute

Sets the unit to display the absolute values of measurement.

**Note:** Units for absolute measurement. According to relative measurement, selected with math function ratio, the unit list changes to the appropriate relative units, described in section Relative (see below).

"dBm"	Displays the absolute value as logarithmic power ratio.
"W"	Displays the absolute power value in Watt.
"dB $\mu$ V"	Displays the absolute value of logarithmic power ratio, expressed as a voltage.

### Relative

Sets the unit to display the results of relative power measurement.

**Note:** SWR measurement mode disables relative measurement.

"1"	Displays the measured level related to a reference power.
"dB"	Displays the relative value as logarithmic power ratio.
" $\Delta$ %"	Displays the power ratio of result and reference power, expressed %. <b>Note:</b> When using percentages differentiate between voltage or power quantities, and consider the x% of a quantity or x% more or less of a quantity.

### Resolution (dB)

Selects a resolution to display the results according to that value. R&S NRPV transmits the changed resolution value to the sensor.

#### 6.4.4.16 Math Config. > Relative

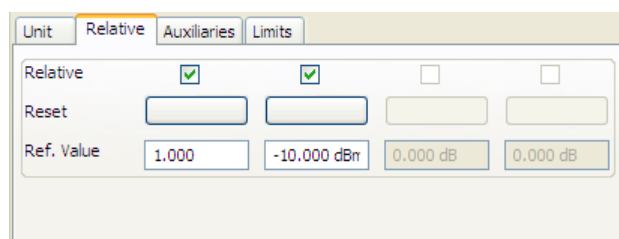


Fig. 6-81: Measure > Numerical > Math configuration > Relative

The "Relative" tab provides settings for relative power measurement. Data, resulting from math operation can be related to a reference value.

### Relative

Activates the relative function.

"On"	Activates relating function. Based on the calculated values R&S NRPV computes the relative values according to the reference value. Relative results are output as ratio in linear scale. <b>Note:</b> SWR measurement mode disables relative measurement.
"Off"	Selects absolute output of math results.



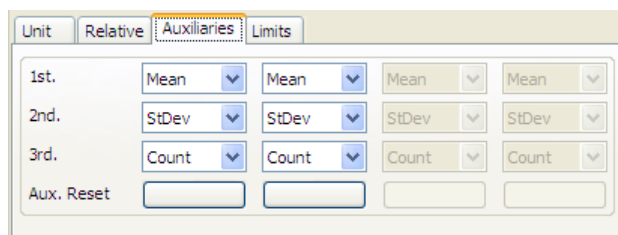
**Reset**

Accepts the currently calculated value as reference value. This "Reset" button is enabled when relative function is on.

**Note:** If the measurement result is invalid during reset function, an error message pops up.

**Ref. Value**

Enters a new reference value directly, or modifies a previously set value.

**6.4.4.17 Math Config. > Auxiliaries**

*Fig. 6-82: Measure > Numerical > Math configuration > Auxiliaries*

In the "Auxiliaries" tab, you can determine math results for display. Along with the main numeric value up to three values are displayed in the result field.

**1st. / 2nd. / 3rd.**

Selects up to 3 parameters for display. The R&S NRPV calculates the following values:

"Min"	The minimum value resulting from the calculated samples.
"Max"	The maximum value resulting from the calculated samples.
"Mean"	The mean value calculated from the calculated samples.
"StDev"	The calculated standard deviation.
"Feed 1 / Feed 2"	The values of feed 1 or feed 2 are used for calculating.
"Count"	The counted the number of samples.
"None"	none

**Aux. Reset**

Assigns the currently measured Min, Max, Mean, Feed, Num and StDev values. This Reset button is enabled if any of the auxiliaries entry fields is selected.

#### 6.4.4.18 Math Config. > Limits

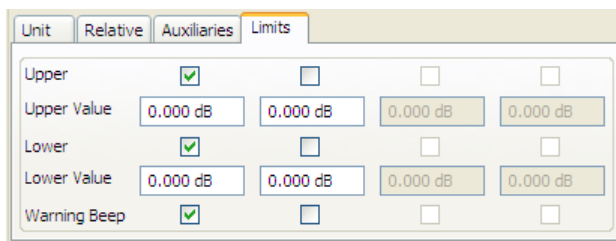


Fig. 6-83: Measure > Numerical > Math configuration > Limits

In the "Limits" tab, you can determine an upper and a lower limit for each calculated result. If one of the values is exceeded, a warning is issued.

##### Upper / Lower

Activates the limit check.

"On" Switches on the monitoring function for the upper limit or lower limit, respectively.

"Off" Switches off upper/ lower limit check.

##### Upper/ Lower Value

Specifies an upper/lower limit for the computed values. If a limit is exceeded, the warning message "Limit fail" is displayed.

##### Warning Beep

Activates the acoustic alarm.

"On" Activates an acoustic alarm for output if a limit is exceeded.

"Off" Turns off the acoustic alarm.

#### 6.4.4.19 Display Configuration

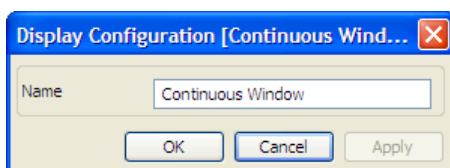


Fig. 6-84: Measure > Numerical > Display configuration dialog

In this dialog, you can assign a name to the measurement window.

##### Name

Assigns a designated name to the appropriate measurement window.

#### 6.4.4.20 Diagram Config. > Timeslot > Axes

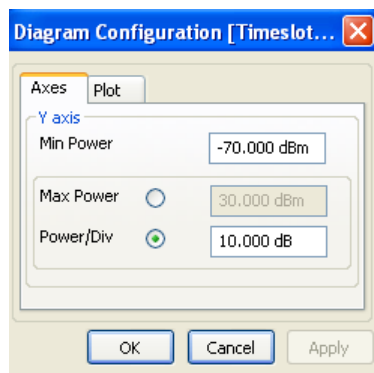


Fig. 6-85: Measure > Numerical > Diagram configuration > Tslot > Axes

In the "Axes" tab, you can set the axis division, minimum and maximum power values for the Y axis. The Y axis power scale is divided into 10 equal divisions. The y scale is defined by two parameters, either by minimum and by maximum power or by minimum power and power step per division. The entry fields provide the unit of measurement selected in the unit tab. Alternatively, both values can be entered directly in the results window of the timeslot measurement window. These settings only affect the graphical data representation in the application and have no influence on the measurement or sensor configuration.

#### Y axis

Contains the parameters for configuring the diagram axis for timeslot measurement.

#### Min Power ← Y axis

Sets the minimum level of the display.

#### Max Power ← Y axis

Enables the entry field to directly enter the maximum power value of the display. The value defines the upper limit of the timeslot results window.

#### Power/Div ← Y axis


Enables the entry field to enter the power value of one division. The value, multiplied by 10, the predefined number of divisions, defines the upper limit of the timeslot results window.

Based on the power range of the sensor, Power/Div is validated featuring the following configuration:

- **Pow/Div < Min.:** Minimum value is set per division.
- **Pow/Div > Max.:** Maximum value is set per division.

**Note:** In case of start value set automatically, no error messages are reported.

#### 6.4.4.21 Diagram Config. > Timeslot > Plot

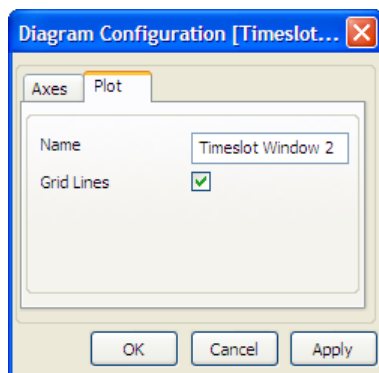

**Fig. 6-86:** Measure > Numerical > Diagram configuration > Tslot > Plot

Activates the view of gridlines in the diagram and assign a name to the measurement window in this dialog.

##### **Name**

Applies a designated name to the timeslot measurement window.

##### **Grid lines**

Sets grid lines to be displayed or hidden.

#### 6.4.4.22 Measurements Panel > Timeslot

	M1(#1)	M2(#2)	M3(#6)	M4(#8)
OUTav	-2.44 dBm	-16.57 dBm	-16.63 dBm	-22.52 dBm
OUTpk	-2.03 dBm	-15.22 dBm	-15.24 dBm	-2.04 dBm
OUTpk/av	0.41 dB	1.35 dB	1.39 dB	20.48 dB

**Fig. 6-87:** Measure > Timeslot

The measurements panel shows power values measured in timeslots. Activate the timeslot for display in the measurement configuration dialog, as described under [chapter 6.4.4.7, "Measurement Configuration > Timeslot"](#), on page 144.

##### **<channel>**

Displays the parameters average, peak and the ratio of average to peak of the corresponding channel.

##### **M1 (#1)**

Displays the values of the appropriate channel measured in the selected timeslot.

## 6.5 Recording

It is often useful to record measured data, in order to analyze a signal in more detail after the measurement, or to detect any irregularities that occurred over a longer period. Using the recording function of the R&S NRPV, you can trace numerical measurement data over a period of time. It is especially designed for long-term measurements.

A graphical representation allows you to quickly view and check the current signal characteristics. You also can write the readings directly to a file. Each recorded track is stored in a separate file in \*.csv format. Since many programs can read \*.csv files, in particular spreadsheet programs, you can evaluate your measurement at a later time.

You can select up to four parameters from a numerical measurement panel for recording. During long term recording, the function displays data in compressed form. Thus you can monitor the measurement data continuously.

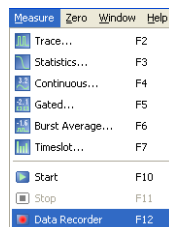


### Interactions and Characteristics

- Recording can only be started when the associated measurement is running.
- If recording is stopped and restarted, previous values are discarded and get lost if they have not been saved to disk manually before restarting.
- Switching to another measurement window stops the measurement, and consequently the associated recording.
- Prerequisite for the recording is that you have previously configured the measurement. How to setup, for example a continuous average measurement, see [chapter 4.3.3, "Measuring the Average Power"](#), on page 33.
- The format of the recorded data is ASCII format, with a semicolon used as delimiter.


### Preparing for Recording

- ▶ To open the recorder window, perform one of the following:
  - In the menu bar, select "Measure > Data Recorder"



- In the toolbar, select the recorder icon .

The "Recorder" window opens.

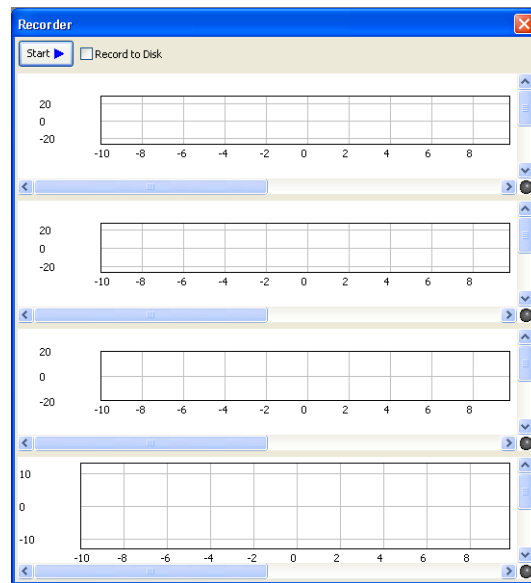

**Fig. 6-88: Recorder window**

The window is tiled into four panels, according to the four tracks that can be recorded per numerical measurement window.

### Selecting the parameters to be recorded

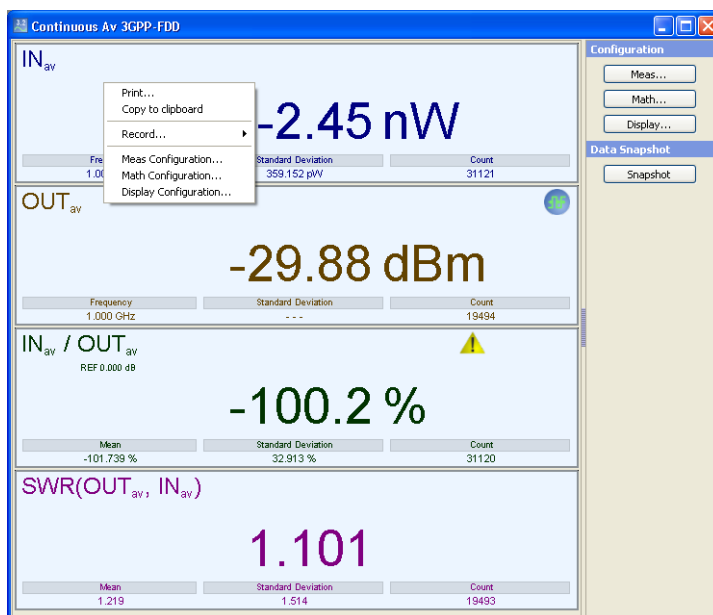


You can only select a parameter for recording, if the measurement is not running.


The following example shows how to perform the recording and how to store the recorded values to the hard disk.

To enable a parameter for recording, switch to the associated measurement window:

1. In the "IN<sub>av</sub>" panel of the "Continuous Av" window, open the context sensitive menu.




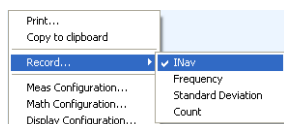2. Select "Record" and the respective parameter in the submenu, for example "INav".



Each panel provides the appropriate parameters for the recording.

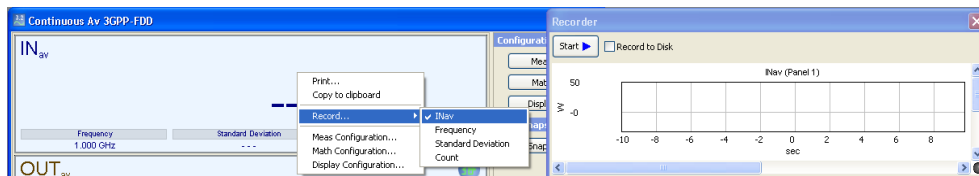Once a parameter is checked, the R&S NRPV assigns this parameter to a panel in the "Recorder" window.



3. Repeat these steps for the parameters you want to record.

You can assign up to four parameters to a recorder. The assignment of the panels corresponds to the order of your selection.

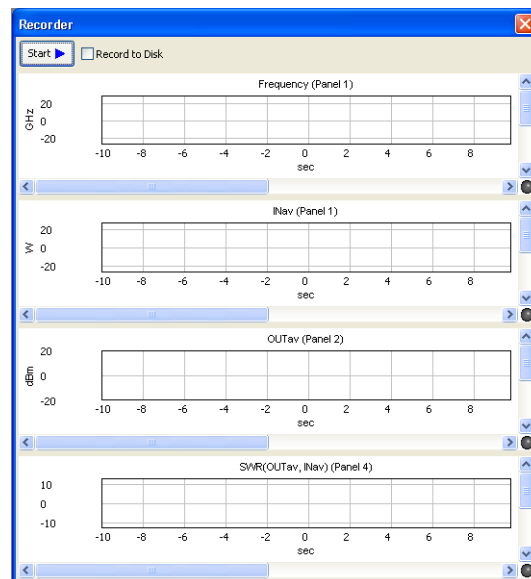



Fig. 6-89: Recorder > Selected parameters

The "Recorder" window assigns the selected parameter to the recorder panel, and indicates the corresponding measurement panel.

### Start Recording

To start recording, perform the following steps:

1. In the toolbar, start the measurement .
2. If you want the R&S NRPV to simultaneously write the recorded measurement results to the hard disk, check  Record to Disk in the "Recorder" window.



The R&S NRPV indicates a file name that is automatically generated for the storage of the records.

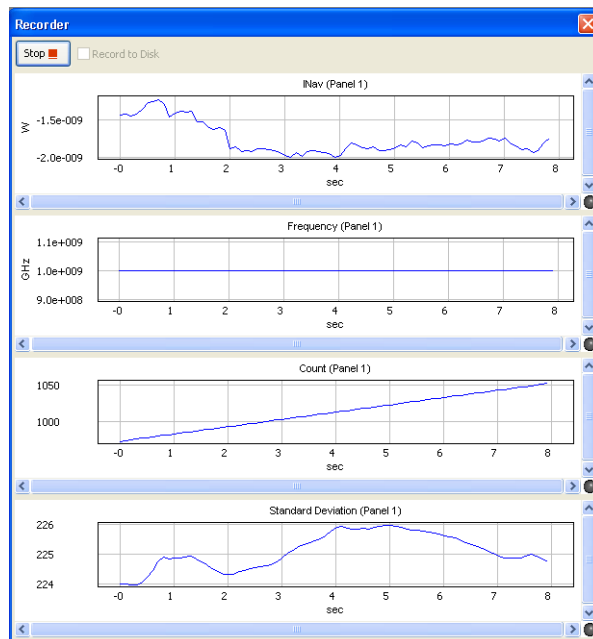
"Record to Disk" writes the data of each active recording panel (a so-called track) in ASCII format to the hard disk. When recording is started, the R&S NRPV automatically creates one file per recorder panel in the %APPDATA% path of the computer, that is %APPDATA%\Rohde-Schwarz\NRPV\Recording. The automatically assigned file names have the structure:

```
REC_<year><month><day><timestamp>_Track<1...4>.csv
```

**Tip:** If you did not activate "Recording to Disk", you can still save the recorded data manually after recording. In this case the R&S NRPV stores the video data, which means the compressed values, as shown in the recorder window. The longer the recording is in progress, the higher the degree of compression.




3. Start recording .



In the recorder window, you can see the progress of the measured parameters over time. The R&S NRPV compresses the readings in particular time intervals by grouping several values. This enables the application to continuously show the measurement results in the recorder window.

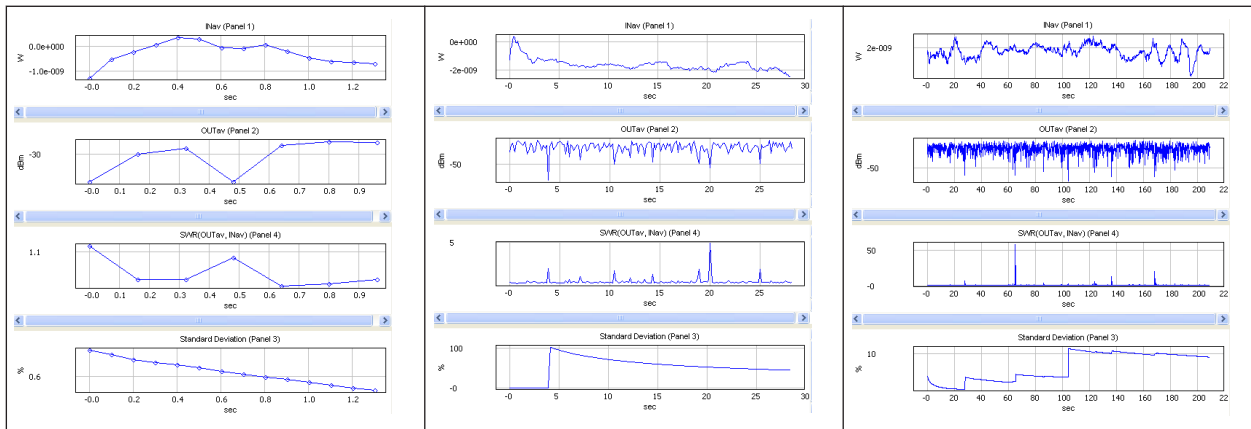Table 6-6: Displayed progress of the recording



**Stop Recording**


You can either stop recording manually, or the R&S NRPV stops recording automatically when there is insufficient storage space on the hard disk.

To manually stop recording:

- ▶ Select  in the "Recorder" window.

**Elements and Controls in the Recorder Window**

You can perform various settings in the "Recorder" window that are not apparent at first glance. This description briefly explains the functional elements.

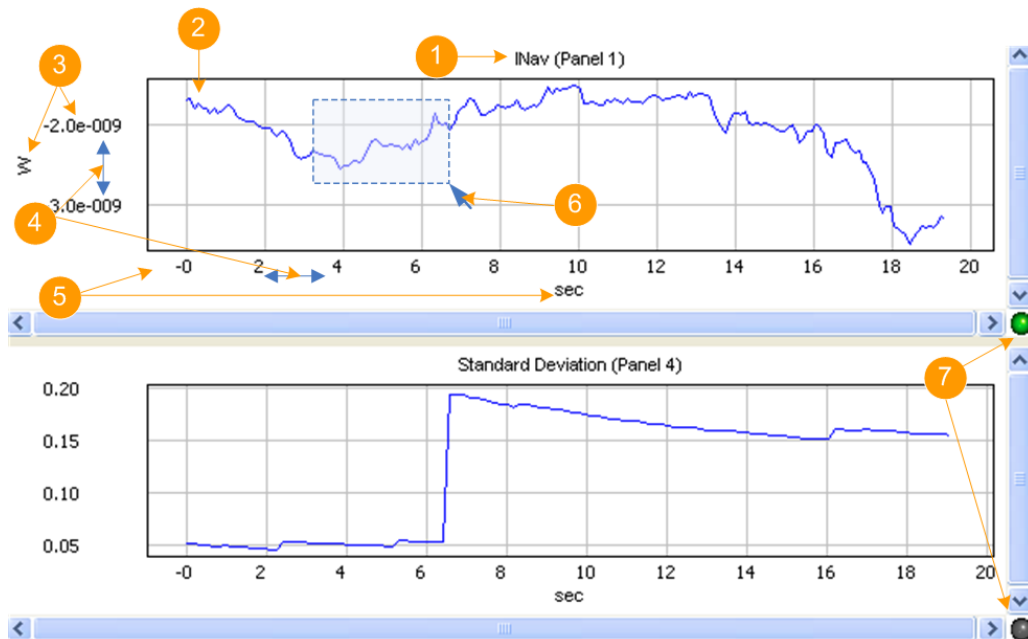



**Fig. 6-90: Recorder > controls**

- 1 = measured parameter (measurement panel number)
- 2 = graph
- 3 = Y-axis and unit
- 4 = scrolling, shown when the mouse cursor is in this area
- 5 = time scale in seconds
- 6 = zooming
- 7 = indication of the recorder panel with keyboard focus

**Table 6-7: Elements and controls in the recorder window**

Legend	Item	Interaction via ...	Description
1	Name of the panel	—	Indicates the parameter that is recorded, and the measurement panel it belongs to.
2	Graph	(see zooming)	Shows the progress of the measured values graphically (over time).

Legend	Item	Interaction via ...	Description
3	Y Axes	Mouse (↕, see scrolling)	Scales the axis according to the characteristics of the parameter and shows the unit of the measured values.
4	Scrolling the Y Axis	<ul style="list-style-type: none"> <li>• Mouse pointer</li> <li>• Cursor keys (UP arrow / DOWN arrow)</li> </ul>	<ul style="list-style-type: none"> <li>• Shift the graphic along the Y axis up and down.</li> <li>• When the pointer becomes a ↕, use the mouse to scroll the axis.</li> </ul>
	Scrolling the X Axis	<ul style="list-style-type: none"> <li>• Mouse pointer</li> <li>• Cursor keys (LEFT arrow / RIGHT arrow)</li> </ul>	<ul style="list-style-type: none"> <li>• Shift the graphic along the X axis to the left and right.</li> <li>• When the pointer becomes a ↔, use the mouse to scroll the axis.</li> </ul>
5	X Axis	Mouse (↔, see scrolling)	Indicates the recording time in seconds.
6	Zoom	<ul style="list-style-type: none"> <li>• Mouse pointer</li> <li>• Cursor keys in combination with the CTRL key: <ul style="list-style-type: none"> <li>– CTRL+UP arrow</li> <li>– CTRL+DOWN arrow</li> <li>– CTRL+LEFT arrow</li> <li>– CTRL+RIGHT arrow</li> </ul> </li> </ul>	Drag a rectangle to select the region you want to zoom out.
–	View entire curve	POS1 key	Sets the panel display to its original size.

Legend	Item	Interaction via ...	Description
7	Panel focused 	—	Indicates that the panel has keyboard focus. Navigation and zooming is enabled.
	Panel not focused 	—	Indicates that the panel does not have keyboard focus. Navigation and zooming is locked.

### Evaluating recorded data

If you have recorded and saved your measurement, there is at least one \*.CSV file. You can open a \*.CSV file with a suitable program, for example with a spreadsheet program.



Notes to the program you use for evaluation

- The storage format of the recorded data is ASCII format, with a semicolon ";" as delimiter. Keep in mind that the program you are using may use a different delimiter.
- The R&S NRPV stores the recorded values in the decimal format according to the regional options of your computer. This means if you want to evaluate the data on another computer, for example, the setting of the numerical format may be different.
- The number of columns and rows of the spreadsheet program that you are using could be limited. In particular, if you have performed a long term measurement, the program might not be able to load the \*.CSV file completely. To fix this problem, open the source file in a text editor. Save the source file as several smaller files that conform to this row and column limit.

If you have recorded the measurement to the hard disk by activating "Record to Disk", the R&S NRPV stores one file per recorded track. It automatically assigns a file name consisting of a time stamp and the recorded track.

If you have saved the file after recording using "Save Data", no file name is created automatically, but an interactive "Save File" dialog opens and you can assign a suitable filename. The first line in the file provides information on the measured parameter and a time stamp.

A file contains the measured value pairs as ASCII strings, separated by a semicolon. Depending on the used program, the values are automatically converted and displayed as a table when you open the file. The following description refers to MS®EXCEL. If you use another program, the names of the mentioned commands and functions may differ slightly.

If the data is not displayed numerically, convert the ASCII strings manually:

1. Select "Data Text to Column", or a similar command, to convert the text format to numerical format.
2. Select the ";" as delimiter and

In numerical format, you can display the results in an appropriate graph, for example an X/Y diagram, in order to analyze and evaluate the measurement.

## 6.6 Start / Stop Measurement

### Start

Starts the measurement in the currently active window. This button is disabled if the measurement is running.

**Note:** The start command activates all the measurements, but only the measurement in the active window is performed. The others are pending. If you switch to another measurement window, the R&S NRPV automatically performs this one. The previously active measurement is now pending.


### Stop

Stops all active measurements.

## 6.7 Zero


Zeroing calibrates the external power sensor by adjusting its reading at zero signal power. For this purpose, the RF power source must be switched off or disconnected from the sensor (see tips below). R&S power sensors automatically detect the presence of any significant input power. This aborts zeroing and generates an error message. Zeroing can take a few seconds, depending on the sensor model; refer to the documentation of your external power sensor for more information.

- ▶ To determine the sensor, select "Zero > Select > Channels > <channel>" in the R&S NRPV menu bar.



*Fig. 6-91: Zero menu*

The selection automatically activates zeroing. The function checks the confidence level of the sensor results.

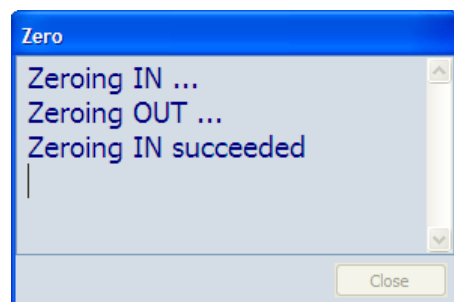

**Fig. 6-92: Zero in process**

This process can take a few seconds. During this time, the R&S NRPV displays the current status of the process in the "Zero" window. When completed the message terminates zeroing successfully or reports an error (succeeded / failed).




### Tips for Zeroing

Zeroing should be performed:

- During warm-up after switching on or connecting the instrument.
- After a substantial variation of the ambient temperature.
- After fastening the power sensor module to an RF connector at high temperature.
- After several hours of operation.
- When very low-power signals are to be measured, like signals with less than 10 dB above the lower measurement limit.

Switch off the RF power source for zeroing; do not disconnect it from the sensor. In this way you will maintain the thermal equilibrium, and zeroing will also compensate for the noise superimposed on the measured signal (for example from a broadband amplifier).

## 6.8 Window

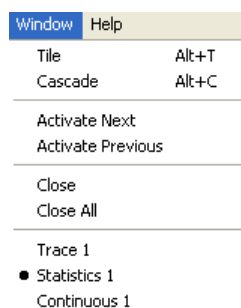

**Fig. 6-93: Window menu**

This menu contains functions for window handling.

**Tile**

Arrange all currently opened windows on the screen. The window being last active continues to hold focus. Tiling maintains the display aspect ratio of the windows.

**Note:** When the measurement windows are tiled the trace window only shows the diagram area. The control panel and the measurement panel are hidden.

**Cascade**

Arrange all currently opened windows successively. The window being actually focused remains in the same state. Cascading maintains the display aspect ratio of the windows.

**Activate Next**

Sets the following window active.

**Activate Previous**

Sets the previous window active.


**Close**

Quits the currently active window.

**Close All**

Quits all opened windows simultaneously.

## 6.9 Help



*Fig. 6-94: Help menu*

The "Help" menu provides access to the help system of the R&S NRPV.


**Index...**

Use for help. Search for specific words or phrases, or choose from a list of keywords. Open the HTML document in a browser, e.g. Microsoft®Windows Internet Explorer.

**Note:** Currently Index is not active. This function is intended for future use.

**About...**

Retrieves information about software version and licensing of the R&S NRPV.

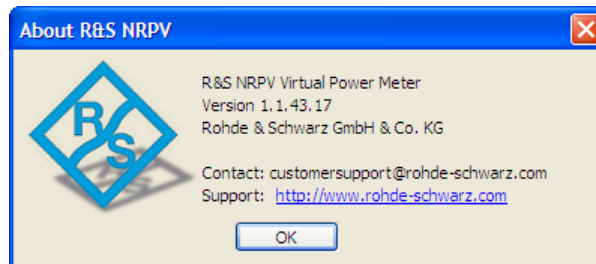

**Fig. 6-95: About R&S NRPV**

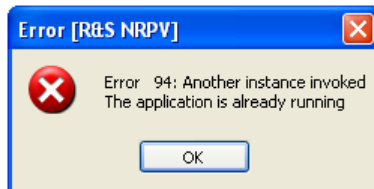


## 7 Appendix

Appendix provides a list of warning messages and makes familiar with the conventions used in this manual. It also covers information on software licensing and R&S information for customer support and service. A step-by-step description for generating a GSM/EDGE signal supports getting started with performing a continuous average measurement.

### 7.1 Warning Messages


#### Another instance invoked



Only one instance of R&S NRPV can run at a time. The program cannot be started twice.

#### Maximum number of viewable channels is 4.

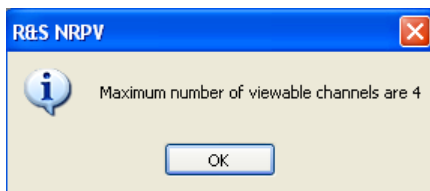
More than 4 measurements were activated.



Up to four measurements, including the absolute channel and maths measurement are possible.

#### Duplicate channels cannot be selected

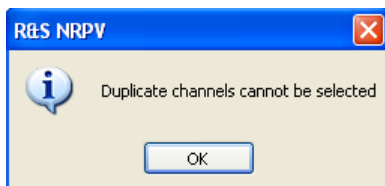A channel was assigned to a second measurement using the same measurand.




E.g. with one sensor connected, an average measurement cannot be performed parallel on a second channel.

#### Error 89: Record variable duplication. Duplicate variables cannot be recorded


The same record variable was assigned to a record trace.

**Error 91: Channel duplication. Duplicate channels cannot be selected**

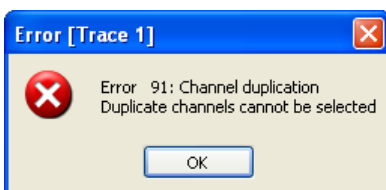
The same trace measurement was assigned to a second trace channel. E.g. with one sensor connected, an average trace measurement cannot be performed parallel on a second trace channel.

**Reference value cannot be calculated**

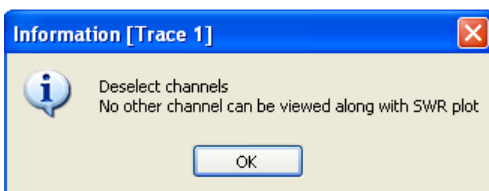The current measurement result is invalid. Therefore the derived reference value on pressing reset will also be invalid.

**Recording is in progress**

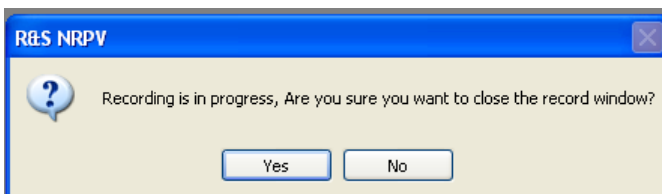The application is currently recording the measurement. Prompt with Yes to abort recording. With No recording will proceed.



# Index

## A

Absolute/Relative	
Unit in trace diagram	106
Accessories	
System setup	9
USB adapter cable	9
Activate selected communication standard	89
Active fence	84, 85
Active power	30
Add /Remove marker	
trace diagram	114
Algorithm	87
Alphanumerical entry field	65
Application window	51
Diagram	53
Menu	51
Menu bar	51
Status bar	51
Toolbar	51
Apply	65
Auto equivalent sampling	87
Auto ranging	78
Auto trigger level	90
Automatic averaging	79
Continuous	79
Fixed noise	79
Max. settl. time	79
Noise content	79
Average power	
Trace diagram	111
Averaging count	
< Min	102
> Max	102
Trace	102
AWGN	
Statistics	134

## B

Base power	
Trace diagram	111
Basics on power measurement	29
Burst	94
Dropout	82
Exclude from end	82
Exclude from start	82
Burst average	
Configure	72, 82
Buttons	65

## C

Cancel	65
Channel	75, 80
Trace	102
Trigger settings	90
Channel assignment	74
Channel name	74
Connectivity	74
Sensor type	74
Channel duplication	
trace configuration	101

Channel frequency	
Frequency	80
Channel name	74
Channel settings	74
0.000 ranging	78
Apply gamma correction	77
Auto ranging	78
Automatic averaging	79
Channel	75
Crossover ranging	78
Gamma correction	77
Global offset	76, 149
Global offset value	76
Magn. source	77
Manual ranging	78
Max. settl. time	79
Noise content	79
Offset	75
Path n	79
Phase source	77
Re. source	77
Reflection coefficient file	78
S-Parameter correction	77
Single frequency	77
Video bandwidth	76
Check box	65
Color selection field	65
Color settings	73
Communication and standards	88
CW signal	88
Default	88
Standard	88
Configuration dialog	55
Configure	70
Activate selected communication standard	89
Active fence in gates mode	85
Active fence in timeslot mode	84
Algorithm	87
Aperture continuous	81
Aperture statistics	83
Auto equivalent sampling	87
Auto ranging	78
Automatic averaging	79
Burst average	72, 82
Channel	75
Channel assignment	71, 74
Channel burst	82
Channel continuous	81
Channel frequency	80
Channel name	74
Channel settings	71, 74
Channel statistics	83
Color settings	71, 73
Communication and standards	88
Connectivity	74
Continuous	71, 81
Crossover ranging	78
Distal	88
Dropout in burst mode	82
Dropout trigger settings	91
Exclude from end in burst mode	82
Exclude from end in timeslot mode	84
Exclude from start in burst mode	82

- Exclude from start in timeslot mode ..... 84
  - Fence length in gates mode ..... 85
  - Fence length in timeslot mode ..... 84
  - Fence locked in timeslot mode ..... 84
  - Fence start in gates mode ..... 85
  - Fence start in timeslot mode ..... 84
  - Gamma correction ..... 77
  - Gate length ..... 85
  - Gate start ..... 85
  - Gates ..... 72, 85
  - Global offset ..... 76, 149
  - Histogram ..... 87
  - Integration ..... 87
  - Length of fence in gates mode ..... 85
  - Length of fence in timeslot mode ..... 84
  - Length of gate ..... 85
  - load ..... 88
  - Load ..... 72
  - Locked fence in timeslot mode ..... 84
  - Locked in gates mode ..... 85
  - Manual ranging ..... 78
  - Master ..... 92
  - Measurement modes ..... 71
  - Measurement window ..... 81
  - Mesial ..... 88
  - Nominal width ..... 84
  - Number of timeslots ..... 83
  - Offset ..... 75
  - Preserve trigger settings ..... 89
  - Preserve window settings ..... 89
  - Proximal ..... 88
  - Pulse measurement ..... 72, 86
  - S-Parameter correction ..... 77
  - Sampling frequency ..... 81
  - Sampling window ..... 81
  - Sensor type ..... 74
  - Serial number ..... 74
  - Signal frequency ..... 71, 80
  - Signal frequency channel ..... 80
  - Smoothing ..... 82
  - Start fence in gates mode ..... 85
  - Start fence in timeslot mode ..... 84
  - Start gate ..... 85
  - Startup settings ..... 71
  - Statistics ..... 72, 83
  - SYNC ..... 89, 92
  - Thresholds ..... 87
  - Timeslot ..... 72, 83
  - Trigger delay ..... 91
  - Trigger hold off ..... 92
  - Trigger hysteresis ..... 91
  - Trigger level ..... 90
  - Trigger locked ..... 92
  - Trigger master ..... 89
  - Trigger settings ..... 89, 90, 121
  - Trigger slope ..... 90
  - Trigger source ..... 90
  - Video bandwidth ..... 76
  - Voltage/Power related ..... 87
  - Configure menu ..... 27, 57
  - Connectivity ..... 74
  - Context-sensitive menu ..... 60
    - Numerical measurement modes ..... 140
    - Timeslot mode ..... 141
  - Context-sensitive menus
    - Trace mode ..... 99
  - Continuous ..... 94
  - Continuous average measurement
    - Configure channel settings ..... 33
    - Configure measurement window ..... 35
    - Configure the display ..... 36
    - Generating the test signal ..... 32
    - Performing the measurement ..... 31
    - Set offset correction ..... 36
    - Set trace mode ..... 42
    - Set unit ..... 36
    - Setting the frequency ..... 33
    - Setting up ..... 32
    - Start measurement ..... 36
    - Zeroing the power sensor ..... 33
  - Copy
    - Measurement results ..... 50
  - Copy to chipboard ..... 50
  - Copy to clipboard ..... 49
  - Crossover ranging ..... 78
- ## D
- Data management ..... 68
  - Default settings ..... 17, 72
  - Definition
    - Absolute power ..... 30
    - Active power ..... 30
    - Aperture time ..... 35
    - Arbitrary reference power ..... 30
    - Average power ..... 30
    - Instantaneous power ..... 30
    - Power ..... 30
    - Relative power level ..... 30
  - Delay
    - Trigger settings ..... 91
  - Diagram ..... 53
  - Diagram configuration
    - Axes in statistics mode ..... 129
    - Axes in trace mode ..... 107
    - Gates in trace mode ..... 109
    - Plot settings in statistics mode ..... 131
    - Plot settings in trace mode ..... 112
    - Pulse parameters in trace mode ..... 110
    - Timeslot ..... 155
    - Timeslots in trace mode ..... 109
    - Trace ..... 105
    - Unit tab in trace mode ..... 106
  - Diagram configuration dialog ..... 57
  - Diagram configuration timeslot
    - Axes tab ..... 155
    - Grid lines ..... 156
    - Max power - Y axis ..... 155
    - Min power - Y axis ..... 155
    - Name ..... 156
    - Plot tab ..... 156
    - Power/Div - Y axis ..... 155
  - Diagram description bar
    - Trace mode ..... 99
  - Diagram Description bar ..... 64
  - Diagrams ..... 64
  - Dialog
    - Diagram configuration ..... 57
    - Display configuration ..... 56
    - Math configuration ..... 56
    - Measurement configuration ..... 55
  - Dialog area ..... 65
  - Dialog header ..... 65

Dialogs .....	27
Configuration dialog .....	27, 55
Difference	
Numerical .....	151
Trace .....	104
Display configuration	
Name .....	154
Numerical .....	154
Display configuration dialog .....	56
Distal .....	88
Distal power	
Trace diagram .....	111
Distribution Function	
Statistics .....	134
Dropout	
Burst .....	82
Trigger settings .....	91
Duty cycle	
Symbol .....	64
Trace diagram .....	110
<b>E</b>	
Electrical power .....	30
Elements and controls	
Recording .....	162
Enter and confirm .....	65
Equivalent sampling period	
Trace diagram .....	110
Error	
Symbol .....	64
Evaluating recorded data	
Recording .....	164
Exclude from end .....	82, 84
Exclude from start .....	82, 84
<b>F</b>	
Fall time	
Trace diagram .....	111
Falling edge	
Trace diagram .....	111
Falling edge in trace diagram .....	111
Fence	
Active in gates mode .....	85
Active in timeslot mode .....	84
Length in gates mode .....	85
Locked in timeslot mode .....	84
Start .....	84
Start in gates mode .....	85
File .....	69
Licensing .....	70
Load task .....	69
New statistics .....	69
New task starting with... .....	69
New trace .....	69
Reflection coefficient .....	78
File menu .....	27, 58, 69
Filter .....	79
Frame .....	65
Frequency	
Channel .....	80
Functions .....	71
Corresponding icons: .....	61
Corresponding shortcuts .....	62
Measure .....	93
Trace .....	96

**G**

Gamma correction .....	77
Apply .....	77
Single frequency .....	77
Gate .....	85, 94
Average in trace mode .....	103
Configure .....	72, 85
Fence active .....	85
Fence length .....	85
Fence start .....	85
Length .....	85
Locked .....	85
math in trace mode .....	105
Peak in trace mode .....	103
pk/avg. in trace mode .....	103
Start .....	85
Statistics .....	134
Gates	
Measure in trace diagram .....	109
Trace diagram .....	109
View in trace diagram .....	109
Generating the test signal .....	32
Global offset .....	76, 149
Graphical measurement window .....	25, 53
Graphical representation .....	53
Graphical user interface .....	47
Grid lines	
Trace diagram .....	112
GUI .....	47
GUI elements .....	65
Alphanumeric entry field .....	65
Buttons .....	65
Check box .....	65
Color selection field .....	65
Dialog area .....	65
Dialog header .....	65
Frame .....	65
Menu items .....	65
Numerical entry field .....	65
Scroll bars .....	65
Selecting field .....	65
Selection field .....	65
Status field .....	65
Tab .....	65
Tool tip .....	65
GUI overview .....	24

**H**

Hardware	
Components .....	9
Help .....	65
About .....	167
Index .....	167
Help menu .....	27, 57, 167
High reference level .....	88
High-speed USB hub .....	9
Histogram .....	87
Hold off	
Trigger settings .....	92
Horiz. resolution	
trace diagram .....	112
Hysteresis	
Trigger settings .....	91

<b>I</b>	
Icons .....	61
Corresponding menu items .....	61
Im. source .....	77
Info	
Symbol .....	64
Installing .....	11
Prerequisites .....	11
R&S NRPV .....	12
Software components .....	10
Integration .....	87
Introduction .....	7
<b>L</b>	
Last active settings .....	17, 72
Length .....	84, 85
Fence in gates mode .....	85
Fence in timeslot mode .....	84
Level	
Trigger settings .....	90
License key .....	17
Load	
configure .....	88
Configure .....	72
Load template	
Activate selected communication standard .....	89
Communication and standards .....	88
Preserve trigger settings .....	89
Preserve window settings .....	89
Locked	
Gates .....	85
Gates mode .....	85
Timeslot .....	84
Trigger settings .....	92
Low reference level .....	88
<b>M</b>	
Magn. source .....	77
Main application window .....	25
Toolbar .....	29
Main menu .....	57
Manual ranging .....	78
Manual trigger level .....	90
Marker	
Statistics .....	132
Trace .....	113
Marker example .....	115
Marker function	
trace diagram .....	114
Marker functions .....	115
Marker Name	
trace diagram .....	113
Marker refers to	
trace diagram .....	114
Master .....	92
Trigger settings .....	92
MASTER .....	92
Math	
Feed 1,2 in trace mode XE .....	104
View in trace mode .....	105
Math 1-4 .....	104
Math configuration	
Numerical .....	150
Trace .....	103
Math configuration dialog .....	56
Math functions .....	115
Max hold	
Math in trace mode .....	105
Trace .....	102
Measurand	
Trace .....	102
Measure	
Averaging count in trace mode .....	102
Burst average .....	94
Channel in trace mode .....	102
Continuous .....	94
control panel in trace mode .....	96
Diagram configuration in trace mode .....	105
Diagram description bar in trace mode .....	99
display panel in trace mode .....	96
Feed 1,2 .....	104
Functions .....	93
Gate average in trace mode .....	103
gate in trace mode .....	105
Gate peak in trace mode .....	103
Gate pk/avg. in trace mode .....	103
Gated .....	94
Gates in trace diagram .....	109
Marker in statistics mode .....	132
Marker in trace mode .....	113
Math 1-4 .....	104
Math configuration in numerical measurements .....	150
Math configuration in trace mode .....	103
Math operation in trace mode .....	104
Max hold in trace mode .....	102, 105
Measurand in trace mode .....	102
Measurements panel in trace mode .....	98
Menu .....	93
Modes .....	93
Numerical .....	94, 136
Pulse in trace mode .....	103, 105
Results window in trace mode .....	98
Statistics .....	123
Timeslot .....	94
Timeslot average in trace mode .....	103
Timeslot in trace mode .....	105
Timeslots in trace diagram .....	110
Trace .....	95
Trace 1-4 .....	101
Trace configuration .....	101
View graphically in trace mode .....	102
View math in trace mode .....	105
Measure menu .....	57
Measurement configuration dialogs .....	55
Measurement panel	
Timeslot .....	156
Measurement panel timeslot	
Channel .....	156
M1 (#1) .....	156
Measurement setup	
Multiple .....	15
Single .....	14
Measurement window .....	25
Aperture time .....	35
Graph .....	53
Numerical .....	52
Measuring average power .....	33
Measuring window	
Graphical .....	25
Numerical .....	25

menu	
Trigger	57
Menu	51, 57
Configure	57
Context-sensitive menu	60
Help	57
Main menu	57
Measure	57
Submenu	57
Window	57
Zero	57
Menu bar	51
Menu items	65
Corresponding icons	61
Corresponding shortcuts	62
Menus	27
Configure	27
File	27, 58, 69
Help	27, 167
Measure	93
Trigger	27, 89
Window	27, 166
Zero	27, 165
Mesial	88
Mesial power	
Trace diagram	111
Mid reference level	88
Minimal power	
Trace diagram	111
Mouse operation	67
Mov/Zoom	
Trace	119
Move	118
Move/Zoom	
Statistics	134
Multiple measurement setup	15
<b>N</b>	
Name	
trace diagram	112
Name marker window	
trace diagram	114
Negative	90
Nominal width	84
NRP-Zxx power sensors	
Firmware version	11
NRPxxS(N) power sensors	
Firmware version	11
Number of timeslots	83
Numerical	94
Configuration controls	137
Display/Diagram	137
Gate selection	137
Math	137
Math configuration	150
Measurement configuration	137
Measurements panel	138
Result field	138
Results window	136
Snapshot	137
Timeslot results window	139
Numerical burst measurement	
Apply math functions	44
Configure measurement	45
Numerical context-sensitive menu	
continuous/gate/burst	141
Numerical entry field	65
Numerical math auxiliaries	
1st, 2nd, 3rd	153
Feed ½	153
Max	153
Mean	153
Min	153
None	153
Reset	153
StDev	153
Numerical math configuration	
auxiliary tab	153
Feed 1, 2	150
Lmit tab	154
Math 1-4	150
Operation	151
Relative tab	152
Tabs	151
Unit tab	151
View	150
Numerical math limits	
Upper/lower on/off	154
Upper/lower value	154
Warning beep	154
Numerical math relative	152
Ref. value	153
Relative	153
Numerical math units	
Absolute	151
Relative	152
Resolution	152
Numerical measurement auxiliaries	
1st /2nd/3rd	148
Reset	148
Numerical measurement averaging	
Auto	145
Count	145
Ref. timeslot	145
Numerical measurement configuration	
Auxiliaries	147
Averaging	145
Continuous/gate/burst	142
Duty cycle	148
Limits	149
Relative	146
Timeslot	144
Unit	146
Numerical measurement continuous/gate/burst	
Channel	143
Measurement	142
Tabs	143
View	143
Numerical measurement duty cycle	
Correction	149
Duty cycle	149
Numerical measurement limits	
Upper/lower	149
Upper/lower value	149
Warning beep	137, 149
Numerical measurement relative	
Ref.timeslot	147
Ref.value	147
Relative	147
Reset	147
Numerical measurement timeslot	
Active timeslots	144
Channel	144

- Numerical measurement unit
  - Absolute ..... 146
  - Relative ..... 146
  - Resolution ..... 146
- Numerical measurement window ..... 25, 52
- Numerical timeslot results window
  - Auto ..... 140
  - Min/max ..... 140
- O**
- Offset ..... 75
  - Global ..... 76, 149
  - Global value ..... 76
- Offset correction ..... 75
  - Symbol ..... 64
- Ok ..... 65
- Open task ..... 69
  - Look in ..... 69
- Operating ..... 65
- Operation
  - Difference in trace mode ..... 104
  - Math in trace mode ..... 104
  - Ratio in trace mode ..... 104
  - Standing wave ratio in trace mode ..... 104
- Overshoot
  - Trace diagram ..... 111
- P**
- Particular features ..... 49
  - Print ..... 49
- Particular Features ..... 48
  - Sensor info ..... 49
  - Zoomed out results display ..... 48
- Peak power
  - Trace diagram ..... 111
- Performing a continuous average measurement ..... 31
- Phase source ..... 77
- Positive ..... 90
- Power
  - Absolute power level ..... 30
  - Arbitrary reference power ..... 30
  - Ratio ..... 30
  - Relative power level ..... 30
  - Units ..... 30
- Power definition ..... 30
- Power sensors
  - Connecting ..... 13
  - Multiple sensors ..... 15
  - NRP-Z00 ..... 13
  - Putting into operation ..... 13
  - Simulation mode sensor ..... 13
- Power/Div
  - Y axis in trace diagram ..... 108
- Preserve trigger settings ..... 89
- Preserve window settings ..... 89
- Print ..... 49
  - Measurement results ..... 49
- Proximal ..... 88
- Proximal power
  - Trace diagram ..... 111
- Pulse
  - Configure ..... 72, 86
  - Math in trace mode ..... 105
  - Trace ..... 103
- Pulse duration
  - Trace diagram ..... 110
- Pulse measurement ..... 87
  - Algorithm ..... 87
  - Auto equivalent sampling ..... 87
  - Distal ..... 88
  - Histogram ..... 87
  - Integration ..... 87
  - Mesial ..... 88
  - Proximal ..... 88
  - Thresholds ..... 87
  - Voltage/Power related ..... 87
- Pulse period
  - Trace diagram ..... 110
- Pulse power
  - Trace diagram ..... 111
- Pulse power in trace diagram ..... 111
- Pulse start time
  - Trace diagram ..... 111
- Pulse stop time
  - Trace diagram ..... 111
- Pulse times
  - Trace diagram ..... 110
- Pulse times in trace diagram ..... 110
- Q**
- Quick Start Guide ..... 24
- R**
- Ranging
  - 0.000 crossover ..... 78
  - Auto ..... 78
  - Crossover ..... 78
  - Manual ..... 78
  - Path n ..... 79
- Ratio
  - Numerical ..... 151
  - Trace ..... 104
- Re. source ..... 77
- Recording ..... 157
  - Characteristics ..... 157
  - Elements and controls ..... 162
  - Evaluating recorded data ..... 164
  - Interactions ..... 157
  - Parameters ..... 158
  - Preparing ..... 157
  - Start ..... 160
  - Stop ..... 161
- Reference level
  - Distal ..... 88
  - High ..... 88
  - Low ..... 88
  - Medial ..... 88
  - Mesial ..... 88
  - Proximal ..... 88
  - Y axis in trace diagram ..... 108
- Reference position
  - X axis in trace diagram ..... 108
  - Y axis in trace diagram ..... 108
- Reference time
  - X axis in trace diagram ..... 108
- Reflection coefficient
  - File ..... 78
  - Magn. source ..... 77
  - Magnitude ..... 77



- Phase ..... 77
- Phase source ..... 77
- Resolution(Table)
  - Unit in trace diagram ..... 106
- Results
  - Copy to clipboard ..... 50
  - Print ..... 49
- Rise time
  - Trace diagram ..... 111
- Rising edge
  - Trace diagram ..... 111
- Rising edge in trace diagram ..... 111
- S**
- S-Parameter correction ..... 77
  - Symbol ..... 64
- Save/Load marker configuration
  - trace diagram ..... 114
- Scope ..... 8
- Scroll bars ..... 65
- Selecting field ..... 65
- Selection field ..... 65
- Sensor
  - Connectivity ..... 74
  - Master ..... 92
  - Serial number ..... 74
  - Type ..... 74
- Sensor extension cable NRP-Z2 ..... 9
- Sensor info ..... 49
- Sensor Type ..... 74
- Serial number ..... 74
- Setting up a continuous average measurement ..... 32
- Shortcuts ..... 62
  - Corresponding functions ..... 61, 62
  - Corresponding icons ..... 61
  - Corresponding menu items ..... 62
- Show marker names
  - trace diagram ..... 114
- Show reference values
  - Trace diagram ..... 108
- Signal frequency
  - Channel ..... 80
  - Valid for all channels ..... 80
- Signal power
  - Trace diagram ..... 111
- Single measurement setup ..... 14
- Slope
  - Falling edge ..... 90
  - Rising edge ..... 90
  - Trigger settings ..... 90
- Snapshot ..... 137
- Software ..... 10
  - Configuration for startup ..... 72
  - starting ..... 17
- Software - starting
  - Configuration for startup ..... 17
  - Default settings ..... 17
  - Last active settings ..... 17
  - User defined settings ..... 17
- Software components ..... 10
  - NRP toolkit package ..... 10
  - NRPV Setup ..... 10
- Source
  - external trigger source ..... 90
  - internal trigger source ..... 90
  - Trigger settings ..... 90
- Splitter bar ..... 67
- Standing wave ratio
  - Numerical ..... 151
  - Trace ..... 104
- Start
  - Fence ..... 84
  - Fence in gates mode ..... 85
  - Gate ..... 85
  - Measurement ..... 165
- Start recording ..... 160
- Start/Stop
  - Measurement ..... 94
- Startup configuration ..... 17, 72
  - Default settings ..... 17, 72
  - Last active settings ..... 17, 72
  - User defined settings ..... 17, 72
- Statistics ..... 94, 123
  - AWGN ..... 134, 135
  - Configure ..... 72, 83
  - Context-sensitive menu ..... 126
  - Control panel ..... 124
  - Diagram ..... 124
  - Diagram description bar ..... 125
  - Display panel ..... 123
  - Distribution function ..... 135
  - Distribution Function ..... 134
  - Fixed trace ..... 134
  - Gate ..... 134
  - Marker ..... 124, 132
  - Measurement ..... 124
  - Measurement configuration ..... 127
  - Move/Zoom ..... 133
  - results window ..... 125
  - Scale ..... 133
  - Scaling ..... 124
  - Show ref. curve ..... 135
  - Zoom in ..... 134
- Statistics diagram
  - Axis tab ..... 129
  - grid lines ..... 131
  - Horiz. resolution ..... 131
  - name ..... 131
  - Plot tab ..... 131
  - X axis ..... 130
  - X axis power/div ..... 130
  - X axis reference position ..... 130
  - Y axis ..... 130
  - Y axis min ..... 130
  - Y axis prob/div ..... 130
- Statistics marker
  - Move to viewing area ..... 132
  - Position of values ..... 132
  - X marker position ..... 132
  - Y marker position ..... 132
  - Y marker right position ..... 132
- Statistics measurement
  - Acquisition ..... 128
  - AWGN ..... 129
  - Channel ..... 127
  - Free run acquisition ..... 129
  - Gate acquisition ..... 129
  - Marker ..... 128
  - Measurand ..... 128
  - Measurement 1-4 ..... 127
  - Total samples acquisition ..... 128
  - View ..... 128

- X marker ..... 128
- Y marker ..... 128
- Statistics move/zoom
  - Zoom out ..... 134
- Statistics scale
  - Auto ..... 133
  - CCDF/div ..... 133
  - Power/Div ..... 133
  - y start ..... 133
- Status bar ..... 51
- Status field ..... 65
- Stop
  - Measurement ..... 165
  - Stop Measurement ..... 165
  - Stop recording ..... 161
- Submenu ..... 57
- Symbols ..... 64
  - Duty cycle ..... 64
  - Error ..... 64
  - Info ..... 64
  - Offset correction ..... 64
  - S-parameter correction ..... 64
  - Trigger on falling slope ..... 64
  - Trigger on rising slope ..... 64
  - Waiting for trigger ..... 64
  - Warning ..... 64
- SYNC ..... 92
- System setup ..... 9
  - Accessories ..... 9
  - Hardware components ..... 9
  - USB hub ..... 9
- T**
- Tab ..... 65
- Task
  - Close ..... 69
  - Exit ..... 70
  - new statistics ..... 69
  - New trace ..... 69, 95
  - Recent task files ..... 70
  - Save ..... 69
  - Save as ..... 69
- Thermal power meter ..... 30
- Thresholds ..... 87
  - Distal ..... 88
  - Mesial ..... 88
  - Proximal ..... 88
  - Voltage/Power related ..... 87
- Time/Div
  - X axis in trace diagram ..... 108
- Timeslot ..... 94
  - Average in trace mode ..... 103
  - Configure ..... 72, 83
  - Exclude from end ..... 84
  - Exclude from start ..... 84
  - Fence active ..... 84
  - Fence length ..... 84
  - Fence locked ..... 84
  - Fence start ..... 84
  - Math in trace mode ..... 105
  - Nominal length (TDMA) ..... 84
  - Nominal width ..... 84
  - Number of timeslots ..... 83
- Timeslots
  - Measure in trace diagram ..... 110
  - Trace diagram ..... 109
  - View in trace diagram ..... 109
- Tool tip ..... 65
- Toolbar ..... 29, 51, 61
- Top power
  - Trace diagram ..... 111
- Trace ..... 93, 95
  - activating gate measurement ..... 105
  - Activating pulse measurement ..... 105
  - Activating timeslot measurement ..... 105
  - add/remove marker ..... 114
  - Averaging count ..... 102
  - Channel ..... 102
  - Configuration ..... 101
  - Context-sensitive menus ..... 99
  - control panel ..... 96
  - Diagram configuration ..... 105
  - Diagram description bar ..... 99
  - display panel ..... 96
  - Falling edge in diagram ..... 111
  - Feed 1,2 ..... 104
  - Fixed trace ..... 119
  - Functions ..... 96
  - Gate average ..... 103
  - Gate peak ..... 103
  - Gate pk/avg. .... 103
  - Gates in diagram ..... 109
  - Marker ..... 113
    - marker function ..... 114
    - marker name ..... 113
    - marker refers to ..... 114
    - Math 1-4 ..... 104
    - Math configuration ..... 103
    - Math operation ..... 104
    - Max hold ..... 102
    - Max hold of math operation ..... 105
    - Measurand ..... 102
    - Measure gates ..... 109
    - Measure timeslots in diagram ..... 110
    - Measurements ..... 122
    - Measurements panel ..... 98, 122
    - Move freely ..... 119
    - Move horiz. only ..... 119
    - move vert. only ..... 119
    - name marker window ..... 114
    - name of diagram ..... 112
    - Other section ..... 121
    - Power scale ..... 117
    - Pulse ..... 103
    - Pulse power in diagram ..... 111
    - Pulse times in diagram ..... 110
    - Results window ..... 98
    - Rising edge in diagram ..... 111
    - Save/Load marker configuration ..... 114
    - show marker names ..... 114
    - Show reference values in diagram ..... 108
    - Signal power in diagram ..... 111
    - Time scale ..... 120
    - Timeslot average ..... 103
    - Timeslots in diagram ..... 109
    - Trace 1-4 ..... 101
    - Trigger ..... 120
    - View gates in diagram ..... 109
    - View graphically ..... 102
    - view marker ..... 113

- View math ..... 105
- View timeslots in diagram ..... 109
- Zoom in ..... 119
- Trace 1-4 ..... 101
- Trace configuration ..... 101
- Trace diagram
  - Absolute/relative ..... 106
  - Average power ..... 111
  - Axes tab ..... 107
  - Base power ..... 111
  - Check ..... 110
  - Distal power ..... 111
  - Duty cycle ..... 110
  - Equivalent sampling period ..... 110
  - Fall time ..... 111
  - Falling edge ..... 111
  - Gates ..... 109
  - Gates/Timeslots tab ..... 109
  - Grid lines ..... 112
  - Horiz. resolution ..... 112
  - Measure gates ..... 109
  - Measure timeslots ..... 110
  - Mesial power ..... 111
  - Minimal power ..... 111
  - name ..... 112
  - Overshoot ..... 111
  - Peak power ..... 111
  - Plot tab ..... 112
  - Power/Div ..... 108
  - Proximal power ..... 111
  - Pulse duration ..... 110
  - Pulse period ..... 110
  - Pulse power ..... 111
  - Pulse start time ..... 111
  - Pulse stop time ..... 111
  - Pulse tab ..... 110
  - Pulse times ..... 110
  - Reference position ..... 108
  - Reference time ..... 108
  - Resolution ..... 106
  - Rise time ..... 111
  - Rising edge ..... 111
  - Show ..... 110
  - Show reference values ..... 108
  - Signal power ..... 111
  - Timeslots ..... 109
  - Top power ..... 111
  - Uncheck ..... 110
  - Unit tab ..... 106
  - View gates ..... 109
  - View timeslots ..... 109
  - Y axis ..... 107, 108
  - Y axis reference level ..... 108
  - Y axis reference position ..... 108
- Trace marker
  - line ..... 114
  - math ..... 114
  - trace ..... 114
- Trace math configuration
  - Color ..... 103
  - Feed ..... 103
  - Feed 1, 2 ..... 104
  - gate ..... 105
  - Math 1-4 ..... 104
  - Max hold ..... 103
  - Max. hold ..... 105
  - Operation ..... 103, 104
- Pulse ..... 105
- Timeslot avg. .... 105
- View ..... 103, 105
- Trace measurements
  - Gates ..... 122
  - Marker ..... 122
  - Pulse ..... 122
  - Timeslots ..... 122
- Trace move/zoom
  - Zoom out ..... 119
- Trace other section
  - Hold reset ..... 121
- Trace power scale
  - Auto ..... 118
  - Power/Div ..... 118
  - Reference power ..... 118
- Trace time scale
  - Reference time ..... 120
  - Reset ..... 120
  - Time/Div ..... 120
- Trace trigger
  - 1Trig ..... 121
  - Show level ..... 121
- Trigger ..... 89
  - Channel ..... 90
  - continuous ..... 121
  - Delay ..... 91
  - Dropout ..... 91
  - free run ..... 121
  - Hold off ..... 92
  - Hysteresis ..... 91
  - Level ..... 90
  - Locked ..... 92
  - Menu ..... 89
  - Settings ..... 89, 90, 121
  - single ..... 121
  - Slope ..... 90
  - Source ..... 90
  - Trigger delay ..... 91
  - Trigger hold off ..... 92
  - Trigger level ..... 90
  - Trigger menu ..... 27, 57
  - Trigger on falling slope
    - Symbol ..... 64
  - Trigger on rising slope
    - Symbol ..... 64
  - Trigger slope ..... 90
  - Trigger source ..... 90
- Troubleshooting ..... 21
  - Setup ..... 21
  - USB ..... 23
- U**
- Uninstalling
  - R&S NRPV ..... 13
- USB
  - Adapter cable NRP-Z3 ..... 9
  - Adapter cable NRP-Z4 ..... 9
  - Hub NRP-Z5 ..... 9
  - Lemo cable NRP-ZK6 ..... 9
  - USB cable NRP-ZKU ..... 9
  - USB hub ..... 9, 15
  - High-speed hub ..... 9
  - Manufacturers ..... 16
  - Power high -speed hub ..... 23
  - Power supply ..... 23

User defined settings ..... 17, 72

## V

Valid for all channels ..... 80

Video bandwidth ..... 76

### View

Gates in trace diagram ..... 109

Math in trace mode ..... 105

Timeslots in trace diagram ..... 109

### View graphically

Trace ..... 102

### View marker

trace diagram ..... 113

Voltage/Power related ..... 87

## W

### Waiting for trigger

Symbol ..... 64

### Warning

Symbol ..... 64

### Window

Activate next ..... 167

Activate previous ..... 167

Cascade ..... 167

Close ..... 167

Close all ..... 167

Tile ..... 167

Window menu ..... 27, 57, 166

## X

### X axis

Reference position in trace diagram ..... 108

Reference time in trace diagram ..... 108

Time/Div in trace diagram ..... 108

Trace diagram ..... 107

XE Chapter overview ..... 5

## Y

### Y axis

Power/Div in trace diagram ..... 108

Reference level in trace diagram ..... 108

Reference position in trace diagram ..... 108

Trace diagram ..... 108

## Z

Zero ..... 165

Repeat zeroing ..... 166

Start zeroing ..... 165

Zero menu ..... 27, 57, 165

Zoom ..... 118

Zoomed out results display ..... 48