



**ROHDE & SCHWARZ**

Test and Measurement  
Division

## **Operating Manual**

# **SIGNAL GENERATOR**

## **SMT**

**1039.2000.02/03/06**

Printed in the Federal  
Republic of Germany



## **Tabbed Divider Overview**

### **Contents**

#### **Data Sheets**

**Safety Instructions**  
**Certificate of quality**  
**EC Certificate of Conformity**  
**List of R & S Representatives**

#### **Tabbed Divider**

<b>1</b>	<b>Chapter 1: Preparation for Use</b>
<b>2</b>	<b>Chapter 2: Manual Operation</b>
<b>3</b>	<b>Chapter 3: Remote Control</b>
<b>4</b>	<b>Chapter 4: Maintenance and Troubleshooting</b>
<b>5</b>	<b>Chapter 5: Testing the Rated Specifications</b>
<b>6</b>	<b>Annex A: IEC/IEEE-Bus Interface</b>
<b>7</b>	<b>Annex B: List of Error Messages</b>
<b>8</b>	<b>Annex C: List of Commands</b>
<b>9</b>	<b>Annex D: Programming Examples</b>
<b>10</b>	<b>Index</b>



# Contents

## Data Sheet

	Page
<b>1</b>	<b>Preparation for Use</b>
1.1	Putting into Operation ..... 1.1
1.1.1	Supply Voltage ..... 1.1
1.1.2	Switching On/Off the Instrument ..... 1.1
1.1.3	Initial Status ..... 1.2
1.1.4	Setting Contrast and Brightness of the Display ..... 1.2
1.1.5	RAM With Battery Back-Up ..... 1.2
1.1.6	Preset Setting ..... 1.3
1.2	Functional Test ..... 1.3
1.3	Fitting the Options ..... 1.4
1.3.1	Opening the Casing ..... 1.4
1.3.2	Overview of the Slots ..... 1.5
1.3.3	Option SM-B1 – Reference Oscillator OCXO ..... 1.5
1.3.4	Option SM-B2 – LF Generator ..... 1.6
1.3.5	Options SM-B3, SM-B8, and SM-B – Pulse Modulator 1.5, 3 and 6 GHz ..... 1.6
1.3.6	Option SM-B4 – Pulse Generator ..... 1.7
1.3.7	Option SM-B6 – Multifunction Generator ..... 1.7
1.3.8	Option SMT-B19 – Rear Panel Connections for RF and LF ..... 1.7
1.3.9	Cabling of the 50-MHz Reference (REF50) ..... 1.8
1.4	Mounting into a 19" Rack ..... 1.8
<b>2</b>	<b>Operation</b>
2.1	Explanation of Front and Rear Panel ..... 2.1
2.1.1	Elements of the Front Panel ..... 2.1
2.1.1.1	Display ..... 2.1
2.1.1.2	Controls ..... 2.3
2.1.1.3	Inputs/Outputs ..... 2.11
2.1.2	Elements of the Rear Panel ..... 2.13
2.2	Operating Concept ..... 2.18
2.2.1	Display ..... 2.18
2.2.2	Basic Operating Steps ..... 2.19
2.2.2.1	Calling the Menus ..... 2.19
2.2.2.2	Selection and Change of Parameters ..... 2.20
2.2.2.3	Triggering Action ..... 2.21

2.2.2.4	Quick Selection of Menu (QUICK SELECT)	2.21
2.2.2.5	Use of [FREQ] and [LEVEL] Keys	2.22
2.2.2.6	Use of [RF ON/OFF] and [MOD ON/OFF] Keys	2.22
2.2.2.7	Changing Unit of Level	2.22
2.2.2.8	Correction of Input	2.22
2.2.3	Sample Setting for First Users	2.23
2.2.4	List Editor	2.26
2.2.4.1	Select and Generate List – SELECT LIST	2.27
2.2.4.2	Deletion of Lists – DELETE LIST	2.28
2.2.4.3	Edition of Lists	2.29
2.2.4.4	Pattern Setting to Operate the List Editor	2.34
2.2.5	Save/Recall – Storing/Calling of Instrument Settings	2.37
<b>2.3</b>	<b>Menu Summary</b>	<b>2.38</b>
<b>2.4</b>	<b>RF Frequency</b>	<b>2.39</b>
2.4.1	Frequency Offset	2.40
<b>2.5</b>	<b>RF Level</b>	<b>2.40</b>
2.5.1	Level Offset	2.42
2.5.2	Interrupt-free Level Setting	2.42
2.5.3	Switching On/Off Internal Level Control	2.42
2.5.4	Internal Level Control – Bandwidth Selection	2.43
2.5.5	User Correction (UCOR)	2.43
2.5.6	EMF	2.45
2.5.7	[RF ON/OFF] Key	2.45
2.5.8	Reset Overload Protection	2.45
<b>2.6</b>	<b>Modulation</b>	<b>2.46</b>
2.6.1	Modulation Sources	2.46
2.6.1.1	Simultaneous Modulation	2.47
2.6.1.2	Alternate Switching Off of Modulations	2.47
2.6.1.3	[MOD ON/OFF] Key	2.48
2.6.1.4	LF-Generator	2.49
2.6.2	Amplitude Modulation	2.50
2.6.3	Frequency Modulation	2.51
2.6.3.1	FM Deviation Limits	2.52
2.6.4	Phase Modulation	2.53
2.6.4.1	PM Deviation Limits	2.54
2.6.5	Pulse Modulation	2.54
2.6.5.1	Pulse Generator	2.54
2.6.6	STEREO Modulation	2.57
2.6.7	VOR-/ILS Test Signals	2.58
2.6.7.1	VOR Modulation	2.58
2.6.7.2	ILS-Glide Slope Modulation (ILS-GS)	2.61
2.6.7.3	ILS-Localizer Modulation (ILS-LOC)	2.64
2.6.7.4	Marker Beacon	2.67

<b>2.7</b>	<b>LF-Output</b> .....	<b>2.68</b>
<b>2.8</b>	<b>Sweep</b> .....	<b>2.70</b>
2.8.1	Setting the Sweep Range (START, STOP, CENTER and SPAN) .....	2.70
2.8.2	Selecting the Sweep Run (SPACING LIN, LOG) .....	2.71
2.8.3	Operating Modes (MODE) .....	2.71
2.8.4	Trigger Input .....	2.71
2.8.5	Sweep Outputs .....	2.71
2.8.6	RF-Sweep .....	2.73
2.8.7	LEVEL Sweep .....	2.74
2.8.8	LF-Sweep .....	2.75
<b>2.9</b>	<b>Memory Sequence</b> .....	<b>2.77</b>
<b>2.10</b>	<b>Utilities</b> .....	<b>2.80</b>
2.10.1	IEC-Bus Address (SYSTEM-GPIB) .....	2.80
2.10.2	Parameter of the RS232 Interface (SYSTEM RS232) .....	2.81
2.10.3	Suppressing Indications and Deleting Memories (SYSTEM-SECURITY) ...	2.82
2.10.4	Indication of the IEC-Bus Language (SYSTEM-LANGUAGE) .....	2.82
2.10.5	Reference Frequency Internal/External(REF OSC) .....	2.83
2.10.6	Phase of the Output Signal (PHASE) .....	2.84
2.10.7	Password Input with Functions Protected (PROTECT) .....	2.85
2.10.8	Calibration (CALIB) .....	2.86
2.10.9	Indication of Module Variants (DIAG-CONFIG) .....	2.90
2.10.10	Voltage Indication of Test Points (DIAG-TPOINT) .....	2.91
2.10.11	Indication of Service Data (DIAG-PARAM) .....	2.92
2.10.12	Test (TEST) .....	2.92
2.10.13	Assign Modulations to the [MOD ON/OFF] Key (MOD-KEY) .....	2.93
2.10.14	Set Auxiliary Inputs/Outputs (AUX I/O) .....	2.94
2.10.15	Switching On/Off Beeper (BEEPER) .....	2.95
<b>2.11</b>	<b>The Help System</b> .....	<b>2.96</b>
<b>2.12</b>	<b>Status</b> .....	<b>2.96</b>
<b>2.13</b>	<b>Error Messages</b> .....	<b>2.97</b>

<b>3</b>	<b>Remote Control</b>	
3.1	Introduction .....	3.1
3.2	Brief Instructions .....	3.1
3.3	Switchover to Remote Control .....	3.2
3.3.1	Remote Control via IEC Bus .....	3.3
3.3.1.1	Setting the Device Address .....	3.3
3.3.1.2	Indications during Remote Control .....	3.3
3.3.1.3	Return to Manual Operation .....	3.3
3.3.2	Remote Control vis RS-232 Interface .....	3.4
3.3.1.1	Setting the Transmission Parameters .....	3.4
3.3.1.2	Indications during Remote Control .....	3.4
3.3.1.3	Return to Manual Operation .....	3.4
3.4	IEC-Bus Messages .....	3.4
3.4.1	Interface Messages .....	3.4
3.4.2	Device Messages (Commands and Device Responses) .....	3.5
3.5	Structure and Syntax of the Device Messages .....	3.5
3.5.1	SCPI Introduction .....	3.5
3.5.2	Structure of a Command .....	3.6
3.5.3	Structure of a Command Line .....	3.8
3.5.4	Responses to Queries .....	3.8
3.5.5	Parameters .....	3.9
3.5.6	Overview of Syntax Elements .....	3.10
3.6	Description of Commands .....	3.11
3.6.1	Notation .....	3.11
3.6.2	Common Commands .....	3.13
3.6.3	ABORt System .....	3.16
3.6.4	CALibration System .....	3.16
3.6.5	DIAGnostic System .....	3.19
3.6.6	DISPlay System .....	3.21
3.6.7	FORMat System .....	3.22
3.6.8	MEMory System .....	3.23
3.6.9	OUTPut System .....	3.23
3.6.10	OUTPut2 System .....	3.25
3.6.11	SOURce System .....	3.26
3.6.11.1	SOURce:AM Subsystem .....	3.26
3.6.11.2	SOURce:CORREction Subsystem .....	3.28
3.6.11.3	SOURce:FM Subsystem .....	3.29
3.6.11.4	SOURce:FREQuency Subsystem .....	3.31
3.6.11.5	SOURce:ILS Subsystem .....	3.34
3.6.11.6	SOURce:MARKer Subsystem .....	3.39
3.6.11.7	SOURce:MBEacon Subsystem .....	3.41
3.6.11.8	SOURce:PHASe Subsystem .....	3.42
3.6.11.9	SOURce:PM Subsystem .....	3.43
3.6.11.10	SOURce:POWer Subsystem .....	3.45
3.6.11.11	SOURce:PULM Subsystem .....	3.48
3.6.11.12	SOURce:PULSe Subsystem .....	3.49



3.6.11.13	SOURce:ROSCillator Subsystem	3.50
3.6.11.14	SOURce:STEReo Subsystem	3.51
3.6.11.15	SOURce:SWEEP Subsystem	3.54
3.6.11.16	SOURce:VOR Subsystem	3.57
3.6.12	SOURce0 2 System	3.60
3.6.12.1	SOURce0 2:FREQuency Subsystem	3.60
3.6.12.2	SOURce0 2:FUNcTion Subsystem	3.61
3.6.12.3	SOURce2:MARKer Subsystem	3.62
3.6.12.4	SOURce2:SWEEP Subsystem	3.63
3.6.13	STATus System	3.65
3.6.14	SYSTem System	3.67
3.6.15	TEST System	3.72
3.6.16	TRIGger System	3.74
3.6.17	UNIT System	3.76
<b>3.7</b>	<b>Instrument Model and Command Processing</b>	<b>3.77</b>
3.7.1	Input Unit	3.77
3.7.2	Command Recognition	3.78
3.7.3	Data Set and Instrument Hardware	3.78
3.7.4	Status Reporting System	3.78
3.7.5	Output Unit	3.79
3.7.6	Command Sequence and Command Synchronization	3.79
<b>3.8</b>	<b>Status Reporting System</b>	<b>3.80</b>
3.8.1	Structure of an SCPI Status Register	3.80
3.8.2	Overview of the Status Registers	3.82
3.8.3	Description of the Status Registers	3.83
3.8.3.1	Status Byte (STB) and Service Request Enable Register (SRE)	3.83
3.8.3.2	IST Flag and Parallel Poll Enable Register (PPE)	3.84
3.8.3.3	Event Status (ESR) and Event Status Enable Register (ESE)	3.84
3.8.3.4	STATus:OPERation Register	3.85
3.8.3.5	STATus:QUEStionable Register	3.85
3.8.4	Application of the Status Reporting System	3.86
3.8.4.1	Service Request, Making Use of the Hierarchy Structure	3.86
3.8.4.2	Serial Poll	3.86
3.8.4.3	Parallel Poll	3.87
3.8.4.4	Query by Means of Commands	3.87
3.8.4.5	Error-Queue Query	3.87
3.8.5	Resetting Values of the Status Reporting System	3.88
<b>4</b>	<b>Maintenance and Troubleshooting</b>	
<b>4.1</b>	<b>Maintenance</b>	<b>4.1</b>
4.1.1	Cleaning the Outside	4.1
4.1.2	Storage	4.1
4.1.3	Exchange of the Lithium Battery	4.1
<b>4.2</b>	<b>Functional Test</b>	<b>4.4</b>

<b>5</b>	<b>Testing the Rated Specifications</b>	
<b>5.1</b>	<b>Test Instruments and Utilities</b>	<b>5.1</b>
5.1.1	Test Systems to Measure Modulation Characteristics	5.3
5.1.1.1	Standard Test System	5.3
5.1.1.2	Test System with Audio Analyzer	5.3
5.1.1.3	Test System for Broadband FM	5.3
5.1.1.4	Test System for Pulse Modulation	5.4
<b>5.2.</b>	<b>Test Procedure</b>	<b>5.5</b>
5.2.1	Display and Keyboard	5.5
5.2.2	Frequency Setting	5.5
5.2.3	Settling Time	5.6
5.2.4	Reference Frequency	5.8
5.2.5	Harmonics Suppression	5.8
5.2.6	Suppression of Nonharmonics	5.9
5.2.7	SSB Phase Noise	5.10
5.2.8	Broadband Noise	5.11
5.2.9	Residual FM	5.12
5.2.10	Residual AM	5.13
5.2.11	Output Level	5.13
5.2.12	Output Reflection Coefficient	5.15
5.2.13	Interrupt-free Level Setting (ATTEN FIXED)	5.16
5.2.14	Overvoltage Protection	5.17
5.2.15	Testing Level Monitoring at Input EXT1	5.17
5.2.16	Modulation Depth of AM	5.17
5.2.17	AM Frequency Response	5.18
5.2.18	AM Distortion Factor	5.18
5.2.19	Residual PhiM with AM	5.18
5.2.20	Testing Level Monitoring at Input EXT2 (Option SM-B5)	5.19
5.2.21	FM Deviation Setting	5.19
5.2.22	FM Frequency Response	5.20
5.2.22.1	FM Frequency Response up to 100 kHz	5.20
5.2.22.2	FM Frequency Response up to 8 MHz	5.20
5.2.23	FM Distortion Factor	5.21
5.2.24	Residual AM with FM	5.21
5.2.25	Carrier Frequency Deviation with FM	5.21
5.2.26	FM Stereo Modulation	5.22
5.2.27	PhiM Deviation Setting	5.22
5.2.28	PhiM Frequency Response	5.23
5.2.28.1	PhiM Frequency Response with a PM bandwidth of 100 kHz	5.23
5.2.28.2	PhiM Frequency Response with a PM bandwidth of 2 MHz	5.23
5.2.29	PhiM Distortion Factor	5.24
5.2.30	Internal Modulation Generator	5.24
5.2.31	Pulse Modulation (Option SM-B3/B8)	5.24
5.2.31.1	ON/OFF-Ratio	5.24
5.2.31.2	Dynamic Characteristics	5.25
5.2.32	LF Generator (Option SM-B2)	5.25
5.2.32.1	Frequency Error	5.25
5.2.32.2	Frequency Response	5.26
5.2.33	Pulse Generator (Option SM-B4)	5.26

5.2.34	Multi-Function Generator (Option SM-B6) .....	5.27
5.2.34.1	Frequency Error, Distortion Factor and Level .....	5.27
5.2.34.2	Frequency Response .....	5.28
5.2.34.3	Distortion Factor and Crosstalk Attenuation Stereo .....	5.28
5.2.34.4	Pilot-Tone Level .....	5.28
5.3	Test Report .....	5.29
6	<b>Annex A .....</b>	<b>IEC/IEEE-Bus Interface</b>
7	<b>Annex B .....</b>	<b>List of Error Messages</b>
8	<b>Annex C</b>	<b>List of Commands (with SCPI Conformity Information)</b>
9	<b>Annex D .....</b>	<b>Programming Examples</b>
10	<b>Index</b>	

## Tables

Table 2-1	Input sockets for the different types of modulation .....	2.45
Table 2-2	Status messages in the case of a deviation from the rated value at the external modulation input .....	2.46
Table 2-3	Modulations which cannot be operated simultaneously .....	2.47
Table 2-4	Modulation generators as component parts .....	2.48
Table 2-5	MEMORY SEQUENCE; Example of a list .....	2.76
Table 3-1	Device Response to *OPT? .....	3.13
Table 3-2	Synchronization using *OPC, *OPC? and *WAI .....	3.79
Table 3-3	Meaning of the bits used in the status byte .....	3.83
Table 3-4	Meaning of the bits used in the event status register .....	3.84
Table 3-5	Meaning of the bits used in the STATus:OPERation register .....	3.85
Table 3-6	Meaning of the bits used in the STATus:QUESTionable register .....	3.85
Table 3-7	Resetting instrument functions .....	3.88
Table 5-1	Test instruments and utilities .....	5.1
Table 5-2	Changeover limits of the SMT .....	5.5
Table 5-3	Test report .....	5.29

## Figures

Fig. 1-1	SMT – View from the front	1.5
Fig. 2-1	Front panel view	2.2
Fig. 2-2	Rear panel view	2.12
Fig. 2-3	Design of the display	2.18
Fig. 2-4	MODULATION AM menu	2.19
Fig. 2-5	Display after AM setting	2.24
Fig. 2-6	Display after pattern setting	2.25
Fig. 2-7	OPERATION page of the MEM SEQ menu	2.26
Fig. 2-8	SELECT LIST selection window	2.27
Fig. 2-9	DELETE LIST selection window	2.28
Fig. 2-10	Edit function EDIT/VIEW	2.29
Fig. 2-11	Block function FILL: Input window	2.30
Fig. 2-12	Edit function INSERT: Input window	2.32
Fig. 2-13	Edit function DELETE: Input window	2.33
Fig. 2-14	Starting point of pattern setting - Edition of a list	2.34
Fig. 2-15	Pattern setting – Edition of a list	2.36
Fig. 2-16	Menu FREQUENCY (preset setting)	2.39
Fig. 2-17	Example of a circuit with frequency offset	2.40
Fig. 2-18	Menu LEVEL (preset setting)	2.41
Fig. 2-19	Example of a circuit with level offset	2.42
Fig. 2-20	Menu LEVEL ALC (preset setting)	2.43
Fig. 2-21	Menu LEVEL UCOR – OPERATION page	2.44
Fig. 2-22	Menu LEVEL UCOR – EDIT page	2.44
Fig. 2-23	Menu LEVEL EMF (preset setting)	2.45
Fig. 2-24	Menu MODULATION AM (preset setting),	2.50
Fig. 2-25	Menu MODULATION FM (preset setting),	2.51
Fig. 2-26	Dependency of the FM maximal deviation on the RF frequency set	2.52
Fig. 2-27	Menu MODULATION PM (preset setting)	2.53
Fig. 2-28	Dependency of the PM maximal deviation on the RF frequency set	2.54
Fig. 2-29	Signal example 1: single pulse, TRIGGER MODE = AUTO	2.55
Fig. 2-30	Signal example 2: double pulse, TRIGGER MODE = EXT, SLOPE = POS	2.55
Fig. 2-31	Menu MODULATION PULSE (preset setting)	2.56
Fig. 2-32	Menu MODULATION STEREO (preset setting)	2.57
Fig. 2-33	Menu MODULATION VOR (preset setting)	2.59
Fig. 2-34	Menu MODULATION ILS-GS (preset setting)	2.61
Fig. 2-35	Menu MODULATION ILS-LOC (preset setting)	2.64
Fig. 2-36	Menu MODULATION MKR-BCN (preset setting)	2.67
Fig. 2-37	Menu LF OUTPUT (preset setting)	2.68
Fig. 2-38	Signal example sweep: MODE = AUTO, BLANK TIME = NORMAL	2.72
Fig. 2-39	Signal example sweep: MODE = SINGLE, BLANK TIME = LONG	2.72
Fig. 2-40	Menu SWEEP - FREQ	2.73
Fig. 2-41	Menu SWEEP - LEVEL	2.74
Fig. 2-42	Menu SWEEP - LF GEN	2.75
Fig. 2-43	Menu MEM SEQ — OPERATION page (preset setting)	2.78
Fig. 2-44	Menu MEM SEQ — EDIT page	2.79
Fig. 2-45	Menu UTILITIES SYSTEM - GPIB	2.80
Fig. 2-46	Menu UTILITIES SYSTEM - RS232	2.81
Fig. 2-47	Menu UTILITIES SYSTEM-SECURITY	2.82

Fig. 2-48	Menu UTILITIES REF-OSC (preset setting) .....	2.82
Fig. 2-49	Menu UTILITIES PHASE (preset setting) .....	2.83
Fig. 2-50	Menu UTILITIES PROTECT (preset setting) .....	2.84
Fig. 2-51	Menu UTILITIES CALIB-VCO SYN .....	2.85
Fig. 2-52	Menu UTILITIES CALIB-LEV PRESET .....	2.86
Fig. 2-53	Menu UTILITIES CALIB-FM .....	2.87
Fig. 2-54	Menu UTILITIES CALIB-PULSE GEN .....	2.88
Fig. 2-55	Menu UTILITIES DIAG-CONFIG .....	2.89
Fig. 2-56	Menu UTILITIES DIAG-TPOINT .....	2.90
Fig. 2-57	Menu UTILITIES DIAG-PARAM .....	2.91
Fig. 2-58	Menu UTILITIES MOD KEY (preset setting) .....	2.92
Fig. 2-59	Menu UTILITIES AUX I/O .....	2.93
Fig. 2-60	Menu UTILITIES BEEPER .....	2.94
Fig. 2-61	STATUS page .....	2.95
Fig. 2-62	ERROR page .....	2.96
Fig. 3-1	Tree structure of the SCPI command systems .....	3.5
Fig. 3-2	Instrument model if remote control is carried out by the IEC bus .....	3.77
Fig. 3-3	The status register model .....	3.80
Fig. 3-4	Overview of the status registers .....	3.82
Fig. 4-1	Menu UTILITIES - TEST .....	4.2




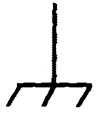






## Safety Instructions

This unit has been designed and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards.

To maintain this condition and to ensure safe operation, the user must observe all instructions and warnings given in this operating manual.

### Safety-related symbols used on equipment and documentation from R&S:

							
Observe operating instructions	Weight indication for units >18 kg	PE terminal	Ground terminal	Danger! Shock hazard	Warning! Hot surfaces	Ground	Attention! Electrostatic sensitive devices require special care

1. The unit may be used only in the operating conditions and positions specified by the manufacturer. Unless otherwise agreed, the following applies to R&S products:  
Pollution severity 2, overvoltage category 2, IP degree of protection 2X, altitude max. 2000 m.  
The unit may be operated only from supply networks fused with max. 16 A.
2. For measurements in circuits with voltages  $V_{rms} > 30 V$ , suitable measures should be taken to avoid any hazards.  
(using, for example, appropriate measuring equipment, fusing, current limiting, electrical separation, insulation).
3. If the unit is to be permanently wired, the PE terminal of the unit must first be connected to the PE conductor on site before any other connections are made (installation and cabling of the unit to be performed only by qualified technical personnel).
4. For permanently installed units without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fused such as to provide suitable protection for the users and equipment.
5. Prior to switching on the unit, it must be ensured that the nominal voltage set on the unit matches the nominal voltage of the AC supply network.  
If a different voltage is to be set, the power fuse of the unit may have to be changed accordingly.
6. Units of protection class I with disconnectible AC supply cable and appliance connector may be operated only from a power socket with earthing contact and with the PE conductor connected.
7. It is not permissible to interrupt the PE conductor intentionally, neither in the incoming cable nor on the unit itself as this may cause the unit to become electrically hazardous.  
Any extension lines or multiple socket outlets used must be checked for compliance with relevant safety standards at regular intervals.
8. If the unit has no power switch for disconnection from the AC supply, the plug of the connecting cable is regarded as the disconnecting device. In such cases it must be ensured that the power plug is easily reachable and accessible at all times (length of connecting cable approx. 2 m). Functional or electronic switches are not suitable for providing disconnection from the AC supply.  
If units without power switches are integrated in racks or systems, a disconnecting device must be provided at system level.
9. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.  
Prior to performing any work on the unit or opening the unit, the latter must be disconnected from the supply network.  
Any adjustments, replacements of parts, maintenance or repair may be carried out only by authorized R&S technical personnel.  
Only original parts may be used for replacing parts relevant to safety (eg power switches, power transformers, fuses). A safety test must be performed after each replacement of parts relevant to safety.  
(visual inspection, PE conductor test, insulation-resistance, leakage-current measurement, functional test).

continued overleaf

## Safety Instructions

10. Ensure that the connections with information technology equipment comply with IEC950/EN60950.
11. Lithium batteries must not be exposed to high temperatures or fire.  
Keep batteries away from children.  
If the battery is replaced improperly, there is danger of explosion. Only replace the battery by R&S type (see spare part list)  
Lithium batteries are suitable for environmentally-friendly disposal or specialized recycling. Dispose them into appropriate containers, only.  
Do not short-circuit the battery.
12. Equipment returned or sent in for repair must be packed in the original packing or in packing with electrostatic and mechanical protection.
13. Electrostatics via the connectors may damage the equipment. For the safe handling and operation of the equipment, appropriate measures against electrostatics should be implemented.
14. Any additional safety instructions given in this manual are also to be observed.

## Patent Information

This product contains technology licensed by Marconi Instruments LTD. under US patents 4609881 and 4870384 and under corresponding patents in Germany and elsewhere.



# Certified Quality System ISO 9001

**DQS REG. NO 1954-04**

## Qualitätszertifikat

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde & Schwarz-Produktes entschieden. Hiermit erhalten Sie ein nach modernsten Fertigungsverfahren hergestelltes Produkt. Es wurde nach den Regeln unseres Qualitätsmanagementsystems entwickelt, gefertigt und geprüft. Das Rohde & Schwarz-Qualitätsmanagementsystem ist nach ISO 9001 zertifiziert.

## Certificate of quality

Dear Customer,

You have decided to buy a Rohde & Schwarz product. You are thus assured of receiving a product that is manufactured using the most modern methods available. This product was developed, manufactured and tested in compliance with our quality management system standards.

The Rohde & Schwarz quality management system is certified according to ISO 9001.

## Certificat de qualité

Cher client,

Vous avez choisi d'acheter un produit Rohde & Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests respectent nos normes de gestion qualité.

Le système de gestion qualité de Rohde & Schwarz a été homologué conformément à la norme ISO 9001.



**ROHDE & SCHWARZ**



---

# Support Center

**Telefon / Telephone:** (0180) 512 42 42

**Fax:** (++)89) 41 29 - 137 77

**e-mail:** [CustomerSupport@rsd.rohde-schwarz.com](mailto:CustomerSupport@rsd.rohde-schwarz.com)

---

Für technische Fragen zu diesem Rohde & Schwarz-Gerät steht Ihnen ab sofort unsere Hotline der Rohde & Schwarz Vertriebs-GmbH, Support Center, zur Verfügung.

Unser Team bespricht mit Ihnen Ihre Fragen und sucht Lösungen für Ihre Probleme.

Die Hotline ist Montag bis Freitag von 8.00 bis 17.00 Uhr besetzt.

Bei Anfragen außerhalb der Geschäftszeiten hinterlassen Sie bitte eine Nachricht oder senden Sie eine Notiz per Fax oder e-mail. Wir setzen uns dann baldmöglichst mit Ihnen in Verbindung.

Should you have any technical questions concerning this Rohde & Schwarz product, please contact the hotline of Rohde & Schwarz Vertriebs-GmbH, Support Center.

Our hotline team will answer your questions and find solutions to your problems.

You can reach the hotline Monday through Friday from 8:00 until 17:00.

If you need assistance outside office hours, please leave a message or send us a fax or e-mail. We will contact you as soon as possible.



**ROHDE & SCHWARZ**





**ROHDE & SCHWARZ**  
EC Certificate of Conformity



Certificate No.: 960011

This is to certify that:

Equipment type	Order No.	Designation
SMTxx	1039.2000.xx	Signal Generator

complies with the provisions of the Directive of the Council of the European Union on the approximation of the laws of the Member States

- relating to electrical equipment for use within defined voltage limits  
(73/23/EEC revised by 93/68/EEC)
- relating to electromagnetic compatibility  
(89/336/EEC revised by 91/263/EEC, 92/31/EEC, 93/68/EEC)

Conformity is proven by compliance with the following standards:

EN61010-1 : 1991  
EN50081-1 : 1992  
EN50082-1 : 1992

Affixing the EC conformity mark as from 1996

**ROHDE & SCHWARZ GmbH & Co. KG**  
Mühldorfstr. 15, D-81671 München

Munich, 08.02.96

Central Quality Management FS-QZ / Becker



# Adressen/Addresses

## FIRMENSITZ/HEADQUARTERS

Telefon/Phone  
Telefax  
E-mail

**ROHDE & SCHWARZ GmbH & Co. KG**  
Mühlendorfstraße 15 · 81671 München  
Postfach 801469 · 81614 München  
Internet: www.rohde-schwarz.com

+49 89 41 29-0  
+49 89 41 29-12164  
-

## WERKE/PLANTS

**ROHDE & SCHWARZ Messgerätebau GmbH**  
Riedbachstraße 58 · 87700 Memmingen  
Postfach 16 52 · 87686 Memmingen

+49 83 31 10 8-0  
+49 83 31 10 81 124  
-

**ROHDE & SCHWARZ GmbH & Co. KG  
Werk Teisnach**  
Kaikenrieder Straße 27 · 94244 Teisnach  
Postfach 11 49 · 94240 Teisnach

+49 99 23 8 57-0  
+49 99 23 8 571-1 74  
-

**ROHDE & SCHWARZ GmbH & Co. KG · Werk Köln**  
Graf-Zeppelin-Straße 18 · 51147 Köln  
Postfach 98 02 60 · 51130 Köln

+49 22 03 49-0  
+49 22 03 49-51 3 08  
-

## TOCHTERUNTERNEHMEN/SUBSIDIARIES

**ROHDE & SCHWARZ Vertriebs-GmbH**  
Mühlendorfstraße 15 · 81671 München  
Postfach 801469 · 81614 München

+49 89 4129-120 07  
+49 89 4129-135 67  
customersupport@rohde-schwarz.com

**ROHDE & SCHWARZ International GmbH**  
Mühlendorfstraße 15 · 81671 München  
Postfach 80 14 60 · 81614 München

+49 89 4129-120 05  
+49 89 4129-135 97  
-

**ROHDE & SCHWARZ Engineering and Sales GmbH**  
Mühlendorfstraße 15 · 81671 München  
Postfach 80 14 29 · 81614 München

+49 89 4129-137 11  
+49 89 4129-137 23  
-

**R&S BICK Mobilfunk GmbH**  
Im Landerfeld 7 · 31848 Bad Münder  
Postfach 20 62 · 31844 Bad Münder

+49 50 42 9 98-0  
+49 50 42 9 98-105  
rsbick@rsbick.rohde-schwarz.com

**ROHDE & SCHWARZ FTK GmbH**  
Wendenschloßstraße 168, Haus 28  
12557 Berlin

+49 30 6 58 91-122  
+49 30 65 550-221  
-

**SIT Gesellschaft für Systeme  
der Informationstechnik mbH**  
Wendenschloßstraße 168, Haus 28  
12557 Berlin

+49 30 6 58 84-2 22  
+49 30 6 58 84-1 83  
sit.info@sit.rohde-schwarz.com

## Zweigniederlassungen der Rohde & Schwarz Vertriebs-GmbH/Branch offices of Rohde & Schwarz Vertriebs-GmbH

**Zweigniederlassung Berlin**  
Ernst-Reuter-Platz 10 · 10587 Berlin  
Postfach 100620 · 10566 Berlin

(+49 30) 34 79 48-0  
(+49 30) 34 79 48-48  
customersupport@rohde-schwarz.com

**Zweigniederlassung Büro Bonn**  
Josef-Wirmer-Straße 1-3 · 53123 Bonn  
Postfach 140264 · 53057 Bonn

(+49 2 28) 918 90-0  
(+49 2 28) 25 50 87  
customersupport@rohde-schwarz.com

**Zweigniederlassung Hamburg**  
Steilshooper Allee 47 · 22309 Hamburg  
Postfach 602240 · 22232 Hamburg

(+49 40) 63 29 00-0  
(+49 40) 630 78 70  
customersupport@rohde-schwarz.com

**Zweigniederlassung Köln**  
Graf-Zeppelin-Straße 18 · 51147 Köln  
Postfach 900149 · 51111 Köln

(+49 22 03) 807-0  
(+49 22 03) 807-50  
customersupport@rohde-schwarz.com

**Zweigniederlassung Mitte**  
Siemensstraße 20  
63263 Neu-Isenburg

(+49 61 02) 20 07-0  
(+49 61 02) 80 00 40  
customersupport@rohde-schwarz.com

**Zweigniederlassung München**  
Mühlendorfstraße 15 · 81671 München  
Postfach 801449 · 81614 München

(+49 89) 41 86 95-0  
(+49 89) 40 47 64  
customersupport@rohde-schwarz.com

**Zweigniederlassung Nürnberg**  
Donastraße 36  
90451 Nürnberg

(+49 9 11) 64203-0  
(+49 9 11) 64203-33  
customersupport@rohde-schwarz.com

**Zweigniederlassung Telekommunikation**  
Siemensstraße 20  
63263 Neu-Isenburg

(+49 61 02) 20 07-0  
(+49 61 02) 20 07-12  
customersupport@rohde-schwarz.com

## ADRESSEN WELTWEIT/ADDRESSES WORLDWIDE

**Algeria** ROHDE & SCHWARZ Bureau d'Alger  
5 B, Place de Laperrine  
16035 Hydra-Alger

(2) 59 24 53  
(2) 69 46 08  
-

**Argentina** Precisión Electrónica SRL  
Av. Julio A. Roca 710 - Piso 6  
1067 Buenos Aires

(14) 331 16 85  
(14) 334 51 11  
preelctr@satlink.com

**Australia** ROHDE & SCHWARZ  
(AUSTRALIA) Pty. Ltd.  
Unit 6, 2-8 South Street  
Rydalmere, N.S.W. 2116

Sales (2) 8845 4100  
(2) 9738 3988  
Service (2) 8845 4188  
(2) 9638 0832  
sales@rsaus.rohde-schwarz.com  
service@rsaus.rohde-schwarz.com

**Austria** ROHDE & SCHWARZ-ÖSTERREICH  
Ges. m. b. H.  
Sonnleithnergasse 20  
1100 Wien

(1) 6 02 61 41  
(1) 6 02 61 41-14  
office@rsoe.rohde-schwarz.com

**Azerbaijan** ROHDE & SCHWARZ Azerbaijan  
Liaison Office Baku  
Azerbaijan Avenue 35  
370139 Baku

12 93 31 38  
12 93 03 14  
-

**Baltic  
Countries** siehe/see Denmark

**Bangladesh** Business International Ltd.  
Corporation Office  
House No: 95/A, Block 'F'  
Road No: 4, Banani  
Dhaka - 1213

(2) 881 06 53  
(2) 882 82 91  
-

**Belgium** ROHDE & SCHWARZ BELGIUM N.V.  
Excelsiorlaan 31 Bus 1  
1930 Zaventem

(2) 7 21 50 02  
(2) 7 25 09 36  
info@rsb.rohde-schwarz.com

**Bolivia** siehe auch/see also Argentina

RIBCO LTDA.  
Av. Mariscal Santa Cruz 1392  
Ed. Cámara Nacional  
de Comercio  
Piso 10, Of. 1010-1011  
La Paz

(2) 32 84 03  
(2) 39 30 47  
gibatta@caoba.entelnet.bo

**Brazil** ROHDE & SCHWARZ DO BRASIL LTDA.  
Av. Alfredo Egidio de  
Souza Aranha, 177  
1º andar - Santo Amaro  
04726-170 São Paulo- SP

(11) 56 41 12 00  
(11) 56 41 78 10

# Adressen/Addresses

<b>Brunei</b>	GKL Equipment PTE. Ltd. #11-01 BP Tower 396, Alexandra Road Singapore 119954 Republic of Singapore	276 06 26 276 06 29 gkleqpt@signet.com.sg	<b>Finland</b>	Orbis Oy P.O. B. 15 00421 Helsinki	(9) 47 88 30 (9) 53 16 04 info@orbis.fi
<b>Bulgaria</b>	ROHDE & SCHWARZ Representation Office Bulgaria 39, Fridtjof Nansen Blvd. 1000 Sofia	(2) 963 43 34 (2) 963 21 97 rohdebg@rsoe.com	<b>France</b>	ROHDE & SCHWARZ FRANCE Immeuble "Le Newton" 9-11, rue Jeanne Braconnier 92366 Meudon-la-Forêt Cédex	(1) 41 36 10 00 (1) 41 36 11 10 -
<b>Canada</b>	Kommunikationstechnik/Communications Equipment: ROHDE & SCHWARZ CANADA Inc. 555 March Rd. Kanata, Ontario K2K 2M5	(613) 592 80 00 (613) 592 80 09 -		Niederlassung/Subsidiary Rennes: ROHDE & SCHWARZ FRANCE Sigma 1 Rue du Bignon 35135 Chantepie	(2) 99 51 97 00 (2) 99 41 91 31 -
	Messtechnik/T & M Equipment: TEKTRONIX CANADA, Inc. 3280 Langstaff Road, Unit 1 Concord, Ontario L4K 5B6	(416) 747 50 00 (905) 760 72 41 -		Niederlassung/Subsidiary Toulouse: ROHDE & SCHWARZ FRANCE Technoparc 3 B.P.501 31674 Labège Cédex Büros/Offices: Aix-en-Provence	(5) 61 39 10 69 (5) 61 39 99 10 -
<b>Chile</b>	DYMEQ Ltda. Avenida Larrain 6666 Santiago	(2) 277 50 50 (2) 227 87 75 dymeq@entelchile.net		Lyon  Nancy	(4) 94 07 39 94 (4) 94 07 55 11 (4) 78 29 88 10 (4) 78 29 94 71 (3) 83 54 51 29 (3) 83 55 39 51
<b>China</b>	ROHDE & SCHWARZ Representative Office Beijing Parkview Center, Room 602 No. 2 Jiangtai Road, Chao Yang District Beijing 100016, P. R. China	(10) 64 31 28 28 (10) 64 37 98 88 -	<b>Ghana</b>	KOP Engineering Ltd. P.O. Box 11012 3rd Floor Akai House, Osu Accra	(21) 77 99 13 (21) 22 47 69
<b>Colombia</b>	Ferrostaal de Colombia Av. Eldorado Nro. 97-03 Interior 2 Santafé de Bogotá, D.C.	(1) 415 77 00 (1) 413 18 06 mc_fsc@multiphone.net.co	<b>Greece</b>	MERCURY SA. 6, Loukianou Str. 10675 Athens	(1) 722 92 13 (1) 721 51 98 mercury@hol.gr
<b>Costa Rica</b>	siehe/see Mexico (EPSA)		<b>Guatemala</b>	siehe/see Mexico (EPSA)	
<b>Croatia</b>	siehe/see Austria		<b>Honduras</b>	siehe/see Mexico (EPSA)	
<b>Republic of Cyprus</b>	HINIS TELECAST LTD. Agiou Thoma 18 Kiti Larnaca 7550	(4) 42 51 78 (4) 42 46 21	<b>Hong Kong</b>	Schmidt & Co. (HK) Ltd. 9/F North Somerset House Taikoo Place 979 King's Road Quarry Bay, Hong Kong	25 07 03 33 28 27 56 56 frankwong@shk.schmidtgroup.com
<b>Czech Republic</b>	ROHDE & SCHWARZ – Praha, s.r.o. Pod Kastany 3 160 00 Praha 6	(2) 24 32 20 14 (2) 24 31 70 43 rohdecz@rsoe.com	<b>Hungary</b>	ROHDE & SCHWARZ Budapesti Iroda Etele ut. 68 1115 Budapest	(1) 203 02 82 (1) 203 02 82 rohdehu@rsoe.com
<b>Denmark</b>	ROHDE & SCHWARZ DANMARK A/S Ejby Industrivej 40 2600 Glostrup	43 43 66 99 43 43 77 44 RSDK@post1.tele.dk	<b>Iceland</b>	siehe/see Denmark	
<b>Ecuador</b>	REPRESENTACIONES MANFRED WEINZIERL Guanguiltagua 72 (39-93) Urbanización Jardines del Batán Quito	(2) 25 22 51 (2) 25 22 51 mweinzierl@accessinter.net	<b>India</b>	ROHDE & SCHWARZ India Pvt. Ltd. 244, Okhla Industrial Estate Phase - III New Delhi 110 020	(11) 683 74 84 rsindiad@vsnl.com
<b>Egypt</b>	U.A.S. Universal Advanced Systems 31 Manshiet El Bakry St., Heliopolis 11341 Cairo	(202) 455 67 44 (202) 256 17 40 uas@intouch.com	<b>Indonesia</b>	P.T. REKANUSA SOLUSI Menara Rajawali, 24th floor Jl Mega Kuningan Lot # 5.1 Kawasan Mega Kuningan Jakarta 12950	(21) 576 16 02 (21) 576 16 04 -
<b>El Salvador</b>	siehe/see Mexico (EPSA)		<b>Iran</b>	ROHDE & SCHWARZ IRAN Liaison Office - Reg. N° RFC 1947 Dr. Beheschty Ave., Pakistan Ave., 12th Street N° 1 Tehran 15317	(21) 8 73 02 82 (21) 8 73 02 83 -
<b>Estonia</b>	ROHDE & SCHWARZ DANMARK A/S Estonian Branch Office Narva mnt. 13 10151 Tallinn	(6) 14 31 20 (6) 14 31 21			



# Adressen/Addresses

<b>Ireland</b>	siehe/see Great Britain		
<b>Italy</b>	ROHDE & SCHWARZ ITALIA S.p.a. Via Tiburtina 1182 00156 Roma	(6) 41 59 81 (6) 41 59 82 70 -	
	Centro Direzionale Lombardo Via Roma 108 20060 Cassina de' Pecchi (MI)	(2) 95 70 41 (2) 95 30 27 72	
<b>Japan</b>	ADVANTEST Corporation RS Sales Department Shinjuku-NS Building, 4-1 Nishi-Shinjuku Tokyo 163-08, Japan	(3) 33 42 75 53 (3) 53 22 72 70 yoshimu@inst.advantest.co.jp	
<b>Jordan</b>	Middle East Development c/o Jordan Crown Engineering & Trading Co. P.O. Box 830414 Amman, 11183	(6) 465 96 71 (6) 465 96 72	
<b>Kazakhstan</b>	ROHDE & SCHWARZ Kazakhstan Liaison Office Almaty Pl. Respubliki 15 480013 Almaty	32 72 63 55 55 32 72 63 46 33 -	
<b>Kenya</b>	Excel Enterprises Limited Dunga Road P.O. Box 42 788 Nairobi	(2) 55 80 88 (2) 54 46 79	
<b>Korea</b>	Hana Technica Corp. Seoul Kangnam, P.O. Box 1458 Young Dong Bldg. 4F 63-16 Nonhyun-Dong, Kang Nam-Ku Seoul	(2) 514 45 46 (2) 514 45 49 hanateco@unitel.co.kr	
<b>Kuwait</b>	Group Five Trading & Contracting Co. P.O. Box 26645 Safat 13127 State of Kuwait	244 91 72 244 95 28	
<b>Latvia</b>	Rohde & Schwarz Danmark A/S Latvian Branch Office Merkela iela 21-301 1050 Riga	(7) 50 23 55 (7) 50 23 60 rsdk@rsdk.rohde-schwarz.com	
<b>Lebanon</b>	Rohde & Schwarz International Liaison Office Riyadh PO Box 361 c/o Haji Abdullah Alireza & Co. Riyadh 11411 - KSA	(1) 465 64 28 Ext. 303 (1) 465 64 28 Ext. 229	
<b>Liechtenstein</b>	siehe/see Switzerland		
<b>Lithuania</b>	Rohde & Schwarz Danmark A/S Lithuanian Office Lukiskiu 5-228 2600 Vilnius	222 46 62 222 46 62	
<b>Luxembourg</b>	siehe/see Belgium		
<b>Malaysia</b>	DAGANG TEKNIK SDN. BHD. No. 9, Jalan SS 4D/2 Taman People's Park 47301 Petaling Jaya Selangor Darul Ehsan	(3) 7035503/7035568 (3) 7 03 34 39 danik@tm.net.my	
<b>Malta</b>	ITEC - International Technology Ltd. B'Kara Road San Gwann	37 43 00 37 43 53 itec@keyworld.net	
<b>Mexico</b>	Vertrieb Kommunikationstechnik/ Sales of Communications Equipment: ELECTROINGENIERIA de Precisión S.A. (EPSA) Uxmal 520 Colonia Vertiz Narvarte 03600 Mexico DF		(5) 559 76 77 (5) 575 33 81 epsa@compuserve.com
	Vertrieb Messtechnik/Sales of T&M Equipment: Tektronix S.A. de C.V. Periférico Sur 5000, 8° Piso Col. Insurgentes Cuicuilco Del. Coyoacán 04530 Mexico, D.F.		(5) 666 63 33 (5) 666 63 36
<b>Nepal</b>	Abishek Trade Links (P) Ltd. P.O.B. 9700 Kathmandu	(1) 25 69 30 (1) 24 25 73 Durbar@hotel.mos.com.np	
<b>Netherlands</b>	ROHDE & SCHWARZ NEDERLAND B.V. Perkinsbaan 1 3439 ND Nieuwegein	(30) 600 17 00 (30) 600 17 99 Rob.DenHartog@rsn.rohde-schwarz.com	
<b>New Zealand</b>	Nichecom Level 1 Tawa Plaza 210 Main Rd / P.O.B. 56-045 Tawa, Wellington	(4) 232 32 33 (4) 232 32 30 ISDN (4) 237 30 10 robin.hodgson@nichecom.co.nz	
<b>Nicaragua</b>	siehe/see Mexico (EPSA)		
<b>Nigeria</b>	Ferrostaal (Nigeria) Ltd. 27/29 Adeyemo Alkaija Street P.O. Box 72021 Victoria Island Lagos	(1) 262 00 60 (1) 262 00 64	
<b>Norway</b>	ROHDE & SCHWARZ NORGE Østensjøveien 36, P.O.B. 103 BRYN 0611 Oslo	23 17 22 50 23 17 22 69 -	
<b>Oman</b>	T&M Equipment and Broadcasting: Mustafa & Jawad Science & Industry Co. Ltd. P.O. Box 3340 Post Code 112 Ruwi Sultanate of Oman	60 20 09 60 70 66	
<b>Pakistan</b>	TelcoNet Communications & Engineering 213/D, Ordnance Road Rawalpindi-Pakistan-46000	(51) 26 30 72 (51) 26 32 11 tnc@meganet.com.pk	
<b>Panama</b>	siehe auch/see also Mexico (EPSA)		
	ELECTRONICO BALBOA S.A. Av. El Paical, Edif. El Dorado Urb. Los Angeles Panama City	614 93 64 236 18 20 pdubois@ebsa.com	
<b>Papua- New Guinea</b>	siehe/see Australia		
<b>Peru</b>	siehe auch/see also Argentina		
	BMP INGENIEROS S.A. Av. José Gálvez Barrenechea 645 Urb. Corpac - San Borja Lima 41	(1) 225 40 30 (1) 475 15 13 wmgelgarejo@bmp.com.pe	

# Adressen/Addresses

<b>Philippines</b>	MARCOM Industrial Equipment, Inc. MCC P.O.Box 2307 6-L Mezzanine Suite, Vernida I Condominium 120 Amorsolo St. Legaspi Village Makati City/Philippines 3117	(2) 8 13 29 31 (2) 8 17 05 07	12830 Skarpnäck info@rss.rohde-schwarz.com
<b>Poland</b>	ROHDE & SCHWARZ Oddzial w Polsce ul. Stawki 2, Pietro 28 00-193 Warszawa	(22) 860 64 90 (22) 860 64 99 rohdepl@rsoe.com	<b>Switzerland</b> Roschi Rohde & Schwarz AG Papiermühlestrasse 145, Postfach 3063 Ittigen -
<b>Portugal</b>	TELERUS Sistemas de Telecomunicações, S.A. Rua General Ferreira Martins, Lote 6,2.ºB 1495 Algés	(21) 412 35 90 (21) 412 36 00 telerus@mail.telepac.pt	<b>Syria</b> Electro Scientific Office Baghdad Street Dawara Clinical Lab. Building P.O.B. 8162 Damascus
<b>Romania</b>	ROHDE & SCHWARZ Representation Office Bucharest Uranus 98 Bloc U8, scara 2, etaj 5, ap. 36 76102 Bucuresti	(1) 410 68 46 (1) 411 20 13 rohdero@rsoe.com	<b>Tanzania</b> Security Systems (T) Ltd. P.O. Box 7512 Dar Es Salaam
<b>Russian Federation</b>	ROHDE & SCHWARZ Representative Office Moscow Kazachy per. 7 109017 Moscow	(095) 234 49 62 (095) 234 49 63 rohderus@rsoe.com	<b>Taiwan</b> Lancer Communication Co., LTD. 16F, No. 30, Pei-Ping East Road Taipei rosa.ho@lancercomm.com.tw
<b>Saudi Arabia</b>	Rohde & Schwarz Liaison Office c/o Haji Abdullah Alireza Co. Ltd. P.O.B. 361 Riyadh 11411	(1) 465 64 28 (1) 465 07 82 -	<b>Thailand</b> Vertrieb Kommunikationstechnik/Sales Communications Equipment: TPP Operation Co., Ltd. 41/5 MoobanTarinee Boromrajchonnee Rd. Talingchan, Bangkok 10170 -
<b>Singapore</b>	Vertrieb/Sales: INFOTEL TECHNOLOGIES LTD. 19 Tai Seng Drive Kinergy Building # 06-00 Singapore 535222  Service: Rohde & Schwarz Support Centre Asia Pte. Ltd. 1 Kaki Bukit View #04-05/07 Techview Singapore 415941	287 68 22 284 95 55 general@infotel.com.sg  846 37 10 846 00 29 rssca@mbox4.singnet.com.sg	<b>Turkey</b> ROHDE & SCHWARZ Liaison Office Istanbul Bagdad Cad. 191/3, Ard. 81030 Selamicesme-Istanbul
<b>Slovak Republic</b>	Specialne systémy a software, a.s. Svrčic ul 84104 Bratislava	(7) 65 42 25 29 (7) 65 42 07 68 3s@internet.sk	<b>Ukraine</b> ROHDE & SCHWARZ Representative Office Kiev ul. Patrisa Loumoumba, 4 252042 Kiev
<b>Slovenia</b>	ROHDE & SCHWARZ Representation Ljubljana Koprska 92 1000 Ljubljana	(61) 123 46 51 (61) 123 46 11 rohdesi@rsoe.com	<b>United Arab Emirates</b> Service-Center für den Mittleren Osten/ Service Center for the Middle East: ROHDE & SCHWARZ Emirates L.L.C. P.O.B. 31156 Abu Dhabi -
<b>South Africa</b>	Protea Data Systems (Pty) Ltd Communications & Measurement Division Private Bag X19 Bramley 2018	(11) 786 36 47 (11) 786 58 91 Colin.Forbes@protea.co.za	ROHDE & SCHWARZ Liaison Office Middle East P.O. Box 311 56 Abu Dhabi -
<b>Spain</b>	ROHDE & SCHWARZ ESPAÑA Salcedo, 11 28034 Madrid	(91) 334 10 70 (91) 729 05 06 rema@rsd.rohde-schwarz.com	Vertrieb/Sales: ROHDE & SCHWARZ Liaison Office Dubai P.O.B. 53726 Dubai -
<b>Sri Lanka</b>	LANKA AVIONICS 658/1/1, Negombo Road Mattumagala Ragama	(1) 95 66 78 (1) 95 83 11 -	R&S BICK Mobile Communication P.O.B. 17466 JAFZ, LOB 04-028 Dubai -
<b>Sudan</b>	SolarMan Co. Ltd. P.O. Box 11 545 Karthoum	(11) 47 31 08 (11) 78 17 25	<b>United Kingdom</b> ROHDE & SCHWARZ UK Ltd. Ancells Business Park Fleet, Hampshire GU 13 8UZ -
<b>Sweden</b>	ROHDE & SCHWARZ SVERIGE AB Flygfältsgatan 15	(8) 605 19 00 (8) 605 19 80	<b>Uruguay</b> siehe auch/see also Argentina

# Adressen/Addresses

---

AEROMARINE S.A. (2) 400 39 62  
Cerro Largo 1497 (2) 401 85 97  
11200 Montevideo aeromar@adinet.com.uy

**USA** Kommunikationstechnik/Communications Equipment:  
ROHDE & SCHWARZ, Inc. (301) 459 88 00  
4425 Nicole Drive (301) 459 28 10  
Lanham, MD 20706 -

Messtechnik/T & M Equipment:  
TEKTRONIX Inc. (800) 835 9433 Ext. 6630  
P.O.B. 500, M/S 50-216 (800) 835 7732  
Beaverton, OR 97076 -

**Venezuela** EQUILAB TELECOM C.A. (2) 34 46 26  
Centro Seguros La Paz (2) 239 52 05  
Piso 6, Local E-61 r\_ramire@equilabtelecom.com.ve  
Ava. Francisco de Miranda  
Boleita, Caracas 1070

Military customers only:  
REPRESENTACIONES BOPIC S.A. (2) 985 21 29  
Av. Diego Cisneros (2) 985 39 94  
Centro Empresarial Los Ruices incotr@cantv.net  
Of. 119, 1er piso  
Los Ruices  
Caracas

**Vietnam** Schmidt Vietnam Co., Ltd. (4) 834 61 86  
8/F, Schmidt Tower, Hanoi (4) 834 61 88  
Intern. Technology Centre svnhn@schmidt group.com  
Cau Giay, Tu Liem, IPO Box 89  
Hanoi

**Yugoslavia** see/siehe Austria

**Nicht aufgeführte Länder/Countries not listed:**  
ROHDE & SCHWARZ INTERNATIONAL GmbH  
P.O.B. 80 14 69  
81614 München / Germany  
Please fax to +49 89 41 29 136 62



**Supplement B  
to Operating Manual  
SIGNAL GENERATOR  
SMT**

**Correction of Data Sheet, Number 0196**

**Spectral purity**

Harmonics

With pulse modulator on:

Level  $\leq$  5 dBm ..... < -30 dBc  
Level without overrange ..... < -26 dBc

**Model SMT03**

**Amplitude modulation:**

AM distortion factor at 1 kHz  
Applies to levels  $\leq$  7dBm



# 1 Preparation for Use

## 1.1 Putting into Operation

Before putting the SMT into operation, please make sure that


- the covers of the casing are put on and screwed,
- the ventilation openings are free,
- no signal voltage levels exceeding the permissible limits are applied at the inputs,
- the outputs of the instrument are not overloaded or connected incorrectly.

If these points are not observed, the instrument might be damaged.

### 1.1.1 Supply Voltage

The SMT can be operated at a.c. systems from 90 to 132 V and 180 to 265 V at system frequencies from 47 to 440 Hz. The power supply socket is situated at the rear of the instrument. The instrument automatically sets itself to the voltage applied within the permissible voltage ranges. It is not necessary to set the instrument to a certain supply voltage.

### 1.1.2 Switching On/Off the Instrument

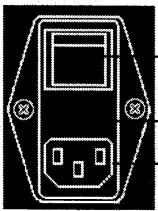

- Power switch
- Fuse holder
- Power supply socket

Power switch at the rear of the instrument

- Switch on/off:
- ▶ Press power switch at the top/bottom
- When the instrument is switched off, the marking "O" is visible at the top of the power switch.

The power switch can remain switched on permanently. Switching off is only necessary when the instrument is to be completely disconnected from the mains.



- Standby check LED

On/off switch at the front of the instrument

- Switch on:
- ▶ Press switch.
- The instrument is ready for operation.
- Switch off:
- ▶ Release switch.
- The instrument assumes the STANDBY mode.

### 1.1.3 Initial Status

Upon switching on, the instrument either automatically assumes the status set when it was switched off (parameter POWER-ON STATE PREVIOUS SETTING in LEVEL-LEVEL menu) or the RF output is disconnected (POWER-ON STATE RF OFF).

If the instrument need not be operated from the initial status any further, a defined default status should be established by pressing the [PRESET] key prior to making further settings.


#### STANDBY Mode

In the STANDBY mode the optional reference oscillator (option SM-B1) remains switched on, which increases frequency accuracy.

#### Frequency accuracy after switching on when the oven-controlled reference oscillator is fitted (option SM-B1)

When switching on from the STANDBY mode, the specified frequency accuracy is reached immediately. If the power switch was switched off, the reference oscillator needs some minutes of warm-up time to reach its nominal frequency. During this period of time, the output frequency does not yet reach its final value either. In the status line in the header field of the display the message "OVEN COLD" is displayed for this time.

### 1.1.4 Setting Contrast and Brightness of the Display



Contrast and brightness of the display can be set by means of the contrast and brightness controls situated below the display.

### 1.1.5 RAM With Battery Back-Up

The SMT has a static read-write memory (CMOS-RAM) with battery back-up, in which 50 different complete settings of the instrument can be stored (cf. Chapter 2, section "Storing and Calling of Instrument Settings"). In addition, all data and/or lists the user enters himself, such as for memory sequence and user correction of the level, are stored in the RAM. Further, all data of the calibrations running within the instrument in the SMT are stored in the RAM (cf. Chapter 2, section "Calibration").

A lithium battery with a service life of approx. 5 years serves to supply the RAM with power. When the battery is discharged, the data stored will be lost. Exchanging the battery is described in service manual.



## 1.1.6 Preset Setting

A defined setting status is achieved by pressing the [PRESET] key.

### Preset Status:

RF frequency	100 MHz
RF level	-30 dBm
Reference frequency	internal, adjustment off
Offsets	0
Modulations	switched off
Transient-free level setting	switched off, level attenuator mode: AUTO
Internal level control	level ALC: ON
User correction	level Ucor: OFF
LF output	switched off
Sweep	switched off
Memory sequence	switched off
Suppression of indications	system security: unaltered
Protection of calibration data	protection lock: unaltered
Settings stored	unaltered
Data, lists etc. stored	unaltered
IEC-bus address	unaltered
Beeper	unaltered
Power-on state	unaltered

All parameters and circuit states, even those of operating modes which are not activated, are preset by means of Preset.

The presettings going beyond the above list can be seen from the menu representations as of Section 2.4 which each indicate the Preset setting status.

## 1.2 Functional Test

On switching on the instrument and permanently during operation, the SMT carries out a selftest. The ROM contents as well as the battery of the non-volatile RAM are checked on switching on the instrument and the RAM contents with every calling the memory. The most important instrument functions are automatically monitored during operation.

If an error is detected, the message "ERROR" is displayed in the status line. For further identification of the error, press the [ERROR] key. Thereupon a description of the error/s is displayed (cf. Chapter 2, Section "Error Messages"). Return to the menu exited by pressing the [RETURN] key.

If required, the selftests can be induced purposefully. See Chapter 2, Section "Functional Test". Further, internal test points can be polled by the user and the results be read out and displayed. See Chapter 2, Section "Voltage Display of Test Points".

## 1.3 Fitting the Options

Due to its variety of options, the SMT offers the possibility of providing the instrument with the equipment exactly corresponding to the application. Newly fitted options are automatically recognized and the relevant parameters added in the menu.

After every change of the instrument configuration, the CMOS RAM has to be cleared as the storage data shift:

- ▶ Switch off the instrument
- ▶ Switch the instrument on again with the [PRESET] key pressed

The internal calibration routines VCO SYN, LEV PRESET, PULSE GEN and FM now have to be called up again to restore the cleared calibration values.

These routines are accessible via menu UTILITIES-CALIB (see also Chapter 2, section "calibration"). The calibration routines have to be carried out in the following order:

1. VCO SYN (synthesizer)
2. LEV PRESET
3. PULSE GEN (if installed)
4. FM (synthesizer)

### 1.3.1 Opening the Casing



**Caution:** *Prior to opening the SMT unplug the power connector.*


#### Remove paneling

- ▶ Remove four screws in the two tilt feet at the rear of the instrument.
- ▶ Remove the upper paneling towards the top and rear.
- ▶ Turn the instrument.
- ▶ Remove the lower paneling towards the top and rear.

#### Open ventilation ducts

When an option is fitted at a slot which has not been used up to now, the appropriate ventilation duct of the plexiglass plate at the left in the casing frame must be opened. The openings are pre-punched so that the respective part is easy to break out.

### 1.3.2 Overview of the Slots

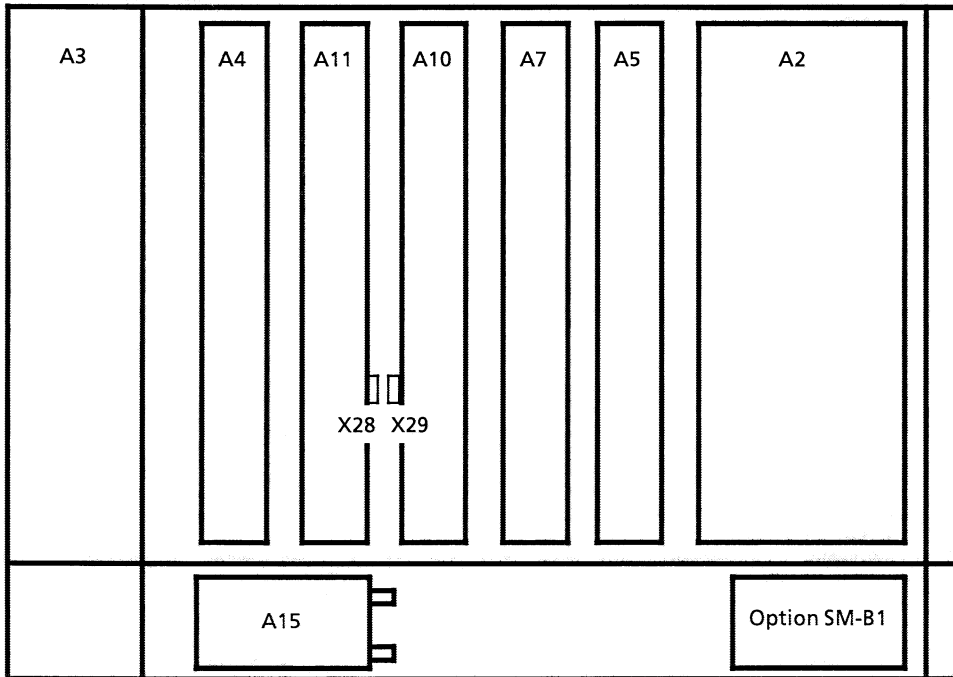

- |                   |                                |
|-------------------|--------------------------------|
| A2 = power supply | A7 = synthesizer               |
| A3 = front unit   | A10 = output unit, 1.5 GHz     |
| A4 = option       | A11 = output unit, 3 GHz/6 GHz |
| A5 = option       | A15 = attenuator               |

Fig. 1-1 SMT – View from the top

### 1.3.3 Option SM-B1 – Reference Oscillator OCXO

#### Fitting the option

- ▶ Fasten the option at the back end of the lateral opening by means of the screw threads provided there.  
If slots A5 and A6 are both occupied, one of these modules must be removed temporarily.
- ▶ Feed ribbon cable W710 through the rear square cut-out to the motherboard, insert into connector X22 and snap in the locking.
- ▶ Feed coaxial cable W710 from socket X711 of the option through the second cut-out along the rear transverse panel to connector X74 at the A7 module, synthesizer, via the motherboard and insert there. Fasten the cable at the transverse panel using the cable ties attached.

### Set tuning voltage and calibrate OCXO

The crystal oscillator was factory-tuned to nominal frequency and the appropriate tuning voltage indicated on the cover of the module. The calibration value now has to be calculated from this value and transferred to the memory of the signal generator.

### Calculate calibration value

The tuning voltage is generated by a 12b-bit-D/A converter which is scaled such that a tuning voltage of 12 volts is generated with calibration value (CALIBRATION DATA) 4000. The calibration value is thus calculated from the tuning voltage ( $V_{\text{tun}}$ ) as follows

$$\text{CALIBRATION DATA} = V_{\text{tun}} \times 4096 / 12$$

For checking purposes, the voltage at pin 16 of plug X22 on the motherboard can be remeasured and corrected if necessary. A check by means of frequency measurement may only be made after a warm-up of 2 hours and against a calibrated reference.

### Store calibration value

- ▶ Call menu UTILITIES-CALIB-REF OSC.
- ▶ Enter the calculated calibration voltage with CALIBRATION DATA by means of the rotary knob or keypad.
- ▶ Select STORE CALIBRATION DATA
- ▶ Terminate entry using the [SELECT] key  
The new calibration value is stored in the EPROM.

**Note:** *The flash EPROM does not permit the deletion of individual data. Thus new memory space is occupied for each calibration. If there is no memory space available any more, the EPROM must be cleared by an authorized service shop and be written into anew. Thus a calibration should only be made if necessary.*

## 1.3.4 Option SM-B2 – LF Generator

### Fitting as 1st generator

As 1st generator, the LF generator is fitted at one of the rear slots A5.

- ▶ Withdraw jumper X29 at the front top of the motherboard.
- ▶ Plug jumper X3 at position 2-3 (on the right) on the option (to the right of multipoint connector X50).

### Fitting as 2nd generator

If there already is a generator at one of the slots A5, the LF generator is mounted at slot A4.

- ▶ Withdraw jumper X28 on the motherboard.
- ▶ Plug jumper X3 at position 1-2 on the option.

## 1.3.5 Options SM-B3, SM-B8, and SM-B9 – Pulse Modulator 1.5, 3, and 6 GHz

When fitting this option, the RF characteristics of the instrument change to such an extent that the output level has to be calibrated. This requires calibrated test instruments, a control processor and service kit SM-Z2. For this reason, fitting should be carried out at an authorized R&S service shop. Fitting is described in the service manual (stock number 1039.3359.24).

### 1.3.6 Option SM-B4 – Pulse Generator

The pulse generator is fitted within module A4, pulse modulator.

- Fitting the option
- ▶ Open module A4.
  - ▶ Fasten the pulse generator board by means of 4 screws.
  - ▶ Plug in connectors W10 and W11.
  - ▶ Screw on cover again.
  - ▶ Establish the following RF connections at the pulse generator:

Cable	From	To	Signal
W43	A4-X43	Rear panel	VIDEO
W44	A4-X44	Rear panel	SYNC

- ▶ Cable 50-MHz reference, cf. Section 1.3.12

Calibrating pulse generator

- ▶ Call menu UTILITIES/ CALIB /PULSE GEN

- ▶ Select action CALIBRATE ▶ and activate using the [SELECT] key  
The start and end of the calibration are displayed. Calibration only takes a few seconds.

**Note:** *The calibration data are stored in the RAM, thus the calibration can be repeated as often as required.*

### 1.3.7 Option SM-B6 – Multifunction Generator

The multifunction generator is fitted at slot A5.

Remove jumper X29 at the motherboard.

For cabling the 50-MHz reference, cf. Section 1.3.9.

### 1.3.8 Option SMT-B19 – Rear Panel Connections for RF and LF

The SMT can be retrofitted to match rear panel connections for RF and LF for mounting into a 19" rack by means of option SMT-B19. The mounting instructions are attached to the option.

### 1.3.9 Cabling of the 50-MHz Reference (REF50)

Instrument with option multifunction generator

Cable	From	To
W172	A7-X72	A5-X53

Instrument with option pulse generator

Cable	From	To
W41	A7-X72	A4-X41

Instrument with options multifunction generator and pulse generator

Cable	From	To
W172	A7-X72	A5-X53
W41	A5-X51	A4-X41

## 1.4 Mounting into a 19" Rack

**Caution:** *Ensure free air inlet at the perforation of the side walls and air outlet at the rear of the instrument in rack mounting.*

The SMT can be mounted into a 19" rack by means of rack adapter ZZA-94 (stock no. 396.4905.00). The mounting instructions are attached to the adapter.